

# SECTION PCS

## POWER CONTROL SYSTEM

### CONTENTS

<b>IPDM E/R</b>		
<b>SYSTEM DESCRIPTION</b> .....	4	
<b>RELAY CONTROL SYSTEM</b> .....	4	
System Diagram .....	4	
System Description .....	5	
Component Parts Location .....	6	
<b>POWER CONTROL SYSTEM</b> .....	7	
System Diagram .....	7	
System Description .....	7	
<b>SIGNAL BUFFER SYSTEM</b> .....	8	
System Diagram .....	8	
System Description .....	8	
<b>POWER CONSUMPTION CONTROL SYSTEM</b> .....	9	
System Diagram .....	9	
System Description .....	9	
Component Parts Location .....	10	
<b>DIAGNOSIS SYSTEM (IPDM E/R)</b> .....	11	
Diagnosis Description .....	11	
CONSULT Function (IPDM E/R) .....	14	
<b>DTC/CIRCUIT DIAGNOSIS</b> .....	17	
<b>U1000 CAN COMM CIRCUIT</b> .....	17	
Description .....	17	
DTC Logic .....	17	
Diagnosis Procedure .....	17	
<b>B2098 IGNITION RELAY ON STUCK</b> .....	18	
Description .....	18	
DTC Logic .....	18	
Diagnosis Procedure .....	18	
<b>B2099 IGNITION RELAY OFF STUCK</b> .....	19	
Description .....	19	
DTC Logic .....	19	
Diagnosis Procedure .....	19	
<b>POWER SUPPLY AND GROUND CIRCUIT</b> ....	20	
Diagnosis Procedure .....	20	
<b>ECU DIAGNOSIS INFORMATION</b> .....	21	
<b>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</b> .....	21	
Reference Value .....	21	
Fail Safe .....	28	
DTC Index .....	29	
<b>WIRING DIAGRAM</b> .....	31	
<b>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</b> .....	31	
Wiring Diagram - Coupe .....	31	
Wiring Diagram - Sedan .....	37	
<b>PRECAUTION</b> .....	43	
<b>PRECAUTIONS</b> .....	43	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	43	
Precaution for Procedure without Cowl Top Cover...43		
Necessary for Steering Wheel Rotation After Battery Disconnect .....	43	
<b>REMOVAL AND INSTALLATION</b> .....	45	
<b>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</b> .....	45	
Removal and Installation .....	45	
<b>POWER DISTRIBUTION SYSTEM</b>		
<b>BASIC INSPECTION</b> .....	46	
<b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....	46	
Work Flow .....	46	
Pre-Inspection for Multi-System Diagnostic .....	48	

<b>SYSTEM DESCRIPTION .....</b>	<b>50</b>	<b>B2618 BCM .....</b>	<b>73</b>
<b>POWER DISTRIBUTION SYSTEM .....</b>	<b>50</b>	Description .....	73
System Description .....	50	DTC Logic .....	73
Component Parts Location .....	51	Diagnosis Procedure .....	73
Component Description .....	52	<b>B261A PUSH-BUTTON IGNITION SWITCH ....</b>	<b>74</b>
<b>DIAGNOSIS SYSTEM (BCM) .....</b>	<b>53</b>	Description .....	74
<b>COMMON ITEM .....</b>	<b>53</b>	DTC Logic .....	74
COMMON ITEM : Diagnosis Description .....	53	Diagnosis Procedure .....	74
COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) .....	53	<b>POWER SUPPLY AND GROUND CIRCUIT ....</b>	<b>77</b>
<b>INTELLIGENT KEY .....</b>	<b>54</b>	<b>BCM .....</b>	<b>77</b>
INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY) .....	54	BCM : Diagnosis Procedure .....	77
<b>DTC/CIRCUIT DIAGNOSIS .....</b>	<b>57</b>	BCM : Special Repair Requirement .....	77
<b>U1000 CAN COMM CIRCUIT .....</b>	<b>57</b>	<b>IPDM E/R (INTELLIGENT POWER DISTRIBU- TION MODULE ENGINE ROOM) .....</b>	<b>78</b>
Description .....	57	IPDM E/R (INTELLIGENT POWER DISTRIBU- TION MODULE ENGINE ROOM) : Diagnosis Pro- cedure .....	78
DTC Logic .....	57	<b>PUSH-BUTTON IGNITION SWITCH POSI- TION INDICATOR .....</b>	<b>79</b>
Diagnosis Procedure .....	57	Description .....	79
<b>U1010 CONTROL UNIT (CAN) .....</b>	<b>58</b>	Component Function Check .....	79
DTC Logic .....	58	Diagnosis Procedure .....	79
Diagnosis Procedure .....	58	Component Inspection .....	81
<b>B2553 IGNITION RELAY .....</b>	<b>59</b>	<b>ECU DIAGNOSIS INFORMATION .....</b>	<b>82</b>
Description .....	59	<b>BCM (BODY CONTROL MODULE) .....</b>	<b>82</b>
DTC Logic .....	59	Reference Value .....	82
Diagnosis Procedure .....	59	Terminal Layout .....	86
<b>B260A IGNITION RELAY .....</b>	<b>61</b>	Physical Values .....	86
Description .....	61	Fail Safe .....	104
DTC Logic .....	61	DTC Inspection Priority Chart .....	106
Diagnosis Procedure .....	61	DTC Index .....	108
<b>B2611 ACC RELAY .....</b>	<b>62</b>	<b>IPDM E/R (INTELLIGENT POWER DISTRI- BUTION MODULE ENGINE ROOM) .....</b>	<b>111</b>
Description .....	62	Reference Value .....	111
DTC Logic .....	62	Fail Safe .....	118
Diagnosis Procedure .....	62	DTC Index .....	119
<b>B2614 ACC RELAY CIRCUIT .....</b>	<b>64</b>	<b>WIRING DIAGRAM .....</b>	<b>121</b>
Description .....	64	<b>POWER DISTRIBUTION SYSTEM .....</b>	<b>121</b>
DTC Logic .....	64	Wiring Diagram - Coupe .....	121
Diagnosis Procedure .....	64	Wiring Diagram - Sedan .....	128
Component Inspection (Accessory Relay) .....	66	<b>SYMPTOM DIAGNOSIS .....</b>	<b>135</b>
<b>B2615 BLOWER RELAY CIRCUIT .....</b>	<b>67</b>	<b>POWER DISTRIBUTION SYSTEM SYMP- TOMS .....</b>	<b>135</b>
Description .....	67	Symptom Table .....	135
DTC Logic .....	67	<b>PRECAUTION .....</b>	<b>136</b>
Diagnosis Procedure .....	67	<b>PRECAUTIONS .....</b>	<b>136</b>
Component Inspection (Blower Relay) .....	69		
<b>B2616 IGNITION RELAY CIRCUIT .....</b>	<b>70</b>		
Description .....	70		
DTC Logic .....	70		
Diagnosis Procedure .....	70		
Component Inspection (Ignition Relay) .....	72		

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	136	Commercial Service Tools .....	138	A
Precautions Necessary for Steering Wheel Rotation after Battery Disconnect .....	136	<b>REMOVAL AND INSTALLATION .....</b>	<b>139</b>	
<b>PREPARATION .....</b>	<b>138</b>	<b>BCM (BODY CONTROL MODULE) .....</b>	<b>139</b>	B
<b>PREPARATION .....</b>	<b>138</b>	Removal and Installation .....	139	
		<b>PUSH BUTTON IGNITION SWITCH .....</b>	<b>140</b>	C
		Removal and Installation .....	140	
				D
				E
				F
				G
				H
				I
				J
				K
				L
				PCS
				N
				O
				P

# RELAY CONTROL SYSTEM

< SYSTEM DESCRIPTION >


[IPDM E/R]

## SYSTEM DESCRIPTION

### RELAY CONTROL SYSTEM

#### System Diagram

INFOID:000000006392778

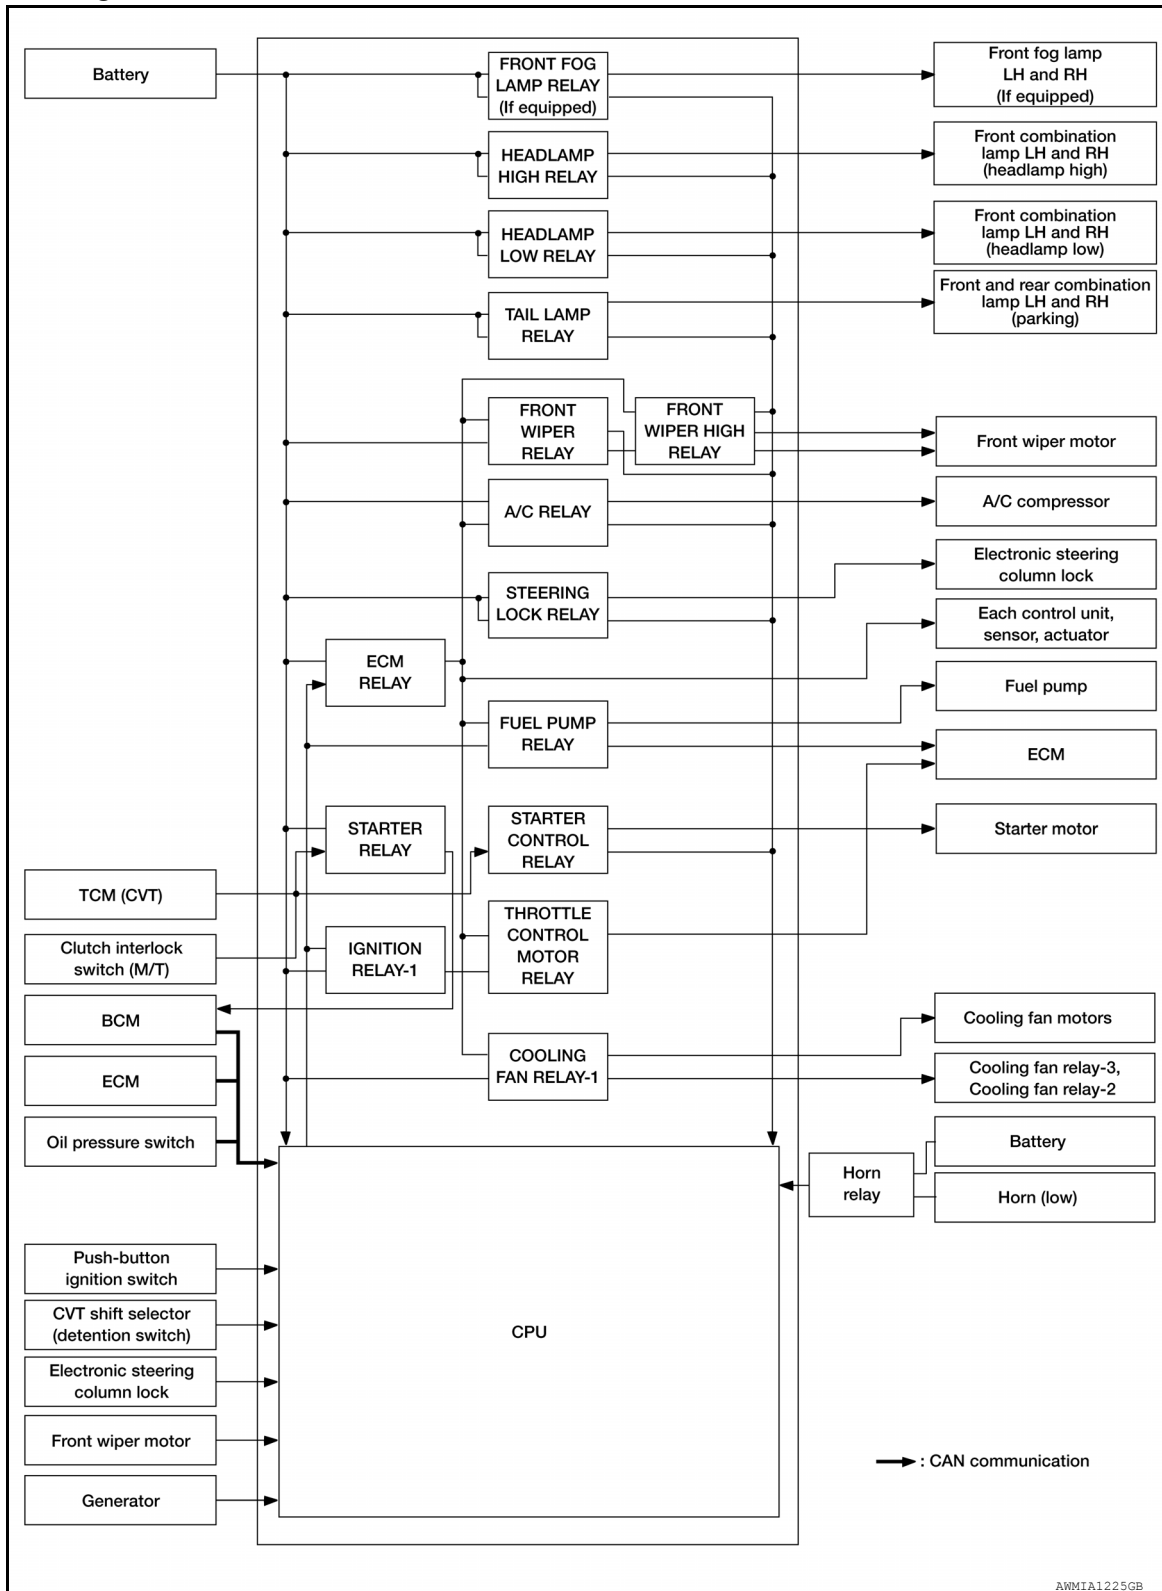

AWMIA1225GB

# RELAY CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

## System Description

INFOID:000000006392779

IPDM E/R activates the internal control circuit to perform the relay ON-OFF control according to the input signals from various sensors and the request signals received from control units via CAN communication.

**CAUTION:**

**IPDM E/R integrated relays cannot be removed.**

Control relay	Input/output	Transmit unit	Control part	Reference page
<ul style="list-style-type: none"> <li>Headlamp low relay</li> <li>Headlamp high relay</li> </ul>	<ul style="list-style-type: none"> <li>Low beam request signal</li> <li>High beam request signal</li> </ul>	BCM (CAN)	<ul style="list-style-type: none"> <li>Headlamp low</li> <li>Headlamp High</li> </ul>	<a href="#">EXL-38</a> , or <a href="#">EXL-39</a> , or <a href="#">EXL-36</a>
Front fog lamp relay (if equipped)	Front fog light request signal	BCM (CAN)	Front fog lamp	<a href="#">EXL-43</a>
Tail lamp relay	Position light request signal	BCM (CAN)	<ul style="list-style-type: none"> <li>Parking lamp</li> <li>License plate lamp</li> <li>Tail lamp</li> <li>Illuminations</li> </ul>	<a href="#">EXL-48</a>
<ul style="list-style-type: none"> <li>Front wiper relay</li> <li>Front wiper high relay</li> </ul>	Front wiper request signal Front wiper auto stop signal	BCM (CAN) Front wiper motor	Front wiper	<a href="#">WW-19</a>
<ul style="list-style-type: none"> <li>Starter relay<sup>NOTE</sup></li> <li>Starter control relay</li> </ul>	Starter control relay signal	BCM (CAN)	Starter motor	<a href="#">STR-38</a> , <a href="#">STR-9</a>
	Electronic steering column lock unit condition signal	Electronic steering column lock unit		
	Starter relay control signal	TCM (CVT model) Clutch interlock switch (M/T model)		
Steering lock relay	Steering lock relay signal	BCM (CAN)	Electronic steering column lock unit	<a href="#">STR-38</a> , <a href="#">STR-9</a>
	Electronic steering column lock unit condition signal	Electronic steering column lock unit		
	CVT shift selector (Detention switch) signal	CVT shift selector (Detention switch)		
A/C relay	A/C compressor request signal	ECM (CAN)	A/C compressor (magnet clutch)	<a href="#">HAC-52</a>
Ignition relay - 1	Ignition switch ON signal	BCM (CAN)	Ignition relay - 1	<a href="#">BCS-6</a>
	Vehicle speed signal	Combination meter (CAN)		
	Push-button ignition switch	Push-button ignition switch		
Fuel pump relay	Fuel pump request signal	ECM	Fuel pump	<a href="#">EC-250</a> , <a href="#">EC-619</a>
ECM relay	ECM relay control signal	ECM	ECM relay	<a href="#">EC-115</a> , <a href="#">EC-438</a>
Throttle control motor relay	Throttle control motor relay signal	ECM	Throttle control motor relay	<a href="#">EC-198</a> (QR models) <a href="#">EC-580</a> (VQ models)
Cooling fan relay - 1	Cooling fan request signal	ECM (CAN)	Cooling fan relay 1	<a href="#">EC-168</a> (QR models) <a href="#">EC-528</a> (VQ models)

**NOTE:**

BCM controls the starter relay.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS


# RELAY CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

## Component Parts Location

INFOID:000000006392780

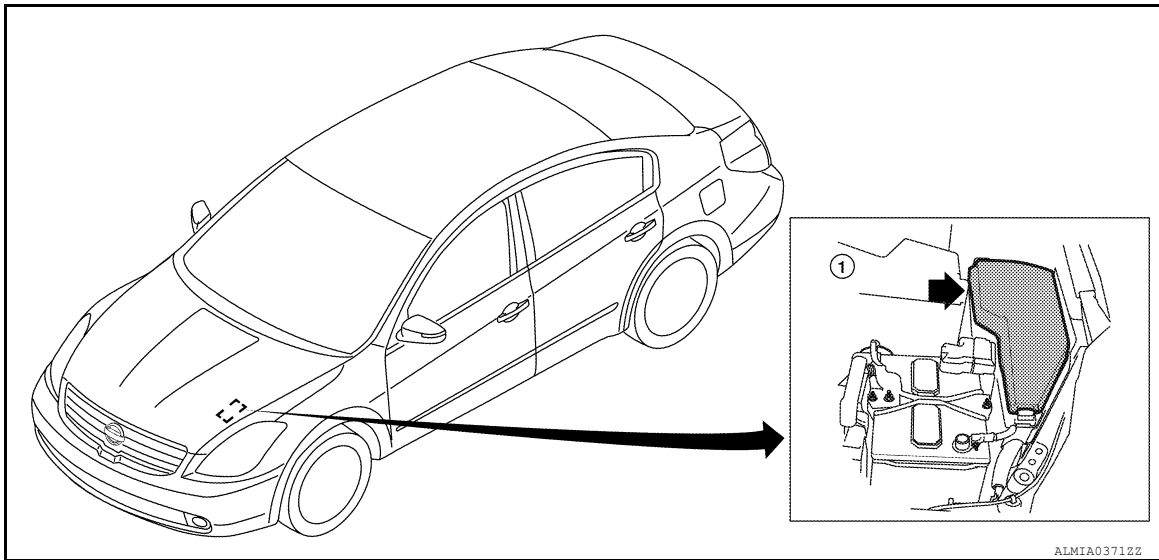

1. IPDM E/R E16, E17, E18, E200, E201, F10


# POWER CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

## POWER CONTROL SYSTEM

### System Diagram

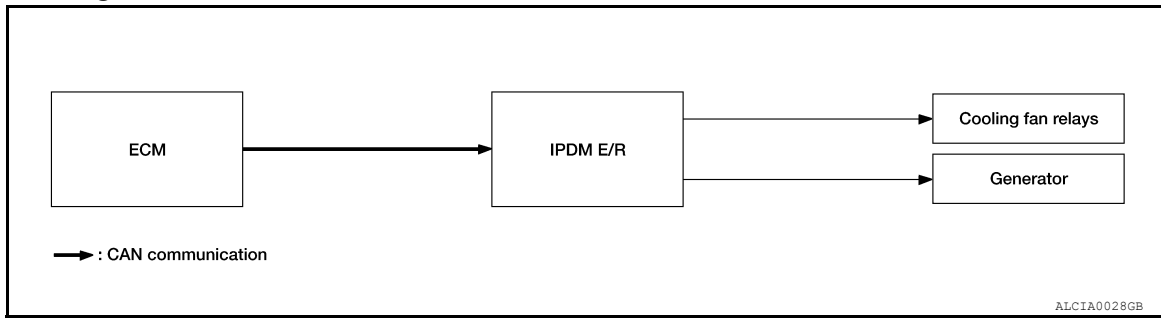

### System Description

INFOID:0000000006392782

#### COOLING FAN CONTROL

IPDM E/R controls cooling fans according to the status of the cooling fan speed request signal received from ECM via CAN communication.

#### GENERATOR CONTROL


IPDM E/R outputs power generation command signal (PWM signal) to the generator according to the status of the power generation command value signal received from ECM via CAN communication. Refer to [PCS-7, "System Description"](#).

PCS

## SIGNAL BUFFER SYSTEM

### System Diagram

INFOID:000000006392783

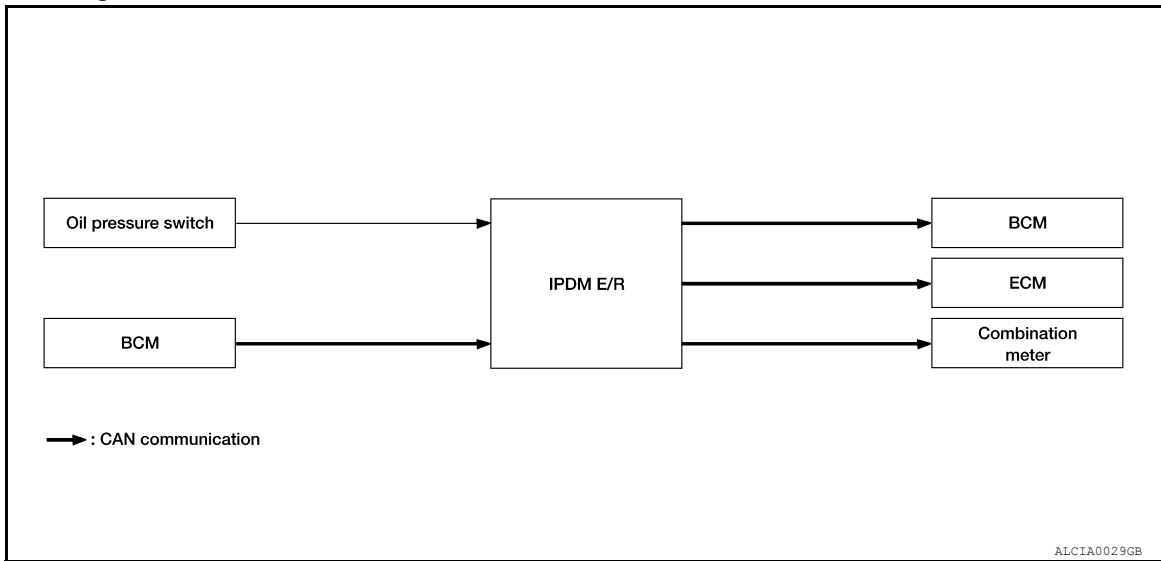

### System Description


INFOID:000000006392784

- IPDM E/R reads the status of the oil pressure switch and transmits the oil pressure switch signal to BCM via CAN communication. Refer to [PCS-8, "System Description"](#).
- IPDM E/R receives the rear window defogger status signal from BCM via CAN communication and transmits it to ECM via CAN communication. Refer to [PCS-8, "System Description"](#).



## POWER CONSUMPTION CONTROL SYSTEM

### System Diagram

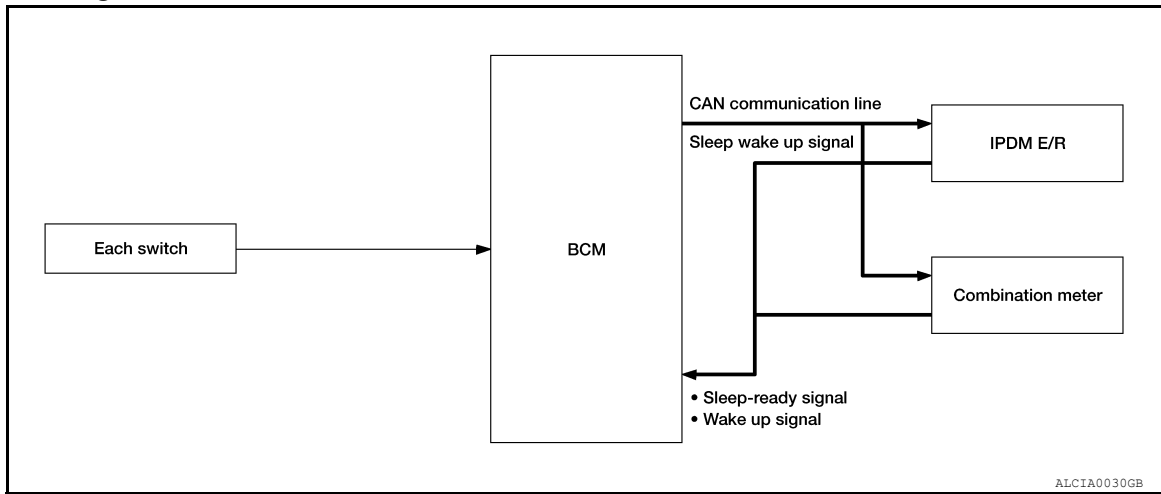

### System Description

INFOID:000000006392786

#### OUTLINE

- IPDM E/R incorporates a power consumption control function that reduces the power consumption according to the vehicle status.
- IPDM E/R changes its status (control mode) with the sleep wake up signal received from BCM via CAN communication.

#### Normal mode (wake-up)

- CAN communication is normally performed with other control units.
- Individual unit control by IPDM E/R is normally performed.

#### Low power consumption mode (sleep)

- Low power consumption control is active.
- CAN transmission is stopped.

#### SLEEP MODE ACTIVATION

- IPDM E/R judges that the sleep-ready conditions are fulfilled when the ignition switch is OFF and none of the conditions below are present. Then it transmits a sleep-ready signal (ready) to BCM via CAN communication.
  - Front wiper fail-safe operation
  - Outputting signals to actuators
  - Switches or relays operating
  - Auto active test is starting
  - Emergency OFF
  - Output requests are being received from control units via CAN communication.
- IPDM E/R stops CAN communication and enters the low power consumption mode when it receives a sleep wake up signal (sleep) from BCM and the sleep-ready conditions are fulfilled.

#### WAKE-UP OPERATION

- IPDM E/R changes from the low power consumption mode to the normal mode when it receives a sleep wake-up signal (wake up) from BCM or any of the following conditions is fulfilled. In addition, it transmits a sleep-ready signal (not-ready) to BCM via CAN communication to report the CAN communication start.
  - Ignition switch ON
  - An output request is received from a control unit via CAN communication.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS


# POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

## Component Parts Location

INFOID:000000006392787

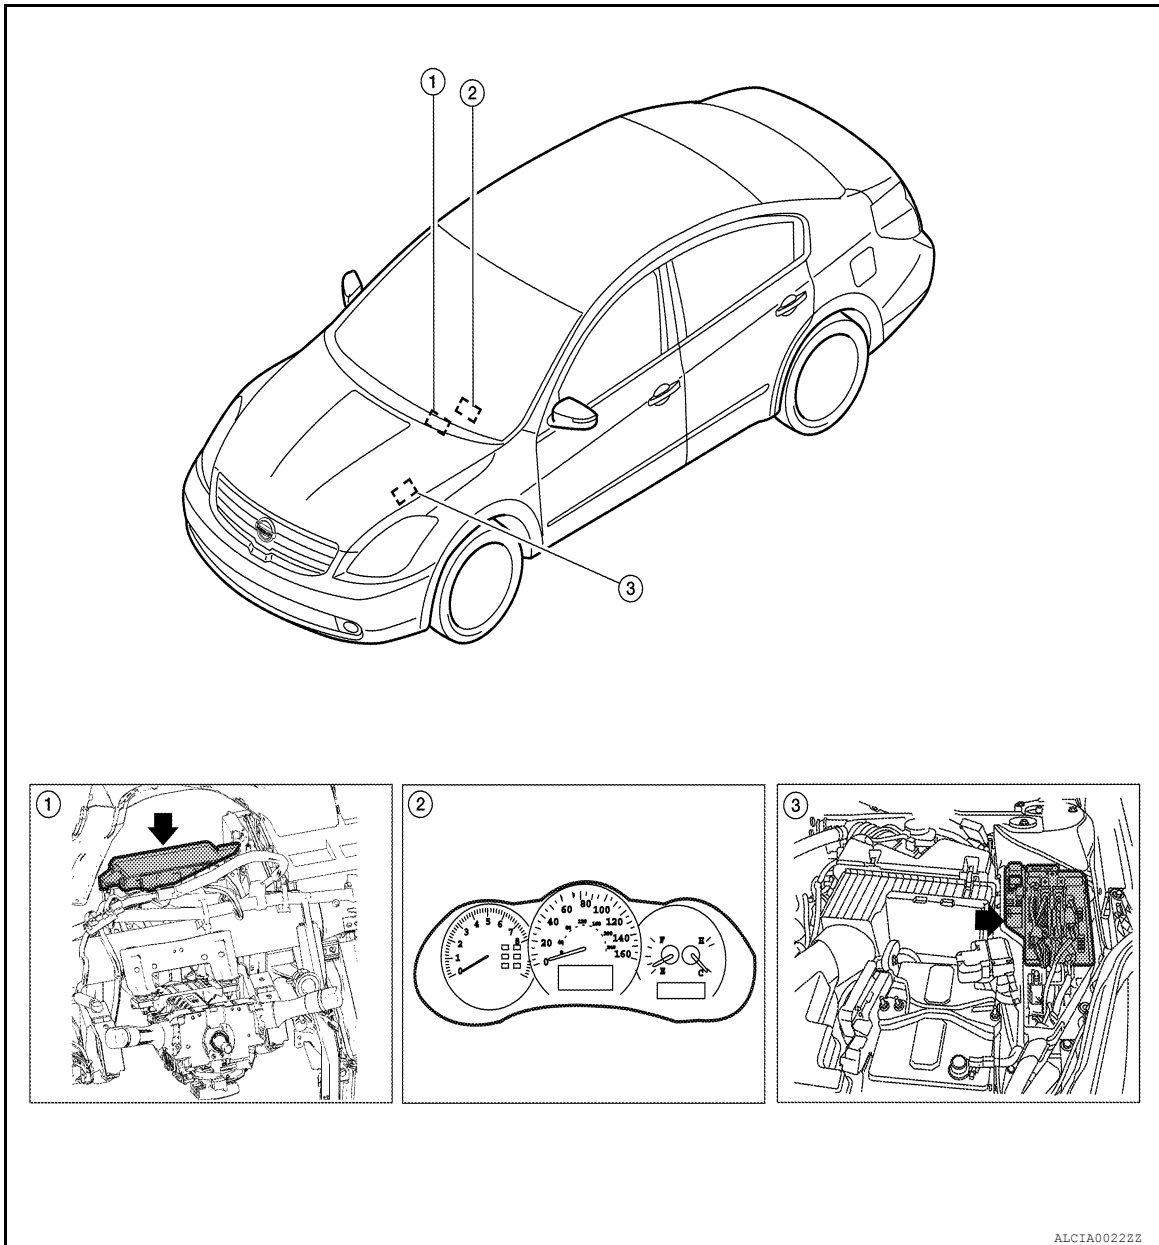

1. BCM M16, M17, M18, M19, M20, M21 (view with instrument panel removed)
2. Combination meter M24
3. IPDM E/R E16, E17, E18, E200, E201, F10

## DIAGNOSIS SYSTEM (IPDM E/R)

## Diagnosis Description

INFOID:000000006392788

## AUTO ACTIVE TEST

## Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure warning lamp
- Front wiper (LO, HI)
- Parking lamps
- License plate lamps
- Tail lamps
- Front fog lamps (if equipped)
- Headlamps (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fans

## Operation Procedure

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)

**NOTE:**

When auto active test is performed with hood opened, sprinkle water on windshield beforehand.

2. Turn ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the front door switch LH 10 times. Then turn the ignition switch OFF.

**CAUTION:**

**Close front door RH.**

4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. The oil pressure warning lamp starts blinking when the auto active test starts.
6. After a series of the following operations is repeated 3 times, auto active test is completed.

**NOTE:**

When auto active test mode has to be cancelled halfway through test, turn ignition switch OFF.

**CAUTION:**

- If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-286, "Description"](#).
- Do not start the engine.

Inspection in Auto Active Test Mode

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P


PCS

# DIAGNOSIS SYSTEM (IPDM E/R)

## < SYSTEM DESCRIPTION >

[IPDM E/R]

When auto active test mode is actuated, the following 6 steps are repeated 3 times.

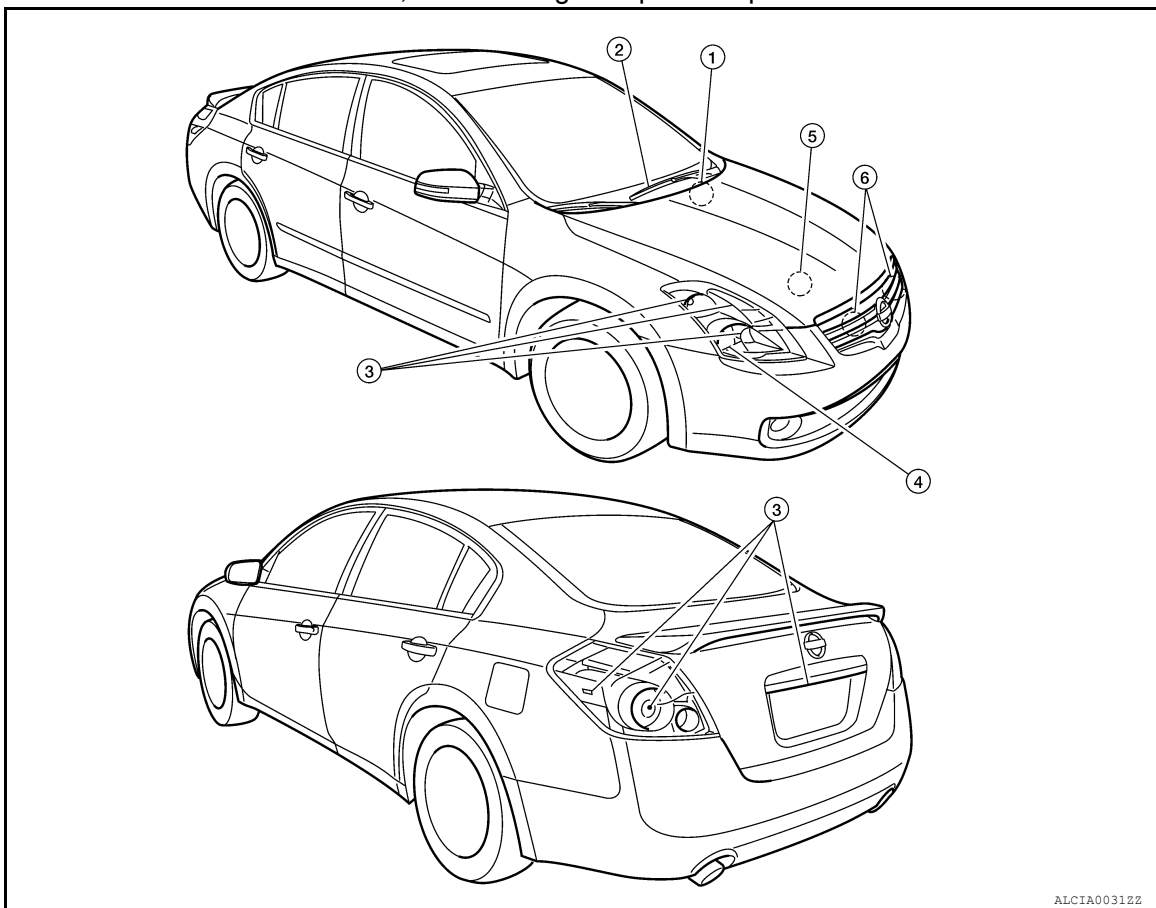


ALCIA0031ZZ

Operation sequence	Inspection Location	Operation
1	Oil pressure warning lamp	Blinks continuously during operation of auto active test
2	Front wiper	LO for 5 seconds → HI for 5 seconds
3	<ul style="list-style-type: none"> <li>• Parking lamps</li> <li>• License plate lamps</li> <li>• Tail lamps</li> <li>• Front fog lamps (if equipped)</li> </ul>	10 seconds
4	Headlamps	LO ⇄ HI 5 times
5	A/C compressor (magnet clutch)	ON ⇄ OFF 5 times
6*	Cooling fans	MID for 5 seconds → HI for 5 seconds

\*: Outputs duty ratio of 50% for 5 seconds → duty ratio of 100% for 5 seconds on the cooling fan control module.

### Concept of auto active test

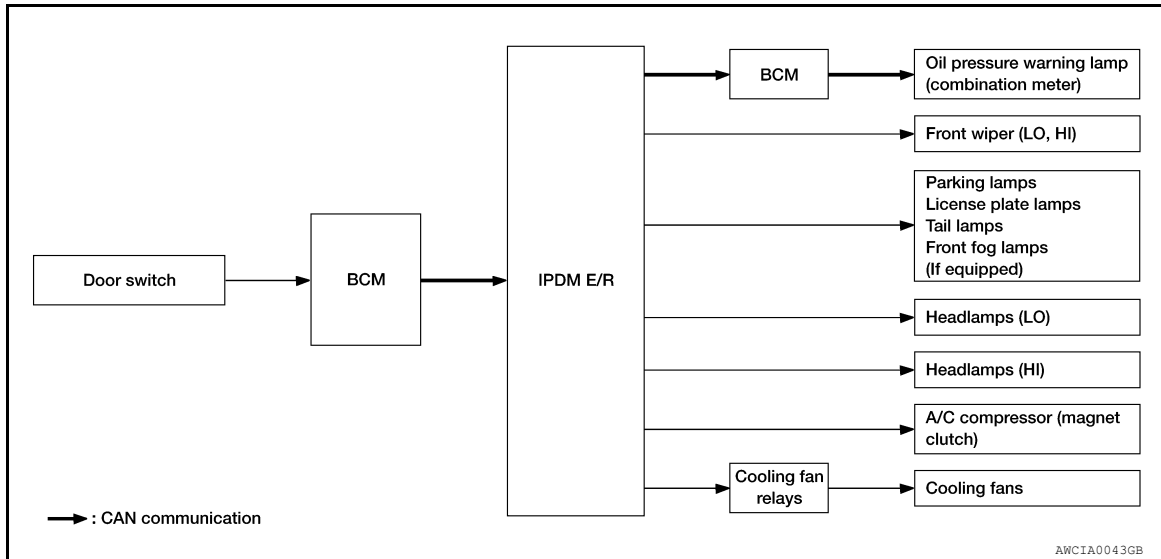

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

### Diagnosis chart in auto active test mode

Symptom	Inspection contents		Possible cause
Any of the following components do not operate <ul style="list-style-type: none"> <li>• Parking lamps</li> <li>• License plate lamps</li> <li>• Tail lamps</li> <li>• Front fog lamps (if equipped)</li> <li>• Headlamp (HI, LO)</li> <li>• Front wiper</li> </ul>	Perform auto active test. Does the applicable system operate?	YES	BCM signal input circuit
		NO	<ul style="list-style-type: none"> <li>• Lamp or motor</li> <li>• Lamp or motor ground circuit</li> <li>• Harness or connector between IPDM E/R and applicable system</li> <li>• IPDM E/R</li> </ul>
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES	<ul style="list-style-type: none"> <li>• Combination meter signal input circuit</li> <li>• CAN communication signal between combination meter and ECM</li> <li>• CAN communication signal between ECM and IPDM E/R</li> </ul>
		NO	<ul style="list-style-type: none"> <li>• Magnet clutch</li> <li>• Harness or connector between IPDM E/R and magnet clutch</li> <li>• IPDM E/R</li> </ul>

# DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Symptom	Inspection contents		Possible cause
Oil pressure warning lamp does not operate	Perform auto active test. Does the oil pressure warning lamp blink?	YES	<ul style="list-style-type: none"> <li>• Harness or connector between IPDM E/R and oil pressure switch</li> <li>• Oil pressure switch</li> <li>• IPDM E/R</li> </ul>
		NO	<ul style="list-style-type: none"> <li>• CAN communication signal between IPDM E/R and BCM</li> <li>• CAN communication signal between BCM and combination meter</li> <li>• Combination meter</li> </ul>
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES	<ul style="list-style-type: none"> <li>• ECM signal input circuit</li> <li>• CAN communication signal between ECM and IPDM E/R</li> </ul>
		NO	<ul style="list-style-type: none"> <li>• Cooling fan</li> <li>• Harness or connector between cooling fan and cooling fan relays</li> <li>• Cooling fan relays</li> <li>• Harness or connector between IPDM E/R and cooling fan relays</li> <li>• IPDM E/R</li> </ul>

## CONSULT Function (IPDM E/R)

INFOID:000000006392789

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
ECU Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

### SELF DIAGNOSTIC

Refer to [PCS-29. "DTC Index"](#).

### DATA MONITOR

Monitor item

Monitor Item [Unit]	MAIN SIGNALS	Description
MOTOR FAN REQ [%]	×	Displays the value of the cooling fan speed signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.

# DIAGNOSIS SYSTEM (IPDM E/R)

## < SYSTEM DESCRIPTION >

[IPDM E/R]

Monitor Item [Unit]	MAIN SIG- NALS	Description
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the clutch interlock switch (M/T models) or CVT shift position (CVT models) judged by IPDM E/R.
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.
ST/INH RLY [Off/ ST /INH]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.
DETENT SW [Off/On]		Displays the status of the CVT shift selector (detention switch) judged by IPDM E/R.
S/L RLY -REQ [Off/On]		Displays the status of the steering lock relay request received from BCM via CAN communication.
S/L STATE [LOCK/UNLK/UNKWN]		Displays the status of the electronic steering column lock judged by IPDM E/R.
OIL P SW [Open/Close]		Displays the status of the oil pressure switch judged by IPDM E/R.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.

## ACTIVE TEST

Test item

PCS

Test item	Operation	Description
HORN	On	Operates horn relay 1 and horn relay 2 for 20 ms.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.
MOTOR FAN	1	OFF
	2	Outputs 50% pulse duty signal (PWM signal) to the cooling fan control module.
	3	Outputs 80% pulse duty signal (PWM signal) to the cooling fan control module.
	4	Outputs 100% pulse duty signal (PWM signal) to the cooling fan control module.

## DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Test item	Operation	Description
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.



# U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

## DTC/CIRCUIT DIAGNOSIS

### U1000 CAN COMM CIRCUIT

#### Description

INFOID:000000006392790

Refer to [LAN-6, "System Description"](#).

#### DTC Logic

INFOID:000000006392791

#### DTC DETECTION LOGIC

DTC	CONSULT display de- scription	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more	In CAN communication system, any item (or items) of the following listed below is malfunctioning. <ul style="list-style-type: none"><li>• Transmission</li><li>• Receiving (ECM)</li><li>• Receiving (BCM)</li><li>• Receiving (Combination meter)</li></ul>

#### DTC CONFIRMATION PROCEDURE

#### Diagnosis Procedure

INFOID:000000006392792

#### 1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 second or more.
2. Check "Self Diagnostic Result" of IPDM E/R.

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-24, "CAN Communication Signal Chart"](#).  
NO >> Refer to [GI-42, "Intermittent Incident"](#).

PCS

## B2098 IGNITION RELAY ON STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

### B2098 IGNITION RELAY ON STUCK

#### Description

INFOID:000000006392793

- IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.
- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the unified meter (Emergency OFF)
  - Press and hold the push-button ignition switch for 2 seconds or more.
  - Press the push-button ignition switch 3 time within 1.5 seconds.

#### NOTE:

The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

#### DTC Logic

INFOID:000000006392794

#### DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible causes
B2098	IGN RELAY ON	The ignition relay ON is detected for 1 second at ignition switch OFF (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it)	Ignition relay malfunction

#### Diagnosis Procedure

INFOID:000000006392795

#### 1. PERFORM SELF DIAGNOSIS

1. Turn the ignition switch ON.
2. Erase "Self Diagnostic Result" of IPDM E/R.
3. Turn ignition switch OFF, and wait for 1 second or more.
4. Turn the ignition switch ON. Check "Self Diagnostic Result" again.

Is "IGN RELAY ON" displayed?

- YES >> Replace IPDM E/R. Refer to [PCS-45, "Removal and Installation"](#).  
NO >> Refer to [GI-42, "Intermittent Incident"](#).

# B2099 IGNITION RELAY OFF STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

## B2099 IGNITION RELAY OFF STUCK

### Description

INFOID:000000006392796

- IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.
- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the unified meter (Emergency OFF)
  - Press and hold the push-button ignition switch for 2 seconds or more.
  - Press the push-button ignition switch 3 time within 1.5 seconds.

#### NOTE:

The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

### DTC Logic

INFOID:000000006392797

#### DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible causes
B2099	IGN RELAY OFF	The ignition relay OFF is detected for 1 second at ignition switch ON (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it)	Ignition relay malfunction

### Diagnosis Procedure

INFOID:000000006392798

#### 1. PERFORM SELF DIAGNOSIS

1. Turn the ignition switch ON.
2. Erase "Self Diagnostic Result".
3. Turn ignition switch OFF.
4. Turn the ignition switch ON. Check "Self Diagnostic Result" again.

#### Is "IGN RELAY OFF" displayed?

- YES >> Replace IPDM E/R. Refer to [PCS-45, "Removal and Installation"](#).  
NO >> Refer to [GI-42, "Intermittent Incident"](#).

PCS

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

## POWER SUPPLY AND GROUND CIRCUIT

### Diagnosis Procedure

INFOID:000000006392799

Regarding Wiring Diagram information, refer to [PCS-31. "Wiring Diagram - Coupe"](#) or [PCS-37. "Wiring Diagram - Sedan"](#).

### 1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
1, 2	Battery power supply	B, D
—		42
—		43

Is the fuse blown?


YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

### 2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connectors.
3. Check voltage between IPDM E/R harness connector and ground.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
IPDM E/R		Ground
Connector	Terminal	
E16	1	
	2	Battery voltage

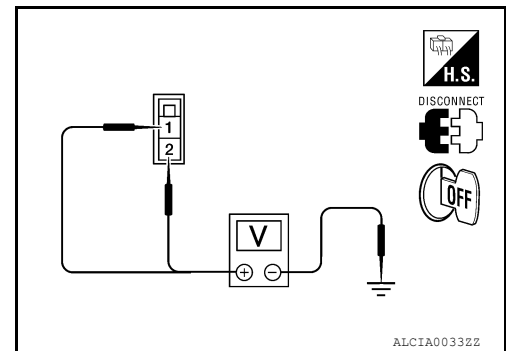

Is the measurement value normal?

YES >> GO TO 3

NO >> Repair harness or connector.

### 3. CHECK GROUND CIRCUIT


Check continuity between IPDM E/R harness connectors and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
A: E18	12	Ground	Yes
B: E17	41		

Does continuity exist?

YES >> Inspection End.

NO >> Repair harness or connector.

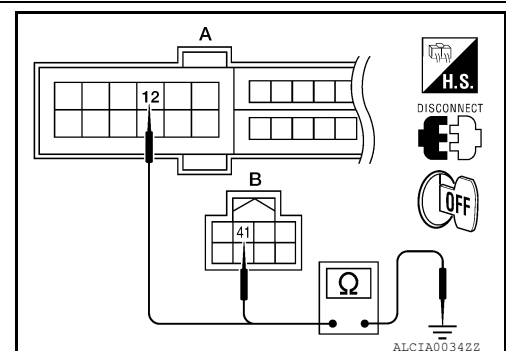

## ECU DIAGNOSIS INFORMATION

## IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## Reference Value

INFOID:000000006392800

## VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
RADFAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 - 100 %
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		Front fog lamp switch ON	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	STOP
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	CVT selector lever in any position other than P or N (CVT models)	Off
		Release clutch pedal (M/T models)	
	Ignition switch ON	CVT selector lever in P or N position (CVT models)	On
		Depress clutch pedal (M/T models)	
ST RLY CONT	Ignition switch ON		Off
	At engine cranking		On

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]


Monitor Item	Condition		Value/Status
IHBT RLY -REQ	Ignition switch ON		Off
	At engine cranking		On
ST/INHI RLY	Ignition switch ON		Off
	At engine cranking		ST →INHI
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF		UNKWN
DETENT SW	Ignition switch ON	<ul style="list-style-type: none"> <li>Press the selector button with CVT selector lever in P position</li> <li>CVT selector lever in any position other than P</li> </ul>	Off
	Release the CVT selector button with CVT selector lever in P position <b>NOTE:</b> The lever is fixed ON for M/T		On
S/L RLY -REQ	None of the conditions below are present		Off
	<ul style="list-style-type: none"> <li>Open the driver door after the ignition switch is turned OFF (for a few seconds)</li> <li>Press the push-button ignition switch when the steering lock is activated</li> <li>Depress the clutch pedal when the steering lock is activated</li> </ul>		On
S/L STATE	Steering lock is activated		LOCK
	Steering lock is deactivated		UNLK
	[DTC B210A] is detected		UNKWN
OIL P SW	Ignition switch OFF, ACC or engine running		Open
	Ignition switch ON		Close
THFT HRN REQ	Not operated		Off
	<ul style="list-style-type: none"> <li>Panic alarm is activated</li> <li>Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM</li> </ul>		On
HORN CHIRP	Not operated		Off
	Door locking with Intelligent Key (horn chirp mode)		On

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

## TERMINAL LAYOUT

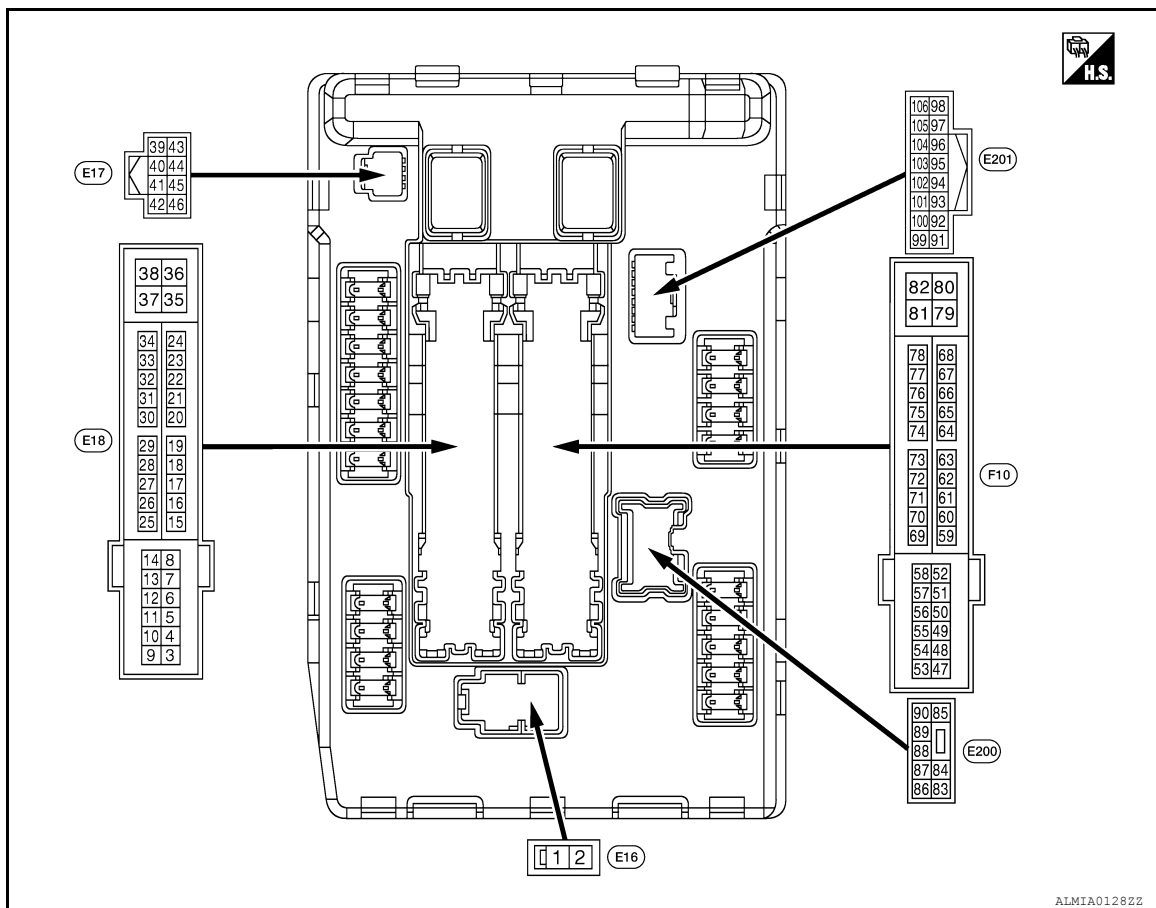

## PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (L)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
4 (LG)	Ground	Front wiper LO	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch LO	Battery voltage
5 (Y)	Ground	Front wiper HI	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch HI	Battery voltage
7 (GR)	Ground	Tail, license plate lamps & interior lamps	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
10 (BR)	Ground	ECM relay power supply	Output	Ignition switch OFF (For a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (More than a few seconds after turn- ing ignition switch OFF)		Battery voltage

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
11 (O)	Ground	Electronic steering column lock power supply	Output	Ignition switch OFF	A few seconds after open- ing the driver door	Battery voltage
				Ignition switch LOCK	Press the push-button ig- nition switch	Battery voltage
				Ignition switch ACC or ON		0 V
12 (B)	Ground	Ground	—	Ignition switch ON		0 V
13 (SB)	Ground	Fuel pump power supply	Output	Approximately 1 second or more after turning the ignition switch ON		0 V
				<ul style="list-style-type: none"> <li>Approximately 1 second after turning the ignition switch ON</li> <li>Engine running</li> </ul>		Battery voltage
15 (W)	Ground	Ignition relay-1 power sup- ply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
16 (L/Y)	Ground	Front wiper auto stop	Input	Ignition switch ON	Front wiper stop position	0 V
					Any position other than front wiper stop position	Battery voltage
19 (Y)	Ground	Ignition relay-1 power sup- ply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
20 (L)	Ground	Ambient sensor ground	—	Ignition switch ON		0V
21 (LG)	Ground	Ambient sensor	—	Ignition switch ON		5V
22 (W/R)	Ground	Refrigerant pressure sen- sor ground	—	Ignition switch ON		0V
23 (B/R)	Ground	Refrigerant pressure sen- sor	—	<ul style="list-style-type: none"> <li>Ignition switch ON (READY)</li> <li>Both A/C switch and blower motor switch ON (electric compressor oper- ates)</li> </ul>		1.0 - 4.0V
24 (BR/W)	Ground	Refrigerant pressure sen- sor power supply	—	Ignition switch ON		5V
25 (GR)	Ground	Ignition relay-1 power sup- ply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
27 (W)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC		Battery voltage
				Ignition switch ON		0 V
28 (SB)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch		0 V
				Release the push-button ignition switch		Battery voltage
30 (R) (with M/T) 30 (BR) (with CVT)	Ground	Starter relay control	Input	CVT mod- els	CVT selector lever in any position other than P or N (ignition switch ON)	0 V
					CVT selector lever P or N (ignition switch ON)	Battery voltage
				M/T mod- els	Release the clutch pedal	0 V
					Depress the clutch pedal	Battery voltage



# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)	
+	-	Signal name	Input/ Output				
32 (O/L)	Ground	Electronic steering column lock unit condition-1	Input	Electronic steering column lock is activated		0 V	A
				Electronic steering column lock is deactivated		Battery voltage	B
33 (G)	Ground	Electronic steering column lock unit condition-2	Input	Electronic steering column lock is activated		Battery voltage	C
				Electronic steering column lock is deactivated		0 V	D
34 (O)	Ground	Cooling fan relay-3 control	Input	Ignition switch OFF or ACC		0 V	E
				Ignition switch ON		0.7 V	
35 (P)	Ground	Cooling fan motor control	Output	Ignition switch OFF or ACC		0 V	F
				Ignition switch ON		0.7 V	
36 (G)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage	G
38 (R/W)	Ground	Cooling fan motor control	Output	Ignition switch OFF or ACC		0 V	H
				Ignition switch ON		0.7 V	
39 (P)	—	CAN - L	Input/ Output	—		—	I
40 (L)	—	CAN - H	Input/ Output	—		—	J
41 (B)	Ground	Ground	—	Ignition switch ON		0 V	K
42 (SB)	Ground	Cooling fan relay-2 control	Input	Ignition switch OFF or ACC		0 V	L
				Ignition switch ON		0.7 V	
43 (G/B)	Ground	CVT shift selector (Detention switch)	Input	Ignition switch ON	Press the CVT selector button (CVT selector lever P)	Battery voltage	PCS
					<ul style="list-style-type: none"> <li>CVT selector lever in any position other than P</li> <li>Release the CVT selector button (CVT selector lever P)</li> </ul>	0 V	
44 (G/W) coupe (W) sedan	Ground	Horn relay control	Input	The horn is deactivated		Battery voltage	N
				The horn is activated		0 V	
45 (L/O)	Ground	Anti theft horn relay control	Input	The horn is deactivated		Battery voltage	O
				The horn is activated		0 V	
46 (BR)	Ground	Starter relay control	Input	CVT mod- els	CVT selector lever in any position other than P or N (ignition switch ON)	0 V	P
					CVT selector lever P or N (ignition switch ON)	Battery voltage	
				M/T mod- els	Release the clutch pedal	0 V	
					Depress the clutch pedal	Battery voltage	
48 (W)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 V	
					A/C switch ON (A/C compressor is oper- ating)	Battery voltage	

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >




[IPDM E/R]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
49 (V)	Ground	ECM relay power supply	Output	Ignition switch OFF (For a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		Battery voltage
51 (SB)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
52 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
53 (V) (with QR25DE) 53 (G) (with VQ35DE)	Ground	ECM relay power supply	Output	Ignition switch OFF (For a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		Battery voltage
54 (GR)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (For a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		Battery voltage
55 (LG)	Ground	ECM power supply	Output	Ignition switch OFF		Battery voltage
56 (R)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
57 (O)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
58 (BR) (with CVT)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
69 (SB)	Ground	ECM relay control	Output	Ignition switch OFF (For a few seconds after turning ignition switch OFF)		Battery voltage
				• Ignition switch ON • Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 - 1.5 V
70 (G)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF		0 - 1.0 V ↓ Battery voltage ↓ 0 V
				Ignition switch ON		0 - 1.0 V
72 (W) (with QR25DE) 72 (BR) (with VQ35DE)	Ground	Transmission range switch signal	Input	Ignition switch ON	CVT selector lever in P or N position	Battery voltage
					CVT selector lever in any position other than P or N position	0 V

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

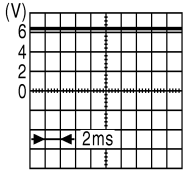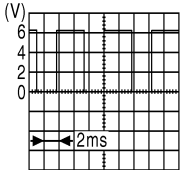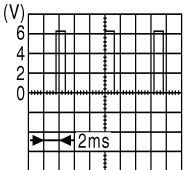Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
74 (L)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
75 (LG)	Ground	Oil pressure switch	Input	Ignition switch ON	Engine stopped	0 V
					Engine running	Battery voltage
76 (Y)	Ground	Power generation command signal	Output	Ignition switch ON		 JPMIA0001GB 6.3 V
				40% is set on "Active test", "ALTERNATOR DUTY" of "ENGINE"		 JPMIA0002GB 3.8 V
				80% is set on "Active test", "ALTERNATOR DUTY" of "ENGINE"		 JPMIA0003GB 1.4 V
77 (GR)	Ground	Fuel pump relay control	Output	• Approximately 1 second after turning the ignition switch ON • Engine running		0 - 1.0 V
				Approximately 1 second or more after turning the ignition switch ON		Battery voltage
80 (R)	Ground	Starter motor	Output	At engine cranking		Battery voltage
83 (R/Y)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
84 (L)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
86 (W/R)	Ground	Front fog lamp (RH) (If equipped)	Output	Lighting switch 2ND	Front fog lamp switch ON	Battery voltage
					Front fog lamp switch OFF	0 V
87 (L/Y)	Ground	Front fog lamp (LH) (If equipped)	Output	Lighting switch 2ND	Front fog lamp switch ON	Battery voltage
					Front fog lamp switch OFF	0 V
88 (R/W)	Ground	Washer pump power supply	Output	Ignition switch ON		Battery voltage

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
89 (L/W)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	• Lighting switch HI • lighting switch PASS	Battery voltage
					Lighting switch OFF	0 V
90 (G)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	• Lighting switch HI • Lighting switch PASS	Battery voltage
					Lighting switch OFF	0 V
91 (LG/R)	Ground	Parking lamp (RH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
92 (LG/B)	Ground	Parking lamp (LH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
99 (BR/W)	Ground	Ambient sensor ground	—	Ignition switch ON		0V
100 (SB)	Ground	Ambient sensor	—	Ignition switch ON		5V
101 (O/L)	Ground	Refrigerant pressure sensor ground	—	Ignition switch ON		0V
102 (R/B)	Ground	Refrigerant pressure sensor	—	• Ignition switch ON (READY) • Both A/C switch and blower motor switch ON (electric compressor operates)		1.0 - 4.0V
103 (P)	Ground	Refrigerant pressure sensor power supply	—	Ignition switch ON		5V

## Fail Safe

INFOID:000000006392801

## CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

Control part	Fail-safe in operation
Cooling fan	<ul style="list-style-type: none"> <li>• Signals cooling fans ON when the ignition switch is turned ON</li> <li>• Signals cooling fans OFF when the ignition switch is turned OFF</li> </ul>
A/C compressor	A/C relay OFF
Generator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe in operation
Headlamp	<ul style="list-style-type: none"> <li>• Turns ON the headlamp low relay when the ignition switch is turned ON</li> <li>• Turns OFF the headlamp low relay when the ignition switch is turned OFF</li> <li>• Headlamp high relay OFF</li> </ul>
<ul style="list-style-type: none"> <li>• Parking lamps</li> <li>• License plate lamps</li> <li>• Illumination</li> <li>• Tail lamps</li> </ul>	<ul style="list-style-type: none"> <li>• Turns ON the tail lamp relay when the ignition switch is turned ON</li> <li>• Turns OFF the tail lamp relay when the ignition switch is turned OFF</li> </ul>
Front wiper	<ul style="list-style-type: none"> <li>• The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed.</li> <li>• The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.</li> </ul>

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Control part	Fail-safe in operation
Front fog lamps (if equipped)	Front fog lamp relay OFF
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF
Electronic steering column lock unit	Steering lock relay OFF

## IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

DTC	Ignition switch	Ignition relay	Tail lamp relay
—	ON	ON	—
—	OFF	OFF	—
B2098: IGN RELAY ON	OFF	ON	ON (10 minutes)
B2099: IGN RELAY OFF	ON	OFF	—

### NOTE:

The tail lamp turns OFF when the ignition switch is turned ON.

## FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 second activation and 20 second stop five times.

Ignition switch	Front wiper switch	Auto stop signal
ON	OFF	Front wiper stop position signal cannot be input 10 seconds.
	ON	The signal does not change for 10 seconds.

### NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

## STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

## DTC Index

INFOID:000000006392802

PCS

CONSULT display	Fail-safe	TIME <sup>NOTE</sup>		Refer to
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	×	CRNT	1 – 39	<a href="#">PCS-17</a>
B2098: IGN RELAY ON	×	CRNT	1 – 39	<a href="#">PCS-18</a>
B2099: IGN RELAY OFF	—	CRNT	1 – 39	<a href="#">PCS-19</a>
B2108: STRG LCK RELAY ON	—	CRNT	1 – 39	<a href="#">SEC-255</a>
B2109: STRG LCK RELAY OFF	—	CRNT	1 – 39	<a href="#">SEC-256</a>
B210A: STRG LCK STATE SW	—	CRNT	1 – 39	<a href="#">SEC-257</a>
B210B: START CONT RLY ON	—	CRNT	1 – 39	<a href="#">SEC-262</a>
B210C: START CONT RLY OFF	—	CRNT	1 – 39	<a href="#">SEC-263</a>

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

CONSULT display	Fail-safe	TIME <sup>NOTE</sup>		Refer to
B210D: STARTER RELAY ON	—	CRNT	1 – 39	<a href="#">SEC-264</a>
B210E: STARTER RELAY OFF	—	CRNT	1 – 39	<a href="#">SEC-266</a>
B210F: INTRLCK/TRANSMISSION RANGE SW ON	—	CRNT	1 – 39	<a href="#">SEC-269</a>
B2110: INTRLCK/TRANSMISSION RANGE SW OFF	—	CRNT	1 – 39	<a href="#">SEC-275</a>

## NOTE:

The details of TIME display are as follows.


- CRNT: The malfunctions that are detected now
- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like 0 → 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.

## WIRING DIAGRAM

## IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

## Wiring Diagram - Coupe

INFOID:000000006392803

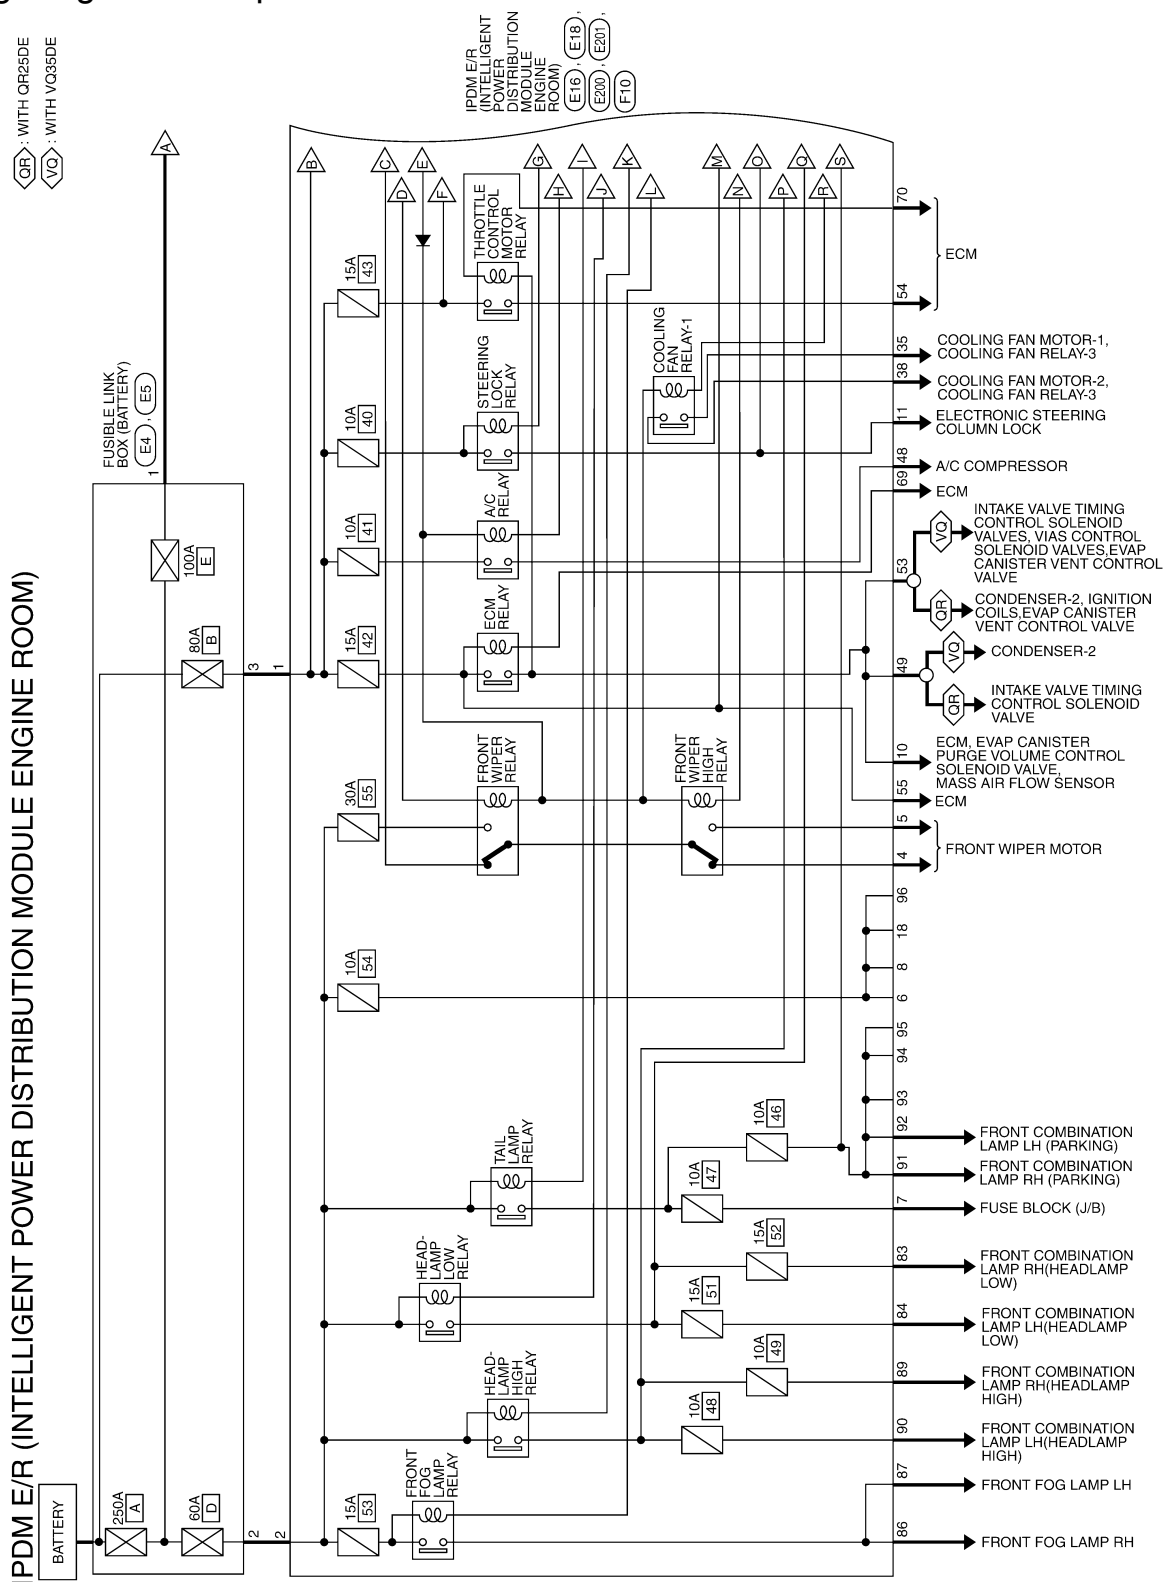


ABMWA0732GB

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< WIRING DIAGRAM >

[IPDM E/R]

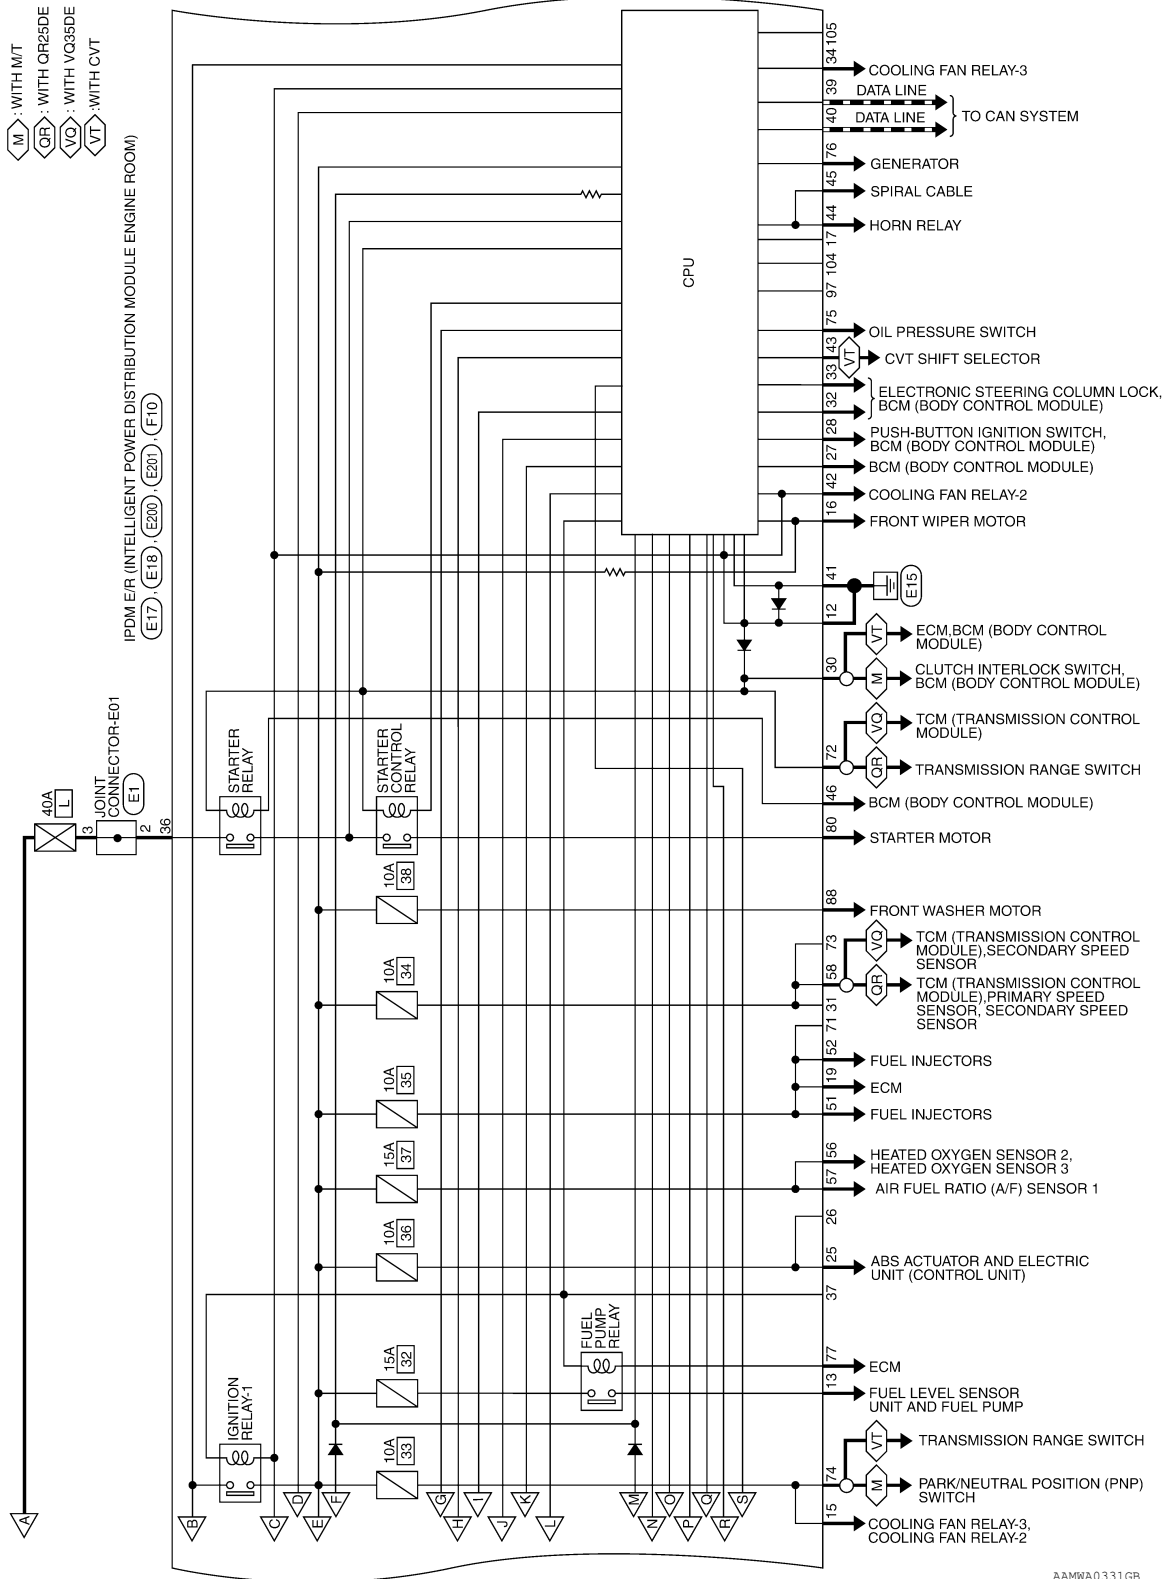

AAMWA0331GB



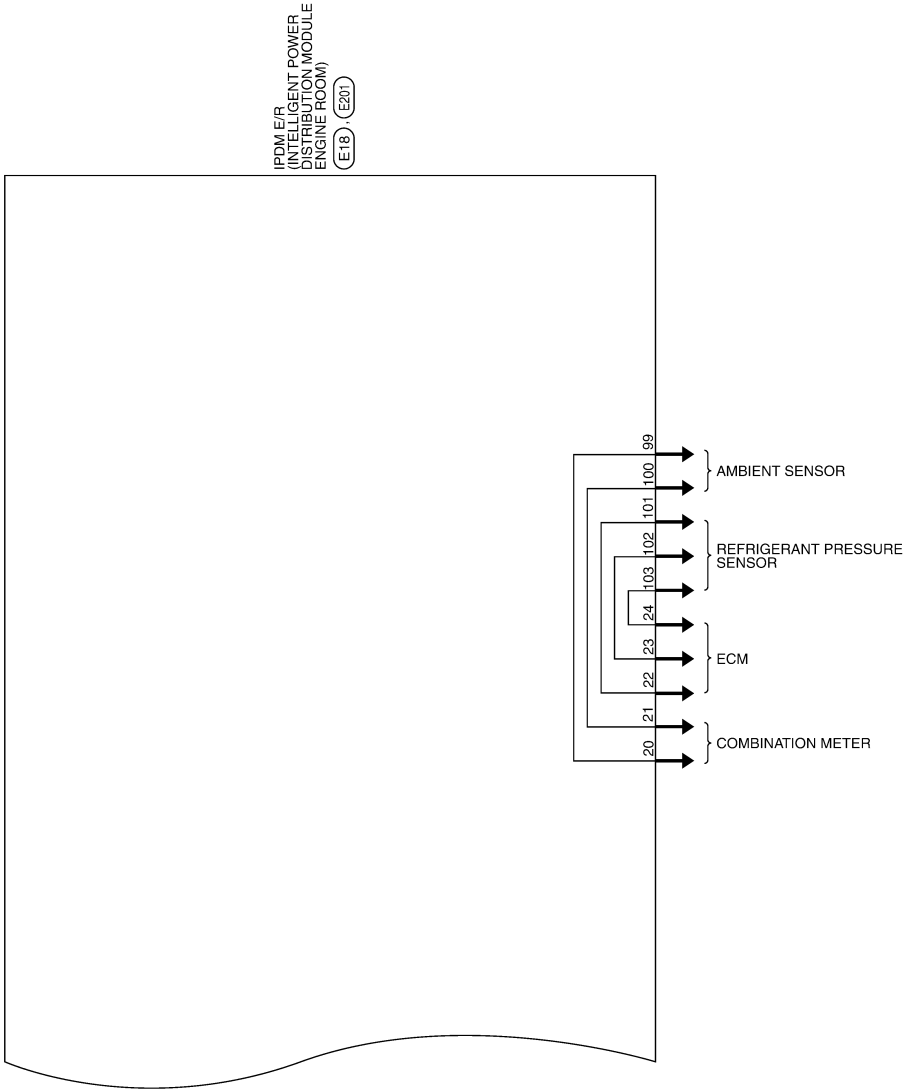

PCS

## IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) CONNECTORS

Connector No.	E1
Connector Name	JOINT CONNECTOR-E01
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	G	-
3	G	-

Connector No.	E4
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	B/W	-
2	L	-

Connector No.	E5
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
3	R	-

Connector No.	E16
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R	F/L_MAIN
2	L	F/L_USM

Connector No.	E17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
39	P	CAN-L
40	L	CAN-H
41	B	GND (SIGNAL)
42	SB	MOTOR_FAN_RLY_MID
43	G/B	DETENT_SW
44	G/W	HORN_RLY
45	L/O	HORN_SW
46	BR	START_CONT

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< WIRING DIAGRAM >

[IPDM E/R]

Terminal No.	Color of Wire	Signal Name
23	B/R	PD_SENS_SIG-E/R
24	BR/W	PD_SENS_PWR-E/R
25	GR	ABS_ECU
26	-	-
27	W	IGN_SIGNAL
28	SB	PUSH_START_SW
29	-	-
30	R	CLUTCH_I/L_SW (WITH M/T)
30	BR	ECM (WITH CVT)
31	-	-
32	O/L	SL_CONDITION_1
33	G	SL_CONDITION_2
34	O	MOTOR_FAN_RLY_HI
35	P	MOTOR_FAN_LO
36	G	F/L_IGNSW
37	-	-
38	R/W	F/L_MOTOR_FAN

Terminal No.	Color of Wire	Signal Name
8	-	-
9	-	-
10	BR	ECM_VB
11	O	ESCL
12	B	GND (POWER)
13	SB	FUEL_PUMP
14	-	-
15	W	START_IG-E/R
16	L/Y	WIPER_AUTOSTOP
17	-	-
18	-	-
19	Y	BCM_IGNSW
20	L	AMB_SENS_GND-E/R
21	LG	AMB_SENS_SIG-E/R
22	W/R	PD_SENS_GND-E/R

Connector No.	E18
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

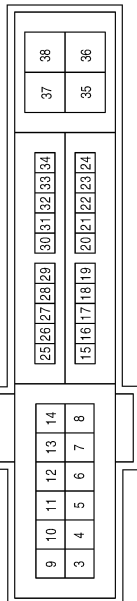

Terminal No.	Color of Wire	Signal Name
3	-	-
4	LG	FR_WIPER_LO
5	Y	FR_WIPER_HI
6	-	-
7	GR	TAIL/ILLUMI

Terminal No.	Color of Wire	Signal Name
96	-	-
97	-	-
98	-	-
99	B/R/W	AMB_SENS_GND-FEM
100	SB	AMB_SENS_SIG-FEM
101	O/L	PD_SENS_GND-FEM
102	R/B	PD_SENS_SIG-FEM
103	P	PD_SENS_PWR-FEM
104	-	-
105	-	-
106	-	-

Connector No.	E201
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
91	LG/R	CLEARANCE_RH
92	LG/B	CLEARANCE_LH
93	-	-
94	-	-
95	-	-

Connector No.	E200
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
83	R/Y	HEADLAMP_LO_RH
84	L	HEADLAMP_LO_LH
85	-	-
86	W/R	FR FOG LAMP RH
87	L/Y	FR FOG LAMP LH
88	R/W	WASHER_MTR
89	L/W	HEADLAMP_HI_RH
90	G	HEADLAMP_HI_LH

ABMIA1928GB

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< WIRING DIAGRAM >

[IPDM E/R]

Terminal No.	Color of Wire	Signal Name
65	-	-
66	-	-
67	-	-
68	-	-
69	SB	SSOF
70	G	MOTRLY
71	-	-
72	W	NPSW (WITH QR25DE)
72	BR	NPSW (WITH VQ35DE)
73	-	-
74	L	START_IG-EGI
75	LG	OIL_PRESSURE_SW
76	Y	ALT_C
77	GR	FPR
78	-	-
79	-	-
80	R	STARTER_MOTOR
81	-	-
82	-	-

Terminal No.	Color of Wire	Signal Name
50	-	-
51	SB	INJECTOR_#1
52	Y	INJECTOR_#2
53	G	ENG_SOL (WITH VQ35DE)
53	V	IGN COIL (WITH QR25DE)
54	GR	ETC
55	LG	ECM_BAT
56	R	O2_SENS_#1
57	O	O2_SENS_#2
58	BR	AT_ECU
59	-	-
60	-	-
61	-	-
62	-	-
63	-	-
64	-	-

Connector No.	F10
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

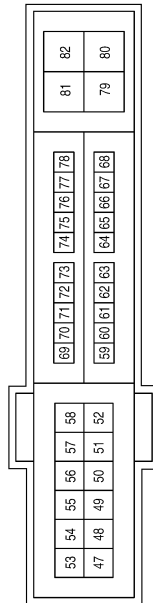

Terminal No.	Color of Wire	Signal Name
47	-	-
48	W	A/C COMP
49	V	IGN_SOL (WITH VQ35DE)
49	V	ENG COIL (WITH QR25DE)


AAMIA0617GB

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< WIRING DIAGRAM >

## Wiring Diagram - Sedan

INFOID:000000006392804

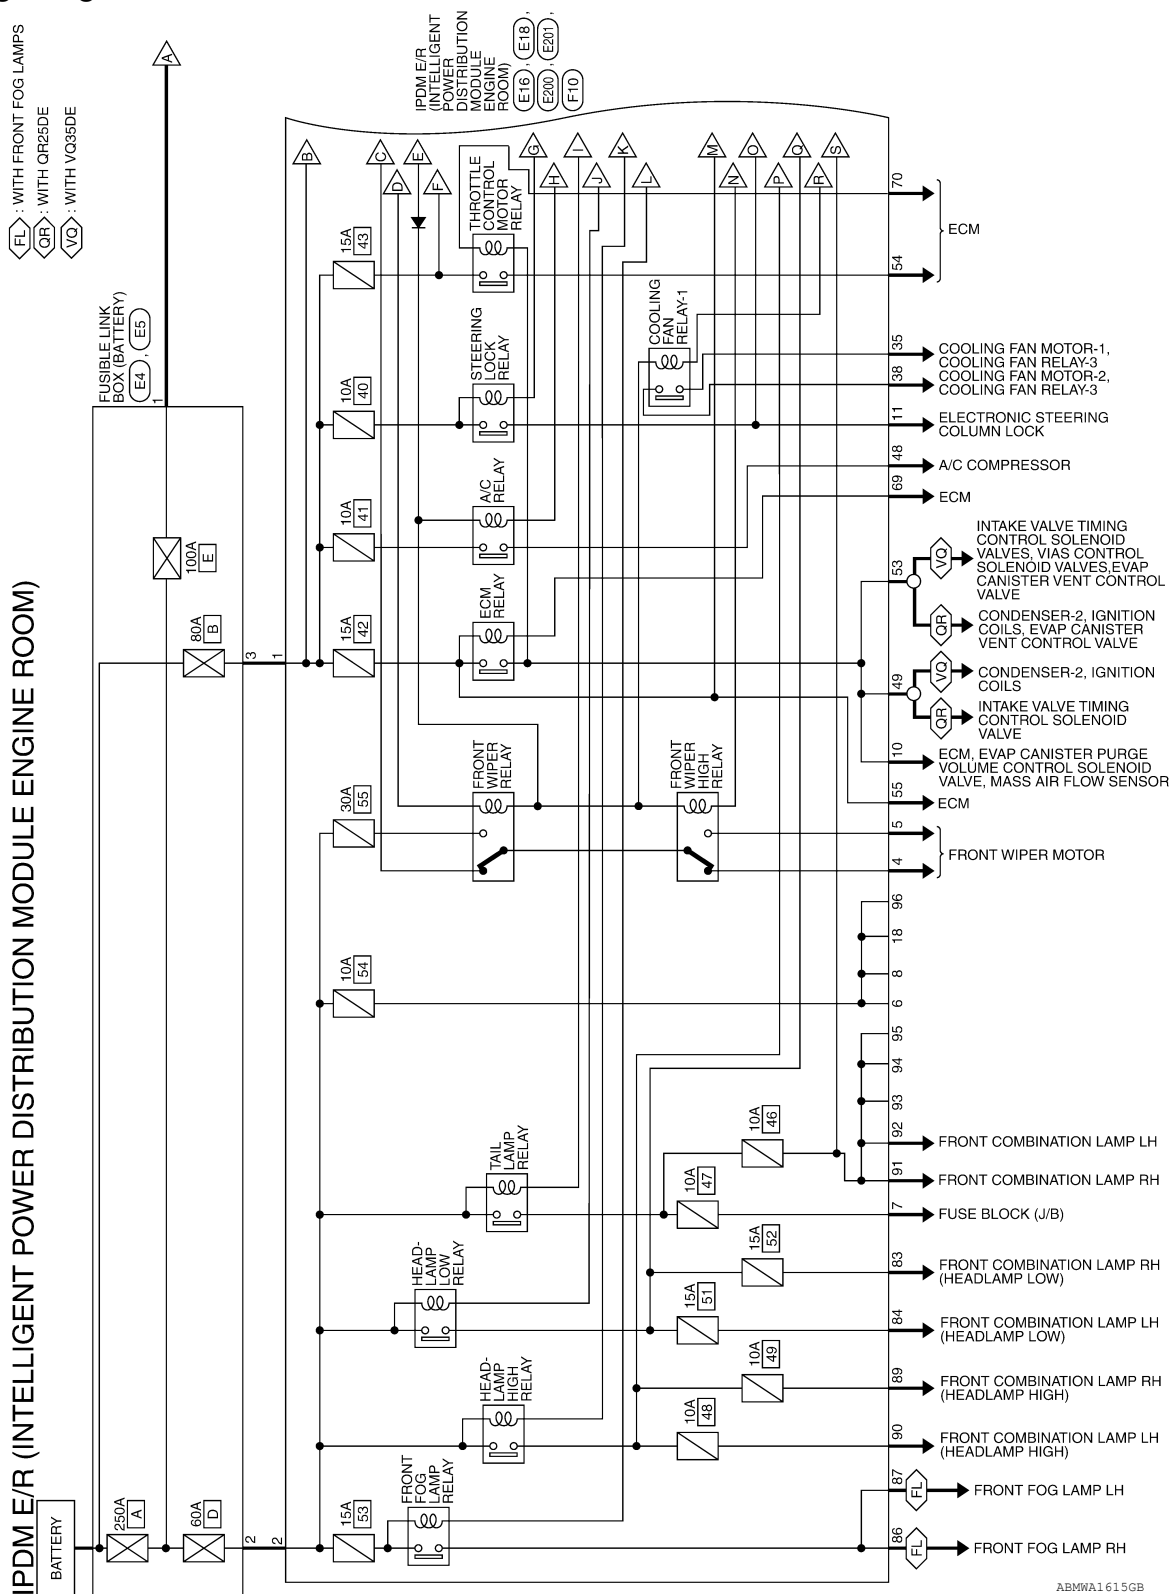



ABMWA1615GB

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< WIRING DIAGRAM >

[IPDM E/R]

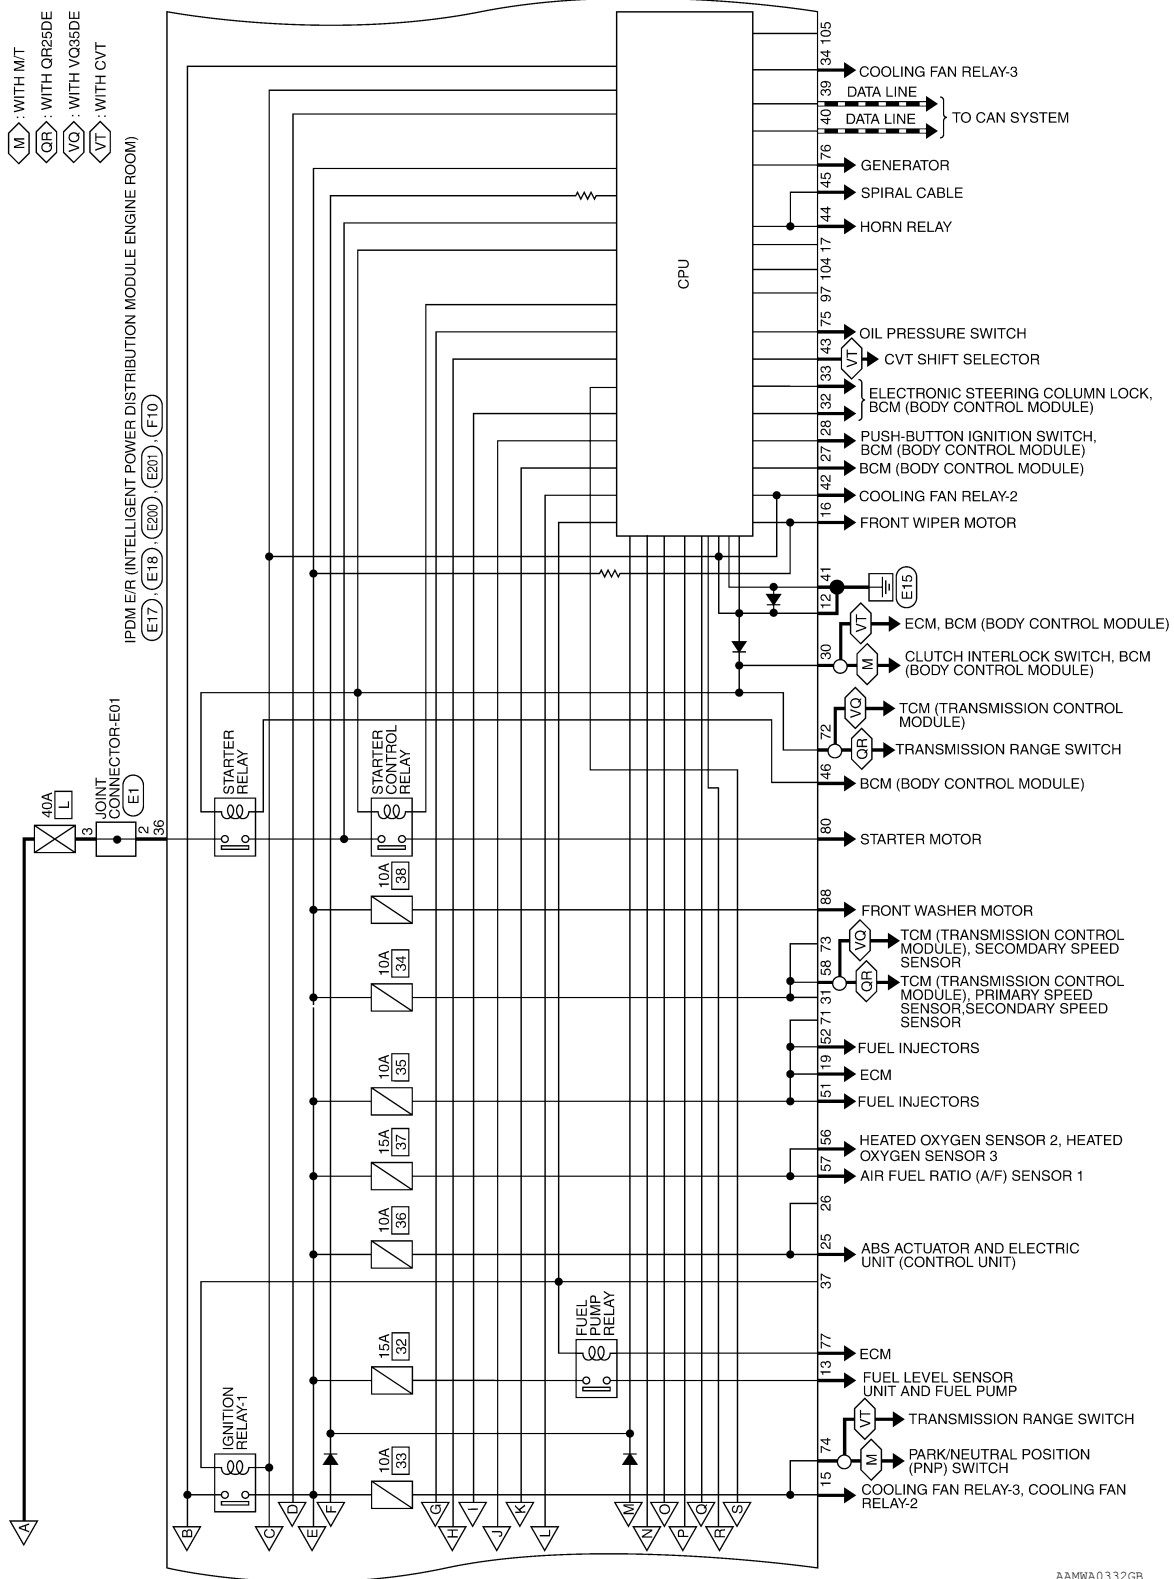

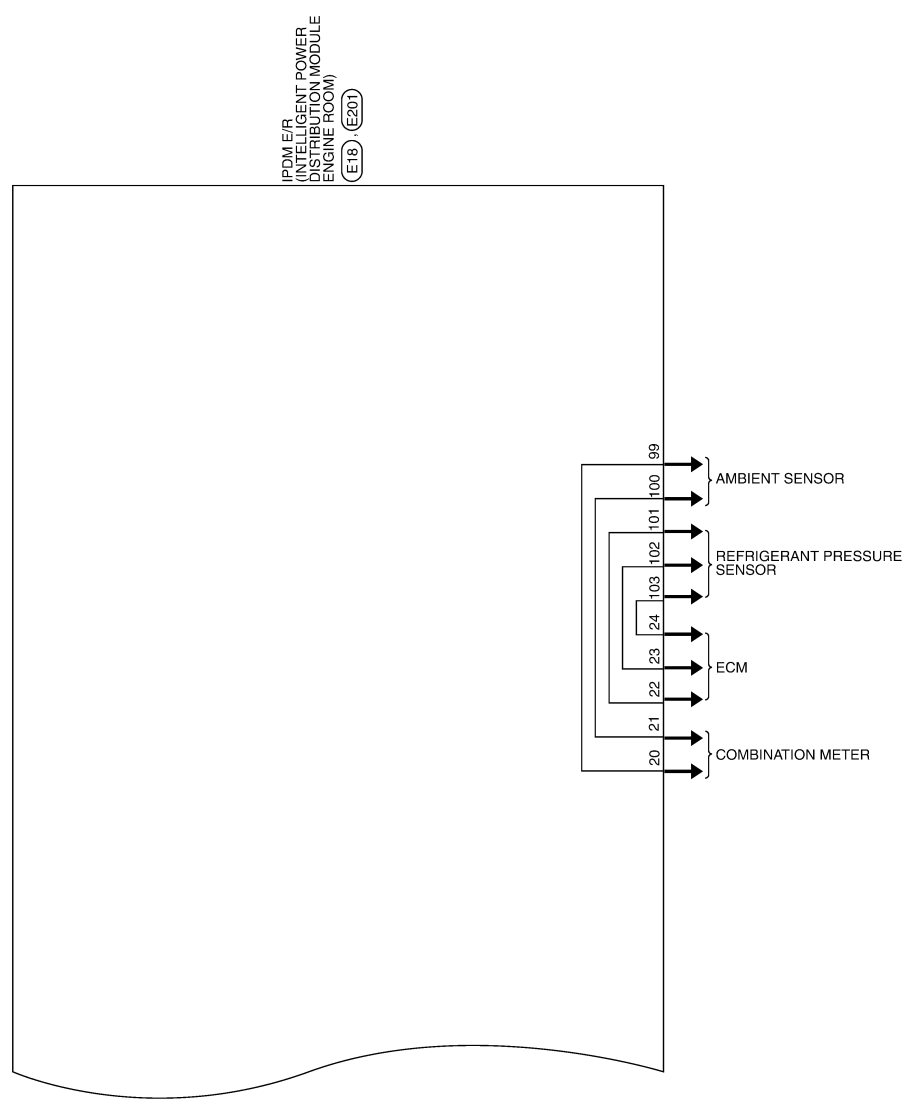

PCS

## IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) CONNECTORS

Connector No.	E1
Connector Name	JOINT CONNECTOR-E01
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	G	-
3	G	-

Connector No.	E4
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	B/W	-
2	L	-

Connector No.	E5
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
3	R	-

Connector No.	E16
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R	F/L_MAIN
2	L	F/L_USM

Connector No.	E17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
39	P	CAN-L
40	L	CAN-H
41	B	GND (SIGNAL)
42	SB	MOTOR_FAN_RLY_MID
43	G/B	DETENT_SW
44	W	HORN_RLY
45	L/O	HORN_SW
46	BR	START_CONT



# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< WIRING DIAGRAM >

[IPDM E/R]

Terminal No.	Color of Wire	Signal Name
23	B/R	PD_SENS_SIG-E/R
24	BR/W	PD_SENS_PWR-E/R
25	GR	ABS_ECU
26	—	—
27	W	IGN_SIGNAL
28	SB	PUSH_START_SW
29	—	—
30	BR	ECM (WITH CVT)
30	R	CLUTCH_I/L_SW (WITH M/T)
31	—	—
32	O/L	SL_CONDITION_1
33	G	SL_CONDITION_2
34	O	MOTOR_FAN_RLY_HI
35	P	MOTOR_FAN_LO
36	G	F/L_IGNSW
37	—	—
38	R/W	F/L_MOTOR_FAN

Terminal No.	Color of Wire	Signal Name
8	—	—
9	—	—
10	BR	ECM_VB
11	O	ESCL
12	B	GND (POWER)
13	SB	FUEL_PUMP
14	—	—
15	W	START_IG-E/R
16	L/Y	WIPER_AUTOSTOP
17	—	—
18	—	—
19	Y	BCM_IGNSW
20	L	AMB_SENS_GND-E/R
21	LG	AMB_SENS_SIG-E/R
22	W/R	PD_SENS_GND-E/R

Connector No.	E18
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

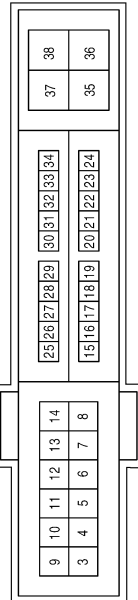

Terminal No.	Color of Wire	Signal Name
3	—	—
4	LG	FR_WIPER_LO
5	Y	FR_WIPER_HI
6	—	—
7	GR	TAIL/ILLUMI

Terminal No.	Color of Wire	Signal Name
83	R/Y	HEADLAMP_LO_RH
84	L	HEADLAMP_LO_LH
85	—	—
86	W/R	FR_FOG_LAMP_RH
87	L/Y	FR_FOG_LAMP_LH
88	R/W	WASHER_MTR
89	L/W	HEADLAMP_HI_RH
90	G	HEADLAMP_HI_LH

Connector No.	E200
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



ABMIA1925GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P


PCS

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< WIRING DIAGRAM >

[IPDM E/R]


Connector No.	E201
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
91	LG/R	CLEARANCE_RH
92	LG/B	CLEARANCE_LH
93	-	-
94	-	-
95	-	-
96	-	-
97	-	-
98	-	-

Terminal No.	Color of Wire	Signal Name
99	BR/W	AMB_SENS_GND-FEM
100	SB	AMB_SENS_SIG-FEM
101	O/L	PD_SENS_GND-FEM
102	R/B	PD_SENS_SIG-FEM
103	P	PD_SENS_PWR-FEM
104	-	-
105	-	-
106	-	-

Connector No.	F10
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

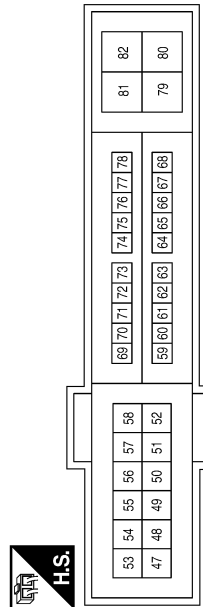

Terminal No.	Color of Wire	Signal Name
50	-	-
51	SB	INJECTOR_#1
52	Y	INJECTOR_#2
53	V	IGN_SOL (WITH QR25DE)
53	G	ENG_SOL (WITH VQ35DE)
54	GR	ETC
55	LG	ECM_BAT
56	R	O2_SENS_#1
57	O	O2_SENS_#2
58	BR	AT_ECU
59	-	-
60	-	-
61	-	-
62	-	-
63	-	-
64	-	-

Terminal No.	Color of Wire	Signal Name
65	-	-
66	-	-
67	-	-
68	-	-
69	SB	SSOF
70	G	MOTRLY
71	-	-
72	W	NPSW (WITH QR25DE)
72	BR	NPSW (WITH VQ35DE)
73	-	-
74	L	START_IG-EGI
75	LG	OIL_PRESSURE_SW
76	Y	ALT_C
77	GR	FPR
78	-	-
79	-	-
80	R	STARTER_MOTOR
81	-	-
82	-	-

Terminal No.	Color of Wire	Signal Name
47	-	-
48	W	A/C COMP
49	V	ENG_SOL (WITH QR25DE)
49	V	IGN_COIL (WITH VQ35DE)

ABMIA3843GB

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006392805

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS


#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution for Procedure without Cowl Top Cover

INFOID:000000006392806

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

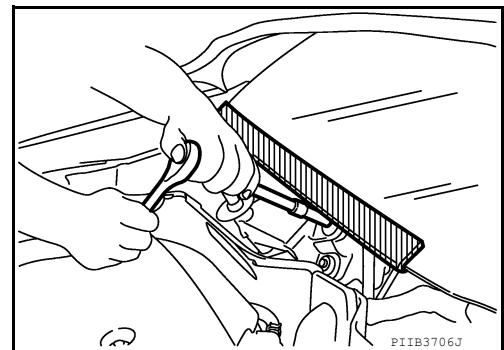

#### Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000006392807

#### **NOTE:**

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit.

If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

---

## OPERATION PROCEDURE

1. Connect both battery cables.

**NOTE:**

Supply power using jumper cables if battery is discharged.

2. Carry the Intelligent Key or insert it to the key slot and turn the push-button ignition switch to ACC position. (At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.
5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT.

## REMOVAL AND INSTALLATION

### IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

#### Removal and Installation


INFOID:000000006392808

**CAUTION:**


IPDM E/R integrated relays are not serviceable parts, and must not be removed from the unit.

#### REMOVAL


1. Disconnect the battery negative terminal.
2. Remove the IPDM E/R cover (1) while pressing the pawl (A) at the rear end of the IPDM E/R cover (1).

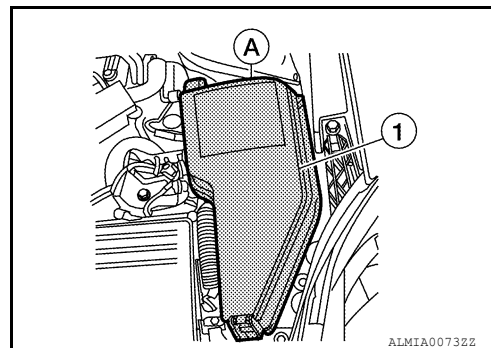

3. Disconnect the harness connectors from the IPDM E/R.

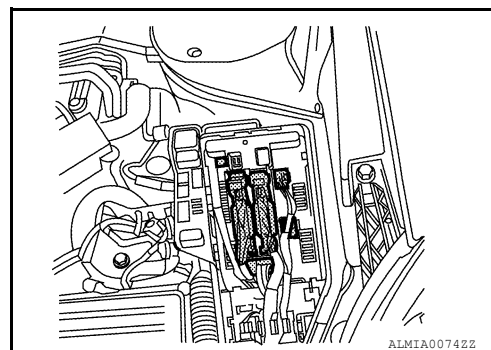

4. While depressing the tabs (A) remove the IPDM E/R (1) from the vehicle.

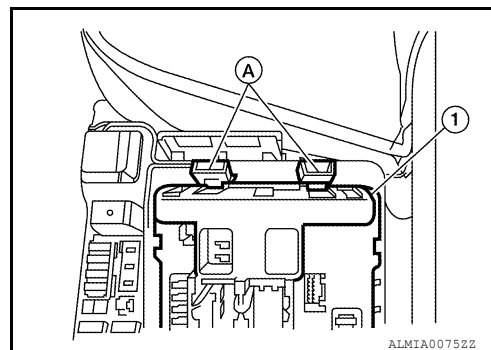

#### INSTALLATION

Installation is in the reverse order of removal.

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000006392809

#### OVERALL SEQUENCE

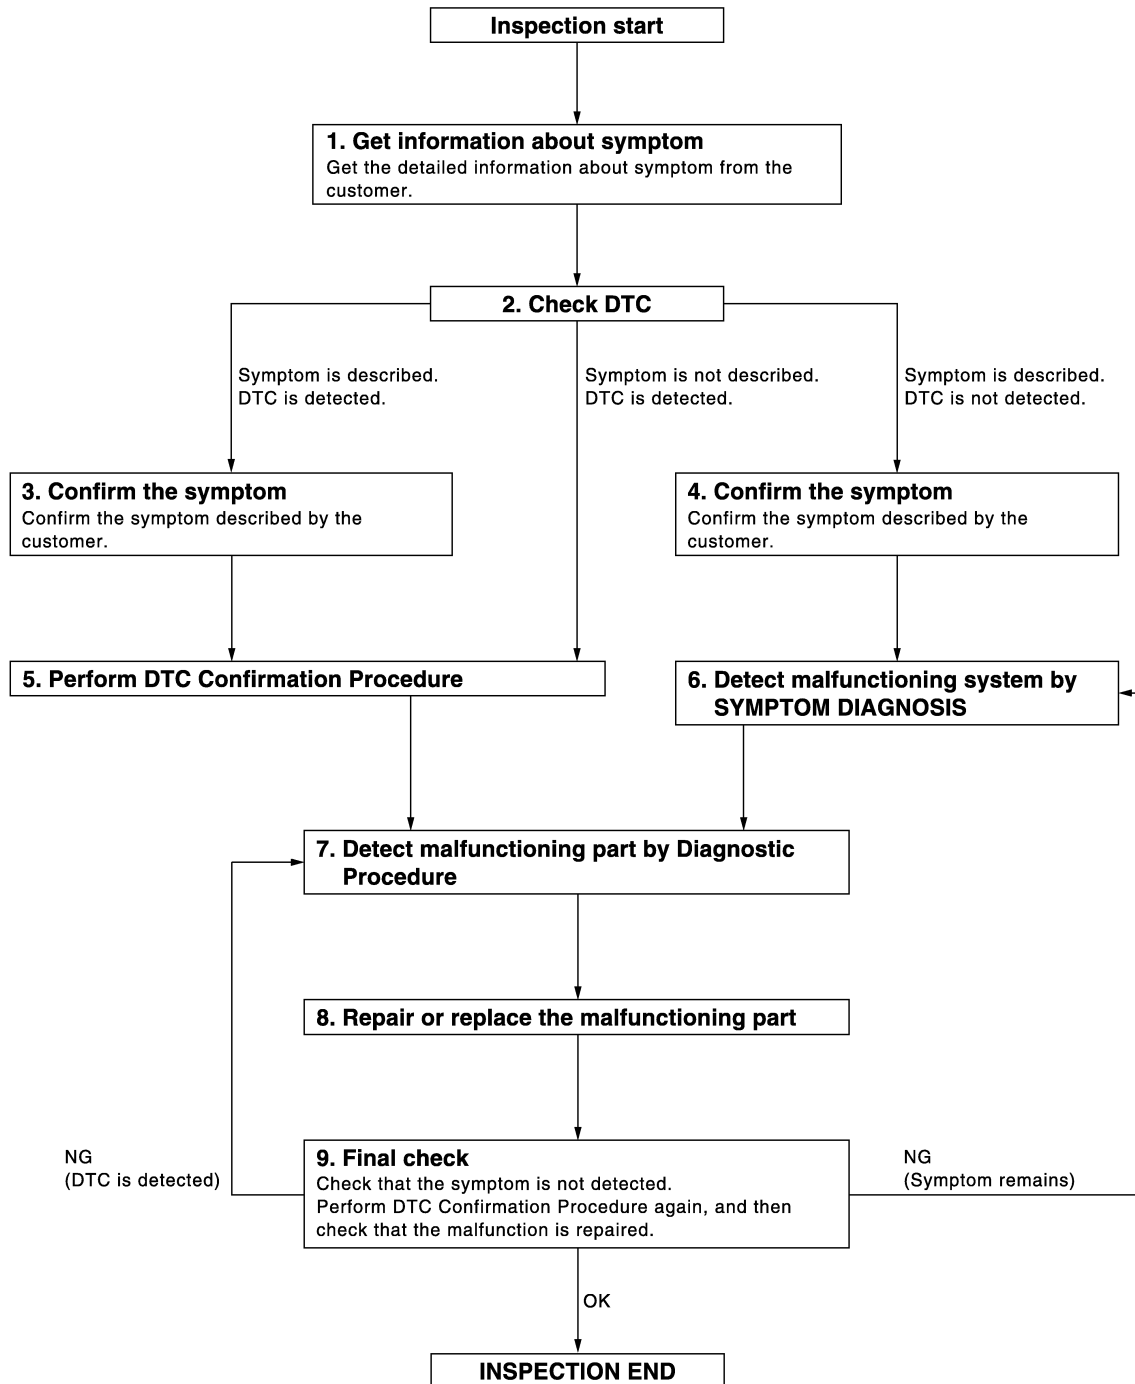

#### DETAILED FLOW

JMKIA3449GB

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]

## 1. GET INFORMATION FOR SYMPTOM

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2

## 2. CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is displayed.
  - Record DTC and freeze frame data (Print them out with CONSULT.)
  - Erase DTC.
  - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Is any symptom described and any DTC detected?

Symptom is described, DTC is displayed>>GO TO 3

Symptom is described, DTC is not displayed>>GO TO 4

Symptom is not described, DTC is displayed>>GO TO 5

## 3. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT to the vehicle in "DATA MONITOR" mode and check real time diagnosis results.

Verify relation ship between the symptom and the condition when the symptom is detected.

>> GO TO 5

## 4. CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.

Connect CONSULT to the vehicle in "DATA MONITOR" mode and check real time diagnosis results.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6

## 5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC Confirmation Procedure for the displayed DTC, and then check that DTC is detected again.

At this time, always connect CONSULT to the vehicle, and check diagnostic results in real time.

If two or more DTCs are detected, refer to [BCS-65, "DTC Inspection Priority Chart"](#) and determine trouble diagnosis order.

### NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC Confirmation Procedure is not included in Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check. If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC Confirmation Procedure.

Is DTC detected?

YES >> GO TO 7

NO >> Refer to [GI-42, "Intermittent Incident"](#).

## 6. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to [PCS-135, "Symptom Table"](#) based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

>> GO TO 7

## 7. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

### NOTE:

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

## DIAGNOSIS AND REPAIR WORKFLOW

### < BASIC INSPECTION >

### [POWER DISTRIBUTION SYSTEM]

The Diagnostic Procedure described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure.

#### Is malfunctioning part detected?

YES >> GO TO 8

NO >> Check voltage of related BCM terminals using CONSULT.

### 8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is displayed, erase it.

>> GO TO 9

### 9. FINAL CHECK

When DTC was detected in step 2, perform DTC Confirmation Procedure or Component Function Check again, and then check that the malfunction have been fully repaired.

When symptom was described from the customer, refer to confirmed symptom in step 3 or 4 and check that the symptom is not detected.

#### Is the inspection result normal?

YES >> Inspection End.

NO (DTC is detected)>>GO TO 7

NO (Symptom remains)>>GO TO 6

### Pre-Inspection for Multi-System Diagnostic

INFOID:000000006392810

The engine start function, door lock function, power distribution system and NATS-IVIS/NVIS are closely related to each other. Narrow down the system in question by performing this inspection to identify which system is malfunctioning. For example, the vehicle security system can operate only when the door lock and power distribution system are operating normally.

### 1.CHECK DOOR LOCK OPERATION

Check the door lock for normal operation with the Intelligent Key and door request switch.

Successful door lock operation with the Intelligent Key and request switch indicates that the remote keyless entry receiver and inside key antenna required for engine start are functioning normally.

#### Can the door be locked with the Intelligent Key and door request switch?

YES >> GO TO 2.

NO >> Refer to [DLK-186, "Symptom Table"](#) (coupe) or [DLK-420, "Symptom Table"](#) (sedan).

### 2.CHECK ENGINE STARTING

Check that the engine starts when the Intelligent Key is inserted into the key slot.

#### Does the engine start?

YES >> GO TO 3.

NO >> Refer to [SEC-214, "Symptom Table"](#) (coupe) or [SEC-437, "Symptom Table"](#) (sedan).

### 3.CHECK STEERING LOCK OPERATION

Check that the steering locks when operating the door switch after switching the power supply from ON position (or ACC position) to LOCK position.

If the door switch is malfunctioning, BCM cannot lock the steering. If BCM does not detect DTC, electronic steering column lock is normal.

#### Does steering lock?

YES >> GO TO 4.

NO >> Refer to [DLK-64, "Component Function Check"](#) (coupe) or [DLK-286, "Component Function Check"](#) (sedan).

### 4.CHECK POWER SUPPLY INDICATOR SWITCHING

Press push-button ignition switch and check that the position indicator switches from LOCK, through ACC to ON when steering is locked.



## DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]

Is each position indicator illuminating?

YES >> GO TO 5.

NO >> Refer to [PCS-79, "Component Function Check"](#).

### 5.CHECK VEHICLE SECURITY SYSTEM

Refer to [SEC-11, "Vehicle Security Operation Check"](#) (coupe) or [SEC-225, "Vehicle Security Operation Check"](#) (sedan).

Are the inspection results normal?

YES >> Inspection End.

NO >> Repair vehicle security system as necessary.

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

# POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

## SYSTEM DESCRIPTION

### POWER DISTRIBUTION SYSTEM

#### System Description

INFOID:000000006392811

#### INPUT/OUTPUT SIGNAL CHART

Switch	Input Signal to BCM	BCM system	Actuator
Push-button ignition switch	Push switch	Power distribution system	<ul style="list-style-type: none"><li>• Ignition relay (IPDM E/R)</li><li>• Ignition relay (fuse block)</li><li>• ACC relay</li><li>• Blower relay</li></ul>
CVT shift selector (CVT models)	P range		
Transmission range switch (CVT models)	N, P range		
Clutch interlock switch (M/T models)	Clutch ON/OFF		
Stop lamp switch	Brake ON/OFF		

#### SYSTEM DESCRIPTION

- PDS (POWER DISTRIBUTION SYSTEM) is the system that BCM controls with the operation of the push-button ignition switch and performs the power distribution to each power circuit. This system is used instead of the mechanical power supply changing mechanism with the operation of the conventional key cylinder.
- The push-button ignition switch can be operated when Intelligent Key is in the following condition. Refer to Engine Start Function for details.
  - Intelligent Key is in the detection area of the interior antenna
  - Insert Intelligent Key in to the key slot
- The push-button ignition switch operation is input to BCM as a signal. BCM changes the power supply position according to the status and operates the following relays to supply power to each power circuit.
  - Ignition relay (inside IPDM E/R)
  - Ignition relay (inside fuse block)
  - ACC relay
  - Blower fan relay

#### NOTE:

The engine switch operation changes due to the conditions of brake pedal, CVT selector lever and vehicle speed.

- The power supply position can be confirmed with the lighting of the indicators near the push-button ignition switch.

#### PUSH-BUTTON IGNITION SWITCH OPERATION PROCEDURE

The power supply position changing operation can be performed with the following operation.

#### NOTE:

- When an Intelligent Key is within the detection area of inside key antenna and when it is inserted in to the key slot, it is equivalent to the operations below.
- When starting the engine, the BCM monitors under the engine start conditions,
  - Brake pedal operating condition (CVT models)
  - CVT selector lever position (CVT models)
  - Clutch pedal operating condition (M/T models)
  - Vehicle speed
- Unless each start condition is fulfilled, the engine will not respond regardless of how many times the engine switch is pressed. At that time, illumination repeats the position in the order of LOCK→ACC→ON→OFF.

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Brake pedal (CVT)/clutch pedal (M/T)	CVT selector lever position	
LOCK → ACC	Not depressed	Any position	1
LOCK → ACC → ON	Not depressed	Any position	2
LOCK → ACC → ON → OFF	Not depressed	Any position	3

# POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Brake pedal (CVT)/clutch pedal (M/T)	CVT selector lever position	
LOCK → START ACC → START ON → START (Engine start)	Depressed	P or N position (*1)	1 [If the switch is pressed once, the engine starts from any power supply position (LOCK, ACC, and ON)]
Engine is running → OFF (Engine stop)	—	Any position	1
Engine is running → ACC (Engine stop)	—	Any position other than P (*2)	1
Engine stall return operation while driving	—	N position	1

\*1: When the CVT selector lever position is N position, the engine start condition is different according to the vehicle speed.


- At vehicle speed of 4 km/h or less, the engine can start only when the brake pedal is depressed.
- At vehicle speed of 4 km/h or more, the engine can start even if the brake pedal is not depressed. (It is the same as "Engine stall return operation while driving".)

\*2: When the CVT selector lever position is in any position other than P position and when the vehicle speed is 5 km/h or more, the engine stop condition is different.

- Press and hold the push-button ignition switch for 2 seconds or more. (When the push-button ignition switch is pressed for too short a time, the operation may be invalid, so properly press and hold to prevent the incorrect operation.)
- Press the push-button ignition switch 3 times or more within 1.5 seconds. (Emergency stop operation)

## Component Parts Location

INFOID:000000006392812

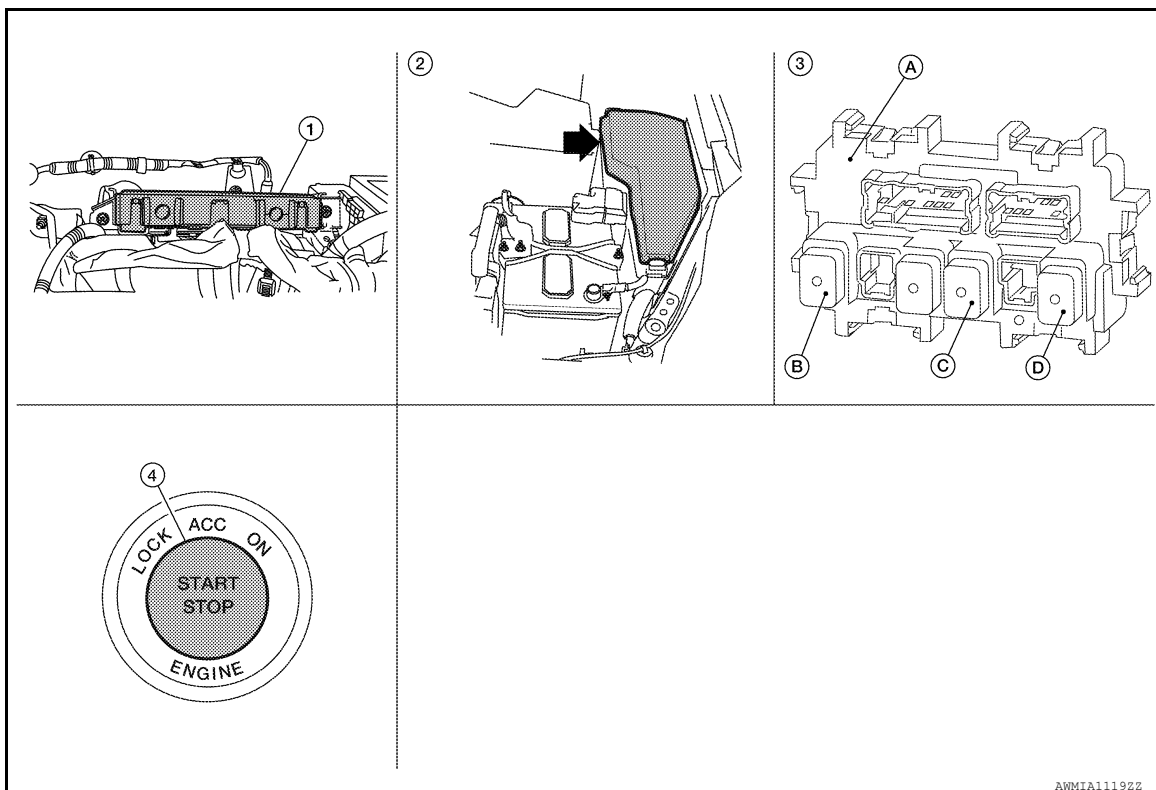

AWMIA1119ZZ

# POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

1. BCM M16, M17, M18, M19, M21 (view with instrument panel removed)
  2. IPDM E/R E16, E17, E18 (contains IGN relay-1)
  3. A. Fuse block (J/B) M3, M4, M5, E6  
B. IGN relay-2  
C. ACC relay  
D. Blower motor relay
  4. Push-button ignition switch M38
- ⇐: Front

## Component Description

INFOID:000000006392813

BCM	Reference
IPDM E/R	<a href="#">PCS-4</a>
Ignition relay-1 (Built-in IPDM E/R)	<a href="#">PCS-73</a>
Ignition relay-2 (Built-in fuse block)	<a href="#">PCS-70</a>
Accessory relay	<a href="#">PCS-62</a>
Blower relay	<a href="#">PCS-67</a>
Stop lamp	<a href="#">SEC-73</a>
Transmission range switch	<a href="#">SEC-308</a>
Push-button ignition switch	<a href="#">SEC-294</a>

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

#### COMMON ITEM : Diagnosis Description

INFOID:000000006392814

#### BCM CONSULT FUNCTION

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF-DIAG RESULTS	Displays the diagnosis results judged by BCM.
CAN DIAG SUPPORT MNTR	Monitors the reception status of CAN communication viewed from BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.
ECU IDENTIFICATION	The BCM part number is displayed.
CONFIGURATION	This function is not used even though it is displayed.

#### SYSTEM APPLICATION

BCM can perform the following functions for each system.

##### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

System	Sub system selection item	Diagnosis mode		
		WORK SUPPORT	DATA MONITOR	ACTIVE TEST
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP		×	×
Remote keyless entry system	MULTI REMOTE ENT		×	
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
Air conditioner	AIR CONDITONER		×	
Intelligent Key system	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
BCM	BCM	×		
Immobilizer	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	
Trunk open	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	AIR PRESSURE MONITOR	×	×	×

#### COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000006920150

#### ECU IDENTIFICATION

Displays the BCM part No.

#### SELF-DIAG RESULT

Refer to [BCS-67, "DTC Index"](#).

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

## INTELLIGENT KEY

### INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)

INFOID:000000006920151

#### WORK SUPPORT

Monitor item	Description
CONFIRM KEY FOB ID	It can be checked whether Intelligent Key ID code is registered or not in this mode.
AUTO LOCK SET	Auto door lock time can be changed in this mode. <ul style="list-style-type: none"><li>• MODE1: 1 minute</li><li>• MODE2: 5 minutes</li><li>• MODE3: 30 seconds</li><li>• MODE4: 2 minutes</li></ul>
LOCK/UNLOCK BY I-KEY	Door lock/unlock function by door request switch mode can be changed to operate (ON) or not operate (OFF) in this mode.
ENGINE START BY I-KEY	Engine start function mode can be changed to operate (ON) or not operate (OFF) with this mode.
TRUNK/GLASS HATCH OPEN	Buzzer reminder function mode by trunk request switch can be changed to operate (ON) or not operate (OFF) with this mode.
PANIC ALARM SET	Panic alarm button pressing time on Intelligent Key remote control button can be selected from the following with this mode. <ul style="list-style-type: none"><li>• MODE1: 0.5 sec.</li><li>• MODE2: Non-operation</li><li>• MODE3: 1.5 sec.</li></ul>
PW DOWN SET	Unlock button pressing time on Intelligent Key button can be selected from the following with this mode. <ul style="list-style-type: none"><li>• MODE1: 3 sec.</li><li>• MODE2: Non-operation</li><li>• MODE3: 5 sec.</li></ul>
TRUNK OPEN DELAY	Trunk button pressing time on Intelligent Key button can be selected from the following with this mode. <ul style="list-style-type: none"><li>• MODE1: 0.5 sec.</li><li>• MODE2: 1.5 sec.</li><li>• MODE3: OFF: No delay</li></ul>
LO- BATT OF KEY FOB WARN	Intelligent Key low battery warning mode can be changed to operate (ON) or not operate (OFF) with this mode.
ANTI KEY LOCK IN FUNCTI	Key reminder function mode can be changed to operate (ON) or not operate (OFF) with this mode.
HAZARD ANSWER BACK	Hazard reminder function mode can be selected from the following with this mode. <ul style="list-style-type: none"><li>• LOCK ONLY: Door lock operation only</li><li>• UNLOCK ONLY: Door unlock operation only</li><li>• LOCK/UNLOCK: Lock/unlock operation</li><li>• OFF: Non-operation</li></ul>
ANS BACK I-KEY LOCK	Buzzer reminder function (lock operation) mode by door request switch (driver side and passenger side) can be selected from the following with this mode. <ul style="list-style-type: none"><li>• Horn chirp: Sound horn</li><li>• Buzzer: Sound Intelligent Key warning buzzer</li><li>• OFF: Non-operation</li></ul>
ANS BACK I-KEY UNLOCK	Buzzer reminder function (unlock operation) mode by door request switch can be changed to operate (ON) or not operate (OFF) with this mode.
SHORT CRANKING OUTPUT	Starter motor can be forcibly activated.
INSIDE ANT DIAGNOSIS	This function allows inside key antenna self-diagnosis.
HORN WITH KEYLESS LOCK	Horn reminder function mode by Intelligent Key button can be changed to operate (ON) or not operate (OFF) with this mode.

#### SELF-DIAG RESULT

Refer to [BCS-67. "DTC Index"](#).

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

## DATA MONITOR

Monitor Item	Condition
REQ SW-DR	Indicates [ON/OFF] condition of door request switch (driver side).
REQ SW-AS	Indicates [ON/OFF] condition of door request switch (passenger side).
REQ SW-BD/TR	Indicates [ON/OFF] condition of trunk opener request switch.
PUSH SW	Indicates [ON/OFF] condition of push button ignition switch.
CLUTCH SW	Indicates [ON/OFF] condition of clutch switch.
IGN RLY2 -F/B	Indicates [ON/OFF] condition of ignition relay 2.
ACC RLY-F/B	Indicates [ON/OFF] condition of accessory relay.
BRAKE SW 1	Indicates [ON/OFF] condition of brake switch.
BRAKE SW 2	Indicates [ON/OFF] condition of brake switch.
DETE/CANCL SW	Indicates [ON/OFF] condition of P position.
SFT PN/N SW	Indicates [ON/OFF] condition of P or N position.
S/L -LOCK	Indicates [ON/OFF] condition of steering lock (LOCK).
S/L -UNLOCK	Indicates [ON/OFF] condition of steering lock (UNLOCK).
S/L RELAY-F/B	Indicates [ON/OFF] condition of ignition switch.
UNLK SEN-DR	Indicates [ON/OFF] condition of driver door UNLOCK status.
PUSH SW -IPDM	Indicates [ON/OFF] condition of push button ignition switch.
IGN RLY1 -F/B	Indicates [ON/OFF] condition of ignition relay 1.
DETE SW -IPDM	Indicates [ON/OFF] condition of P position.
SFT PN -IPDM	Indicates [ON/OFF] condition of P or N position.
SFT P -MET	Indicates [ON/OFF] condition of P position.
SFT N -MET	Indicates [ON/OFF] condition of N position.
ENGINE STATE	Indicates [STOP/STALL/CRANK/RUN] condition of engine states.
S/L LOCK-IPDM	Indicates [ON/OFF] condition of steering lock (LOCK) request.
S/L UNLOCK-IPDM	Indicates [ON/OFF] condition of steering lock (UNLOCK) request.
S/L RELAY-REQ	Indicates [ON/OFF] condition of steering lock relay.
VEH SPEED 1	Display the vehicle speed signal received from combination meter by numerical value [Km/h].
VEH SPEED 2	Display the vehicle speed signal received from ABS or VDC or CVT by numerical value [Km/h].
DOOR STAT-DR	Indicates [LOCK/READY/UNLK] condition of driver side door status.
DOOR STAT-AS	Indicates [LOCK/READY/UNLK] condition of passenger side door status.
ID OK FLAG	Indicates [SET/RESET] condition of key ID.
PRMT ENG STRT	Indicates [SET/RESET] condition of engine start possibility.
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.
RKE OPE COUN1	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
TRNK/HAT MNTR	Indicates [ON/OFF] condition of trunk lid.
RKE-LOCK	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
RKE-UNLOCK	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
RKE-TR/BD	Indicates [ON/OFF] condition of TRUNK OPEN signal from Intelligent Key.
RKE-PANIC	Indicates [ON/OFF] condition of PANIC button of Intelligent Key.
RKE-P/W OPEN	Indicates [ON/OFF] condition of P/W DOWN signal from Intelligent Key.
RKE-MODE CHG	Indicates [ON/OFF] condition of MODE CHANGE signal from Intelligent Key.
PRMT RKE STRT	Indicates [ON/OFF] condition of ENGINE START signal from Intelligent Key.

# DIAGNOSIS SYSTEM (BCM)

## < SYSTEM DESCRIPTION >

## [POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition
RKE OPE COUN2	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
REVERSE SW	Indicates [ON/OFF] condition of R position.

## ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check interior room lamp operation. The interior room lamp is activated after "ON" on CONSULT screen is touched.
PW REMOTO DOWN SET	This test is able to check power window down operation. The power window down is activated after "ON" on CONSULT screen is touched.
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation. The Intelligent Key warning buzzer is activated after "ON" on CONSULT screen is touched.
INSIDE BUZZER	This test is able to check warning chime in combination meter operation. <ul style="list-style-type: none"> <li>Take away warning chime sounds when "TAKE OUT" on CONSULT screen is touched.</li> <li>Key warning chime sounds when "KEY" on CONSULT screen is touched.</li> <li>OFF position warning chime sounds when "KNOB" on CONSULT screen is touched.</li> </ul>
INDICATOR	This test is able to check warning lamp operation. <ul style="list-style-type: none"> <li>"KEY" Warning lamp illuminates when "KEY ON" on CONSULT screen is touched.</li> <li>"KEY" Warning lamp blinks when "KEY IND" on CONSULT screen is touched.</li> </ul>
INT LAMP	This test is able to check interior room lamp operation. The interior room lamp is activated after "ON" on CONSULT screen is touched.
LCD	This test is able to check meter display information <ul style="list-style-type: none"> <li>Engine start information displays when "BP N" on CONSULT screen is touched.</li> <li>Engine start information displays when "BP I" on CONSULT screen is touched.</li> <li>Key ID warning displays when "ID NG" on CONSULT screen is touched.</li> <li>P position warning displays when "SFT P" on CONSULT screen is touched.</li> <li>Intelligent Key insert information displays when "INSRT" on CONSULT screen is touched.</li> <li>Intelligent Key low battery warning displays when "BATT" on CONSULT screen is touched.</li> <li>Take away through window warning displays when "NO KY" on CONSULT screen is touched.</li> <li>Take away warning display when "OUTKEY" on CONSULT screen is touched.</li> <li>OFF position warning display when "LK WN" on CONSULT screen is touched.</li> </ul>
FLASHER	This test is able to check hazard warning lamp operation. The hazard warning lamps are activated after "LH/RH/OFF" on CONSULT screen is touched.
HORN	This test is able to check horn operation. The horn is activated after "ON" on CONSULT screen is touched.
P RANGE	This test is able to check CVT shift selector power supply CVT shift selector power is supplied when "ON" on CONSULT screen is touched.
ENGINE SW ILLUMI	This test is able to check push-ignition switch illumination operation. Push-ignition switch illumination illuminates when "ON" on CONSULT screen is touched.
LOCK INDICATOR	This test is able to check LOCK indicator in push-ignition switch operation. LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT screen is touched.
ACC INDICATOR	This test is able to check ACC indicator in push-ignition switch operation. ACC indicator in push-ignition switch illuminates when "ON" on CONSULT screen is touched.
IGNITION ON IND	This test is able to check ON indicator in push-ignition switch operation. ON indicator in push-ignition switch illuminates when "ON" on CONSULT screen is touched.
KEY SLOT ILLUMI	This test is able to check key slot illumination operation. Key slot illumination blinks when "ON" on CONSULT screen is touched.
TRUNK/BACK DOOR	This test is able to check trunk opener actuator open operation. This actuator opens when "OPEN" on CONSULT screen is touched.



# U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## DTC/CIRCUIT DIAGNOSIS

### U1000 CAN COMM CIRCUIT

#### Description

INFOID:0000000006392817

Refer to [LAN-6, "System Description"](#).

#### DTC Logic

INFOID:0000000006392818

#### DTC DETECTION LOGIC

CONSULT display description	DTC Detection Condition	Possible cause
CAN COMM CIRCUIT [U1000]	When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more	In CAN communication system, any item (or items) of the following listed below is malfunctioning. <ul style="list-style-type: none"><li>• Transmission</li><li>• Receiving (ECM)</li><li>• Receiving (VDC/TCS/ABS)</li><li>• Receiving (METER/M&amp;A)</li><li>• Receiving (TCM)</li><li>• Receiving (IPDM E/R)</li></ul>

#### Diagnosis Procedure

INFOID:0000000006392819

#### 1.PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 second or more.
2. Check "Self Diagnostic Result".

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).  
NO >> Refer to [GI-42, "Intermittent Incident"](#).

PCS

## U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

### U1010 CONTROL UNIT (CAN)

#### DTC Logic

INFOID:000000006392820

#### DTC DETECTION LOGIC

CONSULT display description	DTC Detection Condition	Possible cause
CAN COMM CIRCUIT [U1010]	BCM detected internal CAN communication circuit malfunction.	BCM

#### Diagnosis Procedure

INFOID:000000006392821

##### 1. REPLACE BCM

When DTC U1010 is detected, replace BCM.

>> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).

## B2553 IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

### B2553 IGNITION RELAY

#### Description

INFOID:000000006392822

BCM turns ON the following relays to ignition power supply to each ECU when the ignition switch is turned ON.

- Ignition relay-1 (inside IPDM E/R)
- Ignition relay-2 (inside fuse block)
- Blower fan motor relay

BCM checks any ignition relay ON request for consistency with the actual ignition relay operation status.

#### DTC Logic

INFOID:000000006392823

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2553	IGNITION RELAY	BCM detects a difference of signal for 2 seconds or more between the following information. <ul style="list-style-type: none"><li>• Ignition relay-2 (fuse block) ON/OFF operation</li><li>• Ignition relay-2 (fuse block) feedback.</li></ul>	<ul style="list-style-type: none"><li>• Harness or connectors (ignition relay-2 feedback circuit is open or short)</li></ul>

#### DTC CONFIRMATION PROCEDURE

##### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 2 seconds.
  - CVT selector lever is in the P or N position.
  - Release brake pedal.
2. Check "Self diagnostic result" with CONSULT.

##### Is DTC detected?

- YES >> Go to [PCS-59, "Diagnosis Procedure"](#).  
NO >> Inspection End.

#### Diagnosis Procedure


INFOID:000000006392824

Regarding Wiring Diagram information, refer to [PCS-121, "Wiring Diagram - Coupe"](#) or [PCS-128, "Wiring Diagram - Sedan"](#).

##### 1. CHECK IGNITION RELAY FEEDBACK INPUT SIGNAL

Check voltage between BCM harness connector and ground under the following conditions.

Terminals		Condition		Voltage (V)
(+)	(-)			
BCM				
Connector	Terminal			
M18	31	Ignition switch	OFF ON	0 Battery voltage

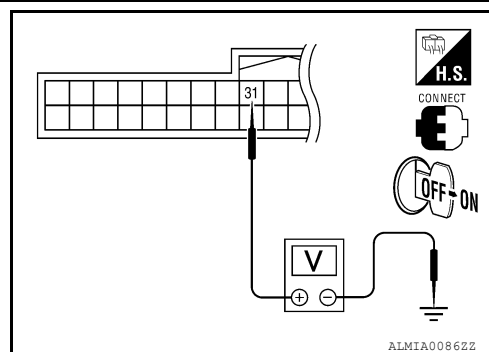

##### Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).  
NO >> GO TO 2

##### 2. CHECK IGNITION RELAY FEEDBACK CIRCUIT


## B2553 IGNITION RELAY

### < DTC/CIRCUIT DIAGNOSIS >

### [POWER DISTRIBUTION SYSTEM]

1. Turn ignition switch OFF.
2. Disconnect BCM and fuse block (J/B).
3. Check continuity between BCM harness connector and fuse block harness connector.

BCM		Fuse block		Continuity
Connector	Terminal	Connector	Terminal	
M18 (A)	31	M3 (B)	2N	Yes

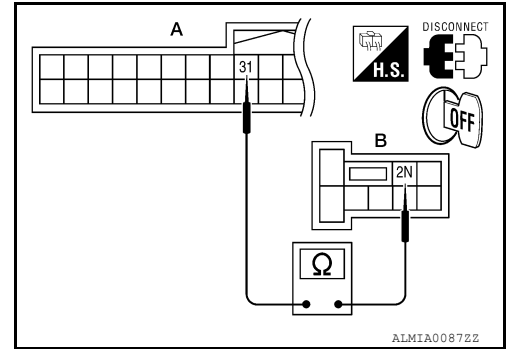


4. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M18	31		No

Is the inspection result normal?

- YES >> GO TO 3  
NO >> Repair or replace harness.

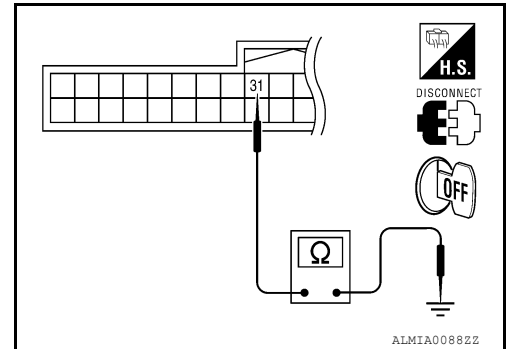

### 3. CHECK INTERMITTENT INCIDENT

Refer to [GI-42. "Intermittent Incident"](#).

>> Inspection End.

## B260A IGNITION RELAY

## Description

INFOID:000000006392825

BCM turns ON the following relays to ignition power supply to each ECU when the ignition switch is turned ON.

- Ignition relay-1 (inside IPDM E/R)
- Ignition relay-2 (inside fuse box)
- Blower fan motor relay

BCM checks any ignition relay ON request for consistency with the actual ignition relay operation status.

## DTC Logic

INFOID:000000006392826

## DTC DETECTION LOGIC

**NOTE:**

- If DTC B260A is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-57, "DTC Logic"](#).
- If DTC B260A is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [PCS-58, "DTC Logic"](#).
- If DTC B260A is displayed with DTC B261A, first perform the trouble diagnosis for DTC B261A. Refer to [PCS-74, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B260A	IGNITION RELAY	BCM detects a difference of signal for 2 second or more between the following information. <ul style="list-style-type: none"> <li>• Ignition relay-1 (ON/OFF) operation</li> <li>• Ignition relay-1 feedback</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (Ignition relay-1 operation circuit is open or shorted.)</li> </ul>

## DTC CONFIRMATION PROCEDURE

**1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON under the following conditions, and wait for at least 2 seconds.
  - CVT selector lever is in the P or N position.
  - Release the brake pedal.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-61, "Diagnosis Procedure"](#).  
 NO >> Inspection End.

## Diagnosis Procedure

INFOID:000000006392827

**1. CHECK DTC WITH IPDM E/R**

Check "Self diagnostic result" with CONSULT. Refer to [PCS-29, "DTC Index"](#).

Is DTC detected?

- YES >> Replace IPDM E/R. Refer to [PCS-45, "Removal and Installation"](#).  
 NO >> GO TO 2

**2. CHECK INTERMITTENT INCIDENT**

Refer to [GI-42, "Intermittent Incident"](#).

>> Inspection End.

## B2611 ACC RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

### B2611 ACC RELAY

#### Description

INFOID:000000006392828

BCM turns ON the ACC relay to supply ACC power to each ECU when the power supply position changes to ACC.

BCM check ACC relay ON request for consistency with the actual ACC relay operation status.

#### DTC Logic

INFOID:000000006392829

#### DTC DETECTION LOGIC

##### NOTE:

- If DTC B2611 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-57, "DTC Logic"](#).
- If DTC B2611 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [PCS-58, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2611	ACC RELAY	BCM detects a difference of signal for 2 seconds or more between the following information. <ul style="list-style-type: none"><li>• ACC relay ON/OFF operation</li><li>• ACC relay feedback.</li></ul>	<ul style="list-style-type: none"><li>• Harness or connectors (ACC relay feed back circuit is open or shorted)</li></ul>

#### DTC CONFIRMATION PROCEDURE

##### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the power supply position to ACC under the following conditions, and wait for at least 2 seconds.
  - CVT selector lever is in P or N position
  - Brake not depressed
2. Check "Self diagnostic result" with CONSULT.

##### Is DTC detected?

- YES >> Go to [PCS-62, "Diagnosis Procedure"](#).  
NO >> Inspection End.

#### Diagnosis Procedure


INFOID:000000006392830

Regarding Wiring Diagram information, refer to [PCS-121, "Wiring Diagram - Coupe"](#) or [PCS-128, "Wiring Diagram - Sedan"](#).

##### 1. CHECK ACC RELAY FEED BACK INPUT SIGNAL

Check voltage between BCM harness connector and ground under the following conditions.

Terminals		Condition	Voltage (V)
(+)	(-)		
BCM			
Connector	Terminal		
M18	30	Ignition switch	OFF ACC 0 Battery voltage

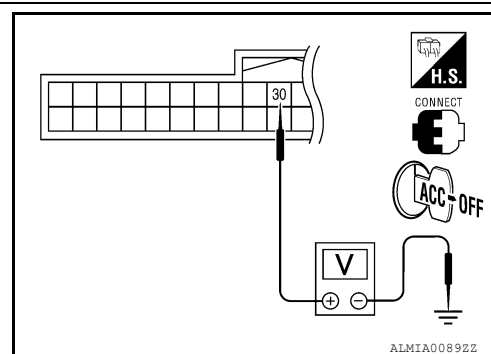

##### Is the inspection result normal?

- YES >> GO TO 5  
NO >> GO TO 2

# B2611 ACC RELAY


< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## 2. CHECK ACC RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect ACC relay.
3. Check voltage between ACC relay harness connector and ground.

Terminals		Voltage (V)
(+)	(-)	
ACC relay	Ground	
Terminal		
3		Battery voltage

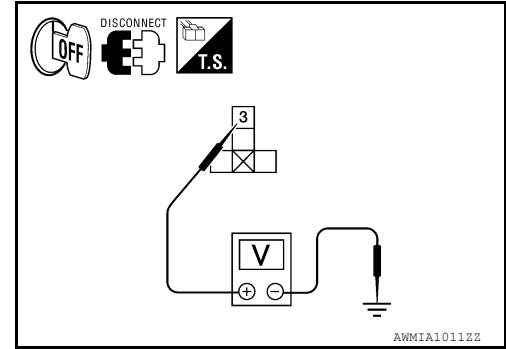

Is the inspection result normal?

- YES >> GO TO 3  
NO >> Repair or replace harness.

## 3. CHECK FUSE

Check 10A fuse [No. 19, located in the fuse block (J/B)].

Is the inspection result normal?

- YES >> GO TO 4  
NO >> Replace fuse.


## 4. CHECK ACC RELAY FEEDBACK CIRCUIT

1. Disconnect BCM harness connector.
2. Check continuity between ACC relay harness connector (A) and BCM harness connector (B).

ACC relay	BCM		Continuity
Terminal	Connector	Terminal	
5	M18	30	Yes

3. Check continuity between ACC relay harness connector and ground.

ACC relay	Ground	Continuity
Terminal		
5		No

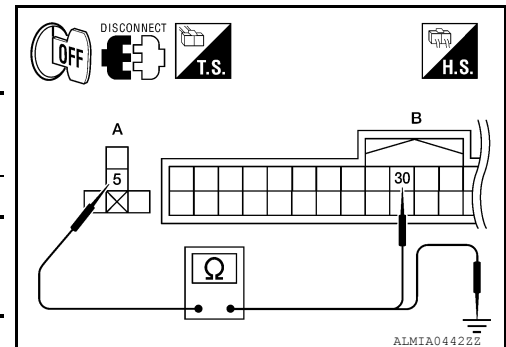

Is the inspection result normal?

- YES >> GO TO 5  
NO >> Repair or replace harness.

## 5. CHECK INTERMITTENT

Refer to [GI-42. "Intermittent Incident"](#).

>> Inspection End.

## B2614 ACC RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

### B2614 ACC RELAY CIRCUIT

#### Description

INFOID:000000006392831

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.

BCM checks the power supply position internally.

#### DTC Logic

INFOID:000000006392832

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2614	ACC relay circuit	An immediate operation of ACC relay is requested by BCM, but there is no response for more than 1 second.	<ul style="list-style-type: none"><li>• Harness or connectors (ACC relay circuit is open or shorted)</li><li>• ACC relay</li></ul>

#### DTC CONFIRMATION PROCEDURE

##### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the power supply position to ACC under the following conditions, and wait for at least 1 second.
  - CVT selector lever is in the P or N position.
  - Release the brake pedal.
2. Check "Self diagnostic result" with CONSULT.

##### Is DTC detected?

YES >> Go to [PCS-64, "Diagnosis Procedure"](#).

NO >> Inspection End.

#### Diagnosis Procedure

INFOID:000000006392833

Regarding Wiring Diagram information, refer to [PCS-121, "Wiring Diagram - Coupe"](#) or [PCS-128, "Wiring Diagram - Sedan"](#).

##### 1. CHECK ACCESSORY RELAY POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect accessory relay.
3. Check voltage between accessory relay harness connector and ground under the following conditions.


Accessory relay	Ground	Condition		Voltage (V)
Terminal				
2	Ground	Ignition	OFF	0
			ACC	Battery voltage

##### Is the inspection result normal?

YES >> GO TO 3

NO >> GO TO 2

##### 2. CHECK ACCESSORY RELAY POWER SUPPLY CIRCUIT

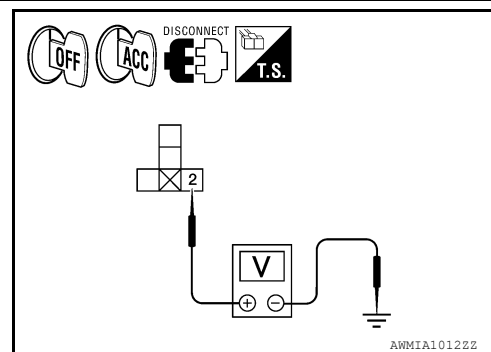



## B2614 ACC RELAY CIRCUIT


### [POWER DISTRIBUTION SYSTEM]

#### < DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect BCM harness connector.
3. Check continuity between accessory relay harness connector (A) and BCM harness connector (B).

Accessory relay		BCM		Continuity
Terminal	Connector	Terminal	Connector	
2	M19	83		Yes

4. Check continuity between accessory relay harness connector and ground.

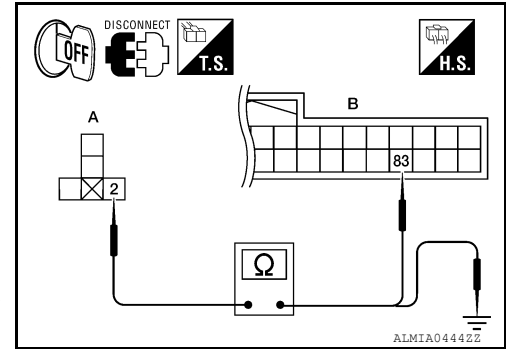

Accessory relay		Ground	Continuity
Terminal	Connector		
2		Ground	No

Is the inspection result normal?

- YES >> GO TO 6  
NO >> Repair or replace harness.

### 3. CHECK ACCESSORY RELAY GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between accessory relay harness connector and ground.

Accessory relay		Ground	Continuity
Terminal	Connector		
1		Ground	Yes

Is the inspection result normal?

- YES >> GO TO 4  
NO >> Repair or replace harness.

### 4. CHECK ACCESSORY RELAY POWER SUPPLY CIRCUIT-2

Check voltage between accessory relay harness connector and ground.

Accessory relay		Ground	Voltage (V)
Terminal	Connector		
3		Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 5  
NO >> Repair or replace harness.

### 5. CHECK ACCESSORY RELAY

Refer to [PCS-66, "Component Inspection \(Accessory Relay\)"](#).



YES or NO

- YES >> GO TO 6  
NO >> Replace accessory relay.

### 6. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> Inspection End.

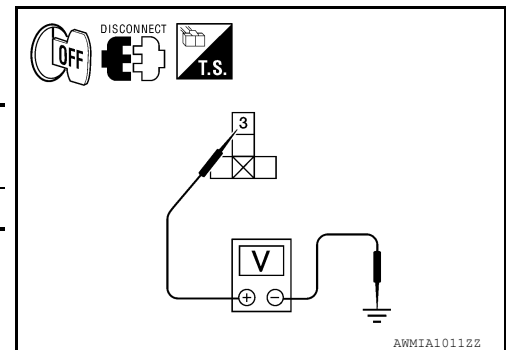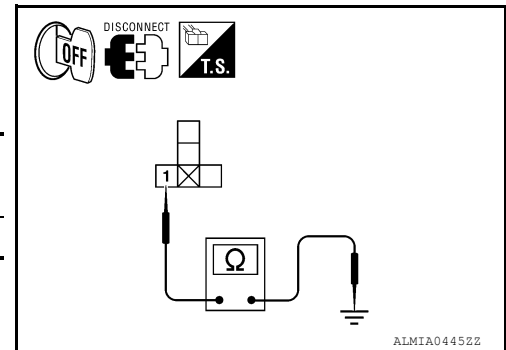

## B2614 ACC RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

### Component Inspection (Accessory Relay)

INFOID:000000006392834


#### 1. CHECK ACCESSORY RELAY

1. Turn ignition switch OFF.
2. Remove accessory relay.
3. Check the continuity between accessory relay terminals under the following conditions.

Terminals	Condition	Continuity
3 and 5	12V direct current supply between terminals 1 and 2	Yes
	No current supply	No

Is the inspection result normal?

- YES >> Inspection End.  
NO >> Replace accessory relay

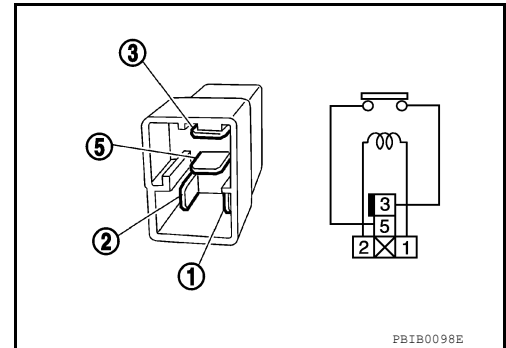

# B2615 BLOWER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## B2615 BLOWER RELAY CIRCUIT

### Description

INFOID:000000006392835

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.

BCM checks the power supply position internally.

### DTC Logic

INFOID:000000006392836

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2615	Blower relay circuit	BCM detects a difference of signal for 1 second or more between the following information. <ul style="list-style-type: none"><li>• Blower relay ON/OFF request</li><li>• Blower relay feedback</li></ul>	<ul style="list-style-type: none"><li>• Harness or connectors (Blower relay circuit is open or shorted)</li><li>• Blower relay</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.
  - CVT selector lever is in the P or N position.
  - Release brake pedal.
2. Check "Self diagnostic result" with CONSULT.

#### Is DTC detected?

- YES >> Go to [PCS-67, "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:000000006392837

Regarding Wiring Diagram information, refer to [PCS-121, "Wiring Diagram - Coupe"](#) or [PCS-128, "Wiring Diagram - Sedan"](#).

#### 1. CHECK BLOWER RELAY POWER SUPPLY


1. Turn ignition switch OFF.
2. Disconnect blower relay.
3. Check voltage between blower relay harness connector and ground under the following conditions.

Blower relay Terminal	Ground	Condition	Voltage (V)
		OFF or ACC	0
2	Ground	ON	Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 3  
NO >> GO TO 2

#### 2. CHECK BLOWER RELAY POWER SUPPLY CIRCUIT

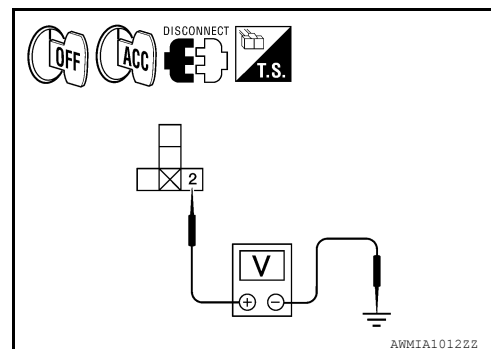

## B2615 BLOWER RELAY CIRCUIT

[POWER DISTRIBUTION SYSTEM]

### < DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect BCM harness connector.
3. Check continuity between blower relay harness connector (A) and BCM harness connector (B).

Blower relay	BCM		Continuity
Terminal	Connector	Terminal	
2	M19	90	Yes

4. Check continuity between blower relay harness connector (A) and ground.

Blower relay	Ground	Continuity
Terminal		
2	Ground	No

Is the inspection result normal?

YES >> GO TO 6

NO >> Repair or replace harness.

### 3. CHECK BLOWER RELAY GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between blower relay harness connector and ground.

Blower relay	Ground	Continuity
Terminal		
1	Ground	Yes

Is the inspection result normal?

YES >> GO TO 4

NO >> Repair blower relay ground circuit.

### 4. CHECK BLOWER RELAY POWER SUPPLY CIRCUIT-2

Check voltage between blower relay harness connector and ground.

Blower relay	Ground	Voltage (V)
Terminal		
3	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5

NO >> Repair or replace harness.

### 5. CHECK BLOWER RELAY

Refer to [PCS-69, "Component Inspection \(Blower Relay\)"](#).

Is the inspection result normal?




YES >> GO TO 6

NO >> Replace blower relay.

### 6. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> Inspection End.

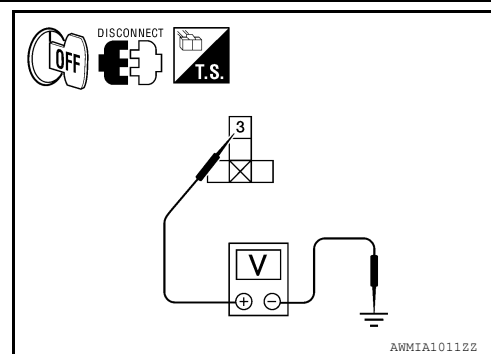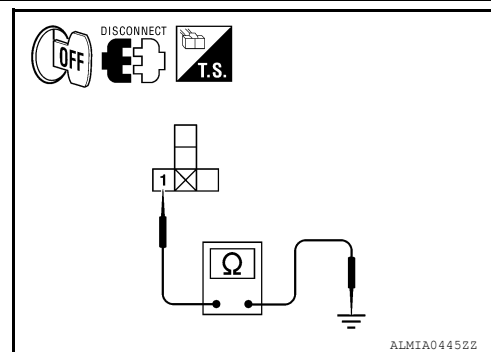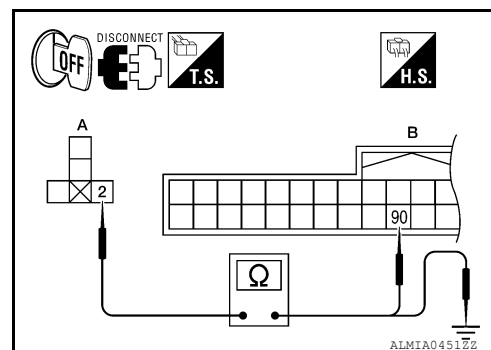

# B2615 BLOWER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## Component Inspection (Blower Relay)

INFOID:000000006392838


### 1. CHECK BLOWER RELAY

1. Turn ignition switch OFF.
2. Remove blower relay.
3. Check the continuity between blower relay terminals under the following conditions.

Terminals	Condition	Continuity
3 and 5	12V direct current supply between terminals 1 and 2	Yes
	No current supply	No

Is the inspection result normal?

- YES >> Inspection End.  
NO >> Replace blower relay.

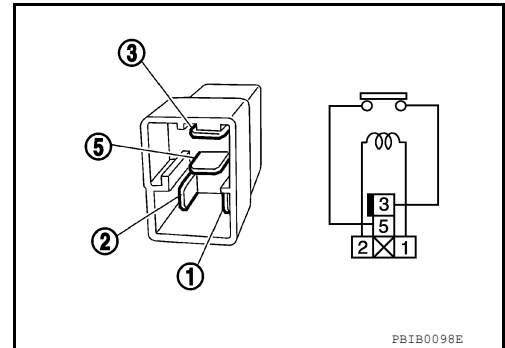

## B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

### B2616 IGNITION RELAY CIRCUIT

#### Description

INFOID:000000006392839

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.

BCM checks the power supply position internally.

#### DTC Logic

INFOID:000000006392840

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2616	Ignition relay circuit	An immediate operation of ignition relay (fuse block) is requested by BCM, but there is no response for more than 1 second	<ul style="list-style-type: none"><li>• Harness or connectors (Ignition relay circuit is open or shorted)</li><li>• Ignition relay (Fuse block)</li></ul>

#### DTC CONFIRMATION PROCEDURE

##### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.
  - CVT selector lever is in the P or N position
  - Release brake pedal
2. Check "Self diagnostic result" with CONSULT.

##### Is DTC detected?

- YES >> Go to [PCS-70, "Diagnosis Procedure"](#).
- NO >> Inspection End.

#### Diagnosis Procedure


INFOID:000000006392841

Regarding Wiring Diagram information, refer to [PCS-121, "Wiring Diagram - Coupe"](#) or [PCS-128, "Wiring Diagram - Sedan"](#).

##### 1. CHECK IGNITION RELAY POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect ignition relay.
3. Check voltage between ignition relay harness connector and ground under the following conditions.

Ignition relay Terminal	Ground	Condition	Voltage (V)
1	Ground	Ignition switch OFF or ACC	0
		Ignition switch ON	Battery voltage

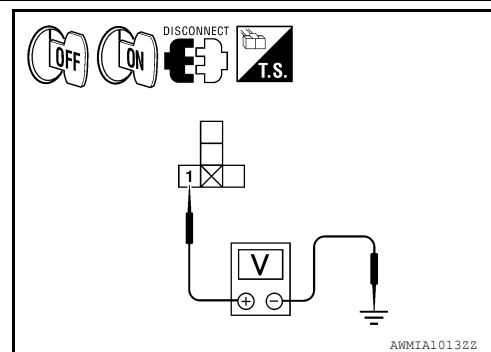

##### Is the inspection result normal?

- YES >> GO TO 3
- NO >> GO TO 2

##### 2. CHECK IGNITION RELAY POWER SUPPLY CIRCUIT

## B2616 IGNITION RELAY CIRCUIT

### [POWER DISTRIBUTION SYSTEM]

#### < DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect BCM harness connector.
3. Check continuity between ignition relay harness connector (A) and BCM harness connector (B).

Ignition relay		BCM		Continuity
Terminal	Connector	Terminal	Connector	
1	M19	70		Yes

4. Check continuity between ignition relay harness connector (A) and ground.

Ignition relay		Ground	Continuity
Terminal	Connector		
1		Ground	No

#### Is the inspection result normal?

- YES >> GO TO 6  
NO >> Repair or replace harness.

### 3. CHECK IGNITION RELAY GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between ignition relay harness connector and ground.

Ignition relay		Ground	Continuity
Terminal	Connector		
2		Ground	Yes

#### Is the inspection result normal?

- YES >> GO TO 4  
NO >> Repair or replace harness.

### 4. CHECK IGNITION RELAY POWER SUPPLY CIRCUIT-2

Check voltage between ignition relay harness connector and ground.

Ignition relay		Ground	Voltage (V)
Terminal	Connector		
5		Ground	Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 5  
NO >> Repair or replace harness.

### 5. CHECK IGNITION RELAY

Refer to [PCS-72, "Component Inspection \(Ignition Relay\)"](#).




#### Is the inspection result normal?

- YES >> GO TO 6  
NO >> Replace ignition relay.

### 6. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> Inspection End.

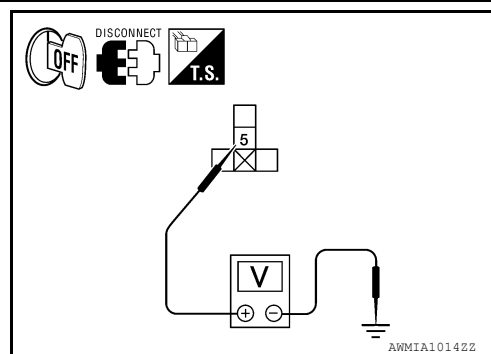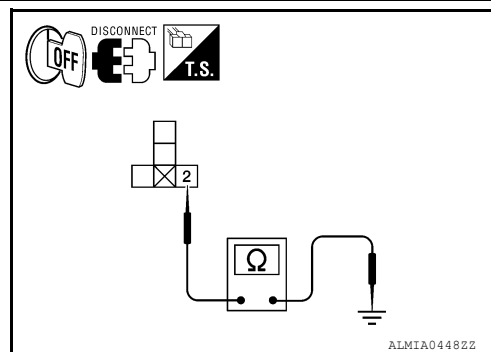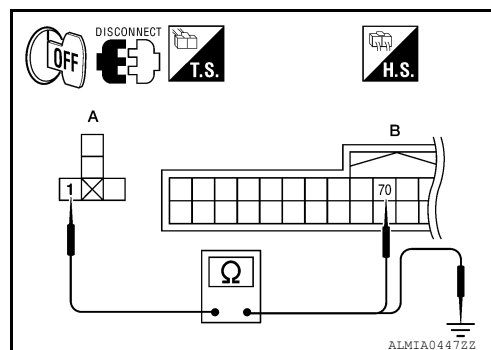

## B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

### Component Inspection (Ignition Relay)

INFOID:000000006392842


#### 1. CHECK IGNITION RELAY

1. Turn ignition switch OFF.
2. Remove ignition relay.
3. Check the continuity between ignition relay terminals under the following conditions.

Terminals	Condition	Continuity
3 and 5	12V direct current supply between terminals 1 and 2	Yes
	No current supply	No

Is the inspection result normal?

- YES >> Inspection End.  
NO >> Replace ignition relay.

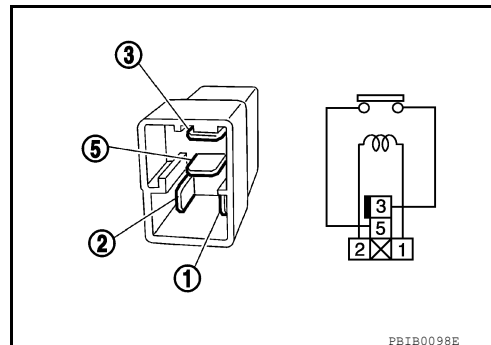



## B2618 BCM

## Description

INFOID:000000006392843

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.

BCM checks the power supply position internally.

## DTC Logic

INFOID:000000006392844

## DTC DETECTION LOGIC

**NOTE:**

- If DTC B2618 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-57, "DTC Logic"](#).
- If DTC B2618 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [PCS-58, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2618	BCM	An immediate operation of ignition relay (IPDM E/R) is requested by BCM, but there is no response for more than 1 second	<ul style="list-style-type: none"> <li>• BCM</li> </ul>

## DTC CONFIRMATION PROCEDURE

**1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.
  - CVT selector lever is in the P or N position
  - Release brake pedal
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-73, "Diagnosis Procedure"](#).
- NO >> Inspection End.

## Diagnosis Procedure

INFOID:000000006392845

**1. INSPECTION START**

1. Turn ignition switch ON.
2. Select "Self diagnostic result" mode with CONSULT.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**  
See [PCS-73, "DTC Logic"](#).

Is the 1st trip DTC B2618 displayed again?

- YES >> Replace BCM. Refer to [BCS-92, "Removal and Installation"](#).
- NO >> Inspection End.

# B261A PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## B261A PUSH-BUTTON IGNITION SWITCH

### Description

INFOID:000000006392846

BCM transmits the change in the power supply position with the push-button ignition switch to IPDM E/R via the CAN communication line. IPDM E/R transmits the power supply position status via CAN communication line to BCM.

### DTC Logic

INFOID:000000006392847

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B261A	PUSH-BUTTON IG-NITION SWITCH	BCM detects a difference of signal for 1 second or more between the following information. <ul style="list-style-type: none"><li>Power supply position by push-button ignition switch</li><li>Power supply position from IPDM E/R (CAN)</li></ul>	<ul style="list-style-type: none"><li>Harness or connectors (Push-button ignition switch circuit is open or shorted.)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

- Press the push-button ignition switch under the following conditions, and wait for at least 1 second.
  - CVT selector lever is in the P or N position.
  - Release the brake pedal.
- Check "Self diagnostic result" with CONSULT.

#### Is DTC detected?

- YES >> Go to [PCS-74, "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:000000006392848

Regarding Wiring Diagram information, refer to [PCS-121, "Wiring Diagram - Coupe"](#) or [PCS-128, "Wiring Diagram - Sedan"](#).

#### 1. CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Press push-button ignition switch and check if it turns to ON.

#### Does ignition switch turn to ON?

- YES >> GO TO 2  
NO >> GO TO 4


#### 2. CHECK IGNITION SWITCH OUTPUT SIGNAL (IPDM E/R)

- Disconnect push-button ignition switch.
- Check voltage between IPDM E/R harness connector and ground.

Terminals		Voltage (V)
(+)	(-)	
IPDM E/R		Ground
Connector	Terminal	
E18	28	
		Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 3  
NO >> Replace IPDM E/R. Refer to [PCS-45, "Removal and Installation"](#).

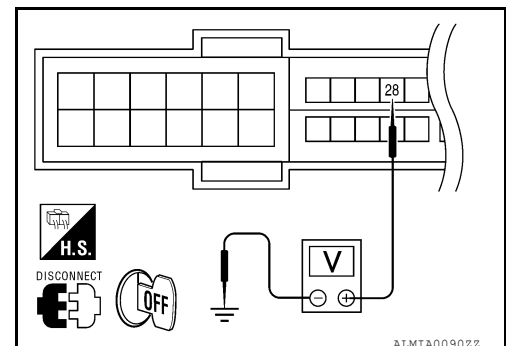

## B261A PUSH-BUTTON IGNITION SWITCH


< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

### 3. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (IPDM E/R)

1. Disconnect IPDM E/R and BCM.
2. Check continuity between IPDM E/R harness connector (A) and push-button ignition switch harness connector (B).

IPDM E/R		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
E18 (A)	28	M38 (B)	4	Yes

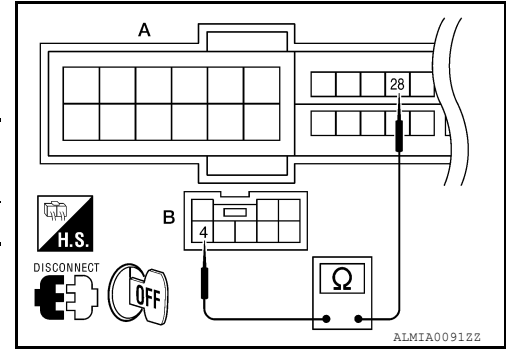


3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E18	28		No

Is the inspection result normal?

YES >> GO TO 6

NO >> Repair or replace harness.

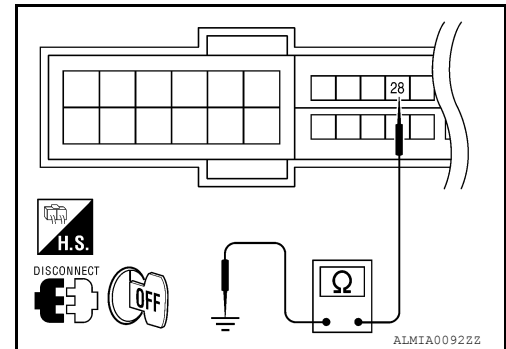

### 4. CHECK IGNITION SWITCH OUTPUT SIGNAL (BCM)


1. Disconnect push-button ignition switch.
2. Check voltage between BCM harness connector and ground.

Terminals		Voltage (V)
(+)	(-)	
BCM		Ground
Connector	Terminal	
M19	77	Battery voltage

Is the inspection result normal?

YES >> GO TO 5


NO >> Replace BCM. Refer to [BCS-92. "Removal and Installation"](#).

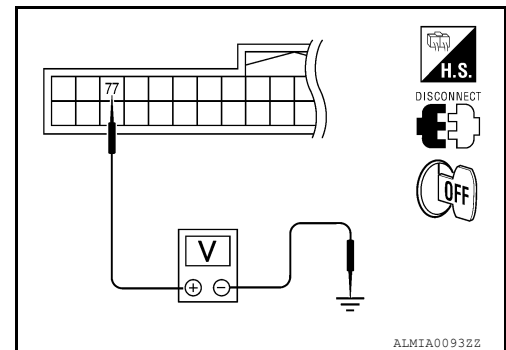

### 5. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (BCM)

1. Disconnect BCM and IPDM E/R.
2. Check continuity between BCM harness connector (A) and push-button ignition switch harness connector (B).

BCM		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
M19 (A)	77	M38 (B)	4	Yes

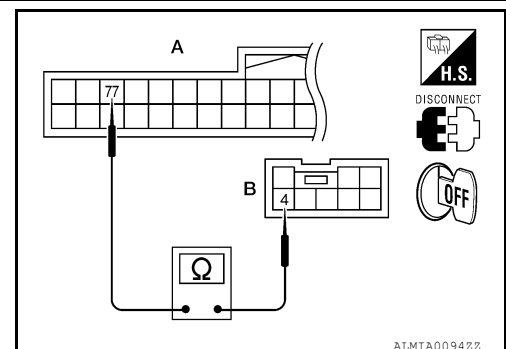

## B261A PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]


3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M19	77		No

Is the inspection result normal?

YES >> GO TO 6

NO >> Repair or replace harness.

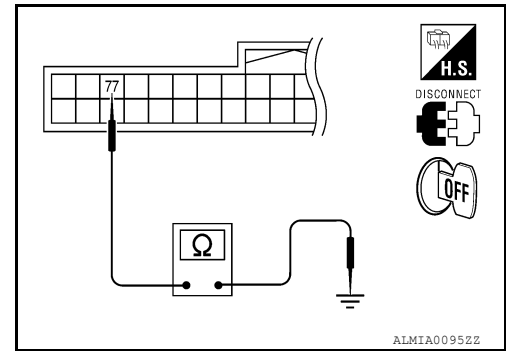

## 6. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> Inspection End.

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## POWER SUPPLY AND GROUND CIRCUIT

### BCM

#### BCM : Diagnosis Procedure

INFOID:000000006392849

Regarding Wiring Diagram information, refer to [BCS-70. "Wiring Diagram - Coupe"](#) or [BCS-79. "Wiring Diagram - Sedan"](#).

#### 1. CHECK FUSE AND FUSIBLE LINK

Check if the following BCM fuse or fusible link are blown.

Terminal No.	Signal name	Fuse and fusible link No.
1	Battery power supply	H
11		10


Is the fuse or fusible link blown?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit.  
NO >> GO TO 2

#### 2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check voltage between BCM harness connector and ground.

Terminals			Voltage (Approx.)
(+)		(-)	
BCM		Ground	
Connector	Terminal		
M16	1		
M17	11		
			Battery voltage

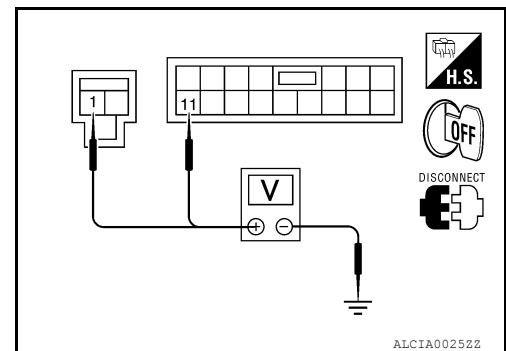

Is the measurement normal?

- YES >> GO TO 3  
NO >> Repair or replace harness.


#### 3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M17	13		
			Yes

Does continuity exist?

- YES >> Inspection End.  
NO >> Repair or replace harness.

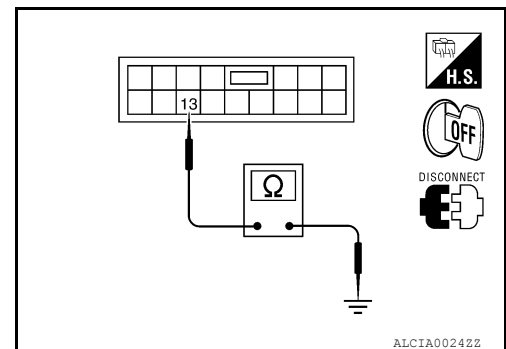

#### BCM : Special Repair Requirement

INFOID:000000006392850

#### 1. REQUIRED WORK WHEN REPLACING BCM

Initialize control unit. Refer to [BCS-3. "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

>> Work End.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure

INFOID:000000006392851

Regarding Wiring Diagram information, refer to [PCS-31, "Wiring Diagram - Coupe"](#) or [PCS-37, "Wiring Diagram - Sedan"](#).

## 1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
1, 2	Battery power supply	B, D
—		42
		43

Is the fuse blown?


YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

## 2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connectors.
3. Check voltage between IPDM E/R harness connector and ground.

Terminals		Voltage (V) (Approx.)
(+)	(-)	
IPDM E/R		Ground
Connector	Terminal	
E16	1	
	2	
		Battery voltage

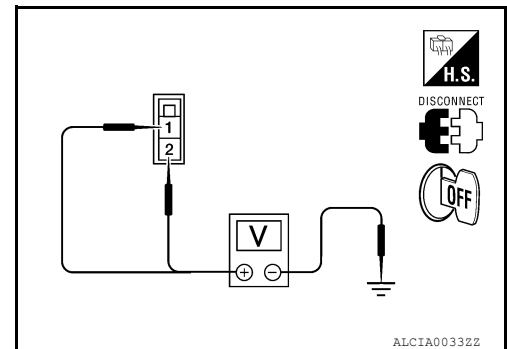

Is the measurement value normal?

YES >> GO TO 3

NO >> Repair harness or connector.

## 3. CHECK GROUND CIRCUIT


Check continuity between IPDM E/R harness connectors and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
A: E18	12		Yes
B: E17	41		

Does continuity exist?

YES >> Inspection End.

NO >> Repair harness or connector.

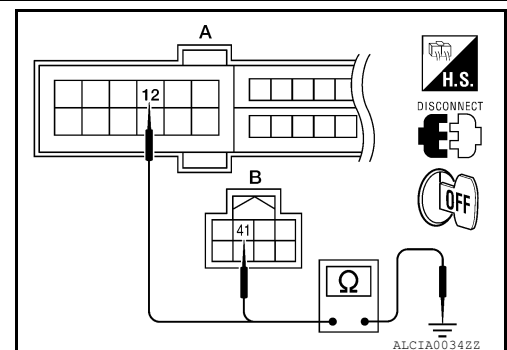

# PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

### Description

INFOID:000000006392852

The switch that changes the power supply position.

BCM maintains the power supply position status.

BCM changes the power supply position with the operation of the push-button ignition switch.

### Component Function Check

INFOID:000000006392853

#### 1. CHECK FUNCTION

##### With CONSULT

1. Check push-button ignition switch ("LOCK INDICATOR", "ACC INDICATOR" and "IGNITION ON IND") in Active Test Mode with CONSULT.

Test item		Description	
LOCK INDICATOR ACC INDICATOR IGNITION ON IND	ON	Position indicator	: Illuminate
	OFF		: Not illuminate

Is the inspection result normal?

YES >> Inspection End..

NO >> Refer to [PCS-79, "Diagnosis Procedure"](#).

### Diagnosis Procedure


INFOID:000000006392854

Regarding Wiring Diagram information, refer to [PCS-121, "Wiring Diagram - Coupe"](#) or [PCS-128, "Wiring Diagram - Sedan"](#).

#### 1. CHECK PUSH-BUTTON IGNITION SWITCH INPUT SIGNALS

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch.
3. Check voltage between push-button ignition switch harness connector and ground.

Terminals			Voltage (V)
(+)		(-)	
Push-button ignition switch			
Connector	Terminal	Ground	Battery voltage
M38	8		

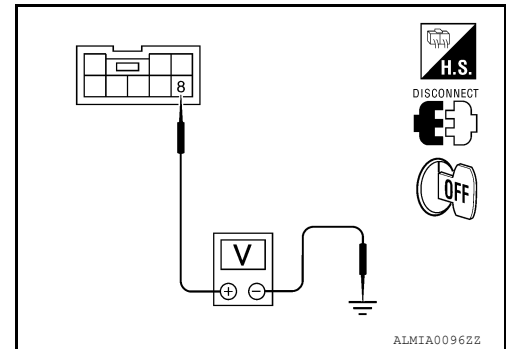

Is the inspection result normal?

YES >> GO TO 2

NO >> Check the following.

- 10A fuse [No. 9, located in fuse block (J/B)]
- Harness for open or short between push-button ignition switch and fuse.

#### 2. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT


# PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

[POWER DISTRIBUTION SYSTEM]

## < DTC/CIRCUIT DIAGNOSIS >

1. Disconnect BCM and push-button ignition switch.
2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

Indicator	BCM Connector	Terminal	Push-button ignition switch connector	Terminal	Continuity
LOCK	M18 (A)	42	M38 (D)	5	Yes
ACC	M17 (B)	15		6	
ON	M19 (C)	81		7	

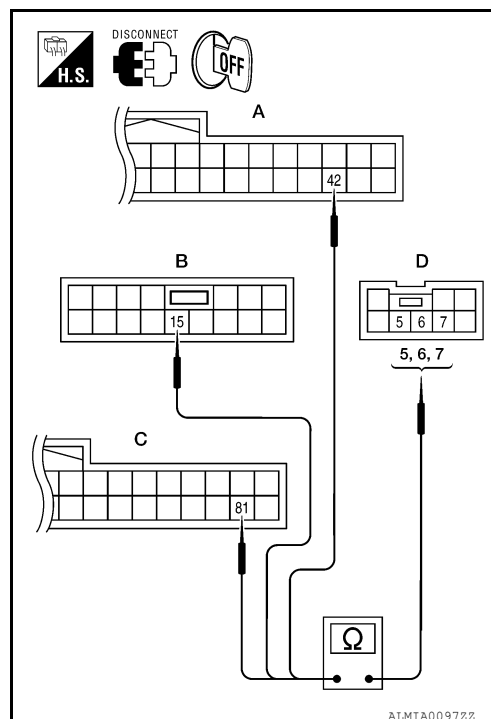


3. Check continuity between BCM harness connector and ground.

Indicator	BCM connector	Terminal	Ground	Continuity
LOCK	M18 (A)	42	Ground	No
ACC	M17 (B)	15		
ON	M19 (C)	81		

Is the inspection result normal?

- YES >> GO TO 3  
NO >> Repair or replace harness.

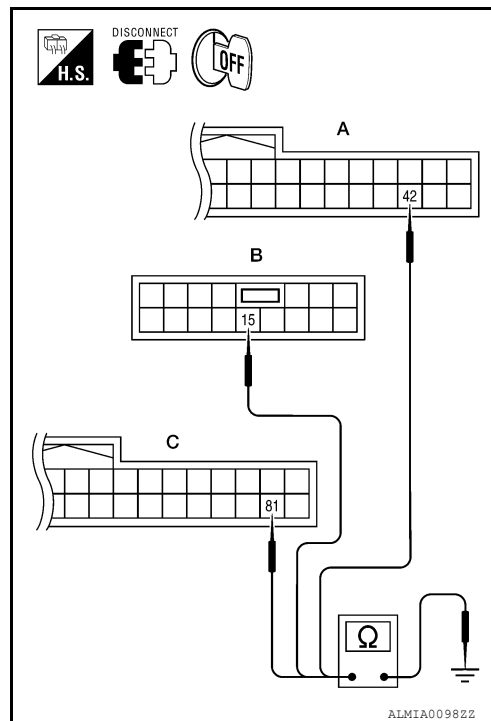

## 3. CHECK PUSH-BUTTON IGNITION SWITCH

Refer to [PCS-81, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 4  
NO >> Replace push-button ignition switch. Refer to [PCS-140, "Removal and Installation"](#).

## 4. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> Inspection End.



# PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]


## Component Inspection

INFOID:000000006392855

### 1. CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.

Terminal		Push-button ignition switch position	Continuity
Push-button ignition switch			
8	5	LOCK	Yes
	6	ACC	
	7	ON	

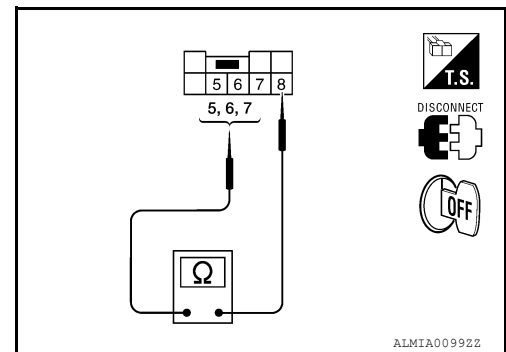

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace push-button ignition switch. Refer to [PCS-140](#), "[Removal and Installation](#)".

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

**BCM (BODY CONTROL MODULE)**

&lt; ECU DIAGNOSIS INFORMATION &gt;

**[POWER DISTRIBUTION SYSTEM]****ECU DIAGNOSIS INFORMATION****BCM (BODY CONTROL MODULE)**

## Reference Value

INFOID:000000006919698

## VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	OFF
	Front wiper switch HI	ON
FR WIPER LOW	Other than front wiper switch LO	OFF
	Front wiper switch LO	ON
FR WASHER SW	Front washer switch OFF	OFF
	Front washer switch ON	ON
FR WIPER INT	Other than front wiper switch INT	OFF
	Front wiper switch INT	ON
FR WIPER STOP	Front wiper is not in STOP position	OFF
	Front wiper is in STOP position	ON
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 6	Wiper intermittent dial position
TURN SIGNAL R	Other than turn signal switch RH	OFF
	Turn signal switch RH	ON
TURN SIGNAL L	Other than turn signal switch LH	OFF
	Turn signal switch LH	ON
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	OFF
	Lighting switch 1ST or 2ND	ON
HI BEAM SW	Other than lighting switch HI	OFF
	Lighting switch HI	ON
HEAD LAMP SW 1	Other than lighting switch 2ND	OFF
	Lighting switch 2ND	ON
HEAD LAMP SW 2	Other than lighting switch 2ND	OFF
	Lighting switch 2ND	ON
PASSING SW	Other than lighting switch PASS	OFF
	Lighting switch PASS	ON
AUTO LIGHT SW	Other than lighting switch AUTO	OFF
	Lighting switch AUTO	ON
FR FOG SW	Front fog lamp switch OFF	OFF
	Front fog lamp switch ON	ON
DOOR SW-DR	Driver door closed	OFF
	Driver door opened	ON
DOOR SW-AS	Passenger door closed	OFF
	Passenger door opened	ON
DOOR SW-RR	Rear RH door closed	OFF
	Rear RH door opened	ON
DOOR SW-RL	Rear LH door closed	OFF
	Rear LH door opened	ON

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	Value/Status	
CDL LOCK SW	Other than power door lock switch LOCK	OFF	A
	Power door lock switch LOCK	ON	
CDL UNLOCK SW	Other than power door lock switch UNLOCK	OFF	B
	Power door lock switch UNLOCK	ON	
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	OFF	C
	Driver door key cylinder LOCK position	ON	
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	OFF	D
	Driver door key cylinder UNLOCK position	ON	
HAZARD SW	When hazard switch is not pressed	OFF	E
	When hazard switch is pressed	ON	
REAR DEF SW	When rear window defogger switch is pressed	ON	F
FAN ON SIG	When AUTO switch or fan switch is pressed	ON	G
AIR COND SW	When A/C switch is pressed	ON	H
TR CANCEL SW	Trunk lid opener cancel switch OFF	OFF	I
	Trunk lid opener cancel switch ON	ON	
TR/BD OPEN SW	Trunk lid opener switch OFF	OFF	J
	While the trunk lid opener switch is turned ON	ON	
TRNK/HAT MNTR	Trunk lid closed	OFF	K
	Trunk lid opened	ON	
RKE-LOCK	When LOCK button of Intelligent Key is not pressed	OFF	L
	When LOCK button of Intelligent Key is pressed	ON	
RKE-UNLOCK	When UNLOCK button of Intelligent Key is not pressed	OFF	PCS
	When UNLOCK button of Intelligent Key is pressed	ON	
RKE-TR/BD	When TRUNK OPEN button of Intelligent Key is not pressed	OFF	N
	When TRUNK OPEN button of Intelligent Key is pressed	ON	
RKE-PANIC	When PANIC button of Intelligent Key is not pressed	OFF	O
	When PANIC button of Intelligent Key is pressed	ON	
RKE-P/W OPEN	When UNLOCK button of Intelligent Key is not pressed and held	OFF	P
	When UNLOCK button of Intelligent Key is pressed and held	ON	
RKE-MODE CHG	When LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously	OFF	
	When LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously	ON	
OPTICAL SENSOR	When outside of the vehicle is bright	Close to 5 V	
	When outside of the vehicle is dark	Close to 0 V	
REQ SW-DR	When driver door request switch is not pressed	OFF	
	When driver door request switch is pressed	ON	
REQ SW-AS	When passenger door request switch is not pressed	OFF	
	When passenger door request switch is pressed	ON	
REQ SW-BD/TR	When trunk request switch is not pressed	OFF	
	When trunk request switch is pressed	ON	
PUSH SW	When engine switch (push switch) is not pressed	OFF	
	When engine switch (push switch) is pressed	ON	
IGN RLY -F/B	Ignition switch OFF or ACC	OFF	
	Ignition switch ON	ON	

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	Value/Status
ACC RLY -F/B	Ignition switch OFF	OFF
	Ignition switch ACC or ON	ON
CLUTCH SW	When the clutch pedal is not depressed	OFF
	When the clutch pedal is depressed	ON
BRAKE SW 1	When the brake pedal is not depressed	ON
	When the brake pedal is depressed	OFF
DETE/CANCL SW	When selector lever is in P position	OFF
	When selector lever is in any position other than P	ON
SFT PN/N SW	When selector lever is in any position other than P or N	OFF
	When selector lever is in P or N position	ON
S/L -LOCK	Electronic steering column lock LOCK status	OFF
	Electronic steering column lock UNLOCK status	ON
S/L -UNLOCK	Electronic steering column lock UNLOCK status	OFF
	Electronic steering column lock LOCK status	ON
S/L RELAY-F/B	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
UNLK SEN-DR	Driver door UNLOCK status	OFF
	Driver door LOCK status	ON
PUSH SW -IPDM	When engine switch (push switch) is not pressed	OFF
	When engine switch (push switch) is pressed	ON
IGN RLY1 F/B	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
DETE SW -IPDM	When selector lever is in P position	OFF
	When selector lever is in any position other than P	ON
SFT PN -IPDM	When selector lever is in any position other than P or N	OFF
	When selector lever is in P or N position	ON
SFT P -MET	When selector lever is in any position other than P	OFF
	When selector lever is in P position	ON
SFT N -MET	When selector lever is in any position other than N	OFF
	When selector lever is in N position	ON
ENGINE STATE	Engine stopped	STOP
	While the engine stalls	STALL
	At engine cranking	CRANK
	Engine running	RUN
S/L LOCK-IPDM	Electronic steering column lock LOCK status	OFF
	Electronic steering column lock UNLOCK status	ON
S/L UNLCK-IPDM	Electronic steering column lock UNLOCK status	OFF
	Electronic steering column lock LOCK status	ON
S/L RELAY-REQ	Ignition switch OFF or ACC	OFF
	Ignition switch ON	ON
VEH SPEED 1	While driving	Equivalent to speedometer reading
VEH SPEED 2	While driving	Equivalent to speedometer reading

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	Value/Status
DR DOOR STATE	Driver door LOCK status	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Driver door UNLOCK status	UNLK
AS DOOR STATE	Passenger door LOCK status	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Passenger door UNLOCK status	UNLK
ID OK FLAG	Ignition switch ACC or ON	RESET
	Ignition switch OFF	SET
PRMT ENG STAT	When the engine start is prohibited	RESET
	When the engine start is permitted	SET
KEY SW -SLOT	When Intelligent Key is not inserted into key slot	OFF
	When Intelligent Key is inserted into key slot	ON
RKE OPE COUN1	During the operation of Intelligent Key	Operation frequency of Intelligent Key
AIR PRESS FL	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	When ID of front LH tire transmitter is registered	DONE
	When ID of front LH tire transmitter is not registered	YET
ID REGST FR1	When ID of front RH tire transmitter is registered	DONE
	When ID of front RH tire transmitter is not registered	YET
ID REGST RR1	When ID of rear RH tire transmitter is registered	DONE
	When ID of rear RH tire transmitter is not registered	YET
ID REGST RL1	When ID of rear LH tire transmitter is registered	DONE
	When ID of rear LH tire transmitter is not registered	YET
WARNING LAMP	Tire pressure indicator OFF	OFF
	Tire pressure indicator ON	ON

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P


# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## Terminal Layout

INFOID:000000006919699

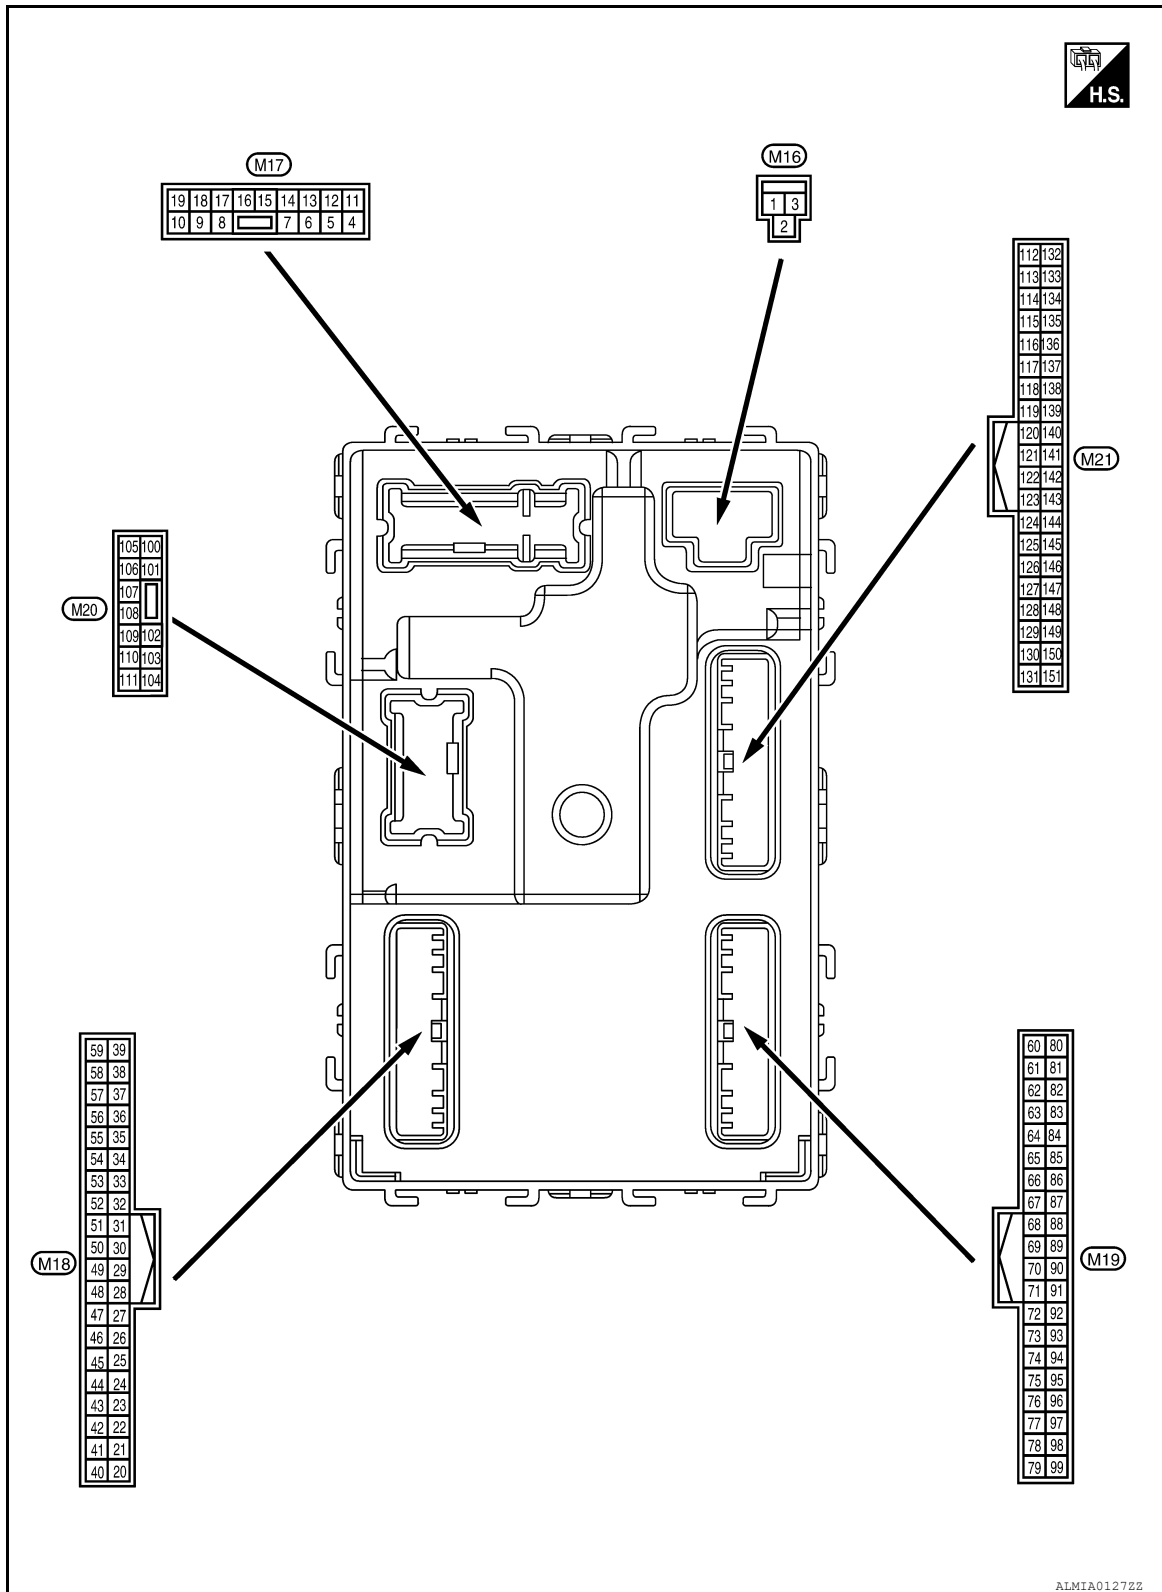


## Physical Values

INFOID:000000006919700

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]



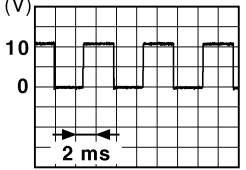
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
1 (W/B)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (R/Y)	Ground	Battery power supply output	Output	Ignition switch OFF		Battery voltage
3 (L/W)	Ground	Ignition power supply output	Output	Ignition switch ON		Battery voltage
4 (P/W)	Ground	Interior room lamp power supply	Output	After passing the interior room lamp battery saver operation time		0V
				Any other time after passing the interior room lamp battery saver operation time		Battery voltage
5 (G/Y)	Ground	Front door RH UNLOCK	Output	Front door RH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
7 (R/W)	Ground	Step lamp	Output	Step lamp	ON	0V
					OFF	Battery voltage
8 (V)	Ground	All doors LOCK	Output	All doors	LOCK (actuator is activated)	Battery voltage
					Other than LOCK (actuator is not activated)	0V
9 (G)	Ground	Front door LH UNLOCK	Output	Front door LH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
10 <sup>1</sup> (G/Y)	Ground	Rear door RH and rear door LH UNLOCK	Output	Rear door RH and rear door LH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
11 (Y/R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0V
14 <sup>1</sup> (O/W)	Ground	Engine switch (push switch) illumination ground	Input	Tail lamp	OFF	0V
					ON	<b>NOTE:</b> When the illumination brightening/dimming level is in the neutral position 

JSNIA0010GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

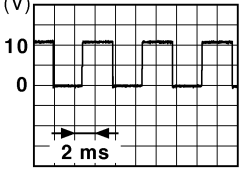
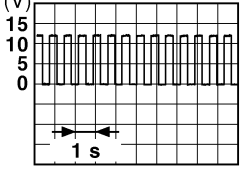
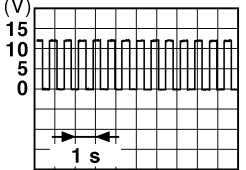
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
14 <sup>8</sup> (R/Y)	Ground	Engine switch (push switch) illumination ground	Input	Tail lamp	OFF	0V
					ON	<b>NOTE:</b> When the illumination brightening/dimming level is in the neutral position  <small>JSNIA0010GB</small>
15 (Y/L)	Ground	ACC indicator lamp	Output	Ignition switch	OFF	Battery voltage
					ACC	0V
17 (G/B)	Ground	Turn signal (RH)	Output	Ignition switch ON	Turn signal switch OFF	0V
					Turn signal switch RH	 <small>PKID0926E</small> 6.5 V
18 (G/Y)	Ground	Turn signal (LH)	Output	Ignition switch ON	Turn signal switch OFF	0V
					Turn signal switch LH	 <small>PKID0926E</small> 6.5 V
19 (Y)	Ground	Room lamp timer control	Output	Interior room lamp	OFF	Battery voltage
					ON	0V
21 (P/B)	Ground	Optical sensor signal	Input	Ignition switch ON	When outside of the vehicle is bright	Close to 5V
					When outside of the vehicle is dark	Close to 0V
22 <sup>2</sup> (R/Y)	Ground	Clutch interlock switch	Input	Clutch interlock switch	OFF (clutch pedal is not depressed)	0V
					ON (clutch pedal is depressed)	Battery voltage
24 (R/W)	Ground	Stop lamp switch 1	Input	—	—	Battery voltage
26 (O/L)	Ground	Stop lamp switch 2	Input	Stop lamp switch	OFF (brake pedal is not depressed)	0V
					ON (brake pedal is depressed)	Battery voltage



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

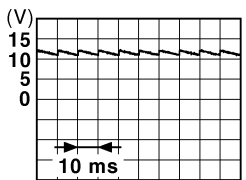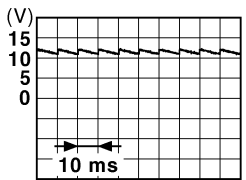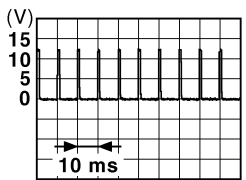Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
27 (G/W)	Ground	Front door lock as- sembly LH (unlock sensor)	Input	Front door LH	LOCK status	 11.8V
					UNLOCK status	0V
29 (Y)	Ground	Key slot switch	Input	When Intelligent Key is inserted into key slot		Battery voltage
				When Intelligent Key is not inserted into key slot		0V
30 (V/Y)	Ground	ACC feedback signal	Input	Ignition switch	OFF	0
					ACC or ON	Battery voltage
31 (G)	Ground	Rear window defog- ger feedback signal	Input	Rear window de- fogger switch	OFF	0V
					ON	Battery voltage
32 (R/B)	Ground	Front door RH switch	Input	Front door RH switch	OFF (when front door RH closes)	 11.8 V
					ON (when front door RH opens)	0V
33 (SB)	Ground	Compressor ON sig- nal	Input	A/C switch	OFF	9V - 12V
					ON	0V
34 <sup>3</sup> (L/R)	Ground	Front door lock as- sembly LH (key cylin- der switch) (unlock)	Input	Front door lock assembly LH (key cylinder switch)	OFF (neutral)	Battery voltage
					ON (unlock)	0V
36 <sup>3</sup> (GR)	Ground	Lock switch signal	Input	Door lock/unlock switch	Lock	Battery voltage
					Unlock	0V
37 (O)	Ground	Trunk lid opener can- cel switch	Input	Trunk lid opener cancel switch	CANCEL	 1.1V
					ON	0V
38 (GR/ W)	Ground	Rear window defog- ger ON signal	Input	Rear window de- fogger switch	OFF	Battery voltage
					ON	0V
39 <sup>3</sup> (GR/ R)	Ground	Unlock switch signal	Input	Door lock/unlock switch	Unlock	Battery voltage
					Lock	0V

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N





O

P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >




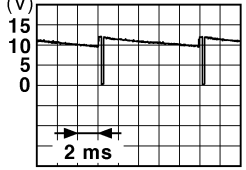
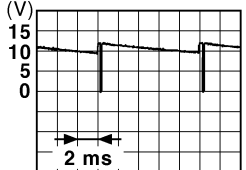
[POWER DISTRIBUTION SYSTEM]

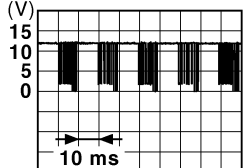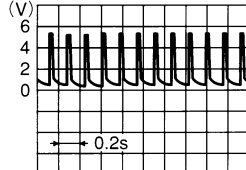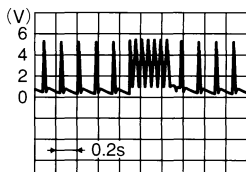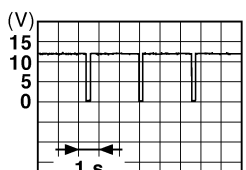Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
40 <sup>4</sup> (Y/G)	Ground	Power window serial link	Input/ Output	Ignition switch ON		<div> JPMIA0013GB 10.2V</div>
				Ignition switch OFF or ACC		0V
41 (W)	Ground	Engine switch (push switch) illumination	Output	Engine switch (push switch) illumination	ON	5.5V
				OFF	0V	
42 (R)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	ON	0V
				OFF	Battery voltage	
45 (P)	Ground	Receiver & sensor ground	Input	Ignition switch ON		0V
46 (V/W)	Ground	Receiver & sensor power supply output	Output	Ignition switch	OFF	0V
				ACC or ON	5.0V	
47 (G/O)	Ground	Tire pressure receiver signal	Input/ Output	Ignition switch ON	Standby state	<div> OCC3881D</div>
				When receiving the signal from the transmitter	<div> OCC3880D</div>	
48 (R/G)	Ground	Selector lever P/N position signal	Input	Selector lever	P or N position	12.0V
				Except P and N positions	0V	
49 (L/O)	Ground	Security indicator signal	Output	Security indicator	ON	0V
				Blinking	<div> JPMIA0014GB 11.3V</div>	
				OFF	Battery voltage	

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >






[POWER DISTRIBUTION SYSTEM]

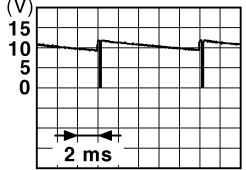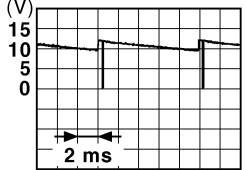Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
50 (LG/ B)	Ground	Combination switch OUTPUT 5	Output		All switch OFF	0V
				Combination switch (Wiper intermit- tent dial 4)	Lighting switch 1ST	
					Lighting switch high-beam	
					Lighting switch 2ND	
					Turn signal switch RH	
51 (L/W)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	0V
					Front wiper switch HI (Wiper intermittent dial 4)	
					Any of the conditions below with all switch OFF	
					• Wiper intermittent dial 1	
					• Wiper intermittent dial 2	
52 (G/B)	Ground	Combination switch OUTPUT 2	Output	Combination switch	• Wiper intermittent dial 3	
					• Wiper intermittent dial 6	
					• Wiper intermittent dial 7	
					All switch OFF (Wiper intermittent dial 4)	0V
					Front washer switch ON (Wiper intermittent dial 4)	
53 (LG/ R)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper intermit- tent dial 4)	Any of the conditions below with all switch OFF	
					• Wiper intermittent dial 1	
					• Wiper intermittent dial 5	
					• Wiper intermittent dial 6	
					All switch OFF	0V
54 (G/Y)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper intermit- tent dial 4)	Front wiper switch INT	
					Front wiper switch LO	
					Lighting switch AUTO	
					Lighting switch 2ND	
					Lighting switch flash-to- pass	
55 (BR/ W)	Ground	Front blower monitor	Input	Front blower mo- tor switch	Turn signal switch LH	0V
					ON	Battery voltage
55 (BR/ W)	Ground	Front blower monitor	Input	Front blower mo- tor switch	OFF	0V

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





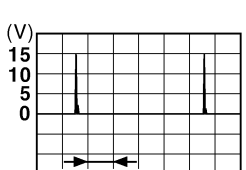

[POWER DISTRIBUTION SYSTEM]

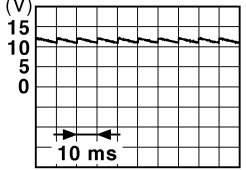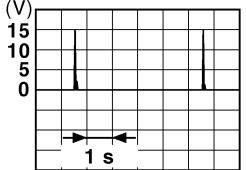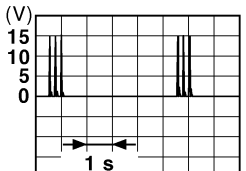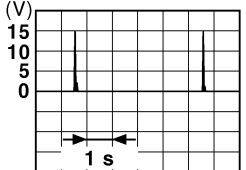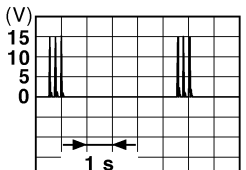Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
56 <sup>3</sup> (L/B)	Ground	Front door lock as- sembly LH (key cylin- der switch) (lock)	Input	Front door lock as- sembly LH (key cylinder switch)	OFF (neutral)	Battery voltage
					ON (lock)	0V
57 (W)	Ground	Tire pressure warn- ing check switch	Input	—		Battery voltage
58 (SB)	Ground	Front door LH switch	Input	Front door LH switch	OFF (front door LH CLOSE)	 <p>11.8V</p>
					ON (front door LH OPEN)	0V
59 (G/R)	Ground	Rear window defog- ger relay	Output	Rear window de- fogger	Active	Battery voltage
					Not activated	0V
60 (B/R)	Ground	Front console anten- na 2 (-)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	
					When Intelligent Key is not in the passenger compart- ment	
61 (W/R)	Ground	Center console an- tenna 2 (+)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	
					When Intelligent Key is not in the passenger compart- ment	

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

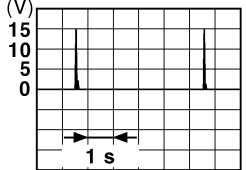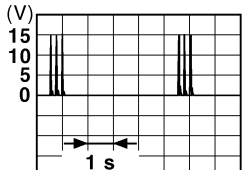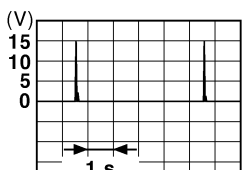Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
62 (B/Y)	Ground	Front outside handle RH antenna (-)	Output	When the front door RH request switch is operat- ed with ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p>JMKIA0063GB</p>
63 (LG)	Ground	Front outside handle RH antenna (+)	Output	When the front door RH request switch is operat- ed with ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p>JMKIA0063GB</p>
64 (V)	Ground	Front outside handle LH antenna (-)	Output	When the front door LH request switch is operat- ed with ignition switch OFF	 <p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p>JMKIA0063GB</p>

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N





O

P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >



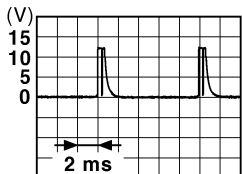
[POWER DISTRIBUTION SYSTEM]

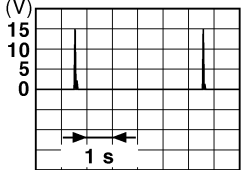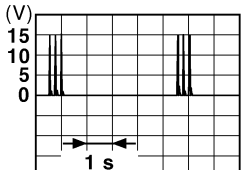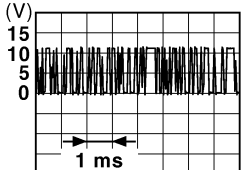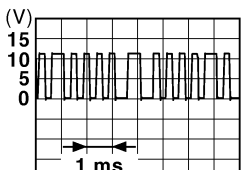Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
65 (P)	Ground	Front outside handle LH antenna (+)	Output	When the front door LH request switch is operat- ed with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
					When Intelligent Key is not in the antenna detection area	 JMKIA0063GB
68 (G/O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelli- gent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
69 (O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelli- gent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
70 (R/B)	Ground	Ignition relay-2 con- trol	Output	Ignition switch	OFF or ACC	0V
					ON	Battery voltage
71 (L/O)	Ground	Remote keyless entry receiver signal	Input/ Output	During waiting		 JMKIA0064GB
				When operating either button on Intelligent Key		 JMKIA0065GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

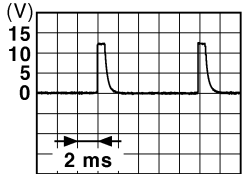Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
75 (R/Y)	Ground	Combination switch INPUT 5	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	 1.4V
					Front fog lamp switch ON (Wiper intermittent dial 4)	 1.3V
					Any of the conditions below with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7	 1.3V




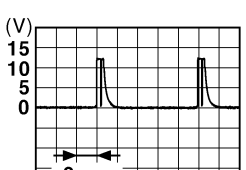
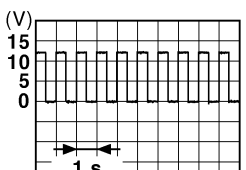
A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

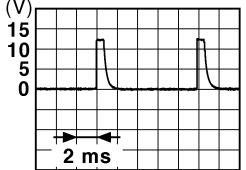
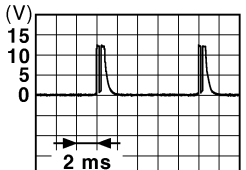
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
76 (R/G)	Ground	Combination switch INPUT 3	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	 1.4V
					Lighting switch high-beam (Wiper intermittent dial 4)	 1.3V
					Lighting switch 2ND (Wiper intermittent dial 4)	 1.3V
					Any of the conditions below with all switch OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 3</li> </ul>	 1.3V
77 (BR)	Ground	Engine switch (push switch)	Input	Engine switch (push switch)	Pressed	0V
					Not pressed	Battery voltage
78 (P)	Ground	CAN-L	Input/ Output	—	—	—
79 (L)	Ground	CAN-H	Input/ Output	—	—	—
80 (R/L)	Ground	Key slot illumination	Output	Key slot illumina- tion	OFF	0V
					Blinking	 6.5V
					ON	Battery voltage



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

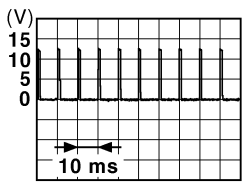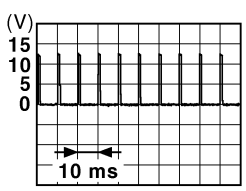

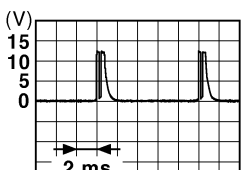
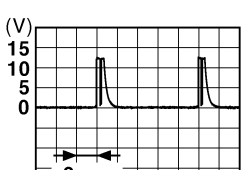
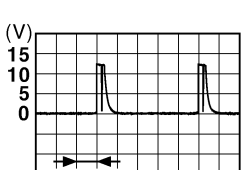
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
81 (LG)	Ground	ON indicator lamp	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0V
83 (L)	Ground	ACC relay control	Output	Ignition switch	OFF	0V
					ACC or ON	Battery voltage
84 <sup>5</sup> (Y/R)	Ground	CVT shift selector	Output	—		Battery voltage
85 (L/O)	Ground	Electronic steering column lock condition No. 1	Input	Electronic steer- ing column lock	Lock status	0V
					Unlock status	Battery voltage
86 (G/R)	Ground	Electronic steering column lock condition No. 2	Input	Electronic steer- ing column lock	Lock status	Battery voltage
					Unlock status	0V
87 <sup>5</sup> (G/B)	Ground	Selector lever P posi- tion switch	Input	Selector lever	P position	0V
					Any position other than P	Battery voltage
88 (P/L)	Ground	Front door RH re- quest switch	Input	Front door RH re- quest switch	ON (pressed)	0V
					OFF (not pressed)	 <p>1.0V</p>
89 (B/W)	Ground	Front door LH re- quest switch	Input	Front door LH re- quest switch	ON (pressed)	0V
					OFF (not pressed)	 <p>1.0V</p>
90 (Y)	Ground	Blower fan motor re- lay control	Output	Ignition switch	OFF or ACC	0V
					ON	Battery voltage
91 (L/R)	Ground	Remote keyless entry receiver power sup- ply	Output	Ignition switch OFF		Battery voltage
94 (G/Y)	Ground	Electronic steering column lock power supply	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[POWER DISTRIBUTION SYSTEM]

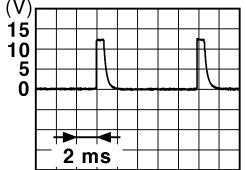Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
95 (R/W)	Ground	Combination switch INPUT 1	Input		
				All switch OFF	 <p>JPMIA0041GB</p> <p>1.4V</p>
				Turn signal switch LH	 <p>JPMIA0037GB</p> <p>1.3V</p>
				Turn signal switch RH	 <p>JPMIA0036GB</p> <p>1.3V</p>
				Front wiper switch LO	 <p>JPMIA0038GB</p> <p>1.3V</p>
				Front washer switch ON	 <p>JPMIA0039GB</p> <p>1.3V</p>

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

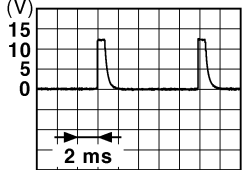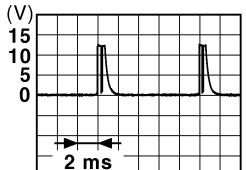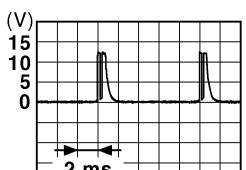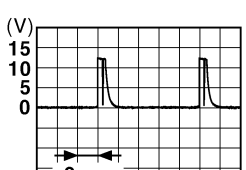Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
96 (P/B)	Ground	Combination switch INPUT 4	Input	Combination switch	 <p>1.4V</p>
				Lighting switch AUTO (Wiper intermittent dial 4)	 <p>1.3V</p>
				Lighting switch 1ST (Wiper intermittent dial 4)	 <p>1.3V</p>
				Any of the conditions below with all switch OFF • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6	 <p>1.3V</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L



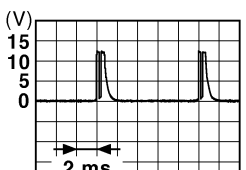
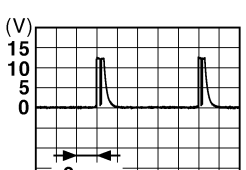
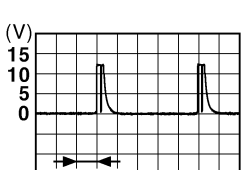
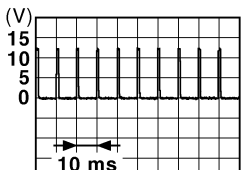
PCS

N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >




[POWER DISTRIBUTION SYSTEM]

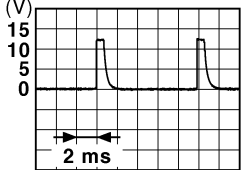Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
97 (R/B)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	 <p>JPMIA0041GB</p> <p>1.4V</p>
					Lighting switch flash-to-pass	 <p>JPMIA0037GB</p> <p>1.3V</p>
					Lighting switch 2ND	 <p>JPMIA0036GB</p> <p>1.3V</p>
					Front wiper switch INT	 <p>JPMIA0038GB</p> <p>1.3V</p>
					Front wiper switch HI	 <p>JPMIA0040GB</p> <p>1.3V</p>
98 (G/O)	Ground	Hazard switch	Input	Hazard switch	Pressed	0 V
					Not pressed	 <p>JPMIA0012GB</p> <p>1.1V</p>

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

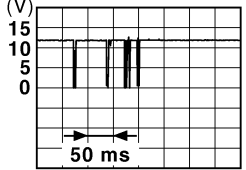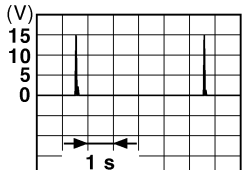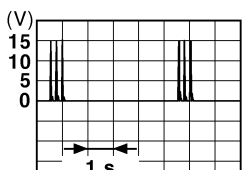Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
99 (L/Y)	Ground	Electronic steering column lock unit com- munication	Input/ Output	Electronic steer- ing column lock	LOCK status	Battery voltage
					LOCK or UNLOCK	 JMKIA0066GB
					For 15 seconds after UN- LOCK	Battery voltage
					15 seconds or later after UNLOCK	0V
103 (V)	Ground	Trunk lid opening	Output	Trunk lid	Open (trunk lid opener ac- tuator is activated)	Battery voltage
					Close (trunk lid opener ac- tuator is not activated)	0V
110 (V/W)	Ground	Trunk room lamp	Output	Trunk room lamp	ON	0V
					OFF	Battery voltage
114 (B)	Ground	Trunk room antenna 1 (-)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compart- ment	 JMKIA0063GB







A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >




[POWER DISTRIBUTION SYSTEM]

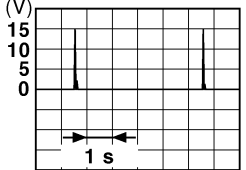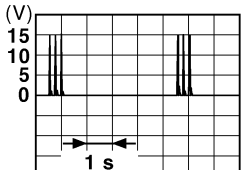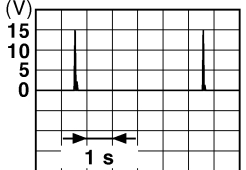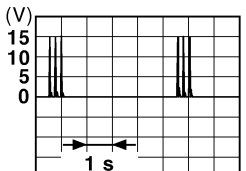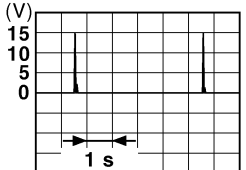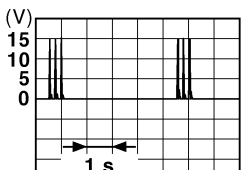Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
115 (W)	Ground	Trunk room antenna 1 (+)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 JMKIA0062GB
					When Intelligent Key is not in the passenger compart- ment	 JMKIA0063GB
118 (L/O)	Ground	Rear bumper anten- na (-)	Output	When the trunk lid request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
					When Intelligent Key is not in the antenna detection area	 JMKIA0063GB
119 (BR/ W)	Ground	Rear bumper anten- na (+)	Output	When the trunk lid request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	 JMKIA0062GB
					When Intelligent Key is not in the antenna detection area	 JMKIA0063GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

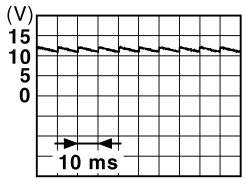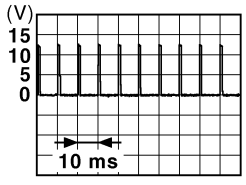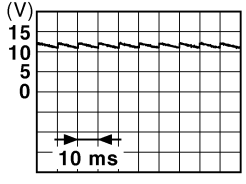Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
127 (BR/ W)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0V
130 (Y/G)	Ground	Trunk room lamp switch	Input	Trunk room lamp switch	OFF (trunk is closed)	 <p>JPMIA0011GB</p> <p>11.8V</p>
					ON (trunk is open)	0V
132 (R)	Ground	Starter motor relay control	Output	Ignition switch OFF (M/T vehi- cle)	When the clutch pedal is depressed	Battery voltage
					When the clutch pedal is not depressed	0V
				Ignition switch ON (other than M/ T vehicle)	When selector lever is in P or N position and the brake is depressed	Battery voltage
					When selector lever is in P or N position and the brake is not depressed	0V
141 (G/R)	Ground	Trunk request switch	Input	Trunk request switch	ON (pressed)	0V
					OFF (not pressed)	 <p>JPMIA0016GB</p> <p>1.0V</p>
144 (GR)	Ground	Request switch buzz- er	Output	Request switch buzzer	Sounding	0V
					Not sounding	Battery voltage
147 (L/R)	Ground	Trunk lid opener switch	Input	Trunk lid opener switch	Pressed	0V
					Not pressed	Battery voltage
148 <sup>1</sup> (R/W)	Ground	Rear door RH switch	Input	Rear door RH switch	OFF (when rear door RH closes)	 <p>JPMIA0011GB</p> <p>11.8V</p>
					ON (when rear door RH opens)	0V

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N


O

P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

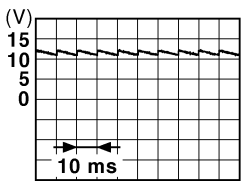Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
149 <sup>1</sup> (R/B)	Ground	Rear door LH switch	Input	Rear door LH switch	OFF (when rear door LH closes)	 11.8V
					ON (when rear door LH opens)	0V

1: Sedan only

2: M/T only

3: With LH front window anti-pinch

4: With LH and RH front window anti-pinch.

5: CVT only

6: With auto lights

7: With low tire pressure warning system

8: Coupe only

## Fail Safe

INFOID:000000006919701

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI-SCANNING	Inhibit engine cranking	Erase DTC
B2557: VEHICLE SPEED	Inhibit electronic steering column lock	When normal vehicle speed signals have been received from ABS actuator and electric unit (control unit) for 500 ms
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> <li>Starter control relay signal</li> <li>Starter relay status signal</li> </ul>
B2562: LO VOLTAGE	<ul style="list-style-type: none"> <li>Inhibit engine cranking</li> <li>Inhibit electronic steering column lock</li> </ul>	100 ms after the power supply voltage increases to more than 8.8 V
B2601: SHIFT POSITION	Inhibit electronic steering column lock	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> <li>Selector lever P position switch signal</li> <li>P range signal (CAN)</li> </ul>
B2602: SHIFT POSITION	Inhibit electronic steering column lock	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>Ignition switch is in the ON position</li> <li>Selector lever P position switch signal: Except P position (battery voltage)</li> <li>Vehicle speed: 4 /h or more</li> </ul>



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Display contents of CONSULT	Fail-safe	Cancellation
B2603: SHIFT POSI STATUS	Inhibit electronic steering column lock	500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>Ignition switch is in the ON position</li> <li>Selector lever P position switch signal: Except P position (battery voltage)</li> <li>Selector lever P/N position signal: Except P and N positions (0 V)</li> </ul>
B2604: PNP SW	Inhibit electronic steering column lock	500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> <li>Status 1 <ul style="list-style-type: none"> <li>Ignition switch is in the ON position</li> <li>Selector lever P/N position signal: P and N position (battery voltage)</li> <li>P range signal or N range signal (CAN): ON</li> </ul> </li> <li>Status 2 <ul style="list-style-type: none"> <li>Ignition switch is in the ON position</li> <li>Selector lever P/N position signal: Except P and N positions (0 V)</li> <li>P range signal and N range signal (CAN): OFF</li> </ul> </li> </ul>
B2605: PNP SW	Inhibit electronic steering column lock	500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> <li>Status 1 <ul style="list-style-type: none"> <li>Ignition switch is in the ON position</li> <li>Power position: IGN</li> <li>Selector lever P/N position signal: Except P and N positions (0 V)</li> <li>Interlock/transmission switch signal (CAN): OFF</li> </ul> </li> <li>Status 2 <ul style="list-style-type: none"> <li>Ignition switch is in the ON position</li> <li>Selector lever P/N position signal: P or N position (battery voltage)</li> <li>transmission switch signal (CAN): ON</li> </ul> </li> </ul>
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> <li>Electronic steering column lock relay signal (Request signal)</li> <li>Electronic steering column lock relay signal (Condition signal)</li> </ul>
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> <li>Electronic steering column lock relay signal (Request signal)</li> <li>Electronic steering column lock relay signal (Condition signal)</li> </ul>
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> <li>Starter motor relay control signal</li> <li>Starter relay status signal (CAN)</li> </ul>
B2609: S/L STATUS	<ul style="list-style-type: none"> <li>Inhibit engine cranking</li> <li>Inhibit electronic steering column lock</li> </ul>	When the following electronic steering column lock conditions agree <ul style="list-style-type: none"> <li>BCM electronic steering column lock control status</li> <li>Electronic steering column lock condition No. 1 signal status</li> <li>Electronic steering column lock condition No. 2 signal status</li> </ul>
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> <li>IGN relay (IPDM E/R) control signal: OFF (Battery voltage)</li> <li>Ignition ON signal (CAN to IPDM E/R): OFF (Request signal)</li> <li>Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)</li> </ul>
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions is fulfilled <ul style="list-style-type: none"> <li>Power position changes to ACC</li> <li>Receives engine status signal (CAN)</li> </ul>
B2612: S/L STATUS	<ul style="list-style-type: none"> <li>Inhibit engine cranking</li> <li>Inhibit electronic steering column lock</li> </ul>	When any of the following conditions is fulfilled <ul style="list-style-type: none"> <li>Electronic steering column lock unit status signal (CAN) is received normally</li> <li>The BCM electronic steering column lock control status matches the electronic steering column lock status recognized by the electronic steering column lock unit status signal (CAN from IPDM E/R)</li> </ul>
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal

## BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Display contents of CONSULT	Fail-safe	Cancellation
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the electronic steering column lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E1: ENG STATE NO RECIV	Inhibit engine cranking	When any of the following conditions is fulfilled <ul style="list-style-type: none"><li>• Power position changes to ACC</li><li>• Receives engine status signal (CAN)</li></ul>
B26E8: CLUTCH SW	Inhibit engine cranking	When any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"><li>• Status 1<ul style="list-style-type: none"><li>- Clutch switch signal (CAN from ECM): ON</li><li>- Clutch interlock switch signal: OFF (0 V)</li></ul></li><li>• Status 2<ul style="list-style-type: none"><li>- Clutch switch signal (CAN from ECM): OFF</li><li>- Clutch interlock switch signal: OFF (Battery voltage)</li></ul></li></ul>
B26E9: S/L STATUS	<ul style="list-style-type: none"><li>• Inhibit engine cranking</li><li>• Inhibit electronic steering column lock</li></ul>	When BCM transmits the LOCK request signal to the steering lock unit and receives LOCK response signal from steering lock unit, the following conditions are fulfilled <ul style="list-style-type: none"><li>• Steering condition No 1 signal: LOCK (0V)</li><li>• Steering condition No 2 signal: LOCK (Battery voltage)</li></ul>

### DTC Inspection Priority Chart

INFOID:000000006919702

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"><li>• B2562: LOW VOLTAGE</li></ul>
2	<ul style="list-style-type: none"><li>• U1000: CAN COMM CIRCUIT</li><li>• U1010: CONTROL UNIT (CAN)</li></ul>
3	<ul style="list-style-type: none"><li>• B2190: NATS ANTENNA AMP</li><li>• B2191: DIFFERENCE OF KEY</li><li>• B2192: ID DISCORD BCM-ECM</li><li>• B2193: CHAIN OF BCM-ECM</li><li>• B2195: ANTI SCANNING</li></ul>

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Priority	DTC	
4	• B2013: ID DISCORD BCM-S/L	A
	• B2014: CHAIN OF S/L-BCM	
	• B2553: IGNITION RELAY	
	• B2555: STOP LAMP	B
	• B2556: PUSH-BTN IGN SW	
	• B2557: VEHICLE SPEED	
	• B2560: STARTER CONT RELAY	
	• B2601: SHIFT POSITION	C
	• B2602: SHIFT POSITION	
	• B2603: SHIFT POSI STATUS	
	• B2604: PNP SW	
	• B2605: PNP SW	D
	• B2606: S/L RELAY	
	• B2607: S/L RELAY	
	• B2608: STARTER RELAY	
	• B2609: S/L STATUS	E
	• B260A: IGNITION RELAY	
	• B260B: STEERING LOCK UNIT	
	• B260C: STEERING LOCK UNIT	F
	• B260D: STEERING LOCK UNIT	
	• B260F: ENG STATE SIG LOST	
	• B2611: ACC RELAY	
	• B2612: S/L STATUS	G
	• B2614: ACC RELAY CIRC	
	• B2615: BLOWER RELAY CIRC	
	• B2616: IGN RELAY CIRC	
	• B2617: STARTER RELAY CIRC	H
	• B2618: BCM	
	• B2619: BCM	
	• B261A: PUSH-BTN IGN SW	
	• B261E: VEHICLE TYPE	I
	• B26E1: ENG STATE NO RECIV	
	• B26E8: CLUTCH SW	
	• B26E9: S/L STATUS	J
	• B26EA: KEY REGISTRATION	
	• C1729: VHCL SPEED SIG ERR	
	• U0415: VEHICLE SPEED SIG	
5	• C1704: LOW PRESSURE FL	K
	• C1705: LOW PRESSURE FR	
	• C1706: LOW PRESSURE RR	
	• C1707: LOW PRESSURE RL	
	• C1708: [NO DATA] FL	L
	• C1709: [NO DATA] FR	
	• C1710: [NO DATA] RR	
	• C1711: [NO DATA] RL	
	• C1712: [CHECKSUM ERR] FL	
	• C1713: [CHECKSUM ERR] FR	
	• C1714: [CHECKSUM ERR] RR	
	• C1715: [CHECKSUM ERR] RL	
	• C1716: [PRESSDATA ERR] FL	
	• C1717: [PRESSDATA ERR] FR	
	• C1718: [PRESSDATA ERR] RR	
	• C1719: [PRESSDATA ERR] RL	
	• C1720: [CODE ERR] FL	
	• C1721: [CODE ERR] FR	
	• C1722: [CODE ERR] RR	
	• C1723: [CODE ERR] RL	
	• C1724: [BATT VOLT LOW] FL	
	• C1725: [BATT VOLT LOW] FR	
	• C1726: [BATT VOLT LOW] RR	
	• C1727: [BATT VOLT LOW] RL	
	• C1734: CONTROL UNIT	
6	• B2622: INSIDE ANTENNA	
	• B2623: INSIDE ANTENNA	

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## DTC Index

INFOID:000000006919703

### NOTE:

Details of time display

- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	<a href="#">BCS-32</a>
U1010: CONTROL UNIT (CAN)	—	—	—	<a href="#">BCS-33</a>
U0415: VEHICLE SPEED SIG	—	—	—	<a href="#">BCS-34</a>
B2013: ID DISCORD BCM-S/L	×	—	—	<a href="#">SEC-36</a> (Coupe), <a href="#">SEC-250</a> (Sedan)
B2014: CHAIN OF S/L-BCM	×	—	—	<a href="#">SEC-37</a> (Coupe), <a href="#">SEC-251</a> (Sedan)
B2190: NATS ANTENNA AMP	×	—	—	<a href="#">SEC-65</a> (Coupe), <a href="#">SEC-281</a> (Sedan)
B2191: DIFFERENCE OF KEY	×	—	—	<a href="#">SEC-69</a> (Coupe), <a href="#">SEC-285</a> (Sedan)
B2192: ID DISCORD BCM-ECM	×	—	—	<a href="#">SEC-70</a> (Coupe), <a href="#">SEC-286</a> (Sedan)
B2193: CHAIN OF BCM-ECM	×	—	—	<a href="#">SEC-71</a> (Coupe), <a href="#">SEC-287</a> (Sedan)
B2195: ANTI-SCANNING	—	—	—	<a href="#">SEC-72</a>
B2553: IGNITION RELAY	—	—	—	<a href="#">PCS-59</a>
B2555: STOP LAMP	—	—	—	<a href="#">SEC-73</a> (Coupe), <a href="#">SEC-289</a> (Sedan)
B2556: PUSH-BTN IGN SW	—	×	—	<a href="#">SEC-78</a> (Coupe), <a href="#">SEC-294</a> (Sedan)
B2557: VEHICLE SPEED	×	×	—	<a href="#">SEC-80</a> (Coupe), <a href="#">SEC-296</a> (Sedan)
B2560: STARTER CONT RELAY	×	×	—	<a href="#">SEC-81</a> (Coupe), <a href="#">SEC-297</a> (Sedan)
B2562: LOW VOLTAGE	—	—	—	<a href="#">BCS-35</a>
B2601: SHIFT POSITION	×	×	—	<a href="#">SEC-82</a> (Coupe), <a href="#">SEC-298</a> (Sedan)
B2602: SHIFT POSITION	×	×	—	<a href="#">SEC-86</a> (Coupe), <a href="#">SEC-302</a> (Sedan)
B2603: SHIFT POSI STATUS	×	×	—	<a href="#">SEC-89</a> (Coupe), <a href="#">SEC-305</a> (Sedan)
B2604: PNP SW	×	×	—	<a href="#">SEC-92</a> (Coupe), <a href="#">SEC-308</a> (Sedan)
B2605: PNP SW	×	×	—	<a href="#">SEC-94</a> (Coupe), <a href="#">SEC-310</a> (Sedan)
B2606: S/L RELAY	×	×	—	<a href="#">SEC-96</a> (Coupe), <a href="#">SEC-312</a> (Sedan)

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
B2607: S/L RELAY	×	×	—	<a href="#">SEC-97</a> (Coupe), <a href="#">SEC-313</a> (Sedan)
B2608: STARTER RELAY	×	×	—	<a href="#">SEC-99</a> (Coupe), <a href="#">SEC-315</a> (Sedan)
B2609: S/L STATUS	×	×	—	<a href="#">SEC-101</a> (Coupe), <a href="#">SEC-317</a> (Sedan)
B260A: IGNITION RELAY	×	×	—	<a href="#">PCS-61</a>
B260B: STEERING LOCK UNIT	—	×	—	<a href="#">SEC-106</a> (Coupe), <a href="#">SEC-322</a> (Sedan)
B260C: STEERING LOCK UNIT	—	×	—	<a href="#">SEC-107</a> (Coupe), <a href="#">SEC-323</a> (Sedan)
B260D: STEERING LOCK UNIT	—	×	—	<a href="#">SEC-108</a> (Coupe), <a href="#">SEC-324</a> (Sedan)
B260F: ENG STATE SIG LOST	×	×	—	<a href="#">SEC-109</a> (Coupe), <a href="#">SEC-325</a> (Sedan)
B2611: ACC RELAY	—	—	—	<a href="#">PCS-62</a>
B2612: S/L STATUS	×	×	—	<a href="#">SEC-110</a> (Coupe), <a href="#">SEC-331</a> (Sedan)
B2614: ACC RELAY CIRC	—	×	—	<a href="#">PCS-64</a>
B2615: BLOWER RELAY CIRC	—	×	—	<a href="#">PCS-67</a>
B2616: IGN RELAY CIRC	—	×	—	<a href="#">PCS-70</a>
B2617: STARTER RELAY CIRC	×	×	—	<a href="#">SEC-115</a> (Coupe), <a href="#">SEC-336</a> (Sedan)
B2618: BCM	×	×	—	<a href="#">PCS-73</a>
B2619: BCM	×	×	—	<a href="#">SEC-117</a> (Coupe), <a href="#">SEC-338</a> (Sedan)
B261A: PUSH-BTN IGN SW	—	×	—	<a href="#">SEC-118</a> (Coupe), <a href="#">SEC-339</a> (Sedan)
B261E: VEHICLE TYPE	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-121</a>
B2622: INSIDE ANTENNA	—	—	—	<a href="#">DLK-279</a>
B2623: INSIDE ANTENNA	—	—	—	<a href="#">DLK-282</a>
B26E1: ENG STATE NO RES	×	×	—	<a href="#">SEC-326</a>
B26E8: CLUTCH SW	×	×	—	<a href="#">SEC-123</a>
B26E9: S/L STATUS	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-125</a>
B26EA: KEY REGISTRATION	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-126</a>
C1704: LOW PRESSURE FL	—	—	×	<a href="#">WT-8</a>
C1705: LOW PRESSURE FR	—	—	×	<a href="#">WT-8</a>
C1706: LOW PRESSURE RR	—	—	×	<a href="#">WT-8</a>
C1707: LOW PRESSURE RL	—	—	×	<a href="#">WT-8</a>
C1708: [NO DATA] FL	—	—	×	<a href="#">WT-13</a>
C1709: [NO DATA] FR	—	—	×	<a href="#">WT-13</a>
C1710: [NO DATA] RR	—	—	×	<a href="#">WT-13</a>
C1711: [NO DATA] RL	—	—	×	<a href="#">WT-13</a>
C1712: [CHECKSUM ERR] FL	—	—	×	<a href="#">WT-15</a>

**BCM (BODY CONTROL MODULE)**

&lt; ECU DIAGNOSIS INFORMATION &gt;

**[POWER DISTRIBUTION SYSTEM]**

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
C1713: [CHECKSUM ERR] FR	—	—	×	<a href="#">WT-15</a>
C1714: [CHECKSUM ERR] RR	—	—	×	<a href="#">WT-15</a>
C1715: [CHECKSUM ERR] RL	—	—	×	<a href="#">WT-15</a>
C1716: [PRESSDATA ERR] FL	—	—	×	<a href="#">WT-17</a>
C1717: [PRESSDATA ERR] FR	—	—	×	<a href="#">WT-17</a>
C1718: [PRESSDATA ERR] RR	—	—	×	<a href="#">WT-17</a>
C1719: [PRESSDATA ERR] RL	—	—	×	<a href="#">WT-17</a>
C1720: [CODE ERR] FL	—	—	×	<a href="#">WT-15</a>
C1721: [CODE ERR] FR	—	—	×	<a href="#">WT-15</a>
C1722: [CODE ERR] RR	—	—	×	<a href="#">WT-15</a>
C1723: [CODE ERR] RL	—	—	×	<a href="#">WT-15</a>
C1724: [BATT VOLT LOW] FL	—	—	×	<a href="#">WT-15</a>
C1725: [BATT VOLT LOW] FR	—	—	×	<a href="#">WT-15</a>
C1726: [BATT VOLT LOW] RR	—	—	×	<a href="#">WT-15</a>
C1727: [BATT VOLT LOW] RL	—	—	×	<a href="#">WT-15</a>
C1729: VHCL SPEED SIG ERR	—	—	×	<a href="#">WT-18</a>
C1734: CONTROL UNIT	—	—	×	<a href="#">WT-19</a>

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**  
 < ECU DIAGNOSIS INFORMATION > **[POWER DISTRIBUTION SYSTEM]**

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**

Reference Value

INFOID:000000006919752

**VALUES ON THE DIAGNOSIS TOOL**

Monitor Item	Condition		Value/Status
RADFAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 - 100 %
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		Front fog lamp switch ON	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	STOP
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	CVT selector lever in any position other than P or N (CVT models)	Off
		Release clutch pedal (M/T models)	
	Ignition switch ON	CVT selector lever in P or N position (CVT models)	On
		Depress clutch pedal (M/T models)	
ST RLY CONT	Ignition switch ON		Off
	At engine cranking		On
IHBT RLY -REQ	Ignition switch ON		Off
	At engine cranking		On

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**  
**< ECU DIAGNOSIS INFORMATION > [POWER DISTRIBUTION SYSTEM]**

Monitor Item	Condition		Value/Status
ST/INHI RLY	Ignition switch ON		Off
	At engine cranking		ST → INHI
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF		UNKWN
DETENT SW	Ignition switch ON	<ul style="list-style-type: none"> <li>Press the selector button with CVT selector lever in P position</li> <li>CVT selector lever in any position other than P</li> </ul>	Off
	Release the CVT selector button with CVT selector lever in P position <b>NOTE:</b> The lever is fixed ON for M/T		On
S/L RLY -REQ	None of the conditions below are present		Off
	<ul style="list-style-type: none"> <li>Open the driver door after the ignition switch is turned OFF (for a few seconds)</li> <li>Press the push-button ignition switch when the steering lock is activated</li> <li>Depress the clutch pedal when the steering lock is activated</li> </ul>		On
S/L STATE	Steering lock is activated		LOCK
	Steering lock is deactivated		UNLK
	[DTC B210A] is detected		UNKWN
OIL P SW	Ignition switch OFF, ACC or engine running		Open
	Ignition switch ON		Close
THFT HRN REQ	Not operated		Off
	<ul style="list-style-type: none"> <li>Panic alarm is activated</li> <li>Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM</li> </ul>		On
HORN CHIRP	Not operated		Off
	Door locking with Intelligent Key (horn chirp mode)		On




# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## TERMINAL LAYOUT

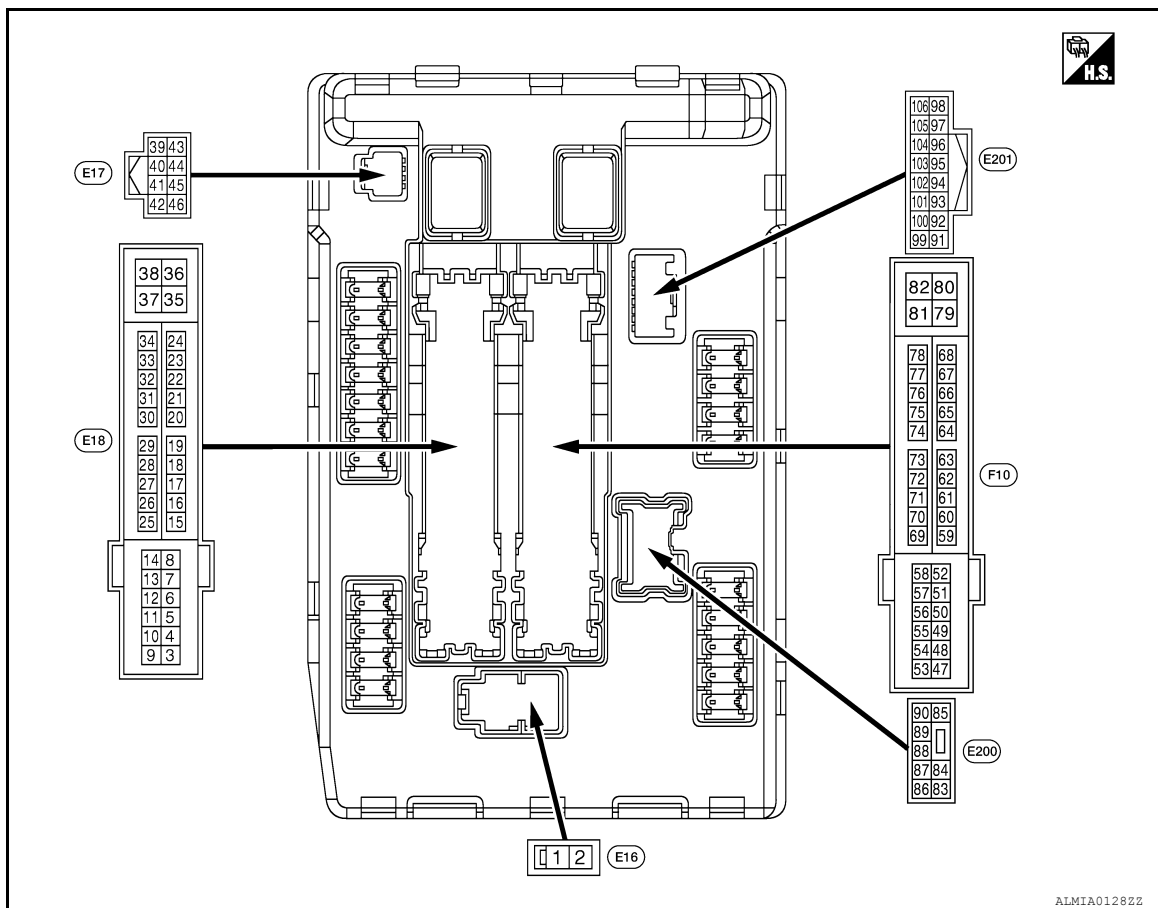

## PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (L)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
4 (LG)	Ground	Front wiper LO	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch LO	Battery voltage
5 (Y)	Ground	Front wiper HI	Output	Ignition switch ON	Front wiper switch OFF	0 V
					Front wiper switch HI	Battery voltage
7 (GR)	Ground	Tail, license plate lamps & interior lamps	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
10 (BR)	Ground	ECM relay power supply	Output	Ignition switch OFF (For a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (More than a few seconds after turn- ing ignition switch OFF)		Battery voltage

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**  
**< ECU DIAGNOSIS INFORMATION > [POWER DISTRIBUTION SYSTEM]**

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
11 (O)	Ground	Electronic steering column lock power supply	Output	Ignition switch OFF	A few seconds after open- ing the driver door	Battery voltage
				Ignition switch LOCK	Press the push-button ig- nition switch	Battery voltage
				Ignition switch ACC or ON		0 V
12 (B)	Ground	Ground	—	Ignition switch ON		0 V
13 (SB)	Ground	Fuel pump power supply	Output	Approximately 1 second or more after turning the ignition switch ON		0 V
				<ul style="list-style-type: none"> <li>Approximately 1 second after turning the ignition switch ON</li> <li>Engine running</li> </ul>		Battery voltage
15 (W)	Ground	Ignition relay-1 power sup- ply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
16 (L/Y)	Ground	Front wiper auto stop	Input	Ignition switch ON	Front wiper stop position	0 V
					Any position other than front wiper stop position	Battery voltage
19 (Y)	Ground	Ignition relay-1 power sup- ply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
20 (L)	Ground	Ambient sensor ground	—	Ignition switch ON		0V
21 (LG)	Ground	Ambient sensor	—	Ignition switch ON		5V
22 (W/R)	Ground	Refrigerant pressure sen- sor ground	—	Ignition switch ON		0V
23 (B/R)	Ground	Refrigerant pressure sen- sor	—	<ul style="list-style-type: none"> <li>Ignition switch ON (READY)</li> <li>Both A/C switch and blower motor switch ON (electric compressor oper- ates)</li> </ul>		1.0 - 4.0V
24 (BR/W)	Ground	Refrigerant pressure sen- sor power supply	—	Ignition switch ON		5V
25 (GR)	Ground	Ignition relay-1 power sup- ply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
27 (W)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC		Battery voltage
				Ignition switch ON		0 V
28 (SB)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch		0 V
				Release the push-button ignition switch		Battery voltage
30 (R) (with M/T) 30 (BR) (with CVT)	Ground	Starter relay control	Input	CVT mod- els	CVT selector lever in any position other than P or N (ignition switch ON)	0 V
					CVT selector lever P or N (ignition switch ON)	Battery voltage
				M/T mod- els	Release the clutch pedal	0 V
					Depress the clutch pedal	Battery voltage

**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**  
**< ECU DIAGNOSIS INFORMATION > [POWER DISTRIBUTION SYSTEM]**

Terminal No. (Wire color)		Description		Condition		Value (Approx.)	
+	-	Signal name	Input/ Output				
32 (O/L)	Ground	Electronic steering column lock unit condition-1	Input	Electronic steering column lock is activated		0 V	A
				Electronic steering column lock is deactivated		Battery voltage	B
33 (G)	Ground	Electronic steering column lock unit condition-2	Input	Electronic steering column lock is activated		Battery voltage	C
				Electronic steering column lock is deactivated		0 V	D
34 (O)	Ground	Cooling fan relay-3 control	Input	Ignition switch OFF or ACC		0 V	E
				Ignition switch ON		0.7 V	
35 (P)	Ground	Cooling fan motor control	Output	Ignition switch OFF or ACC		0 V	F
				Ignition switch ON		0.7 V	
36 (G)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage	G
38 (R/W)	Ground	Cooling fan motor control	Output	Ignition switch OFF or ACC		0 V	H
				Ignition switch ON		0.7 V	
39 (P)	—	CAN - L	Input/ Output	—		—	I
40 (L)	—	CAN - H	Input/ Output	—		—	J
41 (B)	Ground	Ground	—	Ignition switch ON		0 V	K
42 (SB)	Ground	Cooling fan relay-2 control	Input	Ignition switch OFF or ACC		0 V	L
				Ignition switch ON		0.7 V	
43 (G/B)	Ground	CVT shift selector (Detention switch)	Input	Ignition switch ON	Press the CVT selector button (CVT selector lever P)	Battery voltage	PCS
					<ul style="list-style-type: none"> <li>CVT selector lever in any position other than P</li> <li>Release the CVT selector button (CVT selector lever P)</li> </ul>	0 V	
44 (G/W) coupe (W) sedan	Ground	Horn relay control	Input	The horn is deactivated		Battery voltage	N
				The horn is activated		0 V	
45 (L/O)	Ground	Anti theft horn relay control	Input	The horn is deactivated		Battery voltage	O
				The horn is activated		0 V	
46 (BR)	Ground	Starter relay control	Input	CVT mod- els	CVT selector lever in any position other than P or N (ignition switch ON)	0 V	P
					CVT selector lever P or N (ignition switch ON)	Battery voltage	
				M/T mod- els	Release the clutch pedal	0 V	
					Depress the clutch pedal	Battery voltage	
48 (W)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 V	
					A/C switch ON (A/C compressor is oper- ating)	Battery voltage	




**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**  
**< ECU DIAGNOSIS INFORMATION > [POWER DISTRIBUTION SYSTEM]**

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
49 (V)	Ground	ECM relay power supply	Output	Ignition switch OFF (For a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		Battery voltage
51 (SB)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
52 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
53 (V) (with QR25DE) 53 (G) (with VQ35DE)	Ground	ECM relay power supply	Output	Ignition switch OFF (For a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		Battery voltage
54 (GR)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (For a few seconds after turning ignition switch OFF)		0 V
				• Ignition switch ON • Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		Battery voltage
55 (LG)	Ground	ECM power supply	Output	Ignition switch OFF		Battery voltage
56 (R)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
57 (O)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
58 (BR) (with CVT)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
69 (SB)	Ground	ECM relay control	Output	Ignition switch OFF (For a few seconds after turning ignition switch OFF)		Battery voltage
				• Ignition switch ON • Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 - 1.5 V
70 (G)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF		0 - 1.0 V ↓ Battery voltage ↓ 0 V
				Ignition switch ON		0 - 1.0 V
72 (W) (with QR25DE) 72 (BR) (with VQ35DE)	Ground	Transmission range switch signal	Input	Ignition switch ON	CVT selector lever in P or N position	Battery voltage
					CVT selector lever in any position other than P or N position	0 V

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

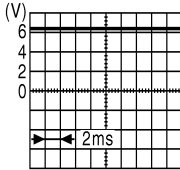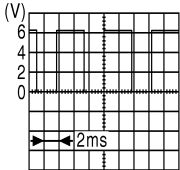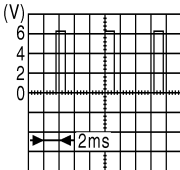Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
74 (L)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
75 (LG)	Ground	Oil pressure switch	Input	Ignition switch ON	Engine stopped	0 V
					Engine running	Battery voltage
76 (Y)	Ground	Power generation com- mand signal	Output	Ignition switch ON		 JPMIA0001GB 6.3 V
				40% is set on "Active test", "ALTE- TOR DUTY" of "ENGINE"		 JPMIA0002GB 3.8 V
				80% is set on "Active test", "ALTE- TOR DUTY" of "ENGINE"		 JPMIA0003GB 1.4 V
77 (GR)	Ground	Fuel pump relay control	Output	• Approximately 1 second after turning the ignition switch ON • Engine running		0 - 1.0 V
				Approximately 1 second or more after turning the ignition switch ON		Battery voltage
80 (R)	Ground	Starter motor	Output	At engine cranking		Battery voltage
83 (R/Y)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
84 (L)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
86 (W/R)	Ground	Front fog lamp (RH) (If equipped)	Output	Lighting switch 2ND	Front fog lamp switch ON	Battery voltage
					Front fog lamp switch OFF	0 V
87 (L/Y)	Ground	Front fog lamp (LH) (If equipped)	Output	Lighting switch 2ND	Front fog lamp switch ON	Battery voltage
					Front fog lamp switch OFF	0 V
88 (R/W)	Ground	Washer pump power sup- ply	Output	Ignition switch ON		Battery voltage

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
89 (L/W)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	• Lighting switch HI • lighting switch PASS	Battery voltage
					Lighting switch OFF	0 V
90 (G)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	• Lighting switch HI • Lighting switch PASS	Battery voltage
					Lighting switch OFF	0 V
91 (LG/R)	Ground	Parking lamp (RH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
92 (LG/B)	Ground	Parking lamp (LH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
99 (BR/W)	Ground	Ambient sensor ground	—	Ignition switch ON		0V
100 (SB)	Ground	Ambient sensor	—	Ignition switch ON		5V
101 (O/L)	Ground	Refrigerant pressure sensor ground	—	Ignition switch ON		0V
102 (R/B)	Ground	Refrigerant pressure sensor	—	• Ignition switch ON (READY) • Both A/C switch and blower motor switch ON (electric compressor operates)		1.0 - 4.0V
103 (P)	Ground	Refrigerant pressure sensor power supply	—	Ignition switch ON		5V

## Fail Safe

INFOID:000000006919753

## CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

Control part	Fail-safe in operation
Cooling fan	<ul style="list-style-type: none"> <li>• Signals cooling fans ON when the ignition switch is turned ON</li> <li>• Signals cooling fans OFF when the ignition switch is turned OFF</li> </ul>
A/C compressor	A/C relay OFF
Generator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe in operation
Headlamp	<ul style="list-style-type: none"> <li>• Turns ON the headlamp low relay when the ignition switch is turned ON</li> <li>• Turns OFF the headlamp low relay when the ignition switch is turned OFF</li> <li>• Headlamp high relay OFF</li> </ul>
<ul style="list-style-type: none"> <li>• Parking lamps</li> <li>• License plate lamps</li> <li>• Illumination</li> <li>• Tail lamps</li> </ul>	<ul style="list-style-type: none"> <li>• Turns ON the tail lamp relay when the ignition switch is turned ON</li> <li>• Turns OFF the tail lamp relay when the ignition switch is turned OFF</li> </ul>
Front wiper	<ul style="list-style-type: none"> <li>• The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed.</li> <li>• The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.</li> </ul>

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Control part	Fail-safe in operation
Front fog lamps (if equipped)	Front fog lamp relay OFF
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF
Electronic steering column lock unit	Steering lock relay OFF

## IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

DTC	Ignition switch	Ignition relay	Tail lamp relay
—	ON	ON	—
—	OFF	OFF	—
B2098: IGN RELAY ON	OFF	ON	ON (10 minutes)
B2099: IGN RELAY OFF	ON	OFF	—

### NOTE:

The tail lamp turns OFF when the ignition switch is turned ON.

## FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 second activation and 20 second stop five times.

Ignition switch	Front wiper switch	Auto stop signal
ON	OFF	Front wiper stop position signal cannot be input 10 seconds.
	ON	The signal does not change for 10 seconds.

### NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

## STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

## DTC Index

INFOID:000000006919754

PCS

CONSULT display	Fail-safe	TIME <sup>NOTE</sup>		Refer to
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	×	CRNT	1 – 39	<a href="#">PCS-17</a>
B2098: IGN RELAY ON	×	CRNT	1 – 39	<a href="#">PCS-18</a>
B2099: IGN RELAY OFF	—	CRNT	1 – 39	<a href="#">PCS-19</a>
B2108: STRG LCK RELAY ON	—	CRNT	1 – 39	<a href="#">SEC-255</a>
B2109: STRG LCK RELAY OFF	—	CRNT	1 – 39	<a href="#">SEC-256</a>
B210A: STRG LCK STATE SW	—	CRNT	1 – 39	<a href="#">SEC-257</a>
B210B: START CONT RLY ON	—	CRNT	1 – 39	<a href="#">SEC-262</a>
B210C: START CONT RLY OFF	—	CRNT	1 – 39	<a href="#">SEC-263</a>

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

CONSULT display	Fail-safe	TIME <sup>NOTE</sup>		Refer to
B210D: STARTER RELAY ON	—	CRNT	1 – 39	<a href="#">SEC-264</a>
B210E: STARTER RELAY OFF	—	CRNT	1 – 39	<a href="#">SEC-266</a>
B210F: INTRLCK/TRANSMISSION RANGE SW ON	—	CRNT	1 – 39	<a href="#">SEC-269</a>
B2110: INTRLCK/TRANSMISSION RANGE SW OFF	—	CRNT	1 – 39	<a href="#">SEC-275</a>

## NOTE:

The details of TIME display are as follows.

- CRNT: The malfunctions that are detected now
- 1 - 39: The number is indicated when it is normal at present and a malfunction was detected in the past. It increases like 0 → 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON. It is fixed to 39 until the self-diagnosis results are erased if it is over 39. It returns to 0 when a malfunction is detected again in the process.




**[POWER DISTRIBUTION SYSTEM]**

## WIRING DIAGRAM

## Wiring Diagram - Coupe

INFOID:0000000006392865

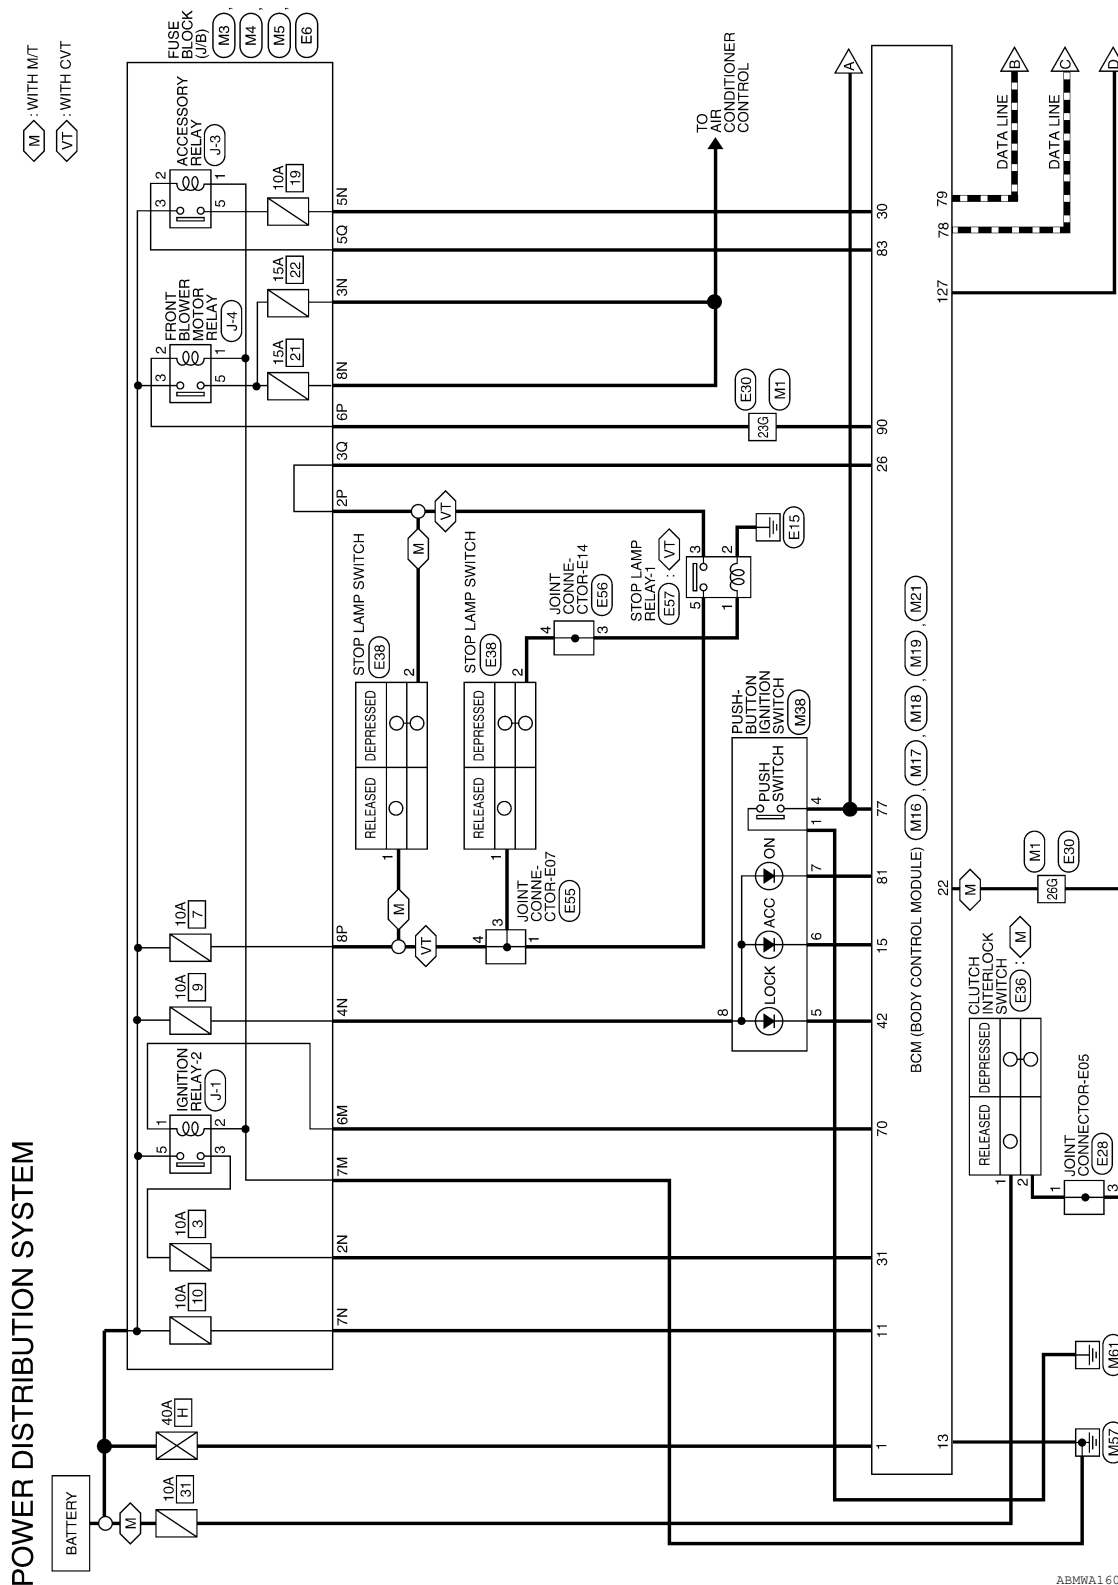


ABMWA1608GB

# POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]

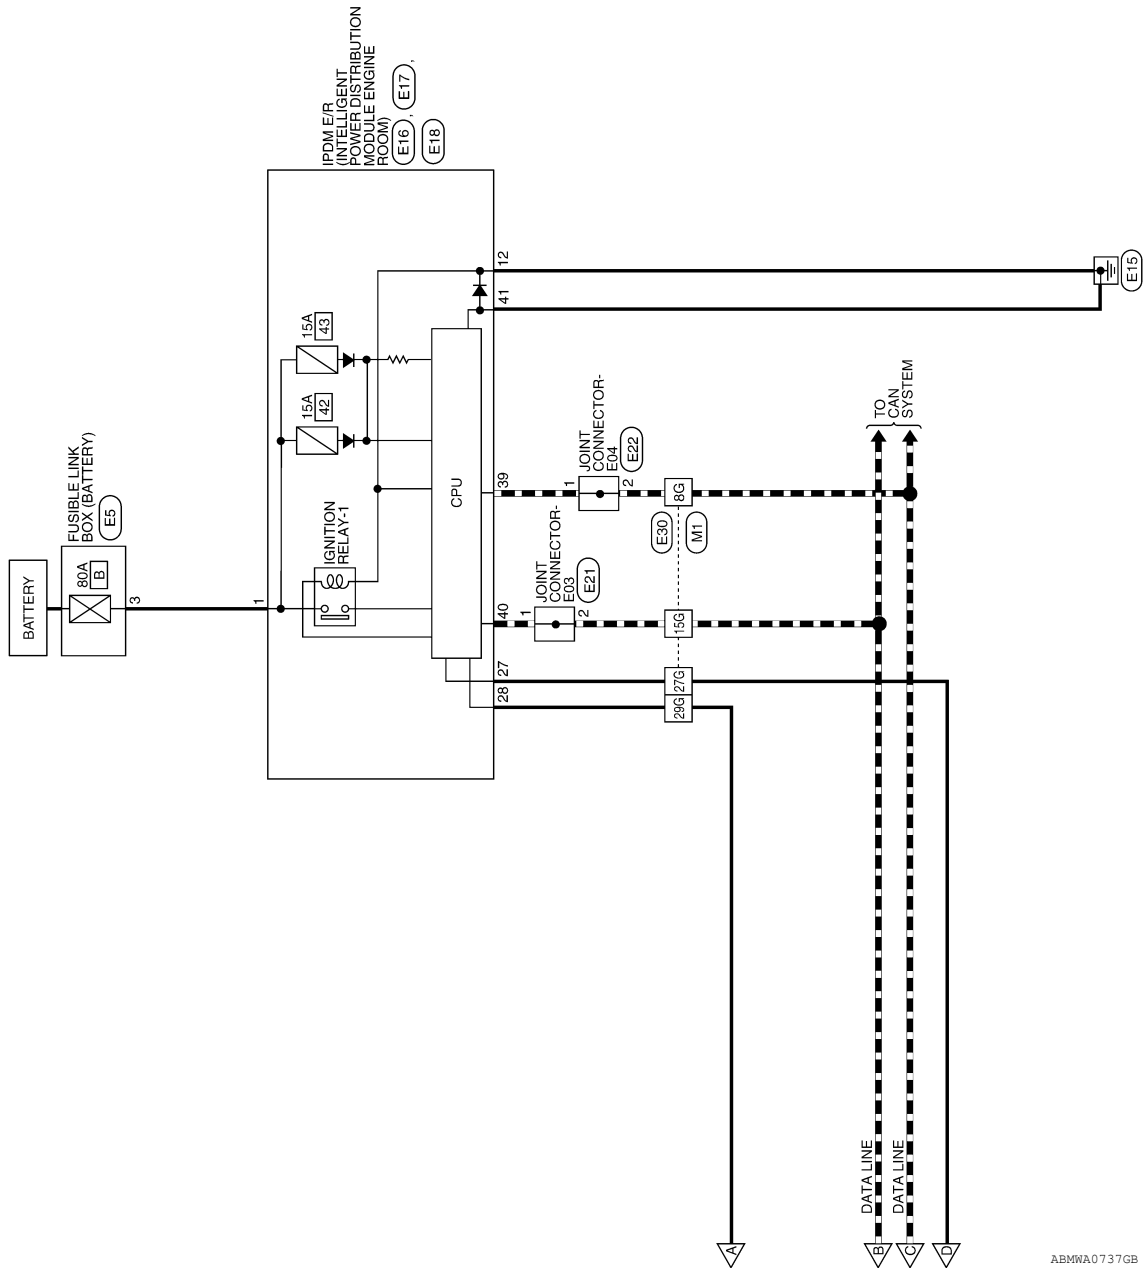


# POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]


## POWER DISTRIBUTION SYSTEM CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

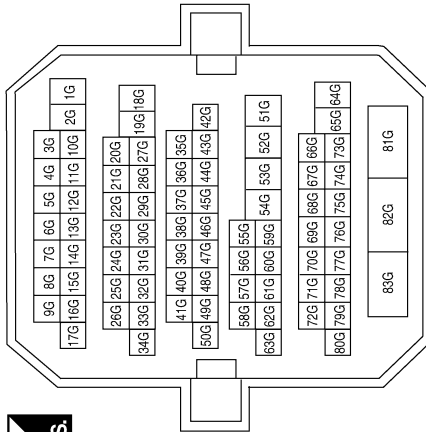


Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
23G	Y	-
26G	R/Y	-
27G	BR/W	-
29G	BR	-
82G	W/B	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2N	G	-
3N	W/L	-
4N	Gr/Y	-
5N	V/Y	-
7N	Y/R	-
8N	W/L	-

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3Q	O/L	-
5Q	L	-

Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6M	R/B	-
7M	B	-

Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W/B	BAT_POWER_F/L

# POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]

Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

4	5	6	7	8		9	10	
11	12	13	14	15	16	17	18	19



Terminal No.	Color of Wire	Signal Name
11	Y/R	BAT_BCM_FUSE
13	B	GND1
15	Y/L	ACC_LED

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20
59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41	40

Terminal No.	Color of Wire	Signal Name
22	R/Y	CLUTCH_SW
26	O/L	STOP_LAMP_HIGH_SW
30	V/Y	ACC_F/B
31	G	IGN_F/B
42	R	S/L_LOCK_LED

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61	60
99	98	97	96	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81	80

Terminal No.	Color of Wire	Signal Name
70	R/B	IGN_ELEC_CONT
77	BR	ENG_START_SW
78	P	CAN-L
79	L	CAN-H
81	LG	IGN_ON_LED
83	L	ACC_CONT
90	Y	IGN2_CONT

Connector No.	M21
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY



131	130	129	128	127	126	125	124	123	122	121	120	119	118	117	116	115	114	113	112
151	150	149	148	147	146	145	144	143	142	141	140	139	138	137	136	135	134	133	132

Terminal No.	Color of Wire	Signal Name
127	BR/W	IGN_USM_CONT1

Connector No.	M38
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Color	BROWN



Terminal No.	Color of Wire	Sign
--------------	---------------	------

Terminal No.	Color of Wire	Signal Name
1	B	GND
4	BR	START_SW
5	R	LOCK
6	Y/L	ACC
7	LG	ON
8	G/Y	B+

Connector No.	E5
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
3	R	—

# POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]

Connector No.	E17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
39	P	CAN-L
40	L	CAN-H
41	B	GND (SIGNAL)

Connector No.	E16
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	R	F/L_MAIN

Connector No.	E6
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2P	Y	– (WITH CVT)
2P	LG	– (WITH M/T)
6P	Y	–
8P	R	–

Connector No.	E22
Connector Name	JOINT CONNECTOR-E04
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	P	–
2	P	–

Connector No.	E21
Connector Name	JOINT CONNECTOR-E03
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	–
2	L	–

Connector No.	E18
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE

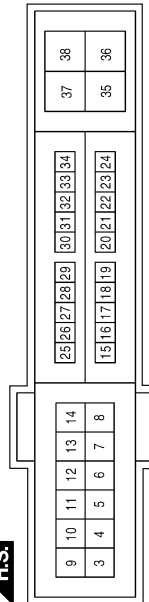

Terminal No.	Color of Wire	Signal Name
12	B	GND (POWER)
27	W	IGN_SIGNAL
28	SB	PUSH_START_SW

AAMIA0621GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS


# POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]

Terminal No.	Color of Wire	Signal Name
8G	P	—
15G	L	—
23G	Y	—
26G	R	—
27G	W	—
29G	SB	—
82G	LG	—

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

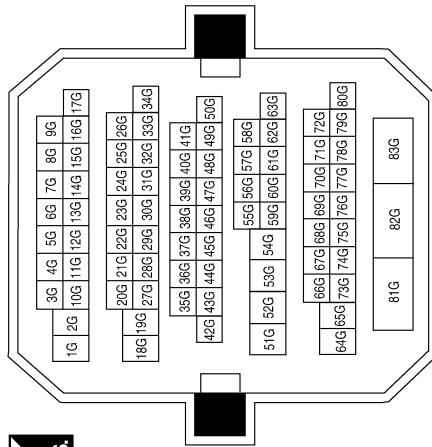

Terminal No.	Color of Wire	Signal Name
1	R	—
3	R	—

Connector No.	E38
Connector Name	STOP LAMP SWITCH (WITH CVT)
Connector Color	WHITE



Connector No.	E38
Connector Name	STOP LAMP SWITCH (WITH M/T)
Connector Color	BLACK



Connector No.	E36
Connector Name	CLUTCH INTERLOCK SWITCH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	R	—
2	LG	—

Terminal No.	Color of Wire	Signal Name
1	R	—
2	LG	—

Terminal No.	Color of Wire	Signal Name
1	W	—
2	R	—

ABMIA1936GB

# POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]

Connector No.	E57
Connector Name	STOP LAMP RELAY-1
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	B	-
3	Y	-
5	W	-

Connector No.	E56
Connector Name	JOINT CONNECTOR-E14
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	LG	-
4	LG	-

Connector No.	E55
Connector Name	JOINT CONNECTOR-E07
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	W	-
3	R	-
4	R	-


Connector No.	J-4
Connector Name	FUSE BLOCK (J/B) (FRONT BLOWER MOTOR RELAY)
Connector Color	-

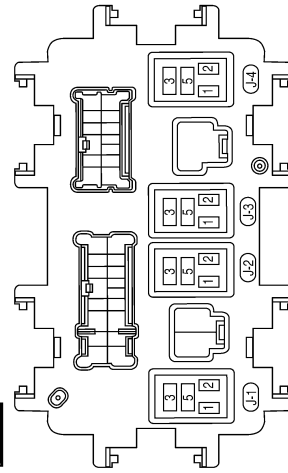

Connector No.	J-3
Connector Name	FUSE BLOCK (J/B) (ACCESSORY RELAY)
Connector Color	-

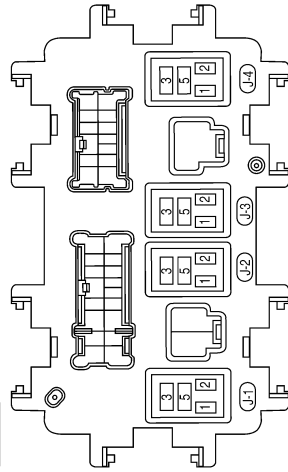

Connector No.	J-1
Connector Name	FUSE BLOCK (J/B) (IGNITION RELAY-2)
Connector Color	-

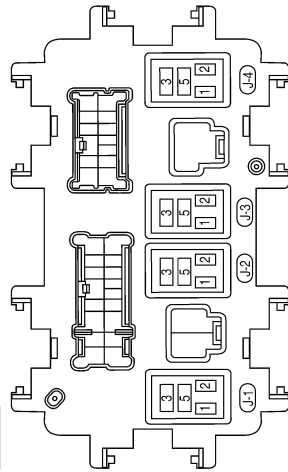

AAMIA0622GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P


# POWER DISTRIBUTION SYSTEM

[POWER DISTRIBUTION SYSTEM]

< WIRING DIAGRAM >

## Wiring Diagram - Sedan

INFOID:000000006392866

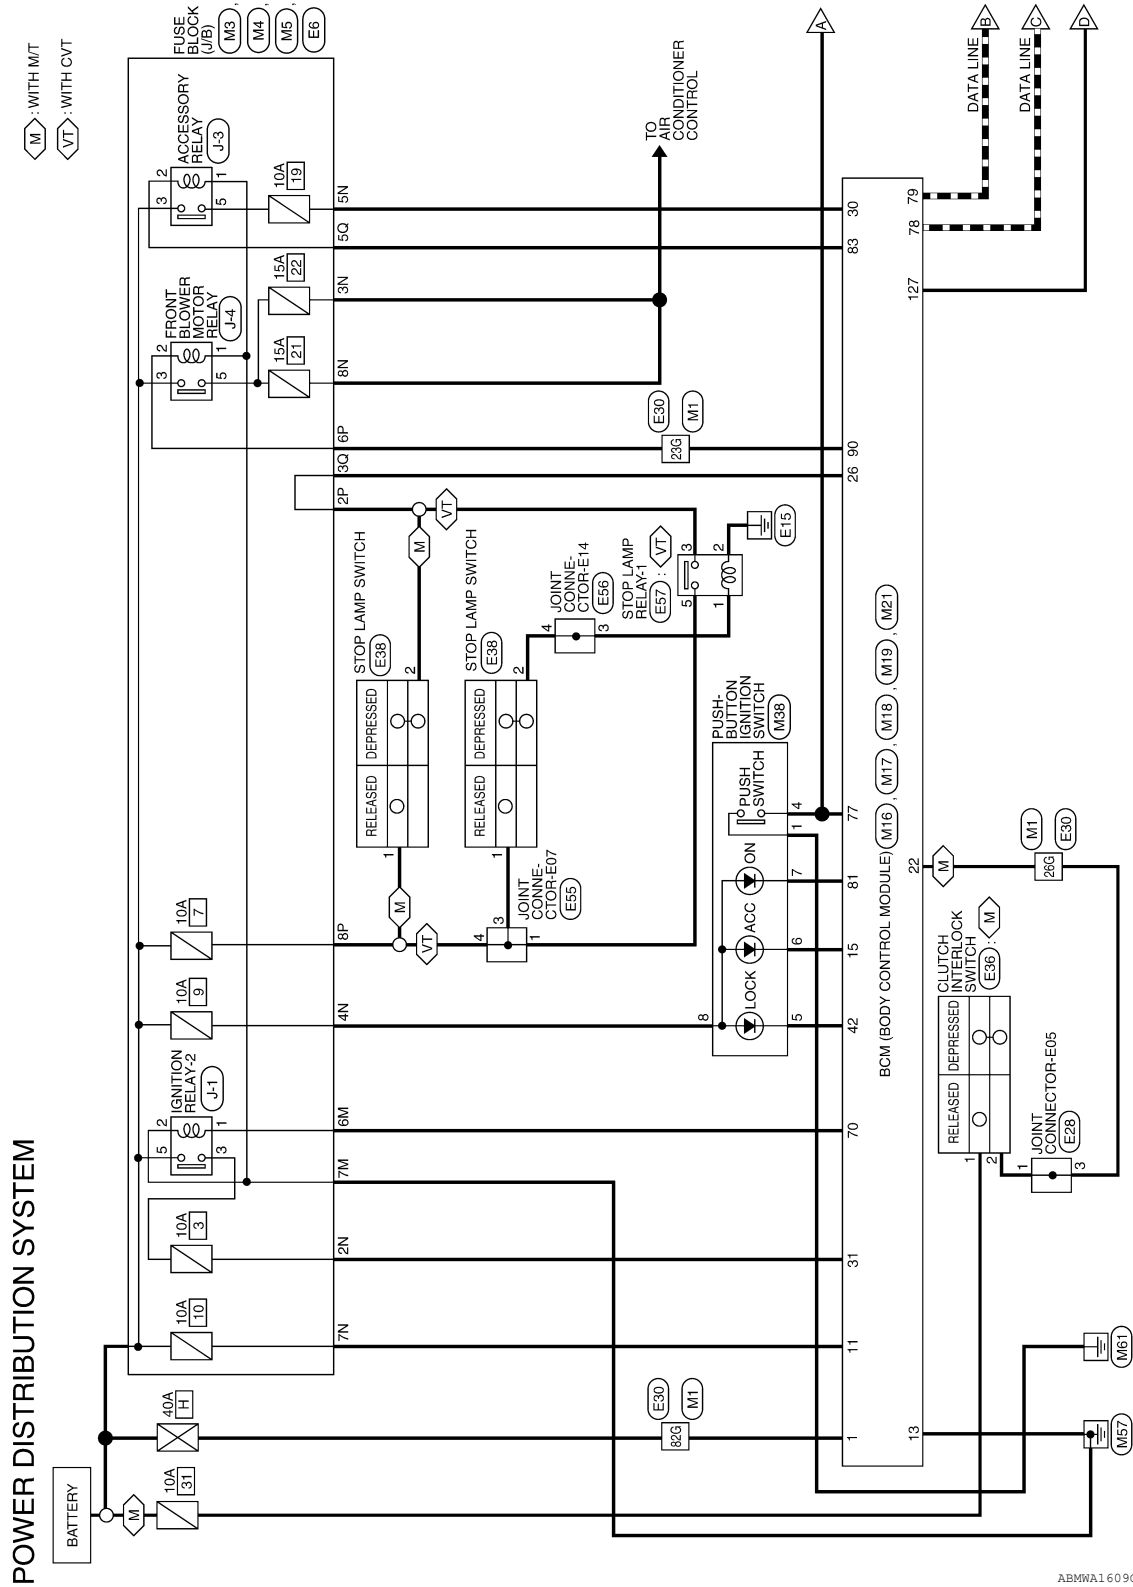


ABMWA1609GB



# POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]

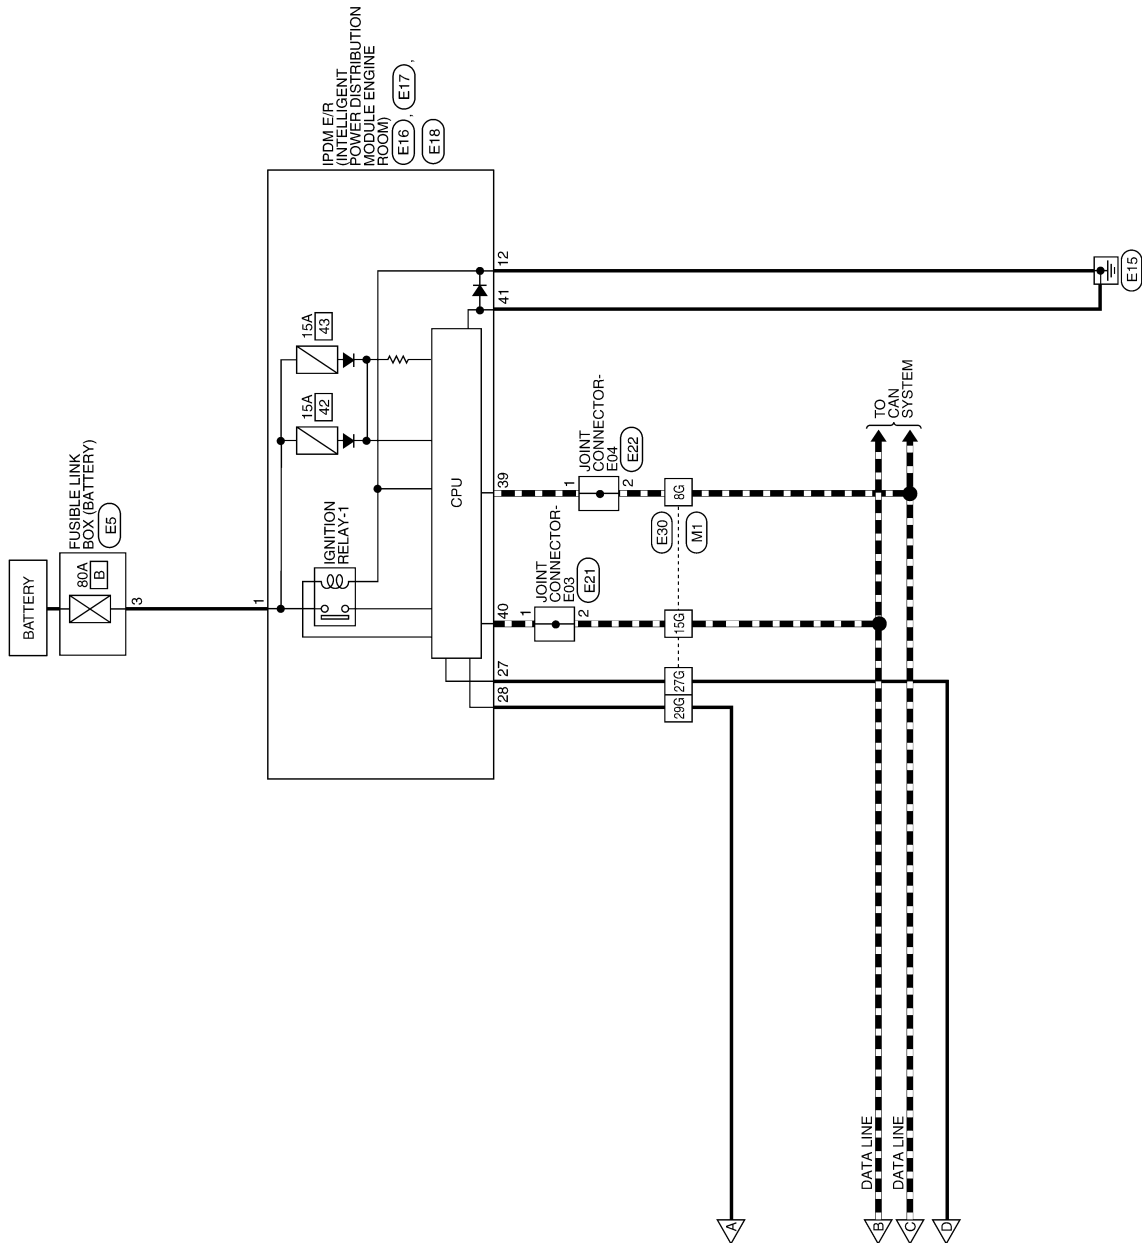

ABMWA0735GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P


# POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]


## POWER DISTRIBUTION SYSTEM CONNECTORS

Connector No.	M1
Connector Name	WIRE TO WIRE
Connector Color	WHITE

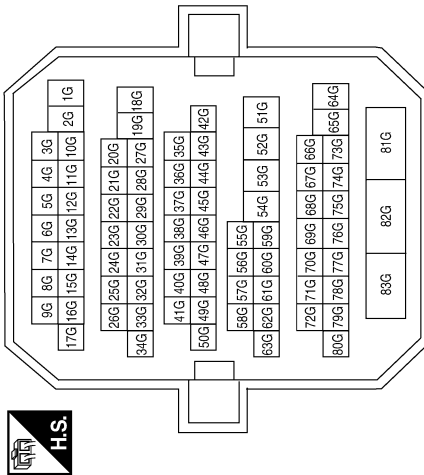

Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
23G	Y	-
26G	R/Y	-
27G	BR/W	-
29G	BR	-
82G	W/B	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2N	G	-
3N	W/L	-
4N	G/Y	-
5N	V/Y	-
7N	Y/R	-
8N	W/L	-

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3Q	O/L	-
5Q	L	-

Connector No.	M5
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6M	R/B	-
7M	B	-

Connector No.	M16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




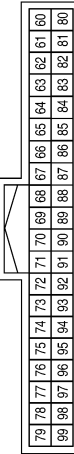
Terminal No.	Color of Wire	Signal Name
1	W/B	BAT_POWER_F/L

# POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >



[POWER DISTRIBUTION SYSTEM]

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
70	R/B	IGN_ELEC_CONT
77	BR	ENG_START_SW
78	P	CAN-L
79	L	CAN-H
81	LG	IGN_ON_LED
83	L	ACC_CONT
90	Y	IGN2_CONT

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



Terminal No.	Color of Wire	Signal Name
22	R/Y	CLUTCH_SW
26	O/L	STOP_LAMP_HIGH_SW
30	V/Y	ACC_F/B
31	G	IGN_F/B
42	R	S/L_LOCK_LED

Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE


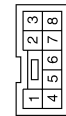
Terminal No.	Color of Wire	Signal Name
11	Y/R	BAT_BCM_FUSE
13	B	GND1
15	Y/L	ACC_LED

Connector No.	E5
Connector Name	FUSIBLE LINK BOX (BATTERY)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
3	R	-

Connector No.	M38
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Color	BROWN

Terminal No.	Color of Wire	Signal Name
1	B	GND
4	BR	START_SW
5	R	LOCK
6	Y/L	ACC
7	LG	ON
8	G/Y	B+

Connector No.	M21
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY

Terminal No.	Color of Wire	Signal Name
127	BR/W	IGN_USM_CONT1

ABMIA1930GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

# POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]

Connector No.	E17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



42	41	40	39
46	45	44	43

Terminal No.	Color of Wire	Signal Name
39	P	CAN-L
40	L	CAN-H
41	B	GND (SIGNAL)

Connector No.	E16
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



1	2
---	---

Terminal No.	Color of Wire	Signal Name
1	R	F/L MAIN

Connector No.	E6
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



7P	6P	5P	4P	3P	2P	1P
16P	15P	14P	13P	12P	11P	10P
9P	8P					

Terminal No.	Color of Wire	Signal Name
2P	Y	— (WITH CVT)
2P	LG	— (WITH M/T)
6P	Y	—
8P	R	—

Connector No.	E22
Connector Name	JOINT CONNECTOR-E04
Connector Color	WHITE



4	3	2	1
---	---	---	---

Connector No.	E21
Connector Name	JOINT CONNECTOR-E03
Connector Color	WHITE



4	3	2	1
---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	P	—
2	P	—

Terminal No.	Color of Wire	Signal Name
1	L	—
2	L	—

Connector No.	E18
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



9	10	11	12	13	14
3	4	5	6	7	8
25	26	27	28	29	30
31	32	33	34		
15	16	17	18	19	20
21	22	23	24		
37	38				
35	36				

Terminal No.	Color of Wire	Signal Name
12	B	GND (POWER)
27	W	IGN_SIGNAL
28	SB	PUSH_START_SW

AAMIA0623GB


POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]

Terminal No.	Color of Wire	Signal Name
8G	P	-
15G	L	-
23G	Y	-
26G	R	-
27G	W	-
29G	SB	-
82G	LG	-

Connector No.	E30
Connector Name	WIRE TO WIRE
Connector Color	WHITE

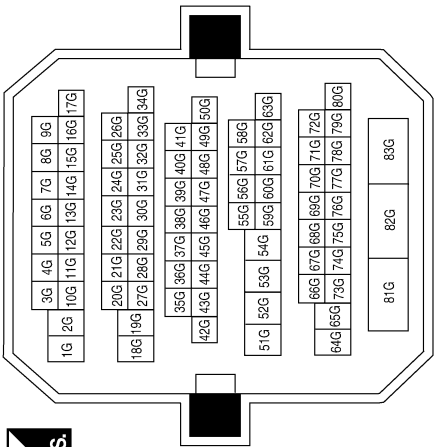

Terminal No.	Color of Wire	Signal Name
1	R	-
3	R	-

Connector No.	E38
Connector Name	STOP LAMP SWITCH (WITH CVT)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R	-
2	LG	-

Connector No.	E38
Connector Name	STOP LAMP SWITCH (WITH M/T)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R	-
2	LG	-

Connector No.	E36
Connector Name	CLUTCH INTERLOCK SWITCH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	W	-
2	R	-

ABMIA1932GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# POWER DISTRIBUTION SYSTEM

< WIRING DIAGRAM >

[POWER DISTRIBUTION SYSTEM]

Connector No.	E57
Connector Name	STOP LAMP RELAY-1
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	B	-
3	Y	-
5	W	-

Connector No.	E56
Connector Name	JOINT CONNECTOR-E14
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	LG	-
4	LG	-

Connector No.	E55
Connector Name	JOINT CONNECTOR-E07
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	W	-
3	R	-
4	R	-


Connector No.	J-4
Connector Name	FUSE BLOCK (J/B) (FRONT BLOWER MOTOR RELAY)
Connector Color	-

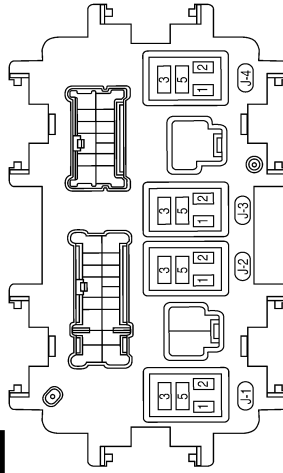

Connector No.	J-3
Connector Name	FUSE BLOCK (J/B) (ACCESSORY RELAY)
Connector Color	-

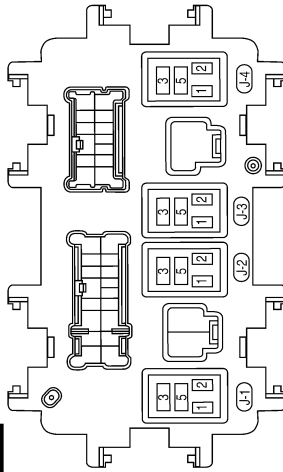

Connector No.	J-1
Connector Name	FUSE BLOCK (J/B) (IGNITION RELAY-2)
Connector Color	-

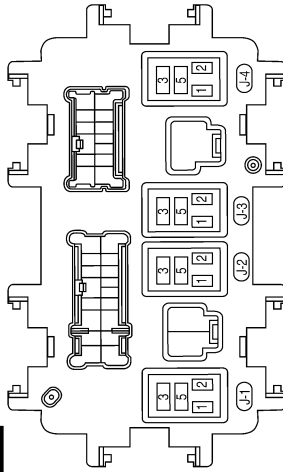

AAMIA0624GB

# POWER DISTRIBUTION SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## SYMPTOM DIAGNOSIS

### POWER DISTRIBUTION SYSTEM SYMPTOMS

#### Symptom Table

INFOID:0000000006392867

Before performing the diagnosis in the following table, check the contents of [PCS-46, "Work Flow"](#).

Symptom	Suspect Systems	Refer to
The power supply changing operation is normal. But the push-button ignition switch position indicator does not turn on.	1. Check push-button ignition switch position indicator.	<a href="#">PCS-79</a>
	2. Check Intermittent Incident.	<a href="#">GI-42, "Intermittent Incident"</a>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006392868

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precautions Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:000000006392869

#### **NOTE:**

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit.

If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

#### OPERATION PROCEDURE

1. Connect both battery cables.

#### **NOTE:**

Supply power using jumper cables if battery is discharged.

2. Carry the Intelligent Key or insert it to the key slot and turn the push-button ignition switch to ACC position. (At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.



## PRECAUTIONS

< PRECAUTION >

[POWER DISTRIBUTION SYSTEM]

5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT.

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O


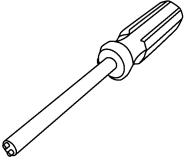
P

## PREPARATION

### PREPARATION

#### Commercial Service Tools

INFOID:000000006392871

Tool name	Description
<p>Power tools</p>  <p>PIIB1407E</p>	<p>Loosening bolts, nuts and screws</p>
<p>One-way screw removal tool</p>  <p>ALMIA0486ZZ</p>	<p>Removing one-way screws</p>

## REMOVAL AND INSTALLATION

### BCM (BODY CONTROL MODULE)

#### Removal and Installation

INFOID:0000000006392872

For removal and installation of the BCM, refer to [BCS-92, "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

## PUSH BUTTON IGNITION SWITCH

< REMOVAL AND INSTALLATION >

[POWER DISTRIBUTION SYSTEM]

---

### PUSH BUTTON IGNITION SWITCH

#### Removal and Installation

INFOID:000000006392873

For removal and installation of the push button ignition switch, refer to [SEC-221. "Removal and Installation"](#) Coupe, or [SEC-444. "Removal and Installation"](#) Sedan.