

SECTION **RAX**  
REAR AXLE

A  
B  
C

RAX

CONTENTS

E

<b>PRECAUTION</b> .....	2	<b>PREPARATION</b> .....	5	F
<b>PRECAUTIONS</b> .....	2	Commercial Service Tool .....	5	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	2	<b>PERIODIC MAINTENANCE</b> .....	6	G
Precaution Necessary for Steering Wheel Rotation After Battery Disconnect .....	2	<b>WHEEL HUB</b> .....	6	
General Precautions .....	3	On-vehicle Service .....	6	H
<b>SYMPTOM DIAGNOSIS</b> .....	4	<b>REMOVAL AND INSTALLATION</b> .....	7	
<b>NOISE, VIBRATION, AND HARSHNESS(NVH) TROUBLESHOOTING</b> .....	4	<b>WHEEL HUB</b> .....	7	I
NVH Troubleshooting Chart .....	4	Removal and Installation .....	7	
<b>PREPARATION</b> .....	5	<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	9	J
		<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	9	K
		Wheel Bearing (Rear) .....	9	

L

M

N

O

P

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006392652

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000006392653

#### **NOTE:**

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

This vehicle is equipped with a push-button ignition switch and a steering lock unit.

If the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the procedure below before starting the repair operation.

#### OPERATION PROCEDURE

1. Connect both battery cables.

#### **NOTE:**

Supply power using jumper cables if battery is discharged.

2. Carry the Intelligent Key or insert it to the key slot and turn the push-button ignition switch to ACC position. (At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.

# PRECAUTIONS

## < PRECAUTION >

5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT.

## General Precautions

INFOID:000000006392654

- **When installing each rubber part, final tightening must be carried out under unladen condition\* with tires on ground.**
- **\*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.**
- **After installing removed suspension parts, check wheel alignment.**
- **Do not jack up at the trailing arm and lateral link.**

A

B

C

RAX

E

F

G

H

I

J

K

L

M

N

O

P

# NOISE, VIBRATION, AND HARSHNESS(NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### NOISE, VIBRATION, AND HARSHNESS(NVH) TROUBLESHOOTING

#### NVH Troubleshooting Chart

INFOID:000000006392655

Use the chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

Reference page		<a href="#">RAX-7</a>	<a href="#">RAX-7</a>	<a href="#">RAX-7</a>	<a href="#">WT-59, "NVH Troubleshooting Chart"</a>	<a href="#">WT-59, "NVH Troubleshooting Chart"</a>	
Possible cause and SUSPECTED PARTS		Improper installation, looseness	Parts interference	Wheel bearing damage	TIRES	ROAD WHEEL	
Symptom	REAR AXLE	Noise	x	x		x	x
		Shake	x	x		x	x
		Vibration	x	x		x	
		Shimmy	x	x		x	x
		Shudder	x			x	x
		Poor quality ride or handling	x	x	x	x	x

x: Applicable

# PREPARATION


< PREPARATION >

## PREPARATION

### PREPARATION

#### Commercial Service Tool

INFOID:000000006392656

Tool name	Description
<p data-bbox="162 411 272 438">Power tool</p>  <p data-bbox="831 632 902 646">PIIB1407E</p>	<p data-bbox="1013 411 1349 438">Loosening nuts, screws and bolts</p>

A

B

C

RAX

E

F

G

H

I

J

K

L

M

N

O

P

# WHEEL HUB

< PERIODIC MAINTENANCE >

## PERIODIC MAINTENANCE


### WHEEL HUB

#### On-vehicle Service

INFOID:000000006392657

Check axle and suspension parts for excessive play, wear or damage.

- Shake each rear wheel to check for excessive play.

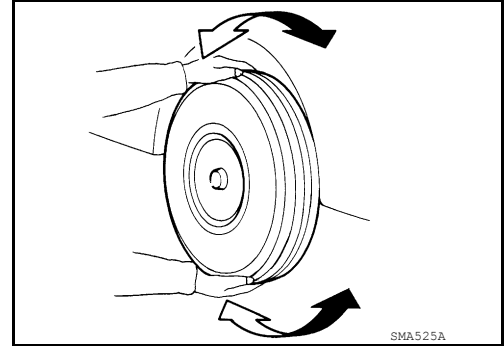


#### Rear Wheel Bearing

- Check axial end play.

**Axial end play : 0.1 mm (0.004 in) or less**

- Check that wheel hub bearings operate smoothly.
- Replace wheel bearing assembly if there is axial end play or wheel bearing does not turn smoothly. Refer to [RAX-7, "Removal and Installation"](#).

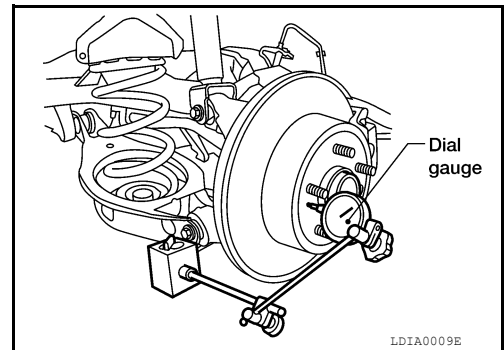

# WHEEL HUB

< REMOVAL AND INSTALLATION >


## REMOVAL AND INSTALLATION

### WHEEL HUB

#### Removal and Installation

INFOID:000000006392658

SEC. 430

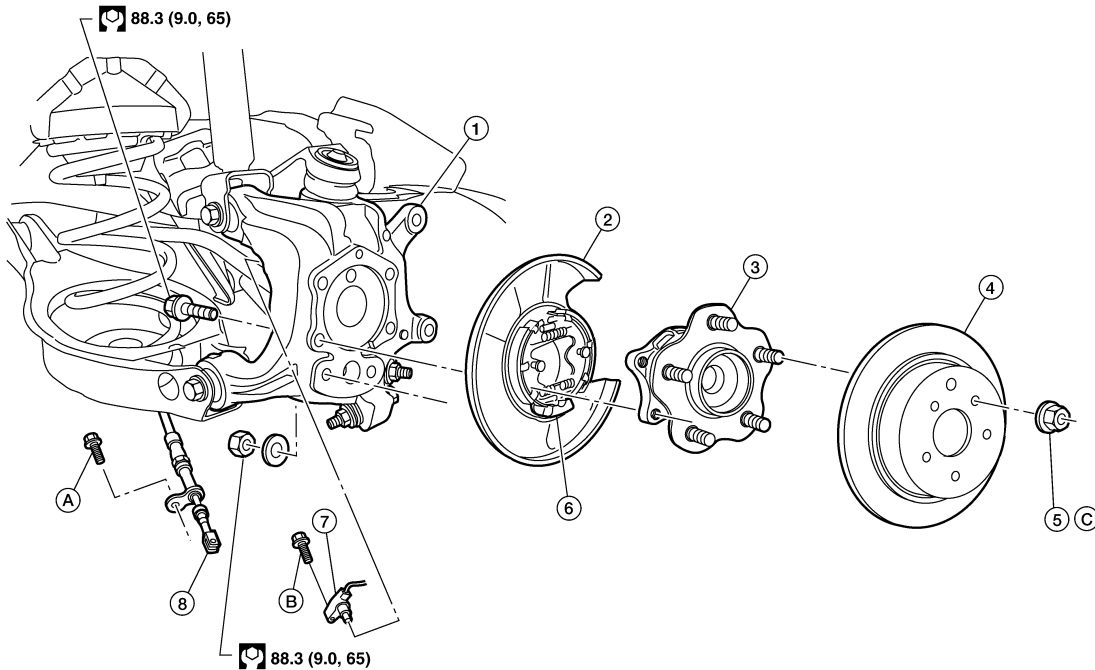

AWDIA0482GB

- |                 |                        |                       |
|-----------------|------------------------|-----------------------|
| 1. Knuckle      | 2. Baffle plate        | 3. Wheel hub assembly |
| 4. Brake rotor  | 5. Wheel nut           | 6. Anchor block       |
| 7. Wheel sensor | 8. Parking brake cable |                       |
- A. Refer to [PB-9, "PEDAL TYPE : Removal and Installation"](#) (Pedal type), [PB-11, "LEVER TYPE : Removal and Installation"](#). (Lever type)
- B. Refer to [BRC-64, "Removal and Installation"](#) (ABS), [BRC-136, "Removal and Installation"](#) (TCS/ABS), [BRC-253, "Removal and Installation"](#) (VDC/TCS/ABS)
- C. Refer to [WT-65, "Adjustment"](#)

#### REMOVAL

##### **CAUTION:**

Wheel hub assembly does not require maintenance. If any of the following symptoms are noted, replace the wheel hub assembly.

- A growling noise is emitted from the wheel hub assembly while driving.
- The wheel hub assembly drags or turns roughly.

1. Remove the rear wheel and tire using power tool. Refer to [WT-65, "Adjustment"](#).

# WHEEL HUB

## < REMOVAL AND INSTALLATION >

2. Remove the brake caliper, pads and torque member as an assembly using power tool. Refer to [BR-35. "BRAKE CALIPER ASSEMBLY : Exploded View"](#).
  - The brake hose does not need to be disconnected from the brake caliper.
  - Suspend the brake caliper assembly using wire, do not stretch the brake hose.
  - Do not depress the brake pedal, or the caliper piston will pop out.
  - Do not twist the brake hose.
3. Remove the brake rotor.
4. Remove the rear wheel sensor, then move it away from the wheel hub assembly. Refer to [BRC-64. "Removal and Installation" \(ABS\)](#), [BRC-136. "Removal and Installation" \(TCS/ABS\)](#), [BRC-253. "Removal and Installation" \(VDC/TCS/ABS\)](#).

**CAUTION:**  
**Failure to remove the wheel sensor may result in damage to the sensor wires and the sensor being inoperative.**
5. Remove the wheel hub assembly from knuckle.
6. Remove dust cap from back side of wheel hub assembly.

## INSPECTION AFTER REMOVAL


Check for any deformity, cracks, or damage on the wheel hub assembly, replace if necessary.

## INSTALLATION

Installation is in the reverse order of removal.

- Check that the wheel bearings operate smoothly.
- Check that the wheel hub bearing axial end play is within specification.

**Axial end play : 0.1 mm (0.004 in) or less**

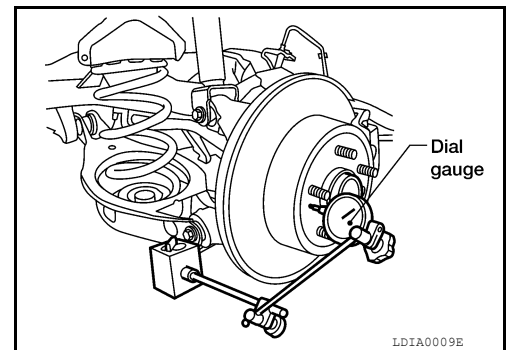



# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Wheel Bearing (Rear)

INFOID:000000006392659

Wheel bearing axial end play	0.1 mm (0.004 in) or less
------------------------------	---------------------------

A

B

C

RAX

E

F

G

H

I

J

K

L

M

N

O

P