

SECTION **BCS**

BODY CONTROL SYSTEM

A
B
C

CONTENTS

BCM		
PRECAUTION	POWER CONSUMPTION CONTROL SYSTEM	F
3	POWER CONSUMPTION CONTROL SYSTEM :	
PRECAUTIONS	System Diagram	G
3	13	
Precaution for Supplemental Restraint System	POWER CONSUMPTION CONTROL SYSTEM :	
(SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	System Description	H
3	13	
PREPARATION	SHIPPING MODE CONTROL SYSTEM	I
4	14	
PREPARATION	SHIPPING MODE CONTROL SYSTEM : System	
4	Description	J
Special Service Tool	15	
4	DIAGNOSIS SYSTEM (BCM)	K
SYSTEM DESCRIPTION	16	
5	COMMON ITEM	L
COMPONENT PARTS	16	
5	COMMON ITEM : CONSULT Function (BCM -	
BODY CONTROL SYSTEM	COMMON ITEM)	N
5	16	
BODY CONTROL SYSTEM : Component Parts	DOOR LOCK	O
Location	17	
5	DOOR LOCK : CONSULT Function (BCM -	
COMBINATION SWITCH READING SYSTEM	DOOR LOCK)	P
5	17	
COMBINATION SWITCH READING SYSTEM :	REAR DEFOGGER	
Component Parts Location	18	
6	REAR DEFOGGER : CONSULT Function (BCM -	
POWER CONSUMPTION CONTROL SYSTEM	REAR DEFOGGER)	
6	18	
POWER CONSUMPTION CONTROL SYSTEM :	BUZZER	
Component Parts Location	18	
7	BUZZER : CONSULT Function (BCM - BUZZER)...	BCS
SYSTEM	18	
8	INT LAMP	N
BODY CONTROL SYSTEM	19	
8	INT LAMP : CONSULT Function (BCM - INT	
BODY CONTROL SYSTEM : System Description.....	LAMP)	O
8	19	
COMBINATION SWITCH READING SYSTEM	HEADLAMP	
9	20	
COMBINATION SWITCH READING SYSTEM :	HEADLAMP : CONSULT Function (BCM - HEAD-	
System Diagram	LAMP)	
9	20	
COMBINATION SWITCH READING SYSTEM :	WIPER	
System Description	21	
9	WIPER : CONSULT Function (BCM - WIPER)	P
SIGNAL BUFFER SYSTEM	21	
12	FLASHER	
SIGNAL BUFFER SYSTEM : System Diagram	22	
12	FLASHER : CONSULT Function (BCM - FLASH-	
SIGNAL BUFFER SYSTEM : System Description... 13	ER)	
	22	
	AIR CONDITIONER	
	22	

AIR CONDITIONER : CONSULT Function (BCM - AIR CONDITIONER)	22	ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description	64
INTELLIGENT KEY	23	ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Work Procedure	64
INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)	23	CONFIGURATION (BCM)	64
COMB SW	26	CONFIGURATION (BCM) : Description	65
COMB SW : CONSULT Function (BCM - COMB SW)	26	CONFIGURATION (BCM) : Work Procedure	65
BCM	26	CONFIGURATION (BCM) : Configuration list	66
BCM : CONSULT Function (BCM - BCM)	26	SHIPPING MODE CANCEL OPERATION	67
IMMU	26	Work Procedure	67
IMMU : CONSULT Function (BCM - IMMU)	27	DTC/CIRCUIT DIAGNOSIS	68
BATTERY SAVER	27	U1000 CAN COMM CIRCUIT	68
BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER)	27	Description	68
TRUNK	28	DTC Logic	68
TRUNK : CONSULT Function (BCM - TRUNK)	28	Diagnosis Procedure	68
THEFT ALM	28	U1010 CONTROL UNIT (CAN)	69
THEFT ALM : CONSULT Function (BCM - THEFT ALM)	28	DTC Logic	69
RETAINED PWR	29	Diagnosis Procedure	69
RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)	29	U0415 VEHICLE SPEED SIG	70
SIGNAL BUFFER	29	Description	70
SIGNAL BUFFER : CONSULT Function (BCM - SIGNAL BUFFER)	29	DTC Logic	70
AIR PRESSURE MONITOR	30	Diagnosis Procedure	70
AIR PRESSURE MONITOR : CONSULT Function (BCM-AIR PRESSURE MONITOR)	30	B2562 LOW VOLTAGE	71
ECU DIAGNOSIS INFORMATION	31	DTC Logic	71
BCM (BODY CONTROL MODULE)	31	Diagnosis Procedure	71
Reference Value	31	B259A ROOM LAMP FUSE	72
Fail Safe	50	DTC Logic	72
DTC Inspection Priority Chart	51	Diagnosis Procedure	72
DTC Index	52	POWER SUPPLY AND GROUND CIRCUIT	74
WIRING DIAGRAM	55	Diagnosis Procedure	74
BCM	55	COMBINATION SWITCH INPUT CIRCUIT	75
Wiring Diagram	55	Diagnosis Procedure	75
BASIC INSPECTION	64	COMBINATION SWITCH OUTPUT CIRCUIT...	77
INSPECTION AND ADJUSTMENT	64	Diagnosis Procedure	77
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT	64	SYMPTOM DIAGNOSIS	79
		COMBINATION SWITCH SYSTEM SYMPTOMS	79
		Symptom Table	79
		NORMAL OPERATING CONDITION	80
		Description	80
		REMOVAL AND INSTALLATION	81
		BCM (BODY CONTROL MODULE)	81
		Removal and Installation	81

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000012591342

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery or batteries, and wait at least three minutes before performing any service.

A
B
C
D
E
F
G
H
I
J
K
L

BCS

N
O
P

< PREPARATION >


PREPARATION

PREPARATION

Special Service Tool

INFOID:0000000012591343

The actual shape of the tools may differ from those illustrated here.

Tool number (TechMate No.) Tool name	Description
<p>— (J-50190) Signal Tech II</p> 	<ul style="list-style-type: none"> • Activate and display TPMS transmitter IDs • Display tire pressure reported by the TPMS transmitter • Read TPMS DTCs • Register TPMS transmitter IDs • Test remote keyless entry keyfob relative to signal strength • Check Intelligent Key relative signal strength • Confirm vehicle Intelligent Key antenna signal strength • Compatible with future sensors • Equipped with a display

< SYSTEM DESCRIPTION >

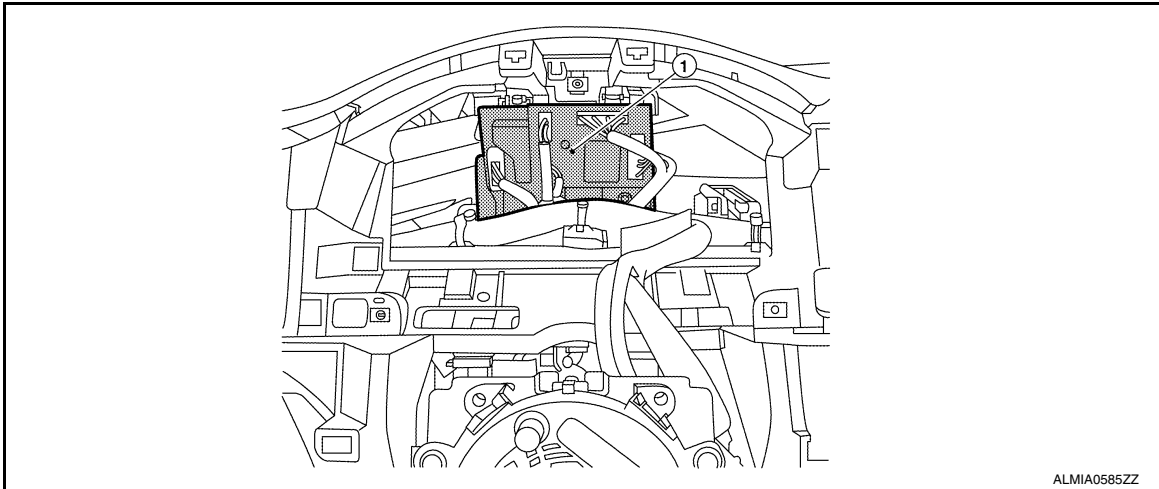
SYSTEM DESCRIPTION

COMPONENT PARTS

BODY CONTROL SYSTEM

BODY CONTROL SYSTEM : Component Parts Location

INFOID:000000012591344



1. BCM (view with combination meter removed)

COMBINATION SWITCH READING SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L

BCS

N
O
P

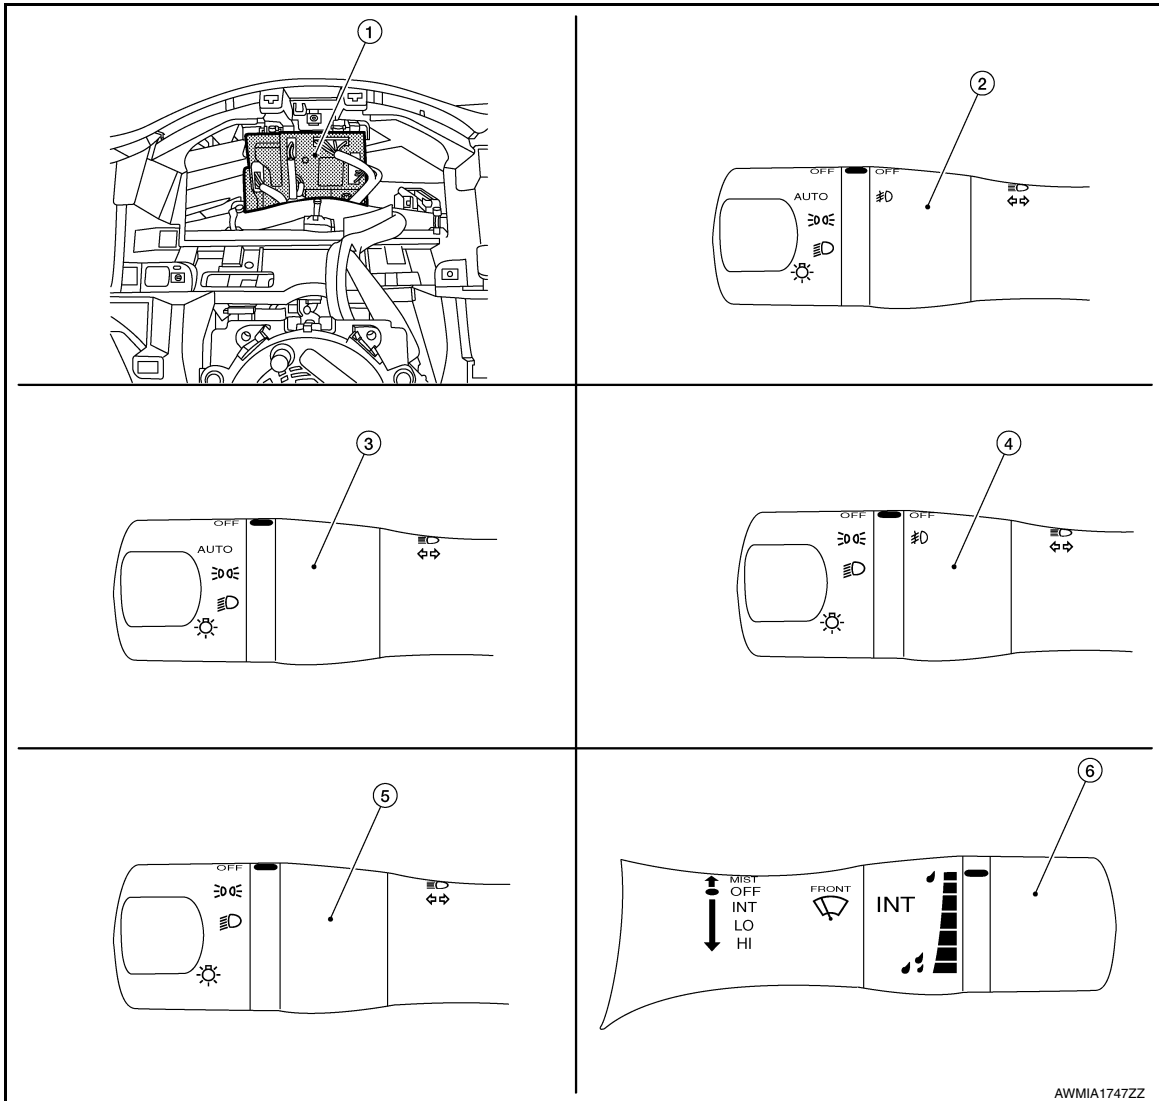
COMPONENT PARTS

< SYSTEM DESCRIPTION >

[BCM]

COMBINATION SWITCH READING SYSTEM : Component Parts Location

INFOID:000000012591345



AWMIA1747ZZ

- | | | |
|---|--|---|
| <p>1. BCM (view with combination meter removed)</p> <p>4. Combination switch (lighting and turn signal) (without auto light system, with front fog lamps)</p> | <p>2. Combination switch (lighting and turn signal) (with auto light system and front fog lamps)</p> <p>5. Combination switch (lighting and turn signal) (without auto light system and front fog lamps)</p> | <p>3. Combination switch (lighting and turn signal) (with auto light system, without front fog lamps)</p> <p>6. Combination switch (wiper and washer)</p> |
|---|--|---|

POWER CONSUMPTION CONTROL SYSTEM

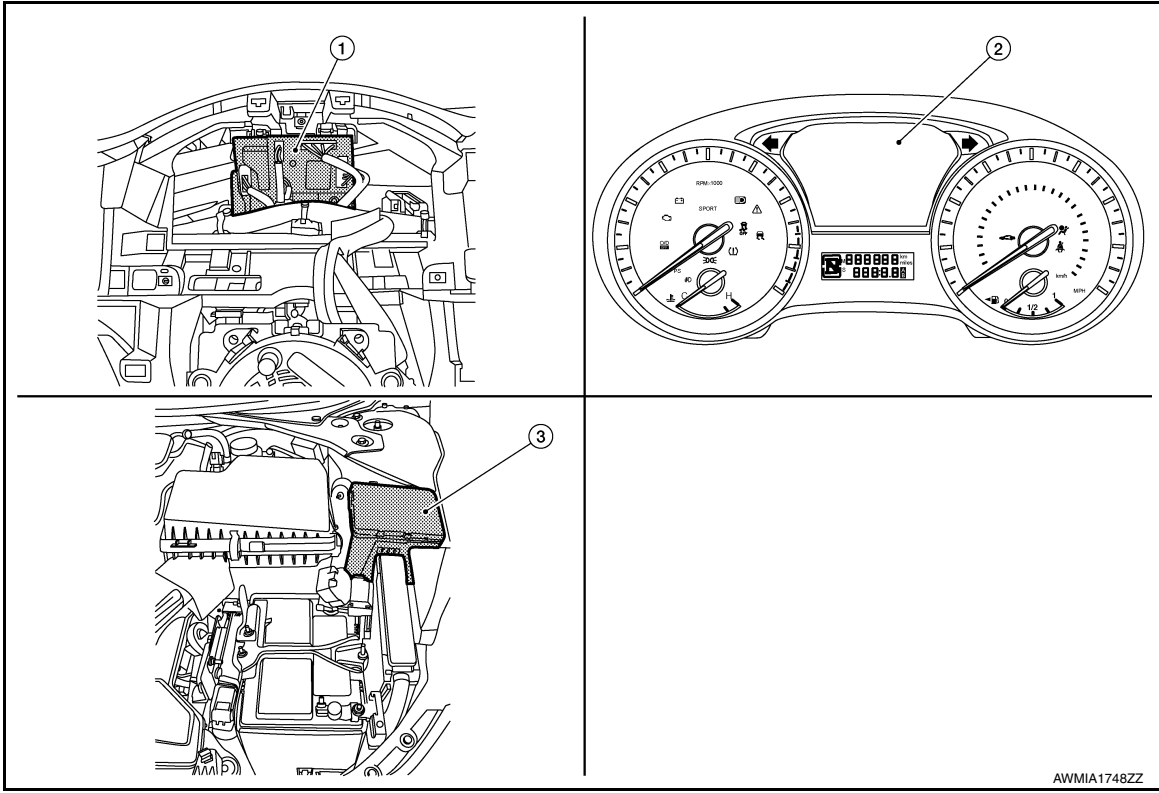
COMPONENT PARTS

< SYSTEM DESCRIPTION >

[BCM]

POWER CONSUMPTION CONTROL SYSTEM : Component Parts Location

INFOID:000000012591346



- 1. BCM (view with combination meter removed)
- 2. Combination meter removed
- 3. IPDM E/R

BCS

SYSTEM

BODY CONTROL SYSTEM

BODY CONTROL SYSTEM : System Description

INFOID:000000012591347

OUTLINE

- BCM (body control module) controls various electrical components. It receives the information required from CAN communication and the signals received from each switch and sensor.
- BCM has a combination switch reading function for reading the status of combination switches (light, turn signal, wiper and washer) in addition to functions for controlling the operation of various electrical components. It also has a signal transmission function for other systems, and a power consumption control function that reduces the power consumption with the ignition switch OFF.
- BCM is equipped with a diagnosis function that operates with CONSULT and allows for various settings to be changed.

BCM FUNCTION LIST

System	Refer to
Combination switch reading system	BCS-9. "COMBINATION SWITCH READING SYSTEM : System Description"
Signal buffer system	BCS-13. "SIGNAL BUFFER SYSTEM : System Description"
Power consumption control system	BCS-13. "POWER CONSUMPTION CONTROL SYSTEM : System Description"
Shipping mode control system	BCS-15. "SHIPPING MODE CONTROL SYSTEM : System Description"
Auto light system (if equipped)	EXL-12. "AUTO LIGHT SYSTEM : System Description" (Halogen type headlamp) EXL-143. "AUTO LIGHT SYSTEM : System Description" (LED type headlamp)
Headlamp system	EXL-11. "HEADLAMP SYSTEM : System Description" (Halogen type headlamp) EXL-142. "HEADLAMP SYSTEM : System Description" (LED type headlamp)
Daytime running light system (if equipped)	EXL-12. "DAYTIME RUNNING LIGHT SYSTEM : System Description" (Halogen type headlamp) EXL-144. "DAYTIME RUNNING LIGHT SYSTEM : System Description" (LED type headlamp)
Front fog lamp system (if equipped)	EXL-13. "FRONT FOG LAMP SYSTEM : System Description" (Halogen type headlamp) EXL-147. "FRONT FOG LAMP SYSTEM : System Description" (LED type headlamp)
Turn signal and hazard warning lamps system	EXL-13. "TURN SIGNAL AND HAZARD WARNING LAMPS : System Description" (Halogen type headlamp) EXL-145. "TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM : System Description" (LED type headlamp)
Parking, license plate and tail lamps system	EXL-14. "PARKING, LICENSE PLATE AND TAIL LAMPS : System Description" (Halogen type headlamp) EXL-146. "PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMP SYSTEM : System Description" (LED type headlamp)
Exterior lamp battery saver system	EXL-11. "HEADLAMP SYSTEM : System Description" (Halogen type headlamp) EXL-148. "EXTERIOR LAMP BATTERY SAVER SYSTEM : System Description" (LED type headlamp)
Interior room lamp battery saver system	INL-7. "System Description"
Interior room lamp control system	INL-7. "System Description"
Front wiper and washer system	WW-8. "System Description"
Warning chime system	WCS-6. "WARNING CHIME SYSTEM : System Description"

SYSTEM

[BCM]


< SYSTEM DESCRIPTION >

System	Refer to	
Door lock system	DLK-21. "System Description"	
Trunk open system	DLK-41. "System Description"	
Nissan vehicle immobilizer system (NVIS)	SEC-14. "NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS : System Description"	
Vehicle security system	SEC-16. "VEHICLE SECURITY SYSTEM : System Description"	
Panic alarm		
Rear window defogger system	DEF-7. "System Description"	
Intelligent Key system/engine start system	Door lock function	<ul style="list-style-type: none"> DLK-25. "DOOR LOCK FUNCTION : System Description" (door request switch) (if equipped) DLK-25. "DOOR LOCK FUNCTION : System Description" (Intelligent Key)
	Trunk open function	DLK-37. "TRUNK LID OPENER SYSTEM : System Description" (Intelligent Key)
	Warning function	DLK-34. "WARNING FUNCTION : System Description"
	Key reminder function	DLK-29. "KEY REMINDER FUNCTION : System Description"
	Engine start function	SEC-11. "INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Description"
Power window system	<ul style="list-style-type: none"> PWC-10. "System Description" (LH front only anti-pinch) PWC-70. "System Description" (LH & RH front anti-pinch) 	
RAP (retained accessory power) system	BCS-29. "RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)"	
TPMS (tire pressure monitoring system)	WT-9. "System Description"	

COMBINATION SWITCH READING SYSTEM

COMBINATION SWITCH READING SYSTEM : System Diagram

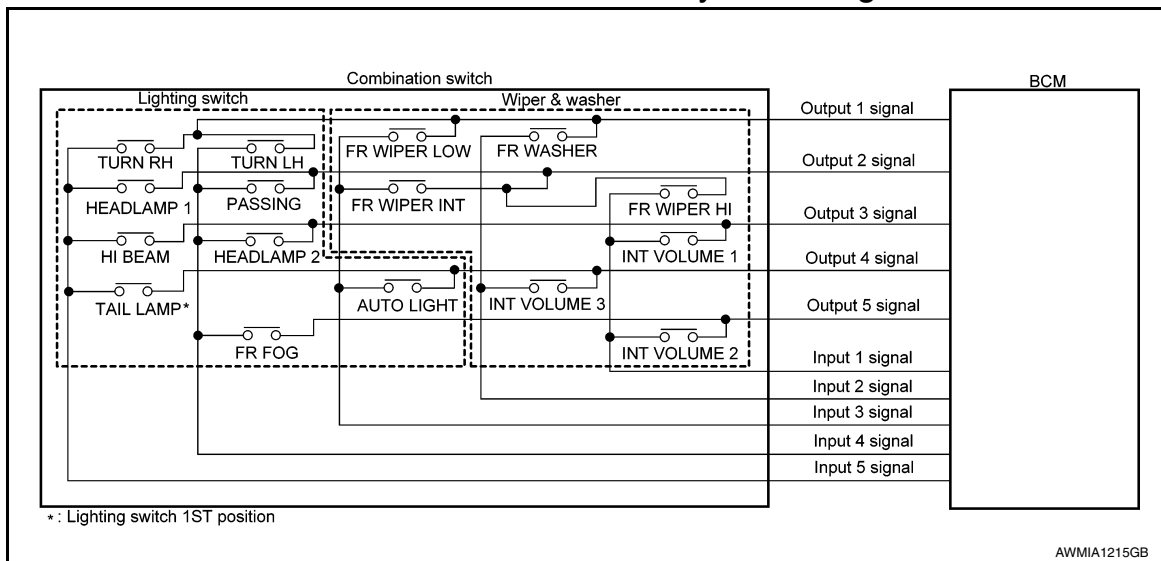INFOID:000000012591348



COMBINATION SWITCH READING SYSTEM : System Description

INFOID:000000012591349

OUTLINE

- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.
- BCM has a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5) and reads a maximum of 20 switch states.

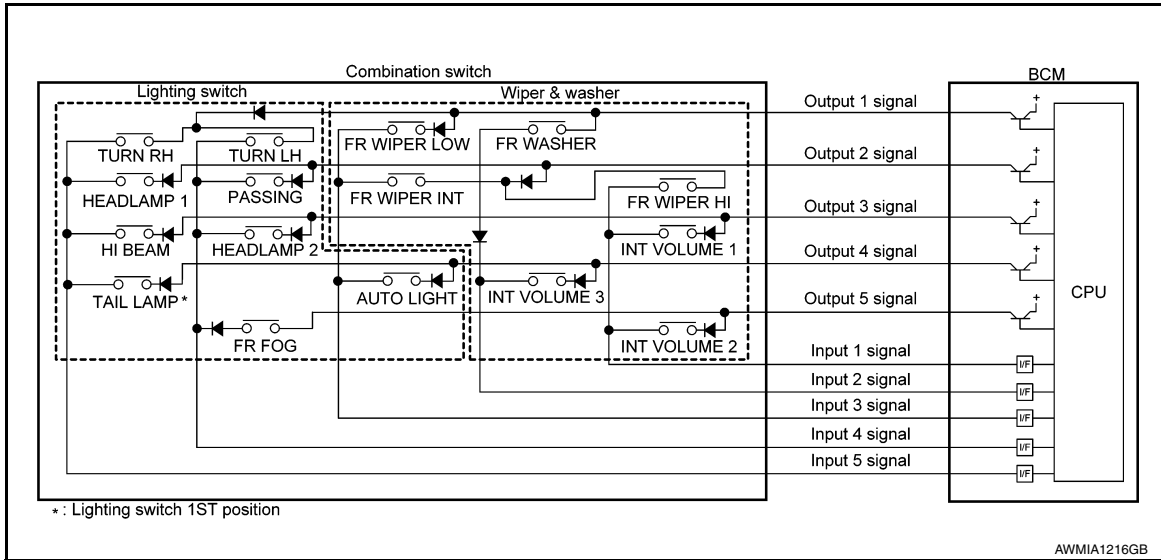
COMBINATION SWITCH MATRIX

SYSTEM

< SYSTEM DESCRIPTION >

[BCM]

Combination switch circuit




Combination switch INPUT-OUTPUT system list

System	INPUT 1	INPUT 2	INPUT 3	INPUT 4	INPUT 5
OUTPUT 1	—	FR WASHER	FR WIPER LOW	TURN LH	TURN RH
OUTPUT 2	FR WIPER HI	—	FR WIPER INT	PASSING	HEADLAMP 1
OUTPUT 3	INT VOLUME 1	—	—	HEADLAMP 2	HI BEAM
OUTPUT 4	—	INT VOLUME 3	AUTO LIGHT	—	TAIL LAMP
OUTPUT 5	INT VOLUME 2	—	—	FR FOG	—

COMBINATION SWITCH READING FUNCTION

Description

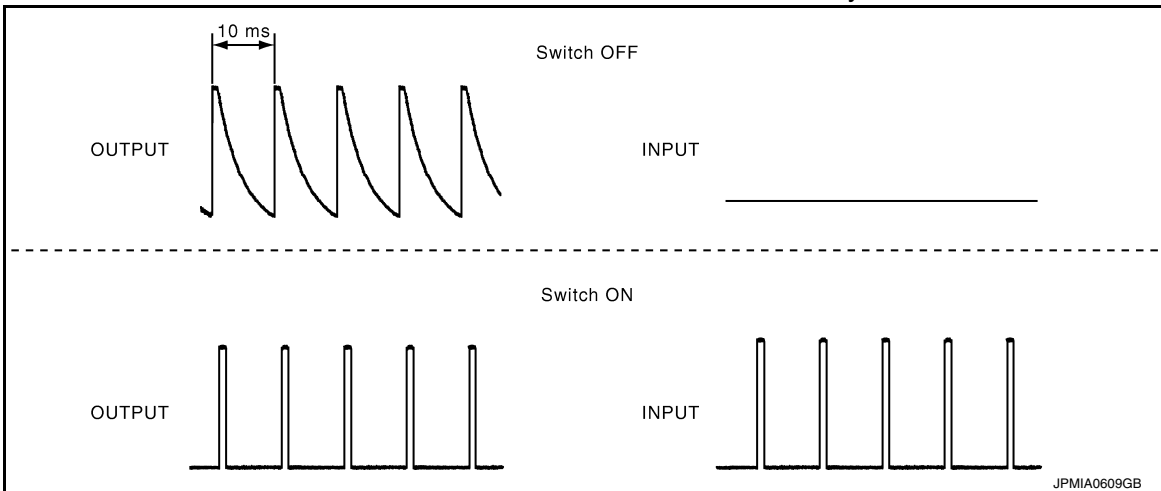- BCM reads the status of the combination switch at 10 ms intervals normally.



NOTE:

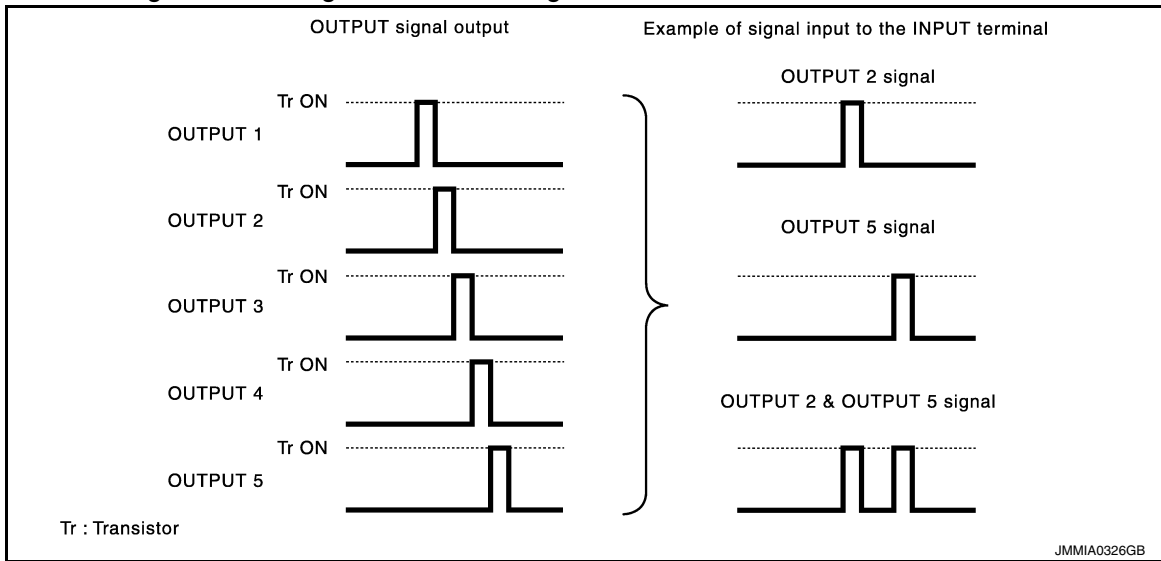
- BCM reads the status of the combination switch at 60 ms intervals when BCM is controlled at low power consumption control mode.
- BCM operates as follows and judges the status of the combination switch.
 - It operates the transistor on OUTPUT side in the following order: OUTPUT 1 → 2 → 3 → 4 → 5, and outputs voltage waveform.
 - The voltage waveform of OUTPUT corresponding to the formed circuit is input into the interface on INPUT side if any (1 or more) switches are ON.

SYSTEM

[BCM]

< SYSTEM DESCRIPTION >

- It reads this change of the voltage as the status signal of the combination switch.




Operation Example

In the following operation example, the combination of the status signals of the combination switch is replaced as follows: INPUT 1 - 5 to "1 - 5" and OUTPUT 1 - 5 to "A - E".

Example 1: When a switch (TAIL LAMP) is turned ON

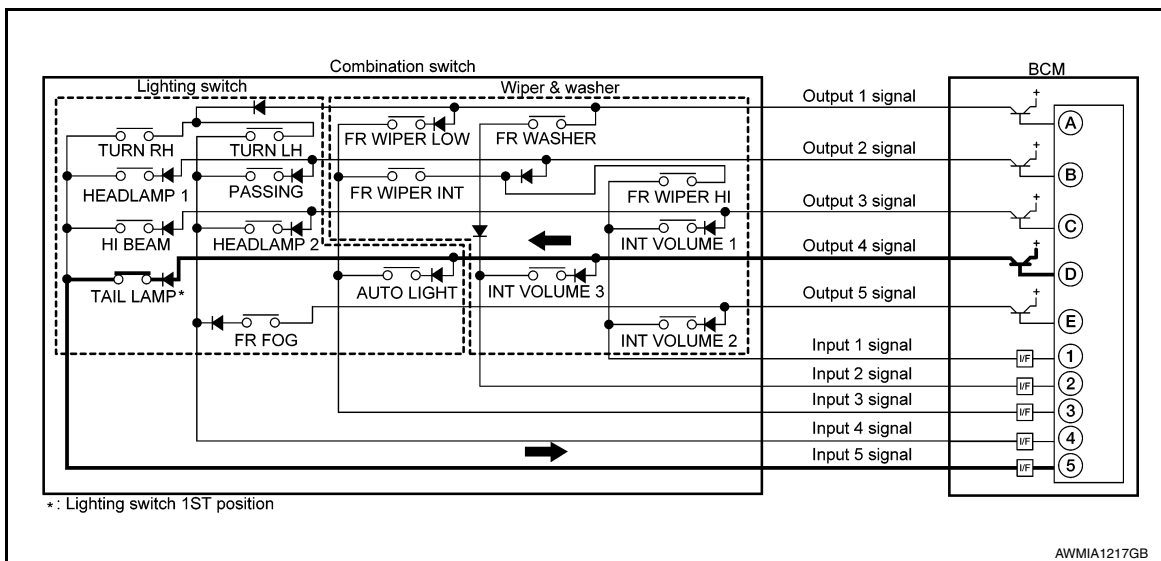- The circuit between OUTPUT 4 and INPUT 5 is formed when the TAIL LAMP switch is turned ON.



- BCM detects the combination switch status signal "5D" when the signal of OUTPUT 4 is input to INPUT 5.
- BCM judges that the TAIL LAMP switch is ON when the signal "5D" is detected.


Example 2: When some switches (TURN RH, TAIL LAMP) are turned ON

SYSTEM

[BCM]

< SYSTEM DESCRIPTION >

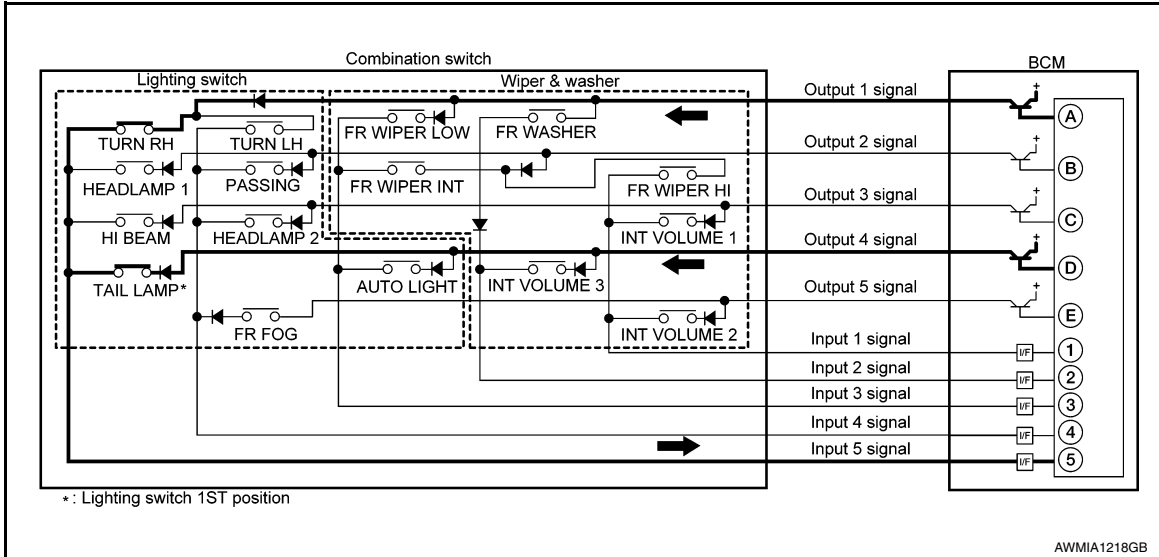- The circuits between OUTPUT 1 and INPUT 5 and between OUTPUT 4 and INPUT 5 are formed when the TURN RH switch and TAIL LAMP switch are turned ON.



- BCM detects the combination switch status signal "5AD" when the signals of OUTPUT 1 and OUTPUT 4 are input to INPUT 5.
- BCM judges that the TURN RH switch and TAIL LAMP switch are ON when the signal "5AD" is detected.

WIPER INTERMITTENT DIAL POSITION SETTING


BCM judges the wiper intermittent dial 1 - 7 by the status of INT VOLUME 1, 2, and 3 switches.

Wiper intermittent dial position	Switch status		
	INT VOLUME 1	INT VOLUME 2	INT VOLUME 3
1	ON	ON	ON
2	ON	ON	OFF
3	ON	OFF	OFF
4	OFF	OFF	OFF
5	OFF	OFF	ON
6	OFF	ON	ON
7	OFF	ON	OFF

SIGNAL BUFFER SYSTEM

SIGNAL BUFFER SYSTEM : System Diagram

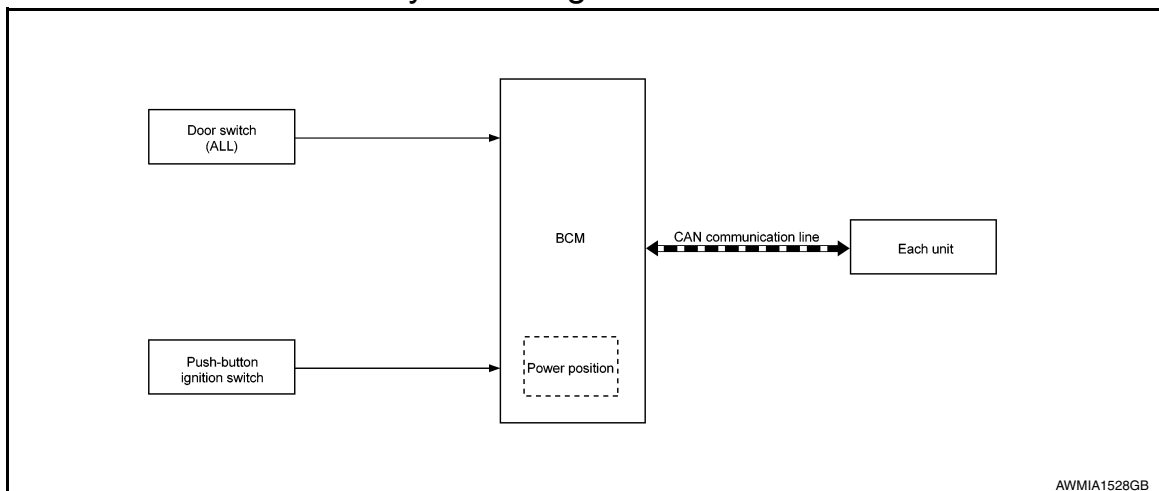INFOID:000000012591350



SYSTEM

< SYSTEM DESCRIPTION >

[BCM]

SIGNAL BUFFER SYSTEM : System Description

INFOID:000000012591351

OUTLINE

BCM has the signal transmission function that outputs/transmits each input/received signal to each unit.


Signal transmission function list

Signal name	Input	Output	Description
<ul style="list-style-type: none"> Ignition switch ON signal Ignition switch signal 	Engine switch (push switch)	IPDM E/R (CAN)	Inputs the push-button ignition switch (push switch) signal and transmits the ignition switch status judged with BCM via CAN communication.
Door switch signal	Any door switch	<ul style="list-style-type: none"> Combination meter (CAN) IPDM E/R (CAN) 	Inputs the door switch signal and transmits it via CAN communication.

POWER CONSUMPTION CONTROL SYSTEM

POWER CONSUMPTION CONTROL SYSTEM : System Diagram

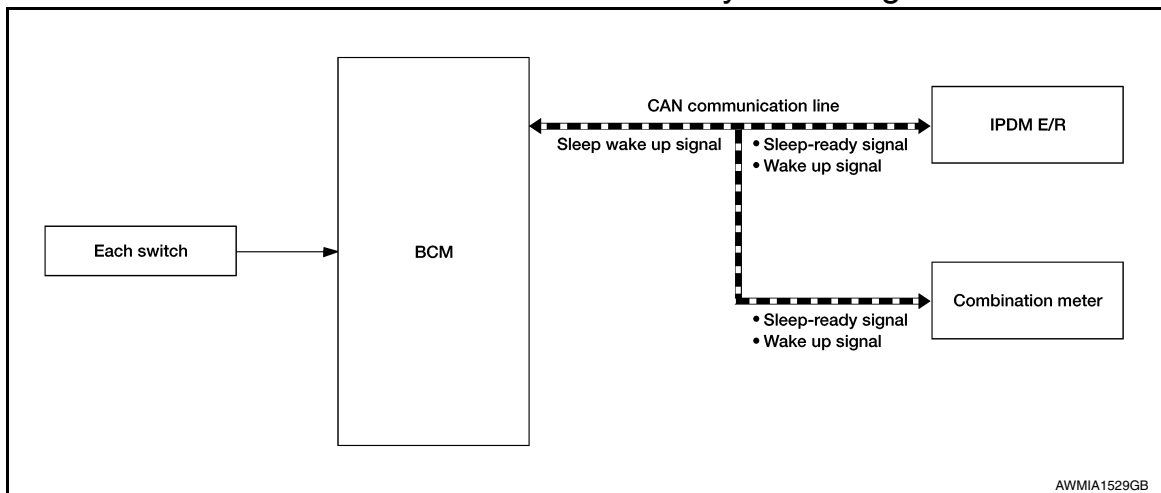INFOID:000000012591352



POWER CONSUMPTION CONTROL SYSTEM : System Description

INFOID:000000012591353

OUTLINE

- BCM incorporates a power saving control function that reduces the power consumption according to the vehicle status.
- BCM switches the status (control mode) by itself with the power saving control function. It performs the sleep request to each unit (IPDM E/R and combination meter) that operates with the ignition switch OFF.

Normal mode (wake-up)

- CAN communication is normally performed with other units
- Each control with BCM is operating properly

CAN communication sleep mode (CAN sleep)

- CAN transmission is stopped
- Control with BCM only is operating

Low power consumption mode (BCM sleep)

- Low power consumption control is active
- CAN transmission is stopped

LOW POWER CONSUMPTION CONTROL WITH BCM

BCM reduces the power consumption with the following operation in the low power consumption mode:

- The reading interval of each switch changes from 10 ms interval to 60 ms interval.

Sleep mode activation

A

B

C

D

E

F

G

H

I

J

K

L

BCS

N

O

P

SYSTEM

[BCM]

< SYSTEM DESCRIPTION >

- BCM receives the sleep-ready signal (ready) from IPDM E/R and combination meter via CAN communication.
- BCM transmits the sleep wake up signal (sleep) to each unit when all of the CAN sleep conditions are fulfilled.
- Each unit stops the transmission of CAN communication with the sleep wakeup signal. BCM is in CAN communication sleep mode.
- BCM is in the low power consumption mode and performs the low power consumption control when all of the BCM sleep conditions are fulfilled with CAN sleep condition.

Sleep condition

CAN sleep condition	BCM sleep condition
<ul style="list-style-type: none"> • Receiving the sleep-ready signal (ready) from all units • Ignition switch: OFF • Vehicle security system alarm and panic alarm: No operation • Warning lamp: No operation • Intelligent Key system buzzer: No operation • Brake switch: OFF • Turn signal indicator lamp: No operation • Exterior lamp: OFF • Door lock status: No change • CONSULT communication status: No communication • Meter display signal: Non-transmission • Door switch status: No change • Rear window defogger: OFF 	<ul style="list-style-type: none"> • Interior room lamp battery saver: Time out • RAP system: OFF • Power window switch communication: No transmission • Push-button ignition switch (push switch) illumination: OFF • NATS: No operation • Remote keyless entry receiver communication status: No communication • Tire pressure monitoring system: Stop


Wake-up operation

- BCM transmits the sleep wake up signal (wake up) to each unit when any of the CAN wake-up conditions are fulfilled. It changes from the low power consumption mode or the CAN communication sleep mode to the normal mode.
- Each unit starts the transmission of CAN communication with the sleep wake up signal. In addition, the combination meter transmits the wake up signal to BCM via CAN communication to report the CAN communication start.

BCM wake-up condition	CAN wake-up condition
<ul style="list-style-type: none"> • Door unlock sensor: OFF→ON, ON→OFF • Door lock assembly LH (key cylinder switch): Lock or unlock • Door lock switch: OFF→ON • Door unlock switch: OFF→ON • Trunk lid opener switch: OFF→ON • Power window serial link communication: Receiving • Remote keyless entry receiver: Receiving valid keyfob 	<ul style="list-style-type: none"> • Receiving the sleep-ready signal (Not-ready) from any units • Push-button ignition switch (push switch): OFF→ON • Hazard switch: OFF→ON • PASSING switch: OFF→ON, ON→OFF • TAIL LAMP switch: OFF→ON • Front door switch LH: OFF→ON, ON→OFF • Front door switch RH: OFF → ON, ON → OFF • Trunk lamp switch: OFF→ON, ON→OFF • Driver door request switch (if equipped): OFF→ON • Passenger door request switch (if equipped): OFF→ON • Stop lamp switch 2 signal: ON • Remote keyless entry receiver: Receiving valid keyfob

SHIPPING MODE CONTROL SYSTEM

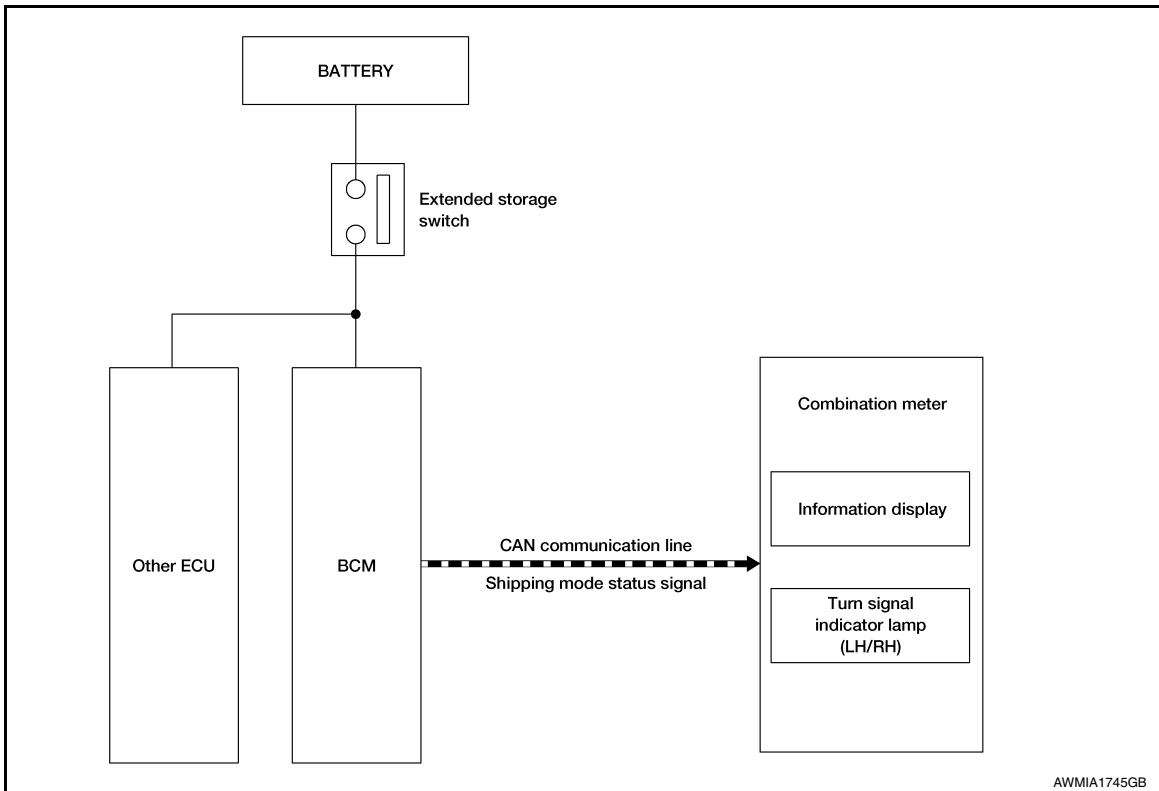SYSTEM DIAGRAM



DESCRIPTION

- The BCM switches the status (shipping mode or normal mode) by itself according to the extended storage switch condition, and transmits the shipping mode status signal to the combination meter and each unit via CAN communication.
- When the shipping mode function is activated, the control units will not detect DTCs.
- BCM control functions are limited in shipping mode. Refer to [BCS-15, "SHIPPING MODE CONTROL SYSTEM : System Description"](#).
- When the BCM is in shipping mode, a message may be shown in the combination meter or display.
- For shipping mode cancel operation refer to [BCS-67, "Work Procedure"](#).

A
B
C
D
E
F
G
H
I
J
K
L

BCS

N
O
P

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000012591356

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
ECU Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> The vehicle specification can be read and saved. The vehicle specification can be written when replacing BCM.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		ECU Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×	×		
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Exterior lamp	HEADLAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×	×		
Air conditioner	AIR CONDITIONER			×				
Intelligent Key system	INTELLIGENT KEY		×	×	×	×		
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×	×	×			
Interior room lamp battery saver	BATTERY SAVER			×	×			
Trunk open	TRUNK			×				
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×				

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[BCM]

System	Sub System	Direct Diagnostic Mode						
		ECU Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Signal buffer system	SIGNAL BUFFER			×	×			
TPMS	AIR PRESSURE MONITOR		×	×	×			

DOOR LOCK

DOOR LOCK : CONSULT Function (BCM - DOOR LOCK)

INFOID:000000012591357

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

SELF DIAGNOSTIC RESULT

Refer to [BCS-52, "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Description
REQ SW-DR [On/Off]	Indicates condition of door request switch LH.
REQ SW-AS [On/Off]	Indicates condition of door request switch RH.
REQ SW-BD/TR [On/Off]	Indicates condition of trunk opener request switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of trunk switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.

ACTIVE TEST

Test Item	Description
DOOR LOCK	This test is able to check door lock operation [ALL LOCK/ALL UNLK].

WORK SUPPORT

Support Item	Setting	Description
DOOR LOCK-UNLOCK SET	On*	Automatic door locks function ON.
	Off	Automatic door locks function OFF.
AUTO UNLOCK TYPE	MODE2	Driver door only unlocks automatically.
	MODE1*	All doors unlock automatically.

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

Support Item	Setting	Description
AUTO LOCK FUNCTION	MODE3	This mode is not used.
	MODE2	Doors lock automatically when shifted out of P (park).
	MODE1*	Doors lock automatically when vehicle speed reaches 24 km/h (15 mph).
	Off	—
AUTO UNLOCK FUNCTION	MODE3	This mode is not used.
	MODE2	Doors unlock automatically when shifted into P (park).
	MODE1*	Doors unlock automatically when ignition is switched from ON to OFF.
	Off	—

* : Initial setting

REAR DEFOGGER

REAR DEFOGGER : CONSULT Function (BCM - REAR DEFOGGER)

INFOID:0000000012591358

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
REAR DEF SW [On/Off]	Indicates condition of rear window defogger switch.

ACTIVE TEST

Test Item	Description
REAR DEFOGGER	This test is able to check rear window defogger operation [Off/On].

WORK SUPPORT

Support Item	Setting	Description
SET R-DEF TIMER	MODE3	Rear defogger turns OFF after 1 minute.
	MODE2	Rear defogger remains ON until turned OFF.
	MODE1*	Rear defogger turns OFF after 15 minutes.

* : Initial setting

BUZZER

BUZZER : CONSULT Function (BCM - BUZZER)

INFOID:0000000012591359

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line.

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
TAIL LAMP SW [On/Off]	Indicates condition of combination switch.
FR FOG SW [On/Off]	Indicates condition of front fog lamp switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.

ACTIVE TEST

Test Item	Description
SEAT BELT WARN TEST	This test is able to check seat belt warning chime operation [On/Off].
LIGHT WARN ALM	This test is able to check light warning chime operation [On/Off].
REVERSE WARNING	This test is able to check reverse warning chime operation [On/Off].

INT LAMP

INT LAMP : CONSULT Function (BCM - INT LAMP)

INFOID:000000012591360

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
PUSH -SW [On/Off]	Indicates condition of push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of trunk switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
TRNK/HAT MNTR [On/Off]	Indicates condition of trunk room lamp switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.

ACTIVE TEST

Test Item	Description
INT LAMP	This test is able to check interior room lamp operation [On/Off].
STEP LAMP TEST	This test is able to check step lamp operation [On/Off].

WORK SUPPORT

NOTE:

The items listed below are the only applicable Work Support items for this vehicle. If other items are displayed on CONSULT, do not use or change the setting for these other items.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[BCM]

Support Item	Setting	Description
SCENARIO LIGHTING SETTING	On	NOTE: Do not use this function since interior room lamp control is changed.
	Off*	
SET I/L D-UNLCK INTCON	On	Interior room lamp timer function ON.
	Off*	Interior room lamp timer function OFF.
FOG LAMP OVERRIDE	On*	Fog lamp override function ON.
	Off	Fog lamp override function OFF.

* : Initial setting

HEADLAMP

HEADLAMP : CONSULT Function (BCM - HEADLAMP)

INFOID:0000000012591362

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
ENGINE STATE [STOP/STALL/CRANK/RUN]	Indicates engine status received from ECM on CAN communication line.
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line.
TURN SIGNAL R [On/Off]	Indicates condition of combination switch.
TURN SIGNAL L [On/Off]	
TAIL LAMP SW [On/Off]	
HI BEAM SW [On/Off]	
HEAD LAMP SW 1 [On/Off]	
HEAD LAMP SW 2 [On/Off]	
PASSING SW [On/Off]	
AUTO LIGHT SW [On/Off]	
FR FOG SW [On/Off]	
DOOR SW-DR [On/Off]	
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of trunk switch.
OPTI SEN (DTCT) [V]	Indicates outside brightness voltage signal from optical sensor.
OPTI SEN (FILT) [V]	Indicates outside brightness voltage signal from optical sensor filtered by BCM.
OPTICAL SENSOR [On/Off]	Indicates condition of optical sensor.

ACTIVE TEST

Test Item	Description
FR FOG LAMP	This test is able to check front fog lamp operation [On/Off].
DAYTIME RUNNING LIGHT	This test is able to check daytime running lamp operation [On/Off].
ILL DIM SIGNAL	This test is able to check head lamp illumination dimming operation [On/Off].

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[BCM]

Support Item	Setting	Description
TWILIGHT On	MODE2*	Autolamp function ON.
	MODE1	Autolamp function OFF.
WIPER LINK	MODE4	This mode is not used.
	MODE3*	Wiper link function operates in INT, LOW and HI.
	MODE2	Wiper link function operates in LOW and HI.
	MODE1	Wiper link function OFF.
CUSTOM A/LIGHT SETTING	MODE4	Less sensitive than normal setting (turns ON later).
	MODE3	More sensitive than MODE2.
	MODE2	More sensitive than normal setting (turns ON earlier).
	MODE1*	Normal setting.
ILL DELAY SET	MODE 8	Autolamp delay timer.
	MODE 7	
	MODE 6	
	MODE 4	
	MODE 5	
	MODE 3	
	MODE 2	
	MODE 1*	

* : Initial setting

WIPER

WIPER : CONSULT Function (BCM - WIPER)

INFOID:0000000012591363

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line.
FR WIPER HI [On/Off]	Indicates condition of wiper operation of combination switch.
FR WIPER LOW [On/Off]	
FR WASHER SW [On/Off]	
FR WIPER INT [On/Off]	
FR WIPER STOP [On/Off]	Indicates front wiper auto stop signal received from IPDM E/R on CAN communication line.
INT VOLUME [1 - 7]	Indicates condition of intermittent wiper operation of combination switch.

ACTIVE TEST

Test Item	Description
FR WIPER	This test is able to check front wiper operation [Hi/Lo/INT/Off].

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[BCM]

Support Item	Setting	Description
WIPER SPEED SETTING	On	Front wiper intermittent time linked with vehicle speed and wiper dial position.
	Off*	Front wiper intermittent time linked with wiper dial position.

* : Initial setting

FLASHER

FLASHER : CONSULT Function (BCM - FLASHER)

INFOID:0000000012591364

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
TURN SIGNAL R [On/Off]	Indicates condition of turn signal function of combination switch.
TURN SIGNAL L [On/Off]	
HAZARD SW [On/Off]	Indicates condition of hazard switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.
RKE-PANIC [On/Off]	Indicates condition of panic alarm signal from Intelligent Key.

ACTIVE TEST

Test Item	Description
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].

WORK SUPPORT

Support Item	Setting	Description
3-TIME FLASHER SETTING	On	3-Time flasher setting ON.
	Off*	3-Time flasher setting OFF.

* : Initial setting

AIR CONDITIONER

AIR CONDITIONER : CONSULT Function (BCM - AIR CONDITIONER)

INFOID:0000000012591365

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
FAN ON SIG [On/Off]	Indicates condition of fan switch.
AIR COND SW [On/Off]	Indicates condition of A/C switch.

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

INTELLIGENT KEY

INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)

INFOID:000000012591366

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

SELF DIAGNOSTIC RESULT

Refer to [BCS-52, "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Main	Description
REQ SW -DR [On/Off]	×	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	×	Indicates condition of door request switch RH.
REQ SW -BD/TR [On/Off]	×	Indicates condition of trunk opener request switch.
PUSH SW [On/Off]		Indicates condition of push-button ignition switch.
SHFTLCK SLNID PER SPLY [On/Off]	×	Indicates condition of power supply to shift lock solenoid.
BRAKE SW 1 [On/Off]	×	Indicates condition of brake switch.
BRAKE SW 2 [On/Off]		Indicates condition of brake switch.
DETE/CANCL SW [On/Off]	×	Indicates condition of P (park) position.
SFT PN/N SW [On/Off]	×	Indicates condition of P (park) or N (neutral) position.
UNLK SEN -DR [On/Off]	×	Indicates condition of door unlock sensor.
PUSH SW -IPDM [On/Off]		Indicates condition of push-button ignition switch received from IPDM E/R on CAN communication line.
IGN RLY1 -F/B [On/Off]		Indicates condition of ignition relay 1 received from IPDM E/R on CAN communication line.
DETE SW -IPDM [On/Off]		Indicates condition of detent switch received from TCM on CAN communication line.
SFT PN -IPDM [On/Off]		Indicates condition of P (park) or N (neutral) position from TCM on CAN communication line.
SFT P -MET [On/Off]		Indicates condition of P (park) position from TCM on CAN communication line.
SFT N -MET [On/Off]		Indicates condition of N (neutral) position from IPDM E/R on CAN communication line.
ENGINE STATE [STOP/START/CRANK/RUN]	×	Indicates condition of engine state from ECM on CAN communication line.
VEH SPEED 1 [mph/km/h]	×	Indicates condition of vehicle speed signal received from ABS on CAN communication line.
VEH SPEED 2 [mph/km/h]	×	Indicates condition of vehicle speed signal received from combination meter on CAN communication line.
DOOR STAT -DR [LOCK/READY/UNLK]	×	Indicates condition of driver side door status.
DOOR STAT -AS [LOCK/READY/UNLK]	×	Indicates condition of passenger side door status.
DOOR STAT -RR [LOCK/READY/UNLK]	×	Indicates condition of rear right side door status.
DOOR STAT -RL [LOCK/READY/UNLK]	×	Indicates condition of rear left side door status.
ID OK FLAG [Set/Reset]		Indicates condition of Intelligent Key ID.
PRMT ENG STRT [Set/Reset]		Indicates condition of engine start possibility.
PRMT RKE STRT [Set/Reset]		Indicates condition of engine start possibility from Intelligent Key.
I-KEY OK FLAG [Key ON/Key OFF]	×	Indicates condition of Intelligent Key OK flag.
PRBT ENG STRT [Set/Reset]		Indicates condition of engine start prohibit.

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Main	Description
ID AUTHENT CANCEL TIMER [STOP]		Indicates condition of Intelligent Key ID authentication.
ACC BATTERY SAVER [STOP]		Indicates condition of battery saver.
CRNK PRBT TMR [On/Off]		Indicates condition of crank prohibit timer.
AUT CRNK TMR [On/Off]		Indicates condition of automatic engine crank timer from Intelligent Key.
CRNK PRBT TME [sec]		Indicates condition of engine crank prohibit time.
AUT CRNK TME [sec]		Indicates condition of automatic engine crank time from Intelligent Key.
CRANKING TME [sec]		Indicates condition of engine cranking time from Intelligent Key.
ST RLY -REQ [On/Off]		Indicates condition of starter relay.
IGN RLY 1 -REQ [On/Off]		Indicates condition of ignition 1 relay.
IGN RLY 2 -REQ [On/Off]		Indicates condition of ignition 2 relay.
DETE SW PWR [On/Off]		Indicates condition of detent switch voltage.
ACC RLY -REQ [On/Off]		Indicates condition of accessory relay control request.
RKE OPE COUN1 [0-19]	×	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
RKE OPE COUN2 [0-19]	×	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
TRNK/HAT MNTR [On/Off]		Indicates condition of trunk room lamp switch.
RKE-LOCK [On/Off]		Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]		Indicates condition of unlock signal from Intelligent Key.
RKE-TR/BD [On/Off]		Indicates condition of trunk open signal from Intelligent Key.
RKE-PANIC [On/Off]		Indicates condition of panic signal from Intelligent Key.
RKE-MODE CHG [On/Off]		Indicates condition of mode change signal from Intelligent Key.

ACTIVE TEST

Test Item	Description
INTELLIGENT KEY LINK (CAN)	This test is able to check Intelligent Key identification number [Off/ID No1/ID N02/ID No3/ID No4/ID No5].
INT LAMP	This test is able to check interior room lamp operation [On/Off].
FLASHER	This test is able to check hazard lamp operation [LH/RH/Off].
HORN	This test is able to check horn operation [On].
BATTERY SAVER	This test is able to check battery saver operation [On/Off].
TRUNK/BACK DOOR	This test is able to check trunk actuator operation [Open].
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation [On/Off].
INSIDE BUZZER	This test is able to check combination meter warning chime operation [Take Out/Knob/Key/Off].
INDICATOR	This test is able to check combination meter warning lamp operation [KEY ON/KEY IND/Off].
IGN CONT2	This test is able to check ignition relay-2 control operation [On/Off].
ENGINE SW ILLUMI	This test is able to check push-button ignition switch START indicator operation [On/Off].
PUSH SWITCH INDICATOR	This test is able to check push-button ignition switch indicator operation [On/Off].
ACC CONT	This test is able to check accessory relay control operation [On/Off].
IGN CONT1	This test is able to check ignition relay-1 control operation [On/Off].
ST CONT LOW	This test is able to check starter control relay operation [On/Off].
IGNITION RELAY	This test is able to ignition relay operation [On/Off].
REVERSE LAMP TEST	This test is able to check reverse lamp illumination operation [On/Off].
DR SEAT LAMP TEST	This test is able to check driver seat lamp illumination operation [On/Off].
AS SEAT LAMP TEST	This test is able to check passenger seat lamp illumination operation [On/Off].

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

Test Item	Description
SHIFT SPOT LAMP TEST	This test is able to check shift spot lamp illumination operation [On/Off].
TRUNK/LUGGAGE LAMP TEST	This test is able to check cargo lamp illumination operation [On/Off].
KEYFOB PW TEST	This test is able to check power window operation using the Intelligent Key [Off/DOWN/UP].
SHIFTLOCK SOLENOID TEST	This test is able to check shift lock solenoid operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
IGN/ACC BATTERY SAVER	On*	Battery saver function ON.
	Off	Battery saver function OFF.
REMOTE ENGINE STARTER	On*	Remote engine start function ON.
	Off	Remote engine start function OFF.
ANSWER BACK I-KEY LOCK UNLOCK	BUZZER	Buzzer reminder function by door lock/unlock request switch ON.
	HORN	Horn chirp reminder function by door lock request switch ON.
	Off*	No reminder function by door lock/unlock request switch.
	INVALID	This mode is not used.
ANSWERBACK KEYLESS LOCK UNLOCK	On	Buzzer or horn chirp reminder when doors are locked/unlocked with Intelligent Key.
	Off*	No buzzer or horn chirp reminder when doors are locked/unlocked with Intelligent Key.
ANSWER BACK	On*	Horn chirp reminder when doors are locked with Intelligent Key.
	Off	No horn chirp reminder when doors are locked with Intelligent Key.
RETRACTABLE MIRROR SET	On	Retractable mirror set ON.
	Off*	Retractable mirror set OFF.
CONFIRM KEY FOB ID	—	Intelligent Key ID code can check.
LOCK/UNLOCK BY I-KEY	On*	Door lock/unlock function from Intelligent Key ON.
	Off	Door lock/unlock function from Intelligent Key OFF.
ENGINE START BY I-KEY	On*	Engine start function from Intelligent Key ON.
	Off	Engine start function from Intelligent Key OFF.
TRUNK/GLASS HATCH OPEN	On*	Buzzer reminder function by trunk opener request switch ON.
	Off	Buzzer reminder function by trunk opener request switch OFF.
INTELLIGENT KEY LINK SET	On	Intelligent Key link set ON.
	Off*	Intelligent Key link set OFF.
SHORT CRANKING OUTPUT	Start	70 msec
		100 msec
		200 msec
	End	—
INSIDE ANT DIAGNOSIS	—	This function allows inside key antenna self-diagnosis.
AUTO LOCK SET	MODE7	5 min
	MODE6	4 min
	MODE5	3 min
	MODE4	2 min
	MODE3*	1 min
	MODE2	30 sec
	MODE1	Off

*: Initial Setting

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[BCM]

COMB SW

COMB SW : CONSULT Function (BCM - COMB SW)

INFOID:0000000012591367

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
FR WIPER HI [On/Off]	Indicates condition of wiper operation of combination switch.
FR WIPER LOW [On/Off]	
FR WASHER SW [On/Off]	
FR WIPER INT [On/Off]	
INT VOLUME [1 - 7]	Indicates condition of intermittent wiper operation of combination switch.
TURN SIGNAL R [On/Off]	Indicates condition of right turn signal operation of combination switch.
TURN SIGNAL L [On/Off]	Indicates condition of left turn signal operation of combination switch.
TAIL LAMP SW [On/Off]	Indicates condition of tail lamp switch operation of combination switch.
HI BEAM SW [On/Off]	Indicates condition of Hi beam switch operation of combination switch.
HEAD LAMP SW 1 [On/Off]	Indicates condition of head lamp switch 1 operation of combination switch.
HEAD LAMP SW 2 [On/Off]	Indicates condition of head lamp switch 2 operation of combination switch.
PASSING SW [On/Off]	Indicates condition of passing switch operation of combination switch.
AUTO LIGHT SW [On/Off]	Indicates condition of auto light switch operation of combination switch.
FR FOG SW [On/Off]	Indicates condition of front fog lamp switch operation of combination switch.

BCM

BCM : CONSULT Function (BCM - BCM)

INFOID:0000000012591368

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

ECU IDENTIFICATION

The BCM part number is displayed.

SELF DIAGNOSTIC RESULT

Refer to [BCS-52, "DTC Index"](#).

WORK SUPPORT

Support Item	Setting	Description
RESET SETTING VALUE	Reset	Returns BCM to initial value in factory shipment.
	Cancel	Cancels the reset function.

CONFIGURATION

Refer to [BCS-65, "CONFIGURATION \(BCM\) : Description"](#).

CAN DIAG SUPPORT MNTR

Refer to [LAN-16, "CAN Diagnostic Support Monitor"](#).

IMMU

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

IMMU : CONSULT Function (BCM - IMMU)

INFOID:000000012591369

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

SELF DIAGNOSTIC RESULT

Refer to [BCS-52, "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Description
CONFIRM ID ALL [Yet/DONE]	Switches to DONE when an Intelligent Key is registered.
CONFIRM ID4 [Yet/DONE]	
CONFIRM ID3 [Yet/DONE]	
CONFIRM ID2 [Yet/DONE]	
CONFIRM ID1 [Yet/DONE]	
NOT REGISTERED	Indicates [ID OK] when key ID that is registered is received or is not yet received. Indicates {ID-NG} when key ID that is not registered is received.
TP 4 [Yet/DONE]	DONE indicates the number of Intelligent Key ID which has been registered.
TP 3 [Yet/DONE]	
TP 2 [Yet/DONE]	
TP 1 [Yet/DONE]	
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
TCU ID [Yet/DONE]	Indicates condition of telematics control unit.

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator operation [On/Off].

BATTERY SAVER

BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER)

INFOID:0000000012591370

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
PUSH SW [On/Off]	Indicates condition push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of trunk switch.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
TRNK/HAT MNTR [On/Off]	Indicates condition of trunk room lamp switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.

ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check battery saver operation [On/Off].

TRUNK

TRUNK : CONSULT Function (BCM - TRUNK)

INFOID:000000012591371

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
VEH SPEED 1 [km/h]	Indicates vehicle speed signal received from ABS on CAN communication line.
TR/BD OPEN SW [On/Off]	Indicates condition of trunk opener switch.
TRNK/HAT MNTR [On/Off]	Indicates condition of trunk room lamp switch.
RKE-TR/BD [On/Off]	Indicates condition of trunk open signal from Intelligent Key.

THEFT ALM

THEFT ALM : CONSULT Function (BCM - THEFT ALM)

INFOID:000000012591372

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DATA MONITOR

Monitored Item	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
REQ SW -BD/TR [ON/OFF]	Indicates condition of trunk opener request switch.
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
UNLK SEN -DR [On/Off]	Indicates condition of door unlock sensor.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

Monitored Item	Description
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of trunk switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
TR/BD OPEN SW [On/Off]	Indicates condition of trunk opener switch.
TRNK/HAT MNTR [On/Off]	Indicates condition of trunk room lamp switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.
RKE-TR/BD [On/Off]	Indicates condition of trunk open signal from Intelligent Key.

ACTIVE TEST

Test Item	Description
FLASHER	This test is able to check turn signal lamp operation [LH/RH/Off].
THEFT IND	This test is able to check security indicator lamp operation [On/Off].
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation [On].
HEAD LAMP(HI)	This test is able to check vehicle security lamp operation [On].

WORK SUPPORT

Support Item	Setting	Description
SECURITY ALARM SET	On	Security alarm ON.
	Off	Security alarm OFF.

RETAINED PWR

RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)

INFOID:0000000012591373

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DATA MONITOR

Monitor Item [Unit]	Description
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.

SIGNAL BUFFER

SIGNAL BUFFER : CONSULT Function (BCM - SIGNAL BUFFER)

INFOID:0000000012591374

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

DATA MONITOR

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

DIAGNOSIS SYSTEM (BCM)

[BCM]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of the push-button ignition switch.

ACTIVE TEST

Test Item	Description
OIL PRESSURE SW	This test is able to check the oil pressure warning lamp operation [On/Off].
BRAKE SWITCH	This test is able to check the brake switch operation [On/Off].

AIR PRESSURE MONITOR

AIR PRESSURE MONITOR : CONSULT Function (BCM-AIR PRESSURE MONITOR)

INFOID:000000012591375

CAUTION:

After disconnecting the CONSULT vehicle interface (VI) from the data link connector, the ignition must be cycled OFF → ON (for at least 5 seconds) → OFF. If this step is not performed, the BCM may not go to "sleep mode", potentially causing a discharged battery and a no-start condition.

NOTE:

The Signal Tech II Tool [– (J-50190)] can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs

SELF DIAGNOSTIC RESULT

NOTE:

Before performing Self Diagnostic Result, be sure to register the transmitter ID or the actual malfunction may be different from that displayed on CONSULT.

Refer to [BCS-52, "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Description
AIR PRESS FL [kPa, kg/cm ² or Psi]	Indicates air pressure of front LH tire.
AIR PRESS FR [kPa, kg/cm ² or Psi]	Indicates air pressure of front RH tire.
AIR PRESS RR [kPa, kg/cm ² or Psi]	Indicates air pressure of rear RH tire.
AIR PRESS RL [kPa, kg/cm ² or Psi]	Indicates air pressure of rear LH tire.
ID REGST FL1 [Done/Yet]	Indicates ID registration status of front LH transmitter.
ID REGST FR1 [Done/Yet]	Indicates ID registration status of front RH transmitter.
ID REGST RR1 [Done/Yet]	Indicates ID registration status of rear RH transmitter.
ID REGST RL1 [Done/Yet]	Indicates ID registration status of rear LH transmitter.
WARNING LAMP [Off/On]	Indicates condition of low tire pressure warning lamp in combination meter.
BUZZER [Off/On]	Indicates condition of buzzer in combination meter.

ACTIVE TEST

Test Item	Description
FLASHER	This test is able to check turn signal lamp operation [Off/LH/RH].
HORN	This test is able to check horn operation [On].

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:0000000012591376

NOTE:

The Signal Tech II Tool [– (J-50190)] can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information:

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs
- Check Intelligent Key relative signal strength
- Confirm vehicle Intelligent Key antenna signal strength

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
ACC BATTERY SAVER	When battery saver is OFF.	STOP
ACC RLY -REQ	When BCM is not requesting accessory relay activation.	Off
	When BCM is requesting accessory relay activation.	On
AIR COND SW	A/C switch OFF	Off
	A/C switch ON	On
AIR PRESS FL	Front left tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS FR	Front right tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS RL	Rear left tire air pressure value	kPa, kg/cm ² , psi
AIR PRESS RR	Rear right tire air pressure value	kPa, kg/cm ² , psi
AUT CRNK TME	Remote engine start timer duration.	sec
AUT CRNK TMR	When the remote engine start timer is OFF.	Off
	When the remote engine start timer is ON.	On
AUTO LIGHT SW	Lighting switch OFF	Off
	Lighting switch AUTO	On
BRAKE SW 1	When the brake pedal is released	On
	When the brake pedal is depressed	Off
BRAKE SW 2	Brake pedal released	Off
	Brake pedal depressed	On
BUZZER	Buzzer in combination meter OFF	Off
	Buzzer in combination meter ON	On
CDL LOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the LOCK side	On
CDL UNLOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the UNLOCK side	On
CONFIRM ID ALL	The key ID does not match any key ID registered to BCM.	Yet
	The key ID matches any key ID registered to BCM.	DONE
CONFIRM ID4	The key ID does not match the fourth key ID registered to BCM.	Yet
	The key ID matches the fourth key ID registered to BCM.	DONE
CONFIRM ID3	The key ID does not match the third key ID registered to BCM.	Yet
	The key ID matches the third key ID registered to BCM.	DONE

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Monitor Item	Condition	Value/Status
CONFIRM ID2	The key ID does not match the second key ID registered to BCM.	Yet
	The key ID matches the second key ID registered to BCM.	DONE
CONFIRM ID1	The key ID does not match the first key ID registered to BCM.	Yet
	The key ID matches the first key ID registered to BCM.	DONE
CRANKING TME	Engine start timer duration.	sec
CRNK PRBT TME	Engine start prohibit timer duration.	sec
CRNK PRBT TMR	When the engine start prohibit timer is OFF.	Off
	When the engine start prohibit timer is ON.	On
DETE SW -IPDM	When selector lever is in P position	Off
	When selector lever is in any position other than P	On
DETE SW PWR	When BCM is not supplying power to detent switch.	Off
	When BCM is supplying power to detent switch.	On
DETE/CANCL SW	When selector lever is in P position	Off
	When selector lever is in any position other than P	On
DOOR STAT-AS	Passenger door LOCK status	LOCK
	Passenger door UNLOCK status	UNLK
	Wait with selective UNLOCK operation (5 seconds)	READY
DOOR STAT-DR	Driver door LOCK status	LOCK
	Driver door UNLOCK status	UNLK
	Wait with selective UNLOCK operation (5 seconds)	READY
DOOR STAT-RL	Rear left door LOCK status	LOCK
	Rear left door UNLOCK status	UNLK
	Wait with selective UNLOCK operation (5 seconds)	READY
DOOR STAT-RR	Rear right door LOCK status	LOCK
	Rear right door UNLOCK status	UNLK
	Wait with selective UNLOCK operation (5 seconds)	READY
DOOR SW-AS	Front door RH closed	Off
	Front door RH opened	On
DOOR SW-BK	Trunk closed	Off
	Trunk opened	On
DOOR SW-DR	Front door LH closed	Off
	Front door LH opened	On
DOOR SW-RL	Rear door LH closed	Off
	Rear door LH opened	On
DOOR SW-RR	Rear door RH closed	Off
	Rear door RH opened	On
ENGINE STATE	Engine stopped	STOP
	While the engine stalls	STALL
	At engine cranking	CRANK
	Engine running	RUN
FAN ON SIG	Blower motor fan switch OFF	Off
	Blower motor fan switch ON	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Monitor Item	Condition	Value/Status	
FR WASHER SW	Front washer switch OFF	Off	A
	Front washer switch ON	On	
FR WIPER LOW	Front wiper switch OFF	Off	B
	Front wiper switch LO	On	
FR WIPER HI	Front wiper switch OFF	Off	C
	Front wiper switch HI	On	
FR WIPER INT	Front wiper switch OFF	Off	D
	Front wiper switch INT	On	
FR WIPER STOP	Any position other than front wiper stop position	Off	E
	Front wiper stop position	On	
HAZARD SW	When hazard switch is not pressed	Off	F
	When hazard switch is pressed	On	
HEAD LAMP SW 1	Headlamp switch OFF	Off	G
	Headlamp switch 1st	On	
HEAD LAMP SW 2	Headlamp switch OFF	Off	H
	Headlamp switch 1st	On	
HI BEAM SW	High beam switch OFF	Off	I
	High beam switch HI	On	
ID AUTHENT CANCEL TIMER	When I-Key authentication is OFF.	STOP	J
ID OK FLAG	Ignition switch ACC or ON	Reset	K
	Ignition switch OFF	Set	
ID REGST FL1	ID registration of front left tire incomplete	YET	L
	ID registration of front left tire complete	DONE	
ID REGST FR1	ID registration of front right tire incomplete	YET	M
	ID registration of front right tire complete	DONE	
ID REGST RL1	ID registration of rear left tire incomplete	YET	N
	ID registration of rear left tire complete	DONE	
ID REGST RR1	ID registration of rear right tire incomplete	YET	O
	ID registration of rear right tire complete	DONE	
IGN RLY1 F/B	Ignition switch OFF or ACC	Off	P
	Ignition switch ON	On	
IGN RLY 1 -REQ	Ignition switch OFF or ACC	Off	Q
	Ignition switch ON	On	
IGN RLY 2 -REQ	Ignition switch OFF or ACC	Off	R
	Ignition switch ON	On	
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7	S
I-KEY OK FLAG	I-Key OFF	Key OFF	T
	I-Key ON	Key ON	
KEY CYL LK-SW	Door key cylinder LOCK position	Off	U
	Door key cylinder other than LOCK position	On	
KEY CYL UN-SW	Door key cylinder UNLOCK position	Off	V
	Door key cylinder other than UNLOCK position	On	
NOT REGISTERED	BCM detects registered Intelligent Key ID, or BCM does not detect Intelligent Key ID	ID OK	W
	BCM detects non-registration Intelligent Key ID	ID NG	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Monitor Item	Condition	Value/Status
OPTI SEN (DTCT)	Bright outside of the vehicle	Close to 5V
	Dark outside of the vehicle	Close to 0V
OPTI SEN (FILT)	Bright outside of the vehicle	Close to 5V
	Dark outside of the vehicle	Close to 0V
OPTICAL SENSOR	Optical sensor ON	ON
	Optical sensor OFF	OFF
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
PRBT ENG STRT	When the engine start is prohibited	Reset
	When the engine start is permitted	Set
PRMT ENG STRT	When the engine start is prohibited	Reset
	When the engine start is permitted	Set
PRMT RKE STRT	When the engine start is prohibited	Reset
	When the engine start is permitted	Set
PUSH SW	Return ignition switch to LOCK position	Off
	Press ignition switch	On
PUSH SW-IPDM	When engine switch (push switch) is not pressed	Off
	When engine switch (push switch) is pressed	On
REAR DEF SW	Rear window defogger switch OFF	Off
	Rear window defogger switch ON	On
REQ SW-AS	When passenger door request switch is not pressed	Off
	When passenger door request switch is pressed	On
REQ SW-DR	When driver door request switch is not pressed	Off
	When driver door request switch is pressed	On
REQ SW-BD/TR	When trunk opener request switch is not pressed	Off
	When trunk opener request switch is pressed	On
RKE-LOCK	When LOCK button of Intelligent Key is not pressed	Off
	When LOCK button of Intelligent Key is pressed	On
RKE-MODE CHG	When LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously	Off
	When LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously	On
RKE OPE COUN1	Operation frequency of Intelligent Key	0-19
RKE OPE COUN2	Operation frequency of Intelligent Key	0-19
RKE-PANIC	When PANIC button of Intelligent Key is not pressed	Off
	When PANIC button of Intelligent Key is pressed	On
RKE-TR/BD	When TRUNK OPEN button of Intelligent Key is not pressed	Off
	When TRUNK OPEN button of Intelligent Key is pressed	On
RKE-UNLOCK	When UNLOCK button of Intelligent Key is not pressed	Off
	When UNLOCK button of Intelligent Key is pressed	On
SFT N-MET	When selector lever is in any position other than N	Off
	When selector lever is in N position	On
SFT P-MET	When selector lever is in any position other than P	Off
	When selector lever is in P position	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]


Monitor Item	Condition	Value/Status	
SFT PN -IPDM	When selector lever is in any position other than P or N	Off	A
	When selector lever is in P or N position	On	
SFT PN/N SW	When selector lever is in any position other than P or N	Off	B
	When selector lever is in P or N position	On	
SHFTLCK SLNID PER SPLY	When BCM is not supplying power to shiftlock.	Off	C
	When BCM is supplying power to shiftlock.	On	
ST RLY -REQ	Ignition switch OFF or ACC	Off	D
	Ignition switch ON	On	
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off	E
	Lighting switch 1ST or 2ND	On	
TCU ID	The ID of the TCU is not registered to BCM	Yet	F
	The ID of the TCU is registered to BCM	DONE	
TP 4	The ID of fourth key is not registered to BCM	Yet	G
	The ID of fourth key is registered to BCM	DONE	
TP 3	The ID of third key is not registered to BCM	Yet	H
	The ID of third key is registered to BCM	DONE	
TP 2	The ID of second key is not registered to BCM	Yet	I
	The ID of second key is registered to BCM	DONE	
TP 1	The ID of first key is not registered to BCM	Yet	J
	The ID of first key is registered to BCM	DONE	
TR/BD OPEN SW	Trunk opener switch OFF	Off	K
	While the trunk opener switch is turned ON	On	
TRNK/HAT MNTR	Trunk lid closed	Off	L
	Trunk lid opened	On	
TURN SIGNAL L	Turn signal switch OFF	Off	M
	Turn signal switch LH	On	
TURN SIGNAL R	Turn signal switch OFF	Off	N
	Turn signal switch RH	On	
UNLK SEN-DR	Driver door UNLOCK status	Off	O
	Driver door LOCK status	On	
VEH SPEED 1	While driving, equivalent to speedometer reading	mph, km/h	P
VEH SPEED 2	While driving, equivalent to speedometer reading	mph, km/h	
WARNING LAMP	Low tire pressure warning lamp in combination meter OFF	Off	Q
	Low tire pressure warning lamp in combination meter ON	On	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

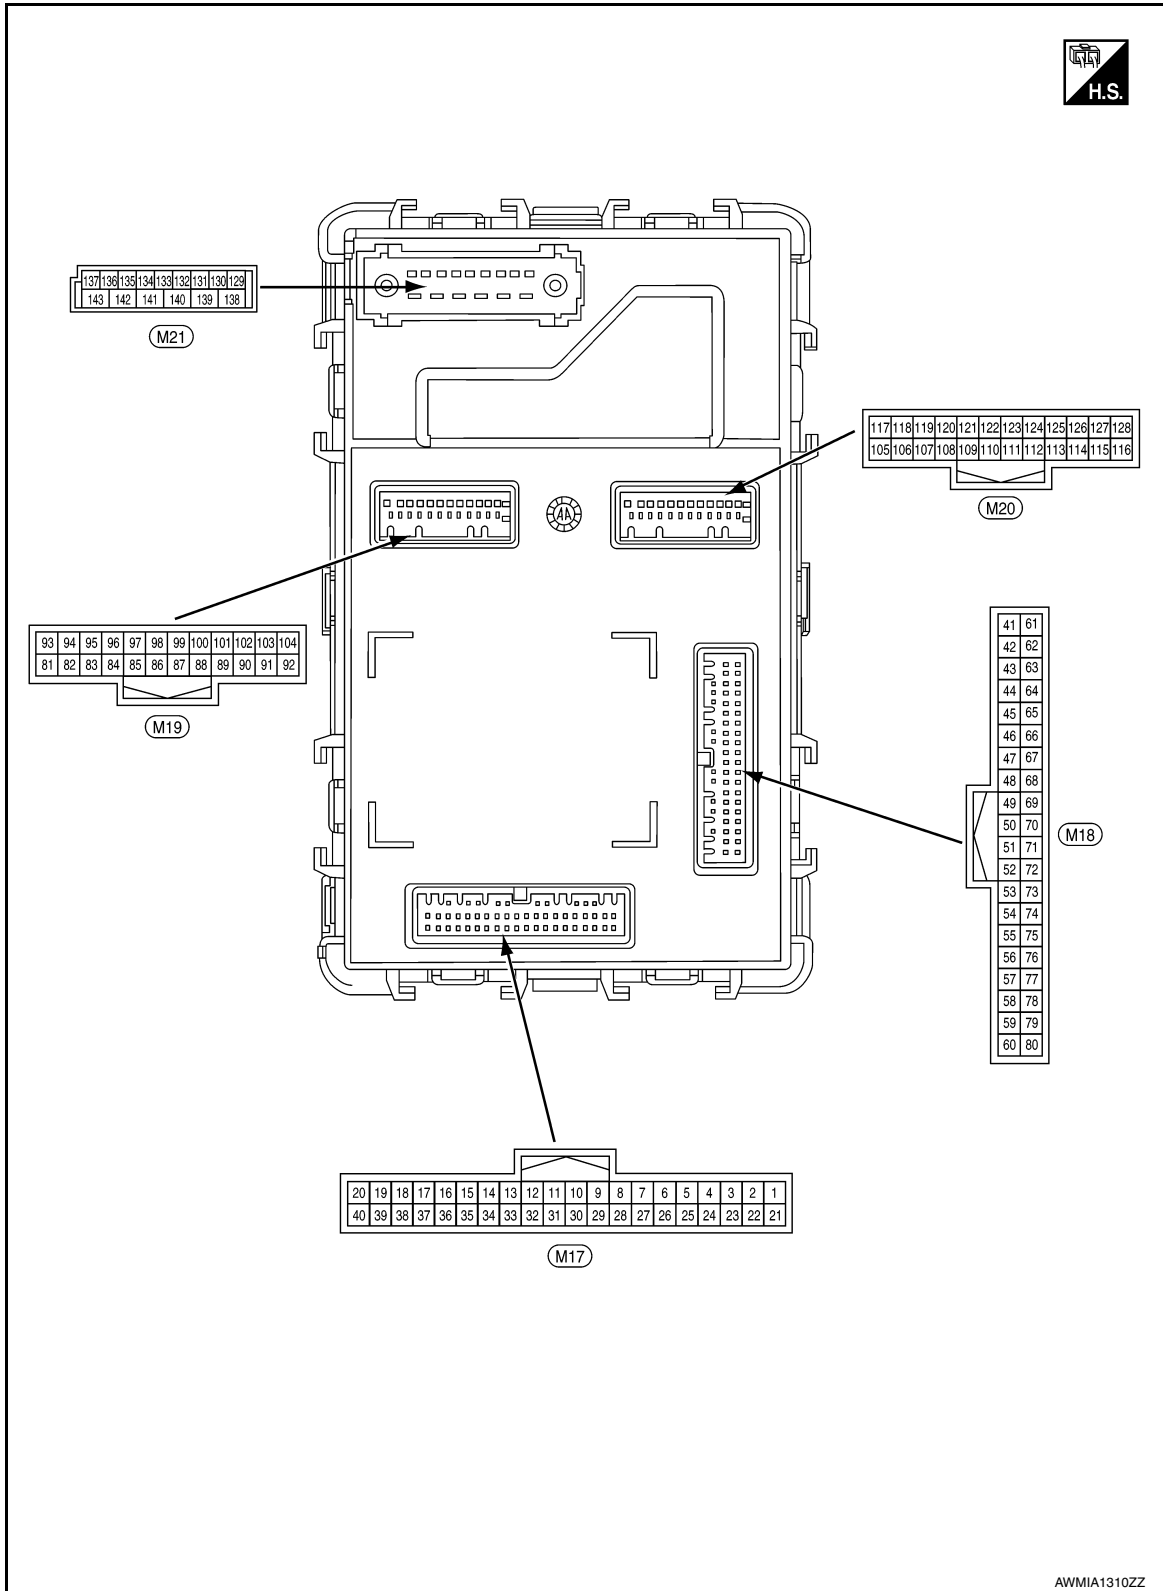TERMINAL LAYOUT







PHYSICAL VALUES

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

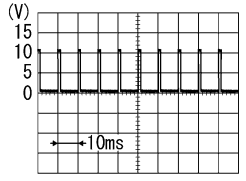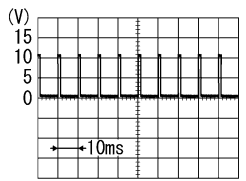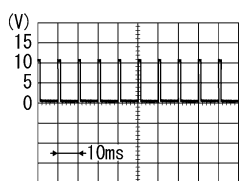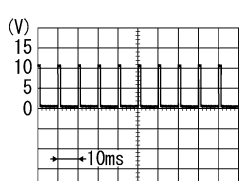[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
(+)	(-)					
1 (R)	Ground	Engine start switch	Input	Push-button ignition switch	Pressed	0V
				Not pressed	Battery voltage	
3 (BR)	Ground	Auto light power supply 5V	Output	Push-button ignition switch	OFF	0V
					ACC or ON	5V
4 (Y)	Ground	Auto light signal	Input	Push-button ignition switch ON	When outside of the vehicle is bright	Close to 5V
					When outside of the vehicle is dark	Close to 0V
10 (W)	Ground	Combination switch input 5	Input	Combination switch (Wiper intermittent dial 4)	OFF	0V
					TURN RH	
					HEADLAMP 1	
					HI BEAM	
					TAIL LAMP	
1.0V						
11 (BG)	Ground	Combination switch input 4	Input	Combination switch (Wiper intermittent dial 4)	OFF	0V
					TURN LH	
					PASSING	
					HEADLAMP 2	
					FR FOG	
1.0V						
12 (W)	Ground	Combination switch input 3	Input	Combination switch (Wiper intermittent dial 4)	OFF	0V
					FR WIPER LOW	
					FR WIPER INT/AUTO	
					AUTO LIGHT	
1.0V						
13 (G)	Ground	Combination switch input 2	Input	Combination switch (Wiper intermittent dial 4)	OFF	0V
					FR WASHER	
					INT VOLUME 3	
1.0V						

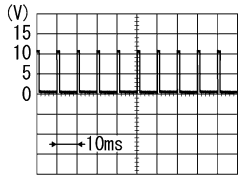
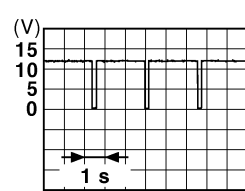
A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >




[BCM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
14 (P)	Ground	Combination switch input 1	Input	Combination switch (Wiper intermit- tent dial 4)	OFF	0V
					FR WIPER HI	
					INT VOLUME 1	
					INT VOLUME 2	
17 (B)	Ground	Auto light reference ground	Input	Push-button ignition switch ON	0V	
18 (G)	Ground	Security indicator	Output	Security indicator	ON	0V
					Blinking	
19 (G)	Ground	Lock switch signal	Input	Door lock/unlock switch	OFF	Battery voltage
					Lock	Battery voltage
20 (W)	Ground	Shift P	Input	Selector lever	Unlock	0V
					P position	Battery voltage
21 (W)	Ground	Step lamp control	Output	Step lamp	Any position other than P	Battery voltage
					ON	0V
23 (L)	Ground	Compressor ON sig- nal	Input	A/C switch	OFF	Battery voltage
					ON	9.0 - 12.0V
24 (G)	Ground	Front door lock as- sembly LH (key cylin- der switch)	Input	Key cylinder switch	ON	0V
					OFF (neutral)	5V
25 (BG)	Ground	Brake switch fuse	Input	—	Battery voltage	
26 (Y)	Ground	Shorting input	Input	Push-button ignition switch OFF	Battery voltage	
27 (G)	Ground	Brake switch lamp	Input	Stop lamp switch	OFF (brake pedal is not de- pressed)	0V
					ON (brake pedal is de- pressed)	Battery voltage
29 (Y)	Ground	Front blower monitor	Input	Front blower mo- tor switch	ON	Battery voltage
					OFF	0V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

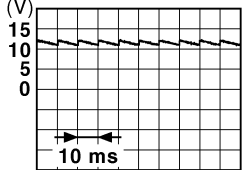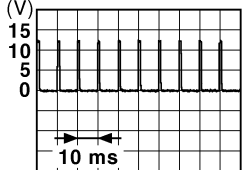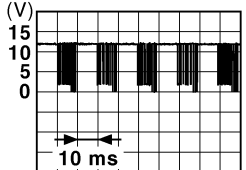[BCM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
30 (P)	Ground	Driver door lock status	Input	Front door LH	LOCK status	 <small>JPMIA0011GB</small> 11.8V
					UNLOCK status	0V
32 (Y)	Ground	Rear window defogger ON signal	Input	Rear window defogger switch	OFF	5V
					ON	0V
34 (BG)	Ground	Unlock switch signal	Input	Door lock/unlock switch	Unlock	Battery voltage
					Lock	0V
36 (Y)	Ground	Hazard switch	Input	Hazard switch	Pressed	0V
					Not pressed	 <small>JPMIA0012GB</small> 1.1V
39 (L)	Ground	Shift N/P	Input	Selector lever	P or N position	Battery voltage
					Except P and N positions	0V
48 (BR)	Ground	High side start switch LED	Output	Push-button ignition switch illumination	ON	5.5V
					OFF	0V
52 (G)	Ground	Audio dogle	Input/ Output	Push-button ignition switch OFF	5V	5V
54 (P)	Ground	Power window link/communication	Input/ Output	Push-button ignition switch	ON	 <small>JPMIA0013GB</small> 10.2V
					OFF or ACC	0V
59 (P)	Ground	CAN low	Input/ Output	—	—	—
60 (L)	Ground	CAN high	Input/ Output	—	—	—
61 (Y)	Ground	Rear defogger relay output	Output	Rear window defogger	Active	0V
					Not activated	Battery voltage

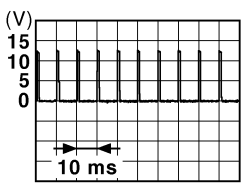
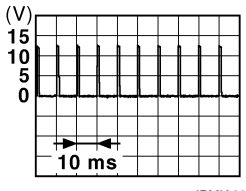
A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >







[BCM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
(+)	(-)	Signal name	Input/ Output			
62 (BR)	Ground	Starter relay output	Output	Push-button ignition switch ON	When selector lever is in P or N position and the brake is depressed	Battery voltage
					When selector lever is in P or N position and the brake is not depressed	0V
64 (W)	Ground	Buzzer output	Output	Outside warning buzzer	Sounding	0V
					Not sounding	Battery voltage
66 (R)	Ground	Blower fan relay output	Output	Push-button ignition switch	OFF or ACC	0V
					ON	Battery voltage
67 (W)	Ground	Ignition electrical relay output 2	Output	Push-button ignition switch	OFF or ACC	0V
					ON	Battery voltage
68 (P)	Ground	Dimmer signal output	Output	Push-button ignition switch ON	Either of the following conditions • Lighting switch OFF • The area around the vehicle is bright (Shine a light on the optical sensor)	0V
					The area around the vehicle is dark (Block the light from the optical sensor)	Battery voltage
69 (L)	Ground	CVT device output	Output	—	—	Battery voltage
70 (G)	Ground	IPDM E/R ignition output 1	Output	Push-button ignition switch	OFF or ACC	0V
					ON	Battery voltage
71 (V)	Ground	Driver request switch	Input	Front door LH request switch	ON (pressed)	0V
					OFF (not pressed)	 <p style="text-align: right; font-size: small;">JPMA0016GB</p>
72 (Y)	Ground	Passenger request switch	Input	Front door RH request switch	ON (pressed)	0V
					OFF (not pressed)	 <p style="text-align: right; font-size: small;">JPMA0016GB</p>
74 (P)	Ground	Front door lock assembly LH (key cylinder switch) (lock)	Input	Front door lock assembly LH (key cylinder switch)	OFF (neutral)	5V
					ON (lock)	0V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

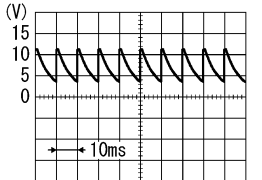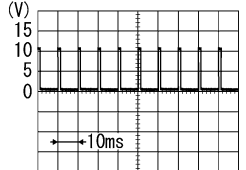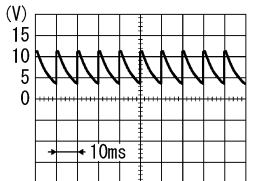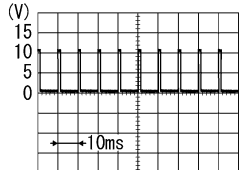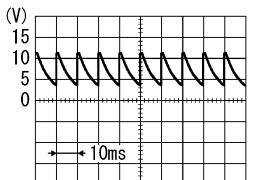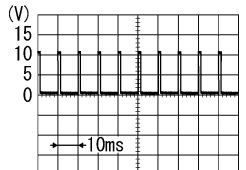[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
(+)	(-)	Signal name	Input/ Output			
75 (BG)	Ground	Combination switch output 5	Output	Combination switch (Wiper intermit- tent dial 4)	OFF	 <p style="text-align: right; font-size: small;">PKIB4960J</p>
					INT VOLUME 2	7.0 – 8.0V
					FR FOG	 <p style="text-align: right; font-size: small;">PKIB4958J</p>
1.2V						
76 (W)	Ground	Combination switch output 4	Output	Combination switch (Wiper intermit- tent dial 4)	OFF	 <p style="text-align: right; font-size: small;">PKIB4960J</p>
					INT VOLUME 3	7.0 – 8.0V
					AUTO LIGHT	 <p style="text-align: right; font-size: small;">PKIB4958J</p>
					TAIL LAMP	1.2V
77 (R)	Ground	Combination switch output 3	Output	Combination switch (Wiper intermit- tent dial 4)	OFF	 <p style="text-align: right; font-size: small;">PKIB4960J</p>
					INT VOLUME 1	7.0 – 8.0V
					HEADLAMP 2	 <p style="text-align: right; font-size: small;">PKIB4958J</p>
1.2V	1.2V					

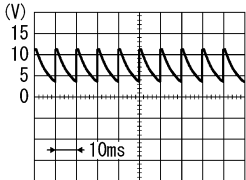
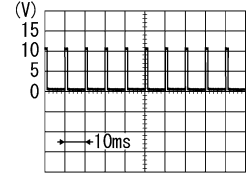
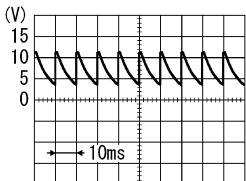
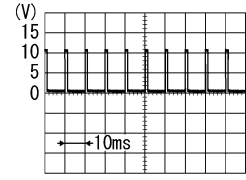
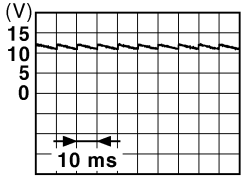
A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
(+)	(-)	Signal name	Input/ Output			
78 (P)	Ground	Combination switch output 2	Output	Combination switch (Wiper intermit- tent dial 4)	OFF	 <small>PKIB4960J</small> 7.0 – 8.0V
					FR WIPER HI	 <small>PKIB4958J</small> 1.2V
					FR WIPER INT/AUTO	
					PASSING	
HEADLAMP 1						
79 (G)	Ground	Combination switch output 1	Output	Combination switch (Wiper intermit- tent dial 4)	OFF	 <small>PKIB4960J</small> 7.0 – 8.0V
					FR WASHER	 <small>PKIB4958J</small> 1.2V
					FR WIPER LOW	
					TURN LH	
TURN RH						
80 (BR)	Ground	Trunk open switch	Output	trunk	Open (trunk actuator is ac- tivated)	Battery voltage
					Close (trunk actuator is not activated)	0V
82 (Y)	Ground	Left rear door switch	Input	Rear door LH switch	OFF (when rear door LH closes)	 <small>JPMIA0011GB</small> 11.8V
					ON (when rear door LH opens)	0V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

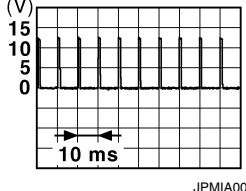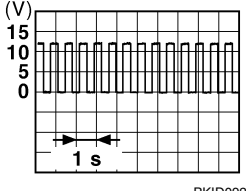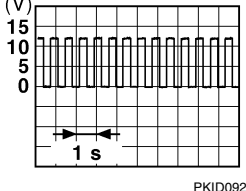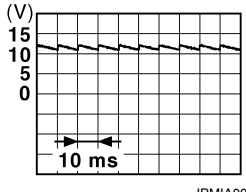[BCM]






Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
(+)	(-)	Signal name	Input/ Output			
83 (LG)	Ground	Trunk request switch	Input	Trunk request switch	ON (pressed)	0V
				OFF (not pressed)	 <p style="text-align: right; margin-right: 50px;">1.0V</p>	
85 (BG)	Ground	Trunk room lamp	Output	Trunk room lamp	ON	0V
				OFF	Battery voltage	
89 (BR)	Ground	Reverse lamp output	Output	Push-button ignition switch ON	R position	 <p style="text-align: right; margin-right: 50px;">6.5V</p>
				Any position other than R	0V	
91 (V)	Ground	Trunk lid opening	Output	Trunk lid	Open (trunk lid opener actuator is activated)	Battery voltage
				Close (trunk lid opener actuator is not activated)	0V	
92 (LG)	Ground	Right rear flasher	Output	Push-button ignition switch ON	Turn signal switch OFF	0V
				Turn signal switch RH	 <p style="text-align: right; margin-right: 50px;">6.5 V</p>	
93 (V)	Ground	Right rear door switch	Input	Rear door RH switch	OFF (when rear door RH closes)	 <p style="text-align: right; margin-right: 50px;">11.8V</p>
				ON (when rear door RH opens)	0V	

A
B
C
D
E
F
G
H
I
J
K
L
BCS
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


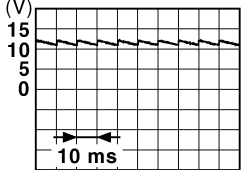
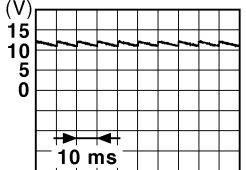
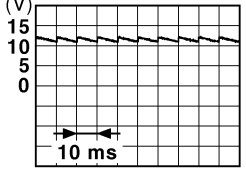
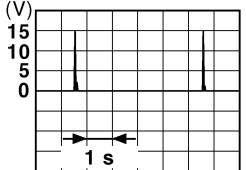
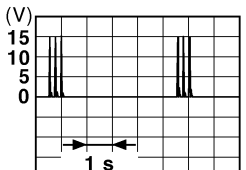
[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
(+)	(-)	Signal name	Input/ Output			
94 (SB)	Ground	Passenger door switch	Input	Front door RH switch	OFF (when front door RH closes)	 <small>JPMIA0011GB</small> 11.8 V
					ON (when front door RH opens)	0V
96 (BR)	Ground	Driver door switch	Input	Front door LH switch	OFF (front door LH CLOSE)	 <small>JPMIA0011GB</small> 11.8V
					ON (front door LH OPEN)	0V
97 (SB)	Ground	Trunk switch	Input	Trunk switch	OFF (trunk is closed)	 <small>JPMIA0011GB</small> 11.8V
					ON (trunk is open)	0V
99 (G)	Ground	Rear parcel shelf antenna B	Output	Push-button ignition switch OFF	When Intelligent Key is in the passenger compartment	 <small>JMKIA0062GB</small>
					When Intelligent Key is not in the passenger compartment	 <small>JMKIA0063GB</small>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

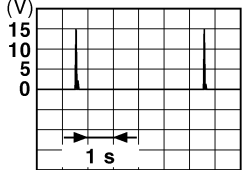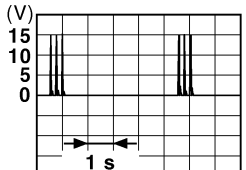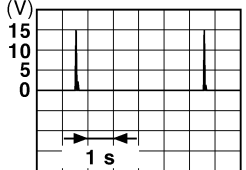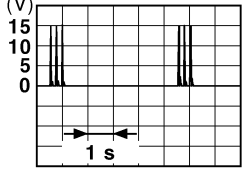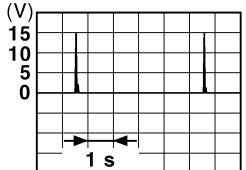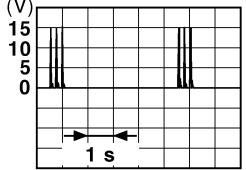[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
100 (R)	Ground	Rear parcel shelf antenna A	Output	Push-button ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
101 (G)	Ground	Rear bumper antenna B	Output	When the trunk request switch is operated with push-button ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
102 (W)	Ground	Rear bumper antenna A	Output	When the trunk request switch is operated with push-button ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>

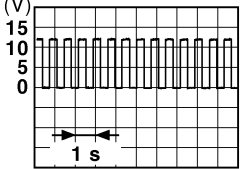
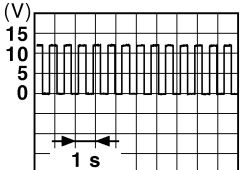
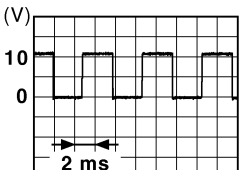
A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >







[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
103 (Y)	Ground	Left rear flasher	Output	Push-button ignition switch ON	Turn signal switch OFF 0V
				Turn signal switch LH	 <p style="text-align: right; font-size: small;">PKID0926E</p>
105 (BR)	Ground	Right front flasher	Output	Push-button ignition switch ON	Turn signal switch OFF 0V
				Turn signal switch RH	 <p style="text-align: right; font-size: small;">PKID0926E</p>
107 (W)	Ground	Low side start switch LED	Input	Push-button ignition switch	OFF 0V
				NOTE: When the illumination brightening/dimming level is in the neutral position ON	 <p style="text-align: right; font-size: small;">JSNIA0010GB</p>
108 (BG)	Ground	Shift lock solenoid output	Input	Selector lever	P position 0V
				Any position other than P	Battery voltage
109 (G)	Ground	Reverse signal	Output	Push-button ignition switch ON	R position Battery voltage
				Any position other than R	0V
111 (Y)	Ground	ACC LED	Output	Push-button ignition switch	OFF Battery voltage
				ACC or ON	0V
113 (P)	Ground	ACC relay output	Output	Push-button ignition switch	OFF 0V
				ACC or ON	Battery voltage

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

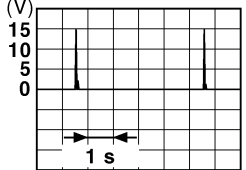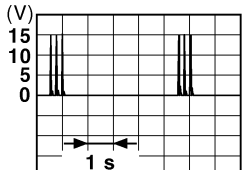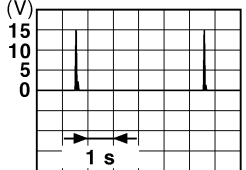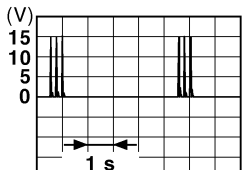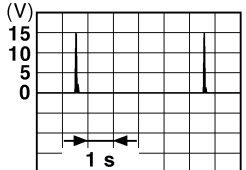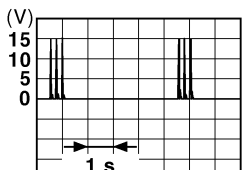[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
114 (P)	Ground	Outside key antenna RH A	Output	When the front door RH request switch is operat- ed with push-but- ton ignition switch OFF	When Intelligent Key is in the antenna detection area  <small>JMKIA0062GB</small>
				When Intelligent Key is not in the antenna detection area  <small>JMKIA0063GB</small>	
115 (R)	Ground	Outside key antenna RH B	Output	When the front door RH request switch is operat- ed with push-but- ton ignition switch OFF	When Intelligent Key is in the antenna detection area  <small>JMKIA0062GB</small>
				When Intelligent Key is not in the antenna detection area  <small>JMKIA0063GB</small>	
116 (W)	Ground	Front console anten- na A	Output	Push-button igni- tion switch OFF	When Intelligent Key is in the passenger compart- ment  <small>JMKIA0062GB</small>
				When Intelligent Key is not in the passenger compart- ment  <small>JMKIA0063GB</small>	

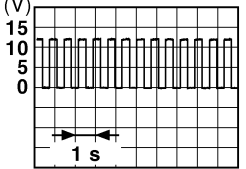
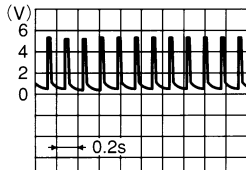
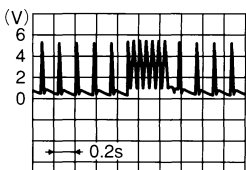
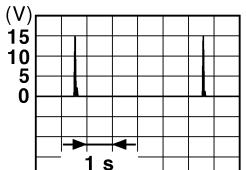
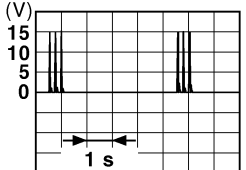
A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
(+)	(-)	Signal name	Input/ Output		
117 (SB)	Ground	Left front flasher	Output		
				Turn signal switch LH	 <p style="text-align: right; font-size: small;">PKID0926E</p>
				Standby state	 <p style="text-align: right; font-size: small;">OCC3881D</p>
119 (G)	Ground	Remote keyless entry receiver signal	Input/ Output	Push-button ignition switch ON	 <p style="text-align: right; font-size: small;">OCC3880D</p>
				When Intelligent Key is in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
121 (R)	Ground	Outside key antenna LH B	Output	When the front door LH request switch is operated with push-button ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

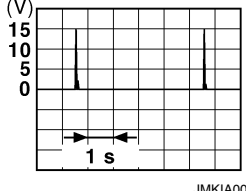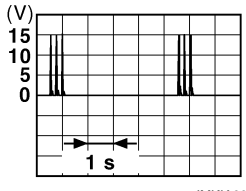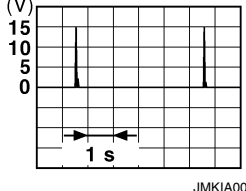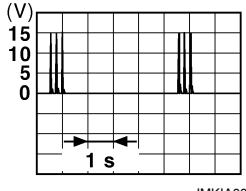[BCM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
(+)	(-)					
122 (P)	Ground	Outside key antenna LH A	Output	When the front door LH request switch is operated with push-button ignition switch OFF	<p>When Intelligent Key is in the antenna detection area</p> 	
				When Intelligent Key is not in the antenna detection area		
126 (BR)	Ground	NATS antenna amp. B	Input/ Output	During waiting	Intelligent Key backside is contacted to push-button ignition switch, turn ignition switch ON.	Just after pressing push-button ignition switch. Pointer of analog volt meter should move.
127 (L)	Ground	NATS antenna amp. A	Input/ Output	During waiting	Intelligent Key backside is contacted to push-button ignition switch, turn ignition switch ON.	Just after pressing push-button ignition switch. Pointer of analog volt meter should move.
128 (BG)	Ground	Front console antenna B	Output	Push-button ignition switch OFF	<p>When Intelligent Key is in the passenger compartment</p> 	
				When Intelligent Key is not in the passenger compartment		
129 (G)	Ground	Battery saver output	Output	After passing the interior room lamp battery saver operation time	0V	
				Any other time after passing the interior room lamp battery saver operation time	Battery voltage	
130 (SB)	Ground	Passenger door unlock	Output	Front door RH	UNLOCK (actuator is activated)	Battery voltage
				Other than UNLOCK (actuator is not activated)	0V	
131 (W)	Ground	BCM battery fuse	Input	Push-button ignition switch OFF	Battery voltage	

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
(+)	(-)					
132 (L)	Ground	Rear door lock	Output	All doors	LOCK (actuator is activated)	Battery voltage
					Other than LOCK (actuator is not activated)	0V
133 (Y)	Ground	Rear door unlock	Output	Rear door RH and rear door LH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
134 (B)	Ground	Ground 2	—	Push-button ignition switch ON		0V
135 (BR)	Ground	Driver, passenger and fuel door lock	Output	All doors	LOCK (actuator is activated)	Battery voltage
					Other than LOCK (actuator is not activated)	0V
136 (P)	Ground	Room lamp control	Output	Interior room lamp	OFF	Battery voltage
					ON	0V
137 (V)	Ground	Driver and fuel door unlock	Output	Front door LH	UNLOCK (actuator is activated)	Battery voltage
					Other than UNLOCK (actuator is not activated)	0V
138 (V)	Ground	Rear door battery	Input	Push-button ignition switch OFF		Battery voltage
139 (W)	Ground	Fusible link battery power	Input	Push-button ignition switch OFF		Battery voltage
140 (LG)	Ground	Power window ignition power supply	Output	Push-button ignition switch ON		Battery voltage
141 (V)	Ground	Power window battery power supply	Output	Push-button ignition switch OFF		Battery voltage
142 (BR)	Ground	Front door battery	Input	Push-button ignition switch OFF		Battery voltage
143 (B)	Ground	Ground 1	—	Push-button ignition switch ON		0V

Fail Safe

INFOID:000000012591377

Display contents of CONSULT	Fail-safe	Cancellation
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI-SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> • Starter control relay signal • Starter relay status signal
B2562: LO VOLTAGE	Inhibit engine cranking	100 ms after the power supply voltage increases to more than 8.8 V
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> • Starter motor relay control signal • Starter relay status signal (CAN)

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Display contents of CONSULT	Fail-safe	Cancellation
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> • IGN relay (IPDM E/R) control signal: OFF (Battery voltage) • Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) • Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization

DTC Inspection Priority Chart

INFOID:0000000012591378

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"> • B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> • U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN)
3	<ul style="list-style-type: none"> • B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM • B2195: ANTI SCANNING • B2196: DONGLE UNIT • B2198: NATS ANTENNA AMP
4	<ul style="list-style-type: none"> • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP SW • B2605: PNP SW • B2608: STARTER RELAY • B260A: IGNITION RELAY • B2614: ACC RELAY CIRC • B2615: BLOWER RELAY CIRC • B2616: IGN RELAY CIRC • B2617: STARTER RELAY CIRC • B2618: BCM • B261A: PUSH-BTN IGN SW • B261B: RES ENG RUN • B261E: VEHICLE TYPE • B26F1: IGNITION RELAY • B26F2: IGNITION RELAY • B26F4: STARTER CONTROL RELAY • B26F6: BCM • B26FD: SHIFT LOCK SOLENOID • B26FE: HOOD SWITCH • B26FF: INTELLIGENT TUNER • C1729: VHCL SPEED SIG ERR • U0415: VEHICLE SPEED SIG

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

Priority	DTC
5	<ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1712: [CHECKSUM ERR] FL • C1713: [CHECKSUM ERR] FR • C1714: [CHECKSUM ERR] RR • C1715: [CHECKSUM ERR] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1720: [CODE ERR] FL • C1721: [CODE ERR] FR • C1722: [CODE ERR] RR • C1723: [CODE ERR] RL • C1724: [BATT VOLT LOW] FL • C1725: [BATT VOLT LOW] FR • C1726: [BATT VOLT LOW] RR • C1727: [BATT VOLT LOW] RL • C1730: FLAT TIRE FL • C1731: FLAT TIRE FR • C1732: FLAT TIRE RR • C1733: FLAT TIRE RL • C1734: CONTROL UNIT • C1735: IGNITION SIGNAL
6	<ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA
7	B259A: ROOM LAMP FUSE

DTC Index

INFOID:000000012591379

NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. Further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	BCS-68, "Description"
U1010: CONTROL UNIT (CAN)	—	—	—	BCS-69, "DTC Logic"
U0415: VEHICLE SPEED SIG	—	—	—	BCS-70, "Description"
B2190: NATS ANTENNA AMP	×	—	—	SEC-90, "Description"
B2191: DIFFERENCE OF KEY	×	—	—	SEC-92, "Description"
B2192: ID DISCORD BCM-ECM	×	—	—	SEC-93, "DTC Logic"
B2193: CHAIN OF BCM-ECM	×	—	—	SEC-94, "DTC Logic"
B2195: ANTI SCANNING	×	—	—	SEC-95, "DTC Logic"

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]

CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page	
B2196: DONGLE UNIT	—	—	—	SEC-96, "Description"	A
B2198: NATS ANTENNA AMP.	—	—	—	SEC-98, "DTC Logic"	B
B2555: STOP LAMP	—	—	—	SEC-100, "DTC Logic"	
B2556: PUSH-BTN IGN SW	—	×	—	SEC-103, "DTC Logic"	C
B2557: VEHICLE SPEED	—	×	—	SEC-105, "DTC Logic"	
B2560: STARTER CONT RELAY	×	×	—	SEC-106, "Description"	
B2562: LOW VOLTAGE	×	—	—	BCS-71, "DTC Logic"	D
B259A: ROOM LAMP FUSE	—	—	—	BCS-72, "DTC Logic"	
B2601: SHIFT POSITION	—	×	—	SEC-107, "DTC Logic"	
B2602: SHIFT POSITION	—	×	—	SEC-110, "DTC Logic"	E
B2603: SHIFT POSI STATUS	—	×	—	SEC-112, "DTC Logic"	
B2604: PNP SW	—	×	—	SEC-116, "DTC Logic"	F
B2605: PNP SW	—	×	—	SEC-119, "DTC Logic"	
B2608: STARTER RELAY	×	×	—	SEC-122, "DTC Logic"	
B260A: IGNITION RELAY	×	×	—	PCS-73, "DTC Logic"	G
B2614: ACC RELAY CIRC	—	×	—	PCS-75, "DTC Logic"	
B2615: BLOWER RELAY CIRC	—	×	—	PCS-77, "DTC Logic"	H
B2616: IGN RELAY CIRC	—	×	—	PCS-79, "DTC Logic"	
B2617: STARTER RELAY CIRC	×	×	—	SEC-124, "Description"	
B2618: BCM	×	×	—	PCS-81, "DTC Logic"	I
B261A: PUSH-BTN IGN SW	—	×	—	PCS-83, "DTC Logic"	
B261B: RES ENG RUN	—	—	—	DLK-86, "DTC Logic"	J
B261E: VEHICLE TYPE	×	× (Turn ON for 15 seconds)	—	SEC-126, "DTC Logic"	
B2621: INSIDE ANTENNA	—	—	—	DLK-87, "DTC Logic"	K
B2622: INSIDE ANTENNA	—	—	—	DLK-89, "DTC Logic"	
B26F1: IGNITION RELAY	—	—	—	PCS-85, "DTC Logic"	
B26F2: IGNITION RELAY	—	—	—	PCS-87, "DTC Logic"	L
B26F4: STARTER CONTROL RELAY	—	—	—	SEC-128, "DTC Logic"	
B26F6: BCM	—	—	—	PCS-89, "DTC Logic"	BCS
B26FD: SHIFT LOCK SOLENOID	—	—	—	DLK-91, "DTC Logic"	
B26FE: HOOD SWITCH	—	—	—	DLK-94, "DTC Logic"	
B26FF: REMOTE KEYLESS ENTRY RECEIVER	—	—	—	DLK-96, "DTC Logic"	N
C1704: LOW PRESSURE FL	—	—	×	WT-27, "DTC Logic"	
C1705: LOW PRESSURE FR	—	—	×		O
C1706: LOW PRESSURE RR	—	—	×		
C1707: LOW PRESSURE RL	—	—	×		P
C1708: [NO DATA] FL	—	—	×	WT-29, "DTC Logic"	
C1709: [NO DATA] FR	—	—	×		
C1710: [NO DATA] RR	—	—	×		
C1711: [NO DATA] RL	—	—	×		

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[BCM]


CONSULT display	Fail-safe	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
C1712: [CHECKSUM ERR] FL	—	—	×	WT-32, "DTC Logic"
C1713: [CHECKSUM ERR] FR	—	—	×	
C1714: [CHECKSUM ERR] RR	—	—	×	
C1715: [CHECKSUM ERR] RL	—	—	×	
C1716: [PRESSDATA ERR] FL	—	—	×	WT-34, "DTC Logic"
C1717: [PRESSDATA ERR] FR	—	—	×	
C1718: [PRESSDATA ERR] RR	—	—	×	
C1719: [PRESSDATA ERR] RL	—	—	×	
C1720: [CODE ERR] FL	—	—	×	WT-36, "DTC Logic"
C1721: [CODE ERR] FR	—	—	×	
C1722: [CODE ERR] RR	—	—	×	
C1723: [CODE ERR] RL	—	—	×	
C1724: [BATT VOLT LOW] FL	—	—	×	WT-38, "DTC Logic"
C1725: [BATT VOLT LOW] FR	—	—	×	
C1726: [BATT VOLT LOW] RR	—	—	×	
C1727: [BATT VOLT LOW] RL	—	—	×	
C1729: VHCL SPEED SIG ERR	—	—	×	WT-40, "DTC Logic"
C1730: FLAT TIRE FL	—	—	×	WT-41, "DTC Logic"
C1731: FLAT TIRE FR	—	—	×	
C1732: FLAT TIRE RR	—	—	×	
C1733: FLAT TIRE RL	—	—	×	
C1734: CONTROL UNIT	—	—	×	WT-43, "DTC Logic"
C1735: IGNTION SIGNAL	—	—	×	WT-45, "DTC Logic"

WIRING DIAGRAM

BCM

Wiring Diagram

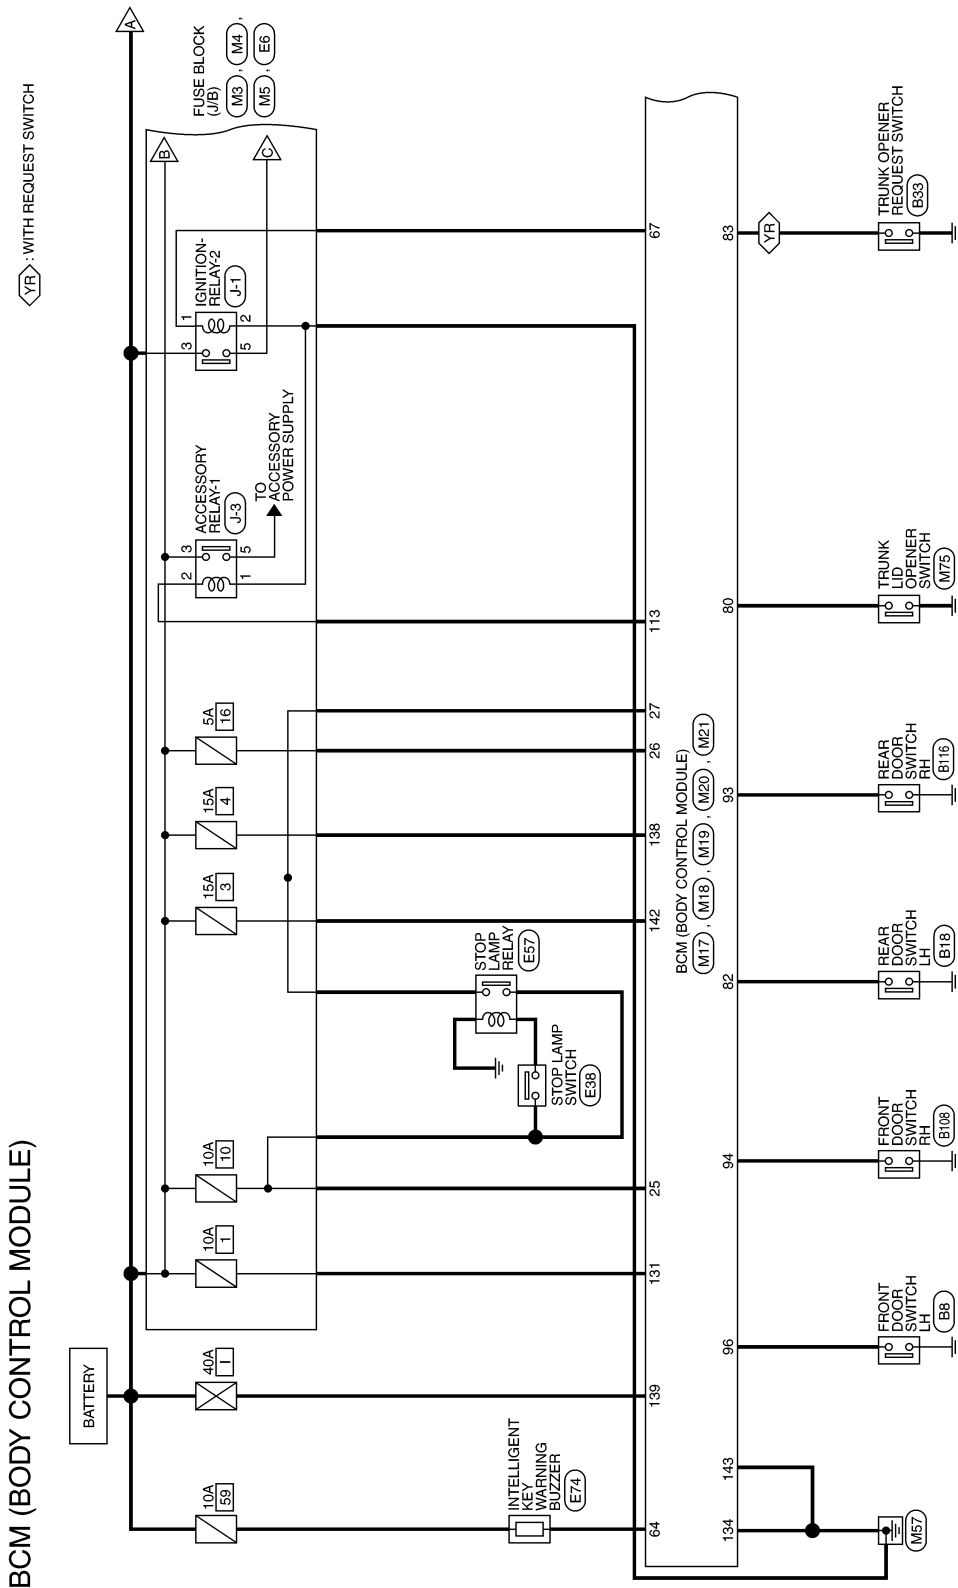INFOID:000000012591380



BCM (BODY CONTROL MODULE)

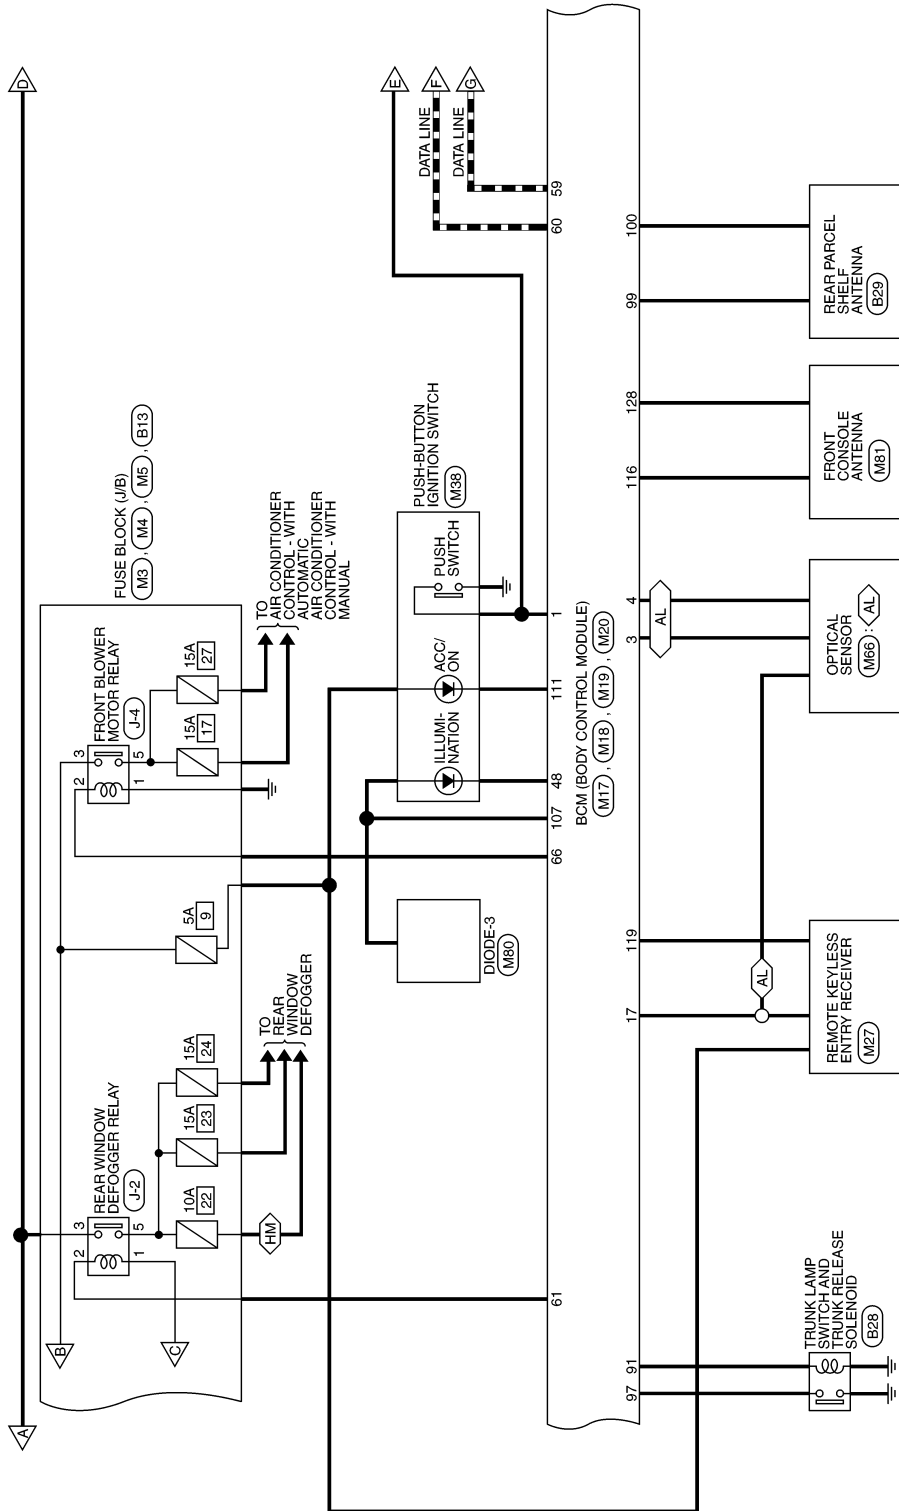
YR : WITH REQUEST SWITCH

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS


ABMWA3529GB

◊AL◊ : WITH AUTO LIGHT SYSTEM
 ◊HM◊ : WITH HEATED MIRRORS



ABMWA2164GB

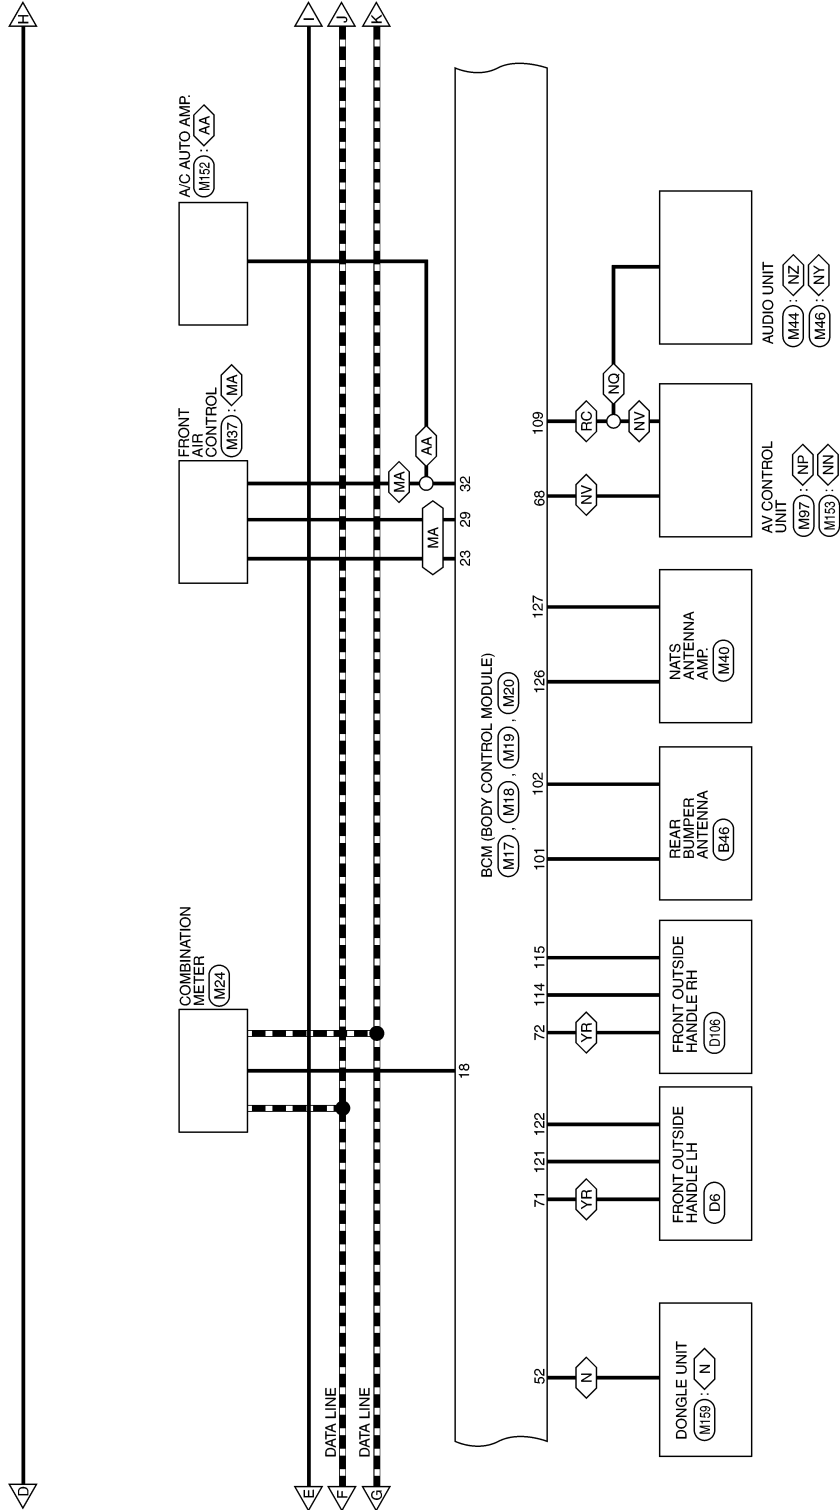- AA : WITH AUTO A/C
- MA : WITHOUT AUTO A/C
- N : FOR CANADA
- NN : WITH NAVIGATION SYSTEM AND BOSE AUDIO SYSTEM
- NP : WITH NAVIGATION SYSTEM WITHOUT BOSE AUDIO SYSTEM
- NO : WITH DISPLAY AUDIO SYSTEM
- NV : WITH NAVI
- NY : WITH DISPLAY AUDIO SYSTEM AND BOSE AUDIO SYSTEM
- NZ : WITH DISPLAY AUDIO SYSTEM WITHOUT BOSE AUDIO SYSTEM
- RC : WITH REAR VIEW MONITOR
- YR : WITH REQUEST SWITCH




ABMWA3530GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BCS

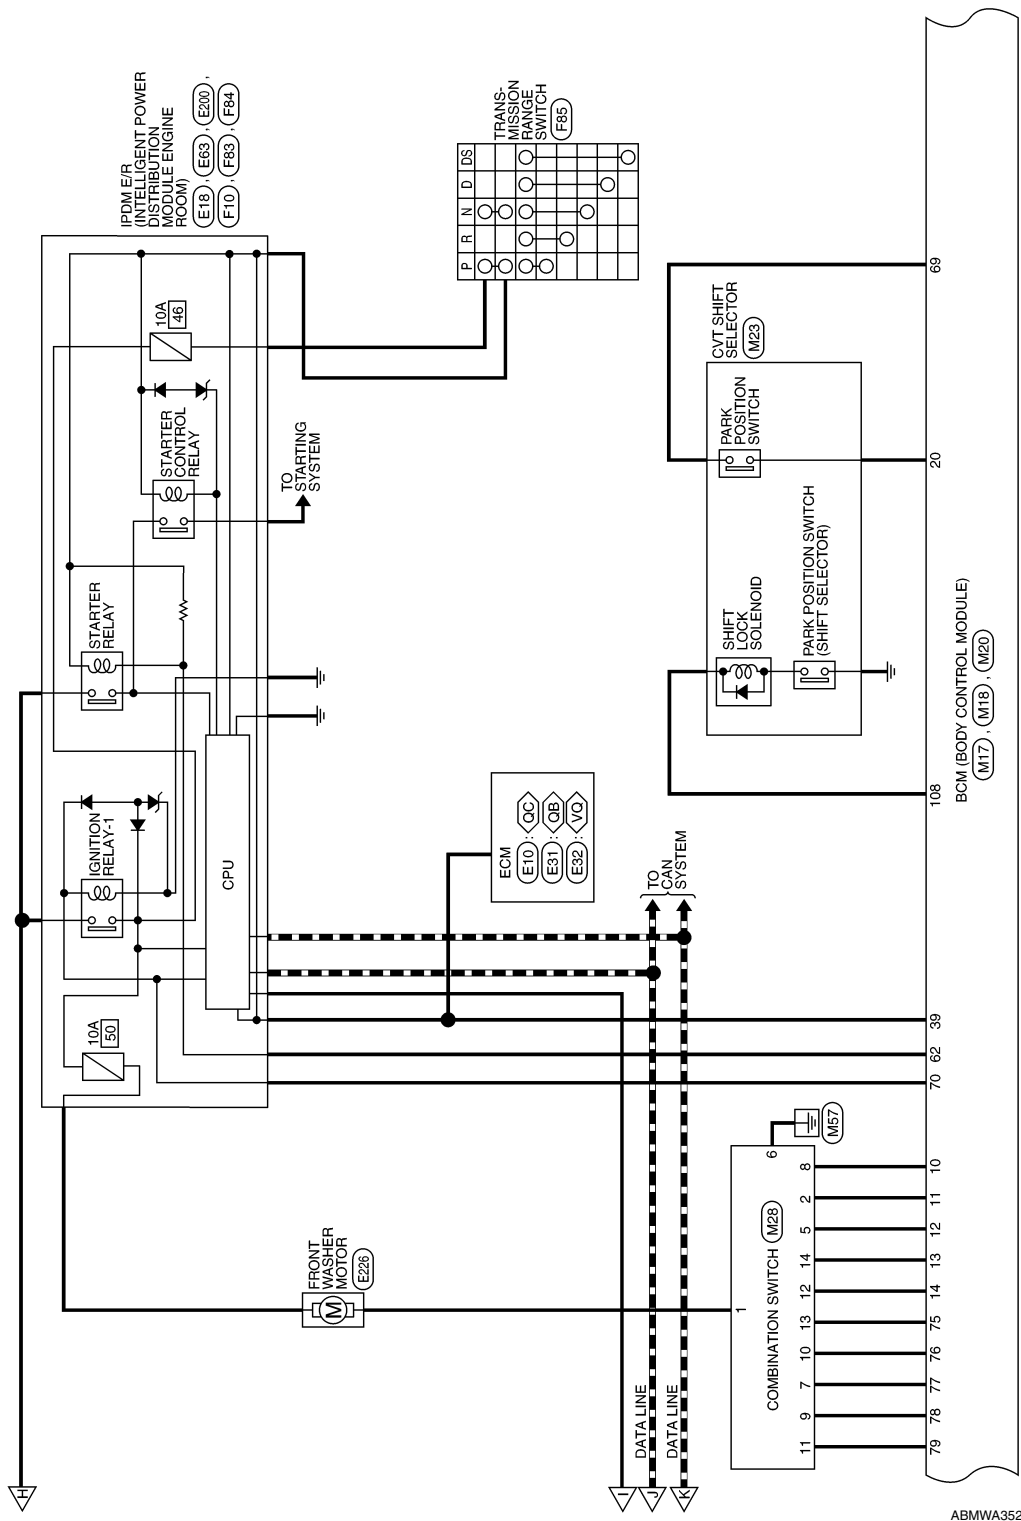
◁QB▷: QR25DE FOR CALIFORNIA
 ◁QC▷: QR25DE EXCEPT FOR CALIFORNIA
 ◁YD▷: WITH VQ35DE



ABMWA3527GB

< WIRING DIAGRAM >

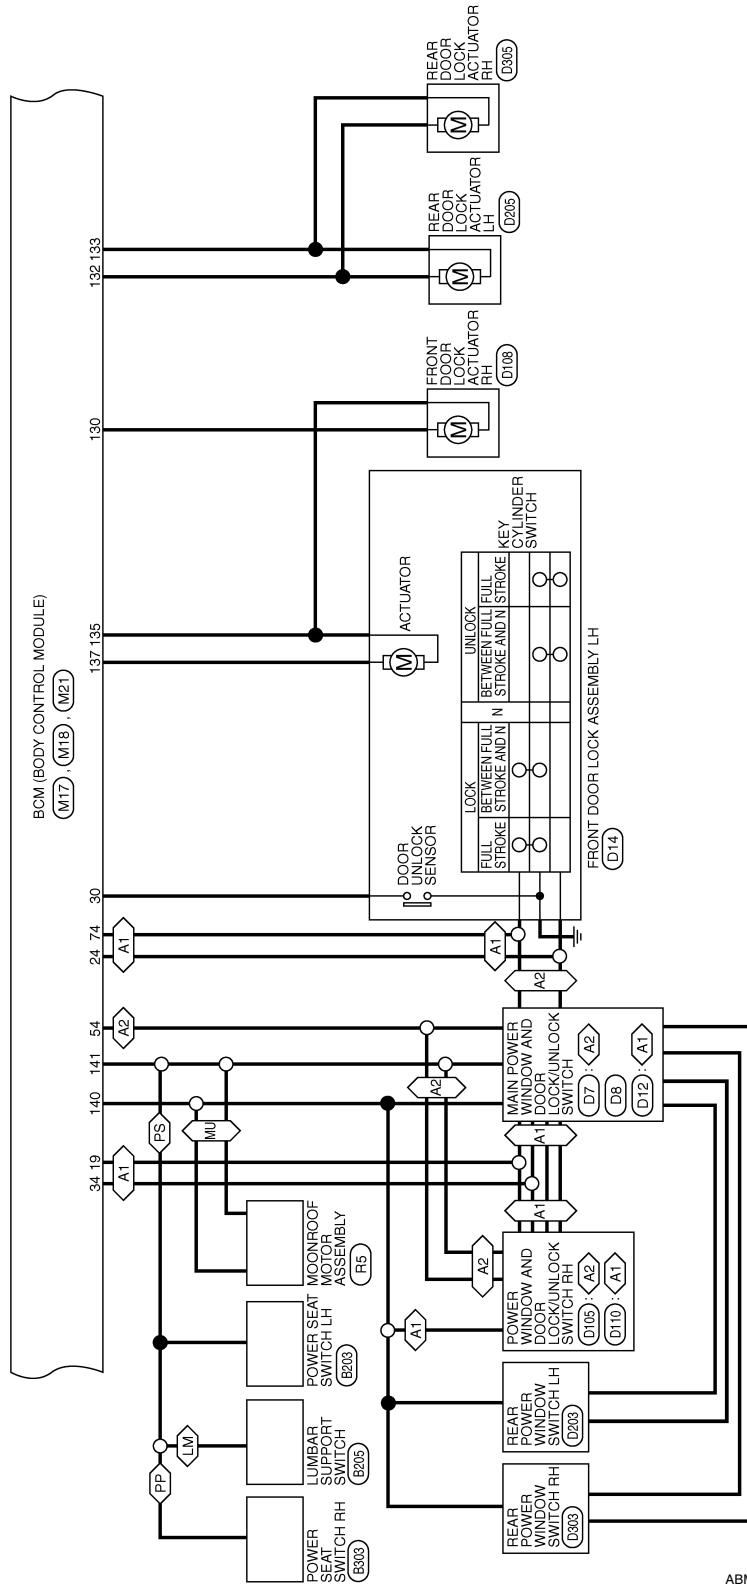- <A1> : WITH LEFT FRONT ONLY POWER WINDOW ANTI-PINCH SYSTEM
- <A2> : WITH LEFT AND RIGHT FRONT POWER WINDOW ANTI-PINCH SYSTEM
- <LM> : WITH POWER LUMBAR SUPPORT
- <MU> : WITH MOONROOF
- <PP> : WITH FRONT PASSENGER POWER SEAT
- <FS> : WITH POWER SEATS




ABMWA3376GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BCS

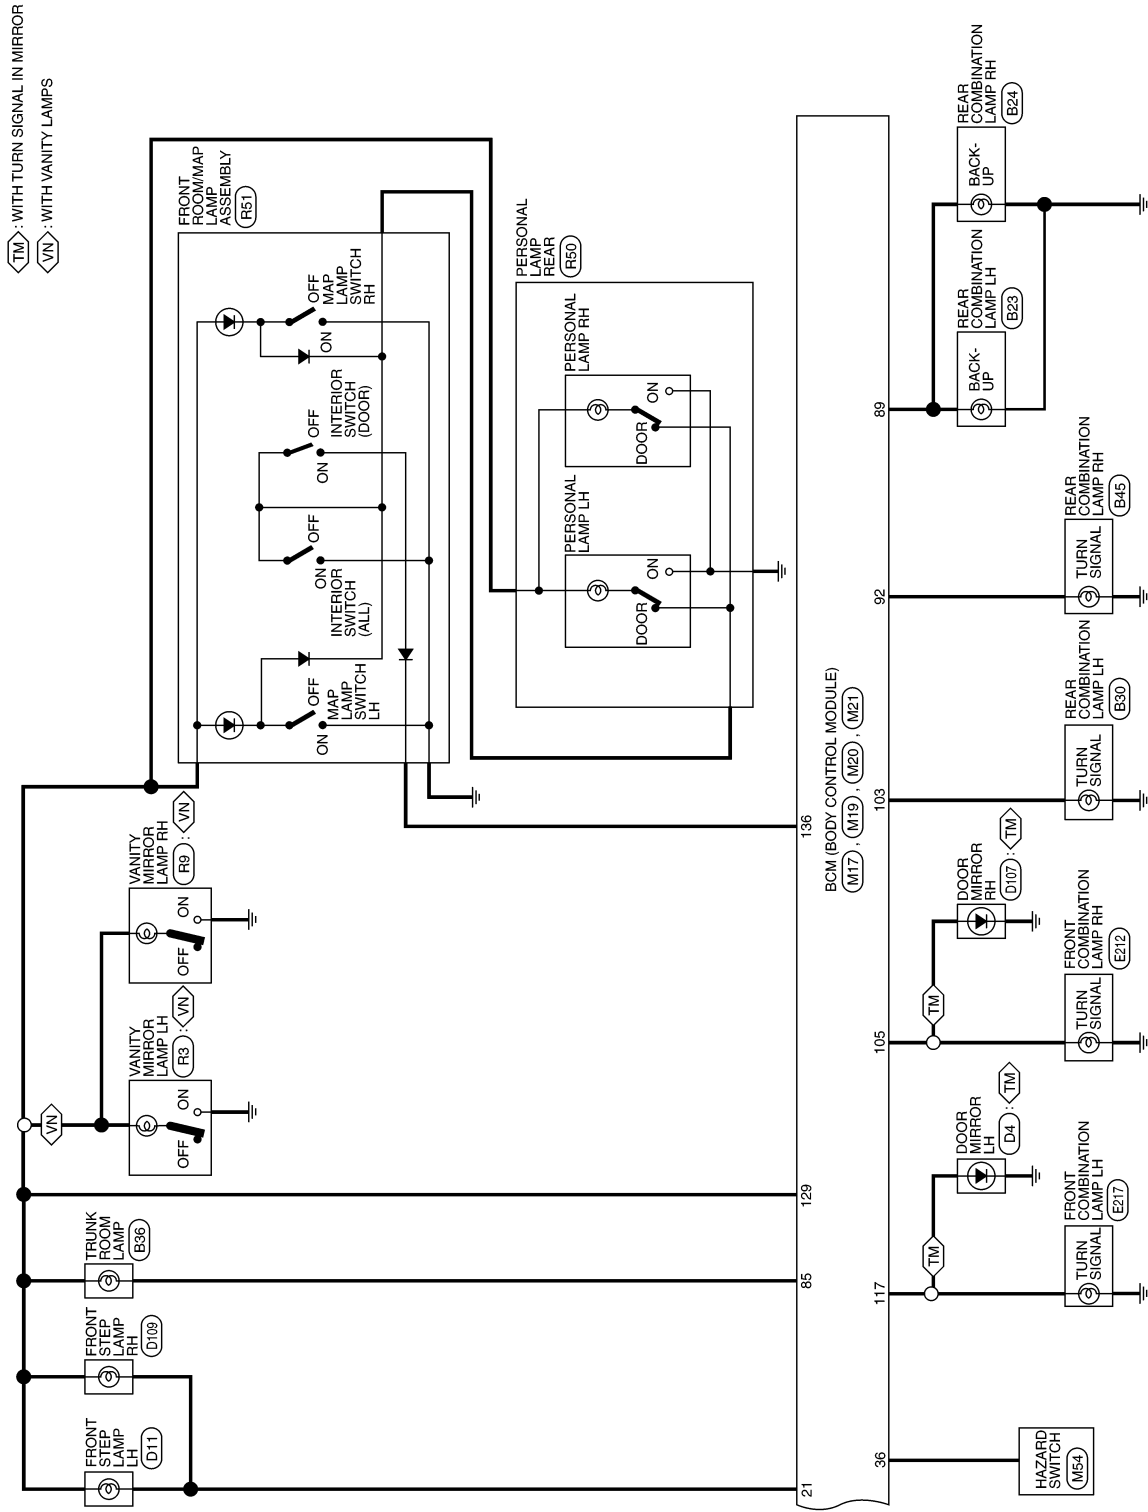
< WIRING DIAGRAM >



ABMWA3528GB

BCM (BODY CONTROL MODULE) CONNECTORS

Connector No.	M17
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



Terminal No.	Color of Wire	Signal Name
20	W	SHIFT P
21	W	STEP LAMP CONT
22	-	-
23	L	AIRCON SW
24	G	DOOR KEY/C UNLOCK SW
25	BG	BRAKE SW FUSE
26	Y	SHORTING IN PIN INPUT
27	G	BRAKE SW LAMP
28	-	-
29	Y	BLOWER FAN SW
30	P	DR DOOR LOCK STATUS
31	-	-
32	Y	REAR DEFOGGER SW
33	-	-
34	BG	CENTRAL DOOR UNLOCK SW
35	-	-
36	Y	HAZARD SW
37	-	-
38	-	-
39	L	SHIFT N/P
40	-	-

Terminal No.	Color of Wire	Signal Name
1	R	ENG START SW NO ESCL
2	-	-
3	BR	A/L POWER SUPPLY 5V
4	Y	A/L SIGNAL
5	-	-
6	-	-
7	-	-
8	-	-
9	-	-
10	W	COMBI SW IN 5
11	BG	COMBI SW IN 4
12	W	COMBI SW IN 3
13	G	COMBI SW IN 2
14	P	COMBI SW IN 1
15	-	-
16	-	-
17	B	GND RF A/L
18	G	SECURITY INDICATOR
19	G	CENTRAL DOOR LOCK SW

ABMIA7913GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BCS

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41
80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61

Terminal No.	Color of Wire	Signal Name
41	-	-
42	-	-
43	-	-
44	-	-
45	-	-
46	-	-
47	-	-
48	BR	HIGH SIDE START SW LED

Terminal No.	Color of Wire	Signal Name
49	-	-
50	-	-
51	-	-
52	G	AUDIO DONGLE
53	-	-
54	P	PW LIN
55	-	-
56	-	-
57	-	-
58	-	-
59	P	CAN-L
60	L	CAN-H
61	Y	REAR DEFOGGER RELAY OUT
62	BR	STARTER RELAY OUT
63	-	-

Terminal No.	Color of Wire	Signal Name
64	W	BUZZER OUT
65	-	-
66	R	BLOWER FAN RELAY OUT
67	W	IGN ELEC RELAY OUT 2
68	P	MR OUTPUT
69	L	AT DEVICE OUT
70	G	IGN USM OUT 1
71	V	DR REQUEST SW
72	Y	AS REQUEST SW
73	-	-
74	P	DOOR KEY/C LOCK SW
75	BG	COMBI SW OUT 5
76	W	COMBI SW OUT 4
77	R	COMBI SW OUT 3
78	P	COMBI SW OUT 2
79	G	COMBI SW OUT 1
80	BR	TRUNK OPEN SW

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY



92	91	90	89	88	87	86	85	84	83	82	81
104	103	102	101	100	99	98	97	96	95	94	93


Terminal No.	Color of Wire	Signal Name
81	-	-
82	Y	RL DOOR SW
83	LG	TRUNK REQUEST SW
84	-	-
85	BG	TRUNK LAMP CONT
86	-	-

Terminal No.	Color of Wire	Signal Name
87	-	-
88	-	-
89	BR	REVERSE LAMP OUT
90	-	-
91	V	TRUNK OPEN OUT
92	LG	RR FLASHER
93	V	RR DOOR SW
94	SB	AS DOOR SW
95	-	-
96	BR	DR DOOR SW
97	SB	TRUNK SW
98	-	-
99	G	ROOM ANT 3 B

Terminal No.	Color of Wire	Signal Name
100	R	ROOM ANT 3 A
101	G	REAR BUMPER ANT B
102	W	REAR BUMPER ANT A
103	Y	RL FLASHER
104	-	-


ABMIA7912GB

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	LG	-
2	BG	-
5	W	-
6	B	-
7	R	-
8	W	-
9	P	-
10	W	-
11	G	-
12	P	-
13	BG	-
14	G	-

Connector No.	M21
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
129	G	BATTERY SAVER OUT
130	SB	DOOR UNLOCK AS
131	W	BAT BCM FUSE
132	L	DOOL LOCK RR/RL
133	Y	DOOL UNLOCK RR/RL
134	B	GND2
135	BR	DOOL LOCK DR/AS/FL
136	P	ROOM LAMP CONT
137	V	DOOR UNLOCK DR/FL
138	V	BAT REAR DOOR
139	W	BAT POWER F/L
140	LG	P/W POWER SUPPLY IGN
141	V	P/W POWER SUPPLY BAT
142	BR	BAT FRONT DOOR
143	B	GND1

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
105	BR	FR FLASHER
106	-	-
107	W	LOW SIDE START SW LED
108	BG	SHIFT LOCK SOLENOID OUT
109	G	REVERSE SIGNAL
110	-	-
111	Y	ACC LED
112	-	-
113	P	ACC RELAY OUT
114	P	AS DOOR ANT A
115	R	AS DOOR ANT B
116	W	ROOM ANT 2 A
117	SB	FL FLASHER
118	-	-
119	G	RF NIMOCO
120	-	-
121	R	DR DOOR ANT B
122	P	DR DOOR ANT A
123	-	-
124	-	-
125	-	-
126	BR	IMMO START BUTTON ANT B
127	L	IMMO START BUTTON ANT A
128	BG	ROOM ANT 2 B

ABMIA7914GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BASIC INSPECTION

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000012591381

BEFORE REPLACEMENT

When replacing BCM, save or print current vehicle specification with CONSULT configuration before replacement.

NOTE:

If "Before Replace ECU" cannot be used, use the "After Replace ECU" or "Manual Configuration" after replacing BCM.

AFTER REPLACEMENT

CAUTION:

- When replacing BCM, you must perform "After Replace ECU" with CONSULT.
- Complete the procedure of "After Replace ECU" in order.
- If you set incorrect "After Replace ECU", incidents might occur.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- When replacing BCM, perform the system initialization (NATS).

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Work Procedure

INFOID:000000012591382

1. SAVING VEHICLE SPECIFICATION

CONSULT

Enter "Re/Programming, Configuration" and perform "Before Replace ECU" to save or print current vehicle specification.

NOTE:

If "Before Replace ECU" cannot be used, use the "After Replace ECU" or "Manual Configuration" after replacing BCM.

>> GO TO 2.

2. REPLACE BCM

Replace BCM. Refer to [BCS-81, "Removal and Installation"](#).

>> GO TO 3.

3. WRITING VEHICLE SPECIFICATION

CONSULT

1. Enter "Re/Programming, Configuration".
2. If "Before Replace ECU" operation was performed, automatically an "Operation Log Selection" screen will be displayed. Select the applicable file from the "Saved Data List" and press "Confirm" to write vehicle specification. Refer to [BCS-65, "CONFIGURATION \(BCM\) : Work Procedure"](#).
3. If "Before Replace ECU" operation was not performed, select "After Replace ECU" or "Manual Configuration" to write vehicle specification. Refer to [BCS-65, "CONFIGURATION \(BCM\) : Work Procedure"](#).

>> GO TO 4.

4. REGISTER INTELLIGENT KEYS

For initialization and registration of Intelligent Keys, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

>> Work End.

CONFIGURATION (BCM)

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[BCM]

CONFIGURATION (BCM) : Description

INFOID:000000012591383

Vehicle specification needs to be written with CONSULT because it is not written after replacing BCM. Configuration has three functions as follows:

Function	Description
"Before Replace ECU"	<ul style="list-style-type: none">• Reads the vehicle configuration of current BCM.• Saves the read vehicle configuration.
"After Replace ECU"	Writes the vehicle configuration with manual selection.
"Select Saved Data List"	Writes the vehicle configuration with saved data.

CAUTION:

- When replacing BCM, you must perform "Select Saved Data List" or "After Replace ECU" with CONSULT.
- Complete the procedure of "Select Saved Data List" or "After Replace ECU" in order.
- If you set incorrect "Select Saved Data List" or "After Replace ECU", incidents might occur.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- Never perform "Select Saved Data List" or "After Replace ECU" except for new BCM.

CONFIGURATION (BCM) : Work Procedure

INFOID:000000012591384

1. WRITING MODE SELECTION

CONSULT

Select "Reprogramming, Configuration" of "BCM".

When writing saved data>>GO TO 2.

When writing manually>>GO TO 3.

2. PERFORM "SAVED DATA LIST"

CONSULT

Automatically "Operation Log Selection" window will display if "Before Replace ECU" was performed. Select applicable file from the "Save Data List" and press "Confirm".

>> Work End.

3. PERFORM "AFTER REPLACE ECU" OR "MANUAL CONFIGURATION"

CONSULT

1. Select "After Replace ECU" or "Manual Configuration".
2. Identify the correct model and configuration list. Refer to [BCS-66, "CONFIGURATION \(BCM\) : Configuration list"](#).
3. Confirm and/or change setting value for each item.

CAUTION:

Thoroughly read and understand the vehicle specification. ECU control may not operate normally if the setting is not correct.

4. Select "Next".

CAUTION:

Make sure to select "Next", confirm each setting value and press "OK" even if the indicated configuration of brand new BCM is same as the desirable configuration. If not, configuration which is set automatically by selecting vehicle model cannot be memorized.

5. When "Completed", select "End".

>> GO TO 4.

4. OPERATION CHECK

Confirm that each function controlled by BCM operates normally.

>> Work End.

A
B
C
D
E
F
G
H
I
J
K
L

BCS

N

O

P

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[BCM]

CONFIGURATION (BCM) : Configuration list

INFOID:000000012591385

CAUTION:

Thoroughly read and understand the vehicle specification. Incorrect settings may result in abnormal control of ECU.

SETTING ITEM		NOTE
Items	Setting value	
FR FOG LAMP	MODE1	—
AUTO LIGHT	WITHOUT ⇔ MODE3 ⇔ MODE4	<ul style="list-style-type: none"> • WITHOUT: Without auto light function • MODE3: Canada auto light w/o enhanced • MODE4: USA auto light w/enhanced
DRL	WITHOUT ⇔ MODE4	<ul style="list-style-type: none"> • WITHOUT: Without daytime running lamps (except Canada) • MODE4: With daytime running lamps (Canada)
SIGNATURE LIGHT SETTING	WITH ⇔ WITHOUT	<ul style="list-style-type: none"> • WITH: With signature lights • WITHOUT: Without signature lights
INTERIOR ROOM LAMP (SHOCK DETECT) FUNCTION	WITH	—
TR CANCEL SW	WITHOUT	—
BCM AC CONTROL	MODE1 ⇔ MODE2	<ul style="list-style-type: none"> • MODE1: With automatic air conditioning • MODE2: With manual air conditioning
P/W UP/DOWN	WITHOUT ⇔ MODE1	<ul style="list-style-type: none"> • WITHOUT: Power windows with driver only auto up/down • MODE1: Power windows with driver and passenger auto up/down
THEFT ALM AREA	MODE2	—
DONGLE	WITH ⇔ WITHOUT	<ul style="list-style-type: none"> • WITH: With dongle (Canada) • WITHOUT: Without dongle (USA)
CAN ERR DETECT TELEMATICS	WITH ⇔ WITHOUT	<ul style="list-style-type: none"> • WITH: With telematics • WITHOUT: Without telematics
Key Fob Type	LCK/UNLCK/TRNK/ALRM ⇔ ENST/ LCK/UNLCK/TRK/ALRM	<ul style="list-style-type: none"> • LCK/UNLCK/TRNK/ALRM: 4 button (w/o engine start) • ENST/LCK/UNLCK/TRK/ALRM: 5 button (w/engine start)
INTELLIGENT KEY TYPE	MODE1 ⇔ MODE2	<ul style="list-style-type: none"> • MODE1: Without door request switches • MODE2: With door request switches
ANSWER BACK I-KEY LOCK UNLOCK	BUZZER ⇔ Off	<ul style="list-style-type: none"> • BUZZER: With answer back lock/unlock feature • Off: Without answer back lock/unlock feature

SHIPPING MODE CANCEL OPERATION

< BASIC INSPECTION >

[BCM]

SHIPPING MODE CANCEL OPERATION

Work Procedure

INFOID:000000012591386

1. SHIPPING MODE CANCEL OPERATION

1. Turn ignition switch OFF.
2. Press in (turn on) the extended storage switch. Refer to [PG-73. "How To Check"](#).
3. Turn ignition switch ON.
4. Turn ignition switch OFF and wait at least 2 seconds.

NOTE:

Pressing in the extended storage switch moves the mode from Shipping to Normal.

>> GO TO 2.

2. SHIPPING MODE CANCEL CHECK

1. Turn ignition switch ON.
2. Check that extended storage warning message is not displayed in combination meter or display.

>> WORK END

A
B
C
D
E
F
G
H
I
J
K
L

BCS

N
O
P

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BCM]

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000012591388

Refer to [BCS-8, "BODY CONTROL SYSTEM : System Description"](#).

DTC Logic

INFOID:0000000012591389

DTC DETECTION LOGIC

NOTE:

U1000 can be set if a module harness was disconnected and reconnected, perhaps during a repair. Confirm that there are actual CAN diagnostic symptoms and a present DTC by performing the Self Diagnostic Result procedure.

CONSULT Display	DTC Detection Condition	Possible cause
CAN COMM CIRCUIT [U1000]	When any listed module cannot communicate with CAN communication signal continuously for 2 seconds or more with ignition switch ON.	In CAN communication system, any item (or items) of the following listed below is malfunctioning: <ul style="list-style-type: none">• Transmission.• Receiving (ECM).• Receiving (VDC/TCS/ABS).• Receiving (METER/M&A).• Receiving (TCM).• Receiving (IPDM E/R).

Diagnosis Procedure

INFOID:0000000012591390

1. PERFORM SELF DIAGNOSTIC RESULT

1. Turn ignition switch ON and wait for 2 second or more.
2. Perform "Self Diagnostic Result" of "BCM" using CONSULT.

Is "CAN COMM CIRCUIT" displayed?

- YES >> Perform CAN Diagnosis as described in DIAGNOSIS section of CONSULT Operation Manual.
NO >> Refer to [GI-44, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

[BCM]

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

DTC Logic

INFOID:0000000012591391

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible Cause
CAN COMM CIRCUIT [U1010]	BCM detected internal CAN communication circuit malfunction.	BCM.

Diagnosis Procedure

INFOID:0000000012591392

1. REPLACE BCM

When DTC U1010 is detected, replace BCM.

>> Replace BCM. Refer to [BCS-81. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L

BCS

N
O
P

U0415 VEHICLE SPEED SIG

< DTC/CIRCUIT DIAGNOSIS >

[BCM]

U0415 VEHICLE SPEED SIG

Description

INFOID:0000000012591393

U0415 is displayed if any unusual condition is present in the reception status of the vehicle speed signal from the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000012591394

DTC DETECTION LOGIC

NOTE:

- If DTC U0415 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-68, "DTC Logic"](#).
- If DTC U0415 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-69, "DTC Logic"](#).

CONSULT Display	DTC Detection Condition	Possible Cause
VEHICLE SPEED SIG [U0415]	When the vehicle speed signal received from the ABS actuator and electric unit (control unit) remains abnormal for 2 seconds or more.	<ul style="list-style-type: none">• ABS system.• Combination meter system.• CAN bus harness.

DTC CONFIRMATION PROCEDURE

1. DTC CONFIRMATION

1. Erase the DTC.
2. Turn ignition switch OFF.
3. Perform "Self Diagnostic Result" of "BCM" using CONSULT, after the ignition switch has been turned ON for 2 seconds or more.

Is any DTC detected?

- YES >> Refer to [BCS-52, "DTC Index"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000012591395

1. ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "ABS" using CONSULT. Refer to [BRC-209, "CONSULT Function"](#).

Is any DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [BRC-224, "DTC Index"](#).
NO >> GO TO 2.

2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check ABS actuator and electric unit (control unit) power and ground. Refer to [BRC-338, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness or connectors.

3. COMBINATION METER SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "METER M&A" using CONSULT. Refer to [MWI-18, "CONSULT Function \(METER/M&A\)"](#).

Is any DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [MWI-29, "DTC Index"](#).
NO >> Refer to [GI-44, "Intermittent Incident"](#).

B2562 LOW VOLTAGE

[BCM]

< DTC/CIRCUIT DIAGNOSIS >

B2562 LOW VOLTAGE

DTC Logic

INFOID:000000012591396

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible cause
LOW VOLTAGE [B2562]	When the power supply voltage to BCM remains less than 8.8V for 120 seconds or more.	<ul style="list-style-type: none">• Harness or connector (power supply circuit).• Vehicle battery.

DTC CONFIRMATION PROCEDURE

1. DTC CONFIRMATION

1. Erase DTC.
2. Turn ignition switch OFF.
3. Perform the "Self Diagnostic Result" of "BCM" using CONSULT, after the ignition switch has been turned ON for 120 seconds or more.

Is any DTC detected?

- YES >> Refer to [BCS-71, "Diagnosis Procedure"](#).
- NO >> Inspection End.

Diagnosis Procedure

INFOID:000000012591397

1. CHECK BATTERY VOLTAGE

Check battery voltage.

Is battery voltage less than 8.8V?

- YES >> Charge battery and retest. Refer to [CHG-17, "Work Flow \(With EXP-800 NI or GR8-1200 NI\)"](#) or [CHG-20, "Work Flow \(Without EXP-800 NI or GR8-1200 NI\)"](#).
- NO >> GO TO 2.

2. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check BCM power supply and ground circuit. Refer to [BCS-74, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace harness or connectors.

3. BCM SELF DIAGNOSTIC RESULT

Perform "Self Diagnostic Result" of "BCM" using CONSULT. Refer to [BCS-26, "BCM : CONSULT Function \(BCM - BCM\)"](#).

Is DTC B2562 CRNT?

- YES >> Replace BCM. Refer to [BCS-81, "Removal and Installation"](#).
- NO >> Refer to [GI-44, "Intermittent Incident"](#).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

B259A ROOM LAMP FUSE

[BCM]

< DTC/CIRCUIT DIAGNOSIS >

B259A ROOM LAMP FUSE

DTC Logic

INFOID:000000012591398

DTC DETECTION LOGIC

CONSULT Display	DTC Detection Condition	Possible cause
ROOM LAMP FUSE [B259A]	When BCM detects that power supply voltage is supplied to fusible link battery power, but not to BCM battery fuse for 2 minutes when ignition switch is ON.	Harness or connector (power supply circuit).

DTC CONFIRMATION PROCEDURE

1. DTC CONFIRMATION

1. Erase DTC.
2. Turn ignition switch OFF.
3. Perform "Self Diagnostic Result" of "BCM" using CONSULT, after the ignition switch has been turned ON for 2 minutes or more.

Is any DTC detected?

- YES >> Refer to [BCS-72, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000012591399

Regarding Wiring Diagram information, refer to [BCS-55, "Wiring Diagram"](#).

1. CHECK FUSE

Check that the following fuse is not blown.

Terminal No.	Signal name	Fuse No.
131	BCM battery fuse	1 (10A)

Is the fuse or fusible link blown?

- YES >> Replace the blown fuse after repairing the affected circuit.
NO >> GO TO 2.

2. CHECK BAT BCM FUSE CIRCUIT

1. Disconnect BCM connector M21.
2. Check voltage between BCM connector M21 terminal 131 and ground.

BCM		Ground	Voltage (Approx.)
Connector	Terminal		
M21	131	—	Battery voltage

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-81, "Removal and Installation"](#).
NO >> Repair or replace harness or connectors. GO TO 3.

3. CHECK BATTERY SAVER OUTPUT CIRCUIT FOR SHORT TO GROUND

1. Turn ignition OFF.
2. Check continuity between BCM connector M21 terminal 129 and ground.

B259A ROOM LAMP FUSE

< DTC/CIRCUIT DIAGNOSIS >

[BCM]

BCM		Ground	Continuity
Connector	Terminal		
M21	129	—	No

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-81. "Removal and Installation"](#).

NO >> Repair or replace harness or connectors.

A
B
C
D
E
F
G
H
I
J
K
L

BCS

N
O
P

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BCM]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000012591400

Regarding Wiring Diagram information, refer to [BCS-55. "Wiring Diagram"](#).

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Terminal No.	Signal name	Fuse and fusible link No.
139	Fusible link battery power	I (40A)
131	BCM battery fuse	1 (10A)

Is the fuse or fusible link blown?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect BCM connector M21.

2. Check voltage between BCM connector M21 terminals 131, 139 and ground.

BCM		Ground	Voltage (Approx.)
Connector	Terminal		
M21	131	—	Battery voltage
	139		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connectors.

3. CHECK GROUND CIRCUIT

Check continuity between BCM connector M21 terminals 134, 143 and ground.

BCM		Ground	Continuity
Connector	Terminal		
M21	134	—	Yes
	143		

Is the inspection result normal?

YES >> Inspection End.

NO >> Repair or replace harness or connectors.

COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BCM]

COMBINATION SWITCH INPUT CIRCUIT

Diagnosis Procedure

INFOID:000000012591401

Regarding Wiring Diagram information, refer to [BCS-55, "Wiring Diagram"](#).

1. CHECK INPUT 1 - 5 SYSTEM CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect BCM connector M18 and combination switch connector.
3. Check continuity between BCM connector M18 and combination switch connector.

Signal	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
INPUT 1	M18	79	M28	11	Yes
INPUT 2		78		9	
INPUT 3		77		7	
INPUT 4		76		10	
INPUT 5		75		13	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness or connectors.

2. CHECK INPUT 1 - 5 SYSTEM CIRCUIT FOR SHORT

Check continuity between BCM connector M18 and ground.

Signal	BCM		Ground	Continuity
	Connector	Terminal		
INPUT 1	M18	79	Ground	No
INPUT 2		78		
INPUT 3		77		
INPUT 4		76		
INPUT 5		75		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connectors.

3. CHECK BCM OUTPUT VOLTAGE

1. Connect BCM connector M18 and combination switch connector.
2. Turn ignition switch ON.
3. Check voltage between BCM connector M18 and ground.

Signal	BCM		Ground	Voltage
	Connector	Terminal		
INPUT 1	M18	79	—	Refer to BCS-31, "Reference Value" .
INPUT 2		78		
INPUT 3		77		
INPUT 4		76		
INPUT 5		75		

COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BCM]

Is the inspection result normal?

YES >> Replace the combination switch.

NO >> Replace BCM. Refer to [BCS-81. "Removal and Installation"](#).

COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BCM]

COMBINATION SWITCH OUTPUT CIRCUIT

Diagnosis Procedure

INFOID:000000012591402

Regarding Wiring Diagram information, refer to [BCS-55, "Wiring Diagram"](#).

1. CHECK OUTPUT 1 - 5 SYSTEM CIRCUIT FOR OPEN

1. Turn ignition switch OFF.
2. Disconnect BCM connector M17 and combination switch connector.
3. Check continuity between BCM connector M17 and combination switch connector.

Signal	BCM		Combination switch		Continuity
	Connector	Terminal	Connector	Terminal	
OUTPUT 1	M17	14	M28	12	Yes
OUTPUT 2		13		14	
OUTPUT 3		12		5	
OUTPUT 4		11		2	
OUTPUT 5		10		8	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace harness or connectors.

2. CHECK OUTPUT 1 - 5 SYSTEM CIRCUIT FOR SHORT

Check continuity between BCM connector M17 and ground.

Signal	BCM		Ground	Continuity
	Connector	Terminal		
OUTPUT 1	M17	14	Ground	No
OUTPUT 2		13		
OUTPUT 3		12		
OUTPUT 4		11		
OUTPUT 5		10		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness or connectors.

3. CHECK BCM INPUT VOLTAGE

1. Connect BCM connector M17 and combination switch connector.
2. Turn ignition switch ON.
3. Check voltage between BCM connector M17 and ground.

Signal	BCM		Ground	Voltage
	Connector	Terminal		
OUTPUT 1	M17	14	—	Refer to BCS-31, "Reference Value" .
OUTPUT 2		13		
OUTPUT 3		12		
OUTPUT 4		11		
OUTPUT 5		10		

COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BCM]

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-81, "Removal and Installation"](#).
- NO >> Replace the combination switch.

COMBINATION SWITCH SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[BCM]

SYMPTOM DIAGNOSIS

COMBINATION SWITCH SYSTEM SYMPTOMS

Symptom Table

INFOID:0000000012591403

1. Perform the data monitor of CONSULT to check for any malfunctioning item.
2. Check the malfunction combinations.

Malfunction item: x

Malfunction combination	Data monitor item													
	FR WIPER HI	FR WIPER LOW	FR WASHER SW	FR WIPER INT/AUTO	INT VOLUME	TURN SIGNAL R	TURN SIGNAL L	TAIL LAMP SW	HI BEAM SW	HEAD LAMP SW 1	HEAD LAMP SW 2	PASSING SW	AUTO LIGHT SW	FR FOG SW
A		x	x			x	x							
B	x			x						x		x		
C					x				x		x			
D					x			x					x	
E					x									x
F	x				x									
G			x		x									
H		x		x									x	
I							x			x	x			x
J						x		x	x	x				
K	All Items													
L	If only one item is detected or the item is not applicable to the combinations A to K													

3. Identify the malfunctioning part from the agreed combination and repair or replace the part.

Malfunction combination	Malfunctioning part	Repair or replace
A	Combination switch INPUT 1 circuit	Inspect the combination switch input circuit applicable to the malfunctioning part. Refer to BCS-75, "Diagnosis Procedure" .
B	Combination switch INPUT 2 circuit	
C	Combination switch INPUT 3 circuit	
D	Combination switch INPUT 4 circuit	
E	Combination switch INPUT 5 circuit	
F	Combination switch OUTPUT 1 circuit	Inspect the combination switch output circuit applicable to the malfunctioning part. Refer to BCS-77, "Diagnosis Procedure" .
G	Combination switch OUTPUT 2 circuit	
H	Combination switch OUTPUT 3 circuit	
I	Combination switch OUTPUT 4 circuit	
J	Combination switch OUTPUT 5 circuit	
K	BCM	Replace BCM. Refer to BCS-81, "Removal and Installation" .
L	Combination switch	Replace the combination switch.

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[BCM]

NORMAL OPERATING CONDITION

Description

INFOID:0000000012591404

SHIPPING MODE

- Shipping mode inhibits battery power consumption during transportation or storage of the vehicle. Vehicle is set to shipping mode before being shipped from the factory.
- When ignition switch is OFF, BCM operates shipping mode.
- BCM control function is limited in shipping mode. Remote keyless entry function does not operate in shipping mode.
- For shipping mode cancel operation, refer to [BCS-67. "Work Procedure"](#).

NOTE:

Do not cancel shipping mode during storage of the vehicle. Shipping mode should not be canceled until just prior to customer delivery.

REMOVAL AND INSTALLATION

BCM (BODY CONTROL MODULE)

Removal and Installation

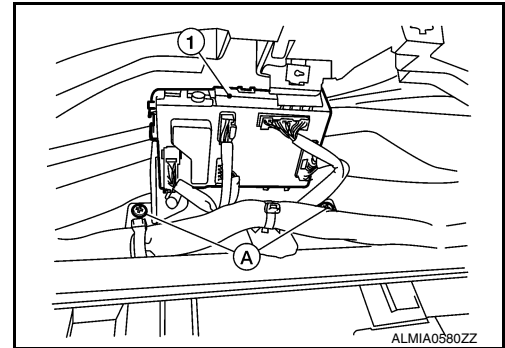
INFOID:0000000012591405

REMOVAL

CAUTION:

Before replacing BCM, perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-64, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description"](#).

1. Disconnect the negative battery terminal. Refer to [PG-78, "Removal and Installation"](#).
2. Remove the combination meter. Refer to [MWI-83, "Removal and Installation"](#).
3. Remove the BCM screws (A) and pull out the BCM (1).
4. Disconnect the harness connectors from the BCM (1) and remove.



INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- When replacing BCM, perform "WRITE CONFIGURATION" Refer to [BCS-65, "CONFIGURATION \(BCM\) : Description"](#).
- When replacing BCM, perform the system initialization (NATS). Refer to [BCS-64, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description"](#).
- When replacing BCM, if new BCM does not come with keyfobs attached, all existing keyfobs must be re-registered. Refer to the CONSULT immobilizer mode and follow the on-screen instructions.
- For initialization and registration of Intelligent Keys, refer to CONSULT Immobilizer mode and follow the on-screen instructions.

A
B
C
D
E
F
G
H
I
J
K
L

BCS