

SECTION **SCS**

SUSPENSION CONTROL SYSTEM

A
B
C
D

SCS

CONTENTS

<p>BASIC INSPECTION 3</p> <p>DIAGNOSIS AND REPAIR WORKFLOW 3</p> <p style="padding-left: 20px;">Work Flow3</p> <p>INSPECTION AND ADJUSTMENT 5</p> <p>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT5</p> <p style="padding-left: 20px;">ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement5</p> <p>SYSTEM DESCRIPTION 6</p> <p>SUSPENSION CONTROL SYSTEM 6</p> <p style="padding-left: 20px;">System Diagram6</p> <p style="padding-left: 20px;">System Description6</p> <p style="padding-left: 20px;">Component Parts Location7</p> <p style="padding-left: 20px;">Component Description7</p> <p>DIAGNOSIS SYSTEM (SUSPENSION CONTROL UNIT) 8</p> <p style="padding-left: 20px;">CONSULT Function8</p> <p>DTC/CIRCUIT DIAGNOSIS10</p> <p>C1801 VEHICLE HEIGHT SENSOR10</p> <p style="padding-left: 20px;">Description 10</p> <p style="padding-left: 20px;">DTC Logic 10</p> <p style="padding-left: 20px;">Diagnosis Procedure 10</p> <p>C1802 COMPRESSOR RELAY11</p> <p style="padding-left: 20px;">Description 11</p> <p style="padding-left: 20px;">DTC Logic 11</p> <p style="padding-left: 20px;">Diagnosis Procedure 11</p> <p>C1803 EXHAUST SOLENOID12</p> <p style="padding-left: 20px;">Description 12</p> <p style="padding-left: 20px;">DTC Logic 12</p> <p style="padding-left: 20px;">Diagnosis Procedure 12</p> <p>C1804 HEIGHT ADJUSTING MALFUNCTION (COMPRESSOR)13</p>	<p style="padding-left: 20px;">Description13</p> <p style="padding-left: 20px;">DTC Logic13</p> <p style="padding-left: 20px;">Diagnosis Procedure13</p> <p>C1805 HEIGHT ADJUSTING MALFUNCTION (EXH SOLENOID)14</p> <p style="padding-left: 20px;">Description14</p> <p style="padding-left: 20px;">DTC Logic14</p> <p style="padding-left: 20px;">Diagnosis Procedure14</p> <p>C1806 VEHICLE HEIGHT SENSOR LOCKING MALFUNCTION15</p> <p style="padding-left: 20px;">Description15</p> <p style="padding-left: 20px;">DTC Logic15</p> <p style="padding-left: 20px;">Diagnosis Procedure15</p> <p>C1807 SENSOR 5V MALFUNCTION16</p> <p style="padding-left: 20px;">Description16</p> <p style="padding-left: 20px;">DTC Logic16</p> <p style="padding-left: 20px;">Diagnosis Procedure16</p> <p>C1808 INTEGRAL TIME MALFUNCTION SUPPLYING AIR17</p> <p style="padding-left: 20px;">Description17</p> <p style="padding-left: 20px;">DTC Logic17</p> <p style="padding-left: 20px;">Diagnosis Procedure17</p> <p>POWER SUPPLY AND GROUND CIRCUIT18</p> <p>SUSPENSION CONTROL UNIT18</p> <p style="padding-left: 20px;">SUSPENSION CONTROL UNIT : Diagnosis Procedure 18</p> <p>SUSPENSION AIR COMPRESSOR18</p> <p style="padding-left: 20px;">SUSPENSION AIR COMPRESSOR : Diagnosis Procedure 18</p> <p>HEIGHT SENSOR19</p> <p style="padding-left: 20px;">HEIGHT SENSOR : Diagnosis Procedure19</p> <p>COMPRESSOR MOTOR RELAY21</p> <p style="padding-left: 20px;">Description21</p> <p style="padding-left: 20px;">Component Function Check21</p>
--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

F
G
H
I
J
K
L
M
N
O
P

Diagnosis Procedure	21	SYMPTOM DIAGNOSIS	37
HEIGHT SENSOR SIGNAL CIRCUIT	24	SUSPENSION CONTROL SYSTEM	37
Description	24	Symptom Table	37
Component Function Check	24	SUSPENSION CONTROL SYSTEM INOPER-	
Diagnosis Procedure	24	ACTIVE	38
EXHAUST VALVE SOLENOID CIRCUIT	25	Description	38
Description	25	Diagnosis Procedure	38
Component Function Check	25	SUSPENSION CONTROL SYSTEM DOES	
Diagnosis Procedure	25	NOT RAISE	39
CK SUSP WARNING INDICATOR CONTROL		Description	39
CIRCUIT	27	Diagnosis Procedure	39
Description	27	SUSPENSION CONTROL SYSTEM DOES	
Component Function Check	27	NOT LOWER	40
Diagnosis Procedure	27	Description	40
ECU DIAGNOSIS INFORMATION	29	Diagnosis Procedure	40
SUSPENSION CONTROL UNIT	29	PRECAUTION	41
Reference Value	29	PRECAUTIONS	41
DTC Index	30	Precaution for Supplemental Restraint System	
WIRING DIAGRAM	31	(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	
SUSPENSION CONTROL SYSTEM	31	SIONER"	41
Wiring Diagram	31	Precaution for Rear Suspension	41
		Precaution Necessary for Steering Wheel Rota-	
		tion After Battery Disconnect	

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000009824310

OVERALL SEQUENCE

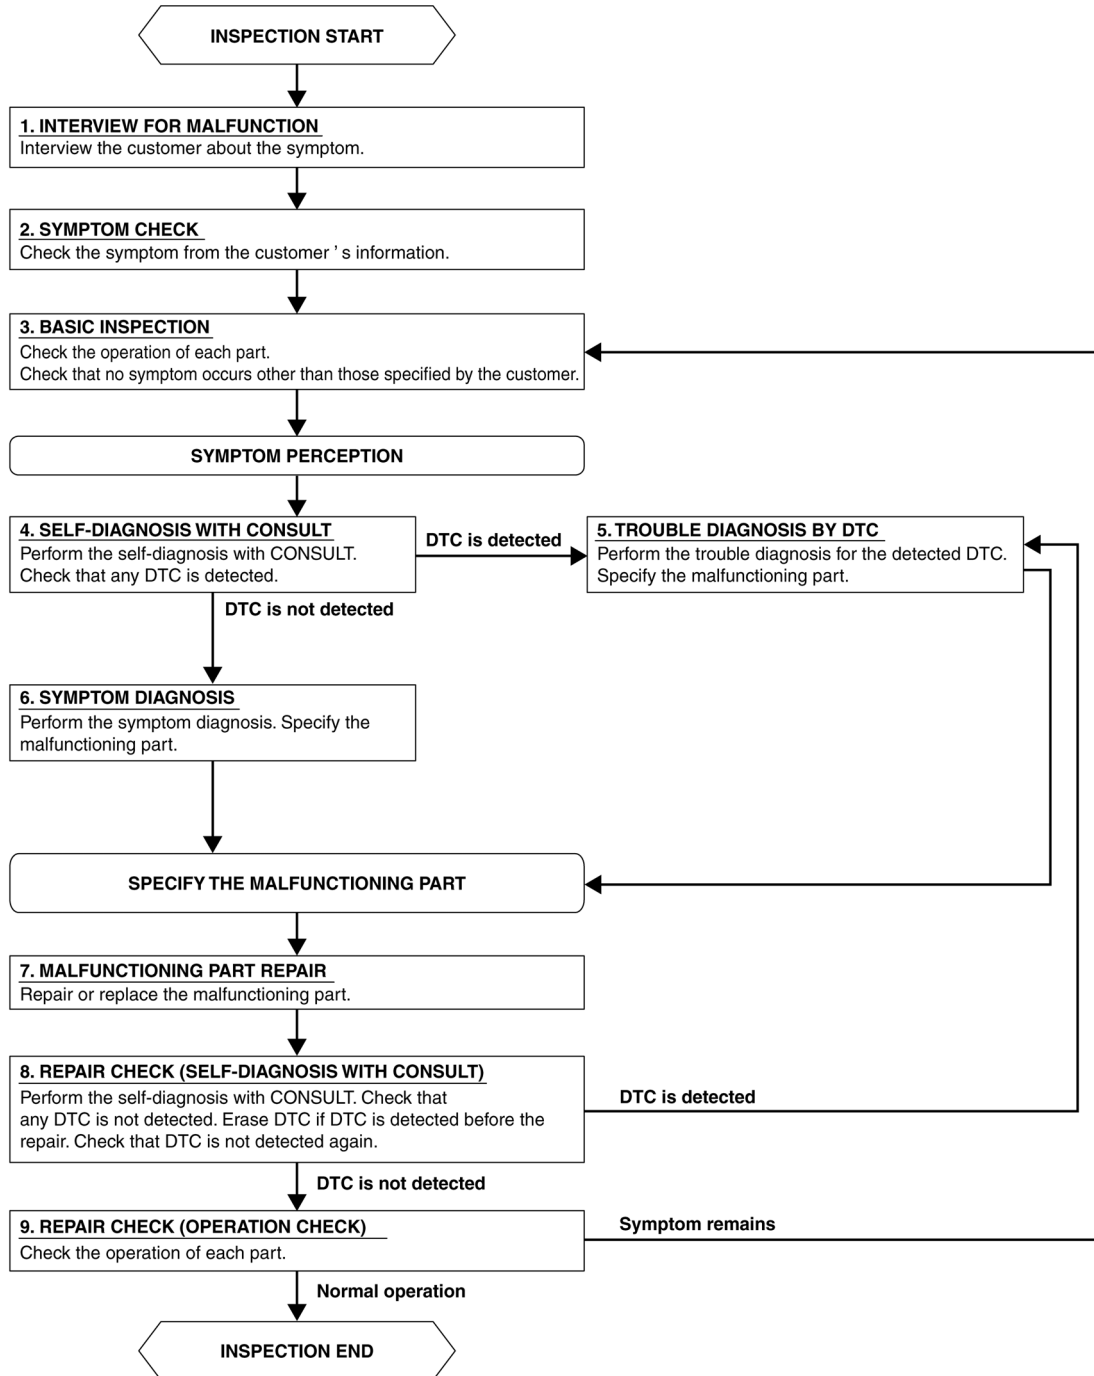

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SCS

DETAILED FLOW

Revision: August 2013

SCS-3

2014 Armada NAM

AWEIA0214GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

1. INTERVIEW FOR MALFUNCTION

Interview the customer about the symptom.

>> GO TO 2.

2. SYMPTOM CHECK

Verify the symptom from the customer's information.

>> GO TO 3.

3. BASIC INSPECTION

Check the operation of each part. Check that no symptoms occur other than those specified by the customer.

>> GO TO 4.

4. SELF-DIAGNOSIS WITH CONSULT

Perform the self diagnosis with CONSULT. Check that any DTC is detected.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 6.

5. TROUBLE DIAGNOSIS BY DTC

Perform the trouble diagnosis for the detected DTC. Specify the malfunctioning part.

>> GO TO 7.

6. SYMPTOM DIAGNOSIS

Perform the symptom diagnosis. Specify the malfunctioning part.

>> GO TO 7.

7. MALFUNCTIONING PART REPAIR

Repair or replace the malfunctioning part.

>> GO TO 8.

8. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT)

Perform the self diagnosis with CONSULT. Verified that no DTCs are detected. Erase all DTCs detected prior to the repair. Verify that DTC is not detected again.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 9.

9. REPAIR CHECK (OPERATION CHECK)

Check the operation of each part.

Does it operate normally?

YES >> Inspection End.

NO >> GO TO 3.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000009824311

INITIALIZATION PROCEDURE

NOTE:

If control unit has been replaced, proceed to step 3.

1. CLEAR INITIALIZATION FLAG AND VALUE

1. Using CONSULT select "CLEAR HEIGHT INI" in "WORK SUPPORT".
2. Select "Start" to clear initialization flag and value.
3. CK SUSP. warning lamp in combination meter should illuminate.

>> GO TO 2

2. RELEASE AIR PRESSURE FROM REAR LOAD LEVELING SUSPENSION

1. Select "EXHAUST SOLENOID" in "ACTIVE TEST".
2. Select "On" to release the air pressure from the rear load leveling air suspension system.

>> GO TO 3

3. MOVE VEHICLE

Roll vehicle forward and backward.

>> GO TO 4

4. SET INITIALIZATION CONDITION

1. Select "ADJUST HEIGHT INI" in "WORK SUPPORT".
2. Select "Start" to set initialization condition.
3. Confirm that CK SUSP. warning lamp in combination meter is OFF.

>> Initialization complete.

A

B

C

D

SCS

F

G

H

I

J

K

L

M

N

O

P


SUSPENSION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

SUSPENSION CONTROL SYSTEM

System Diagram

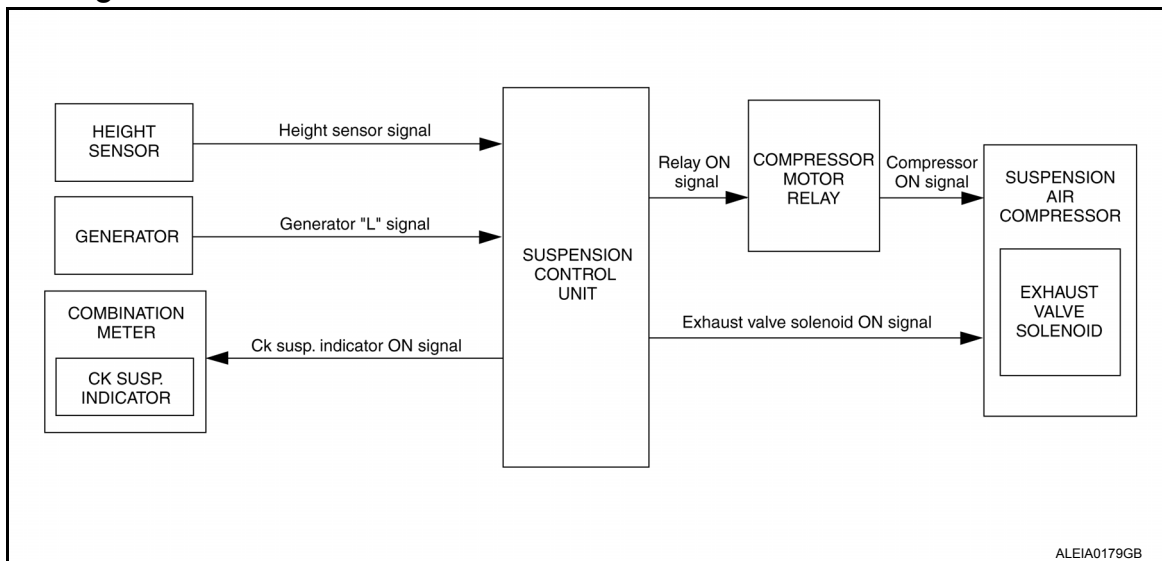

System Description

INFOID:000000009824313

SUSPENSION CONTROL SYSTEM

The suspension control system consists of the following components

- Suspension control unit
- Compressor motor relay
- Suspension air compressor
- Exhaust valve solenoid (built into suspension air compressor)
- Height sensor

The suspension control unit monitors vehicle ride height as indicated by the height sensor. The suspension control unit actuates the compressor motor relay to raise the vehicle ride height. The suspension control unit actuates the exhaust valve solenoid to lower the vehicle ride height.

CK SUSP. INDICATOR LAMP


The CK SUSP. indicator lamp ground is controlled by the suspension control unit. The indicator lamp will come on for 2 seconds when the ignition switch is turned ON. If the indicator lamp does not turn OFF there is a fault detected. Refer to [SCS-8, "CONSULT Function"](#).

SUSPENSION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000009824314

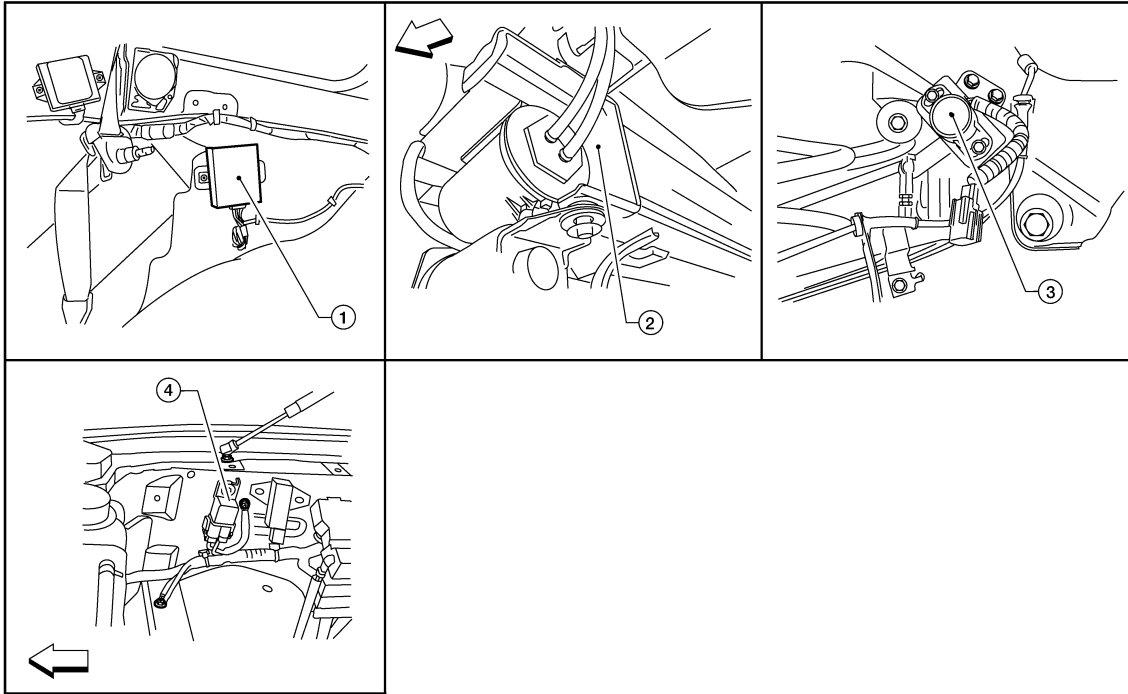

A

B

C

D

SCS

F

G

H

ALEIA0044ZZ

↩ :Front

1. Suspension control unit B3 (view with upper and lower luggage side finishers LH removed)
2. Suspension air compressor C9 (view under vehicle behind LH rear suspension)
3. Height sensor C8 (view under vehicle at LH rear suspension)
4. Compressor motor relay E130, E131 (view with battery removed)

Component Description

INFOID:000000009824315

Part name	Description
Suspension control unit	<ul style="list-style-type: none"> • Monitors height sensor input to determine vehicle height. • Actuates the compressor motor relay or exhaust valve solenoid to raise or lower the vehicle accordingly. • Sends a ground signal to the combination meter to activate the CK SUSP. indicator lamp.
Suspension air compressor (with built in exhaust valve solenoid)	<ul style="list-style-type: none"> • When the compressor is actuated, it pumps air into the system to raise the rear suspension. • When the exhaust valve solenoid is actuated, it vents air from the system to lower the rear suspension.
Height sensor	Provides vehicle height input to the suspension control unit.

L

M

N

O

P

DIAGNOSIS SYSTEM (SUSPENSION CONTROL UNIT)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (SUSPENSION CONTROL UNIT)

CONSULT Function

INFOID:000000009824316

CONSULT can display each diagnostic item using the diagnostic test modes shown following.

AIR LEVELIZER diagnosis mode	Description
ECU IDENTIFICATION	The part number of suspension control unit can be checked.
SELF-DIAGNOSTIC RESULT	Displays suspension control unit self-diagnosis results.
DATA MONITOR	Displays suspension control unit input/output data in real time.
ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
WORK SUPPORT	Supports inspection and adjustment. Commands are transmitted to the suspension control unit for setting the status suitable for required operation, input/output signals are received from the suspension control unit and received data is displayed.

WORK SUPPORT

Display Item List

Item	Description	Condition
STANDARD HEIGHT LEVEL	Resets the vehicle height to the initialization flag setting stored in the suspension control unit.	Vehicle unladen, set in a horizontal position and not moving. NOTE: Do not take your eyes off the vehicle while CONSULT is processing.
ADJUST HEIGHT INI	Sets the height initialization flag in the suspension control unit when the control unit has been replaced or when the initialization flag has been cleared using the "CLEAR HEIGHT INI" procedure.	Vehicle unladen, move vehicle forward and backward approx. 5 m (16.4 ft) and rock vehicle side to side. NOTE: Do not move vehicle while CONSULT is processing.
CLEAR HEIGHT INI	Clears the initialization flag in the suspension control unit.	Vehicle unladen.

DATA MONITOR

Display Item List

Display item [unit]	ALL SIGNALS	SELECTION FROM MENU
HEIGT SEN [V]	X	X
HEIGT CALC [mm]	X	X
SEN FIX TIME [HR]	X	X
HEIGT INI VAL [V]	X	X
COMPRESSOR [ON/OFF]	X	X
EXH SOLENOID [ON/OFF]	X	X
ACG L [ON/OFF]	X	X

ACTIVE TEST

CAUTION:

Do not perform active test while driving.

Display Item List

Test Item	Description
COMPRESSOR	ON/OFF

DIAGNOSIS SYSTEM (SUSPENSION CONTROL UNIT)

< SYSTEM DESCRIPTION >

EXHAUST SOLENOID	ON/OFF
WARNING LAMP	ON/OFF

A

CAUTION:

The "COMPRESSOR active test will remain ON until it is turned off using CONSULT. Allowing the compressor to run for an extended period of time may cause damage to the suspension control system components due to excessive pressure.

B

NOTE:

- "TEST IS STOPPED" is displayed approximately 10 seconds after operation starts for all active test items except "COMPRESSOR".
- After "TEST IS STOPPED" is displayed, to perform test again, repeat step 6.

C

D

SCS

F

G

H

I

J

K

L

M

N

O

P

C1801 VEHICLE HEIGHT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

C1801 VEHICLE HEIGHT SENSOR

Description

INFOID:000000009824317

The vehicle height sensor operates on a 5 volt reference signal from the suspension control unit. The suspension control unit also provides ground to the height sensor. Depending on vehicle height, the height sensor signal should have between 0.2V and 4.8V.

DTC Logic

INFOID:000000009824318

DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when ...	Probable malfunction location
C1801	VEHICLE HEIGHT SENSOR	Vehicle height sensor voltage is less than 0.2V or greater than 4.8V for more than 60 seconds.	<ul style="list-style-type: none">Height sensor power/ground supply. Refer to SCS-19, "HEIGHT SENSOR : Diagnosis Procedure".Height sensor signal circuit. Refer to SCS-24, "Component Function Check".

Diagnosis Procedure

INFOID:000000009824319

1. CHECK HEIGHT SENSOR OPERATION

ⓅCONSULT

- Turn ignition switch ON
- Select "HEIGT SEN" of AIR LEVELIZER data monitor test item.

HEIGHT SEN : 0.2V - 4.8V

Is the HEIGHT SEN voltage within the given range?

- YES >> Height sensor is operating normally.
NO >> Refer to [SCS-24, "Diagnosis Procedure"](#).

C1802 COMPRESSOR RELAY

< DTC/CIRCUIT DIAGNOSIS >

C1802 COMPRESSOR RELAY

Description

INFOID:000000009824320

The compressor motor relay is controlled by the suspension control unit. The suspension control unit supplies voltage to the coil side of the relay to activate it. The compressor motor relay, when activated, supplies power to the suspension air compressor.

DTC Logic

INFOID:000000009824321

DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when ...	Probable malfunction location
C1802	COMPRESSOR RELAY	<ul style="list-style-type: none">Driving transistor for the compressor relay is OFF and monitor voltage continues at a high level for more than 10 seconds.Driving transistor for the compressor relay is ON and monitor voltage continues at a low level for more than 5 seconds.	Compressor motor relay. Refer to SCS-21, "Component Function Check" .

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SCS

Diagnosis Procedure

INFOID:000000009824322

1. CHECK COMPRESSOR MOTOR RELAY OPERATION

CAUTION:

The "COMPRESSOR" active test will remain ON until it is turned off using CONSULT. Allowing the compressor to run for an extended period of time may cause damage to the air levelizer system components due to excessive air pressure.

CONSULT

- Turn ignition ON.
- Select "COMPRESSOR" of AIR LEVELIZER active test items.
- While operating test item, check that the suspension air compressor turns ON.

ON : Compressor turns ON

OFF : Compressor turns OFF

Does the suspension air compressor operate properly?

- YES >> Compressor motor relay and suspension air compressor are operating normally.
NO >> Refer to [SCS-21, "Diagnosis Procedure"](#).

C1803 EXHAUST SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

C1803 EXHAUST SOLENOID

Description

INFOID:000000009824323

The exhaust valve solenoid controls the vent function of the suspension control system. The exhaust valve solenoid is built into the suspension air compressor. The suspension control unit supplies voltage to the exhaust valve solenoid to activate it.

DTC Logic

INFOID:000000009824324

DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when ...	Probable malfunction location
C1803	EXHAUST SOLENOID	<ul style="list-style-type: none">Driving transistor for the exhaust valve solenoid is OFF and monitor voltage continues at a high level for more than 10 seconds.Driving transistor for the exhaust valve solenoid is ON and monitor voltage continues at a low level for more than 5 seconds.	Open or short circuit in the exhaust valve solenoid control circuit. Refer to SCS-25, "Component Function Check" .

Diagnosis Procedure

INFOID:000000009824325

1. CHECK EXHAUST SOLENOID OPERATION

CAUTION:

While operating this active test, the suspension control system will vent air pressure and the vehicle ride height will lower. Ensure the area around the vehicle is free from obstructions before beginning test.

CONSULT

1. Ensure the suspension control system has air pressure and is not drooping in the rear.
2. Select "EXHAUST SOLENOID" of AIR LEVELIZER active test items.
3. While operating test item, check that the exhaust valve solenoid opens to vent air from the system. The vehicle should lower when the exhaust valve solenoid is activated.

ON : Air vents and vehicle ride height lowers

OFF : No air vents and vehicle ride height remains constant

Does the system vent properly?

- YES >> Exhaust valve solenoid is operating normally.
NO >> Refer to [SCS-25, "Diagnosis Procedure"](#).

C1804 HEIGHT ADJUSTING MALFUNCTION (COMPRESSOR)

< DTC/CIRCUIT DIAGNOSIS >

C1804 HEIGHT ADJUSTING MALFUNCTION (COMPRESSOR)

Description

INFOID:000000009824326

The compressor motor relay is controlled by the suspension control unit. The suspension control unit supplies voltage to the coil side of the relay to activate it. The compressor motor relay, when activated, supplies power to the suspension air compressor.

DTC Logic

INFOID:000000009824327

DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when ...	Probable malfunction location
C1804	VEHICLE HEIGHT ADJUSTING MALFUNCTION (COMPRESSOR)	Continuous compressor relay ON time is more than 120 seconds.	Compressor motor relay. Refer to SCS-21 , " Component Function Check ".

A
B
C
D
F
G
H
I
J
K
L
M
N
O
P

SCS

Diagnosis Procedure

INFOID:000000009824328

1. CHECK COMPRESSOR MOTOR RELAY OPERATION

CAUTION:

The "COMPRESSOR" active test will remain ON until it is turned off using CONSULT. Allowing the compressor to run for an extended period of time may cause damage to the air levelizer system components due to excessive air pressure.

ⓂCONSULT

1. Turn ignition ON.
2. Select "COMPRESSOR" of AIR LEVELIZER active test items.
3. While operating test item, check that the suspension air compressor turns ON.

ON : Compressor turns ON

OFF : Compressor turns OFF

Does the suspension air compressor operate properly?

- YES >> Compressor motor relay and suspension air compressor are operating normally.
NO >> Refer to [SCS-21](#), "[Diagnosis Procedure](#)".

C1805 HEIGHT ADJUSTING MALFUNCTION (EXH SOLENOID)

< DTC/CIRCUIT DIAGNOSIS >

C1805 HEIGHT ADJUSTING MALFUNCTION (EXH SOLENOID)

Description

INFOID:000000009824329

The exhaust valve solenoid controls the vent function of the suspension control system. The exhaust valve solenoid is built into the suspension air compressor. The suspension control unit supplies voltage to the exhaust valve solenoid to activate it.

DTC Logic

INFOID:000000009824330

DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when ...	Probable malfunction location
C1805	VEHICLE HEIGHT ADJUSTING MALFUNCTION (EXHAUST SOLENOID)	Continuous exhaust valve solenoid ON time is more than 120 seconds.	Short to power in the exhaust valve solenoid control circuit. Refer to SCS-25. "Component Function Check" .

Diagnosis Procedure

INFOID:000000009824331

1. CHECK EXHAUST SOLENOID OPERATION

CAUTION:

While operating this active test, the suspension control system will vent air pressure and the vehicle ride height will lower. Ensure the area around the vehicle is free from obstructions before beginning test.

ⓅCONSULT

1. Ensure the suspension control system has air pressure and is not drooping in the rear.
2. Select "EXHAUST SOLENOID" of AIR LEVELIZER active test items.
3. While operating test item, check that the exhaust valve solenoid opens to vent air from the system. The vehicle should lower when the exhaust valve solenoid is activated.

ON : Air vents and vehicle ride height lowers

OFF : No air vents and vehicle ride height remains constant

Does the system vent properly?

- YES >> Exhaust valve solenoid is operating normally.
NO >> Refer to [SCS-25. "Diagnosis Procedure"](#).

C1806 VEHICLE HEIGHT SENSOR LOCKING MALFUNCTION

< DTC/CIRCUIT DIAGNOSIS >

C1806 VEHICLE HEIGHT SENSOR LOCKING MALFUNCTION

Description

INFOID:000000009824332

The vehicle height sensor operates on a 5 volt reference signal from the suspension control unit. The suspension control unit also provides ground to the height sensor.

DTC Logic

INFOID:000000009824333

DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when ...	Probable malfunction location
C1806	VEHICLE HEIGHT SENSOR LOCKING MALFUNCTION	Output sensor voltage variation $\pm 0.02V$ is more than 100 seconds when vehicle height range is normal.	<ul style="list-style-type: none">Height sensor signal circuit. Refer to SCS-24, "Diagnosis Procedure".Charging system malfunction. Refer to CHG-13, "Inspection Procedure".

A
B
C
D
F
G
H
I
J
K
L
M
N
O
P

SCS

Diagnosis Procedure

INFOID:000000009824334

1. CHECK HEIGHT SENSOR OPERATION

CONSULT

- Turn ignition switch ON
- Select "HEIGHT SEN" of AIR LEVELIZER data monitor test item.

HEIGHT SEN : 0.2V - 4.8V with no more than $\pm 0.02V$ variation

Is the HEIGHT SEN voltage within the given range?

- YES >> Height sensor is operating normally.
NO >> Refer to [SCS-24, "Diagnosis Procedure"](#).

C1807 SENSOR 5V MALFUNCTION

< DTC/CIRCUIT DIAGNOSIS >

C1807 SENSOR 5V MALFUNCTION

Description

INFOID:000000009824335

The vehicle height sensor operates on a 5 volt reference signal from the suspension control unit. The suspension control unit also provides ground to the height sensor.

DTC Logic

INFOID:000000009824336

DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when ...	Probable malfunction location
C1807	SENSOR 5V MALFUNCTION	Sensor reference voltage is less than 0.8V or more than 6V for 20 seconds.	<ul style="list-style-type: none"> Height sensor power/ground supply. Refer to SCS-19, "HEIGHT SENSOR : Diagnosis Procedure". Charging system malfunction. Refer to CHG-13, "Inspection Procedure".

Diagnosis Procedure

INFOID:000000009824337

Regarding Wiring Diagram information, refer to [SCS-31, "Wiring Diagram"](#).


1. POWER SUPPLY CIRCUIT CHECK

1. Disconnect height sensor connector C8.
2. Turn the ignition switch ON.
3. Check voltage between the height sensor connector C8 terminal 1 and ground.

(+) Connector		Terminal	(-)	Voltage
C8	1			

Is 5V present?

- YES >> System is working normally.
 NO >> Check harness or connector for open or short. If OK, replace the suspension control unit. Refer to [RSU-24, "Removal and Installation"](#).

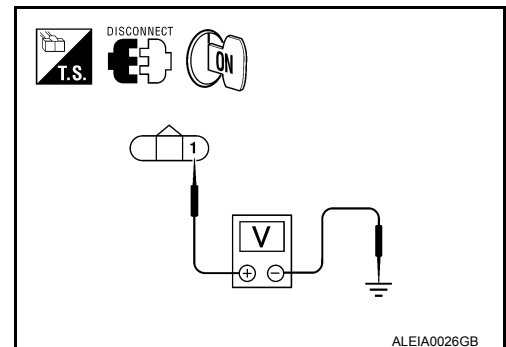

C1808 INTEGRAL TIME MALFUNCTION SUPPLYING AIR

< DTC/CIRCUIT DIAGNOSIS >

C1808 INTEGRAL TIME MALFUNCTION SUPPLYING AIR

Description

INFOID:000000009824338

The suspension air compressor is supplied power by the compressor motor relay. The suspension control unit supplies power to the compressor motor relay in order to activate the relay and subsequently activate the suspension air compressor.

DTC Logic

INFOID:000000009824339

DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when ...	Probable malfunction location
C1808	INTEGRAL TIME MALFUNCTION SUPPLYING AIR	A suspension air compressor ON request has been in effect for 180 seconds and the suspension air compressor has not activated during that time.	<ul style="list-style-type: none">Compressor motor relay. Refer to SCS-21. "Diagnosis Procedure".Suspension air compressor. Refer to SCS-18. "SUSPENSION AIR COMPRESSOR : Diagnosis Procedure".

A

B

C

D

SCS

F

Diagnosis Procedure

INFOID:000000009824340

1. CHECK COMPRESSOR MOTOR RELAY OPERATION

CAUTION:

The "COMPRESSOR" active test will remain ON until it is turned off using CONSULT. Allowing the compressor to run for an extended period of time may cause damage to the air levelizer system components due to excessive air pressure.

CONSULT

- Turn ignition ON.
- Select "COMPRESSOR" of AIR LEVELIZER active test items.
- While operating test item, check that the suspension air compressor turns ON.

ON : Compressor turns ON

OFF : Compressor turns OFF

Does the suspension air compressor operate properly?

- YES >> Compressor motor relay and suspension air compressor are operating normally.
NO >> Refer to [SCS-21. "Diagnosis Procedure"](#).

G

H

I

J

K

L

M

N

O

P

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

POWER SUPPLY AND GROUND CIRCUIT SUSPENSION CONTROL UNIT

SUSPENSION CONTROL UNIT : Diagnosis Procedure

INFOID:000000009824341

Regarding Wiring Diagram information, refer to [SCS-31, "Wiring Diagram"](#).

1. CHECK FUSES

Check that the following fuses of the suspension control unit are not are not blown.

Unit	Terminals	Signal name	Fuse No.
Suspension control unit	7	Battery power	29
	6	Ignition switch ON or START	12

Are the fuses OK?


YES >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

2. POWER SUPPLY CIRCUIT CHECK

1. Disconnect suspension control unit connector B3.
2. Check voltage between the suspension control unit connector B3 and ground.

(+) Connector		Terminal	(-)	OFF	ACC	ON
Connector	Terminal					
B3		7	Ground	Battery voltage	Battery voltage	Battery voltage
		6	Ground	0V	0V	Battery voltage

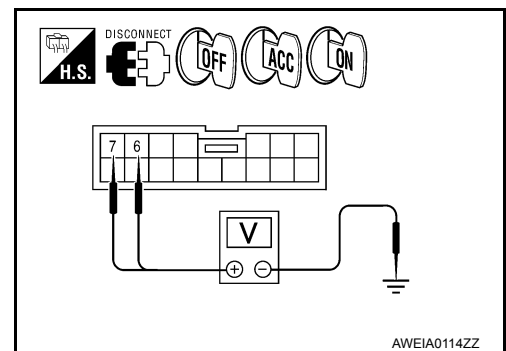

Are the voltage results as specified?

YES >> GO TO 3.

NO >> • Check connector housings for disconnected or loose terminals.
• Repair harness or connector.

3. GROUND CIRCUIT CHECK


1. Turn ignition switch OFF.
2. Check continuity between suspension control unit harness connector B3 and ground.

Connector	Terminal	—	Continuity
B3	16	Ground	Yes

Is continuity present?

YES >> Inspection End.

NO >> Repair harness or connector.

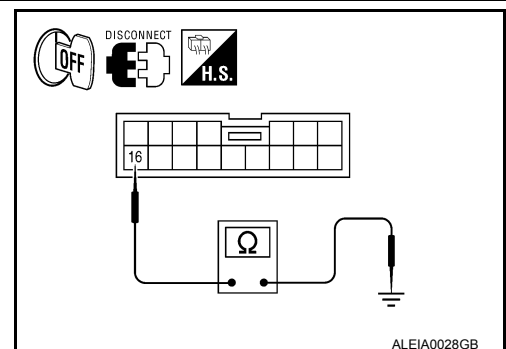

SUSPENSION AIR COMPRESSOR

SUSPENSION AIR COMPRESSOR : Diagnosis Procedure

INFOID:000000009824342

Regarding Wiring Diagram information, refer to [SCS-31, "Wiring Diagram"](#).


POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

1. CHECK COMPRESSOR MOTOR RELAY OPERATION

CONSULT

1. Disconnect the suspension air compressor connector C9.
2. Turn ignition switch ON.
3. Select "COMPRESSOR" under AIR LEVELIZER active test items.
4. While operating the test item, check voltage at the suspension air compressor connector C9 terminal 4.

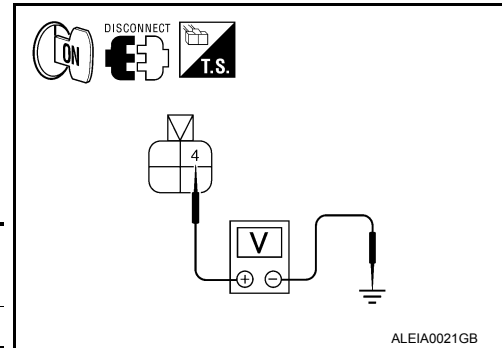

(+)		(-)	Voltage
Connector	Terminal		
C9	4	Ground	Battery Voltage


Is battery voltage present?

YES >> GO TO 3.

NO >> GO TO 2.

2. COMPRESSOR MOTOR RELAY POWER SUPPLY CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Disconnect the compressor motor relay connector.
3. Check continuity between compressor motor relay connector E131 (A) terminal 3 and suspension air compressor connector C9 (B) terminal 4.

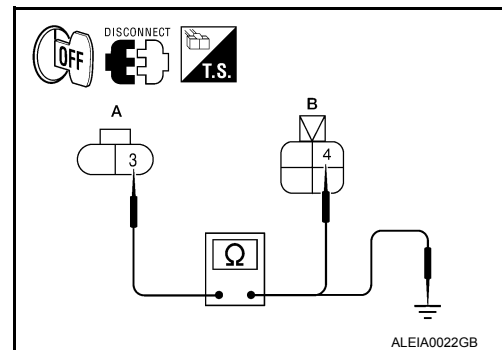

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E131	3	C9	4	Yes

4. Check continuity between compressor motor relay connector E131 (A) terminal 3 and ground.

A		—	Continuity
Connector	Terminal		
E131	3	Ground	No


Are the continuity test results as specified?

YES >> Check compressor motor relay. Refer to [SCS-21, "Diagnosis Procedure"](#).

NO >> Repair harness or connector.

3. GROUND CIRCUIT CHECK

1. Turn ignition switch OFF.
2. Check continuity between suspension air compressor connector C9 terminals 1 and 3 and ground.

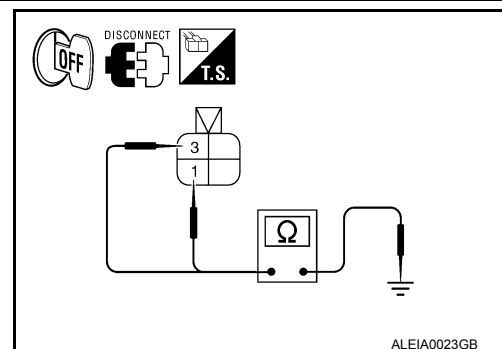

Connector	Terminal	—	Continuity
C9	1	Ground	Yes
	3		

Is continuity present?

YES >> Inspection End.

NO >> Repair harness or connector.

HEIGHT SENSOR

HEIGHT SENSOR : Diagnosis Procedure

INFOID:000000009824343

Regarding Wiring Diagram information, refer to [SCS-31, "Wiring Diagram"](#).

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

1. POWER SUPPLY CIRCUIT CHECK


1. Disconnect height sensor connector C8.
2. Turn the ignition switch ON.
3. Check voltage between the height sensor connector C8 terminal 1 and ground.

(+) Connector		Terminal	(-)	Voltage
C8	1			

Is 5V present?

YES >> GO TO 2.

NO >> Check harness or connector for open or short. If OK, replace the suspension control unit. Refer to [RSU-24. "Removal and Installation"](#).

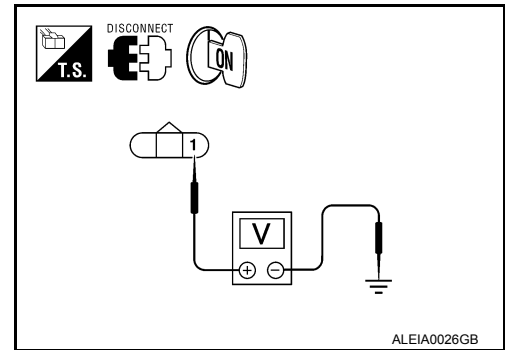

2. GROUND CIRCUIT CHECK


1. Turn ignition switch OFF.
2. Check continuity between height sensor connector C8 terminal 3 and ground.

Connector	Terminal	—	Continuity
C8	3	Ground	Yes

Is continuity present?

YES >> Inspection End.

NO >> Repair harness or connector.

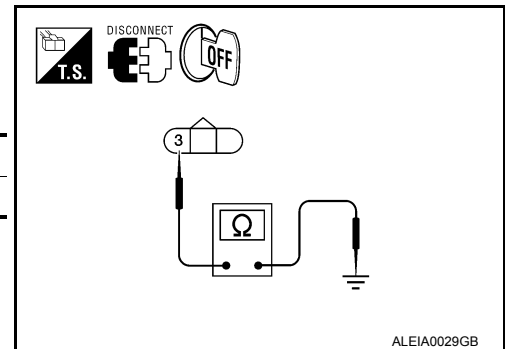

COMPRESSOR MOTOR RELAY

< DTC/CIRCUIT DIAGNOSIS >

COMPRESSOR MOTOR RELAY

Description

INFOID:000000009824344

Receives suspension air compressor ON signal from suspension control unit. When activated, the compressor motor relay supplies power to the suspension air compressor.

Component Function Check

INFOID:000000009824345

1. CHECK COMPRESSOR MOTOR RELAY OPERATION

CAUTION:

The "COMPRESSOR" active test will remain ON until it is turned off using CONSULT. Allowing the compressor to run for an extended period of time may cause damage to the suspension control system components due to excessive air pressure.

CONSULT

1. Turn ignition ON.
2. Select "COMPRESSOR" of AIR LEVELIZER active test items.
3. While operating test item, check that the suspension air compressor turns ON.

ON : Compressor turns ON

OFF : Compressor turns OFF

Does the suspension air compressor operate properly?

- YES >> Compressor motor relay and suspension air compressor are operating normally.
NO >> Refer to [SCS-21, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009824346


Regarding Wiring Diagram information, refer to [SCS-31, "Wiring Diagram"](#).

1. CHECK COMPRESSOR "ON" SIGNAL FROM SUSPENSION CONTROL UNIT

CONSULT

1. Turn ignition switch OFF.
2. Disconnect compressor motor relay connector E130.
3. Turn ignition switch ON.
4. Select "COMPRESSOR" of AIR LEVELIZER active test items.
5. While operating test item, check voltage to compressor motor relay connector E130 terminal 2.

(+)		(-)	Voltage
Connector	Terminal		
E130	2	Ground	Battery voltage

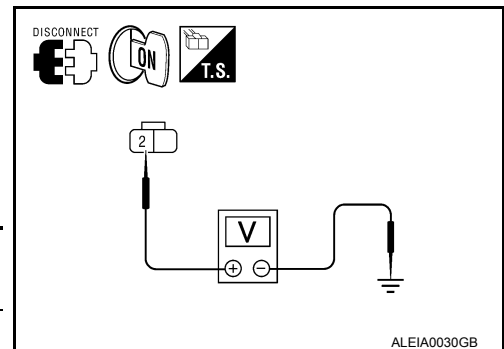

Is battery voltage present while operating test item?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK COMPRESSOR "ON" SIGNAL CIRCUIT


COMPRESSOR MOTOR RELAY

< DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect suspension control unit connector B3.
3. Check continuity between suspension control unit connector B3 (A) terminal 1 and compressor motor relay connector E130 (B) terminal 2.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
B3	1	E130	2	Yes

4. Check continuity between suspension control unit connector B3 (A) terminal 1 and ground.

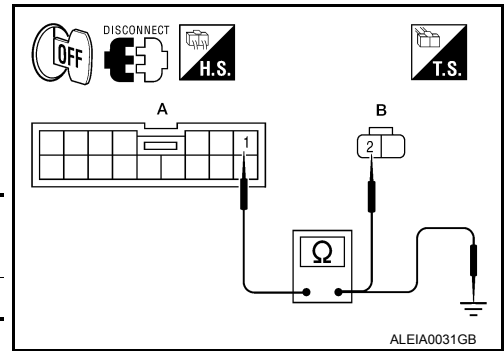

A		—	Continuity
Connector	Terminal		
B3	1	Ground	No

Are the continuity test results as specified?

- YES >> Replace the suspension control unit. Refer to [RSU-24. "Removal and Installation"](#).
 NO >> Repair harness or connector.


3. CHECK COMPRESSOR MOTOR RELAY GROUND

1. Turn ignition switch OFF.
2. Check continuity between compressor motor relay connector E130 terminal 1 and ground.

Connector	Terminal	—	Continuity
E130	1	Ground	Yes

Is continuity present?

- YES >> GO TO 4.
 NO >> Repair harness or connector.

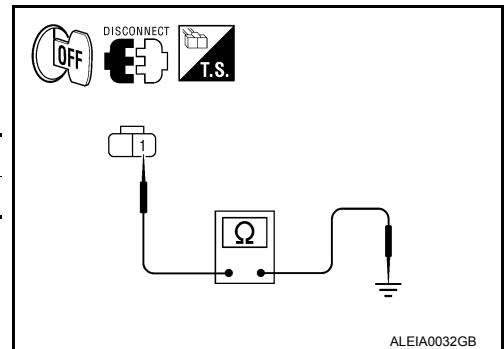


4. CHECK COMPRESSOR MOTOR RELAY POWER SUPPLY

1. Disconnect compressor motor relay connector E131.
2. Check voltage between compressor motor relay E131 terminal 5 and ground.

(+) Connector		Terminal	(-)	Voltage
Connector	Terminal			
E131	5	Ground	Battery voltage	

Is battery voltage present?

- YES >> GO TO 5.
 NO >> Inspect fuse and repair harness or connector.

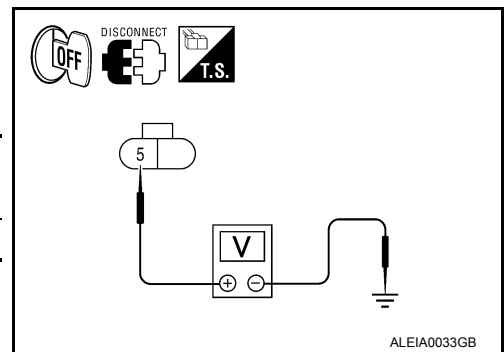


5. CHECK COMPRESSOR MOTOR RELAY OUTPUT

COMPRESSOR MOTOR RELAY

< DTC/CIRCUIT DIAGNOSIS >

1. Connect compressor motor relay connectors E130 and E131.
2. Disconnect suspension air compressor connector C9.
3. Turn ignition ON.
4. Select "COMPRESSOR" of AIR LEVELIZER active test items.
5. Check voltage between compressor motor relay C9 terminal 4 and ground.

(+)		(-)	Voltage
Connector	Terminal		
C9	4	Ground	Battery voltage

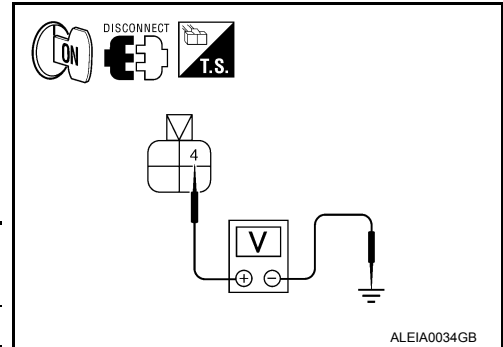

Is battery voltage present?

- YES >> Inspection End.
 NO >> Replace the compressor motor relay.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SCS

HEIGHT SENSOR SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

HEIGHT SENSOR SIGNAL CIRCUIT

Description

INFOID:000000009824347

Supplies vehicle height input to the suspension control unit.

Component Function Check

INFOID:000000009824348

1. CHECK HEIGHT SENSOR OPERATION

CONSULT

1. Select "HEIGHT SEN" of AIR LEVELIZER data monitor test item.
2. While monitoring test item, add or take away weight from the rear of the vehicle. Check that the voltage value changes with vehicle height.

HEIGHT SEN : Voltage changes with vehicle height

Is the HEIGHT SEN data monitor responding normally?

- YES >> Height sensor is operating normally.
 NO >> Refer to [SCS-24, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009824349

Regarding Wiring Diagram information, refer to [SCS-31, "Wiring Diagram"](#).

1. CHECK HEIGHT SENSOR POWER AND GROUND SUPPLY

Check height sensor power and ground supply. Refer to [SCS-19, "HEIGHT SENSOR : Diagnosis Procedure"](#).

Are the inspection results normal?


- YES >> GO TO 2.
 NO >> Repair harness or connector.

2. CHECK HEIGHT SENSOR SIGNAL CIRCUIT

1. Disconnect suspension control unit connector B3 and height sensor connector C8.
2. Check continuity between suspension control unit connector B3 (A) terminal 3 and height sensor connector C8 (B) terminal 2.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
B3	3	C8	2	Yes

3. Check continuity between display unit harness connector B3 (A) terminal 3 and ground.

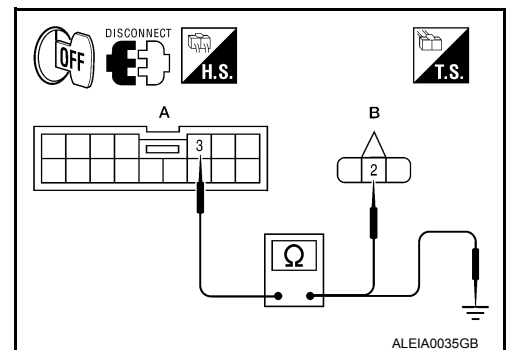

A		—	Continuity
Connector	Terminal		
B3	3	Ground	No

Are the continuity results as specified?

- YES >> Replace the height sensor. Refer to [RSU-22, "Removal and Installation"](#).
 NO >> Repair harness or connector.

EXHAUST VALVE SOLENOID CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

EXHAUST VALVE SOLENOID CIRCUIT

Description

INFOID:000000009824350

Receives exhaust valve solenoid signal from suspension control unit. When activated, the exhaust valve solenoid releases air pressure from the suspension control system.

Component Function Check

INFOID:000000009824351

1. CHECK EXHAUST SOLENOID OPERATION

CAUTION:

While operating this active test, the suspension control system will vent air pressure and the vehicle ride height will lower. Ensure the area around the vehicle is free from obstructions before beginning test.

CONSULT

1. Ensure the suspension control system has air pressure and is not drooping in the rear.
2. Select "EXHAUST SOLENOID" of AIR LEVELIZER active test items.
3. While operating test item, check that the exhaust valve solenoid opens to vent air from the system. The vehicle should lower when the exhaust valve solenoid is activated.

ON : Air vents and vehicle ride height lowers

OFF : No air vents and vehicle ride height remains constant

Does the system vent properly?

YES >> Exhaust valve solenoid is operating normally.

NO >> Refer to [SCS-25, "Diagnosis Procedure"](#).

Diagnosis Procedure


INFOID:000000009824352

Regarding Wiring Diagram information, refer to [SCS-31, "Wiring Diagram"](#).

1. CHECK EXHAUST VALVE SOLENOID SIGNAL

CONSULT

1. Connect suspension control unit connector B3.
2. Turn ignition switch ON.
3. Select "EXHAUST SOLENOID" of AIR LEVELIZER active test items.
4. While test item is operating, check signal between suspension air compressor connector C9 terminal 2 and ground.

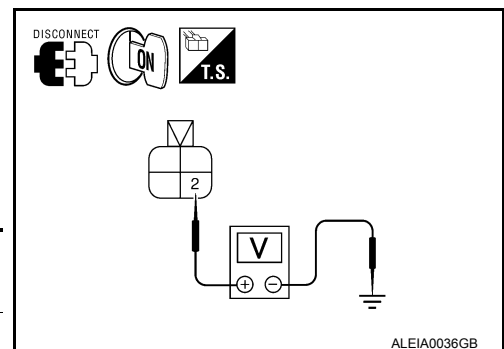

(+) Connector		(-) Terminal	Voltage
C9	2	Ground	Battery voltage

Is battery voltage present?

YES >> GO TO 3.

NO >> GO TO 2.


2. CHECK CONTINUITY OF EXHAUST VALVE SOLENOID CIRCUIT

EXHAUST VALVE SOLENOID CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect suspension control unit connector B3 and suspension air compressor connector C9.
3. Check continuity between suspension control unit connector B3 (A) terminal 9 and suspension air compressor connector C9 (B) terminal 2.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
B3	9	C9	2	Yes

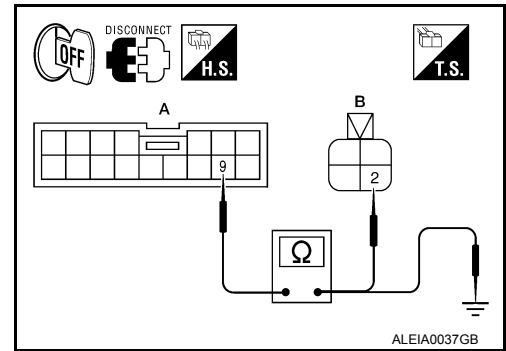

4. Check continuity between suspension control unit connector B3 (A) terminal 9 and ground.

A		—	Continuity
Connector	Terminal		
B3	9	Ground	No


Are the continuity test results as specified?

- YES >> Replace the suspension control unit. Refer to [RSU-24. "Removal and Installation"](#).
 NO >> Repair harness or connector.

3. CHECK SUSPENSION AIR COMPRESSOR GROUND

1. Turn ignition switch OFF.
2. Check continuity between suspension air compressor connector C9 terminals 1 and 3 and ground.

Connector	Terminal	—	Continuity
C9	1	Ground	Yes
	3		

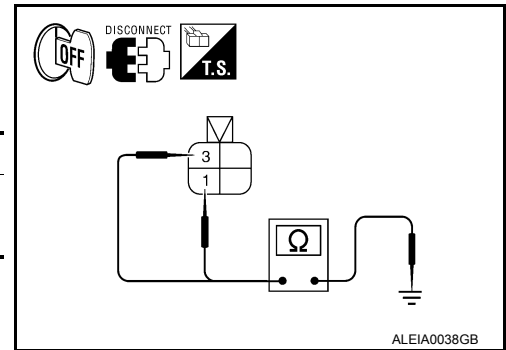

Is continuity present?

- YES >> Replace the suspension air compressor. Refer to [RSU-20. "Removal and Installation"](#).
 NO >> Repair harness or connector.

CK SUSP WARNING INDICATOR CONTROL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

CK SUSP WARNING INDICATOR CONTROL CIRCUIT

Description

INFOID:000000009824353

The CK SUSP. warning lamp is controlled by a ground signal provided to the combination meter by the suspension control unit.

Component Function Check

INFOID:000000009824354

1. CHECK WARNING LAMP OPERATION

CONSULT

1. Turn ignition ON.
2. Select "WARNING LAMP" of AIR LEVELIZER active test items.
3. While operating test item, check that the warning lamp activates.

ON : Warning lamp turns ON

OFF : Warning lamp turns OFF

Does the warning lamp operate properly?

YES >> Warning lamp is operating normally.

NO >> Refer to [SCS-27. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009824355

Regarding Wiring Diagram information, refer to [SCS-31. "Wiring Diagram"](#).

1. PERFORM SUSPENSION CONTROL SYSTEM SELF-DIAGNOSIS

CONSULT

1. Turn ignition ON.
2. Perform SELF DIAGNOSIS function of AIR LEVELIZER system.

Are any DTC's present?

YES >> Refer to [SCS-30. "DTC Index"](#).

NO >> • If warning lamp is always ON, GO TO 2.
• If warning lamp is always OFF, GO TO 3.

2. CHECK SUSPENSION CONTROL UNIT WARNING LAMP CONTROL

1. Turn ignition OFF.
2. Disconnect the suspension control unit connector B3.
3. Turn ignition ON.

Does the CK SUSP. warning lamp turn ON?


YES >> GO TO 3.

NO >> Replace the suspension control unit. Refer to [RSU-24. "Removal and Installation"](#).

3. CHECK CONTINUITY OF WARNING LAMP CONTROL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect suspension control unit connector B3 and combination meter connector M24.
3. Check continuity between suspension control unit connector B3 (A) terminal 10 and combination meter connector M24 (B) terminal 3.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
B3	10	M24	3	Yes

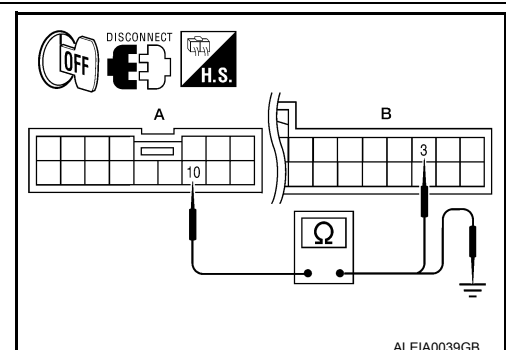

ALEIA0039GB

CK SUSP WARNING INDICATOR CONTROL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

4. Check continuity between suspension control unit connector B3 (A) terminal 10 and ground.

A		—	Continuity
Connector	Terminal		
B3	10	Ground	No

Are the continuity test results as specified?

- YES >> Replace the combination meter. Refer to [MWI-98. "Removal and Installation"](#).
NO >> Repair harness or connector.

SUSPENSION CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >


ECU DIAGNOSIS INFORMATION

SUSPENSION CONTROL UNIT

Reference Value

INFOID:000000009824356

TERMINAL LAYOUT

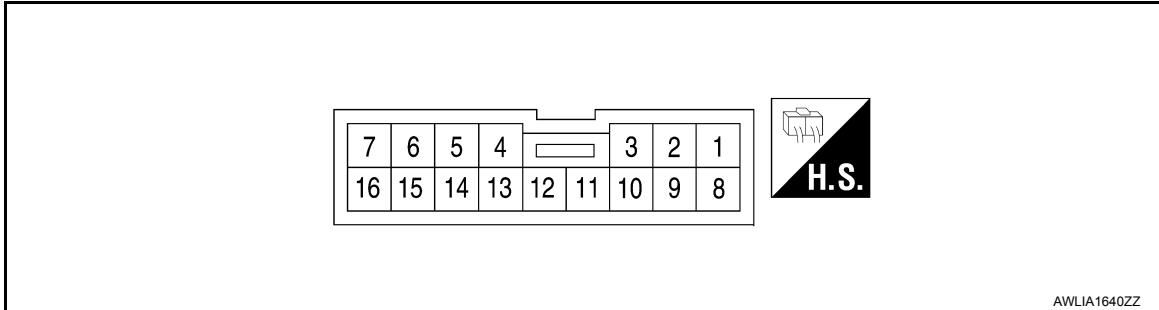

PHYSICAL VALUES

Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
1 (V)	Ground	Compressor relay output	Output	Ignition switch ON	Air levelizer raising vehicle ride height	Battery voltage
3 (W)	Ground	Height sensor input	Input	Ignition switch ON	—	0.2V - 4.8V
5 (R)	Ground	VREF output (height sen- sor)	Output	Ignition switch ON	—	5V
6 (G/R)	Ground	IGN power supply	Input	Ignition switch ON or START	—	Battery voltage
7 (W/L)	Ground	BAT power supply	Input	Ignition switch OFF	—	Battery voltage
8 (G/W)	Ground	Diagnostic K-line	Input/ Output	—	—	—
9 (SB)	Ground	Exhaust valve output	Output	Ignition switch ON	Air levelizer lowering vehi- cle ride height (venting)	Battery voltage
10 (BR)	Ground	Warning lamp output	Output	Ignition switch ON	Warning lamp ON	0V
					Warning lamp OFF	Battery voltage
14 (L)	Ground	Height sensor ground	Output	Ignition switch ON	—	Less than 0.2V
15 (BR/W)	Ground	Generator input	Input	Ignition switch ON	Charge light ON	0V
					Charge light OFF	Battery voltage
16 (B)	Ground	Suspension control unit ground	Input	Ignition switch ON	—	Less than 0.2V

SUSPENSION CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

DTC Index

INFOID:000000009824357

Self-diagnosis results display item

CONSULT display	Malfunction	Reference page
Vehicle height sensor [C1801]	Vehicle height sensor voltage is less than 0.2V or greater than 4.8V for more than 60 seconds.	SCS-10. "Diagnosis Procedure" .
Compressor relay [C1802]	<ul style="list-style-type: none"> Driving transistor for compressor relay is OFF and monitor voltage continues at a high level for more than 10 seconds. Driving transistor for compressor relay is ON and monitor voltage continues at a low level for more than 5 seconds. 	SCS-11. "Diagnosis Procedure" .
Exhaust solenoid [C1803]	<ul style="list-style-type: none"> Driving transistor for exhaust valve solenoid is OFF and monitor voltage continues at a high level for more than 10 seconds. Driving transistor for exhaust valve solenoid is ON and monitor voltage continues at a low level for more than 5 seconds. 	SCS-12. "Diagnosis Procedure" .
Vehicle height adjusting malfunction (compressor)[C1804]	Continuous compressor relay ON time is more than 120 seconds.	SCS-13. "Diagnosis Procedure" .
Vehicle height adjusting malfunction (exhaust solenoid)[C1805]	Continuous exhaust valve solenoid ON time is more than 120 seconds.	SCS-14. "Diagnosis Procedure" .
Vehicle height sensor locking malfunction [C1806]	Output sensor voltage variation $\pm 0.02V$ is more than 100 seconds when vehicle height range is normal.	SCS-15. "Diagnosis Procedure" .
Sensor 5V malfunction [C1807]	Sensor reference voltage is less than 0.8V or more than 6V for 20 seconds.	SCS-16. "Diagnosis Procedure" .
Integral time malfunction by supplying air [C1808]	A suspension air compressor ON request has been in effect for 180 seconds and the suspension air compressor has not activated during that time.	SCS-17. "Diagnosis Procedure" .

SUSPENSION CONTROL SYSTEM

< WIRING DIAGRAM >


WIRING DIAGRAM

SUSPENSION CONTROL SYSTEM

Wiring Diagram

INFOID:000000009824358

SUSPENSION CONTROL SYSTEM

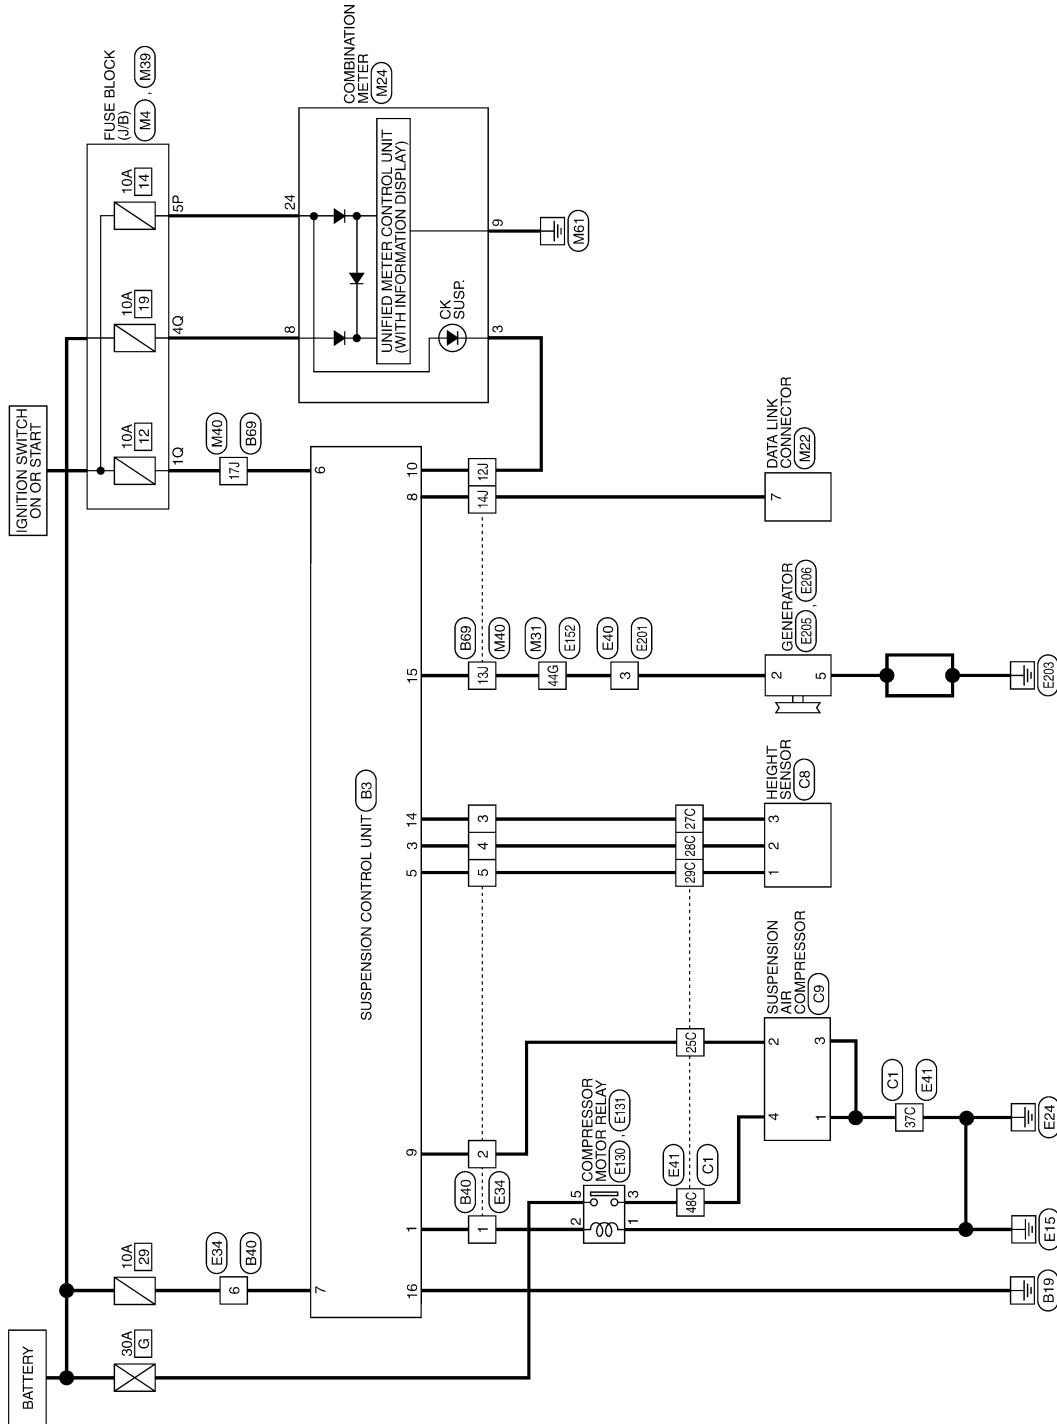

ABEWA0086GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


SCS

SUSPENSION CONTROL SYSTEM

< WIRING DIAGRAM >


SUSPENSION CONTROL SYSTEM CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Connector No.	M22
Connector Name	DATA LINK CONNECTOR
Connector Color	WHITE

Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE




Terminal No.	5P	Color of Wire	O/L	Signal Name	-
--------------	----	---------------	-----	-------------	---


Terminal No.	7	Color of Wire	G/W	Signal Name	-
--------------	---	---------------	-----	-------------	---

Terminal No.	3	Color of Wire	BR	Signal Name	AIR LEVELIZER
Terminal No.	8	Color of Wire	Y/R	Signal Name	BATTERY
Terminal No.	9	Color of Wire	B	Signal Name	GND
Terminal No.	24	Color of Wire	O/L	Signal Name	RUN/START

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

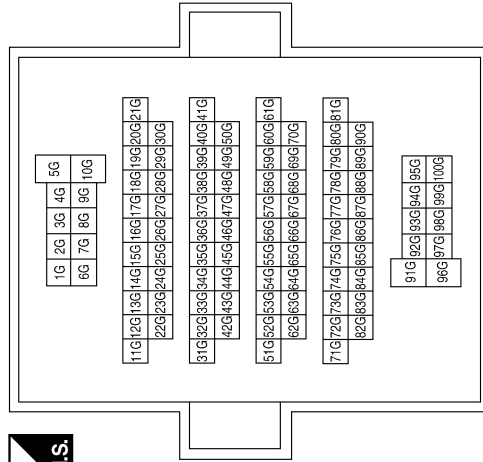

Terminal No.	44G	Color of Wire	BR/W	Signal Name	-
--------------	-----	---------------	------	-------------	---



Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE


Terminal No.	1Q	Color of Wire	G/R	Signal Name	-
Terminal No.	4Q	Color of Wire	Y/R	Signal Name	-

ABEIA10176GB

SUSPENSION CONTROL SYSTEM

< WIRING DIAGRAM >



Connector No.	E34
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	V	-
2	SB	-
3	L	-
4	W	-
5	R	-
6	W/L	-


Terminal No.	Color of Wire	Signal Name
12J	BR	-
13J	BR/W	-
14J	G/W	-
17J	G/R	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

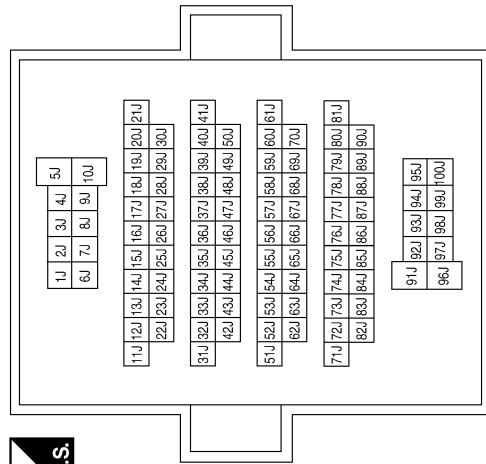

Terminal No.	Color of Wire	Signal Name
25C	SB	-
27C	L	-
28C	W	-
29C	R	-
37C	B	-
48C	SB	-

Connector No.	E41
Connector Name	WIRE TO WIRE
Connector Color	GRAY

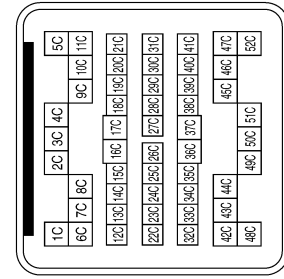

Connector No.	E40
Connector Name	WIRE TO WIRE
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
3	BR/W	-


ABEIA0177GB

A
B
C
D
SCS
F
G
H
I
J
K
L
M
N
O
P

SUSPENSION CONTROL SYSTEM

< WIRING DIAGRAM >

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

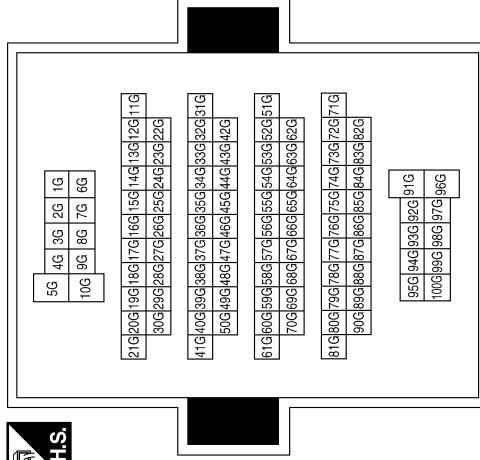

Terminal No.	Color of Wire	Signal Name
44G	BR/W	-

Connector No.	E131
Connector Name	COMPRESSOR MOTOR RELAY
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	SB	-
5	Y/B	-

Connector No.	E130
Connector Name	COMPRESSOR MOTOR RELAY
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	V	-

Connector No.	E206
Connector Name	GENERATOR
Connector Color	-



Terminal No.	Color of Wire	Signal Name
5	B	-

Connector No.	E205
Connector Name	GENERATOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
2	BR/W	-

Connector No.	E201
Connector Name	WIRE TO WIRE
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
3	BR/W	-

ABEIA0178GB

SUSPENSION CONTROL SYSTEM

< WIRING DIAGRAM >

Connector No.	C9
Connector Name	SUSPENSION AIR COMPRESSOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	B	-
2	SB	-
3	B	-
4	SB	-

Connector No.	C8
Connector Name	HEIGHT SENSOR
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	R	-
2	W	-
3	L	-

Connector No.	C1
Connector Name	WIRE TO WIRE
Connector Color	GRAY

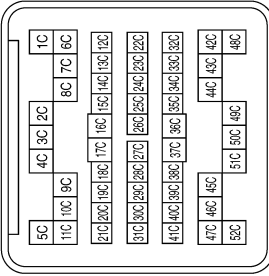

Terminal No.	Color of Wire	Signal Name
25C	SB	-
27C	L	-
28C	W	-
29C	R	-
37C	B	-
48C	SB	-


Connector No.	B40
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	V	-
2	SB	-
3	L	-
4	W	-
5	R	-
6	W/L	-

Terminal No.	Color of Wire	Signal Name
4	-	-
5	R	VREF OUTPUT
6	G/R	IGN
7	W/L	BAT
8	G/W	K-LINE
9	SB	EXHAUST VALVE OUTPUT
10	BR	WARNING LAMP OUTPUT
11	-	-
12	-	-
13	-	-
14	L	HEIGHT SENSOR GND
15	BR/W	ALTERNATOR INPUT
16	B	GND

Connector No.	B3
Connector Name	SUSPENSION CONTROL UNIT
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	V	COMPRESSOR RELAY OUTPUT
2	-	-
3	W	HEIGHT SENSOR INPUT

ABEIA0020GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


SCS

SUSPENSION CONTROL SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
12J	BR	-
13J	BR/W	-
14J	G/W	-
17J	G/R	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

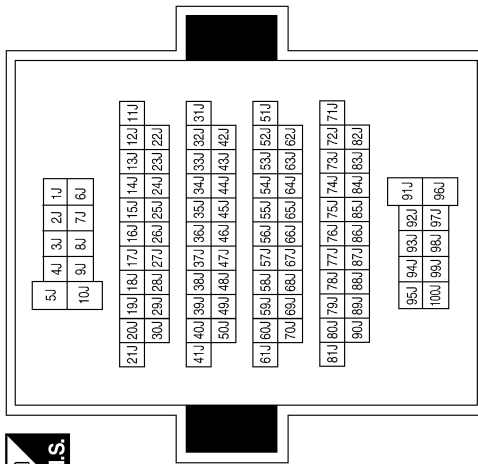

ABEIA0179GB

SUSPENSION CONTROL SYSTEM

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

SUSPENSION CONTROL SYSTEM

Symptom Table

INFOID:000000009824359

AIR LEVELIZER

Symptom	Possible cause	Reference page
Inoperative	<ul style="list-style-type: none">• Suspension control unit• Compressor motor relay• Suspension air compressor	SCS-38. "Diagnosis Procedure".
System does not raise	<ul style="list-style-type: none">• Suspension control unit• Height sensor• Compressor motor relay• Suspension air compressor• Leak in system• Restriction in system	SCS-39. "Diagnosis Procedure".
System does not lower	<ul style="list-style-type: none">• Suspension control unit• Height sensor• Compressor motor relay• Suspension air compressor• Restriction in system	SCS-40. "Diagnosis Procedure".
CK SUSP. indicator lamp always ON with key ON	<ul style="list-style-type: none">• CK SUSP. indicator lamp control circuit• Suspension control unit	SCS-27. "Description".

A

B

C

D

SCS

F

G

H

I

J

K

L

M

N

O

P

SUSPENSION CONTROL SYSTEM INOPERATIVE

< SYMPTOM DIAGNOSIS >

SUSPENSION CONTROL SYSTEM INOPERATIVE

Description

INFOID:000000009824360

The suspension control system does not activate. It does not raise or lower the vehicle in response to ride height changes.

Diagnosis Procedure

INFOID:000000009824361

1. SUSPENSION CONTROL UNIT POWER AND GROUND INSPECTION

Check the suspension control unit power and ground supply. Refer to [SCS-18, "SUSPENSION CONTROL UNIT : Diagnosis Procedure"](#).

Does the suspension control unit power and ground pass inspection?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2. CHECK HEIGHT SENSOR SIGNAL INPUT

ⓂCONSULT DATA MONITOR

1. Turn ignition switch ON.
2. Select "HEIGT SEN" of AIR LEVELIZER data monitor item.
3. Check the monitor status.

HEIGT SEN : 0.2V - 4.8V

Is the height sensor voltage normal?

YES >> GO TO 3.

NO >> Check height sensor signal circuit. Refer to [SCS-24, "Diagnosis Procedure"](#).

3. CHECK GENERATOR "L" CIRCUIT SIGNAL

ⓂCONSULT DATA MONITOR

1. Start the engine.
2. Select "ACG L" of AIR LEVELIZER data monitor item.
3. Check the monitor status.

**ACG L : OFF with charge light OFF
: ON with charge light ON**

Is the generator "L" signal operating normally?

YES >> GO TO 4.

NO >> Check generator L circuit. Refer to [CHG-17, "Diagnosis Procedure"](#)(open) and [CHG-19, "Diagnosis Procedure"](#)(short).

4. SUSPENSION AIR COMPRESSOR POWER AND GROUND INSPECTION

Check the suspension air compressor power and ground supply. Refer to [SCS-18, "SUSPENSION AIR COMPRESSOR : Diagnosis Procedure"](#).

Does the suspension air compressor power and ground pass inspection?

YES >> System is operating normally.

NO >> Repair or replace the malfunctioning part.

SUSPENSION CONTROL SYSTEM DOES NOT RAISE

< SYMPTOM DIAGNOSIS >

SUSPENSION CONTROL SYSTEM DOES NOT RAISE

Description

INFOID:000000009824362

The suspension control system does not raise the vehicle in accordance with ride height changes.

Diagnosis Procedure

INFOID:000000009824363

1. SUSPENSION CONTROL UNIT POWER AND GROUND INSPECTION

Check the suspension control unit power and ground supply. Refer to [SCS-18, "SUSPENSION CONTROL UNIT : Diagnosis Procedure"](#).

Does the suspension control unit power and ground pass inspection?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2. CHECK HEIGHT SENSOR SIGNAL INPUT

 CONSULT DATA MONITOR

1. Turn ignition ON.
2. Select "HEIGT SEN" of AIR LEVELIZER data monitor item.
3. Check the monitor status.

HEIGT SEN : 0.2V - 4.8V

Is the height sensor voltage normal?

YES >> GO TO 3.

NO >> Check height sensor signal circuit. Refer to [SCS-24, "Diagnosis Procedure"](#).

3. SUSPENSION AIR COMPRESSOR POWER AND GROUND INSPECTION

Check the suspension air compressor power and ground supply. Refer to [SCS-18, "SUSPENSION AIR COMPRESSOR : Diagnosis Procedure"](#).

Does the suspension air compressor power and ground pass inspection?

YES >> Inspect for a weak compressor, leak or restriction in the system. Repair or replace malfunctioning part.

NO >> Repair or replace the malfunctioning part.

A
B
C
D
SCS
F
G
H
I
J
K
L
M
N
O
P

SUSPENSION CONTROL SYSTEM DOES NOT LOWER

< SYMPTOM DIAGNOSIS >

SUSPENSION CONTROL SYSTEM DOES NOT LOWER

Description

INFOID:000000009824364

The suspension control system does not lower the vehicle in accordance with ride height changes.

Diagnosis Procedure

INFOID:000000009824365

1.SUSPENSION CONTROL UNIT POWER AND GROUND INSPECTION

Check the suspension control unit power and ground supply. Refer to [SCS-18. "SUSPENSION CONTROL UNIT : Diagnosis Procedure"](#).

Does the suspension control unit power and ground pass inspection?

- YES >> GO TO 2.
- NO >> Repair or replace the malfunctioning part.

2.CHECK HEIGHT SENSOR SIGNAL INPUT

CONSULT DATA MONITOR

1. Turn ignition ON.
2. Select "HEIGT SEN" of AIR LEVELIZER data monitor item.
3. Check the monitor status.

HEIGT SEN : 0.2V - 4.8V

Is the height sensor voltage normal?

- YES >> GO TO 3.
- NO >> Check height sensor signal circuit. Refer to [SCS-24. "Diagnosis Procedure"](#).

3.EXHAUST VALVE SOLENOID CIRCUIT INSPECTION

Check the exhaust valve solenoid circuit. Refer to [SCS-25. "Component Function Check"](#).

Does the exhaust valve solenoid circuit pass inspection?

- YES >> Inspect for a restriction in the system. repair or replace the malfunctioning part.
- NO >> Repair or replace the malfunctioning part.

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009824366

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Rear Suspension

INFOID:000000009824367

- When installing the rubber bushings, the final tightening must be done under unladen condition and with the tires on level ground. Oil will shorten the life of the rubber bushings, so wipe off any spilled oil immediately.
- Unladen condition means the fuel tank, engine coolant and lubricants are at the full specification. The spare tire, jack, hand tools, and mats are in their designated positions.
- After installing suspension components, check the wheel alignment.
- Caulking nuts are not reusable. Always use new caulking nuts for installation. New caulking nuts are pre-oiled, do not apply any additional lubrication.

Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000009824368

NOTE:

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

A

B

C

D

SCS

F

G

H

I

J

K

L

M

N

O

P

PRECAUTIONS

< PRECAUTION >

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.
5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT.