

SECTION **DLN**  
DRIVELINE

A  
B  
C

DLN

CONTENTS

E

<b>ATX14B</b>		
<b>BASIC INSPECTION</b> .....	6	
<b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....	6	
Work Flow .....	6	
Preliminary Check .....	7	
<b>SYSTEM DESCRIPTION</b> .....	10	
<b>4WD SYSTEM</b> .....	10	
System Diagram .....	10	
System Description .....	11	
Component Parts Location .....	16	
CAN Communication .....	17	
<b>DIAGNOSIS SYSTEM (TRANSFER CONTROL UNIT)</b> .....	18	
CONSULT Function (ALL MODE AWD/4WD) .....	18	
<b>DTC/CIRCUIT DIAGNOSIS</b> .....	22	
<b>P1811 POWER SUPPLY CIRCUIT FOR TRANSFER CONTROL UNIT</b> .....	22	
Description .....	22	
DTC Logic .....	22	
Diagnosis Procedure .....	22	
Component Inspection .....	23	
<b>P1802 – P1804, P1809 TRANSFER CONTROL UNIT</b> .....	25	
Description .....	25	
DTC Logic .....	25	
Diagnosis Procedure .....	25	
<b>P1807 VEHICLE SPEED SENSOR (A/T)</b> .....	27	
Description .....	27	
DTC Logic .....	27	
Diagnosis Procedure .....	27	
<b>P1808 VEHICLE SPEED SENSOR (ABS)</b> .....	28	
Description .....	28	
DTC Logic .....	28	
Diagnosis Procedure .....	28	
DTC Logic .....	28	F
Diagnosis Procedure .....	28	
<b>P1810 NEUTRAL-4LO SWITCH</b> .....	29	
Description .....	29	
DTC Logic .....	29	
Diagnosis Procedure .....	29	
Component Inspection .....	31	
<b>P1813 4WD SHIFT SWITCH</b> .....	32	
Description .....	32	
DTC Logic .....	32	
Diagnosis Procedure .....	32	
Component Inspection .....	34	
<b>P1814 WAIT DETECTION SWITCH</b> .....	35	
Description .....	35	
DTC Logic .....	35	
Diagnosis Procedure .....	35	
Component Inspection .....	37	
<b>P1816 TRANSMISSION RANGE SWITCH</b> .....	38	
Description .....	38	
DTC Logic .....	38	
Diagnosis Procedure .....	38	
<b>P1817 ACTUATOR MOTOR</b> .....	39	
Description .....	39	
DTC Logic .....	39	
Diagnosis Procedure .....	39	
Component Inspection .....	43	
<b>P1818 ACTUATOR POSITION SWITCH</b> .....	45	
Description .....	45	
DTC Logic .....	45	
Diagnosis Procedure .....	45	
Component Inspection .....	47	
<b>P1819 TRANSFER CONTROL DEVICE</b> .....	48	
Description .....	48	
DTC Logic .....	48	
Diagnosis Procedure .....	48	

F

G

H

I

J

K

L

M

N

O

P

<b>P1820 ENGINE SPEED SIGNAL</b> .....	<b>52</b>	<b>U1000 CAN COMM CIRCUIT</b> .....	<b>78</b>
Description .....	52	Description .....	78
DTC Logic .....	52	DTC Logic .....	78
Diagnosis Procedure .....	52	Diagnosis Procedure .....	78
<b>P1822 CLUTCH PRESSURE SOLENOID</b> .....	<b>53</b>	<b>U1010 CONTROL UNIT (CAN)</b> .....	<b>79</b>
Description .....	53	Description .....	79
DTC Logic .....	53	DTC Logic .....	79
Diagnosis Procedure .....	53	Diagnosis Procedure .....	79
Component Inspection .....	56		
<b>P1823 2-4 SOLENOID</b> .....	<b>57</b>	<b>ECU DIAGNOSIS INFORMATION</b> .....	<b>80</b>
Description .....	57		
DTC Logic .....	57	<b>TRANSFER CONTROL UNIT</b> .....	<b>80</b>
Diagnosis Procedure .....	57	Reference Value .....	80
Component Inspection .....	59	DTC Index .....	87
<b>P1824 TRANSFER MOTOR</b> .....	<b>60</b>	<b>WIRING DIAGRAM</b> .....	<b>91</b>
Description .....	60		
DTC Logic .....	60	<b>ALL-MODE 4WD SYSTEM</b> .....	<b>91</b>
Diagnosis Procedure .....	60	Wiring Diagram .....	91
Component Inspection .....	64		
<b>P1826 TRANSFER FLUID TEMPERATURE</b> ...	<b>65</b>	<b>SYMPTOM DIAGNOSIS</b> .....	<b>101</b>
Description .....	65		
DTC Logic .....	65	<b>4WD SYSTEM SYMPTOMS</b> .....	<b>101</b>
Diagnosis Procedure .....	65	Symptom Table .....	101
Component Inspection .....	66	<b>4WD SHIFT INDICATOR LAMP AND 4LO IN-</b>	
<b>P1827 CLUTCH PRESSURE SWITCH</b> .....	<b>68</b>	<b>DI-CATOR LAMP DO NOT TURN ON</b> .....	<b>102</b>
Description .....	68	Description .....	102
DTC Logic .....	68	Diagnosis Procedure .....	102
Diagnosis Procedure .....	68	<b>4WD WARNING LAMP DOES NOT TURN ON.</b>	<b>104</b>
Component Inspection .....	70	Description .....	104
<b>P1828 LINE PRESSURE SWITCH</b> .....	<b>71</b>	Diagnosis Procedure .....	104
Description .....	71	<b>4WD SHIFT INDICATOR LAMP OR 4LO INDI-</b>	
DTC Logic .....	71	<b>CATOR LAMP DO NOT CHANGE</b> .....	<b>106</b>
Diagnosis Procedure .....	71	Description .....	106
Component Inspection .....	73	Diagnosis Procedure .....	106
<b>P1829 THROTTLE POSITION SIGNAL (ECM)</b>		<b>ATP WARNING LAMP DOES NOT TURN ON.</b>	<b>108</b>
	<b>... 74</b>	Description .....	108
Description .....	74	Diagnosis Procedure .....	108
DTC Logic .....	74	<b>4WD SHIFT INDICATOR LAMP KEEPS</b>	
Diagnosis Procedure .....	74	<b>FLASHING</b> .....	<b>109</b>
<b>P1830 ABS OPERATION SIGNAL (ABS)</b> .....	<b>75</b>	Description .....	109
Description .....	75	Diagnosis Procedure .....	109
DTC Logic .....	75	<b>4WD WARNING LAMP FLASHES RAPIDLY..</b>	<b>110</b>
Diagnosis Procedure .....	75	Description .....	110
<b>P1831 VDC OPERATION SIGNAL (ABS)</b> .....	<b>76</b>	Diagnosis Procedure .....	110
Description .....	76	<b>4WD WARNING LAMP FLASHES SLOWLY ..</b>	<b>111</b>
DTC Logic .....	76	Description .....	111
Diagnosis Procedure .....	76	Diagnosis Procedure .....	111
<b>P1832 TCS OPERATION SIGNAL (ABS)</b> .....	<b>77</b>	<b>HEAVY TIGHT-CORNER BRAKING SYMP-</b>	
Description .....	77	<b>TOM OCCURS</b> .....	<b>112</b>
DTC Logic .....	77	Description .....	112
Diagnosis Procedure .....	77	Diagnosis Procedure .....	112

<b>ATP SWITCH</b> .....	114	<b>UNIT REMOVAL AND INSTALLATION</b> ...	140	A
Description .....	114	<b>TRANSFER ASSEMBLY</b> .....	140	
Diagnosis Procedure .....	114	Removal and Installation .....	140	B
<b>4WD SYSTEM DOES NOT OPERATE</b> .....	116	<b>UNIT DISASSEMBLY AND ASSEMBLY</b> .	141	
Description .....	116	<b>TRANSFER ASSEMBLY</b> .....	141	C
Diagnosis Procedure .....	116	Disassembly and Assembly .....	141	
<b>NOISE, VIBRATION AND HARSHNESS</b>		<b>SERVICE DATA AND SPECIFICATIONS</b>		
<b>(NVH) TROUBLESHOOTING</b> .....	117	<b>(SDS)</b> .....	177	<b>DLN</b>
NVH Troubleshooting Chart .....	117	<b>SERVICE DATA AND SPECIFICATIONS</b>		
<b>PRECAUTION</b> .....	118	<b>(SDS)</b> .....	177	E
<b>PRECAUTIONS</b> .....	118	General Specification .....	177	
Precaution for Supplemental Restraint System		Inspection and Adjustment .....	177	
(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-		<b>PROPELLER SHAFT: 2F1310</b>		F
SIONER" .....	118	<b>PRECAUTION</b> .....	179	
Precaution Necessary for Steering Wheel Rota-		<b>PRECAUTIONS</b> .....	179	G
tion After Battery Disconnect .....	118	Precaution for Supplemental Restraint System		
Precaution for Transfer Assembly and Transfer		(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-		
Control Unit Replacement .....	119	SIONER" .....	179	H
Precaution .....	119	Precaution Necessary for Steering Wheel Rota-		
Service Notice .....	120	tion After Battery Disconnect .....	179	I
<b>PREPARATION</b> .....	121	<b>PREPARATION</b> .....	181	
<b>PREPARATION</b> .....	121	<b>PREPARATION</b> .....	181	J
Special Service Tool .....	121	Commercial Service Tool .....	181	
Commercial Service Tool .....	123	<b>SYMPTOM DIAGNOSIS</b> .....	182	
<b>PERIODIC MAINTENANCE</b> .....	125	<b>NOISE, VIBRATION, AND HARSHNESS</b>		
<b>TRANSFER OIL FILTER</b> .....	125	<b>(NVH) TROUBLESHOOTING</b> .....	182	K
Removal and Installation .....	125	NVH Troubleshooting Chart .....	182	
<b>TRANSFER FLUID</b> .....	127	<b>BASIC INSPECTION</b> .....	183	L
Replacement .....	127	<b>PROPELLER SHAFT ASSEMBLY</b> .....	183	
Inspection .....	127	Inspection .....	183	M
<b>REMOVAL AND INSTALLATION</b> .....	129	<b>UNIT REMOVAL AND INSTALLATION</b> ...	184	
<b>TRANSFER CONTROL UNIT</b> .....	129	<b>PROPELLER SHAFT</b> .....	184	N
Removal and Installation .....	129	Removal and Installation .....	184	
<b>FRONT OIL SEAL</b> .....	130	<b>UNIT DISASSEMBLY AND ASSEMBLY</b> .	186	O
Removal and Installation .....	130	<b>PROPELLER SHAFT</b> .....	186	
<b>REAR OIL SEAL</b> .....	132	Disassembly and Assembly .....	186	P
Removal and Installation .....	132	<b>SERVICE DATA AND SPECIFICATIONS</b>		
<b>SIDE OIL SEAL</b> .....	134	<b>(SDS)</b> .....	188	
Removal and Installation .....	134	<b>SERVICE DATA AND SPECIFICATIONS</b>		
<b>TRANSFER CONTROL DEVICE</b> .....	135	<b>(SDS)</b> .....	188	
Removal and Installation .....	135	General Specification .....	188	
<b>AIR BREATHER HOSE</b> .....	136	Snap Ring .....	188	
Removal and Installation .....	136	<b>PROPELLER SHAFT: 2S1410</b>		
<b>TRANSFER MOTOR</b> .....	139			
Removal and Installation .....	139			

<b>PRECAUTION</b> .....	189	<b>NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING</b> .....	206
<b>PRECAUTIONS</b> .....	189	NVH Troubleshooting Chart .....	206
Caution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER" .....	189	<b>PERIODIC MAINTENANCE</b> .....	207
Caution Necessary for Steering Wheel Rota- tion After Battery Disconnect .....	189	<b>DIFFERENTIAL GEAR OIL</b> .....	207
<b>PREPARATION</b> .....	191	Changing Differential Gear Oil .....	207
<b>PREPARATION</b> .....	191	Checking Differential Gear Oil .....	207
Commercial Service Tool .....	191	<b>REMOVAL AND INSTALLATION</b> .....	208
<b>SYMPTOM DIAGNOSIS</b> .....	192	<b>SIDE OIL SEAL</b> .....	208
<b>NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING</b> .....	192	Removal and Installation .....	208
NVH Troubleshooting Chart .....	192	<b>FRONT OIL SEAL</b> .....	209
<b>BASIC INSPECTION</b> .....	193	Removal and Installation .....	209
<b>PROPELLER SHAFT ASSEMBLY</b> .....	193	<b>CARRIER COVER</b> .....	211
Inspection .....	193	Removal and Installation .....	211
<b>UNIT REMOVAL AND INSTALLATION</b> ...	194	<b>UNIT REMOVAL AND INSTALLATION</b> ...	212
<b>PROPELLER SHAFT</b> .....	194	<b>FRONT FINAL DRIVE</b> .....	212
Removal and Installation .....	194	Removal and Installation .....	212
<b>UNIT DISASSEMBLY AND ASSEMBLY</b> ..	197	<b>UNIT DISASSEMBLY AND ASSEMBLY</b> ..	214
<b>PROPELLER SHAFT</b> .....	197	<b>FRONT FINAL DRIVE</b> .....	214
Disassembly and Assembly .....	197	Disassembly and Assembly .....	214
<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	199	<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	230
<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	199	<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....	230
General Specification .....	199	General Specification .....	230
Snap Ring .....	200	Inspection and Adjustment .....	230
<b>FRONT FINAL DRIVE: M205</b>		<b>REAR FINAL DRIVE: R230</b>	
<b>PRECAUTION</b> .....	201	<b>PRECAUTION</b> .....	232
<b>PRECAUTIONS</b> .....	201	<b>PRECAUTIONS</b> .....	232
Caution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER" .....	201	Caution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER" .....	232
Caution Necessary for Steering Wheel Rota- tion After Battery Disconnect .....	201	Caution Necessary for Steering Wheel Rota- tion After Battery Disconnect .....	232
Caution for Servicing Front Final Drive .....	202	Caution for Servicing Rear Final Drive .....	233
<b>PREPARATION</b> .....	203	<b>PREPARATION</b> .....	234
<b>PREPARATION</b> .....	203	<b>PREPARATION</b> .....	234
Special Service Tool .....	203	Special Service Tool .....	234
Commercial Service Tool .....	205	Commercial Service Tool .....	238
<b>SYMPTOM DIAGNOSIS</b> .....	206	<b>SYMPTOM DIAGNOSIS</b> .....	239
		<b>NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING</b> .....	239
		NVH Troubleshooting Chart .....	239

<b>DESCRIPTION</b> .....	240	<b>UNIT REMOVAL AND INSTALLATION</b> ...	247	A
Cross-Sectional View .....	240	<b>REAR FINAL DRIVE</b> .....	247	
<b>PERIODIC MAINTENANCE</b> .....	241	Removal and Installation .....	247	B
<b>DIFFERENTIAL GEAR OIL</b> .....	241	<b>UNIT DISASSEMBLY AND ASSEMBLY</b> .	250	
Changing Differential Gear Oil .....	241	<b>REAR FINAL DRIVE</b> .....	250	C
Checking Differential Gear Oil .....	241	Disassembly and Assembly .....	250	
<b>REMOVAL AND INSTALLATION</b> .....	242	<b>SERVICE DATA AND SPECIFICATIONS</b>		
<b>FRONT OIL SEAL</b> .....	242	<b>(SDS)</b> .....	267	DLN
Removal and Installation .....	242	<b>SERVICE DATA AND SPECIFICATIONS</b>		
<b>SIDE OIL SEAL</b> .....	244	<b>(SDS)</b> .....	267	E
Removal and Installation .....	244	General Specification .....	267	
<b>CARRIER COVER</b> .....	246	Inspection and Adjustment .....	267	F
Removal and Installation .....	246			G
				H
				I
				J
				K
				L
				M
				N
				O
				P


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000011290776

WORK FLOW

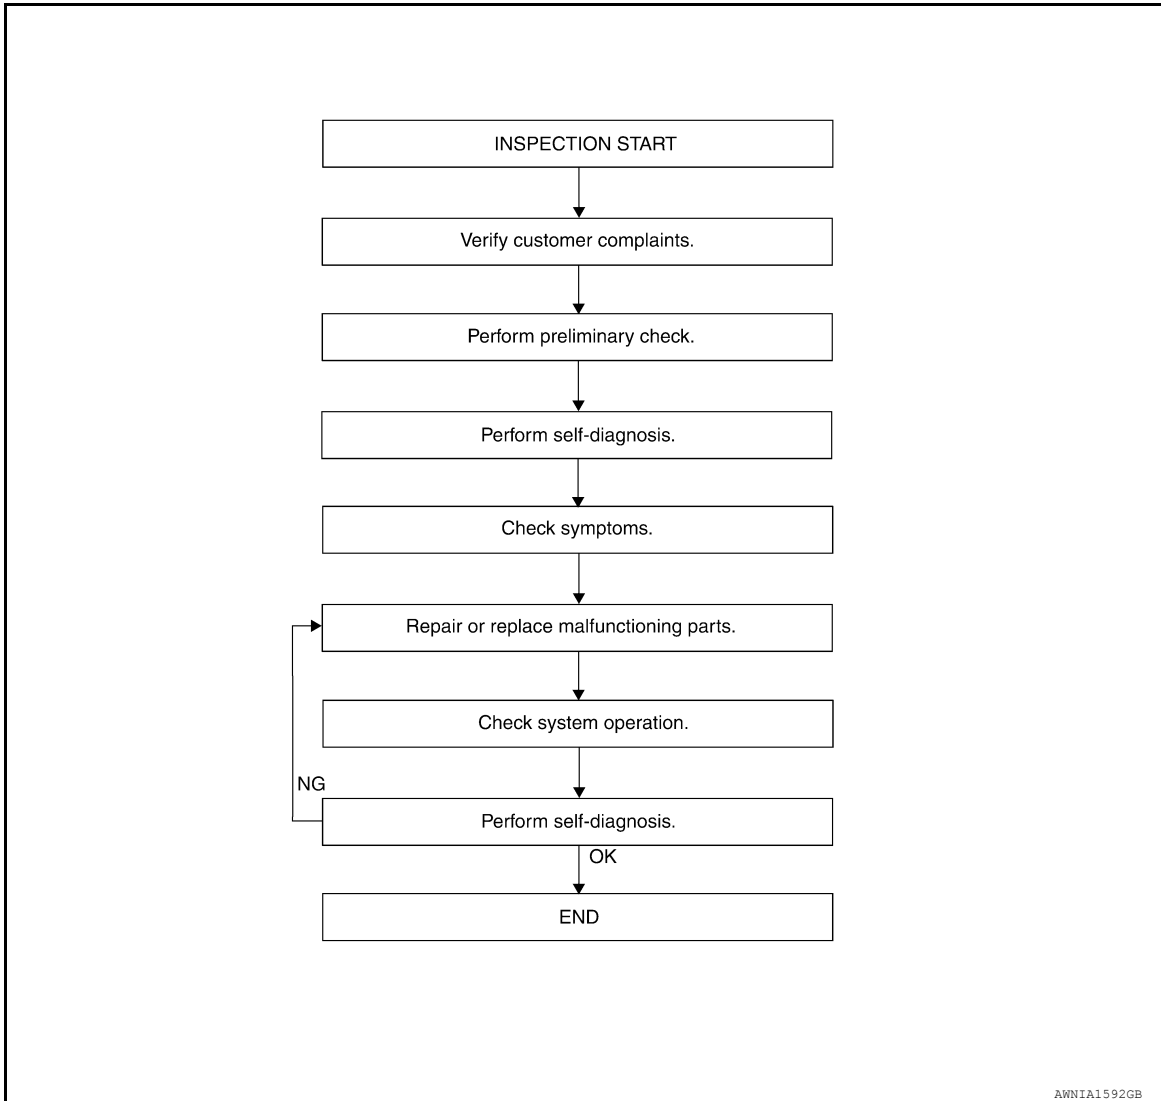

DETAILED FLOW

### 1. CUSTOMER INFORMATION

Interview the customer to obtain detailed information about the symptom.

>> GO TO 2

### 2. PRELIMINARY CHECK

Perform preliminary check. Refer to [DLN-7, "Preliminary Check"](#).

>> GO TO 3

### 3. SELF-DIAGNOSIS

Perform self-diagnosis. Refer to [DLN-18, "CONSULT Function \(ALL MODE AWD/4WD\)"](#).

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[ATX14B]

>> GO TO 4

## 4.SYMPTOM

Check for symptoms. Refer to [DLN-101. "Symptom Table"](#).

>> GO TO 5

## 5.MALFUNCTIONING PARTS

Repair or replace the applicable parts.

>> GO TO 6

## 6.SYSTEM OPERATION

Check system operation.

>> GO TO 7

## 7.SELF-DIAGNOSIS

Perform self-diagnosis.

Are any DTCs displayed?

- YES >> GO TO 5  
NO >> Inspection End

### Preliminary Check

INFOID:000000011290777

### TRANSFER FLUID CHECK

Check for leaks and fluid level. Refer to [DLN-127. "Inspection"](#).

### PREPARATION FOR ROAD TEST

The purpose of the test is to determine overall performance of transfer case and analyze causes of malfunctions.

When a malfunction is found in any part of transfer, perform the road test to locate the malfunction area and repair the malfunction parts.

The road test consists of the following three parts.

1. CHECK BEFORE ENGINE IS STARTED
2. CHECK AT IDLE
3. CRUISE TEST

#### ROAD TEST PROCEDURE

1. Check before engine is started



2. Check at idle



3. Cruise test

SMT089D

### CHECK BEFORE ENGINE IS STARTED

#### 1.CHECK 4WD SHIFT INDICATOR LAMP

1. Park vehicle on flat surface.
2. Turn ignition switch to OFF position.
3. Move A/T selector lever to P position.
4. Set 4WD shift switch to 2WD position.
5. Turn ignition switch to ON position. (Do not start engine.)

Does 4WD shift indicator lamp turn ON for approximately 1 second?

- YES >> GO TO 2.  
NO >> GO TO [DLN-102. "Diagnosis Procedure"](#).

#### 2.CHECK 4WD WARNING LAMP

1. Turn ignition switch to OFF position.
2. Move A/T selector lever to P position.
3. Set 4WD shift switch to 2WD position.
4. Turn ignition switch to ON position. (Do not start engine.)

# DIAGNOSIS AND REPAIR WORKFLOW

[ATX14B]

< BASIC INSPECTION >

Does 4WD warning lamp turn ON?

- YES >> GO TO CHECK AT IDLE.
- NO >> GO TO [DLN-104. "Diagnosis Procedure"](#).

CHECK AT IDLE

## 1. CHECK 4WD SHIFT INDICATOR LAMP

1. Park vehicle on flat surface and engage the parking brake.
2. Turn ignition switch to OFF position.
3. Move A/T selector lever to P position.
4. Set 4WD shift switch to 2WD position.
5. Start engine.

Does 4WD shift indicator lamp turn ON?

- YES >> GO TO 3.
- NO >> GO TO 2.

## 2. CHECK 4WD WARNING LAMP

Check 4WD warning lamp state.

Is 4WD warning lamp turned ON?

- YES >> Perform the self-diagnosis. Refer to [DLN-18. "CONSULT Function \(ALL MODE AWD/4WD\)"](#).
- NO >> Refer to [DLN-106. "Diagnosis Procedure"](#).

## 3. CHECK 4WD SHIFT INDICATOR AND 4LO INDICATOR OPERATION

1. Brake pedal depressed.
2. Move A/T selector lever to N position.
3. Set 4WD shift switch to 2WD, AUTO, 4H, 4LO, 4H, AUTO and 2WD in order. (Stay at each switch position for at least 1 second.)

Does 4WD shift indicator and 4LO indicator lamps change properly and buzzer sound?

- YES >> GO TO CRUISE TEST.
- NO >> GO TO [DLN-106. "Diagnosis Procedure"](#).

4WD shift switch	4WD shift indicator lamp	4LO indicator lamp	Buzzer sound
2WD		4LO OFF	
	↓		"Pip"
AUTO		4LO OFF	
	↓		"Pip"
4H		4LO OFF	
	↓	Lamp flasher	"Pip"
4LO		4LO ON	
	↓	Lamp flasher	"Pip"
4H		4LO OFF	
	↓		"Pip"
AUTO		4LO OFF	
	↓		"Pip"
2WD		4LO OFF	

WDIA0136E

CRUISE TEST

## 1. CHECK INPUT SIGNAL

1. Warm up engine to normal operating temperature.
2. Park vehicle on flat surface.
3. Move A/T selector lever to P position.
4. Set 4WD shift switch to AUTO position.
5. Start engine.
6. Drive vehicle for at least 30 seconds at a speed higher than 20 km/h (12 MPH).

Is 4WD warning lamp turned ON?

- On steady>>Perform the self-diagnosis. Refer to [DLN-18. "CONSULT Function \(ALL MODE AWD/4WD\)"](#).



# DIAGNOSIS AND REPAIR WORKFLOW

[ATX14B]

## < BASIC INSPECTION >

Flash rapidly>>Refer to [DLN-110, "Diagnosis Procedure"](#).

Flash slowly>>Refer to [DLN-111, "Diagnosis Procedure"](#).

NO >> GO TO 2.

A

## 2.CHECK TIGHT CORNER BRAKING SYMPTOM (1)

1. Set 4WD shift switch to AUTO position.

2. Drive vehicle at speed lower than 20 km/h (12 MPH) with steering wheel fully turned.

B

Does tight corner braking symptom occur?

YES >> GO TO [DLN-112, "Diagnosis Procedure"](#).

NO >> GO TO 3.

C

## 3.CHECK TIGHT CORNER BRAKING SYMPTOM (2)

1. Set 4WD shift switch to 4H position.

2. Drive vehicle at speed lower than 20 km/h (12 MPH) with steering wheel fully turned.

DLN

Does tight corner braking symptom occur?

YES >> Inspection End.

NO >> GO TO [DLN-112, "Diagnosis Procedure"](#).

E

F

G

H

I

J

K

L

M

N

O


P

SYSTEM DESCRIPTION

4WD SYSTEM

System Diagram

INFOID:0000000011290778

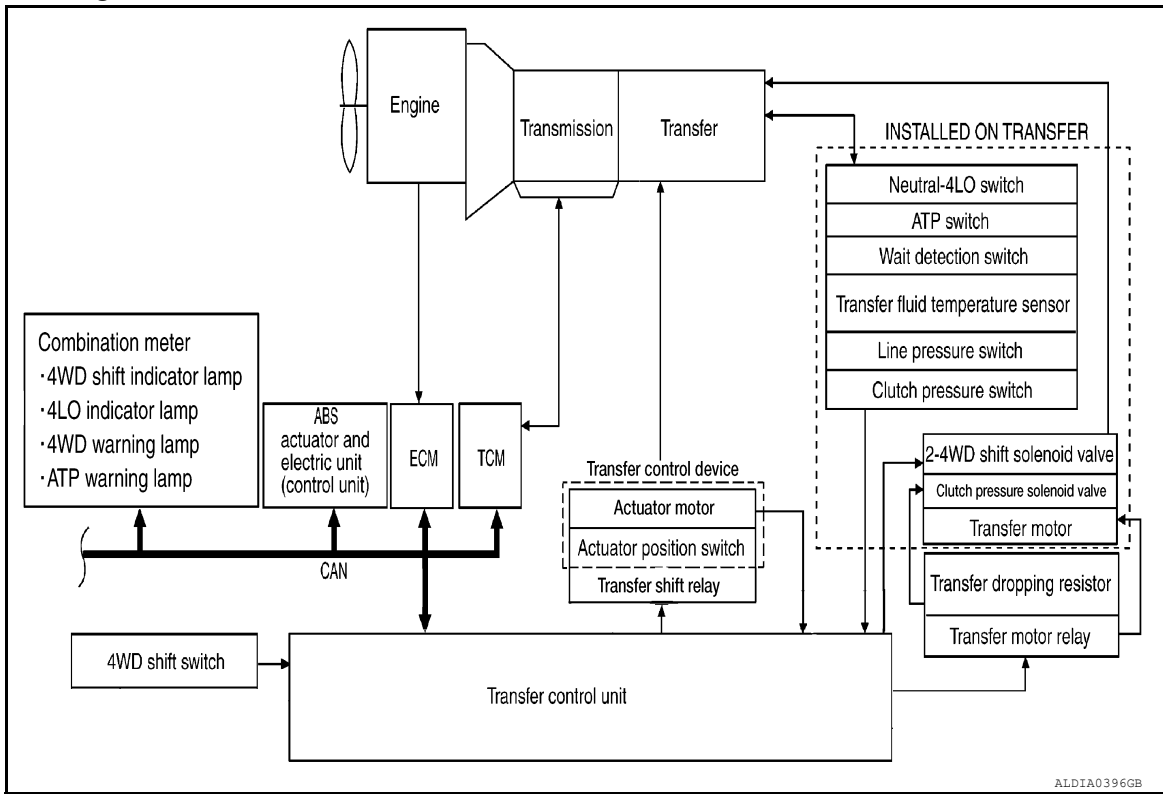

COMPONENT DESCRIPTION

Components	Function
Transfer control unit	Controls transfer control device, control valves and shifts between 2WD/4WD and 4H/4LO.
Transfer control device	Integrates actuator motor and actuator position switch.
2-4WD shift solenoid valve	Controls oil pressure and allows shifting between 2WD and 4WD.
Clutch pressure solenoid valve	Controls oil pressure and distributes torque between front and rear tires.
Line pressure switch	Detects line pressure.
Clutch pressure switch	Detects clutch pressure.
Transfer fluid temperature sensor	Detects transfer fluid temperature.
Actuator motor	Moves shift rods when signaled by transfer control unit.
Actuator position switch	Detects actuator motor position.
Wait detection switch	Detects whether or not 4WD lock gear is locked.
4LO switch	Detects if transfer case is in 4LO.
ATP switch	Detects if transfer case is in neutral.
4WD shift switch	Allows driver to select from 2WD/4WD, 4H/4LO and AUTO.
ABS actuator and electric unit (control unit)	Transmits vehicle speed signal via CAN communication to transfer control unit.
TCM	Transmits the following signal via CAN communication to transfer control unit. <ul style="list-style-type: none"> <li>• Output shaft revolution signal</li> <li>• A/T position indicator signal (transmission range switch signal)</li> </ul>

# 4WD SYSTEM

< SYSTEM DESCRIPTION >

[ATX14B]

Components	Function
ECM	Transmits the following signals via CAN communication to transfer control unit. <ul style="list-style-type: none"><li>• Engine speed signal</li><li>• Accelerator pedal position signal</li></ul>
Combination meter	Receives the following signals via CAN communication from transfer control unit. <ul style="list-style-type: none"><li>• 4WD warning lamp signal</li><li>• ATP warning lamp signal</li><li>• 4WD shift indicator signal</li><li>• 4LO indicator signal</li></ul>

A  
B  
C

## System Description

INFOID:000000011290779

DLN


## CONTROL SYSTEM

E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# 4WD SYSTEM

< SYSTEM DESCRIPTION >

[ATX14B]

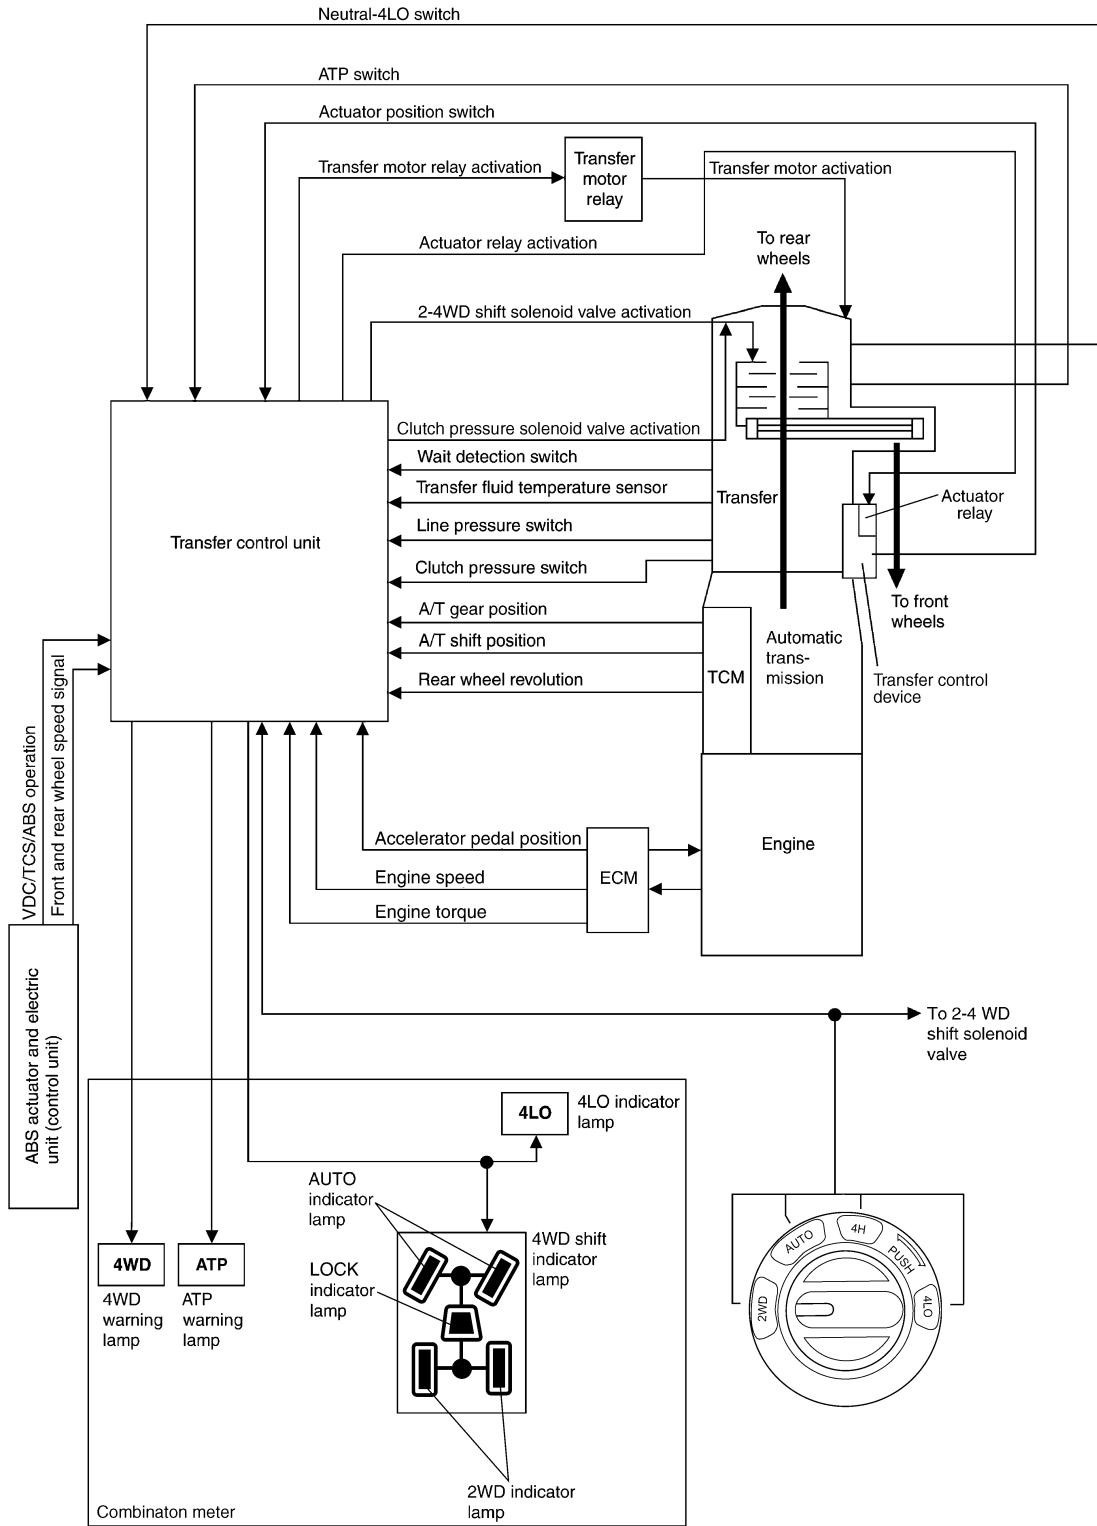


ALDIA0397GB

ALL-MODE 4WD Transfer Basic Control


# 4WD SYSTEM

< SYSTEM DESCRIPTION >

[ATX14B]

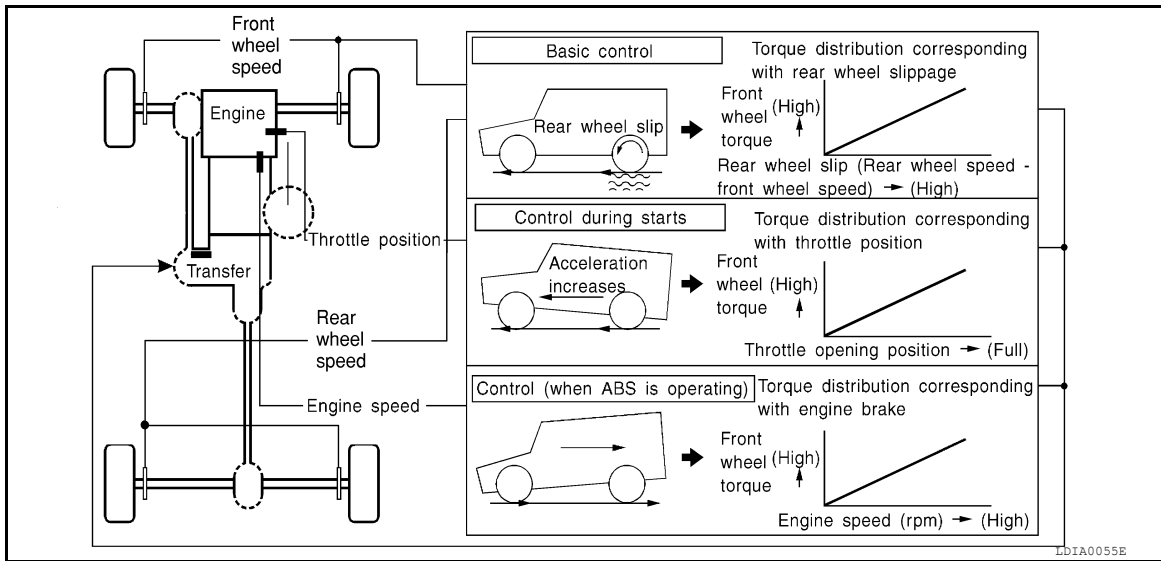

## Hydraulic Control Circuits

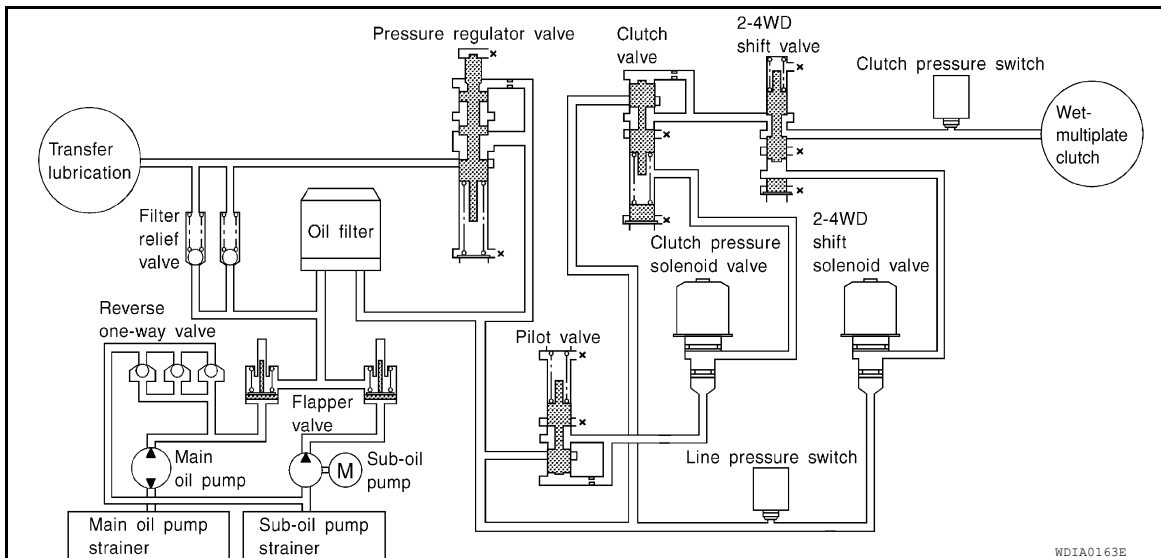

## TRANSFER CONTROL UNIT

- Transfer control unit controls transfer control device and it directs shifts from 4H-4LO and 2WD-4WD.
- Self-diagnosis can be done.

## TRANSFER SHIFT HIGH AND LOW RELAYS

Transfer shift high and low relays apply power supply to transfer control device (actuator motor).

## TRANSFER SHUT OFF RELAY

Transfer shut off relay applies power supply to transfer motor relay.

## 4WD SHIFT SWITCH AND INDICATOR LAMPS

### 4WD Shift Switch

Able to select from 2WD, AUTO, 4H or 4LO.

### 4WD Shift Indicator Lamp

- Displays driving conditions selected by 4WD shift switch with 2WD, AUTO and 4H indicators while engine is running. (When 4WD warning lamp is turned on, all 4WD shift indicator lamps are turned off.)
- Turns ON for approximately 1 second when ignition switch is turned ON, for purpose of lamp check.

### 4LO Indicator Lamp

# 4WD SYSTEM

[ATX14B]

## < SYSTEM DESCRIPTION >

- Displays 4LO condition while engine is running. 4LO indicator lamp flashes if transfer gear does not shift completely under 2WD, AUTO, 4H⇔4LO. (When 4WD warning lamp is turned on, 4LO indicator lamp is turned off.)
- Turns ON for approximately 1 second when ignition switch is turned ON, for purpose of lamp check.

### 4WD WARNING LAMP

Turns on or flashes when there is a malfunction in 4WD system.

Also turns on when ignition switch is turned ON, for purpose of lamp check. Turns OFF approximately 1 second after the engine starts if system is normal.

#### 4WD Warning Lamp Indication

Condition	4WD warning lamp
System normal	OFF
Lamp check	Turns ON when ignition switch is turned ON. Turns OFF after engine start.
4WD system malfunction	ON
During self-diagnosis	Flashes malfunction mode.
Large difference in diameter of front/rear tires	Flashes slow (1 flash / 2 seconds) (Continues to flash until the ignition switch is turned OFF)
High fluid temperature in transfer case	Flashes rapidly (2 flashes / 1 second) (Continues to flash until fluid temperature returns to normal)

### ATP WARNING LAMP

When the A/T selector lever is in P position, the vehicle may move if the transfer case is in neutral. ATP warning lamp is turned on to indicate this condition to the driver.

### LINE PRESSURE SWITCH

- With the transfer system design, control of the oil pressure provides the transmission of drive torque to the front wheels. The main pressure to control the oil pressure is referred to as the line pressure.
- The line pressure switch determines whether or not adequate line pressure has built up under different operating conditions.
- The line pressure switch closes when line pressure is produced.
- The line pressure switch senses line pressure abnormalities and turns the 4WD warning lamp ON.

### CLUTCH PRESSURE SWITCH

- The clutch pressure switch determines whether or not adequate clutch pressure has built up under different operating conditions.
- The clutch pressure switch closes when clutch pressure is produced.
- The clutch pressure switch senses clutch pressure abnormalities and turns the 4WD warning lamp ON.

### WAIT DETECTION SWITCH

- The wait detection switch operates when there is circulating torque produced in the propeller shaft (L→H) or when there is a phase difference between 2-4 sleeve and clutch drum (H→L). After the release of the circulating torque, the wait detection switch helps provide the 4WD lock gear (clutch drum) shifts. A difference may occur between the operation of the 4WD shift switch and actual drive mode. At this point, the wait detection switch senses an actual drive mode.
- The wait detection switch operates as follows.
  - 4WD lock gear (clutch drum) locked: ON
  - 4WD lock gear (clutch drum) released: OFF
- The wait detection switch senses an actual drive mode and the 4WD shift indicator lamp indicates the vehicle drive mode.

### ATP SWITCH

ATP switch detects if transfer case is in neutral by the position of the L-H shift fork.

#### NOTE:

Transfer case may be in neutral when shifting between 4H-4LO.

### NEUTRAL-4LO SWITCH

The neutral-4LO switch detects that transfer gear is in neutral or 4LO (or shifting from neutral to 4LO) condition by L-H shift fork position.

# 4WD SYSTEM

< SYSTEM DESCRIPTION >

[ATX14B]

## TRANSFER FLUID TEMPERATURE SENSOR

The transfer fluid temperature sensor detects the transfer fluid temperature and sends a signal to the transfer control unit.

## TRANSFER MOTOR

- The transfer motor drives the sub-oil pump to provide proper lubrication and oil pressure control when the vehicle is at standstill, during low-speed operations or is being driven in reverse.
- The main oil pump is operated by the driving force of the mainshaft. In other words, sufficient oil pressure buildup does not occur when the vehicle is at standstill or during low-speed operations. While the vehicle is being driven in reverse, the main oil pump rotates in the reverse direction. Therefore the main oil pump does not discharge oil pressure. During any of the above vehicle operations, the transfer motor drives the sub-oil pump to compensate for insufficient oil pressure.
- The transfer motor operates as follows:
  - The motor relay turns OFF in the 2WD mode.
  - The motor relay operates as described in the table below in modes other than the 2WD mode.
- 4WD shift switch, transmission range switch, Neutral-4LO switch, vehicle speed sensor and throttle position sensor are used in conjunction with the transfer motor.

Transfer Motor Relay Operation

4WD shift switch	A/T selector lever position	Vehicle speed (VSS)	Accelerator pedal position	Motor relay drive command	
2WD	—	—	—	OFF	
4H (LOCK) and 4LO	N position	0	—	ON	
	P position	0	0 - 0.07/8	OFF*	
			0.07/8 - 1/8	HOLD	
			1/8 - MAX	ON	
	Other than R position	0 < VSS ≤ 50 km/h (31 MPH) 50 km/h (31 MPH) < VSS < 55 km/h (34 MPH) 55 km/h (34 MPH) ≤ VSS	—	ON	
				HOLD	
OFF					
R position	—	—	—	ON	
AUTO	R position	—	—	ON	
	P or N position	0	0 - 0.07/8	OFF*	
			0.07/8 - 1/8	HOLD	
			1/8 - MAX	ON	
			0 < VSS ≤ 50 km/h (31 MPH) 50 km/h (31 MPH) < VSS < 55 km/h (34 MPH) 55 km/h (34 MPH) ≤ VSS	—	ON
					HOLD
					OFF
	Other than R, P and N position	0 < VSS ≤ 50 km/h (31 MPH) 50 km/h (31 MPH) < VSS < 55 km/h (34 MPH) 55 km/h (34 MPH) ≤ VSS	—	ON	
				HOLD	
OFF					

\*: After 2.5 seconds have elapsed.

## CLUTCH PRESSURE SOLENOID VALVE

The clutch pressure solenoid valve distributes front and rear torque in AUTO mode.

## 2-4WD SHIFT SOLENOID VALVE

The 2-4WD shift solenoid valve operates to apply oil pressure to the wet-multiplate clutch, depending on the drive mode. The driving force is transmitted to the front wheels through the clutch so the vehicle is set in the 4WD mode. Setting the vehicle in the 2WD mode requires no pressure buildup. In other words, pressure force applied to the wet-multiplate clutch becomes zero.

## TRANSFER CONTROL DEVICE

Integrates actuator motor and actuator position switch.

# 4WD SYSTEM

[ATX14B]

## < SYSTEM DESCRIPTION >

### Actuator Motor


Moves shift rods when signaled by transfer control unit.

### Actuator Position Switch

Detects actuator motor position and then sends signal to transfer control unit.

## Component Parts Location

INFOID:000000011290780

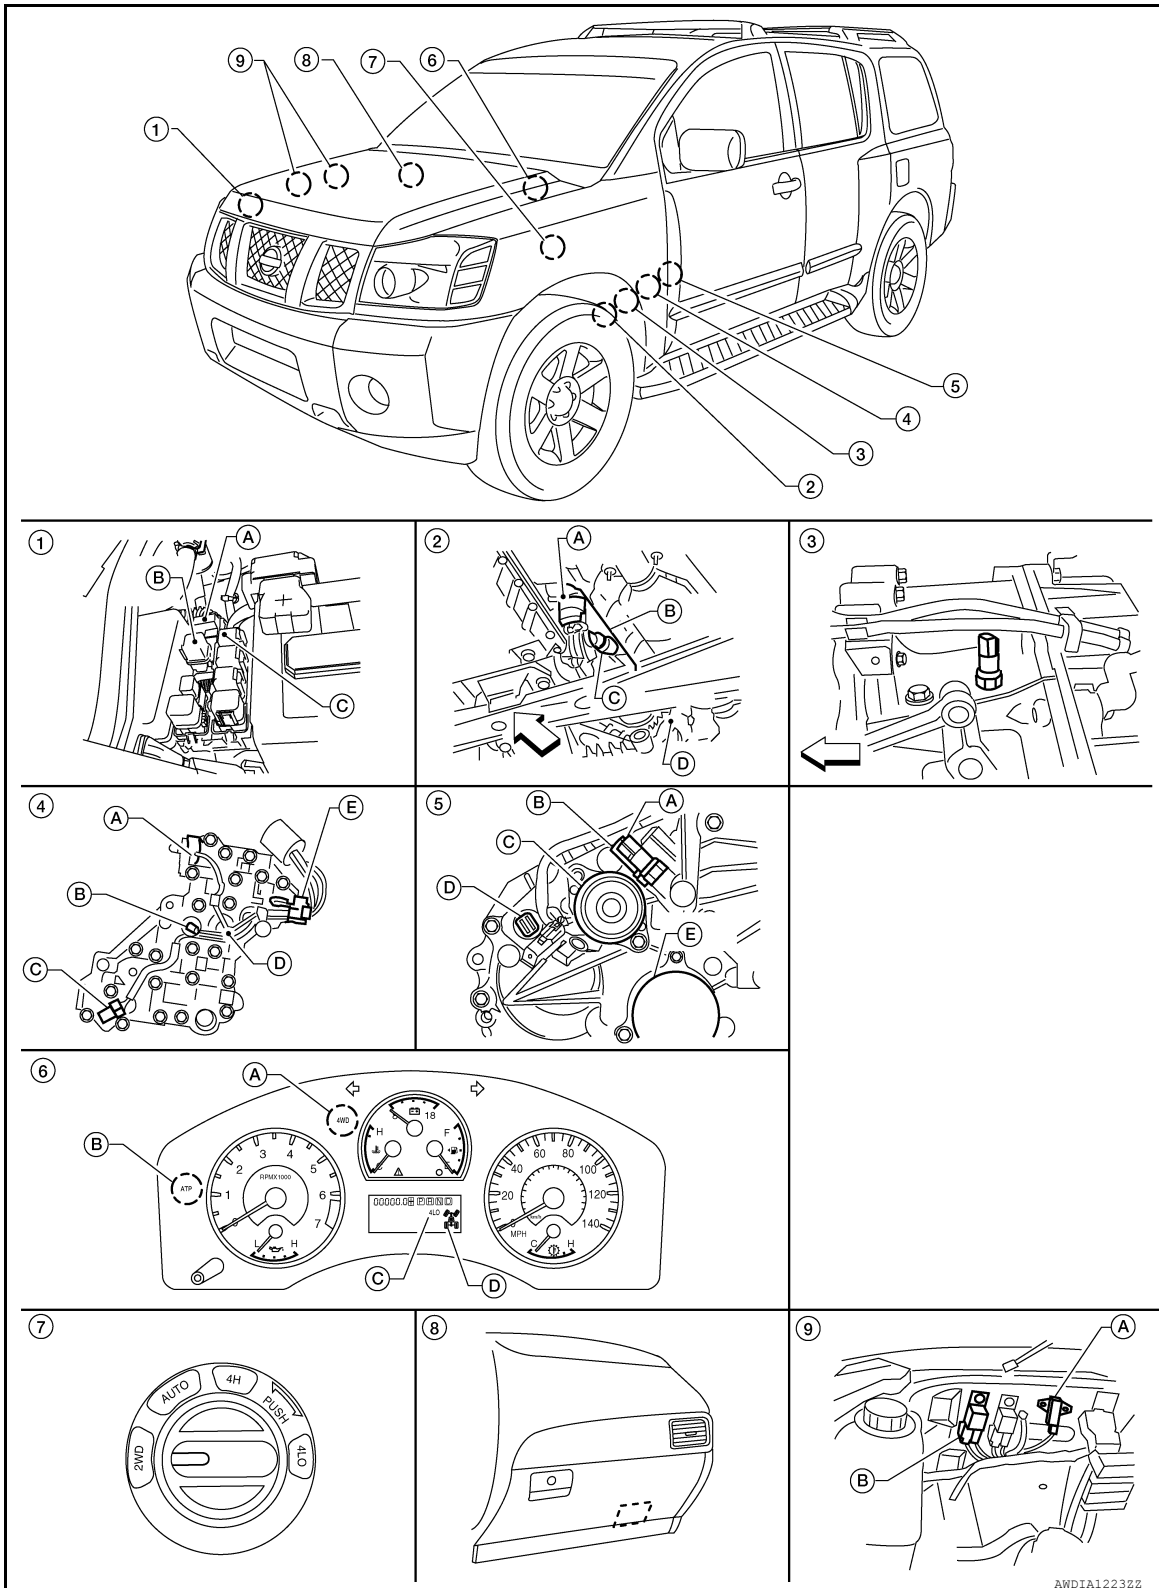

AWDIA12232Z



# 4WD SYSTEM

< SYSTEM DESCRIPTION >

[ATX14B]

- |                                                                                                                                                                                                                               |                                                                                                                                       |                                                                                                                                |            |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|------------|
| 1. A: Transfer shut off relay E69<br>B: Transfer shift low relay E47<br>C: Transfer shift high relay E46                                                                                                                      | 2. A: Actuator<br>B: Transfer control device F58<br>C: Actuator lever<br>D: Transfer case                                             | 3. Wait detection switch F59<br>(View with transfer case removed)                                                              | A          |
| 4. A: Clutch pressure switch<br>B: Line pressure switch<br>C: Transfer fluid temperature sensor<br>D: 2-4WD shift solenoid valve<br>E: Clutch pressure solenoid valve<br>(View with control valve removed from transfer case) | 5. A: Neutral-4LO switch F60<br>B: ATP switch F55<br>C: Transfer motor F57<br>D: Transfer terminal cord assembly F56<br>E: Oil filter | 6. Combination meter M24<br>A: 4WD warning lamp<br>B: ATP warning lamp<br>C: 4LO indicator lamp<br>D: 4WD shift indicator lamp | B<br>C     |
| 7. 4WD shift switch M141                                                                                                                                                                                                      | 8. Transfer control unit E142, E143                                                                                                   | 9. A: Transfer dropping resistor E135<br>B: Transfer motor relay E153, E154<br>(View with battery removed)                     | <b>DLN</b> |

## CAN Communication

INFOID:000000011290781

Refer to [LAN-4, "System Description"](#).

E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# DIAGNOSIS SYSTEM (TRANSFER CONTROL UNIT)

< SYSTEM DESCRIPTION >

[ATX14B]

## DIAGNOSIS SYSTEM (TRANSFER CONTROL UNIT)

### CONSULT Function (ALL MODE AWD/4WD)

INFOID:000000011290782

#### FUNCTION

CONSULT can display each diagnostic item using the diagnostic test modes shown following.

Diagnostic Mode	Description
Self Diagnostic Result	Displays transfer control unit self-diagnosis results.
Data Monitor	Displays transfer control unit input/output data in real time.
Work Support	Supports inspections and adjustments. Commands are transmitted to the transfer control unit for setting the status suitable for required operation, input/output signals are received from the transfer control unit and received data is displayed.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.
ECU Identification	Transfer control unit part number can be read.

#### SELF DIAGNOSTIC RESULT MODE

##### Operation Procedure

1. Connect CONSULT.
2. With engine at idle, touch SELF-DIAG RESULTS.  
Display shows malfunction experienced since the last erasing operation.

##### NOTE:

The details for TIME are as follows:

- 0: Error currently detected with transfer control unit.
- Except for 0: Error detected in the past and memorized with transfer control unit.  
Detects frequency of driving after DTC occurs (frequency of turning ignition switch ON/OFF).

##### How to Erase Self-diagnostic Results

1. Perform applicable inspection of malfunctioning item and then repair or replace.
2. Start engine and select SELF-DIAG RESULTS mode for ALL MODE AWD/4WD with CONSULT.
3. Touch ERASE on CONSULT screen to erase DTC memory.

##### **CAUTION:**

**If memory cannot be erased, perform applicable diagnosis.**

#### ⊗ SELF-DIAGNOSTIC PROCEDURE (WITHOUT CONSULT)

##### Description

If the engine starts when there is a malfunction in the 4WD system, the 4WD warning lamp turns ON or flickers in the combination meter. When the system functions properly, the warning lamp turns ON when the ignition switch is turned to ON, and it turns OFF after engine starts. To locate the cause of a malfunction, start the self-diagnosis function. The 4WD warning lamp in the combination meter will indicate the malfunction area by flashing according to the self-diagnostic results. Refer to [DLN-87, "DTC Index"](#).

##### Diagnostic Procedure

1. Warn up engine.
2. Move A/T selector lever to P position.
3. Turn 4WD shift switch to 2WD position.
4. Turn ignition switch ON and OFF at least twice, and then turn ignition switch OFF.
5. Turn 4WD shift switch to AUTO position.
6. Turn ignition switch ON. (Do not start engine.)
7. 4WD warning lamp ON.
8. Move A/T selector lever to R position.
9. Turn 4WD shift switch to 2WD, AUTO and 2WD in order.
10. Move A/T selector lever to D position.
11. Turn 4WD shift switch to 4H, AUTO and 4H in order.


# DIAGNOSIS SYSTEM (TRANSFER CONTROL UNIT)

[ATX14B]

## < SYSTEM DESCRIPTION >

12. Move A/T selector lever to N position.
13. Turn 4WD shift switch to AUTO position.
14. Move A/T selector lever to P position.
15. Read the flickering of 4WD warning lamp.

Self-diagnosis example

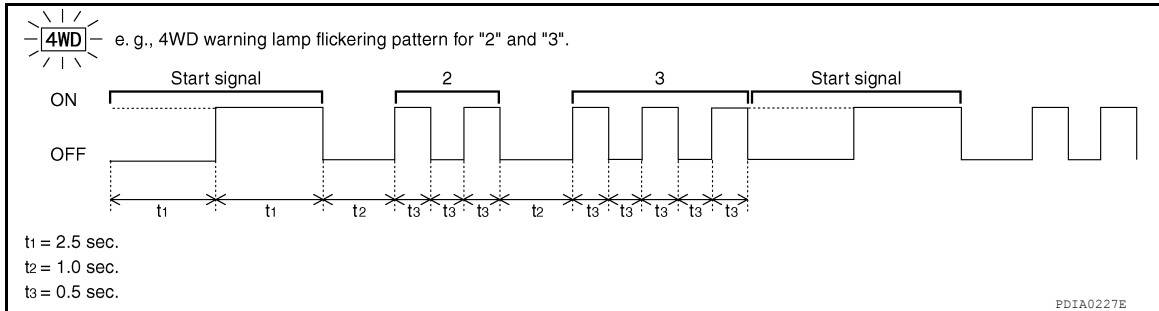

## ERASE SELF-DIAGNOSIS

- In order to make it easier to find the cause of hard-to-duplicate malfunctions, malfunction information is stored into the control unit as necessary during use by the user. This memory is not erased no matter how many times the ignition switch is turned ON and OFF.
- However, this information is erased by turning ignition switch OFF after performing self-diagnostics or by erasing the memory using the CONSULT.

## DATA MONITOR MODE

Operation Procedure

1. Connect CONSULT.
2. Touch DATA MONITOR.
3. Select from SELECT MONITOR ITEM, screen of data monitor mode is displayed.

### NOTE:

**When malfunction is detected, CONSULT performs REAL-TIME DIAGNOSIS.**

**Also, any malfunction detected while in this mode will be displayed at real time.**

Display Item List

×: Standard    -: Not applicable

Monitored item (Unit)	Monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
VHCL/S SEN-FR [km/h] or [mph]	×	-	×	Wheel speed calculated by ABS actuator and electric unit (control unit). Signal input with CAN communication line.
VHCL/S SEN-RR [km/h] or [mph]	×	-	×	Wheel speed calculated by TCM. Signal input with CAN communication line.
ENGINE SPEED [rpm]	×	-	×	Engine speed calculated by ECM. Signal input with CAN communication line.
THRTL POS SEN [0.0/8]	×	-	×	Accelerator pedal position (APP) sensor signal voltage is displayed. Signal input with CAN communication line.
FLUID TEMP SE [V]	×	-	×	Transfer fluid temperature sensor signal voltage is displayed.
BATTERY VOLT [V]	×	-	×	Power supply voltage for transfer control unit.
2WD SWITCH [On/Off]	×	-	×	4WD shift switch status is displayed.
AUTO SWITCH [On/Off]	×	-	×	4WD shift switch status is displayed.
LOCK SWITCH [On/Off]	×	-	×	4WD shift switch status is displayed. (LOCK means 4H of 4WD shift switch.)

# DIAGNOSIS SYSTEM (TRANSFER CONTROL UNIT)

< SYSTEM DESCRIPTION >

[ATX14B]

Monitored item (Unit)	Monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
4L SWITCH [On/Off]	×	-	×	4WD shift switch status is displayed. (4L means 4LO of 4WD shift switch.)
N POSI SW TF [On/Off]	×	-	×	Neutral-4LO switch signal status is displayed.
ATP SWITCH [On/Off]	×	-	×	ATP switch signal status is displayed.
WAIT DETCT SW [On/Off]	×	-	×	Wait detection switch status is displayed.
LINE PRES SW [On/Off]	×	-	×	Line pressure switch status is displayed.
CL PRES SW [On/Off]	×	-	×	Clutch pressure switch status is displayed.
N POSI SW AT [On/Off]	×	-	×	N position signal of transmission range switch status is displayed. Signal input with CAN communication line.
R POSI SW AT [On/Off]	×	-	×	R position signal of transmission range switch status is displayed. Signal input with CAN communication line.
P POSI SW AT [On/Off]	×	-	×	P position signal of transmission range switch status is displayed. Signal input with CAN communication line.
ABS OPER SW [On/Off]	×	-	×	ABS operation signal status is displayed. Signal input with CAN communication line.
VDC OPER SW [On/Off]	×	-	×	VDC operation signal status is displayed. Signal input with CAN communication line.
TCS OPER SW [On/Off]	×	-	×	TCS operation signal status is displayed. Signal input with CAN communication line.
THROTTLE POSI [0.0/8]	-	×	×	Throttle position status is displayed. Signal input with CAN communication line.
4WD MODE [AUTO/LOCK/2WD/4L]	-	×	×	Control status of 4WD recognized by transfer control unit. (AUTO, 4H, 2WD or 4LO)
VHCL/S COMP [km/h] or [mph]	-	×	×	Vehicle speed recognized by transfer control unit.
COMP CL TORQ [kgm]	-	×	×	Calculated torque recognized by transfer control unit.
DUTY SOLENOID [%]	-	×	×	Control value of clutch pressure solenoid.
2-4WD SOL [On/Off]	-	×	×	Output condition to 2-4WD solenoid.
2-4WD SOL MON [On/Off]	-	-	×	Check signal for transfer control unit signal output.
MOTOR RELAY [On/Off]	-	×	×	Transfer motor relay signal status is displayed.
MOTOR RLY MON [On/Off]	-	-	×	Check signal for transfer control unit signal output.
4WD FAIL LAMP [On/Off]	-	×	×	Control status of 4WD warning lamp is displayed.
2WD IND [On/Off]	-	-	×	Control status of 4WD shift indicator lamp (2WD indicator lamp) is displayed.
AUTO IND [On/Off]	-	-	×	Control status of 4WD shift indicator lamp (2WD and AUTO indicator lamp) is displayed.
LOCK IND [On/Off]	-	-	×	Control status of 4WD shift indicator lamp (2WD, AUTO and Lock indicator) is displayed.
4L IND [On/Off]	-	-	×	Control status of 4LO indicator lamp is displayed.

# DIAGNOSIS SYSTEM (TRANSFER CONTROL UNIT)

< SYSTEM DESCRIPTION >

[ATX14B]

Monitored item (Unit)	Monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
ATP IND [On/Off]	-	-	×	Control status of ATP warning lamp is displayed.
SHIFT POS SW1 [On/Off]	×	-	×	Actuator position switch 1 (Low) signal status is displayed.
SHIFT POS SW2 [On/Off]	×	-	×	Actuator position switch 2 (high) signal status is displayed.
SHIFT ACT 1 [On/Off]	-	×	×	Output condition to actuator motor (clockwise)
SHIFT AC MON1 [On/Off]	×	-	×	Check signal for transfer control unit signal output
SHIFT ACT 2 [On/Off]	-	×	×	Output condition to actuator motor (counter-clockwise)
SHIFT AC MON2 [On/Off]	×	-	×	Check signal for transfer control unit signal output
T/F F SPEED [km/h] or [mph]	×	-	×	Displayed, but do not use.
AT R SPEED [km/h] or [mph]	×	-	×	Output shaft revolution signal (output speed sensor) calculated by TCM. Signal input with CAN communication line.
AT GEAR POSI [1/2/3/4/5]	×	-	×	A/T actual gear position is displayed.

## WORK SUPPORT

When there is no malfunction with transfer and 4WD system, the following symptoms in AUTO mode may be claimed by a customer: vibration when accelerating on a low  $\mu$  road (snow-covered or icy road) or a slight shock is felt at a few hertz as if it were being pushed lightly from behind.

It is possible to deal with these symptoms by changing the CLUTCH FORCE RELEASE LIMIT VALUE. However, be careful when changing the value because it may adversely affect driving performance.

### Operation Procedure

1. Connect CONSULT.
2. Touch WORK SUPPORT.
3. Select from CLUTCH/F RLS LIM ADJ, screen of data monitor mode is displayed.

### Clutch Force Release Limit Adjustment

1. Initial CLUTCH FORCE RELEASE LIMIT value 0.3 kgm appears under CONDITION SETTING on CONSULT display.

**1.2 kg-m** : Tight corner braking symptom is alleviated.  
However, vibration may occur when accelerating on a low  $\mu$  road (icy road, etc.).

**0.3 kg-m** : Initial set value.

**0.2 kg-m** : Do not set to this value because the tight corner braking symptom will get worse.

2. Touch 1.2 on the display.
3. Display changes to NOW ADJUSTING in a short time.
4. When clutch force release limit value is set to 1.2 kgm, current value 0.3 kgm shown on display will be replaced by 1.2 kgm and ADJUSTMENT COMPLETE will appear at the same time. Clutch force release limit value setting is now complete.

# P1811 POWER SUPPLY CIRCUIT FOR TRANSFER CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## DTC/CIRCUIT DIAGNOSIS

### P1811 POWER SUPPLY CIRCUIT FOR TRANSFER CONTROL UNIT

#### Description

INFOID:000000011290783

Power supply to transfer control unit is abnormally low while driving.

#### DTC Logic

INFOID:000000011290784

#### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1811]	BATTERY VOLTAGE	Power supply voltage for transfer control unit is abnormally low while driving.	Refer to <a href="#">DLN-22</a> .

#### DTC CONFIRMATION PROCEDURE

##### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

##### Is DTC P1811 detected?

- YES >> Perform diagnosis procedure. Refer to [DLN-22. "Diagnosis Procedure"](#).  
 NO >> Inspection End.

#### Diagnosis Procedure


INFOID:000000011290785

Regarding Wiring Diagram information, refer to [DLN-91. "Wiring Diagram"](#).

##### 1. CHECK POWER SUPPLY


1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Connect transfer control unit harness connector.
3. Check voltage between transfer control unit harness connector terminals and ground.

Connector	Terminal	Voltage (Approx.)
E142	16 - Ground	0V
	22 - Ground	
E143	29 - Ground	Battery voltage
	30 - Ground	
	47 - Ground	

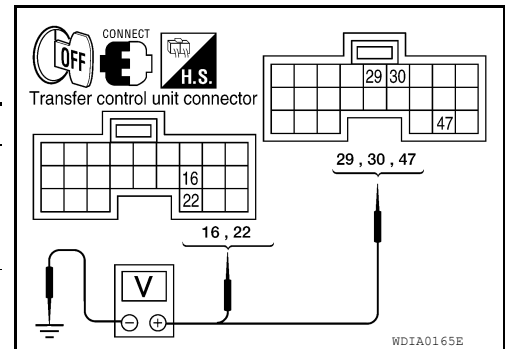

4. Turn ignition switch ON. (Do not start engine.)
5. Check voltage between transfer control unit harness connector terminals and ground.

Connector	Terminal	Voltage (Approx.)
E142	16 - Ground	Battery voltage
	22 - Ground	
E143	29 - Ground	0V
	30 - Ground	
	47 - Ground	

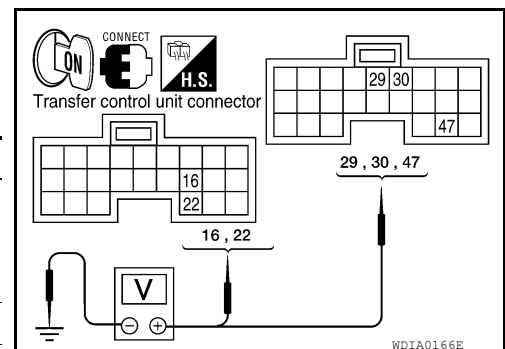

# P1811 POWER SUPPLY CIRCUIT FOR TRANSFER CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

Are the inspection results normal?

YES >> GO TO 2.

NO >> Check the following. If any items are damaged, repair or replace damaged parts.

- 10A fuses No. 26 located in fuse and fusible link box and No. 59 located in the fuse and relay box.
- 20A fuse No. 53 located in the IPDM E/R.
- Harness for short or open between battery and transfer control unit harness connector terminals 47.
- Harness for short or open between battery and transfer control unit harness connector terminal 29.
- Harness for short or open between battery and transfer shut off relay harness connector E69 terminal 1, and 5.
- Harness for short or open between transfer shut off relay harness connector E69 terminal 2 and transfer control unit harness connector terminal 30.
- Harness for short or open between transfer shut off relay harness connector E69 terminal 3 and transfer control unit harness connector terminals 16 and 22.
- Battery and ignition switch.
- Transfer shut off relay. Refer to [DLN-23, "Component Inspection"](#).

## 2. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer control unit harness connector.
3. Check continuity between transfer control unit harness connector E142 terminals 3, 6, E143 terminal 45 and ground.


**Continuity should exist.**

Also check harness for short to ground and short to power.

Are the inspection results normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

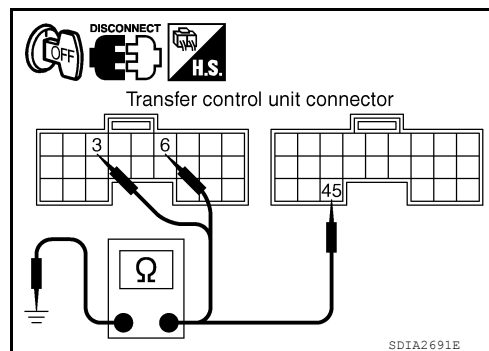

## 3. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

Are the inspection results normal?

YES >> GO TO 4.

NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

## 4. CHECK DTC

Perform the self-diagnosis, after driving a vehicle for a while.

Are the inspection results normal?

YES >> Inspection End.

NO >> Replace transfer control unit. Refer to [DLN-129, "Removal and Installation"](#).

## Component Inspection

INFOID:000000011290786

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Remove transfer shut off relay. Refer to [DLN-16, "Component Parts Location"](#).

# P1811 POWER SUPPLY CIRCUIT FOR TRANSFER CONTROL UNIT


< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

3. Apply 12V direct current between transfer shut off relay terminals 1 and 2.
4. Check continuity between relay terminals 3 and 5.

Condition	Continuity
12V direct current supply between terminals 1 and 2	Yes
OFF	No

5. If inspection results are abnormal replace the transfer shut off relay.

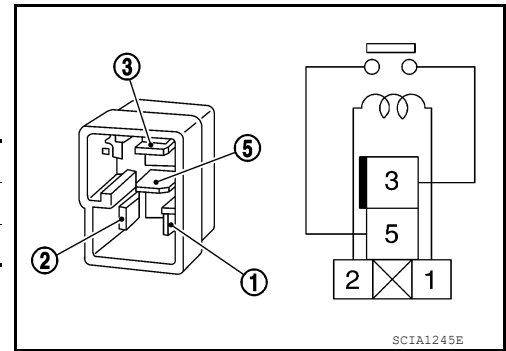



# P1802 – P1804, P1809 TRANSFER CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1802 – P1804, P1809 TRANSFER CONTROL UNIT

### Description

INFOID:000000011290787

The transfer control unit controls the transfer control device which controls shifts between AUTO, 4H and 4LO and between 2WD and 4WD. A DTC may set when any of the following occur:

- Malfunction is detected in the memory (RAM) system of transfer control unit.
- Malfunction is detected in the memory (ROM) system of transfer control unit.
- Malfunction is detected in the memory (EEPROM) system of transfer control unit.
- AD converter system of transfer control unit is malfunctioning.

### DTC Logic

INFOID:000000011290788

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1802]	CONTROL UNIT 1	Malfunction is detected in the memory (RAM) system of transfer control unit.	Refer to <a href="#">DLN-25</a> .
[P1803]	CONTROL UNIT 2	Malfunction is detected in the memory (ROM) system of transfer control unit.	
[P1804]	CONTROL UNIT 3	Malfunction is detected in the memory (EEPROM) system of transfer control unit.	
[P1809]	CONTROL UNIT 4	AD converter system of transfer control unit is malfunctioning.	

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

#### Are DTCs P1802 - P1804 or P1809 detected?

- YES >> Perform diagnosis procedure. Refer to [DLN-25. "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:000000011290789

#### 1. INSPECTION START

Do you have CONSULT?

YES or NO

- YES >> GO TO 2.  
NO >> GO TO 3.

#### 2. PERFORM SELF-DIAGNOSIS (WITH CONSULT)

##### With CONSULT

1. Turn ignition switch ON. (Do not start engine.)
2. Select SELF-DIAG RESULTS mode for ALL MODE AWD/4WD with CONSULT.
3. Touch ERASE.
4. Turn ignition switch OFF and wait at least 10 seconds.
5. Perform the self-diagnosis again.

Is the CONTROL UNIT 1 [P1802], CONTROL UNIT 2 [P1803], CONTROL UNIT 3 [P1804] or CONTROL UNIT 4 [P1809] displayed?

- YES >> Replace transfer control unit. Refer to [DLN-129. "Removal and Installation"](#).  
NO >> Inspection End.

#### 3. PERFORM SELF-DIAGNOSIS (WITHOUT CONSULT)

## P1802 – P1804, P1809 TRANSFER CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

⊗ **Without CONSULT**

1. Perform the self-diagnosis and then erase self-diagnostic results. Refer to [DLN-18. "CONSULT Function \(ALL MODE AWD/4WD\)"](#).
2. Perform the self-diagnosis again.

Do the self-diagnostic results indicate AD converter?

- YES >> Replace transfer control unit. Refer to [DLN-129. "Removal and Installation"](#).
- NO >> Inspection End.

# P1807 VEHICLE SPEED SENSOR (A/T)

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1807 VEHICLE SPEED SENSOR (A/T)

### Description

INFOID:0000000011290790

The transmission control module (TCM) transmits the output shaft revolution signal via CAN communication to Transfer control unit. DTC P1807 will set when a malfunction is detected in the output shaft revolution signal or an improper signal is input while driving.

### DTC Logic

INFOID:0000000011290791

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1807]	VHCL SPEED SEN-AT	<ul style="list-style-type: none"><li>Malfunction is detected in output shaft revolution signal that is output from TCM through CAN communication.</li><li>Improper signal is input while driving.</li></ul>	Refer to <a href="#">DLN-27</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

#### Is DTC P1807 detected?

- YES >> Perform diagnosis procedure. Refer to [DLN-27](#). "Diagnosis Procedure".  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:0000000011290792

#### 1. CHECK DTC WITH TCM

Perform self-diagnosis with TCM. Refer to [TM-34](#). "CONSULT Function (TRANSMISSION)".

#### Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system.  
NO >> GO TO 2.

#### 2. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80](#). "Reference Value".

#### Are the inspection results normal?

- YES >> GO TO 3.  
NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector.  
If any items are damaged, repair or replace damaged parts.

#### 3. CHECK DTC

Drive the vehicle and then perform self-diagnosis.

#### Are the inspection results normal?

- YES >> Inspection End.  
NO >> Perform self-diagnosis with TCM again.

# P1808 VEHICLE SPEED SENSOR (ABS)

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1808 VEHICLE SPEED SENSOR (ABS)

### Description

INFOID:000000011290793

The ABS actuator and electric unit (control unit) transmits a vehicle speed signal via CAN communication to the transfer control unit. DTC P1808 sets when a malfunction is detected in the vehicle speed signal that is output from the ABS actuator and electric unit (control unit) or an improper signal is input while driving.

### DTC Logic

INFOID:000000011290794

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1808]	VHCL SPEED SEN·ABS	<ul style="list-style-type: none"><li>Malfunction is detected in vehicle speed signal that is output from ABS actuator and electric unit (control unit) through CAN communication.</li><li>Improper signal is input while driving.</li></ul>	Refer to <a href="#">DLN-28</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

#### Is DTC P1808 displayed?

- YES >> Perform diagnosis procedure. Refer to [DLN-28, "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:000000011290795

#### 1. CHECK DTC WITH ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform self-diagnosis with ABS actuator and electric unit (control unit). Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

#### Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system.  
NO >> GO TO 2.

#### 2. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

#### Are the inspection results normal?

- YES >> GO TO 3.  
NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector.  
If any items are damaged, repair or replace damaged parts.

#### 3. CHECK DTC

Perform the self-diagnosis, after driving a vehicle for a while.

#### Are the inspection results normal?

- YES >> Inspection End.  
NO >> Perform self-diagnosis with ABS actuator and electric unit (control unit) again.

# P1810 NEUTRAL-4LO SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1810 NEUTRAL-4LO SWITCH

### Description

INFOID:0000000011290796

The neutral-4LO switch detects that the transfer case is in neutral or 4LO range. DTC P1810 will set when an improper signal from the neutral-4LO switch is input due to an open or short circuit.

### DTC Logic

INFOID:0000000011290797

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1810]	4L POSI SW TF	Improper signal from neutral-4LO switch is input due to open or short circuit.	Refer to <a href="#">DLN-29</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

#### Is DTC P1810 displayed?

- YES >> Perform diagnosis procedure. Refer to [DLN-29, "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:0000000011290798

Regarding Wiring Diagram information, refer to [DLN-91, "Wiring Diagram"](#).

#### 1. CHECK 4LO POSITION SWITCH SIGNAL

##### With CONSULT

1. Start engine.
2. Select DATA MONITOR mode for ALL MODE AWD/4WD with CONSULT.
3. Read out the value of N POSI SW TF.

Condition	Display value
4WD shift switch: 2WD, AUTO or 4H	OFF
• Vehicle stopped • Engine running • A/T selector lever N position • Brake pedal depressed 4WD shift switch: 4H to 4LO (While actuator motor is operating.)	OFF → ON
4WD shift switch: 4LO to 4H (While actuator motor is operating.)	ON → OFF
4WD shift switch: 4LO	ON

##### Without CONSULT

1. Start engine.


# P1810 NEUTRAL-4LO SWITCH

[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >

- Check voltage between transfer control unit harness connector terminal and ground.

Connector	Terminal (Wire color)	Condition	Voltage (Approx.)
E143	25 - Ground	4WD shift switch: 2WD, AUTO or 4H	Battery voltage
		4WD shift switch: 4H to 4LO (While actuator motor is operating.)	Battery voltage → 0V
		4WD shift switch: 4LO to 4H (While actuator motor is operating.)	0V → Battery voltage
		4WD shift switch: 4LO	0V

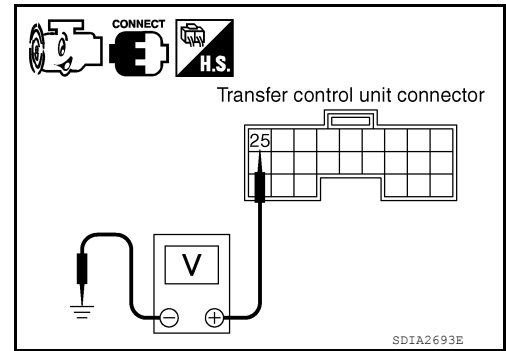

### Are inspection results normal?

- YES >> GO TO 5.  
 NO >> GO TO 2.

## 2.CHECK HARNESS BETWEEN TRANSFER CONTROL UNIT AND NEUTRAL-4LO SWITCH


- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Disconnect transfer control unit harness connector and the neutral-4LO switch harness connector.
- Check continuity between transfer control unit harness connector E143 terminal 25 and neutral-4LO switch harness connector F60 terminal 13.

### Continuity should exist.

Also check harness for short to ground and short to power.

### Are inspection results normal?

- YES >> GO TO 3.  
 NO >> Repair or replace damaged parts.

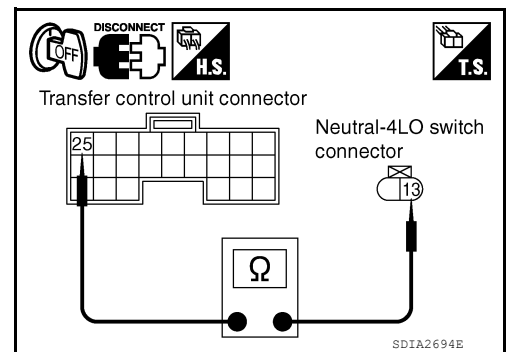

## 3.CHECK GROUND CIRCUIT


- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Disconnect neutral-4LO switch harness connector.
- Check continuity between neutral-4LO switch harness connector F60 terminal 12 and ground.

### Continuity should exist.

Also check harness for short to ground and short to power.

### Are inspection results normal?

- YES >> GO TO 4.  
 NO >> Repair open circuit or short to ground or short to power in harness or connectors.

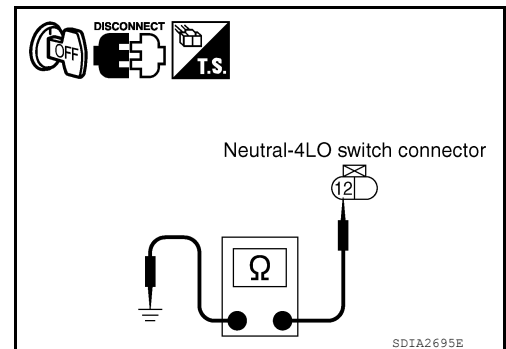

## 4.CHECK 4LO SWITCH

- Turn ignition switch OFF.
- Disconnect neutral-4LO switch harness connector.
- Remove neutral-4LO switch.

# P1810 NEUTRAL-4LO SWITCH

[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >


4. Push and release neutral-4LO switch and check continuity between neutral-4LO switch terminals 12 and 13.

Terminal	Condition	Continuity
12 - 13	Push neutral-4LO switch	Yes
	Release neutral-4LO switch	No

### Are inspection results normal?

YES >> GO TO 5.

NO >> Replace neutral-4LO switch. Refer to [DLN-16, "Component Parts Location"](#).

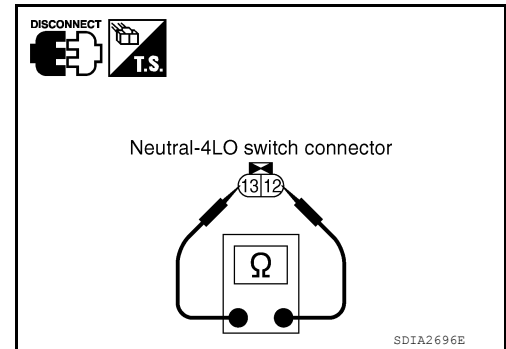

## 5. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

### Are inspection results normal?

YES >> GO TO 6.

NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

## 6. CHECK DTC

Drive the vehicle and then perform self-diagnosis.

### Are inspection results normal?

YES >> Inspection End.

NO >> Replace transfer control unit. Refer to [DLN-129, "Removal and Installation"](#).


## Component Inspection

INFOID:000000011290799

- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Disconnect neutral-4LO switch harness connector.
- Remove neutral-4LO switch. Refer to [DLN-16, "Component Parts Location"](#).
- Push and release neutral-4LO switch and check continuity between neutral-4LO switch terminals 12 and 13.

Terminal	Condition	Continuity
12 - 13	Push neutral-4LO switch	Yes
	Release neutral-4LO switch	No

5. If the inspection results are abnormal replace the neutral-4LO switch.

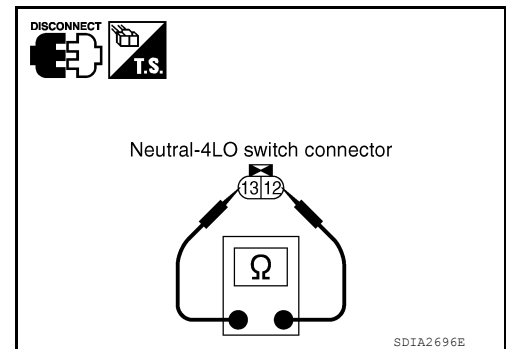

# P1813 4WD SHIFT SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1813 4WD SHIFT SWITCH

### Description

INFOID:000000011290800

The 4WD shift switch allows the driver to select AUTO, 2WD or 4WD and 4H or 4LO. DTC P1813 will set if more than two switch inputs are simultaneously detected by the transfer control unit due to a short circuit in the 4WD shift switch.

### DTC Logic

INFOID:000000011290801

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1813]	4WD MODE SW	More than two switch inputs are simultaneously detected due to short circuit of 4WD shift switch.	Refer to <a href="#">DLN-32</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

#### Is DTC P1813 displayed?

- YES >> Perform diagnosis procedure. Refer to [DLN-32. "Diagnosis Procedure"](#).  
 NO >> Inspection End.

### Diagnosis Procedure

INFOID:000000011290802

Regarding Wiring Diagram information, refer to [DLN-91. "Wiring Diagram"](#).

#### 1. CHECK 4WD SHIFT SWITCH SIGNAL


##### With CONSULT

1. Turn ignition switch ON. (Do not start engine.)
2. Select DATA MONITOR mode for ALL MODE AWD/4WD with CONSULT.
3. Read out ON/OFF switching action of the 2WD SWITCH, AUTO SWITCH, LOCK SWITCH, 4L SW with operating 4WD shift switch.

##### Without CONSULT

1. Turn ignition switch ON. (Do not start engine.)
2. Check voltage between transfer control unit harness connector terminals and ground.

Connector	Terminal	Condition	Voltage (Approx.)
E142	9 - ground	4WD shift switch: 2WD	Battery voltage
		4WD shift switch: AUTO, 4H or 4LO	0V
	18 - ground	4WD shift switch: 4H	Battery voltage
		4WD shift switch: 2WD, AUTO or 4LO	0V
	23 - ground	4WD shift switch: 4LO	Battery voltage
		4WD shift switch: 2WD, AUTO or 4H	0V
24 - ground	4WD shift switch: AUTO	Battery voltage	
	4WD shift switch: 2WD, 4H or 4LO	0V	

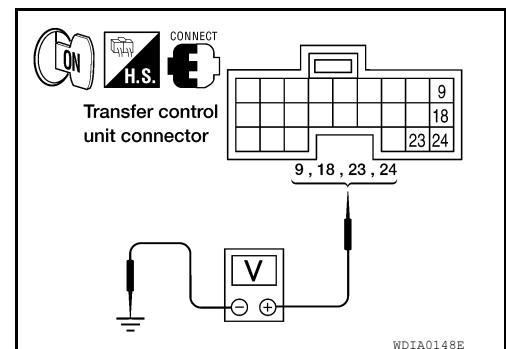

WDIA0148E



# P1813 4WD SHIFT SWITCH

[ATX14B]

< DTC/CIRCUIT DIAGNOSIS >

Are inspection results normal?

- YES >> GO TO 5.
- NO >> GO TO 2.

## 2. CHECK 4WD SHIFT SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect 4WD shift switch harness connector.
3. Check voltage between 4WD shift switch harness connector terminal 1 and ground.

Connector	Terminal	Voltage (Approx.)
M141	1 - Ground	0V

4. Turn ignition switch ON. (Do not start engine.)
5. Check voltage between 4WD shift switch harness connector terminal 1 and ground.

Connector	Terminal	Voltage (Approx.)
M141	1 - Ground	Battery voltage

Are inspection results normal?

- YES >> GO TO 3.
- NO >> Refer to [DLN-22, "Diagnosis Procedure"](#).

## 3. CHECK HARNESS BETWEEN 4WD SHIFT SWITCH AND TRANSFER CONTROL UNIT

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer control unit harness connector and the 4WD shift switch harness connector.
3. Check continuity between the following terminals.
  - Transfer control unit harness connector E142 terminal 9 and 4WD shift switch harness connector M141 terminal 2.
  - Transfer control unit harness connector E142 terminal 18 and 4WD shift switch harness connector M141 terminal 5.
  - Transfer control unit harness connector E142 terminal 23 and 4WD shift switch harness connector M141 terminal 6.
  - Transfer control unit harness connector E142 terminal 24 and 4WD shift switch harness connector M141 terminal 3.

**Continuity should exist.**

Also check harness for short to ground and short to power.

Are inspection results normal?

- YES >> GO TO 4.
- NO >> Check the following. If any items are damaged, repair or replace damaged parts.
  - Harness for short or open between battery and transfer shut off relay harness connector E69 terminal 5.
  - Power supply circuit for transfer control unit. Refer to [DLN-22, "Diagnosis Procedure"](#).

## 4. CHECK 4WD SHIFT SWITCH

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect 4WD shift switch harness connector.
3. Operate 4WD shift switch and check continuity between 4WD shift switch terminals.

Terminal	Condition	Continuity
1 - 2	4WD shift switch: 2WD	Yes
	4WD shift switch: AUTO, 4H and 4LO	No
1 - 3	4WD shift switch: AUTO	Yes
	4WD shift switch: 2WD, 4H and 4LO	No

# P1813 4WD SHIFT SWITCH

[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >

Terminal	Condition	Continuity
1 - 4	4WD shift switch: 2WD	No
	4WD shift switch: AUTO, 4H and 4LO	Yes
1 - 5	4WD shift switch: 4H	Yes
	4WD shift switch: 2WD, AUTO, and 4LO	No
1 - 6	4WD shift switch: 4LO	Yes
	4WD shift switch: 2WD, AUTO and 4H	No

### Are inspection results normal?

YES >> GO TO 5.

NO >> Replace 4WD shift switch.

## 5.CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

### Are inspection results normal?

YES >> GO TO 6.

NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

## 6.CHECK DTC

Drive the vehicle and then perform self-diagnosis.

### Are inspection results normal?

YES >> Inspection End.

NO >> Replace transfer control unit. Refer to [DLN-129, "Removal and Installation"](#).

## Component Inspection

INFOID:000000011290803

### COMPONENT INSPECTION

1. Turn ignition switch OFF. (Stay for at least 5 second.)
2. Disconnect 4WD shift switch harness connector.
3. Operate 4WD shift switch and check continuity between 4WD shift switch terminals.

Terminal	Condition	Continuity
1 - 2	4WD shift switch: 2WD	Yes
	4WD shift switch: AUTO, 4H and 4LO	No
1 - 3	4WD shift switch: AUTO	Yes
	4WD shift switch: 2WD, 4H and 4LO	No
1 - 4	4WD shift switch: 2WD	No
	4WD shift switch: AUTO, 4H and 4LO	Yes
1 - 5	4WD shift switch: 4H	Yes
	4WD shift switch: 2WD, AUTO, and 4LO	No
1 - 6	4WD shift switch: 4LO	Yes
	4WD shift switch: 2WD, AUTO and 4H	No

4. If the inspection results are abnormal replace the 4WD shift switch.

# P1814 WAIT DETECTION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1814 WAIT DETECTION SWITCH

### Description

INFOID:0000000011290804

The wait detection switch detects if the transfer case is in 4WD. DTC P1814 will set if an improper signal from the wait detection switch is input due to open or short circuit.

### DTC Logic

INFOID:0000000011290805

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1814]	4WD DETECT SWITCH	Improper signal from wait detection switch is input due to open or short circuit.	Refer to <a href="#">DLN-35</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

#### Is DTC P1814 detected?

- YES >> Perform diagnosis procedure. Refer to [DLN-35, "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:0000000011290806

Regarding Wiring Diagram information, refer to [DLN-91, "Wiring Diagram"](#).

#### 1. CHECK WAIT DETECTION SWITCH SIGNAL

##### With CONSULT

1. Start engine.
2. Select DATA MONITOR mode for ALL MODE AWD/4WD with CONSULT.
3. Read out the value of WAIT DETCT SW.

Condition	Display value
4WD shift switch: 2WD, AUTO or 4H	OFF
• Vehicle stopped • Engine running • A/T selector lever N position • Brake pedal depressed 4WD shift switch: 4H to 4LO (While actuator motor is operating.)	OFF → ON
4WD shift switch: 4LO to 4H (While actuator motor is operating.)	ON → OFF
4WD shift switch: 4LO	ON

##### Without CONSULT

1. Start engine.


# P1814 WAIT DETECTION SWITCH

[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >

- Check voltage between transfer control unit harness connector terminal and ground.

Connector	Terminal	Condition	Voltage (Approx.)
E143	43 - Ground	4WD shift switch: 2WD, AUTO or 4H	Battery voltage
		4WD shift switch: 4H to 4LO (While actuator motor is operating.)	Battery voltage → 0V
		4WD shift switch: 4LO to 4H (While actuator motor is operating.)	0V → Battery voltage
		4WD shift switch: 4LO	0V

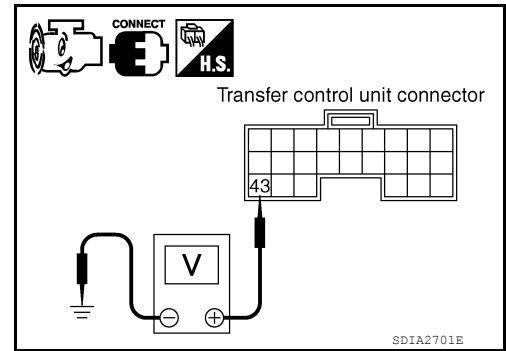

Are inspection results normal?

- YES >> GO TO 5.  
 NO >> GO TO 2.

## 2.CHECK HARNESS BETWEEN TRANSFER CONTROL UNIT AND WAIT DETECTION SWITCH


- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Disconnect transfer control unit harness connector and the wait detection switch harness connector.
- Check continuity between transfer control unit harness connector E143 terminal 43 and wait detection switch harness connector F59 terminal 10.

**Continuity should exist.**

Also check harness for short to ground and short to power.

Are inspection results normal?

- YES >> GO TO 3.  
 NO >> Repair or replace damaged parts.

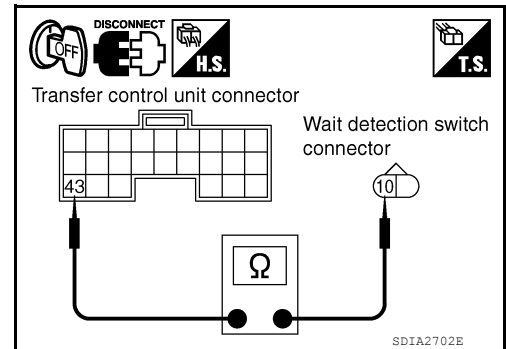

## 3.CHECK GROUND CIRCUIT


- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Disconnect wait detection switch harness connector.
- Check continuity between wait detection switch harness connector F59 terminal 11 and ground.

**Continuity should exist.**

Also check harness for short to ground and short to power.

Are inspection results normal?

- YES >> GO TO 4.  
 NO >> Repair open circuit or short to ground or short to power in harness or connectors.

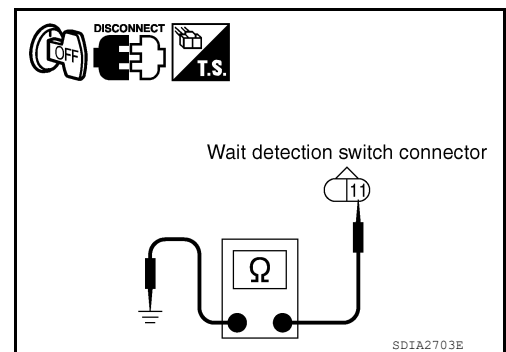

## 4.CHECK WAIT DETECTION SWITCH

- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Disconnect wait detection switch harness connector.
- Remove wait detection switch. Refer to [DLN-16, "Component Parts Location"](#).

# P1814 WAIT DETECTION SWITCH

[ATX14B]


## < DTC/CIRCUIT DIAGNOSIS >

- Push and release wait detection switch and check continuity between wait detection switch terminals 10 and 11.

Terminal	Condition	Continuity
10 - 11	Push wait detection switch	Yes
	Release wait detection switch	No

### Are inspection results normal?

- YES >> GO TO 5.  
 NO >> Replace wait detection switch.

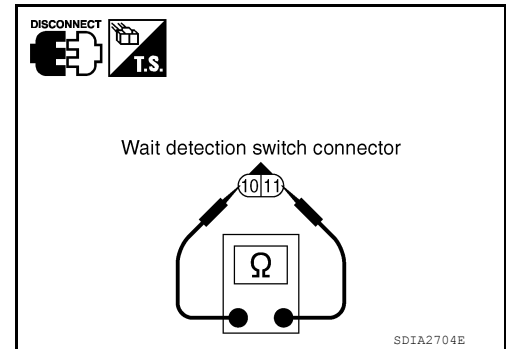

## 5. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

### Are inspection results normal?

- YES >> GO TO 6.  
 NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

## 6. CHECK DTC

Drive the vehicle and then perform self-diagnosis.

### Are inspection results normal?

- YES >> Inspection End.  
 NO >> Replace transfer control unit. Refer to [DLN-129, "Removal and Installation"](#).


## Component Inspection

INFOID:000000011290807

- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Disconnect wait detection switch harness connector.
- Remove wait detection switch. Refer to [DLN-16, "Component Parts Location"](#).
- Push and release wait detection switch and check continuity between wait detection switch terminals 10 and 11.

Terminal	Condition	Continuity
10 - 11	Push wait detection switch	Yes
	Release wait detection switch	No

- If the inspection results are abnormal replace the wait detection switch.

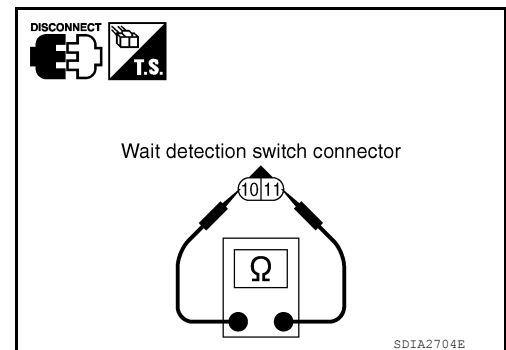

# P1816 TRANSMISSION RANGE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1816 TRANSMISSION RANGE SWITCH

### Description

INFOID:000000011290808

The transmission range switch transmits the A/T position indicator signal (transmission range switch signal) via CAN communication to the transfer control unit. DTC P1816 will set when the transmission range switch signal is malfunctioning or there is a communication error.

### DTC Logic

INFOID:000000011290809

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1816]	PNP SW/CIRC	When transmission range switch signal is malfunction or communication error between the control units.	Refer to <a href="#">DLN-38</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

#### Is DTC P1816 displayed?

- YES >> Perform diagnosis procedure. Refer to [DLN-38, "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:000000011290810

#### 1. CHECK DTC WITH TCM

Perform self-diagnosis with TCM. Refer to [TM-34, "CONSULT Function \(TRANSMISSION\)"](#).

#### Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system.  
NO >> GO TO 2.

#### 2. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

#### Are inspection results normal?

- YES >> GO TO 3.  
NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector.  
If any items are damaged, repair or replace damaged parts.

#### 3. CHECK DTC

Drive the vehicle and then perform self-diagnosis.

#### Are inspection results normal?

- YES >> Inspection End.  
NO >> Perform self-diagnosis with TCM again.

# P1817 ACTUATOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1817 ACTUATOR MOTOR

### Description

INFOID:0000000011290811

The actuator motor receives signals from the transfer control unit and controls shift rods which shift the transfer case. DTC P1817 will set when any of the following occur:

- Motor does not operate properly due to open or short circuit in actuator motor.
- Malfunction is detected in the actuator motor. (When 4WD shift switch is operated and actuator motor does not operate)
- Malfunction is detected in transfer shift high relay or transfer shift low relay.

### DTC Logic

INFOID:0000000011290812

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1817]	SHIFT ACTUATOR	<ul style="list-style-type: none"><li>• Motor does not operate properly due to open or short circuit in actuator motor.</li><li>• Malfunction is detected in the actuator motor. (When 4WD shift switch is operated and actuator motor is not operated)</li><li>• Malfunction is detected in transfer shift high relay and transfer shift low relay.</li></ul>	Refer to <a href="#">DLN-39</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

#### Is DTC P1817 detected?

- YES >> Perform diagnosis procedure. Refer to [DLN-39, "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:0000000011290813

Regarding Wiring Diagram information, refer to [DLN-91, "Wiring Diagram"](#).

#### 1. CHECK ACTUATOR MOTOR SIGNAL

##### With CONSULT

1. Start engine.
2. Select DATA MONITOR mode for ALL MODE AWD/4WD with CONSULT.
3. Read out the value of SHIFT ACT1, SHIFT AC MON1, SHIFT ACT2 and SHIFT AC MON2.

Monitored item	Condition	Display value
SHIFT ACT1	<ul style="list-style-type: none"><li>• Vehicle stopped</li><li>• Engine running</li><li>• A/T selector lever N position</li><li>• Brake pedal depressed</li></ul>	4WD shift switch: 4H to 4LO (Wait function is operating.) ON
	Except the above	OFF
SHIFT AC MON1	<ul style="list-style-type: none"><li>• Vehicle stopped</li><li>• Engine running</li><li>• A/T selector lever N position</li><li>• Brake pedal depressed</li></ul>	4WD shift switch: 4H to 4LO (Wait function is operating.) ON
	Except the above	OFF

# P1817 ACTUATOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >


[ATX14B]

Monitored item	Condition		Display value
SHIFT ACT2	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 4LO to 4H (Wait function is operating.)	ON
		Except the above	OFF
SHIFT AC MON2	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 4LO to 4H (Wait function is operating.)	ON
		Except the above	OFF

⊗ Without CONSULT

1. Start engine.
2. Check voltage between transfer control unit harness connector terminal and ground.

Connector	Terminal	Condition		Voltage (Approx.)
E142	4 - Ground	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 4H to 4LO (Wait function is operating.)	Battery voltage
			Except the above	0V
	13 - Ground	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 4LO to 4H (Wait function is operating.)	Battery voltage
			Except the above	0V
E143	33 - Ground	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 4H to 4LO (Wait function is operating.)	Battery voltage
			Except the above	0V
	42 - Ground	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 4LO to 4H (Wait function is operating.)	Battery voltage
			Except the above	0V

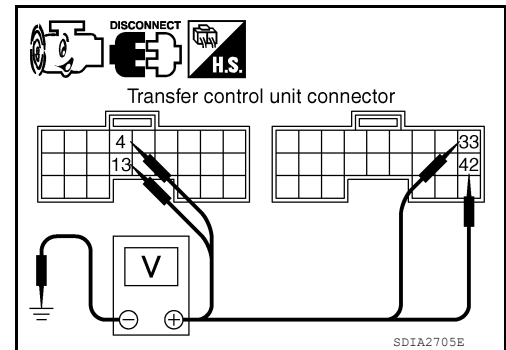

Are the inspection results normal?

- YES >> GO TO 7.  
NO >> GO TO 2.

## 2. CHECK ACTUATOR MOTOR POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Remove transfer shift high relay and transfer shift low relay.




# P1817 ACTUATOR MOTOR

[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >


- Check voltage between transfer shift high relay harness connector E46 terminal 5 (A), transfer shift low relay harness connector E47 terminal 5 (B) and ground.

Connector	Terminal	Voltage (Approx.)
A: E46	5 - Ground	Battery voltage
B: E47	5 - Ground	

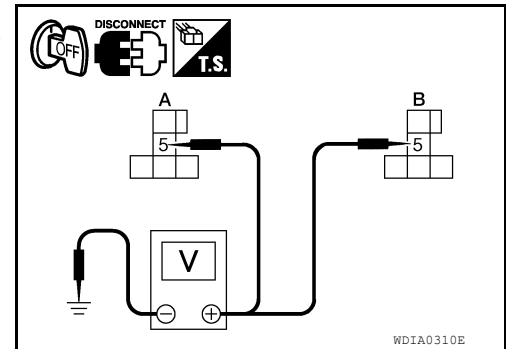

- Turn ignition switch ON. (Do not start engine.)
- Check voltage between transfer shift high relay harness connector E46 terminal 5 (A), transfer shift low relay harness connector E47 terminal 5 (B) and ground.

Connector	Terminal	Voltage (Approx.)
A: E46	5 - Ground	Battery voltage
B: E47	5 - Ground	

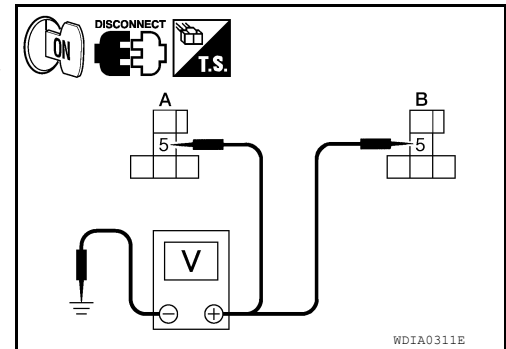

### Are the inspection results normal?

YES >> GO TO 3.

NO >> Check the following. If any items are damaged, repair or replace damaged parts.

- 20A fuse (No. 57, located in the fuse and relay box).
- Harness for short or open between battery, transfer shift high relay harness connector terminal 5 and transfer shift low relay harness connector terminal 5.

## 3. CHECK ACTUATOR MOTOR GROUND CIRCUIT

- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Remove transfer shift high relay and transfer shift low relay. Refer to [DLN-16, "Component Parts Location"](#).
- Check continuity between transfer shift high relay harness connector E46 terminals 2, 4 (A) and transfer shift low relay harness connector E47 terminals 2, 4 (B) and ground.


**Continuity should exist.**

Also check harness for short to ground and short to power.

### Are the inspection results normal?

YES >> GO TO 4.


NO >> Repair open circuit or short to ground or short to power in harness or connectors.

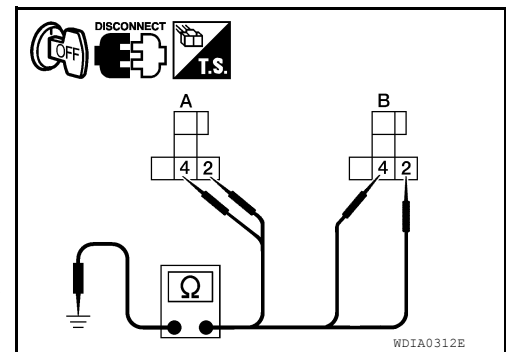

## 4. CHECK TRANSFER SHIFT RELAY

- Turn ignition switch OFF.
- Remove transfer shift high relay and transfer shift low relay. Refer to [DLN-16, "Component Parts Location"](#).
- Apply 12V direct current between transfer shift relay terminals 1 and 2.
- Check continuity between relay terminals 3 and 4, 3 and 5.

Terminal	Condition	Continuity
3 - 4	12V direct current supply between terminals 1 and 2	No
	OFF	Yes
3 - 5	12V direct current supply between terminals 1 and 2	Yes
	OFF	No

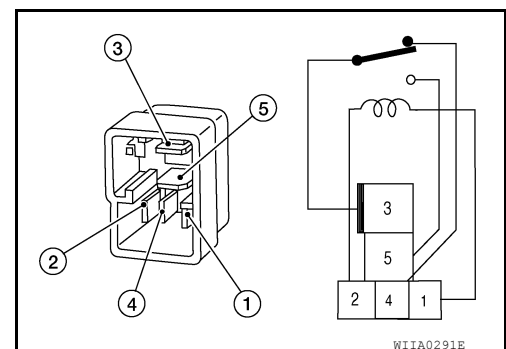

# P1817 ACTUATOR MOTOR

[ATX14B]

< DTC/CIRCUIT DIAGNOSIS >


Are the inspection results normal?

YES >> GO TO 5.


NO >> Replace the transfer shut off relay. Refer to [DLN-16. "Component Parts Location"](#).

## 5. CHECK HARNESS BETWEEN TRANSFER CONTROL UNIT AND TRANSFER SHIFT RELAY


1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer control unit harness connector and the transfer control device (actuator motor) harness connector.
3. Remove transfer shift high relay and transfer shift low relay.
4. Check continuity between the following terminals.
  - Transfer control unit harness connector E143 terminal 33 and transfer control device (actuator motor) harness connector F58 terminal 21.
  - Transfer control unit harness connector E143 terminal 42 and transfer control device (actuator motor) harness connector F58 terminal 24.

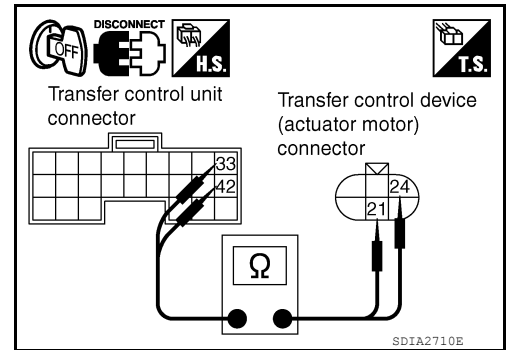

- Transfer control unit harness connector E142 terminal 4 (A) and transfer shift high relay harness connector E46 terminal 1 (B).
- Transfer control unit harness connector E142 terminal 13 (A) and transfer shift low relay harness connector E47 terminal 1 (C).

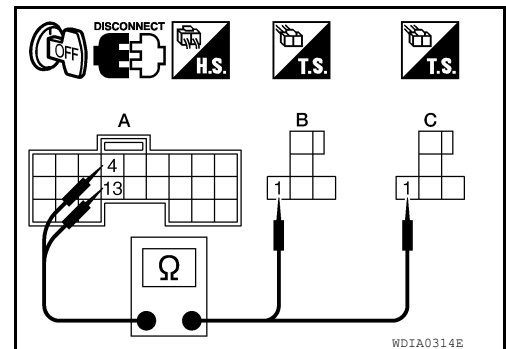

- Transfer control unit harness connector E143 terminal 33 (A) and transfer shift high relay harness connector E46 terminal 3 (B).
- Transfer control unit harness connector E143 terminal 42 (A) and transfer shift low relay harness connector E47 terminal 3 (C).

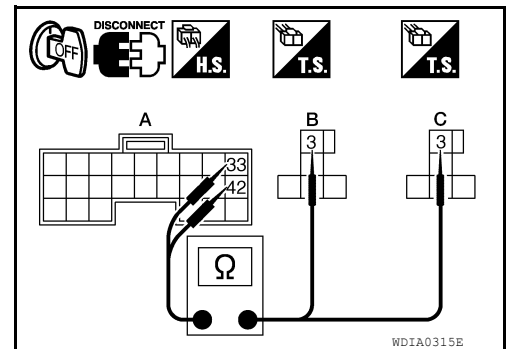

**Continuity should exist.**

Also check harness for short to ground and short to power.

Are the inspection results normal?

YES >> GO TO 6.

NO >> Repair or replace damaged parts.

## 6. CHECK ACTUATOR MOTOR

1. Remove transfer control device. Refer to [DLN-135. "Removal and Installation"](#).

# P1817 ACTUATOR MOTOR

[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >

- Check operation by applying battery voltage to transfer control device (actuator motor) terminals 21 and 24.

**CAUTION:**

- Do not operate actuator motor for more than 1 second.
- Change the actuator motor position to HIGH when installing.
- Be careful not to overheat the harness.



Terminal	Actuator motor
21 (Battery voltage) - 24 (Ground)	Clockwise rotation
24 (Battery voltage) - 21 (Ground)	Counterclockwise rotation

- Check resistance between transfer control device (actuator motor) terminals 21 and 24.

**21 - 24 : Approx. 0.2 Ω**

Are the inspection results normal?

- YES >> GO TO 7.  
 NO >> Replace transfer control device (actuator motor).

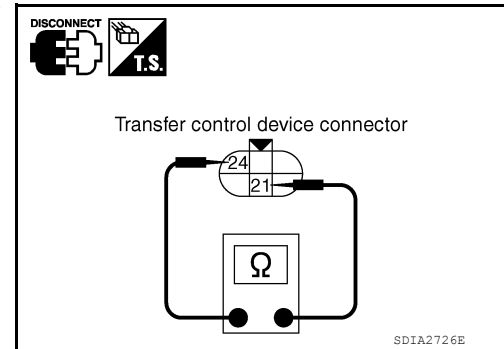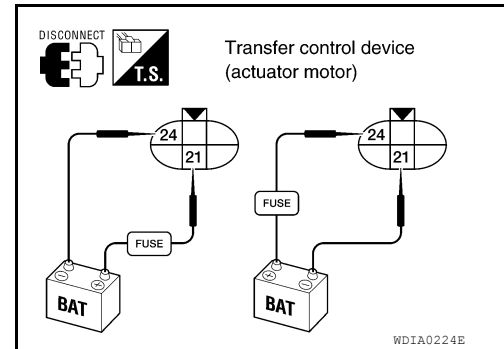

## 7. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

Are the inspection results normal?

- YES >> GO TO 8.  
 NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

## 8. CHECK DTC

Perform the self-diagnosis, after driving a vehicle for a while.

Are the inspection results normal?

- YES >> Inspection End.  
 NO >> Replace transfer control unit. Refer to [DLN-129, "Removal and Installation"](#).


## Component Inspection

INFOID:000000011290814

### TRANSFER SHIFT RELAY

- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Remove transfer shift high relay and transfer shift low relay. Refer to [DLN-16, "Component Parts Location"](#).
- Apply 12V direct current between transfer shift relay terminals 1 and 2.
- Check continuity between relay terminals 3 and 4, 3 and 5.

Terminal	Condition	Continuity
3 - 4	12V direct current supply between terminals 1 and 2	No
	OFF	Yes
3 - 5	12V direct current supply between terminals 1 and 2	Yes
	OFF	No

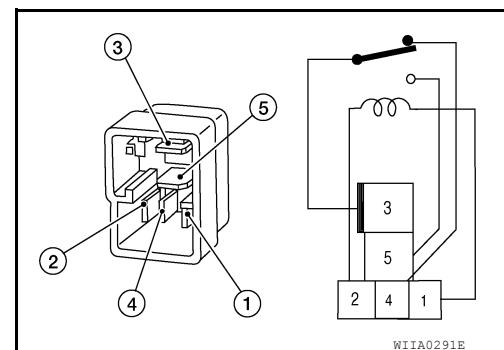

- If NG, replace transfer shift relay.

### TRANSFER CONTROL DEVICE

- Remove transfer control device. Refer to [DLN-135, "Removal and Installation"](#).

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P1817 ACTUATOR MOTOR

[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >

- Check operation by applying battery voltage to transfer control device (actuator motor) terminals 21 and 24.

**CAUTION:**



- Do not operate actuator motor for more than 1 second.
- Change the actuator motor position to HIGH when installing.
- Be careful not to overheat the harness.

Terminal	Actuator motor
21 (Battery voltage) - 24 (Ground)	Clockwise rotate
24 (Battery voltage) - 21 (Ground)	Counterclockwise rotate

- Check resistance between transfer control device (actuator motor) terminals 21 and 24.

21 - 24 : Approx. 0.2 Ω

- If NG, replace transfer control device (actuator motor).

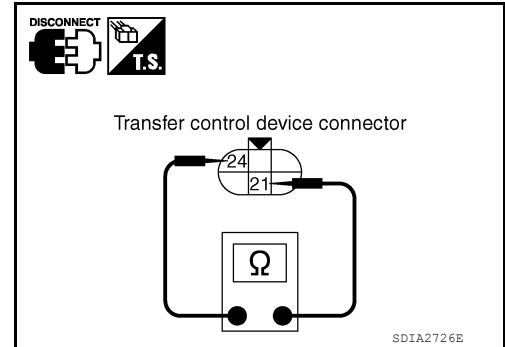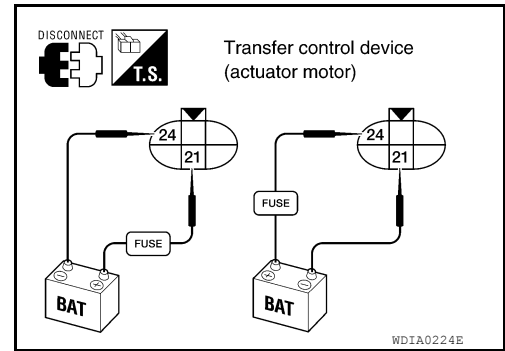

# P1818 ACTUATOR POSITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1818 ACTUATOR POSITION SWITCH

### Description

INFOID:0000000011290815

The actuator position switch detects the current actuator motor range. DTC P1818 will set if either of the following occur:

- Improper signal from actuator position switch is input due to open or short circuit.
- Malfunction is detected in actuator position switch.

### DTC Logic

INFOID:0000000011290816

### DTC DETECTION LOGIC

DLN

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1818]	SHIFT ACT POSI SW	<ul style="list-style-type: none"> <li>• Improper signal from actuator position switch is input due to open or short circuit.</li> <li>• Malfunction is detected in the actuator position switch.</li> </ul>	Refer to <a href="#">DLN-45</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

#### Is DTC P1818 detected?

- YES >> Perform diagnosis procedure. Refer to [DLN-45, "Diagnosis Procedure"](#).
- NO >> Inspection End.

### Diagnosis Procedure

INFOID:0000000011290817

Regarding Wiring Diagram information, refer to [DLN-91, "Wiring Diagram"](#).

#### 1. CHECK ACTUATOR POSITION SWITCH SIGNAL

##### With CONSULT

1. Start engine.
2. Select DATA MONITOR mode for ALL MODE AWD/4WD with CONSULT.
3. Read out the value of SHIFT POS SW1 and SHIFT POS SW2.

Monitored item	Condition	Display value
SHIFT POS SW1	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> </ul> 4WD shift switch: 4LO	ON
	<ul style="list-style-type: none"> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul> 4WD shift switch: 2WD, AUTO or 4H	OFF
SHIFT POS SW2	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> </ul> 4WD shift switch: 4H, AUTO or 2WD	ON
	<ul style="list-style-type: none"> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul> 4WD shift switch: 4LO	OFF

##### Without CONSULT

1. Start engine.


# P1818 ACTUATOR POSITION SWITCH

[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >

- Check voltage between transfer control unit harness connector terminal and ground.

Connector	Terminal	Condition	Voltage (Approx.)	
E143	27 - Ground	<ul style="list-style-type: none"> <li>Vehicle stopped</li> <li>Engine running</li> <li>A/T selector lever N position</li> </ul>	4WD shift switch: 4H, AUTO or 2WD	0V
		<ul style="list-style-type: none"> <li>Brake pedal depressed</li> </ul>	4WD shift switch: 4LO	Battery voltage
	44 - Ground	<ul style="list-style-type: none"> <li>Vehicle stopped</li> <li>Engine running</li> <li>A/T selector lever N position</li> </ul>	4WD shift switch: 4LO	0V
		<ul style="list-style-type: none"> <li>Brake pedal depressed</li> </ul>	4WD shift switch: 2WD, AUTO or 4H	Battery voltage

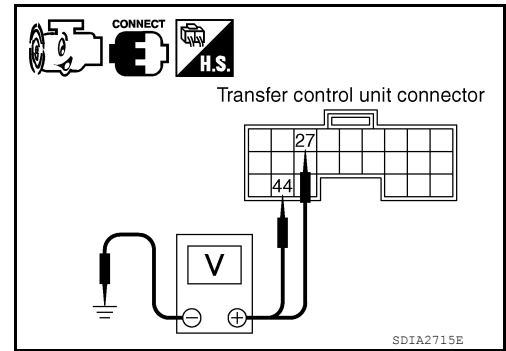

Are the inspection results normal?

- YES >> GO TO 5.  
NO >> GO TO 2.

## 2. CHECK HARNESS BETWEEN TRANSFER CONTROL UNIT AND ACTUATOR POSITION SWITCH

- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Disconnect transfer control unit harness connector and the transfer control device (actuator position switch) harness connector.
- Check continuity between the following terminals.
  - Transfer control unit harness connector E143 terminal 27 and transfer control device (actuator position switch) harness connector F58 terminal 23.
  - Transfer control unit harness connector E143 terminal 44 and transfer control device (actuator position switch) harness connector F58 terminal 20.

**Continuity should exist.**

Also check harness for short to ground and short to power.

Are the inspection results normal?

- YES >> GO TO 3.  
NO >> Repair or replace damaged parts.

## 3. CHECK GROUND CIRCUIT

- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Disconnect transfer control device (actuator position switch) harness connector.
- Check continuity between transfer control device (actuator position switch) harness connector F58 terminal 22 and ground.

**Continuity should exist.**



Also check harness for short to ground and short to power.

Are the inspection results normal?

- YES >> GO TO 4.  
NO >> Repair open circuit or short to ground or short to power in harness or connectors.

## 4. CHECK ACTUATOR POSITION SWITCH

- Remove transfer control device. Refer to [DLN-135, "Removal and Installation"](#).

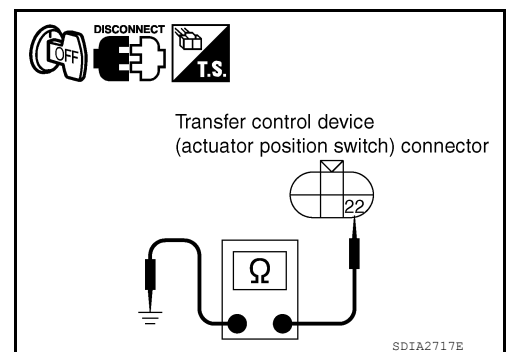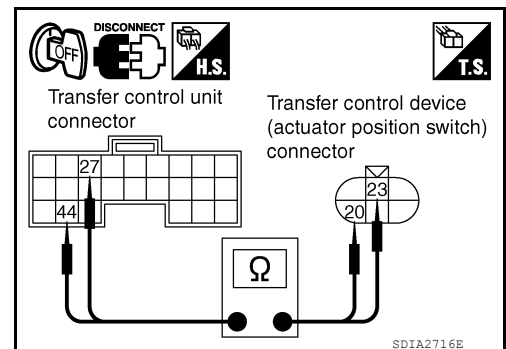

# P1818 ACTUATOR POSITION SWITCH


[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >

- Check operation by applying battery voltage to transfer control device (actuator motor) terminals 21 and 24.

**CAUTION:**

- Do not operate actuator motor for more than 1 second.
- Change the actuator motor position to HIGH when installing.
- Be careful not to overheat the harness.

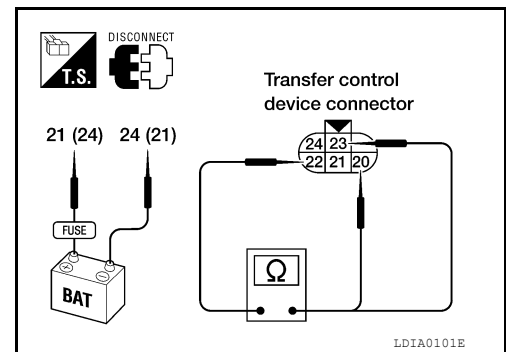

Terminal	Continuity	Continuity
24 (Battery voltage) - 21 (Ground)	20 - 22	Yes
	22 - 23	No
21 (Battery voltage) - 24 (Ground)	22 - 23	Yes
	20 - 22	No

Are the inspection results normal?

- YES >> GO TO 5.  
 NO >> Replace transfer control device (actuator motor).

## 5. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80. "Reference Value"](#).

Are the inspection results normal?

- YES >> GO TO 6.  
 NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

## 6. CHECK DTC

Perform the self-diagnosis, after driving a vehicle for a while.

Are the inspection results normal?

- YES >> Inspection End.  
 NO >> Replace transfer control unit. Refer to [DLN-129. "Removal and Installation"](#).


## Component Inspection

INFOID:000000011290818

- Remove transfer control device. Refer to [DLN-135. "Removal and Installation"](#).
- Check operation by applying battery voltage to transfer control device (actuator motor) terminals 21 and 24.

**CAUTION:**

- Do not operate actuator motor for more than 1 second.
- Change the actuator motor position to HIGH when installing.
- Be careful not to overheat the harness.

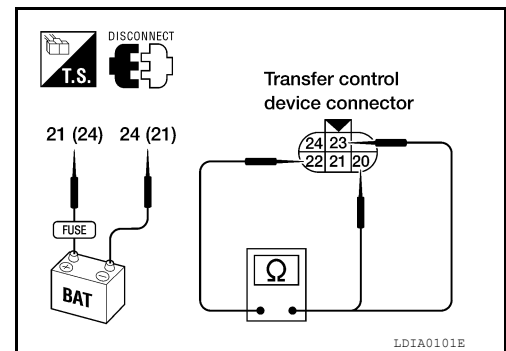

Terminal	Continuity	Continuity
24 (Battery voltage) - 21 (Ground)	20 - 22	Yes
	22 - 23	No
21 (Battery voltage) - 24 (Ground)	22 - 23	Yes
	20 - 22	No

- If the inspection results are abnormal replace transfer control device (actuator motor).

# P1819 TRANSFER CONTROL DEVICE

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1819 TRANSFER CONTROL DEVICE

### Description

INFOID:000000011290819

The transfer control device integrates the actuator motor and actuator position switch. DTC P1819 will set if either of the following conditions exist:

- Malfunction occurs in transfer control device actuator circuit.
- Malfunction is detected in the transfer shut off relay.

### DTC Logic

INFOID:000000011290820

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1819]	SHIFT ACT CIR	<ul style="list-style-type: none"> <li>• Transfer control device actuator circuit is shorted or open. (Malfunctions are detected when transfer shift relay circuit is open/shorted or relay monitor circuit is open/shorted.)</li> <li>• Malfunction occurs in transfer control device drive circuit.</li> <li>• Malfunction is detected in transfer shut off relay.</li> </ul>	Refer to <a href="#">DLN-48</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

#### Is DTC P1819 detected?

- YES >> Perform diagnosis procedure. Refer to [DLN-48, "Diagnosis Procedure"](#).  
 NO >> Inspection End.

### Diagnosis Procedure


INFOID:000000011290821

Regarding Wiring Diagram information, refer to [DLN-91, "Wiring Diagram"](#).

#### 1. CHECK POWER SUPPLY

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Connect transfer control unit harness connector.
3. Check voltage between transfer control unit harness connector terminal and ground.

Connector	Terminal	Voltage (Approx.)
E142	16 - Ground	0V
	22 - Ground	
E143	30 - Ground	Battery voltage

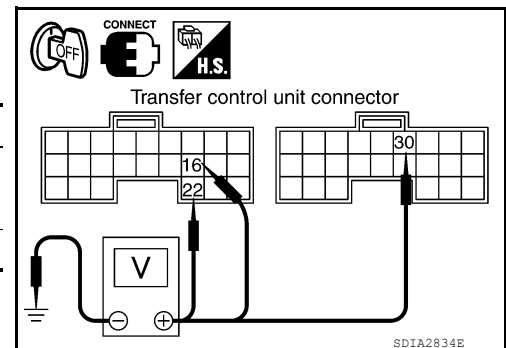



# P1819 TRANSFER CONTROL DEVICE

[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >

- Turn ignition switch ON. (Do not start engine.)
- Check voltage between transfer control unit harness connector terminals and ground.


Connector	Terminal	Voltage (Approx.)
E142	16 - Ground	Battery voltage
	22 - Ground	
E143	30 - Ground	0V

### Are the inspection results normal?

YES >> GO TO 2.

NO >> Check the following. If any items are damaged, repair or replace damaged parts.

- 10A fuse (No. 26 located in the fuse and fusible link box).
- Harness for short or open between battery and transfer shut off relay harness connector E69 terminal 1.
- Harness for short or open between transfer shut off relay harness connector E69 terminal 2 and transfer control unit harness connector E143 terminal 30.
- Harness for short or open between battery and transfer shut off relay harness connector E69 terminal 5.
- Harness for short or open between transfer shut off relay harness connector E69 terminal 3 and transfer control unit harness connector E142 terminal 22.
- Transfer shut off relay. Refer to [DLN-23, "Component Inspection"](#).

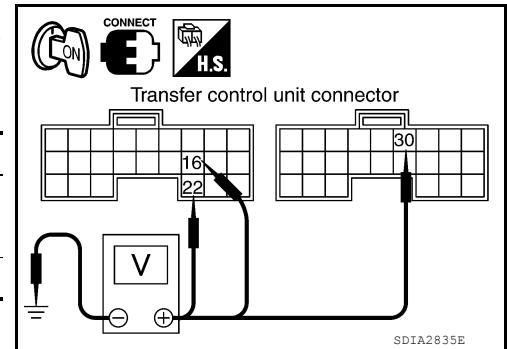

## 2. CHECK GROUND CIRCUIT

- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Disconnect transfer control unit harness connector.
- Check continuity between transfer control unit harness connector E142 terminals 3, 6, E143 terminal 45 and ground.


**Continuity should exist.**

Also check harness for short to ground and short to power.

### Are the inspection results normal?

YES >> GO TO 3.


NO >> Repair open circuit or short to ground or short to power in harness or connectors.

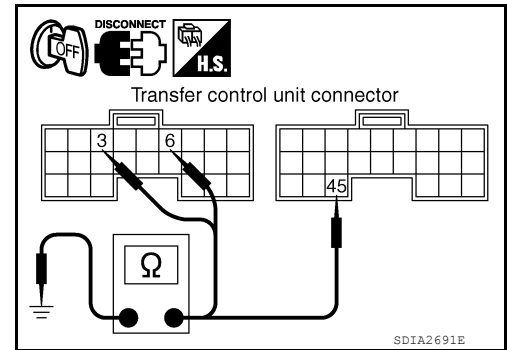

## 3. CHECK ACTUATOR MOTOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Remove transfer shift high relay and transfer shift low relay. Refer to [DLN-16, "Component Parts Location"](#).
- Check voltage between transfer shift high relay harness connector E46 terminal 5 (A), transfer shift low relay harness connector E47 terminal 5 (B) and ground.

Connector	Terminal	Voltage (Approx.)
A: E46	5 - Ground	Battery voltage
B: E47	5 - Ground	

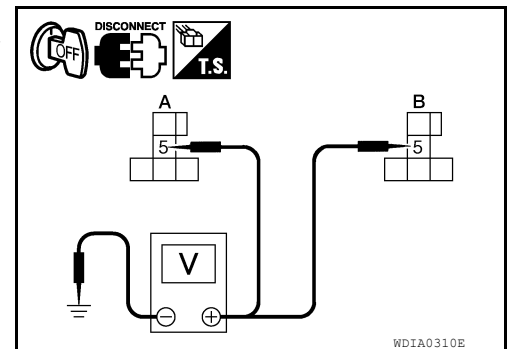

# P1819 TRANSFER CONTROL DEVICE

[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >

4. Turn ignition switch ON. (Do not start engine.)
5. Check voltage between transfer shift high relay harness connector E46 terminal 5 (A), transfer shift low relay harness connector E47 terminal 5 (B) and ground.


Connector	Terminal	Voltage (Approx.)
A: E46	5 - Ground	Battery voltage
B: E47	5 - Ground	

Are the inspection results normal?

YES >> GO TO 4.

NO >> Check the following. If any items are damaged, repair or replace damaged parts.

- 20A fuse (No. 57 located in the fuse and relay box).
- Harness for short or open between battery, transfer shift high relay harness connector E46 terminal 5 and transfer shift low relay harness connector E47 terminal 5.

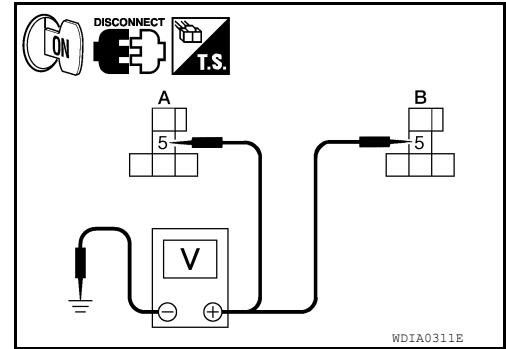

## 4. CHECK HARNESS BETWEEN TRANSFER CONTROL UNIT AND TRANSFER SHIFT RELAY

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer control unit harness connector and transfer control device (actuator motor) harness connector.
3. Remove transfer shift high relay and transfer shift low relay.
4. Check continuity between the following terminals.
  - Transfer control unit harness connector E143 terminal 33 (A) and transfer shift high relay harness connector E46 terminal 3 (B).
  - Transfer control unit harness connector E143 terminal 42 (A) and transfer shift low relay harness connector E47 terminal 3 (C).


**Continuity should exist.**

Also check harness for short to ground and short to power.

Are the inspection results normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

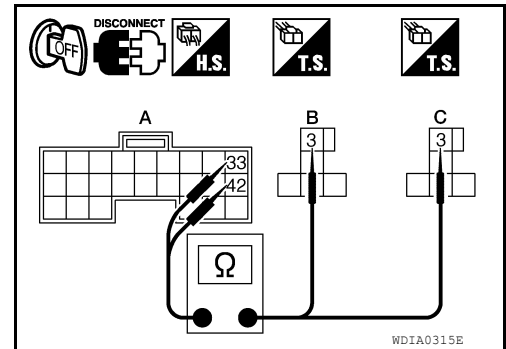

## 5. CHECK TRANSFER SHIFT RELAY GROUND CIRCUIT

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Remove transfer shift high relay and transfer shift low relay.
3. Check continuity between transfer shift high relay harness connector E46 terminals 2, 4 (A), transfer shift low relay harness connector E47 terminals 2, 4 (B) and ground.


**Continuity should exist.**

Also check harness for short to ground and short to power.

Are the inspection results normal?

YES >> GO TO 6.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

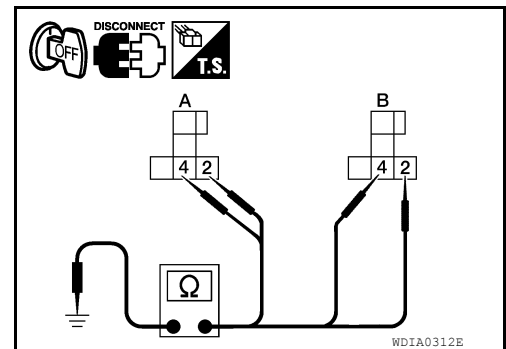

## 6. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

Are the inspection results normal?

YES-1 >> With CONSULT: GO TO 7.

YES-2 >> Without CONSULT: GO TO 8.

NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

# P1819 TRANSFER CONTROL DEVICE

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## 7. PERFORM SELF-DIAGNOSIS (WITH CONSULT)

### With CONSULT

1. Turn ignition switch ON. (Do not start engine.)
2. Select SELF-DIAG RESULTS mode for ALL MODE AWD/4WD with CONSULT.
3. Touch ERASE.
4. Turn ignition switch OFF and wait at least 10 seconds.
5. Perform the self-diagnosis again.

Is the SHIFT ACT CIR [P1819] displayed?

- YES >> Replace transfer control unit. Refer to [DLN-129. "Removal and Installation"](#).  
NO >> Inspection End.

## 8. PERFORM SELF-DIAGNOSIS (WITHOUT CONSULT)

### Without CONSULT

1. Perform the self-diagnosis and then erase self-diagnostic results. Refer to [DLN-18. "CONSULT Function \(ALL MODE AWD/4WD\)"](#).
2. Perform the self-diagnosis again.

Do the self-diagnostic results indicate transfer control device?

- YES >> Replace transfer control unit. Refer to [DLN-129. "Removal and Installation"](#).  
NO >> Inspection End.

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P1820 ENGINE SPEED SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1820 ENGINE SPEED SIGNAL

### Description

INFOID:0000000011290822

The ECM transmits the engine speed signal via CAN communication to the transfer control unit. DTC P1820 will set when either of the following occur:

- Malfunction is detected in engine speed signal that is output from the ECM.
- Improper signal is input while driving.

### DTC Logic

INFOID:0000000011290823

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1820]	ENGINE SPEED SIG	<ul style="list-style-type: none"><li>• Malfunction is detected in engine speed signal that is output from ECM through CAN communication.</li><li>• Improper signal is input while driving.</li></ul>	Refer to <a href="#">DLN-52</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

#### Is DTC P1820 detected?

- YES >> Perform diagnosis procedure. Refer to [DLN-52, "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:0000000011290824

#### 1. CHECK DTC WITH ECM

Perform self-diagnosis with ECM. Refer to [EC-49, "CONSULT Function"](#).

#### Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system.  
NO >> GO TO 2.

#### 2. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

#### Are the inspection results normal?

- YES >> GO TO 3.  
NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector.  
If any items are damaged, repair or replace damaged parts.

#### 3. CHECK DTC

Drive the vehicle and then perform self-diagnosis.

#### Are the inspection results normal?

- YES >> Inspection End.  
NO >> Perform self-diagnosis with ECM again.

# P1822 CLUTCH PRESSURE SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1822 CLUTCH PRESSURE SOLENOID

### Description

INFOID:000000011290825

Proper voltage is not applied to the clutch pressure solenoid valve due to open or short circuit.

### DTC Logic

INFOID:000000011290826

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1822]	DUTY SOLENOID	Proper voltage is not applied to clutch pressure solenoid valve due to open or short circuit.	Refer to <a href="#">DLN-53</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

#### Is DTC P1822 displayed?

- YES >> Perform diagnosis procedure. Refer to [DLN-53. "Diagnosis Procedure"](#).  
 NO >> Inspection End.

### Diagnosis Procedure

INFOID:000000011290827

Regarding Wiring Diagram information, refer to [DLN-91. "Wiring Diagram"](#).

#### 1. CHECK CLUTCH PRESSURE SIGNAL


##### With CONSULT

1. Start engine.
2. Select DATA MONITOR mode for ALL MODE AWD/4WD with CONSULT.
3. Read out the value of DUTY SOLENOID.

Condition	Display value	
<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 2WD	4%
	4WD shift switch: AUTO	96 - 4%
	4WD shift switch: 4H or 4LO	4%

##### Without CONSULT

1. Start engine.
2. Check voltage between transfer control unit harness connector terminal and ground.

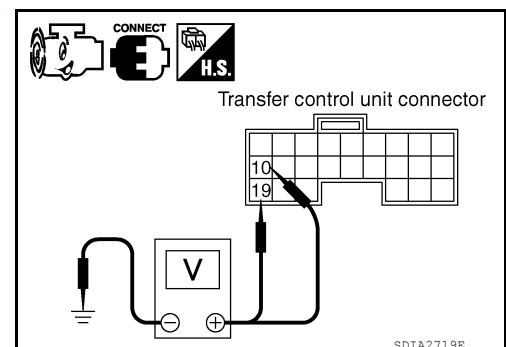

# P1822 CLUTCH PRESSURE SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

Connector	Terminal	Condition	Voltage (Approx.)	
E142	10 - Ground	<ul style="list-style-type: none"> <li>Vehicle stopped</li> <li>Engine running</li> <li>A/T selector lever N position</li> </ul>	4WD shift switch: AUTO	4 - 14V
		<ul style="list-style-type: none"> <li>Brake pedal depressed</li> </ul>	4WD shift switch: 2WD, 4H or 4LO	Less than 1V
	19 - Ground	<ul style="list-style-type: none"> <li>Vehicle stopped</li> <li>Engine running</li> <li>A/T selector lever N position</li> </ul>	4WD shift switch: AUTO	1.5 - 3V
		<ul style="list-style-type: none"> <li>Brake pedal depressed</li> </ul>	4WD shift switch: 2WD, 4H or 4LO	Less than 1V

Are the inspection results normal?


YES >> GO TO 7.

NO >> GO TO 2.

## 2. CHECK HARNESS BETWEEN TRANSFER CONTROL UNIT AND CLUTCH PRESSURE SOLENOID VALVE

- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Disconnect transfer control unit harness connector, transfer terminal cord assembly harness connector and transfer dropping resistor.
- Check continuity between transfer control unit harness connector E142 terminal 19 and transfer terminal cord assembly harness connector F56 terminal 6.

**Continuity should exist.**

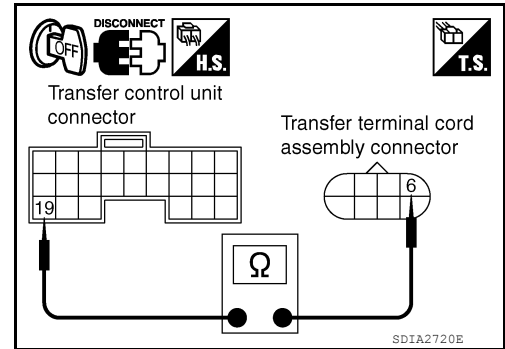

- Check continuity between transfer dropping resistor harness connector E135 terminal 2 and transfer terminal cord assembly harness connector F56 terminal 6.


**Continuity should exist.**

Also check harness for short to ground and short to power.

Are the inspection results normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

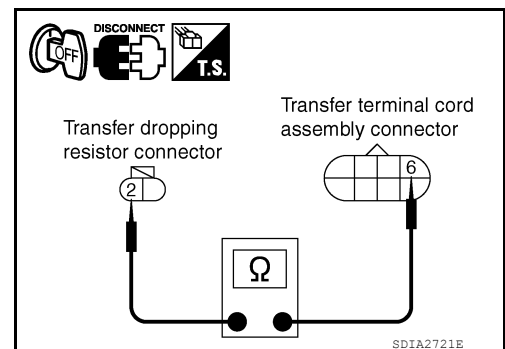

## 3. CHECK HARNESS BETWEEN TRANSFER CONTROL UNIT AND TRANSFER DROPPING RESISTOR

- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Disconnect transfer control unit harness connector and transfer dropping resistor harness connector.

# P1822 CLUTCH PRESSURE SOLENOID

[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >


3. Check continuity between transfer control unit harness connector E142 terminal 10 and transfer dropping resistor harness connector E135 terminal 1.

**Continuity should exist.**

Also check harness for short to ground and short to power.

Are the inspection results normal?

- YES >> GO TO 4.  
NO >> Repair or replace damaged parts.

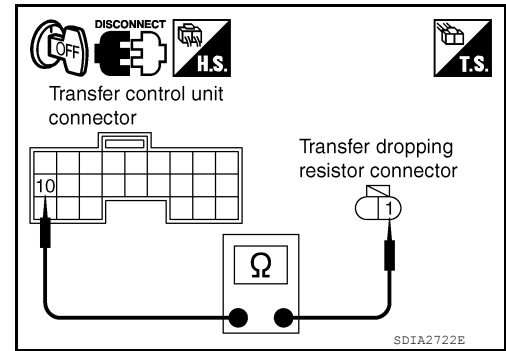

## 4. CHECK GROUND CIRCUIT


1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer terminal cord assembly harness connector.
3. Check continuity between transfer terminal cord assembly harness connector F56 terminal 19 and ground.

**Continuity should exist.**

Also check harness for short to ground and short to power.

Are the inspection results normal?

- YES >> GO TO 5.  
NO >> Repair open circuit or short to ground or short to power in harness or connectors.

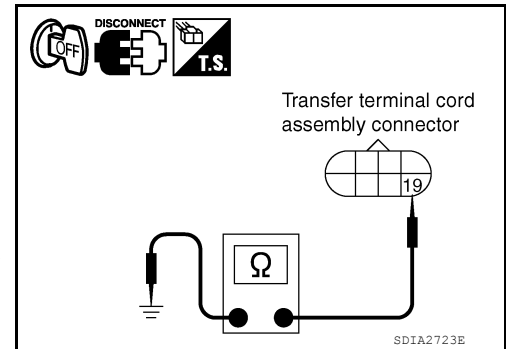


## 5. CHECK CLUTCH PRESSURE SOLENOID

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer terminal cord assembly harness connector.
3. Check resistance between transfer terminal cord assembly harness connector F56 terminals 6 and 19.

**6 - 19 : Approx. 3.0 - 3.4 Ω**

Are the inspection results normal?

- YES >> GO TO 6.  
NO >> Replace clutch pressure solenoid. Refer to [DLN-16](#), "[Component Parts Location](#)".

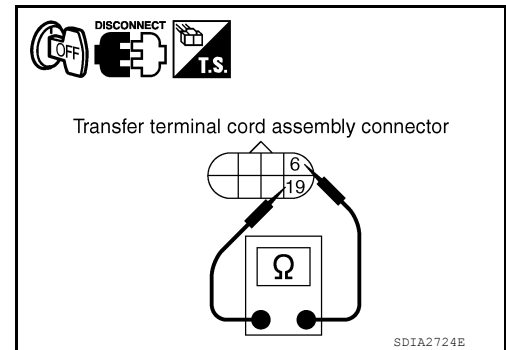

## 6. CHECK TRANSFER DROPPING RESISTOR

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer dropping resistor harness connector.
3. Check resistance between transfer dropping resistor terminals 1 and 2.

**1 - 2 : Approx. 11.2 - 12.8 Ω**

Are the inspection results normal?

- YES >> GO TO 7.  
NO >> Replace transfer dropping resistor.

## 7. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80](#), "[Reference Value](#)".

Are the inspection results normal?

- YES >> GO TO 8.  
NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

# P1822 CLUTCH PRESSURE SOLENOID

[ATX14B]

< DTC/CIRCUIT DIAGNOSIS >

## 8. CHECK DTC

Drive the vehicle and then perform self-diagnosis.

Are the inspection results normal?

YES >> Inspection End.

NO >> Replace transfer control unit. Refer to [DLN-129. "Removal and Installation"](#).

## Component Inspection


INFOID:000000011290828

### CLUTCH PRESSURE SOLENOID

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer terminal cord assembly harness connector.
3. Check resistance between transfer terminal cord assembly terminals 6 and 19.

**6 - 19 : Approx. 3.0 - 3.4  $\Omega$**

4. If the inspection results are abnormal replace clutch pressure solenoid. Refer to [DLN-16. "Component Parts Location"](#).

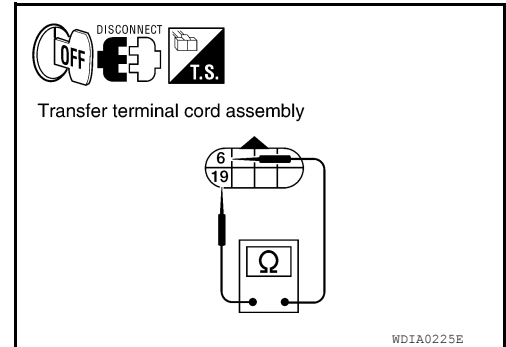

### TRANSFER DROPPING RESISTOR

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer dropping resistor harness connector.
3. Check resistance between transfer dropping resistor terminals 1 and 2.

**1 - 2 : Approx. 11.2 - 12.8  $\Omega$**

4. If the inspection results are abnormal replace transfer dropping resistor. Refer to [DLN-16. "Component Parts Location"](#).



# P1823 2-4 SOLENOID

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1823 2-4 SOLENOID

### Description

INFOID:0000000011290829

Proper voltage is not applied to the 2-4WD solenoid valve due to an open or short circuit.

### DTC Logic

INFOID:0000000011290830

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1823]	2-4WD SOLENOID	Proper voltage is not applied to 2-4WD solenoid valve due to open or short circuit.	Refer to <a href="#">DLN-57</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

#### Is DTC P1823 displayed?

- YES >> Perform diagnosis procedure. Refer to [DLN-57, "Diagnosis Procedure"](#).  
 NO >> Inspection End.

### Diagnosis Procedure

INFOID:0000000011290831

Regarding Wiring Diagram information, refer to [DLN-91, "Wiring Diagram"](#).

#### 1. CHECK 4WD SHIFT SWITCH SYSTEM

Perform self-diagnosis. Refer to [DLN-18, "CONSULT Function \(ALL MODE AWD/4WD\)"](#).

#### Is the 4WD MOD SW [P1814] (with CONSULT) or Flickering pattern: 16 (without CONSULT) detected?

- YES >> Perform trouble diagnosis for 4WD shift switch. Refer to [DLN-32, "Diagnosis Procedure"](#).  
 NO >> GO TO 2.

#### 2. CHECK 2-4WD SHIFT SOLENOID SIGNAL

##### With CONSULT

1. Start engine.
2. Select DATA MONITOR mode for ALL MODE AWD/4WD with CONSULT.
3. Read out the value of 2-4WD SOL and 2-4WD SOL MON.

Monitored item	Condition	Display value
2-4WD SOL	4WD shift switch: 2WD	OFF
	4WD shift switch: AUTO	ON
	4WD shift switch: 4H	
	4WD shift switch: 4LO	
	4WD shift switch: AUTO (Wait function is operating.)	OFF
	4WD shift switch: 4H (Wait function is operating.)	OFF

# P1823 2-4 SOLENOID

< DTC/CIRCUIT DIAGNOSIS >


[ATX14B]

Monitored item	Condition	Display value	
2-4WD SOL MON	4WD shift switch: 2WD	OFF	
	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: AUTO	ON
		4WD shift switch: 4H	
		4WD shift switch: 4LO	
	4WD shift switch: AUTO (Wait function is operating.)	OFF	
	4WD shift switch: 4H (Wait function is operating.)	OFF	

⊗ **Without CONSULT**

1. Start engine.
2. Check voltage between transfer control unit harness connector terminal and ground.

Connector	Terminal	Condition	Voltage (Approx.)	
E142	1 - Ground	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 2WD	0V
		4WD shift switch: AUTO, 4H or 4LO	Battery voltage	

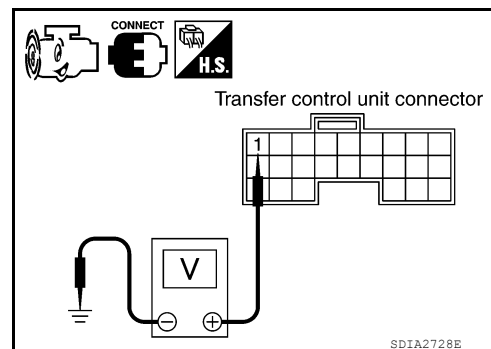

Are the inspection results normal?

YES >> GO TO 7.

NO >> GO TO 3.

### 3. CHECK 4WD SHIFT SWITCH SIGNAL

1. Turn ignition switch ON. (Do not start engine.)
2. Check voltage between transfer control unit harness connector terminals and ground.

Connector	Terminal	Condition	Voltage (Approx.)
M141	4 - ground	4WD shift switch: AUTO, 4H or 4LO	Battery voltage
		4WD shift switch: 2WD	0V

Are the inspection results normal?

YES >> GO TO 4.

NO >> Check 4WD shift switch. Refer to [DLN-34, "Component Inspection"](#).

### 4. CHECK HARNESS BETWEEN 4WD SHIFT SWITCH AND TRANSFER TERMINAL CORD ASSEMBLY

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect 4WD shift switch harness connector and transfer terminal cord assembly harness connector.
3. Check continuity between 4WD shift switch harness connector M141 terminal 4 and transfer terminal cord assembly harness connector F56 terminal 5.

**Continuity should exist.**

Also check harness for short to ground and short to power.

Are the inspection results normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

### 5. CHECK HARNESS BETWEEN TRANSFER CONTROL UNIT AND TRANSFER TERMINAL CORD ASSEMBLY

## P1823 2-4 SOLENOID

[ATX14B]

### < DTC/CIRCUIT DIAGNOSIS >


1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer control unit harness connector and transfer terminal cord assembly harness connector.
3. Check continuity between transfer control unit harness connector E142 terminal 1 and transfer terminal cord assembly harness connector F56 terminal 4.

**Continuity should exist.**

Also check harness for short to ground and short to power.

#### Are the inspection results normal?

- YES >> GO TO 6.  
NO >> Repair or replace damaged parts.

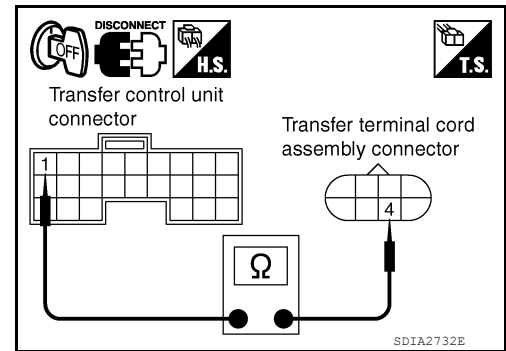

### 6. CHECK 2-4WD SOLENOID

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer terminal cord assembly harness connector.
3. Check resistance between transfer terminal cord assembly terminals 4 and 5.

**4 - 5 : Approx. 22.8 - 25.2 Ω**

#### Are the inspection results normal?

- YES >> GO TO 7.  
NO >> Replace 2-4WD solenoid. Refer to [DLN-16, "Component Parts Location"](#).

### 7. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

#### Are the inspection results normal?

- YES >> GO TO 8.  
NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector.  
If any items are damaged, repair or replace damaged parts.

### 8. CHECK DTC

Perform the self-diagnosis, after driving a vehicle for a while.

#### Are the inspection results normal?

- YES >> Inspection End.  
NO >> Replace transfer control unit. Refer to [DLN-129, "Removal and Installation"](#).

### Component Inspection

INFOID:000000011290832

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer terminal cord assembly harness connector.
3. Check resistance between transfer terminal cord assembly terminals 4 and 5.

**4 - 5 : Approx. 22.8 - 25.2 Ω**

4. If the inspection results are abnormal replace the 2-4WD solenoid. Refer to [DLN-16, "Component Parts Location"](#).

# P1824 TRANSFER MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1824 TRANSFER MOTOR

### Description

INFOID:000000011290833

Motor does not operate properly due to open or short circuit in transfer motor or transfer motor relay.

### DTC Logic

INFOID:000000011290834

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1824]	MOTOR RELAY	Motor does not operate properly due to open or short circuit in transfer motor or transfer motor relay.	Refer to <a href="#">DLN-60</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

#### Is DTC P1824 displayed?

- YES >> Perform diagnosis procedure. Refer to [DLN-60, "Diagnosis Procedure"](#).  
 NO >> Inspection End.

### Diagnosis Procedure

INFOID:000000011290835

Regarding Wiring Diagram information, refer to [DLN-91, "Wiring Diagram"](#).

#### 1. CHECK TRANSFER MOTOR RELAY SIGNAL

##### With CONSULT

1. Start engine.
2. Select DATA MONITOR mode for ALL MODE AWD/4WD with CONSULT.
3. Read out the value of MOTOR RELAY and MOTOR RELAY MON.

Monitored item	Condition	Display value (Approx.)
MOTOR RELAY	4WD shift switch: 2WD	OFF
	4WD shift switch: AUTO or 4LO (A/T selector lever P or N position)	OFF (ON for approx. 2 sec. after shifting to P and N.)
	4WD shift switch: AUTO or 4LO (Except for A/T selector lever P or N position)	ON
	4WD shift switch: 4H (A/T selector lever P position)	OFF (ON for approx. 2 sec. after shifting to P.)
	4WD shift switch: 4H (Except for A/T selector lever P position)	ON

# P1824 TRANSFER MOTOR

< DTC/CIRCUIT DIAGNOSIS >


[ATX14B]

Monitored item	Condition	Display value (Approx.)
MOTOR RELAY MON	4WD shift switch: 2WD	OFF
	4WD shift switch: AUTO or 4LO (A/T selector lever P or N position)	OFF (ON for approx. 2 sec. after shifting to P and N.)
	4WD shift switch: AUTO or 4LO (Except for A/T selector lever P or N position)	ON
	4WD shift switch: 4H (A/T selector lever P position)	OFF (ON for approx. 2 sec. after shifting to P.)
	4WD shift switch: 4H (Except for A/T selector lever P position)	ON

⊗ Without CONSULT

- Start engine.
- Check voltage between transfer control unit harness connector terminal and ground.

Connector	Terminal	Condition	Voltage (Approx.)
E142	14 - Ground	4WD shift switch: 2WD	Battery voltage
		4WD shift switch: AUTO or 4LO (A/T selector lever P or N position)	Battery voltage (0V for approx. 2 sec. after shifting to P and N.)
		4WD shift switch: AUTO or 4LO (Except for A/T selector lever P or N position)	0V
		4WD shift switch: 4H (A/T selector lever P position)	Battery voltage (0V for approx. 2 sec. after shifting to P.)
		4WD shift switch: 4H (Except for A/T selector lever P position)	0V

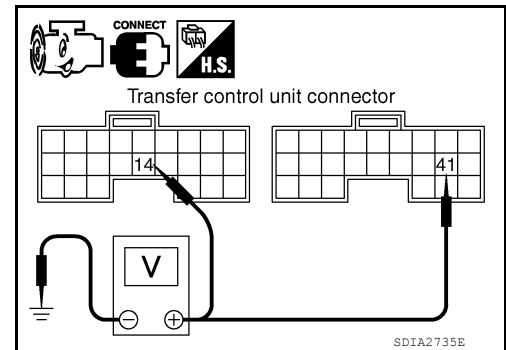

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P1824 TRANSFER MOTOR

[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >

Connector	Terminal	Condition	Voltage (Approx.)	
E143	41 - Ground	<ul style="list-style-type: none"> <li>• Accelerator pedal depressed</li> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 2WD	0V
			4WD shift switch: AUTO or 4LO (A/T selector lever P or N position)	0V (Battery voltage for approx. 2 sec. after shifting to P and N.)
			4WD shift switch: AUTO or 4LO (Except for A/T selector lever P or N position)	Battery voltage
			4WD shift switch: 4H (A/T selector lever P position)	0V (Battery voltage for approx. 2 sec. after shifting to P.)
			4WD shift switch: 4H (Except for A/T selector lever P position)	Battery voltage

Are the inspection results normal?

YES >> GO TO 7.

NO >> GO TO 2.

## 2. CHECK TRANSFER MOTOR RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Connect transfer control unit harness connector.
3. Disconnect transfer motor relay.
4. Check voltage between transfer motor relay harness connector terminals and ground.

Connector	Terminal	Voltage (Approx.)
E153	2 - Ground	0V
E154	5 - Ground	Battery voltage

5. Turn ignition switch ON. (Do not start engine.)
6. Check voltage between transfer motor relay harness connector terminals and ground.

Connector	Terminal	Voltage (Approx.)
E153	2 - Ground	Battery voltage
E154	5 - Ground	

Are the inspection results normal?

YES >> GO TO 3.

NO >> Check the following. If any items are damaged, repair or replace damaged parts.

- 20A fuse (No. 58 located in the fuse and relay box).
- 10A fuse (No. 26 located in the fuse and fusible link box).
- Harness for short or open between battery and transfer motor relay harness connector E154 terminal 5.
- Harness for short or open between transfer shut off relay harness connector E69 terminal 3 and transfer motor relay harness connector E153 terminal 2.
- Battery and ignition switch.

## 3. CHECK TRANSFER MOTOR RELAY

1. Turn ignition switch OFF.
2. Remove transfer motor relay. Refer to [DLN-16, "Component Parts Location"](#).

# P1824 TRANSFER MOTOR

[ATX14B]


## < DTC/CIRCUIT DIAGNOSIS >

3. Apply 12V direct current between transfer motor relay terminals 1 and 2.
4. Check continuity between relay terminals 3 and 5.

Condition	Continuity
12V direct current supply between terminals 1 and 2	Yes
OFF	No

Are the inspection results normal?

- YES >> GO TO 4.  
 NO >> Replace the transfer motor relay.

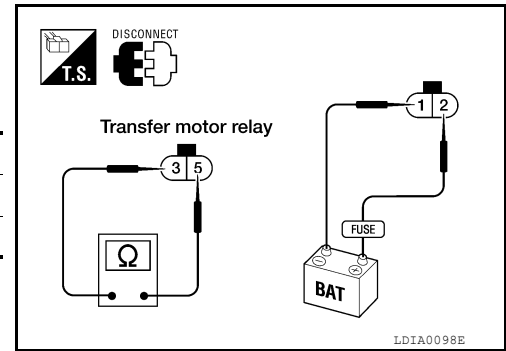

## 4.CHECK TRANSFER MOTOR CONTROL CIRCUIT


1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Remove transfer motor relay.
3. Disconnect transfer control unit harness connector and transfer motor.
4. Check continuity between the following terminals.
  - Transfer control unit harness connector E142 terminal 14 and transfer motor relay harness connector E153 terminal 1.
  - Transfer control unit harness connector E143 terminal 41 and transfer motor relay harness connector E154 terminal 3.
  - Transfer control unit harness connector E143 terminal 41 and transfer motor harness connector F57 terminal 14.

**Continuity should exist.**

Also check harness for short to ground and short to power.

Are the inspection results normal?

- YES >> GO TO 5.  
 NO >> Repair or replace damaged parts.

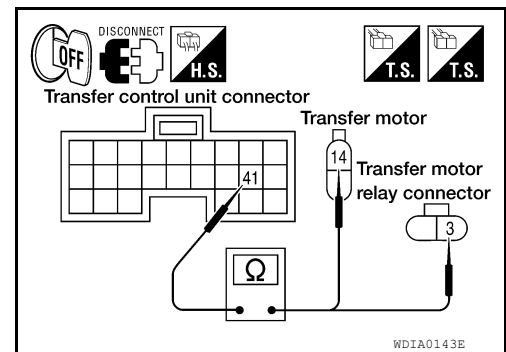

## 5.CHECK TRANSFER MOTOR GROUND CIRCUIT


1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer motor harness connector.
3. Check continuity between transfer motor harness connector F57 terminal 15 and ground.

**Continuity should exist.**

Also check harness for short to ground and short to power.

Are the inspection results normal?

- YES >> GO TO 6.  
 NO >> Repair open circuit or short to ground or short to power in harness or connectors.

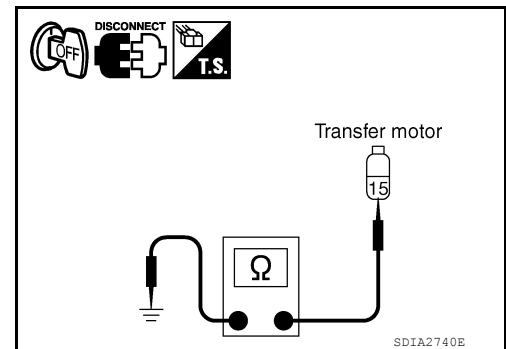

## 6.CHECK TRANSFER MOTOR

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer motor harness connector.

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# P1824 TRANSFER MOTOR


[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >

- Apply 12V direct current between transfer motor terminals 14 and 15.

### Does transfer motor operate?

- YES >> GO TO 7.  
 NO >> Replace transfer motor. Refer to [DLN-139, "Removal and Installation"](#).

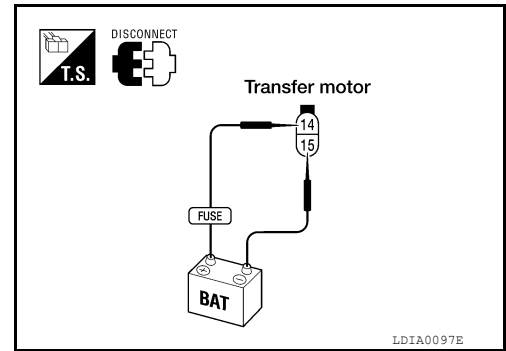

## 7. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

### Are the inspection results normal?

- YES >> GO TO 8.  
 NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

## 8. CHECK DTC

Perform the self-diagnosis, after driving a vehicle for a while.

### Are the inspection results normal?

- YES >> Inspection End.  
 NO >> Replace transfer control unit. Refer to [DLN-129, "Removal and Installation"](#).

## Component Inspection


INFOID:000000011290836

### TRANSFER MOTOR RELAY

- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Remove transfer motor relay. Refer to [DLN-16, "Component Parts Location"](#).
- Apply 12V direct current between transfer motor relay terminals 1 and 2.
- Check continuity between relay terminals 3 and 5.


Condition	Continuity
12V direct current supply between terminals 1 and 2	Yes
OFF	No

- If inspection results are abnormal replace transfer motor relay.

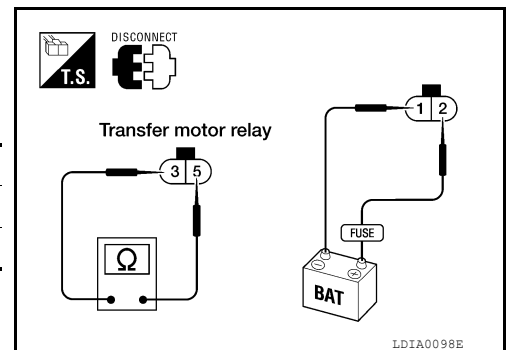

### TRANSFER MOTOR

- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Remove transfer motor. Refer to [DLN-139, "Removal and Installation"](#).
- Apply 12V direct current between transfer motor terminals 14 and 15.
- If transfer motor does not operate, replace transfer motor.

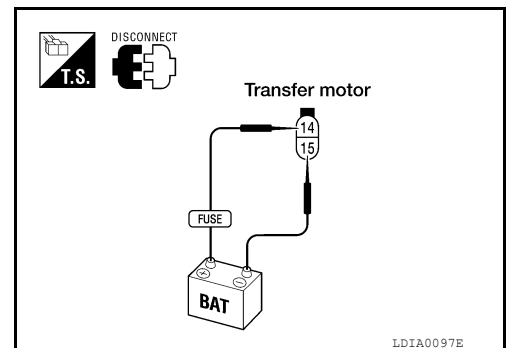



# P1826 TRANSFER FLUID TEMPERATURE

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1826 TRANSFER FLUID TEMPERATURE

### Description

INFOID:000000011290837

Signal voltage from the transfer fluid temperature sensor is abnormally high (Transfer fluid temperature is abnormally low) while driving.

### DTC Logic

INFOID:000000011290838

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1826]	OIL TEMP SEN	Signal voltage from transfer fluid temperature sensor is abnormally high (Transfer fluid temperature is abnormally low) while driving.	Refer to <a href="#">DLN-65</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

Is DTC P1826 displayed?

- YES >> Perform diagnosis procedure. Refer to [DLN-65, "Diagnosis Procedure"](#).
- NO >> Inspection End.

### Diagnosis Procedure

INFOID:000000011290839

Regarding Wiring Diagram information, refer to [DLN-91, "Wiring Diagram"](#).

#### 1. CHECK TRANSFER FLUID TEMPERATURE SENSOR SIGNAL

##### With CONSULT


1. Start engine.
2. Select DATA MONITOR mode for ALL MODE AWD/4WD with CONSULT.
3. Read out the value of FLUID TEMP SE.

Condition	Display value (Approx.)
Transfer fluid temperature approx. 20 - 80°C (68 - 176°F)	1.1 - 0.3V

##### Without CONSULT

1. Start engine.
2. Check voltage between transfer control unit harness connector terminals and ground.

Connector	Terminal	Condition	Data (Approx.)	
E143	28 - Ground	Always	0V	
	31 - Ground	Ignition switch: ON	Transfer fluid temperature approx. 20°C (68°F)	1.1V
			Transfer fluid temperature approx. 80°C (176°F)	0.3V

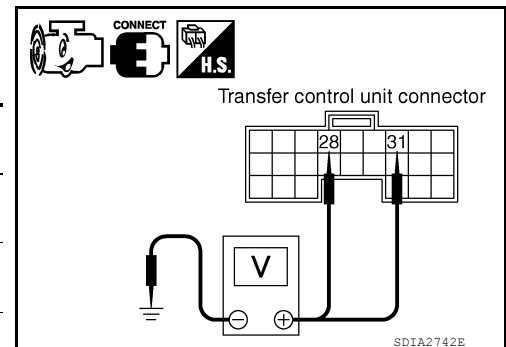

Are inspection results normal?

# P1826 TRANSFER FLUID TEMPERATURE

[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 4.
- NO >> GO TO 2.

### 2. CHECK HARNESS BETWEEN TRANSFER CONTROL UNIT AND TRANSFER TERMINAL CORD ASSEMBLY

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer control unit harness connector and transfer terminal cord assembly harness connector.
3. Check continuity between the following terminals.
  - Transfer control unit harness connector E143 terminal 28 and transfer terminal cord assembly harness connector F56 terminal 3.
  - Transfer control unit harness connector E143 terminal 31 and transfer terminal cord assembly harness connector F56 terminal 2.

**Continuity should exist.**

Also check harness for short to ground and short to power.

Are inspection results normal?

- YES >> GO TO 3.
- NO >> Repair or replace damaged parts.

### 3. CHECK TRANSFER FLUID TEMPERATURE SENSOR

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer terminal cord assembly harness connector.
3. Check resistance between transfer terminal cord assembly terminals 2 and 3.

Temperature °C (°F)	Resistance (Approx.)
20 (68)	2.5 kΩ
80 (176)	0.3 kΩ

Are inspection results normal?

- YES >> GO TO 4.
- NO >> Replace transfer fluid temperature sensor. Refer to [DLN-16, "Component Parts Location"](#).

### 4. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

Are inspection results normal?

- YES >> GO TO 5.
- NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

### 5. CHECK DTC



Drive the vehicle and then perform self-diagnosis.

Are inspection results normal?

- YES >> Inspection End.
- NO >> Replace transfer control unit. Refer to [DLN-129, "Removal and Installation"](#).

### Component Inspection

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer terminal cord assembly harness connector.

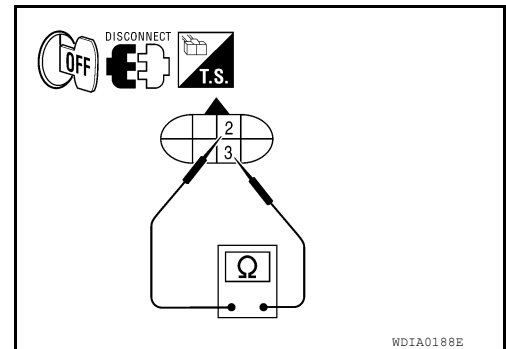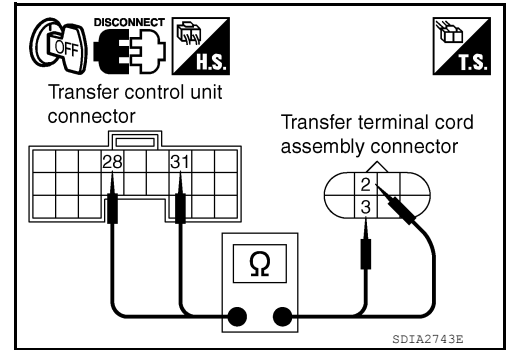

# P1826 TRANSFER FLUID TEMPERATURE


< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

3. Check resistance between transfer terminal cord assembly terminals 2 and 3.

Temperature °C (°F)	Resistance (Approx.)
20 (68)	2.5 kΩ
80 (176)	0.3 kΩ

4. If the inspection results are abnormal replace the transfer fluid temperature sensor. Refer to [DLN-16, "Component Parts Location"](#).

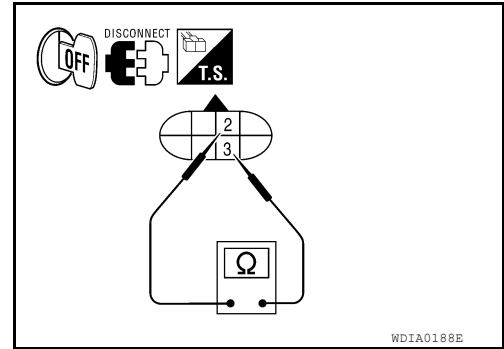

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

# P1827 CLUTCH PRESSURE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1827 CLUTCH PRESSURE SWITCH

### Description

INFOID:000000011290841

Improper signal from the clutch pressure switch is input due to open or short circuit. Also, a malfunction may have occurred in clutch pressure switch or hydraulic circuit.

### DTC Logic

INFOID:000000011290842

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1827]	CLUTCH PRES SW	<ul style="list-style-type: none"><li>Improper signal from clutch pressure switch is input due to open or short circuit.</li><li>Malfunction occurs in clutch pressure switch or hydraulic circuit.</li></ul>	Refer to <a href="#">DLN-68</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON.
- Perform self-diagnosis.

#### Is DTC P1827 displayed?

- YES >> Perform diagnosis procedure. Refer to [DLN-68, "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:000000011290843

Regarding Wiring Diagram information, refer to [DLN-91, "Wiring Diagram"](#).

#### 1. CHECK CLUTCH PRESSURE SWITCH SIGNAL

##### Ⓟ With CONSULT

- Start engine.
- Select DATA MONITOR mode for ALL MODE AWD/4WD with CONSULT.
- Read out ON/OFF switching action of the CL PRES SW while operating 4WD shift switch.

Condition		Display value
<ul style="list-style-type: none"><li>Ignition switch: ON</li><li>A/T selector lever D position</li></ul>	4WD shift switch: AUTO or 4H (Wait function is not operating.)	ON
Ignition switch: ON	4WD shift switch: 2WD (Wait function is not operating.)	OFF

##### ⓧ Without CONSULT

- Start engine.


# P1827 CLUTCH PRESSURE SWITCH

[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >

- Check voltage between transfer control unit harness connector terminals and ground.

Connector	Terminal	Condition		Voltage (Approx.)
E143	34 - Ground	<ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>A/T selector lever D position</li> </ul>	4WD shift switch: AUTO or 4H (Wait function is not operating.)	0V
		Ignition switch: ON	4WD shift switch: 2WD (Wait function is not operating.)	Battery voltage

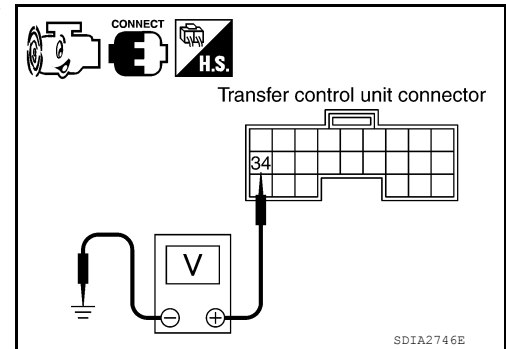

### Are inspection results normal?

- YES >> GO TO 5.  
NO >> GO TO 2.

## 2. CHECK HARNESS BETWEEN TRANSFER CONTROL UNIT AND CLUTCH PRESSURE SWITCH


- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Disconnect transfer control unit harness connector and the transfer terminal cord assembly harness connector.
- Check continuity between transfer control unit harness connector E143 terminal 34 and transfer terminal cord assembly harness connector F56 terminal 7.

### Continuity should exist.

Also check harness for short to ground and short to power.

### Are inspection results normal?

- YES >> GO TO 3.  
NO >> Repair or replace damaged parts.

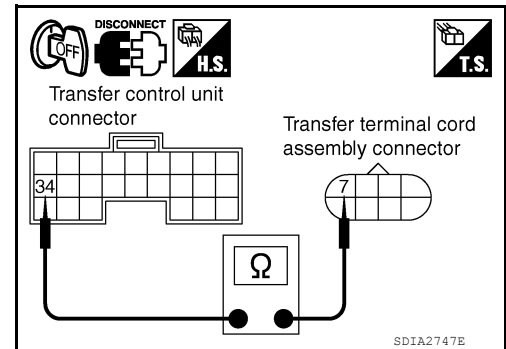

## 3. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

### Are inspection results normal?

- YES >> GO TO 4.  
NO >> Check transfer control unit pin terminals for damage or loose connection with the harness connector. If any items are damaged, repair or replace damaged parts.

## 4. CHECK CLUTCH PRESSURE SWITCH

- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Remove clutch pressure switch. Refer to [DLN-16, "Component Parts Location"](#).
- Push and release clutch pressure switch and check continuity between terminal 7 and ground.

Terminal	Condition	Continuity
7 - Ground	Push clutch pressure switch	Yes
	Release clutch pressure switch	No

### Are inspection results normal?

- YES >> GO TO 5.  
NO >> Replace clutch pressure switch.

## 5. CHECK DTC

Perform the self-diagnosis, after driving a vehicle for a while.

### Are inspection results normal?

- YES >> GO TO 6.  
NO >> Replace transfer control unit. Refer to [DLN-129, "Removal and Installation"](#).

# P1827 CLUTCH PRESSURE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## 6. CRUISE TEST

Perform cruise test. Refer to [DLN-7, "Preliminary Check"](#).

Are inspection results normal?

- YES >> Inspection End.
- NO >> Perform the applicable trouble diagnosis.

## Component Inspection

INFOID:000000011290844

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Remove clutch pressure switch. Refer to [DLN-16, "Component Parts Location"](#).
3. Push and release clutch pressure switch and check continuity between terminal 7 and ground.

Terminal	Condition	Continuity
7 - Ground	Push clutch pressure switch	Yes
	Release clutch pressure switch	No

4. If the inspection results are abnormal replace the clutch pressure switch.

# P1828 LINE PRESSURE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1828 LINE PRESSURE SWITCH

### Description

INFOID:0000000011290845

Improper signal from line pressure switch is input due to open or short circuit. Also, a malfunction may have occurred in the line pressure switch or hydraulic circuit.

### DTC Logic

INFOID:0000000011290846

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1828]	LINE PRES SW	<ul style="list-style-type: none"> <li>Improper signal from line pressure switch is input due to open or short circuit.</li> <li>Malfunction occurs in line pressure switch or hydraulic circuit.</li> </ul>	Refer to <a href="#">DLN-71</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON.
- Perform self-diagnosis.

#### Is DTC P1828 displayed?

- YES >> Perform diagnosis procedure. Refer to [DLN-71, "Diagnosis Procedure"](#).  
 NO >> Inspection End.

### Diagnosis Procedure

INFOID:0000000011290847

Regarding Wiring Diagram information, refer to [DLN-91, "Wiring Diagram"](#).

#### 1. CHECK LINE PRESSURE SWITCH SIGNAL

##### With CONSULT

- Start engine.
- Select DATA MONITOR mode for ALL MODE AWD/4WD with CONSULT.
- Read out ON/OFF switching action of LINE PRES SW while operating 4WD shift switch.

Condition		Display value
<ul style="list-style-type: none"> <li>A/T selector lever D position</li> <li>4WD shift switch: AUTO</li> </ul>		ON
<ul style="list-style-type: none"> <li>Except the above</li> <li>The vehicle has been left at room temperature for 5 minutes and more with ignition switch in OFF position.</li> </ul>	<ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>A/T selector lever: P or N position</li> <li>4WD shift switch: other than AUTO</li> </ul>	OFF

##### Without CONSULT

- Start engine.


# P1828 LINE PRESSURE SWITCH

[ATX14B]

## < DTC/CIRCUIT DIAGNOSIS >

- Check voltage between transfer control unit harness connector terminals and ground.

Connector	Terminal	Condition		Voltage (Approx.)
E143	35 - Ground	• A/T selector lever D position	4WD shift switch: AUTO	0V
		• Except the above • The vehicle has been left at room temperature for 5 minutes and more with ignition switch in OFF position.	• Ignition switch: ON • A/T selector lever: P or N position • 4WD shift switch: other than AUTO	Battery voltage

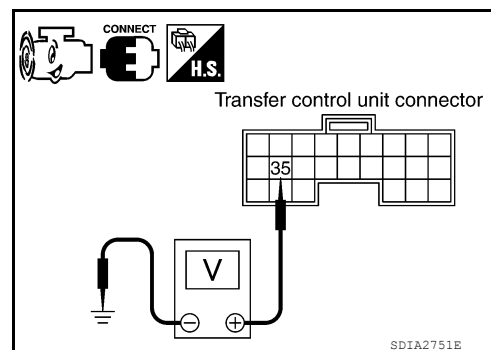

### Are inspection results normal?

- YES >> GO TO 5.  
NO >> GO TO 2.

## 2. CHECK HARNESS BETWEEN TRANSFER CONTROL UNIT AND LINE PRESSURE SWITCH


- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Disconnect transfer control unit harness connector and the transfer terminal cord assembly harness connector.
- Check continuity between transfer control unit harness connector E143 terminal 35 and transfer terminal cord assembly harness connector F56 terminal 1.

### Continuity should exist.

Also check harness for short to ground and short to power.

### Are inspection results normal?

- YES >> GO TO 3.  
NO >> Repair or replace damaged parts.

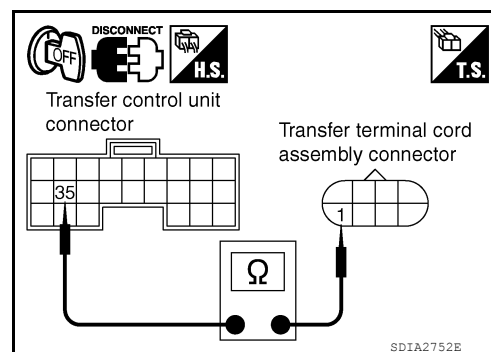

## 3. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

### Are inspection results normal?

- YES >> GO TO 4.  
NO >> Check the following. If any items are damaged, repair or replace damaged parts.
- Transfer control unit pin terminals for damage or loose connection with harness connector.
  - Transfer control unit. Refer to [DLN-129, "Removal and Installation"](#).

## 4. CHECK LINE PRESSURE SWITCH

- Turn ignition switch OFF. (Stay for at least 5 seconds.)
- Remove line pressure switch. Refer to [DLN-16, "Component Parts Location"](#).
- Push and release line pressure switch and check continuity between terminal 1 and ground.

Terminal	Condition	Continuity
1 - Ground	Push line pressure switch	Yes
	Release line pressure switch	No

### Are inspection results normal?

- YES >> GO TO 5.  
NO >> Replace line pressure switch.

## 5. CHECK DTC

Perform the self-diagnosis, after driving a vehicle for a while.



# P1828 LINE PRESSURE SWITCH

[ATX14B]

< DTC/CIRCUIT DIAGNOSIS >

Are inspection results normal?

YES >> GO TO 6.

NO >> Replace transfer control unit. Refer to [DLN-129. "Removal and Installation"](#).

## 6. CRUISE TEST

Perform cruise test. Refer to [DLN-7. "Preliminary Check"](#).

Are inspection results normal?

YES >> Inspection End.

NO >> Perform the applicable trouble diagnosis.

## Component Inspection

INFOID:000000011290848

DLN

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Remove line pressure switch. Refer to [DLN-16. "Component Parts Location"](#).
3. Push and release line pressure switch and check continuity between terminal 1 and ground.

Terminal	Condition	Continuity
1 - Ground	Push line pressure switch	Yes
	Release line pressure switch	No

4. If the inspection results are abnormal, replace the line pressure switch.

# P1829 THROTTLE POSITION SIGNAL (ECM)

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1829 THROTTLE POSITION SIGNAL (ECM)

### Description

INFOID:000000011290849

Malfunction is detected in accelerator pedal position signal that is output from ECM through CAN communication. Also, the signal voltage from accelerator pedal position sensor may be abnormally high or low.

### DTC Logic

INFOID:000000011290850

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1829]	THROTTLE POSI SEN	<ul style="list-style-type: none"><li>Malfunction is detected in accelerator pedal position signal that is output from ECM through CAN communication.</li><li>Signal voltage from accelerator pedal position sensor is abnormally high or low.</li></ul>	Refer to <a href="#">DLN-74</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

#### Is DTC P1829 displayed?

- YES >> Perform diagnosis procedure. Refer to [DLN-74, "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:000000011290851

#### 1. CHECK DTC WITH ECM

Perform self-diagnosis with ECM. Refer to [EC-49, "CONSULT Function"](#).

#### Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system.  
NO >> GO TO 2.

#### 2. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

#### Are inspection results normal?

- YES >> GO TO 3.  
NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

#### 3. CHECK DTC

Perform the self-diagnosis, after driving a vehicle for a while.

#### Are inspection results normal?

- YES >> Inspection End.  
NO >> Perform self-diagnosis with ECM again.

# P1830 ABS OPERATION SIGNAL (ABS)

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1830 ABS OPERATION SIGNAL (ABS)

### Description

INFOID:0000000011290852

Malfunction is detected in ABS operation signal that is output from ABS actuator and electric unit (control unit) through CAN communication.

### DTC Logic

INFOID:0000000011290853

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1830]	ABS OP SIG	Malfunction is detected in ABS operation signal that is output from ABS actuator and electric unit (control unit) through CAN communication.	Refer to <a href="#">DLN-75</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

Is DTC P1830 displayed?

- YES >> Perform diagnosis procedure. Refer to [DLN-75, "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:0000000011290854

#### 1. CHECK DTC WITH ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform self-diagnosis with ABS actuator and electric unit (control unit). Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system.  
NO >> GO TO 2.

#### 2. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

Are the inspection results normal?

- YES >> GO TO 3.  
NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector.  
If any items are damaged, repair or replace damaged parts.

#### 3. CHECK DTC

Perform the self-diagnosis, after driving a vehicle for a while.

Are the inspection results normal?

- YES >> Inspection End.  
NO >> Perform self-diagnosis with ABS actuator and electric unit (control unit) again.

# P1831 VDC OPERATION SIGNAL (ABS)

[ATX14B]

< DTC/CIRCUIT DIAGNOSIS >

## P1831 VDC OPERATION SIGNAL (ABS)

### Description

INFOID:000000011290855

Malfunction is detected in the VDC operation signal that is output from ABS actuator and electric unit (control unit) through CAN communication.

### DTC Logic

INFOID:000000011290856

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1831]	VDC OP SIG	Malfunction is detected in VDC operation signal that is output from ABS actuator and electric unit (control unit) through CAN communication.	Refer to <a href="#">DLN-76</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

#### Is DTC P1831 displayed?

- YES >> Perform diagnosis procedure. Refer to [DLN-76, "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:000000011290857

#### 1. CHECK DTC WITH ABS ACTUATOR AND ELECTRIC UNIT

Perform self-diagnosis with ABS actuator and electric unit (control unit). Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

#### Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system.  
NO >> GO TO 2.

#### 2. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

#### Are the inspection results normal?

- YES >> GO TO 3.  
NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector.  
If any items are damaged, repair or replace damaged parts.

#### 3. CHECK DTC

Perform the self-diagnosis, after driving a vehicle for a while.

#### Are the inspection results normal?

- YES >> Inspection End.  
NO >> Perform self-diagnosis with ABS actuator electric unit (control unit) again.

# P1832 TCS OPERATION SIGNAL (ABS)

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## P1832 TCS OPERATION SIGNAL (ABS)

### Description

INFOID:0000000011290858

Malfunction is detected in TCS operation signal that is output from ABS actuator and electric unit (control unit) through CAN communication.

### DTC Logic

INFOID:0000000011290859

### DTC DETECTION LOGIC

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1832]	TCS OP SIG	Malfunction is detected in TCS operation signal that is output from ABS actuator and electric unit (control unit) through CAN communication.	Refer to <a href="#">DLN-77</a> .

### DTC CONFIRMATION PROCEDURE

#### 1. DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Perform self-diagnosis.

Is DTC P1832 displayed?

- YES >> Perform diagnosis procedure. Refer to [DLN-77, "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:0000000011290860

#### 1. CHECK DTC WITH ABS ACTUATOR AND ELECTRIC UNIT

Perform self-diagnosis with ABS actuator and electric unit (control unit). Refer to [BRC-24, "CONSULT Function \(ABS\)"](#).

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system.  
NO >> GO TO 2.

#### 2. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

Are the inspection results normal?

- YES >> GO TO 3.  
NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector.  
If any items are damaged, repair or replace damaged parts.

#### 3. CHECK DTC

Perform the self-diagnosis, after driving a vehicle for a while.

Are the inspection results normal?

- YES >> Inspection End.  
NO >> Perform self-diagnosis with ABS actuator electric unit (control unit) again.

# U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## U1000 CAN COMM CIRCUIT

### Description

INFOID:0000000011290861

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit communicate data but selectively reads required data only.

### DTC Logic

INFOID:0000000011290862

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1000	CAN COMM CIRCUIT	Transfer control unit is not transmitting/receiving CAN communication signal for 2 seconds or more.	<ul style="list-style-type: none"><li>• CAN communication error</li><li>• Malfunction of transfer control unit</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

##### Ⓟ With CONSULT

1. Turn the ignition switch ON.
2. Perform transfer control unit self-diagnosis. Refer to [DLN-18. "CONSULT Function \(ALL MODE AWD/4WD\)"](#).

##### Is DTC U1000 detected?

- YES >> Proceed to diagnosis procedure. Refer to [DLN-78. "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:0000000011290863

Refer to [LAN-14. "Trouble Diagnosis Flow Chart"](#).

# U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[ATX14B]

## U1010 CONTROL UNIT (CAN)

### Description

INFOID:0000000011290864

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit communicate data but selectively reads required data only.

### DTC Logic

INFOID:0000000011290865

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1010	CONTROL UNIT (CAN)	Detecting error during the initial diagnosis of CAN controller of transfer control unit.	Malfunction of transfer control unit

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

##### With CONSULT

1. Turn the ignition switch ON.
2. Perform transfer control unit self-diagnosis. Refer to [DLN-18. "CONSULT Function \(ALL MODE AWD/4WD\)"](#).

##### Is DTC U1010 detected?

- YES >> Proceed to diagnosis procedure. Refer to [DLN-79. "Diagnosis Procedure"](#).  
NO >> Inspection End.

### Diagnosis Procedure

INFOID:0000000011290866

#### 1. CHECK TRANSFER CONTROL UNIT CONNECTOR

Check transfer control unit connectors for disconnection and deformation.

##### Is the inspection result normal?

- YES >> Replace transfer control unit. Refer to [DLN-129. "Removal and Installation"](#).  
NO >> Repair or replace parts as necessary.

# TRANSFER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[ATX14B]

## ECU DIAGNOSIS INFORMATION

### TRANSFER CONTROL UNIT

#### Reference Value

INFOID:0000000011290867

#### VALUE ON THE DIAGNOSIS TOOL

CONSULT data monitor item

Monitored item [Unit]	Content	Condition	Display value
VHCL/S SEN-FR [km/h] or [mph]	Wheel speed (Front wheel)	Vehicle stopped	0 km/h (0 mph)
		Vehicle running <b>CAUTION:</b> Check air pressure of tire under standard condition.	Approximately equal to the indication on speedometer (Inside of ±10%)
VHCL/S SEN-RR [km/h] or [mph]	Wheel speed (Rear wheel)	Vehicle stopped	0 km/h (0 mph)
		Vehicle running <b>CAUTION:</b> Check air pressure of tire under standard condition.	Approximately equal to the indication on speedometer (Inside of ±10%)
ENGINE SPEED [rpm]	Engine speed	Engine stopped (Engine speed: Less than 400 rpm)	0 rpm
		Engine running (Engine speed: 400 rpm or more)	Approximately equal to the indication on tachometer
THRTL POS SEN [0.0/8]	Accelerator pedal position (APP) sensor signal voltage	Accelerator pedal: Released	Approx. 0.5V
		Accelerator pedal: Fully depressed	Approx. 4.0V
FLUID TEMP SE [V]	Transfer fluid temperature signal voltage	Transfer fluid temperature approx. 20 - 80°C (68 - 176°F)	Approx. 1.1 - 0.3V
BATTERY VOLT [V]	Power supply voltage for transfer control unit	Ignition switch: ON	Battery voltage
2WD SWITCH [ON/OFF]	Input condition from 4WD shift switch	4WD shift switch: 2WD	ON
		4WD shift switch: AUTO, 4H or 4LO	OFF
AUTO SWITCH [ON/OFF]	Input condition from 4WD shift switch	4WD shift switch: AUTO	ON
		4WD shift switch: 2WD, 4H or 4LO	OFF
LOCK SWITCH [ON/OFF]	Input condition from 4WD shift switch	4WD shift switch: 4H	ON
		4WD shift switch: 2WD, AUTO or 4LO	OFF
4L SWITCH [ON/OFF]	Input condition from 4WD shift switch	4WD shift switch: 4LO	ON
		4WD shift switch: 2WD, AUTO or 4H	OFF
N POSI SW TF [ON/OFF]	Condition of neutral-4LO switch	4WD shift switch: 2WD, AUTO or 4H	OFF
		<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul> 4WD shift switch: 4H to 4LO (While actuator motor is operating.)	OFF→ON
		4WD shift switch: 4LO to 4H (While actuator motor is operating.)	ON→OFF
		4WD shift switch: 4LO	ON



# TRANSFER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[ATX14B]

Monitored item [Unit]	Content	Condition	Display value		
ATP SWITCH [ON/OFF]	Condition of ATP switch	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch : 4H to 4LO or 4LO to 4H (While actuator motor is operating.)	ON	A
			Except the above	OFF	B
WAIT DETCT SW [ON/OFF]	Condition of wait detection switch	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 2WD, AUTO or 4H	OFF	C
			4WD shift switch: 4H to 4LO (While actuator motor is operating.)	OFF→ON	DLN
			4WD shift switch: 4LO to 4H (While actuator motor is operating.)	ON→OFF	
			4WD shift switch: 4LO	ON	E
LINE PRES SW [ON/OFF]	Condition of line pressure switch	<ul style="list-style-type: none"> <li>• A/T selector lever D position</li> <li>• 4WD shift switch: AUTO</li> </ul>		ON	F
		<ul style="list-style-type: none"> <li>• Except the above</li> <li>• The vehicle has been left at room temperature for 5 minutes and more with ignition switch in OFF position.</li> </ul>	<ul style="list-style-type: none"> <li>• Ignition switch: ON</li> <li>• A/T selector lever: P or N position</li> <li>• 4WD shift switch: other than AUTO</li> </ul>	OFF	G
CL PRES SW [ON / OFF]	Condition of clutch pressure switch	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever D position</li> <li>• 4WD shift switch: AUTO or 4H (Wait function is not operating.)</li> </ul>		ON	H
		<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• 4WD shift switch: 2WD (Wait function is not operating.)</li> </ul>		OFF	I
N POSI SW AT [ON/OFF]	Input condition from transmission range switch	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• Brake pedal depressed</li> </ul>	A/T selector lever position: N	ON	J
			Except the above	OFF	K
R POSI SW AT [ON/OFF]	Input condition from transmission range switch	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• Brake pedal depressed</li> </ul>	A/T selector lever position: R	ON	L
			Except the above	OFF	
P POSI SW AT [ON/OFF]	Input condition from transmission range switch	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• Brake pedal depressed</li> </ul>	A/T selector lever position: P	ON	M
			Except the above	OFF	
ABS OPER SW [ON/OFF]	Condition of ABS operating	ABS is operating.		ON	N
		ABS is not operating.		OFF	
VDC OPER SW [ON/OFF]	Condition of VDC operating	VDC is operating.		ON	O
		VDC is not operating.		OFF	
TCS OPER SW [ON/OFF]	Condition of TCS operating	TCS is operating.		ON	P
		TCS is not operating.		OFF	
THROTTLE POSI [0.0/8]	Condition of throttle opening	When depressing accelerator pedal (Value rises gradually in response to throttle position.)		0.0/8 - 8.0/8	
4WD MODE [AUTO/LOCK/2WD/4L]	Control status of 4WD (Output condition of 4WD shift indicator lamp and 4LO indicator lamp)	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 2WD	2WD	
			4WD shift switch: AUTO	AUTO	
			4WD shift switch: 4H	LOCK	
			4WD shift switch: 4LO	4L	

# TRANSFER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[ATX14B]

Monitored item [Unit]	Content	Condition	Display value	
VHCL/S COMP [km/h] or [mph]	Vehicle speed	Vehicle stopped	0 km/h (0 mph)	
		Vehicle running <b>CAUTION:</b> Check air pressure of tire under standard condition.	Approximately equal to the indication on speedometer (Inside of $\pm 10\%$ )	
COMP CL TORQ [kgm]	Condition of control torque	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 2WD	0 kg-m
			4WD shift switch: AUTO	39 - 1,353 N·m (4 - 138 kg-m, 29 - 998 ft-lb)
			4WD shift switch: 4H or 4LO	1,353 N·m (138 kg-m, 998 ft-lb)
DUTY SOLENOID [%]	Condition of clutch pressure solenoid	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 2WD	4%
			4WD shift switch: AUTO	96 - 4%
			4WD shift switch: 4H or 4LO	4%
2-4WD SOL [ON/OFF]	Condition of 2-4WD shift solenoid valve	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 2WD	OFF
			4WD shift switch: AUTO	ON
			4WD shift switch: 4H	
			4WD shift switch: 4LO	OFF
			4WD shift switch: AUTO (Wait function is operating.)	
			4WD shift switch: 4H (Wait function is operating.)	
2-4WD SOL MON [ON/OFF]	Check signal for transfer control unit signal output	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 2WD	OFF
			4WD shift switch: AUTO	ON
			4WD shift switch: 4H	
			4WD shift switch: 4LO	OFF
			4WD shift switch: AUTO (Wait function is operating.)	
			4WD shift switch: 4H (Wait function is operating.)	
MOTOR RELAY [ON/OFF]	Condition of transfer motor relay	<ul style="list-style-type: none"> <li>• Accelerator pedal depressed</li> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 2WD	OFF
			4WD shift switch: AUTO or 4LO (A/T selector lever P or N position)	OFF (ON for approx. 2 sec. after shifting to P and N.)
			4WD shift switch: AUTO or 4LO (Except for A/T selector lever P or N position)	ON
			4WD shift switch: 4H (A/T selector lever P position)	OFF (ON for approx. 2 sec. after shifting to P.)
			4WD shift switch: 4H (Except for A/T selector lever P position)	ON

# TRANSFER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[ATX14B]

Monitored item [Unit]	Content	Condition	Display value		
MOTOR RLY MON [ON/OFF]	Check signal for transfer control unit signal output	<ul style="list-style-type: none"> <li>• Accelerator pedal depressed</li> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 2WD	OFF	A
			4WD shift switch: AUTO or 4LO (A/T selector lever P or N position)	OFF (ON for approx. 2 sec. after shifting to P and N.)	B
			4WD shift switch: AUTO or 4LO (Except for A/T selector lever P or N position)	ON	C
			4WD shift switch: 4H (A/T selector lever P position)	OFF (ON for approx. 2 sec. after shifting to P.)	DLN
			4WD shift switch: 4H (Except for A/T selector lever P position)	ON	E
4WD FAIL LAMP [ON/OFF]	Condition of 4WD warning lamp	4WD warning lamp: ON	ON	F	
		4WD warning lamp: OFF	OFF		
2WD IND [ON/OFF]	Condition of 4WD shift indicator lamp (2WD indicator lamp)	2WD indicator lamp of 4WD shift indicator lamp: OFF	OFF	G	
		2WD indicator lamp of 4WD shift indicator lamp: ON	ON		
AUTO IND [ON/OFF]	Condition of 4WD shift indicator lamp (AUTO indicator lamp)	AUTO indicator lamp of 4WD shift indicator lamp: OFF	OFF	H	
		AUTO indicator lamp of 4WD shift indicator lamp: ON	ON		
LOCK IND [ON/OFF]	Condition of 4WD shift indicator lamp (Lock indicator lamp)	Lock indicator lamp of 4WD shift indicator lamp: OFF	OFF	I	
		Lock indicator lamp of 4WD shift indicator lamp: ON	ON		
4L IND [ON/OFF]	Condition of 4LO indicator lamp condition	4LO indicator lamp: OFF	OFF	J	
		4LO indicator lamp: ON	ON		
ATP IND [ON/OFF]	Condition of ATP indicator lamp	ATP indicator lamp: ON	ON	K	
		ATP indicator lamp: OFF	OFF		
SHIFT POS SW1 [ON/OFF]	Condition of actuator position switch 1 (Low)	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 4LO	ON	L
			4WD shift switch: 2WD, AUTO or 4H	OFF	
SHIFT POS SW2 [ON/OFF]	Condition of actuator position switch 2 (High)	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 4H, AUTO or 2WD	ON	M
			4WD shift switch: 4LO	OFF	
SHIFT ACT 1 [ON/OFF]	Output condition to actuator motor (High)	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 4H to 4LO (Wait function is operating.)	ON	N
			Except the above	OFF	O
SHIFT AC MON1 [ON/OFF]	Check signal for transfer control unit signal output	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 4H to 4LO (Wait function is operating.)	ON	P
			Except the above	OFF	
SHIFT ACT 2 [ON/OFF]	Output condition to actuator motor (Low)	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 4LO to 4H (Wait function is operating.)	ON	
			Except the above	OFF	

# TRANSFER CONTROL UNIT


< ECU DIAGNOSIS INFORMATION >

[ATX14B]

Monitored item [Unit]	Content	Condition	Display value
SHIFT AC MON2 [ON/OFF]	Check signal for transfer control unit signal output	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 4LO to 4H (Wait function is operating.)
		Except the above	OFF
T/F F SPEED [km/h] or [mph]	Displayed, but do not use.		
AT R SPEED [km/h] or [mph]	Condition of vehicle speed sensor A/T (output speed sensor)	During driving	Approximately matches the output shaft speed.
AT GEAR POSI [1/2/3/4/5]	Condition of A/T selector lever position	Displays actual A/T gear position.	1 2 3 4 5

## PHYSICAL VALUES

### Terminal Layout

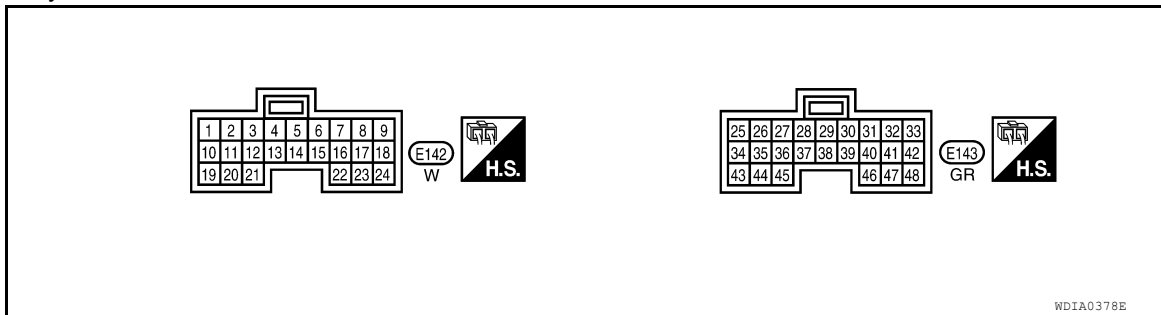

Terminal	Wire color	Item	Condition	Data (Approx.)
1	GR	2-4WD shift solenoid valve	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever "N" position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 2WD
			4WD shift switch: AUTO, 4H or 4LO	Battery voltage
3	B	Ground	Always	0V
4	Y/L	Transfer shift high relay	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever "N" position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: 4H to 4LO ("Wait" function is operating.)
			Except the above	0V
6	B	Ground	Always	0V
7	L	CAN-H	—	—
8	P	CAN-L	—	—
9	G/W	4WD shift switch (2WD)	Ignition switch: ON	4WD shift switch: 2WD
			4WD shift switch: AUTO, 4H or 4LO	0V
10	L/W	Transfer dropping resistor	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever "N" position</li> <li>• Brake pedal depressed</li> </ul>	4WD shift switch: AUTO
			4WD shift switch: 2WD, 4H or 4LO	4 - 14V
				Less than 1V

# TRANSFER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[ATX14B]

Terminal	Wire color	Item	Condition	Data (Approx.)	
13	G/B	Transfer shift low relay	<ul style="list-style-type: none"> <li>Vehicle stopped</li> <li>Engine running</li> <li>A/T selector lever "N" position</li> <li>Brake pedal depressed</li> </ul>	4WD shift switch: 4LO to 4H ("Wait" function is operating.)	Battery voltage
				Except the above	0V
14	LG	Transfer motor relay	<ul style="list-style-type: none"> <li>Accelerator pedal depressed</li> <li>Vehicle stopped</li> <li>Engine running</li> <li>Brake pedal depressed</li> </ul>	4WD shift switch: 2WD	Battery voltage
				4WD shift switch: AUTO or 4LO (A/T selector lever "P" or "N" position)	Battery voltage (0V for approx. 2 sec. after shifting to "P" and "N".)
				4WD shift switch: AUTO or 4LO (Except for A/T selector lever "P" or "N" position)	0V
				4WD shift switch: 4H (A/T selector lever "P" position)	Battery voltage (0V for approx. 2 sec. after shifting to "P".)
				4WD shift switch: 4H (Except for A/T selector lever "P" position)	0V
16	Y/R	Power supply	Ignition switch: ON	Battery voltage	
			Ignition switch: OFF	0V	
18	O	4WD shift switch (4H)	Ignition switch: ON	4WD shift switch: 4H	Battery voltage
				4WD shift switch: 2WD, AUTO or 4LO	0V
19	L	Clutch pressure solenoid valve	<ul style="list-style-type: none"> <li>Vehicle stopped</li> <li>Engine running</li> <li>A/T selector lever "N" position</li> <li>Brake pedal depressed</li> </ul>	4WD shift switch: AUTO	1.5 - 3V
				4WD shift switch: 2WD, 4H or 4LO	Less than 1V
22	Y/R	Power supply	Ignition switch: ON	Battery voltage	
			Ignition switch: OFF	0V	
23	R	4WD shift switch (4LO)	Ignition switch: ON	4WD shift switch: 4LO	Battery voltage
				4WD shift switch: 2WD, AUTO or 4H	0V
24	LG/R	4WD shift switch (AUTO)	Ignition switch: ON	4WD shift switch: AUTO	Battery voltage
				4WD shift switch: 2WD, 4H or 4LO	0V
25	V	Neutral-4LO switch	<ul style="list-style-type: none"> <li>Vehicle stopped</li> <li>Engine running</li> <li>A/T selector lever "N" position</li> <li>Brake pedal depressed</li> </ul>	4WD shift switch: 2WD, AUTO or 4H	Battery voltage
				4WD shift switch: 4H to 4LO (While actuator motor is operating.)	Battery voltage → 0V
				4WD shift switch: 4LO to 4H (While actuator motor is operating.)	0V → Battery voltage
				4WD shift switch: 4LO	0V
27	W/L	Actuator position switch 2 (High)	<ul style="list-style-type: none"> <li>Vehicle stopped</li> <li>Engine running</li> <li>A/T selector lever "N" position</li> <li>Brake pedal depressed</li> </ul>	4WD shift switch: 4H, AUTO or 2WD	0V
				4WD shift switch: 4LO	Battery voltage
28	B/G	Sensor ground	Always	0V	
29	L/W	Ignition switch monitor	Ignition switch: ON	Battery voltage	
			Ignition switch: OFF	0V	

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TRANSFER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[ATX14B]

Terminal	Wire color	Item	Condition	Data (Approx.)	
30	SB	Shut off relay	Ignition switch: ON	0V	
			Ignition switch: OFF	Battery voltage	
31	G	Transfer fluid temperature sensor	Ignition switch: ON	Transfer fluid temperature approx. 20°C (68°F)	1.1V
				Transfer fluid temperature approx. 80°C (176°F)	0.3V
33	R/L	Transfer shift high relay monitor	<ul style="list-style-type: none"> <li>Vehicle stopped</li> <li>Engine running</li> <li>A/T selector lever "N" position</li> <li>Brake pedal depressed</li> </ul>	4WD shift switch: 4H to 4LO ("Wait" function is operating.)	Battery voltage
				Except the above	0V
34	BR	Clutch pressure switch	<ul style="list-style-type: none"> <li>Vehicle stopped</li> <li>Engine running</li> <li>A/T selector lever "D" position</li> </ul>	4WD shift switch: AUTO or 4H ("Wait" function is not operating.)	0V
			<ul style="list-style-type: none"> <li>Vehicle stopped</li> <li>Engine running</li> </ul>	4WD shift switch: 2WD ("Wait" function is not operating.)	Battery voltage
35	BR/W	Line pressure switch	<ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>A/T selector lever "D" position</li> <li>4WD shift switch: AUTO</li> </ul>		0V
			<ul style="list-style-type: none"> <li>After the vehicle has been left at room temperature for 5 minutes and more with ignition switch in "OFF" position.</li> </ul>	<ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>A/T selector lever: "P" or "N" position</li> <li>4WD shift switch: other than AUTO</li> </ul>	Battery voltage
40	L/Y	ATP switch	<ul style="list-style-type: none"> <li>Vehicle stopped</li> <li>Engine running</li> <li>A/T selector lever "N"</li> <li>Brake pedal depressed</li> </ul>	4WD shift switch: 4H to 4LO or 4LO to 4H (While actuator motor is operating.)	0V
				Except the above	Battery voltage
41	R	Transfer motor relay monitor	<ul style="list-style-type: none"> <li>Accelerator pedal depressed</li> <li>Vehicle stopped</li> <li>Engine running</li> <li>Brake pedal depressed</li> </ul>	4WD shift switch: 2WD	0V
				4WD shift switch: AUTO or 4LO (A/T selector lever "P" or "N" position)	0V (Battery voltage for approx. 2 sec. after shifting to "P" and "N".)
				4WD shift switch: AUTO or 4LO (Except for A/T selector lever "P" or "N" position)	Battery voltage
				4WD shift switch: 4H (A/T selector lever "P" position)	0V (Battery voltage for approx. 2 sec. after shifting to "P".)
				4WD shift switch: 4H (Except for A/T selector lever "P" position)	Battery voltage
42	P/G	Transfer shift low relay monitor	<ul style="list-style-type: none"> <li>Vehicle stopped</li> <li>Engine running</li> <li>A/T selector lever "N" position</li> <li>Brake pedal depressed</li> </ul>	4WD shift switch: 4LO to 4H ("Wait" function is operating.)	Battery voltage
				Except the above	0V

# TRANSFER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[ATX14B]

Terminal	Wire color	Item	Condition	Data (Approx.)
43	G/Y	Wait detection switch	• Vehicle stopped • Engine running • A/T selector lever "N" position • Brake pedal depressed	4WD shift switch: 2WD, AUTO or 4H Battery voltage
				4WD shift switch: 4H to 4LO (While actuator motor is operating.) Battery voltage → 0V
				4WD shift switch: 4LO to 4H (While actuator motor is operating.) 0V → Battery voltage
				4WD shift switch: 4LO 0V
44	LG/B	Actuator position switch 1 (Low)	• Vehicle stopped • Engine running • A/T selector lever "N" position • Brake pedal depressed	4WD shift switch: 4LO 0V
				4WD shift switch: 2WD, AUTO or 4H Battery voltage
45	B	Ground	Always	0V
47	W	Power supply (Memory back-up)	Ignition switch: ON	Battery voltage
			Ignition switch: OFF	Battery voltage

**CAUTION:**

When using a circuit tester to measure voltage for inspection, be sure not to extend forcibly any connector terminals.

**NOTE:**

Data are reference value and are measured between each terminal and ground.

## DTC Index

INFOID:0000000011290868

## DTC CHART

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1802]	CONTROL UNIT 1	Malfunction is detected in the memory (RAM) system of transfer control unit.	Refer to <a href="#">DLN-25</a> .
[P1803]	CONTROL UNIT 2	Malfunction is detected in the memory (ROM) system of transfer control unit.	
[P1804]	CONTROL UNIT 3	Malfunction is detected in the memory (EEPROM) system of transfer control unit.	
[P1807]	VHCL SPEED SEN·AT	<ul style="list-style-type: none"> <li>Malfunction is detected in output shaft revolution signal that is output from TCM through CAN communication.</li> <li>Improper signal is input while driving.</li> </ul>	Refer to <a href="#">DLN-27</a> .
[P1808]	VHCL SPEED SEN·ABS	<ul style="list-style-type: none"> <li>Malfunction is detected in vehicle speed signal that is output from ABS actuator and electric unit (control unit) through CAN communication.</li> <li>Improper signal is input while driving.</li> </ul>	Refer to <a href="#">DLN-28</a> .
[P1809]	CONTROL UNIT 4	AD converter system of transfer control unit is malfunctioning.	Refer to <a href="#">DLN-25</a> .
[P1810]	4L POSI SW TF	Improper signal from neutral-4LO switch is input due to open or short circuit.	Refer to <a href="#">DLN-29</a> .
[P1811]	BATTERY VOLTAGE	Power supply voltage for transfer control unit is abnormally low while driving.	Refer to <a href="#">DLN-22</a> .
[P1813]	4WD MODE SW	More than two switch inputs are simultaneously detected due to short circuit of 4WD shift switch.	Refer to <a href="#">DLN-32</a> .
[P1814]	4WD DETECT SWITCH	Improper signal from wait detection switch is input due to open or short circuit.	Refer to <a href="#">DLN-35</a> .
[P1816]	PNP SW/CIRC	When transmission range switch signal is malfunction or communication error between the control units.	Refer to <a href="#">DLN-38</a> .

# TRANSFER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[ATX14B]

DTC	CONSULT	Diagnostic item is detected when...	Reference
[P1817]	SHIFT ACTUATOR	<ul style="list-style-type: none"> <li>Motor does not operate properly due to open or short circuit in actuator motor.</li> <li>Malfunction is detected in the actuator motor. (When 4WD shift switch is operated and actuator motor is not operated)</li> <li>Malfunction is detected in transfer shift high relay and transfer shift low relay.</li> </ul>	Refer to <a href="#">DLN-39</a> .
[P1818]	SHIFT ACT POSI SW	<ul style="list-style-type: none"> <li>Improper signal from actuator position switch is input due to open or short circuit.</li> <li>Malfunction is detected in the actuator position switch.</li> </ul>	Refer to <a href="#">DLN-45</a> .
[P1819]	SHIFT ACT CIR	<ul style="list-style-type: none"> <li>Transfer control device actuator circuit is shorted or open. (Malfunctions are detected when transfer shift relay circuit is open/shorted or relay monitor circuit is open/shorted.)</li> <li>Malfunction occurs in transfer control device drive circuit.</li> <li>Malfunction is detected in transfer shut off relay.</li> </ul>	Refer to <a href="#">DLN-48</a> .
[P1820]	ENGINE SPEED SIG	<ul style="list-style-type: none"> <li>Malfunction is detected in engine speed signal that is output from ECM through CAN communication.</li> <li>Improper signal is input while driving.</li> </ul>	Refer to <a href="#">DLN-52</a> .
[P1822]	DUTY SOLENOID	Proper voltage is not applied to clutch pressure solenoid valve due to open or short circuit.	Refer to <a href="#">DLN-53</a> .
[P1823]	2-4WD SOLENOID	Proper voltage is not applied to 2-4WD solenoid valve due to open or short circuit.	Refer to <a href="#">DLN-57</a> .
[P1824]	MOTOR RELAY	Motor does not operate properly due to open or short circuit in transfer motor or transfer motor relay.	Refer to <a href="#">DLN-60</a> .
[P1826]	OIL TEMP SEN	Signal voltage from transfer fluid temperature sensor is abnormally high (Transfer fluid temperature is abnormally low) while driving.	Refer to <a href="#">DLN-65</a> .
[P1827]	CLUTCH PRES SW	<ul style="list-style-type: none"> <li>Improper signal from clutch pressure switch is input due to open or short circuit.</li> <li>Malfunction occurs in clutch pressure switch or hydraulic circuit.</li> </ul>	Refer to <a href="#">DLN-68</a> .
[P1828]	LINE PRES SW	<ul style="list-style-type: none"> <li>Improper signal from line pressure switch is input due to open or short circuit.</li> <li>Malfunction occurs in line pressure switch or hydraulic circuit.</li> </ul>	Refer to <a href="#">DLN-71</a> .
[P1829]	THROTTLE POSI SEN	<ul style="list-style-type: none"> <li>Malfunction is detected in accelerator pedal position signal that is output from ECM through CAN communication.</li> <li>Signal voltage from accelerator pedal position sensor is abnormally high or low.</li> </ul>	Refer to <a href="#">DLN-74</a> .
[P1830]	ABS OP SIG	Malfunction is detected in ABS operation signal that is output from ABS actuator and electric unit (control unit) through CAN communication.	Refer to <a href="#">DLN-75</a> .
[P1831]	VDC OP SIG	Malfunction is detected in VDC operation signal that is output from ABS actuator and electric unit (control unit) through CAN communication.	Refer to <a href="#">DLN-76</a> .
[P1832]	TCS OP SIG	Malfunction is detected in TCS operation signal that is output from ABS actuator and electric unit (control unit) through CAN communication.	Refer to <a href="#">DLN-77</a> .
[U1000]	CAN COMM CIRCUIT	When transfer control unit is not transmitting or receiving CAN communication signal for 2 seconds or more.	Refer to <a href="#">DLN-78</a>
[U1010]	CONTROL UNIT (CAN)	Detecting error during the initial diagnosis of CAN controller of transfer control unit.	Refer to <a href="#">DLN-79</a>



# TRANSFER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[ATX14B]

**CAUTION:**

- If CAN COMM CIRCUIT [U1000] or CONTROL UNIT (CAN) [U1010] is displayed with other DTCs, first perform the trouble diagnosis for CAN communication line.
- If ABS OP SIG [P1830], VDC OP SIG [P1831] or TCS OP SIG [P1832] is displayed, first perform the trouble diagnosis for ABS system.
- If VHCL SPEED SEN-AT [P1807] is displayed, first perform the trouble diagnosis for A/T system.

**NOTE:**

- If SHIFT ACT POSI SW [P1818] or SHIFT ACT CIR [P1819] is displayed, first erase self-diagnostic results. (SHIFT ACT POSI SW [P1818] or SHIFT ACT CIR [P1819] may be displayed after installing transfer control unit or transfer assembly.)
- If CL PRES SW [P1827] or LINE PRES SW [P1828] is displayed only while driving in reverse, check the continuity of R position on transmission range switch. When there is no malfunction found in the electrical system, check the hydraulic system.

**FLASH CODE CHART**

Flashing pattern	Item	Diagnostic item is detected when...	Reference
2	Vehicle speed signal (from A/T)	<ul style="list-style-type: none"> <li>• Malfunction is detected in output shaft revolution signal that is output from TCM through CAN communication.</li> <li>• Improper signal is input while driving.</li> </ul>	Refer to <a href="#">DLN-27</a> .
3	Clutch pressure solenoid signal	Proper voltage is not applied to clutch pressure solenoid valve due to open or short circuit.	Refer to <a href="#">DLN-53</a> .
4	2-4WD solenoid signal	Proper voltage is not applied to 2-4WD solenoid valve due to open or short circuit.	Refer to <a href="#">DLN-57</a> .
5	Transfer motor	Transfer motor does not operate properly due to open or short circuit in transfer motor or transfer motor relay.	Refer to <a href="#">DLN-60</a> .
6	Vehicle speed signal (from ABS)	<ul style="list-style-type: none"> <li>• Malfunction is detected in vehicle speed signal that is output from ABS actuator and electric unit (control unit) through CAN communication.</li> <li>• Improper signal is input while driving.</li> </ul>	Refer to <a href="#">DLN-28</a> .
7	CAN communication	Malfunction has been detected from CAN communication line.	Refer to <a href="#">DLN-17</a>
8	AD converter	AD converter system of transfer control unit is malfunctioning.	Refer to <a href="#">DLN-25</a> .
9	Transfer fluid temperature	Signal voltage from transfer fluid temperature sensor is abnormally high (Transfer fluid temperature is abnormally low) while driving.	Refer to <a href="#">DLN-65</a> .
10	Neutral-4LO switch	Improper signal from neutral-4LO switch is input due to open or short circuit.	Refer to <a href="#">DLN-29</a> .
11	Clutch pressure switch	<ul style="list-style-type: none"> <li>• Improper signal is input due to open or short circuit.</li> <li>• Malfunction occurs in clutch pressure switch or hydraulic circuit.</li> </ul>	Refer to <a href="#">DLN-68</a> .
12	Line pressure switch	<ul style="list-style-type: none"> <li>• Improper signal is input due to open or short circuit.</li> <li>• Malfunction occurs in line pressure switch or hydraulic circuit.</li> </ul>	Refer to <a href="#">DLN-71</a> .
13	Engine speed signal (from ECM)	<ul style="list-style-type: none"> <li>• Malfunction is detected in engine speed signal that is output from ECM through CAN communication.</li> <li>• Improper signal is input while driving.</li> </ul>	Refer to <a href="#">DLN-52</a> .
14	Accelerator pedal position sensor (from ECM)	<ul style="list-style-type: none"> <li>• Malfunction is detected in accelerator pedal position signal that is output from ECM through CAN communication.</li> <li>• Signal voltage from accelerator pedal position sensor is abnormally high or low.</li> </ul>	Refer to <a href="#">DLN-74</a> .
15	Power supply	Power supply voltage for transfer control unit is abnormally low while driving.	Refer to <a href="#">DLN-22</a> .
16	4WD shift switch	More than two switch inputs are simultaneously detected due to short circuit of 4WD shift switch.	Refer to <a href="#">DLN-32</a> .
17	ABS operation signal (from ABS)	Malfunction is detected in ABS operation signal that is output from ABS actuator and electric unit (control unit) through CAN communication.	Refer to <a href="#">DLN-75</a> .

# TRANSFER CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[ATX14B]

Flashing pattern	Item	Diagnostic item is detected when...	Reference
18	Wait detection switch	Improper signal from wait detection switch is input due to open or short circuit.	Refer to <a href="#">DLN-35</a> .
19	Actuator motor	<ul style="list-style-type: none"> <li>• Motor does not operate properly due to open or short circuit in actuator motor.</li> <li>• Malfunction is detected in the actuator motor. (When 4WD shift switch is operated and actuator motor is not operated)</li> <li>• Malfunction is detected in transfer shift high relay and transfer shift low relay.</li> </ul>	Refer to <a href="#">DLN-39</a> .
20	Actuator position switch	<ul style="list-style-type: none"> <li>• Improper signal from actuator position switch is input due to open or short circuit.</li> <li>• Malfunction is detected in the actuator position switch.</li> </ul>	Refer to <a href="#">DLN-45</a> .
21	Actuator circuit	<ul style="list-style-type: none"> <li>• Transfer control device actuator circuit is shorted or open. (Malfunctions are detected when motor relay circuit is open/shorted or relay transfer shift circuit is open/shorted.)</li> <li>• Malfunction occurs in transfer control device drive circuit.</li> </ul>	Refer to <a href="#">DLN-48</a> .
22	VDC operation signal (from VDC)	Malfunction is detected in VDC operation signal that is output from ABS actuator and electric unit (control unit) through CAN communication.	Refer to <a href="#">DLN-76</a> .
23	TCS operation signal (from TCS)	Malfunction is detected in TCS operation signal that is output from ABS actuator and electric unit (control unit) through CAN communication.	Refer to <a href="#">DLN-77</a> .
24	Transmission range switch signal (from TCM)	When transmission range switch signal is malfunction or communication error between the vehicles.	Refer to <a href="#">DLN-38</a> .
Repeats flickering every 2 to 5 sec.	—	System normal.	Refer to <a href="#">DLN-101</a>
Repeats flickering every 0.25 sec.	Data erase display	<ul style="list-style-type: none"> <li>• Power supply failure of memory back-up.</li> <li>• Battery performance is poor.</li> </ul>	Refer to <a href="#">DLN-22</a> .
No flickering	Transmission range switch or 4WD shift switch	Transmission range switch or 4WD shift switch circuit is shorted or open.	Refer to <a href="#">DLN-38</a> or <a href="#">DLN-32</a> .

**CAUTION:**

- If CAN communication is displayed with other DTCs, first perform the trouble diagnosis for CAN communication line.
- If ABS operation signal, VDC operation signal or TCS operation signal is displayed, first perform the trouble diagnosis for ABS system.
- If Output shaft revolution signal is displayed, first perform the trouble diagnosis for A/T system.

**NOTE:**

- If actuator position switch or actuator circuit is displayed, first erase self-diagnostic results. (Actuator position switch or actuator circuit may be displayed after installing transfer control unit or transfer assembly.)
- If clutch pressure switch or line pressure switch is displayed only while driving in reverse, check the continuity of R position on transmission range switch. When there is no malfunction found in the electrical system, check the hydraulic system.

# ALL-MODE 4WD SYSTEM

< WIRING DIAGRAM >


[ATX14B]

## WIRING DIAGRAM

### ALL-MODE 4WD SYSTEM

#### Wiring Diagram

INFOID:0000000011290869

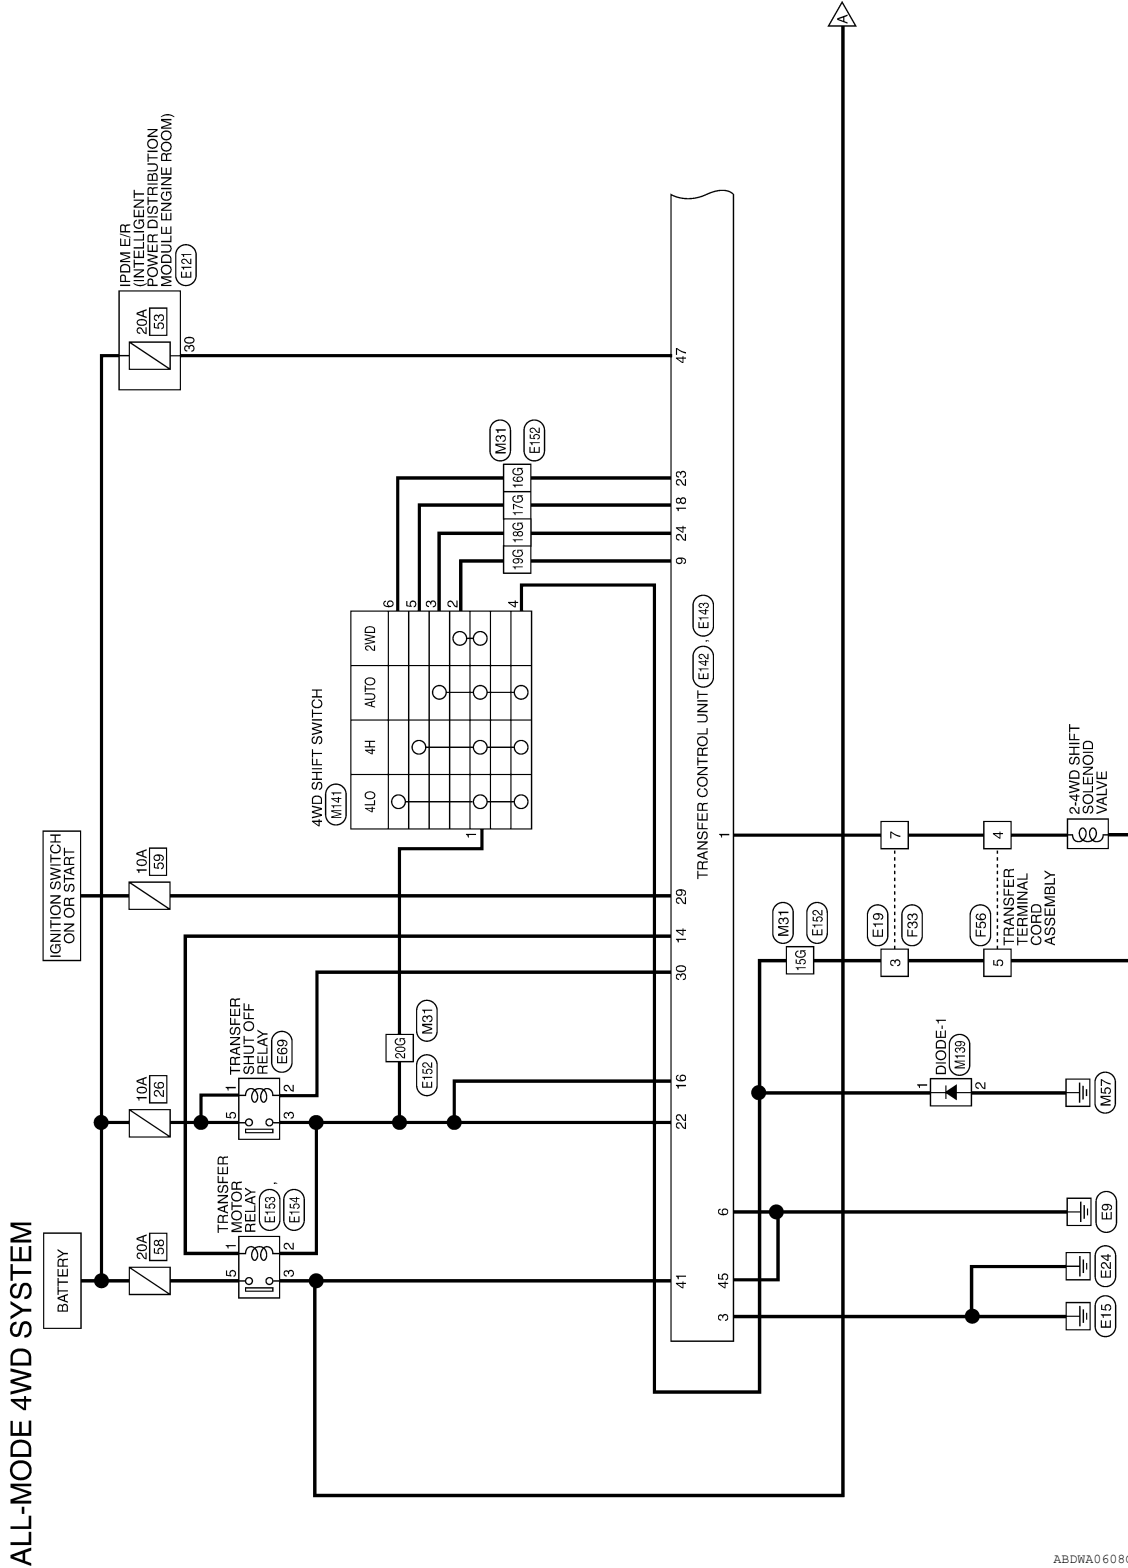


ABDWA0608GB

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# ALL-MODE 4WD SYSTEM

< WIRING DIAGRAM >

[ATX14B]

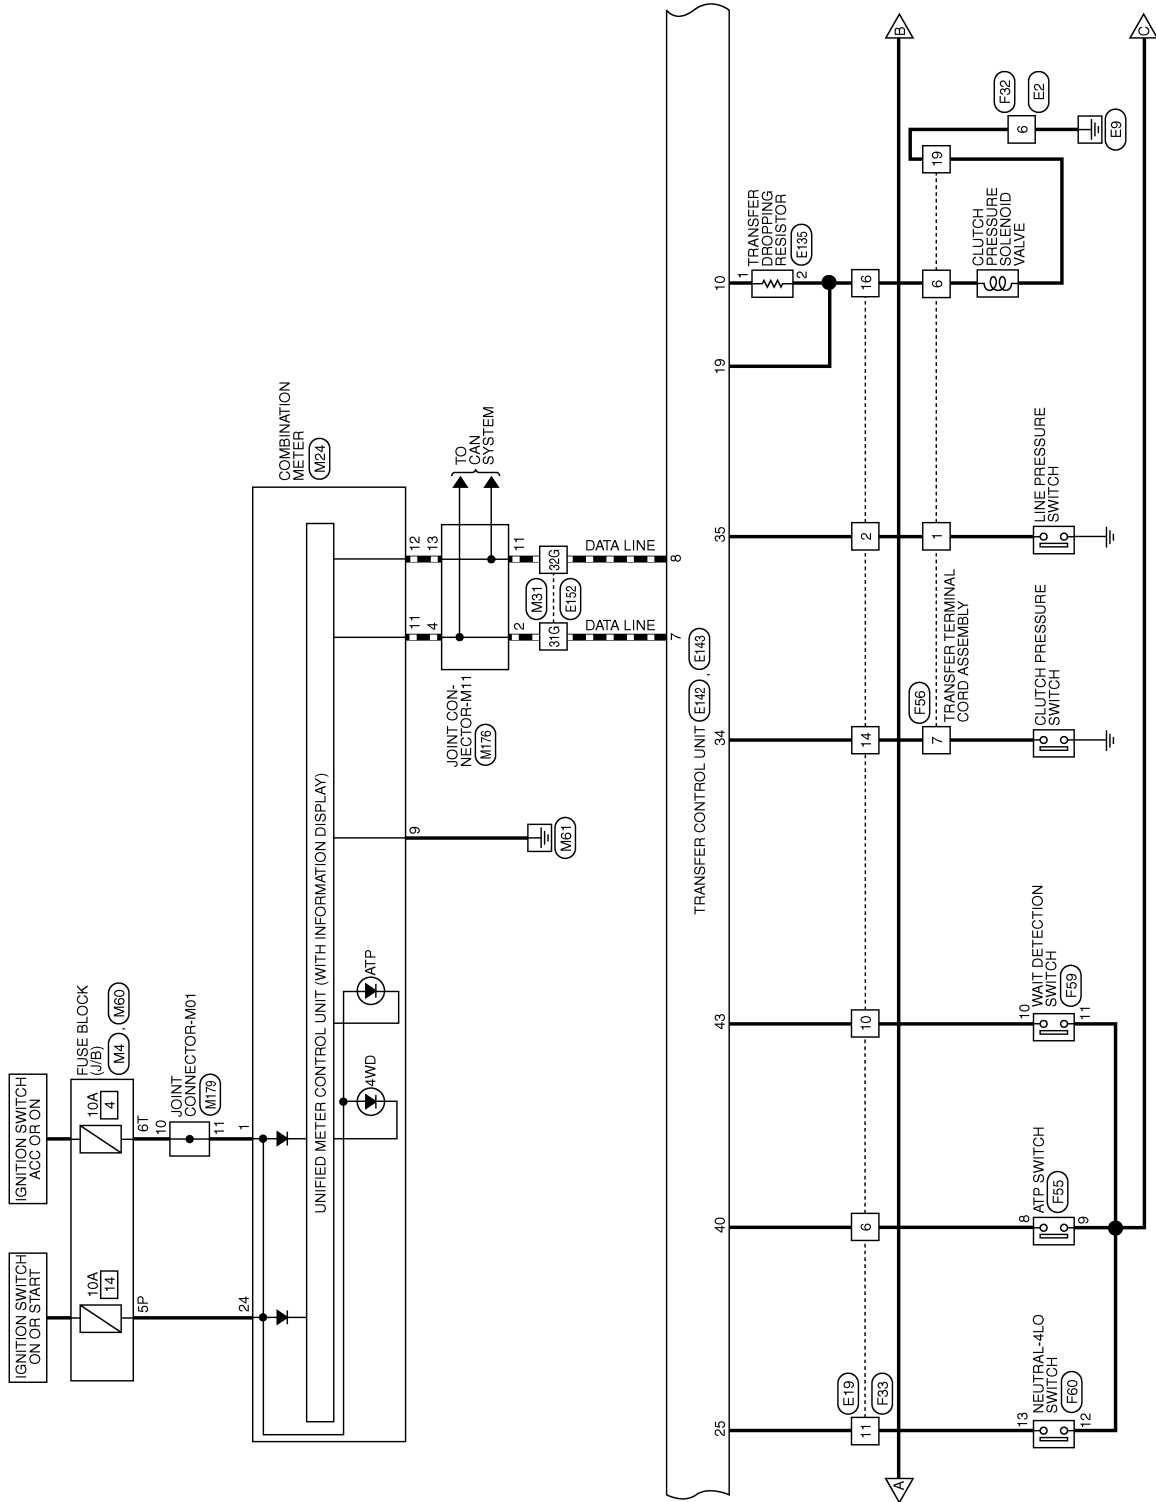


ABDWA0842GB

# ALL-MODE 4WD SYSTEM

< WIRING DIAGRAM >

[ATX14B]

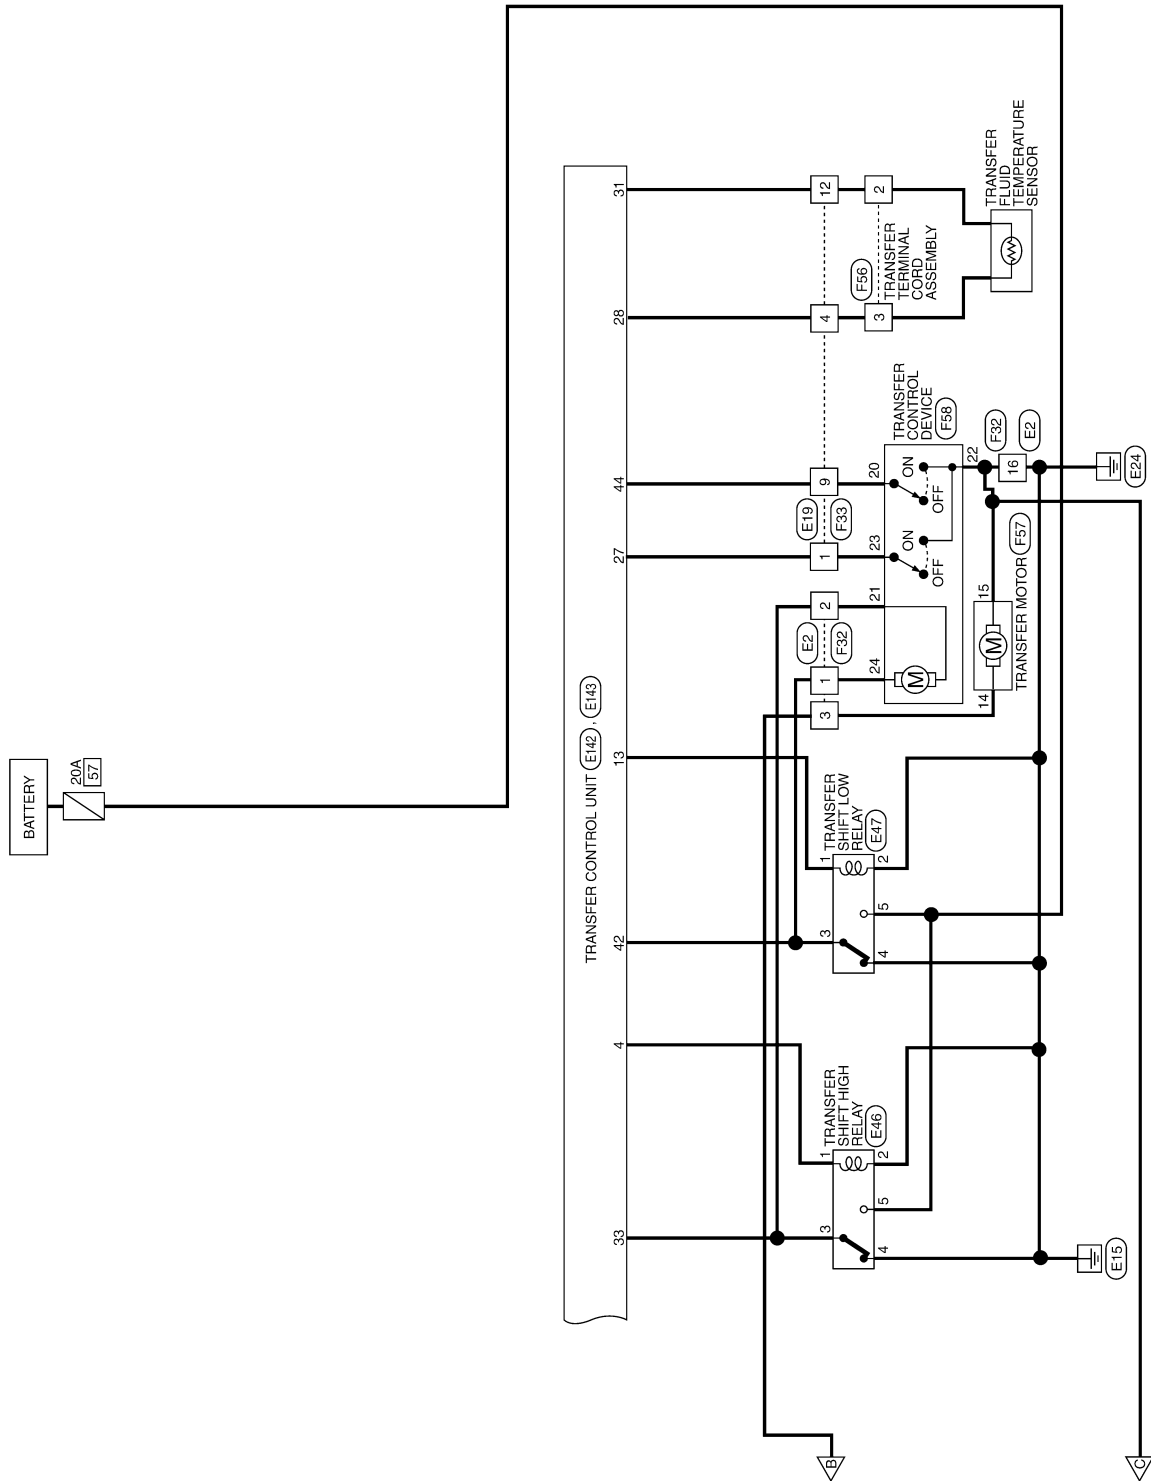

ABDWA0610GB

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


ALL-MODE 4WD SYSTEM CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5P	O/L	-


Connector No.	M24
Connector Name	COMBINATION METER
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	O	ACCESSORY
9	B	GND


Terminal No.	Color of Wire	Signal Name
11	L	CAN-H
12	P	CAN-L
24	O/L	RUN/START

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

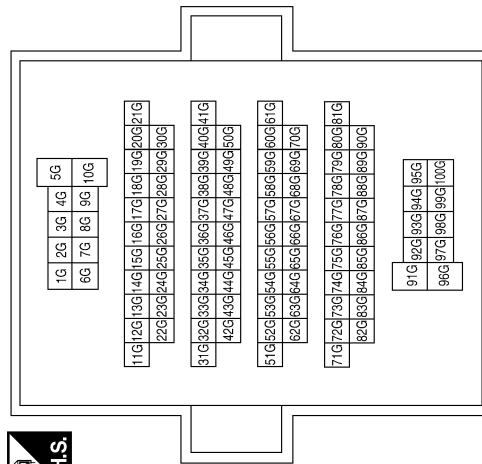

Terminal No.	Color of Wire	Signal Name
15G	G/R	-
16G	R	-
17G	O	-
18G	LG/R	-
19G	G/W	-
20G	W/R	-
31G	L	-
32G	P	-

Connector No.	M60
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6T	O	-


ABDIA0908GB

# ALL-MODE 4WD SYSTEM

< WIRING DIAGRAM >


[ATX14B]

Connector No.	M176
Connector Name	JOINT CONNECTOR-M11
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
2	L	-
4	L	-
11	P	-
13	P	-

Connector No.	M141
Connector Name	4WD SHIFT SWITCH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	W/R	-
2	G/W	-
3	LG/R	-
4	G/R	-
5	O	-
6	R	-

Connector No.	M139
Connector Name	DIODE-1
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	G/R	-
2	B	-

Connector No.	E2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P/G	-
2	R/L	-
3	R	-
6	B	-
16	B	-

Connector No.	M179
Connector Name	JOINT CONNECTOR-M01
Connector Color	GREEN



Terminal No.	Color of Wire	Signal Name
10	O	-
11	O	-

ABDIA1399GB

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# ALL-MODE 4WD SYSTEM

< WIRING DIAGRAM >

[ATX14B]


Connector No.	E46
Connector Name	TRANSFER SHIFT HIGH RELAY
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	Y/L	-
2	B/W	-
3	R/L	-
4	B	-
5	R	-

Terminal No.	Color of Wire	Signal Name
7	GR	-
9	LG/B	-
10	G/Y	-
11	V	-
12	G	-
14	BR	-
16	L	-

Connector No.	E19
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/L	-
2	BR/W	-
3	G/R	-
4	B/G	-
6	L/Y	-

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
30	W	ECM BAT

Connector No.	E69
Connector Name	TRANSFER SHUT OFF RELAY
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	G	-
2	SB	-
3	Y/R	-
5	G	-

Connector No.	E47
Connector Name	TRANSFER SHIFT LOW RELAY
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	G/B	-
2	B/W	-
3	P/G	-
4	B	-
5	R	-

ABDIA1400GB




# ALL-MODE 4WD SYSTEM

< WIRING DIAGRAM >


[ATX14B]

Connector No.	E143
Connector Name	TRANSFER CONTROL UNIT
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
25	V	ON-OFF N SW
26	-	-
27	W/L	ACTR SW2
28	B/G	SENS GND
29	L/W	IGN SW
30	SB	SSOF
31	G	ETS OIL TEMP
32	-	-
33	R/L	R CONT MON 1
34	BR	PRESS DETECT SW
35	BR/W	LINE SW
36	-	-
37	-	-
38	-	-
39	-	-
40	L/Y	ATP SW
41	R	ETS MTR MON
42	P/G	R CONT MON 2
43	G/Y	WAIT SW
44	LG/B	ATCR SW1
45	B	GND
46	-	-
47	W	MEMORY B/U
48	-	-

Connector No.	E142
Connector Name	TRANSFER CONTROL UNIT
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	GR	2 - 4WD SOL
2	-	-
3	B	GND
4	Y/L	RLY CONT1
5	-	-
6	B	GND
7	L	CAN-H
8	P	CAN-L
9	G/W	2WD SW
10	L/W	ETS SOL DR
11	-	-
12	-	-
13	G/B	RLY CONT2
14	LG	ETS MTR RLY
15	-	-
16	Y/R	VIGN
17	-	-
18	O	LOCK SW
19	L	ETS SOL
20	-	-
21	-	-
22	Y/R	VIGN
23	R	4L SW
24	LG/R	AUTO SW

Connector No.	E135
Connector Name	TRANSFER DROPPING RESISTOR
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	L/W	-
2	L	-

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

ABDIA1401GB

# ALL-MODE 4WD SYSTEM

< WIRING DIAGRAM >

[ATX14B]


Connector No.	E153
Connector Name	TRANSFER MOTOR RELAY
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	LG	-
2	Y/R	-

Terminal No.	Color of Wire	Signal Name
15G	G/R	-
16G	R	-
17G	O	-
18G	LG/R	-
19G	G/W	-
20G	W/R	-
31G	L	-
32G	P	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

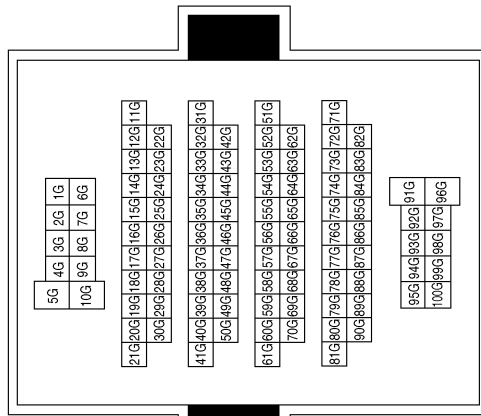

Connector No.	F32
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P/G	-
2	R/L	-
3	R	-
6	B	-
16	B	-

Connector No.	E154
Connector Name	TRANSFER MOTOR RELAY
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	R	-
5	G/R	-

ABDIA1402GB

# ALL-MODE 4WD SYSTEM

< WIRING DIAGRAM >

[ATX14B]


Connector No.	F55
Connector Name	ATP SWITCH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
8	L/Y	-
9	B	-

Terminal No.	Color of Wire	Signal Name
4	B/G	-
6	L/Y	-
7	GR	-
9	LG/B	-
10	G/Y	-
11	V	-
12	G	-
14	BR	-
16	L	-

Connector No.	F33
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/L	-
2	BR/W	-
3	G/R	-

Connector No.	F58
Connector Name	TRANSFER CONTROL DEVICE
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
20	LG/B	-
21	R/L	-
22	B	-
23	W/L	-
24	P/G	-

Connector No.	F57
Connector Name	TRANSFER MOTOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
14	R	-
15	B	-

Connector No.	F56
Connector Name	TRANSFER TERMINAL CORD ASSEMBLY
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	BR/W	-
2	G	-
3	B/G	-
4	GR	-
5	G/R	-
6	L	-
7	BR	-
19	B	-

ABDIA1403GB


A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# ALL-MODE 4WD SYSTEM

< WIRING DIAGRAM >

[ATX14B]

Connector No.	F60
Connector Name	NEUTRAL-4LO SWITCH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
12	B	-
13	V	-

Connector No.	F59
Connector Name	WAIT DETECTION SWITCH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
10	G/Y	-
11	B	-

ABDIA1404GB

# 4WD SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[ATX14B]

## SYMPTOM DIAGNOSIS

### 4WD SYSTEM SYMPTOMS

#### Symptom Table

INFOID:000000011290870

If 4WD warning lamp turns ON, perform self-diagnosis. Refer to [DLN-18, "CONSULT Function \(ALL MODE AWD/4WD\)"](#).

Symptom	Condition	Reference page
4WD shift indicator lamp and 4LO indicator lamp do not turn ON (4WD shift indicator lamp and 4LO indicator lamp check)	Ignition switch: ON	<a href="#">DLN-102</a>
4WD warning lamp does not turn ON (4WD warning lamp check)	Ignition switch: ON	<a href="#">DLN-104</a>
4WD shift indicator lamp or 4LO indicator lamp does not change	Engine running	<a href="#">DLN-106</a>
ATP warning lamp does not turn ON	Engine running	<a href="#">DLN-108</a>
4WD shift indicator lamp keeps flashing	Engine running	<a href="#">DLN-109</a>
4WD warning lamp flashes rapidly (2 times/second)	While driving	<a href="#">DLN-110</a>
4WD warning lamp flashes slowly (1 time/2 seconds)	While driving	<a href="#">DLN-111</a>
Heavy tight-corner braking symptom occurs (See NOTE.)	<ul style="list-style-type: none"> <li>While driving</li> <li>AUTO mode</li> <li>Steering wheel is turned fully to either side</li> </ul>	<a href="#">DLN-112</a>
ATP switch does not operate	Engine running	<a href="#">DLN-114</a>
4WD system does not operate	While driving	<a href="#">DLN-116</a>

#### NOTE:

- Light tight-corner braking symptom may occur depending on driving conditions in AUTO mode. This is not a malfunction.
- Heavy tight-corner braking symptom occurs when vehicle is driven in the following conditions: 4WD shift switch is 4H or 4LO, steering wheel is turned fully to either side.

# 4WD SHIFT INDICATOR LAMP AND 4LO INDICATOR LAMP DO NOT TURN ON [ATX14B]

< SYMPTOM DIAGNOSIS >

## 4WD SHIFT INDICATOR LAMP AND 4LO INDICATOR LAMP DO NOT TURN ON

### Description

INFOID:000000011290871

4WD shift indicator lamp and 4LO indicator lamp do not turn ON for approx. 1 second when turning ignition switch to ON.

### Diagnosis Procedure

INFOID:000000011290872

Regarding Wiring Diagram information, refer to [DLN-91, "Wiring Diagram"](#).

### 1. CHECK TRANSFER CONTROL UNIT POWER SUPPLY AND GROUND CIRCUITS

Refer to [DLN-22, "Diagnosis Procedure"](#).


Are the inspection results normal?

- YES >> GO TO 2.  
NO >> Repair as necessary.

### 2. CHECK COMBINATION METER POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect combination meter harness connector.
3. Check voltage between combination meter harness connector terminal and ground.

Connector	Terminal	Voltage (Approx.)
M24	24 - Ground	0V

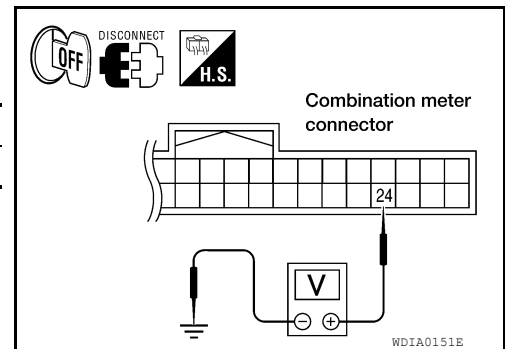

4. Turn ignition switch ON. (Do not start engine.)
5. Check voltage between combination meter harness connector terminal and ground.

Connector	Terminal	Voltage (Approx.)
M24	24 - Ground	Battery voltage

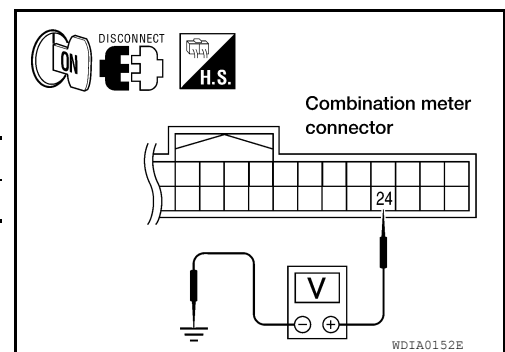

Are the inspection results normal?

- YES >> GO TO 3.  
NO >> Check the following. If any items are damaged, repair or replace damaged parts.
- 10A fuse [No. 14 located in the fuse block (J/B)].
  - Harness for short or open between battery and combination meter harness connector M24 terminal 24.
  - Ignition switch.

### 3. SYMPTOM CHECK

Check again.

Are the inspection results normal?

- YES >> Inspection End.  
NO >> GO TO 4.

### 4. CHECK TRANSFER CONTROL UNIT

# 4WD SHIFT INDICATOR LAMP AND 4LO INDICATOR LAMP DO NOT TURN ON

< SYMPTOM DIAGNOSIS >

[ATX14B]

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

Are the inspection results normal?

YES >> Inspection End.

NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector.  
If any items are damaged, repair or replace damaged parts.

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

# 4WD WARNING LAMP DOES NOT TURN ON

[ATX14B]

< SYMPTOM DIAGNOSIS >

## 4WD WARNING LAMP DOES NOT TURN ON

### Description

INFOID:000000011290873

4WD warning lamp does not turn ON when turning ignition switch to ON.

### Diagnosis Procedure

INFOID:000000011290874

Regarding Wiring Diagram information, refer to [DLN-91, "Wiring Diagram"](#).

## 1. CHECK TRANSFER CONTROL UNIT POWER SUPPLY AND GROUND CIRCUITS

Refer to [DLN-22, "Diagnosis Procedure"](#).

Are the inspection results normal?


YES >> GO TO 2.

NO >> Repair as necessary.

## 2. CHECK COMBINATION METER POWER SUPPLY CIRCUIT


1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect combination meter harness connector.
3. Check voltage between combination meter harness connector terminal and ground.

Connector	Terminal	Voltage (Approx.)
M24	24 - Ground	0V

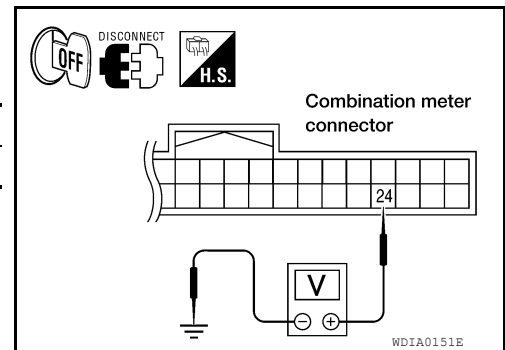

4. Turn ignition switch ON. (Do not start engine.)
5. Check voltage between combination meter harness connector terminal and ground.

Connector	Terminal	Voltage (Approx.)
M24	24 - Ground	Battery voltage

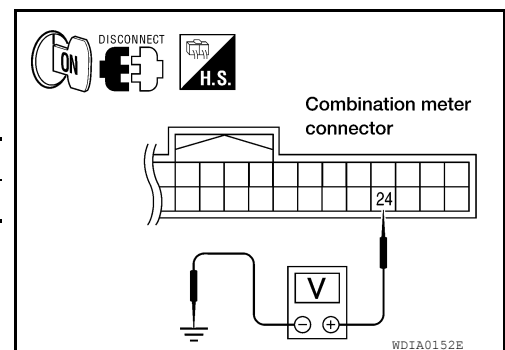

Are the inspection results normal?

YES >> GO TO 3.

NO >> Check the following. If any items are damaged, repair or replace damaged parts.

- 10A fuse [No. 14 located in the fuse block (J/B)].
- Harness for short or open between battery and combination meter harness connector M24 terminal 24.
- Ignition switch.

## 3. SYMPTOM CHECK

Check again.

Are the inspection results normal?

YES >> Inspection End.

NO >> GO TO 4.

## 4. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

Are the inspection results normal?



# 4WD WARNING LAMP DOES NOT TURN ON

[ATX14B]

## < SYMPTOM DIAGNOSIS >

- YES >> Inspection End.
- NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector.  
If any items are damaged, repair or replace damaged parts.

A

B

C

**DLN**

E

F

G

H

I

J

K

L

M

N

O

P

# 4WD SHIFT INDICATOR LAMP OR 4LO INDICATOR LAMP DO NOT CHANGE

< SYMPTOM DIAGNOSIS >

[ATX14B]

## 4WD SHIFT INDICATOR LAMP OR 4LO INDICATOR LAMP DO NOT CHANGE

### Description

INFOID:000000011290875

4WD shift indicator lamp or 4LO indicator lamp do not change when switching the 4WD shift switch.

### Diagnosis Procedure

INFOID:000000011290876

#### 1.CONFIRM THE SYMPTOM

Confirm 4WD shift indicator lamp and 4LO indicator lamp turn on when ignition switch is turned to ON.

Do 4WD shift indicator lamp and 4LO indicator lamp turn on?

YES >> GO TO 2.

NO >> Refer to [DLN-102, "Diagnosis Procedure"](#).

#### 2.CHECK SYSTEM FOR 4WD SHIFT SWITCH

Perform trouble diagnosis for 4WD shift switch system. Refer to [DLN-32, "Diagnosis Procedure"](#).

Are the inspection results normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

#### 3.CHECK SYSTEM FOR WAIT DETECTION SWITCH

Perform trouble diagnosis for wait detection switch system. Refer to [DLN-35, "Diagnosis Procedure"](#).

Are the inspection results normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

#### 4.CHECK SYSTEM FOR NEUTRAL-4LO SWITCH

Perform trouble diagnosis for neutral-4LO switch system. Refer to [DLN-29, "Diagnosis Procedure"](#).

Are the inspection results normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

#### 5.CHECK SYSTEM FOR ATP SWITCH

Perform trouble diagnosis for ATP switch system. Refer to [DLN-114, "Diagnosis Procedure"](#).

Are the inspection results normal?

YES >> GO TO 6.

NO >> Repair or replace damaged parts.

#### 6.CHECK SYSTEM FOR 2-4WD SOLENOID

Perform trouble diagnosis for 2-4WD solenoid system. Refer to [DLN-57, "Diagnosis Procedure"](#).

Are the inspection results normal?

YES >> GO TO 7.

NO >> Repair or replace damaged parts.

#### 7.CHECK SYSTEM FOR TRANSFER CONTROL DEVICE

Perform trouble diagnosis for transfer control device system. Refer to [DLN-48, "Diagnosis Procedure"](#).

Are the inspection results normal?

YES >> GO TO 8.

NO >> Repair or replace damaged parts.

#### 8.CHECK SYSTEM FOR ACTUATOR MOTOR

Perform trouble diagnosis for actuator motor system. Refer to [DLN-39, "Diagnosis Procedure"](#).

Are the inspection results normal?

YES >> GO TO 9.

NO >> Repair or replace damaged parts.

# 4WD SHIFT INDICATOR LAMP OR 4LO INDICATOR LAMP DO NOT CHANGE

< SYMPTOM DIAGNOSIS >

[ATX14B]

## 9. CHECK SYSTEM FOR ACTUATOR POSITION SWITCH

Perform trouble diagnosis for actuator position switch system. Refer to [DLN-45. "Diagnosis Procedure"](#).

Are the inspection results normal?

YES >> GO TO 10.

NO >> Repair or replace damaged parts.

## 10. SYMPTOM CHECK

Check again.

Are the inspection results normal?

YES >> Inspection End.

NO >> GO TO 11.

## 11. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80. "Reference Value"](#).

Are the inspection results normal?

YES >> GO TO 12.

NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector.  
If any items are damaged, repair or replace damaged parts.

## 12. CHECK TRANSFER INNER PARTS

1. Disassemble transfer assembly. Refer to [DLN-141. "Disassembly and Assembly"](#).

2. Check transfer inner parts.

Are the inspection results normal?

YES >> Inspection End.

NO >> Repair or replace damaged parts.

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# ATP WARNING LAMP DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

[ATX14B]

## ATP WARNING LAMP DOES NOT TURN ON

### Description

INFOID:000000011290877

ATP warning lamp does not turn ON when the transfer case is switched in or out of 4LO with the A/T selector lever in N position.

### Diagnosis Procedure

INFOID:000000011290878

#### 1. CHECK SYSTEM FOR CAN COMMUNICATION LINE

Perform self-diagnosis. Refer to [DLN-18. "CONSULT Function \(ALL MODE AWD/4WD\)"](#).

Do the self-diagnostic results indicate CAN communication?

- YES >> Perform trouble diagnosis for CAN communication line.
- NO >> GO TO 2.

#### 2. CHECK SYSTEM FOR 4WD SHIFT SWITCH

Perform trouble diagnosis for 4WD shift switch system. Refer to [DLN-32. "Diagnosis Procedure"](#).

Are the inspection results normal?

- YES >> GO TO 3.
- NO >> Repair or replace damaged parts.

#### 3. CHECK SYSTEM FOR TRANSMISSION RANGE SWITCH SIGNAL

Perform trouble diagnosis for transmission range switch signal system. Refer to [DLN-38. "Diagnosis Procedure"](#).

Are the inspection results normal?

- YES >> GO TO 4.
- NO >> Repair or replace damaged parts.

#### 4. CHECK SYSTEM FOR ATP SWITCH

Perform trouble diagnosis for ATP switch system. Refer to [DLN-114. "Diagnosis Procedure"](#).

Are the inspection results normal?

- YES >> GO TO 5.
- NO >> Repair or replace damaged parts.

#### 5. SYMPTOM CHECK

Check again.

Are the inspection results normal?

- YES >> Inspection End.
- NO >> GO TO 6.

#### 6. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80. "Reference Value"](#).

Are the inspection results normal?

- YES >> GO TO 7.
- NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector.  
If any items are damaged, repair or replace damaged parts.

#### 7. CHECK TRANSFER INNER PARTS

1. Disassemble transfer assembly. Refer to [DLN-141. "Disassembly and Assembly"](#).
2. Check transfer inner parts.

Are the inspection results normal?

- YES >> Inspection End.
- NO >> Repair or replace damaged parts.

# 4WD SHIFT INDICATOR LAMP KEEPS FLASHING

< SYMPTOM DIAGNOSIS >

[ATX14B]

## 4WD SHIFT INDICATOR LAMP KEEPS FLASHING

### Description

INFOID:0000000011290879

The 4WD shift indicator lamp keeps flashing.

### Diagnosis Procedure

INFOID:0000000011290880

#### 1.CONFIRM THE SYMPTOM

1. Set 4WD shift switch to 2WD.
2. Move vehicle forward and backward, or drive straight increasing or decreasing under 20 km/h (12 MPH).

Dose 4WD shift indicator lamp keep flashing?

- YES >> GO TO 2.  
NO >> Inspection End.

#### 2.CHECK SYSTEM FOR WAIT DETECTION SWITCH

Perform trouble diagnosis for wait detection switch system. Refer to [DLN-35. "Diagnosis Procedure"](#).

Are the inspection results normal?

- YES >> GO TO 3.  
NO >> Repair or replace damaged parts.

#### 3.CHECK SYSTEM FOR NEUTRAL-4LO SWITCH

Perform trouble diagnosis for neutral-4LO switch system. Refer to [DLN-29. "Diagnosis Procedure"](#).

Are the inspection results normal?

- YES >> GO TO 4.  
NO >> Repair or replace damaged parts.

#### 4.SYMPTOM CHECK

Check again.

Are the inspection results normal?

- YES >> Inspection End.  
NO >> GO TO 5.

#### 5.CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80. "Reference Value"](#).

Are the inspection results normal?

- YES >> GO TO 6.  
NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector.  
If any items are damaged, repair or replace damaged parts.

#### 6.CHECK TRANSFER INNER PARTS

1. Disassemble transfer assembly. Refer to [DLN-141. "Disassembly and Assembly"](#).
2. Check transfer inner parts.

Are the inspection results normal?

- YES >> Inspection End.  
NO >> Repair or replace damaged parts.

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# 4WD WARNING LAMP FLASHES RAPIDLY

< SYMPTOM DIAGNOSIS >

[ATX14B]

## 4WD WARNING LAMP FLASHES RAPIDLY

### Description

INFOID:000000011290881

The 4WD warning lamp flashes quickly while driving (2 times / second). The lamp continues to flash until the ignition switch is turned OFF.

### Diagnosis Procedure

INFOID:000000011290882

#### 1. CHECK TIRE

Check the following.

- Tire pressure
- Wear condition
- Longitudinal tire size (There is no difference between longitudinal tires.)

Are the inspection results normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

#### 2. CHECK 4WD WARNING LAMP

Stop the vehicle and allow it to idle for a short period of time.

Does flashing stop?

YES >> Inspection End.

NO >> GO TO 3.

#### 3. CHECK TRANSFER FLUID TEMPERATURE

Perform trouble diagnosis for transfer fluid temperature system. Refer to [DLN-65, "Diagnosis Procedure"](#).

Are the inspection results normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

#### 4. SYMPTOM CHECK

Check again.

Are the inspection results normal?

YES >> Inspection End.

NO >> GO TO 5.

#### 5. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

Are the inspection results normal?

YES >> Inspection End.

NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector.  
If any items are damaged, repair or replace damaged parts.

# 4WD WARNING LAMP FLASHES SLOWLY

< SYMPTOM DIAGNOSIS >

[ATX14B]

## 4WD WARNING LAMP FLASHES SLOWLY

### Description

INFOID:000000011290883

The 4WD warning lamp flashes slowly while driving (1 time / 2 seconds). The lamp continues to flash until the ignition switch is turned OFF.

### Diagnosis Procedure

INFOID:000000011290884

#### 1.CHECK TIRE

Check the following.

- Tire pressure
- Wear condition
- Longitudinal tire size (There is no difference between longitudinal tires.)

#### OK or NG

OK >> GO TO 2.

NG >> Repair or replace damaged parts.

#### 2.CHECK TRANSFER FLUID TEMPERATURE

Perform trouble diagnosis for transfer fluid temperature system. Refer to [DLN-65, "Diagnosis Procedure"](#).

#### Are the inspection results normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

#### 3.CHECK CLUTCH PRESSURE SWITCH

Perform trouble diagnosis for clutch pressure switch system. Refer to [DLN-68, "Diagnosis Procedure"](#).

#### Are the inspection results normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

#### 4.SYMPTOM CHECK

Check again.

#### Are the inspection results normal?

YES >> Inspection End.

NO >> GO TO 5.

#### 5.CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

#### Are the inspection results normal?

YES >> Inspection End.

NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector.  
If any items are damaged, repair or replace damaged parts.

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# HEAVY TIGHT-CORNER BRAKING SYMPTOM OCCURS

< SYMPTOM DIAGNOSIS >

[ATX14B]

## HEAVY TIGHT-CORNER BRAKING SYMPTOM OCCURS

### Description

INFOID:000000011290885

This symptom occurs when the vehicle is accelerating in 4WD and the steering wheel is turned fully either direction. It may feel like a bump or being pushed from behind. A small amount of this bumping feeling is acceptable under certain road conditions. The transfer case may be adjusted using the CONSULT to compensate for this condition.

### Diagnosis Procedure

INFOID:000000011290886

#### DIAGNOSTIC PROCEDURE

##### NOTE:

- Light tight-corner braking symptom may occur depending on driving conditions in AUTO mode. This is not a malfunction.
- Heavy tight-corner braking symptom occurs when vehicle is driven in the following conditions: 4WD shift switch is 4H or 4LO, steering wheel is turned fully to either side.

#### 1. CHECK SYSTEM FOR CAN COMMUNICATION LINE

Perform self-diagnosis. Refer to [DLN-18, "CONSULT Function \(ALL MODE AWD/4WD\)"](#).

Is CAN COMM CIRCUIT [U1000] displayed?

- YES >> Perform trouble diagnosis for CAN communication line.
- NO >> GO TO 2.

#### 2. CHECK SYSTEM FOR 4WD SHIFT SWITCH

Perform trouble diagnosis for 4WD shift switch system. Refer to [DLN-32, "Diagnosis Procedure"](#).

Are the inspection results normal?

- YES >> GO TO 3.
- NO >> Repair or replace damaged parts.

#### 3. CHECK ACCELERATOR PEDAL POSITION SIGNAL CIRCUIT

Perform self diagnosis for ECM. Refer to [EC-49, "CONSULT Function"](#).

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system.
- NO >> GO TO 4.

#### 4. CHECK SYSTEM FOR CLUTCH PRESSURE SOLENOID

Perform trouble diagnosis for clutch pressure solenoid system. Refer to [DLN-68, "Diagnosis Procedure"](#).

Are the inspection results normal?

- YES >> GO TO 5.
- NO >> Repair or replace damaged parts.

#### 5. SYMPTOM CHECK

Check again.

Are the inspection results normal?

- YES >> Inspection End.
- NO >> GO TO 6.

#### 6. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

Are the inspection results normal?

- YES >> GO TO 7.
- NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

#### 7. CHECK TRANSFER INNER PARTS

1. Disassemble transfer assembly. Refer to [DLN-141, "Disassembly and Assembly"](#).
2. Check transfer inner parts.



# HEAVY TIGHT-CORNER BRAKING SYMPTOM OCCURS

< SYMPTOM DIAGNOSIS >

[ATX14B]

Are the inspection results normal?

- YES >> Inspection End.
- NO >> Repair or replace damaged parts.

A

B

C

**DLN**

E

F

G

H

I

J

K

L

M

N

O

P

# ATP SWITCH

< SYMPTOM DIAGNOSIS >

[ATX14B]

## ATP SWITCH

### Description

INFOID:000000011290887

The ATP indicator is ON when the transfer case is not in neutral.

### Diagnosis Procedure

INFOID:000000011290888

Regarding Wiring Diagram information, refer to [DLN-91, "Wiring Diagram"](#).

## 1. CHECK ATP SWITCH SIGNAL

### With CONSULT


1. Start engine.
2. Select DATA MONITOR mode for ALL MODE AWD/4WD with CONSULT.
3. Read out the value of ATP SWITCH.

Condition	Display value
<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N</li> </ul>	4WD shift switch : 4H to 4LO or 4LO to 4H (While actuator motor is operating.)
<ul style="list-style-type: none"> <li>• Brake pedal depressed</li> </ul>	Except the above
	ON
	OFF

### Without CONSULT

1. Start engine.
2. Check voltage between transfer control unit harness connector terminal and ground.

Connector	Terminal	Condition	Voltage (Approx.)
E143	40 - Ground	<ul style="list-style-type: none"> <li>• Vehicle stopped</li> <li>• Engine running</li> <li>• A/T selector lever N</li> </ul>	4WD shift switch: 4H to 4LO or 4LO to 4H (While actuator motor is operating.)
		<ul style="list-style-type: none"> <li>• Brake pedal depressed</li> </ul>	Except the above
			0V
			Battery voltage

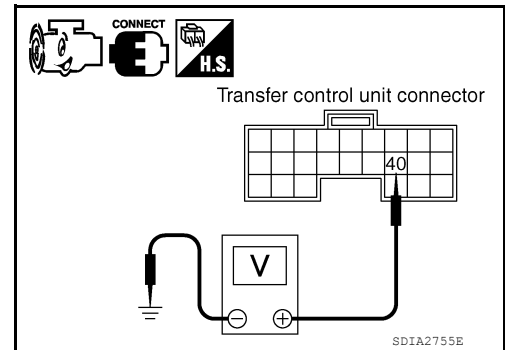

Are inspection results normal?

- YES >> GO TO 5.  
NO >> GO TO 2.

## 2. CHECK HARNESS BETWEEN TRANSFER CONTROL UNIT AND ATP SWITCH


1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect transfer control unit harness connector and the ATP switch harness connector.
3. Check continuity between transfer control unit harness connector E143 terminal 40 and ATP switch harness connector F55 terminal 8.

**Continuity should exist.**

Also check harness for short to ground and short to power.

Are inspection results normal?

- YES >> GO TO 3.  
NO >> Repair or replace damaged parts.

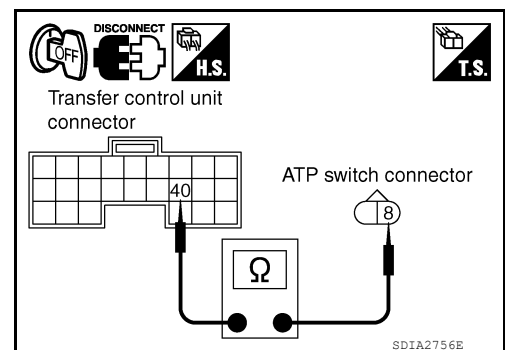

# ATP SWITCH

< SYMPTOM DIAGNOSIS >

[ATX14B]

## 3. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect ATP switch harness connector.
3. Check continuity between ATP switch harness connector F55 terminal 9 and ground.


**Continuity should exist.**

Also check harness for short to ground and short to power.

Are inspection results normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

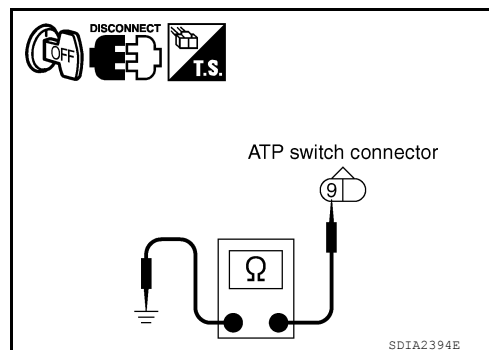

## 4. CHECK ATP SWITCH


1. Turn ignition switch OFF. (Stay for at least 5 seconds.)
2. Disconnect ATP switch harness connector.
3. Remove ATP switch. Refer to [DLN-16. "Component Parts Location"](#).
4. Push and release ATP switch and check continuity between ATP switch terminals 8 and 9.

Terminal	Condition	Continuity
8 - 9	Push ATP switch	Yes
	Release ATP switch	No

Are inspection results normal?

YES >> GO TO 5.

NO >> Replace ATP switch.

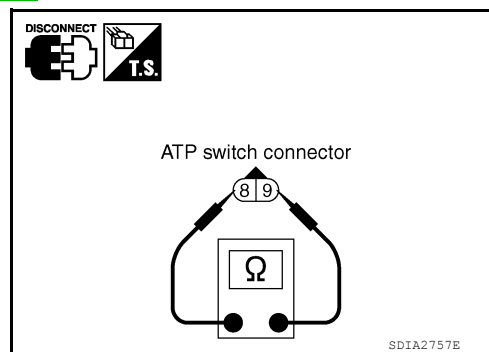

## 5. CHECK TRANSFER CONTROL UNIT

Check transfer control unit input/output signal. Refer to [DLN-80. "Reference Value"](#).

Are inspection results normal?

YES >> GO TO 6.

NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

## 6. CHECK ATP WARNING LAMP

1. Turn ignition switch ON. (Do not start engine.)
2. Move A/T selector lever to P position.
3. Set 4WD shift switch from 4H to 4LO or 4LO to 4H.

Does ATP warning lamp turn ON while switching?

YES >> Inspection End.

NO >> GO TO [DLN-108. "Diagnosis Procedure"](#).

# 4WD SYSTEM DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[ATX14B]

---

## 4WD SYSTEM DOES NOT OPERATE

### Description

INFOID:000000011290889

The vehicle can not be put into 4WD mode. (Possible hydraulic malfunction)

### Diagnosis Procedure

INFOID:000000011290890

#### 1.CHECK SYSTEM FOR 4WD SHIFT SWITCH

---

Perform trouble diagnosis for 4WD shift switch system. Refer to [DLN-32, "Diagnosis Procedure"](#).

Are the inspection results normal?

- YES >> GO TO 2.
- NO >> Repair or replace damaged parts.

#### 2.CHECK SYSTEM FOR CLUTCH PRESSURE SWITCH

---

Perform trouble diagnosis for clutch pressure switch system. Refer to [DLN-68, "Diagnosis Procedure"](#).

Are the inspection results normal?

- YES >> GO TO 3.
- NO >> Repair or replace damaged parts.

#### 3.SYMPTOM CHECK

---

Check again.

Are the inspection results normal?

- YES >> Inspection End.
- NO >> GO TO 4.

#### 4.CHECK TRANSFER CONTROL UNIT

---

Check transfer control unit input/output signal. Refer to [DLN-80, "Reference Value"](#).

Are the inspection results normal?

- YES >> GO TO 5.
- NO >> Check transfer control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

#### 5.CHECK TRANSFER INNER PARTS

---

1. Disassemble transfer assembly. Refer to [DLN-141, "Disassembly and Assembly"](#).

2. Check transfer inner parts.

Are the inspection results normal?

- YES >> Inspection End.
- NO >> Repair or replace damaged parts.

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

[ATX14B]

## NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

### NVH Troubleshooting Chart

INFOID:000000011290891

Use the chart below to help you find the cause of the symptom. The numbers indicate the order of the inspection. If necessary, repair or replace these parts.

Reference page		DLN-127, "Replacement"			DLN-141, "Disassembly and Assembly"			DLN-141, "Disassembly and Assembly"		DLN-141, "Disassembly and Assembly"	
		TRANSFER FLUID (Level low)	TRANSFER FLUID (Wrong)	TRANSFER FLUID (Level too high)	LIQUID GASKET (Damaged)	O-RING (Worn or damaged)	OIL SEAL (Worn or damaged)	SHIFT FORK (Worn or damaged)	GEAR (Worn or damaged)	BEARING (Worn or damaged)	
Symptom	Noise	1	2						3	3	
	Transfer fluid leakage		3	1	2	2	2				
	Hard to shift or will not shift		1	1				2			

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011290892

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

**WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

#### Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000011290893

**NOTE:**

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

#### OPERATION PROCEDURE

1. Connect both battery cables.

**NOTE:**

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.

# PRECAUTIONS

[ATX14B]

## < PRECAUTION >

- When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
- Perform a self-diagnosis check of all control units using CONSULT.

## Precaution for Transfer Assembly and Transfer Control Unit Replacement INFOID:000000011290894

When replacing transfer assembly or transfer control unit, check the 4WD shift indicator lamp as follows.

- Turn ignition switch ON.
- Check 4WD shift indicator lamp is turned ON for approximately 1 second.
  - If OK, the position between transfer assembly and transfer control unit is correct.
  - If NG, the position is different between transfer assembly and transfer control unit. Adjust the position between transfer assembly and transfer control unit. See METHOD FOR POSITION ADJUSTMENT that follows.


### METHOD FOR POSITION ADJUSTMENT

- Start engine. Run the engine for at least 10 seconds.
- Stop vehicle and move A/T shift selector to N position with brake pedal depressed. Stay in N for at least 2 seconds.
- Turn 4WD shift switch to 2WD position. Stay in 2WD for at least 2 seconds.
- Turn ignition switch OFF.
- Start engine.
- Erase self-diagnosis. Refer to [DLN-18, "CONSULT Function \(ALL MODE AWD/4WD\)"](#).
- Check 4WD shift indicator lamp. Refer to [DLN-7, "Preliminary Check"](#).  
If 4WD shift indicator lamp does not indicate 2WD, install new transfer control unit and retry the above check.


### Precaution

INFOID:000000011290895

- Before connecting or disconnecting the transfer control unit harness connector, turn ignition switch "OFF" and disconnect battery cables. Failure to do so may damage the transfer control unit. Battery voltage is applied to transfer control unit even if ignition switch is turned "OFF".**

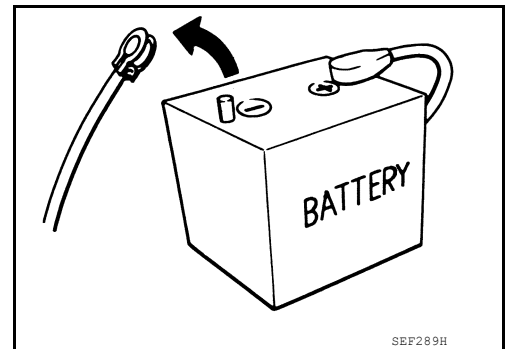

- When connecting or disconnecting pin connectors into or from transfer control unit, take care not to damage pin terminals (bend or break). When connecting pin connectors make sure that there are not any bends or breaks on transfer control unit pin terminals.**

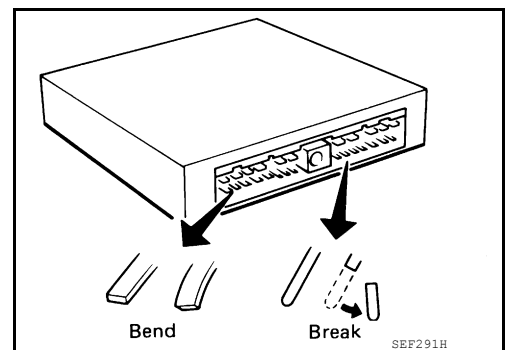


## PRECAUTIONS

[ATX14B]

< PRECAUTION >

- Before replacing transfer control unit, perform transfer control unit input/output signal inspection and make sure transfer control unit functions properly. Refer to [DLN-80, "Reference Value"](#).

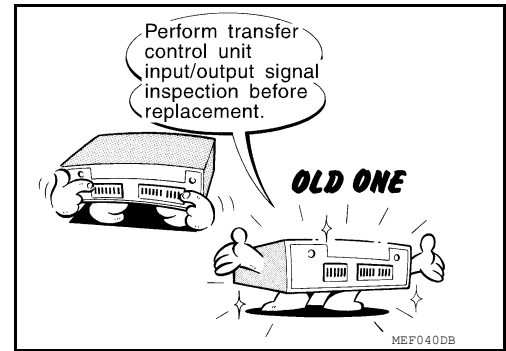

### Service Notice

INFOID:000000011290896

- After overhaul refill the transfer with new transfer fluid.
- Check the fluid level or replace the fluid only with the vehicle parked on level ground.
- During removal or installation, keep inside of transfer clear of dust or dirt.
- Disassembly should be done in a clean work area.
- Before proceeding with disassembly, thoroughly clean the transfer. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Check for the correct installation status prior to removal or disassembly. If matchmarks are required, be certain they do not interfere with the function of the parts when applied.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Check appearance of the disassembled parts for damage, deformation, and unusual wear. Replace them with new ones if necessary.
- Gaskets, seals and O-rings should be replaced any time the transfer is disassembled.
- In principle, tighten bolts or nuts gradually in several steps working diagonally from inside to outside. If tightening sequence is specified, use it.
- Observe the specified torque when assembling.
- Clean and flush the parts sufficiently and blow-dry them.
- Be careful not to damage sliding surfaces and mating surfaces.
- Use lint-free cloth or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the transfer.



# PREPARATION

< PREPARATION >

[ATX14B]







## PREPARATION

### PREPARATION

#### Special Service Tool

INFOID:000000011290897

The actual shape of the tools may differ from those illustrated here.


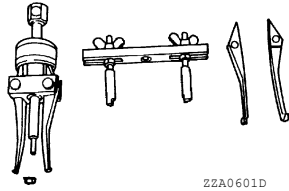
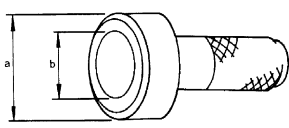
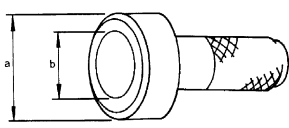
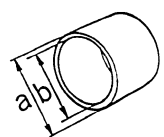
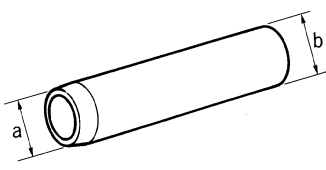

Tool number (TechMate No.) Tool name	Description	
ST33290001 (J-34286) Puller	 <p style="text-align: center;">ZZA0601D</p>	<ul style="list-style-type: none"> <li>• Removing front oil seal</li> <li>• Removing rear oil seal</li> <li>• Removing metal bushing</li> </ul>
KV38100500 ( — ) Drift	 <p style="text-align: center;">ZZA0811D</p>	<ul style="list-style-type: none"> <li>• Installing front oil seal</li> </ul> <p><b>a: 80 mm (3.15 in) dia.</b> <b>b: 60 mm (2.36 in) dia.</b></p>
ST30720000 (J-25405) Drift	 <p style="text-align: center;">ZZA0811D</p>	<ul style="list-style-type: none"> <li>• Installing rear oil seal</li> <li>• Installing mainshaft front bearing and oil seal</li> </ul> <p><b>a: 77 mm (3.03 in) dia.</b> <b>b: 55.5 mm (2.185 in) dia.</b></p>
KV40105310 ( — ) Drift	 <p style="text-align: center;">ZZA1003D</p>	<ul style="list-style-type: none"> <li>• Installing dust cover</li> </ul> <p><b>a: 89 mm (3.50 in) dia.</b> <b>b: 80.7 mm (3.17 in) dia.</b></p>
ST22360002 (J-25679-01) Drift	 <p style="text-align: center;">ZZA1091D</p>	<ul style="list-style-type: none"> <li>• Installing side oil seal</li> </ul> <p><b>a: 23 mm (0.91 in) dia.</b> <b>b: 32 mm (1.26 in) dia.</b></p>
ST35300000 ( — ) Drift	 <p style="text-align: center;">NT073</p>	<ul style="list-style-type: none"> <li>• Removing sun gear assembly and planetary carrier assembly</li> <li>• Removing carrier bearing</li> <li>• Installing metal bushing</li> </ul> <p><b>a: 59 mm (2.32 in) dia.</b> <b>b: 45 mm (1.77 in) dia.</b></p>

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# PREPARATION

< PREPARATION >







[ATX14B]

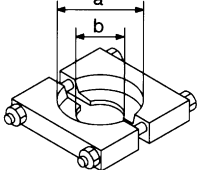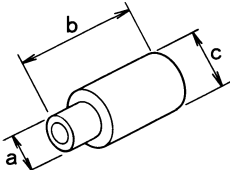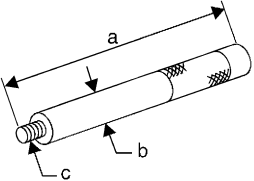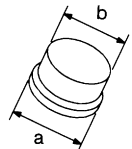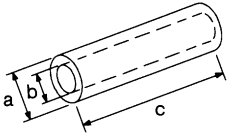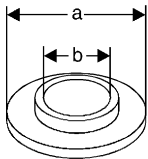Tool number (TechMate No.) Tool name	Description
ST33200000 (J-26082) Drift	 <p style="text-align: center;">NT661</p> <ul style="list-style-type: none"> <li>• Removing mainshaft front bearing</li> <li>• Installing sun gear assembly and planetary carrier assembly</li> <li>• Installing mainshaft front bearing and oil seal</li> </ul> <p><b>a: 74.5 mm (2.933 in) dia.</b> <b>b: 62.5 mm (2.461 in) dia.</b></p>
ST30031000 ( — ) Puller	 <p style="text-align: center;">NT411</p> <ul style="list-style-type: none"> <li>• Removing carrier bearing</li> <li>• Removing front drive shaft front bearing</li> <li>• Removing front drive shaft rear bearing</li> </ul> <p><b>a: 90 mm (3.54 in) dia.</b> <b>b: 50 mm (1.97 in) dia.</b></p>
ST33710000 ( — ) Drift	 <p style="text-align: center;">ZZA1057D</p> <ul style="list-style-type: none"> <li>• Removing needle bearing</li> <li>• Removing metal bushing</li> </ul> <p><b>a: 24 mm (0.94 in) dia.</b> <b>b: 89 mm (3.5 in)</b> <b>c: 30 mm (1.18 in) dia.</b></p>
ST35325000 ( — ) Drift bar	 <p style="text-align: center;">NT663</p> <ul style="list-style-type: none"> <li>• Removing metal bushing</li> </ul> <p><b>a: 215 mm (8.46 in)</b> <b>b: 25 mm (0.98 in) dia.</b> <b>c: M12 × 1.5P</b></p>
ST33052000 ( — ) Adapter	 <p style="text-align: center;">NT431</p> <ul style="list-style-type: none"> <li>• Removing front drive shaft front bearing</li> <li>• Removing front drive shaft rear bearing</li> <li>• Installing mainshaft</li> </ul> <p><b>a: 28 mm (1.10 in) dia.</b> <b>b: 22 mm (0.87 in) dia.</b></p>
ST22452000 (J-34335) Drift	 <p style="text-align: center;">NT117</p> <ul style="list-style-type: none"> <li>• Removing press flange snap ring</li> <li>• Installing press flange snap ring</li> </ul> <p><b>a: 45 mm (1.77 in) dia.</b> <b>b: 36 mm (1.42 in) dia.</b> <b>c: 400 mm (15.76 in) dia.</b></p>
ST30911000 ( — ) Puller	 <p style="text-align: center;">NT664</p> <ul style="list-style-type: none"> <li>• Removing press flange snap ring</li> <li>• Installing press flange snap ring</li> <li>• Installing mainshaft</li> <li>• Installing carrier bearing</li> </ul> <p><b>a: 98 mm (3.86 in) dia.</b> <b>b: 40.5 mm (1.594 in) dia.</b></p>

# PREPARATION

< PREPARATION >

[ATX14B]

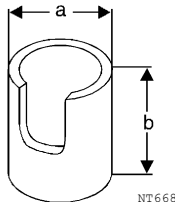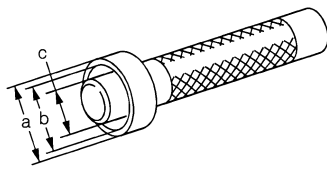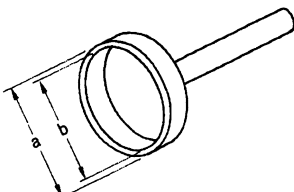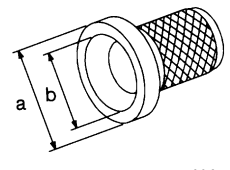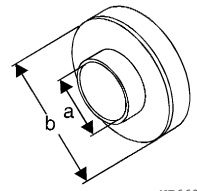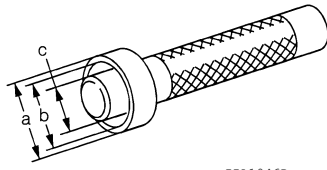Tool number (TechMate No.) Tool name	Description	
KV31103300 ( — ) Drift	 <ul style="list-style-type: none"> <li>• Removing press flange snap ring</li> <li>• Installing press flange snap ring</li> <li>• Installing carrier bearing</li> <li><b>a: 76.3 mm (3.004 in) dia.</b></li> <li><b>b: 130 mm (5.12 in)</b></li> </ul>	A B C
KV38100300 (J-25523) Drift	 <ul style="list-style-type: none"> <li>• Removing mainshaft rear bearing</li> <li><b>a: 54 mm (2.13 in) dia.</b></li> <li><b>b: 46 mm (1.81 in) dia.</b></li> <li><b>c: 32 mm (1.26 in) dia.</b></li> </ul>	DLN E F
ST15310000 (J-25640-B) Drift	 <ul style="list-style-type: none"> <li>• Installing mainshaft rear bearing</li> <li><b>a: 96 mm (3.78 in) dia.</b></li> <li><b>b: 84 mm (3.31 in) dia.</b></li> </ul>	G H
KV40100621 (J-25273) Drift	 <ul style="list-style-type: none"> <li>• Installing front drive shaft front bearing</li> <li>• Installing front drive shaft rear bearing</li> <li><b>a: 76 mm (2.99 in) dia.</b></li> <li><b>b: 69 mm (2.72 in) dia.</b></li> </ul>	I J K
ST30032000 (J-26010-01) Base	 <ul style="list-style-type: none"> <li>• Installing front drive shaft front bearing</li> <li>• Installing front drive shaft rear bearing</li> <li><b>a: 38 mm (1.50 in) dia.</b></li> <li><b>b: 80 mm (3.15 in) dia.</b></li> </ul>	L M
ST33220000 ( — ) Drift	 <ul style="list-style-type: none"> <li>• Installing needle bearing</li> <li><b>a: 37 mm (1.46 in) dia.</b></li> <li><b>b: 31 mm (1.22 in) dia.</b></li> <li><b>b: 22 mm (0.87 in) dia.</b></li> </ul>	N O P




Commercial Service Tool

INFOID:0000000011290898

# PREPARATION

< PREPARATION >

[ATX14B]

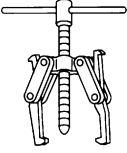Tool name	Description
<p>Puller</p>  <p>NT077</p>	<ul style="list-style-type: none"><li>• Removing companion flange</li></ul>
<p>Pin punch</p>  <p>NT410</p>	<ul style="list-style-type: none"><li>• Removing retainer pin</li><li>• Installing retainer pin</li></ul> <p><b>a: 6 mm (0.24 in) dia.</b></p>
<p>Power tool</p>  <p>PIIB1407E</p>	<ul style="list-style-type: none"><li>• Loosening nuts, screws and bolts</li></ul>

## PERIODIC MAINTENANCE


### TRANSFER OIL FILTER

#### Removal and Installation


INFOID:000000011290899

#### REMOVAL


- Partially drain transfer fluid. Refer to [DLN-127, "Replacement"](#).
- Remove the oil filter bolts (←) and oil filter.
  - CAUTION:**
  - Do not damage center case or oil filter.
  - Loosen bolts and detach oil filter evenly.

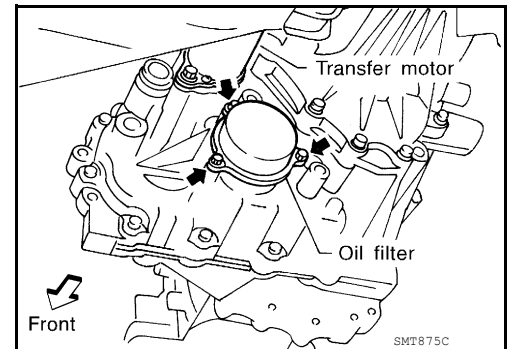

- Remove the O-rings (1) from the oil filter (2).
  - CAUTION:**
  - Do not reuse O-rings.

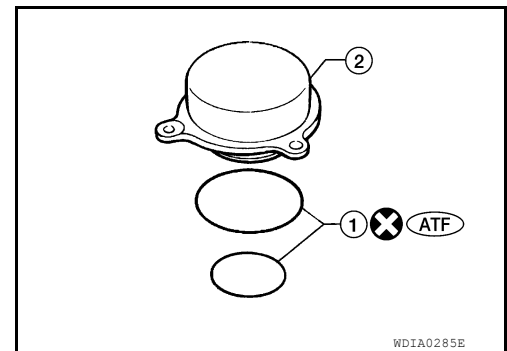


- Remove the oil filter stud from the oil filter.
- Remove the O-ring from the oil filter stud.
  - CAUTION:**
  - Do not reuse O-ring.

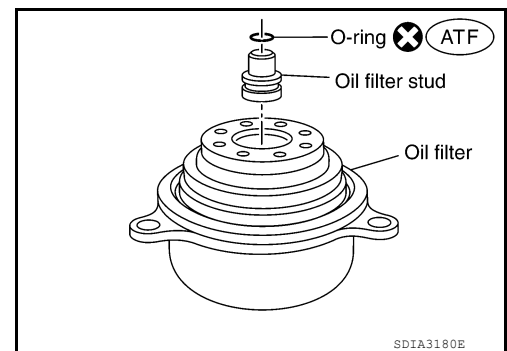

#### INSTALLATION

- Apply ATF to the new O-ring, and install it on the oil filter stud.
  - CAUTION:**
  - Do not reuse O-ring.
- Install the oil filter stud to the oil filter.

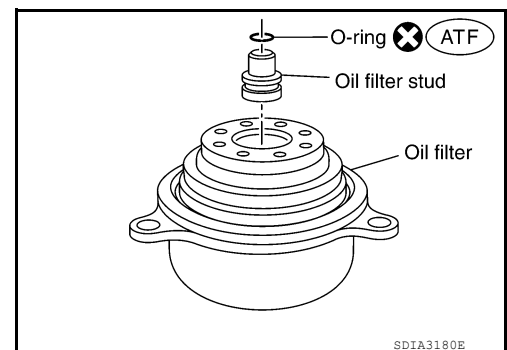

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## TRANSFER OIL FILTER


[ATX14B]

< PERIODIC MAINTENANCE >

3. Apply ATF to the two new O-rings (1), and install them on the oil filter (2).

**CAUTION:**

**Do not reuse O-rings.**

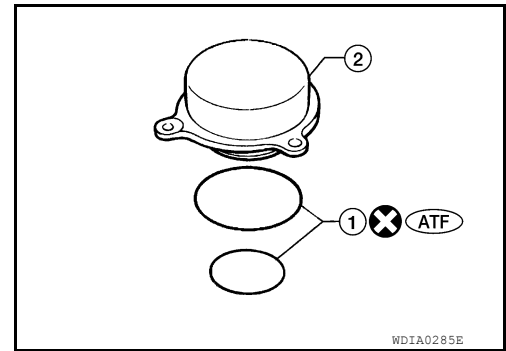


4. Install the oil filter to the transfer assembly. Tighten the bolts (←) to the specified torque. Refer to [DLN-141. "Disassembly and Assembly"](#).

**CAUTION:**

- Do not damage oil filter.
- Attach oil filter and tighten bolts evenly.

5. Add the specified transfer fluid and check for correct level. Refer to [DLN-127. "Inspection"](#).
6. Start the engine for one minute. Then stop the engine and recheck the transfer fluid. Refer to [DLN-127. "Inspection"](#).

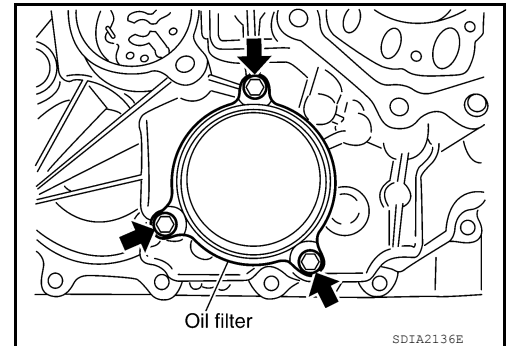

# TRANSFER FLUID

< PERIODIC MAINTENANCE >

[ATX14B]

## TRANSFER FLUID

### Replacement

INFOID:000000011290900

#### **CAUTION:**


If using the vehicle for towing, the A/T fluid must be replaced as specified. Refer to [MA-10, "FOR NORTH AMERICA : Introduction of Periodic Maintenance"](#) (United States and Canada), [MA-13, "FOR MEXICO : Introduction of Periodic Maintenance"](#) (Mexico).

### DRAINING

1. Stop engine.
2. Remove the drain plug and gasket and drain the fluid.
3. Install the drain plug with a new gasket to the transfer. Tighten to the specified torque. Refer to [DLN-141, "Disassembly and Assembly"](#).

#### **CAUTION:**


**Do not reuse gasket.**

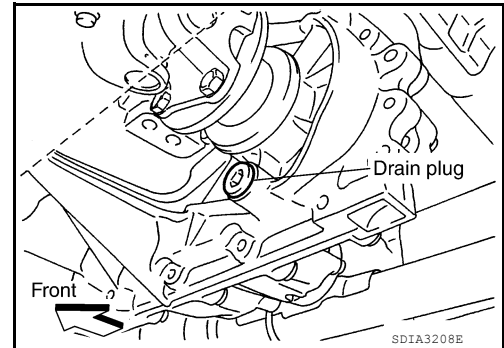

### FILLING

1. Remove the filler plug and gasket.
2. Fill the transfer with new fluid until the fluid level reaches the specified limit near the filler plug hole.

**Fluid grade and capacity** : Refer to [MA-16, "FOR USA AND CANADA : Fluids and Lubricants"](#) (United States and Canada), [MA-18, "FOR MEXICO : Fluids and Lubricants"](#) (Mexico).

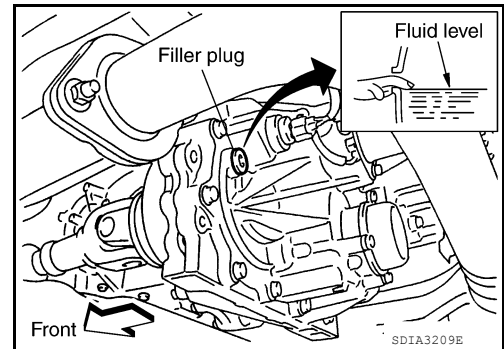

#### **CAUTION:**

**Carefully fill fluid. (Fill up for approx. 3 minutes.)**

3. Leave the vehicle for 3 minutes, and check fluid level again.
4. Install the filler plug with a new gasket to the transfer. Tighten to the specified torque. Refer to [DLN-141, "Disassembly and Assembly"](#).

#### **CAUTION:**

**Do not reuse gasket.**

### Inspection

INFOID:000000011290901

#### **CAUTION:**

If using the vehicle for towing, the A/T fluid must be replaced as specified. Refer to [MA-10, "FOR NORTH AMERICA : Introduction of Periodic Maintenance"](#) (United States and Canada), [MA-13, "FOR MEXICO : Introduction of Periodic Maintenance"](#) (Mexico).

### FLUID LEAKAGE AND FLUID LEVEL

1. Make sure that fluid is not leaking from the transfer assembly or around it.


A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## TRANSFER FLUID

[ATX14B]

### < PERIODIC MAINTENANCE >

2. Check fluid level from the filler plug hole as shown.  
**CAUTION:**  
**Do not start engine while checking fluid level.**
3. Install the filler plug with a new gasket to the transfer. Tighten to the specified torque. Refer to [DLN-141, "Disassembly and Assembly"](#).  
**CAUTION:**  
**Do not reuse gasket.**

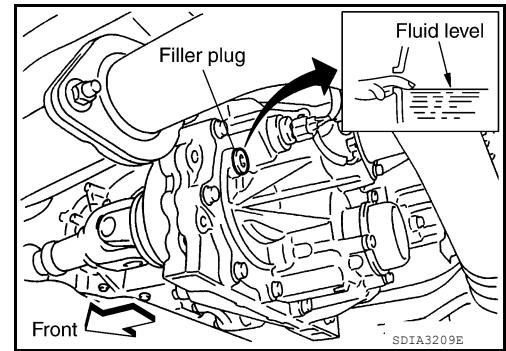



# TRANSFER CONTROL UNIT

< REMOVAL AND INSTALLATION >

[ATX14B]

## REMOVAL AND INSTALLATION

### TRANSFER CONTROL UNIT

#### Removal and Installation

INFOID:000000011290902


#### REMOVAL

1. Set transfer state as 2WD when 4WD shift switch is at 2WD, or as AUTO when 4WD shift switch is at AUTO.

**CAUTION:**

**When removing transfer control unit, transfer state must be at 2WD or AUTO.**

2. Turn the ignition switch OFF and disconnect negative battery terminal. Refer to [PG-81. "Removal and Installation"](#).
3. Remove the instrument lower panel RH and glove box. Refer to [IP-17. "Removal and Installation"](#).
4. Disconnect the two transfer control unit harness connectors.
5. Remove the transfer control unit bolts.
6. Remove the transfer control unit.

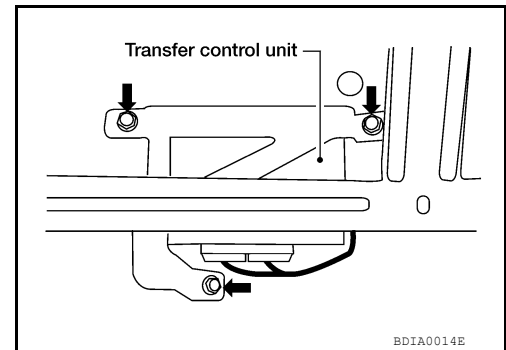

#### INSTALLATION

Installation is in the reverse order of removal.

- When installing the transfer control unit, tighten bolts to the specified torque.

**Transfer control unit bolts : 3.4 N·m (0.35 kg-m, 30 in-lb)**

**CAUTION:**

**Do not connect harness connector to transfer control unit when 4WD shift switch is at 4LO.**

- After the installation, check perform self-diagnosis. Refer to [DLN-6. "Work Flow"](#). If NG, adjust position between transfer assembly and transfer control unit. Refer to [DLN-119. "Precaution for Transfer Assembly and Transfer Control Unit Replacement"](#).

# FRONT OIL SEAL

< REMOVAL AND INSTALLATION >

[ATX14B]

## FRONT OIL SEAL

### Removal and Installation


INFOID:000000011290903

#### REMOVAL

1. Remove the front propeller shaft. Refer to [DLN-184, "Removal and Installation"](#).
2. Remove the companion flange self-lock nut using suitable tool.

**CAUTION:**


**Do not reuse self-lock nut.**

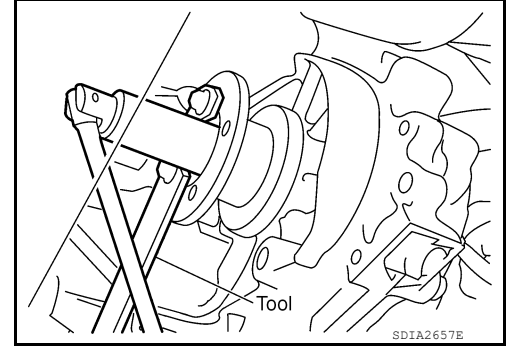


3. Put a matching mark on top of the front drive shaft in line with the mark on the companion flange.

**CAUTION:**

**Use paint to make the matching mark on the front drive shaft. Do not damage the front drive shaft.**

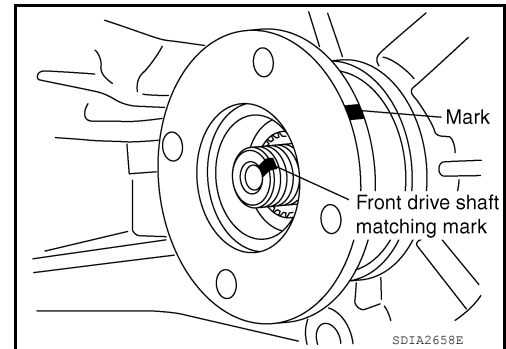

4. Remove the companion flange using suitable tool.

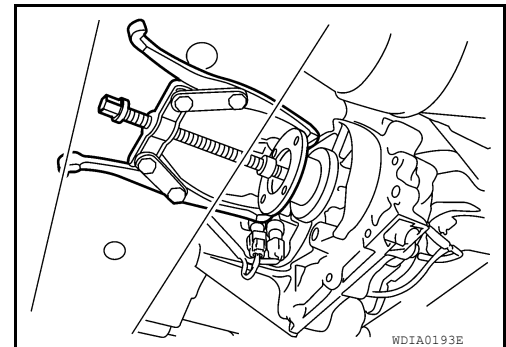


5. Remove the front oil seal from the front case using Tool.

**Tool number : ST33290001 (J-34286)**

**CAUTION:**

**Do not damage front case.**

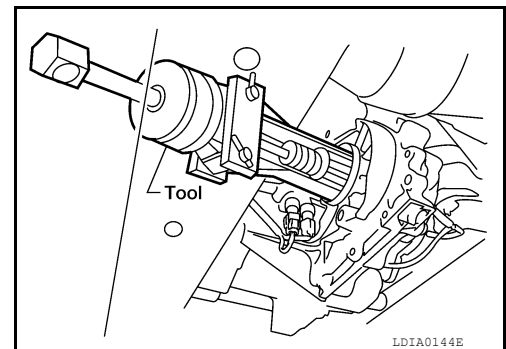

#### INSTALLATION

# FRONT OIL SEAL

## < REMOVAL AND INSTALLATION >


[ATX14B]

1. Install the new front oil seal until it is flush with the end face of the front case using Tool.


**Tool number** : KV38100500 ( — )

**CAUTION:**

- Do not reuse oil seal.
- Apply petroleum jelly to oil seal.

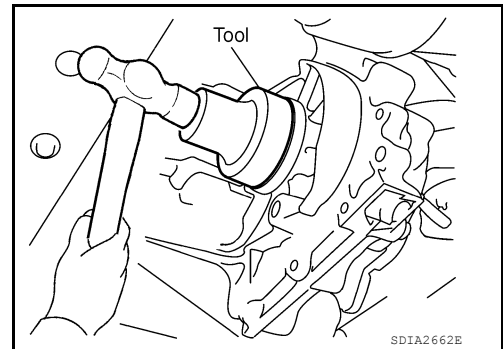

2. Align the matching mark of the front drive shaft with the matching mark of the companion flange, then install the companion flange.

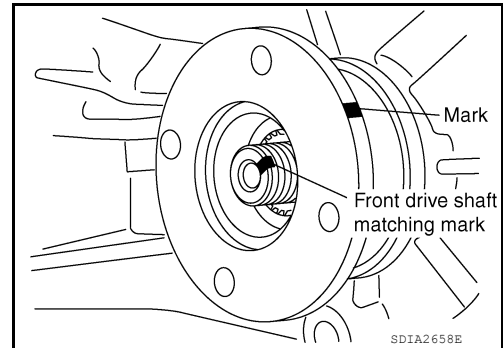


3. Install the new self-lock nut. Tighten to the specified torque using suitable tool. Refer to [DLN-184, "Removal and Installation"](#).

**CAUTION:**

**Do not reuse self-lock nut.**

4. Install the front propeller shaft. Refer to [DLN-184, "Removal and Installation"](#).
5. Check for transfer fluid leaks. Check transfer fluid level and add specified fluid as necessary. Refer to [DLN-127, "Inspection"](#).

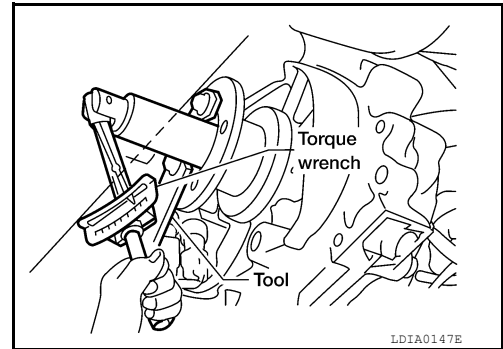

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# REAR OIL SEAL

< REMOVAL AND INSTALLATION >

[ATX14B]

## REAR OIL SEAL

### Removal and Installation


INFOID:000000011290904

#### REMOVAL

1. Remove the rear propeller shaft. Refer to [DLN-194. "Removal and Installation"](#).
2. Remove the dust cover from the rear case.

**CAUTION:**

**Do not damage the rear case.**

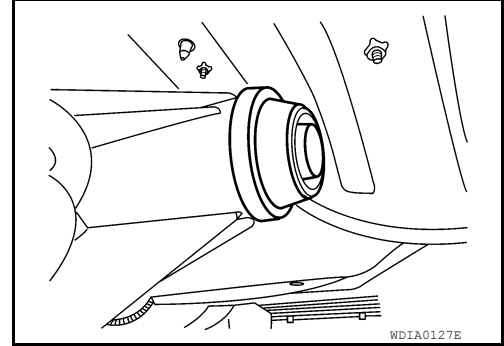


3. Remove the rear oil seal from the rear case using Tool.

**Tool number** : ST33290001 (J-34286)

**CAUTION:**

**Do not damage the rear case.**

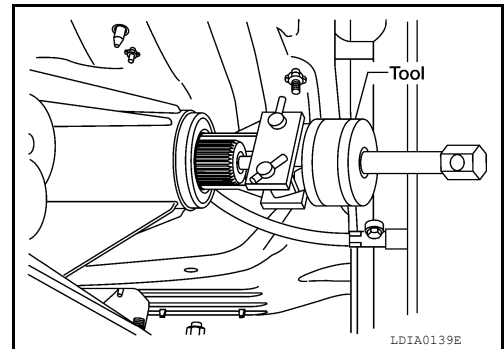


#### INSTALLATION

1. Install the new rear oil seal until it is flush with the end face of the rear case using Tool.

**Tool number** : ST30720000 (J-25405)

**CAUTION:**


- Do not reuse oil seal.
- Apply petroleum jelly to oil seal.

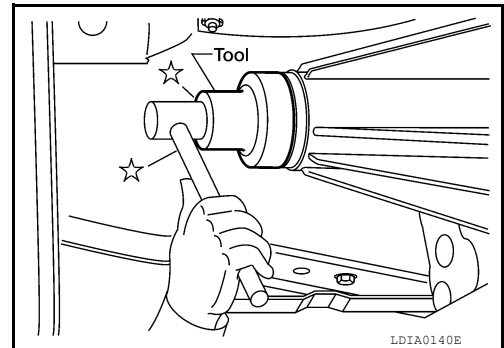

2. Apply petroleum jelly to the circumference of the new dust cover (1). Position the new dust cover as shown.

**CAUTION:**

- Do not reuse dust cover.
- Position the protrusions in the position shown.
- (2): Rear case assembly
- (A): Protrusions

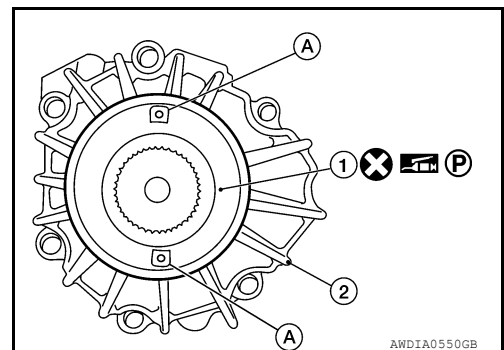

## REAR OIL SEAL

< REMOVAL AND INSTALLATION >

[ATX14B]


3. Install the new dust cover to the rear case using Tool.

**Tool number** : KV40105310 ( — )

**CAUTION:**

- Do not reuse dust cover.
- Apply petroleum jelly to dust cover.

4. Install the rear propeller shaft. Refer to [DLN-194, "Removal and Installation"](#).
5. Check for transfer fluid leaks. Check transfer fluid level and add specified fluid as necessary. Refer to [DLN-127, "Replacement"](#).

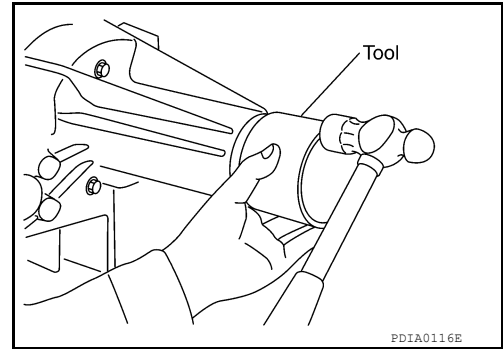

A  
B  
C

DLN

E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# SIDE OIL SEAL

< REMOVAL AND INSTALLATION >

[ATX14B]

## SIDE OIL SEAL

### Removal and Installation


INFOID:000000011290905

#### REMOVAL

1. Remove the front propeller shaft. Refer to [DLN-184, "Removal and Installation"](#).
2. Remove the companion flange. Refer to [DLN-141, "Disassembly and Assembly"](#).
3. Remove the transfer control device from the transfer assembly. Refer to [DLN-135, "Removal and Installation"](#).
4. Remove the side oil seal using suitable tool.

**CAUTION:**

**Do not damage shift cross.**

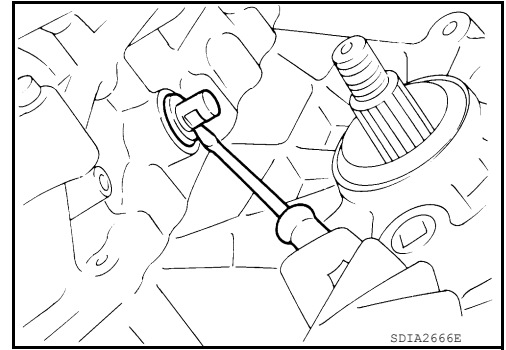

#### INSTALLATION


1. Install the new side oil seal until it is flush with the end face of case using Tool.

**Tool number** : **ST22360002 (J-25679-01)**

**CAUTION:**

- Do not reuse oil seal.
- Apply petroleum jelly to oil seal.

2. Install the transfer control device to the transfer assembly. Refer to [DLN-135, "Removal and Installation"](#).
3. Install the companion flange. Refer to [DLN-141, "Disassembly and Assembly"](#).
4. Install the front propeller shaft. Refer to [DLN-184, "Removal and Installation"](#).
5. Check for transfer fluid leaks. Check transfer fluid level and add specified fluid as necessary. Refer to [DLN-127, "Inspection"](#).

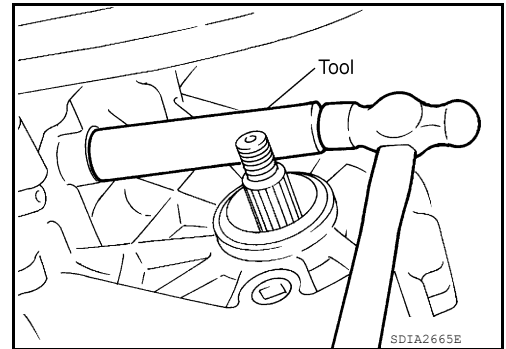

# TRANSFER CONTROL DEVICE


< REMOVAL AND INSTALLATION >

[ATX14B]

## TRANSFER CONTROL DEVICE

### Removal and Installation

INFOID:000000011290906

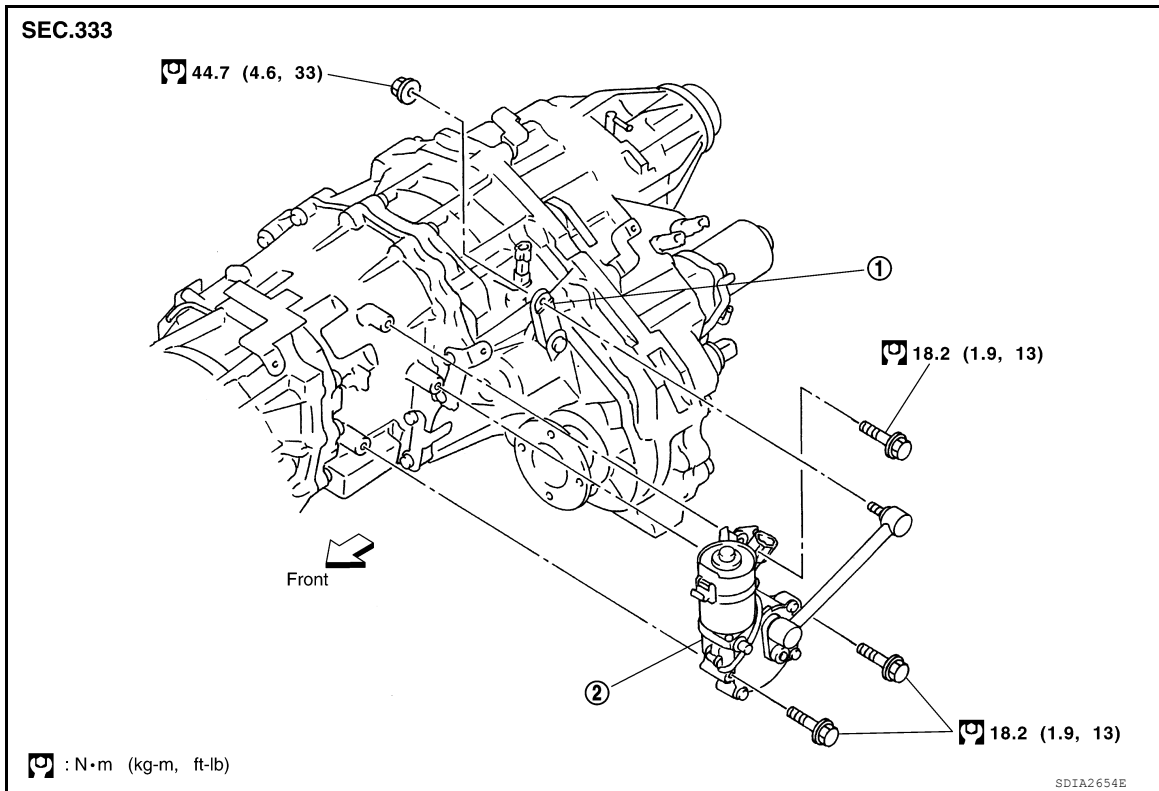

1. Shift lever

2. Actuator

### REMOVAL

#### CAUTION:

Change vehicle state to AUTO, and then remove and install transfer control device.

1. Remove front propeller shaft. Refer to [DLN-184, "Removal and Installation"](#).
2. Disconnect the transfer control device harness connector.
3. Remove transfer control lever.
4. Disconnect vacuum line.
5. Remove transfer control device.

### INSTALLATION

#### CAUTION:

Check 4WD shift indicator after installation. Refer to [DLN-119, "Precaution for Transfer Assembly and Transfer Control Unit Replacement"](#).

Installation is in the reverse order of removal.

# AIR BREATHER HOSE

< REMOVAL AND INSTALLATION >


[ATX14B]

## AIR BREATHER HOSE

### Removal and Installation

INFOID:000000011290907

#### COMPONENTS

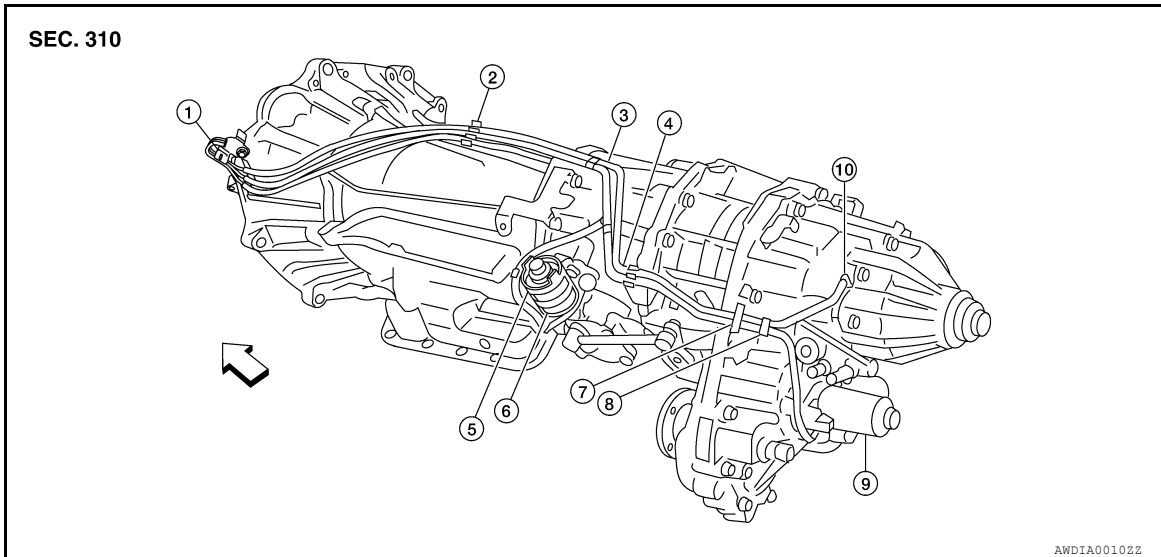

- |                              |           |                   |
|------------------------------|-----------|-------------------|
| 1. Breather tube             | 2. Clip A | 3. Clip B         |
| 4. Clip C                    | 5. Clip D | 6. Actuator       |
| 7. Air breather hose clamp   | 8. Clip E | 9. Transfer motor |
| 10. Breather tube (transfer) | ⇨ Front   |                   |

#### REMOVAL

1. Disconnect air breather hose from transfer motor.
2. Disconnect air breather hose from breather tube (transfer).
3. Disconnect air breather hose from actuator.
4. Release air breather hose clamp and clips as necessary.
5. Disconnect air breather hoses from breather tube.

#### **CAUTION:**


**Note paint marks for installation.**

#### INSTALLATION

#### **CAUTION:**

**Make sure there are no pinched or restricted areas on each air breather hose caused by folding or bending when installing it.**

1. Install each air breather hose into the breather tube (4). Set each air breather hose with paint mark facing upward.
  - A/T breather hose (1)
  - Transfer breather hose (2)
  - Actuator/transfer motor breather hose (3)
  - Paint marks (A)

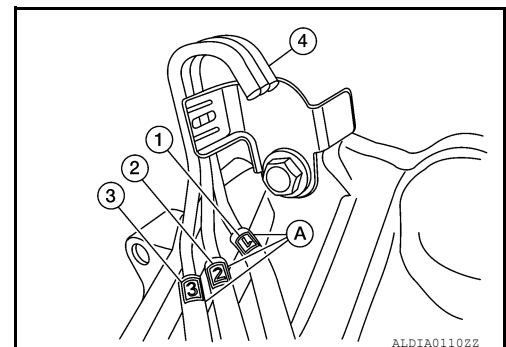




# AIR BREATHER HOSE

## < REMOVAL AND INSTALLATION >

[ATX14B]


2. Install actuator/transfer motor air breather hose (1) and transfer air breather hose (2) on clip (A) with the paint mark (B) facing upward.

• ⇐ :Front

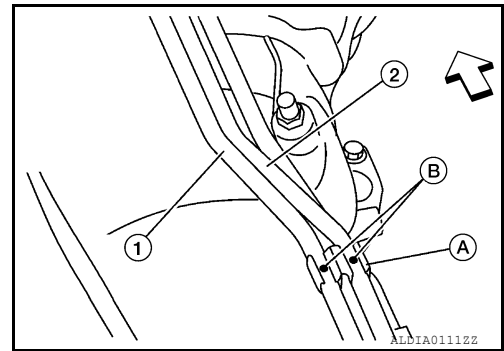


3. Install clip (B) on actuator/transfer motor air breather hose (1) and transfer air breather hose (2) with the paint mark (A) matched.

• ⇐ :Front

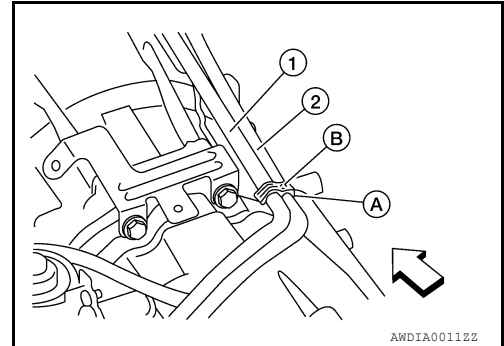


4. Install actuator/transfer motor air breather hose (1) and transfer air breather hose (2) on clip (B) and clip (C) with the paint mark (A) and (D) facing upward.

• ⇐ :Front

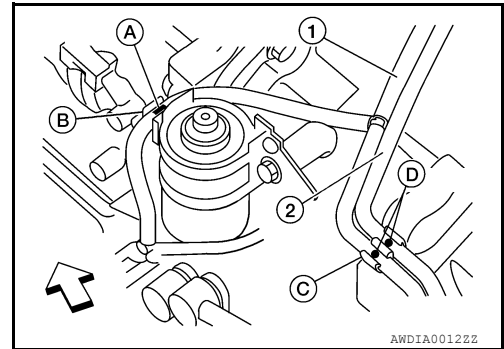


5. Install the actuator air breather hose into the actuator (case connector) until the hose end reaches the base of the tube. Set actuator air breather hose with paint mark facing leftward.

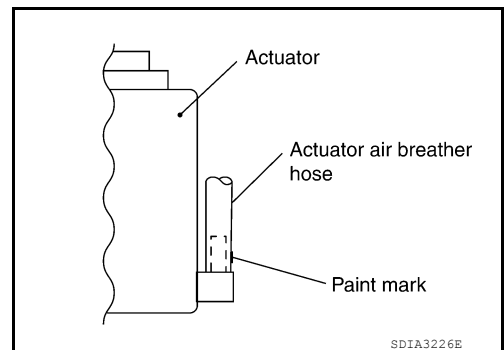

6. Install clip (B) on transfer motor air breather hose (2) and transfer air breather hose (1) with the paint mark (A) matched.

• ⇐ :Front

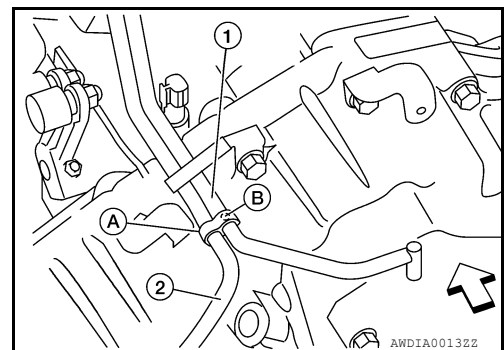


A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## AIR BREATHER HOSE


< REMOVAL AND INSTALLATION >

[ATX14B]

7. Install the transfer air breather hose into the breather tube (transfer, metal connector) until the hose end reaches the base of the tube. Set transfer air breather hose with paint mark facing upwards.

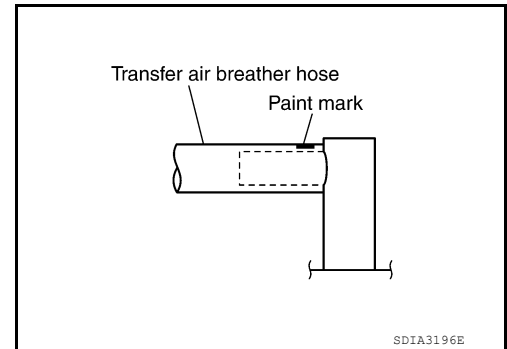

8. Install the transfer motor air breather hose into the transfer motor (case connector) until the hose end reaches the end of the curved section. Set transfer motor air breather hose with paint mark facing leftward.

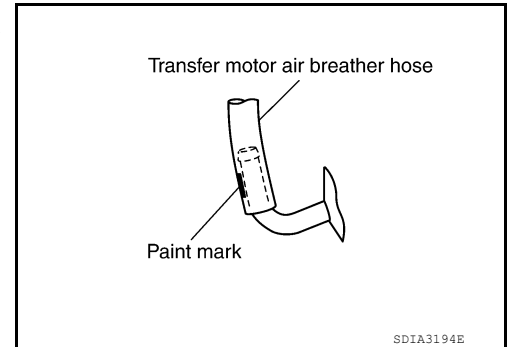

# TRANSFER MOTOR

< REMOVAL AND INSTALLATION >

[ATX14B]


## TRANSFER MOTOR

### Removal and Installation

INFOID:000000011290908



#### REMOVAL

1. Disconnect the transfer motor harness connector.
2. Remove the transfer motor air breather hose from the transfer motor. Refer to [DLN-136, "Removal and Installation"](#).
3. Remove the transfer motor bolts (←).
4. Remove the transfer motor.

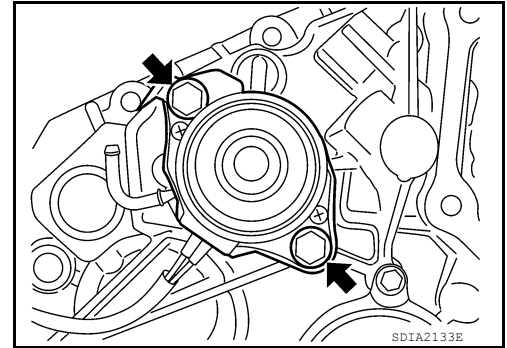

#### INSTALLATION

1. Apply ATF to the new O-ring and install it to the transfer motor.  
**CAUTION:**  
**Do not reuse O-ring.**
2. Fit the double-flat end of the transfer motor shaft into the slot of the sub-oil pump assembly. Then tighten to the specified torque. Refer to [DLN-139, "Removal and Installation"](#).  
**CAUTION:**  
**Be sure to install harness connector bracket.**
3. Install the transfer motor air breather hose into the transfer motor (case connector) until the hose end reaches the end of the curved section. Set transfer motor air breather hose with paint mark facing leftward.

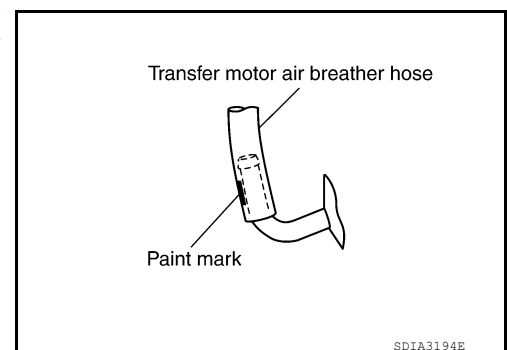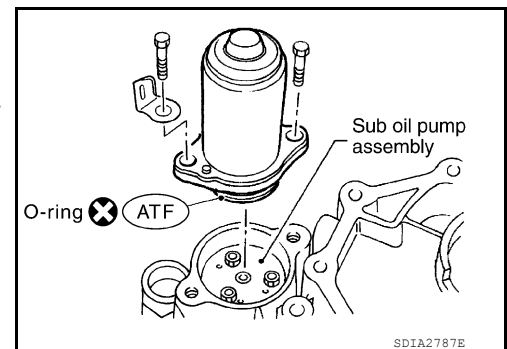

4. Connect the transfer motor harness connector.
5. Check the transfer fluid. Refer to [DLN-127, "Replacement"](#).
6. Start the engine for one minute. Then stop the engine and recheck the transfer fluid. Refer to [DLN-127, "Inspection"](#).

# UNIT REMOVAL AND INSTALLATION

## TRANSFER ASSEMBLY

### Removal and Installation

INFOID:000000011290909

#### NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

#### REMOVAL

1. Set transfer state as 2WD when 4WD shift switch is at 2WD.
2. Remove under covers (if equipped).
3. Partially drain the transfer fluid. Refer to [TM-159, "Checking the A/T Fluid \(ATF\)"](#).
4. Remove the center exhaust tube and main muffler. Refer to [EX-6, "Removal and Installation"](#).
5. Remove the front and rear propeller shafts. Refer to [DLN-184, "Removal and Installation"](#) (front), [DLN-194, "Removal and Installation"](#) (rear).

#### CAUTION:

**Do not damage spline, sleeve yoke and rear oil seal when removing rear propeller shaft.**

6. Remove the A/T insulator nuts from the A/T cross member. Refer to [TM-196, "Removal and Installation \(4WD\)"](#).
7. Position two suitable jacks under the A/T and transfer assembly.
8. Remove the cross member. Refer to [TM-196, "Removal and Installation \(4WD\)"](#).

#### WARNING:

**Support A/T and transfer assembly using two suitable jacks while removing cross member.**

9. Disconnect the harness connectors from the following:
  - ATP switch
  - Neutral 4LO switch
  - Wait detection switch
  - Transfer motor
  - Transfer control device
  - Transfer terminal cord assembly
10. Disconnect each air breather hose from the following. Refer to [DLN-136, "Removal and Installation"](#).
  - Actuator
  - Breather tube (transfer)
  - Transfer motor
11. Remove the transfer control device from the extension housing.
12. Remove the transfer to A/T and A/T to transfer bolts.
13. Remove the transfer assembly.

#### WARNING:

**Support transfer assembly with suitable jack while removing it.**

#### CAUTION:

**Do not damage rear oil seal (A/T).**


#### INSTALLATION

Installation is in the reverse order of removal.

- Tighten the bolts to specification.

**Transfer bolt torque : 36 N·m (3.7 kg-m, 27 ft-lb)**

- Fill the transfer with new specified fluid. Check for fluid leaks. Refer to [DLN-127, "Replacement"](#).
- Start the engine for one minute. Then stop the engine and recheck the transfer fluid level. Refer to [DLN-127, "Inspection"](#).

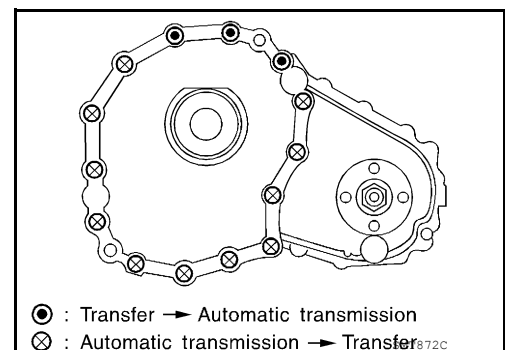

# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]


## UNIT DISASSEMBLY AND ASSEMBLY

### TRANSFER ASSEMBLY

#### Disassembly and Assembly

#### COMPONENTS

INFOID:0000000011290910

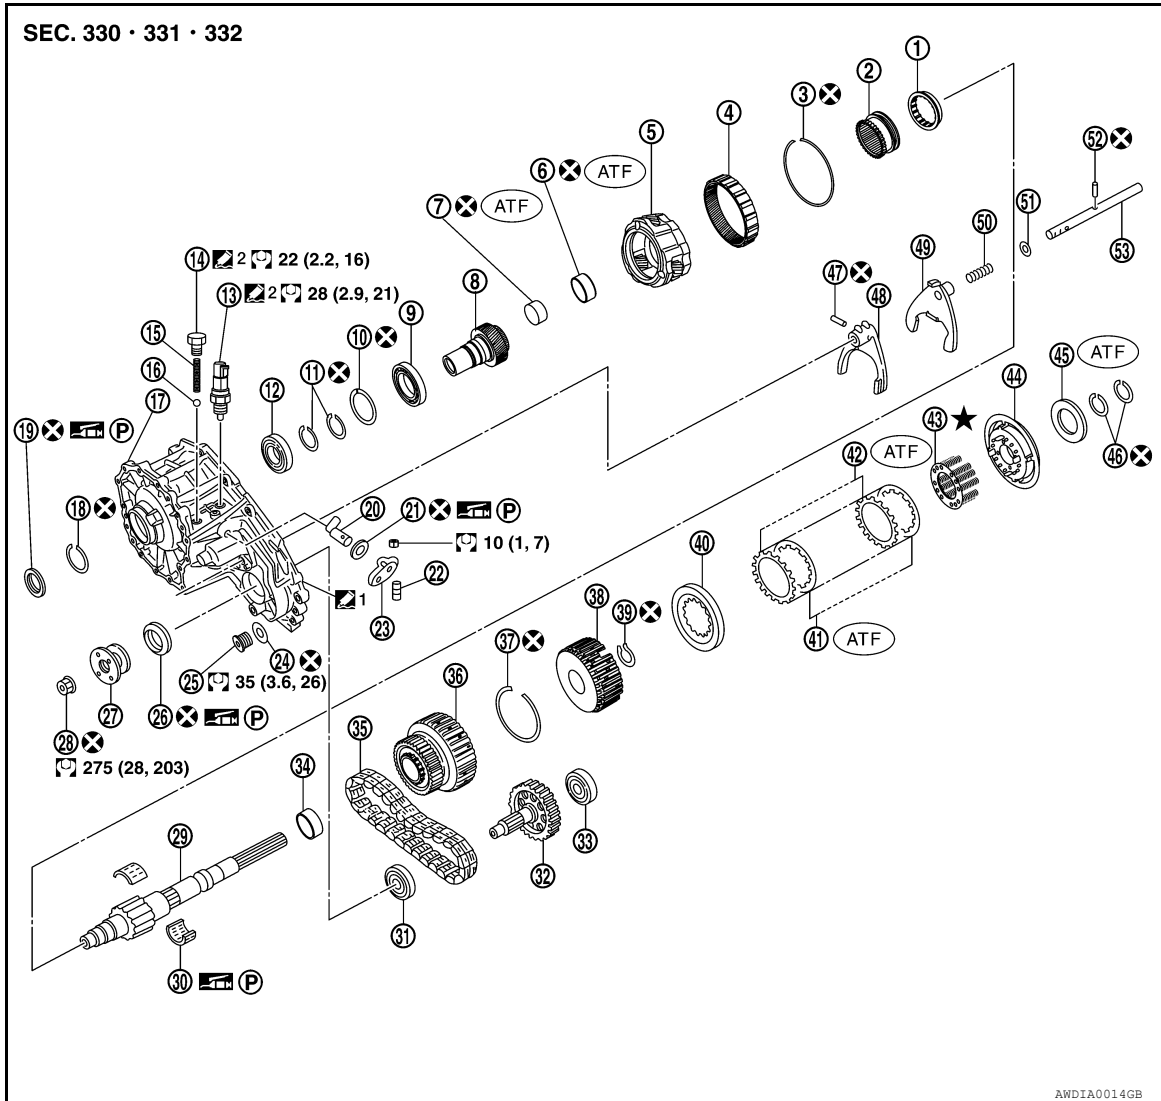



- |     |                       |     |                            |     |                  |
|-----|-----------------------|-----|----------------------------|-----|------------------|
| 1.  | 2-4 sleeve            | 2.  | L-H sleeve                 | 3.  | Snap ring        |
| 4.  | Internal gear         | 5.  | Planetary carrier assembly | 6.  | Metal bushing    |
| 7.  | Needle bearing        | 8.  | Sun gear                   | 9.  | Carrier bearing  |
| 10. | Snap ring             | 11. | Snap ring                  | 12. | Input bearing    |
| 13. | Wait detection switch | 14. | Check plug                 | 15. | Check spring     |
| 16. | Check ball            | 17. | Front case                 | 18. | Snap ring        |
| 19. | Input oil seal        | 20. | Shift cross                | 21. | Side oil seal    |
| 22. | Lock pin              | 23. | Shift lever                | 24. | Gasket           |
| 25. | Drain plug            | 26. | Front oil seal             | 27. | Companion flange |
| 28. | Self-lock nut         | 29. | Mainshaft                  | 30. | Needle bearing   |
| 31. | Front bearing         | 32. | Front drive shaft          | 33. | Rear bearing     |
| 34. | Spacer                | 35. | Drive chain                | 36. | Clutch drum      |
| 37. | Snap ring             | 38. | Clutch hub                 | 39. | Snap ring        |


A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]

- |                                                                                                                              |                             |                                                                                                                                        |
|------------------------------------------------------------------------------------------------------------------------------|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| 40. Retaining plate                                                                                                          | 41. Driven plate (10 sheet) | 42. Drive plate (10 sheet)                                                                                                             |
| 43. Return spring assembly                                                                                                   | 44. Press flange            | 45. Thrust needle bearing                                                                                                              |
| 46. Snap ring                                                                                                                | 47. Retaining pin           | 48. L-H fork                                                                                                                           |
| 49. 2-4 fork                                                                                                                 | 50. Shift fork spring       | 51. Fork guide                                                                                                                         |
| 52. Retainer pin                                                                                                             | 53. Shift rod               |  1 Apply Genuine Anarobic Liquid Gasket or equivalent |
|  2 Apply Genuine Silicone RTV or equivalent |                             |                                                                                                                                        |

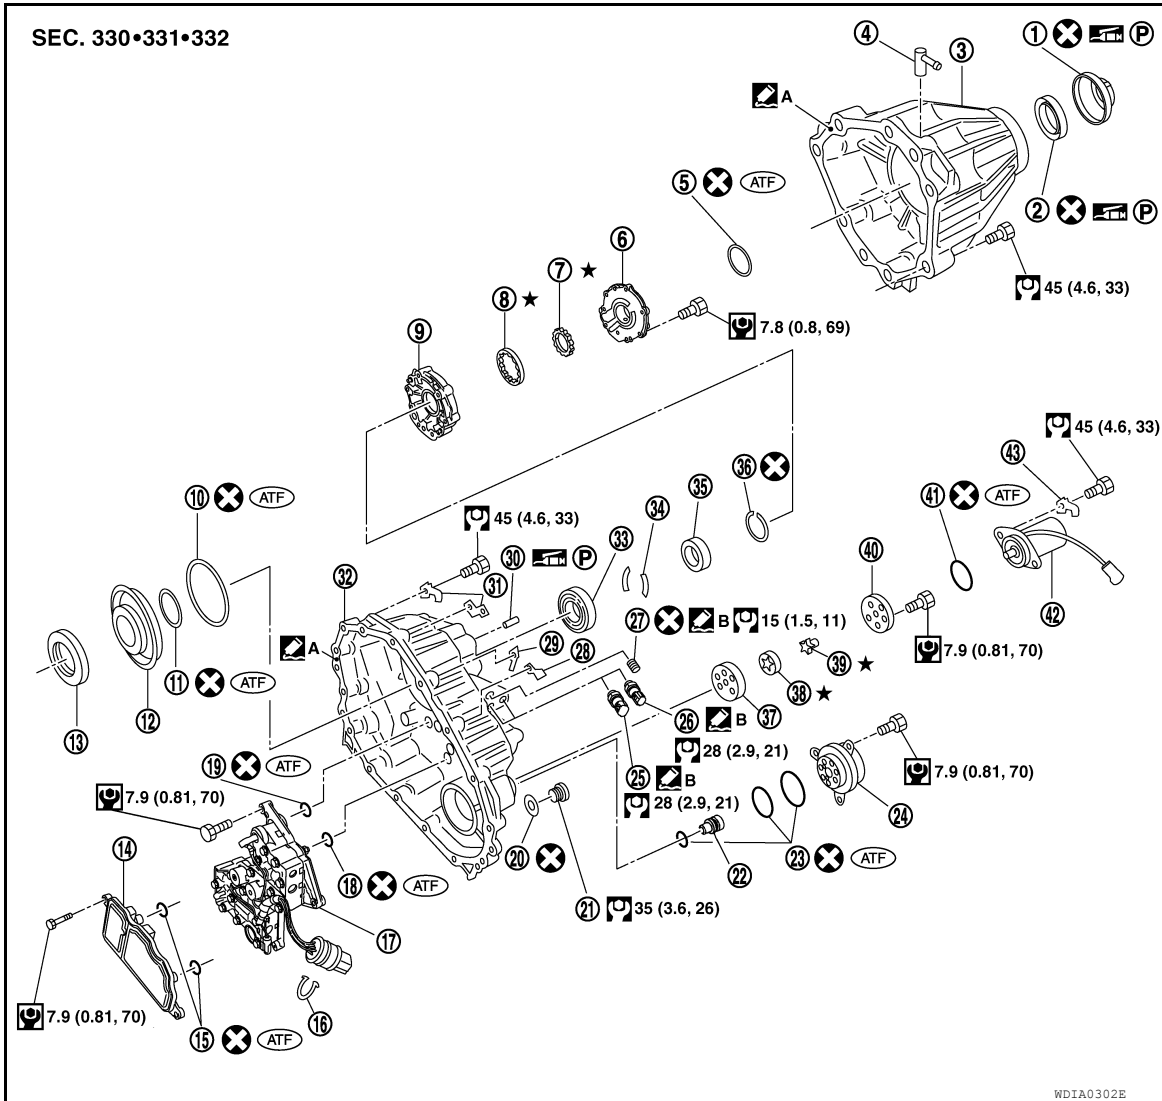

- |                                |                             |                               |
|--------------------------------|-----------------------------|-------------------------------|
| 1. Dust cover                  | 2. Rear oil seal            | 3. Rear case                  |
| 4. Breather tube               | 5. Seal ring                | 6. Main oil pump cover        |
| 7. Inner gear                  | 8. Outer gear               | 9. Main oil pump housing      |
| 10. D-ring                     | 11. D-ring                  | 12. Clutch piston             |
| 13. Thrust needle bearing race | 14. Oil strainer            | 15. O-ring                    |
| 16. Snap ring                  | 17. Control valve assembly  | 18. Lip seal (large 5 pieces) |
| 19. Lip seal (small 2 pieces)  | 20. Gasket                  | 21. Filler plug               |
| 22. Oil filter stud            | 23. O-ring                  | 24. Oil filter                |
| 25. ATP switch                 | 26. Neutral-4LO switch      | 27. Oil pressure check plug   |
| 28. Harness bracket            | 29. Air breather hose clamp | 30. Stem bleeder              |
| 31. Harness bracket            | 32. Center case             | 33. Mainshaft rear bearing    |
| 34. C-ring                     | 35. Washer holder           | 36. Snap ring                 |

# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[ATX14B]

- |                          |                                                         |                                               |
|--------------------------|---------------------------------------------------------|-----------------------------------------------|
| 37. Sub oil pump housing | 38. Outer gear                                          | 39. Inner gear                                |
| 40. Sub oil pump cover   | 41. O-ring                                              | 42. Transfer motor                            |
| 43. Connector bracket    | A. Apply Genuine Anaerobic Liquid Gasket or equivalent. | B. Apply Genuine Liquid Gasket or equivalent. |


## DISASSEMBLY

### Rear Case


1. Remove the rear case bolts (←).

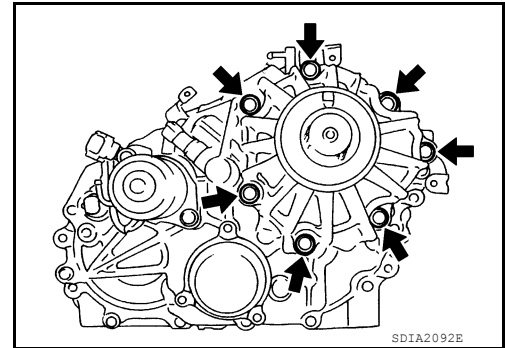

2. Remove the rear case from the center case.

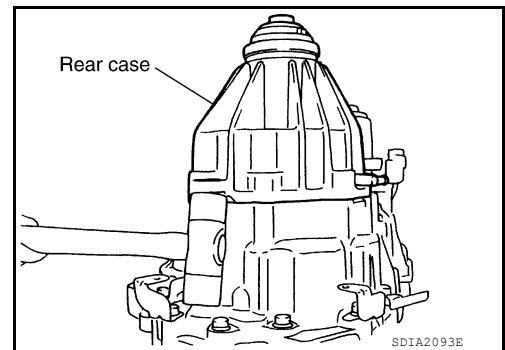


3. Remove the dust cover using suitable tool.

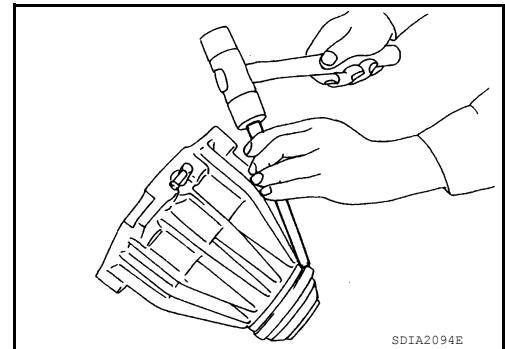

4. Remove the rear oil seal using suitable tool.

**CAUTION:**  
**Do not damage rear case.**

5. Remove the breather tube.

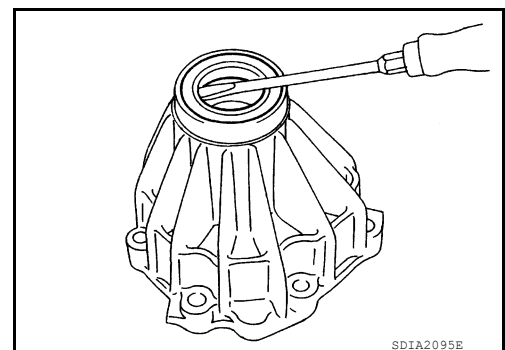

### Front Case

1. Remove the rear case assembly. Refer to [DLN-141, "Disassembly and Assembly"](#).
2. Remove the lock pin nut.


A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TRANSFER ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]


3. Remove the lock pin using suitable tool.
4. Remove the shift lever.

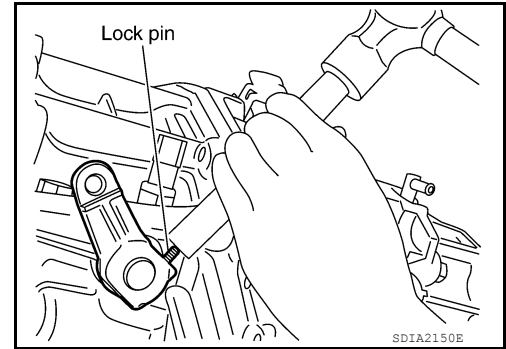


5. Remove the side oil seal from the front case using suitable tool.  
**CAUTION:**  
Do not damage front case or shift cross.

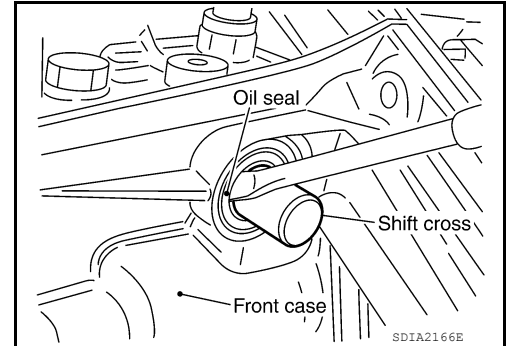


6. Remove the check plug, check spring and check ball.
7. Remove the wait detection switch.

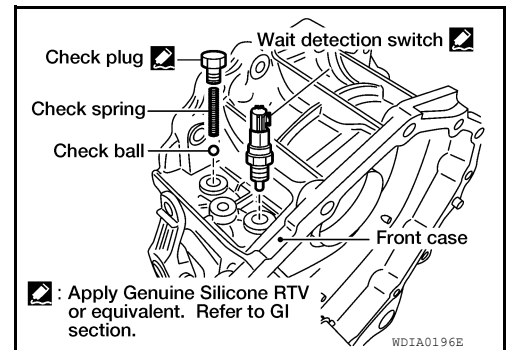

8. Remove the self-lock nut from the companion flange using suitable tool.

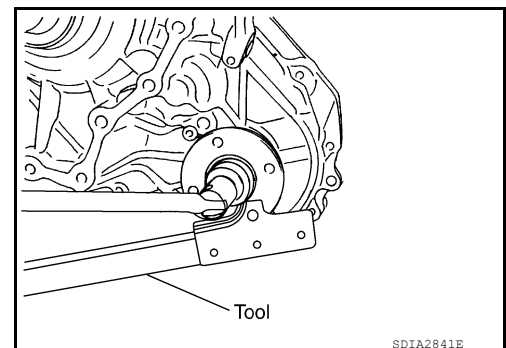

9. Put a matching mark on top of the front drive shaft thread in line with the mark on the companion flange.  
**CAUTION:**  
Use paint to make the matching mark on the front drive shaft thread. Do not damage the front drive shaft.

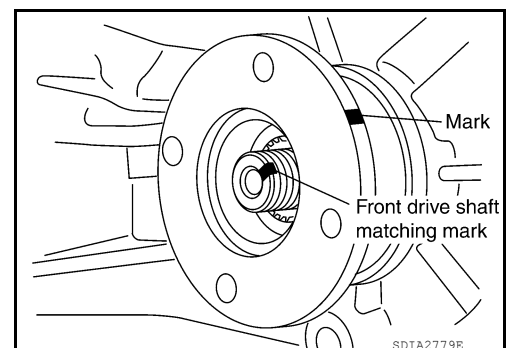




# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[ATX14B]

10. Remove the companion flange using suitable tool.

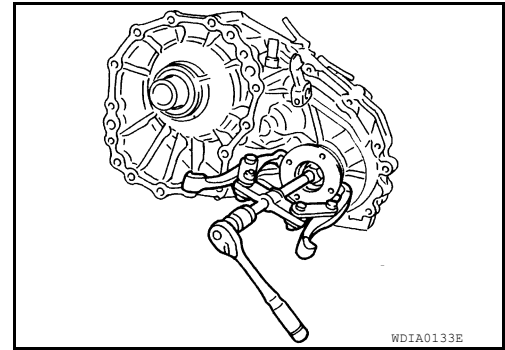

11. Remove the center case bolts (←), harness bracket and air breather.


12. Remove the filler plug and gasket.

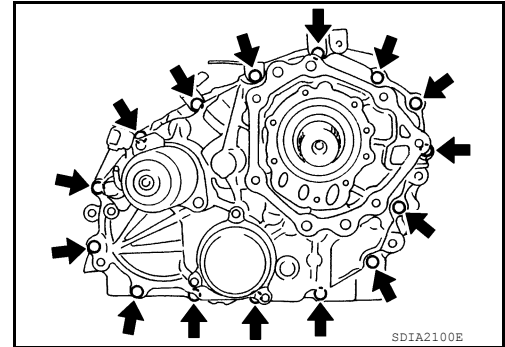

13. Separate the center case from the front case. Then remove the center case from the front case by prying it up using suitable tool.


**CAUTION:**

**Do not damage the mating surfaces.**

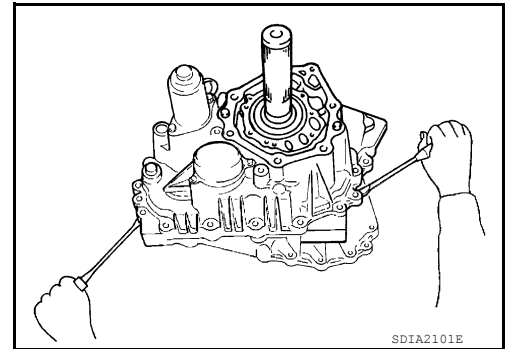


14. Remove the shift rod components together with the 2-4 sleeve and L-H sleeve.

15. Remove the shift cross from the front case, using shift rod (A).

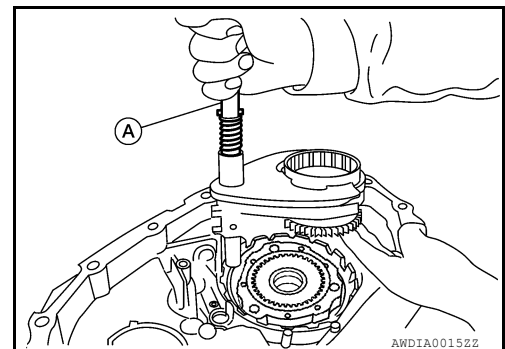

16. Remove the 2-4 sleeve and L-H sleeve from the 2-4 fork and L-H fork respectively.

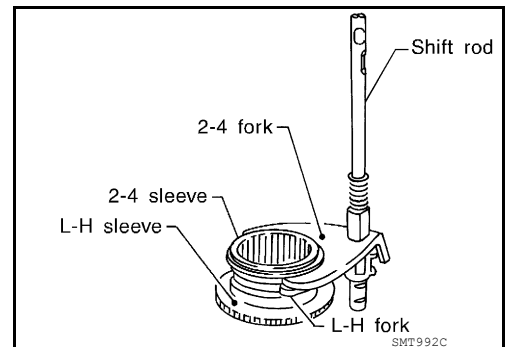

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TRANSFER ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]

17. Drive out the retaining pin from the shift rod using suitable tool.

**CAUTION:**


**Do not reuse retaining pin.**

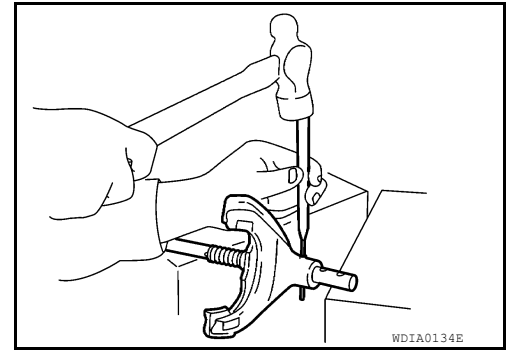

18. Remove the L-H fork, 2-4 fork, shift fork spring and fork guide from the shift rod.

**CAUTION:**


**Do not reuse retaining pin.**

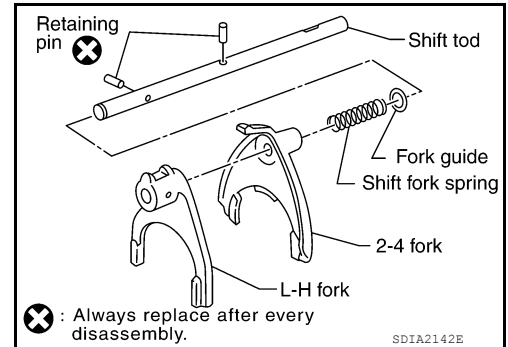

19. Remove the input oil seal from the front case using suitable tool.

**CAUTION:**

**Do not damage front case or sun gear.**

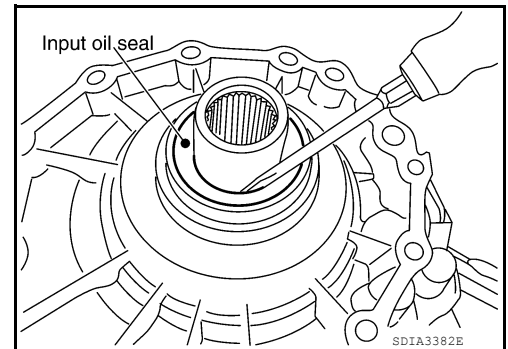


20. Remove the snap ring from the sun gear.

**CAUTION:**


**Do not damage front case or sun gear.**

**Do not reuse snap ring.**

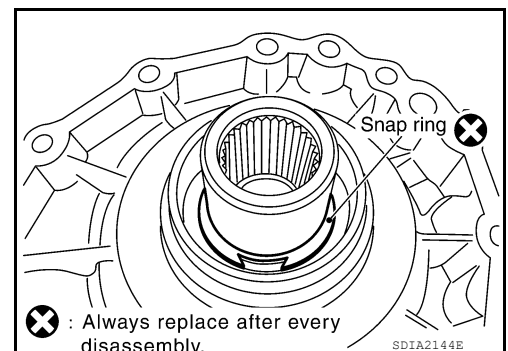

21. Remove the sun gear assembly and planetary carrier assembly from the front case using Tool.

**Tool number : ST35300000 ( — )**

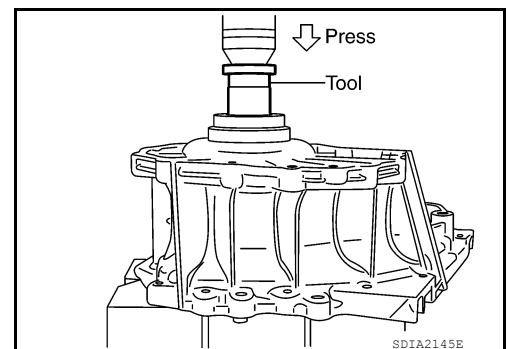


# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]

22. Remove the snap ring and internal gear using suitable tool.

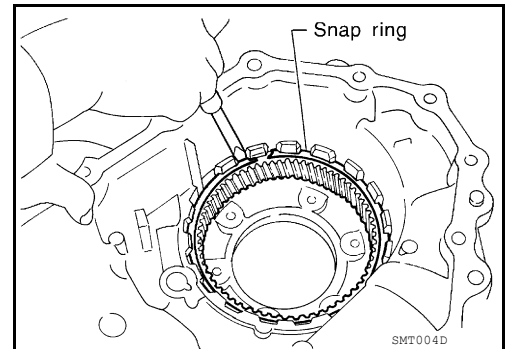


A  
B  
C

DLN

23. Remove the front oil seal using suitable tool.

**CAUTION:**

**Do not damage front case.**

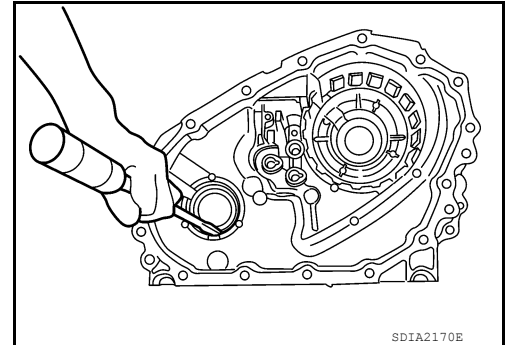


E  
F  
G

24. Remove the snap ring from the front case.

**CAUTION:**


**Do not reuse snap ring.**

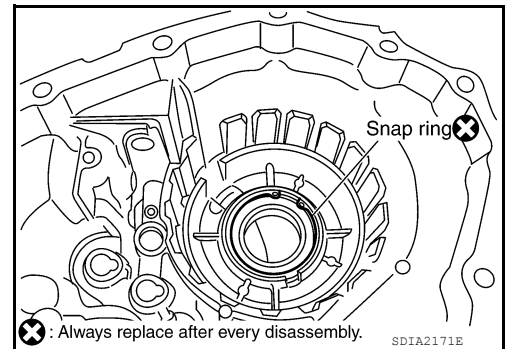

H  
I  
J


25. Remove the input bearing from the front case using Tool.

**Tool number : ST33200000 (J-26082)**

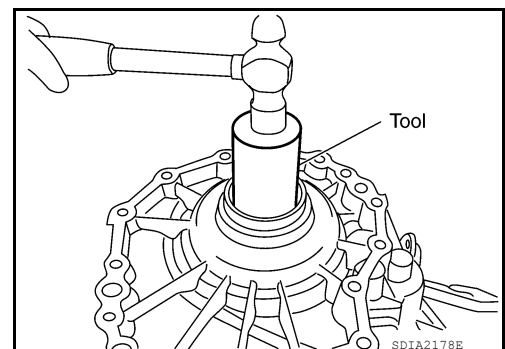

L  
M  
N

26. Remove the snap ring from the planetary carrier assembly using suitable tool.

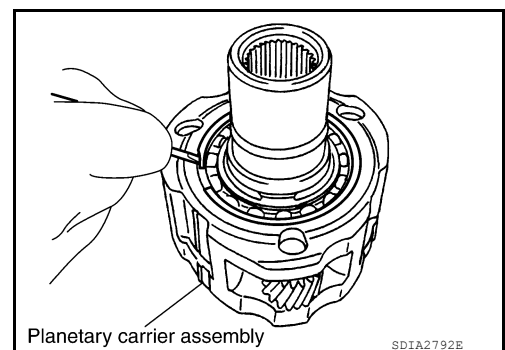


O  
P

# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]


27. Remove the sun gear assembly from the planetary carrier assembly.

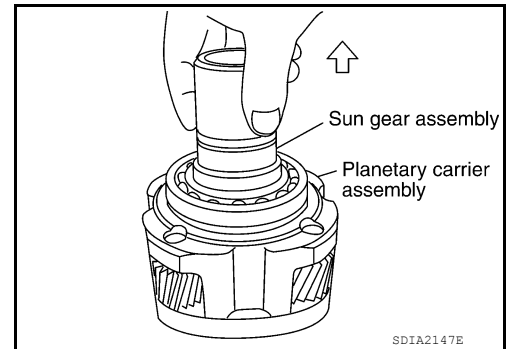

28. Remove the snap ring from the sun gear assembly using suitable tool.

**CAUTION:**


**Do not reuse retaining pin.**

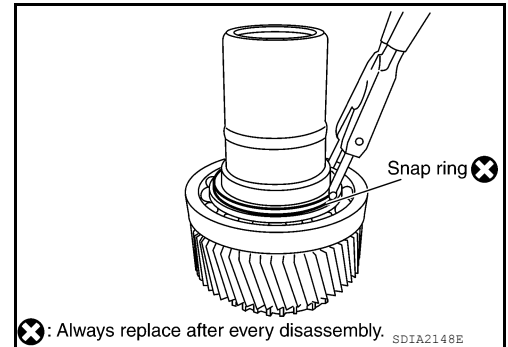

29. Remove the carrier bearing from the sun gear using Tools.


**Tool number (A): ST35300000 ( — )**

**(B): ST30031000 ( — )**

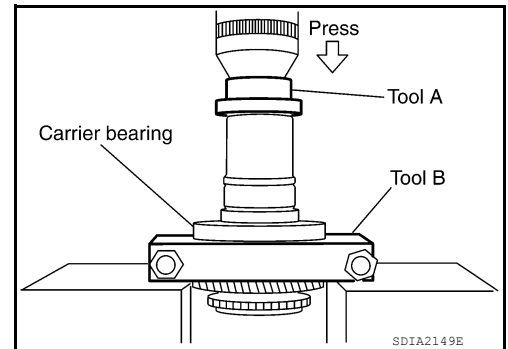

30. Remove the needle bearing from the sun gear using Tool.

**Tool number : ST33710000 ( — )**

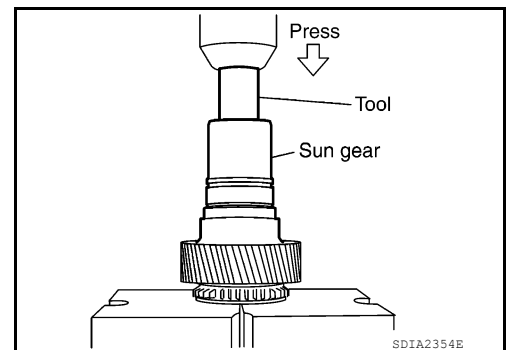


31. Remove the metal bushing from the sun gear using Tools.

**Tool number (A): ST33710000 ( — )**

**(B): ST35325000 ( — )**

**(C): ST33290001 (J-34286)**

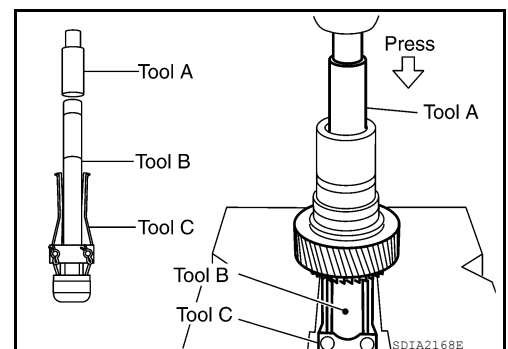

# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[ATX14B]

## Center Case

1. Remove the rear case assembly. Refer to [TM-212, "Disassembly"](#).
2. Remove the front case assembly. Refer to [TM-212, "Disassembly"](#).
3. Hold the front drive shaft with one hand and tap to remove the front drive shaft with the drive chain.

**CAUTION:**


**Do not tap drive chain.**

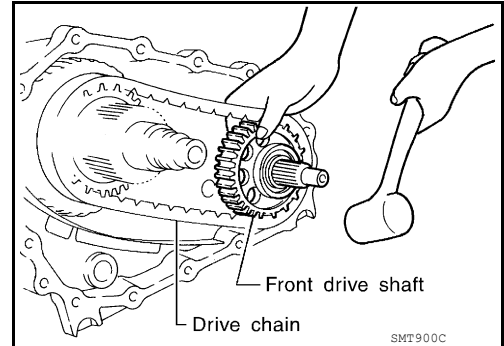

4. Remove the front drive shaft front bearing using Tools.

**Tool number** (A): ST33052000 ( — )


(B): ST30031000 ( — )

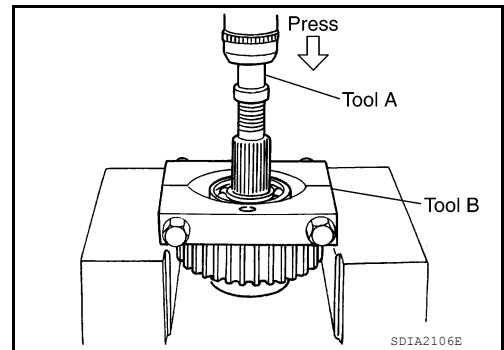


5. Remove the front drive shaft rear bearing using Tools.

**Tool number** (A): ST33052000 ( — )

(B): ST30031000 ( — )

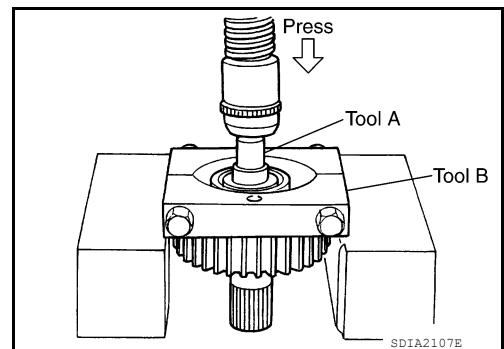

6. Remove the neutral-4LO and ATP switches.

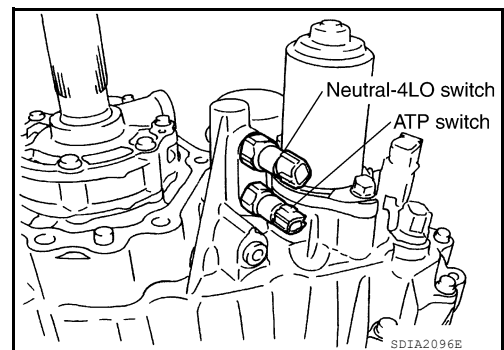


A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TRANSFER ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]

7. Remove the bolts (←) and main oil pump cover.

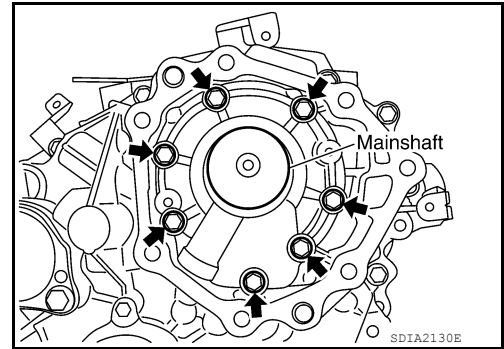


8. Remove the outer gear, inner gear and main oil pump housing from the center case.

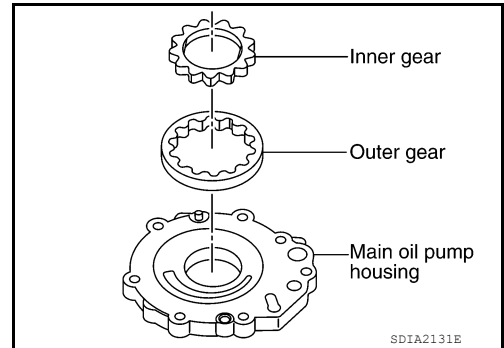


9. Remove the seal ring from the main oil pump cover.

**CAUTION:**

**Do not reuse seal ring**

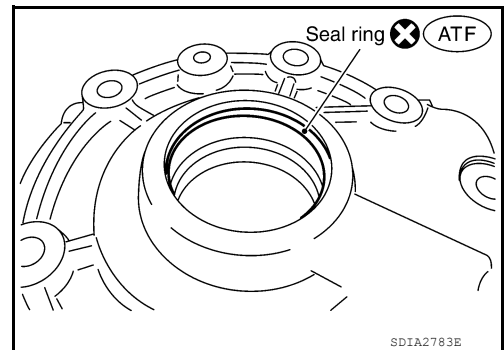


10. Remove the stem bleeder from the bleed hole.

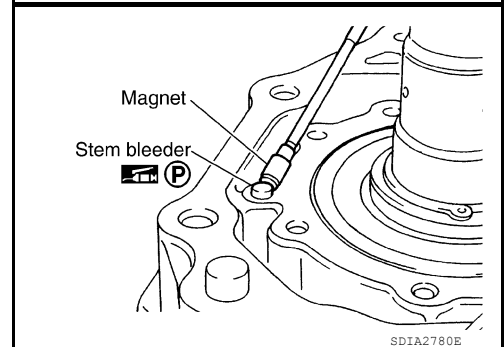

11. Remove the snap ring and washer holder from the mainshaft.

**CAUTION:**

**Do not reuse seal ring**

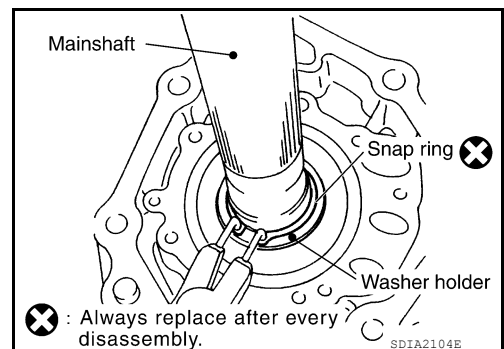


# TRANSFER ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]


12. Remove the C-rings from the mainshaft using suitable tool.

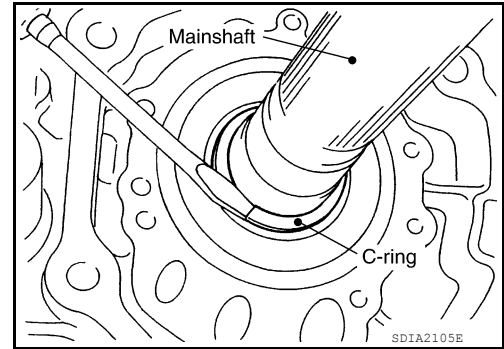


13. Set the center case on the press stand. Remove the mainshaft from the center case.

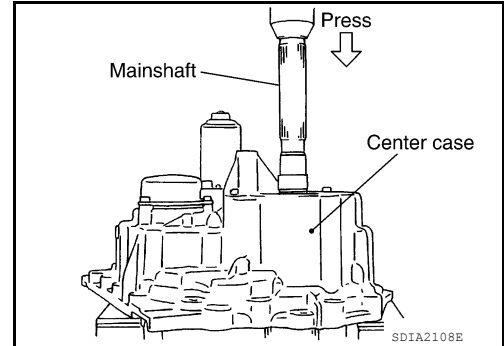

14. Remove the snap ring from the mainshaft using suitable tool.

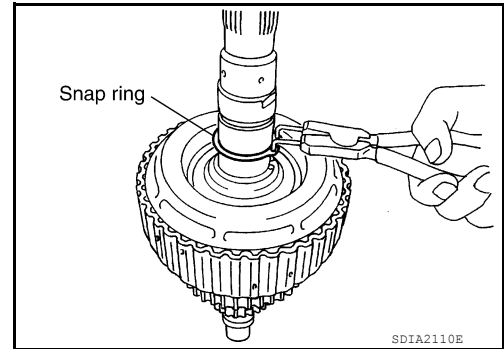


15. Remove the thrust needle bearing from the press flange.

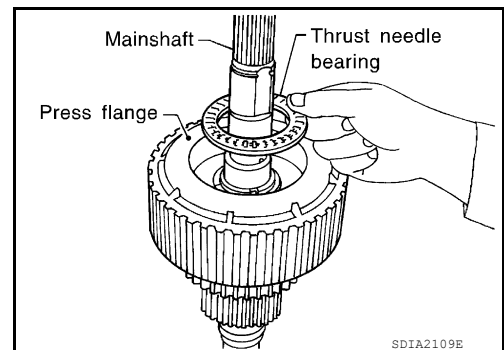

16. Press the press flange until the snap ring is out of place using Tools.

- Tool number**
- (A): ST22452000 (J-34335)
  - (B): ST30911000 ( — )
  - (C): KV31103300 ( — )

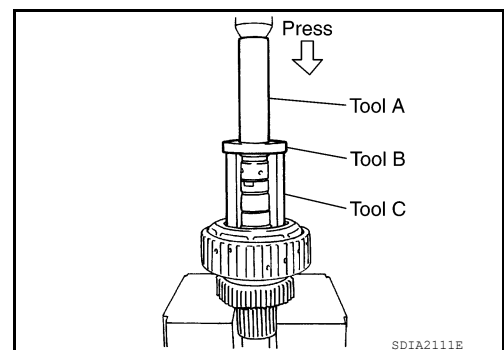

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TRANSFER ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]


17. Remove the snap ring from the mainshaft using suitable tool.

**CAUTION:**


**Do not reuse snap ring**

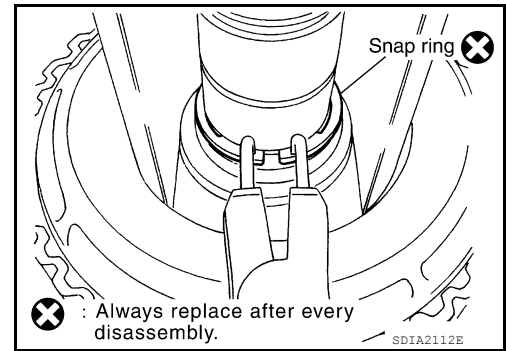


18. Remove the press flange from the mainshaft.

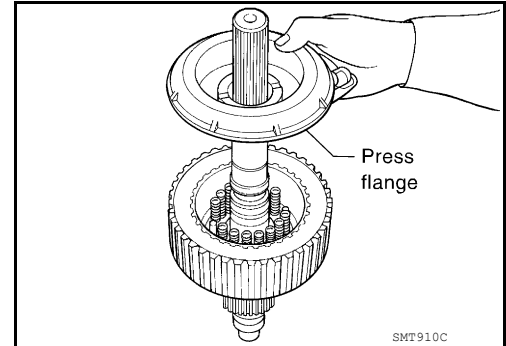


19. Remove the return spring assembly from the clutch hub.

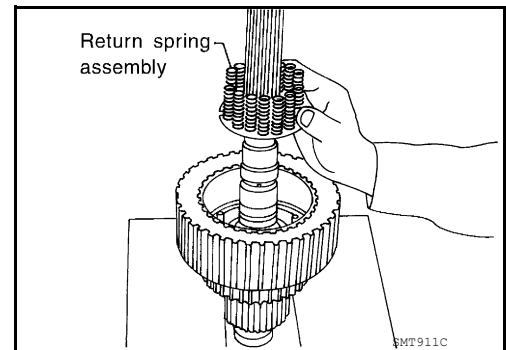

20. Remove each plate from the clutch drum.

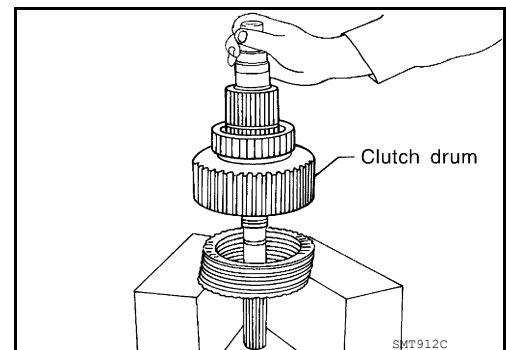

21. Remove the snap ring from the mainshaft.

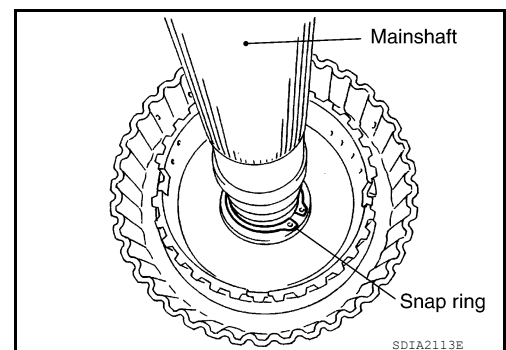




# TRANSFER ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]


- 22. Remove the mainshaft from the clutch drum and clutch hub using suitable tool.
- 23. Remove the needle bearing and spacer from the mainshaft.

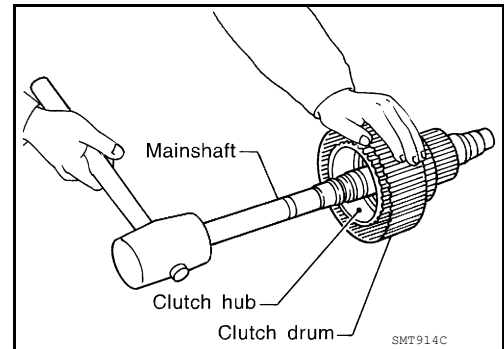


- 24. Remove the snap ring from the clutch hub using suitable tool.  
**CAUTION:**  
Do not reuse snap ring.

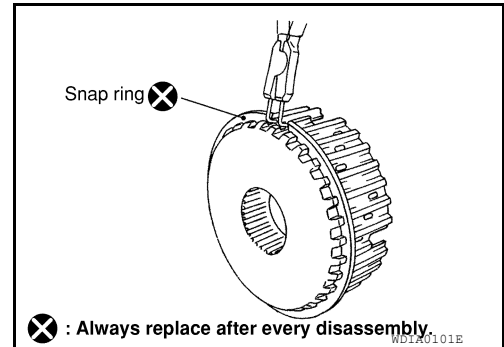


- 25. Remove the oil pressure check plug from the oil pressure check port.  
**CAUTION:**  
Do not reuse oil pressure check plug.

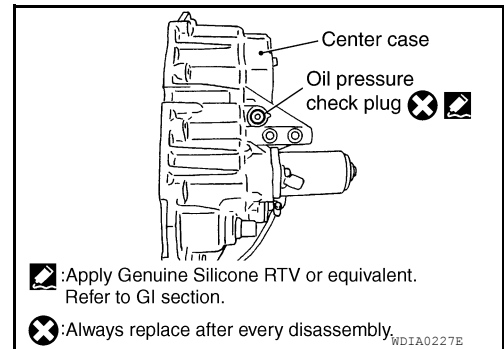

- 26. Apply air gradually from the oil pressure check port, and remove the clutch piston assembly from the center case.

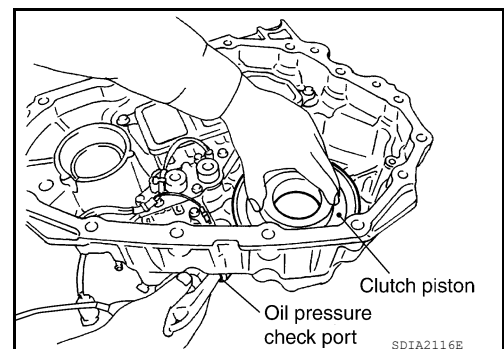

- 27. Remove the thrust needle bearing race from the clutch piston by hooking a edge into 3 notches of the thrust needle bearing race using suitable tool.  
**CAUTION:**  
Do not damage clutch piston or thrust needle bearing race.

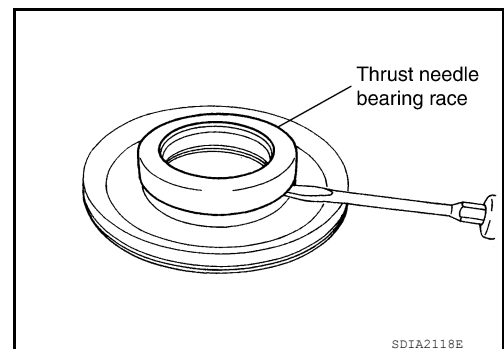

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]


28. Remove the two D-rings from the clutch piston.

**CAUTION:**  
Do not reuse D-rings.

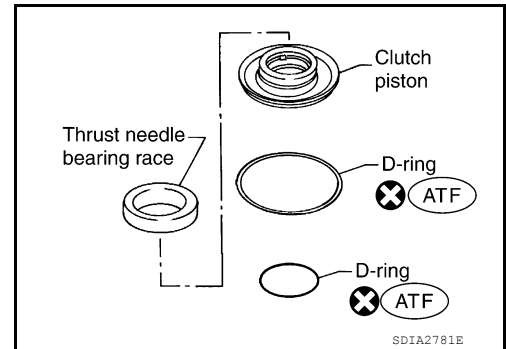


29. Remove the mainshaft rear bearing from the center case using Tool.

**Tool number** : KV38100300 (J-25523)

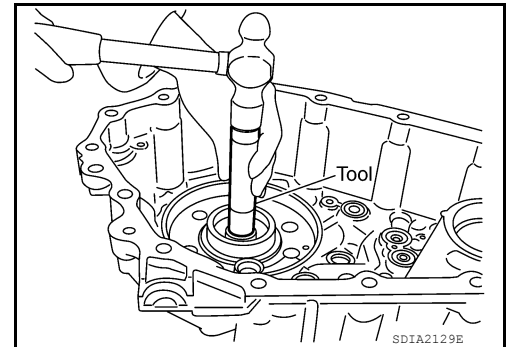


30. Remove the two bolts (←) and oil strainer.

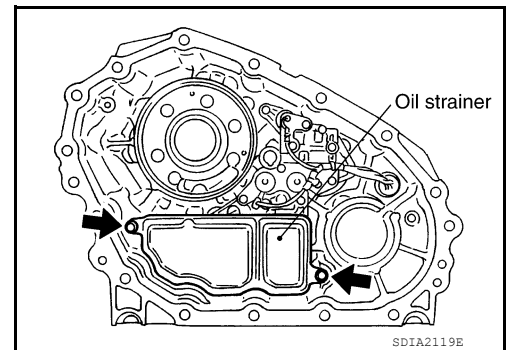


31. Remove the two O-rings from the oil strainer.

**CAUTION:**  
Do not reuse O-rings.

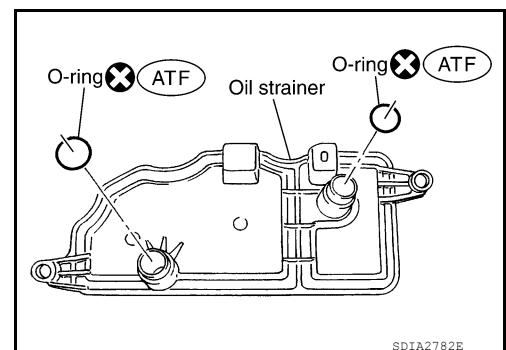

32. Remove the snap ring. Then push the transfer terminal cord assembly into the center case to remove the control valve assembly.

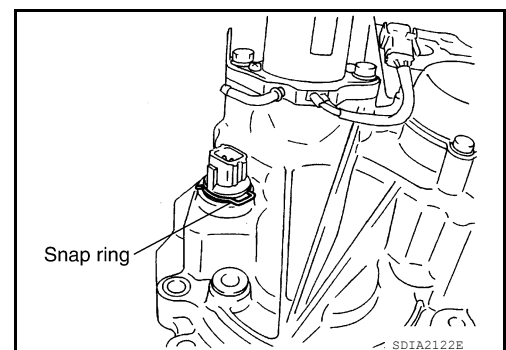

# TRANSFER ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]

- 33. Remove the control valve assembly bolts (←).
- 34. Remove the control valve assembly.

**CAUTION:**


- Do not reuse any part that has been dropped or damaged.
- Make sure valve is assembled in the proper direction.
- Do not use a magnet because residual magnetism stays during disassembly.

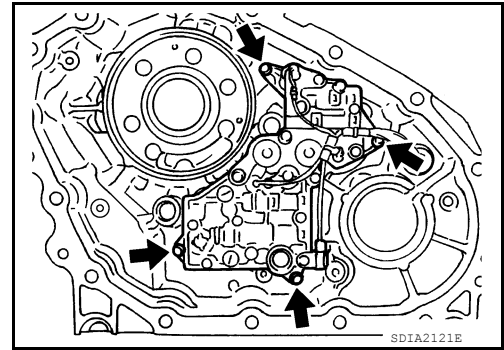

- 35. Remove the lip seals from the center case.

**CAUTION:**


There are two kinds of lip seals (lip seal of large inner diameter: 5 pieces, lip seal of small inner diameter: 2 pieces). Confirm the position before disassembly.

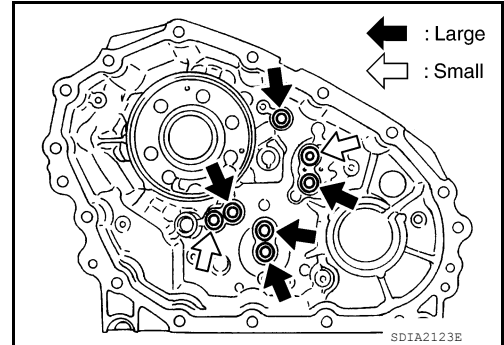


- 36. Remove the transfer motor bolts (←) and motor from the center case. Then remove the O-ring from the transfer motor.

**CAUTION:**


Do not reuse O-ring.

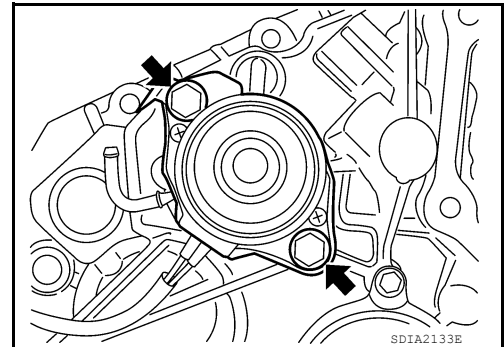

- 37. Remove the sub oil pump cover bolts (←).

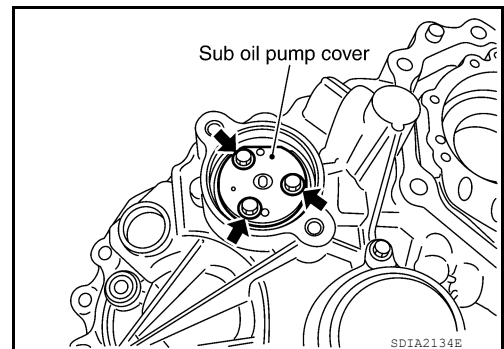

- 38. Thread two bolts (M4 x 0.8) into the holes of sub oil pump cover as shown, and pull out to remove the sub oil pump assembly.

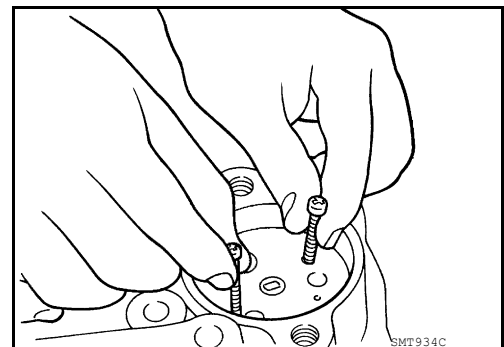


A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]


39. Remove the outer gear and inner gear from the sub oil pump housing.

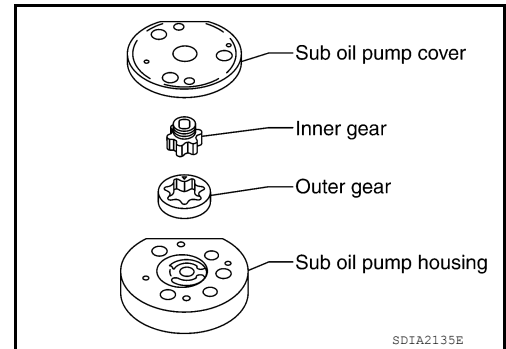

40. Remove the oil filter bolts (←) and oil filter.

**CAUTION:**


- Do not damage center case and oil filter.
- Loosen bolts and detach oil filter evenly.

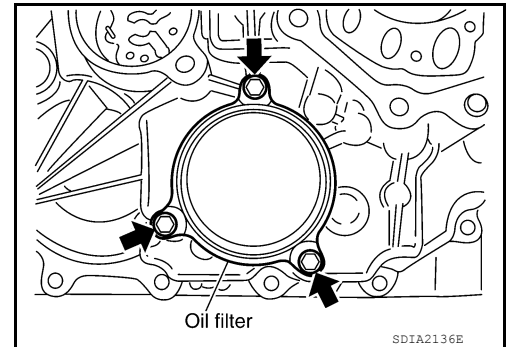

41. Remove the O-rings (1) from the oil filter (2).

**CAUTION:**

**Do not reuse O-rings.**

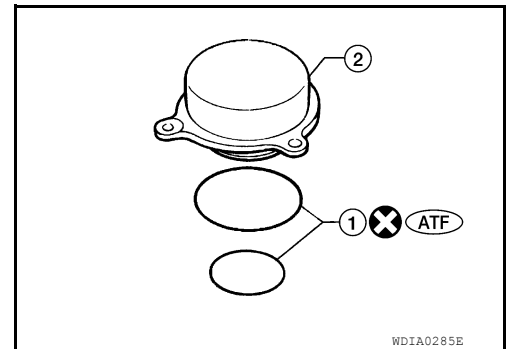


42. Remove the oil filter stud from the oil filter.

43. Remove the O-ring from the oil filter stud.

**CAUTION:**

**Do not reuse O-ring.**

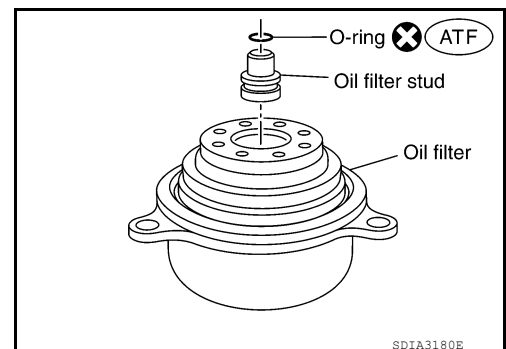

44. Disassemble the control valve assembly with the following procedure.

**CAUTION:**


- Do not reuse any part that has been dropped or damaged.
- Make sure valve is assembled in the proper direction.
- Do not use a magnet because residual magnetism stays during disassembly.

# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]

a. Remove all the bolts except for the two shown (←).

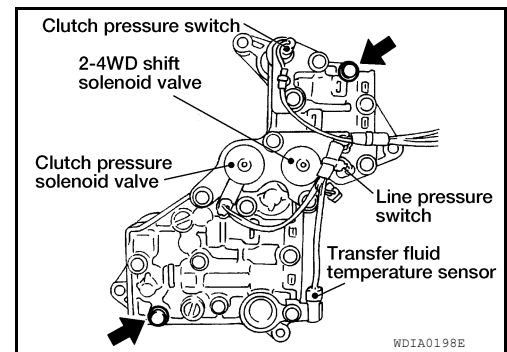


b. Remove the following from the control valve assembly:

- Clutch pressure solenoid valve
- Clutch pressure switch
- 2-4WD shift solenoid valve
- Line pressure switch
- Transfer fluid temperature sensor


c. Remove the O-rings from each solenoid valve, switch and terminal body.

**CAUTION:**  
Do not reuse O-rings.

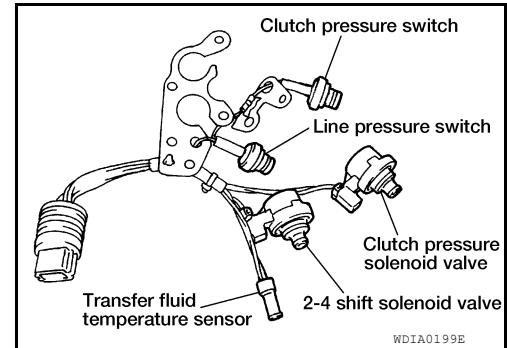


d. Place the control valve with the lower body facing up. Remove the two bolts, and then remove the lower body and separator plate from the upper body.


- CAUTION:**
- Do not drop reverse balls or relief balls. Detach lower body carefully.
  - Do not reuse separator plate.

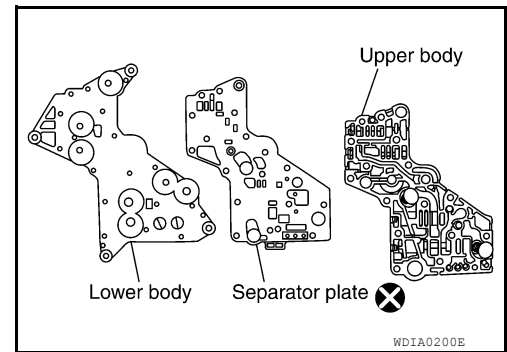

e. Confirm location of the reverse balls, relief balls, relief springs, accumulator pistons and valve springs before disassembly as shown, then remove them.

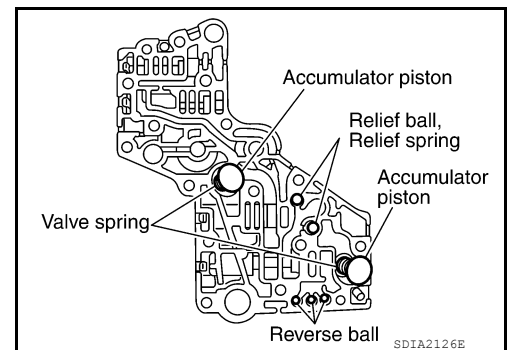

f. Remove each retainer plate (1), plug (2), control valve (3) and spring (4) from the upper body (5).

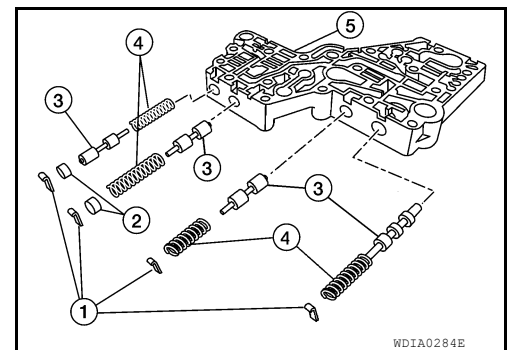

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TRANSFER ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]

## INSPECTION AFTER DISASSEMBLY


### Shift Rod Components

- Check the working face of the shift rod and fork for wear, partial wear, bending and other abnormality. If any is found, replace with a new one.

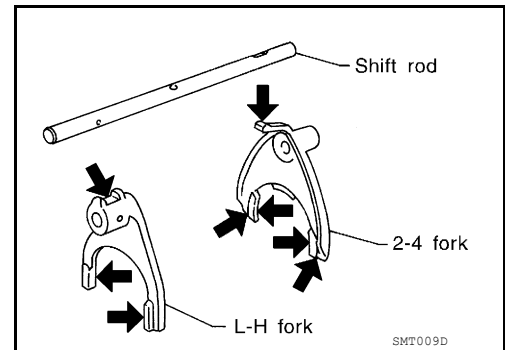

- Measure the clearance between the shift fork and sleeve. If it is out of specification, replace it with a new one.

**Specification : Less than 0.36 mm (0.0142 in)**

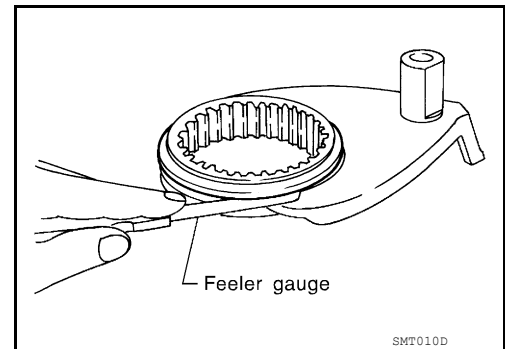


### Planetary Carrier

- Measure the end play of each pinion gear. If it is out of specification, replace the planetary carrier assembly with a new one.


**Pinion gear end play : 0.1 - 0.7 mm (0.004 - 0.028 in)**

- Check the working face of each gear and bearing for damage, burrs, partial wear, dents and other abnormality. If any is found, replace the planetary carrier assembly with a new one.

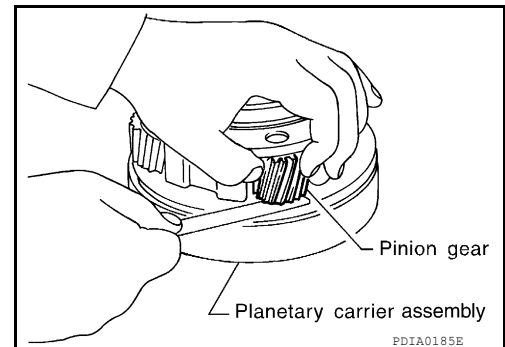

### Sun Gear

- Check if the oil passage of the sun gear assembly is clogged. For this, try to pass a 3.6 mm (0.142 in) dia. pin through the oil passage as shown.
- Check the sliding and contact surface of each gear and bearing for damage, burrs, partial wear, dents, and other abnormality. If any is found, replace the sun gear assembly with a new one.

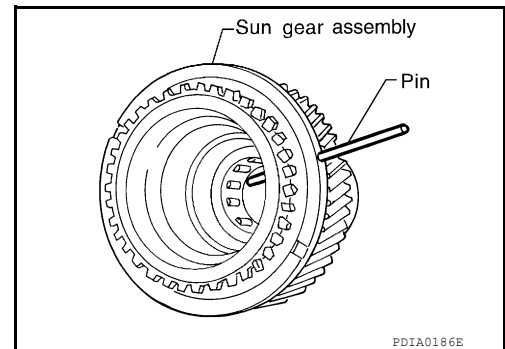


### Internal Gear

# TRANSFER ASSEMBLY

[ATX14B]


## < UNIT DISASSEMBLY AND ASSEMBLY >

- Check the internal gear teeth for damage, partial wear, dents and other abnormality. If any is found, replace the internal gear with a new one.

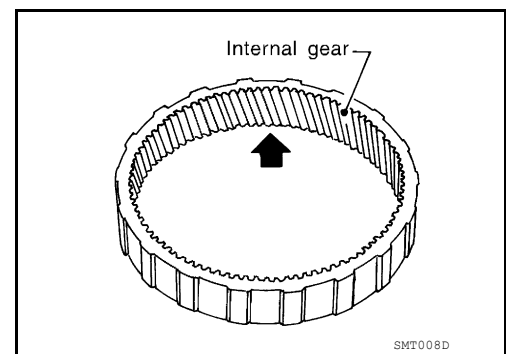


### Gears and Drive Chain

- Check the gear faces and shaft for wear, cracks, damage, and seizure.
- Check the surfaces which contact the sun gear, clutch drum, clutch hub, press flange, clutch piston and each bearing for damage, peel, partial wear, dents, bending, or other abnormal damage. If any is found, replace with a new one.

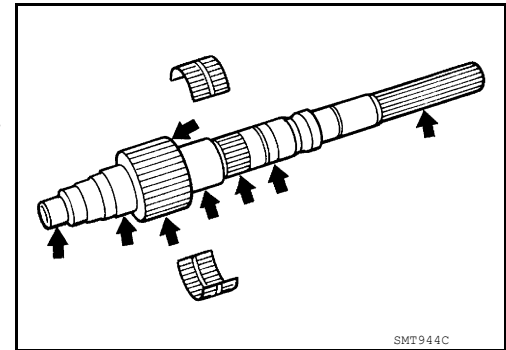

### Bearing


- Make sure the bearings roll freely and are free from noise, pitting and cracks.

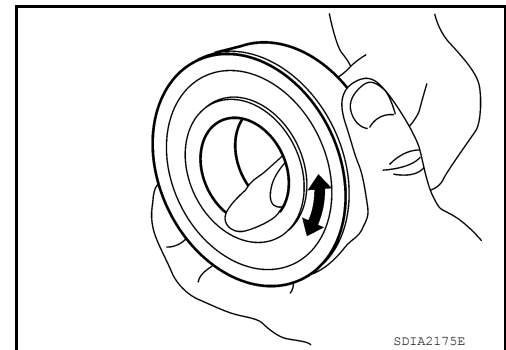

### Main Oil Pump

1. Check the inner and outer circumference, tooth face, and side-face of the inner and outer gears for damage or abnormal wear.
2. Measure the side clearance between the main oil pump housing edge and the inner and outer gears.
3. Make sure the side clearance is within specification. If the measurement is out of specification, replace the inner and outer gears with new ones as a set. Refer to [DLN-141, "Disassembly and Assembly"](#).

**Specification : 0.015 - 0.035 mm (0.0006 - 0.0014 in)**

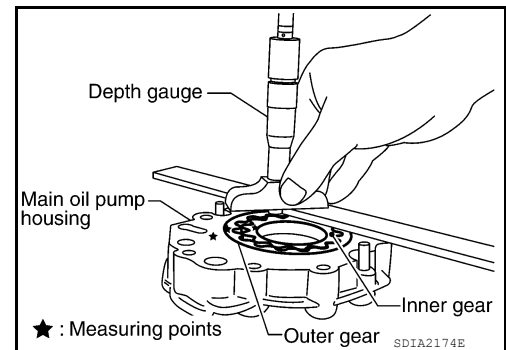

### Sub-oil Pump

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


# TRANSFER ASSEMBLY

[ATX14B]

## < UNIT DISASSEMBLY AND ASSEMBLY >


1. Check the inner and outer circumference, tooth face, and side-face of the inner and outer gears for damage or abnormal wear.
2. Measure the side clearance between the sub oil pump housing edge and the inner and outer gears.
3. Make sure the side clearance is within specification. If the measurement is out of specification, replace the inner and outer gears with new ones as a set. Refer to [DLN-177, "Inspection and Adjustment"](#).

**Specification : 0.015 - 0.035 mm (0.0006 - 0.0014 in)**

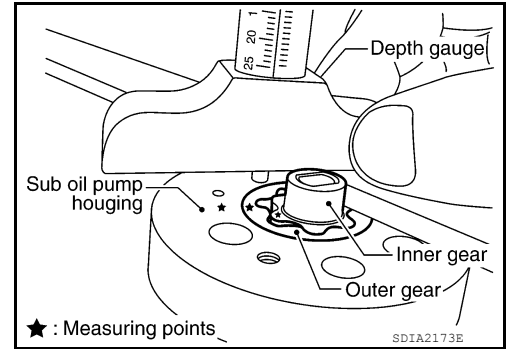

### Control Valve


- Check resistance between the terminals of the clutch pressure solenoid valve, 2-4WD shift solenoid valve, clutch pressure switch, line pressure switch and the transfer fluid temperature sensor. Refer to [DLN-56, "Component Inspection"](#) (clutch pressure solenoid valve), [DLN-59, "Component Inspection"](#) (2-4WD solenoid valve), [DLN-70, "Component Inspection"](#) (clutch pressure switch), [DLN-73, "Component Inspection"](#) (line pressure switch) and [DLN-66, "Component Inspection"](#) (transfer fluid temperature sensor).

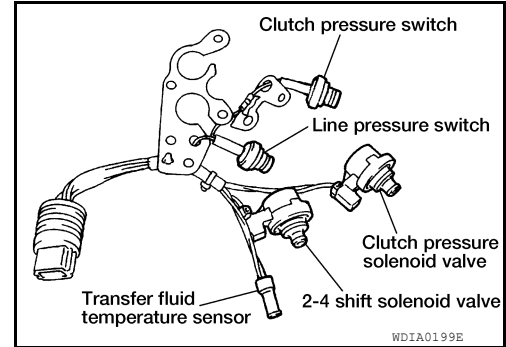

- Check the sliding faces of the control valves and plugs for abnormality. If any is found, replace the control valve assembly with a new one. Refer to [DLN-141, "Disassembly and Assembly"](#).

**CAUTION:**


**Replace control valve body together with clutch return spring as a set.**

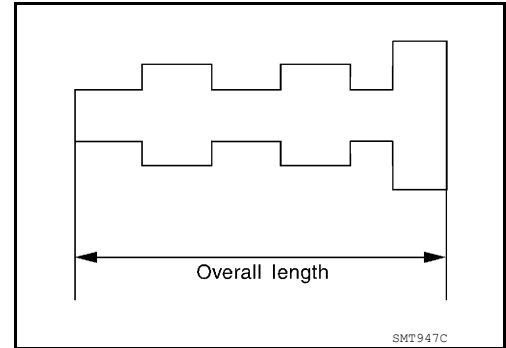

- Check each control valve spring for damage or distortion. Also check its free length, outer diameter and wire diameter. If any damage or fatigue is found, replace the control valve body with a new one. Refer to [DLN-141, "Disassembly and Assembly"](#).

**CAUTION:**

**Replace control valve body together with clutch return spring as a set.**

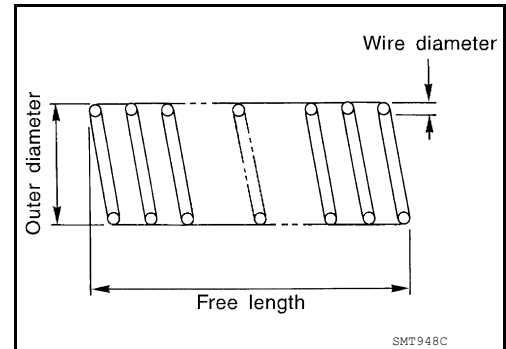

### Clutch



# TRANSFER ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]

- Check the drive plate facings and driven plate for damage, cracks or other abnormality. If any abnormalities are found, replace with a new one.
- Check the thickness of the drive plate facings and driven plate. Refer to [DLN-177, "Inspection and Adjustment"](#).


**CAUTION:**

- Measure facing thickness at 3 points to take an average.
- Check all drive and driven plates.
- Check return spring for damage or deformation.
- Do not remove spring from plate.

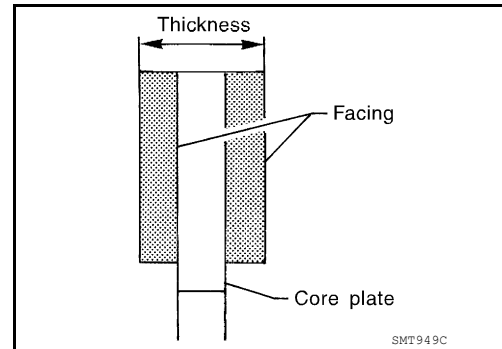

### Return Spring

- Check the stamped mark shown. Then, check that the free lengths, (include thickness of plate) are within specifications. If any abnormality is found, replace with a new return spring assembly of the same stamped number. Refer to [DLN-177, "Inspection and Adjustment"](#).

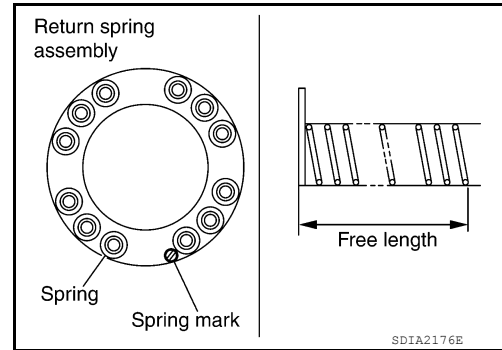

## ASSEMBLY


### Control Valve assembly

1. Assemble the control valve assembly with the following procedure.

**CAUTION:**

- Do not reuse any part that has been dropped or damaged.
- Make sure valve is assembled in the proper direction.
- Do not use a magnet because residual magnetism stays during assembly.


- a. Clean the upper body (5), control valves (3) and springs (4) with cleaning agent, and dry with compressed air.
- b. Dip the control valves in ATF, and apply ATF to the valve-mounting area of the upper body.

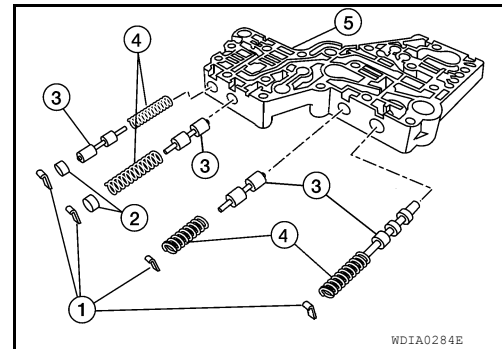

- c. Install each control valve (3), springs (4), and plugs (2) to the upper body (5), and install retainer plates (1) to hold them in place.

**CAUTION:**

- To insert control valves into upper body, place upper body on a level surface in order to prevent flaw or damage.
- Make sure each control valve is smoothly inserted.

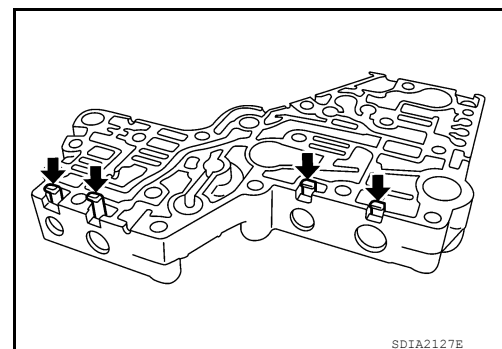

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TRANSFER ASSEMBLY


[ATX14B]

## < UNIT DISASSEMBLY AND ASSEMBLY >

- d. Install the reverse balls, relief balls and relief springs, accumulator pistons and valve springs to the upper body as shown.

**CAUTION:**


**Do not drop reverse balls or relief balls.**

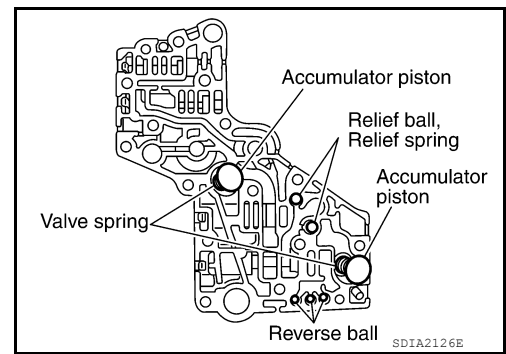

- e. Install the lower body and separator plate to the upper body.

**CAUTION:**

**Do not reuse separator plates.**

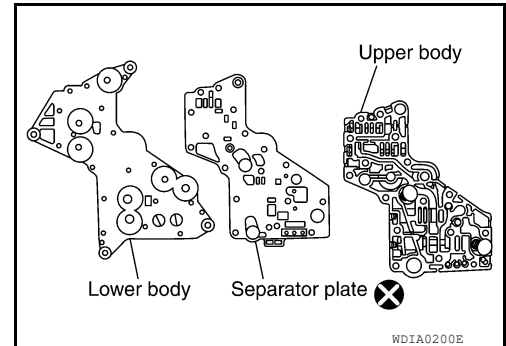

- f. With the lower body down, tighten the two bolts (←) shown.


- g. Apply ATF to the new O-rings, and install them to each solenoid valve, switch and terminal body.

**CAUTION:**

**Do not reuse O-rings.**

- h. Install the following to the control valve assembly:

- Clutch pressure solenoid valve
- Clutch pressure switch
- 2-4WD shift solenoid valve
- Line pressure switch
- Transfer fluid temperature sensor

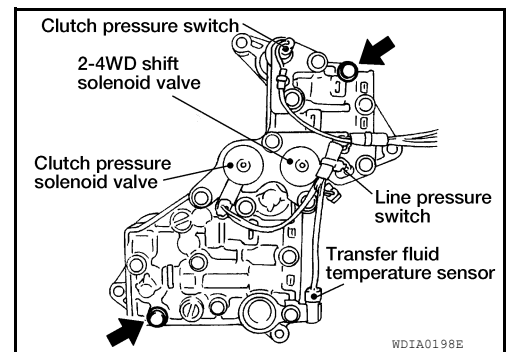


### Center Case

1. Apply ATF to the new O-ring, and install it on the oil filter stud.

**CAUTION:**

**Do not reuse O-ring.**

2. Install the oil filter stud to the oil filter.

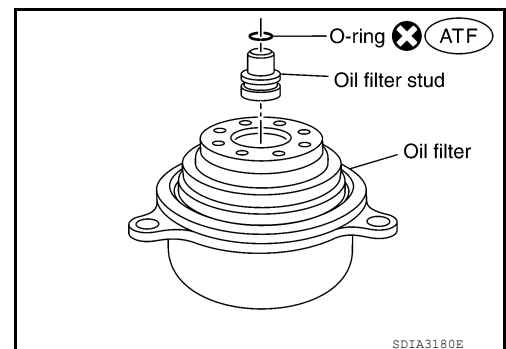

# TRANSFER ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]

3. Apply ATF to the two new O-rings (1), and install them on the oil filter (2).

**CAUTION:**


**Do not reuse O-rings.**

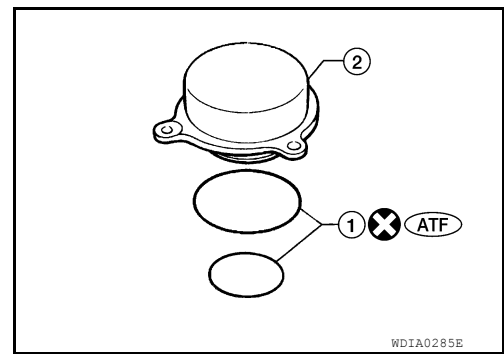


4. Install the oil filter to the center case. Tighten the bolts (←) to the specified torque. Refer to [DLN-125, "Removal and Installation"](#).

**CAUTION:**


- Do not damage oil filter.
- Attach oil filter and tighten bolts evenly.

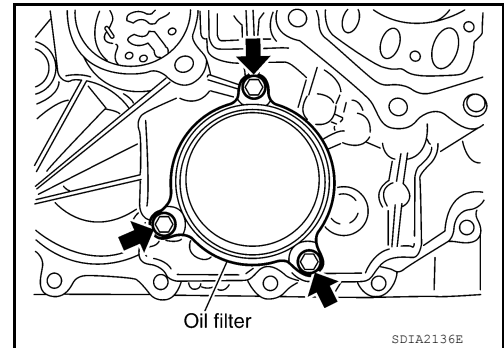

5. Install the outer gear and inner gear into the sub oil pump housing, and measure the side clearance. Refer to [DLN-141, "Disassembly and Assembly"](#).

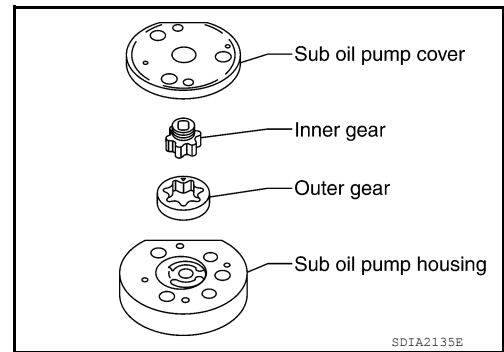

6. Align the dowel pin hole and bolt hole of the sub oil pump assembly with the center case. Install the sub oil pump cover. Then tighten to the specified torque. Refer to [DLN-141, "Disassembly and Assembly"](#).

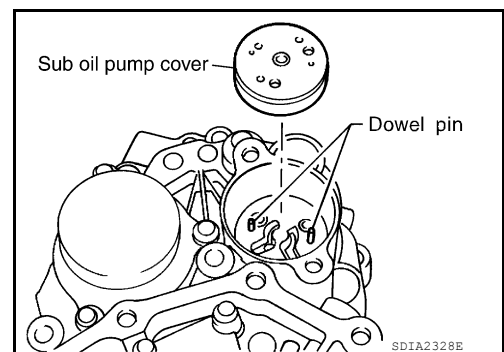

7. Apply ATF to the new O-ring and install it to the transfer motor.


**CAUTION:**

**Do not reuse O-ring.**

8. Fit the double-flat end of the transfer motor shaft into the slot of the sub-oil pump assembly. Then tighten to the specified torque. Refer to [DLN-141, "Disassembly and Assembly"](#).

**CAUTION:**

**Be sure to install connector bracket.**

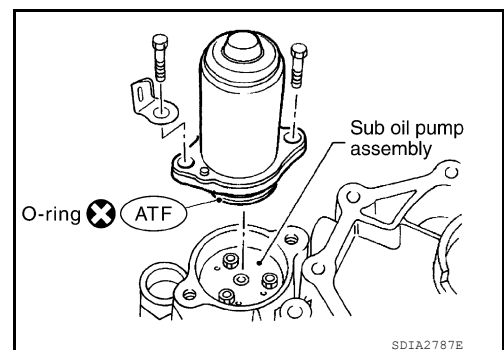

A  
B  
C  
DLN

E  
F  
G

H  
I  
J

K  
L  
M

N  
O  
P

# TRANSFER ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]

9. Apply ATF to the new lip seals, and install them to the center case.

**CAUTION:**


- Do not reuse lip seals.
- There are 2 kinds of lip seals (lip seal of large inner diameter: 5 pieces, lip seal of small inner diameter: 2 pieces). Confirm their position for installation.

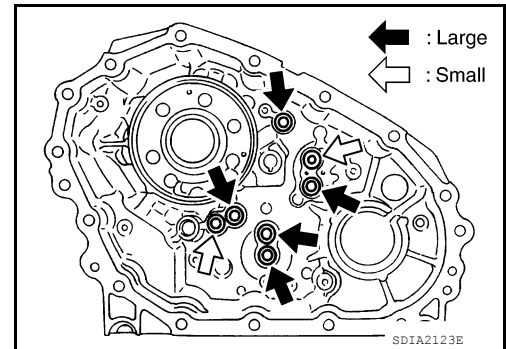


10. Install the control valve assembly to the center case, and tighten to the specified torque. Refer to [DLN-141, "Disassembly and Assembly"](#).

**CAUTION:**

- Do not reuse any part that has been dropped or damaged.
- Make sure valve is assembled in the proper direction.
- Do not use a magnet because residual magnetism stays during assembly.

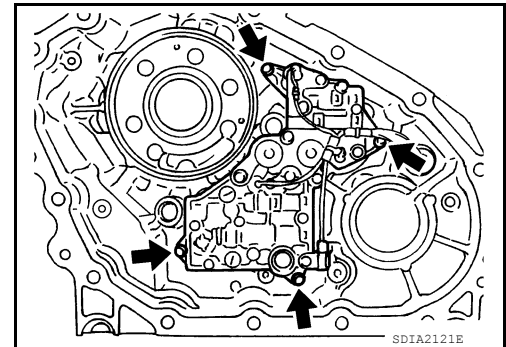

11. Install the transfer terminal cord assembly into the center case, and secure with a snap ring.

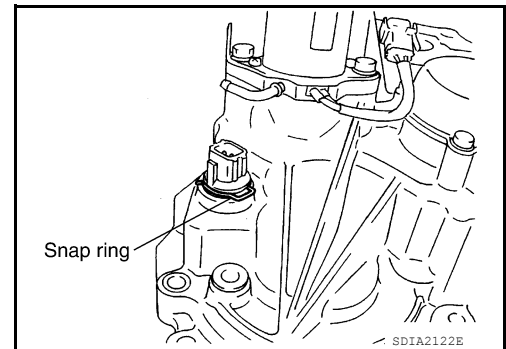


12. Apply ATF to the new O-rings, and install them on the oil strainer.


**CAUTION:**

**Do not reuse O-rings.**

13. Install the oil strainer to the control valve assembly.

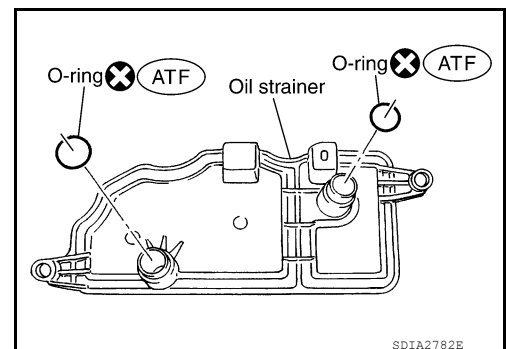

14. Tighten the bolts (←) to the specified torque. Refer to [DLN-141, "Disassembly and Assembly"](#).

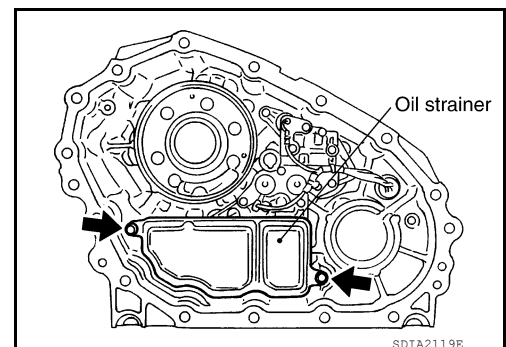


# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[ATX14B]

15. Apply ATF to the new D-rings, and install them to the clutch piston.

**CAUTION:**  
Do not reuse D-rings.

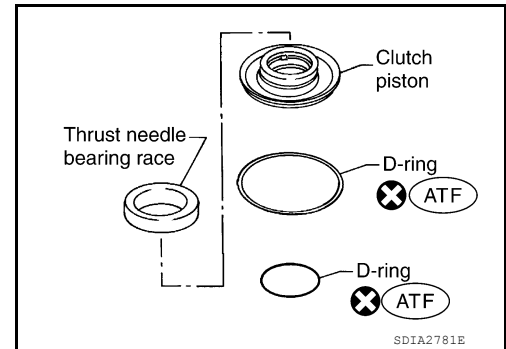


16. Install the thrust needle bearing race to the clutch piston.

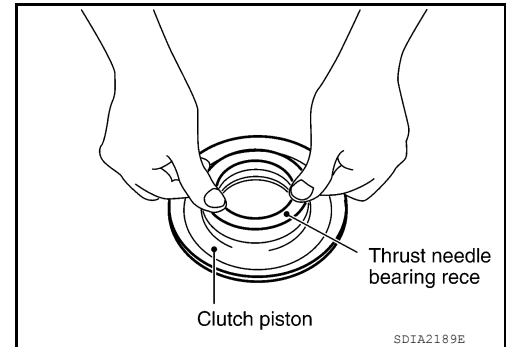

17. Install the clutch piston to the center case as shown.

**CAUTION:**  
Install so the fitting protrusion of clutch piston aligns with the dent of center case.

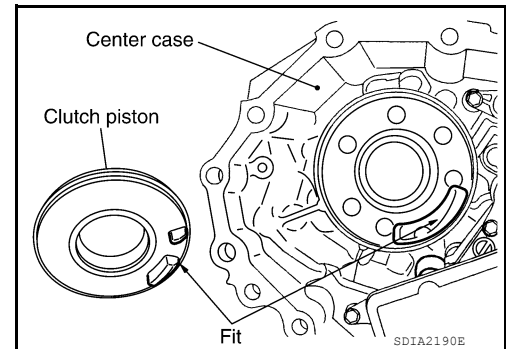


18. Remove all the sealant from the oil pressure check port and inside the center case.

**CAUTION:**  
Remove old sealant adhering to mating surfaces. Also remove any moisture, oil, or foreign material adhering to application and mating surfaces.

19. Thread the new oil pressure check plug in 1 or 2 pitches and apply sealant to the oil pressure check plug threads. Tighten to the specified torque. Refer to [DLN-141, "Disassembly and Assembly"](#).

• Use Genuine Silicone RTV or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).

**CAUTION:**  
Do not reuse oil pressure check plug.

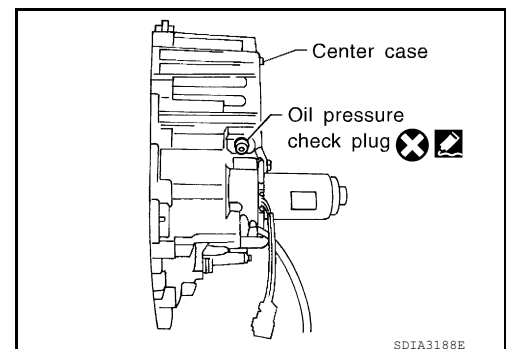

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TRANSFER ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]


20. Install the new snap ring to the clutch hub using suitable tool.

**CAUTION:**

**Do not reuse snap ring.**

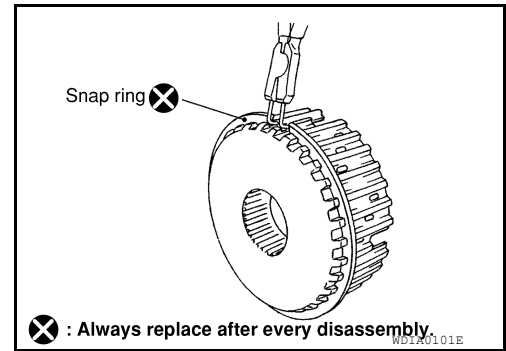


21. Apply petroleum jelly to the needle bearing, and install the needle bearing, spacer, clutch drum and clutch hub to the mainshaft.

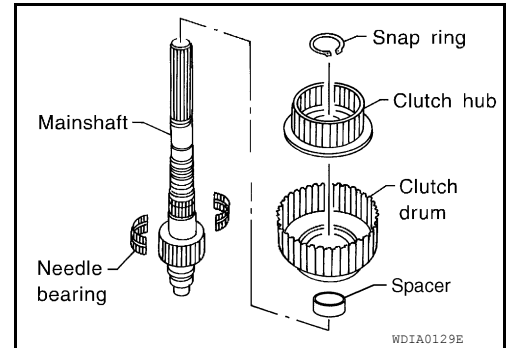


22. Install the new snap ring to the mainshaft.

**CAUTION:**


**Do not reuse snap rings.**

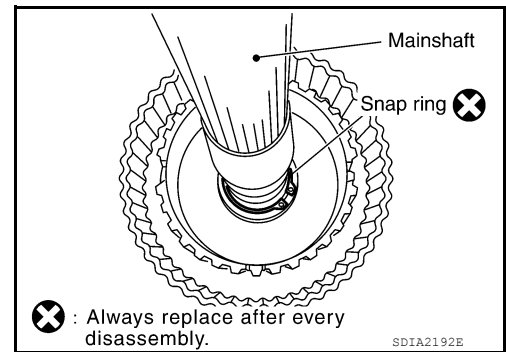

23. Apply ATF each plate, then install them into the clutch drum as shown.

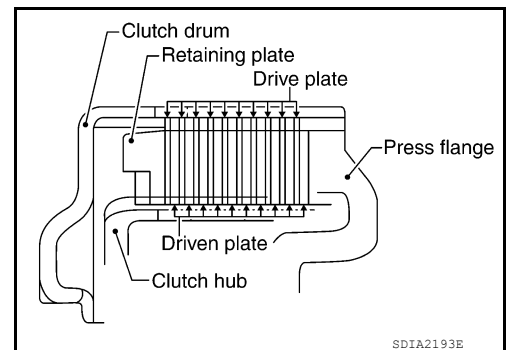

24. Install the return spring assembly into the clutch hub.

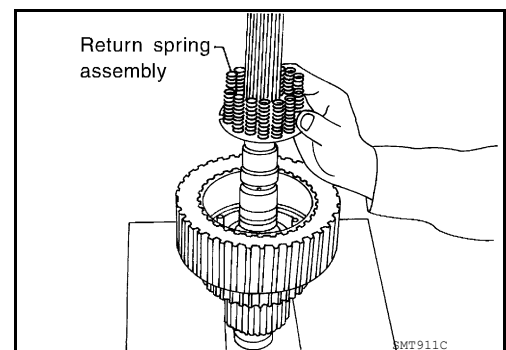


# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]


25. Install the press flange by aligning the notches to the clutch hub as shown.

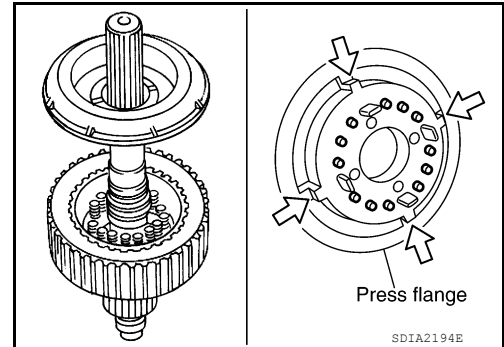

26. Press the press flange to install the new snap ring into snap ring groove on mainshaft using Tools.


**Tool number** (A): ST22452000 (J-34335)  
(B): ST30911000 ( — )  
(C): KV31103300 ( — )

**CAUTION:**  
Do not reuse snap ring.

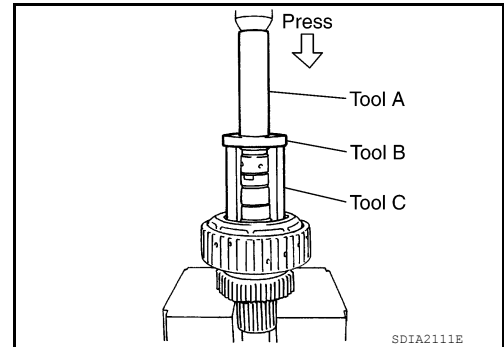


27. Install the new snap ring to the mainshaft using suitable tool.

**CAUTION:**  
Do not reuse snap ring.

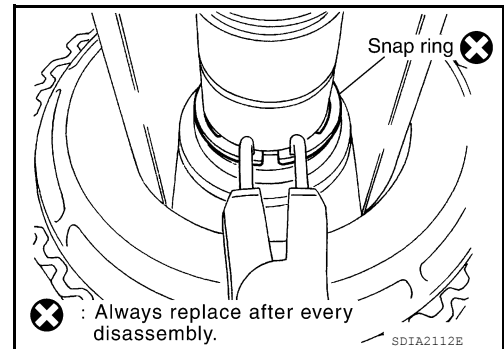


28. Apply ATF to the thrust needle bearing and install it on the press flange.

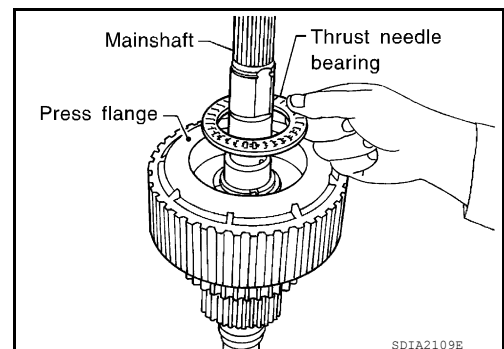

29. Install the new snap ring to the main shaft.

**CAUTION:**  
Do not reuse snap ring.

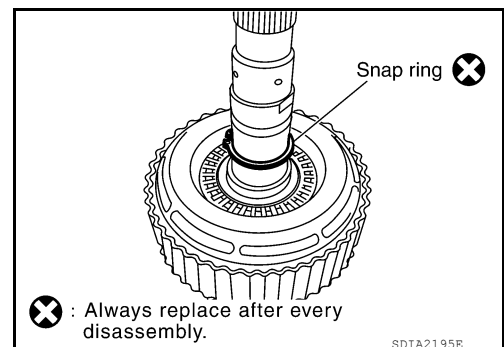


# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]

30. Install the mainshaft rear bearing to the center case using Tool.

**Tool number** : **ST15310000 (J-25640-B)**

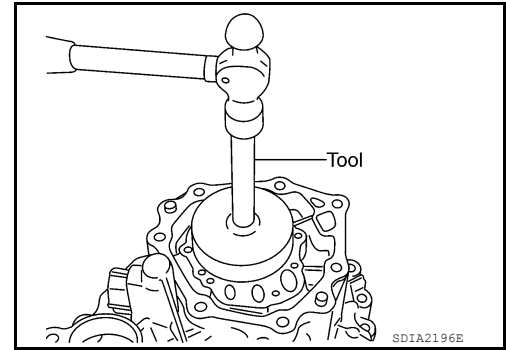


31. Install the mainshaft assembly using a press.


- Press the mainshaft into the center case using Tools.

**Tool number** (A): **ST30911000 ( — )**

(B): **ST33052000 ( — )**

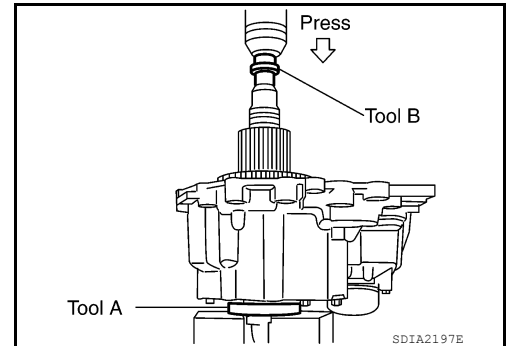


32. Install the C-rings to the mainshaft.

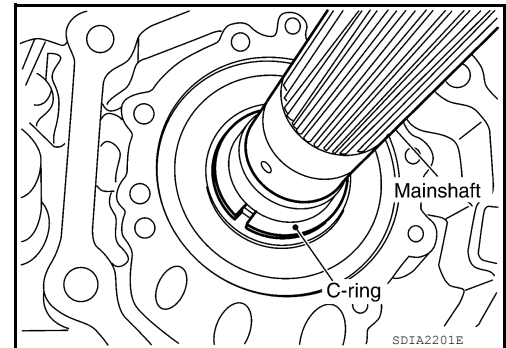


33. Set the washer holder on the mainshaft, and secure it with a new snap ring.

**CAUTION:**

**Do not reuse snap ring.**

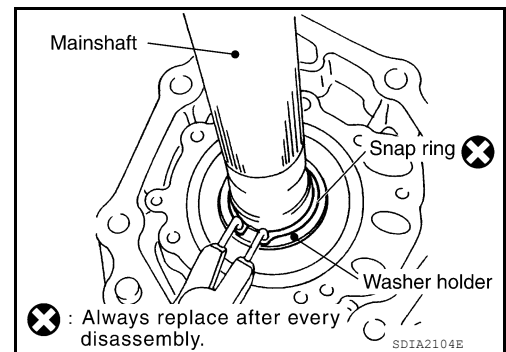

34. Apply petroleum jelly to the stem bleeder and install it to the center case.

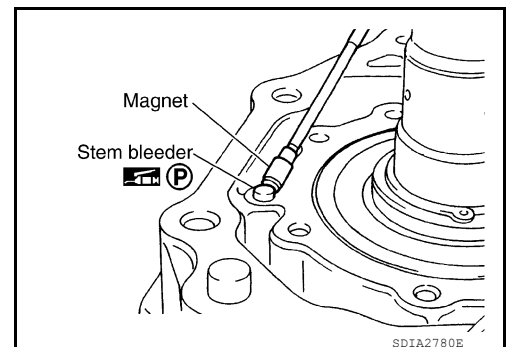



# TRANSFER ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]


35. Apply ATF to the new seal ring and install it to the main oil pump cover.

**CAUTION:**


**Do not reuse seal ring.**

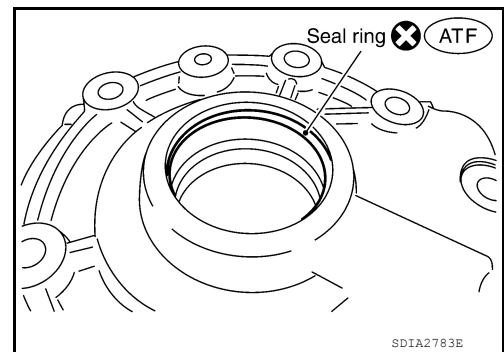


36. Install the inner gear and outer gear in the main oil pump housing. Then, measure the side clearance. Refer to [DLN-177, "Inspection and Adjustment"](#).

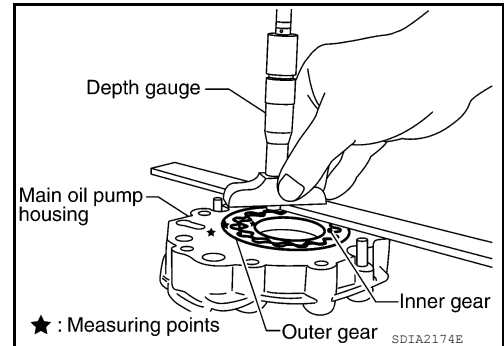

37. Install the main oil pump housing, outer gear and inner gear to the center case.

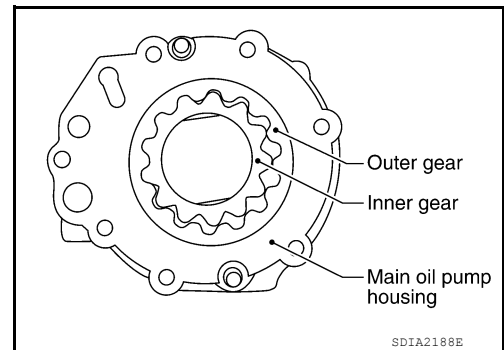

38. Install the main oil pump cover to the center case, and tighten to the specified torque. Refer to [DLN-141, "Disassembly and Assembly"](#).

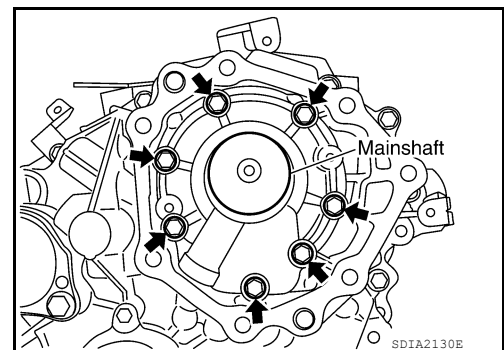


39. Remove all the sealant from the switch location area and inside the center case.

**CAUTION:**

**Remove old sealant adhering to mounting surfaces. Also remove any moisture, oil, or foreign material adhering to application and mounting surfaces.**

40. Thread the ATP switch and neutral-4LO switch in one to two pitches and apply sealant to the threads of the switches. Tighten to the specified torque. Refer to [DLN-141, "Disassembly and Assembly"](#).

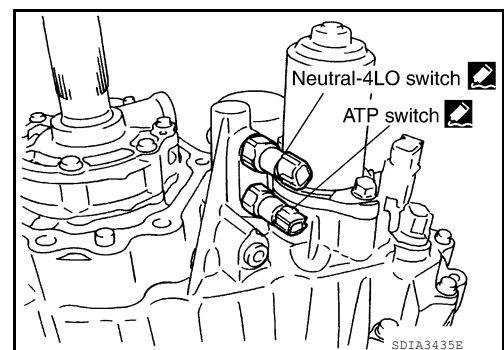

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]


- Use Genuine Silicone RTV or equivalent. Refer to [GI-21. "Recommended Chemical Products and Sealants"](#).

**NOTE:**

- Neutral-4LO switch harness connector is gray.
- ATP switch harness connector is black.


41. Install the front drive shaft rear bearing using Tools.

**Tool number** (A): KV40100621 (J-25273)  
(B): ST30032000 (J-26010-01)

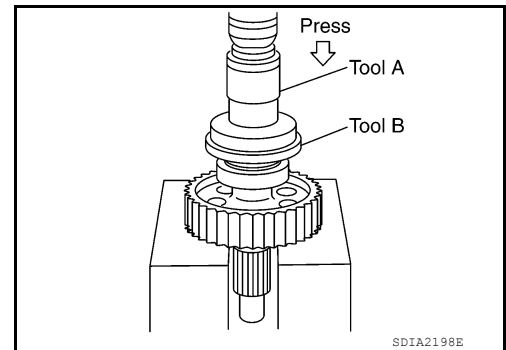

42. Install the front drive shaft to the front bearing using Tools.


**Tool number** (A): KV40100621 (J-25273)  
(B): ST30032000 (J-26010-01)

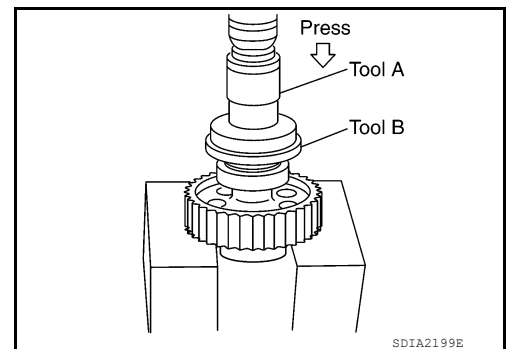

43. Install the drive chain to the front drive shaft and clutch drum.

**CAUTION:**

**Install drive chain by aligning identification marks to the rear as shown.**

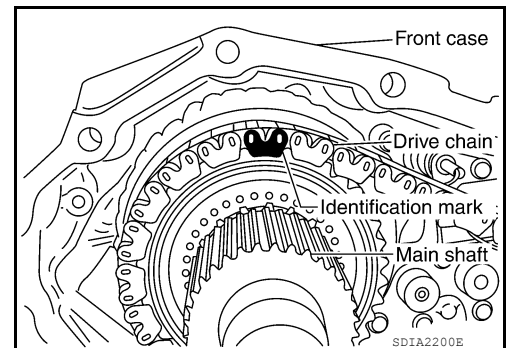


44. Tap the front drive shaft while keeping it upright and press-fit the front drive shaft rear bearing.

**CAUTION:**

**Do not tap drive chain.**

45. Install the front case assembly. Refer to [DLN-141. "Disassembly and Assembly"](#).

46. Install the rear case assembly. Refer to [DLN-141. "Disassembly and Assembly"](#).

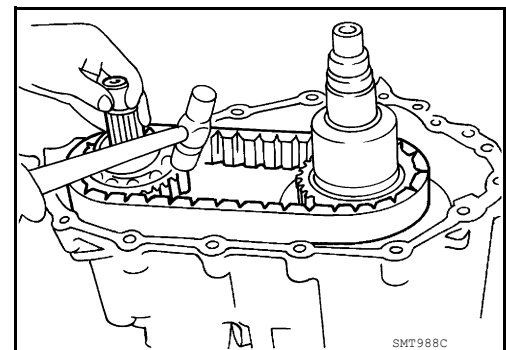

Front Case


# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]


1. Install the carrier bearing to the sun gear using Tools.

**Tool number** (A): ST30911000 ( — )  
 (B): KV31103300 ( — )

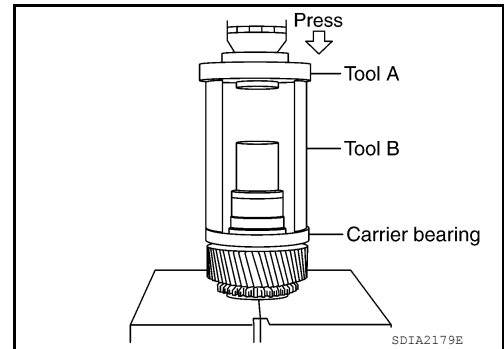

2. Install the new snap ring to the sun gear assembly using suitable tool.

**CAUTION:**  
 Do not reuse snap ring.

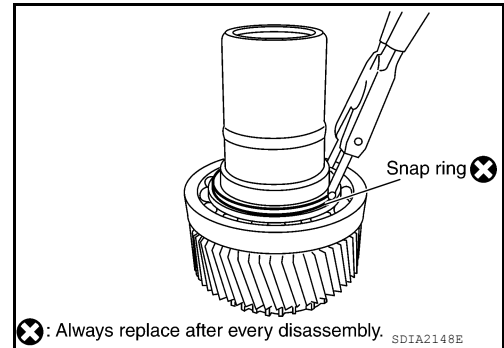


3. Apply ATF to the circumference of the new metal bushing and install it to the sun gear assembly using Tool.

**Tool number** : ST35300000 ( — )  
**Dimension (A)** : 7.7 - 8.3 mm (0.303 - 0.327 in)

**CAUTION:**

- Do not reuse metal bushing.
- Apply ATF to metal bushing before installing.

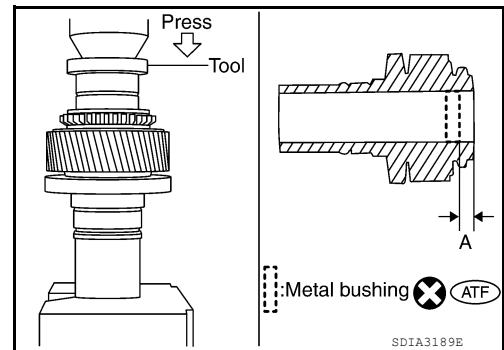


4. Apply ATF to the new needle bearing and install it to the sun gear assembly using Tool.


**Tool number** : ST33220000 ( — )  
**Dimension (B)** : 62.5 - 63.1 mm (2.461 - 2.484 in)

**CAUTION:**

- Do not reuse needle bearing.
- Apply ATF to needle bearing before installing.

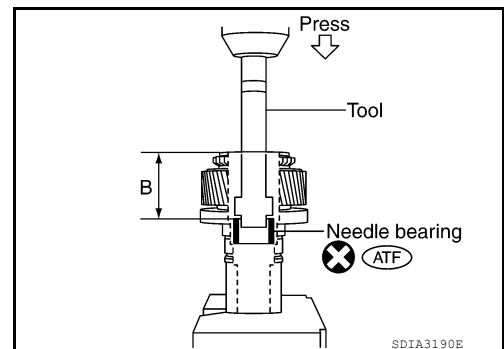

5. Install the sun gear assembly to the planetary carrier assembly.

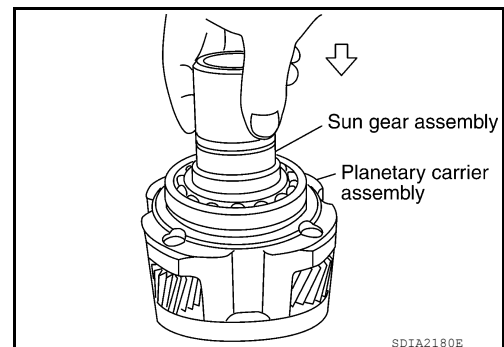

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]


6. Install the new snap ring to the planetary carrier assembly.

**CAUTION:**  
Do not reuse snap ring.

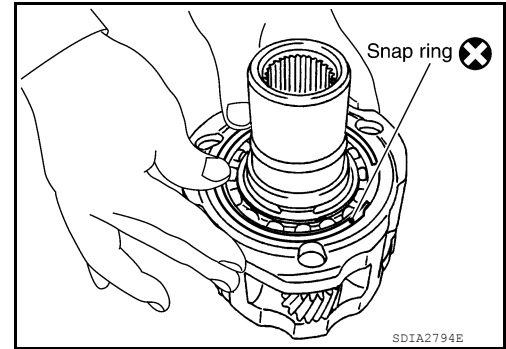


7. Set the input bearing into the front case and install using Tool.

**Tool number** : ST30720000 (J-25405)

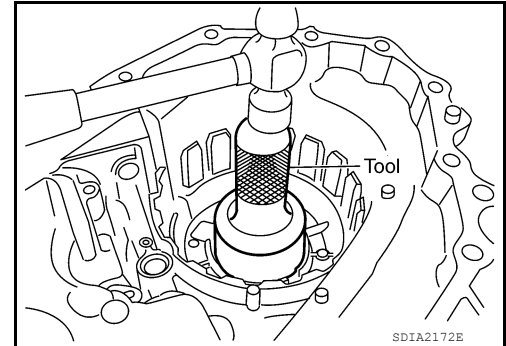


8. Install the new snap ring into the front case.

**CAUTION:**  
Do not reuse snap ring.

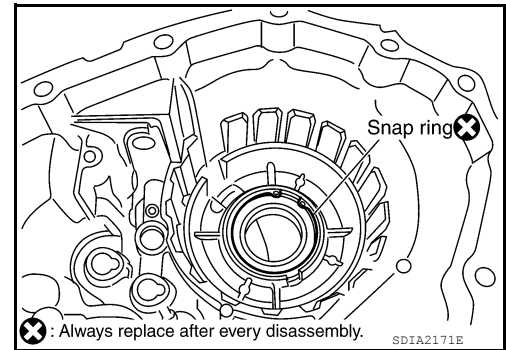

9. Install the internal gear with its groove facing the snap ring into the front case. Then secure it with the new snap ring.

**CAUTION:**  
Do not reuse snap ring.

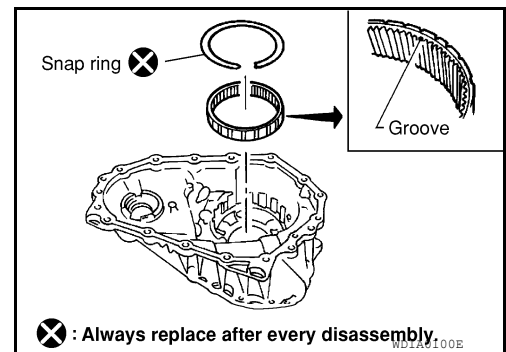


10. Install the new front oil seal until it is seated flush with the end face of the front case using Tool.

**Tool number** : KV38100500 ( — )

**CAUTION:**

- Do not reuse oil seal.
- Apply petroleum jelly to oil seal lip before installing.

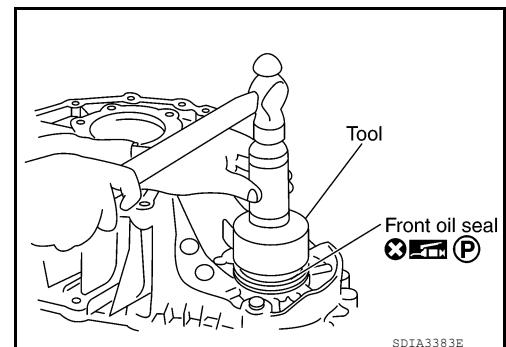


# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]


11. Install the planetary carrier assembly and sun gear assembly to the front case using Tool.

**Tool number** : ST33200000 (J-26082)

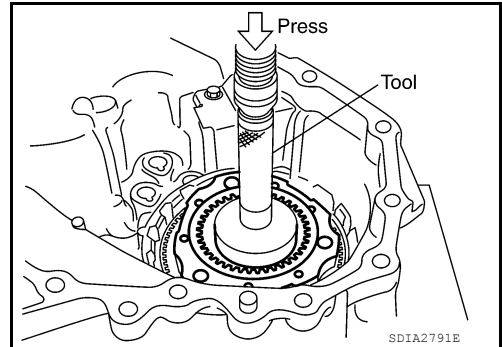

12. Install the new snap ring to the sun gear.

**CAUTION:**  
Do not reuse snap ring.

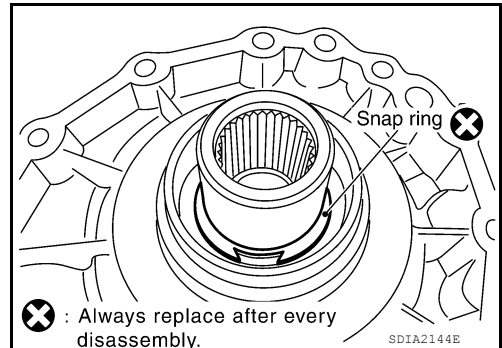


13. Apply petroleum jelly to the circumference of the new oil seal, and install it to the front case using Tools.

**Tool number** (A): ST30720000 (J-25405)  
(B): ST33200000 (J-26082)


**Dimension** : 4.0 - 4.6 mm (0.157 - 0.181 mm)

**CAUTION:**  
• Do not reuse oil seal.  
• Apply petroleum jelly to oil seal.

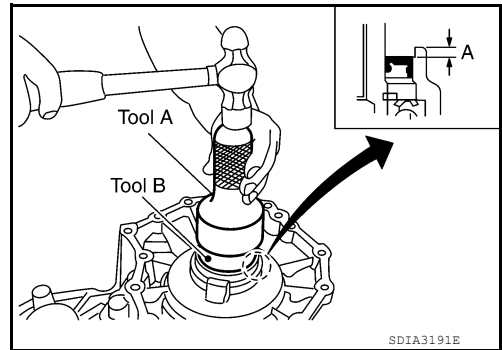


14. Install the fork guide, shift fork spring, 2-4 fork, and L-H fork to the shift rod, and secure them with new retaining pins.

**CAUTION:**  
Do not reuse retaining pins.

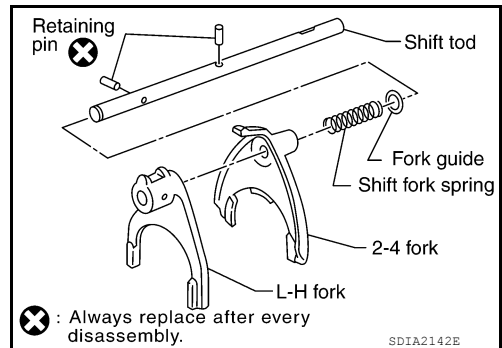

15. Install the 2-4 sleeve and L-H sleeve to each fork.

16. Install the shift cross to the front case.

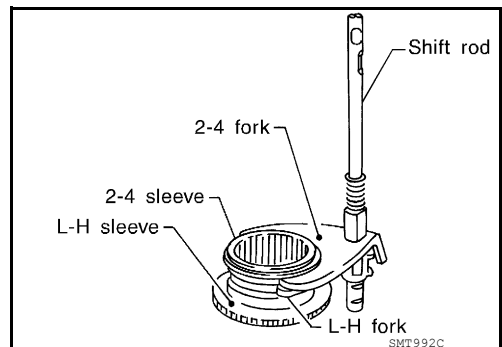


# TRANSFER ASSEMBLY

## < UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]

17. While aligning the L-H sleeve with the planetary carrier, install the shift rod assembly (A) to the front case.

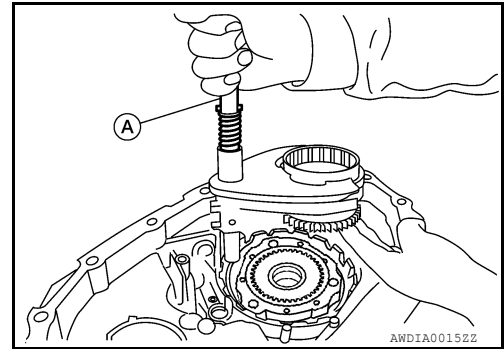


18. Apply liquid gasket to the entire center case mating surface of the front case assembly as shown.

- Use **Genuine Anaerobic Liquid Gasket** or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).

**CAUTION:**

Remove all foreign materials such as water, oil and grease from center case and front case mating surfaces.

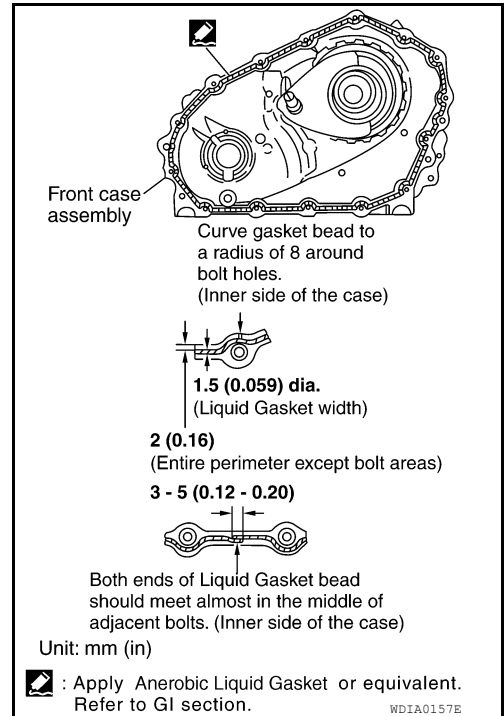


19. Install the center case assembly to the front case assembly.

**CAUTION:**

Do not damage mainshaft end.

20. Tap the center case lightly and press-fit the front drive shaft bearing into the front case.

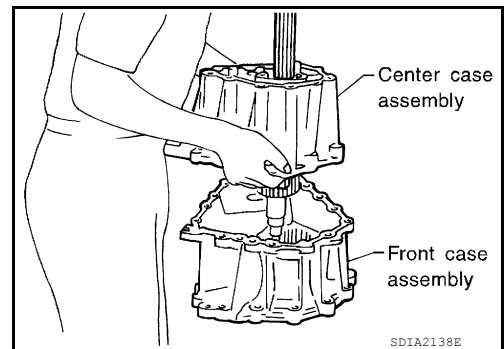

21. Tighten the front case bolts (←) to the specified torque. Refer to [DLN-141, "Disassembly and Assembly"](#).


**CAUTION:**

Be sure to install air breather hose clamp, connector bracket and harness clip.

22. Install the drain plug with a new gasket.

**CAUTION:**

Do not reuse gasket.

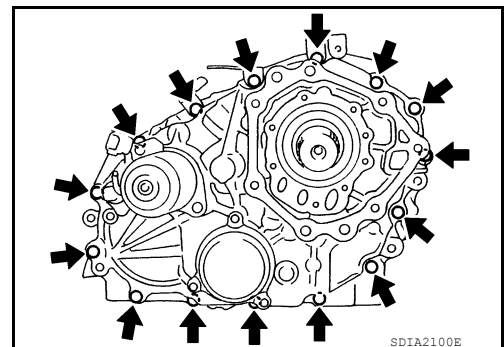


# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[ATX14B]


23. Align the matching mark on the front drive shaft with the mark on the companion flange, then install the companion flange.

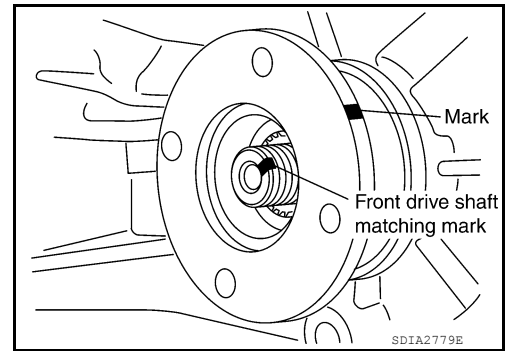

24. Install a new companion flange self-lock nut. Tighten to the specified torque using suitable tool. Refer to [DLN-141, "Disassembly and Assembly"](#).

**CAUTION:**

**Do not reuse self-lock nut.**

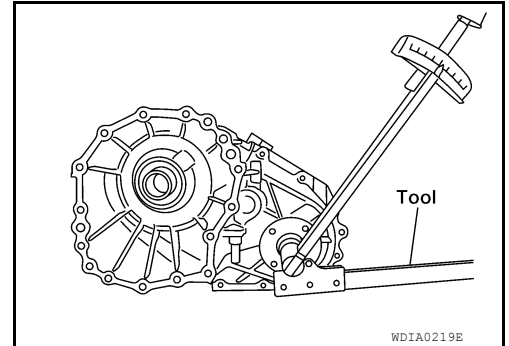

25. Remove all the sealant from the check plug, switch mounting and front case.

**CAUTION:**


**Remove old sealant adhering to mating surfaces. Also remove any moisture, oil, or foreign material adhering to application and mounting surfaces.**

26. Install the check ball and check spring to the front case. Apply sealant to the check plug and wait detection switch and install them to the front case. Tighten to the specified torque. Refer to [DLN-141, "Disassembly and Assembly"](#).

- Use Genuine Silicone RTV or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).

**NOTE:**

Wait detection switch harness connector is black.

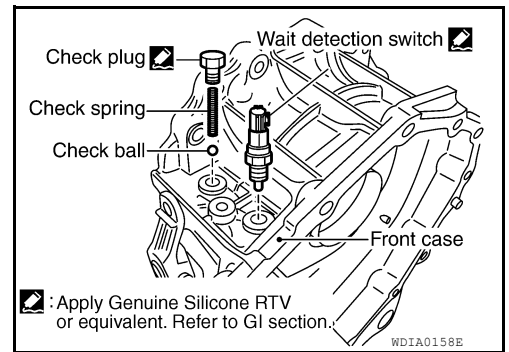


27. Install the new oil seal in the front case using Tool.

**Tool number : ST22360002 (J-25679-01)**

**CAUTION:**

- Do not reuse oil seal.
- Apply petroleum jelly to seal lip before installing.

28. Install the shift lever to the shift cross.  
29. Install the lock pin and lock pin nut. Tighten to the specified torque. Refer to [DLN-141, "Disassembly and Assembly"](#).

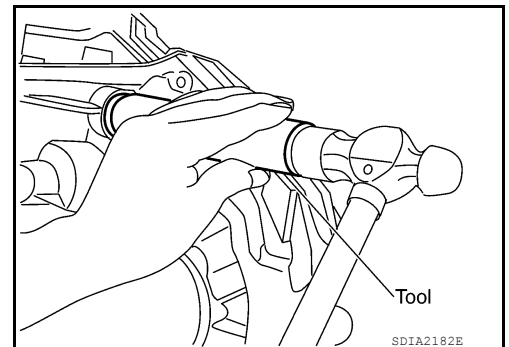

Rear Case

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# TRANSFER ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[ATX14B]

1. Apply petroleum jelly to the circumference of the new rear oil seal. Install the new rear oil seal so that it is flush with the case tip face using Tool.

**Tool number** : ST30720000 (J-25405)

**CAUTION:**


- Do not reuse oil seal.
- Apply petroleum jelly to seal lip before installing.

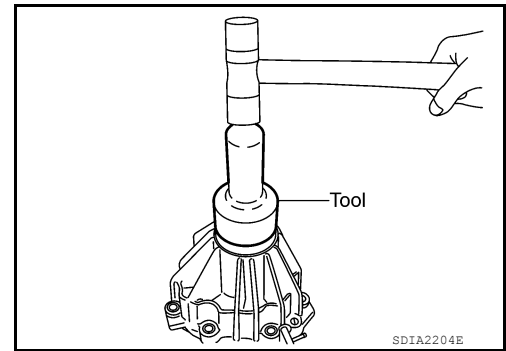

2. Apply petroleum jelly to the circumference of the new dust cover (1). Position the new dust cover as shown.

**CAUTION:**

- Do not reuse dust cover.
- Position the protrusions in the position as shown.
- (2): Rear case assembly
- (A): Protrusions

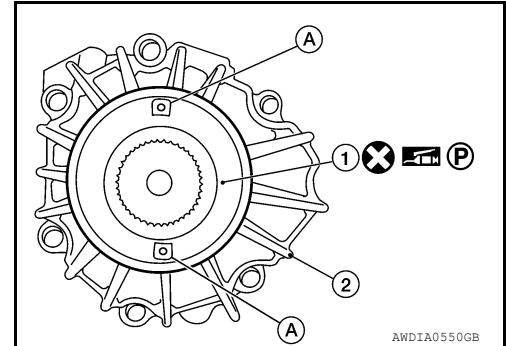

3. Install the new dust cover using Tool.

**Tool number** : KV40105310 ( — )

4. Install the air breather into the rear case.
5. Remove all the sealant from the rear case to center case mating surfaces.

**CAUTION:**


Remove all foreign materials such as water, oil, and grease from center case and rear case mating surfaces.

6. Apply liquid gasket to the entire rear case mating surface of the center case.


- Use Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).

**CAUTION:**

Do not to allow Liquid Gasket to enter stem bleeder hole.

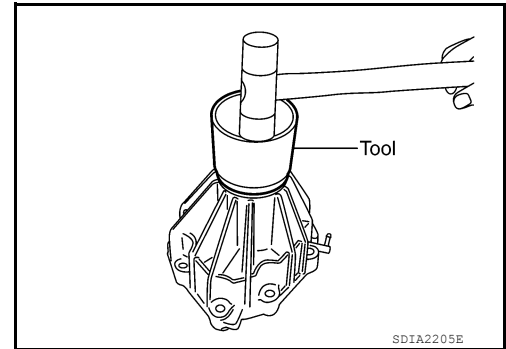

7. Install the rear case to the center case. Tighten the bolts (←) to the specified torque. Refer to [DLN-141, "Disassembly and Assembly"](#).

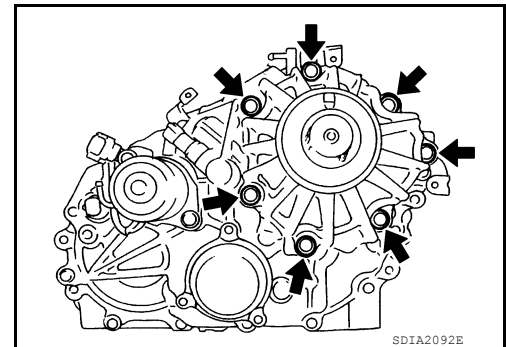



# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[ATX14B]

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### General Specification

INFOID:0000000011290911

Applied model		4WD	
		VK56DE	
		A/T	
Transfer model		ATX14B	
Fluid capacity (Approx.)		ℓ (US qt, Imp qt)	3.0 (3-1/8, 2-5/8)
Gear ratio	High	1.000	
	Low	2.625	
Number of teeth	Planetary gear	Sun gear	57
		Internal gear	91
	Front drive sprocket		38
	Front drive shaft		38

#### Inspection and Adjustment

INFOID:0000000011290912

#### CLEARANCE BETWEEN INNER GEAR AND OUTER GEAR

Unit: mm (in)

Item	Specification
Sub-oil pump	0.015 - 0.035 (0.0006 - 0.0014)
Main oil pump	0.015 - 0.035 (0.0006 - 0.0014)

#### CLUTCH

Unit: mm (in)

Item	Limit value
Drive plate	1.4 (0.055)

#### PINION GEAR END PLAY

Unit: mm (in)

Item	Standard
Pinion gear end play	0.1 - 0.7 (0.004 - 0.028)

#### CLEARANCE BETWEEN SHIFT FORK AND SLEEVE

Unit: mm (in)

Item	Standard
Shift fork and sleeve	Less than 0.36 (0.0142)

#### SELECTIVE PARTS

##### Sub-oil Pump

Unit: mm (in)

Gear thickness	Part number*	
	Inner gear	Outer gear
9.27 - 9.28 (0.3650 - 0.3654)	31346 0W462	31347 0W462
9.28 - 9.29 (0.3654 - 0.3657)	31346 0W461	31347 0W461
9.29 - 9.30 (0.3657 - 0.3661)	31346 0W460	31347 0W460

\*: Always check with the Parts Department for the latest parts information.

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[ATX14B]

## Main Oil Pump

Unit: mm (in)

Gear thickness	Part number*	
	Inner gear	Outer gear
8.27 - 8.28 (0.3256 - 0.3260)	31346 7S112	31347 7S112
8.28 - 8.29 (0.3260 - 0.3264)	31346 7S111	31347 7S111
8.29 - 8.30 (0.3264 - 0.3268)	31346 7S110	31347 7S110

\*: Always check with the Parts Department for the latest parts information.

## Control Valve

Unit: mm (in)

Mounting position (Part name)	Part number*	Outer dia.	Overall length
L1 (2-4 shift valve)	31772 21X00	8.0 (0.315)	38.5 (1.516)
L2 (Clutch valve)	31772 80X11	10.0 (0.394)	40.0 (1.575)
L4 (Pilot valve)	31772 80X11	10.0 (0.394)	40.0 (1.575)
L5 (Regulator valve)	31741 0W410	12.0 (0.472)	68.0 (2.677)

\*: Always check with the Parts Department for the latest parts information.

## Control Valve Spring

Unit: mm (in)

Mounting position (Part name)	Part number*	Free length	Outer dia.	Overall length
L1 (2-4 shift valve spring)	31742 2W500	31.85 (1.2539)	7.0 (0.276)	0.6 (0.024)
L2 (Clutch valve spring)	31742 2W505	40.6 (1.598)	8.9 (0.350)	0.7 (0.028)
L4 (Pilot valve spring)	31742 0W410	28.1 (1.106)	9.0 (0.354)	1.2 (0.047)
L5 (Regulator valve spring)	31742 2W515	39.7 (1.563)	11.0 (0.433)	1.3 (0.051)

\*: Always check with the Parts Department for the latest parts information.

## Return Spring

Unit: mm (in)

Stamped mark	Part number*	Free length
1	31521 7S111	42.7 (1.168)
2	31521 7S112	43.1 (1.697)
3	31521 7S113	43.6 (1.717)
4	31521 7S114	44.0 (1.731)

\*: Always check with the Parts Department for the latest parts information.

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011290913

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

**WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000011290914

**NOTE:**

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

**NOTE:**

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## PRECAUTIONS

< PRECAUTION >

**[PROPELLER SHAFT: 2F1310]**

5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT.

# PREPARATION

< PREPARATION >


[PROPELLER SHAFT: 2F1310]

## PREPARATION

### PREPARATION

#### Commercial Service Tool

INFOID:000000011290915

Tool name	Description
<p data-bbox="151 411 263 441">Power tool</p>  <p data-bbox="841 632 912 646">PIIB1407E</p>	<ul style="list-style-type: none"><li data-bbox="1008 411 1365 441">• Loosening nuts, screws and bolts</li></ul>

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

# NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

[PROPELLER SHAFT: 2F1310]

## SYMPTOM DIAGNOSIS

### NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING

#### NVH Troubleshooting Chart

INFOID:000000011290916

Use the chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

Reference page		<a href="#">DLN-184, "Removal and Installation"</a>	<a href="#">DLN-188, "General Specification"</a>	<a href="#">DLN-188, "General Specification"</a>	<a href="#">DLN-239, "NVH Troubleshooting Chart"</a>	<a href="#">RAX-5, "NVH Troubleshooting Chart"</a>	<a href="#">RSU-5, "NVH Troubleshooting Chart"</a>	<a href="#">WT-51, "Inspection"</a>	<a href="#">WT-51, "Inspection"</a>	<a href="#">WT-51, "Inspection"</a>	<a href="#">BR-7, "NVH Troubleshooting Chart"</a>	<a href="#">ST-9, "NVH Troubleshooting Chart"</a>
Possible cause and suspected parts		Uneven rotation torque	Rotation imbalance	Excessive run out	Differential	Axle	Suspension	Tires	Road wheel	Drive shaft	Brakes	Steering
Symptom	Noise	x	x	x	x	x	x	x	x	x	x	x
	Shake					x	x	x	x	x	x	x
	Vibration	x	x	x		x	x	x		x		x

x: Applicable

# PROPELLER SHAFT ASSEMBLY

< BASIC INSPECTION >

[PROPELLER SHAFT: 2F1310]

## BASIC INSPECTION

### PROPELLER SHAFT ASSEMBLY

#### Inspection

INFOID:000000011290917

#### APPEARANCE AND NOISE INSPECTION

- Check the propeller shaft tube surface for dents or cracks. If damaged, replace the propeller shaft assembly.
- Check the bearings for noise and damage. Repair or replace the bearings as necessary.

#### PROPELLER SHAFT VIBRATION


If a vibration is present at high speed, inspect the propeller shaft runout first.

1. Measure the runout of the propeller shaft tube at several points by rotating the final drive companion flange with your hands.

#### Limit

Propeller shaft run out

: Refer to [DLN-188, "General Specification"](#)

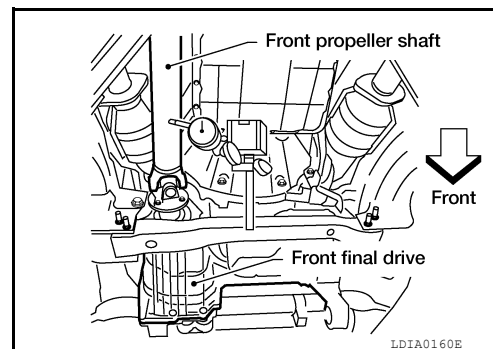

2. If the runout exceeds specifications, disconnect the propeller shaft at the final drive companion flange; then rotate the companion flange 90°, 180° and 270° and reconnect the propeller shaft.
3. Check the runout again. If the runout still exceeds specifications, replace the propeller shaft assembly.
4. After installation, check for vibration by driving the vehicle.

# PROPELLER SHAFT

< UNIT REMOVAL AND INSTALLATION >

[PROPELLER SHAFT: 2F1310]


## UNIT REMOVAL AND INSTALLATION

### PROPELLER SHAFT

#### Removal and Installation

INFOID:000000011290918

Model 2F1310

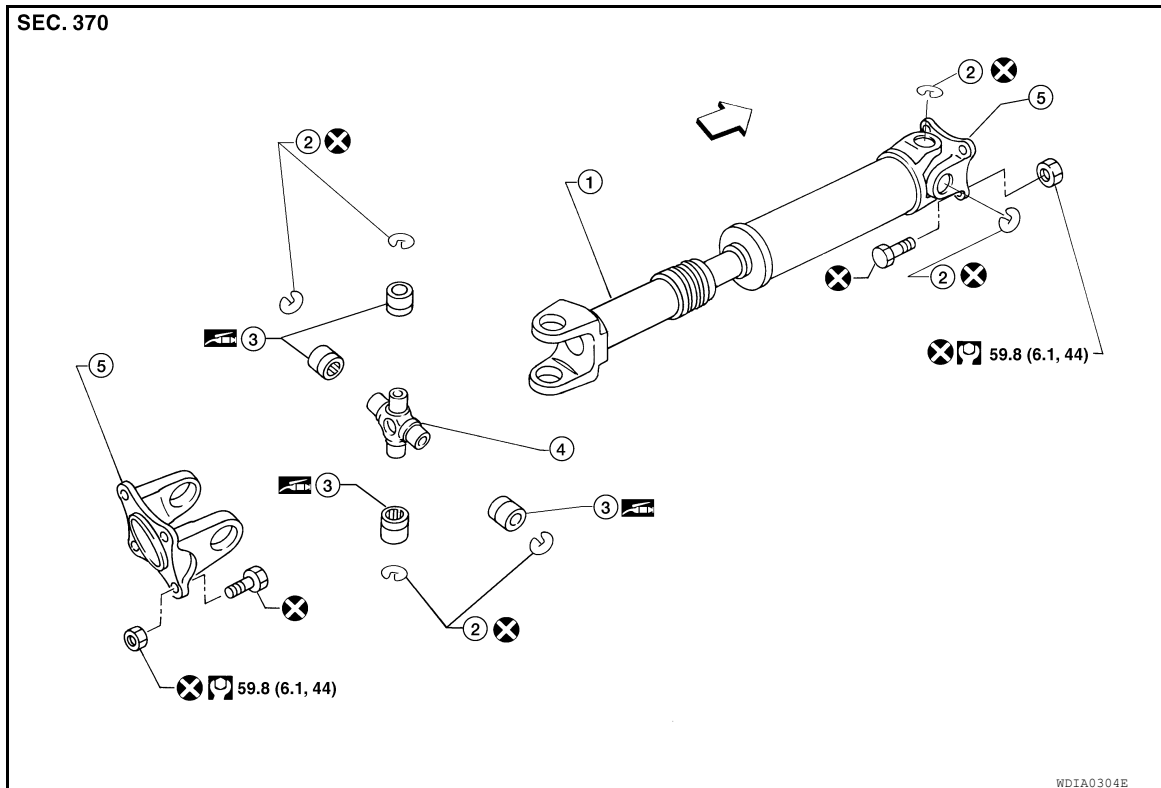

- |                         |                |                    |
|-------------------------|----------------|--------------------|
| 1. Propeller shaft tube | 2. Snap ring   | 3. Journal bearing |
| 4. Journal              | 5. Flange yoke | ⇐ Front            |

#### REMOVAL

1. Remove the under cover (if equipped).
2. Put matching marks on the front propeller shaft flange yoke and the front final drive companion flange as shown.

**CAUTION:**


**For matching marks, use paint. Do not damage the flange yoke and companion flange of the front final drive.**

3. Put matching marks on the front propeller shaft flange yoke and the transfer companion flange.

**CAUTION:**

**For matching marks, use paint. Do not damage the flange yoke and companion flange of the front final drive.**

4. Remove the bolts and then remove the front propeller shaft from the front final drive and transfer.

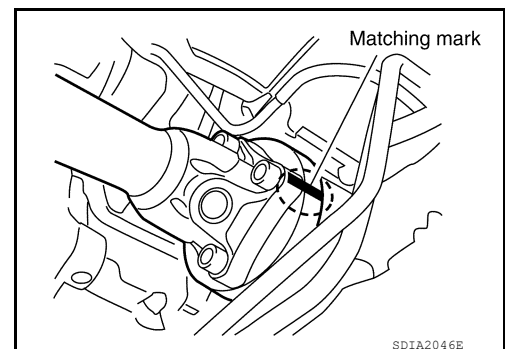

#### INSPECTION



# PROPELLER SHAFT


## < UNIT REMOVAL AND INSTALLATION >

[PROPELLER SHAFT: 2F1310]

- Inspect the propeller shaft runout. If runout exceeds the limit, replace the propeller shaft assembly.

### Limit

**Propeller shaft run out** : Refer to [DLN-188, "General Specification"](#)

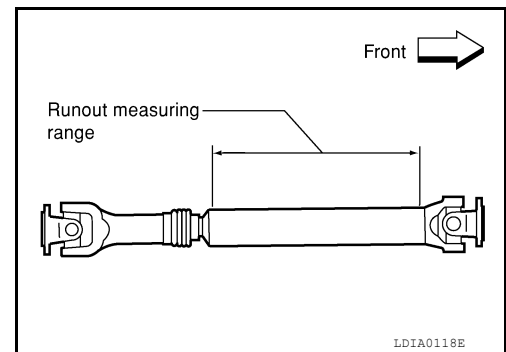


- While holding the flange yoke on one side, check axial play of the joint as shown. If the journal axial play exceeds the specification, repair or replace the journal parts.

### Standard

**Journal axial play** : Refer to [DLN-188, "General Specification"](#)

- Check the propeller shaft tube surface for dents or cracks. If damage is detected, replace the propeller shaft assembly.

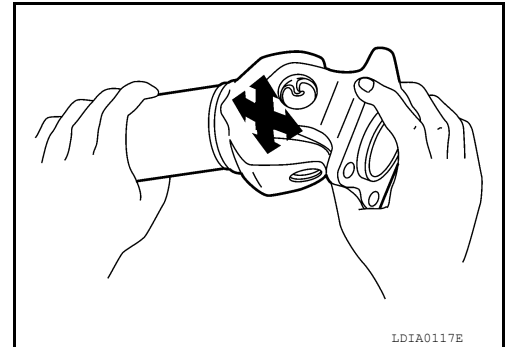

## INSTALLATION

Installation is in the reverse order of removal.

- After installation, check for vibration by driving the vehicle. Refer to [DLN-192, "NVH Troubleshooting Chart"](#).

### CAUTION:

**Do not reuse the bolts and nuts. Always install new ones.**

# PROPELLER SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >

[PROPELLER SHAFT: 2F1310]

## UNIT DISASSEMBLY AND ASSEMBLY

### PROPELLER SHAFT

#### Disassembly and Assembly

INFOID:000000011290919


#### DISASSEMBLY

##### Journal


1. Put matching marks on the front propeller shaft and flange yoke as shown.

**CAUTION:**

For matching marks, use paint. Do not damage the front propeller shaft or flange yoke.

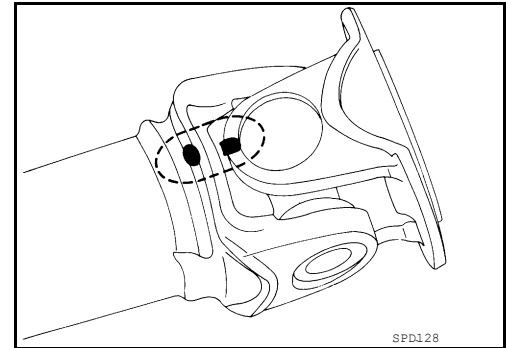


2. Remove the snap rings.

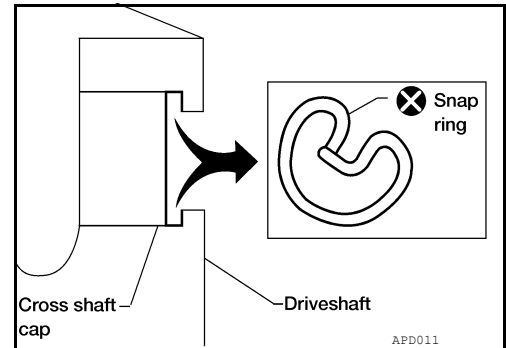

3. Push out and remove the journal bearings by lightly tapping the flange yoke with a hammer, taking care not to damage the journal or flange yoke hole.

**NOTE:**


Put marks on the disassembled parts so that they can be reinstalled in their original positions from which they were removed.

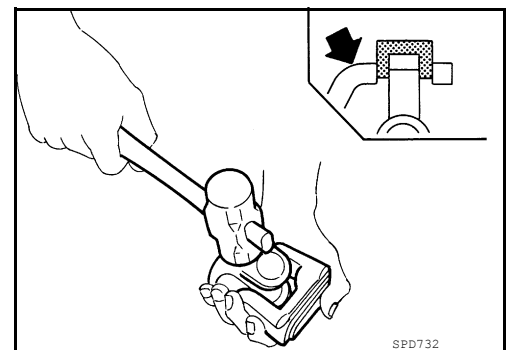

4. Push out and remove the remaining journal bearings at the opposite side by lightly tapping the flange yoke with a hammer, taking care not to damage the journal or flange yoke hole.

**NOTE:**

Put marks on the disassembled parts so that they can be reinstalled in their original positions from which they were removed.

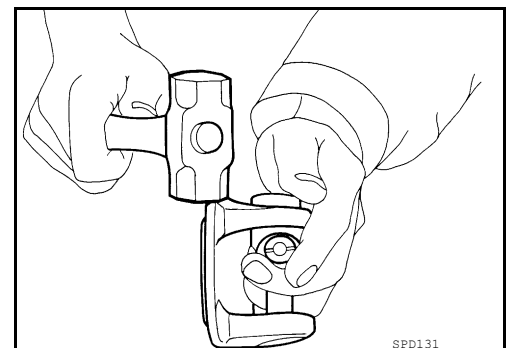

#### ASSEMBLY

# PROPELLER SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >


[PROPELLER SHAFT: 2F1310]

## Journal

1. Assemble the journal bearings. Apply multipurpose grease on the bearing inner surface.

**NOTE:**

During assembly, use caution so that the needle bearings do not fall down.

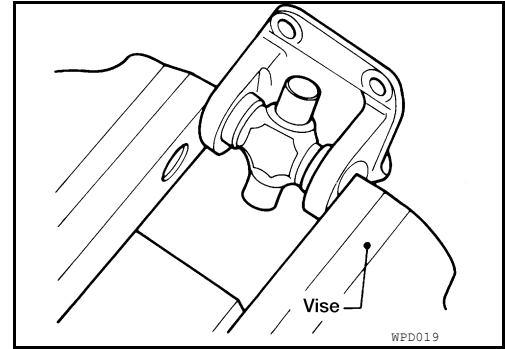


2. Select new snap rings that will provide the specified play in an axial direction of the journal, and install them. Refer to [DLN-188, "Snap Ring"](#).

**CAUTION:**


**Do not reuse snap rings**

**NOTE:**

Select snap rings with a difference in thickness at both sides within 0.02 mm (0.0008 in).

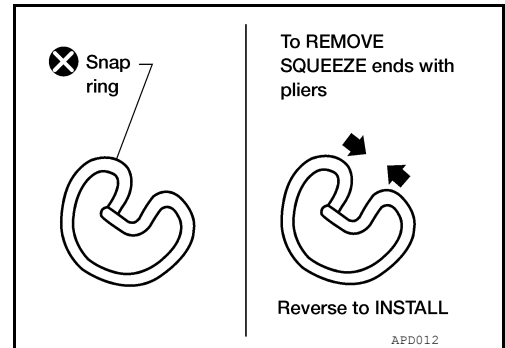


3. Adjust the thrust clearance between the bearing and snap ring to zero by tapping the yoke.

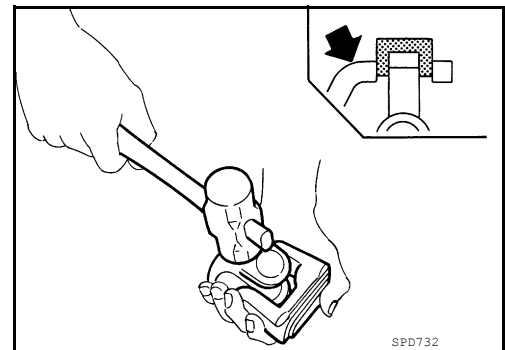

4. Make sure that the journal moves smoothly and is below the propeller shaft joint flex effort specification.

**Standard**

**Propeller shaft joint flex effort : Refer to [DLN-188, "General Specification"](#)**

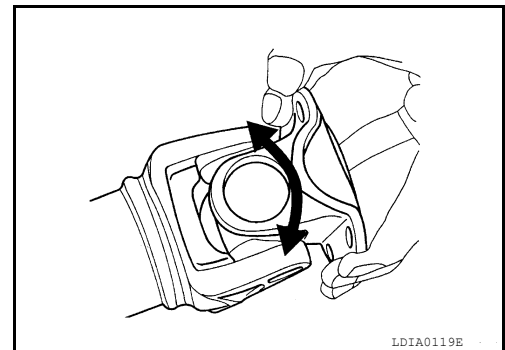

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[PROPELLER SHAFT: 2F1310]

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### General Specification

INFOID:0000000011290920

Unit: mm (in)

Applied model	4WD
	VK56DE
	A/T
Propeller shaft model	2F1310
Number of joints	2
Coupling method with front final drive	Flange type
Coupling method with transfer	Flange type
Shaft length (Spider to spider)	696 ± 1.5 (27.40 ± 0.06)
Shaft outer diameter	63.5 (2.5) maximum

#### PROPELLER SHAFT RUNOUT

Unit: mm (in)

Item	Limit
Propeller shaft runout	0.60 (0.024)

#### PROPELLER SHAFT JOINT FLEX EFFORT

Unit: N·m (kg-m, in-lb)

Item	Limit
Propeller shaft joint flex effort	2.26 (0.23, 20) or less

#### JOURNAL AXIAL PLAY

Unit: mm (in)

Item	Limit
Journal axial play	0.02 (0.0008)

#### Snap Ring

INFOID:0000000011290921

Model 2F1310

Unit: mm (in)

Thickness	Color	Part Number*
1.99 (0.0783)	White	37146-C9400
2.02 (0.0795)	Yellow	37147-C9400
2.05 (0.0807)	Red	37148-C9400
2.08 (0.0819)	Green	37149-C9400
2.11 (0.0831)	Blue	37150-C9400
2.14 (0.0843)	Light brown	37151-C9400
2.17 (0.0854)	Black	37152-C9400
2.20 (0.0866)	No paint	37153-C9400

\*: Always check with the Parts Department for the latest parts information.

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011290922

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

**WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000011290923

**NOTE:**

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

**NOTE:**

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## PRECAUTIONS

< PRECAUTION >

[PROPELLER SHAFT: 2S1410]

5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT.

# PREPARATION

< PREPARATION >


[PROPELLER SHAFT: 2S1410]

## PREPARATION

### PREPARATION

#### Commercial Service Tool

INFOID:000000011290924

Tool name	Description
<p data-bbox="151 411 263 441">Power tool</p>  <p data-bbox="841 632 912 646">PIIB1407E</p>	<ul style="list-style-type: none"><li data-bbox="1008 411 1365 441">• Loosening nuts, screws and bolts</li></ul>

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

# NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

[PROPELLER SHAFT: 2S1410]

## SYMPTOM DIAGNOSIS

### NOISE, VIBRATION, AND HARSHNESS (NVH) TROUBLESHOOTING

#### NVH Troubleshooting Chart

INFOID:000000011290925

Use the chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

Reference page		<a href="#">DLN-184, "Removal and Installation"</a>	<a href="#">DLN-183, "Inspection"</a>	<a href="#">DLN-183, "Inspection"</a>	<a href="#">DLN-239, "NVH Troubleshooting Chart"</a>	<a href="#">RAX-5, "NVH Troubleshooting Chart"</a>	<a href="#">RSU-5, "NVH Troubleshooting Chart"</a>	<a href="#">WT-47, "NVH Troubleshooting Chart"</a>	<a href="#">WT-47, "NVH Troubleshooting Chart"</a>	<a href="#">RAX-5, "NVH Troubleshooting Chart"</a>	<a href="#">BR-7, "NVH Troubleshooting Chart"</a>	<a href="#">ST-9, "NVH Troubleshooting Chart"</a>
Possible cause and suspected parts		Uneven rotation torque	Rotation imbalance	Excessive run out	Differential	Axle	Suspension	Tires	Road wheel	Drive shaft	Brakes	Steering
Symptom	Noise	x	x	x	x	x	x	x	x	x	x	x
	Shake					x	x	x	x	x	x	x
	Vibration	x	x	x		x	x	x		x		x

x: Applicable



# PROPELLER SHAFT ASSEMBLY

< BASIC INSPECTION >

[PROPELLER SHAFT: 2S1410]

## BASIC INSPECTION

### PROPELLER SHAFT ASSEMBLY

#### Inspection

INFOID:000000011290926

#### APPEARANCE AND NOISE INSPECTION

- Check the propeller shaft tube surface for dents or cracks. If damaged, replace the propeller shaft assembly.
- Check the bearings for noise and damage. Repair or replace the bearings as necessary.


#### PROPELLER SHAFT VIBRATION

If a vibration is present at high speed, inspect the propeller shaft runout first.

1. Measure the runout of the propeller shaft tube at several points by rotating the final drive companion flange with your hands.

#### Limit

**Propeller shaft run out** : Refer to [DLN-188, "General Specification"](#)

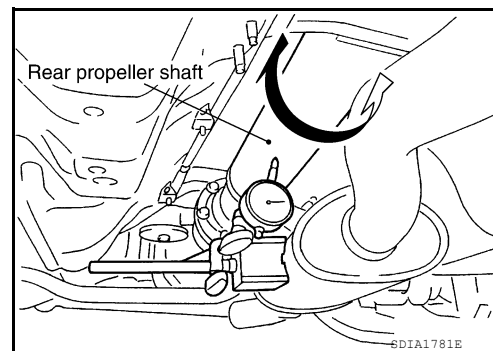

2. If the runout exceeds specifications, disconnect the propeller shaft at the final drive companion flange; then rotate the companion flange 90°, 180° and 270° and reconnect the propeller shaft.
3. Check the runout again. If the runout still exceeds specifications, replace the propeller shaft assembly.
4. After installation, check for vibration by driving vehicle.

# PROPELLER SHAFT

< UNIT REMOVAL AND INSTALLATION >

[PROPELLER SHAFT: 2S1410]


## UNIT REMOVAL AND INSTALLATION

### PROPELLER SHAFT

#### Removal and Installation

INFOID:000000011290927

#### REMOVAL

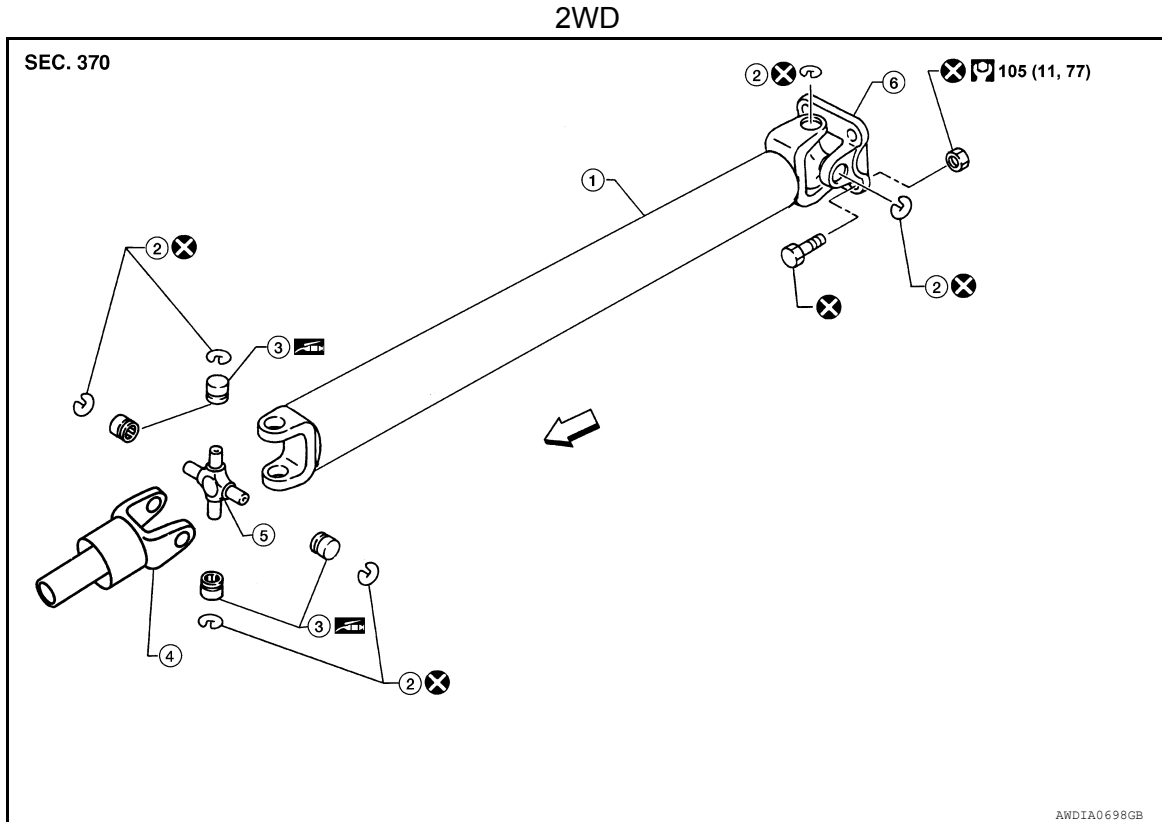


- |                         |              |                    |
|-------------------------|--------------|--------------------|
| 1. Propeller shaft tube | 2. Snap ring | 3. Journal bearing |
| 4. Sleeve yoke          | 5. Journal   | 6. Flange yoke     |
| ⇐ Front                 |              |                    |

# PROPELLER SHAFT

< UNIT REMOVAL AND INSTALLATION >

[PROPELLER SHAFT: 2S1410]

4WD

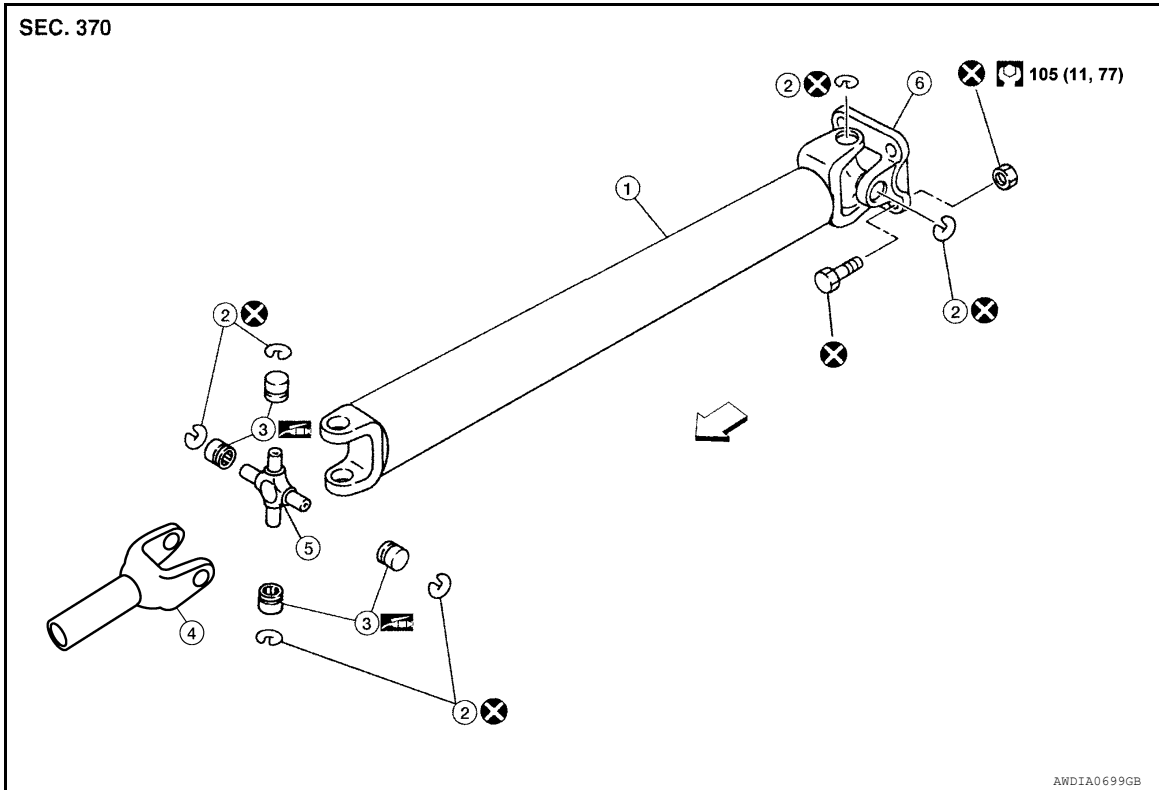

- |                         |              |                    |
|-------------------------|--------------|--------------------|
| 1. Propeller shaft tube | 2. Snap ring | 3. Journal bearing |
| 4. Sleeve yoke          | 5. Journal   | 6. Flange yoke     |
- ← Front

## NOTE:

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.


## REMOVAL

1. Move the A/T shift selector to the N position and release the parking brake.
2. Remove the under cover (if equipped).
3. Put matching marks on the rear propeller shaft flange yoke and the rear final drive companion flange as shown.

### CAUTION:

**For matching marks, use paint. Do not damage the rear propeller shaft flange yoke or the companion flange.**

4. Remove the bolts, then remove the propeller shaft from the rear final drive and A/T or transfer.

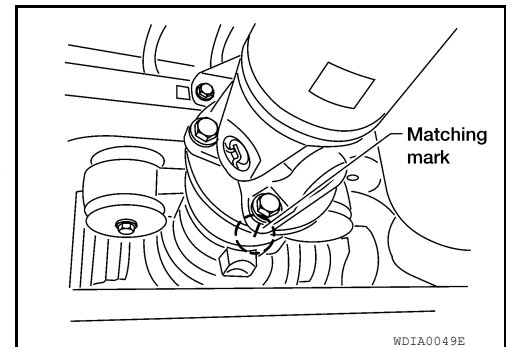

## INSPECTION

- Inspect the propeller shaft runout. If runout exceeds the limit, replace the propeller shaft assembly.

# PROPELLER SHAFT


< UNIT REMOVAL AND INSTALLATION >

[PROPELLER SHAFT: 2S1410]

## Limit

Propeller shaft run out

: Refer to [DLN-188, "General Specification"](#)

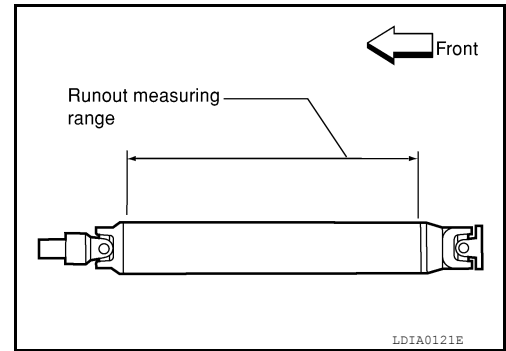


- While holding the flange yoke on one side, check axial play of the joint as shown. If the journal axial play exceeds the specification, repair or replace the journal parts.

## Standard

Propeller shaft journal axial play

: Refer to [DLN-188, "General Specification"](#)

- Check the propeller shaft tube for dents or cracks. If damage is detected, replace the propeller shaft assembly.

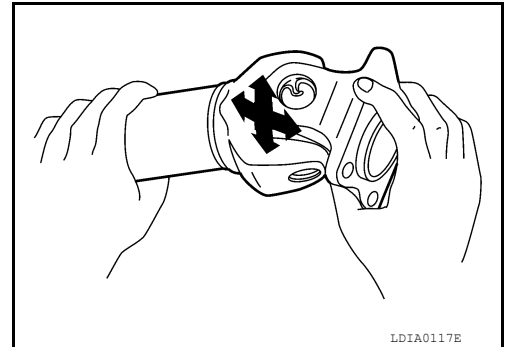


## INSTALLATION

Installation is in the reverse order of removal.

- After installation, check for vibration by driving the vehicle. Refer to [DLN-182, "NVH Troubleshooting Chart"](#).
- If propeller shaft assembly of final drive assembly has been replaced, connect them as follows:
  - Face companion flange mark (A) of the final drive (1) upward. With the mark (A) faced upward, couple the propeller shaft and the final drive so that the matching mark (B) of the propeller shaft (2) can be positioned as close as possible with the matching mark (C) of the final drive companion flange.
  - Tighten propeller shaft and final drive bolts and nuts of the to specification. Refer to [DLN-184, "Removal and Installation"](#).

### CAUTION:

Do not reuse the bolts and nuts. Always install new ones.

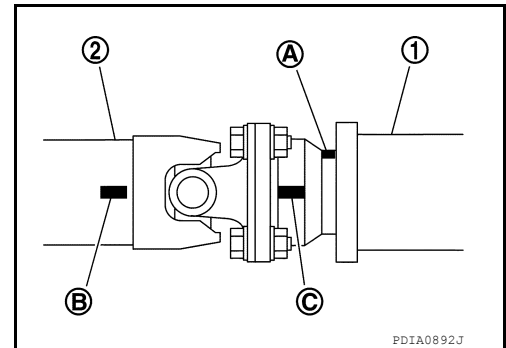

# PROPELLER SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >

[PROPELLER SHAFT: 2S1410]

## UNIT DISASSEMBLY AND ASSEMBLY

### PROPELLER SHAFT

#### Disassembly and Assembly

INFOID:000000011290928


#### DISASSEMBLY

##### Journal


1. Put matching marks on the rear propeller shaft and flange yoke as shown.

**CAUTION:**

For matching marks use paint. Do not damage the rear propeller shaft or flange yoke.

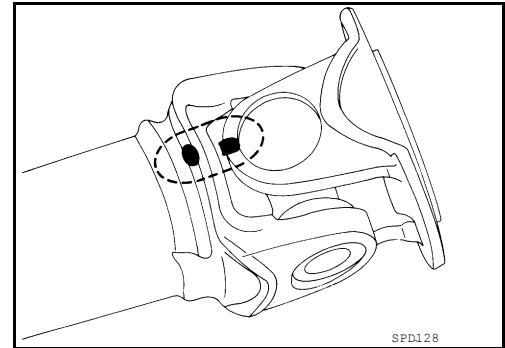


2. Remove the snap rings.

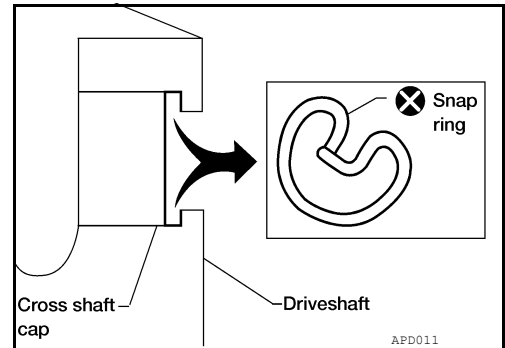

3. Push out and remove the journal bearings by lightly tapping the flange yoke with a hammer, taking care not to damage the journal or flange yoke hole.

**NOTE:**


Put marks on the disassembled parts so that they can be reinstalled in their original positions from which they were removed.

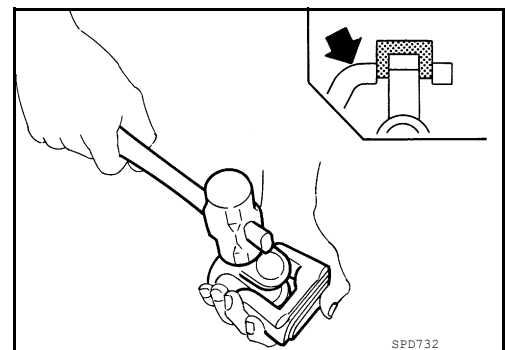

4. Push out and remove the remaining journal bearings at the opposite side by lightly tapping the flange yoke with a hammer, taking care not to damage the journal or flange yoke hole.

**NOTE:**

Put marks on the disassembled parts so that they can be reinstalled in their original positions from which they were removed.

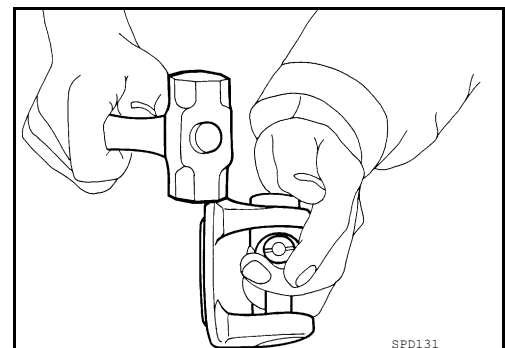

#### ASSEMBLY

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# PROPELLER SHAFT

< UNIT DISASSEMBLY AND ASSEMBLY >


[PROPELLER SHAFT: 2S1410]

## Journal

1. Assemble the journal bearings. Apply multipurpose grease on the bearing inner surface.

**NOTE:**

During assembly, use caution so that the needle bearings do not fall down.

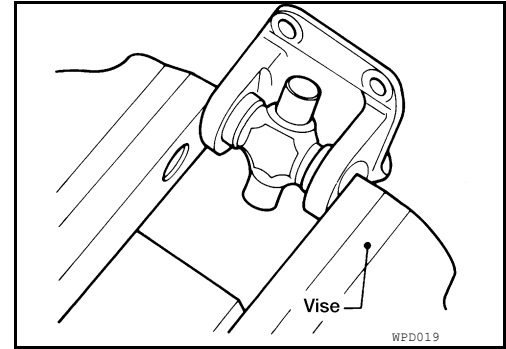

2. Select new snap rings that will provide the specified play in an axial direction of the journal, and install them. Refer to [DLN-188](#).


**"Snap Ring":**

**CAUTION:**


**Do not reuse snap rings**

**NOTE:**

Select snap rings with a difference in thickness at both sides within 0.02 mm (0.0008 in).

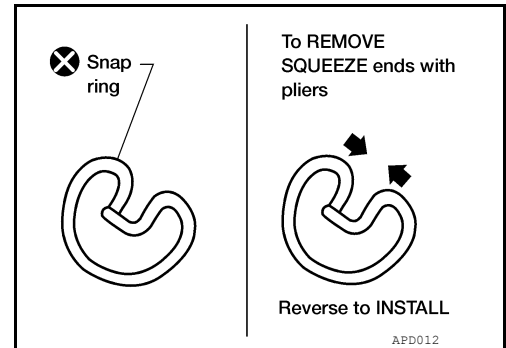


3. Adjust the thrust clearance between the bearing and snap ring to zero by tapping the yoke.

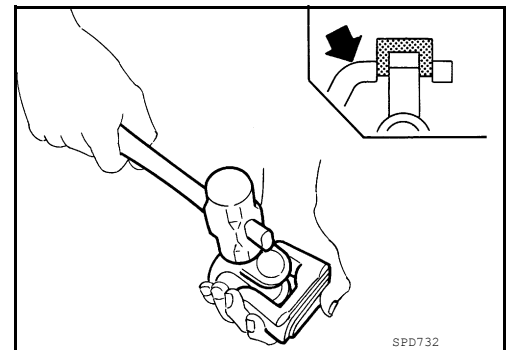

4. Make sure that the journal moves smoothly and is below the joint flex effort specification. Refer to [DLN-188](#). **"General Specification"**.

**Standard**

**Propeller shaft joint flex effort : Refer to [DLN-199](#), **"General Specification"****

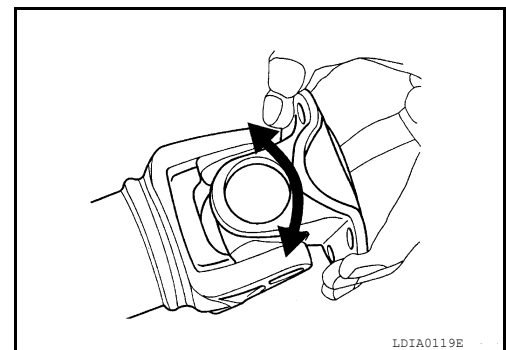

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[PROPELLER SHAFT: 2S1410]

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### General Specification

INFOID:0000000011290929

Unit: mm (in)

Applied model	2WD
	VK56DE
	A/T
Propeller shaft model	2S1410
Number of joints	2
Coupling method with rear final drive	Flange type
Coupling method with transmission	Sleeve type
Shaft length (Spider to spider)	1637.1 ± 1.5 (64.45 ± 0.06)
Shaft outer diameter	127.60 + 0.22, - 0.29 (5.02 ± 0.01)

#### PROPELLER SHAFT RUNOUT

Unit: mm (in)

Item	Limit
Propeller shaft runout	1.02 (0.0402) or less

#### PROPELLER SHAFT JOINT FLEX EFFORT

Unit: N·m (kg·m, in·lb)

Item	Limit
Propeller shaft joint flex effort	2.26 (0.23, 20) or less

#### JOURNAL AXIAL PLAY

Unit: mm (in)

Item	Limit
Journal axial play	0.02 (0.0008) or less

Applied model	4WD
	VK56DE
	A/T
Propeller shaft model	2S1410
Number of joints	2
Coupling method with rear final drive	Flange type
Coupling method with transfer	Sleeve type
Shaft length (Spider to spider)	1156.8 ± 1.5 (45.54 ± 0.06)
Shaft outer diameter	102.46 + 0.17, - 0.25 (4.03 ± 0.01)

#### PROPELLER SHAFT RUNOUT

Unit: mm (in)

Item	Limit
Propeller shaft runout	1.02 (0.0402) or less

#### PROPELLER SHAFT JOINT FLEX EFFORT

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[PROPELLER SHAFT: 2S1410]

Unit: N·m (kg-m, in-lb)

Item	Limit
Propeller shaft joint flex effort	2.26 (0.23, 20) or less

## JOURNAL AXIAL PLAY

Unit: mm (in)

Item	Limit
Journal axial play	0.02 (0.0008) or less

## Snap Ring

INFOID:000000011290930

Unit: mm (in)

Thickness	Color	Part Number*
1.99 (0.0783)	White	37146-C9400
2.02 (0.0795)	Yellow	37147-C9400
2.05 (0.0807)	Red	37148-C9400
2.08 (0.0819)	Green	37149-C9400
2.11 (0.0831)	Blue	37150-C9400
2.14 (0.0843)	Light brown	37151-C9400
2.17 (0.0854)	Black	37152-C9400
2.20 (0.0866)	No paint	37153-C9400

\*: Always check with the Parts Department for the latest parts information.



PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011290931

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

**WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000011290932

**NOTE:**

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

**NOTE:**

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## PRECAUTIONS

< PRECAUTION >

[FRONT FINAL DRIVE: M205]

5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT.

### Precaution for Servicing Front Final Drive

INFOID:000000011290933

- Before starting diagnosis of the vehicle, understand the symptoms well. Perform correct and systematic operations.
- Check for the correct installation status prior to removal or disassembly. When matching marks are required, be certain they do not interfere with the function of the parts they are applied to.
- Overhaul should be done in a clean work area, a dust proof area is recommended.
- Before disassembly, completely remove sand and mud from the exterior of the unit, preventing them from entering into the unit during disassembly or assembly.
- Always use shop paper for cleaning the inside of components.
- Avoid using cotton gloves or a shop cloth to prevent the entering of lint.
- Check appearance of the disassembled parts for damage, deformation, and abnormal wear. Replace them with new ones if necessary.
- Gaskets, seals and O-rings should be replaced any time the unit is disassembled.
- Clean and flush the parts sufficiently and blow them dry.
- Be careful not to damage sliding surfaces and mating surfaces.
- When applying sealant, remove the old sealant from the mating surface; then remove any moisture, oil, and foreign materials from the application and mating surfaces.
- In principle, tighten nuts or bolts gradually in several steps working diagonally from inside to outside. If a tightening sequence is specified, observe it.
- During assembly, observe the specified tightening torque.
- Add new differential gear oil, petroleum jelly, or multi-purpose grease, as specified.

# PREPARATION

< PREPARATION >

[FRONT FINAL DRIVE: M205]







## PREPARATION

### PREPARATION

#### Special Service Tool

INFOID:000000011290934







The actual shape of the tools may differ from those illustrated here.

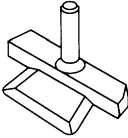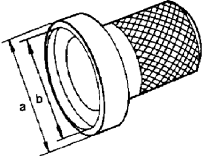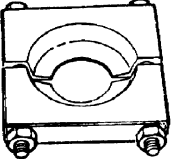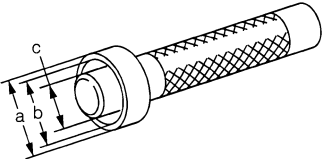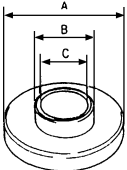Tool number (TechMate No.) Tool name	Description
KV10111100 (J-37228) Seal cutter   S-NT046	Removing carrier cover  DLN
ST35271000 ( — ) Drift   ZZA0702D	Installing drive pinion front bearing outer race. <b>a: 72 mm (2.83 in) dia.</b> <b>b: 36 mm (1.42 in) dia.</b>
KV38100500 (J-25273) Drift   ZZA0811D	Installing front oil seal. <b>a: 80 mm (3.15 in) dia.</b> <b>b: 60 mm (2.36 in) dia.</b>
ST30021000 ( — ) Puller   ZZA0700D	<ul style="list-style-type: none"> <li>Removing side bearing inner race.</li> <li>Removing drive pinion rear bearing inner race.</li> </ul>
KV38100300 (J-25523) Drift   ZZA1046D	Installing side bearing inner race. <b>a: 54 mm (2.13 in) dia.</b> <b>b: 46 mm (1.81 in) dia.</b> <b>c: 32 mm (1.26 in) dia.</b>
ST30901000 ( — ) Drift   SDIA0217J	Installing drive pinion rear bearing outer race. <b>A: 79 mm (3.11 in) dia.</b> <b>B: 45 mm (1.77 in) dia.</b> <b>C: 35.2 mm (1.39 in) dia.</b>

# PREPARATION

< PREPARATION >




[FRONT FINAL DRIVE: M205]

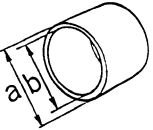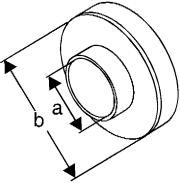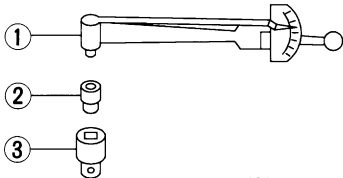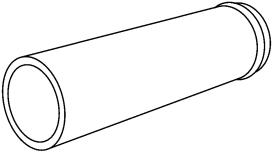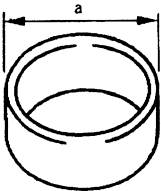Tool number (TechMate No.) Tool name	Description
KV40104810 ( — ) Drift <div style="text-align: center;">  <p style="font-size: small;">ZZA1003D</p> </div>	Installing drive pinion front bearing outer race. <b>a: 68 mm (2.68 in) dia.</b> <b>b: 55 mm (2.17 in) dia.</b>
KV38102200 ( — ) Drift <div style="text-align: center;">  <p style="font-size: small;">NT660</p> </div>	Installing front oil seal. <b>a: 90 mm (3.54 in) dia.</b> <b>b: 55.3 mm (2.18 in) dia.</b>
ST33081000 ( — ) Adapter <div style="text-align: center;">  <p style="font-size: small;">ZZA1000D</p> </div>	Removing and installing side bearing inner race. <b>a: 43 mm (1.69 in) dia.</b> <b>b: 33.5 mm (1.32 in) dia.</b>
ST3127S000 (J-25765-A) Preload gauge 1. GG91030000 (J-25765) Torque wrench 2. HT62940000 ( — ) Socket adapter (1/2") 3. HT62900000 ( — ) Socket adapter (3/8") <div style="text-align: center;">  <p style="font-size: small;">NT124</p> </div>	Inspecting drive pinion bearing preload and total preload
— (C-4040) Installer <div style="text-align: center;">  <p style="font-size: small;">SDIA2607E</p> </div>	Installing drive pinion rear bearing inner race.
KV40105230 ( — ) Drift <div style="text-align: center;">  <p style="font-size: small;">ZZA0898D</p> </div>	Installing drive pinion rear bearing outer race. <b>a: 92 mm (3.62 in) dia.</b> <b>b: 85.5 mm (3.37 in) dia.</b>

# PREPARATION



< PREPARATION >

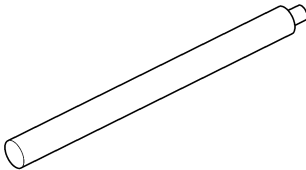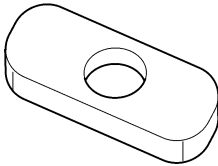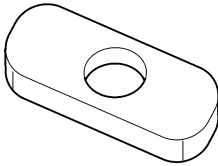[FRONT FINAL DRIVE: M205]

Tool number (TechMate No.) Tool name	Description
— (C-4171) Handle   LDIA0134E	<ul style="list-style-type: none"> <li>• Removing drive pinion front bearing outer race</li> <li>• Removing drive pinion rear bearing outer race</li> </ul>
— (D-103) Remover   LDIA0135E	Removing drive pinion front bearing outer race
— (C-4307) Remover   LDIA0135E	Removing drive pinion rear bearing outer race

## Commercial Service Tool

INFOID:000000011290935

(TechMate No.) Tool name	Description
(SP8P) Slide hammer   LDIA0133E	<ul style="list-style-type: none"> <li>• Removing front oil seal</li> <li>• Removing side oil seal</li> </ul>
Power tool   PIIB1407E	Loosening nuts, screws and bolts

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

[FRONT FINAL DRIVE: M205]

## SYMPTOM DIAGNOSIS

### NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

#### NVH Troubleshooting Chart

INFOID:0000000011290936

Use the chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

Symptom	Noise		Reference page
x	x	Gear tooth rough	<a href="#">DLN-214, "Disassembly and Assembly"</a>
x	x	Gear contact improper	<a href="#">DLN-214, "Disassembly and Assembly"</a>
x	x	Tooth surfaces worn	<a href="#">DLN-214, "Disassembly and Assembly"</a>
x	x	Incorrect backlash	<a href="#">DLN-230, "Inspection and Adjustment"</a>
x	x	Companion flange excessive runout	<a href="#">DLN-214, "Disassembly and Assembly"</a>
x	x	Gear oil improper	<a href="#">DLN-207, "Checking Differential Gear Oil"</a>
x	x	PROPELLER SHAFT	<a href="#">DLN-192, "NVH Troubleshooting Chart"</a>
x	x	FRONT AXLE	<a href="#">FAX-5, "NVH Troubleshooting Chart"</a>
x	x	FRONT SUSPENSION	<a href="#">FSU-5, "NVH Troubleshooting Chart"</a>
x	x	TIRES	<a href="#">WT-47, "NVH Troubleshooting Chart"</a>
x	x	ROAD WHEEL	<a href="#">WT-47, "NVH Troubleshooting Chart"</a>
x	x	DRIVE SHAFT	<a href="#">FAX-5, "NVH Troubleshooting Chart"</a>
x	x	BRAKES	<a href="#">BR-7, "NVH Troubleshooting Chart"</a>
x	x	STEERING	<a href="#">ST-9, "NVH Troubleshooting Chart"</a>

x: Applicable

## PERIODIC MAINTENANCE

### DIFFERENTIAL GEAR OIL

#### Changing Differential Gear Oil

INFOID:0000000011290937

#### DRAINING


1. Stop the engine.
2. Remove the drain plug from the front final drive assembly to drain the differential gear oil.
3. Install the drain plug with sealant applied on the threads to the front final drive assembly. Tighten to the specified torque. Refer to [DLN-214, "Disassembly and Assembly"](#).
  - Use High Performance Thread Sealant or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).

#### FILLING

1. Remove the filler plug from the front final drive assembly.
2. Fill the front final drive assembly with new differential gear oil until the level reaches the specified level near the filler plug hole.

**Differential gear oil grade and capacity**

**: Refer to [MA-16, "FOR USA AND CANADA : Fluids and Lubricants"](#) (United States and Canada), [MA-18, "FOR MEXICO : Fluids and Lubricants"](#) (Mexico).**

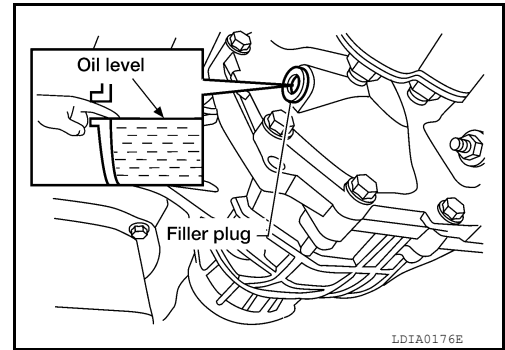

3. Install the filler plug with sealant applied on the threads to the front final drive assembly. Tighten to the specified torque. Refer to [DLN-214, "Disassembly and Assembly"](#).
  - Use High Performance Thread Sealant or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).

#### Checking Differential Gear Oil

INFOID:0000000011290938


#### DIFFERENTIAL GEAR OIL LEAKAGE AND LEVEL

1. Make sure that differential gear oil is not leaking from the front final drive assembly or around it.
2. Check the differential gear oil level from the filler plug hole as shown.

**CAUTION:**

**Do not start engine while checking differential gear oil level.**

3. Install the filler plug with sealant applied on the threads to the front final drive assembly. Tighten to the specified torque. Refer to [DLN-214, "Disassembly and Assembly"](#).
  - Use High Performance Thread Sealant or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).

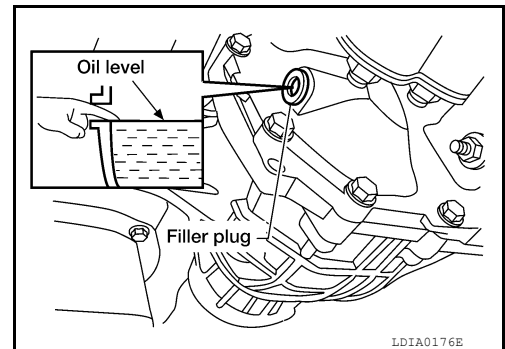

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## REMOVAL AND INSTALLATION


### SIDE OIL SEAL

#### Removal and Installation


INFOID:000000011290939

#### REMOVAL


1. Remove the front final drive assembly. Refer to [DLN-212, "Removal and Installation"](#).
2. Remove the differential side shaft and differential side flange using suitable tool.

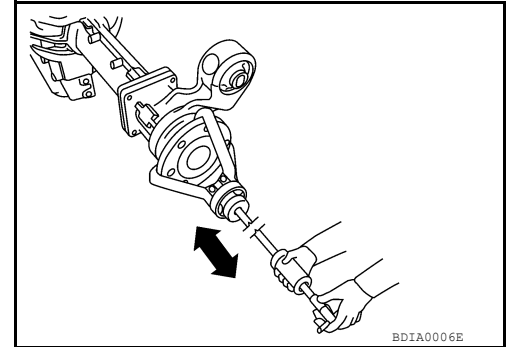

3. Place a small hole in the side oil seal case using suitable tool.

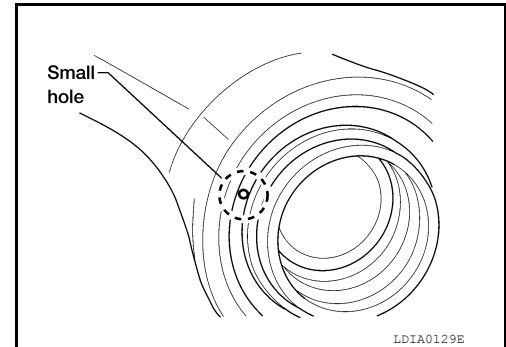

4. Remove the side oil seal using suitable tool as shown.

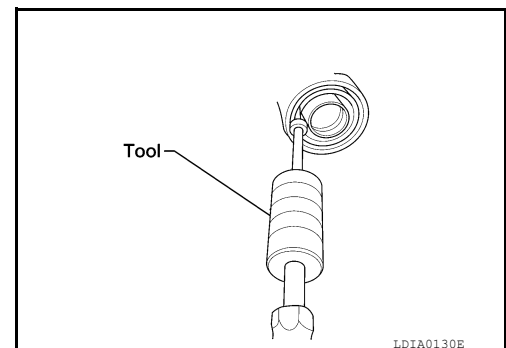

#### INSTALLATION

1. Apply multi-purpose grease to the lips of the new side oil seal. Then drive the new side oil seal in evenly to the gear carrier using suitable tool.
 

**CAUTION:**

  - Do not reuse side oil seal.
  - Do not incline the new side oil seal when installing.
  - Apply multi-purpose grease to the lips of the new side oil seal.
2. Installation of the remaining components is in the reverse order of removal.
 

**CAUTION:**

Check the differential gear oil level after installation. Refer to [DLN-207](#).



# FRONT OIL SEAL

< REMOVAL AND INSTALLATION >

[FRONT FINAL DRIVE: M205]

## FRONT OIL SEAL

### Removal and Installation

INFOID:000000011290940

#### REMOVAL

1. Separate the (RH) and (LH) drive shafts from the front final drive assembly. Properly support the drive shafts. Refer to [FAX-9, "Removal and Installation"](#) for companion flange bolt torque specification.
2. Remove the front propeller shaft. Refer to [DLN-184, "Removal and Installation"](#).
3. Measure the total preload torque. Refer to [DLN-230, "General Specification"](#).


**NOTE:**

Record the total preload torque measurement.


4. Remove the drive pinion lock nut using suitable tool.
5. Put matching marks on the companion flange and drive pinion using paint.

**CAUTION:**


Use paint to make the matching marks. Do not damage the companion flange or drive pinion.

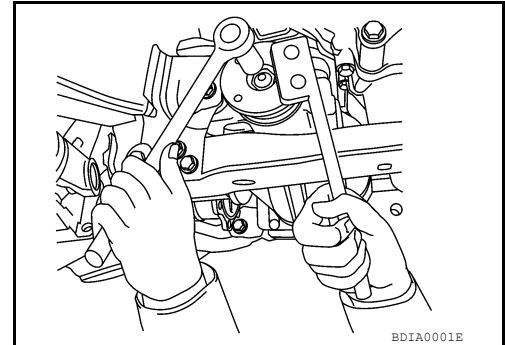


6. Remove companion flange using suitable tool.

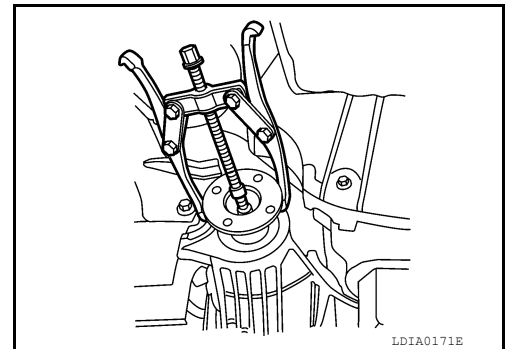

7. Place a small hole in the front oil seal case using suitable tool.

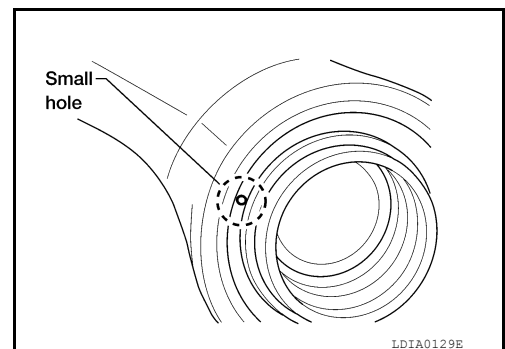

8. Remove the front oil seal using suitable tool as shown.

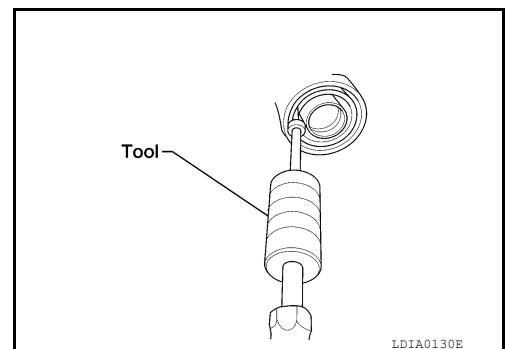

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# FRONT OIL SEAL

< REMOVAL AND INSTALLATION >

[FRONT FINAL DRIVE: M205]


## INSTALLATION

1. Apply multi-purpose grease to the lips of the new front oil seal. Then drive the new front oil seal in evenly to the gear carrier using Tool.

**Tool number** : KV38100500 (J-25273)  
: KV38102200 ( — )

### CAUTION:

- Do not reuse front oil seal.
- Do not incline the new front oil seal when installing.
- Apply multi-purpose grease to the lips of the new front oil seal.

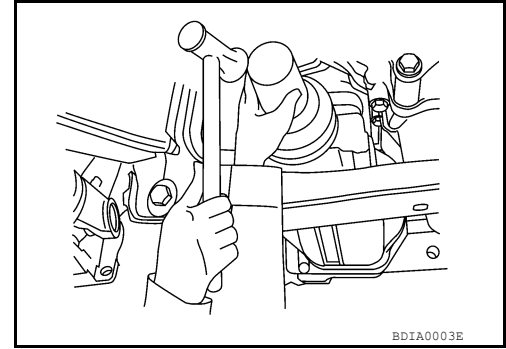

2. Install the companion flange to the drive pinion while aligning the matching marks.
3. Apply anti-corrosive oil to the threads of the drive pinion and the seating surface of the new drive pinion lock nut. Then adjust the drive pinion lock nut tightening torque using suitable tool (A), and check the total preload torque using Tool (B).


**Tool number** (B): ST3127S000 (J-25765-A)

**Total preload torque:** Refer to [DLN-230, "General Specification"](#).

- The total preload torque should be within the total preload torque specification. When not replacing the collapsible spacer, it should also be equal to the measurement taken during removal plus an additional 0.56 N·m (0.06 kg·m, 5 in-lb).
- If the total preload torque is low, tighten the drive pinion lock nut in 6.8 N·m (0.69 kg·m, 60 in-lb) increments until the total preload torque is met.

### CAUTION:

- Do not reuse drive pinion lock nut.
- Apply anti-corrosive oil to the threads of the drive pinion and the seating surface of the new drive pinion lock nut.
- Adjust the drive pinion lock nut tightening torque to the lower limit first. Do not exceed the drive pinion lock nut specified torque. Refer to [DLN-214, "Disassembly and Assembly"](#).
- Do not loosen drive pinion lock nut to adjust the total preload torque. If the drive pinion lock nut torque or the total preload torque exceeds the specifications, replace the collapsible spacer and tighten it again to adjust. Refer to [DLN-214, "Disassembly and Assembly"](#).
- After adjustment, rotate drive pinion back and forth 2 to 3 times to check for unusual noise, rotation malfunction, and other malfunctions.

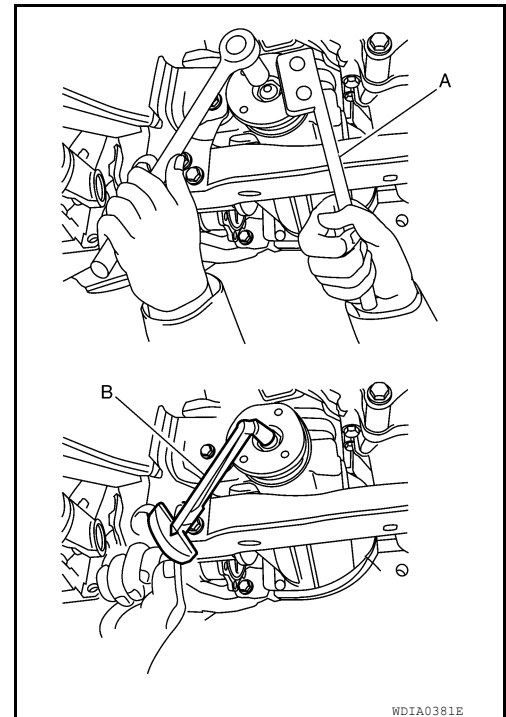

4. Installation of the remaining components is in the reverse order of removal.

### CAUTION:

Check the differential gear oil level after installation. Refer to [DLN-207, "Checking Differential Gear Oil"](#).

# CARRIER COVER

< REMOVAL AND INSTALLATION >

[FRONT FINAL DRIVE: M205]

## CARRIER COVER

### Removal and Installation

INFOID:000000011290941


#### REMOVAL

1. Drain differential gear fluid. Refer to [DLN-207, "Changing Differential Gear Oil"](#).
2. Remove the front final drive assembly. Refer to [DLN-212, "Removal and Installation"](#).
3. Remove the carrier cover bolts and separate the carrier cover from the gear carrier using Tool.

**Tool number** : KV10111100 (J-37228)

#### CAUTION:

- Do not damage the mating surface.
- Do not insert flat-bladed screwdriver, this will damage the mating surface.

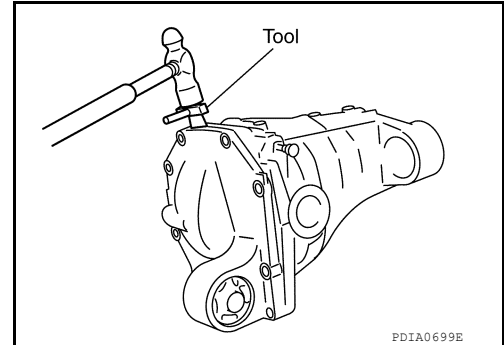

#### INSTALLATION

1. Apply 3 mm (0.12 in) bead of sealant to the mating surface of the carrier cover as shown.
  - Use Genuine Silicone RTV or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).


#### CAUTION:

**Remove any old sealant adhering to the mating surfaces. Also remove any moisture, oil, or foreign material adhering to the application and mating surfaces.**

2. Install the carrier cover to the gear carrier. Tighten the bolts to the specified torque. Refer to [DLN-214, "Disassembly and Assembly"](#).
3. Install the front final drive assembly. Refer to [DLN-212, "Removal and Installation"](#).

#### CAUTION:

**Fill the front final drive assembly with recommended differential gear oil. Refer to [DLN-207, "Checking Differential Gear Oil"](#).**

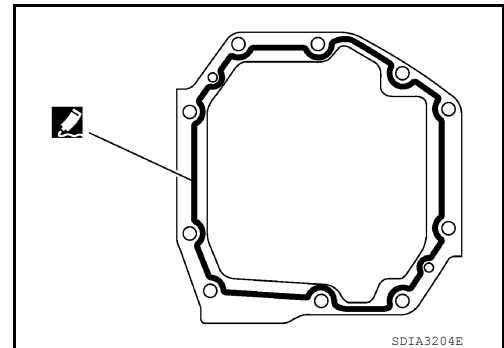

# FRONT FINAL DRIVE

< UNIT REMOVAL AND INSTALLATION >


[FRONT FINAL DRIVE: M205]

## UNIT REMOVAL AND INSTALLATION

### FRONT FINAL DRIVE

#### Removal and Installation

INFOID:000000011290942

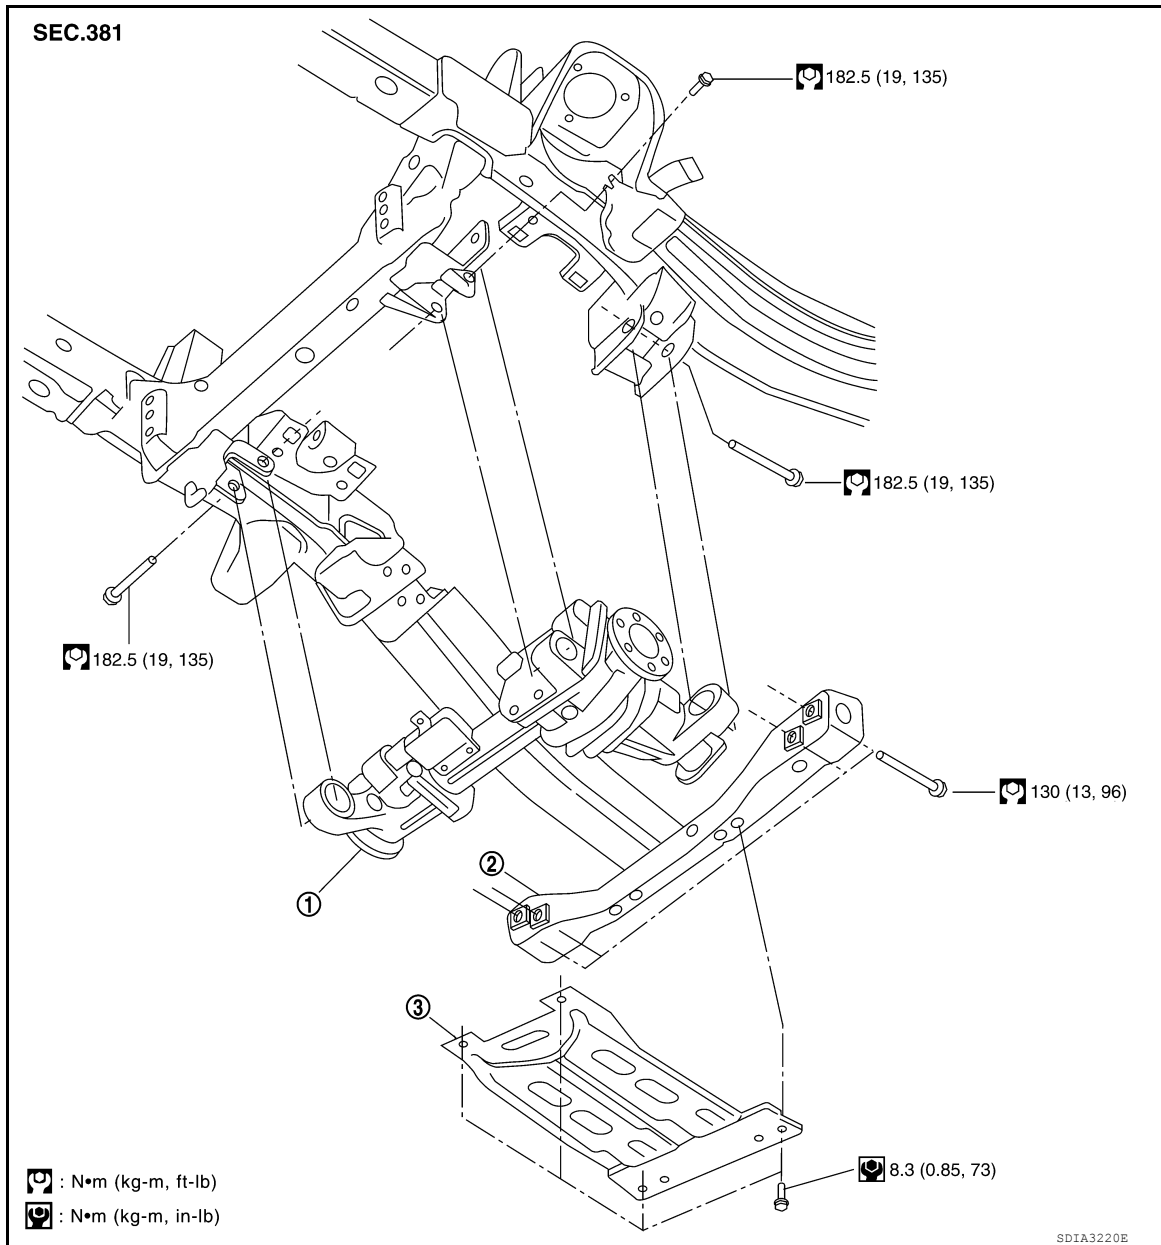

1. Front final drive assembly

2. Front cross member

3. Under cover (if equipped)

#### REMOVAL

1. Remove under cover (if equipped).
2. Remove the drive shafts from the front final drive assembly. Refer to [FAX-9, "Removal and Installation"](#).
3. Remove the front cross member.
4. Remove the front propeller shaft from the front final drive assembly. Refer to [DLN-184, "Removal and Installation"](#).
5. Disconnect the vent hose from the front final drive assembly.
6. Support the front final drive assembly using a suitable jack.

## FRONT FINAL DRIVE


### < UNIT REMOVAL AND INSTALLATION >

[FRONT FINAL DRIVE: M205]

7. Remove the front final drive assembly bolts (←), then remove the front final drive assembly.

**CAUTION:**

**Support the front final drive assembly while removing using a suitable jack.**

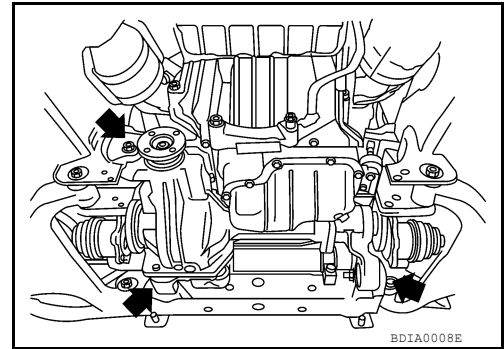

### INSTALLATION

Installation is in the reverse order of removal.

**CAUTION:**

- Make sure there are no pinched or restricted areas on the breather hose caused by folding or bending when installing it.
- Check the front final drive assembly fluid level and add the specified fluid as necessary. Refer to [DLN-207, "Checking Differential Gear Oil"](#).

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

# FRONT FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: M205]


## UNIT DISASSEMBLY AND ASSEMBLY

### FRONT FINAL DRIVE

#### Disassembly and Assembly

INFOID:000000011290943

#### COMPONENTS

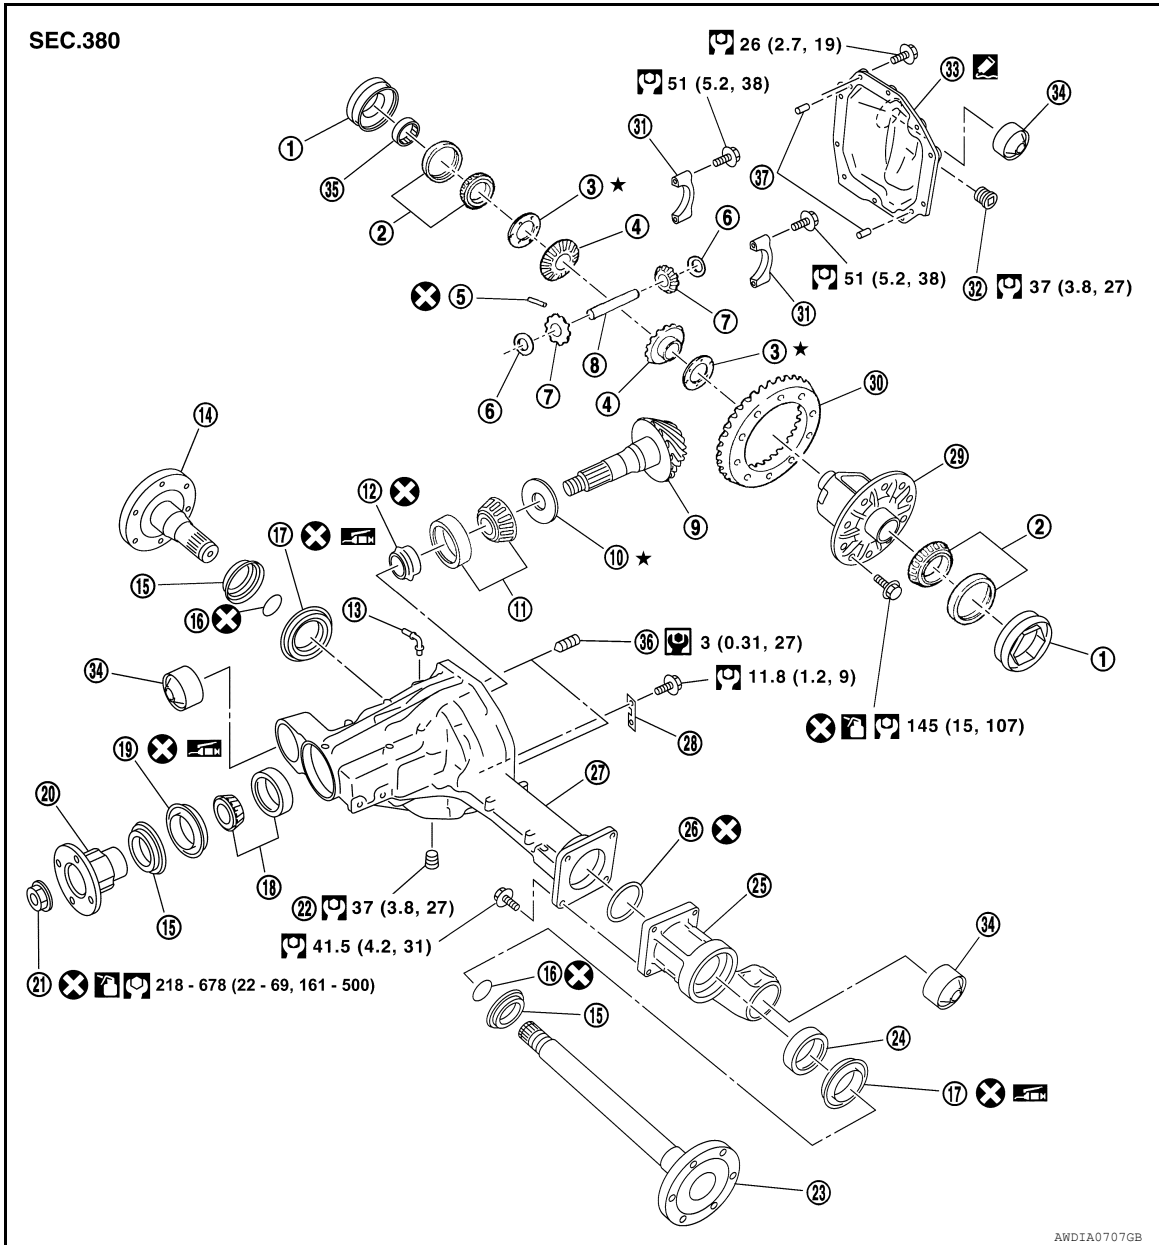

- |                                          |                               |                                     |
|------------------------------------------|-------------------------------|-------------------------------------|
| 1. Side bearing adjuster                 | 2. Side bearing               | 3. Side gear thrust washer          |
| 4. Side gear                             | 5. Lock pin                   | 6. Pinion mate thrust washer        |
| 7. Pinion mate gear                      | 8. Pinion mate shaft          | 9. Drive pinion                     |
| 10. Drive pinion height adjusting washer | 11. Drive pinion rear bearing | 12. Collapsible spacer              |
| 13. Breather tube                        | 14. Differential side flange  | 15. Dust shield                     |
| 16. Circular clip                        | 17. Side oil seal             | 18. Drive pinion front bearing      |
| 19. Front oil seal                       | 20. Companion flange          | 21. Drive pinion lock nut           |
| 22. Drain plug                           | 23. Differential side shaft   | 24. Differential side shaft bearing |
| 25. Extension tube                       | 26. O-ring                    | 27. Gear carrier                    |

# FRONT FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: M205]

- |                      |                       |                   |
|----------------------|-----------------------|-------------------|
| 28. Plate            | 29. Differential case | 30. Drive gear    |
| 31. Side bearing cap | 32. Filler plug       | 33. Carrier cover |
| 34. Bushing          | 35. Bearing           | 36. Screw         |
| 37. Dowel pin        |                       |                   |

## ASSEMBLY INSPECTION AND ADJUSTMENT

- Drain the differential gear oil before inspection and adjustment. Refer to [DLN-207, "Changing Differential Gear Oil"](#).
- Remove and install the carrier cover as necessary for inspection and adjustment. Refer to [DLN-211, "Removal and Installation"](#).

### Total Preload Torque

1. Install the differential side shaft and differential side flange if necessary.

**CAUTION:**

**The differential side shaft and differential side flange must be installed in order to measure total preload torque.**

2. Rotate the drive pinion back and forth 2 to 3 times to check for unusual noise and rotation malfunction.
3. Rotate the drive pinion at least 20 times to check for smooth operation of the bearings.
4. Measure total preload torque using Tool.


**Tool number : ST3127S000 (J-25765-A)**

**Total preload torque**

**: Refer to [DLN-230, "Inspection and Adjustment"](#)**

**NOTE:**

**Total preload torque = Drive pinion bearing preload torque + Side bearing preload torque**

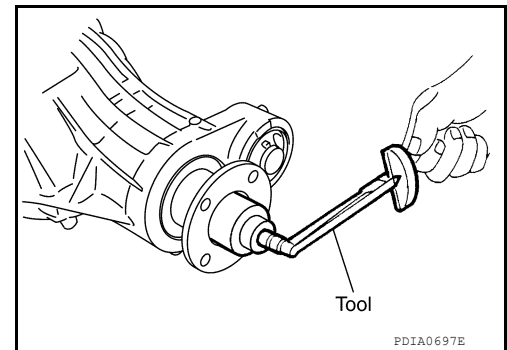

- If the measured value is out of the specification, check and adjust each part. Adjust the drive pinion bearing preload torque first, then adjust the side bearing preload torque.

**If the total preload torque is greater than specification**

**On drive pinion bearings: Replace the collapsible spacer.**

**On side bearings: Loosen the side bearing adjuster by the same amount on each side.**

**If the total preload torque is less than specification**

**On drive pinion bearings: Tighten the drive pinion lock nut.**

**On side bearings: Tighten the side bearing adjuster by the same amount on each side.**

### Drive Gear Runout


1. Fit a dial indicator to the drive gear back face.
2. Rotate the drive gear to measure runout.

**Runout limit: 0.08 mm (0.0031 in) or less**

- If the runout is outside of the limit, check the condition of the drive gear assembly. Foreign material may be caught between the drive gear and differential case, or the differential case or drive gear may be deformed.

**CAUTION:**

**Replace drive gear and drive pinion as a set.**

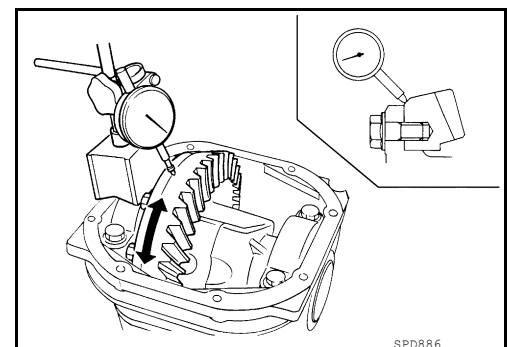

### Tooth Contact

# FRONT FINAL DRIVE


< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: M205]

1. Apply red lead to the drive gear.

**NOTE:**


Apply red lead to both faces of three to four gears, at four locations evenly spaced on the drive gear.

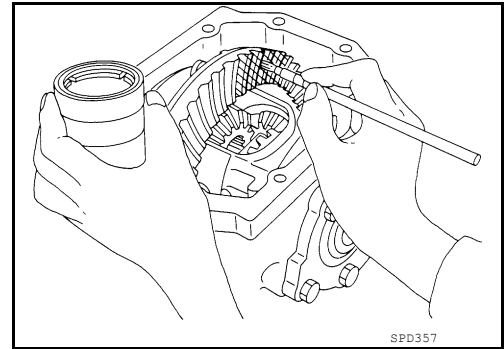


2. Rotate the drive gear back and forth several times. Then check for correct drive pinion to drive gear tooth contact as shown.

**CAUTION:**

**Check tooth contact on drive side and reverse side.**

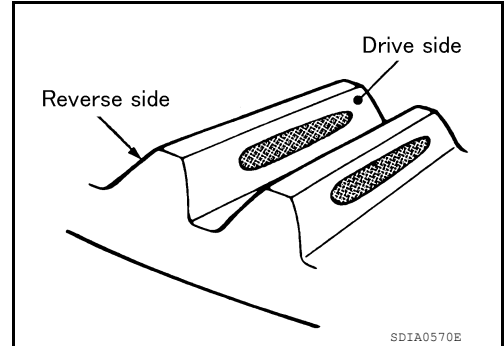


3. If the tooth contact is improperly adjusted, follow the procedure below to adjust the drive pinion height (dimension X).

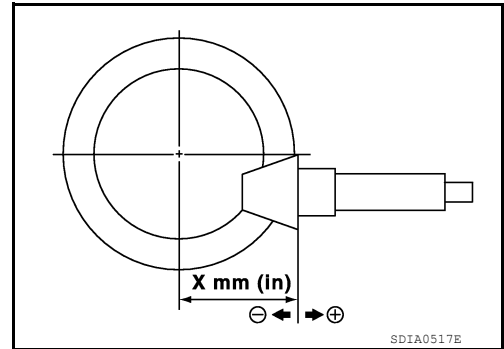


- If the tooth contact is near the face (face contact), or near the heel (heel contact), use a thicker drive pinion height adjusting washer to move drive pinion closer to the drive gear.

Refer to [DLN-230, "Inspection and Adjustment"](#).

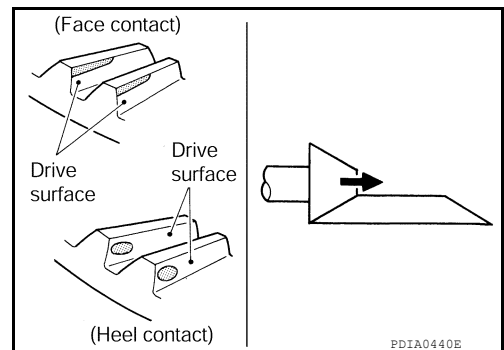

- If the tooth contact is near the flank (flank contact), or near the toe (toe contact), use a thinner drive pinion height adjusting washer to move the drive pinion farther from the drive gear.

Refer to [DLN-230, "Inspection and Adjustment"](#).

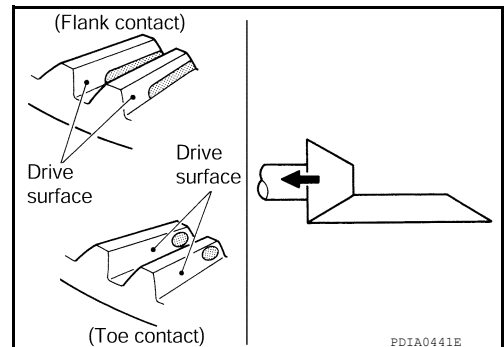



# FRONT FINAL DRIVE


< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: M205]

## Backlash

1. Fit a dial indicator to the drive gear face to measure the backlash.

**Backlash:**            **0.12 - 0.20 mm (0.0050 - 0.0078 in)**

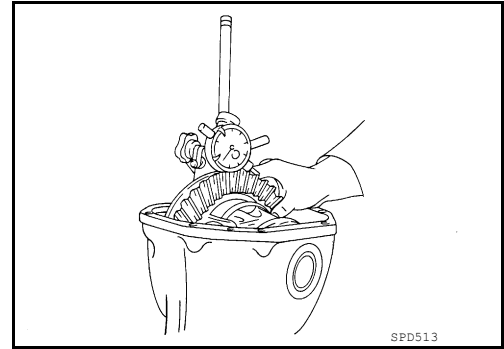

- If the backlash is outside of the specification, adjust each side bearing adjuster.

**If the backlash is greater than specification:**


**Loosen side bearing adjuster A and tighten side bearing adjuster B by the same amount.**

**If the backlash is less than specification:**

**Loosen side bearing adjuster B and tighten side bearing adjuster A by the same amount.**

**CAUTION:**

**Do not change the side bearing adjusters by different amounts as it will change the side bearing preload torque.**

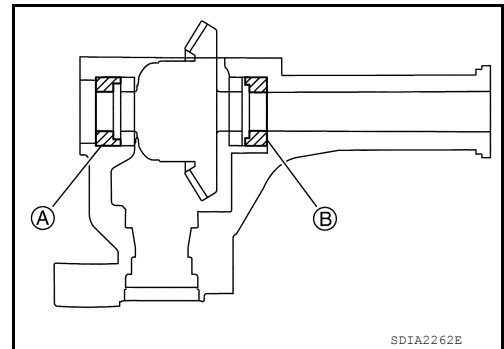

## Companion Flange Runout


1. Rotate companion flange and check for runout on the companion flange face (inner side of the bolt holes) and companion flange inner side (socket diameter) using suitable tool.

**Runout limit**

**Companion flange face:            0.10 mm (0.0039 in)**

**Companion flange inner side:    0.13 mm (0.0051 in)**

2. If the runout is outside the runout limit, follow the procedure below to adjust.
  - a. Rotate the companion flange on the drive pinion by 90°, 180° and 270° while checking for the position where the runout is minimum.
  - b. If the runout is still outside of the runout limit after the companion flange has been rotated on the drive pinion, possible cause could be an assembly malfunction of drive pinion and drive pinion bearing or a malfunctioning drive pinion bearing.
  - c. If the runout is still outside of the runout limit after repair of the assembly of drive pinion and drive pinion bearing or drive pinion bearing, replace the companion flange.

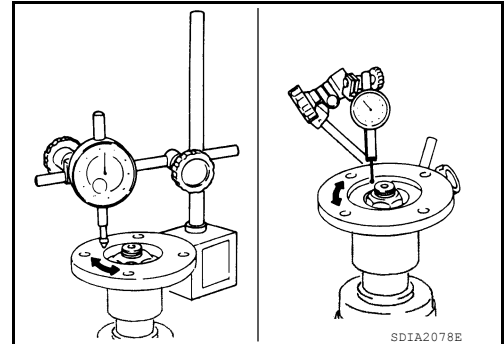

## DISASSEMBLY

### Differential Assembly

1. Drain the differential gear oil if necessary.


A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# FRONT FINAL DRIVE


< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: M205]


2. Remove the differential side shaft and differential side flange using suitable tool.

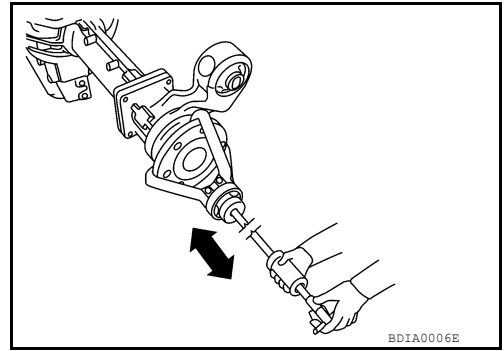


3. Remove the extension tube and O-ring from the gear carrier.  
**CAUTION:**  
**Do not reuse O-ring.**

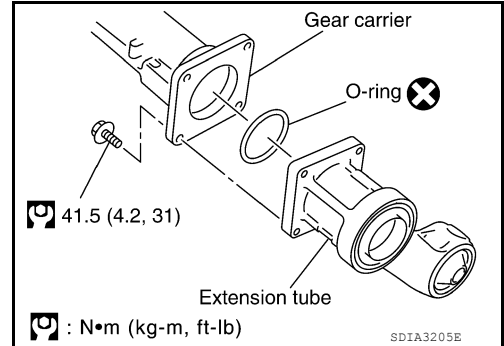

4. Place a small hole in the side oil seal case using suitable tool.

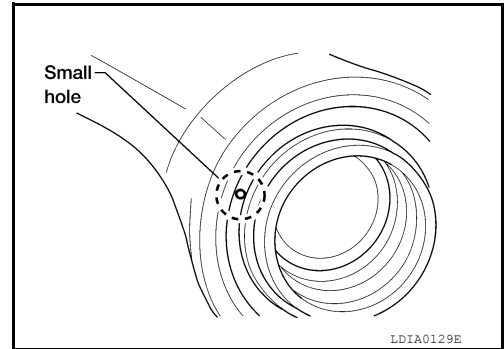

5. Remove the side oil seal using suitable tool as shown.

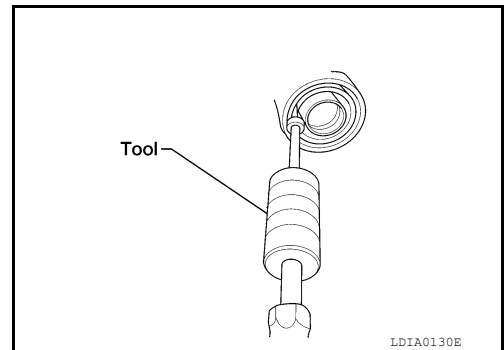


6. Remove the carrier cover bolts and separate the carrier cover from the gear carrier using Tool.

**Tool number** : KV1011100 (J-37228)

**CAUTION:**

- Do not damage the mating surface.
- Do not insert flat-bladed screwdriver, this will damage the mating surface.

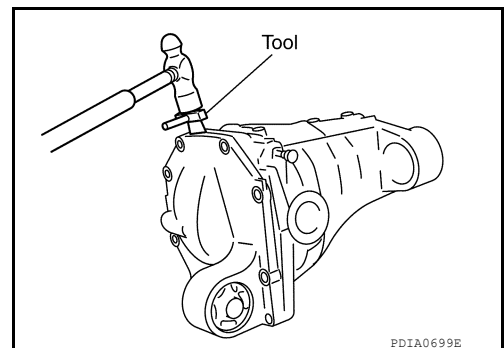

# FRONT FINAL DRIVE


## < UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: M205]


7. For proper reinstallation, paint matching marks on one side of the side bearing cap and gear carrier.

**CAUTION:**


- For matching marks, use paint. Do not damage side bearing cap or gear carrier.
- Side bearing caps are line-board during manufacture. The matching marks are used to reinstall them in their original positions.

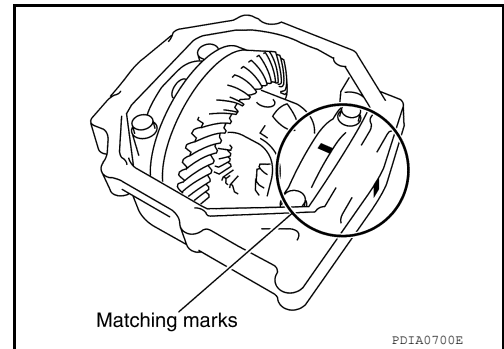

8. Remove the side bearing caps.

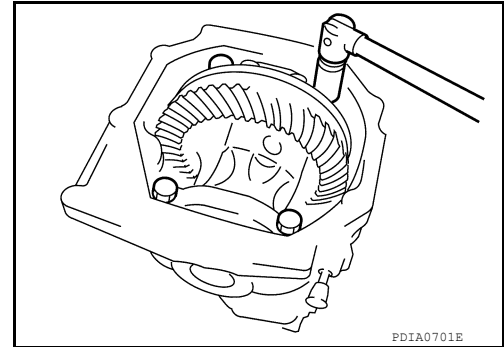


9. Remove the side bearing adjuster.

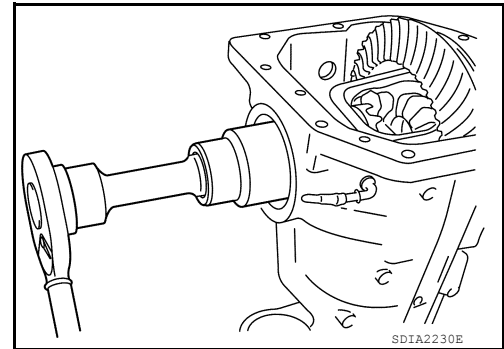

10. Lift the differential case assembly out of the gear carrier.

**CAUTION:**

Keep side bearing outer races together with side bearing inner races. Do not mix them up.

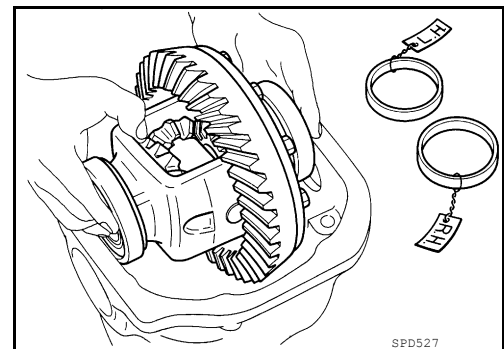


11. Remove side bearing inner race using Tools as shown.

Tool number (A): ST33081000 ( — )

(B): ST30021000 ( — )

**CAUTION:**

- Do not remove side bearing inner race unless it is being replaced.
- Place copper plates between the vise and the side bearing inner race and drive gear to prevent damage.

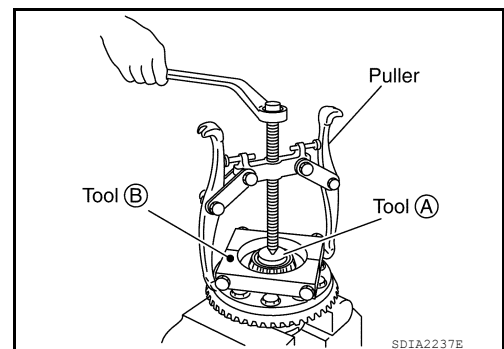

A  
B  
C  
DLN

E  
F  
G  
H  
I  
J  
K

L  
M  
N  
O  
P

# FRONT FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: M205]

- Engage puller jaws in groove to prevent damage to bearing.
- Keep side bearing outer races together with side bearing inner races. Do not mix them up.

12. For proper reinstallation, paint matching marks on the differential case and drive gear.

**CAUTION:**


**Use paint for matching marks. Do not damage differential case or drive gear.**

13. Remove the drive gear bolts (←).


14. Tap the drive gear off the differential case using suitable tool.

**CAUTION:**


**Tap evenly all around to keep drive gear from bending.**

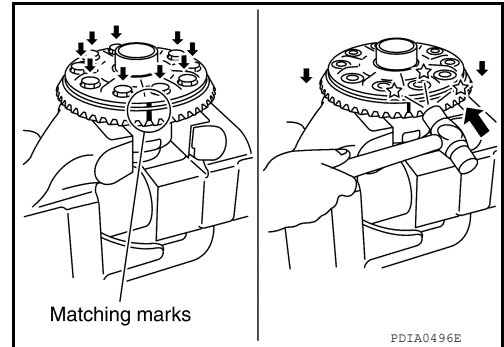


15. Remove the lock pin of the pinion mate shaft from the drive gear side using suitable tool.

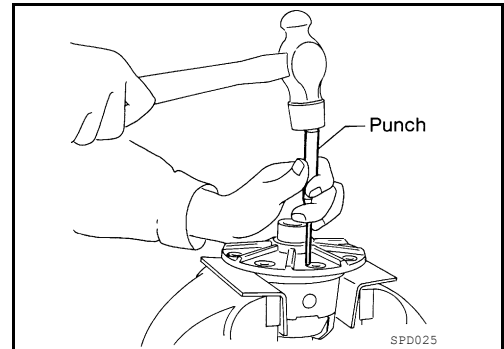

16. Remove the pinion mate shaft.

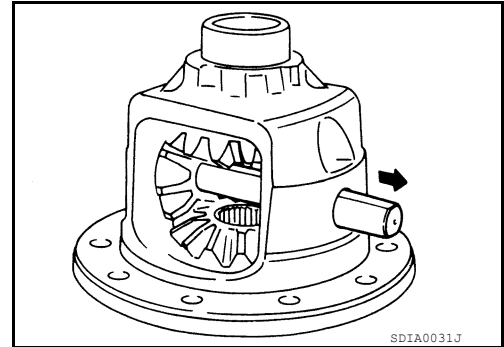

17. Turn the pinion mate gear, then remove the pinion mate gear, pinion mate thrust washer, side gear and side gear thrust washer from the differential case.

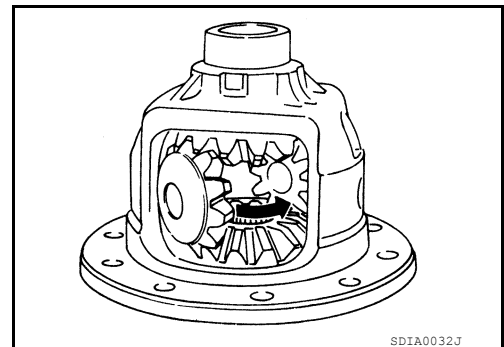

## Drive Pinion Assembly


1. Remove the differential assembly.

# FRONT FINAL DRIVE


## < UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: M205]


2. Remove the drive pinion lock nut using suitable tool.
3. Put matching marks on the companion flange and drive pinion using paint.  
**CAUTION:**  
Use paint to make the matching marks. Do not damage the companion flange or drive pinion.

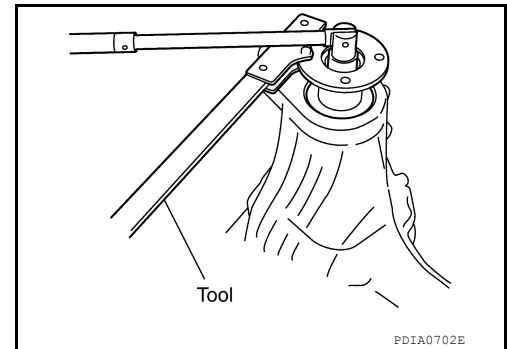

4. Remove the companion flange using suitable tool.

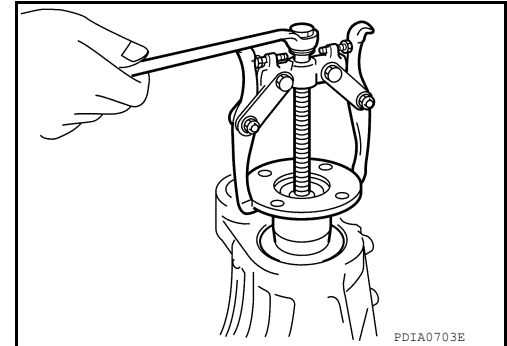


5. Press the drive pinion assembly (with rear inner bearing race and collapsible spacer) out of the gear carrier.  
**CAUTION:**  
Do not drop drive pinion assembly.

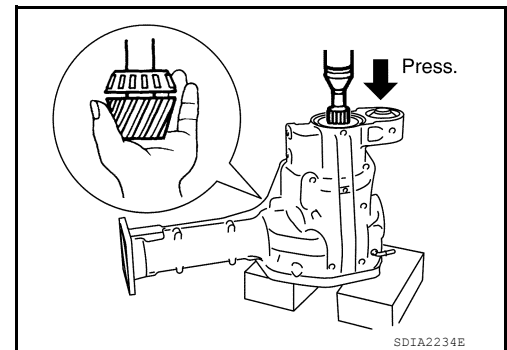


6. Remove the drive pinion rear bearing inner race and drive pinion height adjusting washer using Tool.

Tool number : ST30021000 ( — )

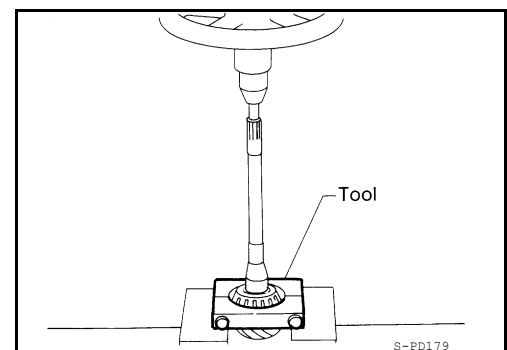

7. Place a small hole in the front oil seal case using suitable tool.

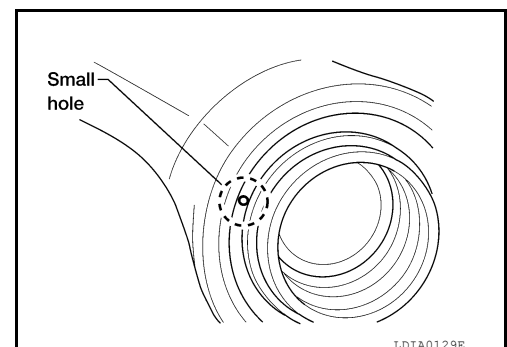


A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## FRONT FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: M205]


8. Remove the front oil seal using suitable tool as shown.

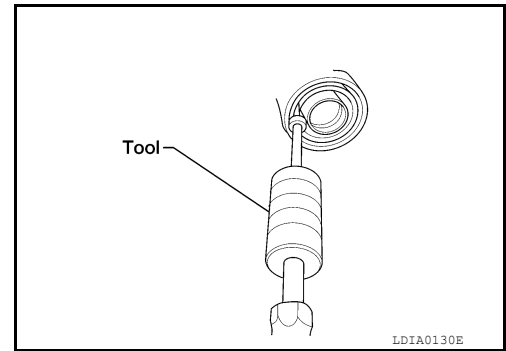

9. Remove the drive pinion front bearing inner race.  
10. Remove the drive pinion front bearing outer race using Tool as shown. Locate the driver on the back edge of the drive pinion front bearing outer race, then drive the drive pinion front bearing outer race out.

**Tool number** (A): — (C-4171)  
(B): — (D-103)


**CAUTION:**  
Do not damage gear carrier.

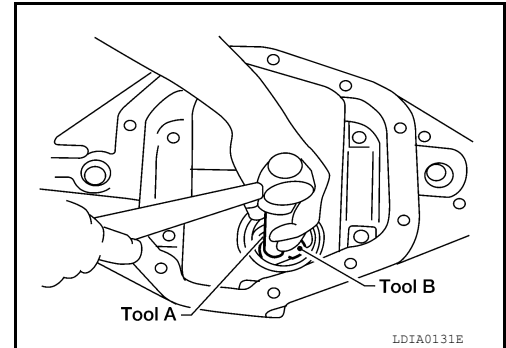

11. Remove the drive pinion rear bearing outer race using Tool as shown. Locate the driver on the back edge of the drive pinion rear bearing outer race, then drive the drive pinion rear bearing outer race out.

**Tool number** (A): — (C-4171)  
(B): — (C-4307)

**CAUTION:**  
Do not damage gear carrier.

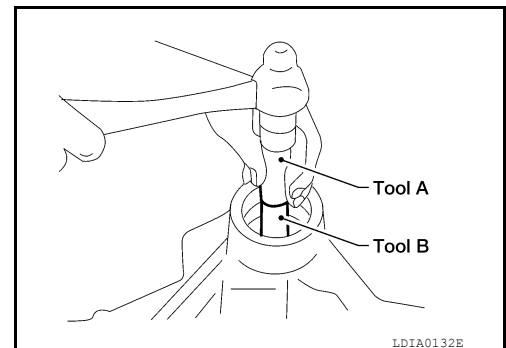

### INSPECTION AFTER DISASSEMBLY

Clean the disassembled parts. Then inspect the parts for wear or damage. If wear or damage are found, follow the measures below.

#### Drive Pinion and Drive Gear

- If the drive pinion and drive gear teeth do not mesh or line-up correctly, determine the cause and adjust, repair, or replace as necessary.
- If the drive pinion or drive gear are worn, cracked, damaged, pitted or chipped (by friction) noticeably, replace with new drive pinion and drive gear.
- Drive pinion and drive gear are supplied in matched sets only. Matching numbers on both drive pinion and drive gear are etched for verification. If a new drive pinion and drive gear set are being used, verify the numbers of each drive pinion and drive gear before proceeding with assembly.

#### Bearing

- If bearings are chipped (by friction), pitted, worn, rusted, scratched, or unusual noise is coming from bearing, replace with new bearing assembly (as a new set).
- Bearing must be replaced with a new one whenever disassembled.

#### Side Gear and Pinion Mate Gear

- If any cracks or damage are found on the surface of the teeth, replace with new one.
- If any worn or chipped marks are found on the side of the side gear and pinion mate gear which contact the thrust washer, replace with new one.
- Replace both side gear and pinion mate gear as a set when replacing side gear or pinion mate gear.

# FRONT FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: M205]

Side Gear Thrust Washer and Pinion Mate Thrust Washer

- If any chips (by friction), damage, or unusual wear are found, replace with new one.

Gear Carrier

- If any wear or cracks are found on the contact sides of gear carrier, replace with new one.

Companion Flange


- If any chips (about 0.1mm, 0.004 in) or other damage on the companion flange surface which contacts the front oil seal lips are found, replace with new one.

## ADJUSTING AND SELECTING WASHERS

Side Gear Back Clearance

- Assemble the differential parts if they are disassembled.

1. Place the differential case straight up so that the side gear to be measured is upward.

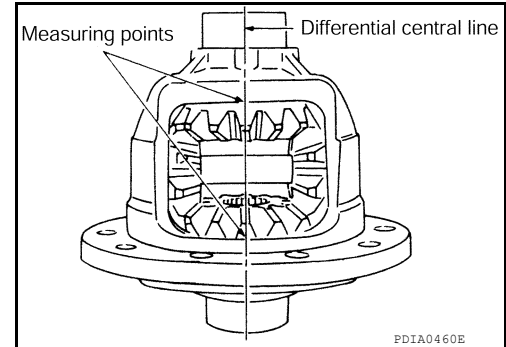

2. Using feeler gauges, measure the clearance between the side gear back and differential case at three different points, while rotating the side gear. Average the three readings to calculate the clearance. (Measure the clearance of the other side as well.)

**Side gear back clearance: 0.20 mm (0.0079 in) or less**

- If the side gear back clearance is outside of the specification, use a thicker or thinner side gear thrust washer to adjust. Refer to [DLN-230, "Inspection and Adjustment"](#).

**If the side gear back clearance is greater than specification:**

**Use a thicker side gear thrust washer.**

**If the side gear back clearance is less than specification:**

**Use a thinner side gear thrust washer.**


### CAUTION:

- Insert feeler gauges with the same thickness on both sides to prevent side gear from tilting.
- Each gear should rotate smoothly without excessive resistance during differential motion.
- Select a side gear thrust washer for right and left individually.

### NOTE:

Side gear back clearance is clearance between side gear and differential case for adjusting side gear backlash.

Drive Pinion Height

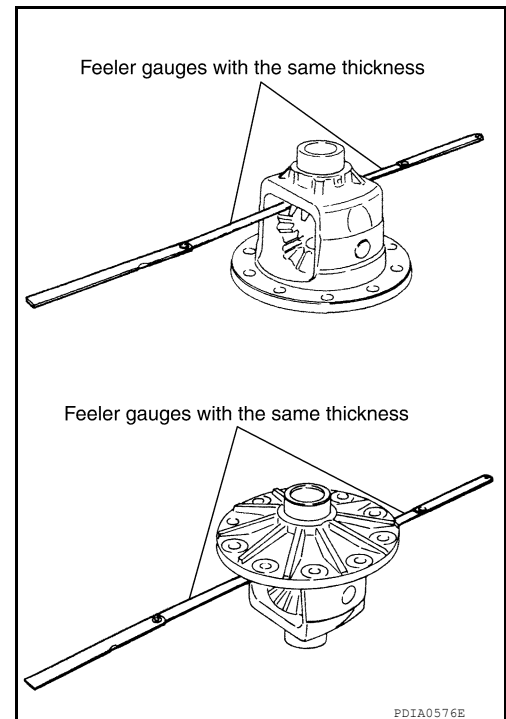


A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# FRONT FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: M205]

- Drive gear and drive pinion are supplied in matched sets only. Matching numbers on both drive pinion and drive gear are etched for verification. If a new gear set is being used, verify the numbers of each drive pinion and drive gear before proceeding with assembly.

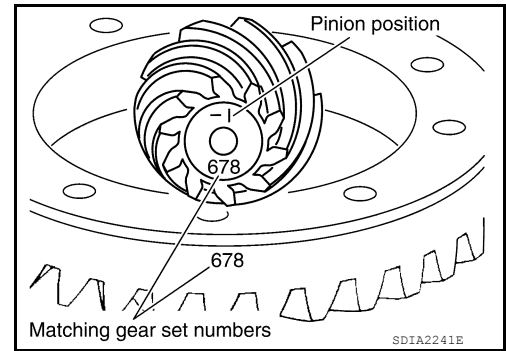

- The mounting distance from the centerline of the drive gear to the back face of the drive pinion for the M205 final drive assembly is 103.5 mm (4.0748 inches).  
On the button end of each drive pinion, there is etched a plus (+) number, a minus (-) number, or a zero (0), which indicates the best running position for each particular gear set. This dimension is controlled by a selective drive pinion height adjusting washer between the drive pinion rear bearing inner race and drive pinion.  
For example: If a drive pinion is etched m+8 (+3), it would require 0.08 mm (0.003 inch) less drive pinion height adjusting washer than a drive pinion etched "0". This means decreasing drive pinion height adjusting washer thickness; increases the mounting distance of the drive pinion to 103.6 mm (4.0787 inches). If a drive pinion is etched m-8 (-3), it would require adding 0.08mm (0.003 inch) more to the drive pinion height adjusting washer than would be required if the drive pinion were etched "0". By adding 0.08 mm (0.003 inch), the mounting distance of the drive pinion was decreased to 103.4 mm (4.0709 inches) which is just what a m-8 (-3) etching indicated.
- To change the drive pinion height, use different drive pinion height adjusting washers which come in different thickness.
- Use the following tables as a guide for selecting the correct drive pinion height adjusting washer thickness to add or subtract from the old drive pinion height adjusting washer.

OLD DRIVE PINION MARKING	NEW DRIVE PINION MARKING mm (in)								
	-10 (-4)	-8 (-3)	-5 (-2)	-3 (-1)	0 (0)	+3 (+1)	+5 (+2)	+8 (+3)	+10 (+4)
+10 (+4)	+0.20 (+0.008)	+0.18 (+0.007)	+0.15 (+0.006)	+0.13 (+0.005)	+0.10 (+0.004)	+0.08 (+0.003)	+0.05 (+0.002)	+0.02 (+0.001)	0 (0)
+8 (+3)	+0.18 (+0.007)	+0.15 (+0.006)	+0.13 (+0.005)	+0.10 (+0.004)	+0.08 (+0.003)	+0.05 (+0.002)	+0.02 (+0.001)	0 (0)	-0.02 (-0.001)
+5 (+2)	+0.15 (+0.006)	+0.13 (+0.005)	+0.10 (+0.004)	+0.08 (+0.003)	+0.05 (+0.002)	+0.02 (+0.001)	0 (0)	-0.02 (-0.001)	-0.05 (-0.002)
+3 (+1)	+0.13 (+0.005)	+0.10 (+0.004)	+0.08 (+0.003)	+0.05 (+0.002)	+0.02 (+0.001)	0 (0)	-0.02 (-0.001)	-0.05 (-0.002)	-0.08 (-0.003)
0 (0)	+0.10 (+0.004)	+0.08 (+0.003)	+0.05 (+0.002)	+0.02 (+0.001)	0 (0)	-0.02 (-0.001)	-0.05 (-0.002)	-0.08 (-0.003)	-0.10 (-0.004)
-3 (-1)	+0.08 (+0.003)	+0.05 (+0.002)	+0.02 (+0.001)	0 (0)	-0.02 (-0.001)	-0.05 (-0.002)	-0.08 (-0.003)	-0.10 (-0.004)	-0.13 (-0.005)
-5 (-2)	+0.05 (+0.002)	+0.02 (+0.001)	0 (0)	-0.02 (-0.001)	-0.05 (-0.002)	-0.08 (-0.003)	-0.10 (-0.004)	-0.13 (-0.005)	-0.15 (-0.006)
-8 (-3)	+0.02 (+0.001)	0 (0)	-0.02 (-0.001)	-0.05 (-0.002)	-0.08 (-0.003)	-0.10 (-0.004)	-0.13 (-0.005)	-0.15 (-0.006)	-0.18 (-0.007)
-10 (-4)	0 (0)	-0.02 (-0.001)	-0.05 (-0.002)	-0.08 (-0.003)	-0.10 (-0.004)	-0.13 (-0.005)	-0.15 (-0.006)	-0.18 (-0.007)	-0.20 (-0.008)

## ASSEMBLY

Drive Pinion Assembly




# FRONT FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: M205]


1. Install drive pinion rear bearing outer race using Tools.

**Tool number** (A): ST30901000 ( — )  
(B): KV40105230 ( — )

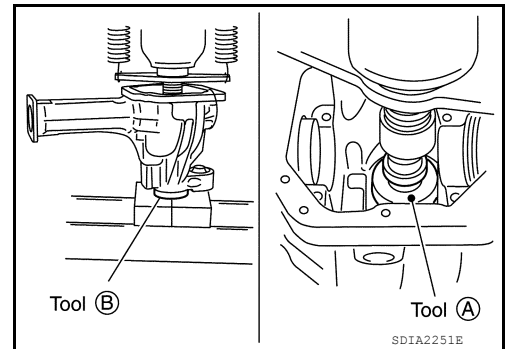

2. Install drive pinion front bearing outer race using Tools.


**Tool number** (A): ST35271000 ( — )  
(B): KV40104810 ( — )

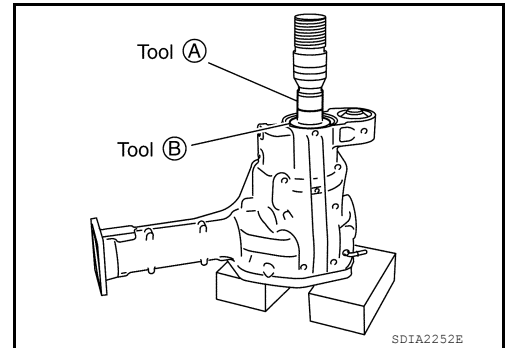


3. Select drive pinion height adjusting washer.  
4. Install the selected drive pinion height adjusting washer to the drive pinion. Press the drive pinion rear bearing inner race to it using Tool.

**Tool number** : — (C-4040)

**CAUTION:**  
Do not reuse drive pinion rear bearing inner race.

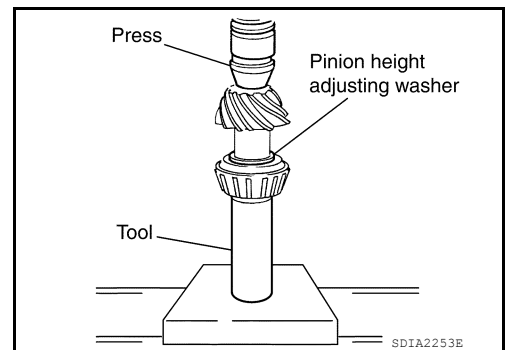

5. Install the collapsible spacer to the drive pinion.  
**CAUTION:**  
Do not reuse collapsible spacer.  
6. Apply differential gear oil to the drive pinion rear bearing, and install the drive pinion assembly to the gear carrier.  
7. Apply differential gear oil to the drive pinion front bearing, and install the drive pinion front bearing inner race to the drive pinion assembly.  
**CAUTION:**  
Do not reuse drive pinion front bearing inner race.

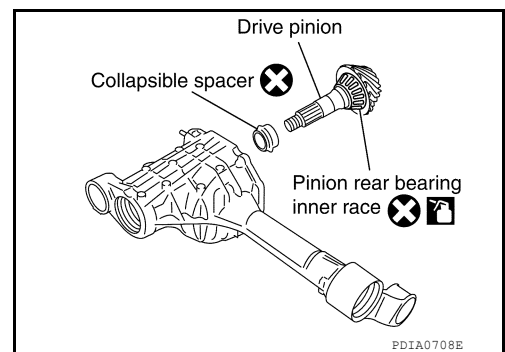


8. Apply multi-purpose grease to the lips of the new front oil seal. Then drive the new front oil seal in evenly using Tools.

**Tool number** (A): KV38100500 (J-25273)  
(B): KV38102200 ( — )

**CAUTION:**

- Do not reuse front oil seal.
- Do not incline the new front oil seal when installing.
- Apply multi-purpose grease to the lips of the new front oil seal.

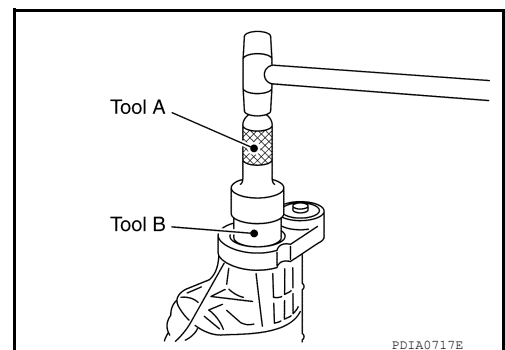


A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## FRONT FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: M205]

9. Install the companion flange to the drive pinion while aligning the matching marks. Tap the companion flange until fully seated using suitable tool.

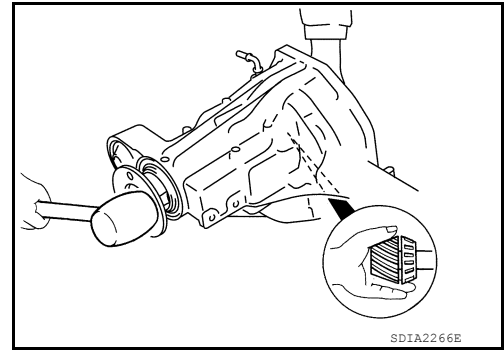

10. Apply anti-corrosive oil to the threads of the drive pinion and the seating surface of the new drive pinion lock nut. Then adjust the drive pinion lock nut tightening torque using suitable tool (A), and check the drive pinion bearing preload torque using Tool (B).


**Tool number (B): ST3127S000 (J-25765-A)**

**Drive pinion bearing preload torque:**

**2.3 - 3.4 N·m (24 - 34 kg-cm, 21 - 30 in-lb)**

**CAUTION:**


- Do not reuse drive pinion lock nut.
- Apply anti-corrosive oil to the threads of the drive pinion and the seating surface of the new drive pinion lock nut.
- Adjust the drive pinion lock nut tightening torque to the lower limit first. Do not exceed the drive pinion lock nut specified torque. Refer to [DLN-214, "Disassembly and Assembly"](#).
- If the drive pinion bearing preload torque exceeds the specified value, replace collapsible spacer and tighten it again to adjust. Do not loosen drive pinion lock nut to adjust the drive pinion bearing preload torque.
- After adjustment, rotate drive pinion back and forth 2 to 3 times to check for unusual noise, rotation malfunction, and other malfunctions.

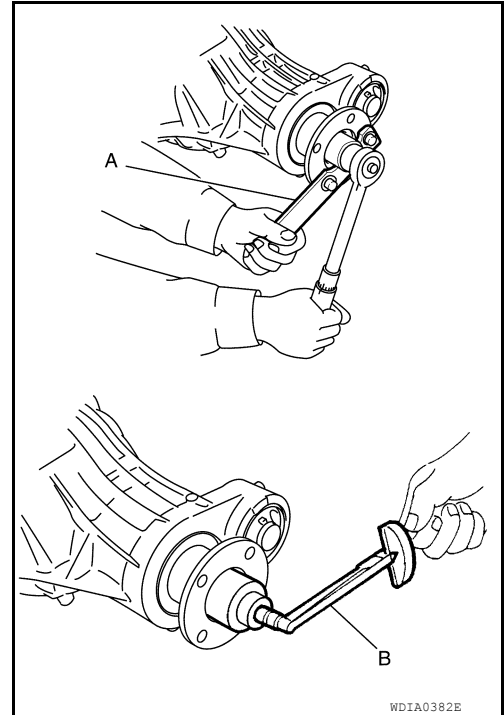

11. Check companion flange runout.  
12. Install the differential case assembly.

### Differential Assembly

1. Install side gear thrust washers with the same thickness as the ones installed prior to disassembly, or reinstall the old ones on the side gears.

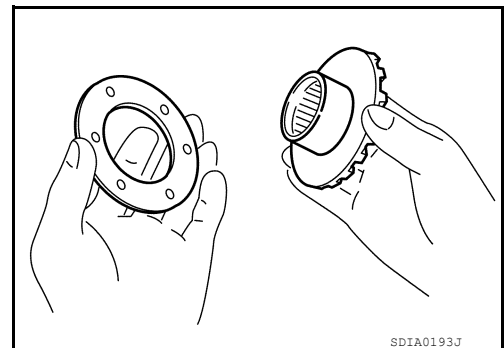


# FRONT FINAL DRIVE


## < UNIT DISASSEMBLY AND ASSEMBLY >

## [FRONT FINAL DRIVE: M205]

2. Install the side gears and side gear thrust washers into the differential case.
3. Install the pinion mate thrust washers to the two pinion mate gears. Then install the pinion mate gears with the pinion mate thrust washers by aligning them in diagonally opposite positions and rotating them into the differential case.

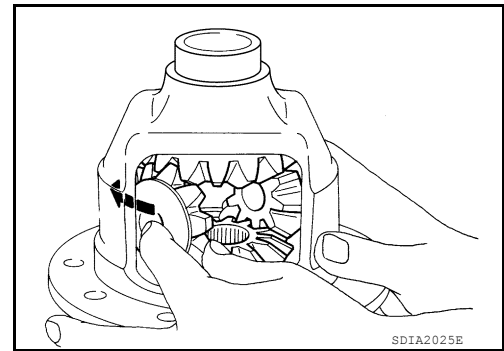


4. Install the pinion mate shaft and align the lock pin hole on the pinion mate shaft with the lock pin hole on the differential case.
5. Measure the side gear end play. If necessary, select the appropriate side gear thrust washers.

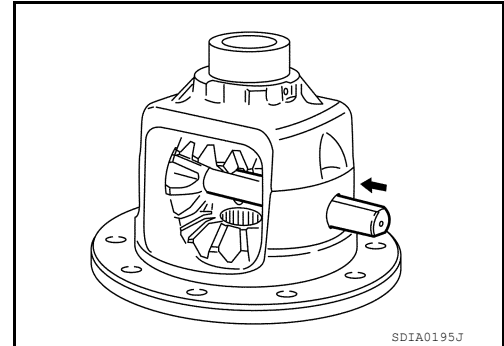


6. Drive a new lock pin into the pinion mate shaft until it is flush with the differential case using suitable tool.

**CAUTION:**

**Do not reuse lock pin.**

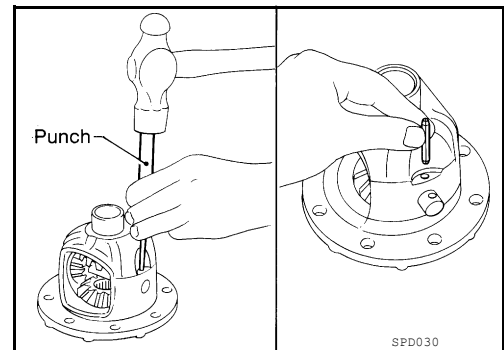


7. Align the matching mark of the differential case with the mark of the drive gear, then place the drive gear onto the differential case.

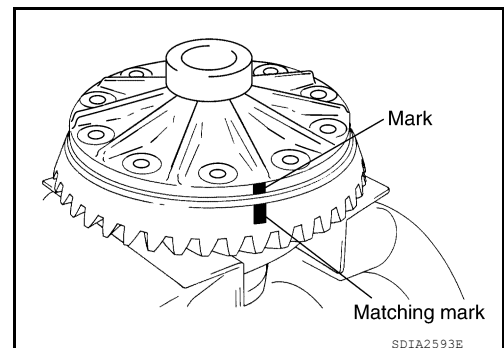

8. Install and tighten the new drive gear bolts to the specified torque. Refer to [DLN-214, "Disassembly and Assembly"](#).

**CAUTION:**

- Make sure the drive gear back and threaded holes are clean.
- Do not reuse drive gear bolts.
- Tighten new drive gear bolts in a crisscross pattern.

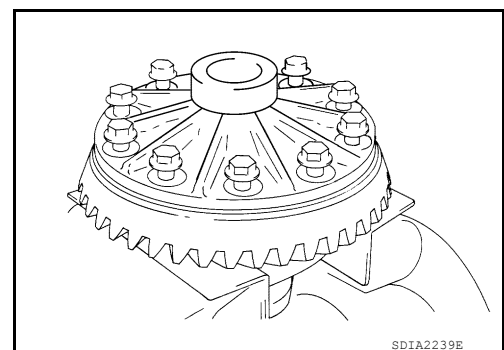

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## FRONT FINAL DRIVE


< UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: M205]

9. Press the new side bearing inner races to the differential case using Tools.


**Tool number** (A): KV38100300 (J-25523)  
(B): ST33081000 ( — )

**CAUTION:**  
Do not reuse side bearing inner races.

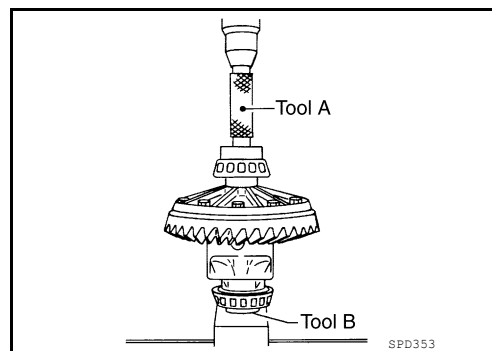


10. Install side bearing adjusters into gear carrier.  
11. Apply differential gear oil to the side bearings, and install the differential case assembly with the side bearing outer races into the gear carrier.


**CAUTION:**  
Do not reuse side bearing outer race when replacing side bearing inner race (replace as a set).

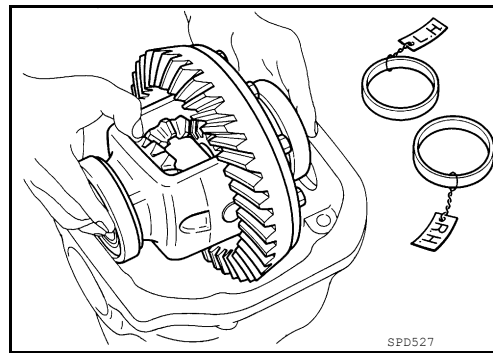

12. Install the side bearing caps with the matching marks aligned.  
**NOTE:**  
Do not tighten at this step. This allows further tightening of side bearing adjusters.

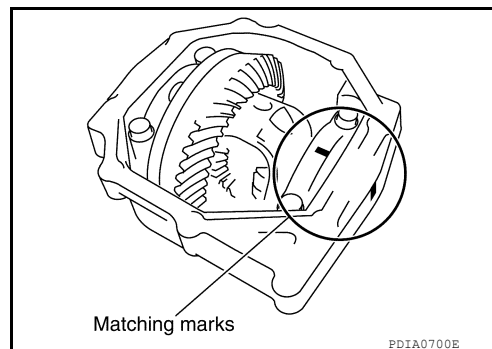

13. Tighten each side bearing adjuster alternately turning drive gear.

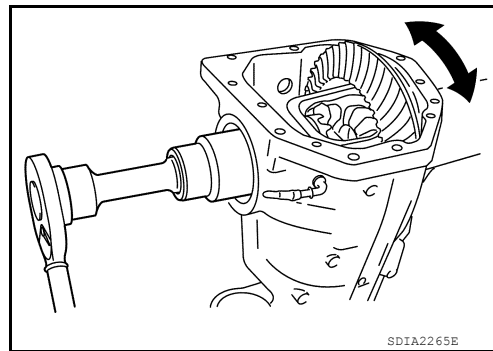


14. Check and adjust tooth contact, backlash, drive gear runout and total preload torque.  
Recheck above items.

# FRONT FINAL DRIVE

## < UNIT DISASSEMBLY AND ASSEMBLY >

[FRONT FINAL DRIVE: M205]

- After adjusting tooth contact and backlash secure side bearing adjuster with screws and tighten side bearing cap bolt to the specified torque. Refer to [DLN-214, "Disassembly and Assembly"](#).

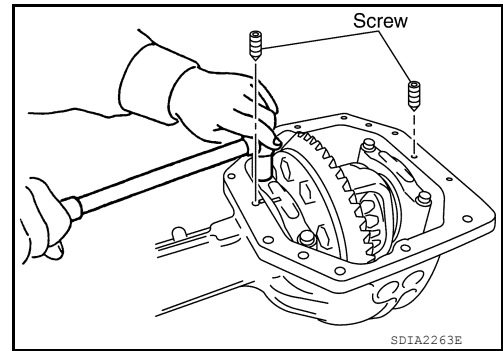

15. Apply multi-purpose grease to the lips of the new side oil seal. Then drive the new side oil seal in evenly to the gear carrier using suitable tool.


**CAUTION:**

- Do not reuse side oil seal.
- Do not incline the new side oil seal when installing.
- Apply multi-purpose grease to the lips of the new side oil seal.

16. Install the extension tube with a new O-ring.

**CAUTION:**

- Do not reuse O-ring.
- If the extension tube is being replaced, install a new axle shaft bearing.

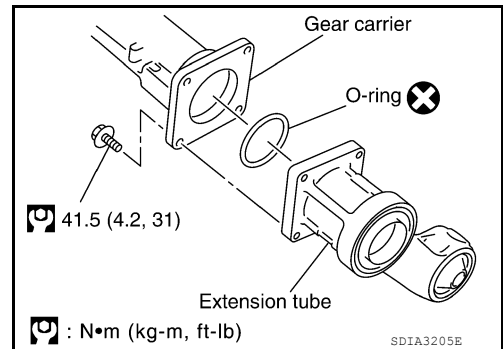


17. Apply 3 mm (0.12 in) bead of sealant to the mating surface of the carrier cover as shown.

- Use Genuine Silicone RTV or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).

**CAUTION:**

**Remove any old sealant adhering to the mating surfaces. Also remove any moisture, oil, or foreign material adhering to the application and mating surfaces.**

18. Install the carrier cover to the gear carrier. Tighten the bolts to the specified torque. Refer to [DLN-211, "Removal and Installation"](#).

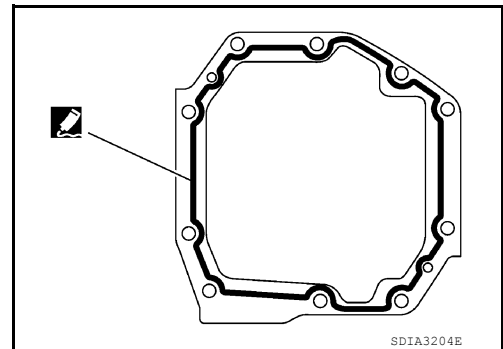

19. Install side shaft and side flange.

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[FRONT FINAL DRIVE: M205]

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### General Specification

INFOID:0000000011290944

Applied model	4WD	
	VK56DE	
	A/T	
	SV, SL	SL, Platinum
Final drive model	M205	
Gear ratio	2.937	3.357
Number of teeth (Drive gear/Drive pinion)	47/16	47/14
Differential gear oil capacity (Approx.)	1.6 ℓ (3-3/8 US pt, 2-7/8 Imp pt)	
Number of pinion gears	2	
Drive pinion adjustment spacer type	Collapsible	

#### Inspection and Adjustment

INFOID:0000000011290945

##### DRIVE GEAR RUNOUT

Unit: mm (in)

Item	Limit
Drive gear back face	0.08 (0.0031) or less

##### SIDE GEAR CLEARANCE

Unit: mm (in)

Item	Standard
Side gear back clearance (Clearance between side gear and differential case for adjusting side gear backlash)	0.20 (0.0079) or less (Each gear should rotate smoothly without excessive resistance during differential motion.)

##### PRELOAD TORQUE

(Gear ratio:2.937 type)

Unit: N·m (kg-m, in-lb)

Item	Standard
Drive pinion bearing preload torque	2.3 - 3.4 (0.24 - 0.34, 21 - 30)
Total preload torque (Total preload torque = drive pinion bearing preload torque + side bearing preload torque).	3.09 - 4.87 (0.32 - 0.49, 28 - 43)

##### PRELOAD TORQUE

(Gear ratio:3.357 type)

Unit: N·m (kg-m, in-lb)

Item	Standard
Drive pinion bearing preload torque	2.3 - 3.4 (0.24 - 0.34, 21 - 30)
Total preload torque (Total preload torque = drive pinion bearing preload torque + side bearing preload torque).	2.98 - 4.76 (0.31 - 0.48, 27 - 42)

##### BACKLASH

Unit: mm (in)

Item	Standard
Drive gear to drive pinion backlash	0.12 - 0.20 (0.0050 - 0.0078)

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[FRONT FINAL DRIVE: M205]

## COMPANION FLANGE RUNOUT

Unit: mm (in)

Item	Limit
Companion flange face	0.10 (0.0039) or less
Companion flange inner side	0.13 (0.0051) or less

## SELECTIVE PARTS

### Drive Pinion Height Adjusting Washer

Unit: mm (in)

Thickness	Package part number*
1.22 (0.048)	38154 8S111
1.24 (0.049)	
1.27 (0.050)	
1.30 (0.051)	
1.32 (0.052)	
1.35 (0.053)	38154 8S112
1.37 (0.054)	
1.40 (0.055)	
1.42 (0.056)	
1.45 (0.057)	
1.47 (0.058)	38154 8S113
1.50 (0.059)	
1.52 (0.060)	
1.55 (0.061)	
1.57 (0.062)	
1.60 (0.063)	38154 8S114
1.63 (0.064)	
1.65 (0.065)	
1.68 (0.066)	
1.70 (0.067)	
1.73 (0.068)	38154 8S115
1.75 (0.069)	
1.78 (0.070)	
1.80 (0.071)	
1.83 (0.072)	

\*: Always check with the Parts Department for the latest parts information.

### Side Gear Thrust Washer

Unit: mm (in)

Thickness	Package part number*
0.76 (0.030)	38424 8S111
0.79 (0.031)	
0.81 (0.032)	
0.84 (0.033)	
0.87 (0.034)	
0.89 (0.035)	38424 8S112
0.91 (0.036)	
0.94 (0.037)	
0.97 (0.038)	
0.99 (0.039)	

\*: Always check with the Parts Department for the latest parts information.

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011290946

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

**WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

#### Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000011290947

**NOTE:**

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

#### OPERATION PROCEDURE

1. Connect both battery cables.

**NOTE:**

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.



# PRECAUTIONS

< PRECAUTION >

[REAR FINAL DRIVE: R230]

5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT.

## Precaution for Servicing Rear Final Drive

INFOID:000000011290948

- Before starting diagnosis of the vehicle, understand the symptoms well. Perform correct and systematic operations.
- Check for the correct installation status prior to removal or disassembly. When matching marks are required, be certain they do not interfere with the function of the parts they are applied to.
- Overhaul should be done in a clean work area, a dust proof area is recommended.
- Before disassembly, completely remove sand and mud from the exterior of the unit, preventing them from entering into the unit during disassembly or assembly.
- Always use shop paper for cleaning the inside of components.
- Avoid using cotton gloves or a shop cloth to prevent the entering of lint.
- Check appearance of the disassembled parts for damage, deformation, and abnormal wear. Replace them with new ones if necessary.
- Gaskets, seals and O-rings should be replaced any time the unit is disassembled.
- Clean and flush the parts sufficiently and blow them dry.
- Be careful not to damage sliding surfaces and mating surfaces.
- When applying sealant, remove the old sealant from the mating surface; then remove any moisture, oil, and foreign materials from the application and mating surfaces.
- In principle, tighten nuts or bolts gradually in several steps working diagonally from inside to outside. If a tightening sequence is specified, observe it.
- During assembly, observe the specified tightening torque.
- Add new differential gear oil, petroleum jelly, or multi-purpose grease, as specified.

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# PREPARATION

< PREPARATION >

[REAR FINAL DRIVE: R230]


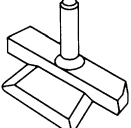
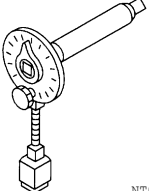
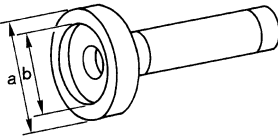
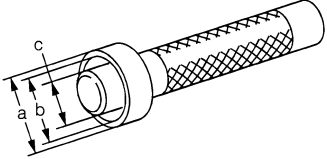
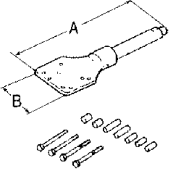
## PREPARATION

### PREPARATION

#### Special Service Tool

INFOID:000000011290949

The actual shape of the tools may differ from those illustrated here.

Tool number (TechMate No.) Tool name	Description
HT72400000 ( — ) Slide hammer	Removing differential case assembly   <p style="text-align: center;">S-NT125</p>
KV10111100-A (J-37228) Seal cutter	Removing carrier cover   <p style="text-align: center;">S-NT046</p>
KV10112100 (BT-8653-A) Angle wrench	Tightening bolts for drive gear   <p style="text-align: center;">NT014</p>
KV38100200 (J-26233) Drift	Installing side oil seal <b>a: 65 mm (2.56 in) dia.</b> <b>b: 49 mm (1.93 in) dia.</b>   <p style="text-align: center;">ZZA1143D</p>
KV38100300 (J-25523) Drift	Installing side bearing inner race <b>a: 54 mm (2.13 in) dia.</b> <b>b: 46 mm (1.81 in) dia.</b> <b>c: 32 mm (1.26 in) dia.</b>   <p style="text-align: center;">ZZA1046D</p>
KV38100800 (J-25604-01) Attachment	Securing unit assembly <b>a: 541 mm (21.30 in)</b> <b>b: 200 mm (7.87 in)</b>   <p style="text-align: center;">SDIA0267E</p>

# PREPARATION

< PREPARATION >







[REAR FINAL DRIVE: R230]

Tool number (TechMate No.) Tool name	Description	
ST33290001 (J-34286) Puller	Removing front oil seal	A B C
KV38107900 (J-39352) Protector	Installing side flange	DLN E
KV40104100 ( — ) Attachment	Removing side flange	F G H
KV40105230 ( — ) Drift	Installing drive pinion rear bearing outer race <b>a: 92 mm (3.62 in) dia.</b> <b>b: 86 mm (3.39 in) dia.</b> <b>c: 45 mm (1.77 in) dia.</b>	I J K
ST15310000 ( — ) Oil seal drift	Installing front oil seal <b>a: 96 mm (3.78 in) dia.</b> <b>b: 84 mm (3.31 in) dia.</b>	L M
ST30022000 ( — ) Drift	Installing drive pinion bearing <b>a: 110 mm (4.33 in) dia.</b> <b>b: 46 mm (1.81 in) dia.</b>	N O
ST30031000 (J-22912-01) Puller	Removing drive pinion rear bearing inner race	P

# PREPARATION

< PREPARATION >

[REAR FINAL DRIVE: R230]

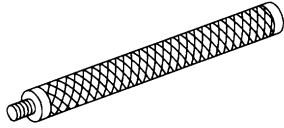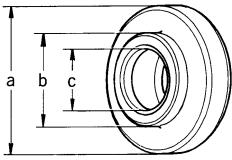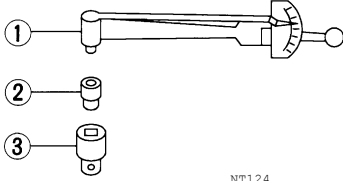Tool number (TechMate No.) Tool name	Description
ST30611000 (J-25742-1) Drift bar	Installing drive pinion front bearing outer race (Use with ST30613000)
 <p style="text-align: center; font-size: small;">S-NT090</p>	
ST30613000 (J-25742-3) Drift	Installing drive pinion front bearing outer race <b>a: 72 mm (2.83 in) dia.</b> <b>b: 48 mm (1.89 in) dia.</b>
 <p style="text-align: center; font-size: small;">ZZA1000D</p>	
ST30621000 ( — ) Drift	Installing drive pinion front and rear bearing races <b>a: 79 mm (3.11 in) dia.</b> <b>b: 59 mm (2.32 in) dia.</b>
 <p style="text-align: center; font-size: small;">NT073</p>	
ST30720000 (J-25405) Drift	<ul style="list-style-type: none"> <li>• Installing front oil seal</li> <li>• Installing drive pinion rear bearing outer race</li> </ul> <b>a: 77 mm (3.03 in) dia.</b> <b>b: 55.5 mm (2.185 in) dia.</b>
 <p style="text-align: center; font-size: small;">ZZA0811D</p>	
ST30901000 (J-26010-01) Drift	Installing drive pinion rear bearing inner race <b>a: 79 mm (3.11 in) dia.</b> <b>b: 45 mm (1.77 in) dia.</b> <b>c: 35.2 mm (1.386 in) dia.</b>
 <p style="text-align: center; font-size: small;">ZZA0978D</p>	
ST3127S000 (J-25765-A) Preload gauge 1: GG91030000 (J-25765) Torque wrench 2: HT62940000 ( — ) Socket adapter (1/2") 3: HT62900000 ( — ) Socket adapter (3/8")	Measuring drive pinion bearing preload torque and total preload torque
 <p style="text-align: center; font-size: small;">NT124</p>	

# PREPARATION

< PREPARATION >

[REAR FINAL DRIVE: R230]

Tool number (TechMate No.) Tool name	Description	
ST3306S001 ( — ) Differential side bearing puller set 1: ST33051001 (J-22888-20) Puller 2: ST33061000 (J-8107-2) Base		A B C <div style="background-color: black; color: white; padding: 2px; text-align: center;">DLN</div>
ST33081000 ( — ) Adapter		E F <div style="background-color: black; color: white; padding: 2px; text-align: center;">DLN</div>
ST35325000 ( — ) Drift bar		G H <div style="background-color: black; color: white; padding: 2px; text-align: center;">DLN</div>
ST36230000 (J-25840-A) Sliding hammer		I J <div style="background-color: black; color: white; padding: 2px; text-align: center;">DLN</div>
— (J-8129) Spring gauge		L M <div style="background-color: black; color: white; padding: 2px; text-align: center;">DLN</div>
— (J-25269-4) Side bearing disc (2 Req'd)		N O <div style="background-color: black; color: white; padding: 2px; text-align: center;">DLN</div>
— (J-34309) Differential shim selector tool		P <div style="background-color: black; color: white; padding: 2px; text-align: center;">DLN</div>



# PREPARATION

< PREPARATION >

[REAR FINAL DRIVE: R230]

## Commercial Service Tool

INFOID:000000011290950

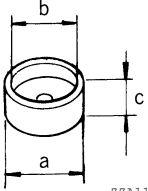Tool name	Description
<p data-bbox="162 289 235 315">Spacer</p>  <p data-bbox="828 508 893 525">ZZA1133D</p>	<p data-bbox="1015 289 1461 315">Installing drive pinion front bearing inner race</p> <p data-bbox="1015 319 1242 344"><b>a: 60 mm (2.36 in) dia.</b></p> <p data-bbox="1015 348 1242 373"><b>b: 36 mm (1.42 in) dia.</b></p> <p data-bbox="1015 378 1193 403"><b>c: 30 mm (1.18 in)</b></p>
<p data-bbox="162 541 267 567">Power tool</p>  <p data-bbox="828 760 893 777">PIIB1407E</p>	<p data-bbox="1015 541 1339 567">Loosening nuts, screws and bolts</p>

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

[REAR FINAL DRIVE: R230]

## SYMPTOM DIAGNOSIS

### NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

#### NVH Troubleshooting Chart

INFOID:0000000011290951

Use the chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

Symptom	Noise	Reference page	Possible cause and SUSPECTED PARTS
	x	<a href="#">DLN-250, "Disassembly and Assembly"</a>	Gear tooth rough
	x	<a href="#">DLN-250, "Disassembly and Assembly"</a>	Gear contact improper
	x	<a href="#">DLN-250, "Disassembly and Assembly"</a>	Tooth surfaces worn
	x	<a href="#">DLN-267, "Inspection and Adjustment"</a>	Backlash incorrect
	x	<a href="#">DLN-267, "Inspection and Adjustment"</a>	Companion flange excessive runout
	x	<a href="#">MA-16, "FOR USA AND CANADA : Fluids and Lubricants"</a>	Gear oil improper
	x	<a href="#">DLN-192, "NVH Troubleshooting Chart"</a>	PROPELLER SHAFT
		<a href="#">RAX-5, "NVH Troubleshooting Chart"</a>	REAR AXLE
	x	<a href="#">RSU-5, "NVH Troubleshooting Chart"</a>	REAR SUSPENSION
	x	<a href="#">WT-47, "NVH Troubleshooting Chart"</a>	TIRES
	x	<a href="#">WT-47, "NVH Troubleshooting Chart"</a>	ROAD WHEEL
	x	<a href="#">RAX-5, "NVH Troubleshooting Chart"</a>	DRIVE SHAFT
	x	<a href="#">BR-7, "NVH Troubleshooting Chart"</a>	BRAKES
	x	<a href="#">ST-9, "NVH Troubleshooting Chart"</a>	STEERING

x: Applicable

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# DESCRIPTION


< SYMPTOM DIAGNOSIS >

[REAR FINAL DRIVE: R230]

## DESCRIPTION

### Cross-Sectional View

INFOID:000000011290952

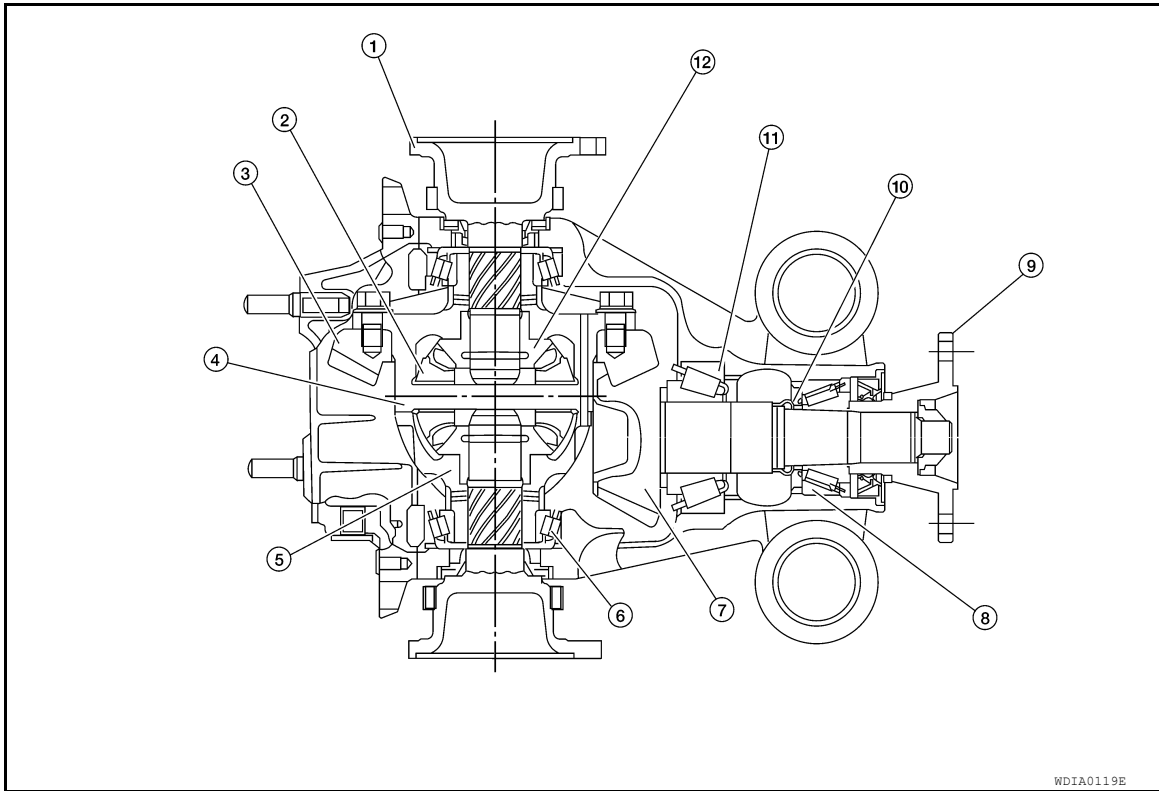

- |                        |                               |                     |
|------------------------|-------------------------------|---------------------|
| 1. Side flange         | 2. Pinion mate gear           | 3. Drive gear       |
| 4. Pinion mate shaft   | 5. Differential case          | 6. Side bearing     |
| 7. Drive pinion        | 8. Drive pinion front bearing | 9. Companion flange |
| 10. Collapsible spacer | 11. Drive pinion rear bearing | 12. Side gear       |



## PERIODIC MAINTENANCE

### DIFFERENTIAL GEAR OIL


#### Changing Differential Gear Oil

INFOID:000000011290953

#### DRAINING

1. Stop the engine.
2. Remove the drain plug and gasket from the rear final drive assembly to drain the differential gear oil.
3. Install the drain plug with a new gasket to the rear final drive assembly. Tighten to the specified torque. Refer to [DLN-250, "Disassembly and Assembly"](#).

**CAUTION:**  
Do not reuse gasket.

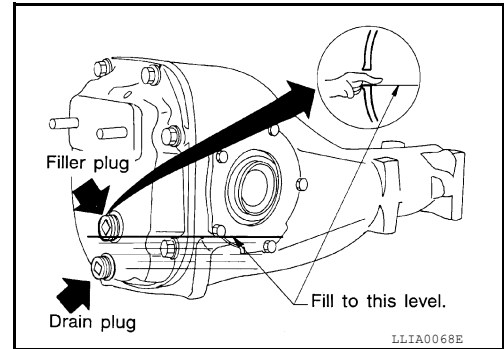


#### FILLING

1. Remove the filler plug and gasket from the rear final drive assembly.
2. Fill the rear final drive assembly with new differential gear oil until the level reaches the specified level near the filler plug hole.

Differential gear oil  
grade and capacity

: Refer to [MA-16, "FOR USA AND CANADA : Fluids and Lubricants" \(United States and Canada\)](#), [MA-18, "FOR MEXICO : Fluids and Lubricants" \(Mexico\)](#).

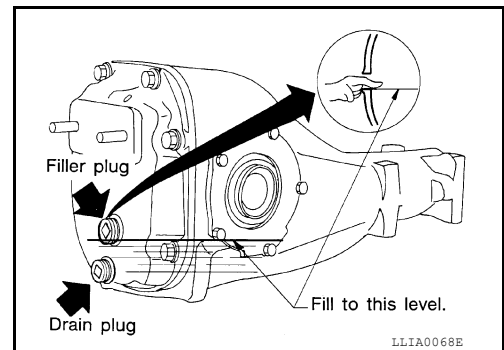

3. Install the filler plug with a new gasket on it to the rear final drive assembly. Tighten to the specified torque. Refer to [DLN-250, "Disassembly and Assembly"](#).

**CAUTION:**  
Do not reuse gasket.

#### Checking Differential Gear Oil

INFOID:000000011290954


#### OIL LEAKAGE AND OIL LEVEL

1. Make sure that differential gear oil is not leaking from the rear final drive assembly or around it.
2. Check the differential gear oil level from the filler plug hole as shown.

**CAUTION:**  
Do not start engine while checking differential gear oil level.

3. Install the filler plug with a new gasket on it to the rear final drive assembly. Tighten to the specified torque. Refer to [DLN-250, "Disassembly and Assembly"](#).

**CAUTION:**  
Do not reuse gasket.

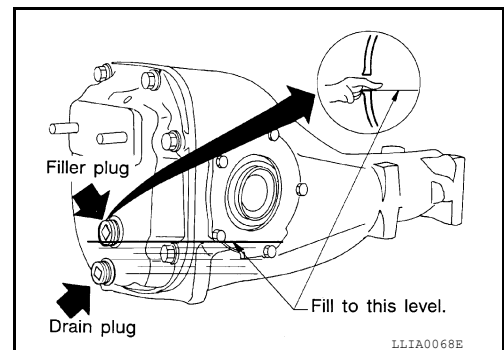

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# REMOVAL AND INSTALLATION


## FRONT OIL SEAL

### Removal and Installation

INFOID:000000011290955

#### REMOVAL

1. Remove the rear drive shafts from the rear final drive assembly and support them using suitable wire. Refer to [RAX-9. "Removal and Installation"](#).

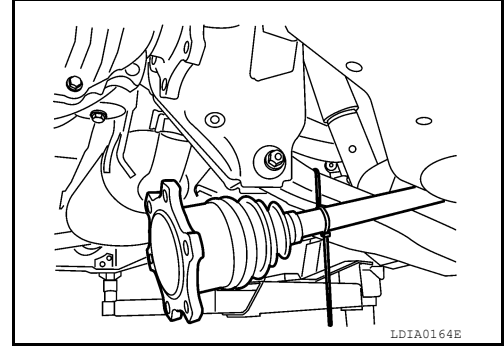

2. Remove the rear propeller shaft. Refer to [DLN-194. "Removal and Installation"](#).
3. Measure the total preload torque. Refer to [DLN-250. "Disassembly and Assembly"](#).


**NOTE:**

Record the total preload torque measurement.


4. Remove the drive pinion lock nut using suitable tool.
5. Put matching marks on the companion flange and drive pinion using paint.

**CAUTION:**

Use paint to make the matching marks. Do not damage the companion flange or drive pinion.

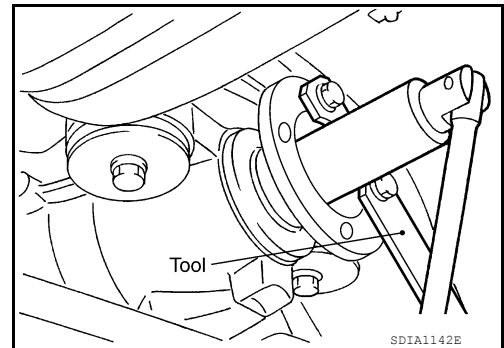


6. Remove the companion flange using suitable tool.

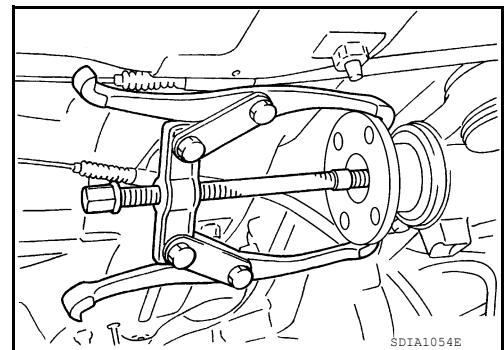

7. Remove the front oil seal using Tool.

**Tool number : ST33290001 (J-34286)**

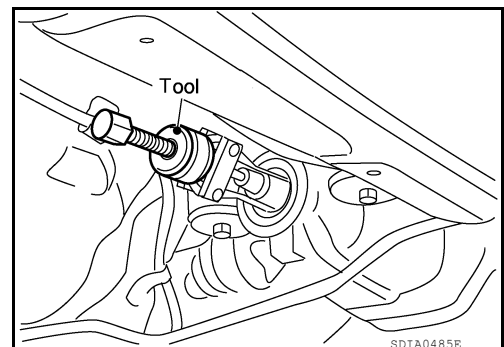

# FRONT OIL SEAL

< REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R230]


## INSTALLATION

1. Apply multi-purpose grease to the lips of the new front oil seal. Then drive the new front oil seal in evenly until it becomes flush with the gear carrier using Tool.

**Tool number** : ST15310000 ( — )

### CAUTION:

- Do not reuse front oil seal.
- Do not incline the new front oil seal when installing.
- Apply multi-purpose grease to the lips of the new front oil seal.

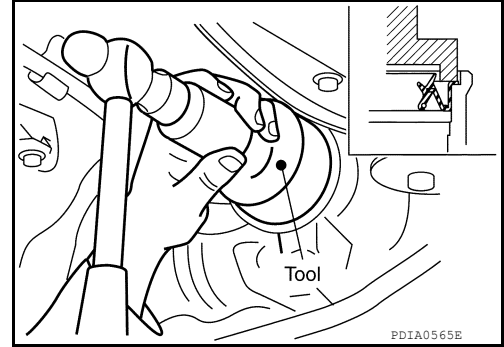

2. Install the companion flange to the drive pinion while aligning the matching marks.
3. Apply anti-corrosive oil to the threads of the drive pinion and the seating surface of the new drive pinion lock nut. Then adjust the drive pinion lock nut tightening torque using suitable tool (A), and check the total preload torque using Tool (B).

**Tool number** (B): ST3127S000 (J-25765-A)

**Total preload torque:** Refer to [DLN-267, "Inspection and Adjustment"](#).

- The total preload torque should be within the total preload torque specification. When not replacing the collapsible spacer, it should also be equal to the measurement taken during removal plus an additional 0.56 N·m (0.06 kg-m, 5 in-lb).
- If the total preload torque is low, tighten the drive pinion lock nut in 6.8 N·m (0.69 kg-m, 60 in-lb) increments until the total preload torque is met.


### CAUTION:

- Do not reuse drive pinion lock nut.
- Apply anti-corrosive oil to the threads of the drive pinion and the seating surface of the new drive pinion lock nut.
- Adjust the drive pinion lock nut tightening torque to the lower limit first. Do not exceed the drive pinion lock nut specified torque. Refer to [DLN-250, "Disassembly and Assembly"](#).
- Do not loosen drive pinion lock nut to adjust the total preload torque. If the total preload torque exceeds the specifications, replace the collapsible spacer and tighten it again to adjust. Refer to [DLN-250, "Disassembly and Assembly"](#).
- After adjustment, rotate drive pinion back and forth 2 to 3 times to check for unusual noise, rotation malfunction, and other malfunctions.

4. Installation of the remaining components is in the reverse order of removal.

### CAUTION:

Check the differential gear oil level after installation. Refer to [DLN-241, "Checking Differential Gear Oil"](#).

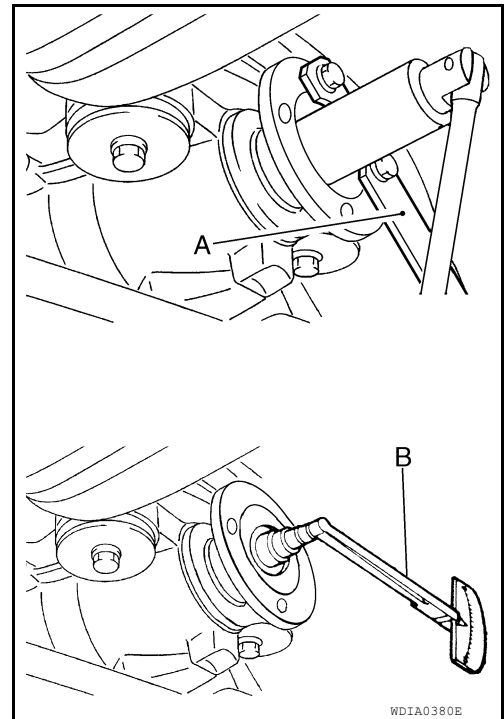

# SIDE OIL SEAL

< REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R230]

## SIDE OIL SEAL

### Removal and Installation

INFOID:000000011290956

#### REMOVAL


1. Remove the drive shaft from the rear final drive assembly and support them using suitable wire. Refer to [RAX-9, "Removal and Installation"](#).

**CAUTION:**

**Do not bend drive shaft joint to an excessive angle or excessively extend the slide joint.**

2. Remove the side flange using Tools.


**Tool numbers** (A): KV40104100 ( — )  
(B): ST36230000 (J-25840-A)

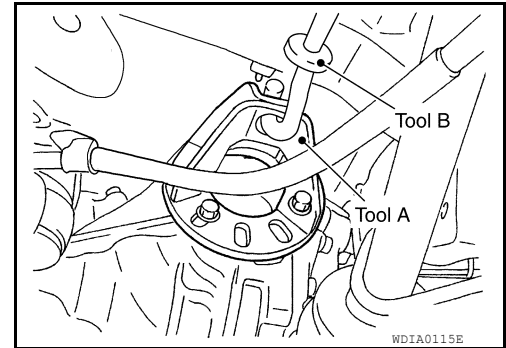

3. Remove the side oil seal using suitable tool.

**CAUTION:**

**Do not to damage gear carrier.**

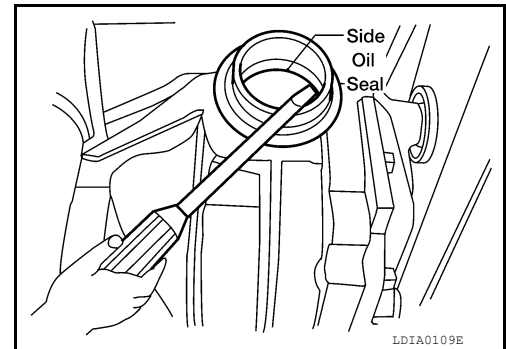


#### INSTALLATION

1. Apply multi-purpose grease to the lips of the new side oil seal. Then drive the new side oil seal in evenly until it becomes flush with the gear carrier using Tool.

**Tool number** : KV38100200 (J-26233)

**CAUTION:**

- Do not reuse side oil seal.
- Do not incline the new side oil seal when installing.
- Apply multi-purpose grease to the lips of the new side oil seal.

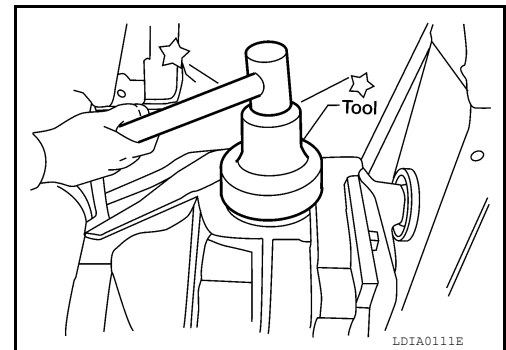


2. Install the side flange using Tool.
  - a. Install the Tool to the side oil seal as shown.

**Tool number** : KV38107900 (J-39352)

- b. Insert the side flange until the serrated part of the side flange has engaged the serrated part of the side gear and remove the Tool.
- c. Drive in the side flange using suitable tool.

**NOTE:**

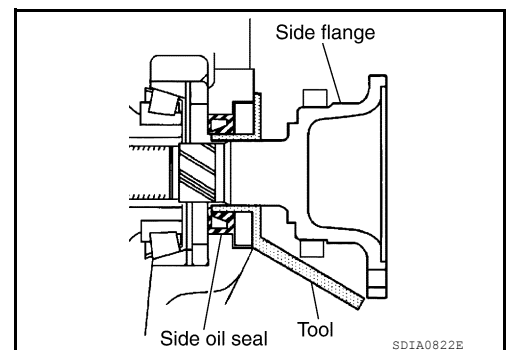

## SIDE OIL SEAL

< REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R230]

Installation is completed when the driving sound of the side flange turns into a sound which seems to affect the whole rear final drive assembly.

3. Installation of the remaining components is in the reverse order of removal.

**CAUTION:**

Check the differential gear oil level after installation. Refer to [DLN-241, "Checking Differential Gear Oil"](#).

A

B

C

DLN

E

F

G

H

I

J

K

L

M

N

O

P

# CARRIER COVER

< REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R230]

## CARRIER COVER

### Removal and Installation

INFOID:000000011290957


#### REMOVAL

1. Drain differential gear oil. Refer to [DLN-241, "Changing Differential Gear Oil"](#).
2. Remove the rear final drive assembly. Refer to [DLN-247, "Removal and Installation"](#).
3. Remove the carrier cover bolts and separate the carrier cover from the gear carrier using Tool.

**Tool number** : KV10111100 (J-37228)

**CAUTION:**

- Do not damage the mating surface.
- Do not insert flat-bladed screwdriver, this will damage the mating surface.

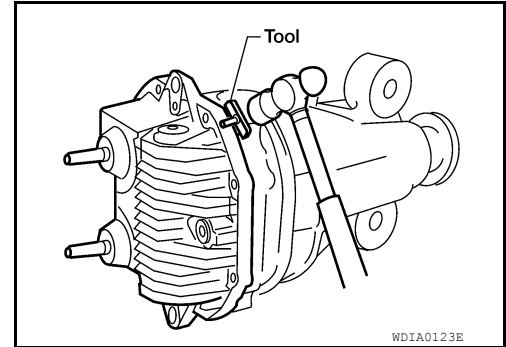

#### INSTALLATION

1. Apply a 3 mm (0.12 in) bead of sealant to the mating surface of the carrier cover as shown.
  - Use Genuine Silicone RTV or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).


**CAUTION:**

**Remove any old sealant adhering to the mating surfaces. Also remove any moisture, oil, or foreign material adhering to the application and mating surfaces.**

2. Install the carrier cover to the gear carrier. Tighten the bolts to the specified torque. Refer to [DLN-250, "Disassembly and Assembly"](#).
3. Install the rear final drive assembly. Refer to [DLN-247, "Removal and Installation"](#).

**CAUTION:**

**Fill the rear final drive assembly with recommended differential gear oil. Refer to [DLN-241](#).**

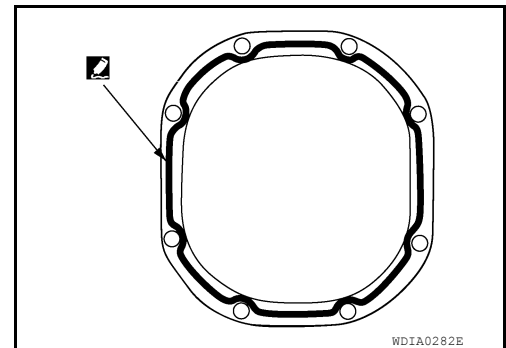


UNIT REMOVAL AND INSTALLATION

REAR FINAL DRIVE

Removal and Installation

INFOID:0000000011290958

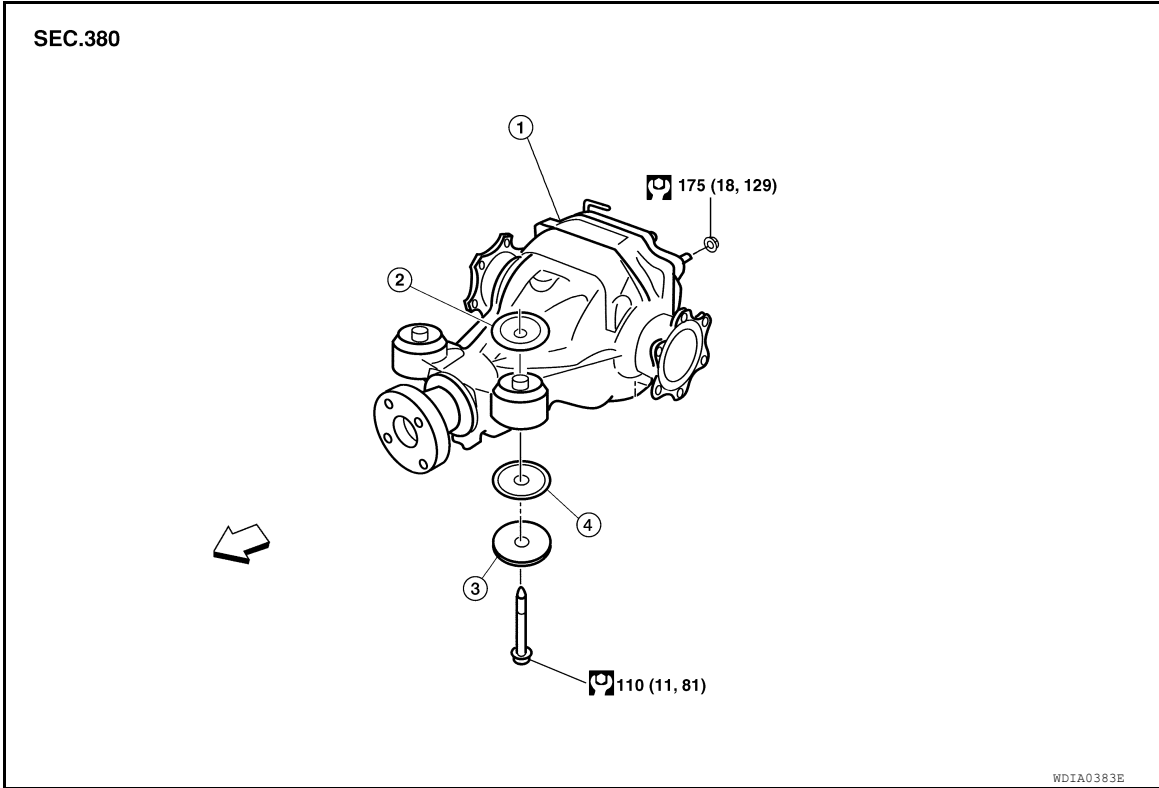


- 1. Rear final drive assembly
  - 2. Upper stopper
  - 3. Washer
  - 4. Lower stopper
- ⇒ Vehicle front

**NOTE:**

When removing components such as hoses, tubes/lines, etc., cap or plug openings to prevent fluid from spilling.

**REMOVAL**

1. Remove the spare tire.
2. Remove the rear stabilizer bar. Refer to [RSU-19. "Removal and Installation"](#).
3. Remove the rear propeller shaft. Refer to [DLN-194. "Removal and Installation"](#).
4. Remove the rear drive shafts from the rear final drive assembly and support them using suitable wire. Refer to [RAX-9. "Removal and Installation"](#).

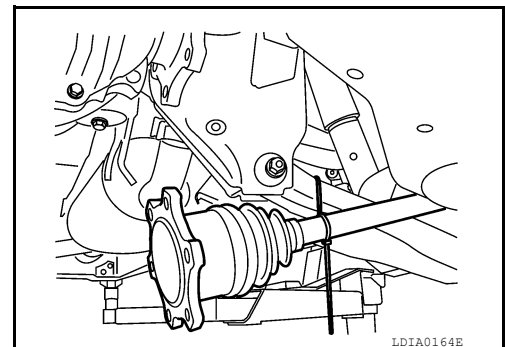

5. Disconnect the breather hose from the rear final drive assembly.


A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## REAR FINAL DRIVE

### < UNIT REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R230]

6. Place a suitable jack under the rear final drive assembly.  
**CAUTION:**  
**Do not place the jack on the carrier cover.**
7. Remove the nuts and bolts (←) and remove the rear final drive assembly.  
**CAUTION:**  
**Secure rear final drive assembly to the jack while removing it.**

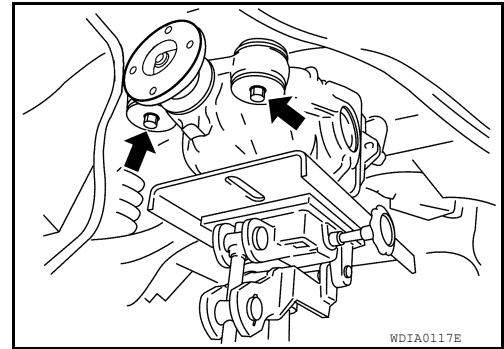

### INSTALLATION

Installation is in the reverse order of removal.

- Check the rear final drive gear oil and add the specified fluid as necessary. Refer to [MA-16, "FOR USA AND CANADA : Fluids and Lubricants"](#) (United States and Canada), [MA-18, "FOR MEXICO : Fluids and Lubricants"](#) (Mexico).

**CAUTION:**

- When installing the breather hose make sure the painted marking on the metal end of breather hose is to the front of the vehicle and there are no pinched or restricted areas on the breather hose caused by folding or bending when installing it.
- When installing the breather hose insert the plastic end of the breather hose into the hole in the suspension member.




# REAR FINAL DRIVE

< UNIT REMOVAL AND INSTALLATION >

[REAR FINAL DRIVE: R230]

## REAR FINAL DRIVE BREATHER

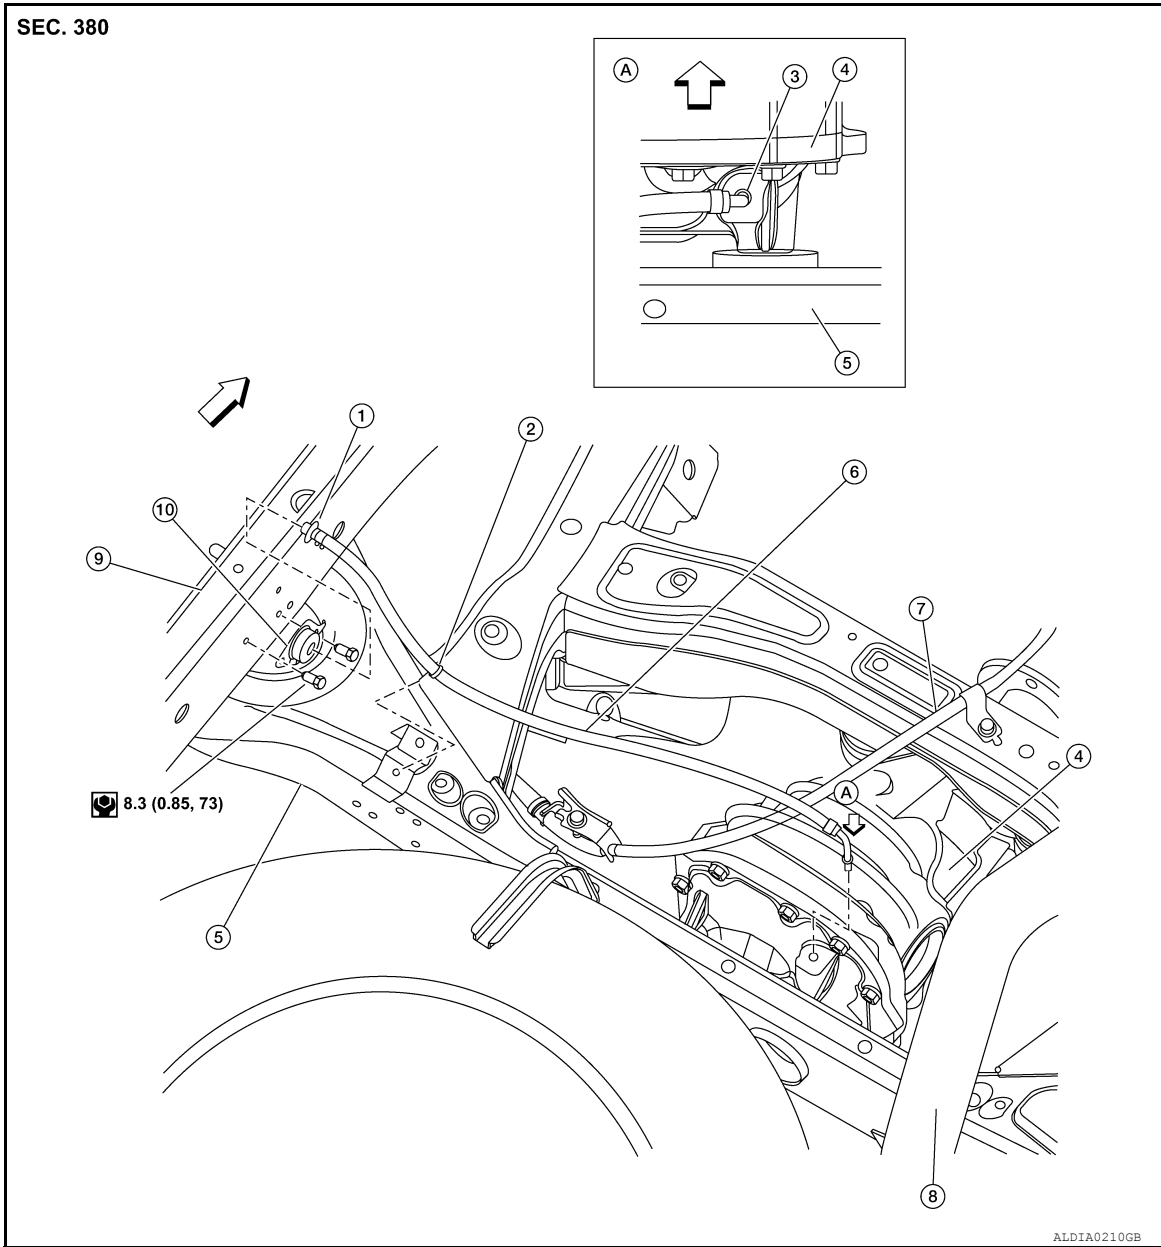

- |                                                    |                           |                                   |
|----------------------------------------------------|---------------------------|-----------------------------------|
| 1. Rear final drive breather hose connector        | 2. Plastic clip           | 3. Rear final drive breather tube |
| 4. Rear final drive assembly                       | 5. Rear suspension member | 6. Rear final drive breather hose |
| 7. Parking brake cable                             | 8. Exhaust pipe           | 9. Frame (LH)                     |
| 10. Rear final drive breather hose frame connector | A. Close view             | ← Front                           |

- Fill the rear final drive assembly with differential gear oil after installation. Refer to [DLN-241](#).

# REAR FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]

## UNIT DISASSEMBLY AND ASSEMBLY


### REAR FINAL DRIVE

#### Disassembly and Assembly

INFOID:000000011290959

#### COMPONENTS

SEC.380

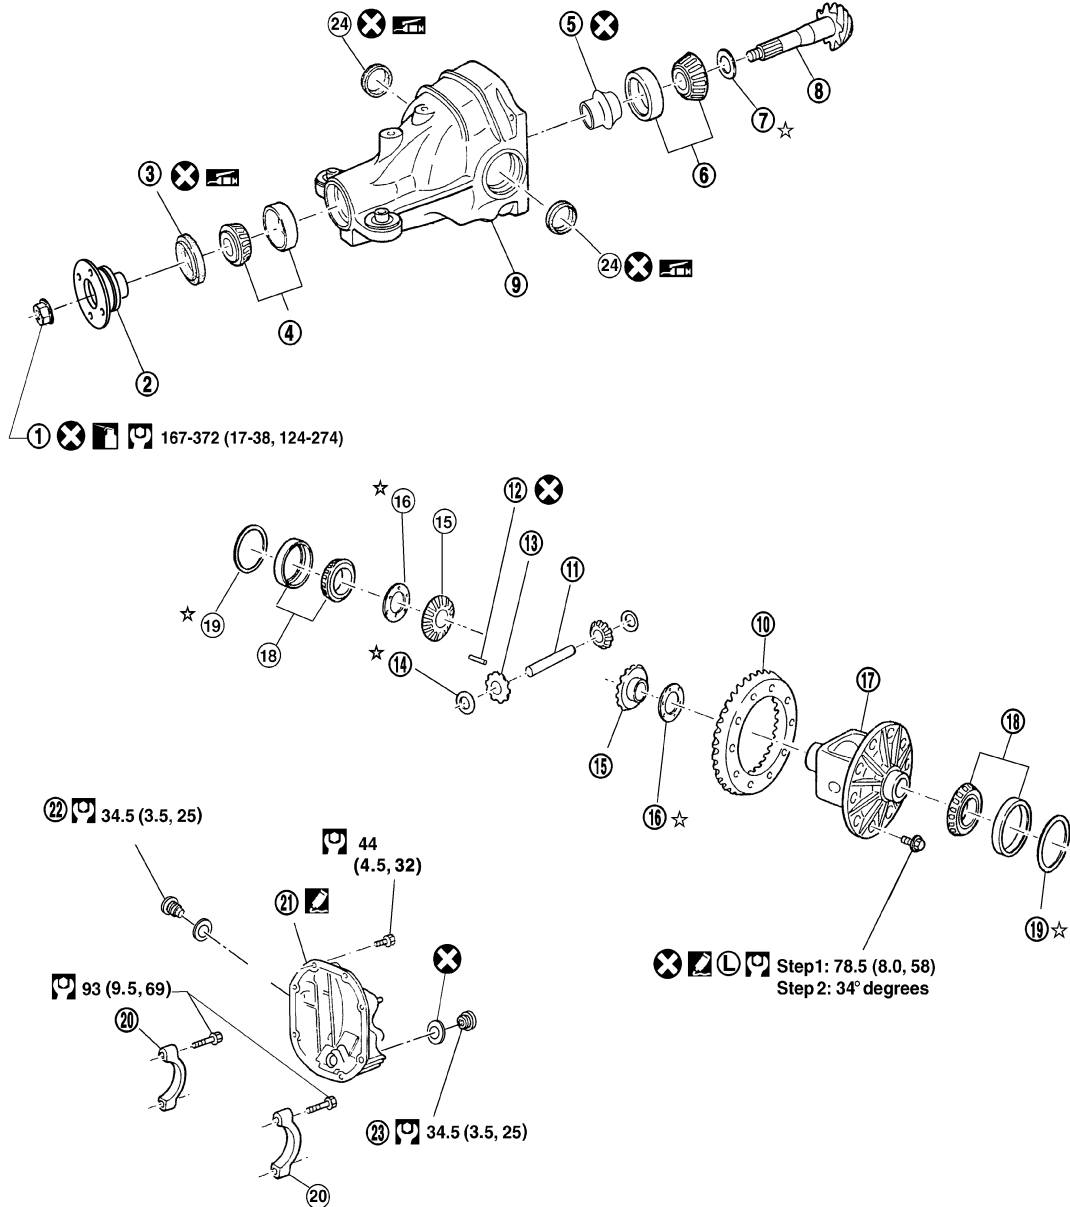

- : Lubricate with new gear oil
- : Apply genuine medium strength locking sealant or equivalent. Refer to GI section.
- : N·m (kg·m, ft·lb)
- : Apply genuine thread sealant or equivalent. Refer to GI section.
- ☆ : Adjustment is required.
- ⊗ : Always replace after every disassembly.
- : Lubricate with grease.

WDIA0191E

# REAR FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]

- |                                         |                               |                              |
|-----------------------------------------|-------------------------------|------------------------------|
| 1. Drive pinion lock nut                | 2. Companion flange           | 3. Front oil seal            |
| 4. Drive pinion front bearing           | 5. Collapsible spacer         | 6. Drive pinion rear bearing |
| 7. Drive pinion height adjusting washer | 8. Drive pinion               | 9. Gear carrier              |
| 10. Drive gear                          | 11. Pinion mate shaft         | 12. Lock pin                 |
| 13. Pinion mate gear                    | 14. Pinion mate thrust washer | 15. Side gear                |
| 16. Side gear thrust washer             | 17. Differential case         | 18. Side bearing             |
| 19. Side bearing adjusting washer       | 20. Bearing cap               | 21. Carrier cover            |
| 22. Filler plug                         | 23. Drain plug                | 24. Side oil seal            |

A  
B  
C

## ASSEMBLY INSPECTION AND ADJUSTMENT

- Drain the differential gear oil before inspection and adjustment. Refer to [DLN-241](#).
- Remove and install the carrier cover as necessary for inspection and adjustment. Refer to [DLN-246](#).

DLN

### Total Preload Torque

1. Remove the side flanges if necessary. Refer to [DLN-244, "Removal and Installation"](#).  
**CAUTION:**  
**The side flanges must be removed in order to measure total preload torque.**
2. Rotate the drive pinion back and forth 2 to 3 times to check for unusual noise and rotation malfunction.
3. Rotate the drive pinion at least 20 times to check for smooth operation of the bearings.
4. Measure the total preload torque using Tool.


E  
F  
G

**Tool number** : ST3127S000 (J-25765-A)

**Total preload torque** : Refer to [DLN-267, "Inspection and Adjustment"](#).

### NOTE:

**Total preload torque = Drive pinion bearing preload torque + Side bearing preload torque**

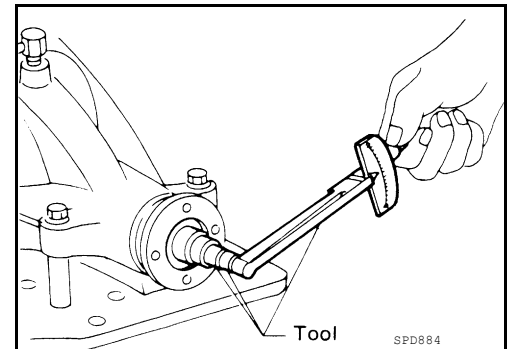

H  
I  
J

- If the measured value is out of the specification, check and adjust each part. Adjust the drive pinion bearing preload torque first, then adjust the side bearing preload torque.

K  
L  
M

### If the total preload torque is greater than specification

**On drive pinion bearings:** Replace the collapsible spacer.

**On side bearings:** Use thinner side bearing adjusting washers by the same amount on each side. Refer to [DLN-267, "Inspection and Adjustment"](#).

### If the total preload torque is less than specification

**On drive pinion bearings:** Tighten the drive pinion lock nut.

**On side bearings:** Use thicker side bearing adjusting washers by the same amount on each side. Refer to [DLN-267, "Inspection and Adjustment"](#).

N  
O  
P

### CAUTION:

**Select a side bearing adjusting washer for right and left individually.**

Drive Gear Runout

# REAR FINAL DRIVE

## < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]


1. Fit a dial indicator to the drive gear back face.
2. Rotate the drive gear to measure runout.

**Runout limit : 0.05 mm (0.0020 in) or less**

- If the runout is outside of the limit, check the condition of the drive gear assembly. Foreign material may be caught between the drive gear and differential case, or the differential case or drive gear may be deformed.

**CAUTION:**

**Replace drive gear and drive pinion as a set.**

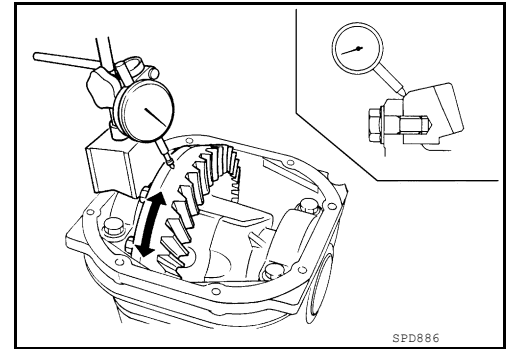


### Tooth Contact

1. Apply red lead to the drive gear.

**NOTE:**


Apply red lead to both faces of three to four gears, at four locations evenly spaced on the drive gear.

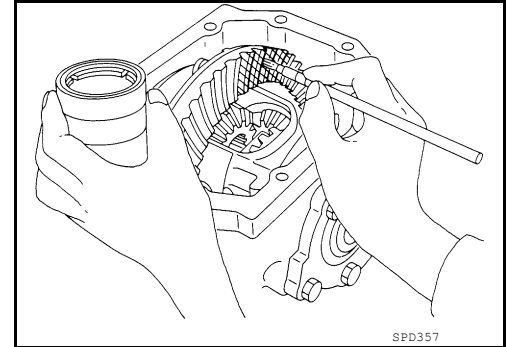


2. Rotate the drive gear back and forth several times. Then check for correct drive pinion to drive gear tooth contact as shown.

**CAUTION:**

**Check tooth contact on drive side and reverse side.**

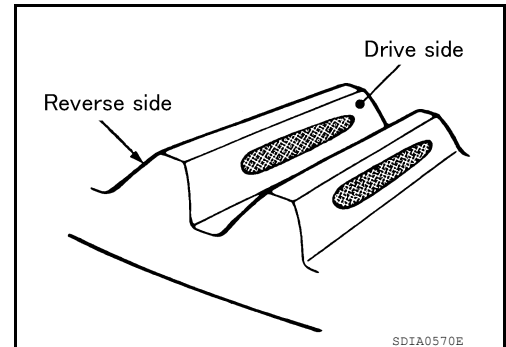

3. If the tooth contact is improperly adjusted, follow the procedure below to adjust the pinion height (dimension X).

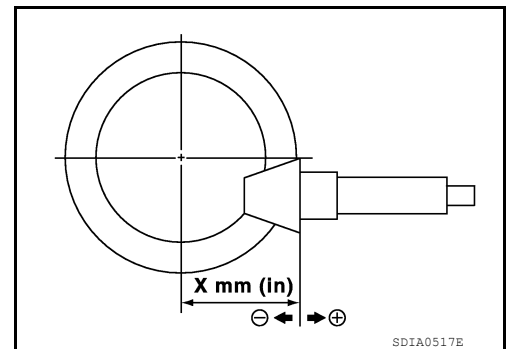


# REAR FINAL DRIVE


## < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]

- If the tooth contact is near the face (face contact), or near the heel (heel contact), use a thicker drive pinion height adjusting washers to move the drive pinion closer to the drive gear. Refer to [DLN-267, "Inspection and Adjustment"](#).

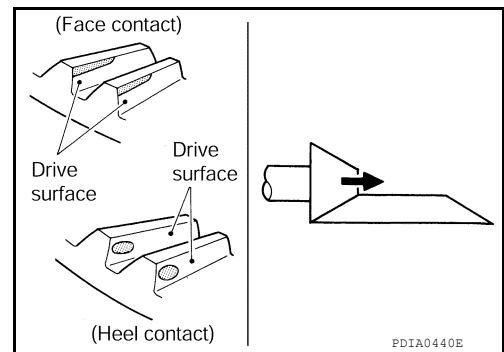

- If the tooth contact is near the flank (flank contact), or near the toe (toe contact), use a thinner drive pinion height adjusting washers to move the drive pinion farther from the drive gear. Refer to [DLN-267, "Inspection and Adjustment"](#).

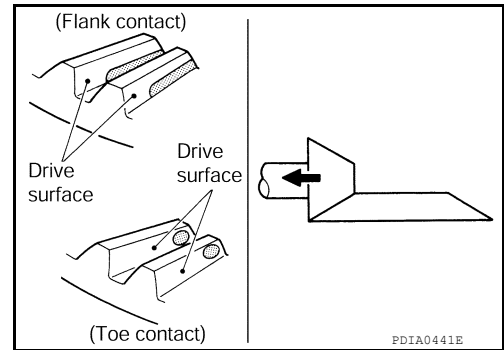

### Backlash

1. Fit a dial indicator to the drive gear face to measure the backlash.

**Backlash : 0.13 - 0.18 mm (0.0051 - 0.0070 in)**


- If the backlash is outside of the specification, change the thickness of the side bearing adjusting washers.

#### **If the backlash is greater than specification:**

**Make side bearing adjusting washer thicker on drive gear back side, and side bearing adjusting washer thinner on drive gear tooth side by the same amount. Refer to [DLN-267, "Inspection and Adjustment"](#).**

#### **If the backlash is less than specification:**

**Make side bearing adjusting washer thinner on drive gear back side, and side bearing adjusting washer thicker on drive gear tooth side by the same amount. Refer to [DLN-267, "Inspection and Adjustment"](#).**

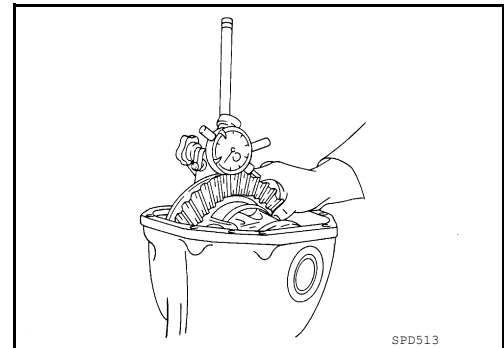

### **CAUTION:**

**Do not change the total thickness of side bearing adjusting washers as it will change the side bearing preload torque.**

Companion Flange Runout

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# REAR FINAL DRIVE


## < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]

1. Rotate companion flange and check for runout on the outer face of the companion flange using suitable tool.

**Runout limit : 0.08 mm (0.0031 in) or less**

2. If the runout is outside of the runout limit, follow the procedure below to adjust.
  - a. Rotate the companion flange on the drive pinion by 90°, 180° and 270° while checking for the position where the runout is minimum.
  - b. If the runout is still outside of the runout limit after the companion flange has been rotated on the drive pinion, possible cause could be an assembly malfunction of drive pinion and drive pinion bearing or a malfunctioning drive pinion bearing.
  - c. If the runout is still outside of the runout limit after repair of the assembly of drive pinion and drive pinion bearing or drive pinion bearing, replace the companion flange.

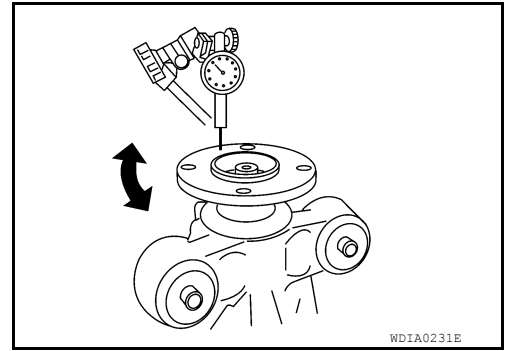


## DISASSEMBLY

### Side Flange


1. Drain the differential gear oil if necessary.
2. Remove the side flange using Tools.

**Tool numbers (A): KV40104100 ( — )**  
**(B): ST36230000 (J-25840-A)**

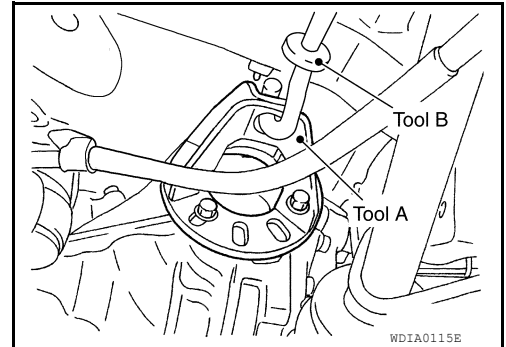

3. Remove the side oil seal using suitable tool.

**CAUTION:**  
**Do not to damage gear carrier.**

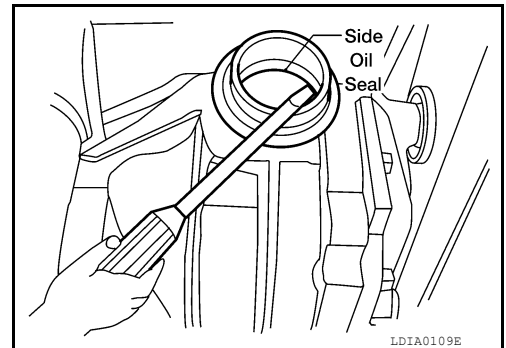


### Differential Assembly

1. Remove the side flanges. Refer to DISASSEMBLY for the Side Flange.
2. Remove the carrier cover bolts.
3. Remove the carrier cover bolts and separate the carrier cover from the gear carrier using Tool.

**Tool number : KV10111100 (J-37228)**

**CAUTION:**

- Do not damage the mating surface.
- Do not insert flat-bladed screwdriver, this will damage the mating surface.

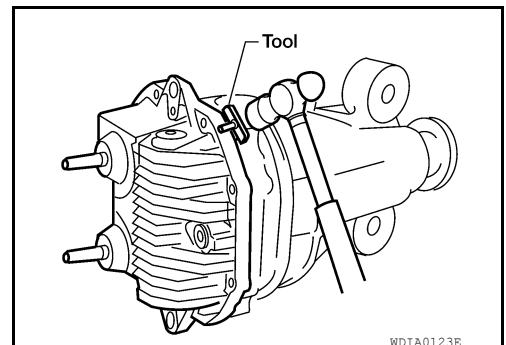


# REAR FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]

4. Mount the carrier on the Tool using two 45 mm (1.77 in) spacers.


**Tool number** : KV38100800 (J-25604-01)

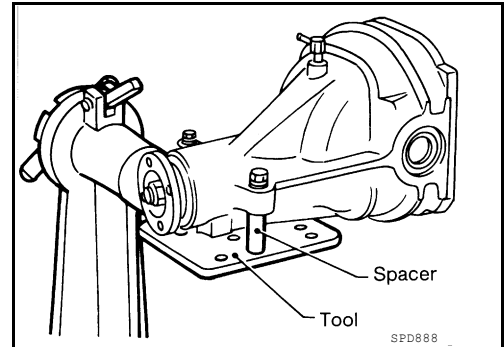


5. For proper reinstallation, paint matching marks on one side of the side bearing cap and gear carrier.

**CAUTION:**

- For matching marks, use paint. Do not damage side bearing cap or gear carrier.
- Side bearing caps are line-board during manufacture. The matching marks are used to reinstall them in their original positions.

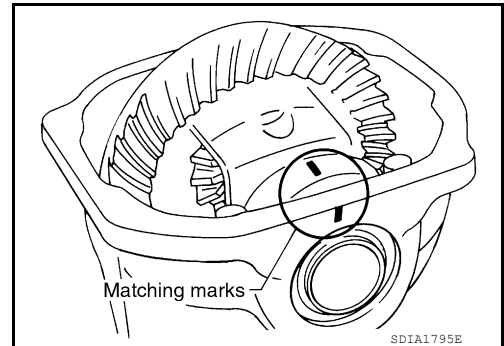


6. Remove the side bearing caps.

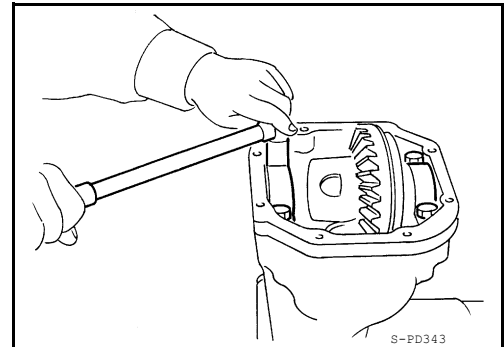

7. Lift the differential case assembly out using Tool.

**Tool number** : HT72400000 ( — )

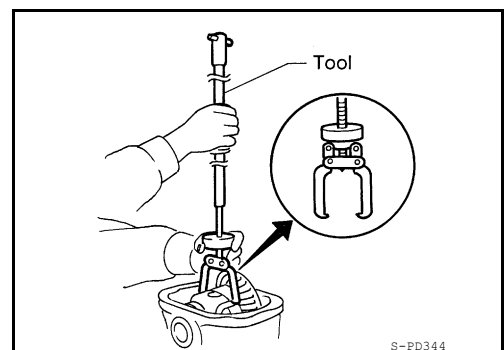

**CAUTION:**


A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# REAR FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]

- Keep side bearing outer races together with inner race. Do not mix them up.
- Keep side bearing adjusting washers together with side bearings.

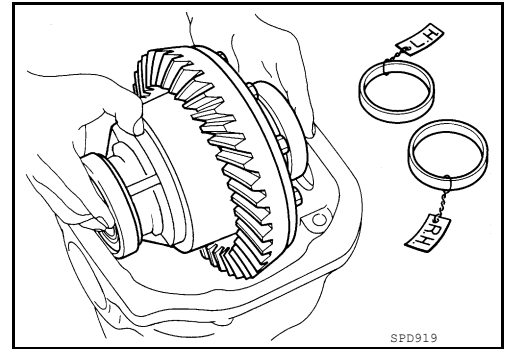


8. Remove the side bearing inner races using Tools.

**Tool number** (A): ST3306S001 ( — )  
 (B): ST33061000 (J-8107-2)

**CAUTION:**

- Engage Tool jaws in bearing groove to prevent damage.
- Place copper plates between the side bearing and drive gear and the vise to prevent damage.
- Do not remove side bearing inner race unless it is being replaced.

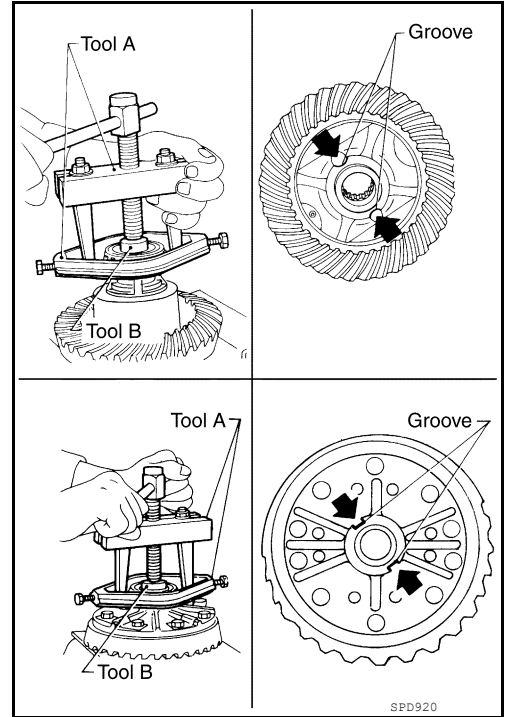

9. For proper reinstallation, paint matching marks on the differential case and drive gear.

**CAUTION:**


**Use paint for matching marks. Do not damage differential case or drive gear.**

10. Remove the drive gear bolts (←).


11. Tap the drive gear off the differential case using suitable tool.

**CAUTION:**

**Tap evenly all around to keep drive gear from bending.**

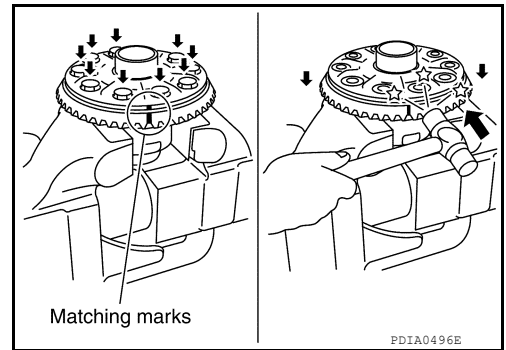

12. Remove the lock pin of the pinion mate shaft from the drive gear side using suitable tool.

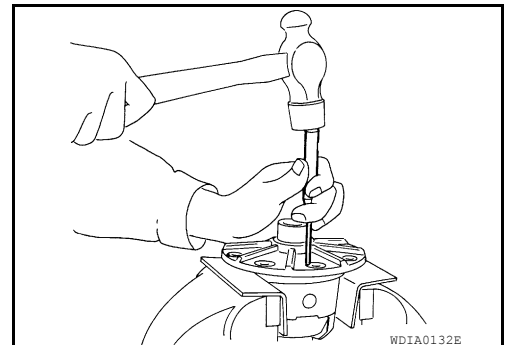




# REAR FINAL DRIVE


< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]

13. Remove the pinion mate shaft.

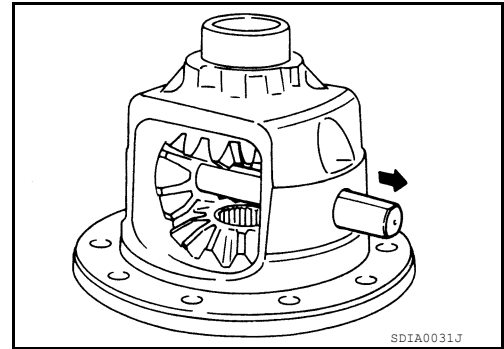

14. Turn the pinion mate gear, then remove the pinion mate gear, pinion mate thrust washer, side gear and side gear thrust washer from the differential case.

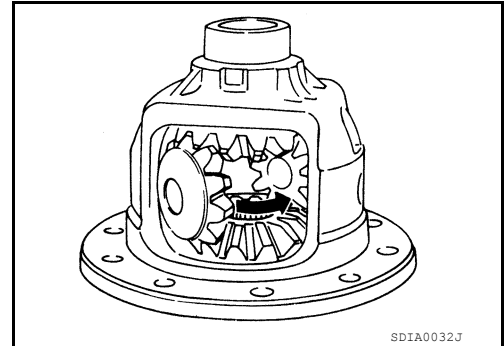


## Drive Pinion Assembly


1. Remove the differential assembly. Refer to DISASSEMBLY for the Differential Assembly.
2. Remove the drive pinion lock nut using suitable tool.
3. Put matching marks on the companion flange and drive pinion using paint.

**CAUTION:**

**Use paint to make the matching marks. Do not damage the companion flange or drive pinion.**

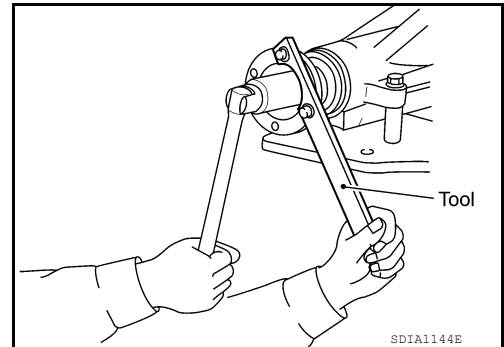

4. Remove the companion flange using suitable tool.

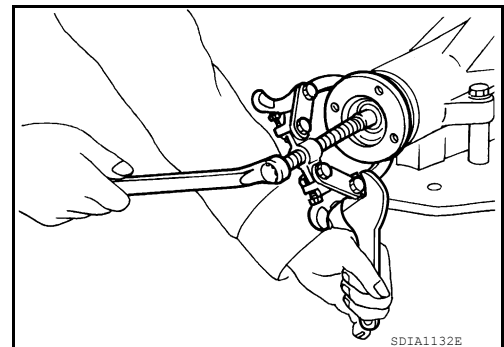

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## REAR FINAL DRIVE

### < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]

5. Press the drive pinion assembly (with rear inner bearing race and collapsible spacer) out of the gear carrier.

**CAUTION:**


**Do not drop drive pinion assembly.**

6. Remove the front oil seal.

**CAUTION:**


**Do not damage gear carrier.**

7. Remove the drive pinion front bearing inner race.

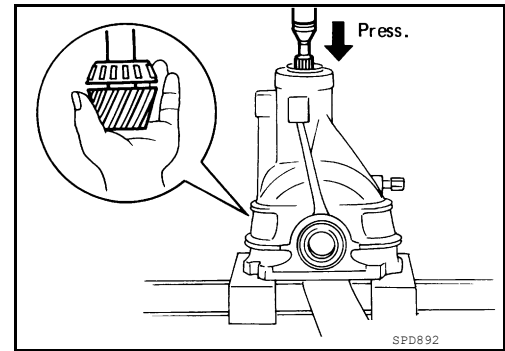

8. Remove the drive pinion rear bearing inner race and drive pinion height adjusting washer using Tool.


**Tool number:** : ST30031000 (J-22912-01)

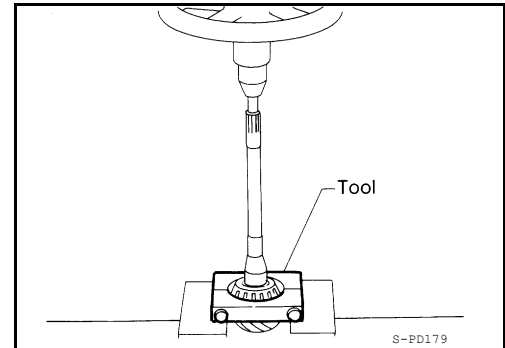

9. Remove the drive pinion front and rear bearing outer races by tapping them uniformly using suitable tool.

**CAUTION:**

**Do not damage gear carrier.**

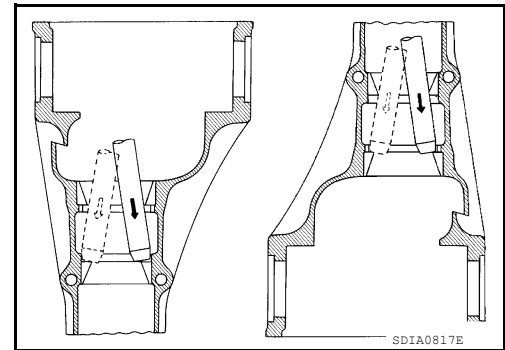

### INSPECTION AFTER DISASSEMBLY

Clean the disassembled parts. Then inspect the parts for wear or damage. If wear or damage are found, follow the measures below.

#### Drive Pinion and Drive Gear

- If the drive pinion and drive gear teeth do not mesh or line-up correctly, determine the cause and adjust, repair, or replace as necessary.
- If the drive pinion or drive gear are worn, cracked, damaged, pitted or chipped (by friction) noticeably, replace with new drive pinion and drive gear.
- Drive pinion and drive gear are supplied in matched sets only. Matching numbers on both drive pinion and drive gear are etched for verification. If a new drive pinion and drive gear set are being used, verify the numbers of each drive pinion and drive gear before proceeding with assembly.

#### Bearing

- If bearings are chipped (by friction), pitted, worn, rusted, scratched, or unusual noise is coming from bearing, replace with new bearing assembly (as a new set).
- Bearing must be replaced with a new one whenever disassembled.

#### Side Gear and Pinion Mate Gear

- If any cracks or damage are found on the surface of the teeth, replace with new one.
- If any worn or chipped marks are found on the side of the side gear and pinion mate gear which contact the thrust washer, replace with new one.
- Replace both side gear and pinion mate gear as a set when replacing side gear or pinion mate gear.

#### Side Gear Thrust Washer and Pinion Mate Thrust Washer

- If any chips (by friction), damage, or unusual wear are found, replace with new one.

# REAR FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]

## Gear Carrier

- If any wear or cracks are found on the contact sides of gear carrier, replace with new one.


## Companion Flange

- If any chips (about 0.1mm, 0.004 in) or other damage on the companion flange surface which contacts the front oil seal lips are found, replace with new one.

## ADJUSTING AND SELECTING WASHERS

### Side Gear Back Clearance

- Assemble the differential parts if they are disassembled.
1. Place the differential case straight up so that the side gear to be measured is upward.

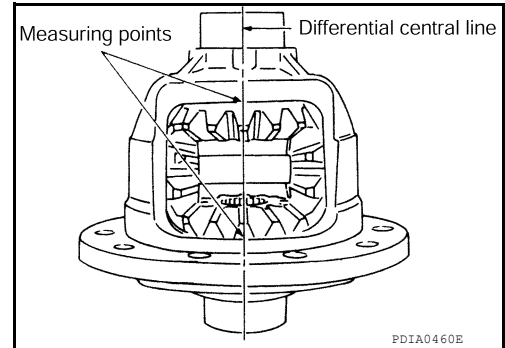

2. Using feeler gauges, measure the clearance between the side gear back and differential case at three different points, while rotating the side gear. Average the three readings to calculate the clearance. (Measure the clearance of the other side as well.)

**Side gear back clearance : 0.20 mm (0.0079 in) or less**

- If the side gear back clearance is outside of the specification, use a thicker or thinner side gear thrust washer to adjust. Refer to [DLN-267, "Inspection and Adjustment"](#).

**If the side gear back clearance is greater than specification:**

**Use a thicker side gear thrust washer.**

**If the side gear back clearance is less than specification:**

**Use a thinner side gear thrust washer.**

### CAUTION:


- Insert feeler gauges with the same thickness on both sides to prevent side gear from tilting.
- Each gear should rotate smoothly without excessive resistance during differential motion.
- Select a side gear thrust washer for right and left individually.

### NOTE:

Side gear back clearance is clearance between side gear and differential case for adjusting side gear backlash.

### Side Bearing Preload Torque

- A selection of side bearing adjusting washers is required for successful completion of this procedure.

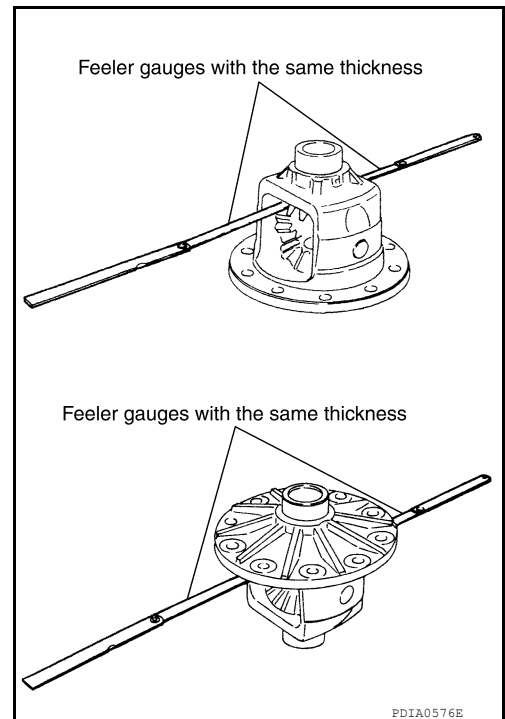

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# REAR FINAL DRIVE


## < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]


1. Apply differential gear oil to the side bearings, and install the differential case assembly with the side bearing outer races into the gear carrier.

**CAUTION:**


**Do not reuse side bearing outer race when replacing side bearing inner race (replace as a set).**

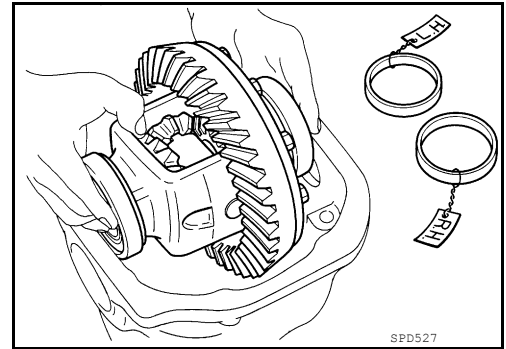

2. Insert the left and right original side bearing adjusting washers in place between side bearings and gear carrier.

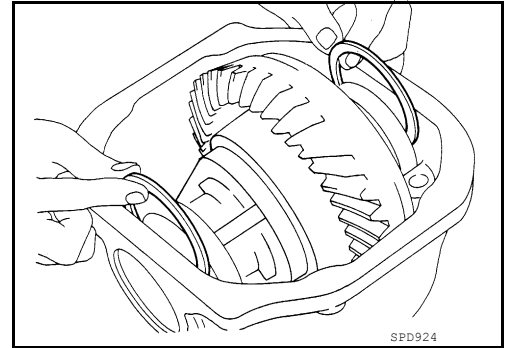

3. Align the matching mark on the side bearing cap with the matching mark on the gear carrier.
4. Install the side bearing caps and tighten the side bearing cap bolts to the specified torque.
5. Turn the differential assembly several times to seat the side bearings.

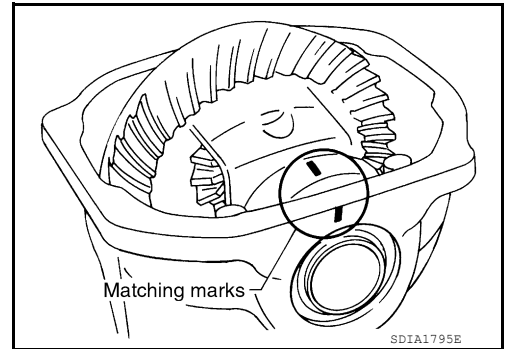


6. To determine side bearing preload torque, measure the pulling force of the differential assembly at the drive gear bolt using Tool.

**Tool number** : — (J-8129)

**Specification** : Refer to [DLN-267, "Inspection and Adjustment"](#).

**NOTE:**

If pulling force of the differential assembly at the drive gear bolt is within specification, side bearing preload torque will also be within specification. Refer to [DLN-267, "Inspection and Adjustment"](#).

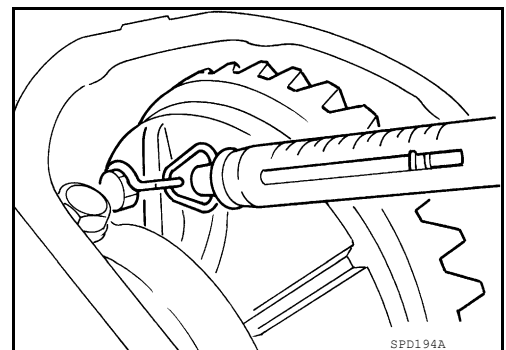

# REAR FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]

7. If the pulling force is outside the specification, use a thicker or thinner side bearing adjusting washer to adjust. Refer to [DLN-267, "Inspection and Adjustment"](#).

**If the pulling force is less than the specification:**

**Use a thicker side bearing adjusting washer.**


**If the pulling force is greater than the specification:**

**Use a thinner side bearing adjusting washer.**

**CAUTION:**

Select a side bearing adjusting washer for right and left individually.

8. Record the total amount of washer thickness required for the correct side bearing preload torque.

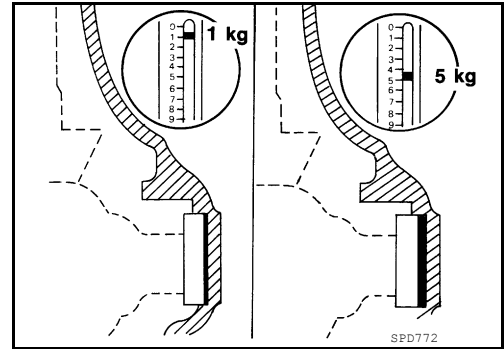

## ASSEMBLY


### Drive Pinion Assembly

1. Install the drive pinion front and rear bearing outer races using Tools.

**Tool number (A): ST15310000 ( — )**  
**(B): ST35325000 ( — )**  
**(C): ST30621000 ( — )**

**CAUTION:**

Do not reuse drive pinion front and rear bearing outer race.

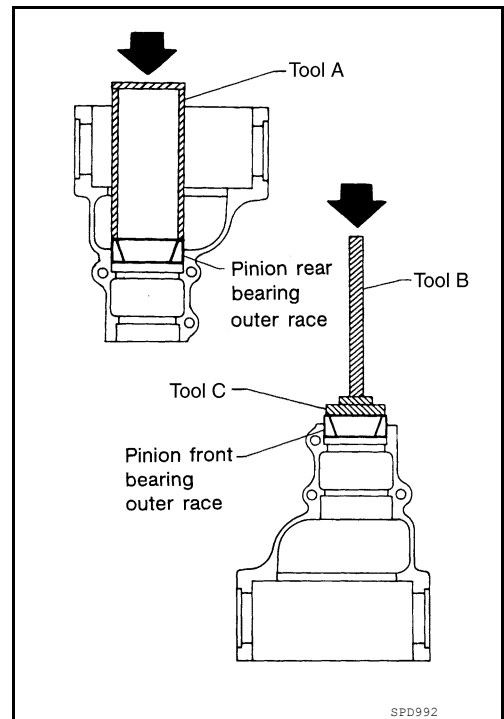


2. Select a drive pinion height adjusting washer. Refer to [DLN-267, "Inspection and Adjustment"](#).
3. Install the selected drive pinion height adjusting washer to the drive pinion. Press the drive pinion rear bearing inner race to it using Tool.

**Tool number : ST30022000 ( — )**

**CAUTION:**

- Install the drive pinion height adjusting washer in the proper direction as shown.
- Do not reuse drive pinion rear bearing inner race.

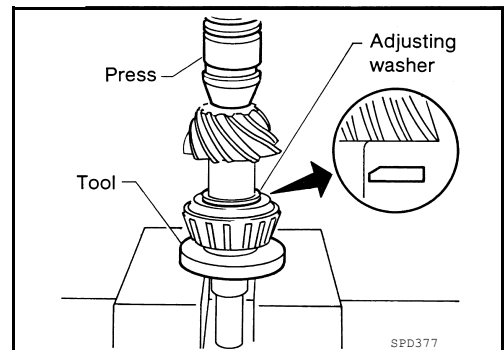

## REAR FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]

4. Assemble the collapsible spacer to the drive pinion.

**CAUTION:**


**Do not reuse collapsible spacer.**

5. Apply differential gear oil to the drive pinion rear bearing, and install the drive pinion assembly to the gear carrier.
6. Apply differential gear oil to the drive pinion front bearing, and install the drive pinion front bearing inner race to the drive pinion assembly.

**CAUTION:**

**Do not reuse drive pinion front bearing inner race.**

7. Press the drive pinion front bearing inner race to the drive pinion as far as drive pinion lock nut can be tightened using suitable spacer.


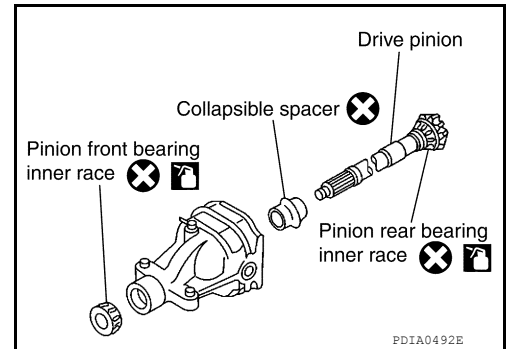


8. Apply multi-purpose grease to the lips of the new front oil seal. Then drive the new front oil seal in evenly until it becomes flush with the gear carrier using Tool.

**Tool number** : ST15310000 ( — )

**CAUTION:**

- Do not reuse front oil seal.
- Do not incline the new front oil seal when installing.
- Apply multi-purpose grease to the lips of the new front oil seal.

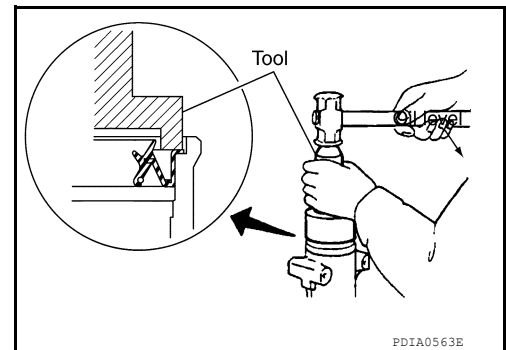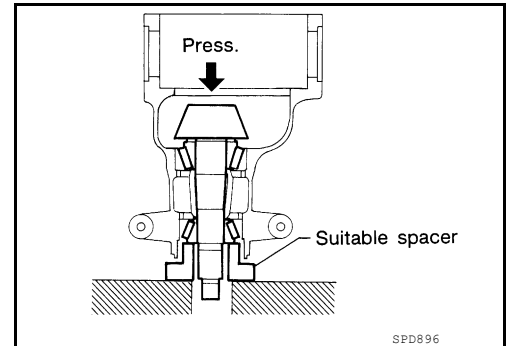

9. Install the companion flange to the drive pinion while aligning the matching marks.

## REAR FINAL DRIVE

< UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]

10. Apply anti-corrosive oil to the threads of the drive pinion and the seating surface of the new drive pinion lock nut. Then adjust the drive pinion lock nut tightening torque using suitable tool (A), and check the drive pinion bearing preload torque using Tool (B).

**Tool number (B): ST3127S000 (J-25765-A)**

**Drive pinion bearing preload torque:**

**1.77 - 2.64 N·m (0.18 - 0.26 kg·m, 16 - 23 in·lb)**



**CAUTION:**

- Do not reuse drive pinion lock nut.
- Apply anti-corrosive oil to the threads of the drive pinion and the seating surface of the new drive pinion lock nut.
- Adjust the drive pinion lock nut tightening torque to the lower limit first. Do not exceed the drive pinion lock nut specified torque.
- If the drive pinion bearing preload torque exceeds the specified value, replace collapsible spacer and tighten it again to adjust. Do not loosen drive pinion lock nut to adjust the drive pinion bearing preload torque.
- After adjustment, rotate drive pinion back and forth 2 to 3 times to check for unusual noise, rotation malfunction, and other malfunctions.

11. Check companion flange runout.
12. Install the differential case assembly.

### Differential Assembly

1. Install side gear thrust washers with the same thickness as the ones installed prior to disassembly, or reinstall the old ones on the side gears.

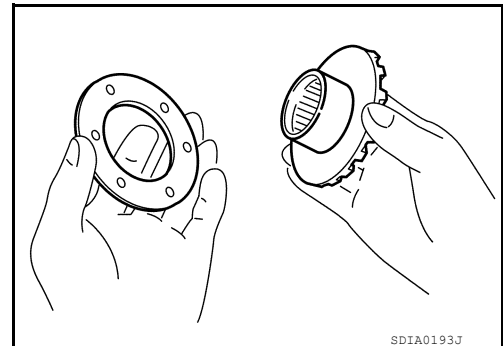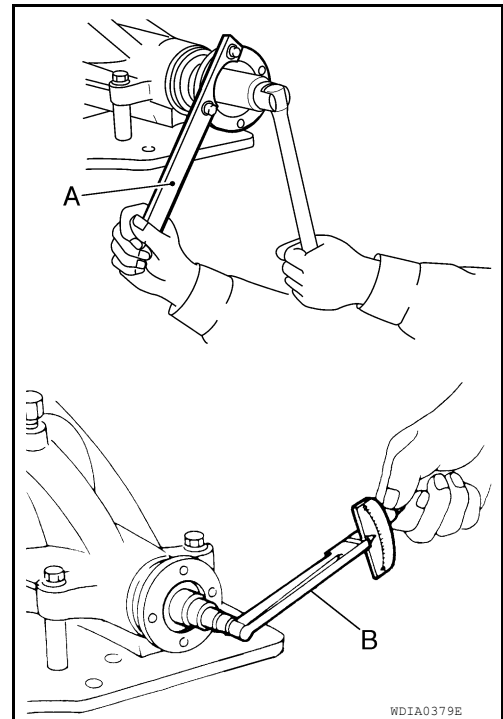


2. Install the side gears and side gear thrust washers into the differential case.

**CAUTION:**

**Make sure that the circular clip is installed to side gears.**

3. Install the pinion mate thrust washers to the two pinion mate gears. Then install the pinion mate gears with the pinion mate thrust washers by aligning them in diagonally opposite positions and rotating them into the differential case.

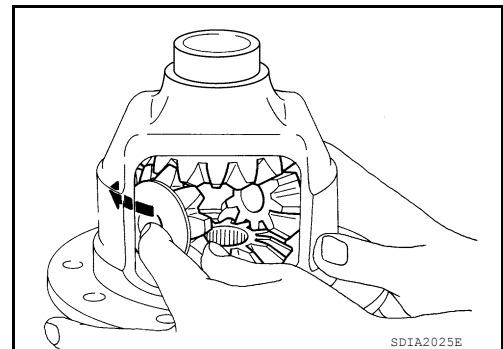


A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# REAR FINAL DRIVE

## < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]


- Align the lock pin hole on the differential case with the lock pin hole on the pinion mate shaft, and install the pinion mate shaft.
- Measure the side gear end play. If necessary, select the appropriate side gear thrust washers. Refer to [DLN-267, "Inspection and Adjustment"](#).

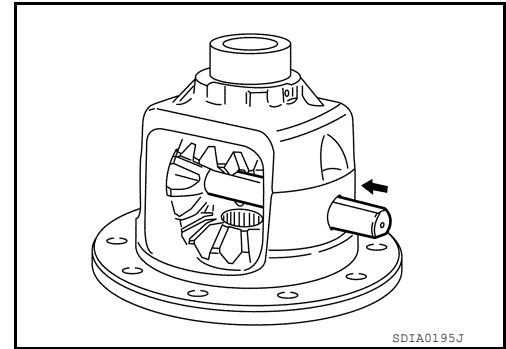


- Drive a new lock pin into the pinion mate shaft until it is flush with the differential case using suitable tool.

**CAUTION:**

**Do not reuse lock pin.**

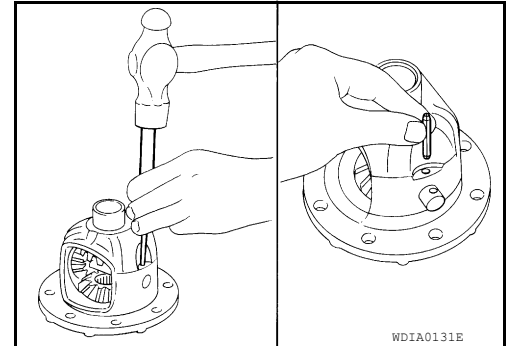


- Align the matching mark of the differential case with the mark of the drive gear, then place the drive gear onto the differential case.

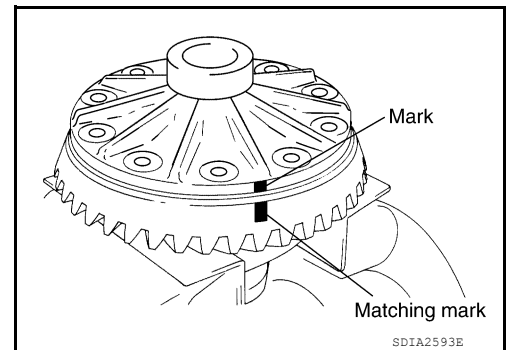

- Apply thread locking sealant into the threaded holes of the drive gear and install the bolts.
  - Use Genuine Medium Strength Thread Locking Sealant or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).

**CAUTION:**

**Make sure the drive gear back and threaded holes are clean.**

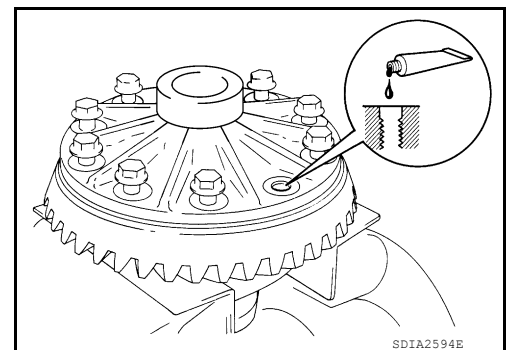


- Tighten the drive gear bolts to the specified torque. After tightening the drive gear bolts to the specified torque, tighten an additional 34° using Tool (A).

**Tool number : KV10112100-A (BT-8653-A)**

**CAUTION:**

- Always use Tool. Avoid tightening based on visual check alone.
- Tighten drive gear bolts in a crisscross pattern.

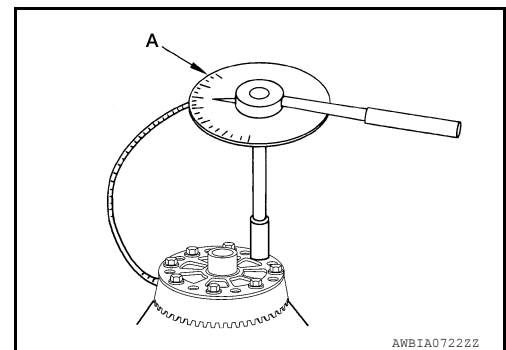



# REAR FINAL DRIVE


## < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]


10. Press the side bearing inner races into the differential case using Tools.

**Tool number** (A): KV38100200 (J-26233)  
(B): ST33081000 ( — )


**CAUTION:**  
Do not reuse side bearing inner race.

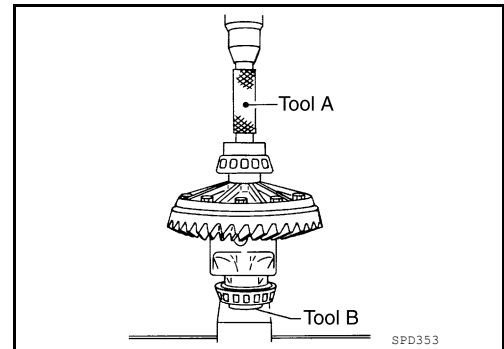


11. Install the differential case assembly with the side bearing outer races into the gear carrier.  
12. Measure the side bearing preload torque. If necessary, select the appropriate side bearing adjusting washers.

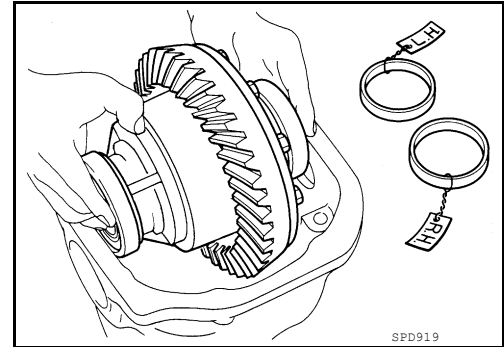

13. Insert the selected left and right side bearing adjusting washers in place between the side bearings and gear carrier.

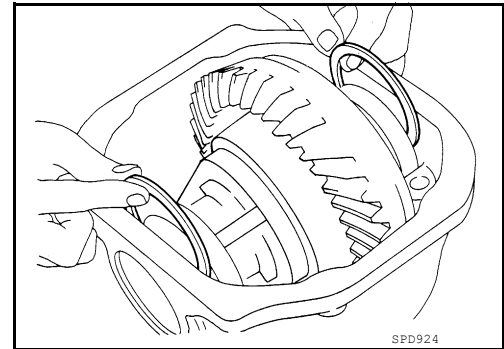

14. Install the side bearing caps with the matching marks aligned and tighten the side bearing cap bolts to the specified torque.

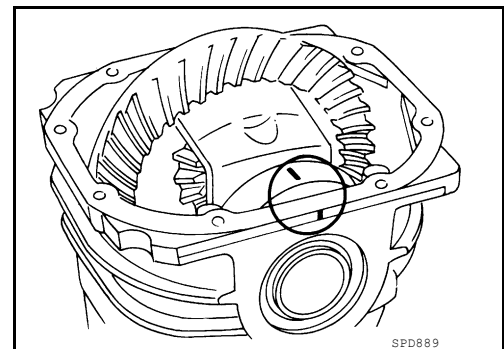

15. Check and adjust the drive gear runout, tooth contact, drive gear to drive pinion backlash, and total preload torque.  
Recheck the above items.  
16. Install the side flanges.

A  
B  
C  
DLN  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


## REAR FINAL DRIVE

### < UNIT DISASSEMBLY AND ASSEMBLY >

[REAR FINAL DRIVE: R230]

17. Apply a 3.2mm (0.126 in) bead of sealant to the mating surface of the carrier cover.
  - Use Genuine Silicone RTV or equivalent. Refer to [GI-21, "Recommended Chemical Products and Sealants"](#).

**CAUTION:**  
Remove any old sealant adhering to the mating surfaces. Also remove any moisture, oil, or foreign material adhering to the application and mating surfaces.
18. Install the carrier cover to the gear carrier. Tighten the bolts to the specified torque. Refer to [DLN-246, "Removal and Installation"](#).
19. Install the side flange. Refer to [DLN-244, "Removal and Installation"](#).

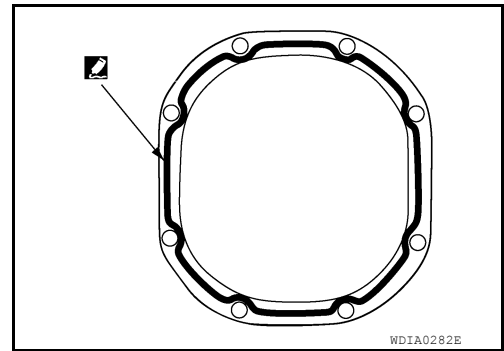


#### Side Flange

1. Apply multi-purpose grease to the lips of the new side oil seal. Then drive the new side oil seal in evenly until it becomes flush with the gear carrier using Tool.

**Tool number** : KV38100200 (J-26233)

**CAUTION:**

- Do not reuse side oil seal.
- Do not incline the new side oil seal when installing.
- Apply multi-purpose grease to the lips of the new side oil seal.

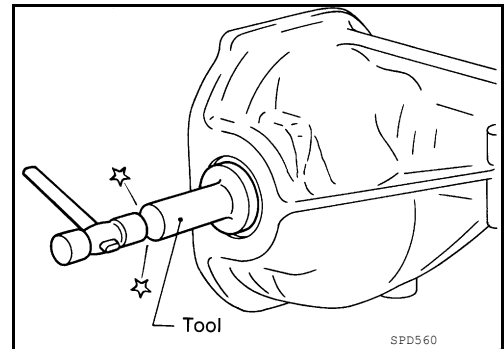

2. Install the side flange using Tool.
  - a. Install the Tool to the side oil seal as shown.


**Tool number** : KV38107900 (J-39352)

- b. Insert the side flange until the serrated part of the side flange has engaged the serrated part of the side gear and remove the Tool.
  - c. Drive in the side flange using suitable tool.

**NOTE:**

Installation is completed when the driving sound of the side flange turns into a sound which seems to affect the whole rear final drive assembly.

3. Refill with specified fluid. Refer to [DLN-241, "Changing Differential Gear Oil"](#).

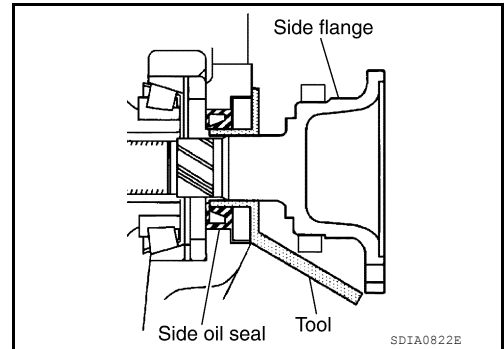

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[REAR FINAL DRIVE: R230]

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### General Specification

INFOID:0000000011290960

Applied model	2WD	4WD	4WD
	ALL	SV	SL, Platinum
Final drive model	R230		
Gear ratio	2.937		3.357
Number of teeth (Drive gear/Drive pinion)	47/16		47/14
Oil capacity (Approx.)	1.75 ℓ (3-3/4 US pt, 3-1/8 Imp pt)		
Number of pinion gears	2		
Drive pinion adjustment spacer type	Collapsible		

#### Inspection and Adjustment

INFOID:0000000011290961

#### DRIVE GEAR RUNOUT

Unit: mm (in)

Item	Runout limit
Drive gear back face	0.05 (0.0020) or less

#### SIDE GEAR CLEARANCE

Unit: mm (in)

Item	Specification
Side gear back clearance (Clearance limit between side gear and differential case for adjusting side gear backlash)	0.20 (0.0079) or less (Each gear should rotate smoothly without excessive resistance during differential motion.)

#### PRELOAD TORQUE

Item	Specification
Drive pinion bearing preload torque	1.77 – 2.64 N·m (0.18 – 0.26 kg-m, 16 – 23 in-lb)
Side bearing preload torque (reference value determined by drive gear bolt pulling force)	0.20 – 0.52 N·m (0.02 – 0.05 kg-m, 2 – 4 in-lb)
Pulling force of the differential assembly at the drive gear bolt (by spring gauge)	34.2 – 39.2 N (3.5 – 4 kg, 7.7 – 8.8 lb)
Total preload torque (Total preload torque = drive pinion bearing preload torque + Side bearing preload torque)	2.05 – 4.11 N·m (0.21 – 0.42 kg-m, 19 – 36 in-lb)

#### BACKLASH

Unit: mm (in)

Item	Specification
Drive gear to drive pinion gear	0.13 – 0.18 (0.0051 – 0.0070)

#### COMPANION FLANGE RUNOUT

Unit: mm (in)

Item	Runout limit
Outer side of the companion flange	0.08 (0.0031) or less

#### SELECTIVE PARTS

##### Side Gear Thrust Washer

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[REAR FINAL DRIVE: R230]

Unit: mm (in)

Thickness	Part number*
1.75 (0.0688)	38424 7S000
1.80 (0.0708)	38424 7S001
1.85 (0.0728)	38424 7S002

\*: Always check with the Parts Department for the latest parts information.

## Drive Pinion Height Adjusting Washer

Unit: mm (in)

Thickness	Part number*	Thickness	Part number*
2.59 (0.1020)	38154 40P00	2.79 (0.1098)	38154 40P10
2.61 (0.1028)	38154 40P01	2.81 (0.1106)	38154 40P11
2.63 (0.1035)	38154 40P02	2.83 (0.1114)	38154 40P12
2.65 (0.1043)	38154 40P03	2.85 (0.1122)	38154 40P13
2.67 (0.1051)	38154 40P04	2.87 (0.1130)	38154 40P14
2.69 (0.1059)	38154 40P05	2.89 (0.1138)	38154 40P15
2.71 (0.1067)	38154 40P06	2.91 (0.1146)	38154 40P16
2.73 (0.1075)	38154 40P07	2.93 (0.1154)	38154 40P17
2.75 (0.1083)	38154 40P08	2.95 (0.1161)	38154 40P18
2.77 (0.1091)	38154 40P09	2.97 (0.1169)	38154 40P19

\*: Always check with the Parts Department for the latest parts information.

## Side Bearing Adjusting Washer

Unit: mm (in)

Thickness	Part number*	Thickness	Part number*
2.00 (0.0787)	38453 40P00	2.35 (0.0925)	38453 40P07
2.05 (0.0807)	38453 40P01	2.40 (0.0945)	38453 40P08
2.10 (0.0827)	38453 40P02	2.45 (0.0965)	38453 40P09
2.15 (0.0846)	38453 40P03	2.50 (0.0984)	38453 40P10
2.20 (0.0866)	38453 40P04	2.55 (0.1004)	38453 40P11
2.25 (0.0886)	38453 40P05	2.60 (0.1024)	38453 40P12
2.30 (0.0906)	38453 40P06		

\*: Always check with the Parts Department for the latest parts information.