

SECTION **SE**
SEAT

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

CONTENTS

BASIC INSPECTION	3	THIRD ROW POWER FOLDING SEAT	31
DIAGNOSIS AND REPAIR WORKFLOW	3	Wiring Diagram	31
Work Flow	3	SYMPTOM DIAGNOSIS	38
INSPECTION AND ADJUSTMENT	5	THIRD ROW POWER FOLDING SEAT	38
Preliminary Check	5	Symptom Table	38
SYSTEM DESCRIPTION	6	NONE OF THE THIRD ROW POWER FOLDING SEATS WILL OPERATE WITH ANY SWITCH.	39
THIRD ROW POWER FOLDING SEAT	6	None of the Third Row Power Folding Seats Will Operate With Any Third Row Power Folding Seat Switch	39
System Description	6	ONLY ONE THIRD ROW POWER FOLDING SEAT WILL OPERATE.	40
Component Parts Location	7	Only One Third Row Power Folding Seat Will Operate	40
Component Description	7	THIRD ROW POWER FOLDING SEAT WILL OPERATE IN ONLY ONE DIRECTION.	42
DTC/CIRCUIT DIAGNOSIS	8	Third Row Power Folding Seat Will Operate in Only One Direction	42
HEATED SEAT	8	THIRD ROW POWER FOLDING SEAT WILL STOP SHORT OF IT'S FULLY UP OR DOWN POSITION.	44
Description	8	Third Row Power Folding Seat Stops Short of it's Fully Up or Down Position	44
THIRD SEAT	9	THIRD ROW POWER FOLDING SEAT MAKES EXCESSIVE NOISE WHILE MOVING.	45
Power Supply and Ground Circuit Check for Third Row Power Folding Seat Control Unit	9	Third Row Power Folding Seat Makes Excessive Noise While Moving	45
Third Row Power Folding Seat Switch	10	SQUEAK AND RATTLE TROUBLE DIAGNOSES	46
Third Row Power Folding Seat Motor	10	Work Flow	46
ECU DIAGNOSIS INFORMATION	12	Generic Squeak and Rattle Troubleshooting	47
THIRD ROW POWER FOLDING SEAT CONTROL UNIT	12		
Reference Value	12		
DTC Index	13		
Fail Safe	14		
WIRING DIAGRAM	15		
POWER SEAT	15		
Wiring Diagram - Driver Side Without Automatic Drive Positioner	15		
Wiring Diagram - Passenger Side	20		
HEATED SEAT	24		
Wiring Diagram	24		

Diagnostic Worksheet	50	SECOND SEAT	68
PRECAUTION	52	Exploded View	68
PRECAUTIONS	52	Removal and Installation - Bucket Seat (LH/RH) ...	73
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	52	Removal and Installation - Center Seat	73
Precaution Necessary for Steering Wheel Rota- tion After Battery Disconnect	52	THIRD SEAT	74
Occupant Classification System	53	Without Power Folding	74
Precaution for Work	53	Exploded View	74
PREPARATION	54	Removal and Installation - LH Seat	77
PREPARATION	54	Removal and Installation - RH Seat	77
Special Service Tool	54	With Power Folding	79
Commercial Service Tool	54	Exploded View	79
CLIP LIST	55	Removal and Installation - LH Seat	81
Descriptions for Clips	55	Removal and Installation - Power Seat Cross Beam	82
REMOVAL AND INSTALLATION	59	Removal and Installation - Power Seat Cable	85
FRONT SEAT	59	Removal and Installation - RH Seat	88
Exploded View	59	UNIT DISASSEMBLY AND ASSEMBLY ...	90
Removal and Installation - Front Seat Assembly ...	62	FRONT SEAT	90
Removal and Installation - Power Seat Switch	62	Exploded View	90
SIDE AIR BAG MODULE	65	Disassembly and Assembly	93
DRIVER SIDE	65	SECOND SEAT	96
DRIVER SIDE : Side Air Bag Module	65	Exploded View	96
PASSENGER SIDE	66	THIRD SEAT	102
PASSENGER SIDE : Side Air Bag Module	66	Without Power Folding	102
		Exploded View	102
		Third Seat	105
		With Power Folding	106
		Exploded View	106
		Third Seat	108

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000011289377

WORK FLOW

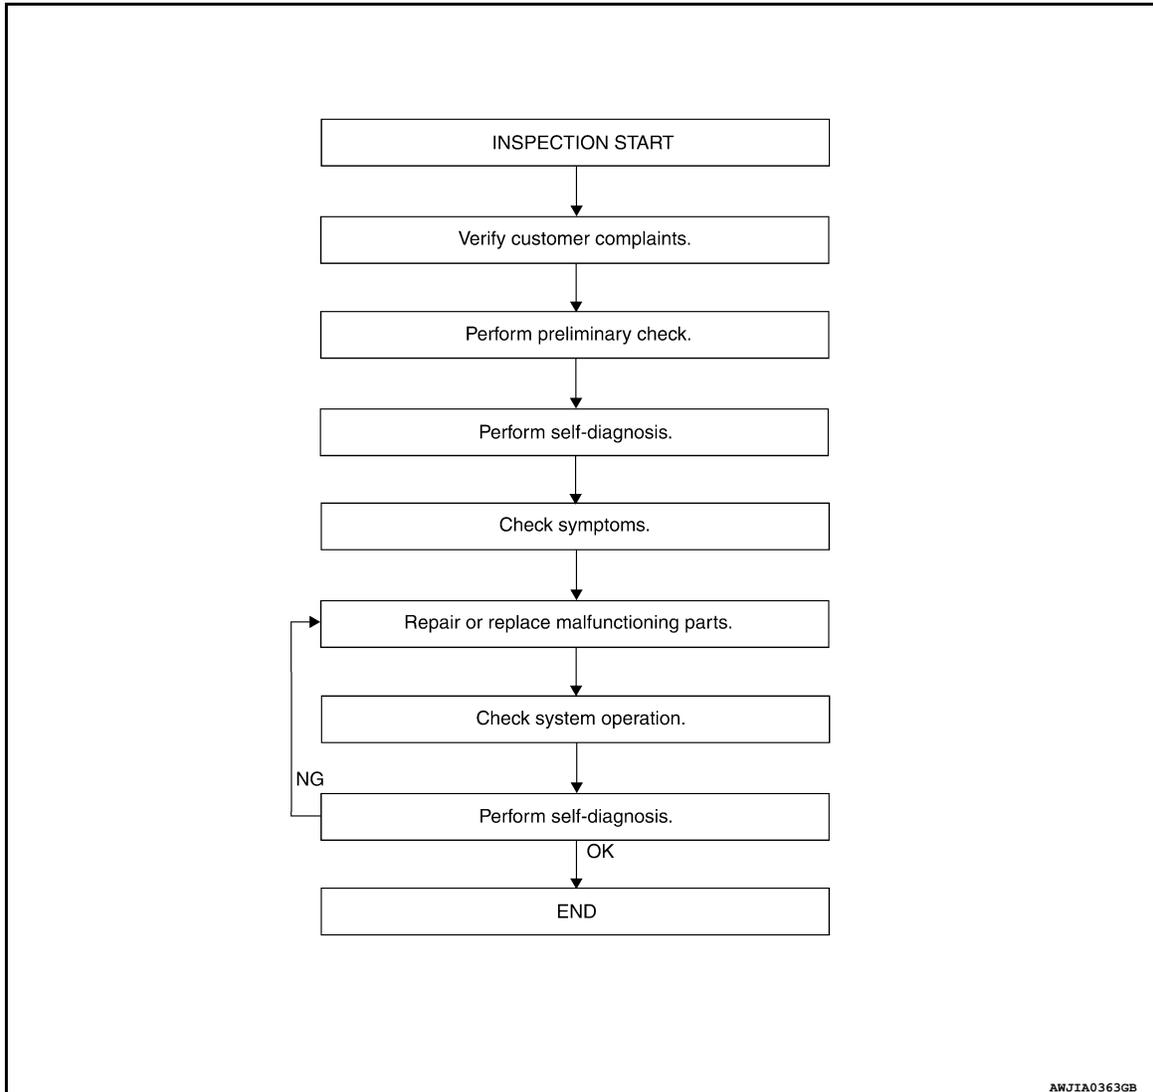

DETAILED FLOW

1. CUSTOMER INFORMATION

Interview the customer to obtain detailed information about the symptom.

>> GO TO 2

2. PRELIMINARY CHECK

Perform preliminary check. Refer to [SE-5, "Preliminary Check"](#).

>> GO TO 3

3. SELF-DIAGNOSIS

Perform self-diagnosis. Refer to [SE-13, "DTC Index"](#).

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

>> GO TO 4

4.SYMPTOM

Check for symptoms. Refer to [SE-38. "Symptom Table"](#).

>> GO TO 5

5.MALFUNCTIONING PARTS

Repair or replace the applicable parts.

>> GO TO 6

6.SYSTEM OPERATION

Check system operation.

>> GO TO 7

7.SELF-DIAGNOSIS

Perform self-diagnosis. Refer to [SE-13. "DTC Index"](#).

Are any DTCs displayed?

YES >> GO TO 5

NO >> Inspection End.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

INSPECTION AND ADJUSTMENT

Preliminary Check

INFOID:000000011289378

1. FOREIGN OBJECTS

Check the following:

- objects on or behind the seats that could cause binding
- objects under the seats that may be interfering with the seat's moving parts

Are there any foreign objects that could be causing interference with the seats?

YES >> Remove objects.

NO >> GO TO 2.

2. WIRING CONNECTIONS

1. Disconnect third row power folding seat control unit and seat motor harness connectors.
2. Check terminals for damage or loose connections.
3. Reconnect harness connectors.

Are any connectors damaged or loose?

YES >> Repair or replace damaged parts.

NO >> GO TO 3.

3. POWER AND GROUND

Check power supply and ground circuits for third row power folding seat control unit. Refer to [SE-9, "Power Supply and Ground Circuit Check for Third Row Power Folding Seat Control Unit"](#).

Is the inspection result normal?

YES >> Refer to [SE-13, "DTC Index"](#).

NO >> Repair or replace as necessary.

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

THIRD ROW POWER FOLDING SEAT

< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

THIRD ROW POWER FOLDING SEAT


System Description

INFOID:000000011289379

The third row power folding seat system is capable of allowing a user to fold up or down either the left or right third row seat using a set of front or rear mounted switches.


THIRD ROW POWER FOLDING SEAT CONTROL UNIT

The third row power folding seat control unit is located in the control unit/cross beam assembly underneath the LH third row seat. It receives signals from the third row power folding seat switches, TCM and the Hall effect switches mounted in the LH and RH seat motors. The control unit has self-diagnosis capability through chime codes and may be accessed by turning the ignition switch ON and OFF three times. The control unit drives the LH and RH seat motors to fold them up and down.

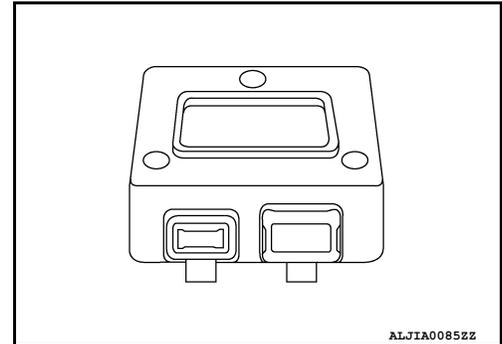


THIRD ROW POWER FOLDING SEAT SWITCH

The third row power folding seat switches are located in pairs on the luggage side finisher RH. A switch must be held in order for the seat to move.

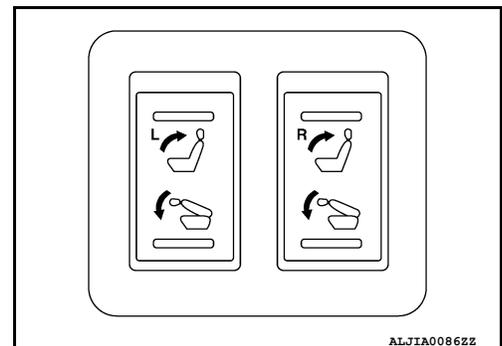

THIRD ROW POWER FOLDING SEAT MOTORS

The third row power folding seat motors are located in the seat motor/hinge assembly. There are two motors, one for LH and one for RH seat folding operations. Power and ground are provided to the motors by the third row power folding seat control unit. The control unit reverses polarity to the motors to raise or lower the seat. The motors also contain Hall effect switches. These switches send signals back to the control unit which help it determine fully open and closed positions.

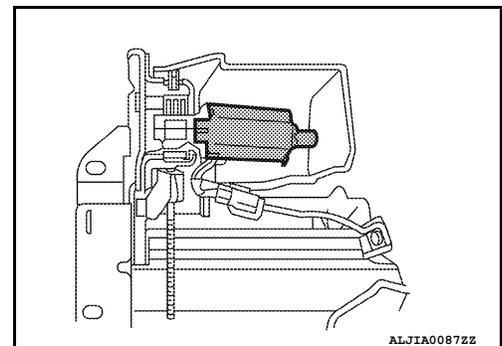


THIRD ROW POWER FOLDING SEAT

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000011289380

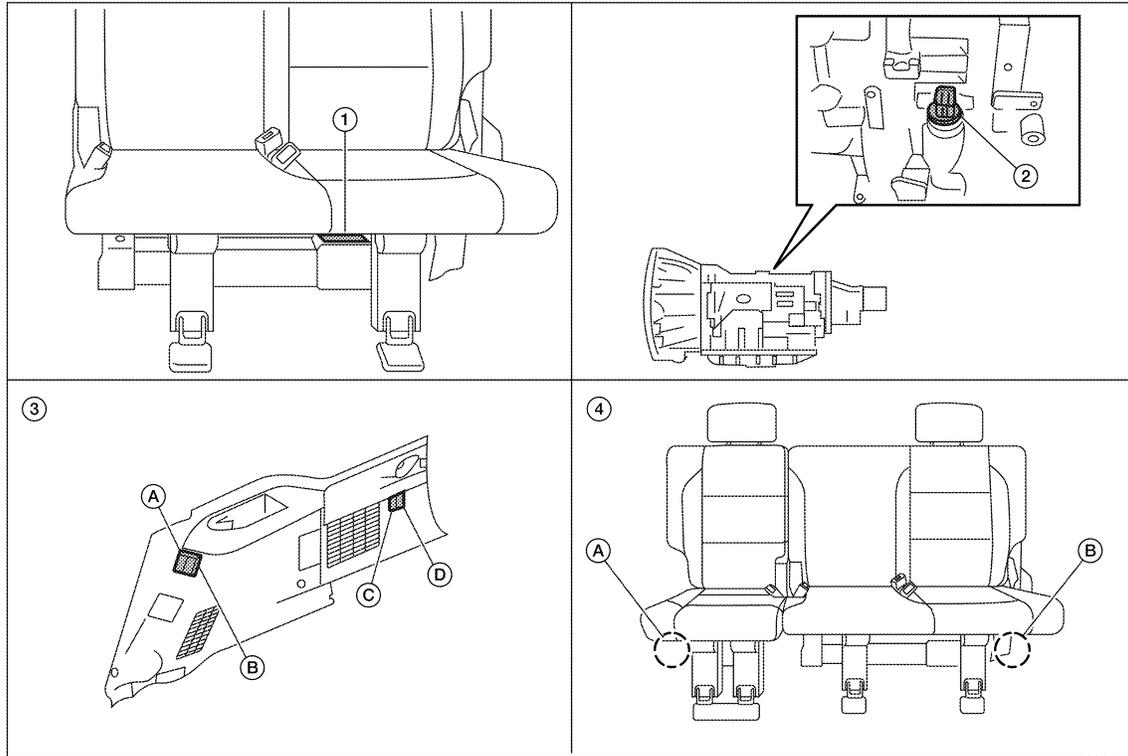

1. Third row power folding seat control unit B401, B402
2. A/T assembly F9
3. Third row power folding seat switches
 - A: Third row power folding seat switch passenger side (front) B162
 - B: Third row power folding seat switch driver side (front) B164
 - C: Third row power folding seat switch driver side (rear) B165
 - D: Third row power folding seat switch passenger side (rear) B163
4. Third row power folding seat motors
 - A: RH (40%) seat B426
 - B: LH (60%) seat B403

Component Description

INFOID:000000011289381

Component	Function
Third row power folding seat control unit	<ul style="list-style-type: none"> • Receive inputs from third row power folding seat switches and A/T assembly (transmission range switch) • Drive third row power folding seat motors • Performs self-diagnostics
A/T assembly	Provide transmission range switch signal to third row power folding seat control unit
Third row power folding seat switches	Provide fold up/fold down ground signals to third row power folding seat control unit
Third row power folding seat motors	<ul style="list-style-type: none"> • Fold seats up and down • Provide feedback signals to third row power folding seat control unit

HEATED SEAT

< DTC/CIRCUIT DIAGNOSIS >


DTC/CIRCUIT DIAGNOSIS

HEATED SEAT

Description

INFOID:000000011289382

- When handling seat, be extremely careful not to scratch heating unit.
- Front passenger seat cushion and seatbacks equipped with airbags cannot be disassembled. They are replaced as assemblies only.
- Do not use any organic solvent, such as thinner, benzene, alcohol, etc. to clean trim.

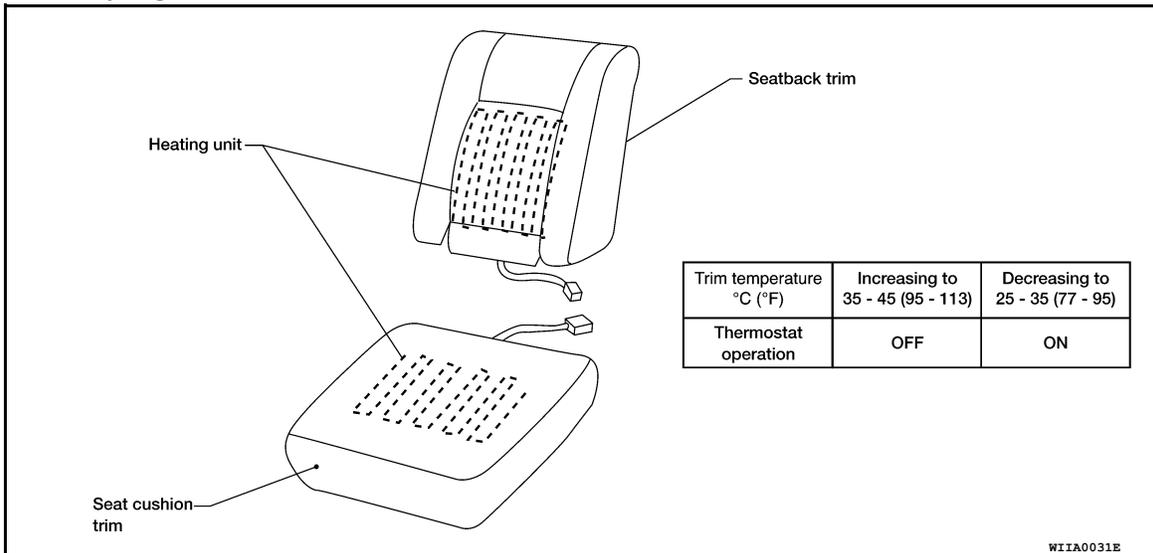

THIRD SEAT

< DTC/CIRCUIT DIAGNOSIS >

THIRD SEAT

Power Supply and Ground Circuit Check for Third Row Power Folding Seat Control Unit

INFOID:000000011289383

Regarding Wiring Diagram information, refer to [SE-31, "Wiring Diagram"](#).

1. CHECK FUSES AND FUSIBLE LINK

Check for blown fuses or fusible link.

Unit	Power source	Fuse or Fusible Link	Location
Third row power folding seat control unit	Battery	F	Fuse and fusible link box
		19	Fuse block (J/B)
	Ignition switch ON or START	14	


Are any fuses or fusible links blown?

YES >> Install new fuse. Eliminate cause of malfunction if fuse blows again.

NO >> GO TO 2

2. CHECK POWER SUPPLY CIRCUIT

1. Disconnect third row power folding seat control unit connectors B401 and B402.
2. Check voltage between third row power folding seat control unit harness connectors B401, B402 terminals 1, 8, 13, 14 and ground.

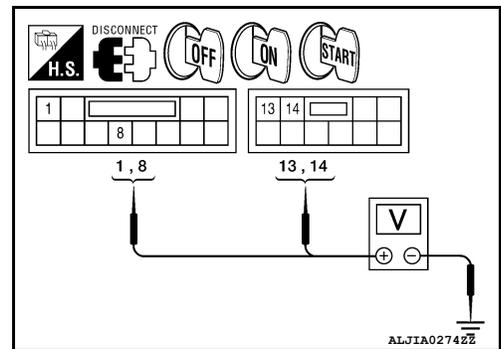

Terminals		Ignition switch position			
(+)		(-)	OFF	ON	START
Connector	Terminal		0V	Battery voltage	Battery voltage
B401	1	Ground	Battery voltage		
	8		0V	Battery voltage	
B402	13		Battery voltage		
	14		Battery voltage		

Are the inspection results normal?


YES >> GO TO 3

NO >> Check harness for open between third row power folding seat control unit and fuse or fusible link.

3. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between third row power folding seat control unit harness connector B402 terminals 16, 18, 21 and ground.

Terminals		Continuity
(+)		
Connector	Terminal	

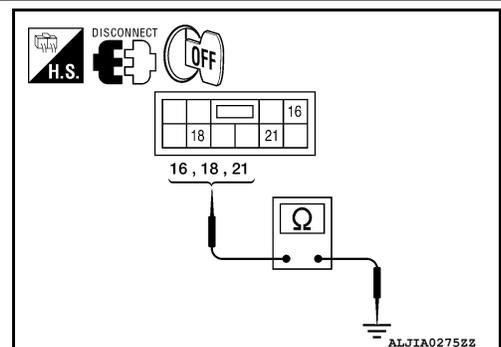

THIRD SEAT

< DTC/CIRCUIT DIAGNOSIS >

B402	16	Ground	Yes
	18		
	21		

Do all terminals have ground?

- YES >> Inspection End.
 NO >> Repair or replace harness.

Third Row Power Folding Seat Switch

INFOID:000000011289384


1. CHECK THIRD ROW POWER FOLDING SEAT SWITCH OPERATION

1. Turn ignition switch OFF.
2. Disconnect third row power folding seat switch.
3. Check continuity between third row power folding seat switch terminals 2, 3 and 4.

Terminals		Condition	Continuity
2	4	Press switch button to fold up.	Yes
3	4	Press switch button to fold down.	Yes

Do you have continuity?

- YES >> Inspection End.
 NO >> Replace third row power folding seat switch. Refer to [INT-25, "Removal and Installation"](#).

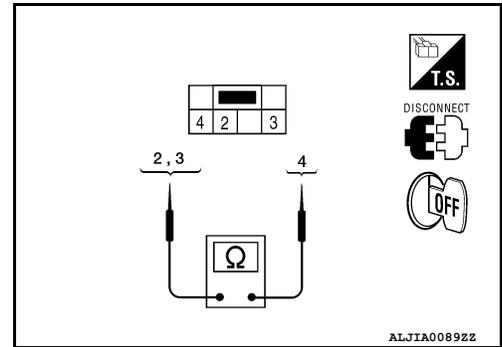

Third Row Power Folding Seat Motor


INFOID:000000011289385

1. CHECK MOTOR OPERATION

1. Turn ignition switch OFF.
2. Disconnect third row power folding seat motor connector B403 or B426.
3. Check operation by applying battery voltage to motor terminals 3 and 4.

CAUTION:

- Do not operate motor for more than 3 seconds.
- Be careful not to overheat the harness.
- Third row power folding seat control unit may have to relearn fold up/down positions after testing.

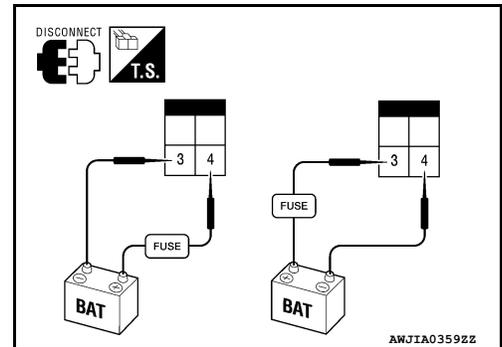

LH (60%) seat

Terminal	Motor	Seat
3 (Battery positive) - 4 (Battery negative)	Rotates counter-clockwise	Up
4 (Battery positive) - 3 (Battery negative)	Rotates clockwise	Down

RH (40%) seat

Terminal	Motor	Seat
3 (Battery positive) - 4 (Battery negative)	Rotates counter-clockwise	Up
4 (Battery positive) - 3 (Battery negative)	Rotates clockwise	Down

Does the motor rotate in both directions?

- YES >> GO TO 2.
 NO >> Replace third row power folding seat motor. Refer to [SE-79, "Exploded View"](#).

2. CHECK RESISTANCE IN MOTOR

THIRD SEAT

< DTC/CIRCUIT DIAGNOSIS >


Check resistance between motor terminals 3 and 4.

3 - 4 : Approx. 0.5 Ω

Is the resistance reading of the motor normal?

YES >> Inspection End.

NO >> Replace third row power folding seat motor. Refer to [SE-79](#). "[Exploded View](#)".

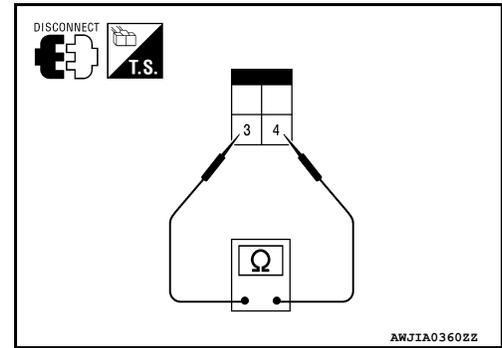

A
B
C
D
E
F
G
H
I

SE

K
L
M
N
O
P

THIRD ROW POWER FOLDING SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >


ECU DIAGNOSIS INFORMATION

THIRD ROW POWER FOLDING SEAT CONTROL UNIT

Reference Value

INFOID:000000011289386

TERMINAL LAYOUT

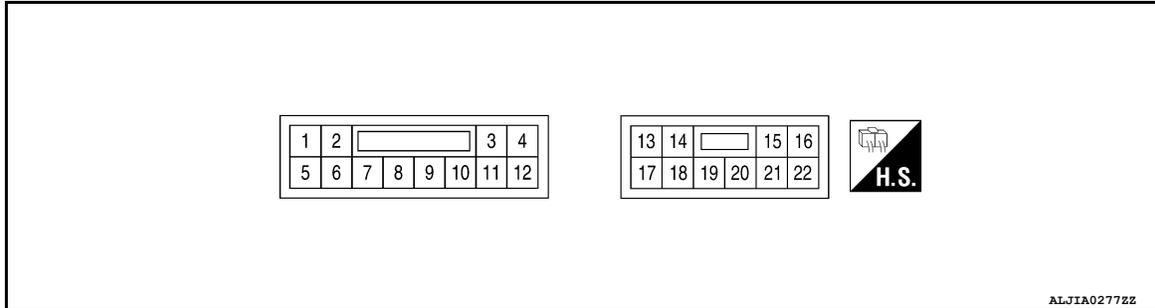

PHYSICAL VALUES

Terminal No.		Wire color	Description		Condition	Voltage (V) (Approx.)
+	-		Signal name	Input/ Output		
1	Ground	Y/R	Battery	Input	—	Battery voltage
3	Ground	LG	40% seat switch signal (down)	Output	Push either third row power folding seat switch RH (down)	0
					Third row power folding seat switch (RH) released	Battery voltage
4	Ground	V	60% seat switch signal (down)	Output	Push either third row power folding seat switch LH (down)	0
					Third row power folding seat switch (LH) released	Battery voltage
7	Ground	G/R	Park signal	Input	A/T selector lever in P or N	Battery voltage
					A/T selector lever not in P or N	0
8	Ground	O/L	Ignition signal	Input	Ignition switch ON or START	Battery voltage
					Ignition switch OFF	0
9	Ground	G/B	40% seat Hall signal	Input	—	9V
10	Ground	O/B	60% seat Hall signal	Input	—	9V
11	Ground	SB	40% seat switch signal (up)	Output	Push either third row power folding seat switch RH (up)	0
					Third row power folding seat switch (RH) released	Battery voltage
12	Ground	O	60% seat switch signal (up)	Output	Push either third row power folding seat switch LH (up)	0
					Third row power folding seat switch (LH) released	Battery voltage
13	Ground	W	Battery	Input	—	Battery voltage
14	Ground	W	Battery	Input	—	Battery voltage
15	Ground	Y/B	Hall switch ground	—	—	—
16	Ground	B	Switch ground	—	—	—
17	Ground	W/L	60% Seat motor	Output	—	Battery voltage
18	Ground	B	Ground	—	—	—
19	Ground	R/W	60% Seat motor	Output	—	Battery voltage

THIRD ROW POWER FOLDING SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

Terminal No.		Wire color	Description		Condition	Voltage (V) (Approx.)
+	-		Signal name	Input/ Output		
20	Ground	G/W	40% Seat motor	Output	—	Battery voltage
21	Ground	B	Ground	—	—	—
22	Ground	V	40% Seat motor	Output	—	Battery voltage

DTC Index

INFOID:000000011289387

NOTE:

To initiate a chime code sequence cycle, turn the ignition switch ON and OFF 3 times within 5 seconds. The first digit will chime, then a pause, followed by the second digit. For example, a code 13 will have 1 chime, followed by a pause, and then 3 chimes. The third row power folding seat control unit will clear all codes that have been corrected after 255 ignition cycles.

DTC	Malfunction	Service Procedure
11	LH seat has traveled past normal fold down position	1. Perform Preliminary Check. Refer to SE-5, "Preliminary Check" .
12	LH seat has traveled past normal fold up position	2. Check third row power folding seat motor LH Hall signal and ground circuits. Refer to SE-44, "Third Row Power Folding Seat Stops Short of it's Fully Up or Down Position" . 3. Replace third row power folding seat motor LH. Refer to SE-79, "Exploded View" .
13	LH seat actuation cycle has taken too long and timed out	1. Perform Preliminary Check. Refer to SE-5, "Preliminary Check" . 2. Check third row power folding seat motor LH motor circuits. Refer to SE-40, "Only One Third Row Power Folding Seat Will Operate" . 3. Replace third row power folding seat motor LH. Refer to SE-79, "Exploded View" .
14	Third row power folding seat control unit NVRAM data for LH seat position has been corrupted	Replace third row power folding seat control unit. Refer to SE-82, "Removal and Installation - Power Seat Cross Beam" .
15	Power supply to third row power folding seat control unit has been interrupted during LH seat fold up/down cycle	1. Perform Preliminary Check. Refer to SE-5, "Preliminary Check" . 2. Replace third row power folding seat control unit. Refer to SE-82, "Removal and Installation - Power Seat Cross Beam" .
21	RH seat has traveled past normal fold down position	1. Perform Preliminary Check. Refer to SE-5, "Preliminary Check" .
22	RH seat has traveled past normal fold up position	2. Check third row power folding seat motor RH Hall signal and ground circuits. Refer to SE-44, "Third Row Power Folding Seat Stops Short of it's Fully Up or Down Position" . 3. Replace third row power folding seat motor RH. Refer to SE-79, "Exploded View" .
23	RH seat actuation cycle has taken too long and timed out	1. Perform Preliminary Check. Refer to SE-5, "Preliminary Check" . 2. Check third row power folding seat motor RH motor circuits. Refer to SE-40, "Only One Third Row Power Folding Seat Will Operate" . 3. Replace third row power folding seat motor RH. Refer to SE-79, "Exploded View" .
24	Third row power folding seat control unit NVRAM data for RH seat position has been corrupted	Replace third row power folding seat control unit. Refer to SE-82, "Removal and Installation - Power Seat Cross Beam" .

THIRD ROW POWER FOLDING SEAT CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

DTC	Malfunction	Service Procedure
25	Power supply to third row power folding seat control unit has been interrupted during RH seat fold up/down cycle	<ol style="list-style-type: none">1. Perform Preliminary Check. Refer to SE-5, "Preliminary Check".2. Replace third row power folding seat control unit. Refer to SE-82, "Removal and Installation - Power Seat Cross Beam".
33	System normal or END of chime codes	—

Fail Safe


INFOID:000000011289388

The third row power folding seat will not operate under the following conditions:

- Power supply to the third row power folding seat control unit falls below 9.0V
- One of the third row power folding seat switches is stuck closed
- The A/T selector lever is not in PARK position and the ignition switch is ON


POWER SEAT FOR DRIVER SIDE CONNECTORS - WITHOUT AUTOMATIC DRIVE POSITIONER

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

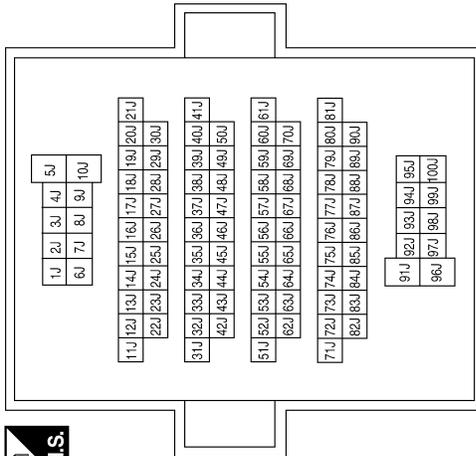

Terminal No.	Color of Wire	Signal Name
96G	W/B	-

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

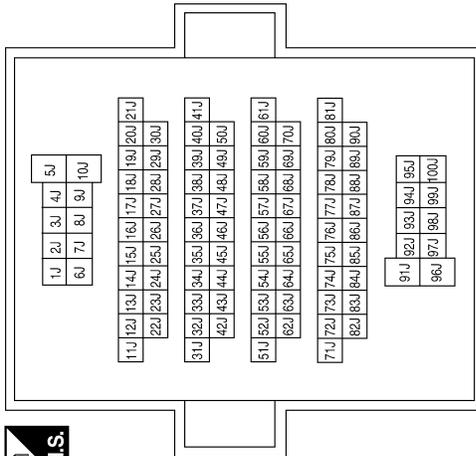

Terminal No.	Color of Wire	Signal Name
91J	L/B	-

Connector No.	M82
Connector Name	CIRCUIT BREAKER-2
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L/B	-
2	W/B	-

POWER SEAT

< WIRING DIAGRAM >

Connector No.	B45
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L/B	-
2	B/W	-

Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	B/W	-
6	L/B	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

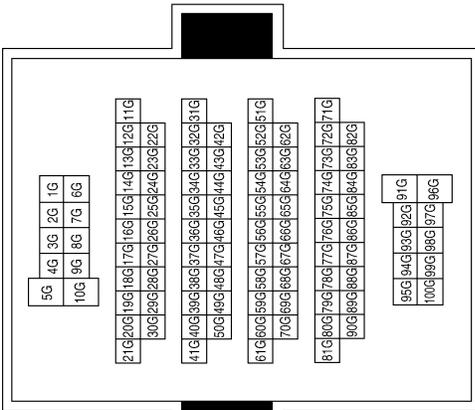

Terminal No.	Color of Wire	Signal Name
96G	W/B	-

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

POWER SEAT

< WIRING DIAGRAM >


Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	B	—
6	W	—

Terminal No.	Color of Wire	Signal Name
91J	L/B	—

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

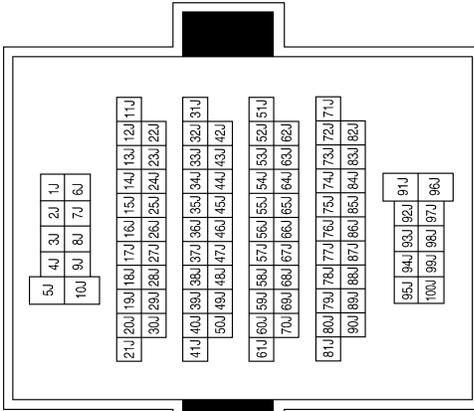

Connector No.	B213
Connector Name	RECLINING MOTOR LH (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	—
2	G	—

Connector No.	B212
Connector Name	SLIDING MOTOR LH (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	R	—
2	Y	—

Connector No.	B211
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	W	—
2	B	—

ABJIA0664GB

POWER SEAT

< WIRING DIAGRAM >

Connector No.	B216
Connector Name	POWER SEAT SWITCH LH (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W	-
2	B	-
3	R	-
4	Y	-
5	G	-
6	L	-
7	V	-
8	W/G	-
9	B/Y	-
10	R/Y	-

Connector No.	B215
Connector Name	LIFTING MOTOR (REAR) (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	V	-
2	W/G	-

Connector No.	B214
Connector Name	LIFTING MOTOR (FRONT) (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	B/Y	-
2	R/Y	-

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

ABJIA0665GB

POWER SEAT


< WIRING DIAGRAM >

Wiring Diagram - Passenger Side

INFOID:000000011289390

POWER SEAT FOR PASSENGER SIDE

AD : WITH AUTOMATIC DRIVE POSITIONER
 XA : WITHOUT AUTOMATIC DRIVE POSITIONER

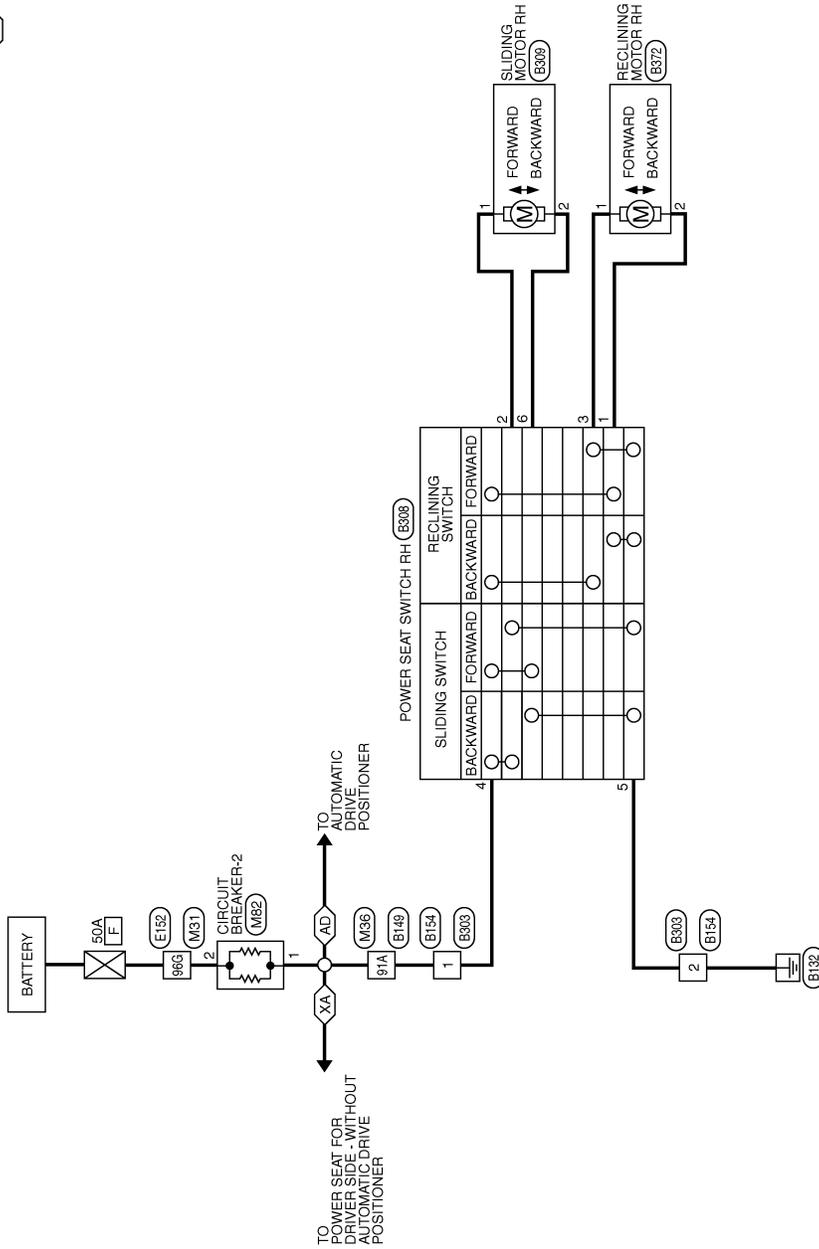


ABJWA0456GB

POWER SEAT

< WIRING DIAGRAM >


POWER SEAT FOR PASSENGER SIDE CONNECTORS

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

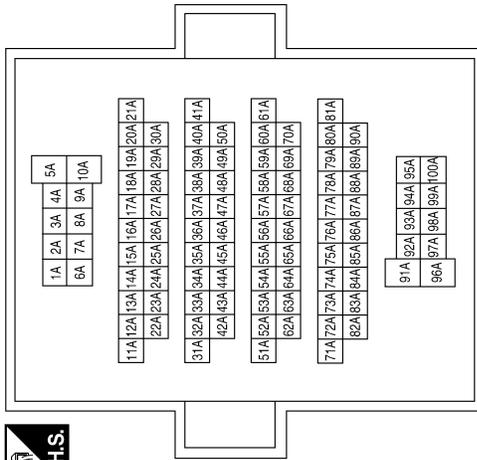

Terminal No.	Color of Wire	Signal Name
96G	W/B	-

Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE

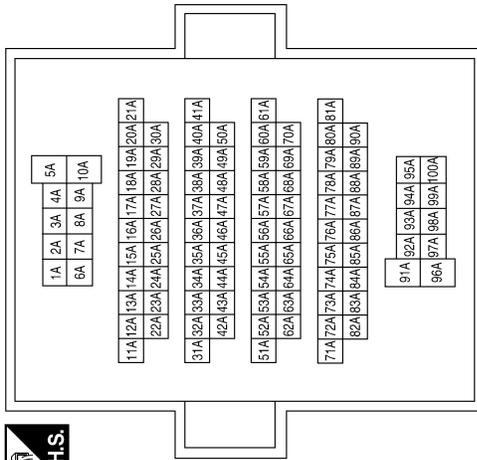

Terminal No.	Color of Wire	Signal Name
91A	W/L	-

Connector No.	M82
Connector Name	CIRCUIT BREAKER-2
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L/B	-
2	W/B	-

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

POWER SEAT


< WIRING DIAGRAM >

Connector No.	B154
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	W/L	-
2	B	-

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

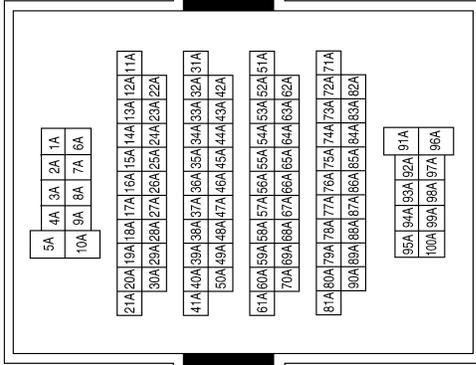

Terminal No.	Color of Wire	Signal Name
91A	W/L	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

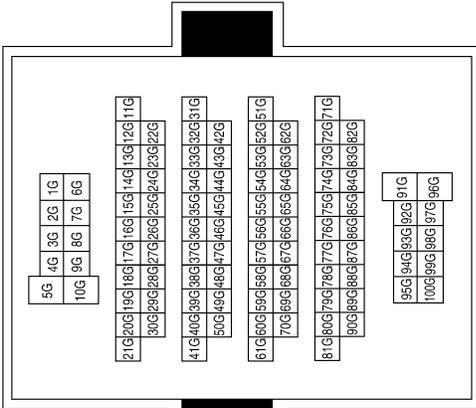

Terminal No.	Color of Wire	Signal Name
96G	W/B	-

ABJIA0673GB

POWER SEAT

< WIRING DIAGRAM >

Connector No.	B303
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W	-
2	B	-

Connector No.	B308
Connector Name	POWER SEAT SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	Y	-
3	G	-
4	W	-
5	B	-
6	R	-

Connector No.	B309
Connector Name	SLIDING MOTOR RH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	R	-

Connector No.	B372
Connector Name	RECLINING MOTOR RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	G	-
2	L	-

ABJIA0677GB

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P


HEATED SEAT

< WIRING DIAGRAM >

HEATED SEAT

Wiring Diagram

INFOID:000000011289391

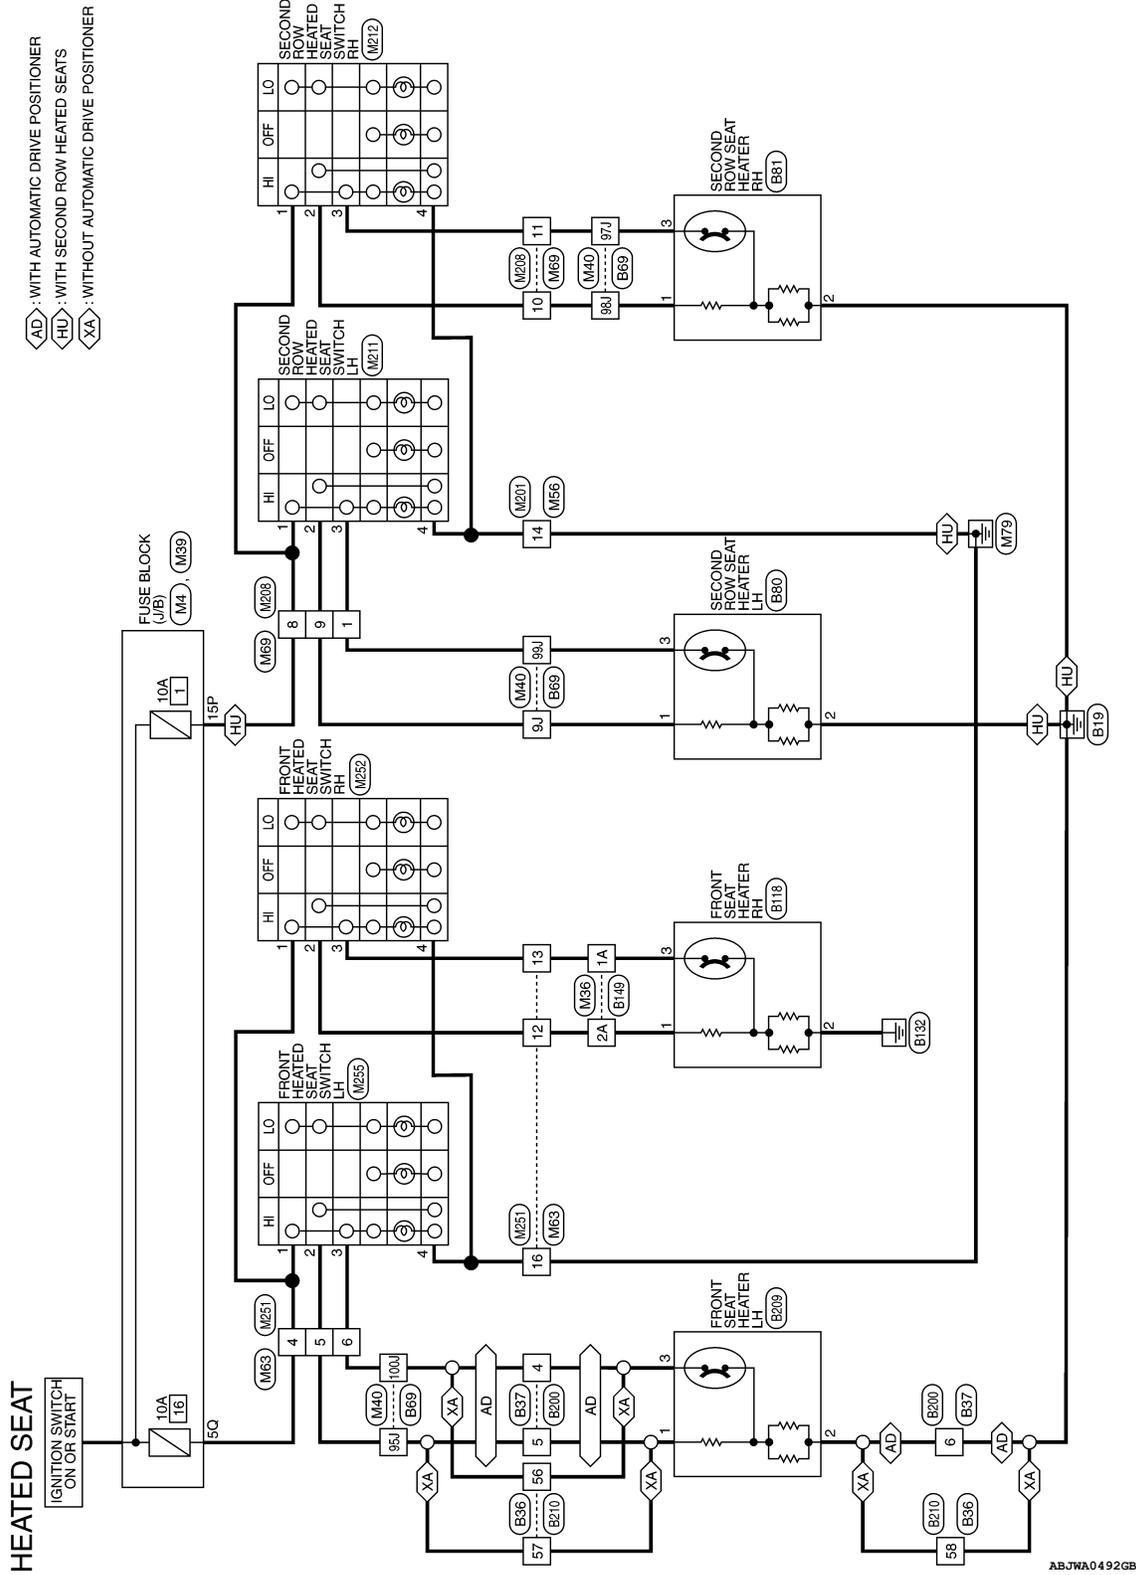

ABJWA0492GB

HEATED SEAT

< WIRING DIAGRAM >


HEATED SEAT CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
15P	O/B	-

Connector No.	M36
Connector Name	WIRE TO WIRE
Connector Color	WHITE

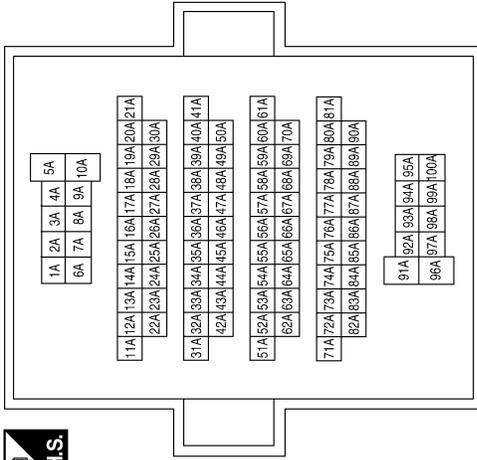

Terminal No.	Color of Wire	Signal Name
1A	GR/B	-
2A	GR/L	-

Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5Q	G	-

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

HEATED SEAT

< WIRING DIAGRAM >

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

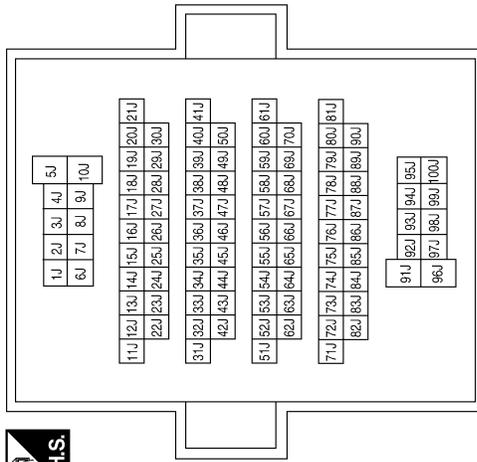


Terminal No.	Color of Wire	Signal Name
9J	W/V	-
95J	GR	-
97J	GR/B	-
98J	GR/L	-
99J	GR/R	-
100J	L/B	-

Connector No.	M56
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	14	Color of Wire	B	Signal Name	-
--------------	----	---------------	---	-------------	---

Connector No.	M63
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
4	G	-
5	GR	-
6	L/B	-
12	GR/L	-
13	GR/B	-
16	B	-

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	GR/R	-
8	O/B	-
9	W/V	-
10	GR/L	-
11	GR/B	-

Connector No.	M201
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	14	Color of Wire	B	Signal Name	-
--------------	----	---------------	---	-------------	---

HEATED SEAT

< WIRING DIAGRAM >

Connector No.	M212
Connector Name	SECOND ROW HEATED SEAT SWITCH RH
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	O/B	-
2	GR/L	-
3	GR/B	-
4	B	-

Connector No.	M211
Connector Name	SECOND ROW HEATED SEAT SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	O/B	-
2	W/V	-
3	GR/R	-
4	B	-

Connector No.	M208
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	GR/R	-
8	O/B	-
9	W/V	-
10	GR/L	-
11	GR/B	-

Connector No.	M255
Connector Name	FRONT HEATED SEAT SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	G	-
2	GR	-
3	L/B	-
4	B	-

Connector No.	M252
Connector Name	FRONT HEATED SEAT SWITCH RH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	G	-
2	GR/L	-
3	GR/B	-
4	B	-

Connector No.	M251
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
4	G	-
5	GR	-
6	L/B	-
12	GR/L	-
13	GR/B	-
16	B	-

ABJIA0676GB

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

HEATED SEAT


< WIRING DIAGRAM >

Connector No.	B36
Connector Name	WIRE TO WIRE
Connector Color	WHITE





Terminal No.	Color of Wire	Signal Name
56	L/B	-
57	GR	-
58	B	-

Connector No.	B37
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	L/B	-
5	GR	-
6	B	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

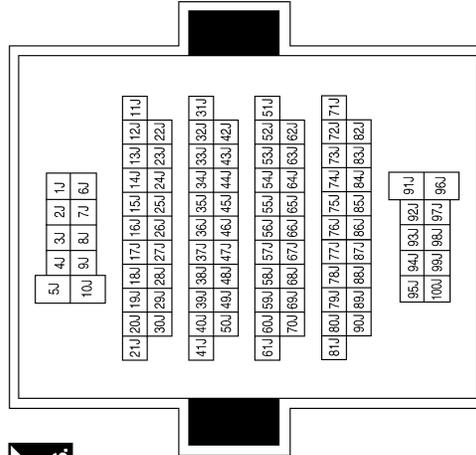

Terminal No.	Color of Wire	Signal Name
9J	W/V	-
95J	GR	-
97J	GR/B	-
98J	GR/L	-
99J	GR/R	-
100J	L/B	-

Connector No.	B80
Connector Name	SECOND ROW SEAT HEATER LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W/V	-
2	B	-
3	GR/R	-

HEATED SEAT

< WIRING DIAGRAM >

Connector No.	B81
Connector Name	SECOND ROW SEAT HEATER RH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	GR/L	-
2	B	-
3	GR/B	-

Connector No.	B118
Connector Name	FRONT SEAT HEATER RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	GR/L	-
2	B	-
3	GR/B	-

Connector No.	B149
Connector Name	WIRE TO WIRE
Connector Color	WHITE

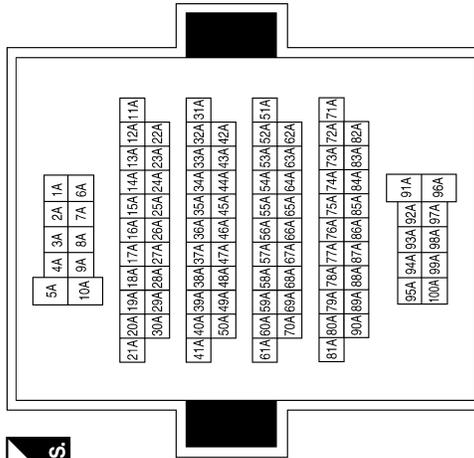

Terminal No.	Color of Wire	Signal Name
1A	GR/B	-
2A	GR/L	-

Connector No.	B200
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	O	-
5	GR	-
6	P	-

ABJIA0668GB

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

HEATED SEAT

< WIRING DIAGRAM >

Connector No.	B210
Connector Name	WIRE TO WIRE
Connector Color	WHITE



57	58
	56

Terminal No.	Color of Wire	Signal Name
56	L/B	-
57	GR	-
58	B	-

Connector No.	B209
Connector Name	FRONT SEAT HEATER LH
Connector Color	WHITE



1	2
3	

Terminal No.	Color of Wire	Signal Name
1	GR	-
2	P	-
3	O	-

ABJIA0680GB


THIRD ROW POWER FOLDING SEAT

< WIRING DIAGRAM >

THIRD ROW POWER FOLDING SEAT

Wiring Diagram

INFOID:000000011289392

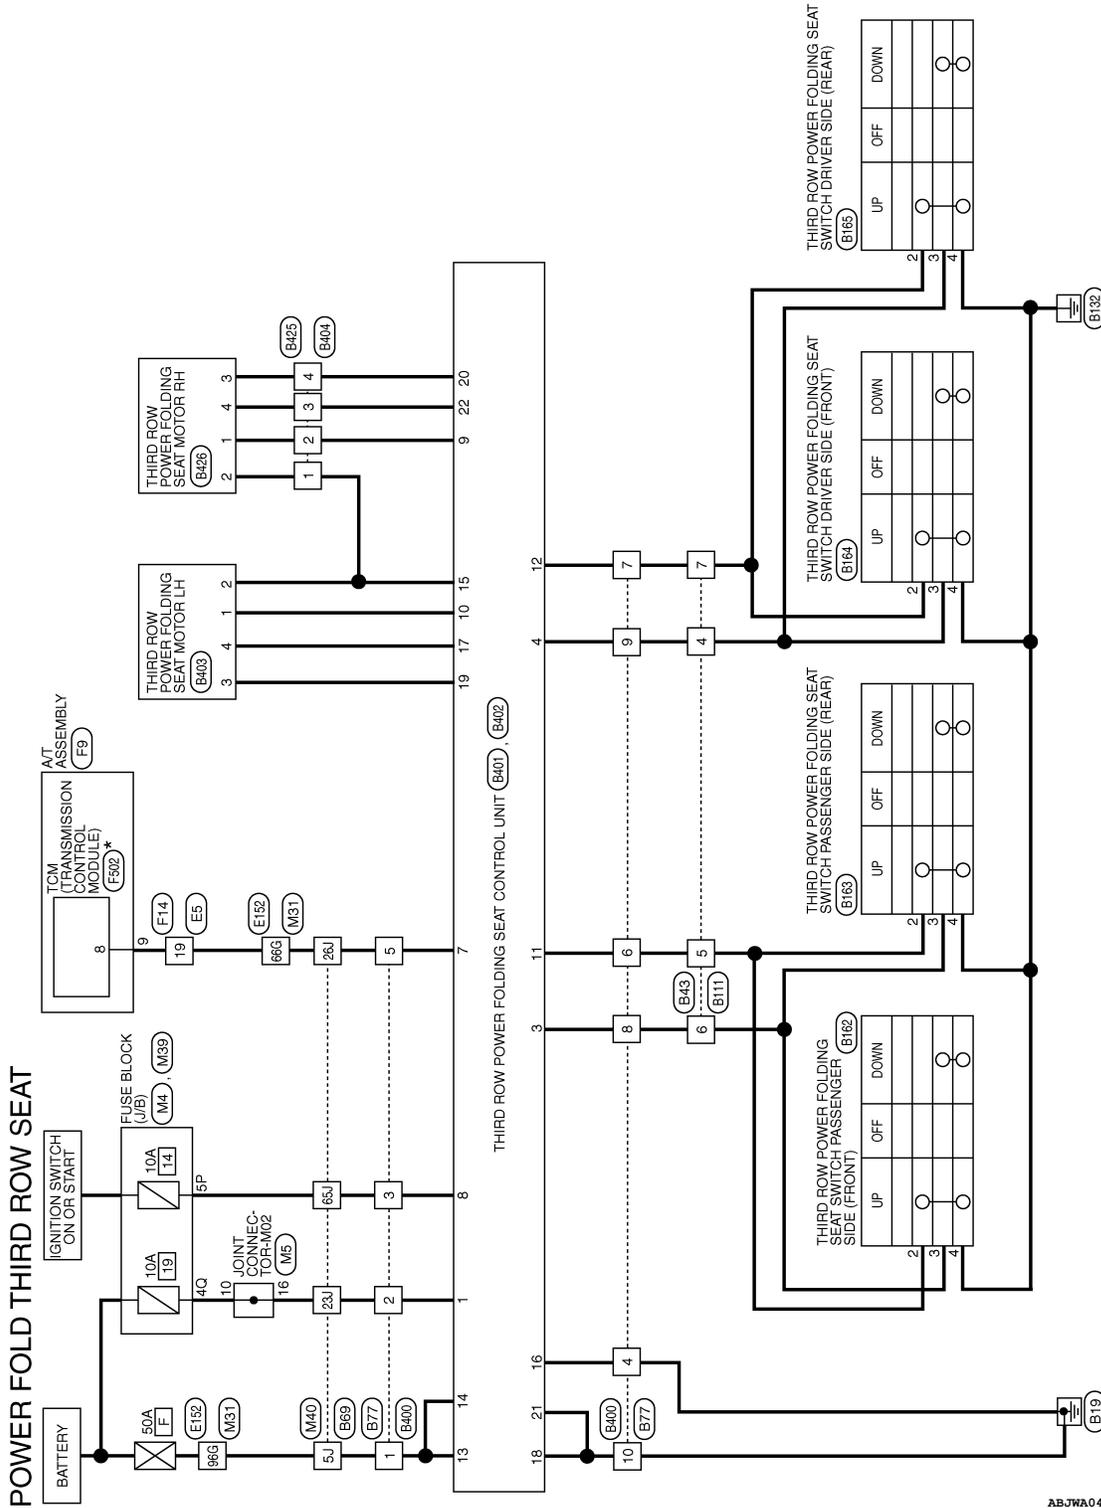

*: THIS CONNECTOR IS NOT SHOWN IN "HARNES LAYOUT" OF PG SECTION.

ABJWA0455GB



A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

THIRD ROW POWER FOLDING SEAT

< WIRING DIAGRAM >

POWER FOLD THIRD ROW SEAT CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Connector No.	M5
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE

Terminal No.	Color of Wire	Signal Name
5P	O/L	-


Terminal No.	Color of Wire	Signal Name
10	Y/R	-
16	Y/R	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
66G	B/R	-
96G	W/B	-




Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

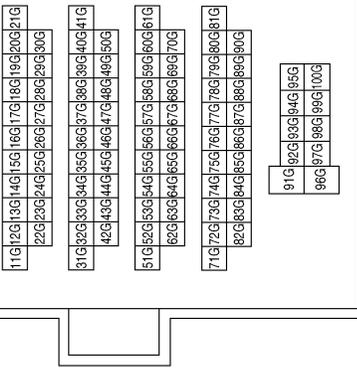

ABJIA1088GB

THIRD ROW POWER FOLDING SEAT

< WIRING DIAGRAM >

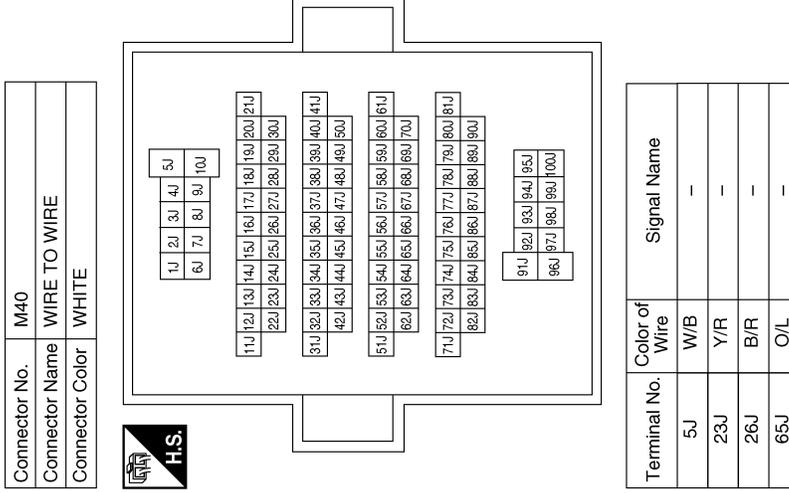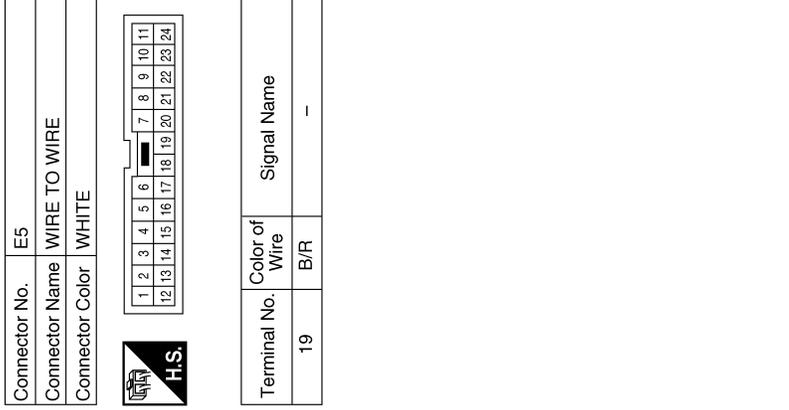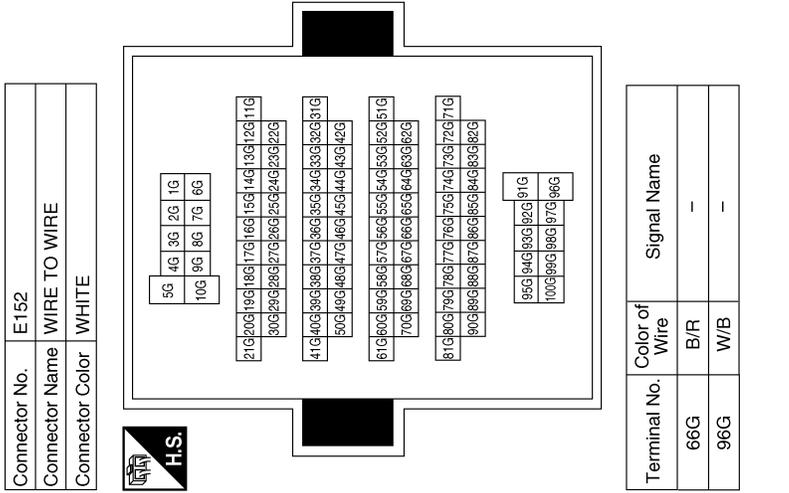

ABJIA1089GB

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

THIRD ROW POWER FOLDING SEAT


< WIRING DIAGRAM >

Connector No.	F502
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Color	GRAY




Terminal No.	8	Color of Wire	G	Signal Name	START-RLY
--------------	---	---------------	---	-------------	-----------

Connector No.	F14
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	19	Color of Wire	B/R	Signal Name	-
--------------	----	---------------	-----	-------------	---


Connector No.	F9
Connector Name	A/T ASSEMBLY
Connector Color	GREEN




Terminal No.	9	Color of Wire	B/R	Signal Name	-
--------------	---	---------------	-----	-------------	---

Terminal No.	5J	Color of Wire	W	Signal Name	-
	23J		Y/R		-
	26J		GR/R		-
	65J		O/L		-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

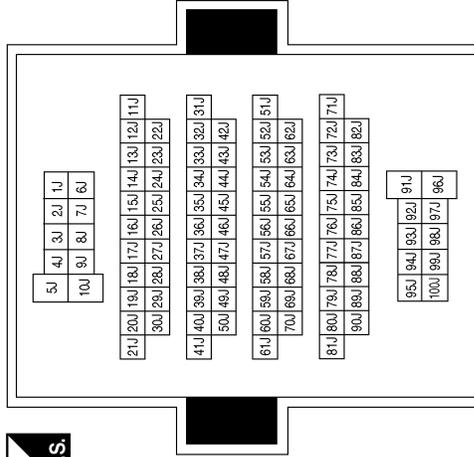

Connector No.	B43
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	4	Color of Wire	V	Signal Name	-
	5		SB		-
	6		LG		-
	7		O		-

ABJIA1090GB

THIRD ROW POWER FOLDING SEAT

< WIRING DIAGRAM >

Connector No.	B111
Connector Name	WIRE TO WIRE
Connector Color	WHITE

1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16



Terminal No.	Color of Wire	Signal Name
4	V	-
5	SB	-
6	LG	-
7	O	-

Terminal No.	Color of Wire	Signal Name
2	Y/R	-
3	O/L	-
4	B	-
5	GR/R	-
6	SB	-
7	O	-
8	LG	-
9	V	-
10	B	-

Connector No.	B77
Connector Name	WIRE TO WIRE
Connector Color	WHITE

10	8	4	2		
1	9	7	6	5	3



Terminal No.	Color of Wire	Signal Name
1	W	-

Connector No.	B164
Connector Name	THIRD ROW POWER FOLDING SEAT SWITCH DRIVER SIDE (FRONT)
Connector Color	WHITE

5	6		
4	2	1	3



Terminal No.	Color of Wire	Signal Name
2	O	-
3	V	-
4	BR	-

Connector No.	B163
Connector Name	THIRD ROW POWER FOLDING SEAT SWITCH PASSENGER SIDE (REAR)
Connector Color	WHITE

5	6		
4	2	1	3



Terminal No.	Color of Wire	Signal Name
2	SB	-
3	LG	-
4	BR	-

Connector No.	B162
Connector Name	THIRD ROW POWER FOLDING SEAT SWITCH PASSENGER SIDE (FRONT)
Connector Color	BROWN

5	6		
4	2	1	3



Terminal No.	Color of Wire	Signal Name
2	SB	-
3	LG	-
4	BR	-


ABJIA1091GB

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

THIRD ROW POWER FOLDING SEAT


< WIRING DIAGRAM >

Connector No.	B401
Connector Name	THIRD ROW POWER FOLDING SEAT CONTROL UNIT
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	Y/R	BAT LOG
2	-	-
3	LG	40 SW DN
4	V	60 SW DN
5	-	-
6	-	-
7	G/R	PARK
8	O/L	IGN
9	G/B	HALL+
10	O/B	HALL+
11	SB	40 SW UP
12	O	60 SW UP

Connector No.	B400
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	W	-
2	Y/R	-
3	O/L	-
4	B	-
5	G/R	-
6	SB	-
7	O	-
8	LG	-
9	V	-
10	B	-

Connector No.	B165
Connector Name	THIRD ROW POWER FOLDING SEAT SWITCH DRIVER SIDE (REAR)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
2	O	-
3	V	-
4	BR	-

Connector No.	B403
Connector Name	THIRD ROW POWER FOLDING SEAT MOTOR LH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	O/B	-
2	Y/B	-
3	R/W	-
4	W/L	-

Terminal No.	Color of Wire	Signal Name
13	W	BAT
14	W	BAT
15	Y/B	HALL-
16	B	SW REF
17	W/L	60 DWN
18	B	GND
19	R/W	60 UP
20	G/W	40 UP
21	B	GND
22	V	40 DWN

Connector No.	B402
Connector Name	THIRD ROW POWER FOLDING SEAT CONTROL UNIT
Connector Color	WHITE



ABJIA1092GB

THIRD ROW POWER FOLDING SEAT

< WIRING DIAGRAM >

Connector No.	B426
Connector Name	THIRD ROW POWER FOLDING SEAT MOTOR RH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	G/B	-
2	Y/B	-
3	G/W	-
4	V	-

Connector No.	B425
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y/B	-
2	G/B	-
3	V	-
4	G/W	-

Connector No.	B404
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	Y/B	-
2	G/B	-
3	V	-
4	G/W	-

ABJIA1093GB

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

THIRD ROW POWER FOLDING SEAT

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

THIRD ROW POWER FOLDING SEAT

Symptom Table

INFOID:000000011289393

Symptom	Reference
None of the third row power folding seats will operate with any switch.	Refer to SE-39, "None of the Third Row Power Folding Seats Will Operate With Any Third Row Power Folding Seat Switch" .
Only one third row power folding seat will operate.	Refer to SE-40, "Only One Third Row Power Folding Seat Will Operate" .
Third row power folding seat will operate in only one direction.	Refer to SE-42, "Third Row Power Folding Seat Will Operate in Only One Direction" .
Third row power folding seat will stop short of it's fully up or down position.	Refer to SE-44, "Third Row Power Folding Seat Stops Short of it's Fully Up or Down Position" .
Third row power folding seat makes excessive noise while moving.	Refer to SE-45, "Third Row Power Folding Seat Makes Excessive Noise While Moving" .
Seats make squeak or rattle noise.	Refer to SE-46, "Work Flow" .

NONE OF THE THIRD ROW POWER FOLDING SEATS WILL OPERATE WITH ANY SWITCH.

< SYMPTOM DIAGNOSIS >

NONE OF THE THIRD ROW POWER FOLDING SEATS WILL OPERATE WITH ANY SWITCH.

None of the Third Row Power Folding Seats Will Operate With Any Third Row Power Folding Seat Switch

INFOID:000000011289394

Regarding Wiring Diagram information, refer to [SE-31, "Wiring Diagram"](#).

1. PRELIMINARY CHECK

Perform preliminary check. Refer to [SE-5, "Preliminary Check"](#).

Are inspection results normal?

YES >> GO TO 2.

NO >> Perform repairs as necessary.


2. CHECK THIRD ROW POWER FOLDING SEAT SWITCH GROUND

1. Turn ignition switch OFF.
2. Disconnect any third row power folding seat switch connector.
3. Check continuity between third row power folding seat switch harness connector terminal 4 and ground.

Is there continuity?

YES >> GO TO 3.

NO >> Repair ground circuit.

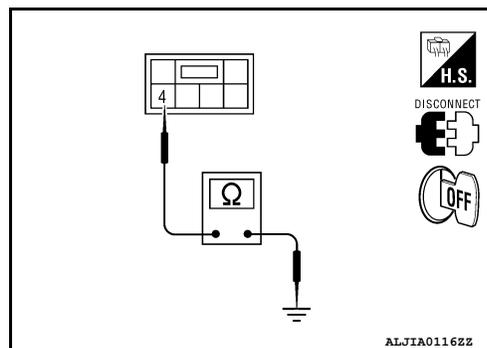

3. CHECK TRANSMISSION RANGE SWITCH SIGNAL


1. Confirm A/T selector lever is in PARK position.
2. Turn ignition switch ON.
3. Check voltage between third row power folding seat control unit harness connector B401 terminal 7 and ground.

Terminals		Ignition switch	
(+)		(-)	ON
Third row power folding seat control unit	Terminal		
B401	7	Ground	Battery voltage

Is there battery voltage?

YES >> Replace third row power folding seat control unit. Refer to [SE-82, "Removal and Installation - Power Seat Cross Beam"](#).

NO >> Repair circuit as necessary.

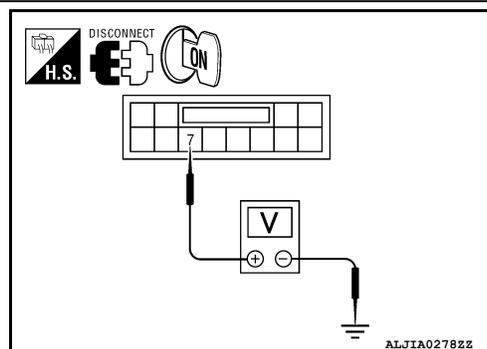

ONLY ONE THIRD ROW POWER FOLDING SEAT WILL OPERATE.

< SYMPTOM DIAGNOSIS >

ONLY ONE THIRD ROW POWER FOLDING SEAT WILL OPERATE.

Only One Third Row Power Folding Seat Will Operate

INFOID:000000011289395

Regarding Wiring Diagram information, refer to [SE-31. "Wiring Diagram"](#).

1. PRELIMINARY CHECK

Perform preliminary check. Refer to [SE-5. "Preliminary Check"](#).

Are inspection results normal?

YES >> GO TO 2.

NO >> Perform repairs as necessary.

2. CHECK THIRD ROW POWER FOLDING SEAT

Determine which seat is malfunctioning.

Is the affected seat the LH (60%) side?


YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK THIRD ROW POWER FOLDING SEAT SWITCH DRIVER SIDE


1. Turn ignition switch OFF.
2. Disconnect either the front or rear third row power folding seat switch driver side connector.
3. Check continuity between the third row power folding seat switch driver side harness connector B164 or B165 terminal 4 and ground.

Terminals			Continuity
(+)		(-)	
Third row power folding seat switch driver side	Terminal		
B164 or B165	4	Ground	Yes

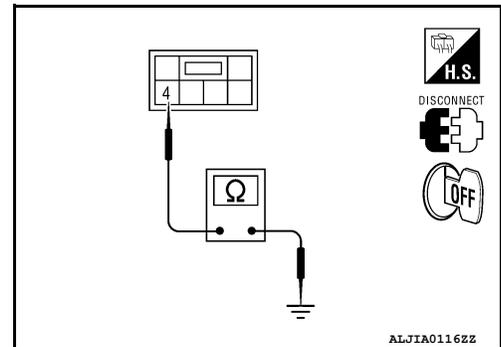

4. Check continuity between any third row power folding seat switch driver side harness connector B164 or B165 terminals 2, 3 and third row power folding seat control unit harness connector B401 terminals 4, 12.

Terminals				Continuity
A		B		
Connector	Terminal	Connector	Terminal	
B401	4	B164 or B165	3	Yes
	12		2	

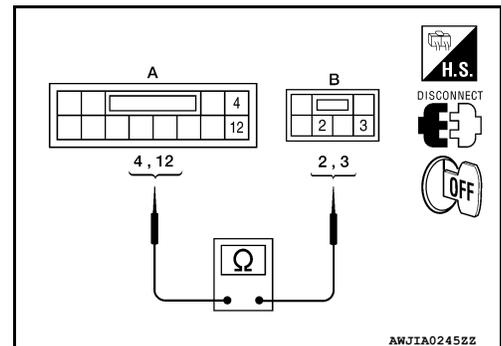

Are inspection results normal?

YES >> GO TO 5.

NO >> Repair circuits as necessary.

4. CHECK THIRD ROW POWER FOLDING SEAT SWITCH PASSENGER SIDE


1. Turn ignition switch OFF.
2. Disconnect either the front or rear third row power folding seat switch passenger side connector.

ONLY ONE THIRD ROW POWER FOLDING SEAT WILL OPERATE.

< SYMPTOM DIAGNOSIS >


3. Check continuity between the third row power folding seat switch passenger side harness connector B162 or B163 terminal 4 and ground.

Terminals			Continuity
(+)		(-)	
Third row power folding seat switch passenger side	Terminal No.		
B162 or B163	4	Ground	Yes

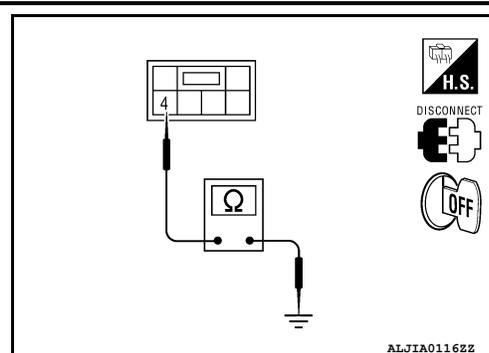

4. Check continuity between any third row power folding seat switch passenger side harness connector B162 or B163 terminals 2, 3 and third row power folding seat control unit harness connector B401 terminals 3, 11.

Terminals				Continuity
A		B		
Connector	Terminal	Connector	Terminal	
B401	3	B162 or B163	3	Yes
	11		2	

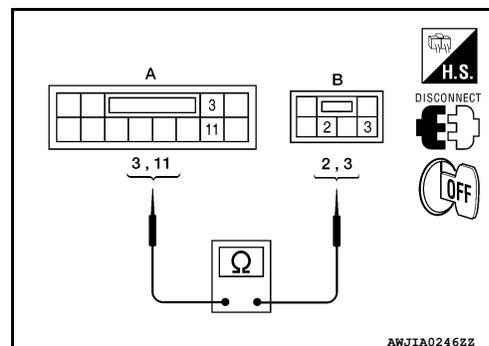

Is there continuity?

- YES >> GO TO 5.
NO >> Repair circuits as necessary.

5. CHECK THIRD ROW POWER FOLDING SEAT MOTOR

Check operation of affected third row power folding seat motor. Refer to [SE-10. "Third Row Power Folding Seat Motor"](#).


Are inspection results normal?

- YES >> GO TO 6.
NO >> Replace third row power folding seat motor. Refer to [SE-79. "Exploded View"](#).

6. CHECK CIRCUITS BETWEEN MOTOR AND CONTROL UNIT

Check continuity between third row power folding seat motor harness connector B403 or B426 terminals 3, 4 and third row power folding seat control unit connector B402 terminals 17, 19 (LH) or 20, 22 (RH).

Terminals				Continuity
A		B		
Connector	Terminal	Connector	Terminal	
B402	17 (LH), 22 (RH)	B403 (LH) or B426 (RH)	4	Yes
	19 (LH), 20 (RH)		3	

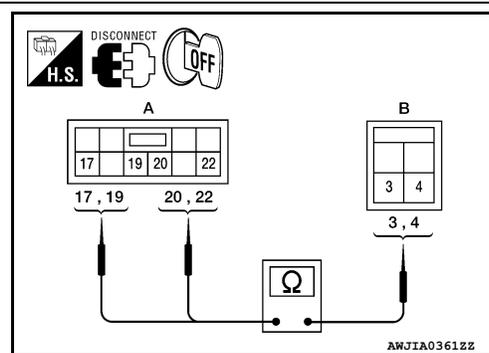

Are inspection results normal?

- YES >> Replace third row power folding seat control unit. Refer to [SE-82. "Removal and Installation - Power Seat Cross Beam"](#).
NO >> Repair circuits as necessary.

THIRD ROW POWER FOLDING SEAT WILL OPERATE IN ONLY ONE DIRECTION.

< SYMPTOM DIAGNOSIS >

THIRD ROW POWER FOLDING SEAT WILL OPERATE IN ONLY ONE DIRECTION.

Third Row Power Folding Seat Will Operate in Only One Direction

INFOID:000000011289396

Regarding Wiring Diagram information, refer to [SE-31. "Wiring Diagram"](#).

1. PRELIMINARY CHECK

Perform preliminary check. Refer to [SE-5. "Preliminary Check"](#).

Are inspection results normal?

YES >> GO TO 2.

NO >> Perform repairs as necessary.

2. CHECK THIRD ROW POWER FOLDING SEAT

Determine which seat is malfunctioning.


Is the affected seat the LH (60%) side?

YES >> GO TO 3.

NO >> GO TO 4.

3. CHECK THIRD ROW POWER FOLDING SEAT SWITCH DRIVER SIDE

1. Turn ignition switch OFF.
2. Disconnect any third row power folding seat switch driver side connector.
3. Check continuity between third row power folding seat switch driver side harness connector B164 or B165 terminals 2, 3 and third row power folding seat control unit harness connector B401 terminals 4, 12.

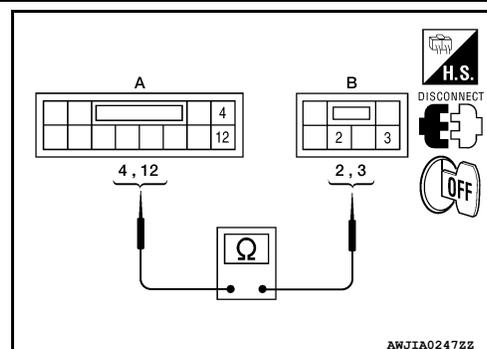

Terminals				Continuity
A		B		
Connector	Terminal	Connector	Terminal	
B401	4	B164 or B165	3	Yes
	12		2	


Is there continuity?

YES >> Replace third row power folding seat control unit. Refer to [SE-82. "Removal and Installation - Power Seat Cross Beam"](#).

NO >> Repair circuits as necessary.

4. CHECK THIRD ROW POWER FOLDING SEAT SWITCH PASSENGER SIDE

1. Turn ignition switch OFF.
2. Disconnect either the front or rear third row power folding seat switch passenger side connector.
3. Check continuity between third row power folding seat switch passenger side harness connector B162 or B163 terminals 2, 3 and third row power folding seat control unit harness connector B401 terminals 3, 11.

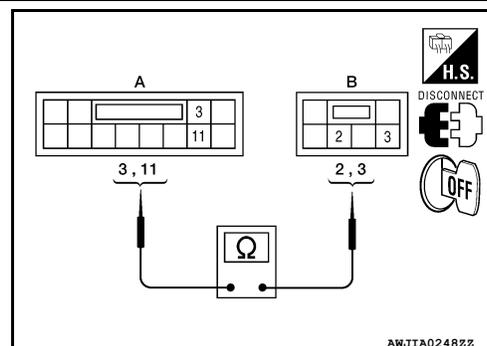

Terminals				Continuity
A		B		
Connector	Terminal	Connector	Terminal	
B401	3	B162 or B163	3	Yes
	11		2	

THIRD ROW POWER FOLDING SEAT WILL OPERATE IN ONLY ONE DIRECTION.

< SYMPTOM DIAGNOSIS >

Is there continuity?

- YES >> Replace third row power folding seat control unit. Refer to [SE-82, "Removal and Installation - Power Seat Cross Beam"](#).
- NO >> Repair circuits as necessary.

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

THIRD ROW POWER FOLDING SEAT WILL STOP SHORT OF IT'S FULLY UP OR DOWN POSITION.

< SYMPTOM DIAGNOSIS >

THIRD ROW POWER FOLDING SEAT WILL STOP SHORT OF IT'S FULLY UP OR DOWN POSITION.

Third Row Power Folding Seat Stops Short of it's Fully Up or Down Position

INFOID:000000011289397

Regarding Wiring Diagram information, refer to [SE-31, "Wiring Diagram"](#).

1. PRELIMINARY CHECK

Perform preliminary check. Refer to [SE-5, "Preliminary Check"](#).

Are inspection results normal?

- YES >> GO TO 2.
- NO >> Perform repairs as necessary.

2. CHECK HISTORY


Check to see if a previous normal seat folding operation was interrupted due to low voltage condition.

Was voltage interrupted?

- YES >> Perform learn procedure by operating affected seat until seat reaches full open/closed position.
- NO >> GO TO 3.

3. CHECK THIRD ROW POWER FOLDING SEAT MOTOR

1. Turn ignition switch OFF.
2. Disconnect third row power folding seat motor harness connector and third row power folding seat control unit harness connector.
3. Check continuity between third row power folding seat motor harness connector B403 (LH) or B426 (RH) terminals 1, 2 and third row power folding seat control unit harness connector B401 or B402 terminals 10, 15 (LH) or 9, 15 (RH).

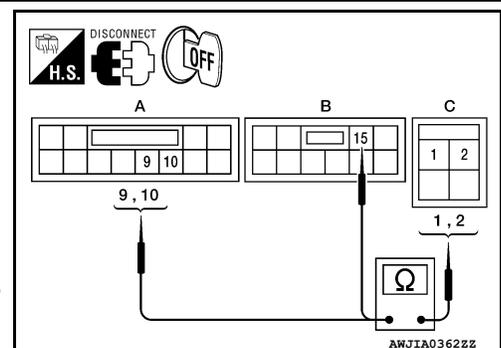

Terminals				Continuity
Connector	Terminal	Connector	Terminal	
A: B401	9 (RH)	C: B426 (RH)	1	Yes
	10 (LH)	C: B403 (LH)		
B: B402	15 (LH/RH)	C: B426 (RH)	2	
		C: B403 (LH)		

Is there continuity?

- YES >> Replace affected third row power folding seat motor. Refer to [SE-79, "Exploded View"](#).
- NO >> Repair circuits as necessary.

THIRD ROW POWER FOLDING SEAT MAKES EXCESSIVE NOISE WHILE MOVING.

< SYMPTOM DIAGNOSIS >

THIRD ROW POWER FOLDING SEAT MAKES EXCESSIVE NOISE WHILE MOVING.

Third Row Power Folding Seat Makes Excessive Noise While Moving

INFOID:000000011289398

1. PRELIMINARY CHECK

Perform preliminary check. Refer to [SE-5, "Preliminary Check"](#).

Are inspection results normal?

- YES >> Inspect shaft assembly for binding. If OK, replace affected third row power folding seat motor.
Refer to [SE-79, "Exploded View"](#).
- NO >> Perform repairs as necessary.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

SE


SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

SQUEAK AND RATTLE TROUBLE DIAGNOSES

Work Flow

INFOID:000000011289399

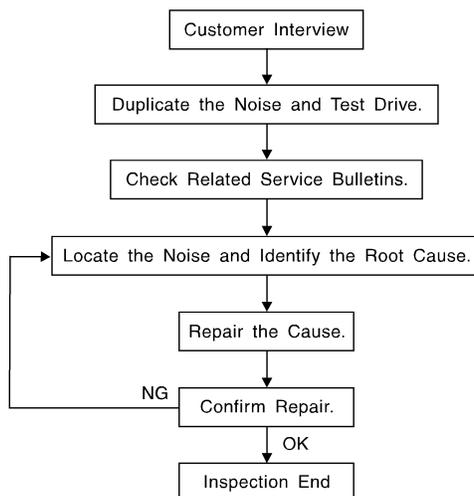

SBT842

CUSTOMER INTERVIEW

Interview the customer if possible, to determine the conditions that exist when the noise occurs. Use the Diagnostic Worksheet during the interview to document the facts and conditions when the noise occurs and any customer's comments; refer to [SE-50, "Diagnostic Worksheet"](#). This information is necessary to duplicate the conditions that exist when the noise occurs.

- The customer may not be able to provide a detailed description or the location of the noise. Attempt to obtain all the facts and conditions that exist when the noise occurs (or does not occur).
- If there is more than one noise in the vehicle, be sure to diagnose and repair the noise that the customer is concerned about. This can be accomplished by test driving the vehicle with the customer.
- After identifying the type of noise, isolate the noise in terms of its characteristics. The noise characteristics are provided so the customer, service adviser and technician are all speaking the same language when defining the noise.
- Squeak —(Like tennis shoes on a clean floor)
Squeak characteristics include the light contact/fast movement/brought on by road conditions/hard surfaces = higher pitch noise/softer surfaces = lower pitch noises/edge to surface = chirping.
- Creak—(Like walking on an old wooden floor)
Creak characteristics include firm contact/slow movement/twisting with a rotational movement/pitch dependent on materials/often brought on by activity.
- Rattle—(Like shaking a baby rattle)
Rattle characteristics include the fast repeated contact/vibration or similar movement/loose parts/missing clip or fastener/incorrect clearance.
- Knock —(Like a knock on a door)
Knock characteristics include hollow sounding/sometimes repeating/often brought on by driver action.
- Tick—(Like a clock second hand)
Tick characteristics include gentle contacting of light materials/loose components/can be caused by driver action or road conditions.
- Thump—(Heavy, muffled knock noise)
Thump characteristics include softer knock/dead sound often brought on by activity.
- Buzz—(Like a bumble bee)
Buzz characteristics include high frequency rattle/firm contact.
- Often the degree of acceptable noise level will vary depending upon the person. A noise that you may judge as acceptable may be very irritating to the customer.
- Weather conditions, especially humidity and temperature, may have a great effect on noise level.

DUPLICATE THE NOISE AND TEST DRIVE

If possible, drive the vehicle with the customer until the noise is duplicated. Note any additional information on the Diagnostic Worksheet regarding the conditions or location of the noise. This information can be used to duplicate the same conditions when you confirm the repair.

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

If the noise can be duplicated easily during the test drive, to help identify the source of the noise, try to duplicate the noise with the vehicle stopped by doing one or all of the following:

- 1) Close a door.
 - 2) Tap or push/pull around the area where the noise appears to be coming from.
 - 3) Rev the engine.
 - 4) Use a floor jack to recreate vehicle "twist".
 - 5) At idle, apply engine load (electrical load, half-clutch on M/T model, drive position on CVT and A/T models).
 - 6) Raise the vehicle on a hoist and hit a tire with a rubber hammer.
- Drive the vehicle and attempt to duplicate the conditions the customer states exist when the noise occurs.
 - If it is difficult to duplicate the noise, drive the vehicle slowly on an undulating or rough road to stress the vehicle body.

CHECK RELATED SERVICE BULLETINS

After verifying the customer concern or symptom, check ASIST for Technical Service Bulletins (TSBs) related to that concern or symptom.

If a TSB relates to the symptom, follow the procedure to repair the noise.

LOCATE THE NOISE AND IDENTIFY THE ROOT CAUSE

1. Narrow down the noise to a general area. To help pinpoint the source of the noise, use a listening tool (Chassis Ear: J-39570, Engine Ear: J-39565 and mechanic's stethoscope).
2. Narrow down the noise to a more specific area and identify the cause of the noise by:
 - removing the components in the area that you suspect the noise is coming from.
Do not use too much force when removing clips and fasteners, otherwise clips and fasteners can be broken or lost during the repair, resulting in the creation of new noise.
 - tapping or pushing/pulling the component that you suspect is causing the noise.
Do not tap or push/pull the component with excessive force, otherwise the noise will be eliminated only temporarily.
 - feeling for a vibration with your hand by touching the component(s) that you suspect is (are) causing the noise.
 - placing a piece of paper between components that you suspect are causing the noise.
 - looking for loose components and contact marks.Refer to [SE-47. "Generic Squeak and Rattle Troubleshooting"](#).

REPAIR THE CAUSE

- If the cause is a loose component, tighten the component securely.
- If the cause is insufficient clearance between components:
 - separate components by repositioning or loosening and retightening the component, if possible.
 - insulate components with a suitable insulator such as urethane pads, foam blocks, felt cloth tape or urethane tape. A NISSAN Squeak and Rattle Kit (J-50397) is available through your authorized NISSAN Parts Department.

CAUTION:

Do not use excessive force as many components are constructed of plastic and may be damaged.

NOTE:

- Always check with the Parts Department for the latest parts information.
- The materials contained in the NISSAN Squeak and Rattle Kit (J-50397) are listed on the inside cover of the kit; and can each be ordered separately as needed.
- The following materials not found in the kit can also be used to repair squeaks and rattles.
 - SILICONE GREASE: Use instead of UHMW tape that will be visible or does not fit. The silicone grease will only last a few months.
 - SILICONE SPRAY: Use when grease cannot be applied.
 - DUCT TAPE: Use to eliminate movement.

CONFIRM THE REPAIR

Confirm that the cause of a noise is repaired by test driving the vehicle. Operate the vehicle under the same conditions as when the noise originally occurred. Refer to the notes on the Diagnostic Worksheet.

Generic Squeak and Rattle Troubleshooting

INFOID:000000011289400

Refer to Table of Contents for specific component removal and installation information.

INSTRUMENT PANEL

Most incidents are caused by contact and movement between:

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

1. Cluster lid A and the instrument panel
2. Acrylic lens and combination meter housing
3. Instrument panel to front pillar finisher
4. Instrument panel to windshield
5. Instrument panel pins
6. Wiring harnesses behind the combination meter
7. A/C defroster duct and duct joint

These incidents can usually be located by tapping or moving the components to duplicate the noise or by pressing on the components while driving to stop the noise. Most of these incidents can be repaired by applying felt cloth tape or silicone spray (in hard to reach areas). Urethane pads can be used to insulate wiring harness.

CAUTION:

Do not use silicone spray to isolate a squeak or rattle. If you saturate the area with silicone, you will not be able to recheck the repair.

CENTER CONSOLE

Components to pay attention to include:

1. Shift selector assembly cover to finisher
2. A/C control unit and cluster lid C
3. Wiring harnesses behind audio and A/C control unit

The instrument panel repair and isolation procedures also apply to the center console.

DOORS

Pay attention to the:

1. Finisher and inner panel making a slapping noise
2. Inside handle escutcheon to door finisher
3. Wiring harnesses tapping
4. Door striker out of alignment causing a popping noise on starts and stops

Tapping or moving the components or pressing on them while driving to duplicate the conditions can isolate many of these incidents. You can usually insulate the areas with felt cloth tape or insulator foam blocks from the NISSAN Squeak and Rattle Kit (J-50397) to repair the noise.

TRUNK

Trunk noises are often caused by a loose jack or loose items put into the trunk by the owner.

In addition look for:

1. Trunk lid bumpers out of adjustment
2. Trunk lid striker out of adjustment
3. The trunk lid torsion bars knocking together
4. A loose license plate or bracket

Most of these incidents can be repaired by adjusting, securing or insulating the item(s) or component(s) causing the noise.

SUNROOF/HEADLINING

Noises in the sunroof/headlining area can often be traced to one of the following:

1. Sunroof lid, rail, linkage or seals making a rattle or light knocking noise
2. Sun visor shaft shaking in the holder
3. Front or rear windshield touching headlining and squeaking

Again, pressing on the components to stop the noise while duplicating the conditions can isolate most of these incidents. Repairs usually consist of insulating with felt cloth tape.

OVERHEAD CONSOLE (FRONT AND REAR)

Overhead console noises are often caused by the console panel clips not being engaged correctly. Most of these incidents are repaired by pushing up on the console at the clip locations until the clips engage.

In addition look for:

1. Loose harness or harness connectors.
2. Front console map/reading lamp lens loose.

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

3. Loose screws at console attachment points.

SEATS

When isolating seat noise it's important to note the position the seat is in and the load placed on the seat when the noise is present. These conditions should be duplicated when verifying and isolating the cause of the noise.

Cause of seat noise include:

1. Headrest rods and holder
2. A squeak between the seat pad cushion and frame
3. The rear seatback lock and bracket

These noises can be isolated by moving or pressing on the suspected components while duplicating the conditions under which the noise occurs. Most of these incidents can be repaired by repositioning the component or applying urethane tape to the contact area.

UNDERHOOD

Some interior noise may be caused by components under the hood or on the engine wall. The noise is then transmitted into the passenger compartment.

Causes of transmitted underhood noise include:

1. Any component installed to the engine wall
2. Components that pass through the engine wall
3. Engine wall mounts and connectors
4. Loose radiator installation pins
5. Hood bumpers out of adjustment
6. Hood striker out of adjustment

These noises can be difficult to isolate since they cannot be reached from the interior of the vehicle. The best method is to secure, move or insulate one component at a time and test drive the vehicle. Also, engine rpm or load can be changed to isolate the noise. Repairs can usually be made by moving, adjusting, securing, or insulating the component causing the noise.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

SE

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

Diagnostic Worksheet

INFOID:000000011289401





Dear Customer:

We are concerned about your satisfaction with your vehicle. Repairing a squeak or rattle sometimes can be very difficult. To help us fix your vehicle right the first time, please take a moment to note the area of the vehicle where the squeak or rattle occurs and under what conditions. You may be asked to take a test drive with a service advisor or technician to ensure we confirm the noise you are hearing.

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET

I. WHERE DOES THE NOISE COME FROM? (circle the area of the vehicle)

The illustrations are for reference only, and may not reflect the actual configuration of your vehicle.

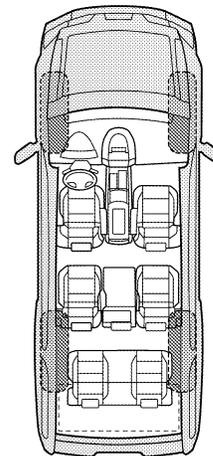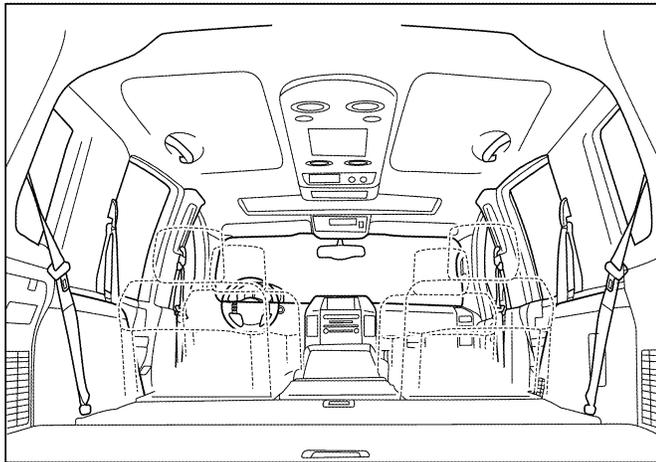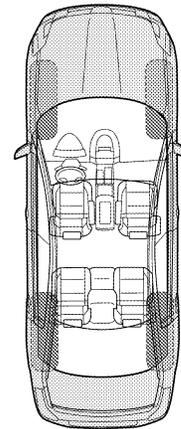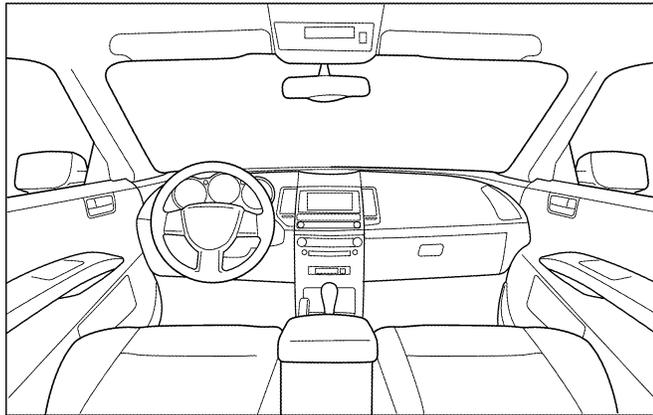

Continue to page 2 of the worksheet and briefly describe the location of the noise or rattle. In addition, please indicate the conditions which are present when the noise occurs.

SQUEAK AND RATTLE TROUBLE DIAGNOSES

< SYMPTOM DIAGNOSIS >

SQUEAK & RATTLE DIAGNOSTIC WORKSHEET - page 2

Briefly describe the location where the noise occurs:

II. WHEN DOES IT OCCUR? (please check the boxes that apply)

- | | |
|---|--|
| <input type="checkbox"/> Anytime | <input type="checkbox"/> After sitting out in the rain |
| <input type="checkbox"/> 1st time in the morning | <input type="checkbox"/> When it is raining or wet |
| <input type="checkbox"/> Only when it is cold outside | <input type="checkbox"/> Dry or dusty conditions |
| <input type="checkbox"/> Only when it is hot outside | <input type="checkbox"/> Other: |

III. WHEN DRIVING:

- Through driveways
- Over rough roads
- Over speed bumps
- Only about ____ mph
- On acceleration
- Coming to a stop
- On turns: left, right or either (circle)
- With passengers or cargo
- Other: _____
- After driving ____ miles or ____ minutes

IV. WHAT TYPE OF NOISE

- Squeak (like tennis shoes on a clean floor)
- Creak (like walking on an old wooden floor)
- Rattle (like shaking a baby rattle)
- Knock (like a knock at the door)
- Tick (like a clock second hand)
- Thump (heavy muffled knock noise)
- Buzz (like a bumble bee)

TO BE COMPLETED BY DEALERSHIP PERSONNEL

Test Drive Notes:

	YES	NO	Initials of person performing
Vehicle test driven with customer	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise verified on test drive	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Noise source located and repaired	<input type="checkbox"/>	<input type="checkbox"/>	_____
- Follow up test drive performed to confirm repair	<input type="checkbox"/>	<input type="checkbox"/>	_____

VIN: _____ Customer Name _____

W.O.# _____ Date: _____

This form must be attached to Work Order

LATA0071E

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011289402

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000011289403

NOTE:

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.

PRECAUTIONS

< PRECAUTION >

5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT.

Occupant Classification System

INFOID:000000011289404

Replace occupant classification system control unit and passenger front seat cushion assembly as an assembly. Refer to [SE-93, "Disassembly and Assembly"](#).

Precaution for Work

INFOID:000000011289405

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:
 - Water soluble dirt:
 - Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
 - Then rub with a soft, dry cloth.
 - Oily dirt:
 - Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
 - Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
 - Then rub with a soft, dry cloth.
 - Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
 - For genuine leather seats, use a genuine leather seat cleaner.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

SE

PREPARATION

< PREPARATION >

PREPARATION


PREPARATION

Special Service Tool

INFOID:000000011289406

The actual shape of the tools may differ from those illustrated here.


Tool number (TechMate No.) Tool name	Description
— (J-39570) Chassis Ear	Locating the noise
— (J-50397) NISSAN Squeak and Rattle Kit	Repairing the cause of noise
— (J-46534) Trim Tool Set	Removing trim components

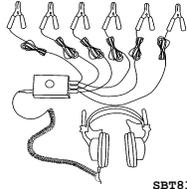

SBT839



ALJIA1232ZZ

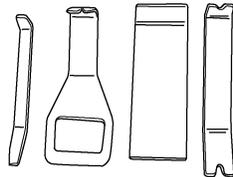


AWJIA0483ZZ

Commercial Service Tool

INFOID:000000011289407

(TechMate No.) Tool name	Description
(J-39565) Engine Ear	Locating the noise

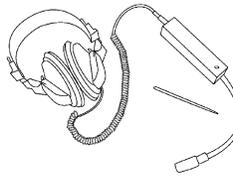

SIIA0995E

CLIP LIST








< PREPARATION >

CLIP LIST

Descriptions for Clips

INFOID:000000011289408

Replace any clips which are damaged during removal or installation.


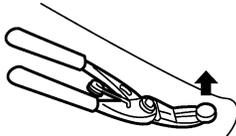
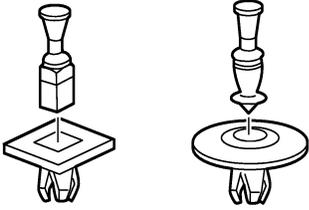


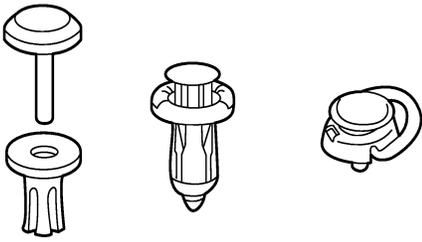

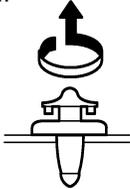
Symbol No.	Shapes	Removal & Installation
C101 		<p>Removal: Remove by bending up with flat-bladed screwdrivers or clip remover.</p> 
C103 		 <p>Removal: Remove with a clip remover.</p>
C203 		<p>Removal: Push center pin to catching position. (Do not remove center pin by hitting it.)</p> <p>Push</p>  <p>Installation:</p> <p>Push</p> 
C205 		<p>Removal:</p> <p>Flat-bladed screwdriver</p>  <p>Clip</p> <p>Finisher</p>
C206 		<p>Removal:</p> 

SIIA0315E

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

CLIP LIST




< PREPARATION >

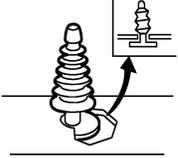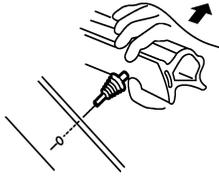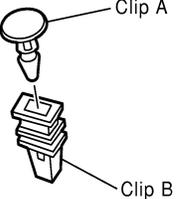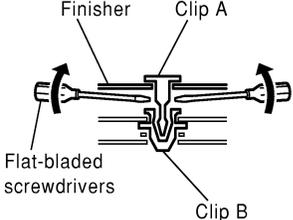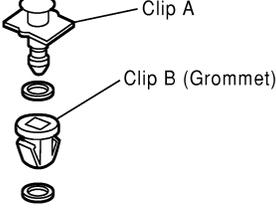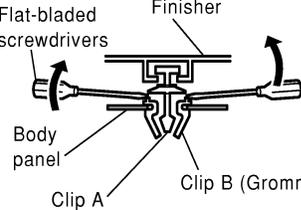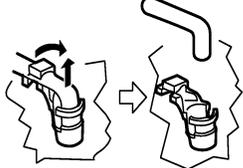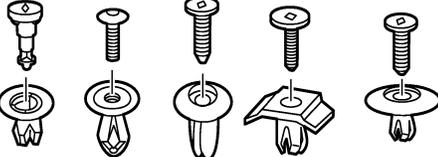Symbol No.	Shapes	Removal & Installation
<p>CE103</p> 		<p>Removal:</p> 
<p>CF110</p> 		<p>Removal:</p> 
<p>CF118</p> 		<p>Removal:</p> 
<p>CR103</p> 		<p>Removal: Holder portion of clip must be spread out to remove rod.</p> 
<p>CS101</p> 		<p>Removal:</p> <ol style="list-style-type: none"> 1. Screw out with a Phillips screwdriver. 2. Remove female portion with flat-bladed screwdriver. 

SIIA0316E

CLIP LIST

< PREPARATION >





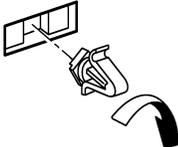
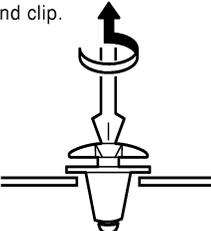
Symbol No.	Shapes	Removal & Installation	
CG101 		Removal:  Rotate 45° to remove	Installation: 
CS102 			
CS113 		Removal: Disconnect upper connection of clip with a flat-bladed screwdriver, then remove clip while inserting a flat-bladed screwdriver between body panel and clip. 	
C111 			

S1IA0317E

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

CLIP LIST

< PREPARATION >

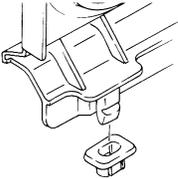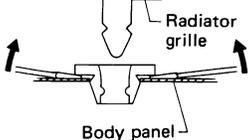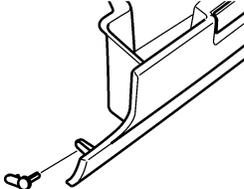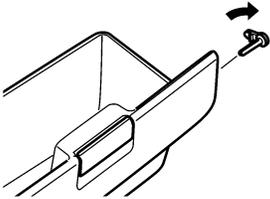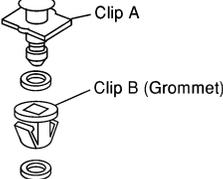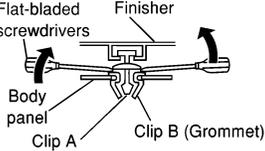Symbol No.	Shapes	Removal & Installation
<p>CG104</p> 		<p>Removal: Remove by bending up with flat-bladed screwdrivers.</p> 
<p>CE114</p> 		
<p>CF118</p> 		<p>Removal: Flat-bladed screwdrivers Finisher</p> 

ALJIA0564GB

FRONT SEAT


< REMOVAL AND INSTALLATION >

- | | | |
|--------------------------------------|----------------------------------|---------------------------------------|
| 1. Headrest without display | 2. Armrest washer | 3. Armrest assembly |
| 4. Armrest insert | 5. Armrest pivot bolt | 6. Armrest pivot bolt finisher |
| 7. Seat cushion assembly | 8. Seat cushion pad | 9. Seat cushion trim |
| 10. Power seat switch | 11. Power seat switch finisher | 12. Seat recline knob |
| 13. Seat slide knob | 14. Seat cushion frame | 15. Seat cushion heater (if equipped) |
| 16. Seat cushion outer finisher (RH) | 17. Seat cushion front finisher | 18. Seat frame assembly |
| 19. Seat slide motor | 20. Bolt cover | 21. Slide finisher (LH) |
| 22. Seat cushion outer finisher (LH) | 23. Slide finisher rear (RH) | 24. Seat harness |
| 25. Power seat control unit | 26. Recline motor | 27. Recline mechanism cover (LH) |
| 28. Recline rod | 29. Recline mechanism cover (RH) | 30. Lumbar lever |
| 31. Seatback assembly | 32. Seatback board | 33. Headrest holder (locked) |
| 34. Headrest holder (free) | 35. Headrest with display | 36. Side air bag module |
| A. Seatback board clip | | |

FRONT SEAT

< REMOVAL AND INSTALLATION >

PASSENGER SEAT - POWER

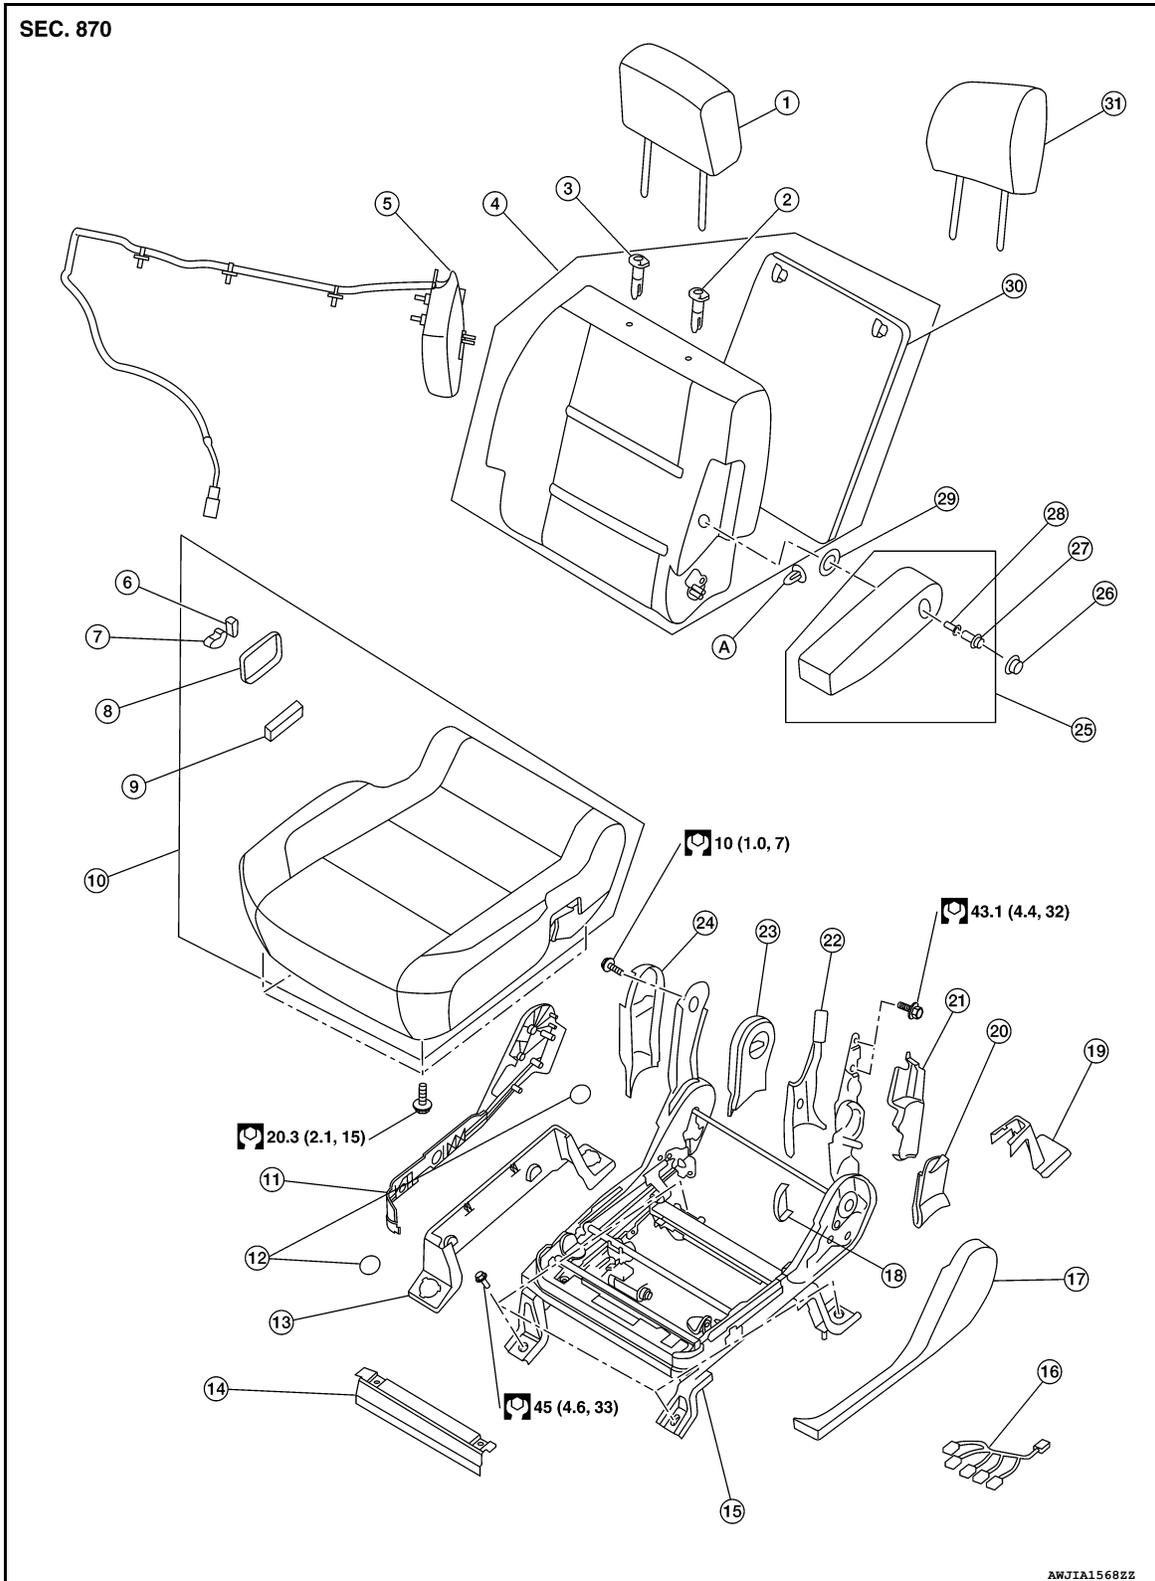

- | | | |
|--------------------------------------|--------------------------------------|---------------------------|
| 1. Headrest without display | 2. Headrest holder (locked) | 3. Headrest holder (free) |
| 4. Seatback assembly | 5. Side air bag module | 6. Seat recline knob |
| 7. Seat slide and lifter switch knob | 8. Power seat switch finisher | 9. Power seat switch |
| 10. Seat cushion assembly | 11. Seat cushion outer finisher (RH) | 12. Bolt cover |
| 13. Slide finisher (RH) | 14. Seat frame assembly | 15. Seat frame assembly |
| 16. Seat harness | 17. Seat cushion outer finisher (LH) | 18. Armrest inner cover |

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

FRONT SEAT

< REMOVAL AND INSTALLATION >

- | | | |
|--|--|--|
| 19. Slide finisher rear (LH) | 20. Recline mechanism outer cover (LH) | 21. Hinge cover outer (LH) |
| 22. Recline mechanism inner cover (RH) | 23. Recline mechanism inner cover (RH) | 24. Recline mechanism outer cover (RH) |
| 25. Armrest assembly | 26. Armrest pivot bolt finisher | 27. Armrest pivot bolt |
| 28. Armrest insert | 29. Armrest washer | 30. Seatback board |
| 31. Headrest with display | A. Seatback board clip | |

Removal and Installation - Front Seat Assembly

INFOID:000000011289410

REMOVAL

WARNING:

Do not leave any objects (screwdrivers, tools, etc.) on the seat during seat repair. It can lead to personal injury if the side air bag module should accidentally deploy.

CAUTION:

- When removing or installing the seat trim, handle it carefully to keep dirt out and avoid damage.
- Before removing the front seat, turn the ignition switch off, disconnect both battery cables and wait at least three minutes.
- When checking the power seat circuit for continuity using a circuit tester, do not confuse its connector with the side air bag module connector. Such an error may cause the air bag to deploy.
- Do not drop, tilt, or bump the side air bag module while installing the seat. Always handle it with care.
- After front side air bag module inflates, front seatback assembly must be replaced.
- Front passenger seat is equipped with an Occupant Classification System sensor and control module. Do not disassemble front passenger seat cushion assembly or remove the trim as this will affect the Occupant Classification System calibration.
- Always replace passenger seat cushion as an assembly.
- When removing and installing the seat, use shop cloths to protect the vehicle from damage.

1. Position the seat until the four seat bolts are accessible. Remove the bolt covers and the bolts.

NOTE:

If disassembling the seat after removal, set the front/rear cushion lifters to the top position.

2. Disconnect the negative and positive battery terminals and wait at least three minutes. Refer to [PG-81, "Removal and Installation"](#).
3. Remove the four seat bolts.
4. Tilt the seat to disconnect the harness connectors from the seat and remove.

INSTALLATION

Installation is in the reverse order of removal.

- Tighten the seat bolts to specification. Refer to [SE-59, "Exploded View"](#).

CAUTION:


Make sure that the seat harness or the floor trim is not damaged during installation.

Removal and Installation - Power Seat Switch

INFOID:000000011289411

REMOVAL


1. Remove the front seat assembly. Refer to [SE-62, "Removal and Installation - Front Seat Assembly"](#).
2. Place the front seat assembly, back side down, on a work bench.
3. Release the trim at bottom of seat as shown.

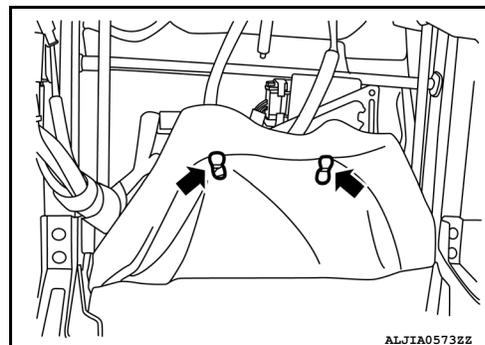


FRONT SEAT

< REMOVAL AND INSTALLATION >


4. Remove the seat recline knob and seat slide and lifter switch knob (1), then the power seat switch finisher (2).

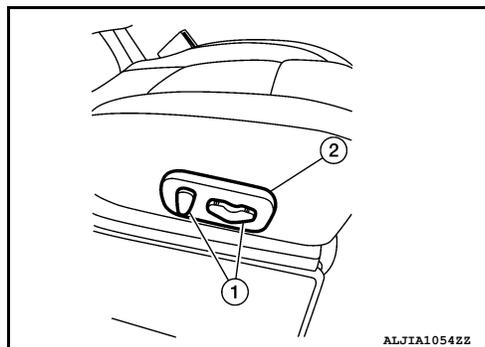

5. Remove the four seat cushion assembly bolts (A) from the seat frame assembly.

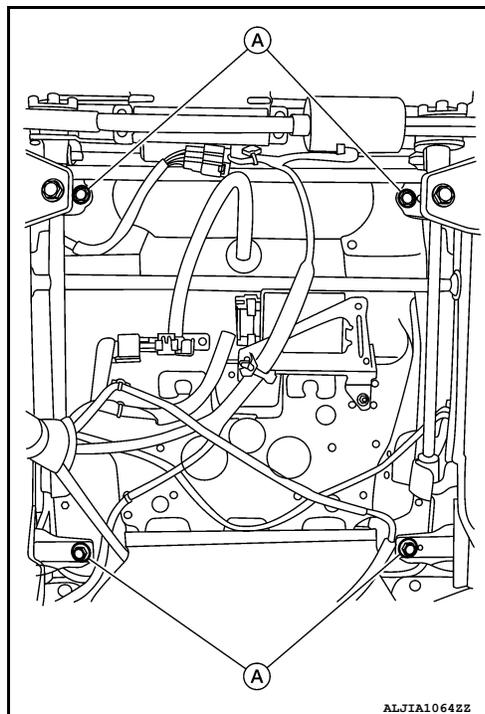

6. Disconnect the harness connectors for the occupant classification system (1) and the power seat switch (2).

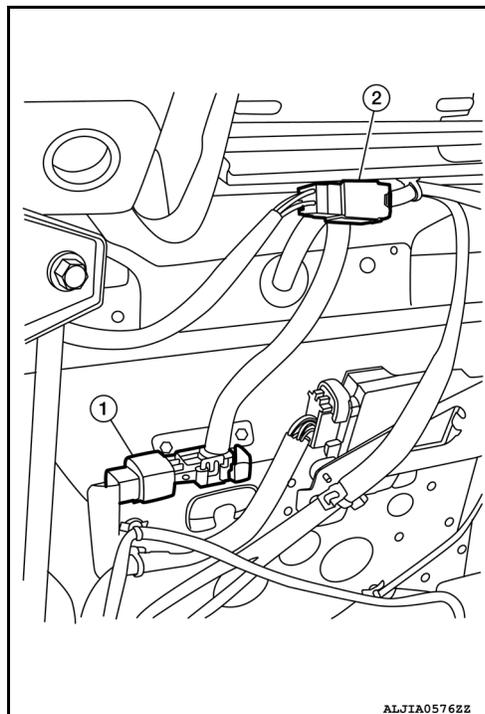


A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P


FRONT SEAT

< REMOVAL AND INSTALLATION >

7. Release the two power seat switch harness clips (1) from the seat frame assembly.

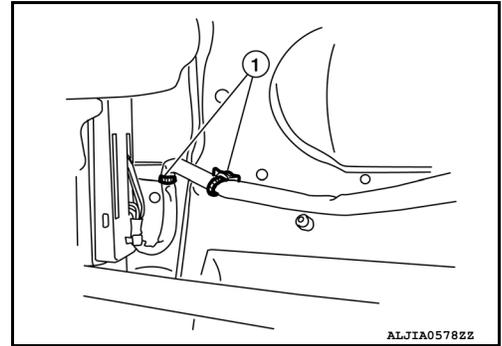

8. Release the seat cushion trim J-clip retainers on same side as power seat switch.
9. Remove the seat cushion outer finisher.
10. Remove the two screws (A) and the power seat switch (1).

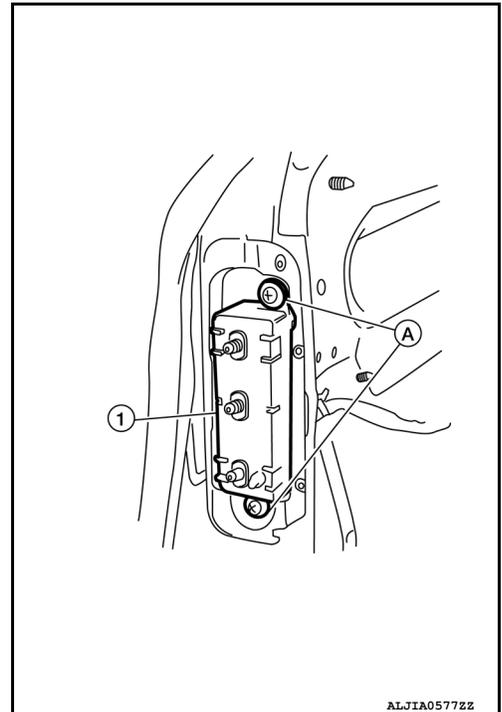

INSTALLATION

Installation is in the reverse order of removal.

- Tighten the seat cushion assembly bolts to specifications. Refer to [SE-59, "Exploded View"](#).

SIDE AIR BAG MODULE

< REMOVAL AND INSTALLATION >

SIDE AIR BAG MODULE

DRIVER SIDE

DRIVER SIDE : Side Air Bag Module


INFOID:000000011432653

WARNING:

- If the vehicle has been involved in a collision and the side air bag module has deployed, the seat-back pad and seatback trim must be replaced.
- Do not leave any objects (screwdrivers, tools, etc.) on the seat during repair. It can lead to personal injury if the side air bag module should accidentally deploy.
- Always work from the side or back of the seatback, do not work in front of seat.
- Do not attempt to disassemble the side air bag module.
- Handle the side air bag module carefully. During removal, always hold the side air bag module, do not let it hang by the wire harness.
- Do not use air tools or electric tools for servicing the seat assembly.
- Do not insert any objects into the side air bag module.
- Do not expose the side air bag module to temperatures exceeding 93°C (200°F).
- Do not expose the side air bag module to any oil, grease, detergent or water.
- Do not damage the chute, connectors, retainers, clips, module harness or the side air bag module.
- Before servicing, turn ignition switch OFF, disconnect both battery terminals then wait at least three minutes.

REMOVAL

1. Remove the driver side seatback. Refer to [SE-62. "Removal and Installation - Front Seat Assembly"](#).
2. Open the seatback trim, pull the side air bag module (1) out of the chute (A) and remove.

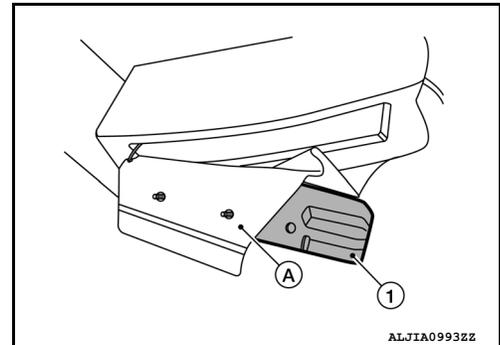

CAUTION:

- Replace the side air bag module if it has been dropped or sustained an impact.
- Do not strike the side air bag module.



INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Inspect seatback pad, seatback trim and seatback trim chutes. Replace if damaged.
- When installing the side air bag module, make sure there are no wrinkles and the chute is not folded, twisted or pinched.
- Always route side air bag module harness in original location. Replace any deformed or damaged clips with same type and color. Always install clips in the original location in the harness.

SIDE AIR BAG MODULE

< REMOVAL AND INSTALLATION >

- After the work is completed, perform self-diagnosis to check that no malfunction is detected. Refer to [SRC-14, "Trouble Diagnosis Introduction"](#).

PASSENGER SIDE

PASSENGER SIDE : Side Air Bag Module


INFOID:000000011432654

WARNING:

- If the vehicle has been involved in a collision and the side air bag module has deployed, the seat-back pad and seatback trim must be replaced.
- Do not leave any objects (screwdrivers, tools, etc.) on the seat during repair. It can lead to personal injury if the side air bag module should accidentally deploy.
- Always work from the side or back of the seatback, do not work in front of seat.
- Do not attempt to disassemble the side air bag module.
- Handle the side air bag module carefully. During removal, always hold the side air bag module, do not let it hang by the wire harness.
- Do not use air tools or electric tools for servicing the seat assembly.
- Do not insert any objects into the side air bag module.
- Do not expose the side air bag module to temperatures exceeding 93°C (200°F).
- Do not expose the side air bag module to any oil, grease, detergent or water.
- Do not damage the chute, connectors, retainers, clips, module harness or the side air bag module.
- Before servicing, turn ignition switch OFF, disconnect both battery terminals then wait at least three minutes.

REMOVAL

1. Remove the passenger side seatback. Refer to [SE-62, "Removal and Installation - Front Seat Assembly"](#).
2. Open the seatback trim, pull the side air bag module (1) out of the chute (A) and remove.

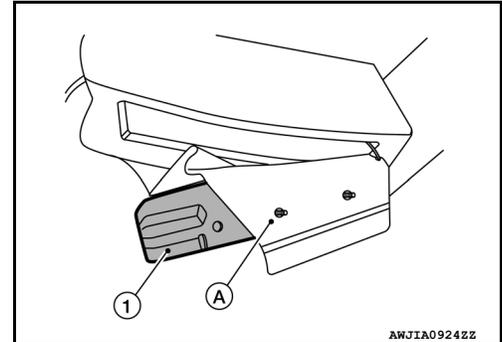

CAUTION:

- Replace the side air bag module if it has been dropped or sustained an impact.
- Do not strike the side air bag module.



INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Inspect seatback pad, seatback trim and seatback trim chutes. Replace if damaged.
- When installing the side air bag module, make sure there are no wrinkles and the chute is not folded, twisted or pinched.
- Always route side air bag module harness in original location. Replace any deformed or damaged clips with same type and color. Always install clips in the original location in the harness.

SIDE AIR BAG MODULE

< REMOVAL AND INSTALLATION >

- After the work is completed, perform self-diagnosis to check that no malfunction is detected. Refer to [SRC-14, "Trouble Diagnosis Introduction"](#).

A

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

SECOND SEAT


< REMOVAL AND INSTALLATION >

SECOND SEAT

Exploded View

INFOID:000000011289412

SECOND ROW (RH)

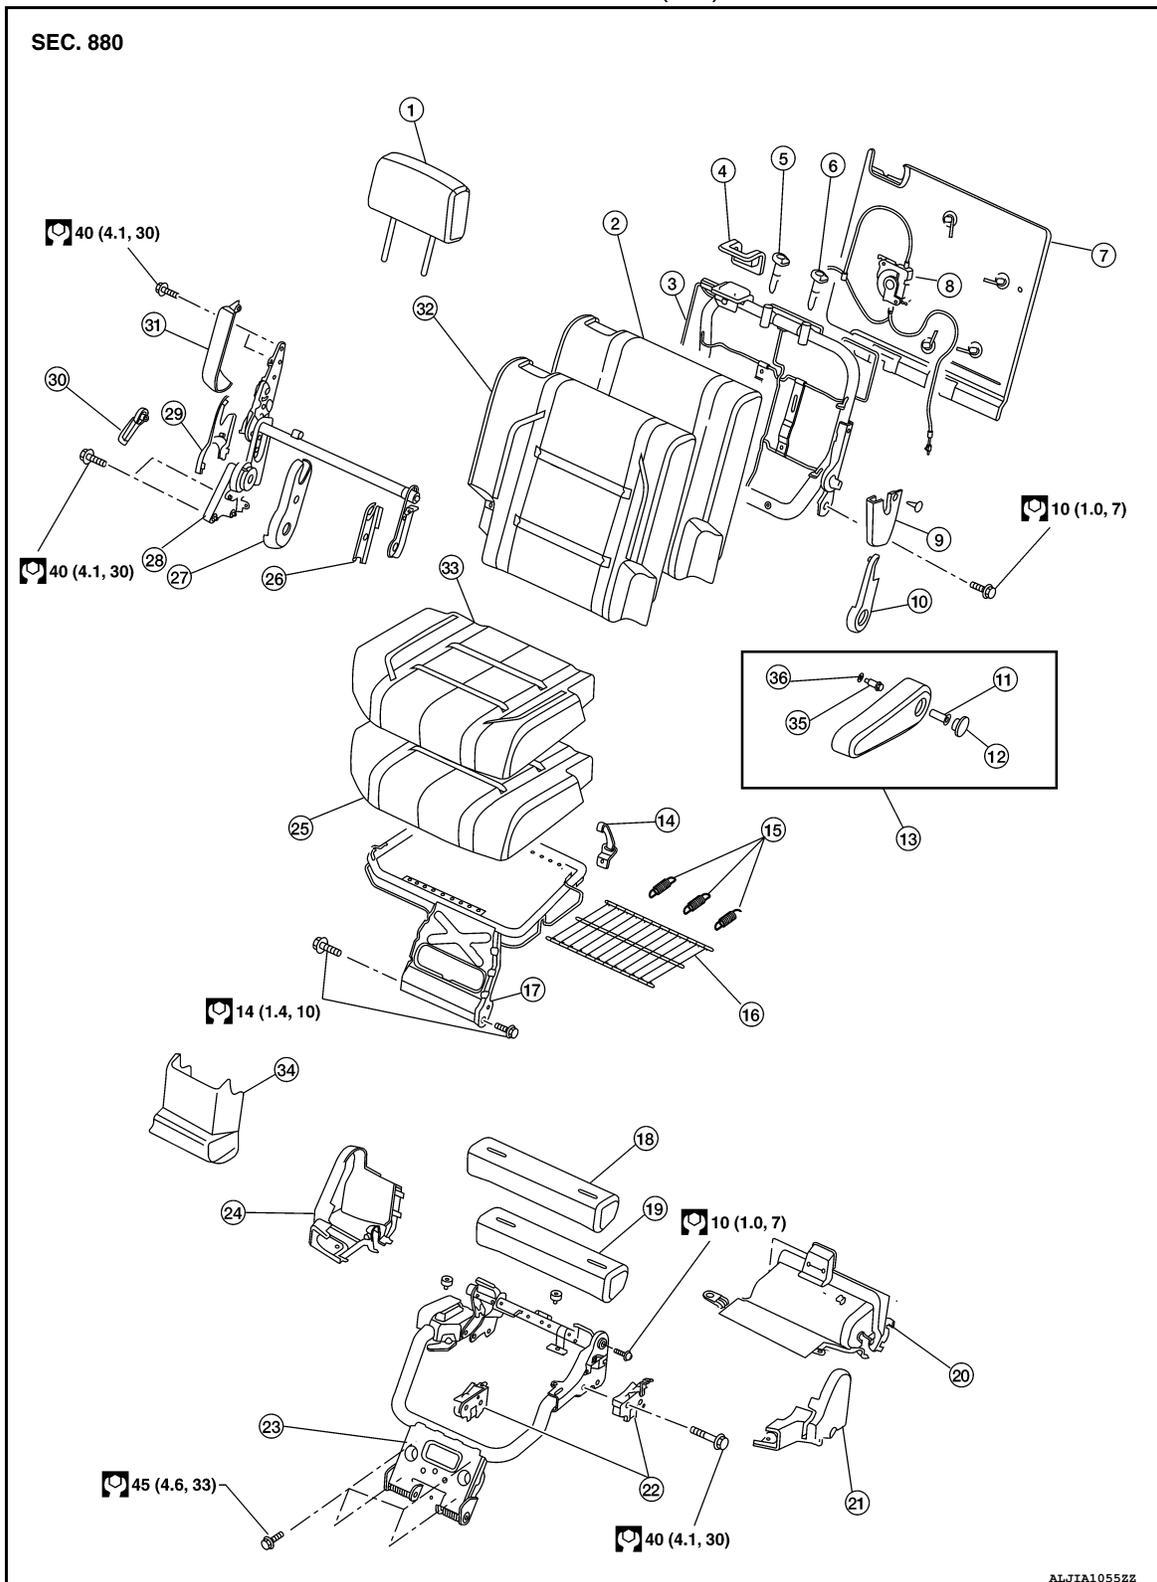

ALJIA10552Z

- | | | |
|-------------------------|---------------------------|-----------------------------|
| 1. Headrest | 2. Seatback pad | 3. Seatback frame |
| 4. Latch lever finisher | 5. Headrest holder (free) | 6. Headrest holder (locked) |

SECOND SEAT

< REMOVAL AND INSTALLATION >

7. Seatback board	8. Latch release assembly	9. Upper recline mechanism cover (LH)	A
10. Lower recline mechanism outer cover (LH)	11. Armrest pivot bolt	12. Armrest pivot bolt finisher	A
13. Armrest assembly	14. Seat cushion latch assembly	15. Seat cushion support spring	B
16. Seat cushion support	17. Seat cushion frame	18. Seat support trim	B
19. Seat support pad	20. Lower seat finisher (rear)	21. Recline mechanism finisher (LH)	C
22. Seat frame latch assembly	23. Seat frame assembly	24. Recline mechanism finisher (RH)	C
25. Seat cushion pad	26. Lower recline mechanism inner cover (LH)	27. Lower recline mechanism inner cover (RH)	C
28. Recline mechanism assembly	29. Lower recline mechanism outer cover (RH)	30. Recline lever	D
31. Upper recline mechanism cover (RH)	32. Seatback trim	33. Seat cushion trim	D
34. Seat hinge finisher	35. Armrest insert	36. Armrest washer	E

SE

K

L

M

N


O

P

SECOND SEAT

< REMOVAL AND INSTALLATION >

SECOND ROW (LH)

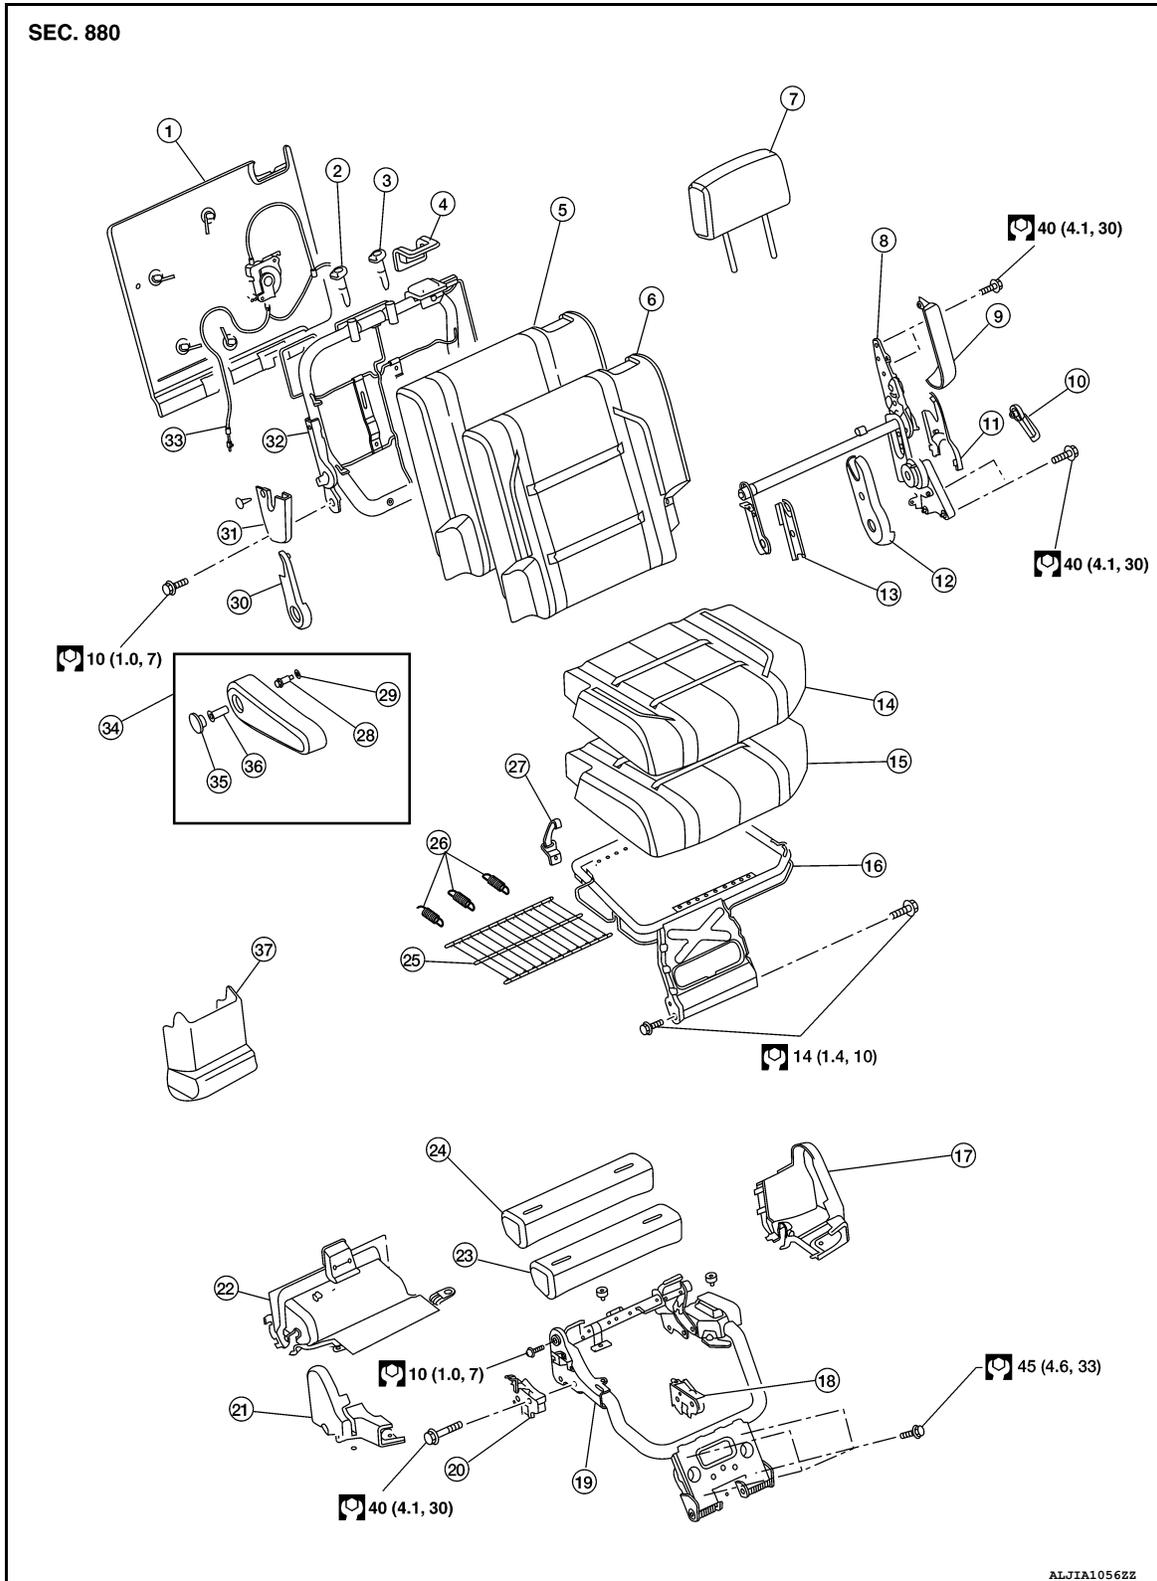

- | | | |
|--|--|--|
| 1. Seatback board | 2. Headrest holder (free) | 3. Headrest holder (locked) |
| 4. Latch lever finisher | 5. Seatback pad | 6. Seatback trim |
| 7. Headrest | 8. Recline mechanism assembly | 9. Upper recline mechanism cover (LH) |
| 10. Recline lever | 11. Lower recline mechanism outer cover (LH) | 12. Lower recline mechanism inner cover (LH) |
| 13. Lower recline mechanism inner cover (RH) | 14. Seat cushion trim | 15. Seat cushion pad |

SECOND SEAT

< REMOVAL AND INSTALLATION >

16. Seat cushion frame	17. Recline mechanism finisher (LH)	18. Seat frame latch assembly	A
19. Seat frame assembly	20. Seat frame latch assembly	21. Recline mechanism finisher (RH)	
22. Lower seat finisher (rear)	23. Seat support pad	24. Seat support trim	
25. Seat cushion support	26. Seat cushion support spring	27. Seat cushion latch assembly	B
28. Armrest insert	29. Armrest washer	30. Lower recline mechanism outer cover (RH)	
31. Upper recline mechanism cover (RH)	32. Seatback frame	33. Latch release assembly	C
34. Armrest assembly	35. Armrest pivot bolt finisher	36. Armrest pivot bolt	
37. Seat hinge finisher			

D

E

F

G

H

I

SE

K

L

M

N


O

P

SECOND SEAT

< REMOVAL AND INSTALLATION >

SECOND ROW (CENTER)

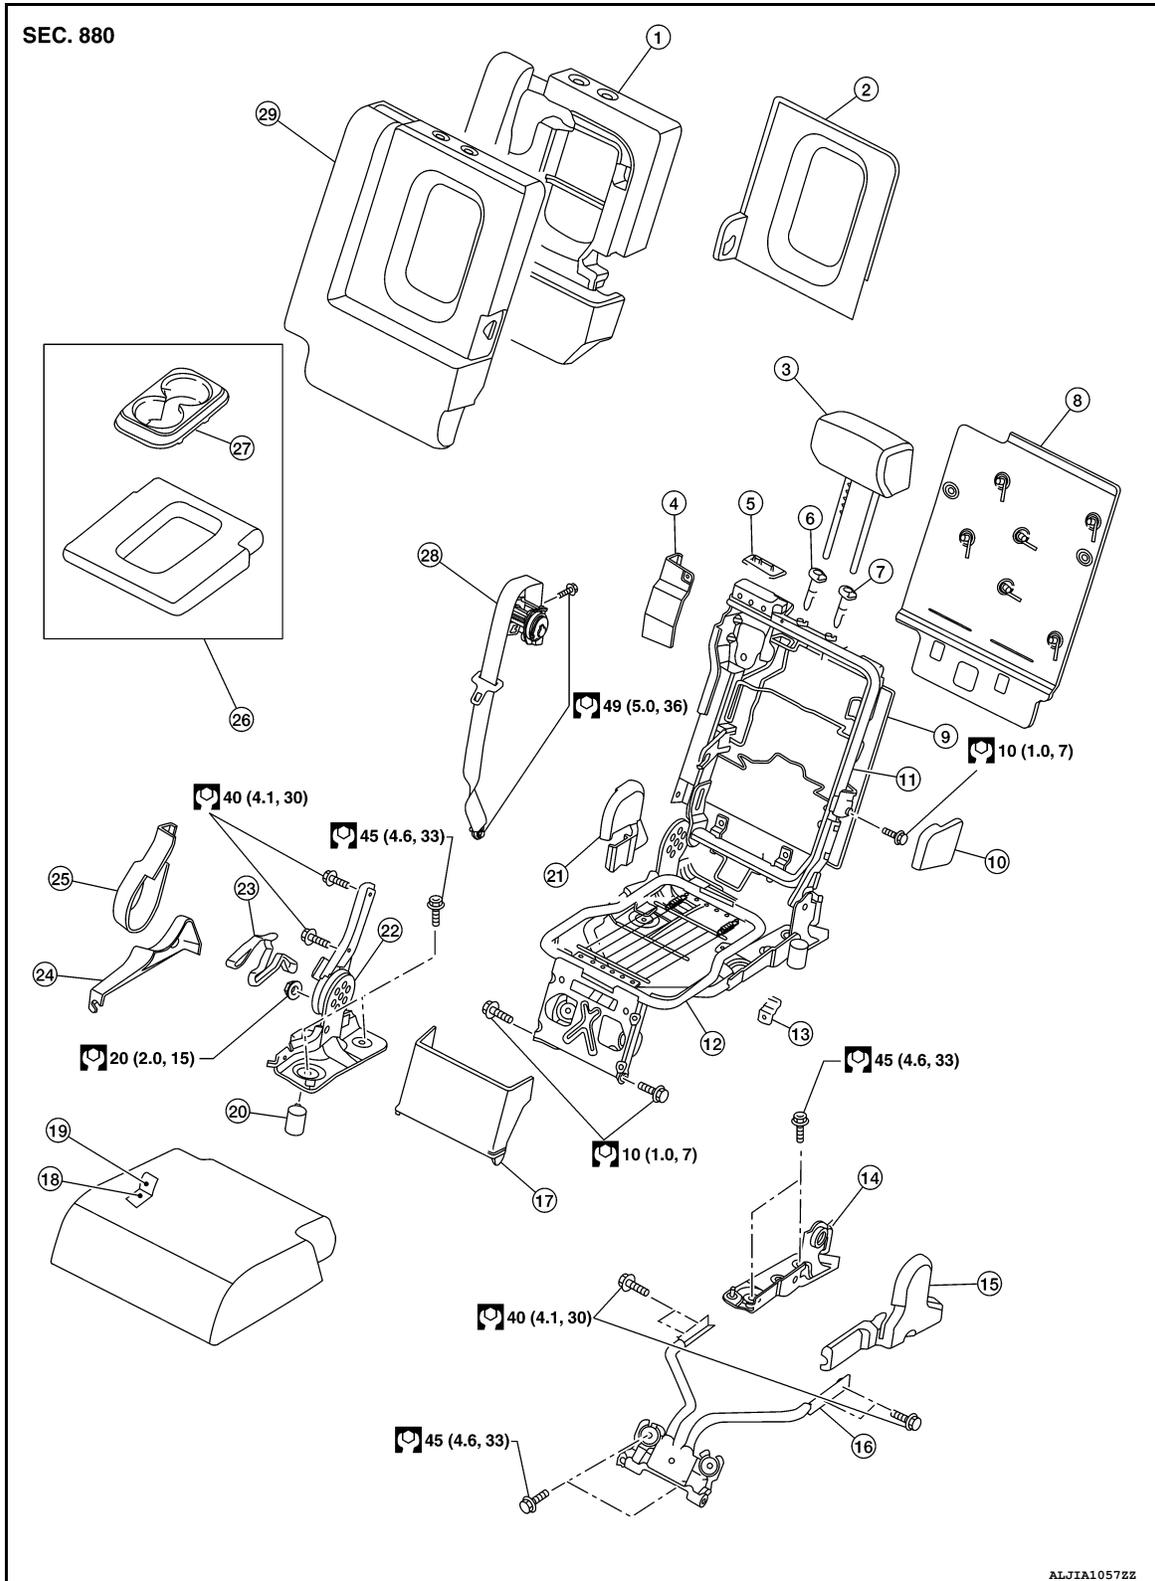

ALJIA1057ZZ

- | | | |
|---------------------------------|---|---------------------------------|
| 1. Seatback pad | 2. Armrest finisher | 3. Headrest |
| 4. Seat belt retractor cover | 5. Seat belt retractor finisher | 6. Headrest holder (free) |
| 7. Headrest holder (locked) | 8. Seatback board | 9. Seatback silencer |
| 10. Armrest bracket finisher | 11. Seatback frame assembly | 12. Seat cushion frame assembly |
| 13. Seat cushion latch assembly | 14. Seatback hinge support bracket (LH) | 15. Seat frame finisher (LH) |
| 16. Seat base bracket | 17. Seat base bracket finisher | 18. Seat cushion pad |

SECOND SEAT

< REMOVAL AND INSTALLATION >


- | | | |
|----------------------------------|-------------------------|----------------------------------|
| 19. Seat cushion trim | 20. Cushion stop bumper | 21. Inner latch cover (RH) |
| 22. Seatback hinge assembly (RH) | 23. Seat lever | 24. Seatback frame finisher (RH) |
| 25. Seatback hinge finisher (RH) | 26. Armrest assembly | 27. Cup holder |
| 28. Seat belt retractor assembly | 29. Seatback trim | |

Removal and Installation - Bucket Seat (LH/RH)

INFOID:000000011289413

REMOVAL

1. Tilt seat to the forward position.
2. Remove two nuts (A), two bolts (B) and the seat assembly.

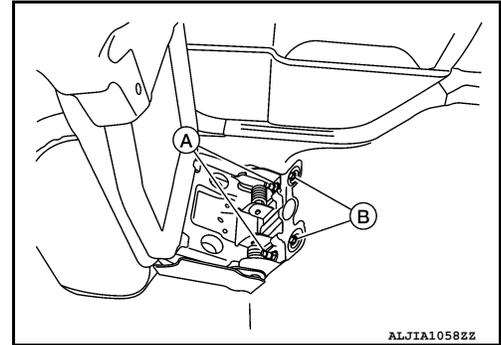

INSTALLATION

Installation is in the reverse order of removal.


- Tighten the seat nuts and bolts to specification. Refer to [SE-68, "Exploded View"](#).

Removal and Installation - Center Seat

INFOID:000000011289414

REMOVAL

1. Tilt the seat cushion to the forward position.
2. Remove the six seat bolts (A).

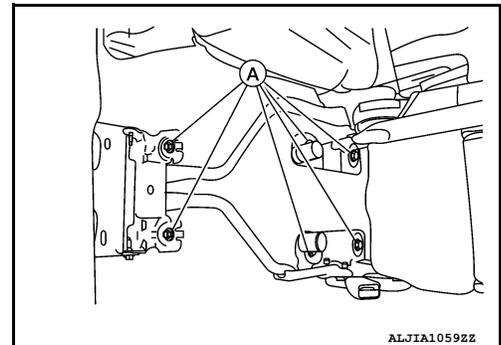

3. Tilt the seat cushion back in the locked position and remove the seat.

INSTALLATION

Installation is in the reverse order of removal.

- Tighten the seat bolts to specification. Refer to [SE-74, "Exploded View"](#).

THIRD SEAT

< REMOVAL AND INSTALLATION >

THIRD SEAT


Without Power Folding

INFOID:000000011289415

Exploded View

INFOID:000000011289416

THIRD SEAT (LH)

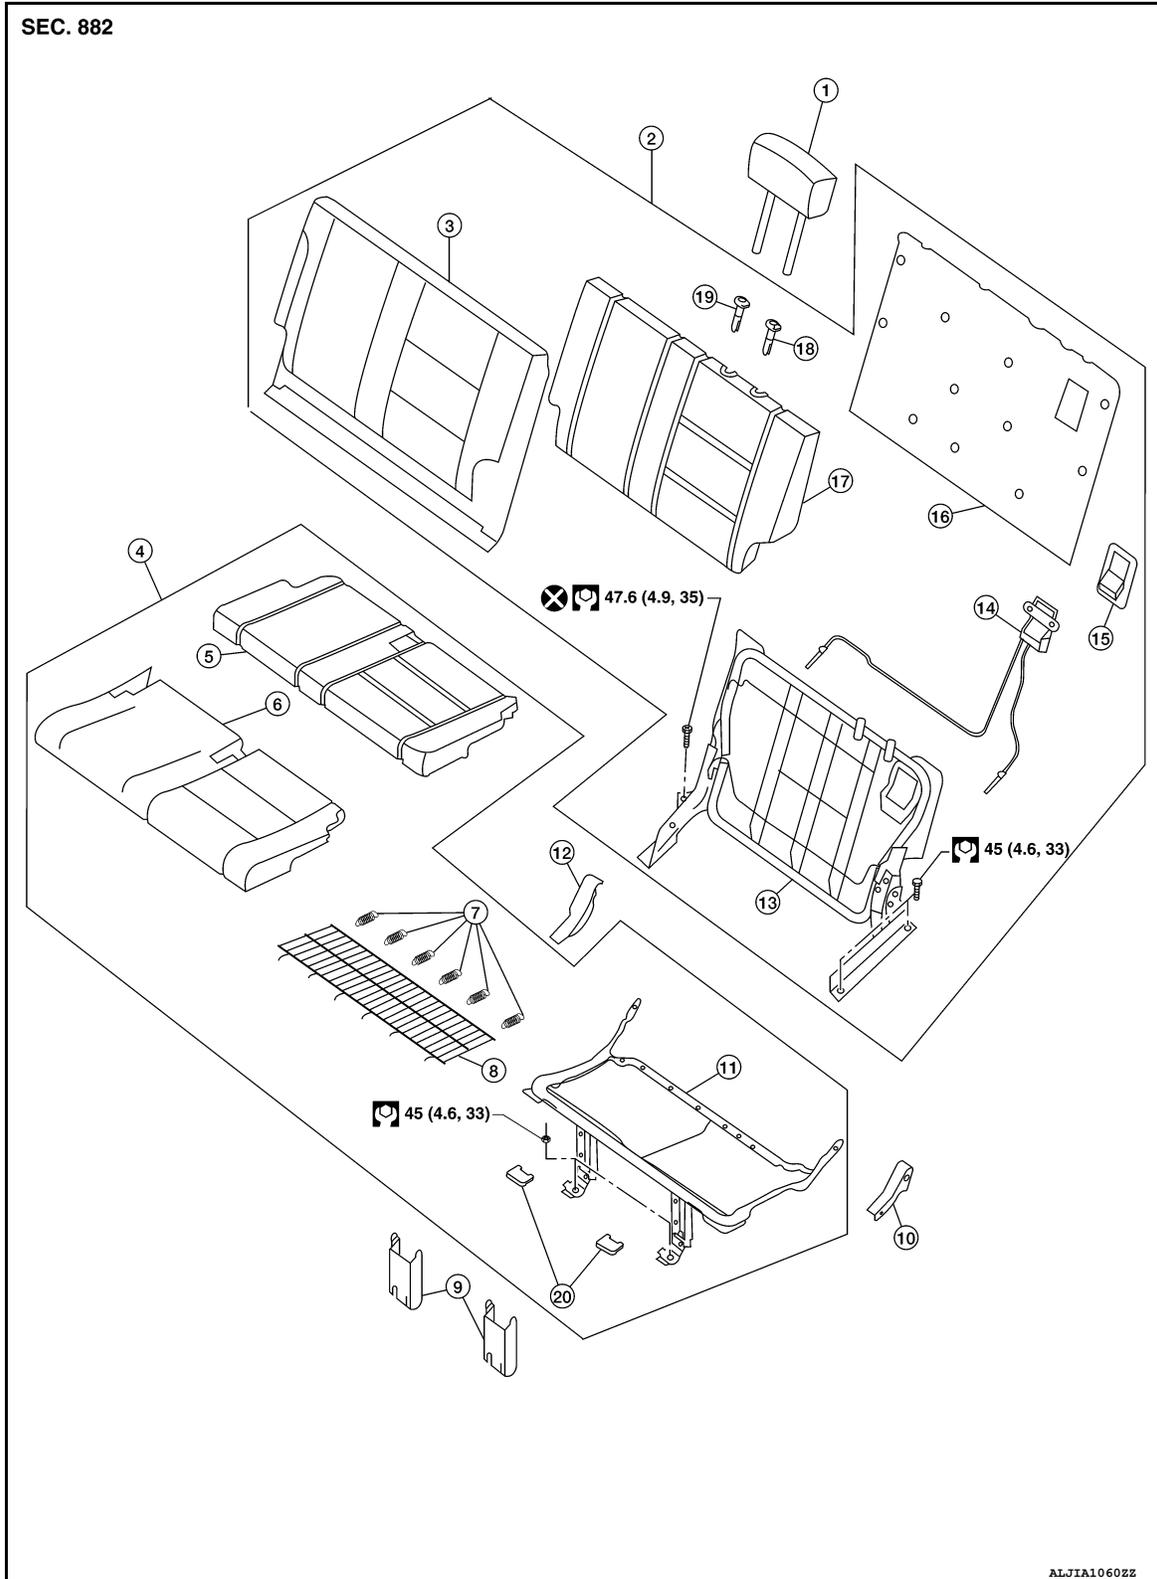

THIRD SEAT

< REMOVAL AND INSTALLATION >

- | | | | |
|--------------------------------|-------------------------------|--------------------------------------|---|
| 1. Headrest | 2. Seatback assembly | 3. Seatback trim | A |
| 4. Seat cushion assembly | 5. Seat cushion pad | 6. Seat cushion trim | |
| 7. Seat cushion support spring | 8. Seat cushion support | 9. Seat cushion frame lower finisher | |
| 10. Hinge finisher (LH) | 11. Seat cushion frame | 12. Hinge finisher (RH) | B |
| 13. Seatback frame assembly | 14. Seatback release assembly | 15. Seatback release finisher | |
| 16. Seatback board | 17. Seatback pad | 18. Headrest holder (locked) | |
| 19. Headrest holder (free) | 20. Seat nut finisher | | C |

D

E

F

G

H

I

SE

K

L

M

N


O

P

THIRD SEAT

< REMOVAL AND INSTALLATION >

THIRD SEAT (RH)

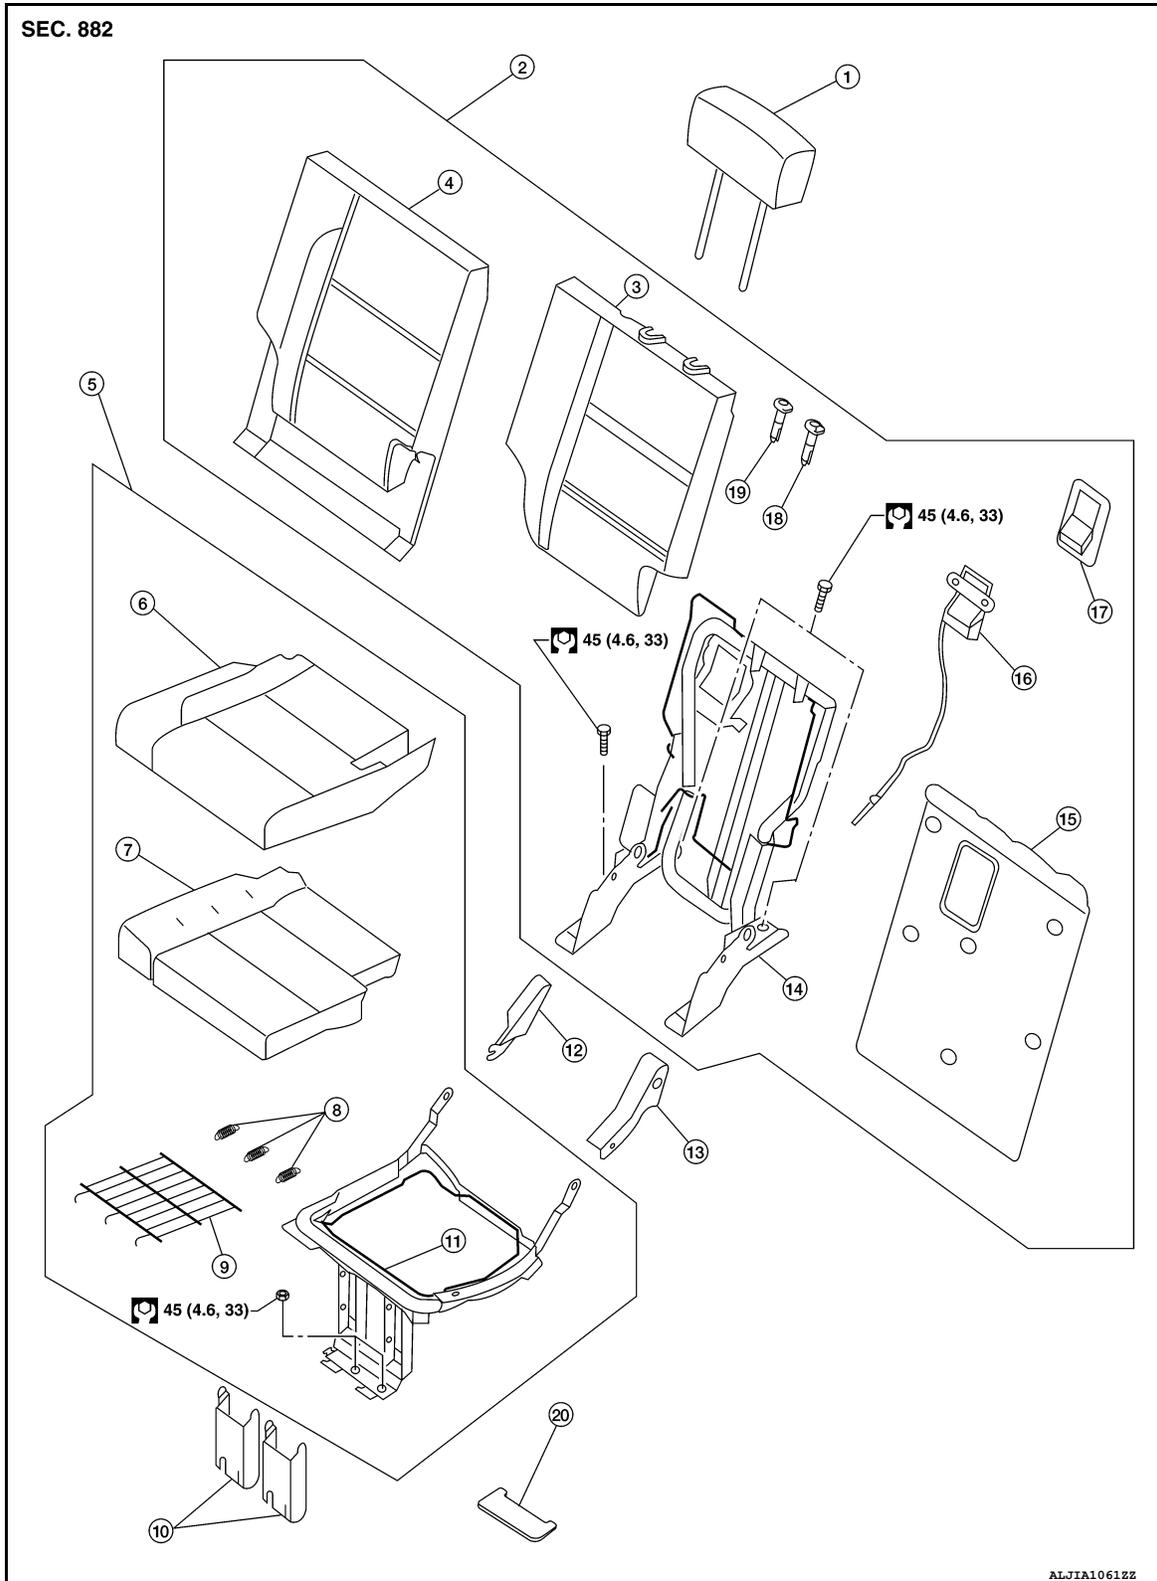

- | | | |
|---------------------------------------|--------------------------------|-------------------------|
| 1. Headrest | 2. Seatback assembly | 3. Seatback pad |
| 4. Seatback trim | 5. Seat cushion assembly | 6. Seat cushion trim |
| 7. Seat cushion pad | 8. Seat cushion support spring | 9. Seat cushion support |
| 10. Seat cushion frame lower finisher | 11. Seat cushion frame | 12. Hinge finisher (RH) |
| 13. Hinge finisher (LH) | 14. Seatback frame assembly | 15. Seatback board |

THIRD SEAT

< REMOVAL AND INSTALLATION >


- | | | |
|-------------------------------|-------------------------------|------------------------------|
| 16. Seatback release assembly | 17. Seatback release finisher | 18. Headrest holder (locked) |
| 19. Headrest holder (free) | 20. Seat nut finisher | |

Removal and Installation - LH Seat

INFOID:000000011289417


REMOVAL

1. Remove the storage bin. Refer to [INT-25](#).
2. Remove the seat nut finishers.
3. Remove the two front nuts and the front LH seatback frame assembly bolt.

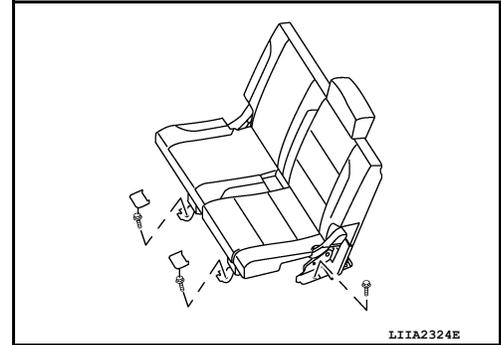

4. Remove the seat cushion side facing retainer clip and release elastic band from seat belt buckle.
5. Partially lift seatback upright, then remove seat belt buckle (2) from between the hinge finisher (RH) (1) and the seat cushion trim (3).


↔: Front

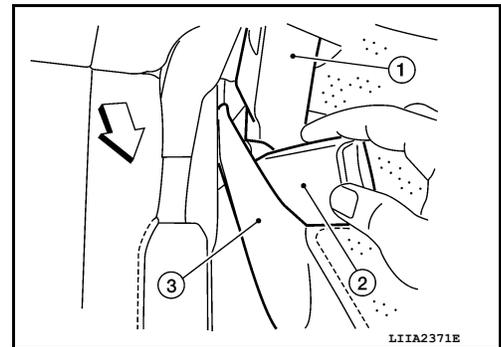

6. Move the seat to the folded flat position.
7. Remove the rear seat bolt (A) and the seat belt buckle bolt (B).

CAUTION:

Do not reuse the seat belt buckle bolt.

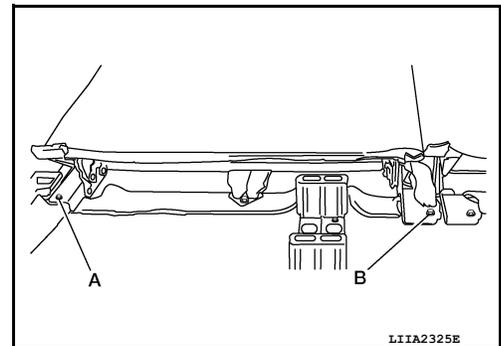

8. Remove the seat assembly.

INSTALLATION

Installation is in the reverse order of removal.

- Tighten the seat nuts and bolts to specification. Refer to [SE-74, "Exploded View"](#).
- Tighten the seat belt buckle bolt to specification. Refer to [SB-16, "Removal and Installation of Third Row Seat Belt"](#).

Removal and Installation - RH Seat

INFOID:000000011289418


REMOVAL

1. Remove the storage bin. Refer to [INT-25](#).

THIRD SEAT

< REMOVAL AND INSTALLATION >


2. Remove the seat nut finisher.
3. Remove the two front nuts (A) and the front RH seatback frame assembly bolt (B).

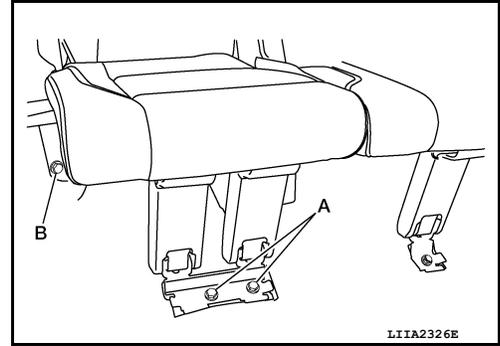


4. Remove the seat cushion side facing retainer clip and release elastic band from seat belt buckle.
5. Partially lift seatback upright, then remove seat belt buckle (2) from between the hinge finisher (LH) (1) and the seat cushion trim (3).

⇐: Front

6. Move the seat to the folded flat position.

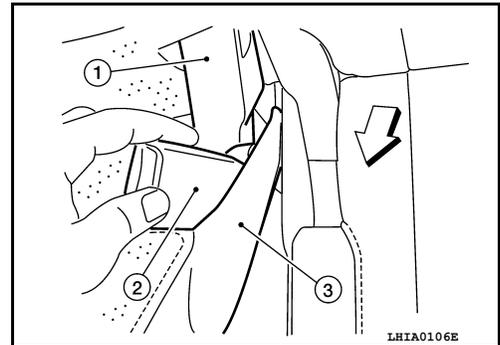

7. Remove the rear bolts and the seat assembly.

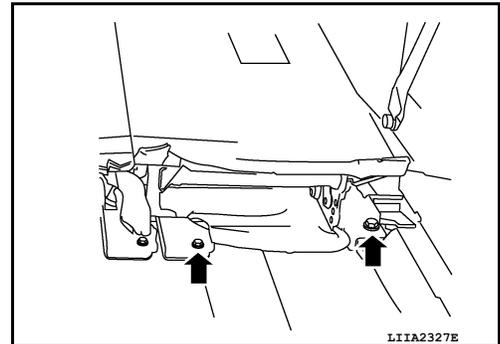

INSTALLATION

Installation is in the reverse order of removal.

- Tighten the seat nuts and bolts to specification. Refer to [SE-74, "Exploded View"](#).

THIRD SEAT

< REMOVAL AND INSTALLATION >


With Power Folding

INFOID:000000011289419

Exploded View

INFOID:000000011289420

THIRD SEAT (LH)

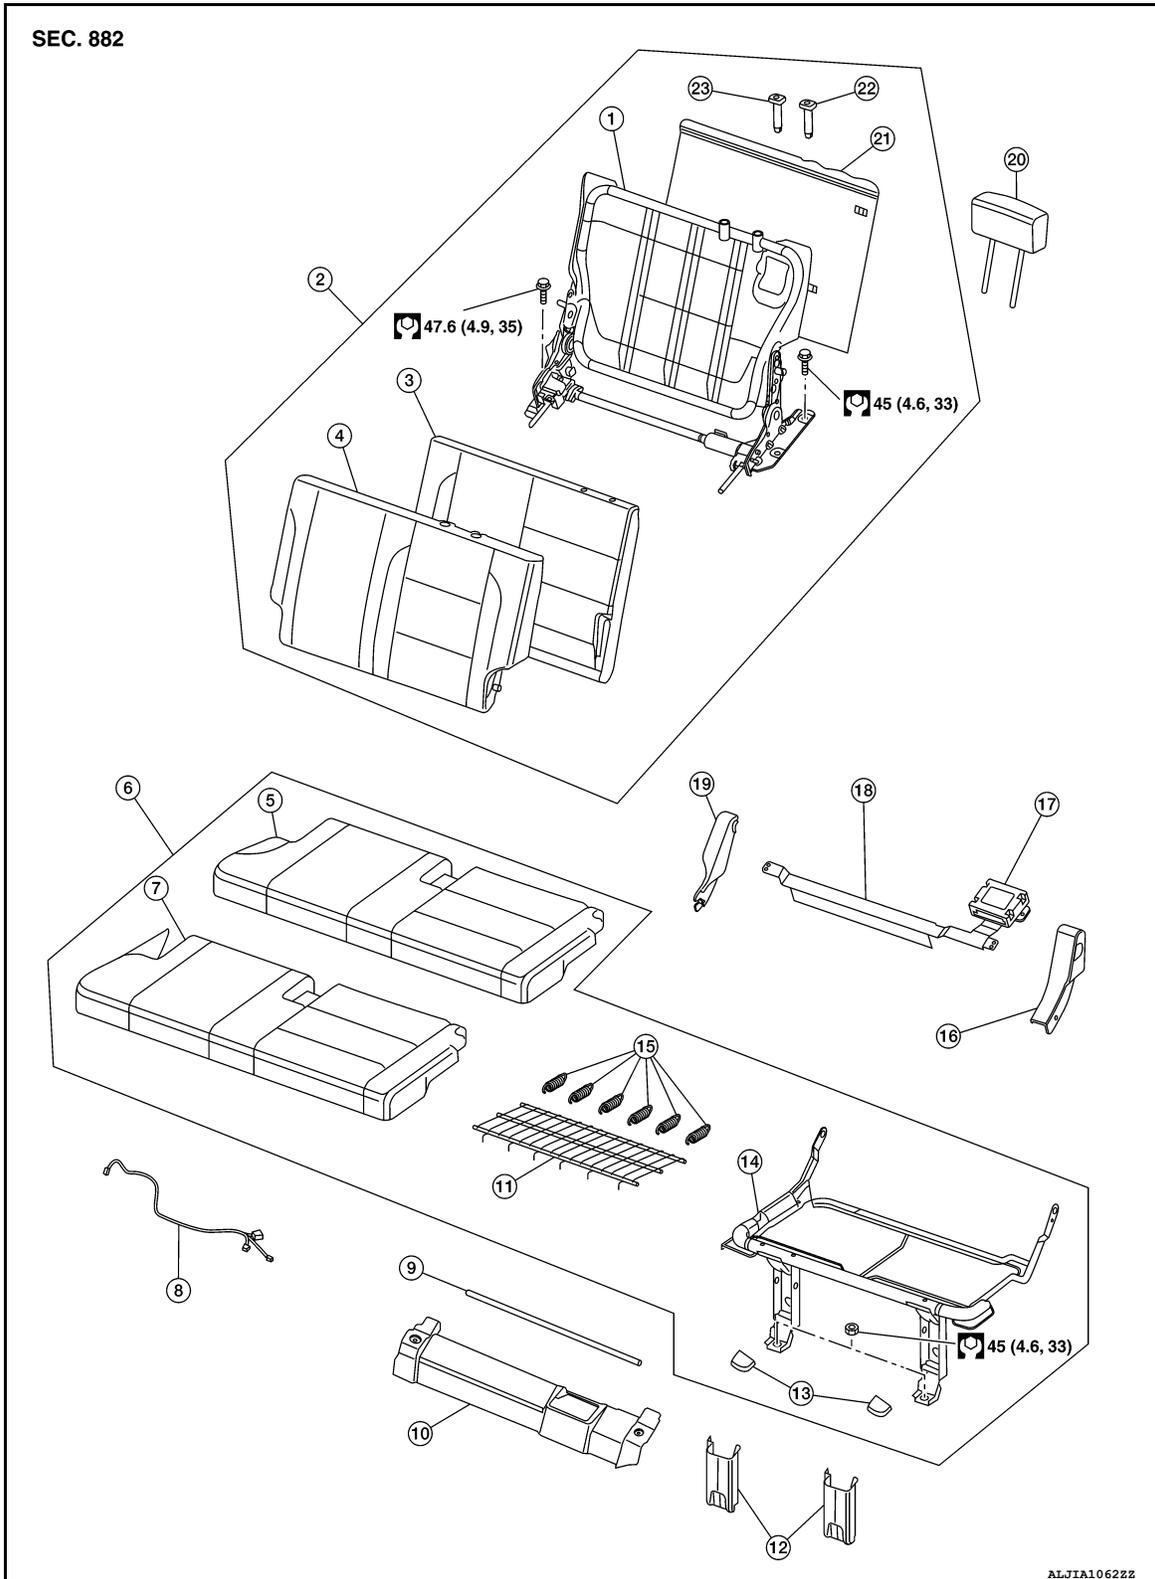

- | | | |
|----------------------------|----------------------|--------------------------|
| 1. Seatback frame assembly | 2. Seatback assembly | 3. Seatback pad |
| 4. Seatback trim | 5. Seat cushion pad | 6. Seat cushion assembly |


A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

THIRD SEAT

< REMOVAL AND INSTALLATION >

- | | | |
|------------------------------|----------------------------|---------------------------------------|
| 7. Seat cushion trim | 8. Seat harness | 9. Power seat cable |
| 10. Seat motor cover | 11. Seat cushion support | 12. Seat cushion frame lower finisher |
| 13. Seat nut finisher | 14. Seat cushion frame | 15. Seat cushion support spring |
| 16. Hinge finisher (LH) | 17. Seat control unit | 18. Power seat cross beam |
| 19. Hinge finisher (RH) | 20. Headrest | 21. Seatback board |
| 22. Headrest holder (locked) | 23. Headrest holder (free) | |

THIRD SEAT (RH)

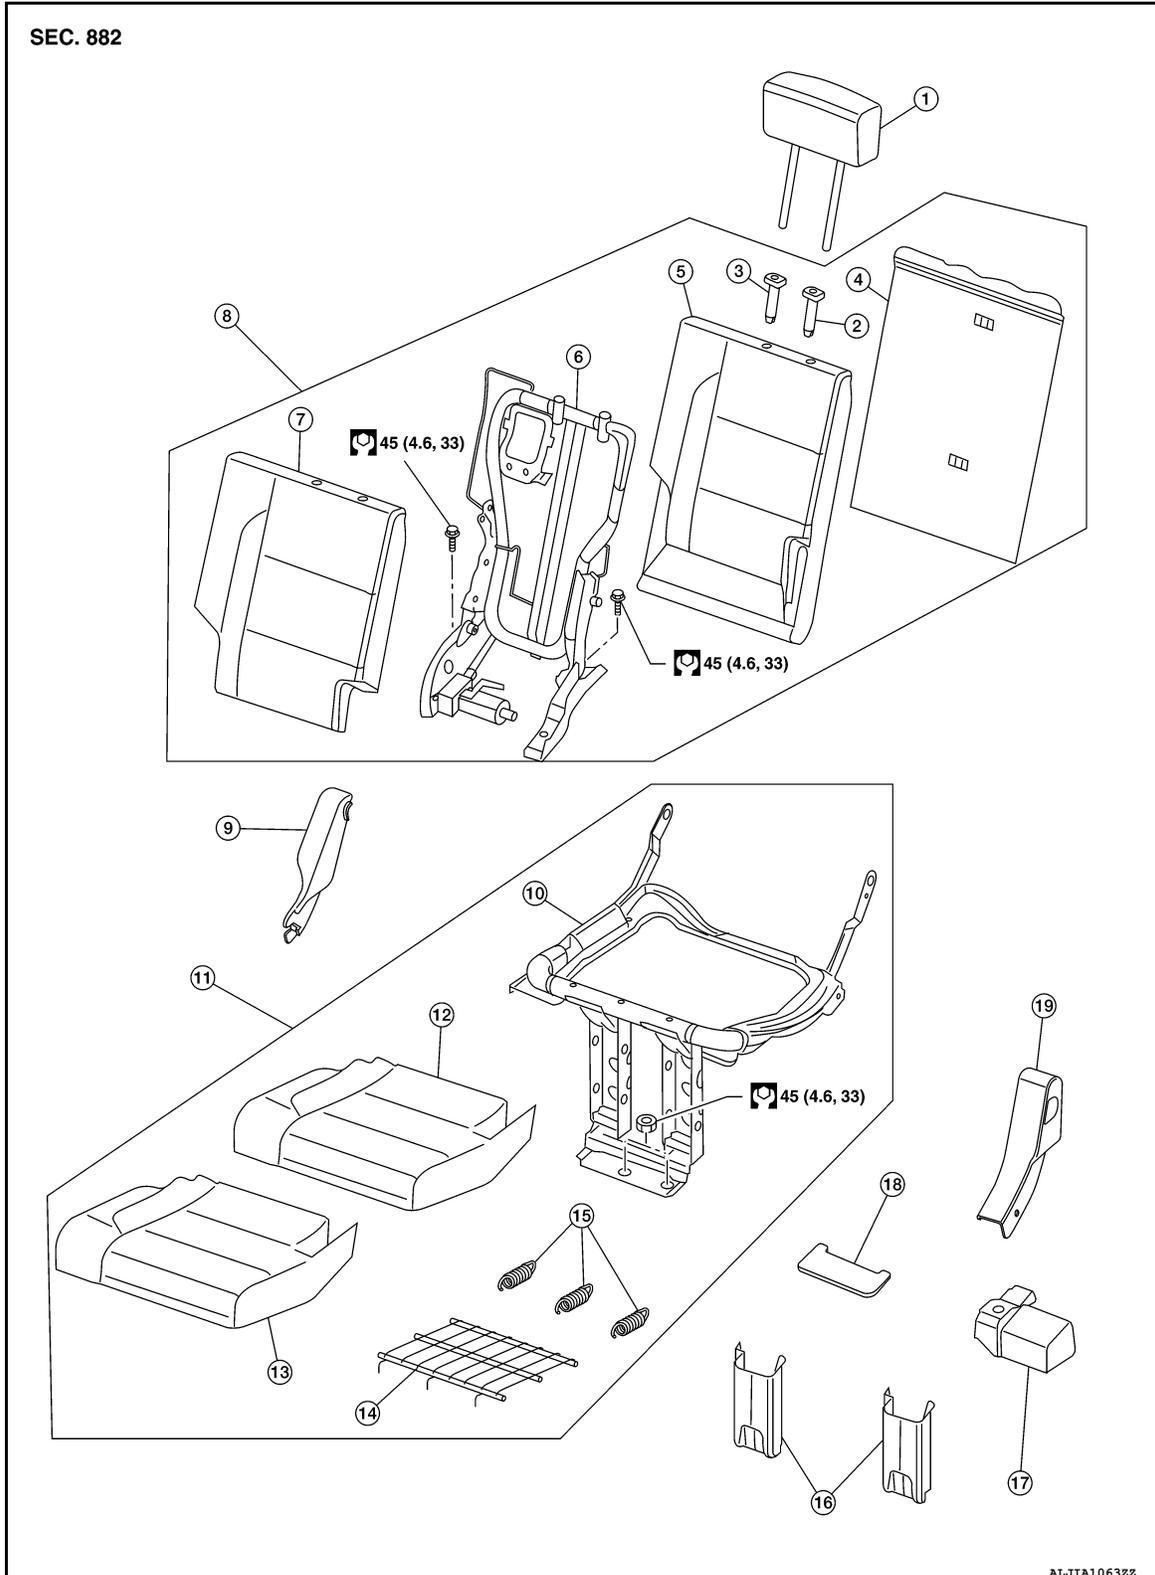

THIRD SEAT

< REMOVAL AND INSTALLATION >


- | | | |
|---------------------------------------|-----------------------------|---------------------------------|
| 1. Headrest | 2. Headrest holder (locked) | 3. Headrest holder (free) |
| 4. Seatback board | 5. Seatback pad | 6. Seatback frame assembly |
| 7. Seatback trim | 8. Seatback assembly | 9. Hinge finisher (RH) |
| 10. Seat cushion frame | 11. Seat cushion assembly | 12. Seat cushion pad |
| 13. Seat cushion trim | 14. Seat cushion support | 15. Seat cushion support spring |
| 16. Seat cushion frame lower finisher | 17. Seat motor cover | 16. Seat nut finisher |
| 19. Hinge finisher (LH) | | |

Removal and Installation - LH Seat

INFOID:000000011289421


REMOVAL

1. Remove the storage bin. Refer to [INT-25](#).
2. Remove the seat nut finishers.
3. Remove the two front nuts and the front LH seatback frame assembly bolt.

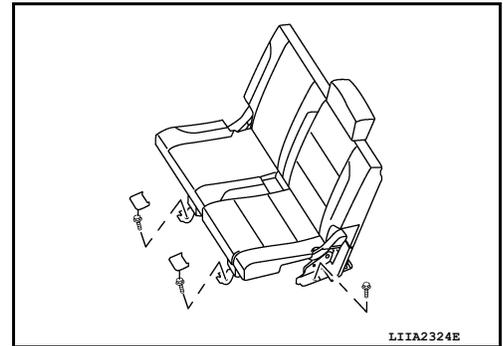

4. Remove the seat cushion side facing retainer clip and release elastic band from seat belt buckle.
5. Partially lift seatback upright, then remove seat belt buckle (2) from between the hinge finisher (RH) (1) and seat cushion trim (3).


⇐: Front

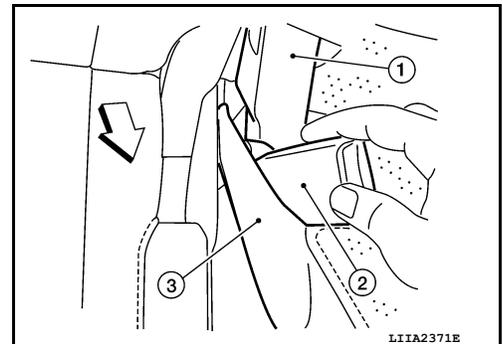

6. Move the seat to the folded flat position.
7. Remove the rear seat bolt (A) and seat belt buckle bolt (B).

CAUTION:

Do not reuse the seat belt buckle bolt.

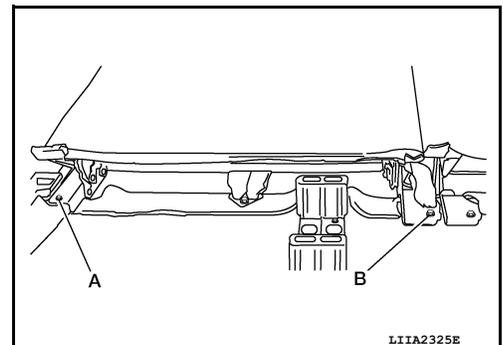

8. Disconnect the seat harness.
9. Remove the seat assembly.

INSTALLATION

Installation is in the reverse order of removal.

- Tighten the seat nuts and bolts to specification. Refer to [SE-79, "Exploded View"](#).

THIRD SEAT

< REMOVAL AND INSTALLATION >


- Tighten the seat belt buckle bolt to specification. Refer to [SB-16. "Removal and Installation of Third Row Seat Belt"](#).

Removal and Installation - Power Seat Cross Beam


INFOID:000000011289422

REMOVAL


1. Remove the two front seat nuts.
2. Fold the seat cushion up.

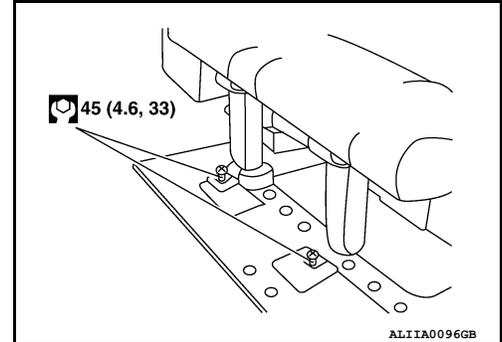


3. Disconnect the harness connectors from the seat control unit.

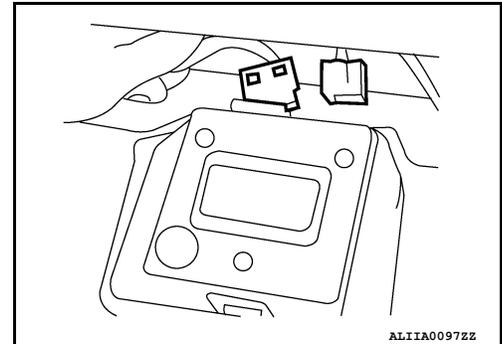

4. Press the front release tab and remove the seat control unit.

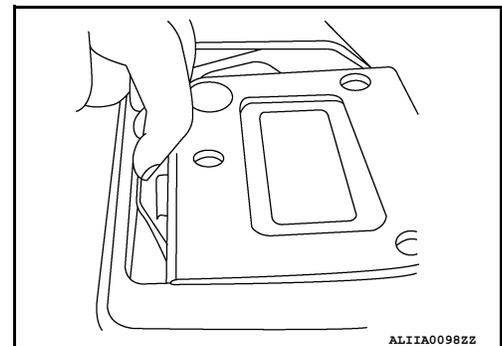


5. Unclip the wiring harness from the seat motor cover clips (A).

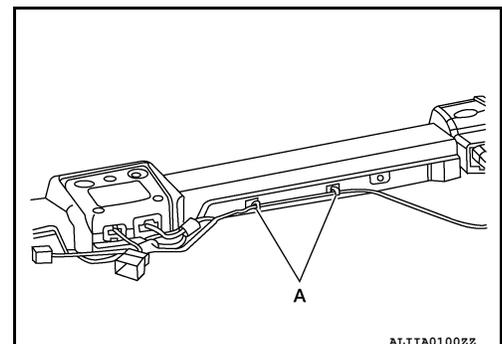


THIRD SEAT

< REMOVAL AND INSTALLATION >

6. Remove the screws from the seat motor cover and the seat motor cover.

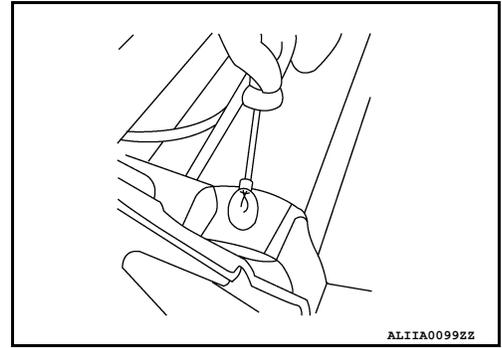


7. Release the power seat cross beam clip and open the hinged strap.

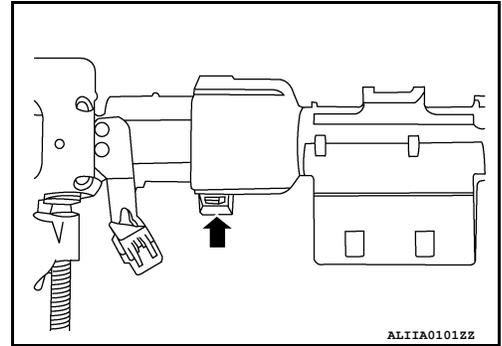


8. Remove the power seat cross beam screws and the power seat cross beam.

NOTE:

The power seat cable will be removed with the cross-beam.

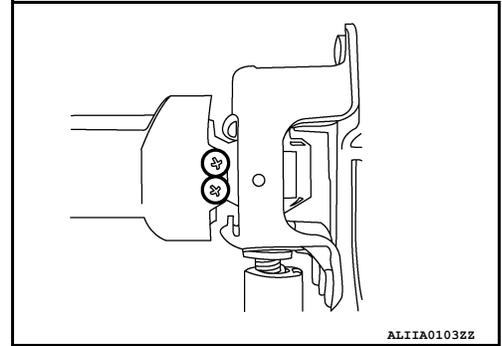

9. Remove the power seat cable from the power seat cross beam.

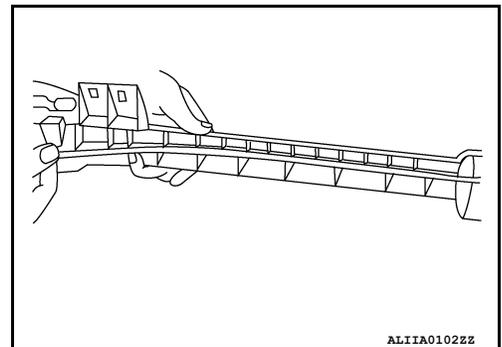


INSTALLATION

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P


THIRD SEAT

< REMOVAL AND INSTALLATION >


1. Install the power seat cable into the seat motor and slide the conduit on the motor ferrule.
⇐: Front

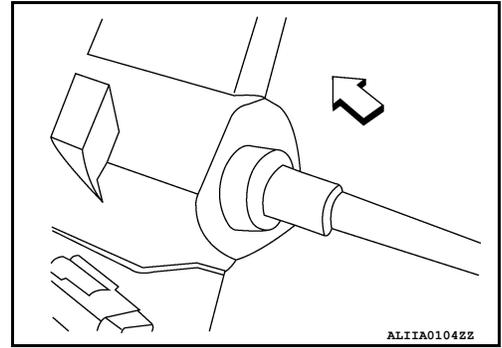


2. Install the power seat cable (A) into the seat motor.
⇐: Front

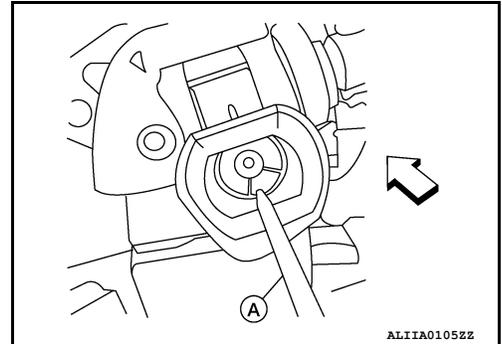


3. Install the power seat cross beam RH side screws

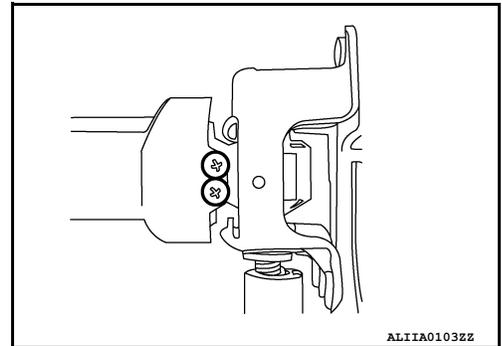

4. Starting at the RH side, snap the power seat cable into the power seat cross beam retainer clips.

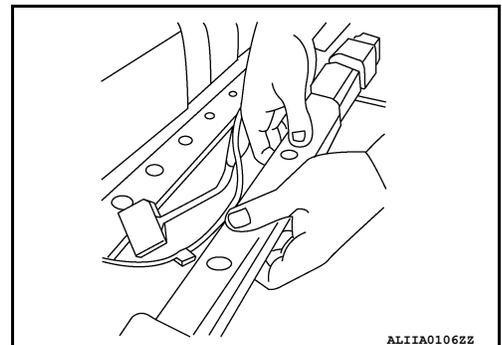


5. Snap the hinged strap retainer around the seat motor.

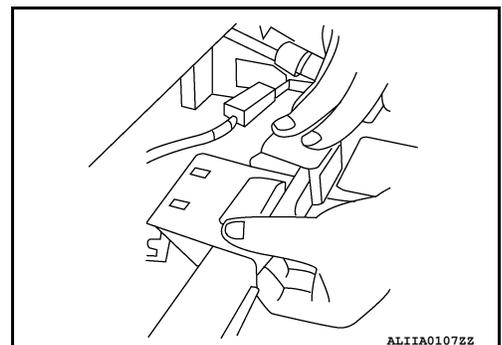


THIRD SEAT

< REMOVAL AND INSTALLATION >


6. Replace the seat motor cover.

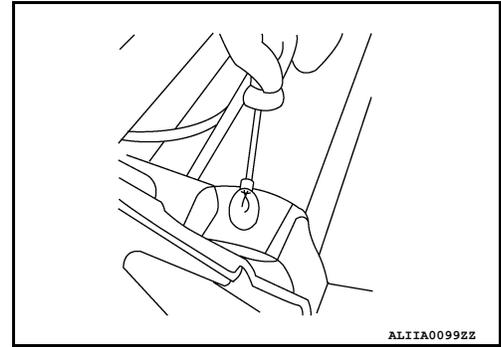


7. Install the seat harness to the seat motor cover clips (A).

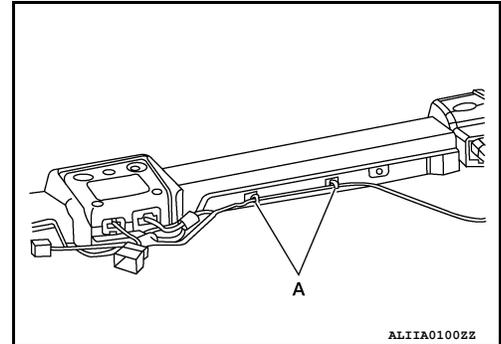

8. Install the seat control unit and connect the seat control unit harness connectors.

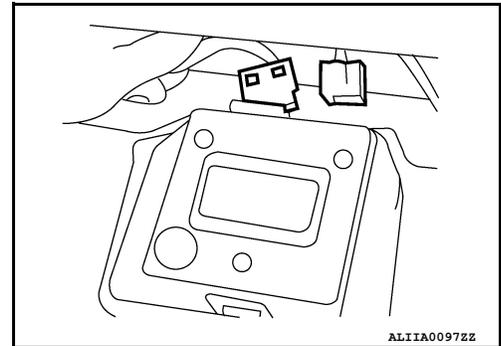

9. Install the two front seat nuts.

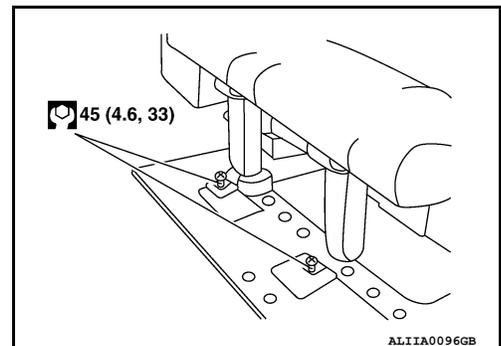

Removal and Installation - Power Seat Cable

REMOVAL


INFOID:0000000011289423

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P


THIRD SEAT

< REMOVAL AND INSTALLATION >


1. Remove the seat nut finishers (1).

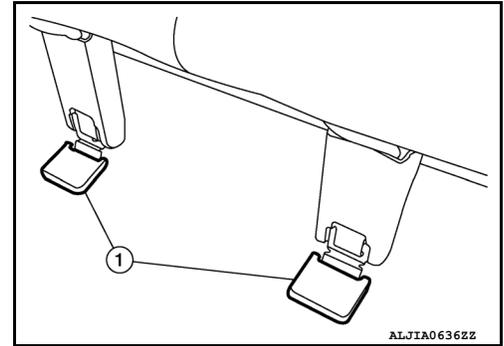


2. Remove the two seat nuts.

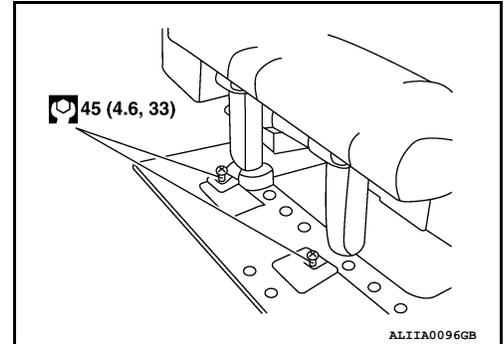

3. Partially lift seatback upright, then remove seat belt buckles from between seatback and seat cushion.
 - Use the center position shoulder belt to hold the seat cushion up.
4. Disconnect the harness connectors from the seat control unit.

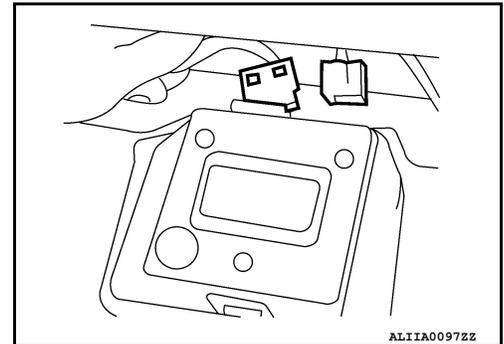


5. Press the front release tab and remove the seat control unit.

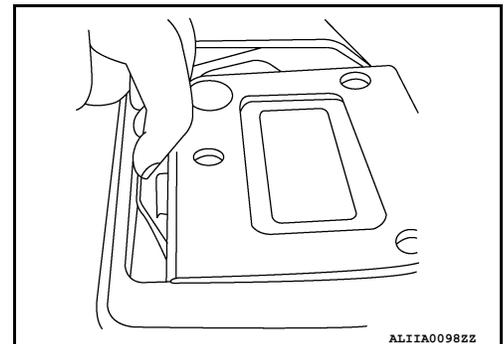


THIRD SEAT

< REMOVAL AND INSTALLATION >


6. Remove the front bolt (A) on the LH side of the seatback assembly.

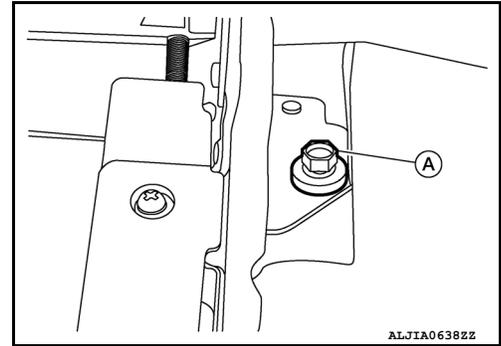


7. Remove the cargo cover from behind the third row seat. Refer to [INT-25, "Removal and Installation"](#).
8. Using the power seat switch, position the seat forward as shown.

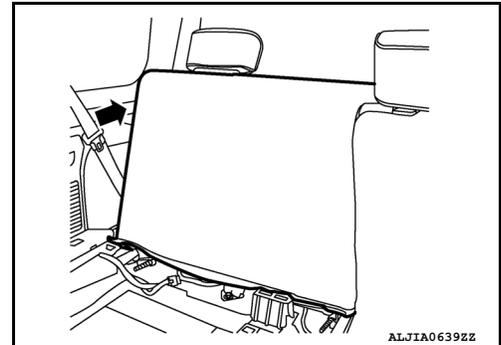

9. Remove the rear seat bolt (A) and the rear seat bolt (B).

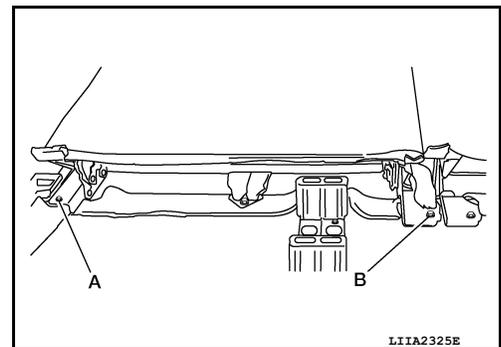

10. Tilt the third row seat back (toward the rear of the vehicle).
11. Starting from the center and working outward, remove the power seat cable from the retainers.

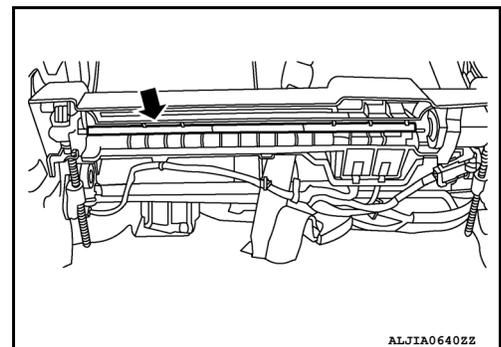

12. Remove the power seat cable.


CAUTION:

Do not rotate the power seat motor or the drive gear. Rotating either will take the assembly out of synchronization and could lead to seat binding when operated.


THIRD SEAT

< REMOVAL AND INSTALLATION >

- a. Remove from the drive gear (1).

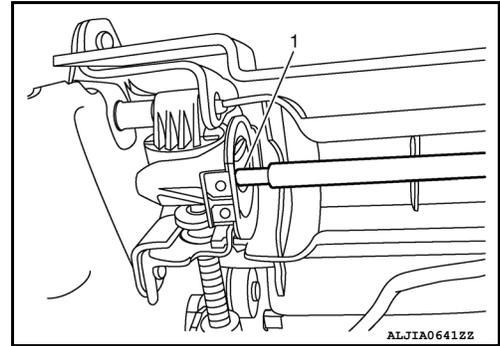


- b. Remove from the seat motor (2).

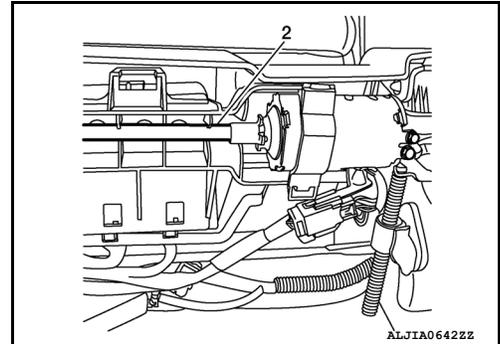

INSTALLATION

Installation is in the reverse order of removal.

- Install the new power seat cable into the seat motor first, then into the drive gear.
- Apply two pieces of urethane pad (1) on the bottom of the seat control unit as shown.

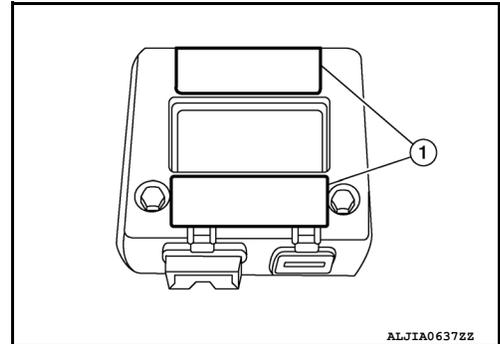


Removal and Installation - RH Seat

INFOID:000000011289424

REMOVAL

1. Remove the storage bin. Refer to [INT-25](#).
2. Remove the seat nut finisher.
3. Remove front seat nuts (A) and front RH seatback assembly bolt (B).

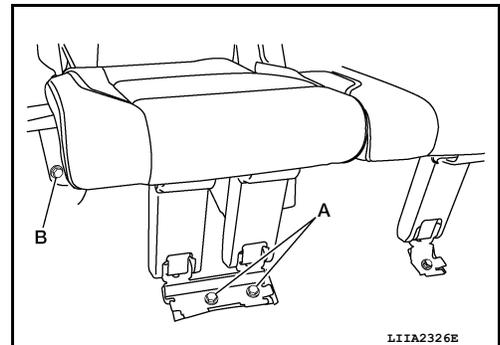


4. Remove the seat cushion side facing retainer clip and release elastic band from seat belt buckle.

THIRD SEAT


< REMOVAL AND INSTALLATION >

- Partially lift seatback upright, then remove seat belt buckle (2) from between the hinge finisher (LH) (1) and the seat cushion trim (3).

⇐: Front

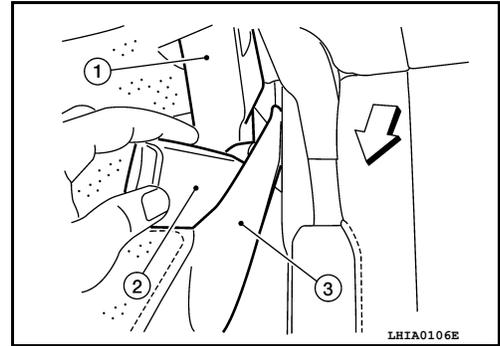

- Move the seat to the folded flat position.
- Remove the rear bolts from the seat assembly.

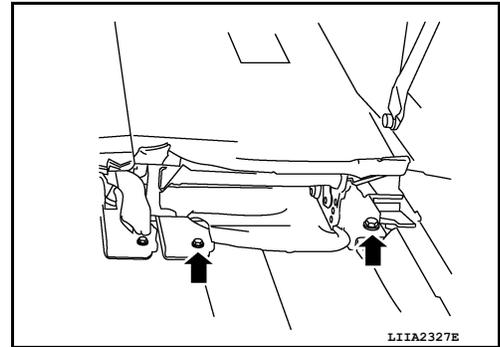

- Disconnect the seat harness.
- Remove the seat assembly.

INSTALLATION

Installation is in the reverse order of removal.

- Tighten the seat nuts and bolts to specification. Refer to [SE-79, "Exploded View"](#).

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

SE

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


UNIT DISASSEMBLY AND ASSEMBLY

FRONT SEAT

Exploded View

INFOID:000000011433592

DRIVER SEAT

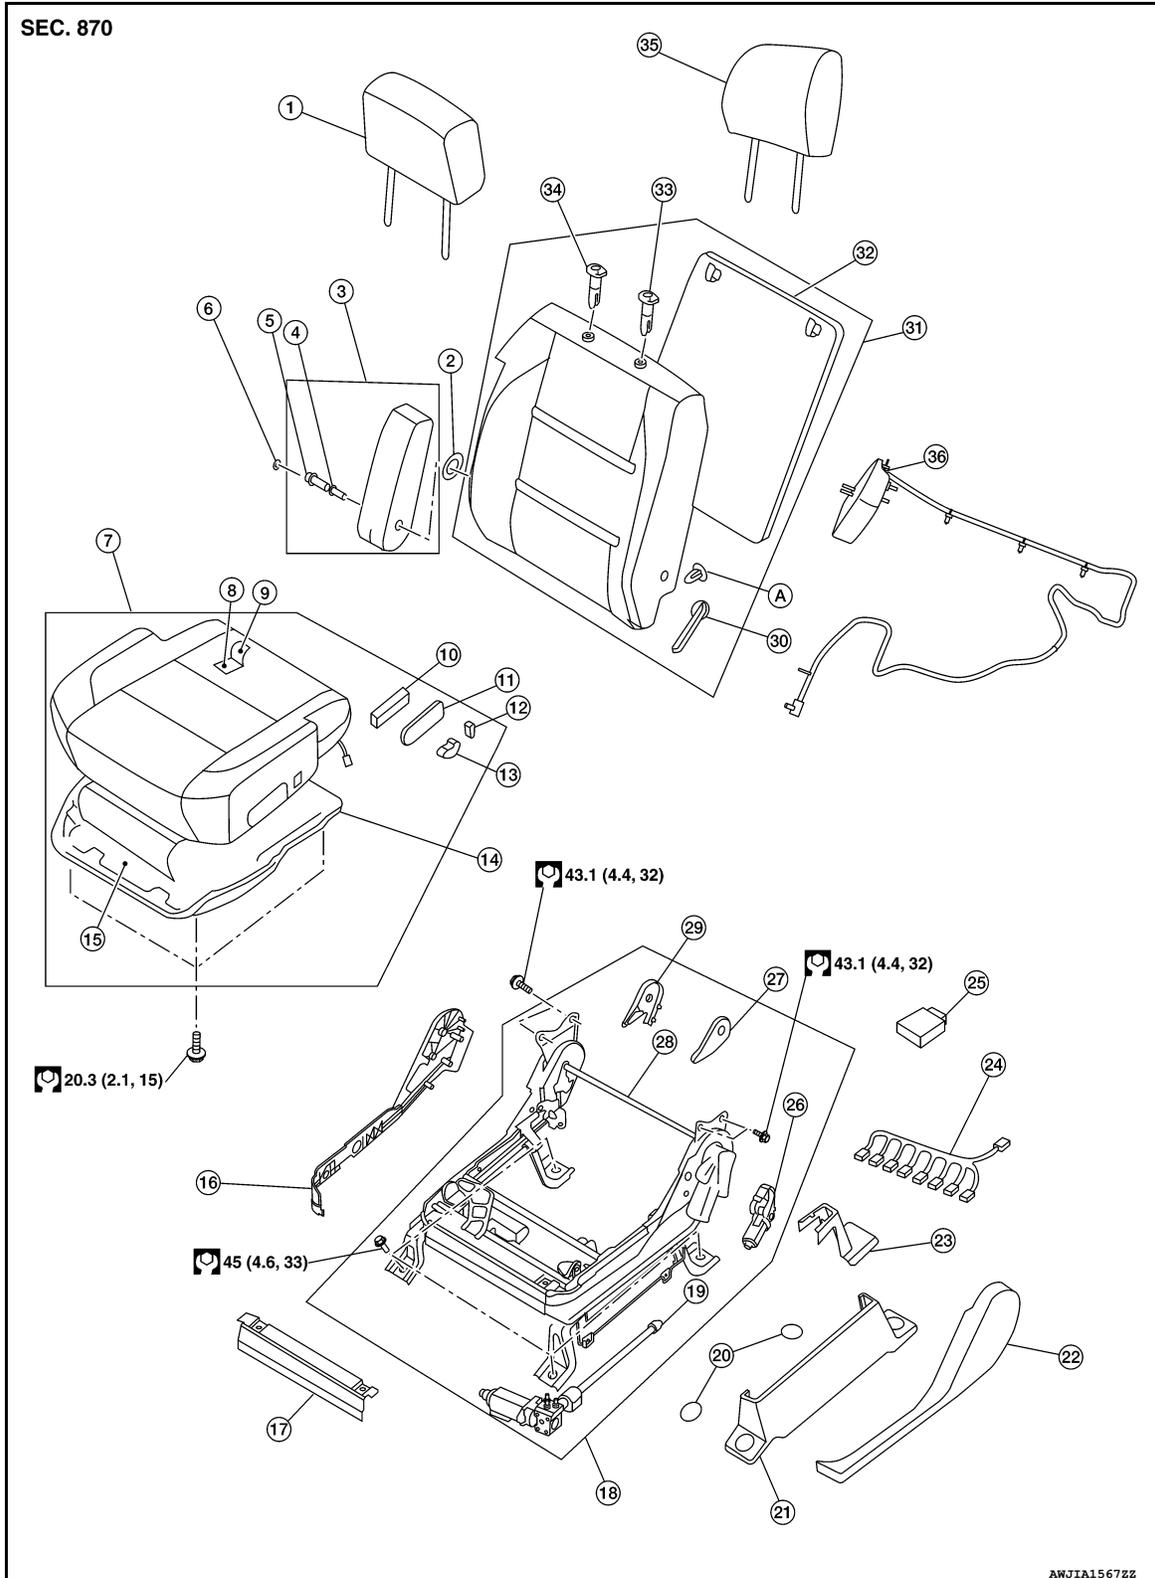

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- | | | | |
|--------------------------------------|----------------------------------|---------------------------------------|---|
| 1. Headrest without display | 2. Armrest washer | 3. Armrest assembly | A |
| 4. Armrest insert | 5. Armrest pivot bolt | 6. Armrest pivot bolt finisher | |
| 7. Seat cushion assembly | 8. Seat cushion pad | 9. Seat cushion trim | |
| 10. Power seat switch | 11. Power seat switch finisher | 12. Seat recline knob | B |
| 13. Seat slide knob | 14. Seat cushion frame | 15. Seat cushion heater (if equipped) | |
| 16. Seat cushion outer finisher (RH) | 17. Seat cushion front finisher | 18. Seat frame assembly | |
| 19. Seat slide motor | 20. Bolt cover | 21. Slide finisher (LH) | C |
| 22. Seat cushion outer finisher (LH) | 23. Slide finisher rear (RH) | 24. Seat harness | |
| 25. Power seat control unit | 26. Recline motor | 27. Recline mechanism cover (LH) | |
| 28. Recline rod | 29. Recline mechanism cover (RH) | 30. Lumbar lever | D |
| 31. Seatback assembly | 32. Seatback board | 33. Headrest holder (locked) | |
| 34. Headrest holder (free) | 35. Headrest with display | 36. Side air bag module | E |
| A. Seatback board clip | | | |

F

G

H

I

SE

K

L

M

N


O

P

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

PASSENGER SEAT - POWER

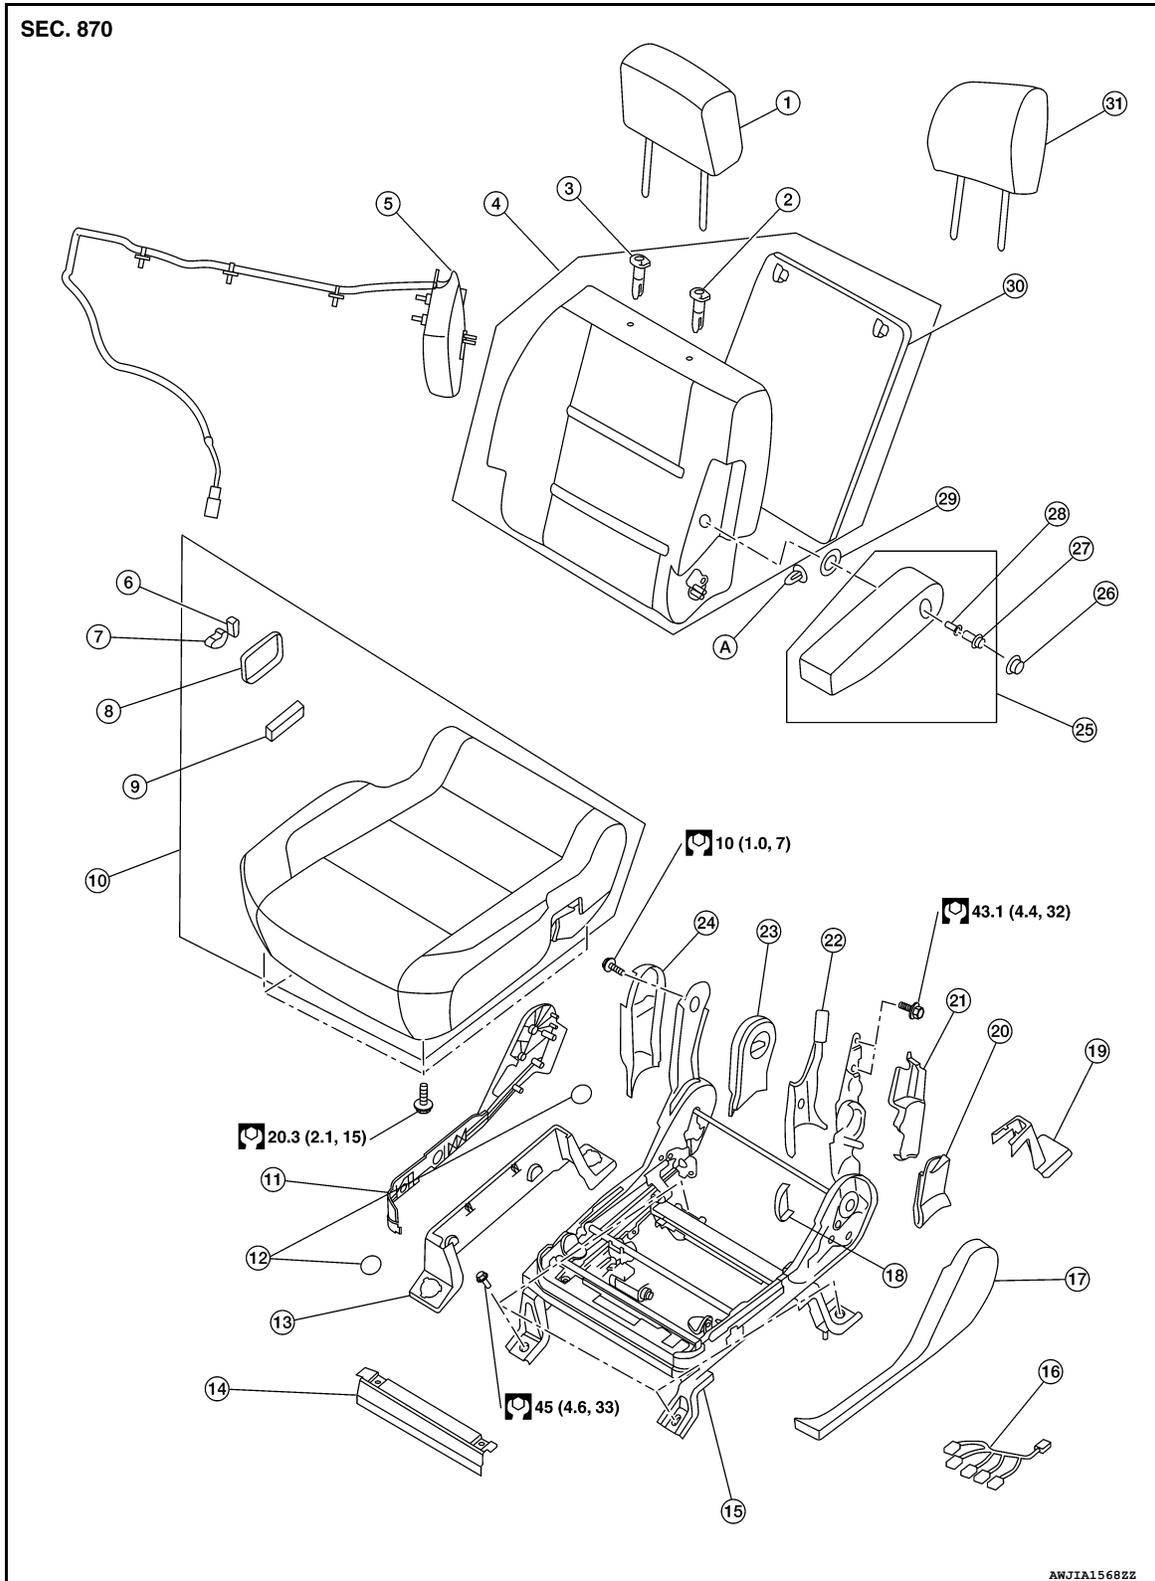

- | | | |
|--------------------------------------|--------------------------------------|---------------------------|
| 1. Headrest without display | 2. Headrest holder (locked) | 3. Headrest holder (free) |
| 4. Seatback assembly | 5. Side air bag module | 6. Seat recline knob |
| 7. Seat slide and lifter switch knob | 8. Power seat switch finisher | 9. Power seat switch |
| 10. Seat cushion assembly | 11. Seat cushion outer finisher (RH) | 12. Bolt cover |
| 13. Slide finisher (RH) | 14. Seat frame assembly | 15. Seat frame assembly |
| 16. Seat harness | 17. Seat cushion outer finisher (LH) | 18. Armrest inner cover |

FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- | | | |
|--|--|--|
| 19. Slide finisher rear (LH) | 20. Recline mechanism outer cover (LH) | 21. Hinge cover outer (LH) |
| 22. Recline mechanism inner cover (RH) | 23. Recline mechanism inner cover (RH) | 24. Recline mechanism outer cover (RH) |
| 25. Armrest assembly | 26. Armrest pivot bolt finisher | 27. Armrest pivot bolt |
| 28. Armrest insert | 29. Armrest washer | 30. Seatback board |
| 31. Headrest with display | A. Seatback board clip | |

Disassembly and Assembly

INFOID:000000011289426

SEATBACK TRIM AND PAD

Disassembly


CAUTION:

- Only complete seatback assemblies can be replaced on vehicles equipped with side air bags.
- When removing or installing the seat trim, handle it carefully to keep dirt out and avoid damage.


1. Remove the seatback assembly. Refer to [SE-62. "Removal and Installation - Front Seat Assembly"](#).
2. Remove the headrest.
3. From inside of the seatback, squeeze the headrest holder tabs at the base of the stay pipe and pull the up to remove.

NOTE:

Before installing the headrest holder, check its orientation (front/rear and right/left).

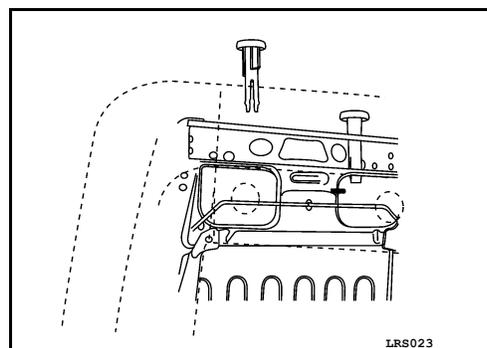

4. Remove the snap ring and the lumbar support lever knob (if equipped).

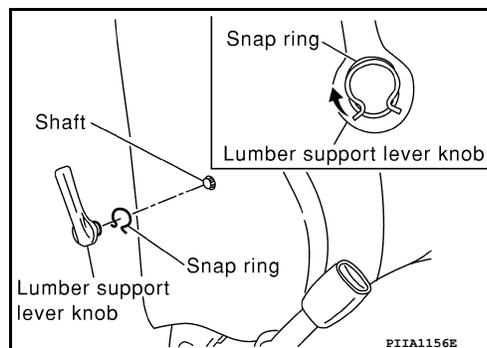

5. Remove the seatback trim and pad assembly.
6. Remove the hog rings to separate the seatback trim from the pad.

Assembly

Assembly is in the reverse order of disassembly.

SEAT CUSHION TRIM AND PAD

Disassembly


CAUTION:

- Front passenger seat is equipped with an Occupant Classification System sensor and control module. Do not disassemble front passenger seat cushion assembly or remove the trim as this will affect the Occupant Classification System calibration.
- Always replace passenger seat cushion as an assembly.
- When removed, the passenger seat cushion must always be placed pan side UP to prevent damage.
- During installation, the wire harness clips must be reinstalled in the holes they were originally in. Do not add additional clips.
- The Occupant Classification System control module can only be replaced as part of the seat cushion assembly.


FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


1. Release the trim at bottom of seat as shown.

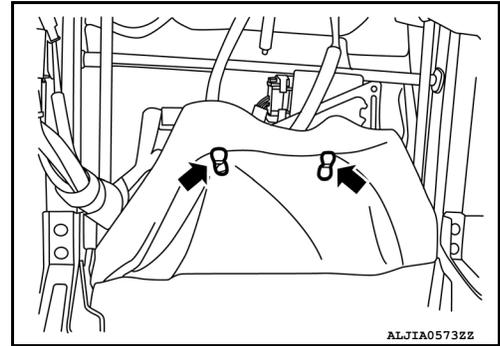

2. Remove the seat recline knob and seat slide and lifter switch knob (1), then the power seat switch finisher (2).

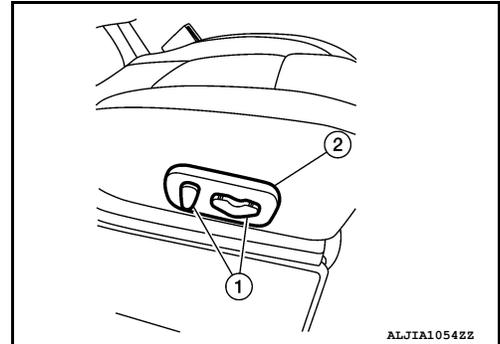

3. Remove the four seat cushion assembly bolts (A) from the seat frame assembly.

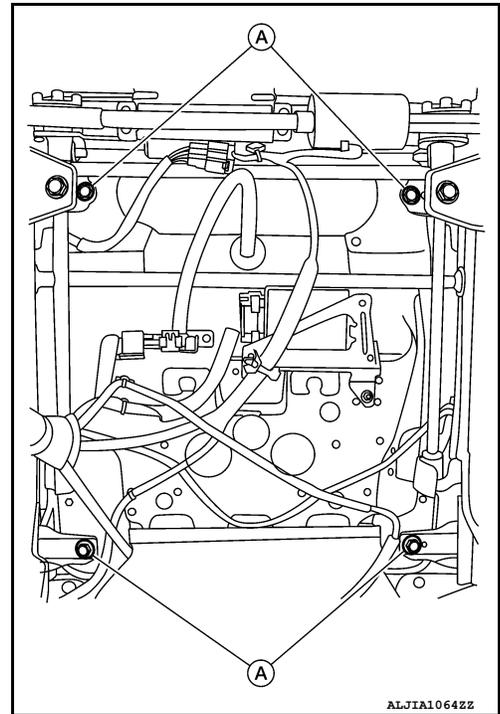

4. Remove the seat cushion trim and seat cushion pad as an assembly from the seat cushion frame.
5. Remove the hog rings to separate the seat cushion trim from the seat cushion pad.

Assembly

Assembly is in the reverse order of disassembly.


PASSENGER SEATBACK BOARD - SOFT SEATBACK

Removal


FRONT SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


1. The seatback board is attached to the seat frame with the following:
 - Two top tabs (A)
 - Four side tabs (B)
 - Two bottom clips (C) (must be replaced)
2. Move seat to forward position.

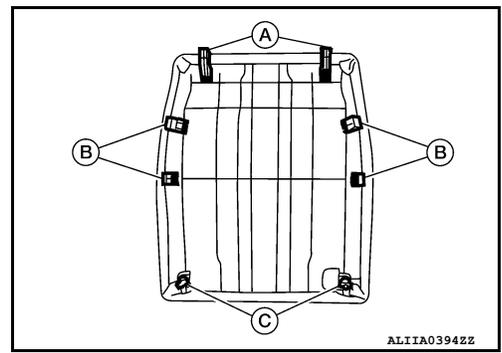

3. Hold the seatback board as shown and pull the top of the seatback board away from the seatback frame.

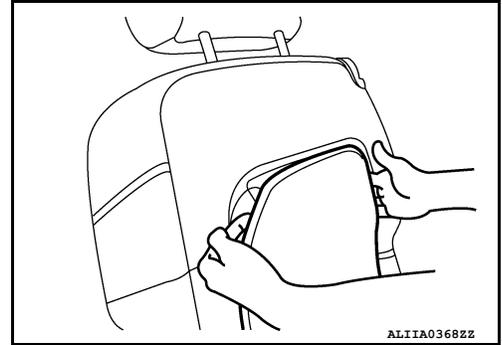

4. Pull the middle part of the seatback board to disengage the side tabs from the seatback frame.
5. Pull the lower part of the seatback board to disengage the bottom clips from the seatback frame.

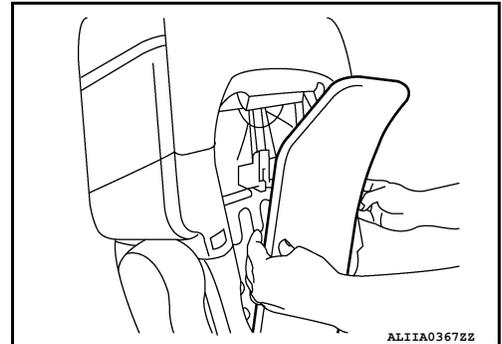

Installation

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

SECOND SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

7. Seatback board	8. Latch release assembly	9. Upper recline mechanism cover (LH)	A
10. Lower recline mechanism outer cover (LH)	11. Armrest pivot bolt	12. Armrest pivot bolt finisher	A
13. Armrest assembly	14. Seat cushion latch assembly	15. Seat cushion support spring	B
16. Seat cushion support	17. Seat cushion frame	18. Seat support trim	B
19. Seat support pad	20. Lower seat finisher (rear)	21. Recline mechanism finisher (LH)	C
22. Seat frame latch assembly	23. Seat frame assembly	24. Recline mechanism finisher (RH)	C
25. Seat cushion pad	26. Lower recline mechanism inner cover (LH)	27. Lower recline mechanism inner cover (RH)	C
28. Recline mechanism assembly	29. Lower recline mechanism outer cover (RH)	30. Recline lever	D
31. Upper recline mechanism cover (RH)	32. Seatback trim	33. Seat cushion trim	D
34. Seat hinge finisher	35. Armrest insert	36. Armrest washer	E

E

F

G

H

I

SE

K

L

M

N


O

P

SECOND SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

SECOND ROW (LH)

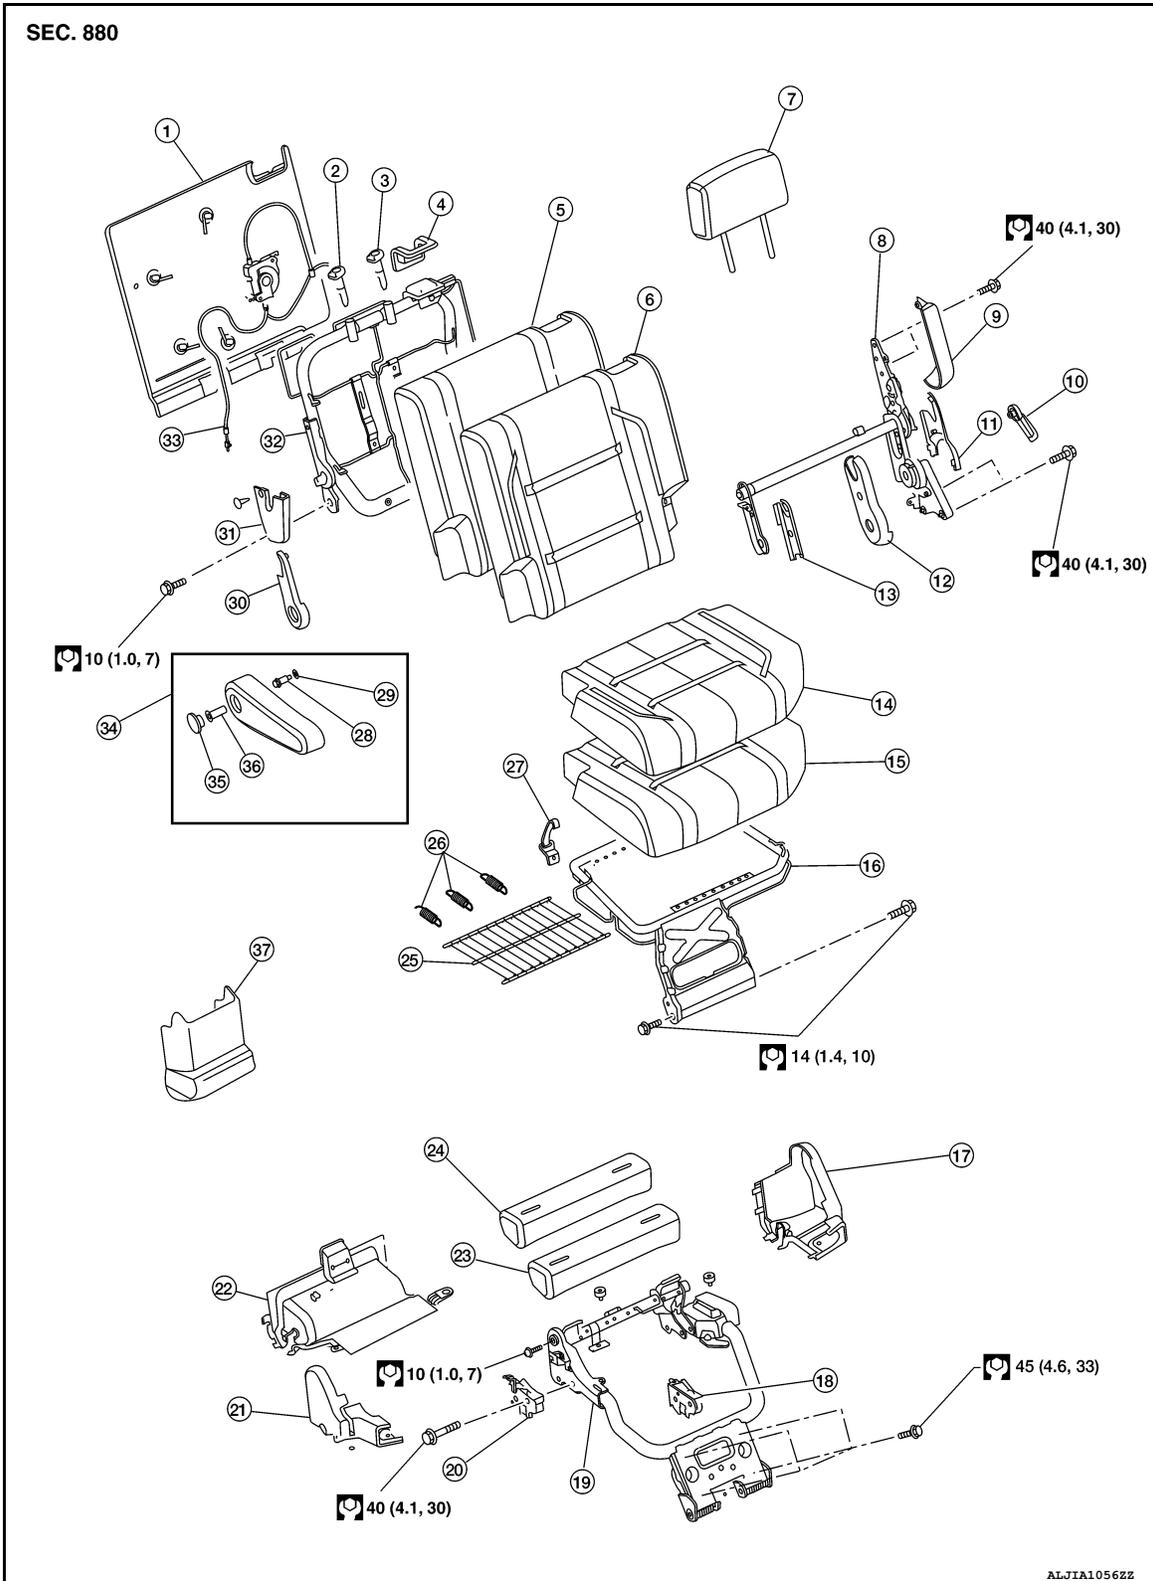

- | | | |
|--|--|--|
| 1. Seatback board | 2. Headrest holder (free) | 3. Headrest holder (locked) |
| 4. Latch lever finisher | 5. Seatback pad | 6. Seatback trim |
| 7. Headrest | 8. Recline mechanism assembly | 9. Upper recline mechanism cover (LH) |
| 10. Recline lever | 11. Lower recline mechanism outer cover (LH) | 12. Lower recline mechanism inner cover (LH) |
| 13. Lower recline mechanism inner cover (RH) | 14. Seat cushion trim | 15. Seat cushion pad |

SECOND SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

16. Seat cushion frame	17. Recline mechanism finisher (LH)	18. Seat frame latch assembly	A
19. Seat frame assembly	20. Seat frame latch assembly	21. Recline mechanism finisher (RH)	
22. Lower seat finisher (rear)	23. Seat support pad	24. Seat support trim	
25. Seat cushion support	26. Seat cushion support spring	27. Seat cushion latch assembly	B
28. Armrest insert	29. Armrest washer	30. Lower recline mechanism outer cover (RH)	
31. Upper recline mechanism cover (RH)	32. Seatback frame	33. Latch release assembly	C
34. Armrest assembly	35. Armrest pivot bolt finisher	36. Armrest pivot bolt	
37. Seat hinge finisher			

D

E

F

G

H

I

SE

K

L

M

N


O

P

SECOND SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

SECOND ROW (CENTER)

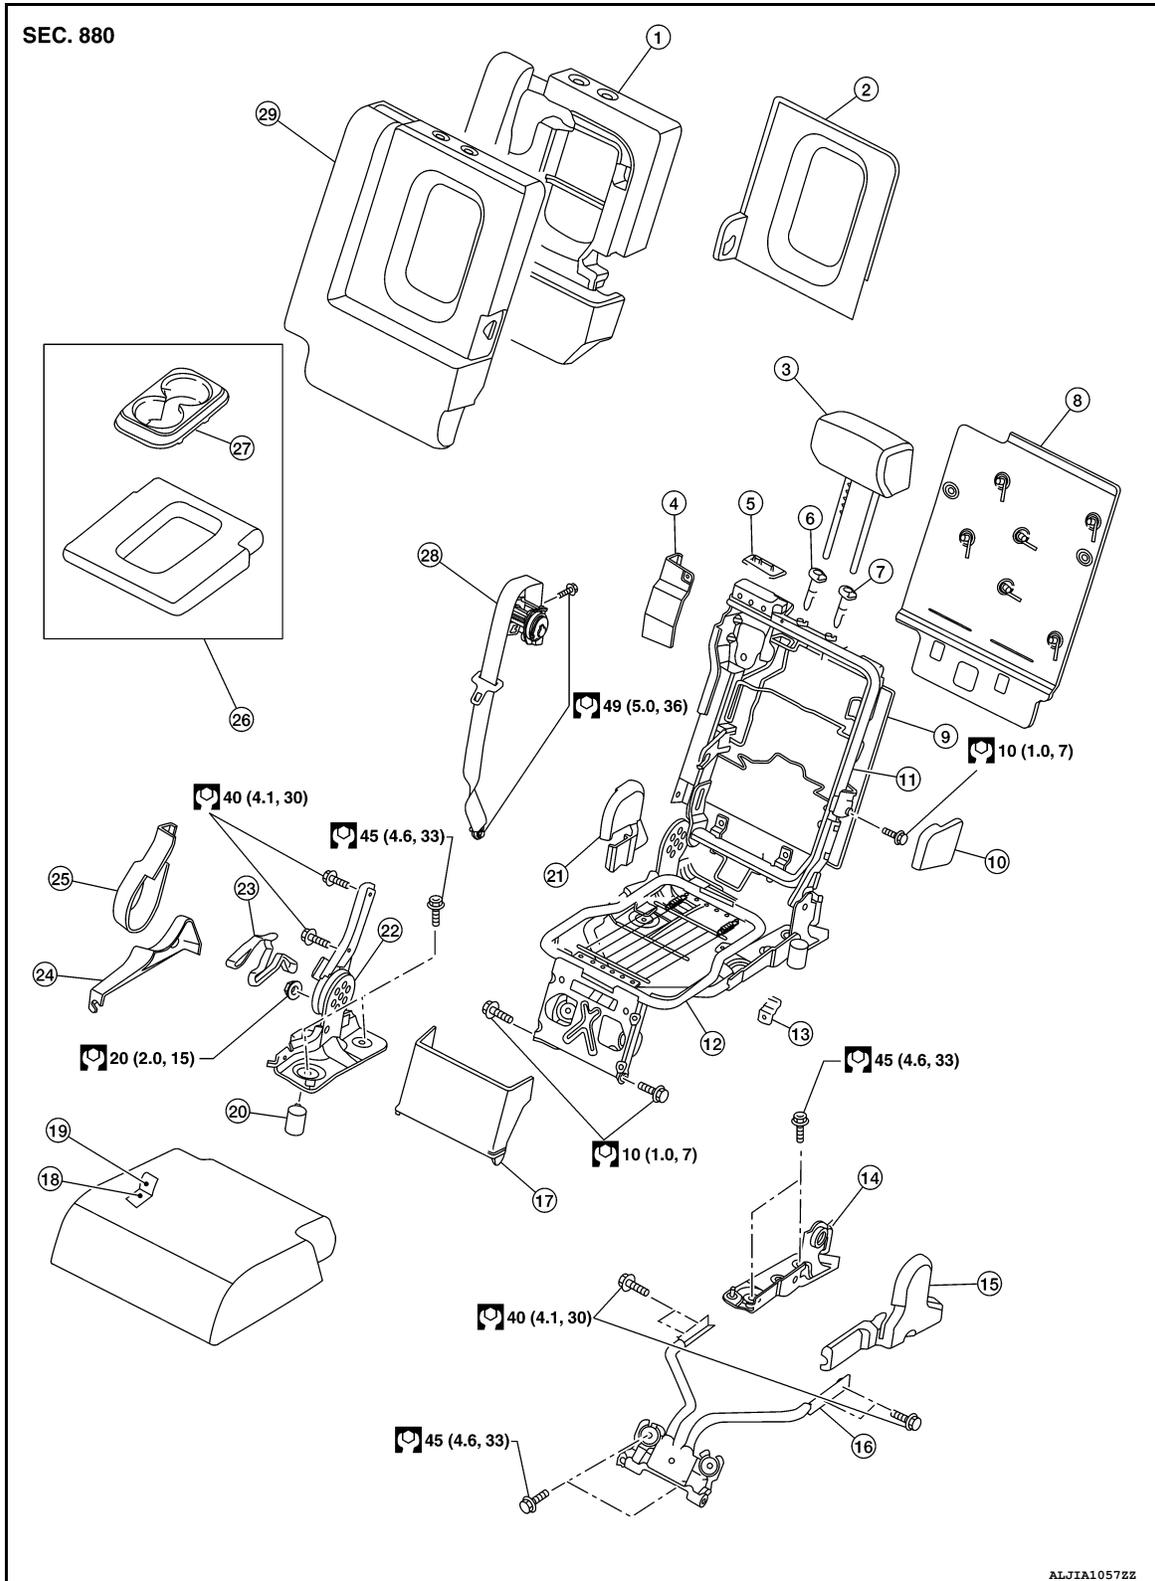

ALJIA1057ZZ

- | | | |
|---------------------------------|---|---------------------------------|
| 1. Seatback pad | 2. Armrest finisher | 3. Headrest |
| 4. Seat belt retractor cover | 5. Seat belt retractor finisher | 6. Headrest holder (free) |
| 7. Headrest holder (locked) | 8. Seatback board | 9. Seatback silencer |
| 10. Armrest bracket finisher | 11. Seatback frame assembly | 12. Seat cushion frame assembly |
| 13. Seat cushion latch assembly | 14. Seatback hinge support bracket (LH) | 15. Seat frame finisher (LH) |
| 16. Seat base bracket | 17. Seat base bracket finisher | 18. Seat cushion pad |

SECOND SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- | | | | |
|----------------------------------|-------------------------|----------------------------------|---|
| 19. Seat cushion trim | 20. Cushion stop bumper | 21. Inner latch cover (RH) | |
| 22. Seatback hinge assembly (RH) | 23. Seat lever | 24. Seatback frame finisher (RH) | A |
| 25. Seatback hinge finisher (RH) | 26. Armrest assembly | 27. Cup holder | |
| 28. Seat belt retractor assembly | 29. Seatback trim | | B |

B

C

D

E

F

G

H

I

SE

K

L

M

N

O

P

THIRD SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

THIRD SEAT


Without Power Folding

INFOID:000000011289428

Exploded View

INFOID:000000011289429

THIRD SEAT (LH)

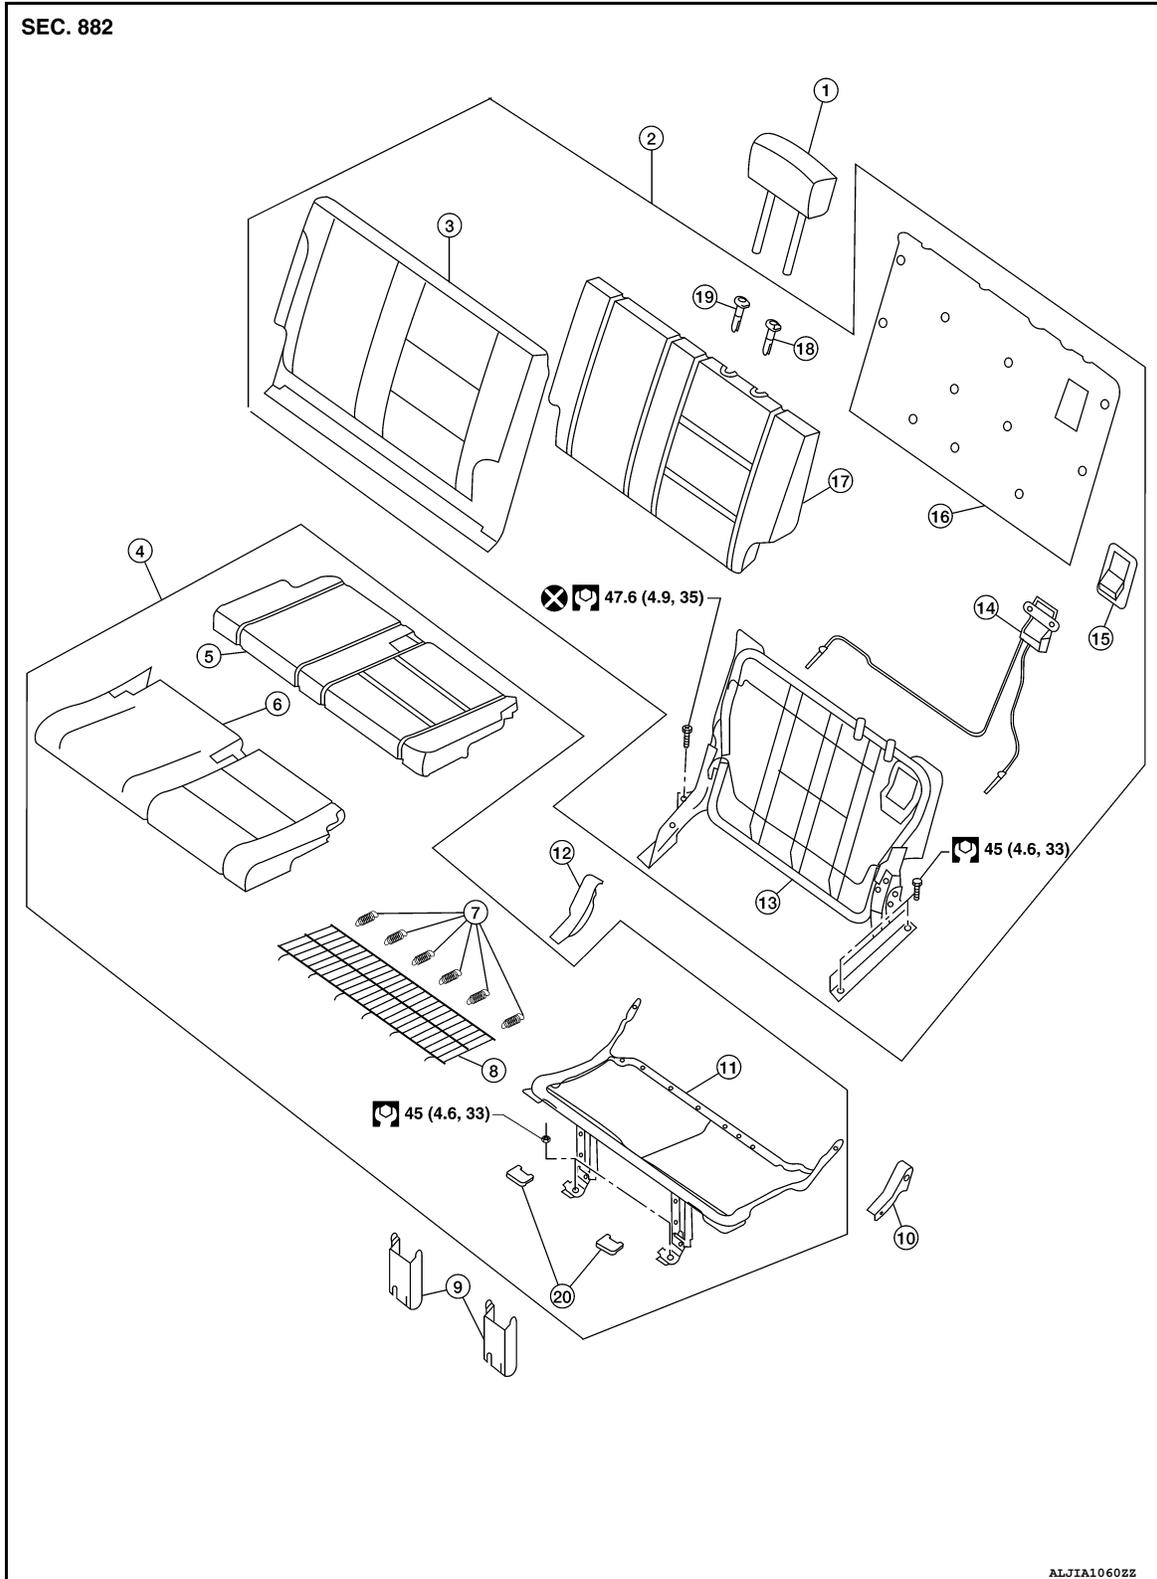

THIRD SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- | | | | |
|--------------------------------|-------------------------------|--------------------------------------|---|
| 1. Headrest | 2. Seatback assembly | 3. Seatback trim | A |
| 4. Seat cushion assembly | 5. Seat cushion pad | 6. Seat cushion trim | |
| 7. Seat cushion support spring | 8. Seat cushion support | 9. Seat cushion frame lower finisher | |
| 10. Hinge finisher (LH) | 11. Seat cushion frame | 12. Hinge finisher (RH) | B |
| 13. Seatback frame assembly | 14. Seatback release assembly | 15. Seatback release finisher | |
| 16. Seatback board | 17. Seatback pad | 18. Headrest holder (locked) | |
| 19. Headrest holder (free) | 20. Seat nut finisher | | C |

D

E

F

G

H

I

SE

K

L

M

N


O

P

THIRD SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

THIRD SEAT (RH)

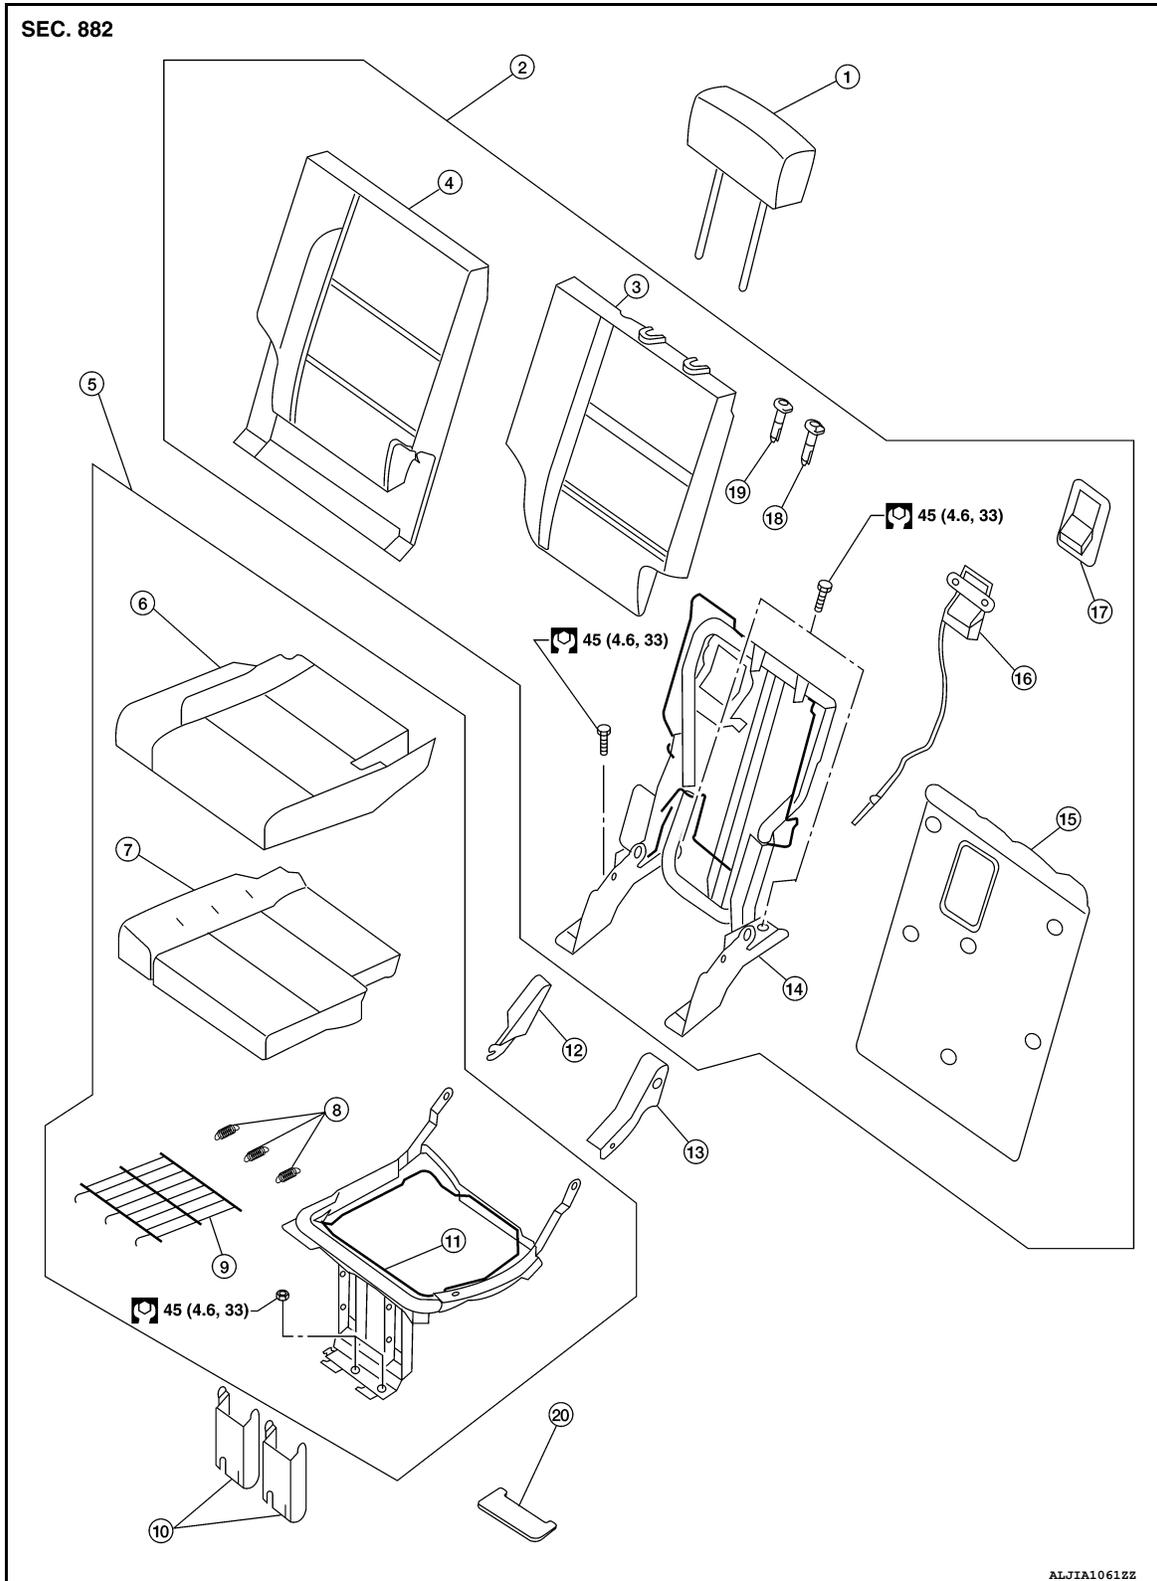

- | | | |
|---------------------------------------|--------------------------------|-------------------------|
| 1. Headrest | 2. Seatback assembly | 3. Seatback pad |
| 4. Seatback trim | 5. Seat cushion assembly | 6. Seat cushion trim |
| 7. Seat cushion pad | 8. Seat cushion support spring | 9. Seat cushion support |
| 10. Seat cushion frame lower finisher | 11. Seat cushion frame | 12. Hinge finisher (RH) |
| 13. Hinge finisher (LH) | 14. Seatback frame assembly | 15. Seatback board |

THIRD SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- | | | |
|-------------------------------|-------------------------------|------------------------------|
| 16. Seatback release assembly | 17. Seatback release finisher | 18. Headrest holder (locked) |
| 19. Headrest holder (free) | 20. Seat nut finisher | |

Third Seat

INFOID:0000000011289430

DISASSEMBLY AND ASSEMBLY

CAUTION:

Discard the seat belt buckle bolt and use a new bolt for installation.

A
B
C
D
E
F
G
H
I
K
L
M
N
O
P

SE

THIRD SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >


With Power Folding

INFOID:000000011289431

Exploded View

INFOID:000000011289432

THIRD SEAT (LH)

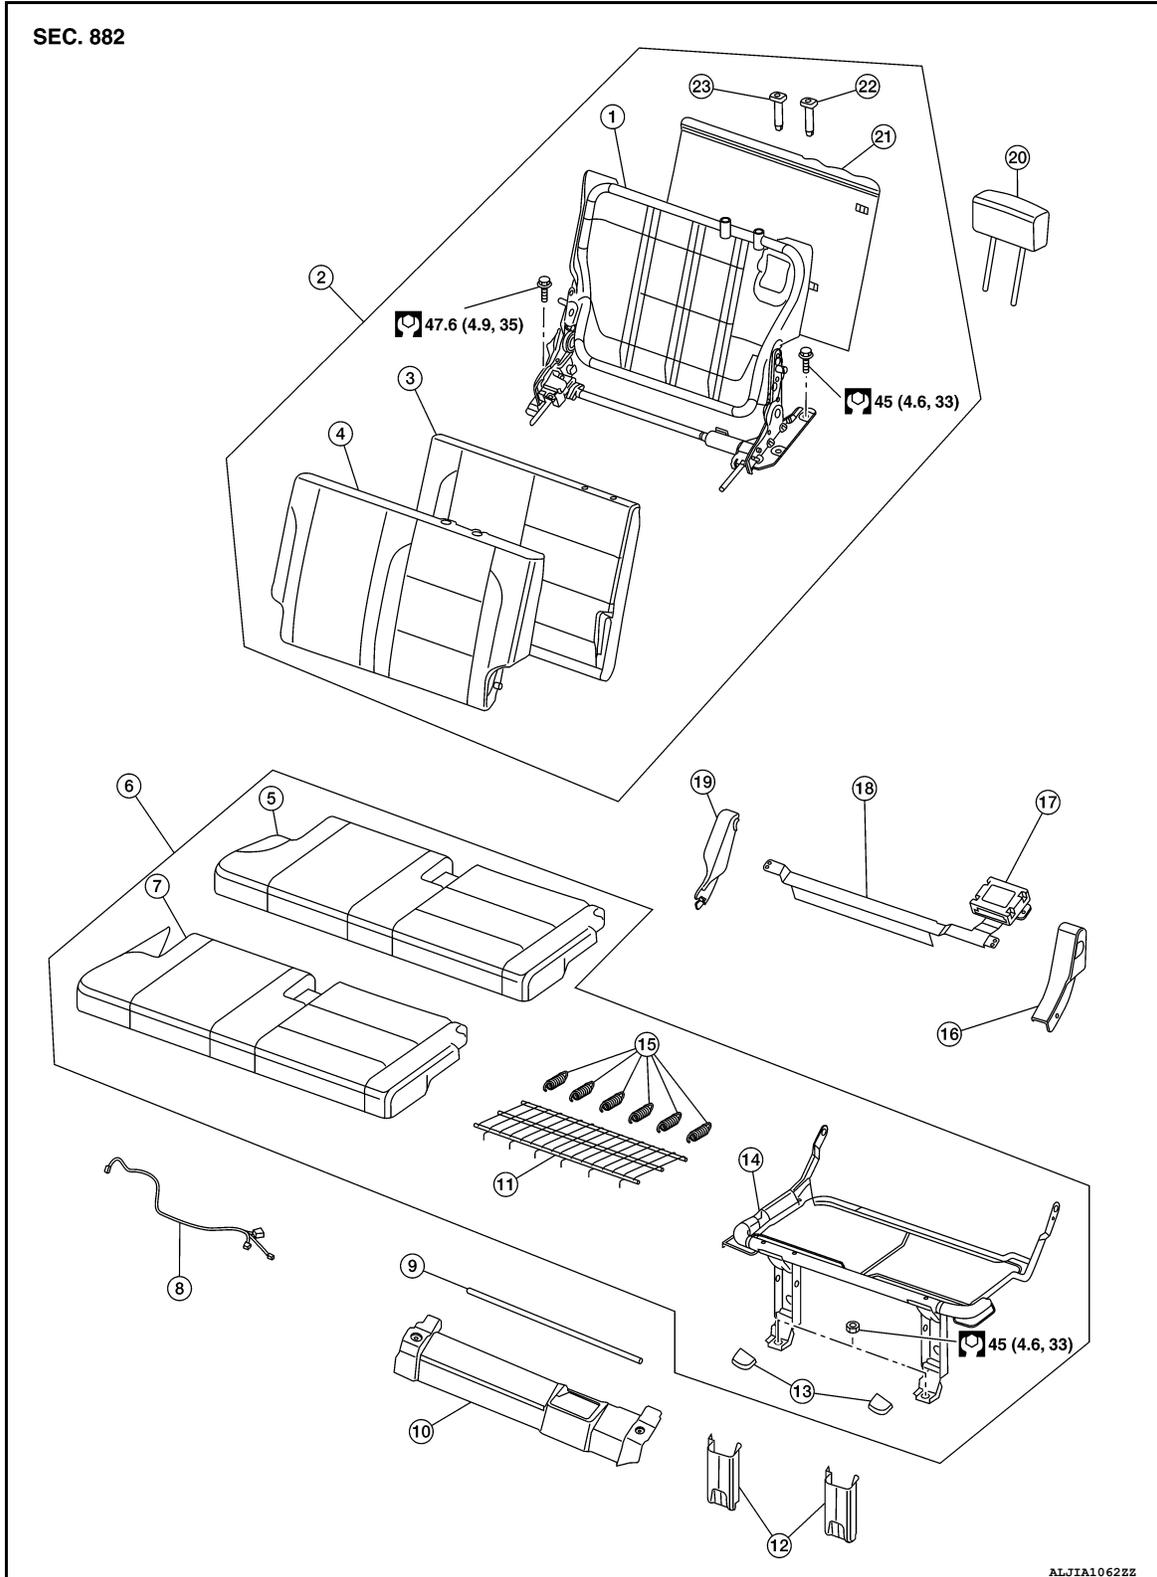


- | | | |
|----------------------------|----------------------|--------------------------|
| 1. Seatback frame assembly | 2. Seatback assembly | 3. Seatback pad |
| 4. Seatback trim | 5. Seat cushion pad | 6. Seat cushion assembly |

THIRD SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- | | | |
|------------------------------|----------------------------|---------------------------------------|
| 7. Seat cushion trim | 8. Seat harness | 9. Power seat cable |
| 10. Seat motor cover | 11. Seat cushion support | 12. Seat cushion frame lower finisher |
| 13. Seat nut finisher | 14. Seat cushion frame | 15. Seat cushion support spring |
| 16. Hinge finisher (LH) | 17. Seat control unit | 18. Power seat cross beam |
| 19. Hinge finisher (RH) | 20. Headrest | 21. Seatback board |
| 22. Headrest holder (locked) | 23. Headrest holder (free) | |

THIRD SEAT (RH)

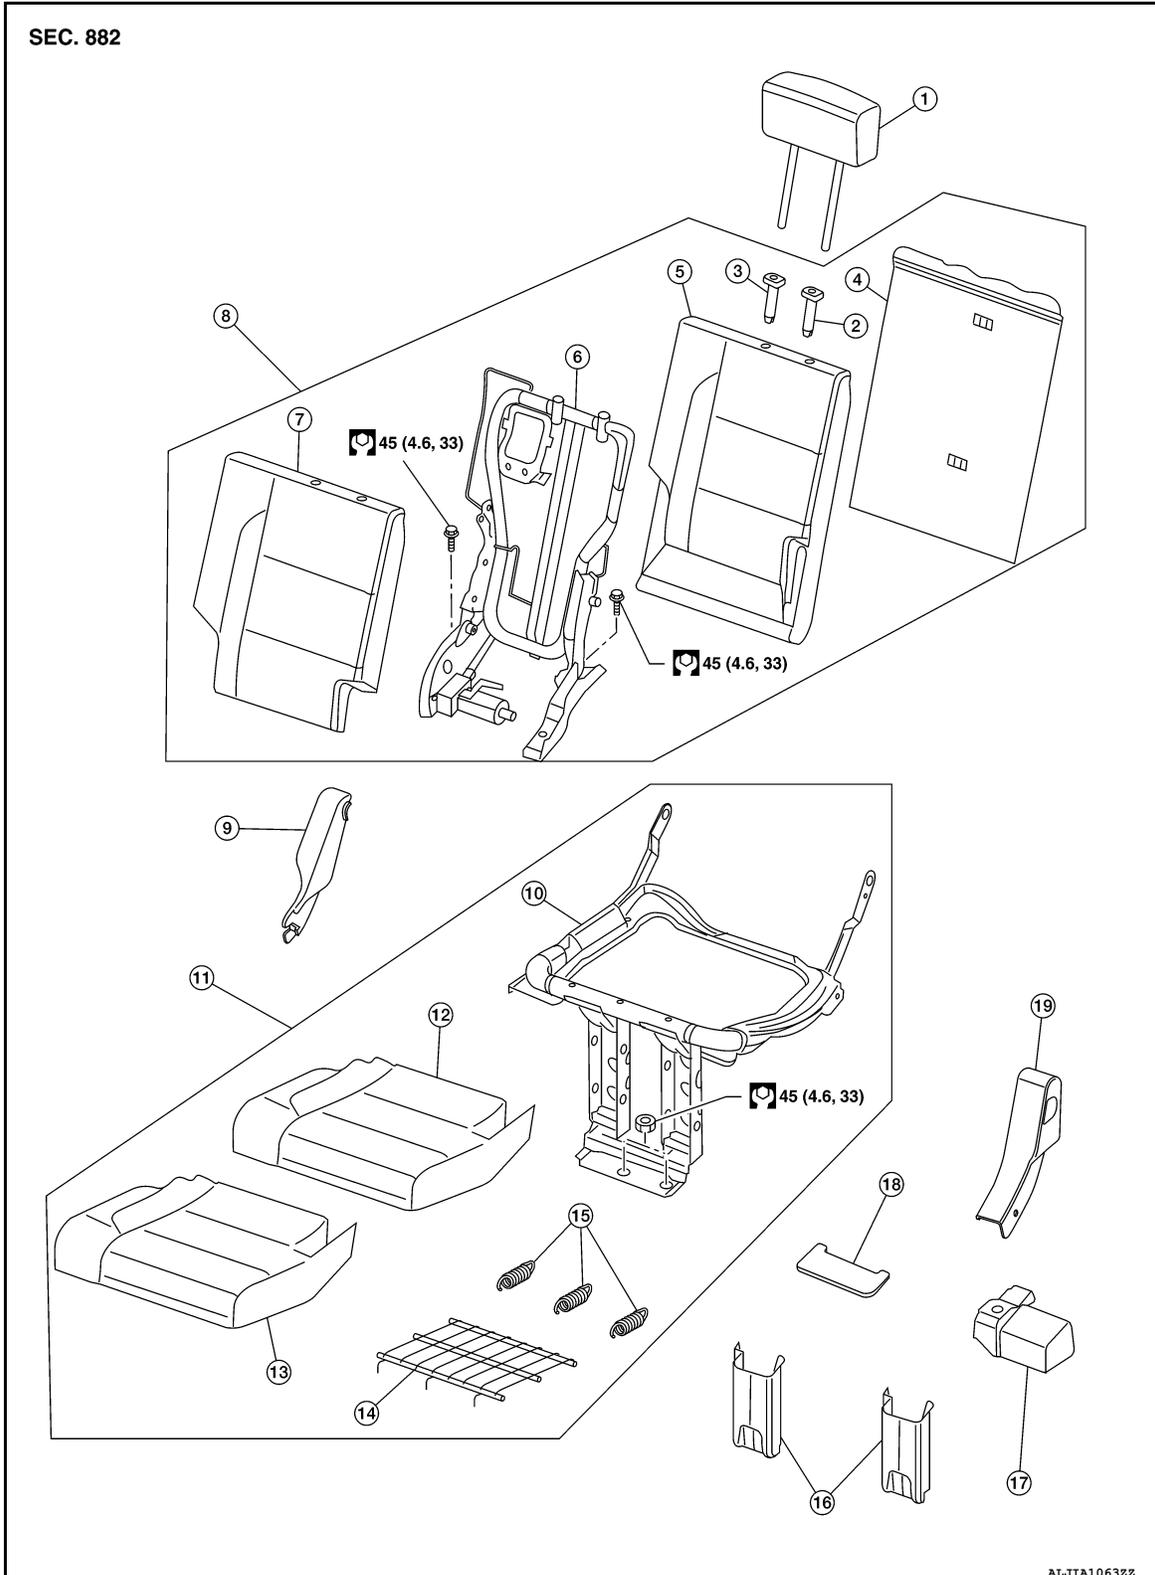

A
B
C
D
E
F
G
H
I
SE
K
L
M
N
O
P

THIRD SEAT

< UNIT DISASSEMBLY AND ASSEMBLY >

- | | | |
|---------------------------------------|-----------------------------|---------------------------------|
| 1. Headrest | 2. Headrest holder (locked) | 3. Headrest holder (free) |
| 4. Seatback board | 5. Seatback pad | 6. Seatback frame assembly |
| 7. Seatback trim | 8. Seatback assembly | 9. Hinge finisher (RH) |
| 10. Seat cushion frame | 11. Seat cushion assembly | 12. Seat cushion pad |
| 13. Seat cushion trim | 14. Seat cushion support | 15. Seat cushion support spring |
| 16. Seat cushion frame lower finisher | 17. Seat motor cover | 18. Seat nut finisher |
| 19. Hinge finisher (LH) | | |

Third Seat

INFOID:000000011289433

DISASSEMBLY AND ASSEMBLY

CAUTION:

Discard the seat belt buckle bolt and use a new bolt for installation.