

# SECTION **BRC**

## BRAKE CONTROL SYSTEM

A  
B  
C  
D  
E

### CONTENTS

<b>VDC/TCS/ABS</b>		<b>BRC</b>
<b>BASIC INSPECTION</b> .....	4	
<b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....	4	
Work Flow .....	4	
Diagnostic Work Sheet .....	7	
<b>ADDITIONAL SERVICE WHEN REPLACING ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)</b> .....	8	
Description .....	8	
Special Repair Requirement .....	8	
<b>ADJUSTMENT OF STEERING ANGLE SEN- SOR NEUTRAL POSITION</b> .....	9	
Description .....	9	
Special Repair Requirement .....	9	
<b>SYSTEM DESCRIPTION</b> .....	11	
<b>VDC</b> .....	11	
System Diagram .....	11	
System Description .....	11	
Component Parts Location .....	12	
Component Description .....	13	
<b>TCS</b> .....	14	
System Diagram .....	14	
System Description .....	14	
Component Parts Location .....	15	
Component Description .....	16	
<b>ABS</b> .....	17	
System Diagram .....	17	
System Description .....	17	
Component Parts Location .....	18	
Component Description .....	19	
<b>EBD</b> .....	20	
System Diagram .....	20	
System Description .....	20	
Component Parts Location .....	21	
Component Description .....	22	
<b>DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]</b> .....	23	
CONSULT-III Function .....	23	
<b>DTC/CIRCUIT DIAGNOSIS</b> .....	28	
<b>C1101, C1102, C1103, C1104 WHEEL SEN- SOR</b> .....	28	
Description .....	28	
DTC Logic .....	28	
Diagnosis Procedure .....	28	
Special Repair Requirement .....	30	
<b>C1105, C1106, C1107, C1108 WHEEL SEN- SOR</b> .....	31	
Description .....	31	
DTC Logic .....	31	
Diagnosis Procedure .....	31	
Special Repair Requirement .....	33	
<b>C1109 POWER AND GROUND SYSTEM</b> .....	34	
Description .....	34	
DTC Logic .....	34	
Diagnosis Procedure .....	34	
Special Repair Requirement .....	35	
<b>C1110, C1153, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)</b> .....	36	
DTC Logic .....	36	
Diagnosis Procedure .....	36	
Special Repair Requirement .....	36	
<b>C1111 ABS MOTOR, MOTOR RELAY SYS- TEM</b> .....	37	
Description .....	37	
DTC Logic .....	37	
Diagnosis Procedure .....	37	
Special Repair Requirement .....	38	

G  
H  
I  
J  
K  
L  
M  
N  
O  
P

<b>C1115 WHEEL SENSOR .....</b>	<b>39</b>	<b>C1155 BRAKE FLUID LEVEL SWITCH .....</b>	<b>60</b>
Description .....	39	Description .....	60
DTC Logic .....	39	DTC Logic .....	60
Diagnosis Procedure .....	39	Diagnosis Procedure .....	60
Special Repair Requirement .....	40	Component Inspection .....	61
<b>C1116 STOP LAMP SWITCH .....</b>	<b>42</b>	Special Repair Requirement .....	61
Description .....	42	<b>C1164, C1165 CV SYSTEM .....</b>	<b>62</b>
DTC Logic .....	42	Description .....	62
Diagnosis Procedure .....	42	DTC Logic .....	62
Component Inspection .....	43	Diagnosis Procedure .....	62
Special Repair Requirement .....	44	Special Repair Requirement .....	63
<b>C1120, C1122, C1124, C1126 IN ABS SOL ....</b>	<b>45</b>	<b>C1166, C1167 SV SYSTEM .....</b>	<b>64</b>
Description .....	45	Description .....	64
DTC Logic .....	45	DTC Logic .....	64
Diagnosis Procedure .....	45	Diagnosis Procedure .....	64
Special Repair Requirement .....	46	Special Repair Requirement .....	65
<b>C1121, C1123, C1125, C1127 OUT ABS SOL..</b>	<b>47</b>	<b>U1000, U1002 CAN COMM CIRCUIT .....</b>	<b>66</b>
Description .....	47	Description .....	66
DTC Logic .....	47	DTC Logic .....	66
Diagnosis Procedure .....	47	Diagnosis Procedure .....	66
Special Repair Requirement .....	48	Special Repair Requirement .....	66
<b>C1130 ENGINE SIGNAL .....</b>	<b>49</b>	<b>POWER SUPPLY AND GROUND CIRCUIT ....</b>	<b>67</b>
Description .....	49	Description .....	67
DTC Logic .....	49	Diagnosis Procedure .....	67
Diagnosis Procedure .....	49	<b>PARKING BRAKE SWITCH .....</b>	<b>69</b>
Special Repair Requirement .....	49	Description .....	69
<b>C1140 ACTUATOR RELAY SYSTEM .....</b>	<b>50</b>	Diagnosis Procedure .....	69
Description .....	50	Component Inspection .....	69
DTC Logic .....	50	<b>VDC OFF SWITCH .....</b>	<b>71</b>
Diagnosis Procedure .....	50	Description .....	71
Special Repair Requirement .....	51	Diagnosis Procedure .....	71
<b>C1142 PRESS SENSOR .....</b>	<b>52</b>	Component Inspection .....	72
Description .....	52	Special Repair Requirement .....	72
DTC Logic .....	52	<b>ABS WARNING LAMP .....</b>	<b>73</b>
Diagnosis Procedure .....	52	Description .....	73
Special Repair Requirement .....	53	Component Function Check .....	73
<b>C1143 STEERING ANGLE SENSOR .....</b>	<b>54</b>	Diagnosis Procedure .....	73
Description .....	54	Special Repair Requirement .....	73
DTC Logic .....	54	<b>BRAKE WARNING LAMP .....</b>	<b>74</b>
Diagnosis Procedure .....	54	Description .....	74
Special Repair Requirement .....	55	Component Function Check .....	74
<b>C1144 INCOMPLETE STEERING ANGLE</b>		Diagnosis Procedure .....	74
<b>SENSOR ADJUSTMENT .....</b>	<b>56</b>	Special Repair Requirement .....	74
Description .....	56	<b>VDC OFF INDICATOR LAMP .....</b>	<b>76</b>
DTC Logic .....	56	Description .....	76
Diagnosis Procedure .....	56	Component Function Check .....	76
Special Repair Requirement .....	56	Diagnosis Procedure .....	76
<b>C1145, C1146 YAW RATE/SIDE G SENSOR...</b>	<b>57</b>	Special Repair Requirement .....	76
Description .....	57	<b>SLIP INDICATOR LAMP .....</b>	<b>77</b>
DTC Logic .....	57	Description .....	77
Diagnosis Procedure .....	57	Component Function Check .....	77
Special Repair Requirement .....	59		

Diagnosis Procedure .....	77	<b>PREPARATION .....</b>	<b>99</b>	A
Special Repair Requirement .....	77	<b>PREPARATION .....</b>	<b>99</b>	B
<b>ECU DIAGNOSIS INFORMATION .....</b>	<b>78</b>	Commercial Service Tools .....	99	
<b>ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) .....</b>	<b>78</b>	<b>REMOVAL AND INSTALLATION .....</b>	<b>100</b>	
Reference Value .....	78	<b>WHEEL SENSOR .....</b>	<b>100</b>	C
Wiring Diagram - BRAKE CONTROL SYSTEM .....	82	<b>FRONT WHEEL SENSOR .....</b>	<b>100</b>	D
Fail-Safe .....	86	FRONT WHEEL SENSOR : Exploded View .....	100	
DTC Inspection Priority Chart .....	87	FRONT WHEEL SENSOR : Removal and Instal- lation .....	100	E
DTC Index .....	88	<b>REAR WHEEL SENSOR .....</b>	<b>101</b>	
<b>SYMPTOM DIAGNOSIS .....</b>	<b>89</b>	REAR WHEEL SENSOR : Exploded View .....	101	
<b>EXCESSIVE ABS FUNCTION OPERATION FREQUENCY .....</b>	<b>89</b>	REAR WHEEL SENSOR : Removal and Installa- tion .....	101	BRC
Diagnosis Procedure .....	89	<b>SENSOR ROTOR .....</b>	<b>102</b>	
<b>UNEXPECTED PEDAL REACTION .....</b>	<b>90</b>	<b>FRONT SENSOR ROTOR .....</b>	<b>102</b>	G
Diagnosis Procedure .....	90	FRONT SENSOR ROTOR : Removal and Instal- lation .....	102	
<b>THE BRAKING DISTANCE IS LONG .....</b>	<b>91</b>	FRONT SENSOR ROTOR : Disassembly and As- sembly .....	102	H
Diagnosis Procedure .....	91	<b>REAR SENSOR ROTOR .....</b>	<b>102</b>	
<b>ABS FUNCTION DOES NOT OPERATE .....</b>	<b>92</b>	REAR SENSOR ROTOR : Removal and Installa- tion .....	102	I
Diagnosis Procedure .....	92	REAR SENSOR ROTOR : Disassembly and As- sembly .....	102	
<b>PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS .....</b>	<b>93</b>	<b>ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) .....</b>	<b>103</b>	J
Diagnosis Procedure .....	93	Exploded View .....	103	
<b>VEHICLE JERKS DURING VDC/TCS/ABS CONTROL .....</b>	<b>94</b>	Removal and Installation .....	103	K
Diagnosis Procedure .....	94	Adjustment .....	104	
<b>NORMAL OPERATING CONDITION .....</b>	<b>95</b>	<b>YAW RATE/SIDE G SENSOR .....</b>	<b>105</b>	L
Description .....	95	Exploded View .....	105	
<b>PRECAUTION .....</b>	<b>96</b>	Removal and Installation .....	105	M
<b>PRECAUTIONS .....</b>	<b>96</b>	<b>STEERING ANGLE SENSOR .....</b>	<b>106</b>	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER" .....	96	Exploded View .....	106	N
Precaution Necessary for Steering Wheel Rota- tion after Battery Disconnect .....	96	Removal and Installation .....	106	
Precaution for Procedure without Cowl Top Cover... Precaution for Brake System .....	97	Adjustment .....	106	O
Precaution for Brake Control .....	97	<b>VDC OFF SWITCH .....</b>	<b>107</b>	
Precautions for Harness Repair .....	98	Removal and Installation .....	107	P

## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

#### Work Flow

INFOID:000000005492735

#### PRECAUTIONS FOR DIAGNOSIS


If steering angle sensor, steering system parts, suspension system parts, ABS actuator and electric unit (control unit) or tires have been replaced, or if wheel alignment has been adjusted, be sure to adjust neutral position of steering angle sensor before driving. Refer to [BRC-9, "Description"](#).

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[VDC/TCS/ABS]

## OVERALL SEQUENCE

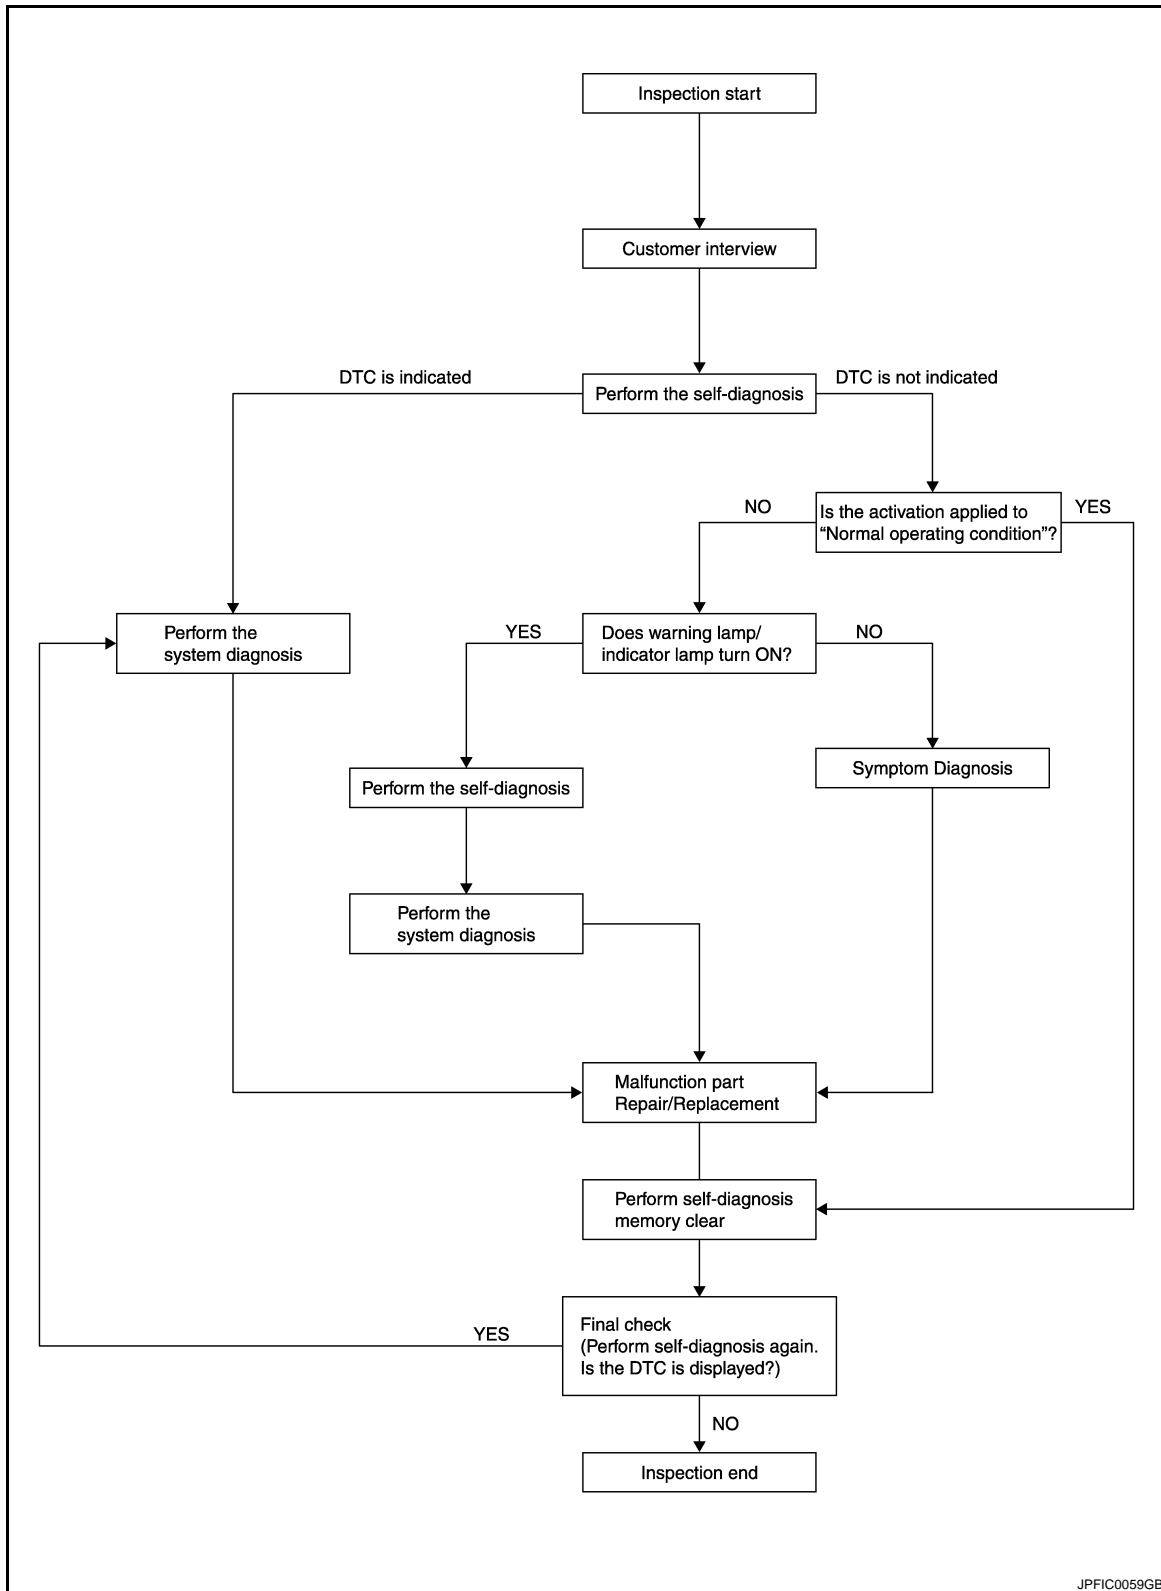

### DETAILED FLOW

#### 1. COLLECT THE INFORMATION FROM THE CUSTOMER

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred) using the diagnosis work sheet. Refer to [BRC-7, "Diagnostic Work Sheet"](#).

>> GO TO 2.

# DIAGNOSIS AND REPAIR WORKFLOW

[VDC/TCS/ABS]

< BASIC INSPECTION >

---

## 2. PERFORM THE SELF-DIAGNOSIS

---

Perform self-diagnosis for "ABS" with CONSULT-III.

Is there any DTC displayed?

YES >> GO TO 3.

NO >> GO TO 4.

---

## 3. PERFORM THE SYSTEM DIAGNOSIS

---

Perform the diagnosis applicable to the displayed DTC for "ABS" with CONSULT-III. Refer to [BRC-88, "DTC Index"](#).

>> GO TO 7.

---

## 4. CHECK THE SYMPTOM THAT IS NOT CONSIDERED A SYSTEM MALFUNCTION

---

Check that the symptom is a normal operation that is not considered a system malfunction. Refer to [BRC-95, "Description"](#).

Is the symptom a normal operation?

YES >> INSPECTION END

NO >> GO TO 5.

---

## 5. CHECK THE WARNING LAMP AND INDICATOR LAMP FOR ILLUMINATION

---

Check that the warning lamp and indicator lamp illuminate.

- ABS warning lamp: refer to [BRC-73, "Description"](#).
- Brake warning lamp: refer to [BRC-74, "Description"](#).
- VDC OFF indicator lamp: refer to [BRC-76, "Description"](#).
- SLIP indicator lamp: refer to [BRC-77, "Description"](#).

Is ON/OFF timing normal?

YES >> GO TO 6.

NO >> GO TO 2.

---

## 6. PERFORM THE DIAGNOSIS BY SYMPTOM

---

Perform the diagnosis applicable to the symptom for "ABS" with CONSULT-III.

>> GO TO 7.

---

## 7. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

---

Repair or replace the specified malfunctioning parts.

>> GO TO 8.

---

## 8. MEMORY CLEAR

---

Perform self-diagnosis memory clear for "ABS" with CONSULT-III.

>> GO TO 9.

---

## 9. FINAL CHECK

---

Perform the self-diagnosis again, and check that the malfunction is repaired completely.

Is no other DTC present and the repair completed?

YES >> INSPECTION END

NO >> GO TO 3.

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[VDC/TCS/ABS]

## Diagnostic Work Sheet

INFOID:000000005492736

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

Customer name MR/MS	Model & Year	VIN	
Engine #	Trans.	Mileage	
Incident Date	Manuf. Date	In Service Date	
Symptoms	<input type="checkbox"/> Noise and vibration (from engine compartment) <input type="checkbox"/> Noise and vibration (from axle)	<input type="checkbox"/> Warning / Indicator activate	<input type="checkbox"/> Firm pedal operation Large stroke pedal operation
	<input type="checkbox"/> TCS does not work (Rear wheels slip when accelerating)	<input type="checkbox"/> ABS does not work (Wheels lock when braking)	<input type="checkbox"/> Lack of sense of acceleration
Engine conditions	<input type="checkbox"/> When starting <input type="checkbox"/> After starting		
Road conditions	<input type="checkbox"/> Low friction road ( <input type="checkbox"/> Snow <input type="checkbox"/> Gravel <input type="checkbox"/> Other ) <input type="checkbox"/> Bumps / potholes		
Driving conditions	<input type="checkbox"/> Full-acceleration <input type="checkbox"/> High speed cornering <input type="checkbox"/> Vehicle speed: Greater than 10 km/h (6 MPH) <input type="checkbox"/> Vehicle speed: 10 km/h (6 MPH) or less <input type="checkbox"/> Vehicle is stopped		
Applying brake conditions	<input type="checkbox"/> Suddenly <input type="checkbox"/> Gradually		
Other conditions	<input type="checkbox"/> Operation of electrical equipment <input type="checkbox"/> Shift change <input type="checkbox"/> Other descriptions		

BRC

SFIA3265E

# ADDITIONAL SERVICE WHEN REPLACING ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< BASIC INSPECTION >

[VDC/TCS/ABS]

---

## ADDITIONAL SERVICE WHEN REPLACING ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

### Description

INFOID:000000005492737

After replacing the ABS actuator and electric unit (control unit), perform the neutral position adjustment for the steering angle sensor.

### Special Repair Requirement

INFOID:000000005492738

#### **1**.PERFORM THE NEUTRAL POSITION ADJUSTMENT FOR THE STEERING ANGLE SENSOR

---

Perform the neutral position adjustment for the steering angle sensor.

>> Refer to [BRC-9. "Special Repair Requirement"](#).



# ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

< BASIC INSPECTION >

[VDC/TCS/ABS]

## ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

### Description

INFOID:000000005492739

When doing work that applies to the list below, make sure to adjust neutral position of steering angle sensor before running vehicle.

×: Required –: Not required

Situation	Adjustment of steering angle sensor neutral position
Removing/Installing ABS actuator and electric unit (control unit)	—
Replacing ABS actuator and electric unit (control unit)	×
Removing/Installing steering angle sensor	×
Replacing steering angle sensor	×
Removing/Installing steering components	×
Replacing steering components	×
Removing/Installing suspension components	×
Replacing suspension components	×
Removing/Installing tire	—
Change tires to new ones	—
Tire rotation	—
Adjusting wheel alignment	×

### Special Repair Requirement

INFOID:000000005492740

## ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

### CAUTION:

To adjust neutral position of steering angle sensor, make sure to use CONSULT-III.  
(Adjustment cannot be done without CONSULT-III.)

### 1. ALIGN THE VEHICLE STATUS

Stop vehicle with front wheels in straight-ahead position.

>> GO TO 2.

### 2. PERFORM THE NEUTRAL POSITION ADJUSTMENT FOR THE STEERING ANGLE SENSOR

1. Select "ABS", "WORK SUPPORT" and "ST ANGLE SENSOR ADJUSTMENT" in order with CONSULT-III.
2. Select "START".

### CAUTION:

Never touch steering wheel while adjusting steering angle sensor.

3. After approximately 10 seconds, select "END".

### NOTE:

After approximately 60 seconds, it ends automatically.

4. Turn the ignition switch OFF, then turn it ON again.

### CAUTION:

Be sure to perform above operation.

>> GO TO 3.

### 3. CHECK DATA MONITOR

1. Run the vehicle with front wheels in straight-ahead position, then stop.
2. Select "ABS", "DATA MONITOR" and "STR ANGLE SIG" in order with CONSULT-III, and check steering angle sensor signal.

**STR ANGLE SIG : 0±2.5°**

Is the steering angle within the specified range?

## ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

< BASIC INSPECTION >

[VDC/TCS/ABS]

YES >> GO TO 4.

NO >> Perform the neutral position adjustment for the steering angle sensor again, GO TO 1.

### 4. ERASE THE SELF-DIAGNOSIS MEMORY

Erase the self-diagnosis memories for "ABS" with CONSULT-III. Refer to [BRC-23. "CONSULT-III Function"](#).

Are the memories erased?

YES >> INSPECTION END


NO >> Check the items indicated by the self-diagnosis.

# SYSTEM DESCRIPTION

## VDC

### System Diagram


INFOID:000000005492741

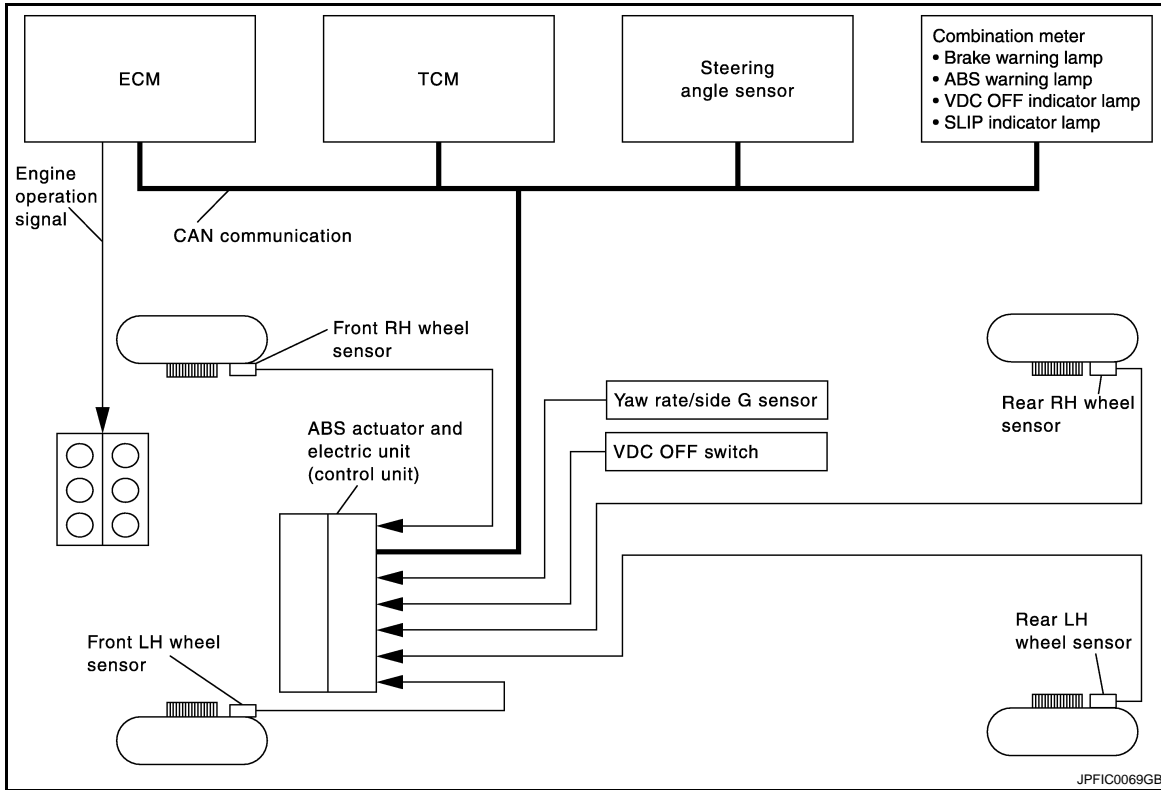

### System Description

INFOID:000000005492742

- Vehicle Dynamics Control system detects driver's steering operation amount and brake pedal travel from steering angle sensor and pressure sensor. Using information from yaw rate/side G sensor and wheel sensor, VDC judges driving condition (conditions of under steer and over steer) to improve vehicle driving stability by controlling brake application to 4 wheels and engine output.
- During VDC operation, it informs driver of system operation by flashing SLIP indicator lamp.
- Electrical system diagnosis by CONSULT-III is available.

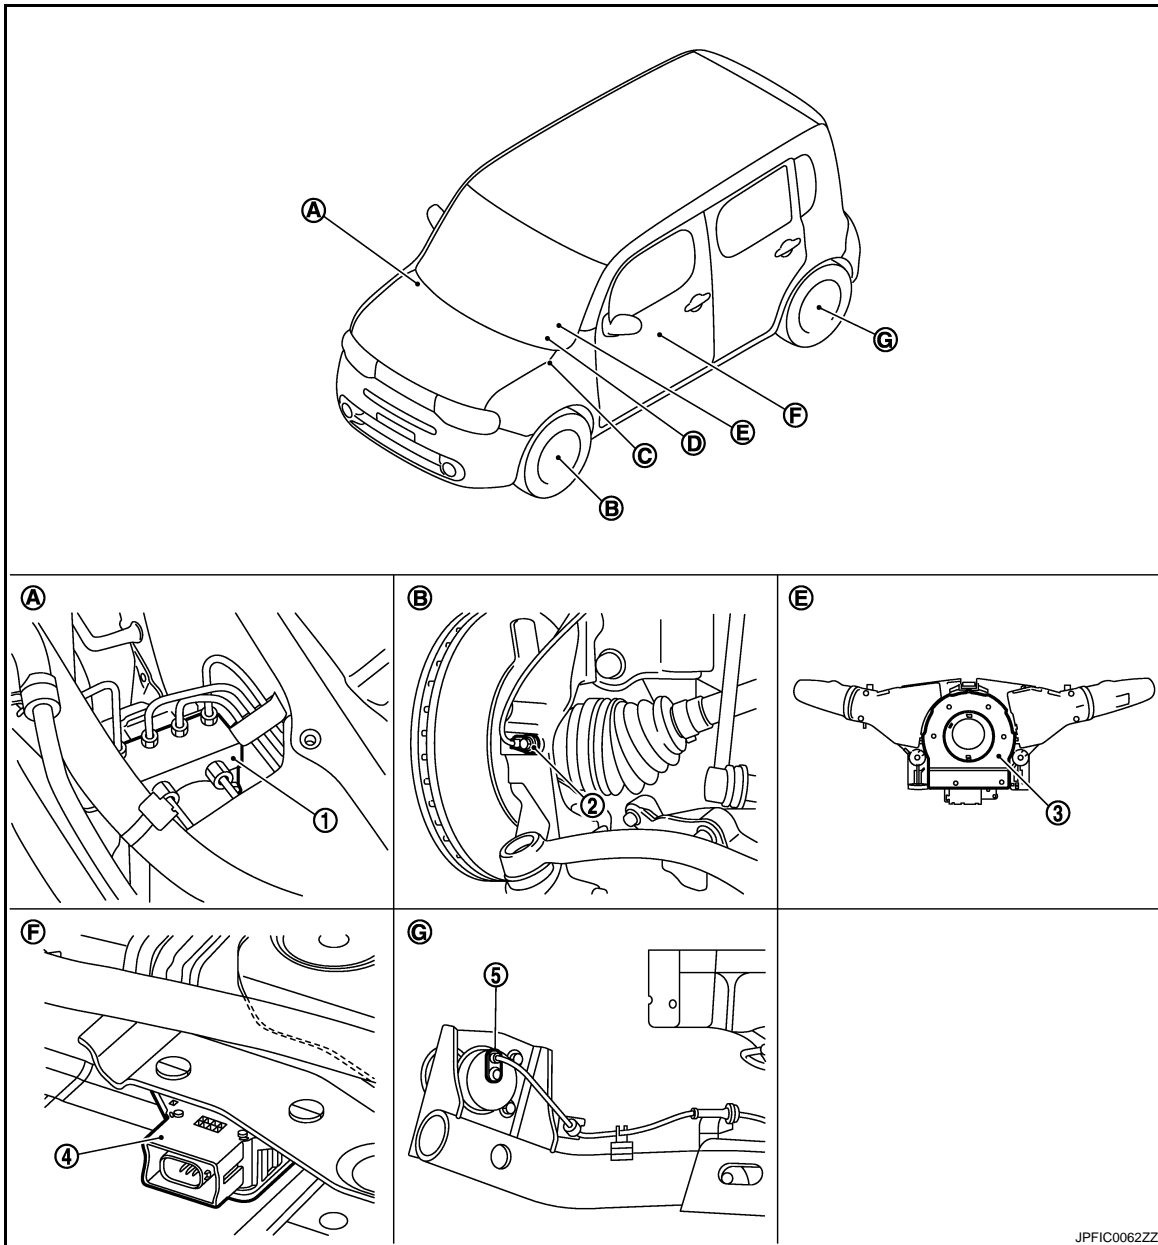

JPFIC0062ZZ

- |  |                                  |   |
|--|----------------------------------|---|
| 1. ABS actuator and electric unit (control unit)   | 2. Front wheel sensor            | 3. Steering angle sensor                                  |
| 4. Yaw rate/side G sensor  | 5. Rear wheel sensor             |   |
| A. Engine room right side  | B. Steering knuckle              | C. VDC OFF switch: <a href="#">IP-12, "Exploded View"</a> |
| D. ABS warning lamp, brake warning lamp, VDC OFF indicator lamp, SLIP indicator lamp: <a href="#">MWI-6, "METER SYSTEM : System Description"</a> | E. Back of spiral cable assembly | F. Under front (left side) seat                           |
| G. Rear axle   |                                  |   |

## Component Description

INFOID:000000005492744

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	<a href="#">BRC-37, "Description"</a>
	Motor	
	Actuator relay (main relay)	<a href="#">BRC-50, "Description"</a>
	Solenoid valve	<a href="#">BRC-45, "Description"</a>
	Pressure sensor	<a href="#">BRC-52, "Description"</a>
	VDC switch-over valve (CV1, CV2)	<a href="#">BRC-62, "Description"</a>
	VDC switch-over valve (SV1, SV2)	<a href="#">BRC-64, "Description"</a>
Wheel sensor	<a href="#">BRC-28, "Description"</a>	
Yaw rate/side G sensor	<a href="#">BRC-57, "Description"</a>	
Steering angle sensor	<a href="#">BRC-54, "Description"</a>	
VDC OFF switch	<a href="#">BRC-71, "Description"</a>	
ABS warning lamp	<a href="#">BRC-73, "Description"</a>	
Brake warning lamp	<a href="#">BRC-74, "Description"</a>	
VDC OFF indicator lamp	<a href="#">BRC-76, "Description"</a>	
SLIP indicator lamp	<a href="#">BRC-77, "Description"</a>	

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N


O

P

## TCS

## System Diagram


INFOID:000000005492745

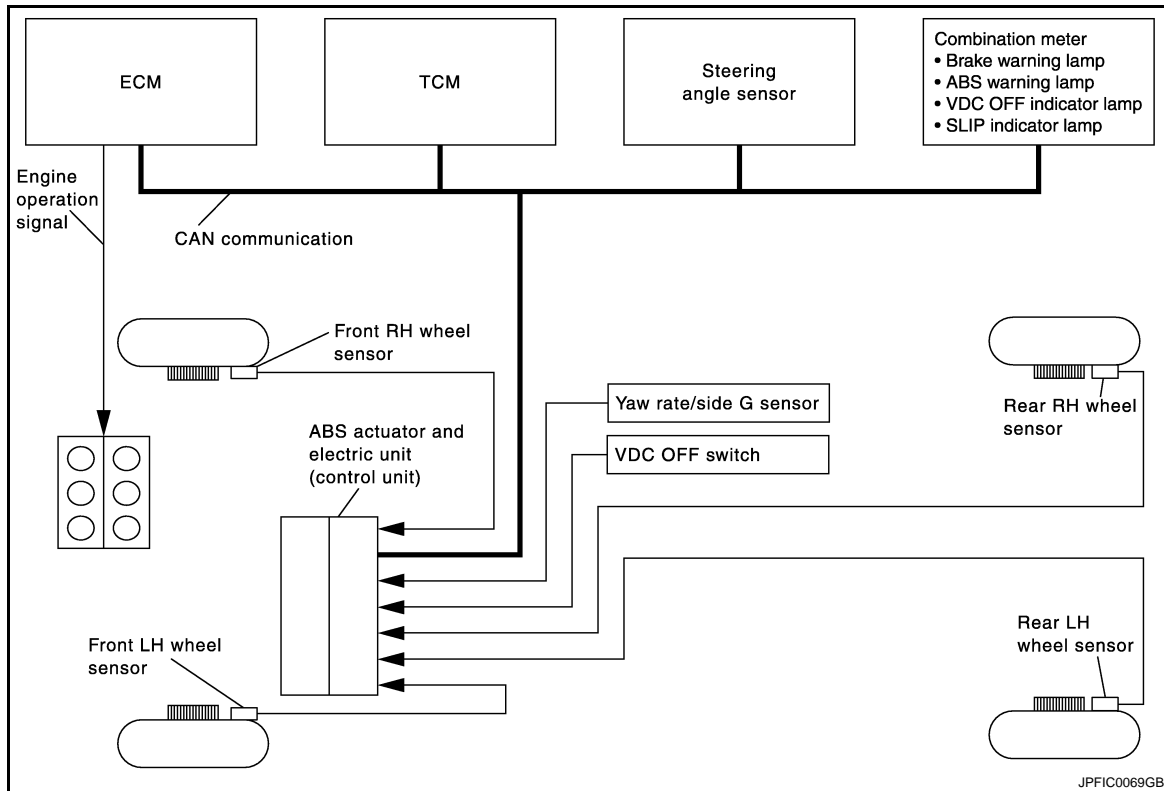

## System Description

INFOID:000000005492746

- Traction Control System is a function that electronically controls engine torque, brake fluid pressure and A/T gear position to ensure the optimum slippage ratio at drive wheels by computing wheel speed signals from 4 wheel sensors. When ABS actuator and electric unit (control unit) detects a spin at drive wheels (rear wheels), it compares wheel speed signals from all 4 wheels. At this time, LH and RH rear brake fluid pressure are controlled, while fuel being cut to engine and throttle valve being closed to reduce engine torque by the control unit. Further more, throttle position is continuously controlled to ensure the optimum engine torque at all times.
- During TCS operation, TCS informs driver of system operation by flashing SLIP indicator lamp.
- Electrical system diagnosis by CONSULT-III is available.

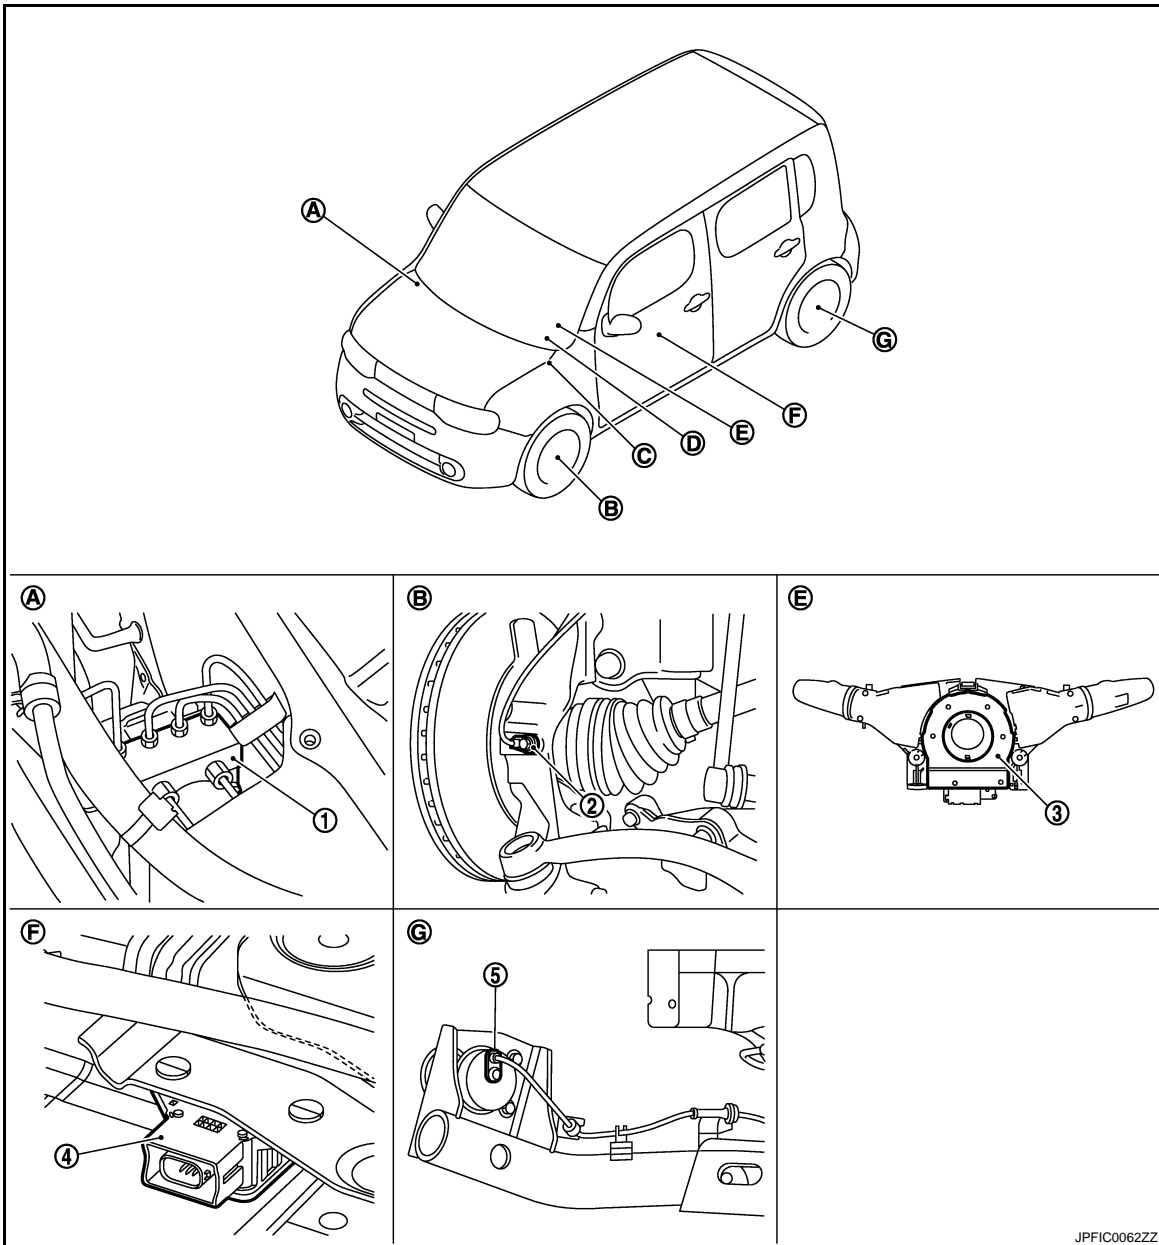

- |  |                                  |   |
|--|----------------------------------|---|
| 1. ABS actuator and electric unit (control unit)   | 2. Front wheel sensor            | 3. Steering angle sensor                                  |
| 4. Yaw rate/side G sensor  | 5. Rear wheel sensor             |   |
| A. Engine room right side  | B. Steering knuckle              | C. VDC OFF switch: <a href="#">IP-12, "Exploded View"</a> |
| D. ABS warning lamp, brake warning lamp, VDC OFF indicator lamp, SLIP indicator lamp: <a href="#">MWI-6, "METER SYSTEM : System Description"</a> | E. Back of spiral cable assembly | F. Under front (left side) seat                           |
| G. Rear axle   |                                  |   |

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## Component Description

INFOID:000000005492748


Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	<a href="#">BRC-37, "Description"</a>
	Motor	
	Actuator relay (main relay)	<a href="#">BRC-50, "Description"</a>
	Solenoid valve	<a href="#">BRC-45, "Description"</a>
	Pressure sensor	<a href="#">BRC-52, "Description"</a>
	VDC switch-over valve (CV1, CV2)	<a href="#">BRC-62, "Description"</a>
	VDC switch-over valve (SV1, SV2)	<a href="#">BRC-64, "Description"</a>
Wheel sensor	<a href="#">BRC-28, "Description"</a>	
Yaw rate/side G sensor	<a href="#">BRC-57, "Description"</a>	
Steering angle sensor	<a href="#">BRC-54, "Description"</a>	
VDC OFF switch	<a href="#">BRC-71, "Description"</a>	
ABS warning lamp	<a href="#">BRC-73, "Description"</a>	
Brake warning lamp	<a href="#">BRC-74, "Description"</a>	
VDC OFF indicator lamp	<a href="#">BRC-76, "Description"</a>	
SLIP indicator lamp	<a href="#">BRC-77, "Description"</a>	



ABS

System Diagram

INFOID:000000005492749

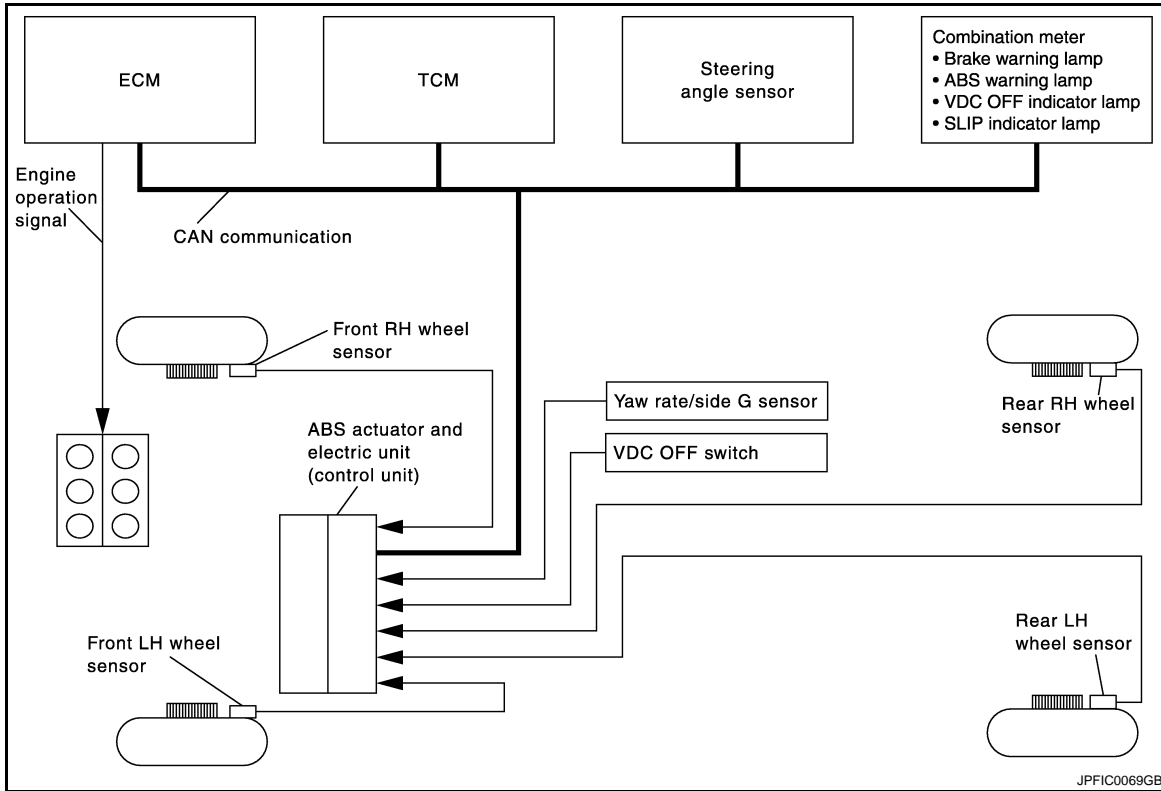


A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

System Description

INFOID:000000005492750

- Anti-Lock Braking System detects wheel revolution while braking, electronically controls braking force, and prevents wheel locking during sudden braking. It improves handling stability and maneuverability for avoiding obstacles.
- Electrical system diagnosis by CONSULT-III is available.

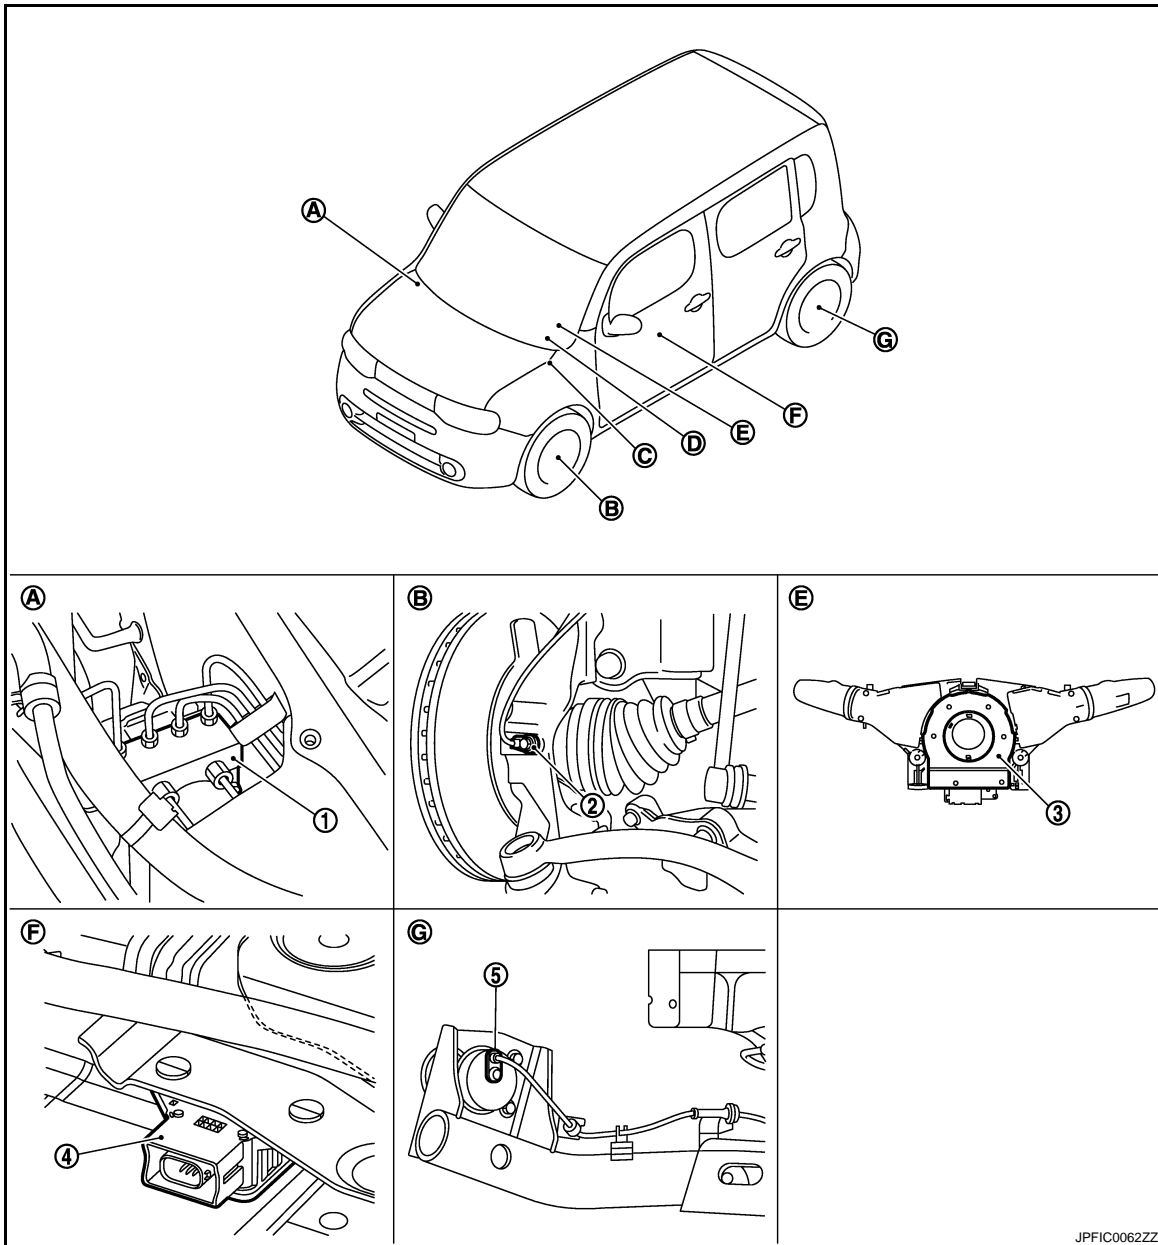

JPFIC0062ZZ

- |  |                                  |   |
|--|----------------------------------|---|
| 1. ABS actuator and electric unit (control unit)   | 2. Front wheel sensor            | 3. Steering angle sensor                                  |
| 4. Yaw rate/side G sensor  | 5. Rear wheel sensor             |   |
| A. Engine room right side  | B. Steering knuckle              | C. VDC OFF switch: <a href="#">IP-12, "Exploded View"</a> |
| D. ABS warning lamp, brake warning lamp, VDC OFF indicator lamp, SLIP indicator lamp: <a href="#">MWI-6, "METER SYSTEM : System Description"</a> | E. Back of spiral cable assembly | F. Under front (left side) seat                           |
| G. Rear axle   |                                  |   |

Component Description

INFOID:000000005492752

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	<a href="#">BRC-37, "Description"</a>
	Motor	
	Actuator relay (main relay)	<a href="#">BRC-50, "Description"</a>
	Solenoid valve	<a href="#">BRC-45, "Description"</a>
	Pressure sensor	<a href="#">BRC-52, "Description"</a>
	VDC switch-over valve (CV1, CV2)	<a href="#">BRC-62, "Description"</a>
	VDC switch-over valve (SV1, SV2)	<a href="#">BRC-64, "Description"</a>
Wheel sensor	<a href="#">BRC-28, "Description"</a>	
Yaw rate/side G sensor	<a href="#">BRC-57, "Description"</a>	
Steering angle sensor	<a href="#">BRC-54, "Description"</a>	
VDC OFF switch	<a href="#">BRC-71, "Description"</a>	
ABS warning lamp	<a href="#">BRC-73, "Description"</a>	
Brake warning lamp	<a href="#">BRC-74, "Description"</a>	
VDC OFF indicator lamp	<a href="#">BRC-76, "Description"</a>	
SLIP indicator lamp	<a href="#">BRC-77, "Description"</a>	


A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**BRC**

EBD

System Diagram


INFOID:000000005492753

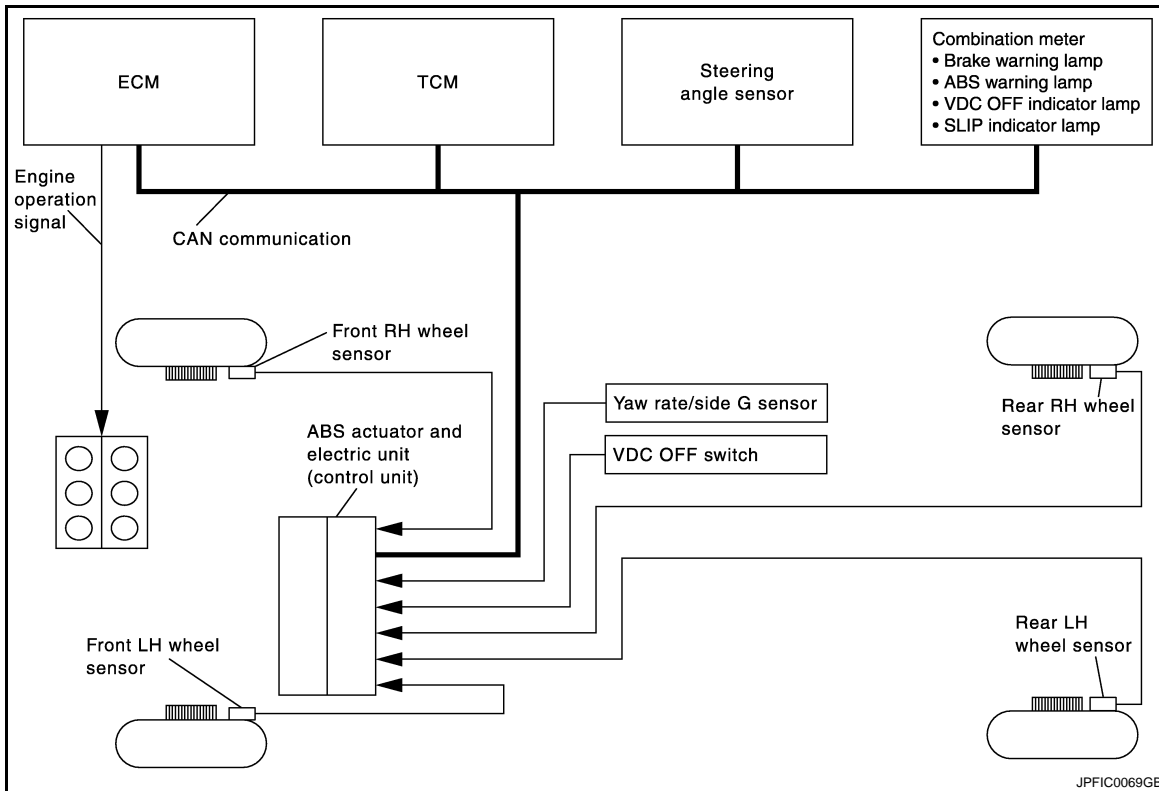

System Description

INFOID:000000005492754

- Electric Brake force Distribution is a following function. ABS actuator and electric unit (control unit) detects subtle slippages between the front and rear wheels during braking. Then is electronically controls the rear braking force (brake fluid pressure) to reducing and reduces rear wheel slippage. Accordingly it improves vehicle stability.
- Electrical system diagnosis by CONSULT-III is available.

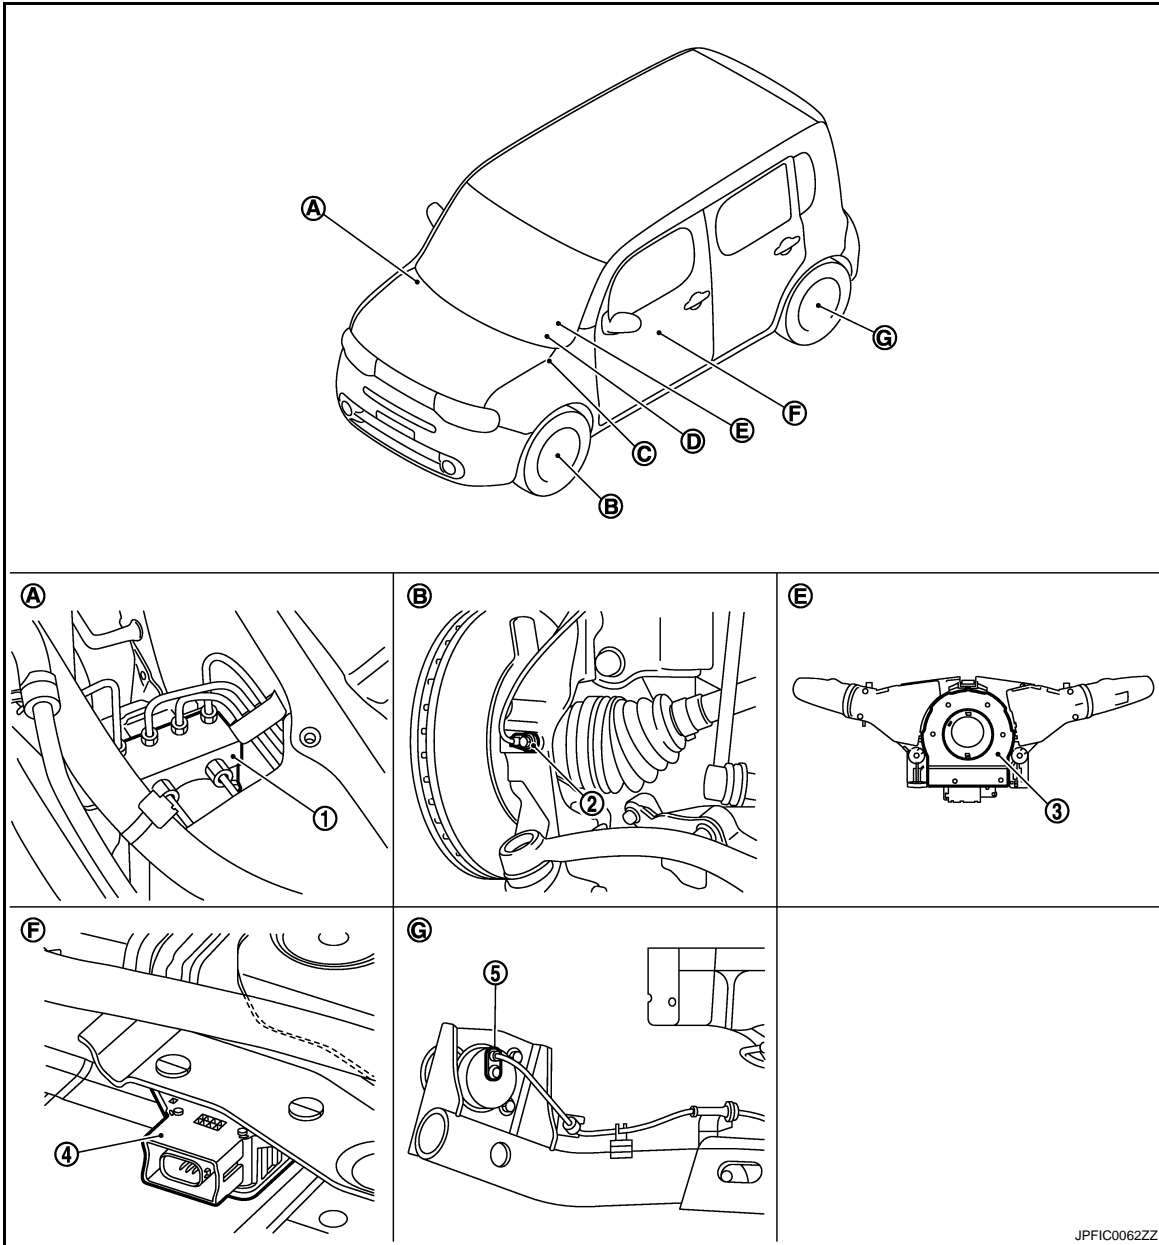

- |  |                                  |   |
|--|----------------------------------|---|
| 1. ABS actuator and electric unit (control unit)   | 2. Front wheel sensor            | 3. Steering angle sensor                                  |
| 4. Yaw rate/side G sensor  | 5. Rear wheel sensor             |   |
| A. Engine room right side  | B. Steering knuckle              | C. VDC OFF switch: <a href="#">IP-12, "Exploded View"</a> |
| D. ABS warning lamp, brake warning lamp, VDC OFF indicator lamp, SLIP indicator lamp: <a href="#">MWI-6, "METER SYSTEM : System Description"</a> | E. Back of spiral cable assembly | F. Under front (left side) seat                           |
| G. Rear axle   |                                  |   |

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## Component Description

INFOID:000000005492756

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	<a href="#">BRC-37, "Description"</a>
	Motor	
	Actuator relay (main relay)	<a href="#">BRC-50, "Description"</a>
	Solenoid valve	<a href="#">BRC-45, "Description"</a>
	Pressure sensor	<a href="#">BRC-52, "Description"</a>
	VDC switch-over valve (CV1, CV2)	<a href="#">BRC-62, "Description"</a>
	VDC switch-over valve (SV1, SV2)	<a href="#">BRC-64, "Description"</a>
Wheel sensor	<a href="#">BRC-28, "Description"</a>	
Yaw rate/side G sensor	<a href="#">BRC-57, "Description"</a>	
Steering angle sensor	<a href="#">BRC-54, "Description"</a>	
VDC OFF switch	<a href="#">BRC-71, "Description"</a>	
ABS warning lamp	<a href="#">BRC-73, "Description"</a>	
Brake warning lamp	<a href="#">BRC-74, "Description"</a>	
VDC OFF indicator lamp	<a href="#">BRC-76, "Description"</a>	
SLIP indicator lamp	<a href="#">BRC-77, "Description"</a>	

# DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

## DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

### CONSULT-III Function

INFOID:000000005492757

#### FUNCTION

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

Diagnostic test mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on CONSULT-III.
Self diagnostic result	Self-diagnostic results can be read and erased quickly.
Data monitor	Input/Output data in the ABS actuator and electric unit (control unit) can be read.
Active test	CONSULT-III drives some actuators apart from ABS actuator and electric unit (control unit) and also shifts some parameters in a specified range.
ECU identification	ABS actuator and electric unit (control unit) part number can be read.

#### WORK SUPPORT

Item	Description
ST ANGLE SENSOR ADJUSTMENT	Adjusts the neutral position of the steering angle sensor.

#### SELF DIAGNOSTIC RESULT

##### Operation Procedure

Before performing the self-diagnosis, start engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.

##### Display Item List

Refer to [BRC-88, "DTC Index"](#).

##### How to Erase Self-diagnosis Results

After erasing DTC memory for "ABS" with CONSULT-III, start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute as the final inspection, and make sure that the ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp turn OFF.

##### **CAUTION:**

**If memory cannot be erased, perform applicable diagnosis.**

##### **NOTE:**

- When the wheel sensor malfunctions, after inspecting the wheel sensor system, ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp will not turn OFF even when the system is normal unless the vehicle is driven at approximately 30 km/h (19 MPH) or more for approximately 1 minute.
- Brake warning lamp will turn ON in case of parking brake operation (when switch is ON) or in case of brake fluid level switch operation (when brake fluid is insufficient).
- VDC OFF switch should not stay "ON" position.

#### DATA MONITOR MODE

Display Item List

# DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

×: Applicable ▼: Optional item

Monitor item (Unit)	SELECT MONITOR ITEM		Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	
FR LH SENSOR [km/h (MPH)]	×	×	Wheel speed
FR RH SENSOR [km/h (MPH)]	×	×	
RR LH SENSOR [km/h (MPH)]	×	×	
RR RH SENSOR [km/h (MPH)]	×	×	
BATTERY VOLT (V)	×	×	Battery voltage supplied to the ABS actuator and electric unit (control unit)
STOP LAMP SW (On/Off)	×	×	Stop lamp switch signal status
OFF SW (On/Off)	×	×	VDC OFF switch
GEAR	×	×	Gear position determined by TCM
SLCT LVR POSI	×	×	Shift lever position determined by TCM
YAW RATE SEN (d/s)	×	×	Yaw rate detected by yaw rate/side G sensor
FR RH IN SOL (On/Off) (Note)	▼	×	Operation status of each solenoid valve
FR RH OUT SOL (On/Off) (Note)	▼	×	
FR LH IN SOL (On/Off) (Note)	▼	×	
FR LH OUT SOL (On/Off) (Note)	▼	×	
RR RH IN SOL (On/Off) (Note)	▼	×	
RR RH OUT SOL (On/Off) (Note)	▼	×	
RR LH IN SOL (On/Off) (Note)	▼	×	
RR LH OUT SOL (On/Off) (Note)	▼	×	
MOTOR RELAY (On/Off)	▼	×	Motor and motor relay operation
ACTUATOR RLY (On/Off) (Note)	▼	×	Actuator relay operation
ABS WARN LAMP (On/Off)	▼	×	ABS warning lamp
OFF LAMP (On/Off)	▼	×	VDC OFF indicator lamp
SLIP LAMP (On/Off)	▼	×	SLIP indicator lamp
PRESS SENSOR (bar)	×	▼	Brake fluid pressure detected by pressure sensor
ACCEL POS SIG (%)	×	▼	Throttle actuator opening/closing is displayed (Linked with accelerator pedal)
SIDE G-SENSOR (m/s <sup>2</sup> )	×	▼	Transverse G detected by yaw rate/side G sensor



# DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Monitor item (Unit)	SELECT MONITOR ITEM		Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	
STR ANGLE SIG (°)	×	▼	Steering angle detected by steering angle sensor
ENGINE RPM [tr/min (rpm)]	×	▼	Engine speed
FLUID LEV SW (On/Off)	×	▼	Brake fluid level switch signal status
EBD WARN LAMP (On/Off)	▼	▼	Brake warning lamp
CV1 (On/Off)	▼	▼	VDC switch-over valve
CV2 (On/Off)	▼	▼	
SV1 (On/Off)	▼	▼	
SV2 (On/Off)	▼	▼	
EBD SIGNAL (On/Off)	▼	▼	EBD operation
ABS SIGNAL (On/Off)	▼	▼	ABS operation
TCS SIGNAL (On/Off)	▼	▼	TCS operation
VDC SIGNAL (On/Off)	▼	▼	VDC operation
EBD FAIL SIG (On/Off)	▼	▼	EBD fail-safe signal
ABS FAIL SIG (On/Off)	▼	▼	ABS fail-safe signal
TCS FAIL SIG (On/Off)	▼	▼	TCS fail-safe signal
VDC FAIL SIG (On/Off)	▼	▼	VDC fail-safe signal
CRANKING SIG (On/Off)	▼	▼	Crank operation
PARK BRAKE SW (On/Off)	×	▼	Parking brake switch signal status
V/R OUTPUT (On/Off)	▼	▼	Solenoid valve relay activated
M/R OUTPUT (On/Off)	▼	▼	Actuator motor and motor relay activated

**NOTE:**

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is a operation for checking.

**ACTIVE TEST MODE**

**CAUTION:**

- Never perform active test while driving vehicle.
- Make sure to completely bleed air from brake system.
- The active test cannot be started when ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp are ON.
- ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp and brake warning lamp are ON during active test.

# DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

**NOTE:**

- When active test is performed while depressing the pedal, the pedal depression amount will change. This is normal. (Only solenoid valve and ABS motor.)
- “TEST IS STOPPED” in “ABS” with CONSULT-III is displayed 10 seconds after operation start.
- After “TEST IS STOPPED” in “ABS” with CONSULT-III is displayed, to perform test again.

Test Item

**ABS SOLENOID VALVE**

- Select “Up”, “Keep” and “Down” of “ACTIVE TEST” in “ABS” with CONSULT-III. Then use screen monitor to check that solenoid valve operates as shown in the table below.

Test item	Display item	Display (Note)		
		Up	Keep	Down
FR RH SOL	FR RH IN SOL	Off	On	On
	FR RH OUT SOL	Off	Off	On*
	CV2	Off	Off	Off
	SV2	Off	Off	Off
FR LH SOL	FR LH IN SOL	Off	On	On
	FR LH OUT SOL	Off	Off	On*
	CV1	Off	Off	Off
	SV1	Off	Off	Off
RR RH SOL	RR RH IN SOL	Off	On	On
	RR RH OUT SOL	Off	Off	On*
	CV1	Off	Off	Off
	SV1	Off	Off	Off
RR LH SOL	RR LH IN SOL	Off	On	On
	RR LH OUT SOL	Off	Off	On*
	CV2	Off	Off	Off
	SV2	Off	Off	Off

\*: On for 1 to 2 seconds after the select, and then Off.

**NOTE:**

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

**ABS SOLENOID VALVE (ACT)**

- Select “Up”, “ACT UP” and “ACT KEEP” of “ACTIVE TEST” in “ABS” with CONSULT-III. Then use screen monitor to check that solenoid valve operates as shown in the table below.

Test item	Display item	Display (Note)		
		Up	ACT UP	ACT KEEP
FR RH ABS SOLENOID (ACT)	FR RH IN SOL	Off	Off	Off
	FR RH OUT SOL	Off	Off	Off
	CV2	Off	On	On
	SV2	Off	On*	Off
FR LH ABS SOLENOID (ACT)	FR LH IN SOL	Off	Off	Off
	FR LH OUT SOL	Off	Off	Off
	CV1	Off	On	On
	SV1	Off	On*	Off

# DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Test item	Display item	Display (Note)		
		Up	ACT UP	ACT KEEP
RR RH ABS SOLENOID (ACT)	RR RH IN SOL	Off	Off	Off
	RR RH OUT SOL	Off	Off	Off
	CV1	Off	On	On
	SV1	Off	On*	Off
RR LH ABS SOLENOID (ACT)	RR LH IN SOL	Off	Off	Off
	RR LH OUT SOL	Off	Off	Off
	CV2	Off	On	On
	SV2	Off	On*	Off

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BRC

\*: On for 1 to 2 seconds after the select, and then Off.

**NOTE:**

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

**ABS MOTOR**

- Select "On" and "Off" of "ACTIVE TEST" in "ABS" with CONSULT-III. Make sure motor relay and actuator relay operates as shown in table below.

Test item	Display item	Display	
		On	Off
ABS MOTOR	MOTOR RELAY	On	Off
	ACTUATOR RLY (Note)	On	On

**NOTE:**

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

**ECU IDENTIFICATION**

ABS actuator and electric unit (control unit) part number can be read.

# C1101, C1102, C1103, C1104 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## DTC/CIRCUIT DIAGNOSIS

### C1101, C1102, C1103, C1104 WHEEL SENSOR

#### Description

INFOID:000000005492758

When the sensor rotor rotates, the magnetic field changes. It converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

#### DTC Logic

INFOID:000000005492759

#### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1101	RR RH SENSOR-1	Circuit of rear RH wheel sensor is open. Or when the sensor power voltage is outside the standard.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Wheel sensor</li><li>• ABS actuator and electric unit (control unit)</li><li>• Sensor rotor</li></ul>
C1102	RR LH SENSOR-1	Circuit of rear LH wheel sensor is open. Or when the sensor power voltage is outside the standard.	
C1103	FR RH SENSOR-1	Circuit of front RH wheel sensor is open. Or when the sensor power voltage is outside the standard.	
C1104	FR LH SENSOR-1	Circuit of front LH wheel sensor is open. Or when the sensor power voltage is outside the standard.	

#### DTC CONFIRMATION PROCEDURE

##### 1. DTC REPRODUCTION PROCEDURE

1. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-28, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

#### Diagnosis Procedure

INFOID:000000005492760

#### **CAUTION:**

**Never check between wheel sensor harness connector terminals.**

##### 1. CHECK TIRES

Check air pressure, wear and size. Refer to [WT-66, "Tire Air Pressure"](#).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Adjust air pressure or replace error-detected parts.

##### 2. CHECK WHEEL SENSOR

Check wheel sensor for damage, disconnection or looseness.

- Front: refer to [BRC-100, "FRONT WHEEL SENSOR : Exploded View"](#).
- Rear: refer to [BRC-101, "REAR WHEEL SENSOR : Exploded View"](#).

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair wheel sensor mount or replace wheel sensor.
  - Front: refer to [BRC-100, "FRONT WHEEL SENSOR : Exploded View"](#).
  - Rear: refer to [BRC-101, "REAR WHEEL SENSOR : Exploded View"](#).

##### 3. CHECK SENSOR ROTOR

Check sensor rotor for damage, disconnection or looseness.

- Front: refer to [BRC-102, "FRONT SENSOR ROTOR : Removal and Installation"](#).
- Rear: refer to [BRC-102, "REAR SENSOR ROTOR : Removal and Installation"](#).

Is the inspection result normal?

# C1101, C1102, C1103, C1104 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

YES >> GO TO 4.

NO >> Repair wheel sensor mount or replace sensor rotor.

- Front: refer to [BRC-102, "FRONT SENSOR ROTOR : Removal and Installation"](#).
- Rear: refer to [BRC-102, "REAR SENSOR ROTOR : Removal and Installation"](#).

## 4. CHECK WHEEL SENSOR HARNESS

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector.
3. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Also check continuity when steering wheel is turned right and left and when sensor harness inside the wheel house is moved.)

Measurement connector and terminal for power supply circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E36	9	E39 (Front RH)	1	Existed
	16	E22 (Front LH)		
	8	B41 (Rear RH)		
	6	B44 (Rear LH)		

Measurement connector and terminal for signal circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E36	10	E39 (Front RH)	2	Existed
	5	E22 (Front LH)		
	19	B41 (Rear RH)		
	17	B44 (Rear LH)		

4. Check the continuity between ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)		Connector	Terminal	Continuity
Connector	Terminal			
E36	9, 10	E36	1, 4	Not existed
	16, 5			
	8, 19			
	6, 17			

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

## 5. CHECK TERMINALS AND HARNESS CONNECTORS

1. Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
2. Check each wheel sensor pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

## 6. REPLACE WHEEL SENSOR

1. Replace wheel sensor.
2. Erase self-diagnosis results for "ABS" with CONSULT-III.
3. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
4. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#)

## C1101, C1102, C1103, C1104 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

NO >> INSPECTION END

### Special Repair Requirement

INFOID:000000005492761

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "Special Repair Requirement"](#)

>> END

# C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1105, C1106, C1107, C1108 WHEEL SENSOR

### Description

INFOID:000000005492762

When the sensor rotor rotates, the magnetic field changes. It converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005492763

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1105	RR RH SENSOR-2	When the circuit in the rear RH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Wheel sensor</li><li>• ABS actuator and electric unit (control unit)</li><li>• Sensor rotor</li></ul>
C1106	RR LH SENSOR-2	When the circuit in the rear LH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit.	
C1107	FR RH SENSOR-2	When the circuit in the front RH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit.	
C1108	FR LH SENSOR-2	When the circuit in the front LH wheel sensor is short-circuited. Or when the distance between the wheel sensor and sensor rotor is too large and the sensor pulse cannot be recognized by the control unit.	

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1105", "C1106", "C1107", or "C1108" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-31, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492764

#### **CAUTION:**

**Never check between wheel sensor harness connector terminals.**

#### 1. CHECK TIRES

Check air pressure, wear and size. Refer to [WT-66, "Tire Air Pressure"](#).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Adjust air pressure or replace error-detected parts.

#### 2. CHECK WHEEL SENSOR

Check wheel sensor for damage, disconnection or looseness.

- Front: refer to [BRC-100, "FRONT WHEEL SENSOR : Exploded View"](#).
- Rear: refer to [BRC-101, "REAR WHEEL SENSOR : Exploded View"](#).

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair wheel sensor mount or replace wheel sensor.
  - Front: refer to [BRC-100, "FRONT WHEEL SENSOR : Exploded View"](#).
  - Rear: refer to [BRC-101, "REAR WHEEL SENSOR : Exploded View"](#).

#### 3. CHECK SENSOR ROTOR

# C1105, C1106, C1107, C1108 WHEEL SENSOR

[VDC/TCS/ABS]

## < DTC/CIRCUIT DIAGNOSIS >

Check sensor rotor for damage, disconnection or looseness.

- Front: refer to [BRC-102, "FRONT SENSOR ROTOR : Removal and Installation"](#).
- Rear: refer to [BRC-102, "REAR SENSOR ROTOR : Removal and Installation"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair wheel sensor mount or replace sensor rotor.

- Front: refer to [BRC-102, "FRONT SENSOR ROTOR : Removal and Installation"](#).
- Rear: refer to [BRC-102, "REAR SENSOR ROTOR : Removal and Installation"](#).

## 4. CHECK WHEEL SENSOR HARNESS

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector.
3. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Also check continuity when steering wheel is turned right and left and when sensor harness inside the wheel house is moved.)

Measurement connector and terminal for power supply circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E36	9	E39 (Front RH)	1	Existed
	16	E22 (Front LH)		
	8	B41 (Rear RH)		
	6	B44 (Rear LH)		

Measurement connector and terminal for signal circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E36	10	E39 (Front RH)	2	Existed
	5	E22 (Front LH)		
	19	B41 (Rear RH)		
	17	B44 (Rear LH)		

4. Check the continuity between ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)				Continuity
Connector	Terminal	Connector	Terminal	
E36	9, 10	E36	1, 4	Not existed
	16, 5			
	8, 19			
	6, 17			

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

## 5. CHECK TERMINALS AND HARNESS CONNECTORS

1. Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
2. Check each wheel sensor pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

## 6. REPLACE WHEEL SENSOR

1. Replace wheel sensor.
2. Erase self-diagnosis results for "ABS" with CONSULT-III.



# C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

3. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
4. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#)  
NO >> INSPECTION END

## Special Repair Requirement

INFOID:000000005492765

### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "Special Repair Requirement"](#)

>> END

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**BRC**

# C1109 POWER AND GROUND SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1109 POWER AND GROUND SYSTEM

### Description

INFOID:000000005492766

Supplies electric power to the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005492767

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1109	BATTERY VOLTAGE [ABNORMAL]	When the ABS actuator and electric unit (control unit) power supply voltage is lower than normal.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• ABS actuator and electric unit (control unit)</li><li>• Fuse</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "C1109" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-34, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492768

#### 1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	18	Ground	Approx. 0 V

4. Turn the ignition switch ON.  
**CAUTION:**  
**Never start the engine.**
5. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	18	Ground	Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R harness connector.
3. Check continuity between ABS actuator and electric unit (control unit) harness connector and IPDM E/R harness connector.

# C1109 POWER AND GROUND SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		PDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E36	18	E15	60	Existed

Is the inspection result normal?

YES >> Perform the trouble diagnosis for ignition power supply circuit. Refer to [PG-45, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).

NO >> Repair or replace error-detected parts.

## 3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND

Check continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	1	Ground	Existed
	4		

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

## 4.CHECK TERMINALS AND HARNESS CONNECTORS

1. Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
2. Check IPDM E/R pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

## Special Repair Requirement

INFOID:000000005492769

### 1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "Special Repair Requirement"](#)

>> END

**C1110, C1153, C1170 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)**

DTC Logic

INFOID:000000005492770

DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1110	CONTROLLER FAILURE	When there is an internal malfunction in the ABS actuator and electric unit (control unit).	ABS actuator and electric unit (control unit)
C1153	EMERGENCY BRAKE	When ABS actuator and electric unit (control unit) is malfunctioning. (Pressure increase is too much or too little)	
C1170	VARIANT CODING	In a case where VARIANT CODING is different.	

DTC CONFIRMATION PROCEDURE

**1**.DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1110", "C1153" or "C1170" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-36, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000005492771

**1**.REPLACE ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

**CAUTION:**

Replace ABS actuator and electric unit (control unit) when self-diagnostic result shows items other than those applicable.

>> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#).

Special Repair Requirement

INFOID:000000005492772

**1**.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "Special Repair Requirement"](#)

>> END

# C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1111 ABS MOTOR, MOTOR RELAY SYSTEM

### Description

INFOID:000000005492773

#### PUMP

The pump returns the brake fluid stored in the reservoir to the master cylinder by reducing the pressure.

#### MOTOR

The motor drives the pump according to the signals transmitted by the ABS actuator and electric unit (control unit).

#### MOTOR RELAY

Activates or deactivates motor according to the signals transmitted by the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005492774

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1111	PUMP MOTOR	During the actuator motor operating with ON, when the actuator motor turns OFF, or when the control line for actuator motor relay is open.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• ABS actuator and electric unit (control unit)</li></ul>
		During the actuator motor operating with OFF, when the actuator motor turns ON, or when the control line for relay is shorted to ground.	

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "C1111" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-37, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492775

#### 1. CHECK ABS MOTOR AND MOTOR RELAY POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the 40A fuse (F).
4. Check voltage between the ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	2	Ground	Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace error-detected parts.

#### 2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND

Check continuity between ABS actuator and electric unit (control unit) harness connector and ground.

# C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	1	Ground	Existed
	4		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

## 3. CHECK TERMINALS AND HARNESS CONNECTORS

Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

## Special Repair Requirement

INFOID:000000005492776

### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "Special Repair Requirement"](#)

>> END

# C1115 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1115 WHEEL SENSOR

### Description

INFOID:000000005492777

When the sensor rotor rotates, the magnetic field changes. It converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005492778

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1115	ABS SENSOR [ABNORMAL SIGNAL]	When wheel sensor input signal is malfunctioning.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Wheel sensor</li><li>• ABS actuator and electric unit (control unit)</li><li>• Sensor rotor</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1115" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-39, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492779

#### **CAUTION:**

**Never check between wheel sensor harness connector terminals.**

#### 1. CHECK TIRES

Check air pressure, wear and size. Refer to [WT-66, "Tire Air Pressure"](#).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Adjust air pressure or replace error-detected parts.

#### 2. CHECK WHEEL SENSOR

Check wheel sensor for damage, disconnection or looseness.

- Front: refer to [BRC-100, "FRONT WHEEL SENSOR : Exploded View"](#).
- Rear: refer to [BRC-101, "REAR WHEEL SENSOR : Exploded View"](#).

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair wheel sensor mount or replace wheel sensor.
  - Front: refer to [BRC-100, "FRONT WHEEL SENSOR : Exploded View"](#).
  - Rear: refer to [BRC-101, "REAR WHEEL SENSOR : Exploded View"](#).

#### 3. CHECK SENSOR ROTOR

Check sensor rotor for damage, disconnection or looseness.

- Front: refer to [BRC-102, "FRONT SENSOR ROTOR : Removal and Installation"](#).
- Rear: refer to [BRC-102, "REAR SENSOR ROTOR : Removal and Installation"](#).

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Repair wheel sensor mount or replace sensor rotor.
  - Front: refer to [BRC-102, "FRONT SENSOR ROTOR : Removal and Installation"](#).
  - Rear: refer to [BRC-102, "REAR SENSOR ROTOR : Removal and Installation"](#).

#### 4. CHECK WHEEL SENSOR HARNESS

# C1115 WHEEL SENSOR

[VDC/TCS/ABS]

## < DTC/CIRCUIT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector.
3. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Also check continuity when steering wheel is turned right and left and when sensor harness inside the wheel house is moved.)

Measurement connector and terminal for power supply circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E36	9	E39 (Front RH)	1	Existed
	16	E22 (Front LH)		
	8	B41 (Rear RH)		
	6	B44 (Rear LH)		

Measurement connector and terminal for signal circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E36	10	E39 (Front RH)	2	Existed
	5	E22 (Front LH)		
	19	B41 (Rear RH)		
	17	B44 (Rear LH)		

4. Check the continuity between ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)				Continuity
Connector	Terminal	Connector	Terminal	
E36	9, 10	E36	1, 4	Not existed
	16, 5			
	8, 19			
	6, 17			

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

## 5.CHECK TERMINALS AND HARNESS CONNECTORS

1. Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
2. Check each wheel sensor pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

## 6.REPLACE WHEEL SENSOR

1. Replace wheel sensor.
2. Erase self-diagnosis results for "ABS" with CONSULT-III.
3. Start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.
4. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1115" detected?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#)

NO >> INSPECTION END

## Special Repair Requirement

INFOID:000000005492780

## 1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION



# C1115 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "Special Repair Requirement"](#)

>> END

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**BRC**

# C1116 STOP LAMP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1116 STOP LAMP SWITCH

### Description

INFOID:000000005492781

The stop lamp switch transmits the stop lamp switch signal (ON/OFF) to the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005492782

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1116	STOP LAMP SW	When a stop lamp switch signal is not input where the brake pedal is depressed.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Stop lamp switch</li><li>• ABS actuator and electric unit (control unit)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "C1116" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-42, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492783

#### 1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Disconnect stop lamp switch harness connector.
4. Check terminal for deformation, disconnection, looseness, etc.
5. Reconnect ABS actuator and electric unit (control unit) and stop lamp switch connectors securely.
6. Start the engine.
7. Repeat pumping brake pedal carefully several times, and perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "C1116" detected?

- YES >> GO TO 2.  
NO >> Poor connection of connector terminal. Repair or replace error-detected parts.

#### 2. CHECK STOP LAMP SWITCH CLEARANCE

Check stop lamp switch clearance. Refer to [BR-7, "Inspection and Adjustment"](#).

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Adjust stop lamp switch clearance. Refer to [BR-7, "Inspection and Adjustment"](#).

#### 3. CHECK STOP LAMP SWITCH SIGNAL

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		Condition	Voltage
Connector	Terminal		
E36	20	Brake pedal is depressed	Battery voltage
		Brake pedal is released	Approx. 0 V

#### Is the inspection result normal?

# C1116 STOP LAMP SWITCH

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103. "Exploded View"](#).  
NO >> GO TO 4.

## 4.CHECK STOP LAMP SWITCH

Check stop lamp switch. Refer to [BRC-43. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.  
NO >> Repair stop lamp switch. Refer to [BR-17. "Exploded View"](#).

## 5.CHECK STOP LAMP SWITCH CIRCUIT (1)

1. Check continuity between ABS actuator electric unit (control unit) harness connector and stop lamp switch harness connector.

ABS actuator electric unit (control unit)		Stop lamp switch		Continuity
Connector	Terminal	Connector	Terminal	Existed
E36	20	E114 (M/T) E115 (CVT)	2	

2. Check continuity between ABS actuator electric unit (control unit) harness connector and ground.

ABS actuator electric unit (control unit)		—	Continuity
Connector	Terminal	Ground	No existed
E36	20		

Is the inspection result normal?

- YES >> GO TO 6.  
NO >> Repair or replace error-detected parts.

## 6.CHECK STOP LAMP SWITCH CIRCUIT (2)

1. Check voltage between stop lamp switch harness connector and ground.

Stop lamp switch		—	Voltage
Connector	Terminal	Ground	Battery voltage
E114 (M/T) E115 (CVT)	1		

Is the inspection result normal?

- YES >> Perform the trouble diagnosis for power supply circuit. Refer to [PG-6. "Wiring Diagram - BATTERY POWER SUPPLY -"](#).  
NO >> Repair or replace error-detected parts.

## Component Inspection

INFOID:000000005492784

## 1.CHECK STOP LAMP SWITCH

1. Turn the ignition switch OFF.  
2. Disconnect stop lamp switch harness connector.  
3. Check continuity between stop lamp switch harness connector terminals.

Stop lamp switch	Condition	Continuity
Terminal		
1 - 2	Release stop lamp switch (When brake pedal is depressed.)	Existed
	Push stop lamp switch (When brake pedal is released.)	Not existed

Is the inspection result normal?

- YES >> INSPECTION END

## C1116 STOP LAMP SWITCH

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Replace stop lamp switch. Refer to [BR-17. "Exploded View"](#).

### Special Repair Requirement

INFOID:000000005492785

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "Special Repair Requirement"](#)

>> END

# C1120, C1122, C1124, C1126 IN ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1120, C1122, C1124, C1126 IN ABS SOL

### Description

INFOID:000000005492786

The solenoid valve increases, holds or decreases the fluid pressure of each brake caliper according to the signals transmitted by the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005492787

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1120	FR LH IN ABS SOL	When the control unit detects a malfunction in the front LH inlet solenoid circuit.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• ABS actuator and electric unit (control unit)</li></ul>
C1122	FR RH IN ABS SOL	When the control unit detects a malfunction in the front RH inlet solenoid circuit.	
C1124	RR LH IN ABS SOL	When the control unit detects a malfunction in the rear LH inlet solenoid circuit.	
C1126	RR RH IN ABS SOL	When the control unit detects a malfunction in the rear RH inlet solenoid circuit.	

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1120", "C1122", "C1124" or "C1126" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-45, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492788

#### 1. CHECK SOLENOID POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the 30 A fuse (K).
4. Check voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace error-detected parts.

#### 2. CHECK SOLENOID GROUND

Check continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	1	Ground	Existed
	4		

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace error-detected parts.

---

**3.CHECK TERMINALS AND HARNESS CONNECTORS**

---

Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103. "Exploded View"](#).

NO >> Repair or replace error-detected parts.

**Special Repair Requirement**INFOID:000000005492789

---

**1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION**

---

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "Special Repair Requirement"](#)

>> END

# C1121, C1123, C1125, C1127 OUT ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1121, C1123, C1125, C1127 OUT ABS SOL

### Description

INFOID:000000005492790

The solenoid valve increases, holds or decreases the fluid pressure of each brake caliper according to the signals transmitted by the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005492791

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1121	FR LH OUT ABS SOL	When the control unit detects a malfunction in the front LH outlet solenoid circuit.	<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• ABS actuator and electric unit (control unit)</li> </ul>
C1123	FR RH OUT ABS SOL	When the control unit detects a malfunction in the front RH outlet solenoid circuit.	
C1125	RR LH OUT ABS SOL	When the control unit detects a malfunction in the rear LH outlet solenoid circuit.	
C1127	RR RH OUT ABS SOL	When the control unit detects a malfunction in the rear RH outlet solenoid circuit.	

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1121", "C1123", "C1125" or "C1127" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-47, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492792

#### 1. CHECK SOLENOID POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the 30 A fuse (K).
4. Check voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace error-detected parts.

#### 2. CHECK SOLENOID GROUND

Check continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	1	Ground	Existed
	4		

Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> Repair or replace error-detected parts.

## C1121, C1123, C1125, C1127 OUT ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

### 3. CHECK TERMINALS AND HARNESS CONNECTORS

Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103. "Exploded View"](#).

NO >> Repair or replace error-detected parts.

### Special Repair Requirement

INFOID:000000005492793

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "Special Repair Requirement"](#)

>> END



## C1130 ENGINE SIGNAL

### Description

INFOID:000000005492794

ABS actuator and electric unit (control unit) and ECM exchange the engine signal with CAN communication line.

### DTC Logic

INFOID:000000005492795

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1130	ENGINE SIGNAL 1	Major engine components are malfunctioning.	<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• ABS actuator and electric unit (control unit)</li> <li>• ECM</li> <li>• CAN communication line</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "C1130" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-49, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492796

#### 1. PERFORM ECM SELF-DIAGNOSIS

Perform self-diagnosis for "ENGINE" with CONSULT-III.

#### Is any DTC detected?

- YES >> Check the DTC. Refer to [EC-100, "CONSULT-III Function"](#).  
 NO >> GO TO 2.

#### 2. PERFORM ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAGNOSIS

1. Erase self-diagnosis results for "ABS" with CONSULT-III.
2. Turn the ignition switch OFF.
3. Start the engine. Drive the vehicle for a while.
4. Make sure that malfunction indicator lamp (MIL) turns OFF.
5. Stop the engine. Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "C1130" detected?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#).  
 NO >> Check ABS actuator and electric unit (control unit) harness connector terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace error-detected parts.

### Special Repair Requirement

INFOID:000000005492797

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "Special Repair Requirement"](#)

>> END

# C1140 ACTUATOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1140 ACTUATOR RELAY SYSTEM

### Description

INFOID:000000005492798

Activates or deactivates each solenoid valve according to the signals transmitted by the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005492799

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1140	ACTUATOR RLY	When the control unit detects a malfunction in the actuator relay system.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• ABS actuator and electric unit (control unit)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "C1140" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-50, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492800

#### 1. CHECK ACTUATOR RELAY POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the 30 A fuse (K).
4. Check voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	3	Ground	Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace error-detected parts.

#### 2. CHECK ACTUATOR RELAY GROUND

Check continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	1	Ground	Existed
	4		

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace error-detected parts.

#### 3. CHECK TERMINALS AND HARNESS CONNECTORS

Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

#### Is the inspection result normal?

# C1140 ACTUATOR RELAY SYSTEM

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103. "Exploded View"](#).
- NO >> Repair or replace error-detected parts.

A

## Special Repair Requirement

INFOID:000000005492801

### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

B

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "Special Repair Requirement"](#)

C

>> END

D

E

**BRC**

G

H

I

J

K

L

M

N

O

P

# C1142 PRESS SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1142 PRESS SENSOR

### Description

INFOID:000000005492802

The pressure sensor converts the brake fluid pressure to an electric signal and transmits it to the ABS actuator and electric unit (control unit). [The pressure sensor is integrated in the ABS actuator and electric unit (control unit).]

### DTC Logic

INFOID:000000005492803

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1142	PRESS SEN CIRCUIT	Pressure sensor signal line is open or shorted, or pressure sensor is malfunctioning.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Stop lamp switch</li><li>• ABS actuator and electric unit (control unit)</li><li>• Brake system</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1142" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-52. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492804

#### 1. CHECK STOP LAMP SWITCH

Check stop lamp switch system. Refer to [BRC-42. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace error-detected parts.

#### 2. CHECK BRAKE SYSTEM

1. Check brake fluid leakage: refer to [BR-10. "Inspection"](#).
2. Check brake piping: refer to [BR-22. "FRONT : Inspection"](#) (front), [BR-24. "REAR : Inspection"](#) (rear).
3. Check brake pedal: refer to [BR-7. "Inspection and Adjustment"](#).
4. Check master cylinder: refer to [BR-12. "Inspection"](#).
5. Check brake booster: refer to [BR-13. "Inspection"](#).
6. Check front disc brake: refer to [BR-38. "BRAKE CALIPER ASSEMBLY : Inspection"](#).
7. Check rear drum brake: refer to [BR-41. "Inspection and Adjustment"](#).

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace error-detected parts.

#### 3. PERFORM SELF-DIAGNOSIS

Perform self-diagnosis for "ABS" with CONSULT-III.

Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103. "Exploded View"](#).  
NO >> Check ABS actuator and electric unit (control unit) harness connector terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace error-detected parts.

# C1142 PRESS SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## Special Repair Requirement

INFOID:000000005492805

### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "Special Repair Requirement"](#)

>> END

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**BRC**

# C1143 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1143 STEERING ANGLE SENSOR

### Description

INFOID:000000005492806

The steering angle sensor detects the rotation amount, angular velocity and direction of the steering wheel, and transmits the data to the ABS actuator and electric unit (control unit) via CAN communication.

### DTC Logic

INFOID:000000005492807

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1143	ST ANG SEN CIRCUIT	Steering angle sensor is malfunctioning.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Steering angle sensor</li><li>• ABS actuator and electric unit (control unit)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "C1143" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-54, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492808

#### 1. CHECK STEERING ANGLE SENSOR POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect steering angle sensor harness connector.
3. Check the voltage between steering angle sensor harness connector and ground.

Steering angle sensor		—	Voltage
Connector	Terminal		
M30	4	Ground	Approx. 0 V

4. Turn the ignition switch ON.  
**CAUTION:**  
**Never start the engine.**
5. Check the voltage between steering angle sensor harness connector and ground.

Steering angle sensor		—	Voltage
Connector	Terminal		
M30	4	Ground	Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2. CHECK STEERING ANGLE SENSOR CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R harness connector.
3. Check continuity between steering angle sensor harness connector and IPDM E/R harness connector.

# C1143 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Steering angle sensor		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M30	4	E15	60	Existed

Is the inspection result normal?

YES >> Perform the trouble diagnosis for ignition power supply circuit. Refer to [PG-45, "Wiring Diagram - IGNITION POWER SUPPLY -"](#)

NO >> Repair or replace error-detected parts.

## 3.CHECK STEERING ANGLE SENSOR GROUND

Check continuity between steering angle sensor harness connector and ground.

Steering angle sensor		—	Continuity
Connector	Terminal		
M30	1	Ground	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

## 4.CHECK DATA LINE

Check "STRG BRANCH LINE CIRCUIT". Refer to [LAN-41, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts. Refer to [BRC-98, "Precautions for Harness Repair"](#).

## 5.CHECK TERMINALS AND HARNESS CONNECTORS

1. Check steering angle sensor pin terminals for damage or loose connection with harness connector.
2. Check IPDM E/R pin terminals for damage or loose connection with harness connector.
3. Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

## Special Repair Requirement

INFOID:000000005492809

### 1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "Special Repair Requirement"](#)

>> END

# C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT

### Description

INFOID:000000005492810

The steering angle sensor detects the rotation amount, angular velocity and direction of the steering wheel, and transmits the data to the ABS actuator and electric unit (control unit) via CAN communication.

### DTC Logic

INFOID:000000005492811

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1144	ST ANG SEN SIGNAL	Neutral position of steering angle sensor is not finished.	<ul style="list-style-type: none"><li>• Harness or connector</li><li>• Steering angle sensor</li><li>• ABS actuator and electric unit (control unit)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Select "ABS", "WORK SUPPORT" and "ST ANG SEN ADJUSTMENT" in order with CONSULT-III, and perform adjust the neutral position of steering angle sensor.
3. Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "C1144" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-56, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492812

#### 1. CHECK STEERING ANGLE SENSOR

Check steering angle sensor. Refer to [BRC-54, "Diagnosis Procedure"](#).

#### Is the inspection result normal?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#).  
NO >> Repair or replace error-detected parts.

### Special Repair Requirement

INFOID:000000005492813

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "Special Repair Requirement"](#)

>> END



# C1145, C1146 YAW RATE/SIDE G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1145, C1146 YAW RATE/SIDE G SENSOR

### Description

INFOID:000000005492814

The yaw rate/side G sensor detects the yaw rate/side G affecting the vehicle, and transmits the data to the ABS actuator and electric unit (control unit) as an analog voltage signal.

### DTC Logic

INFOID:000000005492815

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1145	YAW RATE SENSOR	Yaw rate sensor is malfunctioning, or the yaw rate sensor signal line is open or shorted.	• Harness or connector • ABS actuator and electric unit (control unit) • Yaw rate/side G sensor
C1146	SIDE G-SEN CIRCUIT	Side G sensor is malfunctioning, or circuit of side G sensor is open or shorted.	

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1145" or "C1146" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-57, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492816

#### CAUTION:

- Sudden turns (such as spin turns, acceleration turns), drifting, etc., when VDC function is off (VDC OFF switch "ON") may cause yaw rate/side G sensor system to indicate a malfunction. However, this is not a malfunction, if normal operation can be resumed after restarting engine. Then erase memory of self-diagnosis.
- If vehicle is on turn-table at entrance to parking garage, or on other moving surface, VDC OFF indicator lamp may illuminate and CONSULT-III self-diagnosis may indicate yaw rate sensor system malfunction. However, in this case there is no malfunction in yaw rate sensor system. Take vehicle off of turn-table or other moving surface, and start the engine. Results will return to normal.

### INSPECTION PROCEDURE

#### 1. CHECK YAW RATE/SIDE G SENSOR POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect yaw rate/side G sensor harness connector.
3. Check voltage between yaw rate/side G sensor harness connector and ground.

Yaw rate/side G sensor		—	Voltage
Connector	Terminal		
B38	4	Ground	Approx. 0 V

4. Turn the ignition switch ON.

#### CAUTION:

**Never start the engine.**

5. Check voltage between yaw rate/side G sensor harness connector and ground.

Yaw rate/side G sensor		—	Voltage
Connector	Terminal		
B38	4	Ground	Battery voltage

Is the inspection result normal?

# C1145, C1146 YAW RATE/SIDE G SENSOR

[VDC/TCS/ABS]

## < DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 3.
- NO >> GO TO 2.

### 2.CHECK YAW RATE/SIDE G SENSOR CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R harness connector.
3. Check continuity between yaw rate/side G sensor harness connector and IPDM E/R harness connector.

Yaw rate/side G sensor		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
B38	4	E15	60	Existed

#### Is the inspection result normal?

- YES >> Perform the trouble diagnosis for ignition power supply circuit. Refer to [PG-45, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- NO >> Repair or replace error-detected parts.

### 3.CHECK YAW RATE/SIDE G SENSOR GROUND

Check continuity between yaw rate/side G sensor harness connector and ground.

Yaw rate/side G sensor		—	Continuity
Connector	Terminal		
B38	1	Ground	Existed

#### Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair or replace error-detected parts.

### 4.CHECK YAW RATE/SIDE G SENSOR CIRCUIT

Check continuity between yaw rate/side G sensor harness connector and ABS actuator electric unit (control unit) harness connector.

Yaw rate/side G sensor		ABS actuator electric unit (control unit)		Continuity
Connector	Terminal	Connector	Terminal	
B38	2	E36	14	Existed
	3		25	

#### Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair or replace error-detected parts.

### 5.CHECK TERMINALS AND HARNESS CONNECTORS

1. Check yaw rate/side G sensor pin terminals for damage or loose connection with harness connector.
2. Check IPDM E/R pin terminals for damage or loose connection with harness connector.
3. Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

#### Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair or replace error-detected parts.

### 6.REPLACE YAW RATE/SIDE G SENSOR

1. Replace yaw rate/side G sensor. Refer to [BRC-105, "Exploded View"](#).
2. Erase self-diagnosis results for "ABS" with CONSULT-III.
3. Turn the ignition switch OFF.
4. Turn the ignition switch ON.  
**CAUTION:**  
**Never start the engine.**
5. Perform self-diagnosis for "ABS" with CONSULT-III.

# C1145, C1146 YAW RATE/SIDE G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Is DTC "C1145" or "C1146" detected?

- YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#).
- NO >> INSPECTION END

## Special Repair Requirement

INFOID:000000005492817

### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "Special Repair Requirement"](#)

>> END

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**BRC**

# C1155 BRAKE FLUID LEVEL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## C1155 BRAKE FLUID LEVEL SWITCH

### Description

INFOID:000000005492818

The brake fluid level switch converts the brake fluid level to an electric signal and transmits it to the ABS actuator and electric unit (control unit).

### DTC Logic

INFOID:000000005492819

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1155	BR FLUID LEVEL LOW	Brake fluid level is low or communication line between the ABS actuator and electric unit (control unit) and brake fluid level switch is open or shorted.	<ul style="list-style-type: none"> <li>• Harness or connector</li> <li>• Brake fluid</li> <li>• Brake fluid level switch</li> <li>• Combination meter</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

#### Is DTC "C1155" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-60. "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492820

#### 1. CHECK BRAKE WARNING LAMP

Operate the parking brake lever. Then check that the brake warning lamp in the combination meter turns ON/OFF correctly.

#### Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Check brake warning lamp. Refer to [BRC-74. "Component Function Check"](#).

#### 2. CHECK THE BRAKE FLUID LEVEL

Check the brake fluid level. Refer to [BR-10. "Inspection"](#).

#### Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> Refill the brake fluid. Refer to [BR-10. "Refilling"](#).

#### 3. CHECK BRAKE FLUID LEVEL SWITCH CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect brake fluid level switch harness connector and combination meter harness connector.
3. Check continuity between brake fluid level switch harness connector and combination meter harness connector.

Brake fluid level switch		Combination meter		Continuity
Connector	Terminal	Connector	Terminal	
E37	1	M34	11	Existed

4. Check continuity between brake fluid level switch harness connector and ground.

Brake fluid level switch		—	Continuity
Connector	Terminal		
E37	1	Ground	Not existed
	2		Existed

# C1155 BRAKE FLUID LEVEL SWITCH

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair or replace error-detected parts.

## 4.CHECK TERMINALS AND HARNESS CONNECTORS

1. Check brake fluid level switch pin terminals for damage or loose connection with harness connector.
2. Check combination meter pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair or replace error-detected parts.

## 5.CHECK BRAKE FLUID LEVEL SWITCH

Check brake fluid level switch. Refer to [BRC-61. "Component Inspection"](#).

Is the inspection result normal?

- YES >> Check combination meter.
- NO >> Replace reservoir tank. Refer to [BR-25. "Exploded View"](#).

## Component Inspection

INFOID:000000005492821

BRC

## 1.CHECK BRAKE FLUID LEVEL SWITCH

1. Turn the ignition switch OFF.
2. Disconnect brake fluid level switch harness connector.
3. Check continuity between brake fluid level switch harness connector.

Brake fluid level switch	Condition	Continuity
Terminal		
1 - 2	When brake fluid is full in the reservoir tank.	Not existed
	When brake fluid is empty in the reservoir tank.	Existed

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace reservoir tank. Refer to [BR-25. "Exploded View"](#).

## Special Repair Requirement

INFOID:000000005492822

## 1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "Special Repair Requirement"](#)

>> END

## C1164, C1165 CV SYSTEM

### Description

INFOID:000000005492823

The cut valve shuts off the normal brake fluid path from the master cylinder, when VDC/TCS is activated.

### DTC Logic

INFOID:000000005492824

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1164	CV 1	VDC switch-over solenoid valve (CV1) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	<ul style="list-style-type: none"> <li>Harness or connector</li> <li>ABS actuator and electric unit (control unit)</li> </ul>
C1165	CV 2	VDC switch-over solenoid valve (CV2) on the secondary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1164" or "C1165" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-62. "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492825

#### 1. CHECK ACTUATOR RELAY POWER SUPPLY CIRCUIT

1. Turn the ignition switch ON.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the 30 A fuse (K).
4. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace damaged parts.

#### 2. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	1	Ground	Existed
	4		

Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> Repair or replace damaged parts.

#### 3. CHECK TERMINALS AND HARNESS CONNECTORS

Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

# C1164, C1165 CV SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

## Special Repair Requirement

INFOID:000000005492826

### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "Special Repair Requirement"](#)

>> END

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**BRC**

## C1166, C1167 SV SYSTEM

### Description

INFOID:000000005492827

The suction valve supplies the brake fluid from the master cylinder to the pump, when VDC/TCS is activated.

### DTC Logic

INFOID:000000005492828

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
C1166	SV 1	VDC switch-over solenoid valve (SV1) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	<ul style="list-style-type: none"> <li>Harness or connector</li> <li>ABS actuator and electric unit (control unit)</li> </ul>
C1167	SV 2	VDC switch-over solenoid valve (SV2) on the secondary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.	

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "C1166" or "C1167" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-64, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492829

#### 1. CHECK ACTUATOR RELAY POWER SUPPLY CIRCUIT

1. Turn the ignition switch ON.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the 30 A fuse (K).
4. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair or replace damaged parts.

#### 2. CHECK SOLENOID, VDC SWITCH-OVER VALVE AND ACTUATOR RELAY GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	1	Ground	Existed
	4		

Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> Repair or replace damaged parts.

#### 3. CHECK TERMINALS AND HARNESS CONNECTORS

Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.



< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

Special Repair Requirement

INFOID:000000005492830

**1**.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "Special Repair Requirement"](#)

>> END

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**BRC**

# U1000, U1002 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## U1000, U1002 CAN COMM CIRCUIT

### Description

INFOID:000000005492831

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

### DTC Logic

INFOID:000000005492832

### DTC DETECTION LOGIC

DTC	Display item	Malfunction detected condition	Possible cause
U1000	CAN COMM CIRCUIT	When ABS actuator and electric unit (control unit) is not transmitting or receiving CAN communication signal for 2 seconds or more.	<ul style="list-style-type: none"><li>CAN communication line</li><li>ABS actuator and electric unit (control unit)</li></ul>
U1002	SYSTEM COMM	When ABS actuator and electric unit (control unit) is not transmitting or receiving CAN communication signal for 2 seconds or less.	

### DTC CONFIRMATION PROCEDURE

#### 1. DTC REPRODUCTION PROCEDURE

1. Turn the ignition switch ON.
2. Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "U1000" or "U1002" detected?

- YES >> Proceed to diagnosis procedure. Refer to [BRC-66, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000005492833

#### 1. PERFORM ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform self-diagnosis for "ABS" with CONSULT-III.

Is DTC "U1000" or "U1002" detected?

- YES >> Proceed to diagnosis procedure. Refer to [LAN-14, "Trouble Diagnosis Flow Chart"](#).  
NO >> INSPECTION END

### Special Repair Requirement

INFOID:000000005492834

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "Special Repair Requirement"](#)

>> END

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## POWER SUPPLY AND GROUND CIRCUIT

### Description

INFOID:000000005492835

Supplies power to ABS actuator and electric unit (control unit).

### Diagnosis Procedure

INFOID:000000005492836

#### 1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) IGNITION POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	18	Ground	Approx. 0 V

4. Turn the ignition switch ON.  
**CAUTION:**  
**Never start the engine.**
5. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E36	18	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY CIRCUIT

1. Check the 10A fuse (57).
2. Disconnect IPDM E/R harness connector.
3. Check the continuity between ABS actuator and electric unit (control unit) harness connector and IPDM E/R harness connector.

ABS actuator and electric unit (control unit)		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E36	18	E15	60	Existed

4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E36	18	Ground	No existed

Is the inspection result normal?

- YES >> Perform the trouble diagnosis for ignition power supply circuit. Refer to [PG-45, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- NO >> Repair or replace error-detected parts.

#### 3. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY

1. Turn the ignition switch OFF.
2. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		—	Voltage
Connector	Terminal		
E41	2	Ground	Battery voltage
	3		

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

## 4. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND

Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E41	1	Ground	Existed
	4		

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

## 5. CHECK TERMINALS AND HARNESS CONNECTORS

1. Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
2. Check IPDM E/R pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103. "Exploded View"](#).

NO >> Repair or replace error-detected parts.

# PARKING BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## PARKING BRAKE SWITCH

### Description

INFOID:000000005492837

Operate the parking brake lever, and brake warning lamp in the combination meter turns ON/OFF correctly.

### Diagnosis Procedure

INFOID:000000005492838

#### 1.CHECK PARKING BRAKE SWITCH CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect parking brake switch harness connector.
3. Disconnect combination meter harness connector.
4. Check continuity between parking brake switch harness connector and combination meter harness connector.

Parking brake switch		Combination meter		Continuity
Connector	Terminal	Connector	Terminal	
M11	1	M34	10	Existed

5. Check continuity between parking brake switch harness connector and ground.

Parking brake switch		—	Continuity
Connector	Terminal		
M11	1	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace error-detected parts.

#### 2.CHECK PARKING BRAKE SWITCH

Check the parking brake switch. Refer to [BRC-69, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Replace parking brake switch. Refer to [PB-4, "Exploded View"](#).

#### 3.CHECK TERMINALS AND HARNESS CONNECTORS

1. Check parking brake switch pin terminals for damage or loose connection with harness connector.
2. Check combination meter pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Repair or replace error-detected parts.

#### 4.CHECK PARKING BRAKE SWITCH SIGNAL

Select "ABS", "DATA MONITOR" and "PARK BRAKE SW" in order with CONSULT-III, and perform the parking brake switch inspection.

Condition	PARK BRAKE SW (DATA MONITOR)
Parking brake lever is active	On
Parking brake lever is inactive	Off

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Check combination meter.

### Component Inspection

INFOID:000000005492839

#### 1.CHECK PARKING BRAKE SWITCH

## PARKING BRAKE SWITCH

[VDC/TCS/ABS]

### < DTC/CIRCUIT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Disconnect parking brake switch harness connector.
3. Check continuity between parking brake switch harness connector.

Parking brake switch		Condition	Continuity
Terminal	—	When the parking brake switch is operated.	Existed
1	Ground	When the parking brake switch is not operated.	Not existed

### Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace parking brake switch. Refer to [PB-4. "Exploded View"](#).

# VDC OFF SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## VDC OFF SWITCH

### Description

INFOID:000000005492840

VDC OFF switch can deactivate (turn OFF) the VDC/TCS function by pressing the VDC OFF switch.

### Diagnosis Procedure

INFOID:000000005492841

#### 1. CHECK VDC OFF SWITCH CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Disconnect VDC OFF switch harness connector.
4. Check the continuity between VDC OFF switch harness connector and ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)		VDC OFF switch		Continuity
Connector	Terminal	Connector	Terminal	
E36	21	M5	1	Existed

5. Check the continuity between VDC OFF switch harness connector and ground.

VDC OFF switch		—	Continuity
Connector	Terminal		
M5	1	Ground	Not existed
	2		Existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace error-detected parts.

#### 2. CHECK VDC OFF SWITCH

Check VDC OFF switch. Refer to [BRC-72, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Replace VDC OFF switch. Refer to [BRC-107, "Removal and Installation"](#).

#### 3. CHECK TERMINALS AND HARNESS CONNECTORS

1. Check ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
2. Check VDC OFF switch pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Repair or replace error-detected parts.

#### 4. CHECK VDC OFF SWITCH SIGNAL

Select "ABS", "DATA MONITOR" and "OFF SW" in order with CONSULT-III, and perform the VDC OFF switch inspection.

Condition	OFF SW (DATA MONITOR)
Press the VDC OFF switch when VDC OFF indicator lamp is OFF.	On
Press the VDC OFF switch when VDC OFF indicator lamp is ON.	Off

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#).

# VDC OFF SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## Component Inspection

INFOID:000000005492842

### 1. CHECK VDC OFF SWITCH

1. Turn the ignition switch OFF.
2. Disconnect VDC OFF switch harness connector.
3. Check the continuity between VDC OFF switch harness connector.

VDC OFF switch Terminal	Condition	Continuity
1 - 2	When VDC OFF switch is hold pressed.	Existed
	When releasing VDC OFF switch.	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace VDC OFF switch. Refer to [BRC-107. "Removal and Installation"](#).

## Special Repair Requirement

INFOID:000000005492843

### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "Special Repair Requirement"](#)

>> END



# ABS WARNING LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## ABS WARNING LAMP

### Description

INFOID:000000005492844

×: ON –: OFF

Condition	ABS warning lamp
Ignition switch OFF	–
For 1 seconds after turning ignition switch ON	×
1 seconds later after turning ignition switch ON	–
ABS function is malfunctioning.	×
EBD function is malfunctioning.	×

### Component Function Check

INFOID:000000005492845

#### 1. CHECK ABS WARNING LAMP OPERATION

Check that the lamp illuminates for approximately 1 seconds after the ignition switch is turned ON.

#### **CAUTION:**

**Never start the engine.**

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-73, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000005492846

#### 1. PERFORM SELF-DIAGNOSIS

Perform self-diagnosis for "ABS" with CONSULT-III.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check item displayed by self-diagnosis.

#### 2. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-29, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

### Special Repair Requirement

INFOID:000000005492847

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "Special Repair Requirement"](#)

>> END

## BRAKE WARNING LAMP

### Description

INFOID:000000005492848

×: ON –: OFF

Condition	Brake warning lamp (Note 1)
Ignition switch OFF	–
For 1 seconds after turning ignition switch ON	× (Note 2)
1 seconds later after turning ignition switch ON	× (Note 2)
ABS function is malfunctioning.	–
EBD function is malfunctioning.	×

**NOTE:**

- 1: Brake warning lamp will turn on in case of parking brake operation (when switch is ON) or of brake fluid level switch operation (when brake fluid is insufficient).
- 2: After starting the engine, brake warning lamp is turned off.

### Component Function Check

INFOID:000000005492849

#### 1. BRAKE WARNING LAMP OPERATION CHECK 1

Check that the lamp illuminates for approximately 1 seconds after the ignition switch is turned ON.

**CAUTION:**

**Never start the engine.**

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to diagnosis procedure. Refer to [BRC-74, "Diagnosis Procedure"](#).

#### 2. BRAKE WARNING LAMP OPERATION CHECK 2

Check that the brake warning lamp in the combination meter turns ON/OFF correctly when operating the parking brake pedal.

**NOTE:**

Brake warning lamp will turn on in case of parking brake operation (when switch is ON) or of brake fluid level switch operation (when brake fluid is insufficient).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check parking brake switch. Refer to [BRC-69, "Component Inspection"](#).

### Diagnosis Procedure

INFOID:000000005492850

#### 1. PERFORM SELF-DIAGNOSIS

Perform self-diagnosis for "ABS" with CONSULT-III.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check item displayed by self-diagnosis.

#### 2. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-29, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

### Special Repair Requirement

INFOID:000000005492851

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

# BRAKE WARNING LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "Special Repair Requirement"](#)

>> END

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**BRC**

# VDC OFF INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## VDC OFF INDICATOR LAMP

### Description

INFOID:000000005492852

×: ON –: OFF

Condition	VDC OFF indicator lamp
Ignition switch OFF	–
For 1 seconds after turning ignition switch ON	×
1 seconds later after turning ignition switch ON	–
VDC OFF switch turned ON. (VDC function is OFF.)	×
VDC/TCS function is malfunctioning.	×
ABS function is malfunctioning.	×
EBD function is malfunctioning.	×

### Component Function Check

INFOID:000000005492853

#### 1.VDC OFF INDICATOR LAMP OPERATION CHECK 1

Check that the lamp illuminates for approximately 1 seconds after the ignition switch is turned ON.

#### **CAUTION:**

**Never start the engine.**

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to diagnosis procedure. Refer to [BRC-76. "Diagnosis Procedure"](#).

#### 2.VDC OFF INDICATOR LAMP OPERATION CHECK 2

Check that the VDC OFF indicator lamp in the combination meter turns ON/OFF correctly when operating the VDC OFF switch.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check VDC OFF switch. Refer to [BRC-72. "Component Inspection"](#).

### Diagnosis Procedure

INFOID:000000005492854

#### 1.PERFORM SELF-DIAGNOSIS

Perform self-diagnosis for "ABS" with CONSULT-III.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check items displayed self-diagnosis.

#### 2.CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-29. "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103. "Exploded View"](#).

NO >> Repair or replace error-detected parts.

### Special Repair Requirement

INFOID:000000005492855

#### 1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9. "Special Repair Requirement"](#)

>> END

# SLIP INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

## SLIP INDICATOR LAMP

### Description

INFOID:000000005492856

×: ON △: Blink -: OFF

Condition	SLIP indicator lamp
Ignition switch OFF	-
For 1 seconds after turning ignition switch ON	×
1 seconds later after turning ignition switch ON	-
VDC/TCS is activated while driving	△
VDC/TCS function is malfunctioning.	×
ABS function is malfunctioning.	×
EBD function is malfunctioning.	×

### Component Function Check

INFOID:000000005492857

#### 1. CHECK SLIP INDICATOR LAMP OPERATION

Check that the lamp illuminates for approximately 1 seconds after the ignition switch is turned ON.

**CAUTION:**

**Never start the engine.**

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-77, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000005492858

#### 1. PERFORM SELF-DIAGNOSIS

Perform self-diagnosis for "ABS" with CONSULT-III.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check items displayed by self-diagnosis.

#### 2. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-29, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#).

NO >> Repair or replace error-detected parts.

### Special Repair Requirement

INFOID:000000005492859

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the ABS actuator and electric unit (control unit) or steering angle sensor and removing steering angle sensor. Refer to [BRC-9, "Special Repair Requirement"](#)

>> END

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

## ECU DIAGNOSIS INFORMATION

### ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Reference Value

INFOID:000000005492860

VALUES ON THE DIAGNOSIS TOOL

#### CAUTION:

The display shows the control unit calculation data, so a normal value might be displayed even in the event the output circuit (harness) is open or short-circuited.

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
FR LH SENSOR	Wheel speed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ( $\pm 10\%$ or less)
FR RH SENSOR	Wheel speed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ( $\pm 1\%$ or less)
RR LH SENSOR	Wheel speed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ( $\pm 10\%$ or less)
RR RH SENSOR	Wheel speed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ( $\pm 10\%$ or less)
BATTERY VOLT	Battery voltage supplied to the ABS actuator and electric unit (control unit)	Ignition switch ON	10 – 16 V
STOP LAMP SW	Stop lamp switch signal status	When brake pedal is depressed	On
		When brake pedal is not depressed	Off
OFF SW	VDC OFF switch ON/OFF	VDC OFF switch ON (When VDC OFF indicator lamp is ON)	On
		VDC OFF switch OFF (When VDC OFF indicator lamp is OF)	Off
GEAR	Gear position determined by TCM	1st gear	0
		2nd gear	1
		3rd gear	2
		4th gear	3
		5th gear	4
		6th gear	5
		7th gear	6
		8th gear	7
		Other	0
SLCT LVR POSI	Sift lever position determined by TCM	Ignition switch ON	P, R, N, D
YAW RATE SEN	Yaw rate detected by yaw rate/side G sensor	Vehicle stopped	Approx. 0 d/s
		Turning right	Negative value
		Turning left	Positive value

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor		
		Condition	Reference value in normal operation	
FR RH IN SOL (Note 2)	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On	A
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off	B
FR RH OUT SOL (Note 2)	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On	C
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off	D
FR LH IN SOL (Note 2)	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On	E
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off	<b>BRC</b>
FR LH OUT SOL (Note 2)	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On	G
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off	H
RR RH IN SOL (Note 2)	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On	I
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off	J
RR RH OUT SOL (Note 2)	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On	K
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off	L
RR LH IN SOL (Note 2)	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On	M
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off	N
RR LH OUT SOL (Note 2)	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On	O
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off	P
MOTOR RELAY	Motor and motor relay operation	When the motor relay and motor are operating	On	
		When the motor relay and motor are not operating	Off	
ACTUATOR RLY (Note 2)	Actuator relay operation	When the actuator relay is operating	On	
		When the actuator relay is not operating	Off	
ABS WARN LAMP	ABS warning lamp (Note 3)	When ABS warning lamp is ON	On	
		When ABS warning lamp is OFF	Off	
OFF LAMP	VDC OFF indicator lamp (Note 3)	When VDC OFF indicator lamp is ON	On	
		When VDC OFF indicator lamp is OFF	Off	

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
SLIP LAMP	SLIP indicator lamp (Note 3)	When SLIP indicator lamp is ON	On
		When SLIP indicator lamp is OFF	Off
PRESS SENSOR	Brake fluid pressure detected by pressure sensor	With ignition switch turned ON and brake pedal released	Approx. 0 bar
		With ignition switch turned ON and brake pedal depressed	-40 to 300 bar
ACCEL POS SIG	Throttle actuator opening/closing is displayed (linked with accelerator pedal)	Accelerator pedal not depressed (ignition switch is ON)	0 %
		Depress accelerator pedal (ignition switch is ON)	0 - 100 %
SIDE G-SENSOR	Transverse G detected by side G sensor	Vehicle stopped	Approx. 0 m/s <sup>2</sup>
		Turning right	Negative value
		Turning left	Positive value
STR ANGLE SIG	Steering angle detected by steering angle sensor	Driving straight	±2.5°
		Turn 90° to right	Approx. +90°
		Turn 90° to left	Approx. -90°
ENGINE RPM	With engine running	With engine stopped	0 [tr/min (rpm)]
		Engine running	Almost in accordance with tachometer display
FLUID LEV SW	Brake fluid level switch signal status	When brake fluid level switch ON	On
		When brake fluid level switch OFF	Off
EBD WARN LAMP	Brake warning lamp (Note 3)	When brake warning lamp is ON	On
		When brake warning lamp is OFF	Off
CV1	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
CV2	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
SV1	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
SV2	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
EBD SIGNAL	EBD operation	EBD is active	On
		EBD is inactive	Off



# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
ABS SIGNAL	ABS operation	ABS is active	On
		ABS is inactive	Off
TCS SIGNAL	TCS operation	TCS is active	On
		TCS is inactive	Off
VDC SIGNAL	VDC operation	VDC is active	On
		VDC is inactive	Off
EBD FAIL SIG	EBD fail-safe signal	In EBD fail-safe	On
		EBD is normal	Off
ABS FAIL SIG	ABS fail-safe signal	In ABS fail-safe	On
		ABS is normal	Off
TCS FAIL SIG	TCS fail-safe signal	In TCS fail-safe	On
		TCS is normal	Off
VDC FAIL SIG	VDC fail-safe signal	In VDC fail-safe	On
		VDC is normal	Off
CRANKING SIG	Crank operation	Crank is active	On
		Crank is inactive	Off
PARK BRAKE SW	Parking brake switch signal status	Parking brake switch is active	On
		Parking brake switch is inactive	Off
V/R OUTPUT	Solenoid valve relay activated	When the solenoid valve relay is active (When ignition switch OFF)	On
		When the solenoid valve relay is not active (in the fail-safe mode)	Off
M/R OUTPUT	Actuator motor and motor relay activated	When the actuator motor and motor relay are active ("ACTIVE TEST" in "ABS" with CONSULT-III)	On
		When the actuator motor and motor relay are inactive	Off

**NOTE:**

- 1: Confirm tire pressure is normal.
- 2: A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.
- 3: On and off timing for warning lamp and indicator lamp.
  - ABS warning lamp: refer to [BRC-73, "Description"](#).
  - Brake warning lamp: refer to [BRC-74, "Description"](#).
  - VDC OFF indicator lamp: refer to [BRC-76, "Description"](#).
  - SLIP indicator lamp: refer to [BRC-77, "Description"](#).


# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

## Wiring Diagram - BRAKE CONTROL SYSTEM -

INFOID:000000005492861

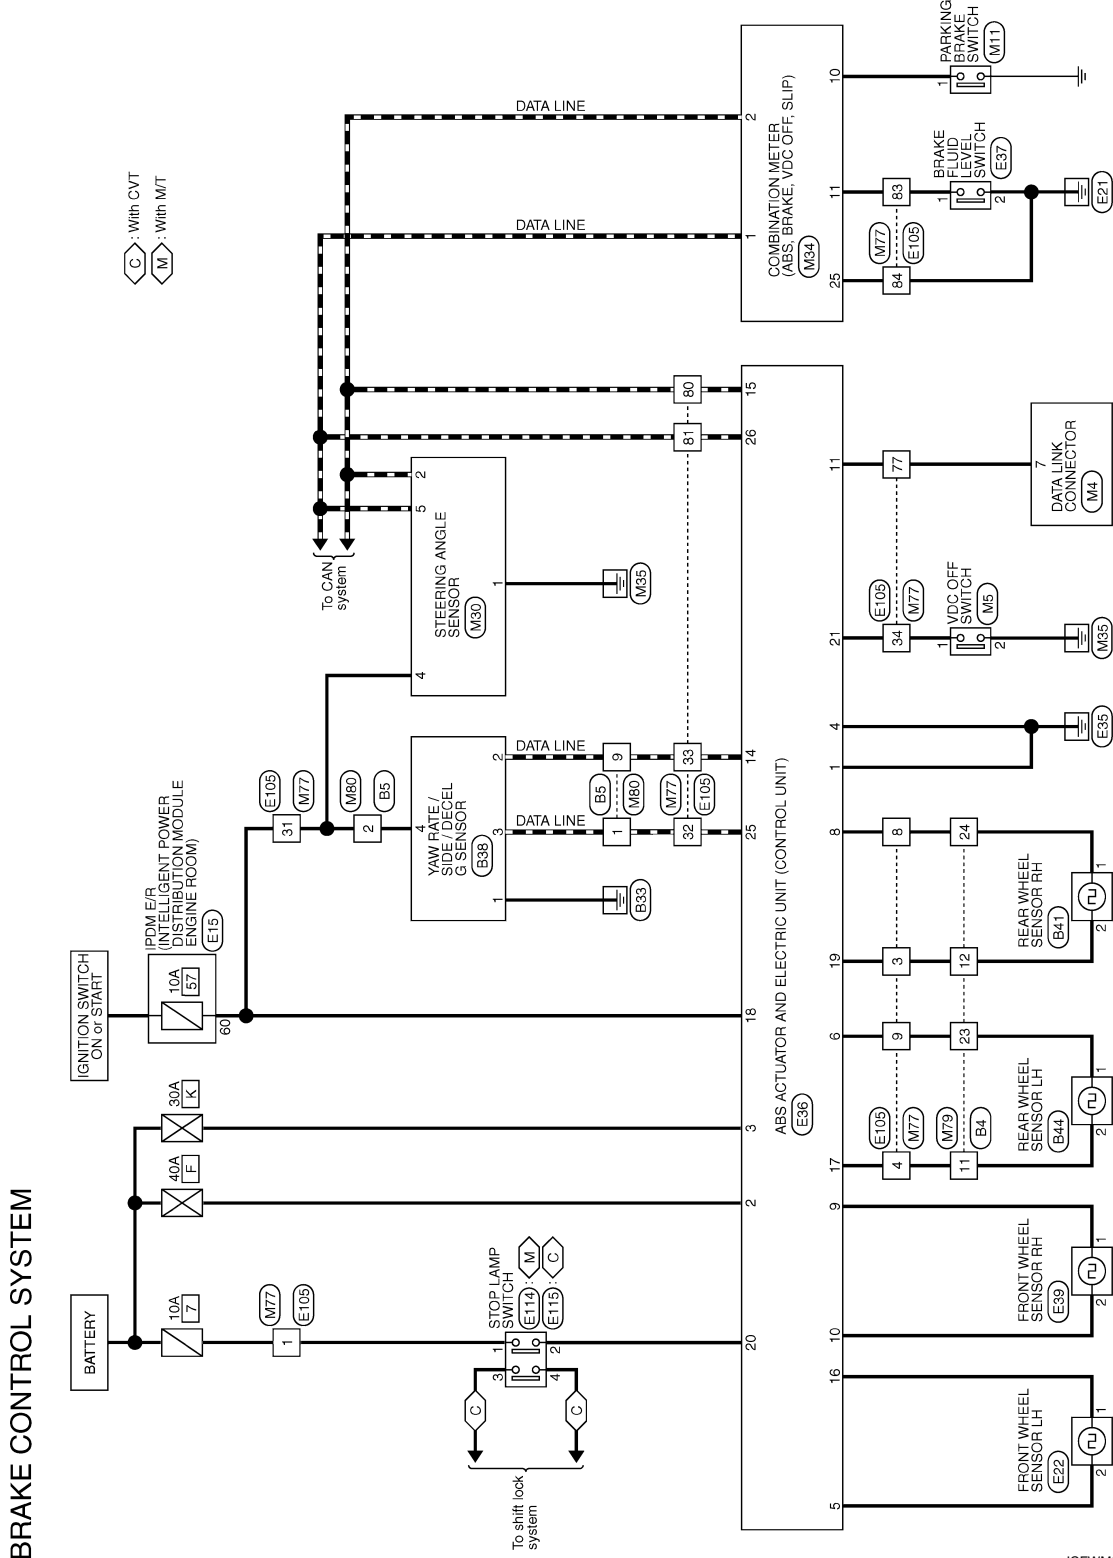

2009/02/27

JCFWM0353GI


# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

## BRAKE CONTROL SYSTEM

Connector No.	B4
Connector Name	WIRE TO WIRE
Connector Type	TH24MW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	
2	V	
3	O	
4	P	
5	W	
6	W	
7	P	
8	SB	
11	G	
12	SB	
13	L	
15	R	
16	GR	
17	BR	
18	L	
19	Y	
20	LG	
22	Y	
23	BR	
24	O	


Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Type	TH16MW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	
2	GR	

5	V	
8	W	
8	LG	
9	R	
11	O	
13	GR	
14	P	
16	W	

Connector No.	B38
Connector Name	YAW RATE / SDB / DECEL G SENSOR
Connector Type	AAZ02FEB



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
2	R	CAN-L
3	V	CAN-H
4	GR	IGN

Connector No.	B41
Connector Name	REAR WHEEL SENSOR RH
Connector Type	AAZ02FE1




Terminal No.	Color of Wire	Signal Name [Specification]
1	O	
2	SB	

Connector No.	B44
Connector Name	REAR WHEEL SENSOR LH
Connector Type	AAZ02FBI



Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	
2	G	

Connector No.	E15
Connector Name	SPARE FOR INTELLIGENT POWER DISTRIBUTION MODULE (SPARE SIGNAL)
Connector Type	NS16FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
47	BR	
49	W	
50	GR	
51	R	
52	P	
54	GR	
55	P	
56	SB	
57	G	
58	R	
59	Y	
59	Y	
60	V	
61	W	
62	L	

Connector No.	E22
Connector Name	FRONT WHEEL SENSOR LH
Connector Type	AAZ02FBI



Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	
2	Y	

Connector No.	E38
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAA22FB-AH24-RH



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND (MTR)
2	Y	BAT (MTR)
3	L	BAT (SOL)
4	B	GND (SOL)
5	Y	DS FL
6	W	DP RL
8	O	DP RR
9	L	DP FR
10	R	DS FR
11	LG	K LINE
14	GR	CAN-L
15	P	CAN-L
16	BR	DP FL
17	G	DS RL
18	V	IGN
19	SB	DS RR
20	W	STOP LAMP SW
21	P	VDC OFF SW
25	R	CAN-H
26	L	CAN-H

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

## BRAKE CONTROL SYSTEM

Connector No.	E37
Connector Name	BRAKE FLUID LEVEL SWITCH
Connector Type	Y102EGY




Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	B/Y	-

Connector No.	E39
Connector Name	FRONT WHEEL SENSOR RH
Connector Type	A4Z02FB1



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	R	-

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	T180MW-2S16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	W	-

3	SB	-
4	G	-
5	P	-
6	R	-
7	Y	-
8	O	-
9	W	-
10	SB	-
31	V	-
32	R	-
33	GR	-
34	P	-
35	Y	-
36	BR	-
39	SB	-
44	R	-
45	V	-
46	P	-
47	W	-
48	L	-
49	Y	-
50	W	-
51	BR	- [With CVT]
51	B	- [With M/T]
53	SB	-
54	W	- [With CVT]
54	O	- [With M/T]
57	LG	-
59	L	-
60	O	-
61	G	-
62	W	-
63	L	-
67	GR	- [With CVT]
67	V	- [With M/T]
69	P	-
70	SHIELD	-
71	GR	-
72	LG	-
73	P	-
74	V	-
76	Y	-
77	LG	-
78	O	-
79	G	-
80	P	-
81	L	-
82	W	-
83	BR	-
84	B	-
87	GR	-
91	W	-

92	Y	-
93	Y	-
94	R	-
95	V	-
96	LG	-
97	R	-
98	SB	-
99	G	-
100	P	-

Connector No.	E114
Connector Name	STOP LAMP SWITCH
Connector Type	M02FB-LC




Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	W	-

Connector No.	E115
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	O	-
4	G	-

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color of Wire	Signal Name [Specification]
4	B	-
5	B	-
6	L	-
7	GR/R	-
8	O	-
14	P	-
16	LG/R	-

Connector No.	M5
Connector Name	VDC OFF SWITCH
Connector Type	TK08FGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-
2	B	-
3	W	-
4	B/R	-

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]


## BRAKE CONTROL SYSTEM

Connector No.	M11
Connector Name	PARKING BRAKE SWITCH
Connector Type	10T0FB-A



Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-

Connector No.	M30
Connector Name	STEERING ANGLE SENSOR
Connector Type	TH06FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
2	P	CAN-L
4	GR/L	IGN
5	L	CAN-H


Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	CAN-H

Terminal No.	Color of Wire	Signal Name [Specification]
2	P	CAN-L
3	V	VEHICLE SPEED SIGNAL (2-PULSE)
4	L	VEHICLE SPEED SIGNAL (3-PULSE)
6	BR/Y	FUEL LEVEL SENSOR SIGNAL
7	R/Y	AIR BAG SIGNAL
8	P	OVERDRIVE CONTROL SWITCH SIGNAL
9	O	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
10	SB	PARKING BRAKE SWITCH SIGNAL
11	G/R	BRAKE FLUID LEVEL SWITCH SIGNAL
13	B/R	ILLUMINATION CONTROL SIGNAL
15	L/Y	ACC POWER SUPPLY
17	G	WASHER LEVEL SWITCH SIGNAL
18	R/Y	SECURITY SIGNAL
19	V/W	AMBIENT SENSOR SIGNAL
20	R/W	AMBIENT SENSOR GROUND
21	B	GROUND
22	B	GROUND
23	B	GROUND
24	V	FUEL LEVEL SENSOR GROUND
25	B	VDC GROUND
27	LG	BATTERY POWER SUPPLY
28	GR	IGNITION SIGNAL
29	BR	PASSENGER SEAT BELT WARNING SIGNAL
31	R	A/C AUTO AMP. CONNECTION RECOGNITION SIGNAL
35	BR	ENGINE COOLANT TEMPERATURE SIGNAL
38	GR	ALTERNATOR SIGNAL

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	B/O	-
2	R	-
3	G/R	-
4	G/B	-
5	L	-
6	L	-
7	W/R	-
8	G/W	-
9	Y/L	-
10	W	-

31	GR/L	-
32	L/B	-
33	R/Y	-
34	SB	-
35	BR	-
36	G	-
39	L/R	-
44	G/O	-
45	LG/R	-
46	GR/W	-
47	BR/Y	-
48	L/O	-
49	L/W	-
50	P/L	-
51	R/W	-
53	R/L	-
54	O	-
57	GR	-
59	V	-
60	R/W	-
61	V/W	-
62	W/L	-
63	W/B	-
67	Y/R	-
69	LG	-
70	SHIELD	-
71	P/B	-
72	R/G	-
73	R	-
74	L/Y	-
76	W/G	-
77	GR/R	-
78	O	-
79	LG	-
80	P	-
81	L	-
82	GR	-
83	G/R	-
84	B	-
87	G	-
91	R	-
92	O	-
93	Y	-
94	R/B	-
95	L/W	-
96	Y	-
97	L	-
98	BR/W	-
99	W	-
100	G/R	-

Connector No.	M79
Connector Name	WIRE TO WIRE
Connector Type	TH24FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
1	W/G	-
2	L/Y	-
3	B	-
4	P/B	-
5	W	-
6	W/G	-
7	R/B	-
8	SB	-
11	G/B	-
12	G/R	-
13	R/G	-
15	R/L	-
16	GR/R	-
17	BR/Y	-
18	V	-
19	Y	-
20	GR/L	-
22	L	-
23	Y/L	-
24	G/W	-

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

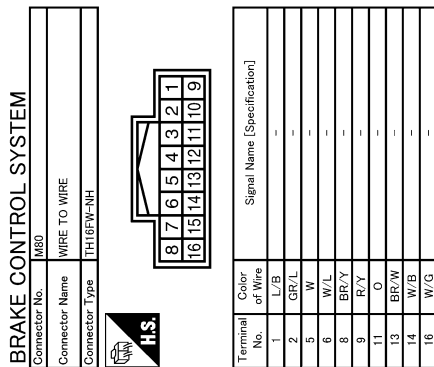

JCFWM0438GI

INFOID:000000005492862

## Fail-Safe

### VDC, TCS

If VDC/TCS/ABS system malfunction electrically, VDC OFF indicator lamp, SLIP indicator lamp are turned on, and the condition of vehicle is the same as the condition of vehicles without VDC and TCS control.

### **CAUTION:**

**If the Fail-Safe function is activated, then perform self-diagnosis for "ABS" with CONSULT-III.**

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

## ABS, EBD SYSTEM

If ABS malfunction electrically, ABS warning lamp, VDC OFF indicator lamp, SLIP indicator lamp will turn on. If EBD malfunction electrically, brake warning lamp, ABS warning lamp, VDC OFF indicator lamp and SLIP indicator lamp will turn on. Simultaneously, the VDC/TCS/ABS become one of the following conditions of the fail-safe function.

- For malfunction of ABS, only the EBD is activated and the condition of vehicle is the same condition of vehicles without TCS/ABS system.

### NOTE:

ABS self-diagnosis sound may be heard. That is a normal condition because a self-diagnosis for "Ignition switch ON" and "The first starting" are being performed.

- For malfunction of EBD, EBD and ABS become inoperative, and the condition of vehicle is the same as the condition of vehicles without TCS/ABS, EBD system.

## DTC Inspection Priority Chart

INFOID:000000005492863

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)
1	<ul style="list-style-type: none"> <li>• U1000 CAN COMM CIRCUIT</li> <li>• U1002 SYSTEM COOM</li> </ul>
2	<ul style="list-style-type: none"> <li>• C1110 CONTROLLER FAILURE</li> <li>• C1153 EMERGENCY BRAKE</li> <li>• C1170 VARIANT CORDING</li> </ul>
3	<ul style="list-style-type: none"> <li>• C1130 ENGINE SIGNAL 1</li> <li>• C1144 ST ANG SEN SIGNAL</li> </ul>
4	<ul style="list-style-type: none"> <li>• C1109 BATTERY VOLTAGE [ABNORMAL]</li> <li>• C1111 PUMP MOTOR</li> <li>• C1114 MAIN RELAY</li> </ul>
5	<ul style="list-style-type: none"> <li>• C1101 RR RH SENSOR-1</li> <li>• C1102 RR LH SENSOR-1</li> <li>• C1103 FR RH SENSOR-1</li> <li>• C1104 FR LH SENSOR-1</li> <li>• C1105 RR RH SENSOR-2</li> <li>• C1106 RR LH SENSOR-2</li> <li>• C1107 FR RH SENSOR-2</li> <li>• C1108 FR LH SENSOR-2</li> <li>• C1115 ABS SENSOR [ABNORMAL SIGNAL]</li> <li>• C1116 STOP LAMP SW</li> <li>• C1120 FR LH IN ABS SOL</li> <li>• C1121 FR LH OUT ABS SOL</li> <li>• C1122 FR RH IN ABS SOL</li> <li>• C1123 FR RH OUT ABS SOL</li> <li>• C1124 RR LH IN ABS SOL</li> <li>• C1125 RR LH OUT ABS SOL</li> <li>• C1126 RR RH IN ABS SOL</li> <li>• C1127 RR RH OUT ABS SOL</li> <li>• C1142 PRESS SEN CIRCUIT</li> <li>• C1143 ST ANG SEN CIRCUIT</li> <li>• C1145 YAW RATE SENSOR</li> <li>• C1146 SIDE G-SEN CIRCUIT</li> <li>• C1164 CV 1</li> <li>• C1165 CV 2</li> <li>• C1166 SV 1</li> <li>• C1167 SV 2</li> </ul>
6	<ul style="list-style-type: none"> <li>• C1155 BR FLUID LEVEL LOW</li> </ul>

BRC

G

H

I

J

K

L

M

N

O

P

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

## DTC Index

INFOID:000000005492864

DTC	Items (CONSULT screen terms)	Reference
C1101	RR RH SENSOR-1	<a href="#">BRC-28, "DTC Logic"</a>
C1102	RR LH SENSOR-1	
C1103	FR RH SENSOR-1	
C1104	FR LH SENSOR-1	
C1105	RR RH SENSOR-2	<a href="#">BRC-31, "DTC Logic"</a>
C1106	RR LH SENSOR-2	
C1107	FR RH SENSOR-2	
C1108	FR LH SENSOR-2	
C1109	BATTERY VOLTAGE [ABNORMAL]	<a href="#">BRC-34, "DTC Logic"</a>
C1110	CONTROLLER FAILURE	<a href="#">BRC-36, "DTC Logic"</a>
C1111	PUMP MOTOR	<a href="#">BRC-37, "DTC Logic"</a>
C1115	ABS SENSOR [ABNORMAL SIGNAL]	<a href="#">BRC-39, "DTC Logic"</a>
C1116	STOP LAMP SW	<a href="#">BRC-42, "DTC Logic"</a>
C1120	FR LH IN ABS SOL	<a href="#">BRC-45, "DTC Logic"</a>
C1121	FR LH OUT ABS SOL	<a href="#">BRC-47, "DTC Logic"</a>
C1122	FR RH IN ABS SOL	<a href="#">BRC-45, "DTC Logic"</a>
C1123	FR RH OUT ABS SOL	<a href="#">BRC-47, "DTC Logic"</a>
C1124	RR LH IN ABS SOL	<a href="#">BRC-45, "DTC Logic"</a>
C1125	RR LH OUT ABS SOL	<a href="#">BRC-47, "DTC Logic"</a>
C1126	RR RH IN ABS SOL	<a href="#">BRC-45, "DTC Logic"</a>
C1127	RR RH OUT ABS SOL	<a href="#">BRC-47, "DTC Logic"</a>
C1130	ENGINE SIGNAL 1	<a href="#">BRC-49, "DTC Logic"</a>
C1140	ACTUAROR RLY	<a href="#">BRC-50, "DTC Logic"</a>
C1142	PRESS SEN CIRCUIT	<a href="#">BRC-52, "DTC Logic"</a>
C1143	ST ANG SEN CIRCUIT	<a href="#">BRC-54, "DTC Logic"</a>
C1144	ST ANG SEN SIGNAL	<a href="#">BRC-56, "DTC Logic"</a>
C1145	YAW RATE SENSOR	<a href="#">BRC-57, "DTC Logic"</a>
C1146	SIDE G-SEN CIRCUIT	
C1153	EMERGENCY BRAKE	<a href="#">BRC-36, "DTC Logic"</a>
C1155	BR FLUID LEVEL LOW	<a href="#">BRC-60, "DTC Logic"</a>
C1164	CV 1	<a href="#">BRC-62, "DTC Logic"</a>
C1165	CV 2	
C1166	SV 1	<a href="#">BRC-64, "DTC Logic"</a>
C1167	SV 2	
C1170	VARIANT CORDING	<a href="#">BRC-36, "DTC Logic"</a>
U1000	CAN COMM CIRCUIT	<a href="#">BRC-66, "DTC Logic"</a>
U1002	SYSTEM COMM	



# EXCESSIVE ABS FUNCTION OPERATION FREQUENCY

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

## SYMPTOM DIAGNOSIS

### EXCESSIVE ABS FUNCTION OPERATION FREQUENCY

#### Diagnosis Procedure

INFOID:000000005492865

#### 1. CHECK START

Check front and rear brake force distribution using a brake tester. Refer to [BR-43. "General Specifications"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check brake system.

#### 2. CHECK FRONT AND REAR AXLE

Make sure that there is no excessive play in the front and rear axles.

- Front: refer to [FAX-7. "Inspection"](#).
- Rear: refer to [RAX-4. "Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

#### 3. CHECK WHEEL SENSOR AND SENSOR ROTOR

Check the following.

- Wheel sensor installation for damage.
- Wheel sensor harness connector connection.
- Wheel sensor harness inspection.
- Sensor rotor installation for damage.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace wheel sensor or sensor rotor.

- Front wheel sensor: refer to [BRC-100. "FRONT WHEEL SENSOR : Exploded View"](#).
- Rear wheel sensor: refer to [BRC-101. "REAR WHEEL SENSOR : Exploded View"](#).
- Front sensor rotor: refer to [BRC-102. "FRONT SENSOR ROTOR : Removal and Installation"](#).
- Rear sensor rotor: refer to [BRC-102. "REAR SENSOR ROTOR : Removal and Installation"](#).

#### 4. CHECK ABS WARNING LAMP DISPLAY

Make sure that the ABS warning lamp is turned OFF for approximately 1 second after the ignition switch is turned ON or when driving.

Is the inspection result normal?

YES >> Normal

NO >> Perform self-diagnosis for "ABS" with CONSULT-III.

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# UNEXPECTED PEDAL REACTION

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

## UNEXPECTED PEDAL REACTION

### Diagnosis Procedure

INFOID:000000005492866

#### 1. CHECK BRAKE PEDAL STROKE

Check brake pedal stroke. Refer to [BR-7, "Inspection and Adjustment"](#).

Is the stroke too large?

- YES >>
- Bleed air from brake tube and hose. Refer to [BR-11, "Bleeding Brake System"](#).
  - Check brake fluid leakage. Refer to [BR-10, "Inspection"](#).
  - Check brake pedal, brake booster, and master cylinder for mount play, looseness, etc.
    - Brake pedal: refer to [BR-18, "Inspection and Adjustment"](#).
    - Brake master cylinder: refer to [BR-27, "Inspection"](#).
    - Brake booster: refer to [BR-29, "Inspection and Adjustment"](#).
    - Front disc brake: refer to [BR-38, "BRAKE CALIPER ASSEMBLY : Inspection"](#).
    - Rear drum brake: refer to [BR-41, "Inspection and Adjustment"](#).

NO >> GO TO 2.

#### 2. CHECK FUNCTION

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector to deactivate ABS. Check if braking force is normal in this condition. Connect harness connector after inspection.

Is the inspection result normal?

- YES >> Normal  
NO >> Check brake system.

# THE BRAKING DISTANCE IS LONG

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

## THE BRAKING DISTANCE IS LONG

### Diagnosis Procedure

INFOID:000000005492867

#### **CAUTION:**

The stopping distance on slippery road surfaces might be longer when the ABS is operating than when the ABS is not operating.

#### **1. CHECK FUNCTION**

1. Turn the ignition switch OFF
2. Disconnect ABS actuator and electric unit (control unit) harness connector to deactivate ABS. In this condition, check stopping distance. After inspection, connect harness connector.

Is the inspection result normal?

- YES >> Normal  
NO >> Check brake system.

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**BRC**

## ABS FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

---

### ABS FUNCTION DOES NOT OPERATE

#### Diagnosis Procedure

INFOID:000000005492868

**CAUTION:**

**ABS does not operate when speed is 10 km/h (6 MPH) or lower.**

**1**.CHECK ABS WARNING LAMP DISPLAY

---

Make sure that the ABS warning lamp is turned OFF for approximately 1 second after the ignition switch is turned ON or when driving.

Is the inspection result normal?

YES >> Normal

NO >> Perform self-diagnosis for "ABS" with CONSULT-III.

# PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

## PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

### Diagnosis Procedure

INFOID:000000005492869

#### **CAUTION:**

Under the following conditions, ABS is activated and vibration is felt when brake pedal is lightly depressed (just place a foot on it). However, this is normal.

- When shifting gears
- When driving on slippery road
- During cornering at high speed
- When passing over bumps or grooves [at approximately 50 mm (1.97 in) or more]
- When pulling away just after starting engine [at approximately 10 km/h (6 MPH) or higher]

#### 1. SYMPTOM CHECK 1

Check that there are pedal vibrations when the engine is started.

Do vibrations occur?

YES >> GO TO 2.

NO >> Inspect the brake pedal. Refer to [BR-18, "Inspection and Adjustment"](#).

#### 2. SYMPTOM CHECK 2

Check that there are ABS operation noises when the engine is started.

Do the operation noises occur?

YES >> GO TO 3.

NO >> Perform self-diagnosis for "ABS" with CONSULT-III.

#### 3. SYMPTOM CHECK 3

Check symptoms when electrical component (headlamps, etc.) switches are operated.

Do symptoms occur?

YES >> Check if there is a radio, antenna, antenna lead wire, or wiring close to the control unit. If there is, move it farther away.

NO >> Normal

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# VEHICLE JERKS DURING VDC/TCS/ABS CONTROL

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

## VEHICLE JERKS DURING VDC/TCS/ABS CONTROL

### Diagnosis Procedure

INFOID:000000005492870

#### 1.SYMPTOM CHECK

Check if the vehicle jerks during VDC/TCS/ABS control.

Is the inspection result normal?

- YES >> Normal.
- NO >> GO TO 2.

#### 2.CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis for "ABS" with CONSULT-III.

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Check corresponding items, make repairs, and perform self-diagnosis for "ABS" with CONSULT-III.

#### 3.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector, and terminal for deformation, disconnection, looseness, etc.
3. Securely connect harness connectors and perform ABS actuator and electric unit (control unit) self-diagnosis.

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> If poor contact, damage, open or short circuit of harness connector is found, repair or replace.

#### 4.CHECK ECM AND TCM SELF-DIAGNOSIS RESULTS

Perform self-diagnosis for "ENGINE" and "TRANSMISSION" with CONSULT-III.

Are self-diagnosis results indicated?

- YES >> Check the corresponding items.
- NO >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-103, "Exploded View"](#).

# NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

## NORMAL OPERATING CONDITION

### Description

INFOID:000000005492871

Symptom	Result
Slight vibrations are felt on the brake pedal and the operation noises occur, when VDC, TCS or ABS is activated.	This is a normal condition due to the VDC, TCS or ABS activation.
Stopping distance is longer than that of vehicles without ABS when the vehicle drives on rough, gravel, or snow-covered (fresh, deep snow) roads.	
The brake pedal moves and generates noises, when TCS or VDC is activated due to rapid acceleration or sharp turn.	
The brake pedal vibrates and motor operation noises occur from the engine room, after the engine starts and just after the vehicle starts.	This is a normal, and it is caused by the ABS operation check.
Depending on the road conditions, the driver may experience a sluggish feel.	This is normal, because TCS places the highest priority on the optimum traction (stability).
TCS may activate momentarily if wheel speed changes when driving over location where friction coefficient varies, when downshifting, or when fully depressing accelerator pedal.	
The ABS warning lamp, VDC OFF indicator lamp and SLIP indicator lamp may turn ON when the vehicle is subject to strong shaking or large vibration, such as when the vehicle is rotating on a turntable or located on a ship while the engine is running.	In this case, restart the engine on a normal road. If the normal condition is restored, there is no malfunction. At that time, erase the self-diagnosis memory.
VDC may not operate normally or the ABS warning lamp, VDC OFF indicator lamp, and SLIP indicator lamp may illuminate, when running on a special road that is extremely slanted (e.g. bank in a circuit course).	
A malfunction may occur in the yaw rate/side G sensor system, when the vehicle turns sharply, such as during a spin turn, axle turn, or drift driving, while the VDC function is off (VDC OFF indicator lamp illuminated).	
The vehicle speed will not increase even though the accelerator pedal is depressed, when inspecting the speedometer on a 2-wheel chassis dynamometer.	Normal (Deactivate the VDC/TCS function before performing an inspection on a chassis dynamometer.)
VDC OFF indicator lamp and SLIP indicator lamp may simultaneously turn on when low tire pressure warning lamp turns on.	This is not a VDC system error but results from characteristic change of tire.

A  
B  
C  
D  
E  
**BRC**  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005729849

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

**WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution Necessary for Steering Wheel Rotation after Battery Disconnect

INFOID:000000005729850

**NOTE:**

- Before removing and installing any control units, first turn the push-button ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

For vehicle with steering lock unit, if the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the operation procedure below before starting the repair operation.

#### OPERATION PROCEDURE

1. Connect both battery cables.

**NOTE:**

Supply power using jumper cables if battery is discharged.

2. Turn the push-button ignition switch to ACC position.  
(At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.



# PRECAUTIONS

[VDC/TCS/ABS]


## < PRECAUTION >

- When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the push-button ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the push-button ignition switch is turned to LOCK position.)
- Perform self-diagnosis check of all control units using CONSULT-III.

### Precaution for Procedure without Cowl Top Cover

INFOID:000000005729851

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

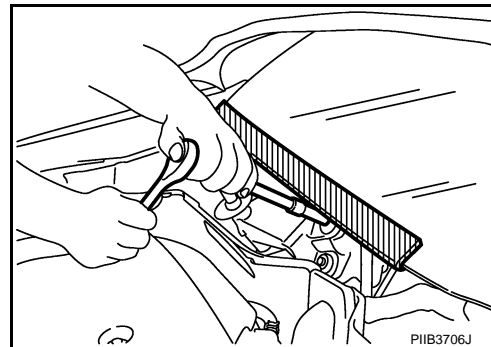


### Precaution for Brake System

INFOID:000000005492874

#### **WARNING:**

**Clean any dust from the front brake and rear brake with a vacuum dust collector. Never blow with compressed air.**

- Brake fluid use refer to [MA-10, "Fluids and Lubricants"](#).
- Never reuse drained brake fluid.
- Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.
- Never use mineral oils such as gasoline or light oil. They may damage rubber parts and cause improper operation.
- Always loosen the brake tube flare nut with a flare nut wrench.
- Tighten the brake tube flare nut to the specified torque with a crow-foot (A) and torque wrench (B).
- Always conform the specified tightening torque when installing the brake pipes.
- Brake system is an important safety part. If a brake fluid leak is detected, always disassemble the affected part. If a malfunction is detected, replace part with a new one.
- Turn the ignition switch OFF and disconnect the ABS actuator and electric unit (control unit) harness connector or the battery negative terminal before performing the work.

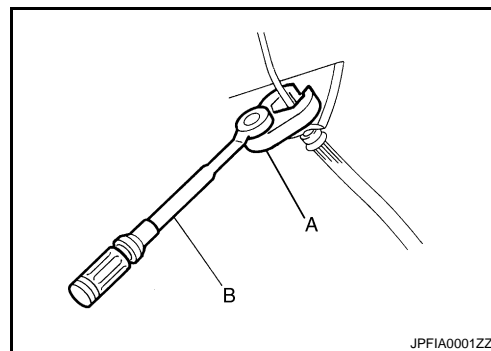

### Precaution for Brake Control

INFOID:000000005492875

- Slight vibrations are felt on the brake pedal and the operation noises occur, when VDC, TCS or ABS is activated.
- When starting engine or when starting vehicle just after starting engine, brake pedal may vibrate or motor operating noise may be heard from engine compartment. This is normal condition.
- Stopping distance is longer than that of vehicles without ABS when the vehicle drives on rough, gravel, or snow-covered (fresh, deep snow) roads.
- When an error is indicated by ABS or another warning lamp, collect all necessary information from customer (what symptoms are present under what conditions) and check for estimate causes before starting diagnostic servicing. Besides electrical system inspection, check brake booster operation, brake fluid level, and oil leaks.
- If tire size and type are used in an improper combination, or brake pads are not Genuine NISSAN parts, stopping distance or steering stability may deteriorate.
- ABS might be out of order or malfunctions by putting a radio (wiring inclusive), an antenna and a lead-in wire near the control unit.
- VDC system may not operate normally or a VDC OFF indicator lamp or SLIP indicator lamp may light.

# PRECAUTIONS

[VDC/TCS/ABS]

## < PRECAUTION >

- When replacing the following parts with parts other than genuine parts or making modifications: Suspension related parts (shock absorber, spring, bushing, etc.), tires, wheels (other than specified sizes), brake-related parts (pad, rotor, caliper, etc.), engine-related parts (muffler, ECM, etc.) and body reinforcement-related parts (roll bar, tower bar, etc.).
- When driving with worn or deteriorated suspension, tires and brake-related parts.

## Precautions for Harness Repair


INFOID:000000005492876

### COMMUNICATION LINE

- Solder the repaired area and wrap tape around the soldered area.

**NOTE:**

A fray of twisted lines must be within 110 mm (4.33 in).

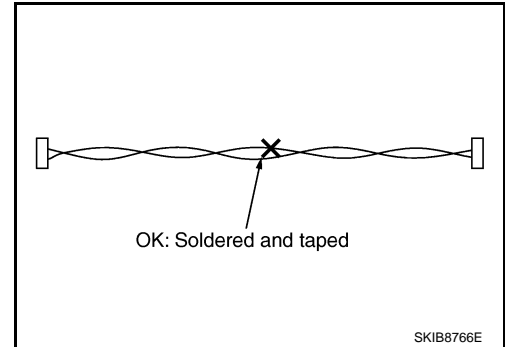


- Bypass connection is never allowed at the repaired area.

**NOTE:**

Bypass connection may cause communication error as spliced wires that are separate from the main line or twisted lines lose noise immunity.

- Replace the applicable harness as an assembly if error is detected on the shield lines of communication line.

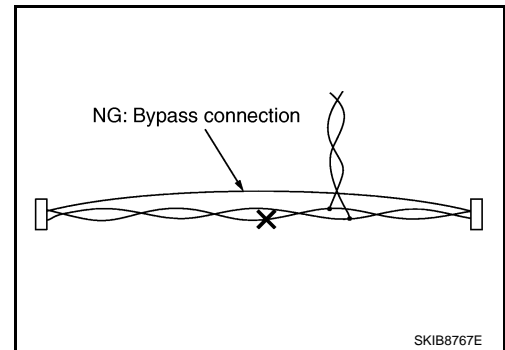

# PREPARATION

< PREPARATION >

[VDC/TCS/ABS]


## PREPARATION

### PREPARATION

#### Commercial Service Tools

INFOID:000000005492877

Tool name	Description
Power tool	Loosening bolts and nuts

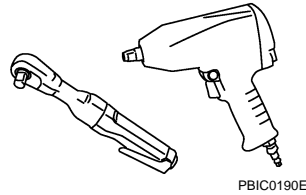

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# WHEEL SENSOR

< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]


## REMOVAL AND INSTALLATION

### WHEEL SENSOR

#### FRONT WHEEL SENSOR

#### FRONT WHEEL SENSOR : Exploded View

INFOID:000000005492878

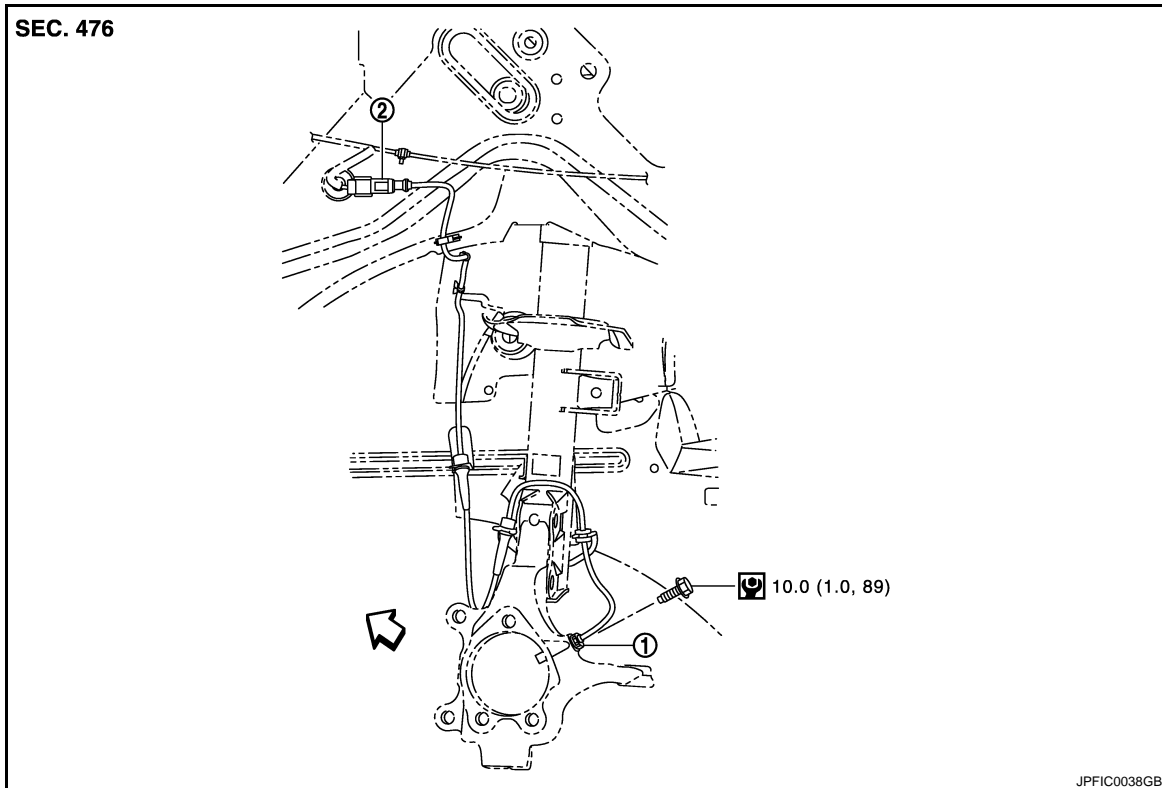

1. Front LH wheel sensor
2. Front LH wheel sensor harness connector

A. Color line

←: Vehicle front

Refer to [GI-4, "Components"](#) for symbols in the figure.

#### NOTE:

The above figure (front side) shows left side. Right side is the mirror image.

#### FRONT WHEEL SENSOR : Removal and Installation

INFOID:000000005492879

#### REMOVAL

1. Remove the fender protector. Refer to [EXT-22, "FENDER PROTECTOR : Exploded View"](#).
2. Remove the wheel sensor from steering knuckle.

#### CAUTION:

**Never twist sensor harness as much as possible, when removing it. Pull wheel sensors out without pulling sensor harness.**

3. Remove the wheel sensor harness from vehicle.

#### CAUTION:

**Never twist sensor harness as much as possible, when removing it. Pull wheel sensors out without pulling sensor harness.**

#### INSTALLATION

Note the following, and install in the reverse order of the removal.

- Make sure there is no foreign material such as iron chips on and in the mounting hole of the wheel sensor.

# WHEEL SENSOR

< REMOVAL AND INSTALLATION >


[VDC/TCS/ABS]

- Make sure no foreign material has been caught in the sensor rotor. Remove any foreign material and clean the mount. Replace the wheel sensor if necessary.
- When installing wheel sensor, be sure to press rubber grommets in until they lock at locations shown above in the figure. When installed, harness must not be twisted.

## REAR WHEEL SENSOR

### REAR WHEEL SENSOR : Exploded View

INFOID:000000005492880

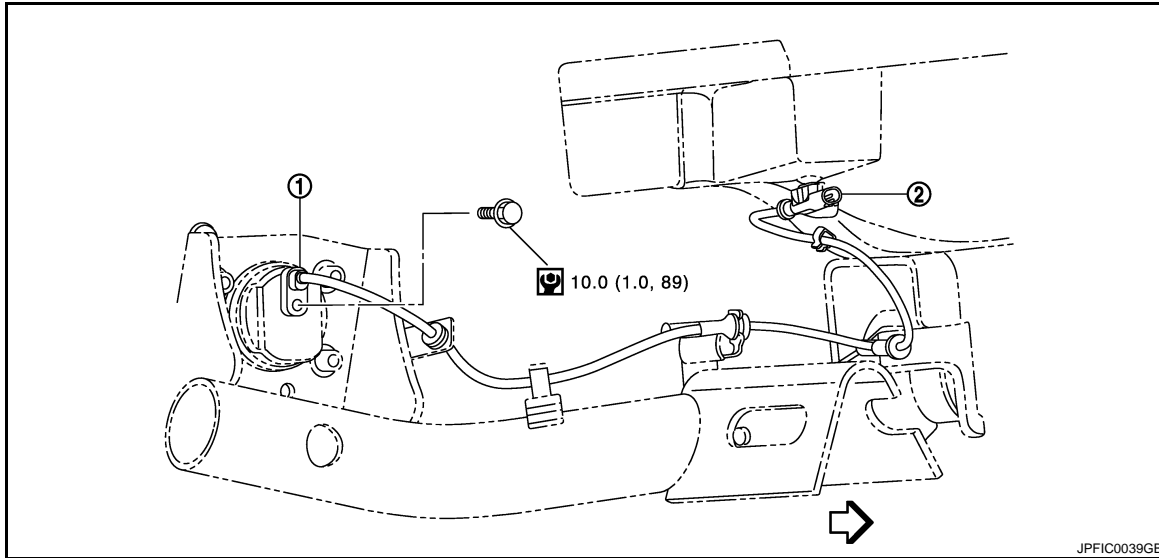

1. Rear LH wheel sensor

2. Rear LH wheel sensor harness connector

←: Vehicle front

Refer to [GI-4, "Components"](#) for symbols in the figure.

### REAR WHEEL SENSOR : Removal and Installation

INFOID:000000005492881

#### REMOVAL

1. Remove wheel sensor from wheel hub and bearing assembly.  
**CAUTION:**  
**Never twist sensor harness as much as possible, when removing it. Pull wheel sensors out without pulling sensor harness.**
2. Remove wheel sensor harness from vehicle.  
**CAUTION:**  
**Never twist sensor harness as much as possible, when removing it. Pull wheel sensors out without pulling sensor harness.**

#### INSTALLATION

Note the following, and install in the reverse order of the removal.

- Make sure there is no foreign material such as iron chips on and in the mounting hole of the wheel sensor.
- Make sure no foreign material has been caught in the sensor rotor. Remove any foreign material and clean the mount. Replace the wheel sensor if necessary.
- When installing wheel sensor, be sure to press rubber grommets in until they lock at locations shown above in the figure. When installed, harness must not be twisted.

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# SENSOR ROTOR

< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

## SENSOR ROTOR

### FRONT SENSOR ROTOR

#### FRONT SENSOR ROTOR : Removal and Installation

INFOID:000000005492882

**CAUTION:**

**Sensor rotor cannot be disassembled. Remove the sensor rotor together with hub bearing assembly.**

#### REMOVAL

Remove the wheel hub and bearing assembly. Refer to [FAX-9, "Exploded View"](#).

#### INSTALLATION

Install the wheel hub and bearing assembly. Refer to [FAX-9, "Exploded View"](#).

#### FRONT SENSOR ROTOR : Disassembly and Assembly

INFOID:000000005492883

Sensor rotor cannot be disassembled. Remove the sensor rotor together with hub bearing assembly.

### REAR SENSOR ROTOR

#### REAR SENSOR ROTOR : Removal and Installation

INFOID:000000005492884

**CAUTION:**

**Sensor rotor cannot be disassembled. Remove the sensor rotor together with hub bearing assembly.**

#### REMOVAL

Remove the wheel hub and bearing assembly. Refer to [RAX-5, "Exploded View"](#).

#### INSTALLATION

Install the wheel hub and bearing assembly. Refer to [RAX-5, "Exploded View"](#).

#### REAR SENSOR ROTOR : Disassembly and Assembly

INFOID:000000005492885

Sensor rotor cannot be disassembled. Remove the sensor rotor together with hub bearing assembly.

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)


< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

## ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Exploded View

INFOID:000000005492886

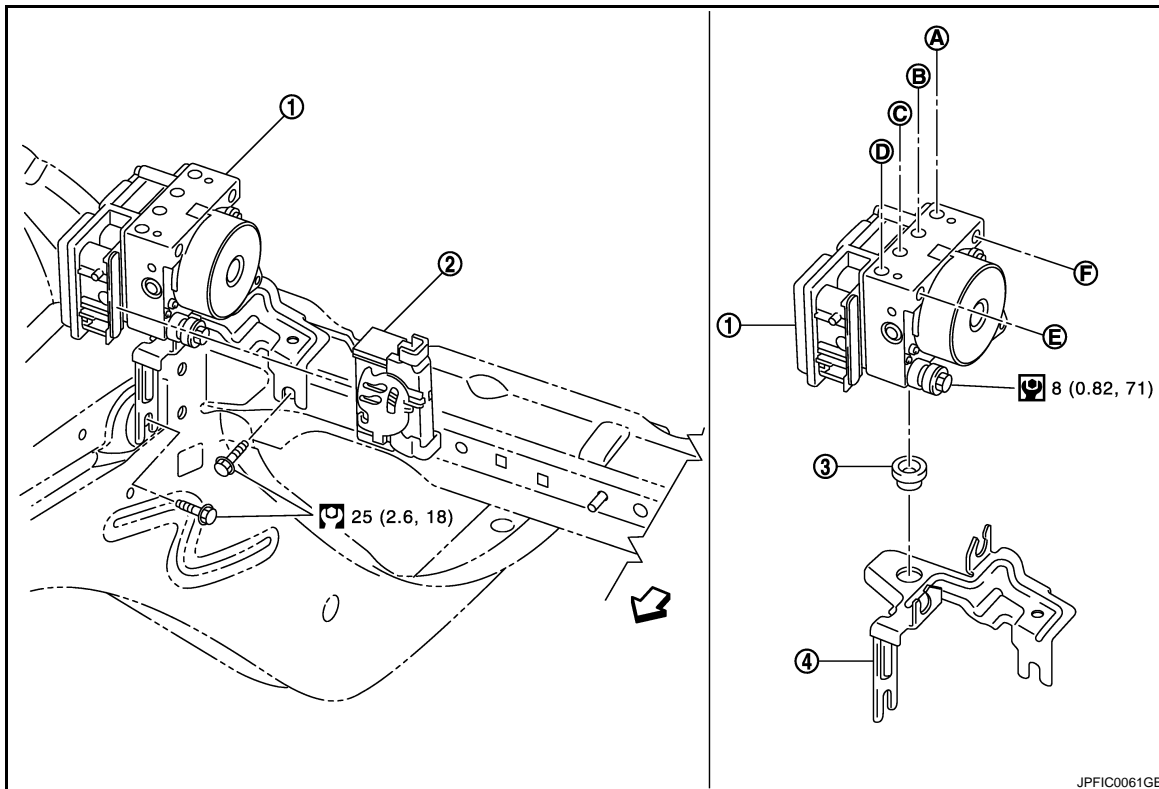

A

B

C

D

E

BRC

G

H

I

J

K

L

M

N

O

P

- |  |                                      |                                    |
|--|--------------------------------------|------------------------------------|
| 1. ABS actuator and electric unit (control unit) | 2. Harness connector                 | 3. Bushing                         |
| 4. Bracket                                       |                                      |                                    |
| A. To front LH brake caliper                     | B. To rear RH wheel cylinder         | C. To Rear LH wheel cylinder       |
| D. To front RH brake caliper                     | E. To master cylinder secondary side | F. To master cylinder primary side |

← Vehicle front

Refer to [GI-4, "Components"](#) for symbols in the figure.

## Removal and Installation

INFOID:000000005492887

### REMOVAL

1. Disconnect the battery cable from negative terminal.
2. Remove cowl top cover and extension cowl top. Refer to [BR-20, "FRONT : Exploded View"](#).
3. Drain brake fluid. Refer to [BR-10, "Draining"](#).
4. Disconnect ABS actuator and electric unit (control unit) harness connector.
5. Loosen brake tube flare nuts, and then remove brake tubes from ABS actuator and electric unit (control unit). Refer to [BR-20, "FRONT : Exploded View"](#).  
**CAUTION:**  
**Never scratch the flare nut and the brake tube.**
6. Remove ABS actuator and electric unit (control unit) and bracket from vehicle.  
**CAUTION:**
  - Never apply excessive impact to ABS actuator and electric unit (control unit), such as dropping it.
  - Never remove actuator by holding harness.
7. Remove bracket and bush from ABS actuator and electric unit (control unit).

# ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

## INSTALLATION

Note the following, and install in the reverse order of removal.

- Install, use flare nut crowfoot and torque wrench. Refer to [BR-20, "FRONT : Exploded View"](#).

### **CAUTION:**

**Never scratch the flare nut and the brake tube.**

- Never apply excessive impact to ABS actuator and electric unit (control unit), such as dropping it.
- Never install actuator by holding harness.
- Installing harness connector in the ABS actuator and electric unit (control unit), make sure harness connector is securely locked.

## Adjustment

INFOID:000000005492888

## ADJUSTMENT AFTER INSTALLATION

1. Refill with new brake fluid and perform the air bleeding. Refer to [BR-11, "Bleeding Brake System"](#).

### **CAUTION:**

**Never reuse drained brake fluid.**

2. When replacing ABS actuator and electric unit (control unit), make sure adjust neutral position of steering angle sensor. Refer to [BRC-9, "Description"](#).



# YAW RATE/SIDE G SENSOR


< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

## YAW RATE/SIDE G SENSOR

### Exploded View

INFOID:000000005492889

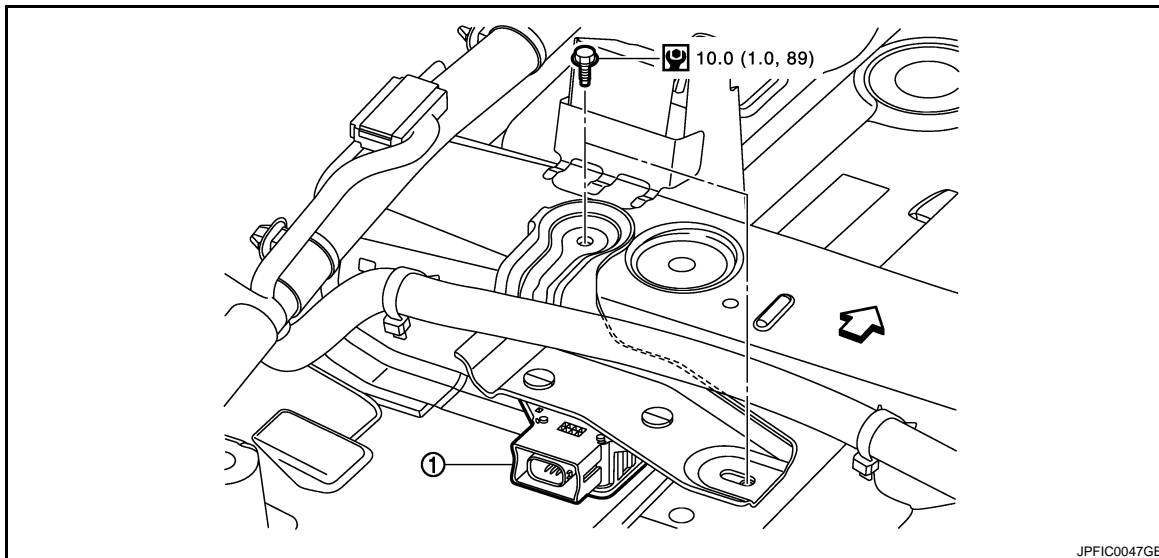

1. Yaw rate/side G sensor

←: Vehicle front

Refer to [GI-4, "Components"](#) for symbols in the figure.

### Removal and Installation

INFOID:000000005492890

#### REMOVAL

##### **CAUTION:**

- Never drop or strike yaw rate/side G sensor, or never use power tool etc., because yaw rate/side G sensor is sensitive to the impact.

1. Remove front (left side) seat. Refer to [SE-11, "Exploded View"](#).
2. Remove dash side finisher and front kicking plate inner. Refer to [INT-15, "Exploded View"](#).
3. Remove floor trim. Refer to [INT-18, "Exploded View"](#).
4. Disconnect yaw rate/side G sensor harness connector.
5. Remove yaw rate/side G sensor.

#### INSTALLATION

Note the following, and install in the reverse order of removal.

- Never drop or strike yaw rate/side G sensor, or never use power tool etc., because yaw rate/side G sensor is sensitive to the impact.

A  
B  
C  
D  
E  
BRC  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# STEERING ANGLE SENSOR


< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

## STEERING ANGLE SENSOR

### Exploded View

INFOID:000000005492891

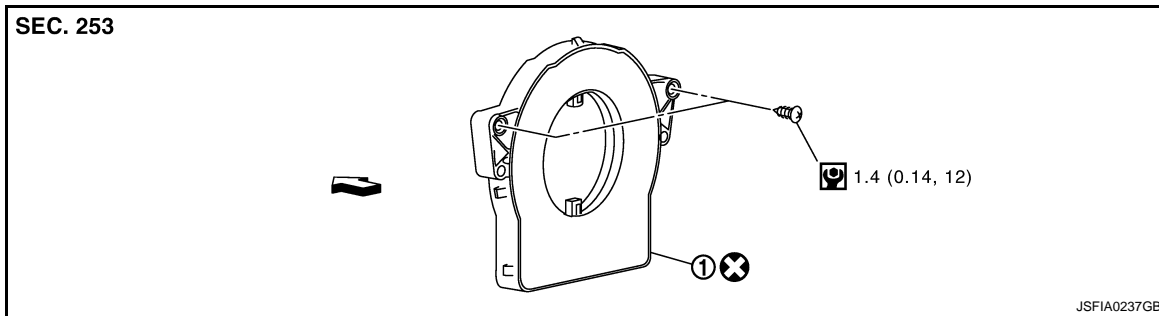

1. Steering angle sensor

↔: Vehicle front

Refer to [GI-4, "Components"](#) for the symbols in the figure.

### Removal and Installation

INFOID:000000005492892

#### REMOVAL

1. Remove spiral cable assembly. Refer to [SR-14, "Exploded View"](#).
2. Remove steering angle sensor from spiral cable assembly.

#### INSTALLATION

Note the following, and install in the reverse order of removal.

- Never reuse steering angle sensor.

### Adjustment

INFOID:000000005492893

Make sure to adjust neutral position of steering angle sensor. Refer to [BRC-9, "Description"](#).

# VDC OFF SWITCH

< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

## VDC OFF SWITCH

### Removal and Installation

INFOID:000000005492894

#### REMOVAL

1. Remove Instrument lower panel LH. Refer to [IP-12, "Exploded View"](#).
2. Remove VDC OFF switch.

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

**BRC**