

MWI

SECTION

METER, WARNING LAMP & INDICATOR

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

CONTENTS

BASIC INSPECTION	4	ODO/TRIP METER	15
DIAGNOSIS AND REPAIR WORKFLOW	4	ODO/TRIP METER : System Diagram	15
Work flow	4	ODO/TRIP METER : System Description	15
SYSTEM DESCRIPTION	6	ODO/TRIP METER : Component Parts Location	16
METER SYSTEM	6	ODO/TRIP METER : Component Description	16
METER SYSTEM	6	SHIFT POSITION INDICATOR	16
METER SYSTEM : System Diagram	6	SHIFT POSITION INDICATOR : System Diagram	17
METER SYSTEM : System Description	6	SHIFT POSITION INDICATOR : System Description	17
METER SYSTEM : Component Parts Location	8	SHIFT POSITION INDICATOR : Component Parts Location	17
METER SYSTEM : Component Description	9	SHIFT POSITION INDICATOR : Component Description	18
SPEEDOMETER	9	WARNING LAMPS/INDICATOR LAMPS	18
SPEEDOMETER : System Diagram	9	WARNING LAMPS/INDICATOR LAMPS : System Diagram	18
SPEEDOMETER : System Description	9	WARNING LAMPS/INDICATOR LAMPS : System Description	18
SPEEDOMETER : Component Parts Location	10	WARNING LAMPS/INDICATOR LAMPS : Component Parts Location	19
SPEEDOMETER : Component Description	10	WARNING LAMPS/INDICATOR LAMPS : Component Description	19
TACHOMETER	10	METER ILLUMINATION CONTROL	20
TACHOMETER : System Diagram	11	METER ILLUMINATION CONTROL : System Diagram	20
TACHOMETER : System Description	11	METER ILLUMINATION CONTROL : System Description	20
TACHOMETER : Component Parts Location	11	METER ILLUMINATION CONTROL : Component Parts Location	21
TACHOMETER : Component Description	12	METER ILLUMINATION CONTROL : Component Description	21
ENGINE COOLANT TEMPERATURE GAUGE	12	METER EFFECT FUNCTION	22
ENGINE COOLANT TEMPERATURE GAUGE : System Diagram	12	METER EFFECT FUNCTION : System Diagram	22
ENGINE COOLANT TEMPERATURE GAUGE : System Description	12	METER EFFECT FUNCTION : System Description	22
ENGINE COOLANT TEMPERATURE GAUGE : Component Parts Location	13	METER EFFECT FUNCTION : Component Parts Location	23
ENGINE COOLANT TEMPERATURE GAUGE : Component Description	13		
FUEL GAUGE	13		
FUEL GAUGE : System Diagram	14		
FUEL GAUGE : System Description	14		
FUEL GAUGE : Component Parts Location	14		
FUEL GAUGE : Component Description	15		

MWI

METER EFFECT FUNCTION : Component Description	23	OIL PRESSURE SWITCH SIGNAL CIRCUIT ...	44
		Description	44
INFORMATION DISPLAY	23	Component Function Check	44
INFORMATION DISPLAY : System Diagram	24	Diagnosis Procedure	44
INFORMATION DISPLAY : System Description ...	24	Component Inspection	44
INFORMATION DISPLAY : Component Parts Location	27	WASHER LEVEL SWITCH SIGNAL CIRCUIT..	46
INFORMATION DISPLAY : Component Description	27	Description	46
DIAGNOSIS SYSTEM (METER)	29	Diagnosis Procedure	46
Diagnosis Description	29	Component Inspection	46
CONSULT-III Function (METER/M&A)	30	A/C AUTO AMP. CONNECTION RECOGNITION SIGNAL CIRCUIT	48
DTC/CIRCUIT DIAGNOSIS	34	Description	48
U1000 CAN COMM CIRCUIT	34	Diagnosis Procedure	48
Description	34	ECU DIAGNOSIS INFORMATION	49
DTC Logic	34	COMBINATION METER	49
Diagnosis Procedure	34	Reference Value	49
U1010 CONTROL UNIT (CAN)	35	Wiring Diagram - METER -	55
Description	35	Fail-Safe	62
DTC Logic	35	DTC Index	63
Diagnosis Procedure	35	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	64
B2205 VEHICLE SPEED	36	WITH INTELLIGENT KEY	64
Description	36	WITH INTELLIGENT KEY : Reference Value	64
DTC Logic	36	WITH INTELLIGENT KEY : Wiring Diagram —	
Diagnosis Procedure	36	IPDM E/R —	71
B2267 ENGINE SPEED	37	WITH INTELLIGENT KEY : Fail-Safe	74
Description	37	WITH INTELLIGENT KEY : DTC Index	76
DTC Logic	37	WITHOUT INTELLIGENT KEY	76
Diagnosis Procedure	37	WITHOUT INTELLIGENT KEY : Reference Value... ..	76
B2268 WATER TEMP	38	WITHOUT INTELLIGENT KEY : Wiring Diagram	
Description	38	— IPDM E/R —	83
DTC Logic	38	WITHOUT INTELLIGENT KEY : Fail-Safe	86
Diagnosis Procedure	38	WITHOUT INTELLIGENT KEY : DTC Index	88
POWER SUPPLY AND GROUND CIRCUIT	39	SYMPTOM DIAGNOSIS	89
COMBINATION METER	39	THE FUEL GAUGE INDICATOR DOES NOT OPERATE	89
COMBINATION METER : Diagnosis Procedure ...	39	Description	89
IPDM E/R (WITH INTELLIGENT KEY SYSTEM)	39	Diagnosis Procedure	89
IPDM E/R (WITH INTELLIGENT KEY SYSTEM) :		THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON	90
Diagnosis Procedure	39	Description	90
IPDM E/R (WITHOUT INTELLIGENT KEY SYSTEM)	40	Diagnosis Procedure	90
IPDM E/R (WITHOUT INTELLIGENT KEY SYSTEM) :		THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF	91
Diagnosis Procedure	40	Description	91
FUEL LEVEL SENSOR SIGNAL CIRCUIT	42	Diagnosis Procedure	91
Description	42	THE AMBIENT TEMPERATURE DISPLAY IS INCORRECT	92
Component Function Check	42	Description	92
Diagnosis Procedure	42		
Component Inspection	43		

Diagnosis Procedure	92	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	95	A
THE LOW WASHER FLUID WARNING LAMP DOES NOT TURN ON OR OFF	93	PREPARATION	96	B
Description	93	PREPARATION	96	C
Diagnosis Procedure	93	Commercial Service Tools	96	
NORMAL OPERATING CONDITION	94	REMOVAL AND INSTALLATION	97	
INFORMATION DISPLAY	94	COMBINATION METER	97	D
INFORMATION DISPLAY : Description	94	Exploded View	97	
PRECAUTION	95	Removal and Installation	97	E
PRECAUTIONS	95	Disassembly and Assembly	97	F
				G
				H
				I
				J
				K
				L
				M
				O
				P

MWI

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work flow

INFOID:000000005490688

OVERALL SEQUENCE

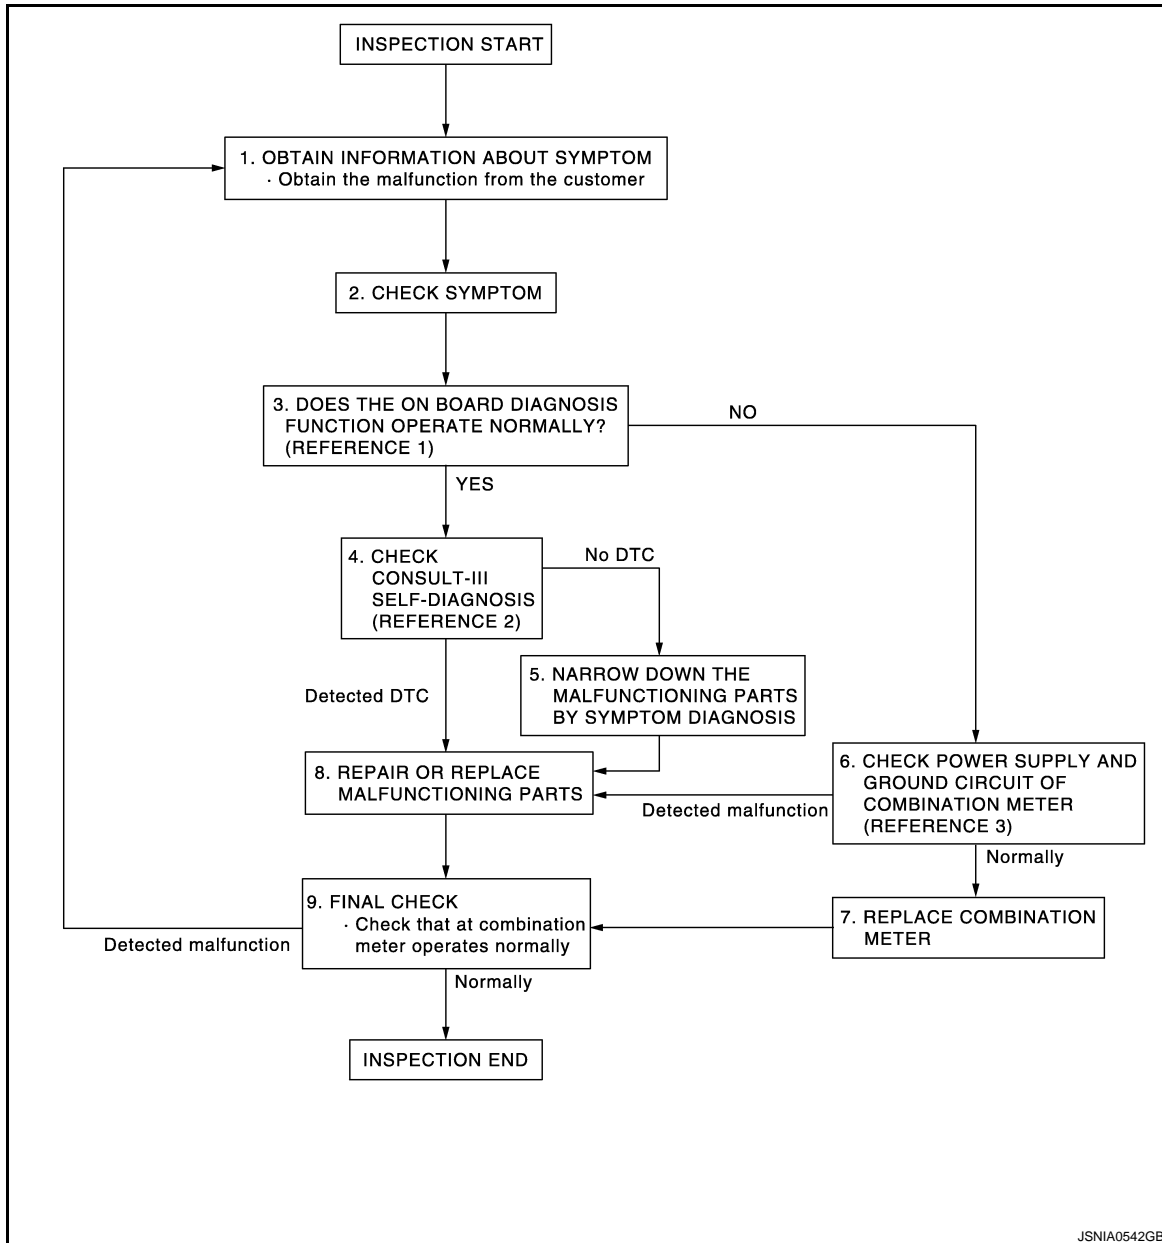

- Reference 1...[MWI-29, "Diagnosis Description"](#).
- Reference 2...[MWI-63, "DTC Index"](#).
- Reference 3...[MWI-39, "COMBINATION METER : Diagnosis Procedure"](#).

DETAILED FLOW

1.OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain as much information as possible about the conditions and environment under which the malfunction occurred.

>> GO TO 2.

2.CHECK SYMPTOM

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

- Check the symptom based on the information obtained from the customer.
- Check that any other malfunctions are present.

>> GO TO 3.

3.CHECK ON BOARD DIAGNOSIS OPERATION

Check that the on board diagnosis function operates. Refer to [MWI-29, "Diagnosis Description"](#).

Does the on board diagnosis function operate normally?

YES >> GO TO 4.

NO >> GO TO 6.

4.CHECK CONSULT-III SELF-DIAGNOSIS RESULTS

Connect CONSULT-III and perform self-diagnosis. Refer to [MWI-30, "CONSULT-III Function \(METER/M&A\)"](#).

Are self-diagnosis results normal?

YES >> GO TO 5.

NO >> GO TO 8.

5.NARROW DOWN THE MALFUNCTIONING PARTS BY SYMPTOM DIAGNOSIS

Perform symptom diagnosis and narrow down the malfunctioning parts.

>> GO TO 8.

6.CHECK COMBINATION METER POWER SUPPLY AND GROUND CIRCUITS

Inspect combination meter power supply and ground circuits. Refer to [MWI-39, "COMBINATION METER : Diagnosis Procedure"](#).

Is inspection result OK?

YES >> GO TO 7.

NO >> GO TO 8.

7.REPLACE COMBINATION METER

Replace combination meter.

>> GO TO 9.

8.REPAIR OR REPLACE MALFUNCTIONING PARTS

Repair or replace the malfunctioning parts.

NOTE:

If DTC is displayed, erase DTC after repair or replace malfunctioning parts.

>> GO TO 9.

9.FINAL CHECK

Check that the combination meter operates normally.

Do they operate normally?

YES >> INSPECTION END

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

METER SYSTEM

< SYSTEM DESCRIPTION >


SYSTEM DESCRIPTION

METER SYSTEM

METER SYSTEM

METER SYSTEM : System Diagram

INFOID:000000005490689

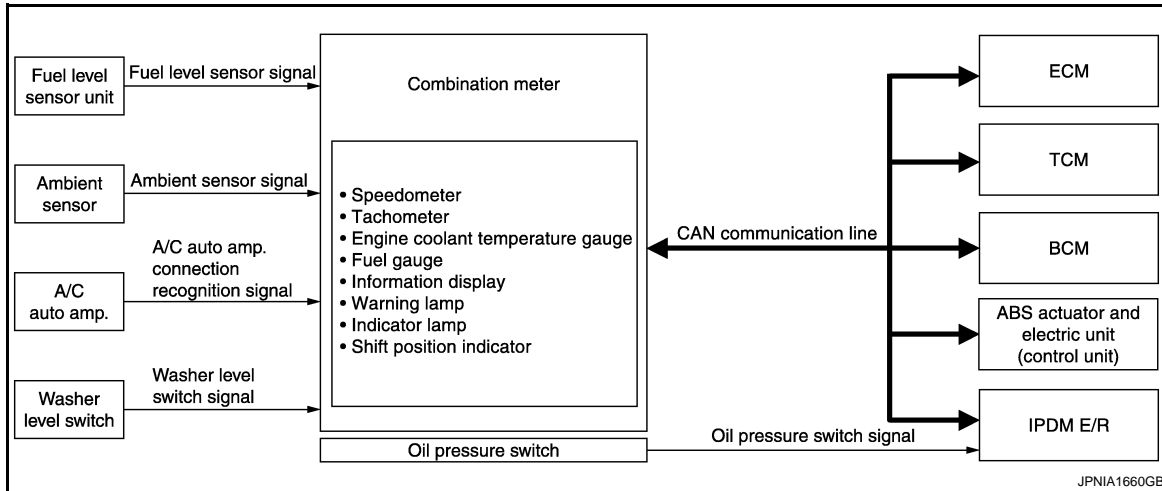

METER SYSTEM : System Description

INFOID:000000005490690

COMBINATION METER

- The combination meter receives the information required to control the operation of each gauge, indicator/warning lamp, and information display via CAN communication from each unit, each switch, and sensor.
- The combination meter incorporates a trip computer that displays, warnings and information on the information display according to the information received from various units.
- The combination meter incorporates a buzzer function that sounds an audible alarm with the integrated buzzer device. Refer to [WCS-5. "WARNING CHIME SYSTEM : System Description"](#) for further details.
- The combination meter integrates the following check function.

Meter drive circuit check function list

- Speedometer
- Tachometer

Segment display check function list

- Odo/trip meter
- Information display
- Engine coolant temperature gauge
- Fuel gauge
- Shift position indicator (CVT models)
- Start-up lamp (M/T models)

METER CONTROL FUNCTION LIST


System	Description	Reference
Meter/gauge	Speedometer	Indicates vehicle speed.
	Tachometer	Indicates engine speed.
	Fuel gauge	Indicates fuel level.
	Engine coolant temperature gauge	Indicates engine coolant temperature.

METER SYSTEM

< SYSTEM DESCRIPTION >

System	Description	Reference	
Odo/trip meter	Displays vehicle distance.	MWI-15, "ODO/TRIP METER : System Description"	
Shift position indicator	Displays shift position.	MWI-17, "SHIFT POSITION INDICATOR : System Description"	
Warning lamp/indicator lamp	Oil pressure warning lamp	The warning lamp turns ON or turns OFF, according to engine hydraulic pressure.	MWI-18, "WARNING LAMPS/INDICATOR LAMPS : System Description"
	Low washer fluid warning lamp	Turns ON or turns OFF, judged by the washer fluid level.	MWI-18, "WARNING LAMPS/INDICATOR LAMPS : System Description"
Meter illumination control	Meter illumination on/off control function	The meter illumination turns ON/OFF, according to the status of ignition switch and a cranking condition.	MWI-20, "METER ILLUMINATION CONTROL : System Description"
	Meter illumination control function	The meter illumination is switched between Daytime and Nighttime modes, according to the light switch position.	
Meter effect function	Engine-start effect function	When starting the engine, combination meter illumination and the movement of the tachometer and speedometer pointers provide the driver with the comfort.	MWI-22, "METER EFFECT FUNCTION : System Description"
Information display	Instantaneous fuel consumption	Displays instantaneous fuel consumption.	MWI-24, "INFORMATION DISPLAY : System Description"
	Average fuel consumption	Displays average fuel consumption.	
	Possible driving distance	Displays possible driving distance.	
	Average vehicle speed	Displays average vehicle speed.	
	Ambient air temperature	Displays ambient air temperature.	
	ICY warning (low ambient temperature)	Displays low ambient temperature warning.	
	Low fuel warning	Displays low fuel warning.	
	Maintenance	Displays maintenance information.	
Travel time	Displays travel time.		

ARRANGEMENT OF COMBINATION METER

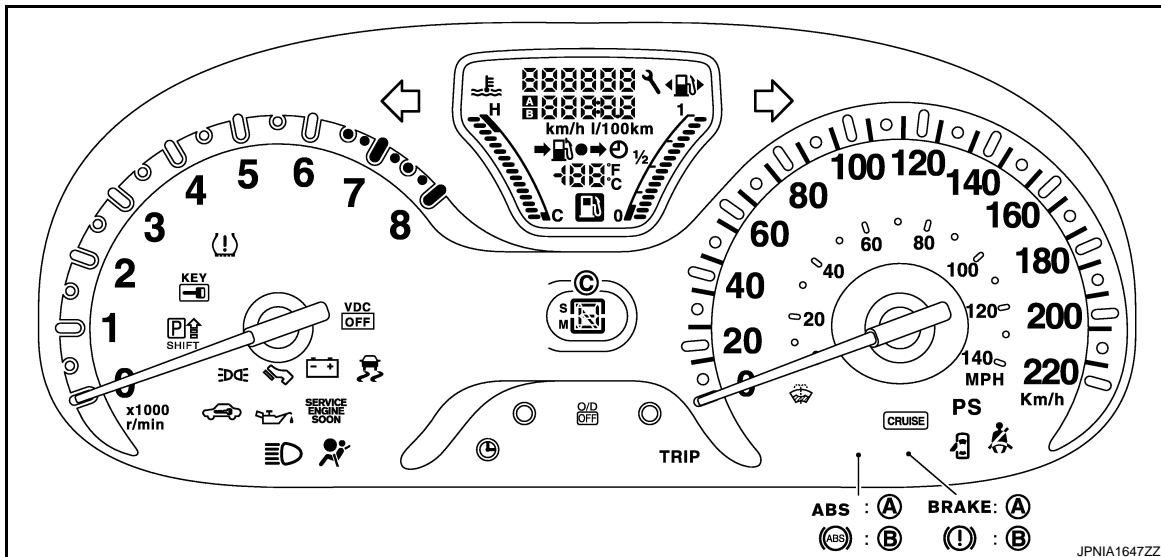

A. For USA

B. Except for USA


C. For A/T models (M/T models include start-up lamp here)

METER SYSTEM

< SYSTEM DESCRIPTION >

METER SYSTEM : Component Parts Location

INFOID:000000005490691

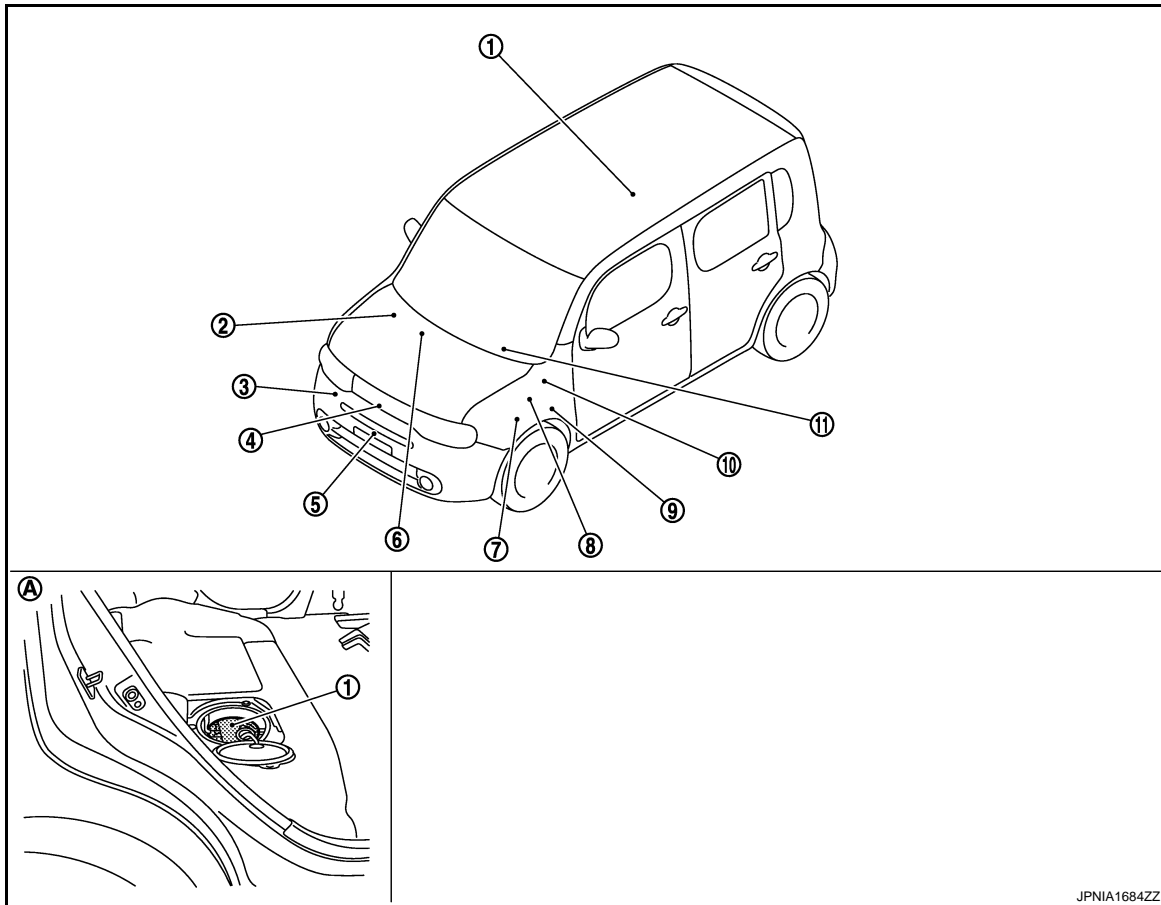

JPNIA1684ZZ

- | | | |
|---|---|---|
| 1. Fuel level sensor unit | 2. ABS actuator and electric unit (control unit)
Refer to BRC-18, "Component Parts Location" . | 3. Washer level switch
Refer to WW-9, "Component Parts Location" . |
| 4. Ambient sensor
Refer to HAC-24, "Component Parts Location" . | 5. Oil pressure switch
Refer to EM-86, "Exploded View" . | 6. A/C auto amp. (auto A/C models)
Refer to HAC-24, "Component Parts Location" . |
| 7. IPDM E/R
• Refer to PCS-6, "Component Parts Location" (with I-KEY).
• Refer to PCS-36, "Component Parts Location" (without I-KEY). | 8. ECM
Refer to EC-23, "Component Parts Location" . | 9. TCM
Refer to TM-70, "Component Parts Location" . |
| 10. BCM
Refer to BCS-9, "Component Parts Location" . | 11. Combination meter | |
| A. Under of right side rear seat | | |

METER SYSTEM

< SYSTEM DESCRIPTION >

METER SYSTEM : Component Description


INFOID:000000005490692

Unit	Description
Combination meter	<p>Controls the following with the signals received from each unit via CAN communication and the signals from switches and sensors.</p> <ul style="list-style-type: none"> • Speedometer • Engine coolant temperature gauge • Warning lamps • Information display • Shift position indicator • Meter effect function • Tachometer • Fuel gauge • Indicator lamps • Meter illumination control • Odo/trip meter
IPDM E/R	IPDM E/R reads the ON/OFF signals of the oil pressure switch and transmits the oil pressure switch signal to the combination meter via BCM via CAN communication.
Fuel level sensor unit	Refer to MWI-42, "Description" .
Oil pressure switch	Refer to MWI-44, "Description" .
ECM	<p>Transmits the following signals to the combination meter via CAN communication.</p> <ul style="list-style-type: none"> • Engine speed signal • Fuel consumption monitor signal • Engine coolant temperature signal • Engine status signal
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the combination meter via CAN communication.
BCM	<p>Transmits the following signals to the combination meter via CAN communication.</p> <ul style="list-style-type: none"> • Oil pressure switch signal • Position light request signal
TCM	Transmits the shift position signal to the combination meter via CAN communication.
Ambient sensor	Transmits the ambient sensor signal to the combination meter.
A/C auto amp.	Transmits the A/C auto amp. connection recognition signal to the combination meter.
Washer level switch	Transmits the washer level signal to the combination meter.

SPEEDOMETER

SPEEDOMETER : System Diagram

INFOID:000000005490693

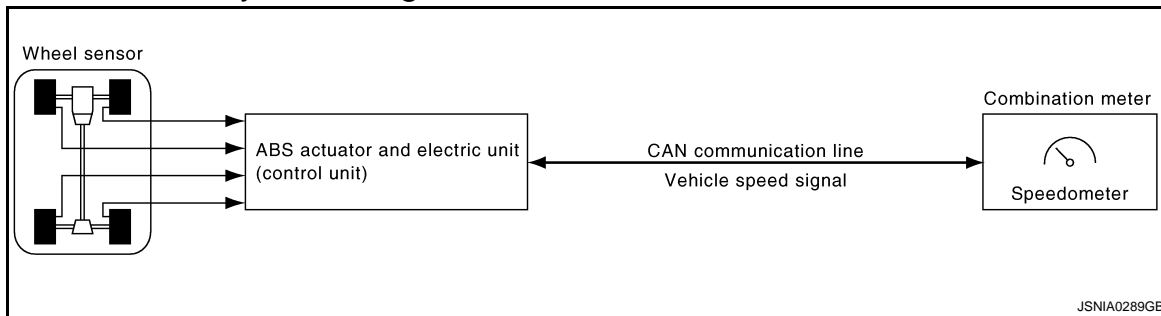

SPEEDOMETER : System Description

INFOID:000000005490694


- The ABS actuator and electric unit (control unit) converts the rectangular wave signal provided by the wheel sensor to a vehicle speed signal and transmits it to the combination meter via CAN communication.
- The combination meter indicates the vehicle speed to the speedometer according to the vehicle speed signal received via CAN communication.

METER SYSTEM

< SYSTEM DESCRIPTION >

SPEEDOMETER : Component Parts Location

INFOID:000000005490695

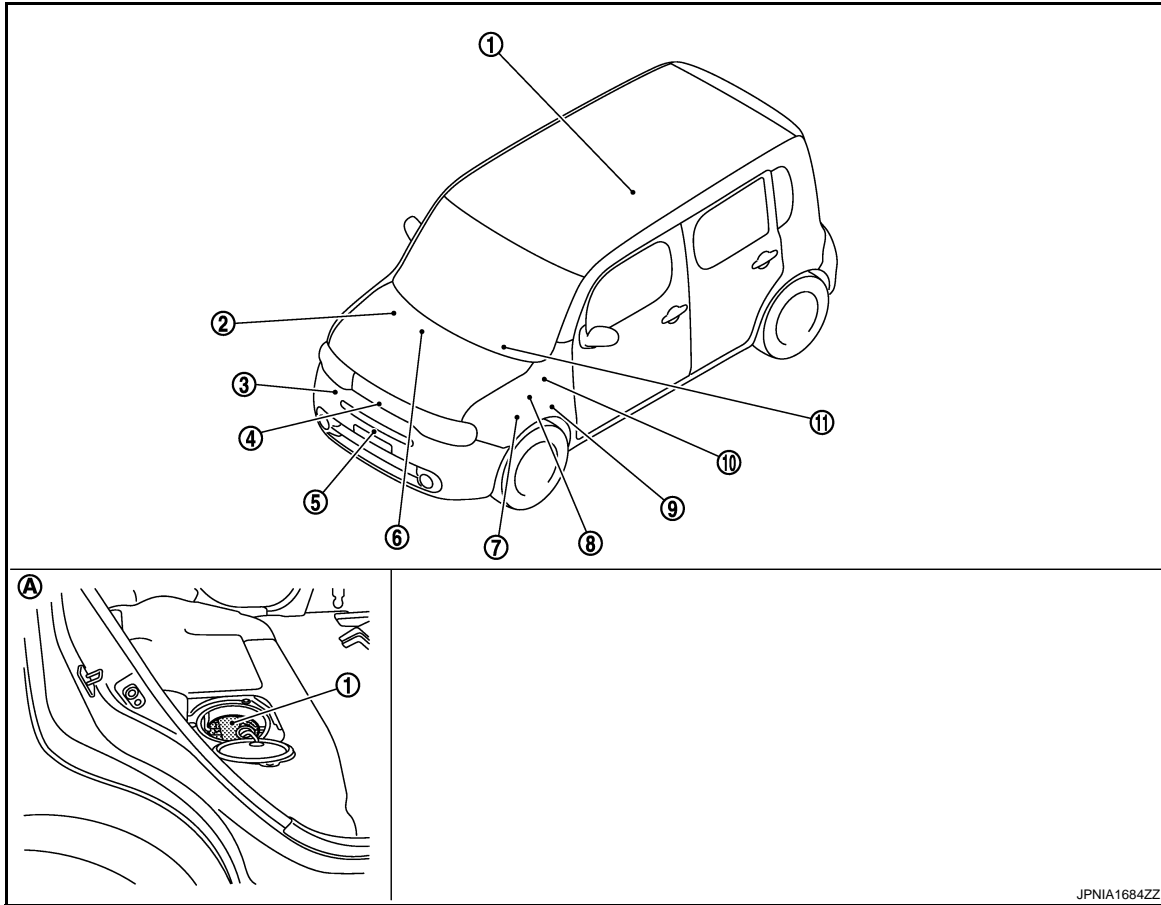

JPNIA1684ZZ

- | | | |
|--|--|---|
| <p>1. Fuel level sensor unit</p> <p>4. Ambient sensor
Refer to HAC-24, "Component Parts Location".</p> <p>IPDM E/R</p> <p>7. Refer to PCS-6, "Component Parts Location" (with I-KEY).
Refer to PCS-36, "Component Parts Location" (without I-KEY).</p> <p>BCM</p> <p>10. Refer to BCS-9, "Component Parts Location".</p> <p>A. Under of right side rear seat</p> | <p>2. ABS actuator and electric unit (control unit)
Refer to BRC-18, "Component Parts Location".</p> <p>5. Oil pressure switch
Refer to EM-86, "Exploded View".</p> <p>8. ECM
Refer to EC-23, "Component Parts Location".</p> <p>11. Combination meter</p> | <p>3. Washer level switch
Refer to WW-9, "Component Parts Location".</p> <p>6. A/C auto amp. (auto A/C models)
Refer to HAC-24, "Component Parts Location".</p> <p>9. TCM
Refer to TM-70, "Component Parts Location".</p> |
|--|--|---|

SPEEDOMETER : Component Description

INFOID:000000005490696

Unit	Description
Combination meter	Indicates the vehicle speed to the speedometer according to the vehicle speed signal received from ABS actuator and electric unit (control unit) via CAN communication.
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the combination meter via CAN communication.


TACHOMETER

METER SYSTEM

< SYSTEM DESCRIPTION >

TACHOMETER : System Diagram

INFOID:000000005490697

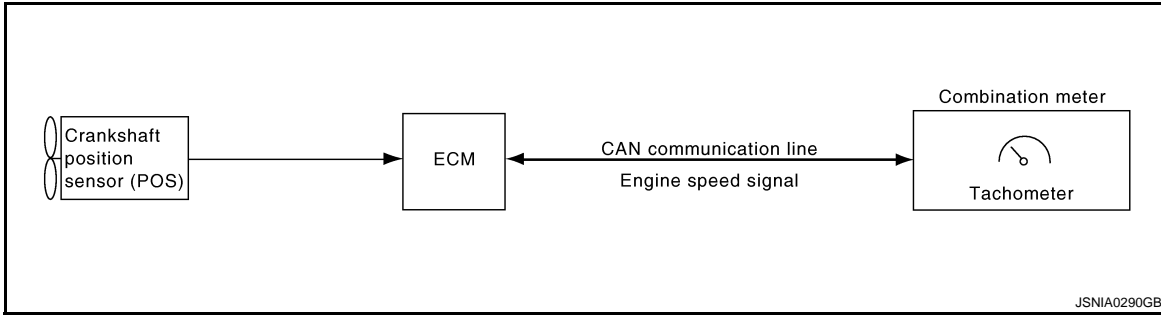

JSNIA0290GB


TACHOMETER : System Description

INFOID:000000005490698

- ECM converts the pulse signal provided by the crankshaft position sensor to an engine speed signal and transmits it to the combination meter via CAN communication.
- The combination meter indicates the engine speed to the tachometer according to the engine speed signal received via CAN communication.

TACHOMETER : Component Parts Location

INFOID:000000005490699

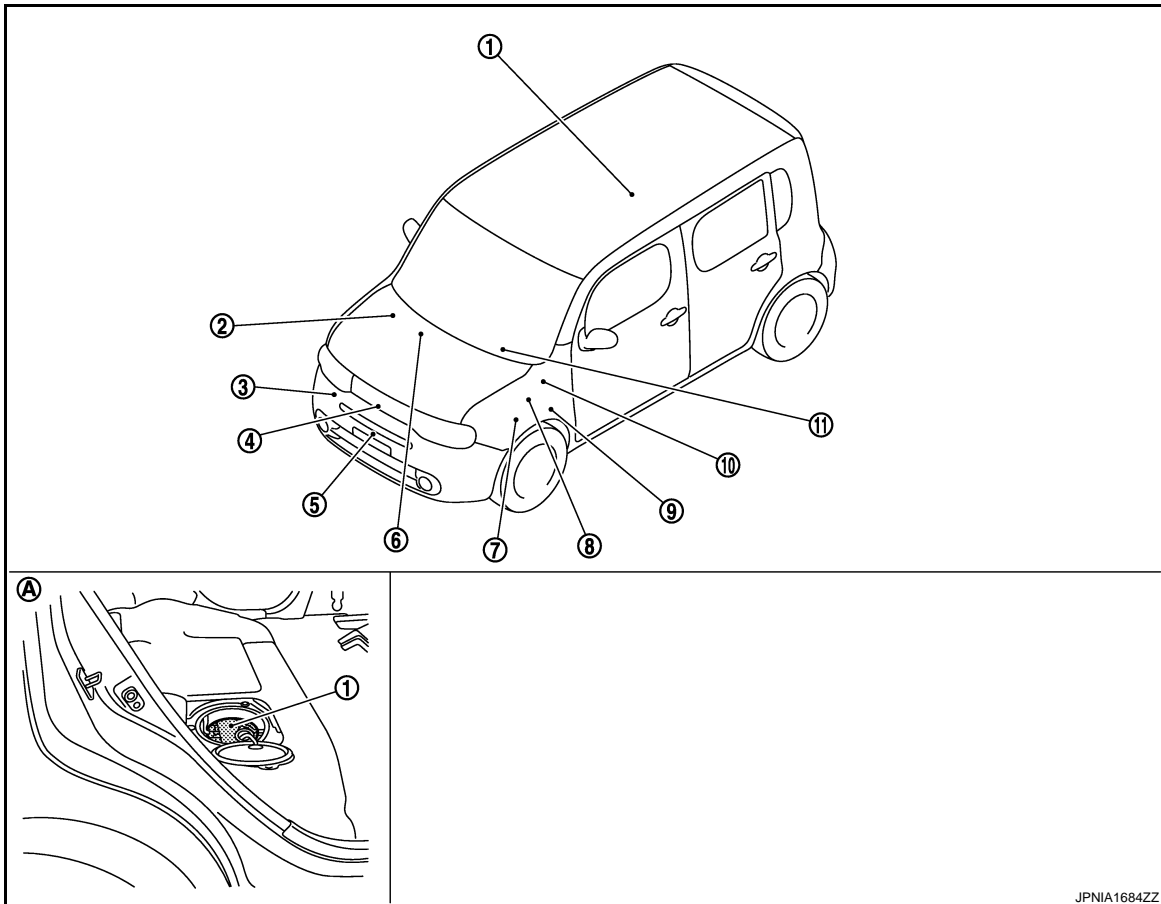

JPNIA1684ZZ

- | | | |
|--|---|---|
| <p>1. Fuel level sensor unit</p> <p>4. Ambient sensor
Refer to HAC-24, "Component Parts Location".</p> | <p>2. ABS actuator and electric unit (control unit)
Refer to BRC-18, "Component Parts Location".</p> <p>5. Oil pressure switch
Refer to EM-86, "Exploded View".</p> | <p>3. Washer level switch
Refer to WW-9, "Component Parts Location".</p> <p>6. A/C auto amp. (auto A/C models)
Refer to HAC-24, "Component Parts Location".</p> |
|--|---|---|

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

METER SYSTEM

< SYSTEM DESCRIPTION >

IPDM E/R

- Refer to [PCS-6, "Component Parts Location"](#) (with I-KEY).
- Refer to [PCS-36, "Component Parts Location"](#) (without I-KEY).

BCM

- 10. Refer to [BCS-9, "Component Parts Location"](#).

A. Under of right side rear seat

- 8. ECM
Refer to [EC-23, "Component Parts Location"](#).

- 9. TCM
Refer to [TM-70, "Component Parts Location"](#).

- 11. Combination meter

TACHOMETER : Component Description


INFOID:000000005490700

Unit	Description
Combination meter	Indicates the engine speed to the tachometer according to the engine speed signal received from ECM via CAN communication.
ECM	Transmits the engine speed signal to the combination meter via CAN communication.

ENGINE COOLANT TEMPERATURE GAUGE

ENGINE COOLANT TEMPERATURE GAUGE : System Diagram

INFOID:000000005490701

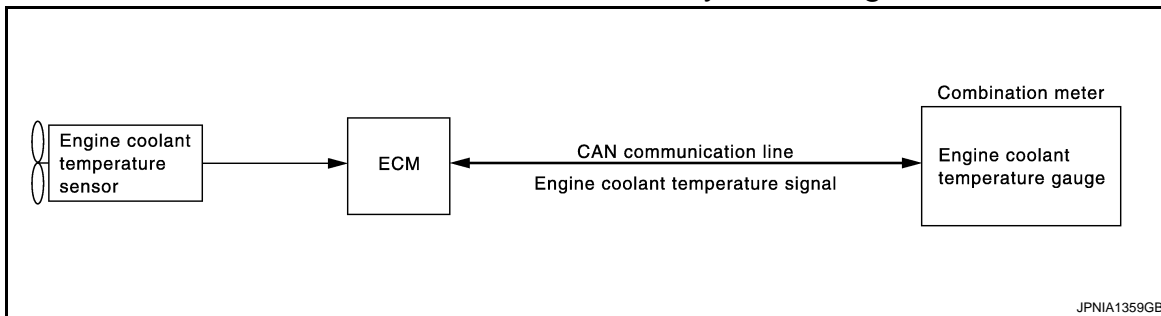

ENGINE COOLANT TEMPERATURE GAUGE : System Description

INFOID:000000005490702


- ECM reads the engine coolant temperature signal from the engine coolant temperature sensor and transmits the signal to the combination meter via CAN communication.
- The combination meter indicates the engine coolant temperature to the engine coolant temperature gauge according to the engine coolant temperature signal received via CAN communication.

METER SYSTEM

< SYSTEM DESCRIPTION >

ENGINE COOLANT TEMPERATURE GAUGE : Component Parts Location

INFOID:000000005490703

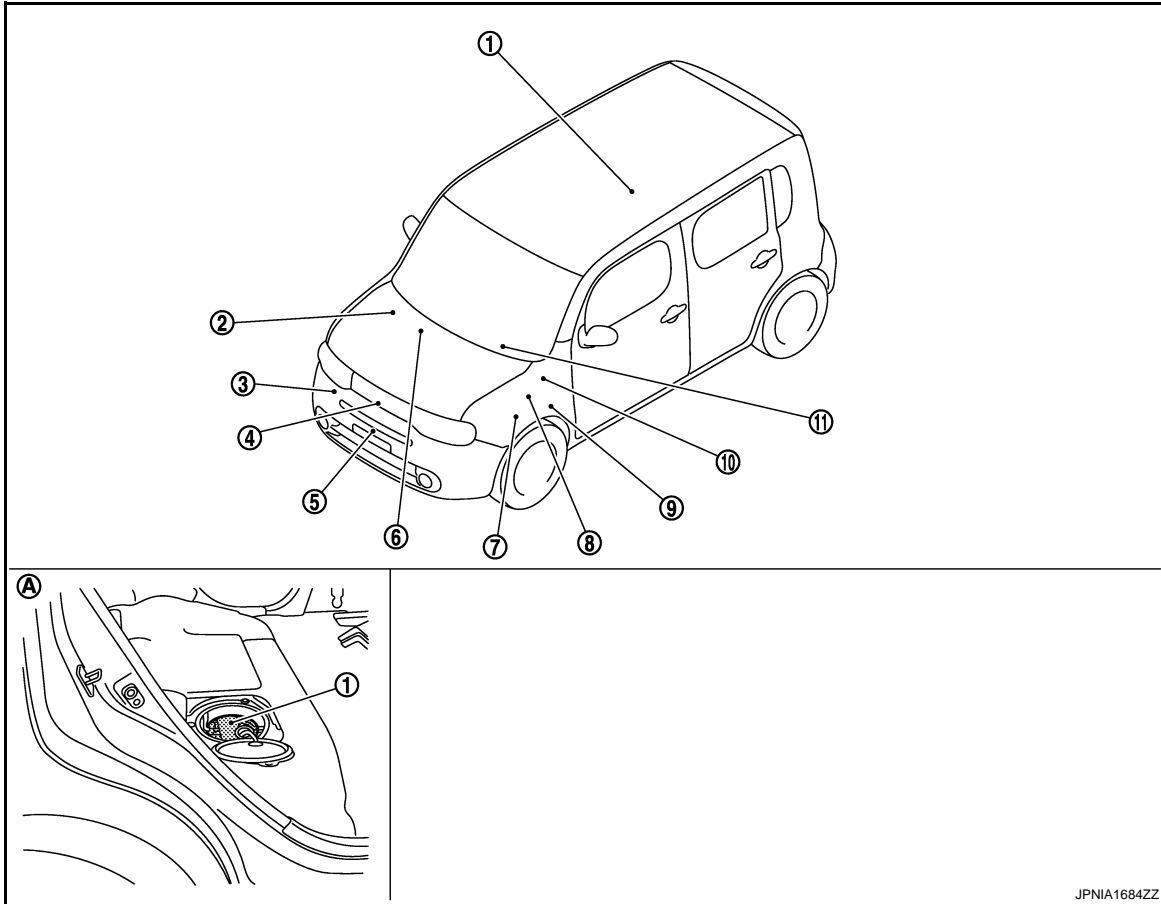

- | | | |
|---|--|---|
| <p>1. Fuel level sensor unit</p> <p>4. Ambient sensor
Refer to HAC-24, "Component Parts Location".</p> <p>7. IPDM E/R</p> <ul style="list-style-type: none"> • Refer to PCS-6, "Component Parts Location" (with I-KEY). • Refer to PCS-36, "Component Parts Location" (without I-KEY). <p>10. BCM
Refer to BCS-9, "Component Parts Location".</p> <p>A. Under of right side rear seat</p> | <p>2. ABS actuator and electric unit (control unit)
Refer to BRC-18, "Component Parts Location".</p> <p>5. Oil pressure switch
Refer to EM-86, "Exploded View".</p> <p>8. ECM
Refer to EC-23, "Component Parts Location".</p> <p>11. Combination meter</p> | <p>3. Washer level switch
Refer to WW-9, "Component Parts Location".</p> <p>6. A/C auto amp. (auto A/C models)
Refer to HAC-24, "Component Parts Location".</p> <p>9. TCM
Refer to TM-70, "Component Parts Location".</p> |
|---|--|---|

ENGINE COOLANT TEMPERATURE GAUGE : Component Description

INFOID:000000005490704

Unit	Description
Combination meter	Indicates the engine coolant temperature to the engine coolant temperature gauge according to the engine coolant temperature signal received from ECM via CAN communication.
ECM	Transmits the engine coolant temperature signal to the combination meter via CAN communication.


FUEL GAUGE

METER SYSTEM

< SYSTEM DESCRIPTION >

FUEL GAUGE : System Diagram

INFOID:000000005490705

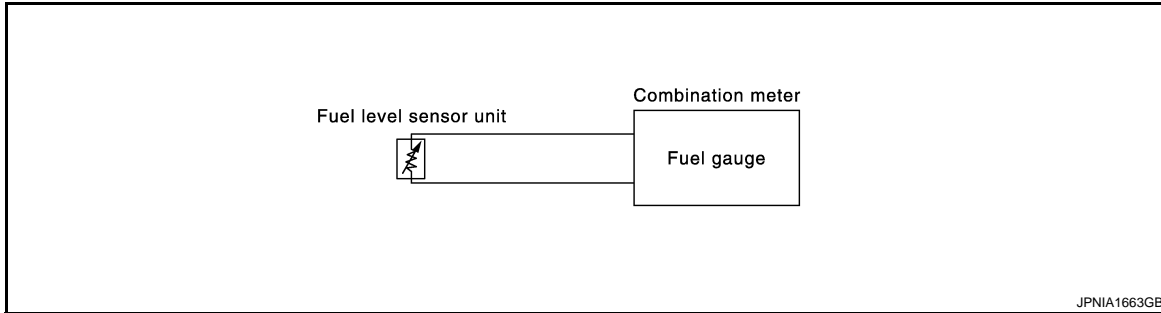

FUEL GAUGE : System Description

INFOID:000000005490706

CONTROL OUTLINE

The combination meter reads the fuel level sensor signal from the fuel level sensor unit and indicates the fuel level to the fuel gauge.


REFUEL CONTROL

The combination meter accelerates the fuel gauge segment if the all conditions listed below are met, or the ignition switch is ON from OFF.

- Ignition switch is ON position.
- The vehicle is not moving.
- The fuel level change by 15 ℓ (4 US gal, 3-1/4 Imp gal) or more.

FUEL GAUGE : Component Parts Location

INFOID:000000005490707

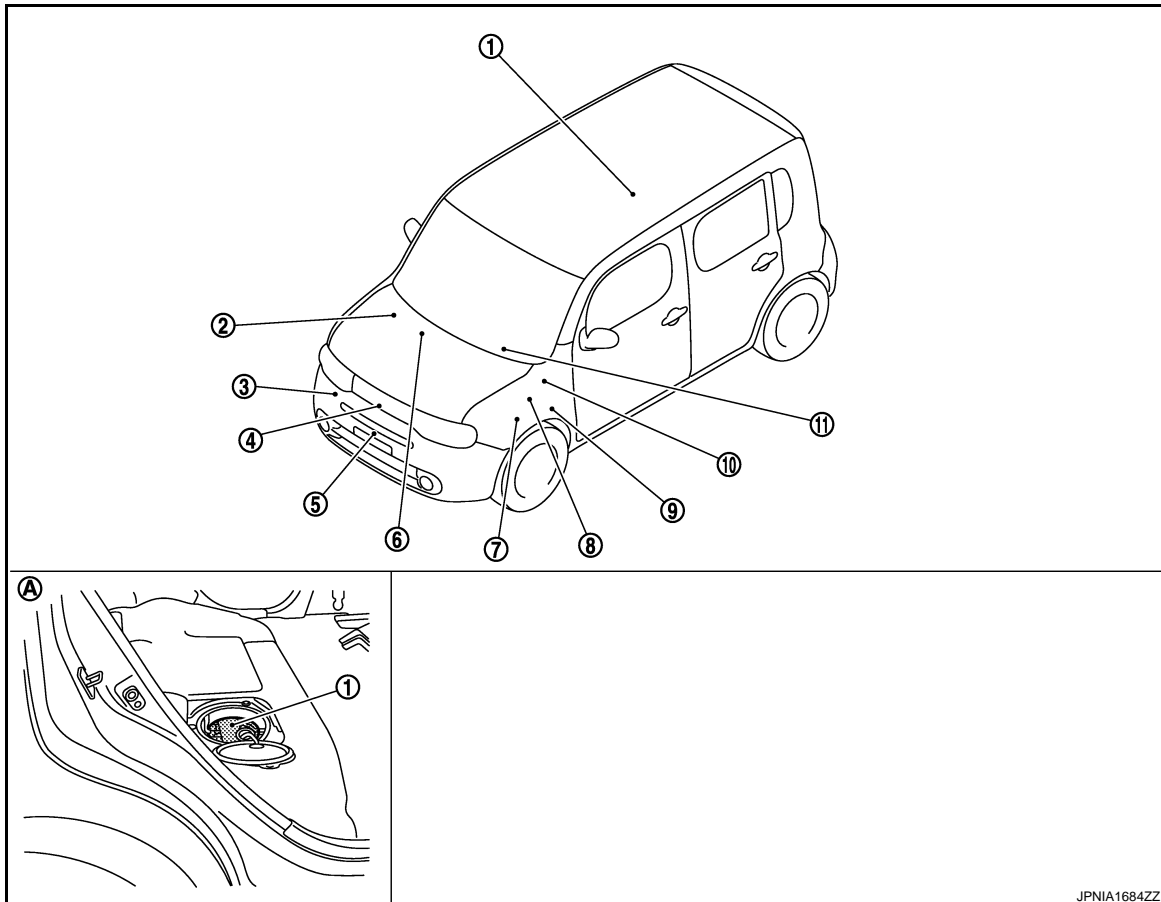

METER SYSTEM

< SYSTEM DESCRIPTION >

- | | | |
|--|--|---|
| <p>1. Fuel level sensor unit</p> <p>4. Ambient sensor
Refer to HAC-24, "Component Parts Location".</p> <p>7. IPDM E/R
• Refer to PCS-6, "Component Parts Location" (with I-KEY).
• Refer to PCS-36, "Component Parts Location" (without I-KEY).</p> <p>10. BCM
Refer to BCS-9, "Component Parts Location".</p> <p>A. Under of right side rear seat</p> | <p>2. ABS actuator and electric unit (control unit)
Refer to BRC-18, "Component Parts Location".</p> <p>5. Oil pressure switch
Refer to EM-86, "Exploded View".</p> <p>8. ECM
Refer to EC-23, "Component Parts Location".</p> <p>11. Combination meter</p> | <p>3. Washer level switch
Refer to WW-9, "Component Parts Location".</p> <p>6. A/C auto amp. (auto A/C models)
Refer to HAC-24, "Component Parts Location".</p> <p>9. TCM
Refer to TM-70, "Component Parts Location".</p> |
|--|--|---|

FUEL GAUGE : Component Description


INFOID:000000005490708

Unit	Description
Combination meter	Indicates the fuel gauge according to the fuel level sensor signal received from the fuel level sensor unit.
Fuel level sensor unit	Refer to MWI-42, "Description" .

ODO/TRIP METER

ODO/TRIP METER : System Diagram

INFOID:000000005490709

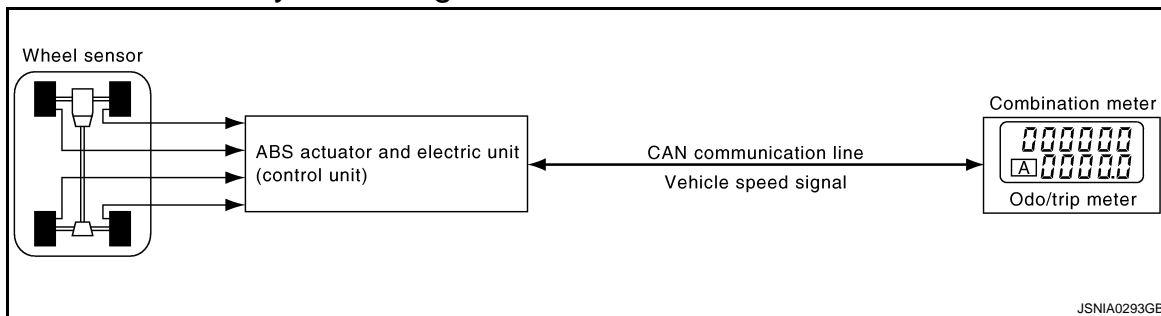

ODO/TRIP METER : System Description

INFOID:000000005490710

- The ABS actuator and electric unit (control unit) reads the rectangular wave signal provided by the wheel sensor and transmits the vehicle speed signal to the combination meter via CAN communication.
- The combination meter converts the vehicle speed signal received via CAN communication to mileage, and it displays the accumulated mileage to the odo/trip meter.


MWI

METER SYSTEM

< SYSTEM DESCRIPTION >

ODO/TRIP METER : Component Parts Location

INFOID:000000005490711

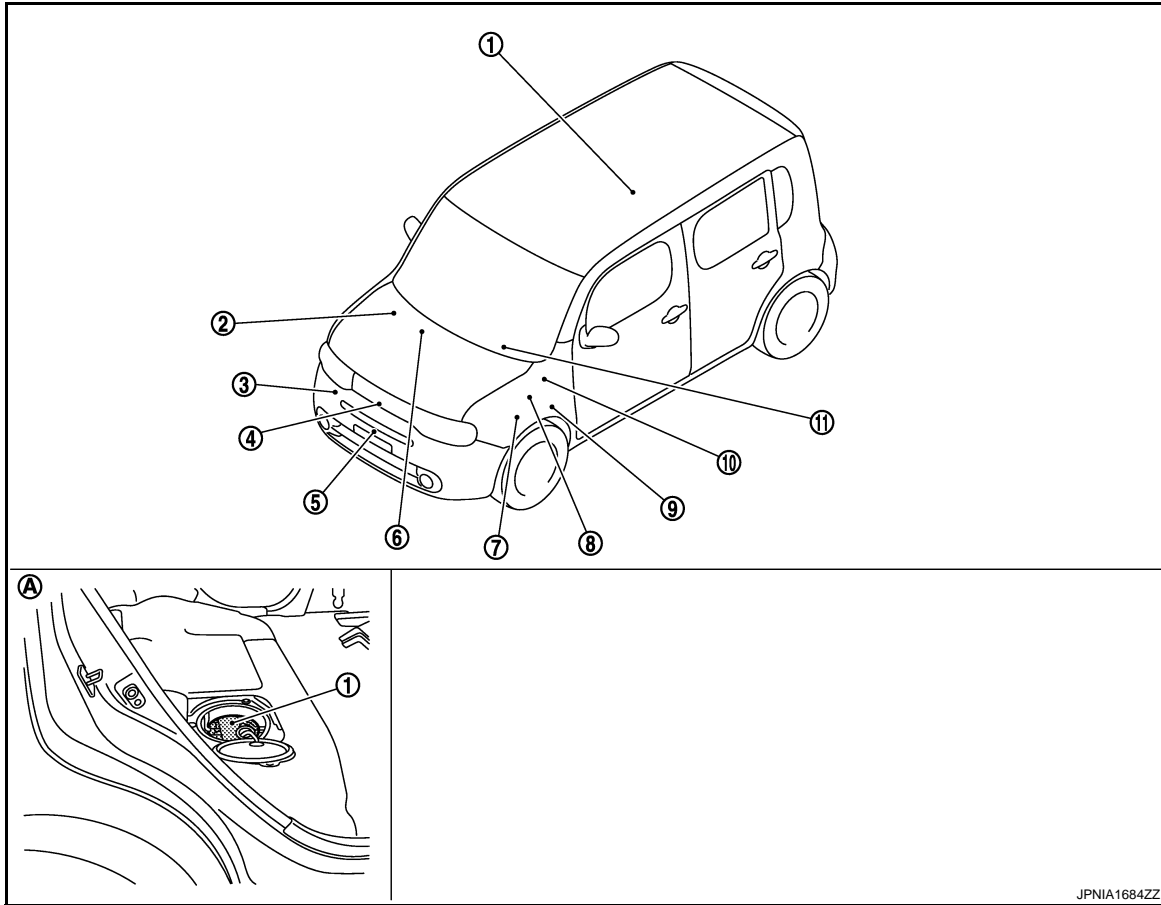

JPNIA1684ZZ

- | | | |
|--|--|---|
| <p>1. Fuel level sensor unit</p> <p>4. Ambient sensor
Refer to HAC-24, "Component Parts Location".</p> <p>7. IPDM E/R
• Refer to PCS-6, "Component Parts Location" (with I-KEY).
• Refer to PCS-36, "Component Parts Location" (without I-KEY).</p> <p>10. BCM
Refer to BCS-9, "Component Parts Location".</p> <p>A. Under of right side rear seat</p> | <p>2. ABS actuator and electric unit (control unit)
Refer to BRC-18, "Component Parts Location".</p> <p>5. Oil pressure switch
Refer to EM-86, "Exploded View".</p> <p>8. ECM
Refer to EC-23, "Component Parts Location".</p> <p>11. Combination meter</p> | <p>3. Washer level switch
Refer to WW-9, "Component Parts Location".</p> <p>6. A/C auto amp. (auto A/C models)
Refer to HAC-24, "Component Parts Location".</p> <p>9. TCM
Refer to TM-70, "Component Parts Location".</p> |
|--|--|---|

ODO/TRIP METER : Component Description

INFOID:000000005490712

Unit	Description
Combination meter	Converts the vehicle speed signal received from the ABS actuator and electric unit (control unit) via CAN communication to mileage, and it displays the accumulated mileage to the odo/trip meter.
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the combination meter via CAN communication.


SHIFT POSITION INDICATOR

METER SYSTEM

< SYSTEM DESCRIPTION >

SHIFT POSITION INDICATOR : System Diagram

INFOID:000000005490713

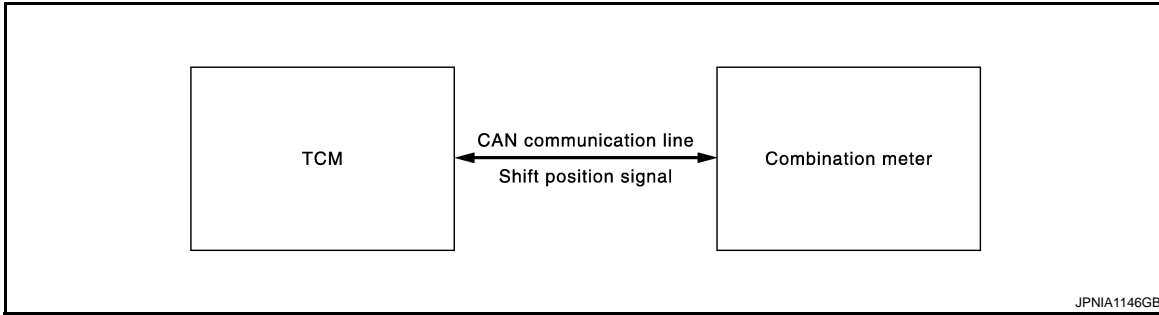

JPNIA1146GB


SHIFT POSITION INDICATOR : System Description

INFOID:000000005490714

The combination meter receives the shift position signal from TCM via CAN communication, and displays the shift position to the shift position indicator.

SHIFT POSITION INDICATOR : Component Parts Location

INFOID:000000005490715

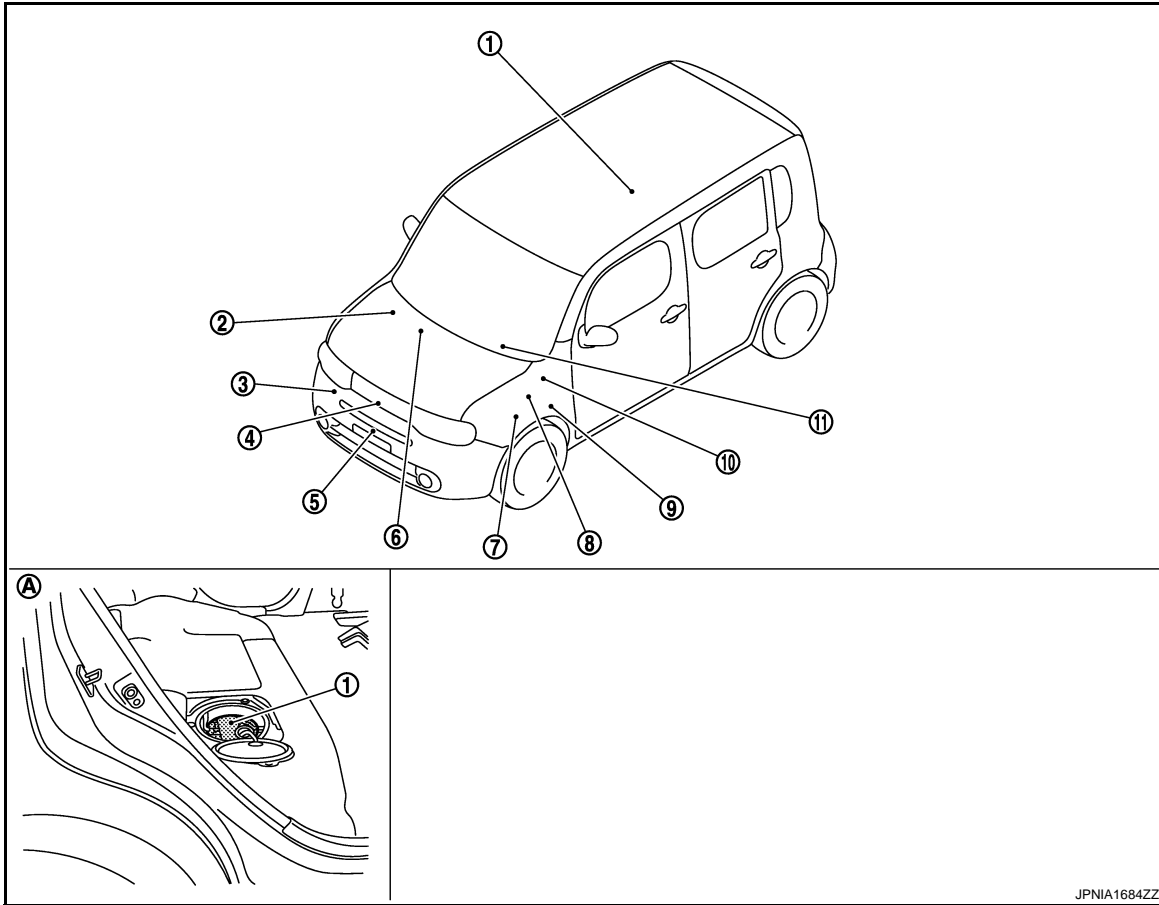

JPNIA1684ZZ

- | | | |
|---|---|---|
| 1. Fuel level sensor unit | 2. ABS actuator and electric unit (control unit)
Refer to BRC-18, "Component Parts Location" . | 3. Washer level switch
Refer to WW-9, "Component Parts Location" . |
| 4. Ambient sensor
Refer to HAC-24, "Component Parts Location" . | 5. Oil pressure switch
Refer to EM-86, "Exploded View" . | 6. A/C auto amp. (auto A/C models)
Refer to HAC-24, "Component Parts Location" . |
| 7. IPDM E/R
• Refer to PCS-6, "Component Parts Location" (with I-KEY).
• Refer to PCS-36, "Component Parts Location" (without I-KEY). | 8. ECM
Refer to EC-23, "Component Parts Location" . | 9. TCM
Refer to TM-70, "Component Parts Location" . |

A
B
C
D
E
F
G
H
I
J
K
L
M

MWI

O
P

METER SYSTEM

< SYSTEM DESCRIPTION >

BCM

10. Refer to [BCS-9, "Component Parts Location"](#). 11. Combination meter

A. Under of right side rear seat

SHIFT POSITION INDICATOR : Component Description


INFOID:000000005490716

Unit	Description
Combination meter	Displays the shift position on the shift position indicator with shift position signal received from TCM via CAN communication.
TCM	Transmits shift position signal to the combination meter via CAN communication.

WARNING LAMPS/INDICATOR LAMPS

WARNING LAMPS/INDICATOR LAMPS : System Diagram

INFOID:000000005490717

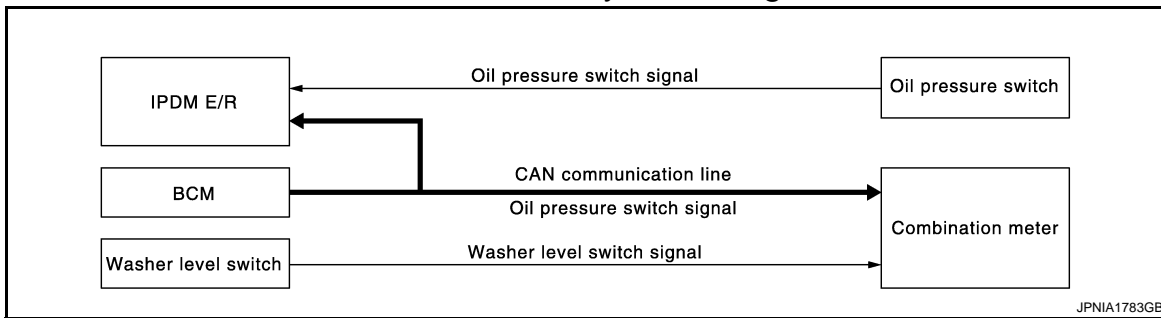

WARNING LAMPS/INDICATOR LAMPS : System Description

INFOID:000000005490718

OIL PRESSURE WARNING LAMP


- IPDM E/R reads the ON/OFF signals from the oil pressure switch and transmits the oil pressure switch signal to the combination meter via BCM with the CAN communication.
- The combination meter turns the oil pressure warning lamp ON (at the time of a reduction in hydraulic pressure)/OFF (except at the time of a reduction in hydraulic pressure) according to the oil pressure switch signal received via CAN communication.

LOW WASHER FLUID WARNING LAMP (FOR CANADA)

The combination meter turns on a low washer fluid warning lamp judged by the washer level switch signal from the washer level switch.

Warning Operation Condition

- Turns on the warning lamp when the washer level switch is ON for 180 seconds or more. Turns off the warning lamp when the washer level switch is OFF for 30 seconds or more.

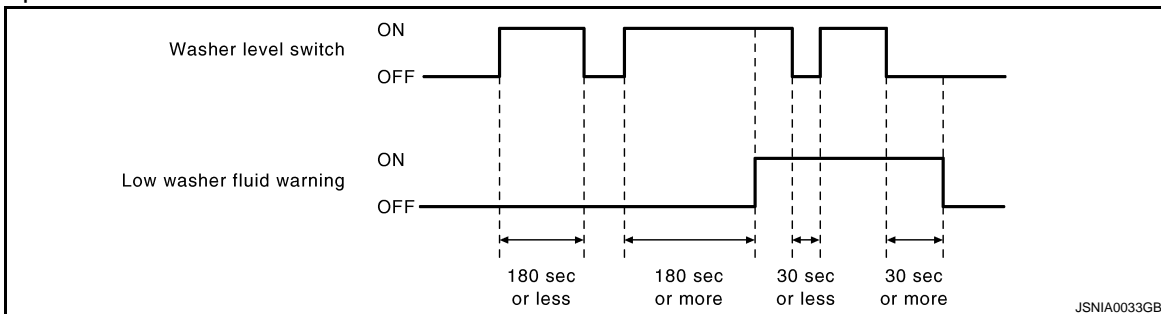


METER SYSTEM

< SYSTEM DESCRIPTION >

WARNING LAMPS/INDICATOR LAMPS : Component Parts Location

INFOID:000000005490719

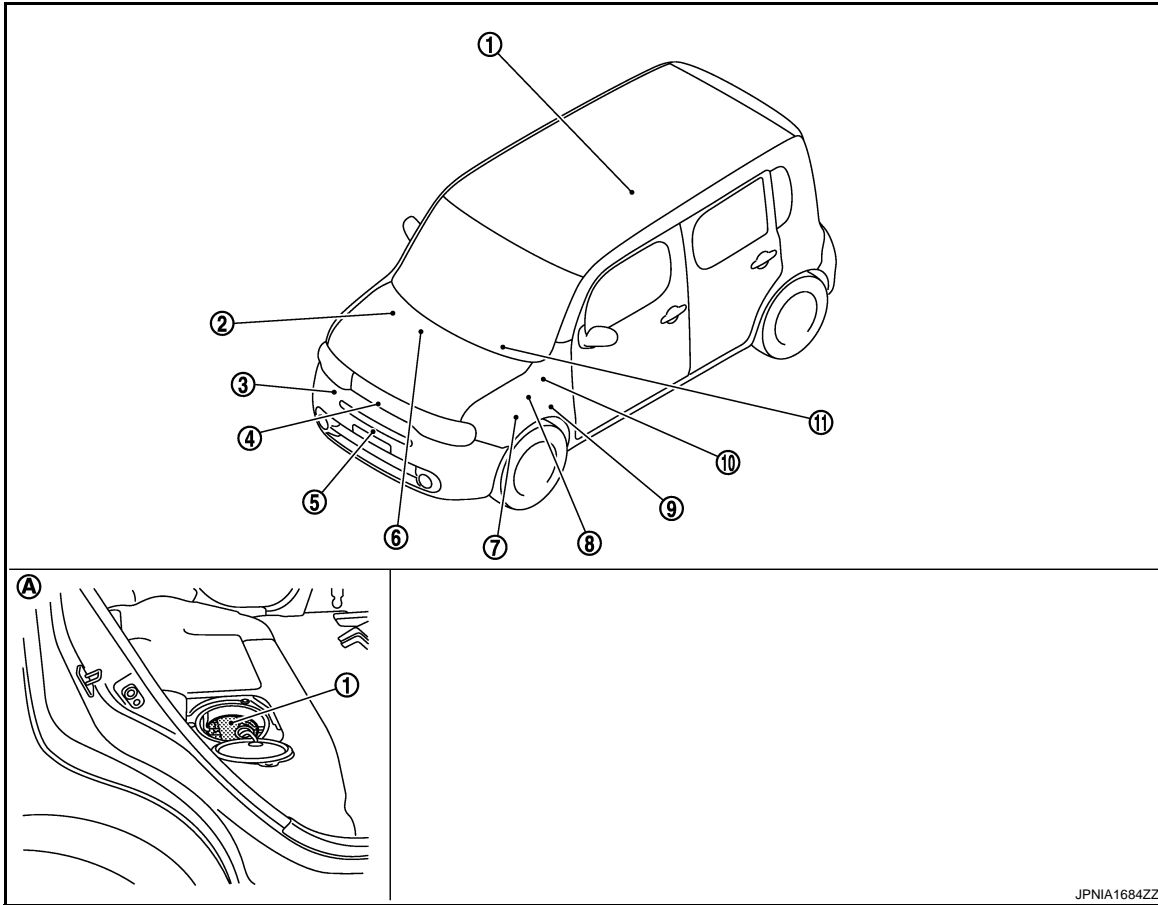

JPNIA1684ZZ

- | | | |
|--|---|---|
| <p>1. Fuel level sensor unit</p> <p>4. Ambient sensor
Refer to HAC-24, "Component Parts Location".</p> <p>IPDM E/R</p> <p>7. Refer to PCS-6, "Component Parts Location" (with I-KEY).
Refer to PCS-36, "Component Parts Location" (without I-KEY).</p> <p>BCM</p> <p>10. Refer to BCS-9, "Component Parts Location".</p> <p>A. Under of right side rear seat</p> | <p>2. ABS actuator and electric unit (control unit)
Refer to BRC-18, "Component Parts Location".</p> <p>5. Oil pressure switch
Refer to EM-86, "Exploded View".</p> <p>ECM</p> <p>8. Refer to EC-23, "Component Parts Location".</p> <p>11. Combination meter</p> | <p>3. Washer level switch
Refer to WW-9, "Component Parts Location".</p> <p>A/C auto amp. (auto A/C models)
Refer to HAC-24, "Component Parts Location".</p> <p>TCM</p> <p>9. Refer to TM-70, "Component Parts Location".</p> |
|--|---|---|

WARNING LAMPS/INDICATOR LAMPS : Component Description

INFOID:000000005490720

Unit	Description
Combination meter	<ul style="list-style-type: none"> Turns the oil pressure warning lamp ON/OFF according to the oil pressure switch signal received from BCM via CAN communication. Receives the washer level switch signal from the washer level switch.
IPDM E/R	Reads the ON/OFF signals from the oil pressure switch and transmits the oil pressure switch signal to the combination meter via BCM and CAN communication.
Oil pressure switch	Refer to MWI-44, "Description" .


METER SYSTEM

< SYSTEM DESCRIPTION >

Unit	Description
BCM	Transmits the oil pressure switch signal received from IPDM E/R via CAN communication to the combination meter via CAN communication.
Washer level switch	Transmits the washer level switch signal to the combination meter.

METER ILLUMINATION CONTROL

METER ILLUMINATION CONTROL : System Diagram

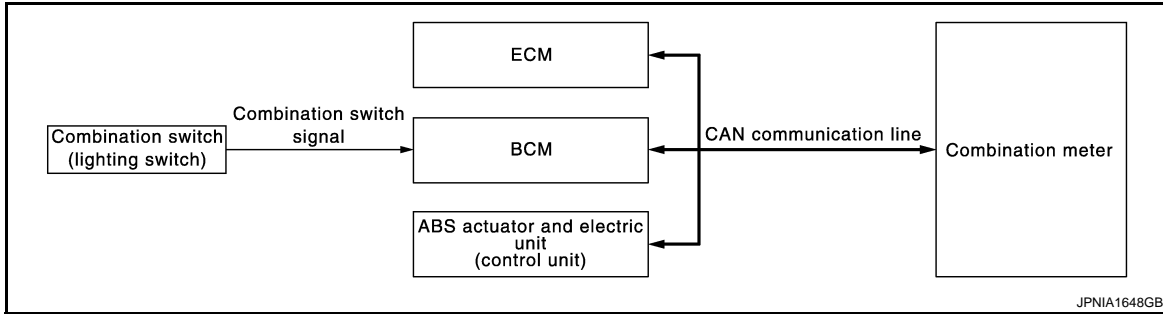

METER ILLUMINATION CONTROL : System Description

INFOID:000000005490722

METER ILLUMINATION ON/OFF CONTROL FUNCTION

The combination meter receives the following signals to control meter illumination.

Signal name	Signal source
Ignition signal	—
Engine status signal (CAN communication)	ECM
Vehicle speed signal (CAN communication)	ABS actuator and control unit (control unit)

Turns ON Condition

Ignition switch ON

Turns OFF Condition


If any of the following conditions is fulfilled.

- During a crank with vehicle speed less than 1 km/h (0.6 MPH)
- Ignition switch OFF or ACC

METER ILLUMINATION CONTROL FUNCTION

- Combination meter is transferred to nighttime mode with position light request signal from BCM via CAN communication.
- Meter illumination level can be adjusted in following steps using the illumination control switch (1).

Condition	Steps
Daytime mode	22
Nighttime mode	22

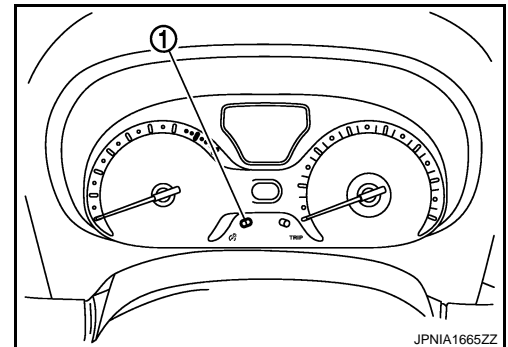


METER SYSTEM

< SYSTEM DESCRIPTION >

METER ILLUMINATION CONTROL : Component Parts Location

INFOID:000000005490723

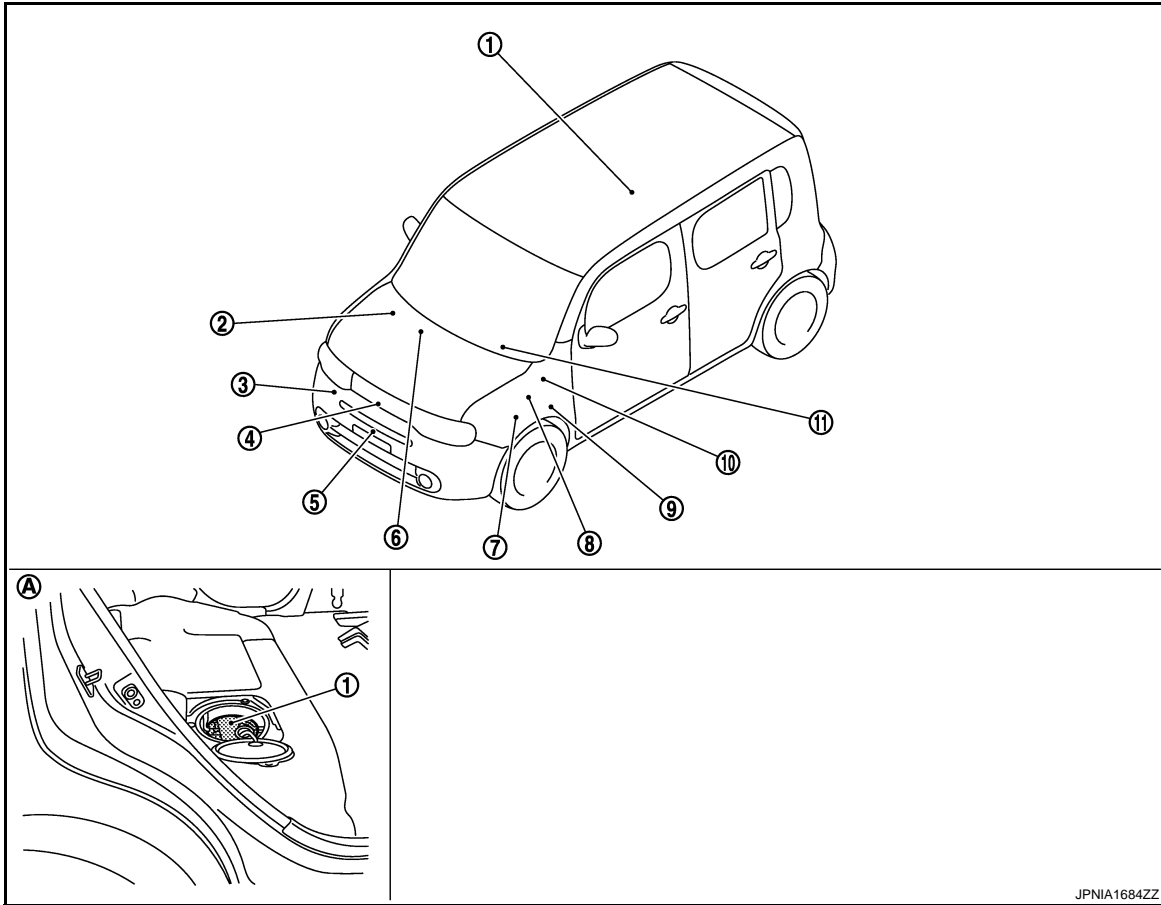

- | | | |
|--|---|---|
| <p>1. Fuel level sensor unit</p> <p>4. Ambient sensor
Refer to HAC-24, "Component Parts Location".</p> <p>IPDM E/R</p> <p>7. Refer to PCS-6, "Component Parts Location" (with I-KEY).
Refer to PCS-36, "Component Parts Location" (without I-KEY).</p> <p>BCM</p> <p>10. Refer to BCS-9, "Component Parts Location".</p> <p>A. Under of right side rear seat</p> | <p>2. ABS actuator and electric unit (control unit)
Refer to BRC-18, "Component Parts Location".</p> <p>5. Oil pressure switch
Refer to EM-86, "Exploded View".</p> <p>ECM</p> <p>8. Refer to EC-23, "Component Parts Location".</p> <p>11. Combination meter</p> | <p>3. Washer level switch
Refer to WW-9, "Component Parts Location".</p> <p>A/C auto amp. (auto A/C models)
Refer to HAC-24, "Component Parts Location".</p> <p>TCM</p> <p>9. Refer to TM-70, "Component Parts Location".</p> |
|--|---|---|

METER ILLUMINATION CONTROL : Component Description

INFOID:000000005490724

Unit	Description
Combination meter	Controls the meter illumination with the meter control switch signal from the meter control switch and the position light request signal from BCM via CAN communication.
ECM	Transmits the engine status signal to the combination meter via CAN communication.
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the combination meter via CAN communication.

A
B
C
D
E
F
G
H
I
J
K
L
M

MWI

O

P

METER SYSTEM


< SYSTEM DESCRIPTION >

Unit	Description
BCM	Transmits the position light request signal to the combination meter via CAN communication.
Combination switch (lighting switch)	Using the combination switch reading function, BCM reads the combination switch status.

METER EFFECT FUNCTION

METER EFFECT FUNCTION : System Diagram

INFOID:000000005490725

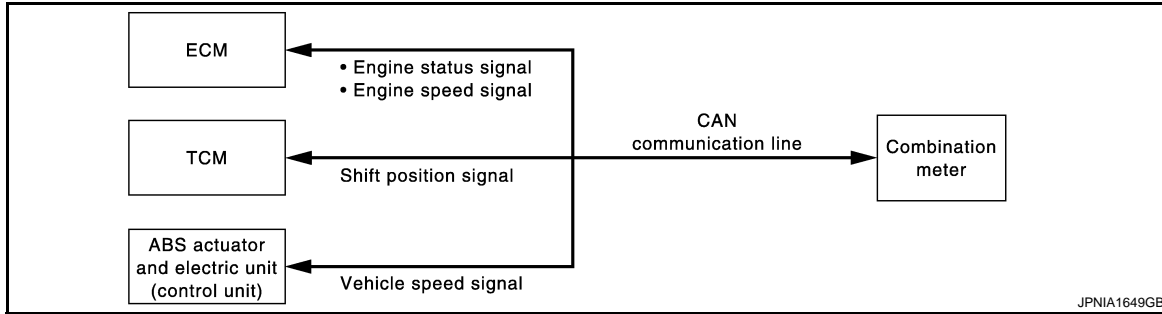

METER EFFECT FUNCTION : System Description

INFOID:000000005490726

ENGINE-START EFFECT FUNCTION

For CVT Models

When "engine start" is read, the effect of comfort starts only once by turning on combination meter illumination stepwise and sweeping the needles of speedometer and tachometer.

For M/T Models

When "engine start" is read, the effect of comfort starts only once by turning on combination meter illumination and start-up lamp stepwise and sweeping the needles of speedometer and tachometer.

Outline of Control System

System control is provided when all of the following conditions are met.

Operating condition		Signal name	Signal source
Ignition switch	ON	Ignition signal	—
Shift position*	P-range	Shift position signal (CAN communication)	TCM
Engine status	More than 500 rpm	Engine speed signal (CAN communication)	ECM
	Except when cranking	Engine status signal (CAN communication)	
Vehicle speed	Less than 1 km/h (0.6 MPH)	Vehicle speed signal (CAN communication)	ABS actuator and electric unit (control unit)

*: For CVT models

NOTE:


The engine-start effect function ends if any one of the above conditions is lost during the activation of this function.

METER SYSTEM

< SYSTEM DESCRIPTION >

METER EFFECT FUNCTION : Component Parts Location

INFOID:000000005490727

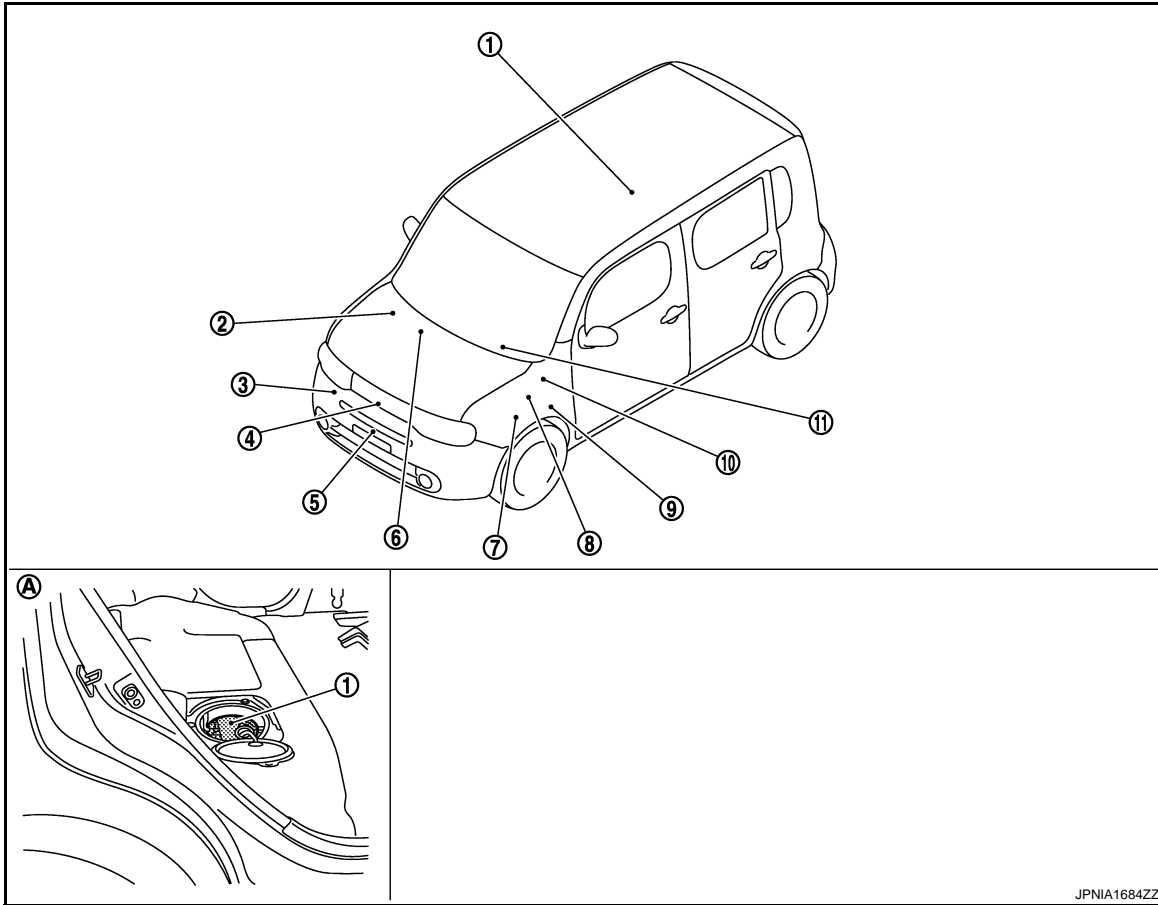

- | | | |
|--|--|--|
| <p>1. Fuel level sensor unit</p> <p>Ambient sensor</p> <p>4. Refer to HAC-24, "Component Parts Location".</p> <p>IPDM E/R</p> <p>7. Refer to PCS-6, "Component Parts Location" (with I-KEY).</p> <p>Refer to PCS-36, "Component Parts Location" (without I-KEY).</p> <p>BCM</p> <p>10. Refer to BCS-9, "Component Parts Location".</p> <p>A. Under of right side rear seat</p> | <p>2. ABS actuator and electric unit (control unit)</p> <p>Refer to BRC-18, "Component Parts Location".</p> <p>Oil pressure switch</p> <p>5. Refer to EM-86, "Exploded View".</p> <p>ECM</p> <p>8. Refer to EC-23, "Component Parts Location".</p> <p>Combination meter</p> <p>11.</p> | <p>3. Washer level switch</p> <p>Refer to WW-9, "Component Parts Location".</p> <p>A/C auto amp. (auto A/C models)</p> <p>6. Refer to HAC-24, "Component Parts Location".</p> <p>TCM</p> <p>9. Refer to TM-70, "Component Parts Location".</p> |
|--|--|--|

METER EFFECT FUNCTION : Component Description

INFOID:000000005490728

Unit	Description
Combination meter	Receives signals from each unit with the CAN communication and performs meter effect.
ECM	Transmits engine speed signal and engine status signal to the combination meter via CAN communication.
TCM	Transmits shift position signal to the combination meter via CAN communication.
ABS actuator and electric unit (control unit)	Transmits vehicle speed signal to the combination meter via CAN communication.

INFORMATION DISPLAY

A
B
C
D
E
F
G
H
I
J
K
L
M

MWI

O


P

METER SYSTEM

< SYSTEM DESCRIPTION >

INFORMATION DISPLAY : System Diagram

INFOID:000000005490729

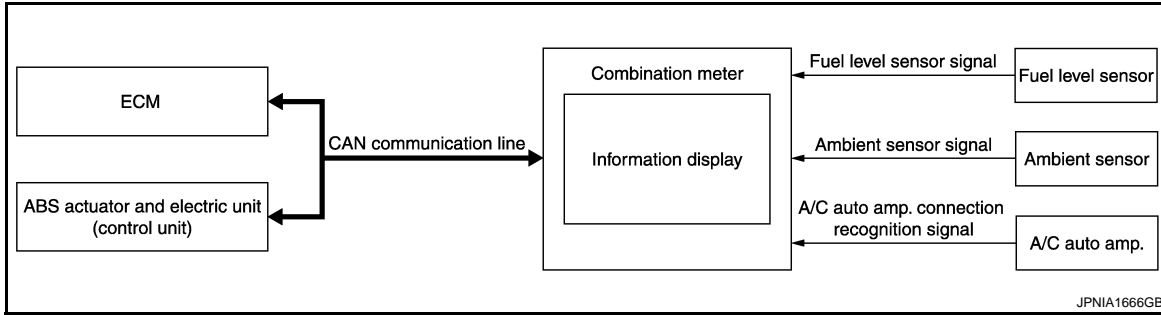

JPNIA1666GB

INFORMATION DISPLAY : System Description

INFOID:000000005490730

DESCRIPTION

- The combination meter inputs the information required to control the operation of information display by using the communication signals and others from each units and sensors.
- The combination meter incorporates a trip computer that displays the warning/information according to the information received from various units and sensors.

INSTANTANEOUS FUEL CONSUMPTION

The combination meter calculates instantaneous fuel consumption based on the following signals, and the calculated value is displayed on the information display.

Signal name	Signal source
Fuel consumption monitor signal (CAN communication)	ECM
Vehicle speed signal (CAN communication)	ABS actuator and electric unit (control unit)

NOTE:

- Instantaneous fuel consumption on the information display is updated approximately every 0.5 seconds.
- Instantaneous fuel consumption on the information display shows 0 l/100km (0 mpg) when vehicle speed is 0 km/h (0 MPH).

AVERAGE FUEL CONSUMPTION

The combination meter calculates average fuel consumption based on the following signals, and the calculated value is displayed on the information display.

Signal name	Signal source
Fuel consumption monitor signal (CAN communication)	ECM
Vehicle speed signal (CAN communication)	ABS actuator and electric unit (control unit)

NOTE:

- Average fuel consumption on the information display is updated approximately every 30 seconds.
- Soon after a reset or when the ignition switch is turned ON right after battery removal and installation, “—” is displayed until after a travel of 30 seconds and approximately 500 m (0.31 mile).

POSSIBLE DRIVING DISTANCE

The combination meter calculates possible driving distance based on the following signals, and the calculated value is displayed on the information display.

Signal name	Signal source
Fuel level sensor signal	Fuel level sensor unit

METER SYSTEM

< SYSTEM DESCRIPTION >

Signal name	Signal source
Fuel consumption monitor signal (CAN communication)	ECM
Vehicle speed signal (CAN communication)	ABS actuator and electric unit (control unit)

NOTE:

- Possible driving distance on the information display is updated approximately every 30 seconds.
- When the ignition switch is turned from OFF to ON, “—” is displayed until after a travel of approximately 500 m (0.31 mile).
- The indicated values may not match each other when refueling with the ignition switch ON. Refer to [MWI-94, "INFORMATION DISPLAY : Description"](#).

AVERAGE VEHICLE SPEED

The combination meter calculates average vehicle speed based on the following signals, and the calculated value is displayed on the information display.

Signal name	Signal source
Ignition signal	—
Vehicle speed signal (CAN communication)	ABS actuator and electric unit (control unit)

NOTE:

- Average vehicle speed on the information display is updated approximately every 30 seconds.
- Soon after a reset or when the ignition switch is turned ON right after battery removal and installation, “—” is displayed until after a 30 seconds.

AMBIENT AIR TEMPERATURE (FOR AUTO AIR CONDITIONING MODELS)

- The combination meter corrects an indicated temperature, based on various signals.
- The combination meter calculates ambient air temperature based on the following signals, and the calculated value is displayed on the information display.

Signal name	Signal source
Ignition signal	—
Ambient sensor signal	Ambient sensor
A/C auto amp. connection recognition signal	A/C auto amp.
Vehicle speed signal (CAN communication)	ABS actuator and electric unit (control unit)

Correction Process (Temperature indicated soon after the ignition switch ON)

A temperature indicated soon after the ignition switch is turned ON depends on the time from the ignition switch OFF to ON and a temperature detected by the ambient sensor.

When any condition described below is met, an ambient sensor-detected temperature is indicated.

- Time from the ignition switch OFF to ON \geq Predetermined time
- Sensor-detected temperature $<$ Temperature at the last ignition switch OFF

When all the conditions described below are met, the temperature at the last ignition switch OFF is indicated.

- Time from the ignition switch OFF to ON $<$ Predetermined time
- Sensor-detected temperature \geq Temperature at the last ignition switch OFF

Correction Process (Temperature at the Ignition switch ON)

A temperature indicated when the ignition switch is ON depends on a vehicle speed, an ambient sensor-detected temperature, and traveling time.

The temperature on the information display is corrected to an ambient sensor-detected temperature when the following condition is met.

- Ambient sensor-detected temperature $<$ Temperature on the information display

A temperature on the information display is not updated when the following condition is met.

- Ambient sensor-detected temperature \geq Temperature on the information display
- Vehicle speed \leq 20 km/h (12 MPH)

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

METER SYSTEM

< SYSTEM DESCRIPTION >

A temperature on the information display slowly rises to an ambient sensor-detected temperature when the following condition is met.

- Ambient sensor-detected temperature \geq Temperature on the information display
- Vehicle speed \geq 20 km/h (12 MPH)

A temperature on the information display rapidly rises to an ambient sensor-detected temperature when the following condition is met.

- Ambient sensor-detected temperature \geq Temperature on the information display
- Vehicle speed \geq 20 km/h (12 MPH)
- When driving more than set time

A/C Auto Amp. Connection Recognition

The combination meter judges from A/C auto amp. connection recognition signals that A/C auto amp. is connected and indicates an ambient air temperature on the information display.

NOTE:

- After an ignition switch is turned ON, “—” is displayed until after a 2.5 seconds.
- The ambient sensor input value that is displayed on “Data Monitor” of CONSULT-III is the value before the correction. It may not match the indicated temperature on the information display.
- After removal and installation of the battery and combination meter, an ambient sensor-detected temperature is indicated on the information display.
- Depending on engine heat or heat on the road surfaces, an ambient temperature may be indicated higher than actual one.

ICY WARNING (LOW AMBIENT AIR TEMPERATURE)

Based on an ambient temperature indication, the combination meter blinks the ambient temperature indication to warn the driver of a low ambient temperature.

Warning Operation Condition

Information display indication temperature \leq 3°C (37°F)

Warning Cancel Condition

Warning is canceled if any of the following conditions is fulfilled.

- Information display indication temperature \geq 4°C (39°F)
- 60 seconds after the start of warning indication

LOW FUEL WARNING

Combination meter indicates the low fuel warning judged by the fuel level sensor signal received from fuel level sensor unit.

Warning Operation Condition

Fuel level: Approx. 9.5 ℓ (2-1/2 US gal, 2-1/8 Imp gal) or less [1.5 ℓ (3/8 US gal, 3/8 Imp gal) fuel residues included].

MAINTENANCE (FOR CANADA)

The remaining distance from the set maintenance distance is displayed.

Items	Setting range	Setting unit	Description
Maintenance	0 – 30,000 km (0 – 18,000 miles)	1,000 km (500 miles)	The remaining distance from the set distance is displayed for 5 seconds after the ignition switch is turned ON.

TRAVEL TIME (FOR CANADA)


The combination meter measures and displays travel time (ignition switch ON time).

METER SYSTEM

< SYSTEM DESCRIPTION >

INFORMATION DISPLAY : Component Parts Location

INFOID:000000005490731

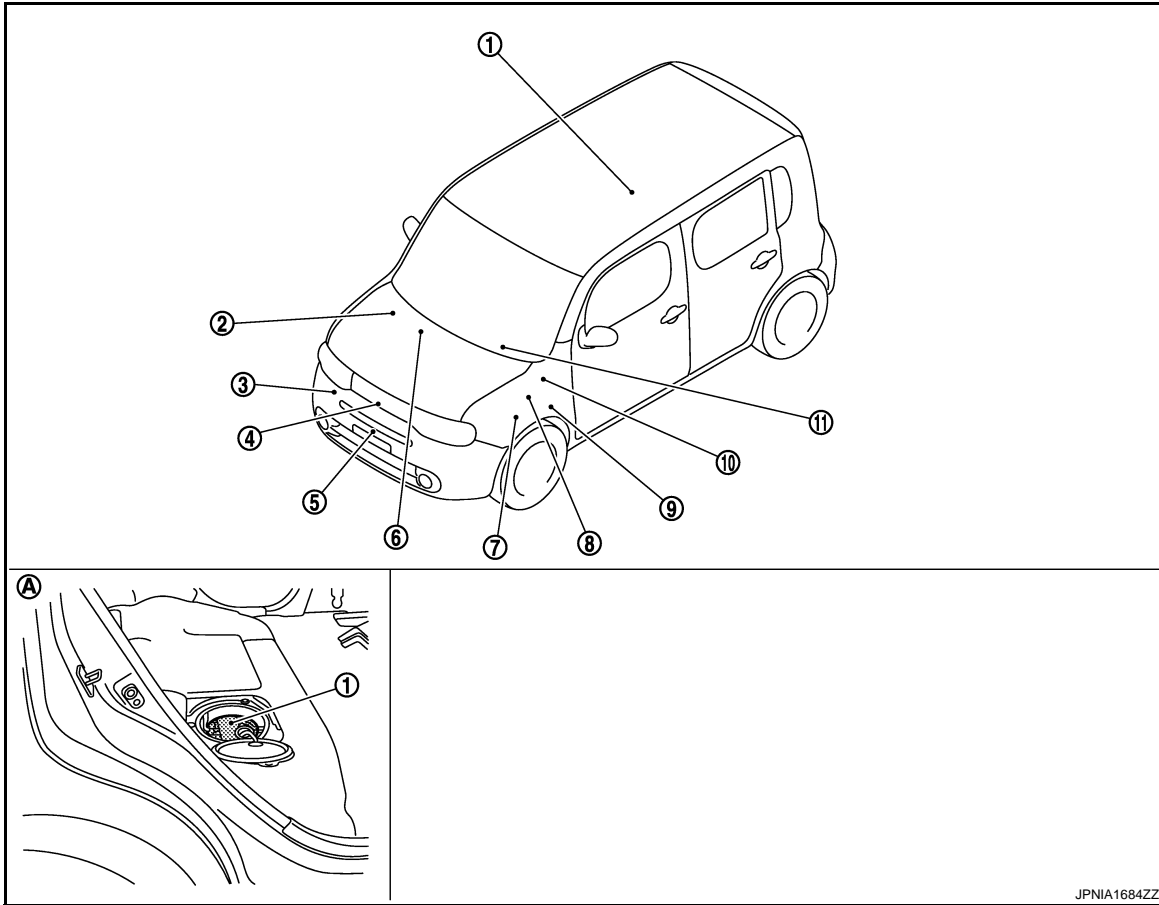

JPNIA1684ZZ

- | | | |
|--|--|--|
| <p>1. Fuel level sensor unit</p> <p>Ambient sensor</p> <p>4. Refer to HAC-24, "Component Parts Location".</p> <p>IPDM E/R</p> <p>7. Refer to PCS-6, "Component Parts Location" (with I-KEY).</p> <p>Refer to PCS-36, "Component Parts Location" (without I-KEY).</p> <p>BCM</p> <p>10. Refer to BCS-9, "Component Parts Location".</p> <p>A. Under of right side rear seat</p> | <p>2. ABS actuator and electric unit (control unit)</p> <p>Refer to BRC-18, "Component Parts Location".</p> <p>Oil pressure switch</p> <p>5. Refer to EM-86, "Exploded View".</p> <p>ECM</p> <p>8. Refer to EC-23, "Component Parts Location".</p> <p>Combination meter</p> <p>11.</p> | <p>3. Washer level switch</p> <p>Refer to WW-9, "Component Parts Location".</p> <p>A/C auto amp. (auto A/C models)</p> <p>6. Refer to HAC-24, "Component Parts Location".</p> <p>TCM</p> <p>9. Refer to TM-70, "Component Parts Location".</p> |
|--|--|--|

INFORMATION DISPLAY : Component Description

INFOID:000000005490732

Unit	Description
Combination meter	Controls the information display according to the signal received from each unit.
Fuel level sensor unit	Refer to MWI-42, "Description" .
ECM	Transmits the fuel consumption monitor signal to the combination meter via CAN communication.
ABS actuator and electric unit (control unit)	Transmits the vehicle speed signal to the combination meter via CAN communication.

METER SYSTEM

< SYSTEM DESCRIPTION >

Unit	Description
Ambient sensor	Detects the ambient air temperature and transmits the ambient sensor signal to the combination meter.
A/C auto amp.	Transmits the A/C auto amp. connection recognition signal to the combination meter.

DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (METER)

Diagnosis Description

INFOID:000000005490733

SELF-DIAGNOSIS MODE

- Segment display operation can be checked in self-diagnosis mode.
- Meters/gauges can be checked in self-diagnosis mode.


OPERATION PROCEDURE

1. Turn ignition switch ON, and switch the trip meter to "trip A" or "trip B".

NOTE:

If the diagnosis function is activated with "trip A" displayed, the mileage on "trip A" is reset to "0000.0". (The same way for "trip B".)

2. Turn ignition switch OFF.
3. While pressing the trip reset switch (1), turn ignition switch ON again.

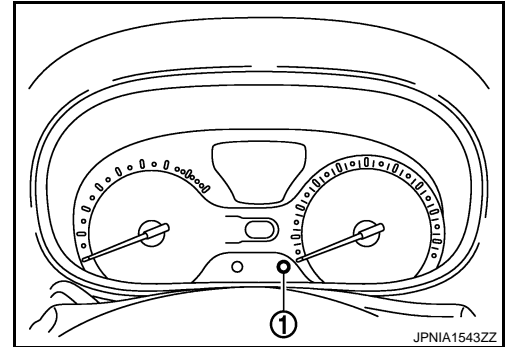


4. Make sure that the trip meter displays "0000.0".
5. Press the trip reset switch at least 3 times. (Within 7 seconds after the ignition switch is turned ON.)

6. The unified meter control unit is turned to self-diagnosis mode.
 - Speedometer and tachometer return to zero, simultaneously.
 - All of the segments of engine coolant temperature gauge, fuel gauge, odo/trip meter, shift position indicator (A) for A/T models and information display illuminate.

NOTE:

For M/T models, start-up lamp (B) illuminate instead of shift position indicator.

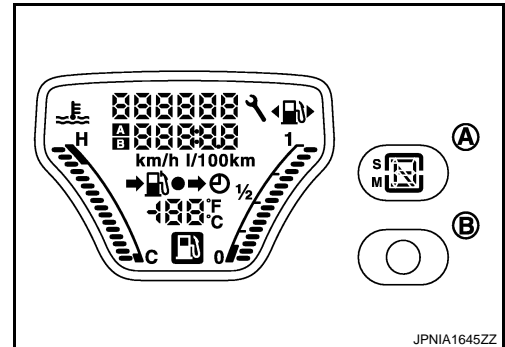

NOTE:


- Check combination meter power supply and ground circuit when the self-diagnosis mode of the combination meter does not start. Replace combination meter if power supply and ground circuit are normal.
- If any of the segments are not displayed, replace combination meter.

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P

DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

7. Each meter activates by pressing the trip reset switch.

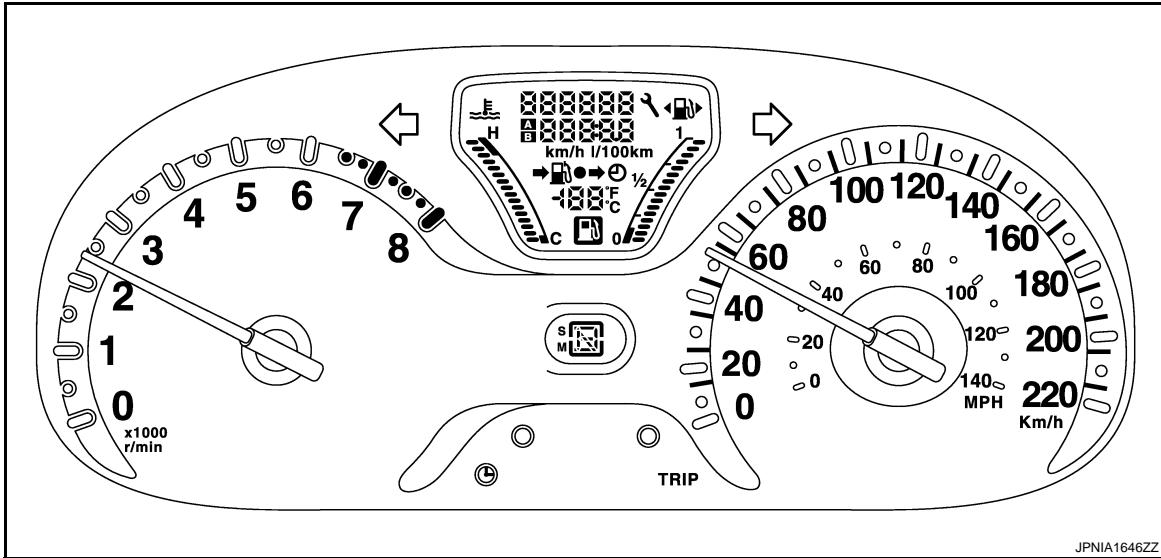

NOTE:

- If any of the meters or gauges is not activated, replace combination meter.
- The figure is reference.

CONSULT-III Function (METER/M&A)

INFOID:000000005490734

CONSULT-III APPLICATION ITEMS

CONSULT-III can perform the following diagnosis modes via CAN communication and the combination meter.

System	Diagnosis mode	Description
METER/M&A	Self Diagnostic Result	The combination meter checks the conditions and displays memorized errors.
	Data Monitor	Displays the combination meter input/output data in real time.
	Special function	Lighting history of the warning lamp and indicator lamp can be checked.

SELF DIAG RESULT

Refer to [MWI-63, "DTC Index"](#).

DATA MONITOR

Display Item List

X: Applicable

Display item [Unit]	MAIN SIGNALS	Description
SPEED METER [km/h]	X	Value of vehicle speed signal received from ABS actuator and electric unit (control unit) via CAN communication. NOTE: 655.35 is displayed when the malfunction signal is received.
SPEED OUTPUT [km/h]	X	Vehicle speed signal value transmitted to other units via CAN communication. NOTE: 655.35 is displayed when the malfunction signal is received.
ODO OUTPUT [km/h or mph]		Odometer signal value transmitted to other units via CAN communication.
TACHO METER [rpm]	X	Value of the engine speed signal received from ECM via CAN communication. NOTE: 8191.875 is displayed when the malfunction signal is received.
FUEL METER [L]	X	Fuel level indicated on combination meter.

DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description	A
W TEMP METER [°C]	X	Value of engine coolant temperature signal is received from ECM via CAN communication. NOTE: 215 is displayed when the malfunction signal is input.	B
ABS W/L [On/Off]		Status of ABS warning lamp detected from ABS warning lamp signal is received from ABS actuator and electric unit (control unit) via CAN communication.	C
VDC/TCS IND [On/Off]		Status of VDC OFF indicator lamp detected from VDC OFF indicator lamp signal is received from ABS actuator and electric unit (control unit) via CAN communication.	D
SLIP IND [On/Off]		Status of SLIP indicator lamp detected from slip indicator lamp signal received from ABS actuator and electric unit (control unit) via CAN communication.	E
BRAKE W/L [On/Off]		Status of brake warning lamp detected from brake warning lamp signal is received from ABS actuator and electric unit (control unit) via CAN communication. NOTE: Displays "Off" if the brake warning lamp is illuminated when the valve check starts, the parking brake switch is turned ON or the brake fluid level switch is turned ON.	F
DOOR W/L [On/Off]		Status of door warning detected from door switch signal received from BCM via CAN communication.	G
HI-BEAM IND [On/Off]		Status of high beam indicator lamp detected from high beam request signal is received from BCM via CAN communication.	H
TURN IND [On/Off]		Status of turn indicator lamp detected from turn indicator signal is received from BCM via CAN communication.	I
LIGHT IND [On/Off]		Status of light indicator lamp detected from position light request signal is received from BCM via CAN communication.	J
OIL W/L [On/Off]		Status of oil pressure warning lamp detected from oil pressure switch signal is received from BCM via CAN communication.	K
MIL [On/Off]		Status of malfunction indicator lamp detected from malfunctioning indicator lamp signal is received from ECM via CAN communication.	L
CRUISE IND [On/Off]		Status of CRUISE indicator lamp detected from CRUISE indicator lamp signal is received from ECM via CAN communication.	M
SPORT IND [On/Off]		Status of OD OFF indicator lamp detected from OD OFF indicator signal is received from TCM via can communication.	MWI
FUEL W/L [On/Off]		Low-fuel warning lamp status detected by the identified fuel level.	O
AIR PRES W/L [On/Off]		Status of low tire pressure warning lamp detected from tire pressure signal is received from BCM via CAN communication.	P
KEY G/Y W/L [On/Off]		Status of KEY warning lamp (G/Y) detected from KEY warning lamp signal is received from BCM via CAN communication.	
KEY KNOB W/L [On/Off]		Status of shift P warning lamp detected from shift P warning lamp signal is received from BCM via CAN communication.	
EPS W/L [On/Off]		Status of EPS warning lamp detected from EPS warning lamp signal is received from EPS control unit via CAN communication.	
e-4WD W/L [Off]		This item is displayed, but cannot be monitored.	
LCD [NIGN B&P, IGN B&P, SFT P, NO KY]		Status of engine start operation indicator lamp, shift P warning lamp and KEY warning lamp, detected from engine start operation indicator lamp signal, shift P warning lamp signal and KEY warning lamp signal are received from BCM via CAN communication.	
SHIFT IND [P, R, N, D, L]		Status of shift position, detected from shift position signal received from TCM via CAN communication.	
O/D OFF SW [On/Off]		Status of overdrive control switch detected from CVT shift selector.	
PKB SW [On/Off]		Status of parking brake switch.	

DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

Display item [Unit]	MAIN SIGNALS	Description
BUCKLE SW [On/Off]		Status of seat belt buckle switch (driver side).
BRAKE OIL SW [On/Off]		Status of brake fluid level switch.
A/C AMP CONN [On/Off]		Status of A/C auto amp. connection recognition signal.
DISTANCE [km]		Value of possible driving distance calculated by combination meter.
OUTSIDE TEMP [°C or °F]		Ambient air temperature value converted from ambient sensor signal received from ambient sensor. NOTE: This may not match with the temperature value indicated on the information display. (Because the information display value is a corrected value from the ambient sensor input value.)
FUEL LOW SIG [On/Off]		Status of fuel level low warning signal to output to AV control unit via CAN communication.
BUZZER [On/Off]	X	Buzzer status (in the combination meter) is detected from the buzzer output signal received from each unit via CAN communication and the warning output condition of the combination meter.

NOTE:

Some items are not available according to vehicle specification.

SPECIAL FUNCTION

Special menu

Display item	Description
W/L ON HISTORY	Lighting history of warning lamp and indicator lamp can be checked.

W/L ON HISTORY

- Stores histories when warning/indicator lamp is turned on.
- “W/L ON HISTORY” indicates the “TIME” when the warning/ indicator lamp is turned on.
- The “TIME” above is :
 - 0 : The condition that the warning/indicator lamp has been turned on 1 or more times after starting the engine and waiting for 30 seconds.
 - 1 - 39 : The number of times the engine was restarted after the 0 condition.
 - NO W/L ON HISTORY : Stores NO (0) turning on history of warning/indicator lamp.

NOTE:

- W/L ON HISTORY is not stored for approximately 30 seconds after the engine starts.
- Brake warning lamp does not store any history when the parking brake is applied or the brake fluid level gets low.

Display Item

Display item	Description
ABS W/L	Lighting history of ABS warning lamp.
VDC/TCS IND	Lighting history of VDC OFF indicator lamp.
SLIP IND	Lighting history of SLIP indicator lamp.
BRAKE W/L	Lighting history of brake warning lamp.
DOOR W/L	Lighting history of door warning lamp.
TRUNK/GLAS-H	This item is displayed, but cannot be monitored.
OIL W/L	Lighting history of oil pressure warning lamp.
C-ENG W/L	Lighting history of malfunction indicator lamp.
C-ENG2 W/L	This item is displayed, but cannot be monitored.

DIAGNOSIS SYSTEM (METER)

< SYSTEM DESCRIPTION >

Display item	Description	
CRUISE IND	Lighting history of CRUISE indicator lamp.	A
SET IND	This item is displayed, but cannot be monitored.	
CRUISE W/L	This item is displayed, but cannot be monitored.	B
BA W/L	This item is displayed, but cannot be monitored.	
O/D OFF IND	This item is displayed, but cannot be monitored.	
ATC/T-AMT W/L	This item is displayed, but cannot be monitored.	C
ATF TEMP W/L	This item is displayed, but cannot be monitored.	
CVT IND	This item is displayed, but cannot be monitored.	D
SPORT IND	Lighting history of OD OFF indicator lamp.	
4WD W/L	This item is displayed, but cannot be monitored.	
FUEL W/L	Lighting history of low fuel level warning lamp.	E
WASHER W/L	Lighting history of washer warning lamp.	
AIR PRES W/L	Lighting history of low tire pressure warning lamp.	F
KEY G/Y W/L	Lighting history of KEY warning lamp (G/Y).	
KEY R W/L	This item is displayed, but cannot be monitored.	
KEY KNOB W/L	This item is displayed, but cannot be monitored.	G
EPS W/L	Lighting history of EPS warning lamp.	
e-4WD	This item is displayed, but cannot be monitored.	
AFS OFF IND	This item is displayed, but cannot be monitored.	H
4WAS/RAS W/L	This item is displayed, but cannot be monitored.	
HDC W/L	This item is displayed, but cannot be monitored.	I
SYS FAIL W/L	This item is displayed, but cannot be monitored.	
SFT POSI W/L	This item is displayed, but cannot be monitored.	
HV BAT W/L	This item is displayed, but cannot be monitored.	J
HEV BRAKE W/L	This item is displayed, but cannot be monitored.	
SFT OPER W/L	This item is displayed, but cannot be monitored.	K
LANE W/L	This item is displayed, but cannot be monitored.	
CHAGE W/L	Lighting history of charge warning lamp.	
OIL LEV LOW	This item is displayed, but cannot be monitored.	L
DPF W/L	This item is displayed, but cannot be monitored.	
TRAILER W/L	This item is displayed, but cannot be monitored.	M
RUN FLAT W/L	This item is displayed, but cannot be monitored.	
E-SUS W/L	This item is displayed, but cannot be monitored.	
LAUNCH CNT W/L	This item is displayed, but cannot be monitored.	MWI

O

P

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:000000005490735

CAN (Controller Area Network) is a serial communication system for real time application. It is an on-vehicle multiplex communication system with high data communication speed and excellent error detectability. Many electronic control units are equipped onto vehicles, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with two communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only. CAN Communication Signal Chart. Refer to [LAN-23, "CAN Communication Signal Chart"](#).

DTC Logic

INFOID:000000005490736

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
U1000	CAN COMM CIRCUIT	When combination meter is not transmitting or receiving CAN communication signal for 2 seconds or more.	CAN communication system

Diagnosis Procedure

INFOID:000000005490737

1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result" of "METER/M&A".

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to [LAN-14, "Trouble Diagnosis Flow Chart"](#).
NO >> Refer to [GI-35, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

Description

INFOID:000000005490738

Initial diagnosis of combination meter.

DTC Logic

INFOID:000000005490739

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
U1010	CONTROL UNIT (CAN)	If any malfunction is detected during initial diagnosis of combination meter CAN controller	Combination meter

Diagnosis Procedure

INFOID:000000005490740

1. REPLACE COMBINATION METER

When DTC "U1010" is detected, replace combination meter.

>> INSPECTION END

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

B2205 VEHICLE SPEED

< DTC/CIRCUIT DIAGNOSIS >

B2205 VEHICLE SPEED

Description

INFOID:000000005490741

Vehicle speed signal is transmitted from ABS actuator and electric unit (control unit) via CAN communication to combination meter.

DTC Logic

INFOID:000000005490742

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
B2205	VEHICLE SPEED	An abnormal vehicle speed signal is input from ABS actuator and electric unit (control unit) for 2 seconds or more	<ul style="list-style-type: none">• Wheel sensor• ABS actuator and electric unit (control unit)

Diagnosis Procedure

INFOID:000000005490743

1. PERFORM SELF-DIAGNOSIS OF ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Perform "Self Diagnostic Result" of ABS actuator and electric unit (control unit), and repair or replace malfunctioning parts.

>> Refer to [BRC-23, "CONSULT-III Function"](#).

B2267 ENGINE SPEED

< DTC/CIRCUIT DIAGNOSIS >

B2267 ENGINE SPEED

Description

INFOID:000000005490744

The engine speed signal is transmitted from ECM to the combination meter via CAN communication.

DTC Logic

INFOID:000000005490745

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
B2267	ENGINE SPEED	ECM continuously transmits abnormal engine speed signals for 2 seconds or more	<ul style="list-style-type: none">• Crankshaft position sensor (POS)• ECM

Diagnosis Procedure

INFOID:000000005490746

1. PERFORM SELF-DIAGNOSIS OF ECM

Perform "Self Diagnostic Result" of ECM, and repair or replace malfunctioning parts.

>> Refer to [EC-443, "DTC Index"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

B2268 WATER TEMP

< DTC/CIRCUIT DIAGNOSIS >

B2268 WATER TEMP

Description

INFOID:000000005490747

The engine coolant temperature signal is transmitted from ECM to the combination meter via CAN communication.

DTC Logic

INFOID:000000005490748

DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	Diagnostic item is detected when ...	Probable malfunction location
B2268	WATER TEMP	ECM continuously transmits abnormal engine coolant temperature signals for 60 seconds or more	<ul style="list-style-type: none">• Engine coolant temperature sensor• ECM

Diagnosis Procedure

INFOID:000000005490749

1. PERFORM SELF-DIAGNOSIS OF ECM

Perform "Self Diagnosis Result" of ECM, and repair or replace malfunctioning parts.

>> Refer to [EC-443. "DTC Index"](#).

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

POWER SUPPLY AND GROUND CIRCUIT COMBINATION METER

COMBINATION METER : Diagnosis Procedure

INFOID:000000005490750

1. CHECK FUSE

Check for blown fuses.

Power source	Fuse No.
Battery	13
Ignition switch ACC or ON	20
Ignition switch ON or START	3

Is the inspection result normal?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

2. CHECK POWER SUPPLY CIRCUIT

Check voltage between combination meter harness connector and ground.

Terminals		Ignition switch position	Voltage (Approx.)
(+)	(-)		
Combination meter		Ground	Battery voltage
Connector	Terminal		
M34	27		
	15		
	28		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness between combination meter and fuse.

3. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M34	22		Existed
	23		

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

IPDM E/R (WITH INTELLIGENT KEY SYSTEM)

IPDM E/R (WITH INTELLIGENT KEY SYSTEM) : Diagnosis Procedure

INFOID:000000005789460

1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Signal name	Fuses and fusible link No.
Battery power supply	C
	D
	J

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and the ground.

Terminals		Voltage (Approx.)
(+)	(-)	
IPDM E/R		Battery voltage
Connector	Terminal	
E9	1	
	2	
E10	8	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair the harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between IPDM E/R harness connectors and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E11	9		Existed
E12	19		

Does continuity exist?

YES >> INSPECTION END

NO >> Repair the harness or connector.

IPDM E/R (WITHOUT INTELLIGENT KEY SYSTEM)

IPDM E/R (WITHOUT INTELLIGENT KEY SYSTEM) : Diagnosis Procedure

INFOID:000000005789461

1.CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

Signal name	Fuses and fusible link No.
Battery power supply	C
	D
	J

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and the ground.

Terminals		(-)	Voltage (Approx.)
(+)			
IPDM E/R		Ground	Battery voltage
Connector	Terminal		
E9	1		
	2		
E10	8		

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair the harness or connector.

3.CHECK IGNITION POWER SUPPLY CIRCUIT

1. Turn the ignition switch ON.
2. Check voltage between IPDM E/R harness connector and the ground.

Terminals		(-)	Voltage (Approx.)
(+)			
IPDM E/R		Ground	Battery voltage
Connector	Terminal		
E12	18		

Is the measurement value normal?

YES >> GO TO 4.

NO >> Repair the harness or connector.

4.CHECK GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Check continuity between IPDM E/R harness connectors and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E11	9		Existed
E12	19		

Does continuity exist?

YES >> INSPECTION END

NO >> Repair the harness or connector.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

FUEL LEVEL SENSOR SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FUEL LEVEL SENSOR SIGNAL CIRCUIT

Description

INFOID:000000005490753

The fuel level sensor unit and fuel pump detect the fuel level in the fuel tank and transmit the fuel level sensor signal to the combination meter.

Component Function Check

INFOID:000000005490754

1. CHECK COMBINATION METER OUTPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and compare the "FUEL METER" monitor value with the fuel gauge reading on the combination meter.

Fuel gauge indication position	Reference value of data monitor [L]
Full (16/16)	Approx. 48.0
Three quarters (12/16)	Approx. 36.8
Half (8/16)	Approx. 25.6
A quarter (4/16)	Approx. 14.4
Empty (0/16)	Approx. 3.2

Does monitor value match fuel gauge reading?

YES >> INSPECTION END

NO >> Replace combination meter. Refer to [MWI-97, "Removal and Installation"](#).

Diagnosis Procedure

INFOID:000000005490755

1. CHECK COMBINATION METER INPUT SIGNAL

- Turn ignition switch ON.
- Check voltage between combination meter harness connector and ground.

Terminals		Voltage (Pyrex.)
(+)	(-)	
Combination meter		<p style="text-align: center;">JPNI1546ZZ</p>
Connector	Terminal	
M34	6	

Does it match fuel gauge reading?

YES >> GO TO 2.

NO >> Replace the combination meter. Refer to [MWI-97, "Removal and Installation"](#).

2. CHECK FUEL LEVEL SENSOR CIRCUIT

- Turn ignition switch OFF.
- Disconnect combination meter connector and fuel level sensor unit connector.
- Check continuity between combination meter harness connector and fuel level sensor unit harness connector.

Combination meter		Fuel level sensor unit		Continuity
Connector	Terminal	Connector	Terminal	
M34	6	B40	2	Existed

FUEL LEVEL SENSOR SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

4. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M34	6		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK FUEL LEVEL SENSOR GROUND CIRCUIT

Check continuity between fuel level sensor unit harness connector and combination meter harness connector.

Fuel level sensor unit		Combination meter		Continuity
Connector	Terminal	Connector	Terminal	
B40	5	M34	24	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

Component Inspection

INFOID:000000005490756

1.REMOVE FUEL LEVEL SENSOR UNIT

Remove the fuel level sensor unit. Refer to [FL-5, "Removal and Installation"](#).

>> GO TO 2.

2.CHECK FUEL LEVEL SENSOR UNIT

Check the resistance between fuel level sensor unit and fuel pump.


Terminals		Condition	Resistance (Ω) (Approx.)	Height [mm (in)]
Fuel level sensor unit				
2	5	Full* (A)	5.0	165.7 (6.5)
		Empty* (B)	81.5	21.1 (0.83)

*: When float rod is contact with stopper.

Is inspection result OK?

YES >> INSPECTION END

NO >> Replace fuel level sensor unit and fuel pump. Refer to [FL-5, "Removal and Installation"](#).

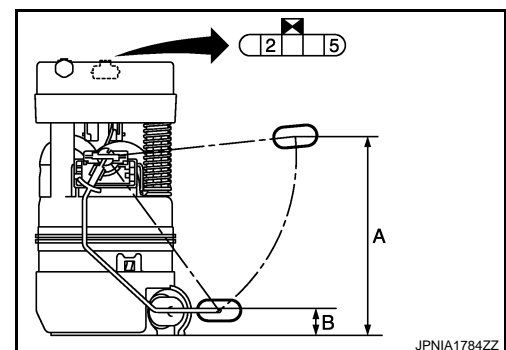

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

OIL PRESSURE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

OIL PRESSURE SWITCH SIGNAL CIRCUIT

Description

INFOID:000000005490757

Detects the engine oil pressure and transmits the oil pressure switch signal to IPDM E/R.

Component Function Check

INFOID:000000005490758

1.CHECK COMBINATION METER INPUT SIGNAL

Select the "Data Monitor" for the "METER/M&A" and check the "OIL W/L" monitor value.

"OIL W/L"

Ignition switch ON : On

Engine running : Off

>> INSPECTION END

Diagnosis Procedure

INFOID:000000005490759

1.CHECK OIL PRESSURE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and oil pressure switch connector.
3. Check continuity between IPDM E/R harness connector and oil pressure switch harness connector.

Terminals				Continuity
(+)		(-)		
IPDM E/R		Oil pressure switch		
Connector	Terminal	Connector	Terminal	
E13	24	F63	1	Existed

4. Check continuity between IPDM E/R harness connector and ground.

Terminals			Continuity
(+)		(-)	
IPDM E/R		Ground	
Connector	Terminal		
E13	24		Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

Component Inspection

INFOID:000000005490760


1.CHECK OIL PRESSURE SWITCH

OIL PRESSURE SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Check continuity between oil pressure switch and ground.

Condition	Continuity
Engine stopped	Existed
Engine running	Not existed

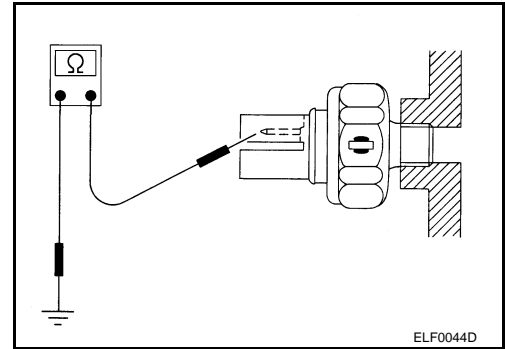

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace oil pressure switch. Refer to [EM-86, "Exploded View"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

WASHER LEVEL SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

WASHER LEVEL SWITCH SIGNAL CIRCUIT

Description

INFOID:000000005490761

Transmits the washer level switch signal to the combination meter.

Diagnosis Procedure

INFOID:000000005490762

1. CHECK WASHER LEVEL SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and washer level switch connector.
3. Check continuity between combination meter harness connector and washer level switch harness connector.

Terminals				Continuity
Combination meter		Washer level switch		
Connector	Terminal	Connector	Terminal	
M34	17	E52	1	Existed

4. Check continuity between combination meter harness connector and ground.

Terminals			Continuity
Combination meter		Ground	
Connector	Terminal		
M34	17		Not existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

2. CHECK WASHER LEVEL SWITCH GROUND CIRCUIT

Check continuity between washer level switch connector and ground.

Terminals			Continuity
Washer level switch		Ground	
Connector	Terminal		
E52	2		Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

Component Inspection

INFOID:000000005490763

1. CHECK WASHER LEVEL SWITCH

1. Turn ignition switch OFF.
2. Disconnect washer level switch connector.
3. Check washer level switch.

Terminals		Condition	Continuity
Washer level switch			
1	2		
		Washer level switch ON	Existed
		Washer level switch OFF	Not existed

Is the inspection result normal?

YES >> INSPECTION END

WASHER LEVEL SWITCH SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

NO >> Replace washer level switch. Refer to [WW-140. "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

MWI

O

P

A/C AUTO AMP. CONNECTION RECOGNITION SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

A/C AUTO AMP. CONNECTION RECOGNITION SIGNAL CIRCUIT

Description

INFOID:000000005490764

A/C auto amp. transmits the A/C auto amp. connection recognition signal to the combination meter.

Diagnosis Procedure

INFOID:000000005490765

1. CHECK A/C AUTO AMP. CONNECTION RECOGNITION SIGNAL

1. Turn ignition switch ON.
2. Check voltage between combination meter harness connector and ground.

Terminals		Voltage (Pyrex.)
(+)	(-)	
Combination meter		Ground
Connector	Terminal	
M34	31	
		5 V

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. CHECK A/C AUTO AMP. CONNECTION RECOGNITION SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector and A/C auto amp. connector.
3. Check continuity between combination meter harness connector and A/C auto amp. harness connector.

Combination meter		A/C auto amp.		Continuity
Connector	Terminal	Connector	terminal	
M34	31	M50	2	Existed

4. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M34	31		Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

COMBINATION METER

Reference Value

INFOID:000000005490766

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
SPEED METER [km/h]	Ignition switch ON	While driving	Equivalent to speedometer reading NOTE: 655.35 is displayed when the malfunction signal is received
SPEED OUTPUT [km/h]	Ignition switch ON	While driving	Equivalent to speedometer reading NOTE: 655.35 is displayed when the malfunction signal is received
ODO OUTPUT [km/h or mph]	Ignition switch ON	—	Equivalent to odometer reading in combination meter
TACHO METER [rpm]	Ignition switch ON	Engine running	Equivalent to tachometer reading NOTE: 8191.875 is displayed when the malfunction signal is received
FUEL METER [L]	Ignition switch ON	—	Values according to fuel level
W TEMP METER [°C]	Ignition switch ON	—	Values according to engine coolant temperature NOTE: 215 is displayed when the malfunction signal is input
ABS W/L	Ignition switch ON	ABS warning lamp ON	On
		ABS warning lamp OFF	Off
VDC/TCS IND	Ignition switch ON	VDC OFF indicator lamp ON	On
		VDC OFF indicator lamp OFF	Off
SLIP IND	Ignition switch ON	SLIP Indicator lamp ON	On
		SLIP indicator lamp OFF	Off
BRAKE W/L	Ignition switch ON	Brake warning lamp ON	On
		Brake warning lamp OFF	Off
DOOR W/L	Ignition switch ON	Door warning lamp ON	On
		Door warning lamp OFF	Off
HI-BEAM IND	Ignition switch ON	High-beam indicator lamp ON	On
		High-beam indicator lamp OFF	Off
TURN IND	Ignition switch ON	Turn signal indicator lamp ON	On
		Turn signal indicator lamp OFF	Off
LIGHT IND	Ignition switch ON	Tail lamp indicator lamp ON	On
		Tail lamp indicator lamp OFF	Off
OIL W/L	Ignition switch ON	Oil pressure warning lamp ON	On
		Oil pressure warning lamp OFF	Off
MIL	Ignition switch ON	Malfunction indicator lamp ON	On
		Malfunction indicator lamp OFF	Off
CRUISE IND	Ignition switch ON	CRUISE indicator lamp ON	On
		CRUISE indicator lamp OFF	Off

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
SPORT IND	Ignition switch ON	OD OFF indicator lamp ON	On
		OD OFF indicator lamp OFF	Off
FUEL W/L	Ignition switch ON	Low-fuel warning displayed	On
		Low-fuel warning not displayed	Off
AIR PRES W/L	Ignition switch ON	Low tire pressure lamp ON	On
		Low tire pressure lamp OFF	Off
KEY G/Y W/L	Ignition switch ON	KEY warning lamp (G/Y) ON	On
		KEY warning lamp (G/Y) OFF	Off
KEY KNOB W/L	Ignition switch ON	Shift P warning lamp ON	On
		Shift P warning lamp OFF	Off
EPS W/L	Ignition switch ON	EPS warning lamp ON	On
		EPS warning lamp OFF	Off
e-4WD W/L	Ignition switch ON	NOTE: This item is displayed, but cannot be monitored.	Off
LCD	Ignition switch LOCK or ACC	Engine start operation indicator lamp ON	NIGN B&P
	Ignition switch ON	Engine start operation indicator lamp ON	IGN B&P
	Ignition switch LOCK	Shift P warning lamp ON	SFT P
	Ignition switch ON	KEY warning lamp blinking	NO KY
SHIFT IND	Ignition switch ON	Shift position indicator P display	P
		Shift position indicator R display	R
		Shift position indicator N display	N
		Shift position indicator D display	D
		Shift position indicator L display	L
O/D OFF SW	Ignition switch ON	Overdrive control switch ON	On
		Overdrive control switch OFF	Off
PKB SW	Ignition switch ON	Parking brake switch ON	On
		Parking brake switch OFF	Off
BUCKLE SW	Ignition switch ON	Seat belt (driver side) not fastened	On
		Seat belt (driver side) fastened	Off
BRAKE OIL SW	Ignition switch ON	Brake fluid level switch ON	On
		Brake fluid level switch OFF	Off
A/C AMP CONN	Ignition switch ON	Other than the following	On
		Receives A/C auto amp. connection recognition signal	Off
DISTANCE [km]	Ignition switch ON	—	Possible driving distance calculated by combination meter
OUTSIDE TEMP [°C or °F]	Ignition switch ON	—	Equivalent to ambient temperature NOTE: This may not match the indicated value on the information display.
FUEL LOW SIG	Ignition switch ON	Low fuel warning displayed	On
		Low fuel warning not displayed	Off

COMBINATION METER


< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
BUZZER	Ignition switch ON	Buzzer ON	On
		Buzzer OFF	Off

NOTE:

Some items are not available according to vehicle specification.

TERMINAL LAYOUT

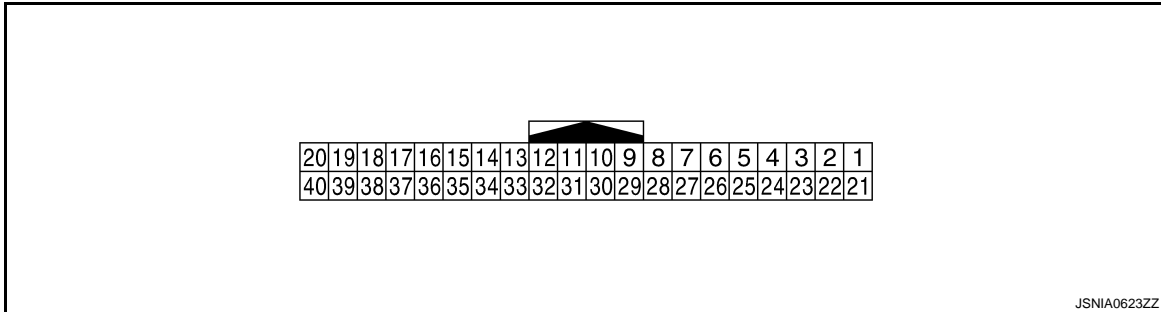

PHYSICAL VALUES



Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (L)	—	CAN-H	—	—	—	—
2 (P)	—	CAN-L	—	—	—	—
3 (V)	Ground	Vehicle speed signal (2-pulse)	Output	Ignition switch ON	Speedometer operated [When vehicle speed is ap- prox. 40 km/h (25 MPH)]	<p>NOTE: The maximum voltage varies de- pending on the specification (destination unit).</p> <p style="text-align: right;">JSNIA0015GB</p>
4 (Y)	Ground	Vehicle speed signal (8-pulse)	Output	Ignition switch ON	Speedometer operated [When vehicle speed is ap- prox. 40 km/h (25 MPH)]	<p>NOTE: The maximum voltage varies de- pending on the specification (destination unit).</p> <p style="text-align: right;">JSNIA0012GB</p>
6 (BR/Y)	Ground	Fuel level sensor signal	Input	Ignition switch ON	—	<p style="text-align: right;">JPNIA1546ZZ</p>

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

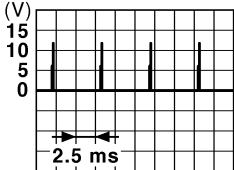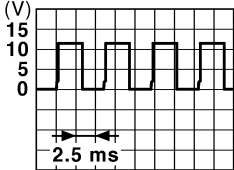Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
7 (R/G)	Ground	Air bag signal	Input	Ignition switch ON	Air bag warning lamp ON	5 V
					Air bag warning lamp OFF	0 V
8 (P)	Ground	Overdrive control switch signal	Input	Ignition switch ON	Overdrive control switch ON	4 V
					Overdrive control switch OFF	0 V
9 (O)	Ground	Seat belt buckle switch sig- nal (driver side)	Input	Ignition switch ON	When driver seat belt is fas- tened.	12 V
					When driver seat belt is un- fastened.	0 V
10 (SB)	Ground	Parking brake switch signal	Input	Engine idling	Parking brake applied.	0 V
					Parking brake released.	5 V
11 (G/R)	Ground	Brake fluid level switch sig- nal	Input	Ignition switch ON	Brake fluid level is normal	12 V
					Brake fluid level is less than LOW level	0 V
13 (B/R)	Ground	Illumination control signal	Output	Ignition switch ON	<ul style="list-style-type: none"> Lighting switch 1ST When meter illumination is maximum 	 <p style="text-align: right; font-size: small;">JPNIA1687GB</p>
					<ul style="list-style-type: none"> Lighting switch 1ST When meter illumination is step 11 	 <p style="text-align: right; font-size: small;">JPNIA1686GB</p>
					<ul style="list-style-type: none"> Lighting switch 1ST When meter illumination is minimum 	12 V
15 (L/Y)	Ground	ACC power supply	Input	Ignition switch ACC	—	Battery voltage
17 (G)	Ground	Washer level switch signal	Input	Ignition switch ON	Low washer fluid warning lamp ON	0 V
					Low washer fluid warning lamp OFF	12 V
18 (R/Y)	Ground	Security signal	Input	Ignition switch ON	Security warning lamp ON	0 V
					Security warning lamp OFF	12 V

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >



Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
19 (V/W)	Ground	Ambient sensor signal	Input	Ignition switch ON	Changes depending to am- bient temperature.	<p style="text-align: right; font-size: small;">JSNIA0014GB</p>
20 (R/W)	Ground	Ambient sensor ground	—	Ignition switch ON	—	0 V
21 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
22 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
23 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
24 (V)	Ground	Fuel level sensor signal ground	—	Ignition switch ON	—	0 V
25 (B)	Ground	VDC ground	—	Ignition switch ON	—	0 V
27 (LG)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
28 (GR)	Ground	Ignition signal	Input	Ignition switch ON	—	Battery voltage
29 (BR)	Ground	Passenger seat belt warn- ing signal	Input	Ignition switch ON	<ul style="list-style-type: none"> • When getting in the pas- senger seat. • When passenger seat belt is fastened. 	12 V
					<ul style="list-style-type: none"> • When getting in the pas- senger seat. • When passenger seat belt is unfastened. 	0 V
31 (R)	Ground	A/C auto amp. connection recognition signal	Input	Ignition switch ON	—	5 V

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

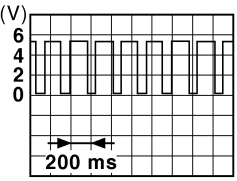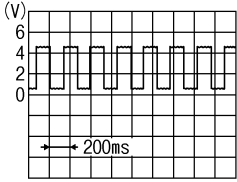
Terminal No. (Wire color)		Description		Input/ Output	Condition	Value (Approx.)
+	-	Signal name				
35 (BR)	Ground	Engine coolant temperature signal	Output	Ignition switch ON	Engine idling [Approximately 20°C (68°F)]	 <p style="text-align: right; font-size: small;">PKID0590E</p>
					Engine idling [Approximately 80°C (176°F)]	<p style="text-align: center;">0 V</p>  <p style="text-align: right; font-size: small;">SKIB3651J</p>
38 (GR)	Ground	Alternator signal	Input	Ignition switch ON	Charge warning lamp ON	0 V
					Charge warning lamp OFF	12 V

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Wiring Diagram - METER -

INFOID:000000005490767

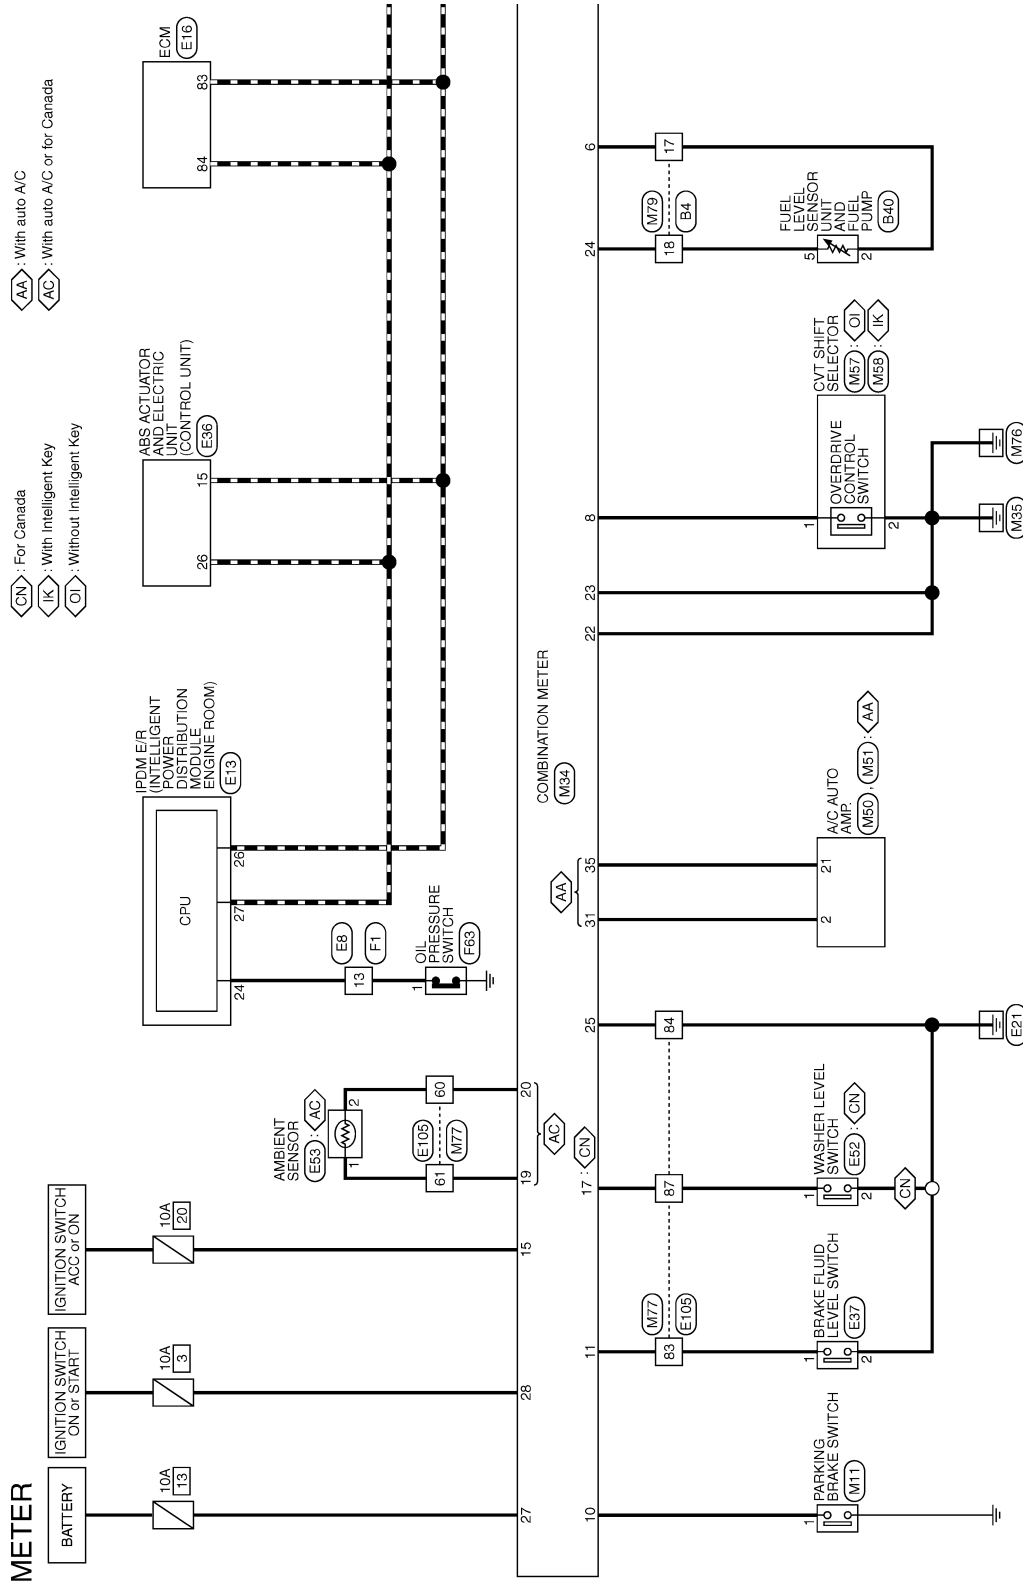

2009/10/02

JCNWM3419GI


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

- C : With CVT
- IK : With Intelligent Key
- OI : Without Intelligent Key
- HF : With telephone
- X2 : Except with 2-speakers

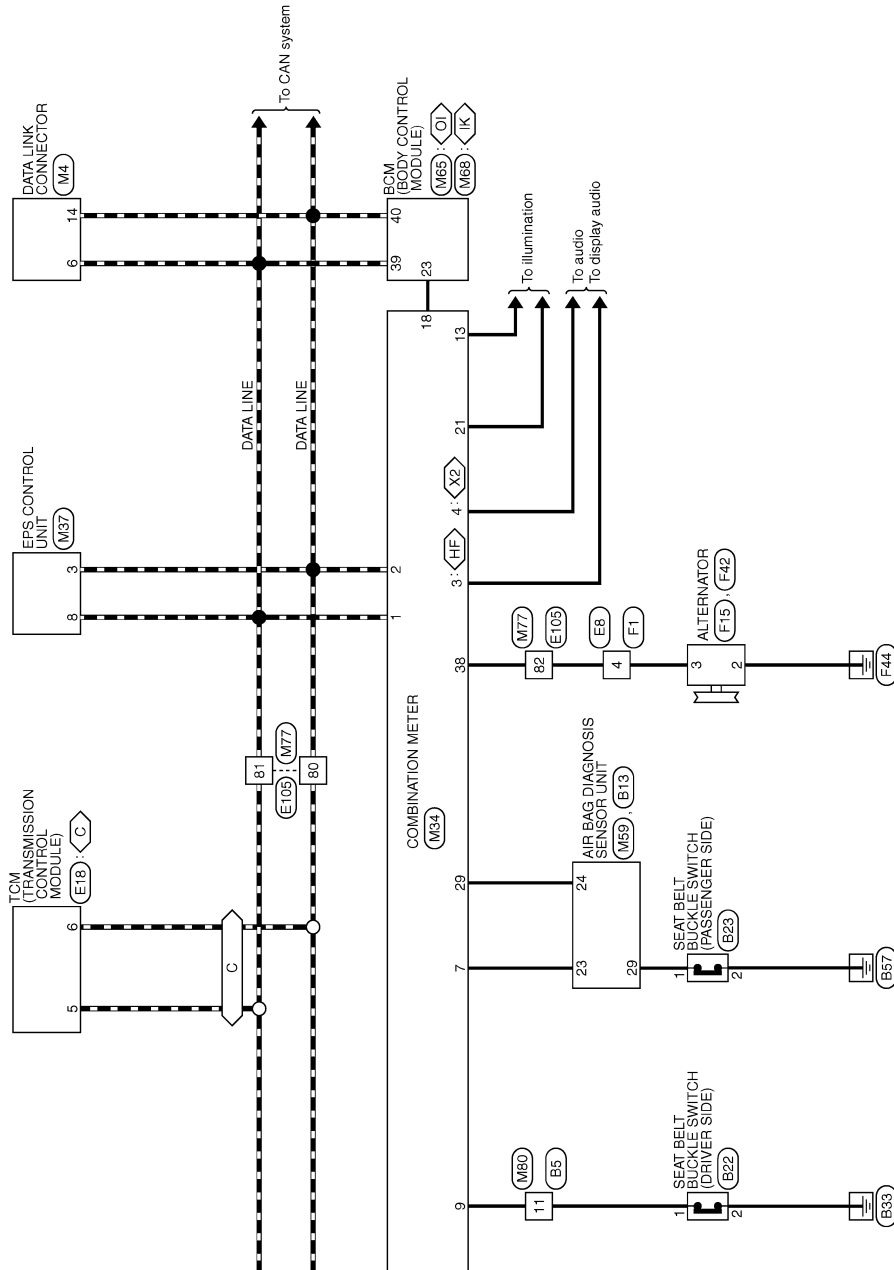

JCNWM3420G1


COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

METER

Connector No.	B4
Connector Name	WIRE TO WIRE
Connector Type	TH24MW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	O	-
4	P	-
5	W	-
6	W	-
7	P	-
8	SB	-
11	G	-
12	SB	-
13	L	-
15	R	-
16	GR	-
17	BR	-
18	L	-
19	Y	-
20	LG	-
22	Y	-
23	BR	-
24	O	-


Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Type	TH16MW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	GR	-


5	V	-
6	W	-
8	LG	-
9	R	-
11	O	-
13	GR	-
14	P	-
16	W	-

Connector No.	B13
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	NH22FY-1V-EX



Terminal No.	Color of Wire	Signal Name [Specification]
10	Y	PRH (+)
11	Y	PRH (-)
26	V	ODS INPUT
29	LG	RH BUCKLE SW INPUT
31	Y	SRH (+)
32	Y	SRH (-)
35	P	ORH (+)
36	L	ORH (-)
47	G	SATELLITE RH (+)
48	R	SATELLITE RH (-)
55	SHIELD	GND


Connector No.	B22
Connector Name	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)
Connector Type	HA03FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-


2	B	-
---	---	---

Connector No.	B23
Connector Name	SEAT BELT BUCKLE SWITCH (PASSENGER SIDE)
Connector Type	HA03FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	B	-

Connector No.	B40
Connector Name	FUEL LEVEL SENSOR UNIT AND FUEL PUMP
Connector Type	EO0FGY-RS



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	BR	-
3	B	-
4	P	-
5	L	-




COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

METER


Connector No.	E8
Connector Name	WIRE TO WIRE
Connector Type	SAA3MB-RS(0-SJZZ)



Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	LG	-
3	Y	-
4	W	-
7	Y	-
8	SB	-
9	L	-
10	V	-
11	P	-
12	BR	-
13	LG	-
14	Y	-
15	SB	-
16	L	-
17	W	-
18	O	-
21	G	-
23	SB	-
24	W	-
25	BR	-
26	B	-
27	GR	-
28	P	-
29	V	-
30	G	-
31	G	-
32	O	-
33	W	-
34	Y	-
35	V	-
36	P	-
37	LG	-
39	SB	-
40	GR	-
41	O	-
42	V	-
43	R	- [With CVT]
43	LG	- [With M/T]


44	R	-
46	W	-
47	G	-
48	BR	-

Connector No.	E13
Connector Name	SPARE FOR INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH1ZFW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
24	LG	-
25	Y	-
26	P	-
27	L	-
28	P	-
30	SB	-
31	W	-
33	O	-
34	R	-

Connector No.	E16
Connector Name	ECM
Connector Type	FR24FB-R28-L-RH



Terminal No.	Color of Wire	Signal Name [Specification]
83	P	CAN-L
84	L	CAN-H
88	LG	K LINE
93	L	IGNSW
94	SB	ASCDSW
95	BR	GND-A-ASCDSW
99	W	BRAKE

100	SB	BNCSW
102	O	AVCC-AP52
103	G	AP52
104	R	GND-A-AP52
105	G	VEH
106	V	AVCC-AP51
108	B	GND
110	BR	AP51
111	Y	GND-A-AP51

Connector No.	E18
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	TK24FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	LG	-
3	BR	-
4	O	-
5	L	-
6	P	-
10	R	-
11	W	-
12	L	-
13	SB	-
14	P	-
15	V	-
18	BR	-
19	R	-
20	SB	-
21	Y	-
22	GR	-

Connector No.	E36
Connector Name	ABS ACTUATOR AND ELECTRIC LIMIT CONTROL UNIT
Connector Type	BAA2FB-AH24-RH



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND (MTR)
2	Y	BAT (MTR)
3	L	BAT (SOL)
4	B	GND (SOL)
5	Y	DS FL
6	W	DP RL
8	O	DP RR
9	L	DP FR
10	R	DS FR
11	LG	K LINE
14	GR	CAN-L
15	P	CAN-L
16	BR	DP FL
17	G	DS RL
18	V	IGN
19	SB	DS RR
20	W	STOP LAMP SW
21	P	VDC OFF SW
25	R	CAN-H
26	L	CAN-H

Connector No.	E37
Connector Name	BRAKE FLUID LEVEL SWITCH
Connector Type	YV02FY



Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	B/Y	-

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

METER

Connector No.	E12
Connector Name	WASHER LEVEL SWITCH
Connector Type	Z02PBR




Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	B/W	-

Connector No.	E53
Connector Name	AMBIENT SENSOR
Connector Type	RS02PFB



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	AMBIENT SENSOR SIGNAL
2	O	SENSOR GROUND

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS1E-TM4




Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	W	-

3	SB	-
4	G	-
5	P	-
6	R	-
7	Y	-
8	O	-
9	W	-
10	SB	-
31	V	-
32	R	-
33	GR	-
34	P	-
35	Y	-
36	BR	-
39	SR	-
44	R	-
45	V	-
46	P	-
47	W	-
48	L	-
49	Y	-
50	W	-
51	BR	- [With GVT]
52	B	- [With M/T]
53	SB	-
54	W	- [With GVT]
54	O	- [With M/T]
57	LG	-
59	L	-
60	O	-
61	G	-
62	W	-
63	L	-
67	GR	- [With GVT]
67	V	- [With M/T]
69	P	-
70	SHIELD	-
71	GR	-
72	LG	-
73	P	-
74	V	-
76	Y	-
77	LG	-
78	O	-
79	G	-
80	P	-
81	L	-
82	W	-
83	BR	-
84	B	-
87	GR	-
91	W	-

92	Y	-
93	V	-
94	R	-
95	V	-
96	LG	-
97	R	-
98	SB	-
99	G	-
100	P	-

Connector No.	F1
Connector Name	WIRE TO WIRE
Connector Type	SAA38FB-RS1P-SJZ2



Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-
2	LG	-
3	R	-
4	Y	-
7	V	-
8	G	-
9	SB	-
10	L	-
11	Y	-
12	GR	-
13	BR	-
14	G	-
15	W	-
16	Y	-
17	P	-
18	BR	-
21	G	-
23	W	-
24	R	-
25	R	-
26	B	-
27	SB	-
28	V	-
29	V	-
30	BR	-
31	GR	-
32	BR	-

33	W	-
34	LG	-
35	V	-
36	Y	-
37	W	-
39	G	-
40	P	-
41	O	-
42	G	-
43	R	-
44	P	-
46	GR	-
47	Y	-
48	BR	-

Connector No.	F15
Connector Name	ALTERNATOR
Connector Type	HS03FB



Terminal No.	Color of Wire	Signal Name [Specification]
3	Y	-
4	G	-
5	O	-

Connector No.	F42
Connector Name	ALTERNATOR
Connector Type	-



Terminal No.	Color of Wire	Signal Name [Specification]
2	B/Y	-

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P



COMBINATION METER

< ECU DIAGNOSIS INFORMATION >


METER

Connector No.	F63
Connector Name	OIL PRESSURE SWITCH
Connector Type	ED1FGY-RS-AR



Terminal No.	1	Color of Wire	BR	Signal Name [Specification]	-
--------------	---	---------------	----	-----------------------------	---

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16RV



Terminal No.	4	Color of Wire	B	Signal Name [Specification]	-
5	B	-	-	-	-
6	L	-	-	-	-
7	GR/R	-	-	-	-
8	O	-	-	-	-
14	P	-	-	-	-
16	LG/R	-	-	-	-

Connector No.	M11
Connector Name	PARKING BRAKE SWITCH
Connector Type	PO1FE-A



Terminal No.	1	Color of Wire	SB	Signal Name [Specification]	-
--------------	---	---------------	----	-----------------------------	---


Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH



Terminal No.	20	19	18	17	15	13	11	10	9	8	7	6	5	4	3	2	1
Color of Wire	SB	SB	SB	SB	SB	SB	SB	SB	SB	SB	SB	SB	SB	SB	SB	SB	SB

Terminal No.	1	Color of Wire	L	Signal Name [Specification]	CAN-H
2	P	-	-	-	CAN-H
3	V	-	-	-	VEHICLE SPEED SIGNAL (2-PULSE)
4	L	-	-	-	VEHICLE SPEED SIGNAL (8-PULSE)
6	BR/Y	-	-	-	FUEL LEVEL SENSOR SIGNAL
7	R/G	-	-	-	AIR BAG SIGNAL
8	P	-	-	-	OVERDRIVE CONTROL SWITCH SIGNAL
9	O	-	-	-	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
10	SB	-	-	-	PARKING BRAKE SWITCH SIGNAL
11	G/R	-	-	-	BRAKE FLUID LEVEL SWITCH SIGNAL
13	B/R	-	-	-	ILLUMINATION CONTROL SIGNAL
15	L/Y	-	-	-	ACC POWER SUPPLY
17	G	-	-	-	WASHER LEVEL SWITCH SIGNAL
18	R/Y	-	-	-	SECURITY SIGNAL
19	V/W	-	-	-	AMBIENT SENSOR SIGNAL
20	R/W	-	-	-	AMBIENT SENSOR GROUND
21	B	-	-	-	GROUND
22	B	-	-	-	GROUND
23	B	-	-	-	GROUND
24	V	-	-	-	FUEL LEVEL SENSOR GROUND
25	B	-	-	-	VDC GROUND
27	LG	-	-	-	BATTERY POWER SUPPLY
28	GR	-	-	-	IGNITION SIGNAL
29	BR	-	-	-	PASSENGER SEAT BELT WARNING SIGNAL
31	R	-	-	-	A/C AUTO AMP CONNECTION RECOGNITION SIGNAL
35	BR	-	-	-	ENGINE COOLANT TEMPERATURE SIGNAL
38	GR	-	-	-	ALTERNATOR SIGNAL

Connector No.	M37
Connector Name	EPS CONTROL UNIT
Connector Type	TH08FB



Terminal No.	3	Color of Wire	P	Signal Name [Specification]	CAN-L
4	O	-	-	-	IGN
8	L	-	-	-	CAN-H

Connector No.	M50
Connector Name	A/C AUTO AMP.
Connector Type	TK20FGY



Terminal No.	1	Color of Wire	W	Signal Name [Specification]	ILLUMINATION POWER SUPPLY
2	R	-	-	-	A/C AUTO AMP CONNECTION RECOGNITION SIGNAL
3	R	-	-	-	INTAKE DOOR MOTOR PBR POWER SUPPLY
4	LG	-	-	-	BATTERY POWER SUPPLY
5	O	-	-	-	IGNITION POWER SUPPLY
6	R/W	-	-	-	SENSOR GROUND
9	Y	-	-	-	IGNITION POWER SUPPLY
11	B/R	-	-	-	ILLUMINATION GROUND
12	L	-	-	-	FRE DRIVE SIGNAL
13	G	-	-	-	REG DRIVE SIGNAL
16	B	-	-	-	GROUND
17	BR	-	-	-	A/MIX DRIVE SIGNAL 4
18	SB	-	-	-	A/MIX DRIVE SIGNAL 3
19	GR	-	-	-	A/MIX DRIVE SIGNAL 2
20	P	-	-	-	A/MIX DRIVE SIGNAL 1

Connector No.	M51
Connector Name	A/C AUTO AMP.
Connector Type	TK16FGY



Terminal No.	21	Color of Wire	BR	Signal Name [Specification]	WATER TEMPERATURE SIGNAL
22	V/W	-	-	-	AMBIENT SENSOR SIGNAL
23	O	-	-	-	INTAKE SENSOR SIGNAL
24	G	-	-	-	IN-VEHICLE SENSOR SIGNAL
25	P	-	-	-	SUNLOAD SENSOR SIGNAL
26	SB	-	-	-	INTAKE DOOR MOTOR PBR F/B SIGNAL
27	R	-	-	-	REAR WINDOW DEFOGGER F/B SIGNAL
29	GR	-	-	-	MODE DRIVE SIGNAL 4
30	W	-	-	-	MODE DRIVE SIGNAL 3
31	Y	-	-	-	MODE DRIVE SIGNAL 2
32	V	-	-	-	MODE DRIVE SIGNAL 1
33	W/L	-	-	-	REAR WINDOW DEFOGGER ON SIGNAL
34	Y/G	-	-	-	A/C ON SIGNAL
35	G/W	-	-	-	BLOWER FAN ON SIGNAL
36	GR/R	-	-	-	POWER TRANSISTOR CONTROL SIGNAL

Connector No.	M57
Connector Name	CVT SHIFT SELECTOR
Connector Type	TK08FW-IV



Terminal No.	1	Color of Wire	P	Signal Name [Specification]	-
2	B	-	-	-	-
3	W	-	-	-	-
4	B/R	-	-	-	-
5	LG	-	-	-	-
6	B	-	-	-	-

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >


METER

Connector No.	M58
Connector Name	CVT SHIFT SELECTOR
Connector Type	TK28FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	B	-
3	W	-
4	B/R	-
5	LG	-
6	B	-
7	Y/R	-
8	G/O	-


Connector No.	M59
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	NH28FY-EX



Terminal No.	Color of Wire	Signal Name [Specification]
1	R/L	IGN
2	B	GND
3	Y	DRI (+)
4	Y/R	DRI (-) DR2 (-)
5	L/Y	DR2 (+)
6	Y/G	ASI (+)
7	Y/B	ASI (-)
8	Y/L	ASZ (+)
9	G/Y	ASZ (-)
18	LG	ECZS (+)
19	V	ECZS (-)
22	SHIELD	SHIELD
23	R/L	AIR BAG W/L
24	BR	SEAT BELT W/L

25	R/B	GUTOFF TELLTALE
58	L	CAN-H
60	P	CAN-L

Connector No.	M65
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
2	BR/W	COMBI SW INPUT 5
3	GR	COMBI SW INPUT 4
4	L/Y	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	L/R	COMBI SW INPUT 1
7	W/R	KEY CYL UNLOCK SW
8	W/B	KEY CYL LOCK SW
9	R	STOP LAMP SW
10	W/L	REAR WINDOW DEFOGGER SW
11	L/Y	ACC
12	SB	PASSENGER DOOR SW
13	GR/L	REAR RH DOOR SW
14	L/B	OPTICAL SENSOR
15	V/W	TIRE PRESS WARNING CHECK SW
17	R/G	OPTICAL SENSOR POWER SUPPLY
18	V	RECEIVER / SENSOR GND
19	BR	KEYLESS ENTRY RECEIVER POWER SUPPLY
20	G/Y	KEYLESS ENTRY RECEIVER COMMI
21	P/L	NATS ANTENNA AMP
23	R/Y	SECURITY INDICATOR LAMP
24	GR/R	DONGLE LINK
25	LG	NATS ANTENNA AMP
26	GR	THERMO CONTROL AMP
27	Y/G	A/C SW [With auto A/C]
27	Y/R	A/C SW [With manual A/C]
28	G/W	BLOWER FAN SW
29	L/W	HAZARD SW
31	G/Y	FR DEFROSTER SW
32	LG	COMBI SW OUTPUT 5
33	Y/L	COMBI SW OUTPUT 4
34	W	COMBI SW OUTPUT 3
35	R/L	COMBI SW OUTPUT 2
36	L/O	COMBI SW OUTPUT 1

37	R/W	KEY SWITCH
38	O	IGN
39	L	CAN-H
40	P	CAN-L

Connector No.	M68
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color of Wire	Signal Name [Specification]
2	BR/W	COMBI SW INPUT 5
3	GR	COMBI SW INPUT 4
4	L/Y	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	L/R	COMBI SW INPUT 1
7	W/R	KEY CYL UNLOCK SW
8	W/B	KEY CYL LOCK SW
9	R	STOP LAMP SW 1
10	V/W	TIRE PRESS WARNING CHECK SW
11	L/Y	ACC F/B
12	SB	PASSENGER DOOR SW
13	GR/L	REAR RH DOOR SW
14	L/B	OPTICAL SENSOR
15	W/L	REAR WINDOW DEFOGGER SW
17	R/G	OPTICAL SENSOR POWER SUPPLY
18	V	RECEIVER / SENSOR GND
18	BR	KEYLESS ENTRY RECEIVER POWER SUPPLY
20	G/Y	KEYLESS ENTRY RECEIVER COMMI
21	P/L	NATS ANTENNA AMP
22	W/G	SECURITY INDICATOR LAMP
23	R/Y	SECURITY INDICATOR LAMP
24	GR/R	DONGLE LINK
25	LG	NATS ANTENNA AMP
27	Y/G	A/C SW [With auto A/C]
27	Y/R	A/C SW [With manual A/C]
28	G/W	BLOWER FAN SW
29	L/W	HAZARD SW
31	G/B	DR DOOR UNLOCK SENSOR
32	LG	COMBI SW OUTPUT 5
33	Y/L	COMBI SW OUTPUT 4
34	W	COMBI SW OUTPUT 3
35	R/L	COMBI SW OUTPUT 2
36	L/O	COMBI SW OUTPUT 1

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P



COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

METER

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH80YW-CST16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	B/O	
2	R	
3	G/R	
4	G/B	
5	L	
6	L	
7	W/R	
8	G/W	
9	Y/L	
10	W	
31	GR/L	
32	L/B	
33	R/Y	
34	SB	
35	BR	
36	G	
39	L/R	
44	G/O	
45	LG/R	
46	GR/W	
47	BR/Y	
48	L/O	
48	L/W	
50	P/L	
51	B/W	
53	R/L	
54	O	
57	GR	
59	V	
60	R/W	
61	V/W	
62	W/L	
63	W/B	
67	Y/R	
69	LG	
70	SHIELD	
71	P/B	
72	R/G	

73	R	
74	L/Y	
76	W/G	
77	GR/R	
78	O	
79	LG	
80	P	
81	L	
82	GR	
83	G/R	
84	B	
87	G	
91	R	
92	O	
93	Y	
94	R/B	
95	L/W	
96	Y	
97	L	
98	BR/W	
99	W	
100	G/R	

Connector No.	M79
Connector Name	WIRE TO WIRE
Connector Type	TH24FW-NH



12	11	10	9	8	7	6	5	4	3	2	1
24	23	22	21	20	19	18	17	16	15	14	13

Terminal No.	Color of Wire	Signal Name [Specification]
1	W/G	
2	L/Y	
3	R	
4	P/B	
5	W	
6	W/G	
7	R/B	
8	SB	
11	G/B	
12	G/R	
13	R/G	
15	R/L	
16	GR/R	
17	BR/Y	

18	V	
19	Y	
20	GR/L	
22	L	
23	Y/L	
24	G/W	

Connector No.	M80
Connector Name	WIRE TO WIRE
Connector Type	TH18FW-NH



8	7	6	5	4	3	2	1
16	15	14	13	12	11	10	9

Terminal No.	Color of Wire	Signal Name [Specification]
1	L/B	
2	GR/L	
5	W	
6	W/L	
8	BR/Y	
9	R/Y	
11	O	
13	BR/W	
14	W/B	
16	W/G	

Fail-Safe

FAIL-SAFE

The combination meter activates the fail-safe control if CAN communication with each unit is malfunctioning.

JCNWM3426G1

INFOID:000000005490768

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Function		Specifications	
Speedometer		Reset to zero by suspending communication.	A
Tachometer			B
Engine coolant temperature gauge			C
Illumination control		When suspending communication, changes to nighttime mode.	
Shift position indicator		The indicator turns OFF by suspending communication.	
Information display	Instantaneous fuel warning	<ul style="list-style-type: none"> When reception time of an abnormal signal is 2 seconds or less, the last received datum is used for calculation to indicate the result. When reception time of an abnormal signal is more than two seconds, the last result calculated during normal condition is indicated. 	D
	Average fuel consumption		
	Possible driving distance		
	Average vehicle speed		
Buzzer		The buzzer turns off by suspending communication.	E
Warning lamp/indicator lamp	ABS warning lamp	The lamp turns ON by suspending communication.	F
	VDC OFF indicator lamp		
	SLIP indicator lamp		
	EPS warning lamp		
	Brake warning lamp		
	Malfunction indicator lamp		
	Low tire pressure warning lamp	The lamp turns ON after flashing for 1 minute.	
	High beam indicator lamp	The lamp turns OFF by suspending communication.	H
	Turn signal indicator lamp		
	Door warning lamp		
	Light indicator lamp		
	Engine start operation indicator lamp		
	Shift P warning lamp		
	Oil pressure warning lamp		
	CRUISE indicator lamp		
O/D OFF indicator lamp			
Low washer fluid warning lamp			
Key warning lamp		L	

DTC Index

INFOID:000000005490769

Display contents of CONSULT-III	Diagnostic item is detected when ...	Refer to	
CAN COMM CIRCUIT [U1000]	When combination meter is not transmitting or receiving CAN communication signal for 2 seconds or more.	MWI-34. "Diagnosis Procedure"	MWI
CONTROL UNIT (CAN) [U1010]	When detecting error during the initial diagnosis of the CAN controller of combination meter.	MWI-35. "Diagnosis Procedure"	O
VEHICLE SPEED [B2205]	The abnormal vehicle speed signal is input from the ABS actuator and electric unit (control unit) for 2 seconds or more.	MWI-36. "Diagnosis Procedure"	P
ENGINE SPEED [B2267]	If ECM continuously transmits abnormal engine speed signals for 2 seconds or more.	MWI-37. "Diagnosis Procedure"	
WATER TEMP [B2268]	If ECM continuously transmits abnormal engine coolant temperature signals for 60 seconds or more.	MWI-38. "Diagnosis Procedure"	

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

WITH INTELLIGENT KEY

WITH INTELLIGENT KEY : Reference Value

INFOID:000000005789463

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	1/2/3/4
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND, HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		Front fog lamp switch ON	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	<ul style="list-style-type: none"> Selector lever in any position other than P or N (CVT models) Release clutch pedal (M/T models) 	Off
		<ul style="list-style-type: none"> Selector lever in P or N position (CVT models) Depress clutch pedal (M/T models) 	On
ST RLY CONT	Ignition switch ON		Off
	At engine cranking		On

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
IHBT RLY -REQ	Ignition switch ON	Off	A
	At engine cranking	On	
ST/INHI RLY	Ignition switch ON	Off	B
	At engine cranking	INHI ON → ST ON	
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF	UNKWN	C
DETENT SW	Ignition switch ON	Off	D
	Release the selector lever with selector lever in P position NOTE: Fixed On for M/T models	On	E
S/L RLY -REQ	None of the conditions below are present	Off	F
	<ul style="list-style-type: none"> Open the driver door after the ignition switch is turned OFF (for a few seconds) Press the push-button ignition switch when the steering lock is activated 	On	G
S/L STATE	Steering lock is activated	LOCK	H
	Steering lock is deactivated	UNLOCK	
	[DTC: B210A] is detected	UNKWN	
DTRL REQ NOTE: This item is monitored only on the vehicle with the daytime running light system.	Not operation	Off	I
	Daytime running light system is operated.	On	
OIL P SW	Ignition switch OFF, ACC or engine running	Open	J
	Ignition switch ON	Close	
HOOD SW	NOTE: The item is indicated, but not monitored.	Off	K
THFT HRN REQ	Not operation	Off	L
	<ul style="list-style-type: none"> Panic alarm is activated Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 	On	
HORN CHIRP	Not operating	Off	M
	Door locking with Intelligent Key (horn chirp mode)	On	

MWI


O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

TERMINAL LAYOUT


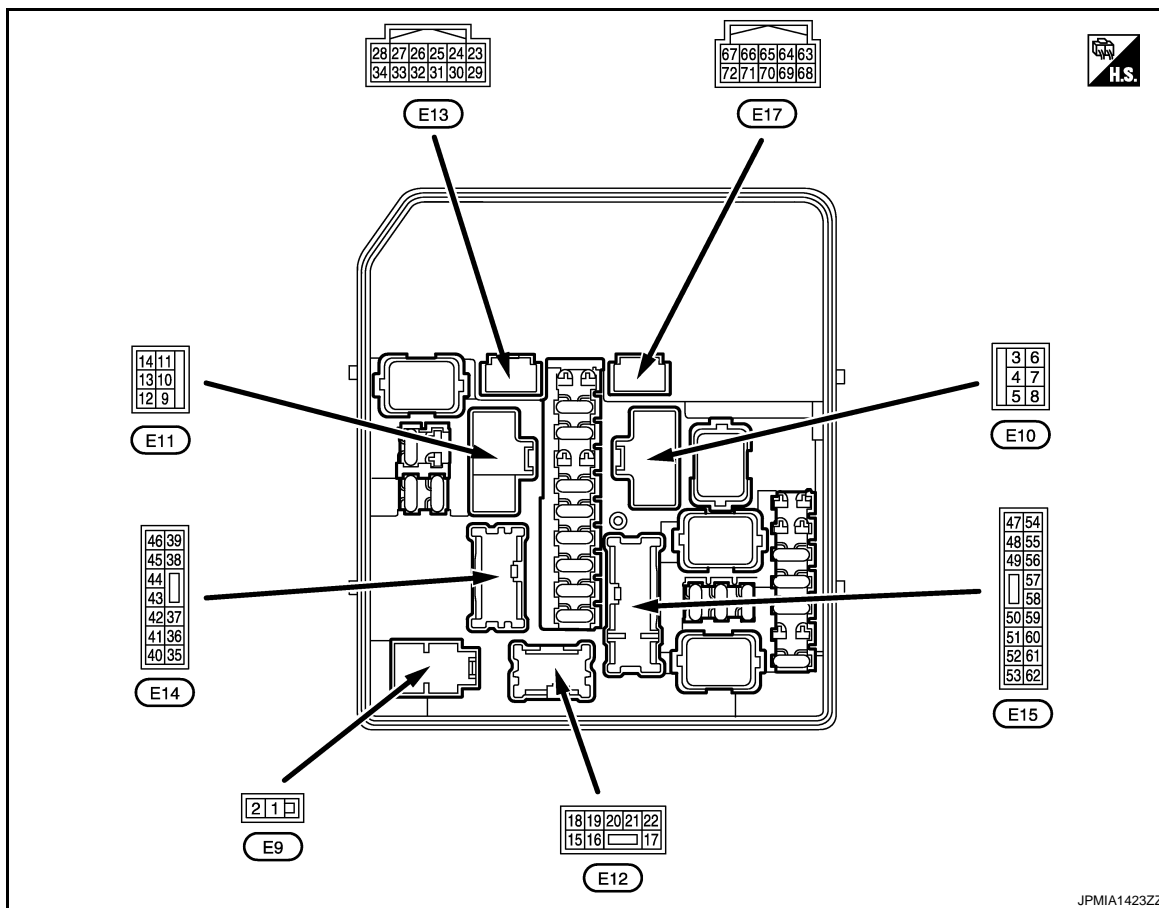


PHYSICAL VALUES

Terminal NO. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
1 (R)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
2 (G)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
3 (BR)	Ground	Starter motor	Output	Ignition switch ON	0 V
				At engine cranking	Battery voltage
4 (SB)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
5 (LG)	Ground	Cooling fan relay-1 power supply	Output	Cooling fan OFF	0 V
				Cooling fan operated	Battery voltage
7 (Y)	Ground	Cooling fan relay-2 power supply	Output	Cooling fan OFF	0 V
				Cooling fan LO operated	9.0 V
				Cooling fan HI operated	Battery voltage
8 (V)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
9 (B/W)	Ground	Ground	—	Ignition switch ON	0 V
10 (L)	Ground	Cooling fan motor ground	Output	Cooling fan OFF	0 V
				Cooling fan LO operated	5.0 V
				Cooling fan HI operated	0 V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

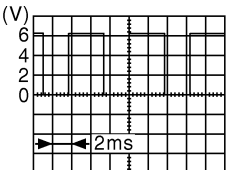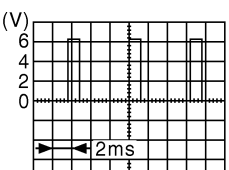Terminal NO. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
13 (W)	Ground	Rear window defogger	Output	Ignition switch OFF	Rear window defogger switch OFF	0 V
				Ignition switch ON	Rear window defogger switch ON	Battery voltage
19 (B/W)	Ground	Ground	—	Ignition switch ON		0 V
21 (W)	Ground	Front fog lamp (RH)	Output	Lighting switch 2ND OFF	Front fog lamp switch OFF	0 V
				Lighting switch 2ND ON	Front fog lamp switch ON	Battery voltage
22 (V)	Ground	Front fog lamp (LH)	Output	Lighting switch 2ND OFF	Front fog lamp switch OFF	0 V
				Lighting switch 2ND ON	Front fog lamp switch ON	Battery voltage
24 (LG)	Ground	Oil pressure switch	Input	Ignition switch ON	Engine stopped	0 V
				Ignition switch ON	Engine running	Battery voltage
25 (Y)	Ground	Front wiper auto stop	Input	Ignition switch ON	Front wiper stop position	0 V
				Ignition switch ON	Any position other than front wiper stop position	Battery voltage
26 (P)	Ground	CAN-L	Input/ Output	—		—
27 (L)	Ground	CAN-H	Input/ Output	—		—
28*1 (P)	Ground	Daytime running light relay-1 control	Output	Daytime running light deactivated		0 V
				Daytime running light activated		Battery voltage
30 (SB)	Ground	Starter relay control	Output	At engine cranking		0 V
				Ignition switch ON		Battery voltage
31 (W)	Ground	Fuel pump relay control	Output	<ul style="list-style-type: none"> Approximately 1 second after turning the ignition switch ON Engine running 		0 - 1.5 V
				Approximately 1 second or more after turning the ignition switch ON		Battery voltage
33 (O)	Ground	Power generation command signal	Output	Ignition switch ON		Battery voltage
				40 % is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"		 <p style="text-align: right;">JPMAI0002GB</p>
				80 % is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"		 <p style="text-align: right;">JPMAI0003GB</p>

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal NO. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
34 (R)	Ground	Horn relay control	Output	The horn is deactivated	Battery voltage
				The horn is activated	0 V
36 (Y)	Ground	Parking lamp (LH)	Output	Ignition switch ON Lighting switch OFF	0 V
				Lighting switch 1ST	Battery voltage
37 (V)	Ground	Parking lamp (RH)	Output	Ignition switch ON Lighting switch OFF	0 V
				Lighting switch 1ST	Battery voltage
38 (G)	Ground	Tail lamp (RH) & illuminations	Output	Ignition switch ON Lighting switch OFF	0 V
				Lighting switch 1ST	Battery voltage
39 (V)	Ground	Front wiper HI	Output	Ignition switch ON Front wiper switch OFF	0 V
				Front wiper switch HI	Battery voltage
40 (R)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	Battery voltage
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	0 - 1.5 V
41 (SB)	Ground	Tail lamp (LH) & license plate lamps	Output	Ignition switch ON Lighting switch OFF	0 V
				Lighting switch 1ST	Battery voltage
42 (W)	Ground	Steering lock unit power supply	Output	Ignition switch ACC or ON	0 V
				Ignition switch ON A few seconds after opening the driver door	Battery voltage
				Ignition switch LOCK Press the push-button ignition switch	Battery voltage
43 (G)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage
44 (P)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage
45 (Y)	Ground	TCM power supply	Output	Ignition switch OFF	Battery voltage
46 (O)	Ground	Front wiper LO	Output	Ignition switch ON Front wiper switch OFF	0 V
				Front wiper switch LO	Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal NO. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
47 (BR)	Ground	Transmission range switch* ²	Input	Select lever in any position other than P or N (Ignition switch ON)		0 V
				Select lever P or N (Ignition switch ON)		Battery voltage
		Clutch interlock switch* ³		Release the clutch pedal		0 V
				Depress the clutch pedal		Battery voltage
49 (W)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					<ul style="list-style-type: none"> Lighting switch HI Lighting switch PASS 	Battery voltage
				Daytime running light activated* ¹		7.0 V
50 (GR)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					<ul style="list-style-type: none"> Lighting switch HI Lighting switch PASS 	Battery voltage
				Daytime running light activated* ¹		7.0 V
51 (R)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
52 (P)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
		Daytime running light relay-2* ¹			Lighting switch 2ND	Battery voltage
54 (GR)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 		Battery voltage
55 (P)	Ground	Fuel pump power supply	Output	Approximately 1 second or more than after turning the ignition switch ON		0 V
				<ul style="list-style-type: none"> Approximately 1 second after turning the ignition switch ON Engine running 		Battery voltage
56 (SB)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 V
					A/C switch ON (A/C compressor is operating)	Battery voltage
57 (G)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF		0 - 1.0 V ↓ Battery voltage ↓ 0 V
				Ignition switch ON		0 - 1.0 V
58 (R) ² (Y) ³	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
59 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
60 (V)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal NO. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
61 (W)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
62 (L)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
64*2 (R)	Ground	CVT shift selector (Detention switch)	Input	Ignition switch ON	Select lever P	0 V
					Select lever in any position other than P	Battery voltage
65 (Y)	Ground	Steering lock unit condition-1	Input	Steering lock is activated		0 V
				Steering lock is deactivated		Battery voltage
66 (L)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch		0 V
				Release the push-button ignition switch		Battery voltage
68 (W)	Ground	Steering lock unit condition-2	Input	Steering lock is activated		Battery voltage
				Steering lock is deactivated		0 V
69 (Y)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC		Battery voltage
				Ignition switch ON		0 V

*1: With daytime running light system

*2: CVT models

*3: M/T models


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

WITH INTELLIGENT KEY : Wiring Diagram — IPDM E/R —

INFOID:000000005789464

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) (WITH INTELLIGENT KEY)

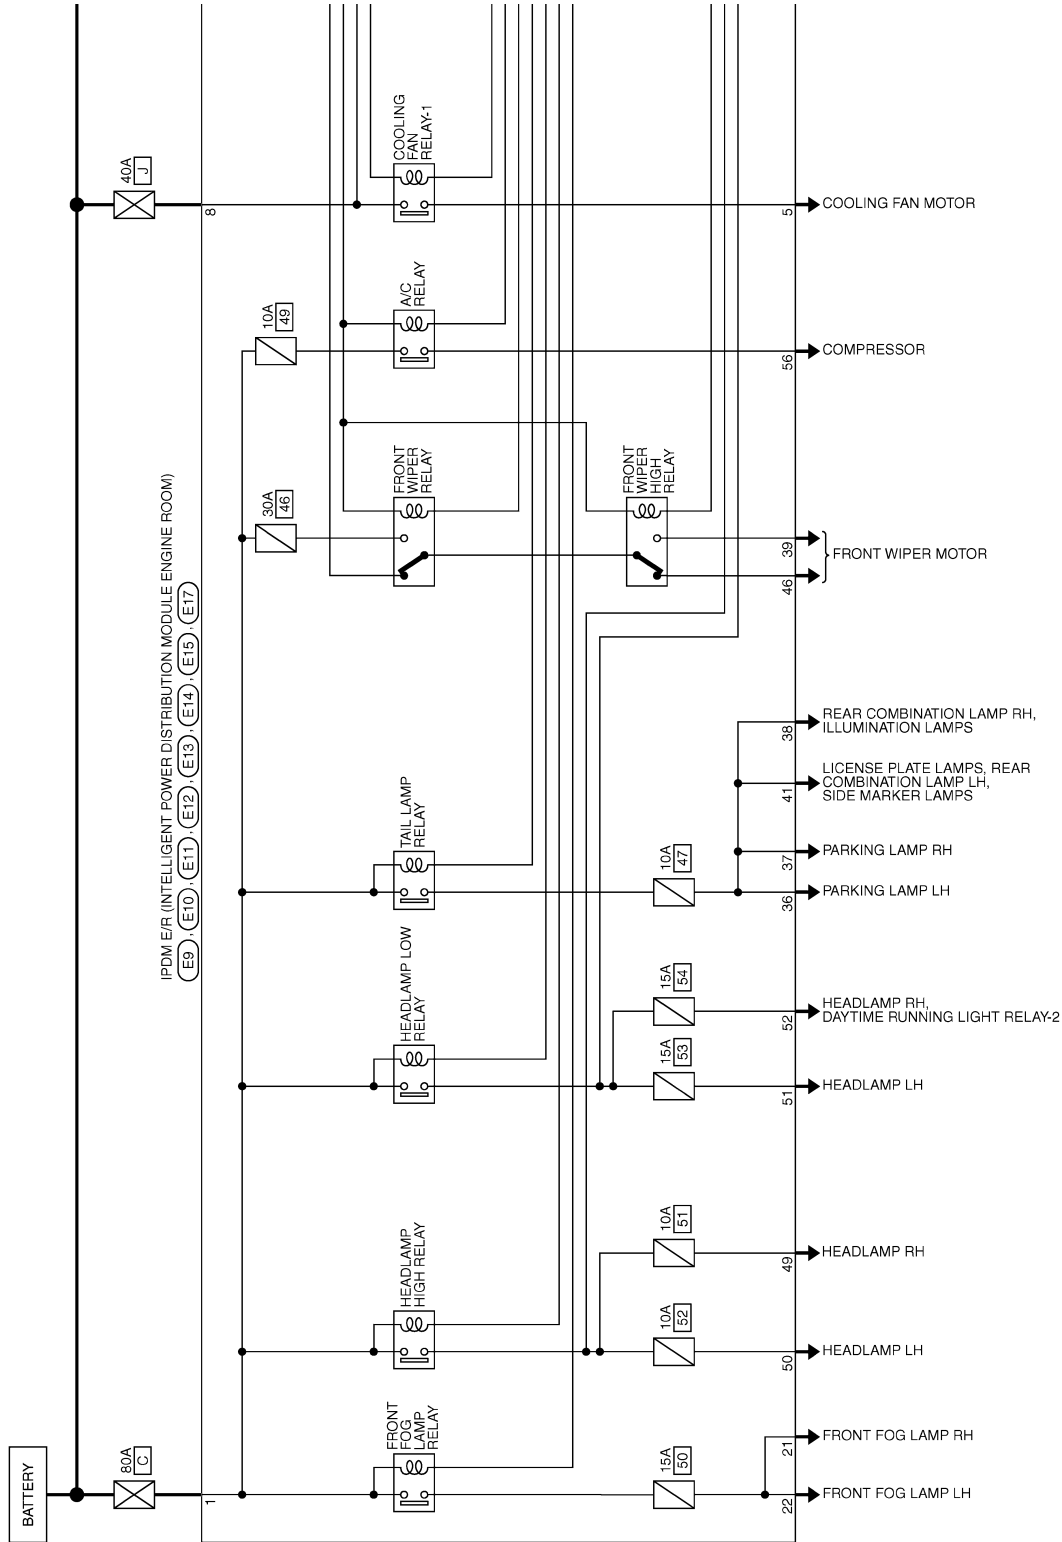

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


MWI

2009/10/02

JCMWM5317GI

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS INFORMATION >

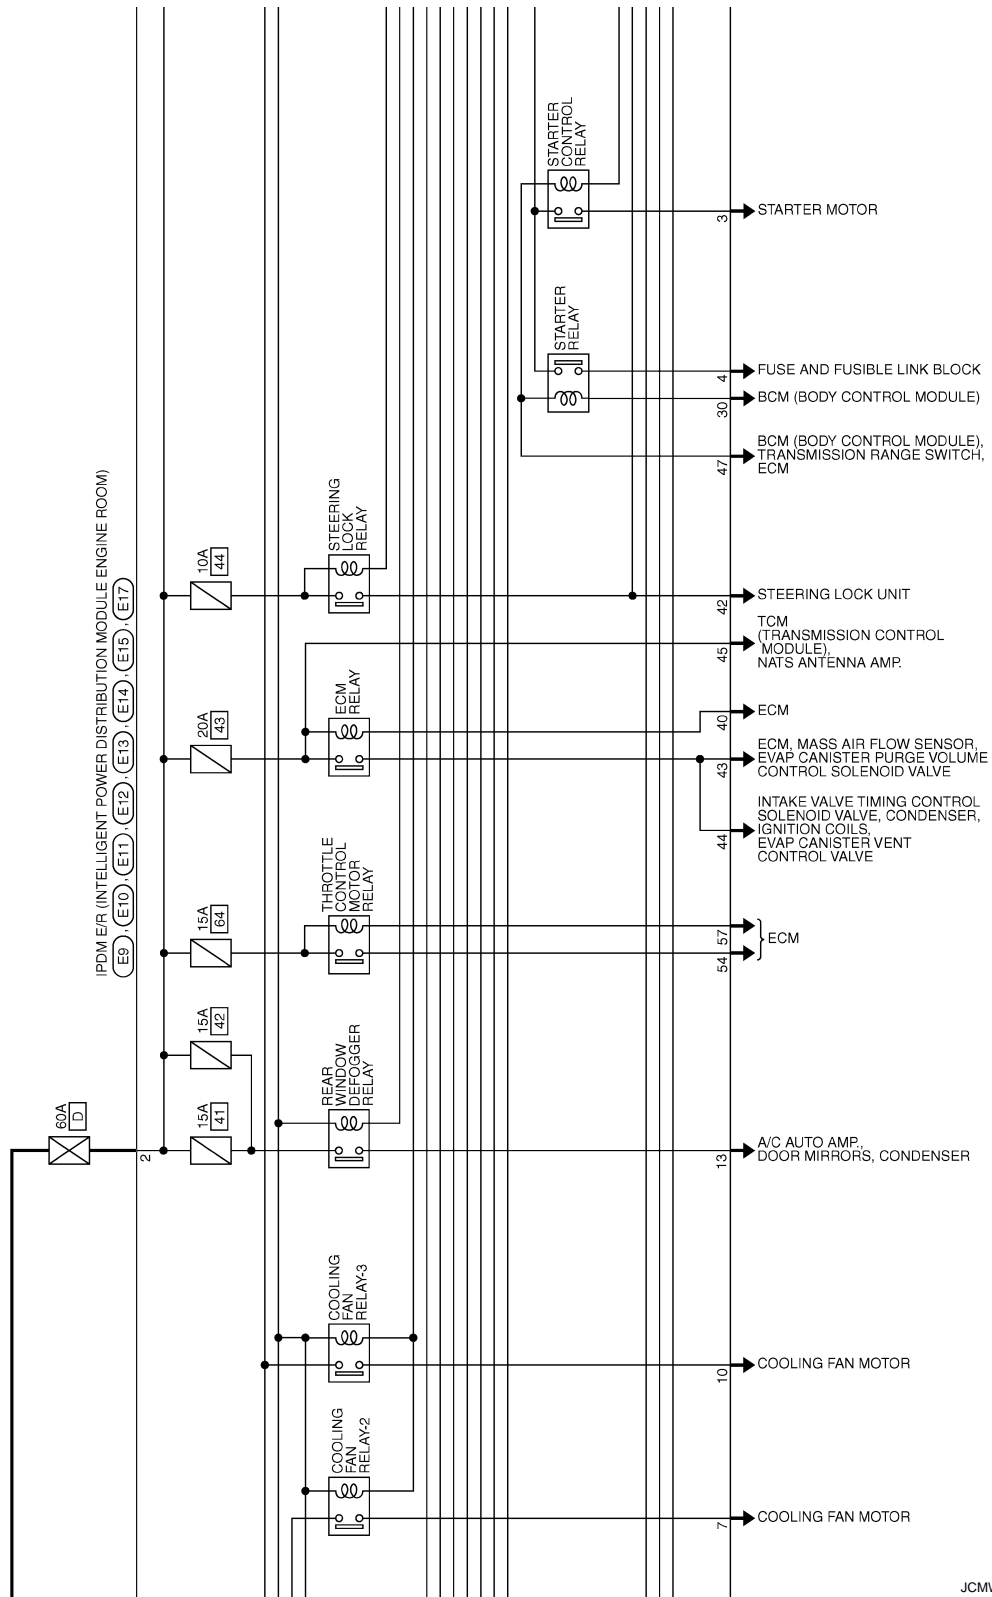

JCMWM5318G

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

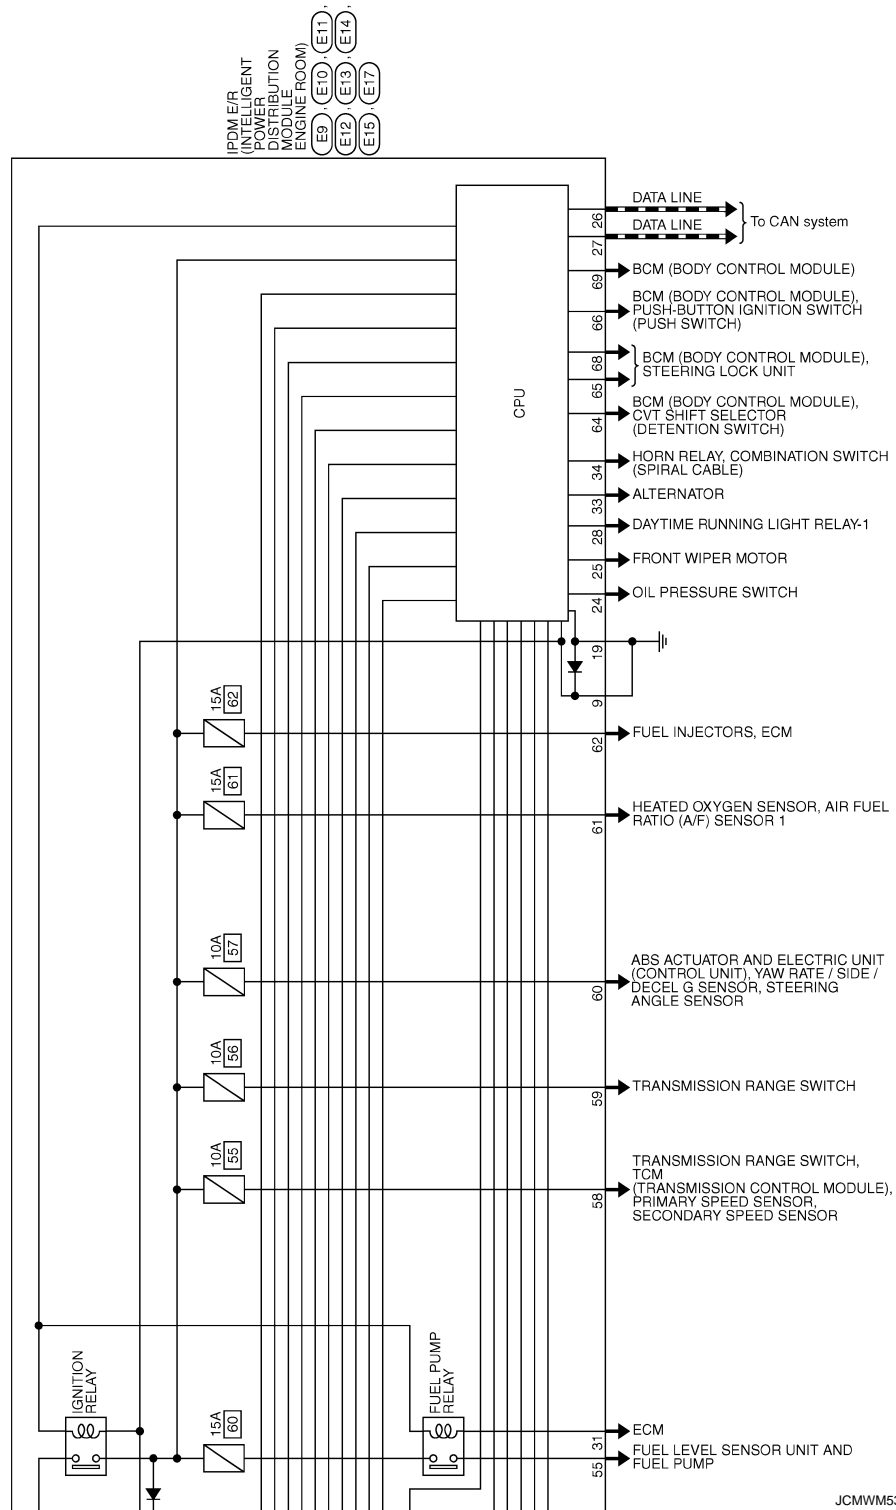

JCMWM5319G1

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) (WITH INTELLIGENT KEY)			
Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.
59	Y	-	39
60	V	-	38
61	W	-	37
62	L	-	36
H.S.			
Connector No. E17 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name TH10FB-NH Connector Type			35
H.S.			
Connector No. E14 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name NS12FB-CS Connector Type			34
H.S.			
Connector No. E12 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name NS08FB-CS Connector Type			33
H.S.			
Connector No. E13 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name TH12FW-NH Connector Type			32
H.S.			
Connector No. E11 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name MO8FB-LC Connector Type			31
H.S.			
Connector No. E10 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name MO8FW-LC Connector Type			30
H.S.			
Connector No. E15 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name NS18FW-CS Connector Type			29
H.S.			
Connector No. E11 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name MO8FB-LC Connector Type			28
H.S.			
Connector No. E13 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name TH12FW-NH Connector Type			27
H.S.			
Connector No. E12 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name NS08FB-CS Connector Type			26
H.S.			
Connector No. E14 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name NS12FB-CS Connector Type			25
H.S.			
Connector No. E17 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name TH10FB-NH Connector Type			24
H.S.			
Connector No. E15 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name NS18FW-CS Connector Type			23
H.S.			
Connector No. E11 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name MO8FB-LC Connector Type			22
H.S.			
Connector No. E10 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name MO8FW-LC Connector Type			21
H.S.			
Connector No. E13 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name TH12FW-NH Connector Type			20
H.S.			
Connector No. E12 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name NS08FB-CS Connector Type			19
H.S.			
Connector No. E14 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name NS12FB-CS Connector Type			18
H.S.			
Connector No. E17 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name TH10FB-NH Connector Type			17
H.S.			
Connector No. E15 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name NS18FW-CS Connector Type			16
H.S.			
Connector No. E11 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name MO8FB-LC Connector Type			15
H.S.			
Connector No. E10 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name MO8FW-LC Connector Type			14
H.S.			
Connector No. E13 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name TH12FW-NH Connector Type			13
H.S.			
Connector No. E12 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name NS08FB-CS Connector Type			12
H.S.			
Connector No. E14 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name NS12FB-CS Connector Type			11
H.S.			
Connector No. E17 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name TH10FB-NH Connector Type			10
H.S.			
Connector No. E15 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name NS18FW-CS Connector Type			9
H.S.			
Connector No. E11 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name MO8FB-LC Connector Type			8
H.S.			
Connector No. E10 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name MO8FW-LC Connector Type			7
H.S.			
Connector No. E13 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name TH12FW-NH Connector Type			6
H.S.			
Connector No. E12 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name NS08FB-CS Connector Type			5
H.S.			
Connector No. E14 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name NS12FB-CS Connector Type			4
H.S.			
Connector No. E17 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name TH10FB-NH Connector Type			3
H.S.			
Connector No. E15 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name NS18FW-CS Connector Type			2
H.S.			
Connector No. E11 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name MO8FB-LC Connector Type			1
H.S.			
Connector No. E10 IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) Connector Name MO8FW-LC Connector Type			0
H.S.			

WITH INTELLIGENT KEY : Fail-Safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

JCMWM5320G

INFOID:000000005789465

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Control part	Fail-safe operation
Cooling fan	<ul style="list-style-type: none"> The cooling fan relay-1, the cooling fan relay-2 and the cooling fan relay-3 turn ON when the ignition switch is turned ON (Cooling fan HI operation) The cooling fan relay-1, the cooling fan relay-2 and the cooling fan relay-3 turn OFF when the ignition switch is turned OFF
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> Turns ON the headlamp low relay when the ignition switch is turned ON Turns OFF the headlamp low relay when the ignition switch is turned OFF Headlamp high relay OFF Daytime running light relay OFF*
<ul style="list-style-type: none"> Parking lamps Side marker lamps License plate lamps Illuminations Tail lamps 	<ul style="list-style-type: none"> Turns ON the tail lamp relay when the ignition switch is turned ON Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Front fog lamps	Front fog lamp relay OFF
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF
Steering lock unit	Steering lock relay OFF

*: With daytime running light system

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition relay excitation coil side		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	<ul style="list-style-type: none"> Detects DTC "B2098: IGN RELAY ON" Turns ON the tail lamp relay for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF"

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal. When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

WITH INTELLIGENT KEY : DTC Index

INFOID:000000005789466

NOTE:

- The details of time display are as follows.
 - CRNT: A malfunction is detected now.
 - PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
 - The number is 0 when is detected now.
 - The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
 - The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

CONSULT display	Fail-safe	Refer to
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	PCS-16
B2098: IGN RELAY ON	×	PCS-17
B2099: IGN RELAY OFF	—	PCS-18
B2108: STRG LCK RELAY ON	—	SEC-96
B2109: STRG LCK RELAY OFF	—	SEC-97
B210A: STRG LCK STATE SW	—	SEC-98
B210B: START CONT RLY ON	—	SEC-101
B210C: START CONT RLY OFF	—	SEC-102
B210D: STARTER RELAY ON	—	SEC-103
B210E: STARTER RELAY OFF	—	SEC-104
B210F: INTRLCK/PNP SW ON	—	SEC-106
B2110: INTRLCK/PNP SW OFF	—	SEC-108

WITHOUT INTELLIGENT KEY

WITHOUT INTELLIGENT KEY : Reference Value

INFOID:000000005789467

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	1/2/3/4

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND, HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		Front fog lamp switch ON	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe opera- tion	BLOCK
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
INTER/NP SW	Ignition switch ON	Selector lever in any position other than P or N (CVT models)	Off
		Selector lever in P or N position (CVT models)	On
ST RLY -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
DTRL REQ NOTE: This item is monitored only on the vehicle with the daytime running light system.	Not operation		Off
	Daytime running light system is operated.		On
OIL P SW	Ignition switch OFF, ACC or engine running		Open
	Ignition switch ON		Close
HOOD SW	NOTE: The item is indicated, but not monitored.		Off
THFT HRN REQ	Not operation		Off
	<ul style="list-style-type: none"> Panic alarm is activated Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYS- TEM 		On
HORN CHIRP	Not operating		Off
	Door locking with key fob (horn chirp mode)		On


A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

TERMINAL LAYOUT

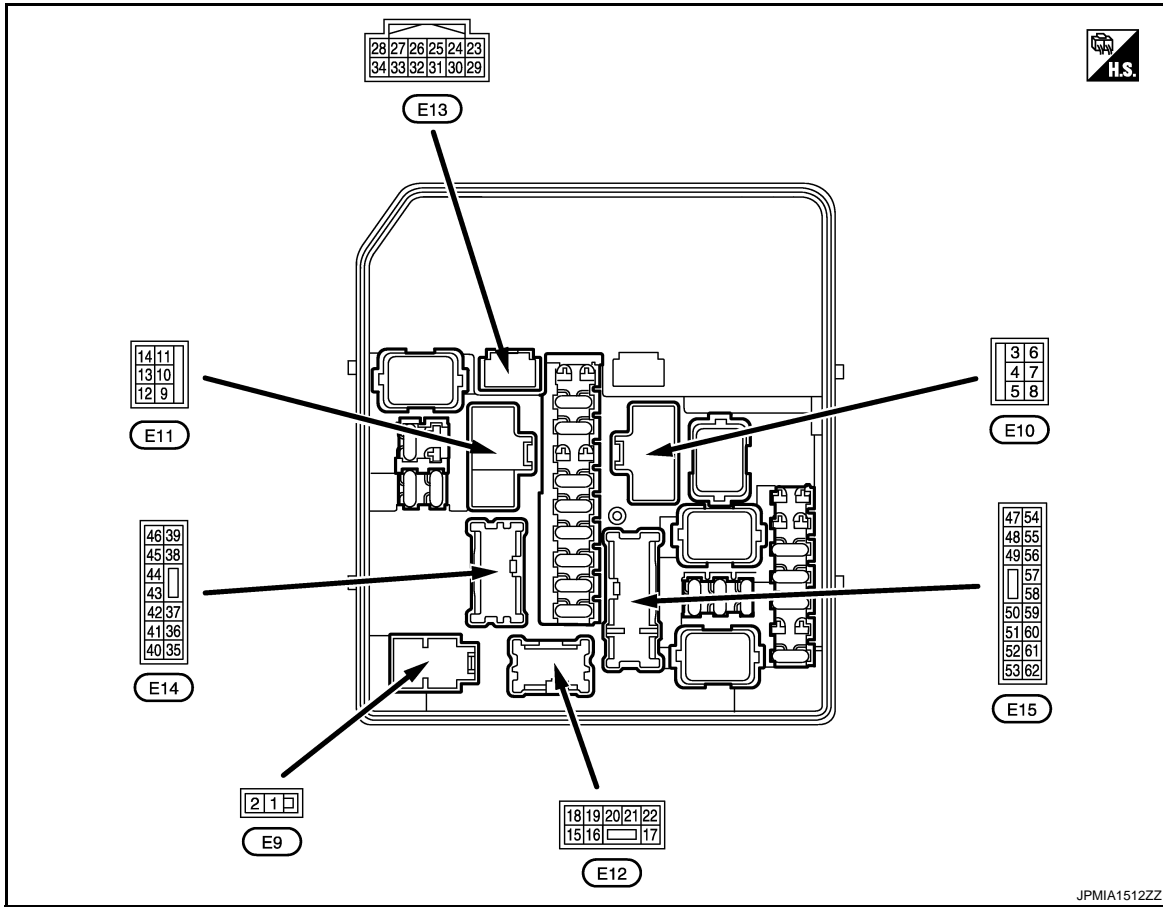

PHYSICAL VALUES

Terminal NO. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
1 (R)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
2 (G)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
3 (BR)	Ground	Starter motor	Output	Ignition switch ON	0 V
				At engine cranking	Battery voltage
5 (LG)	Ground	Cooling fan relay-1 power supply	Output	Cooling fan OFF	0 V
				Cooling fan operated	Battery voltage
6 (SB)	Ground	Ignition switch START	Output	Any position other ignition switch START	0 V
				Ignition switch START	Battery voltage
7 (Y)	Ground	Cooling fan relay-2 power supply	Output	Cooling fan OFF	0 V
				Cooling fan LO operated	9.0 V
				Cooling fan HI operated	Battery voltage
8 (V)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
9 (B/W)	Ground	Ground	—	Ignition switch ON	0 V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >



Terminal NO. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
10 (L)	Ground	Cooling fan motor ground	Output	Cooling fan OFF		0 V
				Cooling fan LO operated		5.0 V
				Cooling fan HI operated		0 V
13 (W)	Ground	Rear window defogger	Output	Ignition switch OFF	Rear window defogger switch OFF	0 V
				ON	Rear window defogger switch ON	Battery voltage
18 (Y)	Ground	Ignition switch	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
19 (B/W)	Ground	Ground	—	Ignition switch ON		0 V
21 (W)	Ground	Front fog lamp (RH)	Output	Lighting switch 2ND	Front fog lamp switch OFF	0 V
					Front fog lamp switch ON	Battery voltage
22 (V)	Ground	Front fog lamp (LH)	Output	Lighting switch 2ND	Front fog lamp switch OFF	0 V
					Front fog lamp switch ON	Battery voltage
24 (LG)	Ground	Oil pressure switch	Input	Ignition switch ON	Engine stopped	0 V
					Engine running	Battery voltage
25 (Y)	Ground	Front wiper auto stop	Input	Ignition switch ON	Front wiper stop position	0 V
					Any position other than front wiper stop position	Battery voltage
26 (P)	Ground	CAN-L	Input/ Output	—		—
27 (L)	Ground	CAN-H	Input/ Output	—		—
28*1 (P)	Ground	Daytime running light relay-1 control	Output	Daytime running light deactivated		0 V
				Daytime running light activated		Battery voltage
31 (W)	Ground	Fuel pump relay control	Output	<ul style="list-style-type: none"> Approximately 1 second after turning the ignition switch ON Engine running 		0 - 1.5 V
				Approximately 1 second or more after turning the ignition switch ON		Battery voltage

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

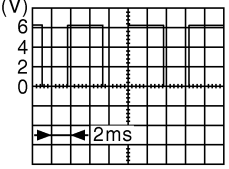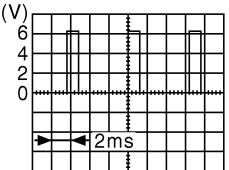Terminal NO. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
33 (O)	Ground	Power generation command signal	Output	Ignition switch ON	Battery voltage	
				40 % is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"	 <p style="text-align: right; font-size: small;">JPMAI0002GB</p>	3.8 V
				80 % is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"	 <p style="text-align: right; font-size: small;">JPMAI0003GB</p>	1.4 V
34 (R)	Ground	Horn relay control	Output	The horn is deactivated	Battery voltage	
				The horn is activated	0 V	
36 (Y)	Ground	Parking lamp (LH)	Output	Ignition switch OFF	Lighting switch OFF	0 V
				Ignition switch ON	Lighting switch 1ST	Battery voltage
37 (V)	Ground	Parking lamp (RH)	Output	Ignition switch OFF	Lighting switch OFF	0 V
				Ignition switch ON	Lighting switch 1ST	Battery voltage
38 (G)	Ground	Tail lamp (RH) & illuminations	Output	Ignition switch OFF	Lighting switch OFF	0 V
				Ignition switch ON	Lighting switch 1ST	Battery voltage
39 (V)	Ground	Front wiper HI	Output	Ignition switch OFF	Front wiper switch OFF	0 V
				Ignition switch ON	Front wiper switch HI	Battery voltage
40 (R)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	Battery voltage	
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	0 - 1.5 V	
41 (SB)	Ground	Tail lamp (LH) & license plate lamps	Output	Ignition switch OFF	Lighting switch OFF	0 V
				Ignition switch ON	Lighting switch 1ST	Battery voltage
43 (G)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V	
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage	

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal NO. (Wire color)		Description		Condition		Value (Approx.)		
+	-	Signal name	Input/ Output					
44 (P)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V	A	
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 		Battery voltage	B C	
45 (Y)	Ground	TCM power supply	Output	Ignition switch OFF		Battery voltage	D	
46 (O)	Ground	Front wiper LO	Output	Ignition switch ON	Front wiper switch OFF	0 V	E	
					Front wiper switch LO	Battery voltage		
47 (BR)	Ground	Transmission range switch ^{*2}	Input	Select lever in any position other than P or N (Ignition switch ON)		0 V	F	
				Select lever P or N (Ignition switch ON)		Battery voltage	G	
		Clutch interlock switch ^{*3}	Input	Release the clutch pedal		0 V	G	
				Depress the clutch pedal		Battery voltage		
49 (W)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V	H	
					<ul style="list-style-type: none"> Lighting switch HI Lighting switch PASS 			Battery voltage
					Daytime running light activated ^{*1}			7.0 V
50 (GR)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V	I	
					<ul style="list-style-type: none"> Lighting switch HI Lighting switch PASS 			Battery voltage
					Daytime running light activated ^{*1}			7.0 V
51 (R)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V	K	
					Lighting switch 2ND			Battery voltage
52 (P)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V	L	
		Daytime running light relay-2 ^{*1}			Lighting switch 2ND	Battery voltage		
54 (GR)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V	M	
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 		Battery voltage		
55 (P)	Ground	Fuel pump power supply	Output	Approximately 1 second or more than after turning the ignition switch ON		0 V	O	
				<ul style="list-style-type: none"> Approximately 1 second after turning the ignition switch ON Engine running 		Battery voltage		
56 (SB)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 V	P	
					A/C switch ON (A/C compressor is operating)			Battery voltage

MWI

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal NO. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
57 (G)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF	0 - 1.0 V ↓ Battery voltage ↓ 0 V
				Ignition switch ON	0 - 1.0 V
58 (R) ^{*2} (Y) ^{*3}	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
59 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
60 (V)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
61 (W)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
62 (L)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage

*1: With daytime running light system

*2: CVT models

*3: M/T models


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

WITHOUT INTELLIGENT KEY : Wiring Diagram — IPDM E/R —

INFOID:000000005789468

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) (WITHOUT INTELLIGENT KEY)

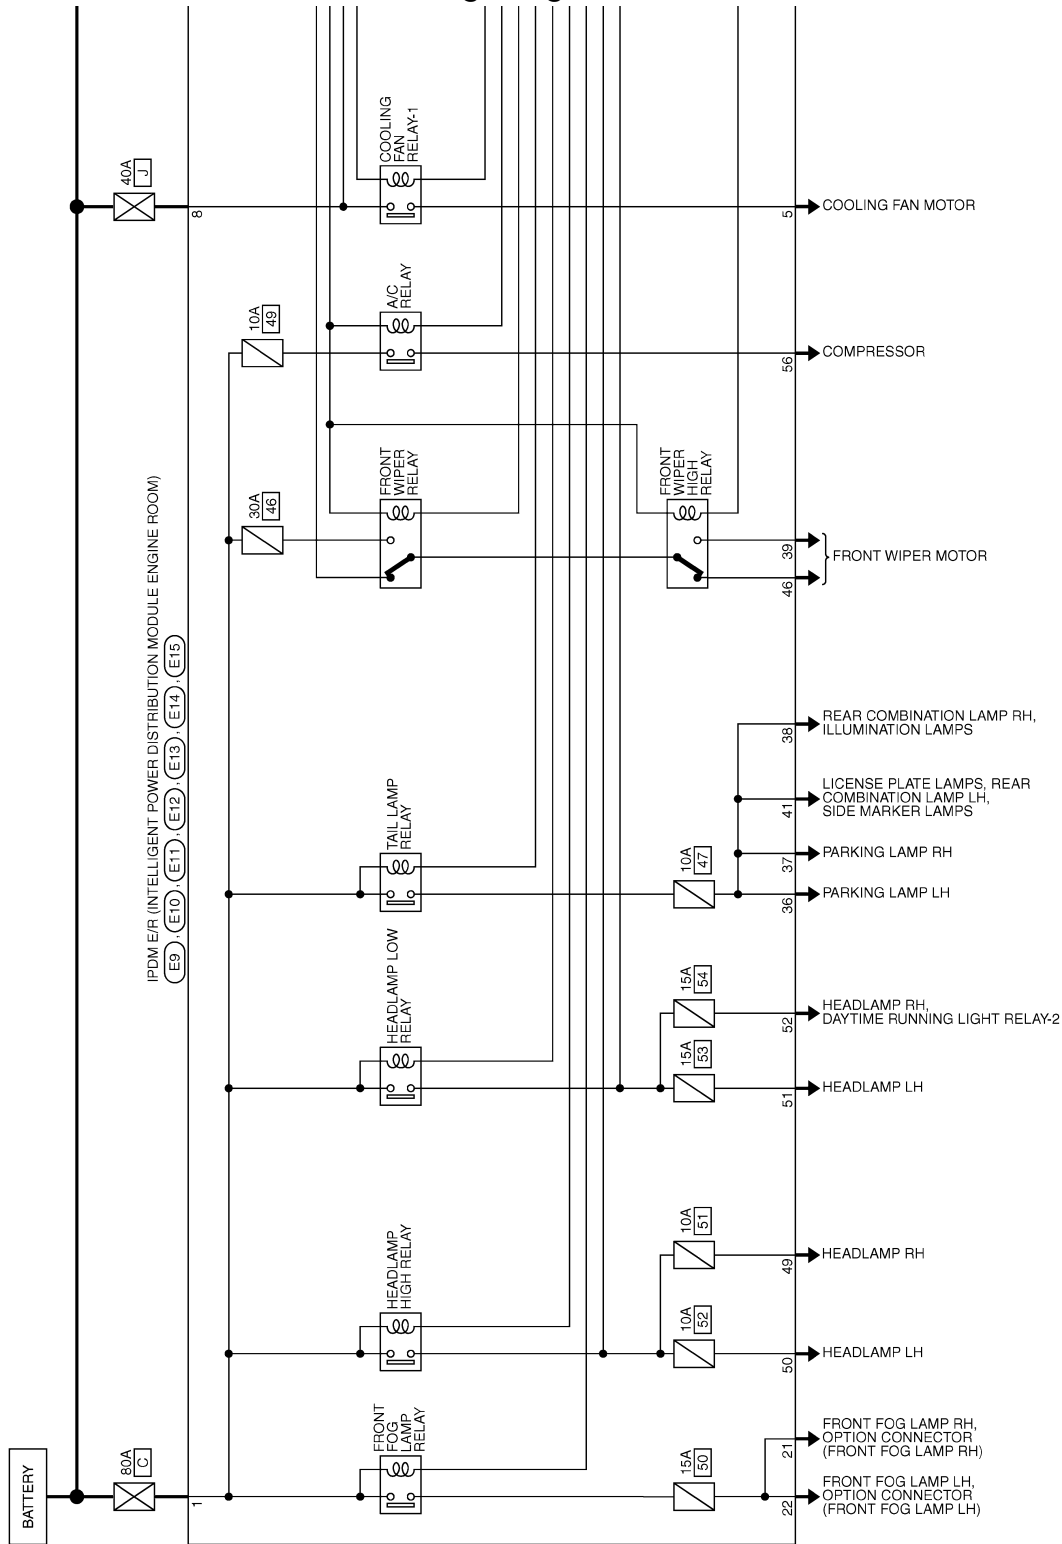

2009/10/02


JCMWM5321G1

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P



IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS INFORMATION >

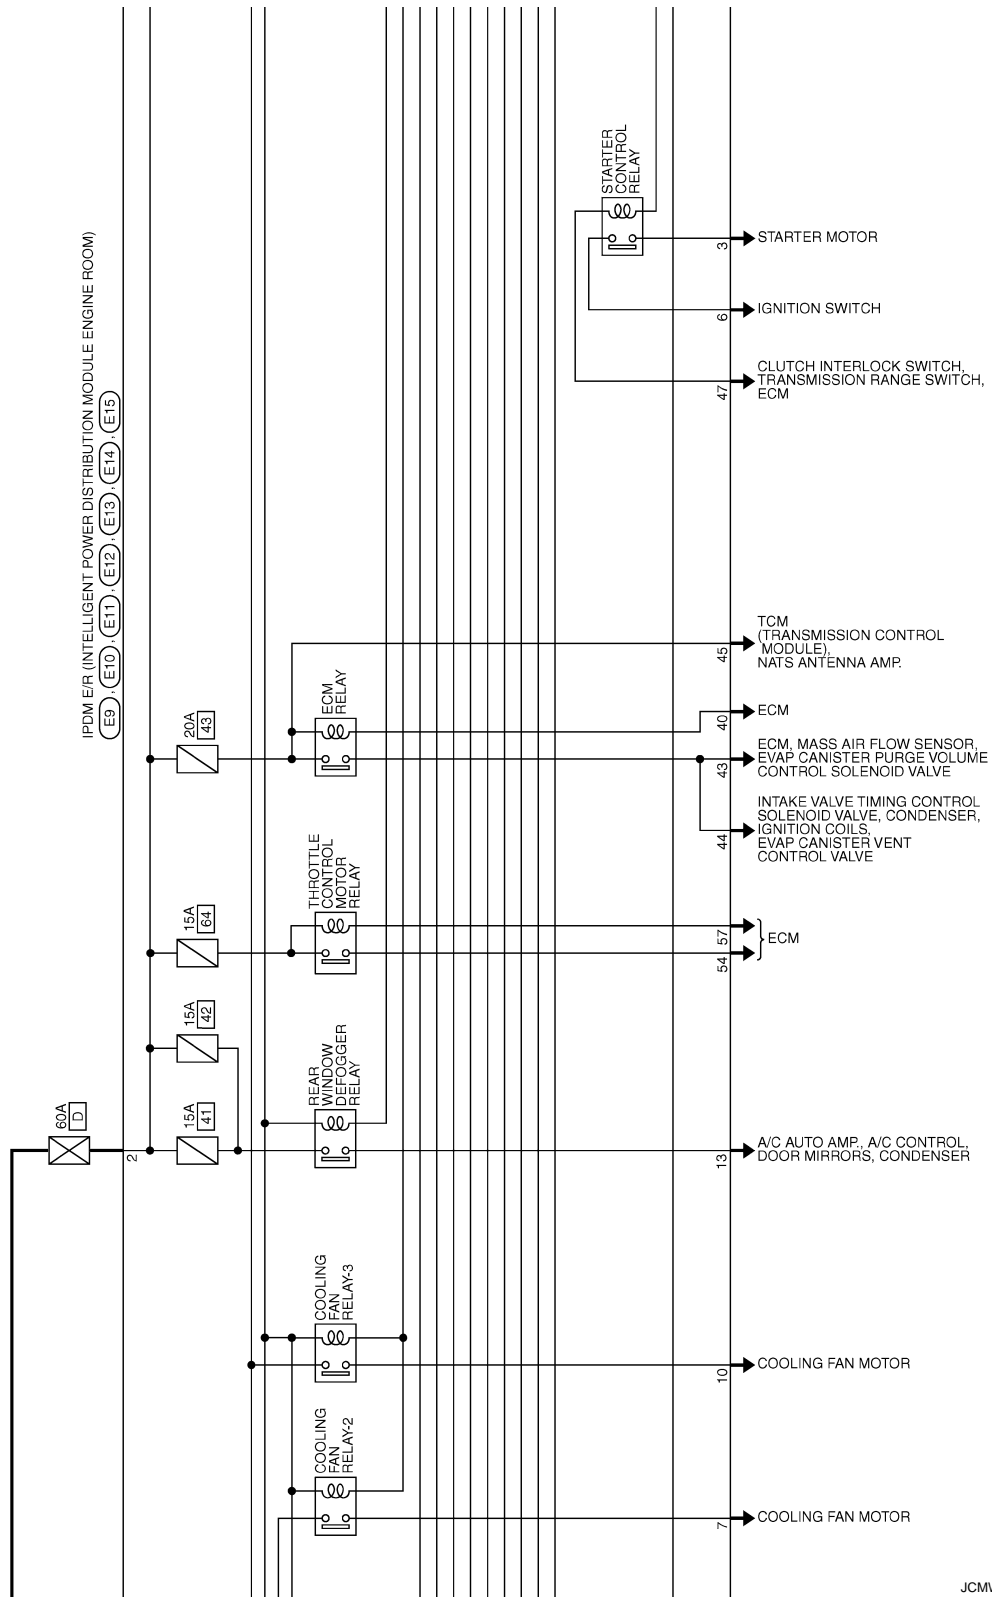

JCMW5322G

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

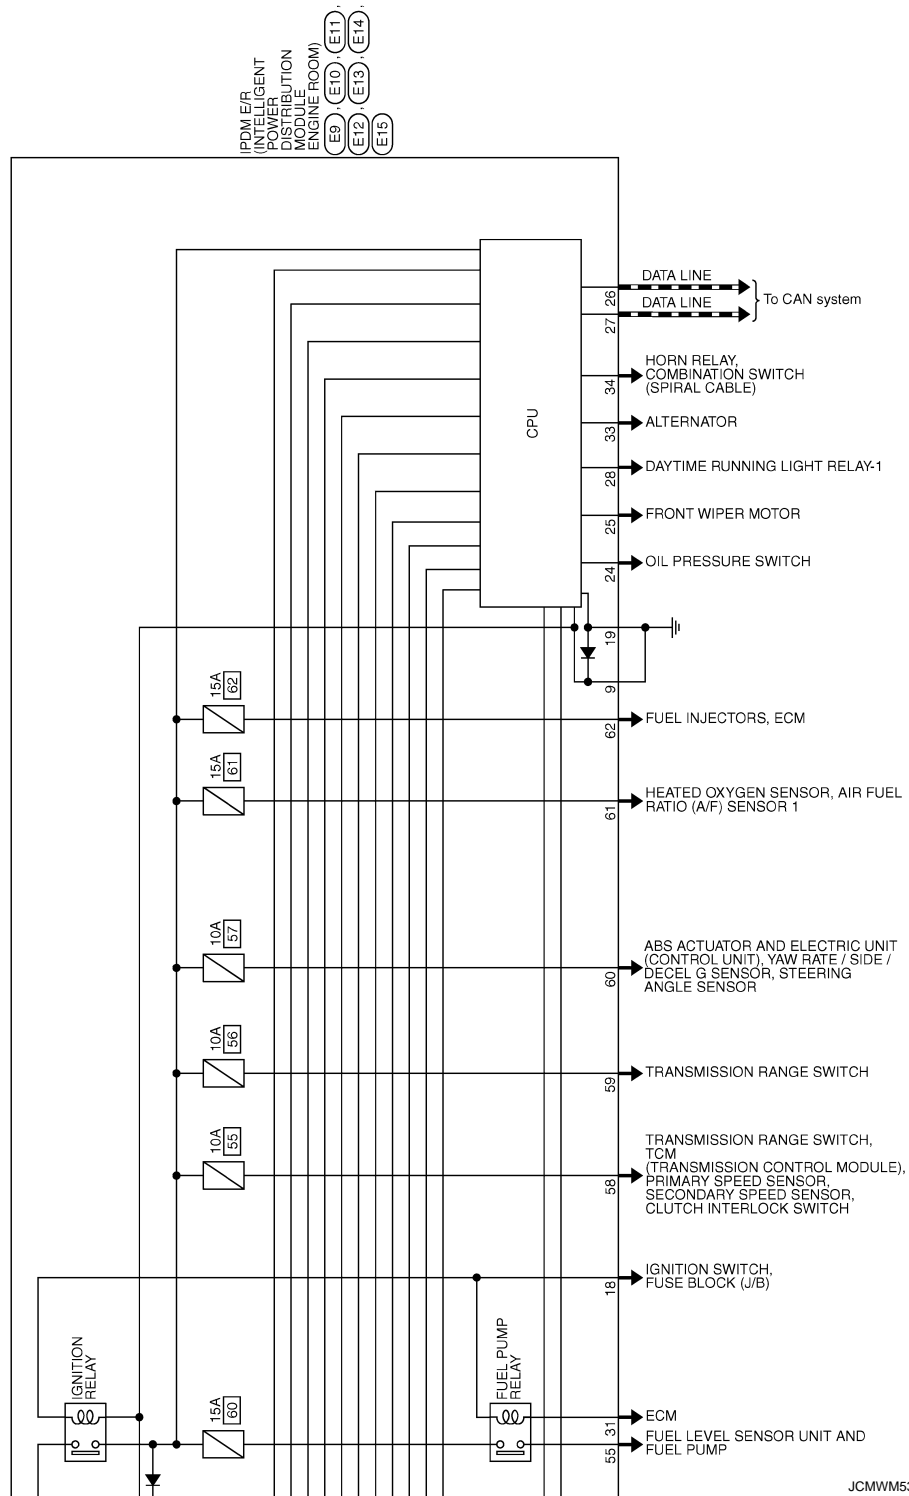

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

MWI

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Connector No.	E9
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	LCDFE-MC

H.S.

Terminal No.	1	2
Color of Wire	R	G
Signal Name [Specification]	-	-

H.S.

Terminal No.	1	2
Color of Wire	R	G
Signal Name [Specification]	-	-

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Connector No.	E10
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	MOBFW-LC

H.S.

Terminal No.	3	4	5	6	7	8
Color of Wire	BR	SB	LG	SB	Y	V
Signal Name [Specification]	-	-	-	-	-	-

H.S.

Terminal No.	3	4	5	6	7	8
Color of Wire	BR	SB	LG	SB	Y	V
Signal Name [Specification]	-	-	-	-	-	-

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Connector No.	E11
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	MOBFB-LC

H.S.

Terminal No.	11	10	9
Color of Wire	-	-	-
Signal Name [Specification]	-	-	-

H.S.

Terminal No.	11	10	9
Color of Wire	-	-	-
Signal Name [Specification]	-	-	-

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Connector No.	E12
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS08FBR-CS

H.S.

Terminal No.	17	16	15
Color of Wire	-	-	-
Signal Name [Specification]	-	-	-

H.S.

Terminal No.	17	16	15
Color of Wire	-	-	-
Signal Name [Specification]	-	-	-

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Connector No.	E13
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH12FW-NH

H.S.

Terminal No.	28	27	26	25	24	23
Color of Wire	-	-	-	-	-	-
Signal Name [Specification]	-	-	-	-	-	-

H.S.

Terminal No.	28	27	26	25	24	23
Color of Wire	-	-	-	-	-	-
Signal Name [Specification]	-	-	-	-	-	-

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Connector No.	E14
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS12FBR-CS

H.S.

Terminal No.	39	38	37	36	35
Color of Wire	-	-	-	-	-
Signal Name [Specification]	-	-	-	-	-

H.S.

Terminal No.	39	38	37	36	35
Color of Wire	-	-	-	-	-
Signal Name [Specification]	-	-	-	-	-

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Connector No.	E15
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS18FW-CS

H.S.

Terminal No.	53	52	51	50	49	48	47
Color of Wire	-	-	-	-	-	-	-
Signal Name [Specification]	-	-	-	-	-	-	-

H.S.

Terminal No.	53	52	51	50	49	48	47
Color of Wire	-	-	-	-	-	-	-
Signal Name [Specification]	-	-	-	-	-	-	-

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Connector No.	E16
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS12FBR-CS

H.S.

Terminal No.	46	45	44	43	42	41	40
Color of Wire	-	-	-	-	-	-	-
Signal Name [Specification]	-	-	-	-	-	-	-

H.S.

Terminal No.	46	45	44	43	42	41	40
Color of Wire	-	-	-	-	-	-	-
Signal Name [Specification]	-	-	-	-	-	-	-

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Connector No.	E17
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS12FBR-CS

H.S.

Terminal No.	59	58	57 <td>56</td> <td>55</td> <td>54</td>	56	55	54
Color of Wire	-	-	-	-	-	-
Signal Name [Specification]	-	-	-	-	-	-

H.S.

Terminal No.	59	58	57 <td>56</td> <td>55</td> <td>54</td>	56	55	54
Color of Wire	-	-	-	-	-	-
Signal Name [Specification]	-	-	-	-	-	-

JCMWM5324G

INFOID:000000005789469

WITHOUT INTELLIGENT KEY : Fail-Safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Control part	Fail-safe operation
Cooling fan	<ul style="list-style-type: none"> The cooling fan relay-1, the cooling fan relay-2 and the cooling fan relay-3 turn ON when the ignition switch is turned ON (Cooling fan HI operation) The cooling fan relay-1, the cooling fan relay-2 and the cooling fan relay-3 turn OFF when the ignition switch is turned OFF
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> Turns ON the headlamp low relay when the ignition switch is turned ON Turns OFF the headlamp low relay when the ignition switch is turned OFF Headlamp high relay OFF Daytime running light relay OFF*
<ul style="list-style-type: none"> Parking lamps Side marker lamps License plate lamps Illuminations Tail lamps 	<ul style="list-style-type: none"> Turns ON the tail lamp relay when the ignition switch is turned ON Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Front fog lamps	Front fog lamp relay OFF
Rear window defogger relay	Rear window defogger relay OFF
Horn	Horn OFF

*: With daytime running light system

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit of the ignition relay inside and ignition switch status from BCM via CAN communication.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the ignition switch status from BCM via CAN communication.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition switch status from BCM		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	<ul style="list-style-type: none"> Detects DTC "B2098: IGN RELAY ON" Turns ON the tail lamp relay for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF"

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

WITHOUT INTELLIGENT KEY : DTC Index

INFOID:000000005789470

NOTE:

- The details of time display are as follows.
 - CRNT: A malfunction is detected now.
 - PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
 - The number is 0 when is detected now.
 - The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
 - The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

CONSULT display	Fail-safe	Refer to
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	PCS-16
B2098: IGN RELAY ON	×	PCS-17
B2099: IGN RELAY OFF	—	PCS-48

THE FUEL GAUGE INDICATOR DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

THE FUEL GAUGE INDICATOR DOES NOT OPERATE

Description

INFOID:000000005490778

Fuel gauge will not indicate from a certain position.

Diagnosis Procedure

INFOID:000000005490779

1. CHECK COMBINATION METER INPUT SIGNAL

1. Connect CONSULT-III.
2. Select the "Data Monitor" for the "METER/M&A" and compare the "FUEL METER" monitor value with the fuel gauge reading on the combination meter. Refer to [MWI-42, "Component Function Check"](#).

Does monitor value match fuel gauge reading?

- YES >> GO TO 2.
NO >> Replace combination meter.

2. CHECK FUEL LEVEL SENSOR SIGNAL CIRCUIT

Check the fuel level sensor signal circuit. Refer to [MWI-42, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

3. CHECK FUEL LEVEL SENSOR UNIT

Perform a unit check for the fuel level sensor unit. Refer to [MWI-43, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace fuel level sensor unit. Refer to [FL-5, "Removal and Installation"](#).

4. CHECK FLOAT INTERFERENCE

Check that the float arm interferes with or binds to other components in the fuel tank.

Is the inspection result normal?

- YES >> Replace combination meter.
NO >> Repair or replace malfunctioning parts.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

THE OIL PRESSURE WARNING LAMP DOES NOT TURN ON

Description

INFOID:000000005490780

The oil pressure warning lamp stays off when the ignition switch is turned ON.

Diagnosis Procedure

INFOID:000000005490781

1.CHECK OIL PRESSURE WARNING LAMP

Perform auto active test. Refer to [PCS-11, "Diagnosis Description"](#).

Is oil pressure warning lamp blinking?

- YES >> GO TO 2.
- NO >> GO TO 4.

2.CHECK OIL PRESSURE SWITCH SIGNAL CIRCUIT

Check the oil pressure switch signal circuit. Refer to [MWI-44, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair harness or connector.

3.CHECK OIL PRESSURE SWITCH

Perform a unit check for the oil pressure switch. Refer to [MWI-44, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace IPDM E/R.
- NO >> Replace oil pressure switch.

4.CHECK COMBINATION METER INPUT SIGNAL

Connect CONSULT-III and perform an input signal check for the combination meter. Refer to [MWI-44, "Component Function Check"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
- NO >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF

< SYMPTOM DIAGNOSIS >

THE OIL PRESSURE WARNING LAMP DOES NOT TURN OFF

Description

INFOID:000000005490782

The oil pressure warning lamp remains illuminated while the engine is running (normal oil pressure).

Diagnosis Procedure

INFOID:000000005490783

1. CHECK OIL PRESSURE WARNING LAMP

Perform auto active test. Refer to [PCS-11, "Diagnosis Description"](#).

Is oil pressure warning lamp blinking?

- YES >> GO TO 2.
- NO >> GO TO 5.

2. CHECK IPDM E/R OUTPUT VOLTAGE

1. Turn ignition switch OFF.
2. Disconnect the oil pressure switch connector.
3. Turn ignition switch ON.
4. Check voltage between the oil pressure switch harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
Oil pressure switch		Ground
Connector	Terminal	
F63	1	

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> GO TO 4.

3. CHECK OIL PRESSURE SWITCH

Perform a unit check for the oil pressure switch. Refer to [MWI-44, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
- NO >> Replace oil pressure switch.

4. CHECK OIL PRESSURE SWITCH SIGNAL CIRCUIT

Check the oil pressure switch signal circuit. Refer to [MWI-44, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair harness or connector.

5. CHECK COMBINATION METER INPUT SIGNAL

Connect CONSULT-III and perform an input signal check for the combination meter. Refer to [MWI-44, "Component Function Check"](#).

Is the inspection result normal?

- YES >> Replace combination meter.
- NO >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

THE AMBIENT TEMPERATURE DISPLAY IS INCORRECT

< SYMPTOM DIAGNOSIS >

THE AMBIENT TEMPERATURE DISPLAY IS INCORRECT

Description

INFOID:000000005490784

- The displayed ambient air temperature is higher than the actual temperature.
- The displayed ambient air temperature is lower than the actual temperature.
- Ambient air temperature is not indicated.

Diagnosis Procedure

INFOID:000000005490785

NOTE:

Check that the symptom is not applicable to the normal operating condition before starting diagnosis. Refer to [MWI-94, "INFORMATION DISPLAY : Description"](#).

1.CHECK AMBIENT SENSOR SIGNAL CIRCUIT

Check the ambient sensor signal circuit. Refer to [HAC-35, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK A/C AUTO AMP. CONNECTION RECOGNITION SIGNAL CIRCUIT

Check the A/C auto amp. connection recognition signal circuit. Refer to [MWI-48, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK AMBIENT SENSOR

Perform the part check for the ambient sensor. Refer to [HAC-36, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace combination meter. Refer to [MWI-97, "Removal and Installation"](#).

NO >> Replace ambient sensor. Refer to [HAC-144, "Removal and Installation"](#).

THE LOW WASHER FLUID WARNING LAMP DOES NOT TURN ON OR OFF

< SYMPTOM DIAGNOSIS >

THE LOW WASHER FLUID WARNING LAMP DOES NOT TURN ON OR OFF

Description

INFOID:000000005490786

- The low washer fluid warning lamp is still illuminated even after washer fluid is added.
- The low washer fluid warning lamp is not illuminated even though the washer tank is empty.

Diagnosis Procedure

INFOID:000000005490787

1.CHECK WASHER LEVEL SWITCH SIGNAL CIRCUIT

Check the washer level switch signal circuit. Refer to [MWI-46. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

2.CHECK WASHER LEVEL SWITCH

Perform a unit check for the washer level switch. Refer to [MWI-46. "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace combination meter.

NO >> Replace washer level switch. Refer to [WW-140. "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

NORMAL OPERATING CONDITION INFORMATION DISPLAY

INFORMATION DISPLAY : Description

INFOID:000000005490788

AMBIENT AIR TEMPERATURE

The displayed ambient air temperature on the information display may differ from the actual temperature because it is a corrected value calculated from the ambient sensor signal by the combination meter. Refer to [MWI-24, "INFORMATION DISPLAY : System Description"](#) for details on the correction process.

POSSIBLE DRIVING DISTANCE

The calculated possible driving distance may differ from the actual distance to empty if the refueling amount is approximately 15 ℓ (4 US gal, 3-1/4 Imp gal) or less. This is because the refuel control (moves the fuel gauge needle quicker than normal judging that the driver is refueling the vehicle) is not performing.

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005490789

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

A
B
C
D
E
F
G
H
I
J
K
L
M
O
P

MWI

PREPARATION


< PREPARATION >

PREPARATION

PREPARATION

Commercial Service Tools

INFOID:000000005490790

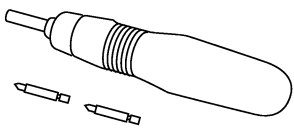Tool name	Description
<p data-bbox="162 514 267 546">Power tool</p>  <p data-bbox="844 630 917 651">PBIC0191E</p>	<p data-bbox="1006 514 1258 546">Loosening bolts and nuts</p>

COMBINATION METER

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

COMBINATION METER


Exploded View

INFOID:000000005490791

REMOVAL

Refer to [IP-12. "Exploded View"](#).

DISASSEMBLY

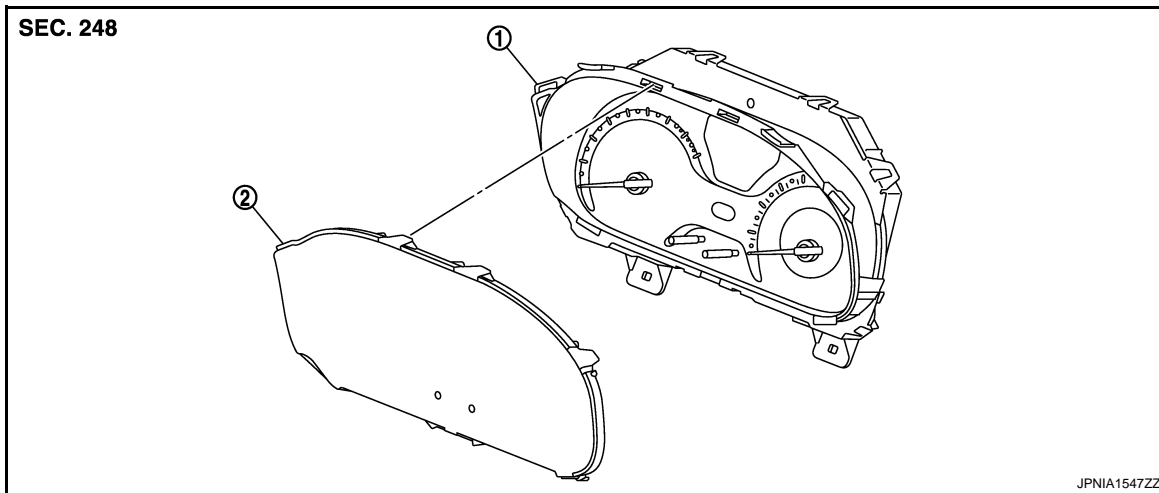


1. Unified meter control unit
2. Front cover

Removal and Installation

INFOID:000000005490792

REMOVAL

1. Remove the cluster lid A. Refer to [IP-13. "Removal and Installation"](#).
2. Remove screws (A) and connector, and then remove combination meter (1).

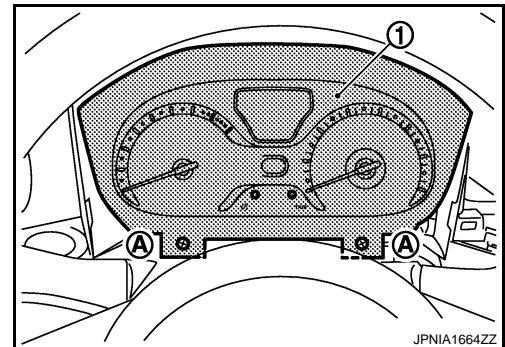

INSTALLATION

Install in the reverse order of removal.

Disassembly and Assembly

INFOID:000000005490793

DISASSEMBLY

Disengage the tabs to separate front cover.

ASSEMBLY

Assemble in the reverse order of disassembly.

A
B
C
D
E
F
G
H
I
J
K
L
M
MWI
O
P