

SECTION EXL

EXTERIOR LIGHTING SYSTEM

A
B
C
D
E

F
G
H
I
J
K
L
M
N
O
P
EXL

CONTENTS

BASIC INSPECTION	5	Component Parts Location	19
DIAGNOSIS AND REPAIR WORKFLOW	5	Component Description	19
Work Flow	5		
SYSTEM DESCRIPTION	7		
HEADLAMP SYSTEM	7	EXTERIOR LAMP BATTERY SAVER SYS-	20
System Diagram	7	System Diagram	20
System Description	7	System Description	20
Component Parts Location	8	Component Parts Location	21
Component Description	8	Component Description	21
DAYTIME RUNNING LIGHT SYSTEM	9	DIAGNOSIS SYSTEM (BCM) (WITH INTELLI-	22
System Diagram	9	GENT KEY SYSTEM)	22
System Description	9		
Component Parts Location	10	COMMON ITEM	22
Component Description	10	COMMON ITEM : CONSULT-III Function (BCM -	
AUTO LIGHT SYSTEM	11	COMMON ITEM)	22
System Diagram	11	HEADLAMP	23
System Description	11	HEADLAMP : CONSULT-III Function (BCM -	
Component Parts Location	13	HEAD LAMP)	23
Component Description	13	FLASHER	26
FRONT FOG LAMP SYSTEM	14	FLASHER : CONSULT-III Function (BCM -	
System Diagram	14	FLASHER)	26
System Description	14	DIAGNOSIS SYSTEM (BCM) (WITHOUT IN-	28
Component Parts Location	14	TELLIGENT KEY SYSTEM)	28
Component Description	15	COMMON ITEM	28
TURN SIGNAL AND HAZARD WARNING		COMMON ITEM : CONSULT-III Function (BCM -	
LAMP SYSTEM	16	COMMON ITEM)	28
System Diagram	16	HEADLAMP	28
System Description	16	HEADLAMP : CONSULT-III Function (BCM -	
Component Parts Location	17	HEAD LAMP)	29
Component Description	17	FLASHER	31
PARKING, LICENSE PLATE, SIDE MARKER		FLASHER : CONSULT-III Function (BCM -	
AND TAIL LAMPS SYSTEM	18	FLASHER)	31
System Diagram	18	DIAGNOSIS SYSTEM (IPDM E/R) (WITH IN-	32
System Description	18	TELLIGENT KEY SYSTEM)	32
		Diagnosis Description	32

CONSULT-III Function (IPDM E/R)	34	DAYTIME RUNNING LIGHT RELAY CIRCUIT	57
DIAGNOSIS SYSTEM (IPDM E/R) (WITHOUT INTELLIGENT KEY SYSTEM)	37	Component Function Check	57
Diagnosis Description	37	Diagnosis Procedure	57
CONSULT-III Function (IPDM E/R)	39	Component Inspection (Daytime Running Light Relay-1)	58
DTC/CIRCUIT DIAGNOSIS	41	Component Inspection (Daytime Running Light Relay-2)	59
POWER SUPPLY AND GROUND CIRCUIT	41		
BCM (BODY CONTROL SYSTEM) (WITH INTELLIGENT KEY SYSTEM)	41	PARKING LAMP CIRCUIT	60
BCM (BODY CONTROL SYSTEM) (WITH INTELLIGENT KEY SYSTEM) : Diagnosis Procedure	41	Component Function Check	60
BCM (BODY CONTROL SYSTEM) (WITHOUT INTELLIGENT KEY SYSTEM)	41	Diagnosis Procedure	60
BCM (BODY CONTROL SYSTEM) (WITHOUT INTELLIGENT KEY SYSTEM) : Diagnosis Procedure	41	TURN SIGNAL LAMP CIRCUIT	62
IPDM E/R (WITH INTELLIGENT KEY SYSTEM)	42	Description	62
IPDM E/R (WITH INTELLIGENT KEY SYSTEM) : Diagnosis Procedure	42	Component Function Check	62
IPDM E/R (WITHOUT INTELLIGENT KEY SYSTEM)	43	Diagnosis Procedure	62
IPDM E/R (WITHOUT INTELLIGENT KEY SYSTEM) : Diagnosis Procedure	43	OPTICAL SENSOR	64
EXTERIOR LAMP FUSE	45	Description	64
WITHOUT DAYTIME RUNNING LIGHT SYSTEM ...	45	Component Function Check	64
WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Description	45	Diagnosis Procedure	64
WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure	45	HAZARD SWITCH	67
WITH DAYTIME RUNNING LIGHT SYSTEM	45	Component Function Check	67
WITH DAYTIME RUNNING LIGHT SYSTEM : Description	45	Diagnosis Procedure	67
WITH DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure	46	TAIL LAMP CIRCUIT	69
HEADLAMP (HI) CIRCUIT	47	Component Function Check	69
Component Function Check	47	Diagnosis Procedure	69
Diagnosis Procedure	47	REAR SIDE MARKER LAMP CIRCUIT	71
HEADLAMP (LO) CIRCUIT	50	Component Function Check	71
Component Function Check	50	Diagnosis Procedure	71
WITH DAYTIME RUNNING LIGHT SYSTEM	50	LICENSE PLATE LAMP CIRCUIT	72
WITH DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure	50	Component Function Check	72
WITHOUT DAYTIME RUNNING LIGHT SYSTEM ...	53	Diagnosis Procedure	72
WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure	53	HEADLAMP SYSTEM	73
FRONT FOG LAMP CIRCUIT	55	Wiring Diagram - HEADLAMP -	73
Component Function Check	55	AUTO LIGHT SYSTEM	78
Diagnosis Procedure	55	Wiring Diagram - AUTO LIGHT SYSTEM -	78
DAYTIME RUNNING LIGHT SYSTEM	84	DAYTIME RUNNING LIGHT SYSTEM	84
Wiring Diagram - DAYTIME RUNNING LIGHT SYSTEM -	84	FRONT FOG LAMP SYSTEM	91
TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM	95	Wiring Diagram - FRONT FOG LAMP -	91
Wiring Diagram - TURN AND HAZARD WARNING LAMPS -	95	TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM	95
PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS SYSTEM	100	Wiring Diagram - PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS -	100
Wiring Diagram - PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS -	100		

STOP LAMP	107	Description	195
Wiring Diagram - STOP LAMP -	107	Diagnosis Procedure	195
BACK-UP LAMP	111		
Wiring Diagram - BACK-UP LAMP -	111		
ECU DIAGNOSIS INFORMATION	115		
BCM (BODY CONTROL MODULE)	115		
WITH INTELLIGENT KEY	115		
WITH INTELLIGENT KEY : Reference Value	115		
WITH INTELLIGENT KEY : Wiring Diagram -			
BCM -	135		
WITH INTELLIGENT KEY : Fail-safe	139		
WITH INTELLIGENT KEY :			
DTC Inspection Priority Chart	140		
WITH INTELLIGENT KEY : DTC Index	141		
WITHOUT INTELLIGENT KEY	143		
WITHOUT INTELLIGENT KEY : Reference Value	143		
WITHOUT INTELLIGENT KEY : Wiring Diagram -			
BCM -	158		
WITHOUT INTELLIGENT KEY : Fail-safe	161		
WITHOUT INTELLIGENT KEY :			
DTC Inspection Priority Chart	162		
WITHOUT INTELLIGENT KEY : DTC Index	162		
IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	164		
WITH INTELLIGENT KEY	164		
WITH INTELLIGENT KEY : Reference Value	164		
WITH INTELLIGENT KEY : Wiring Diagram —			
IPDM E/R —	171		
WITH INTELLIGENT KEY : Fail-Safe	174		
WITH INTELLIGENT KEY : DTC Index	176		
WITHOUT INTELLIGENT KEY	176		
WITHOUT INTELLIGENT KEY : Reference Value	176		
WITHOUT INTELLIGENT KEY : Wiring Diagram —			
— IPDM E/R —	183		
WITHOUT INTELLIGENT KEY : Fail-Safe	186		
WITHOUT INTELLIGENT KEY : DTC Index	188		
SYMPTOM DIAGNOSIS	189		
EXTERIOR LIGHTING SYSTEM SYMPTOMS.	189		
WITHOUT DAYTIME RUNNING LIGHT SYSTEM..	189		
WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Symptom Table	189		
WITH DAYTIME RUNNING LIGHT SYSTEM	190		
WITH DAYTIME RUNNING LIGHT SYSTEM : Symptom Table	190		
NORMAL OPERATING CONDITION	194		
Description	194		
BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON	195		
Description	195		
Diagnosis Procedure	195		
BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON	196		
Description	196		
Diagnosis Procedure	196		
PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON ...	197		
Description	197		
Diagnosis Procedure	197		
BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON	198		
Description	198		
Diagnosis Procedure	198		
PRECAUTION	199		
PRECAUTIONS	199		
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	199		
PERIODIC MAINTENANCE	200		
HEADLAMP AIMING ADJUSTMENT	200		
Description	200		
Aiming Adjustment Procedure	201		
FRONT FOG LAMP AIMING ADJUSTMENT .	203		
Description	203		
Aiming Adjustment Procedure	203		
REMOVAL AND INSTALLATION	205		
FRONT COMBINATION LAMP	205		
Exploded View	205		
Removal and Installation	205		
Replacement	206		
Disassembly and Assembly	206		
FRONT FOG LAMP	208		
Exploded View	208		
Removal and Installation	208		
Replacement	208		
OPTICAL SENSOR	210		
Exploded View	210		
Removal and Installation	210		
LIGHTING & TURN SIGNAL SWITCH	211		
Exploded View	211		
SIDE TURN SIGNAL LAMP	212		
Exploded View	212		
Removal and Installation	212		
Replacement	212		
HAZARD SWITCH	214		
Exploded View	214		

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
EXL

Removal and Installation	214	Replacement	219
REAR COMBINATION LAMP	215	LICENSE PLATE LAMP	221
Exploded View	215	Exploded View	221
Removal and Installation	215	Removal and Installation	221
Replacement	216	Replacement	221
REAR SIDE MARKER LAMP	218	SERVICE DATA AND SPECIFICATIONS (SDS)	223
Exploded View	218		
Removal and Installation	218	SERVICE DATA AND SPECIFICATIONS (SDS)	223
Replacement	218	Bulb Specifications	223
HIGH-MOUNTED STOP LAMP	219		
Exploded View	219		
Removal and Installation	219		

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000006504323

OVERALL SEQUENCE

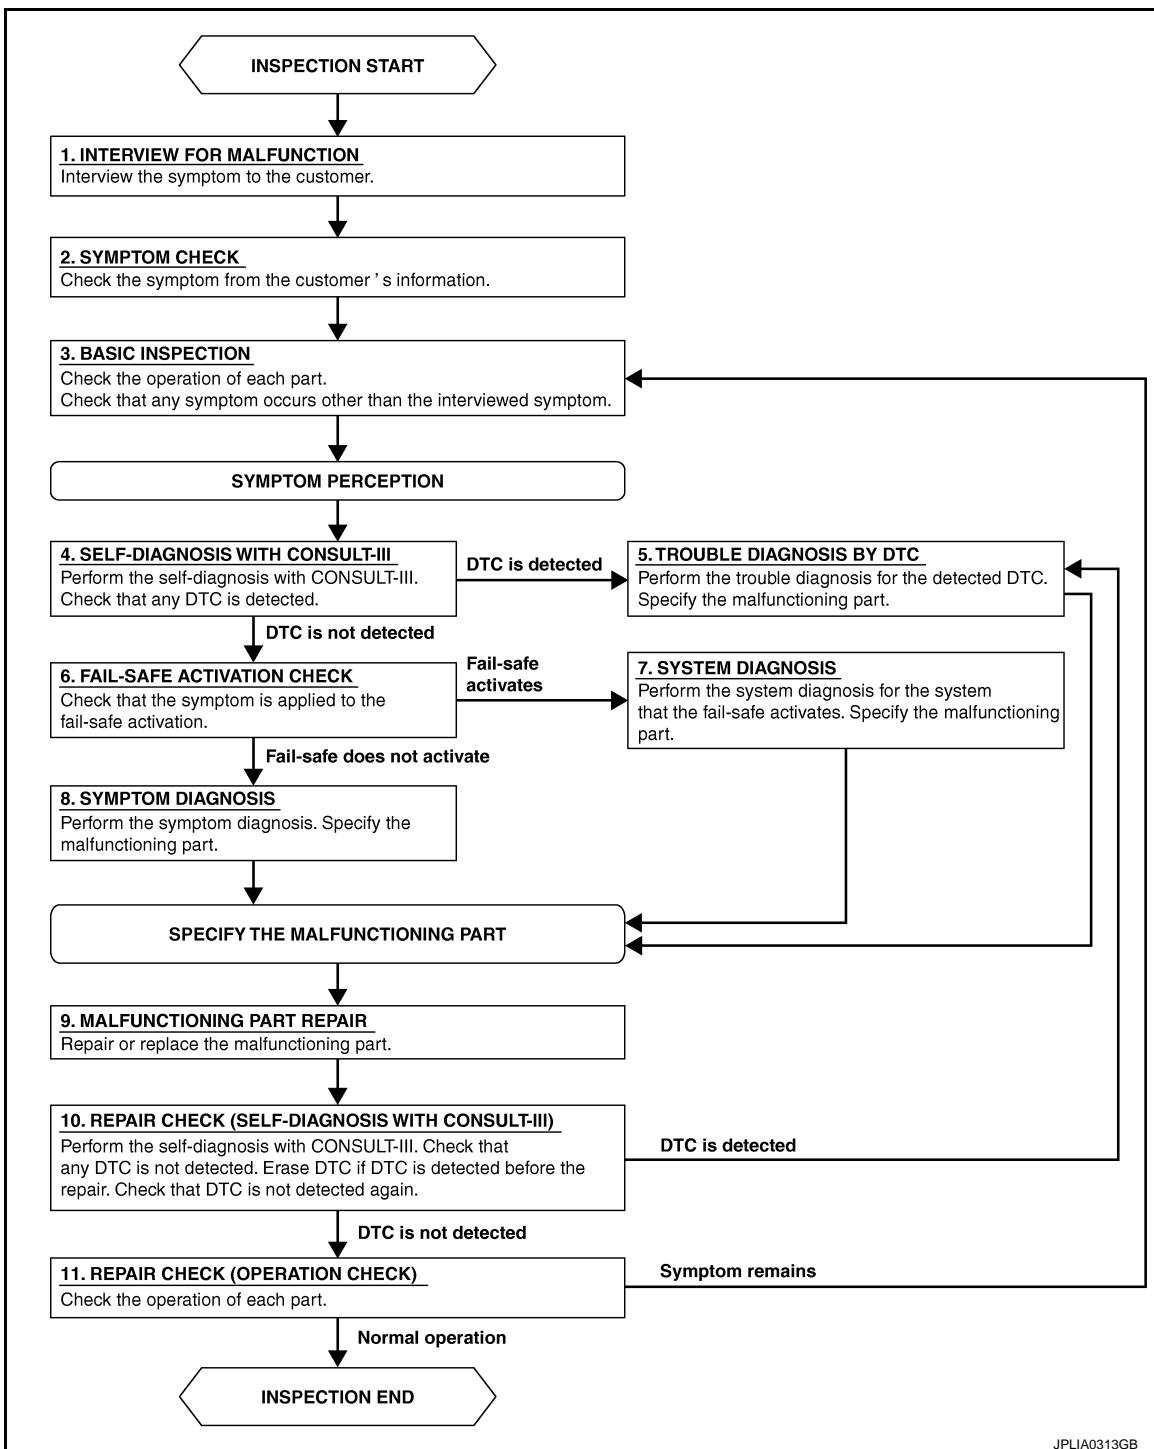

JPLIA0313GB

DETAILED FLOW

1. INTERVIEW FOR MALFUNCTION

Interview the symptom to the customer.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

>> GO TO 2.

2. SYMPTOM CHECK

Check the symptom from the customer's information.

>> GO TO 3.

3. BASIC INSPECTION

Check the operation of each part. Check that any symptom occurs other than the interviewed symptom.

>> GO TO 4.

4. SELF-DIAGNOSIS WITH CONSULT-III

Perform the self-diagnosis with CONSULT-III. Check that any DTC is detected.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 6.

5. TROUBLE DIAGNOSIS BY DTC

Perform the trouble diagnosis for the detected DTC. Specify the malfunctioning part.

>> GO TO 9.

6. FAIL-SAFE ACTIVATION CHECK

Check that the symptom is applied to the fail-safe activation.

Does the fail-safe activate?

YES >> GO TO 7.

NO >> GO TO 8.

7. SYSTEM DIAGNOSIS

Perform the system diagnosis for the system that the fail-safe activates. Specify the malfunctioning part.

>> GO TO 9.

8. SYMPTOM DIAGNOSIS

Perform the symptom diagnosis. Specify the malfunctioning part.

>> GO TO 9.

9. MALFUNCTION PART REPAIR

Repair or replace the malfunctioning part.

>> GO TO 10.

10. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT-III)

Perform the self-diagnosis with CONSULT-III. Check that any DTC is not detected. Erase DTC if DTC is detected before the repair. Check that DTC is not detected again.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 11.

11. REPAIR CHECK (OPERATION CHECK)

Check the operation of each part.

Does it operate normally?

YES >> INSPECTION END

NO >> GO TO 3.

HEADLAMP SYSTEM


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

HEADLAMP SYSTEM

System Diagram

INFOID:000000006504324

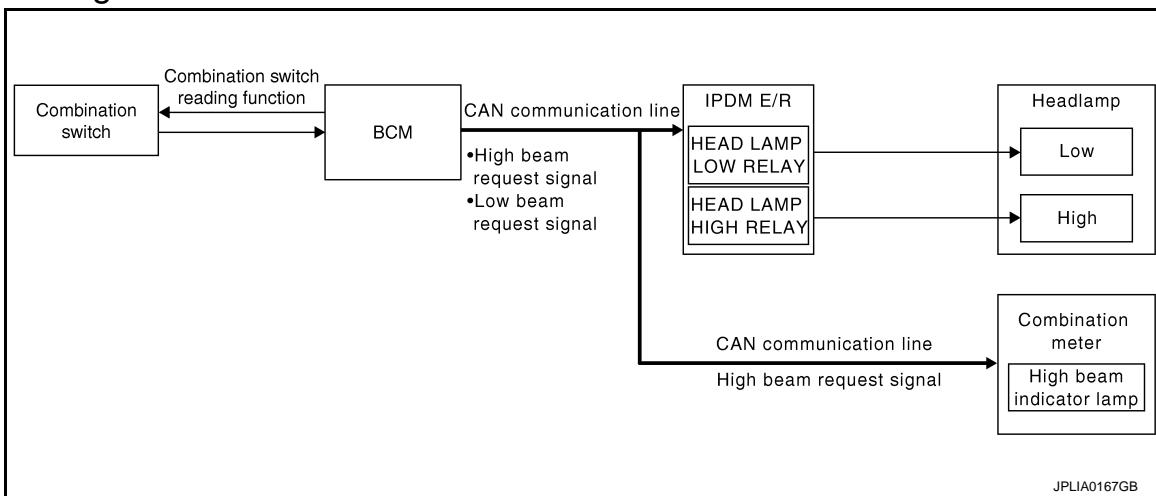

System Description

INFOID:000000006504325

OUTLINE

Headlamp is controlled by combination switch reading function and headlamp control function of BCM, and relay control function of IPDM E/R.

HEADLAMP (LO) OPERATION

- BCM detects the combination switch condition with the combination switch reading function.
- BCM transmits the low beam request signal to IPDM E/R with CAN communication according to the headlamp (LO) ON condition.

Headlamp (LO) ON condition

- Lighting switch 2ND
- Lighting switch AUTO, and the auto light function ON judgment (With auto light system)
- IPDM E/R turns the integrated headlamp low relay ON, and turns the headlamp ON according to the low beam request signal.

NOTE:

Daytime running light model goes through the daytime running light relay-2 in headlamp low (RH) circuit.
For details, refer to [EXL-9. "System Description"](#).

EXL

HEADLAMP (HI) OPERATION

- BCM transmits the high beam request signal to IPDM E/R and the combination meter with CAN communication according to the headlamp (HI) ON condition.

Headlamp (HI) ON condition

- Lighting switch HI with the lighting switch 2ND or AUTO (auto light function ON judgment)
- Lighting switch PASS
- Combination meter turns the high beam indicator lamp ON according to the high beam request signal.
- IPDM E/R turns the integrated headlamp high relay ON, and turns the headlamp ON according to the high beam request signal.

M

N

O


P

HEADLAMP SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000006504326

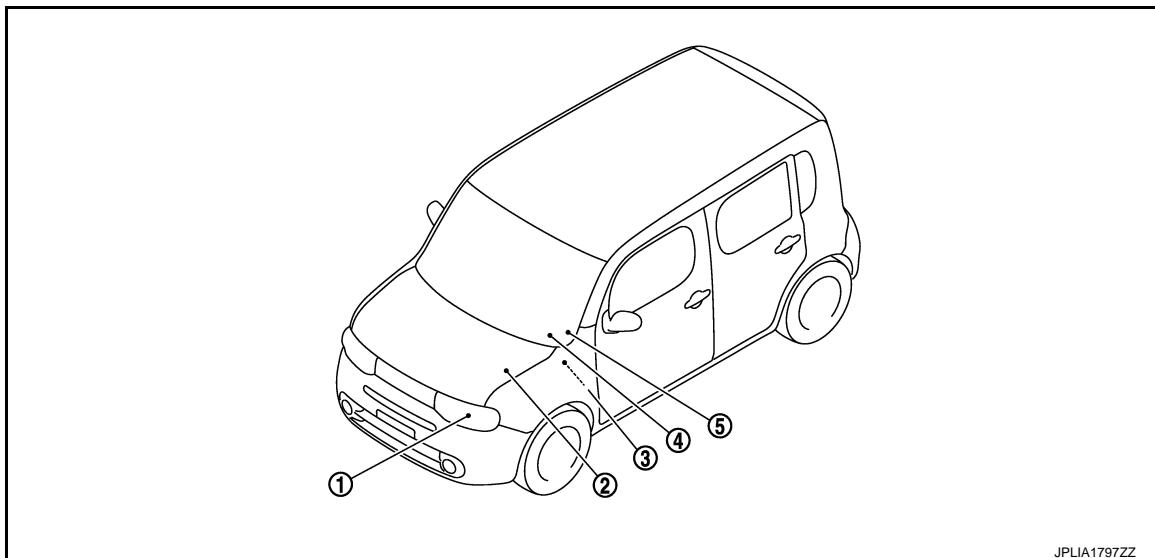

- | | | |
|--|--|---|
| 1. Headlamp | 2. IPDM E/R
Refer to PCS-6, "Component Parts Location". | 3. BCM
Refer to BCS-9, "Component Parts Location". |
| 4. Combination meter
(High beam indicator lamp) | 5. Combination switch | |

Component Description

INFOID:000000006504327

Part	Description
BCM	<ul style="list-style-type: none">Detects each switch condition by the combination switch reading function.Judges that the headlamp is turned ON according to the vehicle condition.- Requests the headlamp relay (HI/LO) ON to IPDM E/R (with CAN communication).- Requests the high beam indicator lamp ON to the combination meter (with CAN communication).
IPDM E/R	Controls the integrated relay, and supplies voltage to the load according to the request from BCM (with CAN communication).
Combination switch (Lighting & turn signal switch)	Refer to BCS-10, "System Diagram".
Combination meter (High beam indicator lamp)	Turns the high beam indicator lamp ON according to the request from BCM (with CAN communication).


DAYTIME RUNNING LIGHT SYSTEM

< SYSTEM DESCRIPTION >

DAYTIME RUNNING LIGHT SYSTEM

System Diagram

INFOID:000000006504328

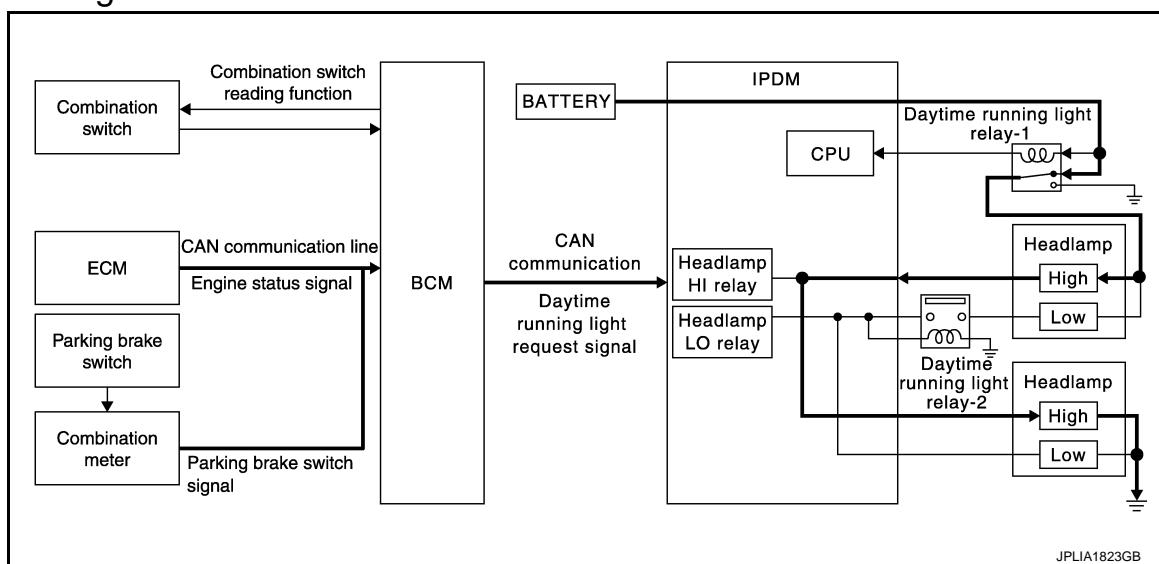

System Description

INFOID:000000006504329

OUTLINE

- Turns the headlamp high ON (high beam at approximately half illumination) as the daytime running light.
- Daytime running light is controlled by daytime running light control function and combination switch reading function of BCM, and relay control function of IPDM E/R.

DAYTIME RUNNING LIGHT OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM detects the engine condition by the engine status signal received from ECM with CAN communication.
- BCM detects the parking brake condition by the parking brake switch signal received from combination meter with CAN communication.
- BCM transmits the daytime running light request signal to IPDM E/R with CAN communication according to the daytime running light ON condition.

Daytime running light ON condition

- Engine running
- Lighting switch OFF or 1ST
- Parking brake switch OFF
- IPDM E/R controls the daytime running light relay-1 (ground-side) to turn ON according to the daytime running light request signal.
- Power is supplied from the daytime running light relay-1 through headlamp high (RH) and IPDM E/R to headlamp high (LH). And high beam headlights are illuminated (approximately half illumination) as the daytime running light.

EXL

NOTE:

- Daytime running light relay-2 is turned ON when headlamp is low.
- Daytime running light relay-2 is OFF to cut voltage of headlamp low circuit when daytime running light is ON.

M

N

O


P

DAYTIME RUNNING LIGHT SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000006504330

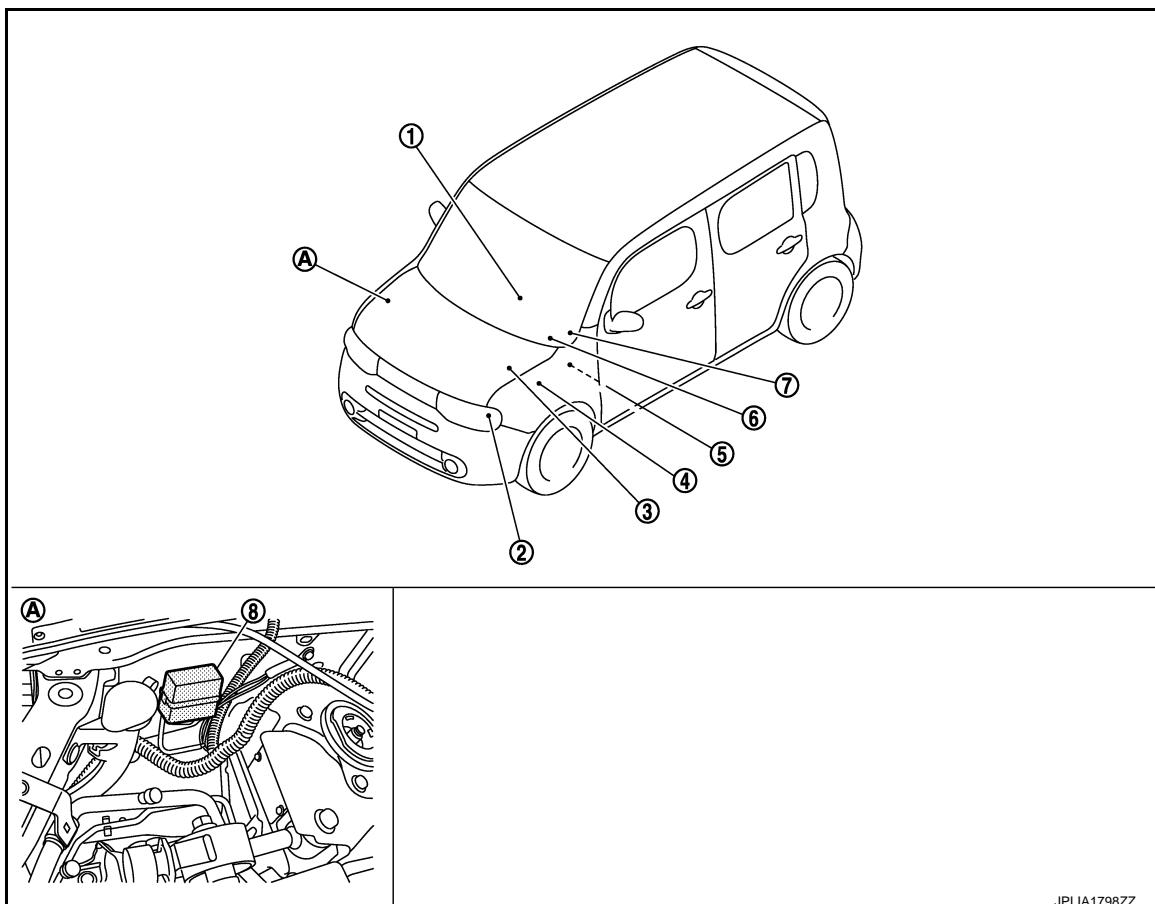

JPLIA1798ZZ

1. Parking brake switch
2. Daytime running light (Headlamp HI)
3. IPDM E/R
Refer to [PCS-6, "Component Parts Location".](#)
4. ECM
Refer to [EC-41, "Component Parts Location".](#)
5. BCM
Refer to [BCS-9, "Component Parts Location".](#)
6. Combination meter
7. Combination switch
 - Daytime running light relay-1
 - Daytime running light relay-2
- A. Engine room (RH)

Component Description

INFOID:000000006504331


Part	Description
BCM	<ul style="list-style-type: none">• Detects each switch condition with the combination switch reading function.• Judges each lamps ON/OFF condition according to the vehicle condition.- Requests the each relay ON to IPDM E/R (with CAN communication).
IPDM E/R	Controls the relay and supplies voltage to the load according to the request from BCM (with CAN communication).
Daytime running light relay-1	Switches headlamp (HI) circuit to illuminate the daytime running light.
Daytime running light relay-2	Cuts voltage of headlamp low circuit when daytime running light is ON.
Combination switch (Lighting & turn signal switch)	Refer to BCS-10, "System Diagram".
ECM	Transmits the engine status signal to BCM (with CAN communication).
Combination meter	Transmits the parking brake switch signal to BCM (with CAN communication).

AUTO LIGHT SYSTEM

< SYSTEM DESCRIPTION >

AUTO LIGHT SYSTEM

System Diagram

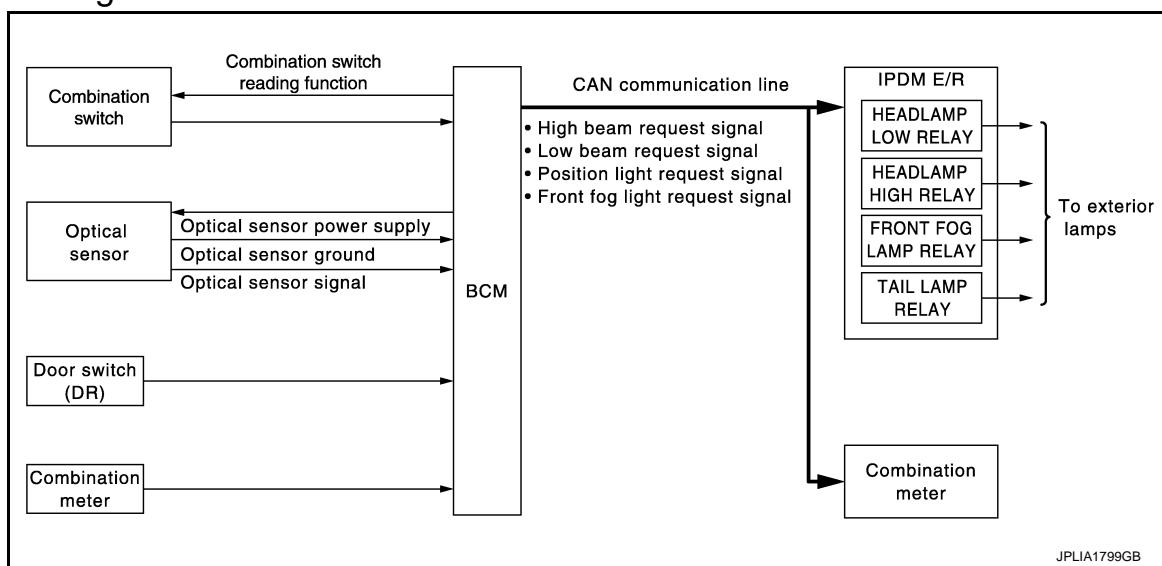

System Description

INFOID:000000006504333

OUTLINE

- Auto light system is controlled by each function of BCM and IPDM E/R.

Control by BCM

- Combination switch reading function
- Headlamp control function
- Auto light function
- Delay timer function
- Wiper linked auto lighting function

Control by IPDM E/R

- Relay control function
- Auto light system has the auto light function (with twilight lighting function^{*1}), wiper linked auto lighting function and delay timer function.

^{*1}:For USA only

- Auto light function automatically turns ON/OFF the exterior lamps^{*2} and each illumination automatically, depending on the outside brightness.
- Wiper linked auto lighting function automatically turns ON/OFF the exterior lamps* and each illumination when the light switch is in the AUTO position, according to a front wiper operation.
- When auto light system turns the exterior lamps ON with the ignition switch OFF, delay timer function turns the exterior lamps OFF, depending on the vehicle condition with the auto light function after a certain period of time.

^{*2}: Headlamp (LO/HI), parking lamp (illuminated as front side marker lamps too), tail lamp, rear side marker lamp and front fog lamp (Headlamp HI and front fog lamp depend on the combination switch condition.)

NOTE:

The settings of the twilight lighting function and the wiper linked auto lighting function can be changed with CONSULT-III. Refer to [EXL-23, "HEADLAMP : CONSULT-III Function \(BCM - HEAD LAMP\)"](#).

AUTO LIGHT FUNCTION (WITH TWILIGHT LIGHTING FUNCTION)

Description

- BCM detects the combination switch condition with the combination switch reading function.
- BCM supplies voltage to the optical sensor when the ignition switch is turned ON or ACC.
- Optical sensor converts outside brightness (lux) to voltage and transmits the optical sensor signal to BCM.
- BCM detects outside brightness from the optical sensor signal and judges ON/OFF condition of the exterior lamp and each illumination, depending on the outside brightness condition (standard or twilight).

AUTO LIGHT SYSTEM

< SYSTEM DESCRIPTION >

- BCM transmits each request signal to IPDM E/R via CAN communication, according to ON/OFF condition by the auto light function.

NOTE:

As to ON/OFF timing, the sensitivity depends on settings. The settings can be changed with CONSULT-III. Refer to [EXL-23, "HEADLAMP : CONSULT-III Function \(BCM - HEAD LAMP\)".](#)

Auto Lighting Timing Table

When the light switch is in AUTO position and the ignition switch is ON, the exterior lamps turns ON/OFF in the following condition.

Exterior lamps	Standard Light ON (Sudden increase/decrease in brightness)	Twilight Light ON (Gradual increase/decrease in brightness)
ON	Outside brightness is 1250 lx or less for 3 seconds or more.	Filtered brightness is 3000 lx or less
OFF	Outside brightness is 2500 lx or more for 5 seconds or more.	Filtered brightness is 5000 lx or more

Standard Light ON


BCM turns exterior lamps ON when outside brightness obtained from the optical sensor signal is 1250 lx or less for 3 seconds or more. And BCM turns exterior lamp OFF when outside brightness from the optical sensor signal is 2500 lx or more for 5 seconds or more.

Twilight Light ON (Twilight Lighting Function)

BCM detects twilight by filtered brightness.

- BCM filters outside brightness to block the impact of the rapid change in brightness, based on the optical sensor signal, and judges outside brightness.
- BCM detects changes in outside brightness, based on outside brightness obtained from the optical sensor signal and filtered brightness and judges ON/OFF of the exterior lamps.

Filtering chart

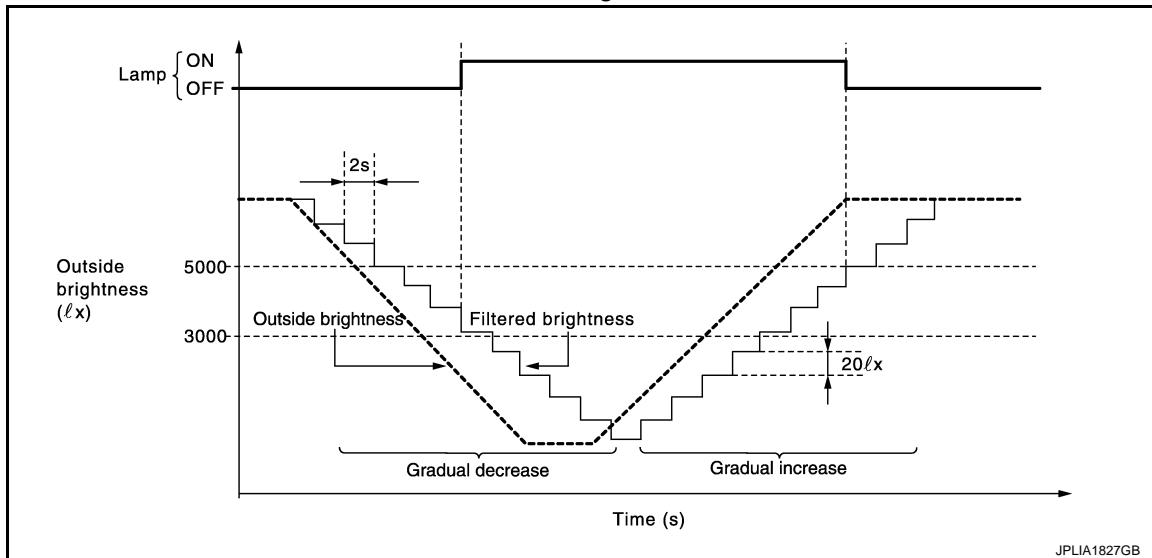

- BCM starts filtering 0.3 seconds after the ignition switch is turned ON and the light switch is turned to AUTO.
- BCM filters signals from the optical sensor at intervals of 2 seconds. When the filtered brightness is higher than outside brightness (signal from the optical sensor), BCM decreases the filtered brightness by 20 lx*. When the filtered brightness is lower than outside brightness, BCM increases the filtered brightness by 20 lx*.
- BCM turns ON the exterior lamps when filtered brightness reaches 3000 lx and turns OFF when reaching 5000 lx.

*:When vehicle speed is 5 km/h or less, BCM decreases/increases the filtered brightness by 5 lx.

WIPER LINKED AUTO LIGHTING FUNCTION

BCM turns the exterior lamp ON when detecting 4 operations of the front wiper with the light switch in AUTO position.

NOTE:

BCM turns OFF the headlamps 3 seconds after the front wiper switch is turned from HI⇒OFF.

AUTO LIGHT SYSTEM

< SYSTEM DESCRIPTION >

DELAY TIMER FUNCTION

BCM turns the exterior lamp OFF depending on the vehicle condition with the auto light function when the ignition switch is turned OFF.

- Turns the exterior lamp OFF 5 minutes after detecting that any door opens (Door switch ON).
- Turns the exterior lamp OFF a certain period of time* after closing all doors (Door switch ON→OFF).
- Turns the exterior lamp OFF with the ignition switch ACC or the light switch OFF.


*: The preset time is 45 seconds. The timer operating time can be set by CONSULT-III. Refer to [EXL-23, "HEADLAMP : CONSULT-III Function \(BCM - HEAD LAMP\)".](#)

NOTE:

When any position other than the light switch AUTO is set, the auto light system function switches to the exterior lamp battery saver function.

Component Parts Location

INFOID:000000006504334

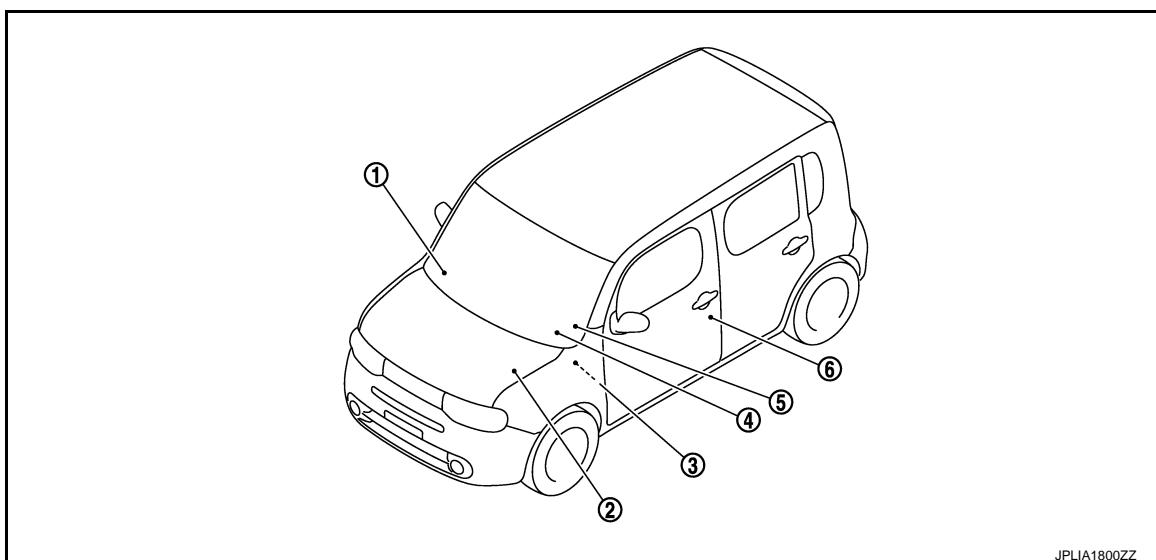

1. Optical sensor
2. IPDM E/R
Refer to [PCS-6, "Component Parts Location".](#)
3. BCM
Refer to [BCS-9, "Component Parts Location".](#)
4. Combination meter
5. Combination switch
6. Door switch

Component Description

INFOID:000000006504335

EXL

Part	Description
BCM	<ul style="list-style-type: none">• Detects each switch condition by the combination switch reading function.• Judges the outside brightness from the optical sensor signal.• Judges the OFF timing according to the vehicle condition.• Judges the ON/OFF status of the exterior lamp and each illumination according to the outside brightness and the vehicle condition.- Requests ON/OFF of each relay to IPDM E/R (with CAN communication).
IPDM E/R	Controls the integrated relay, and supplies voltage to the load according to the request from BCM (with CAN communication).
Combination switch (Lighting & turn signal switch)	Refer to BCS-10, "System Diagram".
Optical sensor	Refer to EXL-64, "Description".


FRONT FOG LAMP SYSTEM

< SYSTEM DESCRIPTION >

FRONT FOG LAMP SYSTEM

System Diagram

INFOID:0000000006504336

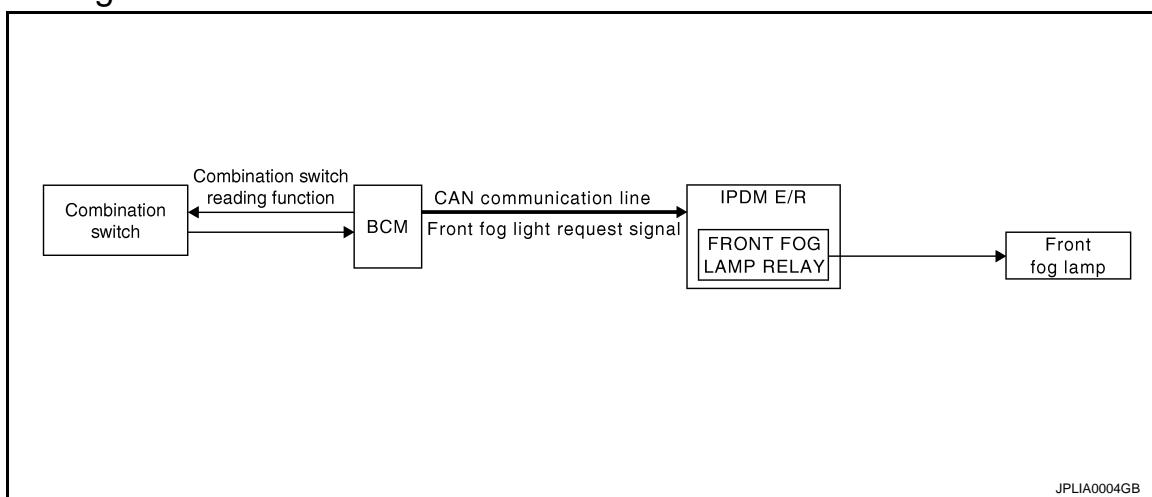

JPLIA0004GB

System Description

INFOID:0000000006504337

OUTLINE

Front fog lamp is controlled by combination switch reading function and front fog lamp control function of BCM, and relay control function of IPDM E/R.

FRONT FOG LAMP OPERATION


- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the front fog lights request signal to IPDM E/R with CAN communication according to the front fog lamp ON condition.

Front fog lamp ON condition

- Front fog lamp switch ON with headlamp ON (except for the high beam ON)
- IPDM E/R turns the integrated front fog lamp relay ON, and turns the front fog lamp ON according to the front fog lights request signal.

Component Parts Location

INFOID:0000000006504338

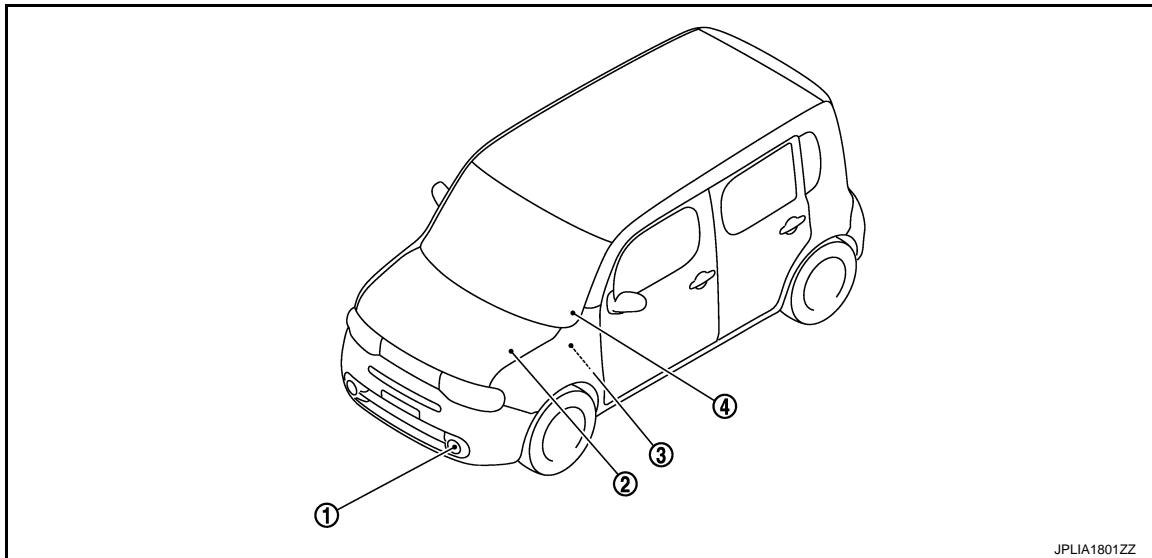

JPLIA1801ZZ

FRONT FOG LAMP SYSTEM

< SYSTEM DESCRIPTION >

1. Front fog lamp
2. IPDM E/R
Refer to [PCS-6, "Component Parts Location"](#).
3. BCM
Refer to [BCS-9, "Component Parts Location"](#).
4. Combination switch

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

Component Description

INFOID:0000000006504339

Part	Description
BCM	<ul style="list-style-type: none">• Detects each switch condition by the combination switch reading function.• Judges the front fog lamp ON/OFF status according to the vehicle condition.- Requests the front fog lamp relay ON to IPDM E/R (with CAN communication).
IPDM E/R	Controls the integrated relay and supplies voltage to the load according to the request from BCM (with CAN communication).
Combination switch (Lighting & turn signal switch)	Refer to BCS-10, "System Diagram" .


TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

< SYSTEM DESCRIPTION >

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

System Diagram

INFOID:0000000006504340

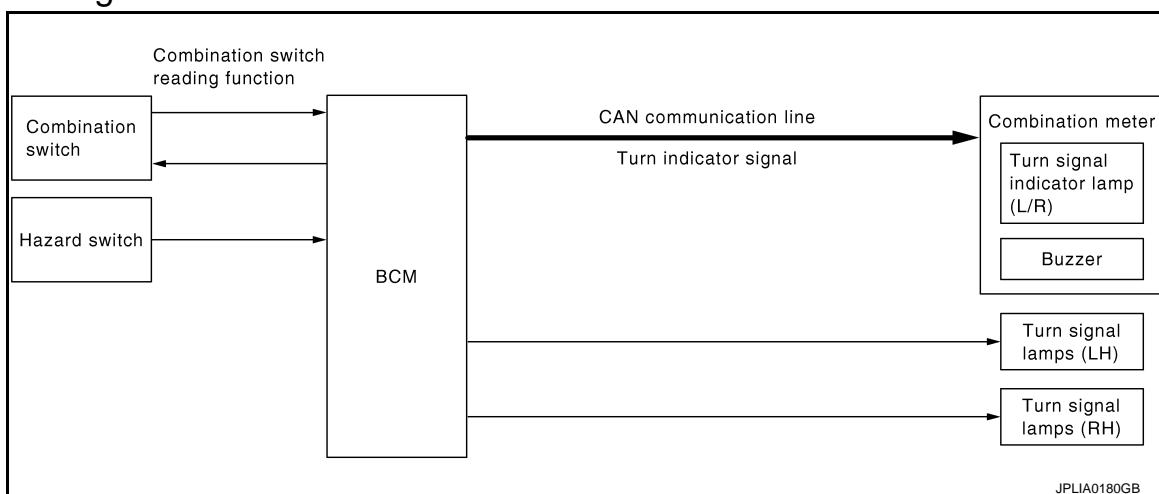

System Description

INFOID:0000000006504341

OUTLINE

Turn signal lamp and the hazard warning lamp is controlled by combination switch reading function and the flasher control function of BCM.

TURN SIGNAL LAMP OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM supplies voltage to the right (left) turn signal lamp circuit when the ignition switch is turned ON and the turn signal switch is in the right (left) position. BCM blinks the turn signal lamp.

HAZARD WARNING LAMP OPERATION

BCM supplies voltage to both turn signal lamp circuit when the hazard switch is turned ON. BCM blinks the hazard warning lamp.

TURN SIGNAL INDICATOR LAMP AND TURN SIGNAL OPERATION

- BCM transmits the turn signal indicator lamp signal to the combination meter with CAN communication while the turn signal lamp and the hazard warning lamp are operating.
- Combination meter outputs the turn signal sound with the integrated buzzer while blinking the turn signal indicator lamp according to the turn signal indicator lamp signal.

HIGH FLASHER OPERATION

- BCM detects the turn signal lamp circuit status from the terminal voltage.
- BCM increases the turn signal lamp blinking speed if the bulb or harness open is detected with the turn signal lamp operating.

NOTE:


The blinking speed is normal while operating the hazard warning lamp.

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000006504342

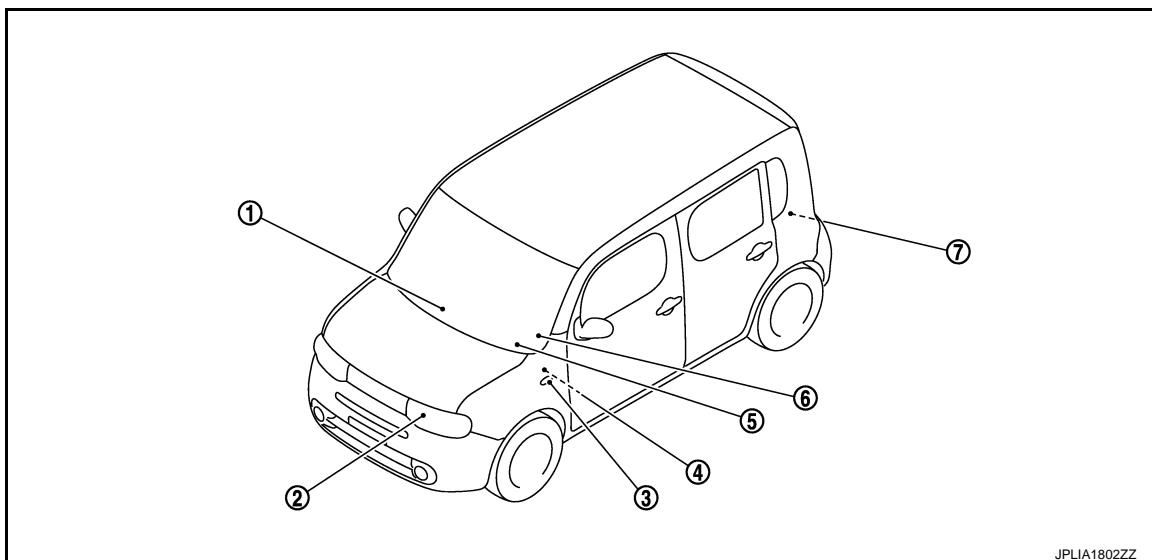

1. Hazard switch
2. Front turn signal lamp
3. Side turn signal lamp
4. BCM
Refer to [BCS-9, "Component Parts Location"](#).
5. Combination meter
(Turn signal indicator lamp)
6. Combination switch
7. Rear turn signal lamp

Component Description

INFOID:000000006504343

Part	Description
BCM	<ul style="list-style-type: none">• Detects each switch condition by the combination switch reading function.• Judges the blinks of the turn signal lamp and the hazard warning lamp from each switch status. The applicable turn signal lamp blinks.• Requests the turn signal indicator lamp blink to the combination meter (with CAN communication).
Combination switch (Lighting & turn signal switch)	Refer to BCS-10, "System Diagram" .
Hazard switch	Inputs the hazard switch ON/OFF signal to BCM.
Combination meter (Turn signal indicator lamp & buzzer)	Blinks the turn signal indicator lamp and outputs the turn signal operating sound with integrated buzzer according to the request from BCM (with CAN communication).


PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS SYSTEM

< SYSTEM DESCRIPTION >

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS SYSTEM

System Diagram

INFOID:0000000006504344

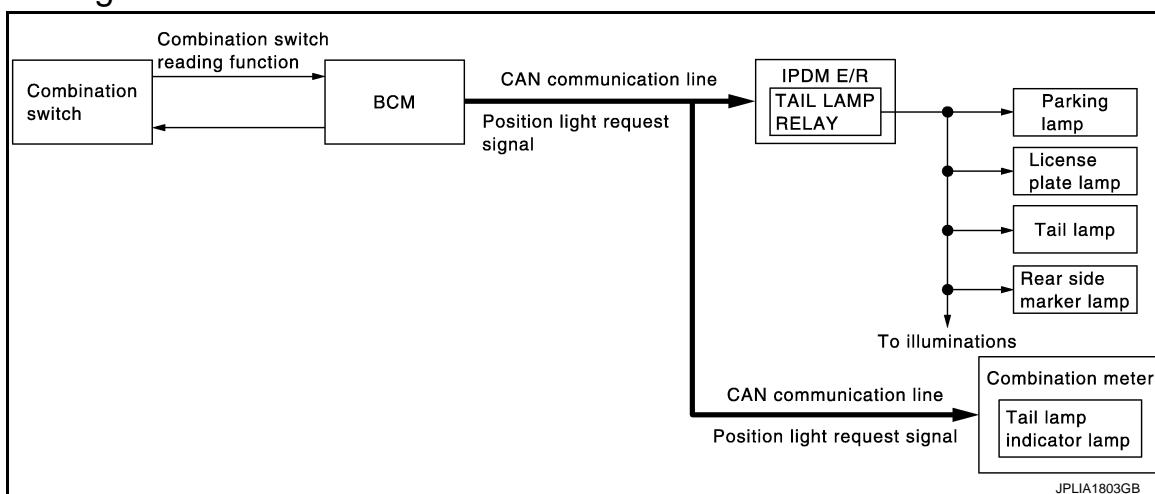

JPLIA1803GB

System Description

INFOID:0000000006504345

OUTLINE

Parking*, license plate, tail and rear side marker lamps are controlled by combination switch reading function and headlamp control function of BCM, and relay control function of IPDM E/R.

*: Illuminated as front side marker lamps too.

PARKING, LICENSE PLATE, TAIL AND REAR SIDE MARKER LAMPS OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the position light request signal to IPDM E/R and the combination meter with CAN communication according to the ON/OFF condition of the parking, license plate, tail and rear side marker lamps.

Parking, license plate, tail and rear side marker lamps ON condition


- Lighting switch 1ST
- Lighting switch 2ND
- Lighting switch AUTO, and the auto light function ON judgment (with auto light system)
- IPDM E/R turns the integrated tail lamp relay ON and turns the parking lamp, the license plate, tail and rear side marker lamps ON according to the position light request signal.
- Combination meter turns the tail lamp indicator lamp ON according to the position light request signal.

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000006504346

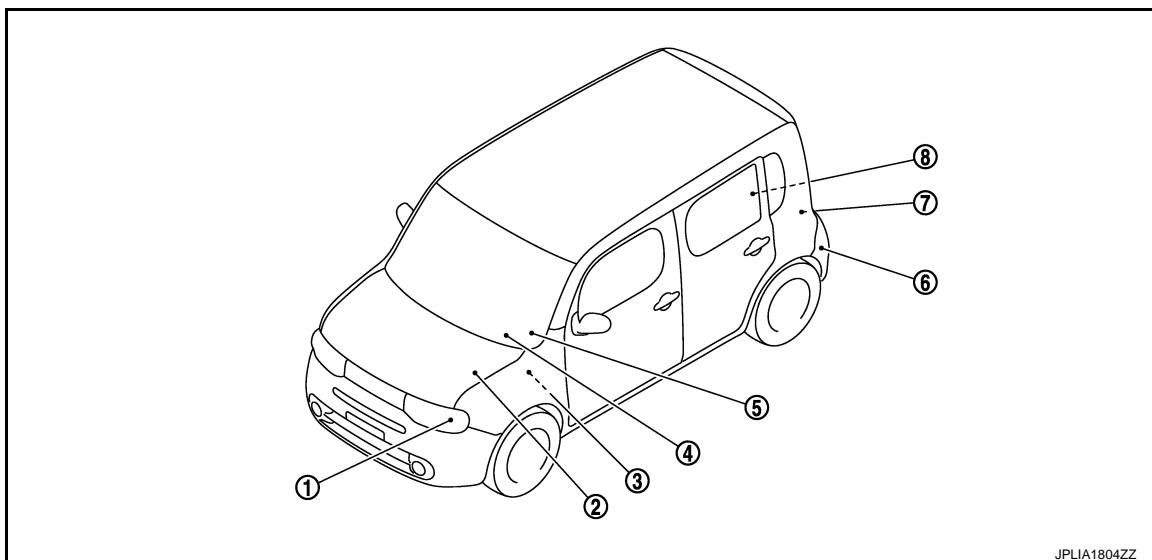

1. Parking lamp
(Front side marker lamp)
2. IPDM E/R
Refer to [PCS-6, "Component Parts Location"](#).
3. BCM
Refer to [BCS-9, "Component Parts Location"](#).
4. Combination meter
(Tail lamp indicator lamp)
5. Combination switch
6. Rear side marker lamp
7. Tail lamp
8. License plate lamp

Component Description

INFOID:000000006504347

Part	Description
BCM	<ul style="list-style-type: none">• Detects each switch condition by the combination switch reading function.• Judges the ON/OFF status of the parking, license plate, tail and rear side marker lamps according to the vehicle condition.- Requests the tail lamp relay ON to IPDM E/R (with CAN communication).- Requests the tail lamp indicator lamp ON to the combination meter (with CAN communication).
IPDM E/R	Controls the integrated relay and supplies voltage to the load according to the request from BCM (with CAN communication).
Combination switch (Lighting & turn signal switch)	Refer to BCS-10, "System Diagram" .
Combination meter (Tail lamp indicator lamp)	Turns the tail lamp indicator lamp ON according to the request from BCM (with CAN communication).

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

EXTERIOR LAMP BATTERY SAVER SYSTEM


< SYSTEM DESCRIPTION >

EXTERIOR LAMP BATTERY SAVER SYSTEM


System Diagram

INFOID:0000000006504348

WITH INTELLIGENT KEY

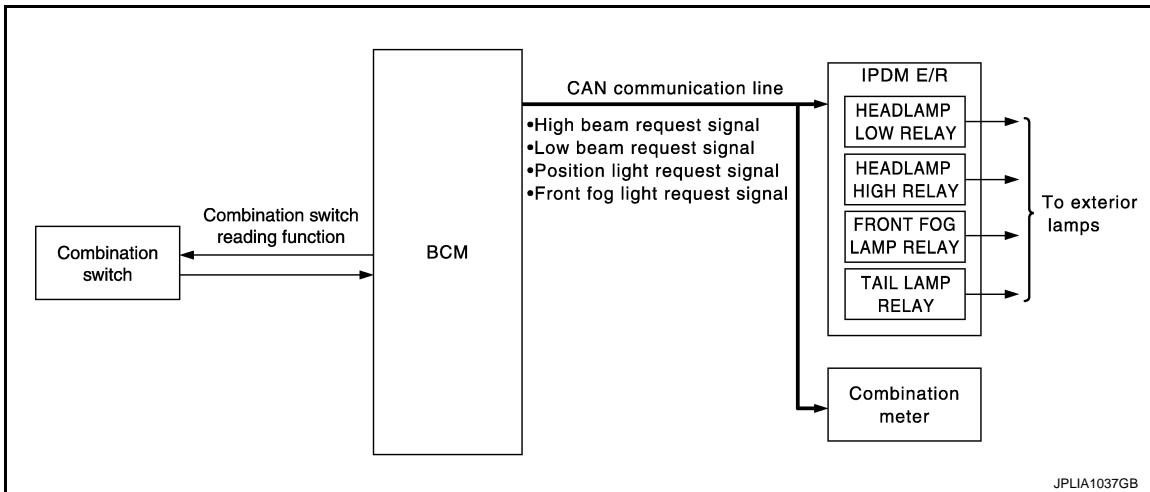

WITHOUT INTELLIGENT KEY

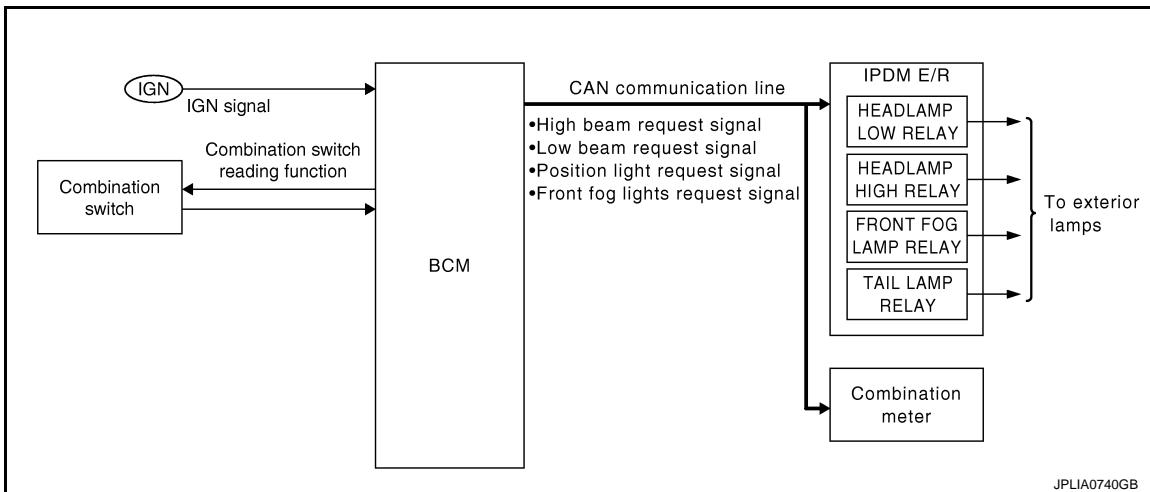

System Description

INFOID:0000000006504349

OUTLINE

- Exterior lamp battery saver system is controlled by each function of BCM and IPDM E/R.

Control by BCM

- Combination switch reading function
- Headlamp control function
- Exterior lamp battery saver function

Control by IPDM E/R

- Relay control function
- BCM turns the exterior lamp* OFF after a period of time to prevent the battery from over-discharge when the ignition switch is turned OFF with the exterior lamp ON.

*: Headlamp (LO/HI), parking(front side marker) lamp, tail lamp, license plate lamp, rear side marker lamp and front fog lamp

EXTERIOR LAMP BATTERY SAVER ACTIVATION

BCM activates the timer and turns the exterior lamp OFF 5 minutes after the ignition switch is turned from ON → OFF with the exterior lamps ON.

NOTE:


EXTERIOR LAMP BATTERY SAVER SYSTEM

< SYSTEM DESCRIPTION >

- Headlamp control function turns the exterior lamps ON normally when the ignition switch is turned ACC or the engine started (both before and after the exterior lamp battery saver is turned OFF).
- The timer starts at the time that the lighting switch is turned from OFF → 1ST or 2ND with the exterior lamp OFF.

Component Parts Location

INFOID:000000006504350

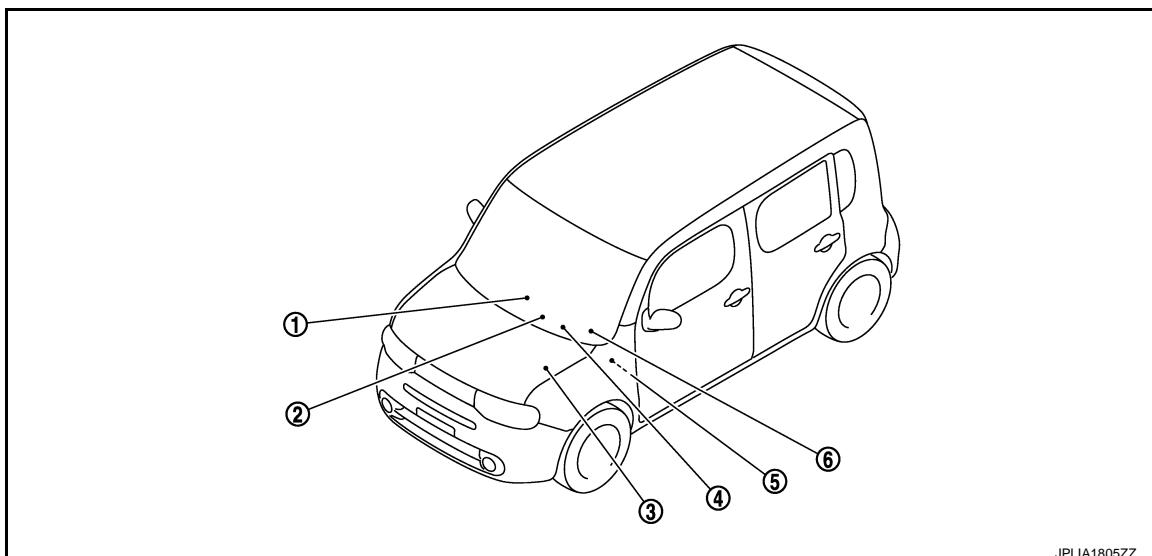

1. Push switch
(With Intelligent Key)
2. Key switch
(Without Intelligent Key)
3. IPDM E/R
Refer to [PCS-6, "Component Parts Location"](#).
4. Combination meter
5. BCM
Refer to [BCS-9, "Component Parts Location"](#).
6. Combination switch

Component Description

INFOID:000000006504351

Part	Description
BCM	<ul style="list-style-type: none">• Detects each switch condition by the combination switch reading function.• Activates the battery saver to turn the exterior lamps OFF according to the vehicle condition.- Requests each relay OFF to IPDM E/R (with CAN communication).
IPDM E/R	Controls the integrated relay according to the request from BCM (with CAN communication).
Combination switch (Lighting & turn signal switch)	Refer to BCS-10, "System Diagram" .

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM) COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000006504352

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none">• Read and save the vehicle specification.• Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

x: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	x	x	x
Rear window defogger	REAR DEFOGGER		x	x
Warning chime	BUZZER		x	x
Interior room lamp timer	INT LAMP	x	x	x
Exterior lamp	HEAD LAMP	x	x	x
Wiper and washer	WIPER	x	x	x
Turn signal and hazard warning lamps	FLASHER	x	x	x
Automatic air conditioner	AIR CONDITIONER		x	x
• Intelligent Key system • Engine start system	INTELLIGENT KEY	x	x	x
Combination switch	COMB SW		x	
Body control system	BCM	x		
NVIS - NATS	IMMU	x	x	x
Interior room lamp battery saver	BATTERY SAVER	x	x	x
Back door	TRUNK		x	
Vehicle security system	THEFT ALM	x	x	x
RAP system	RETAINED PWR		x	
Signal buffer system	SIGNAL BUFFER		x	x
TPMS	TPMS (AIR PRESSURE MONITOR)	x	x	x

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT-III.

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected
Vehicle Condition	SLEEP>LOCK	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK")
	SLEEP>OFF	While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)
	LOCK>ACC	While turning power supply position from "LOCK" to "ACC"
	ACC>ON	While turning power supply position from "ACC" to "IGN"
	RUN>ACC	While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)
	CRANK>RUN	While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)
	RUN>URGENT	While turning power supply position from "RUN" to "ACC" (Emergency stop operation)
	ACC>OFF	While turning power supply position from "ACC" to "OFF"
	OFF>LOCK	While turning power supply position from "OFF" to "LOCK"
	OFF>ACC	While turning power supply position from "OFF" to "ACC"
	ON>CRANK	While turning power supply position from "IGN" to "CRANKING"
	OFF>SLEEP	While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode
	LOCK>SLEEP	While turning BCM status from normal mode (Power supply position is "LOCK".) to low power consumption mode
	LOCK	Power supply position is "LOCK" (Ignition switch OFF with steering is locked.)
	OFF	Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.)
	ACC	Power supply position is "ACC" (Ignition switch ACC)
	ON	Power supply position is "IGN" (Ignition switch ON with engine stopped)
	ENGINE RUN	Power supply position is "RUN" (Ignition switch ON with engine running)
	CRANKING	Power supply position is "CRANKING" (At engine cranking)
IGN Counter	0 - 39	<p>The number of times that ignition switch is turned ON after DTC is detected</p> <ul style="list-style-type: none"> • The number is 0 when a malfunction is detected now. • The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. • The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

HEADLAMP

HEADLAMP : CONSULT-III Function (BCM - HEAD LAMP)

INFOID:0000000006504353

WORK SUPPORT

For USA

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

Service item	Setting item	Setting
AUTO LIGHT LOGIC SET	MODE 1*	With twilight ON custom & with wiper INT, LO and HI
	MODE 2	With twilight ON custom & with wiper LO and HI
	MODE 3	With twilight ON custom & without
	MODE 4	Without twilight ON custom & with wiper INT, LO and HI
	MODE 5	Without twilight ON custom & with wiper LO and HI
	MODE 6	Without twilight ON custom & without
CUSTOM A/LIGHT SETTING	MODE 1*	Normal
	MODE 2	More sensitive setting than normal setting (Turns ON earlier than normal operation.)
	MODE 3	More sensitive setting than MODE 2 (Turns ON earlier than MODE 2.)
	MODE 4	Without twilight ON custom & less sensitive setting than normal setting (Turns ON later than normal operation.)
BATTERY SAVER SET	On*	With the exterior lamp battery saver function
	Off	Without the exterior lamp battery saver function
ILL DELAY SET	MODE 1*	45 sec.
	MODE 2	Without the function
	MODE 3	30 sec.
	MODE 4	60 sec.
	MODE 5	90 sec.
	MODE 6	120 sec.
	MODE 7	150 sec.
	MODE 8	180 sec.

*: Factory setting

For CANADA

Service item	Setting item	Setting
AUTO LIGHT LOGIC SET	MODE 1	NOTE: The item is indicated, but not operated.
	MODE 2	
	MODE 3	
	MODE 4	
	MODE 5	
	MODE 6	
CUSTOM A/LIGHT SETTING	MODE 1*	Normal
	MODE 2	More sensitive setting than normal setting (Turns ON earlier than normal operation.)
	MODE 3	More sensitive setting than MODE 2 (Turns ON earlier than MODE 2.)
	MODE 4	Less sensitive setting than normal setting (Turns ON later than normal operation.)
BATTERY SAVER SET	On*	With the exterior lamp battery saver function
	Off	Without the exterior lamp battery saver function

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

Service item	Setting item	Setting
ILL DELAY SET	MODE 1*	45 sec.
	MODE 2	Without the function
	MODE 3	30 sec.
	MODE 4	60 sec.
	MODE 5	90 sec.
	MODE 6	120 sec.
	MODE 7	150 sec.
	MODE 8	180 sec.

*: Factory setting

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

DATA MONITOR

Monitor item [Unit]	Description
PUSH SW [On/Off]	The switch status input from push-button ignition switch
ENGINE STATE [Stop/Stall/Crank/Run]	The engine status received from ECM with CAN communication
VEH SPEED 1 [km/h]	The value of the vehicle speed received from combination meter with CAN communication
HI BEAM SW [On/Off]	Each switch status that BCM judges from the combination switch reading function
HEAD LAMP SW1 [On/Off]	
HEAD LAMP SW2 [On/Off]	
LIGHT SW 1ST [On/Off]	
PASSING SW [On/Off]	
FR FOG SW [On/Off]	
AUTO LIGHT SW [On/Off]	
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH
DOOR SW- RL [On/Off]	The switch status input from rear door switch LH
BACK DOOR SW [On/Off]	The switch status input from back door switch
TURN SIGNAL R [On/Off]	Each switch status that BCM judges from the combination switch reading function
TURN SIGNAL L [On/Off]	
TAIL LAMP SW [On/Off]	

EXL

M

N

O

P

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

Monitor item [Unit]	Description
OPTICAL SENSOR [On/Off]	The sensor status input from optical sensor
OPTI SEN (DTCT) [V]	The value of outside brightness voltage input from the optical sensor
OPTI SEN (FILT) [V]	The value of outside brightness voltage filtered by BCM

ACTIVE TEST

Test item	Operation	Description
TAIL LAMP	On	Transmits the position light request signal to IPDM E/R with CAN communication to turn the tail lamp ON.
	Off	Stops the tail lamp request signal transmission.
HEAD LAMP	Hi	Transmits the high beam request signal with CAN communication to turn the headlamp (HI).
	Lo	Transmits the low beam request signal with CAN communication to turn the headlamp (LO).
	Off	Stops the high & low beam request signal transmission.
FR FOG LAMP	On	Transmits the front fog lights request signal to IPDM E/R with CAN communication to turn the front fog lamp ON.
	Off	Stops the front fog lights request signal transmission.
ILL DIM SIGNAL	On	NOTE:
	Off	The item is indicated, but cannot be tested.

FLASHER

FLASHER : CONSULT-III Function (BCM - FLASHER)

INFOID:0000000006504354

WORK SUPPORT

Service item	Setting item	Setting
HAZARD ANSWER BACK	Lock Only	With locking only
	Unlk Only	With unlocking only
	Lock/Unlk*	With locking/unlocking
	Off	Without the function

*: Factory setting

DATA MONITOR

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	The switch status input from the request switch (driver side)
REQ SW-AS [On/Off]	The switch status input from the request switch (passenger side)
PUSH SW [On/Off]	The switch status input from the push-button ignition switch
TURN SIGNAL R [On/Off]	Each switch status that BCM detects from the combination switch reading function
TURN SIGNAL L [On/Off]	

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

Monitor item [Unit]	Description
HAZARD SW [On/Off]	The switch status input from the hazard switch
RKE-LOCK [On/Off]	Lock signal status received from the remote keyless entry receiver
RKE-UNLOCK [On/Off]	Unlock signal status received from the remote keyless entry receiver
RKE-PANIC [On/Off]	Panic alarm signal status received from the remote keyless entry receiver

ACTIVE TEST

Test item	Operation	Description
FLASHER	RH	Outputs the voltage to blink the right side turn signal lamps.
	LH	Outputs the voltage to blink the left side turn signal lamps.
	Off	Stops the voltage to turn the turn signal lamps OFF.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM) COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000006504355

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none">• Read and save the vehicle specification.• Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

x: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	x	x	x
Rear window defogger	REAR DEFOGGER		x	x
Warning chime	BUZZER		x	x
Interior room lamp control	INT LAMP	x	x	x
Remote keyless entry system	MULTI REMOTE ENT	x	x	x
Exterior lamp	HEAD LAMP	x	x	x
Wiper and washer	WIPER	x	x	x
Turn signal and hazard warning lamps	FLASHER		x	x
• Automatic air conditioner • Manual air conditioner	AIR CONDITIONER		x	x
Combination switch	COMB SW		x	
Body control system	BCM	x		
NVIS - NATS	IMMU	x	x	x
Interior room lamp battery saver	BATTERY SAVER	x	x	x
Back door	TRUNK		x	
Vehicle security system	THEFT ALM	x	x	x
RAP system	RETAINED PWR		x	x
Signal buffer system	SIGNAL BUFFER		x	x
TPMS	TPMS (AIR PRESSURE MONITOR)	x	x	x
Panic alarm system	PANIC ALARM			x

HEADLAMP

DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

HEADLAMP : CONSULT-III Function (BCM - HEAD LAMP)

INFOID:000000006504356

WORK SUPPORT

For USA

Service item	Setting item	Setting
AUTO LIGHT LOGIC SET	MODE 1*	With twilight ON custom & with wiper INT, LO and HI
	MODE 2	With twilight ON custom & with wiper LO and HI
	MODE 3	With twilight ON custom & without
	MODE 4	Without twilight ON custom & with wiper INT, LO and HI
	MODE 5	Without twilight ON custom & with wiper LO and HI
	MODE 6	Without twilight ON custom & without
BATTERY SAVER SET	On*	With the exterior lamp battery saver function
	Off	Without the exterior lamp battery saver function
ILL DELAY SET	MODE 1*	45 sec.
	MODE 2	Without the function
	MODE 3	30 sec.
	MODE 4	60 sec.
	MODE 5	90 sec.
	MODE 6	120 sec.
	MODE 7	150 sec.
	MODE 8	180 sec.

*: Factory setting

For CANADA

Service item	Setting item	Setting
AUTO LIGHT LOGIC SET	MODE 1	NOTE: The item is indicated, but not operated.
	MODE 2	
	MODE 3	
	MODE 4	
	MODE 5	
	MODE 6	
BATTERY SAVER SET	On*	With the exterior lamp battery saver function
	Off	Without the exterior lamp battery saver function
ILL DELAY SET	MODE 1*	45 sec.
	MODE 2	Without the function
	MODE 3	30 sec.
	MODE 4	60 sec.
	MODE 5	90 sec.
	MODE 6	120 sec.
	MODE 7	150 sec.
	MODE 8	180 sec.

*: Factory setting

DATA MONITOR

DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

Monitor item [Unit]	Description
IGN ON SW [On/Off]	Ignition switch (ON) status judged from IGN signal (ignition power supply)
ACC SW [On/Off]	Ignition switch (ACC) status judged from ACC signal (ACC power supply)
VEH SPEED [km/h]	The value of the vehicle speed received from combination meter with CAN communication
HI BEAM SW [On/Off]	Each switch status that BCM judges from the combination switch reading function
HEAD LAMP SW1 [On/Off]	
HEAD LAMP SW2 [On/Off]	
PASSING SW [On/Off]	
FR FOG SW [On/Off]	
AUTO LIGHT SW [On/Off]	
RR FOG SW [On/Off]	NOTE: The item is indicated, but not monitored
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH
DOOR SW- RL [On/Off]	The switch status input from rear door switch LH
BACK DOOR SW [On/Off]	The switch status input from back door switch
TURN SIGNAL R [On/Off]	Each switch status that BCM judges from the combination switch reading function
TURN SIGNAL L [On/Off]	
TAIL LAMP SW [On/Off]	
KEY ON SW [On/Off]	The switch status input from key on switch
KEYLESS LOCK [On/Off]	Lock signal status received from remote keyless entry receiver (integrated in the BCM)
PKB SW [On/Off]	The parking brake switch status received from combination meter with CAN communication
ENGINE RUN [On/Off]	The engine status received from ECM with CAN communication
LIG SEN COND [On/Off]	The sensor condition received from light sensor
OPTI SEN (DTCT) [V]	The value of outside brightness voltage input from the optical sensor
OPTI SEN (FILT) [V]	The value of outside brightness voltage filtered by BCM

ACTIVE TEST

DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

Test item	Operation	Description
TAIL LAMP	On	Transmits the position light request signal to IPDM E/R with CAN communication to turn the tail lamp ON.
	Off	Stops the tail lamp request signal transmission.
HEAD LAMP	Hi	Transmits the high beam request signal with CAN communication to turn the headlamp (HI).
	Lo	Transmits the low beam request signal with CAN communication to turn the headlamp (LO).
	Off	Stops the high & low beam request signal transmission.
FR FOG LAMP	On	Transmits the front fog lights request signal to IPDM E/R with CAN communication to turn the front fog lamp ON.
	Off	Stops the front fog lights request signal transmission.
ILL DIM SIGNAL	On	NOTE: The item is indicated, but cannot be tested.
	Off	

FLASHER

FLASHER : CONSULT-III Function (BCM - FLASHER)

INFOID:0000000006504357

DATA MONITOR

Monitor item [Unit]	Description
IGN ON SW [On/Off]	Ignition switch (ON) status judged from IGN signal (ignition power supply)
TURN SIGNAL R [On/Off]	Each switch status that BCM detects from the combination switch reading function
TURN SIGNAL L [On/Off]	
HAZARD SW [On/Off]	The switch status input from the hazard switch

ACTIVE TEST

Test item	Operation	Description
FLASHER	RH	Outputs the voltage to blink the right side turn signal lamps.
	LH	Outputs the voltage to blink the left side turn signal lamps.
	Off	Stops the voltage to turn the turn signal lamps OFF.

DIAGNOSIS SYSTEM (IPDM E/R) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (IPDM E/R) (WITH INTELLIGENT KEY SYSTEM)

Diagnosis Description

INFOID:000000006504358

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure warning lamp
- Rear window defogger
- Front wiper (LO, HI)
- Parking lamps
- Side marker lamp
- License plate lamps
- Tail lamps
- Front fog lamps
- Headlamps (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan

Operation Procedure

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)
NOTE:
When auto active test is performed with hood opened, sprinkle water on windshield beforehand.
2. Turn the ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the driver door switch 10 times. Then turn the ignition switch OFF.

CAUTION:

Close passenger door.

4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. The oil pressure warning lamp starts blinking when the auto active test starts.
6. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:

When auto active test mode has to be cancelled halfway through test, turn the ignition switch OFF.

CAUTION:

- If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-55, "Component Function Check".](#)
- Do not start the engine.

Inspection in Auto Active Test Mode


When auto active test mode is actuated, the following 6 steps are repeated 3 times.

Operation sequence	Inspection location	Operation
A	Oil pressure warning lamp	Blinks continuously during operation of auto active test
1	Rear window defogger	10 seconds
2	Front wiper	LO for 5 seconds → HI for 5 seconds
3	<ul style="list-style-type: none">• Parking lamps• Side marker lamps• License plate lamps• Tail lamps• Front fog lamps	10 seconds
4	Headlamps	LO for 10 seconds → HI ON ⇔ OFF 5 times
5	A/C compressor (magnet clutch)	ON ⇔ OFF 5 times
6	Cooling fan	LO for 5 seconds → HI for 5 seconds

DIAGNOSIS SYSTEM (IPDM E/R) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

Concept of auto active test

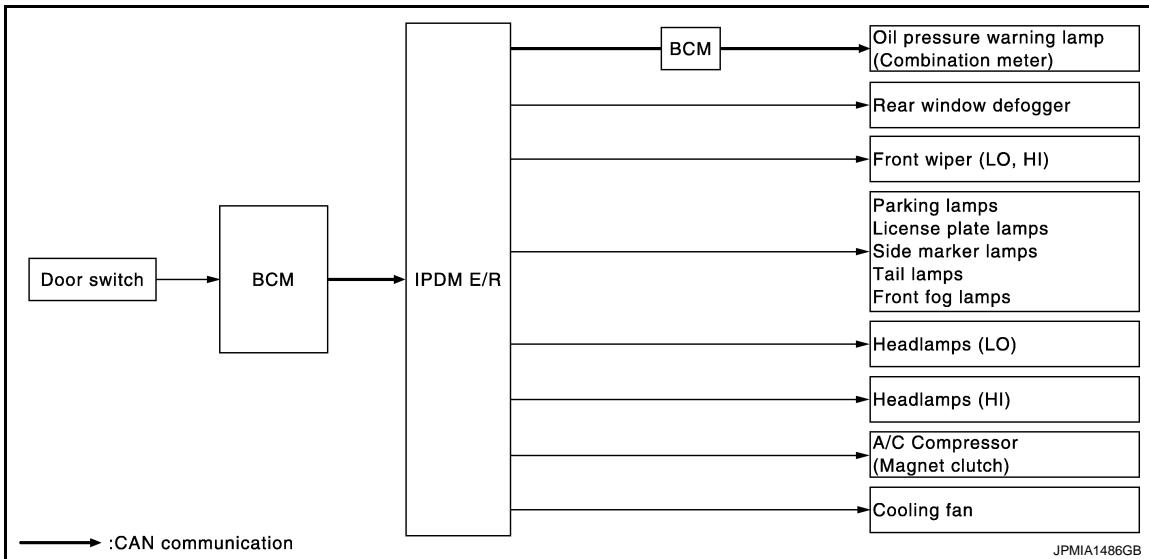

JPMIA1486GB

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause	
Rear window defogger does not operate	Perform auto active test. Does the rear window defogger operate?	YES	BCM signal input circuit
		NO	<ul style="list-style-type: none"> • Rear window defogger • Rear window defogger ground circuit • Harness or connector between IPDM E/R and rear window defogger • IPDM E/R
Any of the following components do not operate <ul style="list-style-type: none">• Parking lamps• Side marker lamps• License plate lamps• Tail lamps• Front fog lamps• Headlamps (HI, LO)• Front wiper (HI, LO)	Perform auto active test. Does the applicable system operate?	YES	BCM signal input circuit
		NO	<ul style="list-style-type: none"> • Lamp or motor • Lamp or motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES	<ul style="list-style-type: none"> • A/C amp. signal input circuit • CAN communication signal between A/C amp. and ECM • CAN communication signal between ECM and IPDM E/R
		NO	<ul style="list-style-type: none"> • Magnet clutch • Harness or connector between IPDM E/R and magnet clutch • IPDM E/R

A
B
C
D
E
F
G
H
I
J
K
L
EXL

M
N
O
P

DIAGNOSIS SYSTEM (IPDM E/R) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

Symptom	Inspection contents	Possible cause
Oil pressure warning lamp does not operate	Perform auto active test. Does the oil pressure warning lamp blink?	YES <ul style="list-style-type: none"> • Harness or connector between IPDM E/R and oil pressure switch • Oil pressure switch • IPDM E/R
		NO <ul style="list-style-type: none"> • CAN communication signal between IPDM E/R and BCM • CAN communication signal between BCM and combination meter • Combination meter
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES <ul style="list-style-type: none"> • ECM signal input circuit • CAN communication signal between ECM and IPDM E/R
		NO <ul style="list-style-type: none"> • Cooling fan motor • Harness or connector between IPDM E/R and cooling fan motor • IPDM E/R

CONSULT-III Function (IPDM E/R)

INFOID:000000006504359

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC RESULT

Refer to [PCS-32, "DTC Index"](#).

DATA MONITOR

Monitor item

Monitor Item [Unit]	MAIN SIG- NALS	Description
MOTOR FAN REQ [1/2/3/4]	×	Displays the value of the cooling fan speed request signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.

DIAGNOSIS SYSTEM (IPDM E/R) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	MAIN SIG- NAL(S)	Description
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the clutch interlock switch (M/T models) or shift position (CVT models) judged by IPDM E/R.
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.
ST/INHI RLY [Off/ ST ON/INHI ON/UNKWN]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.
DETENT SW [Off/On]		Displays the status of the CVT shift selector (detention switch) judged by IPDM E/R.
S/L RLY -REQ [Off/On]		Displays the status of the steering lock relay signal received from BCM via CAN communication.
S/L STATE [LOCK/UNLOCK/UNKWN]		Displays the status of the steering lock judged by IPDM E/R.
DTRL REQ [Off/On]		Displays the status of the daytime running light request signal received from BCM via CAN communication. NOTE: This item is monitored only the vehicle with daytime running light system.
OIL P SW [Open/Close]		Displays the status of the oil pressure switch judged by IPDM E/R.
HOOD SW [Off/On]		NOTE: The item is indicated, but not monitored.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.

ACTIVE TEST

Test item

Test item	Operation	Description
HORN	On	Operates horn relay for 20 ms.
	Off	OFF
FRONT WIPER	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.
MOTOR FAN	1	OFF
	2	Operates the cooling fan relay (LO operation).
	3	Operates the cooling fan relay (HI operation).
	4	

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

DIAGNOSIS SYSTEM (IPDM E/R) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

Test item	Operation	Description
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

DIAGNOSIS SYSTEM (IPDM E/R) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (IPDM E/R) (WITHOUT INTELLIGENT KEY SYSTEM)

Diagnosis Description

INFOID:0000000006504360

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure warning lamp
- Rear window defogger
- Front wiper (LO, HI)
- Parking lamps
- Side marker lamp
- License plate lamps
- Tail lamps
- Front fog lamps
- Headlamps (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan

Operation Procedure

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)

NOTE:

When auto active test is performed with hood opened, sprinkle water on windshield beforehand.

2. Turn the ignition switch OFF.

3. Turn the ignition switch ON, and within 20 seconds, press the driver door switch 10 times. Then turn the ignition switch OFF.

CAUTION:

Close passenger door.

4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.

5. The oil pressure warning lamp starts blinking when the auto active test starts.

6. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:

When auto active test mode has to be cancelled halfway through test, turn the ignition switch OFF.

CAUTION:

- If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-55, "Component Function Check".](#)

- Do not start the engine.

Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 6 steps are repeated 3 times.


Operation sequence	Inspection location	Operation
A	Oil pressure warning lamp	Blinks continuously during operation of auto active test
1	Rear window defogger	10 seconds
2	Front wiper	LO for 5 seconds → HI for 5 seconds
3	<ul style="list-style-type: none">• Parking lamps• Side marker lamps• License plate lamps• Tail lamps• Front fog lamps	10 seconds
4	Headlamps	LO for 10 seconds → HI ON ↔ OFF 5 times

DIAGNOSIS SYSTEM (IPDM E/R) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

Operation sequence	Inspection location	Operation
5	A/C compressor (magnet clutch)	ON ⇄ OFF 5 times
6	Cooling fan	LO for 5 seconds → HI for 5 seconds

Concept of auto active test

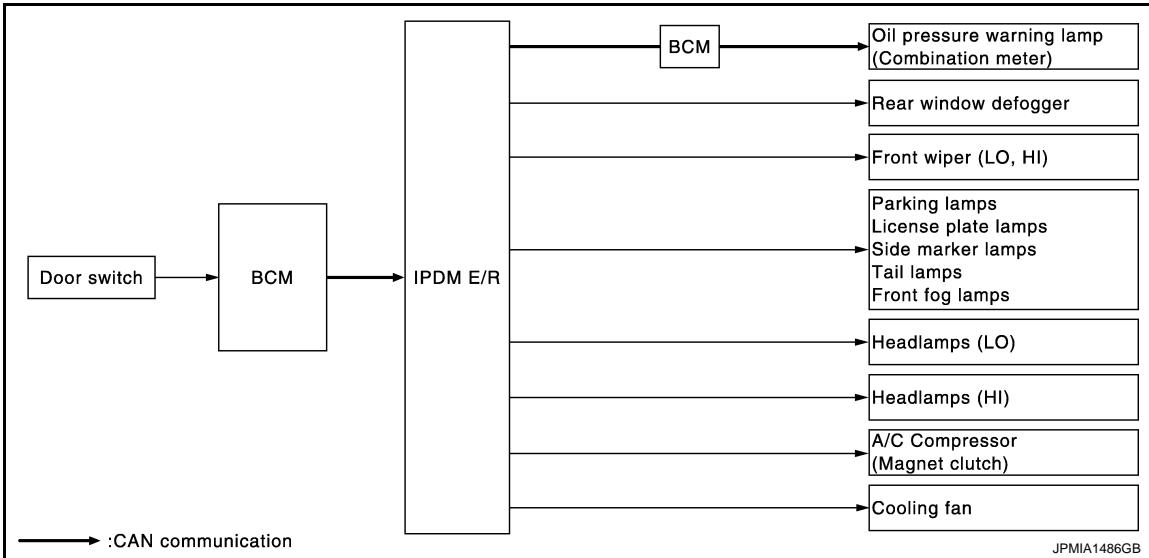

JPMIA1486GB

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Rear window defogger does not operate	Perform auto active test. Does the rear window defogger operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> Rear window defogger Rear window defogger ground circuit Harness or connector between IPDM E/R and rear window defogger IPDM E/R
Any of the following components do not operate <ul style="list-style-type: none"> Parking lamps Side marker lamps License plate lamps Tail lamps Front fog lamps Headlamps (HI, LO) Front wiper (HI, LO) 	Perform auto active test. Does the applicable system operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> Lamp or motor Lamp or motor ground circuit Harness or connector between IPDM E/R and applicable system IPDM E/R
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES <ul style="list-style-type: none"> A/C amp. signal input circuit CAN communication signal between A/C amp. and ECM CAN communication signal between ECM and IPDM E/R
		NO <ul style="list-style-type: none"> Magnet clutch Harness or connector between IPDM E/R and magnet clutch IPDM E/R

DIAGNOSIS SYSTEM (IPDM E/R) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

Symptom	Inspection contents	Possible cause
Oil pressure warning lamp does not operate	Perform auto active test. Does the oil pressure warning lamp blink?	YES <ul style="list-style-type: none"> • Harness or connector between IPDM E/R and oil pressure switch • Oil pressure switch • IPDM E/R
		NO <ul style="list-style-type: none"> • CAN communication signal between IPDM E/R and BCM • CAN communication signal between BCM and combination meter • Combination meter
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES <ul style="list-style-type: none"> • ECM signal input circuit • CAN communication signal between ECM and IPDM E/R
		NO <ul style="list-style-type: none"> • Cooling fan motor • Harness or connector between IPDM E/R and cooling fan motor • IPDM E/R

CONSULT-III Function (IPDM E/R)

INFOID:000000006504361

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC RESULT

Refer to [PCS-62, "DTC Index"](#).

DATA MONITOR

Monitor item

EXL

Monitor Item [Unit]	MAIN SIGNALS	Description
MOTOR FAN REQ [1/2/3/4]	×	Displays the value of the cooling fan speed request signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.

DIAGNOSIS SYSTEM (IPDM E/R) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	MAIN SIG- NAL(S)	Description
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the shift position (CVT models) judged by IPDM E/R.
ST RLY-REQ [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
DTRL REQ [Off/On]		Displays the status of the daytime running light request signal received from BCM via CAN communication. NOTE: This item is monitored only the vehicle with daytime running light system.
OIL P SW [Open/Close]		Displays the status of the oil pressure switch judged by IPDM E/R.
HOOD SW [Off/On]		NOTE: The item is indicated, but not monitored.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.

ACTIVE TEST

Test item

Test item	Operation	Description
HORN	On	Operates horn relay for 20 ms.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.
	1	OFF
MOTOR FAN	2	Operates the cooling fan relay (LO operation).
	3	Operates the cooling fan relay (HI operation).
	4	
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

BCM (BODY CONTROL SYSTEM) (WITH INTELLIGENT KEY SYSTEM)

BCM (BODY CONTROL SYSTEM) (WITH INTELLIGENT KEY SYSTEM) : Diagnosis Procedure

INFOID:000000006504362

1.CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse and fusible link No.
Battery power supply	G
	8

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM	Ground	Battery voltage
Connector		
M70	70	Battery voltage
	57	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Continuity
Connector	Terminal	
M70	67	Existed

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

BCM (BODY CONTROL SYSTEM) (WITHOUT INTELLIGENT KEY SYSTEM)

BCM (BODY CONTROL SYSTEM) (WITHOUT INTELLIGENT KEY SYSTEM) : Diagnosis Procedure

INFOID:000000006504363

1.CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not fusing.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Signal name	Fuses and fusible link No.
Battery power supply	8
	G
ACC power supply	20
Ignition power supply	2

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Ignition switch position			
(+) BCM		(-)	OFF	ACC	ON
Connector	Terminal		Battery voltage	Battery voltage	Battery voltage
M67	70	Ground	Approx. 0 V	Battery voltage	Battery voltage
	57		Approx. 0 V	Battery voltage	Battery voltage
M65	11		Approx. 0 V	Approx. 0 V	Battery voltage
	38		Approx. 0 V	Approx. 0 V	Battery voltage

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		Existed
M67	67		

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

IPDM E/R (WITH INTELLIGENT KEY SYSTEM)

IPDM E/R (WITH INTELLIGENT KEY SYSTEM) : Diagnosis Procedure

INFO ID: 0000000006504364

1.CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

Signal name	Fuses and fusible link No.
Battery power supply	C
	D
	J

Is the fuse fusing?

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.
NO >> GO TO 2.

A

2.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and the ground.

Terminals		Voltage (Approx.)	
		(-)	
IPDM E/R			
Connector	Terminal		
E9	1	Ground	Battery voltage
	2		
E10	8		

Is the measurement value normal?

- YES >> GO TO 3.
NO >> Repair the harness or connector.

B

C

D

E

F

G

H

3.CHECK GROUND CIRCUIT

Check continuity between IPDM E/R harness connectors and the ground.

IPDM E/R		Continuity
Connector	Terminal	
E11	9	
E12	19	Existed

Does continuity exist?

- YES >> INSPECTION END
NO >> Repair the harness or connector.

I

K

IPDM E/R (WITHOUT INTELLIGENT KEY SYSTEM)

IPDM E/R (WITHOUT INTELLIGENT KEY SYSTEM) : Diagnosis Procedure

INFOID:0000000006504365

EXL

1.CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

Signal name	Fuses and fusible link No.
Battery power supply	C
	D
	J

M

N

O

Is the fuse fusing?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.
NO >> GO TO 2.

P

2.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and the ground.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Terminals		Voltage (Approx.)
(+)	(-)	
IPDM E/R		
Connector	Terminal	Ground
E9	1	
	2	
E10	8	Battery voltage

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair the harness or connector.

3.CHECK IGNITION POWER SUPPLY CIRCUIT

1. Turn the ignition switch ON.

2. Check voltage between IPDM E/R harness connector and the ground.

Terminals		Voltage (Approx.)
(+)	(-)	
IPDM E/R		
Connector	Terminal	Ground
E12	18	
		Battery voltage

Is the measurement value normal?

YES >> GO TO 4.

NO >> Repair the harness or connector.

4.CHECK GROUND CIRCUIT

1. Turn the ignition switch OFF.

2. Check continuity between IPDM E/R harness connectors and the ground.

IPDM E/R		Continuity
Connector	Terminal	
E11	9	
E12	19	Existed

Does continuity exist?

YES >> INSPECTION END

NO >> Repair the harness or connector.

EXTERIOR LAMP FUSE

< DTC/CIRCUIT DIAGNOSIS >

EXTERIOR LAMP FUSE

WITHOUT DAYTIME RUNNING LIGHT SYSTEM

WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Description

INFOID:0000000006504366

Fuse list

Unit	Location	Fuse No.	Capacity
Headlamp HI (LH)	IPDM E/R	#52	10 A
Headlamp HI (RH)	IPDM E/R	#51	10 A
Headlamp LO (LH)	IPDM E/R	#53	15 A
Headlamp LO (RH)	IPDM E/R	#54	15 A
Front fog lamp	IPDM E/R	#50	15 A
• Parking lamp (also used as the front side marker lamp) • Tail lamp • Rear side marker lamp • License plate lamp • Each illumination	IPDM E/R	#47	10 A
Stop lamp	FUSE BLOCK (J/B)	#7	10 A
Back-up lamp	IPDM E/R	#55	10 A

WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure

INFOID:0000000006504367

1. CHECK FUSE

Check that the following fuses are not fusing.

Unit	Location	Fuse No.	Capacity
Headlamp HI (LH)	IPDM E/R	#52	10 A
Headlamp HI (RH)	IPDM E/R	#51	10 A
Headlamp LO (LH)	IPDM E/R	#53	15 A
Headlamp LO (RH)	IPDM E/R	#54	15 A
Front fog lamp	IPDM E/R	#50	15 A
• Parking lamp (also used as the front side marker lamp) • Tail lamp • Rear side marker lamp • License plate lamp • Each illumination	IPDM E/R	#47	10 A
Stop lamp	FUSE BLOCK (J/B)	#7	10 A
Back-up lamp	IPDM E/R	#55	10 A

Is the fuse fusing?

YES >> Repair the applicable circuit. And then replace the fuse.

NO >> The fuse is normal.

WITH DAYTIME RUNNING LIGHT SYSTEM

WITH DAYTIME RUNNING LIGHT SYSTEM : Description

INFOID:0000000006504368

Fuse list

Unit	Location	Fuse No.	Capacity
Headlamp HI (LH)	IPDM E/R	#52	10 A
Headlamp HI (RH)	IPDM E/R	#51	10 A

EXTERIOR LAMP FUSE

< DTC/CIRCUIT DIAGNOSIS >

Unit	Location	Fuse No.	Capacity
Headlamp LO (LH)	IPDM E/R	#53	15 A
Headlamp LO (RH)	IPDM E/R	#54	15 A
Front fog lamp	IPDM E/R	#50	15 A
• Parking lamp (also used as the front side marker lamp) • Tail lamp • Rear side marker lamp • License plate lamp • Each illumination	IPDM E/R	#47	10 A
Stop lamp	FUSE BLOCK (J/B)	#7	10 A
Back-up lamp	IPDM E/R	#55	10 A

WITH DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure

INFOID:0000000006504369

1.CHECK FUSE

Check that the following fuses are not fusing.

Unit	Location	Fuse No.	Capacity
Headlamp HI (LH)	IPDM E/R	#52	10 A
Headlamp HI (RH)	IPDM E/R	#51	10 A
Headlamp LO (LH)	IPDM E/R	#53	15 A
Headlamp LO (RH)	IPDM E/R	#54	15 A
Front fog lamp	IPDM E/R	#50	15 A
• Parking lamp (also used as the front side marker lamp) • Tail lamp • Rear side marker lamp • License plate lamp • Each illumination	IPDM E/R	#47	10 A
Stop lamp	FUSE BLOCK (J/B)	#7	10 A
Back-up lamp	IPDM E/R	#55	10 A

Is the fuse fusing?

YES >> Repair the applicable circuit. And then replace the fuse.

NO >> The fuse is normal.

HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

HEADLAMP (HI) CIRCUIT

Component Function Check

INFOID:0000000006504370

1.CHECK HEADLAMP (HI) OPERATION

IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [EXL-32, "Diagnosis Description"](#).
2. Check that the headlamp switches to the high beam.

CONSULT-III ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the headlamp (HI) is turned ON.

Hi : Headlamp (HI) ON

Off : Headlamp (HI) OFF

NOTE:

ON/OFF is repeated 1 second each.

Is the headlamp (HI) turned ON?

YES >> Headlamp (HI) circuit is normal.

NO >> Refer to [EXL-47, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000006504371

1.CHECK HEADLAMP (HI) OUTPUT VOLTAGE

CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect the headlamp connector.
3. Turn the ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
5. With operating the test items, check the voltage between the IPDM E/R harness connector and the ground.

Terminals		Test item	Voltage (Approx.)
(+)			
IPDM E/R		EXTERNAL LAMPS	
Connector		Hi	Battery voltage
RH	49		0 V
E15		Hi	Battery voltage
LH	50		0 V

Is the measurement value normal?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK HEADLAMP (HI) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the IPDM E/R connector.
3. Check continuity between the IPDM E/R harness connector and the headlamp harness connector.

HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

IPDM E/R		Headlamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E15	49	E45	1
LH		50	E26	1

Does continuity exist?

YES (Without daytime running light system)>>GO TO 5.

YES (With daytime running light system)>>GO TO 6.

NO >> Repair the harnesses or connectors.

3.CHECK HEADLAMP (HI) FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuses are not fusing.

Unit	Location	Fuse No.	Capacity
Headlamp HI (RH)	IPDM E/R	#51	10 A
Headlamp HI (LH)	IPDM E/R	#52	10 A

Is the fuse fusing?

YES >> GO TO 4.

NO >> Replace IPDM E/R.

4.CHECK HEADLAMP HIGH (HI) SHORT CIRCUIT

1. Disconnect the IPDM E/R connector.
2. Check continuity between the IPDM E/R harness connector terminal and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
RH	E15	49	Not existed
LH		50	

Does continuity exist?

YES >> Repair the harnesses or connectors. And then replace the fuse.

NO >> Replace the fuse. (Replace IPDM E/R if the fuse is fusing again.)

5.CHECK HEADLAMP (HI) GROUND OPEN CIRCUIT

Check continuity between the headlamp harness connector and the ground.

Headlamp		Ground	Continuity
Connector	Terminal		
RH	E45	2	Existed
LH		2	

Does continuity exist?

YES >> Replace the headlamp (HI) bulb.

NO >> Repair the harnesses or connectors.

6.CHECK HEADLAMP (HI) GROUND OPEN CIRCUIT (LH)

Check continuity between the headlamp LH harness connector and the ground.

Headlamp		Ground	Continuity
Connector	Terminal		
LH	E26	2	Existed

Does continuity exist?

HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 7.

NO >> Repair the harnesses or connectors.

7.CHECK CONTINUITY BETWEEN HEADLAMP HIGH (RH) AND DAYTIME RUNNING LIGHT RELAY-1

1. Remove the daytime running light relay-1.
2. Check continuity between the headlamp RH harness connector and the daytime running light relay-1 harness connector.

Headlamp		Daytime running light relay-1		Continuity
Connector	Terminal	Connector	Terminal	Existed
RH	E45	2	E57	1

Does continuity exist?

YES >> GO TO 8.

NO >> Repair the harness or connector.

8.CHECK THE DAYTIME RUNNING LIGHT RELAY-1 GROUND OPEN CIRCUIT

Check continuity between the daytime running light relay-1 harness connector and the ground.

Daytime running light relay-1		Ground	Continuity
Connector	Terminal		Existed
E57	4		

Does continuity exist?

YES >> GO TO 9.

NO >> Repair the harness or connector.

9.CHECK THE DAYTIME RUNNING LIGHT RELAY-1

Check the daytime running light relay-1. Refer to [EXL-58, "Component Inspection \(Daytime Running Light Relay-1\)".](#)

Is the daytime running light relay-1 normal?

YES >> Replace the headlamp (HI) bulb.

NO >> Replace the daytime running light relay-1.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

HEADLAMP (LO) CIRCUIT

Component Function Check

INFOID:0000000006504372

1. CHECK HEADLAMP (LO) OPERATION

IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [EXL-32, "Diagnosis Description"](#).

2. Check that the headlamp is turned ON.

CONSULT-III ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.

2. With operating the test items, check that the headlamp (LO) is turned ON.

Lo : Headlamp (LO) ON

Off : Headlamp (LO) OFF

Is the headlamp (LO) turned ON?

YES >> Headlamp (LO) is normal.

NO (With daytime running light system)>>Refer to [EXL-50, "WITH DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure"](#).

NO (Without daytime running light system)>>Refer to [EXL-53, "WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure"](#).

WITH DAYTIME RUNNING LIGHT SYSTEM

WITH DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure

INFOID:0000000006504373

1. CHECK HEADLAMP LOW (LH) OUTPUT VOLTAGE

CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.

2. Disconnect the headlamp LH connector.

3. Turn the ignition switch ON.

4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.

5. With operating the test items, check the voltage between the IPDM E/R harness connector and the ground.

Terminals		Test item	Voltage (Approx.)	
(+)	(-)			
IPDM E/R		EXTERNAL LAMPS		
Connector	Terminal			
E15	51		Battery voltage	
			0 V	

Is the measurement value normal?

YES >> GO TO 2.

NO >> GO TO 8.

2. CHECK HEADLAMP LOW (RH) OUTPUT VOLTAGE

CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.

2. Remove the daytime running light relay-2.

3. Turn the ignition switch ON.

4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.

5. With operating the test items, check the voltage between the IPDM E/R harness connector and the ground.

HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Terminals		Test item	Voltage (Approx.)	
(+)	(-)			
IPDM E/R		EXTERNAL LAMPS		
Connector	Terminal			
E15	52	Lo		
			Battery voltage	
			Off	
			0 V	

Is the measurement value normal?

YES >> GO TO 3.
NO >> GO TO 8.

3.CHECK HEADLAMP LOW (LH) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the IPDM E/R connector.
3. Check continuity between the IPDM E/R harness connector and the headlamp LH harness connector.

IPDM E/R		Headlamp LH		Continuity
Connector	Terminal	Connector	Terminal	
E15	51	E26	3	Existed

Does continuity exist?

YES >> GO TO 4.
NO >> Repair the harnesses or connectors.

4.CHECK CONTINUITY BETWEEN IPDM E/R AND THE DAYTIME RUNNING LIGHT RELAY-2

1. Turn the ignition switch OFF.
2. Disconnect the IPDM E/R connector.
3. Check continuity between the IPDM E/R harness connector and the daytime running light relay-2 harness connector.

IPDM E/R		Daytime running light relay-2		Continuity
Connector	Terminal	Connector	Terminal	
E15	52	E59	2	Existed
			5	

Does continuity exist?

YES >> GO TO 5.
NO >> Repair the harnesses or connectors.

5.CHECK THE DAYTIME RUNNING LIGHT RELAY-2 GROUND OPEN CIRCUIT

Check continuity between the daytime running light relay-2 harness connector and the ground.

Daytime running light relay-2		Ground	Continuity
Connector	Terminal		
E59	1		Existed

Does continuity exist?

YES >> GO TO 6.
NO >> Repair the harnesses or connectors.

6.CHECK CONTINUITY BETWEEN THE DAYTIME RUNNING LIGHT RELAY-2 AND HEADLAMP RH

1. Turn the ignition switch OFF.
2. Disconnect the headlamp RH connector.
3. Check continuity between the daytime running light relay-2 harness connector and the headlamp RH harness connector.

HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Daytime running light relay-2		Headlamp RH		Continuity
Connector	Terminal	Connector	Terminal	
E59	3	E45	3	Existed

Does continuity exist?

YES >> GO TO 7.

NO >> Repair the harnesses or connectors.

7.CHECK THE DAYTIME RUNNING LIGHT RELAY-2

Check the daytime running light relay-2. Refer to [EXL-59, "Component Inspection \(Daytime Running Light Relay-2\)".](#)

Is the daytime running light relay-2 normal?

YES >> GO TO 10.

NO >> Replace the daytime running light relay-2.

8.CHECK HEADLAMP (LO) FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuses are not fusing.

Unit	Location	Fuse No.	Capacity
Headlamp LO (LH)	IPDM E/R	#53	10 A
Headlamp LO (RH)	IPDM E/R	#54	10 A

Is the fuse fusing?

YES >> GO TO 9.

NO >> Replace IPDM E/R.

9.CHECK HEADLAMP (LO) SHORT CIRCUIT

1. Disconnect the IPDM E/R connector.
2. Check continuity between the IPDM E/R harness connector terminal and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
LH	51		
RH	E15		Not existed
	52		

Does continuity exist?

YES >> Repair the harnesses or connectors. And then replace the fuse.

NO >> Replace the fuse. (Replace IPDM E/R if the fuse is fusing again.)

10.CHECK HEADLAMP (LO) GROUND OPEN CIRCUIT (LH)

Check continuity between the headlamp LH harness connector and the ground.

Headlamp RH		Ground	Continuity
Connector	Terminal		
LH	E26		
	2		Existed

Does continuity exist?

YES >> GO TO 11.

NO >> Repair the harnesses or connectors.

11.CHECK CONTINUITY BETWEEN HEADLAMP LOW (RH) AND DAYTIME RUNNING LIGHT RELAY-1

1. Remove the daytime running light relay-1.
2. Check continuity between the headlamp RH harness connector and the daytime running light relay-1 harness connector.

HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Headlamp RH		Daytime running light relay-1		Continuity
Connector	Terminal	Connector	Terminal	Existed
RH	E45	2	E57	
			3	

Does continuity exist?

YES >> GO TO 12.

NO >> Repair the harness or connector.

12.CHECK THE DAYTIME RUNNING LIGHT RELAY-1 GROUND OPEN CIRCUIT

Check continuity between the daytime running light relay-1 harness connector and the ground.

Daytime running light relay-1		Ground	Continuity
Connector	Terminal		Existed
E57	4		

Does continuity exist?

YES >> GO TO 13.

NO >> Repair the harness or connector.

13.CHECK THE DAYTIME RUNNING LIGHT RELAY-1

Check the daytime running light relay-1. Refer to [EXL-58, "Component Inspection \(Daytime Running Light Relay-1\)".](#)

Is the daytime running light relay-1 normal?

YES >> Replace the headlamp (LO) bulb. (Bulb socket is abnormally.)

NO >> Replace the daytime running light relay-1.

WITHOUT DAYTIME RUNNING LIGHT SYSTEM

WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Diagnosis Procedure

INFOID:000000006504374

1.CHECK HEADLAMP (LO) OUTPUT VOLTAGE

CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect the headlamp connector.
3. Turn the ignition switch ON.
4. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
5. With operating the test items, check the voltage between the IPDM E/R harness connector and the ground.

J

K

EXL

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
IPDM E/R	Ground	EXTERNAL LAMPS	Lo
			Battery voltage
			Off
			0 V
			Lo
			Battery voltage
RH	52		Off
	E15		0 V
LH	51		Lo
			Battery voltage
			Off
			0 V

Is the measurement value normal?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK HEADLAMP (LO) OPEN CIRCUIT

1. Turn the ignition switch OFF.

HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

2. Disconnect IPDM E/R connector.
3. Check continuity between the IPDM E/R harness connector and the headlamp harness connector.

IPDM E/R		Headlamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E15	52	E45	3
LH		51	E26	3

Does continuity exist?

- YES >> GO TO 5.
NO >> Repair the harnesses or connectors.

3.CHECK HEADLAMP (LO) FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuses are not fusing.

Unit	Lotion	Fuse No.	Capacity
Headlamp LO (RH)	IPDM E/R	#54	15 A
Headlamp LO (LH)	IPDM E/R	#53	15 A

Is the fuse fusing?

- YES >> GO TO 4.
NO >> Replace IPDM E/R.

4.CHECK HEADLAMP (LO) SHORT CIRCUIT

1. Disconnect the IPDM E/R connector.
2. Check continuity between the IPDM E/R harness connector and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
RH	E15	52	Not existed
LH		51	

Does continuity exist?

- YES >> Repair the harnesses or connectors. And then replace the fuse.
NO >> Replace the fuse. (Replace IPDM E/R if the fuse is fusing again.)

5.CHECK HEADLAMP (LO) GROUND OPEN CIRCUIT

Check continuity between the headlamp harness connector and the ground.

Headlamp		Ground	Continuity
Connector	Terminal		
RH	E45	2	Existed
LH		2	

Does continuity exist?

- YES >> Replace the headlamp (LO) bulb. (Bulb socket is abnormally.)
NO >> Repair the harnesses or connectors.

FRONT FOG LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FRONT FOG LAMP CIRCUIT

Component Function Check

INFOID:0000000006504375

1. CHECK FRONT FOG LAMP OPERATION

IPDM E/R AUTO ACTIVE TEST

1. Activate IPDM E/R auto active test. Refer to [EXL-32, "Diagnosis Description"](#).
2. Check that the front fog lamp is turned ON.

CONSULT-III ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the front fog lamp is turned ON.

Fog : Front fog lamp ON

Off : Front fog lamp OFF

Is the front fog lamp turned ON?

YES >> Front fog lamp circuit is normal.

NO >> Refer to [EXL-55, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000006504376

1. CHECK FRONT FOG LAMP FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuse is not fusing.

Unit	Location	Fuse No.	Capacity
Front fog lamp	IPDM E/R	#50	15 A

Is the fuse fusing?

YES >> GO TO 2.

NO >> GO TO 3.

2. CHECK FRONT FOG LAMP SHORT CIRCUIT

1. Disconnect IPDM E/R connector and the front fog connector.
2. Check continuity between the IPDM E/R harness connector and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
RH	E12	21	
LH		22	Not existed

Does continuity exist?

YES >> Repair the harnesses or connectors. And then replace the fuse.

NO >> Replace the fuse. (Replace IPDM E/R if the fuse is fusing again.)

3. CHECK FRONT FOG LAMP BULB

Check the applicable lamp bulb.

Is the bulb normal?

YES >> GO TO 4.

NO >> Replace the bulb.

4. CHECK FRONT FOG LAMP OUTPUT VOLTAGE

CONSULT-III ACTIVE TEST

1. Disconnect the front fog lamp connector.
2. Turn the ignition switch ON.
3. Select "EXTERNAL LAMPS" of IPDM E/R active test item.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

FRONT FOG LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

4. With operating the test items, check the voltage between the IPDM E/R harness connector and the ground.

Terminals		Test item	Voltage (Approx.)	
(+)	(-)			
IPDM E/R		EXTERNAL LAMPS Ground	Battery voltage	
Connector	Terminal			
RH	21		0 V	
E12	22		Battery voltage	
			0 V	

Is the measurement value normal?

YES >> GO TO 5.

NO >> Replace IPDM E/R.

5.CHECK FRONT FOG LAMP OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between the IPDM E/R harness connector and the front fog lamp harness connector.

IPDM E/R		Front fog lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E12	21	E48	1
LH		22	E30	1

Does continuity exist?

YES >> GO TO 6.

NO >> Repair the harnesses or connectors.

6.CHECK FRONT FOG LAMP GROUND CIRCUIT OPEN CIRCUIT

Check continuity between the front fog lamp harness connector and the ground.

Front fog lamp			Ground	Continuity
Connector	Terminal			
RH	E48	2		Existed
LH		2		

Does continuity exist?

YES >> Replace the front fog lamp.

NO >> Repair the harnesses or connectors.

DAYTIME RUNNING LIGHT RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DAYTIME RUNNING LIGHT RELAY CIRCUIT

Component Function Check

INFOID:0000000006504377

NOTE:

Check the headlamp (HI) circuit if the headlamp (HI) is not turned ON. Refer to [EXL-47, "Component Function Check"](#).

CAUTION:

Before performing the diagnosis, check that the headlamp (HI) bulb is normal.

1.CHECK DAYTIME RUNNING LIGHT OPERATION

④CONSULT-III ACTIVE TEST

1. Select "DAYTIME RUNNING LIGHT" of BCM (HEADLAMP) active test item.
2. With operating the test items, check that daytime running light operation.

On : Daytime running light ON

Off : Daytime running light OFF

Is the daytime running light turned ON/OFF?

YES >> Daytime running light relay-1 circuit is normal.

NO >> Refer to [EXL-57, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000006504378

1.CHECK DAYTIME RUNNING LIGHT RELAY FUSE

Check that the following fuse is not fusing.

Unit	Location	Fuse No.	Capacity
Daytime running light relay-1	Fuse and fusible link block	#32	10A

Is the fuse fusing?

YES >> Replace the fuse after repairing the applicable circuit.

NO >> GO TO 2.

2.CHECK DAYTIME RUNNING LIGHT RELAY-1 POWER SUPPLY

1. Remove daytime running light relay-1.
2. Check voltage between daytime running light relay-1 harness connector and the ground.

Terminals		Voltage (Approx.)
(+)	(-)	
Daytime running light relay-1	Connector	Ground
Terminal		
E57	2	Battery voltage
	5	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harnesses or connectors.

3.CHECK DAYTIME RUNNING LIGHT RELAY-1

Check daytime running light relay-1. Refer to [EXL-58, "Component Inspection \(Daytime Running Light Relay-1\)"](#).

Is the daytime running light relay-1 normal?

YES >> GO TO 4.

NO >> Replace daytime running light relay-1.

4.CHECK DAYTIME RUNNING LIGHT RELAY-1 CONTROL SIGNAL OUTPUT

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

DAYTIME RUNNING LIGHT RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

① CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.
2. Install daytime running light relay-1.
3. Turn the ignition switch ON.
4. Select "DAYTIME RUNNING LIGHT" of BCM (HEAD LAMP) active test item.
5. With operating the test item, check voltage between IPDM E/R harness connector and the ground.

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
IPDM E/R	Ground	DAYTIME RUNNING LIGHT	
Connector		On	0 V
E13		Off	Battery voltage

Is the measurement value normal?

YES >> Check daytime running light relay-1 circuit. Refer to [EXL-58, "Component Inspection \(Daytime Running Light Relay-1\)".](#)

Fixed at 0 V >> GO TO 5.

Fixed at battery voltage >> Replace IPDM E/R.

5.CHECK DAYTIME RUNNING LIGHT RELAY-1 CONTROL SIGNAL OPEN CIRCUIT

1. Remove daytime running light relay-1.
2. Disconnect IPDM E/R harness connector.
3. Check continuity between IPDM E/R harness connector and daytime running light relay-1 harness connector.

IPDM E/R		Daytime running light relay-1		Continuity
Connector	Terminal	Connector	Terminal	
E13	28	E57	1	Existed

Does continuity exist?

YES >> GO TO 6.

NO >> Repair the harnesses or connectors.

6.CHECK DAYTIME RUNNING LIGHT RELAY- CONTROL SIGNAL SHORT CIRCUIT

Check continuity between IPDM E/R harness connector and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E13	28		Not existed

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> Replace IPDM E/R.

Component Inspection (Daytime Running Light Relay-1)

INFOID:0000000006504379

1.CHECK DAYTIME RUNNING LIGHT RELAY-1

1. Turn the ignition switch OFF.
2. Remove daytime running light relay-1.
3. Apply battery voltage to daytime running light relay- between terminals 1 and 2.
4. Check continuity of daytime running light relay-1.

DAYTIME RUNNING LIGHT RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Daytime running light relay-1		Condition	Continuity
Terminal		Voltage	
5	3	Apply	Existed
		Not Apply	Not existed
4	3	Apply	Not existed
		Not Apply	Existed

Does continuity exist?

YES >> Daytime running light relay-1 is normal.

NO >> Replace daytime running light relay-1.

Component Inspection (Daytime Running Light Relay-2)

INFOID:000000006504380

1.CHECK DAYTIME RUNNING LIGHT RELAY-2

1. Turn the ignition switch OFF.
2. Disconnect daytime running light relay-2.
3. Apply battery voltage to daytime running light relay-2 between terminals 1 and 2.
4. Check continuity daytime running light of relay-2.

Daytime running light relay-1		Condition	Continuity
Terminal		Voltage	
3	5	Apply	Existed
		Not Apply	Not existed

Does continuity exist?

YES >> Daytime running light relay-2 is normal.

NO >> Replace Daytime running light relay-2.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

PARKING LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

PARKING LAMP CIRCUIT

Component Function Check

INFOID:0000000006504381

1. CHECK PARKING LAMP OPERATION

IPDM E/R AUTO ACTIVE TEST

1. Activate IPDM E/R auto active test. Refer to [EXL-32, "Diagnosis Description"](#).

2. Check that the parking lamp is turned ON.

CONSULT-III ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.

2. With operating the test items, check that the parking lamp is turned ON.

TAIL : Parking lamp ON

Off : Parking lamp OFF

Is the parking lamp turned ON?

YES >> Parking lamp circuit is normal.

NO >> Refer to [EXL-60, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000006504382

1. CHECK PARKING LAMP FUSE

1. Turn the ignition switch OFF.

2. Check that the following fuses are not fusing.

Unit	Location	Fuse No.	Capacity
• Parking lamp • License plate lamp • Side marker lamp • Tail lamp	IPDM E/R	#47	10 A

Is the fuse fusing?

YES >> GO TO 2.

NO >> GO TO 3.

2. CHECK PARKING LAMP SHORT CIRCUIT

1. Disconnect IPDM E/R connector and the parking lamp connector.

2. Check continuity between the IPDM E/R harness connector and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
RH	E14	37	Not existed
		36	

Does continuity exist?

YES >> Repair the harnesses or connectors. And then replace the fuse.

NO >> Replace the fuse. (Replace IPDM E/R if fusing is found again.)

3. CHECK PARKING LAMP BULB

Check the applicable lamp bulb.

Is the bulb normal?

YES >> GO TO 4.

NO >> Replace the bulb.

4. CHECK PARKING LAMP OUTPUT VOLTAGE

CONSULT-III ACTIVE TEST

1. Disconnect the parking lamp connector.

PARKING LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

2. Turn the ignition switch ON.
3. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
4. With operating the test items, check the voltage between the IPDM E/R harness connector and the ground.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

Terminals		Test item	Voltage (Approx.)
(+) (-)			
IPDM E/R		Ground	EXTERNAL LAMPS
Connector	Terminal		TAIL
RH	E14		Battery voltage
LH			OFF 0 V

Is the measurement value normal?

YES >> GO TO 5.

NO >> Replace IPDM E/R.

5.CHECK PARKING LAMP OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between the IPDM E/R harness connector and the parking lamp harness connector.

F

G

IPDM E/R		Parking lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E14	37	E43	1
LH		36	E24	1

Does continuity exist?

YES >> GO TO 6.

NO >> Repair the harnesses or connectors.

6.CHECK PARKING LAMP GROUND OPEN CIRCUIT

Check continuity between the parking lamp harness connector and the ground.

K

Parking lamp		Ground	Continuity
Connector	Terminal		
RH	E43		2
LH	E24		2

EXL

Does continuity exist?

YES >> Replace the front combination lamp.

NO >> Repair the harnesses or connectors.

M

N

O

P

TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

TURN SIGNAL LAMP CIRCUIT

Description

INFOID:0000000006504383

BCM performs the high flasher operation (fail-safe) if any bulb or harness of the turn signal lamp circuit is open.

NOTE:

The turn signal lamp blinks at normal speed when using the hazard warning lamp.

Component Function Check

INFOID:0000000006504384

1.CHECK TURN SIGNAL LAMP

(H)CONSULT-III ACTIVE TEST

1. Select "FLASHER" of BCM (FLASHER) active test item.
2. With operating the test items, check that the turn signal lamps blink.

LH : Turn signal lamps (LH) blink

RH : Turn signal lamps (RH) blink

Off : Turn signal lamps OFF

Does the turn signal lamps blink?

YES >> Turn signal lamp circuit is normal.

NO >> Refer to [EXL-62, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000006504385

1.CHECK TURN SIGNAL LAMP BULB

Check the applicable lamp bulb.

Is the bulb normal?

YES >> GO TO 2.

NO >> Replace the bulb.

2.CHECK TURN SIGNAL LAMP OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector.
3. Disconnect the front turn signal lamp connector, side turn signal lamp connector, or the rear combination lamp connector.
4. Check continuity between the BCM harness connector and the front turn signal lamp, side turn signal lamp or the rear combination lamp harness connector.

Front turn signal lamp

BCM		Front turn signal lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	M67	61	E46	Existed
		60	E27	

Side turn signal lamp

BCM		Side turn signal lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	M67	61	E40	Existed
		60	E23	

TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Rear turn signal lamp

BCM		Rear combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	M67	61	B59	4
LH		60	B80	

Does continuity exist?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK TURN SIGNAL LAMP SHORT CIRCUIT

Check continuity between the BCM harness connector and the ground.

BCM		Ground	Continuity
Connector	Terminal		
RH	M67	61	Not existed
LH		60	

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> GO TO 4.

4.CHECK TURN SIGNAL LAMP GROUND OPEN CIRCUIT

Check continuity between the BCM harness connector and the front turn signal lamp, side turn signal lamp or the rear combination lamp and the ground.

Front turn signal lamp

Front turn signal lamp		Ground	Continuity
Connector	Terminal		
RH	E46	2	Existed
LH	E27		

Side turn signal lamp

Side turn signal lamp		Ground	Continuity
Connector	Terminal		
RH	E40	2	Existed
LH	E23		

Rear turn signal lamp

Rear combination lamp		Ground	Continuity
Connector	Terminal		
RH	B59	3	Existed
LH	B80		

Does continuity exist?

YES >> Replace BCM.

NO >> Repair the harnesses or connectors.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

OPTICAL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

OPTICAL SENSOR

Description

INFOID:0000000006504386

Optical sensor converts the outside brightness (lux) to voltage and transmits the optical sensor signal to BCM.

Component Function Check

INFOID:0000000006504387

1.CHECK OPTICAL SENSOR SIGNAL BY CONSULT-III

(B)CONSULT-III DATA MONITOR

1. Turn the ignition switch ON.
2. Select "OPTISEN (DTCT)" of BCM (HEADLAMP) data monitor item.
3. Turn the lighting switch AUTO.
4. With the optical sensor illuminating, check the monitor status.

Monitor item	Condition		Voltage (Approx.)
OPTISEN (DTCT)	Optical sensor	When illuminating	3.1 V or more *
		When shutting off light	0.6 V or less

*: Illuminates the optical sensor. The value may be less than the standard value if brightness is weak.

Is the item status normal?

- YES >> Optical sensor is normal.
NO >> Refer to [EXL-64, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000006504388

1.CHECK OPTICAL SENSOR POWER SUPPLY INPUT

1. Turn the ignition switch ON.
2. Turn the lighting switch AUTO.
3. Check the voltage between the optical sensor harness connector and the ground.

Terminals		Voltage (Approx.)
(+)	(-)	
Optical sensor		
Connector	Terminal	Ground
M17	1	5 V

Is the measurement value normal?

- YES >> GO TO 2.
NO >> GO TO 4.

2.CHECK OPTICAL SENSOR GROUND INPUT

Check the voltage between the optical sensor harness connector and the ground.

Terminals		Voltage (Approx.)
(+)	(-)	
Optical sensor		
Connector	Terminal	Ground
M17	3	0 V

Is the measurement value normal?

- YES >> GO TO 3.
NO >> GO TO 6.

3.CHECK OPTICAL SENSOR SIGNAL OUTPUT

OPTICAL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

With illuminating the optical sensor, check the voltage between the optical sensor harness connector and the ground.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
Optical sensor		Optical sensor	
Connector	Terminal		
M17	2		When illuminating 3.1 V or more *
			When shutting off light 0.6 V or less

*: Illuminate the optical sensor. The value may be less than the standard if brightness is weak.

Is the measurement value normal?

YES >> GO TO 7.

NO >> Replace the optical sensor.

4.CHECK OPTICAL SENSOR OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the optical sensor connector and BCM connector.
3. Check continuity between the optical sensor harness connector and the BCM harness connector.

Optical sensor		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M17	1	M68	17	Existed

Does continuity exist?

YES >> GO TO 5.

NO >> Repair the harnesses or connectors.

5.CHECK OPTICAL SENSOR SHORT CIRCUIT

Check the continuity between the optical sensor harness connector and the ground.

Optical sensor		Ground	Continuity
Connector	Terminal		
M17	1		Not existed

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> Replace BCM.

6.CHECK OPTICAL SENSOR GROUND OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the optical sensor connector and BCM connector.
3. Check continuity between the optical sensor harness connector and the BCM harness connector.

Optical sensor		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M17	3	M68	18	Existed

Does continuity exist?

YES >> Replace BCM.

NO >> Repair the harnesses or connectors.

7.CHECK OPTICAL SENSOR SIGNAL OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the optical sensor connector and BCM connector.
3. Check continuity between the optical sensor harness connector and the BCM harness connector.

OPTICAL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Optical sensor		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M17	2	M68	14	Existed

Does continuity exist?

YES >> GO TO 8.

NO >> Repair the harnesses or connectors.

8.CHECK OPTICAL SENSOR SHORT CIRCUIT

Check the continuity between the optical sensor harness connector and the ground.

Optical sensor		Ground	Continuity
Connector	Terminal		Not existed
M17	2		

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> Replace BCM.

HAZARD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

HAZARD SWITCH

Component Function Check

INFOID:0000000006504389

1. CHECK HAZARD SWITCH SIGNAL BY CONSULT-III

CONSULT-III DATA MONITOR

1. Turn the ignition switch ON.
2. Select "HAZARD SW" of BCM (FLASHER) data monitor item.
3. With operating the hazard switch, check the monitor status.

Monitor item	Condition		Monitor status
HAZARD SW	Hazard switch	ON	On
		OFF	Off

Is the item status normal?

YES >> Hazard switch circuit is normal.


NO >> Refer to [EXL-67, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000006504390

1. CHECK HAZARD SWITCH SIGNAL INPUT

With operating the hazard switch, check the voltage between the BCM harness connector and the ground.

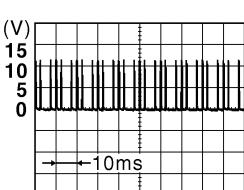Terminals		Condition	Voltage (Approx.)
(+)	(-)		
BCM	Connector	Hazard switch	0 V
		Ground	OFF
M68	29		 JPmia0154GB

Is the measurement value normal?

YES >> Replace BCM. Refer to [BCS-141, "Exploded View"](#).

NO >> GO TO 2.

2. CHECK HAZARD SWITCH SIGNAL OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect the hazard switch connector and BCM connector.
3. Check continuity between the hazard switch harness connector and the BCM harness connector.

Hazard switch	BCM		Continuity	
Connector	Terminal	Connector	Terminal	
M45	2	M68	29	Existed

Does continuity exist?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3. CHECK HAZARD SWITCH SIGNAL SHORT CIRCUIT

Check continuity between the hazard switch harness connector and the ground.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

HAZARD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

Hazard switch		Ground	Continuity
Connector	Terminal		
M45	2		Not existed

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> GO TO 4.

4.CHECK HAZARD SWITCH GROUND OPEN CIRCUIT

Check continuity between the hazard switch harness connector and the ground.

Hazard switch		Ground	Continuity
Connector	Terminal		
M45	1		Existed

Does continuity exist?

YES >> Replace the hazard switch.

NO >> Repair the harnesses or connectors.

TAIL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

TAIL LAMP CIRCUIT

Component Function Check

INFOID:0000000006504391

NOTE:

Check the parking lamp circuit if the parking lamp and the tail lamp are not turned ON.

1.CHECK TAIL LAMP OPERATION

IPDM E/R AUTO ACTIVE TEST

1. Activate IPDM E/R auto active test. Refer to [EXL-32, "Diagnosis Description"](#).
2. Check that the tail lamp is turned ON.

CONSULT-III ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the tail lamp is turned ON.

TAIL : Tail lamp ON

Off : Tail lamp OFF

Is the tail lamp turned ON?

YES >> Tail lamp circuit is normal.

NO >> Refer to [EXL-69, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000006504392

1.CHECK TAIL LAMP OUTPUT VOLTAGE

CONSULT-III ACTIVE TEST

1. Disconnect the rear combination lamp connector.
2. Turn the ignition switch ON.
3. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
4. With operating the test items, check the voltage between the IPDM E/R harness connector and the ground.

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
IPDM E/R	Connector	EXTERNAL LAMPS	TAIL
			Battery voltage
		Ground	0 V
	E14	TAIL	Battery voltage
			0 V
	LH	Off	

Is the measurement value normal?

YES >> GO TO 2.

NO >> Replace IPDM E/R.

2.CHECK TAIL LAMP OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between the IPDM E/R harness connector and the rear combination lamp harness connector.

TAIL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

IPDM E/R		Rear combination lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E14	38	B59	6
LH		41	B80	6

Does continuity exist?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK TAIL LAMP GROUND OPEN CIRCUIT

Check continuity between the rear combination lamp harness connector and the ground.

Rear combination lamp		Ground	Continuity
Connector	Terminal		
RH	B59		3
LH	B80		3

Does continuity exist?

YES >> Replace the rear combination lamp.

NO >> Repair the harnesses or connectors.

REAR SIDE MARKER LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

REAR SIDE MARKER LAMP CIRCUIT

Component Function Check

INFOID:0000000006504393

NOTE:

Check the parking lamp circuit if the parking lamp and the rear side marker lamp are not turned ON.

1.CHECK REAR SIDE MARKER LAMP OPERATION

IPDM E/R AUTO ACTIVE TEST

1. Activate IPDM E/R auto active test. Refer to [EXL-32, "Diagnosis Description"](#).
2. Check that the rear side marker lamp is turned ON.

CONSULT-III ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the test items, check that the rear side marker lamp is turned ON.

TAIL : Rear side marker lamp ON

Off : Rear side marker lamp OFF

Is the rear side marker lamp turned ON/OFF?

YES >> Rear side marker lamp circuit is normal.

NO >> Refer to [EXL-71, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000006504394

1.CHECK REAR SIDE MARKER LAMP BULB

Check the applicable lamp bulb.

Is the bulb normal?

YES >> GO TO 2.

NO >> Replace the bulb.

2.CHECK REAR SIDE MARKER LAMP OPEN CIRCUIT

1. Turn the ignition switch OFF.

2. Disconnect IPDM E/R connector and the rear side marker lamp connector.

3. Check continuity between the IPDM E/R harness connector and the rear side marker lamp harness connector.

IPDM E/R		Rear side marker lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E14	41	T5	1
LH			T4	1

Does continuity exist?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK REAR SIDE MARKER LAMP GROUND OPEN CIRCUIT

Check continuity between the rear side marker lamp harness connector and the ground.

Rear side marker lamp		Ground	Continuity
Connector	Terminal		
RH	T5	1	Existed
LH	T4		

Does continuity exist?

YES >> Replace the rear side marker lamp assembly.

NO >> Repair the harnesses or connectors.

EXL

LICENSE PLATE LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

LICENSE PLATE LAMP CIRCUIT

Component Function Check

INFOID:0000000006504395

NOTE:

Check the parking lamp circuit if the parking lamp and the license plate lamp are not turned ON.

1.CHECK LICENSE PLATE LAMP OPERATION

☒IPDM E/R AUTO ACTIVE TEST

1. Activate IPDM E/R auto active test. Refer to [EXL-32, "Diagnosis Description"](#).
2. Check that the license plate lamp is turned ON.

ⒷCONSULT-III ACTIVE TEST

1. Select "EXTERNAL LAMPS" of IPDM E/R active test item.
2. With operating the lighting switch, check that the license plate lamp is turned ON.

TAIL : License plate lamp ON

Off : License plate lamp OFF

Is the license plate lamp turned ON?

YES >> License plate lamp circuit is normal.

NO >> Refer to [EXL-72, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000006504396

1.CHECK LICENSE PLATE LAMP BULB

Check the applicable lamp bulb.

Is the bulb normal?

YES >> GO TO 2.

NO >> Replace the bulb.

2.CHECK LICENSE PLATE LAMP OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector and the license plate lamp connector.
3. Check continuity between the IPDM E/R harness connector and the license plate lamp harness connector.

IPDM E/R		License plate lamp		Continuity
Connector	Terminal	Connector	Terminal	
RH	E14	41	T3	1
LH			T2	1

Does continuity exist?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK LICENSE PLATE LAMP GROUND OPEN CIRCUIT

Check continuity between the license plate lamp harness connector and the ground.

License plate lamp			Ground	Continuity
Connector	Terminal			
RH	T3	2		Existed
LH	T2	2		

Does continuity exist?

YES >> Replace the license plate lamp.

NO >> Repair the harnesses or connectors.


HEADLAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

HEADLAMP SYSTEM

Wiring Diagram - HEADLAMP -

INFOID:0000000006504397

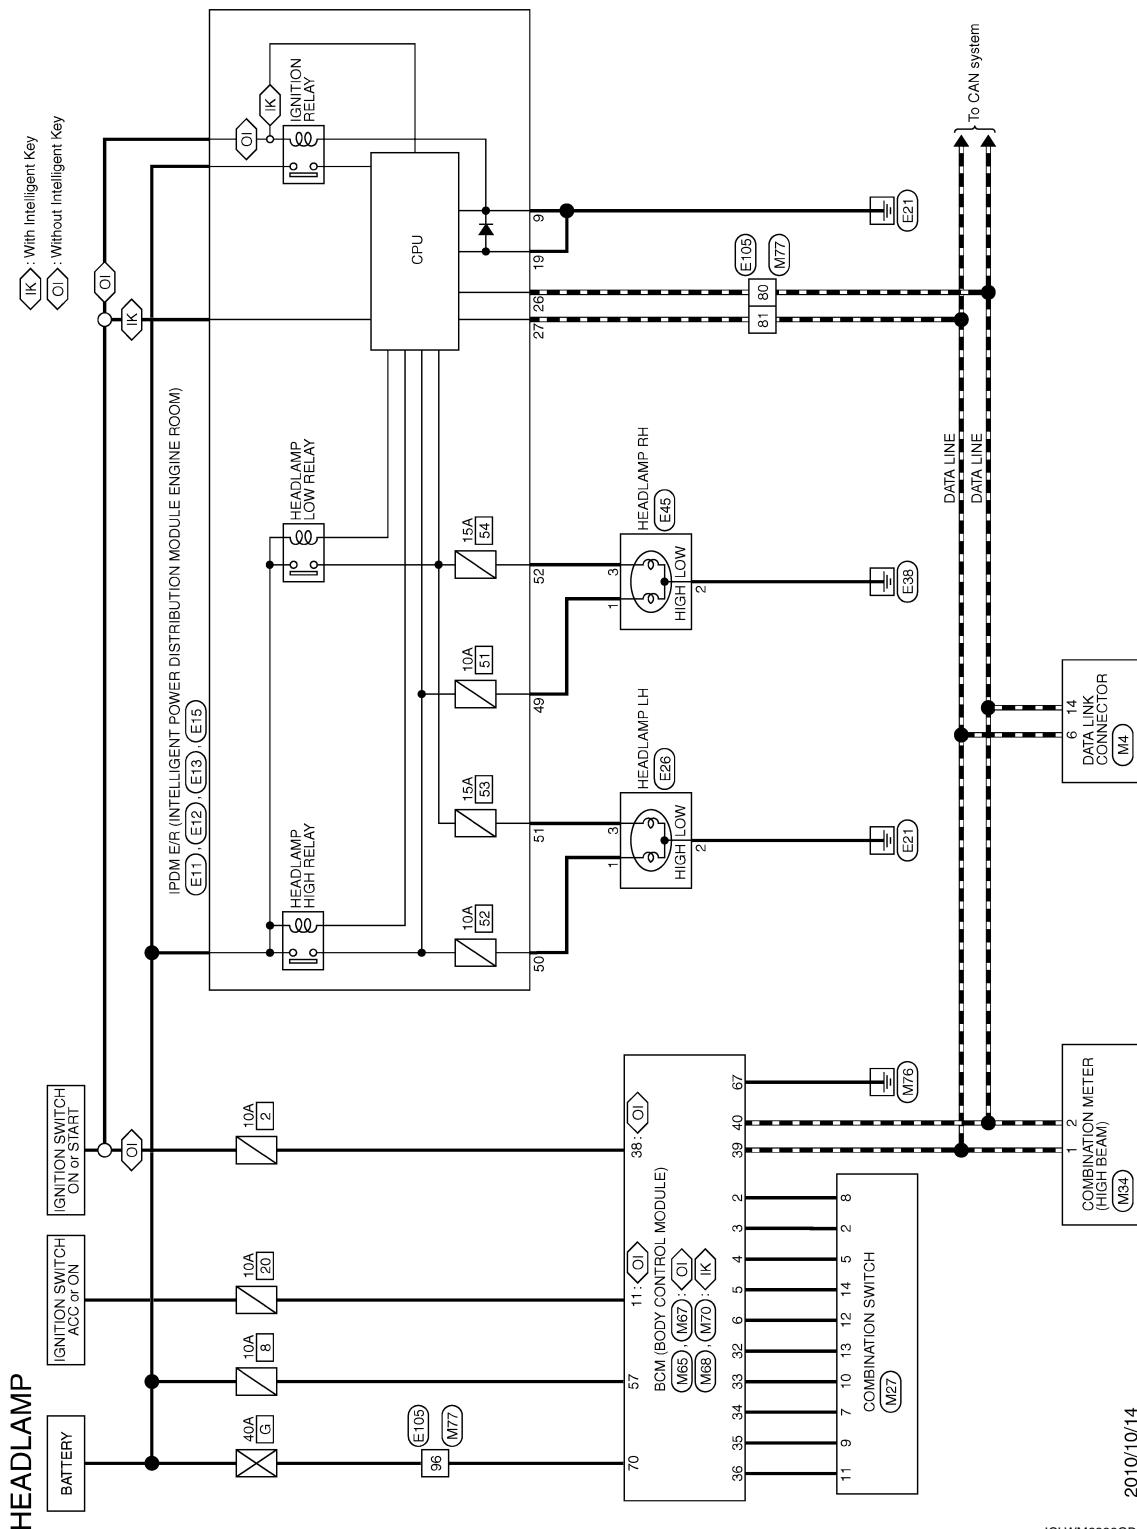

JCLWM6386GB

2010/10/14

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
EXL

HEADLAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

HEADLAMP

Connector No.	E11
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE) ENGINE ROOM
Connector Type	M06FB-LC



Terminal No.	Color of Wire	Signal Name [Specification]
24	LG	-
25	Y	-
26	P	-
27	L	-
28	P	-
30	SB	-
31	W	-
33	O	-
34	R	-



Connector No.	E26
Connector Name	HEADLAMP LH
Connector Type	NQ035FB



Terminal No.	Color of Wire	Signal Name [Specification]
9	B/W	-
10	L	-
13	W	-



Connector No.		E15	GIGA E & INTELLIGENT POWER DISTRIBUTION MODULE
Connector Name		ENCLAVE ROOM	
Connector Type		NS16W-CS	
53	52	51	50
62	61	60	59
58	57	56	55
54	53	52	51





Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	E/R	-
3	R	-



Terminal No.	Color of Wire	Signal Name [Specification]
18	Y	-
19	B/W	-
21	W	-
22	V	-



51	R	-
52	P	-
54	G R	-
55	P	-
56	S B	-
57	G	-
58	R	[With CVT]
58	Y	- [With M/T]
59	Y	-
60	V	-
61	W	-
62	I	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	—
2	R	[With daytime running light system] — [Without daytime running light system]
2	B/Y	[With daytime running light system] — [Without daytime running light system]
3	SB	—

ICLWM6387GB

HEADLAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

HEADLAMP		
Connector No.	E106	-
Connector Name	WIRE TO WIRE	
Connector Type	THBDMW-CS16-TM4	
Terminal Color No.	72 LG	PARKING BRAKE SWITCH SIGNAL
	73 P	BRAKE FLUID LEVEL SWITCH SIGNAL
	74 V	ILLUMINATION CONTROL SIGNAL
	76 Y	ACC POWER SUPPLY
	77 LG	WASHER LEVEL SWITCH SIGNAL
	78 O	SECURITY SIGNAL
	79 G	AMBIENT SENSOR SIGNAL
	80 P	AMBIENT SENSOR GROUND
	81 L	GROUNDS
	82 W	GROUNDS
	83 BR	GROUNDS
	84 B	FUEL LEVEL SENSOR GROUND
	87 GR	VDC GROUND
	91 V	BATTERY POWER SUPPLY
	92 Y	IGNITION SIGNAL
	93 Y	PASSENGER SEAT BELT WARNING SIGNAL
	94 R	A/G AUTO AMP CONNECTION RECOGNITION SIGNAL
	95 V	ENGINE COOLANT TEMPERATURE SIGNAL
	96 LG	ALTERNATOR SIGNAL
	97 R	
	98 SB	
	99 G	
	100 P	
Signal Name [Specification]		
1	V	
2	W	
3	SB	
4	G	
5	P	
6	L	- [With NAVI] - [Without NAVI]
6	R	
7	Y	
8	O	
9	W	
10	SB	
31	V	
32	R	
33	GR	
34	P	
35	Y	
36	BR	
39	SB	
44	R	
45	V	
46	P	
48	L	
51	BR	- [With CVT] - [With M/T]
53	B	
54	W	- [With CVT] - [With M/T]
57	LG	
59	L	
60	O	
61	G	
62	W	
63	L	
67	GR	- [With CVT] - [With M/T]
68	V	
70	P	
71	GR	
M27		
Connector No.	M27	
Connector Name	COMBINATION SWITCH	
Connector Type	THBFW-NH	
Terminal Color No.	10 SB	PARKING BRAKE SWITCH SIGNAL
	11 G/R	BRAKE FLUID LEVEL SWITCH SIGNAL
	13 B/R	ILLUMINATION CONTROL SIGNAL
	15 L/Y	ACC POWER SUPPLY
	17 G	WASHER LEVEL SWITCH SIGNAL
	18 R/Y	SECURITY SIGNAL
	19 V/W	AMBIENT SENSOR SIGNAL
	20 R/W	AMBIENT SENSOR GROUND
	21 B	GROUNDS
	22 B	GROUNDS
	23 B	GROUNDS
	24 V	FUEL LEVEL SENSOR GROUND
	25 B	VDC GROUND
	27 LG	BATTERY POWER SUPPLY
	28 GR	IGNITION SIGNAL
	29 GR	PASSENGER SEAT BELT WARNING SIGNAL
	31 R	A/G AUTO AMP CONNECTION RECOGNITION SIGNAL
	35 BR	ENGINE COOLANT TEMPERATURE SIGNAL
	38 GR	ALTERNATOR SIGNAL
Signal Name [Specification]		
1	O	
2	GR	OUTPUT 4
3	L	WASHER (FR)
4	W	IGN
5	L/Y	OUTPUT 3
6	B	GND
7	W	INPUT 3
8	BR/W	OUTPUT 5
9	R/L	INPUT 2
10	Y/L	INPUT 4
11	L/O	INPUT 1
12	L/R	OUTPUT 1
13	LG	INPUT 5
14	G	OUTPUT 2
THBFW-NH		
Connector No.	N34	
Connector Name	COMBINATION METER	
Connector Type	THBFW-NH	
Terminal Color No.	20 V	
	19 GR	
	18 BR	
	17 LG	
	15 B	
	13 L	
	11 GR	
	10 B	
	9 L	
	8 BR	
	7 LG	
	5 BR	
	4 GR	
	16 B	
	14 P	
	16 LG/R	
	12 P	CAN-H
	2 P	VEHICLE SPEED SIGNAL (2-PULSE)
	3 V	VEHICLE SPEED SIGNAL (3-PULSE)
	4 L	FUEL LEVEL SENSOR SIGNAL
	6 BR/Y	AIR BAG SIGNAL
	7 R/G	OVERDRIVE CONTROL SWITCH SIGNAL
	9 O	SEATBELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)

JCLWM6388GB

A

B

D

T

G

I

—

X

EXL

M

Z

O

P

HEADLAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

HEADLAMP

Connector No.	M65	OPTICAL SENSOR
Connector Name	BCM (BODY CONTROL MODULE)	REAR WINDOW DEFROGER SW
Connector Type	TH40FW-NH	OPTICAL SENSOR POWER SUPPLY
		SENSOR GND
		NATS ANTENNA AMP
		SECURITY INDICATOR LAMP
		DONGLE LINK
		NATS ANTENNA AMP
		A/C SW
		BLOWER FAN SW
		HAZARD SW
		DEF DOOR UNLOCK SENSOR
		COMBI SW OUTPUT 5
		COMBI SW OUTPUT 4
		COMBI SW OUTPUT 3
		COMBI SW OUTPUT 2
		COMBI SW OUTPUT 1
		SHIFT P
		RECEIVER COMM
		CAN-H
		CAN-L
		POWER WINDOW POWER SUPPLY (IGN)
		POWER WINDOW POWER SUPPLY (BAT)
		BAT (FL)
		REAR RH DOOR SW
		OPTICAL SENSOR
		RECEIVER / SENSOR GND
		KEYLESS ENTRY RECEIVER POWER SUPPLY
		NATS ANTENNA AMP
		TERMO CONTROL AMP
		A/C SW (With auto A/C)
		BLOWER FAN SW
		HAZARD SW
		FR DEFROSTER SW
		COMBI SW OUTPUT 5
		COMBI SW INPUT 5
		COMBI SW INPUT 4
		COMBI SW INPUT 3
		COMBI SW INPUT 2
		COMBI SW INPUT 1
		KEY SWITCH
		IGN
		CAN-H
		CAN-L
		STOP LAMP SW
		CENTRAL DOOR UNLOCK SW
		CENTRAL DOOR UNLOCK SW

Terminal No.	Color of Wire	Signal Name [Specification]
2	BR/W	COMBI SW INPUT 5
3	GR	COMBI SW INPUT 4
4	L/Y	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	LR	COMBI SW INPUT 1
7	WR	KEY CYL UNLOCK SW
8	WB	KEY CYL UNLOCK SW
9	W	STOP LAMP SW
10	WL	CENTRAL DOOR UNLOCK SW
11	L/Y	CENTRAL DOOR UNLOCK SW
12	SB	CENTRAL DOOR UNLOCK SW
13	GR/L	CENTRAL DOOR UNLOCK SW
14	L/B	CENTRAL DOOR UNLOCK SW
15	R/G	CENTRAL DOOR UNLOCK SW
16	V	CENTRAL DOOR UNLOCK SW
17	BR	CENTRAL DOOR UNLOCK SW
18	Y/Y	CENTRAL DOOR UNLOCK SW
19	BR	CENTRAL DOOR UNLOCK SW
20	GR	CENTRAL DOOR UNLOCK SW
21	P/L	CENTRAL DOOR UNLOCK SW
22	Y/R	CENTRAL DOOR UNLOCK SW
23	GR/R	CENTRAL DOOR UNLOCK SW
24	LG	CENTRAL DOOR UNLOCK SW
25	GR	CENTRAL DOOR UNLOCK SW
26	Y/G	CENTRAL DOOR UNLOCK SW
27	A/C SW [With manual A/C]	CENTRAL DOOR UNLOCK SW
28	Y/R	CENTRAL DOOR UNLOCK SW
29	L/W	CENTRAL DOOR UNLOCK SW
30	GR	CENTRAL DOOR UNLOCK SW
31	Y/Y	CENTRAL DOOR UNLOCK SW
32	LG	CENTRAL DOOR UNLOCK SW
33	Y/L	CENTRAL DOOR UNLOCK SW
34	W	CENTRAL DOOR UNLOCK SW
35	RL	CENTRAL DOOR UNLOCK SW
36	L/O	CENTRAL DOOR UNLOCK SW
37	R/W	CENTRAL DOOR UNLOCK SW
38	O	CENTRAL DOOR UNLOCK SW
39	L	CENTRAL DOOR UNLOCK SW
40	P	CENTRAL DOOR UNLOCK SW

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR/W	COMBI SW INPUT 5
2	GR	COMBI SW INPUT 4
3	LG	COMBI SW INPUT 3
4	Y/Y	COMBI SW INPUT 2
5	GR	COMBI SW INPUT 1
6	WR	KEY CYL UNLOCK SW
7	WB	KEY CYL UNLOCK SW
8	W	STOP LAMP SW
9	R	CENTRAL DOOR UNLOCK SW
10	GR	CENTRAL DOOR UNLOCK SW
11	LG	CENTRAL DOOR UNLOCK SW
12	Y/Y	CENTRAL DOOR UNLOCK SW
13	BR	CENTRAL DOOR UNLOCK SW

JCLWM6389GB

HEADLAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

A

B

C

D

E

F

G

H

I

K


EXL

M

N

O

P

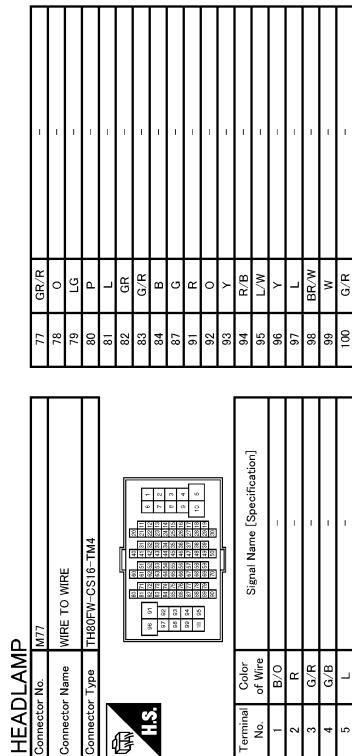

JCLWM6390GB


AUTO LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

AUTO LIGHT SYSTEM

Wiring Diagram - AUTO LIGHT SYSTEM -

INFOID:0000000006504398

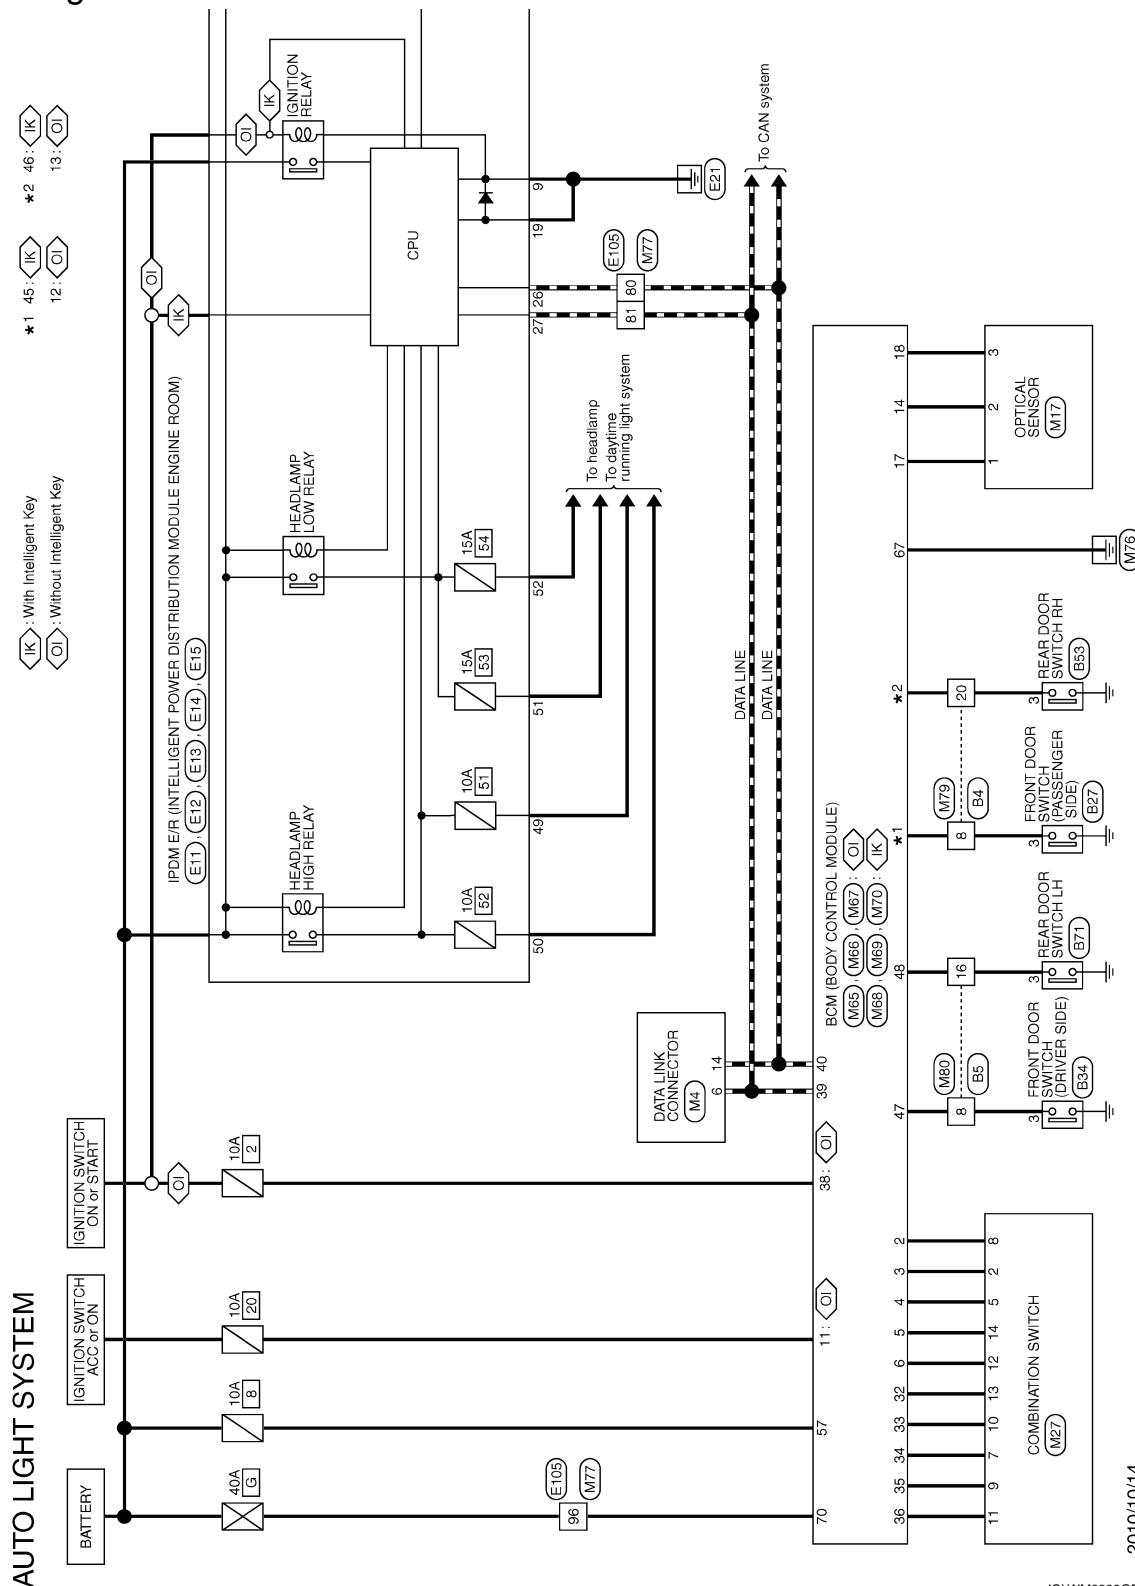

JCLWM6398GB

2010/10/14

AUTO LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

A

B

C

D

E

F

G

H

I

J

K


EXL

M

N

O

P

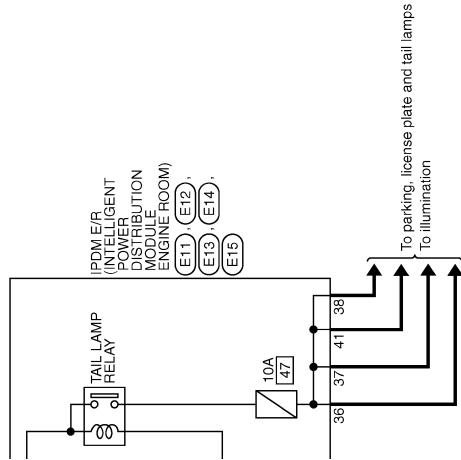

JCLWM6399GB

AUTO LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

AUTO LIGHT SYSTEM

Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
B4	V	-	3	LG	-
Connector Name	WIRE TO WIRE		8	R	-
Connector Type	TH24MW-NH		9	O	-
			11	GR	-
			13	P	-
			14	W	-
			16	-	-
			17	-	-
			18	-	-
			19	-	-
			20	-	-
			21	-	-
			22	-	-
			23	-	-
			24	-	-
			1	2	3
			2	4	5
			3	6	7
			4	8	9
			5	10	11
			6	11	12
			7	12	13
			8	13	14
			9	14	15
			10	15	16
			11	16	17
			12	17	18
			13	18	19
			14	19	20
			15	20	21
			16	21	22
			17	22	23
			18	23	24

Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
B53	V	-	3	LG	-
Connector Name	REAR DOOR SWITCH RH		8	R	-
Connector Type	TH04FW-NH		9	O	-
			11	GR	-
			13	P	-
			14	W	-
			16	-	-
			17	-	-
			18	-	-
			19	-	-
			20	-	-
			21	-	-
			22	-	-
			23	-	-
			24	-	-

Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
B27	V	-	3	LG	-
Connector Name	FRONT DOOR SWITCH (PASSENGER SIDE)		8	R	-
Connector Type	TH04FW-NH		9	O	-
			10	GR	-
			11	P	-
			12	W	-
			13	-	-
			14	-	-
			15	-	-
			16	-	-
			17	-	-
			18	-	-
			19	-	-
			20	-	-
			21	-	-
			22	-	-
			23	-	-
			24	-	-

Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
B71	V	-	3	LG	-
Connector Name	REAR DOOR SWITCH LH		8	R	-
Connector Type	TH04FW-NH		9	O	-
			10	GR	-
			11	P	-
			12	W	-
			13	-	-
			14	-	-
			15	-	-
			16	-	-
			17	-	-
			18	-	-
			19	-	-
			20	-	-
			21	-	-
			22	-	-
			23	-	-
			24	-	-

Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
B34	V	-	3	LG	-
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)		8	R	-
Connector Type	TH04FW-NH		9	O	-
			10	GR	-
			11	P	-
			12	W	-
			13	-	-
			14	-	-
			15	-	-
			16	-	-
			17	-	-
			18	-	-
			19	-	-
			20	-	-
			21	-	-
			22	-	-
			23	-	-
			24	-	-

Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
B5	V	-	3	LG	-
Connector Name	WIRE TO WIRE		8	R	-
Connector Type	TH12MW-NH		9	O	-
			10	GR	-
			11	P	-
			12	W	-
			13	-	-
			14	-	-
			15	-	-
			16	-	-
			17	-	-
			18	-	-
			19	-	-
			20	-	-
			21	-	-
			22	-	-
			23	-	-
			24	-	-

Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
E12	V	-	3	LG	-
Connector Name	FROM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)		8	R	-
Connector Type	NS08BR-CS		9	O	-
			10	GR	-
			11	P	-
			12	W	-
			13	-	-
			14	-	-
			15	-	-
			16	-	-
			17	-	-
			18	-	-
			19	-	-
			20	-	-
			21	-	-
			22	-	-
			23	-	-
			24	-	-

Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
E13	V	-	3	LG	-
Connector Name	FROM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)		8	R	-
Connector Type	TH12EW-NH		9	O	-
			10	GR	-
			11	P	-
			12	W	-
			13	-	-
			14	-	-
			15	-	-
			16	-	-
			17	-	-
			18	-	-
			19	-	-
			20	-	-
			21	-	-
			22	-	-
			23	-	-
			24	-	-

Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
E11	V	-	3	LG	-
Connector Name	FROM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)		8	R	-
Connector Type	M08FB-LC		9	O	-
			10	GR	-
			11	P	-
			12	W	-
			13	-	-
			14	-	-
			15	-	-
			16	-	-
			17	-	-
			18	-	-
			19	-	-
			20	-	-
			21	-	-
			22	-	-
			23	-	-
			24	-	-

Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
EXL-80	V	-	3	LG	-
			8	R	-
			9	O	-
			10	GR	-
			11	P	-
			12	W	-
			13	-	-
			14	-	-
			15	-	-
			16	-	-
			17	-	-
			18	-	-
			19	-	-
			20	-	-
			21	-	-
			22	-	-
			23	-	-
			24	-	-

JCLWM6400GB

AUTO LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

ICLWM6401GB

AUTO LIGHT SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

AUTO LIGHT SYSTEM

Connector No.	M65
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FW-NH




Connector No.	M66
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA09FW-FHAG-SA



Connector No.	M66
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FW-NH



Connector No.	M68
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-FHAG-SA



Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
2	BR/W	COMBI SW INPUT 5	2	BR/W	COMBI SW INPUT 5
3	GR	COMBI SW INPUT 4	3	GR	COMBI SW INPUT 4
4	L/Y	COMBI SW INPUT 3	4	L/Y	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2	5	G	COMBI SW INPUT 2
6	L/R	COMBI SW INPUT 1	6	L/R	COMBI SW INPUT 1
7	W/R	KEY CYL UNLOCK SW	7	W/R	KEY CYL UNLOCK SW
8	W/B	KEY CYL LOCK SW	8	W/B	KEY CYL LOCK SW
9	R	STOP LAMP SW	9	R	STOP LAMP SW
10	W/L	REAR WIPER OUTPUT	10	W/L	REAR WIPER OUTPUT
11	L/Y	ACC	11	SB	PASSENGER DOOR SW
12	SB	PASSENGER DOOR SW	12	SB	REAR RH DOOR SW
13	GR/L	OPTICAL SENSOR POWER SUPPLY	13	W/L	REAR WINDOW DEFROGER SW
14	L/B	OPTICAL SENSOR POWER SUPPLY	14	R/G	OPTICAL SENSOR POWER SUPPLY
17	R/G	RECEIVER / SENSOR END	15	V	SENSOR END
18	V	RECEIVER / SENSOR END	16	P/L	NATS ANTENNA AMP.
19	BR	KEYLESS ENTRY RECEIVER POWER SUPPLY	17	R/Y	SECURITY INDICATOR LAMP
20	G/Y	KEYLESS ENTRY RECEIVER COMM	18	GR/R	DONGLE LINK
21	P/L	NATS ANTENNA AMP.	19	LG	NATS ANTENNA AMP.
23	R/Y	SECURITY INDICATOR LAMP	20	Y/G	A/C SW [With manual A/C]
24	GR/R	DONGLE LINK	21	Y/G	INTERIOR ROOM AMP POWER SUPPLY
25	LG	NATS ANTENNA AMP.	22	Y/G	BLOWER FAN SW
26	GR	THERMO CONTROL AMP.	23	Y/L	HAZARD SW
27	Y/G	A/C SW [With manual A/C]	24	Y/L	DR DOOR UNLOCK SENSOR
28	G/W	BLOWER FAN SW	25	Y/L	COMBI SW OUTPUT 5
29	L/W	HAZARD SW	26	Y/L	COMBI SW OUTPUT 4
31	G/Y	FR DEFROSTER SW	27	R/L	COMBI SW OUTPUT 3
32	LG	COMBI SW OUTPUT 5	28	L/O	COMBI SW OUTPUT 2
33	Y/L	COMBI SW OUTPUT 4	29	G/O	TURN SIGNAL LH OUTPUT
34	W	COMBI SW OUTPUT 3	30	W/L	TURN SIGNAL RH OUTPUT
35	R/L	COMBI SW OUTPUT 2	31	W/H	ROOM LAMP TIMER CONTROL
36	W	PASSANGER DOOR UNLOCK CONTROL	32	W/H	ALL DOOR UNLOCK CONTROL
37	R/W	COMBI SW OUTPUT 1	33	P	CAN-H
38	O	KEY SWITCH	34	Y/L	CAN-L
39	L	IGN	35	Y/L	TURN SIGNAL RH OUTPUT
40	P	CAN_L	36	Y/L	ROOM LAMP TIMER CONTROL
41	42	43	37	Y/L	ALL DOOR UNLOCK OUTPUT
43	44	45	38	Y/L	DRIVER DOOR UNLOCK OUTPUT
44	45	46	39	Y/L	TURN SIGNAL LH OUTPUT
45	46	47	40	Y/L	TURN SIGNAL RH OUTPUT
46	47	48	41	Y/L	TURN SIGNAL RH OUTPUT
47	48	49	42	Y/L	TURN SIGNAL RH OUTPUT
48	49	50	43	Y/L	TURN SIGNAL RH OUTPUT
49	50	51	44	Y/L	TURN SIGNAL RH OUTPUT
50	51	52	45	Y/L	TURN SIGNAL RH OUTPUT
51	52	53	46	Y/L	TURN SIGNAL RH OUTPUT
52	53	54	47	Y/L	TURN SIGNAL RH OUTPUT
53	54	55	48	Y/L	TURN SIGNAL RH OUTPUT
54	55	56	49	Y/L	TURN SIGNAL RH OUTPUT
55	56	57	50	Y/L	TURN SIGNAL RH OUTPUT
56	57	58	51	Y/L	TURN SIGNAL RH OUTPUT
57	58	59	52	Y/L	TURN SIGNAL RH OUTPUT
58	59	60	53	Y/L	TURN SIGNAL RH OUTPUT
59	60	61	54	Y/L	TURN SIGNAL RH OUTPUT
60	61	62	55	Y/L	TURN SIGNAL RH OUTPUT
61	62	63	56	Y/L	TURN SIGNAL RH OUTPUT
62	63	64	57	Y/L	TURN SIGNAL RH OUTPUT
63	64	65	58	Y/L	TURN SIGNAL RH OUTPUT
64	65	66	59	Y/L	TURN SIGNAL RH OUTPUT
65	66	67	60	Y/L	TURN SIGNAL RH OUTPUT
66	67	68	61	Y/L	TURN SIGNAL RH OUTPUT
67	68	69	62	Y/L	TURN SIGNAL RH OUTPUT
68	69	70	63	Y/L	TURN SIGNAL RH OUTPUT
69	70	71	64	Y/L	TURN SIGNAL RH OUTPUT
70	71	72	65	Y/L	TURN SIGNAL RH OUTPUT
71	72	73	66	Y/L	TURN SIGNAL RH OUTPUT
72	73	74	67	Y/L	TURN SIGNAL RH OUTPUT
73	74	75	68	Y/L	TURN SIGNAL RH OUTPUT
74	75	76	69	Y/L	TURN SIGNAL RH OUTPUT
75	76	77	70	Y/L	TURN SIGNAL RH OUTPUT

JCLWM6402GB

AUTO LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

A

B

C

D

E

F

G

H

I

K

EXL

M


Z

O

P

AUTO LIGHT SYSTEM

Connector No.	Wire To Wire
M77	GR/R
	O



Terminal No.	Color of Wire	Signal Name [Specification]
1	B/O	-
2	R	-
3	G/R	-
4	G/B	-
5	L	-
6	L	-
7	W/R	-
8	G/W	-
9	Y/L	-
10	W	-
31	GR/L	-
32	L/B	-
33	R/Y	-
34	SB	-
35	BR	-
36	G	-
38	L/R	-
44	G/O	-
45	LG/R	-
46	GR/W	-
48	L/O	-
51	B/W	-
53	R/L	-
54	O	-
57	GR	-
59	V	-
60	R/W	-
61	V/W	-
62	W/L	-
63	W/B	-
67	Y/R	-
69	LG	-
70	SHIELD	-
71	P/B	-
72	R/G	-
73	R	-
74	L/Y	-
76	W/G	-

Terminal No.	Wire To Wire
77	Y/L
78	G/W
79	LG
80	P
81	L
82	GR
83	G/R
84	B
87	G
91	R
92	O
93	Y
94	R/B
95	L/W
96	Y
97	L
98	B/R/W
99	W
100	G/R

Connector No.	Wire To Wire
M80	-
	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	GR/L	-
5	W	-
6	W/L	-
8	BR/Y	-
9	R/Y	-
11	O	-
13	BR/W	-
14	W/B	-
16	W/G	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	W/G	-
2	L/Y	-
3	R	-
4	P/B	-
5	W	-
8	SB	-
9	L/G	-
10	GR/B	-
11	G/B	-
12	G/R	-
13	R/G	-
15	R/L	-
16	GR/R	-
17	BR/Y	-
18	Y	-
20	GR/L	-
22	L	-

JCLWM6403GB


DAYTIME RUNNING LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

DAYTIME RUNNING LIGHT SYSTEM

Wiring Diagram - DAYTIME RUNNING LIGHT SYSTEM -

INFOID:0000000006504399

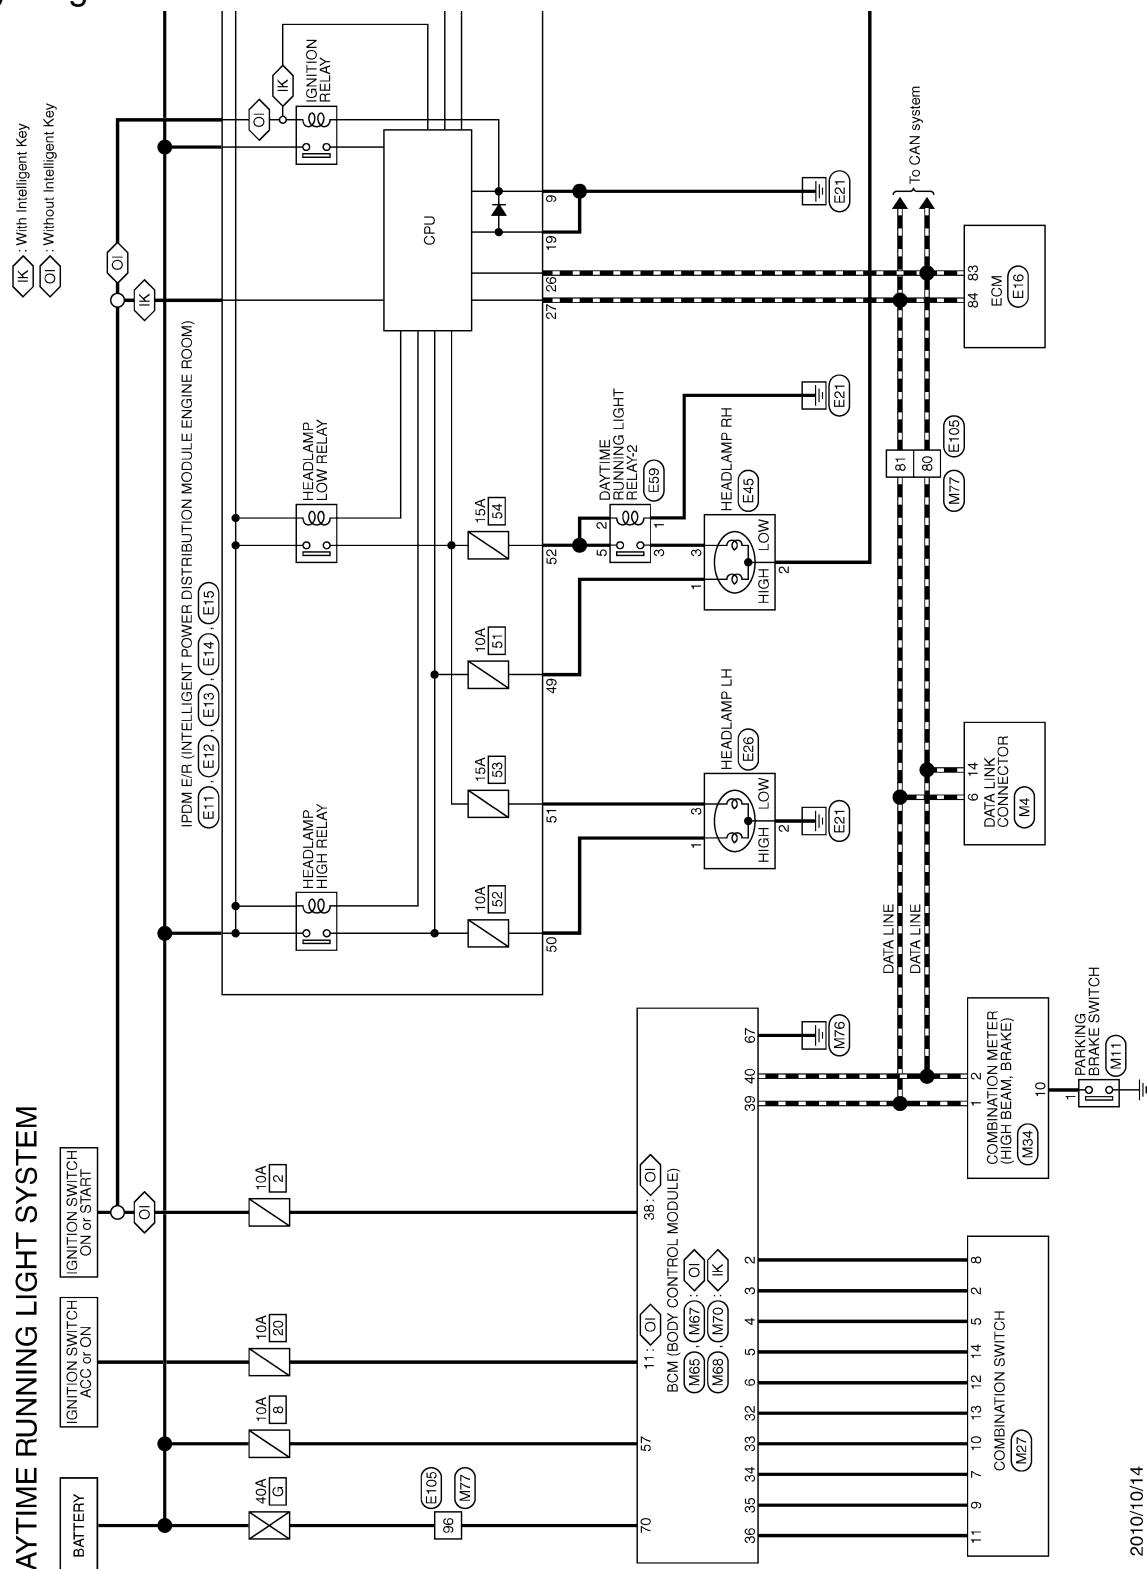


JCLWM6391GB

2010/10/14

DAYTIME RUNNING LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

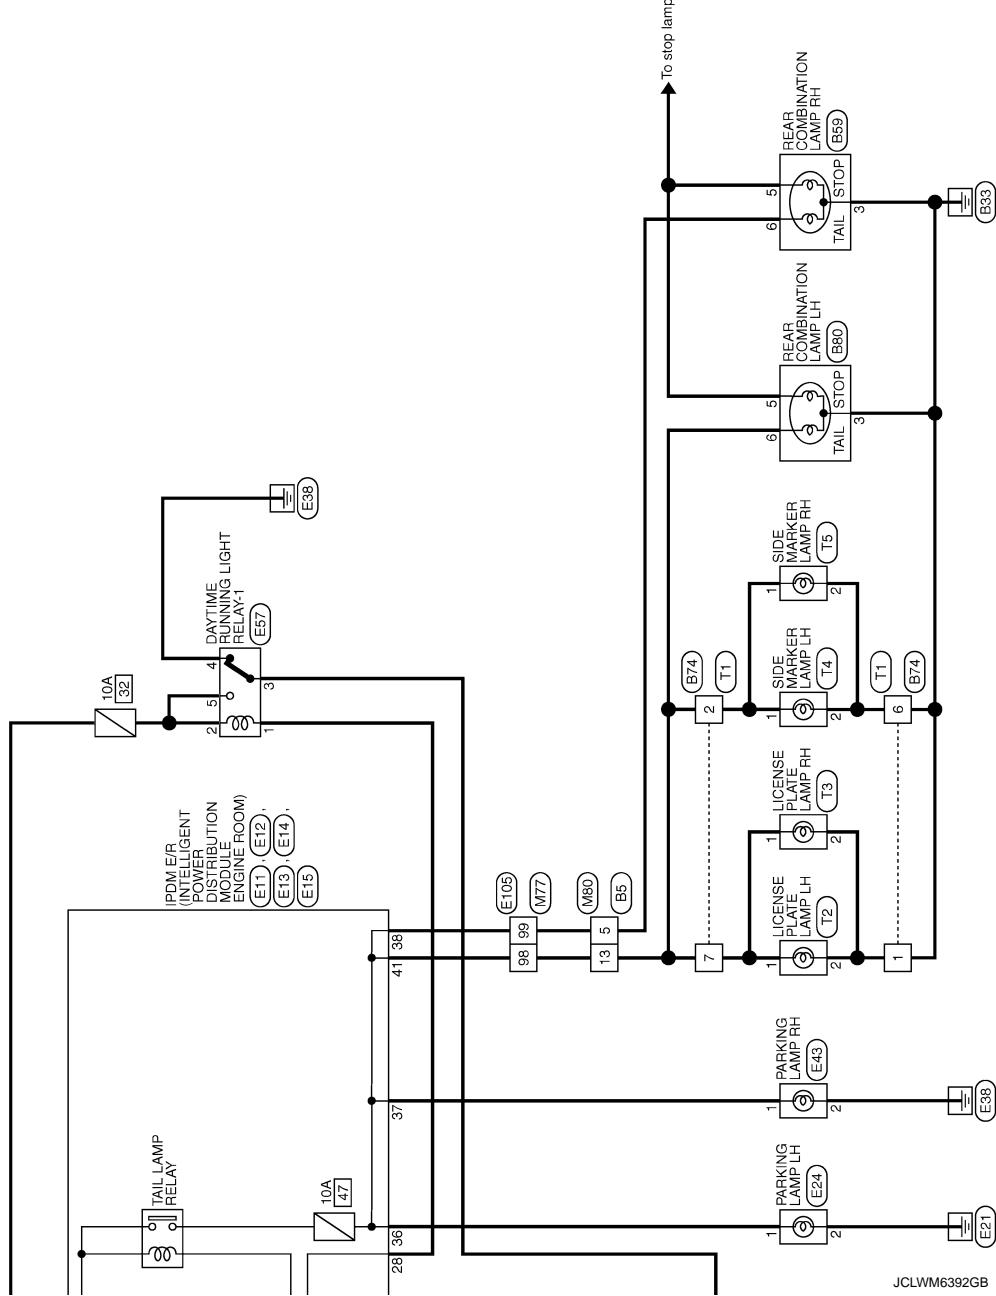

JCLWM6392GB

DAYTIME RUNNING LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

DAYTIME RUNNING LIGHT SYSTEM


Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Type	TH15MW-NH
	

Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	GR	-
5	V	-
6	W	-
8	LG	-
9	R	-
11	O	-
13	GR	-
14	P	-
16	W	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
2	GR	-
6	B	-
7	GR	-




Terminal No.	B74
Connector Name	WIRE TO WIRE
Connector Type	RH10FB




Terminal No.	B80
Connector Name	REAR COMBINATION LAMP LH
Connector Type	RS20FEE-FR




Terminal No.	E11
Connector Name	INPUT E/I INTELLIGENT POWER DISTRIBUTION MODULE (SHINE ROOM)
Connector Type	M08FB-LC



Terminal No.	E12
Connector Name	INPUT E/I INTELLIGENT POWER DISTRIBUTION MODULE (SHINE ROOM)
Connector Type	NS12FBR-CS




Terminal No.	E13
Connector Name	INPUT E/I INTELLIGENT POWER DISTRIBUTION MODULE (SHINE ROOM)
Connector Type	TH12FW-NH



DAYTIME RUNNING LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

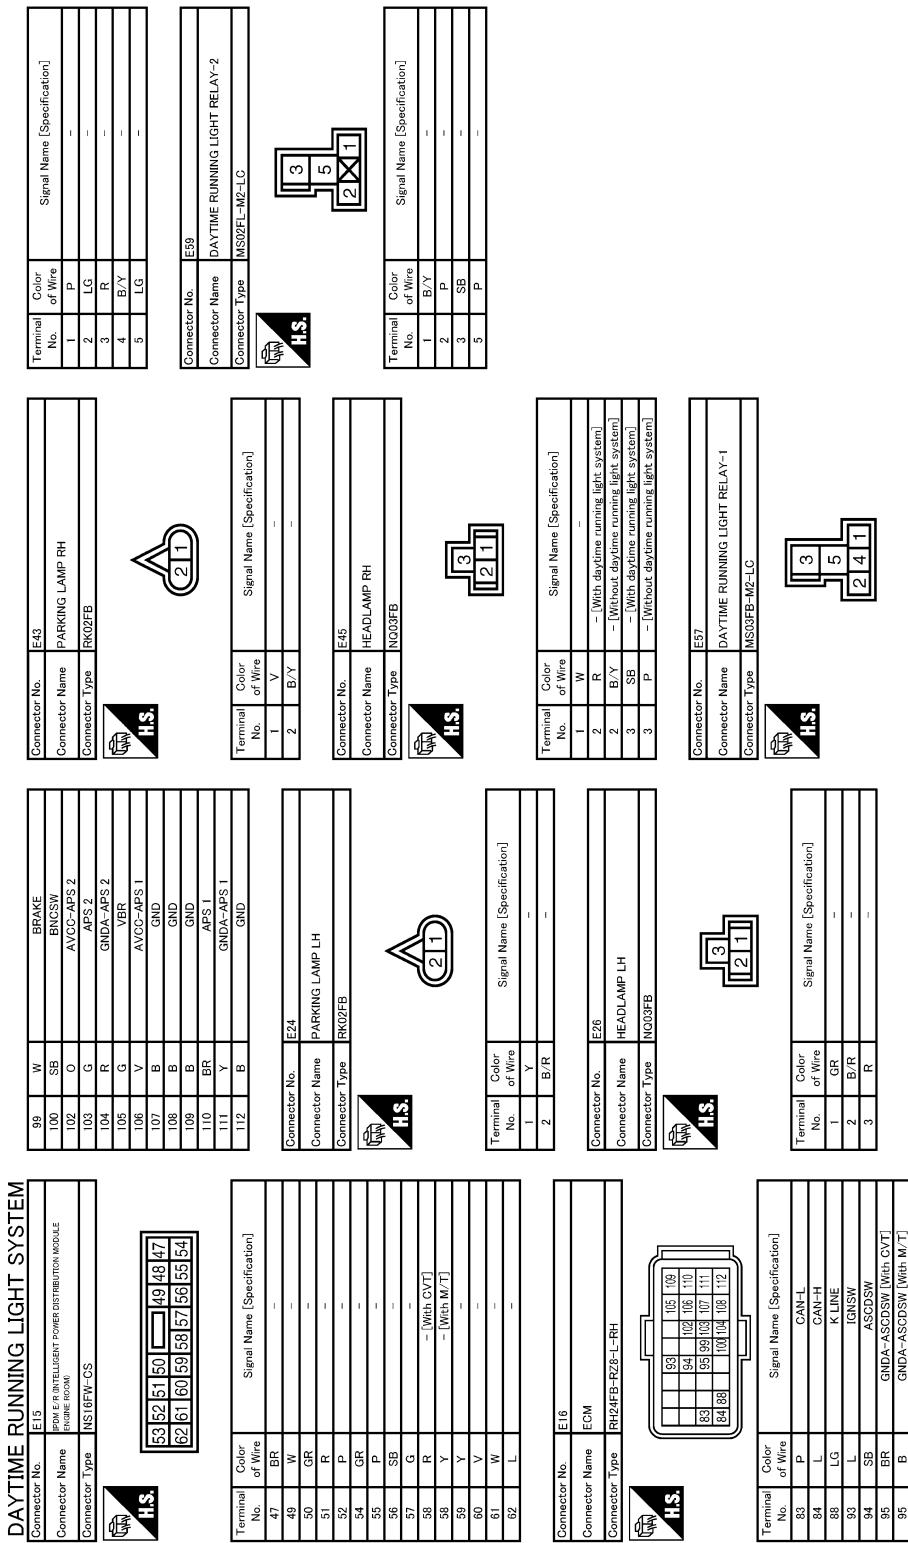

ICL WM6394GB

DAYTIME RUNNING LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

DAYTIME RUNNING LIGHT SYSTEM

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	SB	-
4	G	-
5	P	-
6	L	- [With NAVI] - [Without NAVI]
7	R	-
8	O	-
9	W	-
10	SB	-
31	V	-
32	R	-
33	GR	-
34	P	-
35	Y	-
36	BR	-
39	SB	-
44	R	-
45	V	-
46	P	-
48	L	-
51	BR	- [With CVT] - [With M/T]
51	B	- [With M/T]
53	SB	-
54	W	- [With CVT] - [With M/T]
57	LG	-
59	L	-
60	O	-
61	G	-
62	W	-
63	L	-
67	GR	- [With CVT] - [With M/T]
68	P	-
70	SHIELD	-
71	GR	-

Connector No.	M11
Connector Name	PARKING BRAKE SWITCH
Connector Type	P01FB-A



Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-
2	W	-
3	P	-
4	V	-
5	R	-
6	Y	-
7	GR	-
8	LG	-
9	BR	-
10	SB	-
11	GR	-
12	LG	-
13	BR	-
14	SB	-
15	GR	-
16	LG	-
17	BR	-
18	Y	-
19	V/N	-
20	R/N	-
21	B	-
22	GR	-
23	B	-
24	V	-
25	GR	-
27	LG	-
28	GR	-
29	BR	-
30	W	-
31	R	-
32	GR	-
33	LG	-
34	Y	-
35	BR	-
36	SB	-
37	GR	-
38	LG	-
39	BR	-
40	SB	-
41	GR	-
42	LG	-
43	BR	-
44	SB	-
45	GR	-
46	LG	-
47	BR	-
48	SB	-
49	GR	-
50	LG	-
51	BR	-
52	SB	-
53	GR	-
54	LG	-
55	BR	-
56	SB	-
57	GR	-
58	LG	-
59	BR	-
60	SB	-
61	GR	-
62	LG	-
63	BR	-
64	SB	-
65	GR	-
66	LG	-
67	BR	-
68	SB	-
69	GR	-
70	LG	-
71	BR	-



Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	P	-
3	V	-
4	R	-
5	Y	-
6	GR	-
7	LG	-
8	BR	-
9	SB	-
10	GR	-
11	LG	-
12	BR	-
13	SB	-
14	GR	-
15	LG	-
16	BR	-
17	SB	-
18	GR	-
19	LG	-
20	BR	-
21	SB	-
22	GR	-
23	LG	-
24	BR	-
25	SB	-
26	GR	-
27	LG	-
28	BR	-
29	SB	-
30	GR	-
31	LG	-
32	BR	-
33	SB	-
34	GR	-
35	LG	-
36	BR	-
37	SB	-
38	GR	-
39	LG	-
40	BR	-
41	SB	-
42	GR	-
43	LG	-
44	BR	-
45	SB	-
46	GR	-
47	LG	-
48	BR	-
49	SB	-
50	GR	-
51	LG	-
52	BR	-
53	SB	-
54	GR	-
55	LG	-
56	BR	-
57	SB	-
58	GR	-
59	LG	-
60	BR	-
61	SB	-
62	GR	-
63	LG	-
64	BR	-
65	SB	-
66	GR	-
67	LG	-
68	BR	-
69	SB	-
70	GR	-
71	LG	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	P	-
3	V	-
4	R	-
5	Y	-
6	GR	-
7	LG	-
8	BR	-
9	SB	-
10	GR	-
11	LG	-
12	BR	-
13	SB	-
14	GR	-
15	LG	-
16	BR	-
17	SB	-
18	GR	-
19	LG	-
20	BR	-
21	SB	-
22	GR	-
23	LG	-
24	BR	-
25	SB	-
26	GR	-
27	LG	-
28	BR	-
29	SB	-
30	GR	-
31	LG	-
32	BR	-
33	SB	-
34	GR	-
35	LG	-
36	BR	-
37	SB	-
38	GR	-
39	LG	-
40	BR	-
41	SB	-
42	GR	-
43	LG	-
44	BR	-
45	SB	-
46	GR	-
47	LG	-
48	BR	-
49	SB	-
50	GR	-
51	LG	-
52	BR	-
53	SB	-
54	GR	-
55	LG	-
56	BR	-
57	SB	-
58	GR	-
59	LG	-
60	BR	-
61	SB	-
62	GR	-
63	LG	-
64	BR	-
65	SB	-
66	GR	-
67	LG	-
68	BR	-
69	SB	-
70	GR	-
71	LG	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	P	-
3	V	-
4	R	-
5	Y	-
6	GR	-
7	LG	-
8	BR	-
9	SB	-
10	GR	-
11	LG	-
12	BR	-
13	SB	-
14	GR	-
15	LG	-
16	BR	-
17	SB	-
18	GR	-
19	LG	-
20	BR	-
21	SB	-
22	GR	-
23	LG	-
24	BR	-
25	SB	-
26	GR	-
27	LG	-
28	BR	-
29	SB	-
30	GR	-
31	LG	-
32	BR	-
33	SB	-
34	GR	-
35	LG	-
36	BR	-
37	SB	-
38	GR	-
39	LG	-
40	BR	-
41	SB	-
42	GR	-
43	LG	-
44	BR	-
45	SB	-
46	GR	-
47	LG	-
48	BR	-
49	SB	-
50	GR	-
51	LG	-
52	BR	-
53	SB	-
54	GR	-
55	LG	-
56	BR	-
57	SB	-
58	GR	-
59	LG	-
60	BR	-
61	SB	-
62	GR	-
63	LG	-
64	BR	-
65	SB	-
66	GR	-
67	LG	-
68	BR	-
69	SB	-
70	GR	-
71	LG	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	P	-
3	V	-
4	R	-
5	Y	-
6	GR	-
7	LG	-
8	BR	-
9	SB	-
10	GR	-
11	LG	-
12	BR	-
13	SB	-
14	GR	-
15	LG	-
16	BR	-
17	SB	-
18	GR	-
19	LG	-
20	BR	-
21	SB	-
22	GR	-
23	LG	-
24	BR	-
25	SB	-
26	GR	-
27	LG	-
28	BR	-
29	SB	-
30	GR	-
31	LG	-
32	BR	-
33	SB	-
34	GR	-
35	LG	-
36	BR	-
37	SB	-
38	GR	-
39	LG	-
40	BR	-
41	SB	-
42	GR	-
43	LG	-
44	BR	-
45	SB	-
46	GR	-
47	LG	-
48	BR	-
49	SB	-
50	GR	-
51	LG	-
52	BR	-
53	SB	-
54	GR	-
55	LG	-
56	BR	-
57	SB	-
58	GR	-
59	LG	-
60	BR	-
61	SB	-
62	GR	-
63	LG	-
64	BR	-
65	SB	-
66	GR	-
67		

DAYTIME RUNNING LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

A

B

C

D

E

F

G

H

I

J

K

EXL

M

Z

O

P

DAYTIME RUNNING LIGHT SYSTEM

Connector No.	M65	BCM (BODY CONTROL MODULE)
Connector Name	BCM (BODY CONTROL MODULE)	BCM (BODY CONTROL MODULE)
Connector Type	TH4DFW-NH	TH4DFW-NH
		
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 [1] [2] [3] [4] [5] [6] [7] [8] [9] [10] [11] [12] [13] [14] [15] [16] [17] [18] [19]	56 57 58 59 60 61 62 63 64 [6] [6] [6] [6] [6] [6] [6] [6] [6] [6]	65 66 67 68 69 70

Terminal Color No.	Wire	Signal Name [Specification]	Terminal Color No.	Wire	Signal Name [Specification]
2	BR/W	COMBI SW INPUT 5	56	L	INTERIOR ROOM LAMP POWER SUPPLY
3	GR	COMBI SW INPUT 4	57	Y	BAT (FUSE)
4	L/Y	COMBI SW INPUT 3	59	L/B	DRIVER DOOR UNLOCK OUTPUT
5	G	COMBI SW INPUT 2	60	W/B	TURN SIGNAL LH OUTPUT
6	L/R	COMBI SW INPUT 1	61	W/L	TURN SIGNAL RH OUTPUT
7	W/R	KEY CYL UNLOCK SW	63	BR	ROOM LAMP TIMER CONTROL
8	W/B	KEY CYL LOCK SW	65	V	ALL DOOR LOCK OUTPUT
9	R	STOP LAMP SW	66	G	PASSENGER DOOR, REAR DOOR UNLOCK OUTPUT
10	W/L	REAR WINDOW DEFROGER SW	67	B	GND
11	L/Y	ACC	68	L	POWER WINDOW POWER SUPPLY (IGN)
12	SB	PASSENGER DOOR SW	69	L/W	POWER WINDOW POWER SUPPLY (BAT)
13	GR/L	REAR RH DOOR SW	70	Y	BAT (FL)
14	L/B	OPTICAL SENSOR POWER SUPPLY			
15	R/G	OPTICAL SENSOR POWER SUPPLY			
16	V	RECEIVER / SENSOR END			
17	BR	KEYLESS ENTRY RECEIVER POWER SUPPLY			
18	Y/G	KEYLESS ENTRY RECEIVER COMM			
19	LG	NATS ANTENNA AMP			
20	GR	THMRO CONTROL AMP.			
21	P/L	A/C SW (With manual A/C)			
22	Y/R	NATS ANTENNA AMP			
23	R/Y	SECURITY INDICATOR LAMP			
24	GR/R	DONGLE LINK			
25	LG	NATS ANTENNA AMP			
26	GR	THMRO CONTROL AMP.			
27	Y/G	A/C SW (With manual A/C)			
28	G/W	BLOWER FAN SW			
29	L/W	HAZARD SW			
30	GR/Y	F/F DEFROSTER SW			
31	LG	COMBI SW OUTPUT 5			
32	Y/L	COMBI SW OUTPUT 4			
33	W	COMBI SW OUTPUT 3			
34	R/L	COMBI SW OUTPUT 2			
35	L/O	COMBI SW OUTPUT 1			
36	R/W	KEY SWITCH			
37	O	IGN			
38	L	CAN-H			
39	P	CAN-L			
40					

Connector No.	M67	BCM (BODY CONTROL MODULE)
Connector Name	BCM (BODY CONTROL MODULE)	BCM (BODY CONTROL MODULE)
Connector Type	FEA9gFB-FHAB-SA	FEA9gFB-FHAB-SA
		
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 [1] [2] [3] [4] [5] [6] [7] [8] [9] [10] [11] [12] [13] [14] [15] [16] [17] [18] [19]	56 57 58 59 60 61 62 63 64 [6] [6] [6] [6] [6] [6] [6] [6] [6]	65 66 67 68 69 70

Terminal Color No.	Wire	Signal Name [Specification]	Terminal Color No.	Wire	Signal Name [Specification]
23	BR/W	COMBI SW INPUT 5	2	BR/W	COMBI SW INPUT 5
24	GR	COMBI SW INPUT 4	3	GR	COMBI SW INPUT 4
25	L/Y	COMBI SW INPUT 3	4	L/Y	COMBI SW INPUT 3
26	G	COMBI SW INPUT 2	5	G	COMBI SW INPUT 2
27	L/R	COMBI SW INPUT 1	6	L/R	COMBI SW INPUT 1
28	W/R	KEY CYL UNLOCK SW	7	W/R	KEY CYL UNLOCK SW
29	S/W	KEY CYL LOCK SW	8	W/B	KEY CYL LOCK SW
30	R	STOP LAMP SW	9	R	STOP LAMP SW
31	BR	CENTRAL DOOR UNLOCK SW	12	GR	CENTRAL DOOR UNLOCK SW
32	BR	CENTRAL DOOR UNLOCK SW	13	BR	CENTRAL DOOR UNLOCK SW

Terminal Color No.	Wire	Signal Name [Specification]	Terminal Color No.	Wire	Signal Name [Specification]
36	BR	INTERIOR ROOM LAMP POWER SUPPLY	56	L	INTERIOR ROOM LAMP POWER SUPPLY
37	BR	INTERIOR ROOM LAMP POWER SUPPLY	57	Y	INTERIOR ROOM LAMP POWER SUPPLY
38	BR	INTERIOR ROOM LAMP POWER SUPPLY	58	Y	INTERIOR ROOM LAMP POWER SUPPLY
39	BR	INTERIOR ROOM LAMP POWER SUPPLY	59	Y	INTERIOR ROOM LAMP POWER SUPPLY
40	BR	INTERIOR ROOM LAMP POWER SUPPLY	60	Y	INTERIOR ROOM LAMP POWER SUPPLY
41	BR	INTERIOR ROOM LAMP POWER SUPPLY	61	Y	INTERIOR ROOM LAMP POWER SUPPLY
42	BR	INTERIOR ROOM LAMP POWER SUPPLY	62	Y	INTERIOR ROOM LAMP POWER SUPPLY
43	BR	INTERIOR ROOM LAMP POWER SUPPLY	63	Y	INTERIOR ROOM LAMP POWER SUPPLY
44	BR	INTERIOR ROOM LAMP POWER SUPPLY	64	Y	INTERIOR ROOM LAMP POWER SUPPLY
45	BR	INTERIOR ROOM LAMP POWER SUPPLY	65	Y	INTERIOR ROOM LAMP POWER SUPPLY
46	BR	INTERIOR ROOM LAMP POWER SUPPLY	66	Y	INTERIOR ROOM LAMP POWER SUPPLY
47	BR	INTERIOR ROOM LAMP POWER SUPPLY	67	Y	INTERIOR ROOM LAMP POWER SUPPLY
48	BR	INTERIOR ROOM LAMP POWER SUPPLY	68	Y	INTERIOR ROOM LAMP POWER SUPPLY
49	BR	INTERIOR ROOM LAMP POWER SUPPLY	69	Y	INTERIOR ROOM LAMP POWER SUPPLY
50	BR	INTERIOR ROOM LAMP POWER SUPPLY	70	Y	INTERIOR ROOM LAMP POWER SUPPLY

JCLWM6396GB

DAYTIME RUNNING LIGHT SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

DAYTIME RUNNING LIGHT SYSTEM

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH8DFW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	B/O	-	95	L/W	-
2	R	-	96	Y	-
3	G/R	-	97	L	-
4	G/B	-	98	BR/W	-
5	L	-	99	W	-
6	L	-	100	G/R	-
7	W/R	-	94	R/B	-
8	G/W	-	95	L/W	-
9	Y/L	-	96	Y	-
10	W	-	97	L	-
31	GR/L	-	98	BR/W	-
32	L/B	-	99	W	-
33	R/Y	-	100	G/R	-
34	SB	-	94	R/B	-
35	BR	-	95	L/W	-
36	G	-	96	Y	-
39	L/R	-	97	L	-
44	G/O	-	98	BR/W	-
45	L/G/R	-	99	W	-
46	GR/W	-	100	G/R	-
48	L/O	-	94	R/B	-
51	B/W	-	95	L/W	-
53	R/L	-	96	Y	-
54	O	-	97	L	-
57	GR	-	98	BR/Y	-
59	Y	-	99	R/Y	-
60	R/W	-	100	O	-
61	V/W	-	94	W/L	-
62	W/L	-	95	BR/W	-
63	W/B	-	96	W/B	-
67	Y/R	-	97	W/G	-
69	L/G	-	98	SHIELD	-
70	SHIELD	-	99	P/B	-
71	P/B	-	100	R/G	-
72	R/G	-	94	R	-
73	R	-	95	L/Y	-
74	L/Y	-	96	W/G	-

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	L/B	-	2	BR/L	-
2	GR/L	-	5	W	-
6	W/L	-	6	W/L	-
8	BR/Y	-	7	Y	-
9	R/Y	-	11	O	-
13	BR/W	-	14	W/B	-
16	W/G	-	17	2	-

JCLWM6397GB


FRONT FOG LAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

FRONT FOG LAMP SYSTEM

Wiring Diagram - FRONT FOG LAMP -

INFOID:0000000006504400

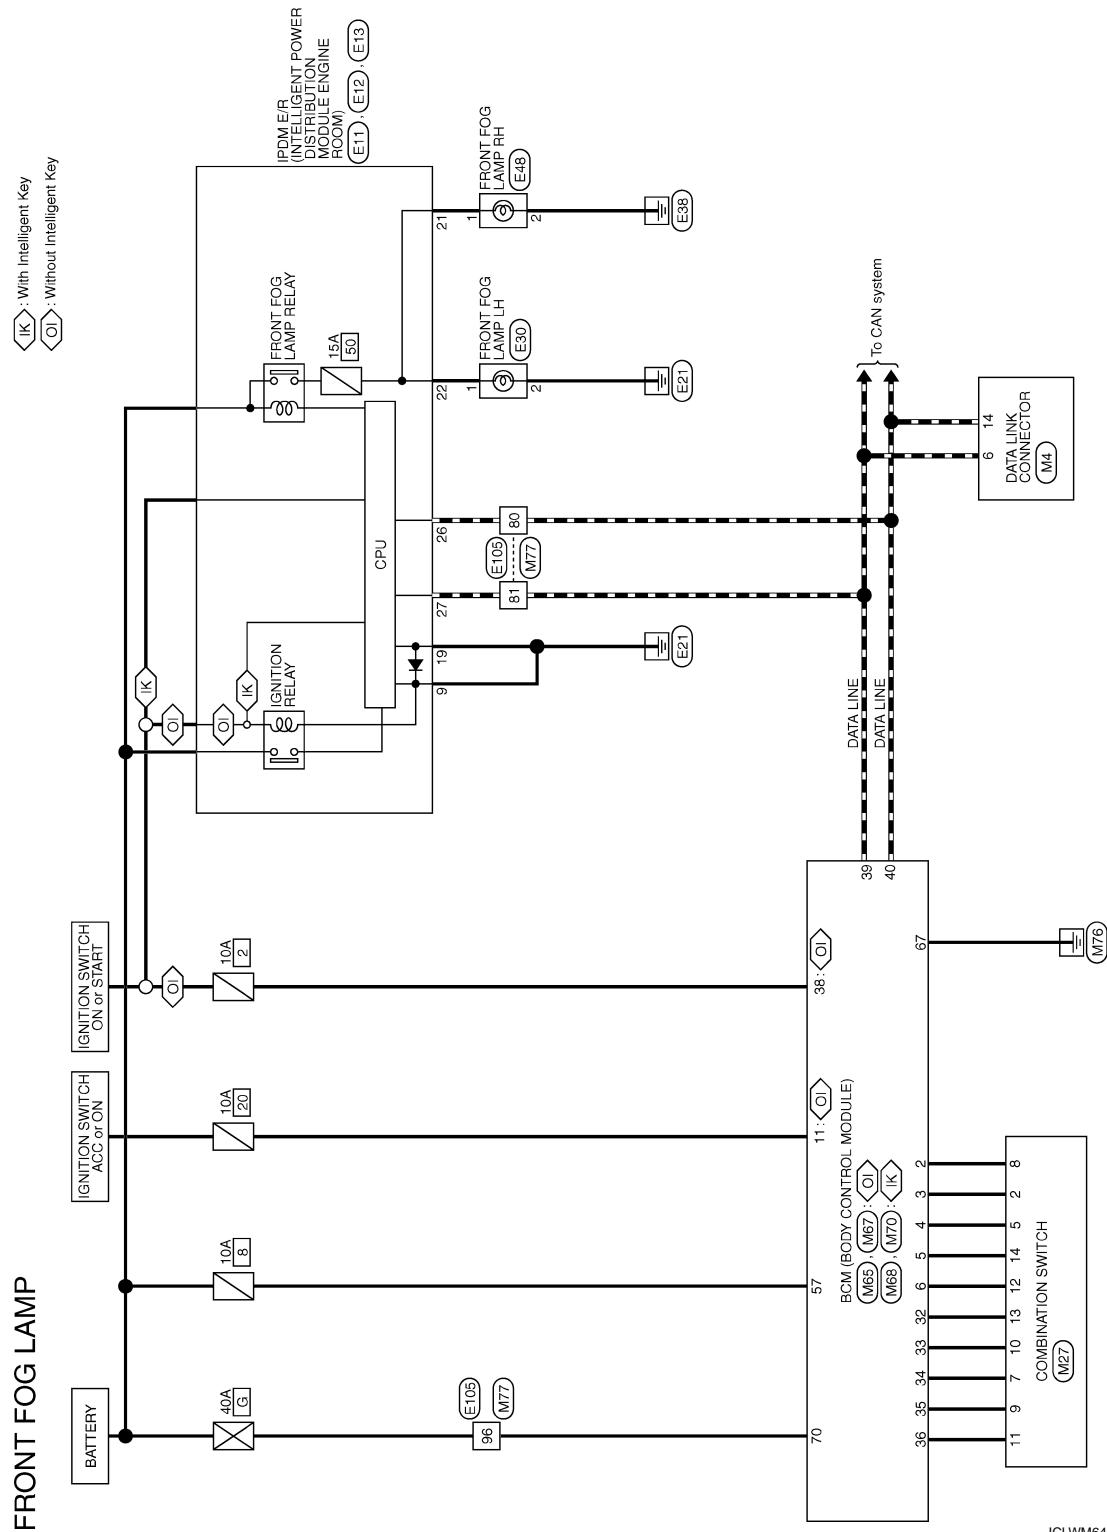

JCLWM6404GB

2010/10/14

FRONT FOG LAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

FRONT FOG LAMP

Connector No.	E11
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	M06FB-LC



Terminal No.	Color of Wire	Signal Name [Specification]
24	LG	-
25	Y	-
26	P	-
27	L	-
28	P	-
30	SB	-
31	W	-
33	O	-
34	R	-



Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CSI6-TM4

71 GR -

No.	Color terminal No.	Color of Wire	Signal Name [Specification]
1	V	-	
2	W	-	
3	SB	-	
4	G	-	
5	P	-	
6	L	-	[With NAVI]
6	R	-	[Without NAVI]
7	Y	-	
8	O	-	
9	W	-	
10	SB	-	
31	V	-	
32	R	-	
33	GR	-	


		
Connector No.	E30	
Connector Name	FRONT FOG LAMP LH	
Connector Type		



terminal No.	Color of Wire	Signal Name [Specification]
9	B/W	-
10	L	-
13	W	-




Terminal No.	Color of Wire	Signal Name [Specification]
18	Y	-
19	B/W	-
21	W	-
22	V	-



ICLWM6405GB

FRONT FOG LAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

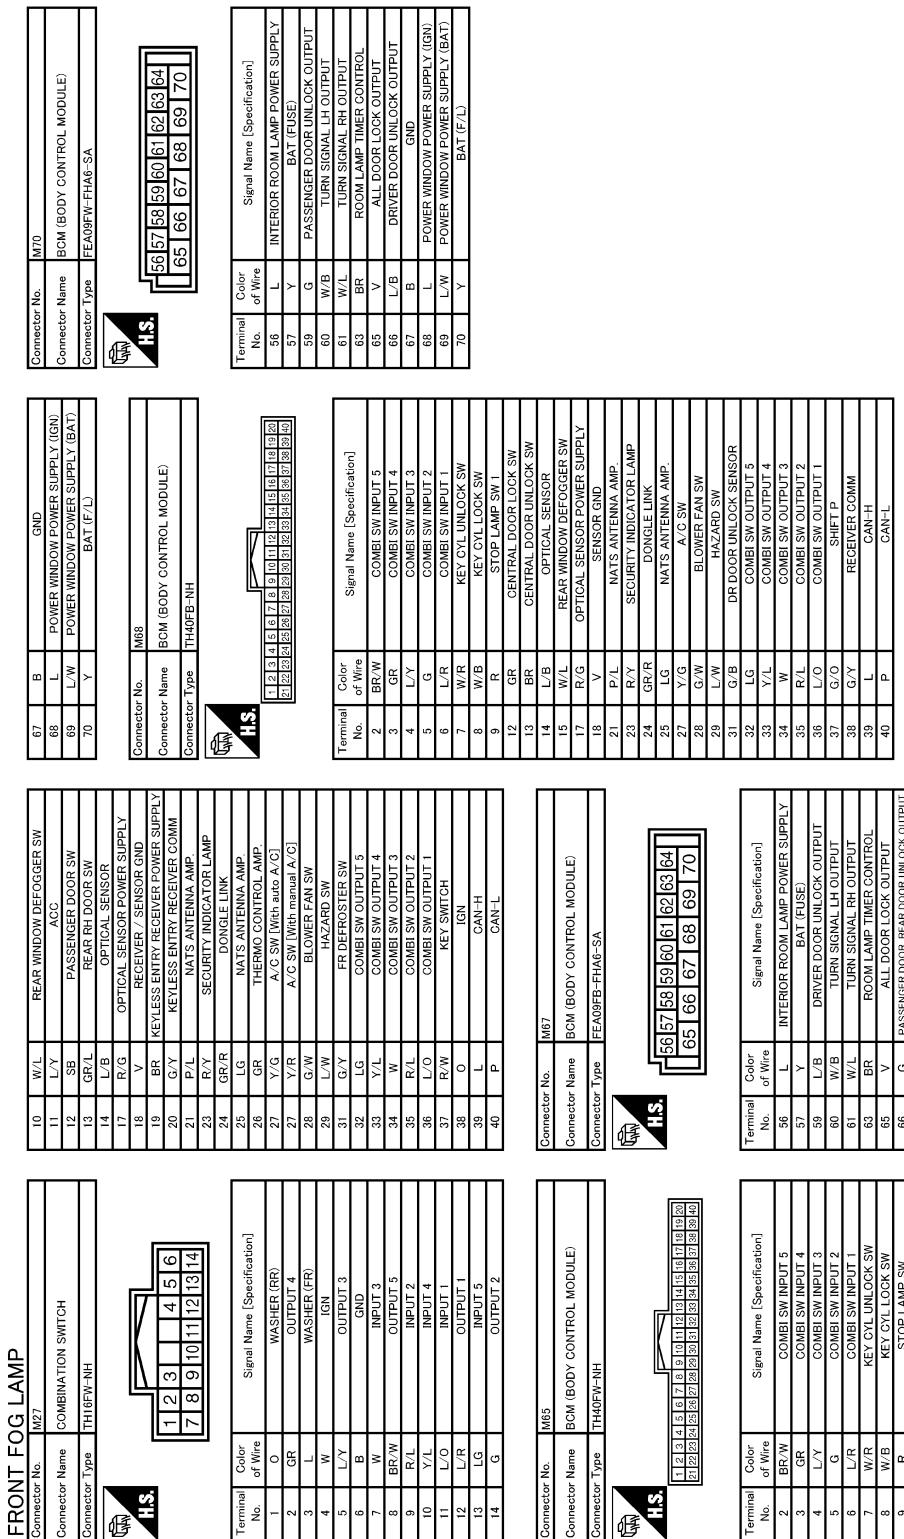

ICL WM6406GB

FRONT FOG LAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

FRONT FOG LAMP	
Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	THBDFW-CS16-TM4
	
Terminal No.	Signal Name [Specification]
1	B/O
2	R
3	G/R
4	G/B
5	L
6	L
7	W/R
8	G/W
9	Y/L
10	W
31	GR/L
32	L/B
33	R/Y
34	SB
35	BR
36	G
39	L/R
44	G/O
45	LG/R
46	GR/W
48	L/O
51	B/W
53	R/L
54	O
57	GR
59	V
60	R/W
61	V/W
62	W/L
63	W/B
67	Y/R
69	LG
70	SHIELD
71	P/B
72	R/G
73	R
74	L/Y
76	W/G

JCLWM6407GB

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

Wiring Diagram - TURN AND HAZARD WARNING LAMPS -

INFOID:0000000006504401

TURN SIGNAL AND HAZARD WARNING LAMPS

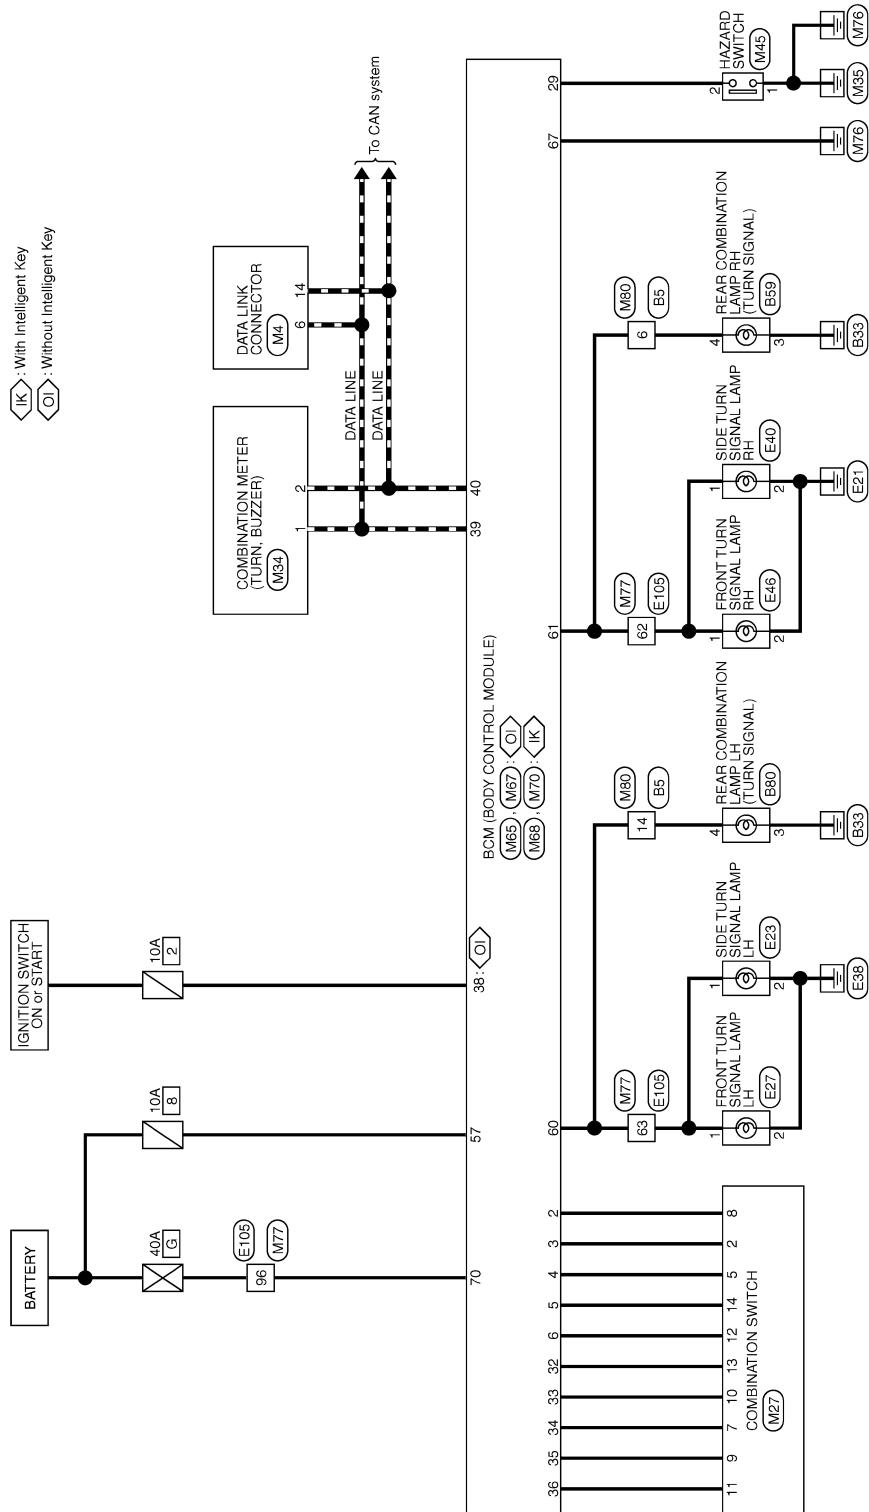

JCLWM6408GB

2010/10/14

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

TURN SIGNAL AND HAZARD WARNING LAMPS	
Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Type	TH1BMW-NH
	
Terminal No.	Signal Name [Specification]
1 V	-
2 GR	-
5 V	-
6 W	-
8 LG	-
9 R	-
11 O	-
13 GR	-
14 P	-
16 W	-

REAR COMBINATION LAMP LH	
Connector No.	E60
Connector Name	REAR COMBINATION LAMP LH
Connector Type	RS20FB-PR
	
Terminal No.	Color of Wire Signal Name [Specification]
1 Y	-
3 B	-
4 P	-
5 R	-
6 GR	-
7 W	-
8 G	-

SIDE TURN SIGNAL LAMP RH	
Connector No.	E40
Connector Name	SIDE TURN SIGNAL LAMP RH
Connector Type	STL02FW
	
Terminal No.	Color of Wire Signal Name [Specification]
1 W	-
2 B/Y	-

FRONT TURN SIGNAL LAMP RH	
Connector No.	E46
Connector Name	FRONT TURN SIGNAL LAMP RH
Connector Type	RS20FB
	
Terminal No.	Color of Wire Signal Name [Specification]
1 W	-
2 B/Y	-

FRONT TURN SIGNAL LAMP LH	
Connector No.	E23
Connector Name	SIDE TURN SIGNAL LAMP LH
Connector Type	STL02FW
	
Terminal No.	Color of Wire Signal Name [Specification]
1 W	-
2 B/Y	-

REAR COMBINATION LAMP RH	
Connector No.	B59
Connector Name	REAR COMBINATION LAMP RH
Connector Type	RS20FB-PR
	
Terminal No.	Color of Wire Signal Name [Specification]
1 Y	-
3 B	-
4 W	-
5 R	-
6 V	-
7 G	-
8 G	-

FRONT TURN SIGNAL LAMP LH	
Connector No.	E27
Connector Name	FRONT TURN SIGNAL LAMP LH
Connector Type	RS20FB
	
Terminal No.	Color of Wire Signal Name [Specification]
1 W	-
2 B/Y	-

JCLWM6409GB

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

TURN SIGNAL AND HAZARD WARNING LAMPS

Connector No. E106

Connector Name WIRE TO WIRE

Connector Type THB0MW-CS16-TM4



TURN SIGNAL AND HAZARD WARNING LAMPS

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
72	LG	-	10	SB	PARKING BRAKE SWITCH SIGNAL
73	P	-	11	G/R	BRAKE FLUID LEVEL SWITCH SIGNAL
74	V	-	13	B/R	ILLUMINATION CONTROL SIGNAL
76	Y	-	15	L/Y	ACC POWER SUPPLY
77	LG	-	17	G	WASHER LEVEL SWITCH SIGNAL
78	O	-	18	R/Y	SECURITY SIGNAL
79	G	-	19	V/W	AMBIENT SENSOR SIGNAL
80	P	-	20	R/W	AMBIENT SENSOR GROUND
81	L	-	21	B	GROUND
82	W	-	22	B	GROUND
83	BR	-	23	B	GROUND
84	B	-	24	V	FUEL LEVEL SENSOR GROUND
87	GR	-	25	B	VDC GROUND
91	W	-	27	LG	BATTERY POWER SUPPLY
92	Y	-	28	GF	IGNITION SIGNAL
93	Y	-	29	GR	PASSENGER SEAT BELT WARNING SIGNAL
94	R	-	31	R	A/C AUTO/AIR CONNEC/TION RECOGNITION SIGNAL
95	V	-	35	BR	ENGINE COOLANT TEMPERATURE SIGNAL
96	LG	-	38	GR	ALTERNATOR SIGNAL
97	R	-			
98	SB	-			
99	G	-			
100	P	-			

TURN SIGNAL AND HAZARD WARNING LAMPS

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-	1	O	WASHER (FR)
2	W	-	2	GR	OUTPUT 4
3	SB	-	3	L	WASHER (FR)
4	G	-	4	W	IGN
5	P	-	5	L/Y	OUTPUT 3
6	L	- [With NAVI] - [Without NAVI]	6	B	GND
6	R	- [With NAVI] - [Without NAVI]	7	W	INPUT 3
7	Y	-	8	BR/W	OUTPUT 5
8	O	-	9	R/L	INPUT 2
9	W	-	10	Y/L	INPUT 4
10	SB	-	11	L/O	INPUT 1
31	V	-	12	L/R	OUTPUT 1
32	R	-	13	LG	INPUT 5
33	GR	-	14	G	OUTPUT 2

TURN SIGNAL AND HAZARD WARNING LAMPS

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
14	B	- [With CVT] - [With M/T]	15	LG	COMBINATION METER
45	V	-	16	LG	COMBINATION METER
46	P	-			
48	L	-			
51	BR	- [With CVT] - [With M/T]			
53	B	-			
54	W	- [With CVT] - [With M/T]			
54	O	- [With M/T]			
57	LG	-			
59	L	-			
60	O	-			
61	G	-			
62	W	-			
63	L	-			
67	GR	- [With CVT] - [With M/T]			
67	V	- [With M/T]			
69	P	-			
70	SHEILD	-			
71	GR	-			

TURN SIGNAL AND HAZARD WARNING LAMPS

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
4	B	-	1	L	CAN-H
5	B	-	2	P	VEHICLE SPEED SIGNAL (2-PULSE)
6	L	-	3	V	VEHICLE SPEED SIGNAL (8-PULSE)
7	GR/R	-	4	L	FUEL LEVEL SENSOR SIGNAL
8	O	-	6	BR/Y	AIR BAG SIGNAL
14	P	-	7	R/G	OVERDRIVE CONTROL SWITCH SIGNAL
16	LG/R	-	8	P	SEATBELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
			9	O	

JCLWM6410GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q
R
S
T
U
V
W
X
Y
Z
EXL

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

TURN SIGNAL AND HAZARD WARNING LAMPS

Connector No.	M65	Signal Name [Specification]
Connector Name	BCM (BODY CONTROL MODULE)	
Connector Type	TH40FW-NH	
		
1	1	KEY CYL LOCK SW
2	2	STOP/LAMP SW
3	3	REAR WINDOW DEFROGER SW
4	4	ACC
5	5	PASSENGER DOOR SW
6	6	REAR RH DOOR SW
7	7	REAR LH DOOR SW
8	8	OPTICAL SENSOR
9	9	RECEIVER / SENSOR END
10	10	KEYLESS ENTRY RECEIVER POWER SUPPLY
11	11	KEYLESS ENTRY RECEIVER COMM
12	12	REAR DOOR UNLOCK OUTPUT
13	13	POWER WINDOW POWER SUPPLY (IGN)
14	14	POWER WINDOW POWER SUPPLY (BAT)
15	15	REAR RH DOOR UNLOCK OUTPUT
16	16	REAR LH DOOR UNLOCK OUTPUT
17	17	OPTICAL SENSOR POWER SUPPLY
18	18	RECEIVER / SENSOR END
19	19	KEYLESS ENTRY RECEIVER POWER SUPPLY
20	20	KEYLESS ENTRY RECEIVER COMM
21	21	REAR DOOR UNLOCK OUTPUT
22	22	REAR LH DOOR UNLOCK OUTPUT
23	23	REAR RH DOOR UNLOCK OUTPUT
24	24	OPTICAL SENSOR POWER SUPPLY
25	25	RECEIVER / SENSOR END
26	26	KEYLESS ENTRY RECEIVER POWER SUPPLY
27	27	KEYLESS ENTRY RECEIVER COMM
28	28	REAR DOOR UNLOCK OUTPUT
29	29	REAR LH DOOR UNLOCK OUTPUT
30	30	REAR RH DOOR UNLOCK OUTPUT
31	31	OPTICAL SENSOR POWER SUPPLY
32	32	RECEIVER / SENSOR END
33	33	KEYLESS ENTRY RECEIVER POWER SUPPLY
34	34	KEYLESS ENTRY RECEIVER COMM
35	35	REAR DOOR UNLOCK OUTPUT
36	36	REAR LH DOOR UNLOCK OUTPUT
37	37	REAR RH DOOR UNLOCK OUTPUT
38	38	OPTICAL SENSOR POWER SUPPLY
39	39	RECEIVER / SENSOR END
40	40	KEYLESS ENTRY RECEIVER POWER SUPPLY

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
2	BR/W	COMBI SW INPUT 5	56	L	INTERIOR ROOM AMP POWER SUPPLY
3	GR	COMBI SW INPUT 4	57	Y	BAT/FUSE
4	L/Y	COMBI SW INPUT 3	58	L/B	DRIVER DOOR UNLOCK OUTPUT
5	G	COMBI SW INPUT 2	59	W	TURN SIGNAL LH OUTPUT
6	L/R	COMBI SW INPUT 1	60	W/L	TURN SIGNAL RH OUTPUT
7	W/R	KEY CYL UNLOCK SW	61	W/L	ROOM LAMP TIMER CONTROL
8	W/B	KEY CYL LOCK SW	63	BR	ROOM LAMP
9	R	STOP/LAMP SW	65	V	ALL DOOR LOCK OUTPUT
10	W/L	REAR WINDOW DEFROGER SW	66	G	PASSENGER DOOR REAR DOOR UNLOCK OUTPUT
11	L/Y	SB	67	B	GND
12	SB	PASSENGER DOOR SW	68	L	POWER WINDOW POWER SUPPLY (IGN)
13	GR/L	REAR RH DOOR SW	69	W	POWER WINDOW POWER SUPPLY (BAT)
14	L/B	OPTICAL SENSOR	70	Y	BAT (FL)

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
17	R/G	RECEIVER / SENSOR END	18	V	KEYLESS ENTRY RECEIVER POWER SUPPLY
19	BR	KEYLESS ENTRY RECEIVER COMM	20	GR	TH40FW-NH
21	P/L	NATS ANTENA AMP	22	Y/G	TH40FW-NH
23	R/Y	SECURITY INDICATOR LAMP	24	GR/R	DONGLE LINK
25	LG	NATS ANTENA AMP	26	GR	TH40FW-NH
27	Y/G	TH40FW-NH	28	G/W	BLOWER FAN SW
29	L/W	HAZARD SW	30	GR	FR DEFROSTER SW
31	GR/Y	COMBI SW INPUT 5	32	LG	COMBI SW INPUT 4
32	LG	COMBI SW INPUT 3	33	Y/L	COMBI SW INPUT 2
33	Y/L	COMBI SW INPUT 1	34	W	KEY SWITCH
34	W	IGN	35	R/L	CAN-H
35	R/L	CAN-L	36	GR	IGN
36	GR	IGN	37	W/R	IGN
37	W/R	IGN	38	O	IGN
38	O	IGN	39	L	IGN
39	L	IGN	40	P	IGN

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
14	L/B	OPTICAL SENSOR	15	W/L	REAR WINDOW DEFROGER SW
16	W/L	OPTICAL SENSOR POWER SUPPLY	17	R/G	OPTICAL SENSOR POWER SUPPLY
18	V	SENSEUR GND	19	GR	NATS ANTENA AMP
20	GR	TH40FW-NH	21	P/L	SECURITY INDICATOR LAMP
22	Y/G	TH40FW-NH	23	GR	DONGLE LINK
24	GR/R	TH40FW-NH	25	LG	TH40FW-NH
25	LG	TH40FW-NH	26	Y/L	TH40FW-NH
26	Y/L	TH40FW-NH	27	W	KEY SWITCH
27	W	IGN	28	G/W	IGN
28	G/W	IGN	29	GR	IGN
29	GR	IGN	30	GR	IGN
30	GR	IGN	31	GR	IGN
31	GR	IGN	32	GR	IGN
32	GR	IGN	33	GR	IGN
33	GR	IGN	34	GR	IGN
34	GR	IGN	35	GR	IGN
35	GR	IGN	36	GR	IGN
36	GR	IGN	37	GR	IGN
37	GR	IGN	38	GR	IGN
38	GR	IGN	39	GR	IGN
39	GR	IGN	40	GR	IGN

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
24	GR/R	DONGLE LINK	25	LG	NATS ANTENA AMP
26	Y/G	TH40FW-NH	27	Y/G	TH40FW-NH
28	W	IGN	29	GR	IGN
29	GR	IGN	30	GR	IGN
30	GR	IGN	31	GR	IGN
31	GR	IGN	32	GR	IGN
32	GR	IGN	33	GR	IGN
33	GR	IGN	34	GR	IGN
34	GR	IGN	35	GR	IGN
35	GR	IGN	36	GR	IGN
36	GR	IGN	37	GR	IGN
37	GR	IGN	38	GR	IGN
38	GR	IGN	39	GR	IGN
39	GR	IGN	40	GR	IGN

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
36	Y/L	KEY CYL UNLOCK SW	37	W/R	KEY CYL LOCK SW
37	W/R	KEY CYL UNLOCK SW	38	W/B	KEY CYL LOCK SW
38	O	IGN	39	L	IGN
39	L	IGN	40	P	IGN
40	P	IGN	41	GR	IGN
41	GR	IGN	42	GR	IGN
42	GR	IGN	43	GR	IGN
43	GR	IGN	44	GR	IGN
44	GR	IGN	45	GR	IGN
45	GR	IGN	46	GR	IGN
46	GR	IGN	47	GR	IGN
47	GR	IGN	48	GR	IGN
48	GR	IGN	49	GR	IGN
49	GR	IGN	50	GR	IGN
50	GR	IGN	51	GR	IGN
51	GR	IGN	52	GR	IGN
52	GR	IGN	53	GR	IGN
53	GR	IGN	54	GR	IGN
54	GR	IGN	55	GR	IGN
55	GR	IGN	56	GR	IGN
56	GR	IGN	57	Y/L	IGN
57	Y/L	IGN	58	Y/L	IGN
58	Y/L	IGN	59	Y/L	IGN
59	Y/L	IGN	60	Y/L	IGN
60	Y/L	IGN	61	Y/L	IGN
61	Y/L	IGN	62	Y/L	IGN
62	Y/L	IGN	63	Y/L	IGN
63	Y/L	IGN	64	Y/L	IGN
64	Y/L	IGN	65	Y/L	IGN
65	Y/L	IGN	66	Y/L	IGN
66	Y/L	IGN	67	Y/L	IGN
67	Y/L	IGN	68	Y/L	IGN
68	Y/L	IGN	69	Y/L	IGN
69	Y/L	IGN	70	Y	IGN

JCLWM6411GB

TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

A

B

C

D

E

F

G

H

K

EXL

M

Z

O

P

TURN SIGNAL AND HAZARD WARNING LAMPS							
Terminal No.	Color of Wire	Signal Name [Specification]	Wire to Wire	Terminal No.	Color of Wire	Signal Name [Specification]	Wire to Wire
1	B/O	-	-	95	L/W	-	-
2	R	-	-	96	Y	-	-
3	G/R	-	-	97	L	-	-
4	G/B	-	-	98	BR/W	-	-
5	L	-	-	99	W	-	-
6	L	-	-	100	G/R	-	-
7	W/R	-	-	94	R/B	-	-
8	G/W	-	-	95	L/W	-	-
9	Y/L	-	-	96	Y	-	-
10	W	-	-	97	L	-	-
31	GR/L	-	-	98	BR/W	-	-
32	L/B	-	-	99	W	-	-
33	R/Y	-	-	100	G/R	-	-
34	SB	-	-	8	7	6	5
35	BR	-	-	9	4	3	2
36	G	-	-	10	1	-	-
38	L/R	-	-	11	-	-	-
44	G/O	-	-	12	-	-	-
45	L/G/R	-	-	13	-	-	-
46	GR/W	-	-	14	-	-	-
48	L/O	-	-	15	-	-	-
51	B/W	-	-	16	W/G	-	-
53	R/L	-	-				
54	O	-	-				
57	GR	-	-				
59	V	-	-				
60	R/W	-	-				
61	V/W	-	-				
62	W/L	-	-				
63	W/B	-	-				
67	Y/R	-	-				
69	L/G	-	-				
70	SHIELD	-	-				
71	P/B	-	-				
72	R/G	-	-				
73	R	-	-				
74	L/Y	-	-				
76	W/G	-	-				

JCLWM6412GB


PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS SYSTEM


Wiring Diagram - PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS -

INFOID:0000000006504402

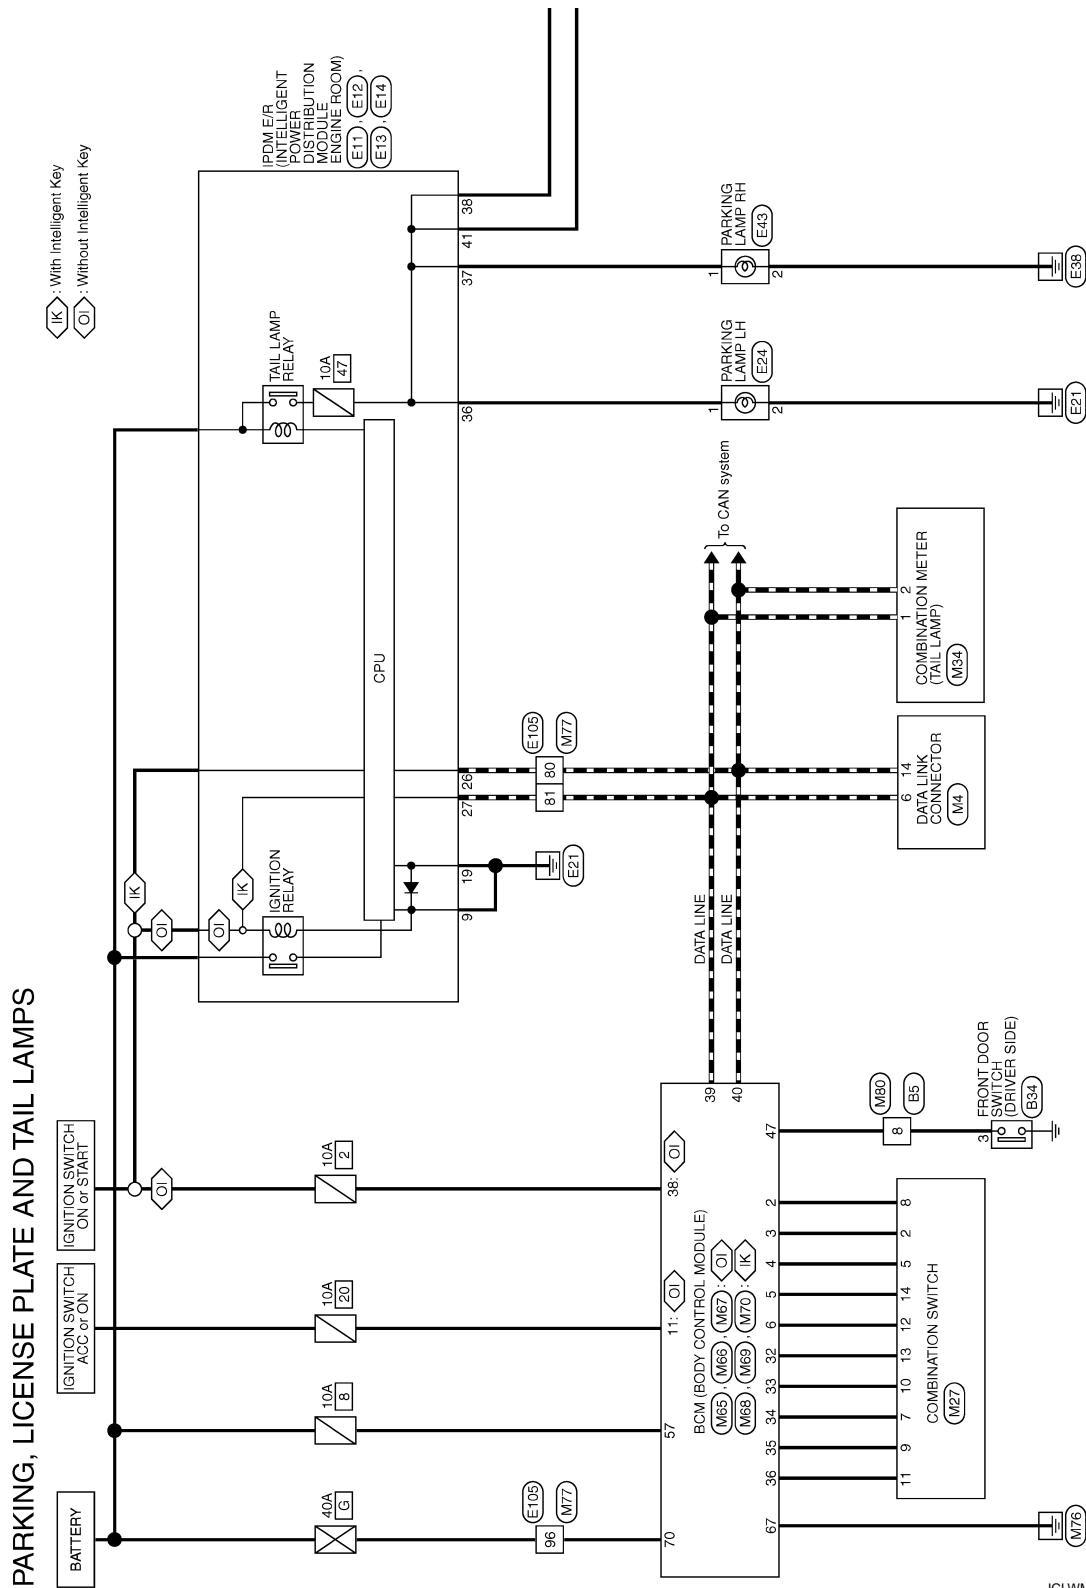

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

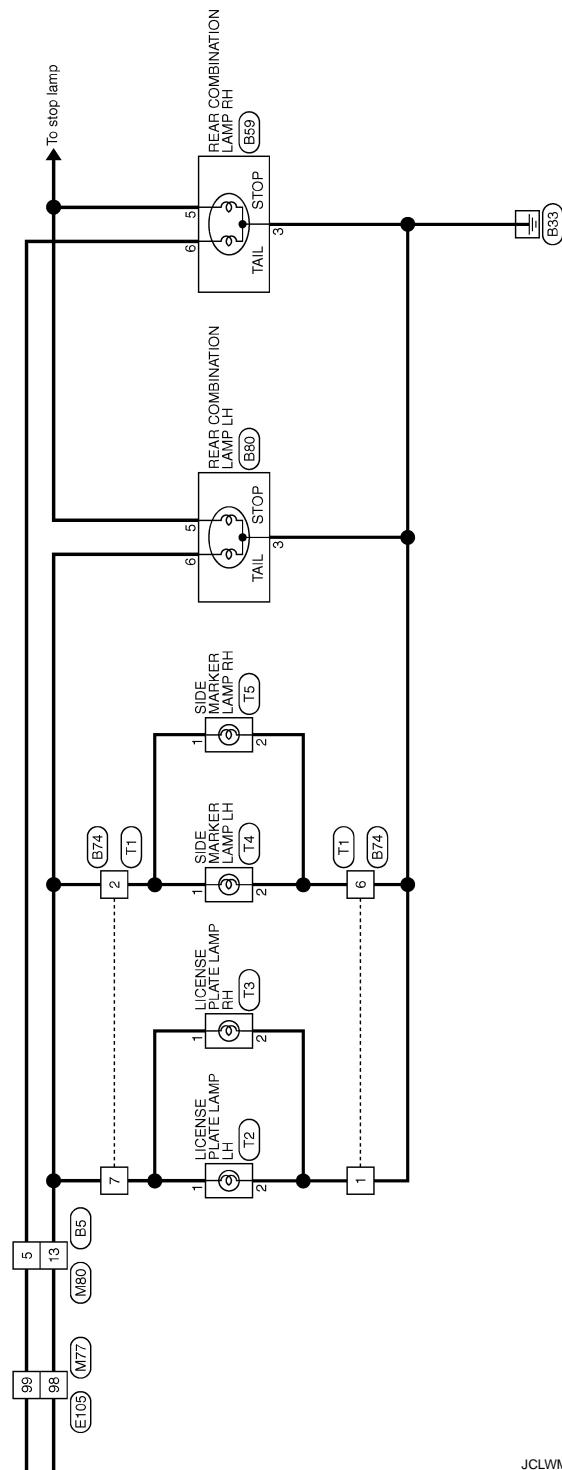

JCLWM6421GB

A
B
C
D
E
F
G
H
I
J
K
L
EXL
M
N
O
P

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

PARKING, LICENSE PLATE AND TAIL LAMPS			
Connector No.	B5	Connector No.	B69
Connector Name	WIRE TO WIRE	Connector Name	REAR COMBINATION LAMP RH
Connector Type	TH1BMW-NH	Connector Type	RS06FB-PR
			
Terminal No.	Color of Wire	Terminal No.	Color of Wire
1	V	1	Y
2	GR	3	B
5	V	4	W
6	W	5	R
8	LG	6	V
9	R	-	-
11	O	-	-
13	GR	-	-
14	P	-	-
16	W	-	-
			
Terminal No.	Color of Wire	Terminal No.	Color of Wire
1	12	3	4
2	3	4	5
5	5	6	6
6	7	7	8
9	10	11	12
10	11	13	14
13	14	15	16
			
Connector No.	B74	Connector No.	E11
Connector Name	WIRE TO WIRE	Connector Name	INPUT E/I INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	RH10FB	Connector Type	M05FB-LC
			
Terminal No.	Color of Wire	Terminal No.	Color of Wire
1	LG	24	LG
2	Y	25	Y
4	P	26	P
5	R	27	L
6	W	28	P
7	GR	30	SE
8	V	31	W
9	-	33	O
10	-	34	R
			
Connector No.	B34	Connector No.	E12
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)	Connector Name	INPUT E/I INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH04FW-NH	Connector Type	NS08FBR-CS
			
Terminal No.	Color of Wire	Terminal No.	Color of Wire
1	B	9	BR/W
2	GR	10	L
6	B	13	W
7	GR	-	-
			
Terminal No.	Color of Wire	Terminal No.	Color of Wire
3	LG	17	16
7	-	22	20
			
Terminal No.	Color of Wire	Terminal No.	Color of Wire
3	LG	18	19
7	-	23	31
			

JCLWM6422GB

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

PARKING, LICENSE PLATE AND TAIL LAMPS


Connector No.	E14	Connector Name	E43
Connector Name	FRONT L/R INTELLIGENT POWER DISTRIBUTION MODULE FRONT L/R ROAD	Connector Name	PARKING LAMP RH
Connector Type	NS12FBR-CS	Connector Type	FR02FB



Terminal No.	Color of Wire	Signal Name [Specification]
36	Y	-
37	V	-
38	G	-
39	V	-
40	R	-
41	SB	-
43	G	-
44	P	-
45	Y	-
46	O	-



Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	ED16FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	B/Y	-



Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	THB0MW-CS16-TM4



Connector No.	M27
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
4	B	- [With CV/T] - [With M/T]
5	G	-
6	L	-
7	GR/R	-
8	O	-
14	P	-
16	LG/R	-





Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	SB	-
4	G	-
5	P	-
6	L	- [With NAVI] - [Without NAVI]
7	Y	-
8	O	-
9	W	-
10	SB	-
31	V	-
32	R	-
33	GR	-
34	P	-
35	Y	-
36	BR	-
39	SB	-
44	R	-
45	V	-



Connector No.	E24
Connector Name	PARKING LAMP LH
Connector Type	FR02FB



Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	ED16FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	O	WASHER (FR)
2	GR	OUTPUT 4
3	L	WASHER (FR)
4	W	IGN
5	L/Y	OUTPUT 3
6	B	GND
7	W	INPUT 3
8	BR/W	OUTPUT 5
9	R/L	INPUT 2
10	Y/L	INPUT 4
11	L/O	INPUT 1
12	L/R	OUTPUT 1
13	LG	INPUT 5
14	G	OUTPUT 2



A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
EXL
M
Z
P

JCLWM6423GB

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

PARKING, LICENSE PLATE AND TAIL LAMPS

Connector No.	M34	Connector No.	M65
Connector Name	COMBINATION METER	Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FW-NH	Connector Type	FEADFB-FHA6-SA

Connector No.	M66
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEADFW-FHA6-SA

Connector No.	TH40FW-NH
Connector Name	BCM (BODY CONTROL MODULE)

Connector No.	FEADFB-FHA6-SA
Connector Name	BCM (BODY CONTROL MODULE)

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	L	CAN-H	2	BR/W	COMBI SW INPUT 4
2	P	CAN-L	3	GR	COMBI SW INPUT 5
3	V	VEHICLE SPEED SIGNAL (2-PULSE)	4	L/Y	COMBI SW INPUT 3
4	L	VEHICLE SPEED SIGNAL (8-PULSE)	5	G	COMBI SW INPUT 2
6	BR/Y	FUEL LEVEL SENSOR SIGNAL	6	L/R	COMBI SW INPUT 1
7	R/G	AIR BAG SIGNAL	7	W/R	KEY CYL UNLOCK SW
8	P	OVERTIME CONTROL SWITCH SIGNAL	8	W/B	KEY CYL LOCK SW
9	O	SEA BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)	9	R	STOP LAMP SW
10	SB	PARKING BRAKE SWITCH SIGNAL	10	W/L	REAR WINDOW DEFROGGER SW
11	G/R	BRAKE FLUID LEVEL SWITCH SIGNAL	11	L/Y	ACC
13	B/R	ILLUMINATION CONTROL SIGNAL	12	S	PASSENGER DOOR SW
15	L/Y	ACC POWER SUPPLY	13	GR/L	REAR RH DOORSW
17	G	WASHER LEVEL SWITCH SIGNAL	14	L/B	OPTICAL SENSOR
18	R/Y	SECURITY SIGNAL	17	RG	OPTICAL SENSOR POWER SUPPLY
19	V/W	AMBIENT SENSOR SIGNAL	18	V	RECEIVER SENSOR GND
20	R/W	AMBIENT SENSOR GROUND	19	BR	KEYLESS ENTRY RECEIVER POWER SUPPLY
21	B	GROUND	20	P/L	KEYLESS ENTRY RECEIVER COMM
22	B	GROUND	21	P-L	NATS ANTENNA AMP.
23	B	GROUND	23	R/Y	SECURITY INDICATOR LAMP
24	V	FUEL LEVEL SENSOR GROUND	24	GR/R	DONGLE LINK
25	B	VDC GROUND	25	LG	NATS ANTENNA AMP
27	LG	BATTERY POWER SUPPLY	26	GR	THERMO CONTROL AMP
28	GR	IGNITION SIGNAL	27	Y/G	A/C SW [With auto A/C]
29	BR	PASSENGER SEAT BELT WARNING SIGNAL	28	W/N	A/C SW [With manual A/C]
31	R	A/C AUTO AMP CONNECTION RECOGNITION SIGNAL	29	L/W	BLOWER FAN SW
35	BR	ENGINE COOLANT TEMPERATURE SIGNAL	29	L/W	HAZARD SW
38	GR	ALTERNATOR SIGNAL	31	GY	FR DEFROSTER SW

Terminal No.	Color of Wire	Signal Name [Specification]	Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	COMBI SW INPUT 3	2	W	BACK DOOR 3 SW
3	GR	COMBI SW INPUT 4	4	LG	REAR WIPER STOP POSITION
5	GR	COMBI SW INPUT 2	6	GR	CENTRAL DOOR LOCK SW
7	Y	COMBI SW INPUT 1	7	BR/Y	CENTRAL DOOR UNLOCK SW
9	G	DRIVER DOOR SW	9	L/R	DRIVER DOOR SW
10	W/G	REAR LH DOOR SW	10	W/G	REAR RH DOOR SW
11	W/B	A/C INDICATOR OUTPUT	11	W/B	A/C INDICATOR OUTPUT
12	L/W	REAR WIPER OUTPUT	12	W/G	REAR WIPER OUTPUT
13	BR	CENTRAL DOOR UNLOCK SW	13	BR	CENTRAL DOOR UNLOCK SW
14	L/B	OPTICAL SENSOR	14	L/B	OPTICAL SENSOR
15	W/L	REAR RNDW DEFROGGER SW	15	W/L	REAR RNDW DEFROGGER SW
17	R/G	OPTICAL SENSOR POWER SUPPLY	17	R/G	OPTICAL SENSOR POWER SUPPLY
18	V	SENSOR GND	18	V	SENSOR GND
21	P/L	NATS ANTENNA AMP	21	P/L	NATS ANTENNA AMP
23	R/Y	SECURITY INDICATOR LAMP	23	R/Y	SECURITY INDICATOR LAMP
24	GR/R	DOOR LINK	24	GR/R	DOOR LINK
25	LG	NATS ANTENNA AMP	25	LG	NATS ANTENNA AMP
27	Y/G	BLOWER FAN SW	28	G/W	BLOWER FAN SW
29	L/W	HAZARD SW	29	L/W	HAZARD SW
31	G/B	DR DOOR UNLOCK SENSOR	31	G/B	DR DOOR UNLOCK SENSOR
32	LG	COMBI SW OUTPUT 5	32	LG	COMBI SW OUTPUT 5
33	Y/L	INTERIOR ROOM AMP POWER SUPPLY	33	Y/L	INTERIOR ROOM AMP POWER SUPPLY
34	W	BATT (FUSE)	34	W	BATT (FUSE)
35	LG	DR DEFROSTER SW	35	R/L	DR DEFROSTER SW
36	W/B	COMBI SW OUTPUT 5	36	L/O	COMBI SW OUTPUT 5
37	G/O	TURN SIGNAL LH OUTPUT	37	G/O	TURN SIGNAL LH OUTPUT
38	G/Y	TURN SIGNAL RH OUTPUT	38	G/Y	TURN SIGNAL RH OUTPUT
39	L	ROOM LAMP TIMER CONTROL	39	L	ROOM LAMP TIMER CONTROL
40	P	ALL DOOR LOC OUTPUT	40	P	ALL DOOR LOC OUTPUT
		CAN-L			CAN-L
		CAN-H			CAN-H
		GND			GND
		POWER WINDOW POWER SUPPLY (IGN)			POWER WINDOW POWER SUPPLY (IGN)
		POWER WINDOW POWER SUPPLY (BAT)			POWER WINDOW POWER SUPPLY (BAT)
		BAT (F/L)			BAT (F/L)

JCLWM6424GB

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

PARKING, LICENSE PLATE AND TAIL LAMPS

Connector No. M69

Connector Name BCM(BODY CONTROL MODULE)

Connector Type FEA09FB-FHAG-SA



Connector No. M77

Connector Name WIRE TO WIRE

Connector Type TH80FW-CS16-TM4



Terminal No.

Color of Wire

Signal Name [Specification]

43 W BACK DOOR SW

44 LG REAR WIPER STOP POSITION

45 SB PASSENGER DOOR SW

46 GR/L REAR RH DOOR SW

47 BR/Y DRIVER DOOR SW

48 W/G REAR LH DOOR SW

50 R/W BK DR LOCK ACT RELAY CONT

51 W BACK DOOR REQUEST SW

54 L/W REAR WIPER OUTPUT

55 G REAR DOOR UNLOCK OUTPUT

Terminal Color

No. of Wire

Signal Name [Specification]

1 Br/O

2 R

3 Gr/R

4 G/B

5 L

6 L

7 W/R

8 G/W

9 Y/L

10 W

11 G/R/L

12 G/R

13 G/R

14 G/R

15 G/R

16 G/R

17 G/R

18 G/R

19 G/R

20 G/R

21 G/R

22 G/R

23 G/R

24 G/R

25 G/R

26 G/R

27 G/R

28 G/R

29 G/R

30 G/R

31 G/R

32 R/Y

33 S/B

34 S/B

35 B/R

36 G

37 L/R

38 G/O

39 G/O

40 G/O

41 G/R

42 G/R

43 G/R

44 G/R

45 G/R

46 G/R

47 G/R

48 G/O

49 B/W

50 R/L

51 R/L

52 O

53 O

54 O

55 G/R

56 V

57 Y

58 G

59 W/B

60 W/L

61 Y/G

62 W/L

63 W/B

64 W/G

65 LG

66 R/PB

67 B

68 L

69 L/W

70 Y

71 P/B

72 R/G

73 R

74 L/Y

75 BAT (F/L)

76 W/G

Connector No. M78

Connector Name WIRE TO WIRE


Connector Type RHOMB



Connector No. M80

Connector Name WIRE TO WIRE

Connector Type TH6BW-NH



Terminal No.

Color of Wire

Signal Name [Specification]

94 R/B

95 L/W

96 Y

97 L

98 BR/W

99 W

100 G/R

101 G/R

102 G/R

103 G/R

104 G/R

105 G/R

106 G/R

107 G/R

108 G/R

109 G/R

110 G/R

111 G/R

112 G/R

113 G/R

114 G/R

115 G/R

116 G/R

117 G/R

118 G/R

119 G/R

120 G/R

121 G/R

122 G/R

123 G/R

124 G/R

125 G/R

126 G/R

127 G/R

128 G/R

129 G/R

130 G/R

131 G/R

132 G/R

133 G/R

134 G/R

135 G/R

136 G/R

137 G/R

138 G/R

139 G/R

140 G/R

141 G/R

142 G/R

143 G/R

144 G/R

145 G/R

146 G/R

147 G/R

148 G/R

149 G/R

150 G/R

151 G/R

152 G/R

153 G/R

154 G/R

155 G/R

156 G/R

157 G/R

158 G/R

159 G/R

160 G/R

161 G/R

162 G/R

163 G/R

164 G/R

165 G/R

166 G/R

167 G/R

168 G/R

169 G/R

170 G/R

171 G/R

172 G/R

173 G/R

174 G/R

175 G/R

176 G/R

177 G/R

178 G/R

179 G/R

180 G/R

181 G/R

182 G/R

183 G/R

184 G/R

185 G/R

186 G/R

187 G/R

188 G/R

189 G/R

190 G/R

191 G/R

192 G/R

193 G/R

194 G/R

195 G/R

196 G/R

197 G/R

198 G/R

199 G/R

200 G/R

201 G/R

202 G/R

203 G/R

204 G/R

205 G/R

206 G/R

207 G/R

208 G/R

209 G/R

210 G/R

211 G/R

212 G/R

213 G/R

214 G/R

215 G/R

216 G/R

217 G/R

218 G/R

219 G/R

220 G/R

221 G/R

222 G/R

223 G/R

224 G/R

225 G/R

226 G/R

227 G/R

228 G/R

229 G/R

230 G/R

231 G/R

232 G/R

233 G/R

234 G/R

235 G/R

236 G/R

237 G/R

238 G/R

239 G/R

240 G/R

241 G/R

242 G/R

243 G/R

244 G/R

245 G/R

246 G/R

247 G/R

248 G/R

249 G/R

250 G/R

251 G/R

252 G/R

253 G/R

254 G/R

255 G/R

256 G/R

257 G/R

258 G/R

259 G/R

260 G/R

261 G/R

262 G/R

263 G/R

264 G/R

265 G/R

266 G/R

267 G/R

268 G/R

269 G/R

270 G/R

271 G/R

272 G/R

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

PARKING, LICENSE PLATE AND TAIL LAMPS

Connector No.	T3
Connector Name	LICENSE PLATE LAMP RH
Connector Type	RK06FBR



Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	B	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	B	-



Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	B	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	B	-

JCLWM6426GB

STOP LAMP


< DTC/CIRCUIT DIAGNOSIS >

STOP LAMP

Wiring Diagram - STOP LAMP -

INFOID:0000000006504403

STOP LAMP

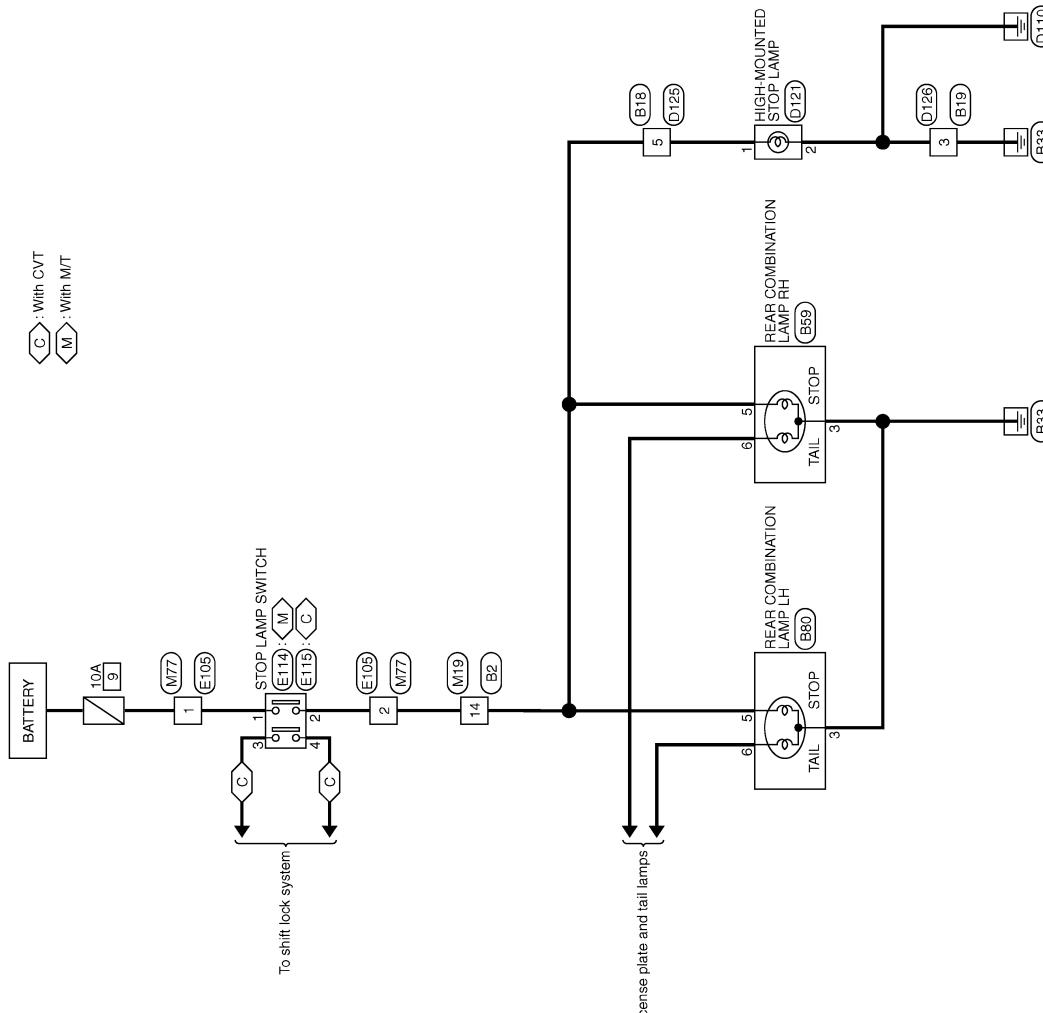

2010/10/14

JCLWM6413GB

STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

STOP LAMP			
Connector No.	B2		
Connector Name	WIRE TO WIRE		
Connector Type	NS1BMW-CS		
			
Terminal No.	Color of Wire	Signal Name [Specification]	
1	V	-	
2	W	-	
3	O	-	
4	P	-	
5	R	-	
6	LG	-	
7	L	-	
8	G	-	
9	P	-	
10	Y	-	
11	R	-	
12	LG	-	
13	Y	-	
14	G	-	
15	W	-	
16	O	-	
17	P	-	
18	R	-	
19	LG	-	
20	LG	-	
21	LG	-	
22	LG	-	
23	LG	-	
24	LG	-	
25	LG	-	
26	LG	-	
27	LG	-	
28	LG	-	
29	LG	-	
30	LG	-	
31	LG	-	
32	LG	-	
33	LG	-	
34	LG	-	
35	LG	-	
36	LG	-	
37	LG	-	
38	LG	-	
39	LG	-	
40	LG	-	
41	LG	-	
42	LG	-	
43	LG	-	
44	LG	-	
45	LG	-	
46	LG	-	
47	LG	-	
48	LG	-	
49	LG	-	
50	LG	-	
51	LG	-	
52	LG	-	
53	LG	-	
54	LG	-	
55	LG	-	
56	LG	-	
57	LG	-	
58	LG	-	
59	LG	-	
60	LG	-	
61	LG	-	
62	LG	-	
63	LG	-	
64	LG	-	
65	LG	-	
66	LG	-	
67	LG	-	
68	LG	-	
69	LG	-	
70	LG	-	
71	LG	-	
72	LG	-	
73	LG	-	
74	LG	-	
75	LG	-	
76	LG	-	
77	LG	-	
78	LG	-	
79	LG	-	
80	LG	-	
81	LG	-	
82	LG	-	
83	LG	-	
84	LG	-	
85	LG	-	
86	LG	-	
87	LG	-	
88	LG	-	
89	LG	-	
90	LG	-	
91	LG	-	
92	LG	-	
93	LG	-	
94	LG	-	
95	LG	-	
96	LG	-	
97	LG	-	
98	LG	-	
99	LG	-	
100	LG	-	
101	LG	-	
102	LG	-	
103	LG	-	
104	LG	-	
105	LG	-	
106	LG	-	
107	LG	-	
108	LG	-	
109	LG	-	
110	LG	-	
111	LG	-	
112	LG	-	
113	LG	-	
114	LG	-	
115	LG	-	
116	LG	-	
117	LG	-	
118	LG	-	
119	LG	-	
120	LG	-	
121	LG	-	
122	LG	-	
123	LG	-	
124	LG	-	
125	LG	-	
126	LG	-	
127	LG	-	
128	LG	-	
129	LG	-	
130	LG	-	
131	LG	-	
132	LG	-	
133	LG	-	
134	LG	-	
135	LG	-	
136	LG	-	
137	LG	-	
138	LG	-	
139	LG	-	
140	LG	-	
141	LG	-	
142	LG	-	
143	LG	-	
144	LG	-	
145	LG	-	
146	LG	-	
147	LG	-	
148	LG	-	
149	LG	-	
150	LG	-	
151	LG	-	
152	LG	-	
153	LG	-	
154	LG	-	
155	LG	-	
156	LG	-	
157	LG	-	
158	LG	-	
159	LG	-	
160	LG	-	
161	LG	-	
162	LG	-	
163	LG	-	
164	LG	-	
165	LG	-	
166	LG	-	
167	LG	-	
168	LG	-	
169	LG	-	
170	LG	-	
171	LG	-	
172	LG	-	
173	LG	-	
174	LG	-	
175	LG	-	
176	LG	-	
177	LG	-	
178	LG	-	
179	LG	-	
180	LG	-	
181	LG	-	
182	LG	-	
183	LG	-	
184	LG	-	
185	LG	-	
186	LG	-	
187	LG	-	
188	LG	-	
189	LG	-	
190	LG	-	
191	LG	-	
192	LG	-	
193	LG	-	
194	LG	-	
195	LG	-	
196	LG	-	
197	LG	-	
198	LG	-	
199	LG	-	
200	LG	-	
201	LG	-	
202	LG	-	
203	LG	-	
204	LG	-	
205	LG	-	
206	LG	-	
207	LG	-	
208	LG	-	
209	LG	-	
210	LG	-	
211	LG	-	
212	LG	-	
213	LG	-	
214	LG	-	
215	LG	-	
216	LG	-	
217	LG	-	
218	LG	-	
219	LG	-	
220	LG	-	
221	LG	-	
222	LG	-	
223	LG	-	
224	LG	-	
225	LG	-	
226	LG	-	
227	LG	-	
228	LG	-	
229	LG	-	
230	LG	-	
231	LG	-	
232	LG	-	
233	LG	-	
234	LG	-	
235	LG	-	
236	LG	-	
237	LG	-	
238	LG	-	
239	LG	-	
240	LG	-	
241	LG	-	
242	LG	-	
243	LG	-	
244	LG	-	
245	LG	-	
246	LG	-	
247	LG	-	
248	LG	-	
249	LG	-	
250	LG	-	
251	LG	-	
252	LG	-	
253	LG	-	
254	LG	-	
255	LG	-	
256	LG	-	
257	LG	-	
258	LG	-	
259	LG	-	
260	LG	-	
261	LG	-	
262	LG	-	
263	LG	-	
264	LG	-	
265	LG	-	
266	LG	-	
267	LG	-	
268	LG	-	
269	LG	-	
270	LG	-	
271	LG	-	
272	LG	-	
273	LG	-	
274	LG	-	
275	LG	-	
276	LG	-	
277	LG	-	
278	LG	-	
279	LG	-	
280	LG	-	
281	LG	-	
282	LG	-	
283	LG	-	
284	LG	-	
285	LG	-	
286	LG	-	
287	LG	-	
288	LG	-	
289	LG	-	
290	LG	-	
291	LG	-	
292	LG	-	
293	LG	-	
294	LG	-	
295	LG	-	
296	LG	-	
297	LG	-	
298	LG	-	
299	LG	-	
300	LG	-	
301	LG	-	
302	LG	-	
303	LG	-	
304	LG	-	
305	LG	-	
306	LG	-	
307	LG	-	
308	LG	-	
309	LG	-	
310	LG	-	
311	LG	-	
312	LG	-	
313	LG	-	
314	LG	-	
315	LG	-	
316	LG	-	
317	LG	-	
318	LG	-	
319	LG	-	
320	LG	-	
321	LG	-	
322	LG	-	
323	LG	-	
324	LG	-	
325	LG	-	
326	LG	-	
327	LG	-	
328	LG	-	
329	LG	-	
330	LG	-	
331	LG	-	
332	LG	-	
333	LG	-	
334	LG	-	
335	LG	-	
336	LG	-	
337	LG	-	
338	LG	-	
339	LG	-	
340	LG	-	
341	LG	-	
342	LG	-	
343	LG	-	
344	LG	-	
345	LG	-	
346	LG	-	
347	LG	-	
348	LG	-	
349	LG	-	
350	LG	-	
351	LG	-	
352	LG	-	
353	LG	-	
354	LG	-	
355	LG	-	
356	LG	-	
357	LG	-	
358	LG	-	
359	LG	-	
360	LG	-	
361	LG	-	
362	LG	-	
363	LG	-	
364	LG	-	
365	LG	-	
366	LG	-	
367	LG	-	
368	LG	-	
369	LG	-	
370	LG	-	
371	LG	-	
372	LG	-	
373	LG	-	
374	LG	-	
375	LG	-	
376	LG	-	
377	LG	-	
378	LG	-	
379	LG	-	
380	LG	-	
381	LG	-	
382	LG	-	
383	LG	-	
384	LG	-	
385	LG	-	
386	LG	-	
387	LG	-	
388	LG	-	
389	LG	-	
390	LG	-	
391	LG	-	
392	LG	-	
393	LG	-	
394	LG	-	
395	LG	-	
396	LG	-	
397	LG	-	
398	LG	-	
399	LG	-	
400	LG	-	
401	LG	-	
402	LG	-	
403	LG	-	
404	LG	-	
405	LG	-	
406	LG	-	</td

STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

A

B

C

D

M

T

G

I

X

EXL

M

Z

O

P

STOP LAMP			
Connector No.	E106	Connector No.	E115
Connector Name	WIRE TO WIRE	Connector Name	STOP LAMP SWITCH
Connector Type	THBDMW-CS16-TM4	Connector Type	M02FW-LC
72	LG	72	LG
73	P	73	P
74	V	74	Y
76	Y	76	LG
77	LG	77	LG
78	O	78	O
79	G	79	G
80	P	80	P
81	L	81	L
82	W	82	W
83	BR	83	BR
84	B	84	B
87	GR	87	GR
91	W	91	W
92	Y	92	Y
93	Y	93	Y
94	R	94	R
95	V	95	V
96	LG	96	LG
97	R	97	R
98	SG	98	SG
99	G	99	G
100	P	100	P
101	SB	101	SB
102	V	102	V
103	R	103	R
104	GR	104	GR
105	P	105	P
106	Y	106	Y
107	BR	107	BR
108	SB	108	SB
109	SB	109	SB
110	R	110	R
111	V	111	V
112	W	112	W
113	P	113	P
114	LG	114	LG
115	L	115	L
116	BR	116	BR
117	BR	117	BR
118	BR	118	BR
119	BR	119	BR
120	BR	120	BR
121	BR	121	BR
122	BR	122	BR
123	BR	123	BR
124	BR	124	BR
125	BR	125	BR
126	BR	126	BR
127	BR	127	BR
128	BR	128	BR
129	BR	129	BR
130	BR	130	BR
131	BR	131	BR
132	BR	132	BR
133	BR	133	BR
134	BR	134	BR
135	BR	135	BR
136	BR	136	BR
137	BR	137	BR
138	BR	138	BR
139	BR	139	BR
140	BR	140	BR
141	BR	141	BR
142	BR	142	BR
143	BR	143	BR
144	BR	144	BR
145	BR	145	BR
146	BR	146	BR
147	BR	147	BR
148	BR	148	BR
149	BR	149	BR
150	BR	150	BR
151	BR	151	BR
152	BR	152	BR
153	BR	153	BR
154	BR	154	BR
155	BR	155	BR
156	BR	156	BR
157	BR	157	BR
158	BR	158	BR
159	BR	159	BR
160	BR	160	BR
161	BR	161	BR
162	BR	162	BR
163	BR	163	BR
164	BR	164	BR
165	BR	165	BR
166	BR	166	BR
167	BR	167	BR
168	BR	168	BR
169	BR	169	BR
170	BR	170	BR
171	BR	171	BR

JCLWM6415GB

STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

STOP LAMP	
Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	THBDFW-CS16-TM4
	
Terminal No.	Color of Wire
1	B/O
2	R
3	G/R
4	G/B
5	L
6	L
7	W/R
8	G/W
9	Y/L
10	W
31	GR/L
32	L/B
33	R/Y
34	SB
35	BR
36	G
38	L/R
44	G/O
45	LG/R
46	GR/W
48	L/O
51	B/W
53	R/L
54	O
57	GR
59	V
60	R/W
61	V/W
62	W/L
63	W/B
67	Y/R
68	LG
70	SHIELD
71	P/B
72	R/G
73	R
74	L/Y
76	W/G

JCLWM6416GB

BACK-UP LAMP


< DTC/CIRCUIT DIAGNOSIS >

BACK-UP LAMP

Wiring Diagram - BACK-UP LAMP -

INFOID:0000000006504404

BACK-UP LAMP

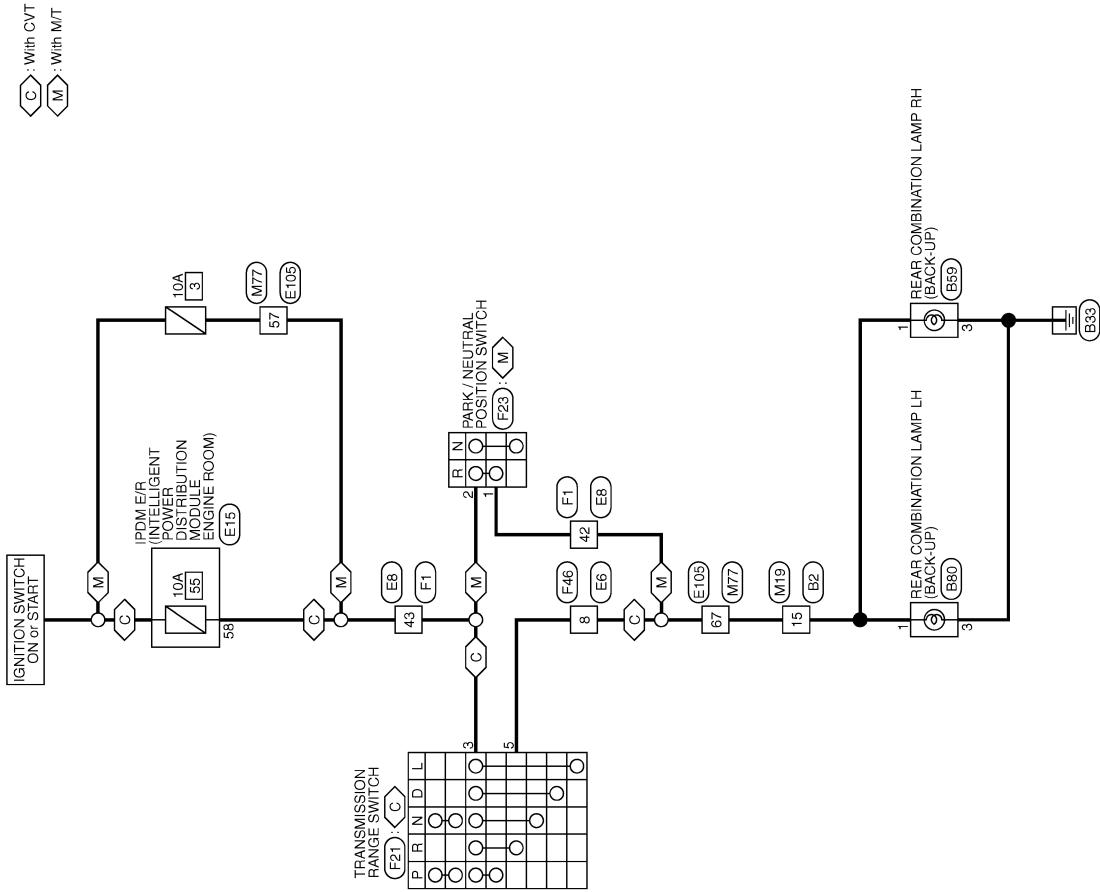

2009/02/27

JCLWM3511GB

BACK-UP LAMP


< DTC/CIRCUIT DIAGNOSIS >

BACK-UP LAMP

Connector No.	B2
Connector Name	WIRE TO WIRE
Connector Type	NS1BMW-CS
	

Connector No.	B60
Connector Name	REAR COMBINATION LAMP LH
Connector Type	RS06FB-PR

Connector No.	E8
Connector Name	WIRE TO WIRE
Connector Type	SAA3MB-RS10-SJ22
	
	

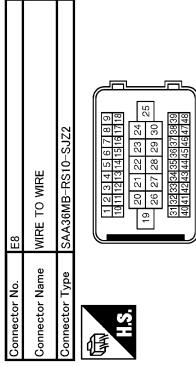

Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	O	-
4	P	-
5	O	-
6	R	-
7	L	-
8	L	-
9	G	-
10	V	-
11	P	-
12	LG	-
14	R	-
15	Y	-
16	B	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
3	B	-
4	P	-
5	R	-
6	GR	-
7	Y	-
8	Y	-
9	LG	-
10	P	-
12	BR	-
13	LG	-
14	Y	-
15	LG	-
16	L	-
17	W	-
18	O	-
21	G	-
22	Y	-
23	SB	-
24	W	-
25	BR	-
26	B	-
27	GR	-
28	P	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	BR	-
3	P	-
4	V	-
5	LG	-
6	R	-
7	SB	-
8	GR	-
9	LG	-
10	R	-
11	V	-

Connector No.	E15
Connector Name	WIRE TO WIRE
Connector Type	NS1BMW-CS
	
	

Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	LG	-
3	Y	-
4	W	-
7	Y	-
8	SB	-
9	L	-
10	V	-
11	P	-
12	BR	-
13	LG	-
14	Y	-
15	LG	-
16	L	-
17	W	-
55	P	-
56	SB	-
57	G	-
58	R	-
59	Y	-
60	V	-
61	W	-
62	L	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
3	B	-
4	W	-
5	R	-
6	V	-

JCLWM6417GB

BACK-UP LAMP

< DTC/CIRCUIT DIAGNOSIS >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
EXL

BACK-UP LAMP

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	THBDMW-CS16-TM4



Terminal Color No. Signal Name [Specification]

1	V	-	91	WV	-	30	BR	-
2	W	-	92	Y	-	31	GR	-
3	SB	-	93	Y	-	32	BR	-
4	G	-	94	R	-	33	W	-
5	P	-	95	V	-	34	LG	-
6	L	- [With NAVI] - [Without NAVI]	96	LG	-	35	V	-
6	R	- [With NAVI] - [Without NAVI]	97	R	-	36	Y	- [For California] - [Except for California]
7	Y	-	98	SB	-	37	W	-
8	O	-	99	G	-	38	G	-
9	W	-	100	P	-	39	G	-
10	SB	-				40	P	-
31	V	-				41	O	-
32	R	-				42	G	-
33	GR	-				43	R	-
34	P	-				44	P	-
35	Y	-				45	GR	-
36	BR	-				46	Y	-
39	SB	-				47	BR	-
44	R	-				48	BR	-
45	V	-						
46	P	-						
48	L	-						
51	BR	- [With CVT] - [With M/T]						
53	B	-						
54	W	- [With CVT] - [With M/T]						
57	LG	-						
59	L	-						
60	O	-						
61	G	-						
62	W	-						
63	L	-						
67	GR	- [With CVT] - [With M/T]						
68	V	-						
70	P	-						
71	GR	-						

JCLWM6418GB

BACK-UP LAMP

< DTC/CIRCUIT DIAGNOSIS >

BACK-UP LAMP		
Connector No.	M19	WIRE TO WIRE
Connector Name	WIRE TO WIRE	
Connector Type	NS18FW-CS	
		
Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	O	-
5	L/R	-
6	R	-
7	L	-
8	R/B	-
9	G	-
10	V	-
11	L/W	-
12	LG	-
14	R	-
15	Y/R	-
16	B/R	-

BACK-UP LAMP		
Connector No.	M77	WIRE TO WIRE
Connector Name	WIRE TO WIRE	
Connector Type	TH8DFW-CS16-TM4	
		
Terminal No.	Color of Wire	Signal Name [Specification]
1	B/O	-
2	R	-
3	G/R	-
4	G/B	-
5	L	-
6	L	-
7	W/R	-
8	G/W	-

BACK-UP LAMP		
Connector No.	M77	WIRE TO WIRE
Connector Name	WIRE TO WIRE	
Connector Type	TH8DFW-CS16-TM4	
		
Terminal No.	Color of Wire	Signal Name [Specification]
1	B/O	-
2	R	-
3	G/R	-
4	G/B	-
5	L	-
6	L	-
7	W/R	-
8	G/W	-

JCLWM6419GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

WITH INTELLIGENT KEY

WITH INTELLIGENT KEY : Reference Value

INFOID:0000000006952990

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT/AUTO	Off
	Front wiper switch INT/AUTO	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
RR WIPER ON	Other than rear wiper switch ON	Off
	Rear wiper switch ON	On
RR WIPER INT	Other than rear wiper switch INT	Off
	Rear wiper switch INT	On
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On
RR WIPER STOP	Rear wiper is in STOP position	Off
	Rear wiper is not in STOP position	On
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	Rear RH door closed	Off
	Rear RH door opened	On
DOOR SW-RL	Rear LH door closed	Off
	Rear LH door opened	On
DOOR SW-BK	Back door closed	Off
	Back door opened	On
CDL LOCK SW	Other than power door lock switch LOCK	Off
	Power door lock switch LOCK	On
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off
	Power door lock switch UNLOCK	On
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off
	Driver door key cylinder LOCK position	On
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off
	Driver door key cylinder UNLOCK position	On
HAZARD SW	Hazard switch is OFF	Off
	Hazard switch is ON	On
REAR DEF SW	Rear window defogger switch OFF	Off
	Rear window defogger switch ON	On
TR/BD OPEN SW	NOTE: The item is indicated, but not monitored.	Off
TRNK/HAT MNTR	NOTE: The item is indicated, but not monitored.	Off
FAN ON SIG	Blower fan OFF	Off
	Blower fan ON	On
AIR COND SW	Air conditioner OFF (A/C switch indicator OFF)	Off
	Air conditioner ON (A/C switch indicator ON)	On
RKE-LOCK	LOCK button of the key is not pressed	Off
	LOCK button of the key is pressed	On
RKE-UNLOCK	UNLOCK button of the key is not pressed	Off
	UNLOCK button of the key is pressed	On
RKE-TR/BD	BACK DOOR OPEN button of the key is not pressed	Off
	BACK DOOR OPEN button of the key is pressed	On
RKE-PANIC	PANIC button of the key is not pressed	Off
	PANIC button of the key is pressed	On
RKE-MODE CHG	LOCK/UNLOCK button of the key is not pressed and held simultaneously	Off
	LOCK/UNLOCK button of the key is pressed and held simultaneously	On
OPTI SEN (DTCT)	Bright outside of the vehicle	Close to 5 V
	Dark outside of the vehicle	Close to 0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
OPTI SEN (FILT)	Bright outside of the vehicle (Lighting switch AUTO)	Close to 5 V
	Dark outside of the vehicle (Lighting switch AUTO)	Close to 1.50 V
OPTICAL SENSOR	NOTE: The item is indicated, but not monitored.	Off
RAIN SENSOR	NOTE: The item is indicated, but not monitored.	Off
REQ SW -DR	Driver door request switch is not pressed	Off
	Driver door request switch is pressed	On
REQ SW -AS	Passenger door request switch is not pressed	Off
	Passenger door request switch is pressed	On
REQ SW -RR	NOTE: The item is indicated, but not monitored.	Off
REQ SW -RL	NOTE: The item is indicated, but not monitored.	Off
REQ SW -BD/TR	Back door request switch is not pressed	Off
	Back door request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
CLUCH SW	NOTE: The item is indicated, but not monitored.	Off
BRAKE SW 1	The brake pedal is not depressed	Off
	The brake pedal is depressed	On
BRAKE SW 2	The brake pedal is depressed when No. 9 fuse is blown	Off
	The brake pedal is not depressed when No. 9 fuse is blown, or No. 9 fuse is normal	On
DETE/CANCL SW	Selector lever in P position	Off
	Selector lever in any position other than P	On
SFT PN/N SW	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
S/L -LOCK	NOTE: The item is indicated, but not monitored.	Off
S/L -UNLOCK	NOTE: The item is indicated, but not monitored.	Off
S/L RELAY-F/B	NOTE: The item is indicated, but not monitored.	Off
UNLK SEN -DR	Driver door is locked	Off
	Driver door is unlocked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT PN -IPDM	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
SFT P -MET	Selector lever in any position other than P	Off
	Selector lever in P position	On

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
SFT N -MET	Selector lever in any position other than N	Off
	Selector lever in N position	On
ENGINE STATE	Engine stopped	Stop
	While the engine stalls	Stall
	At engine cranking	Crank
	Engine running	Run
S/L LOCK-IPDM	NOTE: The item is indicated, but not monitored.	Off
S/L UNLK-IPDM	NOTE: The item is indicated, but not monitored.	Off
S/L RELAY-REQ	NOTE: The item is indicated, but not monitored.	Off
VEH SPEED 1	While driving	Equivalent to speedometer reading
VEH SPEED 2	While driving	Equivalent to speedometer reading
DOOR STAT-DR	Driver door is locked	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Driver door is unlocked	UNLOCK
DOOR STAT-AS	Passenger door is locked	LOCK
	Wait with selective UNLOCK operation (5 seconds)	READY
	Passenger door is unlocked	UNLOCK
ID OK FLAG	Driver side door is open after ignition switch is turned OFF (Selector lever is in the P position except for M/T models)	Reset
	Ignition switch ON	Set
PRMT ENG STRT	The engine start is prohibited	Reset
	The engine start is permitted	Set
PRMT RKE STRT	NOTE: The item is indicated, but not monitored.	Reset
RKE OPE COUN1	During the operation of the key	Operation frequency of the key
RKE OPE COUN2	NOTE: The item is indicated, but not monitored.	—
CONFIRM ID ALL	The key ID that the key slot receives is not recognized by any key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by any key ID registered to BCM.	Done
CONFIRM ID4	The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the fourth key ID registered to BCM.	Done
CONFIRM ID3	The key ID that the key slot receives is not recognized by the third key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the third key ID registered to BCM.	Done
CONFIRM ID2	The key ID that the key slot receives is not recognized by the second key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the second key ID registered to BCM.	Done

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
CONFIRM ID1	The key ID that the key slot receives is not recognized by the first key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the first key ID registered to BCM.	Done
NOT REGISTERED	BCM detects registered key ID, or BCM does not detect key ID.	ID OK
	BCM detects non-registration key ID.	ID NG
TP 4	The ID of fourth key is not registered to BCM	Yet
	The ID of fourth key is registered to BCM	Done
TP 3	The ID of third key is not registered to BCM	Yet
	The ID of third key is registered to BCM	Done
TP 2	The ID of second key is not registered to BCM	Yet
	The ID of second key is registered to BCM	Done
TP 1	The ID of first key is not registered to BCM	Yet
	The ID of first key is registered to BCM	Done
AIR PRESS FL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	ID of front LH tire transmitter is registered	Done
	ID of front LH tire transmitter is not registered	Yet
ID REGST FR1	ID of front RH tire transmitter is registered	Done
	ID of front RH tire transmitter is not registered	Yet
ID REGST RR1	ID of rear RH tire transmitter is registered	Done
	ID of rear RH tire transmitter is not registered	Yet
ID REGST RL1	ID of rear LH tire transmitter is registered	Done
	ID of rear LH tire transmitter is not registered	Yet
WARNING LAMP	Tire pressure indicator OFF	Off
	Tire pressure indicator ON	On
BUZZER	Tire pressure warning alarm is not sounding	Off
	Tire pressure warning alarm is sounding	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

TERMINAL LAYOUT

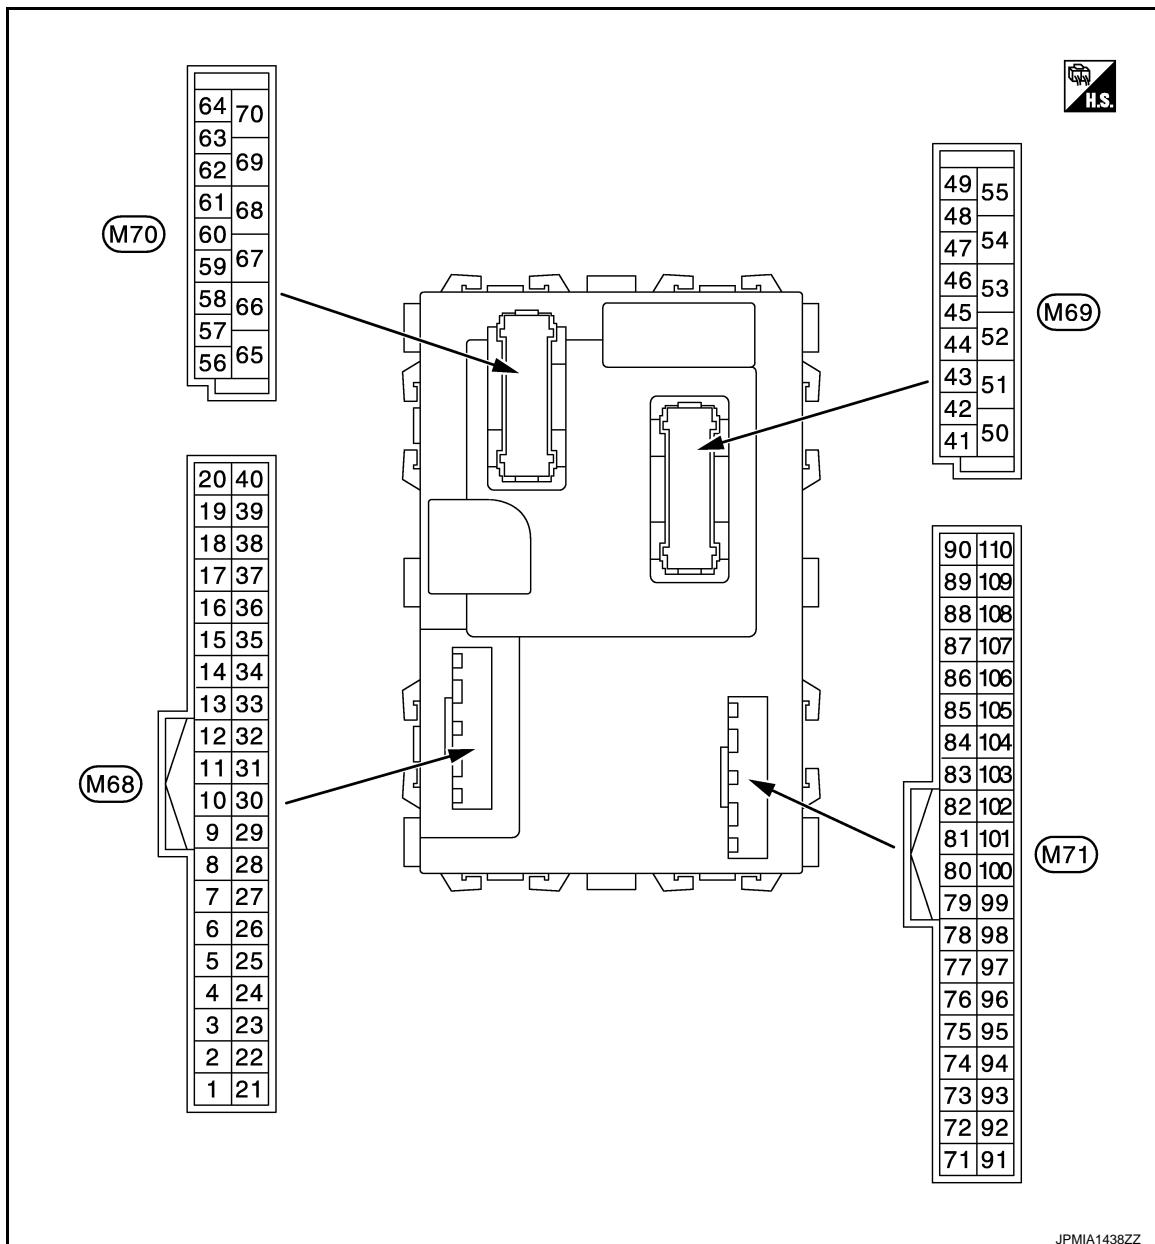






NOTE:

- Connector color
- M68, M70: Black
- M69, M71: White

PHYSICAL VALUES

BCM (BODY CONTROL MODULE)







< ECU DIAGNOSIS INFORMATION >

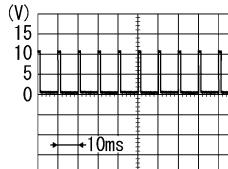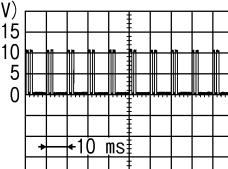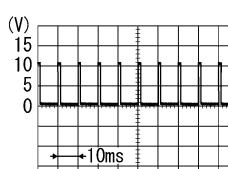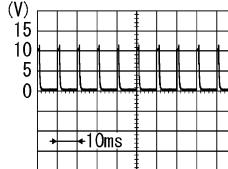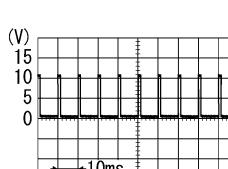Terminal No. (Wire color)	Description		Condition	Value (Approx.)	
	Signal name	Input/ Output			
+	-				
2 (BR/W)	Ground	Combination switch INPUT 5	Input	All switch OFF Turn signal switch RH Lighting switch HI Combination switch (Wiper intermittent dial 4) Lighting switch 1ST Lighting switch 2ND	0 V
					 PKIB4958J
					1.0 V
					 JPMIA0342JP
					2.0 V
3 (GR)	Ground	Combination switch INPUT 4	Input	All switch OFF Turn signal switch LH Lighting switch PASS Combination switch (Wiper intermittent dial 4) Lighting switch 2ND Front fog lamp switch ON	0 V
					 PKIB4958J
					1.0 V
					 PKIB4956J
					0.8 V
4 (L/Y)	Ground	Combination switch INPUT 3	Input	All switch OFF Front wiper switch LO Front wiper switch MIST Front wiper switch INT Combination switch (Wiper intermittent dial 4) Lighting switch AUTO	0 V
					 PKIB4958J
					1.0 V

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

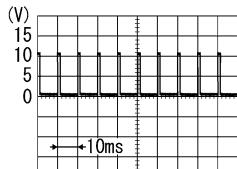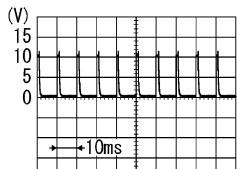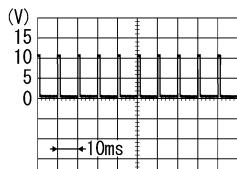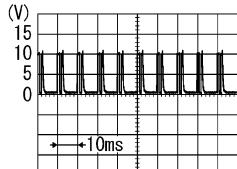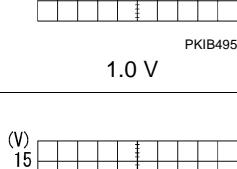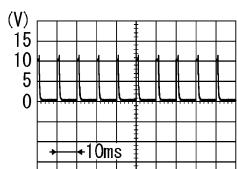Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
5 (G)	Ground	Combination switch INPUT 2	Input	<p>All switch OFF (Wiper intermittent dial 4)</p> <p>Front washer switch (Wiper intermittent dial 4)</p> <p>Rear washer ON (Wiper intermittent dial 4)</p> <p>Any of the condition below with all switch OFF</p> <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 <p>Rear wiper switch ON (Wiper intermittent dial 4)</p>
				 PKIB4958J 1.0 V
				 PKIB4956J 0.8 V
				 PKIB4958J 1.0 V
				 PKIB4952J 1.9 V
6 (L/R)	Ground	Combination switch INPUT 1	Input	<p>All switch OFF (Wiper intermittent dial 4)</p> <p>Front wiper switch HI (Wiper intermittent dial 4)</p> <p>Rear wiper switch INT (Wiper intermittent dial 4)</p> <p>Wiper intermittent dial 3 (All switch OFF)</p> <p>Any of the condition below with all switch OFF</p> <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 <p>Any of the condition below with all switch OFF</p> <ul style="list-style-type: none"> • Wiper intermittent dial 6 • Wiper intermittent dial 7
				 PKIB4956J 0.8 V
				 PKIB4956J 0.8 V




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
7 (W/R)	Ground	Door key cylinder switch UNLOCK	Input	Door key cylinder switch NEUTRAL position UNLOCK position
8 (W/B)	Ground	Door key cylinder switch LOCK	Input	Door key cylinder switch NEUTRAL position LOCK position
9 (R)	Ground	Stop lamp switch 1	Input	Stop lamp switch OFF (Brake pedal is not depressed) ON (Brake pedal is depressed)
12 (GR)	Ground	Door lock and unlock switch LOCK	Input	Door lock and unlock switch NEUTRAL position LOCK position
13 (BR)	Ground	Door lock and unlock switch UNLOCK	Input	Door lock and unlock switch NEUTRAL position UNLOCK position
14 (L/B)	Ground	Optical sensor	Input	Ignition switch ON When bright outside of the vehicle When dark outside of the vehicle
15 (W/L)	Ground	Rear window defogger switch	Input	Rear window defogger switch Not pressed Pressed
17 (R/G)	Ground	Optical sensor power supply	Output	Ignition switch OFF, ACC ON

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

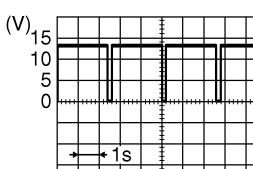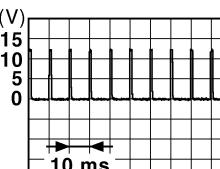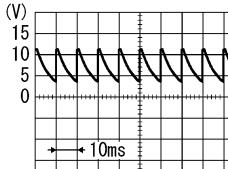Terminal No. (Wire color)	Description		Condition	Value (Approx.)		
	+	-				
18 (V)	Ground	Sensor ground	Input	Ignition switch ON	0 V	
21 (P/L)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot. Just after pressing ignition switch. Pointer of tester should move.	
23 (R/Y)	Ground	Security indicator lamp	Output	ON	0 V	
				Blinking (Ignition switch OFF)	 JPMIA0590GB 12.0 V	
				OFF	Battery voltage	
24* (GR/R)	Ground	Dongle link	Input/ Output	Ignition switch OFF	5 V	
25 (LG)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot. Just after pressing ignition switch. Pointer of tester should move.	
27 (Y/G)	Ground	A/C switch	Input	Air conditioner	OFF (A/C switch indicator: OFF)	 JPMIA0012GB 1.0 - 1.5 V
					ON (A/C switch indicator: ON)	0 V
28 (G/W)	Ground	Blower fan switch	Input	Blower fan	OFF	0 V
					ON	 PKIB4960J 7.0 - 8.0 V
29 (L/W)	Ground	Hazard switch	Input	Hazard switch	OFF	12 V
					ON	0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
31 (G/B)	Ground	Front door lock assembly driver side (Unlock sensor)	Input	Driver door
32 (LG)	Ground	Combination switch OUTPUT 5	Output	Combination switch
33 (Y/L)	Ground	Combination switch OUTPUT 4	Output	Combination switch

A

B

C

D

E

F

G

H

I

J

K


EXL

M


N

O


P

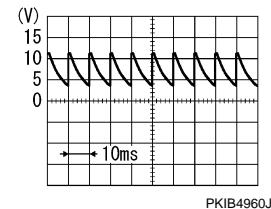


7.0 - 8.0 V

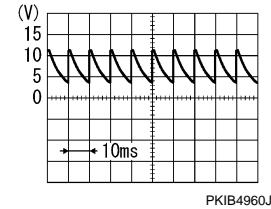


0 V

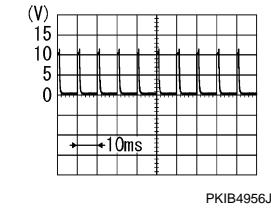

1.0 V

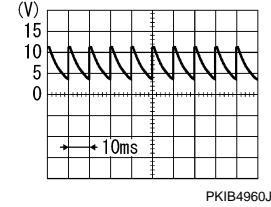














7.0 - 8.0 V

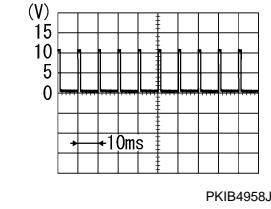

1.2 V



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

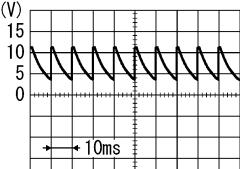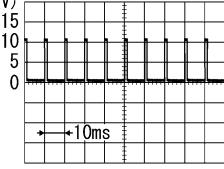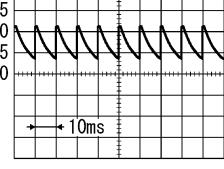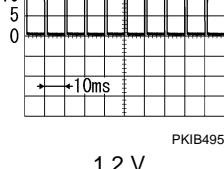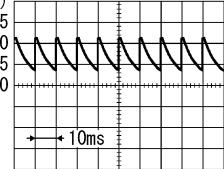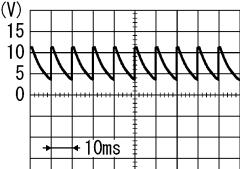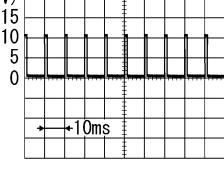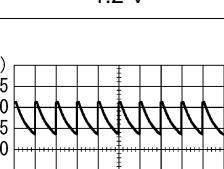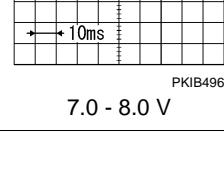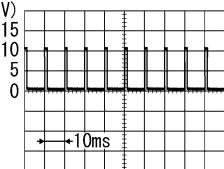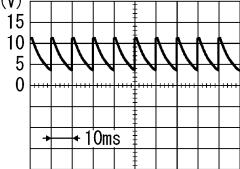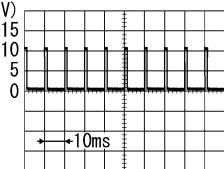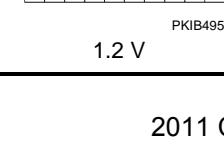Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
34 (W)	Ground	Combination switch OUTPUT 3	Output	 All switch OFF (Wiper intermittent dial 4)
				 Lighting switch 2ND (Wiper intermittent dial 4)
				 Lighting switch HI (Wiper intermittent dial 4)
				 Rear washer switch ON (Wiper intermittent dial 4)
				 Any of the condition below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3
35 (R/L)	Ground	Combination switch OUTPUT 2	Output	 All switch OFF
				 Lighting switch 2ND
				 Lighting switch PASS
				 Front wiper switch INT
				 Front wiper switch HI
36 (L/O)	Ground	Combination switch OUTPUT 1	Output	 All switch OFF
				 Turn signal switch RH
				 Turn signal switch LH
				 Front wiper switch LO (Front wiper switch MIST)
				 Front washer switch ON

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

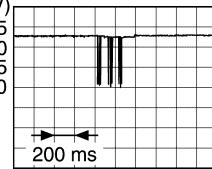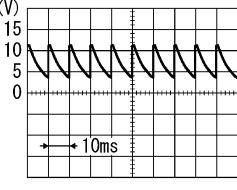Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
37 (G/O)	Ground	Selector lever P po-sition switch	Input	P position
				Any position other than P
		Ignition switch OFF (Remote keyless entry communication)	Waiting	Waiting
				When operating either button on Intelligent Key
		Ignition switch ON (TPMS communication)	Waiting	 (V) 15 10 5 0 200 ms JMMIA0572GB
				When receiving signal from tire pressure sensor
		CAN-H	Input/ Output	—
				—
		CAN-L	Input/ Output	—
				—
		Back door switch	Input	OFF (When back door closed)
				 (V) 15 10 5 0 + - 10ms PKIB4960J 9.5 - 10.0 V
		Rear wiper stop po-sition	Input	ON (When back door opened)
				0 V
		Ignition switch ON	Rear wiper stop position	12 V
				0 V

A

B

C

D

E

F

G

H

I

J

K

EXL

M





N

O

P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

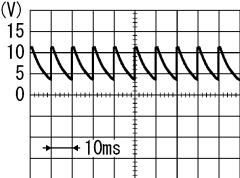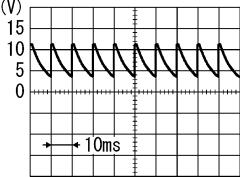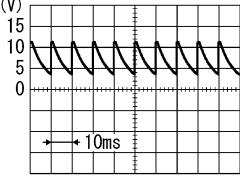
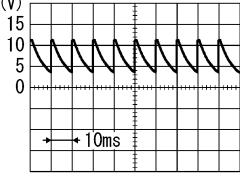
Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
45 (SB)	Ground	Passenger door switch	Input	Passenger door switch OFF (When passenger door closed)  PKIB4960J 7.0 - 8.0 V
46 (GR/L)	Ground	Rear RH door switch	Input	Rear RH door switch OFF (When rear RH door closed)  PKIB4960J 7.0 - 8.0 V
47 (BR/Y)	Ground	Driver door switch	Input	Driver door switch OFF (When driver door closed)  PKIB4960J 7.0 - 8.0 V
48 (W/G)	Ground	Rear LH door switch	Input	Rear LH door switch OFF (When rear LH door closed)  PKIB4960J 7.0 - 8.0 V
50 (R/W)	Ground	Back door lock actuator relay control	Output	Back door LOCK (Actuator is activated) Other than LOCK (Actuator is not activated)
51 (W)	Ground	Back door request switch	Input	Back door request switch ON (Pressed) OFF (Not pressed)
54 (L/W)	Ground	Rear wiper	Output	Rear wiper OFF (Stopped) ON (Activated)

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
55 (G)	Ground	Rear door UNLOCK	Output	UNLOCK (Actuator is activated) Rear door
				Other then UNLOCK (Actuator is not activated)
56 (L)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)
57 (Y)	Ground	Battery power supply	Input	Ignition switch OFF
59 (G)	Ground	Passenger door UNLOCK	Output	UNLOCK (Actuator is activated) Passenger door
				Other then UNLOCK (Actuator is not activated)
60 (W/B)	Ground	Turn signal LH	Output	Turn signal switch OFF Ignition switch ON
				Turn signal switch LH
61 (W/L)	Ground	Turn signal RH	Output	Turn signal switch OFF Ignition switch ON
				Turn signal switch RH
63 (BR)	Ground	Interior room lamp timer control	Output	OFF Interior room lamp
				ON
65 (V)	Ground	All doors LOCK	Output	LOCK (Actuator is activated) All doors
				Other then LOCK (Actuator is not activated)
66 (L/B)	Ground	Driver door UNLOCK	Output	UNLOCK (Actuator is activated) Driver door
				Other then UNLOCK (Actuator is not activated)
67 (B)	Ground	Ground	Output	Ignition switch ON
68 (L)	Ground	P/W power supply (IGN)	Output	Ignition switch ON
69 (L/W)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

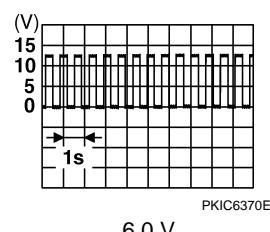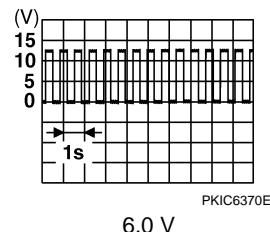

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

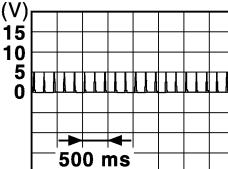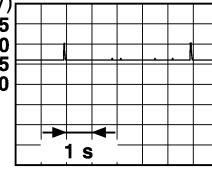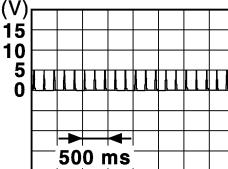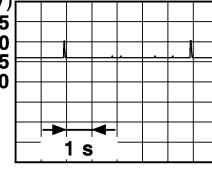Terminal No. (Wire color)	Description		Condition	Value (Approx.)	
	+	-			
70 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
75 (SB)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed) 0 V
				OFF (Not pressed)	12 V
76 (L/O)	Ground	Push-button ignition switch (push switch)	Input	Push-button ignition switch (push switch)	Pressed 0 V
				Not pressed	12 V
78 (LG)	Ground	Driver door antenna (+)	Output	When Intelligent Key is not in the antenna detection area	 (V) 15 10 5 0 500 ms JMKIA3838GB
				When the driver door request switch is operated with ignition switch OFF	 (V) 15 10 5 0 1 s JMKIA3839GB
79 (V)	Ground	Driver door antenna (-)	Output	When Intelligent Key is not in the antenna detection area	 (V) 15 10 5 0 500 ms JMKIA3838GB
				When the driver door request switch is operated with ignition switch OFF	 (V) 15 10 5 0 1 s JMKIA3839GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
80 (BR/Y)	Ground	Passenger door antenna (+)	Output	When Intelligent Key is not in the antenna detection area
				When the passenger door request switch is operated with ignition switch OFF
81 (L/Y)	Ground	Passenger door antenna (-)	Output	When Intelligent Key is not in the antenna detection area
				When the passenger door request switch is operated with ignition switch OFF
82 (W/B)	Ground	Back door antenna (+)	Output	When Intelligent Key is not in the antenna detection area
				When the back door request switch is operated with ignition switch OFF

A

B

C

D

E

F

G

H

I

J

K


EXL

M


N

O


P

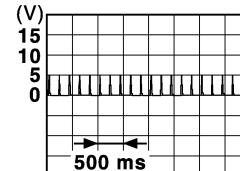


JMKIA3839GB

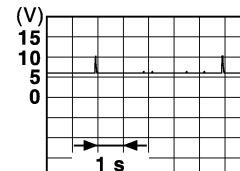


JMKIA3839GB

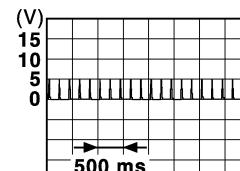


JMKIA3839GB

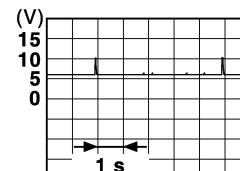

JMKIA3839GB

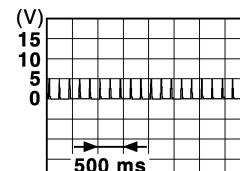

JMKIA3839GB

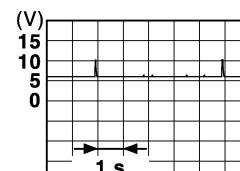


JMKIA3839GB


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
83 (B/W)	Ground	Back door antenna (-)	Output	When Intelligent Key is not in the antenna detection area
				When the back door request switch is operated with ignition switch OFF
84 (Y/G)	Ground	Room antenna (+) (Instrument panel)	Output	When Intelligent Key is not in the antenna detection area
				When Intelligent Key is in the antenna detection area
85 (Y/L)	Ground	Room antenna (-) (Instrument panel)	Output	When Intelligent Key is not in the antenna detection area
				When Intelligent Key is in the antenna detection area

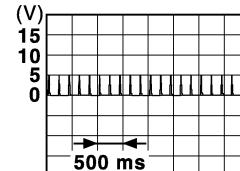


JMKIA3838GB

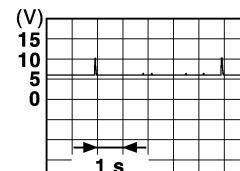


JMKIA3839GB

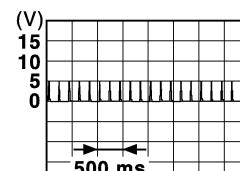


JMKIA3838GB

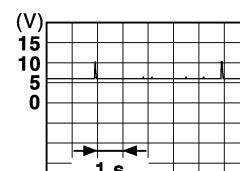

JMKIA3839GB

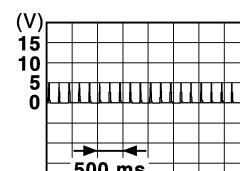






JMKIA3838GB

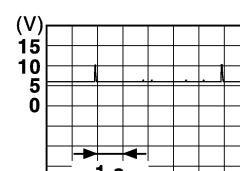

JMKIA3839GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

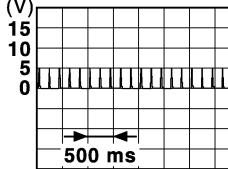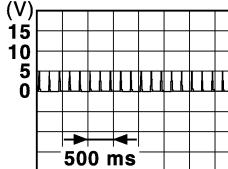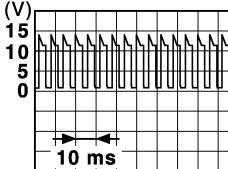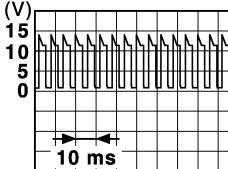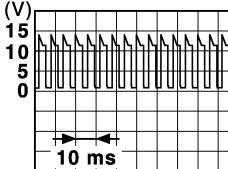Terminal No. (Wire color)	Description		Condition	Value (Approx.)				
	Signal name	Input/ Output						
+	-							
86 (P)	Ground	Luggage room antenna (+)	Output	<p>When Intelligent Key is not in the antenna detection area</p>  <p>JMKIA3839GB</p>				
87 (L)	Ground	Luggage room antenna (-)	Output	<p>When Intelligent Key is not in the antenna detection area</p>  <p>JMKIA3839GB</p>				
90 (W/L)	Ground	Push-button ignition switch illumination	Output	<p>Push-button ignition switch illumination</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>ON</td> <td>12 V</td> </tr> <tr> <td>OFF</td> <td>0 V</td> </tr> </table>	ON	12 V	OFF	0 V
ON	12 V							
OFF	0 V							
91 (Y)	Ground	ACC/ON indicator lamp	Output	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>OFF</td> <td>Battery voltage</td> </tr> <tr> <td>ACC or ON</td> <td>0.5 V</td> </tr> </table>	OFF	Battery voltage	ACC or ON	0.5 V
OFF	Battery voltage							
ACC or ON	0.5 V							
92 (BR/R)	Ground	Push-button ignition switch illumination ground	Output	<table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td>OFF</td> <td>0 V</td> </tr> <tr> <td>ON</td> <td> <p>NOTE: When the illumination brightening/dimming level is in the neutral position</p>  <p>JPMIA1554GB</p> <p>6.0 - 7.0 V</p> </td> </tr> </table>	OFF	0 V	ON	<p>NOTE: When the illumination brightening/dimming level is in the neutral position</p>  <p>JPMIA1554GB</p> <p>6.0 - 7.0 V</p>
OFF	0 V							
ON	<p>NOTE: When the illumination brightening/dimming level is in the neutral position</p>  <p>JPMIA1554GB</p> <p>6.0 - 7.0 V</p>							

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	+	-		
93 (GR/W)	Ground	Intelligent Key warning buzzer	Output Intelligent Key warning buzzer	Sounding 0 V
				Not sounding 12 V
96 (BR/W)	Ground	ACC relay control	Output Ignition switch	OFF 0 V
				ACC or ON 12 V
97 (L/R)	Ground	Starter relay control	Output Ignition switch ON	When selector lever is in P or N position Battery voltage
				When selector lever is not in P or N position 0 V
98 (BR)	Ground	Ignition relay (IPDM E/R) control	Output Ignition switch	OFF or ACC 12 V
				ON 0 V
99 (W/R)	Ground	Ignition relay control	Output Ignition switch	OFF or ACC 0 V
				ON 12 V
100 (G)	Ground	Passenger door request switch	Input Passenger door request switch	ON (Pressed) 0 V
				OFF (Not pressed) 12 V
102 (G)	Ground	Selector lever P/N position	Input Selector lever	P or N position Battery voltage
				Except P and N positions 0 V
104 (Y/R)	Ground	CVT shift selector (detention switch) power supply	Output	Ignition switch ON 12 V
105 (B/O)	Ground	Stop lamp switch 2	Input	Ignition switch OFF Battery voltage
106 (Y/B)	Ground	Blower fan motor relay control	Output Ignition switch	OFF or ACC 0 V
				ON 12 V

*: For Canada


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

WITH INTELLIGENT KEY : Wiring Diagram - BCM -

INFOID:0000000006952991

BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY)

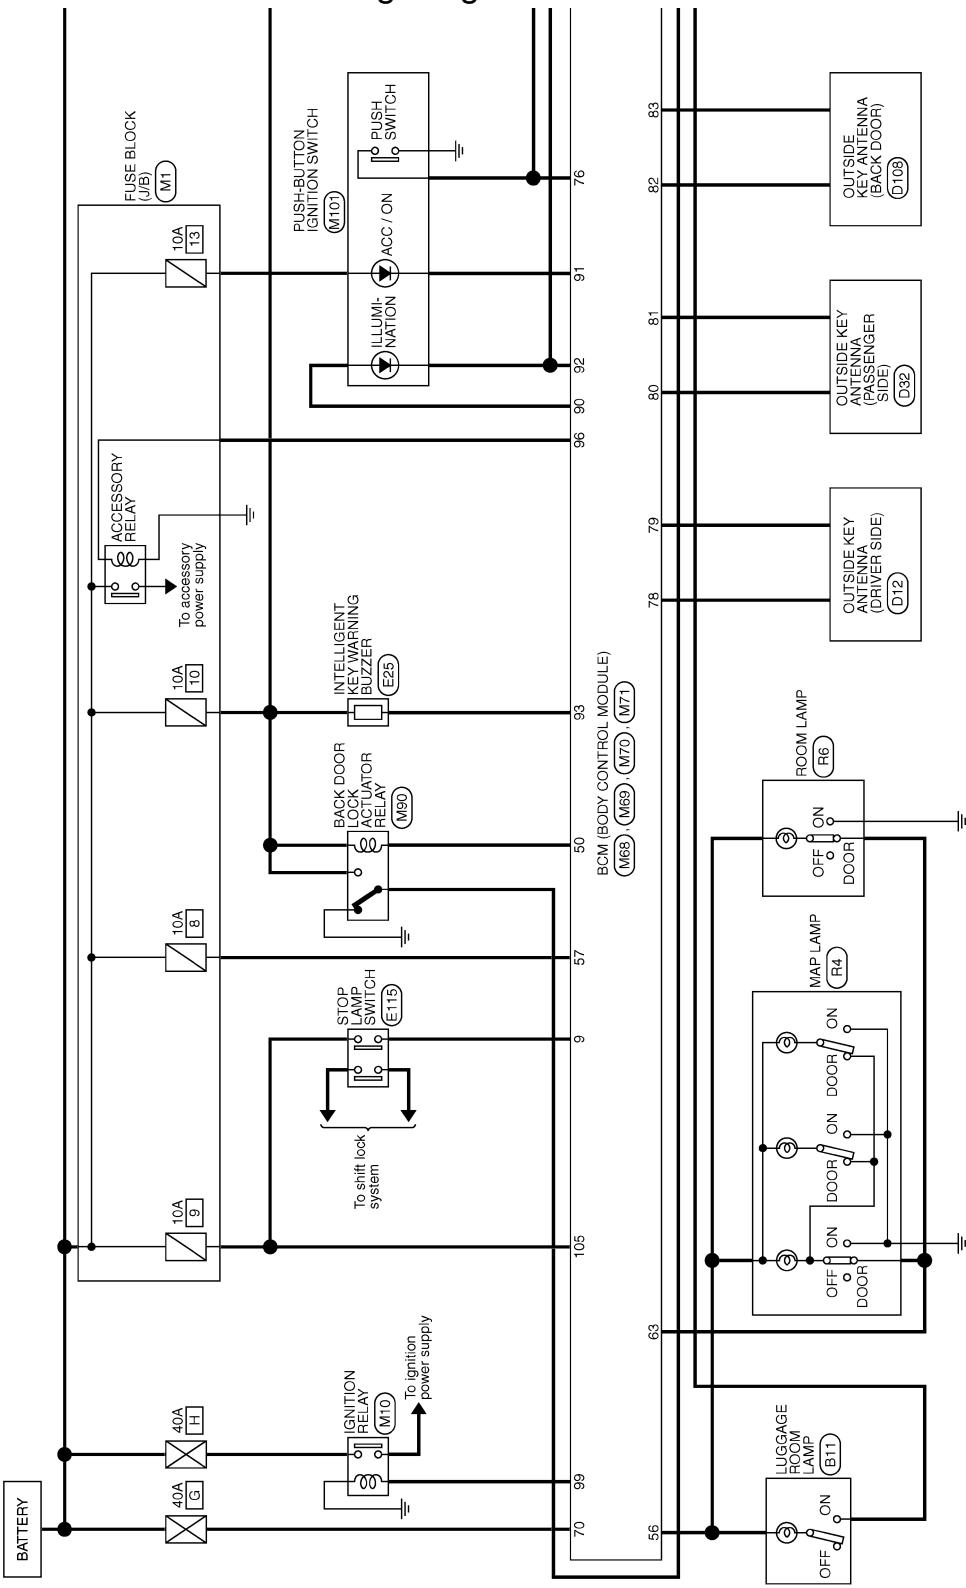


2010/10/14

JCMWN0372GB

A
B
C
D
E
F
G
H
I
J
K
L
EXL
M
N
O
P
Z

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

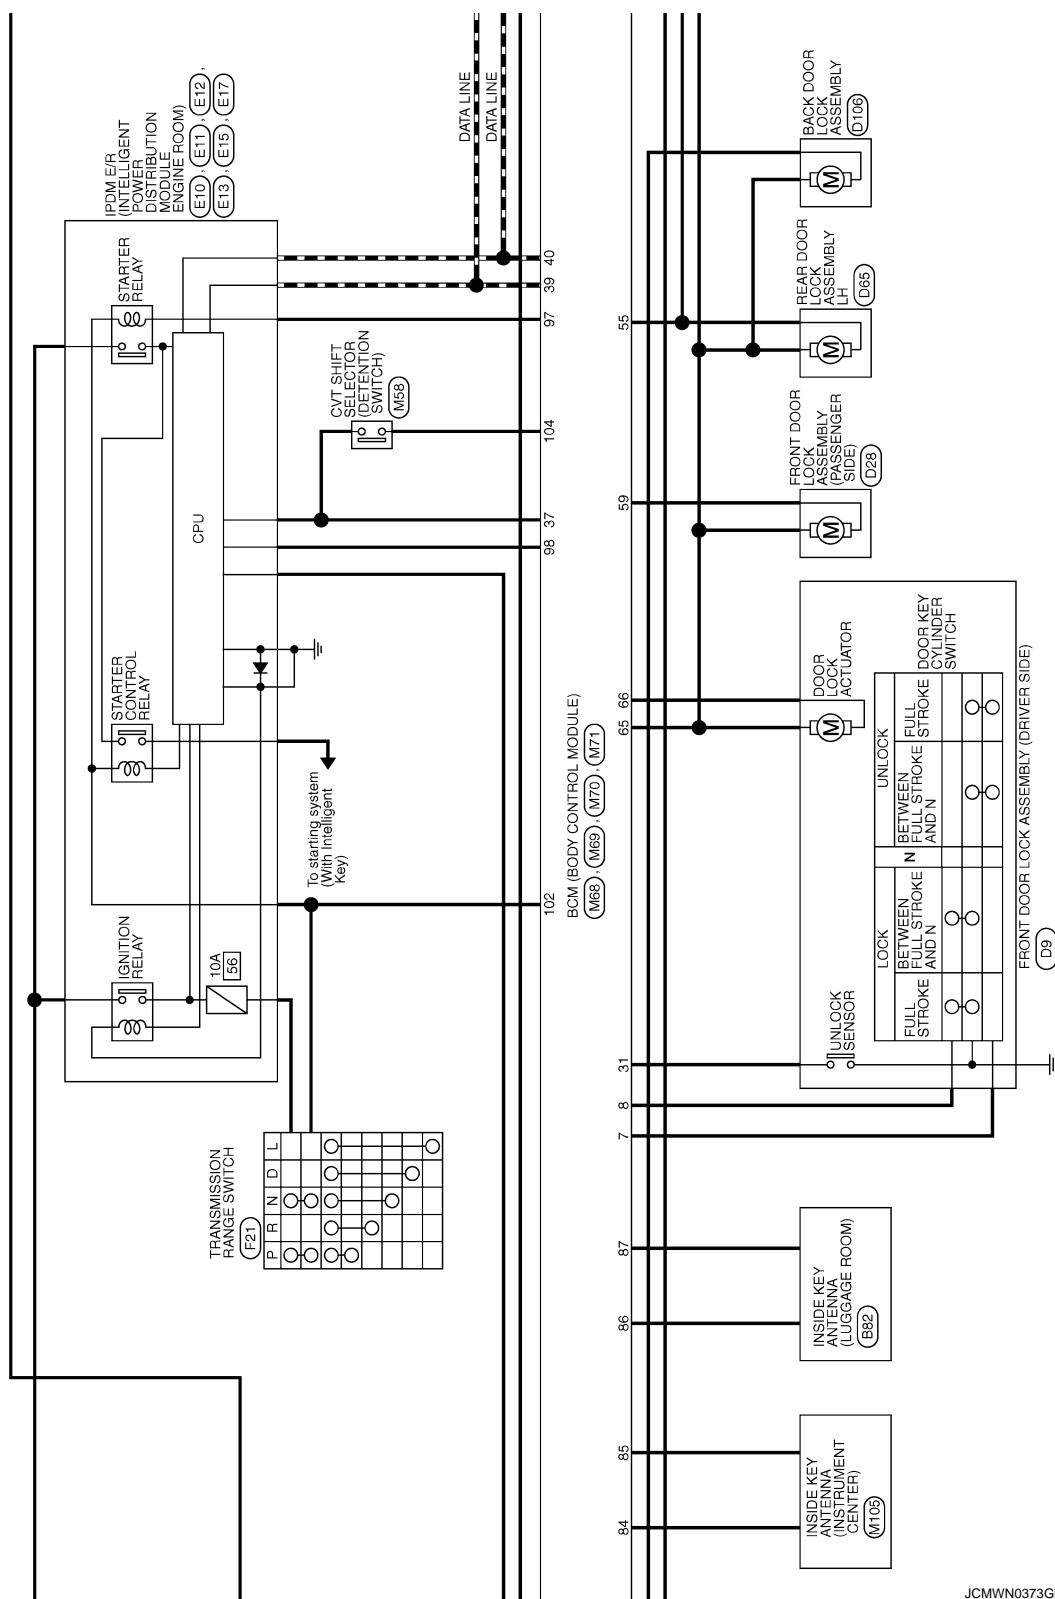

JCMWN0373GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

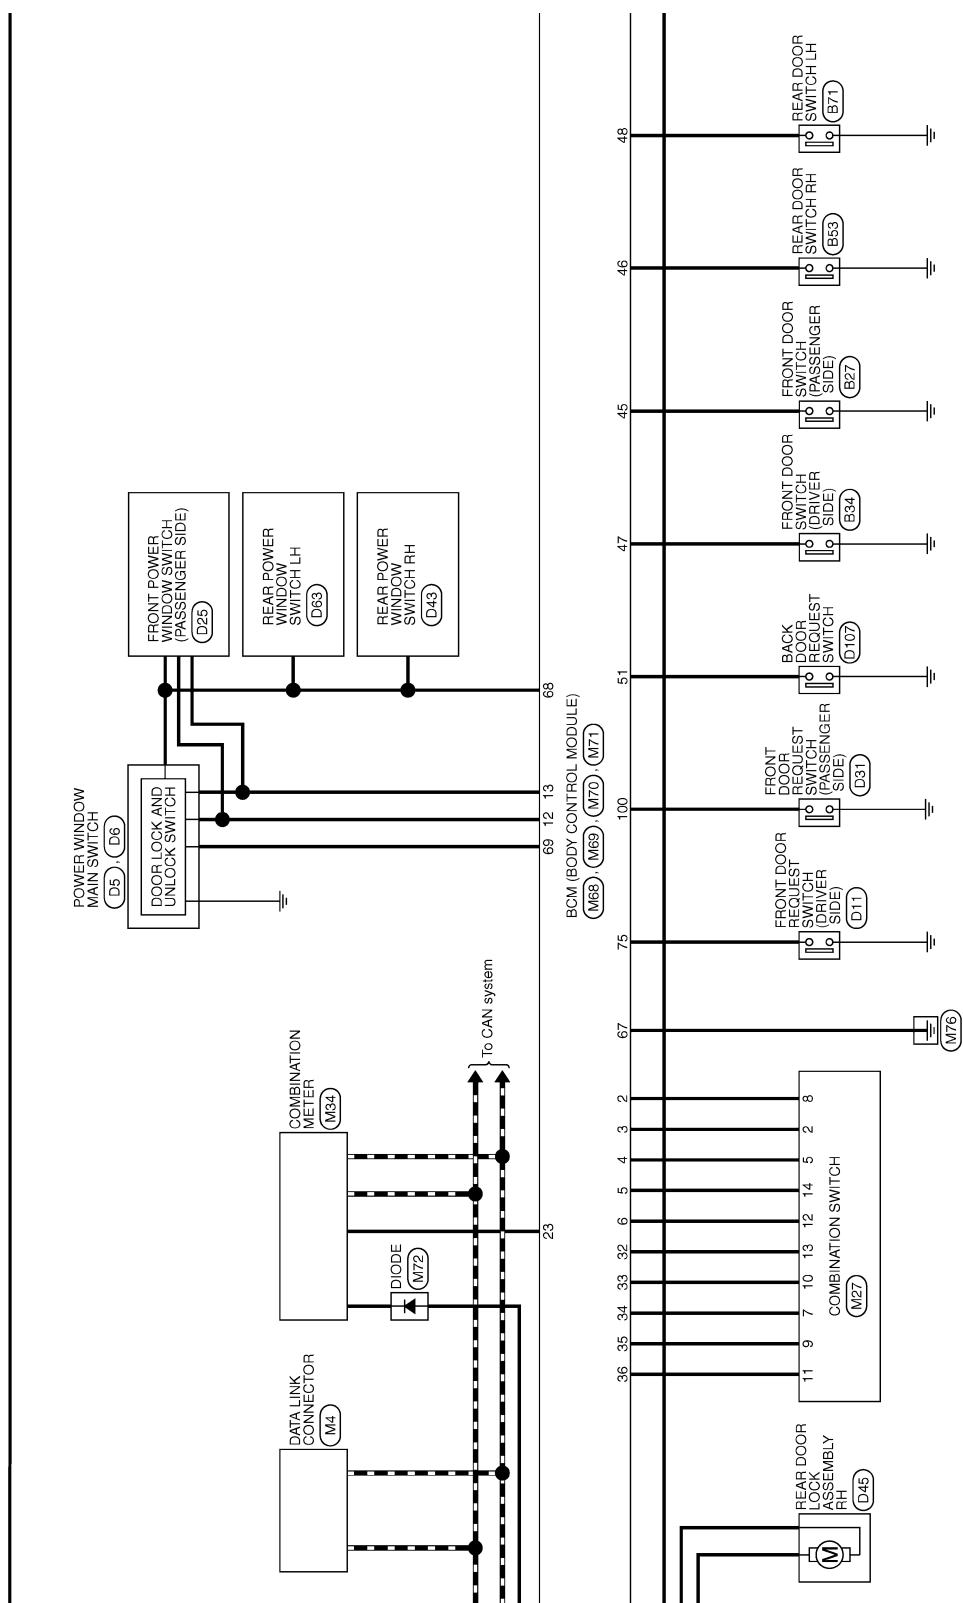


JCMWN0374GB

A
B
C
D
E
F
G
H
I
J
K
L
EXL
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


 : For Canada

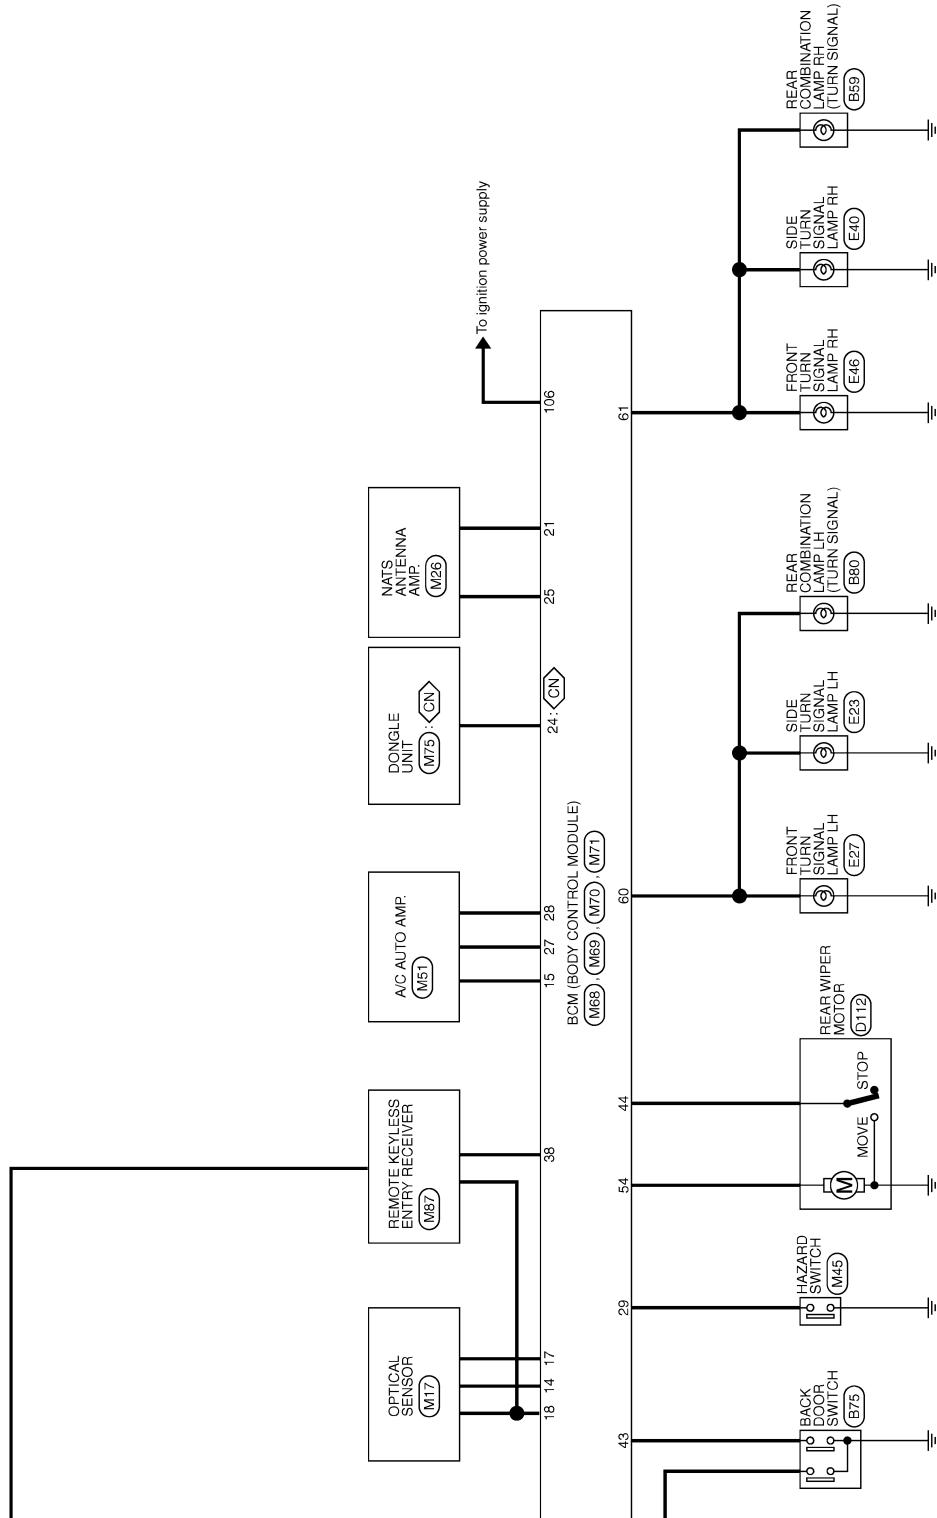

JCMWN0375GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

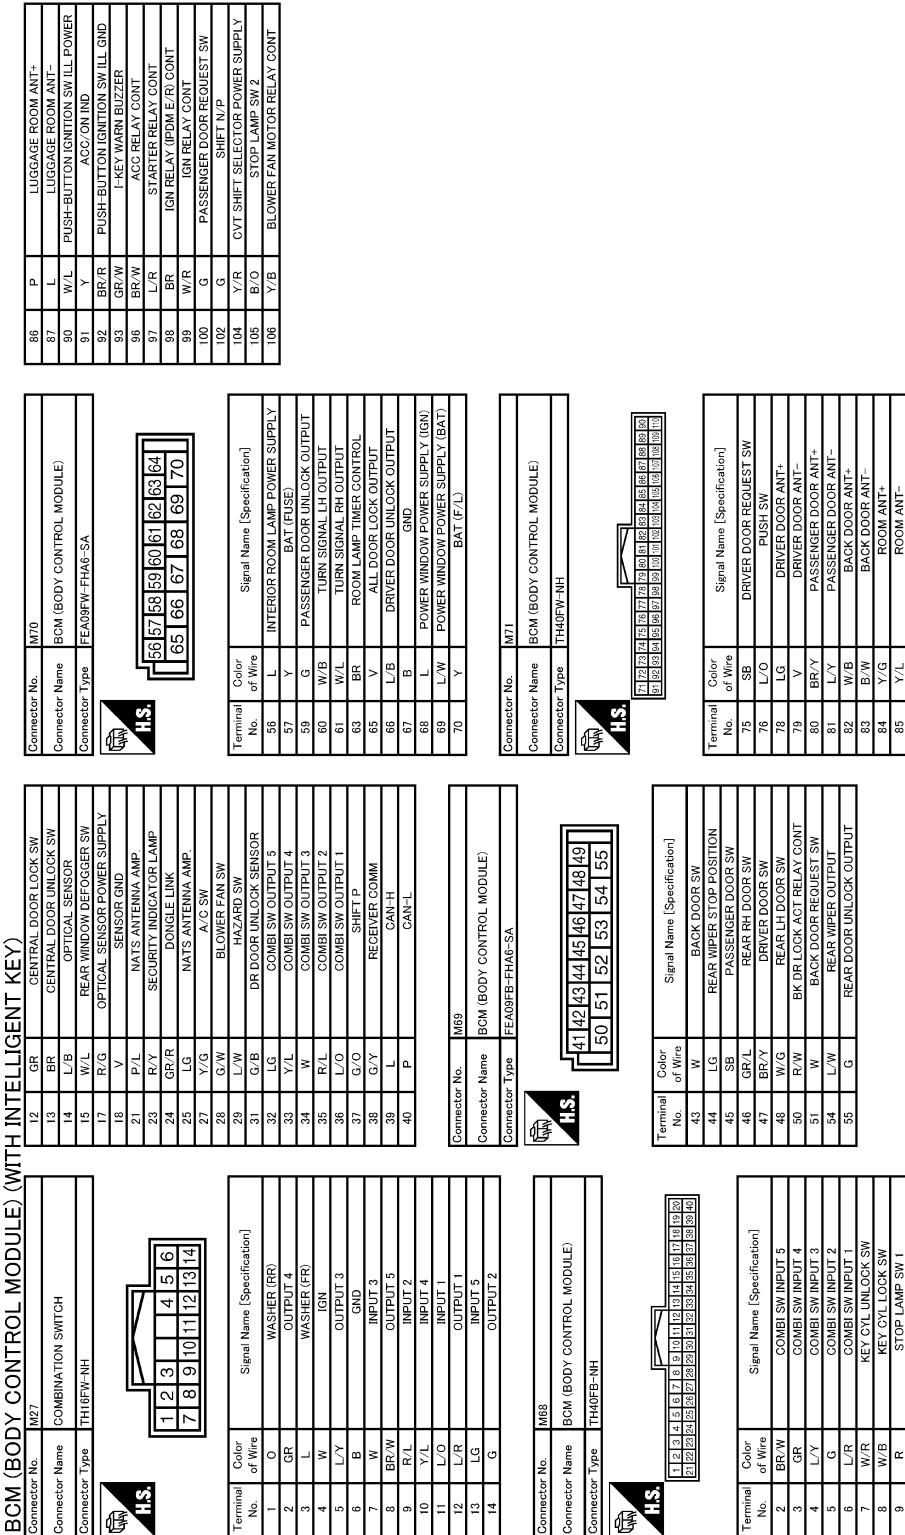

WITH INTELLIGENT KEY : Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI-SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2196: DONGLE NG	Inhibit engine cranking	Erase DTC
B2198: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> • Starter relay control signal • Starter relay status signal (CAN)
B260F: ENG STATE SIG LOST	Inhibit engine cranking	When any of the following conditions are fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN)
B26F1: IGN RELAY OFF	Inhibit engine cranking	When the following conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch ON signal (CAN: Transmitted from BCM): ON • Ignition switch ON signal (CAN: Transmitted from IPDM E/R): ON
B26F2: IGN RELAY ON	Inhibit engine cranking	When the following conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch ON signal (CAN: Transmitted from BCM): OFF • Ignition switch ON signal (CAN: Transmitted from IPDM E/R): OFF
B26F3: START CONT RLY ON	Inhibit engine cranking	When the following conditions are fulfilled <ul style="list-style-type: none"> • Starter control relay signal (CAN: Transmitted from BCM): OFF • Starter control relay signal (CAN: Transmitted from IPDM E/R): OFF
B26F4: START CONT RLY OFF	Inhibit engine cranking	When the following conditions are fulfilled <ul style="list-style-type: none"> • Starter control relay signal (CAN: Transmitted from BCM): ON • Starter control relay signal (CAN: Transmitted from IPDM E/R): ON
B26F7: BCM	Inhibit engine cranking by Intelligent Key system	When room antenna and luggage room antenna functions normally

REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper stop position signal.

When the rear wiper stop position signal does not change for more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

Condition of cancellation

1. More than 1 minute is passed after the rear wiper stop.
2. Turn rear wiper switch OFF.
3. Operate the rear wiper switch or rear washer switch.

WITH INTELLIGENT KEY : DTC Inspection Priority Chart

INFOID:0000000006952993

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> • U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN)
3	<ul style="list-style-type: none"> • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM • B2195: ANTI-SCANNING • B2196: DONGLE NG • B2198: NATS ANTENNA AMP

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Priority	DTC	
4	<ul style="list-style-type: none"> • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP/CLUTCH SW • B2605: PNP/CLUTCH SW • B2608: STARTER RELAY • B260F: ENG STATE SIG LOST • B2614: BCM • B2615: BCM • B2616: BCM • B2618: BCM • B261A: PUSH-BTN IGN SW • B26F1: IGN RELAY OFF • B26F2: IGN RELAY ON • B26F3: START CONT RLY ON • B26F4: START CONT RLY OFF • B26F6: BCM • B26F7: BCM • B26F8: BCM • B26FC: KEY REGISTRATION • C1729: VHCL SPEED SIG ERR • U0415: VEHICLE SPEED 	A B C D E F G
5	<ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL 	H I J K
6	<ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA 	
7	<ul style="list-style-type: none"> • B2626: OUTSIDE ANTENNA • B2627: OUTSIDE ANTENNA • B2628: OUTSIDE ANTENNA 	EXL

WITH INTELLIGENT KEY : DTC Index

INFOID:0000000006952994

M

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [BCS-18, "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)"](#).

N

O

P

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—	—
U1000: CAN COMM	—	—	—	—	BCS-38

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
U1010: CONTROL UNIT (CAN)	—	—	—	—	BCS-39
U0415: VEHICLE SPEED	—	—	×	—	BCS-40
B2192: ID DISCORD BCM-ECM	×	—	—	—	SEC-37
B2193: CHAIN OF BCM-ECM	×	—	—	—	SEC-39
B2195: ANTI-SCANNING	×	—	—	—	SEC-40
B2196: DONGLE NG	×	—	—	—	SEC-41
B2198: NATS ANTENNA AMP	×	—	—	—	SEC-43
B2555: STOP LAMP	—	×	×	—	SEC-47
B2556: PUSH-BTN IGN SW	—	×	×	—	SEC-49
B2557: VEHICLE SPEED	—	×	×	—	SEC-51
B2562: LOW VOLTAGE	—	×	—	—	BCS-41
B2601: SHIFT POSITION	—	×	×	—	SEC-52
B2602: SHIFT POSITION	—	×	×	—	SEC-55
B2603: SHIFT POSI STATUS	—	×	×	—	SEC-58
B2604: PNP/CLUTCH SW	—	×	×	—	SEC-63
B2605: PNP/CLUTCH SW	—	×	×	—	SEC-66
B2608: STARTER RELAY	×	×	×	—	SEC-68
B260F: ENG STATE SIG LOST	×	×	×	—	SEC-70
B2614: BCM	—	×	×	—	PCS-77
B2615: BCM	—	×	×	—	PCS-80
B2616: BCM	—	×	×	—	PCS-83
B2618: BCM	—	×	×	—	PCS-86
B261A: PUSH-BTN IGN SW	—	×	×	—	PCS-87
B2621: INSIDE ANTENNA	—	×	—	—	DLK-44
B2622: INSIDE ANTENNA	—	×	—	—	DLK-46
B2626: OUTSIDE ANTENNA	—	×	—	—	DLK-50
B2627: OUTSIDE ANTENNA	—	×	—	—	DLK-48
B2628: OUTSIDE ANTENNA	—	×	—	—	DLK-52
B26F1: IGN RELAY OFF	×	×	×	—	PCS-89
B26F2: IGN RELAY ON	×	×	×	—	PCS-91
B26F3: START CONT RLY ON	×	×	×	—	SEC-71
B26F4: START CONT RLY OFF	×	×	×	—	SEC-72
B26F6: BCM	—	×	×	—	PCS-93
B26F7: BCM	×	×	×	—	SEC-74
B26F8: BCM	—	×	×	—	SEC-75
B26FC: KEY REGISTRATION	—	×	×	—	SEC-76
C1704: LOW PRESSURE FL	—	—	—	×	WT-25
C1705: LOW PRESSURE FR	—	—	—	×	
C1706: LOW PRESSURE RR	—	—	—	×	
C1707: LOW PRESSURE RL	—	—	—	×	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
C1708: [NO DATA] FL	—	—	—	×	WT-27
C1709: [NO DATA] FR	—	—	—	×	
C1710: [NO DATA] RR	—	—	—	×	
C1711: [NO DATA] RL	—	—	—	×	
C1716: [PRESSDATA ERR] FL	—	—	—	×	WT-30
C1717: [PRESSDATA ERR] FR	—	—	—	×	
C1718: [PRESSDATA ERR] RR	—	—	—	×	
C1719: [PRESSDATA ERR] RL	—	—	—	×	
C1729: VHCL SPEED SIG ERR	—	—	—	×	WT-32

WITHOUT INTELLIGENT KEY

WITHOUT INTELLIGENT KEY : Reference Value

INFOID:0000000006952995

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
IGN ON SW	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
KEY ON SW	Mechanical key is removed from key cylinder	Off
	Mechanical key is inserted to key cylinder	On
CDL LOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the lock side	On
CDL UNLOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the unlock side	On
DOOR SW-DR	Driver's door closed	Off
	Driver's door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	Rear RH door closed	Off
	Rear RH door opened	On
DOOR SW-RL	Rear LH door closed	Off
	Rear LH door opened	On
BACK DOOR SW	Back door closed	Off
	Back door opened	On
LOCK STATUS	NOTE: The item is indicated, but not monitored.	Off
ACC ON SW	Ignition switch OFF	Off
	Ignition switch ACC or ON	On
KEYLESS LOCK	"LOCK" button of key fob is not pressed	Off
	"LOCK" button of key fob is pressed	On
KEYLESS UNLOCK	"UNLOCK" button of key fob is not pressed	Off
	"UNLOCK" button of key fob is pressed	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
SHOCK SENSOR	NOTE: The item is indicated, but not monitored.	NORMAL
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off
	Driver door key cylinder LOCK position	On
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off
	Driver door key cylinder UNLOCK position	On
VEHICLE SPEED	While driving	Equivalent to speedometer reading
REAR DEF SW	Rear window defogger switch OFF	Off
	Rear window defogger switch ON	On
REVERSE SW CAN	NOTE: The item is indicated, but not used.	Off
		On
TAIL LAMP SW	Lighting switch OFF	Off
	Lighting switch 1ST	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
BUCKLE SW	The seat belt (driver side) is fastened. [Seat belt switch (driver side) OFF]	Off
	The seat belt (driver side) is unfastened. [Seat belt switch (driver side) ON]	On
TRNK/HAT MNTR	NOTE: The item is indicated, but not monitored.	Off
ACC SW	Ignition switch OFF	Off
	Ignition switch ACC or ON	On
KYLS TRNK/HAT	NOTE: The item is indicated, but not monitored.	Off
KEYLESS PANIC	PANIC button of key fob is not pressed	Off
	PANIC button of key fob is pressed	On
HI BEAM SW	Lighting switch OFF	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Lighting switch OFF	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Lighting switch OFF	Off
	Lighting switch 2ND	On
AUTO LIGHT SW	Lighting switch OFF	Off
	Lighting switch AUTO	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
RR FOG SW	NOTE: The item is indicated, but not monitored.	Off
TURN SIGNAL R	Turn signal switch OFF	Off
	Turn signal switch RH	On
TURN SIGNAL L	Turn signal switch OFF	Off
	Turn signal switch LH	On
PKB SW	Parking brake switch is OFF	Off
	Parking brake switch is ON	On
ENGINE RUN	Engine stopped	Off
	Engine running	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
OPTI SEN (DTCT)	Bright outside of the vehicle	Close to 5 V
	Dark outside of the vehicle	Close to 0 V
OPTI SEN (FILT)	Bright outside of the vehicle (Lighting switch AUTO)	Close to 5 V
	Dark outside of the vehicle (Lighting switch AUTO)	Close to 1.50 V
LIG SEN COND	NOTE: The item is indicated, but not monitored.	OFF
IGN SW CAN	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
FR WIPER HI	Front wiper switch OFF	Off
	Front wiper switch HI	On
FR WIPER LOW	Front wiper switch OFF	Off
	Front wiper switch LO	On
FR WIPER INT	Front wiper switch OFF	Off
	Front wiper switch INT	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7
FR WIPER STOP	Any position other than front wiper stop position	Off
	Front wiper stop position	On
RR WIPER ON	Rear wiper switch OFF	Off
	Rear wiper switch ON	On
RR WIPER INT	Rear wiper switch OFF	Off
	Rear wiper switch INT	On
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On
RR WIPER STOP	Rear wiper stop position	Off
	Other than rear wiper stop position	On
RAIN SENSOR	NOTE: The item is indicated, but not monitored.	Off
HAZARD SW	Hazard switch OFF	Off
	Hazard switch ON	On
FAN ON SIG	Blower control dial OFF	Off
	Other than blower control dial OFF	On
AIR COND SW	• Air conditioner OFF (A/C switch indicator OFF) (Automatic air conditioner) • A/C switch OFF (Manual air conditioner)	Off
	• Air conditioner ON (A/C switch indicator ON) (Automatic air conditioner) • A/C switch ON (Manual air conditioner)	On
THERMO AMP NOTE: At models with automatic air conditioner this item is not monitored.	Ignition switch ON	Off
	Evaporator is extremely low temperature	On
FR DEF SW	Other than A/C mode defroster ON position	Off
	A/C mode defroster ON position	On
KEYLESS TRUNK	NOTE: The item is indicated, but not monitored.	Off
TRNK OPNR SW	NOTE: The item is indicated, but not monitored.	Off

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
TRNK OPN MNTR	NOTE: The item is indicated, but not monitored.	Off
HOOD SW	Close the hood	Off
	Open the hood	On
TRANSPOUNDER	Other than the ignition switch is ON by key registered to BCM.	Off
	The ignition switch is ON by key registered to BCM.	On
INTELLI KEY	NOTE: The item is indicated, but not used.	Off
AUTO RELOCK	NOTE: The item is indicated, but not monitored.	Off
OIL PRESS SW	<ul style="list-style-type: none"> • Ignition switch OFF or ACC • Engine running 	Off
	Ignition switch ON	On
BRAKE SW	Brake pedal is not depressed	Off
	Brake pedal is depressed	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

TERMINAL LAYOUT

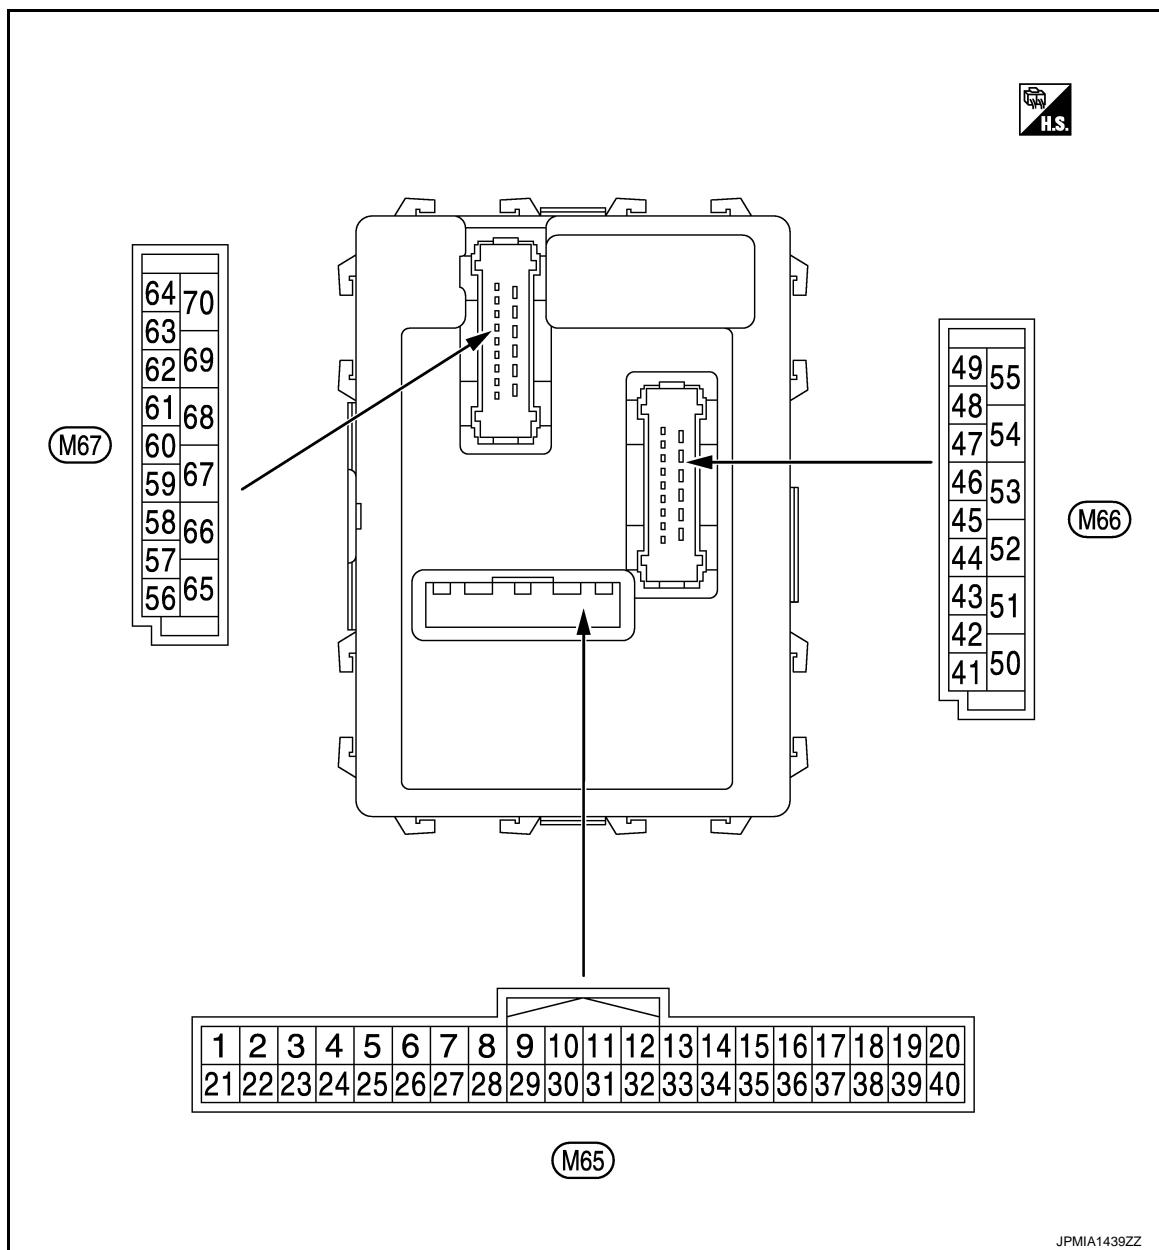






NOTE:

- M65, M66: White
- M67: Black

PHYSICAL VALUES






BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

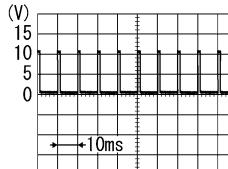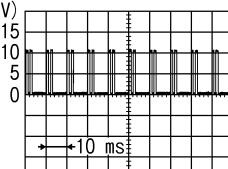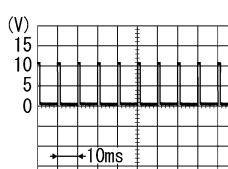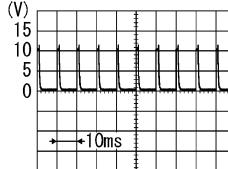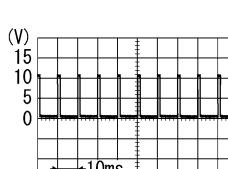Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
2 (BR/W)	Ground	Combination switch INPUT 5	Combination switch (Wiper intermit- tent dial 4)	All switch OFF
				Turn signal switch RH
				Lighting switch HI
				Lighting switch 1ST
				 PKIB4958J 1.0 V
				 JPMIA0342JP 2.0 V
3 (GR)	Ground	Combination switch INPUT 4	Combination switch (Wiper intermit- tent dial 4)	All switch OFF
				Turn signal switch LH
				Lighting switch PASS
				Lighting switch 2ND
				 PKIB4958J 1.0 V
				 PKIB4956J 0.8 V
4 (L/Y)	Ground	Combination switch INPUT 3	Combination switch (Wiper intermit- tent dial 4)	All switch OFF
				Front wiper switch LO
				Front wiper switch MIST
				Front wiper switch INT
				Lighting switch AUTO
				 PKIB4958J 1.0 V




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

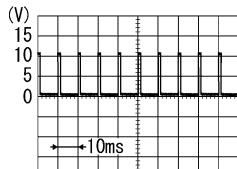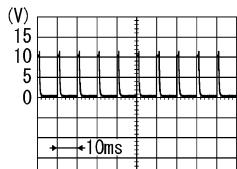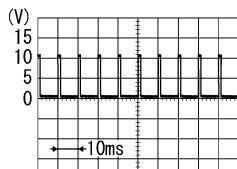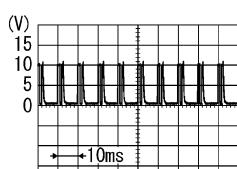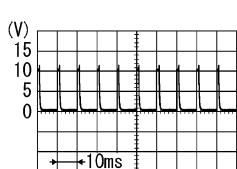Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
5 (G)	Ground	Combination switch INPUT 2	Input	All switch OFF (Wiper intermittent dial 4) Front washer switch (Wiper intermittent dial 4) Rear washer switch ON (Wiper intermittent dial 4) Any of the condition below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 Rear wiper switch ON (Wiper intermittent dial 4)
				 PKIB4958J 1.0 V
				 PKIB4956J 0.8 V
				All switch OFF (Wiper intermittent dial 4) Front wiper switch HI (Wiper intermittent dial 4) Rear wiper switch INT (Wiper intermittent dial 4) Wiper intermittent dial 3 (All switch OFF)
				 PKIB4958J 1.0 V
				Any of the condition below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2
				 PKIB4952J 1.9 V
				Any of the condition below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 6 • Wiper intermittent dial 7
				 PKIB4956J 0.8 V




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

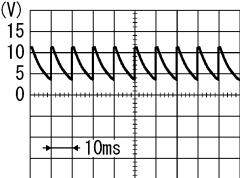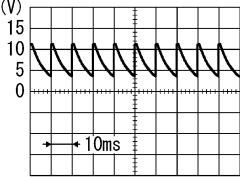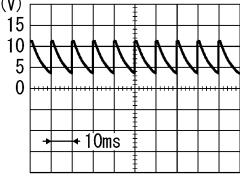Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
7 (W/R)	Ground	Door key cylinder switch UNLOCK	Input	Door key cylinder switch	NEUTRAL position	 PKIB4960J 7.0 - 8.0 V
					UNLOCK position	
8 (W/B)	Ground	Door key cylinder switch LOCK	Input	Door key cylinder switch	NEUTRAL position	12 V
					LOCK position	0 V
9 (R)	Ground	Stop lamp switch	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is depressed)	Battery voltage
10 (W/L)	Ground	Rear window defogger switch	Input	Rear window defogger switch	OFF (Not pressed)	12 V
					ON (Pressed)	0 V
11 (L/Y)	Ground	Ignition switch ACC	Input	Ignition switch OFF		0 V
				Ignition switch ACC or ON		Battery voltage
12 (SB)	Ground	Passenger door switch	Input	Passenger door switch	OFF (When passenger door closed)	 PKIB4960J 7.0 - 8.0 V
					ON (When passenger door opened)	
13 (GR/L)	Ground	Rear RH door switch	Input	Rear RH door switch	OFF (When rear RH door closed)	 PKIB4960J 7.0 - 8.0 V
					ON (When rear RH door opened)	
14 (L/B)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
17 (R/G)	Ground	Optical sensor power supply	Output	Ignition switch	OFF, ACC	0 V
					ON	5 V
18 (V)	Ground	Receiver and sensor ground	Input	Ignition switch ON		0 V







BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

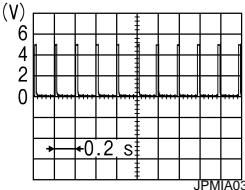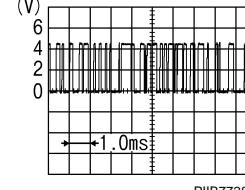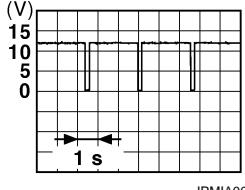Terminal No. (Wire color)	Description		Condition	Value (Approx.)		
	Signal name	Input/ Output				
+	-					
19 (BR)	Ground	Remote keyless en- try receiver power supply	Input	Insert mechanical key into ignition key cylinder Remove mechanical key from ignition key cylinder (Any door opened) Remove mechanical key from ignition key cylinder (Any door closed)		
				0 V		
				5 V		
20 (G/Y)	Ground	Remote keyless en- try receiver commu- nication	Input	Insert mechanical key into ignition key cylinder Waiting Signal receiving		
				 JPMIA0338JP		
				 PIIB7728J		
21 (P/L)	Ground	Immobilizer anten- na (Clock)	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
23 (R/Y)	Ground	Security indicator	Input	ON Blinking (Ignition switch OFF)	ON	0 V
					 JPMIA0014GB	11.3 V
					OFF	12 V
24 (GR/R)	Ground	Dongle link	Input/ Output	Ignition switch OFF		5 V
25 (LG)	Ground	Immobilizer anten- na (Rx, Tx)	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
26*1 (GR)	Ground	Thermo control amp.	Input	Ignition switch ON		0 V
				Evaporator is extremely low temperature		12 V





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

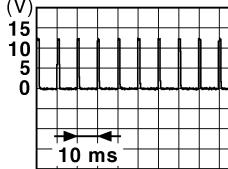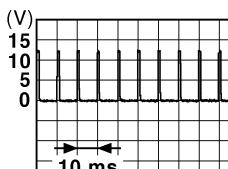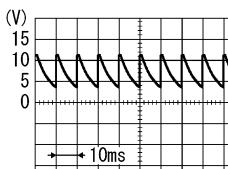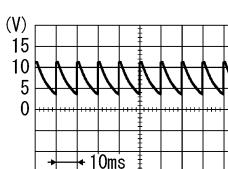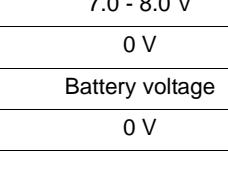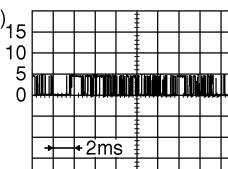Terminal No. (Wire color)	Description		Condition	Value (Approx.)	
	Signal name	Input/ Output			
+	-				
27 (Y/G)*2 (Y/R)*3	Ground	A/C switch (Automatic air conditioner)	A/C	OFF (A/C switch indicator: OFF)  JPMIA0012GB 1.0 - 1.5 V	
		A/C switch (Manual air conditioner)		ON (A/C switch indicator: ON) 0 V	
			A/C switch	OFF  JPMIA0012GB 1.0 - 1.5 V	
				ON 0 V	
28 (G/W)	Ground	Blower fan switch (Automatic air conditioner)	Fan switch	Blower fan switch OFF  PKIB4960J 7.0 - 8.0 V	
		Blower fan switch (Manual air conditioner)		Blower fan switch ON  PKIB4960J 7.0 - 8.0 V	
			Fan switch	Blower fan switch OFF  PKIB4960J 7.0 - 8.0 V	
				Blower fan switch ON 0 V	
29 (L/W)	Ground	Hazard switch	Input	Hazard switch	OFF Battery voltage
					ON 0 V
31 (G/Y)	Ground	Front defroster switch	Input	Ignition switch ON	A/C mode defroster ON position  JPMIA0589GB 8.0 - 9.0 V
					Other than A/C mode defroster ON position














BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

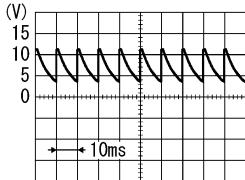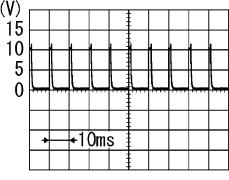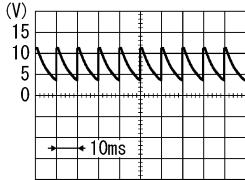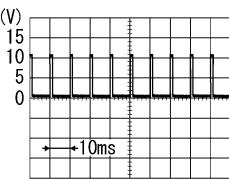Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
32 (LG)	Ground	Combination switch OUTPUT 5	Output	<p>All switch OFF (Wiper intermittent dial 4)</p> <p>Front fog lamp switch ON (Wiper intermittent dial 4)</p> <p>Rear wiper switch ON (Wiper intermittent dial 4)</p> <p>Any of the condition below with all switch OFF</p> <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7
				 PKIB4960J 7.0 - 8.0 V
				 PKIB4956J 1.0 V
33 (Y/L)	Ground	Combination switch OUTPUT 4	Output	<p>All switch OFF (Wiper intermittent dial 4)</p> <p>Lighting switch 1ST (Wiper intermittent dial 4)</p> <p>Lighting switch AUTO (Wiper intermittent dial 4)</p> <p>Rear wiper switch INT (Wiper intermittent dial 4)</p> <p>Any of the condition below with all switch OFF</p> <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6
				 PKIB4960J 7.0 - 8.0 V
				 PKIB4958J 1.2 V




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

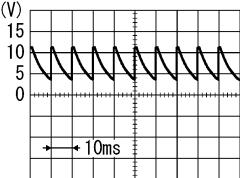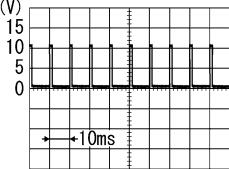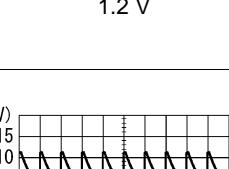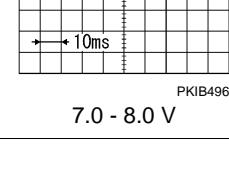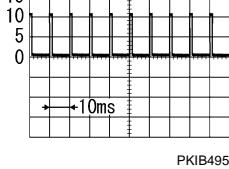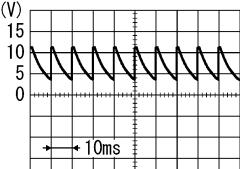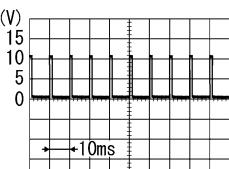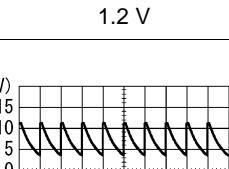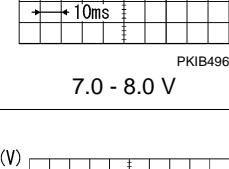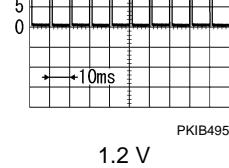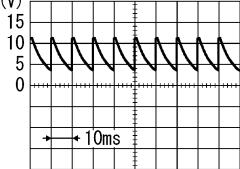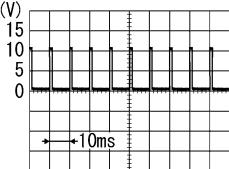Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
34 (W)	Ground	Combination switch OUTPUT 3	Output	 All switch OFF (Wiper intermittent dial 4)
				 Lighting switch 2ND (Wiper intermittent dial 4)
				 Lighting switch HI (Wiper intermittent dial 4)
				 Rear washer switch ON (Wiper intermittent dial 4)
				 Any of the condition below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3
35 (R/L)	Ground	Combination switch OUTPUT 2	Output	 All switch OFF
				 Lighting switch 2ND
				 Lighting switch PASS
				 Front wiper switch INT
				 Front wiper switch HI
36 (L/O)	Ground	Combination switch OUTPUT 1	Output	 All switch OFF
				 Turn signal switch RH
				 Turn signal switch LH
				 Front wiper switch LO (Front wiper switch MIST)
				 Front washer switch ON




BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

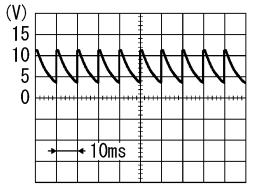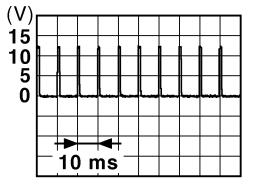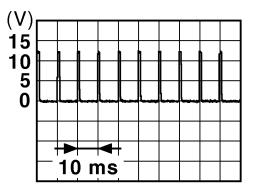Terminal No. (Wire color)	Description		Condition	Value (Approx.)	A B C D E F G H I J K EXL M N O P	
	Signal name	Input/ Output				
+	-					
37 (R/W)	Ground	Key switch	Input	Insert mechanical key into ignition key cylinder	Battery voltage	A B
				Remove mechanical key from ignition key cylinder	0 V	C
38 (O)	Ground	Ignition switch ON	Input	Ignition switch OFF or ACC	0 V	D
				Ignition switch ON	Battery voltage	E
39 (L)	Ground	CAN-H	Input/ Output	—	—	F
40 (P)	Ground	CAN-L	Input/ Output	—	—	G
43 (W)	Ground	Back door switch	Input	Back door switch	OFF (When back door closed)  PKIB4960J 7.0 - 8.0 V	H
					ON (When back door opened) 0 V	I
44 (LG)	Ground	Rear wiper stop position	Input	Ignition switch ON	Rear wiper stop position 12 V	J
					Any position other than rear wiper stop position 0 V	K
45 (GR)	Ground	Door lock and unlock switch LOCK	Input	Door lock and unlock switch	NEUTRAL position  JPMIA0012GB 1.0 - 1.5 V	EXL
					LOCK position 0 V	M
46 (BR)	Ground	Door lock and unlock switch UNLOCK	Input	Door lock and unlock switch	NEUTRAL position  JPMIA0012GB 1.0 - 1.5 V	N
					UNLOCK position 0 V	O

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

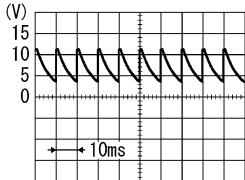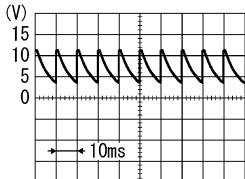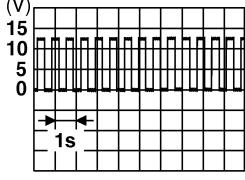
Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
47 (BR/Y)	Ground	Driver door switch	Input	<p>Driver door switch</p> <p>OFF (When driver door closed)</p>  <p>PKIB4960J</p> <p>7.0 - 8.0 V</p>
48 (W/G)	Ground	Rear LH door switch	Input	<p>Rear LH door switch</p> <p>OFF (When rear LH door closed)</p>  <p>PKIB4960J</p> <p>7.0 - 8.0 V</p>
50 ^{*1} (SB)	Ground	A/C indicator	Output	<p>A/C indicator</p> <p>OFF</p> <p>ON</p>
54 (L/W)	Ground	Rear wiper	Output	<p>Ignition switch</p> <p>ON</p> <p>Rear wiper switch OFF</p> <p>Rear wiper switch ON</p>
56 (L)	Ground	Interior room lamp power supply	Output	<p>Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)</p> <p>Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)</p>
57 (Y)	Ground	Battery power supply	Input	Ignition switch OFF
59 (L/B)	Ground	Driver door UN-LOCK	Output	<p>Driver door</p> <p>UNLOCK (Actuator is activated)</p> <p>Other then UNLOCK (Actuator is not activated)</p>
60 (W/B)	Ground	Turn signal LH	Output	<p>Ignition switch</p> <p>ON</p> <p>Turn signal switch OFF</p> <p>Turn signal switch LH</p>  <p>PKIC6370E</p> <p>6.0 V</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
61 (W/L)	Ground	Turn signal RH	Output	Turn signal switch OFF
				0 V
63 (BR)	Ground	Interior room lamp timer control	Output	Ignition switch ON
				Turn signal switch RH
65 (V)	Ground	All doors LOCK	Output	Interior room lamp
				OFF
				ON
66 (G)	Ground	Passenger door and rear door UNLOCK	Output	All doors
				LOCK (Actuator is activated)
				Other then LOCK (Actuator is not activated)
67 (B)	Ground	Ground	Output	Passenger door and rear door
				UNLOCK (Actuator is activated)
				Other then UNLOCK (Actuator is not activated)
68 (L)	Ground	P/W power supply (IGN)	Output	Ignition switch ON
69 (L/W)	Ground	P/W power supply (BAT)	Output	Ignition switch ON
70 (Y)	Ground	Battery power supply	Input	Ignition switch OFF
				Battery voltage

- *1: Only manual air conditioner
- *2: Automatic air conditioner
- *3: Manual air conditioner

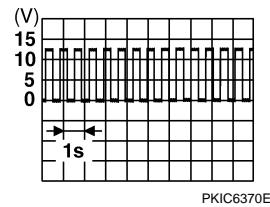


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
EXL
2011 CUBE

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

WITHOUT INTELLIGENT KEY : Wiring Diagram - BCM -

INFOID:0000000006952996

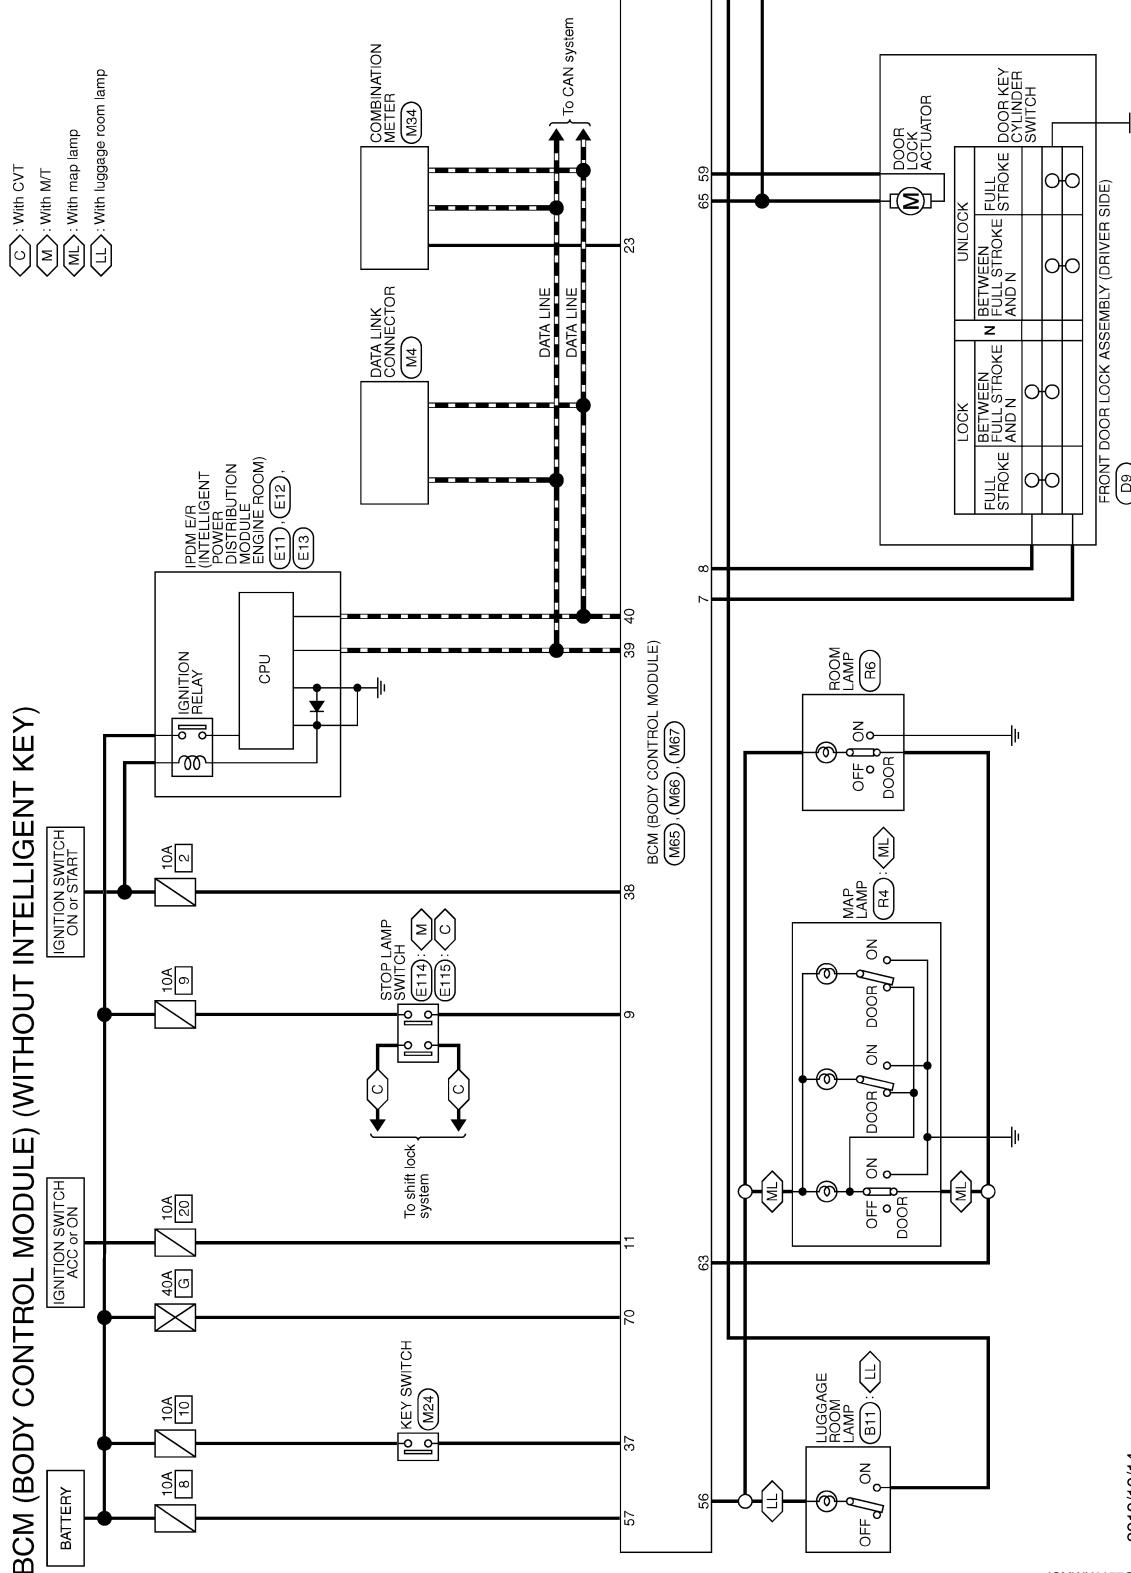


2010/10/14
JCMWN0377GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

- AA : With auto A/C
- MA : With manual A/C
- AL : With auto light system

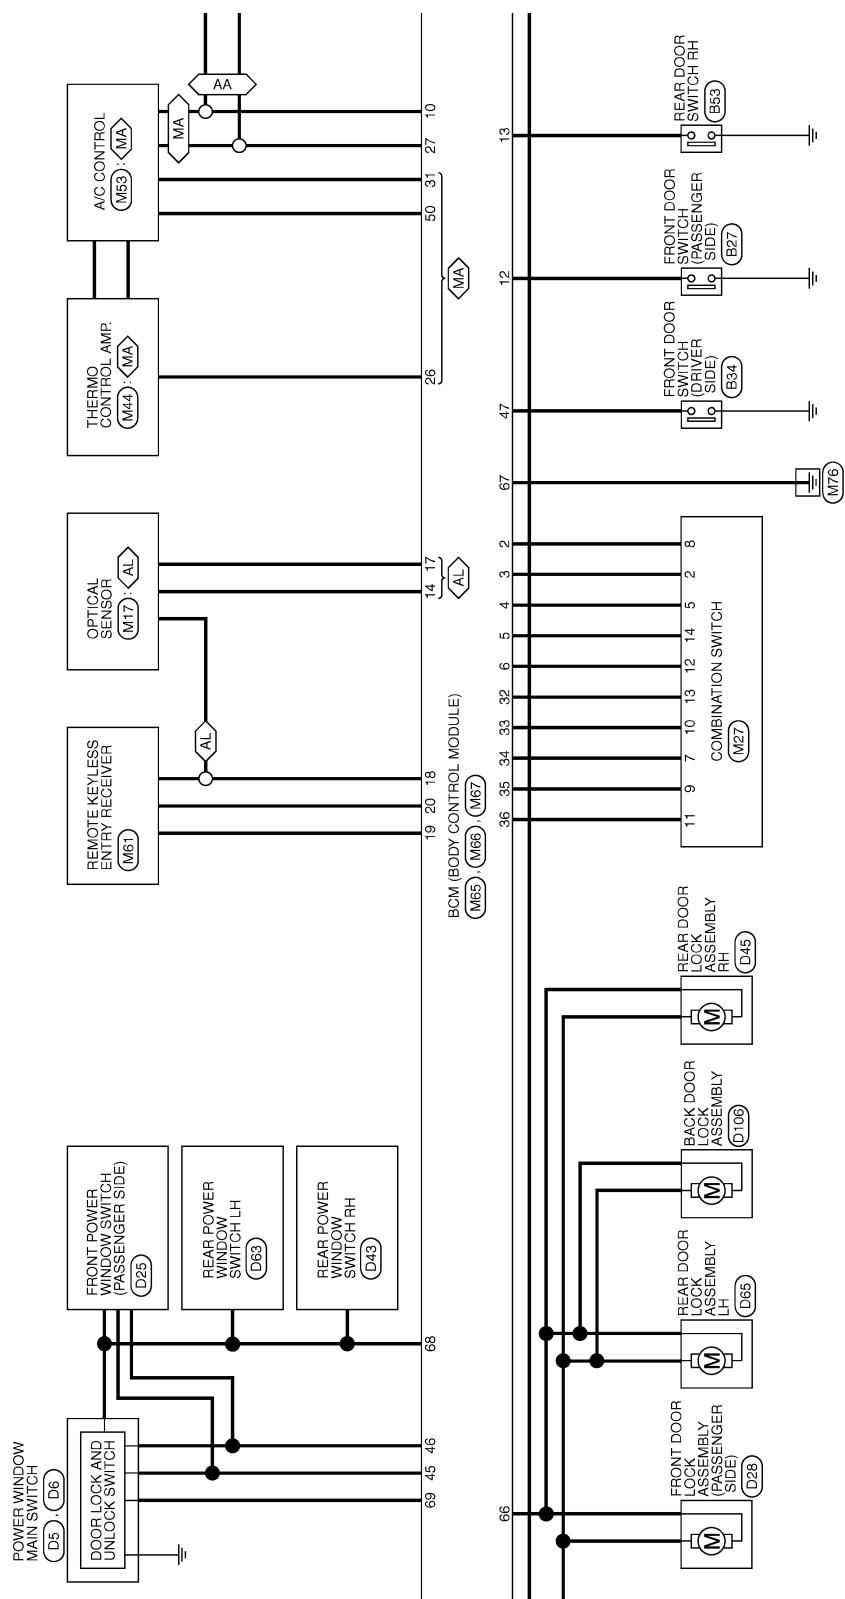


JCMWN0378GB

A
B
C
D
E
F
G
H
I
J
K
L
EXL
M
N
O
P
Z

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

- : For Canada
- With auto A/C
- With manual A/C
- With luggage room lamp

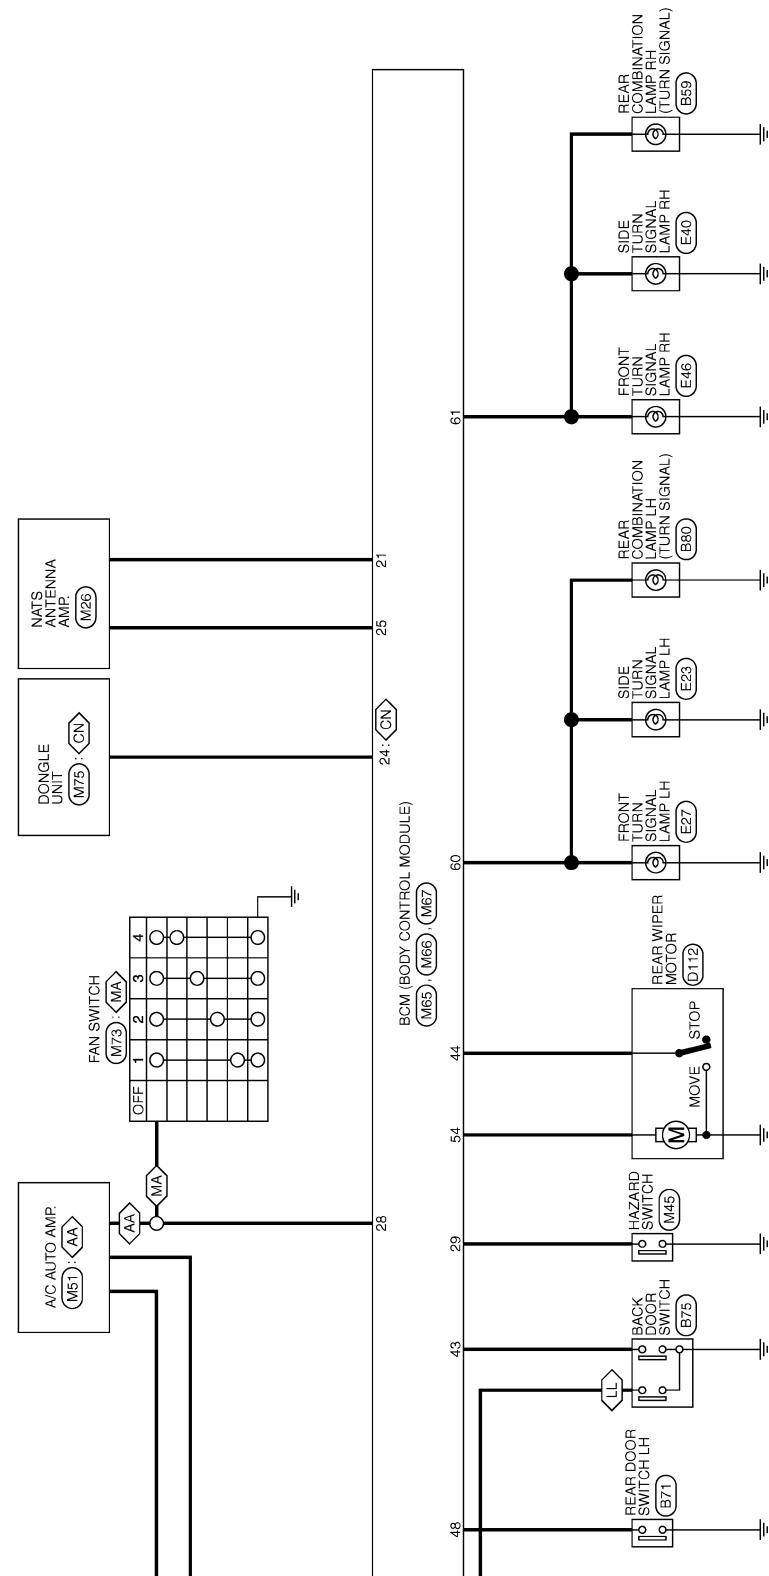

JCMWN0379GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

A

B

C

D

E

F

G

H

I

J

K

L

EXL

M

N

O

P

BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY)		
Connector No.	Color	Signal Name [Specification]
M27	W/L	REAR WINDOW DEFOGGER SW
	L/Y	
	GR/L	PASSENGER DOOR SW
12	GR/L	REAR RH DOOR SW
13	GR/L	OPTICAL SENSOR
14	LB	OPTICAL SENSOR POWER SUPPLY
17	R/G	RECEIVER - SENSOR GND
18	V	KEYLESS ENTRY RECEIVER POWER SUPPLY
19	BR	KEYLESS ENTRY RECEIVER COMM
20	G/Y	KEYLESS ENTRY RECEIVER COMM
21	P/L	NATS ANTENNA AMP
23	R/Y	SECURITY INDICATOR LAMP
24	G/R	DONGLE LINK
25	LG	NATS ANTENNA AMP
26	GR	AC/COOLING FAN
27	Y/G	A/C SW [With auto A/C]
27	Y/R	A/C SW [With manual A/C]
28	GW	BLOWER FAN SW
29	L/W	HAZARD SW
31	G/Y	FR DEFROSTER SW
32	LG	COMBI SW OUTPUT 5
33	YL	COMBI SW OUTPUT 4
34	W	COMBI SW OUTPUT 3
35	R/L	COMBI SW OUTPUT 2
36	LO	COMBI SW OUTPUT 1
37	R/W	KEY SWITCH
38	O	IGN
39	L	CAN-H
40	P	CAN-L

BCM (BODY CONTROL MODULE)		
Connector No.	Color	Signal Name [Specification]
M66	W	BACK DOOR SW
	LG	REAR WIPER STOP POSITION
43	W	CENTRAL DOOR LOCK SW
44	LG	CENTRAL DOOR UNLOCK SW
45	GR	DRIVER DOOR SW
46	BR	REAR LH DOOR SW
47	BR/Y	A/C INDICATOR OUTPUT
48	WG	REAR WIPER OUTPUT
49	SB	
50	LG	
51	LG	
52	LG	
53	LG	
54	LG	
55	LG	

BCM (BODY CONTROL MODULE)		
Connector No.	Color	Signal Name [Specification]
M65	BR/W	COMBI SW INPUT 5
3	GR	COMBI SW INPUT 4
4	L/Y	COMBI SW INPUT 3
5	G	COMBI SW INPUT 2
6	L/R	COMBI SW INPUT 1
7	WR	KEY CYL UNLOCK SW
8	WB	STOP LAMP SW
9	R	REAR WIPER OUTPUT

JCMWN0380GB

INFOID:0000000006952997

WITHOUT INTELLIGENT KEY : Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2196: DONGLE NG	Inhibit engine cranking	Erase DTC

REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper auto stop signal.

When the rear wiper auto stop signal does not change more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

Condition of cancellation

1. Pass more than 1 minute after the rear wiper stop.
2. Turn rear wiper switch OFF.
3. Operate the rear wiper switch or rear washer switch.

WITHOUT INTELLIGENT KEY : DTC Inspection Priority Chart

INFOID:0000000006952998

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"> • U1000: CAN COMM • U1010: CONTROL UNIT (CAN)
2	<ul style="list-style-type: none"> • B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM • B2195: ANTI SCANNING • B2196: DONGLE NG
3	C1735: IGN CIRCUIT OPEN
4	<ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1729: VHCL SPEED SIG ERR

WITHOUT INTELLIGENT KEY : DTC Index

INFOID:0000000006952999

NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
 - 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Tire pressure monitor warning lamp ON	Reference
U1000: CAN COMM	—	—	BCS-111
U1010: CONTROL UNIT (CAN)	—	—	BCS-112
B2190: NATS ANTENNA AMP	×	—	SEC-192
B2191: DIFFERENCE OF KEY	×	—	SEC-195
B2192: ID DISCORD BCM-ECM	×	—	SEC-196
B2193: CHAIN OF BCM-ECM	×	—	SEC-198
B2195: ANTI SCANNING	×	—	SEC-199
B2196: DONGLE NG	×	—	SEC-200
C1704: LOW PRESSURE FL	—	×	WT-25
C1705: LOW PRESSURE FR	—	×	
C1706: LOW PRESSURE RR	—	×	
C1707: LOW PRESSURE RL	—	×	
C1708: [NO DATA] FL	—	×	WT-27
C1709: [NO DATA] FR	—	×	
C1710: [NO DATA] RR	—	×	
C1711: [NO DATA] RL	—	×	
C1716: [PRESS DATA ERR] FL	—	×	WT-30
C1717: [PRESS DATA ERR] FR	—	×	
C1718: [PRESS DATA ERR] RR	—	×	
C1719: [PRESS DATA ERR] RL	—	×	
C1729: VHCL SPEED SIG ERR	—	×	WT-32
C1735: IGN CIRCUIT OPEN	—	—	BCS-113

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) WITH INTELLIGENT KEY

WITH INTELLIGENT KEY : Reference Value

INFOID:0000000006952982

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	1/2/3/4
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND, HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		Front fog lamp switch ON	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	<ul style="list-style-type: none"> • Selector lever in any position other than P or N (CVT models) • Release clutch pedal (M/T models) 	Off
		<ul style="list-style-type: none"> • Selector lever in P or N position (CVT models) • Depress clutch pedal (M/T models) 	On
ST RLY CONT	Ignition switch ON		Off
	At engine cranking		On

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
IHBT RLY -REQ	Ignition switch ON		Off
	At engine cranking		On
ST/INHI RLY	Ignition switch ON		Off
	At engine cranking		INHI ON → ST ON
DETENT SW	Ignition switch ON	<ul style="list-style-type: none"> • Pull the selector lever with selector lever in P position • Selector lever in any position other than P 	Off
	Release the selector lever with selector lever in P position NOTE: Fixed On for M/T models		On
S/L RLY -REQ	NOTE: The item is indicated, but not monitored.		Off
S/L STATE	NOTE: The item is indicated, but not monitored.		UNLOCK
DTRL REQ NOTE: This item is monitored only on the vehicle with the daytime running light system.	Not operation		Off
	Daytime running light system is operated.		On
OIL P SW	Ignition switch OFF, ACC or engine running		Open
	Ignition switch ON		Close
HOOD SW	NOTE: The item is indicated, but not monitored.		Off
THFT HRN REQ	Not operation		Off
	<ul style="list-style-type: none"> • Panic alarm is activated • Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 		On
HORN CHIRP	Not operating		Off
	Door locking with Intelligent Key (horn chirp mode)		On

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N


O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

TERMINAL LAYOUT

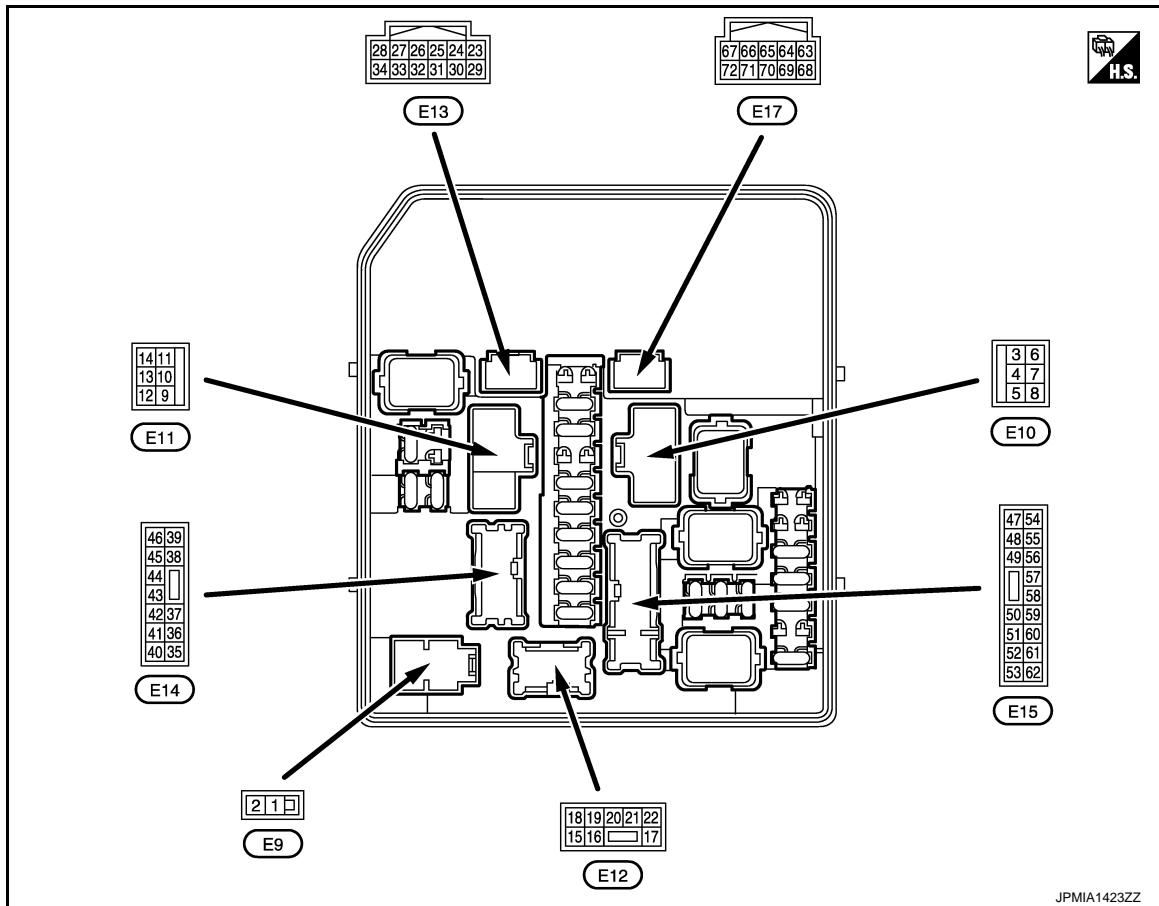



JPMIA1423ZZ

PHYSICAL VALUES

Terminal NO. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
1 (R)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
2 (G)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
3 (BR)	Ground	Starter motor	Output	Ignition switch ON	0 V
				At engine cranking	Battery voltage
4 (P)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
5 (LG)	Ground	Cooling fan relay-1 power supply	Output	Cooling fan OFF	0 V
				Cooling fan operated	Battery voltage
7 (Y)	Ground	Cooling fan relay-2 power supply	Output	Cooling fan OFF	0 V
				Cooling fan LO operated	9.0 V
				Cooling fan HI operated	Battery voltage
8 (V)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
9 (B/W)	Ground	Ground	—	Ignition switch ON	0 V
10 (L)	Ground	Cooling fan motor ground	Output	Cooling fan OFF	0 V
				Cooling fan LO operated	5.0 V
				Cooling fan HI operated	0 V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

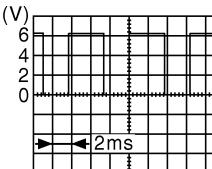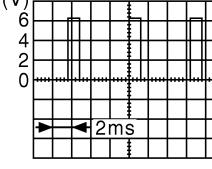Terminal NO. (Wire color)	Description		Condition	Value (Approx.)	A B C D E F G H I J K EXL M N O P
	Signal name	Input/ Output			
13 (W)	Ground	Rear window defogger	Output Ignition switch ON	Rear window defogger switch OFF	0 V
				Rear window defogger switch ON	Battery voltage
19 (B/W)	Ground	Ground	—	Ignition switch ON	
21 (W)	Ground	Front fog lamp (RH)	Output Lighting switch 2ND	Front fog lamp switch OFF	0 V
				Front fog lamp switch ON	Battery voltage
22 (V)	Ground	Front fog lamp (LH)	Output Lighting switch 2ND	Front fog lamp switch OFF	0 V
				Front fog lamp switch ON	Battery voltage
24 (LG)	Ground	Oil pressure switch	Input Ignition switch ON	Engine stopped	0 V
				Engine running	Battery voltage
25 (Y)	Ground	Front wiper auto stop	Input Ignition switch ON	Front wiper stop position	0 V
				Any position other than front wiper stop position	Battery voltage
26 (P)	Ground	CAN-L	Input/ Output	—	—
27 (L)	Ground	CAN-H	Input/ Output	—	—
28 ^{*1} (P)	Ground	Daytime running light relay-1 control	Output	Daytime running light deactivated	0 V
				Daytime running light activated	Battery voltage
30 (SB)	Ground	Starter relay control	Output	At engine cranking	0 V
				Ignition switch ON	Battery voltage
31 (W)	Ground	Fuel pump relay control	Output	• Approximately 1 second after turning the ignition switch ON • Engine running	0 - 1.5 V
				Approximately 1 second or more after turning the ignition switch ON	Battery voltage
33 (O)	Ground	Power generation command signal	Output	Ignition switch ON	Battery voltage
				40 % is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"	 JPMIA0002GB 3.8 V
				80 % is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"	 JPMIA0003GB 1.4 V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

<ECU DIAGNOSIS INFORMATION>

Terminal NO. (Wire color)	Description		Condition	Value (Approx.)	
	+	-			
34 (R)	Ground	Horn relay control	Output	The horn is deactivated	
				0 V	
36 (Y)	Ground	Parking lamp (LH)	Output	Ignition switch ON Lighting switch OFF	
				Lighting switch 1ST	
37 (V)	Ground	Parking lamp (RH)	Output	Ignition switch ON Lighting switch OFF	
				Battery voltage	
38 (G)	Ground	Tail lamp (RH) & illuminations	Output	Ignition switch ON Lighting switch OFF	
				Battery voltage	
39 (V)	Ground	Front wiper HI	Output	Ignition switch ON Front wiper switch OFF	
				0 V	
40 (R)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	
				0 - 1.5 V	
41 (SB)	Ground	Tail lamp (LH) & license plate lamps	Output	Ignition switch ON Lighting switch OFF	
				Battery voltage	
43 (G)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	
				0 V	
44 (P)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	
				0 V	
45 (Y)	Ground	TCM power supply	Output	Ignition switch OFF	
				Battery voltage	
46 (O)	Ground	Front wiper LO	Output	Ignition switch ON Front wiper switch OFF	
				0 V	
47 (BR)	Ground	Transmission range switch ^{*2}	Input	Select lever in any position other than P or N (Ignition switch ON)	
				0 V	
		Clutch interlock switch ^{*3}		Select lever P or N (Ignition switch ON)	
				Battery voltage	
				Release the clutch pedal	
				0 V	
				Depress the clutch pedal	
				Battery voltage	

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal NO. (Wire color)	Description		Condition	Value (Approx.)
	Signal name	Input/ Output		
+	-			
49 (W)	Ground	Headlamp HI (RH)	Output	Ignition switch OFF
				• Ignition switch ON • Lighting switch HI • Lighting switch PASS
				Daytime running light activated*1
50 (GR)	Ground	Headlamp HI (LH)	Output	Ignition switch OFF
				• Ignition switch ON • Lighting switch HI • Lighting switch PASS
				Daytime running light activated*1
51 (R)	Ground	Headlamp LO (LH)	Output	Ignition switch OFF
				Lighting switch 2ND
52 (P)	Ground	Headlamp LO (RH) Daytime running light relay-2*1	Output	Lighting switch OFF
				Lighting switch 2ND
54 (GR)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)
55 (P)	Ground	Fuel pump power supply	Output	Approximately 1 second or more than after turning the ignition switch ON
				• Approximately 1 second after turning the ignition switch ON • Engine running
56 (SB)	Ground	A/C relay power supply	Output	A/C switch OFF
				Engine running A/C switch ON (A/C compressor is operating)
57 (G)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF
				Ignition switch ON
58 (R)*2 (Y)*3	Ground	Ignition relay power supply	Output	0 - 1.0 V ↓ Battery voltage ↓ 0 V
				Ignition switch ON
59 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF
				Ignition switch ON
60 (V)	Ground	Ignition relay power supply	Output	Ignition switch OFF
				Ignition switch ON
61 (W)	Ground	Ignition relay power supply	Output	Ignition switch OFF
				Ignition switch ON
62 (L)	Ground	Ignition relay power supply	Output	Ignition switch OFF
				Ignition switch ON

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal NO. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
64* ² (R)	Ground	CVT shift selector (Detention switch)	Input	Ignition switch ON	Select lever P	0 V
					Select lever in any position other than P	Battery voltage
66 (L)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch		0 V
				Release the push-button ignition switch		Battery voltage
69 (Y)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC		Battery voltage
				Ignition switch ON		0 V

*1: With daytime running light system

*2: CVT models

*3: M/T models


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

WITH INTELLIGENT KEY : Wiring Diagram — IPDM E/R —

INFOID:000000006952983

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) (WITH INTELLIGENT KEY)

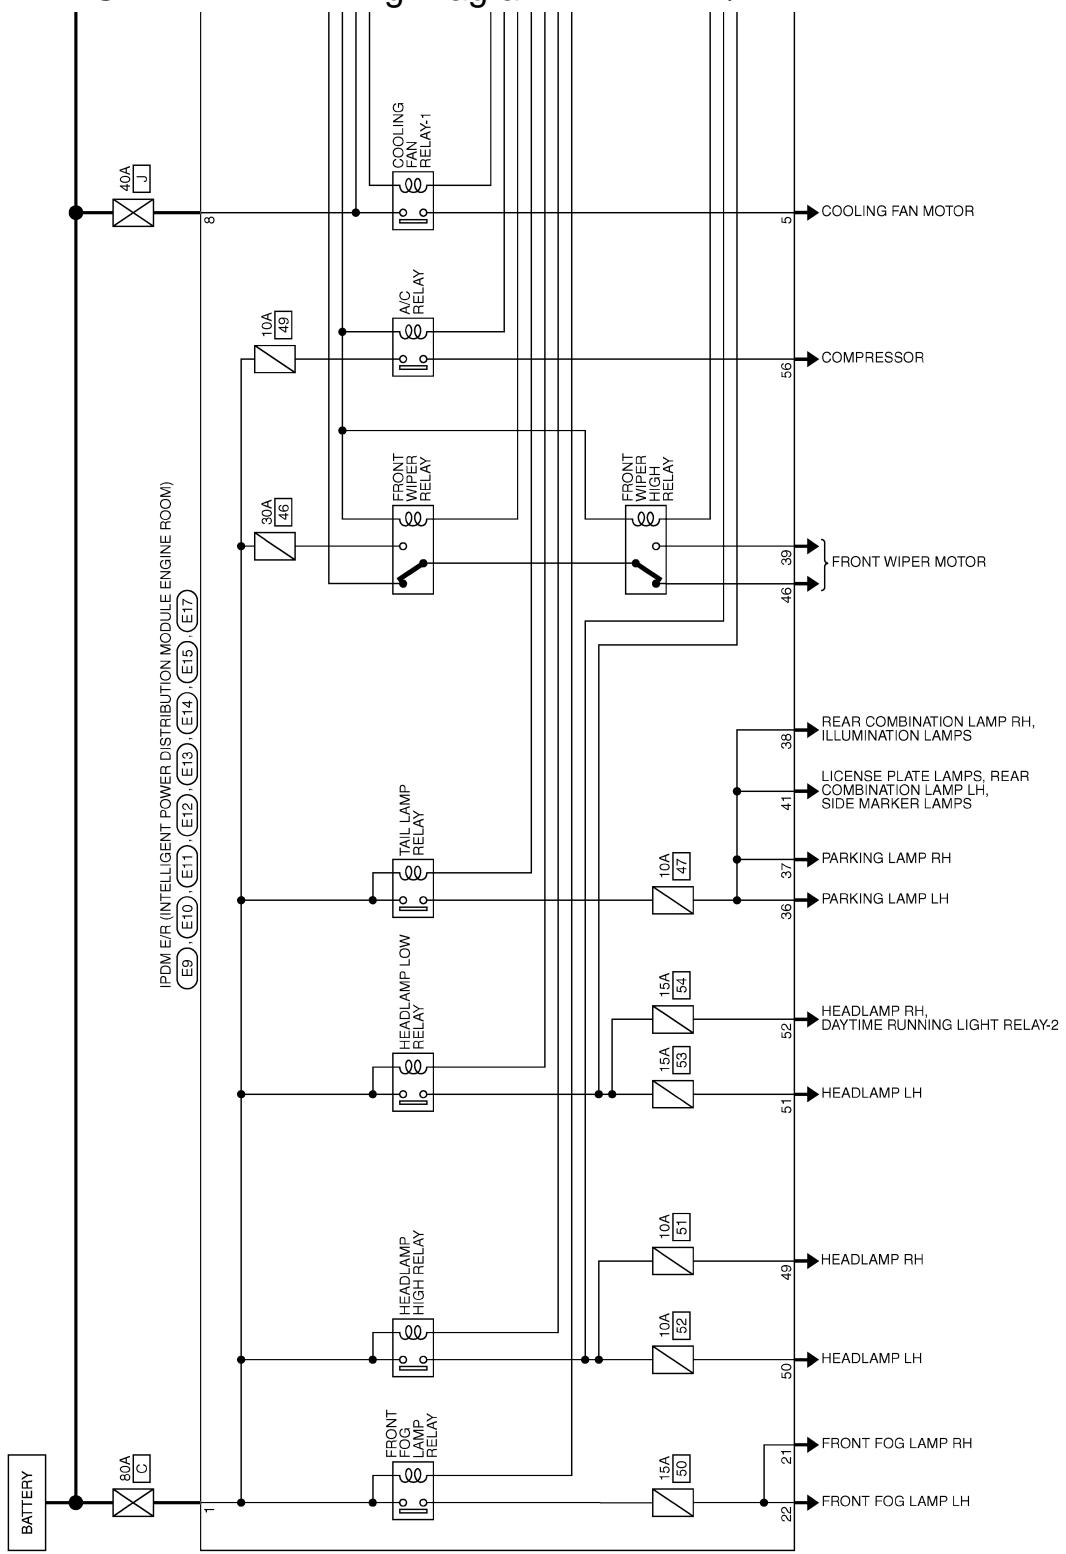


2010/10/14

JCMWN0385GB

A
B
C
D
E
F
G
H
I
J
K
L
EXL
M
N
O
P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS INFORMATION >

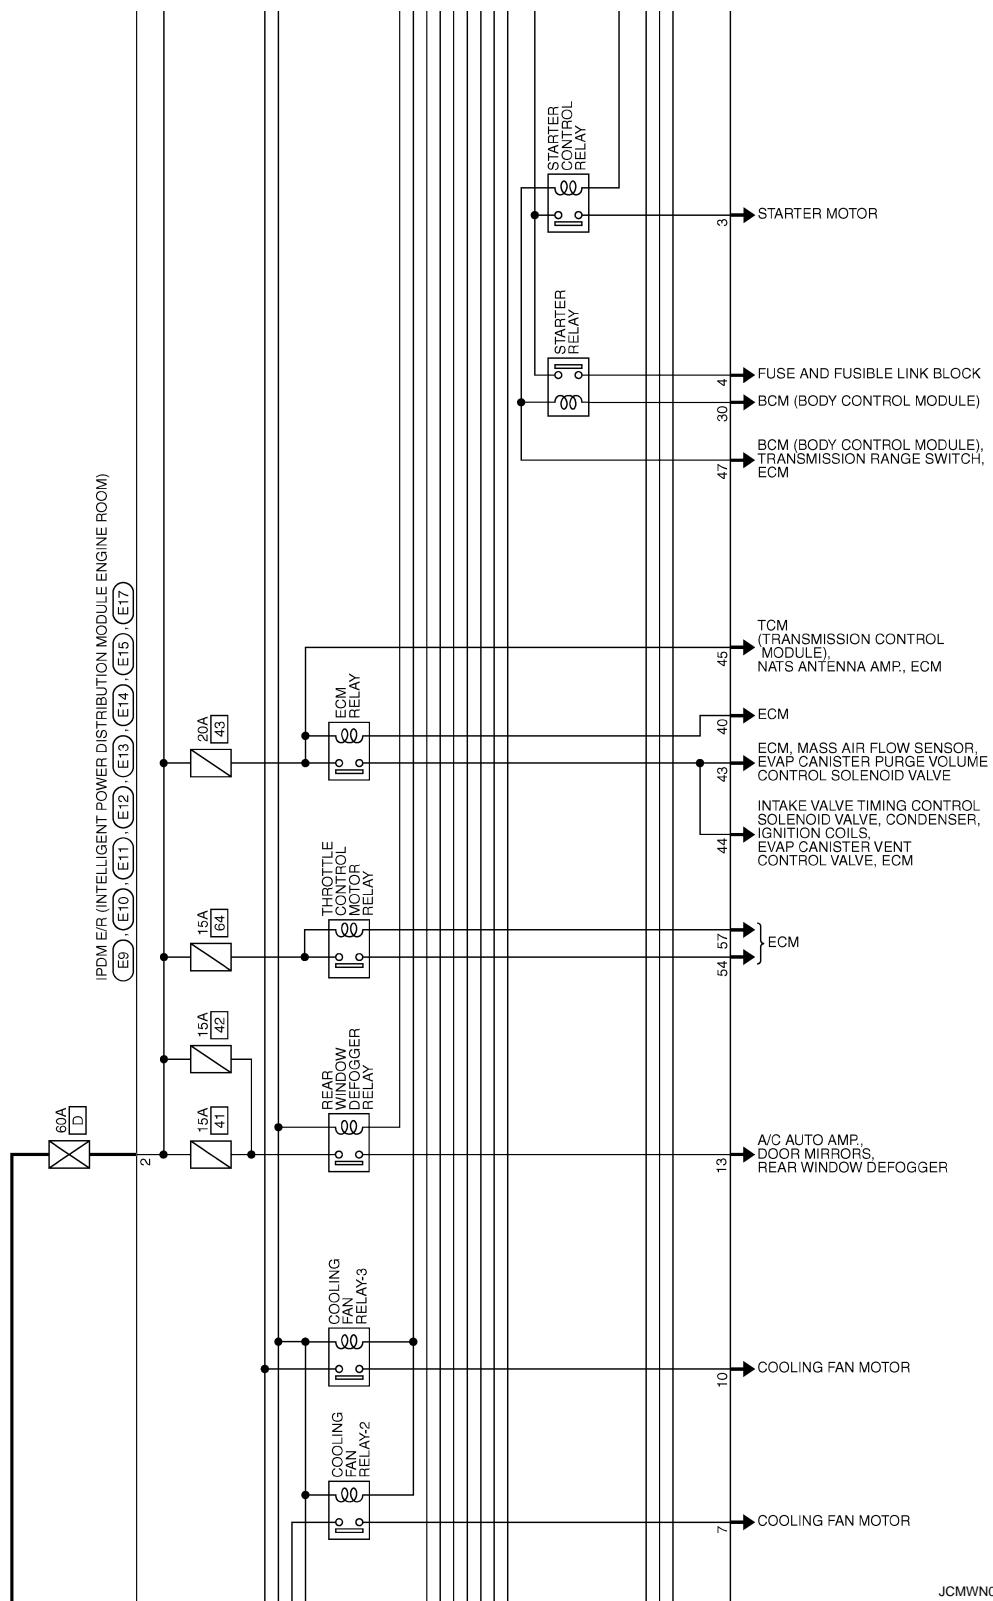

JCMWN0386GB


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

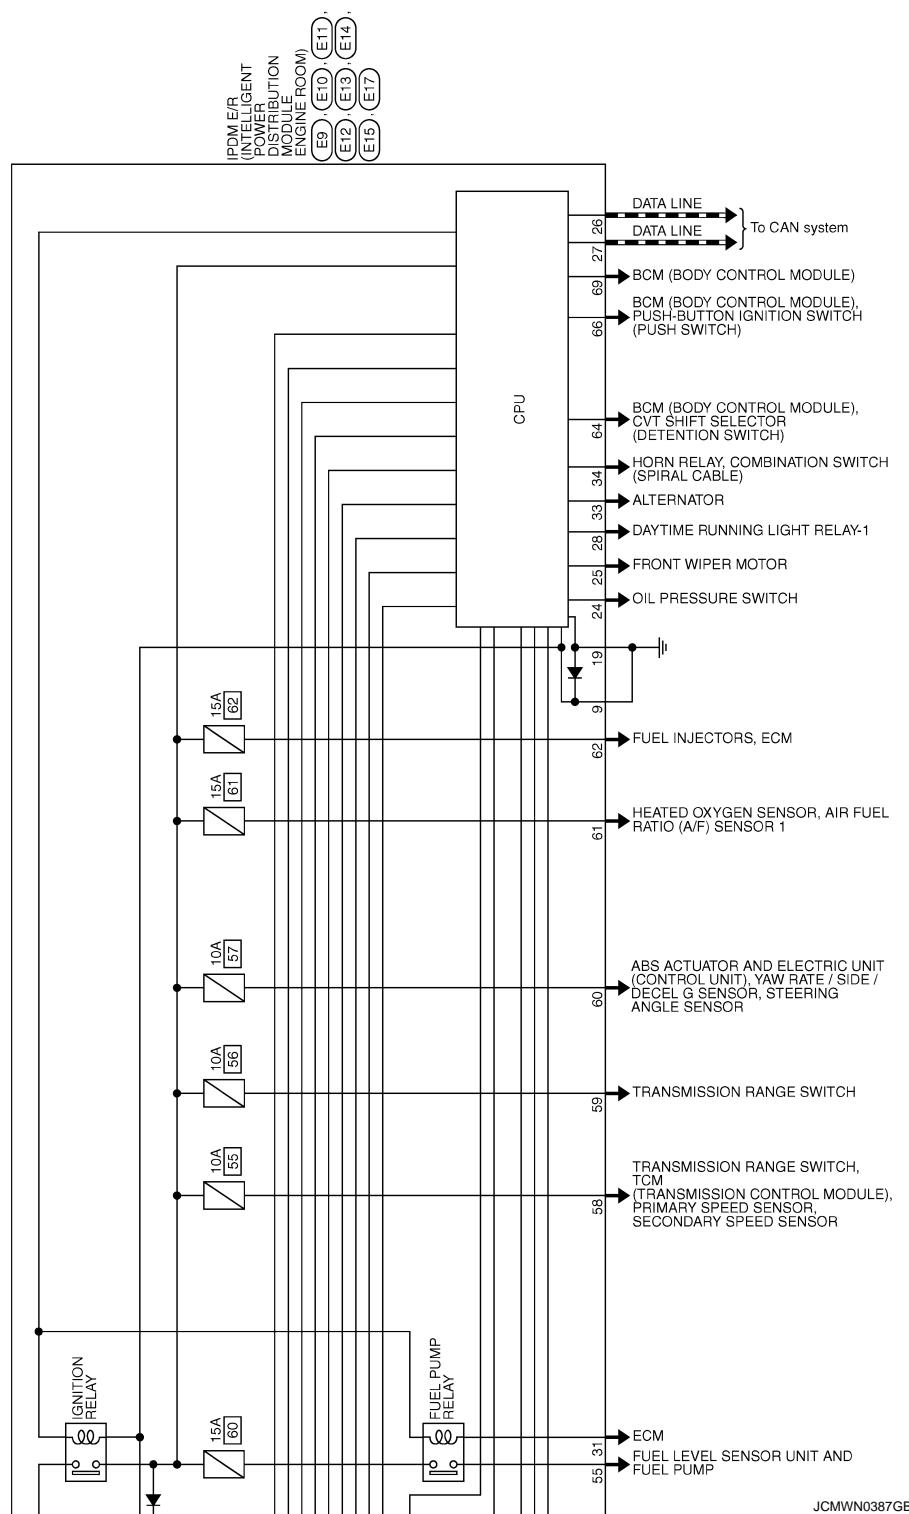

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

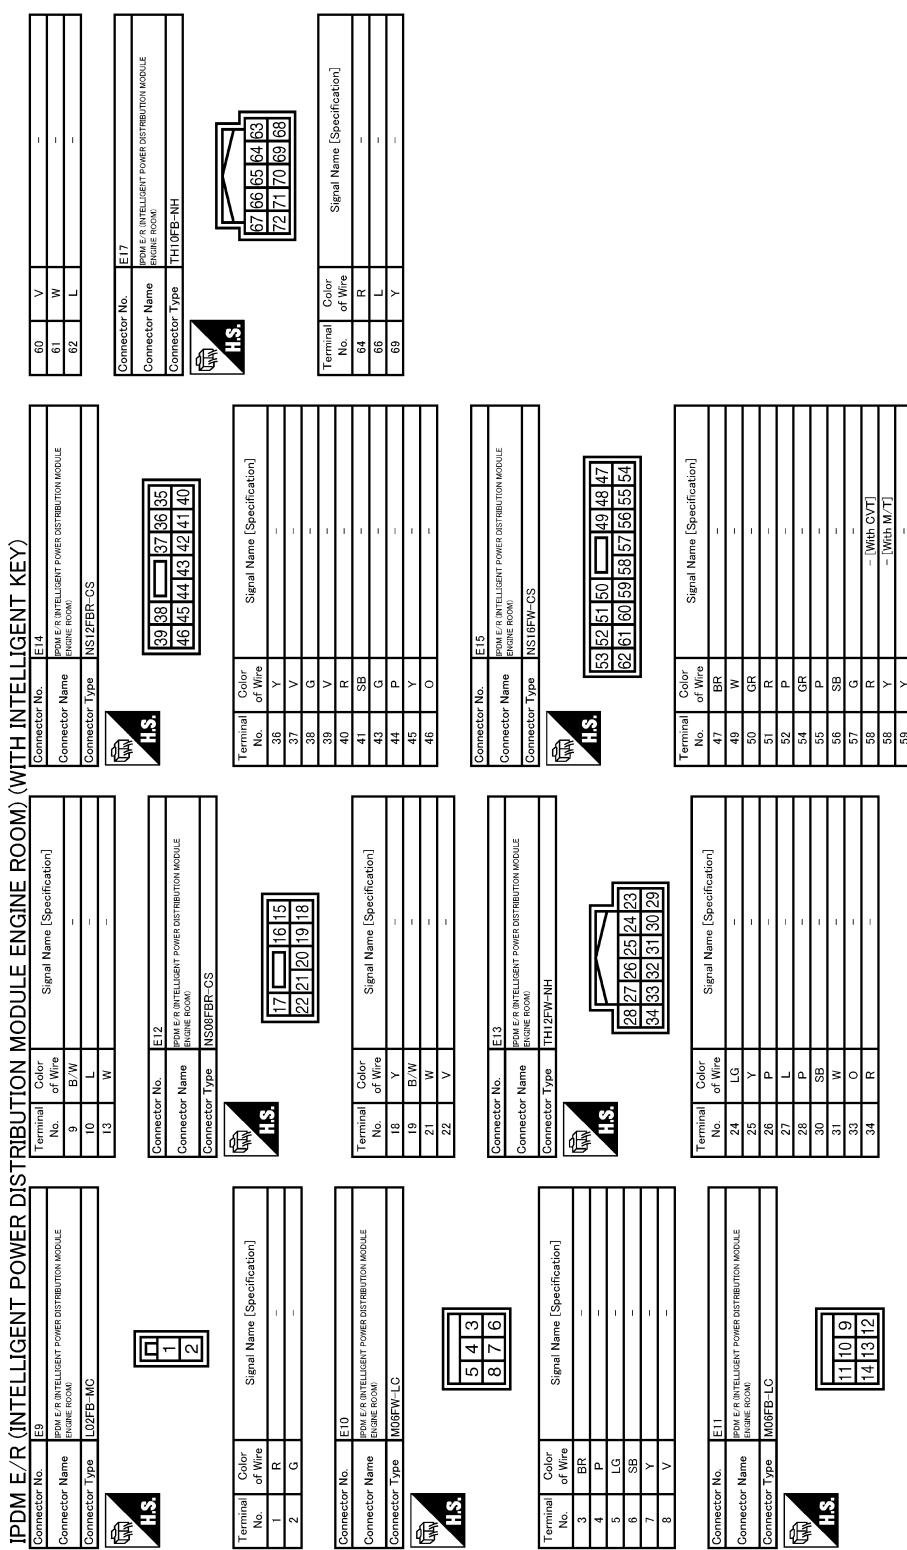

JCMWN0388GB

INFOID:0000000006952984

WITH INTELLIGENT KEY : Fail-Safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

<ECU DIAGNOSIS INFORMATION >

Control part	Fail-safe operation
Cooling fan	<ul style="list-style-type: none"> The cooling fan relay-1, the cooling fan relay-2 and the cooling fan relay-3 turn ON when the ignition switch is turned ON (Cooling fan HI operation) The cooling fan relay-1, the cooling fan relay-2 and the cooling fan relay-3 turn OFF when the ignition switch is turned OFF
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamps	<ul style="list-style-type: none"> Turns ON the headlamp low relay when the ignition switch is turned ON Turns OFF the headlamp low relay when the ignition switch is turned OFF Headlamp high relay OFF Daytime running light relay OFF*
Parking lamps Side marker lamps License plate lamps Illuminations Tail lamps	<ul style="list-style-type: none"> Turns ON the tail lamp relay when the ignition switch is turned ON Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Front fog lamps	Front fog lamp relay OFF
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF

*: With daytime running light system

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition relay excitation coil side		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	<ul style="list-style-type: none"> Detects DTC "B2098: IGN RELAY ON" Turns ON the tail lamp relay for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF"

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

WITH INTELLIGENT KEY : DTC Index

INFOID:000000006952985

NOTE:

- The details of time display are as follows.
- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
- The number is 0 when is detected now.
- The number increases like 1 → 2 … 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

x: Applicable

CONSULT display	Fail-safe	Refer to
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	PCS-16
B2098: IGN RELAY ON	×	PCS-17
B2099: IGN RELAY OFF	—	PCS-18
B210B: START CONT RLY ON	—	SEC-77
B210C: START CONT RLY OFF	—	SEC-78
B210D: STARTER RELAY ON	—	SEC-79
B210E: STARTER RELAY OFF	—	SEC-80
B210F: INTRLCK/PNP SW ON	—	SEC-82
B2110: INTRLCK/PNP SW OFF	—	SEC-84

WITHOUT INTELLIGENT KEY

WITHOUT INTELLIGENT KEY : Reference Value

INFOID:000000006952986

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	1/2/3/4
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition		Value/Status
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND, HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		Front fog lamp switch ON	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
INTER/NP SW	Ignition switch ON	Selector lever in any position other than P or N (CVT models)	Off
		Selector lever in P or N position (CVT models)	On
ST RLY -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
DTRL REQ NOTE: This item is monitored only on the vehicle with the daytime running light system.	Not operation		Off
	Daytime running light system is operated.		On
OIL P SW	Ignition switch OFF, ACC or engine running		Open
	Ignition switch ON		Close
HOOD SW	NOTE: The item is indicated, but not monitored.		Off
THFT HRN REQ	Not operation		Off
	<ul style="list-style-type: none"> • Panic alarm is activated • Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM 		On
HORN CHIRP	Not operating		Off
	Door locking with key fob (horn chirp mode)		On

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N


O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

TERMINAL LAYOUT

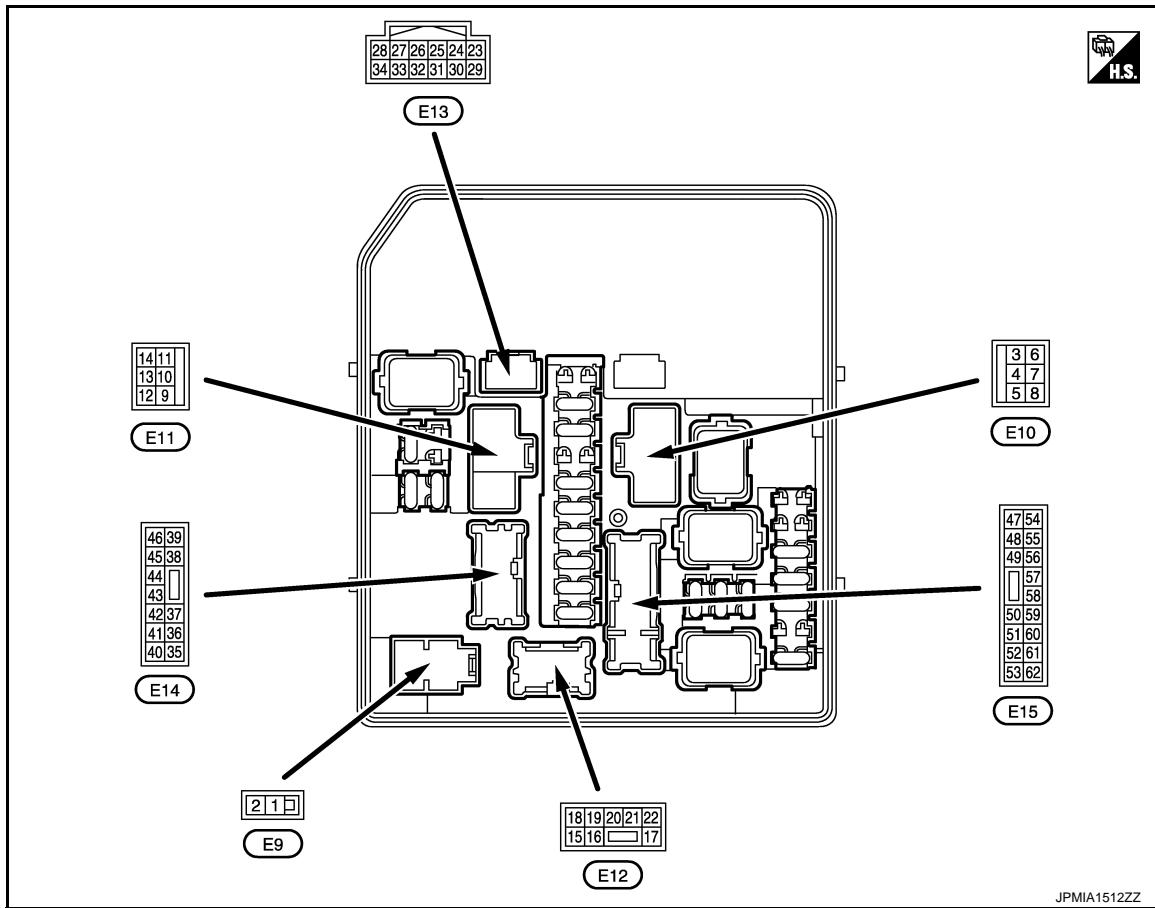

JPMIA1512ZZ

PHYSICAL VALUES

Terminal NO. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
1 (R)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
2 (G)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
3 (BR)	Ground	Starter motor	Output	Ignition switch ON	0 V
				At engine cranking	Battery voltage
5 (LG)	Ground	Cooling fan relay-1 power supply	Output	Cooling fan OFF	0 V
				Cooling fan operated	Battery voltage
6 (SB)	Ground	Ignition switch START	Output	Any position other ignition switch START	0 V
				Ignition switch START	Battery voltage
7 (Y)	Ground	Cooling fan relay-2 power supply	Output	Cooling fan OFF	0 V
				Cooling fan LO operated	9.0 V
				Cooling fan HI operated	Battery voltage
8 (V)	Ground	Battery power supply	Input	Ignition switch OFF	Battery voltage
9 (B/W)	Ground	Ground	—	Ignition switch ON	0 V


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal NO. (Wire color)	Description		Condition	Value (Approx.)
	+	-		
10 (L)	Ground	Cooling fan motor ground	Output	Cooling fan OFF
				Cooling fan LO operated
				Cooling fan HI operated
13 (W)	Ground	Rear window defogger	Output	Ignition switch ON
				Rear window defogger switch OFF
				Rear window defogger switch ON
18 (Y)	Ground	Ignition switch	Output	Ignition switch OFF
				Ignition switch ON
19 (B/W)	Ground	Ground	—	Ignition switch ON
21 (W)	Ground	Front fog lamp (RH)	Output	Lighting switch 2ND
				Front fog lamp switch OFF
				Front fog lamp switch ON
22 (V)	Ground	Front fog lamp (LH)	Output	Lighting switch 2ND
				Front fog lamp switch OFF
				Front fog lamp switch ON
24 (LG)	Ground	Oil pressure switch	Input	Ignition switch ON
				Engine stopped
				Engine running
25 (Y)	Ground	Front wiper auto stop	Input	Ignition switch ON
				Front wiper stop position
				Any position other than front wiper stop position
26 (P)	Ground	CAN-L	Input/ Output	—
27 (L)	Ground	CAN-H	Input/ Output	—
28 ^{*1} (P)	Ground	Daytime running light relay-1 control	Output	Daytime running light deactivated
				Daytime running light activated
31 (W)	Ground	Fuel pump relay control	Output	• Approximately 1 second after turning the ignition switch ON • Engine running
				Approximately 1 second or more after turning the ignition switch ON

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

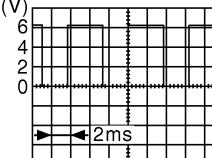Terminal NO. (Wire color)	Description		Condition	Value (Approx.)			
	+	-					
33 (O)	Ground	Power generation com- mand signal	Output	Ignition switch ON			
				40 % is set on "ACTIVE TEST", "AL- TERNATOR DUTY" of "ENGINE"			
				(V)  JPMIA0002GB 3.8 V			
34 (R)	Ground	Horn relay control	Output	The horn is deactivated			
				The horn is activated			
36 (Y)	Ground	Parking lamp (LH)	Output	Ignition switch ON			
				Lighting switch OFF			
37 (V)	Ground	Parking lamp (RH)	Output	Lighting switch 1ST			
				Battery voltage			
38 (G)	Ground	Tail lamp (RH) & illum- inations	Output	Ignition switch ON			
				Lighting switch OFF			
39 (V)	Ground	Front wiper HI	Output	Lighting switch 1ST			
				Battery voltage			
40 (R)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)			
				Battery voltage			
41 (SB)	Ground	Tail lamp (LH) & license plate lamps	Output	• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)			
				0 - 1.5 V			
43 (G)	Ground	ECM relay power sup- ply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)			
				0 V			
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)			
				Battery voltage			

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal NO. (Wire color)	Description		Condition	Value (Approx.)	
	+	-	Signal name	Input/ Output	
44 (P)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)	Battery voltage
45 (Y)	Ground	TCM power supply	Output	Ignition switch OFF	Battery voltage
46 (O)	Ground	Front wiper LO	Output	Ignition switch ON	Front wiper switch OFF
				Front wiper switch LO	Battery voltage
47 (BR)	Ground	Transmission range switch ^{*2}	Input	Select lever in any position other than P or N (Ignition switch ON)	0 V
				Select lever P or N (Ignition switch ON)	Battery voltage
		Clutch interlock switch ^{*3}	Input	Release the clutch pedal	0 V
				Depress the clutch pedal	Battery voltage
49 (W)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	Lighting switch OFF
				• Lighting switch HI • Lighting switch PASS	Battery voltage
				Daytime running light activated ^{*1}	7.0 V
50 (GR)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	Lighting switch OFF
				• Lighting switch HI • Lighting switch PASS	Battery voltage
				Daytime running light activated ^{*1}	7.0 V
51 (R)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF
					Battery voltage
52 (P)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF
		Daytime running light relay-2 ^{*1}		Ignition switch ON	Lighting switch 2ND
54 (GR)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				• Ignition switch ON • Ignition switch OFF (For a few seconds after turning ignition switch OFF)	Battery voltage
				Approximately 1 second or more than after turning the ignition switch ON	0 V
55 (P)	Ground	Fuel pump power supply	Output	• Approximately 1 second after turning the ignition switch ON • Engine running	Battery voltage
				A/C switch OFF	0 V
56 (SB)	Ground	A/C relay power supply	Output	Engine running	A/C switch ON (A/C compressor is operating)
					Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Terminal NO. (Wire color)	Description		Condition	Value (Approx.)
	+	-		
57 (G)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF Battery voltage ↓ 0 V
				Ignition switch ON 0 - 1.0 V
58 (R) ^{*2} (Y) ^{*3}	Ground	Ignition relay power supply	Output	Ignition switch OFF 0 V
				Ignition switch ON Battery voltage
59 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF 0 V
				Ignition switch ON Battery voltage
60 (V)	Ground	Ignition relay power supply	Output	Ignition switch OFF 0 V
				Ignition switch ON Battery voltage
61 (W)	Ground	Ignition relay power supply	Output	Ignition switch OFF 0 V
				Ignition switch ON Battery voltage
62 (L)	Ground	Ignition relay power supply	Output	Ignition switch OFF 0 V
				Ignition switch ON Battery voltage

*1: With daytime running light system

*2: CVT models


*3: M/T models

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

WITHOUT INTELLIGENT KEY : Wiring Diagram — IPDM E/R —

INFOID:0000000006952987

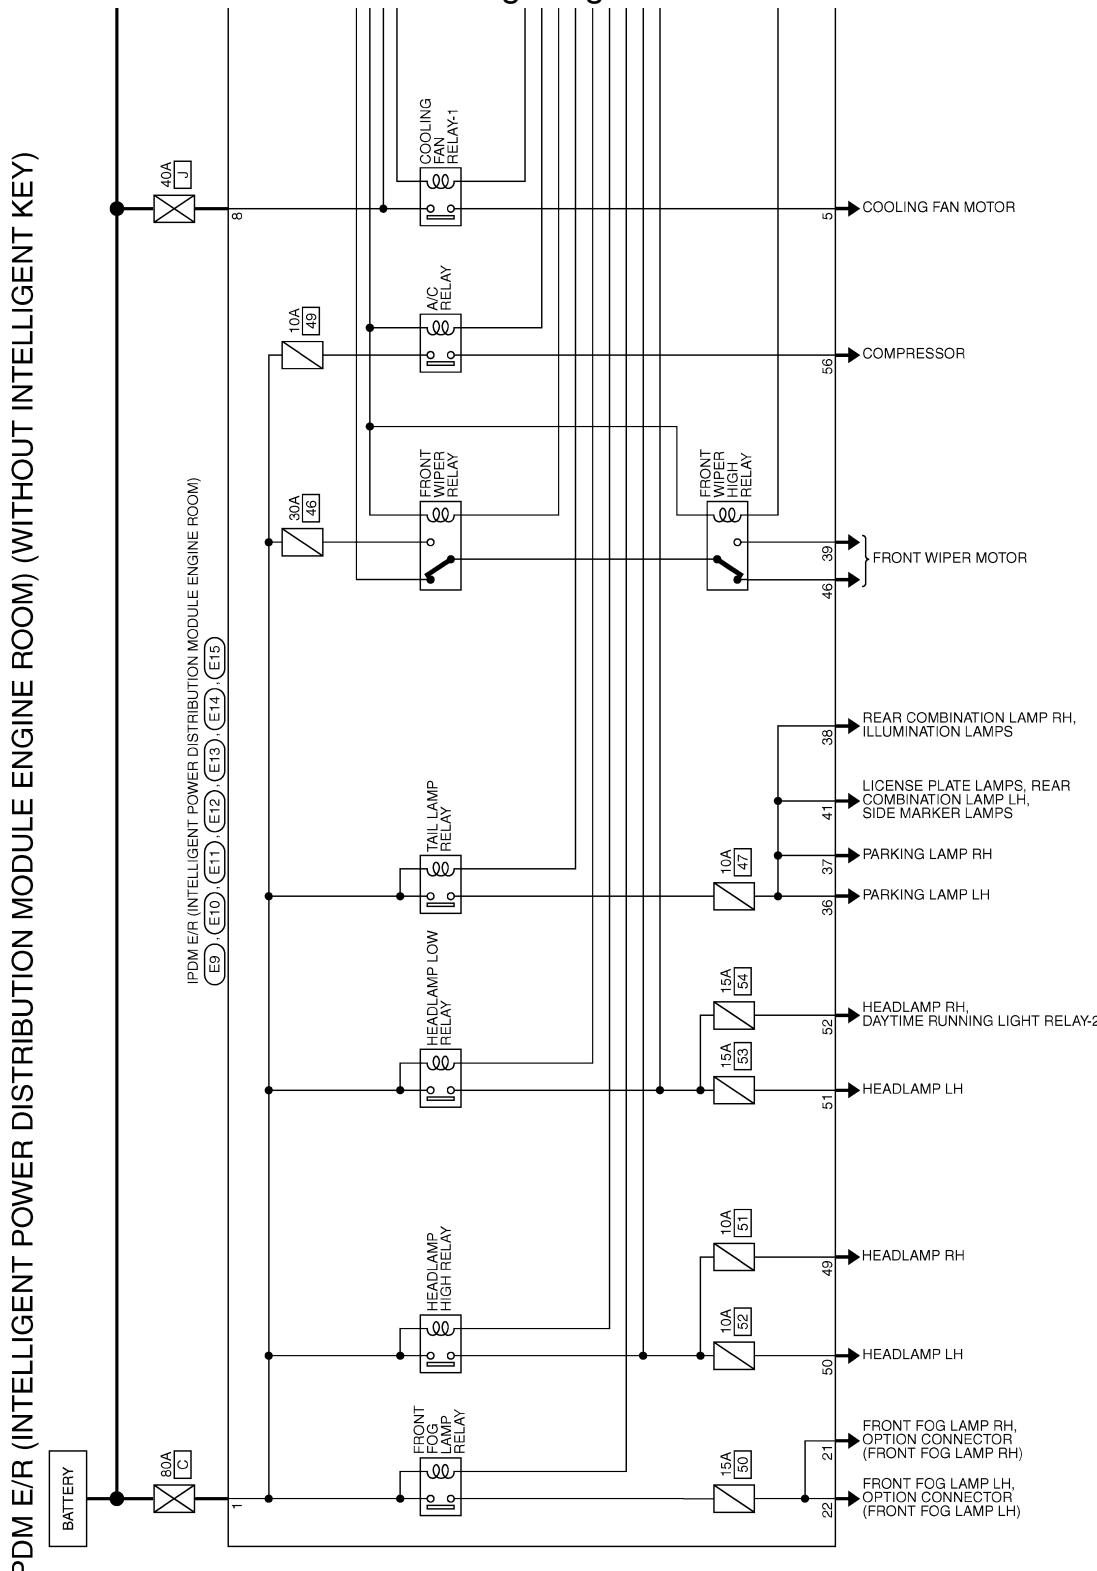


2010/10/14

JCMWN0389GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS INFORMATION >

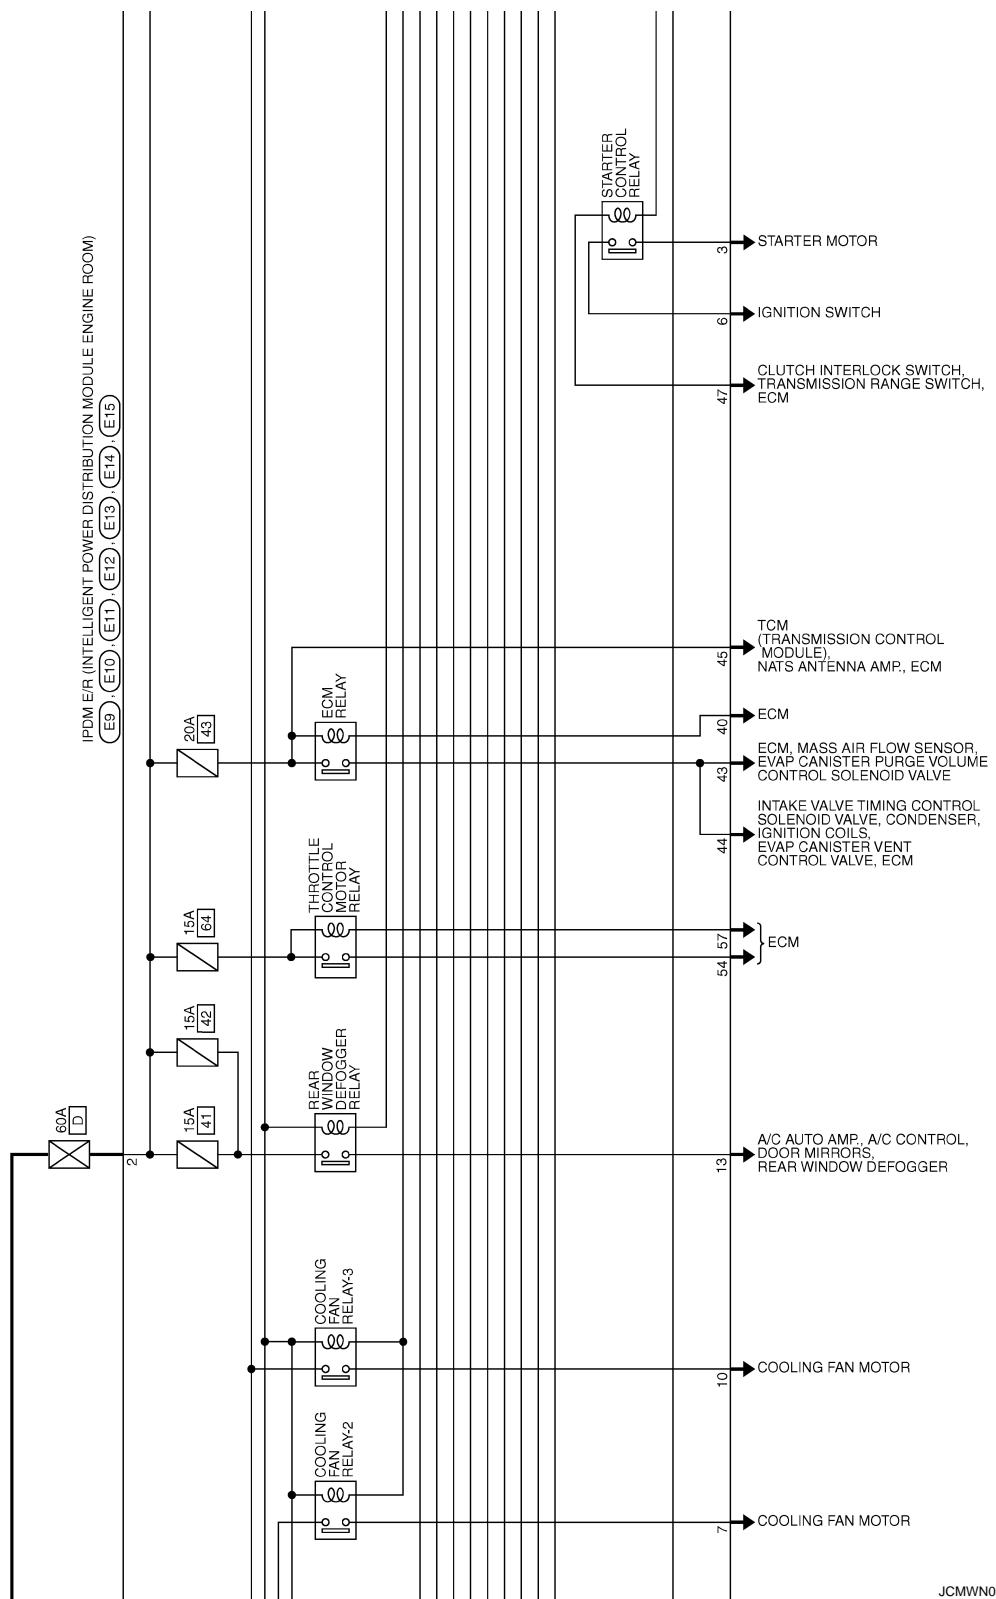

JCMWN0390GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

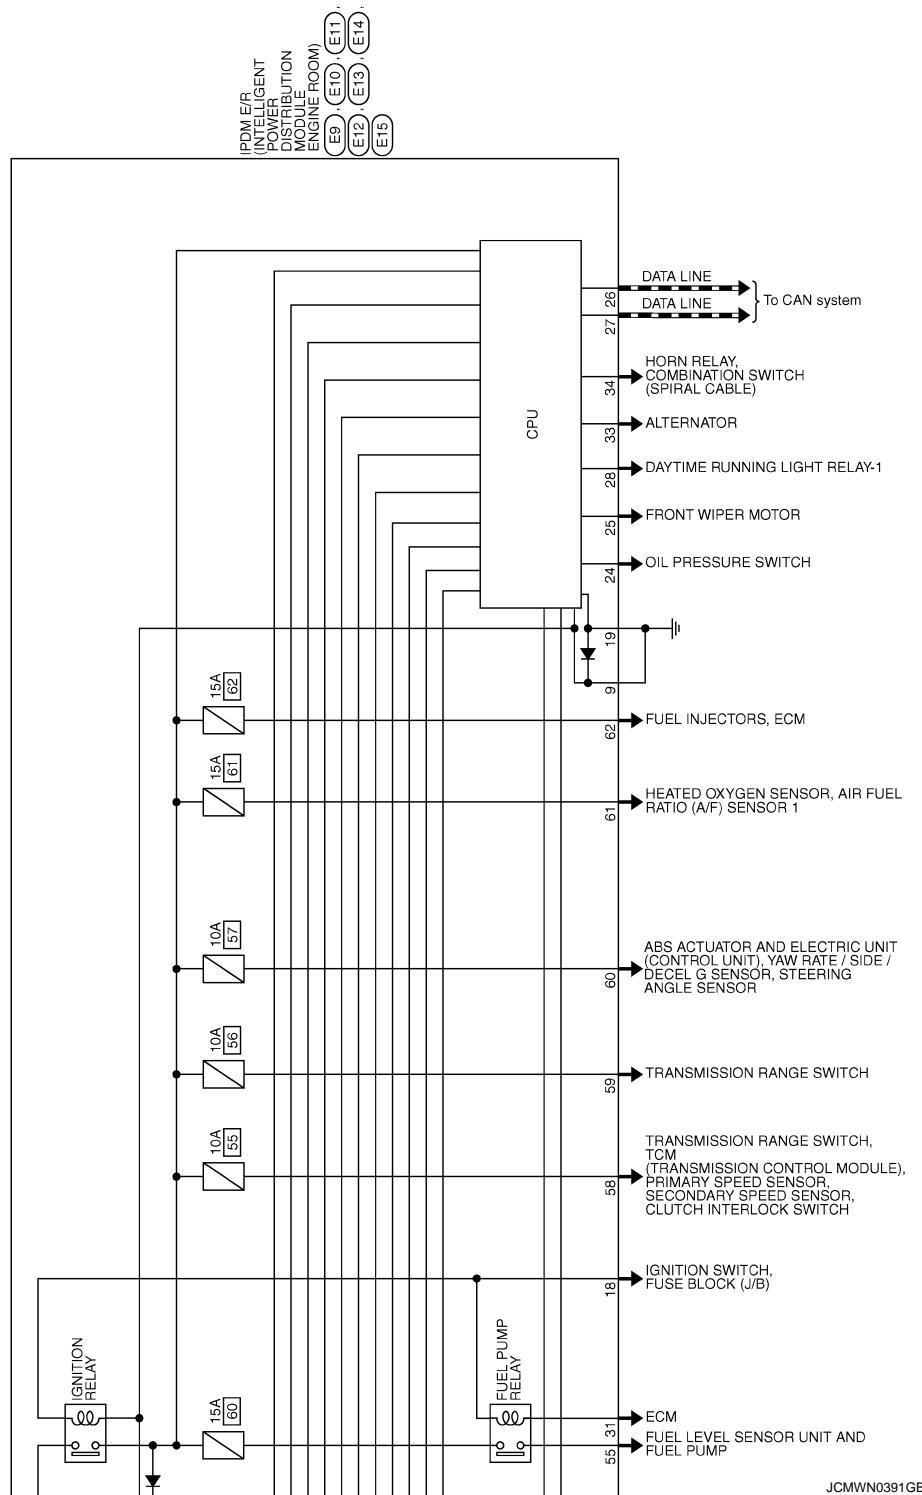

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) (WITHOUT INTELLIGENT KEY)			
Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.
EB IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE Engine Room	-	-	60 V
Connector Name	-	-	61 W
Connector Type	-	-	62 L
			
Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.
E14 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM	B/W	-	39 [38] [37] [36] [35]
Connector Name	-	-	46 [45] [44] [43] [42] [41] [40]
Connector Type	-	-	
			
Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.
E12 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM	L	-	17 [16] [15] [21] [20] [19] [18]
Connector Name	-	-	36 V
Connector Type	-	-	37 Y
			
Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.
E10 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE Engine Room	R	-	18 Y
Connector Name	-	-	38 G
Connector Type	-	-	39 V
			
Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.
E11 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE Engine Room	G	-	19 B/W
Connector Name	-	-	40 R
Connector Type	-	-	41 SB
			
Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.
E13 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM	S	-	21 V
Connector Name	-	-	43 G
Connector Type	-	-	44 P
			
Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.
E15 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM	V	-	22 V
Connector Name	-	-	45 Y
Connector Type	-	-	46 O
			
Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.
E11 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE Engine Room	BR	-	28 [27] [26] [25] [24] [23]
Connector Name	P	-	32 [31] [30] [29]
Connector Type	LG	-	33 [32]
			
Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.
E11 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE Engine Room	SB	-	34 [33] [32]
Connector Name	-	-	35 [34]
Connector Type	-	-	36 [35]
			
Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.
E11 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE Engine Room	Y	-	37 [36] [35]
Connector Name	-	-	38 [37]
Connector Type	-	-	39 [38]
			
Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.
E11 IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE Engine Room	R	-	47 BR
Connector Name	-	-	49 W
Connector Type	-	-	50 GR
			
Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.
M06B-LC IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM	BR	-	51 R
Connector Name	-	-	52 P
Connector Type	-	-	54 GR
			
Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.
M06B-LC IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM	P	-	55 P
Connector Name	-	-	56 SB
Connector Type	-	-	57 G
			
Connector No.	Color of Wire	Signal Name [Specification]	Terminal No.
M06B-LC IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM	O	-	58 R
Connector Name	-	-	59 Y
Connector Type	-	-	
			

JCMWN0392GB

INFOID:0000000006952988

WITHOUT INTELLIGENT KEY : Fail-Safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

<ECU DIAGNOSIS INFORMATION >

Control part	Fail-safe operation
Cooling fan	<ul style="list-style-type: none"> The cooling fan relay-1, the cooling fan relay-2 and the cooling fan relay-3 turn ON when the ignition switch is turned ON (Cooling fan HI operation) The cooling fan relay-1, the cooling fan relay-2 and the cooling fan relay-3 turn OFF when the ignition switch is turned OFF
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> Turns ON the headlamp low relay when the ignition switch is turned ON Turns OFF the headlamp low relay when the ignition switch is turned OFF Headlamp high relay OFF Daytime running light relay OFF*
Parking lamps Side marker lamps License plate lamps Illuminations Tail lamps	<ul style="list-style-type: none"> Turns ON the tail lamp relay when the ignition switch is turned ON Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Front fog lamps	Front fog lamp relay OFF
Rear window defogger relay	Rear window defogger relay OFF
Horn	Horn OFF

*: With daytime running light system

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit of the ignition relay inside and ignition switch status from BCM via CAN communication.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the ignition switch status from BCM via CAN communication.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition switch status from BCM		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	<ul style="list-style-type: none"> Detects DTC "B2098: IGN RELAY ON" Turns ON the tail lamp relay for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF"

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

WITHOUT INTELLIGENT KEY : DTC Index

INFOID:000000006952989

NOTE:

- The details of time display are as follows.
- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
- The number is 0 when is detected now.
- The number increases like 1 → 2 … 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

x: Applicable

CONSULT display	Fail-safe	Refer to
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	PCS-16
B2098: IGN RELAY ON	×	PCS-17
B2099: IGN RELAY OFF	—	PCS-48

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

EXTERIOR LIGHTING SYSTEM SYMPTOMS WITHOUT DAYTIME RUNNING LIGHT SYSTEM

WITHOUT DAYTIME RUNNING LIGHT SYSTEM : Symptom Table

INFOID:0000000006504423

CAUTION:

Perform the self-diagnosis with CONSULT-III before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom		Possible cause	Inspection item
Headlamp (HI) is not turned ON.	One side	<ul style="list-style-type: none"> • Fuse • Halogen bulb (HI) • Harness between IPDM E/R and the headlamp • Harness between headlamp and the ground • IPDM E/R 	Headlamp (HI) circuit Refer to EXL-47 .
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON" Refer to EXL-195 .	
High beam indicator lamp is not turned ON. [Headlamp (HI) is turned ON.]		Combination meter	<ul style="list-style-type: none"> • Combination meter • Data monitor "HI-BEAM IND" • BCM (HEADLAMP) • Active test "HEADLAMP"
Headlamp (LO) is not turned ON.	One side	<ul style="list-style-type: none"> • Fuse • Halogen bulb (LO) • Harness between IPDM E/R and the headlamp • Harness between headlamp and the ground • IPDM E/R 	Headlamp (LO) circuit Refer to EXL-50 .
	Both sides	Symptom diagnosis "BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON" Refer to EXL-196 .	
Headlamp is not turned OFF.	When ignition switch is turned ON.	IPDM E/R	—
	When ignition switch is turned OFF.	<ul style="list-style-type: none"> • Combination switch • Harness between the combination switch and BCM • BCM • Optical sensor • Harness between the optical sensor and BCM • BCM 	Combination switch Refer to BCS-140 . Optical sensor Refer to EXL-64 .
Front fog lamp is not turned ON.	One side	<ul style="list-style-type: none"> • Front fog lamp bulb • Harness between IPDM E/R and the front fog lamp • Front fog lamp • IPDM E/R 	Front fog lamp circuit Refer to EXL-55 .
	Both side	Symptom diagnosis "BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON" Refer to EXL-198 .	
Parking lamp is not turned ON.		<ul style="list-style-type: none"> • Parking lamp bulb • Harness between IPDM E/R and the parking lamp • Front combination lamp assembly • IPDM E/R 	Parking lamp circuit Refer to EXL-60 .

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

Symptom	Possible cause	Inspection item
Tail lamp is not turned ON.	<ul style="list-style-type: none"> • Tail lamp bulb • Harness between IPDM E/R and the rear combination lamp • Rear combination lamp assembly 	Tail lamp circuit Refer to EXL-69 .
Rear side marker lamp is not turned ON.	<ul style="list-style-type: none"> • Rear side marker lamp bulb • Harness between IPDM E/R and the rear side marker lamp • Rear side marker lamp assembly 	Rear side marker lamp circuit Refer to EXL-71 .
License plate lamp is not turned ON.	<ul style="list-style-type: none"> • License plate lamp bulb • Harness between IPDM E/R and the license plate lamp • License plate lamp assembly 	License plate lamp circuit Refer to EXL-72 .
<ul style="list-style-type: none"> • Parking lamp, tail lamp, rear side marker lamp and license plate lamp are not turned ON. • Parking lamp, tail lamp, rear side marker lamp and license plate lamp are not turned OFF. (Each illumination is turned ON/OFF.) 	Symptom diagnosis "PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON" Refer to EXL-197 .	
Tail lamp indicator is not turned ON. (Parking and tail lamps are turned ON.)	Combination meter	<ul style="list-style-type: none"> • Combination meter • Data monitor "LIGHT IND" • BCM (HEADLAMP) • Active test "TAIL LAMP"
Turn signal lamp does not blink.	Indicator lamp is normal. (Applicable side performs the high flasher activation.)	<ul style="list-style-type: none"> • Harness between BCM and each turn signal lamp • Turn signal lamp bulb
	Indicator lamp is included.	<ul style="list-style-type: none"> • Combination switch • Harness between the combination switch and BCM • BCM
Turn signal indicator lamp does not blink. (Turn signal indicator lamp is normal.)	One side	Combination meter
	Both sides (Always)	<ul style="list-style-type: none"> • Turn signal indicator lamp signal - BCM • Combination meter
	Both sides (Only when activating hazard warning lamp with the ignition switch OFF.)	<ul style="list-style-type: none"> • Combination meter power supply and the ground circuit • Combination meter
<ul style="list-style-type: none"> • Hazard warning lamp does not activate. • Hazard warning lamp continues activating. (Turn signal is normal.) 	<ul style="list-style-type: none"> • Hazard switch • Harness between the hazard switch and BCM • BCM 	Hazard switch Refer to EXL-67 .

WITH DAYTIME RUNNING LIGHT SYSTEM

WITH DAYTIME RUNNING LIGHT SYSTEM : Symptom Table

INFOID:0000000006504424

CAUTION:

Perform the self-diagnosis with CONSULT-III before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

Symptom	Possible cause	Inspection item
Headlamp (HI) is not turned ON. [Headlamp (HI) is turned ON.]	One side	<ul style="list-style-type: none"> • Fuse • Halogen bulb (HI) • Harness between IPDM E/R and the headlamp • Harness between the headlamp and the daytime running light relay-1 • Harness between the daytime running light relay-1 and the ground • Harness between the headlamp and the ground • Daytime running light relay-1 • IPDM E/R
	Both sides	<p>Symptom diagnosis "BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON" Refer to EXL-195.</p>
High beam indicator lamp is not turned ON. [Headlamp (HI) is turned ON.]	Combination meter	<ul style="list-style-type: none"> • Combination meter • Data monitor "HI-BEAM IND" • BCM (HEADLAMP) • Active test "HEADLAMP"
Headlamp (LO) is not turned ON. [Headlamp (LO) is turned ON.]	One side	<ul style="list-style-type: none"> • Fuse • Halogen bulb (LO) • Harness between IPDM E/R and the headlamp • Harness between IPDM E/R and the daytime running light relay-2 • Harness between IPDM E/R and the headlamp • Harness between daytime running light relay-2 and the headlamp • Harness between the headlamp and the ground • Harness between the headlamp and the daytime running light relay-1 • Harness between the daytime running light relay-1 and the ground • Daytime running light relay-1 • Daytime running light relay-2 • IPDM E/R
	Both sides	<p>Symptom diagnosis "BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON" Refer to EXL-50.</p>
Headlamp is not turned OFF. [Headlamp (HI) is turned ON.]	When ignition switch is turned ON.	<p>"BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON" Refer to EXL-196.</p>
	When ignition switch is turned OFF.	IPDM E/R
Daytime running light is not turned ON. [Headlamp (HI) is turned ON.]	<ul style="list-style-type: none"> • Fuse • Harness between IPDM E/R and the daytime running light relay-1 • Daytime running light relay-1 • IPDM E/R • BCM • ECM • Combination meter 	<ul style="list-style-type: none"> • Daytime running light relay circuit Refer to EXL-57. • BCM (HEADLAMP) Data monitor "ENGINE STATE" • Combination meter Data monitor "PKB SW" • BCM (HEADLAMP) Active test "DAYTIME RUNNING LIGHT"

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

EXTERIOR LIGHTING SYSTEM SYMPTOMS

<SYMPTOM DIAGNOSIS >

Symptom	Possible cause	Inspection item
Headlamp is not turned ON/OFF with the lighting switch AUTO.	<ul style="list-style-type: none"> Combination switch Harness between the combination switch and BCM BCM 	Combination switch Refer to BCS-76 .
	<ul style="list-style-type: none"> Optical sensor Harness between the optical sensor and BCM BCM 	Optical sensor Refer to EXL-64 .
Front fog lamp is not turned ON.	<ul style="list-style-type: none"> Front fog lamp bulb Harness between IPDM E/R and the front fog lamp Front fog lamp IPDM E/R 	Front fog lamp circuit Refer to EXL-55 .
	Symptom diagnosis "BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON" Refer to EXL-198 .	
Front fog lamp is not turned ON.		
Parking lamp is not turned ON.	<ul style="list-style-type: none"> Parking lamp bulb Harness between IPDM E/R and the parking lamp Front combination lamp assembly IPDM E/R 	Parking lamp circuit Refer to EXL-60 .
Tail lamp is not turned ON.	<ul style="list-style-type: none"> Tail lamp bulb Harness between IPDM E/R and the rear combination lamp Rear combination lamp assembly 	Tail lamp circuit Refer to EXL-69 .
Rear side marker lamp is not turned ON.	<ul style="list-style-type: none"> Rear side marker lamp bulb Harness between IPDM E/R and the rear side marker lamp Rear side marker lamp assembly 	Rear side marker lamp circuit Refer to EXL-71 .
License plate lamp is not turned ON.	<ul style="list-style-type: none"> License plate lamp bulb Harness between IPDM E/R and the license plate lamp License plate lamp assembly 	License plate lamp circuit Refer to EXL-72 .
<ul style="list-style-type: none"> Parking lamp, tail lamp, rear side marker lamp and license plate lamp are not turned ON. Parking lamp, tail lamp, rear side marker lamp and license plate lamp are not turned OFF. (Each illumination is turned ON/OFF.) 		Symptom diagnosis "PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON" Refer to EXL-197 .
Tail lamp indicator is not turned ON. (Parking and tail lamps are turned ON.)	Combination meter	<ul style="list-style-type: none"> Combination meter Data monitor "LIGHT IND" BCM (HEADLAMP) Active test "TAIL LAMP"
Turn signal lamp does not blink.	Indicator lamp is normal. (Applicable side performs the high flasher activation.)	<ul style="list-style-type: none"> Harness between BCM and each turn signal lamp Turn signal lamp bulb
	Indicator lamp is included.	<ul style="list-style-type: none"> Combination switch Harness between the combination switch and BCM BCM
		Combination switch Refer to BCS-76 .

EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

Symptom	Possible cause	Inspection item
Turn signal indicator lamp does not blink. (Turn signal indicator lamp is normal.)	One side	Combination meter
	Both sides (Always)	<ul style="list-style-type: none"> • Turn signal indicator lamp signal - BCM • Combination meter
	Both sides (Only when activating hazard warning lamp with the ignition switch OFF.)	<ul style="list-style-type: none"> • Combination meter power supply and the ground circuit • Combination meter
• Hazard warning lamp does not activate. • Hazard warning lamp continues activating. (Turn signal is normal.)	<ul style="list-style-type: none"> • Hazard switch • Harness between the hazard switch and BCM • BCM 	Combination meter Power supply and the ground circuit Refer to MWI-39 .
		Hazard switch Refer to EXL-67 .

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

NORMAL OPERATING CONDITION

<SYMPTOM DIAGNOSIS>

NORMAL OPERATING CONDITION

Description

INFOID:0000000006504425

AUTO LIGHT SYSTEM

The headlamp may not be turned ON/OFF immediately after passing dark area or bright area (short tunnel, sky bridge, shadowed area etc.) while using the auto light system. This causes the control difference. This is normal.

BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

BOTH SIDE HEADLAMPS (HI) ARE NOT TURNED ON

Description

INFOID:0000000006504426

Both side headlamps (HI) are not turned ON when setting to the lighting switch HI or PASS.

Diagnosis Procedure

INFOID:0000000006504427

1. COMBINATION SWITCH INSPECTION

Check the combination switch. Refer to [BCS-76, "Symptom Table"](#).

Is the combination switch normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2. CHECK HEADLAMP (HI) REQUEST SIGNAL INPUT

CONSULT-III DATA MONITOR

1. Select "HL HI REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

Monitor item	Condition		Monitor status
HL HI REQ	Lighting switch (2ND)	HI or PASS	ON
		LO	OFF

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-78, "Exploded View"](#).

3. HEADLAMP (HI) CIRCUIT INSPECTION

Check the headlamp (HI) circuit. Refer to [EXL-47, "Component Function Check"](#).

Is the headlamp (HI) circuit normal?

YES >> Replace IPDM E/R.

NO >> Repair or replace the malfunctioning part.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

Description

INFOID:0000000006504428

Both side headlamps (LO) are not turned ON in any condition.

Diagnosis Procedure

INFOID:0000000006504429

1. CHECK COMBINATION SWITCH

Check the combination switch. Refer to [BCS-76, "Symptom Table"](#).

Is the combination switch normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2. CHECK HEADLAMP (LO) REQUEST SIGNAL INPUT

CONSULT-III DATA MONITOR

1. Select "HL LO REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

Monitor item	Condition		Monitor status
HL LO REQ	Lighting switch	2ND	ON
		OFF	OFF

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-78, "Exploded View"](#).

3. HEADLAMP (LO) CIRCUIT INSPECTION

Check the headlamp (LO) circuit. Refer to [EXL-50, "Component Function Check"](#).

Is the headlamp (LO) circuit normal?

YES >> Replace IPDM E/R.

NO >> Repair or replace the malfunctioning part.

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

PARKING, LICENSE PLATE, SIDE MARKER AND TAIL LAMPS ARE NOT TURNED ON

Description

INFOID:000000006504430

The parking, license plate, tail, rear side marker lamps and each illumination are not turned ON in any condition.

Diagnosis Procedure

INFOID:000000006504431

1. COMBINATION SWITCH INSPECTION

Check the combination switch. Refer to [BCS-76, "Symptom Table"](#).

Is the combination switch normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

2. CHECK TAIL LAMP RELAY REQUEST SIGNAL INPUT

CONSULT-III DATA MONITOR

1. Select "TAIL & CLR REQ" of IPDM E/R data monitor item.
2. With operating the lighting switch, check the monitor status.

Monitor item	Condition		Monitor status
TAIL & CLR REQ	Lighting switch	1ST	ON
		OFF	OFF

Is the item status normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-78, "Exploded View"](#).

3. TAIL LAMP CIRCUIT INSPECTION

Check the tail lamp circuit. Refer to [EXL-69, "Component Function Check"](#).

Is the tail lamp circuit normal?

YES >> Replace IPDM E/R.

NO >> Repair or replace the malfunctioning part.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

Description

INFOID:0000000006504432

The front fog lamps are not turned ON in any condition.

Diagnosis Procedure

INFOID:0000000006504433

1. CHECK FUSE

Check that the following fuse is fusing.

Unit	Location	Fuse No.	Capacity
Front fog lamp	IPDM E/R	#65	15 A

Is the fuse fusing?

YES >> Repair the applicable circuit. And then replace the fuse.

NO >> GO TO 2.

2. COMBINATION SWITCH INSPECTION

Check the combination switch. Refer to [BCS-76, "Symptom Table"](#).

Is the combination switch normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning part.

3. CHECK FRONT FOG LAMP REQUEST SIGNAL INPUT

CONSULT-III DATA MONITOR

1. Select "FR FOG REQ" of IPDM E/R data monitor item.
2. With operating the front fog lamp switch, check the monitor status.

Monitor item	Condition		Monitor status
FR FOG REQ	Front fog lamp switch (With lighting switch 1ST)	ON	ON
		OFF	OFF

Is the item status normal?

YES >> GO TO 4.

NO >> Replace BCM. Refer to [BCS-78, "Exploded View"](#).

4. FRONT FOG LAMP CIRCUIT INSPECTION

Check the front fog lamp circuit. Refer to [EXL-55, "Component Function Check"](#).

Is the front fog lamp circuit normal?

YES >> Replace IPDM E/R.

NO >> Repair or replace the malfunctioning part.

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000006963827

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

HEADLAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

PERIODIC MAINTENANCE

HEADLAMP AIMING ADJUSTMENT

Description

INFOID:000000006504435

PREPARATION BEFORE ADJUSTING

NOTE:

- For details, refer to the regulations in your own country.
- Perform aiming if the vehicle front body has been repaired and/or the headlamp assembly has been replaced.

Before performing aiming adjustment, check the following.

- Adjust the tire pressure to the specification.
- Fill with fuel, engine coolant and each oil.
- Maintain the unloaded vehicle condition. (Remove luggage from the passenger compartment and the trunk room.)

NOTE:

Do not remove the temporary tire, jack and on-vehicle tool.


- Wipe out dirt on the headlamp.

CAUTION:

Never use organic solvent (thinner, gasoline etc.)

- Ride alone on the driver seat.

AIMING ADJUSTMENT SCREW

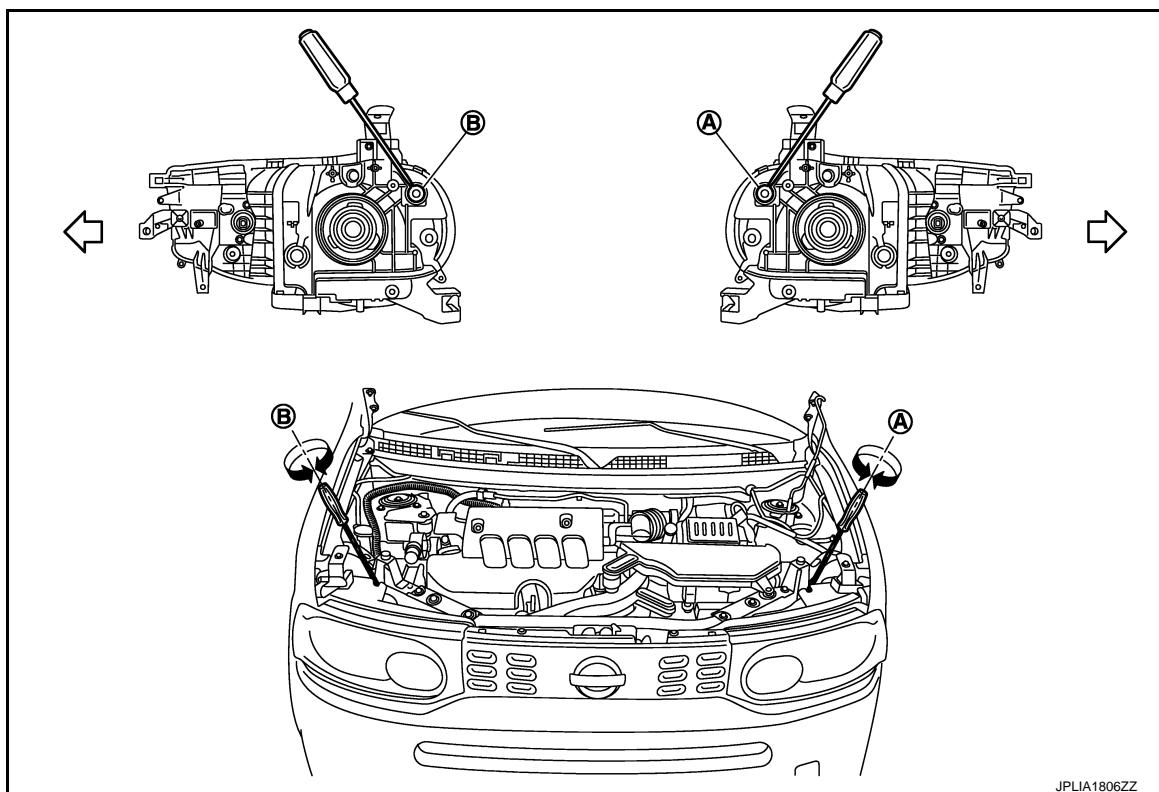

JPLIA1806ZZ

A Headlamp (RH) UP/DOWN
adjustment screw

B. Headlamp (LH) UP/DOWN
adjustment screw

←: Vehicle center

HEADLAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

Adjustment screw		Screw driver rotation	Facing direction
A	Headlamp (RH) UP/DOWN	Clockwise	DOWN
		Counterclockwise	UP
B	Headlamp (LH) UP/DOWN	Clockwise	DOWN
		Counterclockwise	UP


Aiming Adjustment Procedure

INFOID:000000006504436

1. Place the screen.
NOTE:
 - Stop the vehicle facing the wall.
 - Place the board on a plain road vertically.
2. Face the vehicle with the screen. Maintain 10 m (32.8 ft) between the headlamp center and the screen.
3. Start the engine. Turn the headlamp (LO) ON.
NOTE:
 Shut off the headlamp light with the board to prevent from illuminating the adjustment screen.
CAUTION:
 Never cover the lens surface with a tape etc. The lens is made of resin.
4. Measure the distance (X) between the horizontal center line of headlamp (H) and the cutoff line (A) within the light axis measurement range (R) from the vertical center line ahead of headlamp (V).

Light axis measurement range (R) : $350 \pm 175 \text{ mm (13.78} \pm 6.89 \text{ in)}$

Low beam distribution on the screen

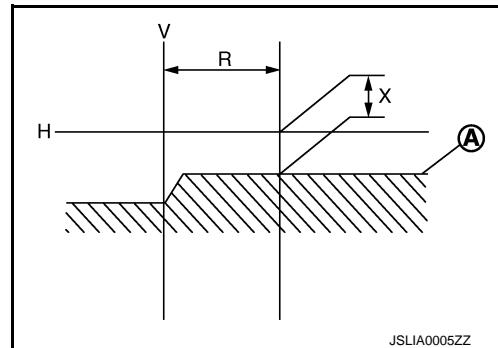


JSLIA0005ZZ

5. Adjust the cutoff line height (X) with the aiming adjustment screw so as to enter in the adjustment range (M-N) according to the horizontal center line of headlamp (H).

unit: mm (in)

Horizontal center line of headlamp (H)	Highest cutoff line height (M)	Lowest cutoff line height (N)
700 (27.56) or less	4 (0.16)	30 (1.18)
701(27.60) – 800 (31.50)	4 (0.16)	30 (1.18)
801 (31.54) or more	17 (0.67)	44 (1.73)

Side view

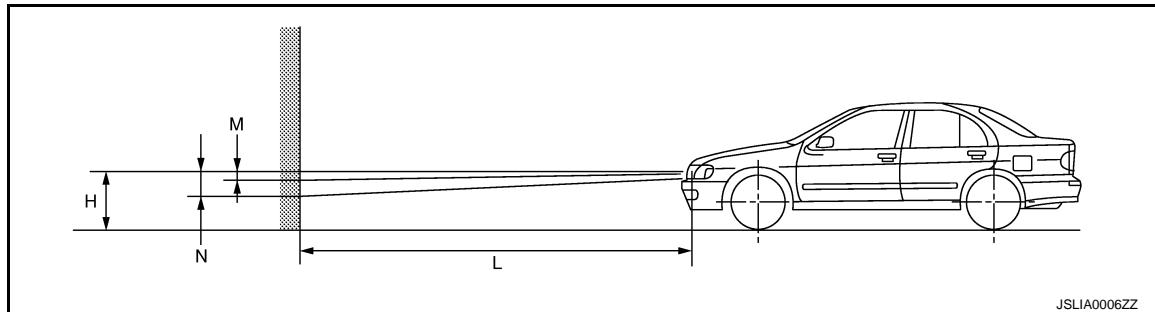

JSLIA0006ZZ

HEADLAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

Distance between the headlamp center and the screen (L) : 10 m (32.8 ft)

FRONT FOG LAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

FRONT FOG LAMP AIMING ADJUSTMENT

Description

INFOID:000000006504437

PREPARATION BEFORE ADJUSTING

NOTE:

- For details, refer to the regulations in your own country.

Before performing aiming adjustment, check the following.

- Adjust the tire pressure to the specification.
- Fill with fuel, engine coolant and each oil.
- Maintain the unloaded vehicle condition. (Remove luggage from the passenger compartment and the luggage room.)

NOTE:

Do not remove the temporary tire, jack and on-vehicle tool.

- Wipe out dirt on the headlamp.

CAUTION:

Never use organic solvent (thinner, gasoline etc.)

- Ride alone on the driver seat.

AIMING ADJUSTMENT SCREW

- Turn the aiming adjusting screw for adjustment.


A: UP

B: DOWN

- For the position and direction of the adjusting screw, refer to the figure.

NOTE:

A screwdriver or hexagonal wrench [6 mm (0.24 in)] can be used for adjustment.

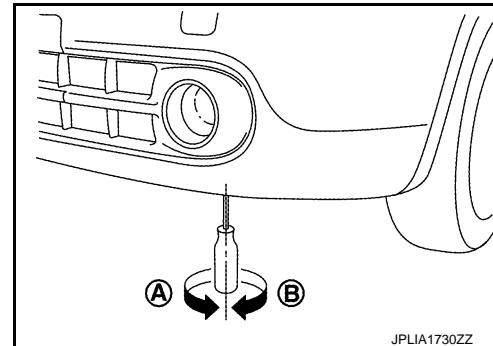

Aiming Adjustment Procedure

INFOID:000000006504438

1. Place the screen.

NOTE:

- Stop the vehicle facing the wall.
- Place the board on a plain road vertically.

2. Face the vehicle with the screen. Maintain 10 m (32.8 ft) between the front fog lamp center and the screen.

3. Start the engine. Illuminate the front fog lamp.

CAUTION:


Never cover the lens surface with a tape etc. The lens is made of resin.

NOTE:

Shut off the headlamp light with the board to prevent from illuminating the adjustment screen.

4. Adjust the cutoff line height (A) with the aiming adjustment screw so that the distance (X) between the horizontal center line of front fog lamp (H) and (A) becomes 200 mm (7.87 in).

Front fog lamp light distribution on the screen

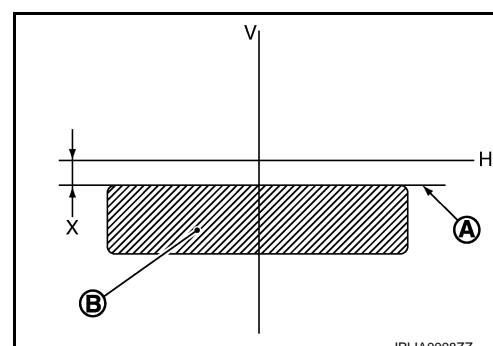

FRONT FOG LAMP AIMING ADJUSTMENT

< PERIODIC MAINTENANCE >

- A : Cutoff line
- B : High illuminance area
- H : Horizontal center line of front fog lamp
- V : Vertical center line of front fog lamp
- X : Cutoff line height

FRONT COMBINATION LAMP


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION FRONT COMBINATION LAMP

Exploded View


INFOID:000000006504439

REMOVAL

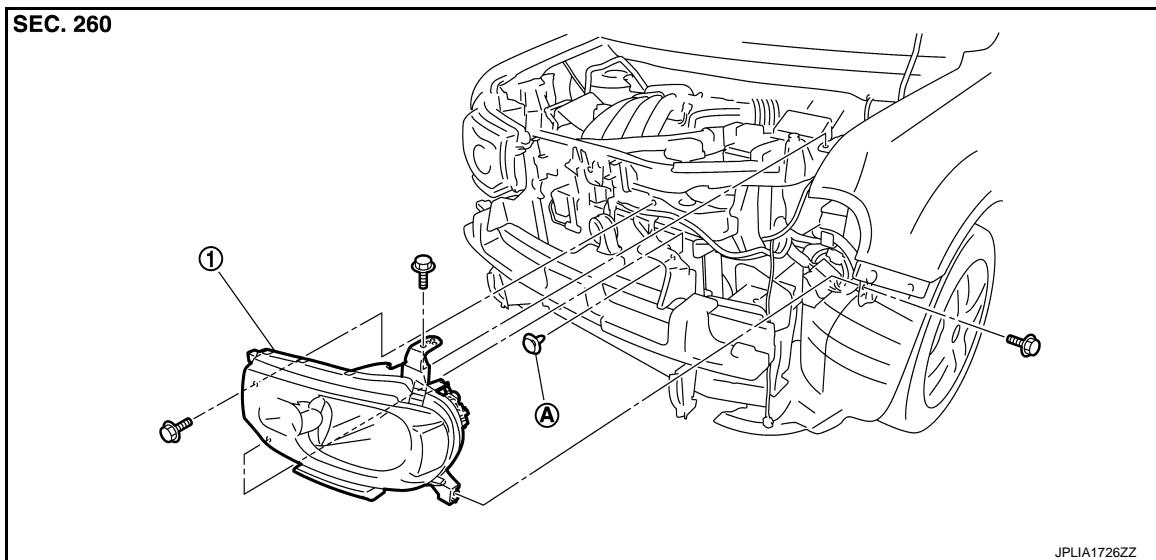

1. Front combination lamp
- A. Air duct clip(only left)

DISASSEMBLY

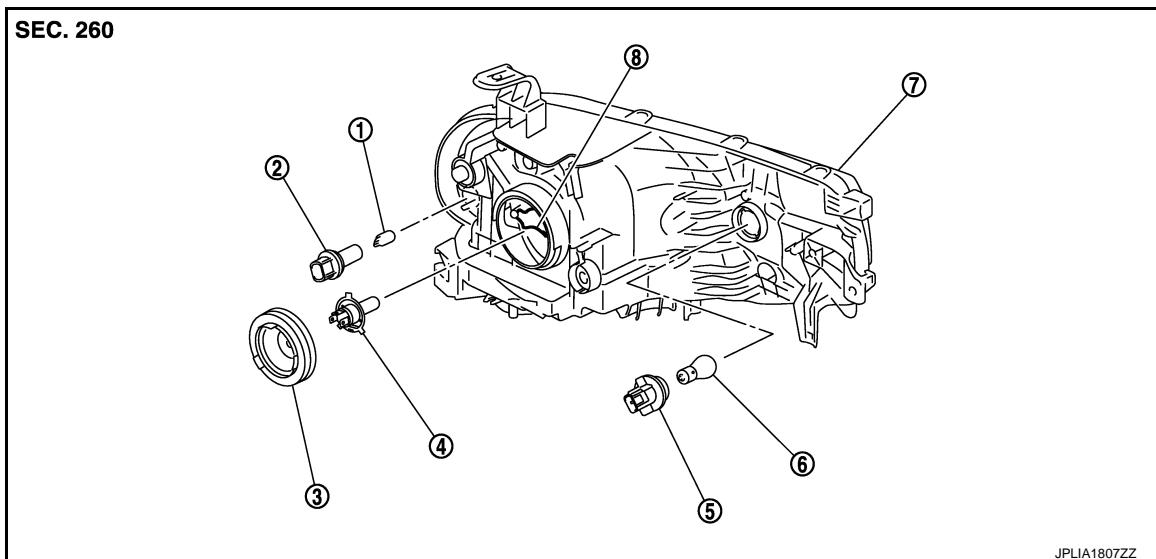

1. Parking(side marker) lamp bulb
2. Parking(side marker) lamp bulb socket et
3. Back cover
4. Halogen bulb
5. Front turn signal lamp bulb socket et
6. Front turn signal lamp bulb
7. Headlamp housing assembly
8. Retaining spring

A
B
C
D
E
F
G
H
I
J
K
EXL
M
N
O
P

Removal and Installation

INFOID:000000006504440

REMOVAL


FRONT COMBINATION LAMP

< REMOVAL AND INSTALLATION >

CAUTION:

Disconnect the battery negative terminal or the fuse.

1. Remove front bumper fascia. Refer to [EXT-12, "Exploded View"](#).
2. Remove the harness clips (A)*.
*: When replace a left.
3. Remove the air duct clip*.
*: When replace a left.
4. Remove the headlamp mounting bolts.
5. Pull out the headlamp assembly forward the vehicle.
6. Disconnect the connector before removing the headlamp assembly.

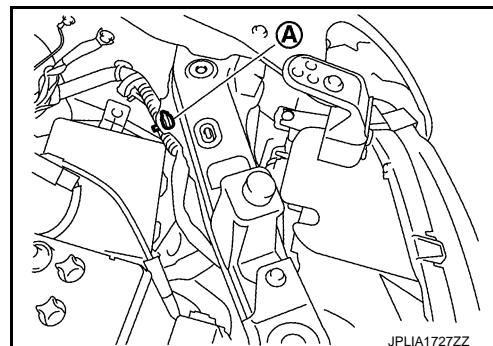

JPLIA1727ZZ

INSTALLATION

Install in the reverse order of removal.

NOTE:

After installation, perform aiming adjustment. Refer to [EXL-200, "Description"](#).

Replacement

INFOID:0000000006504441

CAUTION:

- Disconnect the battery negative terminal or the fuse.
- After installing the bulb, install the resin cap and the bulb socket securely for watertightness.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

HEADLAMP BULB

1. Disconnect the headlamp bulb connector.
2. Remove the back cover.
3. Remove the retaining spring lock. And remove the bulb from the headlamp housing assembly.

PARKING(FRONT SIDE MARKER) LAMP BULB

1. Remove the fender protector. Refer to [EXT-22, "FENDER PROTECTOR : Exploded View"](#). Keep a service area.
2. Rotate the bulb socket counterclockwise and unlock it.
3. Remove the bulb from the bulb socket.

FRONT TURN SIGNAL LAMP BULB

1. Rotate the bulb socket counterclockwise and unlock it.
2. Remove the bulb from the bulb socket.

Disassembly and Assembly

INFOID:0000000006504442

DISASSEMBLY

1. Remove the back cover.
2. Remove the retaining spring lock. And remove the bulb from the headlamp housing assembly.
3. Rotate the parking(front side marker) lamp bulb socket counterclockwise and unlock it.
4. Remove the bulb from the parking(front side marker) lamp bulb socket.
5. Rotate the front turn signal lamp bulb socket counterclockwise and unlock it.
6. Remove the bulb from the front turn signal lamp bulb socket.

ASSEMBLY

Assemble in the reverse order of disassembly.

CAUTION:

FRONT COMBINATION LAMP

< REMOVAL AND INSTALLATION >

After installing the bulb, install the resin cap and the bulb socket securely for watertightness.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P


FRONT FOG LAMP

< REMOVAL AND INSTALLATION >

FRONT FOG LAMP

Exploded View

INFOID:0000000006504443

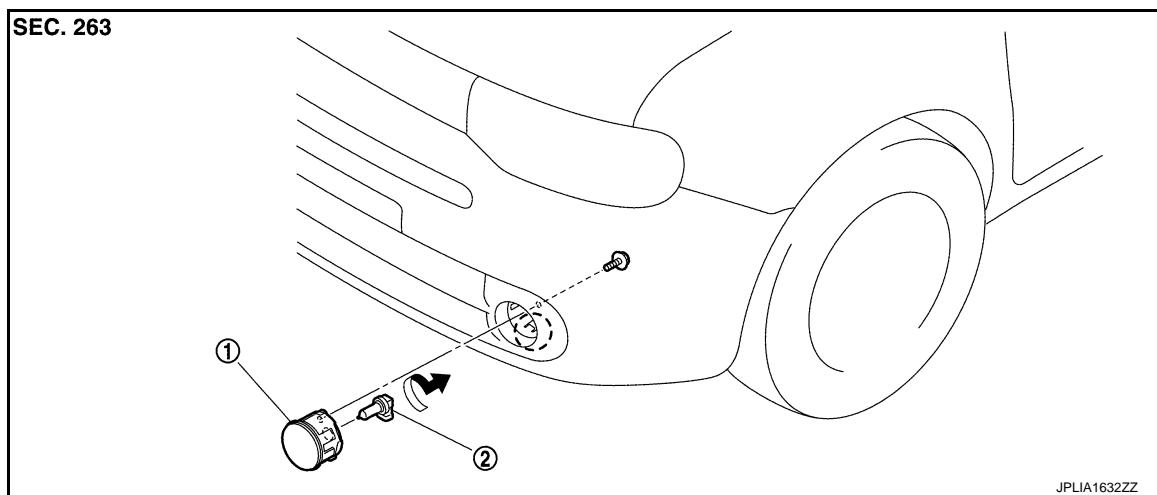

1. Front fog lamp 2. Front fog lamp bulb

(○) : Pawl

Removal and Installation

INFOID:0000000006504444

CAUTION:

Disconnect the battery negative terminal or the fuse.

REMOVAL

1. Remove the fender protector. Refer to [EXT-22, "FENDER PROTECTOR : Exploded View"](#).
2. Remove the front fog lamp connector.
3. Remove the front fog lamp mounting bolt.
4. While pressing pawls, remove the front fog lamp.

INSTALLATION

Installation is the reverse order of removal.

NOTE:

After installation, perform aiming adjustment. Refer to [EXL-203, "Description"](#).

Replacement

INFOID:0000000006504445

CAUTION:

- Disconnect the battery negative terminal or the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.


FRONT FOG LAMP BULB

1. Remove the fender protector. Keep the service area. Refer to [EXT-22, "FENDER PROTECTOR : Exploded View"](#).

FRONT FOG LAMP

< REMOVAL AND INSTALLATION >

2. Remove the front fog lamp bulb connector (1).
3. Rotate the bulb (2) counterclockwise and unlock it.

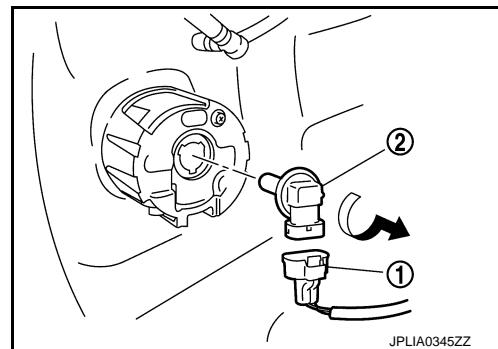

A
B
C
D
E
F
G
H
I
J
K

EXL

M
N
O
P


OPTICAL SENSOR

< REMOVAL AND INSTALLATION >

OPTICAL SENSOR

Exploded View

INFOID:0000000006504446

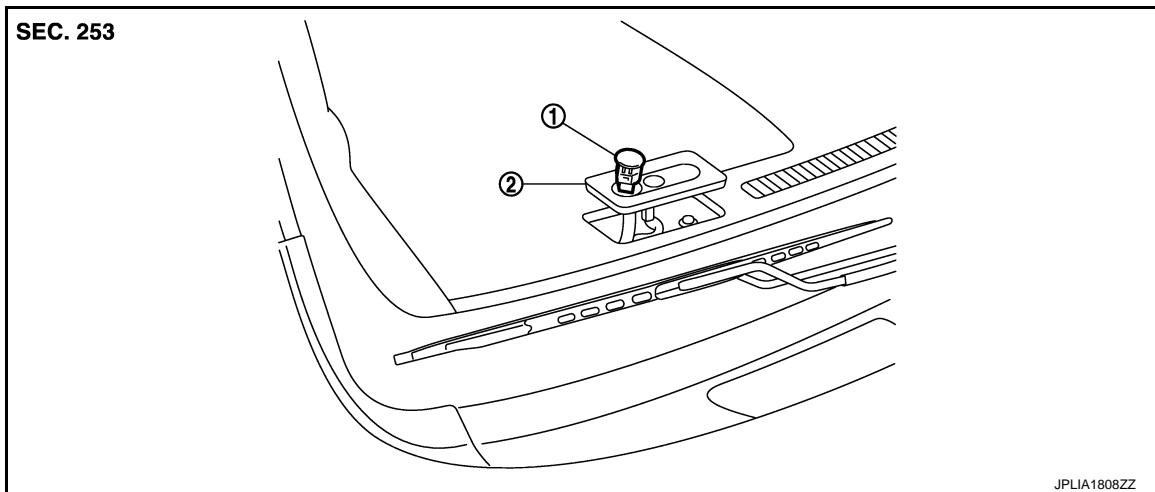

JPLIA1808ZZ

1. Optical sensor
2. Instrument mask

Removal and Installation

INFOID:0000000006504447

REMOVAL

1. Remove the instrument mask.
2. Disconnect the connector. Remove the optical sensor.

INSTALLATION

Install in the reverse order of removal.

LIGHTING & TURN SIGNAL SWITCH

< REMOVAL AND INSTALLATION >

LIGHTING & TURN SIGNAL SWITCH

Exploded View

INFOID:000000006504448

The lighting & turn switch is integrated in the combination switch. Refer to [BCS-79, "Exploded View"](#).

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P


SIDE TURN SIGNAL LAMP

< REMOVAL AND INSTALLATION >

SIDE TURN SIGNAL LAMP

Exploded View

INFOID:0000000006504449

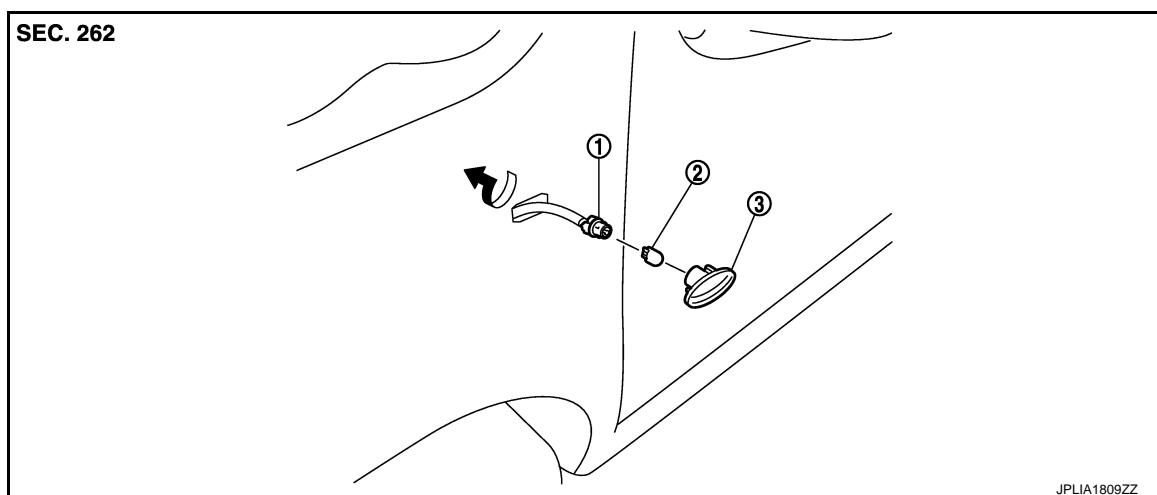

1. Side turn signal lamp bulb socket
2. Side turn signal lamp bulb
3. Side turn signal lamp housing

Removal and Installation

INFOID:0000000006504450

CAUTION:

Disconnect battery negative terminal or remove the fuse.

REMOVAL


1. Remove the side turn signal lamp in numerical order shown in the figure.

↖ : Installable both direction

2. Rotate the bulb socket counterclockwise and unlock it.

NOTE:

Support side turn signal lamp harness with tape so that it won't fall into the front fender.

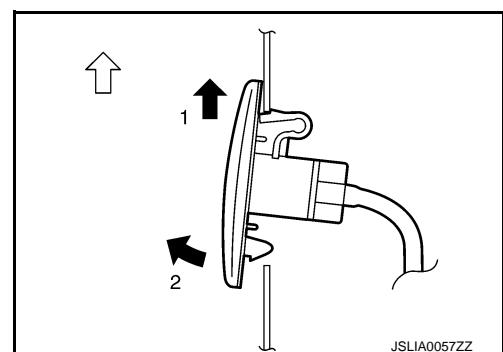

INSTALLATION

1. Rotate the bulb socket clockwise and lock it.
2. Fix the pawl-side behind the side turn signal lamp housing first, then push the resin clip-side.

Replacement

INFOID:0000000006504451

CAUTION:

- Disconnect battery negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

SIDE TURN SIGNAL LAMP BULB

1. Remove the side turn signal lamp.
2. Rotate the bulb socket counterclockwise and unlock it.

NOTE:

SIDE TURN SIGNAL LAMP

< REMOVAL AND INSTALLATION >

Support the vehicle-side harness of the side turn signal lamp with tape so that it does not drop inside the front fender.

3. Remove the bulb from the bulb socket.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P


HAZARD SWITCH

< REMOVAL AND INSTALLATION >

HAZARD SWITCH

Exploded View

INFOID:0000000006504452

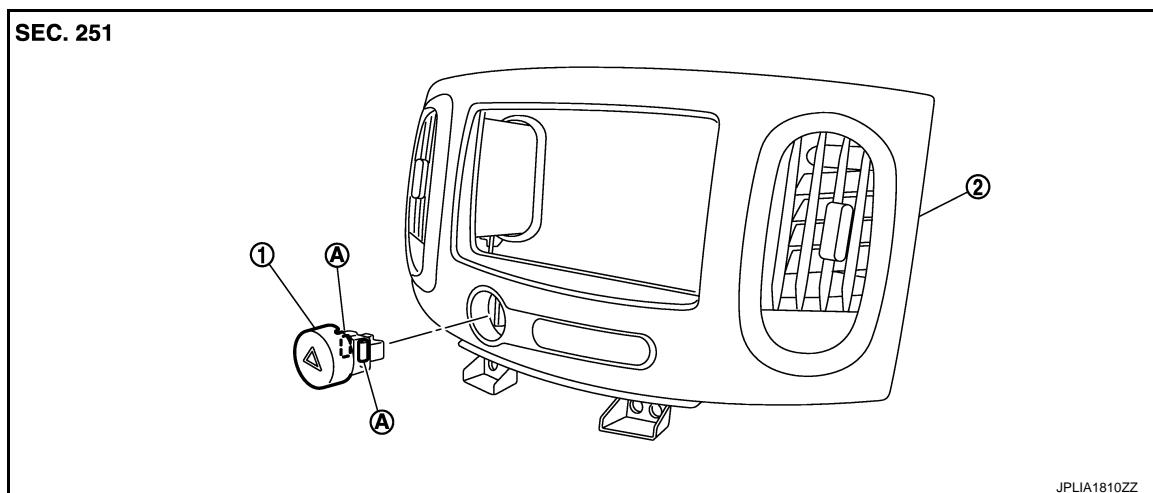

1. Hazard switch
 2. Cluster lid C
- A. Pawl

Removal and Installation

INFOID:0000000006504453

REMOVAL

1. Remove the cluster lid C. Refer to [IP-12, "Exploded View"](#).
2. While pressing pawls, push the hazard switch. And remove it.

INSTALLATION

Install in the reverse order of removal.

REAR COMBINATION LAMP


< REMOVAL AND INSTALLATION >

REAR COMBINATION LAMP

Exploded View


INFOID:0000000006504454

REMOVAL

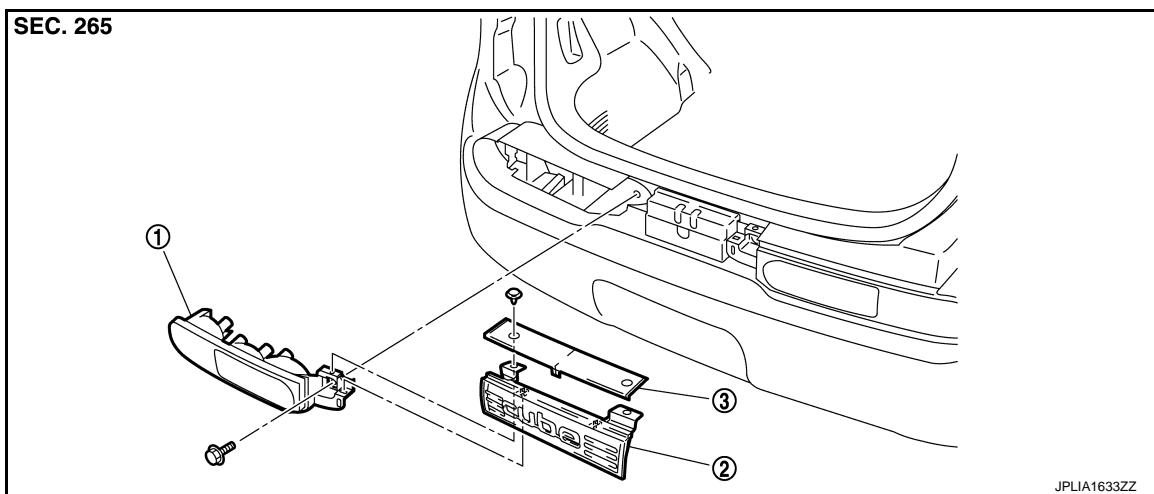

1. Rear combination lamp
2. Back door finisher
3. Back door finisher cover

DISASSEMBLY

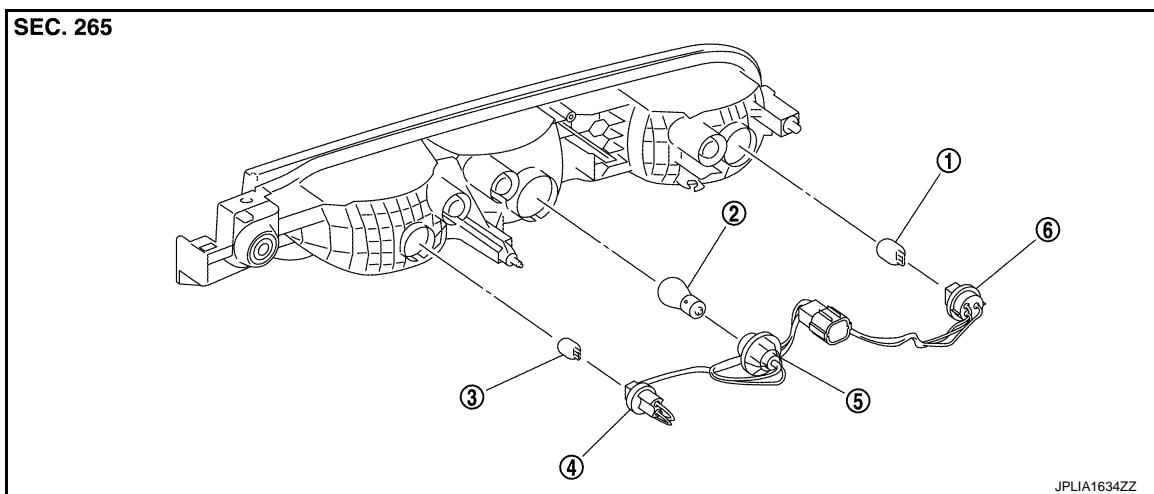

1. Stop/tail lamp bulb
2. Rear turn signal lamp bulb
3. Reverse lamp bulb
4. Reverse lamp bulb socket
5. Rear turn signal lamp bulb socket
6. Stop/tail lamp bulb socket

Removal and Installation

INFOID:0000000006504455

CAUTION:

- Disconnect the battery negative terminal or the fuse.
- Wrap the tip of remover tool with a cloth to protect the body from damage.

REMOVAL

1. Remove rear back door finisher cover.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N


O

P

REAR COMBINATION LAMP


< REMOVAL AND INSTALLATION >

2. Disengage backdoor finisher mounting fastener (A) to remove the back door finisher.

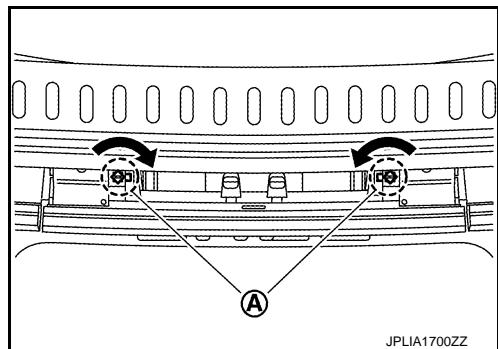

JPLIA1700ZZ

3. Remove rear combination lamp mounting bolts.
4. Slightly turn the rear combination lamp to leave a clearance.

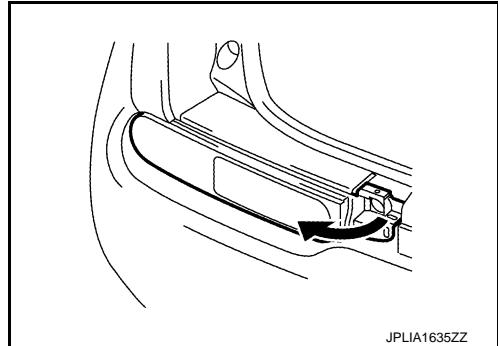


JPLIA1635ZZ

5. Insert an appropriate tool into the clearance between the rear combination lamp and the rear bumper side bracket.

CAUTION:

Since the rear combination lamp has another clip at the lower center, be careful when removing the outer clip.

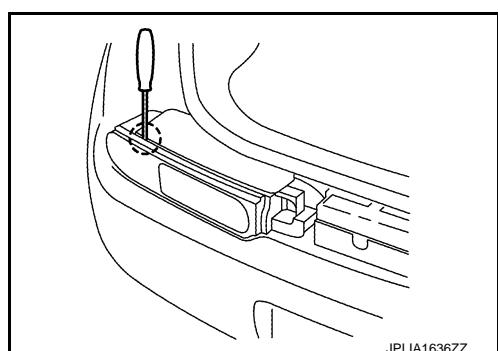

JPLIA1636ZZ

6. Pull rear combination lamp rearward to remove.
7. Disconnect rear combination lamp connector.

INSTALLATION

Install in the reverse order of removal.

NOTE:

The back door finisher mounting fastener remains on the rear combination lamp side after removing the back door finisher. Therefore, be sure to install the mounting fastener on the back door finisher side.

Replacement

INFOID:000000006504456

CAUTION:

- Disconnect the battery negative terminal or the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

STOP/TAIL LAMP BULB

1. Remove rear combination lamp assembly.
2. Rotate the stop/tail lamp bulb socket counterclockwise, and unlock it.
3. Remove bulb from the bulb socket.

REAR COMBINATION LAMP

< REMOVAL AND INSTALLATION >

REAR TURN SIGNAL LAMP BULB

1. Remove rear combination lamp assembly.
2. Rotate the rear turn signal lamp bulb socket counterclockwise, and unlock it.
3. Remove bulb from the bulb socket.

A

BACK-UP LAMP BULB

1. Remove rear combination lamp assembly.
2. Rotate the back-up lamp bulb socket counterclockwise, and unlock it.
3. Remove bulb from the bulb socket.

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P


REAR SIDE MARKER LAMP

< REMOVAL AND INSTALLATION >

REAR SIDE MARKER LAMP

Exploded View

INFOID:0000000006504457

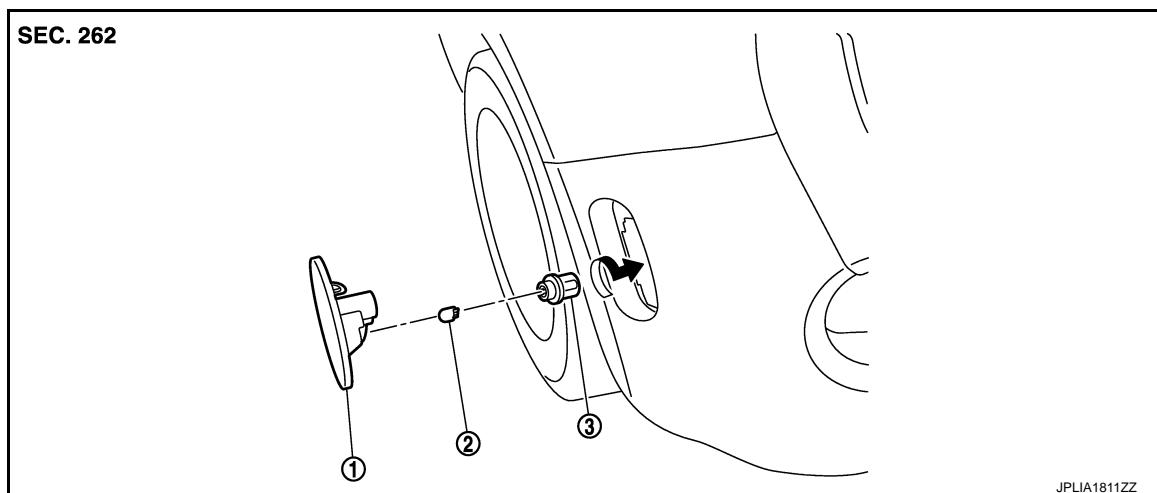

1. Rear side marker lamp housing

2. Rear side marker lamp

3. Rear side marker lamp socket

Removal and Installation

INFOID:0000000006504458


REMOVAL

CAUTION:

Disconnect the battery negative terminal or remove the fuse.

1. Remove rear bumper closing. Refer to [EXT-15, "Exploded View"](#).
2. Disconnect rear side marker lamp connector.
3. Remove rear side marker lamp in numerical order shown in the figure.

◀ :Vehicle front

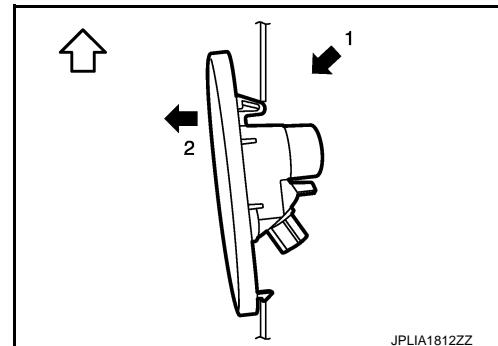

INSTALLATION

Install in the reverse order of removal.

Replacement

INFOID:0000000006504459

CAUTION:

- Disconnect battery negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

REAR SIDE MARKER LAMP BULB

1. Remove the rear side marker lamp.
2. Rotate the bulb socket counterclockwise and unlock it.
3. Remove the bulb from the bulb socket.


HIGH-MOUNTED STOP LAMP

< REMOVAL AND INSTALLATION >

HIGH-MOUNTED STOP LAMP

Exploded View

INFOID:000000006504460

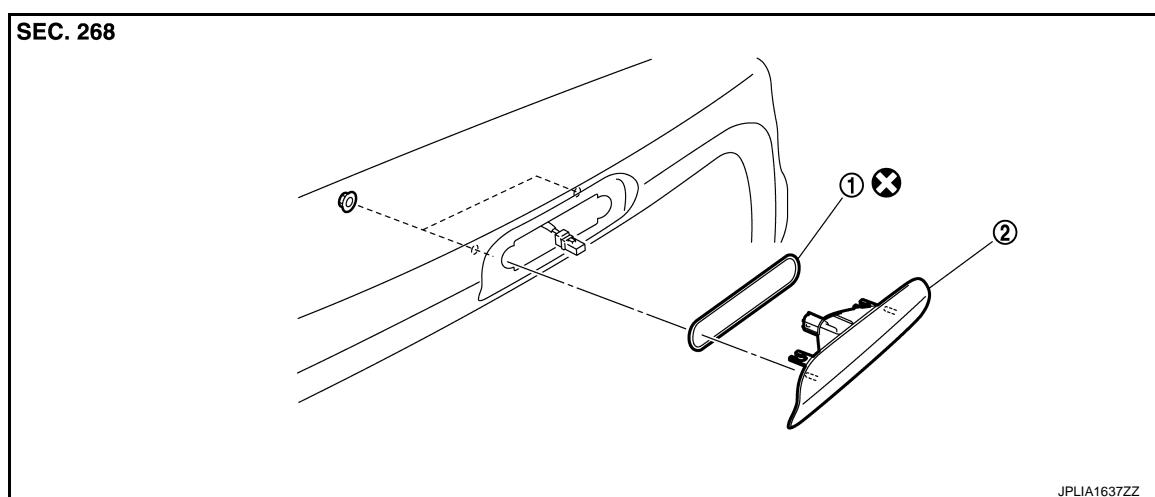

1. Seal packing
2. High-mounted stop lamp

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000006504461

CAUTION:

Disconnect battery negative terminal or remove the fuse.

REMOVAL

1. Remove the back door finisher upper. Refer to [INT-27, "Exploded View"](#).
2. Remove the mounting nuts.
3. Disconnect the high-mounted stop lamp connector.
4. Pull the high-mounted stop lamp toward rear of the vehicle.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Seal packing cannot be reused.

Replacement

INFOID:000000006504462

CAUTION:

- **Disconnect the battery negative terminal or the fuse.**
- **Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.**
- **Never touch bulb by hand while it is lit or right after being turned off.**
- **Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.**


HIGH-MOUNTED STOP LAMP BULB

1. Remove the back door finisher upper. Refer to [INT-27, "Exploded View"](#).

HIGH-MOUNTED STOP LAMP

< REMOVAL AND INSTALLATION >

2. Rotate the bulb socket(1) counterclockwise, and unlock it.
3. Remove the bulb from the bulb(2) socket.

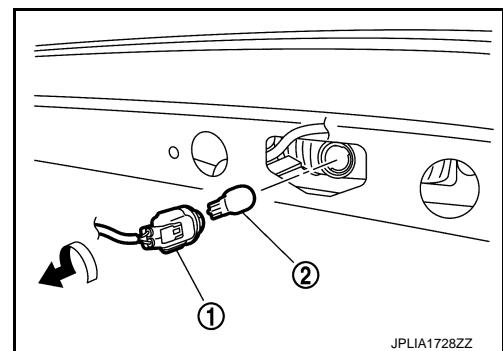

JPLIA1728ZZ


LICENSE PLATE LAMP

< REMOVAL AND INSTALLATION >

LICENSE PLATE LAMP

Exploded View

INFOID:0000000006504463

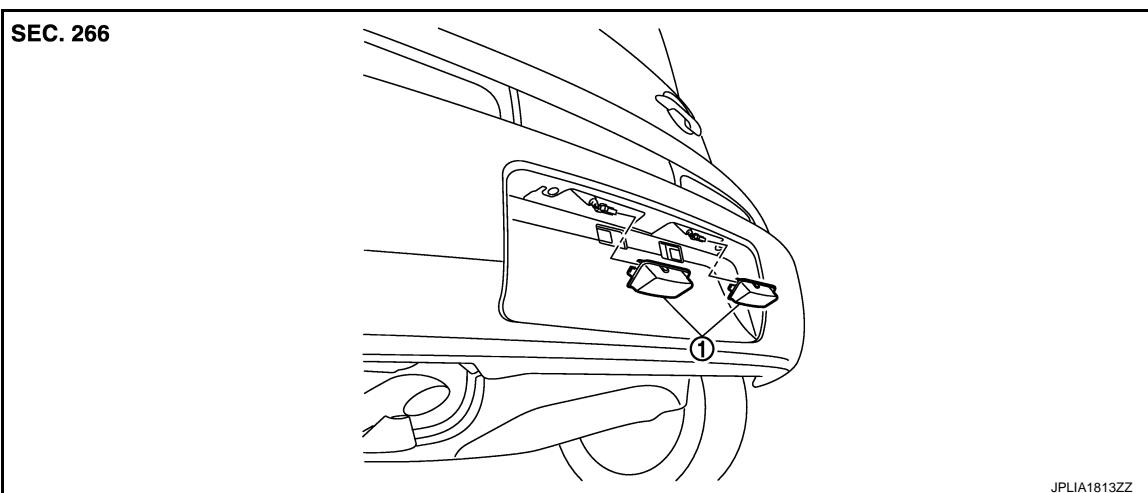

1. License plate lamp

Removal and Installation


INFOID:0000000006504464

CAUTION:

Disconnect the battery negative terminal or remove the fuse.

REMOVAL

1. Remove the license plate lamp in numerical order.
2. Disconnect the license plate lamp connector.
3. Remove the license plate lamp.

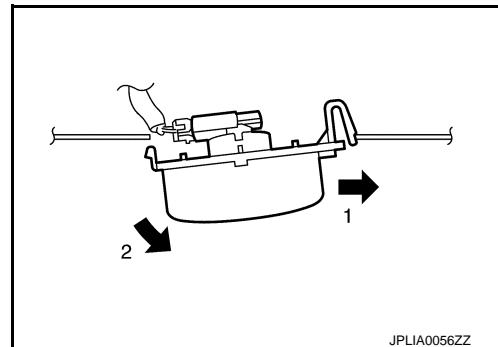

INSTALLATION

1. Connect the license plate lamp connector.
2. Fix the pawl side. And then push the resin clip side.

Replacement

INFOID:0000000006504465

CAUTION:

- Disconnect the battery negative terminal or remove the fuse.
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned off.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.


LICENSE PLATE LAMP BULB

1. Remove the license plate lamp.

LICENSE PLATE LAMP

< REMOVAL AND INSTALLATION >

2. Turn the bulb socket (1) counterclockwise and unlock it.
3. Remove the bulb (2) from the socket.

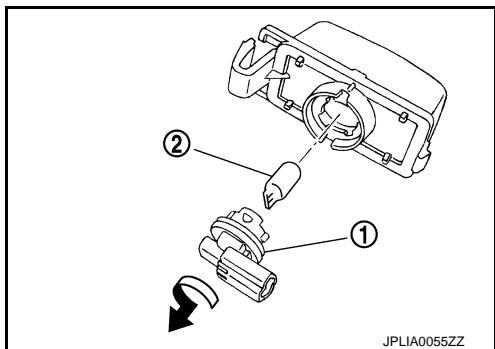

JPLIA0056ZZ

SERVICE DATA AND SPECIFICATIONS (SDS)

<SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Bulb Specifications

INFOID:000000006504466

Item		Type	Wattage (W)
Front combination lamp	Headlamp (HI/LO)	H4	60/55
	Front turn signal lamp	PY21W (Amber)	21
	Parking(front side marker) lamp	W5W	5
Front fog lamp		H8	35
Side turn signal lamp		WY5W (Amber)	5
Rear combination lamp	Stop lamp/Tail lamp	W21/5W	21/5
	Rear turn signal lamp	PY21W	16
	Back-up lamp	W16W	21
License plate lamp		W5W	5
High-mounted stop lamp		W16W	—
Rear side marker lamp		W5W	5

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P