

D

Е

F

Н

J

Κ

L

Ν

0

CONTENTS

MR18DE (EXCEPT FOR CALIFORNIA)	
BASIC INSPECTION	.14
Work Flow Diagnostic Work Sheet	.14
INSPECTION AND ADJUSTMENT	.19
BASIC INSPECTION	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT	.22
IDLE SPEED : Description	. 22
IGNITION TIMINGIGNITION TIMING : DescriptionIGNITION TIMING : Special Repair Requirement	.23
VIN REGISTRATION VIN REGISTRATION : Description VIN REGISTRATION : Special Repair Requirement	.23
ACCELERATOR PEDAL RELEASED POSITION LEARNING	.24
THROTTLE VALVE CLOSED POSITION LEARN-	24

THROTTLE VALVE CLOSED POSITION LEARNING: Description24 THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement24	
IDLE AIR VOLUME LEARNING24 IDLE AIR VOLUME LEARNING : Description24 IDLE AIR VOLUME LEARNING : Special Repair Requirement	
MIXTURE RATIO SELF-LEARNING VALUE CLEAR	
HOW TO SET SRT CODE 28 Description 28 SRT Set Driving Pattern 29 Work Procedure 31	
HOW TO ERASE PERMANENT DTC	
SYSTEM DESCRIPTION40	
ENGINE CONTROL SYSTEM40System Diagram40System Description41Component Parts Location41Component Description46	
MULTIPORT FUEL INJECTION SYSTEM47 System Diagram	
FLECTRIC IGNITION SYSTEM 56	

System Diagram56	CONSULT Function	117
System Description 56	DTO/OIDOUIT DIA ONOCIO	
Component Parts Location57	DTC/CIRCUIT DIAGNOSIS	126
Component Description 62	TROUBLE DIAGNOSIS - SPECIFICATION	
AIR CONDITIONING CUT CONTROL63	VALUE	
System Diagram 63	Description	
System Description 63	Component Function Check	
Component Parts Location64	Diagnosis Procedure	127
Component Description 69		
AUTOMATIC ORTER CONTROL REVICE	POWER SUPPLY AND GROUND CIRCUIT.	
AUTOMATIC SPEED CONTROL DEVICE	Diagnosis Procedure	134
(ASCD)70	U0101 CAN COMM CIRCUIT	137
System Diagram70	Description	
System Description70	DTC Logic	
Component Parts Location72	Diagnosis Procedure	
Component Description77	Diagnosis Frocedure	137
CAN COMMUNICATION78	U1001 CAN COMM CIRCUIT	138
	Description	138
System Description	DTC Logic	
COOLING FAN CONTROL79	Diagnosis Procedure	
System Diagram79	•	
System Description	P0011 IVT CONTROL	139
Component Parts Location	DTC Logic	
Component Description	Diagnosis Procedure	140
Component Description 80	Component Inspection	
EVAPORATIVE EMISSION SYSTEM87	D0004 D0000 A/E 051100D 4 115455D	
System Diagram 87	P0031, P0032 A/F SENSOR 1 HEATER	
System Description	Description	
Component Parts Location91	DTC Logic	
Component Description96	Diagnosis Procedure	143
Compensite Decomption	Component Inspection	145
INTAKE VALVE TIMING CONTROL97	P0037, P0038 HO2S2 HEATER	116
System Diagram97	Description	
System Description97		
Component Parts Location98	DTC Logic	
Component Description103	Diagnosis Procedure	
FUEL FULLED CAR WARRING OVOTEN	Component Inspection	148
FUEL FILLER CAP WARNING SYSTEM 104	P0075 IVT CONTROL SOLENOID VALVE	149
System Diagram	Description	
System Description104	DTC Logic	
ON BOARD DIAGNOSTIC (OBD) SYSTEM 106	Diagnosis Procedure	
Diagnosis Description106	Component Inspection	
GST (Generic Scan Tool)	·	
COT (Concile Court Tool)	P0101 MAF SENSOR	
DIAGNOSIS SYSTEM (ECM) 107	Description	152
	DTC Logic	
DIAGNOSIS DESCRIPTION107	Component Function Check	153
DIAGNOSIS DESCRIPTION: 1st Trip Detection	Diagnosis Procedure	154
Logic and Two Trip Detection Logic107	Component Inspection	155
DIAGNOSIS DESCRIPTION : DTC and Freeze		
Frame Data107	P0102, P0103 MAF SENSOR	
DIAGNOSIS DESCRIPTION : Counter System108	Description	
DIAGNOSIS DESCRIPTION : Driving Pattern111	DTC Logic	
DIAGNOSIS DESCRIPTION: System Readiness	Diagnosis Procedure	
Test (SRT) Code112	Component Inspection	161
DIAGNOSIS DESCRIPTION : Malfunction Indica-	DO444 LAT CENCOD	4
tor Lamp (MIL)113	P0111 IAT SENSOR	
On Board Diagnosis Function114	DTC Logic	
- -	Component Function Check	165

Diagnosis Procedure	165	P0137 HO2S2	195
Component Inspection	165	Description	195
DOLLO DOLLO LAT OFNICOD		DTC Logic	195
P0112, P0113 IAT SENSOR		Component Function Check	
Description		Diagnosis Procedure	197 E
DTC Logic		Component Inspection	
Diagnosis Procedure		·	
Component Inspection	167	P0138 HO2S2	
P0116 ECT SENSOR	400	Description	
		DTC Logic	
Description		Component Function Check	202
DTC Logic		Diagnosis Procedure	203
Component Function Check		Component Inspection	206
Diagnosis Procedure			
Component Inspection	170	P0139 HO2S2	
P0117, P0118 ECT SENSOR	474	Description	
		DTC Logic	
Description		Component Function Check	
DTC Logic		Diagnosis Procedure	211
Diagnosis Procedure		Component Inspection	213
Component Inspection	1/2	DOLLO DOLLO DOLES DOLES A/E OFNICO	_
P0122, P0123 TP SENSOR	174	P014C, P014D, P015A, P015B A/F SENSO	
Description		1	215
DTC Logic		Description	
Diagnosis Procedure		DTC Logic	
Component Inspection		Diagnosis Procedure	217
		DO474 FUEL IN IECTION CYCTEM FUNC	
Special Repair Requirement	176	P0171 FUEL INJECTION SYSTEM FUNC-	
P0125 ECT SENSOR	177	TION	
Description		DTC Logic	
DTC Logic		Diagnosis Procedure	221
Diagnosis Procedure		P0172 FUEL INJECTION SYSTEM FUNC-	
Component Inspection			
		TION	
P0127 IAT SENSOR	180	DTC Logic	
Description	180	Diagnosis Procedure	225
DTC Logic	180	P0181 FTT SENSOR	228
Diagnosis Procedure	181	Description	
Component Inspection		DTC Logic	
		Component Function Check	
P0128 THERMOSTAT FUNCTION	182	·	
DTC Logic		Diagnosis Procedure	
Diagnosis Procedure	183	Component Inspection	231
Component Inspection	184	P0182, P0183 FTT SENSOR	232
P0130 A/F SENSOR 1	405	Description	232
		DTC Logic	
Description		Diagnosis Procedure	
DTC Logic		Component Inspection	
Component Function Check		·	(
Diagnosis Procedure	187	P0222, P0223 TP SENSOR	235
P0131 A/F SENSOR 1	180	Description	235
Description		DTC Logic	
•		Diagnosis Procedure	
DTC Logic		Component Inspection	
Diagnosis Procedure	190	Special Repair Requirement	
P0132 A/F SENSOR 1	192	·	
Description		P0300, P0301, P0302, P0303, P0304 MIS-	
DTC Logic		FIRE	238
Diagnosis Procedure		DTC Logic	238
2.ag.10010 1 1000au10	133	Diagnosis Procedure	

P0327, P0328 KS	244	DTC Logic	281
Description		Diagnosis Procedure	282
DTC Logic		Component Inspection	284
Diagnosis Procedure		DO 450 EVAD CONTROL OVOTEM DD50	
Component Inspection	245	P0452 EVAP CONTROL SYSTEM PRES-	
DOOGE OVER OFFICER (DOO)		SURE SENSOR	
P0335 CKP SENSOR (POS)		Description	
Description		DTC Logic	
DTC Logic		Diagnosis Procedure	
Diagnosis Procedure		Component Inspection	289
Component Inspection	249	P0453 EVAP CONTROL SYSTEM PRES-	
P0340 CMP SENSOR (PHASE)	250	SURE SENSOR	290
Description		Description	
DTC Logic		DTC Logic	
Diagnosis Procedure		Diagnosis Procedure	
Component Inspection		Component Inspection	
·			
P0420 THREE WAY CATALYST FUNCTION.		P0456 EVAP CONTROL SYSTEM	
DTC Logic		DTC Logic	
Component Function Check		Diagnosis Procedure	
Diagnosis Procedure	255	Component Inspection	301
P0441 EVAP CONTROL SYSTEM	250	P0460 FUEL LEVEL SENSOR	202
DTC Logic		Description	
Component Function Check		DTC Logic	
Diagnosis Procedure		Diagnosis Procedure	
Component Inspection (Drain filter)		Diagnosis Flocedule	302
Component inopocation (Brain inter)		P0461 FUEL LEVEL SENSOR	303
P0443 EVAP CANISTER PURGE VOLUME		Description	303
CONTROL SOLENOID VALVE	265	DTC Logic	
Description	265	Component Function Check	
DTC Logic	265	Diagnosis Procedure	304
Diagnosis Procedure	266	D0.400 D0.400 EUEL 1 EVEL 0ENOOD	
Component Inspection	268	P0462, P0463 FUEL LEVEL SENSOR	
DOALA DOALE EVAD CANICTED DUDGE		Description	
P0444, P0445 EVAP CANISTER PURGE		DTC Logic	
VOLUME CONTROL SOLENOID VALVE		Diagnosis Procedure	305
Description		P0500 VSS	307
DTC Logic			
Diagnosis Procedure		EXCEPT FOR M/T MODELS	
Component Inspection	272	EXCEPT FOR M/T MODELS : Description	
P0447 EVAP CANISTER VENT CONTROL		EXCEPT FOR M/T MODELS : DTC Logic	
VALVE	273	EXCEPT FOR M/T MODELS : Diagnosis Proce-	-
Description		dure	307
DTC Logic		M/T MODELS	200
Diagnosis Procedure		M/T MODELS : Description	
Component Inspection		M/T MODELS : Description	
·	_, _	M/T MODELS : Component Function Check	
P0448 EVAP CANISTER VENT CONTROL		M/T MODELS : Component runction check M/T MODELS : Diagnosis Procedure	
VALVE	277	M/T MODELS . Diagnosis Frocedure	310
Description	277	P0506 ISC SYSTEM	311
DTC Logic		Description	
Diagnosis Procedure		DTC Logic	
Component Inspection		Diagnosis Procedure	
·			
P0451 EVAP CONTROL SYSTEM PRES-		P0507 ISC SYSTEM	
SURE SENSOR		Description	
Description	281	DTC Logic	313

Diagnosis Procedure313	P1551, P1552 BATTERY CURRENT SEN-
P050A, P050E COLD START CONTROL315	SOR
Description315	Description
DTC Logic315	DTC Logic344
Diagnosis Procedure316	Diagnosis Procedure345
	Component Inspection346
P0605 ECM317	P1553 BATTERY CURRENT SENSOR 348
Description	Description348
DTC Logic	DTC Logic348
Diagnosis Procedure318	Diagnosis Procedure349
P0607 ECM319	Component Inspection350
Description	·
DTC Logic	P1554 BATTERY CURRENT SENSOR 352
	Description352
Diagnosis Procedure319	DTC Logic352
P0643 SENSOR POWER SUPPLY320	Component Function Check352
DTC Logic320	Diagnosis Procedure353
Diagnosis Procedure	Component Inspection355
5/4g/10010 1 1000dd10520	
P0850 PNP SWITCH322	P1564 ASCD STEERING SWITCH356
Description322	Description356
DTC Logic322	DTC Logic
Component Function Check323	Diagnosis Procedure356
Diagnosis Procedure323	Component Inspection358
-	P1572 ASCD BRAKE SWITCH359
P1148 CLOSED LOOP CONTROL325	Description
DTC Logic325	DTC Logic359
P117A AIR FUEL RATIO326	Diagnosis Procedure360
	Component Inspection (ASCD Brake Switch)363
DTC Logic	Component Inspection (ASCD Clutch Switch)364
Diagnosis Procedure327	Component Inspection (Stop Lamp Switch)364
P1212 TCS COMMUNICATION LINE331	Component inspection (Stop Lamp Switch)
Description331	P1574 ASCD VEHICLE SPEED SENSOR 366
DTC Logic	Description366
Diagnosis Procedure331	DTC Logic366
•	Diagnosis Procedure366
P1217 ENGINE OVER TEMPERATURE332	DAZAE INDUT CREED CENCOR
DTC Logic	P1715 INPUT SPEED SENSOR368
Component Function Check	Description368
Diagnosis Procedure333	DTC Logic
P1225 TP SENSOR336	Diagnosis Procedure368
	P1805 BRAKE SWITCH370
Description	
DTC Logic	Description
Diagnosis Procedure	DTC Logic
Special Repair Requirement	Diagnosis Procedure
P1226 TP SENSOR338	Component Inspection (Stop Lamp Switch)371
Description	P2096, P2097 A/F SENSOR 1373
DTC Logic	Description373
Diagnosis Procedure	DTC Logic373
Special Repair Requirement	Diagnosis Procedure374
·	-
P1550 BATTERY CURRENT SENSOR340	P2100, P2103 THROTTLE CONTROL MO-
Description	TOR RELAY377
DTC Logic	Description377
Diagnosis Procedure341	DTC Logic377
Component Inspection342	Diagnosis Procedure377

P2101 ELECTRIC THROTTLE CONTROL		Diagnosis Procedure	. 406
FUNCTION	. 380	COOLING FAN	407
Description	380		
DTC Logic	380	Description	
Diagnosis Procedure	380	Component Function Check	
Component Inspection	383	Diagnosis Procedure	
Special Repair Requirement	383	Component Inspection	. 408
P2118 THROTTLE CONTROL MOTOR	. 384	ELECTRICAL LOAD SIGNAL	
Description		Description	
DTC Logic		Component Function Check	
Diagnosis Procedure		Diagnosis Procedure	. 409
Component Inspection		FUEL IN IECTOR	444
Special Repair Requirement		FUEL INJECTOR	
		Description	
P2119 ELECTRIC THROTTLE CONTROL		Component Function Check	
ACTUATOR	. 386	Diagnosis Procedure	
Description		Component Inspection	. 412
DTC Logic		FUEL PUMP	414
Diagnosis Procedure		Description	
Special Repair Requirement		Component Function Check	
·		Diagnosis Procedure	
P2122, P2123 APP SENSOR	. 388	Component Inspection	
Description		Component inspection	. 410
DTC Logic		IGNITION SIGNAL	417
Diagnosis Procedure	388	Description	. 417
Component Inspection		Component Function Check	
Special Repair Requirement	390	Diagnosis Procedure	
DO407 DO400 ADD CENCOD		Component Inspection (Ignition Coil with Power	
P2127, P2128 APP SENSOR		Transistor)	. 420
Description		Component Inspection (Condenser)	
DTC Logic		, , , , ,	
Diagnosis Procedure		MALFUNCTION INDICATOR LAMP	
Component Inspection		Description	
Special Repair Requirement	394	Component Function Check	. 422
P2135 TP SENSOR	305	Diagnosis Procedure	. 422
Description		ON DOADD DEFLIELING VAROD DECOV	
DTC Logic		ON BOARD REFUELING VAPOR RECOV-	
Diagnosis Procedure		ERY (ORVR)	
Component Inspection		Description	
Special Repair Requirement		Component Function Check	
Openia repair requirement illustration		Diagnosis Procedure	
P2138 APP SENSOR	. 398	Component Inspection (Refueling EVAP vapor cut	
Description	398	valve)	
DTC Logic		Component Inspection (Drain filter)	. 428
Diagnosis Procedure	399	POSITIVE CRANKCASE VENTILATION	429
Component Inspection	401	Description	
Special Repair Requirement	401	Component Inspection	
ASCD BRAKE SWITCH	. 402	·	
Description		REFRIGERANT PRESSURE SENSOR	
Component Function Check		Description	
Diagnosis Procedure		Component Function Check	
Component Inspection (ASCD Brake Switch)		Diagnosis Procedure	. 430
Component Inspection (ASCD Clutch Switch)		ECU DIAGNOSIS INFORMATION	. 432
ASCD INDICATOR			
		ECM	
Description Component Function Check		Reference Value	. 432
COMPONENT FUNCTION CHECK	4UD		

Wiring Diagram — ENGINE CONTROL SYSTEM	ADDITIONAL SERVICE WHEN REPLACING
—	CONTROL UNIT486
Fail Safe	ADDITIONAL SERVICE WHEN REPLACING
DTC Inspection Priority Chart449	CONTROL UNIT : Description486
DTC Index450 Test Value and Test Limit453	ADDITIONAL SERVICE WHEN REPLACING
	CONTROL UNIT : Special Repair Requirement486
SYMPTOM DIAGNOSIS461	IDLE SPEED486
ENGINE CONTROL OVOTEM OVMETOMO	IDLE SPEED : Description486
ENGINE CONTROL SYSTEM SYMPTOMS461 Symptom Table461	IDLE SPEED : Special Repair Requirement486
	IGNITION TIMING487
NORMAL OPERATING CONDITION465	IGNITION TIMING : Description487
Description	IGNITION TIMING : Special Repair Requirement.487
PRECAUTION466	VIN REGISTRATION487
PRECAUTIONS466	VIN REGISTRATION : Description487
Precaution for Supplemental Restraint System	VIN REGISTRATION : Special Repair Require-
(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	ment487
SIONER"466	ACCELERATOR PEDAL RELEASED POSITION
Precaution for Procedure without Cowl Top Cover. 466	LEARNING488
On Board Diagnosis (OBD) System of Engine and	ACCELERATOR PEDAL RELEASED POSITION
CVT466	LEARNING : Description488
General Precautions467	ACCELERATOR PEDAL RELEASED POSITION
	LEARNING: Special Repair Requirement488
PREPARATION471	THROTTLE VALVE CLOSED POSITION LEARN-
PREPARATION471	ING488
Special Service Tools471	THROTTLE VALVE CLOSED POSITION
Commercial Service Tools471	LEARNING : Description488
DEDIODIC MAINTENANCE	THROTTLE VALVE CLOSED POSITION
PERIODIC MAINTENANCE473	LEARNING: Special Repair Requirement488
FUEL PRESSURE473	IDLE AIR VOLUME LEARNING488
Inspection473	IDLE AIR VOLUME LEARNING: Description488
·	IDLE AIR VOLUME LEARNING : Special Repair
EVAP LEAK CHECK475	Requirement489
Inspection475	MINTURE DATIO OF ELEADAINO VALUE
SERVICE DATA AND SPECIFICATIONS	MIXTURE RATIO SELF-LEARNING VALUE
	CLEAR490 MIXTURE RATIO SELF-LEARNING VALUE
(SDS)477	CLEAR: Description490
SERVICE DATA AND SPECIFICATIONS	MIXTURE RATIO SELF-LEARNING VALUE
(SDS)477	CLEAR: Special Repair Requirement490
Idle Speed477	OLLAN . Special Nepall Nequilement430
Ignition Timing477	HOW TO SET SRT CODE492
Calculated Load Value477	Description492
Mass Air Flow Sensor477	SRT Set Driving Pattern493
MR18DE (FOR CALIFORNIA)	Work Procedure495
	HOW TO ERASE PERMANENT DTC498
BASIC INSPECTION478	Description498
DIAGNOSIS AND REPAIR WORK FLOW478	Work Procedure (Group A)499
	Work Procedure (Group B)501
Work Flow	. ,
	SYSTEM DESCRIPTION504
INSPECTION AND ADJUSTMENT483	ENGINE CONTROL SYSTEM504
BASIC INSPECTION483	System Diagram504
BASIC INSPECTION : Special Repair Require-	System Description505
ment	Component Parts Location505

Component Description	510	DIAGNOSIS SYSTEM (ECM)	578
MULTIPORT FUEL INJECTION SYSTEM	511	DIAGNOSIS DESCRIPTION	578
System Diagram	511	DIAGNOSIS DESCRIPTION: 1st Trip Detection	1
System Description	511	Logic and Two Trip Detection Logic	578
Component Parts Location	514	DIAGNOSIS DESCRIPTION: DTC and Freeze	
Component Description	519	Frame Data	
ELECTRIC ICNITION SYSTEM	500	DIAGNOSIS DESCRIPTION : Counter System .	
ELECTRIC IGNITION SYSTEM		DIAGNOSIS DESCRIPTION: Driving Pattern	
System Diagram		DIAGNOSIS DESCRIPTION: System Readines	
System Description		Test (SRT) Code	583
Component Parts Location		DIAGNOSIS DESCRIPTION : Malfunction Indica	a-
Component Description	526	tor Lamp (MIL)	
AIR CONDITIONING CUT CONTROL	527	On Board Diagnosis Function	
System Diagram		CONSULT Function	588
System Description		DTC/CIRCUIT DIAGNOSIS	507
Component Parts Location		DIGIONCOTI DIAGNOSIS	597
Component Description		TROUBLE DIAGNOSIS - SPECIFICATION	
AUTOMATIC SPEED CONTROL DEVICE		VALUE	
(ASCD)	E24	Description	
System Diagram		Component Function Check	
System Description		Diagnosis Procedure	598
Component Parts Location		POWER SUPPLY AND GROUND CIRCUIT	60E
Component Description		Diagnosis Procedure	
·		-	
CAN COMMUNICATION		U0101 CAN COMM CIRCUIT	
System Description	542	Description	
COOLING FAN CONTROL	5/12	DTC Logic	
System Diagram		Diagnosis Procedure	608
System Description		U1001 CAN COMM CIRCUIT	600
Component Parts Location		Description	
Component Description		DTC Logic	
Component Description		Diagnosis Procedure	
EVAPORATIVE EMISSION SYSTEM	551	Diagnosis i roccare	000
System Diagram	551	P0011 IVT CONTROL	610
System Description	551	DTC Logic	610
Component Parts Location	555	Diagnosis Procedure	611
Component Description	560	Component Inspection	612
INTAKE VALVE TIMING CONTROL	561	P0031, P0032 A/F SENSOR 1 HEATER	614
System Diagram		Description	
System Description		DTC Logic	
Component Parts Location		Diagnosis Procedure	
Component Description		Component Inspection	
TUMBLE CONTROL VALVE CONTROL .	569	P0037, P0038 HO2S2 HEATER	
System Diagram		Description	
System Description		DTC Logic	
Component Parts Location		Diagnosis Procedure	
Component Description		Component Inspection	
·		·	
FUEL FILLER CAP WARNING SYSTEM System Diagram		P0075 IVT CONTROL SOLENOID VALVE Description	
System Description		DTC Logic	
Cyclem Description		Diagnosis Procedure	
ON BOARD DIAGNOSTIC (OBD) SYSTEI	VI 577	Component Inspection	
Diagnosis Description		Component mopeetion	021
GST (Generic Scan Tool)		P0101 MAF SENSOR	623

Description	623	DTC Logic	654
DTC Logic	623	Component Function Check	
Diagnosis Procedure		Diagnosis Procedure	
Component Inspection			
·		P0131 A/F SENSOR 1	658
P0102, P0103 MAF SENSOR	628	Description	658
Description	628	DTC Logic	658
DTC Logic	628	Diagnosis Procedure	
Diagnosis Procedure		•	
Component Inspection		P0132 A/F SENSOR 1	661
		Description	661
P0111 IAT SENSOR	633	DTC Logic	661
DTC Logic	633	Diagnosis Procedure	662
Component Function Check			
Diagnosis Procedure		P0137 HO2S2	664
Component Inspection		Description	664
Component inspection		DTC Logic	
P0112, P0113 IAT SENSOR	635	Component Function Check	
Description		Diagnosis Procedure	000
DTC Logic		Component Inspection	
Diagnosis Procedure		Component mepodien	
Component Inspection		P0138 HO2S2	670
Component inspection	636	Description	
P0116 ECT SENSOR	637	DTC Logic	
Description		Component Function Check	
DTC Logic		Diagnosis Procedure	
Component Function Check		Component Inspection	6/5
Diagnosis Procedure		P0139 HO2S2	678
Component Inspection	639	Description	
P0117, P0118 ECT SENSOR	640		
·		DTC Logic	
Description		Component Function Check	
DTC Logic		Diagnosis Procedure	
Diagnosis Procedure		Component Inspection	682
Component Inspection	641	P014C, P014D, P015A, P015B A/F SENSOI	2
P0122, P0123 TP SENSOR	6/3	1	
Description			
DTC Logic		Description	
3		DTC Logic	
Diagnosis Procedure		Diagnosis Procedure	686
Component Inspection	645	P0171 FUEL INJECTION SYSTEM FUNC-	
P0125 ECT SENSOR	646		COO
Description		TION	
•		DTC Logic	
DTC Logic		Diagnosis Procedure	690
Diagnosis Procedure		P0172 FUEL INJECTION SYSTEM FUNC-	
Component Inspection	647		
P0127 IAT SENSOR	649	TION	
Description		DTC Logic	
•		Diagnosis Procedure	694
DTC Logic		P0181 FTT SENSOR	607
Diagnosis Procedure			
Component Inspection	650	Description	
P0128 THERMOSTAT FUNCTION	654	DTC Logic	031
		Component Function Check	
DTC Logic		Diagnosis Procedure	
Diagnosis Procedure		Component Inspection	700
Component Inspection	653	DOAGO DOAGO ETT CENCOD	
P0130 A/F SENSOR 1	GE A	P0182, P0183 FTT SENSOR	
		Description	
Description	654	DTC Logic	702

Diagnosis Procedure	702	P0444, P0445 EVAP CANISTER PURGE	
Component Inspection	703	VOLUME CONTROL SOLENOID VALVE	746
P0196 EOT SENSOR	705	Description	
Component Description		DTC Logic	746
DTC Logic		Diagnosis Procedure	
Component Function Check		Component Inspection	748
Diagnosis Procedure		P0447 EVAP CANISTER VENT CONTROL	
Component Inspection		VALVE	740
·		Description	
P0197, P0198 EOT SENSOR	709	DTC Logic	
DTC Logic		Diagnosis Procedure	
Diagnosis Procedure		Component Inspection	
Component Inspection	710	·	701
P0222, P0223 TP SENSOR	711	P0448 EVAP CANISTER VENT CONTROL	
Description		VALVE	753
DTC Logic		Description	
Diagnosis Procedure		DTC Logic	
Component Inspection		Diagnosis Procedure	
·		Component Inspection	755
P0300, P0301, P0302, P0303, P0304 MIS-		P0451 EVAP CONTROL SYSTEM PRES-	
FIRE	714	SURE SENSOR	757
DTC Logic		Description	
Diagnosis Procedure	715	DTC Logic	
D0227 D0220 KG	700	Diagnosis Procedure	
P0327, P0328 KS		Component Inspection	
Description		Component inspection	100
DTC Logic Diagnosis Procedure		P0452 EVAP CONTROL SYSTEM PRES-	
Component Inspection		SURE SENSOR	761
Component inspection	/∠۱	Description	761
P0335 CKP SENSOR (POS)	722	DTC Logic	761
Description		Diagnosis Procedure	762
DTC Logic	722	Component Inspection	765
Diagnosis Procedure	723	P0453 EVAP CONTROL SYSTEM PRES-	
Component Inspection	725		700
DO240 CMD SENSOD (DUASE)	700	SURE SENSOR	
P0340 CMP SENSOR (PHASE)		Description	
Description DTC Logic		DTC Logic Diagnosis Procedure	
Diagnosis Procedure		Component Inspection	
Component Inspection		Component inspection	110
Component inspection	720	P0456 EVAP CONTROL SYSTEM	772
P0420 THREE WAY CATALYST FUNCTION	1 . 730	DTC Logic	772
DTC Logic	730	Diagnosis Procedure	773
Component Function Check	731	Component Inspection	777
Diagnosis Procedure	731	DOACO FILEL I EVEL CENCOD	
DO444 EVAD CONTDOL EVETEM	705	P0460 FUEL LEVEL SENSOR	
P0441 EVAP CONTROL SYSTEM		Description	
DTC Logic		DTC Logic	
Component Function Check		Diagnosis Procedure	//8
Diagnosis Procedure Component Inspection (Drain filter)		P0461 FUEL LEVEL SENSOR	779
Component inspection (Drain litter)	/ 40	Description	
P0443 EVAP CANISTER PURGE VOLUME		DTC Logic	
CONTROL SOLENOID VALVE	741	Component Function Check	
Description		Diagnosis Procedure	
DTC Logic		· ·	
Diagnosis Procedure		P0462, P0463 FUEL LEVEL SENSOR	
Component Inspection		Description	781

DTO!		
DTC Logic		
Diagnosis Procedure	9	
P0500 VSS	Diagnosis Procedure	805
	P1212 TCS COMMUNICATION LINE	200
M/T MODELS	783 Description	
M/T MODELS : Description	783 DTC Logic	
M/T MODELS : DTC Logic	⁷⁸³ Diagnosis Procedure	
M/T MODELS : Component Function Check	784	009
M/T MODELS : Diagnosis Procedure	784 P1217 ENGINE OVER TEMPERATURE	810
EVOCET COR MET MORELO	DTC Logic	810
EXCEPT FOR M/T MODELS	Component Function Chack	
EXCEPT FOR M/T MODELS : Description	Niagnosis Procedure	
EXCEPT FOR M/T MODELS : DTC Logic	784	
EXCEPT FOR M/T MODELS : Diagnosis Proce-	P1225 TP SENSOR	
dure	Description	
P0506 ISC SYSTEM	DTC Logic	
Description	Highnosis Procedure	814
DTC Logic		242
Diagnosis Procedure		
Diagnosis i rocedure	Bootipuon	
P0507 ISC SYSTEM	789 DTC Logic	
Description	Liagnosis Drocadura	816
DTC Logic		010
Diagnosis Procedure		
	DTC Logic	
P050A, P050B, P050E COLD START CON-	Diagnosis Procedure	
TROL		
Description	Component Inspection	821
DTC Logic		
Diagnosis Procedure		
-	Description	
P0603 ECM POWER SUPPLY	DTC Logic	
Description	793 Diagnosis Procedure	
DTC Logic	Component Inspection	
Diagnosis Procedure	793	020
P0605 ECM	P1553 BATTERY CURRENT SENSOR	826
	Description	826
Description	DTCTODIC	826
DTC Logic	Diagnosis Procedure	
Diagnosis Procedure	Component Inspection	
P0607 ECM	797	920
Description	707 P1994 BATTERT CURRENT SENSUR	030
DTC Logic	707 Description	
Diagnosis Procedure	797 DTC Logic	
Diagnosis i roccadio	Component Function Check	830
P0643 SENSOR POWER SUPPLY		
DTC Logic	798 Component Inspection	833
Diagnosis Procedure	700	20.4
•	P 1304 A3CD 31 EERING SWITCH	
P0850 PNP SWITCH	DTO Leads	
Description	Biomasia Brasadus	
DTC Logic	Diagnosis Procedure	
Component Function Check	Component Inspection	836
Diagnosis Procedure	P1572 ASCD BRAKE SWITCH	827
D4440 OLOGED LOGD CONTROL		
P1148 CLOSED LOOP CONTROL	DTO Lastia	
DTC Logic	Diamanaia Danasaliusa	
Diagnosis Procedure	Diagnosis Procedure	
	COMPONENT HISDECTION (49CD DISKE SMICH)	041

Component Inspection (ASCD Clutch Switch)842	Description	
Component Inspection (Stop Lamp Switch)842	DTC Logic	
P1574 ASCD VEHICLE SPEED SENSOR 844	Diagnosis Procedure	
Description844	Component Inspection	875
DTC Logic844	P2127, P2128 APP SENSOR	877
Diagnosis Procedure844	Description	
	DTC Logic	
P1715 INPUT SPEED SENSOR 846	Diagnosis Procedure	
Description846	Component Inspection	
DTC Logic846		
Diagnosis Procedure846	P2135 TP SENSOR	
P1805 BRAKE SWITCH848	Description	
Description848	DTC Logic	
DTC Logic848	Diagnosis Procedure Component Inspection	
Diagnosis Procedure848	Component inspection	002
Component Inspection (Stop Lamp Switch)849	P2138 APP SENSOR	884
	Description	884
P2004 TUMBLE CONTROL VALVE 851	DTC Logic	
Description851	Diagnosis Procedure	
DTC Logic851	Component Inspection	887
Diagnosis Procedure852 Component Inspection855	ASCD BRAKE SWITCH	000
Component inspection	Description	
P2014, P2016, P2017, P2018 TUMBLE CON-	Component Function Check	
TROL VALVE POSITION SENSOR 856	Diagnosis Procedure	
DTC Logic856	Component Inspection (ASCD Brake Switch)	
Diagnosis Procedure856	Component Inspection (ASCD Clutch Switch)	
D200C D2007 A/E CENCOD 4		
P2096, P2097 A/F SENSOR 1 859	ASCD INDICATOR	
Description859 DTC Logic859	Description	
Diagnosis Procedure860	Component Function Check	
Diagnosis i roccadio	Diagnosis Procedure	892
P2100, P2103 THROTTLE CONTROL MO-	COOLING FAN	893
TOR RELAY 863	Description	893
Description863	Component Function Check	893
DTC Logic863	Diagnosis Procedure	893
Diagnosis Procedure863	Component Inspection	894
P2101 ELECTRIC THROTTLE CONTROL	ELECTRICAL LOAD SIGNAL	905
FUNCTION 866	Description	
Description866	Component Function Check	
DTC Logic866	Diagnosis Procedure	
Diagnosis Procedure866	-	
Component Inspection869	FUEL INJECTOR	
DOLLA TUDOTTU E GONTDOL MOTOD	Description	
P2118 THROTTLE CONTROL MOTOR 870	Component Function Check	
Description870	Diagnosis Procedure	
DTC Logic	Component Inspection	898
Diagnosis Procedure	FUEL PUMP	900
Component Inspection871	Description	
P2119 ELECTRIC THROTTLE CONTROL	Component Function Check	
ACTUATOR872	Diagnosis Procedure	
Description872	Component Inspection	902
DTC Logic872	ICNITION SIGNAL	000
Diagnosis Procedure872	IGNITION SIGNAL	
P2122, P2123 APP SENSOR 874	Description Component Function Check	
1 & 1 & E, 1 & 1 & J & A1 1 J L N J U N	COMPONENT UNBUILDING	ວບວ

Diagnosis Procedure	903 ENGINE CONTROL SYSTEM SYMPTOMS 949
Component Inspection (Ignition Coil with Power	Symptom Table949
Transistor)	
Component Inspection (Condenser)	301
MALFUNCTION INDICATOR LAMP	Description
Description	
Component Function Check	908
Diagnosis Procedure	Precaution for Supplemental Restraint System
ON BOARD REFUELING VAPOR RECOV-	(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-
ERY (ORVR)	
Description	
Component Function Check	
Diagnosis Procedure	
Component Inspection (Refueling EVAP vapor cut	
valve)	
Component Inspection (Drain filter)	914
POSITIVE CRANKCASE VENTILATION	915 PREPARATION959
Description	Chariel Camina Table
Component Inspection	One control of One day Table
·	DEDIODIO MAINTENAMOE
REFRIGERANT PRESSURE SENSOR	916 PERIODIC MAINTENANCE961
Description	
Component Function Check	916 Inspection 961
Diagnosis Procedure	916
ECU DIAGNOSIS INFORMATION	EVAP LEAK CHECK963
ECU DIAGNOSIS INFORMATION	Inspection963
ECM	918 OFFICION DATA AND OFFICIATIONS
Reference Value	O18 SERVICE DATA AND SPECIFICATIONS
Wiring Diagram — ENGINE CONTROL SYSTEM	
Fail Safe	024
DTC Inspection Priority Chart	965
DTC Index	age lidle Speed965
Test Value and Test Limit	o ₄₁ Ignition Timing965
	Calculated Load Value965
SYMPTOM DIAGNOSIS	949 Mass Air Flow Sensor965

M

Ν

0

Р


Revision: 2012 August EC-13 2013 CUBE

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

OVERALL SEQUENCE

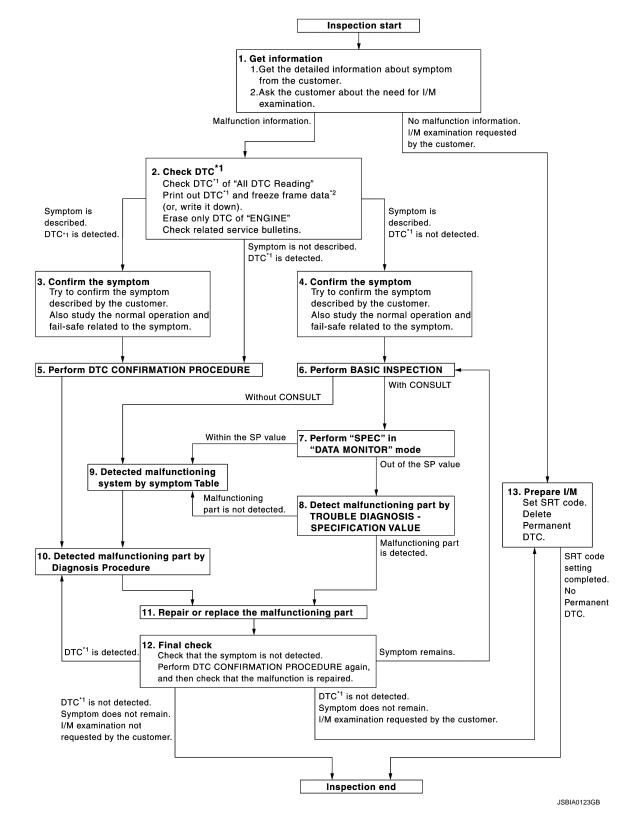

< BASIC INSPECTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

*1: Include 1st trip DTC.

*2: Include 1st trip freeze frame data.

DETAILED FLOW

1.GET INFORMATION FOR SYMPTOM

EC

Α

- Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred) using the "Diagnostic Work Sheet". (Refer to EC-17, "Diagnostic Work Sheet".)
- Ask if the customer requests I/M examination.

Malfunction information, obtained>>GO TO 2.

No Malfunction information, but a request for I/M examination>>GO TO 13.

2.CHECK DTC

Check DTC of "All DTC Reading".

- Perform the following procedure if DTC is displayed.
- Record DTC and freeze frame data. (Print them out with CONSULT or GST.)
- Erase only DTC of "ENGINE".
 - (X) With CONSULT: Refer to "How to Erase DTC and 1st Trip DTC" in EC-117, "CONSULT Function".
 - (R) Without CONSULT: Refer to "How to Erase Self-diagnostic Results" in EC-114, "On Board Diagnosis Function".
- Turn ignition switch OFF.
- Study the relationship between the cause detected by DTC and the symptom described by the customer. (Symptom Table is useful. Refer to EC-461, "Symptom Table".)
- Check related service bulletins for information.

Are any symptoms described and any DTCs detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3.confirm the symptom

Try to confirm the symptom described by the customer (except MIL ON).

Also study the normal operation and fail-safe related to the symptom. Refer to EC-465, "Description" and EC-447, "Fail Safe".

Diagnosis Work Sheet is useful to verify the incident.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom. Refer to EC-465, "Description" and EC-447, "Fail Safe".

Diagnosis Work Sheet is useful to verify the incident.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

${f 5}$.PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the displayed DTC, and then make sure that DTC is detected again.

If two or more DTCs are detected, refer to EC-449, "DTC Inspection Priority Chart" and determine trouble diagnosis order.

NOTE:

Freeze frame data is useful if the DTC is not detected.

D

Е

Н

N

< BASIC INSPECTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

 Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIR-MATION PROCEDURE.

Is DTC detected?

YES >> GO TO 10.

NO >> Check according to GI-41, "Intermittent Incident".

6. PERFORM BASIC INSPECTION

Perform EC-19, "BASIC INSPECTION: Special Repair Requirement".

Do you have CONSULT?

YES >> GO TO 7. NO >> GO TO 9.

7.PERFORM SPEC IN DATA MONITOR MODE

(P)With CONSULT

Make sure that "MAS A/F SE-B1", "MAS A/F SE-B2", "B/FUEL SCHDL", "A/F ALPHA-B1" and "A/F ALPHA-B2" are within the SP value using CONSULT "SPEC" in "DATA MONITOR" mode of "ENGINE". Refer to EC-126, "Component Function Check".

Is the measurement value within the SP value?

YES >> GO TO 9. NO >> GO TO 8.

f 8 DETECT MALFUNCTIONING PART BY TROUBLE DIAGNOSIS - SPECIFICATION VALUE

Detect malfunctioning part according to EC-127, "Diagnosis Procedure".

Is a malfunctioning part detected?

YES >> GO TO 11. NO >> GO TO 9.

9.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM TABLE

Detect malfunctioning system according to <u>EC-461</u>, "Symptom Table" based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptoms.

>> GO TO 10.

10. DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

Inspect according to Diagnosis Procedure of the system.

NOTE:

The Diagnosis Procedure in EC section described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnosis Procedure. For details, refer to GI-44. "Circuit Inspection".

Is a malfunctioning part detected?

YES >> GO TO 11.

NO >> Monitor input data from related sensors or check voltage of related ECM terminals using CON-SULT. Refer to <u>EC-432</u>, "Reference Value".

11. REPAIR OR REPLACE THE MALFUNCTIONING PART

- 1. Repair or replace the malfunctioning part.
- Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
- Check DTC. If DTC is displayed, erase it.
 - (R) With CONSULT: Refer to "How to Erase DTC and 1st Trip DTC" in EC-117, "CONSULT Function".
 - Without CONSULT: Refer to "How to Erase Self-diagnostic Results" in <u>EC-114, "On Board Diagnosis Function"</u>.

>> GO TO 12.

[MR18DE (EXCEPT FOR CALIFORNIA)]

< BASIC INSPECTION >

12. FINAL CHECK

When DTC was detected in step 2, perform DTC CONFIRMATION PROCEDURE or Component Function Check again, and then make sure that the malfunction have been completely repaired.

When symptom was described from the customer, refer to confirmed symptom in step 3 or 4, and make sure that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 10.

YES-2 >> Symptom remains: GO TO 6.

NO-1 >> No request for I/M examination from the customer: Before returning the vehicle to the customer, always erase unnecessary DTC in ECM and TCM (R) With CONSULT: Refer to "How to Read DTC and 1st Trip DTC" in EC-117, "CONSULT Function", W Without CONSULT: Refer to "How to Read Self-diagnostic Results" in EC-114, "On Board Diagnosis Function").

NO-2 >> I/M examination, requested from the customer: GO TO 13.

13. PREPARE FOR I/M EXAMINATION

- Set SRT codes. Refer to EC-28, "Description".
- 2. Erase permanent DTCs. Refer to EC-34, "Description".

>> INSPECTION END.

Diagnostic Work Sheet

DESCRIPTION

There are many operating conditions that lead to the malfunction of engine components. A good grasp of such conditions can make troubleshooting faster and more accurate.

In general, each customer feels differently about an incident. It is important to fully understand the symptoms or conditions for a customer complaint.

Utilize a diagnostic worksheet like the WORKSHEET SAMPLE below in order to organize all the information for troubleshooting. Some conditions may cause the MIL to illuminate steady or blink and DTC to be detected. Examples:

- Vehicle ran out of fuel, which caused the engine to misfire.
- Fuel filler cap was left off or incorrectly screwed on, allowing fuel to evaporate into the atmosphere.

KEY POINTS

WHAT Vehicle & engine model WHEN Date, Frequencies WHERE Road conditions **HOW** Operating conditions, Weather conditions, **Symptoms**

SEF907I

INFOID:0000000008450536

N

Р

EC-17 Revision: 2012 August 2013 CUBE

Α

EC

Е

D

F

< BASIC INSPECTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

WORKSHEET SAMPLE

Customer name MR/MS		Model & Year	VIN	
Engine #		Trans.	Mileage	
Incident Date		Manuf. Date	In Service Date	
Fuel and fuel filler cap		☐ Vehicle ran out of fuel causing misfire ☐ Fuel filler cap was left off or incorrectly screwed on.		
	tion			
Symptoms	□ Idling	☐ No fast idle ☐ Unstable ☐ H☐ Others [ligh idle □ Low idle]	
	☐ Driveability	☐ Stumble ☐ Surge ☐ Knock ☐ Intake backfire ☐ Exhaust backfi ☐ Others [☐ Lack of power re]	
	☐ Engine stall	☐ At the time of start ☐ While idling ☐ While accelerating ☐ While dece ☐ Just after stopping ☐ While loadi	lerating	
Incident occurrence ☐ Just after delivery ☐ Recently ☐ In the morning ☐ At night ☐ In the daytime		☐ In the daytime		
Frequency All the time Under certain conditions Sometim		ditions		
Weather conditions		☐ Not affected		
	Weather	☐ Fine ☐ Raining ☐ Snowing	Others [
	Temperature	☐ Hot ☐ Warm ☐ Cool ☐] Cold ☐ Humid °F	
		☐ Cold ☐ During warm-up ☐ /	After warm-up	
Engine conditions		Engine speed0 2,000	4,000 6,000 8,000 rpm	
Road conditions		☐ In town ☐ In suburbs ☐ Hig	hway	
Driving conditions		☐ While accelerating ☐ While cruis ☐ While decelerating ☐ While turning	S	
		Vehicle speed	30 40 50 60 MPH	
Malfunction indicator lamp ☐ Turned on ☐ Not turned on				

MTBL0017

INSPECTION AND ADJUSTMENT BASIC INSPECTION

BASIC INSPECTION: Special Repair Requirement

INFOID:0000000008450537

Α

EC

D


Е


F

Н

1.INSPECTION START

- Check service records for any recent repairs that may indicate a related malfunction, or a current need for scheduled maintenance.
- Open engine hood and check the following:
- Harness connectors for improper connections
- Wiring harness for improper connections, pinches and cut
- Vacuum hoses for splits, kinks and improper connections
- Hoses and ducts for leaks
- Air cleaner clogging
- Gasket
- 3. Confirm that electrical or mechanical loads are not applied.
- Headlamp switch is OFF.
- Air conditioner switch is OFF.
- Rear window defogger switch is OFF.
- Steering wheel is in the straight-ahead position, etc.
- Start engine and warm it up until engine coolant temperature indicator points the middle of gauge. Ensure engine stays below 1,000 rpm.

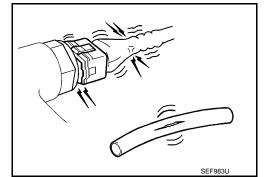


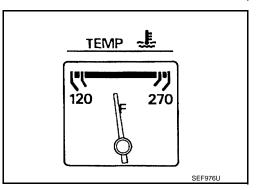

- 5. Run engine at about 2,000 rpm for about 2 minutes under no load.
- 6. Make sure that no DTC is displayed with CONSULT or GST.

Is any DTC detected?

YES >> GO TO 2. NO >> GO TO 3.

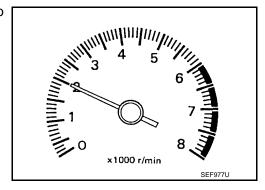

2. REPAIR OR REPLACE

Repair or replace components as necessary according to corresponding Diagnostic Procedure.

>> GO TO 3

3. CHECK IDLE SPEED

1. Run engine at about 2,000 rpm for about 2 minutes under no load.

k

M

N

0

< BASIC INSPECTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]


2. Rev engine (2,000 to 3,000 rpm) two or three times under no load, then run engine at idle speed for about 1 minute.

3. Check idle speed.

For procedure, refer to <u>EC-22</u>, "<u>IDLE SPEED</u>: <u>Special Repair Requirement</u>". For specification, refer to <u>EC-477</u>, "<u>Idle Speed</u>".

Is the inspection result normal?

YES >> GO TO 10. NO >> GO TO 4.

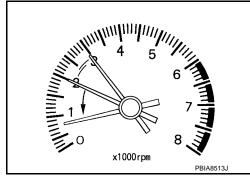

4. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

- Stop engine.
- 2. Perform <u>EC-24</u>, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".

>> GO TO 5.

${f 5.}$ PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Perform EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 6.

6. PERFORM IDLE AIR VOLUME LEARNING

Perform EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

Is Idle Air Volume Learning carried out successfully?

YES >> GO TO 7.

NO >> Follow the instruction of Idle Air Volume Learning. Then GO TO 4.

7. CHECK IDLE SPEED AGAIN

- Start engine and warm it up to normal operating temperature.
- 2. Check idle speed.

For procedure, refer to EC-22, "IDLE SPEED: Special Repair Requirement".

For specification, refer to EC-477, "Idle Speed".

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 8.

8. DETECT MALFUNCTIONING PART

Check the Following.

- Check camshaft position sensor (PHASE) and circuit. Refer to <u>EC-250, "DTC Logic"</u>.
- Check crankshaft position sensor (POS) and circuit. Refer to <u>EC-246, "DTC Logic"</u>.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace. Then GO TO 4.

9. CHECK ECM FUNCTION

- 1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of an incident, but this is rare.)
- 2. Perform initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs. Refer to SEC-9, "ECM: Special Repair Requirement" or SEC-154, "ECM: Special Repair Requirement".

>> GO TO 4.

10. CHECK IGNITION TIMING

- Run engine at idle.
- 2. Check ignition timing with a timing light.

Revision: 2012 August EC-20 2013 CUBE

< BASIC INSPECTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

For procedure, refer to EC-23, "IGNITION TIMING: Special Repair Requirement". For specification, refer to EC-477, "Ignition Timing". Α Is the inspection result normal? YES >> GO TO 19. NO >> GO TO 11. EC 11. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING Stop engine. Perform EC-24, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement". D >> GO TO 12. 12.perform throttle valve closed position learning Perform EC-24. "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement". >> GO TO 13. 13.perform idle air volume learning Perform EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement". Is Idle Air Volume Learning carried out successfully? YES >> GO TO 14. >> Follow the instruction of Idle Air Volume Learning. Then GO TO 4. NO 14. CHECK IDLE SPEED AGAIN Н Start engine and warm it up to normal operating temperature. Check idle speed. For procedure, refer to EC-22, "IDLE SPEED: Special Repair Requirement". For specification, refer to EC-477, "Idle Speed". Is the inspection result normal? YES >> GO TO 15. NO >> GO TO 17. 15. CHECK IGNITION TIMING AGAIN Run engine at idle. 2. Check ignition timing with a timing light. For procedure, refer to EC-23, "IGNITION TIMING: Special Repair Requirement". For specification, refer to EC-477, "Ignition Timing". Is the inspection result normal? YES >> GO TO 19. M NO >> GO TO 16. 16.check timing chain installation Check timing chain installation. Refer to EM-45, "Removal and Installation". Is the inspection result normal? YES >> GO TO 17. NO >> Repair the timing chain installation. Then GO TO 4. 17. DETECT MALFUNCTIONING PART Check the following. Check camshaft position sensor (PHASE) and circuit. Refer to <u>EC-250, "DTC Logic"</u>. Check crankshaft position sensor (POS) and circuit. Refer to EC-246, "DTC Logic". Is the inspection result normal? YES >> GO TO 18. >> Repair or replace. Then GO TO 4. NO 18.check ecm function

< BASIC INSPECTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- 1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of an incident, but this is rare.)
- 2. Perform initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs. Refer to EC-22, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement".

>> GO TO 4.

19. INSPECTION END

If ECM is replaced during this BASIC INSPECTION procedure, perform <u>EC-22</u>, "<u>ADDITIONAL SERVICE</u> WHEN REPLACING CONTROL UNIT: Special Repair Requirement".

>> INSPECTION END

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Description

INFOID:0000000008450538

When replacing ECM, this procedure must be performed.

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement

1.perform initialization of nats system and registration of all nats ignition key ids

Refer to SEC-9, "ECM: Special Repair Requirement" or SEC-154, "ECM: Special Repair Requirement".

>> GO TO 2.

2. PERFORM VIN REGISTRATION

Refer to EC-23, "VIN REGISTRATION: Special Repair Requirement".

>> GO TO 3.

3. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

Refer to EC-24, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".

>> GO TO 4.

4. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 5.

5. PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

>> END

IDLE SPEED

IDLE SPEED: Description

INFOID:0000000008450540

This describes how to check the idle speed. For the actual procedure, follow the instructions in "BASIC INSPECTION".

IDLE SPEED: Special Repair Requirement

INFOID:0000000008450541

1. CHECK IDLE SPEED

[MR18DE (EXCEPT FOR CALIFORNIA)]

< BASIC INSPECTION >

(P)With CONSULT

Check idle speed in "DATA MONITOR" mode with CONSULT.

■With GST

Check idle speed with Service \$01 of GST.

>> INSPECTION END

IGNITION TIMING

IGNITION TIMING: Description

INFOID:0000000008450542

Α

EC

Е

This describes how to check the ignition timing. For the actual procedure, follow the instructions in "BASIC INSPECTION".


IGNITION TIMING: Special Repair Requirement

INFOID:0000000008450543

1. CHECK IGNITION TIMING

1. Attach timing light to No. 1 ignition coil (1) wire as shown.


: Vehicle front

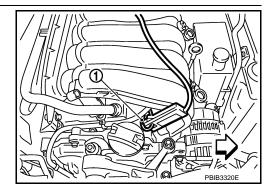

2. Check ignition timing.

1 : Timing indicator

>> INSPECTION END

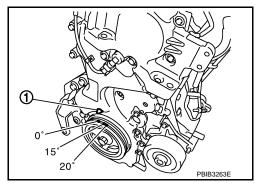

VIN REGISTRATION

VIN REGISTRATION: Description

INFOID:0000000008450544

VIN Registration is an operation to registering VIN in ECM. It must be performed each time ECM is replaced. **NOTE:**

Accurate VIN which is registered in ECM may be required for Inspection & Maintenance (I/M).

VIN REGISTRATION : Special Repair Requirement

INFOID:0000000008450545

1.CHECK VIN

Check the VIN of the vehicle and note it. Refer to GI-23, "Model Variation".

>> GO TO 2.

2. PERFORM VIN REGISTRATION

(P)With CONSULT

Turn ignition switch ON and engine stopped.

Select "VIN REGISTRATION" in "WORK SUPPORT" mode.

Revision: 2012 August EC-23 2013 CUBE

M

[MR18DE (EXCEPT FOR CALIFORNIA)]

< BASIC INSPECTION >

Follow the instruction of CONSULT display.

>> END

ACCELERATOR PEDAL RELEASED POSITION LEARNING

ACCELERATOR PEDAL RELEASED POSITION LEARNING: Description INFOID.00000008450546

Accelerator Pedal Released Position Learning is a function of ECM to learn the fully released position of the accelerator pedal by monitoring the accelerator pedal position sensor output signal. It must be performed each time harness connector of accelerator pedal position sensor or ECM is disconnected.

ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement

1.START

- Make sure that accelerator pedal is fully released.
- Turn ignition switch ON and wait at least 2 seconds.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON and wait at least 2 seconds.
- 5. Turn ignition switch OFF and wait at least 10 seconds.

>> END

THROTTLE VALVE CLOSED POSITION LEARNING

THROTTLE VALVE CLOSED POSITION LEARNING: Description

INFOID:0000000008450548

Throttle Valve Closed Position Learning is a function of ECM to learn the fully closed position of the throttle valve by monitoring the throttle position sensor output signal. It must be performed each time harness connector of electric throttle control actuator or ECM is disconnected or electric throttle control actuator is cleaned.

THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement

INFOID:0000000008450549

1.START

(P)With CONSULT

- 1. Turn ignition switch ON.
- Select "CLSD THL POS LEARN" in "WORK SUPPORT" mode of "ENGINE" using CONSULT.
- 3. Follow the instructions on the CONSULT display.
- 4. Turn ignition switch OFF and wait at least 10 seconds.

Check that throttle valve moves during the above 10 seconds by confirming the operating sound.

⋈Without CONSULT

1. Start the engine.

NOTE:

Engine coolant temperature is 25°C (77°F) or less before engine starts.

2. Warm up the engine.

NOTE:

Raise engine coolant temperature until it reaches 65°C (149°F) or more.

3. Turn ignition switch OFF and wait at least 10 seconds.

Check that throttle valve moves during the above 10 seconds by confirming the operating sound.

>> END

IDLE AIR VOLUME LEARNING

IDLE AIR VOLUME LEARNING: Description

INFOID:000000008450550

Idle Air Volume Learning is a function of ECM to learn the idle air volume that keeps each engine idle speed within the specific range. It must be performed under any of the following conditions:

Each time electric throttle control actuator or ECM is replaced.

< BASIC INSPECTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

• Idle speed or ignition timing is out of specification. IDLE AIR VOLUME LEARNING: Special Repair Requirement

INFOID:0000000008450551

1.PRECONDITIONING

Α

EC

D

Е

K

Р

Make sure that all of the following conditions are satisfied.

Learning will be cancelled if any of the following conditions are missed for even a moment.

- Battery voltage: More than 12.9 V (At idle)
- Engine coolant temperature: 70 100°C (158 212°F)
- Selector lever: P or N (CVT), Neutral (M/T)
- Electric load switch: OFF

(Air conditioner, headlamp, rear window defogger)

On vehicles equipped with daytime light systems, if the parking brake is applied before the engine is started the headlamp will not be illuminated.

- Steering wheel: Neutral (Straight-ahead position)
- Vehicle speed: Stopped
- Transmission: Warmed-up
- CVT models
- With CONSULT: Drive vehicle until "FLUID TEMP SE" in "DATA MONITOR" mode of "TRANSMISSION" svstem indicates less than 0.9 V.
- Without CONSULT: Drive vehicle for 10 minutes.
- M/T models
- Drive vehicle for 10 minutes.

Do you have CONSULT?

YES >> GO TO 2. NO >> GO TO 3.

2.IDLE AIR VOLUME LEARNING

(P)With CONSULT

- Perform Accelerator Pedal Released Position Learning. Refer to EC-24. "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".
- 2. Perform Throttle Valve Closed Position Learning. Refer to EC-24, "THROTTLE VALVE CLOSED POSI-TION LEARNING: Special Repair Requirement".
- 3. Start engine and warm it up to normal operating temperature.
- 4. Select "IDLE AIR VOL LEARN" in "WORK SUPPORT" mode.
- Touch "START" and wait 20 seconds.

Is "CMPLT" displayed on CONSULT screen?

YES >> GO TO 4. NO >> GO TO 5.


3.IDLE AIR VOLUME LEARNING

NOTE:

- It is better to count the time accurately with a clock.
- It is impossible to switch the diagnostic mode when an accelerator pedal position sensor circuit has a malfunction.
- 1. Perform Accelerator Pedal Released Position Learning, Refer to EC-24, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".
- Perform Throttle Valve Closed Position Learning. Refer to EC-24, "THROTTLE VALVE CLOSED POSI-TION LEARNING: Special Repair Requirement".
- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 5. Confirm that accelerator pedal is fully released, turn ignition switch ON and wait 3 seconds.
- 6. Repeat the following procedure quickly five times within 5 seconds.
- Fully depress the accelerator pedal.
- Fully release the accelerator pedal.
- 7. Wait 7 seconds, fully depress the accelerator pedal and keep it for approx. 20 seconds until the MIL stops blinking and turned ON.
- Fully release the accelerator pedal within 3 seconds after the MIL turned ON.
- Start engine and let it idle.

< BASIC INSPECTION >

10. Wait 20 seconds.

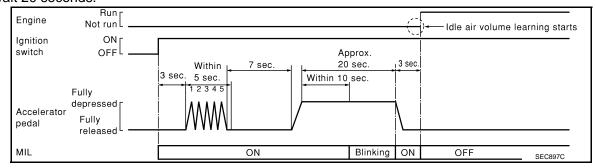

>> GO TO 4.

4. CHECK IDLE SPEED AND IGNITION TIMING

Rev up the engine two or three times and make sure that idle speed and ignition timing are within the specifications.

Item	Specification
Idle speed	CVT: 700 \pm 50 rpm (in P or N position) M/T: 700 \pm 50 rpm (in Neutral position)
Ignition timing	CVT: $13 \pm 5^{\circ}$ BTDC (in P or N position) M/T: $13 \pm 5^{\circ}$ BTDC (in Neutral position)

Is the inspection result normal?

YES >> INSPECTION END

5. DETECT MALFUNCTIONING PART

Check the following

- Check that throttle valve is fully closed.
- Check PCV valve operation.
- Check that downstream of throttle valve is free from air leakage.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace malfunctioning part.

6. DETECT MALFUNCTIONING PART

Engine component parts and their installation condition are questionable. Check and eliminate the cause of the incident.

It is useful to perform "TROUBLE DIAGNOSIS - SPECIFICATION VALUE". Refer to <u>EC-126</u>, "<u>Description</u>". If any of the following conditions occur after the engine has started, eliminate the cause of the incident and perform Idle Air Volume Learning again:

- Engine stalls.
- · Erroneous idle.

>> INSPECTION END

MIXTURE RATIO SELF-LEARNING VALUE CLEAR

MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Description

INFOID:0000000008450552

This describes how to erase the mixture ratio self-learning value. For the actual procedure, follow the instructions in "Diagnosis Procedure".

MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement

INFOID:0000000008450553

1.START

(I) With CONSULT

< BASIC INSPECTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- 1. Start engine and warm it up to normal operating temperature.
- 2. Select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT.
- Clear mixture ratio self-learning value by touching "CLEAR".

With GST

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF.
- 3. Disconnect mass air flow sensor harness connector.
- 4. Restart engine and let it idle for at least 5 seconds.
- 5. Stop engine and reconnect mass air flow sensor harness connector.
- 6. Select Service \$03 with GST. Make sure DTC P0102 is detected.
- 7. Select Service \$04 with GST to erase the DTC P0102.

>> END

EC

Α

C

D

Е

F

G

Н

Κ

L

M

Ν

0

Р

HOW TO SET SRT CODE

[MR18DE (EXCEPT FOR CALIFORNIA)]

HOW TO SET SRT CODE

Description INFOID:000000008450554

OUTLINE

In order to set all SRTs, the self-diagnoses as in the "SRT ITEM" table must have been performed at least once. Each diagnosis may require actual driving for a long period of time under various conditions.

SRT ITEM

The table below shows required self-diagnostic items to set the SRT to "CMPLT".

SRT item*1 (CONSULT indication)	Performance Priority*2	Required self-diagnostic items to set the SRT to "CMPLT"	Corresponding DTC No.
CATALYST	1	Three way catalyst function	P0420
EVAP SYSTEM	1	1 EVAP control system purge flow monitoring	
	1	EVAP control system	P0456
HO2S	1	Air fuel ratio (A/F) sensor 1	P0133
		Heated oxygen sensor 2	P0137
		Heated oxygen sensor 2	P0138
		Heated oxygen sensor 2	P0139
EGR/VVT SYSTEM	2	Intake value timing control function	P0011

^{*1:} Though displayed on the CONSULT screen, "HO2S HTR" is not SRT item.

SRT SERVICE PROCEDURE


^{*2:} If completion of several SRTs is required, perform driving patterns (DTC confirmation procedure), one by one based on the priority for models with CONSULT.

HOW TO SET SRT CODE

< BASIC INSPECTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

If a vehicle has failed the state emissions inspection due to one or more SRT items indicating "INCMP", review the flowchart diagnostic sequence, referring to the following flowchart.

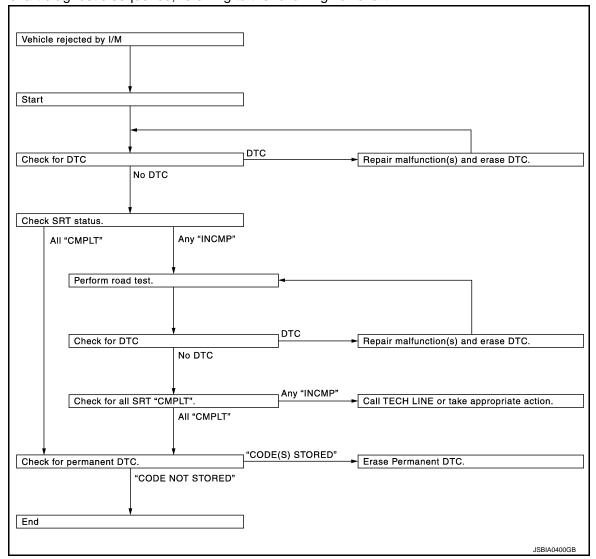

SRT Set Driving Pattern

CAUTION:

EC

Α

C

D

Е

F

G

Н

J

Κ

INFOID:0000000008450555

N


M

0

Р

JPBIA5320GB

Always drive the vehicle in safe manner according to traffic conditions and obey all traffic laws.

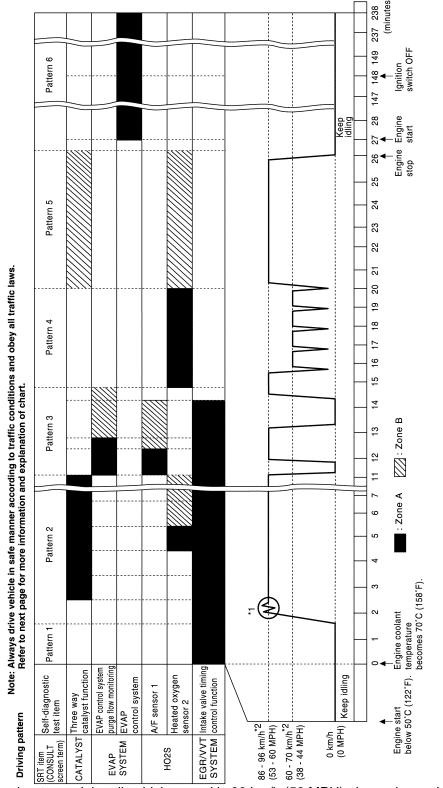

^{*1:} Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH), then release the accelerator pedal and keep it released for more than 10 seconds. Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH) again.

^{*2:} Checking the vehicle speed with GST is advised.

[•] The time required for each diagnosis varies with road surface conditions, weather, altitude, individual driving habits, etc.

^{• &}quot;Zone A" is the fastest time where required for the diagnosis under normal conditions*. If the diagnosis is not completed within "Zone A", the diagnosis can still be performed within "Zone B".

HOW TO SET SRT CODE

< BASIC INSPECTION >	[MIK TODE (EXCEPT FOR CALIFORNIA)]
*: Normal conditions - Sea level	
- Sea level - Flat road	
- Ambient air temperature: 20 – 30°C (68 – 86°F)	_
NOTE: Diagnosis is performed as quickly as possible under normal	conditions However under other conditions
diagnosis may also be performed. [For example: ambient air tel	
Work Procedure	INFOID:000000008450556
1.CHECK DTC	
Check DTC.	
Is any DTC detected?	450 "DTO
YES >> Repair malfunction(s) and erase DTC. Refer to <u>EC-</u> NO >> GO TO 2.	-450, "DTC Index".
2.CHECK SRT STATUS	
®With CONSULT	
Select "SRT STATUS" in "DTC & SRT CONFIRMATION" mode	with CONSULT.
Without CONSULT Perform "SRT status" mode with EC-114, "On Board Diagnosis	Function".
With GST	
Select Service \$01 with GST.	
Is SRT code(s) set? YES >> GO TO 11.	
NO-1 >> With CONSULT: GO TO 3.	
NO-2 >> Without CONSULT: GO TO 4.	
3.DTC CONFIRMATION PROCEDURE	
1. Select "SRT WORK SUPPORT" in "DTC & SRT CONFIRM	
2. For SRT(s) that is not set, perform the corresponding "DTC the "Performance Priority" in the "SRT ITEM" table. Refer to	
3. Check DTC.	
Is any DTC detected?	
YES >> Repair malfunction(s) and erase DTC. Refer to ECNO >> GO TO 10.	-450, "DTC Index".
4.PERFORM ROAD TEST	
• Check the "Performance Priority" in the "SRT ITEM" table. Re	
 Perform the most efficient SRT set driving pattern to set the S <u>Pattern</u>". 	RT properly. Refer to <u>EC-29</u> , "SRT Set Driving
In order to set all SRTs, the SRT set driving pattern must be p	erformed at least once.
>> GO TO 5.	
5.PATTERN 1	
1. Check the vehicle condition;	
 Engine coolant temperature is -10 to 35°C (14 to 95°F). Fuel tank temperature is more than 0°C (32°F). 	
2. Start the engine.	
3. Keep engine idling until the engine coolant temperature is NOTE :	greater than 70°C (158°F)

ECM terminal voltage is follows;

- Engine coolant temperature
- -10 to 35°C (14 to 95°F): 3.0 4.3 V
- 70°(158°F): Less than 4.1 V
- Fuel tank temperature: Less than 1.4 V

Refer to EC-432, "Reference Value".

>> GO TO 6.

6. PATTERN 2

- 1. Drive the vehicle. And depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH), then release the accelerator pedal and keep it released for more than 10 seconds.
- 2. Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH) again

NOTE:


- Checking the vehicle speed with GST is advised.
- When steady-state driving is performed again even after it is interrupted, each diagnosis can be conducted.
 In this case, the time required for diagnosis may be extended.

>> GO TO 7.

7. PATTERN 3

- Operate vehicle following the driving pattern shown in the figure.
- Release the accelerator pedal during deceleration of vehicle speed from 90 km/h (56 MPH) to 0 km/h (0 MPH).


>> GO TO 8.

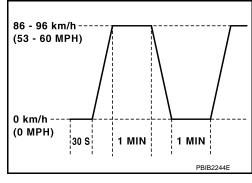

8. PATTERN 4

- Operate vehicle following the driving pattern shown in the figure.
- Drive the vehicle in a proper gear at 60 km/h (38 MPH) and maintain the speed.
- Release the accelerator pedal fully at least 5 seconds.
- Repeat the above two steps at least 5 times.

>> GO TO 9.

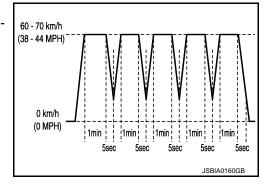

9. PATTERN 5

- The accelerator pedal must be held very steady during steady-state driving.
- If the accelerator pedal is moved, the test must be conducted again.

>> GO TO 10.

10. CHECK SRT STATUS

With CONSULT

Select "SRT STATUS" in "DTC & SRT CONFIRMATION" mode with CONSULT.

Perform "SRT status" mode with EC-114. "On Board Diagnosis Function".

Select Service \$01 with GST.

Is SRT(s) set?

YES >> GO TO 11.

NO >> Call TECH LINE or take appropriate action.

11. CHECK PERMANENT DTC

HOW TO SET SRT CODE

< BASIC INSPECTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

NOTE:

Permanent DTC cannot be checked with a tool other than CONSULT or GST.

(P)With CONSULT

Select "SRT STATUS" in "DTC & SRT CONFIRMATION" mode with CONSULT.

With GST

Select Service \$0A with GST.

Is permanent DTC(s) detected?

YES >> Proceed to EC-34, "Description".

NO >> END

EC

Α

D

Е

F

G

Н

J

K

L

M

Ν

0

Р


HOW TO ERASE PERMANENT DTC

Description INFOID:000000008450557

OUTLINE

When a DTC is stored in ECM

When a DTC is stored in ECM and MIL is ON, a permanent DTC is erased with MIL shutoff if the same malfunction is not detected after performing the driving pattern for MIL shutoff three times in a raw.

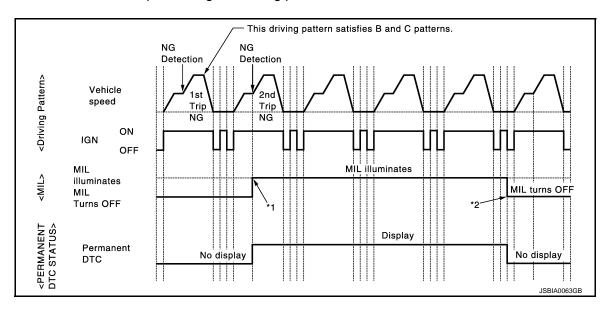

- *1: When the same malfunction is detected in two consecutive trips, MIL will illuminate.
- *2: MIL will turn off after vehicle is driven 3 times (driving pattern B) without any malfunctions.

When a DTC is not stored in ECM

The erasing method depends on a permanent DTC stored in ECM. Refer to the following table.

NOTE:

If the applicable permanent DTC incudes multiple groups, perform the procedure of Group B first. If the permanent DTC is not erased, perform the procedure of Group A.

×: Applicable —: Not applicable

Group*	Perform "DTC CONFIRMATION PROCE- DURE" for applicable DTCs.	Driving pattern		Reference
		В	D	Reference
А	×	_	_	EC-35
В	_	×	×	EC-37

^{*:} For group, refer to EC-450, "DTC Index".

PERMANENT DTC ITEM

For permanent DTC items, MIL turns ON. Refer to EC-450, "DTC Index".

Α

EC

D

Е

Н

M


Ν

0

Р

INFOID:0000000008450558

PERMANENT DTC SERVICE PROCEDURE

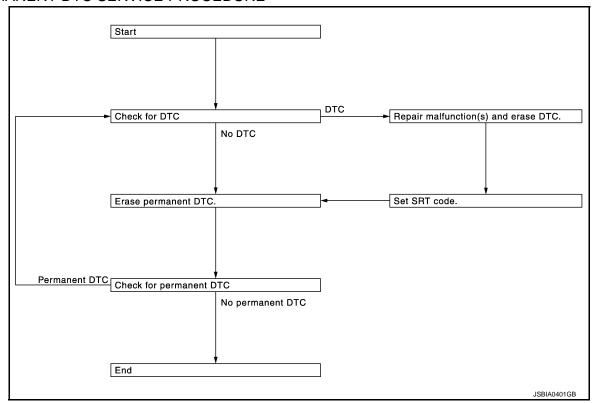

Work Procedure (Group A)

Repair applicable parts indicated by DTC. DTC CONFIRMATION PROCEDURE for applicable NG NG DTC is completed. Detection Detection <Driving Pattern> Vehicle speed 1st 2nd Trip Trip NG NG ON IGN OFF MIL MIL illuminates illuminates <MIL> MIL turns OFF MIL Turns OFF Display <DTC> DTC No display No display <PERMANENT DTC STATUS> Display Permanent No display No display DTC JSBIA0064GB *1: When the same malfunction is detected in two consecutive trips, MIL will illuminate.

1. CHECK DTC

Check DTC.

Is any DTC detected?

YES-1 >> (a) With CONSULT: Repair malfunction(s) and erase DTC. Refer to EC-117, "CONSULT Function".

YES-2 >> (a) Without CONSULT: Repair malfunction(s) and erase DTC. Refer to EC-114, "On Board Diagnosis Function".

NO >> GO TO 2.

2.CHECK PERMANENT DTC

(P)With CONSULT

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- 5. Select "PERMANENT DTC STATUS" mode with CONSULT.

With GST

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- 5. Select Service \$0A with GST.

Is any permanent DTC detected?

YES >> GO TO 3. NO >> END

3.perform dtc confirmation procedure

Perform "DTC CONFIRMATION PROCEDURE" for DTCs which are the same as permanent DTCs stored in ECM. Refer to EC-450, "DTC Index".

>> GO TO 4.

4. CHECK PERMANENT DTC

(I) With CONSULT

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 5. Select "PERMANENT DTC STATUS" mode with CONSULT.


With GST

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Select Service \$0A with GST.

Is any permanent DTC detected?

YES >> GO TO 1. NO >> END Work Procedure (Group B)

INFOID:0000000008450559

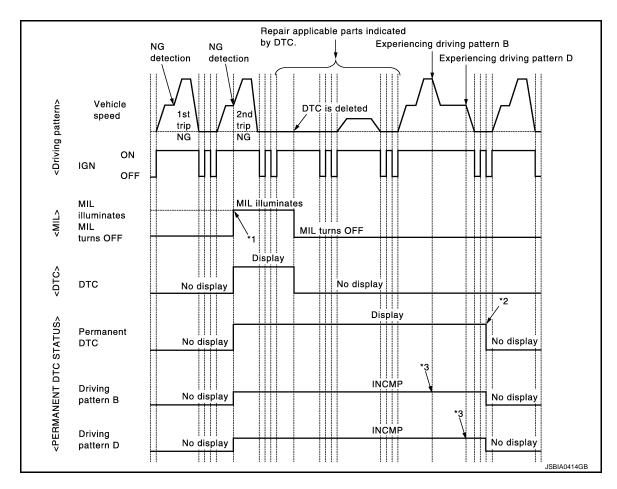

- *1: When the same malfunction is detected in two consecutive trips, MIL will illuminate.
- *2: After experiencing driving pattern B and D, permanent DTC is erased.
- Indication does not change unless the ignition switch is turned from ON to OFF twice even after experiencing driving pattern B or D.

NOTE:

Drive the vehicle according to only driving patterns indicating "INCMP" in driving patterns B and D on the "PERMANENT DTC STATUS" screen.

1.CHECK DTC

Check DTC.

Is any DTC detected?

YES-1 >> (a) With CONSULT: Repair malfunction(s) and erase DTC. Refer to EC-117, "CONSULT Function".

YES-2 >> Without CONSULT: Repair malfunction(s) and erase DTC. Refer to <u>EC-114. "On Board Diagnosis Function"</u>.

NO >> GO TO 2.

2. CHECK PERMANENT DTC

(P)With CONSULT

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Select "PERMANENT DTC STATUS" mode with CONSULT.

With GST

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.

EC

Α

C

D

Е

F

G

Н

|

J

K

L

M

Ν

C

HOW TO ERASE PERMANENT DTC

< BASIC INSPECTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- Select Service \$0A with GST.

Is any permanent DTC detected?

YES >> GO TO 3. NO >> END

3. DRIVE DRIVING PATTERN B

CAUTION:

- · Always drive at a safe speed.
- Never erase self-diagnosis results.
- If self-diagnosis results are erased during the trip of driving pattern B or D, the counter of driving pattern B and D is reset.

(P)With CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- Use "PERMANENT DTC WORK SUPPORT" mode with CONSULT to drive the vehicle according to driving pattern B. Refer to <u>EC-117</u>, "<u>CONSULT Function</u>", <u>EC-111</u>, "<u>DIAGNOSIS DESCRIPTION</u>: <u>Driving Pattern</u>".

With GST

- 1. Start engine and warm it up to normal operating temperature.
- Drive the vehicle according to driving pattern B. Refer to <u>EC-111, "DIAGNOSIS DESCRIPTION: Driving Pattern"</u>.

>> GO TO 4.

4. CHECK PERMANENT DTC

(P)With CONSULT

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Select "PERMANENT DTC STATUS" mode with CONSULT.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- Select Service \$0A with GST.

Is any permanent DTC detected?

YES >> GO TO 5. NO >> END

5.DRIVE DRIVING PATTERN D

CAUTION:

- Always drive at a safe speed.
- Never erase self-diagnosis results.
- If self-diagnosis results are erased during the trip of driving pattern B or D, the counter of driving pattern B and D is reset.
- Drive the vehicle according to driving pattern D. Refer to <u>EC-111, "DIAGNOSIS DESCRIPTION: Driving Pattern"</u>.

>> GO TO 6.

6. CHECK PERMANENT DTC

(I) With CONSULT

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

HOW TO ERASE PERMANENT DTC

< BASIC INSPECTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- 4. Turn ignition switch ON.
- 5. Select "PERMANENT DTC STATUS" mode with CONSULT.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- Select Service \$0A with GST.

Is any permanent DTC detected?

YES >> GO TO 1.

NO >> END

EC

Α

D

Е

G

F

Н

J

K

L

M


Ν

0

SYSTEM DESCRIPTION

ENGINE CONTROL SYSTEM

System Diagram

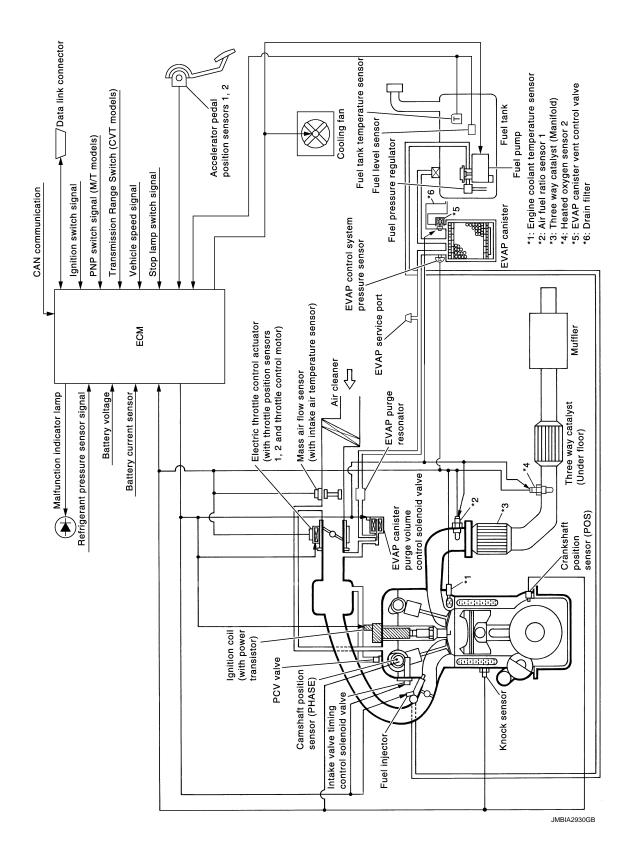

System Description

INFOID:0000000008450561

Α

EC


D

Е

ECM performs various controls such as fuel injection control and ignition timing control.

Component Parts Location

INFOID:0000000008450562

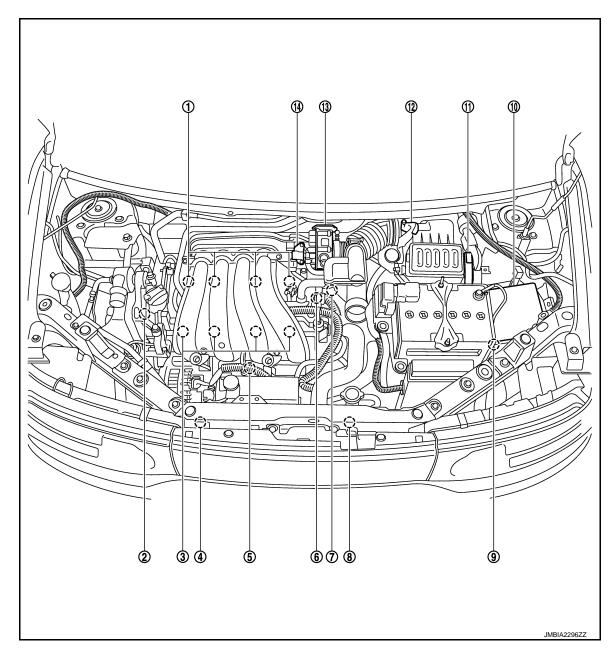

- Ignition coil (with power transistor) and spark plug
- 4. Refrigerant pressure sensor
- 7. Engine coolant temperature sensor
- 10. IPDM E/R
- 13. Electric throttle control actuator (with built in throttle position sensor and throttle control motor)
- Intake valve timing control solenoid 3. valve
- 5. Knock sensor
- 8. Cooling fan motor
- 11. ECM
- 14. EVAP canister purge volume control solenoid valve
- Fuel injector
- 6. Camshaft position sensor (PHASE)
- 9. Battery current sensor
- Mass air flow sensor (with intake air temperature sensor)

J

Н


K

L

M

Ν

 \cap

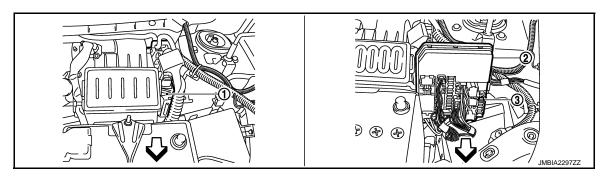


1. ECM


2. IPDM E/R

B. Fuel pump fuse (15 A)




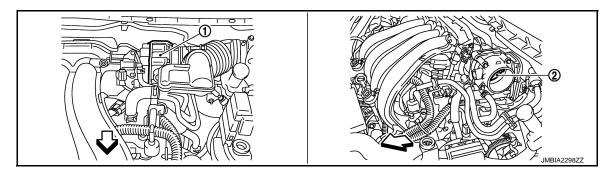

- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- 2. Throttle valve

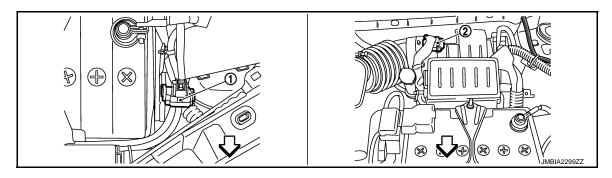

- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

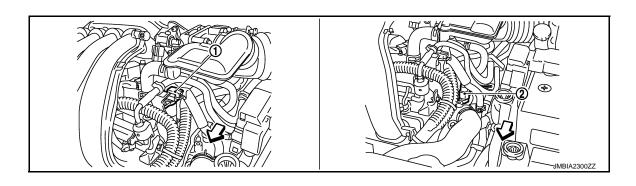

Α

EC

D

Е

F

Н

K


M

Ν

0

Р


- Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor

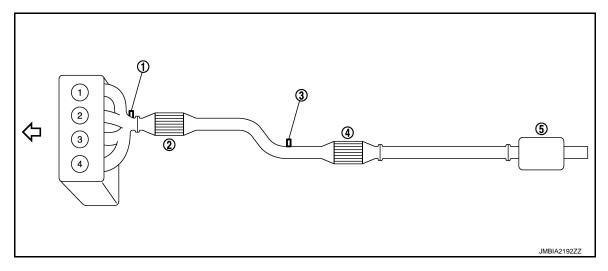

- Air fuel ratio (A/F) sensor 1
- Three way catalyst (under floor)
- Vehicle front


- 2. Three way catalyst (Manifold)
- Muffler

3. Heated oxygen sensor 2

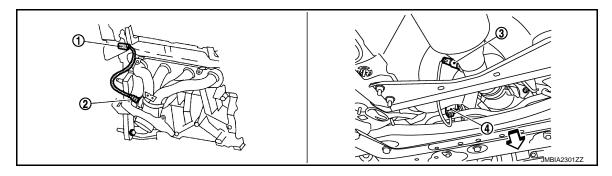

- connector
- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1
- 3. Heated oxygen sensor 2


- Heated oxygen sensor 2 harness connector

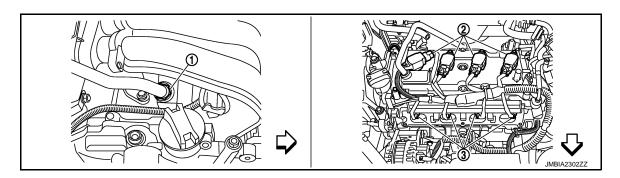


PCV valve

- Ignition coil (with power transistor) and spark plug
- Fuel injector


⟨
→ Vehicle front

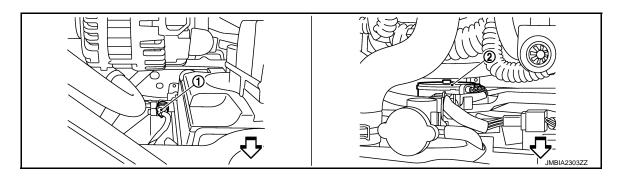


- 1. Refrigerant pressure sensor
- 2. Cooling fan motor

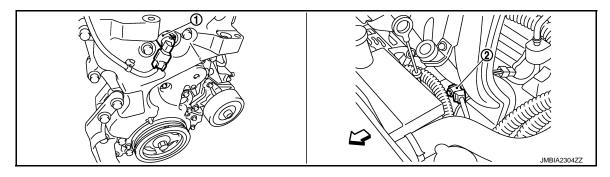

- Intake valve timing control solenoid 2. Knock sensor valve

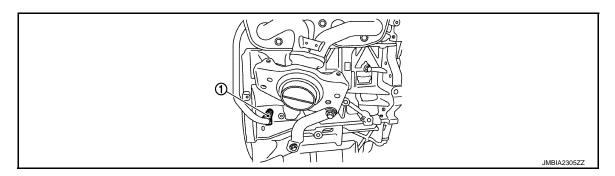

1. Crankshaft position sensor (POS)

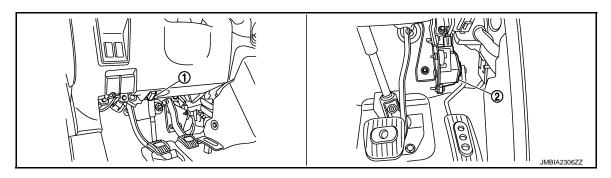

- 1. Data link connector
- 2. Accelerator pedal position sensor

Α


EC

D


Е

Н

Ν

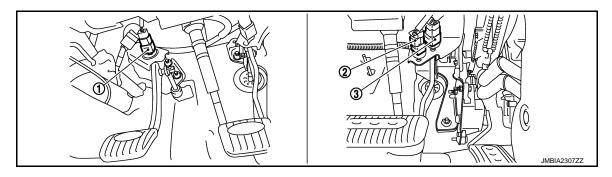


- ASCD clutch switch
- 2. ASCD brake switch
- 3. Stop lamp switch

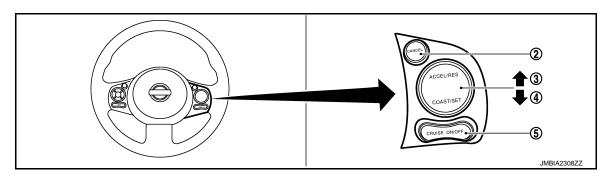


- ASCD steering switch 1.
- CANCEL switch
- RESUME/ACCELERATE switch

- SET/COST switch
- MAIN switch

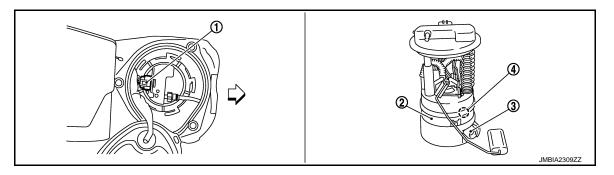

- harness connector
- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator
- Fuel tank temperature sensor
- Vehicle front

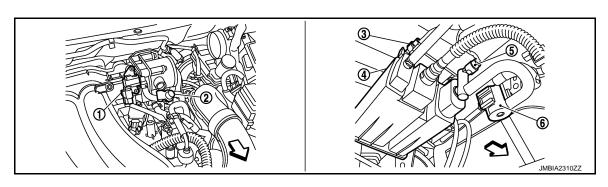

- EVAP canister purge volume control 2. EVAP service port solenoid valve
- EVAP control system pressure sen-

ENGINE CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

4. EVAP canisterVehicle front

5. EVAP canister vent control valve


6. Drain filter

Component Description

INFOID:0000000008450563

Component	Reference	
A/F sensor 1	EC-185, "Description"	
A/F sensor 1 heater	EC-143, "Description"	
Accelerator pedal position sensor	EC-388, "Description"	
ASCD brake switch	EC-359, "Description"	
ASCD steering switch	EC-356, "Description"	
ASCD vehicle speed sensor	EC-366, "Description"	
Battery current sensor	EC-340, "Description"	
Camshaft position sensor (PHASE)	EC-250, "Description"	
Crankshaft position sensor (POS)	EC-246, "Description"	
Cooling fan motor	EC-79, "System Description"	
Electric throttle control actuator	EC-386, "Description"	
Engine coolant temperature sensor	EC-168, "Description"	
EVAP canister purge volume control solenoid valve	EC-265, "Description"	
EVAP canister vent control valve	EC-273, "Description"	
EVAP control system pressure sensor	EC-281, "Description"	
Fuel injector	EC-411, "Description"	
Fuel level sensor	EC-302, "Description"	
Fuel pump	EC-414, "Description"	
Fuel tank temperature sensor	EC-228, "Description"	
Heated oxygen sensor 2	EC-195, "Description"	
Heated oxygen sensor 2 heater	EC-146, "Description"	
Ignition signal	EC-417, "Description"	
Intake air temperature sensor	EC-166, "Description"	
Intake valve timing control solenoid valve	EC-97, "System Description"	
Knock sensor	EC-244, "Description"	
Mass air flow sensor	EC-152, "Description"	
Park/neutral position switch (M/T models)	FO 202 Decembring	
Transmission range switch (CVT models)	EC-322, "Description"	
PCV valve	EC-429, "Description"	
Refrigerant pressure sensor	EC-430, "Description"	
Stop lamp switch	EC-370, "Description"	
Throttle control motor	EC-384, "Description"	
Throttle control motor relay	EC-377, "Description"	
Throttle position sensor	EC-174, "Description"	

System Diagram

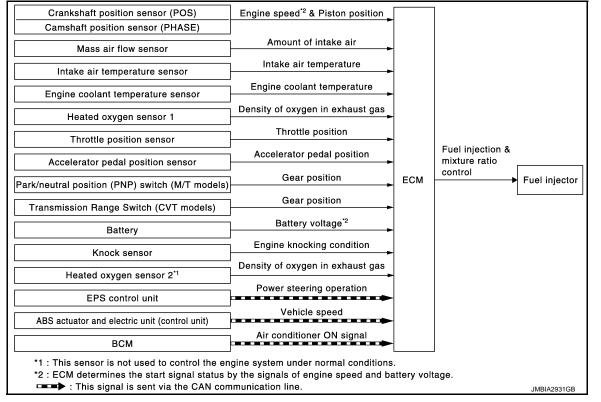

System Description

INPUT/OUTPUT SIGNAL CHART

Sensor Input signal to ECM ECM function Actuator Crankshaft position sensor (POS) Engine speed*3 Piston position Camshaft position sensor (PHASE) Mass air flow sensor Amount of intake air Intake air temperature sensor Intake air temperature Engine coolant temperature sensor Engine coolant temperature Air fuel ratio (A/F) sensor 1 Density of oxygen in exhaust gas Throttle position sensor Throttle position Fuel injection & Accelerator pedal position sensor Accelerator pedal position mixture ratio Fuel injector Park/neutral position (PNP) switch (M/T models) Gear position control Transmission range switch (CVT models) Gear position Battery Battery voltage*3 Knock sensor Engine knocking condition Density of oxygen in exhaust gas Heated oxygen sensor 2*1 EPS control unit Power steering operation*2 ABS actuator and electric unit (control unit) Vehicle speed*2 **BCM** Air conditioner ON signal*2

Revision: 2012 August EC-47 2013 CUBE

INFOID:0000000008450565

Α

EC

^{*1:} This sensor is not used to control the engine system under normal conditions.

^{*2:} This signal is sent to the ECM via the CAN communication line.

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

*3: ECM determines the start signal status by the signals of engine speed and battery voltage.

SYSTEM DESCRIPTION

The amount of fuel injected from the fuel injector is determined by the ECM. The ECM controls the length of time the valve remains open (injection pulse duration). The amount of fuel injected is a program value in the ECM memory. The program value is preset by engine operating conditions. These conditions are determined by input signals (for engine speed and intake air) from the crankshaft position sensor (POS), camshaft position sensor (PHASE) and the mass air flow sensor.

VARIOUS FUEL INJECTION INCREASE/DECREASE COMPENSATION

In addition, the amount of fuel injected is compensated to improve engine performance under various operating conditions as listed below.


<Fuel increase>

- · During warm-up
- When starting the engine
- During acceleration
- Hot-engine operation
- When selector lever is changed from N to D (CVT models)
- · High-load, high-speed operation

<Fuel decrease>

- During deceleration
- · During high engine speed operation

MIXTURE RATIO FEEDBACK CONTROL (CLOSED LOOP CONTROL)

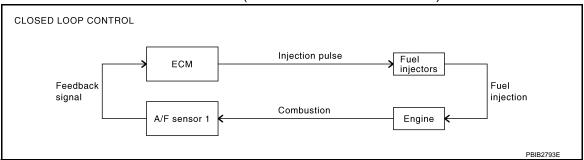

The mixture ratio feedback system provides the best air-fuel mixture ratio for driveability and emission control. The three way catalyst (manifold) can better reduce CO, HC and NOx emissions. This system uses A/F sensor 1 in the exhaust manifold to monitor whether the engine operation is rich or lean. The ECM adjusts the injection pulse width according to the sensor voltage signal. For more information about A/F sensor 1, refer to EC-185, "Description". This maintains the mixture ratio within the range of stoichiometric (ideal air-fuel mixture).

This stage is referred to as the closed loop control condition.

Heated oxygen sensor 2 is located downstream of the three way catalyst (manifold). Even if the switching characteristics of A/F sensor 1 shift, the air-fuel ratio is controlled to stoichiometric by the signal from heated oxygen sensor 2.

Open Loop Control

The open loop system condition refers to when the ECM detects any of the following conditions. Feedback control stops in order to maintain stabilized fuel combustion.

- Deceleration and acceleration
- High-load, high-speed operation
- Malfunction of A/F sensor 1 or its circuit
- Insufficient activation of A/F sensor 1 at low engine coolant temperature
- High engine coolant temperature
- During warm-up
- After shifting from N to D (CVT models)
- When starting the engine

MIXTURE RATIO SELF-LEARNING CONTROL

The mixture ratio feedback control system monitors the mixture ratio signal transmitted from A/F sensor 1. This feedback signal is then sent to the ECM. The ECM controls the basic mixture ratio as close to the theoretical mixture ratio as possible. However, the basic mixture ratio is not necessarily controlled as originally

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

designed. Both manufacturing differences (i.e., mass air flow sensor hot wire) and characteristic changes during operation (i.e., fuel injector clogging) directly affect mixture ratio.


Accordingly, the difference between the basic and theoretical mixture ratios is monitored in this system. This is then computed in terms of "injection pulse duration" to automatically compensate for the difference between the two ratios.

"Fuel trim" refers to the feedback compensation value compared against the basic injection duration. Fuel trim includes short-term fuel trim and long-term fuel trim.

"Short-term fuel trim" is the short-term fuel compensation used to maintain the mixture ratio at its theoretical value. The signal from A/F sensor 1 indicates whether the mixture ratio is RICH or LEAN compared to the theoretical value. The signal then triggers a reduction in fuel volume if the mixture ratio is rich, and an increase in fuel volume if it is lean.

"Long-term fuel trim" is overall fuel compensation carried out over time to compensate for continual deviation of the short-term fuel trim from the central value. Continual deviation will occur due to individual engine differences, wear over time and changes in the usage environment.

FUEL INJECTION TIMING

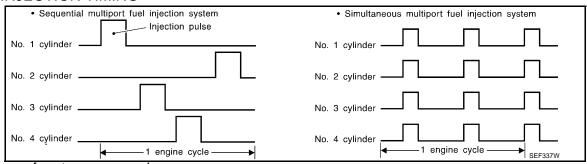

Two types of systems are used.

- Sequential Multiport Fuel Injection System
 - Fuel is injected into each cylinder during each engine cycle according to the ignition order. This system is used when the engine is running.
- Simultaneous Multiport Fuel Injection System
 - Fuel is injected simultaneously into all four cylinders twice each engine cycle. In other words, pulse signals of the same width are simultaneously transmitted from the ECM.
 - The four injectors will then receive the signals two times for each engine cycle.
 - This system is used when the engine is being started and/or if the fail-safe system (CPU) is operating.

FUEL SHUT-OFF

Fuel to each cylinder is cut off during deceleration, operation of the engine at excessively high speeds or operation of the vehicle at excessively high speeds.

EC

Α

D

Е

F

G

Н

.1

Κ


L

Ν


0

Component Parts Location

INFOID:0000000008450566

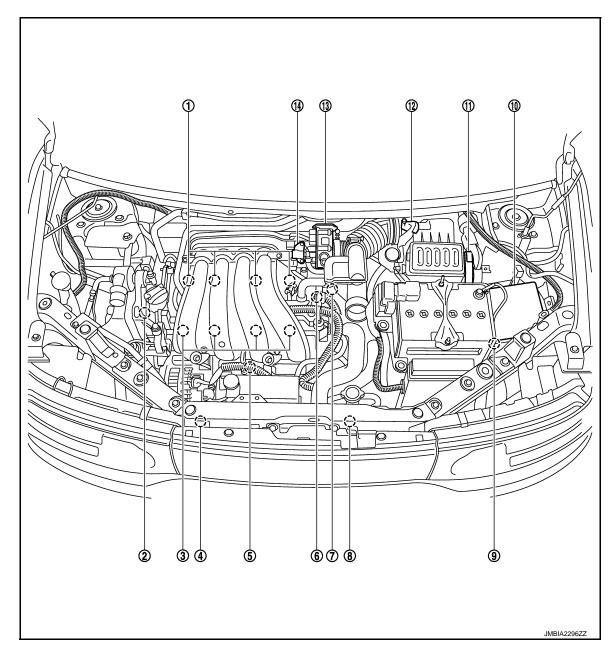


- Ignition coil (with power transistor) and spark plug
- 4. Refrigerant pressure sensor
- 7. Engine coolant temperature sensor
- 10. IPDM E/R
- 13. Electric throttle control actuator (with built in throttle position sensor and throttle control motor)
- Intake valve timing control solenoid 3. valve
- 5. Knock sensor
- 8. Cooling fan motor
- 11. ECM
- 14. EVAP canister purge volume control solenoid valve
- Fuel injector
- 6. Camshaft position sensor (PHASE)
- 9. Battery current sensor
- 12. Mass air flow sensor (with intake air temperature sensor)

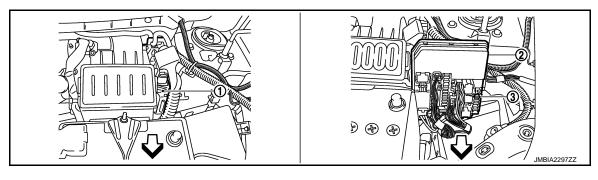

1. ECM


2. IPDM E/R

3. Fuel pump fuse (15 A)

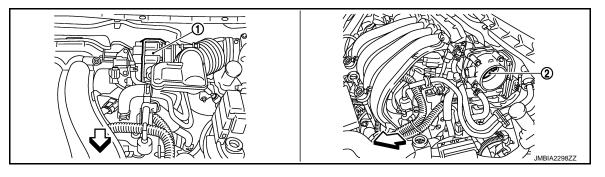


- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- . Throttle valve

∀ Vehicle front

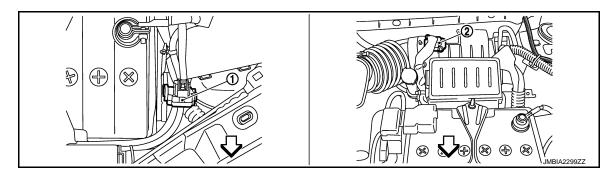

- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

⟨
→ Vehicle front

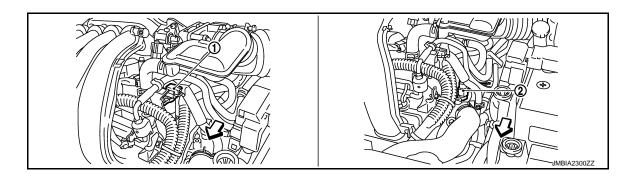

Revision: 2012 August EC-51 2013 CUBE

- -

Α

EC

0

D

Е

F

G

Н

. I

K


L

M

Ν

0


- 1. Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor
- ⟨□ Vehicle front

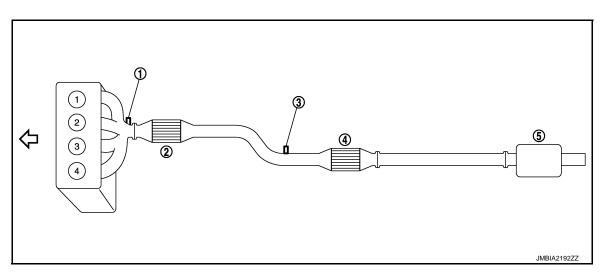

- 1. Air fuel ratio (A/F) sensor 1
- 4. Three way catalyst (under floor)


- 2. Three way catalyst (Manifold)
- 5. Muffler

3. Heated oxygen sensor 2

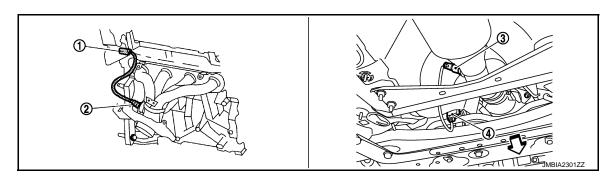

- Air fuel ratio (A/F) sensor 1 harness connector
- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1
- 3. Heated oxygen sensor 2


- Heated oxygen sensor 2 harness connector

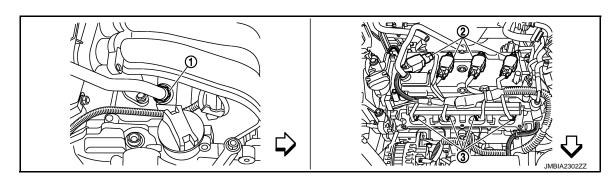

1. PCV valve


- Ignition coil (with power transistor) and spark plug
- 3. Fuel injector

Vehicle front

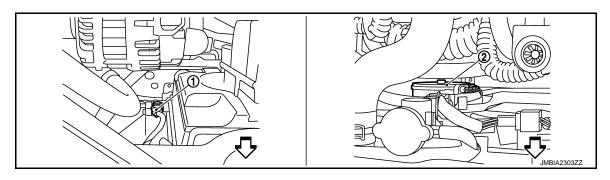


- Refrigerant pressure sensor
- 2. Cooling fan motor


Vehicle front

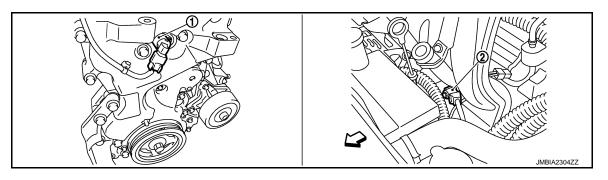

- Intake valve timing control solenoid 2. Knock sensor

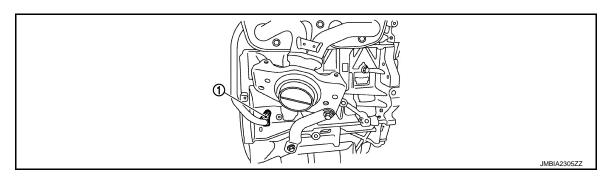

Crankshaft position sensor (POS)

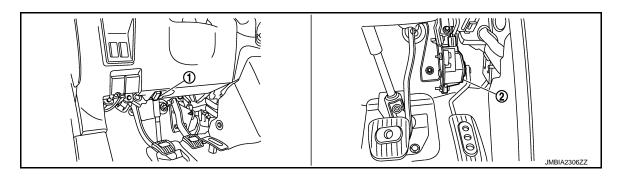

- Data link connector
- Accelerator pedal position sensor

EC-53 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

F


G

Н


K

Ν

0

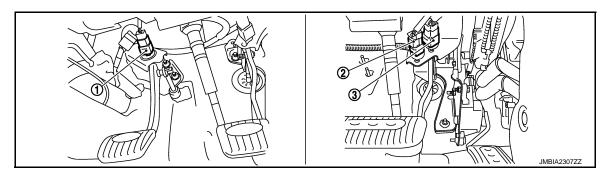


- ASCD clutch switch
- 2. ASCD brake switch
- Stop lamp switch

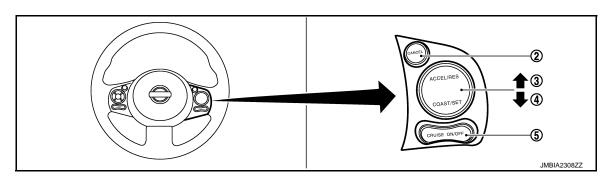


- ASCD steering switch 1.
- SET/COST switch
- CANCEL switch
- MAIN switch

RESUME/ACCELERATE switch

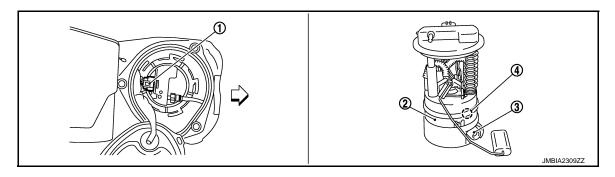

- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator harness connector

- Fuel tank temperature sensor

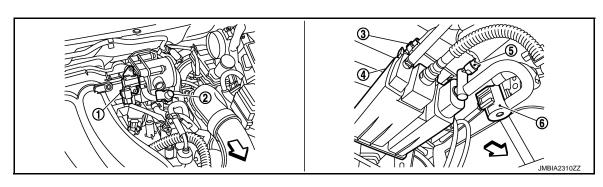

- EVAP canister purge volume control 2. solenoid valve
- **EVAP** service port
- EVAP control system pressure sen-

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

4. EVAP canister

5. EVAP canister vent control valve

6. Drain filter

Component Description

INFOID:0000000008450567

Α

EC

C

D

Е

F

G

Н

Component	Reference
A/F sensor 1	EC-185, "Description"
Accelerator pedal position sensor	EC-388, "Description"
Camshaft position sensor (PHASE)	EC-250, "Description"
Crankshaft position sensor (POS)	EC-246, "Description"
Engine coolant temperature sensor	EC-168, "Description"
Fuel injector	EC-411, "Description"
Heated oxygen sensor 2	EC-195, "Description"
Intake air temperature sensor	EC-166, "Description"
Knock sensor	EC-244, "Description"
Mass air flow sensor	EC-152, "Description"
Park/neutral position switch (M/T models)	EC 222 "Description"
Transmission range switch (CVT models)	EC-322, "Description"
Throttle position sensor	EC-174, "Description"

Κ

L

 \mathbb{N}


Ν

0

ELECTRIC IGNITION SYSTEM

System Diagram

INFOID:0000000008450568

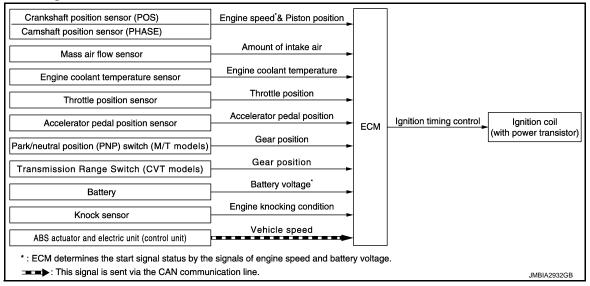

System Description

INFOID:0000000008450569

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed*2		
Camshaft position sensor (PHASE)	Piston position		
Mass air flow sensor	Amount of intake air		Ignition coil (with power transistor)
Engine coolant temperature sensor	Engine coolant temperature		
Throttle position sensor	Throttle position		
Accelerator pedal position sensor	Accelerator pedal position	Ignition timing	
Battery	Battery voltage*2	control	
Knock sensor	Engine knocking		
Park/neutral position (PNP) switch (M/T models)	Gear position		
Transmission range switch (CVT models)	Gear position		
ABS actuator and electric unit (control unit)	Vehicle speed*1		

^{*1:} This signal is sent to the ECM via the CAN communication line.

SYSTEM DESCRIPTION

Ignition order: 1 - 3 - 4 - 2

The ignition timing is controlled by the ECM to maintain the best air-fuel ratio for every running condition of the engine. The ignition timing data is stored in the ECM.

The ECM receives information such as the injection pulse width and camshaft position sensor (PHASE) signal. Computing this information, ignition signals are transmitted to the power transistor.

During the following conditions, the ignition timing is revised by the ECM according to the other data stored in the ECM.


- At starting
- During warm-up
- At idle
- At low battery voltage
- During acceleration

^{*2:} ECM determines the start signal status by the signals of engine speed and battery voltage.

The knock sensor retard system is designed only for emergencies. The basic ignition timing is programmed within the anti-knocking zone, if recommended fuel is used under dry conditions. The retard system does not operate under normal driving conditions. If engine knocking occurs, the knock sensor monitors the condition. The signal is transmitted to the ECM. The ECM retards the ignition timing to eliminate the knocking condition.

Component Parts Location

INFOID:0000000008450570

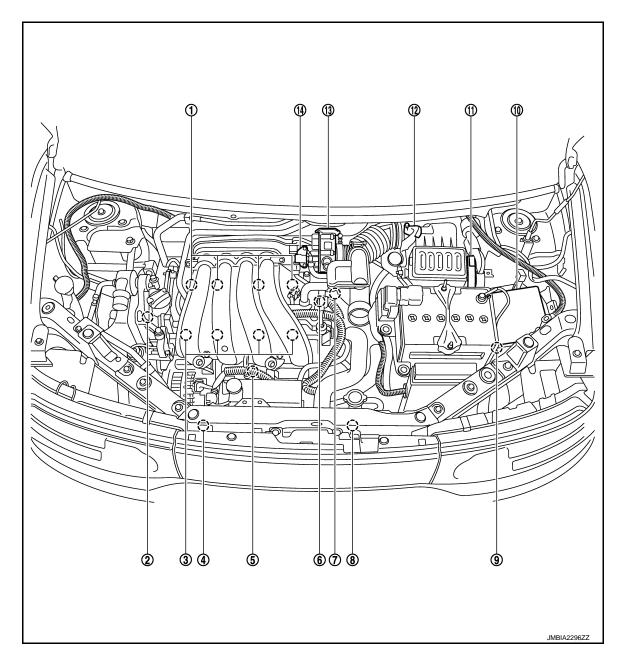

- Ignition coil (with power transistor) and spark plug
- 4. Refrigerant pressure sensor
- 7. Engine coolant temperature sensor
- 10. IPDM E/R
- Electric throttle control actuator (with built in throttle position sensor and throttle control motor)
- Intake valve timing control solenoid valve
- 5. Knock sensor
- 8. Cooling fan motor
- 11. ECM
- EVAP canister purge volume control solenoid valve
- Fuel injector
- 6. Camshaft position sensor (PHASE)
- 9. Battery current sensor
- Mass air flow sensor (with intake air temperature sensor)

EC

С

D

Н


.

K

L

M

Ν

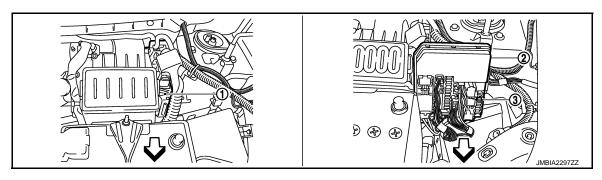


1. ECM


2. IPDM E/R

3. Fuel pump fuse (15 A)




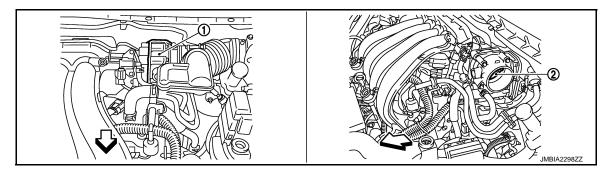

- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- 2. Throttle valve

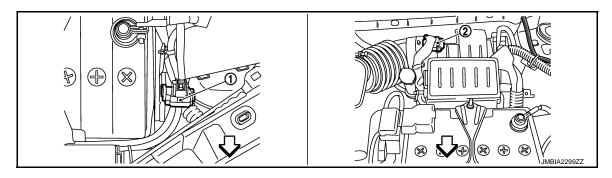

- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

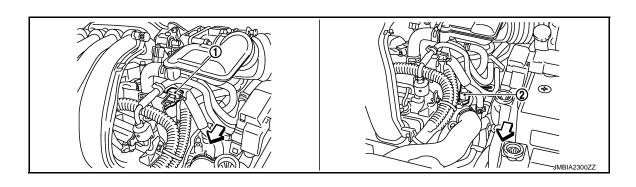

Α

EC

C

D

Е

F

Н

K


M

Ν

0

Р


- Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor

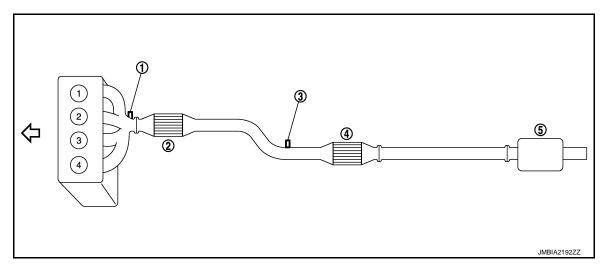

- Air fuel ratio (A/F) sensor 1
- Three way catalyst (under floor)
- Vehicle front


- 2. Three way catalyst (Manifold)
- Muffler

3. Heated oxygen sensor 2

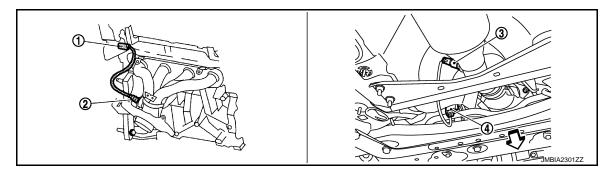

- connector
- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1
- 3. Heated oxygen sensor 2


- Heated oxygen sensor 2 harness connector

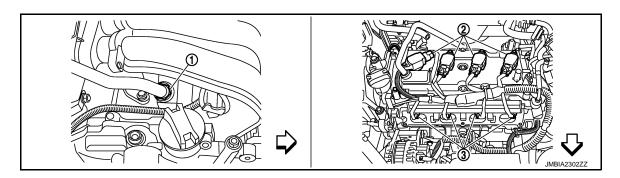


PCV valve

- Ignition coil (with power transistor) and spark plug
- Fuel injector


⟨
→ Vehicle front

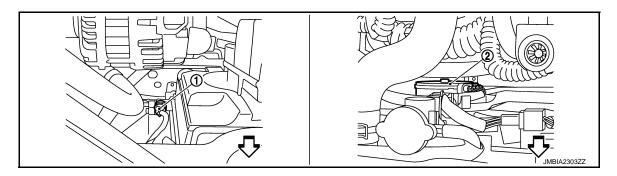


- 1. Refrigerant pressure sensor
- 2. Cooling fan motor

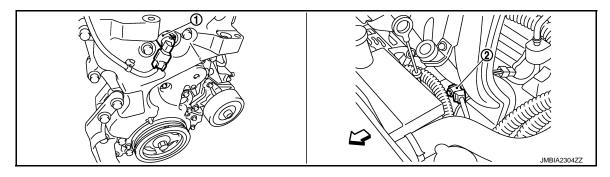

- Intake valve timing control solenoid 2. Knock sensor valve

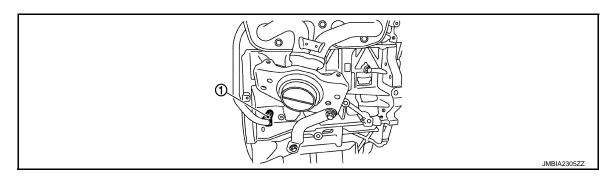

1. Crankshaft position sensor (POS)

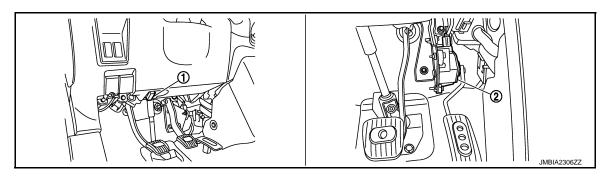

- 1. Data link connector
- 2. Accelerator pedal position sensor

Α

EC

D


Е

Н


Ν

0

Р

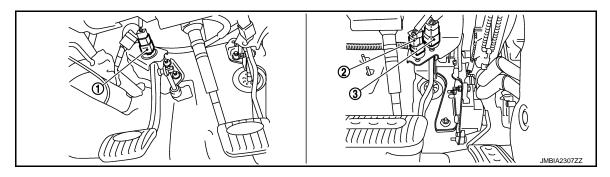


- ASCD clutch switch
- 2. ASCD brake switch
- 3. Stop lamp switch

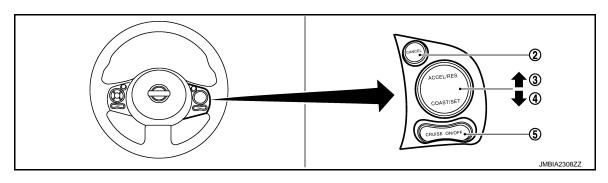


- ASCD steering switch 1.
- CANCEL switch

RESUME/ACCELERATE switch

- SET/COST switch
- MAIN switch

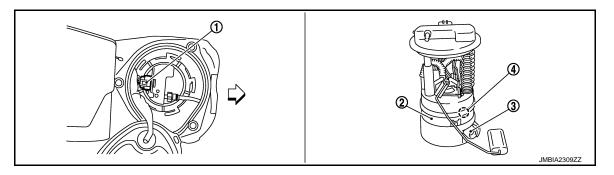

- harness connector
- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator
- Fuel tank temperature sensor
- Vehicle front

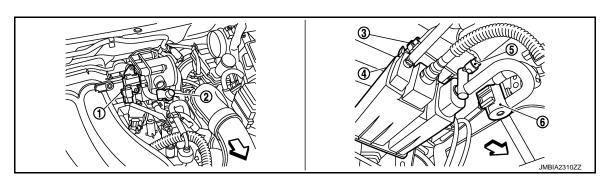

EVAP canister purge volume control 2. EVAP service port solenoid valve

- EVAP control system pressure sen-

ELECTRIC IGNITION SYSTEM

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

4. EVAP canister

5. EVAP canister vent control valve

6. Drain filter

Component Description

INFOID:0000000008450571

Component	Reference
Accelerator pedal position sensor	EC-388, "Description"
Camshaft position sensor (PHASE)	EC-250, "Description"
Crankshaft position sensor (POS)	EC-246, "Description"
Engine coolant temperature sensor	EC-168, "Description"
Ignition signal	EC-417, "Description"
Knock sensor	EC-244, "Description"
Mass air flow sensor	EC-152, "Description"
Park/neutral position switch (M/T models)	EC-322, "Description"
Transmission range switch (CVT models)	EC-322, Description
Throttle position sensor	EC-174, "Description"
Vehicle speed sensor	EC-308, "M/T MODELS : Description"

Α

EC


D

Ν

INFOID:0000000008450573

AIR CONDITIONING CUT CONTROL

System Diagram

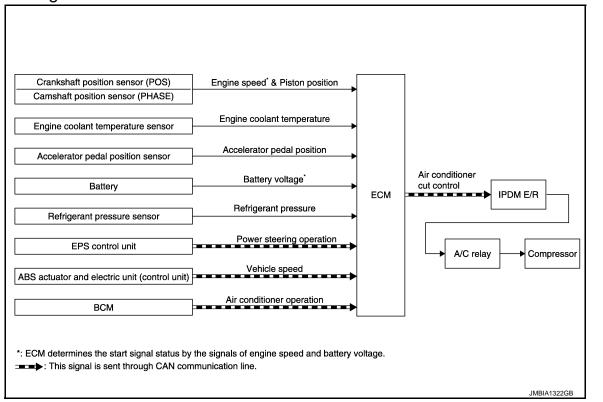

System Description

INPUT/OUTPUT SIGNAL CHART

Sensor	Input Signal to ECM	ECM function	Actuator	
Air conditioner switch*1	Air conditioner ON signal		IPDM E/R ↓ Air conditioner relay ↓ Compressor	
Accelerator pedal position sensor	Accelerator pedal position			
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*2			
Engine coolant temperature sensor	Engine coolant temperature	Air conditioner		
Battery	Battery voltage*2	cut control		
Refrigerant pressure sensor	Refrigerant pressure			
EPS control unit	Power steering operation			
ABS actuator and electric unit (control unit)	Vehicle speed*1			
ВСМ	Air conditioner ON signal*1			

^{*1:} This signal is sent to the ECM via the CAN communication line.

SYSTEM DESCRIPTION

This system improves engine operation when the air conditioner is used.

Under the following conditions, the air conditioner is turned off.

- When the accelerator pedal is fully depressed.
- When cranking the engine.
- At high engine speeds.
- When the engine coolant temperature becomes excessively high.
- When operating power steering during low engine speed or low vehicle speed.

Revision: 2012 August EC-63 2013 CUBE


^{*2:} ECM determines the start signal status by the signals of engine speed and battery voltage.

< SYSTEM DESCRIPTION >

- When engine speed is excessively low.
- · When refrigerant pressure is excessively low or high.

Component Parts Location

INFOID:0000000008450574

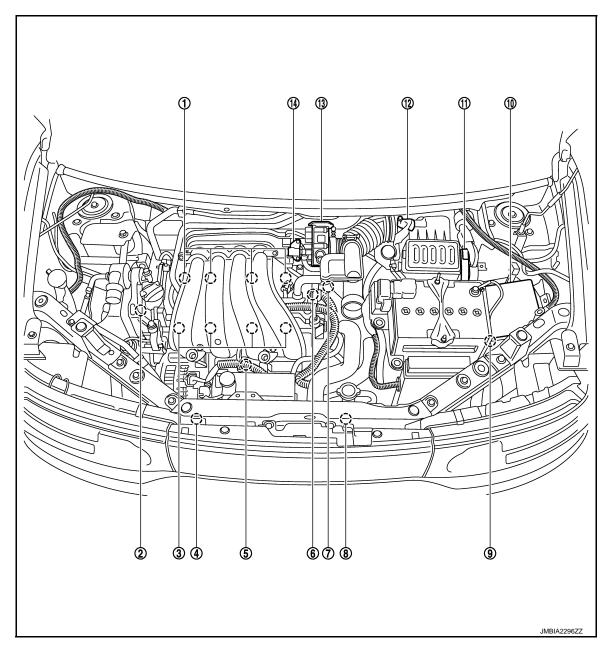

- Ignition coil (with power transistor) and spark plug
- 4. Refrigerant pressure sensor
- 7. Engine coolant temperature sensor
- 10. IPDM E/R
- Electric throttle control actuator (with built in throttle position sensor and throttle control motor)
- Intake valve timing control solenoid valve
- 5. Knock sensor
- 8. Cooling fan motor
- 11. ECM
- EVAP canister purge volume control solenoid valve
- 3. Fuel injector
- 6. Camshaft position sensor (PHASE)
- 9. Battery current sensor
- Mass air flow sensor (with intake air temperature sensor)

Α

EC

D

Е

F

G


Н

M

Ν

0


Р

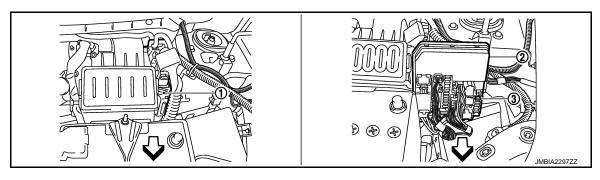

1. ECM


2. IPDM E/R

3. Fuel pump fuse (15 A)

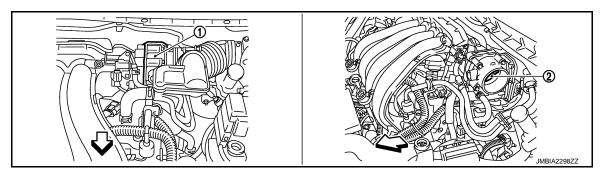


- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- 2. Throttle valve


∀ Vehicle front

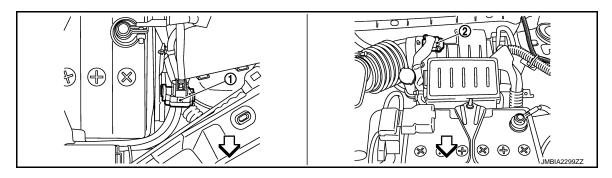

- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

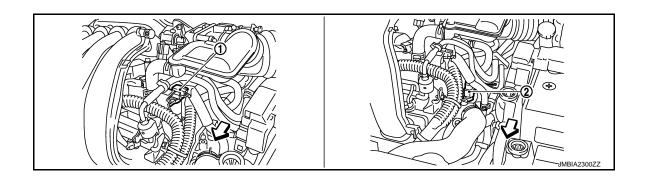


- 1. Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor
- ⟨□ Vehicle front

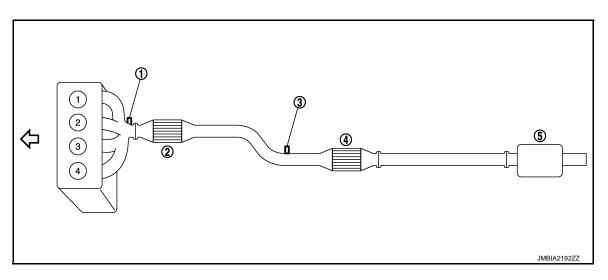

- 1. Air fuel ratio (A/F) sensor 1
- 4. Three way catalyst (under floor)


- 2. Three way catalyst (Manifold)
- 5. Muffler

3. Heated oxygen sensor 2

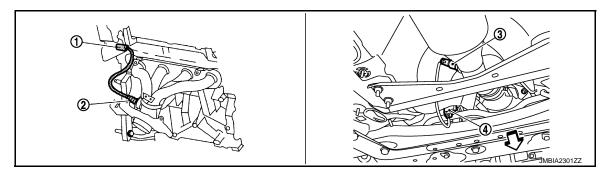

- Air fuel ratio (A/F) sensor 1 harness connector
- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1
- 3. Heated oxygen sensor 2

- 4. Heated oxygen sensor 2 harness connector
- ⟨
 → Vehicle front

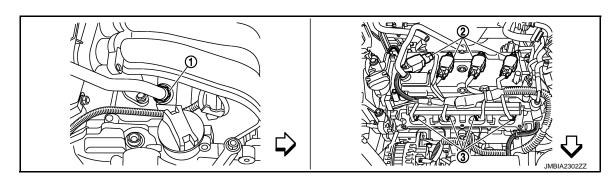

1. PCV valve

- Ignition coil (with power transistor) and spark plug
- 3. Fuel injector

Vehicle front

Α

EC

D

Е

F

G


Н

K

Ν


0

Р

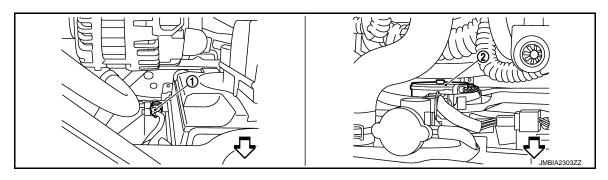


- 1. Refrigerant pressure sensor
- Cooling fan motor


√ Vehicle front

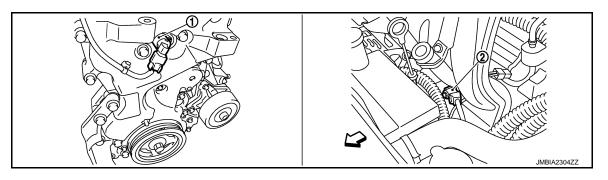


- Intake valve timing control solenoid 2. Knock sensor valve

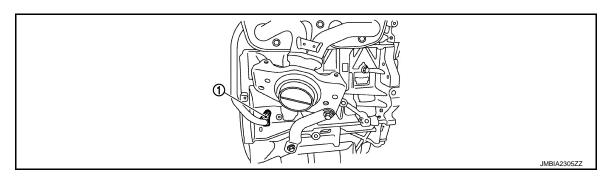


1. Crankshaft position sensor (POS)

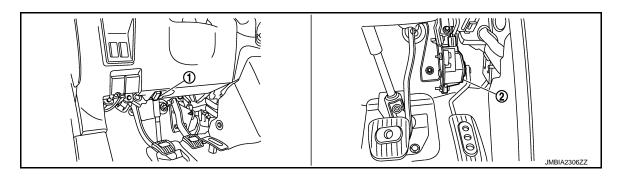

- Data link connector
- 2. Accelerator pedal position sensor

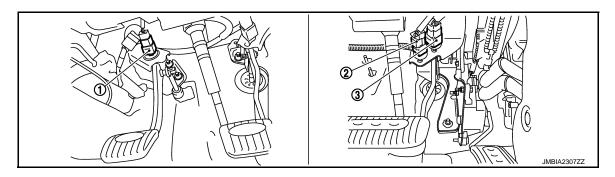


- ASCD clutch switch
- 2. ASCD brake switch
- Stop lamp switch

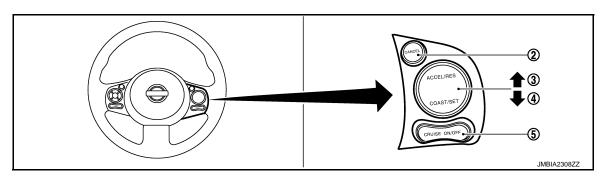


- ASCD steering switch 1.
 - SET/COST switch
- CANCEL switch
- MAIN switch

RESUME/ACCELERATE switch

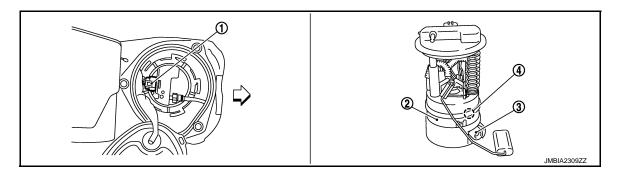

- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator harness connector

- Fuel tank temperature sensor

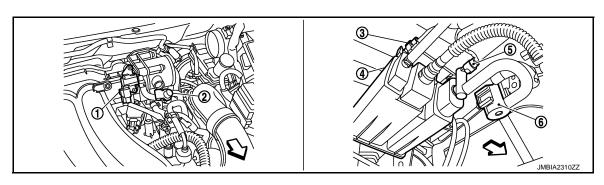

- EVAP canister purge volume control 2. solenoid valve
- **EVAP** service port
- EVAP control system pressure sen-

AIR CONDITIONING CUT CONTROL

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

4. EVAP canister

5. EVAP canister vent control valve

6. Drain filter

Component Description

INFOID:0000000008450575

Component	Reference
Accelerator pedal position sensor	EC-388, "Description"
Camshaft position sensor (PHASE)	EC-250, "Description"
Crankshaft position sensor (POS)	EC-246, "Description"
Engine coolant temperature sensor	EC-168, "Description"
Refrigerant pressure sensor	EC-430, "Description"

Е

D

Α

EC

G

F

Н

ı

K

L

M


Ν

0

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

System Diagram

INFOID:0000000008450576

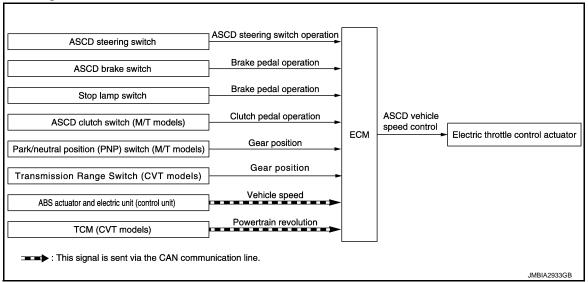

System Description

INFOID:0000000008450577

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator
ASCD steering switch	ASCD steering switch operation		Electric throttle control actuator
ASCD brake switch	Droke nedel energies		
Stop lamp switch	Brake pedal operation		
ASCD clutch switch (M/T models)	Clutch pedal operation	ASCD vehicle	
Park/neutral position (PNP) switch (M/T models)	Gear position	speed control	
Transmission range switch (CVT models)	Gear position		
ABS actuator and electric unit (control unit)	Vehicle speed*		
TCM (M/T models)	Powertrain revolution*		

^{*:} This signal is sent to the ECM via the CAN communication line.

BASIC ASCD SYSTEM

Refer to Owner's Manual for ASCD operating instructions.

Automatic Speed Control Device (ASCD) allows a driver to keep vehicle at predetermined constant speed without depressing accelerator pedal. Driver can set vehicle speed in advance between approximately 40 km/h (25 MPH) and 144 km/h (89 MPH).

ECM controls throttle angle of electric throttle control actuator to regulate engine speed.

Operation status of ASCD is indicated by CRUISE lamp and SET lamp in combination meter. If any malfunction occurs in the ASCD system, it automatically deactivates control.

NOTE:

Always drive vehicle in a safe manner according to traffic conditions and obey all traffic laws.

SET OPERATION

Press MAIN switch. (The CRUISE lamp in combination meter illuminates.)

When vehicle speed reaches a desired speed between approximately 40 km/h (25 MPH) and 144 km/h (89 MPH), press SET/COAST switch.

ACCELERATE OPERATION

If the RESUME/ACCELERATE switch is pressed during cruise control driving, increase the vehicle speed until the switch is released or vehicle speed reaches maximum speed controlled by the system. And then ASCD will maintain the new set speed.

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

CANCEL OPERATION

When any of following conditions exist, cruise operation will be canceled.

- CANCEL switch is pressed
- More than 2 switches at ASCD steering switch are pressed at the same time (Set speed will be cleared)
- Brake pedal is depressed
- Clutch pedal is depressed or gear position is changed to neutral position (M/T models)
- Selector lever position is changed to N, P, R
- Vehicle speed decreased to 13 km/h (8 MPH) lower than the set speed
- TCS system is operated

When the ECM detects any of the following conditions, the ECM will cancel the cruise operation and inform the driver by blinking indicator lamp.

• Engine coolant temperature is slightly higher than the normal operating temperature, CRUISE lamp may blink slowly.

When the engine coolant temperature decreases to the normal operating temperature, CRUISE lamp will stop blinking and the cruise operation will be able to work by pressing SET/COAST switch or RESUME/ACCELERATE switch.

Malfunction for some self-diagnoses regarding ASCD control: SET lamp will blink quickly.

If MAIN switch is turned to OFF while ASCD is activated, all of ASCD operations will be canceled and vehicle speed memory will be erased.

COAST OPERATION

When the SET/COAST switch is pressed during cruise control driving, decrease vehicle set speed until the switch is released. And then ASCD will maintain the new set speed.

RESUME OPERATION

When the RESUME/ACCELERATE switch is pressed after cancel operation other than pressing MAIN switch is performed, vehicle speed will return to last set speed. To resume vehicle set speed, vehicle condition must meet following conditions.

- Brake pedal is released
- Clutch pedal is released (M/T models)
- Selector lever position is other than P and N (CVT models)
- Vehicle speed is between 40 km/h (25 MPH) and 144 km/h (89 MPH)

EC

Α

С

D

Е

F

L


р. Л

Ν


0

Component Parts Location

INFOID:0000000008450578

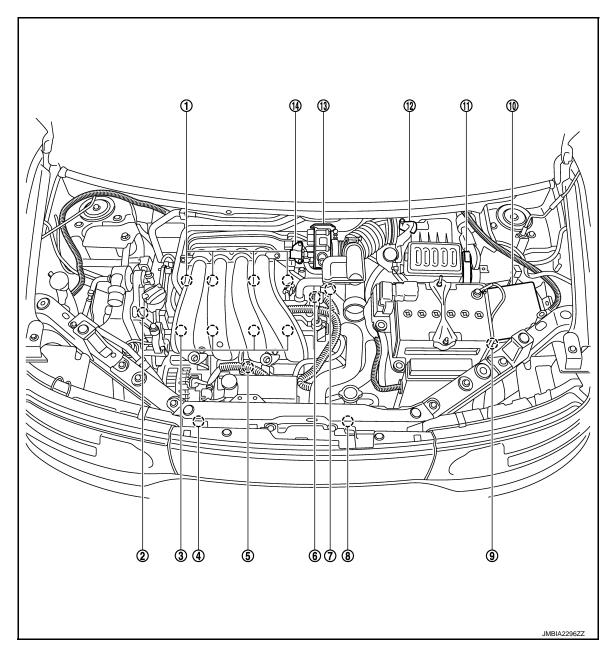


- Ignition coil (with power transistor) and spark plug
- 4. Refrigerant pressure sensor
- 7. Engine coolant temperature sensor
- 10. IPDM E/R
- 13. Electric throttle control actuator (with built in throttle position sensor and throttle control motor)
- Intake valve timing control solenoid 3. valve
- 5. Knock sensor
- 8. Cooling fan motor
- 11. ECM
- 14. EVAP canister purge volume control solenoid valve
- Fuel injector
- 6. Camshaft position sensor (PHASE)
- 9. Battery current sensor
- 12. Mass air flow sensor (with intake air temperature sensor)

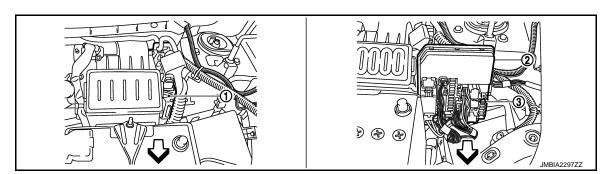

1. ECM


2. IPDM E/R

3. Fuel pump fuse (15 A)

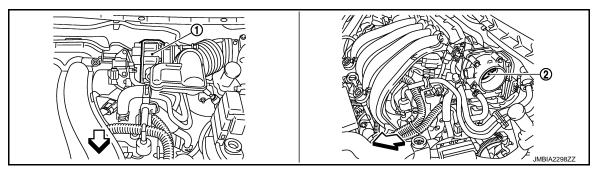


- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- . Throttle valve

∀ Vehicle front

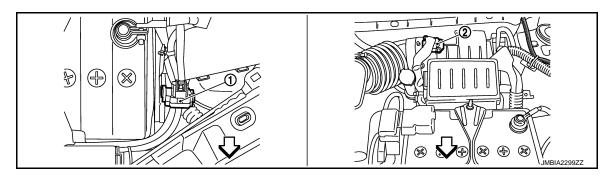

- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

⟨
→ Vehicle front

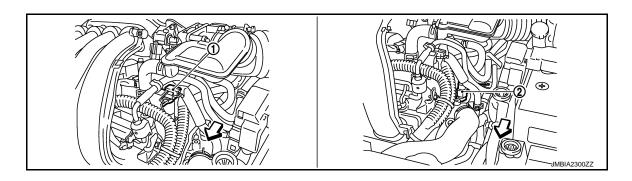

Revision: 2012 August EC-73 2013 CUBE

Α

EC

D

Е

F

G

Н

J

K

L


M

Ν

0

[MR18DE (EXCEPT FOR CALIFORNIA)]


- Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor

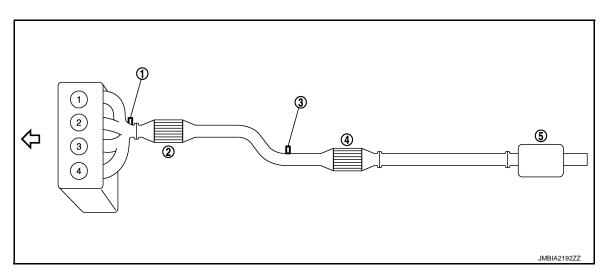

- Air fuel ratio (A/F) sensor 1
- Three way catalyst (under floor)
- Vehicle front


- Three way catalyst (Manifold) 2.
- 5. Muffler

3. Heated oxygen sensor 2

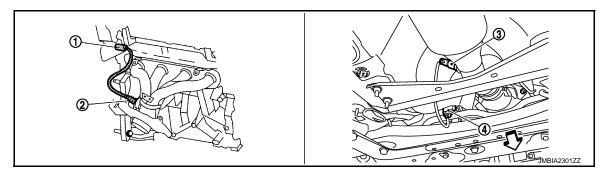

- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1 connector
- Heated oxygen sensor 2

- Heated oxygen sensor 2 harness connector

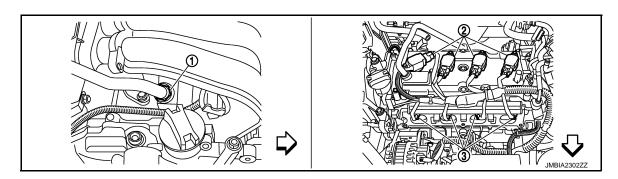


PCV valve

- Ignition coil (with power transistor) and spark plug
- Fuel injector


⟨
→ Vehicle front

[MR18DE (EXCEPT FOR CALIFORNIA)]

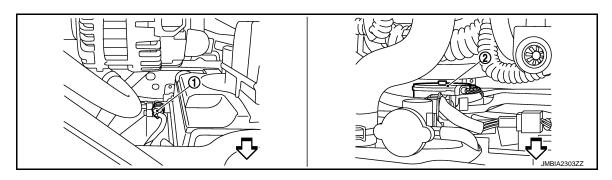


- Refrigerant pressure sensor
- 2. Cooling fan motor


Vehicle front

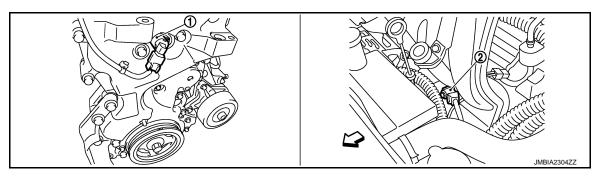

- Intake valve timing control solenoid 2. Knock sensor

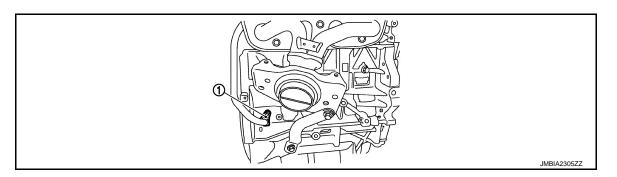

Crankshaft position sensor (POS)

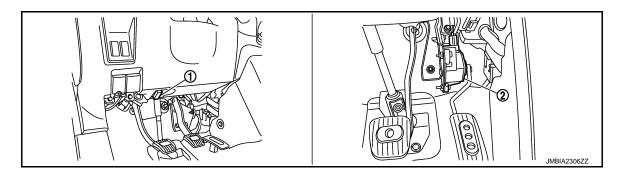

- Data link connector
- Accelerator pedal position sensor

EC-75 Revision: 2012 August 2013 CUBE

Α

EC

D

Е

F

G

Н

K


M

Ν

0


JMBIA2307ZZ

- ASCD clutch switch
- 2. ASCD brake switch
- Stop lamp switch

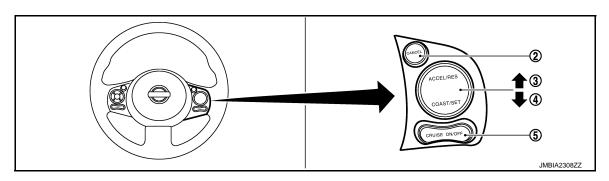


- ASCD steering switch
- SET/COST switch
- CANCEL switch
- MAIN switch

RESUME/ACCELERATE switch

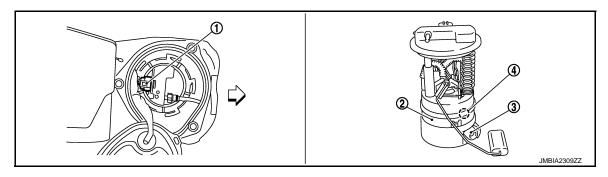

- harness connector
- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator

- Fuel tank temperature sensor

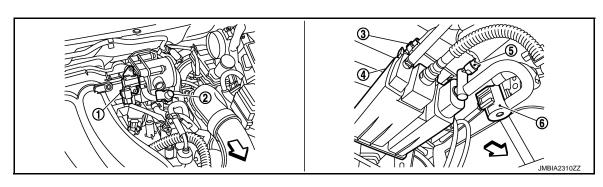

- EVAP canister purge volume control 2. solenoid valve
- **EVAP** service port
- EVAP control system pressure sen-

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

4. EVAP canister ⟨
→ Vehicle front

EVAP canister vent control valve

6. Drain filter

Component Description

INFOID:0000000008450579

Component	Reference
ASCD steering switch	EC-356, "Description"
ASCD brake switch	EC-359, "Description"
ASCD indicator	EC-406, "Description"
Electric throttle control actuator	EC-386, "Description"
Park/neutral position switch (M/T models)	EC-322, "Description"
Transmission range switch (CVT models)	LO-322, Description
Stop lamp switch	EC-359, "Description"

F

Α

EC

C

D

Е

G

Н

Κ

L

M

Ν

0

CAN COMMUNICATION

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

CAN COMMUNICATION

System Description


INFOID:0000000008450580

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Refer to LAN-22, "CAN Communication Signal Chart", about CAN communication for detail.

COOLING FAN CONTROL

System Diagram

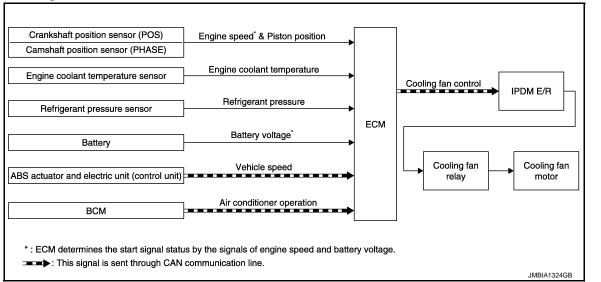

System Description

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*1		
Battery	Battery voltage*1		IPDM E/R
ABS actuator and electric unit (control unit)	Vehicle speed*2	Cooling fan	↓Cooling fan relay
Engine coolant temperature sensor	Engine coolant temperature	Control	↓ Cooling fan motor
ВСМ	Air conditioner ON signal*2		Cooming fair motor
Refrigerant pressure sensor	Refrigerant pressure		

^{*1:} The ECM determines the start signal status by the signals of engine speed and battery voltage.

SYSTEM DESCRIPTION

ECM controls cooling fan speed corresponding to vehicle speed, engine coolant temperature, refrigerant pressure, air conditioner ON signal. Then control system has 3-step control [HIGH/LOW/OFF].

EC

INFOID:0000000008450581

Α

Е

D


_

INFOID:0000000008450582

Ν

^{*2:} This signal is sent to ECM via the CAN communication line.

Cooling Fan Operation

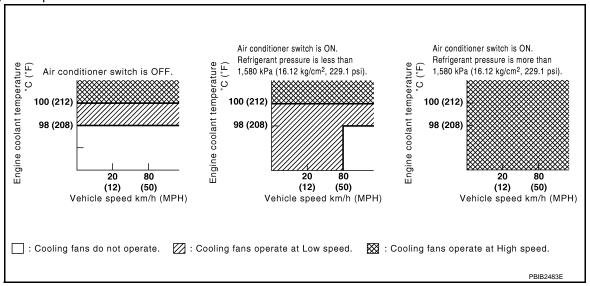


Cooling Fan Relay Operation

The ECM controls cooling fan relays via the CAN communication line.

Cooling for good	Cooling fan relay				
Cooling fan speed	1	2	3		
Stop (OFF)	OFF	OFF	OFF		
Low (LOW)	ON	OFF	OFF		
High (HI)	ON	ON	ON		

Component Parts Location

INFOID:0000000008450583

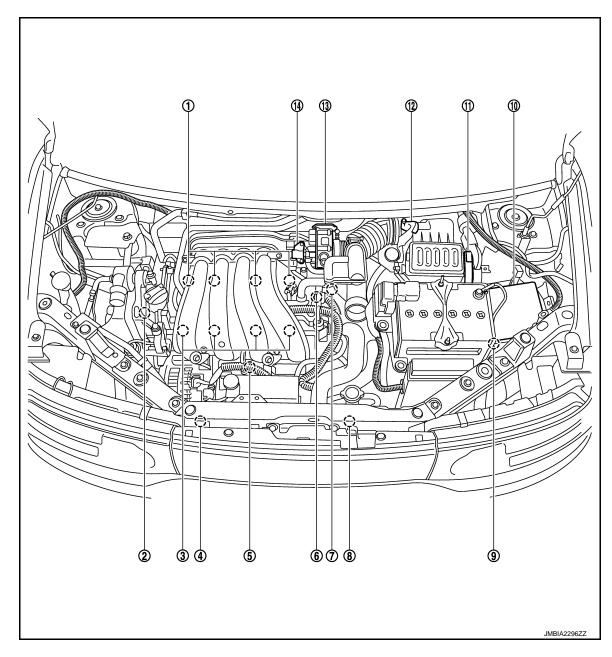

- Ignition coil (with power transistor) and spark plug
- 4. Refrigerant pressure sensor
- 7. Engine coolant temperature sensor
- 10. IPDM E/R
- 13. Electric throttle control actuator (with built in throttle position sensor and throttle control motor)
- Intake valve timing control solenoid valve
- 5. Knock sensor
- 8. Cooling fan motor
- 11. ECM
- 14. EVAP canister purge volume control solenoid valve
- Fuel injector
- 6. Camshaft position sensor (PHASE)
- 9. Battery current sensor
- 12. Mass air flow sensor (with intake air temperature sensor)

EC

Α

D

Е

F

G

Н


1

K

M

Ν

0

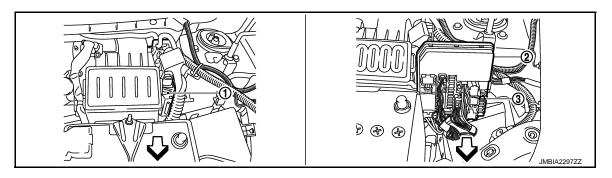


1. ECM


2. IPDM E/R

3. Fuel pump fuse (15 A)



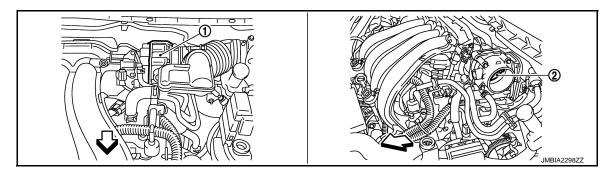


- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- Throttle valve

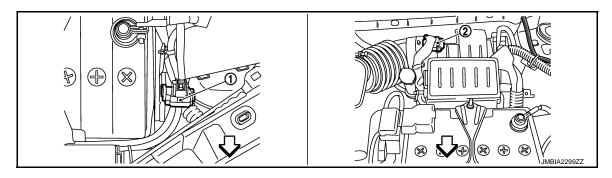

- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

⟨
→ Vehicle front

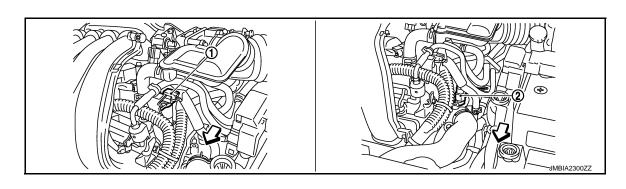

Α

EC

D

Е

F

Н

K


M

Ν

0

Р


- Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor
- ⟨ Vehicle front

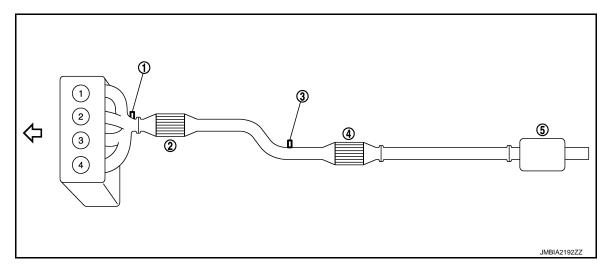

- Air fuel ratio (A/F) sensor 1
- Three way catalyst (under floor)
- Vehicle front

- 2. Three way catalyst (Manifold)
- Muffler


3. Heated oxygen sensor 2

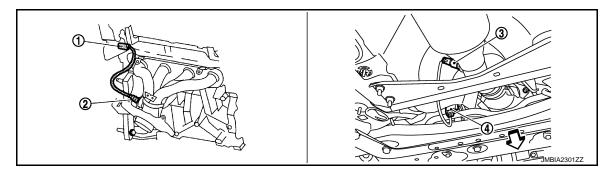

- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1 connector
- Heated oxygen sensor 2

Fuel injector


- Heated oxygen sensor 2 harness connector

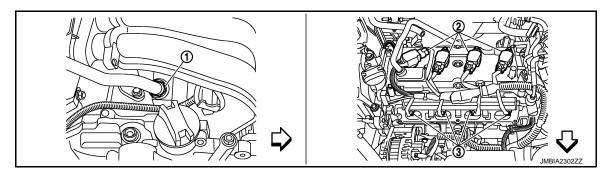


PCV valve

- Ignition coil (with power transistor)
 - and spark plug


⟨
→ Vehicle front

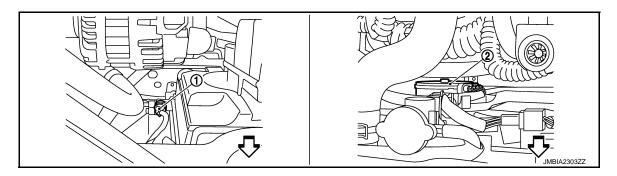


- 1. Refrigerant pressure sensor
- 2. Cooling fan motor

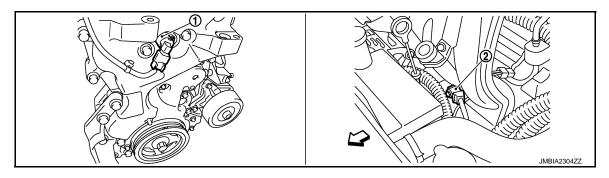

- Intake valve timing control solenoid 2. Knock sensor valve

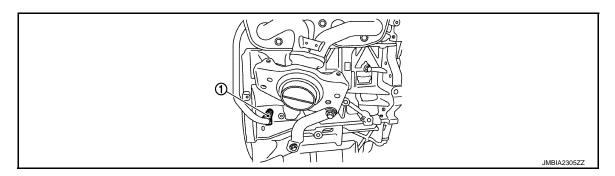

1. Crankshaft position sensor (POS)

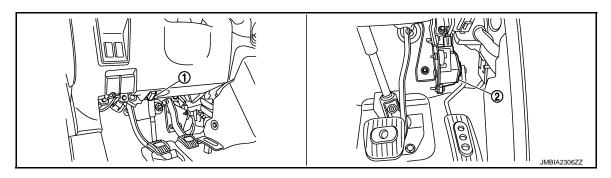

- 1. Data link connector
- 2. Accelerator pedal position sensor

Α


EC

D


Е

Н

Ν

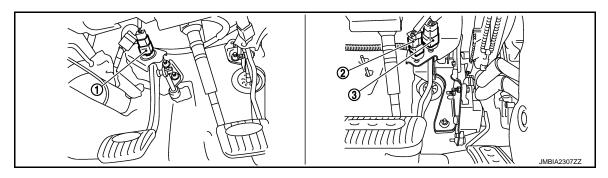


- ASCD clutch switch
- 2. ASCD brake switch
- Stop lamp switch

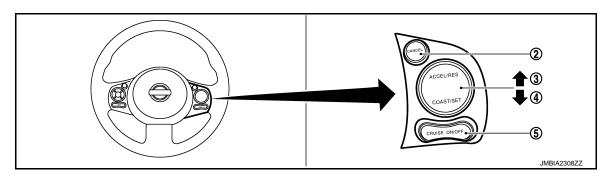


- ASCD steering switch 1.
- CANCEL switch
- RESUME/ACCELERATE switch

- SET/COST switch
- MAIN switch

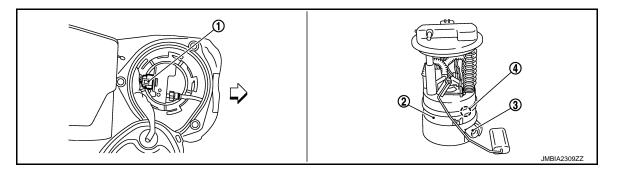

- harness connector
- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator
- Fuel tank temperature sensor
- Vehicle front

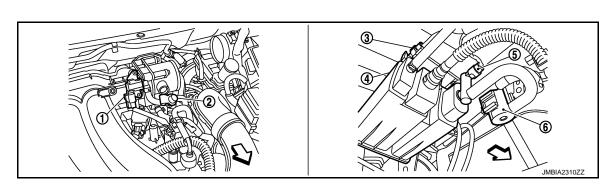

- EVAP canister purge volume control 2. solenoid valve
- **EVAP** service port
- EVAP control system pressure sen-

COOLING FAN CONTROL

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

4. EVAP canister

5. EVAP canister vent control valve 6. Drain filter

Component Description

INFOID:0000000008450584

Component	Reference
Camshaft position sensor (PHASE)	EC-250, "Description"
Crankshaft position sensor (POS)	EC-246. "Description"
Cooling fan motor	EC-79, "System Description"
Engine coolant temperature sensor	EC-168, "Description"
Refrigerant pressure sensor	EC-430, "Description"


EVAPORATIVE EMISSION SYSTEM

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

EVAPORATIVE EMISSION SYSTEM

System Diagram

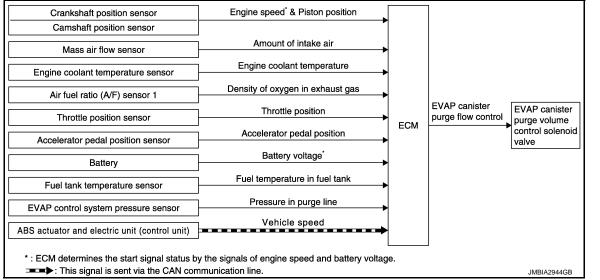

System Description

INFOID:0000000008450586

Α

EC

D

INPUT/OUTPUT SIGNAL CHART

Sensor	or Input signal to ECM ECM function		Actuator			
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*1		Engine speed*1			
Mass air flow sensor	Amount of intake air					
Engine coolant temperature sensor	Engine coolant temperature					
Battery	Battery voltage*1	ttery voltage*1				
Throttle position sensor	Throttle position	EVAP canister	EVAP canister purge vol-			
Accelerator pedal position sensor	Accelerator pedal position	purge flow control ume control solenoid va				
Air fuel ratio (A/F) sensor 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)					
Fuel tank temperature sensor	Fuel temperature in fuel tank					
EVAP control system pressure sensor	Pressure in purge line					
ABS actuator and electric unit (control unit)	Vehicle speed*2					

^{*1:} ECM determines the start signal status by the signals of engine speed and battery voltage.


Ν

P

^{*2:} This signal is sent to the ECM via the CAN communication line.

EVAPORATIVE EMISSION SYSTEM

SYSTEM DESCRIPTION

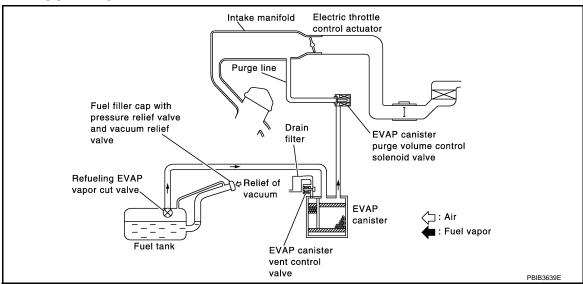


The evaporative emission system is used to reduce hydrocarbons emitted into the atmosphere from the fuel system. This reduction of hydrocarbons is accomplished by activated charcoals in the EVAP canister.

The fuel vapor in the sealed fuel tank is led into the EVAP canister which contains activated carbon and the vapor is stored there when the engine is not operating or when refueling to the fuel tank.

The vapor in the EVAP canister is purged by the air through the purge line to the intake manifold when the engine is operating. EVAP canister purge volume control solenoid valve is controlled by ECM. When the engine operates, the flow rate of vapor controlled by EVAP canister purge volume control solenoid valve is proportionally regulated as the air flow increases.

EVAP canister purge volume control solenoid valve also shuts off the vapor purge line during decelerating.

EVAPORATIVE EMISSION LINE DRAWING

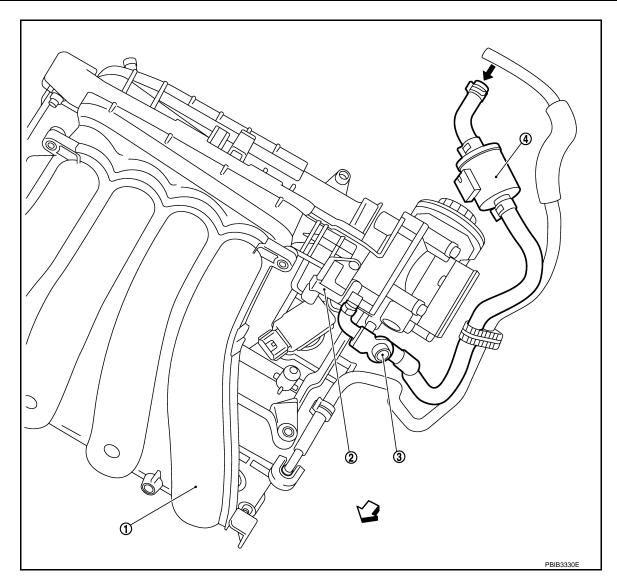

- 1. Intake manifold collector
- EVAP purge resonator

- EVAP canister purge volume control 3. EVAP service port solenoid valve
- From next figure

EC

Α

D

Е

F

G

Н


J

Κ

Ν

0

Ρ

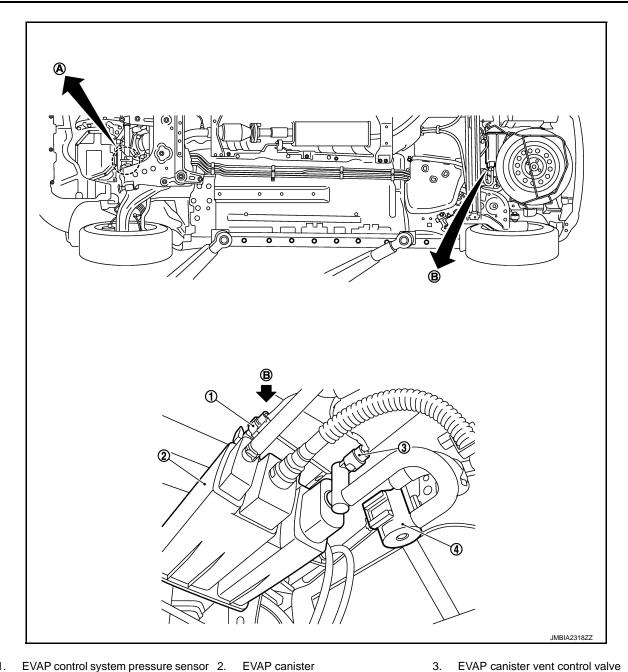


- EVAP control system pressure sensor 2. EVAP canister
- Drain filter
- A. To previous figure

NOTE:

Do not use soapy water or any type of solvent while installing vacuum hose or purge hoses.

Component Parts Location

INFOID:0000000008450587

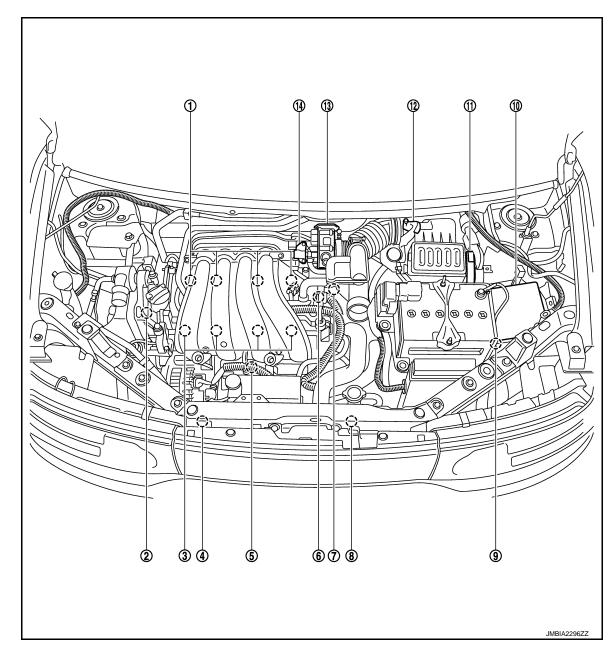

- Ignition coil (with power transistor) and spark plug
- 4. Refrigerant pressure sensor
- 7. Engine coolant temperature sensor
- 10. IPDM E/R
- 13. Electric throttle control actuator (with built in throttle position sensor and throttle control motor)
- Intake valve timing control solenoid valve
- 5. Knock sensor
- 8. Cooling fan motor
- 11. ECM
- 14. EVAP canister purge volume control solenoid valve
- Fuel injector
- 6. Camshaft position sensor (PHASE)
- 9. Battery current sensor
- 12. Mass air flow sensor (with intake air temperature sensor)

EC

Α

D

Е

F

G

Н

I


K

M

Ν

0

Ρ

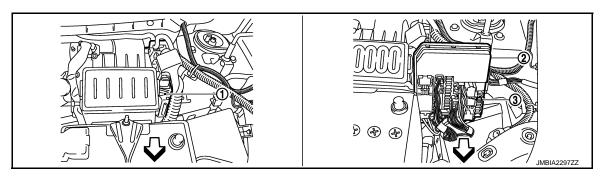


1. ECM


2. IPDM E/R

3. Fuel pump fuse (15 A)




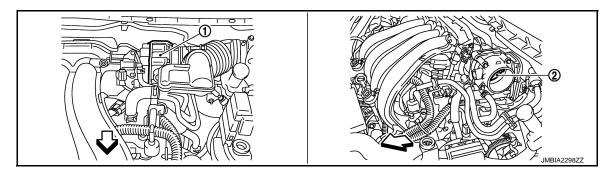

- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- Throttle valve

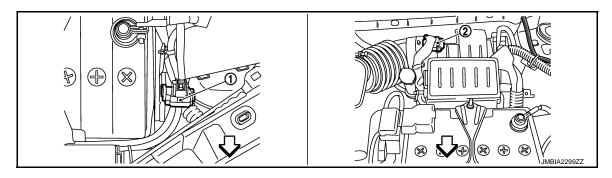

- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

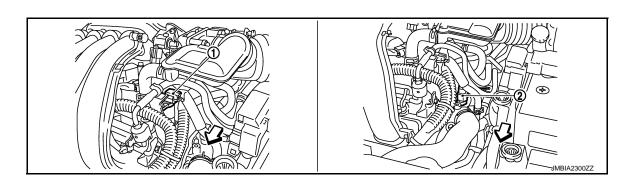

Α

EC

D

Е

F

Н

K


M

Ν

0

Р


- 1. Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor

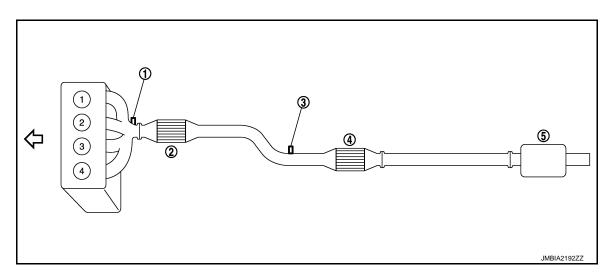

- 1. Air fuel ratio (A/F) sensor 1
- 4. Three way catalyst (under floor)
- Vehicle front

- 2. Three way catalyst (Manifold)
- 5. Muffler


3. Heated oxygen sensor 2

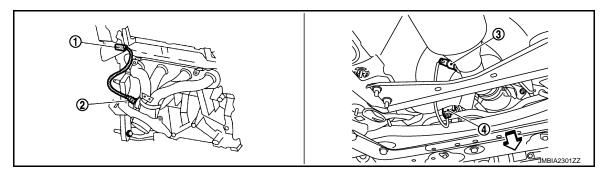

- Air fuel ratio (A/F) sensor 1 harness connector
- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1
- 3. Heated oxygen sensor 2

Fuel injector


- Heated oxygen sensor 2 harness connector

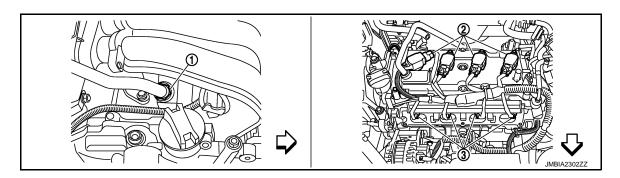


1. PCV valve

2. Ignition coil (with power transistor) and spark plug


⟨ ∀ Vehicle front

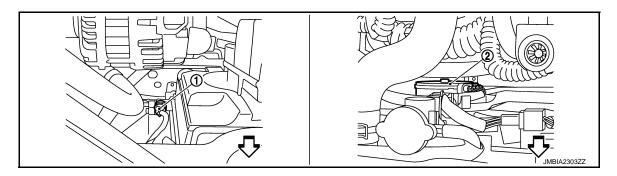


- 1. Refrigerant pressure sensor
- 2. Cooling fan motor

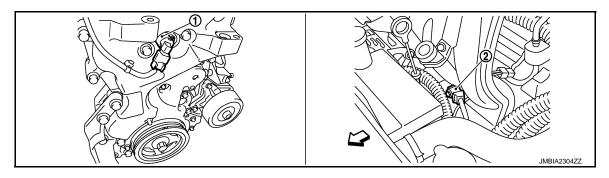

- Intake valve timing control solenoid 2. Knock sensor valve

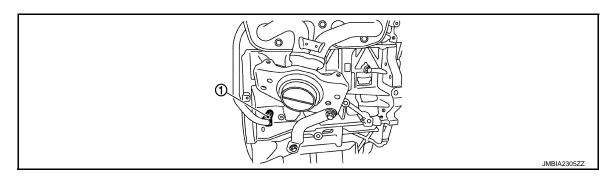

1. Crankshaft position sensor (POS)

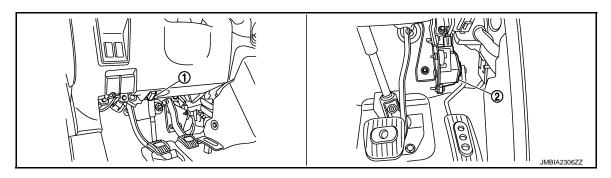

- 1. Data link connector
- 2. Accelerator pedal position sensor

Α

EC


D

Е


Н

Ν

0

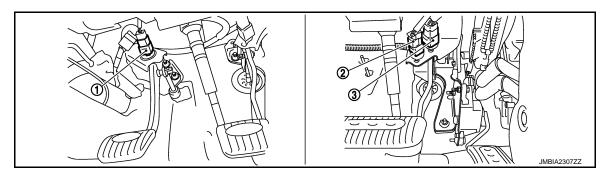


- ASCD clutch switch
- 2. ASCD brake switch
- 3. Stop lamp switch

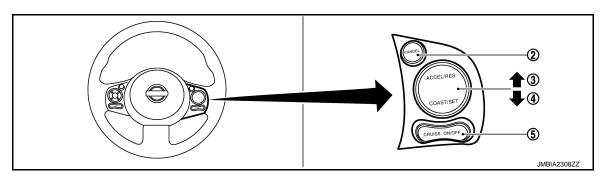


- ASCD steering switch 1.
- CANCEL switch
- RESUME/ACCELERATE switch

- SET/COST switch
- MAIN switch

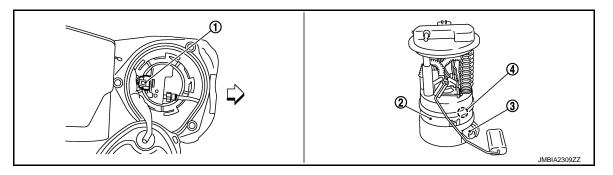

- harness connector
- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator
- Fuel tank temperature sensor
- Vehicle front

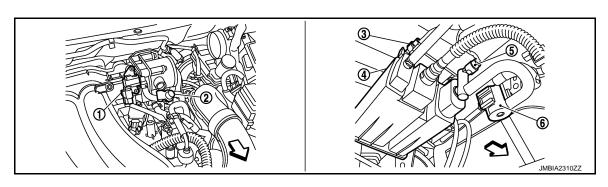

- EVAP canister purge volume control 2. EVAP service port solenoid valve
- EVAP control system pressure sen-

EVAPORATIVE EMISSION SYSTEM

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

4. EVAP canister

5. EVAP canister vent control valve

6. Drain filter

Component Description

INFOID:0000000008450588

Component	Reference
A/F sensor 1	EC-185, "Description"
Accelerator pedal position sensor	EC-388, "Description"
Camshaft position sensor (PHASE)	EC-250, "Description"
Crankshaft position sensor (POS)	EC-246, "Description"
Engine coolant temperature sensor	EC-168, "Description"
EVAP canister purge volume control solenoid valve	EC-265, "Description"
EVAP control system pressure sensor	EC-281, "Description"
Fuel tank temperature sensor	EC-228, "Description"
Mass air flow sensor	EC-152, "Description"
Throttle position sensor	EC-174, "Description"

Α


EC

D

INFOID:0000000008450590

INTAKE VALVE TIMING CONTROL

System Diagram

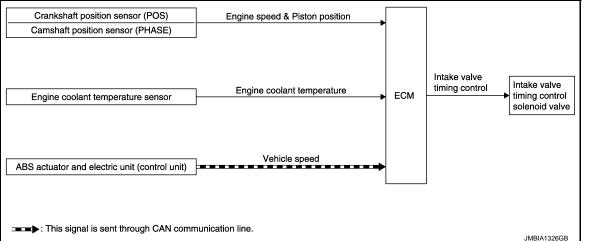


System Description

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed and piston position		
Camshaft position sensor (PHASE)	Engine speed and piston position	Intake valve timing control	Intake valve timing control solenoid valve
Engine coolant temperature sensor	Engine coolant temperature		
ABS actuator and electric unit (control unit)	Vehicle enced*	g coc.	
Combination meter	- Vehicle speed*		

^{*:} This signal is sent to the ECM via the CAN communication line

SYSTEM DESCRIPTION

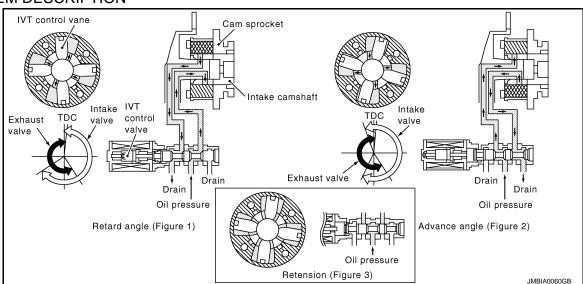


This mechanism hydraulically controls cam phases continuously with the fixed operating angle of the intake valve.

The ECM receives signals such as crankshaft position, camshaft position, engine speed, and engine coolant temperature. Then, the ECM sends ON/OFF pulse duty signals to the intake valve timing (IVT) control solenoid valve depending on driving status. This makes it possible to control the shut/open timing of the intake valve to increase engine torque in low/mid speed range and output in high-speed range.

Component Parts Location

INFOID:0000000008450591

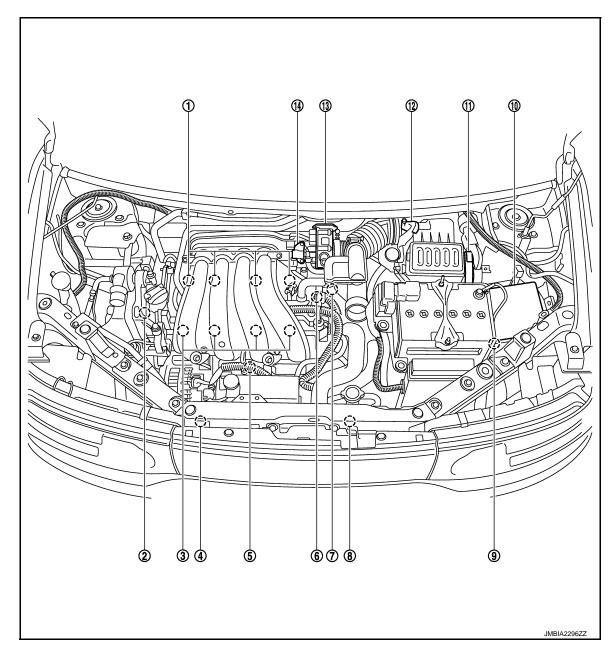

- Ignition coil (with power transistor) and spark plug
- 4. Refrigerant pressure sensor
- 7. Engine coolant temperature sensor
- 10. IPDM E/R
- 13. Electric throttle control actuator (with built in throttle position sensor and throttle control motor)
- Intake valve timing control solenoid 3. valve
- 5. Knock sensor
- 8. Cooling fan motor
- 11. ECM
- 14. EVAP canister purge volume control solenoid valve
- Fuel injector
- 6. Camshaft position sensor (PHASE)
- 9. Battery current sensor
- 12. Mass air flow sensor (with intake air temperature sensor)

Α

EC

D

Е

F

G


Н

M

Ν

0


Р

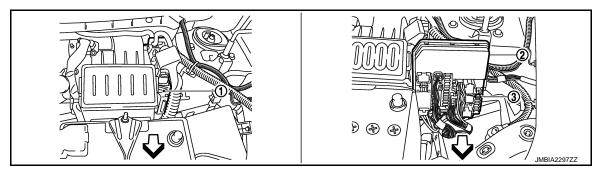


1. ECM

2. IPDM E/R

3. Fuel pump fuse (15 A)

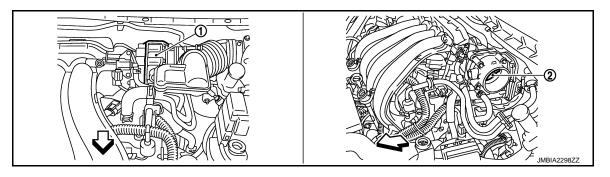


- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- 2. Throttle valve

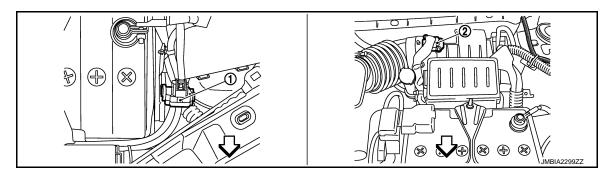


- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

⟨
→ Vehicle front

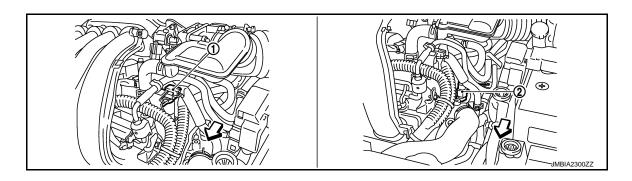


- 1. Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor

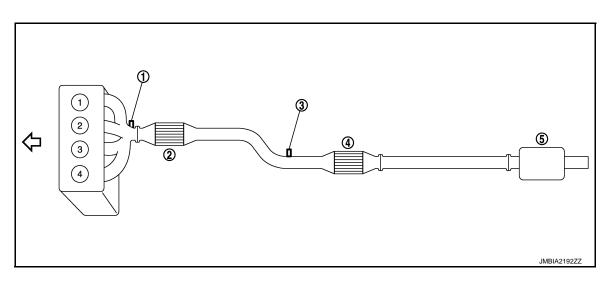

- 1. Air fuel ratio (A/F) sensor 1
- 4. Three way catalyst (under floor)


- 2. Three way catalyst (Manifold)
- 5. Muffler

3. Heated oxygen sensor 2

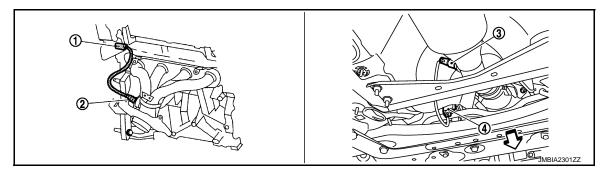

- Air fuel ratio (A/F) sensor 1 harness connector
- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1
- 3. Heated oxygen sensor 2

- Heated oxygen sensor 2 harness connector
- ⟨
 → Vehicle front

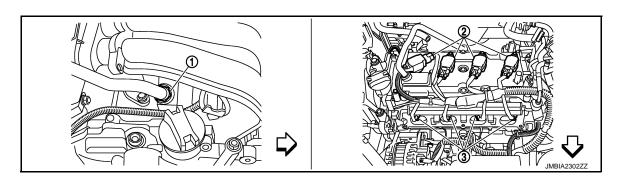

1. PCV valve

- 2. Ignition coil (with power transistor) and spark plug
- Fuel injector

⟨
→ Vehicle front

Α

EC

D

Е

F

G


Н

K

Ν


0

Р

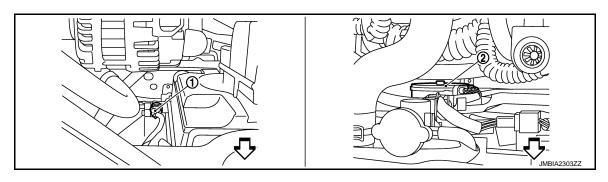


- 1. Refrigerant pressure sensor
- Cooling fan motor


√ Vehicle front

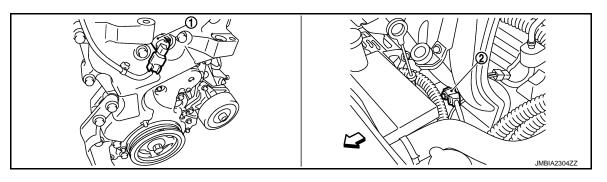


- Intake valve timing control solenoid 2. Knock sensor valve

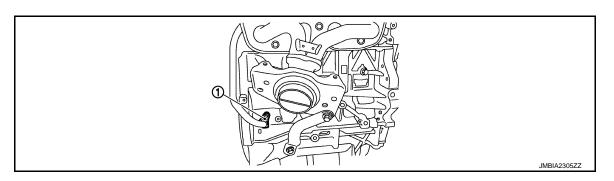


1. Crankshaft position sensor (POS)

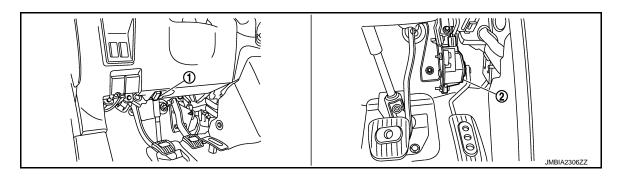

- Data link connector
- 2. Accelerator pedal position sensor

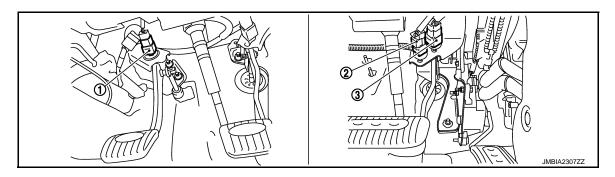


- ASCD clutch switch
- 2. ASCD brake switch
- Stop lamp switch

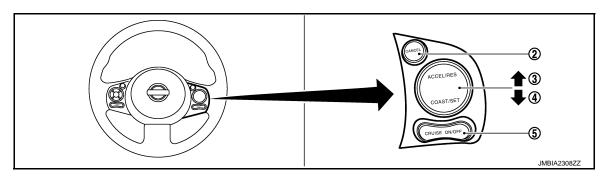


- ASCD steering switch 1.
- SET/COST switch
- CANCEL switch
- MAIN switch

RESUME/ACCELERATE switch

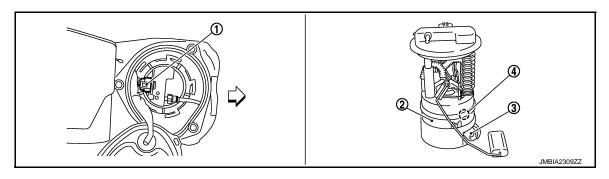

- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator harness connector

- Fuel tank temperature sensor

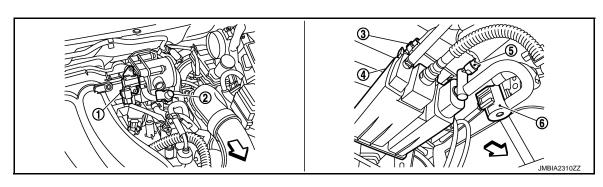

- EVAP canister purge volume control 2. solenoid valve
- **EVAP** service port
- EVAP control system pressure sen-

INTAKE VALVE TIMING CONTROL

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

4. EVAP canister

5. EVAP canister vent control valve

6. Drain filter

 $\begin{tabular}{ll} \begin{tabular}{ll} \beg$

Component Description

INFOID:0000000008450592

Component	Reference
Camshaft position sensor (PHASE)	EC-250, "Description"
Crankshaft position sensor (POS)	EC-246, "Description"
Engine coolant temperature sensor	EC-168, "Description"
Intake valve timing control solenoid valve	EC-97, "System Description"

Е

D

Α

EC

F

Н

G

ı

K

L

 \mathbb{N}


Ν

0

FUEL FILLER CAP WARNING SYSTEM

System Diagram

INFOID:0000000008450593

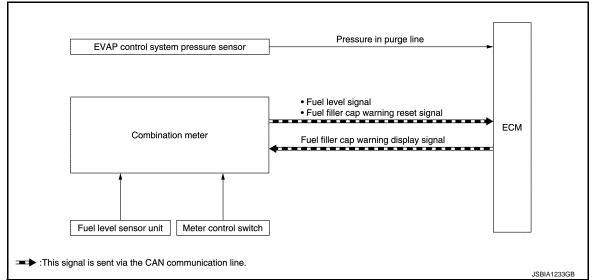

System Description

INFOID:0000000008450594

INPUT/OUTPUT SIGNAL CHART

Input		

Unit/Sensor	Input signal to ECM	ECM function	
EVAP control system pressure sensor	Pressure in purge line	Fuel filler cap warning control	
Combination meter	Fuel level signal [*]	Fuel filler cap warning control	
	Fuel filler cap warning reset signal*		

^{*:} This signal is sent to the ECM via the CAN communication line.

Output

Unit	Output signal	Actuator
ECM	Fuel filler cap warning display signal*	Combination meter

^{*:} This signal is sent to the combination meter via the CAN communication line.

SYSTEM DESCRIPTION

The fuel filler cap warning system alerts the driver to the prevention of the fuel filler being left uncapped and malfunction occurrences after refueling, by turning ON the fuel filler cap warning display on the combination meter.

ECM judges a refueled state, based on a fuel level signal transmitted from the combination meter.

When a very small leak is detected through the EVAP leak diagnosis performed after judging the refueled state, ECM transmits a fuel filler cap warning display signal (request for display ON) to the combination meter via CAN communication.

When receiving the signal, the combination meter turns ON the fuel filler cap warning display.

CAUTION:

Check fuel filler cap installation condition when the fuel filler cap warning display turns ON.

Reset Operation

The fuel filler cap warning lamp tunes OFF, according to any condition listed below:

- Reset operation is performed by operating the meter control switch on the combination meter. Refer to <u>MWI-18</u>, "WARNING LAMPS/INDICATOR LAMPS: System Description".
- When the reset operation is performed, the combination meter transmits a fuel filler cap warning reset signal to ECM via CAN communication. ECM transmits a fuel filler cap warning display signal (request for display OFF) to the combination meter via CAN communication. When receiving the signal, the combination meter turns OFF the fuel filler cap warning display.
- EVAP leak diagnosis result is normal.

FUEL FILLER CAP WARNING SYSTEM

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- Fuel refilled.
- DTC erased by using CONSULT.

NOTE:

MIL turns ON if a malfunction is detected in leak diagnosis results again at the trip after the fuel filler cap warning display turns ON/OFF.

EC

Α

С

D

Е

F

G

Н

J

K

L

M

Ν

0

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

ON BOARD DIAGNOSTIC (OBD) SYSTEM

Diagnosis Description

This system is an on board diagnostic system that records exhaust emission-related diagnostic information

and detects a sensors/actuator-related malfunction. A malfunction is indicated by the malfunction indicator lamp (MIL) and stored in ECU memory as a DTC. The diagnostic information can be obtained with the diagnostic tool (GST: Generic Scan Tool).

GST (Generic Scan Tool)

INFOID:0000000008450596

INFOID:0000000008450595

When GST is connected with a data link connector equipped on the vehicle side, it will communicate with the control unit equipped in the vehicle and then enable various kinds of diagnostic tests. Refer to GI-49, "Description".

NOTE:

Service \$0A is not applied for regions where it is not mandated.

DIAGNOSIS SYSTEM (ECM)

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

DIAGNOSIS SYSTEM (ECM) DIAGNOSIS DESCRIPTION

DIAGNOSIS DESCRIPTION: 1st Trip Detection Logic and Two Trip Detection Logic

INFOID:0000000008450597

When a malfunction is detected for the first time, 1st trip DTC and 1st trip Freeze Frame data are stored in the ECM memory. The MIL will not illuminate at this stage. <1st trip>

If the same malfunction is detected again during the next drive, the DTC and Freeze Frame data are stored in the ECM memory, and the MIL illuminates. The MIL illuminates at the same time when the DTC is stored. <2nd trip> The "trip" in the "Two Trip Detection Logic" means a driving mode in which self-diagnosis is performed during vehicle operation. Specific on board diagnostic items will cause the ECM to illuminate or blink the MIL, and store DTC and Freeze Frame data, even in the 1st trip, as shown below.

×: Applicable —: Not applicable

	MIL			DTC		1st trip DTC		
Items	1st trip		2nd trip		1st trip	2nd trip	1st trip	2nd trip
	Blinking	Illuminat- ed	Blinking	Illuminat- ed		displaying	displaying	display- ing
Misfire (Possible three way catalyst damage) — DTC: P0300 – P0304 is being detected	×	_	_	_	_	_	×	_
Misfire (Possible three way catalyst damage) — DTC: P0300 – P0304 is being detected	_	_	×	_	_	×	_	_
One trip detection diagnoses (Refer to EC-450, "DTC Index".)	_	×	_	_	×	_	_	_
Except above	_	_	_	×	_	×	×	

DIAGNOSIS DESCRIPTION: DTC and Freeze Frame Data

INFOID:0000000008450598

DTC AND 1ST TRIP DTC

The 1st trip DTC (whose number is the same as the DTC number) is displayed for the latest self-diagnostic result obtained. If the ECM memory was cleared previously, and the 1st trip DTC did not recur, the 1st trip DTC will not be displayed.

If a malfunction is detected during the 1st trip, the 1st trip DTC is saved in the ECM memory. The MIL will not light up (two trip detection logic). If the same malfunction is not detected in the 2nd trip (meeting the required driving pattern), the 1st trip DTC is cleared from the ECM memory. If the same malfunction is detected in the 2nd trip, both the 1st trip DTC and DTC are saved in the ECM memory and the MIL lights up. In other words, the DTC is stored in the ECM memory and the MIL lights up when the same malfunction occurs in two consecutive trips. If a 1st trip DTC is stored and a non-diagnostic operation is performed between the 1st and 2nd trips, only the 1st trip DTC will continue to be stored. For malfunctions that blink or light up the MIL during the 1st trip, the DTC and 1st trip DTC are stored in the ECM memory.

For malfunctions in which 1st trip DTCs are displayed, refer to EC-450, "DTC Index". These items are required by legal regulations to continuously monitor the system/component. In addition, the items monitored non-continuously are also displayed on CONSULT.

1st trip DTC is specified in Service \$07 of SAE J1979/ISO 15031-5. 1st trip DTC detection occurs without illuminating the MIL and therefore does not warn the driver of a malfunction.

When a 1st trip DTC is detected, check, print out or write down and erase (1st trip) DTC and Freeze Frame data as specified in Work Flow procedure Step 2, refer to EC-14, "Work Flow". Then perform DTC Confirmation Procedure or Component Function Check to try to duplicate the malfunction. If the malfunction is duplicated, the item requires repair.

FREEZE FRAME DATA AND 1ST TRIP FREEZE FRAME DATA

The ECM records the driving conditions such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed, vehicle speed, absolute throttle position, base fuel schedule and intake air temperature at the moment a malfunction is detected.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data. The data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT or GST. The 1st trip freeze frame data can only be displayed on the CONSULT screen.

Α

EC

Е

2013 CUBE

DIAGNOSIS SYSTEM (ECM)

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items		
1	Freeze frame data	Misfire — DTC: P0300 – P0304 Fuel Injection System Function — DTC: P0171	
2		Except the above items	
3	1st trip freeze frame data		

For example, the EGR malfunction (Priority: 2) was detected and the freeze frame data was saved in the 2nd trip. After that when the misfire (Priority: 1) is detected in another trip, the freeze frame data will be updated from the EGR malfunction to the misfire. The 1st trip freeze frame data is updated each time a different malfunction is detected. There is no priority for 1st trip freeze frame data. However, once freeze frame data is stored in the ECM memory, 1st trip freeze data is no longer stored (because only one freeze frame data or 1st trip freeze frame data can be stored in the ECM). If freeze frame data is stored in the ECM memory and freeze frame data with the same priority occurs later, the first (original) freeze frame data remains unchanged in the ECM memory.

Both 1st trip freeze frame data and freeze frame data (along with the DTCs) are cleared when the ECM memory is erased.

DIAGNOSIS DESCRIPTION: Counter System

INFOID:0000000008450599

RELATIONSHIP BETWEEN MIL, 1ST TRIP DTC, DTC, AND DETECTABLE ITEMS

- When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data are stored in the ECM memory.
- When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data are stored in the ECM memory, and the MIL will come on.
- The MIL will turn OFF after the vehicle is driven 3 times (driving pattern B) with no malfunction. The drive is counted only when the recorded driving pattern is met (as stored in the ECM). If another malfunction occurs while counting, the counter will reset.
- The DTC and the freeze frame data will be stored until the vehicle is driven 40 times (driving pattern A) without the same malfunction recurring (except for Misfire and Fuel Injection System). For Misfire and Fuel Injection System, the DTC and freeze frame data will be stored until the vehicle is driven 80 times (driving pattern C) without the same malfunction recurring. The "TIME" in "SELF-DIAGNOSTIC RESULTS" mode of CONSULT will count the number of times the vehicle is driven.
- The 1st trip DTC is not displayed when the self-diagnosis results in OK for the 2nd trip.

COUNTER SYSTEM CHART


Items	Fuel Injection System	Misfire	Other
MIL (turns OFF)	3 (pattern B)	3 (pattern B)	3 (pattern B)
DTC, Freeze Frame Data (no display)	80 (pattern C)	80 (pattern C)	40 (pattern A)
1st Trip DTC (clear)	1 (pattern C), *1	1 (pattern C), *1	1 (pattern B)
1st Trip Freeze Frame Data (clear)	*1, *2	*1, *2	1 (pattern B)

For details about patterns B and C under "Fuel Injection System" and "Misfire", see "EXPLANATION FOR DRIVING PATTERNS FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM".

For details about patterns A and B under Other, see "EXPLANATION FOR DRIVING PATTERNS FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM".

- *1: Clear timing is at the moment OK is detected.
- *2: Clear timing is when the same malfunction is detected in the 2nd trip.

Relationship Between MIL, DTC, 1st Trip DTC and Driving Patterns for "Misfire <Exhaust Quality Deterioration>", "Fuel Injection System"

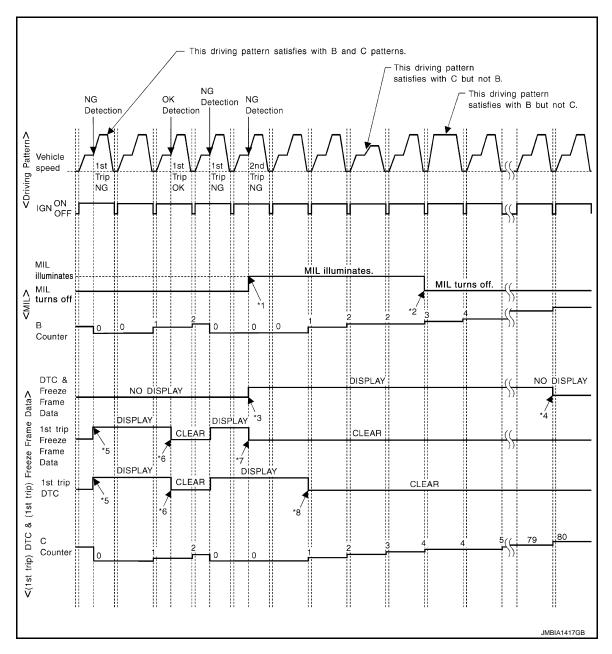

- *1: When the same malfunction is detected in two consecutive trips, MIL will light up.
- *4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 80 times (pattern C) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)
- *7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.

- *2: MIL will turn OFF after vehicle is driv- *3: When the same malfunction is deen 3 times (pattern B) without any malfunctions.
- *5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.
- *8: 1st trip DTC will be cleared when vehicle is driven once (pattern C) without the same malfunction after DTC is stored in ECM.
- tected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.

Α

EC

D

M

Ν

Р

*6: The 1st trip DTC and the 1st trip freeze frame data will be cleared at the moment OK is detected.

Explanation for Driving Patterns for "Misfire < Exhaust Quality Deterioration>", "Fuel Injection System"

Driving Pattern B

Refer to EC-111, "DIAGNOSIS DESCRIPTION: Driving Pattern".

Driving Pattern C

Refer to EC-111, "DIAGNOSIS DESCRIPTION: Driving Pattern".

Example:


If the stored freeze frame data is as per the following:

Engine speed: 850 rpm, Calculated load value: 30%, Engine coolant temperature: 80°C (176°F)

To be satisfied with driving pattern C, the vehicle should run under the following conditions:

Engine speed: 475 – 1,225 rpm, Calculated load value: 27 – 33%, Engine coolant temperature: more than 70°C (158°F)

Relationship Between MIL, DTC, 1st Trip DTC and Driving Patterns Except For "Misfire <Exhaust Quality Deterioration>", "Fuel Injection System"

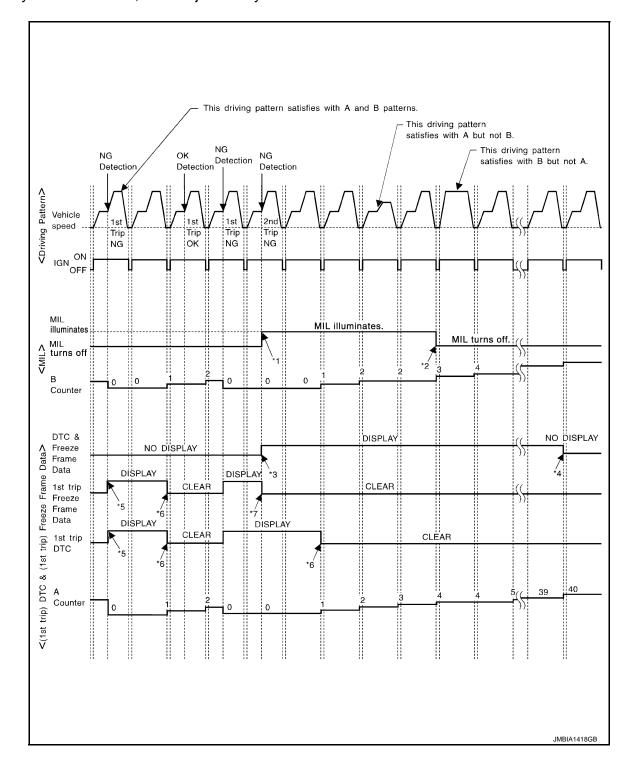

[MR18DE (EXCEPT FOR CALIFORNIA)]

< SYSTEM DESCRIPTION >

*1: When the same malfunction is detected in two consecutive trips, MIL will light up.

*4: The DTC and the freeze frame data

without the same malfunction.

will not be displayed any longer after

vehicle is driven 40 times (pattern A)

(The DTC and the freeze frame data

en 3 times (pattern B) without any malfunctions. *5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be

stored in ECM.

- *2: MIL will turn OFF after vehicle is driv- *3: When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.
 - *6: 1st trip DTC will be cleared after vehicle is driven once (pattern B) without the same malfunction.

EC

Α

D

Е

*7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.

still remain in ECM.)

Explanation for Driving Patterns Except for "Misfire < Exhaust Quality Deterioration>", "Fuel Injection System"

Driving Pattern A

Refer to EC-111, "DIAGNOSIS DESCRIPTION: Driving Pattern".

Driving Pattern B

Refer to EC-111, "DIAGNOSIS DESCRIPTION: Driving Pattern".

DIAGNOSIS DESCRIPTION: Driving Pattern

INFOID:0000000008450600

CAUTION:

Always drive at a safe speed.

DRIVING PATTERN A

Driving pattern A means a trip satisfying the following conditions.

- Engine speed reaches 400 rpm or more.
- Engine coolant temperature rises by 20°C (36°F) or more after starting the engine.
- Engine coolant temperature reaches 70°C (158°F) or more.
- The ignition switch is turned from ON to OFF.

- When the same malfunction is detected regardless of driving conditions, reset the counter of driving pattern
- When the above conditions are satisfied without detecting the same malfunction, reset the counter of driving pattern A.

DRIVING PATTERN B

Driving pattern B means a trip satisfying the following conditions.

- Engine speed reaches 400 rpm or more.
- Engine coolant temperature reaches 70°C (158°F) or more.
- Vehicle speed of 70 120 km/h (44 75 MPH) is maintained for 60 seconds or more under the control of closed loop.
- Vehicle speed of 30 60 km/h (19 37 MPH) is maintained for 10 seconds or more under the control of closed loop.
- Under the closed loop control condition, the following state reaches 12 seconds or more in total: Vehicle speed of 4 km/h (2 MPH) or less with idling condition.
- The state of driving at 10 km/h (7 MPH) or more reaches 10 minutes or more in total.
- A lapse of 22 minutes or more after engine start.

NOTE:

- Drive the vehicle at a constant velocity.
- When the same malfunction is detected regardless of driving conditions, reset the counter of driving pattern
- When the above conditions are satisfied without detecting the same malfunction, reset the counter of driving pattern B.

DRIVING PATTERN C

Driving pattern C means operating vehicle as per the following:

The following conditions should be satisfied at the same time:

Engine speed: (Engine speed in the freeze frame data) ±375 rpm

EC-111 Revision: 2012 August 2013 CUBE

F

Н

L

Ν

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Calculated load value: (Calculated load value in the freeze frame data) x (1±0.1) [%] Engine coolant temperature condition:

- When the freeze frame data shows lower than 70°C (158°F), engine coolant temperature should be lower than 70°C (158°F).
- When the freeze frame data shows higher than or equal to 70°C (158°F), engine coolant temperature should be higher than or equal to 70°C (158°F).

NOTE

- When the same malfunction is detected regardless of the above vehicle conditions, reset the counter of driving pattern C.
- When the above conditions are satisfied without detecting the same malfunction, reset the counter of driving pattern C.
- The 1st trip DTC will be cleared when C counter is counted once without the same malfunction after DTC is stored in ECM.

DRIVING PATTERN D

Driving pattern D means a trip satisfying the following conditions.

- The state of driving at 40 km/h (25 MPH) reaches 300 seconds or more in total.
- Idle speed lasts 30 seconds or more.
- A lapse of 600 seconds or more after engine start.

NOTE:

- When the same malfunction is detected regardless of driving conditions, reset the counter of driving pattern D.
- When the above conditions are satisfied without detecting the same malfunction, reset the counter of driving pattern D.

DIAGNOSIS DESCRIPTION: System Readiness Test (SRT) Code

INFOID:0000000008450601

System Readiness Test (SRT) code is specified in Service \$01 of SAE J1979/ISO 15031-5.

As part of an enhanced emissions test for Inspection & Maintenance (I/M), certain states require the status of SRT be used to indicate whether the ECM has completed self-diagnosis of major emission systems and components. Completion must be verified in order for the emissions inspection to proceed.

If a vehicle is rejected for a State emissions inspection due to one or more SRT items indicating "INCMP", use the information in this Service Manual to set the SRT to "CMPLT".

In most cases the ECM will automatically complete its self-diagnosis cycle during normal usage, and the SRT status will indicate "CMPLT" for each application system. Once set as "CMPLT", the SRT status remains "CMPLT" until the self-diagnosis memory is erased.

Occasionally, certain portions of the self-diagnostic test may not be completed as a result of the customer's normal driving pattern; the SRT will indicate "INCMP" for these items.

NOTE:

The SRT will also indicate "INCMP" if the self-diagnosis memory is erased for any reason or if the ECM memory power supply is interrupted for several hours.

If, during the state emissions inspection, the SRT indicates "CMPLT" for all test items, the inspector will continue with the emissions test. However, if the SRT indicates "INCMP" for one or more of the SRT items the vehicle is returned to the customer untested.

NOTE:

If MIL is ON during the state emissions inspection, the vehicle is also returned to the customer untested even though the SRT indicates "CMPLT" for all test items. Therefore, it is important to check SRT ("CMPLT") and DTC (No DTCs) before the inspection.

SRT SET TIMING

SRT is set as "CMPLT" after self-diagnosis has been performed one or more times. Completion of SRT is done regardless of whether the result is OK or NG. The set timing is different between OK and NG results and is shown in the table below.

				Example			
Self-diagnosis result		Diagnosis	$\begin{array}{cccccccccccccccccccccccccccccccccccc$				
All OK	Case 1	P0400	OK (1)	—(1)	OK (2)	— (2)	
		P0402	OK (1)	— (1)	— (1)	OK (2)	
		P1402	OK (1)	OK (2)	— (2)	— (2)	
		SRT of EGR	"CMPLT"	"CMPLT"	"CMPLT"	"CMPLT"	
	Case 2	P0400	OK (1)	—(1)	— (1)	— (1)	
		P0402	— (0)	— (0)	OK (1)	— (1)	
		P1402	OK (1)	OK (2)	— (2)	— (2)	
		SRT of EGR	"INCMP"	"INCMP"	"CMPLT"	"CMPLT"	
NG exists	Case 3	P0400	OK	OK	_	_	
		P0402	_	_	_	_	
		P1402	NG	_	NG	NG (Consecutiv NG)	
		(1st trip) DTC	1st trip DTC	_	1st trip DTC	DTC (= MIL ON)	
		SRT of EGR	"INCMP"	"INCMP"	"INCMP"	"CMPLT"	

OK: Self-diagnosis is carried out and the result is OK.

NG: Self-diagnosis is carried out and the result is NG.

—: Self-diagnosis is not carried out.

When all SRT related self-diagnoses show OK results in a single cycle (Ignition OFF-ON-OFF), the SRT will indicate "CMPLT". \rightarrow Case 1 above

When all SRT related self-diagnoses show OK results through several different cycles, the SRT will indicate "CMPLT" at the time the respective self-diagnoses have at least one OK result. → Case 2 above

If one or more SRT related self-diagnoses show NG results in 2 consecutive cycles, the SRT will also indicate "CMPLT". \rightarrow Case 3 above

The table above shows that the minimum number of cycles for setting SRT as "INCMP" is the number one (1) for each self-diagnosis (Case 1 & 2) or the number two (2) for one of self-diagnoses (Case 3). However, in preparation for the state emissions inspection, it is unnecessary for each self-diagnosis to be executed twice (Case 3) for the following reasons:

- The SRT will indicate "CMPLT" at the time the respective self-diagnoses have one (1) OK result.
- The emissions inspection requires "CMPLT" of the SRT only with OK self-diagnosis results.
- During SRT driving pattern, the 1st trip DTC (NG) is detected prior to "CMPLT" of SRT and the self-diagnosis memory must be erased from the ECM after repair.
- If the 1st trip DTC is erased, all the SRT will indicate "INCMP".

NOTE:

SRT can be set as "CMPLT" together with the DTC(s). Therefore, DTC check must always be carried out prior to the state emission inspection even though the SRT indicates "CMPLT".

DIAGNOSIS DESCRIPTION: Malfunction Indicator Lamp (MIL)


When emission-related ECU detects a malfunction in the emission control systems components and/or the powertrain control components (which affect vehicle emissions), it turns on/blinks MIL to inform the driver that a malfunction has been detected.

1. The MIL illuminates when ignition switch is turned ON (engine is not running).

NOTE:

Check the MIL circuit if MIL does not illuminate. Refer to <u>EC-422</u>, "Component Function Check".

When the engine is started, the MIL should go off. NOTE:

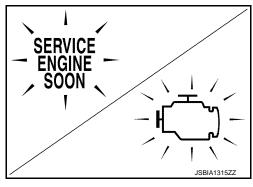

Α

EC

Е

F

G

Н

.

IZ.

ı

M

Ν

INFOID:0000000008450602

0

Р

Ρ

DIAGNOSIS SYSTEM (ECM) [MR18DE (EXCEPT FOR CALIFORNIA)]

< SYSTEM DESCRIPTION >

If MIL continues to illuminate/blink, perform self-diagnoses and inspect/repair accordingly because an emission-related ECU has detected a malfunction in the emission control systems components and/or the powertrain control components (which affect vehicle emissions).

On Board Diagnosis Function

INFOID:0000000008450603

ON BOARD DIAGNOSIS ITEM

The on board diagnostic system has the following functions.

Diagnostic test mode	Function
Bulb check	MIL can be checked.
SRT status	ECM can read if SRT codes are set.
Malfunction warning	If ECM detects a malfunction, it illuminates or blinks MIL to inform the driver that a malfunction has been detected.
Self-diagnostic results	DTCs or 1st trip DTCs stored in ECM can be read.
Accelerator pedal released position learning	ECM can learn the accelerator pedal released position. Refer to EC-24, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".
Throttle valve closed position learning	ECM can learn the throttle valve closed position. Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".
Idle air volume learning	ECM can learn the idle air volume. Refer to EC-25, "IDLE AIR VOLUME LEARNING : Special Repair Requirement".
Mixture ratio self-learning value clear	Mixture ratio self-learning value can be erased. Refer to <u>EC-26</u> , "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".

BULB CHECK MODE

Description

This function allows damage inspection in the MIL bulb (blown, open circuit, etc.).

Operation Procedure

- 1. Turn ignition switch ON.
- The MIL on the instrument panel should stay ON.
 If it remains OFF, check MIL circuit. Refer to <u>EC-422</u>, "<u>Diagnosis Procedure</u>".

SRT STATUS MODE


Description

This function allows to read if ECM has completed the self-diagnoses of major emission control systems and components. For SRT, refer to EC-112, "DIAGNOSIS DESCRIPTION: System Readiness Test (SRT) Code".

Operation Procedure

- 1. Turn ignition switch ON and wait 20 seconds.
- 2. SRT status is indicated as shown blow.
 - ECM continues to illuminate MIL if all SRT codes are set.

ECM blinks MIL for about 10 seconds if all SRT codes are not set.

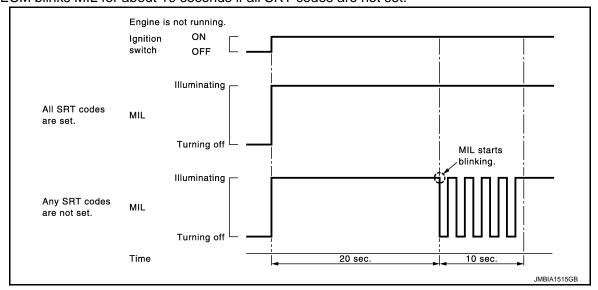

MALFUNCTION WARNING MODE

Description

In this function ECM turns on or blinks MIL when it detects a malfunction in the emission control system components and/or the powertrain control components (which affect vehicle emissions) to inform the driver that a malfunction has been detected.

Operation Procedure

- Turn ignition switch ON.
- Check that MIL illuminates. If it remains OFF, check MIL circuit. Refer to EC-422, "Diagnosis Procedure".
- Start engine and let it idle.
 - For two trip detection logic diagnoses, ECM turns on MIL when it detects the same malfunction twice in the two consecutive driving cycles.
 - For 1st trip detection logic diagnoses, ECM turns on MIL when it detects a malfunction in one driving
 - ECM blinks MIL when it detects a malfunction that may damage the three way catalyst (misfire).

SELF-DIAGNOSTIC RESULTS MODE

Description

This function allows to indicate DTCs or 1st trip DTCs stored in ECM according to the number of times MIL is blinking.

How to Set Self-diagnostic Results Mode

NOTE:

- It is better to count the time accurately with a clock.
- It is impossible to switch the diagnostic mode when an accelerator pedal position sensor circuit has a malfunction.
- After ignition switch is turned off, ECM is always released from the "self-diagnostic results" mode.
- Confirm that accelerator pedal is fully released, turn ignition switch ON and wait 3 seconds.
- Repeat the following procedure quickly five times within 5 seconds.
 - Fully depress the accelerator pedal.
 - Fully release the accelerator pedal.
- 3. Wait 7 seconds, fully depress the accelerator pedal and keep it depressed for approx. 10 seconds until the MIL starts blinking.

NOTE:

Do not release the accelerator pedal for 10 seconds if MIL starts blinking during this period. This blinking is displaying SRT status and is continued for another 10 seconds.

Fully release the accelerator pedal. ECM has entered to "Self-diagnostic results" mode.

EC-115 2013 CUBE Revision: 2012 August

Α

EC

F

Н


K

L

M

NOTE:


Wait until the same DTC (or 1st trip DTC) appears to completely confirm all DTCs.

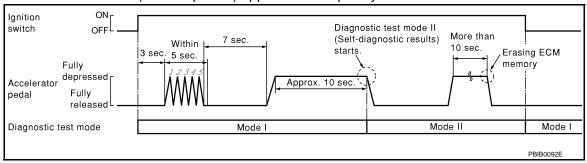

How to Read Self-diagnostic Results

The DTC and 1st trip DTC are indicated by the number of blinks of the MIL as shown below.

The DTC and 1st trip DTC are displayed at the same time. If the MIL does not illuminate in diagnostic test mode I (Malfunction warning), all displayed items are 1st trip DTCs. If only one code is displayed when the MIL illuminates in "malfunction warning" mode, it is a DTC; if two or more codes are displayed, they may be either DTCs or 1st trip DTCs. DTC No. is same as that of 1st trip DTC. These unidentified codes can be identified by using the CONSULT or GST. A DTC will be used as an example for how to read a code.

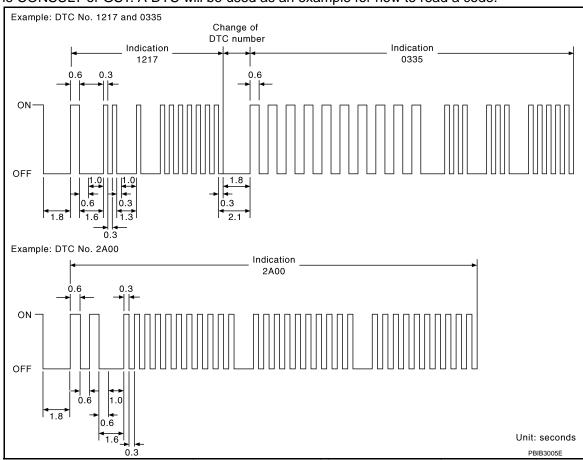

A particular trouble code can be identified by the number of four-digit numeral flashes per the following.

Number	0	1	2	3	4	5	6	7	8	9	Α	В	С	D	Е	F
Flashes	10	1	2	3	4	5	6	7	8	9	11	12	13	14	15	16

The length of time the 1,000th-digit numeral flashes on and off is 1.2 seconds consisting of an ON (0.6-seconds) - OFF (0.6-seconds) cycle.

The 100th-digit numeral and lower digit numerals consist of a 0.3-seconds ON and 0.3-seconds OFF cycle. A change from one digit numeral to another occurs at an interval of 1.0-second OFF. In other words, the later numeral appears on the display 1.3 seconds after the former numeral has disappeared.

A change from one trouble code to another occurs at an interval of 1.8-seconds OFF.

[MR18DE (EXCEPT FOR CALIFORNIA)]

< SYSTEM DESCRIPTION >

In this way, all the detected malfunctions are classified by their DTC numbers. The DTC 0000 refers to no malfunction. Refer to <u>EC-450</u>, "<u>DTC Index</u>".

How to Erase Self-diagnostic Results

By performing this procedure, ECM memory is erased and the following diagnostic information is erased as well.

- Diagnostic trouble codes
- 1st trip diagnostic trouble codes
- · Freeze frame data
- 1st trip freeze frame data
- · System readiness test (SRT) codes
- Test values

NOTE:

Also, if a battery terminal is disconnected, ECM memory is erased and the diagnostic information as listed above is erased. (The amount of time required for erasing may vary from a few seconds to several hours.)

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 5. Set ECM in "self-diagnostic results" mode.
- 6. The diagnostic information has been erased from the backup memory in the ECM. Fully depress the accelerator pedal and keep it depressed for more than 10 seconds.
- 7. Fully release the accelerator pedal, and confirm the DTC 0000 is displayed.

CONSULT Function

INFOID:0000000008450604

Α

EC

D

Е

F

Ν

Р

FUNCTION

Diagnostic test mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on the CONSULT screen.
Self diagnostic result	Self-diagnostic results such as 1st trip DTC, DTCs and 1st trip freeze frame data or freeze frame data can be read and erased quickly.*
Data monitor	Input/Output data in the ECM can be read.
Active test	Diagnostic Test Mode in which CONSULT drives some actuators apart from the ECMs and also shifts some parameters in a specified range.
DTC & SRT confirmation	The status of system monitoring tests and the self-diagnosis status/results can be confirmed.
ECU Identification	ECM part number can be read.

^{*:} The following emission-related diagnostic information is cleared when the ECM memory is erased.

- · Diagnostic trouble codes
- 1st trip diagnostic trouble codes
- Freeze frame data
- · 1st trip freeze frame data
- · System readiness test (SRT) codes
- Test values

WORK SUPPORT MODE

Work Item

Work item	Condition	Usage
FUEL PRESSURE RELEASE	Fuel pump will stop by touching "START" during idling. Crank a few times after engine stalls.	When releasing fuel pressure from fuel line
IDLE AIR VOL LEARN	The idle air volume that keeps the engine within the specified range is memorized in ECM.	When learning the idle air volume

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Work item	Condition	Usage
SELF-LEARNING CONT	The coefficient of self-learning control mixture ratio returns to the original coefficient.	When clearing mixture ratio self- learning value
EVAP SYSTEM CLOSE	Close the EVAP canister vent control valve in order to make EVAP system close under the following conditions. Ignition switch ON Engine not running Ambient temperature is above 0°C (32°F). No vacuum and no high pressure in EVAP system Fuel tank temp. is more than 0°C (32°F). Within 10 minutes after starting "EVAP system close" When trying to execute "EVAP system close" under the condition except above, CONSULT will discontinue it and display appropriate instruction. NOTE: When starting engine, CONSULT may display "Battery voltage is low. Charge battery", even in using charged battery.	When detecting EVAP vapor leak point of EVAP system
VIN REGISTRATION	In this mode, VIN is registered in ECM.	When registering VIN in ECM
TARGET IDLE RPM ADJ*	Idle condition	When setting target idle speed
TARGET IGN TIM ADJ*	Idle condition	When adjusting target ignition timing
CLSD THL POS LEARN	Ignition on and engine stopped.	When learning the throttle valve closed position

^{*:} This function is not necessary in the usual service procedure.

SELF DIAGNOSTIC RESULT MODE

Self Diagnostic Item

Regarding items of DTC and 1st trip DTC, refer to EC-450, "DTC Index".

How to Read DTC and 1st Trip DTC

DTCs and 1st trip DTCs related to the malfunction are displayed in "self-diag results".

- When ECM detects a 1st trip DTC, "1t" is displayed for "TIME".
- When ECM has detected a current DTC, "0" is displayed for "TIME".
- If "TIME" is neither "0" nor "1t", the DTC occurred in the past and ECM shows the number of times the vehicle has been driven since the last detection of the DTC.

How to Erase DTC and 1st Trip DTC

NOTE:

- If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
- If the DTC is not for CVT related items (see EC-450, "DTC Index"), skip step 1.
- 1. Erase DTC in TCM. Refer to TM-179, "DTC Index".
- Select "ENGINE" with CONSULT.
- Select "SELF-DIAG RESULTS".
- 4. Touch "ERASE". (DTC in ECM will be erased.)

Freeze Frame Data and 1st Trip Freeze Frame Data

Freeze frame data item*	Description		
DTC	The engine control component part/control system has a trouble code that is displayed as DTC. (Refer to EC-450, "DTC_Index".)		
FUEL SYS-B1	"Fuel injection system status" at the moment a malfunction is detected is displayed. One mode in the following is displayed. Mode2: Open loop due to detected system malfunction Mode3: Open loop due to driving conditions (power enrichment, deceleration enleanment) Mode4: Closed loop - using oxygen sensor(s) as feedback for fuel control Mode5: Open loop - has not yet satisfied condition to go to closed loop		
CAL/LD VALUE [%]	The calculated load value at the moment a malfunction is detected is displayed.		
COOLANT TEMP [°C] or [°F]	The engine coolant temperature at the moment a malfunction is detected is displayed.		

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Freeze frame data item*	Description	
L-FUEL TRM-B1 [%]	 "Long-term fuel trim" at the moment a malfunction is detected is displayed. The long-term fuel trim indicates much more gradual feedback compensation to the base fue schedule than short-term fuel trim. 	
S-FUEL TRM-B1 [%]	 "Short-term fuel trim" at the moment a malfunction is detected is displayed. The short-term fuel trim indicates dynamic or instantaneous feedback compensation to the base fuel schedule. 	
ENGINE SPEED [rpm]	The engine speed at the moment a malfunction is detected is displayed.	
VEHICL SPEED [km/h] or [mph]	The vehicle speed at the moment a malfunction is detected is displayed.	
ABSOL TH-P/S [%]	The throttle valve opening angle at the moment a malfunction is detected is displayed.	
B/FUEL SCHDL [msec]	The base fuel schedule at the moment a malfunction is detected is displayed.	
INT/A TEMP SE [°C] or [°F]	The intake air temperature at the moment a malfunction is detected is displayed.	
FUEL SYS-B2		
L-FUEL TRM-B2 [%]		
S-FUEL TRM-B2 [%]	These items displayed but are not applicable to this model.	
INT MANI PRES [kPa]		
COMBUST CONDITION		

^{*:} The items are the same as those of 1st trip freeze frame data.

DATA MONITOR MODE

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitored Item

For reference values of the following items, refer to EC-432. "Reference Value".

Monitored item	Unit	Description	Remarks
ENG SPEED	rpm	Indicates the engine speed computed from the signal of the crankshaft position sensor (POS) and camshaft position sensor (PHASE).	 Accuracy becomes poor if engine speed drops below the idle rpm. If the signal is interrupted while the engine is running, an abnormal value may be indicated.
MAS A/F SE-B1	V	The signal voltage of the mass air flow sensor is displayed.	 When the engine is stopped, a certain value is indicated. When engine is running specification range is indicated in "SPEC".
B/FUEL SCHDL	ms	"Base fuel schedule" indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction.	When engine is running specifica- tion range is indicated in "SPEC".
A/F ALPHA-B1	%	The mean value of the air-fuel ratio feedback correction factor per cycle is indicated.	 When the engine is stopped, a certain value is indicated. This data also includes the data for the air-fuel ratio learning control. When engine is running specification range is indicated in "SPEC".
COOLANT TEMP/S	°C or °F	The engine coolant temperature (determined by the signal voltage of the engine coolant temperature sensor) is displayed.	When the engine coolant tempera- ture sensor is open or short-cir- cuited, ECM enters fail-safe mode. The engine coolant temperature determined by the ECM is dis- played.
A/F SEN1 (B1)	V	The A/F signal computed from the input signal of the air fuel ratio (A/F) sensor 1 is displayed.	

Revision: 2012 August EC-119 2013 CUBE

Α

D

Е

F

G

Н

. .

J

L

K

/

Ν

Р

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Monitored item	Unit	Description	Remarks
HO2S2 (B1)	V	 The signal voltage of the heated oxygen sensor 2 is displayed. 	
HO2S2 MNTR(B1)	RICH/LEAN	Display of heated oxygen sensor 2 signal: RICH: means the amount of oxygen after three way catalyst is relatively small. LEAN: means the amount of oxygen after three way catalyst is relatively large.	When the engine is stopped, a certain value is indicated.
VHCL SPEED SE	km/h or mph	The vehicle speed computed from the vehicle speed signal sent from combination meter is displayed.	
BATTERY VOLT	V	The power supply voltage of ECM is displayed.	
ACCEL SEN 1		The accelerator pedal position sensor signal voltage is	ACCEL SEN 2 signal is converted
ACCEL SEN 2	V	displayed.	by ECM internally. Thus, it differs from ECM terminal voltage signal.
TP SEN 1-B1		The throttle position sensor signal voltage is dis-	TP SEN 2-B1 signal is converted
TP SEN 2-B1	V	played.	by ECM internally. Thus, it differs from ECM terminal voltage signal.
FUEL T/TMP SE	°C or °F	The fuel temperature (determined by the signal voltage of the fuel tank temperature sensor) is displayed.	
INT/A TEMP SE	°C or °F	 The intake air temperature (determined by the signal voltage of the intake air temperature sensor) is indicated. 	
EVAP SYS PRES	V	The signal voltage of EVAP control system pressure sensor is displayed.	
FUEL LEVEL SE	V	The signal voltage of the fuel level sensor is displayed.	
START SIGNAL	ON/OFF	 Indicates start signal status [ON/OFF] computed by the ECM according to the signals of engine speed and battery voltage. 	After starting the engine, [OFF] is displayed regardless of the starter signal.
CLSD THL POS	ON/OFF	 Indicates idle position [ON/OFF] computed by ECM according to the accelerator pedal position sensor sig- nal. 	
AIR COND SIG	ON/OFF	Indicates [ON/OFF] condition of the air conditioner switch determined by the air conditioner ON signal.	
P/N POSI SW	ON/OFF	 Indicates [ON/OFF] condition from the park/neutral position (PNP) switch signal (M/T models) or Trans- mission range switch signal (CVT models). 	
PW/ST SIGNAL	ON/OFF	• [ON/OFF] condition of the power steering system (determined by the signal sent from EPS control unit) is indicated.	
LOAD SIGNAL	ON/OFF	Indicates [ON/OFF] condition from the electrical load signal. ON: Rear window defogger switch is ON and/or lighting switch is in 2nd position. OFF: Both rear window defogger switch and lighting switch are OFF.	
IGNITION SW	ON/OFF	Indicates [ON/OFF] condition from ignition switch signal.	
HEATER FAN SW	ON/OFF	 Indicates [ON/OFF] condition from the heater fan switch signal. 	
BRAKE SW	ON/OFF	 Indicates [ON/OFF] condition from the stop lamp switch signal. 	
INJ PULSE-B1	msec	Indicates the actual fuel injection pulse width compensated by ECM according to the input signals.	When the engine is stopped, a certain computed value is indicat- ed.
		Indicates the ignition timing computed by ECM ac-	When the engine is stopped, a

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Monitored item	Unit	Description	Remarks	^
CAL/LD VALUE	%	"Calculated load value" indicates the value of the current air flow divided by peak air flow.		A
MASS AIRFLOW	g/s	Indicates the mass air flow computed by ECM according to the signal voltage of the mass air flow sensor.		EC
PURG VOL C/V	%	 Indicates the EVAP canister purge volume control solenoid valve control value computed by the ECM according to the input signals. The opening becomes larger as the value increases. 		С
INT/V TIM(B1)	°CA	Indicates [°CA] of intake camshaft advance angle.		-
INT/V SOL(B1)	%	 The control value of the intake valve timing control solenoid valve (determined by ECM according to the input signals) is indicated. The advance angle becomes larger as the value increases. 		D E
AIR COND RLY	ON/OFF	The air conditioner relay control condition (determined by ECM according to the input signals) is indicated.		
FUEL PUMP RLY	ON/OFF	Indicates the fuel pump relay control condition determined by ECM according to the input signals.		F
VENT CONT/V	ON/OFF	The control condition of the EVAP canister vent control valve (determined by ECM according to the input signals) is indicated. ON: Closed OFF: Open		G
THRTL RELAY	ON/OFF	Indicates the throttle control motor relay control condition determined by the ECM according to the input signals.		. !!
COOLING FAN	HI/LOW/ OFF	Indicates the condition of the cooling fan (determined by ECM according to the input signals). HI: High speed operation LOW: Low speed operation OFF: Stop		J
HO2S2 HTR (B1)	ON/OFF	 Indicates [ON/OFF] condition of heated oxygen sensor 2 heater determined by ECM according to the input signals. 		K
I/P PULLY SPD	rpm	Indicates the engine speed computed from the input shaft revolution signal.		
VEHICLE SPEED	km/h or mph	The vehicle speed computed from the vehicle speed signal sent from TCM is displayed.		· L
IDL A/V LEARN	YET/CMPLT	Display the condition of Idle Air Volume Learning YET: Idle air volume learning has not been performed yet. CMPLT: Idle air volume learning has already been performed successfully.		M
TRVL AFTER MIL	km or mile	Distance traveled while MIL is activated.		
A/F S1 HTR(B1)	%	 Air fuel ratio (A/F) sensor 1 heater control value computed by ECM according to the input signals. The current flow to the heater becomes larger as the value increases. 		0
AC PRESS SEN	V	The signal voltage from the refrigerant pressure sensor is displayed.		Р
A/F ADJ-B1	_	Indicates the correction of factor stored in ECM. The factor is calculated from the difference between the target air-fuel ratio stored in ECM and the air-fuel ratio calculated from A/F sensor 1 signal.		
BUT CUR SEN	mV	The signal voltage of battery current sensor is displayed.		

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Monitored item	Unit	Description	Remarks
ALT DUTY SIG	ON/OFF	The control condition of the power generation voltage variable control (determined by ECM according to the input signals) is indicated. ON: Power generation voltage variable control is active. OFF: Power generation voltage variable control is inactive.	
ALT DUTY	%	 Indicates the duty ratio of the power generation com- mand value. The ratio is calculated by ECM based on the battery current sensor signal. 	
VHCL SPEED SE	km/h or mph	The vehicle speed computed from the vehicle speed signal sent from combination meter is displayed.	
SET VHCL SPD	km/h or mph	The preset vehicle speed is displayed.	
MAIN SW	ON/OFF	 Indicates [ON/OFF] condition from MAIN switch signal. 	
CANCEL SW	ON/OFF	 Indicates [ON/OFF] condition from CANCEL switch signal. 	
RESUME/ACC SW	ON/OFF	 Indicates [ON/OFF] condition from RESUME/ACC switch signal. 	
SET SW	ON/OFF	Indicates [ON/OFF] condition from SET switch signal.	
BRAKE SW1	ON/OFF	 Indicates [ON/OFF] condition from ASCD brake switch signal and ASCD clutch switch signal (M/T models). 	
BRAKE SW2	ON/OFF	Indicates [ON/OFF] condition of stop lamp switch signal.	
VHCL SPD CUT	NON/CUT	Indicates the vehicle cruse condition. NON: Vehicle speed is maintained at the ASCD set speed. CUT: Vehicle speed decreased to excessively low compared with the ASCD set speed, and ASCD operation is cut off.	
LO SPEED CUT	NON/CUT	Indicates the vehicle cruse condition. NON: Vehicle speed is maintained at the ASCD set speed. CUT: Vehicle speed decreased to excessively low and ASCD operation is cut off.	
AT OD MONITOR	ON/OFF	• Indicates [ON/OFF] condition of CVT O/D according to the input signal from the TCM.	
AT OD CANCEL	ON/OFF	Indicates [ON/OFF] condition of CVT O/D cancel request signal from the TCM.	
CRUISE LAMP	ON/OFF	Indicates [ON/OFF] condition of CRUISE lamp determined by the ECM according to the input signals.	
SET LAMP	ON/OFF	Indicates [ON/OFF] condition of SET lamp determined by the ECM according to the input signals.	
THRTL STK CNT B1*	_	_	
EVAP LEAK DIAG	YET/CMPLT	 Indicates the condition of EVAP leak diagnosis. YET: EVAP leak diagnosis has not been performed yet. CMPLT: EVAP leak diagnosis has been performed successfully. 	
EVAP DIAG READY	ON/OFF	 Indicates the ready condition of EVAP leak diagnosis. ON: Diagnosis has been ready condition. OFF: Diagnosis has not been ready condition. 	

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Α

D

Е

Monitored item	Unit	Description	Remarks
HO2 S2 DIAG1 (B1)	INCMP/CM- PLT	Indicates DTC P0139 self-diagnosis (delayed response) condition. INCMP: Self-diagnosis is incomplete. CMPLT: Self-diagnosis is complete.	
HO2 S2 DIAG2 (B1)	INCMP/CM- PLT	Indicates DTC P0139 self-diagnosis (slow response) condition. INCMP: Self-diagnosis is incomplete. CMPLT: Self-diagnosis is complete.	
A/F SEN1 DIAG2(B1)	INCMP/CM- PLT	Indicates DTC P014C or P014D self-diagnosis condition. INCMP: Self-diagnosis is incomplete. CMPLT: Self-diagnosis is complete.	
A/F SEN1 DIAG3(B1)	ABSNT/ PRSNT	Indicates DTC P014C, P014D, P015A or P015B self-diagnosis condition. ABSNT: The vehicle condition is not within the diagnosis range. PRSNT: The vehicle condition is within the diagnosis range. Output Description:	
SYSTEM 1 DIAG- NOSIS A B1	INCMP/CM- PLT	Indicates DTC P117A self-daiagnosis condition. INCMP: Self-diagnosis is incomplete. CMPLT: Self-diagnosis is complete.	
SYSTEM 1 DIAG- NOSIS B B1	ABSENT/ PRSENT	Indicates DTC P117A self-daiagnosis condition. ABSENT: Self-diagnosis standby PRSENT: Under self-diagnosis	

^{*:} The item is indicated, but not used.

NOTE:

Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.

ACTIVE TEST MODE

Test Item

Test item	Condition	Judgment	Check item (Remedy)	
FUEL INJECTION	 Engine: Return to the original trouble condition Change the amount of fuel injection using CONSULT. 	If trouble symptom disappears, see CHECK ITEM.	Harness and connectors Fuel injector Air fuel ratio (A/F) sensor 1	K
IGNITION TIMING	 Engine: Return to the original trouble condition Timing light: Set Retard the ignition timing using CONSULT. 	If trouble symptom disappears, see CHECK ITEM.	Perform Idle Air Volume Learning.	L
POWER BALANCE	 Engine: After warming up, idle the engine. A/C switch OFF Selector lever: P or N position (CVT), Neutral position (M/T) Cut off each fuel injector signal one at a time using CONSULT. 	Engine runs rough or dies.	Harness and connectors Compression Fuel injector Power transistor Spark plug Ignition coil	N
COOLING FAN*	Ignition switch: ON Turn the cooling fan "LOW", "HI" and "OFF" using CONSULT.	Cooling fan moves and stops.	Harness and connectors IPDM E/R (Cooling fan relay) Cooling fan motor	Р
ENG COOLANT TEMP	 Engine: Return to the original trouble condition Change the engine coolant tem- perature using CONSULT. 	If trouble symptom disappears, see CHECK ITEM.	Harness and connectors Engine coolant temperature sensor Fuel injector	

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Test item	Condition	Judgment	Check item (Remedy)
FUEL PUMP RELAY	 Ignition switch: ON (Engine stopped) Turn the fuel pump relay "ON" and "OFF" using CONSULT and listen to operating sound. 	Fuel pump relay makes the operating sound.	Harness and connectors Fuel pump relay
PURG VOL CONT/V	 Engine: After warming up, run engine at 1,500 rpm. Change the EVAP canister purge volume control solenoid valve opening percent using CONSULT. 	Engine speed changes according to the opening percent.	Harness and connectors Solenoid valve
FUEL/T TEMP SEN	Change the fuel tank temperature	e using CONSULT.	
VENT CONTROL/V	 Ignition switch: ON (Engine stopped) Turn solenoid valve "ON" and "OFF" using the CONSULT and listen to operating sound. 	Solenoid valve makes an operating sound.	Harness and connectors Solenoid valve
V/T ASSIGN ANGLE	 Engine: Return to the original trouble condition Change intake valve timing us- ing CONSULT. 	If trouble symptom disappears, see CHECK ITEM.	Harness and connectors Intake valve timing control solenoid valve
ALTERNATOR DUTY	Engine: idle.Change duty ratio using CON- SULT.	Battery voltage charges.	Harness and connectors IPDM E/R Alternator

^{*:} Leaving cooling fan OFF with CONSULT while engine is running may cause the engine to overheat.

DTC & SRT CONFIRMATION MODE

SRT STATUS Mode

- For items whose SRT codes are set, "CMPLT" is displayed on the CONSULT screen; for items whose SRT codes are not set, "INCMP" is displayed.
- "SRT STATUS" provides the presence or absence of permanent DTCs stored in ECM memory.

PERMANENT DTC STATUS Mode

How to display permanent DTC status

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 5. Select "PERMANENT DTC STATUS" in "DTC & SRT CONFIRMATION" mode with CONSULT.

NOTE:

Permanent DTCs stored in ECM memory are displayed on the CONSULT screen to show if a driving pattern required for erasing permanent DTCs is complete (CMPLT) or incomplete (INCMP).

CAUTION:

< SYSTEM DESCRIPTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Since the "PERMANENT DTC STATUS" screen displays the previous trip information, repeat the following twice to update the information: "Ignition switch OFF", "Wait for more than 10 seconds" and "Ignition switch ON".

CAUTION: Turn ignition switch from O status screen.	N to OFF twice to update the informa	ation on the
PERMANENT DTC	DRIVING PATTERN B	DRIVING PATTERN D
xxxx	INCMP	INCMP
xxxx	CMPLT	INCMP
xxxx	INCMP	CMPLT
xxxx	CMPLT	INCMP
XXXX	INCMP	INCMP
XXXX	INCMP	INCMP

JSBIA0062GB

NOTE:

This mode is not used in regions that permanent DTCs are not regulated by law.

SRT WORK SUPPORT Mode

This mode enables a technician to drive a vehicle to set the SRT while monitoring the SRT status.

PERMANENT DTC WORK SUPPORT Mode

This mode enables a technician to drive a vehicle to complete the driving pattern that is required for erasing permanent DTC.

NOTE:

This mode is not used in regions that permanent DTCs are not regulated by law.

DTC WORK SUPPORT Mode

Test mode	Test item	Corresponding DTC No.	Reference page
	EVP V/S LEAK P0456/P1456*	P0456	EC-296
EVAPORATIVE SYSTEM	PURG VOL CN/V P1444	P0443	EC-265
	PURG FLOW P0441	P0441	EC-259
A/F SEN1	A/F SEN1 (B1) P1278/P1279	_	_
	A/F SEN1 (B1) P1276	P0130	EC-185
	HO2S2 (B1) P1146	P0138	EC-201
HO2S2	HO2S2 (B1) P1147	P0137	EC-195
	HO2S2 (B1) P139	P0139	EC-209

^{*:} DTC P1442, P1456 does not apply to this model but appears in DTC Work Support Mode screens.

EC

Е

D

F

G

Н

J

K

L

M

_

Ν

Р

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

DTC/CIRCUIT DIAGNOSIS

TROUBLE DIAGNOSIS - SPECIFICATION VALUE

Description INFOID:000000008450605

The specification (SP) value indicates the tolerance of the value that is displayed in "SPEC" of "DATA MONITOR" mode of CONSULT during normal operation of the Engine Control System. When the value in "SPEC" of "DATA MONITOR" mode is within the SP value, the Engine Control System is confirmed OK. When the value in "SPEC" of "DATA MONITOR" mode is NOT within the SP value, the Engine Control System may have one or more malfunctions.

The SP value is used to detect malfunctions that may affect the Engine Control System, but will not light the MIL.

The SP value will be displayed for the following three items:

- B/FUEL SCHDL (The fuel injection pulse width programmed into ECM prior to any learned on board correction)
- A/F ALPHA-B1 (The mean value of air-fuel ratio feedback correction factor per cycle)
- MAS A/F SE-B1 (The signal voltage of the mass air flow sensor)

Component Function Check

INFOID:0000000008450606

1.START

Make sure that all of the following conditions are satisfied.

- Vehicle driven distance: More than 5,000 km (3,107 miles)
- Barometric pressure: 98.3 104.3 kPa (1.003 1.064 kg/cm², 14.25 15.12 psi)
- Atmospheric temperature: 20 30°C (68 86°F)
- Engine coolant temperature: 75 95°C (167 203°F)
- Transmission: Warmed-up
- CVT models: After the engine is warmed up to normal operating temperature, drive vehicle until "FLUID TEMP SE" (CVT fluid temperature sensor signal) indicates more than 60°C (140°F).
- M/T models: After the engine is warmed up to normal operating temperature, drive vehicle for 5 minutes.
- Electrical load: Not applied
- Rear window defogger switch, air conditioner switch, lighting switch are OFF. Steering wheel is straight ahead.
- · Engine speed: Idle

>> GO TO 2.

2.PERFORM "SPEC" OF "DATA MONITOR" MODE

(P)With CONSULT

NOTE:

Perform "SPEC" in "DATA MONITOR" mode in maximum scale display.

- 1. Perform EC-19, "BASIC INSPECTION: Special Repair Requirement".
- Select "B/FUEL SCHDL", "A/F ALPHA-B1" and "MAS A/F SE-B1" in "SPEC" of "DATA MONITOR" mode with CONSULT.
- 3. Make sure that monitor items are within the SP value.

Is the inspection result normal?

YES >> END

NO >> Go to EC-127, "Diagnosis Procedure".

< DTC/CIRCUIT DIAGNOSIS >


[MR18DE (EXCEPT FOR CALIFORNIA)]

Diagnosis Procedure


INFOID:0000000008450607

Α

OVERALL SEQUENCE

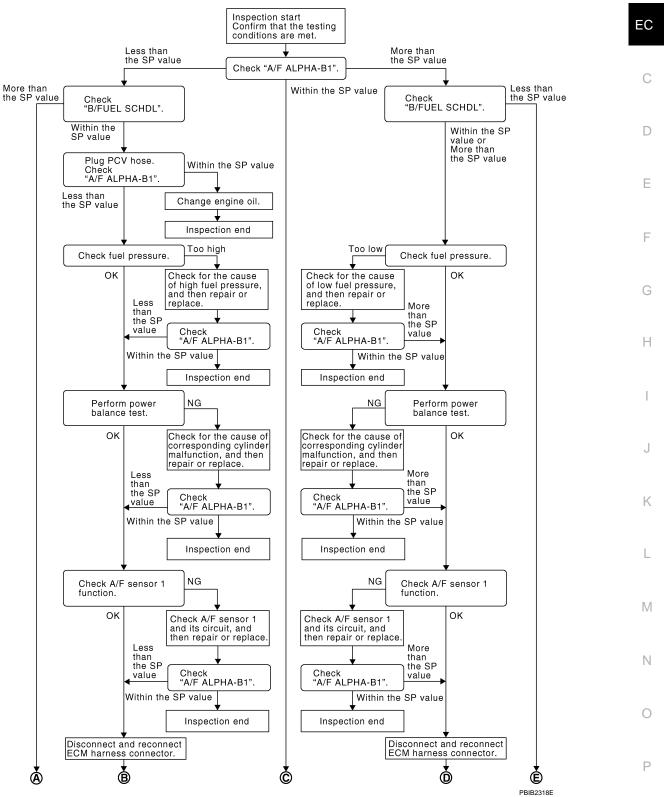

[MR18DE (EXCEPT FOR CALIFORNIA)]

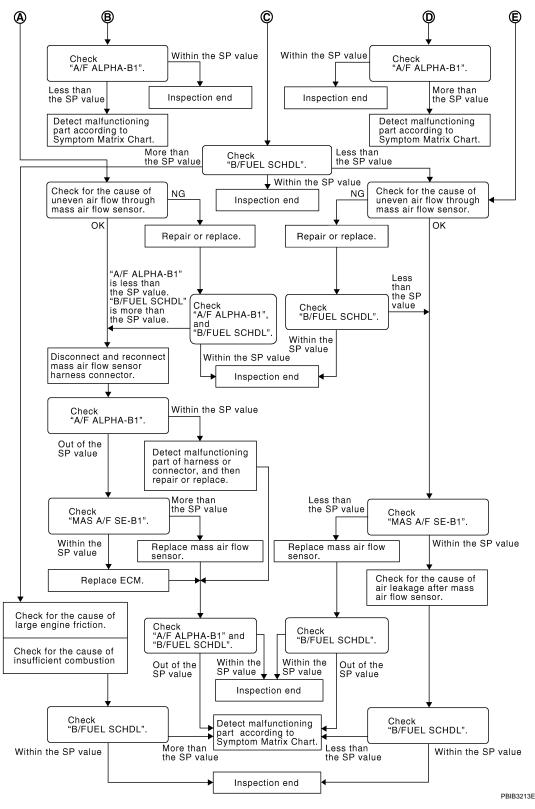

DETAILED PROCEDURE

1.CHECK "A/F ALPHA-B1"

(I) With CONSULT

- Start engine
- Confirm that the testing conditions are met. Refer to <u>EC-126, "Component Function Check"</u>.
- 3. Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

NOTE:

Check "A/F ALPHA-B1" for approximately 1 minute because it may fluctuate. It is NG if the indication is out of the SP value even a little.

Is the measurement value within the SP value?

>> GO TO 17. YES

NO-1 >> Less than the SP value: GO TO 2.

NO-2 >> More than the SP value: GO TO 3.

2.CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> GO TO 4.

NO >> More than the SP value: GO TO 19.

3.CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> GO TO 6.

NO-1 >> More than the SP value: GO TO 6.

NO-2 >> Less than the SP value: GO TO 25.

4.CHECK "A/F ALPHA-B1"

Stop the engine.

Disconnect PCV hose, and then plug it. 2.

Start engine. 3.

Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> GO TO 5.

NO >> GO TO 6.

5. CHANGE ENGINE OIL

Stop the engine.

2. Change engine oil.

NOTE:

This symptom may occur when a large amount of gasoline is mixed with engine oil because of driving conditions (such as when engine oil temperature does not rise enough since a journey distance is too short during winter). The symptom will not be detected after changing engine oil or changing driving condition.

>> INSPECTION END

$\mathbf{6}.$ CHECK FUEL PRESSURE

Check fuel pressure. (Refer to EC-473, "Inspection".)

Is the inspection result normal?

YES >> GO TO 9.

NO-1 >> Fuel pressure is too high: Replace "fuel filter and fuel pump assembly" and then GO TO 8.

NO-2 >> Fuel pressure is too low: GO TO 7.

.DETECT MALFUNCTIONING PART

Check fuel hoses and fuel tubes for clogging

Is the inspection result normal?

YES >> Replace "fuel filter and fuel pump assembly" and then GO TO 8.

NO >> Repair or replace and then GO TO 8.

 $oldsymbol{8}.$ CHECK "A/F ALPHA-B1"

EC-129 Revision: 2012 August 2013 CUBE

EC

D

Е

F

M

Ν

Р

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- Start engine.
- Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> GO TO 9.

9.PERFORM POWER BALANCE TEST

- Perform "POWER BALANCE" in "ACTIVE TEST" mode.
- Make sure that the each cylinder produces a momentary engine speed drop.

Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 10.

10.detect malfunctioning part

Check the following.

- Ignition coil and its circuit (Refer to EC-417, "Component Function Check".)
- Fuel injector and its circuit (Refer to EC-411, "Component Function Check".)
- Intake air leakage
- Low compression pressure (Refer to EM-21, "Inspection".)

Is the inspection result normal?

YES >> Replace fuel injector and then GO TO 11.

NO >> Repair or replace malfunctioning part and then GO TO 11.

11. CHECK "A/F ALPHA-B1"

- Start engine.
- Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> GO TO 12.

12.CHECK A/F SENSOR 1 FUNCTION

Perform all DTC CONFIRMATION PROCEDURE related with A/F sensor 1.

- For DTC P0130, refer to <u>EC-185, "DTC Logic"</u>.
 For DTC P0131, refer to <u>EC-189, "DTC Logic"</u>.
- For DTC P0132, refer to <u>EC-192, "DTC Logic"</u>.
- For DTC P014C, P014D, P015A and P015B, refer to <u>EC-215, "DTC Logic"</u>.
- For DTC P2096, P2097, refer to <u>EC-373, "DTC Logic"</u>.

Is any DTC detected?

YES >> GO TO 15.

NO >> GO TO 13.

13. CHECK A/F SENSOR 1 CIRCUIT

Perform DIAGNOSTIC PROCEDURE according to corresponding DTC.

>> GO TO 14.

14.CHECK "A/F ALPHA-B1"

- 1. Start engine.
- Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

>> GO TO 15. NO

15. DISCONNECT AND RECONNECT ECM HARNESS CONNECTOR

Stop the engine.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- 2. Disconnect ECM harness connector.
- 3. Check pin terminal and connector for damage, and then reconnect it.

>> GO TO 16.

16.CHECK "A/F ALPHA-B1"

EC

D

F

K

N

Р

Α

- 1. Start engine.
- Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> Detect malfunctioning part according to EC-461, "Symptom Table".

17. CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO-1 >> More than the SP value: GO TO 18.

NO-2 >> Less than the SP value: GO TO 25.

18.detect malfunctioning part

- 1. Check for the cause of large engine friction. Refer to the following.
- Engine oil level is too high
- Engine oil viscosity
- Belt tension of power steering, alternator, A/C compressor, etc. is excessive
- Noise from engine
- Noise from transmission, etc.
- 2. Check for the cause of insufficient combustion. Refer to the following.
- Valve clearance malfunction
- Intake valve timing control function malfunction
- Camshaft sprocket installation malfunction, etc.

>> Repair or replace malfunctioning part, and then GO TO 30.

19. CHECK INTAKE SYSTEM

Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.

- Crushed air ducts
- Malfunctioning seal of air cleaner element
- Uneven dirt of air cleaner element
- · Improper specification of intake air system

Is the inspection result normal?

YES >> GO TO 21.

NO >> Repair or replace malfunctioning part, and then GO TO 20.

20.CHECK "A/F ALPHA-B1", AND "B/FUEL SCHDL"

Select "A/F ALPHA-B1" and "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that each indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> "B/FUEL SCHDL" is more, "A/F ALPHA-B1" is less than the SP value: GO TO 21.

21.disconnect and reconnect mass air flow sensor harness connector

- Stop the engine.
- 2. Disconnect mass air flow sensor harness connector.
- 3. Check pin terminal and connector for damage and then reconnect it again.

>> GO TO 22.

[MR18DE (EXCEPT FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

- 22.CHECK "A/F ALPHA-B1"
- Start engine.
 Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> Detect malfunctioning part of mass air flow sensor circuit and repair it. Refer to EC-152, "DTC Logic". Then GO TO 29.

NO >> GO TO 23.

23. CHECK "MAS A/F SE-B1"

Select "MAS A/F SE-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> GO TO 24.

NO >> More than the SP value: Replace mass air flow sensor, and then GO TO 29.

24.REPLACE ECM

- 1. Replace ECM.
- 2. Perform <u>EC-22</u>, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement".

>> GO TO 29.

25. CHECK INTAKE SYSTEM

Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.

- Crushed air ducts
- · Malfunctioning seal of air cleaner element
- · Uneven dirt of air cleaner element
- · Improper specification of intake air system

Is the inspection result normal?

YES >> GO TO 27.

NO >> Repair or replace malfunctioning part, and then GO TO 26.

26.check "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> Less than the SP value: GO TO 27.

27.CHECK "MAS A/F SE-B1"

Select "MAS A/F SE-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> GO TO 28.

NO >> Less than the SP value: Replace mass air flow sensor, and then GO TO 30.

28. CHECK INTAKE SYSTEM

Check for the cause of air leak after the mass air flow sensor. Refer to the following.

- · Disconnection, looseness, and cracks in air duct
- · Looseness of oil filler cap
- · Disconnection of oil level gauge
- Open stuck, breakage, hose disconnection, or cracks of PCV valve
- Disconnection or cracks of EVAP purge hose, open stuck of EVAP canister purge volume control solenoid valve
- Malfunctioning seal of rocker cover gasket
- Disconnection, looseness, or cracks of hoses, such as vacuum hose, connecting to intake air system parts

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

• Malfunctioning seal of intake air system, etc.

>> GO TO 30.

29.CHECK "A/F ALPHA-B1" AND "B/FUEL SCHDL"

Select "A/F ALPHA-B1" and "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that each indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> Detect malfunctioning part according to EC-461, "Symptom Table".

30. CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and then make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> Detect malfunctioning part according to EC-461, "Symptom Table".

С

Α

EC

Е

D

F

Н

J

K

M

L

Ν

U

Р

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000008450608

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK ECM GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Disconnect ECM harness connectors.
- 2. Check the continuity between ECM harness connector and ground.

E	CM	_		
Connector	Terminal	Ground	Continuity	
F7	11			
	107		Existed	
E16	108	Ground		
LIO	109			
	112			

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F1, E8
- · Harness for open or short between ECM and ground
 - >> Repair open circuit or short to power in harness or connectors.

4. CHECK ECM POWER SUPPLY CIRCUIT-I

- Reconnect ECM harness connectors.
- 2. Turn ignition switch ON.
- Check the voltage between ECM harness connector and ground.

E	CM	Ground	Voltage	
Connector Terminal		Ground	voltage	
E16	93	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 6. NO >> GO TO 5.

5.DETECT MALFUNCTIONING PART

Check the following.

- 15 A fuse (No. 62)
- Harness for open or short between ECM and fuse
 - >> Repair open circuit or short to ground or short to power in harness or connectors.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

EC

Е

Н

K

Ν

6. CHECK ECM POWER SUPPLY CIRCUIT-II

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON and then OFF.
- 3. Check the voltage between ECM harness connector and ground.

ECM		Ground	Voltage	
Connector	Terminal	Glound	voltage	
E16	105	Ground	After turning ignition switch OFF, battery voltage will exist for a few seconds, then drop approximately 0 V.	

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 9.

7. CHECK ECM POWER SUPPLY CIRCUIT-III

- 1. Turn ignition switch ON.
- 2. Check the voltage between IPDM E/R harness connector and ground.

IPDN	M E/R	Ground	Voltage	
Connector	Terminal	Glound	voltage	
E14	44	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace IPDM E/R. Refer to <u>PCS-33</u>, "Removal and Installation" (With I-KEY) or <u>PCS-62</u>, "Removal and Installation" (Without I-KEY).

8. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

9. CHECK ECM POWER SUPPLY CIRCUIT-IV

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Check the voltage between ECM harness connector and ground.

E	CM	Ground	Voltage
Connector	Connector Terminal		voltage
F7	32	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 13.

NO >> GO TO 10.

10.CHECK ECM POWER SUPPLY CIRCUIT-V

- 1. Disconnect ECM harness connector.
- 2. Disconnect IPDM E/R harness connector E14.
- 3. Check the continuity between ECM harness connector and IPDM E/R harness connector.

ECM		IPDM E/R		Continuity
Connector	Terminal	Connector Terminal		Continuity
F7	32	E14	40	Existed

^{4.} Also check harness for short to ground and short to power.

Is the inspection result normal?

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

YES >> GO TO 12. NO >> GO TO 11.

11. DETECT MALFUNCTIONING PART

Check the following.

- · Harness connectors E8, F1
- Harness for open or short between ECM and IPDM E/R
 - >> Repair open circuit or short to ground or short to power in harness or connectors.

12.CHECK FUSE

- 1. Disconnect 20 A fuse (No. 43) from IPDM E/R.
- 2. Check 20 A fuse.

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace 20 A fuse.

13. CHECK ECM POWER SUPPLY CIRCUIT-VI

- Disconnect ECM harness connector.
- 2. Disconnect IPDM E/R harness connector E14.
- Check the continuity between ECM harness connector and IPDM E/R harness connector.

ECM		IPDM E/R		Continuity
Connector	Terminal	Connector Terminal		Continuity
E16	105	E14	43	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 15. NO >> GO TO 14.

14. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- Harness for open or short between ECM and IPDM E/R
 - >> Repair open circuit or short to ground or short to power in harness or connectors.

15. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to <u>PCS-33, "Removal and Installation"</u> (With I-KEY) or <u>PCS-62, "Removal and Installation"</u> (Without I-KEY).

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

U0101 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

U0101 CAN COMM CIRCUIT

Description

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
U0101	Lost communication with TCM	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) with TCM for 2 seconds or more.	CAN communication line between TCM and ECM (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 3 seconds.
- Check DTC.

Is DTC detected?

YES >> EC-137, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

Go to LAN-13, "Trouble Diagnosis Flow Chart".

INFOID:0000000008450611

EC

Α

D

Е

Н

K

M

Ν

0

Р

U1001 CAN COMM CIRCUIT

[MR18DE (EXCEPT FOR CALIFORNIA)]

U1001 CAN COMM CIRCUIT

Description INFOID:000000008450612

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	
U1001	CAN communication line	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission related diagnosis) for 2 seconds or more.	Harness or connectors (CAN communication line is open or shorted)	

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 3 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> EC-138, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

Go to LAN-13, "Trouble Diagnosis Flow Chart".

INFOID:0000000008450614

[MR18DE (EXCEPT FOR CALIFORNIA)]

Α

EC

D

Е

Н

N

P0011 IVT CONTROL

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0011 is displayed with DTC P0075, first perform the trouble diagnosis for EC-320, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0011	Intake valve timing control performance	There is a gap between angle of target and phase-control angle degree.	 Crankshaft position sensor (POS) Camshaft position sensor (PHASE) Intake valve control solenoid valve Accumulation of debris to the signal pick-up portion of the camshaft Timing chain installation Foreign matter caught in the oil groove for intake valve timing control

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 10 V and 16 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE-I

With CONSULT

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Maintain the following conditions for at least 6 consecutive seconds. Hold the accelerator pedal as steady as possible.

ENG SPEED	1,200 - 2,000 rpm
COOLAN TEMP/S	More than 60°C (140°F)
B/FUEL SCHDL	More than 4.2 msec
Selector lever	P or N position (CVT) Neutral position (M/T)

- Stop vehicle with engine running and let engine idle for 10 seconds.
- Check 1st trip DTC.

⊕With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Go to EC-140, "Diagnosis Procedure".

NO >> GO TO 3.

3.perform dtc confirmation procedure-ii

(I) With CONSULT

Maintain the following conditions for at least 20 consecutive seconds.

ENG SPEED	1,200 - 3,175 rpm (A constant rotation is maintained.)	
COOLAN TEMP/S	More than 65°C (149°F)	

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Selector lever	1st or 2nd position
Driving location	Driving vehicle uphill (Increased engine load will help maintain the driving conditions required for this test.)

CAUTION:

Always drive at a safe speed.

Check 1st trip DTC.

With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Go to EC-140, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450616


1. CHECK OIL PRESSURE WARNING LAMP

- Start engine.
- Check oil pressure warning lamp and confirm it is not illuminated.

Is oil pressure warning lamp illuminated?

YES >> Go to <u>LU-13</u>, "Inspection".

NO >> GO TO 2.

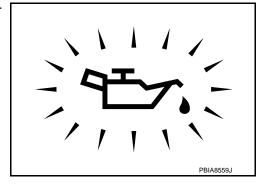

$2. \mathsf{CHECK}$ INTAKE VALVE TIMING CONTROL SOLENOID VALVE

Refer to EC-141, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace intake valve timing control solenoid valve. Refer to EM-44, "Exploded View".

3. CHECK CRANKSHAFT POSITION SENSOR (POS)

Refer to EC-249, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace crankshaft position sensor (POS). Refer to EM-88, "Exploded View".

4. CHECK CAMSHAFT POSITION SENSOR (PHASE)

Refer to EC-252, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace camshaft position sensor (PHASE). Refer to EM-55, "Exploded View".

CHECK CAMSHAFT (INTAKE)

Check the following.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]


- Accumulation of debris to the signal plate of camshaft (1) rear end
- · Chipping signal plate of camshaft rear end

Is the inspection result normal?

YES >> GO TO 6.

NO

>> Remove debris and clean the signal plate of camshaft rear end or replace camshaft. Refer to EM-56, "Removal and Installation".

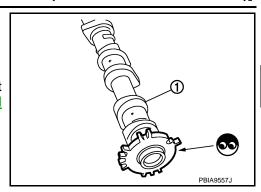

6.CHECK TIMING CHAIN INSTALLATION

Check service records for any recent repairs that may cause timing chain misaligned.

Are there any service records that may cause timing chain misaligned?

>> Check timing chain installation. Refer to EM-45, "Removal and Installation".

NO >> GO TO 7.

7.CHECK LUBRICATION CIRCUIT

Refer to LU-7, "Inspection", "INSPECTION AFTER INSTALLATION".

Is the inspection result normal?

YES >> GO TO 8.

NO >> Clean lubrication line.

8.CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008450617

1. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE-I

- Turn ignition switch OFF.
- 2. Disconnect intake valve timing control solenoid valve harness connector.
- Check resistance between intake valve timing control solenoid valve terminals as per the following.

Terminals	Resistance	
1 and 2	6.7 - 7.7 Ω [at 20°C (68°F)]	
1 or 2 and ground	$\stackrel{\sim}{\sim} \Omega$ (Continuity should not exist)	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace intake valve timing control solenoid valve. Refer to EM-44, "Exploded View".

2.CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE-II

Remove intake valve timing control solenoid valve. Refer to EM-44, "Exploded View".

2. Provide 12 V DC between intake valve timing control solenoid valve terminals 1 and 2, and then interrupt it. Make sure that the plunger moves as shown in the figure.


CAUTION:

Do not apply 12 V DC continuously for 5 seconds or more. Doing so may result in damage to the coil in intake valve timing control solenoid valve.

NOTE:

Always replace O-ring when intake valve timing control solenoid valve is removed.

Is the inspection result normal?

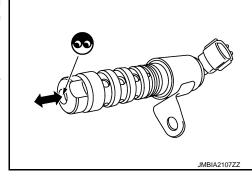

Α

EC

D

Е

N

Р

EC-141

Revision: 2012 August

[MR18DE (EXCEPT FOR CALIFORNIA)]

YES >> INSPECTION END

NO >> Replace intake valve timing control solenoid valve. Refer to EM-44, "Exploded View".

P0031, P0032 A/F SENSOR 1 HEATER

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0031, P0032 A/F SENSOR 1 HEATER

Description INFOID:0000000008450618

SYSTEM DESCRIPTION

Sensor	Input signal to ECM	ECM function	Actuator	
Camshaft position sensor (PHASE) Crankshaft position sensor (POS)	Engine speed	Air fuel ratio (A/F) sensor 1 heater control	Air fuel ratio (A/F) sensor 1 heater	
Mass air flow sensor	Amount of intake air			

The ECM performs ON/OFF duty control of the A/F sensor 1 heater corresponding to the engine operating condition to keep the temperature of A/F sensor 1 element at the specified range.

DTC Logic INFOID:0000000008450619

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	•
P0031	Air fuel ratio (A/F) sensor 1 heater control circuit low	The current amperage in the A/F sensor 1 heater circuit is out of the normal range. (An excessively low voltage signal is sent to ECM through the A/F sensor 1 heater.)	Harness or connectors (The A/F sensor 1 heater circuit is open or shorted.) A/F sensor 1 heater	_
P0032	Air fuel ratio (A/F) sensor 1 heater control circuit high	The current amperage in the A/F sensor 1 heater circuit is out of the normal range. (An excessively high voltage signal is sent to ECM through the A/F sensor 1 heater.)	Harness or connectors (The A/F sensor 1 heater circuit is shorted.) A/F sensor 1 heater	_

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than between 11 V at

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for at least 10 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-143, "Diagnosis Procedure".

>> INSPECTION END NO

Diagnosis Procedure

CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- Disconnect air fuel ratio (A/F) sensor 1 harness connector.
- Turn ignition switch ON.

EC-143 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

N

INFOID:0000000008450620

Р

P0031, P0032 A/F SENSOR 1 HEATER

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Check the voltage between A/F sensor 1 harness connector and ground.

A/F se	ensor 1	Ground	Voltage	
Connector Terminal		Glound	voltage	
F50	4	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

${f 3.}$ DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8. F1
- IPDM E/R harness connector E15
- 15 A fuse (No. 61)
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

4.CHECK A/F SENSOR 1 HEATER OUTPUT SIGNAL CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

A/F sensor 1		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F50	3	F7	8	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

>> Repair open circuit, short to ground or short to power in harness or connectors. NO

5.CHECK A/F SENSOR 1 HEATER

Refer to EC-145, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

O.REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace malfunctioning air fuel ratio (A/F) sensor 1. Refer to EM-30, "Exploded View".

CAUTION:

- Discard any A/F sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new A/F sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

.CHECK INTERMITTENT INCIDENT

Perform GI-41, "Intermittent Incident".

>> Repair or replace.

P0031, P0032 A/F SENSOR 1 HEATER

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Component Inspection

INFOID:0000000008450621

1.CHECK AIR FUEL RATIO (A/F) SENSOR 1

- 1. Turn ignition switch OFF.
- 2. Disconnect A/F sensor 1 harness connector.
- 3. Check resistance between A/F sensor 1 terminals as per the following.

Terminals	Resistance
3 and 4	1.8 - 2.44 Ω [at 20°C (68°F)]
3 and 1, 2	∞ Ω
4 and 1, 2	(Continuity should not exist)

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1. Refer to EM-30, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

EC

Α

D

Е

F

G

Н

J

K

L

M

Ν

0

Р

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0037, P0038 HO2S2 HEATER

Description INFOID:000000008450622

SYSTEM DESCRIPTION

Sensor	Input signal to ECM	ECM function	Actuator
Camshaft position sensor (PHASE) Crankshaft position sensor (POS)	Engine speed	Heated oxygen sensor 2	
Engine coolant temperature sensor	Engine coolant temperature	heater control	Heated oxygen sensor 2 heater
Mass air flow sensor	Amount of intake air		

The ECM performs ON/OFF control of the heated oxygen sensor 2 heater corresponding to the engine speed, amount of intake air and engine coolant temperature.

OPERATION

Engine speed	Heated oxygen sensor 2 heater
Above 3,600 rpm	OFF
Below 3,600 rpm after the following conditions are met. Engine: After warming up Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load	ON

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0037	Heated oxygen sensor 2 heater control circuit low	The current amperage in the heated oxygen sensor 2 heater circuit is out of the normal range. (An excessively low voltage signal is sent to ECM through the heated oxygen sensor 2 heater.)	Harness or connectors (The heated oxygen sensor 2 heater circuit is open or shorted.) Heated oxygen sensor 2 heater
P0038	Heated oxygen sensor 2 heater control circuit high	The current amperage in the heated oxygen sensor 2 heater circuit is out of the normal range. (An excessively high voltage signal is sent to ECM through the heated oxygen sensor 2 heater.)	Harness or connectors (The heated oxygen sensor 2 heater circuit is shorted.) Heated oxygen sensor 2 heater

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- 6. Check 1st trip DTC.

With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

P0037, P0038 HO2S2 HEATER

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

YES >> Go to EC-147, "Diagnosis Procedure".

NO >> INSPECTION END

INFOID:0000000008450624

Α

EC

D

Е

K

Р

Diagnosis Procedure

1. CHECK GROUND CONNECTION

1. Turn ignition switch OFF.

Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK HO2S2 POWER SUPPLY CIRCUIT

- 1. Disconnect heated oxygen sensor 2 (HO2S2) harness connector.
- Turn ignition switch ON.
- 3. Check the voltage between HO2S2 harness connector and ground.

HO2S2		Ground	Voltage
Connector	Terminal	Giodila	voltage
F30	2	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- IPDM E/R connector E15
- 15 A fuse (No. 61)
- Harness for open or short between heated oxygen sensor 2 and fuse

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK HO2S2 OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between HO2S2 harness connector and ECM harness connector.

НО	HO2S2		ECM	
Connector	Terminal	Connector	Terminal	Continuity
F30	3	F7	5	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5.CHECK HEATED OXYGEN SENSOR 2 HEATER

Refer to EC-148, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

O.REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to <u>EX-5, "Exploded View"</u>. CAUTION:

Revision: 2012 August

P0037, P0038 HO2S2 HEATER

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

7. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008450625

1. CHECK HEATED OXYGEN SENSOR 2 HEATER

- 1. Turn ignition switch OFF.
- 2. Disconnect heated oxygen sensor 2 (HO2S2) harness connector.
- 3. Check resistance between HO2S2 terminals as per the following.

Terminals	Resistance
2 and 3	3.3 - 4.4 Ω [at 25°C (77°F)]
1 and 2, 3, 4	∞ Ω
4 and 1, 2, 3	(Continuity should not exist)

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

P0075 IVT CONTROL SOLENOID VALVE

Description


Intake valve timing control solenoid valve is activated by ON/OFF pulse duty (ratio) signals from the ECM.

The intake valve timing control solenoid valve changes the oil amount and direction of flow through intake valve timing control unit or stops oil flow.

The longer pulse width advances valve angle.

The shorter pulse width retards valve angle.

When ON and OFF pulse widths become equal, the solenoid valve stops oil pressure flow to fix the intake valve angle at the control position.

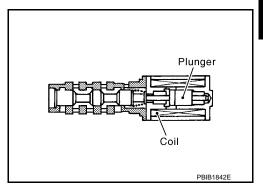

DTC Logic

INFOID:0000000008450627

Α

EC

D

Е

F

Н

M

Р

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0075	Intake valve timing control solenoid valve circuit	An improper voltage is sent to the ECM through intake valve timing control solenoid valve.	 Harness or connectors (Intake valve timing control solenoid valve circuit is open or shorted.) Intake valve timing control solenoid valve

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-149, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450628

1. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect intake valve timing (IVT) control solenoid valve harness connector.
- Turn ignition switch ON.
- 4. Check the voltage between intake valve timing control solenoid valve harness connector and ground.

IVT control solenoid valve		Ground	Voltage	
Connector	Terminal	Glound	voltage	
F41	1	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.DETECT MALFUNCTIONING PART

Revision: 2012 August EC-149 2013 CUBE

P0075 IVT CONTROL SOLENOID VALVE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Check the following.

- Harness connectors E8, F1
- IPDM E/R connector E14
- Harness for open or short between IVT control solenoid valve and IPDM E/R
 - >> Repair open circuit or short to ground or short to power in harness or connectors.

${f 3.}$ CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between IVT control solenoid valve harness connector and ECM harness connector.

IVT control s	olenoid valve	E	CM	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F41	2	F8	73	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

f 4.CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE

Refer to EC-150, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace intake valve timing control solenoid valve. Refer to EM-44, "Exploded View".

5. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008450629

1. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE-I

- 1. Turn ignition switch OFF.
- 2. Disconnect intake valve timing control solenoid valve harness connector.
- 3. Check resistance between intake valve timing control solenoid valve terminals as per the following.

Terminals	Resistance	
1 and 2	6.7 - 7.7 Ω [at 20°C (68°F)]	
1 or 2 and ground	$\stackrel{\sim}{\sim} \Omega$ (Continuity should not exist)	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace intake valve timing control solenoid valve. Refer to EM-44, "Exploded View".

2.check intake valve timing control solenoid valve-ii $\,$

Remove intake valve timing control solenoid valve. Refer to <u>EM-44, "Exploded View"</u>.

P0075 IVT CONTROL SOLENOID VALVE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

2. Provide 12 V DC between intake valve timing control solenoid valve terminals 1 and 2, and then interrupt it. Make sure that the plunger moves as shown in the figure.

CAUTION:


Do not apply 12 V DC continuously for 5 seconds or more. Doing so may result in damage to the coil in intake valve timing control solenoid valve.


NOTE:

Always replace O-ring when intake valve timing control solenoid valve is removed.

Is the inspection result normal?

YES >> INSPECTION END

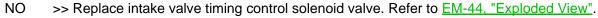

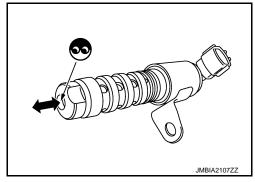

EC

Α

С

D

Е

F

G

Н

Κ

L

M

Ν


0

Р

Description INFOID.000000008450630

The mass air flow sensor (1) is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. The mass air flow sensor controls the temperature of the hot wire to a certain amount. The heat generated by the hot wire is reduced as the intake air flows around it. The more air, the greater the heat loss.

Therefore, the electric current supplied to hot wire is changed to maintain the temperature of the hot wire as air flow increases. The ECM detects the air flow by means of this current change.

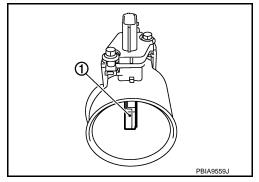

INFOID:0000000008450631

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name		DTC detecting condition	Possible cause
		A)	A high voltage from the sensor is sent to ECM under light load driving condition.	Harness or connectors (The sensor circuit is open or shorted.) Mass air flow sensor EVAP control system pressure sensor
P0101	Mass air flow sensor cir- cuit range/performance	В)	A low voltage from the sensor is sent to ECM under heavy load driving condition.	 Harness or connectors (The sensor circuit is open or shorted.) Intake air leaks Mass air flow sensor EVAP control system pressure sensor Intake air temperature sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

If engine will not start or stops soon, wait at least 10 seconds with engine stopped (Ignition switch ON) instead of running engine at idle speed.

>> GO TO 2.

2.perform dtc confirmation procedure for malfunction a

- 1. Start engine and warm it up to normal operating temperature.
- 2. Run engine for at least 10 seconds at idle speed.
- 3. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-154, "Diagnosis Procedure".

NO-1 >> With CONSULT: GO TO 3.

NO-2 >> Without CONSULT: GO TO 5.

3.check mass air flow sensor function

- 1. Turn ignition switch ON.
- Start engine and warm it up to normal operating temperature.
 If engine cannot be started, go to <u>EC-154</u>, "<u>Diagnosis Procedure</u>".

< DTC/CIRCUIT DIAGNOSIS >


[MR18DE (EXCEPT FOR CALIFORNIA)]

- 3. Select "DATA MONITOR" mode with CONSULT.
- 4. Check the voltage of "MAS A/F SE-B1" with "DATA MONITOR".
- 5. Increases engine speed to about 4,000 rpm.
- Monitor the linear voltage rise in response to engine speed increases.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Go to EC-154, "Diagnosis Procedure".

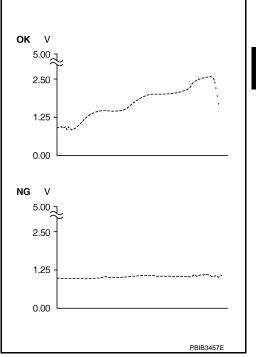

4. PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B

1. Maintain the following conditions for at least 10 consecutive seconds.

ENG SPEED	More than 2,000 rpm
TP SEN 1-B1	More than 1.5 V
TP SEN 2-B1	More than 1.5 V
Selector lever	Suitable position
Driving location	Driving vehicle uphill (Increased engine load) will help maintain the driving conditions required for this test.

CAUTION:

Always drive vehicle at a safe speed.

2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-154, "Diagnosis Procedure".

NO >> INSPECTION END

${f 5}$ Perform component function check for malfunction ${f B}$

Perform component function check. Refer to EC-153, "Component Function Check".

NOTE:

Use component function check to check the overall function of the mass air flow sensor circuit. During this check, a DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-154, "Diagnosis Procedure".

Component Function Check

1. PERFORM COMPONENT FUNCTION CHECK FOR MALFUNCTION B

With GST

- 1. Start engine and warm it up to normal operating temperature.
- Select Service \$01 with GST.

EC

Α

D

Е

F

Н

J

K

M

-

s N

INFOID:00000000008450632

< DTC/CIRCUIT DIAGNOSIS >


[MR18DE (EXCEPT FOR CALIFORNIA)]

- 3. Check the mass air flow sensor signal with Service \$01.
- 4. Check for linear mass air flow sensor signal value rise in response to increases to about 4,000 rpm in engine speed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-154, "Diagnosis Procedure".

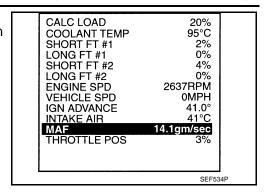

Diagnosis Procedure

INFOID:0000000008450633

1. INSPECTION START

Confirm the detected malfunction (A or B). Refer to EC-152. "DTC Logic".

Which malfunction is detected?

A >> GO TO 3.

B >> GO TO 2.

2. CHECK INTAKE SYSTEM

Check the following for connection.

- · Air duct
- Vacuum hoses
- · Intake air passage between air duct and intake manifold

Is the inspection result normal?

YES >> GO TO 3.

NO >> Reconnect the parts.

3. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace ground connection.

4. CHECK MAF SENSOR POWER SUPPLY CIRCUIT

- 1. Disconnect mass air flow (MAF) sensor harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between MAF sensor harness connector and ground.

MAF sensor		Ground	Voltage
Connector	Terminal	Giodila	voltage
F4	5	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- Harness for open or short between mass air flow sensor and ECM
- Harness for open or short between mass air flow sensor and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK MAF SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between MAF sensor harness connector and ECM harness connector.

MAF	MAF sensor		ECM	
Connector	Terminal	Connector	Terminal	Continuity
F4	4	F8	52	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

7.CHECK MAF SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between MAF sensor harness connector and ECM harness connector.

MAF	MAF sensor		ECM	
Connector	Terminal	Connector	Terminal	Continuity
F4	3	F8	45	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

$oldsymbol{8}.$ CHECK INTAKE AIR TEMPERATURE SENSOR

Check intake air temperature sensor.

Refer to EC-167, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 9.

>> Replace mass air flow sensor (with intake air temperature sensor). Refer to EM-24, "Exploded NO View".

9. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-284, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace EVAP control system pressure sensor.

10. CHECK MASS AIR FLOW SENSOR

Refer to EC-155, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace mass air flow sensor. Refer to EM-24, "Exploded View".

11. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

1.CHECK MASS AIR FLOW SENSOR-I

(P)With CONSULT

- Turn ignition switch OFF.
- Reconnect all harness connectors disconnected.

Α

EC

Е

K

N

INFOID:0000000008450634

EC-155 Revision: 2012 August 2013 CUBE

- 3. Start engine and warm it up to normal operating temperature.
- 4. Connect CONSULT and select "DATA MONITOR" mode.
- 5. Select "MAS A/F SE-B1" and check indication.

Monitor item	Condition	MAS A/F SE-B1
	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
MAG AT GE-BT	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
	Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

⋈Without CONSULT

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Check the voltage between ECM harness connector and ground.

E	ECM		Condition	Voltage	
Connector	Terminal	Ground	Condition	vollage	
			Ignition switch ON (Engine stopped.)	Approx. 0.4 V	
F8	45 (MAF sensor Ground signal)	Od	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V	
10		Giodila	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V	
			Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*	

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. CHECK FOR THE CAUSE OF UNEVEN AIR FLOW THROUGH MASS AIR FLOW SENSOR

- 1. Turn ignition switch OFF.
- Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.
- Crushed air ducts
- Malfunctioning seal of air cleaner element
- Uneven dirt of air cleaner element
- Intake valve deposits
- Improper specification of intake air system parts

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.CHECK MASS AIR FLOW SENSOR-II

(I) With CONSULT

- 1. Repair or replace malfunctioning part.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Connect CONSULT and select "DATA MONITOR" mode.
- 4. Select "MAS A/F SE-B1" and check indication.

[MR18DE (EXCEPT FOR CALIFORNIA)]

Monitor item	Condition	MAS A/F SE-B1
	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
MAS A/F SE-B1	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
	Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

⋈Without CONSULT

- 1. Repair or replace malfunctioning part.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Check the voltage between ECM harness connector and ground.

ECM		Ground Condition		Voltage	
Connector	Terminal	Ground	Condition	vollage	
	45 (MAT		Ignition switch ON (Engine stopped.)	Approx. 0.4 V	
F8		Ground	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V	
го	(MAF sensor signal)		2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V	
			Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*	

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

4.CHECK MASS AIR FLOW SENSOR-III

(I) With CONSULT

- 1. Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector and reconnect it again.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Connect CONSULT and select "DATA MONITOR" mode.
- 5. Select "MAS A/F SE-B1" and check indication.

Monitor item	Condition	MAS A/F SE-B1
	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
WING TVI OL DI	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
	Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Without CONSULT

- 1. Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector and reconnect it again.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Check the voltage between ECM harness connector and ground.

Α

EC

D

Е

1

G

Н

 \mathbb{N}

Ν

С

Р

ECM		Ground	Condition	Voltage
Connector	Terminal	Giodila	Condition	voltage
			Ignition switch ON (Engine stopped.)	Approx. 0.4 V
F8	45	45 (MAF sensor Ground signal)	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
10	`		2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
			Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END


NO >> Clean or replace mass air flow sensor. Refer to EM-24, "Exploded View".

P0102, P0103 MAF SENSOR

Description

The mass air flow sensor (1) is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. The mass air flow sensor controls the temperature of the hot wire to a certain amount. The heat generated by the hot wire is reduced as the intake air flows around it. The more air, the greater the heat loss.

Therefore, the electric current supplied to hot wire is changed to maintain the temperature of the hot wire as air flow increases. The ECM detects the air flow by means of this current change.

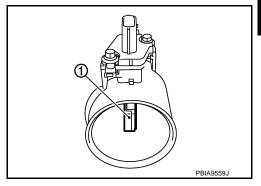

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0102	Mass air flow sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (The sensor circuit is open or shorted.) Intake air leaks Mass air flow sensor
P0103	Mass air flow sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	Harness or connectors (The sensor circuit is open or shorted.) Mass air flow sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

Which DTC is detected?

P0102 >> GO TO 2.

P0103 >> GO TO 3.

2.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P0102

- 1. Start engine and wait at least 5 seconds.
- 2. Check DTC.

Is DTC detected?

YES >> Go to EC-160, "Diagnosis Procedure".

NO >> INSPECTION END

3.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P0103-I

- 1. Turn ignition switch ON and wait at least 5 seconds.
- 2. Check DTC.

Is DTC detected?

YES >> Go to EC-160, "Diagnosis Procedure".

NO >> GO TO 4.

4.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P0103-II

- 1. Start engine and wait at least 5 seconds.
- 2. Check DTC.

Is DTC detected?

YES >> Go to EC-160, "Diagnosis Procedure".

NO >> INSPECTION END

Revision: 2012 August EC-159 2013 CUBE

EC

Α

D

E

F

G

Н

K

L

IVI

Ν

Р

Diagnosis Procedure

INFOID:0000000008450637

1. INSPECTION START

Confirm the detected DTC.

Which DTC is detected?

P0102 >> GO TO 2.

P0103 >> GO TO 3.

CHECK INTAKE SYSTEM

Check the following for connection.

- Air duct
- Vacuum hoses
- Intake air passage between air duct to intake manifold

Is the inspection result normal?

YES >> GO TO 3.

NO >> Reconnect the parts.

3.check ground connection

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace ground connection.

4. CHECK MAF SENSOR POWER SUPPLY CIRCUIT

- 1. Disconnect mass air flow (MAF) sensor harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between MAF sensor harness connector and ground.

MAF sensor		Ground	Voltage	
Connector	Terminal	Glound	vollage	
F4	5	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

${f 5.}$ DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- Harness for open or short between mass air flow sensor and ECM
- Harness for open or short between mass air flow sensor and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

6.CHECK MAF SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between MAF sensor harness connector and ECM harness connector.

MAF	MAF sensor		ECM	
Connector	Terminal	Connector	Terminal	Continuity
F4	4	F8	52	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

P0102, P0103 MAF SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Α

EC

D

Е

F

N

Р

INFOID:0000000008450638

YES >> GO TO 7.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

7.CHECK MAF SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between MAF sensor harness connector and ECM harness connector.

MAF	MAF sensor		ECM	
Connector	Terminal	Connector	Terminal	Continuity
F4	3	F8	45	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

8.CHECK MASS AIR FLOW SENSOR

Refer to EC-161, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace mass air flow sensor. Refer to EM-24, "Exploded View".

9. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

1. CHECK MASS AIR FLOW SENSOR-I

(I) With CONSULT

- Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Connect CONSULT and select "DATA MONITOR" mode.
- 5. Select "MAS A/F SE-B1" and check indication.

Monitor item	Condition	MAS A/F SE-B1
	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
WAS AN SE-BI	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
	Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

(R) Without CONSULT

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Check the voltage between ECM harness connector and ground.

Revision: 2012 August EC-161 2013 CUBE

E	ECM		Ground Condition	
Connector	Terminal	Giodila	Condition	Voltage
			Ignition switch ON (Engine stopped.)	Approx. 0.4 V
F8	45	Ground	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
10	(MAF sensor signal)	Glound	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
		Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*	

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.CHECK FOR THE CAUSE OF UNEVEN AIR FLOW THROUGH MASS AIR FLOW SENSOR

- Turn ignition switch OFF.
- 2. Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.
- Crushed air ducts
- Malfunctioning seal of air cleaner element
- Uneven dirt of air cleaner element
- Intake valve deposits
- Improper specification of intake air system parts

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3. CHECK MASS AIR FLOW SENSOR-II

(P)With CONSULT

- 1. Repair or replace malfunctioning part.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Connect CONSULT and select "DATA MONITOR" mode.
- 4. Select "MAS A/F SE-B1" and check indication.

Monitor item	Condition	MAS A/F SE-B1
	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
MAS AT SE-BT	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
	Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Without CONSULT

- 1. Repair or replace malfunctioning part.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Check the voltage between ECM harness connector and ground.

[MR18DE (EXCEPT FOR CALIFORNIA)]

E	ECM		Condition	Voltage
Connector	Terminal	Ground	Condition	voltage
		45 (MAF sensor Ground signal)	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
EQ	F8 (MAF sensor		Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
10			2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
			Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

4. CHECK MASS AIR FLOW SENSOR-III

(P)With CONSULT

- Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector and reconnect it again.
- Start engine and warm it up to normal operating temperature.
- Connect CONSULT and select "DATA MONITOR" mode.
- 5. Select "MAS A/F SE-B1" and check indication.

Monitor item	Condition	MAS A/F SE-B1
	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
MAS AN SE-BI	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
	Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

♥Without CONSULT

- 1. Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector and reconnect it again.
- 3. Start engine and warm it up to normal operating temperature.
- Check the voltage between ECM harness connector and ground.

E	ECM		Condition	Voltage
Connector	Terminal	Ground	Condition	voltage
	45 F8 (MAF sensor Gro signal)		Ignition switch ON (Engine stopped.)	Approx. 0.4 V
EΩ		Ground	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
10		Giodila	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
			Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Clean or replace mass air flow sensor. Refer to EM-24, "Exploded View".

EC-163 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

Ν

Р

P0111 IAT SENSOR

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0111	IAT SENSOR 1 B1 [Intake air temperature (IAT) sensor circuit range/performance]	The comparison result of signals transmitted to ECM from each temperature sensor (IAT sensor, ECT sensor and FTT sensor, CVT fluid temperature sensor) shows that the voltage signal of the IAT sensor is higher/lower than that of other temperature sensors when the engine is started with its cold state.	Harness or connectors (High or low resistance in the IAT sensor circuit) IAT sensor

DTC CONFIRMATION PROCEDURE

1. INSPECTION START

Is it necessary to erase permanent DTC?

YES >> GO TO 3.

NO >> GO TO 2.

2. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-165, "Component Function Check".

NOTE:

Use the component function check to check the overall function of the IAT sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to <u>EC-165</u>, "<u>Diagnosis Procedure</u>".

3. PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

- Before performing the following procedure, do not add fuel.
- Before performing the following procedure, check that fuel level is between 1/4 and 4/4.
- Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 4.

4. PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for 60 minutes.
- 2. Move the vehicle to a cool place.

NOTE:

Cool the vehicle in an environment of ambient air temperature between -10°C (14°F) and 35°C (95°F).

3. Turn ignition switch OFF and soak the vehicle for 12 hours.

CAUTION:

Never turn ignition switch ON during soaking.

NOTE:

The vehicle must be cooled with the food open.

4. Start engine and let it idle for 5 minutes or more.

CAUTION:

Never turn ignition switch OFF during idling.

P0111 IAT SENSOR

Chade 4 at 4	T DIAGNOSIS >		[MR18DE (EXCEPT FOR CALIFORNIA)]
Check 1st ti	rip DTC.		
s 1st trip DTC c	letected?		
	ceed to <u>EC-165, "Diagr</u> PECTION END	osis Proced	<u>dure"</u> .
Component	Function Check		INFOID:00000000008450640
.CHECK INT/	AKE AIR TEMPERATUI	RE (IAT) SE	NSOR
	n switch OFF.	, ,	
	mass air flow sensor ha	arness conn	ector.
. Check resis	tance between mass ai	r flow senso	or terminals as follows.
Terminals	Condition		Posistance (I/O)
1 and 2		25 (77)	Resistance (kΩ)
	Temperature [°C (°F)]	25 (77)	1.800 – 2.200
s tne inspection YES >> GO	result normal?		
	ceed to <u>EC-165, "Diagr</u>	osis Proced	dure".
	ERMITTENT INCIDENT		
			ittent Incident"
	ent incident. Refer to <u>Gl</u> n result normal?	<u>-41, IIILEIIII</u>	ittent incluent.
•	PECTION END		
	ceed to <u>EC-165, "Diagr</u>	osis Proced	dure".
	_		
ภลนทบรเร Pi	ocedure		INFOID:000000008450641
		DE (IAT) SE	INFOID:0000000008450641
.CHECK INTA	AKE AIR TEMPERATUI		NSOR
.CHECK INTA	AKE AIR TEMPERATUR temperature sensor. R		
.CHECK INTA check intake air the inspection	AKE AIR TEMPERATUR temperature sensor. R result normal?		NSOR
.CHECK INTA	AKE AIR TEMPERATUR temperature sensor. R result normal? TO 2.	efer to <u>EC-1</u>	NSOR 165, "Component Inspection".
CHECK INTA heck intake air the inspection YES >> GO NO >> Rep	temperature sensor. Raresult normal? TO 2. Diace mass air flow ser	efer to EC-1	NSOR
CHECK INTA heck intake air the inspection YES >> GO NO >> Rep	AKE AIR TEMPERATURE temperature sensor. Result normal? TO 2. Diace mass air flow ser	efer to EC-1	NSOR 165, "Component Inspection".
CHECK INTA heck intake air the inspection YES >> GO NO >> Rep Viev	temperature sensor. Raresult normal? TO 2. Diace mass air flow ser	efer to EC-1	NSOR 165, "Component Inspection". Intake air temperature sensor). Refer to EM-24, "Exploded
CHECK INTA heck intake air the inspection YES >> GO NO >> Rep Viev	AKE AIR TEMPERATURE temperature sensor. Rown result normal? TO 2. Diace mass air flow serw".	efer to EC-1	NSOR 165, "Component Inspection". Intake air temperature sensor). Refer to EM-24, "Exploded
CHECK INTA theck intake air the inspection YES >> GO NO >> Rep Viev CHECK INTE	AKE AIR TEMPERATURE temperature sensor. Rown result normal? TO 2. Diace mass air flow serw".	efer to EC-1	NSOR 165, "Component Inspection". Intake air temperature sensor). Refer to EM-24, "Exploded
CHECK INTA theck intake air the inspection YES >> GO NO >> Rep Viev CHECK INTE	AKE AIR TEMPERATURE temperature sensor. Received the result normal? TO 2. Diace mass air flow serw". ERMITTENT INCIDENTENT incident. Refer to GIPPECTION END	efer to EC-1	NSOR 165, "Component Inspection". Intake air temperature sensor). Refer to EM-24, "Exploded
heck intake air the inspection YES >> GO NO >> Rep Viev CHECK INTE	Temperature sensor. Received the result normal? TO 2. Diace mass air flow serw". ERMITTENT INCIDENTENT incident. Refer to GI PECTION END	efer to EC-1	NSOR 165. "Component Inspection". Intake air temperature sensor). Refer to EM-24. "Exploded ittent Incident".
CHECK INTA theck intake air the inspection YES >> GO NO >> Rep Viev CHECK INTE theck intermitte >> INS Component	AKE AIR TEMPERATURE temperature sensor. Received the result normal? TO 2. Diace mass air flow serw". ERMITTENT INCIDENTENT incident. Refer to GIPPECTION END	efer to EC-1	NSOR 165. "Component Inspection". Intake air temperature sensor). Refer to EM-24. "Exploded ittent Incident".
CHECK INTA theck intake air the inspection YES >> GO NO >> Rep Viev CHECK INTE theck intermitte >> INS COMPONENT I CHECK INTA Turn ignition	AKE AIR TEMPERATURE temperature sensor. Represent normal? TO 2. Diace mass air flow serw." ERMITTENT INCIDENT ent incident. Refer to GI PECTION END Inspection AKE AIR TEMPERATURE switch OFF.	efer to EC-1 nsor (with in41, "Interm	NSOR 165. "Component Inspection". Intake air temperature sensor). Refer to EM-24. "Exploded ittent Incident". INFOID:000000008450642 NSOR
heck intake air the inspection YES >> GO NO >> Rep Viev CHECK INTE heck intermitte >> INS COMPONENT CHECK INTA Turn ignition Disconnect	AKE AIR TEMPERATURE temperature sensor. Received the result normal? TO 2. Place mass air flow served. ERMITTENT INCIDENTED TO SERVED	efer to EC-1 nsor (with in -41, "Interm	NSOR 165. "Component Inspection". Intake air temperature sensor). Refer to EM-24. "Exploded ittent Incident". INFOID:000000008450642 NSOR ector.
CHECK INTA Check intake air Sthe inspection YES >> GO NO >> Rep Viev CHECK INTE Check intermitte >> INS COMPONENT CHECK INTA Turn ignition Disconnect	AKE AIR TEMPERATURE temperature sensor. Represent normal? TO 2. Diace mass air flow serw." ERMITTENT INCIDENT ent incident. Refer to GI PECTION END Inspection AKE AIR TEMPERATURE switch OFF.	efer to EC-1 nsor (with in -41, "Interm	NSOR 165. "Component Inspection". Intake air temperature sensor). Refer to EM-24. "Exploded ittent Incident". INFOID:000000008450642 NSOR ector.
Check intake air to the inspection YES >> GO NO >> Rep Viev CHECK INTE Check intermitte >> INS Component CHECK INTA Turn ignition Disconnect	AKE AIR TEMPERATURE temperature sensor. Received the result normal? TO 2. Place mass air flow served. ERMITTENT INCIDENTED TO SERVED	efer to EC-1 nsor (with in -41, "Interm	NSOR 165. "Component Inspection". Intake air temperature sensor). Refer to EM-24. "Exploded ittent Incident". INFOID:000000008450642 NSOR ector.

YES >> INSPECTION END


>> Replace mass air flow sensor (with intake air temperature sensor). Refer to EM-24, "Exploded NO View"

P0112, P0113 IAT SENSOR

Description INFOID:000000008450643

The intake air temperature sensor is built-into mass air flow sensor (1). The sensor detects intake air temperature and transmits a signal to the ECM.


The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

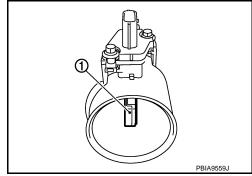

<Reference data>

Intake air temperature [°C (°F)]	Voltage* (V)	Resistance (kΩ)
25 (77)	3.3	1.800 - 2.200
80 (176)	1.2	0.283 - 0.359

^{*:} These data are reference values and are measured between ECM terminal 46 (Intake air temperature sensor) and ground.

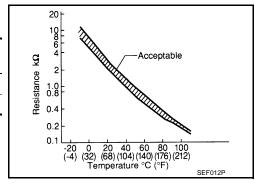

DTC Logic

INFOID:0000000008450644

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0112	Intake air temperature sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (The sensor circuit is open or shorted.)
P0113	Intake air temperature sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	Intake air temperature sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 5 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-166, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450645

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

P0112, P0113 IAT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK INTAKE AIR TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

- Disconnect mass air flow sensor (with intake air temperature sensor) harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between mass air flow sensor harness connector and ground.

MAF sensor		Ground	Voltage
Connector	Terminal	Glodila	voitage
F4	5	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

3.CHECK INTAKE AIR TEMPERATURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between mass air flow sensor harness connector and ECM harness connector.

MAF sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F4	4	F8	52	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

>> GO TO 4. YES

>> Repair open circuit or short to ground or short to power in harness or connectors. NO

f 4.CHECK INTAKE AIR TEMPERATURE SENSOR

Refer to EC-167, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace mass air flow sensor (with intake air temperature sensor). Refer to EM-24, "Exploded View".

5. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

1. CHECK INTAKE AIR TEMPERATURE SENSOR

- Turn ignition switch OFF.
- Disconnect mass air flow sensor harness connector.
- 3. Check resistance between mass air flow sensor terminals as per the following.

Terminals	Condition		Resistance (kΩ)
1 and 2	Intake air temperature [°C (°F)]	25 (77)	1.800 - 2.200

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace mass air flow sensor (with intake air temperature sensor). Refer to EM-24, "Exploded View".

EC-167 Revision: 2012 August 2013 CUBE

EC

K

M

INFOID:0000000008450646


Р

Α

P0116 ECT SENSOR

Description INFOID:000000008450647


The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

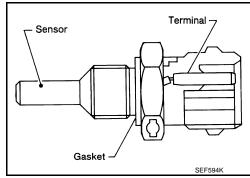

<Reference data>

Engine coolant temperature [°C (°F)]	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.37 - 2.63
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

^{*:} These data are reference values and are measured between ECM terminal 38 (Engine coolant temperature sensor) and ground.

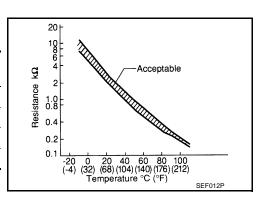

INFOID:0000000008450648

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0116	Engine coolant temperature (ECT) sensor circuit range/performance	The comparison result of signals transmitted to ECM from each temperature sensor (IAT sensor, ECT sensor and FTT sensor ,CVT fluid temperature sensor) shows that the voltage signal of the ECT sensor is higher/lower than that of other temperature sensors when the engine is started with its cold state.	Harness or connectors (High or low resistance in the ECT sensor circuit) ECT sensor

DTC CONFIRMATION PROCEDURE

1. INSPECTION START

Is it necessary to erase permanent DTC?

YES >> GO TO 3. NO >> GO TO 2.

2. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-169, "Component Function Check".

NOTE:

Use the component function check to check the overall function of the ECT sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-170, "Diagnosis Procedure".

P0116 ECT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

3.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

- Before performing the following procedure, do not add fuel.
- Before performing the following procedure, check that fuel level is between 1/4 and 4/4.
- Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 4.

4.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for 60 minutes.
- 2. Move the vehicle to a cool place.

NOTE:

Cool the vehicle in an environment of ambient air temperature between -10°C (14°F) and 35°C (95°F).

3. Turn ignition switch OFF and soak the vehicle for 12 hours.

CAUTION:

Never turn ignition switch ON during soaking.

NOTE:

The vehicle must be cooled with the food open.

4. Start engine and let it idle for 5 minutes or more.

CAUTION:

Never turn ignition switch OFF during idling.

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-170, "Diagnosis Procedure".

NO >> INSPECTION END

Component Function Check

1.CHECK ENGINE COOLANT TEMPERATURE (ECT) SENSOR

- Turn ignition switch OFF.
- 2. Disconnect ECT sensor harness connector.
- 3. Remove ECT sensor. Refer to CO-24, "Exploded View".
- 4. Check resistance between ECT sensor terminals by heating with hot water as shown in the figure.

Terminals	Condition		Resistance (k Ω)
1 and 2	Temperature [°C (°F)]	20 (68)	2.37 – 2.63
		50 (122)	0.68 – 1.00
		90 (194)	0.236 - 0.260

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to EC-170, "Diagnosis Procedure".


2. CHECK INTERMITTENT INCIDENT

Check intermittent incident. Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> INSPECTION END

>> Proceed to EC-170, "Diagnosis Procedure". NO

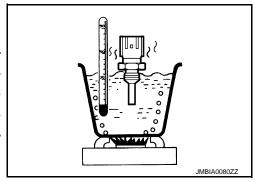

EC

Α

D

Е

INFOID:00000000008450649

M

N

2013 CUBE

P0116 ECT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Diagnosis Procedure

INFOID:0000000008450650

1. CHECK ENGINE COOLANT TEMPERATURE (ECT) SENSOR

Check ECT sensor. Refer to EC-170, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace ECT sensor. Refer to CO-24, "Exploded View".

2.CHECK INTERMITTENT INCIDENT

Check intermittent incident. Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008450651

1. CHECK ENGINE COOLANT TEMPERATURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect engine coolant temperature sensor harness connector.
- 3. Remove engine coolant temperature sensor. Refer to CO-24. "Exploded View".
- 4. Check resistance between engine coolant temperature sensor terminals by heating with hot water as shown in the figure.

Terminals	Condition		Resistance
		20 (68)	2.37 - 2.63 kΩ
1 and 2 T	Temperature [°C (°F)]	50 (122)	0.68 - 1.00 kΩ
		90 (194)	0.236 - 0.260 kΩ

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace engine coolant temperature sensor. Refer to <u>CO-24, "Exploded View"</u>.

Α

EC

D

Е

K

M


Ν

Р

P0117, P0118 ECT SENSOR

Description INFOID:000000008450652


The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

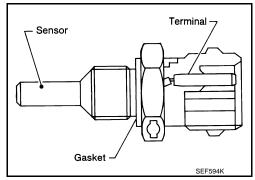

<Reference data>

Engine coolant temperature [°C (°F)]	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.37 - 2.63
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

^{*:} These data are reference values and are measured between ECM terminal 38 (Engine coolant temperature sensor) and ground.

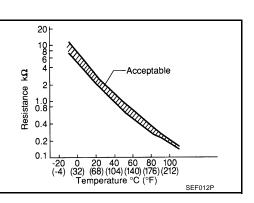

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible Cause
P0117	Engine coolant temperature sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (The sensor circuit is open or shorted.)
P0118	Engine coolant temperature sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 5 seconds.
- 2. Check DTC.

Is DTC detected?

YES >> Go to EC-171, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK GROUND CONNECTION

1. Turn ignition switch OFF.

INFOID:00000000008450654

INFOID:00000000008450653

EC-171

Revision: 2012 August EC-171 2013 CUBE

P0117, P0118 ECT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK ECT SENSOR POWER SUPPLY CIRCUIT

- Disconnect engine coolant temperature (ECT) sensor harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between ECT sensor harness connector and ground.

ECT sensor		Ground	Voltage	
Connector	Terminal	Glound	vollage	
F28	1	Ground	Approx. 5 V	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

${f 3.}$ CHECK ECT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between ECT sensor harness connector and ECM harness connector.

ECT sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F28	2	F8	44	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to EC-172, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace engine coolant temperature sensor. Refer to CO-24, "Exploded View".

5. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008450655

1. CHECK ENGINE COOLANT TEMPERATURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect engine coolant temperature sensor harness connector.
- 3. Remove engine coolant temperature sensor. Refer to CO-24, "Exploded View".
- 4. Check resistance between engine coolant temperature sensor terminals by heating with hot water as shown in the figure.

Terminals	Condition		Resistance
		20 (68)	2.37 - 2.63 kΩ
1 and 2 Temperature [°C (°F)	Temperature [°C (°F)]	50 (122)	0.68 - 1.00 kΩ
		90 (194)	0.236 - 0.260 kΩ

P0117, P0118 ECT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace engine coolant temperature sensor. Refer to CO-24, "Exploded View".

EC

Α

С

D

Е

F

G

Н

Κ

L

M

Ν

0


Р

P0122, P0123 TP SENSOR

Description INFOID:000000008450656

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometer which transform the throttle valve position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

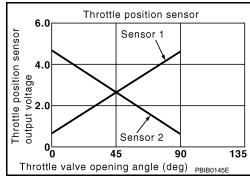

DTC Logic

INFOID:0000000008450657

DTC DETECTION LOGIC

NOTE:

If DTC P0122 or P0123 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to <u>EC-320, "DTC Logic"</u>.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0122	Throttle position sensor 2 circuit low input	An excessively low voltage from the TP sensor 2 is sent to ECM.	Harness or connectors (TP sensor 2 circuit is open or shorted.)
P0123	Throttle position sensor 2 circuit high input	An excessively high voltage from the TP sensor 2 is sent to ECM.	Electric throttle control actuator (TP sensor 2)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 1 second.
- Check DTC.

Is DTC detected?

YES >> Go to EC-174, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450658

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK THROTTLE POSITION SENSOR 2 POWER SUPPLY CIRCUIT

- 1. Disconnect electric throttle control actuator harness connector.
- Turn ignition switch ON.

P0122, P0123 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

3. Check the voltage between electric throttle control actuator harness connector and ground.

Electric throttle	control actuator	Ground	Voltage	
Connector Terminal		Glound	voltage	
F29	2	Ground	Approx. 5 V	

EC

Α

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

С

3.check throttle position sensor 2 ground circuit for open and short

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

_	
_	

Electric throttle control actuator		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F29	4	F8	36	Existed

C

F

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

Н

4. CHECK THROTTLE POSITION SENSOR 2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

 Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

Electric throttle control actuator		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F29	3	F8	34	Existed

2. Also check harness for short to ground and short to power.

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

L

5. CHECK THROTTLE POSITION SENSOR

Refer to EC-176, "Component Inspection".

N

Is the inspection result normal?

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

N

$\mathsf{6}.\mathsf{REPLACE}$ ELECTRIC THROTTLE CONTROL ACTUATOR

- 1. Replace electric throttle control actuator.
- 2. Perform EC-176, "Special Repair Requirement".

0

Р

>> INSPECTION END

7. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

P0122, P0123 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Component Inspection

INFOID:0000000008450659

1. CHECK THROTTLE POSITION SENSOR

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Perform EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".
- 4. Turn ignition switch ON.
- 5. Set selector lever to D (CVT) or 1st (M/T) position.
- 6. Check the voltage between ECM harness connector and ground.

ECM		Ground	Condition		Voltage
Connector	Terminal	Ground	Condition		voltage
	33 (TP sensor			Fully released	More than 0.36V
F8	1 signal)	Ground	Accelerator	Fully de- pressed	Less than 4.75V
	34 (TP sensor		pedal	Fully released	Less than 4.75V
	2 signal)			Fully de- pressed	More than 0.36V

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

- Replace electric throttle control actuator.
- Perform <u>EC-176</u>, "Special Repair Requirement".

>> INSPECTION END

Special Repair Requirement

INFOID:0000000008450660

1. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 2.

2. PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

>> END

Α

EC

D

Е

K

L


M

Р

P0125 ECT SENSOR

Description INFOID:0000000008450661


The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

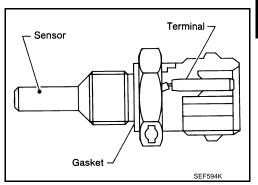

<Reference data>

Engine coolant temperature [°C (°F)]	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.37 - 2.63
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

^{*:} These data are reference values and are measured between ECM terminal 38 (Engine coolant temperature sensor) and ground.

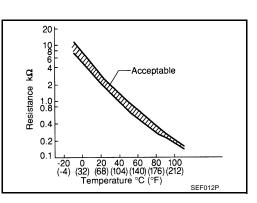

INFOID:0000000008450662

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P0125 is displayed with P0116, first perform the trouble diagnosis for DTC P0116. Refer to EC-168, "DTC Logic".
- If DTC P0125 is displayed with P0117 or P0118, first perform the trouble diagnosis for DTC P0117 or P0118. Refer to <u>EC-171</u>, "<u>DTC Logic</u>".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0125	Insufficient engine coolant temperature for closed loop fuel control	 Voltage sent to ECM from the sensor is not practical, even when some time has passed after starting the engine. Engine coolant temperature is insufficient for closed loop fuel control. 	Harness or connectors (High resistance in the circuit) Engine coolant temperature sensor Thermostat

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

2.CHECK ENGINE COOLANT TEMPERATURE SENSOR FUNCTION

(P)With CONSULT

Turn ignition switch ON.

>> GO TO 2.

- 2. Select "DATA MONITOR" mode with CONSULT.
- 3. Check that "COOLAN TEMP/S" is above 10°C (50°F).

With GST

P0125 ECT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Follow the procedure "With CONSULT" above.

Is it above 5°C (41°F)?

YES >> INSPECTION END

NO >> GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- 1. Start engine and run it for 65 minutes at idle speed.
- 2. Check 1st tip DTC.

If "COOLAN TEMP/S" indication increases to more than 10°C (50°F) within 65 minutes, stop engine because the test result will be OK.

CAUTION:

Be careful not to overheat engine.

With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> EC-178, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450663

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to EC-178, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace engine coolant temperature sensor. Refer to CO-24, "Exploded View".

3.CHECK THERMOSTAT OPERATION

When the engine is cold [lower than 70°C (158°F)] condition, grasp lower radiator hose and confirm the engine coolant does not flow.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace thermostat. Refer to <u>CO-22, "Removal and Installation"</u>.

4. CHECK INTERMITTENT INCIDENT

Refer to GI-41. "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008450664

1. CHECK ENGINE COOLANT TEMPERATURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect engine coolant temperature sensor harness connector.
- 3. Remove engine coolant temperature sensor. Refer to <a>CO-24, "Exploded View".
- 4. Check resistance between engine coolant temperature sensor terminals by heating with hot water as shown in the figure.

P0125 ECT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Terminals	Condition		Resistance
	20 (68) Temperature [°C (°F)] 50 (122)	20 (68)	2.37 - 2.63 kΩ
1 and 2		50 (122)	0.68 - 1.00 kΩ
		90 (194)	0.236 - 0.260 kΩ

EC

Α

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace engine coolant temperature sensor. Refer to CO-24, "Exploded View".

D

C

Е

F

G

Н

K

L

M

Ν

0


Р

P0127 IAT SENSOR

Description INFOID.000000008450665

The intake air temperature sensor is built-into mass air flow sensor (1). The sensor detects intake air temperature and transmits a signal to the ECM.


The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

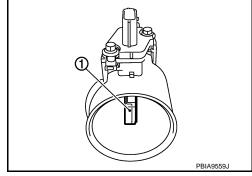

<Reference data>

Intake air temperature [°C (°F)]	Voltage* (V)	Resistance (kΩ)
25 (77)	3.3	1.800 - 2.200
80 (176)	1.2	0.283 - 0.359

^{*:} These data are reference values and are measured between ECM terminal 46 (Intake air temperature sensor) and ground.

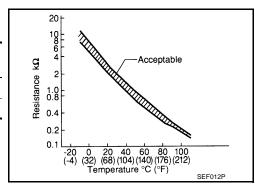

INFOID:0000000008450666

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0127	Intake air temperature too high	Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signal from engine coolant temperature sensor.	Harness or connectors (The sensor circuit is open or shorted) Intake air temperature sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- 1. Wait until engine coolant temperature is less than 96°C (205°F)
- Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT.
- Check the engine coolant temperature.
- If the engine coolant temperature is not less than 96°C (205°F), turn ignition switch OFF and cool down engine.

NOTE:

Perform the following steps before engine coolant temperature is above 96°C (205°F).

P0127 IAT SENSOR

[MR18DE (EXCEPT FOR CALIFORNIA)]

- < DTC/CIRCUIT DIAGNOSIS > Turn ignition switch ON. Select "DATA MONITOR" mode with CONSULT. Start engine. **CAUTION:** Check 1st trip DTC. With GST Is 1st trip DTC detected? >> INSPECTION END NO Diagnosis Procedure Turn ignition switch OFF.
 - 5. Hold vehicle speed at more than 70 km/h (43 MPH) for 100 consecutive seconds.

Always drive vehicle at a safe speed.

Follow the procedure "With CONSULT" above.

>> Go to EC-181, "Diagnosis Procedure".

1. CHECK GROUND CONNECTION

Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK INTAKE AIR TEMPERATURE SENSOR

Refer to EC-181, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace mass air flow sensor (with intake air temperature sensor). Refer to EM-24, "Exploded View".

3.check intermittent incident

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

1. CHECK INTAKE AIR TEMPERATURE SENSOR

- Turn ignition switch OFF.
- Disconnect mass air flow sensor harness connector. 2.
- Check resistance between mass air flow sensor terminals as per the following.

Terminals	Condition	Resistance (k Ω)	
1 and 2	Intake air temperature [°C (°F)]	25 (77)	1.800 - 2.200

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace mass air flow sensor (with intake air temperature sensor). Refer to EM-24, "Exploded View".

EC-181 Revision: 2012 August 2013 CUBE

EC

Α

D

INFOID:0000000008450667

Е

F

Н

INFOID:0000000008450668

M

Ν

Р

P0128 THERMOSTAT FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0128 THERMOSTAT FUNCTION

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0128 is displayed with DTC P0300, P0301, P0302, P0303 or P0304, first perform the trouble diagnosis for DTC P0300, P0301, P0302, P0303, P0304. Refer to <u>EC-238</u>, "DTC Logic".

Engine coolant temperature has not risen enough to open the thermostat even though the engine has run long enough.

This is due to a leak in the seal or the thermostat stuck open.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0128	Thermostat function	The engine coolant temperature does not reach to specified temperature even though the engine has run long enough.	ThermostatLeakage from sealing portion of thermostatEngine coolant temperature sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

- For best results, perform at ambient temperature of -10°C (14°F) or higher.
- For best results, perform at engine coolant temperature of -10°C (14°F) to 52°C (126°F).
- Before performing the following procedure, do not fill with the fuel.

>> GO TO 2.

2.PRECONDITIONING-II

(P)With CONSULT

- 1. Turn ignition switch ON.
- 2. Check the following conditions:

Ambient temperature	-10°C (14°F) or more
A/C switch	OFF
Blower fan switch	OFF

- 3. Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- Check the following conditions:

COOLAN TEMP/S	-10°C - 52°C (14 - 126°F)

Is the condition satisfied?

YES >> GO TO 3.

NO >> 1. Satisfy the condition.

2. GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE-I

(P)With CONSULT

- 1. Start engine.
- 2. Drive the vehicle until the following condition is satisfied.

CAUTION:

Always drive vehicle at safe speed.

STEP 1

Drive the vehicle under the conditions instructed below until the difference between "COOLAN TEMP/S" and "FUEL T/TMP SE" becomes at least 24°C (43°F).

P0128 THERMOSTAT FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

NO

[MR18DE (EXCEPT FOR CALIFORNIA)]

COOLAN TEMP/S	
FUEL T/TMP SE	65°C (149°F) or less Less than the value calculated by sub-
FUEL I/TIMP SE	tracting 24°C (43°F) from "COOLAN TEMP/S".*
*: Example	-
COOLAN TEMP/S	FUEL T/TMP SE
70°C (158°F)	46°C (115°F) or less
65°C (149°F)	41°C (106°F) or less
60°C (140°F)	36°C (97°F) or less
T/TMP SE" maintained at 24 STEP 2 (CVT models) Drive the vehicle at 50 km/h (3 T/TMP SE" maintained at 24 NOTE:	32 MPH) or more with the difference between "COOLAN TEMP/S" and "FUEL 4°C (43°F) or more.
STEP 3 (MT models)	steady as possible during cruising. 7 MPH) or more until "COOLAN TEMP/S" increases by 6°C (11°F).
Drive the vehicle at 50 km/h (3 NOTE: Keep the accelerator pedal as the condition satisfied? YES >> GO TO 4. NO >> GO TO 1.	2 MPH) or more until "COOLAN TEMP/S" increases by 6°C (11°F). steady as possible during cruising.
PERFORM DTC CONFIRMA	TION PROCEDURE-II
With CONSULT	TION PROCEDURE-II Illowing condition is satisfied.
PERFORM DTC CONFIRMA With CONSULT Drive the vehicle until the fo	
With CONSULT Drive the vehicle until the fo COOLAN TEMP/S CAUTION: Always drive vehicle at sa Check 1st trip DTC. S 1st trip DTC detected? YES >> Proceed to EC-183. NO >> INSPECTION END	llowing condition is satisfied. 65°C (149°F) or more (MT models) 59°C (139°F) or more (CVT models)
With CONSULT Drive the vehicle until the fo COOLAN TEMP/S CAUTION: Always drive vehicle at sa Check 1st trip DTC. S 1st trip DTC detected? YES >> Proceed to EC-183. NO >> INSPECTION END Diagnosis Procedure	llowing condition is satisfied. 65°C (149°F) or more (MT models) 59°C (139°F) or more (CVT models) fe speed. "Diagnosis Procedure".
With CONSULT Drive the vehicle until the fo COOLAN TEMP/S CAUTION: Always drive vehicle at sa Check 1st trip DTC. S 1st trip DTC detected? YES >> Proceed to EC-183. NO >> INSPECTION END Diagnosis Procedure CHECK ENGINE COOLANT	Illowing condition is satisfied. 65°C (149°F) or more (MT models) 59°C (139°F) or more (CVT models) fe speed. "Diagnosis Procedure". INFOID:000000008450670
With CONSULT Drive the vehicle until the form of the coolean TEMP/S CAUTION: Always drive vehicle at sa Check 1st trip DTC. S1st trip DTC detected? YES >> Proceed to EC-183. NO >> INSPECTION END Diagnosis Procedure CHECK ENGINE COOLANT Refer to EC-184. "Component In	Illowing condition is satisfied. 65°C (149°F) or more (MT models) 59°C (139°F) or more (CVT models) fe speed. "Diagnosis Procedure". INFOID:000000008450670
With CONSULT Drive the vehicle until the form of the cool of the	Illowing condition is satisfied. 65°C (149°F) or more (MT models) 59°C (139°F) or more (CVT models) fe speed. "Diagnosis Procedure". INFOID:000000008450670
With CONSULT Drive the vehicle until the fo COOLAN TEMP/S CAUTION: Always drive vehicle at sa Check 1st trip DTC. S1st trip DTC detected? YES >> Proceed to EC-183. NO >> INSPECTION END Diagnosis Procedure CHECK ENGINE COOLANT Refer to EC-184, "Component In the inspection result normal? YES >> GO TO 2.	Illowing condition is satisfied. 65°C (149°F) or more (MT models) 59°C (139°F) or more (CVT models) fe speed. "Diagnosis Procedure". INFOID:000000008450670
With CONSULT Drive the vehicle until the fo COOLAN TEMP/S CAUTION: Always drive vehicle at sa Check 1st trip DTC. S1st trip DTC detected? YES >> Proceed to EC-183. NO >> INSPECTION END Diagnosis Procedure CHECK ENGINE COOLANT Refer to EC-184. "Component In the inspection result normal? YES >> GO TO 2. NO >> Replace engine coo	Illowing condition is satisfied. 65°C (149°F) or more (MT models) 59°C (139°F) or more (CVT models) fe speed. "Diagnosis Procedure". TEMPERATURE SENSOR ISPECTION".
With CONSULT Drive the vehicle until the fo COOLAN TEMP/S CAUTION: Always drive vehicle at sa Check 1st trip DTC. S1st trip DTC detected? YES >> Proceed to EC-183. NO >> INSPECTION END Diagnosis Procedure CHECK ENGINE COOLANT Refer to EC-184, "Component In the inspection result normal? YES >> GO TO 2. NO >> Replace engine cool. CHECK THERMOSTAT	Illowing condition is satisfied. 65°C (149°F) or more (MT models) 59°C (139°F) or more (CVT models) fe speed. "Diagnosis Procedure". TEMPERATURE SENSOR ISPECTION".

>> Replace thermostat. Refer to CO-22, "Removal and Installation".

P0128 THERMOSTAT FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Component Inspection

INFOID:0000000008450671

1. CHECK ENGINE COOLANT TEMPERATURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect engine coolant temperature sensor harness connector.
- 3. Remove engine coolant temperature sensor. Refer to CO-24, "Exploded View".
- 4. Check resistance between engine coolant temperature sensor terminals by heating with hot water as shown in the figure.

Terminals	Condition	Resistance	
		20 (68)	2.37 - 2.63 kΩ
1 and 2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00 kΩ
			0.236 - 0.260 kΩ

Is the inspection result normal?

YES >> INSPECTION END


NO >> Replace engine coolant temperature sensor. Refer to CO-24, "Exploded View".

Description INFOID:0000000008450672


The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element.

The sensor is capable of precise measurement $\lambda = 1$, but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide λ range.

The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich.

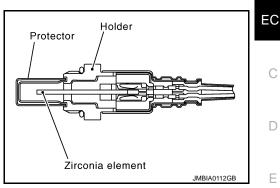

Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of about 800°C (1,472°F).

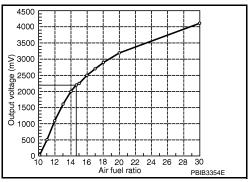

DTC Logic INFOID:0000000008450673

DTC DETECTION LOGIC

To judge the malfunction, the diagnosis checks that the A/F signal computed by ECM from the A/F sensor 1 signal fluctuates according to fuel feedback control.

DTC No.	Trouble diagnosis name	DTC detecting condition		Possible Cause
P0130	Air fuel ratio (A/F) sensor 1	A)	The A/F signal computed by ECM from the A/F sensor 1 signal is constantly in the range other than approx. 2.2 V.	Harness or connectors (The A/F sensor 1 circuit is open or shorted.)
CIrcuit		B)	The A/F signal computed by ECM from the A/F sensor 1 signal is constantly approx. 2.2 V.	A/F sensor 1

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION A

(P)With CONSULT

- Start engine and warm it up to normal operating temperature.
- Let it idle for 2 minutes.
- Check 1st trip DTC.

Is 1st trip DTC detected?

>> Go to EC-187, "Diagnosis Procedure".

EC-185 Revision: 2012 August 2013 CUBE

Α

D

Е

K

Р

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

INFOID:0000000008450674

NO-1 >> With CONSULT: GO TO 3.

NO-2 >> Without CONSULT: GO TO 7.

3.check air fuel ratio (a/f) sensor 1 function

- 1. Select "A/F SEN1 (B1)" in "DATA MONITOR" mode with CONSULT.
- 2. Check "A/F SEN1 (B1)" indication.

Does the indication fluctuates around 2.2 V?

YES >> GO TO 4.

NO >> Go to EC-187, "Diagnosis Procedure".

f 4. PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B-I

- Select "A/F SEN1 (B1) P1276" of "A/F SEN1" in "DTC WORK SUPPORT" mode with CONSULT.
- 2. Touch "START".
- 3. When the following conditions are met, "TESTING" will be displayed on the CONSULT screen.

ENG SPEED	1,000 - 3,200 rpm
VHCL SPEED SE	More than 64 km/h (40 mph)
B/FUEL SCHDL	1.0 - 8.0 msec
Selector lever	D position (CVT) 5th position (M/T)

If "TESTING" is not displayed after 20 seconds, retry from step 2.

CAUTION:

Always drive vehicle at a safe speed.

Is "TESTING" displayed on CONSULT screen?

YES >> GO TO 5.

NO >> Check A/F sensor 1 function again. GO TO 3.

5.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B-II

Release accelerator pedal fully.

NOTE:

Never apply brake during releasing the accelerator pedal.

Which does "TESTING" change to?

COMPLETED>>GO TO 6.

OUT OF CONDITION>>Retry DTC CONFIRMATION PROCEDURE. GO TO 4.

$oldsymbol{6}$ Perform DTC confirmation procedure for malfunction B-III

Touch "SELF-DIAG RESULT"

Which is displayed on CONSULT screen?

YES >> INSPECTION END

NO >> Go to EC-187, "Diagnosis Procedure".

/ .PERFORM COMPONENT FUNCTION CHECK FOR MALFUNCTION B

Perform Component Function Check. Refer to EC-186, "Component Function Check".

NOTE:

Use component function check to check the overall function of the A/F sensor 1 circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-187, "Diagnosis Procedure".

Component Function Check

1.PERFORM COMPONENT FUNCTION CHECK

With GST

- 1. Start engine and warm it up to normal operating temperature.
- 2. Drive the vehicle at a speed of 80 km/h (50 MPH) for a few minutes in the suitable gear position.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Shift the selector lever to the D position (CVT) or 1st position (M/T), then release the accelerator pedal fully until the vehicle speed decreases to 50 km/h (31 MPH).

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

Never apply brake during releasing the accelerator pedal.

- Repeat steps 2 to 3 for five times.
- 5. Stop the vehicle and turn ignition switch OFF.
- 6. Wait at least 10 seconds and restart engine.
- 7. Repeat steps 2 to 3 for five times.
- 8. Stop the vehicle.
- Check 1st trip DTC.

Is 1st trip DTC detected?

>> Go to EC-187, "Diagnosis Procedure". YES

>> INSPECTION END NO

Diagnosis Procedure

1. CHECK GROUND CONNECTION

Turn ignition switch OFF.

Check ground connection E38. Refer to GI-44, "Circuit Inspection". 2.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- Disconnect A/F sensor 1 harness connector.
- Turn ignition switch ON. 2.
- Check the voltage between A/F sensor 1 harness connector and ground.

A/F se	ensor 1	Ground	Voltage
Connector	Terminal	Giodila	
F50	4	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8. F1
- IPDM E/R harness connector E15
- 15 A fuse (No. 61)
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

4.CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

A/F sensor 1		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F50	1	F8	49	Existed
1 30	2	10	53	LXISIEU

EC-187 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

INFOID:0000000008450675

F

Н

N

Р

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

4. Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

A/F se	ensor 1	Ground	Continuity
Connector	Terminal	Glound	Continuity
F50	1	Ground	Not existed
	2	Glound	NOT EXISTED

E	CM	Ground	Continuity
Connector	Terminal	Glound	Continuity
F8	49	Ground	Not existed
	53	Glound	Not existed

5. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK INTERMITTENT INCIDENT

Perform GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace.

6.REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1. Refer to EM-30, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).


>> INSPECTION END

Description INFOID:0000000008450676


The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element.

The sensor is capable of precise measurement $\lambda = 1$, but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide λ range.

The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich.

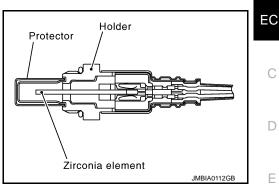

Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of about 800°C (1,472°F).

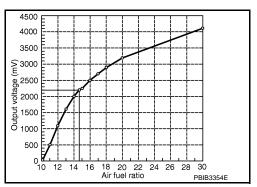

DTC Logic INFOID:0000000008450677

DTC DETECTION LOGIC

To judge the malfunction, the diagnosis checks that the A/F signal computed by ECM from the A/F sensor 1 signal is not inordinately low.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible Cause
P0131	Air fuel ratio (A/F) sensor 1 circuit low voltage	The A/F signal computed by ECM from the A/F sensor 1 signal is constantly approx. 0 V.	Harness or connectors (The A/F sensor 1 circuit is open or shorted.) A/F sensor 1

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5 V at idle.

>> GO TO 2.

2.CHECK A/F SENSOR FUNCTION

With CONSULT

- Start engine and warm it up to normal operating temperature.
- Select "A/F SEN1 (B1)" in "DATA MONITOR" mode with CONSULT.
- Check "A/F SEN1 (B1)" indication.

■With GST

Follow the procedure "With CONSULT" above.

Is the indication constantly approx. 0 V?

EC-189 2013 CUBE Revision: 2012 August

Α

D

F

Н

K

L

M

N

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

YES >> Go to EC-190, "Diagnosis Procedure".

NO >> GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE

(I) With CONSULT

- 1. Turn ignition switch OFF, wait at least 10 seconds and then restart engine.
- Drive and accelerate vehicle to more than 40 km/h (25 MPH) within 20 seconds after restarting engine.

Always drive vehicle at a safe speed.

3. Maintain the following conditions for about 20 consecutive seconds.

ENG SPEED	1,000 - 3,200 rpm
VHCL SPEED SE	More than 40 km/h (25 mph)
B/FUEL SCHDL	1.5 - 9.0 msec
Selector lever	Suitable position

NOTE:

- Keep the accelerator pedal as steady as possible during the cruising.
- If this procedure is not completed within 1 minute after restarting engine at step 1, return to step 1.
- 4. Check 1st trip DTC.

With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Go to EC-190, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450678

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- Disconnect A/F sensor 1 harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between A/F sensor 1 harness connector and ground.

A/F se	ensor 1	Ground	Voltage	
Connector Terminal		Ground	Vollage	
F50	4	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

${f 3.}$ DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- IPDM E/R harness connector E15
- 15 A fuse (No. 61)
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

4. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

A/F sensor 1		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F50	1	F8	49	Existed
1 30	2	10	53	LAISIGU

Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

A/F se	ensor 1	Ground	Continuity	
Connector Terminal		Giodila	Continuity	
F50	1	Ground	Not existed	
1 30	2	Giodila	Not existed	

E	CM	Ground	Continuity	
Connector Terminal		Glound	Continuity	
F8	49	Ground	Not existed	
10	53	Glound	Not existed	

5. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5.CHECK INTERMITTENT INCIDENT

Perform GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace.

O.REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1. Refer to EM-30, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

EC

Α

D

Е

F

G

Н

K

L

Р


Ν

Description INFOID:000000008450679


The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element.

The sensor is capable of precise measurement $\lambda = 1$, but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide λ range.

The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich.

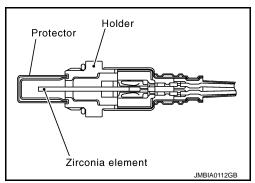

Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of about 800°C (1,472°F).

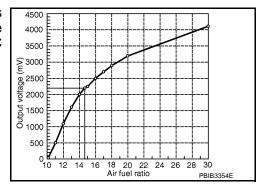

DTC Logic

DTC DETECTION LOGIC

To judge the malfunction, the diagnosis checks that the A/F signal computed by ECM from the A/F sensor 1 signal is not inordinately high.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible Cause
P0132	Air fuel ratio (A/F) sensor 1 circuit high voltage	The A/F signal computed by ECM from the A/F sensor 1 signal is constantly approx. 5 V.	Harness or connectors (The A/F sensor 1 circuit is open or shorted.) A/F sensor 1

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5 V at idle.

>> GO TO 2.

2. CHECK A/F SENSOR FUNCTION

(I) With CONSULT

- Start engine and warm it up to normal operating temperature.
- Select "A/F SEN1 (B1)" in "DATA MONITOR" mode with CONSULT.
- 3. Check "A/F SEN1 (B1)" indication.

With GST

Follow the procedure "With CONSULT" above.

Is the indication constantly approx. 5 V?

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

YES	>> Go to EC-193, "Diagnosis Procedure"
NO	>> GO TO 3.

3.PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

1. Turn ignition switch OFF, wait at least 10 seconds and then restart engine.

2. Drive and accelerate vehicle to more than 40 km/h (25 MPH) within 20 seconds after restarting engine. CAUTION:

Always drive vehicle at a safe speed.

3. Maintain the following conditions for about 20 consecutive seconds.

ENG SPEED	1,000 - 3,200 rpm
VHCL SPEED SE	More than 40 km/h (25 mph)
B/FUEL SCHDL	1.5 - 9.0 msec
Selector lever	Suitable position

NOTE:

- Keep the accelerator pedal as steady as possible during the cruising.
- If this procedure is not completed within 1 minute after restarting engine at step 1, return to step
- 4. Check 1st trip DTC.

Follow the procedure "With CONSULT" above.

Is 1st trip DTC is detected?

YES >> Go to EC-193, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK GROUND CONNECTION

Turn ignition switch OFF.

Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- Disconnect A/F sensor 1 harness connector.
- Turn ignition switch ON.
- Check the voltage between A/F sensor 1 harness connector and ground.

A/F se	ensor 1	Ground	Voltage	
Connector Terminal		Glound	voltage	
F50	4	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- IPDM E/R harness connector E15
- 15 A fuse (No. 61)
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

EC

Α

D

Е

Н

INFOID:0000000008450681

N

2013 CUBE

${f 4.}$ CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

A/F sensor 1		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F50	1	F8	49	Existed
1 30	2	1-0	53	LAISIEU

4. Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

A/F se	ensor 1	Ground	Continuity	
Connector Terminal		Glound	Continuity	
F50	1	Ground	Not existed	
1 30	2	Giodila	Not existed	

E	CM	Ground	Continuity	
Connector	Terminal	Glound	Continuity	
F8	49	Ground	Not existed	
ı-o	53	Giouna	inot existed	

5. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK INTERMITTENT INCIDENT

Perform GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace.

6. REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1. Refer to EM-30, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

P0137 H02S2


Description INFOID:0000000008450682

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas on each bank.

Even if switching characteristics of the air fuel ratio (A/F) sensor 1 are shifted, the air-fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1 V in richer conditions to 0 V in leaner conditions.

Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

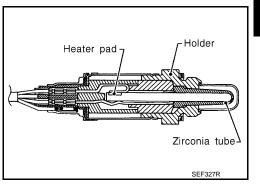

Α

EC

D

Е

F

Н

K

M


Ν

Р

DTC Logic

DTC DETECTION LOGIC

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the air fuel ratio (A/F) sensor 1. The oxygen storage capacity of the three way catalyst (manifold) causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the maximum voltage of the sensor is sufficiently high during the various driving condition such as fuel-cut.

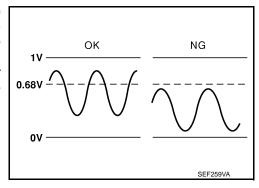

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0137	Heated oxygen sensor 2 circuit low voltage	The maximum voltage from the sensor is not reached to the specified voltage.	Harness or connectors (The sensor circuit is open or shorted) Heated oxygen sensor 2 Fuel pressure Fuel injector Intake air leaks

DTC CONFIRMATION PROCEDURE

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 5.

2.PRECONDITIONING

If DTC confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

For better results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30°C (32 to 86°F).

>> GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

P0137 H02S2

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.
- 2. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- 6. Make sure that "COOLAN TEMP/S" indicates more than 70°C (158°F).

If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches 70°C (158°F).

- 7. Open engine hood.
- 8. Select "HO2S2 (B1) P1147" of "HO2S2" in "DTC WORK SUPPORT" mode with CONSULT.
- 9. Follow the instruction of CONSULT.

NOTE:

It will take at most 10 minutes until "COMPLETED" is displayed.

10. Touch "SELF-DIAG RESULT".

Which is displayed on CONSULT screen?

OK >> INSPECTION END

NG >> Go to EC-197, "Diagnosis Procedure".

CAN NOT BE DIAGNOSED>>GO TO 4.

f 4.PERFORM DTC CONFIRMATION PROCEDURE AGAIN

- 1. Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).
- 2. Perform DTC CONFIRMATION PROCEDURE again.

>> GO TO 3.

5. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-196, "Component Function Check".

NOTE:

Use component function check to check the overall function of the heated oxygen sensor 2 circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-197, "Diagnosis Procedure".

Component Function Check

INFOID:0000000008450684

1.PERFORM COMPONENT FUNCTION CHECK-I

♥Without CONSULT

- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector and ground under the following condition.

E	ECM		Condition	Voltage	
Connector	Terminal	Ground	Condition	voltage	
F8	50 (HO2S2 signal)	Ground	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. PERFORM COMPONENT FUNCTION CHECK-II

Check the voltage between ECM harness connector and ground under the following condition.

[MR18DE (EXCEPT FOR CALIFORNIA)]

E	ECM Ground		Condition	Voltage
Connector	Terminal	Ground	Condition	vollage
F8	50 (HO2S2 signal)	Ground	Keeping engine speed at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 3.

3.perform component function check-iii

Check the voltage between ECM harness connector and ground under the following condition.

E	ECM		Condition	Voltage
Connector	Terminal	Ground	Condition	vollage
F8	50 (HO2S2 signal)	Ground	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.68 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

>> Go to EC-197, "Diagnosis Procedure". NO

Diagnosis Procedure

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CLEAR THE MIXTURE RATIO SELF-LEARNING VALUE

- Clear the mixture ratio self-learning value. Refer to EC-26, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".
- Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC P0171 detected? Is it difficult to start engine?

>> Perform trouble diagnosis for DTC P0171. Refer to EC-220, "DTC Logic".

NO >> GO TO 3.

3.CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect heated oxygen sensor 2 (HO2S2) harness connector.
- Disconnect ECM harness connector.
- Check the continuity between HO2S2 harness connector and ECM harness connector.

НО	2S2	E	CM	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F30	1	F8	59	Existed

5. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

$oldsymbol{4}.$ CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between HO2S2 harness connector and ECM harness connector.

Α

EC

Е

F

INFOID:0000000008450685

Н

M

N

Р

НО	2S2	ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F30	4	F8	50	Existed

Check the continuity between HO2S2 harness connector and ground, or ECM harness connector and ground.

НО	2S2	Ground	Continuity	
Connector	Terminal	Giodila	Continuity	
F30	4	Ground	Not existed	

E	CM	Ground	Continuity
Connector	Terminal	Glound	Continuity
F8	50	Ground	Not existed

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5.CHECK HEATED OXYGEN SENSOR 2

Refer to EC-198, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 6.

6.REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

7. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008450686

1. INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2. NO >> GO TO 3.

2.CHECK HEATED OXYGEN SENSOR 2

(I) With CONSULT

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

P0137 H02S2

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Α

EC

D

Е

F


K

M

Ν

Р

- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)" as the monitor item with CONSULT.
- 7. Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to ± 25%.

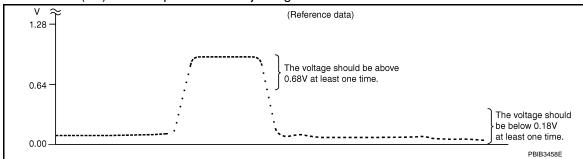

"HO2S2 (B1)" should be above 0.68 V at least once when the "FUEL INJECTION" is + 25%. "HO2S2 (B1)" should be below 0.18 V at least once when the "FUEL INJECTION" is – 25%.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

3. CHECK HEATED OXYGEN SENSOR 2-I

Without CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 4. Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector and ground under the following condition.

E	ECM Ground		Condition	Voltage
Connector	Terminal	Glound	Condition	
F8	50 (HO2S2 signal)	Ground	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

4.CHECK HEATED OXYGEN SENSOR 2-II

Check the voltage between ECM harness connector and ground under the following condition.

E	ECM		Condition	Voltage
Connector	Terminal	Ground	Condition	voltage
F8	50 (HO2S2 signal)	Ground	Keeping engine speed at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 5.

5. CHECK HEATED OXYGEN SENSOR 2-III

Check the voltage between ECM harness connector and ground under the following condition.

P0137 H02S2

[MR18DE (EXCEPT FOR CALIFORNIA)]

E	ECM Groun		Condition	Voltage
Connector	Terminal	Glound	Condition	voltage
F8	50 (HO2S2 signal)	Ground	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

6. REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

P0138 H02S2


Description INFOID:0000000008450687

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas on each bank.

Even if switching characteristics of the air fuel ratio (A/F) sensor 1 are shifted, the air-fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1 V in richer conditions to 0 V in leaner conditions.

Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

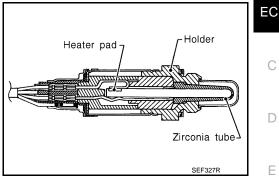

Α

D

Е

Н

K

M

Ν

Р


DTC Logic INFOID:0000000008450688

DTC DETECTION LOGIC

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the air fuel ratio (A/ F) sensor 1. The oxygen storage capacity of the three way catalyst (manifold) causes the longer switching time.


MALFUNCTION A

To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the voltage is unusually high during the various driving condition such as fuel-cut.

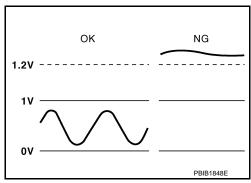

MALFUNCTION B

To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the minimum voltage of sensor is sufficiently low during the various driving condition such as fuel-cut.

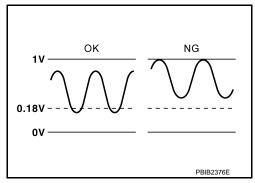

DTC No.	Trouble diagnosis name	DTC detecting condition		Possible cause
		A)	An excessively high voltage from the sensor is sent to ECM.	Harness or connectors (The sensor circuit is open or shorted) Heated oxygen sensor 2
P0138	Heated oxygen sensor 2 circuit high voltage	B)	The minimum voltage from the sensor is not reached to the specified voltage.	 Harness or connectors (The sensor circuit is open or shorted) Heated oxygen sensor 2 Fuel pressure Fuel injector

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION A

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 4. Let engine idle for 2 minutes.
- 5. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-203, "Diagnosis Procedure".

NO-1 >> With CONSULT: GO TO 3.

NO-2 >> Without CONSULT: GO TO 5.

3.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B

NOTE:

For better results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30°C (32 to 86°F).

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- 6. Make sure that "COOLAN TEMP/S" indication is more than 70°C (158°F).

If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches 70°C (158°F).

- 7. Open engine hood.
- 8. Select "HO2S2 (B1) P1146" of "HO2S2" in "DTC WORK SUPPORT" mode with CONSULT.
- 9. Follow the instruction of CONSULT.

NOTE:

It will take at most 10 minutes until "COMPLETED" is displayed.

10. Touch "SELF-DIAG RESULT".

Which is displayed on CONSULT

OK >> INSPECTION END

NG >> Go to EC-203, "Diagnosis Procedure".

CAN NOT BE DIAGNOSED>>GO TO 4.

4.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B AGAIN

- 1. Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).
- 2. Perform DTC CONFIRMATION PROCEDURE again.

>> GO TO 3.

5.PERFORM COMPONENT FUNCTION CHECK FOR MALFUNCTION B

Perform component function check. Refer to EC-203, "Diagnosis Procedure".

NOTE:

Use component function check to check the overall function of the heated oxygen sensor 2 circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-203, "Diagnosis Procedure".

Component Function Check

INFOID:0000000008450689

[MR18DE (EXCEPT FOR CALIFORNIA)]

(R) Without CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage	
Connector	Terminal	Ground	Condition	voltage	
F8	50 (HO2S2 signal)	Ground	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.18 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.PERFORM COMPONENT FUNCTION CHECK-II

Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage	
Connector	Terminal	Glound	Condition	vollage	
F8	50 (HO2S2 signal)	Ground	Keeping engine speed at idle for 10 minutes	The voltage should be above 0.18 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 3.

3.PERFORM COMPONENT FUNCTION CHECK-III

Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage
Connector	Terminal	Glound	Condition	vollage
F8	50 (HO2S2 signal)	Ground	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-203, "Diagnosis Procedure".

Diagnosis Procedure

1.INSPECTION START

Confirm the detected malfunction (A or B). Refer to EC-201, "DTC Logic".

Which malfunction is detected?

A >> GO TO 2.

B >> GO TO 9.

2.CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace ground connection.

3. CHECK HO2S2 CONNECTOR FOR WATER

EC

Α

D

Е

_

IZ.

ı

INFOID:0000000008450690

Ν

0

D

Ρ

- 1. Disconnect heated oxygen sensor 2 harness connector.
- Check connectors for water.

Water should not exist.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connectors.

4. CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Disconnect ECM harness connector.
- 2. Check the continuity between HO2S2 harness connector and ECM harness connector.

НО	HO2S2		ECM	
Connector	Terminal	Connector	Terminal	Continuity
F30	1	F8	59	Existed

3. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5.CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between HO2S2 harness connector and ECM harness connector.

НО	HO2S2		ECM		
Connector	Terminal	Connector	Terminal	Continuity	
F30	4	F8	50	Existed	

2. Check the continuity between HO2S2 harness connector and ground, or ECM harness connector and ground.

НО	2S2	Ground	Continuity
Connector	Terminal	Ground	Continuity
F30	4	Ground	Not existed

E	CM	Ground	Continuity	
Connector	Terminal		Continuity	
F8	50	Ground	Not existed	

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

6.CHECK HEATED OXYGEN SENSOR 2

Refer to EC-206, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 7.

7.REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION:

• Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

P0138 HO2S2

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

 Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

8.CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

9. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair or replace ground connection.

10.clear the mixture ratio self-learning value

- Clear the mixture ratio self-learning value. Refer to EC-26, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".
- Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC P0172 detected? Is it difficult to start engine?

>> Perform trouble diagnosis for DTC P0172. Refer to EC-224. "DTC Logic".

NO >> GO TO 11.

11. CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect heated oxygen sensor 2 harness connector.
- Disconnect ECM harness connector.
- Check the continuity between HO2S2 harness connector and ECM harness connector.

HO2S2		E	Continuity	
Connector	Terminal	Connector	Terminal	Continuity
F30	1	F8	59	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

12.CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between HO2S2 harness connector and ECM harness connector.

НО	HO2S2		ECM		
Connector	Terminal	Connector	Terminal	Continuity	
F30	4	F8	50	Existed	

Check the continuity between HO2S2 harness connector or ECM harness connector and ground.

НО	2S2	Ground	Continuity
Connector	Terminal	Glound	Continuity
F30	4	Ground	Not existed

EC-205 Revision: 2012 August 2013 CUBE

EC

D

F

Н

M

N

E	CM	Ground	Continuity
Connector	Terminal	Glound	Continuity
F8	50	Ground	Not existed

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 13.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

13. CHECK HEATED OXYGEN SENSOR 2

Refer to EC-206, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 15. NO >> GO TO 14.

14. REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

15. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008450691

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK HEATED OXYGEN SENSOR 2

(P)With CONSULT

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- 6. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)" as the monitor item with CONSULT.

Α

EC

D


Е

Н

K

Ν

7. Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to \pm 25%.

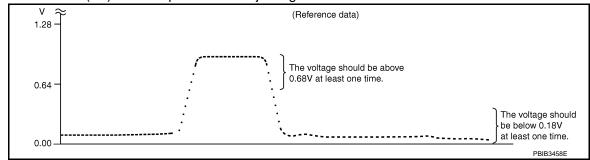

"HO2S2 (B1)" should be above 0.68 V at least once when the "FUEL INJECTION" is + 25%. "HO2S2 (B1)" should be below 0.18 V at least once when the "FUEL INJECTION" is – 25%.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

3.CHECK HEATED OXYGEN SENSOR 2-I

Without CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector and ground under the following condition.

E	ECM		Condition	Voltage	
Connector	Terminal	Ground	Condition	voltage	
F8	50 (HO2S2 signal)	Ground	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

4.CHECK HEATED OXYGEN SENSOR 2-II

Check the voltage between ECM harness connector and ground under the following condition.

E	ECM		Condition	Voltage
Connector	Terminal	Ground	Condition	vollage
F8	50 (HO2S2 signal)	Ground	Keeping engine speed at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 5.

CHECK HEATED OXYGEN SENSOR 2-III.

Check the voltage between ECM harness connector and ground under the following condition.

P0138 HO2S2

[MR18DE (EXCEPT FOR CALIFORNIA)]

ECM		Ground	Condition	Voltago	
Connector	Terminal	Glound	Condition	Voltage	
F8	50 (HO2S2 signal)	Ground	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

6. REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

P0139 H02S2


Description INFOID:0000000008450692

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas on each bank.

Even if switching characteristics of the air fuel ratio (A/F) sensor 1 are shifted, the air-fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1 V in richer conditions to 0 V in leaner conditions.

Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

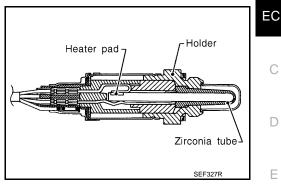

Α

D

F

Н

M


Ν

Р

DTC Logic INFOID:0000000008450693

DTC DETECTION LOGIC

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the air fuel ratio (A/F) sensor 1. The oxygen storage capacity of the three way catalyst 1 causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the switching response of the sensor's voltage is faster than specified during various driving conditions such as fuel cut.

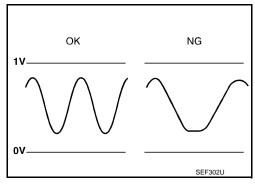

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0139	Heated oxygen sensor 2 (bank 1) circuit slow response	The switching time between rich and lean of a heated oxygen sensor 2 signal delays more than the specified time computed by ECM.	 Harness or connectors (The sensor circuit is open or shorted) Heated oxygen sensor 2 Fuel system EVAP system Intake air system

DTC CONFIRMATION PROCEDURE

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 7.

2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

For better results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30°C (32 to 86°F).

>> GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.
- 2. Start engine and warm it up to the normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.
- 6. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 7. Let engine idle for 1 minute.
- 8. Make sure that "COOLAN TEMP/S" indicates more than 70°C (158°F).
- 9. Drive the vehicle in a proper at 60 km/h (38MPH) and maintain the speed.

CAUTION:

Always drive vehicle at a safe speed.

10. Release the accelerator pedal fully at least 5 seconds.

CAUTION:

- Enable engine brake.
- · Always drive carefully.
- Never apply brake when releasing the accelerator pedal.
- 11. Repeat step 9 and 10 at least 8 times.
- 12. Check the following item of "DATA MONITOR".

Data monitor item	Status
HO2 S2 DIAG1 (B1)	CMPLT
HO2 S2 DIAG2 (B1)	OWIFEI

Is "CMPLT" displayed on CONSULT screen?

YES >> GO TO 6.

NO-1: "CMPLT" is not displayed on DIAG 1>>Perform DTC confirmation procedure again.

NO-2: "CMPLT" is not displayed on DIAG 2>>GO TO 4.

4. PERFORM DTC WORK SUPPORT

- 1. Open engine hood.
- 2. Select "HO2S2 (B1) P0139" in "DTC WORK SUPPORT" mode with CONSULT.
- 3. Start engine and follow the instruction of CONSULT display.

NOTE:

It will take at most 10 minutes until "COMPLETED" is displayed.

Is "COMPLETED" displayed on CONSULT screen?

YES >> GO TO 6.

NO >> GO TO 5.

${f 5}$ PERFORM DTC CONFIRMATION PROCEDURE AGAIN

- 1. Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).
- 2. Perform DTC confirmation procedure again.

>> GO TO 3.

6.PERFORM SELF-DIAGNOSIS

(P)With CONSULT

Perform ECM self-diagnosis.

Is DTC "P0139" detected?

YES >> Proceed to EC-211, "Diagnosis Procedure".

NO >> INSPECTION END

7. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-211, "Component Function Check".

NOTE:

Use component function check to check the overall function of the heated oxygen sensor 2 circuit. During this check, a 1st trip DTC might not be confirmed.

P0139 HO2S2

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-211, "Diagnosis Procedure".

Component Function Check

INFOID:0000000008450694

1.PERFORM COMPONENT FUNCTION CHECK-I

♥Without CONSULT

- Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage	
Connector	Terminal	Glound	Condition	voitage	
F8	50 (HO2S2 signal)	Ground	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.8 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2 Perform component function check-II

Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage	
Connector	Terminal	Giodila	Condition	vollage	
F8	50 (HO2S2 signal)	Ground	Keeping engine speed at idle for 10 minutes	The voltage should be above 0.8 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 3.

3. PERFORM COMPONENT FUNCTION CHECK-III

Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage
Connector	Terminal	Glound	Condition	vollage
F8	50 (HO2S2 signal)	Ground	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.8 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-211, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008450695

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

EC-211 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

F

K

N

2.clear the mixture ratio self-learning value

- Clear the mixture ratio self-learning value. Refer to <u>EC-26</u>, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".
- 2. Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC P0171 or P0172 detected? Is it difficult to start engine?

YES >> Perform trouble diagnosis for DTC P0171 or P0172. Refer to <u>EC-220, "DTC Logic"</u> or <u>EC-224, "DTC Logic"</u>.

NO >> GO TO 3.

3.check ho2s2 ground circuit for open and short

- Turn ignition switch OFF.
- 2. Disconnect heated oxygen sensor 2 harness connector.
- 3. Disconnect ECM harness connector.
- 4. Check the continuity between HO2S2 harness connector and ECM harness connector.

НО	2S2	E(CM	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F30	1	F8	59	Existed

5. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4.CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between HO2S2 harness connector and ECM harness connector.

НО	2S2	ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F30	4	F8	50	Existed

Check the continuity between HO2S2 harness connector and ground, or ECM harness connector and ground.

НО	2S2	Ground	Continuity	
Connector	Connector Terminal		Continuity	
F30	4	Ground	Not existed	

E	CM	Ground	Continuity	
Connector	Connector Terminal		Continuity	
F8	50	Ground	Not existed	

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK HEATED OXYGEN SENSOR 2

Refer to EC-213, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

6. REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5. "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

EC

>> INSPECTION END

7.CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?


YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK HEATED OXYGEN SENSOR 2

(P)With CONSULT

- Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.
- Start engine and warm it up to normal operating temperature. 2.
- Turn ignition switch OFF and wait at least 10 seconds.
- 4 Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)" as the monitor item with CONSULT.
- 7. Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to ± 25%.

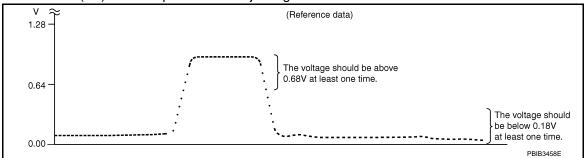

"HO2S2 (B1)" should be above 0.68 V at least once when the "FUEL INJECTION" is + 25%. "HO2S2 (B1)" should be below 0.18 V at least once when the "FUEL INJECTION" is – 25%.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

3.CHECK HEATED OXYGEN SENSOR 2-I

®Without CONSULT

- Start engine and warm it up to normal operating temperature. 1.
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 4. Let engine idle for 1 minute.
- Check the voltage between ECM harness connector and ground under the following condition.

D

INFOID:0000000008450696

Е

Н

K

N

Р

2013 CUBE

[MR18DE (EXCEPT FOR CALIFORNIA)]

ECM		Ground	Condition	Voltage
Connector	Terminal	Giouna	Condition	voltage
F8	50 (HO2S2 signal)	Ground	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

4. CHECK HEATED OXYGEN SENSOR 2-II

Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage
Connector	Terminal	Giodila	Condition	vollage
F8	50 (HO2S2 signal)	Ground	Keeping engine speed at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 5.

5. CHECK HEATED OXYGEN SENSOR 2-III

Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage
Connector	Terminal	Giodila	Condition	voltage
F8	50 (HO2S2 signal)	Ground	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

6. REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

Α

EC

D

Н

M

N

Р


P014C, P014D, P015A, P015B A/F SENSOR 1

Description INFOID:0000000008450697


The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element.

The sensor is capable of precise measurement $\lambda = 1$, but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide λ range.

The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich.

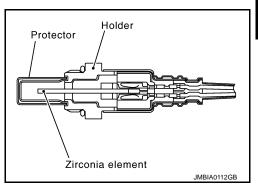

Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of about 800°C (1,472°F).

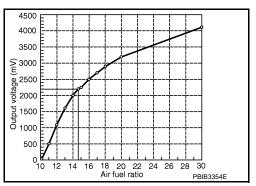

DTC Logic

DTC DETECTION LOGIC

To judge malfunctions, this diagnosis measures response time of the A/F signal computed by ECM from the A/F sensor 1 signal. The time is compensated by engine operating (speed and load), fuel feedback control constant, and the A/F sensor 1 temperature index. Judgment is based on whether the compensated time (the A/F signal cycling time index) is inordinately long or not.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible Cause
P014C	Air fuel ratio (A/F) sensor 1		
P014D	(bank 1) circuit slow re- sponse	 The response time of a A/F sensor 1 signal de- lays more than the specified time computed by ECM. 	Harness or connectors (The A/F sensor 1 circuit is open or
P015A	Air fuel ratio (A/F) sensor 1		shorted.) • A/F sensor 1
P015B	(bank 1) circuit delayed response		- WI SCHSOLI

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

Do you have CONSULT?

YES >> GO TO 2. NO >> GO TO 6.

2.PERFORM DTC CONFIRMATION PROCEDURE-1

Revision: 2012 August EC-215 2013 CUBE

P014C, P014D, P015A, P015B A/F SENSOR 1

[MR18DE (EXCEPT FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

(P)With CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- 5. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1minute under no load.
- Let engine idle for 1 minute.
- 7. Increase the engine speed up to about 3,600 rpm and keep it for 10 seconds.
- 8. Fully release accelerator pedal and then let engine idle for about 1 minute.
- 9. Check the items status of "DATA MONITOR" as follows.

NOTE:

If "PRSNT" changed to "ABSNT", refer to EC-126, "Component Function Check".

Data monitor item	Status
A/F SEN1 DIAG3 (B1)	PRSNT

Is "PRSNT" displayed on CONSULT screen?

YES >> GO TO 4. NO >> GO TO 3.

3.PERFORM DTC CONFIRMATION PROCEDURE-2

(P)With CONSULT

Perform DTC confirmation procedure-1 again.

Is "PRSNT" displayed on CONSULT screen?

YES >> GO TO 4.

NO >> Refer to EC-126, "Component Function Check".

4. PERFORM DTC CONFIRMATION PROCEDURE-2

(P)With CONSULT

- 1. Wait for about 20 seconds at idle.
- 2. Check the items status of "DATA MONITOR" as follows.

NOTE:

If "CMPLT" changed to "INCMP", refer to EC-126, "Component Function Check".

Data monitor item	Status	
A/F SEN1 DIAG1 (B1)	CMPLT	
A/F SEN1 DIAG2 (B1)	CIVIFEI	

Is "CMPLT" displayed on CONSULT screen?

YES >> GO TO 5.

NO >> Refer to EC-126, "Component Function Check".

5. PERFORM SELF-DIAGNOSIS

(A) With CONSULT

Check the "SELF-DIAG RESULT".

Is any DTC detected?

YES >> Proceed to EC-217, "Diagnosis Procedure".

NO >> INSPECTION END

6.CHECK AIR-FUEL RATIO SELF-LEARNING VALUE

With GST

- 1. Start engine and warm it up to normal operating temperature.
- Select Service \$01 with GST.
- 3. Calculate the total value of "Short term fuel trim" and "Long term fuel trim" indications.

Is the total percentage within ±15%?

YES >> GO TO 8. NO >> GO TO 7.

P014C, P014D, P015A, P015B A/F SENSOR 1

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Α

EC

D

M

N

Р

7.DETECT MALFUNCTIONING PART

Check the following.

- · Intake air leaks
- · Exhaust gas leaks
- Incorrect fuel pressure
- Lack of fuel
- Fuel injector
- Incorrect PCV hose connection
- PCV valve
- · Mass air flow sensor

>> Repair or replace malfunctioning part.

8.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- 6. Increase the engine speed up to about 3,600 rpm and keep it for 10 seconds.
- 7. Fully release accelerator pedal and then let engine idle for about 1 minute.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-217, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK GROUND CONNECTION

1. Turn ignition switch OFF.

2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.RETIGHTEN A/F SENSOR 1


Loosen and retighten the A/F sensor 1. Refer to EM-30, "Exploded View".

>> GO TO 3.

3. CHECK EXHAUST GAS LEAK

1. Start engine and run it at idle.

Listen for an exhaust gas leak before three way catalyst (manifold).

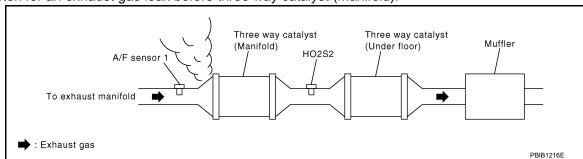

Is exhaust gas leak detected?

YES >> Repair or replace.

NO >> GO TO 4.

Revision: 2012 August

EC-217

INFOID:0000000008450699

P014C, P014D, P015A, P015B A/F SENSOR 1

[MR18DE (EXCEPT FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

4. CHECK FOR INTAKE AIR LEAK

Listen for an intake air leak after the mass air flow sensor.

Is intake air leak detected?

YES >> Repair or replace.

NO >> GO TO 5.

5.CLEAR THE MIXTURE RATIO SELF-LEARNING VALUE

- Clear the mixture ratio self-learning value. Refer to <u>EC-26, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement"</u>.
- 2. Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC P0171 or P172 detected? Is it difficult to start engine?

YES >> Perform trouble diagnosis for DTC P0171 or P0172. Refer to <u>EC-220, "DTC Logic"</u> or <u>EC-224, "DTC Logic"</u>.

NO >> GO TO 6.

6.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Disconnect A/F sensor 1 harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between A/F sensor 1 harness connector and ground.

A/F se	ensor 1	Ground	Voltage
Connector Terminal		Glound	voltage
F50	4	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 7.

1. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- IPDM E/R harness connector E15
- 15 A fuse (No. 61)
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

8.CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

A/F se	A/F sensor 1		CM	Continuity
Connector	Terminal	Connector Terminal		Continuity
F50	F50 1 F8		49	Existed
1 30	2	10	53	LAISIGU

4. Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

A/F sensor 1 Connector Terminal		Ground	Continuity	
		Glound		
F50	1	Ground	Not existed	
1 30	2	Glound	Not existed	

P014C, P014D, P015A, P015B A/F SENSOR 1

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

	СМ	Ground	Continuity	•
Connector	Terminal	Glound	Continuity	_
F8	49 53	Ground	Not existed	
. Also check	harness for sh	ort to power.		'
•	n result normal	<u>?</u>		
	O TO 9.	t or chart to are	und or chart to	power in harness or connectors.
	R FUEL RATIO (•		power in namess or connectors.
			I HEATER	
· · · · · · · · · · · · · · · · · · ·	5, "Component on result normal			
•	on result norman O TO 10.	<u>f.</u>		
	O TO 13.			
$0.$ CHECK $^{ ext{ iny N}}$	MASS AIR FLOV	W SENSOR		
Refer to EC-15	5, "Component	Inspection".		
	n result normal	· ·		
	O TO 11.			
	•	flow sensor. Re	fer to <u>EM-24, "</u>	Exploded View".
11.снеск р				
· · · · · · · · · · · · · · · · · · ·	9, "Component			
-	<u>n result normal</u>	?		
	OTO 12. pair or replace	PCV valve. Refe	er to EM-42. "E	xploded View".
	NTERMITTENT		<u>=</u>	
	"Intermittent In			
	n result normal			
-	O TO 13.	-		
	pair or replace.			
3.REPLACE	E AIR FUEL RA	TIO (A/F) SENS	SOR 1	
	el ratio (A/F) sen	sor 1. Refer to	EM-30, "Explo	led View".
CAUTION:	sonsor which	has boon dror	anad from a h	eight of more than 0.5 m (19.7 in) onto a hard
surface sucl Before insta	h as a concrete Illing new sens	e floor; use a n sor, clean exha	ew one. aust system tl	reads using Oxygen Sensor Thread Cleaner d approved Anti-seize Lubricant (commercial
Locimiciona		0007 10 01 0	, 10001 12/j al	a application Anti-ocizo Eubilount (commercial
service tool)	/-			
service tool	,-			
·	SPECTION ENI	D		

Revision: 2012 August EC-219 2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0171 FUEL INJECTION SYSTEM FUNCTION

DTC Logic

DTC DETECTION LOGIC

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the A/F sensors 1. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios.

In case the amount of the compensation value is extremely large (The actual mixture ratio is too lean.), the ECM judges the condition as the fuel injection system malfunction and lights up the MIL (2 trip detection logic).

Sensor	Input signal to ECM	ECM function	Actuator
A/F sensor 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection control	Fuel injector

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0171	Fuel injection system too lean	 Fuel injection system does not operate properly. The amount of mixture ratio compensation is too large. (The mixture ratio is too lean.) 	 Intake air leaks A/F sensor 1 Fuel injector Exhaust gas leaks Incorrect fuel pressure Lack of fuel Mass air flow sensor Incorrect PCV hose connection

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE-I

- 1. Clear the mixture ratio self-learning value. Refer to EC-26, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".
- 2. Start engine.

<u>Is it difficult to start engine?</u>

YES >> GO TO 3.

NO >> GO TO 4.

3. RESTART ENGINE

If it is difficult to start engine, the fuel injection system has a malfunction, too.

Crank engine while depressing accelerator pedal.

NOTE:

When depressing accelerator pedal three-fourths (3/4) or more, the control system does not start the engine. Do not depress accelerator pedal too much.

Does engine start?

YES >> Go to EC-221, "Diagnosis Procedure".

NO >> Check exhaust and intake air leak visually.

4. PERFORM DTC CONFIRMATION PROCEDURE-II

- 1. Start engine and let it idle for at least 5 minutes.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-221, "Diagnosis Procedure".

NO >> GO TO 5.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

5.PERFORM DTC CONFIRMATION PROCEDURE-III

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Start engine.
- Maintain the following conditions for at least 10 consecutive minutes. Hold the accelerator pedal as steady as possible.

EC

Α

VHCL SPEED SE 50 - 120 km/h (31 - 75 MPH)

CAUTION:

Always drive vehicle at a safe speed.

4. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-221, "Diagnosis Procedure".


>> INSPECTION END NO

Diagnosis Procedure

INFOID:0000000008450701

1.CHECK EXHAUST GAS LEAK

- Start engine and run it at idle.
- Listen for an exhaust gas leak before three way catalyst (manifold).

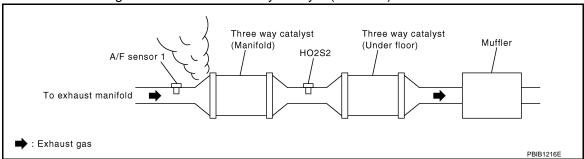

Is exhaust gas leak detected?

YES >> Repair or replace.

NO >> GO TO 2.

2.CHECK FOR INTAKE AIR LEAK

- Listen for an intake air leak after the mass air flow sensor.
- Check PCV hose connection.

Intake air leak detected?

YES >> Repair or replace.

NO >> GO TO 3.

3.CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT

- Turn ignition switch OFF.
- Disconnect corresponding A/F sensor 1 harness connector.
- Disconnect ECM harness connector.
- Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

A/F sensor 1 ECM		СМ	Continuity	
Connector	Terminal	Connector Terminal		Continuity
F50	1	F8	49	Existed
1 30	2	10	53	LAISIEU

Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

EC-221 Revision: 2012 August 2013 CUBE

D

Е

F

Н

K

M

Ν

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

A/F sensor 1		Ground	Continuity	
Connector	Terminal	Glound	Continuity	
F50	1	Ground	Not existed	
1 30	2	Giodila	Not existed	

ECM		Ground	Continuity	
Connector Terminal		Glound		
F8	49	Ground	Not existed	
1-0	53	Glound	inoi existed	

6. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK FUEL PRESSURE

1. Check fuel pressure. Refer to EC-473, "Inspection".

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

${f 5.}$ DETECT MALFUNCTIONING PART

Check fuel hoses and fuel tubes for clogging.

Is the inspection result normal?

YES >> Replace "fuel filter and fuel pump assembly". Refer to FL-5, "Exploded View".

NO >> Repair or replace

6.CHECK MASS AIR FLOW SENSOR

(P)With CONSULT

- Install all removed parts.
- Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT.
- 3. For specification, refer to EC-477, "Mass Air Flow Sensor".

- 1. Install all removed parts.
- 2. Check mass air flow sensor signal in Service \$01 with GST.
- 3. For specification, refer to EC-477, "Mass Air Flow Sensor".

Is the measurement value within the specification?

YES >> GO TO 7.

NO >> Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or grounds. Refer to EC-152, "DTC Logic".

7.CHECK FUNCTION OF FUEL INJECTOR

(P)With CONSULT

- Start engine.
- Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.
- Make sure that each circuit produces a momentary engine speed drop.

♥Without CONSULT

1. Let engine idle.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

2. Listen to each fuel injector operating sound.


Clicking noise should be heard.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Perform 1

>> Perform trouble diagnosis for FUEL INJECTOR, refer to <u>EC-411</u>, "Component Function Check".

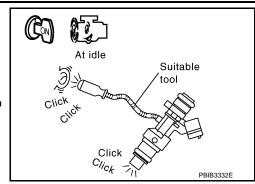

8. CHECK FUEL INJECTOR

- 1. Turn ignition switch OFF.
- 2. Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
- Disconnect all fuel injector harness connectors.
- Remove fuel tube assembly. Refer to <u>EM-37</u>, "<u>Removal and Installation</u>".
 Keep fuel hose and all fuel injectors connected to fuel tube.
- 5. Disconnect all ignition coil harness connectors.
- 6. Prepare pans or saucers under each fuel injector.
- 7. Crank engine for about 3 seconds.


Fuel should be sprayed evenly for each fuel injector.

Is the inspection result normal?

YES >> GO TO 9.

NO >>

>> Replace fuel injectors from which fuel does not spray out. Always replace O-ring with new ones. Refer to EM-37, "Removal and Installation".

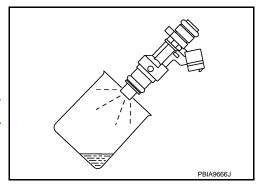

9. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

F

Α

EC

D

Е

G

Н

. 1

K

M

L

Ν

0

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0172 FUEL INJECTION SYSTEM FUNCTION

DTC Logic

DTC DETECTION LOGIC

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the A/F sensors 1. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios.

In case the amount of the compensation value is extremely large (The actual mixture ratio is too rich.), the ECM judges the condition as the fuel injection system malfunction and lights up the MIL (2 trip detection logic).

Sensor	Input signal to ECM	ECM function	Actuator
A/F sensor 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection control	Fuel injector

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0172	Fuel injection system too rich	 Fuel injection system does not operate properly. The amount of mixture ratio compensation is too large. (The mixture ratio is too rich.) 	 A/F sensor 1 Fuel injector Exhaust gas leaks Incorrect fuel pressure Mass air flow sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-I

- Clear the mixture ratio self-learning value. Refer to <u>EC-26</u>, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".
- Start engine.

Is it difficult to start engine?

YES >> GO TO 3.

NO >> GO TO 4.

3. RESTART ENGINE

If it is difficult to start engine, the fuel injection system has a malfunction, too.

Crank engine while depressing accelerator pedal.

NOTE:

When depressing accelerator pedal three-fourths (3/4) or more, the control system does not start the engine. Do not depress accelerator pedal too much.

Does engine start?

YES >> Go to EC-225, "Diagnosis Procedure".

NO >> Check exhaust and intake air leak visually.

4. PERFORM DTC CONFIRMATION PROCEDURE-II

- 1. Start engine and let it idle for at least 5 minutes.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-225, "Diagnosis Procedure".

NO >> GO TO 5.

5. PERFORM DTC CONFIRMATION PROCEDURE-III

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Start engine.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

3. Maintain the following conditions for at least 10 consecutive minutes. Hold the accelerator pedal as steady as possible.

VHCL SPEED SE 50 - 120 km/h (31 - 75 MPH)

CAUTION:

Always drive vehicle at a safe speed.

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-225, "Diagnosis Procedure".


NO >> INSPECTION END

Diagnosis Procedure

1. CHECK EXHAUST GAS LEAK

Start engine and run it at idle.

Listen for an exhaust gas leak before three way catalyst (manifold).

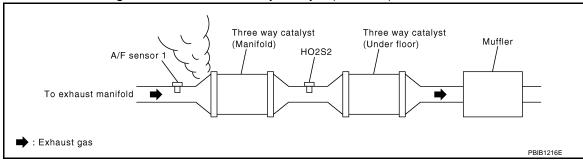

Is exhaust gas leak detected?

YES >> Repair or replace.

NO >> GO TO 2.

2.CHECK FOR INTAKE AIR LEAK

Listen for an intake air leak after the mass air flow sensor.

Is intake air leak detected?

YES >> Repair or replace.

NO >> GO TO 3.

3.check a/f sensor 1 input signal circuit

- Turn ignition switch OFF.
- Disconnect corresponding A/F sensor 1 harness connector.
- 3. Disconnect ECM harness connector.
- 4. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

A/F se	ensor 1	ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F50	1	F8	49	Existed
1 30	2	10	53	LXISIEG

Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

A/F sensor 1		Ground	Continuity	
Connector	Terminal	Glound	Continuity	
F50	1	Ground	Not existed	
1 30	2	Gloulia	Not existed	

EC

Α

INFOID:0000000008450703

Е

F

G

Н

K

_

 \mathbb{M}

Ν

0

0

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

ECM		Ground	Continuity	
Connector	Terminal	Glound	Continuity	
F8	49	Ground	Not existed	
10	53	Giodila	Not existed	

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK FUEL PRESSURE

Check fuel pressure. Refer to <u>EC-473, "Inspection"</u>.

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

${f 5}$. DETECT MALFUNCTIONING PART

Check fuel hoses and fuel tubes for clogging.

Is the inspection result normal?

YES >> Replace "fuel filter and fuel pump assembly". Refer to FL-5, "Exploded View".

NO >> Repair or replace

6. CHECK MASS AIR FLOW SENSOR

(P)With CONSULT

- 1. Install all removed parts.
- Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT.
- 3. For specification, refer to EC-477, "Mass Air Flow Sensor".

®With GST

- 1. Install all removed parts.
- Check mass air flow sensor signal in "Service \$01" with GST.
- 3. For specification, refer to EC-477, "Mass Air Flow Sensor".

Is the measurement value within the specification?

YES >> GO TO 7.

NO >> Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or grounds. Refer to EC-152, "DTC Logic".

7. CHECK FUNCTION OF FUEL INJECTOR

With CONSULT

- Start engine.
- Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.
- 3. Make sure that each circuit produces a momentary engine speed drop.

Without CONSULT


- 1. Let engine idle.
- 2. Listen to each fuel injector operating sound.

Clicking noise should be heard.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Perform trouble diagnosis for FUEL INJECTOR, refer to EC-411, "Component Function Check".

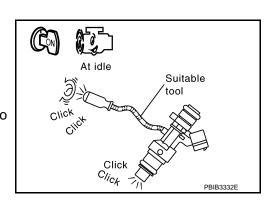

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

8. CHECK FUEL INJECTOR

1. Remove fuel injector assembly. Refer to EM-37, "Removal and Installation". Keep fuel hose and all fuel injectors connected to fuel tube.

- 2. Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
- 3. Disconnect all fuel injector harness connectors.
- 4. Disconnect all ignition coil harness connectors.
- 5. Prepare pans or saucers under each fuel injectors.
- Crank engine for about 3 seconds.
 Make sure fuel does not drip from fuel injector.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace the fuel injectors from which fuel is dripping. Always replace O-ring with new one. Refer to EM-37, "Exploded View".

9. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

EC

D

Е

F

G

Н

J

K

IVI

Ν


P0181 FTT SENSOR

Description INFOID:000000008450704

The fuel tank temperature sensor is used to detect the fuel temperature inside the fuel tank. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the fuel temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

<Reference data>

Fluid temperature [°C (°F)]	Voltage* [V]	Resistance $[k\Omega]$
20 (68)	3.5	2.3 - 2.7
50 (122)	2.2	0.79 - 0.90

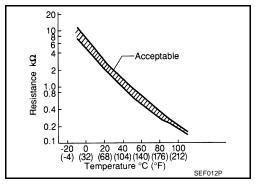

^{*:} These data are reference values and are measured between ECM terminal 43 (Fuel tank temperature sensor) and ground.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis (Trouble diagnosis content)	DTC detecting condition		Possible cause
		A)	Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signals from ECT sensor and intake air temperature sensor.	Harness or connectors (The FTT sensor circuit is open or shorted) FTT sensor Combination meter
P0181	FTT SENSOR [Fuel tank temperature (FTT) sensor circuit range/performance]	B)	The comparison result of signals transmitted to ECM from each temperature sensor (IAT sensor, ECT sensor and FTT sensor, CVT fluid temperature sensor) shows that the voltage signal of the FTT sensor is higher/lower than that of other temperature sensors when the engine is started with its cold state.	Harness or connectors (High or low resistance in the FTT sensor circuit) FTT sensor

DTC CONFIRMATION PROCEDURE

1. INSPECTION START

Is it necessary to erase permanent DTC?

YES >> GO TO 7.

NO >> GO TO 2.

2.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION A-I

- 1. Turn ignition switch ON and wait at least 10 seconds.
- 2. Check 1st trip DTC.

P0181 FTT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Is 1st trip DTC detected?	
YES >> Proceed to <u>EC-230, "Diagnosis Procedure"</u> . NO >> GO TO 4.	Α
4. CHECK ENGINE COOLANT TEMPERATURE	EC
 With CONSULT Select "COOLAN TEMP/S" in "DATA MONITOR" with CONSULT. Check "COOLAN TEMP/S" value. With GST Follow the procedure "With CONSULT" above. 	С
"COOLAN TEMP/S" less than 60°C (140°F)? YES >> INSPECTION END NO >> GO TO 5.	D
5.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION A-II	Е
 With CONSULT 1. Cool engine down until "COOLAN TEMP/S" is less than 60°C (140°F). 2. Wait at least 10 seconds. 3. Check 1st trip DTC. With GST 	F
Follow the procedure "With CONSULT" above. Is 1st trip DTC detected?	G
YES >> Proceed to <u>EC-230, "Diagnosis Procedure"</u> . NO >> GO TO 6.	Н
6.PERFORM COMPONENT FUNCTION CHECK (FOR MALFUNCTION B)	
Perform component function check. Refer to EC-230 , "Component Function Check". NOTE: Use the component function check to check the overall function of the FTT sensor circuit. During this check, a 1st trip DTC might not be confirmed.	I
Is the inspection result normal?	J
YES >> INSPECTION END NO >> Proceed to EC-230, "Diagnosis Procedure".	
7.PRECONDITIONING	K
If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following proce-	
dure before conducting the next test. 1. Turn ignition switch OFF and wait at least 10 seconds. 2. Turn ignition switch ON.	L
 3. Turn ignition switch OFF and wait at least 10 seconds. TESTING CONDITION: Before performing the following procedure, do not add fuel. 	M
 Before performing the following procedure, check that fuel level is between 1/4 and 4/4. Before performing the following procedure, confirm that battery voltage is 11 V or more at idle. 	Ν
>> GO TO 8.	
8. PERFORM DTC CONFIRMATION PROCEDURE B	0
 Start engine and let it idle for 60 minutes. Move the vehicle to a cool place. NOTE: 	Р
Cool the vehicle in an environment of ambient air temperature between –10°C (14°F) and 35°C (95°F). 3. Turn ignition switch OFF and soak the vehicle for 12 hours. CAUTION:	'
Never turn ignition switch ON during soaking. NOTE:	
The vehicle must be cooled with the food open.	

4. Start engine and let it idle for 5 minutes or more.

< DTC/CIRCUIT DIAGNOSIS >

CAUTION:

Never turn ignition switch OFF during idling.

5. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-230, "Diagnosis Procedure".

NO >> INSPECTION END


Component Function Check

INFOID:0000000008450706

1. CHECK FUEL TANK TEMPERATURE (FTT) SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect fuel level sensor unit and fuel pump harness connector.
- 3. Remove fuel level sensor unit. Refer to FL-5, "Removal and Installation".
- 4. Check resistance between fuel level sensor unit and fuel pump terminals by heating with hot water as shown in the figure.

Terminals	Condition		Resistance ($k\Omega$)
4 and 5	Temperature [°C (°F)]	20 (68)	2.3 – 2.7
4 and 5		50 (122)	0.79 - 0.90

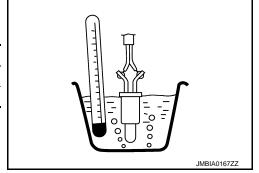

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to <u>EC-230</u>, "<u>Diagnosis Procedure</u>".

2. CHECK INTERMITTENT INCIDENT

Check intermittent incident. Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-230, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008450707

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK FUEL TANK TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect "fuel level sensor unit and fuel pump" harness connector.
- 3. Turn ignition switch ON.
- Check the voltage between "fuel level sensor unit and fuel pump" harness connector and ground.

Fuel level sensor unit and fuel pump		Ground	Voltage	
Connector	Terminal	Giodila	voltage	
B40	4	Ground	Approx. 5 V	

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B4, M79
- Harness connectors M77, E105

Revision: 2012 August EC-230 2013 CUBE

P0181 FTT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- Harness connectors E8, F1
- Harness for open or short between ECM and "fuel level sensor unit and fuel pump"

Α

EC

>> Repair open circuit or short to ground or short to power in harness or connector.

4.CHECK FUEL TANK TEMPERATURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

Turn ignition switch OFF.

- 2. Disconnect combination meter harness connector.
- Check the continuity between "fuel level sensor unit and fuel pump" harness connector and ECM harness connector.

D

Fuel level sensor unit and fuel pump		Combina	Continuity	
Connector	Terminal	Connector	Terminal	Continuity
B40	5	M34	24	Existed

Е

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

F

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M79, B4
- Harness for open or short between "fuel level sensor unit and fuel pump" and combination meter

Н

>> Repair open circuit or short to ground or short to power in harness or connector.

6.CHECK FUEL TANK TEMPERATURE SENSOR

Refer to EC-231, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace "fuel level sensor unit and fuel pump". Refer to FL-5. "Exploded View".

.CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

INFOID:0000000008450708

>> INSPECTION END

Component Inspection

1. CHECK FUEL TANK TEMPERATURE SENSOR

Turn ignition switch OFF.

- 2. Disconnect "fuel level sensor unit and fuel pump" harness connector.
- 3. Remove fuel level sensor unit. Refer to FL-5, "Exploded View".

4. Check resistance between "fuel level sensor unit and fuel pump" terminals by heating with hot water as shown in the figure.

Ν

M

Terminals	Condition	Resistance	
4 and 5 Temperature [°C (°F)]	Temperature [°C (°F)]	20 (68)	2.3 - 2.7 kΩ
4 and 5	remperature [*C (*F)]	50 (122)	0.79 - 0.90 kΩ

Р

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace "fuel level sensor unit and fuel pump". Refer to FL-5, "Exploded View".


P0182, P0183 FTT SENSOR

Description INFOID:000000008450709

The fuel tank temperature sensor is used to detect the fuel temperature inside the fuel tank. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the fuel temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

<Reference data>

Fluid temperature [°C (°F)]	Voltage* [V]	Resistance $[k\Omega]$
20 (68)	3.5	2.3 - 2.7
50 (122)	2.2	0.79 - 0.90

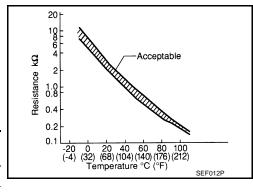

^{*:} These data are reference values and are measured between ECM terminal 43 (Fuel tank temperature sensor) and ground.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0182	Fuel tank temperature sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (The sensor circuit is open or shorted.)
P0183	Fuel tank temperature sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	Fuel tank temperature sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-232, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450711

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK FUEL TANK TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect "fuel level sensor unit and fuel pump" harness connector.
- 3. Turn ignition switch ON.
- Check the voltage between "fuel level sensor unit and fuel pump" harness connector and ground.

P0182, P0183 FTT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Fuel level sensor unit a	and fuel pump	0	Mallana		
Connector	Terminal	Ground	Voltage		
B40	4	Ground	Approx. 5 V		
s the inspection re					
YES >> GO TC NO >> GO TC	3.	C DA DT			
DETECT MALF		G PART			
heck the following Harness connect Harness connect Harness connect	ors B4, M79 ors M77, E1	05			
Harness for open		ween ECM and	d "fuel level sen	sor unit and fue	el pump"
	•	•	•		ss or connector.
		ERATURE SEN	ISOR GROUND	CIRCUIT FO	R OPEN AND SHORT
 Turn ignition sv Disconnect cor 	mbination me			uol numn" harn	ess connector and ECM harness
 Check the confidence connector. 	multy betwe	cii iudi idvei S	chour unit and I	aei puilip Half	iess connector and ECIVI Harriess
Fuel level sensor unit a	and fuel pump	Combina	tion meter	Continuity	
Connector	Terminal	Connector	Terminal		
B40	5	M34	24	Existed	
. Also check har		_	d short to powe	r.	
the inspection re					
YES >> GO TC NO >> GO TC					
DETECT MALF		G PART			
check the following					
Harness connect					
Harness for open	or short bet	ween "fuel leve	el sensor unit ar	nd fuel pump" a	nd combination meter
Б.	,				,
	•	J		oower in harnes	ss or connector.
CHECK FUEL T			ISOR		
Refer to <u>EC-233, "(</u>					
the inspection re					
YES >> GO TO NO >> Replace		sensor unit an	d fuel pump". R	efer to FI -5 "F	vnloded View"
CHECK INTERN			a raci pamp . re	cici to <u>i e o, e</u>	xploued view.
Refer to <u>GI-41, "Inte</u>	ermittent inc	ident".			
>> INSPE	CTION END				
Component Ins	spection				INFOID:000000008450712
1 _					
.CHECK FUEL T	ANK TEMPI	ERATURE SEN	ISOR		

Disconnect "fuel level sensor unit and fuel pump" harness connector.
 Remove fuel level sensor unit. Refer to <u>FL-5</u>, "<u>Exploded View</u>".

P0182, P0183 FTT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

4. Check resistance between "fuel level sensor unit and fuel pump" terminals by heating with hot water as shown in the figure.

Terminals	Condition		Resistance
4 and 5	4 and 5 Temperature [°C (°F)]	20 (68)	2.3 - 2.7 kΩ
4 and 3	remperature [O (1)]	50 (122)	0.79 - 0.90 kΩ

Is the inspection result normal?

YES >> INSPECTION END


NO >> Replace "fuel level sensor unit and fuel pump". Refer to FL-5, "Exploded View".

P0222, P0223 TP SENSOR

Description INFOID:0000000008450713

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometer which transform the throttle valve position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

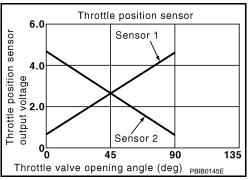

DTC Logic INFOID:0000000008450714

DTC DETECTION LOGIC

NOTE:

If DTC P0222 or P0223 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-250, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0222	Throttle position sensor 1 circuit low input	An excessively low voltage from the TP sensor 1 is sent to ECM.	Harness or connectors (TP sensor 1 circuit is open or shorted.)
P0223	Throttle position sensor 1 circuit high input	An excessively high voltage from the TP sensor 1 is sent to ECM.	Electric throttle control actuator (TP sensor 1)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2 .PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for 1 second.
- Check DTC.

Is DTC detected?

YES >> Go to EC-235, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.check throttle position sensor 1 power supply circuit

- Disconnect electric throttle control actuator harness connector.
- Turn ignition switch ON.

EC-235 Revision: 2012 August 2013 CUBE

EC

Α

Е

Н

K

INFOID:0000000008450715

P0222, P0223 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Check the voltage between electric throttle control actuator harness connector and ground.

Electric throttle	control actuator	Ground	Voltage
Connector Terminal		Glound	voltage
F29	2	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

3.check throttle position sensor 1 ground circuit for open and short

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

Electric throttle control actuator		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F29	4	F8	36	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4.CHECK THROTTLE POSITION SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

Electric throttle control actuator		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F29	1	F8	33	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

CHECK THROTTLE POSITION SENSOR

Refer to EC-237, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

- 1. Replace electric throttle control actuator.
- 2. Perform EC-237, "Special Repair Requirement".

>> INSPECTION END

7. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

P0222, P0223 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Component Inspection

INFOID:0000000008450716

Α

EC

D

Е

F

Н

K

1. CHECK THROTTLE POSITION SENSOR

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Perform EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".
- Turn ignition switch ON.
- 5. Set selector lever to D (CVT) or 1st (M/T) position.
- 6. Check the voltage between ECM harness connector and ground.

ECM		Ground	Condition		Voltage	
Connector	Terminal	Cround	001	idition	vollago	
	33 (TP sensor	Ground			Fully released	More than 0.36V
F8	1 signal)		Accelerator	Fully de- pressed	Less than 4.75V	
	34 (TP sensor		р	pedal	Fully released	Less than 4.75V
	2 signal)		Fully de- pressed	More than 0.36V		

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.replace electric throttle control actuator

- 1. Replace electric throttle control actuator.
- Perform <u>EC-397</u>, "Special Repair Requirement".

>> INSPECTION END

Special Repair Requirement

INFOID:0000000008450717

1. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 2.

2.PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

>> END

C

Р

Ν

P0300, P0301, P0302, P0303, P0304 MISFIRE [MR18DE (EXCEPT FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

P0300, P0301, P0302, P0303, P0304 MISFIRE

DTC Logic

DTC DETECTION LOGIC

When a misfire occurs, engine speed will fluctuate. If the engine speed fluctuates enough to cause the crank-shaft position (CKP) sensor (POS) signal to vary, ECM can determine that a misfire is occurring.

Sensor	Input signal to ECM	ECM function
Crankshaft position sensor (POS)	Engine speed	On board diagnosis of misfire

The misfire detection logic consists of the following two conditions.

One Trip Detection Logic (Three Way Catalyst Damage)

On the 1st trip, when a misfire condition occurs that can damage the three way catalyst (TWC) due to overheating, the MIL will blink.

When a misfire condition occurs, the ECM monitors the CKP sensor signal every 200 engine revolutions for a change.

When the misfire condition decreases to a level that will not damage the TWC, the MIL will turn off.

If another misfire condition occurs that can damage the TWC on a second trip, the MIL will blink.

When the misfire condition decreases to a level that will not damage the TWC, the MIL will remain on.

If another misfire condition occurs that can damage the TWC, the MIL will begin to blink again.

2. Two Trip Detection Logic (Exhaust quality deterioration)

For misfire conditions that will not damage the TWC (but will affect vehicle emissions), the MIL will only light when the misfire is detected on a second trip. During this condition, the ECM monitors the CKP sensor signal every 1,000 engine revolutions.

A misfire malfunction can be detected on any one cylinder or on multiple cylinders.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0300	Multiple cylinder misfire detected	Multiple cylinders misfire.	Improper spark plug
P0301	No.1 cylinder misfire detected	No. 1 cylinder misfires.	Insufficient compression Incorrect fuel pressure
P0302	No. 2 cylinder misfire detected	No. 2 cylinder misfires.	The fuel injector circuit is open or shorted
P0303	No. 3 cylinder misfire detected	No. 3 cylinder misfires.	Fuel injector Intake air leak
P0304	No. 4 cylinder misfire detected	No. 4 cylinder misfires.	The ignition signal circuit is open or shorted Lack of fuel Signal plate A/F sensor 1 Incorrect PCV hose connection

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE-I

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- Restart engine and let it idle for about 15 minutes.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-239, "Diagnosis Procedure".

NO >> GO TO 3.

3.perform dtc confirmation procedure-ii

1. Turn ignition switch OFF and wait at least 10 seconds.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Start engine and drive the vehicle under the similar conditions to (1st trip) Freeze Frame Data for a certain time. Refer to the table below.

Hold the accelerator pedal as steady as possible.

The similar conditions to (1st trip) Freeze Frame Data means the vehicle operation that the following conditions should be satisfied at the same time.

CAUTION:

Always drive vehicle in safe manner according to traffic conditions and obey all traffic laws when driving.

Engine speed	Engine speed in the freeze frame data $\pm400\ \text{rpm}$	
Vehicle speed in the freeze frame data \pm 10 km/h (6 MPH)		
Base fuel schedule in freeze frame data \times (1 \pm 0.1)		
Engine coolant temperature (T)	When the freeze frame data shows lower than 70°C (158°F), T should be lower than 70°C (158°F).	
condition	When the freeze frame data shows higher than or equal to 70°C (158°F), T should be higher than or equal to 70°C (158°F).	

The time to driving varies according to the engine speed in the freeze frame data.

Engine speed	Time
Around 1,000 rpm	Approximately 10 minutes
Around 2,000 rpm	Approximately 5 minutes
More than 3,000 rpm	Approximately 3.5 minutes

Check 1st trip DTC.

Is 1st trip DTC detected?

>> Go to EC-239, "Diagnosis Procedure". YES

>> INSPECTION END NO

Diagnosis Procedure

1. CHECK FOR INTAKE AIR LEAK AND PCV HOSE

- Start engine and run it at idle speed.
- Listen for the sound of the intake air leak.
- Check PCV hose connection.

Is intake air leak detected?

YES >> Discover air leak location and repair.

NO >> GO TO 2.

2.check for exhaust system clogging

Stop engine and visually check exhaust tube, three way catalyst and muffler for dents.

Is the inspection result normal?

YES-1 >> With CONSULT: GO TO 3.

YES-2 >> Without CONSULT: GO TO 4.

NO >> Repair or replace it.

3.PERFORM POWER BALANCE TEST

(I) With CONSULT

- Start engine.
- Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.
- 3. Make sure that each circuit produces a momentary engine speed drop.

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 4.

4. CHECK FUNCTION OF FUEL INJECTOR

Start engine and let engine idle.

EC-239 Revision: 2012 August 2013 CUBE

EC

Α

C

D

Е

F

Н

INFOID:0000000008450719

M

Ν

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Listen to each fuel injector operating sound.


Clicking noise should be heard.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Perform trouble diagnosis for FUEL INJECTOR, refer to

EC-412. "Component Inspection".

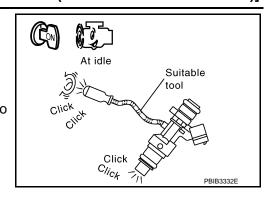

$\mathbf{5}$. CHECK FUNCTION OF IGNITION COIL-I

Do the following procedure in the place where ventilation is good without the combustible.

- Turn ignition switch OFF.
- Remove fuel pump fuse in IPDM E/R to release fuel pressure.

Do not use CONSULT to release fuel pressure, or fuel pressure applies again during the following procedure.

- Start engine.
- 4. After engine stalls, crank it two or three times to release all fuel pressure.
- Turn ignition switch OFF.
- 6. Remove all ignition coil harness connectors to avoid the electrical discharge from the ignition coils.
- 7. Remove ignition coil and spark plug of the cylinder to be checked.
- 8. Crank engine for 5 seconds or more to remove combustion gas in the cylinder.
- Connect spark plug and harness connector to ignition coil.
- 10. Fix ignition coil using a rope etc. with gap of 13 17 mm (0.52 -0.66 in) between the edge of the spark plug and grounded metal portion as shown in the figure.
- 11. Crank engine for about 3 seconds, and check whether spark is generated between the spark plug and the grounded metal por-

Spark should be generated.

CAUTION:

- During the operation, always stay 0.5 m (19.7 in) away from the spark plug and the ignition coil within. Be careful not to get an electrical shock while checking, because the electrical discharge voltage becomes 20 kV or more.
- It might cause to damage the ignition coil if the gap of more than 17 mm (0.66 in) is taken.

When the gap is less than 13 mm (0.52 in), the spark might be generated even if the coil is malfunctioning.

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 6.

6. CHECK FUNCTION OF IGNITION COIL-II

- Turn ignition switch OFF.
- Disconnect spark plug and connect a known-good spark plug.
- Crank engine for about 3 seconds, and recheck whether spark is generated between the spark plug and the grounded metal portion.


Spark should be generated.

Is the inspection result normal?

YES >> GO TO 7.

Revision: 2012 August

>> Check ignition coil, power transistor and their circuits. Refer to EC-417, "Component Function NO Check".

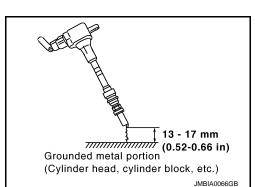

< DTC/CIRCUIT DIAGNOSIS >


7. CHECK SPARK PLUG

Check the initial spark plug for fouling, etc.

Is the inspection result normal?

YES >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to EM-115, "Spark Plug".

>> Repair or clean spark plug. Then GO TO 8. NO

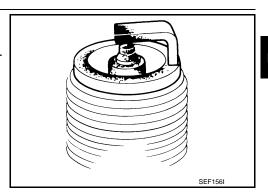

[MR18DE (EXCEPT FOR CALIFORNIA)]

8. CHECK FUNCTION OF IGNITION COIL-III

Reconnect the initial spark plugs.

2. Crank engine for about 3 seconds, and recheck whether spark is generated between the spark plug and the grounded portion.

Spark should be generated.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to EM-115, "Spark Plug".

9. CHECK COMPRESSION PRESSURE

Check compression pressure. Refer to EM-21, "Inspection".

Is the inspection result normal?

YES >> GO TO 10.

NO >> Check pistons, piston rings, valves, valve seats and cylinder head gaskets.

10. CHECK FUEL PRESSURE

Install all removed parts.

Check fuel pressure. Refer to EC-473, "Inspection".

Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 11.

11. DETECT MALFUNCTIONING PART

Check fuel hoses and fuel tubes for clogging.

Is the inspection result normal?

>> Replace "fuel filter and fuel pump assembly". Refer to FL-5, "Exploded View". YES

NO >> Repair or replace.

12.check ignition timing

Check the following items. Refer to EC-19, "BASIC INSPECTION: Special Repair Requirement". For specification, refer to EC-477, "Ignition Timing".

Is the inspection result normal?

YES >> GO TO 13.

NO >> Follow the EC-19, "BASIC INSPECTION: Special Repair Requirement".

13.CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect corresponding A/F sensor 1 harness connector.
- 3. Disconnect ECM harness connector.
- Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

EC

Α

D

Е

F

Н

Ν

EC-241 Revision: 2012 August

A/F sensor 1		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F50	1	F8	49	Existed
1 30	2	10	53	LAISIEU

Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

A/F sensor 1		Ground	Continuity	
Connector	Terminal	Glound	Continuity	
F50	1	Ground	Not existed	
1 30	2	Glound	Not existed	

ECM		Ground	Continuity	
Connector	Terminal	Glound Continu		
F8	49	Ground	Not existed	
	53	Glound	Not existed	

6. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

14.CHECK A/F SENSOR 1 HEATER

Refer to EC-145, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace A/F sensor 1. Refer to EM-30, "Exploded View".

15. CHECK MASS AIR FLOW SENSOR

(P)With CONSULT

Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT.

For specification, refer to EC-477, "Mass Air Flow Sensor".

With GST

Check mass air flow sensor signal in Service \$01 with GST.

For specification, refer to EC-477, "Mass Air Flow Sensor".

Is the measurement value within the specification?

YES >> GO TO 16.

NO >> Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or ground. Refer to <u>EC-152</u>, "<u>DTC Logic</u>".

16. CHECK SYMPTOM TABLE

Check items on the rough idle symptom in EC-461, "Symptom Table".

Is the inspection result normal?

YES >> GO TO 17.

NO >> Repair or replace.

17.ERASE THE 1ST TRIP DTC

Some tests may cause a 1st trip DTC to be set.

Erase the 1st trip DTC from the ECM memory after performing the tests. Refer to <u>EC-114, "On Board Diagnosis Function"</u> or <u>EC-117, "CONSULT Function"</u>.

>> GO TO 18.

P0300, P0301, P0302, P0303, P0304 MISFIRE [MR18DE (EXCEPT FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

18.CHECK INTERMITTENT INCIDENT

>> INSPECTION END

Refer to GI-41, "Intermittent Incident".

EC

D

Е

F

G

Н

K

L

M

Ν

0

P0327, P0328 KS

Description INFOID:000000008450720

The knock sensor is attached to the cylinder block. It senses engine knocking using a piezoelectric element. A knocking vibration from the cylinder block is sensed as vibrational pressure. This pressure is converted into a voltage signal and sent to the ECM.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detected condition	Possible cause
P0327	Knock sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (The sensor circuit is open or shorted.)
P0328	Knock sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	Knock sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and run it for at least 5 seconds at idle speed.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-244, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450722

CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK KNOCK SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Disconnect knock sensor harness connector.
- Disconnect ECM harness connector.
- Check the continuity between knock sensor harness connector and ECM harness connector.

Knock	sensor	E(CM	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F12	2	F8	40	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

P0327, P0328 KS

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

$3. \mathsf{CHECK}$ KNOCK SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between knock sensor harness connector and ECM harness connector.

Knock	sensor	E	СМ	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F12	1	F8	37	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK KNOCK SENSOR

Refer to EC-245, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace knock sensor. Refer to EM-88, "Exploded View".

5. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

1. CHECK KNOCK SENSOR

- Turn ignition switch OFF.
- Disconnect knock sensor harness connector.
- 3. Check resistance between knock sensor terminals as per the following.

NOTE:

It is necessary to use an ohmmeter which can measure more than 10 M Ω .

Terminals	Resistance	
1 and 2	Approx. 532 - 588 kΩ [at 20°C (68°F)]	

CAUTION:

Do not use any knock sensors that have been dropped or physically damaged. Use only new ones.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace knock sensor. Refer to EM-88, "Exploded View".

2013 CUBE

EC-245

 \supset

D

Α

EC

_

F

G

Н

INFOID:0000000008450723

J

L

M

Ν

Р

Revision: 2012 August

Description INFOID:000000008450724

The crankshaft position sensor (POS) is located on the oil pan facing the gear teeth (cogs) of the signal plate. It detects the fluctuation of the engine revolution.

The sensor consists of a permanent magnet and Hall IC.


When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change.


The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

ECM receives the signals as shown in the figure.

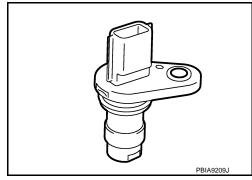

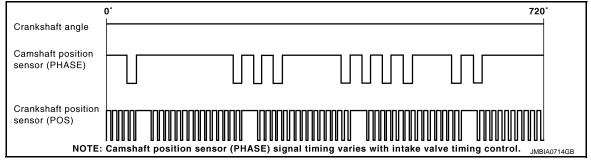

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0335	Crankshaft position sensor (POS) circuit	 The crankshaft position sensor (POS) signal is not detected by the ECM during the first few seconds of engine cranking. The proper pulse signal from the crankshaft position sensor (POS) is not sent to ECM while the engine is running. The crankshaft position sensor (POS) signal is not in the normal pattern during engine running. 	Harness or connectors [Crankshaft position sensor (POS) circuit is open or shorted.] (Refrigerant pressure sensor circuit is shorted.) (Accelerator pedal position sensor circuit is shorted.) (EVAP control system pressure sensor circuit is shorted.) (Battery current sensor circuit is shorted.) Crankshaft position sensor (POS) Refrigerant pressure sensor Accelerator pedal position sensor EVAP control system pressure sensor Signal plate Battery current sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5 V with ignition switch ON.

>> GO TO 2.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

2.perform dtc confirmation procedure

Start engine and let it idle for at least 5 seconds. If engine does not start, crank engine for at least 2 seconds.

Check 1st trip DTC.

Is 1st trip DTC detected?

>> Go to EC-247, "Diagnosis Procedure". YES

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450726

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.check crankshaft position (ckp) sensor (pos) power supply circuit-i

- Disconnect crankshaft position (CKP) sensor (POS) harness connector.
- Turn ignition switch ON. 2.
- Check the voltage between CKP sensor (POS) harness connector and ground.

CKP sen	sor (POS)	Ground	Voltage	
Connector	Terminal	Glound		
F20	1	Ground	Approx. 5 V	

Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 3.

3.CHECK CKP SENSOR (POS) POWER SUPPLY CIRCUIT-II

- Turn ignition switch ON.
- Disconnect ECM harness connector. 2.
- Check the continuity between CKP sensor (POS) harness connector and ECM harness connector.

CKP sen	sor (POS)	E	СМ	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F20	1	F8	75	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit.

f 4.CHECK CKP SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
	74	Refrigerant pressure sensor	E49	3
	75	CKP sensor (POS)	F20	1
F8	76	EVAP control system pressure sensor	B21	3
	77	Battery current sensor	F53	1
E16	102	APP sensor	E110	5

EC-247 Revision: 2012 August 2013 CUBE

EC

D

Е

F

Н

Ν

[MR18DE (EXCEPT FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS > Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair short to ground or short to power in harness or connectors.

5. CHECK COMPONENTS

Check the following.

- Buttery current sensor (Refer to EC-342, "Component Inspection".)
- EVAP control system pressure sensor (Refer to EC-284, "Component Inspection".)
- Refrigerant pressure sensor (Refer to EC-430, "Diagnosis Procedure".)

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace malfunctioning components.

6.CHECK APP SENSOR

Refer to EC-390, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 7.

7.REPLACE ACCELERATOR PEDAL ASSEMBLY

- 1. Replace accelerator pedal assembly.
- Perform EC-390, "Special Repair Requirement".

>> INSPECTION END

8.CHECK CKP SENSOR (POS) GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Check the continuity between CKP sensor (POS) harness connector and ECM harness connector.

CKP sen	sor (POS)	E	СМ	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F20	2	F8	62	Existed

3. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

9.CHECK CKP SENSOR (POS) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Disconnect ECM harness connector.
- 2. Check the continuity between CKP sensor (POS) harness connector and ECM harness connector.

CKP sen	sor (POS)	E(CM	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F20	3	F8	61	Existed

3. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

10. CHECK CRANKSHAFT POSITION SENSOR (POS)

Refer to EC-249, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace crankshaft position sensor (POS). Refer to EM-88, "Exploded View".

[MR18DE (EXCEPT FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

11. CHECK GEAR TOOTH

Visually check for chipping signal plate gear tooth.

Is the inspection result normal?

YES >> GO TO 12.

NO >> Replace the signal plate. Refer to EM-88, "Exploded View".

12. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection


1. CHECK CRANKSHAFT POSITION SENSOR (POS)-I

- 1. Turn ignition switch OFF.
- 2. Loosen the fixing bolt of the sensor.
- 3. Disconnect crankshaft position sensor (POS) harness connector.
- 4. Remove the sensor. Refer to EM-88, "Exploded View".
- 5. Visually check the sensor for chipping.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace crankshaft position sensor (POS). Refer to EM-88, "Exploded View".

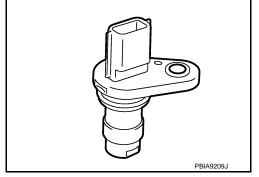

2.CHECK CRANKSHAFT POSITION SENSOR (POS)-II

Check resistance between crankshaft position sensor (POS) terminals as per the following.

Terminals (Polarity)	Resistance [Ω at 25°C (77°F)]
1 (+) - 2 (-)	
1 (+) - 3 (-)	Except 0 or ∞
2 (+) - 3 (-)	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace crankshaft position sensor (POS). Refer to EM-88, "Exploded View".

F

EC

D

Е

INFOID:0000000008450727

K

Ν

P0340 CMP SENSOR (PHASE)

Description INFOID:000000008450728

The camshaft position sensor (PHASE) senses the retraction of camshaft (INT) to identify a particular cylinder. The camshaft position sensor (PHASE) senses the piston position.

When the crankshaft position sensor (POS) system becomes inoperative, the camshaft position sensor (PHASE) provides various controls of engine parts instead, utilizing timing of cylinder identification signals.


The sensor consists of a permanent magnet and Hall IC.


When engine is running, the high and low parts of the teeth cause the gap with the sensor to change.

The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

ECM receives the signals as shown in the figure.

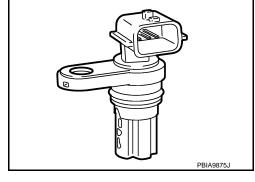

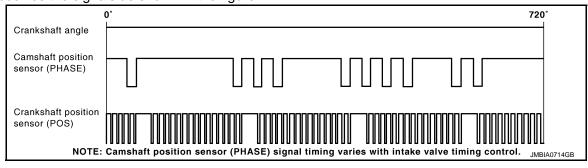

DTC Logic

DTC DETECTION LOGIC

NOTE

If DTC P0340 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-320, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0340	Camshaft position sensor (PHASE) circuit	 The cylinder No. signal is not sent to ECM for the first few seconds during engine cranking. The cylinder No. signal is not sent to ECM during engine running. The cylinder No. signal is not in the normal pattern during engine running. 	Harness or connectors (The sensor circuit is open or shorted) Camshaft position sensor (PHASE) Camshaft (INT) Starter motor Starting system circuit Dead (Weak) battery

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5 V with ignition switch ON.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-I

- Start engine and let it idle for at least 5 seconds.
 If engine does not start, crank engine for at least 2 seconds.
- Check 1st trip DTC.

P0340 CMP SENSOR (PHASE)

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Is 1st trip DTC detected? YES >> Go to EC-251, "Diagnosis Procedure". >> GO TO 3. NO

3.perform dtc confirmation procedure-i

Maintaining engine speed at more than 800 rpm for at least 5 seconds.

2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-251, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK STARTING SYSTEM

Turn ignition switch to START position.

Does the engine turn over? Does the starter motor operate?

YES >> GO TO 2.

NO >> Check starting system (Refer to STR-2, "Work Flow (With GR8-1200 NI)" or STR-5, "Work Flow (Without GR8-1200 NI)". For the details of the GR8-1200 NI, refer to STR-18, "Special Service Tools".).

2.CHECK GROUND CONNECTION

Turn ignition switch OFF.

Check ground connection E38. Refer to GI-44, "Circuit Inspection". 2.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace ground connection.

3.check camshaft position (cmp) sensor (phase) power supply circuit

- Disconnect camshaft position (CMP) sensor (PHASE) harness connector.
- Turn ignition switch ON.
- Check the voltage between CMP sensor (PHASE) harness connector and ground.

CMP sense	or (PHASE)	Ground	Voltage
Connector Terminal		Glound	voltage
F26	1	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

f 4.CHECK CMP SENSOR (PHASE) GROUND CIRCUIT FOR OPEN AND SHORT

Turn ignition switch OFF.

Check the continuity between CMP sensor (PHASE) harness connector and ECM harness connector.

CMP sensor (PHASE)		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F26	2	F8	63	Existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

${f 5.}$ CHECK CMP SENSOR (PHASE) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1 Disconnect ECM harness connector.
- Check the continuity between CMP sensor (PHASE) harness connector and ECM harness connector.

EC-251 Revision: 2012 August 2013 CUBE

EC

Α

INFOID:0000000008450730

Н

< DTC/CIRCUIT DIAGNOSIS >

CMP sensor (PHASE)		ECM		Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
F26	3	F8	65	Existed	

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

O.CHECK CAMSHAFT POSITION SENSOR (PHASE)

Refer to EC-252, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace camshaft position sensor (PHASE). Refer to EM-55, "Exploded View".

7.CHECK CAMSHAFT (INT)

Check the following.


- · Accumulation of debris to the signal plate of camshaft (1) rear end
- Chipping signal plate of camshaft rear end

Is the inspection result normal?

YES >> GO TO 8.

NO

>> Remove debris and clean the signal plate of camshaft rear end or replace camshaft. Refer to EM-56, "Removal and Installation".

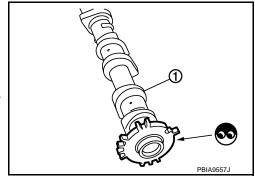

8. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008450731

1. CHECK CAMSHAFT POSITION SENSOR (PHASE)-I


- Turn ignition switch OFF.
- 2. Loosen the fixing bolt of the sensor.
- Disconnect camshaft position sensor (PHASE) harness connector.
- Remove the sensor. Refer to EM-55, "Exploded View".
- Visually check the sensor for chipping.

Is the inspection result normal?

YES >> GO TO 2.

NO

>> Replace camshaft position sensor (PHASE). Refer to EM-55, "Exploded View".

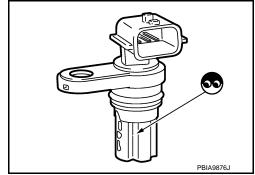

2. CHECK CAMSHAFT POSITION SENSOR (PHASE)-II

Check resistance camshaft position sensor (PHASE) terminals as per the following.

P0340 CMP SENSOR (PHASE)

< DTC/CIRCUIT DIAGNOSIS >

[MR18DÉ (EXCEPT FOR CALIFORNIA)]

C D TO/CINCOTT DIAGNO	3010 >	[
		,
Terminals (Polarity)	Resistance [Ω at 25°C (77°F)]	A
1 (+) - 2 (-)		_
1 (+) - 3 (-)	Except 0 or ∞	E
2 (+) - 3 (-)		
Is the inspection result not		
YES >> INSPECTION	END	()
NO >> Replace cams	shaft position sensor (PHASE). Refe	er to <u>em-55, "exploded view"</u> .
		_
		E
		F
		'
		ŀ
		l
		P
		l.
		N
		1

EC-253 2013 CUBE Revision: 2012 August


DTC Logic

DTC DETECTION LOGIC

The ECM monitors the switching frequency ratio of air fuel ratio (A/F) sensor 1 and heated oxygen sensor 2.

A three way catalyst (manifold) with high oxygen storage capacity will indicate a low switching frequency of heated oxygen sensor 2. As oxygen storage capacity decreases, the heated oxygen sensor 2 switching frequency will increase.

When the frequency ratio of A/F sensor 1 and heated oxygen sensor 2 approaches a specified limit value, the three way catalyst (manifold) malfunction is diagnosed.

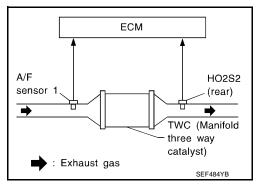

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0420	Catalyst system efficiency below threshold	 Three way catalyst (manifold) does not operate properly. Three way catalyst (manifold) does not have enough oxygen storage capacity. 	 Three way catalyst (manifold) Exhaust tube Intake air leaks Fuel injector Fuel injector leaks Spark plug Improper ignition timing

DTC CONFIRMATION PROCEDURE

1. INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 7.

2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Do not hold engine speed for more than the specified minutes below.

>> GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE-I

(P)With CONSULT

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.
- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- 6. Make sure that "COOLAN TEMP/S" indication is more than 70°C (158°F). If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches 70°C (158°F).
- Open engine hood.
- 8. Select "DTC & SRT CONFIRMATION" then "SRT WORK SUPPORT" mode with CONSULT.
- Rev engine up to 2,000 to 3,000 rpm and hold it for 3 consecutive minutes then release the accelerator pedal completely.
- 10. Check the indication of "CATALYST".

Which is displayed on CONSULT screen?

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

CMPLT>> GO TO 6. INCMP >> GO TO 4.

4. PERFORM DTC CONFIRMATION PROCEDURE-II

Wait 5 seconds at idle.

2. Rev engine up to 2,000 to 3,000 rpm and maintain it until "INCMP" of "CATALYST" changes to "CMPLT" (It will take approximately 5 minutes).

Does the indication change to "CMPLT"?

YES >> GO TO 6. NO >> GO TO 5.

${f 5.}$ PERFORM DTC CONFIRMATION PROCEDURE AGAIN

- Stop engine and cool it down to less than 70°C (158°F).
- Perform DTC CONFIRMATION PROCEDURE again.

>> GO TO 3

O.PERFORM DTC CONFIRMATION PROCEDURE-III

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-255, "Diagnosis Procedure".

NO >> INSPECTION END

7 .PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-255, "Component Function Check".

NOTE:

Use component function check to check the overall function of the three way catalyst (manifold). During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-255, "Diagnosis Procedure".

Component Function Check

1.PERFORM COMPONENT FUNCTION CHECK

WWithout CONSULT

- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 4. Let engine idle for 1 minute.
- Open engine hood. 5.
- Check the voltage between ECM harness connector and ground under the following condition.

Connector Terminal		Ground	Condition	Voltage	
		Glound	Condition		
F8	50 (HO2S2 signal)	Ground	Keeping engine speed at 2,500 rpm constant under no load	The voltage fluctuation cycle takes more than 5 seconds. 1 cycle: 0.6 - $1.0 \rightarrow 0$ - $0.3 \rightarrow 0.6$ - 1.0	

Is the inspection result normal?

YES >> INSPECTION END

>> Go to EC-255, "Diagnosis Procedure". NO

Diagnosis Procedure

1. CHECK EXHAUST SYSTEM

Visually check exhaust tubes and muffler for dent.

EC-255 Revision: 2012 August 2013 CUBE

EC

Α

Е

INFOID:0000000008450733

K

M

N

INFOID:0000000008450734

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]


Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace.

2.CHECK EXHAUST GAS LEAK

- Start engine and run it at idle.
- 2. Listen for an exhaust gas leak before the three way catalyst (manifold).

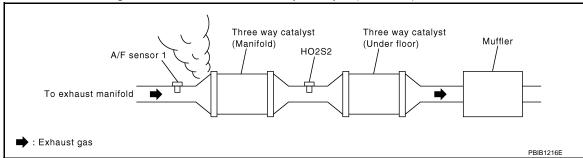

Is exhaust gas leak detected?

YES >> Repair or replace.

NO >> GO TO 3.

3. CHECK INTAKE AIR LEAK

Listen for an intake air leak after the mass air flow sensor.

Is intake air leak detected?

YES >> Repair or replace.

NO >> GO TO 4.

4. CHECK IDLE SPEED AND IGNITION TIMING

For procedure, refer to EC-23, "IGNITION TIMING: Special Repair Requirement".

For specification, refer to EC-477, "Idle Speed" and EC-477, "Ignition Timing".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Follow the instruction of EC-19, "BASIC INSPECTION: Special Repair Requirement".

5. CHECK FUEL INJECTOR

- Stop engine and then turn ignition switch ON.
- 2. Check the voltage between ECM harness connector and ground.

ECM		Ground	Voltage	
Connector	Terminal	Giodila	voltage	
F7	25			
	29	Ground	Battery voltage	
	30	Glound		
	31			

Is the inspection result normal?

YES >> GO TO 6.

NO >> Perform <u>EC-411</u>, "<u>Diagnosis Procedure</u>".

6.CHECK FUNCTION OF IGNITION COIL-I

CAUTION:

Do the following procedure in the place where ventilation is good without the combustible.

- Turn ignition switch OFF.
- 2. Remove fuel pump fuse in IPDM E/R to release fuel pressure.


NOTE:

Do not use CONSULT to release fuel pressure, or fuel pressure applies again during the following procedure.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- Start engine.
- After engine stalls, crank it two or three times to release all fuel pressure. 4.
- Turn ignition switch OFF.
- 6. Remove all ignition coil harness connectors to avoid the electrical discharge from the ignition coils.
- 7. Remove ignition coil and spark plug of the cylinder to be checked.
- 8. Crank engine for 5 seconds or more to remove combustion gas in the cylinder.
- 9. Connect spark plug and harness connector to ignition coil.
- 10. Fix ignition coil using a rope etc. with gap of 13 17 mm (0.52 -0.66 in) between the edge of the spark plug and grounded metal portion as shown in the figure.
- 11. Crank engine for about 3 seconds, and check whether spark is generated between the spark plug and the grounded metal portion.

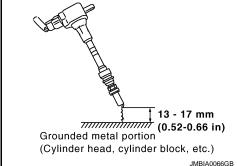

Spark should be generated.

CAUTION:

- During the operation, always stay 0.5 m (19.7 in) away from the spark plug and the ignition coil. Be careful not to get an electrical shock while checking, because the electrical discharge voltage becomes 20 kV or more.
- It might cause to damage the ignition coil if the gap of more than 17 mm (0.66 in) is taken.

When the gap is less than 13 mm (0.52 in), the spark might be generated even if the coil is malfunctioning.

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 7.

.CHECK FUNCTION OF IGNITION COIL-II

- Turn ignition switch OFF.
- 2. Disconnect spark plug and connect a known-good spark plug.
- 3. Crank engine for about 3 seconds, and recheck whether spark is generated between the spark plug and the grounded metal portion.

Spark should be generated.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Check ignition coil, power transistor and their circuits. Refer to EC-417, "Diagnosis Procedure".


8. CHECK SPARK PLUG

Check the initial spark plug for fouling, etc.

Is the inspection result normal?

YES >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to EM-115, "Spark Plug".

NO >> Repair or clean spark plug. Then GO TO 9.

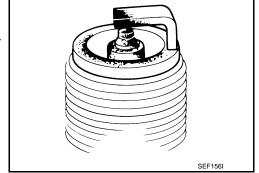

9. CHECK FUNCTION OF IGNITION COIL-III

- Reconnect the initial spark plugs.
- 2. Crank engine for about three seconds, and recheck whether spark is generated between the spark plug and the grounded portion.

Spark should be generated.

Α

EC

D

Е

Н

K

M

N

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to <u>EM-115</u>, "Spark Plug".

10. CHECK FUEL INJECTOR

- 1. Turn ignition switch OFF. Refer to EM-37, "Removal and Installation".
- 2. Remove fuel injector assembly. Refer to EM-37, "Exploded View". Keep fuel hose and all fuel injectors connected to fuel tube.
- 3. Disconnect all ignition coil harness connectors.
- 4. Reconnect all fuel injector harness connectors disconnected.
- 5. Turn ignition switch ON.

Does fuel drip from fuel injector?

YES >> GO TO 11.

NO >> Replace the fuel injector(s) from which fuel is dripping. Refer to EM-37, "Exploded View".

11. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace three way catalyst assembly.

NO >> Repair or replace harness or connector

DTC Logic INFOID:0000000008450735


DTC DETECTION LOGIC

NOTE:

If DTC P0441 is displayed with other DTC such as P2122, P2123, P2127, P2128 or P2138, first perform trouble diagnosis for other DTC.

In this evaporative emission (EVAP) control system, purge flow occurs during non-closed throttle conditions. Purge volume is related to air intake volume. Under normal purge conditions (non-closed throttle), the EVAP canister purge volume control solenoid valve is open to admit purge flow. Purge flow exposes the EVAP control system pressure sensor to intake manifold vacuum.

Under normal conditions (non-closed throttle), sensor output voltage indicates if pressure drop and purge flow are adequate. If not, a malfunction is determined.

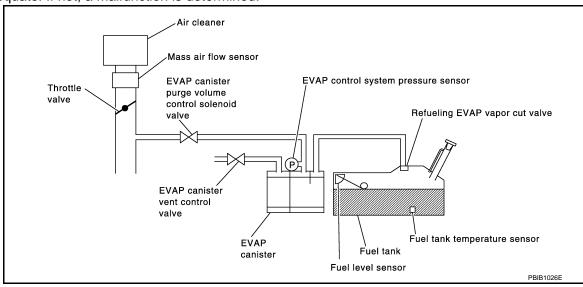

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	
P0441	EVAP control system in- correct purge flow	EVAP control system does not operate properly, EVAP control system has a leak between intake manifold and EVAP control system pressure sensor.	EVAP canister purge volume control solenoid valve stuck closed EVAP control system pressure sensor and the circuit Loose, disconnected or improper connection of rubber tube Blocked rubber tube Cracked EVAP canister EVAP canister purge volume control solenoid valve circuit Accelerator pedal position sensor Blocked purge port EVAP canister vent control valve Drain filter	l L

DTC CONFIRMATION PROCEDURE

1. INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 6.

2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

EC-259 Revision: 2012 August 2013 CUBE

EC

Α

Е

D

F

Р

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

>> GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE-I

(I) With CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and let it idle for at least 70 seconds.
- Select "PURG FLOW P0441" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CON-SULT.
- 5. Touch "START".

Is COMPLETED displayed on CONSULT screen?

YES >> GO TO 5.

NO >> GO TO 4.

4. PERFORM DTC CONFIRMATION PROCEDURE-II

When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 35 seconds.)

Selector lever	Suitable position
VHCL SPEED SE	32 - 120 km/h (20 - 75 mph)
ENG SPEED	500 - 3,800 rpm
B/FUEL SCHDL	1.0 - 10.0 msec
COOLAN TEMP/S	More than 0°C (32°F)

CAUTION:

Always drive vehicle at a safe speed.

If "TESTING" is not changed for a long time, retry from step 2.

Is "COMPLETED" displayed on CONSULT screen?

YES >> GO TO 5.

NO >> Perform DTC CONFIRMATION PROCEDURE again. GO TO 3.

${f 5}$ PERFORM DTC CONFIRMATION PROCEDURE-II

Touch "SELF-DIAG RESULT".

Which is displayed on CONSULT screen?

OK >> INSPECTION END

NG >> Go to EC-261, "Diagnosis Procedure".

6.PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-260, "Component Function Check".

NOTE:

Use component function check to check the overall monitoring function of the EVAP control system purge flow monitoring. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-261, "Diagnosis Procedure".

Component Function Check

INFOID:0000000008450736

1. PERFORM COMPONENT FUNCTION CHECK

⋈Without CONSULT

- Lift up drive wheels.
- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and wait at least 70 seconds.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Set voltmeter probes to ECM harness connector and ground.

	Ground		
Connector	Connector Terminal		
F8	42 (EVAP control system pressure sensor signal)	Ground	

EC

D

Е

Н

Α

- Check EVAP control system pressure sensor value at idle speed and note it.
- Establish and maintain the following conditions for at least 1 minute.

Air conditioner switch	ON
Headlamp switch	ON
Rear window defogger switch	ON
Engine speed	Approx. 3,000 rpm
Selector lever	Any position other than P, N or R

8. Verify that EVAP control system pressure sensor value stays 0.1 V less than the value at idle speed (measured at step 6 for at least 1 second.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-261, "Diagnosis Procedure".

Diagnosis Procedure INFOID:0000000008450737

1. CHECK EVAP CANISTER

- Turn ignition switch OFF.
- Check EVAP canister for cracks.

Is the inspection result normal?

YES-1 >> With CONSULT: GO TO 2.

YES-2 >> Without CONSULT: GO TO 3.

>> Replace EVAP canister. Refer to FL-14, "Removal and Installation".

2.CHECK PURGE FLOW

(P)With CONSULT

- Disconnect vacuum hose connected to EVAP canister purge volume control solenoid valve at EVAP service port and install vacuum gauge. For the location of EVAP service port, refer to EC-87, "System Description".
- 2. Start engine and let it idle.
- 3. Select "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT.
- 4. Rev engine up to 2,000 rpm.

Touch "Qd" and "Qu" on CONSULT screen to adjust "PURG VOL C/V" opening and check vacuum existence.

PURG VOL C/V	Vacuum
100%	Existed
0%	Not existed

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 4.

3. CHECK PURGE FLOW

⋈ Without CONSULT

- Start engine and warm it up to normal operating temperature.
- Stop engine.

Ν

M

Р

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- Disconnect vacuum hose connected to EVAP canister purge volume control solenoid valve at EVAP service port and install vacuum gauge. For the location of EVAP service port, refer to EC-87, "System Description".
- Start engine and let it idle.

Do not depress accelerator pedal even slightly.

5. Check vacuum gauge indication before 60 seconds passed after starting engine.

Vacuum should not exist.

6. Revving engine up to 2,000rpm after 100 seconds passed after starting engine.

Vacuum should exist.

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 4.

4. CHECK EVAP PURGE LINE


- 1. Turn ignition switch OFF.
- Check EVAP purge line for improper connection or disconnection. Refer to <u>EC-87</u>, "System Description".

Is the inspection result normal?

YES >> GO TO 5. NO >> Repair it.

5. CHECK EVAP PURGE HOSE AND PURGE PORT

- Disconnect purge hoses connected to EVAP service port A and EVAP canister purge volume control solenoid valve B.
- 2. Blow air into each hose and EVAP purge port C.

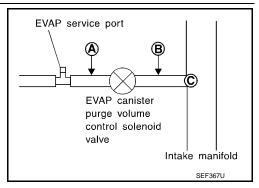


3. Check that air flows freely.

Is the inspection result normal?

YES-1 >> With CONSULT: GO TO 6. YES-2 >> Without CONSULT: GO TO 7.

NO >> Repair or clean hoses and/or purge port.

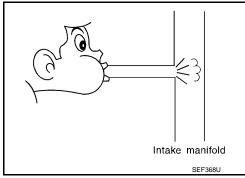

6. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

(P)With CONSULT

- Start engine.
- Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT. Check that engine speed varies according to the valve opening.

Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 7.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

7. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE	^
Refer to EC-268, "Component Inspection".	A
Is the inspection result normal?	
YES >> GO TO 8.	EC
NO >> Replace EVAP canister purge volume control solenoid valve.	
8. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR	C
 Disconnect EVAP control system pressure sensor harness connector. Check connectors for water. 	
Water should not exist.	D
Is the inspection result normal?	
YES >> GO TO 9.	_
NO >> Replace EVAP control system pressure sensor.	Е
9. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR FUNCTION	
Refer to EC-285, "DTC Logic" for DTC P0452, EC-290, "DTC Logic" for DTC P0453.	F
Is the inspection result normal?	
YES >> GO TO 10. NO >> Replace EVAP control system pressure sensor.	G
NO >> Replace EVAP control system pressure sensor. 10.CHECK RUBBER TUBE FOR CLOGGING	G
 Disconnect rubber tube connected to EVAP canister vent control valve. Check the rubber tube for clogging. 	Н
Is the inspection result normal?	
YES >> GO TO 11.	I
NO >> Clean the rubber tube using an air blower.	
11.CHECK DRAIN FILTER	
Refer to <u>EC-264</u> , "Component Inspection (<u>Drain filter</u>)". <u>Is the inspection result normal?</u>	J
YES >> GO TO 12.	
NO >> Replace drain filter.	K
12. CHECK EVAP CANISTER VENT CONTROL VALVE	
Refer to EC-275, "Component Inspection".	
Is the inspection result normal?	
YES >> GO TO 13. NO >> Replace EVAP canister vent control valve.	В. Д.
13. CHECK EVAP PURGE LINE	M
Inspect EVAP purge line (pipe and rubber tube). Check for evidence of leaks.	
Refer to EC-475, "Inspection".	N
Is the inspection result normal?	
YES >> GO TO 14. NO >> Replace it.	0
NO >> Replace it. 14.CLEAN EVAP PURGE LINE	
Clean EVAP purge line (pipe and rubber tube) using air blower.	
Oldan Evita parge line (pipe and rubber tube) using all blower.	Г
>> GO TO 15.	
15.check intermittent incident	
Refer to GI-41, "Intermittent Incident".	

Revision: 2012 August EC-263 2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

>> INSPECTION END

Component Inspection (Drain filter)


INFOID:0000000008450738

1. CHECK DRAIN FILTER

- 1. Check visually for insect nests in the drain filter air inlet.
- 2. Check visually for cracks or flaws in the appearance.
- 3. Check visually for cracks or flaws in the hose.
- 4. Blow air into port A and check that it flows freely out of port B.
- 5. Block port B.
- 6. Blow air into port A and check that there is no leakage.

Is the inspection result normal?

YES >> INSPECTION END NO >> Replace drain filter.

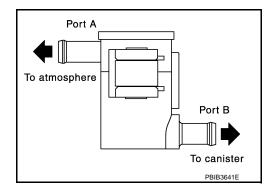

P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE


< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Description INFOID:0000000008450743

The EVAP canister purge volume control solenoid valve is used to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

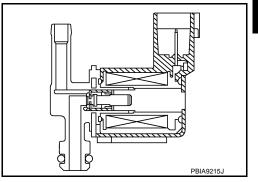

DTC Logic INFOID:0000000008450744

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name		DTC detecting condition	Possible cause
P0443	EVAP canister purge volume control solenoid	А	The canister purge flow is detected during the vehicle is stopped while the engine is running, even when EVAP canister purge volume control solenoid valve is completely closed.	 EVAP control system pressure sensor EVAP canister purge volume control solenoid valve (The valve is stuck open.) EVAP canister vent control valve
	valve	В	The canister purge flow is detected during the specified driving conditions, even when EVAP canister purge volume control solenoid valve is completely closed.	 EVAP canister Hoses (Hoses are connected incorrectly or clogged.)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

- Perform DTC CONFIRMATION PROCEDURE when the fuel is between 1/4 and 3/4 full, and vehicle is placed on flat level surface.
- Always perform test at a temperature of 5 to 60°C (41 to 140°F).
- Cool the vehicle so that engine coolant temperature becomes same level as ambient temperature.

Do you have CONSULT

YES >> GO TO 2. NO >> GO TO 4.

2.PERFORM DTC CONFIRMATION PROCEDURE A

(P)With CONSULT

- Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT.
- 3. Check that the following condition are met. FUEL T/TMP SE: 0 - 35°C (32 - 95°F)
- Start engine and wait at least 60 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

>> Go to EC-266, "Diagnosis Procedure". YES

NO >> GO TO 3.

3.PERFORM DTC CONFIRMATION PROCEDURE B

(P)With CONSULT

EC-265 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

F

Ν

< DTC/CIRCUIT DIAGNOSIS >

- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Select "PURG VOL CN/V P1444" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT.
- Touch "START". 5.
- Start engine and let it idle until "TESTING" on CONSULT changes to "COMPLETED". (It will take approximately 10 seconds.)

If "TESTING" is not displayed after 5 minutes, retry from step 2.

Touch "SELF-DIAG RESULT".

Which is displayed on CONSULT?

OK >> INSPECTION END

NG >> Go to EC-266, "Diagnosis Procedure".

4.PERFORM DTC CONFIRMATION PROCEDURE A

With GST

- Turn ignition switch ON.
- Check the voltage between ECM harness connector and ground.

	ECM	Ground	Voltage (V)
Connector	Terminal	Ground	voltage (v)
F8	43 (Fuel tank temperature sensor signal)	Ground	3.1 - 4.0

- Start engine and wait at least 60 seconds.
- 4. Check 1st trip DTC.

Is 1st trip DTC detected?

>> Go to EC-266, "Diagnosis Procedure". YES

NO >> GO TO 5.

5.PERFORM DTC CONFIRMATION PROCEDURE

With GST

- 1. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and let it idle for at least 20 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

>> Go to EC-266, "Diagnosis Procedure". YES

NO >> INSPECTION END

Diagnosis Procedure

${f 1}$.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

INFOID:0000000008450745

- Turn ignition switch OFF.
- Disconnect EVAP canister purge volume control solenoid valve harness connector.
- Turn ignition switch ON.
- Check the voltage between EVAP canister purge volume control solenoid valve harness connector and ground.

EVAP canister purge volume control solenoid valve		Ground	Voltage
Connector Terminal			
F32 1		Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3. >> GO TO 2. NO

< DTC/CIRCUIT DIAGNOSIS >

Check the following.

- Harness connectors E8, F1
- IPDM E/R harness connector E14

2.DETECT MALFUNCTIONING PART

- Harness for open or short between EVAP canister purge volume control solenoid valve and IPDM E/R
- Harness for open or short between EVAP canister purge volume control solenoid valve and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

3.check evap canister purge volume control solenoid valve output signal circuit FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between EVAP canister purge volume control solenoid valve harness connector and ECM harness connector.

EVAP canister purge volume control solenoid valve		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F32	2	F7	9	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

f 4 .CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR

- Disconnect EVAP control system pressure sensor harness connector.
- Check connectors for water.

Water should not exist.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace EVAP control system pressure sensor.

${f 5.}$ CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-284, "Component Inspection".

Is the inspection result normal?

YES-1 >> With CONSULT: GO TO 6.

YES-2 >> Without CONSULT: GO TO 7.

>> Replace EVAP control system pressure sensor.

Ó.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

(P)With CONSULT

- 1. Turn ignition switch OFF.
- Reconnect harness connectors disconnected.
- Start engine.
- Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT. Check that engine speed varies according to the valve opening.

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 7.

.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to EC-268, "Component Inspection".

Is the inspection result normal?

Α

EC

D

F

Ν

Р

EC-267 Revision: 2012 August 2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

>> GO TO 8.

NO >> Replace EVAP canister purge volume control solenoid valve.

8.CHECK RUBBER TUBE FOR CLOGGING

- Disconnect rubber tube connected to EVAP canister vent control valve.
- Check the rubber tube for clogging.

Is the inspection result normal?

YES >> GO TO 9.

YES

NO >> Clean the rubber tube using an air blower.

CHECK EVAP CANISTER VENT CONTROL VALVE

Refer to EC-275, "Component Inspection".

Is the inspection result normal?

>> GO TO 10. YES


NO >> Replace EVAP canister vent control valve.

10.CHECK IF EVAP CANISTER IS SATURATED WITH WATER

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- Check if water will drain from EVAP canister.

Does water drain from the EVAP canister?

YES >> GO TO 11. NO >> GO TO 13.

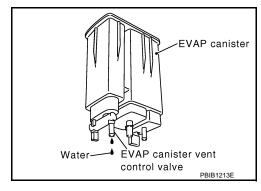

11. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

Is the inspection result normal?

YES >> GO TO 13. NO >> GO TO 12.

12. DETECT MALFUNCTIONING PART

Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection

>> Repair hose or replace EVAP canister. Refer to FL-14, "Exploded View".

13. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008450746

1. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

(P)With CONSULT


- Turn ignition switch OFF.
- Reconnect all harness connectors disconnected.
- Disconnect EVAP purge hoses connected to EVAP canister purge volume control solenoid valve.

EC-268 Revision: 2012 August 2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

- Turn ignition switch ON.
- 5. Select "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT.
- Touch "Qd" and "Qu" on CONSULT screen to adjust "PURG VOL C/V" opening and check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

Condition (PURG VOL C/V value)	Air passage continuity between (A) and (B)
100%	Existed
0%	Not existed

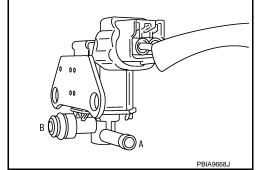

♥Without CONSULT

- Turn ignition switch OFF.
- Disconnect EVAP canister purge volume control solenoid valve harness connector.
- 3. Disconnect EVAP purge hoses connected to EVAP canister purge volume control solenoid valve.
- 4. Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.


Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals 1 and 2	Existed
No supply	Not existed



Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP canister purge volume control solenoid valve

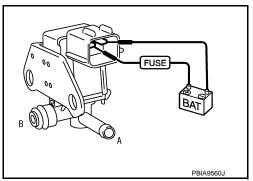

EC

Α

D

Е

F

Н

K

L

M

Ν

Р

P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE


< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Description INFOID:000000008450747

The EVAP canister purge volume control solenoid valve is used to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

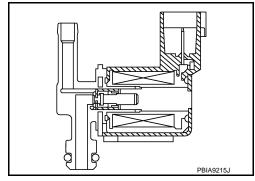

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0444	EVAP canister purge volume control solenoid valve circuit open	An excessively low voltage signal is sent to ECM through the valve	Harness or connectors (The solenoid valve circuit is open or shorted.) EVAP canister purge volume control solenoid valve
P0445	EVAP canister purge volume control solenoid valve circuit shorted	An excessively high voltage signal is sent to ECM through the valve	Harness or connectors (The solenoid valve circuit is shorted.) EVAP canister purge volume control solenoid valve

DTC CONFIRMATION PROCEDURE

1.CONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for at least 13 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-270, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450749

1. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect EVAP canister purge volume control solenoid valve harness connector.
- Turn ignition switch ON.
- Check the voltage between EVAP canister purge volume control solenoid valve harness connector and ground.

P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

< DTC/CIRCUIT DIAGNOSIS >

>> INSPECTION END

[MR18DE (EXCEPT FOR CALIFORNIA)]

solenoid	je volume control I valve	Ground	Voltage		
Connector	Terminal		3.4.0		
F32	1	Ground	Battery voltage		Ε
Is the inspection	result normal?	-			
YES >> GO NO >> GO					
2.detect mai	LFUNCTIONIN	IG PART			
	ness connector ectors E8, F1 en or short bet	ween EVAP ca		ume control solenoid valve and IPDM E/R ume control solenoid valve and ECM	_
>> Rep	air open circuit	or short to gro	und or short to	power in harness or connectors.	
<u> </u>	•	•		SOLENOID VALVE OUTPUT SIGNAL CIRCU	
FOR OPEN AND					
	switch OFF.				_
	ECM harness of		ster nurge volun	ne control solenoid valve harness connector a	νd
	onlinuity betwe	en EVAP Cani	ster purge volui	le control solenolo valve flamess conflector a	iu
EVAP canister purg		E	СМ		
solenoid			1	Continuity	
Connector F32	Terminal	Connector F7	Terminal		
F.37	2			Exists d	
	a a ma a a a a a a a a a		9	Existed	
4. Also check h		ort to ground ar	nd short to powe		
I. Also check has the inspection	result normal?	ort to ground ar			
Also check has the inspection YES-1 >> With	result normal? CONSULT: G	ort to ground ar 2 O TO 4.			
Also check has the inspection YES-1 >> With YES-2 >> With NO >> Rep	result normal? CONSULT: Gout CONSULT air open circuit	ort to ground ar O TO 4. : GO TO 5. or short to gro	nd short to powe	r. Dower in harness or connectors.	
Also check has the inspection YES-1 >> With YES-2 >> With NO >> Rep	result normal? CONSULT: Gout CONSULT air open circuit	ort to ground ar O TO 4. : GO TO 5. or short to gro	nd short to powe	r.	
4. Also check has the inspection YES-1 >> With YES-2 >> With NO >> Rep 4. CHECK EVAL	result normal? CONSULT: Gout CONSULT air open circuit CANISTER F	ort to ground ar O TO 4. : GO TO 5. or short to gro	nd short to powe	r. power in harness or connectors.	_
4. Also check has the inspection YES-1 >> With YES-2 >> With NO >> Rep 4. CHECK EVAL With CONSU	result normal? CONSULT: Gout CONSULT air open circuit CANISTER F LT all harness con	ort to ground ar C O TO 4. C GO TO 5. Or short to gro	nd short to power ound or short to ME CONTROL S	r. power in harness or connectors.	
Also check has the inspection YES-1 >> With YES-2 >> With NO >> Rep 1.CHECK EVAN With CONSUME. Reconnect as Start engine	result normal? CONSULT: Gout CONSULT air open circuit CANISTER F LT all harness con	ort to ground ar O TO 4. : GO TO 5. or short to gro PURGE VOLUI nectors discon	nd short to power ound or short to ME CONTROL S	r. Dower in harness or connectors. SOLENOID VALVE OPERATION	
Also check has the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVAN With CONSU Reconnect a Start engine Perform "PL	result normal? CONSULT: Gout CONSULT air open circuit CANISTER F LT all harness con	ort to ground ar O TO 4. GO TO 5. or short to gro PURGE VOLUI nectors discon	nd short to power ound or short to ME CONTROL S	r. power in harness or connectors.	— es
Also check has the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVAL With CONSULATION Reconnect at Start engine B. Perform "PU according to	result normal? CONSULT: Good CONSULT air open circuit CANISTER F LT all harness con RG VOL CON the valve open	ort to ground ar 2 O TO 4. E GO TO 5. Or short to gro PURGE VOLUI nectors discon T/V" in "ACTIV	nd short to power ound or short to ME CONTROL S	r. Dower in harness or connectors. SOLENOID VALVE OPERATION	
Also check has the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVAN With CONSU Reconnect a Start engine B. Perform "PL according to sthe inspection YES >> GO	result normal? CONSULT: Good CONSULT air open circuit CANISTER F LT all harness con the valve open result normal?	ort to ground ar 2 O TO 4. E GO TO 5. Or short to gro PURGE VOLUI nectors discon T/V" in "ACTIV	nd short to power ound or short to ME CONTROL S	r. Dower in harness or connectors. SOLENOID VALVE OPERATION	
Also check has the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVAL With CONSU Reconnect at Start engine Consum to the inspection YES >> GO NO >> GO	result normal? CONSULT: Good CONSULT air open circuit CANISTER F LT all harness con VRG VOL CON the valve open result normal? TO 6. TO 5.	ort to ground ar 2 O TO 4. E GO TO 5. Or short to ground ar PURGE VOLUI nectors discont T/V" in "ACTIV ning.	nd short to power ound or short to ME CONTROL S nected. (E TEST" mode	r. SOUTH OF THE PROPERTY OF T	
Also check has the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVAL With CONSULA Reconnect at Start engine B. Perform "PL according to sthe inspection YES >> GO NO >> GO	result normal? CONSULT: Good CONSULT air open circuit CANISTER F LT all harness con VRG VOL CON the valve open result normal? TO 6. TO 5.	ort to ground ar 2 O TO 4. E GO TO 5. Or short to ground ar PURGE VOLUI nectors discont T/V" in "ACTIV ning.	nd short to power ound or short to ME CONTROL S nected. (E TEST" mode	r. Dower in harness or connectors. SOLENOID VALVE OPERATION	
t. Also check hear the inspection YES-1 >> With YES-2 >> With NO >> Rep 1.CHECK EVAN With CONSULA Reconnect at Start engine B. Perform "PL according to sthe inspection YES >> GO NO >> GO CHECK EVAN	result normal? CONSULT: Good CONSULT air open circuit CONSTER F LT all harness con the valve open result normal? TO 6. CONSTER F CONSTER F	ort to ground ar O TO 4. GO TO 5. Or short to ground ar PURGE VOLUI nectors discon T/V" in "ACTIV ning. PURGE VOLUI	nd short to power ound or short to ME CONTROL S nected. (E TEST" mode	r. SOUTH OF THE PROPERTY OF T	
4. Also check hear the inspection YES-1 >> With YES-2 >> With NO >> Rep 4. CHECK EVAI With CONSULA I. Reconnect at 2. Start engine 3. Perform "PL according to sthe inspection YES >> GO NO >> GO CHECK EVAI Refer to EC-272	result normal? CONSULT: Good CONSULT: air open circuit CONSULT: CONSULT: Air open circuit CONSULT: CON	ort to ground are O TO 4. GO TO 5. or short to ground are PURGE VOLUI TO TO 5. TO TO 5. OR SHORT TO	nd short to power ound or short to ME CONTROL S nected. (E TEST" mode	r. SOUTH OF THE PROPERTY OF T	
4. Also check heat inspection YES-1 >> With YES-2 >> With NO >> Rep 4. CHECK EVAL With CONSUL 1. Reconnect at 2. Start engine 3. Perform "PL according to sthe inspection YES >> GO NO >> GO CHECK EVAL Refer to EC-272 sthe inspection YES >> GO	result normal? CONSULT: Good CONSULT: air open circuit CONSULT: CONSULT: air open circuit CONSULT: CONSULT: CONSULT: CONSULT: CONSULT: COMPONENT COMPONENT CONSULT:	ort to ground ar O TO 4. GO TO 5. or short to ground ar PURGE VOLUI nectors discon T/V" in "ACTIV ning. PURGE VOLUI Inspection".	nd short to power and short to will control someted. TE TEST" mode	oower in harness or connectors. SOLENOID VALVE OPERATION with CONSULT. Check that engine speed vari	
4. Also check heat inspection YES-1 >> With YES-2 >> With NO >> Rep 4. CHECK EVAI With CONSULA I. Reconnect at 2. Start engine 3. Perform "PL according to sthe inspection YES >> GO NO >> GO CHECK EVAI Refer to EC-272 sthe inspection YES >> GO NO >> Rep	result normal? CONSULT: Good CONSULT: air open circuit CONSULT: CONSULT: air open circuit CONSULT: CONSULT: CONSULT: CONSULT: CONSULT: CONSULT: CONSULT: CONSULT: COMPONENT CONSULT: COMPONENT CONSULT: COMPONENT CONSULT: COMPONENT CONSULT:	ort to ground ar O TO 4. GO TO 5. or short to ground ar PURGE VOLUI T/V" in "ACTIVA COURGE VOLUI COURGE VOLUI	nd short to power ound or short to ME CONTROL S nected. (E TEST" mode	oower in harness or connectors. SOLENOID VALVE OPERATION with CONSULT. Check that engine speed vari	
4. Also check heat inspection YES-1 >> With YES-2 >> With NO >> Rep 4. CHECK EVAL With CONSUL 1. Reconnect a 2. Start engine 3. Perform "PL according to sthe inspection YES >> GO CHECK EVAL Refer to EC-272 sthe inspection YES >> GO	result normal? CONSULT: Good CONSULT: air open circuit CONSULT: CONSULT: air open circuit CONSULT: CONSULT: CONSULT: CONSULT: CONSULT: CONSULT: CONSULT: COMPONENT: C	ort to ground are O TO 4. GO TO 5. or short to ground are PURGE VOLUITORING. PURGE VOLUITORING. PURGE VOLUITORING. CIDENT	nd short to power and short to will control someted. TE TEST" mode	oower in harness or connectors. SOLENOID VALVE OPERATION with CONSULT. Check that engine speed vari	98

Revision: 2012 August EC-271 2013 CUBE

P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Component Inspection


INFOID:0000000008450750

1. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

(P)With CONSULT

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Disconnect EVAP purge hoses connected to EVAP canister purge volume control solenoid valve.
- 4. Turn ignition switch ON.
- Select "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT.
- Touch "Qd" and "Qu" on CONSULT screen to adjust "PURG VOL C/V" opening and check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.


Condition (PURG VOL C/V value)	Air passage continuity between (A) and (B)
100%	Existed
0%	Not existed

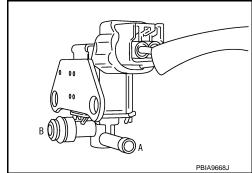

♥Without CONSULT

- 1. Turn ignition switch OFF.
- Disconnect EVAP canister purge volume control solenoid valve harness connector.
- 3. Disconnect EVAP purge hoses connected to EVAP canister purge volume control solenoid valve.
- 4. Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals 1 and 2	Existed
No supply	Not existed

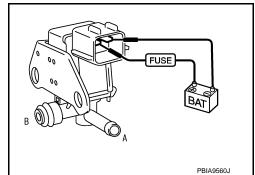

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP canister purge volume control solenoid valve

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Α

EC

D

Е

Н

K

M

N

INFOID:0000000008450753

P0447 EVAP CANISTER VENT CONTROL VALVE


Description INFOID:0000000008450751

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent.

This solenoid valve responds to signals from the ECM. When the ECM sends an ON signal, the coil in the solenoid valve is energized. A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System" diagnosis.

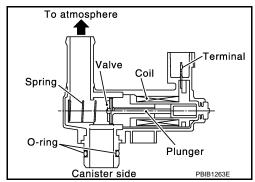

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0447	EVAP canister vent control valve circuit open	An improper voltage signal is sent to ECM through EVAP canister vent control valve.	Harness or connectors (The valve circuit is open or shorted.) EVAP canister vent control valve

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and wait at least 8 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-273, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK EVAP CANISTER VENT CONTROL VALVE CIRCUIT

(P)With CONSULT

- Turn ignition switch OFF and then turn ON.
- Select "VENT CONTROL/V" in "ACTIVE TEST" mode with CONSULT.
- 3. Touch "ON/OFF" on CONSULT screen.
- Check for operating sound of the valve.

Revision: 2012 August EC-273 2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Clicking sound should be heard.

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 3.

${f 3.}$ CHECK EVAP CANISTER VENT CONTROL VALVE POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect EVAP canister vent control valve harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between EVAP canister vent control valve harness connector and ground.

EVAP canister v	ent control valve	Ground	Voltage
Connector	Connector Terminal		vollage
B20	B20 1		Battery voltage

Is the inspection result normal?

YES >> GO TO 5. NO >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- · Harness connectors E8, F1
- Harness connectors E105, M77
- Harness connectors B1. M18
- Harness for open or short between EVAP canister vent control valve and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK EVAP CANISTER VENT CONTROL VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between EVAP canister vent control valve harness connector and ECM harness connector.

EVAP canister vent control valve		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
B20	2	F7	28	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 6.

6. DETECT MALFUNCTIONING PART

Check the following.

- Junction block connector E8. F1
- Harness connectors E105, M77
- Harness connectors M79, B4
- Harness for open or short between EVAP canister vent control valve and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK RUBBER TUBE FOR CLOGGING

- 1. Disconnect rubber tube connected to EVAP canister vent control valve.
- 2. Check the rubber tube for clogging.

Is the inspection result normal?

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

YES >> GO TO 8.

NO >> Clean the rubber tube using an air blower.

8. CHECK EVAP CANISTER VENT CONTROL VALVE

Refer to EC-275, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace EVAP canister vent control valve.

9. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection


1. CHECK EVAP CANISTER VENT CONTROL VALVE-I

- 1. Turn ignition switch OFF.
- 2. Remove EVAP canister vent control valve from EVAP canister.
- Check portion (A) of EVAP canister vent control valve for being rusted.

Is it rusted?

YES >> Replace EVAP canister vent control valve.

NO >> GO TO 2.

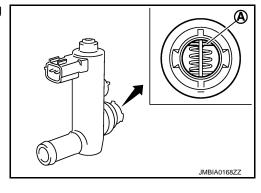

2. CHECK EVAP CANISTER VENT CONTROL VALVE-II

(P)With CONSULT

- 1. Reconnect harness connectors disconnected.
- 2. Turn ignition switch ON.
- 3. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.
- 4. Check air passage continuity and operation delay time.

Make sure new O-ring is installed properly.

VENT CONT/V condition	Air passage continuity between (A) and (B)
ON	Not existed
OFF	Existed

Operation takes less than 1 second.

⋈Without CONSULT

Check air passage continuity and operation delay time under the following conditions.

Make sure new O-ring is installed properly.

Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals (1) and (2)	Not existed
OFF	Existed

Operation takes less than 1 second.


Is the inspection result normal?

YES >> GO TO 3.

Revision: 2012 August

NO >> Replace EVAP canister vent control valve.

EC-275 2013 CUBE

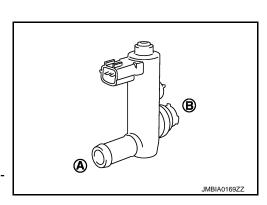

EC

Α

D

754 E

INFOID:0000000008450754

G

Н

I

K

L

M

Ν

C

Р

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

3. CHECK EVAP CANISTER VENT CONTROL VALVE-III

(P)With CONSULT

- 1. Clean the air passage [portion (A) to (B)] of EVAP canister vent control valve using an air blower.
- 2. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.
- 3. Check air passage continuity and operation delay time.

 Make sure new O-ring is installed properly.

VENT CONT/V condition	Air passage continuity between (A) and (B)
ON	Not existed
OFF	Existed

Operation takes less than 1 second.

♥Without CONSULT

- 1. Clean the air passage [portion (A) to (B)] of EVAP canister vent control valve using an air blower.
- 2. Check air passage continuity and operation delay time under the following conditions.

Make sure new O-ring is installed properly.


Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals (1) and (2)	Not existed
OFF	Existed

Operation takes less than 1 second.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP canister vent control valve.

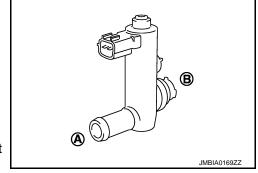

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0448 EVAP CANISTER VENT CONTROL VALVE


Description

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent.

This solenoid valve responds to signals from the ECM. When the ECM sends an ON signal, the coil in the solenoid valve is energized. A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System" diagnosis.

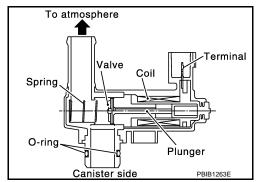

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	G
P0448	EVAP canister vent control valve close	EVAP canister vent control valve remains closed under specified driving conditions.	EVAP canister vent control valve EVAP control system pressure sensor and the circuit Blocked rubber tube to EVAP canister vent control valve EVAP canister is saturated with water	Н

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- 1. Turn ignition switch ON and wait at least 5 seconds.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.
- 4. Start engine and let it idle for at least 1 minute.
- 5. Repeat next procedures three times.
- Increase the engine speed up to 3,000 to 3,500 rpm and keep it for 2 minutes and 50 seconds to 3 minutes.

Never exceed 3 minutes.

- Fully released accelerator pedal and keep engine idle for about 5 seconds.
- 6. Repeat next procedure 20 times.
- Quickly increase the engine speed up to 4,000 to 4,500 rpm or more and keep it for 25 to 30 seconds.

EC

Α

D

Е

K

N


M

Р

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Fully released accelerator pedal and keep engine idle for at least 35 seconds.

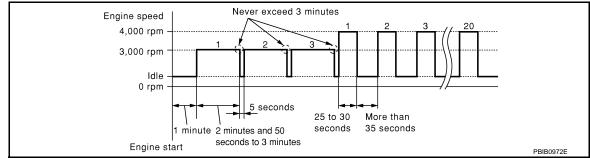

7. Check 1st trip DTC.

With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Go to EC-278, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450757

1. CHECK RUBBER TUBE

- 1. Turn ignition switch OFF.
- 2. Disconnect rubber tube connected to EVAP canister vent control valve.
- 3. Check the rubber tube for clogging.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Clean rubber tube using an air blower.

2.CHECK EVAP CANISTER VENT CONTROL VALVE

Refer to EC-279, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 3.


NO >> Replace EVAP canister vent control valve.

3. CHECK IF EVAP CANISTER IS SATURATED WITH WATER

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- 2. Check if water will drain from the EVAP canister.

Does water drain from EVAP canister?

YES >> GO TO 4. NO >> GO TO 6.

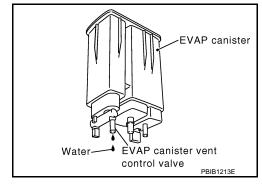

4. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

${f 5.}$ DETECT MALFUNCTIONING PART

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection

>> Repair hose or replace EVAP canister. Refer to FL-14, "Exploded View".

6. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR

- 1. Disconnect EVAP control system pressure sensor harness connector.
- 2. Check connectors for water.

Water should not exist.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace EVAP control system pressure sensor.

7.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-284, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace EVAP control system pressure sensor.

8. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

1. CHECK EVAP CANISTER VENT CONTROL VALVE-I

- Turn ignition switch OFF.
- 2. Remove EVAP canister vent control valve from EVAP canister.
- Check portion (A) of EVAP canister vent control valve for being rusted.

Is it rusted?

YES >> Replace EVAP canister vent control valve.

NO >> GO TO 2.

JMBIA0168ZZ

2.CHECK EVAP CANISTER VENT CONTROL VALVE-II

(P)With CONSULT

- 1. Reconnect harness connectors disconnected.
- Turn ignition switch ON.
- 3. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.

EC

Α

D

Е

F

G

Н

INFOID:0000000008450758

Κ

_

M

Ν

Р

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Check air passage continuity and operation delay time.
 Make sure new O-ring is installed properly.

VENT CONT/V condition	Air passage continuity between (A) and (B)
ON	Not existed
OFF	Existed



♥Without CONSULT

Check air passage continuity and operation delay time under the following conditions.

Make sure new O-ring is installed properly.

Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals (1) and (2)	Not existed
OFF	Existed

Operation takes less than 1 second.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace EVAP canister vent control valve.

3.CHECK EVAP CANISTER VENT CONTROL VALVE-III

(P)With CONSULT

- 1. Clean the air passage [portion (A) to (B)] of EVAP canister vent control valve using an air blower.
- 2. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.
- 3. Check air passage continuity and operation delay time.

Make sure new O-ring is installed properly.

VENT CONT/V condition	Air passage continuity between (A) and (B)
ON	Not existed
OFF	Existed

Operation takes less than 1 second.

Without CONSULT

- 1. Clean the air passage [portion (A) to (B)] of EVAP canister vent control valve using an air blower.
- 2. Check air passage continuity and operation delay time under the following conditions.

Make sure new O-ring is installed properly.


Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals (1) and (2)	Not existed
OFF	Existed

Operation takes less than 1 second.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP canister vent control valve.

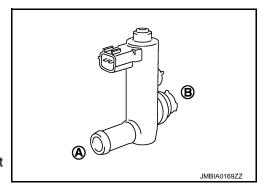


< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR

Description INFOID:0000000008450759

The EVAP control system pressure sensor detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases.

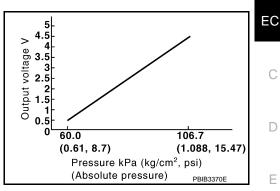

Α

D

Е

F

Ν

Р

DTC Logic INFOID:0000000008450760

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0451	EVAP control system pressure sensor performance	ECM detects a sloshing signal from the EVAP control system pressure sensor	Harness or connectors (EVAP control system pressure sensor circuit is shorted.) [Crankshaft position sensor (POS) circuit is shorted.] (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) (Battery current sensor circuit is shorted.) EVAP control system pressure sensor Crankshaft position sensor (POS) Accelerator pedal position sensor Refrigerant pressure sensor Battery current sensor

DTC CONFIRMATION PROCEDURE

Never remove fuel filler cap during DTC confirmation procedure.

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

(E) With CONSULT>>GO TO 2.

Without CONSULT>>GO TO 5.

2.PERFORM DTC CONFIRMATION PROCEDURE-1

With CONSULT

Start engine and let it idle for least 40 seconds.

NOTE:

Do not depress accelerator pedal even slightly.

2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-282, "Diagnosis Procedure".

NO >> GO TO 3.

3.PERFORM DTC CONFIRMATION PROCEDURE-2

EC-281 Revision: 2012 August 2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

(P)With CONSULT

- 1. Select "EVAP DIAG READY" in "DATA MONITOR" mode of "ENGINE".
- 2. Let it idle until "OFF" of "EVAP DIAG READY" changes to "ON".

NOTE:

It will take at most 2 hours until "OFF" of "EVAP DIAG READY" changes to "ON".

3. Turn ignition switch OFF and wait at least 90 minutes.

NOTE:

Never turn ignition switch ON during 90 minutes.

- 4. Turn ignition switch ON.
- Select "EVAP LEAK DIAG" in "DATA MONITOR" mode of "ENGINE".
- Check that "EVAP LEAK DIAG" indication.

Which is displayed on CONSULT?

CMPLT >> GO TO 4.

YET >> 1. Perform DTC CONFIRMATION PROCEDURE again.

2. GO TO 1.

4. PERFORM DTC CONFIRMATION PROCEDURE-3

(P)With CONSULT

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-282, "Diagnosis Procedure".

NO >> INSPECTION END

${f 5.}$ PERFORM DTC CONFIRMATION PROCEDURE-4

With GST

1. Start engine and let it idle for least 40 seconds.

NOTE:

Do not depress accelerator pedal even slightly.

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-282, "Diagnosis Procedure".

NO >> GO TO 6.

6.PERFORM DTC CONFIRMATION PROCEDURE-5

- 1. Let it idle for at least 2 hours.
- 2. Turn ignition switch OFF and wait at least 90 minutes.

NOTF.

Never turn ignition switch ON during 90 minutes.

- Turn ignition switch ON.
- 4. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-282, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450761

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR FOR WATER

- Disconnect EVAP control system pressure sensor harness connector.
- Check sensor harness connector for water.

P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR [MR18DE (EXCEPT FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

Water should not exist.

Is the inspection result normal? YES >> GO TO 3.

NO >> Repair or replace harness connector.

${f 3.}$ CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT

- 1. Turn ignition switch ON.
- Check the voltage between EVAP control system pressure sensor harness connector and ground.

EVAP control system pressure sensor		Ground	Voltage
Connector	Terminal		
B21	3	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 4.

4. CHECK SENSOR POWER SUPPLY CIRCUITS

Check harness for short to power and short to ground, between the following terminals.

E	ECM S		Sensor	
Connector	Terminal	Name	Connector	Terminal
	74	Refrigerant pressure sensor	E49	3
	75	CKP sensor (POS)	F20	1
F8	76	EVAP control system pressure sensor	B21	3
77		Battery current sensor	F53	1
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair short to ground or short to power in harness or connectors.

5. CHECK COMPONENTS

Check the following.

- Battery current sensor (Refer to EC-342, "Component Inspection".)
- Crankshaft position sensor (POS) (Refer to <u>EC-249</u>, "Component Inspection".)
- Refrigerant pressure sensor (Refer to EC-430, "Diagnosis Procedure".)

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace malfunctioning component.

6.CHECK APP SENSOR

Refer to EC-390, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 7.

Revision: 2012 August

7.REPLACE ACCELERATOR PEDAL ASSEMBLY

- Replace accelerator pedal assembly
- Perform EC-390, "Special Repair Requirement".

>> INSPECTION END

EC-283 2013 CUBE EC

Α

D

Е

F

Н

K

M

Ν

Р

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

8. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-284, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace EVAP control system pressure sensor.

9. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008450762

1. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Remove EVAP control system pressure sensor with its harness connector connected from EVAP canister. **Always replace O-ring with a new one.**
- 3. Install a vacuum pump to EVAP control system pressure sensor.
- 4. Turn ignition switch ON and check output voltage between ECM harness connector and ground under the following conditions.

ECM		Condition	Voltage	
Connector	Terminal	[Applied vacuum kPa (kg/cm², psi)	voltage	
42	· -	Not applied	1.8 - 4.8 V	
F8	(EVAP control system pressure sensor signal)	-26.7 (-0.272, -3.87)	2.1 to 2.5 V lower than above value	

CAUTION:

- · Always calibrate the vacuum pump gauge when using it.
- Do not apply below -93.3 kPa (-0.952 kg/cm², -13.53 psi) or pressure over 101.3 kPa (1.033 kg/cm², 14.69 psi).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP control system pressure sensor


< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR

Description INFOID:0000000008450763

The EVAP control system pressure sensor detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases.

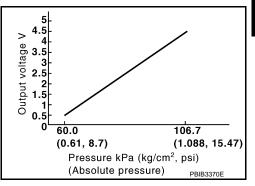

DTC Logic INFOID:0000000008450764

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0452	EVAP control system pressure sensor low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (EVAP control system pressure sensor circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.) (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) (Battery current sensor circuit is shorted.) EVAP control system pressure sensor Crankshaft position sensor (POS) Accelerator pedal position sensor Refrigerant pressure sensor Battery current sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds. 2.
- Turn ignition switch ON.
- 4. Select "DATA MONITOR" mode with CONSULT.
- 5. Make sure that "FUEL T/TMP SE" indication is more than 0°C (32°F).
- Start engine and wait at least 20 seconds.
- 7. Check 1st trip DTC.

With GST

- Start engine and warm it up to normal operating temperature.
- Set voltmeter probes to ECM harness connector and ground as per the following.

EC

Α

F

M

Ν

Р

EC-285 Revision: 2012 August 2013 CUBE

D

Е

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

	Ground		
Connector	Connector Terminal		
F8	43 (Fuel tank temperature sensor signal)	Ground	

- 3. Make sure that the voltage is less than 4.2 V.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- 5. Start engine and wait at least 20 seconds.
- 6. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-286, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450765

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK CONNECTOR

- 1. Disconnect EVAP control system pressure sensor harness connector.
- 2. Check sensor harness connector for water.

Water should not exist.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness connector.

3.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT-I

- 1. Turn ignition switch ON.
- Check the voltage between EVAP control system pressure sensor harness connector and ground.

•	tem pressure sen- or	Ground	Voltage	
Connector	Terminal			
B21 3		Ground	Approx. 5 V	

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 4.

f 4.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

•	tem pressure sen- or	ECM		Continuity
Connector	Terminal	Connector	Terminal	
B21	3	F8	76	Existed

Is the inspection result normal?

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

YES >> GO TO 6. NO >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B4, M79
- Harness connectors M77, E105
- Harness connectors E8. F1
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

6.CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
	74	Refrigerant pressure sensor	E49	3
	75	CKP sensor (POS)	F20	1
F8	76	EVAP control system pressure sensor	B21	3
	77	Battery current sensor	F53	1
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair short to ground or short to power in harness or connectors.

7. CHECK COMPONENTS

Check the following.

- Battery current sensor (Refer to EC-342, "Component Inspection".)
- Crankshaft position sensor (POS) (Refer to EC-249, "Component Inspection".)
- Refrigerant pressure sensor (Refer to EC-430, "Diagnosis Procedure".)

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace malfunctioning component.

8.CHECK APP SENSOR

Refer to EC-390, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 9.

9. REPLACE ACCELERATOR PEDAL ASSEMBLY

- Replace accelerator pedal assembly
- 2. Perform EC-390, "Special Repair Requirement".

>> INSPECTION END

10.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

EC

Α

Е

D

G

F

L

Ν

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

EVAP control system pressure sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
B21	1	F8	51	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 12. NO >> GO TO 11.

11. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B4, M79
- Harness connectors M77, E105
- Harness connectors E8, F1
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

12. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

•	tem pressure sen- or	ECM		Continuity
Connector	Terminal	Connector	Terminal	
B21	2	F8	42	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 14. NO >> GO TO 13.

13. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B4, M79
- Harness connectors M77, E105
- Harness connectors E8, F1
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

14. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-289, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace EVAP control system pressure sensor.

15. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Component Inspection

INFOID:0000000008450766

1. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Remove EVAP control system pressure sensor with its harness connector connected from EVAP canister. **Always replace O-ring with a new one.**
- 3. Install a vacuum pump to EVAP control system pressure sensor.
- 4. Turn ignition switch ON and check output voltage between ECM harness connector and ground under the following conditions.

	ECM	ECM Condition Voltage	
Connector	Terminal	[Applied vacuum kPa (kg/cm², psi)	voltage
	42	Not applied	1.8 - 4.8 V
F8	(EVAP control system pressure sensor signal)	-26.7 (-0.272, -3.87)	2.1 to 2.5 V lower than above value

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -93.3 kPa (-0.952 kg/cm², -13.53 psi) or pressure over 101.3 kPa (1.033 kg/cm², 14.69 psi).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP control system pressure sensor

EC

Α

Е

D

F

Н

-

J

Κ

L

M

Ν

0

Р

P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR


< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR

Description INFOID:000000008450767

The EVAP control system pressure sensor detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases.

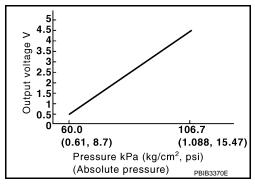

DTC Logic

INFOID:0000000008450768

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0453	EVAP control system pressure sensor high input	An excessively high voltage from the sensor is sent to ECM.	Harness or connectors (EVAP control system pressure sensor circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.] (Accelerator pedal circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) (Battery current sensor circuit is shorted.) (Battery current sensor circuit is shorted.) EVAP control system pressure sensor Crankshaft position sensor (POS) Accelerator pedal position sensor Refrigerant pressure sensor EVAP canister vent control valve EVAP canister Rubber hose from EVAP canister vent control valve to vehicle frame Battery current sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Select "DATA MONITOR" mode with CONSULT.
- 5. Make sure that "FUEL T/TMP SE" indication is more than 0°C (32°F).
- 6. Start engine and wait at least 20 seconds.
- 7. Check 1st trip DTC.

P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Start engine and warm it up to normal operating temperature.

2. Set	voltmeter	probes to EC	M harness	connector and	ground as	per the f	ollowing
--------	-----------	--------------	-----------	---------------	-----------	-----------	----------

	ECM	
Connector	Terminal	Ground
F8	43 (Fuel tank temperature sensor signal)	Ground

Make sure that the voltage is less than 4.2 V.

- Turn ignition switch OFF and wait at least 10 seconds.
- 5. Start engine and wait at least 20 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-291, "Diagnosis Procedure".

>> INSPECTION END NO

Diagnosis Procedure

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK CONNECTOR

- Disconnect EVAP control system pressure sensor harness connector.
- Check sensor harness connector for water.

Water should not exist.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness connector.

3.check evap control system pressure sensor power supply circuit

- Turn ignition switch ON.
- Check the voltage between EVAP control system pressure sensor harness connector and ground.

•	tem pressure sen- or	Ground Voltage	
Connector	Terminal		
B21	3	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 4.

f 4.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

EC-291 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

INFOID:0000000008450769

Н

K

N

P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR [MR18DE (EXCEPT FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

EVAP control system pressure sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
B21	3	F8	76	Existed

Is the inspection result normal?

YES >> GO TO 6. NO >> GO TO 5.

${f 5.}$ DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B4. M79
- Harness connectors M77, E105
- Harness connectors E8, F1
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

O.CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
	74	Refrigerant pressure sensor	E49	3
	75	CKP sensor (POS)	F20	1
F8	76	EVAP control system pressure sensor	B21	3
	77	Battery current sensor	F53	1
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair short to ground or short to power in harness or connectors.

7. CHECK COMPONENTS

Check the following.

- Battery current sensor (Refer to <u>EC-342, "Component Inspection"</u>.)
- Crankshaft position sensor (POS) (Refer to EC-249, "Component Inspection".)
- Refrigerant pressure sensor (Refer to EC-430, "Diagnosis Procedure".)

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace malfunctioning component.

8.CHECK APP SENSOR

Refer to EC-390, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 9.

9. REPLACE ACCELERATOR PEDAL ASSEMBLY

- Replace accelerator pedal assembly
- Perform EC-390, "Special Repair Requirement".

>> INSPECTION END

10.check evap control system pressure sensor ground circuit for open and

EC-292 Revision: 2012 August 2013 CUBE

P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

•	EVAP control system pressure sensor		ECM	
Connector	Terminal	Connector	Terminal	
B21	1	F8	51	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 12. NO >> GO TO 11.

11. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B4, M79
- Harness connectors M77, E105
- Harness connectors E8, F1
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

12.check evap control system pressure sensor input signal circuit for open and SHORT

1. Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

EVAP control system pressure sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
B21	2	F8	42	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 14. NO >> GO TO 13.

13. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B4, M79
- Harness connectors M77, E105
- Harness connectors E8, F1
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

14. CHECK RUBBER TUBE

- Disconnect rubber tube connected to EVAP canister vent control valve.
- Check the rubber tube for clogging.

Is the inspection result normal?

YES >> GO TO 15.

NO >> Clean the rubber tube using an air blower, repair or replace rubber tube.

15. CHECK EVAP CANISTER VENT CONTROL VALVE

EC

Α

Е

M

N

2013 CUBE

P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Refer to EC-275, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 16.

NO >> Replace EVAP canister vent control valve.

16. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-294, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 17.


NO >> Replace EVAP control system pressure sensor.

17. CHECK IF EVAP CANISTER IS SATURATED WITH WATER

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- 2. Check if water will drain from the EVAP canister.

Does water drain from EVAP canister?

YES >> GO TO 18. NO >> GO TO 20.

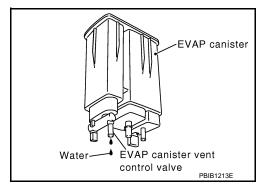

18. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

Is the inspection result normal?

YES >> GO TO 20. NO >> GO TO 19.

19. DETECT MALFUNCTIONING PART

Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection
 - >> Repair hose or replace EVAP canister. Refer to FL-14, "Exploded View".

20. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008450770

1. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

- Turn ignition switch OFF.
- Remove EVAP control system pressure sensor with its harness connector connected from EVAP canister. Always replace O-ring with a new one.
- 3. Install a vacuum pump to EVAP control system pressure sensor.
- Turn ignition switch ON and check output voltage between ECM harness connector and ground under the following conditions.

P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR [MR18DE (EXCEPT FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

	ECM	Condition Voltage		
Connector	onnector Terminal [Applied vacuum kPa (kg/cm², psi)		voltage	
	42	Not applied	1.8 - 4.8 V	
F8	(EVAP control system pressure sensor signal)	-26.7 (-0.272, -3.87)	2.1 to 2.5 V lower than above value	

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -93.3 kPa (-0.952 kg/cm², -13.53 psi) or pressure over 101.3 kPa (1.033 kg/cm², 14.69 psi).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP control system pressure sensor

Α

EC

D

Е

F

G

Н

ī

Κ

L

M

Ν

0


Р

DTC Logic

DTC DETECTION LOGIC

This diagnosis detects leaks in the EVAP line between fuel tank and EVAP canister purge volume control solenoid valve, using the negative pressure caused by decrease of fuel temperature in the fuel tank after turning ignition switch OFF.

If ECM judges there are no leaks, the diagnosis will be OK.

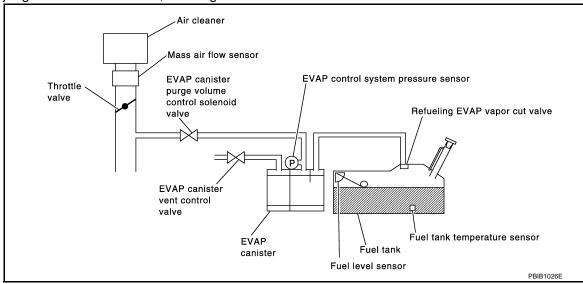

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0456	Evaporative emission control system leak	EVAP system has a leak. EVAP system does not operate properly.	 Incorrect fuel tank vacuum relief valve Incorrect fuel filler cap used Fuel filler cap remains open or fails to close. Foreign matter caught in fuel filler cap. Leak is in line between intake manifold and EVAP canister purge volume control solenoid valve. Foreign matter caught in EVAP canister vent control valve. EVAP canister or fuel tank leaks EVAP purge line (pipe and rubber tube) leaks EVAP purge line rubber tube bent Loose or disconnected rubber tube EVAP canister vent control valve and the circuit EVAP canister purge volume control solenoid valve and the circuit Fuel tank temperature sensor O-ring of EVAP canister vent control valve is missing or damaged EVAP canister is saturated with water EVAP control system pressure sensor Refueling EVAP vapor cut valve ORVR system leaks Fuel level sensor and the circuit Foreign matter caught in EVAP canister purge volume control solenoid valve

CAUTION:

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine NISSAN rubber tube as a replacement.

DTC CONFIRMATION PROCEDURE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

PRECONDITIONING
f DTC Confirmation Procedure has been previously conducted, always perform the following before conduct- ng the next test.
. Turn ignition switch OFF and wait at least 10 seconds.
Turn ignition switch ON. Turn ignition switch OFF and wait at least 10 seconds.
o you have CONSULT?
YES >> GO TO 2. NO >> GO TO 4.
PERFORM DTC CONFIRMATION PROCEDURE-I
With CONSULT
 Turn ignition switch ON and select "EVAP DIAG READY" in "DATA MONITOR" mode with CONSULT. Start engine and wait at idle until "OFF" of "EVAP DIAG READY" changes to "ON". NOTE:
It will take at most 2 hours until "OFF" of "EVAP DIAG READY" changes to "ON". Turn ignition switch OFF and wait at least 90 minutes. NOTE:
Never turn ignition switch ON during 90 minutes. Turn ignition switch ON and select "EVAP LEAK DIAG" in "DATA MONITOR" mode with CONSULT. Check that "EVAP LEAK DIAG" indication.
hich is displayed on CONSULT?
CMPLT >> GO TO 3. YET >> Perform DTC CONFIRMATION PROCEDURE again. GO TO 1.
PERFORM DTC CONFIRMATION PROCEDURE-II
heck 1st trip DTC.
s 1st trip DTC detected?
YES >> Go to <u>EC-297, "Diagnosis Procedure"</u> . NO >> INSPECTION END.
PERFORM DTC CONFIRMATION PROCEDURE
With GST
Start engine and wait engine idle for at least 2 hours.Turn ignition switch OFF and wait at least 90 minutes.NOTE:
Never turn ignition switch ON during 90 minutes.
. Turn ignition switch ON. . Check 1st trip DTC.
s 1st trip DTC detected?
YES >> Go to <u>EC-297</u> , " <u>Diagnosis Procedure"</u> . NO >> INSPECTION END.
Diagnosis Procedure INFOID:000000008450776
.CHECK FUEL FILLER CAP DESIGN
. Turn ignition switch OFF.

Revision: 2012 August EC-297 2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >


[MR18DE (EXCEPT FOR CALIFORNIA)]

2. Check for genuine NISSAN fuel filler cap design.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace with genuine NISSAN fuel filler cap.

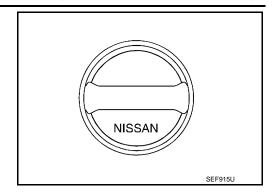

2. CHECK FUEL FILLER CAP INSTALLATION

Check that the cap is tightened properly by rotating the cap clockwise.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Open fuel filler cap, then clean cap and fuel filler neck threads using air blower. Then retighten until ratcheting sound is heard.

3. CHECK FUEL FILLER CAP FUNCTION

Check for air releasing sound while opening the fuel filler cap.

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. CHECK FUEL TANK VACUUM RELIEF VALVE

Refer to EC-301, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace fuel filler cap with a genuine one.

5. CHECK FOR EVAP LEAK

Refer to EC-475, "Inspection".

Is there any leak in EVAP line?

YES >> Repair or replace.

NO >> GO TO 6.

6.CHECK EVAP CANISTER VENT CONTROL VALVE

Check the following.

- EVAP canister vent control valve is installed properly. Refer to FL-14, "Exploded View".
- EVAP canister vent control valve.

Refer to EC-279, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace EVAP canister vent control valve and O-ring. Refer to FL-14, "Exploded View".

7.CHECK IF EVAP CANISTER SATURATED WITH WATER

< DTC/CIRCUIT DIAGNOSIS >


[MR18DE (EXCEPT FOR CALIFORNIA)]

- 1. Remove EVAP canister (1) with EVAP canister vent control valve (2) and EVAP control system pressure sensor attached.
- 2. Check if water will drain from the EVAP canister.

Does water drain from EVAP canister?

YES >> GO TO 8.

NO-1 >> With CONSULT: GO TO 10. NO-2 >> Without CONSULT: GO TO 11.

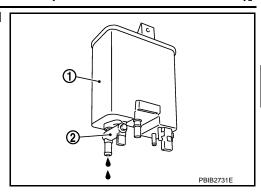

8.CHECK EVAP CANISTER

Weigh the EVAP canister assembly with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 2.2 kg (4.9 lb).

Is the inspection result normal?

YES-1 >> With CONSULT: GO TO 10.

YES-2 >> Without CONSULT: GO TO 11.

NO >> GO TO 9.

9. DETECT MALFUNCTIONING PART

Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection

>> Repair hose or replace EVAP canister. Refer to FL-14, "Exploded View".

10.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

(P)With CONSULT

- 1. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port.
- 2. Start engine and let it idle.
- 3. Select "PURG VOL CONT/V" in "ACTIVE TEST" mode.
- 4. Touch "Qu" on CONSULT screen to increase "PURG VOL CONT/V" opening to 100%.
- 5. Check vacuum hose for vacuum.

Vacuum should exist.

Is the inspection result normal?

YES >> GO TO 13.

NO >> GO TO 12.

11. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

- 1. Start engine and warm it up to normal operating temperature.
- Stop engine.
- 3. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port.
- 4. Start engine and let it idle for at least 80 seconds.
- 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm.

Vacuum should exist.

Is the inspection result normal?

YES >> GO TO 13.

NO >> GO TO 12.

12. CHECK VACUUM HOSE

Check vacuum hoses for clogging or disconnection. Refer to <u>EC-87</u>, "System Diagram". Is the inspection result normal?

EC

Α

С

D

Е

F

Н

K

M

Ν

0

Р

Revision: 2012 August EC-299 2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

YES >> GO TO 13.

NO >> Repair or reconnect the hose.

13. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to EC-268, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 14.

NO >> Replace EVAP canister purge volume control solenoid valve. Refer to EM-26, "Exploded View".

14. CHECK FUEL TANK TEMPERATURE SENSOR

Refer to EC-231, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace fuel level sensor unit. Refer to FL-5, "Exploded View".

15. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-284, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 16.

NO >> Replace EVAP control system pressure sensor. Refer to FL-14, "Exploded View".

16. CHECK EVAP PURGE LINE

Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks or improper connection. Refer to <u>EC-87</u>, "System <u>Description"</u>.

Is the inspection result normal?

YES >> GO TO 17.

NO >> Repair or reconnect the hose.

17. CLEAN EVAP PURGE LINE

Clean EVAP purge line (pipe and rubber tube) using air blower.

>> GO TO 18.

18. CHECK EVAP/ORVR LINE

Check EVAP/ORVR line between EVAP canister and fuel tank for clogging, kink, looseness and improper connection. For location, refer to EC-423, "Description".

Is the inspection result normal?

YES >> GO TO 19.

NO >> Repair or replace hoses and tubes.

19. CHECK RECIRCULATION LINE

Check recirculation line between fuel filler tube and fuel tank for clogging, kink, cracks, looseness and improper connection.

Is the inspection result normal?

YES >> GO TO 20.

NO >> Repair or replace hose, tube or fuel filler tube.

20.CHECK REFUELING EVAP VAPOR CUT VALVE

Refer to EC-426, "Component Inspection (Refueling EVAP vapor cut valve)".

Is the inspection result normal?

YES >> GO TO 21.

NO >> Replace refueling EVAP vapor cut valve with fuel tank. Refer to FL-9, "Exploded View".

21. CHECK FUEL LEVEL SENSOR

Refer to MWI-43, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 22.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

NO >> Replace fuel level sensor unit. Refer to FL-5, "Exploded View".

22. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008450777

Α

EC

D


Е

F

Н

1. CHECK FUEL TANK VACUUM RELIEF VALVE

- 1. Turn ignition switch OFF.
- 2. Remove fuel filler cap.
- 3. Wipe clean valve housing.

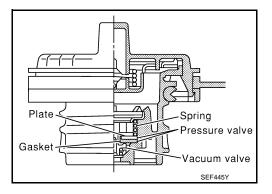

4. Check valve opening pressure and vacuum.

Pressure: 15.3 - 20.0 kPa (0.156 - 0.204 kg/cm², 2.22 -

2.90 psi)

Vacuum: -6.0 to -3.3 kPa (-0.061 to -0.034 kg/cm²,

-0.87 to -0.48 psi)

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

Fuel filler cap adapter Vacuum/Pressure gauge Vacuum/ Pressure pump One-way valve SEF943S

2. REPLACE FUEL FILLER CAP

Replace fuel filler cap.

CAUTION:

Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.

>> INSPECTION END

M

K

L

Р

Revision: 2012 August EC-301 2013 CUBE

N

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0460 FUEL LEVEL SENSOR

Description INFOID:000000008450778

The fuel level sensor is mounted in the fuel level sensor unit.

The sensor detects a fuel level in the fuel tank and transmits a signal to the combination meter. The combination meter sends the fuel level sensor signal to the ECM via the CAN communication line.

It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel mechanical float.

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P0460 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0460 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-319, "DTC Logic".

When the vehicle is parked, naturally the fuel level in the fuel tank is stable. It means that output signal of the fuel level sensor does not change. If ECM senses sloshing signal from the sensor, fuel level sensor malfunction is detected.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0460	Fuel level sensor circuit noise	Even though the vehicle is parked, a signal being varied is sent from the fuel level sensor to ECM.	Harness or connectors (The CAN communication line is open or shorted) Harness or connectors (The sensor circuit is open or shorted) Combination meter Fuel level sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and wait maximum of 2 consecutive minutes.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-302, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450780

1.CHECK COMBINATION METER FUNCTION

Refer to MWI-30, "CONSULT Function (METER/M&A)".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to MWI-42, "Component Function Check"

2.CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

P0461 FUEL LEVEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0461 FUEL LEVEL SENSOR

Description INFOID:0000000008450781

The fuel level sensor is mounted in the fuel level sensor unit.

The sensor detects a fuel level in the fuel tank and transmits a signal to the combination meter. The combination meter sends the fuel level sensor signal to the ECM via the CAN communication line.

It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel mechanical float.

DTC Logic INFOID:0000000008450782

DTC DETECTION LOGIC

NOTE:

- If DTC P0461 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0461 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-319, "DTC Logic".

Driving long distances naturally affect fuel gauge level.

This diagnosis detects the fuel gauge malfunction of the gauge not moving even after a long distance has been driven.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	G
P0461	Fuel level sensor circuit range/performance	The output signal of the fuel level sensor does not change within the specified range even though the vehicle has been driven a long distance.	Harness or connectors (The CAN communication line is open or shorted) Harness or connectors (The sensor circuit is open or shorted) Combination meter Fuel level sensor	Н

DTC CONFIRMATION PROCEDURE

1. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-303, "Component Function Check".

Use component function check to check the overall function of the fuel level sensor function. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-304, "Diagnosis Procedure".

Component Function Check

1.PRECONDITIONING

When performing following procedure, be sure to observe the handling of the fuel. Refer to FL-2, "General Precautions".

TESTING CONDITION:

Before starting component function check, preparation of draining fuel and refilling fuel is required.

Do you have CONSULT?

YES >> GO TO 2. NO >> GO TO 3.

2.PERFORM COMPONENT FUNCTION CHECK

(P)With CONSULT

NOTE:

Start from step 10, if it is possible to confirm that the fuel cannot be drained by 30 $\,\ell$ (7-7/8 US gal, 6-5/ 8 Imp gal) in advance.

Prepare a fuel container and a spare hose.

EC-303 2013 CUBE Revision: 2012 August

EC

Α

D

Е

L

INFOID:0000000008450783

M

Ν

Р

P0461 FUEL LEVEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- 2. Release fuel pressure from fuel line, refer to EC-473, "Inspection".
- 3. Remove the fuel feed hose on the fuel level sensor unit.
- 4. Connect a spare fuel hose where the fuel feed hose was removed.
- 5. Turn ignition switch OFF and wait at least 10 seconds then turn ON.
- 6. Select "FUEL LEVEL SE" in "DATA MONITOR" mode with CONSULT.
- 7. Check "FUEL LEVEL SE" output voltage and note it.
- 8. Select "FUEL PUMP RELAY" in "ACTIVE TEST" mode with CONSULT.
- 9. Touch "ON" and drain fuel approximately 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal) and stop it.
- 10. Check "FUEL LEVEL SE" output voltage and note it.
- 11. Fill fuel into the fuel tank for 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal).
- 12. Check "FUEL LEVEL SE" output voltage and note it.
- 13. Confirm whether the voltage changes more than 0.03 V during step 7 to 10 and 10 to 12.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-304, "Diagnosis Procedure".

3.perform component function check

®Without CONSULT

NOTE:

Start from step 8, if it is possible to confirm that the fuel cannot be drained by 30 $\,\ell$ (7-7/8 US gal, 6-5/8 Imp gal) in advance.

- 1. Prepare a fuel container and a spare hose.
- 2. Release fuel pressure from fuel line. Refer to <a>EC-473, "Inspection".
- 3. Remove the fuel feed hose on the fuel level sensor unit.
- 4. Connect a spare fuel hose where the fuel feed hose was removed.
- 5. Turn ignition switch ON.
- 6. Drain fuel by 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal) from the fuel tank using proper equipment.
- 7. Confirm that the fuel gauge indication varies.
- 8. Fill fuel into the fuel tank for 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal).
- 9. Confirm that the fuel gauge indication varies.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-304, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008450784

1. CHECK COMBINATION METER FUNCTION

Refer to MWI-30, "CONSULT Function (METER/M&A)".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to MWI-42, "Component Function Check"

2. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

P0462, P0463 FUEL LEVEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0462, P0463 FUEL LEVEL SENSOR

Description INFOID:0000000008450785

The fuel level sensor is mounted in the fuel level sensor unit.

The sensor detects a fuel level in the fuel tank and transmits a signal to the combination meter. The combination meter sends the fuel level sensor signal to the ECM via the CAN communication line.

It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel mechanical float.

DTC Logic INFOID:0000000008450786

DTC DETECTION LOGIC

NOTE:

- If DTC P0462 or P0463 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0462 or P0463 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-319, "DTC Logic".

This diagnosis indicates the former, to detect open or short circuit malfunction.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	
P0462	Fuel level sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (The CAN communication line is open o	
P0463	Fuel level sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	 shorted) Harness or connectors (The sensor circuit is open or shorted) Combination meter Fuel level sensor 	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 11 V and 16 V at ignition switch ON.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON and wait at least 5 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-305, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK COMBINATION METER FUNCTION

Refer to MWI-30, "CONSULT Function (METER/M&A)".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to MWI-42, "Component Function Check"

2.check intermittent incident

Refer to GI-41, "Intermittent Incident".

EC

Α

D

Е

F

L

M

N

INFOID:0000000008450787

Р

P0462, P0463 FUEL LEVEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0500 VSS

EXCEPT FOR M/T MODELS

EXCEPT FOR M/T MODELS: Description

INFOID:0000000008450788

ECM receives vehicle speed signals from two different paths via CAN communication line: One is from the ABS actuator and electric unit (control unit) via the combination unit and the other is from TCM.

EXCEPT FOR M/T MODELS: DTC Logic

INFOID:0000000008450789

DTC DETECTION LOGIC

NOTE:

D

Α

EC

Е

F

Н

N

Р

- If DTC P0500 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0500 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to <u>EC-319</u>, "DTC Logic".

DTC No.	Trouble diagnosis (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0500	VEH SPEED SEN/CIRC (Vehicle speed sensor)	At 20 km/h (13 MPH), ECM detects the following status continuously for 5 seconds or more: The difference between a vehicle speed calculated by a output speed sensor transmitted from TCM to ECM via CAN communication and the vehicle speed indicated on the combination meter exceeds 15km/h (10 MPH).	Harness or connector (The CAN communication line is open or shorted.) Combination meter ABS actuator and electric unit (control unit) Wheel sensor TCM Output speed sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is 10 V or more at idle.

>> GO TO 2.

2.perform dtc confirmation procedure

- 1. Start engine.
- Shift the selector lever to D range and wait at least for 2 seconds.
- 3. Drive the vehicle at least 5 seconds at 20 km/h (13 MPH) or more.

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

4. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-307, "EXCEPT FOR M/T MODELS : Diagnosis Procedure"

NO >> INSPECTION END

EXCEPT FOR M/T MODELS : Diagnosis Procedure

INFOID:0000000008450790

1. CHECK DTC WITH TCM

Check DTC with TCM. Refer to TM-98, "CONSULT Function".

Revision: 2012 August EC-307 2013 CUBE

INFOID:0000000008450791

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform trouble shooting relevant to DTC indicated.

2.CHECK DTC WITH ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Check DTC with ABS actuator and electric unit (control unit). Refer to BRC-23, "CONSULT Function".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Perform trouble shooting relevant to DTC indicated.

3. CHECK DTC WITH COMBINATION METER

Check DTC with combination meter. Refer to MWI-30, "CONSULT Function (METER/M&A)".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Perform trouble shooting relevant to DTC indicated.

4. CHECK OUTPUT SPEED SENSOR

Check output speed sensor. Refer to TM-118, "Diagnosis Procedure".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace or replace error-detected parts.

5. CHECK WHEEL SENSOR

Check wheel sensor. Refer to BRC-41, "Diagnosis Procedure".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-41, "Intermittent Incident".

NO >> Replace or replace error-detected parts.

M/T MODELS

M/T MODELS: Description

The vehicle speed signal is sent to the combination meter from the "ABS actuator and electric unit (control unit)" via the CAN communication line. The combination meter then sends a signal to the ECM via the CAN communication line.

M/T MODELS: DTC Logic

DDELS: DTC LOGIC

DTC DETECTION LOGIC

NOTE:

- If DTC P0500 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0500 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-319, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0500	Vehicle speed sensor	The vehicle speed signal sent to ECM is almost 0 km/h (0 MPH) even when vehicle is being driven.	Harness or connectors (The CAN communication line is open or shorted) Harness or connectors (The vehicle speed signal circuit is open or shorted) Wheel sensor Combination meter ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

[MR18DE (EXCEPT FOR CALIFORNIA)]

NO >> GO TO 5.

2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 3.

3.CHECK VEHICLE SPEED SIGNAL

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

(P)With CONSULT

- 1. Start engine.
- Read "VHCL SPEED SE" in "DATA MONITOR" mode with CONSULT. The vehicle speed on CONSULT should exceed 10 km/h (6 mph) when rotating wheels with suitable gear position.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Go to EC-310, "M/T MODELS : Diagnosis Procedure".

4. PERFORM DTC CONFIRMATION PROCEDURE

- Select "DATA MONITOR" mode with CONSULT.
- 2. Warm engine up to normal operating temperature.
- Maintain the following conditions for at least 50 consecutive seconds.

CAUTION:

Always drive vehicle at a safe speed.

ENG SPEED	2,200 - 6,000 rpm
COOLAN TEMP/S	More than 70°C (158°F)
B/FUEL SCHDL	4.0 - 31.8 msec
Selector lever	Except Neutral position
PW/ST SIGNAL	OFF

4. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-310, "M/T MODELS : Diagnosis Procedure".

NO >> INSPECTION END

${f 5}$.PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-309, "M/T MODELS: Component Function Check". Use component function check to check the overall function of the vehicle speed signal circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-310, "M/T MODELS: Diagnosis Procedure".

M/T MODELS: Component Function Check

1.PERFORM COMPONENT FUNCTION CHECK

- 1. Lift up drive wheels.
- 2. Start engine.
- 3. Read vehicle speed signal in Service \$01 with GST.

The vehicle speed signal on GST should be able to exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.

Is the inspection result normal?

YES >> INSPECTION END

EC-309 Revision: 2012 August 2013 CUBE

EC

Α

D

F

Н

M

N

INFOID:00000000008450793

P0500 VSS

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

NO >> Go to EC-310, "M/T MODELS: Diagnosis Procedure".

M/T MODELS: Diagnosis Procedure

INFOID:0000000008450794

1. CHECK DTC WITH "ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)"

Refer to BRC-23, "CONSULT Function".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace.

2. CHECK COMBINATION METER

Refer to MWI-30, "CONSULT Function (METER/M&A)".

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0506 ISC SYSTEM

Description INFOID:000000008450795

The ECM controls the engine idle speed to a specified level through the fine adjustment of the air, which is let into the intake manifold, by operating the electric throttle control actuator. The operating of the throttle valve is varied to allow for optimum control of the engine idling speed. The crankshaft position sensor (POS) detects the actual engine speed and sends a signal to the ECM.

The ECM controls the electric throttle control actuator so that the engine speed coincides with the target value memorized in the ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warming up, deceleration, and engine load (air conditioner, power steering and cooling fan operation, etc.).

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0506 is displayed with other DTC, first perform the trouble diagnosis for the other DTC.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0506	Idle speed control system RPM lower than expected	The idle speed is less than the target idle speed by 100 rpm or more.	Electric throttle control actuator Intake air leak

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

If the target idle speed is out of the specified value, perform <u>EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement"</u>, before conducting DTC Confirmation Procedure.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.
- Always perform the test at a temperature above –10°C(14°F).

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and run it for at least 1 minute at idle speed.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-311, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK INTAKE AIR LEAK

- 1. Start engine and let it idle.
- Listen for an intake air leak after the mass air flow sensor.

Is intake air leak detected?

YES >> Discover air leak location and repair.

NO >> GO TO 2.

2.REPLACE ECM

- 1. Stop engine.
- 2. Replace ECM.

ı

K

Α

EC

Е

Н

M

N

INFOID:0000000008450797

Р

P0506 ISC SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

3. Perform EC-22, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement".

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0507 ISC SYSTEM

Description INFOID:0000000008450798

The ECM controls the engine idle speed to a specified level through the fine adjustment of the air, which is let into the intake manifold, by operating the electric throttle control actuator. The operating of the throttle valve is varied to allow for optimum control of the engine idling speed. The crankshaft position sensor (POS) detects the actual engine speed and sends a signal to the ECM.

The ECM controls the electric throttle control actuator so that the engine speed coincides with the target value memorized in the ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warming up, deceleration, and engine load (air conditioner, power steering and cooling fan operation, etc.).

DTC Logic INFOID:0000000008450799

DTC DETECTION LOGIC

NOTE:

If DTC P0507 is displayed with other DTC, first perform the trouble diagnosis for the other DTC.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0507	Idle speed control system RPM higher than expected	The idle speed is more than the target idle speed by 200 rpm or more.	Electric throttle control actuator Intake air leak PCV system

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

If the target idle speed is out of the specified value, perform EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement", before conducting DTC Confirmation Procedure.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.
- Always perform the test at a temperature above –10°C(14°F).

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and run it for at least 1 minute at idle speed.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-313, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK PCV HOSE CONNECTION

Confirm that PCV hose is connected correctly.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace.

2.check intake air leak

- 1. Start engine and let it idle.
- Listen for an intake air leak after the mass air flow sensor.

EC-313 Revision: 2012 August 2013 CUBE

EC

Α

 \Box

Е

K

N

INFOID:0000000008450800

P0507 ISC SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Is intake air leak detected?

YES >> Discover air leak location and repair.

NO >> GO TO 3.

3.REPLACE ECM

- Stop engine.
- 2. Replace ECM.
- 3. Perform EC-22, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement".

P050A, P050E COLD START CONTROL

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P050A, P050E COLD START CONTROL

Description INFOID:0000000008450801

ECM controls ignition timing and engine idle speed when engine is started with pre-warming up condition. This control promotes the activation of three way catalyst by heating the catalyst and reduces emissions.

INFOID:0000000008450802

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P050A or P050E is displayed with other DTC, first perform the trouble diagnosis for other DTC.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P050A	Cold start idle air control system performance	ECM does not control engine idle speed properly when engine is started with pre-warming up condition.	Lack of intake air volume Fuel injection system
P050E	Cold start engine exhaust temperature too low	The temperature of the catalyst inlet does not rise to the proper temperature when the engine is started with pre-warming up condition.	• ECM

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-I

(P)With CONSULT

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT.
- Check the indication of "COOLAN TEMP/S".

Follow the procedure "With CONSULT" above.

Is the value of "COOLAN TEMP/S" between 4°C (59°F) and 36°C (97°F)?

YES >> GO TO 3.

NO-1 [If it is below 4°C (59°F)]>>Warm up the engine until the value of "COOLAN TEMP/S" reaches 4°C (59°F) or more. Retry from step 1.

NO-2 [If it is above 36°C (97°F)]>>Cool engine down to less than 36°C (97°F). Retry from step 1.

3.PERFORM DTC CONFIRMATION PROCEDURE-II

(P)With CONSULT

- Set the select lever in N range.
- Start the engine and warm up in idle with the value of "COOLAN TEMP/S" between 4°C (59°F) and 40°C (104°F) for more than 15 seconds.
- Check 1st trip DTC.

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

>> Go to EC-316, "Diagnosis Procedure".

EC-315 Revision: 2012 August 2013 CUBE

EC

Α

Е

Ν

P050A, P050E COLD START CONTROL

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450803

1. PERFORM IDLE AIR VOLUME LEARNING

Perform EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

Is Idle Air Volume Learning carried out successfully?

YES >> GO TO 2.

NO >> Follow the instruction of Idle Air Volume Learning.

2.CHECK INTAKE SYSTEM

Check for the cause of intake air volume lacking. Refer to the following.

- Crushed intake air passage
- · Intake air passage clogging
- · Clogging of throttle body

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning part

${f 3.}$ CHECK FUEL INJECTION SYSTEM FUNCTION

Perform DTC Confirmation Procedure for DTC P0171. Refer to EC-220, "DTC Logic".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Go to EC-221, "Diagnosis Procedure" for DTC P0171.

4. PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON.
- Erase DTC.
- 3. Perform DTC Confirmation Procedure.

See EC-315, "DTC Logic".

Is the 1st trip DTC P050A or P050E displayed again?

YES >> GO TO 5.

NO >> INSPECTION END

5. REPLACE ECM


- 1. Replace ECM.
- Go to EC-22, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement".

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0605 ECM

Description

The ECM consists of a microcomputer and connectors for signal input and output and for power supply. The ECM controls the engine.

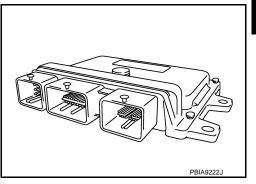

Α

EC

D

Е

F

Н

M

N

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition		Possible cause
		A)	ECM calculation function is malfunctioning.	
P0605	Engine control module	B)	ECM EEP-ROM system is malfunctioning.	• ECM
		C)	ECM self shut-off function is malfunctioning.	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2.perform dtc confirmation procedure for malfunction a

- 1. Turn ignition switch ON.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-318, "Diagnosis Procedure".

NO >> GO TO 3.

3.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B

- 1. Turn ignition switch ON and wait at least 1 second.
- 2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
- 3. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-318, "Diagnosis Procedure".

NO >> GO TO 4.

f 4.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION C

- 1. Turn ignition switch ON and wait at least 1 second.
- Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
- Repeat step 2 for 32 times.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-318, "Diagnosis Procedure".

P0605 ECM

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Diagnosis Procedure

INFOID:0000000008450806

1.INSPECTION START

- 1. Turn ignition switch ON.
- 2. Erase 1st trip DTC. Refer to EC-114, "On Board Diagnosis Function" or EC-117, "CONSULT Function".
- 3. Perform DTC CONFIRMATION PROCEDURE. Refer to EC-317, "DTC Logic".

Is the 1st trip DTC P0605 displayed again?

YES >> GO TO 2.

NO >> INSPECTION END

2.REPLACE ECM

- 1. Replace ECM.
- 2. Perform <u>EC-22</u>, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement".

[MR18DE (EXCEPT FOR CALIFORNIA)]

P0607 ECM

Description INFOID:0000000008450807

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic INFOID:0000000008450808

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0607	CAN communication bus	When detecting error during the initial diagnosis of CAN controller of ECM.	• ECM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON.
- Check DTC.

Is DTC detected?

YES >> Go to EC-319, "Diagnosis Procedure".

>> INSPECTION END NO

Diagnosis Procedure

1. INSPECTION START

- Turn ignition switch ON.
- Erase DTC. Refer to EC-114, "On Board Diagnosis Function" or EC-117, "CONSULT Function".
- Perform DTC CONFIRMATION PROCEDURE. Refer to EC-319, "DTC Logic".
- Check DTC.

Is the DTC P0607 displayed again?

YES >> GO TO 2.

NO >> INSPECTION END

2.replace ecm

- Replace ECM.
- Perform EC-22. "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement".

>> INSPECTION END

EC

Α

Е

Н

INFOID:0000000008450809

K

M

N

Р

P0643 SENSOR POWER SUPPLY

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0643	Sensor power supply circuit short	ECM detects a voltage of power source for sensor is excessively low or high.	Harness or connectors (APP sensor 1 circuit is shorted.) (TP sensor circuit is shorted.) (Battery current sensor circuit is shorted.) (PSP sensor circuit is shorted.) [Camshaft position sensor (PHASE) circuit is shorted.] Accelerator pedal position sensor Throttle position sensor Battery current sensor Power steering pressure sensor Camshaft position sensor (PHASE)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2.perform dtc confirmation procedure

- 1. Start engine and let it idle for 1 second.
- 2. Check DTC.

Is DTC detected?

YES >> Go to EC-320, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450811

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK ACCELERATOR PEDAL POSITION SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Disconnect accelerator pedal position (APP) sensor harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between APP sensor harness connector and ground.

APP sensor		Ground	Voltage	
Connector	Terminal	Glound	voltage	
E110 4		Ground	Approx. 5 V	

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 3.

P0643 SENSOR POWER SUPPLY

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

3.check sensor power supply circuits

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
F8 72 78		Electric throttle control actuator	F29	2
		CMP sensor (PHASE)	F26	1
E16	106	APP sensor	E110	4

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair short to ground or short to power in harness or connectors.

4.CHECK COMPONENTS

Check the following.

Camshaft position sensor (PHASE) (Refer to <u>EC-252, "Component Inspection".)</u>

Is the inspection result normal?

>> GO TO 5. YES

NO >> Replace camshaft position sensor (PHASE). Refer to EM-55, "Exploded View".

5. CHECK TP SENSOR

Refer to EC-176, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 6.

6.REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

- Replace electric throttle control actuator.
- 2. Perform EC-24, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".

>> INSPECTION END

7. CHECK APP SENSOR

Refer to EC-390, "Component Inspection".

Is the inspection result normal?

>> GO TO 9. YES

NO >> GO TO 8.

8. REPLACE ACCELERATOR PEDAL ASSEMBLY

- Replace accelerator pedal assembly.
- Perform EC-390, "Special Repair Requirement".

>> INSPECTION END

9. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

EC-321 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

F

Н

K

M

Ν

Р

P0850 PNP SWITCH

Description INFOID:0000000008450812

For CVT models, transmission range switch is turn ON when the selector lever is P or N.

For M/T models, park/neutral position (PNP) range switch is ON when the selector lever is Neutral position. ECM detects the position because the continuity of the line (the ON) exists.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	
P0850	Park/neutral position switch	For CVT models, the signal of transmission range switch is not changed in the process of engine starting and driving. For M/T models, the signal of the park/neutral position (PNP) switch is not changed in the process of engine starting and driving.	Harness or connectors [The transmission range switch circuit is open or shorted.(CVT models)] [The park/neutral position (PNP) switch circuit is open or shorted.(M/T models)] Transmission range switch (CVT models) Park/neutral position (PNP) switch (M/T models)	

DTC CONFIRMATION PROCEDURE

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 5.

2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 3.

3. CHECK PNP SWITCH FUNCTION

(P)With CONSULT

- 1. Turn ignition switch ON.
- Select "P/N POSI SW" in "DATA MONITOR" mode with CONSULT. Then check the "P/N POSI SW" signal under the following conditions.

Selector lever position	Known-good signal	
N or P position (CVT) Neutral position (M/T)	ON	
Except above position	OFF	

Is the inspection result normal?

YES >> GO TO 4.

NO >> Go to EC-323, "Diagnosis Procedure".

4. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Select "DATA MONITOR" mode with CONSULT.
- Start engine and warm it up to normal operating temperature.
- Maintain the following conditions for at least 60 consecutive seconds. CAUTION:

Always drive vehicle at a safe speed.

P0850 PNP SWITCH

[MR18DE (EXCEPT FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

ENG SPEED	1,200 - 6,375 rpm
COOLAN TEMP/S	More than 70°C (158°F)
B/FUEL SCHDL	2.5 - 31.8 msec
VHCL SPEED SE	More than 64 km/h (40 mph)
	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \
Selector lever	Suitable position

EC

D

Е

Н

M

Ν

Р

Α

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-323, "Diagnosis Procedure".

NO >> INSPECTION END

 ${f 5.}$ PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-323, "Component Function Check".

NOTE:

Use component function check the overall function of the transmission range switch circuit (CVT models) or the park/neutral position (PNP) switch circuit (M/T models). During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-323, "Diagnosis Procedure".

Component Function Check

INFOID:0000000008450814

1. PERFORM COMPONENT FUNCTION CHECK

- 1. Turn ignition switch ON.
- 2. Check the voltage between ECM harness connector and ground under the following conditions.

ECM		Ground	Condition		Voltage
Connector	Terminal	Glound	Ground		voltage
F7 (14 (PNP signal)	Ground	Selector lever	P or N (CVT) Neutral (M/T)	Approx. 0 V
	(i i vi sigilal)			Except above	Battery voltage

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-323, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008450815

1. CHECK TRANSMISSION RANGE SWITCH (CVT) OR PNP SWITCH (M/T) POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- Disconnect transmission range switch (CVT) or park/neutral position (PNP) switch (M/T) harness connector.
- Turn ignition switch ON.
- 4. Check the voltage between transmission range switch (CVT) or PNP switch (M/T) harness connector and ground.

CVT models

Transmission range switch		Ground	Voltage	
Connector	Terminal	Glodila	voltage	
F21	1	Ground	Battery voltage	

P0850 PNP SWITCH

[MR18DE (EXCEPT FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

PNP switch (M/T)		Ground	Voltage	
Connector	Terminal	Glound	Voltage	
F23	2	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

M/T models

2.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- Harness connectors E105, M77 (M/T)
- IPDM E/R harness connector E14 (CVT)
- 10 A fuse (No. 3) (M/T)
- 10 A fuse (No. 56) (CVT)
- Harness for open or short between PNP switch and fuse (M/T)

Is the inspection result normal?

>> Repair open circuit or short to ground or short to power in harness or connectors.

${f 3.}$ CHECK PNP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between transmission range switch (CVT) or PNP switch (M/T) harness connector and ECM harness connector.

CVT models

Transmission range switch		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F21	2	F7	14	Existed
M/T models				
PNP switch ECM		Continuity		
Connector	Terminal	Connector	Terminal	Continuity
F23	3	F7	14	Existed

^{4.} Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK TRANSMISSION RANGE SWITCH (CVT) OR PNP SWITCH (M/T)

Refer to TM-110, "Component Inspection (Transmission Range Switch)" (CVT) or TM-8, "PARK/NEUTRAL POSITION (PNP) SWITCH: Component Inspection" (M/T).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace transmission range switch (CVT) or PNP switch (M/T). Refer to <u>TM-208, "Exploded View"</u> (CVT) or <u>TM-22, "Exploded View"</u> (M/T).

5. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

P1148 CLOSED LOOP CONTROL

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P1148 CLOSED LOOP CONTROL

DTC Logic

DTC DETECTION LOGIC

NOTE:

DTC P1148 is displayed with another DTC for A/F sensor 1. Perform the trouble diagnosis for the corresponding DTC.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1148 C	Closed loop control function -	The closed loop control function for bank 1 does not operate even when vehicle is driving in the specified condition.	Harness or connectors (The A/F sensor 1 circuit is open or shorted.)
		The closed loop control function for bank 2 does not operate even when vehicle is driving in the specified condition.	A/F sensor 1 A/F sensor 1 heater

EC

Α

D

Е

F

G

Н

ī

Κ

L

M

Ν

0

P117A AIR FUEL RATIO

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P117A is displayed with other DTC, first perform the trouble diagnosis for the other DTC.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P117A	AIR FUEL RATIO B1 (Air fuel ratio imbalance among cylinders)	ECM detects a lean/rich air fuel ratio state in any cylinder for a specified length of time.	Fuel injector Exhaust gas leaks Incorrect fuel pressure Mass air flow sensor Intake air leaks Lack of fuel Incorrect PCV hose connection Improper spark plug Insufficient compression The fuel injector circuit is open or shorted ignition coil The ignition signal circuit is open or shorted

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING-1

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

NOTE:

Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 2.

2.PRECONDITIONING-2

- 1. Turn ignition switch ON.
- Clear the mixture ratio self-learning value. Refer to <u>EC-26</u>, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".

Will CONSULT be used?

YES >> GO TO 3.

NO >> GO TO 6.

3.perform dtc confirmation procedure-1 $\,$

- Turn ignition switch ON.
- Select "COOLAN TEMP/S" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- Start engine.
- 4. Make sure that "COOLAN TEMP/S" indicates more than 80°C (176°F).

>> GO TO 4.

4. PERFORM DTC CONFIRMATION PROCEDURE-2

With CONSULT

- Select "SYSTEM 1 DIAGNOSIS B B1" and "SYSTEM 1 DIAGNOSIS A B1" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 2. Drive vehicle under the following conditions for at least 5 consecutive seconds.

P117A AIR FUEL RATIO

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

CAUTION:

Always drive vehicle at a safe speed.

ENG SPEED	1,600 – 1,775rpm
COOLAN TEMP/S	More than 80°C (176°F)
B/FUEL SCHDL	3 – 12 msec
Selector lever	D position
SYSTEM 1 DIAGNOSIS B B1	PRSENT

EC

Α

NOTE:

- Drive the vehicle at approximately 88 km/h (55MPH) allows easy diagnosis.
- Keep the accelerator pedal as possible during cruising.

Е

D

3. Check "SYSTEM 1 DIAGNOSIS A B1" indication.

<u>Is "CMPLT" displayed?</u>

YES >> GO TO 5.

NO >> GO TO 2.

F

5.perform dtc confirmation procedure- $_3$

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to <u>EC-327</u>, "<u>Diagnosis Procedure</u>".

NO >> INSPECTION END

Н

6.PERFORM DTC CONFIRMATION PROCEDURE-4

⊗Without CONSULT

- 1. Start the engine and warm it up to normal operating temperature.
- 2. Drive vehicle under the following conditions for at least 5 consecutive seconds.

CAUTION:

Always drive vehicle at a safe speed.

- 1
J

Engine speed	1,600 – 1,775 rpm
Calculated load value	21 –58 %
Selector lever	D position

LZ.

Р

NOTE:

- Drive the vehicle at approximately 88 km/h (55MPH) allows easy diagnosis.
- Keep the accelerator pedal as possible during cruising.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to <u>EC-327</u>, "<u>Diagnosis Procedure</u>".

NO >> INSPECTION END

.....N

INFOID:0000000008450818

Diagnosis Procedure

1. CHECK FOR INTAKE AIR LEAK

- 1. Stop engine and check the following for connection.
- Air duct
- Vacuum hoses
- PCV hose
- Intake air passage between air duct to intake manifold
- Start engine and let it idle.
- 3. Listen for an intake air leak after the mass air flow sensor.


Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts.

2. CHECK EXHAUST GAS LEAK

- 1. Stop engine and visually check exhaust tube, three way catalyst and muffler for dents connection.
- 2. Start engine and let it idle.
- Listen for an exhaust gas leak before three way catalyst (manifold).

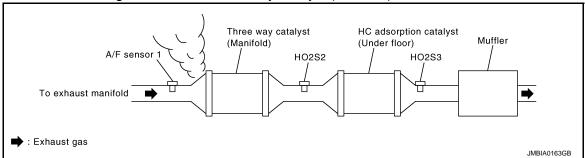

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK FUEL PRESSURE

- Release fuel pressure to zero. Refer to <u>EC-473, "Inspection"</u>.
- 2. Check fuel pressure. Refer to <a>EC-473, "Inspection".

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 9.

4. CHECK MASS AIR FLOW SENSOR

(P)With CONSULT

Check "MASS AIR FLOW" in "DATA MONITOR" mode of "ENGINE" using CONSULT.

For specification, refer to EC-477, "Mass Air Flow Sensor".

Without CONSULT

Check mass air flow sensor signal in Service \$01 using GST.

For specification, refer to EC-477, "Mass Air Flow Sensor".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or grounds. Refer to <u>EC-160</u>, "<u>Diagnosis Procedure</u>".

${f 5.}$ CHECK FUNCTION OF FUEL INJECTOR-1

(I) With CONSULT

- Start engine.
- Perform "POWER BALANCE" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- 3. Check that each circuit produces a momentary engine speed drop.

⊗Without CONSULT


- Let engine idle.
- Listen to each fuel injector operating sound.

Clicking noise should be heard.

Is the inspection result normal?

YES >> GO TO 6. NO >> Perform to

>> Perform trouble diagnosis for fuel injector, refer to <u>EC-411</u>, "Component Function Check".

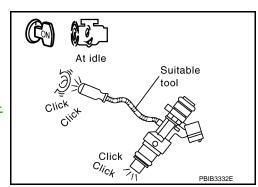

6. CHECK FUNCTION OF FUEL INJECTOR-2


Perform the following procedure in a place with no combustible objects and good ventilation.

- 1. Turn ignition switch OFF.
- Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
- 3. Disconnect all fuel injector harness connectors.
- 4. Remove fuel tube assembly. Refer to EM-37, "Removal and Installation". Keep fuel hose and all fuel injectors connected to fuel tube.
- 5. Disconnect all ignition coil harness connectors.
- 6. Prepare pans or saucers under each fuel injector.
- 7. Crank engine for approximately 3 seconds.
 - Fuel should be sprayed evenly for each fuel injector.
 - Fuel must not drip from the tip of fuel injector.

Is the inspection result normal?

YES >> GO TO 7.

>> Replace fuel injector. Refer to EM-37, "Removal and NO Installation".

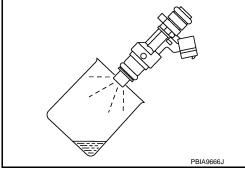

7.CHECK FUNCTION OF IGNITION COIL-1

CAUTION:

Perform the following steps in a well-ventilated area with no combustibles.

- Turn ignition switch OFF.
- Remove fuel pump fuse from IPDM E/R to release fuel pressure.

NOTE:

CONSULT must not be used to release fuel pressure. It develops again during the following steps, if released by using CONSULT.

- 3. Start the engine.
- 4. After an engine stall, crank the engine two or three times to release all the fuel pressure.
- 5. Turn ignition switch OFF.
- 6. Disconnect all the harness connectors of ignition coil to prevent electric discharge from occurring in ignition coil.
- 7. Remove ignition coil assembly and spark plug of cylinder. Refer to EM-42, "Removal and Installation".
- 8. Crank engine for 5 seconds or more to remove combustion gas in the cylinder.
- 9. Connect spark plug and harness connector to ignition coil.
- 10. Allow a 13-17mm (0.52-0.66 in) spacing between spark plug and grounded metal portion as shown in the figure to fix the ignition coil with a rope or an equivalent.
- 11. Crank the engine for approximately 3 seconds to see if sparking occurs between spark plug and the grounded metal portion.

Spark should be generated.

CAUTION:

- The discharge voltage becomes 20 kV or higher. Therefore, always stay away from the spark plug and ignition coil at least 50 cm (19.7 in) during the inspection.
- Leaving a space of more than 17mm (0.66 in) may damage the ignition coil.



When the gap is less than 13 mm (0.52 in), a the spark might be generated even if the coil is malfunctioning.

Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 10.

 $oldsymbol{8}$.CHECK COMPRESSION PRESSURE

13 - 17 mm (0.52-0.66 in) Grounded metal portion (Cylinder head, cylinder block, etc.) JMBIA0066GB

EC-329 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

Н

M

N

P117A AIR FUEL RATIO

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Check compression pressure. Refer to EC-473, "Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-41, "Intermittent Incident".

NO >> Check pistons, piston rings, valves, valve seats and cylinder head gaskets.

9. DETECT MALFUNCTIONING PART

Check fuel hoses and fuel tubes for clogging.

Is the inspection result normal?

YES >> Replace fuel filter and fuel pump assembly. Refer to FL-5, "Removal and Installation".

NO >> Repair or replace error-detected parts.

10. CHECK FUNCTION OF IGNITION COIL-2

- 1. Turn ignition switch OFF.
- 2. Disconnect spark plug and connect a non-malfunctioning spark plug.
- 3. Crank engine for approximately 3 seconds, and recheck whether spark is generated between the spark plug and the grounded metal portion.

Spark should be generated.

Is the inspection result normal?

YES >> GO TO 11.

NO >> Check ignition coil, power transistor and their circuits. Refer to EC-417, "Component Function Check".

11. CHECK SPARK PLUG


Check the initial spark plug for fouling, etc.

Is the inspection result normal?

YES >> 1. Repair or clean spark plug. Refer to <u>EM-17</u>, "Inspection".

2. GO TO 12.

NO >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to EM-42, "Removal and Installation".

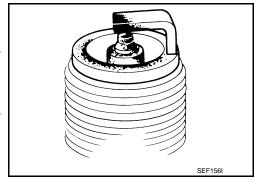

12. CHECK FUNCTION OF IGNITION COIL-3

- 1. Reconnect the initial spark plugs.
- 2. Crank engine for approximately 3 seconds, and recheck whether spark is generated between the spark plug and the grounded portion.

Spark should be generated.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-41, "Intermittent Incident".

NO >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to EM-42, "Removal and Installation".

P1212 TCS COMMUNICATION LINE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P1212 TCS COMMUNICATION LINE

Description INFOID:000000008450819

This CAN communication line is used to control the smooth engine operation during the TCS operation. Pulse signals are exchanged between ECM and "ABS actuator and electric unit (control unit)".

Be sure to erase the malfunction information such as DTC not only for "ABS actuator and electric unit (control unit)" but also for ECM after TCS related repair.

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P1212 is displayed with DTC U1001, first perform the trouble diagnosis for DTC U1001. Refer to <u>EC-138</u>, "<u>DTC Logic"</u>.
- If DTC P1212 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to <u>EC-319</u>, "<u>DTC Logic"</u>.

Freeze frame data is not stored in the ECM for this self-diagnosis.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1212	TCS communication line	ECM can not receive the information from "ABS actuator and electric unit (control unit)" continuously.	Harness or connectors (The CAN communication line is open or shorted.) ABS actuator and electric unit (control unit) Dead (Weak) battery

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for at least 10 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-331, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

Go to GI-37, "Work Flow".

INFOID:0000000008450821

Revision: 2012 August EC-331 2013 CUBE

Α

EC

D

Е

F

N

0

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P1217 ENGINE OVER TEMPERATURE

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P1217 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P1217 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to <u>EC-319</u>, "<u>DTC Logic"</u>.

If the cooling fan or another component in the cooling system malfunctions, engine coolant temperature will rise.

When the engine coolant temperature reaches an abnormally high temperature condition, a malfunction is indicated.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1217	Engine over temperature (Overheat)	 Cooling fan does not operate properly (Overheat). Cooling fan system does not operate properly (Overheat). Engine coolant was not added to the system using the proper filling method. Engine coolant is not within the specified range. 	Harness or connectors (The cooling fan circuit is open or shorted.) IPDM E/R (Cooling fan relay-1) Cooling fan relays-2 and -3 Cooling fan motor Radiator hose Radiator Radiator cap Reservoir tank Water pump Thermostat Water control valve

CAUTION:

When a malfunction is indicated, be sure to replace the coolant. Refer to <u>CO-9</u>, "<u>Draining</u>". Also, replace the engine oil. Refer to <u>LU-8</u>, "<u>Refilling</u>".

- 1. Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute. Be sure to use coolant with the proper mixture ratio. Refer to MA-10, "Anti-Freeze Coolant Mixture Ratio".
- 2. After refilling coolant, run engine to ensure that no water-flow noise is emitted.

DTC CONFIRMATION PROCEDURE

1. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-332, "Component Function Check".

NOTE:

Use component function check to check the overall function of the cooling fan. During this check, a DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-333, "Diagnosis Procedure".

Component Function Check

INFOID:0000000008450823

1.PERFORM COMPONENT FUNCTION CHECK-I

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high pressure fluid escaping from the radiator.

Wrap a thick cloth around cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]


Check the coolant level in the reservoir tank and radiator.

Allow engine to cool before checking coolant level.

Is the coolant level in the reservoir tank and/or radiator below the proper range?

YES >> Go to EC-333, "Diagnosis Procedure".

NO >> GO TO 2.

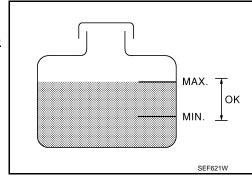

2.PERFORM COMPONENT FUNCTION CHECK-II

Confirm whether customer filled the coolant or not.

Did customer fill the coolant?

YES >> Go to EC-333, "Diagnosis Procedure".

NO >> GO TO 3.

3.perform component function check-iii

(P)With CONSULT

- 1. Turn ignition switch ON.
- Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT.
- 3. Make sure that cooling fan motor operates at each speed (LOW/HI).

Without CONSULT

Perform IPDM E/R auto active test and check cooling fan motor operation. Refer to PCS-11, "Diagnosis Description".

Is the inspection result normal?

YES >> INSPECTION END

>> Go to EC-333, "Diagnosis Procedure". NO

Diagnosis Procedure

1. CHECK COOLING FAN OPERATION

(II) With CONSULT

- 1. Turn ignition switch ON.
- Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT.
- Make sure that cooling fan motor operates at each speed (LOW/HI).

Without CONSULT

- 1. Perform IPDM E/R auto active test and check cooling fan motor operation. Refer to PCS-11, "Diagnosis Description".
- Make sure that cooling fan motor operates at each speed (Low/High).

Is the inspection result normal?

YFS >> GO TO 2.

NO >> Go to EC-407, "Diagnosis Procedure".

2.CHECK COOLING SYSTEM FOR LEAK-I

Check cooling system for leak. Refer to CO-9, "Inspection".

Is leakage detected?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK COOLING SYSTEM FOR LEAK-II

Check the following for leak.

- Hose (Refer to <u>CO-25, "Inspection"</u>.)
- Radiator (Refer to CO-17, "Inspection".)
- Water pump (Refer to <u>CO-20, "Inspection"</u>.)

Α

EC

Е

D

F

INFOID:0000000008450824

K

M

N

2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

>> Repair or replace malfunctioning part.

4. CHECK RADIATOR CAP

Check radiator cap. Refer to CO-13, "RADIATOR CAP: Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace radiator cap. Refer to CO-15, "Exploded View".

5. CHECK THERMOSTAT

Check thermostat. Refer to CO-23, "Inspection".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace thermostat. Refer to CO-22, "Removal and Installation".

6.CHECK WATER CONTROL VALVE

Check water control valve. Refer to CO-26, "Water Control Valve".

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace water control valve. Refer to CO-24, "Exploded View".

7.check engine coolant temperature sensor

Refer to EC-170, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace engine coolant temperature sensor. Refer to <u>CO-24, "Exploded View"</u>.

8. CHECK MAIN 12 CAUSES

If the cause cannot be isolated, check the following.

Engine	Step	Inspection item	Equipment	Standard	Reference page
OFF	1	Blocked radiator Blocked condenser Blocked radiator grille Blocked bumper	Visual	No blocking	_
	2	Coolant mixture	Coolant tester	MA-10, "Anti-Freeze Coo	plant Mixture Ratio"
	3	Coolant level	Visual	Coolant up to MAX level in reservoir tank and radiator filler neck	CO-9, "Inspection"
	4	Radiator cap	Pressure tester	CO-13, "RADIATOR CAP	: Inspection"
ON* ²	5	Coolant leaks	Visual	No leaks	CO-9, "Inspection"
ON* ²	6	Thermostat	Touch the upper and lower radiator hoses	Both hoses should be hot	CO-23, "Inspection"
ON* ¹	7	Cooling fan motor	• CONSULT	Operating	EC-407, "Component Function Check"
OFF	8	Combustion gas leak	Color checker chemi- cal tester 4 Gas ana- lyzer	Negative	_
ON* ³	9	Coolant temperature gauge	Visual	Gauge less than 3/4 when driving	_
		Coolant overflow to reservoir tank	Visual	No overflow during driving and idling	CO-9, "Inspection"
OFF* ⁴	10	Coolant return from reservoir tank to radi- ator	Visual	Should be initial level in reservoir tank	CO-9, "Inspection"

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Engine	Step	Inspection item	Equipment	Standard	Reference page
OFF	11	Cylinder head	Straight gauge feeler gauge	0.1 mm (0.004 in) Maximum distortion (warping)	EM-69, "Disassembly and Assembly"
	12	Cylinder block and pistons	Visual	No scuffing on cylinder walls or piston	EM-98, "Inspection"

^{*1:} Turn the ignition switch ON.

For more information, refer to CO-4, "Troubleshooting Chart".

>> INSPECTION END

EC

Α

D

С

Е

F

G

Н

K

L

M

Ν

0

^{*2:} Engine running at 3,000 rpm for 10 minutes.

^{*3:} Drive at 90 km/h (56 MPH) for 30 minutes and then let idle for 10 minutes.


^{*4:} After 60 minutes of cool down time.

P1225 TP SENSOR

Description INFOID:000000008450825

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometer which transform the throttle valve position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

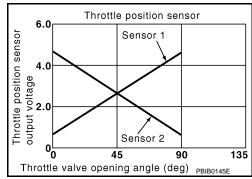

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1225	Closed throttle position learning performance	Closed throttle position learning value is excessively low.	Electric throttle control actuator (TP sensor 1 and 2)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-336, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450827

INFOID:0000000008450826

1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

- Turn ignition switch OFF.
- Remove the intake air duct. Refer to <u>EM-24, "Exploded View"</u>.

P1225 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]


- Check if foreign matter is caught between the throttle valve (1) and the housing.
- Electric throttle control actuator (2)

Is the inspection result normal?

YES >> GO TO 2.

NO

>> Remove the foreign matter and clean the electric throttle control actuator inside, and then perform throttle valve closed position learning. Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

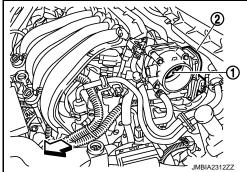

2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

- Replace electric throttle control actuator.
- 2. Perform EC-337, "Special Repair Requirement".

>> INSPECTION END

Special Repair Requirement

1. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 2.

2.perform idle air volume learning

Refer to EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

>> END

EC

Α

Е

D

INFOID:0000000008450828

Н

K

L

M


Ν

P1226 TP SENSOR

Description INFOID:000000008450829

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometer which transform the throttle valve position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

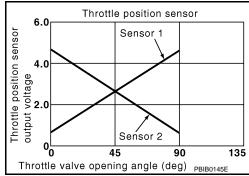

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1226	Closed throttle position learning performance	Closed throttle position learning is not performed successfully, repeatedly.	Electric throttle control actuator (TP sensor 1 and 2)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON.
- 2. Turn ignition switch OFF, wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Repeat steps 2 and 3 for 32 times.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-338, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450831

INFOID:0000000008450830

1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

- 1. Turn ignition switch OFF.
- Remove the intake air duct. Refer to <u>EM-24, "Exploded View"</u>.

P1226 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]


- 3. Check if foreign matter is caught between the throttle valve (1) and the housing.
- Electric throttle control actuator (2)

Is the inspection result normal?

YES >> GO TO 2.

NO

>> Remove the foreign matter and clean the electric throttle control actuator inside, and then perform throttle valve closed position learning. Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

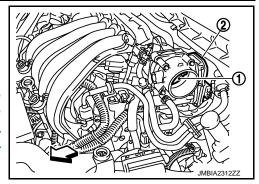

2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

- 1. Replace electric throttle control actuator.
- 2. Perform EC-339, "Special Repair Requirement".

>> INSPECTION END

Special Repair Requirement

1. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 2.

2.PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

>> END

EC

Α

D

Е

INFOID:0000000008450832

Н

Κ

L

M

Ν

0

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P1550 BATTERY CURRENT SENSOR

Description INFOID:000000008450833

The power generation voltage variable control enables fuel consumption to be decreased by reducing the engine load which is caused by the power generation of the generator. The battery current sensor is installed to the battery cable at the negative terminal. The sensor measures the charging/discharging current of the battery. Based on the sensor signal, ECM judges whether or not the power generation voltage variable control is performed. When performing the power generation voltage variable control, ECM calculates the target power generation voltage based on the sensor signal. And ECM sends the calculated value as the power generation command value to IPDM E/R. For the details of the power generation voltage variable control, refer to PCS-66, "System Description".

CAUTION:

Never connect the electrical component or the ground wire directly to the battery terminal. The connection causes the malfunction of the power generation voltage variable control, and then the battery discharge may occur.

DTC Logic (INFOID:0000000008450834

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1550	Battery current sensor circuit range/performance	The output voltage of the battery current sensor remains within the specified range while engine is running.	Harness or connectors (Battery current sensor circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.] (EVAP control system pressure sensor circuit is shorted.) (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) Battery current sensor Crankshaft position sensor (POS) EVAP control system pressure sensor Accelerator pedal position sensor Refrigerant pressure sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and wait at least 10 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-341, "Diagnosis Procedure".

NO >> INSPECTION END

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Diagnosis Procedure

INFOID:0000000008450835

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK BATTERY CURRENT SENSOR POWER SUPPLY CIRCUIT-I

- Disconnect battery current sensor harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between battery current sensor harness connector and ground.

Battery cur	rent sensor	Ground	Voltage	
Connector	Terminal	Glodila	Voltage	
F53	1	Ground	Approx. 5 V	

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 3.

3.CHECK BATTERY CURRENT SENSOR POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery current sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F53	1	F8	71	Existed

Is the inspection result normal?

>> GO TO 4. YES

NO >> Repair open circuit.

f 4.CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

E	СМ	Sensor		
Connector	Terminal	Name	Connector	Terminal
	74	Refrigerant pressure sensor	E49	1
	75	CKP sensor (POS)	F20	1
F8	76	EVAP control system pressure sensor	B21	3
	71	Battery current sensor	F53	1
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair short to ground or short to power in harness or connectors.

5. CHECK COMPONENTS

Check the following.

- Crankshaft position sensor (POS) (Refer to <u>EC-249, "Component Inspection"</u>.)
- EVAP control system pressure sensor (Refer to EC-284, "Component Inspection".)
- Refrigerant pressure sensor (Refer to EC-430, "Diagnosis Procedure".)

EC

Α

D

Е

N

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace malfunctioning components.

6.CHECK APP SENSOR

Refer to EC-390, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11. NO >> GO TO 7.

7. REPLACE ACCELERATOR PEDAL ASSEMBLY

- 1. Replace accelerator pedal assembly.
- 2. Go to EC-390, "Special Repair Requirement".

>> INSPECTION END

8. CHECK BATTERY CURRENT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery current sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F53	2	F8	64	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

9. CHECK BATTERY CURRENT SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery current sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F53	3	F8	57	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

10. CHECK BATTERY CURRENT SENSOR

Refer to EC-342, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace battery negative cable assembly.

11. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008450836

1. CHECK BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >


[MR18DE (EXCEPT FOR CALIFORNIA)]

- 1. Turn ignition switch OFF.
- 2. Reconnect harness connectors disconnected.
- 3. Disconnect battery negative cable.
- 4. Install jumper cable (A) between battery negative terminal and body ground.

1 : Battery negative terminal

: To body ground

- 5. Turn ignition switch ON.
- 6. Check the voltage between ECM harness connector and ground.

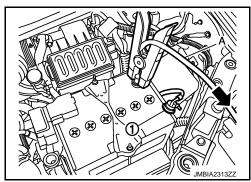

	ECM			
Connector	+	-	Voltage	
Connector	Terminal Terminal			
F8	57 (Battery current sensor signal)	64	Approx. 2.5 V	

Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-3. "How to Handle Battery".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly.

EC

Α

С

D

Е

F

Н

J

Κ

L

M

Ν

0

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P1551, P1552 BATTERY CURRENT SENSOR

Description INFOID:000000008450837

The power generation voltage variable control enables fuel consumption to be decreased by reducing the engine load which is caused by the power generation of the generator. The battery current sensor is installed to the battery cable at the negative terminal. The sensor measures the charging/discharging current of the battery. Based on the sensor signal, ECM judges whether or not the power generation voltage variable control is performed. When performing the power generation voltage variable control, ECM calculates the target power generation voltage based on the sensor signal. And ECM sends the calculated value as the power generation command value to IPDM E/R. For the details of the power generation voltage variable control, refer to PCS-66, "System Description".

CAUTION:

Never connect the electrical component or the ground wire directly to the battery terminal. The connection causes the malfunction of the power generation voltage variable control, and then the battery discharge may occur.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1551	Battery current sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	(Battery current sensor circuit is open
P1552	Battery current sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	or shorted.) [Crankshaft position sensor (POS) circuit is shorted.] (Power steering pressure sensor circuit is shorted.) (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) Battery current sensor Crankshaft position sensor (POS) Power steering pressure sensor Accelerator pedal position sensor Refrigerant pressure sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V with ignition switch ON

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 10 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-345, "Diagnosis Procedure".

NO >> INSPECTION END

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Diagnosis Procedure

INFOID:0000000008450839

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK BATTERY CURRENT SENSOR POWER SUPPLY CIRCUIT-I

- Disconnect battery current sensor harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between battery current sensor harness connector and ground.

Battery cur	rent sensor	Ground	Voltage	
Connector	Terminal	Glound	voltage	
F53	1	Ground	Approx. 5 V	

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 3.

3.CHECK BATTERY CURRENT SENSOR POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cur	Battery current sensor		ECM	
Connector	Terminal	Connector Terminal		Continuity
F53	1	F8	71	Existed

Is the inspection result normal?

>> GO TO 4. YES

NO >> Repair open circuit.

f 4.CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

E	СМ	Sensor		
Connector	Terminal	Name	Connector	Terminal
	74	Refrigerant pressure sensor	E49	1
	75	CKP sensor (POS)	F20	1
F8	76	EVAP control system pressure sensor	B21	3
	71	Battery current sensor	F53	1
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair short to ground or short to power in harness or connectors.

5. CHECK COMPONENTS

Check the following.

- Crankshaft position sensor (POS) (Refer to <u>EC-249, "Component Inspection"</u>.)
- EVAP control system pressure sensor (Refer to EC-284, "Component Inspection".)
- Refrigerant pressure sensor (Refer to EC-430, "Diagnosis Procedure".)

EC

Α

Е

D

N

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace malfunctioning components.

6.CHECK APP SENSOR

Refer to EC-390. "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11. NO >> GO TO 7.

7 REPLACE ACCELERATOR PEDAL ASSEMBLY

- 1. Replace accelerator pedal assembly.
- 2. Go to EC-390, "Special Repair Requirement".

>> INSPECTION END

8.CHECK BATTERY CURRENT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery current sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F53	2	F8	64	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

9.check battery current sensor input signal circuit for open and short

1. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery current sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F53	3	F8	57	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

10. CHECK BATTERY CURRENT SENSOR

Refer to EC-346, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace battery negative cable assembly.

11. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008450840

1. CHECK BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >


[MR18DE (EXCEPT FOR CALIFORNIA)]

- 1. Turn ignition switch OFF.
- 2. Reconnect harness connectors disconnected.
- 3. Disconnect battery negative cable.
- 4. Install jumper cable (Ā) between battery negative terminal and body ground.

1 : Battery negative terminal

: To body ground

- Turn ignition switch ON.
- 6. Check the voltage between ECM harness connector and ground.

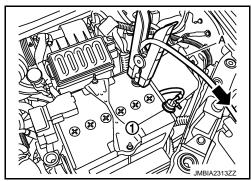

Connector	+	-	Voltage
Connector	Terminal Terminal		
F8	57 (Battery current sensor signal)	64	Approx. 2.5 V

Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-3. "How to Handle Battery".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly.

EC

Α

С

 D

Е

F

Н

Κ

L

M

Ν

0

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P1553 BATTERY CURRENT SENSOR

Description INFOID:0000000008450841

The power generation voltage variable control enables fuel consumption to be decreased by reducing the engine load which is caused by the power generation of the generator. The battery current sensor is installed to the battery cable at the negative terminal. The sensor measures the charging/discharging current of the battery. Based on the sensor signal, ECM judges whether or not the power generation voltage variable control is performed. When performing the power generation voltage variable control, ECM calculates the target power generation voltage based on the sensor signal. And ECM sends the calculated value as the power generation command value to IPDM E/R. For the details of the power generation voltage variable control, refer to PCS-66, "System Description".

CAUTION:

Never connect the electrical component or the ground wire directly to the battery terminal. The connection causes the malfunction of the power generation voltage variable control, and then the battery discharge may occur.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1553	Battery current sensor performance	The signal voltage transmitted from the sensor to ECM is higher than the amount of the maximum power generation.	Harness or connectors (Battery current sensor circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.] (Power steering pressure sensor circuit is shorted.) (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) Battery current sensor Crankshaft position sensor (POS) Power steering pressure sensor Accelerator pedal position sensor Refrigerant pressure sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and wait at least 10 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-349, "Diagnosis Procedure".

NO >> INSPECTION END

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Diagnosis Procedure

INFOID:0000000008450843

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK BATTERY CURRENT SENSOR POWER SUPPLY CIRCUIT-I

- Disconnect battery current sensor harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between battery current sensor harness connector and ground.

Battery cur	rrent sensor	Ground	Voltage
Connector Terminal		Glound	Voltage
F53	1	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 3.

3.CHECK BATTERY CURRENT SENSOR POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cui	Battery current sensor		ECM	
Connector	Terminal	Connector Terminal		Continuity
F53	1	F8	71	Existed

Is the inspection result normal?

>> GO TO 4. YES

NO >> Repair open circuit.

f 4.CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
	74	Refrigerant pressure sensor	E49	1
	75	CKP sensor (POS)	F20	1
F8	76	EVAP control system pressure sensor	B21	3
	71	Battery current sensor	F53	1
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair short to ground or short to power in harness or connectors.

5. CHECK COMPONENTS

Check the following.

- Crankshaft position sensor (POS) (Refer to <u>EC-249, "Component Inspection"</u>.)
- EVAP control system pressure sensor (Refer to EC-284, "Component Inspection".)
- Refrigerant pressure sensor (Refer to EC-430, "Diagnosis Procedure".)

EC

Α

D

Е

N

Р

EC-349 2013 CUBE

Revision: 2012 August

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace malfunctioning components.

6.CHECK APP SENSOR

Refer to EC-390, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11. NO >> GO TO 7.

7.REPLACE ACCELERATOR PEDAL ASSEMBLY

- 1. Replace accelerator pedal assembly.
- 2. Go to EC-390, "Special Repair Requirement".

>> INSPECTION END

8.check battery current sensor ground circuit for open and short

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cui	Battery current sensor		ECM	
Connector	Terminal	Connector Terminal		Continuity
F53	2	F8	64	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

9.CHECK BATTERY CURRENT SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery current sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F53	3	F8	57	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

10. CHECK BATTERY CURRENT SENSOR

Refer to EC-350, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace battery negative cable assembly.

11. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008450844

1. CHECK BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >


[MR18DE (EXCEPT FOR CALIFORNIA)]

- 1. Turn ignition switch OFF.
- 2. Reconnect harness connectors disconnected.
- 3. Disconnect battery negative cable.
- 4. Install jumper cable (Ā) between battery negative terminal and body ground.

1 : Battery negative terminal

: To body ground

- 5. Turn ignition switch ON.
- 6. Check the voltage between ECM harness connector and ground.

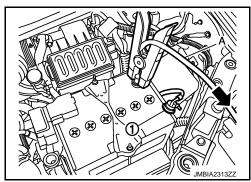

Connector	+	-	Voltage
Connector	Terminal Terminal		
F8	57 (Battery current sensor signal)	64	Approx. 2.5 V

Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-3. "How to Handle Battery".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly.

EC

Α

С

D

Е

0

F

Н

Κ

L

 \mathbb{N}

Ν

0

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P1554 BATTERY CURRENT SENSOR

Description INFOID:000000008450845

The power generation voltage variable control enables fuel consumption to be decreased by reducing the engine load which is caused by the power generation of the generator. The battery current sensor is installed to the battery cable at the negative terminal. The sensor measures the charging/discharging current of the battery. Based on the sensor signal, ECM judges whether or not the power generation voltage variable control is performed. When performing the power generation voltage variable control, ECM calculates the target power generation voltage based on the sensor signal. And ECM sends the calculated value as the power generation command value to IPDM E/R. For the details of the power generation voltage variable control, refer to PCS-66, "System Description".

CAUTION:

Never connect the electrical component or the ground wire directly to the battery terminal. The connection causes the malfunction of the power generation voltage variable control, and then the battery discharge may occur.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1554	Battery current sensor performance	The output voltage of the battery current sensor is lower than the specified value while the battery voltage is high enough.	Harness or connectors (Battery current sensor circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.] (Power steering pressure sensor circuit is shorted.) (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) Battery current sensor Crankshaft position sensor (POS) Power steering pressure sensor Accelerator pedal position sensor Refrigerant pressure sensor

DTC CONFIRMATION PROCEDURE

${f 1}$.PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-352, "Component Function Check".

NOTE:

Use component function check to check the overall function of the battery current sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-353, "Diagnosis Procedure".

Component Function Check

INFOID:0000000008450847

1.PRECONDITIONING

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 12.8 V at idle.
- Before performing the following procedure, confirm that all load switches and A/C switch are turned OFF.

>> GO TO 2.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

2.perform component function check

(P)With CONSULT

1. Start engine and let it idle.

- 2. Select "BAT CUR SEN" in "DATA MONITOR" mode with CONSULT.
- Check "BAT CUR SEN" indication for 10 seconds.

"BAT CUR SEN" should be above 2,300 mV at least once.

♥Without CONSULT

- Start engine and let it idle.
- Check the voltage between ECM harness connector and ground.

Connector	+	-	Voltage
Connector	Terminal Terminal		
F8 (Battery current sensor signal)		64	Above 2.3 V at least once

Is the inspection result normal?

YES >> INSPECTION END

>> Go to EC-353, "Diagnosis Procedure". NO

Diagnosis Procedure

1. CHECK GROUND CONNECTION

Turn ignition switch OFF.

Check ground connection E38. Refer to Ground Inspection in GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK BATTERY CURRENT SENSOR POWER SUPPLY CIRCUIT-I

- Disconnect battery current sensor harness connector.
- Turn ignition switch ON.
- Check the voltage between battery current sensor harness connector and ground.

Battery current sensor		Ground	Voltage
Connector	Terminal	Glound	voltage
F53	1	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 3.

3.check battery current sensor power supply circuit-ii $\,$

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery current sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F53	1	F8	71	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit.

4. CHECK SENSOR POWER SUPPLY CIRCUIT

EC-353 Revision: 2012 August 2013 CUBE

EC

D

Е

F

INFOID:0000000008450848

Ν

Р

Α

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Check harness for short to power and short to ground, between the following terminals.

E	СМ	Sensor		
Connector	Terminal	Name	Connector	Terminal
	74	Refrigerant pressure sensor	E49	1
	75	CKP sensor (POS)	F20	1
F8	76	EVAP control system pressure sensor	B21	3
	71	Battery current sensor	F53	1
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair short to ground or short to power in harness or connectors.

5. CHECK COMPONENTS

Check the following.

- Crankshaft position sensor (POS) (Refer to EC-249, "Component Inspection".)
- EVAP control system pressure sensor (Refer to EC-284, "Component Inspection".)
- Refrigerant pressure sensor (Refer to EC-430, "Diagnosis Procedure".)

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace malfunctioning components.

6.CHECK APP SENSOR

Refer to EC-390, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> GO TO 7.

7. REPLACE ACCELERATOR PEDAL ASSEMBLY

- 1. Replace accelerator pedal assembly.
- 2. Go to EC-390, "Special Repair Requirement".

>> INSPECTION END

8. CHECK BATTERY CURRENT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cur	Battery current sensor		ECM	
Connector	Terminal	Connector	Terminal	Continuity
F53	2	F8	64	Existed

^{4.} Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

9. CHECK BATTERY CURRENT SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between battery current sensor harness connector and ECM harness connector.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Battery current sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F53	3	F8	57	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

>> GO TO 10. YES

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

10. CHECK BATTERY CURRENT SENSOR

Refer to EC-355, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace battery negative cable assembly.

11. CHECK INTERMITTENT INCIDENT


Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

1. CHECK BATTERY CURRENT SENSOR

- Turn ignition switch OFF.
- 2. Reconnect harness connectors disconnected.
- 3. Disconnect battery negative cable.
- 4. Install jumper cable (A) between battery negative terminal and body ground.
 - : Battery negative terminal
 - : To body ground
- Turn ignition switch ON.
- Check the voltage between ECM harness connector and ground.

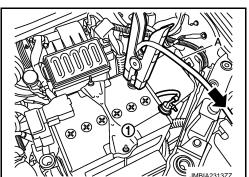

Connector	+	-	Voltage
Connector	Terminal	Terminal	
F8	57 (Battery current sensor signal)	64	Approx. 2.5 V

Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-3, "How to Handle Battery".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly.

Ν

Α

EC

D

Е

INFOID:0000000008450849

P1564 ASCD STEERING SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P1564 ASCD STEERING SWITCH

Description INFOID.000000008450850

ASCD steering switch has variant values of electrical resistance for each button. ECM reads voltage variation of switch, and determines which button is operated.

Refer to EC-70, "System Description" for the ASCD function.

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P1564 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to EC-317, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1564	ASCD steering switch	 An excessively high voltage signal from the ASCD steering switch is sent to ECM. ECM detects that input signal from the ASCD steering switch is out of the specified range. ECM detects that the ASCD steering switch is stuck ON. 	Harness or connectors (The switch circuit is open or shorted.) ASCD steering switch ECM

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON.
- 2. Wait at least 10 seconds.
- 3. Press MAIN switch for at least 10 seconds, then release it and wait at least 10 seconds.
- 4. Press CANCEL switch for at least 10 seconds, then release it and wait at least 10 seconds.
- Press RESUME/ACCELERATE switch for at least 10 seconds, then release it and wait at least 10 seconds.
- 6. Press SET/COAST switch for at least 10 seconds, then release it and wait at least 10 seconds.
- 7. Check DTC.

Is DTC detected?

YES >> Go to EC-356, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450852

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK ASCD STEERING SWITCH CIRCUIT

(P) With CONSULT

1. Turn ignition switch ON.

P1564 ASCD STEERING SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Α

EC

D

Е

K

Ν

- 2. Select "MAIN SW", "CANCEL SW", "RESUME/ACC SW" and "SET SW" in "DATA MONITOR" mode with CONSULT.
- 3. Check each item indication under the following conditions.

Monitor item	Condition	Condition	
MAIN SW	MAIN switch	Pressed	ON
WAIN SW	WAIN SWICH	Released	OFF
CANCEL SW	CANCEL switch	Pressed	ON
CANCEL SW	CANCEL SWILCH	Released	OFF
RESUME/ACC	RESUME/ACCELERATE switch	Pressed	ON
SW	RESOME/ACCELERATE SWIGH	Released	OFF
SET SW	SET/COAST switch	Pressed	ON
3E1 3W	SET/COAST SWILCH	Released	OFF

⋈ Without CONSULT

- 1. Turn ignition switch ON.
- 2. Check the voltage between ECM harness connector terminals.

ECM					
Connector	+	-	Condition	Voltage	
Connector	Terminal Terminal				
				MAIN switch: Pressed	Approx. 0V
		94 ASCD steering 95 switch signal)	CANCEL switch: Pressed	Approx. 1V	
			SET/COAST switch: Pressed	Approx. 2V	
E16	(ASCD steering switch signal)		RESUME/ACCELERATE switch: Pressed	Approx. 3V	
			All ASCD steering switches: Released	Approx. 4V	

Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 3.

${f 3.}$ CHECK ASCD STEERING SWITCH GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Disconnect combination switch harness connector M352.
- 4. Check the continuity between combination switch and ECM harness connector.

Combination switch	E	Continuity	
Terminal	Connector Terminal		
16	E16	95	Existed

5. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M77, E105
- Combination switch (spiral cable)
- · Harness for open and short between ECM and combination switch

Revision: 2012 August EC-357 2013 CUBE

P1564 ASCD STEERING SWITCH

[MR18DE (EXCEPT FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

>> Repair open circuit or short to ground or short to power in harness or connectors.

$5.\mathsf{check}$ ascd steering switch input signal circuit for open and short

1. Check the continuity between ECM harness connector and combination switch.

combination switch	E	Continuity	
Terminal	Connector	Terminal	
13	E16	94	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 6.

6. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M77, E105
- Combination switch (spiral cable)
- Harness for open and short between ECM and combination switch

>> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK ASCD STEERING SWITCH

Refer to EC-358, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace ASCD steering switch. Refer to <u>ST-8</u>, "Exploded View".

8.CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection 1. CHECK ASCD STEERING SWITCH

INFOID:0000000008450853

- 1. Disconnect combination switch (spiral cable) harness connector.
- 2. Check the continuity between combination switch harness connector terminals under following conditions.

Combination switch		Condition	Resistance	
Connector	Terminals	Condition	Resistance	
		MAIN switch: Pressed	Approx. 0 Ω	
M302	13 and 16	CANCEL switch: Pressed	Approx. 250 Ω	
		SET/COAST switch: Pressed	Approx. 660 Ω	
		RESUME/ACCELERATE switch: Pressed	Approx. 1,480 Ω	
		All ASCD steering switches: Re- leased	Approx. 4,000 Ω	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace ASCD steering switch. Refer to <u>ST-8</u>, "Exploded View".

P1572 ASCD BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Α

EC

D

K

M

Ν

Р

P1572 ASCD BRAKE SWITCH

Description INFOID:000000008450854

When the brake pedal is depressed, ASCD brake switch is turned OFF and stop lamp switch is turned ON. ECM detects the state of the brake pedal by this input of two kinds (ON/OFF signal).

Refer to EC-70, "System Description" for the ASCD function.

DTC Logic

DTC DETECTION LOGIC

NOTE:

 If DTC P1572 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to EC-317, "DTC Logic".

 This self-diagnosis has the one trip detection logic. When malfunction A is detected, DTC is not stored in ECM memory. And in that case, 1st trip DTC and 1st trip freeze frame data are displayed.
 1st trip DTC is erased when ignition switch OFF. And even when malfunction A is detected in two consecutive trips, DTC is not stored in ECM memory.

DTC No.	Trouble diagnosis name	DTC detecting condition		Possible cause
		A)	When the vehicle speed is above 30 km/h (19 MPH), ON signals from the stop lamp switch and the ASCD brake switch are sent to the ECM at the same time.	Harness or connectors (The stop lamp switch circuit is shorted.) Harness or connectors (The ASCD brake switch circuit is shorted.)
P1572	ASCD brake switch	B)	ASCD brake switch signal is not sent to ECM for extremely long time while the vehicle is driving.	Harness or connectors (The ASCD clutch switch circuit is shorted.) Stop lamp switch ASCD brake switch ASCD clutch switch Incorrect stop lamp switch installation Incorrect ASCD brake switch installation Incorrect ASCD clutch switch installation ECM

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

NOTE:

Procedure for malfunction B is not described here. It takes extremely long time to complete procedure for malfunction B. By performing procedure for malfunction A, the incident that causes malfunction B can be detected.

>> GO TO 2.

2.perform dtc confirmation procedure for malfunction a

- Start engine.
- 2. Press MAIN switch and make sure that CRUISE indicator is displayed in combination meter.
- 3. Drive the vehicle for at least 5 consecutive seconds under the following conditions.

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

Vehicle speed	More than 30 km/h (19 mph)
Selector lever	Suitable position

4. Check DTC.

P1572 ASCD BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Is DTC detected?

YES >> Go to EC-360, "Diagnosis Procedure".

NO >> GO TO 3.

${f 3.}$ PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B

1. Drive the vehicle for at least 5 consecutive seconds under the following conditions.

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

Vehicle speed	More than 30 km/h (19 mph)	
Selector lever	Suitable position	
Driving location	Depress the brake pedal for more than five seconds so as not to come off from the above-mentioned vehicle speed.	

2. Check DTC.

Is DTC detected?

YES >> Go to EC-360, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450856

1. CHECK OVERALL FUNCTION-I

(P) With CONSULT

- 1. Turn ignition switch ON.
- 2. Select "BRAKE SW1" in "DATA MONITOR" mode with CONSULT.
- 3. Check "BRAKE SW1" indication under the following conditions.

Monitor item	Con	Indication	
BRAKE SW1	Brake pedal (CVT) Brake pedal and clutch pedal (M/T)	Slightly depressed	OFF
		Fully released	ON

⋈ Without CONSULT

- Turn ignition switch ON.
- Check the voltage between ECM harness connector terminals.

ECM					
Connector	+	-	Condition		Voltage
Connector	Terminal	Terminal			
E16 (ASCD brake switch signal)			Brake pedal (CVT) Brake pedal and clutch pedal (M/T)	Slightly de- pressed	Approx. 0V
		Brake pedarand clutch pedar (W/T)	Fully released	Battery voltage	

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK OVERALL FUNCTION-II

(P) With CONSULT

Select "BRAKE SW2" and check indication in "DATA MONITOR" mode with CONSULT.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Monitor item	Condition		Indication
BRAKE SW2	SW2 Brake pedal	Slightly de- pressed	ON
		Fully released	OFF

EC

Α

Without CONSULT

Check the voltage between ECM harness connector terminals.

D

Е

	ECM		Condition		
Connector	+	-			Voltage
Connector	Terminal	Terminal			
E16	99 (Stop lamp	108	Brake pedal	Slightly de- pressed	Battery voltage
	switch signal)			Fully released	Approx. 0V

F

Is the inspection result normal?

YES >> GO TO 16. NO >> GO TO 11.

3.CHECK ASCD BRAKE SWITCH POWER SUPPLY CIRCUIT-I

- Turn ignition switch OFF.
- 2. Disconnect ASCD brake switch harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between ASCD brake switch harness connector and ground.

ASCD brake switch		Ground	Voltage
Connector	Terminal	Glound	voltage
E112	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 9.

NO-1 >> CVT models: GO TO 4. NO-2 >> M/T models: GO TO 5.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E105, M77
- 10 A fuse (No. 2)
- · Harness for open or short between ASCD brake switch and fuse

Ν

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK ASCD CLUTCH SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.

- 2. Disconnect ASCD clutch switch harness connector.
- 3. Turn ignition switch ON.
- Check the voltage between ASCD clutch switch harness connector and ground.

Р

ASCD clu	itch switch	Ground	Voltage	
Connector	Terminal	Glodila	voltage	
E111	3	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 7. >> GO TO 6. NO

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

6. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E105, M77
- 10 A fuse (No. 2)
- · Harness for open or short between ASCD clutch switch and fuse
 - >> Repair open circuit or short to ground or short to power in harness or connectors.

7.CHECK ASCD BRAKE SWITCH POWER SUPPLY CIRCUIT-II

- 1. Turn ignition switch OFF.
- 2. Disconnect ASCD brake switch harness connector.
- Check the continuity between ASCD clutch switch harness connector and ASCD brake switch harness connector.

ASCD clutch switch		ASCD brake switch		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E111	4	E112	1	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

8.check ascd clutch switch

Refer to EC-364, "Component Inspection (ASCD Clutch Switch)".

Is the inspection result normal?

YES >> GO TO 16.

NO >> Replace ASCD clutch switch. Refer to <u>CL-10</u>, "<u>Exploded View</u>".

9.CHECK ASCD BRAKE SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between ASCD brake switch harness connector and ECM harness connector.

ASCD brake switch		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E112	2	E16	100	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

10.CHECK ASCD BRAKE SWITCH

Refer to EC-363, "Component Inspection (ASCD Brake Switch)".

Is the inspection result normal?

YES >> GO TO 16.

NO >> Replace ASCD brake switch. Refer to <u>BR-17</u>, "Exploded View".

11. CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect stop lamp switch harness connector.
- 3. Check the voltage between stop lamp switch harness connector and ground.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Stop lamp	o switch				
Connector	Terminal	Ground	Voltage		
E114 (M/T) E115 (CVT)	1	Ground	Battery voltage		
s the inspection	result normal	?			
YES >> GO NO >> GO					
12. detect M	MALFUNCTION	NING PART			
Check the follow					
 Harness conne 10A fuse (No.9) 		177			
		tween stop lam	p switch and ba	tery	
. Don	oir on on oiroui	t or obort to are	und or abort to r	ower in herness or or	ann actora
`	•	•	•	ower in harness or co FOR OPEN AND SH	
	ECM harness		IGNAL CIRCUII	I ON OF LIN AIND SE	
			ess connector an	d stop lamp switch ha	arness connector.
Connector	M Terminal	Stop lar Connector	np switch Terminal	Continuity	
		E114 (M/T)			
E16	99	E115 (CVT)	2	Existed	
		•	nd short to powe		
Is the inspection		?			
YES >> GO NG >> GO					
14.DETECT M		NING PART			
Check the follow					
		tween ECM an	d stop lamp swit	ch	
Dan					
>> кер 1 5. снеск st	•	•	una or snort to p	ower in harness or co	onnectors.
			p Lamp Switch)'		
Is the inspection			p Lamp Ownerry	•	
YES >> GO	TO 16.				
			to <u>BR-17, "Explo</u>	ded View".	
16.check in					
Refer to <u>GI-41, "</u>	<u>'Intermittent In</u>	<u>cident"</u> .			
>> INS	PECTION ENI)			
Component I	Inspection (ASCD Brak	e Switch)		INFOID:0000000008450857
1.CHECK ASC	D BRAKE SW	ITCH-I			
1. Turn ignition	switch OFF.				
2. Disconnect	ASCD brake s	witch harness of		ls under the following	P.O.

3. Check the continuity between ASCD brake switch terminals under the following conditions.

[MR18DE (EXCEPT FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

Terminals	Condition		Continuity
	Fully released	Existed	
1 and 2	Brake pedal	Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.CHECK ASCD BRAKE SWITCH-II

- 1. Adjust ASCD brake switch installation. Refer to BR-7, "Inspection and Adjustment".
- 2. Check the continuity between ASCD brake switch terminals under the following conditions.

Terminals	Condition		Continuity
		Fully released	Existed
1 and 2	Brake pedal	Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace ASCD brake switch. Refer to <u>BR-17</u>, "Exploded View".

Component Inspection (ASCD Clutch Switch)

INFOID:0000000008450858

1. CHECK ASCD CLUTCH SWITCH-I

- Turn ignition switch OFF.
- 2. Disconnect ASCD clutch switch harness connector.
- 3. Check the continuity between ASCD clutch switch terminals under the following conditions.

Terminals	Condition		Continuity
	Fully released	Existed	
1 and 2	Clutch pedal	Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.CHECK ASCD CLUTCH SWITCH-II

- Adjust ASCD clutch switch installation. Refer to BR-7, "Inspection and Adjustment".
- 2. Check the continuity between ASCD clutch switch terminals under the following conditions.

Terminals	Condition		Continuity
	Fully released	Existed	
1 and 2	Clutch pedal	Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace ASCD clutch switch. Refer to CL-10, "Exploded View".

Component Inspection (Stop Lamp Switch)

INFOID:0000000008450859

1. CHECK STOP LAMP SWITCH-I

- 1. Turn ignition switch OFF.
- Disconnect stop lamp switch harness connector.
- 3. Check the continuity between stop lamp switch terminals under the following conditions.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Terminals	Condition		Continuity
		Fully released	Not existed
1 and 2	Brake pedal	Slightly de- pressed	Existed
s the inspection result normal?			

EC

Α

YES >> INSPECTION END

NO >> GO TO 2.

2.CHECK STOP LAMP SWITCH-II

- 1. Adjust stop lamp switch installation. Refer to BR-7, "Inspection and Adjustment".
- 2. Check the continuity between stop lamp switch terminals under the following conditions.

Terminals	Condition		Continuity
		Fully released	Not existed
1 and 2	Brake pedal	Slightly de- pressed	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace stop lamp switch. Refer to BR-17, "Exploded View".

Е

D

F

Н

K

L

Ν

0

Р

P1574 ASCD VEHICLE SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P1574 ASCD VEHICLE SPEED SENSOR

Description INFOID.000000008450860

The ECM receives two vehicle speed sensor signals via CAN communication line. One is sent from combination meter, and the other is from TCM (Transmission control module). The ECM uses these signals for ASCD control. Refer to EC-70, "System Description" for ASCD functions.

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P1574 is displayed with DTC U1001, first perform the trouble diagnosis for DTC U1001. Refer to EC-138, "DTC Logic".
- If DTC P1574 is displayed with DTC P0500, first perform the trouble diagnosis for DTC P0500. Refer to EC-308, "M/T MODELS: DTC Logic"
- If DTC P1574 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to EC-317, "DTC Logic"
- If DTC P1574 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to <u>EC-319</u>, "<u>DTC Logic"</u>.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1574	ASCD vehicle speed sensor	ECM detects a difference between two vehicle speed signals is out of the specified range.	Harness or connectors (The CAN communication line is open or shorted.) ABS actuator and electric unit (control unit) TCM ECM

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- Start engine.
- Drive the vehicle at more than 40 km/h (25 MPH).

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

3. Check DTC.

Is DTC detected?

YES >> Go to EC-366, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450862

1. CHECK DTC WITH TCM

Check DTC with TCM. Refer to TM-97, "Diagnosis Description".

Is DTC detected?

NO >> GO TO 2.

YES >> Perform trouble shooting relevant to DTC indicated.

P1574 ASCD VEHICLE SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

$\overline{2.}$ CHECK DTC WITH "ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)"

Refer to BRC-23, "CONSULT Function".

Is DTC detected?

NO >> INSPECTION END

YES >> Perform trouble shooting relevant to DTC indicated.

EC

Α

D

Е

F

G

Н

K

L

M

Ν

0

Р

P1715 INPUT SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P1715 INPUT SPEED SENSOR

Description INFOID.000000008450863

ECM receives input shaft revolution signal from TCM via the CAN communication line. ECM uses this signal for engine control.

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P1715 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P1715 is displayed with DTC P0335, first perform the trouble diagnosis for DTC P0335. Refer to <u>EC-246, "DTC Logic"</u>.
- If DTC P1715 is displayed with DTC P0340, first perform the trouble diagnosis for DTC P0340. Refer to EC-250, "DTC Logic".
- If DTC P1715 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to <u>EC-317</u>, "<u>DTC Logic"</u>.
- If DTC P1715 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to <u>EC-319</u>, "<u>DTC Logic"</u>.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1715	Input speed sensor (TCM output)	Input shaft revolution signal is different from the theoretical value calculated by ECM from output shaft revolution signal and engine rpm signal.	Harness or connectors (The CAN communication line is open or shorted) Harness or connectors (Primary speed sensor circuit is open or shorted) TCM

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

Start engine and drive the vehicle at more than 50 km/h (31 MPH) for at least 5 seconds.

Always drive vehicle at a safe speed.

2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-368, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450865

1. CHECK DTC WITH TCM

Check DTC with TCM. Refer to TM-98, "CONSULT Function".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform trouble shooting relevant to DTC indicated.

2.REPLACE TCM

Replace TCM. Refer to TM-227, "Removal and Installation".

P1715 INPUT SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

>> INSPECTION END

Α

EC

С

D

Е

F

G

Н

Κ

L

M

Ν

0

Ρ

P1805 BRAKE SWITCH

Description INFOID:000000008450866

Brake switch signal is applied to the ECM through the stop lamp switch when the brake pedal is depressed. This signal is used mainly to decrease the engine speed when the vehicle is driving.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1805	Brake switch	A brake switch signal is not sent to ECM for extremely long time while the vehicle is driving.	Harness or connectors (Stop lamp switch circuit is open or shorted.) Stop lamp switch

DTC CONFIRMATION PROCEDURE

${f 1}$. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON.
- 2. Fully depress the brake pedal for at least 5 seconds.
- Erase the DTC.
- 4. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-370, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450868

1. CHECK STOP LAMP SWITCH CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Check the stop lamp when depressing and releasing the brake pedal.

Brake pedal	Stop lamp
Fully released	Not illuminated
Slightly de- pressed	Illuminated

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 2.

2.CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect stop lamp switch harness connector.
- 3. Check the voltage between stop lamp switch harness connector and ground.

Stop lamp switch		Ground	Voltage
Connector	Connector Terminal		
E114 (M/T) E115 (CVT)	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

${f 3.}$ DETECT MALFUNCTIONING PART

Check the following.

P1805 BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- Harness connectors E105, M77
- 10 A fuse (No. 9)
- Harness for open or short between stop lamp switch and battery

EC

Е

Н

N

Р

INFOID:0000000008450869

Α

>> Repair open circuit or short to ground or short to power in harness or connectors.

f 4.CHECK STOP LAMP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Disconnect ECM harness connector.
- Check the continuity between ECM harness connector and stop lamp switch harness connector.

E	ECM Stop lamp switch		Continuity	
Connector	Terminal	Connector	Terminal	Continuity
E16	99	E114 (M/T) E115 (CVT)	2	Existed

3. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK STOP LAMP SWITCH

Refer to EC-371, "Component Inspection (Stop Lamp Switch)".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace stop lamp switch. Refer to BR-17, "Exploded View".

6.CHECK INTERMITTENT INCIDENT

Refer to GI-41. "Intermittent Incident".

>> INSPECTION END

Component Inspection (Stop Lamp Switch)

1.CHECK STOP LAMP SWITCH-I

- Turn ignition switch OFF.
- 2. Disconnect stop lamp switch harness connector.
- 3. Check the continuity between stop lamp switch terminals under the following conditions.

Terminals	Condition		Continuity
		Fully released	Not existed
1 and 2	Brake pedal	Slightly de- pressed	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.CHECK STOP LAMP SWITCH-II

- 1. Adjust stop lamp switch installation. Refer to BR-7, "Inspection and Adjustment".
- 2. Check the continuity between stop lamp switch terminals under the following conditions.

Terminals	Condition		Continuity
		Fully released	Not existed
1 and 2	Brake pedal	Slightly de- pressed	Existed

Is the inspection result normal?

P1805 BRAKE SWITCH

[MR18DE (EXCEPT FOR CALIFORNIA)]

YES >> INSPECTION END


NO >> Replace stop lamp switch. Refer to <u>BR-17</u>, "Exploded View".

Description INFOID:0000000008450907


The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element.

The sensor is capable of precise measurement $\lambda = 1$, but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide λ range.

The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich.

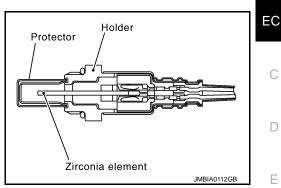

Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of about 800°C (1,472°F).

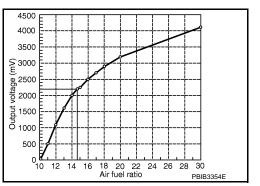

DTC Logic INFOID:0000000008450908

DTC DETECTION LOGIC

To judge the malfunction, the A/F signal computed by ECM from the A/F sensor 1 signal is monitored not to be shifted to LEAN side or RICH side.

DTC No.	CONSULT screen terms (Trouble diagnosis content)	DTC detecting condition	Possible Cause
P2096	POST CAT FUEL TRIM SYS B1 (Post catalyst fuel trim system too lean bank 1)	The output voltage computed by ECM from the A/F sensor 1 signal is shifts to the lean side for a specified period.	A/F sensor 1 A/F sensor 1 heater Heated oxygen sensor 2
P2097	POST CAT FUEL TRIM SYS B1 (Post catalyst fuel trim system too rich bank 1)	The A/F signal computed by ECM from the A/F sensor 1 signal is shifts to the rich side for a specified period.	Fuel pressureFuel injectorIntake air leaksExhaust gas leaks

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- Clear the mixture ratio self-learning value. Refer to EC-26, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for 1 minute under no load.
- Let engine idle for 1 minute.

EC-373 Revision: 2012 August 2013 CUBE

Α

D

K

M

N

Р

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- 5. Keep engine speed between 2,500 and 3,000 rpm for 20 minutes.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-374, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450909

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK HARNESS CONNECTOR

- 1. Disconnect A/F sensor 1 harness connector.
- Check harness connector for water.

Water should not exit.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness connector.

3.RETIGHTEN A/F SENSOR 1 AND HEATED OXYGEN SENSOR 2

1. Loosen and retighten the A/F sensor 1 and heated oxygen sensor 2. Refer to EM-30, "Exploded View" or EX-5, "Exploded View".

>> GO TO 4.

4. CHECK FOR EXHAUST GAS LEAK

- 1. Start engine and run it at idle.
- Listen for an exhaust gas leak before the three way catalyst 2.

Is exhaust gas leak detected?

YES >> Repair or replace malfunctioning parts.

NO >> GO TO 5.

5. CHECK FOR INTAKE AIR LEAK

- Reconnect A/F sensor 1 harness connector.
- Start engine and run it at idle.
- 3. Listen for an intake air leak after the mass air flow sensor.

Is intake air leak detected?

YES >> Repair or replace.

NO >> GO TO 6.

6.CLEAR THE MIXTURE RATIO SELF-LEARNING VALUE

- Clear the mixture ratio self-learning value. Refer to <u>EC-26, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement"</u>.
- Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC P0171 or P0172 detected? Is it difficult to start engine?

YES >> Perform trouble diagnosis for DTC P0171or P0172. Refer to <u>EC-220, "DTC Logic"</u> or <u>EC-224, "DTC Logic"</u>.

NO >> GO TO 7.

7. CHECK A/F SENSOR 1 POWER SUPPLY CIRCUIT

- Disconnect A/F sensor 1 harness connector.
- Turn ignition switch ON.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

3. Check the voltage between A/F sensor 1 harness connector and ground.

A/F sensor 1		Ground	Voltage
Connector	Terminal	Glound	voltage
F50	4	Ground	Battery voltage

EC

Α

Is the inspection result normal?

YES >> GO TO 9. NO >> GO TO 8. С

8. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- IPDM E/R harness connector E15
- 10 A fuse (No. 61)
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

Е

$9.\mathsf{check}$ A/F sensor 1 input signal circuit for open and short

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

A/F ser	nsor 1	ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F50	1	F8	49	Existed
1 30	2	10	53	LAISIGU

Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

A/F ser	nsor 1	Ground	Continuity	
Connector Terminal		Ground	Continuity	
F50	1	Ground	Not existed	
	2	Giodila	Not existed	

EC	IVI	Ground	Continuity	
Connector	Terminal	Ground		
F8	49	Ground	Not existed	
10	53	Ground	NOT EXISTED	

5. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

10.CHECK A/F SENSOR 1 HEATER

Refer to EC-145, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11. NO >> GO TO 13.

11. CHECK HEATED OXYGEN SENSOR 2

Check heated oxygen sensor 2. Refer to EC-198, "Component Inspection".

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Is the inspection result normal?

YES >> GO TO 12.

NO >> Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

12. CHECK INTERMITTENT INCIDENT

Perform GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 13.

NO >> Repair or replace.

13. REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1. Refer to EM-30, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved Anti-seize Lubricant (commercial service tool).

Do you have CONSULT?

YES >> GO TO 14. NO >> GO TO 15.

14.CONFIRM A/F ADJUSTMENT DATA

(P)With CONSULT

- 1. Turn ignition switch ON.
- Select "A/F ADJ-B1" in "DATA MONITOR" mode with CONSULT.
- 3. Make sure that "0.000" is displayed on CONSULT screen.

Is "0.000" displayed?

YES >> INSPECTION END

NO >> GO TO 15.

15. CLEAR THE MIXTURE RATIO SELF-LEARNING VALUE

Clear the mixture ratio self-learning value. Refer to <u>EC-26</u>, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".

Do you have CONSULT?

YES >> GO TO 16.

NO >> INSPECTION END

16.confirm a/f adjustment data

(P)With CONSULT

- 1. Turn ignition switch ON.
- 2. Select "A/F ADJ-B1" in "DATA MONITOR" mode with CONSULT.
- 3. Make sure that "0.000" is displayed on CONSULT screen.

>> INSPECTION END

P2100, P2103 THROTTLE CONTROL MOTOR RELAY

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P2100, P2103 THROTTLE CONTROL MOTOR RELAY

Description INFOID:0000000008450870

Power supply for the throttle control motor is provided to the ECM via throttle control motor relay. The throttle control motor relay is ON/OFF controlled by the ECM. When the ignition switch is turned ON, the ECM sends an ON signal to throttle control motor relay and battery voltage is provided to the ECM. When the ignition switch is turned OFF, the ECM sends an OFF signal to throttle control motor relay and battery voltage is not provided to the ECM.

DTC Logic INFOID:0000000008450871

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2100	Throttle control motor relay circuit open	ECM detects a voltage of power source for throttle control motor is excessively low.	Harness or connectors (Throttle control motor relay circuit is open) Throttle control motor relay
P2103	Throttle control motor relay circuit short	ECM detect the throttle control motor relay is stuck ON.	Harness or connectors (Throttle control motor relay circuit is shorted) Throttle control motor relay

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V.

Witch DTC is detected?

P2100 >> GO TO 2.

P2103 >> GO TO 3.

2.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P2100

- Turn ignition switch ON and wait at least 2 seconds.
- Start engine and let it idle for 5 seconds.
- Check DTC.

Is DTC detected?

YFS >> Go to EC-377, "Diagnosis Procedure".

>> INSPECTION END NO

3.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P2103

- Turn ignition switch ON and wait at least 1 second.
- Check DTC.

Is DTC detected?

YES >> Go to EC-377, "Diagnosis Procedure".

>> INSPECTION END NO

Diagnosis Procedure

${f 1}$.CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT-I

- Turn ignition switch OFF.
- Check the voltage between ECM harness connector and ground.

EC

Α

C

Е

D

Н

K

M

N

INFOID:0000000008450872

P2100, P2103 THROTTLE CONTROL MOTOR RELAY

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

E	CM	Ground	Voltage
Connector	Connector Terminal		voltage
F7	15	Ground	Battery voltage

OK or NG

OK >> GO TO 5.

NG >> GO TO 2.

2.CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT-II

- Disconnect ECM harness connector.
- 2. Disconnect IPDM E/R harness connector.
- 3. Check the continuity between ECM harness connector and IPDM E/R harness connector.

E	CM	IPDM E/R		Continuity
Connector	Terminal	Connector Terminal		Continuity
F7	15	E15	57	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- · Harness connectors E8, F1
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

4.CHECK FUSE

- 1. Disconnect 15 A fuse (No. 64) from IPDM E/R.
- 2. Check 15 A fuse for blown.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace 15 A fuse.

5. CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-I

Check the voltage between ECM harness connector and ground under the following conditions.

E	ECM Connector Terminal		Condition	Voltage	
Connector			Condition		
F7	2	Ground	Ignition switch: OFF	Approximately 0 V	
1 /	2	Giodila	Ignition switch: ON	Battery voltage	

OK or NG

OK >> GO TO 8.

NG >> GO TO 6.

O.CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-II

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Disconnect IPDM E/R harness connector.
- 4. Check the continuity between ECM harness connector and IPDM E/R harness connector.

P2100, P2103 THROTTLE CONTROL MOTOR RELAY

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

	CM	IPDN	I E/R	Continuity		/-
Connector	Terminal	Connector	Terminal	Continuity		
F7	2	E15	54	Existed		E
		ort to ground and	d short to powe	er.		
•	n result normal?	?				
YES >> GO NO >> GO						
	ALFUNCTIONIN	NG PART				
heck the follow						
Harness conn	ectors E8, F1					
Harness for o	pen or short be	tween ECM and	I IPDM E/R			
>> Rei	nair onen circui	t or short to arou	ınd or short to	nower in harnes	s or connectors.	
	ERMITTENT IN			- I I I I I I I I I I I I I I I I I I I	3 3. 33iiii30i0i0i	
	"Intermittent Inc					
	n result normal					
YES >> Re _l	place IPDM E	/R. Refer to Po	CS-33, "Remo	val and Installa	ation" (With I-KEY) or PCS-62,	
		<u>tallation"</u> (Withou harness or conn				
10 <i>>></i> Ke	pair or replace i	namess of com	ectors.			

Revision: 2012 August EC-379 2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P2101 ELECTRIC THROTTLE CONTROL FUNCTION

Description INFOID:000000008450873

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc.

The throttle control motor is operated by the ECM and it opens and closes the throttle valve.

The current opening angle of the throttle valve is detected by the throttle position sensor and it provides feedback to the ECM. ECM controls the throttle valve opening angle in response to driving condition via the throttle control motor.

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P2101 is displayed with DTC P2100, first perform the trouble diagnosis for DTC P2100. Refer to EC-377, "DTC Logic".
- If DTC P2101 is displayed with DTC P2119, first perform the trouble diagnosis for DTC P2119. Refer to <u>EC-386</u>, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2101	Electric throttle control performance	Electric throttle control function does not operate properly.	Harness or connectors (Throttle control motor circuit is open or shorted) Electric throttle control actuator

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V when engine is running.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 2 seconds.
- 2. Start engine and let it idle for 5 seconds.
- 3. Check DTC.

Is DTC detected?

YES >> Go to EC-380, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450875

CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-I

1. Check the voltage between ECM harness connector and ground under the following conditions.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

E	ECM		Condition	Voltago
Connector	Terminal	Ground	Condition	Voltage
F7	2	Ground	Ignition switch: OFF	Approx. 0 V
F1	2	Ground	Ignition switch: ON	Battery voltage

EC

Α

Is the inspection result normal?

YES >> GO TO 9. NO >> GO TO 3.

D

Е

F

 ${f 3.}$ CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Disconnect IPDM E/R harness connector.
- 4. Check the continuity between ECM harness connector and IPDM E/R harness connector.

IPDI	M E/R	ECM Connector Terminal		Continuity	
Connector	Terminal			Continuity	
E15	57	F7	15	Existed	

5. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

5.CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-II

Check the continuity between ECM harness connector and IPDM E/R harness connector.

IPDI	IPDM E/R		ECM	
Connector	Terminal	Connector	Terminal	Continuity
E15	54	F7	2	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 6.

 $\mathsf{6}.\mathsf{DETECT}$ MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

7.CHECK FUSE

- Disconnect 15 A fuse (No. 64) from IPDM E/R.
- Check 15 A fuse for blown.

Is the inspection result normal?

EC-381 Revision: 2012 August 2013 CUBE

K

N

Р

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

YES >> GO TO 8.

NO >> Replace 15 A fuse.

8. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to <u>PCS-33, "Removal and Installation"</u> (With I-KEY) or <u>PCS-62, "Removal and Installation"</u> (Without I-KEY).

NO >> Repair or replace harness or connectors.

9.CHECK THROTTLE CONTROL MOTOR OUTPUT SIGNAL CIRCUIT FOR OPEN OR SHORT

- Turn ignition switch OFF.
- Disconnect electric throttle control actuator harness connector.
- 3. Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

Electric throttle	control actuator	ECM		Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
	F29 6	F7	1	Not existed	
F20			4	Existed	
123			1	Existed	
		0	4	Not existed	

5. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair or replace.

10. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY


- 1. Remove the intake air duct. Refer to EM-24, "Exploded View".
- 2. Check if foreign matter is caught between the throttle valve (1) and the housing.
- Electric throttle control actuator (2)

Is the inspection result normal?

YES >> GO TO 11.

NO >> Remove t

>> Remove the foreign matter and clean the electric throttle control actuator inside, and then perform throttle valve closed position learning. Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

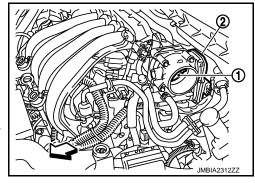

11. CHECK THROTTLE CONTROL MOTOR

Refer to EC-383, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 13.

12. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 13.

Revision: 2012 August

NO >> Repair or replace harness or connectors.

13. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

1. Replace malfunction electric throttle control actuator.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Perform EC-383, "Special Repair Requirement". Α >> INSPECTION END Component Inspection INFOID:0000000008450876 EC 1. CHECK THROTTLE CONTROL MOTOR Turn ignition switch OFF. Disconnect electric throttle control actuator harness connector. Check the resistance between electric throttle control actuator terminals as per the following. D **Terminals** Resistance 5 and 6 Approx. 1 - 15 Ω [at 25°C (77°F)] Е Is the inspection result normal? YES >> INSPECTION END NO >> GO TO 2. F 2.replace electric throttle control actuator Replace electric throttle control actuator. Perform EC-383, "Special Repair Requirement". >> INSPECTION END Special Repair Requirement INFOID:0000000008450877 1. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement". >> GO TO 2. 2.PERFORM IDLE AIR VOLUME LEARNING Refer to EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement". K >> END M Ν Р

P2118 THROTTLE CONTROL MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P2118 THROTTLE CONTROL MOTOR

Description INFOID.000000008450878

The throttle control motor is operated by the ECM and it opens and closes the throttle valve.

The current opening angle of the throttle valve is detected by the throttle position sensor and it provides feedback to the ECM. ECM controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2118	Throttle control motor circuit short	ECM detects short in both circuits between ECM and throttle control motor.	Harness or connectors (Throttle control motor circuit is shorted.) Electric throttle control actuator (Throttle control motor)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 2 seconds.
- 2. Start engine and let it idle for 5 seconds.
- Check DTC.

Is DTC detected?

YES >> Go to EC-384, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450880

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK THROTTLE CONTROL MOTOR OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Disconnect electric throttle control actuator harness connector.
- Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

Electric throttle	control actuator	ECM		Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
	5 F29	5		1	Not existed
E20		- F7	4	Existed	
1 29			1	Existed	
	0		4	Not existed	

P2118 THROTTLE CONTROL MOTOR

<pre></pre>
4. Also check harness for short to ground and short to power.
Is the inspection result normal?
YES >> GO TO 3.
NO >> Repair or replace.
O. CHECK THROTTLE CONTROL WOTOR
Refer to EC-385, "Component Inspection".
Is the inspection result normal?
YES >> GO TO 4. NO >> GO TO 5.
4.CHECK INTERMITTENT INCIDENT
Refer to GI-41, "Intermittent Incident".
Is the inspection result normal?
YES >> GO TO 5.
NO >> Repair or replace harness or connectors.
5. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR
Replace electric throttle control actuator.
2. Perform EC-385, "Special Repair Requirement".
G
>> INSPECTION END
Component Inspection
1. CHECK THROTTLE CONTROL MOTOR
1. Turn ignition switch OFF.
Disconnect electric throttle control actuator harness connector.
3. Check the resistance between electric throttle control actuator terminals as per the following.
Terminals Resistance
5 and 6 Approx. 1 - 15 Ω [at 25°C (77°F)]
Is the inspection result normal?
YES >> INSPECTION END
NO >> GO TO 2.
2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR
Replace electric throttle control actuator.
2. Perform EC-383, "Special Repair Requirement".
>> INSPECTION END
Special Papair Paguiroment
Special Repair Requirement
1.PERFORM THROTTLE VALVE CLOSED POSITION LEARNING
Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".
00.70.0
>> GO TO 2.
2.PERFORM IDLE AIR VOLUME LEARNING
Refer to EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".
END

Revision: 2012 August EC-385 2013 CUBE

>> END

P2119 ELECTRIC THROTTLE CONTROL ACTUATOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

P2119 ELECTRIC THROTTLE CONTROL ACTUATOR

Description INFOID:000000008450883

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc.

The throttle control motor is operated by the ECM and it opens and closes the throttle valve.

The throttle position sensor detects the throttle valve position, and feeds the voltage signal to the ECM. The ECM judges the current opening angle of the throttle valve and controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition		Possible cause
		Α	Electric throttle control actuator does not function properly due to the return spring malfunction.	
P2119	Electric throttle control actuator	В	Throttle valve opening angle in fail-safe mode is not in specified range.	Electric throttle control actuator
		С	ECM detect the throttle valve is stuck open.	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION A AND B

- 1. Turn ignition switch ON and wait at least 1 second.
- 2. Set selector lever to D (CVT) or 1st (M/T) position and wait at least 3 seconds.
- 3. Set selector lever to P (CVT) or Neutral (M/T) position.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- 5. Turn ignition switch ON and wait at least 1 second.
- 6. Set selector lever to D (CVT) or 1st (M/T) position and wait at least 3 seconds.
- 7. Set selector lever to P (CVT) or Neutral (M/T) position.
- Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
- 9. Check DTC.

Is DTC detected?

YES >> Go to EC-386, "Diagnosis Procedure".

NO >> GO TO 3.

${f 3.}$ PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION C

- 1. Turn ignition switch ON and wait at least 1 second.
- 2. Set selector lever to D (CVT) or 1st (M/T) position and wait at least 3 seconds.
- 3. Set selector lever to P (CVT) or Neutral (M/T) position.
- 4. Start engine and let it idle for 3 seconds.
- 5. Check DTC.

Is DTC detected?

YES >> Go to EC-386, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450885

1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

- Turn ignition switch OFF.
- 2. Remove the intake air duct. Refer to <a>EM-24, "Exploded View".

Revision: 2012 August EC-386 2013 CUBE

P2119 ELECTRIC THROTTLE CONTROL ACTUATOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- 3. Check if foreign matter is caught between the throttle valve (1) and the housing.
- Electric throttle control actuator (2)


Is the inspection result normal?

YES

>> GO TO 2.

NO >> R

>> Remove the foreign matter and clean the electric throttle control actuator inside, and then perform throttle valve closed position learning. Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

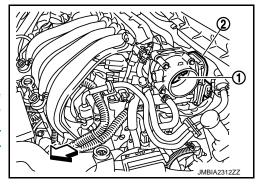

2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

- 1. Replace electric throttle control actuator.
- 2. Perform EC-387, "Special Repair Requirement".

>> INSPECTION END

Special Repair Requirement

1. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 2.

2. PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

>> END

EC

Α

С

Е

D

F

INFOID:0000000008450886

G

Н

I

J

K

L

M

N

0

Р


P2122, P2123 APP SENSOR

Description INFOID:000000008450887

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.

Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometer which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.

Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

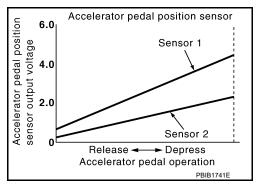

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P2122 or P2123 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to <u>EC-320</u>, "<u>DTC Logic"</u>.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2122	Accelerator pedal position sensor 1 circuit low input	An excessively low voltage from the APP sensor 1 is sent to ECM.	Harness or connectors (APP sensor 1 circuit is open or shorted.)
P2123	Accelerator pedal position sensor 1 circuit high input	An excessively high voltage from the APP sensor 1 is sent to ECM.	Accelerator pedal position sensor (APP sensor 1)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 1 second.
- 2. Check DTC.

Is DTC detected?

YES >> Go to EC-388, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008450889

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK APP SENSOR 1 POWER SUPPLY CIRCUIT

1. Disconnect accelerator pedal position (APP) sensor harness connector.

P2122, P2123 APP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Turn ignition switch ON.

Check the voltage between APP sensor harness connector and ground.

APP sensor		Ground	Voltage	
Connector	Terminal	Giodila	voltage	
E110	4	Ground	Approx. 5 V	

EC

D

Е

F

Н

L

Ν

Α

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

3.CHECK APP SENSOR 1 GROUND CIRCUIT FOR OPEN AND SHORT

Turn ignition switch OFF.

- 2. Disconnect ECM harness connector.
- 3. Check the continuity between APP sensor harness connector and ECM harness connector.

APP	APP sensor		CM	Continuity
Connector	Terminal	Connector	Terminal	Continuity
E110	2	E16	111	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4.CHECK APP SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between APP sensor harness connector and ECM harness connector.

APP	APP sensor		CM	Continuity
Connector	Terminal	Connector	Terminal	Continuity
E110	3	E16	110	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5.CHECK APP SENSOR

Refer to EC-390, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

6.REPLACE ACCELERATOR PEDAL ASSEMBLY

- 1. Replace accelerator pedal assembly.
- 2. Perform EC-390, "Special Repair Requirement".

>> INSPECTION END

.CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

P2122, P2123 APP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Component Inspection

INFOID:0000000008450890

1. CHECK ACCELERATOR PEDAL POSITION SENSOR

- 1. Reconnect all harness connectors disconnected.
- 2. Turn ignition switch ON.
- 3. Check the voltage between ECM harness connector and ground.

ECM		Ground	Condition		Voltage
Connector	Terminal	Glound	Condition		voltage
	110			Fully released	0.6 - 0.9 V
E16	(APP sensor 1 signal)	Ground	Accelerator ped-	Fully depressed	3.9 - 4.7 V
210	103		al	Fully released	0.3 - 0.6 V
	(APP sensor 2 signal)			Fully depressed	1.95 - 2.4 V

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. REPLACE ACCELERATOR PEDAL ASSEMBLY

- Replace accelerator pedal assembly.
- 2. Perform EC-390, "Special Repair Requirement".

>> INSPECTION END

Special Repair Requirement

INFOID:0000000008450891

1.PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

Refer to EC-24, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".

>> GO TO 2.

2. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 3.

3. PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

>> END

Α

EC

D

N

INFOID:0000000008450894


P2127, P2128 APP SENSOR

Description INFOID:0000000008450892

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.

Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometer which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.

Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

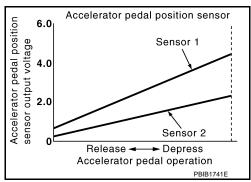

DTC Logic INFOID:0000000008450893

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2127	Accelerator pedal position sensor 2 circuit low input	An excessively low voltage from the APP sensor 2 is sent to ECM.	Harness or connectors (APP sensor 2 circuit is open or shorted.)
P2128	Accelerator pedal position sensor 2 circuit high input	An excessively high voltage from the APP sensor 2 is sent to ECM.	[Crankshaft position sensor (POS) circuit is shorted.] (Refrigerant pressure sensor circuit is shorted.) (EVAP control system pressure sensor circuit is shorted.) (Battery current sensor circuit is shorted.) • Accelerator pedal position sensor (APP sensor 2) • Crankshaft position sensor (POS) • Refrigerant pressure sensor • EVAP control system pressure sensor • Battery current sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for 1 second.
- 2. Check DTC.

Is DTC detected?

YES >> Go to EC-391, "Diagnosis Procedure".

>> INSPECTION END NO

Diagnosis Procedure

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

EC-391 Revision: 2012 August 2013 CUBE

P2127, P2128 APP SENSOR

[MR18DE (EXCEPT FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS > Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-I

- 1. Disconnect accelerator pedal position (APP) sensor harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between APP sensor harness connector and ground.

APP	sensor	Ground	Voltage
Connector	Terminal	Glound	voltage
E110	5	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 3.

3. CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between APP sensor harness connector and ECM harness connector.

APP sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E110	5	E16	102	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
	74	Refrigerant pressure sensor	E17	3
	75	CKP sensor (POS)	F15	1
F8	76	EVAP control system pressure sensor	B104	3
	77	Battery current sensor	F53	1
E16	102	APP sensor	E12	5

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair short to ground or short to power in harness or connectors.

5.CHECK COMPONENTS

Check the following.

- Crankshaft position sensor (POS) (Refer to <u>EC-249, "Component Inspection"</u>.)
- EVAP control system pressure sensor (Refer to EC-284, "Component Inspection".)
- Refrigerant pressure sensor (Refer to EC-430, "Diagnosis Procedure".)

Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace malfunctioning component.

6.CHECK APP SENSOR 2 GROUND CIRCUIT FOR OPEN AND SHORT

1. Turn ignition switch OFF.

P2127, P2128 APP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Disconnect ECM harness connector.

Check the continuity between APP sensor harness connector and ECM harness connector.

APP sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E110	1	E16	104	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 7.

>> Repair open circuit or short to ground or short to power in harness or connectors.

7.CHECK APP SENSOR 2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between APP sensor harness connector and ECM harness connector.

APP	APP sensor		ECM	
Connector	Terminal	Connector Terminal		Continuity
E110	6	E16	103	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

8.CHECK APP SENSOR

Refer to EC-393, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 9.

9. REPLACE ACCELERATOR PEDAL ASSEMBLY

- Replace accelerator pedal assembly.
- Perform EC-394, "Special Repair Requirement".

>> INSPECTION END

10. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

1. CHECK ACCELERATOR PEDAL POSITION SENSOR

- 1. Reconnect all harness connectors disconnected.
- Turn ignition switch ON.
- Check the voltage between ECM harness connector and ground.

E	ECM		Condition		Voltage
Connector Terminal		Ground			
	110	Ground	Accelerator ped-	Fully released	0.6 - 0.9 V
E16	(APP sensor 1 signal)			Fully depressed	3.9 - 4.7 V
210	103			Fully released	0.3 - 0.6 V
	(APP sensor 2 signal)			Fully depressed	1.95 - 2.4 V

EC-393 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

Н

K

M

INFOID:0000000008450895

Ν

Р

P2127, P2128 APP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. REPLACE ACCELERATOR PEDAL ASSEMBLY

- 1. Replace accelerator pedal assembly.
- 2. Perform EC-401, "Special Repair Requirement".

>> INSPECTION END

Special Repair Requirement

INFOID:0000000008450896

1. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

Refer to EC-24, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".

>> GO TO 2.

2. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 3.

3. PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".


>> END

P2135 TP SENSOR

Description INFOID:0000000008450897

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometer which transform the throttle valve position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

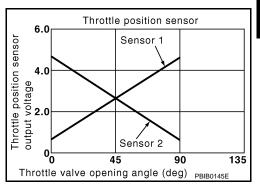

DTC Logic INFOID:0000000008450898

DTC DETECTION LOGIC

NOTE:

If DTC P2135 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-320, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2135	Throttle position sensor circuit range/performance	Rationally incorrect voltage is sent to ECM compared with the signals from TP sensor 1 and TP sensor 2.	Harness or connector (TP sensor 1 or 2 circuit is open or shorted.) Electric throttle control actuator (TP sensor 1 or 2)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for 1 second.
- 2. Check DTC.

Is DTC detected?

YES >> Go to EC-395, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

${f 1}$.CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK THROTTLE POSITION SENSOR POWER SUPPLY CIRCUIT

- 1. Disconnect electric throttle control actuator harness connector.
- Turn ignition switch ON.

EC

Α

Е

Н

N

INFOID:0000000008450899

Р

P2135 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Check the voltage between electric throttle control actuator harness connector and ground.

Electric throttle	control actuator	Ground	Voltage	
Connector	Terminal	Glound		
F29	2	Ground	Approx. 5 V	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

3.CHECK THROTTLE POSITION SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between electric throttle control actuator harness connector and ground.

Electric throttle control actuator		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F29	4	F8	36	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4.CHECK THROTTLE POSITION SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between electric throttle control actuator harness connector and ground.

Electric throttle control actuator		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F29	1	F8	33	Existed
	3	ГО	34	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE POSITION SENSOR

Refer to EC-397, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

6.REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

- 1. Replace electric throttle control actuator.
- 2. Perform EC-397, "Special Repair Requirement".

>> INSPECTION END

7. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

P2135 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Component Inspection

INFOID:0000000008450900

1. CHECK THROTTLE POSITION SENSOR

- Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- Perform EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".
- Turn ignition switch ON.
- 5. Set selector lever to D (CVT) or 1st (M/T) position.
- 6. Check the voltage between ECM harness connector and ground.

E(CM	Ground	Condition		Voltage	
Connector	Terminal	Cround	001	idition	vollage	
	33 (TP sensor			Fully released	More than 0.36V	
F8	1 signal)	Ground Accelerator	Fully de- pressed	Less than 4.75V		
10	34 (TP sensor	Ciouna	pedal	Fully released	Less than 4.75V	
	2 signal)			Fully de- pressed	More than 0.36V	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.replace electric throttle control actuator

- Replace electric throttle control actuator.
- Perform EC-397, "Special Repair Requirement".

>> INSPECTION END

Special Repair Requirement

INFOID:0000000008450901

1. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 2.

2.PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

>> END

EC-397 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

F

Н

K

Ν


P2138 APP SENSOR

Description INFOID:000000008450902

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.

Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometer which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.

Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

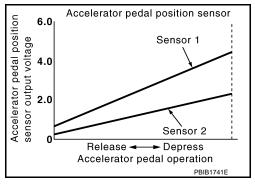

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P2138 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-320, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2138	Accelerator pedal position sensor circuit range/performance	Rationally incorrect voltage is sent to ECM compared with the signals from APP sensor 1 and APP sensor 2.	Harness or connector (APP sensor 1 or 2 circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) (EVAP control system sensor circuit is shorted.) (Battery current sensor circuit is shorted.) Accelerator pedal position sensor (APP sensor 1 or 2) Crankshaft position sensor (POS) Refrigerant pressure sensor EVAP control system pressure sensor Battery current sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 1 second.
- 2. Check DTC.

Is DTC detected?

YES >> Go to EC-399, "Diagnosis Procedure".

NO >> INSPECTION END

P2138 APP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Diagnosis Procedure

INFOID:0000000008450904

Α

EC

D

Е

F

Н

K

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK APP SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Disconnect accelerator pedal position (APP) sensor harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between APP sensor harness connector and ground.

APP :	sensor	Ground	Voltage	
Connector Terminal		Glodila	voltage	
E110	4	Ground	Approx. 5 V	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or shot to power in harness or connectors.

3.CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-I

1. Check the voltage between APP sensor harness connector and ground.

APP :	sensor	Ground	Voltage	
Connector Terminal		Cround	voltage	
E110	5	Ground	Approx. 5 V	

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 4.

4. CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between APP sensor harness connector and ECM harness connector.

APP sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
E110	4	E16	106	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or shot to power in harness or connectors.

${f 5}.$ CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

Ρ

Ν

Revision: 2012 August EC-399

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
	74	Refrigerant pressure sensor	E17	3
	75	CKP sensor (POS)	F15	1
F8	76	EVAP control system pressure sensor	B104	3
	77	Battery current sensor	F53	1
E16	102	APP sensor	E12	5

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair short to ground or short to power in harness or connectors.

6. CHECK COMPONENTS

Check the following.

- Crankshaft position sensor (POS) (Refer to EC-249. "Component Inspection".)
- EVAP control system pressure sensor (Refer to EC-284, "Component Inspection".)
- Refrigerant pressure sensor (Refer to EC-430, "Diagnosis Procedure".)

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace malfunctioning component.

7.CHECK APP SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between APP sensor harness connector and ECM harness connector as per the following.

APP :	sensor	ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
E110	2	E16	111	Existed
LIIO	1	LIO	104	LXISIEU

^{4.} Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit or short to ground or shot to power in harness or connectors.

8.CHECK APP SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between APP sensor harness connector and ECM harness connector as per the following.

APP	sensor	ECM		Continuity	
Connector	Terminal	Connector Terminal		Continuity	
E110	3	E16	110	Existed	
LIIU	6	L 10	103	LAISIEU	

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit or short to ground or shot to power in harness or connectors.

9.CHECK APP SENSOR

Refer to EC-401, "Component Inspection".

Is the inspection result normal?

P2138 APP SENSOR

[MR18DE (EXCEPT FOR CALIFORNIA)] < DTC/CIRCUIT DIAGNOSIS > YES >> GO TO 11. NO >> GO TO 10. Α 10.replace accelerator pedal assembly Replace accelerator pedal assembly. EC Perform EC-401, "Special Repair Requirement". 2. >> INSPECTION END 11. CHECK INTERMITTENT INCIDENT Refer to GI-41, "Intermittent Incident". D >> INSPECTION END Component Inspection Е INFOID:0000000008450905 1. CHECK ACCELERATOR PEDAL POSITION SENSOR Reconnect all harness connectors disconnected. 2. Turn ignition switch ON. Check the voltage between ECM harness connector and ground. **ECM** Condition Ground Voltage Terminal Connector Н 110 0.6 - 0.9 V Fully released (APP sensor 1 Fully depressed 3.9 - 4.7 V signal) Accelerator ped-E16 Ground 103 Fully released 0.3 - 0.6 V (APP sensor 2 Fully depressed 1.95 - 2.4 V signal) Is the inspection result normal? YES >> INSPECTION END NO >> GO TO 2. 2.replace accelerator pedal assembly K Replace accelerator pedal assembly. Perform EC-401, "Special Repair Requirement". >> INSPECTION END Special Repair Requirement INFOID:0000000008450906 $oldsymbol{1}$. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING Ν

Refer to EC-24, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".

Р

>> GO TO 2.

2 . PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-24, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 3.

3.PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-25, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

>> END

Description INFOID:000000008450910

When the brake pedal is depressed, ASCD brake switch is turned OFF and stop lamp switch is turned ON. ECM detects the state of the brake pedal by this input of two kinds (ON/OFF signal). Refer to <u>EC-70</u>, "System <u>Description"</u> for the ASCD function.

Component Function Check

INFOID:0000000008450911

1. CHECK FOR ASCD BRAKE SWITCH FUNCTION

(II) With CONSULT

- Turn ignition switch ON.
- Select "BRAKE SW1" in "DATA MONITOR" mode with CONSULT.
- 3. Check "BRAKE SW1" indication under the following conditions.

Monitor item	Condition	Indication	
BRAKE SW1	Brake pedal (CVT) Brake pedal and clutch pedal (M/T)	Slightly de- pressed	OFF
Brake pedal and clutch pedal (IW/T)		Fully released	ON

Without CONSULT

- Turn ignition switch ON.
- 2. Check the voltage between ECM harness connector terminals.

	ECM				
Connector	+	-	Condition		Voltage
Connector	Terminal	Terminal			
E16	100 (ASCD brake	108	Brake pedal (CVT) Brake pedal and clutch pedal (M/T)	Slightly de- pressed	Approx. 0 V
	switch signal)		Brake pedal and clutch pedal (W/T)	Fully released	Battery voltage

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-402, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008450912

1. CHECK ASCD BRAKE SWITCH POWER SUPPLY CIRCUIT-I

- Turn ignition switch OFF.
- Disconnect ASCD brake switch harness connector.
- Turn ignition switch ON.
- Check the voltage between ASCD brake switch harness connector and ground.

ASCD bra	ake switch	Ground	Voltage
Connector	Connector Terminal		vollage
E112	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 7.

NO-1 \Rightarrow CVT models: GO TO 2. NO-2 \Rightarrow M/T models: GO TO 3.

2. DETECT MALFUNCTIONING PART

Check the following.

Harness connectors E105, M77

>> Repair open circuit or short to ground or short to power in harness or connectors.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- 10 A fuse (No. 2)
- · Harness for open or short between ASCD brake switch and fuse

3. CHECK ASCD CLUTCH SWITCH POWER SUPPLY CIRCUIT

EC

D

Е

Α

- 1. Turn ignition switch OFF.
- 2. Disconnect ASCD clutch switch harness connector.
- Turn ignition switch ON.
- 4. Check the voltage between ASCD clutch switch harness connector and ground.

ASCD clu	itch switch	Ground	Voltage
Connector Terminal		Glound	voltage
E111	3	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E105, M77
- 10 A fuse (No. 2)
- · Harness for open or short between ASCD clutch switch and fuse

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK ASCD BRAKE SWITCH POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- Disconnect ASCD brake switch harness connector.
- 3. Check the continuity between ASCD clutch switch harness connector and ASCD brake switch harness connector.

ASCD clu	ıtch switch	ASCD brake switch		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E111	4	E112	1	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

M

N

Р

K

6.CHECK ASCD CLUTCH SWITCH

Refer to EC-404, "Component Inspection (ASCD Clutch Switch)".

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace ASCD clutch switch. Refer to CL-10, "Exploded View".

7.CHECK ASCD BRAKE SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between ASCD brake switch harness connector and ECM harness connector.

ASCD bra	CD brake switch EC		ECM	
Connector	Terminal	Connector	Terminal	Continuity
E112	2	E16	100	Existed

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

8.CHECK ASCD BRAKE SWITCH

Refer to EC-404, "Component Inspection (ASCD Brake Switch)".

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace ASCD brake switch. Refer to <u>BR-17</u>, "Exploded View".

9. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection (ASCD Brake Switch)

INFOID:0000000008450913

1. CHECK ASCD BRAKE SWITCH-I

- Turn ignition switch OFF.
- Disconnect ASCD brake switch harness connector.
- 3. Check the continuity between ASCD brake switch terminals under the following conditions.

Terminals	Condition		Continuity
		Fully released	Existed
1 and 2	Brake pedal	Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. CHECK ASCD BRAKE SWITCH-II

- Adjust ASCD brake switch installation. Refer to <u>BR-7</u>, "Inspection and Adjustment".
- 2. Check the continuity between ASCD brake switch terminals under the following conditions.

Terminals	Condition		Continuity
		Fully released	Existed
1 and 2	Brake pedal	Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace ASCD brake switch. Refer to <u>BR-17</u>, "Exploded View".

Component Inspection (ASCD Clutch Switch)

INFOID:0000000008450914

1. CHECK ASCD CLUTCH SWITCH-I

- 1. Turn ignition switch OFF.
- Disconnect ASCD clutch switch harness connector.
- 3. Check the continuity between ASCD clutch switch terminals under the following conditions.

Terminals	Condition		Continuity
	Fully released	Existed	
1 and 2	Clutch pedal	Slightly de- pressed	Not existed

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. CHECK ASCD CLUTCH SWITCH-II

1. Adjust ASCD clutch switch installation. Refer to BR-7, "Inspection and Adjustment".

2. Check the continuity between ASCD clutch switch terminals under the following conditions.

Terminals	Condition		Continuity
		Fully released	Existed
1 and 2	Clutch pedal	Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace ASCD clutch switch. Refer to <u>CL-10</u>, "Exploded View".

EC

Α

C

D

Е

F

G

Н

K

L

 \mathbb{N}

Ν

0

ASCD INDICATOR

Description INFOID:000000008450915

ASCD indicator lamp illuminates to indicate ASCD operation status. Lamp has two indicators, CRUISE and SET, and is integrated in combination meter.

CRUISE lamp illuminates when MAIN switch on ASCD steering switch is turned ON to indicated that ASCD system is ready for operation.

SET lamp illuminates when following conditions are met.

- CRUISE lamp is illuminated.
- SET/COAST switch on ASCD steering switch is turned ON while vehicle speed is within the range of ASCD setting.

SET lamp remains lit during ASCD control.

Refer to EC-70, "System Description" for the ASCD function.

Component Function Check

INFOID:0000000008450916

1. ASCD INDICATOR FUNCTION

Check ASCD indicator under the following conditions.

ASCD indicator	Cor	Specification	
CRUISE LAMP	Ignition switch: ON	MAIN switch: Pressed at the 1st time →at the 2nd time	$ON \to OFF$
	MAIN switch: ON	ASCD: Operating	ON
SET LAMP	When vehicle speed: Between 40 km/h (25 MPH) and 190 km/h (118 MPH) (For the Middle East), 40 km/h (25 MPH) and 160 km/h (100 MPH) (Except for the Middle East)	ASCD: Not operating	OFF

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-406, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008450917

1. CHECK DTC

Check that DTC U1001 is not displayed.

Is DTC detected?

NO >> GO TO 2

YES >> Perform trouble diagnosis for DTC U1001. Refer to EC-138, "DTC Logic".

2.CHECK COMBINATION METER OPERATION

Refer to MWI-6, "METER SYSTEM: System Description".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check combination meter circuit. Refer to MWI-6, "METER SYSTEM: System Diagram".

3.CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

COOLING FAN

[MR18DE (EXCEPT FOR CALIFORNIA)]

COOLING FAN

Description INFOID:000000008450918

The ECM controls the cooling fan corresponding to the vehicle speed, engine coolant temperature, refrigerant pressure, and air conditioner ON signal. The control system has 3-step control [HIGH/LOW/OFF].

EC

D

Е

F

L

M

Ν

Р

Α

COOLING FAN MOTOR

Models without A/C

The cooling fan operates at each speed when the current flows in the cooling fan motor as per the following.

Cooling fan Speed	Cooling fan motor terminals			
Cooling lan Speed	(+)	(-)		
	1	3 and 4		
Low (LOW)	2	3 and 4		
	1 and 2	3		
	1 and 2	4		
High (HI)	1 and 2	3 and 4		

Models with A/C

The cooling fan operates at high (HI) speed when the current flows, and operates at low (LOW) speed when cooling fan motor and the resistor are circuited in series.

Component Function Check

INFOID:0000000008450919

1. CHECK COOLING FAN FUNCTION

(II) With CONSULT

- 1. Turn ignition switch ON.
- Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT.
- 3. Touch "LOW" and "Hi" on the CONSULT screen.
- 4. Check that cooling fan operates at each speed.

Without CONSULT

- 1. Perform IPDM E/R auto active test and check cooling fan motor operation. Refer to <u>PCS-11, "Diagnosis Description"</u>.
- 2. Check that cooling fan operates at each speed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Refer to <u>EC-407</u>, "<u>Diagnosis Procedure</u>".

Diagnosis Procedure

INFOID:0000000008450920

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E21. Refer to Ground Inspection in GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK COOLING FAN MOTOR CIRCUIT

- Disconnect cooling fan motor harness connector.
- Check the continuity between IPDM E/R harness connector and cooling fan motor harness connector.

IPDI	M E/R	Cooling fan motor		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E10	5		1	
LIU	7	E62	2	Existed
E11	10		3	

3. Check the continuity between cooling fan motor harness connector and ground.

Cooling fan motor		Ground	Continuity
Connector	Terminal	Glound	Continuity
E62	4	Ground	Existed

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4. NG >> GO TO 3.

3.DETECT MALFUNCTIONING PART

Check the following.

- Harness for open or short between cooling fan motor and IPDM E/R
- · Harness for open or short between cooling fan motor and ground
 - >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK COOLING FAN MOTOR

Refer to EC-408, "Component Inspection".

OK or NG

OK >> GO TO 5.

NG >> Replace cooling fan motor. Refer to CO-18, "Exploded View".

5. CHECK INTERMITTENT INCIDENT

Perform GI-41, "Intermittent Incident".

OK or NG

OK >> Replace IPDM E/R. Refer to <u>PCS-33</u>, "Removal and Installation" (With I-KEY) or <u>PCS-62</u>, "Removal and Installation" (Without I-KEY).

NG >> Repair or replace harness or connector.

Component Inspection

INFOID:0000000008450921

COOLING FAN MOTOR

- Disconnect cooling fan motor harness connectors.
- 2. Supply cooling fan motor terminals with battery voltage and check operation.

	Speed -	terminals		
		(+)	(–)	
Cooling fan mo- tor	Low	1	4	
		2	3	
	High	1 and 2	3 and 4	

Cooling fan motor should operate.

If NG, replace cooling fan motor. Refer to CO-18, "Exploded View".

ELECTRICAL LOAD SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

ELECTRICAL LOAD SIGNAL

Description INFOID:0000000008450922

The electrical load signal (Headlamp switch signal, rear window defogger switch signal, etc.) is transferred via the CAN communication line.

EC

D

Е

F

Н

INFOID:0000000008450923

Α

Component Function Check

1. CHECK REAR WINDOW DEFOGGER SWITCH FUNCTION

- Turn ignition switch ON.
- 2. Connect CONSULT and select "DATA MONITOR" mode.
- Select "LOAD SIGNAL" and check indication under the following conditions.

Monitor item	Condition		Indication
LOAD SIGNAL Rear window defogger switch	Rear window defogger switch	ON	ON
	OFF	OFF	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Go to EC-409, "Diagnosis Procedure".

2.CHECK LIGHTING SWITCH FUNCTION

Check "LOAD SIGNAL" indication under the following conditions.

Monitor item	Condition		Indication
LOAD SIGNAL	ON at 2nd posi- tion		ON
		OFF	OFF

Is the inspection result normal?

YES >> GO TO 3.

NO >> Go to EC-409, "Diagnosis Procedure".

3.CHECK HEATER FAN CONTROL SWITCH FUNCTION

Select "HEATER FAN SW" and check indication under the following conditions.

Monitor item	Condition		Indication
HEATER FAN	Heater fan control switch	ON	ON
SW		OFF	OFF

Is the inspection result normal?

YES >> INSPECTION END

>> Go to EC-409, "Diagnosis Procedure". NO

Diagnosis Procedure

1.INSPECTION START

Confirm the malfunctioning circuit (rear window defogger, headlamp or heater fan). Refer to EC-409, "Component Function Check".

Which circuit is related to the incident?

Rear window defogger>>GO TO 2.

Headlamp>>GO TO 3.

Heater fan>>GO TO 4.

Revision: 2012 August

2.CHECK REAR WINDOW DEFOGGER SYSTEM

Refer to DEF-3, "Work Flow".

EC-409

2013 CUBE

K

N

INFOID:0000000008450924

ELECTRICAL LOAD SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

>> INSPECTION END

3.CHECK HEADLAMP SYSTEM

Refer to EXL-5, "Work Flow".

>> INSPECTION END

4. CHECK HEATER FAN CONTROL SYSTEM


Refer to HA-3, "Work Flow".

>> INSPECTION END

FUEL INJECTOR

Description INFOID:0000000008450925

The fuel injector is a small, precise solenoid valve. When the ECM supplies a ground to the fuel injector circuit, the coil in the fuel injector is energized. The energized coil pulls the ball valve back and allows fuel to flow through the fuel injector into the intake manifold. The amount of fuel injected depends upon the injection pulse duration. Pulse duration is the length of time the fuel injector remains open. The ECM controls the injection pulse duration based on engine fuel needs.

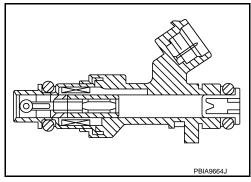

Component Function Check

1.INSPECTION START

Turn ignition switch to START.

Is any cylinder ignited?

YES >> GO TO 2.

NO >> Go to EC-411, "Diagnosis Procedure".

2.CHECK FUEL INJECTOR FUNCTION

(P)With CONSULT

- Start engine.
- Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.
- Make sure that each circuit produces a momentary engine speed drop.

Without CONSULT


- 1. Let engine idle.
- Listen to each fuel injector operating sound.

Clicking noise should be heard.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-411, "Diagnosis Procedure".

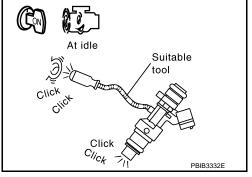

Diagnosis Procedure

1. CHECK FUEL INJECTOR POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect fuel injector harness connector.
- Turn ignition switch ON.
- Check the voltage between fuel injector harness connector and ground.

EC

Α

Е

F

D

INFOID:0000000008450926

Р

Ν

INFOID:0000000008450927

Fuel injector		Ground	Voltage
Connector	Terminal	Glound	voltage
F37	1		
F38	1	Ground	Battery voltage
F39	1	Glound	
F40	1		
	Connector F37 F38 F39	Connector Terminal F37 1 F38 1 F39 1	Connector Terminal F37 1 F38 1 F39 1 Ground

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

2.DETECT MALFUNCTIONING PART

Check the following.

- IPDM E/R harness connector E15
- 15 A fuse (No. 62)
- Harness for open or short between fuel injector and fuse

>> Repair open circuit or short to ground or short to power in harness or connectors.

3.check fuel injector output signal circuit for open and short

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between fuel injector harness connector and ECM harness connector.

Fuel injector		E	Continuity		
Cylinder	Connector	Terminal	Connector	Terminal	Continuity
1	F37	2		31	
2	F38	2	F7	30	Existed
3	F39	2	Г	29	Existed
4	F40	2		25	

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK FUEL INJECTOR

Refer to EC-412, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace malfunctioning fuel injector. Refer to EM-37, "Exploded View".

5. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to <u>PCS-33, "Removal and Installation"</u> (With I-KEY) or <u>PCS-62, "Removal and Installation"</u> (Without I-KEY).

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

Component Inspection

INFOID:0000000008450928

1. CHECK FUEL INJECTOR

- 1. Turn ignition switch OFF.
- Disconnect fuel injector harness connector.

FUEL INJECTOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

3. Check resistance between fuel injector terminals as per the following.

Terminals	Resistance
1 and 2	11.1 - 14.5 Ω [at 10 - 60°C (50 - 140°F)]

Is the	inspection	result	normal?
10 1110	HIODOCHIOH	1 COUIT	Hommun.

YES >> INSPECTION END

NO >> Replace malfunctioning fuel injector. Refer to EM-37, "Exploded View".

EC

Α

D

Е

F

G

Н

J

Κ

L

M

Ν

0

FUEL PUMP

Description INFOID:000000008450929

Sensor	Input signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*	Fuel pump control	Fuel pump relay ↓
Battery	Battery voltage*		Fuel pump

^{*:} ECM determines the start signal status by the signals of engine speed and battery voltage.

The ECM activates the fuel pump for several seconds after the ignition switch is turned ON to improve engine start ability. If the ECM receives a engine speed signal from the camshaft position sensor (PHASE), it knows that the engine is rotating, and causes the pump to operate. If the engine speed signal is not received when the ignition switch is ON, the engine stalls. The ECM stops pump operation and prevents battery discharging, thereby improving safety. The ECM does not directly drive the fuel pump. It controls the ON/OFF fuel pump relay, which in turn controls the fuel pump.

Condition	Fuel pump operation	
Ignition switch is turned to ON.	Operates for 1 second.	
Engine running and cranking	Operates.	
When engine is stopped	Stops in 1.5 seconds.	
Except as shown above	Stops.	

Component Function Check

INFOID:0000000008450930

1.CHECK FUEL PUMP FUNCTION


- 1. Turn ignition switch ON.
- Pinch fuel feed hose (1) with two fingers.

Fuel pressure pulsation should be felt on the fuel feed hose for 1 second after ignition switch is turned ON.

Is the inspection result normal?

YES >> INSPECTION END

NO >> EC-414, "Diagnosis Procedure".

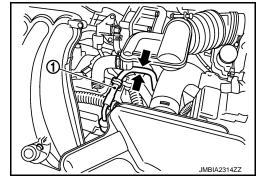

INFOID:0000000008450931

Diagnosis Procedure

1. CHECK FUEL PUMP POWER SUPPLY CIRCUIT-I

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between ECM harness connector and ground.

E	CM	Ground	Voltage
Connector	Connector Terminal		vollage
F7	23	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 2.

2.CHECK FUEL PUMP POWER SUPPLY CIRCUIT-II

FUEL PUMP

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Α

EC

D

Е

F

Н

Ν

Р

- 1. Turn ignition switch OFF.
- Disconnect IPDM E/R harness connector E13.
- 3. Turn ignition switch ON.
- 4. Check the voltage between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Voltage
Connector	Terminal		
E13	31	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

3.DETECT MALFUNCTIONING PART

Check the following.

- · Harness or connectors E8, F1
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK FUEL PUMP POWER SUPPLY CIRCUIT-III

- 1. Turn ignition switch OFF.
- Reconnect all harness connectors disconnected.
- 3. Disconnect "fuel level sensor unit and fuel pump" harness connector.
- Turn ignition switch ON.
- 5. Check the voltage between "fuel level sensor unit and fuel pump" harness connector and ground.

Fuel level sensor unit and fuel pump		Ground	Voltage	
Connector	Terminal	Ground	voitage	
B40	1	Ground	Battery voltage should exist 1 second after ignition switch is turn ON.	

Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 5.

5. CHECK FUSE

- 1. Turn ignition switch OFF.
- Disconnect 15 A fuse (No. 60) from IPDM E/R.
- 3. Check 15 A fuse.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace15 A fuse.

6.CHECK FUEL PUMP POWER SUPPLY CIRCUIT-IV

- 1. Disconnect IPDM E/R harness connector E15.
- Check the continuity between IPDM E/R harness connector and "fuel level sensor unit and fuel pump" harness connector.

IPDM E/R		Fuel level sensor unit and fuel pump		Continuity
Connector	Terminal	Connector Terminal		Continuity
E15	55	B40	1	Existed

3. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 7.

7.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B1, M18
- Harness connectors M77, E105
- Harness for open or short between IPDM E/R and "fuel level sensor unit and fuel pump"
 - >> Repair open circuit or short to power in harness or connectors.

8. CHECK FUEL PUMP GROUND CIRCUIT

1. Check the continuity between "fuel level sensor unit and fuel pump" and ground.

Fuel level sensor unit and fuel pump		Ground	Continuity	
Connector	Terminal	Giodila	Continuity	
B40	3	Ground	Existed	

2. Also heck harness for short to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit or short to power in harness or connectors.

9.CHECK FUEL PUMP

Refer to EC-416, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace "fuel level sensor unit and fuel pump". Refer to FL-5, "Exploded View".

10. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to <u>PCS-33, "Removal and Installation"</u> (With I-KEY) or <u>PCS-62, "Removal and Installation"</u> (Without I-KEY).

NO >> Repair or replace harness or connectors.

Component Inspection

INFOID:0000000008450932

1. CHECK FUEL PUMP

- 1. Turn ignition switch OFF.
- 2. Disconnect "fuel level sensor unit and fuel pump" harness connector.
- 3. Check resistance between "fuel level sensor unit and fuel pump" terminals as per the following.

Terminals	Resistance
1 and 3	0.2 - 5.0 Ω [at 25°C (77°F)]

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace "fuel level sensor unit and fuel pump". Refer to FL-5, "Exploded View".

IGNITION SIGNAL

Description INFOID:0000000008450933

The ignition signal from the ECM is sent to and amplified by the power transistor. The power transistor turns ON and OFF the ignition coil primary circuit. This ON/OFF operation induces the proper high voltage in the coil secondary circuit.

EC

D

Е

Ν

INFOID:0000000008450935

INFOID:0000000008450934

Α

Component Function Check

1.INSPECTION START

Turn ignition switch OFF, and restart engine.

Does the engine start?

YES-1 >> With CONSULT: GO TO 2.

YES-2 >> Without CONSULT: GO TO 3.

NO >> Go to EC-417, "Diagnosis Procedure".

2. IGNITION SIGNAL FUNCTION

(P)With CONSULT

- 1. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.
- Make sure that each circuit produces a momentary engine speed drop.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-417, "Diagnosis Procedure".

3.ignition signal function

ECM

Without CONSULT

1. Let engine idle.

Read the voltage signal between ECM harness connector and ground.

d ground.	_		
nal			

,		Ground	Voltage signal
Connector	Terminal	Cround	vollago olgina.
	17		
	18		
F7	21	Ground	
F/	22	Glound	2.0 V/0iv 50 ns/0iv T PBIA9265J

NOTE:

The pulse cycle changes depending on rpm at idle.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-417, "Diagnosis Procedure".

Diagnosis Procedure

1. CHECK IGNITION COIL POWER SUPPLY CIRCUIT-I

- 1. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
- 2. Check the voltage between ECM harness connector and ground.

ECM		Ground	Voltage	
Connector	Terminal	Glodila	voltage	
E16	105	Ground	Battery voltage	

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 2.

NO >> Go to EC-134, "Diagnosis Procedure".

2.CHECK IGNITION COIL POWER SUPPLY CIRCUIT-II

- 1. Turn ignition switch OFF.
- Disconnect Condenser harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between condenser harness connector and ground.

Cond	Condenser		Voltage	
Connector	Terminal	Ground	vollage	
F13	1	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 3.

3.CHECK IGNITION COIL POWER SUPPLY CIRCUIT-III

- 1. Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector E43.
- 3. Check the continuity between IPDM E/R harness connector and condenser harness connector.

IPDM E/R		Condenser		Continuity
Connector	Terminal	Connector Terminal		Continuity
E14	44	F13	1	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> Go to EC-134, "Diagnosis Procedure".

NO >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- IPDM E/R harness connector E43
- · Harness for open or short between IPDM E/R and condenser

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK CONDENSER GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Check the continuity between Condenser harness connector and ground.

Condenser		Ground	Continuity	
Connector	Terminal	Glound	Continuity	
F13	2	Ground	Existed	

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

6.CHECK CONDENSER

Refer to EC-421, "Component Inspection (Condenser)".

Is the inspection result normal?

YES >> GO TO 7.

[MR18DE (EXCEPT FOR CALIFORNIA)]

NO >> Replace condenser.

7.check ignition coil power supply circuit-v

- Reconnect all harness connectors disconnected.
- 2. Disconnect ignition coil harness connector.
- Turn ignition switch ON. 3.
- Check the voltage between ignition coil harness connector and ground.

	Ignition coil			Voltage
Cylinder	Connector	Terminal	Ground	voltage
1	F33	3		
2	F34	3	Ground	Pottory voltogo
3	F35	3	Ground	Battery voltage
4	F36	3		

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

8.CHECK IGNITION COIL GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Check the continuity between ignition coil harness connector and ground.

Ignition coil			Ground	Continuity
Cylinder	Connector	Terminal	Giodila	Continuity
1	F33	2		
2	F34	2	Ground	Existed
3	F35	2	Giound	Existed
4	F36	2		

3. Also check harness for short to power.

Is the inspection result normal?

>> GO TO 9. YES

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

9.CHECK IGNITION COIL OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Disconnect ECM harness connector.
- Check the continuity between ECM harness connector and ignition coil harness connector.

	Ignition coil			ECM		
Cylinder	Connector	Terminal	Connector	Terminal	Continuity	
1	F33	1		17		
2	F34	1	F7	18	Existed	
3	F35	1	Γ/	22	Existed	
4	F36	1		21		

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 10.

>> Repair open circuit or short to ground or short to power in harness or connectors. NO

10.CHECK IGNITION COIL WITH POWER TRANSISTOR

Refer to EC-420, "Component Inspection (Ignition Coil with Power Transistor)".

Is the inspection result normal?

YES >> GO TO 11.

EC-419 Revision: 2012 August 2013 CUBE

EC

Α

Е

F

Н

N

NO >> Replace malfunctioning ignition coil with power transistor. Refer to EM-42, "Exploded View".

11. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection (Ignition Coil with Power Transistor)

INFOID:0000000008450936

1. CHECK IGNITION COIL WITH POWER TRANSISTOR-I

- 1. Turn ignition switch OFF.
- 2. Disconnect ignition coil harness connector.
- 3. Check resistance between ignition coil terminals as per the following.

Terminals	Resistance [Ω at 25°C (77°F)]	
1 and 2	Except 0 or ∞	
1 and 3	Event 0	
2 and 3	Except 0	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace malfunctioning ignition coil with power transistor. Refer to EM-42, "Exploded View".

2.CHECK IGNITION COIL WITH POWER TRANSISTOR-II

CAUTION:

Do the following procedure in the place where ventilation is good without the combustible.

- 1. Turn ignition switch OFF.
- Reconnect all harness connectors disconnected.
- 3. Remove fuel pump fuse in IPDM E/R to release fuel pressure.

NOTE:


Do not use CONSULT to release fuel pressure, or fuel pressure applies again during the following procedure.

- 4. Start engine.
- 5. After engine stalls, crank it two or three times to release all fuel pressure.
- 6. Turn ignition switch OFF.
- 7. Remove all ignition coil harness connectors to avoid the electrical discharge from the ignition coils.
- 8. Remove ignition coil and spark plug of the cylinder to be checked.
- 9. Crank engine for 5 seconds or more to remove combustion gas in the cylinder.
- 10. Connect spark plug and harness connector to ignition coil.
- 11. Fix ignition coil using a rope etc. with gap of 13 17 mm (0.52 0.66 in) between the edge of the spark plug and grounded metal portion as shown in the figure.
- 12. Crank engine for about three seconds, and check whether spark is generated between the spark plug and the grounded metal portion.

Spark should be generated.

CAUTION:

 During the operation, always stay 0.5 cm (19.7 in) away from the spark plug and the ignition coil. Be careful not to get an electrical shock while checking, because the electrical discharge voltage becomes 20 kV or more.

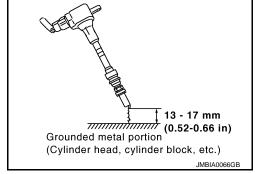

• It might cause to damage the ignition coil if the gap of more than 17 mm (0.66 in) is taken. NOTE:

When the gap is less than 13 mm (0.52 in), the spark might be generated even if the coil is malfunctioning.

Is the inspection result normal?

YES >> INSPECTION END

IGNITION SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

NO >> Replace malfunctioning ignition coil with power transistor. Refer to EM-42, "Exploded View".

Component Inspection (Condenser)

INFOID:0000000008450937

1. CHECK CONDENSER

- 1. Turn ignition switch OFF.
- 2. Disconnect condenser harness connector.
- 3. Check resistance between condenser terminals as per the following.

Terminals	Resistance
1 and 2	Above 1 MΩ [at 25°C (77°F)]

Is the inspection result normal?

YES >> INSPECTION END NO >> Replace Condenser.

EC

Α

Е

 D

F

Н

J

K

L

M

Ν

0

MALFUNCTION INDICATOR LAMP


Description INFOID:000000008450938

The Malfunction Indicator Lamp (MIL) is located on the combination meter.

The MIL will light up when the ignition switch is turned ON without the engine running. This is a bulb check.

When the engine is started, the MIL should go off. If the MIL remains on, the on board diagnostic system has detected an engine system malfunction.

For details, refer to <u>EC-113</u>, "<u>DIAGNOSIS DESCRIPTION</u>: <u>Malfunction Indicator Lamp (MIL)</u>".

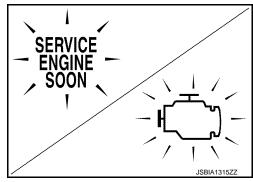

INFOID:0000000008450939

INFOID:0000000008450940

Component Function Check

1. CHECK MIL FUNCTION

- 1. Turn ignition switch ON.
- 2. Make sure that MIL lights up.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-422, "Diagnosis Procedure".

Diagnosis Procedure

1. CHECK DTC

Check that DTC UXXXX is not displayed.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform trouble diagnosis for DTC UXXXX.

2.CHECK DTC WITH METER

Refer to MWI-30, "CONSULT Function (METER/M&A)".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace.

3.CHECK INTERMITTENT INCIDENT


Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace combination meter. Refer to MWI-90, "Removal and Installation".

NO >> Repair or replace.

Description

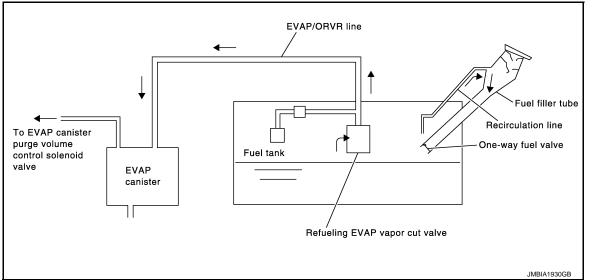

From the beginning of refueling, the air and vapor inside the fuel tank go through refueling EVAP vapor cut valve and EVAP/ORVR line to the EVAP canister. The vapor is absorbed by the EVAP canister and the air is released to the atmosphere.

When the refueling has reached the full level of the fuel tank, the refueling EVAP vapor cut valve is closed and refueling is stopped because of auto shut-off. The vapor which was absorbed by the EVAP canister is purged during driving.

WARNING:

When conducting inspections below, be sure to observe the following:

- Put a "CAUTION: FLAMMABLE" sign in workshop.
- Do not smoke while servicing fuel system. Keep open flames and sparks away from work area.
- Be sure to furnish the workshop with a CO2 fire extinguisher.

CAUTION:

- Before removing fuel line parts, carry out the following procedures:
- Put drained fuel in an explosion-proof container and put lid on securely.
- Release fuel pressure from fuel line. Refer to <u>EC-473</u>, "Inspection".
- Disconnect battery ground cable.
- Always replace O-ring when the fuel gauge retainer is removed.
- Do not kink or twist hose and tube when they are installed.
- Do not tighten hose and clamps excessively to avoid damaging hoses.
- After installation, run engine and check for fuel leaks at connection.
- Do not attempt to top off the fuel tank after the fuel pump nozzle shuts off automatically. Continued refueling may cause fuel overflow, resulting in fuel spray and possibly a fire.

Component Function Check

1. CHECK ORVE FUNCTION

Check whether the following symptoms are present.

- Fuel odor from EVAP canister is strong.
- Cannot refuel/Fuel odor from the fuel filler opening is strong while refueling.

Is any symptom present?

>> Go to EC-423, "Diagnosis Procedure". YES

>> INSPECTION END NO

Diagnosis Procedure

1.INSPECTION START

Check whether the following symptoms are present.

A: Fuel odor from EVAP canister is strong.

EC

Α

INFOID:0000000008450941

INFOID:0000000008450942

N

Revision: 2012 August

INFOID:0000000008450943

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

B: Cannot refuel/Fuel odor from the fuel filler opening is strong while refueling.

Which symptom is present?

- A >> GO TO 2.
- B >> GO TO 8.

2. CHECK EVAP CANISTER

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- Weigh the EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

Is the inspection result normal?

YES >> GO TO 3.


NO >> GO TO 4.

${f 3.}$ CHECK IF EVAP CANISTER IS SATURATED WITH WATER

Check if water will drain from EVAP canister.

Does water drain from the EVAP canister?

YES >> GO TO 4. NO >> GO TO 7.

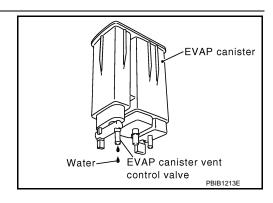

4. REPLACE EVAP CANISTER

Replace EVAP canister with a new one. Refer to FL-14, "Removal and Installation".

>> GO TO 5.

5. CHECK DRAIN FILTER

Refer to EC-428, "Component Inspection (Drain filter)".

Is the inspection result normal?

OK >> GO TO 6.

NO >> Replace drain filter.

6. DETECT MALFUNCTIONING PART

Check the EVAP hose between EVAP canister and vehicle frame for clogging or poor connection.

>> Repair or replace EVAP hose.

7. CHECK REFUELING EVAP VAPOR CUT VALVE

Refer to EC-426, "Component Inspection (Refueling EVAP vapor cut valve)".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace refueling EVAP vapor cut valve with fuel tank.

8. CHECK EVAP CANISTER

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- Weigh the EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

Is the inspection result normal?

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]


YES >> GO TO 9. NO >> GO TO 10.

9.CHECK IF EVAP CANISTER IS SATURATED WITH WATER

Check if water will drain from EVAP canister.

Does water drain from the EVAP canister?

YES >> GO TO 10. NO >> GO TO 13.

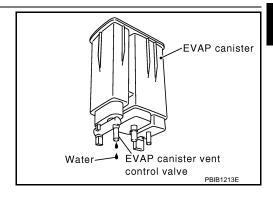

10. REPLACE EVAP CANISTER

Replace EVAP canister with a new one. Refer to FL-14, "Removal and Installation".

>> GO TO 11.

11. CHECK DRAIN FILTER

Refer to EC-428, "Component Inspection (Drain filter)".

Is the inspection result normal?

OK >> GO TO 12.

NO >> Replace drain filter.

12. DETECT MALFUNCTIONING PART

Check the EVAP hose between EVAP canister and vehicle frame for clogging or poor connection.

>> Repair or replace EVAP hose.

13.CHECK VENT HOSES AND VENT TUBES

Check hoses and tubes between EVAP canister and refueling control valve for clogging, kink, looseness and improper connection.

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair or replace hoses and tubes.

14. CHECK RECIRCULATION LINE

Check recirculation line for clogging, dents and cracks.

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace fuel filler tube.

15. CHECK REFUELING EVAP VAPOR CUT VALVE

Refer to EC-426, "Component Inspection (Refueling EVAP vapor cut valve)".

Is the inspection result normal?

YES >> GO TO 16.

NO >> Replace refueling EVAP vapor cut valve with fuel tank.

16. CHECK FUEL FILLER TUBE

Check fuel filler tube and hose connected to the fuel tank for clogging, dents and cracks.

Is the inspection result normal?

YES >> GO TO 17.

NO >> Replace fuel filler tube. EC

Α

D

F

Н

N

Р

2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

17. CHECK ONE-WAY FUEL VALVE-I

Check one-way valve for clogging.

Is the inspection result normal?

YES >> GO TO 18.

NO >> Repair or replace one-way fuel valve with fuel tank.

18. CHECK ONE-WAY FUEL VALVE-II

- 1. Make sure that fuel is drained from the tank.
- Remove fuel filler tube and hose. Refer to <u>FL-5, "Exploded View"</u>.
- Check one-way fuel valve for operation as per the following.
 When a stick is inserted, the valve should open, when removing stick it should close.


Do not drop any material into the tank.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace fuel filler

>> Replace fuel filler tube or replace one-way fuel valve with fuel tank.

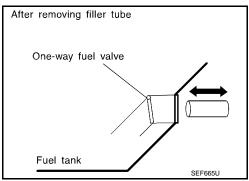

Component Inspection (Refueling EVAP vapor cut valve)

INFOID:0000000008450944

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 3.

2. CHECK REFUELING EVAP VAPOR CUT VALVE

(P)With CONSULT

- 1. Remove fuel tank. Refer to FL-9, "Removal and Installation".
- 2. Drain fuel from the tank as per the following:
- Remove fuel feed hose located on the fuel gauge retainer.
- Connect a spare fuel hose, one side to fuel gauge retainer where the hose was removed and the other side to a fuel container.
- Drain fuel using "FUEL PUMP RELAY" in "ACTIVE TEST" mode with CONSULT.
- 3. Check refueling EVAP vapor cut valve for being stuck to close as per the following.


 Blow air into the refueling EVAP vapor cut valve (from the end of EVAP/ORVR line hose), and check that the air flows freely into the tank.
- 4. Check refueling EVAP vapor cut valve for being stuck to open as per the following.
- Connect vacuum pump to hose end.
- Remove fuel gauge retainer with fuel gauge unit.

Always replace O-ring with new one.

- Put fuel tank upside down.
- Apply vacuum pressure to hose end [-13.3 kPa (-0.136 kg/cm³, -1.93 psi)] with fuel gauge retainer remaining open and check that the pressure is applicable.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

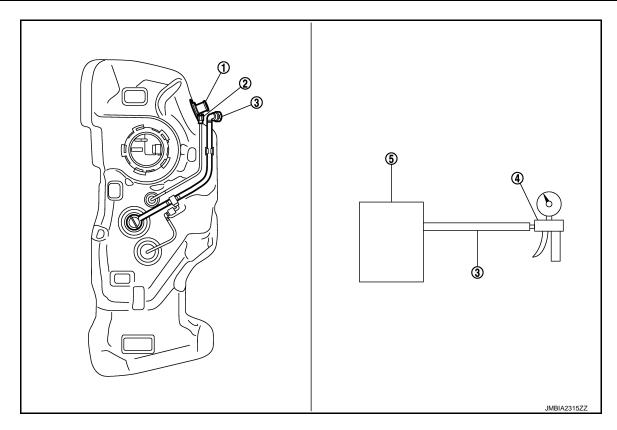

Filler tube

- Recirculation line
- 3. EVAP/ORVR line

- Vacuum/pressure handy pump
- Fuel tank

Is the inspection result normal?

YES >> INSPECTION END

>> Replace refueling EVAP vapor cut valve with fuel tank. NO

3. CHECK REFUELING EVAP VAPOR CUT VALVE

⋈Without CONSULT

- 1. Remove fuel tank. Refer to FL-9, "Removal and Installation".
- Drain fuel from the tank as per the following:
- Remove fuel gauge retainer.
- Drain fuel from the tank using a handy pump into a fuel container.
- Check refueling EVAP vapor cut valve for being stuck to close as per the following. Blow air into the refueling EVAP vapor cut valve (from the end of EVAP/ORVR line hose), and check that the air flows freely into the tank.
- Check refueling EVAP vapor cut valve for being stuck to open as per the following.
- Connect vacuum pump to hose end.
- Remove fuel gauge retainer with fuel gauge unit.

Always replace O-ring with new one.

- Put fuel tank upside down.
- Apply vacuum pressure to hose end [-13.3 kPa (-0.136 kg/cm³, -1.93 psi)] with fuel gauge retainer remaining open and check that the pressure is applicable.

Α


EC

D

Е

Ν

[MR18DE (EXCEPT FOR CALIFORNIA)]

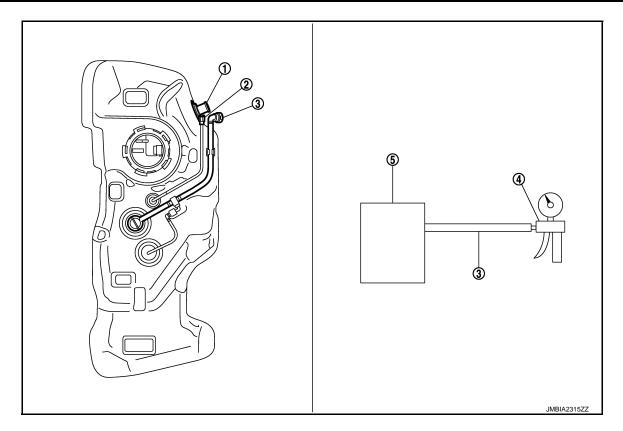

1. Filler tube

- Recirculation line
 Fuel tank
- 4. Vacuum/pressure handy pump

3. EVAP/ORVR line

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace refueling EVAP vapor cut valve with fuel tank.

Component Inspection (Drain filter)

INFOID:0000000008450945


1. CHECK DRAIN FILTER

- 1. Check visually for insect nests in the drain filter air inlet.
- 2. Check visually for cracks or flaws in the appearance.
- 3. Check visually for cracks or flaws in the hose.
- 4. Blow air into port A and check that it flows freely out of port B.
- Block port B.
- 6. Blow air into port A and check that there is no leakage.

Is the inspection result normal?


YES >> INSPECTION END

NO >> Replace drain filter.

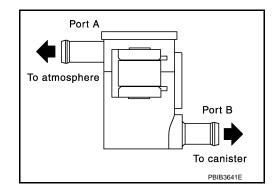

POSITIVE CRANKCASE VENTILATION

Description INFOID:000000008450946

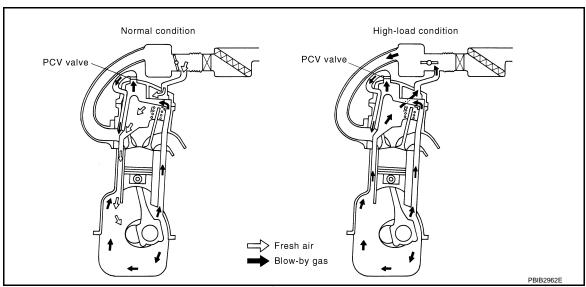

This system returns blow-by gas to the intake manifold.

The positive crankcase ventilation (PCV) valve is provided to conduct crankcase blow-by gas to the intake manifold.


During partial throttle operation of the engine, the intake manifold sucks the blow-by gas through the PCV valve.

Normally, the capacity of the valve is sufficient to handle any blow-by and a small amount of ventilating air.

The ventilating air is drawn from the air inlet tubes into the crankcase. In this process the air passes through the hose connecting air inlet tubes to rocker cover.

Under full-throttle condition, the manifold vacuum is insufficient to draw the blow-by flow through the valve. The flow goes through the hose connection in the reverse direction.

On vehicles with an excessively high blow-by, the valve does not meet the requirement. This is because some of the flow will go through the hose connection to the air inlet tubes under all conditions.

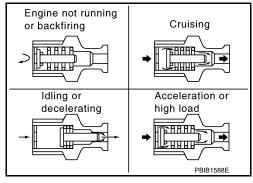

Component Inspection


1. CHECK PCV VALVE

With engine running at idle, remove PCV valve from rocker cover (Refer to <u>EM-42</u>, "<u>Exploded View</u>"). A properly working valve makes a hissing noise as air passes through it. A strong vacuum should be felt immediately when a finger is placed over valve inlet.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace PCV valve. Refer to EM-42, "Exploded View".

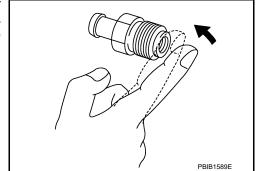

EC

Α

С

D

Е

F

G

Н

J

K

INFOID:0000000008450947

Ν


M

0

REFRIGERANT PRESSURE SENSOR

Description INFOID:000000008450948

The refrigerant pressure sensor is installed at the condenser of the air conditioner system. The sensor uses an electrostatic volume pressure transducer to convert refrigerant pressure to voltage. The voltage signal is sent to ECM, and ECM controls cooling fan system.

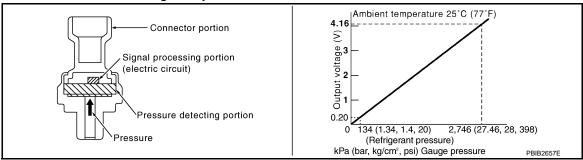

Component Function Check

INFOID:0000000008450949

1. CHECK REFRIGERANT PRESSURE SENSOR OVERALL FUNCTION

- 1. Start engine and warm it up to normal operating temperature.
- Turn A/C switch and blower fan switch ON.
- 3. Check the voltage between ECM harness connector and ground.

ECM		Ground	Voltage
Connector	Terminal	Ground voltage	
F8	41 (Refrigerant pressure sensor signal)	Ground	1.0 - 4.0V

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-430, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008450950

1. CHECK GROUND CONNECTION

- Turn A/C switch and blower fan switch OFF.
- 2. Stop engine.
- Turn ignition switch OFF.
- 4. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK REFRIGERANT PRESSURE SENSOR POWER SUPPLY CIRCUIT

- Disconnect refrigerant pressure sensor harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between refrigerant pressure sensor harness connector and ground.

Refrigerant pressure sensor		Ground	Voltage
Connector	Terminal	Glound	voltage
E49	3	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 4.

REFRIGERANT PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

NO >> GO TO 3.

3.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F1. E8
- Harness for open or short between ECM and refrigerant pressure sensor

EC

Α

>> Repair open circuit or short to ground or short to power in harness or connectors.

f 4.CHECK REFRIGERANT PRESSURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between refrigerant pressure sensor harness connector and ECM harness connector.

Refrigerant pressure sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E49	1	F8	48	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- Harness for open or short between ECM and refrigerant pressure sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

$oldsymbol{6}$.CHECK REFRIGERANT PRESSURE SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between ECM harness connector and refrigerant pressure sensor harness connector.

Refrigerant pressure sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E49	2	F8	41	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

>> GO TO 8. YES

NO >> GO TO 7.

.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- Harness for open or short between ECM and refrigerant pressure sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

>> Replace refrigerant pressure sensor. Refer to HA-40, "REFRIGERANT PRESSURE SENSOR: YES Removal and Installation".

NO >> Repair or replace.

EC-431 2013 CUBE Revision: 2012 August

D

Е

N

ECU DIAGNOSIS INFORMATION

ECM

Reference Value

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

- •Numerical values in the following table are reference values.
- •These values are input/output values that ECM receives/transmits and may differ from actual operations. Example:

The ignition timing shown by the timing light may differ from the ignition timing displayed on the data monitor. This occurs because the timing light shows a value calculated by ECM according to signals received from the cam shaft position sensor and other sensors related to ignition timing.

For outlines of following items, refer to EC-117, "CONSULT Function".

Monitor Item	C	Values/Status	
ENG SPEED	Run engine and compare CONSL	Almost the same speed as the tachometer indication.	
MAS A/F SE-B1	See EC-127, "Diagnosis Procedure"		
B/FUEL SCHDL	See EC-127, "Diagnosis Procedure"		
A/F ALPHA-B1	See EC-127, "Diagnosis Procedure".		
COOLANT TEMP/S	Engine: After warming up		More than 70°C (158F)
A/F SEN1 (B1)	Engine: After warming up	Maintaining engine speed at 2,000 rpm	Fluctuates around 2.2 V
HO2S2 (B1)	Revving engine from idle up to 3,000 rpm quickly after the following conditions are met.		0 - 0.3 V ←→ Approx. 0.6 - 1.0 V
HO2S2 MNTR (B1)	Engine: After warming up After keeping engine speed betwe idle for 1 minute under no load	$LEAN \longleftrightarrow RICH$	
VHCL SPEED SE	Turn drive wheels and compare CONSULT value with the speedometer indication.		Almost the same speed as speedometer indication
BATTERY VOLT	Ignition switch: ON (Engine stopped)		11 - 14 V
ACCEL SEN 1	Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9 V
ACCEL SEN 1		Accelerator pedal: Fully depressed	4.0 - 4.8 V
ACCEL SEN 2*1	Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9 V
		Accelerator pedal: Fully depressed	3.9 - 4.8 V
TP SEN 1-B1	Ignition switch: ON (Engine stopped) Selector lever position: D (CVT) or 1st (M/T)	Accelerator pedal: Fully released	More than 0.36 V
		Accelerator pedal: Fully depressed	Less than 4.75 V
TP SEN 2-B1* ¹	Ignition switch: ON (Engine stopped) Selector lever position: D (CVT) or 1st (M/T)	Accelerator pedal: Fully released	More than 0.36 V
		Accelerator pedal: Fully depressed	Less than 4.75 V
START SIGNAL	• Ignition switch: $ON \rightarrow START \rightarrow ON$		$OFF \to ON \to OFF$
CLSD THL POS	Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	ON
		Accelerator pedal: Slightly depressed	OFF
	Engine: After warming up, idle the engine	Air conditioner switch: OFF	OFF
AIR COND SIG		Air conditioner switch: ON (Compressor operates.)	ON

Monitor Item	С	ondition	Values/Status
P/N POSI SW	Ignition switch: ON	Selector lever position: P or N (CVT) or Neutral (M/T)	ON
		Selector lever position: Except above	OFF
DW/CT CICNAL	Engine: After warming up, idle the	Steering wheel: Not being turned	OFF
PW/ST SIGNAL	engine	Steering wheel: Being turned	ON
LOAD CICNAL	a lonition quitable ON	Rear window defogger switch: ON and/or Lighting switch: 2nd position	ON
LOAD SIGNAL	Ignition switch: ON	Rear window defogger switch and lighting switch: OFF	OFF
IGNITION SW	• Ignition switch: $ON \rightarrow OFF \rightarrow ON$		$ON \to OFF \to ON$
HEATED FAN CVA	Engine: After warming up, idle the	Heater fan switch: ON	ON
HEATER FAN SW	engine	Heater fan switch: OFF	OFF
DDAKE CW	- Inviting positions ON	Brake pedal: Fully released	OFF
BRAKE SW	Ignition switch: ON	Brake pedal: Slightly depressed	ON
	Engine: After warming up	Idle	2.0 - 3.0 msec
INJ PULSE-B1	Selector lever position: P or N (CVT) or Neutral (M/T) Air conditioner switch: OFF No load	2,000 rpm	1.9 - 2.9 msec
	Engine: After warming up	Idle	8 - 18°BTDC
IGN TIMING	 Selector lever position: P or N (CVT) or Neutral (M/T) Air conditioner switch: OFF No load 	2,000 rpm	25 - 45°BTDC
	Engine: After warming up	Idle	10 - 35%
CAL/LD VALUE	Selector lever position: P or N (CVT) or Neutral (M/T) Air conditioner switch: OFF No load	2,500 rpm	10 - 35%
	Engine: After warming up Selector lever position: P or N	Idle	1.0 - 4.0 g/s
MASS AIRFLOW	(CVT) or Neutral (M/T) • Air conditioner switch: OFF • No load	2,500 rpm	2.0 - 10.0 g/s
	Engine: After warming up	Idle	0%
PURG VOL C/V	Selector lever position: P or N (CVT) or Neutral (M/T) Air conditioner switch: OFF No load	2,000 rpm	0 - 50%
	Engine: After warming up	Idle	−5 - 5°CA
INT/V TIM (B1)	Selector lever position: P or N (CVT) or Neutral (M/T) Air conditioner switch: OFF No load	2,000 rpm	Approx. 0 - 40°CA
	Engine: After warming up	Idle	0 - 2%
INT/V SOL (B1)	 Selector lever position: P or N (CVT) or Neutral (M/T) Air conditioner switch: OFF No load 	2,000 rpm	Approx. 0 - 90%
	- Engines Afterware in the state of	Air conditioner switch: OFF	OFF
AIR COND RLY	Engine: After warming up, idle the engine	Air conditioner switch: ON (Compressor operates)	ON
FUEL PUMP RLY	For 1 second after turning ignition Engine running or cranking	switch: ON	ON
	Except above		OFF


Monitor Item	C	Values/Status			
THRTL RELAY	Ignition switch: ON		ON		
		Engine coolant temperature is 98°C (208°F) or less	OFF		
COOLING FAN	 Engine: After warning up, idle the engine Air conditioner switch: OFF 	Engine coolant temperature is between 98°C (208°F) and 99°C (210°F)	LOW		
		Engine coolant temperature is 100°C (212°F) or more	HIGH		
HO2S2 HTR (B1)	- Engine: After warming up	ofter the following conditions are met. en 3,500 and 4,000 rpm for 1 minute and at	ON		
VEHICLE SPEED	Turn drive wheels and compare C cation.	ONSULT value with the speedometer indi-	Almost the same speed as the speedometer indication		
IDL AA/LEADN	- Facility was in a	Idle air volume learning has not been performed yet.	YET		
IDL A/V LEARN	Engine: running	Idle air volume learning has already been performed successfully.	CMPLT		
TRVL AFTER MIL	Ignition switch: ON	Vehicle has traveled after MIL has turned ON.	0 - 65,535 km (0 - 40,723 miles)		
A/F S1 HTR (B1)	Engine: After warming up, idle the (More than 140 seconds after star	4 - 100%			
AC PRESS SEN	Engine: Idle Both A/C switch and blower fan sv	1.0 - 4.0 V			
EVAP SYS PRES	Ignition switch: ON		Approx 1.8 - 4.8 V		
VENT CONT/V	Ignition switch: ON	OFF			
I/P PULLY SPD	Vehicle speed: More than 20 km/h	Almost the same speed as the tachometer indication.			
A/F ADJ-B1	Engine: Running		-0.330 - 0.330		
FUEL T/TMP SE	Ignition switch: ON		Indicates fuel tank temperature.		
INT/A TEMP SE	Ignition switch: ON		Indicates intake air temperature.		
FUEL LEVEL SE	Ignition switch: ON		Depending on fuel level of fuel tank.		
BAT CUR SEN	 Engine speed: Idle Battery: Fuel charged*² Selector lever: P or N (CVT), Neu Air conditioner switch: OFF No load 	Approx 2,600 - 3,500 mV			
ALT DUTY	Engine: Idle		0 - 80%		
ALT DUTY SIG	Power generation voltage variable	e control: Operating	ON		
	Power generation voltage variable	Power generation voltage variable control: Not operating			
VHCL SPEED SE	Turn drive wheels and compare C cation.	ONSULT value with the speedometer indi-	Almost the same speed as the speedometer indication		
SET VHCL SPD	Engine: Running	ASCD: Operating	The preset vehicle speed is displayed.		
MAIN SW	Ignition switch: ON	MAIN switch: pressed	ON		
IVIAIIN OVV	- Igrillori Switch. Orv	MAIN switch: Released	OFF		
CANCEL SW	Ignition switch: ON	CANCEL switch: pressed	ON		
O, HAOLL OVV	Ignition switch. Oil	CANCEL switch: Released	OFF		

Monitor Item	C	Condition			
CET CW	a Ignition outtob. ON	SET/COAST switch: pressed	ON		
SET SW	Ignition switch: ON	SET/COAST switch: Released	OFF		
	a lawiting quitable ON	RESUME/ACCELERATE switch: pressed	ON		
RESUME/ACC SW	Ignition switch: ON	RESUME/ACCELERATE switch: Released	OFF		
BRAKE SW1	a Ignition quitable ON	Brake pedal: Fully released (CVT) Brake pedal and clutch pedal: Fully released (M/T)	ON		
(ASCD brake switch)	Ignition switch: ON	Brake pedal: Slightly depressed (CVT) Brake pedal and/or clutch pedal: Slightly depressed (M/T)	OFF		
BRAKE SW2	Ignition switch: ON	Brake pedal: Fully released	OFF		
(stop lamp switch)	s ignition switch. Oil	Brake pedal: Slightly depressed	ON		
VHCL SPD CUT	Ignition switch: ON		NON		
LO SPEED CUT	Ignition switch: ON		NON		
AT OD MONITOR	Ignition switch: ON		OFF		
AT OD CANCEL	Ignition switch: ON		OFF		
CRUISE LAMP	Ignition switch: ON	MAIN switch: Pressed at the 1st time \rightarrow at the 2nd time	$ON \to OFF$		
	MAIN switch: ON	ASCD: Operating	ON		
SET LAMP	Vehicle speed: Between 40 km/h (25 MPH) and 144 km/h (89 MPH)	ASCD: Not operating	OFF		
THRTL STK CNT B1	NOTE: The item is indicated, but not used.		_		
EVAP LEAK DIAG	Ignition switch: ON		Indicates the condition of EVAP leak diagnosis.		
EVAP DIAG READY	Ignition switch: ON		Indicates the ready condition of EVAP leak diagnosis.		
1100 00 014 04 (04)	DTC P0139 self-diagnosis (delayed	response) is incomplete.	INCMP		
HO2 S2 DIAG1 (B1)	DTC P0139 self-diagnosis (delayed	response) is complete.	CMPLT		
100.00.014.05.75.7	DTC P0139 self-diagnosis (slow res	ponse) is incomplete.	INCMP		
HO2 S2 DIAG2 (B1)	DTC P0139 self-diagnosis (slow res	ponse) is complete.	CMPLT		
VF SEN1 DIAG1	DTC P015A and P015B self-diagnos	sis is incomplete.	INCMP		
B1)	DTC P015A and P015B self-diagnos	sis is complete.	CMPLT		
A/F SEN1 DIAG2	DTC P014C and P014D self-diagnos	sis is incomplete.	INCMP		
(B1)	DTC P014C and P014D self-diagnos	sis is complete.	CMPLT		
VF SEN1 DIAG3	The vehicle condition is not within th P014D,P015A or P015B.	e diagnosis range of DTC P014C,	ABSNT		
(B1)	The vehicle condition is within the di P015A or P015B.	agnosis range of DTC P014C, P014D,	PRSNT		
SYSTEM 1 DIAG-	DTC P117A self-diagnosis is incomp	olete.	INCMP		
NOSIS A B1	DTC P117A self-diagnosis is comple	ete.	CMPLT		
SYSTEM 1 DIAG-	DTC P117A self-diagnosis is on star	ndby.	ABSENT		
NOSIS B B1	DTC P117A self-diagnosis is under o	diagnosis.	PRSENT		

^{*:} Accelerator pedal position sensor 2 signal and throttle position sensor 2 signal are converted by ECM internally. Thus, they differ from ECM terminals voltage signal.

^{*:} Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-3, "How to Handle Battery".

TERMINAL LAYOUT

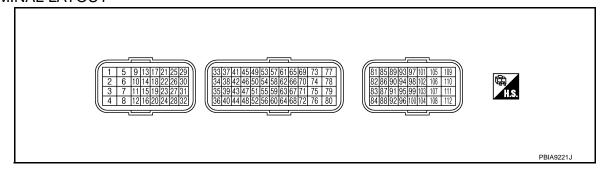

PHYSICAL VALUES

NOTE:

- ECM is located in the engine room left side near battery.
- Specification data are reference values and are measured between each terminal and ground.
 Pulse signal is measured by CONSULT.

Tern	ninal No.	Description			Value
+	_	Signal name	Input/ Output	Condition	(Approx.)
1 (P)	108 (B)	Throttle control motor (Open)	Output	[Ignition switch: ON] • Engine stopped • Selector lever: D (CVT), 1st (M/T) • Accelerator pedal: Fully depressed	3.2 V★ 1mSec/div 5V/div JMBIA0324GB
2 (SB)	108 (B)	Throttle control motor re- lay power supply	Input	[Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V)
4 (L)	108 (B)	Throttle control motor (Close)	Output	[Ignition switch: ON] • Engine stopped • Selector lever: D (CVT), 1st (M/T) • Accelerator pedal: Fully released	1.8 V★ 5mSec/div 5V/div JMBIA0326GB
5 (G)	59 (O)	Heated oxygen sensor 2 heater	Output	 [Engine is running] Engine speed: Below 3,600 rpm after the following conditions are met Engine: after warming up Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load [Ignition switch: ON] 	10 V★ 50mSec/div 10V/div JMBIA0325GB
				Engine stopped [Engine is running] Engine speed: Above 3,600 rpm	BATTERY VOLTAGE (11 - 14 V)

Terminal No.		Description		_	Value
+	_	Signal name	Input/ Output	Condition	(Approx.)
8 (G)	53 (LG)	A/F sensor 1 heater	Output	 [Engine is running] Warm-up condition Engine speed: Idle speed (More than 140 seconds after starting engine) 	2.9 - 8.8 V★ 50mSec/div 10V/div JMBIA0325GB
9 (P)	108 (B)	EVAP canister purge vol- ume control solenoid	Output	[Engine is running]Idle speedAccelerator pedal: Not depressed even slightly, after engine starting	BATTERY VOLTAGE (11 - 14 V)★ 50mSec/div 10V/div JMBIA0327GB
(,,	valve	valve	[Engine is running]Engine speed: About 2,000 rpm (More than 100 seconds after starting engine.)	10 V★ 50mSec/div 10V/div JMBIA0328GB	
11 (B)	_	ECM ground	_	_	_
14 (L)	108 (B)	PNP signal	Input	[Ignition switch: ON] • Selector lever: P or N (CVT), Neutral (M/T) [Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V)
15 (Y)	108 (B)	Throttle control motor relay	Output	Selector lever: Except above [Ignition switch: OFF] [Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V) 0 - 1.0 V
17 (R)		Ignition signal No. 1		[Engine is running] • Warm-up condition • Idle speed	0 - 0.3 V★ 50mSec/div
18 (LG)	108 (B)	Ignition signal No. 2	Output	NOTE: The pulse cycle changes depending on rpm at idle	2V/div JMBIA0329GB
21 (G)		Ignition signal No. 4		[Engine is running]	0.2 - 0.5 V★ 50mSec/div
22 (SB)		Ignition signal No. 3		Warm-up condition Engine speed: 2,500 rpm	2V/div JMBIA0330GB

Term	ninal No.	Description			Value
+	-	Signal name	Input/ Output	Condition	(Approx.)
23 (GR)	108 (B)	Fuel pump relay	Output	[Ignition switch: ON] For 1 second after turning ignition switch ON [Engine is running]	0 - 1.0 V
25 (V)		Fuel injector No. 4		[Engine is running]Warm-up conditionIdle speedNOTE:	BATTERY VOLTAGE (11 - 14 V)★ 50mSec/div
29 (Y)	108 (B)	Fuel injector No. 3	Output	The pulse cycle changes depending on rpm at idle	10V/div JMBIA0331GB
30 (O)	, ,	Fuel injector No. 2		[Engine is running] • Warm-up condition	BATTERY VOLTAGE (11 - 14 V)★ 50mSec/div
31 (L)		Fuel injector No. 1		Engine speed: 2,000 rpm	10V/div JMBIA0332GB
28 (W)	108 (B)	EVAP canister vent control valve	Output	[Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V)
32 (P)	108 (B)	ECM relay (Self shut-off)	Output	[Engine is running][Ignition switch: OFF]A few seconds after turning ignition switch OFF	0 - 1.0 V
(,)	(2)	(Con onat on)		[Ignition switch: OFF]More than a few seconds after turning ignition switch OFF	BATTERY VOLTAGE (11 - 14 V)
33	36	Throttle position sensor 1	Input	 [Ignition switch: ON] Engine stopped Selector lever: D (CVT), 1st (M/T) Accelerator pedal: Fully released 	More than 0.36 V
(LG)	(Y)	Throttle position sensor 1	mput	 [Ignition switch: ON] Engine stopped Selector lever: D (CVT), 1st (M/T) Accelerator pedal: Fully depressed 	Less than 4.75 V
34	36	Throttle position sensor 2	Input	 [Ignition switch: ON] Engine stopped Selector lever: D (CVT), 1st (M/T) Accelerator pedal: Fully released 	Less than 4.75 V
(R)	(Y)			 [Ignition switch: ON] Engine stopped Selector lever: D (CVT), 1st (M/T) Accelerator pedal: Fully depressed 	More than 0.36 V
36 (Y)	_	Sensor ground (Throttle position sensor)	_	_	_
37 (W)	40 (—)	Knock sensor	Input	[Engine is running] • Idle speed	2.5 V
38 (BR)	44 (GR)	Engine coolant tempera- ture sensor	Input	[Engine is running]	0 - 4.8 V Output voltage varies with engine coolant temperature.

Terminal No.		Description			Value
+		Signal name	Input/ Output	Condition	(Approx.)
40 (—)	_	Sensor ground (Knock sensor)	_	_	_
41 (GR)	48 (BR)	Refrigerant pressure sensor	Input	 [Engine is running] Warm-up condition Both A/C switch and blower fan motor switch: ON (Compressor operates) 	1.0 - 4.0 V
42 (V)	51 (Y)	EVAP control system pressure sensor	Input	[Ignition switch: ON]	1.8 - 4.8 V
43 (P)	108 (B)	Fuel tank temperature sensor	Input	[Engine is running]	0 - 4.8 V Output voltage varies with fuel tank temperature.
44 (GR)	_	Sensor ground (Engine coolant temperature sensor)	_	_	_
45	52	Mass air flow sensor	Input	[Engine is running]Warm-up conditionIdle speed	0.7 - 1.1 V
(G)	(R)			[Engine is running]Warm-up conditionEngine speed: 2,500 rpm	1.3 - 1.7 V
46 (L)	55 (P)	Intake air temperature sensor	Input	[Engine is running]	0 - 4.8 V Output voltage varies with intake air temperature.
48 (BR)	_	Sensor ground (Refrigerant pressure sensor)	_	_	_
49 (V)	53 (LG)	A/F sensor 1	Input	[Engine is running]Warm-up conditionEngine speed: 2,000 rpm	Approximately 1.8 V Output voltage varies with air fuel ratio.
50 (W)	59 (O)	Heated oxygen sensor 2	Input	 [Engine is running] Revving engine from idle to 3,000 rpm quickly after the following conditions are met Engine: after warming up Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load 	0 - 1.0 V
51 (Y)	_	Sensor ground (EVAP control system pressure sensor)	_	_	_
52 (R)	_	Sensor ground (Mass air flow sensor)	_	_	_
53 (LG)	_	Sensor ground (A/F sensor 1)	_	_	_
55 (P)	_	Sensor ground (Intake air temperature sensor)	_	_	_
57 (GR)	64 (SB)	Battery current sensor	Input	[Engine is running] • Battery: Fully charged *1 • Idle speed	2.6 - 3.5 V
59 (O)	_	Sensor ground (Heated oxygen sensor 2)	_	_	_

Tern	ninal No.	Description			Value			
+	_	Signal name	Input/ Output	Condition	Value (Approx.)			
61	62	2 Crankshaft position sen-		 [Engine is running] Warm-up condition Idle speed NOTE: The pulse cycle changes depending on rpm at idle 	4.0 V★ 5mSec/div 2V/div JMBIA0333GB			
(W)	(B)	sor (POS)	Input	[Engine is running] • Engine speed: 2,000 rpm	4.0 V★ 5mSec/div 2V/div JMBIA0334GB			
62 (B)	_	Sensor ground [Crankshaft position sensor (POS)]	_	_	_			
63 (L)	_	Sensor ground [Camshaft position sensor (PHASE)]	_	_	_			
64 (SB)	_	Sensor ground (Battery current sensor)	_	_	_			
65	63	62 Complete position agrees	Camshaft position sensor	Camshaft position sensor	Camshaft position sensor	locut	 [Engine is running] Warm-up condition Idle speed NOTE: The pulse cycle changes depending on rpm at idle 	0 - 5.0★ 20mSec/div 2V/div 2V/div JMBIA0045GB
(Y)	(L)	(PHASE)	Input	[Engine is running] • Engine speed is 2,000 rpm	0 - 5.0★ 20mSec/div 2V/div JMBIA0046GB			
66 ^{*2} (L)	108 (B)	Power supply for ECM (Back-up)	Input	[Ignition switch: OFF]	BATTERY VOLTAGE (11 - 14 V)			
71 (Y)	108 (B)	Sensor power supply [Battery current sensor]	_	[Ignition switch: ON] 5 V				
72 (O)	36 (Y)	Sensor power supply (Throttle position sensor)	_	[Ignition switch: ON]	5 V			

Term	ninal No.	Description			Value
+	_	Signal name	Input/ Output	Condition	(Approx.)
				[Engine is running]Warm-up conditionIdle speed	BATTERY VOLTAGE (11 - 14 V)
73 108 Intake valve timing control solenoid valve	Output	[Engine is running]Warm-up conditionWhen revving engine up to 2,000rpm Quickly	7 - 10 V★		
74 (W)	108 (B)	Sensor power supply (Refrigerant pressure sensor)	Input	[Ignition switch: ON]	5 V
75 (R)	62 (B)	Sensor power supply [Crankshaft position sensor (POS)]	_	[Ignition switch: ON]	5 V
76 (LG)	51 (Y)	Sensor power supply [EVAP control system pressure sensor]	_	[Ignition switch: ON]	5 V
78 (G)	63 (L)	Sensor power supply [Camshaft position sensor (PHASE)]	_	[Ignition switch: ON]	5 V
83 (P)	108 (B)	CAN communication line	Input/ Output	_	_
84 (L)	108 (B)	CAN communication line	Input/ Output	_	_
88 (LG)	108 (B)	Data link connector	Input/ Output	_	_
93	108			[Ignition switch: OFF]	0 V
(L)	(B)	Ignition switch	Input	[Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V)
				[Ignition switch: ON] • ASCD steering switch: OFF	4 V
				[Ignition switch: ON] • MAIN switch: Pressed	0 V
94 (SB)	95 (BR) ^{*3}	ASCD steering switch	Input	[Ignition switch: ON] • CANCEL switch: Pressed	1 V
` '	(B)*4		[Ignition switch: ON] • RESUME/ACCELERATE switch: Pressed	3 V	
				[Ignition switch: ON] • SET/COAST switch: Pressed	2 V
95 (BR) ^{*3} (B) ^{*4}	_	Sensor ground (ASCD steering switch)	_	_	_
99	108	Stop lamp switch	Input	[Ignition switch: OFF] • Brake pedal: Fully released	0 V
(W)	(B)	Stop lattly Switch	Input	[Ignition switch: OFF] • Brake pedal: Slightly depressed	BATTERY VOLTAGE (11 - 14 V)

Tern	ninal No.	Description			Value
+	_	Signal name	Input/ Output	Condition	(Approx.)
100	108	ASCD brake switch	Input	[Ignition switch: ON] Brake pedal: Slightly depressed (CVT) Brake pedal and clutch pedal: Slightly depressed (M/T)	0 V
(SB)	(B)		·	 [Ignition switch: ON] Brake pedal: Fully released (CVT) Brake pedal and/or clutch pedal: Fully released (M/T) 	BATTERY VOLTAGE (11 - 14 V)
102 (O)	108 (B)	Sensor power supply (Accelerator pedal position sensor 2)	_	[Ignition switch: ON]	5 V
103	104	Accelerator pedal posi-	lant	[Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully released	0.3 - 0.6 V
(G)	(R)	tion sensor 2	Input	[Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully depressed	1.95 - 2.4 V
104 (R)	_	Sensor ground (Accelerator pedal position sensor 2)	_	_	_
105 (G)	108 (B)	Power supply for ECM	Input	[Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V)
106 (V)	108 (B)	Sensor power supply (Accelerator pedal position sensor 1)	_	[Ignition switch: ON]	5 V
107 (B) 108 (B) 109 (B) 112 (B)	_	ECM ground	_	_	_
110	111	Accelerator pedal posi-	Input	[Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully released	0.6 - 0.9 V
(BR)	(Y)		Input	[Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully depressed	3.9 - 4.7 V
111 (Y)	_	Sensor ground (Accelerator pedal position sensor 1)	_	_	_

^{★:} Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

Wiring Diagram — ENGINE CONTROL SYSTEM —

INFOID:0000000008450952


For connector terminal arrangements, harness layouts, and alphabets in a (option abbreviation; if not described in wiring diagram), refer to GI-12, "Connector Information".


^{*1:} Before measuring the terminal voltage, confirm that the battery is fully changed. Refer to PG-3. "How to Handle Battery".


^{*2:} Except for Canada


^{*3:} CVT models

^{*4:} M/T models

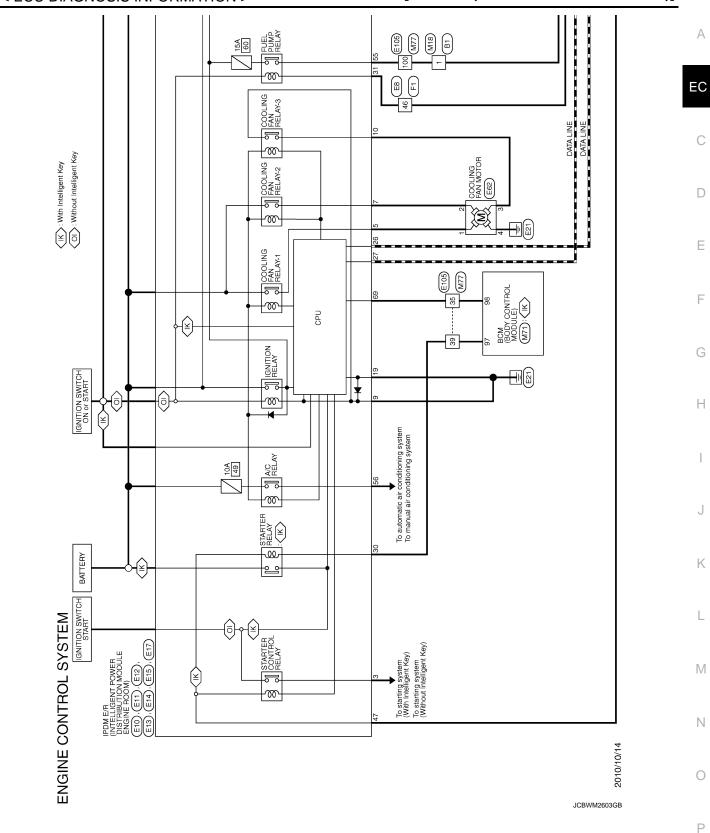

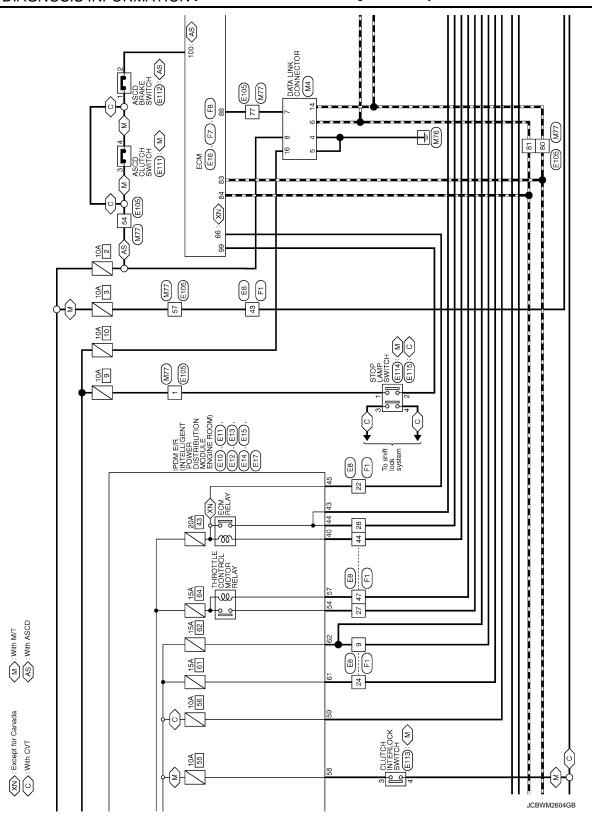


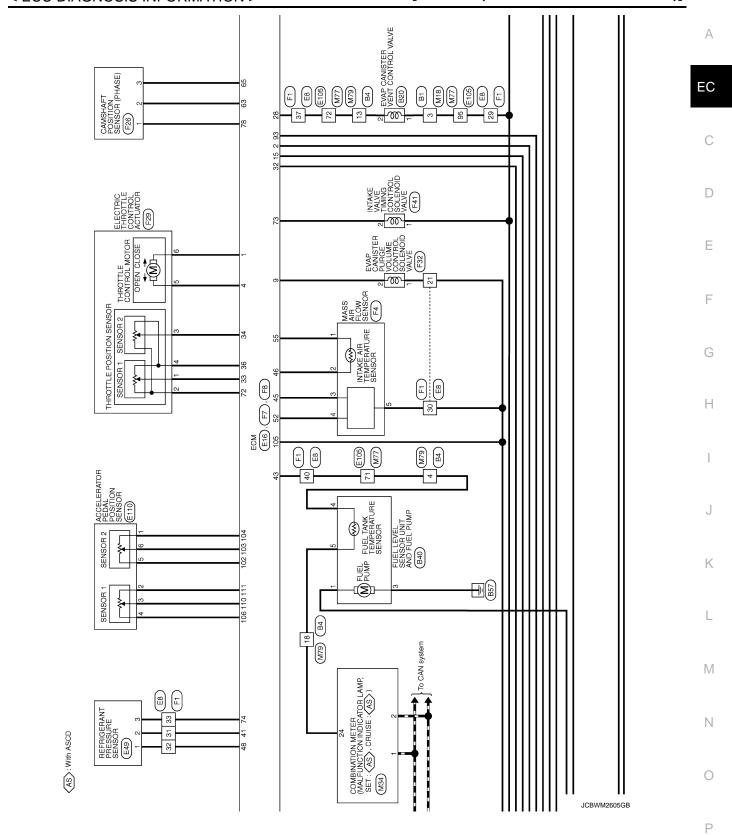

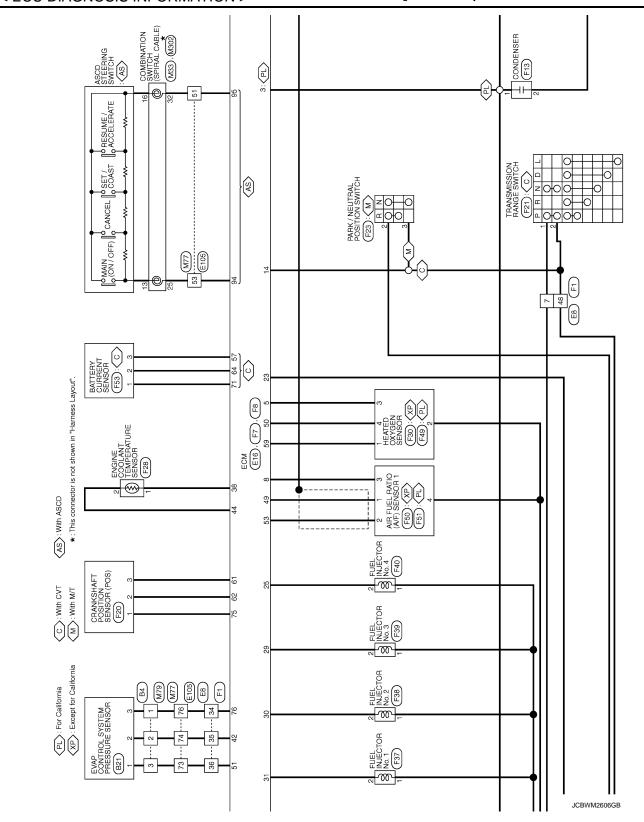

EC

Α

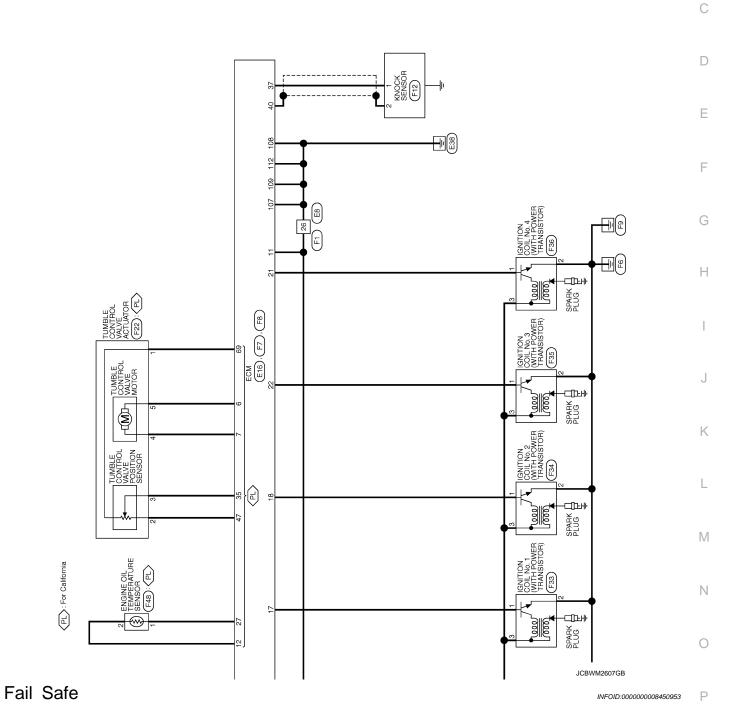

NON DTC RELATED ITEM

Detected items	Engine operating condition in fail-safe mode	Remarks
Malfunction indicator lamp circuit	Engine speed will not rise more than 2,500 rpm due to the fuel cut	When there is an open circuit on MIL circuit, the ECM cannot warn the driver by lighting up MIL when there is malfunction on engine control system. Therefore, when electrical controlled throttle and part of ECM related diagnoses are continuously detected as NG for 5 trips, ECM warns the driver that engine control system malfunctions and MIL circuit is open by means of operating fail-safe function. The fail-safe function also operates when above diagnoses except MIL circuit are detected and demands the driver to repair the malfunction.

DTC RELATED ITEM

DTC No.	Detected items	Engine opera	ating condition in fail-safe mode				
P0011	Intake valve timing control	The signal is not energized to the ir control does not function.	ntake valve timing control solenoid valve and the valve				
P0101 P0102 P0103	Mass air flow sensor circuit	Engine speed will not rise more than 2,400 rpm due to the fuel cut.					
P0117 P0118	Engine coolant tempera- ture sensor circuit	Engine coolant temperature will be CONSULT displays the engine cool	determined by ECM based on the following condition lant temperature decided by ECM.				
		Condition	Engine coolant temperature decided (CONSULT display)				
		Just as ignition switch is turned ON or START	40°C (104°F)				
	More than approx. 4 minutes after engine starting	80°C (176°F)					
	Except as shown above	40 - 80°C (104 - 176°F) (Depends on the time)					
		When the fail-safe system for engine coolant temperature sensor is activated, the cooling fan operates while engine is running.					
P0122 P0123 P0222 P0223 P2135	Throttle position sensor	The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.					
P0500	Vehicle speed sensor	The cooling fan operates (highest)	while engine is running.				
P0643	Sensor power supply	ECM stops the electric throttle confixed opening (approx. 5 degrees)	trol actuator control, throttle valve is maintained at a by the return spring.				
P0605	ECM	(When ECM calculation function is ECM stops the electric throttle confixed opening (approx. 5 degrees)	trol actuator control, throttle valve is maintained at a				
P1805	Brake switch	ECM controls the electric throttle of small range. Therefore, acceleration will be poo	ontrol actuator by regulating the throttle opening to a r.				
		Vehicle condition	Driving condition				
		When engine is idling	Normal				
		When accelerating	Poor acceleration				
P2100 P2103	Throttle control motor relay	ECM stops the electric throttle confixed opening (approx. 5 degrees)	trol actuator control, throttle valve is maintained at a by the return spring.				
P2101	Electric throttle control function	ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.					
P2118	Throttle control motor	ECM stops the electric throttle confixed opening (approx. 5 degrees)	trol actuator control, throttle valve is maintained at a by the return spring.				

< ECU DIAGNOSIS INFORMATION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

DTC No.	Detected items	Engine operating condition in fail-safe mode
P2119	Electric throttle control actuator	(When electric throttle control actuator does not function properly due to the return spring malfunction:) ECM controls the electric throttle actuator by regulating the throttle opening around the idle position. The engine speed will not rise more than 2,000 rpm.
		(When throttle valve opening angle in fail-safe mode is not in specified range:) ECM controls the electric throttle control actuator by regulating the throttle opening to 20 degrees or less.
		(When ECM detects the throttle valve is stuck open:) While the vehicle is driving, it slows down gradually by fuel cut. After the vehicle stops, the engine stalls. The engine can restart in N or P (CVT), Neutral (M/T) position, and engine speed will not exceed 1,000 rpm or more.
P2122 P2123 P2127 P2128 P2138	Accelerator pedal position sensor	The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Inspection Priority Chart

INFOID:0000000008450954

Α

D

Е

Н

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)
1	U0100 U0101 U1001 CAN communication line
	 P0101 P0102 P0103 Mass air flow sensor
	P0111 P0112 P0113 P0127 Intake air temperature sensor
	P0116 P0117 P0118 P0125 Engine coolant temperature sensor
	 P0122 P0123 P0222 P0223 P1225 P1226 P2135 Throttle position sensor
	P0128 Thermostat function
	P0181 P0182 P0183 Fuel tank temperature sensor
	P0327 P0328 Knock sensor
	P0335 Crankshaft position sensor (POS)
	P0340 Camshaft position sensor (PHASE)
	P0460 P0461 P0462 P0463 Fuel level sensor
	P0500 Vehicle speed sensor
	• P0605 P607 ECM
	P0643 Sensor power supply
	P0705 Transmission range switch
	P0850 Park/neutral position (PNP) switch
	 P1550 P1551P1552 P1553 P1554 Battery current sensor
	• P1610 - P1615 NATS
	P2122 P2123 P2127 P2128 P2138 Accelerator pedal position sensor

Ν

L

0

Ρ

Priority	Detected items (DTC)
2	 P0031 P0032 Air fuel ratio (A/F) sensor 1 heater P0037 P0038 Heated oxygen sensor 2 heater P0075 Intake valve timing control solenoid valve P0130 P0131 P0132 P014C P014D P015A P015B P2096 P2097 Air fuel ratio (A/F) sensor 1 P0137 P0138 P0139 Heated oxygen sensor 2 P0441 EVAP control system purge flow monitoring P0443 P0444 P0445 EVAP canister purge volume control solenoid valve P0447 P0448 EVAP canister vent control valve P0451 P0452 P0453 EVAP control system pressure sensor P0710 P0715 P0720 P0740 P0744 P0745 P0746 P0776 P0778 P0840 P1740 P1777 P1778 CVT related sensors, solenoid valves and switches P1217 Engine over temperature (OVERHEAT) P1805 Brake switch P2100 P2103 Throttle control motor relay P2101 Electric throttle control function P2118 Throttle control motor
3	 P0011 Intake valve timing control P0171 P0172 Fuel injection system function P0300 - P0304 Misfire P0420 Three way catalyst function P0456 EVAP control system (SMALL LEAK, VERY SMALL LEAK) P0506 P0507 Idle speed control system P050A P050E Cold start control P1148 Closed loop control P117A Air fuel ratio P1212 TCS communication line P1564 ASCD steering switch P1572 ASCD brake switch P1574 ASCD vehicle speed sensor P1715 Input speed sensor P2119 Electric throttle control actuator

DTC Index

 \times :Applicable —: Not applicable

						X. Applicable	. Not applicable
CONSULT GST ^{*2}	ECM*3	Litems (CONSULT screen terms)	SRT code	Trip	MIL	Permanent DTC group*4	Reference page
U0100	0100 ^{*5}	LOST COMM (ECM A)	_	1	×	В	TM-102
U0101	0101 ^{*5}	LOST COMM (TCM)	_	1	×	В	EC-137
U1001	1001 ^{*5}	CAN COMM CIRCUIT	_	2	_	_	EC-138
P0000	0000	NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	_	_	Flashing ^{*8}	_	_
P0011	0011	INT/V TIM CONT-B1	×	2	×	В	EC-139
P0031	0031	A/F SEN1 HTR (B1)	_	2	×	В	EC-143
P0032	0032	A/F SEN1 HTR (B1)	_	2	×	В	EC-143
P0037	0037	HO2S2 HTR (B1)	_	2	×	В	EC-146
P0038	0038	HO2S2 HTR (B1)	_	2	×	В	EC-146
P0075	0075	INT/V TIM V/CIR-B1	_	2	×	В	EC-149
P0101	0101	MAF SEN/CIRCUIT-B1	_	2	×	В	EC-152
P0102	0102	MAF SEN/CIRCUIT-B1	_	1	×	В	EC-159
P0103	0103	MAF SEN/CIRCUIT-B1	_	1	×	В	EC-159
P0111	0111	IAT SENSOR 1 B1	_	2	×	А	EC-164
P0112	0112	IAT SEN/CIRCUIT-B1	_	2	×	В	EC-166

< ECO DIAGI	NOSIS IINF	ORIVIATION >		[- (LXOL.	I I OK OKL	•	
DTC	 >*1							•
CONSULT GST*2	ECM*3	ltems (CONSULT screen terms)	SRT code	Trip	MIL	Permanent DTC group*4	Reference page	А
P0113	0113	IAT SEN/CIRCUIT-B1	_	2	×	В	EC-166	EC
P0116	0116	ECT SEN/CIRC	_	2	×	A	EC-168	LO
P0117	0117	ECT SEN/CIRC	_	1	×	В	EC-171	
P0118	0118	ECT SEN/CIRC	_	1	×	В	EC-171	С
P0122	0122	TP SEN 2/CIRC-B1	_	1	×	В	EC-174	-
P0123	0123	TP SEN 2/CIRC-B1	_	1	×	В	EC-174	D
P0125	0125	ECT SENSOR	_	2	×	В	EC-177	
P0127	0127	IAT SENSOR-B1	_	2	×	В	EC-180	-
P0128	0128	THERMSTAT FNCTN	_	2	×	А	EC-182	Е
P0130	0130	A/F SENSOR1 (B1)	_	2	×	А	EC-185	-
P0131	0131	A/F SENSOR1 (B1)	_	2	×	В	EC-189	_
P0132	0132	A/F SENSOR1 (B1)	_	2	×	В	EC-192	F
P0137	0137	HO2S2 (B1)	×	2	×	А	EC-195	-
P0138	0138	HO2S2 (B1)	×	2	×	А	EC-201	G
P0139	0139	HO2S2 (B1)	×	2	×	А	EC-209	-
P014C	014C	A/F SENSOR1 (B1)	×	2	×	А	EC-215	
P014D	014D	A/F SENSOR1 (B1)	×	2	×	А	EC-215	Н
P015A	015A	A/F SENSOR1 (B1)	×	2	×	А	EC-215	5
P015B	015B	A/F SENSOR1 (B1)	×	2	×	А	EC-215	
P0171	0171	FUEL SYS-LEAN-B1	_	2	×	В	EC-220	-
P0172	0172	FUEL SYS-RICH-B1	_	2	×	В	EC-224	-
P0181	0181	FTT SENSOR	_	2	×	A and B	EC-228	J
P0182	0182	FTT SEN/CIRCUIT	_	2	×	В	EC-232	.
P0183	0183	FTT SEN/CIRCUIT	_	2	×	В	EC-232	K
P0222	0222	TP SEN 1/CIRC-B1	_	1	×	В	EC-235	
P0223	0223	TP SEN 1/CIRC-B1	_	1	×	В	EC-235	-
P0300	0300	MULTI CYL MISFIRE	_	1 or 2	×	В	EC-238	L
P0301	0301	CYL 1 MISFIRE	_	1 or 2	×	В	EC-238	-
P0302	0302	CYL 2 MISFIRE	_	1 or 2	×	В	EC-238	M
P0303	0303	CYL 3 MISFIRE	_	1 or 2	×	В	EC-238	IVI
P0304	0304	CYL 4 MISFIRE	_	1 or 2	×	В	EC-238	
P0327	0327	KNOCK SEN/CIRC-B1	_	2	_	_	EC-244	Ν
P0328	0328	KNOCK SEN/CIRC-B1	_	2	_	_	EC-244	
P0335	0335	CKP SEN/CIRCUIT	_	2	×	В	EC-246	0
P0340	0340	CMP SEN/CIRC-B1	_	2	×	В	EC-250	0
P0420	0420	TW CATALYST SYS-B1	×	2	×	А	EC-254	•
P0441	0441	EVAP PURG FLOW/MON	×	2	×	А	EC-259	Р
P0443	0443	PURG VOLUME CONT/V	_	2	×	Α	EC-265	-
P0444	0444	PURG VOLUME CONT/V	_	2	×	В	EC-270	-
P0445	0445	PURG VOLUME CONT/V	_	2	×	В	EC-270	-
P0447	0447	VENT CONTROL VALVE	_	2	×	В	EC-273	•
P0448	0448	VENT CONTROL VALVE		2	×	В	EC-277	
								•

DTC	<u>*</u> 1	- Items				Permanent	Reference
CONSULT GST*2	ECM*3	(CONSULT screen terms)	SRT code	Trip	MIL	DTC group*4	page
P0451	0451	EVAP SYS PRES SEN	/AP SYS PRES SEN — 2 ×		×	А	EC-281
P0452	0452	EVAP SYS PRES SEN	_	2	×	В	EC-285
P0453	0453	EVAP SYS PRES SEN	_	2	×	В	EC-290
P0456	0456	EVAP VERY SML LEAK	×*7	2	×	А	EC-296
P0460	0460	FUEL LEV SEN SLOSH	_	2	×	А	EC-302
P0461	0461	FUEL LEVEL SENSOR	_	2	×	В	EC-303
P0462	0462	FUEL LEVL SEN/CIRC	_	2	×	В	EC-30
P0463	0463	FUEL LEVL SEN/CIRC	_	2	×	В	EC-30
P0500	0500	VEHICLE SPEED SEN A*6	_	2	×	В	EC-308
P0506	0506	ISC SYSTEM	_	2	×	В	EC-31
P0507	0507	ISC SYSTEM	_	2	×	В	EC-313
P050A	050A	COLD START CONTROL	_	2	×	А	EC-31
P050E	050E	COLD START CONTROL	_	2	×	А	EC-31
P0605	0605	ECM	_	1 or 2	× or —	В	EC-31
P0607	0607	ECM	_	1 (CVT) 2 (M/T)	× (CVT) — (M/T)	В	EC-31
P0643	0643	SENSOR POWER/CIRC	_	1	×	В	EC-32
P0705	0705	T/M RANGE SENSOR A	_	2	×	В	<u>TM-10</u>
P0710	0710	FLUID TEMP SENSOR A*9	_	1	×	В	TM-11
P0715	0715	INPUT SPEED SENSOR A	_	2	×	В	TM-11
P0720	0720	OUTPUT SPEED SENSOR*6	_	2	×	В	TM-11
P0740	0740	TORQUE CONVERTER	_	2	×	В	TM-12
P0744	0744	TORQUE CONVERTER	_	2	×	В	TM-12
P0745	0745	PC SOLENOID A	_	2	×	В	TM-12
P0746	0746	PC SOLENOID A	_	1	×	В	TM-13
P0776	0776	PC SOLENOID B	_	2	×	В	TM-13
P0778	0778	PC SOLENOID B	_	2	×	В	TM-13
P0840	0840	FLUID PRESS SEN/SW A	_	2	×	В	TM-13
P0850	0850	P-N POS SW/CIRCUIT	_	2	×	В	EC-32
P1148	1148	CLOSED LOOP-B1	_	1	×	А	EC-32
P117A	117A	AIR FUEL RATIO B1	_	2	×	А	EC-32
P1212	1212	TCS/CIRC	_	2	_	_	EC-33
P1217	1217	ENG OVER TEMP	_	1	×	В	EC-33
P1225	1225	CTP LEARNING-B1	_	2	_	_	EC-33
P1226	1226	CTP LEARNING-B1	_	2	_	_	EC-33
P1550	1550	BAT CURRENT SENSOR	_	2		_	EC-34
P1551	1551	BAT CURRENT SENSOR	_	2	_	_	EC-34
P1552	1552	BAT CURRENT SENSOR	_	2	_	_	EC-34
P1553	1553	BAT CURRENT SENSOR	_	2	_	_	EC-34
P1554	1554	BAT CURRENT SENSOR	_	2	_	_	EC-35
P1564	1564	ASCD SW	_	1	_	_	EC-35
P1572	1572	ASCD BRAKE SW	_	1		_	EC-359

Α

D

Е

DTC)*1	Items				Permanent	Reference
CONSULT GST*2	ECM*3	SRI code Irip		MIL	DTC group*4	page	
P1574	1574	ASCD VHL SPD SEN		1	_	_	EC-366
P1610	1610	LOCK MODE	_	2	_	_	SEC-34
P1611	1611	ID DISCORD, IMMU-ECM		2	_	_	SEC-35
P1612	1612	CHAIN OF ECM-IMMU		2	_	_	SEC-37
P1614	1614	CHAIN OF IMMU-KEY	_	2	_	_	SEC-6
P1615	1615	DIFFERENCE OF KEY	_	2	_	_	SEC-6
P1715	1715	IN PULY SPEED	_	2	_	_	EC-368
P1740	1740	SLCT SOLENOID	_	2	×	В	TM-153
P1777	1777	STEP MOTOR	_	1	×	В	TM-156
P1778	1778	STEP MOTOR	_	2	×	В	TM-159
P1805	1805	BRAKE SW/CIRCUIT	_	2	_	_	EC-370
P2096	2096	POST CAT FUEL TRIM SYS B1	_	2	×	А	EC-373
P2097	2097	POST CAT FUEL TRIM SYS B1	_	2	×	А	EC-373
P2100	2100	ETC MOT PWR-B1	_	1	×	В	EC-377
P2101	2101	ETC FNCTN/CIRC-B1	_	1	×	В	EC-380
P2103	2103	ETC MOT PWR	_	1	×	В	EC-377
P2118	2118	ETC MOT-B1	_	1	×	В	EC-384
P2119	2119	ETC ACTR-B1	_	1	×	В	EC-386
P2122	2122	APP SEN 1/CIRC	_	1	×	В	EC-388
P2123	2123	APP SEN 1/CIRC	_	1	×	В	EC-388
P2127	2127	APP SEN 2/CIRC	_	1	×	В	EC-391
P2128	2128	APP SEN 2/CIRC	_	1	×	В	EC-391
P2135	2135	TP SENSOR-B1	_	1	×	В	EC-395
P2138	2138	APP SENSOR	_	1	×	В	EC-398

^{*1: 1}st trip DTC No. is the same as DTC No.

Test Value and Test Limit

INFOID:0000000008843154

Ν

The following is the information specified in Service \$06 of SAE J1979/ISO 15031-5.

The test value is a parameter used to determine whether a system/circuit diagnostic test is OK or NG while being monitored by the ECM during self-diagnosis. The test limit is a reference value which is specified as the maximum or minimum value and is compared with the test value being monitored.

These data (test value and test limit) are specified by On Board Monitor ID (OBDMID), Test ID (TID), Unit and Scaling ID and can be displayed on the GST screen.

The items of the test value and test limit will be displayed with GST screen which items are provided by the ECM. (e.g., if bank 2 is not applied on this vehicle, only the items of bank 1 are displayed)

^{*2:} This number is prescribed by SAE J2012/ISO 15031-6.

^{*3:} In Diagnostic Test Mode II (Self-diagnostic results), this number is controlled by NISSAN.

^{*4:} Refer to EC-34, "Description", "PERMANENT DTC".

^{*5:} The troubleshooting for this DTC needs CONSULT.

^{*6:} When the fail-safe operations for both self-diagnoses occur, the MIL illuminates.

^{*7:} SRT code will not be set if the self-diagnostic result is NG.

^{*8:} When the ECM is in the mode that displays SRT status, MIL may flash. For the details, refer to EC-28, "Description".

^{*9:} When erasing this DTC, always use CONSULT or GST.

Item	OBD- MID	Self-diagnostic test item	DTC	li	e and Test mit display) Unit and Scaling ID	Description
			P0131	83H	0BH	Minimum sensor output voltage for test cycle
			P0131	84H	овн	Maximum sensor output voltage for test cycle
			P0130	85H	0BH	Minimum sensor output voltage for test cycle
			P0130	86H	овн	Maximum sensor output voltage for test cycle
			P0133	87H	04H	Response rate: Response ratio (lean to rich)
			P0133	88H	04H	Response rate: Response ratio (rich to lean)
			P2096	89H	84H	The amount of shift in air fuel ratio
			P2097	8AH	84H	The amount of shift in air fuel ratio
			P0130	8BH	0BH	Difference in sensor output voltage
	01H	Air fuel ratio (A/F) sensor 1 (Bank 1)	P0133	8CH	83H	Response gain at the limited frequency
			P014C	8DH	04H	O2 sensor slow response - Rich to lean bank 1 sensor 1
			P014C	8EH	04H	O2 sensor slow response - Rich to lean bank 1 sensor 1
			P014D	8FH	84H	O2 sensor slow response - Lean to rich bank 1 sensor 1
HO2S			P014D	90H	84H	O2 sensor slow response - Lean to rich bank 1 sensor 1
			P015A	91H	01H	O2 sensor delayed response - Rich to lean bank 1 sensor 1
			P015A	92H	01H	O2 sensor delayed response - Rich to lean bank 1 sensor 1
			P015B	93H	01H	O2 sensor delayed response - Lean to rich bank 1 sensor 1
			P015B	94H	01H	O2 sensor delayed response - Lean to rich bank 1 sensor 1
			P0138	07H	0CH	Minimum sensor output voltage for test cycle
		Heated oxygen sensor 2	P0137	08H	0CH	Maximum sensor output voltage for test cycle
	02H	(Bank 1)	P0138	80H	0CH	Sensor output voltage
			P0139	81H	0CH	Difference in sensor output voltage
			P0139	82H	11H	Rear O2 sensor delay response diagnosis
			P0143	07H	0CH	Minimum sensor output voltage for test cycle
	03H	Heated oxygen sensor 3 (Bank 1)	P0144	08H	0СН	Maximum sensor output voltage for test cycle
			P0146	80H	0CH	Sensor output voltage
			P0145	81H	0CH	Difference in sensor output voltage

	,	JOIO INFORMATION >				, , , , , , , , , , , , , , , , , , , ,		
					e and Test mit			
Item	OBD-	Self-diagnostic test item	DTC		display)	Description		
UIID	MID	Self-diagnostic test item	Dio	TID	Unitand Scaling ID	Description		
			P0151	83H	0BH	Minimum sensor output voltage for test cycle		
			P0151	84H	0BH	Maximum sensor output voltage for test cycle		
			P0150	85H	0BH	Minimum sensor output voltage for test cycle		
			P0150	86H	0BH	Maximum sensor output voltage for test cycle		
			P0153	87H	04H	Response rate: Response ratio (lean to rich)		
			P0153	88H	04H	Response rate: Response ratio (rich to lean)		
			P2098	89H	84H	The amount of shift in air fuel ratio		
			P2099	8AH	84H	The amount of shift in air fuel ratio		
			P0150	8BH	0BH	Difference in sensor output voltage		
	05H	Air fuel ratio (A/F) sensor 1 (Bank 2)	P0153	8CH	83H	Response gain at the limited frequency		
			(Bank 2)	P014E	8DH	04H	O2 sensor slow response - Rich to lean bank 2 sensor 1	
			P014E	8EH	04H	O2 sensor slow response - Rich to lean bank 2 sensor 1		
			P014F	8FH	84H	O2 sensor slow response - Lean to rich bank 2 sensor 1		
HO2S	S		P014F	90H	84H	O2 sensor slow response - Lean to rich bank 2 sensor 1		
					P015C	91H	01H	O2 sensor delayed response - Rich to lean bank 2 sensor 1
			P015C	92H	01H	O2 sensor delayed response - Rich to lean bank 2 sensor 1		
					P015D	93H	01H	O2 sensor delayed response - Lean to rich bank 2 sensor 1
			P015D	94H	01H	O2 sensor delayed response - Lean to rich bank 2 sensor 1		
			P0158	07H	0CH	Minimum sensor output voltage for test cycle		
	0011	Heated oxygen sensor 2	P0157	08H	0CH	Maximum sensor output voltage for test cycle		
	06H	(Bank 2)	P0158	80H	0CH	Sensor output voltage		
			P0159	81H	0CH	Difference in sensor output voltage		
			P0159	82H	11H	Rear O2 sensor delay response diagnosis		
			P0163	07H	0CH	Minimum sensor output voltage for test cycle		
	07H	Heated oxygen sensor 3 (Bank2)	P0164	08H	0CH	Maximum sensor output voltage for test cycle		
			P0166	80H	0CH	Sensor output voltage		
			P0165	81H	0CH	Difference in sensor output voltage		

Item	OBD-	Self-diagnostic test item	DTC	li	e and Test mit display)	Description
пеш	MID	Sell-diagnostic test item	DIC	TID	Unitand Scaling ID	Description
			P0420	80H	01H	O2 storage index
	21H	Three way catalyst function	P0420	82H	01H	Switching time lag engine exhaust index value
	2111	(Bank1)	P2423	83H	0CH	Difference in 3rd O2 sensor output voltage
CATA-			P2423	84H	84H	O2 storage index in HC trap catalyst
LYST		2H Three way catalyst function (Bank2)	P0430	80H	01H	O2 storage index
	224		P0430	82H	01H	Switching time lag engine exhaust index value
	2211		P2424	83H	0CH	Difference in 3rd O2 sensor output voltage
			P2424	84H	84H	O2 storage index in HC trap catalyst
			P0400	80H	96H	Low flow faults: EGR temp change rate (short term)
			P0400	81H	96H	Low flow faults: EGR temp change rate (long term)
EGR SYSTEM	31H	EGR function	P0400	82H	96H	Low flow faults: Difference between max EGR temp and EGR temp under idling condition
			P0400	83H	96H	Low flow faults: Max EGR temp
			P1402	84H	96H	High Flow Faults: EGR temp increase rate

Item	OBD-	Self-diagnostic test item	DTC	li	e and Test mit display)	Description	
	MID	Con diagnosis too non		TID	Unitand Scaling ID		
			P0011	80H	9DH	VTC intake function diagnosis (VTC alignment check diagnosis)	
			P0014	81H	9DH	VTC exhaust function diagnosis (VTC alignment check diagnosis)	
			P0011	82H	9DH	VTC intake function diagnosis (VTC drive failure diagnosis)	
	35H	VV/T Monitor (Ponk1)	P0014	83H	9DH	VTC exhaust function diagnosis (VTC drive failure diagnosis)	
	ээп	VVT Monitor (Bank1)	P100A	84H	10H	VEL slow response diagnosis	
			P1090	85H	10H	VEL servo system diagnosis	
			P0011	86H	9DH	VTC intake intermediate lock function diagnosis (VTC intermediate position alignment check diagnosis)	
VVT			Advanced: P052A Retarded: P052B	87H	9DH	VTC intake intermediate lock system diagnosis (VTC intermediate lock position check diagnosis)	
SYSTEM	М		P0021	80H	9DH	VTC intake function diagnosis (VTC alignment check diagnosis)	
		VV/T Monitor (Rank?)	P0024	81H	9DH	VTC exhaust function diagnosis (VTC alignment check diagnosis)	
			VVT Monitor (Bank2)	P0021	82H	9DH	VTC intake function diagnosis (VTC drive failure diagnosis)
	36H			P0024	83H	9DH	VTC exhaust function diagnosis (VTC drive failure diagnosis)
	0011	VVI Monitor (Bank2)	P100B	84H	10H	VEL slow response diagnosis	
			P1093	85H	10H	VEL servo system diagnosis	
			P0021	86H	9DH	VTC intake intermediate lock function diagnosis (VTC intermediate position alignment check diagnosis)	
			Advanced: P052C Retarded: P052D	87H	9DH	VTC intake intermediate lock system diagnosis (VTC intermediate lock position check diagnosis)	
	39H	EVAP control system leak (Cap Off)	P0455	80H	0CH	Difference in pressure sensor output voltage before and after pull down	
	звн	EVAP control system leak (Small leak)	P0442	80H	05H	Leak area index (for more than 0.04 inch)	
EVAP			P0456	80H	05H	Leak area index (for more than 0.02 inch)	
SYSTEM	зсн	EVAP control system leak (Very small leak)	P0456	81H	FDH	Maximum internal pressure of EVAP system during monitoring	
			P0456	82H	FDH	Internal pressure of EVAP system at the end of monitoring	
	3DH	Purge flow system	P0441	83H	0CH	Difference in pressure sensor output voltage before and after vent control valve close	

Item	OBD-	Self-diagnostic test item	DTC	liı	e and Test mit display)	Description
пеш	MID	Sell-diagnostic test item	ыс	TID	Unitand Scaling ID	Description
	41H	A/F sensor 1 heater (Bank 1)	Low Input: P0031 High Input: P0032	81H	0BH	Converted value of heater electric current to voltage
	42H	Heated oxygen sensor 2 heater (Bank 1)	Low Input: P0037 High Input: P0038	80H	0CH	Converted value of heater electric cu rent to voltage
O2 SEN- SOR	43H	Heated oxygen sensor 3 heater (Bank 1)	P0043	80H	0CH	Converted value of heater electric current to voltage
HEATER	45H	A/F sensor 1 heater (Bank 2)	Low Input: P0051 High Input: P0052	81H	0BH	Converted value of heater electric cu rent to voltage
	46H	Heated oxygen sensor 2 heater (Bank 2)	Low Input: P0057 High Input: P0058	80H	0CH	Converted value of heater electric current to voltage
	47H	Heated oxygen sensor 3 heater (Bank 2)	P0063	80H	0CH	Converted value of heater electric current to voltage
		71H Secondary air system	P0411	80H	01H	Secondary air injection system incor- rect flow detected
			Bank1: P0491 Bank2: P0492	81H	01H	Secondary air injection system insuff cient flow
			P2445	82H	01H	Secondary air injection system pump stuck off
SEC- OND- ARY AIR	71H		P2448	83H	01H	Secondary air injection system high airflow
			Bank1: P2440 Bank2: P2442	84H	01H	Secondary air injection system switch ing valve stuck open
			P2440	85H	01H	Secondary air injection system switch ing valve stuck open
			P2444	86H	01H	Secondary air injection system pump stuck on
			P0171 or P0172	80H	2FH	Long term fuel trim
	81H	Fuel injection system function (Bank 1)	P0171 or P0172	81H	24H	The number of lambda control clamped
FUEL			P117A	82H	03H	Cylinder A/F imbalance monitoring
SYSTEM			P0174 or P0175	80H	2FH	Long term fuel trim
	82H	Fuel injection system function (Bank 2)	P0174 or P0175	81H	24H	The number of lambda control clamped
			P117B	82H	03H	Cylinder A/F imbalance monitoring

				li	ne and Test mit					
Item	OBD- MID	Self-diagnostic test item	DTC	(GST display) Unit and Scaling ID		Description				
			P0301	80H	24H	Misfiring counter at 1000 revolution of the first cylinder				
			P0302	81H	24H	Misfiring counter at 1000 revolution of the second cylinder				
			P0303	82H	24H	Misfiring counter at 1000 revolution of the third cylinder				
			P0304	83H	24H	Misfiring counter at 1000 revolution of the fourth cylinder				
			P0305	Misfiring counter at 1000 revolution of the fifth cylinder						
			P0306	85H	24H	Misfiring counter at 1000 revolution of the sixth cylinder				
			P0307	86H	24H	Misfiring counter at 1000 revolution of the seventh cylinder				
		Multiple cylinder misfires	P0308	87H	24H	Misfiring counter at 1000 revolution of the eighth cylinder				
			P0300	88H	24H	Misfiring counter at 1000 revolution of the multiple cylinders				
MISFIRE	A4 LI		P0301	89H	24H	Misfiring counter at 200 revolution of the first cylinder				
MISFIRE	A1H		P0302	8AH	24H	Misfiring counter at 200 revolution of the second cylinder				
			P0303	8BH	24H	Misfiring counter at 200 revolution of the third cylinder				
			P0304	8CH	24H	Misfiring counter at 200 revolution of the fourth cylinder				
			P0305 8DH 24H Misfiring counter at 200 the fifth cylinder							
			P0306	8EH	24H	Misfiring counter at 200 revolution of the sixth cylinder				
			P0307	8FH	24H	Misfiring counter at 200 revolution of the seventh cylinder				
			P0308	90H	24H	Misfiring counter at 200 revolution of the eighth cylinder				
			P0300	91H	24H	Misfiring counter at 1000 revolution of the single cylinder				
			P0300	92H	24H	Misfiring counter at 200 revolution of the single cylinder				
			P0300	93H	24H	Misfiring counter at 200 revolution of the multiple cylinders				

ltom	OBD-	Self-diagnostic test item	DTC	li	e and Test mit display)	Description				
Item	MID	Sen-diagnostic test item	DTC	TID	Unitand Scaling ID	Description				
	A2H	No. 1 cylinder misfire	P0301	0BH	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driv- ing cycles				
			P0301	0CH	24H	Misfire counts for last/current driving cycles				
	АЗН	No. 2 cylinder misfire	P0302	0ВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driv- ing cycles				
			P0302	0CH	24H	Misfire counts for last/current driving cycles				
	A4H	No. 3 cylinder misfire	P0303	0ВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driv- ing cycles				
		,	P0303	0CH	24H	Misfire counts for last/current driving cycles				
	A5H	No. 4 cylinder misfire	P0304	0BH	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driv- ing cycles				
MOEIDE		,	P0304	0CH	24H	Misfire counts for last/current driving cycles				
MISFIRE	A6H	No. 5 cylinder misfire	P0305	0BH	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles				
			P0305	0CH	24H	Misfire counts for last/current driving cycles				
	A7H	No. 6 cylinder misfire	P0306	0ВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driv- ing cycles				
			P0306	0CH	24H	Misfire counts for last/current driving cycles				
	A8H	No. 7 cylinder misfire	P0307	0ВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driv- ing cycles				
			P0307	0CH	24H	Misfire counts for last/current driving cycles				
	A9H	No. 8 cylinder misfire	P0308	0ВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driv- ing cycles				
			P0308	0СН	24H	Misfire counts for last/current driving cycles				

< SYMPTOM DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

Α

SYMPTOM DIAGNOSIS

ENGINE CONTROL SYSTEM SYMPTOMS

Symptom Table EC

SYSTEM — BASIC ENGINE CONTROL SYSTEM

	SYMPTOM														
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	Reference page
Warrant	y symptom code	AA	AB	AC	AD	AE	AF	AG	АН	AJ	AK	AL	AM	НА	
Fuel	Fuel pump circuit	1	1	2	3	2		2	2			3		2	EC-414
	Fuel pressure regulator system	3	3	4	4	4	4	4	4	4		4			EC-473
	Fuel injector circuit	1	1	2	3	2		2	2			2			EC-411
	Evaporative emission system	3	3	4	4	4	4	4	4	4		4			EC-87
Air	Positive crankcase ventilation system	3	3	4	4	4	4	4	4	4		4	1		EC-429
	Incorrect idle speed adjustment						1	1	1	1		1			EC-22
	Electric throttle control actuator	1	1	2	3	3	2	2	2	2		2		2	EC-380 EC-384
Ignition	Incorrect ignition timing adjustment	3	3	1	1	1		1	1			1			EC-23
	Ignition circuit	1	1	2	2	2		2	2			2			EC-417
Main po	wer supply and ground circuit	2	2	3	3	3		3	3		2	3			EC-134
Mass ai	r flow sensor circuit	1			2										EC-152 EC-159
Engine	coolant temperature sensor circuit	,					3			3					EC-168 EC-171
Air fuel ı	ratio (A/F) sensor 1 circuit		1	2	3	2		2	2			2			EC-185 EC-189 EC-192 EC-215 EC-373
Throttle	position sensor circuit						2			2					EC-174 EC-235 EC-336 EC-338 EC-395
Accelera	ator pedal position sensor circuit			3	2	1									EC-388 EC-391 EC-398
Knock s	ensor circuit			2								3			EC-244

Revision: 2012 August EC-461 2013 CUBE

< SYMPTOM DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

	SYMPTOM													
	HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	Reference page
Warranty symptom code	AA	AB	AC	AD	ΑE	AF	AG	АН	AJ	AK	AL	AM	НА	•
Crankshaft position sensor (POS) circuit	2	2												EC-246
Camshaft position sensor (PHASE) circuit	3	2												EC-250
Vehicle speed signal circuit		2	3		3						3			EC-308
ECM	2	2	3	3	3	3	3	3	3	3	3			EC-317 EC-319
Intake valve timing control solenoid valve circuit		3	2		1	3	2	2	3		3			EC-139
transmission range switch circuit			3		3		3	3			3			EC-322
PNP switch circuit			3		3		3	3			3			EC-322
Refrigerant pressure sensor circuit		2				3			3		4			EC-430
Electrical load signal circuit							3							EC-409
Air conditioner circuit	2	2	3	3	3	3	3	3	3		3		2	HAC-103 HAC-209
ABS actuator and electric unit (control unit)			4											BRC-93

^{1 - 6:} The numbers refer to the order of inspection. (continued on next table)

SYSTEM — ENGINE MECHANICAL & OTHER

< SYMPTOM DIAGNOSIS >

		SYMPTOM														
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	Reference page	
Warranty	symptom code	A A	AB	AC	AD	AE	AF	AG	АН	AJ	AK	AL	AM	НА		
Fuel	Fuel tank Fuel piping Vapor lock	5	5	5	5	5		5	5			5			FL-13 FL-4 —	
	Valve deposit Poor fuel (Heavy weight gasoline, Low octane)	5		5	5	5		5	5			5				
Air	Air duct Air cleaner Air leakage from air duct (Mass air flow sensor — electric throttle control actuator)	-	5	5		5		5	5			5			<u>EM-15</u>	
	Electric throttle control actuator Air leakage from intake manifold/Collector/Gasket	5			5		5			5					<u>EM-26</u>	
Cranking	Battery Generator circuit	1	1	1		1		1	1					1	PG-3 CHG-9	
	Starter circuit	3										1			STR-2 STR-5	
	Signal plate Transmission range switch PNP switch	6 4 4	-												EM-88 TM-108 (CVT) TM-8 (M/T)	
Engine	Cylinder head Cylinder head gasket	5	5	5	5	5		5	5		4	- 5	3		EM-67	
	Cylinder block Piston Piston ring Connecting rod Bearing	6	6	6	6	6		6	6			6	4		EM-88	
	Crankshaft	-														

< SYMPTOM DIAGNOSIS >

	SYMPTOM														
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	Reference page
Warranty	symptom code	A A	AB	AC	AD	AE	AF	AG	АН	AJ	AK	AL	AM	НА	
Valve	Timing chain														<u>EM-44</u>
mecha- nism	Camshaft	5													<u>EM-55</u>
HISHI	Intake valve timing control		5	5	5	5		5	5			5			<u>EM-44</u>
	Intake valve												_		
	Exhaust valve												3		<u>EM-67</u>
Exhaust	Exhaust manifold/Tube/Muf- fler/Gasket	5	5	5	5	5		5	5			5			EM-30
	Three way catalyst														<u>EX-4</u>
Lubrica- tion	Oil pan/Oil strainer/Oil pump/ Oil filter/Oil gallery/Oil cooler	5	5	5	5	5		5	5			5			<u>EM-34</u> <u>LU-7</u> <u>LU-11</u>
	Oil level (Low)/Filthy oil														<u>LU-7</u>
Cooling	Radiator/Hose/Radiator filler cap														CO-13 CO-13
	Thermostat									5					<u>CO-22</u>
	Water pump	5	5	5	5	5		5	5		4	5			<u>CO-20</u>
	Water gallery	5	5	5	5	5		5	5		4	5			<u>CO-2</u>
	Cooling fan														EC-407
	Coolant level (Low)/Contami- nated coolant									5					<u>CO-2</u>
NVIS (NIS tem — NA	SSAN Vehicle Immobilizer Sys- ATS)	1	1												SEC-16

^{1 - 6:} The numbers refer to the order of inspection.

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[MR18DE (EXCEPT FOR CALIFORNIA)]

NORMAL OPERATING CONDITION

Description INFOID:000000008450958

FUEL CUT CONTROL (AT NO LOAD AND HIGH ENGINE SPEED)

If the engine speed is above 2,500 rpm under no load (for example, the selector lever position is neutral and engine speed is over 2,500 rpm) fuel will be cut off after some time. The exact time when the fuel is cut off varies based on engine speed.

Fuel cut will be operated until the engine speed reaches 2,000 rpm, then fuel cut will be cancelled.

This function is different from deceleration control listed under Multiport Fuel Injection (MFI) System, <u>EC-47.</u> "System Description".

EC

Α

С

D

Е

F

Н

. [

Κ

M

L

Ν

0

Р

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS


WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the
 ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with
 a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing
 serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

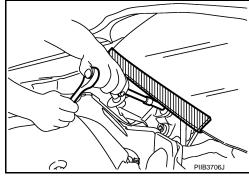

On Board Diagnosis (OBD) System of Engine and CVT

INFOID:0000000008450961

INFOID:0000000008450960

The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.


CAUTION:

- Be sure to turn the ignition switch OFF and disconnect the negative battery cable before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will
 cause the MIL to light up due to the open circuit. (Be sure the connector is free from water, grease,
 dirt, bent terminals, etc.)

- Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to PG-85, "Description".
- Be sure to route and secure the harnesses properly after work. The interference of the harness with a bracket, etc. may cause the MIL to light up due to the short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube
 may cause the MIL to light up due to the malfunction of the EVAP system or fuel injection system,
 etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the ECM and TCM (Transmission control module) before returning the vehicle to the customer.

General Precautions


- Always use a 12 volt battery as power source.
- Do not attempt to disconnect battery cables while engine is running.
- Before connecting or disconnecting the ECM harness connector, turn ignition switch OFF and disconnect negative battery cable. Failure to do so may damage the ECM because battery voltage is applied to ECM even if ignition switch is turned OFF.
- Before removing parts, turn ignition switch OFF and then disconnect negative battery cable.

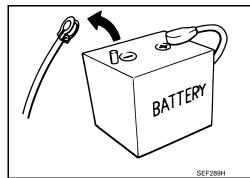


- Do not disassemble ECM.
- If a battery cable is disconnected, the memory will return to the ECM value.

The ECM will now start to self-control at its initial value. Thus, engine operation can vary slightly in this case. However, this is not an indication of a malfunction. Do not replace parts because of a slight variation.

- If the battery is disconnected, the following emission-related diagnostic information will be cleared within 24 hours.
- Diagnostic trouble codes
- 1st trip diagnostic trouble codes
- Freeze frame data
- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values
- When connecting ECM harness connector (1), fasten (B) it securely with a lever as far as it will go as shown in the figure.
 - 2. ECM
 - A. Loosen

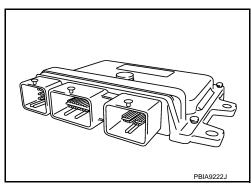

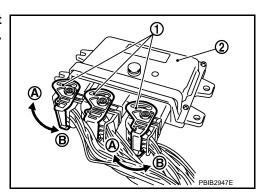

Ρ

M

N

EC


D


Е


INFOID:0000000008450962


< PRECAUTION >

- When connecting or disconnecting pin connectors into or from ECM, take care not to damage pin terminals (bend or break).
 - Make sure that there are not any bends or breaks on ECM pin terminal, when connecting pin connectors.
- Securely connect ECM harness connectors.
 A poor connection can cause an extremely high (surge) voltage to develop in coil and condenser, thus resulting in damage to ICs.
- Keep engine control system harness at least 10 cm (4 in) away from adjacent harness, to prevent engine control system malfunctions due to receiving external noise, degraded operation of ICs, etc.
- Keep engine control system parts and harness dry.
- Before replacing ECM, perform ECM Terminals and Reference Value inspection and make sure ECM functions properly. Refer to <u>EC-432</u>, "<u>Reference Value</u>".
- Handle mass air flow sensor carefully to avoid damage.
- Do not clean mass air flow sensor with any type of detergent.
- Do not disassemble electric throttle control actuator.
- Even a slight leak in the air intake system can cause serious incidents.
- Do not shock or jar the camshaft position sensor (PHASE), crankshaft position sensor (POS).

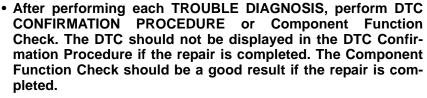

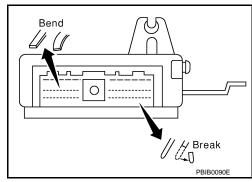


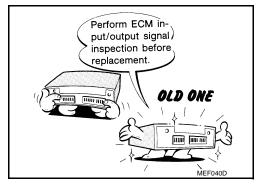

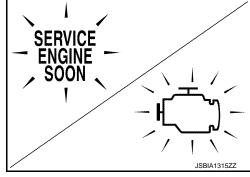


[MR18DE (EXCEPT FOR CALIFORNIA)]


 When measuring ECM signals with a circuit tester, never allow the two tester probes to contact.
 Accidental contact of probes will cause a short circuit and damage the ECM power transistor.

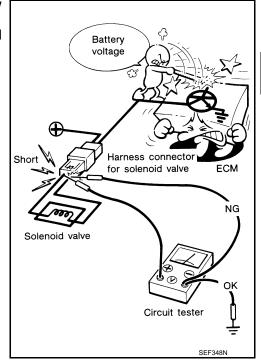

- Do not operate fuel pump when there is no fuel in lines.
- Tighten fuel hose clamps to the specified torque.
- Fuel level sensor unit and fuel pump (1)
- Fuel pressure regulator (2)
- Fuel level sensor (3)
- Fuel tank temperature sensor (4)

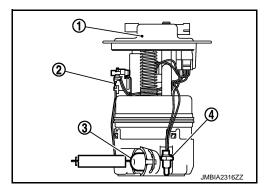

- Do not depress accelerator pedal when starting.
- Immediately after starting, do not rev up engine unnecessarily.
- Do not rev up engine just prior to shutdown.

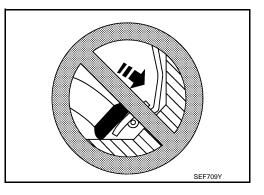

Α

EC

D

Е

F

Н

I

J

K

M

Ν

0


Р

PRECAUTIONS

< PRECAUTION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- When installing C.B. ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on installation location.
- Keep the antenna as far as possible from the electronic control units.
- Keep the antenna feeder line more than 20 cm (8 in) away from the harness of electronic controls.
 Do not let them run parallel for a long distance.
- Adjust the antenna and feeder line so that the standing-wave ratio can be kept smaller.
- Be sure to ground the radio to vehicle body.

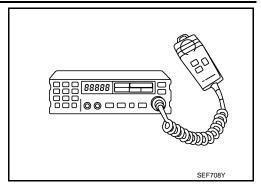

PREPARATION

[MR18DE (EXCEPT FOR CALIFORNIA)]

PREPARATION

PREPARATION

Special Service Tools

INFOID:0000000008450963

Α

EC

C

D

Е

F

Н

Κ

NOTE:

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

Tool number (Kent-Moore No.) Tool name		Description
(J-44321) Fuel pressure gauge kit	LEC642	Checks fuel pressure
(J-44321-6) Fuel pressure adapter	LBIA0376E	Connects fuel pressure gauge to quick connector type fuel lines.
KV10118400 Fuel tube adapter		Measures fuel pressure
	PBIB3043E	

Commercial Service Tools

INFOID:00000000008450964

Tool name (Kent-Moore No.)		Description	M
Leak detector		Locates the EVAP leak	- 101
i.e.: (J-41416)			Ν
	S-NT703		0
EVAP service port adapter		Applies positive pressure through EVAP service port	Р
i.e.: (J-41413-OBD)			
	S-NT704		_

PREPARATION

< PREPARATION >

[MR18DE (EXCEPT FOR CALIFORNIA)]

PREPARATION >		[IIIIX TOBE (EXCEPT TOR GAEII GRAIN)]
Tool name (Kent-Moore No.)		Description
Fuel filler cap adapter i.e.: (MLR-8382)		Checks fuel tank vacuum relief valve opening pressure
	S-NT815	
Socket wrench	19 mm (0.75 in) Nore than 32 mm (1.26 in)	Removes and installs engine coolant temperature sensor
Oxygen sensor thread cleaner i.e.: (J-43897-18) (J-43897-12)	a Mating surface shave cylinder	Reconditions the exhaust system threads before installing a new oxygen sensor. Use with antiseize lubricant shown below. a: 18 mm diameter with pitch 1.5 mm for Zirconia Oxygen Sensor b: 12 mm diameter with pitch 1.25 mm for Titania Oxygen Sensor
Anti-seize lubricant i.e.: (Permatex TM 133AR or equivalent meeting MIL specifica- tion MIL-A-907)	S-NT779	Lubricates oxygen sensor thread cleaning tool when reconditioning exhaust system threads.

PERIODIC MAINTENANCE

FUEL PRESSURE

Inspection EC

FUEL PRESSURE RELEASE

(P) With CONSULT

- 1. Turn ignition switch ON.
- Perform "FUEL PRESSURE RELEASE" in "WORK SUPPORT" mode with CONSULT.
- 3. Start engine.
- 4. After engine stalls, crank it two or three times to release all fuel pressure.
- 5. Turn ignition switch OFF.

N Without CONSULT

- 1. Remove fuel pump fuse located in IPDM E/R.
- Start engine.
- 3. After engine stalls, crank it two or three times to release all fuel pressure.
- 4. Turn ignition switch OFF.
- Reinstall fuel pump fuse after servicing fuel system.


FUEL PRESSURE CHECK

CAUTION:

Before disconnecting fuel line, release fuel pressure from fuel line to eliminate danger.

NOTE:

- Prepare pans or saucers under the disconnected fuel line because the fuel may spill out. The fuel
 pressure cannot be completely released because C11 models do not have fuel return system.
- The fuel hose connection method used when taking fuel pressure check must not be used for other purposes.
- Be careful not to scratch or put debris around connection area when servicing, so that the quick connector maintains seal ability with O-rings inside.
- Do not perform fuel pressure check with electrical systems operating (i.e. lights, rear defogger, A/C, etc.) Fuel pressure gauge may indicate false readings due to varying engine load and changes in manifold vacuum.
- 1. Release fuel pressure to zero. Refer to "FUEL PRESSURE RELEASE".
- Prepare fuel hose for fuel pressure check B and fuel tube adapter (KV10118400) D, then connect fuel pressure gauge A.
 - <: To quick connector
 - **(=:** To fuel tube (engine side)
 - C: Clamp
 - Use suitable fuel hose for fuel pressure check (genuine NIS-SAN fuel hose without quick connector).
 - To avoid unnecessary force or tension to hose, use moderately long fuel hose for fuel pressure check.
 - Do not use the fuel hose for checking fuel pressure with damage or cracks on it.
 - Use Pressure Gauge to check fuel pressure.
- 3. Remove fuel hose. Refer to EM-37, "Removal and Installation".
 - Do not twist or kink fuel hose because it is plastic hose.

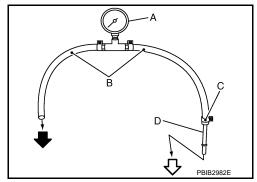

)

L

M

N

Α

Е

Н

Revision: 2012 August EC-473 2013 CUBE

FUEL PRESSURE

< PERIODIC MAINTENANCE >

[MR18DE (EXCEPT FOR CALIFORNIA)]

- 4. Connect fuel hose for fuel pressure check (1) to fuel tube (engine side) with clamp (2) as shown in the figure.
 - No.2 spool (5)
 - Wipe off oil or dirt from hose insertion part using cloth moistened with gasoline.
 - Apply proper amount of gasoline between top of the fuel tube (3) and No.1 spool (4).
 - Insert fuel hose for fuel pressure check until it touches the No.1 spool on fuel tube.
 - Use NISSAN genuine hose clamp (part number: 16439 N4710 or 16439 40U00).
 - When reconnecting fuel line, always use new clamps.
 - Use a torque driver to tighten clamps.
 - Install hose clamp to the position within 1 2 mm (0.04 0.08 in).

Tightening torque: 1 - 1.5 N·m (0.1 - 0.15 kg-m, 9 - 13 in-lb)

- Make sure that clamp screw does not contact adjacent parts.
- . Connect fuel tube adapter to quick connector.
 - · A: Fuel pressure gauge
 - B: Fuel hose for fuel pressure check
- After connecting fuel hose for fuel pressure check, pull the hose with a force of approximately 98 N (10 kg, 22 lb) to confirm fuel tube does not come off.
- 7. Turn ignition switch ON and check for fuel leakage.
- 8. Start engine and check for fuel leakage.
- 9. Read the indication of fuel pressure gauge.
 - Do not perform fuel pressure check with system operating.
 Fuel pressure gauge may indicate false readings.
 - During fuel pressure check, confirm for fuel leakage from fuel connection every 3 minutes.


At idling: Approximately 350 kPa (3.57 kg/cm², 51 psi)


- 10. If result is unsatisfactory, go to next step.
- 11. Check the following.
 - Fuel hoses and fuel tubes for clogging
 - · Fuel filter for clogging
 - Fuel pump
 - · Fuel pressure regulator for clogging

If OK, replace fuel pressure regulator.

If NG, repair or replace.

12. Before disconnecting Fuel Pressure Gauge and Fuel Pressure Adapter J-44321-6, release fuel pressure to zero. Refer to "FUEL PRESSURE RELEASE".

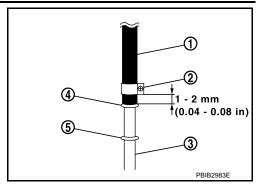

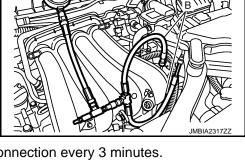

2013 CUBE

EVAP LEAK CHECK


Inspection INFOID:000000008450966


CAUTION:

- Do not use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in EVAP system. NOTE:
- Do not start engine.
- Improper installation of EVAP service port adapter [commercial service tool: (J-41413-OBD)] to the EVAP service port may cause a leak.


(P) WITH CONSULT

- Install EVAP service port adapter [commercial service tool: (J-41413-OBD)] and pressure pump to EVAP service port.
- 2. Turn ignition switch ON.
- 3. Select the "EVAP SYSTEM CLOSE" of "WORK SUPPORT" mode with CONSULT.
- 4. Touch "START". A bar graph (Pressure indicating display) will appear on the screen.
- 5. Apply positive pressure to the EVAP system until the pressure indicator reaches the middle of the bar graph.
- Remove EVAP service port adapter [commercial service tool: (J-41413-OBD)] and hose with pressure pump.
- Locate the leak using a leak detector [commercial service tool: (J-41416)]. Refer to <u>EC-87</u>, "System Description".

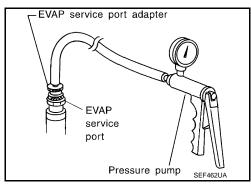

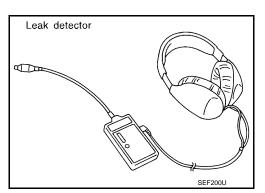

- Install EVAP service port adapter [commercial service tool: (J-41413-OBD)] and pressure pump to EVAP service port.
- 2. Apply battery voltage between the terminals of EVAP canister vent control valve to make a closed EVAP system.
- To locate the leak, deliver positive pressure to the EVAP system until pressure gauge points reach 1.38 to 2.76 kPa (0.014 to 0.028 kg/cm², 0.2 to 0.4 psi).
- Remove EVAP service port adapter [commercial service tool: (J-41413-OBD)] and hose with pressure pump.

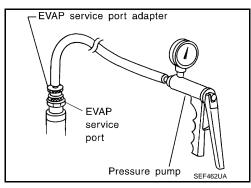

EC

Α

D

Е

F

Н

J

K

L

M

Ν

0


Ρ

EVAP LEAK CHECK

< PERIODIC MAINTENANCE >

[MR18DE (EXCEPT FOR CALIFORNIA)]

 Locate the leak using a leak detector [commercial service tool: (J-41416)]. Refer to <u>EC-87</u>, "System <u>Description"</u>.

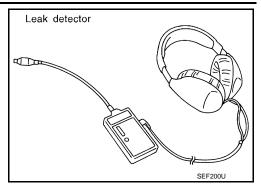

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[MR18DE (EXCEPT FOR CALIFORNIA)]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Idle Speed

Transmission	Condition	Specification
CVT	No load* (in P or N position)	700 ± 50 rpm
M/T	No load* (in Neutral position)	700 ± 50 rpm

^{*:} Under the following conditions

· A/C switch: OFF

· Electric load: OFF (Lights, heater fan & rear window defogger)

• Steering wheel: Kept in straight-ahead position

Ignition Timing

Transmission	Condition	Specification
CVT	No load* (in P or N position)	13 ± 5°BTDC
M/T	No load* (in Neutral position)	13 ± 5°BTDC

^{*:} Under the following conditions

· A/C switch: OFF

• Electric load: OFF (Lights, heater fan & rear window defogger)

• Steering wheel: Kept in straight-ahead position

Calculated Load Value

Condition	Specification (Using CONSULT or GST)	
At idle	10 – 35 %	
At 2,500 rpm	10 – 35 %	

Mass Air Flow Sensor

Supply voltage	Battery voltage (11 – 14 V)	
Output voltage at idle	0.9 – 1.3V*	
Mass air flow (Using CONSULT or GST)	1.0 – 4.0 g/sec at idle* 2.0 – 10.0 g/sec at 2,500 rpm*	

^{*:} Engine is warmed up to normal operating temperature and running under no load.

EC

Α

D

Е

F

Н

INFOID:0000000008450969

INFOID:0000000008450970

INFOID:0000000008450968

L

N

M

U


Ρ

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

OVERALL SEQUENCE

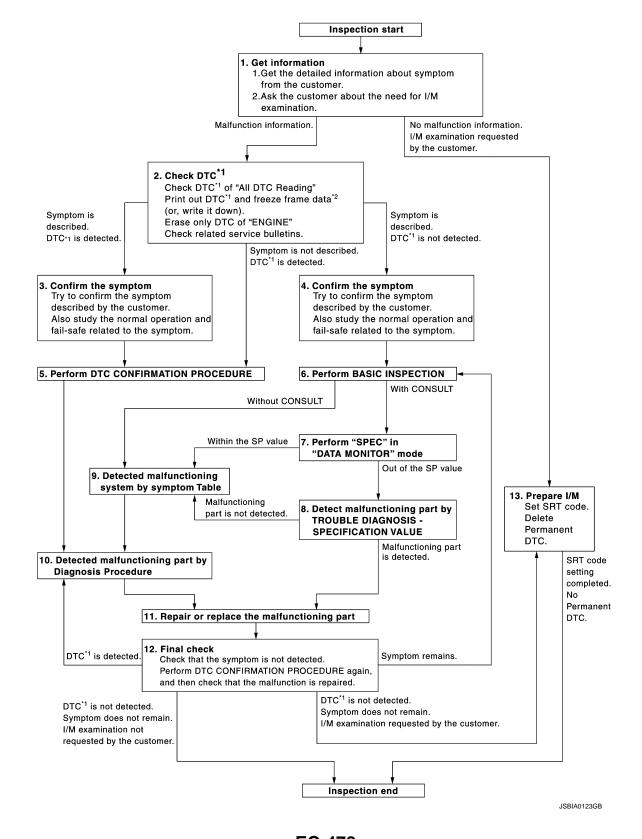

< BASIC INSPECTION >

[MR18DE (FOR CALIFORNIA)]

*1: Include 1st trip DTC.

*2: Include 1st trip freeze frame data.

DETAILED FLOW

1.GET INFORMATION FOR SYMPTOM

EC

D

Е

Н

N

Α

- Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred) using the "Diagnostic Work Sheet". (Refer to <u>EC-481</u>, "<u>Diagnostic</u> <u>Work Sheet"</u>.)
- 2. Ask if the customer requests I/M examination.

Malfunction information, obtained>>GO TO 2.

No Malfunction information, but a request for I/M examination>>GO TO 13.

2.CHECK DTC

1. Check DTC of "All DTC Reading".

- Perform the following procedure if DTC is displayed.
- Record DTC and freeze frame data. (Print them out with CONSULT or GST.)
- Erase only DTC of "ENGINE".
 - (X) With CONSULT: Refer to "How to Erase DTC and 1st Trip DTC" in EC-588, "CONSULT Function".
 - Without CONSULT: Refer to "How to Erase Self-diagnostic Results" in EC-585, "On Board Diagnosis Function".
- Turn ignition switch OFF.
- Study the relationship between the cause detected by DTC and the symptom described by the customer. (Symptom Table is useful. Refer to EC-949, "Symptom Table".)
- 3. Check related service bulletins for information.

Are any symptoms described and any DTCs detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3.confirm the symptom

Try to confirm the symptom described by the customer (except MIL ON).

Also study the normal operation and fail-safe related to the symptom. Refer to <u>EC-953, "Description"</u> and <u>EC-934, "Fail Safe"</u>.

Diagnosis Work Sheet is useful to verify the incident.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom. Refer to <u>EC-953</u>, "<u>Description</u>" and <u>EC-934</u>, "Fail Safe".

Diagnosis Work Sheet is useful to verify the incident.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5.PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the displayed DTC, and then make sure that DTC is detected again.

If two or more DTCs are detected, refer to EC-936, "DTC Inspection Priority Chart" and determine trouble diagnosis order.

NOTE:

Freeze frame data is useful if the DTC is not detected.

Revision: 2012 August EC-479 2013 CUBE

< BASIC INSPECTION >

[MR18DE (FOR CALIFORNIA)]

 Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIR-MATION PROCEDURE.

Is DTC detected?

YES >> GO TO 10.

NO >> Check according to GI-41, "Intermittent Incident".

6. PERFORM BASIC INSPECTION

Perform EC-483, "BASIC INSPECTION: Special Repair Requirement".

Do you have CONSULT?

YES >> GO TO 7. NO >> GO TO 9.

7. PERFORM SPEC IN DATA MONITOR MODE

(F)With CONSULT

Make sure that "MAS A/F SE-B1", "MAS A/F SE-B2", "B/FUEL SCHDL", "A/F ALPHA-B1" and "A/F ALPHA-B2" are within the SP value using CONSULT "SPEC" in "DATA MONITOR" mode of "ENGINE". Refer to EC-597, "Component Function Check".

Is the measurement value within the SP value?

YES >> GO TO 9.

NO >> GO TO 8.

$oldsymbol{\delta}$.DETECT MALFUNCTIONING PART BY TROUBLE DIAGNOSIS - SPECIFICATION VALUE

Detect malfunctioning part according to <a>EC-598, "Diagnosis Procedure".

Is a malfunctioning part detected?

YES >> GO TO 11. NO >> GO TO 9.

$9.\mathsf{DETECT}$ MALFUNCTIONING SYSTEM BY SYMPTOM TABLE

Detect malfunctioning system according to <u>EC-949</u>, "Symptom Table" based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptoms.

>> GO TO 10.

10. DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

Inspect according to Diagnosis Procedure of the system.

NOTE:

The Diagnosis Procedure in EC section described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnosis Procedure. For details, refer to GI-44. "Circuit Inspection".

Is a malfunctioning part detected?

YES >> GO TO 11.

NO >> Monitor input data from related sensors or check voltage of related ECM terminals using CON-SULT. Refer to EC-918, "Reference Value".

11. REPAIR OR REPLACE THE MALFUNCTIONING PART

- 1. Repair or replace the malfunctioning part.
- Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
- Check DTC. If DTC is displayed, erase it.
 - (R) With CONSULT: Refer to "How to Erase DTC and 1st Trip DTC" in EC-588, "CONSULT Function".
 - Without CONSULT: Refer to "How to Erase Self-diagnostic Results" in EC-585, "On Board Diagnosis Function".

>> GO TO 12.

< BASIC INSPECTION >

[MR18DE (FOR CALIFORNIA)]

12. FINAL CHECK

When DTC was detected in step 2, perform DTC CONFIRMATION PROCEDURE or Component Function Check again, and then make sure that the malfunction have been completely repaired.

When symptom was described from the customer, refer to confirmed symptom in step 3 or 4, and make sure that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 10.

YES-2 >> Symptom remains: GO TO 6.

NO-1 >> No request for I/M examination from the customer: Before returning the vehicle to the customer, always erase unnecessary DTC in ECM and TCM (®) With CONSULT: Refer to "How to Read DTC and 1st Trip DTC" in EC-588, "CONSULT Function", ® Without CONSULT: Refer to "How to Read Self-diagnostic Results" in EC-585, "On Board Diagnosis Function").

NO-2 >> I/M examination, requested from the customer: GO TO 13.

13. PREPARE FOR I/M EXAMINATION

- 1. Set SRT codes. Refer to EC-492, "Description".
- 2. Erase permanent DTCs. Refer to <a>EC-498, "Description".

>> INSPECTION END.

Diagnostic Work Sheet

DESCRIPTION

There are many operating conditions that lead to the malfunction of engine components. A good grasp of such conditions can make troubleshooting faster and more accurate.

In general, each customer feels differently about an incident. It is important to fully understand the symptoms or conditions for a customer complaint.

Utilize a diagnostic worksheet like the WORKSHEET SAMPLE below in order to organize all the information for troubleshooting. Some conditions may cause the MIL to illuminate steady or blink and DTC to be detected. Examples:

- Vehicle ran out of fuel, which caused the engine to misfire.
- Fuel filler cap was left off or incorrectly screwed on, allowing fuel to evaporate into the atmosphere.

KEY POINTS

WHAT Vehicle & engine model
WHEN Date, Frequencies
WHERE..... Road conditions
HOW Operating conditions,
Weather conditions,
Symptoms

SEF907L

INFOID:0000000008450972

,

K

Α

EC

D

Е

F

N

0

Р

Revision: 2012 August EC-481 2013 CUBE

< BASIC INSPECTION >

[MR18DE (FOR CALIFORNIA)]

WORKSHEET SAMPLE

Customer nar	ne MR/MS	Model & Year VIN		
Engine #		Trans. Mileage		
Incident Date		Manuf. Date In Service Date		
Fuel and fuel	filler cap	☐ Vehicle ran out of fuel causing misfire ☐ Fuel filler cap was left off or incorrectly screwed on.		
	☐ Startability	☐ Impossible to start ☐ No combustion ☐ Partial combustion ☐ Partial combustion affected by throttle position ☐ Partial combustion NOT affected by throttle position ☐ Possible but hard to start ☐ Others [
Symptoms	□ Idling	☐ No fast idle ☐ Unstable ☐ H☐ Others [ligh idle □ Low idle]	
-,	☐ Driveability	☐ Stumble ☐ Surge ☐ Knock☐ Intake backfire ☐ Exhaust backfi☐ Others [☐ Lack of power re]	
	☐ Engine stall	☐ At the time of start ☐ While idling ☐ While accelerating ☐ While dece ☐ Just after stopping ☐ While loadi	lerating	
Incident occur	rrence	☐ Just after delivery ☐ Recently ☐ In the morning ☐ At night [☐ In the daytime	
Frequency		☐ All the time ☐ Under certain conditions ☐ Sometimes		
Weather cond	litions	☐ Not affected		
	Weather	☐ Fine ☐ Raining ☐ Snowing	Others [
	Temperature	☐ Hot ☐ Warm ☐ Cool ☐	Cold ☐ Humid °F	
		☐ Cold ☐ During warm-up ☐	After warm-up	
Engine conditions		Engine speed0 2,000	4,000 6,000 8,000 rpm	
Road conditions		☐ In town ☐ In suburbs ☐ Hig	hway	
Driving conditions		☐ While accelerating ☐ While cruis ☐ While decelerating ☐ While turning	S	
		Vehicle speed	30 40 50 60 MPH	
Malfunction in	dicator lamp	☐ Turned on ☐ Not turned on		

MTBL0017

INSPECTION AND ADJUSTMENT BASIC INSPECTION

BASIC INSPECTION: Special Repair Requirement

INFOID:0000000008450973

Α

EC

D


Е


F

Н

1.INSPECTION START

- Check service records for any recent repairs that may indicate a related malfunction, or a current need for scheduled maintenance.
- 2. Open engine hood and check the following:
- Harness connectors for improper connections
- Wiring harness for improper connections, pinches and cut
- Vacuum hoses for splits, kinks and improper connections
- Hoses and ducts for leaks
- Air cleaner clogging
- Gasket
- 3. Confirm that electrical or mechanical loads are not applied.
- Headlamp switch is OFF.
- Air conditioner switch is OFF.
- Rear window defogger switch is OFF.
- Steering wheel is in the straight-ahead position, etc.
- 4. Start engine and warm it up until engine coolant temperature indicator points the middle of gauge. Ensure engine stays below 1,000 rpm.

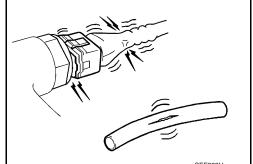


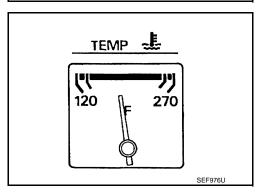

- Run engine at about 2,000 rpm for about 2 minutes under no load
- Make sure that no DTC is displayed with CONSULT or GST.

Is any DTC detected?

YES >> GO TO 2. NO >> GO TO 3.

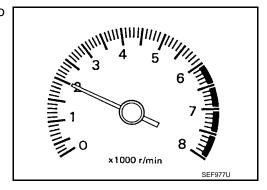

2.repair or replace

Repair or replace components as necessary according to corresponding Diagnostic Procedure.

>> GO TO 3

3.CHECK IDLE SPEED

Run engine at about 2,000 rpm for about 2 minutes under no load.

M

Ν

EC-483 Revision: 2012 August 2013 CUBE

< BASIC INSPECTION >

[MR18DE (FOR CALIFORNIA)]


2. Rev engine (2,000 to 3,000 rpm) two or three times under no load, then run engine at idle speed for about 1 minute.

3. Check idle speed.

For procedure, refer to <u>EC-486</u>, "IDLE <u>SPEED</u>: <u>Special Repair Requirement"</u>. For specification, refer to <u>EC-965</u>, "Idle <u>Speed"</u>.

Is the inspection result normal?

YES >> GO TO 10. NO >> GO TO 4.

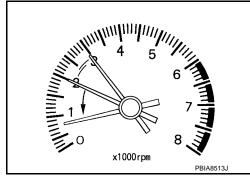

4. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

- 1. Stop engine.
- 2. Perform EC-488, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".

>> GO TO 5.

${f 5.}$ PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Perform EC-488, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 6.

6. PERFORM IDLE AIR VOLUME LEARNING

Perform EC-489, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

Is Idle Air Volume Learning carried out successfully?

YES >> GO TO 7.

NO >> Follow the instruction of Idle Air Volume Learning. Then GO TO 4.

7.CHECK IDLE SPEED AGAIN

- 1. Start engine and warm it up to normal operating temperature.
- 2. Check idle speed.

For procedure, refer to EC-486, "IDLE SPEED: Special Repair Requirement".

For specification, refer to EC-965, "Idle Speed".

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 8.

8. DETECT MALFUNCTIONING PART

Check the Following.

- Check camshaft position sensor (PHASE) and circuit. Refer to <u>EC-726, "DTC Logic"</u>.
- Check crankshaft position sensor (POS) and circuit. Refer to <u>EC-722, "DTC Logic"</u>.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace. Then GO TO 4.

9. CHECK ECM FUNCTION

- 1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of an incident, but this is rare.)
- 2. Perform initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs. Refer to SEC-9, "ECM: Special Repair Requirement" or SEC-154, "ECM: Special Repair Requirement".

>> GO TO 4.

10. CHECK IGNITION TIMING

- Run engine at idle.
- 2. Check ignition timing with a timing light.

Revision: 2012 August EC-484 2013 CUBE

[MR18DE (FOR CALIFORNIA)]

< BASIC INSPECTION > For procedure, refer to EC-487, "IGNITION TIMING: Special Repair Requirement". For specification, refer to EC-965, "Ignition Timing". Α Is the inspection result normal? YES >> GO TO 19. NO >> GO TO 11. EC 11. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING Stop engine. Perform EC-488, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement". D >> GO TO 12. 12.perform throttle valve closed position learning Perform EC-488. "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement". >> GO TO 13. 13.perform idle air volume learning Perform EC-489, "IDLE AIR VOLUME LEARNING: Special Repair Requirement". Is Idle Air Volume Learning carried out successfully? YES >> GO TO 14. >> Follow the instruction of Idle Air Volume Learning. Then GO TO 4. NO 14. CHECK IDLE SPEED AGAIN Н Start engine and warm it up to normal operating temperature. Check idle speed. For procedure, refer to EC-486, "IDLE SPEED: Special Repair Requirement". For specification, refer to EC-965, "Idle Speed". Is the inspection result normal? YES >> GO TO 15. NO >> GO TO 17. 15. CHECK IGNITION TIMING AGAIN Run engine at idle. 2. Check ignition timing with a timing light. For procedure, refer to EC-487, "IGNITION TIMING: Special Requirement". For specification, refer to EC-965, "Ignition Timing". Is the inspection result normal? YES >> GO TO 19. M NO >> GO TO 16. 16.check timing chain installation Check timing chain installation. Refer to EM-45, "Removal and Installation". Is the inspection result normal? YES >> GO TO 17. NO >> Repair the timing chain installation. Then GO TO 4. 17.DETECT MALFUNCTIONING PART Check the following. Check camshaft position sensor (PHASE) and circuit. Refer to <u>EC-726, "DTC Logic"</u>. Check crankshaft position sensor (POS) and circuit. Refer to EC-722, "DTC Logic". Is the inspection result normal? YES >> GO TO 18. NO >> Repair or replace. Then GO TO 4. 18,check ecm function

< BASIC INSPECTION >

[MR18DE (FOR CALIFORNIA)]

- 1. Substitute another known-good ECM to check ECM function. (ECM may be the cause of an incident, but this is rare.)
- Perform initialization of NVIS (NATS) system and registration of all NVIS (NATS) ignition key IDs. Refer to EC-486, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement".

>> GO TO 4.

19. INSPECTION END

If ECM is replaced during this BASIC INSPECTION procedure, perform <u>EC-486</u>, "ADDITIONAL SERVICE <u>WHEN REPLACING CONTROL UNIT : Special Repair Requirement"</u>.

>> INSPECTION END

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Description

INFOID:0000000008450974

When replacing ECM, this procedure must be performed.

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement

${f 1}$.PERFORM INITIALIZATION OF NATS SYSTEM AND REGISTRATION OF ALL NATS IGNITION KEY IDS

Refer to SEC-9, "ECM: Special Repair Requirement" or SEC-154, "ECM: Special Repair Requirement".

>> GO TO 2.

2. PERFORM VIN REGISTRATION

Refer to EC-487, "VIN REGISTRATION: Special Repair Requirement".

>> GO TO 3.

3. PERFORM ACCELERATOR PEDAL RELEASED POSITION LEARNING

Refer to EC-488, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".

>> GO TO 4.

4. PERFORM THROTTLE VALVE CLOSED POSITION LEARNING

Refer to EC-488, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

>> GO TO 5.

5. PERFORM IDLE AIR VOLUME LEARNING

Refer to EC-489, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

>> END
IDLE SPEED

IDLE SPEED: Description

This describes how to check the idle speed. For the actual procedure, follow the instructions in "BASIC INSPECTION".

IDLE SPEED : Special Repair Requirement

1. CHECK IDLE SPEED

Revision: 2012 August EC-486 2013 CUBE

INFOID:0000000008450976

INFOID:0000000008450977

< BASIC INSPECTION >

[MR18DE (FOR CALIFORNIA)]

(P)With CONSULT

Check idle speed in "DATA MONITOR" mode with CONSULT.

■With GST

Check idle speed with Service \$01 of GST.

>> INSPECTION END

IGNITION TIMING

IGNITION TIMING: Description

INFOID:0000000008450978

Α

EC

Е

This describes how to check the ignition timing. For the actual procedure, follow the instructions in "BASIC INSPECTION".


IGNITION TIMING: Special Repair Requirement

INFOID:0000000008450979

1. CHECK IGNITION TIMING

1. Attach timing light to No. 1 ignition coil (1) wire as shown.


: Vehicle front

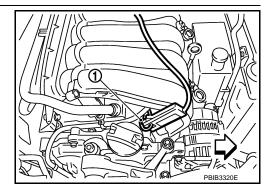

Check ignition timing.

1 : Timing indicator

>> INSPECTION END

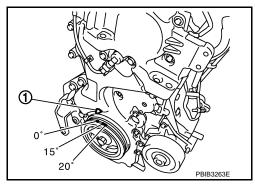

VIN REGISTRATION

VIN REGISTRATION : Description

INFOID:0000000008450980

VIN Registration is an operation to registering VIN in ECM. It must be performed each time ECM is replaced. NOTE:

Accurate VIN which is registered in ECM may be required for Inspection & Maintenance (I/M).

VIN REGISTRATION: Special Repair Requirement

INFOID:0000000008450981

1.CHECK VIN

Check the VIN of the vehicle and note it. Refer to GI-23, "Model Variation".

>> GO TO 2.

2.PERFORM VIN REGISTRATION

(P)With CONSULT

Turn ignition switch ON and engine stopped.

Select "VIN REGISTRATION" in "WORK SUPPORT" mode.

EC-487 Revision: 2012 August 2013 CUBE

< BASIC INSPECTION >

[MR18DE (FOR CALIFORNIA)]

Follow the instruction of CONSULT display.

>> END

ACCELERATOR PEDAL RELEASED POSITION LEARNING

ACCELERATOR PEDAL RELEASED POSITION LEARNING: Description INFOID.00000008450982

Accelerator Pedal Released Position Learning is a function of ECM to learn the fully released position of the accelerator pedal by monitoring the accelerator pedal position sensor output signal. It must be performed each time harness connector of accelerator pedal position sensor or ECM is disconnected.

ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement

1.START

- Make sure that accelerator pedal is fully released.
- Turn ignition switch ON and wait at least 2 seconds.
- Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON and wait at least 2 seconds.
- 5. Turn ignition switch OFF and wait at least 10 seconds.

>> END

THROTTLE VALVE CLOSED POSITION LEARNING

THROTTLE VALVE CLOSED POSITION LEARNING: Description

INFOID:0000000008450984

Throttle Valve Closed Position Learning is a function of ECM to learn the fully closed position of the throttle valve by monitoring the throttle position sensor output signal. It must be performed each time the harness connector of the electric throttle control actuator or ECM is disconnected or electric throttle control actuator inside is cleaned.

THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement

INFOID:0000000008450985

INFOID:0000000008450986

1.START

(I) With CONSULT

- 1. Turn ignition switch ON.
- Select "CLSD THL POS LEARN" in "WORK SUPPORT" mode of "ENGINE" using CONSULT.
- 3. Follow the instructions on the CONSULT display.
- Turn ignition switch OFF and wait at least 10 seconds.
 Check that throttle valve moves during the above 10 seconds by confirming the operating sound.

®Without CONSULT

- 1. Make sure that accelerator pedal is fully released.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

 Make sure that throttle valve moves during above 10 seconds by confirming the operating sound.

>> END

IDLE AIR VOLUME LEARNING

IDLE AIR VOLUME LEARNING: Description

Idle Air Volume Learning is a function of ECM to learn the idle air volume that keeps each engine idle speed within the specific range. It must be performed under any of the following conditions:

- Each time electric throttle control actuator or ECM is replaced.
- Idle speed or ignition timing is out of specification.

< BASIC INSPECTION >

[MR18DE (FOR CALIFORNIA)]

IDLE AIR VOLUME LEARNING: Special Repair Requirement INFOID:0000000008450987 Α 1.PRECONDITIONING Make sure that all of the following conditions are satisfied. EC Learning will be cancelled if any of the following conditions are missed for even a moment. Battery voltage: More than 12.9 V (At idle) Engine coolant temperature: 70 - 100°C (158 - 212°F) Selector lever: P or N (CVT), Neutral (M/T) Electric load switch: OFF (Air conditioner, headlamp, rear window defogger) On vehicles equipped with daytime light systems, if the parking brake is applied before the engine is D started the headlamp will not be illuminated. Steering wheel: Neutral (Straight-ahead position) Vehicle speed: Stopped Transmission: Warmed-up Е - CVT models With CONSULT: Drive vehicle until "FLUID TEMP SE" in "DATA MONITOR" mode of "TRANSMISSION" system indicates less than 0.9 V. Without CONSULT: Drive vehicle for 10 minutes. M/T models Drive vehicle for 10 minutes. Do you have CONSULT? YES >> GO TO 2. NO >> GO TO 3. Н 2.IDLE AIR VOLUME LEARNING (P)With CONSULT Perform Accelerator Pedal Released Position Learning. Refer to EC-488, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement". Perform Throttle Valve Closed Position Learning. Refer to EC-488. "THROTTLE VALVE CLOSED POSI-TION LEARNING: Special Repair Requirement". 3. Start engine and warm it up to normal operating temperature. Select "IDLE AIR VOL LEARN" in "WORK SUPPORT" mode. Touch "START" and wait 20 seconds. Is "CMPLT" displayed on CONSULT screen? YES >> GO TO 4. NO >> GO TO 5. ${f 3.}$ idle air volume learning It is better to count the time accurately with a clock. It is impossible to switch the diagnostic mode when an accelerator pedal position sensor circuit has a malfunction. Ν Perform Accelerator Pedal Released Position Learning, Refer to EC-488, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement". Perform Throttle Valve Closed Position Learning. Refer to EC-488, "THROTTLE VALVE CLOSED POSI-TION LEARNING: Special Repair Requirement". Start engine and warm it up to normal operating temperature. Turn ignition switch OFF and wait at least 10 seconds. Confirm that accelerator pedal is fully released, turn ignition switch ON and wait 3 seconds. Р 6. Repeat the following procedure quickly five times within 5 seconds. Fully depress the accelerator pedal. Fully release the accelerator pedal. 7. Wait 7 seconds, fully depress the accelerator pedal and keep it for approx. 20 seconds until the MIL stops blinking and turned ON.


Revision: 2012 August EC-489 2013 CUBE

Fully release the accelerator pedal within 3 seconds after the MIL turned ON.

Start engine and let it idle.

< BASIC INSPECTION >

10. Wait 20 seconds.

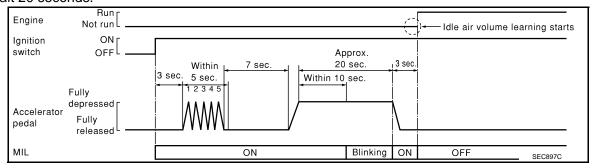

>> GO TO 4.

4. CHECK IDLE SPEED AND IGNITION TIMING

Rev up the engine two or three times and make sure that idle speed and ignition timing are within the specifications.

Item	Specification
Idle speed	CVT: 700 \pm 50 rpm (in P or N position) M/T: 700 \pm 50 rpm (in Neutral position)
Ignition timing	CVT: $13 \pm 5^{\circ}$ BTDC (in P or N position) M/T: $13 \pm 5^{\circ}$ BTDC (in Neutral position)

Is the inspection result normal?

YES >> INSPECTION END

5. DETECT MALFUNCTIONING PART

Check the following

- Check that throttle valve is fully closed.
- Check PCV valve operation.
- Check that downstream of throttle valve is free from air leakage.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace malfunctioning part.

6. DETECT MALFUNCTIONING PART

Engine component parts and their installation condition are questionable. Check and eliminate the cause of the incident.

It is useful to perform "TROUBLE DIAGNOSIS - SPECIFICATION VALUE". Refer to <u>EC-597</u>, "<u>Description</u>". If any of the following conditions occur after the engine has started, eliminate the cause of the incident and perform Idle Air Volume Learning again:

- Engine stalls.
- · Erroneous idle.

>> INSPECTION END

MIXTURE RATIO SELF-LEARNING VALUE CLEAR

MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Description

INFOID:0000000008450988

This describes how to erase the mixture ratio self-learning value. For the actual procedure, follow the instructions in "Diagnosis Procedure".

MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement

INFOID:0000000008450989

1.START

(I) With CONSULT

< BASIC INSPECTION >

[MR18DE (FOR CALIFORNIA)]

- 1. Start engine and warm it up to normal operating temperature.
- 2. Select "SELF-LEARNING CONT" in "WORK SUPPORT" mode with CONSULT.
- Clear mixture ratio self-learning value by touching "CLEAR".

With GST

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF.
- 3. Disconnect mass air flow sensor harness connector.
- 4. Restart engine and let it idle for at least 5 seconds.
- 5. Stop engine and reconnect mass air flow sensor harness connector.
- 6. Select Service \$03 with GST. Make sure DTC P0102 is detected.
- 7. Select Service \$04 with GST to erase the DTC P0102.

>> END

EC

Α

C

D

Е

F

G

Н

ī

Κ

L

M

Ν

0

Р

[MR18DE (FOR CALIFORNIA)]

HOW TO SET SRT CODE

Description INFOID:000000008450990

OUTLINE

In order to set all SRTs, the self-diagnoses as in the "SRT ITEM" table must have been performed at least once. Each diagnosis may require actual driving for a long period of time under various conditions.

SRT ITEM

The table below shows required self-diagnostic items to set the SRT to "CMPLT".

SRT item*1 (CONSULT indication)	Performance Priority*2	Required self-diagnostic items to set the SRT to "CMPLT"	Corresponding DTC No.
CATALYST	1	Three way catalyst function	P0420
EVAP SYSTEM	1	EVAP control system purge flow monitoring	P0441
	1	EVAP control system	P0456
HO2S	1	Air fuel ratio (A/F) sensor 1	P0133
		Heated oxygen sensor 2	P0137
		Heated oxygen sensor 2	P0138
		Heated oxygen sensor 2	P0139
EGR/VVT SYSTEM	2	Intake value timing control function	P0011

^{*1:} Though displayed on the CONSULT screen, "HO2S HTR" is not SRT item.

SRT SERVICE PROCEDURE


^{*2:} If completion of several SRTs is required, perform driving patterns (DTC confirmation procedure), one by one based on the priority for models with CONSULT.

HOW TO SET SRT CODE

< BASIC INSPECTION >

[MR18DE (FOR CALIFORNIA)]

If a vehicle has failed the state emissions inspection due to one or more SRT items indicating "INCMP", review the flowchart diagnostic sequence, referring to the following flowchart.

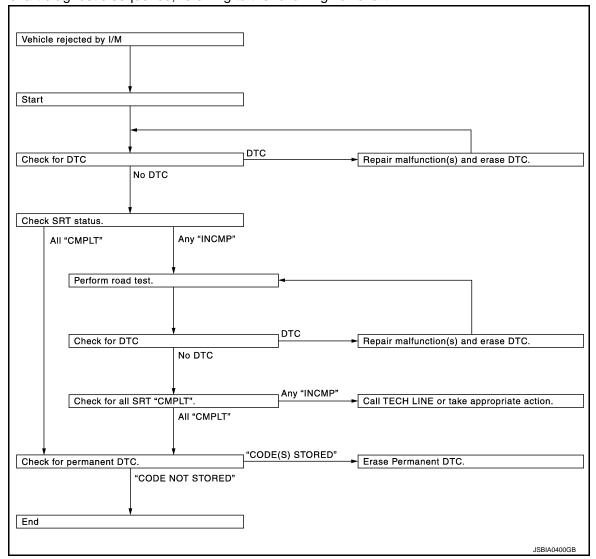

SRT Set Driving Pattern

CAUTION:

EC

Α

D

Е

F

G

Н

J

K

INFOID:0000000008450991

N


M

0

Р

JPBIA5320GB

Always drive the vehicle in safe manner according to traffic conditions and obey all traffic laws.

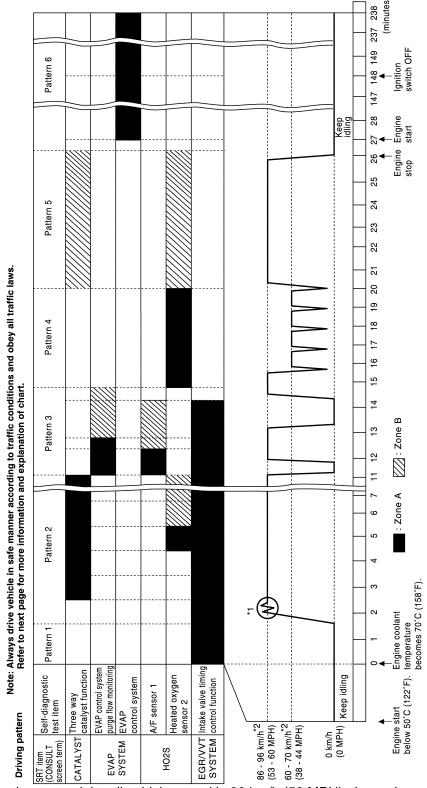

^{*1:} Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH), then release the accelerator pedal and keep it released for more than 10 seconds. Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH) again.

^{*2:} Checking the vehicle speed with GST is advised.

[•] The time required for each diagnosis varies with road surface conditions, weather, altitude, individual driving habits, etc.

^{• &}quot;Zone A" is the fastest time where required for the diagnosis under normal conditions*. If the diagnosis is not completed within "Zone A", the diagnosis can still be performed within "Zone B".

HOW TO SET SRT CODE [MR18DE (FOR CALIFORNIA)] < BASIC INSPECTION > *: Normal conditions Sea level Α Flat road Ambient air temperature: 20 – 30°C (68 – 86°F) Diagnosis is performed as quickly as possible under normal conditions. However, under other conditions, diagnosis may also be performed. [For example: ambient air temperature other than 20 – 30°C (68 – 86°F)] Work Procedure 1. CHECK DTC Check DTC. Is any DTC detected? YES >> Repair malfunction(s) and erase DTC. Refer to EC-938, "DTC Index". NO >> GO TO 2. 2.CHECK SRT STATUS (P)With CONSULT Select "SRT STATUS" in "DTC & SRT CONFIRMATION" mode with CONSULT. Perform "SRT status" mode with EC-585, "On Board Diagnosis Function". Select Service \$01 with GST. Is SRT code(s) set? >> GO TO 11. YFS NO-1 >> With CONSULT: GO TO 3. NO-2 >> Without CONSULT: GO TO 4. 3.DTC CONFIRMATION PROCEDURE Select "SRT WORK SUPPORT" in "DTC & SRT CONFIRMATION" mode with CONSULT. For SRT(s) that is not set, perform the corresponding "DTC CONFIRMATION PROCEDURE" according to the "Performance Priority" in the "SRT ITEM" table. Refer to EC-492, "Description". Check DTC. Is any DTC detected? >> Repair malfunction(s) and erase DTC. Refer to EC-938, "DTC Index". >> GO TO 10. NO 4.PERFORM ROAD TEST Check the "Performance Priority" in the "SRT ITEM" table. Refer to EC-492, "Description" • Perform the most efficient SRT set driving pattern to set the SRT properly. Refer to EC-493, "SRT Set Driv-In order to set all SRTs, the SRT set driving pattern must be performed at least once.

>> GO TO 5.

5. PATTERN 1

- Check the vehicle condition;
- Engine coolant temperature is -10 to 35°C (14 to 95°F).
- Fuel tank temperature is more than 0°C (32°F).
- Start the engine.
- Keep engine idling until the engine coolant temperature is greater than 70°C (158°F)

NOTE:

ECM terminal voltage is follows;

- Engine coolant temperature
- −10 to 35°C (14 to 95°F): 3.0 − 4.3 V
- 70°(158°F): Less than 4.1 V
- Fuel tank temperature: Less than 1.4 V

Refer to EC-918, "Reference Value".

EC

D

Е

F

Н

K

M

N

Р

>> GO TO 6.

6. PATTERN 2

- 1. Drive the vehicle. And depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH), then release the accelerator pedal and keep it released for more than 10 seconds.
- 2. Depress the accelerator pedal until vehicle speed is 90 km/h (56 MPH) again

NOTE:


- Checking the vehicle speed with GST is advised.
- When steady-state driving is performed again even after it is interrupted, each diagnosis can be conducted.
 In this case, the time required for diagnosis may be extended.

>> GO TO 7.

7. PATTERN 3

- Operate vehicle following the driving pattern shown in the figure.
- Release the accelerator pedal during deceleration of vehicle speed from 90 km/h (56 MPH) to 0 km/h (0 MPH).


>> GO TO 8.

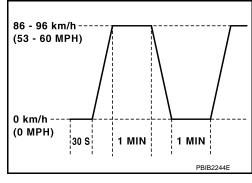

8. PATTERN 4

- Operate vehicle following the driving pattern shown in the figure.
- Drive the vehicle in a proper gear at 60 km/h (38 MPH) and maintain the speed.
- Release the accelerator pedal fully at least 5 seconds.
- Repeat the above two steps at least 5 times.

>> GO TO 9.

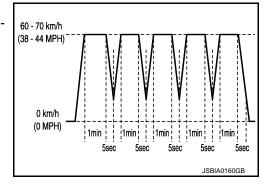

9. PATTERN 5

- The accelerator pedal must be held very steady during steady-state driving.
- If the accelerator pedal is moved, the test must be conducted again.

>> GO TO 10.

10. CHECK SRT STATUS

(P)With CONSULT

Select "SRT STATUS" in "DTC & SRT CONFIRMATION" mode with CONSULT.

Perform "SRT status" mode with EC-585. "On Board Diagnosis Function".

With GST

Select Service \$01 with GST.

Is SRT(s) set?

YES >> GO TO 11.

NO >> Call TECH LINE or take appropriate action.

11. CHECK PERMANENT DTC

HOW TO SET SRT CODE

< BASIC INSPECTION >

[MR18DE (FOR CALIFORNIA)]

	\sim	_	_	
N	(1		-	ı

Permanent DTC cannot be checked with a tool other than CONSULT or GST.

(P)With CONSULT

Select "SRT STATUS" in "DTC & SRT CONFIRMATION" mode with CONSULT.

With GST

Select Service \$0A with GST.

Is permanent DTC(s) detected?

YES >> Proceed to EC-498, "Description".

NO >> END

EC

Α

С

Е

D

F

G

Н

J

K

L

M

Ν

0

Р


HOW TO ERASE PERMANENT DTC

Description INFOID.000000008450993

OUTLINE

When a DTC is stored in ECM

When a DTC is stored in ECM and MIL is ON, a permanent DTC is erased with MIL shutoff if the same malfunction is not detected after performing the driving pattern for MIL shutoff three times in a raw.

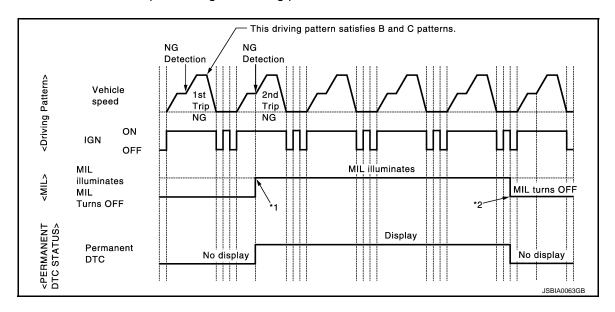

- *1: When the same malfunction is detected in two consecutive trips, MIL will illuminate.
- *2: MIL will turn off after vehicle is driven 3 times (driving pattern B) without any malfunctions.

When a DTC is not stored in ECM

The erasing method depends on a permanent DTC stored in ECM. Refer to the following table.

NOTE:

If the applicable permanent DTC incudes multiple groups, perform the procedure of Group B first. If the permanent DTC is not erased, perform the procedure of Group A.

×: Applicable —: Not applicable

Croup*	Perform "DTC CONFIRMATION PROCEDURE"	Driving pattern	
Group	for applicable DTCs.	В	D
A	×	_	_
В	_	×	×

^{*:} For group, refer to EC-938, "DTC Index".

PERMANENT DTC ITEM

For permanent DTC items, MIL turns ON. Refer to EC-938, "DTC Index".

Α

EC

D

Е

F

Н

M


Ν

0

Р

INFOID:0000000008450994

PERMANENT DTC SERVICE PROCEDURE

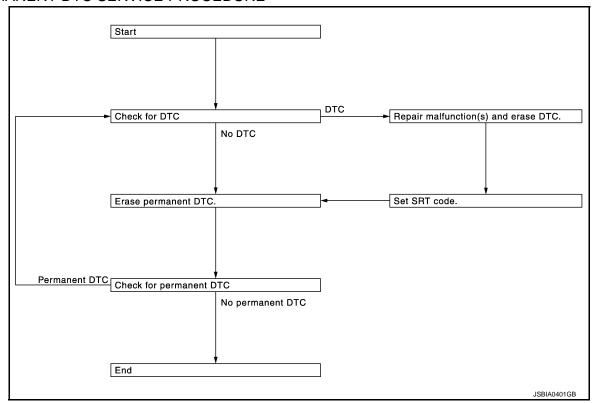

Work Procedure (Group A)

Repair applicable parts indicated by DTC. DTC CONFIRMATION PROCEDURE for applicable NG NG DTC is completed. Detection Detection <Driving Pattern> Vehicle speed 1st 2nd Trip Trip NG NG ON IGN OFF MIL MIL illuminates illuminates <MIL> MIL turns OFF MIL Turns OFF Display <DTC> DTC No display No display <PERMANENT DTC STATUS> Display Permanent No display No display DTC JSBIA0064GB *1: When the same malfunction is detected in two consecutive trips, MIL will illuminate.

1. CHECK DTC

Check DTC.

Is any DTC detected?

YES-1 >> (a) With CONSULT: Repair malfunction(s) and erase DTC. Refer to EC-588, "CONSULT Function".

YES-2 >> (a) Without CONSULT: Repair malfunction(s) and erase DTC. Refer to EC-585, "On Board Diagnosis Function".

NO >> GO TO 2.

2.CHECK PERMANENT DTC

(P)With CONSULT

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- 5. Select "PERMANENT DTC STATUS" mode with CONSULT.

@With GST

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- 5. Select Service \$0A with GST.

Is any permanent DTC detected?

YES >> GO TO 3. NO >> END

3.perform dtc confirmation procedure

Perform "DTC CONFIRMATION PROCEDURE" for DTCs which are the same as permanent DTCs stored in ECM. Refer to EC-938, "DTC Index".

>> GO TO 4.

4. CHECK PERMANENT DTC

With CONSULT

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 5. Select "PERMANENT DTC STATUS" mode with CONSULT.


With GST

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- Select Service \$0A with GST.

Is any permanent DTC detected?

YES >> GO TO 1. NO >> END Work Procedure (Group B)

INFOID:0000000008450995

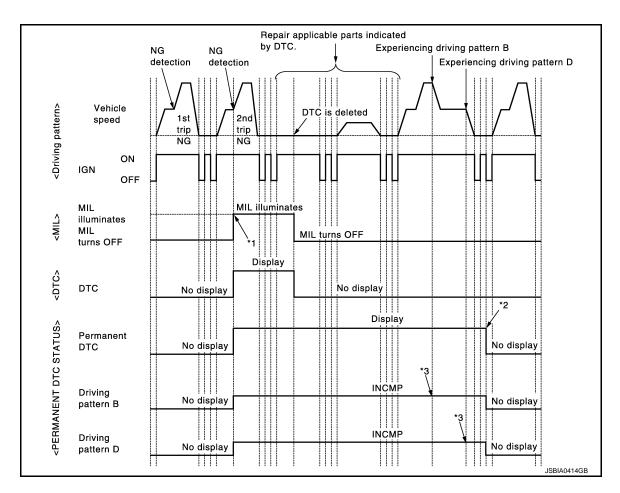

- *1: When the same malfunction is detected in two consecutive trips, MIL will illuminate.
- After experiencing driving pattern B and D, permanent DTC is erased.
- Indication does not change unless the ignition switch is turned from ON to OFF twice even after experiencing driving pattern B or D.

NOTE:

Drive the vehicle according to only driving patterns indicating "INCMP" in driving patterns B and D on the "PERMANENT DTC STATUS" screen.

1.CHECK DTC

Check DTC.

Is any DTC detected?

YES-2 >> Without CONSULT: Repair malfunction(s) and erase DTC. Refer to <u>EC-585</u>. "On Board Diagnosis Function".

NO >> GO TO 2.

2. CHECK PERMANENT DTC

With CONSULT

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- Select "PERMANENT DTC STATUS" mode with CONSULT.

With GST

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.

EC

Α

D

Е

F

G

Н

I

K

M

IV

Ν

C

Р

HOW TO ERASE PERMANENT DTC

< BASIC INSPECTION >

[MR18DE (FOR CALIFORNIA)]

- Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- Select Service \$0A with GST.

Is any permanent DTC detected?

YES >> GO TO 3. NO >> END

3.DRIVE DRIVING PATTERN B

CAUTION:

- · Always drive at a safe speed.
- Never erase self-diagnosis results.
- If self-diagnosis results are erased during the trip of driving pattern B or D, the counter of driving pattern B and D is reset.

(P)With CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- Use "PERMANENT DTC WORK SUPPORT" mode with CONSULT to drive the vehicle according to driving pattern B. Refer to EC-588, "CONSULT Function", EC-582, "DIAGNOSIS DESCRIPTION: Driving Pattern".

With GST

- 1. Start engine and warm it up to normal operating temperature.
- Drive the vehicle according to driving pattern B. Refer to <u>EC-582, "DIAGNOSIS DESCRIPTION: Driving Pattern"</u>.

>> GO TO 4.

4. CHECK PERMANENT DTC

(II) With CONSULT

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- Select "PERMANENT DTC STATUS" mode with CONSULT.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- Select Service \$0A with GST.

Is any permanent DTC detected?

YES >> GO TO 5. NO >> END

5.DRIVE DRIVING PATTERN D

CAUTION:

- Always drive at a safe speed.
- Never erase self-diagnosis results.
- If self-diagnosis results are erased during the trip of driving pattern B or D, the counter of driving pattern B and D is reset.
- Drive the vehicle according to driving pattern D. Refer to <u>EC-582</u>, "<u>DIAGNOSIS DESCRIPTION</u>: <u>Driving Pattern</u>".

>> GO TO 6.

6. CHECK PERMANENT DTC

(I) With CONSULT

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

HOW TO ERASE PERMANENT DTC

< BASIC INSPECTION >

[MR18DE (FOR CALIFORNIA)]

- 4. Turn ignition switch ON.
- 5. Select "PERMANENT DTC STATUS" mode with CONSULT.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- 5. Select Service \$0A with GST.

Is any permanent DTC detected?

YES >> GO TO 1.

NO >> END

EC

Α

С

D

Е

G

F

Н

1

Κ

L

M

Ν


0

Р

SYSTEM DESCRIPTION

ENGINE CONTROL SYSTEM

System Diagram

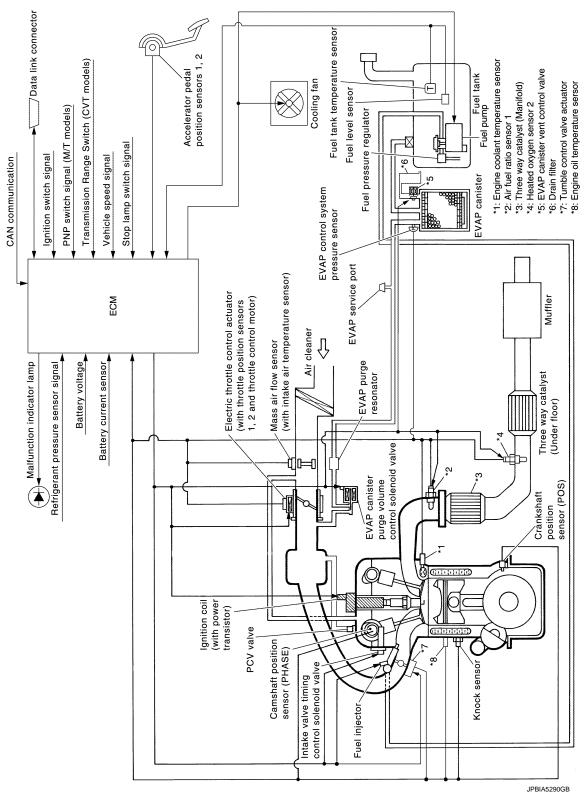

System Description

INFOID:0000000008450997

Α

EC

D

Е

Н

M


Ν

Р

ECM performs various controls such as fuel injection control and ignition timing control.

Component Parts Location

INFOID:0000000008450998

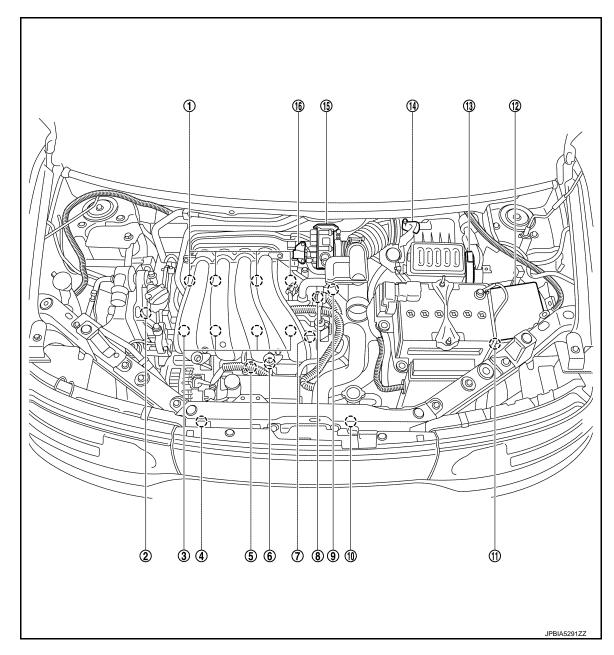


- Ignition coil (with power transistor) and spark plug
- 4. Refrigerant pressure sensor
- 7. Tumble control valve actuator
- 10. Cooling fan motor
- 13. ECM

- Intake valve timing control solenoid 3. valve
- 5. Knock sensor
- 8. Camshaft position sensor (PHASE)
- 11. Battery current sensor
- 14. Mass air flow sensor (with intake air 15. temperature sensor)
- Fuel injector
- 6. Engine oil temperature sensor
- 9. Engine coolant temperature sensor
- 12. IPDM E/R
- Electric throttle control actuator (with built in throttle position sensor and throttle control motor)

16. EVAP canister purge volume control solenoid valve

Revision: 2012 August EC-505 2013 CUBE

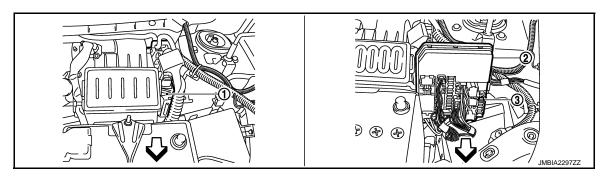


1. ECM


2. IPDM E/R

3. Fuel pump fuse (15 A)



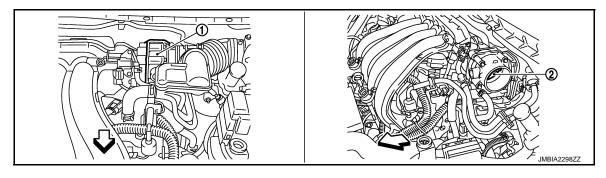


- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- Throttle valve

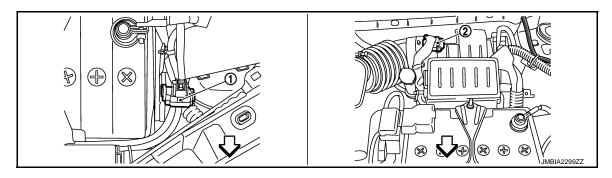

- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

⟨
→ Vehicle front

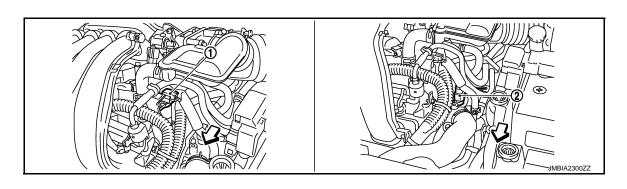

Α

EC

C

D

Е

F

Н

K


M

Ν

0

Р


- Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor
- ⟨ Vehicle front

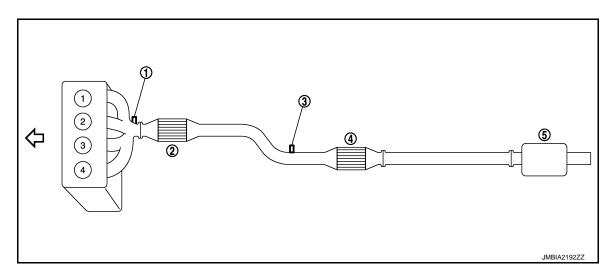

- Air fuel ratio (A/F) sensor 1
- Three way catalyst (under floor)
- Vehicle front


- 2. Three way catalyst (Manifold)
- Muffler

3. Heated oxygen sensor 2

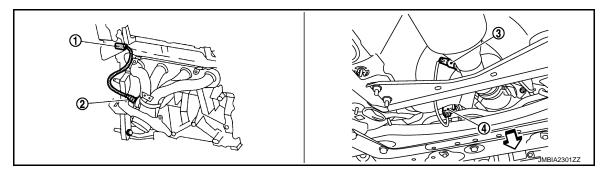

- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1 connector
- 3. Heated oxygen sensor 2


- Heated oxygen sensor 2 harness connector
- ⟨ Vehicle front

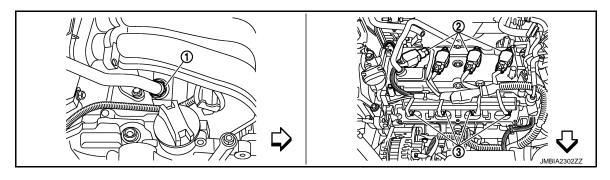


PCV valve

- Ignition coil (with power transistor) and spark plug
 - Fuel injector


⟨
→ Vehicle front

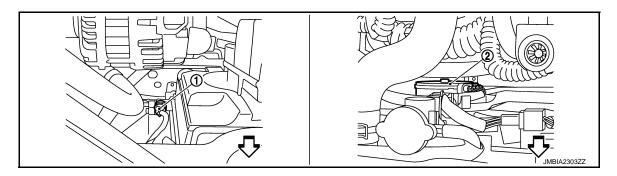


- 1. Refrigerant pressure sensor
- 2. Cooling fan motor

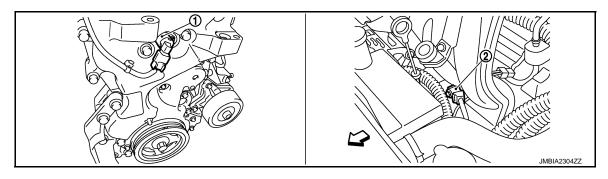

- Intake valve timing control solenoid 2. Knock sensor valve

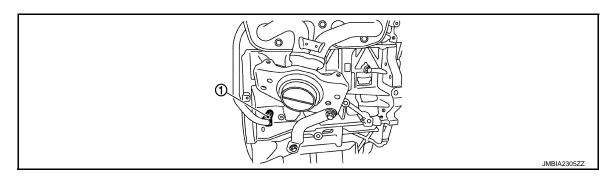

1. Crankshaft position sensor (POS)

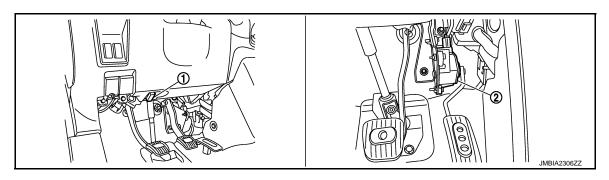

- 1. Data link connector
- 2. Accelerator pedal position sensor

Α

EC

D


Е

Н


Ν

0

Р

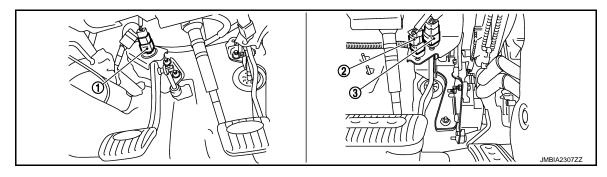


- ASCD clutch switch
- 2. ASCD brake switch
- 3. Stop lamp switch

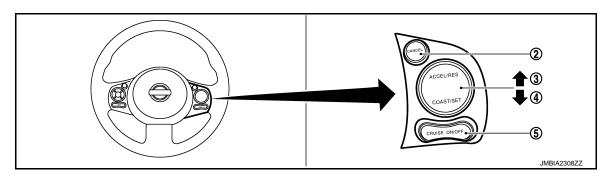


- ASCD steering switch 1.
- CANCEL switch 2.

RESUME/ACCELERATE switch

- SET/COST switch
- MAIN switch

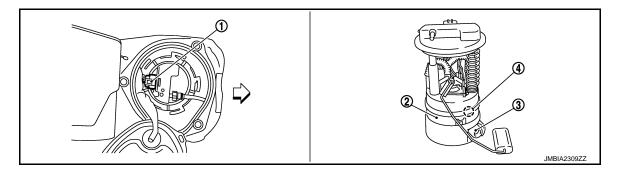

- harness connector
- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator
- Fuel tank temperature sensor
- Vehicle front

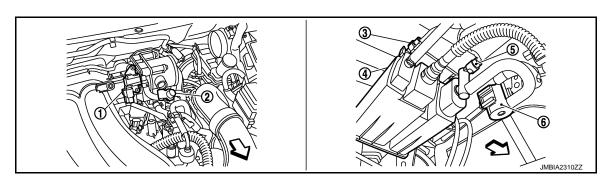

EVAP canister purge volume control 2. solenoid valve

EVAP service port

EVAP control system pressure sen-

ENGINE CONTROL SYSTEM

[MR18DE (FOR CALIFORNIA)]

4. EVAP canisterVehicle front

5. EVAP canister vent control valve

6. Drain filter


Component Description

INFOID:0000000008450999

Component	Reference	
A/F sensor 1	EC-654, "Description"	
A/F sensor 1 heater	EC-614, "Description"	
Accelerator pedal position sensor	EC-874, "Description"	
ASCD brake switch	EC-837, "Description"	
ASCD steering switch	EC-834, "Description"	
ASCD vehicle speed sensor	EC-844, "Description"	
Battery current sensor	EC-818, "Description"	
Camshaft position sensor (PHASE)	EC-726, "Description"	
Crankshaft position sensor (POS)	EC-722, "Description"	
Cooling fan motor	EC-543, "System Description"	
Electric throttle control actuator	EC-872, "Description"	
Engine coolant temperature sensor	EC-637, "Description"	
Engine oil temperature sensor	EC-705, "DTC Logic"	
EVAP canister purge volume control solenoid valve	EC-741, "Description"	
EVAP canister vent control valve	EC-749, "Description"	
EVAP control system pressure sensor	EC-757, "Description"	
Fuel injector	EC-897, "Description"	
Fuel level sensor	EC-778. "Description"	
Fuel pump	EC-900, "Description"	
Fuel tank temperature sensor	EC-697, "Description"	
Heated oxygen sensor 2	EC-664, "Description"	
Heated oxygen sensor 2 heater	EC-617, "Description"	
Ignition signal	EC-903, "Description"	
Intake air temperature sensor	EC-635, "Description"	
Intake valve timing control solenoid valve	EC-561, "System Description"	
Knock sensor	EC-720, "Description"	
Mass air flow sensor	EC-623, "Description"	
Park/neutral position switch (M/T models)	EC-800, "Description"	
Transmission range switch (CVT models)	EG-000, Description	
PCV valve	EC-915, "Description"	
Refrigerant pressure sensor	EC-916, "Description"	
Stop lamp switch	EC-848, "Description"	
Tumble control valve	EC-851, "Description"	
Tumble control valve position sensor	EC-856, "DTC Logic"	
Throttle control motor	EC-870, "Description"	
Throttle control motor relay	EC-863, "Description"	
Throttle position sensor	EC-643, "Description"	

MULTIPORT FUEL INJECTION SYSTEM

System Diagram INFOID:0000000008451000

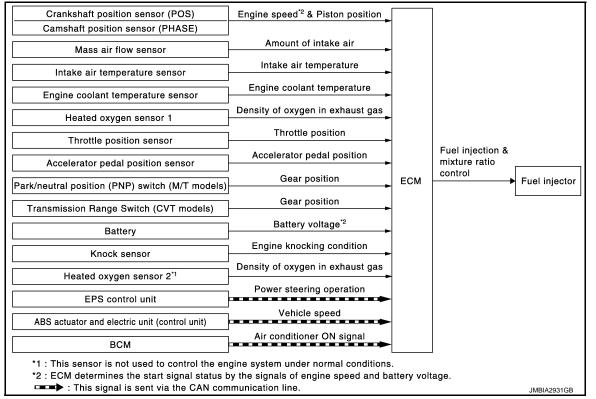

System Description

INPUT/OUTPUT SIGNAL CHART

Sensor Input signal to ECM ECM function Actuator Crankshaft position sensor (POS) Engine speed*3 Piston position Camshaft position sensor (PHASE) Mass air flow sensor Amount of intake air Intake air temperature sensor Intake air temperature Engine coolant temperature sensor Engine coolant temperature Air fuel ratio (A/F) sensor 1 Density of oxygen in exhaust gas Throttle position sensor Throttle position Fuel injection & Accelerator pedal position sensor Accelerator pedal position mixture ratio Fuel injector Park/neutral position (PNP) switch (M/T models) Gear position control Transmission range switch (CVT models) Gear position Battery Battery voltage*3 Knock sensor Engine knocking condition Density of oxygen in exhaust gas Heated oxygen sensor 2*1 EPS control unit Power steering operation*2 ABS actuator and electric unit (control unit) Vehicle speed*2 **BCM** Air conditioner ON signal*2

EC-511 Revision: 2012 August 2013 CUBE

INFOID:0000000008451001

Α

EC

^{*1:} This sensor is not used to control the engine system under normal conditions.

^{*2:} This signal is sent to the ECM via the CAN communication line.

*3: ECM determines the start signal status by the signals of engine speed and battery voltage.

SYSTEM DESCRIPTION

The amount of fuel injected from the fuel injector is determined by the ECM. The ECM controls the length of time the valve remains open (injection pulse duration). The amount of fuel injected is a program value in the ECM memory. The program value is preset by engine operating conditions. These conditions are determined by input signals (for engine speed and intake air) from the crankshaft position sensor (POS), camshaft position sensor (PHASE) and the mass air flow sensor.

VARIOUS FUEL INJECTION INCREASE/DECREASE COMPENSATION

In addition, the amount of fuel injected is compensated to improve engine performance under various operating conditions as listed below.


<Fuel increase>

- During warm-up
- When starting the engine
- During acceleration
- · Hot-engine operation
- When selector lever is changed from N to D (CVT models)
- · High-load, high-speed operation

<Fuel decrease>

- During deceleration
- · During high engine speed operation

MIXTURE RATIO FEEDBACK CONTROL (CLOSED LOOP CONTROL)

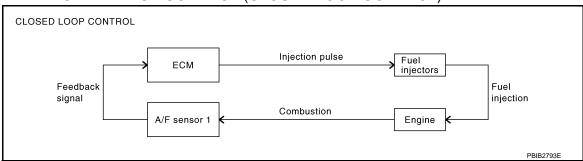

The mixture ratio feedback system provides the best air-fuel mixture ratio for driveability and emission control. The three way catalyst (manifold) can better reduce CO, HC and NOx emissions. This system uses A/F sensor 1 in the exhaust manifold to monitor whether the engine operation is rich or lean. The ECM adjusts the injection pulse width according to the sensor voltage signal. For more information about A/F sensor 1, refer to EC-654, "Description". This maintains the mixture ratio within the range of stoichiometric (ideal air-fuel mixture).

This stage is referred to as the closed loop control condition.

Heated oxygen sensor 2 is located downstream of the three way catalyst (manifold). Even if the switching characteristics of A/F sensor 1 shift, the air-fuel ratio is controlled to stoichiometric by the signal from heated oxygen sensor 2.

Open Loop Control

The open loop system condition refers to when the ECM detects any of the following conditions. Feedback control stops in order to maintain stabilized fuel combustion.

- Deceleration and acceleration
- High-load, high-speed operation
- Malfunction of A/F sensor 1 or its circuit
- Insufficient activation of A/F sensor 1 at low engine coolant temperature
- High engine coolant temperature
- During warm-up
- After shifting from N to D (CVT models)
- When starting the engine

MIXTURE RATIO SELF-LEARNING CONTROL

The mixture ratio feedback control system monitors the mixture ratio signal transmitted from A/F sensor 1. This feedback signal is then sent to the ECM. The ECM controls the basic mixture ratio as close to the theoretical mixture ratio as possible. However, the basic mixture ratio is not necessarily controlled as originally

MULTIPORT FUEL INJECTION SYSTEM

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

designed. Both manufacturing differences (i.e., mass air flow sensor hot wire) and characteristic changes during operation (i.e., fuel injector clogging) directly affect mixture ratio.


Accordingly, the difference between the basic and theoretical mixture ratios is monitored in this system. This is then computed in terms of "injection pulse duration" to automatically compensate for the difference between the two ratios.

"Fuel trim" refers to the feedback compensation value compared against the basic injection duration. Fuel trim includes short-term fuel trim and long-term fuel trim.

"Short-term fuel trim" is the short-term fuel compensation used to maintain the mixture ratio at its theoretical value. The signal from A/F sensor 1 indicates whether the mixture ratio is RICH or LEAN compared to the theoretical value. The signal then triggers a reduction in fuel volume if the mixture ratio is rich, and an increase in fuel volume if it is lean.

"Long-term fuel trim" is overall fuel compensation carried out over time to compensate for continual deviation of the short-term fuel trim from the central value. Continual deviation will occur due to individual engine differences, wear over time and changes in the usage environment.

FUEL INJECTION TIMING

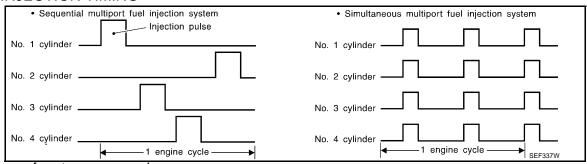

Two types of systems are used.

- Sequential Multiport Fuel Injection System
- Fuel is injected into each cylinder during each engine cycle according to the ignition order. This system is used when the engine is running.
- Simultaneous Multiport Fuel Injection System
 - Fuel is injected simultaneously into all four cylinders twice each engine cycle. In other words, pulse signals of the same width are simultaneously transmitted from the ECM.
 - The four injectors will then receive the signals two times for each engine cycle.
 - This system is used when the engine is being started and/or if the fail-safe system (CPU) is operating.

FUEL SHUT-OFF

Fuel to each cylinder is cut off during deceleration, operation of the engine at excessively high speeds or operation of the vehicle at excessively high speeds.

EC

Α

D

Е

F

G

Н

J.

K


L

N

0

Component Parts Location


INFOID:0000000008451002

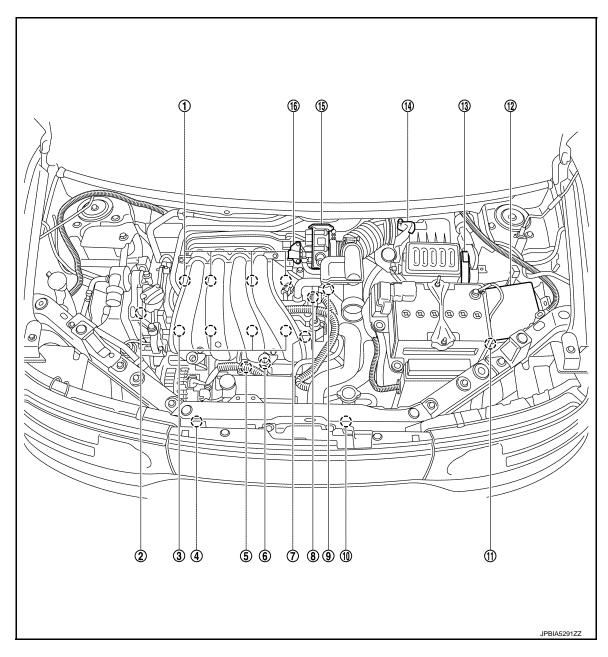

- Ignition coil (with power transistor) and spark plug
- Refrigerant pressure sensor
- Tumble control valve actuator
- 10. Cooling fan motor
- 13. ECM

- Intake valve timing control solenoid 3. valve
- 5. Knock sensor
- Camshaft position sensor (PHASE)
- 11. Battery current sensor
- temperature sensor)
- Fuel injector
- Engine oil temperature sensor
- 9. Engine coolant temperature sensor
- 12. IPDM E/R
- 14. Mass air flow sensor (with intake air 15. Electric throttle control actuator (with built in throttle position sensor and throttle control motor)


16. EVAP canister purge volume control solenoid valve

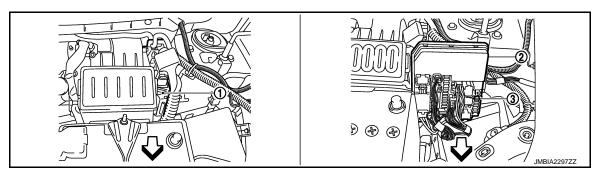


1. ECM

2. IPDM E/R

3. Fuel pump fuse (15 A)

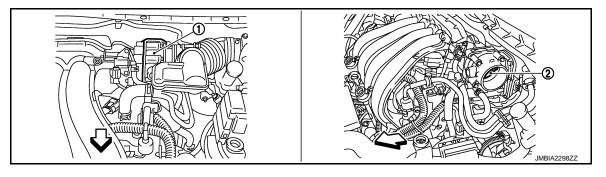


- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- . Throttle valve

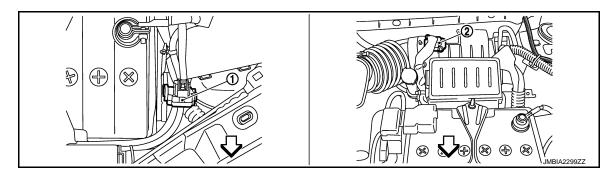

- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

⟨
→ Vehicle front

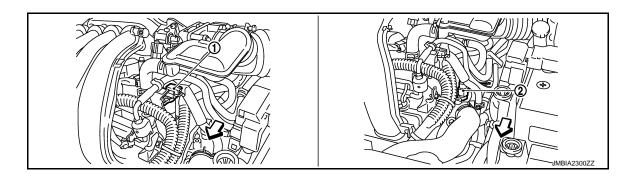

Revision: 2012 August EC-515 2013 CUBE

EC

Α

D

Е

F

G

Н

Κ


L

M

Ν

0


- 1. Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor

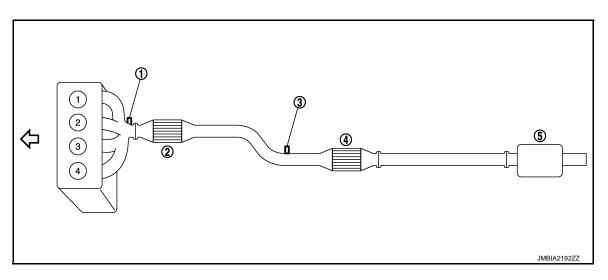

- 1. Air fuel ratio (A/F) sensor 1
- 4. Three way catalyst (under floor)


- 2. Three way catalyst (Manifold)
- 5. Muffler

3. Heated oxygen sensor 2

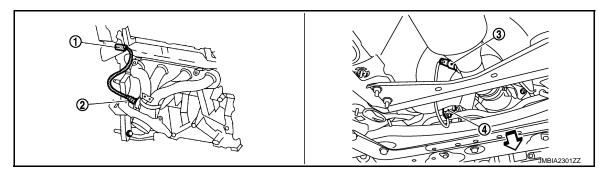

- Air fuel ratio (A/F) sensor 1 harness connector
- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1
- 3. Heated oxygen sensor 2


- 4. Heated oxygen sensor 2 harness connector
- ⟨
 → Vehicle front

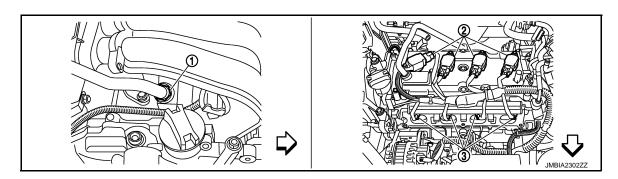

1. PCV valve


- 2. Ignition coil (with power transistor) and spark plug
- Fuel injector

⟨
→ Vehicle front

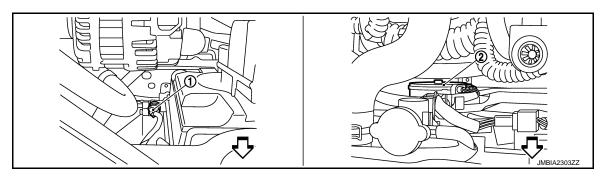


- Refrigerant pressure sensor
- 2. Cooling fan motor


Vehicle front

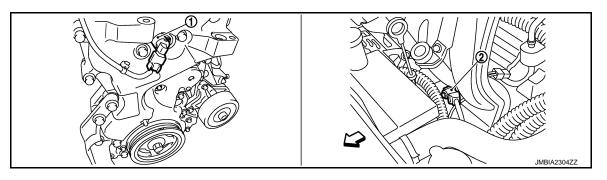

- Intake valve timing control solenoid 2. Knock sensor

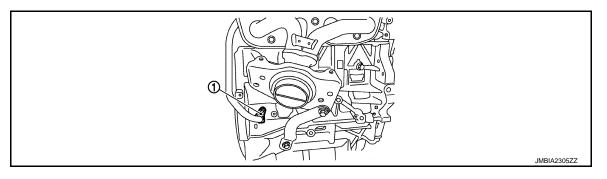

Crankshaft position sensor (POS)

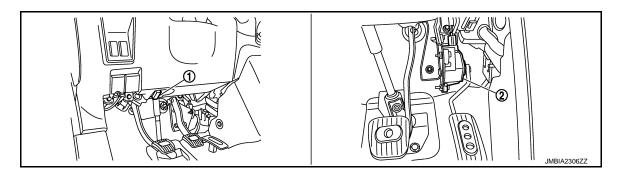

Data link connector

Accelerator pedal position sensor

EC-517 Revision: 2012 August 2013 CUBE

Α

EC

D

Е

F


G

Н


K

Ν

0

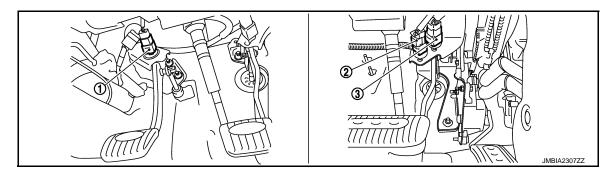


- ASCD clutch switch
- 2. ASCD brake switch
- Stop lamp switch

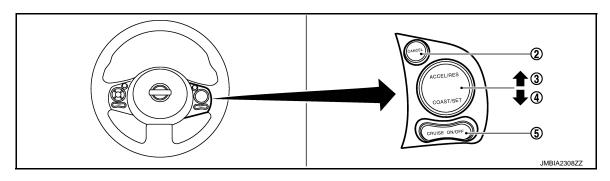


- ASCD steering switch 1.
- SET/COST switch
- CANCEL switch
- MAIN switch

RESUME/ACCELERATE switch 3.

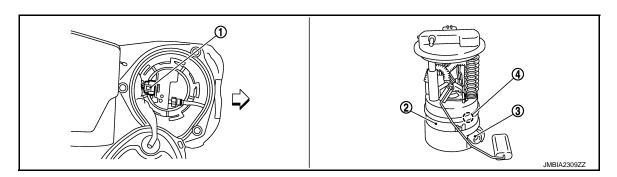

- harness connector
- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator

- Fuel tank temperature sensor

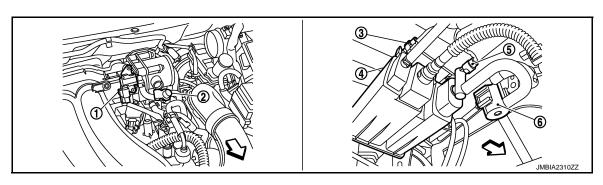

- EVAP canister purge volume control 2. solenoid valve
- **EVAP** service port
- EVAP control system pressure sen-

MULTIPORT FUEL INJECTION SYSTEM

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

4. EVAP canister

5. EVAP canister vent control valve

6. Drain filter

⟨
→ Vehicle front

Component Description

INFOID:0000000008451003

Α

EC

C

D

Е

F

G

Н

Component	Reference
A/F sensor 1	EC-654, "Description"
Accelerator pedal position sensor	EC-874, "Description"
Camshaft position sensor (PHASE)	EC-726, "Description"
Crankshaft position sensor (POS)	EC-722, "Description"
Engine coolant temperature sensor	EC-637, "Description"
Fuel injector	EC-897, "Description"
Heated oxygen sensor 2	EC-664, "Description"
Intake air temperature sensor	EC-635, "Description"
Knock sensor	EC-720, "Description"
Mass air flow sensor	EC-623, "Description"
Park/neutral position switch (M/T models)	EC 900 "Description"
Transmission range switch (CVT models)	EC-800, "Description"
Throttle position sensor	EC-643, "Description"

Κ

L

 \mathbb{N}


Ν

0

ELECTRIC IGNITION SYSTEM

System Diagram

INFOID:0000000008451004

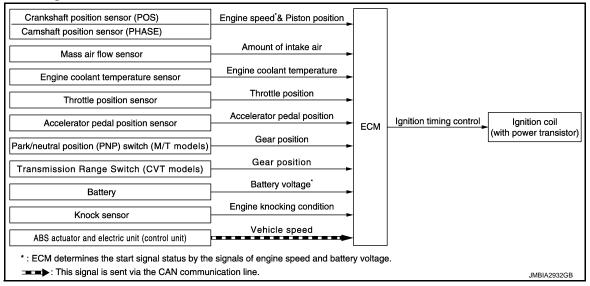

System Description

INFOID:0000000008451005

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed*2		
Camshaft position sensor (PHASE)	Piston position		
Mass air flow sensor	Amount of intake air		Ignition coil (with power transistor)
Engine coolant temperature sensor	Engine coolant temperature		
Throttle position sensor	Throttle position		
Accelerator pedal position sensor	Accelerator pedal position	Ignition timing	
Battery	Battery voltage*2	control	
Knock sensor	Engine knocking		
Park/neutral position (PNP) switch (M/T models)	Gear position		
Transmission range switch (CVT models)	Gear position		
ABS actuator and electric unit (control unit)	Vehicle speed*1		

^{*1:} This signal is sent to the ECM via the CAN communication line.

SYSTEM DESCRIPTION

Ignition order: 1 - 3 - 4 - 2

The ignition timing is controlled by the ECM to maintain the best air-fuel ratio for every running condition of the engine. The ignition timing data is stored in the ECM.

The ECM receives information such as the injection pulse width and camshaft position sensor (PHASE) signal. Computing this information, ignition signals are transmitted to the power transistor.

During the following conditions, the ignition timing is revised by the ECM according to the other data stored in the ECM.


- At starting
- During warm-up
- At idle
- At low battery voltage
- During acceleration

^{*2:} ECM determines the start signal status by the signals of engine speed and battery voltage.

The knock sensor retard system is designed only for emergencies. The basic ignition timing is programmed within the anti-knocking zone, if recommended fuel is used under dry conditions. The retard system does not operate under normal driving conditions. If engine knocking occurs, the knock sensor monitors the condition. The signal is transmitted to the ECM. The ECM retards the ignition timing to eliminate the knocking condition.

Component Parts Location

INFOID:0000000008451006

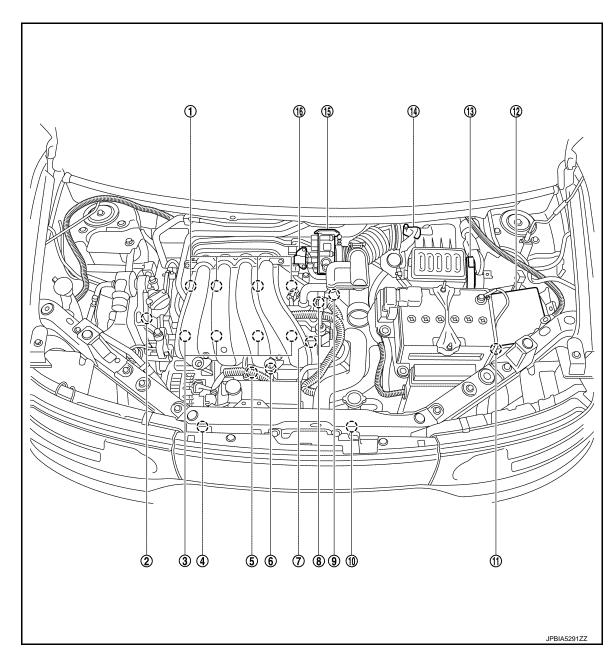

- Ignition coil (with power transistor) and spark plug
- 4. Refrigerant pressure sensor
- Tumble control valve actuator
- Cooling fan motor
- 13. ECM

- Intake valve timing control solenoid valve
- 5. Knock sensor
- Camshaft position sensor (PHASE)
- Battery current sensor
- Mass air flow sensor (with intake air 15. temperature sensor)
- Fuel injector

3.


- Engine oil temperature sensor
- 9. Engine coolant temperature sensor
- IPDM E/R
- Electric throttle control actuator (with built in throttle position sensor and throttle control motor)

16. EVAP canister purge volume control solenoid valve

EC-521 Revision: 2012 August 2013 CUBE

EC

Ν

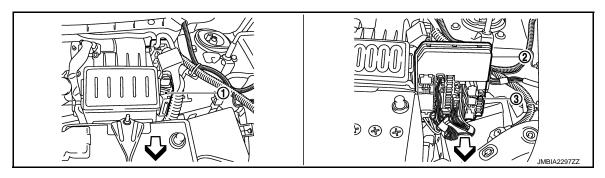


1. ECM


2. IPDM E/R

3. Fuel pump fuse (15 A)




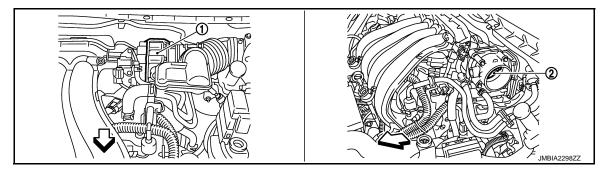

- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- Throttle valve

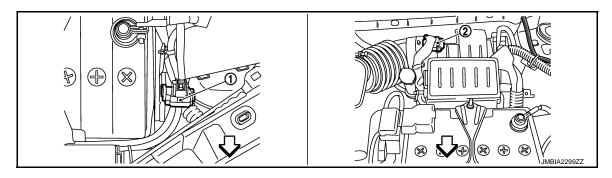

- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

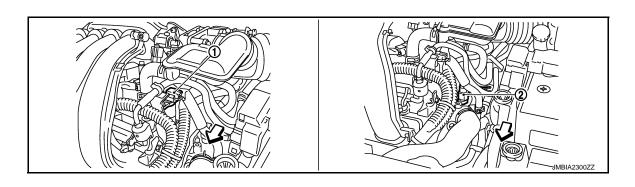

Α

EC

C

D

Е

F

Н

K


M

Ν

0

Р


- Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor
- ⟨ Vehicle front

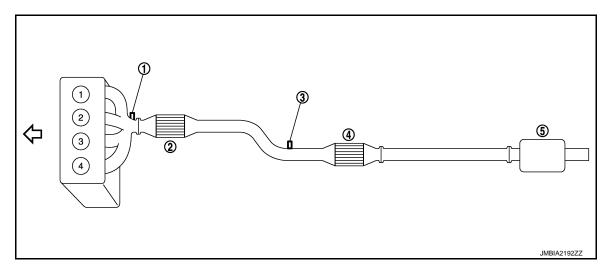

- Air fuel ratio (A/F) sensor 1
- Three way catalyst (under floor)
- Vehicle front


- 2. Three way catalyst (Manifold)
- Muffler

3. Heated oxygen sensor 2

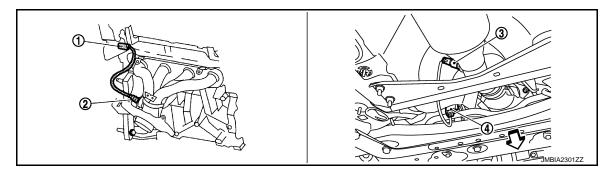

- connector
- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1
- 3. Heated oxygen sensor 2


- Heated oxygen sensor 2 harness connector

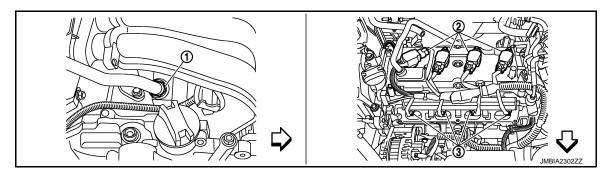


PCV valve

- Ignition coil (with power transistor) and spark plug
- Fuel injector


⟨
→ Vehicle front

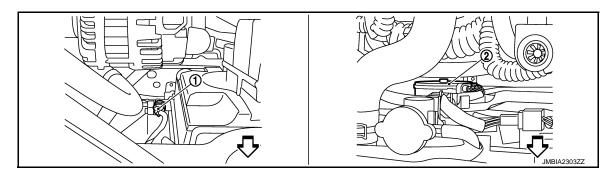


- 1. Refrigerant pressure sensor
- 2. Cooling fan motor

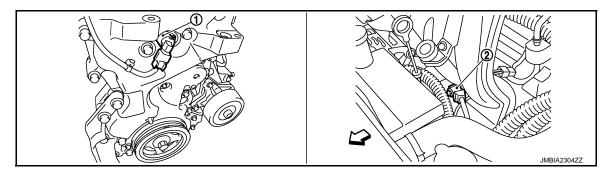

- Intake valve timing control solenoid 2. Knock sensor valve

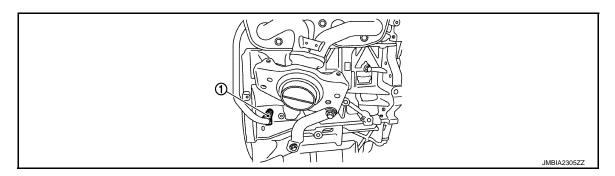

1. Crankshaft position sensor (POS)

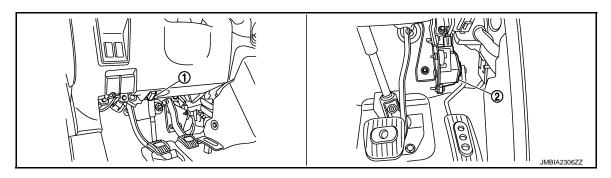

- 1. Data link connector
- 2. Accelerator pedal position sensor

Α

EC

D


Е

Н


Ν

0

Р

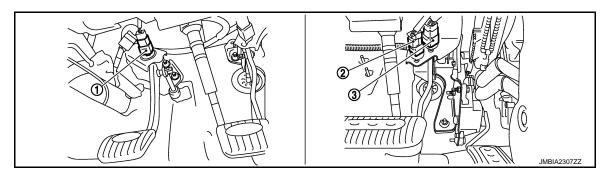


- ASCD clutch switch
- 2. ASCD brake switch
- 3. Stop lamp switch

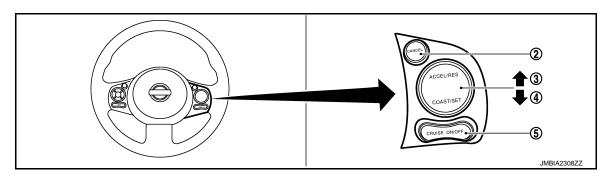

- ASCD steering switch 1.
- CANCEL switch 2.


RESUME/ACCELERATE switch

- SET/COST switch
- MAIN switch

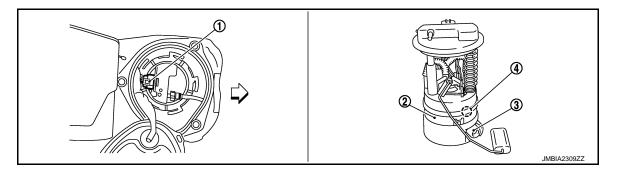

- harness connector
- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator

- Fuel tank temperature sensor
- Vehicle front

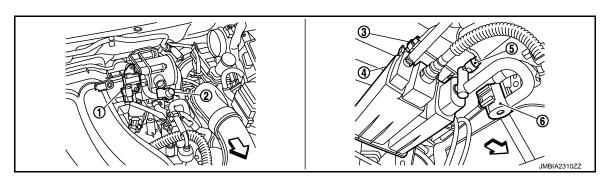

- EVAP canister purge volume control 2. solenoid valve
- **EVAP** service port
- EVAP control system pressure sen-

ELECTRIC IGNITION SYSTEM

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

4. EVAP canister

5. EVAP canister vent control valve

6. Drain filter


Component Description

INFOID:0000000008451007

Component	Reference	
Accelerator pedal position sensor	EC-874, "Description"	
Camshaft position sensor (PHASE)	EC-726, "Description"	
Crankshaft position sensor (POS)	EC-722, "Description"	
Engine coolant temperature sensor	EC-637, "Description"	
Ignition signal	EC-903, "Description"	
Knock sensor	EC-720, "Description"	
Mass air flow sensor	EC-623, "Description"	
Park/neutral position switch (M/T models)	EC-800, "Description"	
Transmission range switch (CVT models)	CC-600, Description	
Throttle position sensor	EC-643, "Description"	
Vehicle speed sensor	EC-784, "EXCEPT FOR M/T MODELS : Description"	

AIR CONDITIONING CUT CONTROL

System Diagram

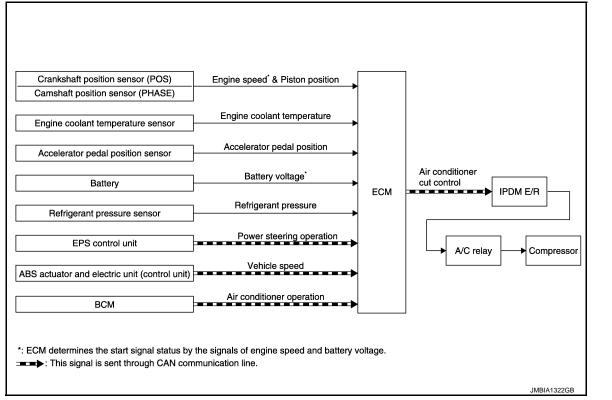

System Description

INPUT/OUTPUT SIGNAL CHART

Sensor	Input Signal to ECM	ECM function	Actuator	
Air conditioner switch*1	Air conditioner ON signal		IPDM E/R ↓ Air conditioner relay ↓ Compressor	
Accelerator pedal position sensor	Accelerator pedal position			
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*2			
Engine coolant temperature sensor	Engine coolant temperature	Air conditioner		
Battery	Battery voltage*2	cut control		
Refrigerant pressure sensor	Refrigerant pressure			
EPS control unit	Power steering operation			
ABS actuator and electric unit (control unit)	Vehicle speed*1			
ВСМ	Air conditioner ON signal*1			

^{*1:} This signal is sent to the ECM via the CAN communication line.

SYSTEM DESCRIPTION

This system improves engine operation when the air conditioner is used.

Under the following conditions, the air conditioner is turned off.

- When the accelerator pedal is fully depressed.
- · When cranking the engine.
- At high engine speeds.
- When the engine coolant temperature becomes excessively high.
- When operating power steering during low engine speed or low vehicle speed.

Revision: 2012 August EC-527 2013 CUBE

EC

Α

D

Е

F

G

Н

INFOID:0000000008451009

L

M


Ν

^{*2:} ECM determines the start signal status by the signals of engine speed and battery voltage.

- · When engine speed is excessively low.
- · When refrigerant pressure is excessively low or high.

Component Parts Location

INFOID:0000000008451010

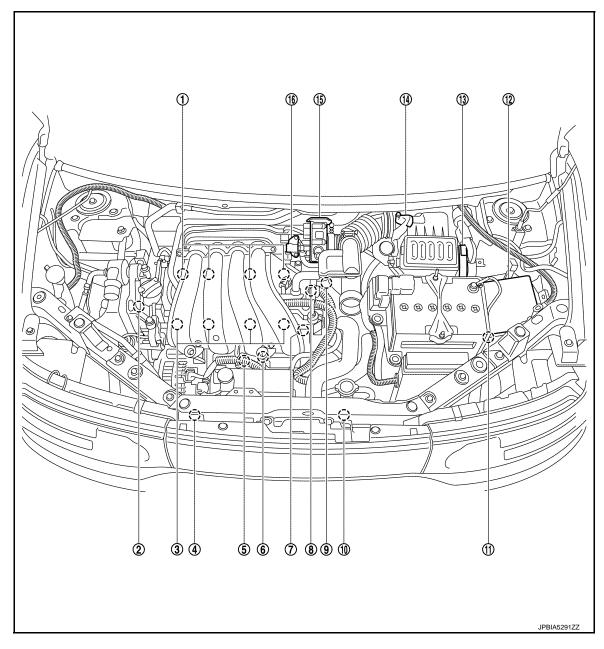

- Ignition coil (with power transistor) and spark plug
- 4. Refrigerant pressure sensor
- Tumble control valve actuator
- 10. Cooling fan motor
- 13. ECM
- 16. EVAP canister purge volume control solenoid valve
- 2. Intake valve timing control solenoid valve
- 5. Knock sensor
- 8. Camshaft position sensor (PHASE)
- 11. Battery current sensor
- 14. Mass air flow sensor (with intake air 15. Electric throttle control actuator temperature sensor)
- 3. Fuel injector
- Engine oil temperature sensor
- 9. Engine coolant temperature sensor
- 12. IPDM E/R
 - (with built in throttle position sensor and throttle control motor)

Α

EC

D

Е

F

G


Н

M

Ν

0


Р

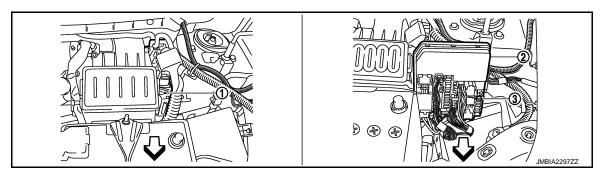


1. ECM

2. IPDM E/R

3. Fuel pump fuse (15 A)

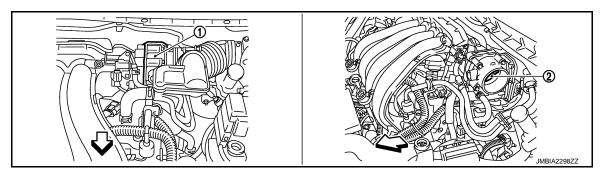


- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- . Throttle valve

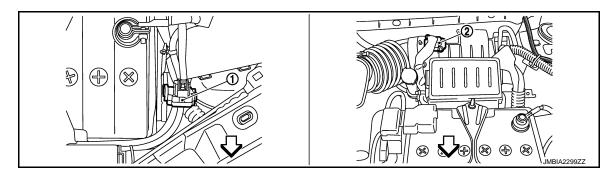


- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

⟨
→ Vehicle front

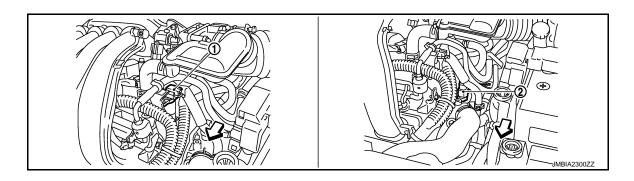


- 1. Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor

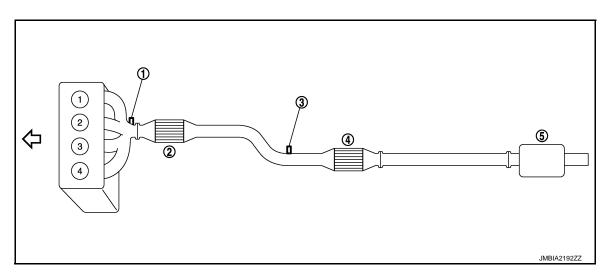

- 1. Air fuel ratio (A/F) sensor 1
- 1. Three way catalyst (under floor)


- 2. Three way catalyst (Manifold)
- 5. Muffler

3. Heated oxygen sensor 2

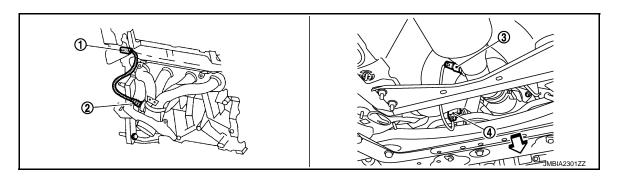

- Air fuel ratio (A/F) sensor 1 harness connector
- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1
- 3. Heated oxygen sensor 2


- 4. Heated oxygen sensor 2 harness connector
- ⟨
 → Vehicle front

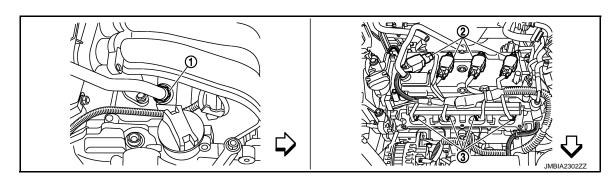


1. PCV valve

- Ignition coil (with power transistor) and spark plug
- Fuel injector


⟨
→ Vehicle front

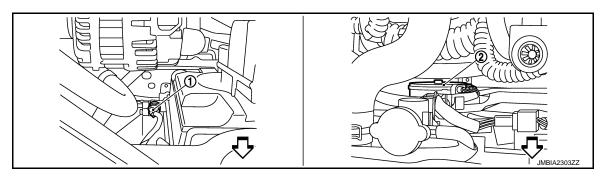


- Refrigerant pressure sensor
- 2. Cooling fan motor

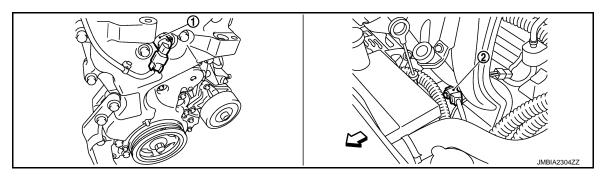

- Intake valve timing control solenoid 2. Knock sensor

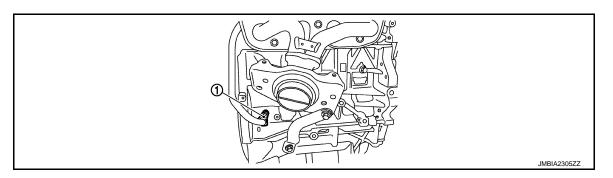

Crankshaft position sensor (POS)

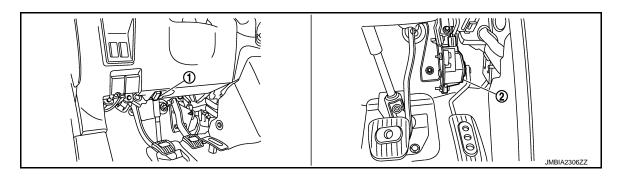

Data link connector

Accelerator pedal position sensor

EC-531 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

F


G

Н


K

Ν

0

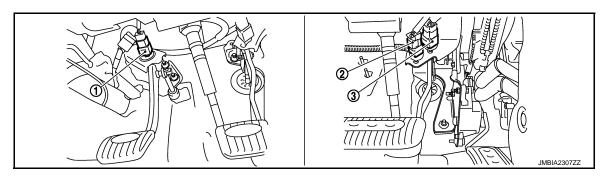


- ASCD clutch switch
- 2. ASCD brake switch
- Stop lamp switch

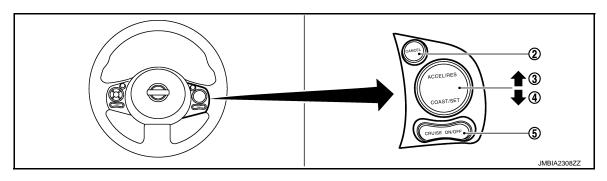


- ASCD steering switch 1.
- 2.
- CANCEL switch
- RESUME/ACCELERATE switch 3.

- SET/COST switch
- MAIN switch

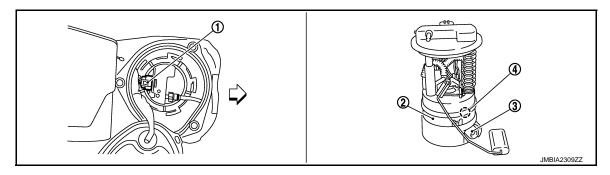

- harness connector
- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator

- Fuel tank temperature sensor

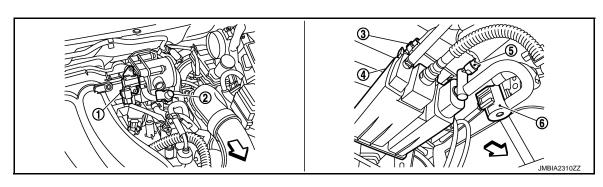

- EVAP canister purge volume control 2. solenoid valve
- **EVAP** service port
- EVAP control system pressure sen-

AIR CONDITIONING CUT CONTROL

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

4. EVAP canister

EVAP canister vent control valve6.

6. Drain filter

Component Description

INFOID:0000000008451011

Component	Reference
Accelerator pedal position sensor	EC-874, "Description"
Camshaft position sensor (PHASE)	EC-726, "Description"
Crankshaft position sensor (POS)	EC-722, "Description"
Engine coolant temperature sensor	EC-637, "Description"
Refrigerant pressure sensor	EC-916, "Description"

Е

D

Α

EC

G

F

Н

Κ

L

M


Ν

0

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

System Diagram

INFOID:0000000008451012

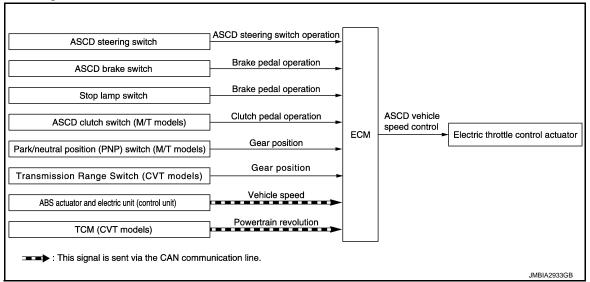

System Description

INFOID:0000000008451013

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator
ASCD steering switch	ASCD steering switch operation		Electric throttle control actuator
ASCD brake switch	Desire and an aution		
Stop lamp switch	Brake pedal operation		
ASCD clutch switch (M/T models)	Clutch pedal operation	ASCD vehicle	
Park/neutral position (PNP) switch (M/T models)	Gear position	speed control	
Transmission range switch (CVT models)	Gear position		
ABS actuator and electric unit (control unit)	Vehicle speed*		
TCM (M/T models)	Powertrain revolution*		

^{*:} This signal is sent to the ECM via the CAN communication line.

BASIC ASCD SYSTEM

Refer to Owner's Manual for ASCD operating instructions.

Automatic Speed Control Device (ASCD) allows a driver to keep vehicle at predetermined constant speed without depressing accelerator pedal. Driver can set vehicle speed in advance between approximately 40 km/h (25 MPH) and 144 km/h (89 MPH).

ECM controls throttle angle of electric throttle control actuator to regulate engine speed.

Operation status of ASCD is indicated by CRUISE lamp and SET lamp in combination meter. If any malfunction occurs in the ASCD system, it automatically deactivates control.

NOTE:

Always drive vehicle in a safe manner according to traffic conditions and obey all traffic laws.

SET OPERATION

Press MAIN switch. (The CRUISE lamp in combination meter illuminates.)

When vehicle speed reaches a desired speed between approximately 40 km/h (25 MPH) and 144 km/h (89 MPH), press SET/COAST switch.

ACCELERATE OPERATION

If the RESUME/ACCELERATE switch is pressed during cruise control driving, increase the vehicle speed until the switch is released or vehicle speed reaches maximum speed controlled by the system. And then ASCD will maintain the new set speed.

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

CANCEL OPERATION

When any of following conditions exist, cruise operation will be canceled.

- CANCEL switch is pressed
- More than 2 switches at ASCD steering switch are pressed at the same time (Set speed will be cleared)
- Brake pedal is depressed
- Clutch pedal is depressed or gear position is changed to neutral position (M/T models)
- · Selector lever position is changed to N, P, R
- Vehicle speed decreased to 13 km/h (8 MPH) lower than the set speed
- TCS system is operated

When the ECM detects any of the following conditions, the ECM will cancel the cruise operation and inform the driver by blinking indicator lamp.

• Engine coolant temperature is slightly higher than the normal operating temperature, CRUISE lamp may blink slowly.

When the engine coolant temperature decreases to the normal operating temperature, CRUISE lamp will stop blinking and the cruise operation will be able to work by pressing SET/COAST switch or RESUME/ACCELERATE switch.

Malfunction for some self-diagnoses regarding ASCD control: SET lamp will blink quickly.

If MAIN switch is turned to OFF while ASCD is activated, all of ASCD operations will be canceled and vehicle speed memory will be erased.

COAST OPERATION

When the SET/COAST switch is pressed during cruise control driving, decrease vehicle set speed until the switch is released. And then ASCD will maintain the new set speed.

RESUME OPERATION

When the RESUME/ACCELERATE switch is pressed after cancel operation other than pressing MAIN switch is performed, vehicle speed will return to last set speed. To resume vehicle set speed, vehicle condition must meet following conditions.

- Brake pedal is released
- Clutch pedal is released (M/T models)
- Selector lever position is other than P and N (CVT models)
- Vehicle speed is between 40 km/h (25 MPH) and 144 km/h (89 MPH)

EC

Α

D

Е

F

K

L


M

Ν

0

Component Parts Location

INFOID:0000000008451014

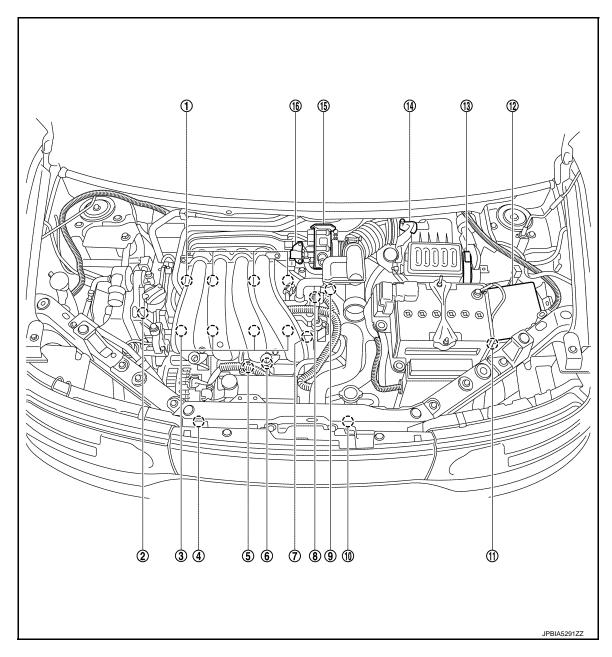


- Ignition coil (with power transistor) and spark plug
- Refrigerant pressure sensor
- Tumble control valve actuator
- 10. Cooling fan motor
- 13. ECM

- Intake valve timing control solenoid 3. valve
- 5. Knock sensor
- Camshaft position sensor (PHASE)
- 11. Battery current sensor
- 14. Mass air flow sensor (with intake air 15. Electric throttle control actuator temperature sensor)
- Fuel injector
- Engine oil temperature sensor
- 9. Engine coolant temperature sensor
- 12. IPDM E/R
 - (with built in throttle position sensor and throttle control motor)

16. EVAP canister purge volume control solenoid valve


[MR18DE (FOR CALIFORNIA)]

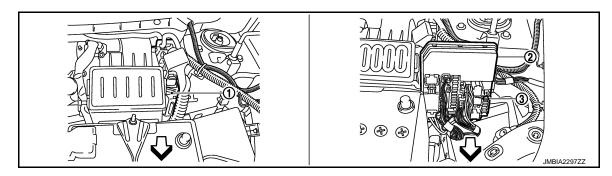


ECM 1.

2. IPDM E/R 3. Fuel pump fuse (15 A)


< SYSTEM DESCRIPTION >

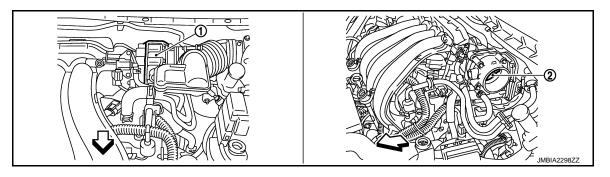

- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- Throttle valve

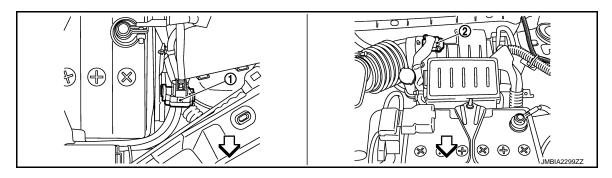

- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

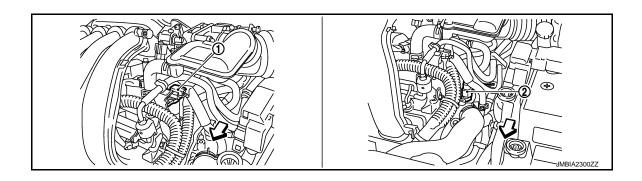

EC-537 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

F

G


Н

M

Ν

0


- Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor
- ⟨□ Vehicle front

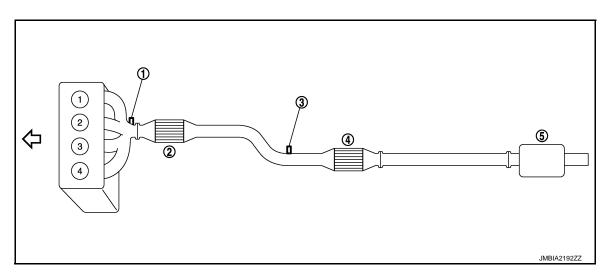

- Air fuel ratio (A/F) sensor 1
- Three way catalyst (under floor)
- Vehicle front


- Three way catalyst (Manifold) 2.
- 5. Muffler

3. Heated oxygen sensor 2

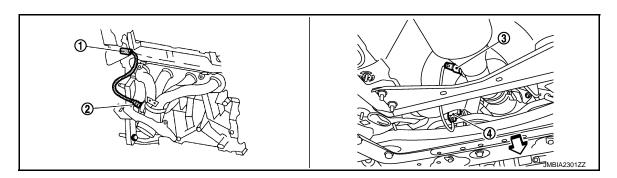

- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1 connector
- Heated oxygen sensor 2

- Heated oxygen sensor 2 harness connector
- ⟨□ Vehicle front

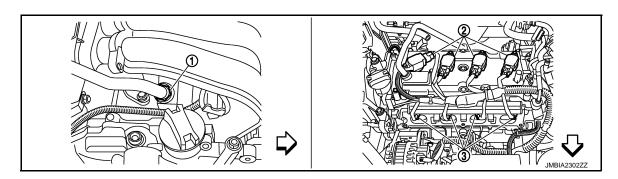

PCV valve

- Ignition coil (with power transistor) and spark plug
- Fuel injector

Vehicle front

Α

EC

D

Е

F

G

Н


K

M

Ν


0

Р

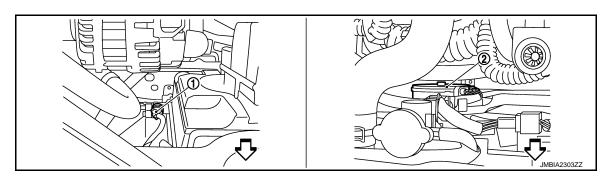


- 1. Refrigerant pressure sensor
- Cooling fan motor


√ Vehicle front

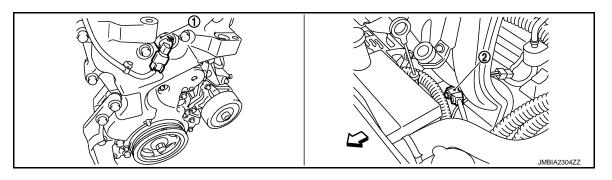

- Intake valve timing control solenoid 2. Knock sensor valve

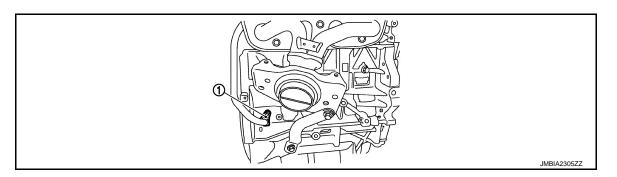


1. Crankshaft position sensor (POS)

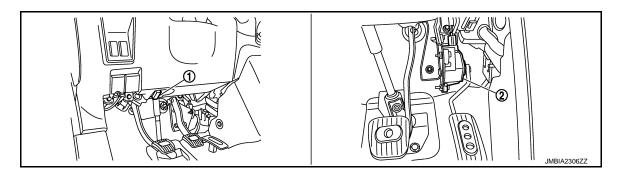


Data link connector

2. Accelerator pedal position sensor

Revision: 2012 August EC-539 2013 CUBE

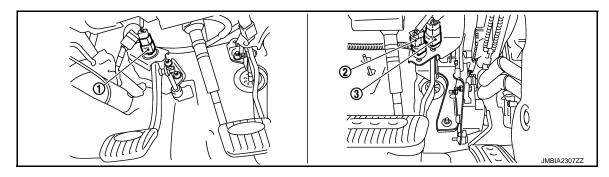


- ASCD clutch switch
- 2. ASCD brake switch
- Stop lamp switch

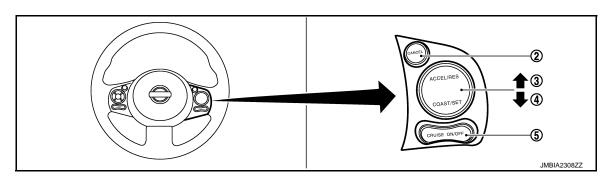


- ASCD steering switch 1.
- SET/COST switch
- CANCEL switch
- MAIN switch

RESUME/ACCELERATE switch

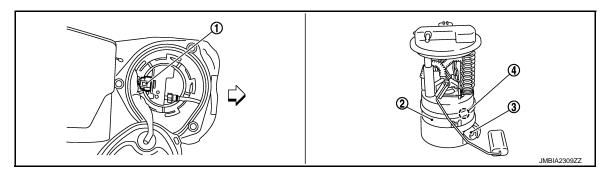

- harness connector
- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator

- Fuel tank temperature sensor

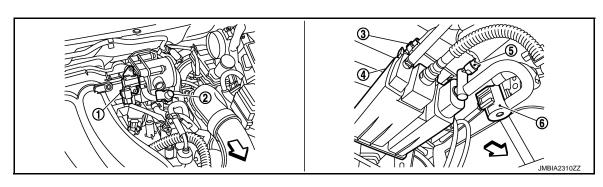

- EVAP canister purge volume control 2. solenoid valve
- **EVAP** service port
- EVAP control system pressure sen-

AUTOMATIC SPEED CONTROL DEVICE (ASCD)

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

4. EVAP canister

5. EVAP canister vent control valve

6. Drain filter

Component Description

INFOID:0000000008451015	
INFUID:0000000000451015	

Component	Reference
ASCD brake switch	EC-837, "Description"
ASCD steering switch	EC-834, "Description"
Electric throttle control actuator	EC-872, "Description"
Park/neutral position switch (M/T models)	EC 900 "Description"
Transmission range switch (CVT models)	EC-800, "Description"
Stop lamp switch	EC-848, "Description"

F

Α

EC

D

Е

G

Н

1

Κ

L

M

Ν

0

CAN COMMUNICATION

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

CAN COMMUNICATION

System Description


INFOID:0000000008451016

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Refer to LAN-22, "CAN Communication Signal Chart", about CAN communication for detail.

COOLING FAN CONTROL

System Diagram

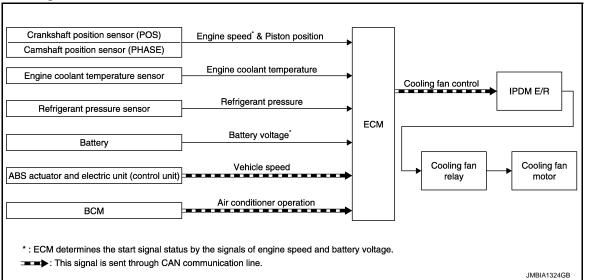

System Description

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator	
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*1	Cooling fan control IPDM E/R Cooling fan relay ↓ Cooling fan motor	Cooling fan control Cooling fan relay	
Battery	Battery voltage*1			IPDM E/R
ABS actuator and electric unit (control unit)	Vehicle speed*2			-
Engine coolant temperature sensor	Engine coolant temperature			-
ВСМ	Air conditioner ON signal*2		Cooling fair motor	
Refrigerant pressure sensor	Refrigerant pressure			

^{*1:} The ECM determines the start signal status by the signals of engine speed and battery voltage.

SYSTEM DESCRIPTION

ECM controls cooling fan speed corresponding to vehicle speed, engine coolant temperature, refrigerant pressure, air conditioner ON signal. Then control system has 3-step control [HIGH/LOW/OFF].

EC

Α

INFOID:0000000008451017

Е

D

F


INFOID:0000000008451018

N

U

^{*2:} This signal is sent to ECM via the CAN communication line.

Cooling Fan Operation

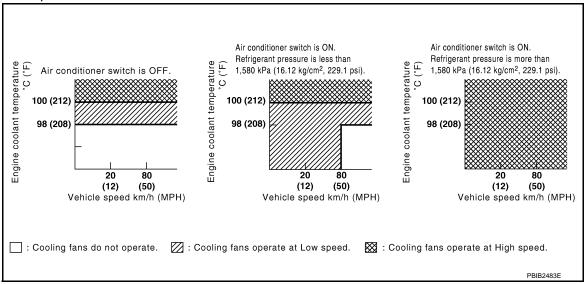


Cooling Fan Relay Operation

The ECM controls cooling fan relays via the CAN communication line.

Cooling fan speed	Cooling fan relay		
	1	2	3
Stop (OFF)	OFF	OFF	OFF
Low (LOW)	ON	OFF	OFF
High (HI)	ON	ON	ON

Component Parts Location

INFOID:0000000008451019

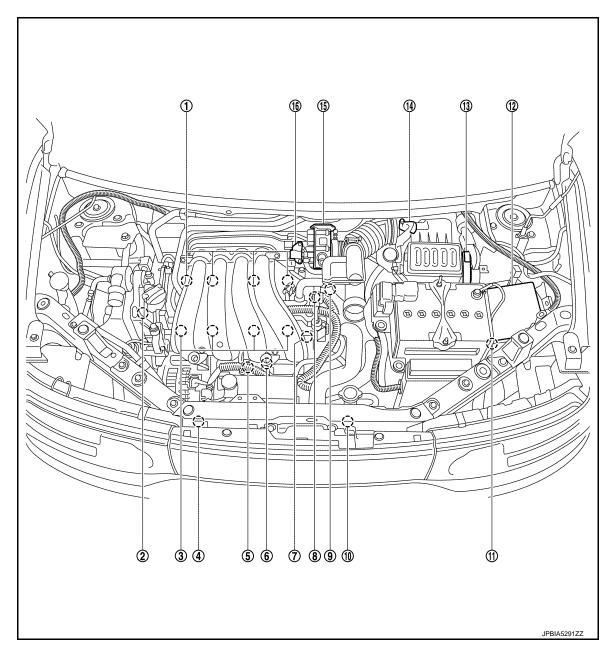

- Ignition coil (with power transistor) and spark plug
- 4. Refrigerant pressure sensor
- Tumble control valve actuator
- 10. Cooling fan motor

solenoid valve

13. ECM

- 2. Intake valve timing control solenoid valve
- 5. Knock sensor
- Camshaft position sensor (PHASE)
- 11. Battery current sensor
- 14. Mass air flow sensor (with intake air 15. Electric throttle control actuator temperature sensor)
- Fuel injector
- 6. Engine oil temperature sensor
- 9. Engine coolant temperature sensor
- 12. IPDM E/R
 - (with built in throttle position sensor and throttle control motor)

EC

Α

D

Е

Н

K


M

Ν

0

Р

16. EVAP canister purge volume control

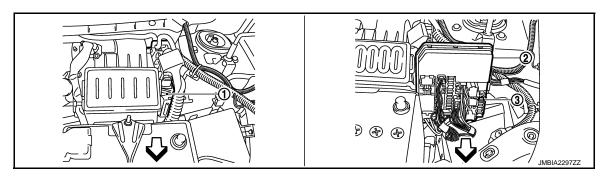


1. ECM


2. IPDM E/R

3. Fuel pump fuse (15 A)



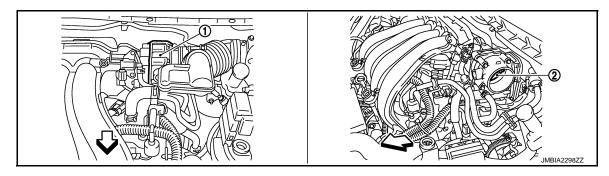


- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- Throttle valve

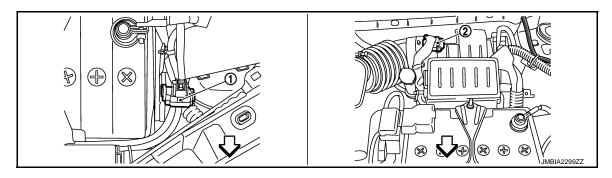

- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

⟨
→ Vehicle front

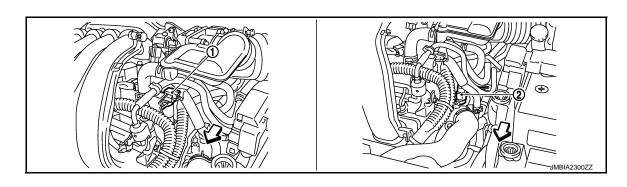

Α

EC

C

D

Е

F

Н

K


M

Ν

0

Р


- Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor
- ⟨ Vehicle front

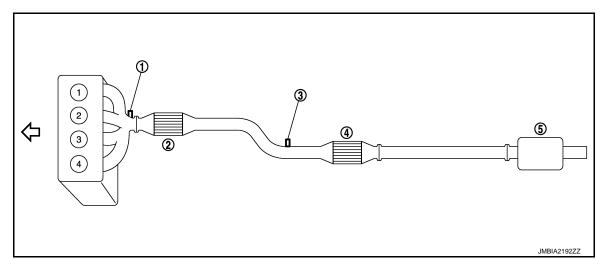

- Air fuel ratio (A/F) sensor 1
- Three way catalyst (under floor)
- Vehicle front


- 2. Three way catalyst (Manifold)
- Muffler

3. Heated oxygen sensor 2

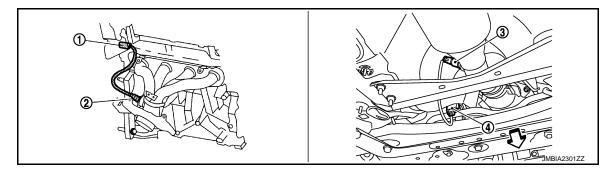

- connector
- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1
- 3. Heated oxygen sensor 2


- Heated oxygen sensor 2 harness connector
- ⟨ Vehicle front

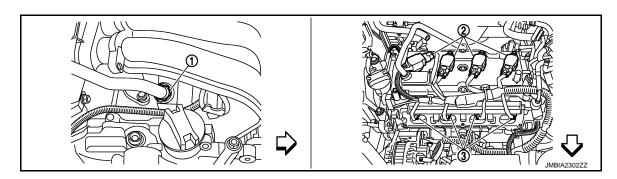


PCV valve

- Ignition coil (with power transistor) and spark plug
- Fuel injector


⟨
→ Vehicle front

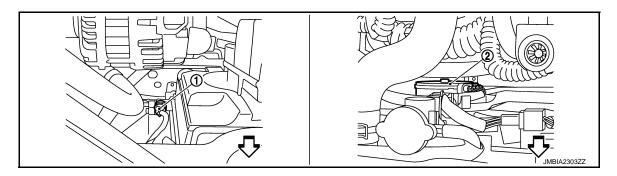


- 1. Refrigerant pressure sensor
- 2. Cooling fan motor

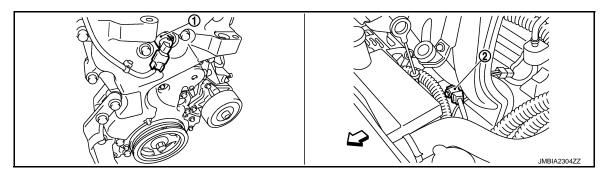

- Intake valve timing control solenoid 2. Knock sensor valve

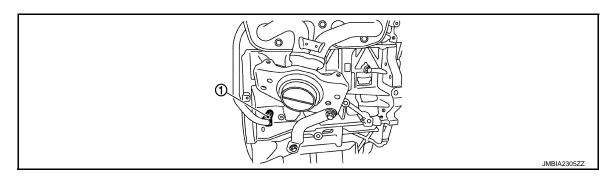

1. Crankshaft position sensor (POS)

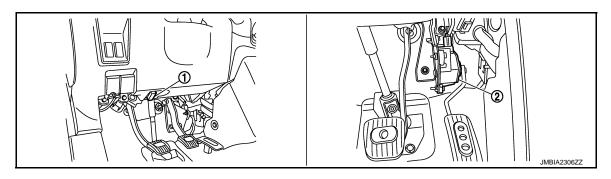

- 1. Data link connector
- 2. Accelerator pedal position sensor

Α

EC

D


Е

Н


Ν

0

Р

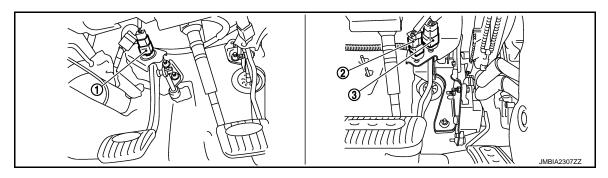


- ASCD clutch switch
- 2. ASCD brake switch
- 3. Stop lamp switch

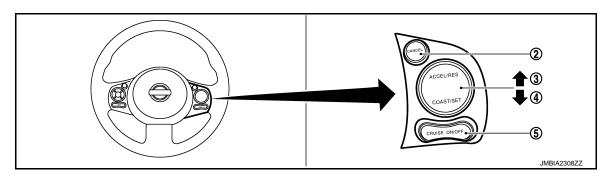


- ASCD steering switch 1.
- CANCEL switch 2.

RESUME/ACCELERATE switch

- SET/COST switch
- MAIN switch

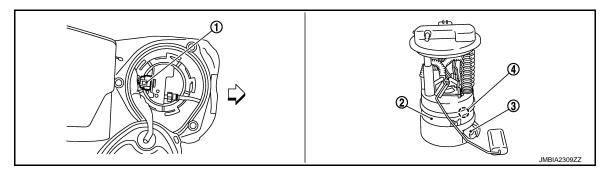

- harness connector
- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator
- Fuel tank temperature sensor
- Vehicle front

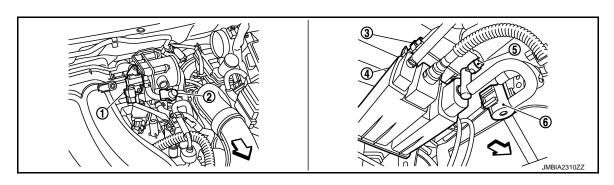

EVAP canister purge volume control 2. solenoid valve

EVAP service port

EVAP control system pressure sen-

COOLING FAN CONTROL

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

4. EVAP canister

5. EVAP canister vent control valve

6. Drain filter

Component Description

INFOID:0000000008451020

Component	Reference	
Camshaft position sensor (PHASE)	EC-726, "Description"	
Crankshaft position sensor (POS)	EC-722, "Description"	
Cooling fan motor	EC-543, "System Description"	
Engine coolant temperature sensor	EC-637, "Description"	
Refrigerant pressure sensor	EC-916, "Description"	


EVAPORATIVE EMISSION SYSTEM

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

EVAPORATIVE EMISSION SYSTEM

System Diagram

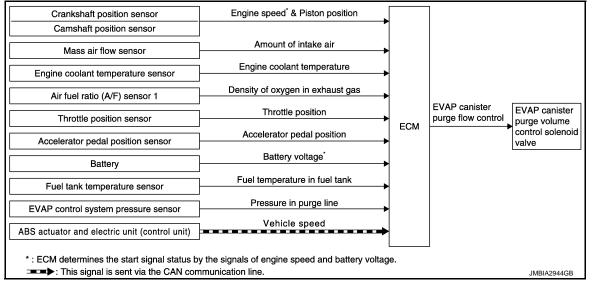

System Description

INFOID:0000000008451022

Α

EC

D

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*1		
Mass air flow sensor	Amount of intake air		
Engine coolant temperature sensor	Engine coolant temperature		
Battery	Battery voltage*1		
Throttle position sensor	Throttle position	EVAP canister	EVAP canister purge vol-
Accelerator pedal position sensor	Accelerator pedal position	purge flow control	ume control solenoid valve
Air fuel ratio (A/F) sensor 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)		
Fuel tank temperature sensor	Fuel temperature in fuel tank		
EVAP control system pressure sensor	Pressure in purge line		
ABS actuator and electric unit (control unit)	Vehicle speed*2		


^{*1:} ECM determines the start signal status by the signals of engine speed and battery voltage.

U

Ν

^{*2:} This signal is sent to the ECM via the CAN communication line.

SYSTEM DESCRIPTION

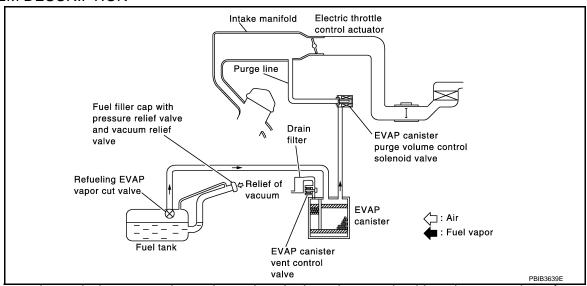


The evaporative emission system is used to reduce hydrocarbons emitted into the atmosphere from the fuel system. This reduction of hydrocarbons is accomplished by activated charcoals in the EVAP canister.

The fuel vapor in the sealed fuel tank is led into the EVAP canister which contains activated carbon and the vapor is stored there when the engine is not operating or when refueling to the fuel tank.

The vapor in the EVAP canister is purged by the air through the purge line to the intake manifold when the engine is operating. EVAP canister purge volume control solenoid valve is controlled by ECM. When the engine operates, the flow rate of vapor controlled by EVAP canister purge volume control solenoid valve is proportionally regulated as the air flow increases.

EVAP canister purge volume control solenoid valve also shuts off the vapor purge line during decelerating.

EVAPORATIVE EMISSION LINE DRAWING

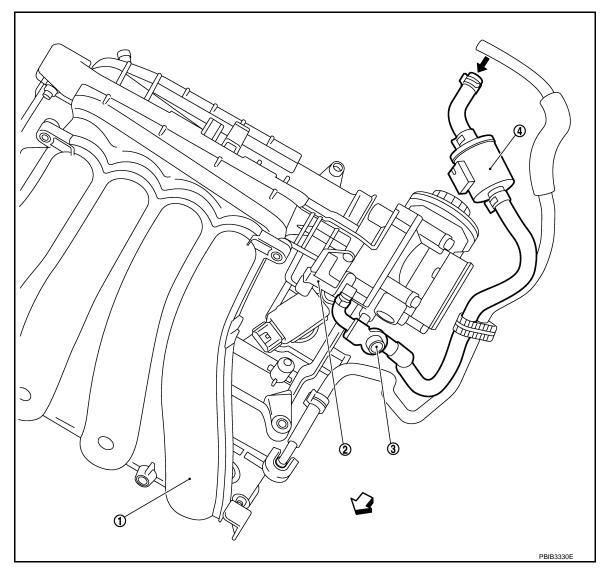

- 1. Intake manifold collector
- EVAP purge resonator

- EVAP canister purge volume control 3. EVAP service port solenoid valve
- From next figure

EC

Α

D

Е

F

G

Н


J

Κ

M

Ν

0

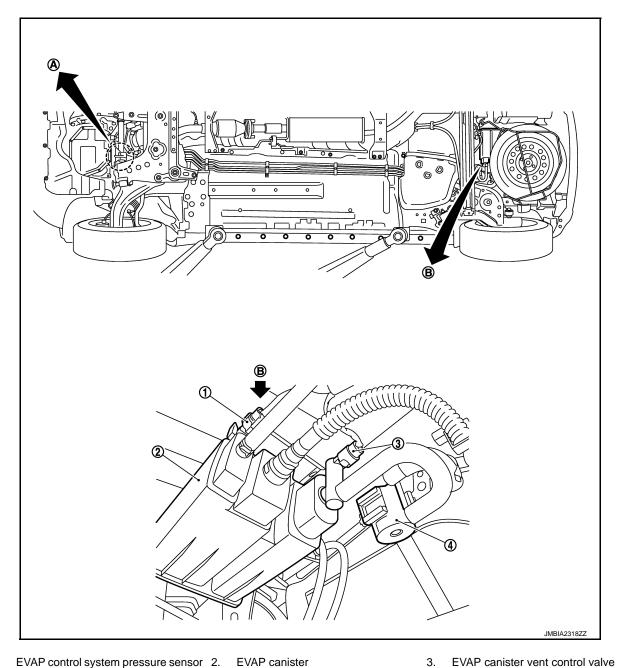


- EVAP control system pressure sensor 2. EVAP canister
- Drain filter
- A. To previous figure

NOTE:

Do not use soapy water or any type of solvent while installing vacuum hose or purge hoses.

Component Parts Location

INFOID:0000000008451023

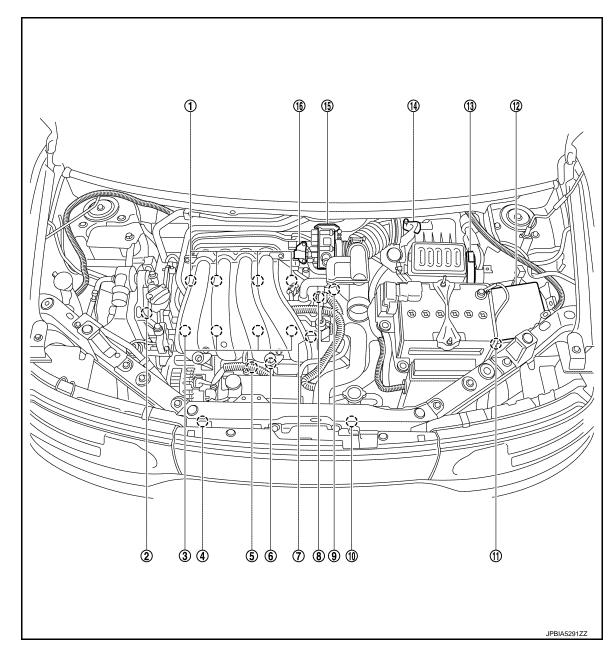

- Ignition coil (with power transistor) and spark plug
- 4. Refrigerant pressure sensor
- Tumble control valve actuator
- 10. Cooling fan motor
- 13. ECM

- 2. Intake valve timing control solenoid valve
- 5. Knock sensor
- Camshaft position sensor (PHASE)
- 11. Battery current sensor
- 14. Mass air flow sensor (with intake air 15. Electric throttle control actuator temperature sensor)
- Fuel injector
- 6. Engine oil temperature sensor
- 9. Engine coolant temperature sensor
- 12. IPDM E/R
 - (with built in throttle position sensor and throttle control motor)

16. EVAP canister purge volume control solenoid valve

EC-555 Revision: 2012 August 2013 CUBE

EC

Α

D

Е


Н

K

M

Ν

0

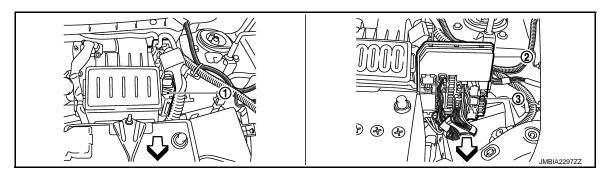


1. ECM


2. IPDM E/R

3. Fuel pump fuse (15 A)




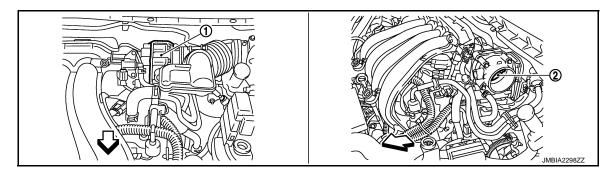

- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- 2. Throttle valve

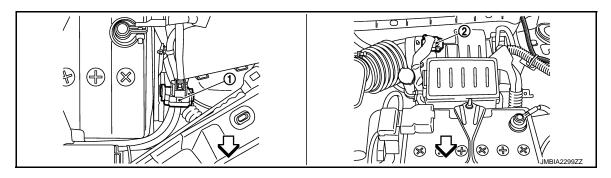

- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

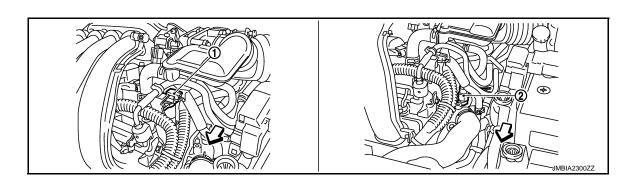

Α

EC

D

Е

F

Н

K


M

Ν

0

Р


- Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor

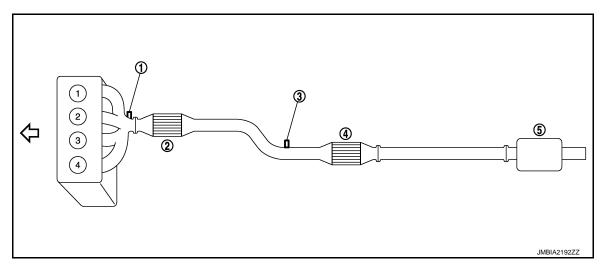

- Air fuel ratio (A/F) sensor 1
- Three way catalyst (under floor)
- Vehicle front


- 2. Three way catalyst (Manifold)
- Muffler

3. Heated oxygen sensor 2

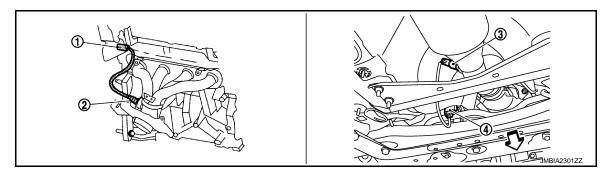

- connector
- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1
- 3. Heated oxygen sensor 2


- Heated oxygen sensor 2 harness connector

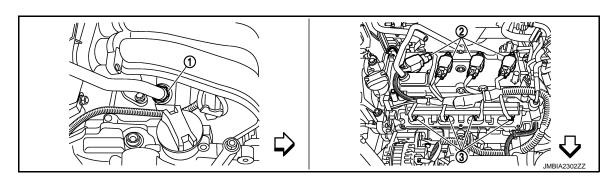


PCV valve

- Ignition coil (with power transistor) and spark plug
- Fuel injector


⟨
→ Vehicle front

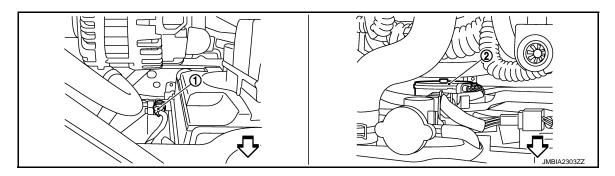


- 1. Refrigerant pressure sensor
- 2. Cooling fan motor

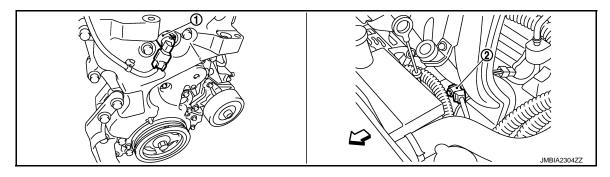

- Intake valve timing control solenoid 2. Knock sensor valve

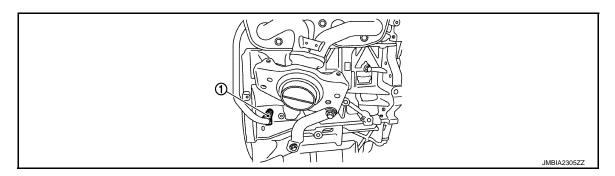

1. Crankshaft position sensor (POS)

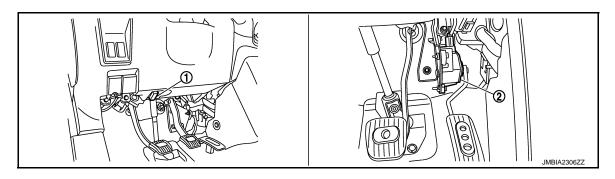

- Data link connector
- 2. Accelerator pedal position sensor

Α

EC


D

Е


Н

Ν

0

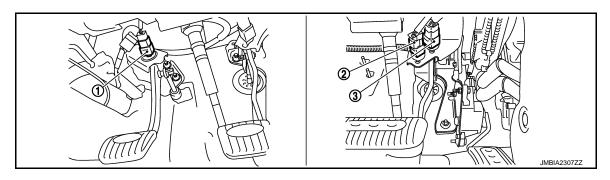


- ASCD clutch switch
- 2. ASCD brake switch
- 3. Stop lamp switch

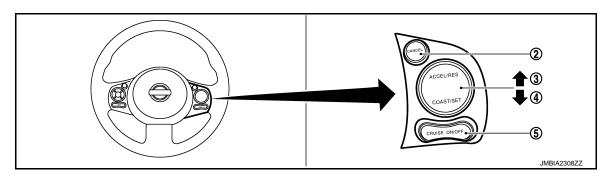


- ASCD steering switch 1.
- CANCEL switch 2.
- RESUME/ACCELERATE switch

- SET/COST switch
- MAIN switch

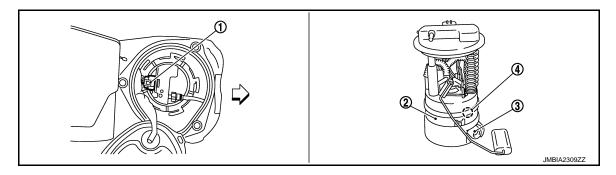

- harness connector
- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator
- Fuel tank temperature sensor
- Vehicle front

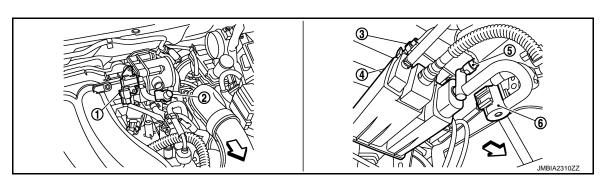

- EVAP canister purge volume control 2. EVAP service port solenoid valve
- EVAP control system pressure sen-

EVAPORATIVE EMISSION SYSTEM

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

4. EVAP canister

5. EVAP canister vent control valve

6. Drain filter

∨ Vehicle front

Component Description

INFOID:0000000008451024

Component	Reference
A/F sensor 1	EC-654, "Description"
Accelerator pedal position sensor	EC-874, "Description"
Camshaft position sensor (PHASE)	EC-726, "Description"
Crankshaft position sensor (POS)	EC-722, "Description"
Engine coolant temperature sensor	EC-637, "Description"
EVAP canister purge volume control solenoid valve	EC-741, "Description"
EVAP control system pressure sensor	EC-757, "Description"
Fuel tank temperature sensor	EC-697, "Description"
Mass air flow sensor	EC-623, "Description"
Throttle position sensor	EC-643, "Description"

Α


EC

D

INFOID:0000000008451026

INTAKE VALVE TIMING CONTROL

System Diagram INFOID:00000008451025

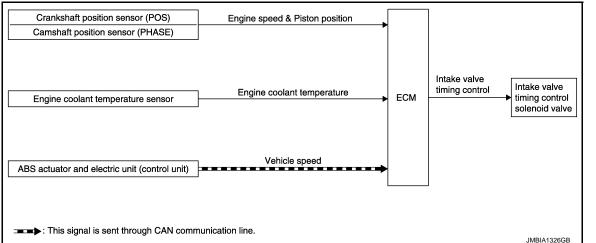


System Description

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine speed and piston position		
Camshaft position sensor (PHASE)	Engine speed and piston position	Intake valve timing control	Intake valve timing control solenoid valve
Engine coolant temperature sensor	Engine coolant temperature		
ABS actuator and electric unit (control unit)	Vehicle speed*	g	
Combination meter	- verticle speed		

^{*:} This signal is sent to the ECM via the CAN communication line

SYSTEM DESCRIPTION

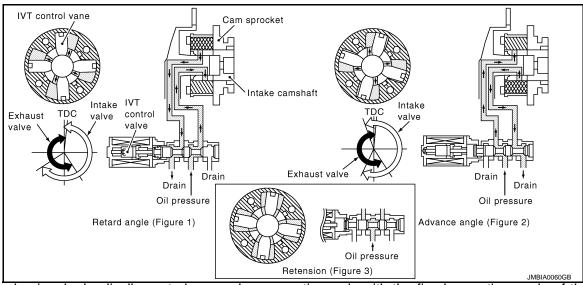


This mechanism hydraulically controls cam phases continuously with the fixed operating angle of the intake valve.

The ECM receives signals such as crankshaft position, camshaft position, engine speed, and engine coolant temperature. Then, the ECM sends ON/OFF pulse duty signals to the intake valve timing (IVT) control solenoid valve depending on driving status. This makes it possible to control the shut/open timing of the intake valve to increase engine torque in low/mid speed range and output in high-speed range.

Component Parts Location

INFOID:0000000008451027

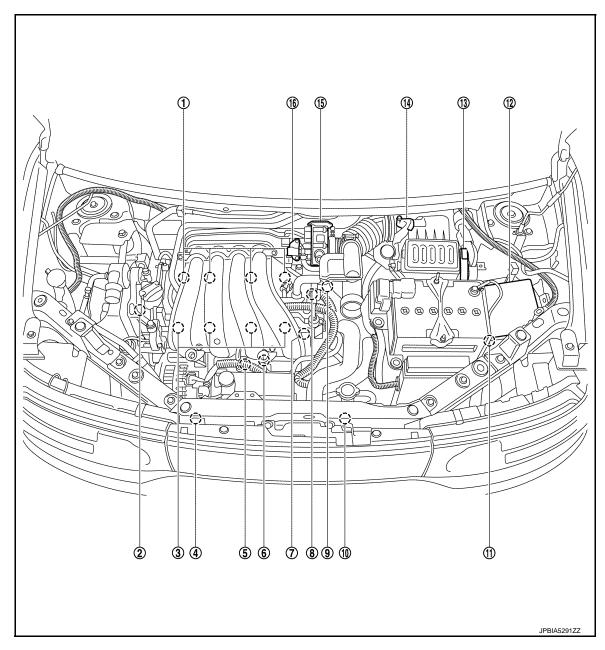

Ignition coil (with power transistor) and spark plug

16. EVAP canister purge volume control

- Refrigerant pressure sensor
- Tumble control valve actuator
- 10. Cooling fan motor

solenoid valve

- 13. ECM
- Intake valve timing control solenoid 3. valve
- 5. Knock sensor
- Camshaft position sensor (PHASE)
- 11. Battery current sensor
- temperature sensor)
- Fuel injector
- Engine oil temperature sensor
- 9. Engine coolant temperature sensor
- 12. IPDM E/R
- 14. Mass air flow sensor (with intake air 15. Electric throttle control actuator (with built in throttle position sensor and throttle control motor)

Α

EC

D

Е

F

G


Н

M

Ν

0

Р

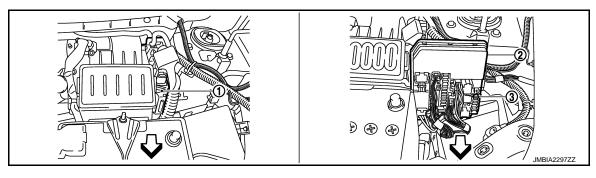


1. ECM


2. IPDM E/R

3. Fuel pump fuse (15 A)



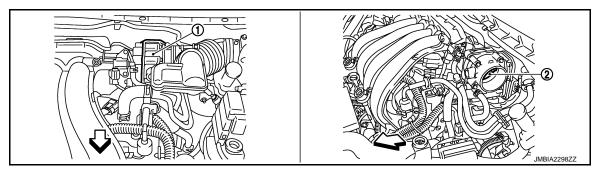


- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- . Throttle valve

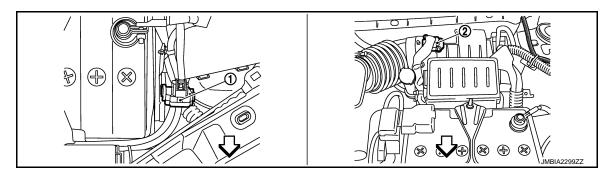


- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

⟨
→ Vehicle front

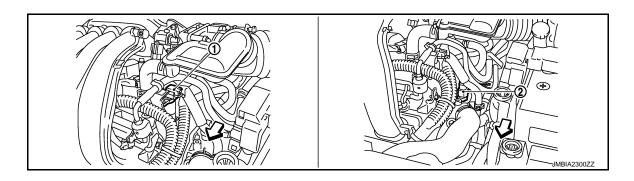


- 1. Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor

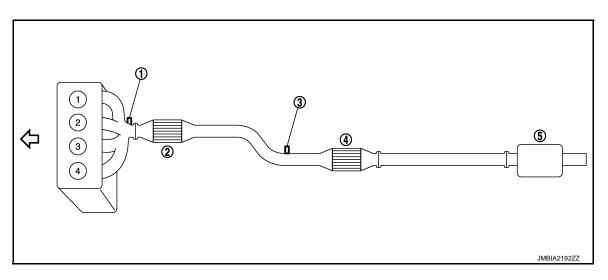

- 1. Air fuel ratio (A/F) sensor 1
- 4. Three way catalyst (under floor)


- 2. Three way catalyst (Manifold)
- 5. Muffler

3. Heated oxygen sensor 2

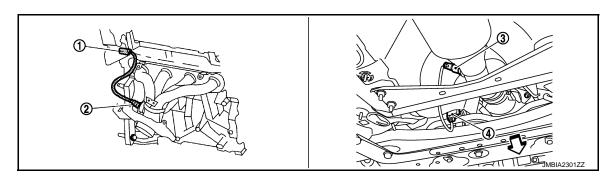

- Air fuel ratio (A/F) sensor 1 harness connector
- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1
- 3. Heated oxygen sensor 2


- 4. Heated oxygen sensor 2 harness connector
- ⟨
 → Vehicle front

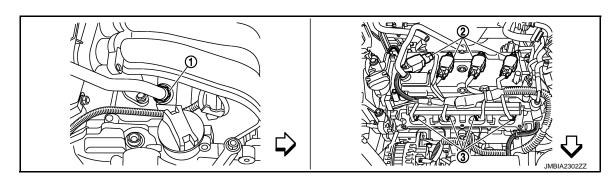


1. PCV valve

- 2. Ignition coil (with power transistor) and spark plug
- Fuel injector


⟨
→ Vehicle front

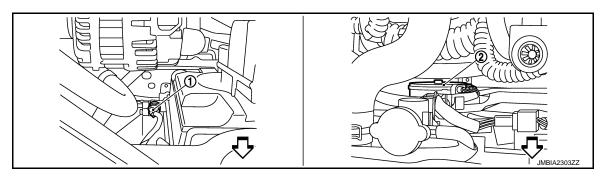


- Refrigerant pressure sensor
- 2. Cooling fan motor

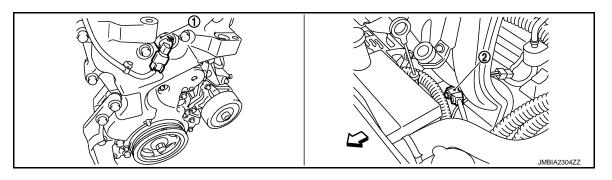

- Intake valve timing control solenoid 2. Knock sensor

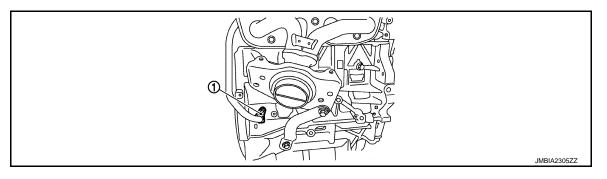

Crankshaft position sensor (POS)

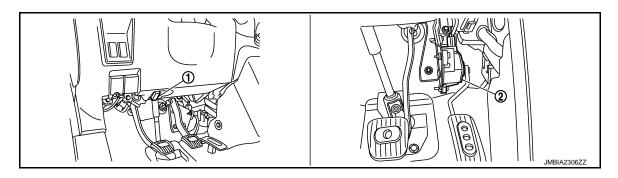

- Data link connector
- Accelerator pedal position sensor

EC-565 Revision: 2012 August 2013 CUBE

Α

EC

D

Е

F


G

Н


K

Ν

0

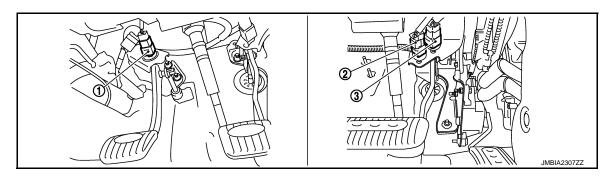


- ASCD clutch switch
- 2. ASCD brake switch
- Stop lamp switch

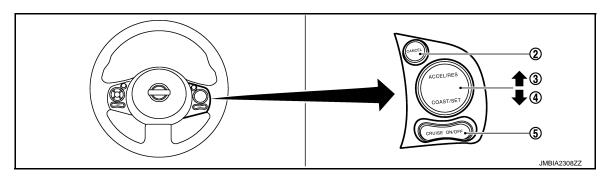


- ASCD steering switch 1.
- SET/COST switch
- CANCEL switch
- MAIN switch

RESUME/ACCELERATE switch 3.

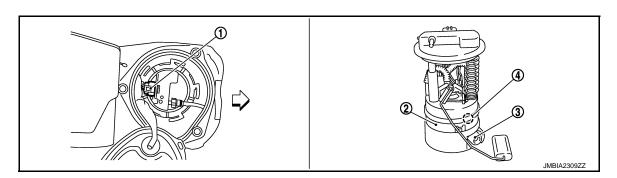

- harness connector
- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator

- Fuel tank temperature sensor

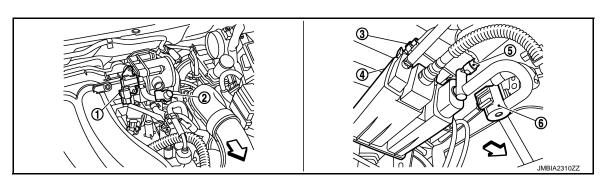

- EVAP canister purge volume control 2. solenoid valve
- **EVAP** service port
- EVAP control system pressure sen-

INTAKE VALVE TIMING CONTROL

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

4. EVAP canister

EVAP canister vent control valve

6. Drain filter

 $\begin{tabular}{ll} \begin{tabular}{ll} \beg$

Component Description

INFOID:0000000008451028

Component	Reference
Camshaft position sensor (PHASE)	EC-726, "Description"
Crankshaft position sensor (POS)	EC-722, "Description"
Engine coolant temperature sensor	EC-637, "Description"
Intake valve timing control solenoid valve	EC-561, "System Description"

Е

D

Α

EC

F

G

Н

K

L


M

Ν

0

TUMBLE CONTROL VALVE CONTROL

System Diagram

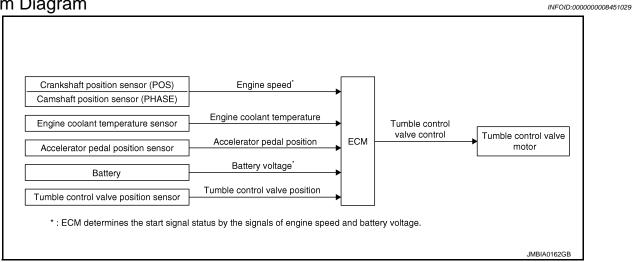

System Description

INFOID:0000000008451030

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS)	Engine anoud*		
Camshaft position sensor (PHASE)	Engine speed*		Tumble central value meter
Battery	Battery voltage*	Tumble control	
Engine coolant temperature sensor	Engine coolant temperature	valve control	Tumble control valve motor
Accelerator pedal position sensor	Accelerator pedal position		
Tumble control valve position sensor	Tumble control valve position		

^{*:} ECM determines the start signal status by the signals of engine speed and battery voltage.

SYSTEM DESCRIPTION

Tumble control valve has a valve portion in the intake passage of each cylinder.

While idling and during low engine coolant temperature, the tumble control valve closes. Thus the velocity of the air in the intake passage increases, promoting the vaporization of the fuel and producing a tumble in the combustion chamber.

Because of this operation, this system tends to increase the burning speed of the gas mixture, improve fuel consumption, and increase the stability in running conditions.


Also, except when idling and during low engine coolant temperature, this system opens the tumble control valve.

In this condition, this system tends to increase power by improving intake efficiency via reduction of intake flow resistance.

The tumble control valve is operated by the ECM.

Component Parts Location

INFOID:0000000008451031

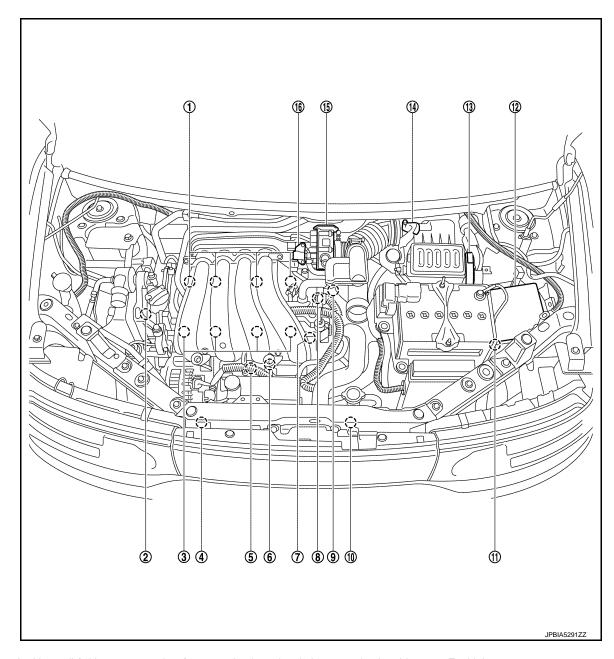

- Ignition coil (with power transistor) and spark plug
- 4. Refrigerant pressure sensor
- Tumble control valve actuator
- 10. Cooling fan motor
- 13. ECM

- 2. Intake valve timing control solenoid valve
- 5. Knock sensor
- Camshaft position sensor (PHASE)
- 11. Battery current sensor
- temperature sensor)
- Fuel injector
- 6. Engine oil temperature sensor
- 9. Engine coolant temperature sensor
- 12. IPDM E/R
- 14. Mass air flow sensor (with intake air 15. Electric throttle control actuator (with built in throttle position sensor and throttle control motor)
- 16. EVAP canister purge volume control solenoid valve

EC

Α

D

Е


Н

K

M

Ν

0

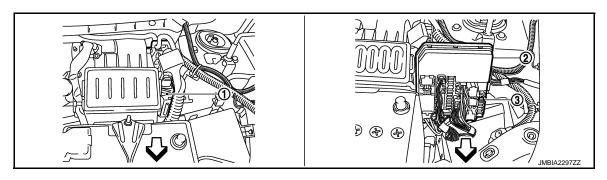


1. ECM


2. IPDM E/R

3. Fuel pump fuse (15 A)



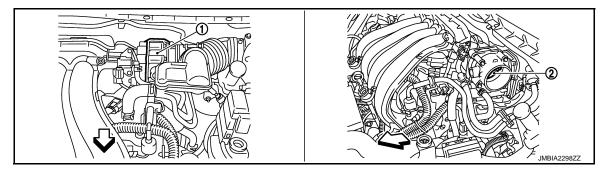


- Electric throttle control actuator (with built-in position sensor, throttle control motor)
- Throttle valve

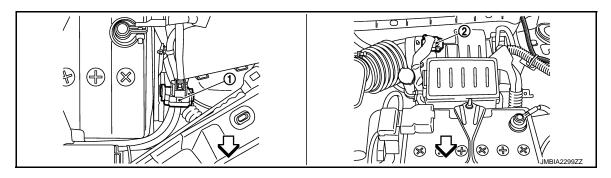

- Battery current sensor
- Mass air flow sensor (with Intake air temperature sensor)

⟨
→ Vehicle front

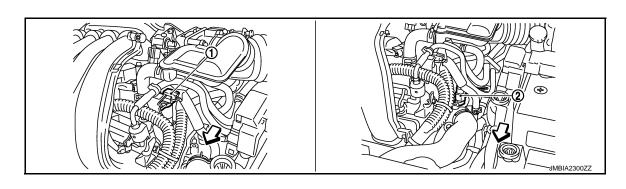

Α

EC

D

Е

F

Н

K


M

Ν

0

Р


- 1. Camshaft position sensor (PHASE) 2. Engine coolant temperature sensor

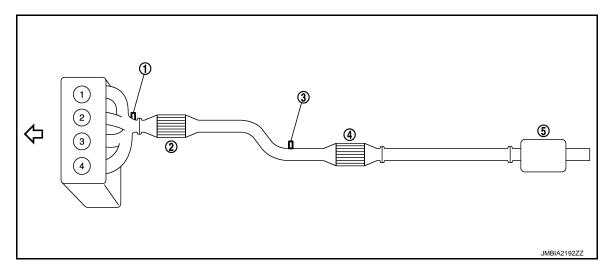

- 1. Air fuel ratio (A/F) sensor 1
- 4. Three way catalyst (under floor)
- √ Vehicle front


- 2. Three way catalyst (Manifold)
- 5. Muffler

3. Heated oxygen sensor 2

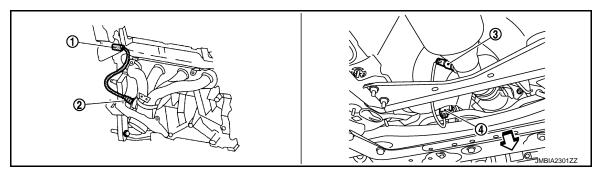

- Air fuel ratio (A/F) sensor 1 harness connector
- Air fuel ratio (A/F) sensor 1 harness 2. Air fuel ratio (A/F) sensor 1
- 3. Heated oxygen sensor 2


- Heated oxygen sensor 2 harness connector

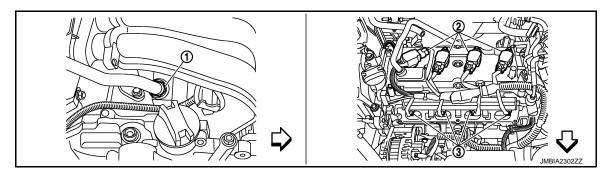


1. PCV valve

- Ignition coil (with power transistor) and spark plug
- 3. Fuel injector


⟨
→ Vehicle front

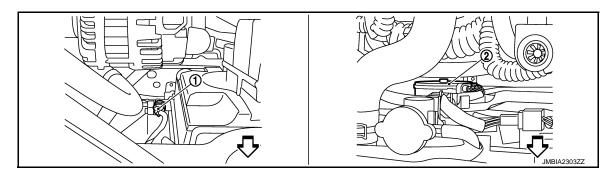


- 1. Refrigerant pressure sensor
- 2. Cooling fan motor

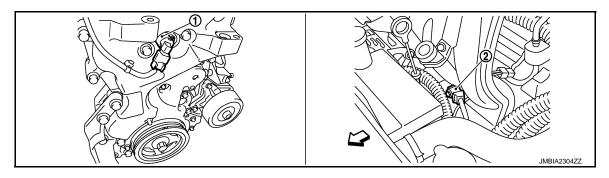


- Intake valve timing control solenoid 2. Knock sensor valve

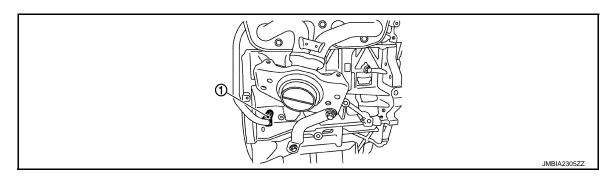


1. Crankshaft position sensor (POS)

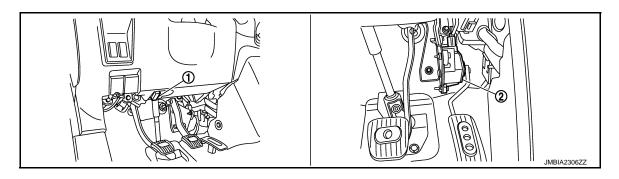

- Data link connector
- 2. Accelerator pedal position sensor

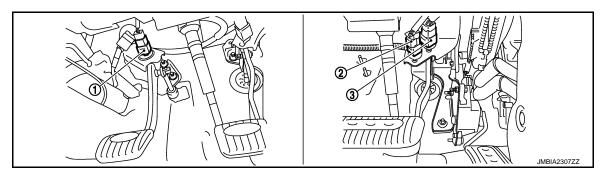


- ASCD clutch switch
- 2. ASCD brake switch
- 3. Stop lamp switch

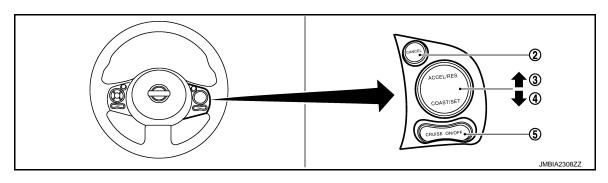


- ASCD steering switch 1.
- CANCEL switch
- RESUME/ACCELERATE switch

- SET/COST switch
- MAIN switch

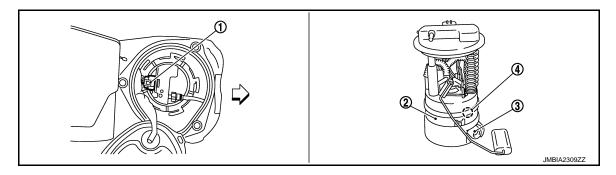

- harness connector
- Fuel level sensor unit and fuel pump 2. Fuel level sensor unit and fuel pump 3. Fuel pressure regulator
- Fuel tank temperature sensor
- Vehicle front

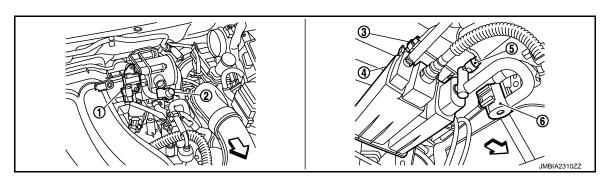

- EVAP canister purge volume control 2. EVAP service port solenoid valve
- EVAP control system pressure sen-

EC-573 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

Н

Ν

0

TUMBLE CONTROL VALVE CONTROL

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

4. EVAP canister

5. EVAP canister vent control valve

6. Drain filter

Component Description

INFOID:0000000008451032

Component	Reference
Accelerator pedal position sensor	EC-874, "Description"
Camshaft position sensor (PHASE)	EC-726, "Description"
Crankshaft position sensor (POS)	EC-722, "Description"
Engine coolant temperature sensor	EC-637, "Description"
Tumble control valve	EC-851, "Description"
Tumble control valve position sensor	EC-856, "DTC Logic"

[MR18DE (FOR CALIFORNIA)]

Α

EC

Р

INFOID:0000000008451033

INFOID:0000000008451034

FUEL FILLER CAP WARNING SYSTEM

System Diagram

Pressure in purge line

• Fuel level signal
• Fuel filler cap warning reset signal

Fuel filler cap warning display signal

Fuel level sensor unit

Meter control switch

This signal is sent via the CAN communication line.

System Description

INPUT/OUTPUT SIGNAL CHART

input		
Unit/Sensor	Input signal to ECM	ECM function
EVAP control system pressure sensor	Pressure in purge line	
Combination meter	Fuel level signal*	Fuel filler cap warning control
	Fuel filler cap warning reset signal*	

^{*:} This signal is sent to the ECM via the CAN communication line.

Output

Unit	Output signal	Actuator
ECM	Fuel filler cap warning display signal*	Combination meter

^{*:} This signal is sent to the combination meter via the CAN communication line.

SYSTEM DESCRIPTION

The fuel filler cap warning system alerts the driver to the prevention of the fuel filler being left uncapped and malfunction occurrences after refueling, by turning ON the fuel filler cap warning display on the combination meter.

ECM judges a refueled state, based on a fuel level signal transmitted from the combination meter.

When a very small leak is detected through the EVAP leak diagnosis performed after judging the refueled state, ECM transmits a fuel filler cap warning display signal (request for display ON) to the combination meter via CAN communication.

When receiving the signal, the combination meter turns ON the fuel filler cap warning display.

CAUTION:

Check fuel filler cap installation condition when the fuel filler cap warning display turns ON.

Reset Operation

The fuel filler cap warning lamp tunes OFF, according to any condition listed below:

- Reset operation is performed by operating the meter control switch on the combination meter. Refer to <u>MWI-24</u>, "INFORMATION DISPLAY: System Description".
- When the reset operation is performed, the combination meter transmits a fuel filler cap warning reset signal to ECM via CAN communication. ECM transmits a fuel filler cap warning display signal (request for display OFF) to the combination meter via CAN communication. When receiving the signal, the combination meter turns OFF the fuel filler cap warning display.
- EVAP leak diagnosis result is normal.

FUEL FILLER CAP WARNING SYSTEM

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

- Fuel refilled.
- DTC erased by using CONSULT.

NOTE:

MIL turns ON if a malfunction is detected in leak diagnosis results again at the trip after the fuel filler cap warning display turns ON/OFF.

ON BOARD DIAGNOSTIC (OBD) SYSTEM

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

ON BOARD DIAGNOSTIC (OBD) SYSTEM

Diagnosis Description

This system is an on board diagnostic system that records exhaust emission-related diagnostic information and detects a sensors/actuator-related malfunction. A malfunction is indicated by the malfunction indicator lamp (MIL) and stored in ECU memory as a DTC. The diagnostic information can be obtained with the diagnostic information.

nostic tool (GST: Generic Scan Tool).
GST (Generic Scan Tool)

When GST is connected with a data link connector equipped on the vehicle side, it will communicate with the control unit equipped in the vehicle and then enable various kinds of diagnostic tests. Refer to GI-49, "Description".

NOTE:

Service \$0A is not applied for regions where it is not mandated.

EC

Α

INFOID:0000000008451035

INFOID:0000000008451036

Е

D

F

G

Н

J

N /I

L

Ν

0

Р

[MR18DE (FOR CALIFORNIA)]

DIAGNOSIS SYSTEM (ECM) DIAGNOSIS DESCRIPTION

DIAGNOSIS DESCRIPTION: 1st Trip Detection Logic and Two Trip Detection Logic

NFOID:0000000008451037

When a malfunction is detected for the first time, 1st trip DTC and 1st trip Freeze Frame data are stored in the ECM memory. The MIL will not illuminate at this stage. <1st trip>

If the same malfunction is detected again during the next drive, the DTC and Freeze Frame data are stored in the ECM memory, and the MIL illuminates. The MIL illuminates at the same time when the DTC is stored. <2nd trip> The "trip" in the "Two Trip Detection Logic" means a driving mode in which self-diagnosis is performed during vehicle operation. Specific on board diagnostic items will cause the ECM to illuminate or blink the MIL, and store DTC and Freeze Frame data, even in the 1st trip, as shown below.

×: Applicable —: Not applicable

		M	IIL		DTC 1st trip			DTC
Items	1st trip 2nd tri		l trip	1st trip	2nd trip	1st trip	2nd trip	
	Blinking	Illuminat- ed	Blinking	Illuminat- ed			displaying	display- ing
Misfire (Possible three way catalyst damage) — DTC: P0300 – P0304 is being detected	×	_	_	_	_	_	×	_
Misfire (Possible three way catalyst damage) — DTC: P0300 – P0304 is being detected	_	_	×	_	_	×	_	_
One trip detection diagnoses (Refer to EC-938, "DTC Index".)	_	×	_	_	×	_	_	_
Except above	_	_	_	×		×	×	_

DIAGNOSIS DESCRIPTION: DTC and Freeze Frame Data

INFOID:0000000008451038

DTC AND 1ST TRIP DTC

The 1st trip DTC (whose number is the same as the DTC number) is displayed for the latest self-diagnostic result obtained. If the ECM memory was cleared previously, and the 1st trip DTC did not recur, the 1st trip DTC will not be displayed.

If a malfunction is detected during the 1st trip, the 1st trip DTC is saved in the ECM memory. The MIL will not light up (two trip detection logic). If the same malfunction is not detected in the 2nd trip (meeting the required driving pattern), the 1st trip DTC is cleared from the ECM memory. If the same malfunction is detected in the 2nd trip, both the 1st trip DTC and DTC are saved in the ECM memory and the MIL lights up. In other words, the DTC is stored in the ECM memory and the MIL lights up when the same malfunction occurs in two consecutive trips. If a 1st trip DTC is stored and a non-diagnostic operation is performed between the 1st and 2nd trips, only the 1st trip DTC will continue to be stored. For malfunctions that blink or light up the MIL during the 1st trip, the DTC and 1st trip DTC are stored in the ECM memory.

For malfunctions in which 1st trip DTCs are displayed, refer to EC-938, "DTC Index". These items are required by legal regulations to continuously monitor the system/component. In addition, the items monitored non-continuously are also displayed on CONSULT.

1st trip DTC is specified in Service \$07 of SAE J1979/ISO 15031-5. 1st trip DTC detection occurs without illuminating the MIL and therefore does not warn the driver of a malfunction.

When a 1st trip DTC is detected, check, print out or write down and erase (1st trip) DTC and Freeze Frame data as specified in Work Flow procedure Step 2, refer to EC-478, "Work Flow". Then perform DTC Confirmation Procedure or Component Function Check to try to duplicate the malfunction. If the malfunction is duplicated, the item requires repair.

FREEZE FRAME DATA AND 1ST TRIP FREEZE FRAME DATA

The ECM records the driving conditions such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed, vehicle speed, absolute throttle position, base fuel schedule and intake air temperature at the moment a malfunction is detected.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data. The data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT or GST. The 1st trip freeze frame data can only be displayed on the CONSULT screen.

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MIL on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items			
1	Freeze frame data	Misfire — DTC: P0300 – P0304 Fuel Injection System Function — DTC: P0171		
2		Except the above items		
3	1st trip freeze frame data			

For example, the EGR malfunction (Priority: 2) was detected and the freeze frame data was saved in the 2nd trip. After that when the misfire (Priority: 1) is detected in another trip, the freeze frame data will be updated from the EGR malfunction to the misfire. The 1st trip freeze frame data is updated each time a different malfunction is detected. There is no priority for 1st trip freeze frame data. However, once freeze frame data is stored in the ECM memory, 1st trip freeze data is no longer stored (because only one freeze frame data or 1st trip freeze frame data can be stored in the ECM). If freeze frame data is stored in the ECM memory and freeze frame data with the same priority occurs later, the first (original) freeze frame data remains unchanged in the ECM memory.

Both 1st trip freeze frame data and freeze frame data (along with the DTCs) are cleared when the ECM memory is erased.

DIAGNOSIS DESCRIPTION: Counter System

RELATIONSHIP BETWEEN MIL, 1ST TRIP DTC, DTC, AND DETECTABLE ITEMS

- When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data are stored in the ECM memory.
- When the same malfunction is detected in two consecutive trips, the DTC and the freeze frame data are stored in the ECM memory, and the MIL will come on.
- The MIL will turn OFF after the vehicle is driven 3 times (driving pattern B) with no malfunction. The drive is counted only when the recorded driving pattern is met (as stored in the ECM). If another malfunction occurs while counting, the counter will reset.
- The DTC and the freeze frame data will be stored until the vehicle is driven 40 times (driving pattern A) without the same malfunction recurring (except for Misfire and Fuel Injection System). For Misfire and Fuel Injection System, the DTC and freeze frame data will be stored until the vehicle is driven 80 times (driving pattern C) without the same malfunction recurring. The "TIME" in "SELF-DIAGNOSTIC RESULTS" mode of CONSULT will count the number of times the vehicle is driven.
- The 1st trip DTC is not displayed when the self-diagnosis results in OK for the 2nd trip.

COUNTER SYSTEM CHART

Items	Fuel Injection System	Misfire	Other
MIL (turns OFF)	3 (pattern B)	3 (pattern B)	3 (pattern B)
DTC, Freeze Frame Data (no display)	80 (pattern C)	80 (pattern C)	40 (pattern A)
1st Trip DTC (clear)	1 (pattern C), *1	1 (pattern C), *1	1 (pattern B)
1st Trip Freeze Frame Data (clear)	*1, *2	*1, *2	1 (pattern B)

For details about patterns B and C under "Fuel Injection System" and "Misfire", see "EXPLANATION FOR DRIVING PATTERNS FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM".

For details about patterns A and B under Other, see "EXPLANATION FOR DRIVING PATTERNS FOR "MISFIRE <EXHAUST QUALITY DETERIORATION>", "FUEL INJECTION SYSTEM".

- *1: Clear timing is at the moment OK is detected.
- *2: Clear timing is when the same malfunction is detected in the 2nd trip.

Relationship Between MIL, DTC, 1st Trip DTC and Driving Patterns for "Misfire <Exhaust Quality Deterioration>", "Fuel Injection System"

EC

С

Е

D

F

0

Н

INFOID:0000000008451039

|


L

IV. /

Ν

0

Р

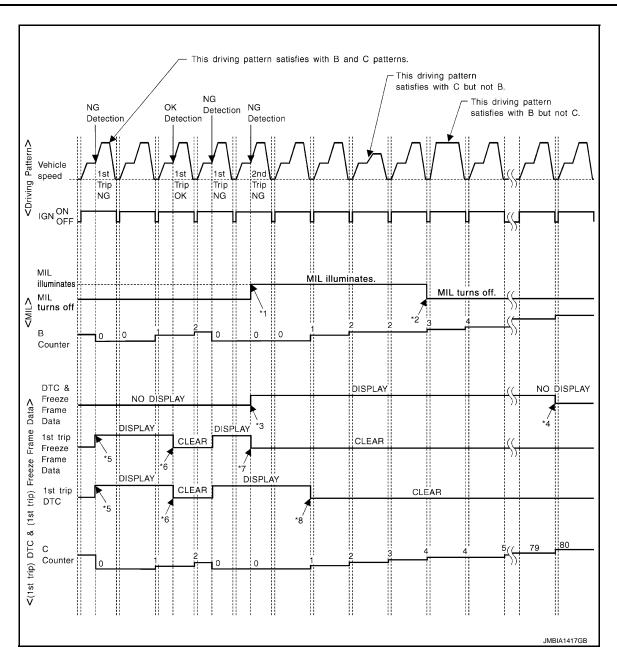

- *1: When the same malfunction is detected in two consecutive trips, MIL will light up.
- *4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 80 times (pattern C) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)
- *7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.

- *2: MIL will turn OFF after vehicle is driv- *3: When the same malfunction is deen 3 times (pattern B) without any malfunctions.
- *5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.
- *8: 1st trip DTC will be cleared when vehicle is driven once (pattern C) without the same malfunction after DTC is stored in ECM.
- tected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.
- *6: The 1st trip DTC and the 1st trip freeze frame data will be cleared at the moment OK is detected.

Explanation for Driving Patterns for "Misfire < Exhaust Quality Deterioration>", "Fuel Injection System"

Driving Pattern B

Refer to EC-582, "DIAGNOSIS DESCRIPTION: Driving Pattern".

Driving Pattern C

Refer to EC-582, "DIAGNOSIS DESCRIPTION: Driving Pattern".

Example:


If the stored freeze frame data is as per the following:

Engine speed: 850 rpm, Calculated load value: 30%, Engine coolant temperature: 80°C (176°F)

To be satisfied with driving pattern C, the vehicle should run under the following conditions:

Engine speed: 475 – 1,225 rpm, Calculated load value: 27 – 33%, Engine coolant temperature: more than 70°C (158°F)

Relationship Between MIL, DTC, 1st Trip DTC and Driving Patterns Except For "Misfire <Exhaust Quality Deterioration>", "Fuel Injection System"

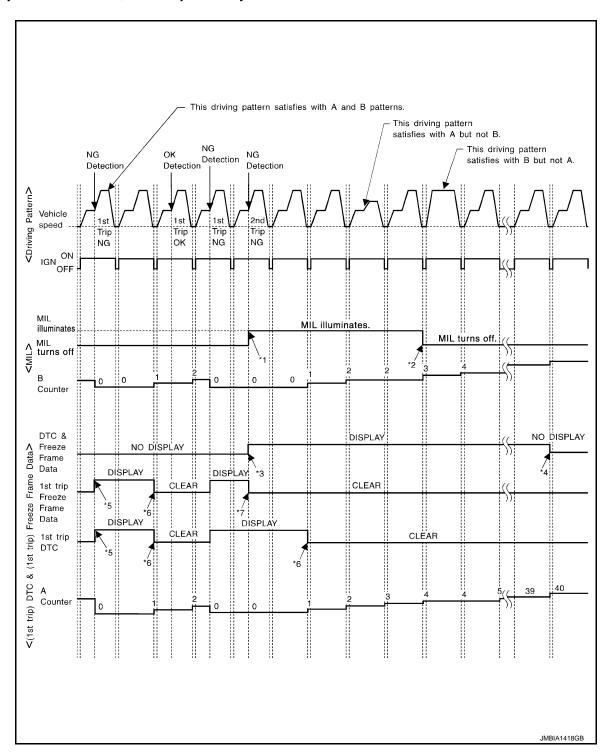

EC

Α

D

Е

F

G

Н

K

M

N

0

Р

[MR18DE (FOR CALIFORNIA)]

- *1: When the same malfunction is detected in two consecutive trips, MIL will light up.
- *4: The DTC and the freeze frame data will not be displayed any longer after vehicle is driven 40 times (pattern A) without the same malfunction. (The DTC and the freeze frame data still remain in ECM.)
- *7: When the same malfunction is detected in the 2nd trip, the 1st trip freeze frame data will be cleared.

- *2: MIL will turn OFF after vehicle is driv- *3: When the same malfunction is deen 3 times (pattern B) without any malfunctions.
- *5: When a malfunction is detected for the first time, the 1st trip DTC and the 1st trip freeze frame data will be stored in ECM.
- tected in two consecutive trips, the DTC and the freeze frame data will be stored in ECM.
- *6: 1st trip DTC will be cleared after vehicle is driven once (pattern B) without the same malfunction.

Explanation for Driving Patterns Except for "Misfire <Exhaust Quality Deterioration>", "Fuel Injection System"

Driving Pattern A

Refer to EC-582, "DIAGNOSIS DESCRIPTION: Driving Pattern".

Driving Pattern B

Refer to EC-582, "DIAGNOSIS DESCRIPTION: Driving Pattern".

DIAGNOSIS DESCRIPTION: Driving Pattern

INFOID:0000000008451040

CAUTION:

Always drive at a safe speed.

DRIVING PATTERN A

Driving pattern A means a trip satisfying the following conditions.

- Engine speed reaches 400 rpm or more.
- Engine coolant temperature rises by 20°C (36°F) or more after starting the engine.
- Engine coolant temperature reaches 70°C (158°F) or more.
- The ignition switch is turned from ON to OFF.

NOTE:

- When the same malfunction is detected regardless of driving conditions, reset the counter of driving pattern
- When the above conditions are satisfied without detecting the same malfunction, reset the counter of driving pattern A.

DRIVING PATTERN B

Driving pattern B means a trip satisfying the following conditions.

- Engine speed reaches 400 rpm or more.
- Engine coolant temperature reaches 70°C (158°F) or more.
- Vehicle speed of 70 120 km/h (44 75 MPH) is maintained for 60 seconds or more under the control of closed loop.
- Vehicle speed of 30 60 km/h (19 37 MPH) is maintained for 10 seconds or more under the control of closed loop.
- Under the closed loop control condition, the following state reaches 12 seconds or more in total: Vehicle speed of 4 km/h (2 MPH) or less with idling condition.
- The state of driving at 10 km/h (7 MPH) or more reaches 10 minutes or more in total.
- A lapse of 22 minutes or more after engine start.

NOTE:

- Drive the vehicle at a constant velocity.
- When the same malfunction is detected regardless of driving conditions, reset the counter of driving pattern
- When the above conditions are satisfied without detecting the same malfunction, reset the counter of driving pattern B.

DRIVING PATTERN C

Driving pattern C means operating vehicle as per the following:

The following conditions should be satisfied at the same time:

Engine speed: (Engine speed in the freeze frame data) ±375 rpm

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

Calculated load value: (Calculated load value in the freeze frame data) x (1±0.1) [%] Engine coolant temperature condition:

 When the freeze frame data shows lower than 70°C (158°F), engine coolant temperature should be lower than 70°C (158°F).

• When the freeze frame data shows higher than or equal to 70°C (158°F), engine coolant temperature should be higher than or equal to 70°C (158°F).

NOTE

- When the same malfunction is detected regardless of the above vehicle conditions, reset the counter of driving pattern C.
- When the above conditions are satisfied without detecting the same malfunction, reset the counter of driving pattern C.
- The 1st trip DTC will be cleared when C counter is counted once without the same malfunction after DTC is stored in ECM.

DRIVING PATTERN D

Driving pattern D means a trip satisfying the following conditions.

- The state of driving at 40 km/h (25 MPH) reaches 300 seconds or more in total.
- Idle speed lasts 30 seconds or more.
- A lapse of 600 seconds or more after engine start.

NOTE:

- When the same malfunction is detected regardless of driving conditions, reset the counter of driving pattern D.
- When the above conditions are satisfied without detecting the same malfunction, reset the counter of driving pattern D.

DIAGNOSIS DESCRIPTION: System Readiness Test (SRT) Code

System Readiness Test (SRT) code is specified in Service \$01 of SAE J1979/ISO 15031-5.

As part of an enhanced emissions test for Inspection & Maintenance (I/M), certain states require the status of SRT be used to indicate whether the ECM has completed self-diagnosis of major emission systems and components. Completion must be verified in order for the emissions inspection to proceed.

If a vehicle is rejected for a State emissions inspection due to one or more SRT items indicating "INCMP", use the information in this Service Manual to set the SRT to "CMPLT".

In most cases the ECM will automatically complete its self-diagnosis cycle during normal usage, and the SRT status will indicate "CMPLT" for each application system. Once set as "CMPLT", the SRT status remains "CMPLT" until the self-diagnosis memory is erased.

Occasionally, certain portions of the self-diagnostic test may not be completed as a result of the customer's normal driving pattern; the SRT will indicate "INCMP" for these items.

NOTE:

The SRT will also indicate "INCMP" if the self-diagnosis memory is erased for any reason or if the ECM memory power supply is interrupted for several hours.

If, during the state emissions inspection, the SRT indicates "CMPLT" for all test items, the inspector will continue with the emissions test. However, if the SRT indicates "INCMP" for one or more of the SRT items the vehicle is returned to the customer untested.

NOTE:

If MIL is ON during the state emissions inspection, the vehicle is also returned to the customer untested even though the SRT indicates "CMPLT" for all test items. Therefore, it is important to check SRT ("CMPLT") and DTC (No DTCs) before the inspection.

SRT SET TIMING

SRT is set as "CMPLT" after self-diagnosis has been performed one or more times. Completion of SRT is done regardless of whether the result is OK or NG. The set timing is different between OK and NG results and is shown in the table below.

EC

Α

D

Е

F

Н

INFOID:0000000008451041

ı

.

K

_

IVI

Ν

Ρ

	Self-diagnosis result		Example						
Self-diagno			$\begin{array}{cccccccccccccccccccccccccccccccccccc$						
All OK	Case 1	P0400	OK (1)	— (1)	OK (2)	— (2)			
		P0402	OK (1)	—(1)	— (1)	OK (2)			
		P1402	OK (1)	OK (2)	— (2)	— (2)			
		SRT of EGR	"CMPLT"	"CMPLT"	"CMPLT"	"CMPLT"			
	Case 2	P0400	OK (1)	— (1)	— (1)	— (1)			
		P0402	— (0)	— (0)	OK (1)	— (1)			
		P1402	OK (1)	OK (2)	— (2)	— (2)			
		SRT of EGR	"INCMP"	"INCMP"	"CMPLT"	"CMPLT"			
NG exists	Case 3	P0400	OK	OK	_	_			
		P0402	_	_	_	_			
		P1402	NG	_	NG	NG (Consecutive NG)			
		(1st trip) DTC	1st trip DTC	_	1st trip DTC	DTC (= MIL ON)			
		SRT of EGR	"INCMP"	"INCMP"	"INCMP"	"CMPLT"			

OK: Self-diagnosis is carried out and the result is OK.

NG: Self-diagnosis is carried out and the result is NG.

When all SRT related self-diagnoses show OK results in a single cycle (Ignition OFF-ON-OFF), the SRT will indicate "CMPLT". \rightarrow Case 1 above

When all SRT related self-diagnoses show OK results through several different cycles, the SRT will indicate "CMPLT" at the time the respective self-diagnoses have at least one OK result. → Case 2 above

If one or more SRT related self-diagnoses show NG results in 2 consecutive cycles, the SRT will also indicate "CMPLT". \rightarrow Case 3 above

The table above shows that the minimum number of cycles for setting SRT as "INCMP" is the number one (1) for each self-diagnosis (Case 1 & 2) or the number two (2) for one of self-diagnoses (Case 3). However, in preparation for the state emissions inspection, it is unnecessary for each self-diagnosis to be executed twice (Case 3) for the following reasons:

- The SRT will indicate "CMPLT" at the time the respective self-diagnoses have one (1) OK result.
- The emissions inspection requires "CMPLT" of the SRT only with OK self-diagnosis results.
- During SRT driving pattern, the 1st trip DTC (NG) is detected prior to "CMPLT" of SRT and the self-diagnosis memory must be erased from the ECM after repair.
- If the 1st trip DTC is erased, all the SRT will indicate "INCMP".

NOTE:

SRT can be set as "CMPLT" together with the DTC(s). Therefore, DTC check must always be carried out prior to the state emission inspection even though the SRT indicates "CMPLT".

DIAGNOSIS DESCRIPTION: Malfunction Indicator Lamp (MIL)

INFOID:0000000008451042


When emission-related ECU detects a malfunction in the emission control systems components and/or the powertrain control components (which affect vehicle emissions), it turns on/blinks MIL to inform the driver that a malfunction has been detected.

1. The MIL illuminates when ignition switch is turned ON (engine is not running).

NOTE:

Check the MIL circuit if MIL does not illuminate. Refer to <u>EC-908</u>, "<u>Diagnosis Procedure</u>".

When the engine is started, the MIL should go off. NOTE:

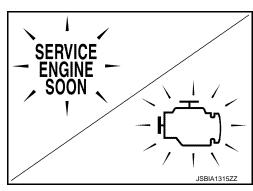

^{-:} Self-diagnosis is not carried out.

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

If MIL continues to illuminate/blink, perform self-diagnoses and inspect/repair accordingly because an emission-related ECU has detected a malfunction in the emission control systems components and/or the powertrain control components (which affect vehicle emissions).

On Board Diagnosis Function

INFOID:0000000008451043

ON BOARD DIAGNOSIS ITEM

The on board diagnostic system has the following functions.

Diagnostic test mode	Function
Bulb check	MIL can be checked.
SRT status	ECM can read if SRT codes are set.
Malfunction warning	If ECM detects a malfunction, it illuminates or blinks MIL to inform the driver that a malfunction has been detected.
Self-diagnostic results	DTCs or 1st trip DTCs stored in ECM can be read.
Accelerator pedal released position learning	ECM can learn the accelerator pedal released position. Refer to EC-488, "ACCELERATOR PEDAL RELEASED POSITION LEARNING: Special Repair Requirement".
Throttle valve closed position learning	ECM can learn the throttle valve closed position. Refer to EC-488, "THROTTLE VALVE CLOSED PO-SITION LEARNING: Special Repair Requirement".
Idle air volume learning	ECM can learn the idle air volume. Refer to EC-489, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".
Mixture ratio self-learning value clear	Mixture ratio self-learning value can be erased. Refer to <u>EC-490, "MIXTURE RATIO SELF-LEARN-ING VALUE CLEAR: Special Repair Requirement".</u>

BULB CHECK MODE

Description

This function allows damage inspection in the MIL bulb (blown, open circuit, etc.).

Operation Procedure

- Turn ignition switch ON.
- The MIL on the instrument panel should stay ON. If it remains OFF, check MIL circuit. Refer to EC-908, "Diagnosis Procedure".

SRT STATUS MODE

Description

This function allows to read if ECM has completed the self-diagnoses of major emission control systems and components. For SRT, refer to EC-583, "DIAGNOSIS DESCRIPTION: System Readiness Test (SRT) Code".

Operation Procedure

- Turn ignition switch ON and wait 20 seconds.
- SRT status is indicated as shown blow.
 - ECM continues to illuminate MIL if all SRT codes are set.

EC

D

Е

K


L

M

Ν

Р

ECM blinks MIL for about 10 seconds if all SRT codes are not set.

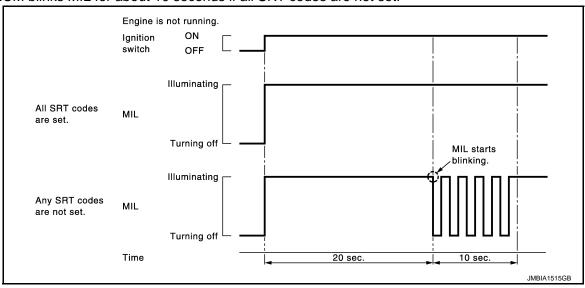

MALFUNCTION WARNING MODE

Description

In this function ECM turns on or blinks MIL when it detects a malfunction in the emission control system components and/or the powertrain control components (which affect vehicle emissions) to inform the driver that a malfunction has been detected.

Operation Procedure

- 1. Turn ignition switch ON.
- Check that MIL illuminates.
 - If it remains OFF, check MIL circuit. Refer to EC-908, "Diagnosis Procedure".
- Start engine and let it idle.
 - For two trip detection logic diagnoses, ECM turns on MIL when it detects the same malfunction twice in the two consecutive driving cycles.
 - For 1st trip detection logic diagnoses, ECM turns on MIL when it detects a malfunction in one driving cycle.
 - ECM blinks MIL when it detects a malfunction that may damage the three way catalyst (misfire).

SELF-DIAGNOSTIC RESULTS MODE

Description

This function allows to indicate DTCs or 1st trip DTCs stored in ECM according to the number of times MIL is blinking.

How to Set Self-diagnostic Results Mode

NOTE:

- It is better to count the time accurately with a clock.
- It is impossible to switch the diagnostic mode when an accelerator pedal position sensor circuit has a malfunction.
- After ignition switch is turned off, ECM is always released from the "self-diagnostic results" mode.
- 1. Confirm that accelerator pedal is fully released, turn ignition switch ON and wait 3 seconds.
- 2. Repeat the following procedure quickly five times within 5 seconds.
 - Fully depress the accelerator pedal.
 - Fully release the accelerator pedal.
- Wait 7 seconds, fully depress the accelerator pedal and keep it depressed for approx. 10 seconds until the MIL starts blinking.

NOTE:

Do not release the accelerator pedal for 10 seconds if MIL starts blinking during this period. This blinking is displaying SRT status and is continued for another 10 seconds.

Fully release the accelerator pedal.

ECM has entered to "Self-diagnostic results" mode.

Α

EC

D

Н

K

L


M

Ν

Р

NOTE:


Wait until the same DTC (or 1st trip DTC) appears to completely confirm all DTCs.

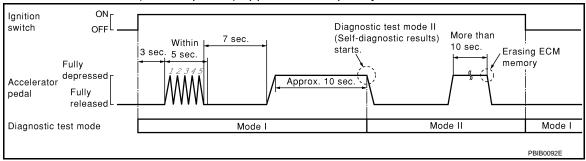

How to Read Self-diagnostic Results

The DTC and 1st trip DTC are indicated by the number of blinks of the MIL as shown below.

The DTC and 1st trip DTC are displayed at the same time. If the MIL does not illuminate in diagnostic test mode I (Malfunction warning), all displayed items are 1st trip DTCs. If only one code is displayed when the MIL illuminates in "malfunction warning" mode, it is a DTC; if two or more codes are displayed, they may be either DTCs or 1st trip DTCs. DTC No. is same as that of 1st trip DTC. These unidentified codes can be identified by using the CONSULT or GST. A DTC will be used as an example for how to read a code.

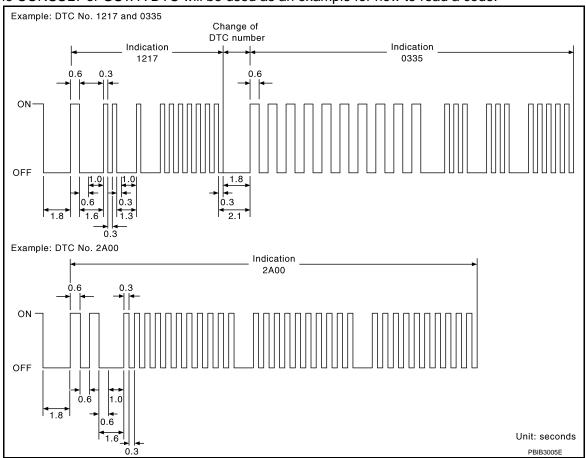

A particular trouble code can be identified by the number of four-digit numeral flashes per the following.

Number	0	1	2	3	4	5	6	7	8	9	Α	В	С	D	Е	F
Flashes	10	1	2	3	4	5	6	7	8	9	11	12	13	14	15	16

The length of time the 1,000th-digit numeral flashes on and off is 1.2 seconds consisting of an ON (0.6-seconds) - OFF (0.6-seconds) cycle.

The 100th-digit numeral and lower digit numerals consist of a 0.3-seconds ON and 0.3-seconds OFF cycle. A change from one digit numeral to another occurs at an interval of 1.0-second OFF. In other words, the later numeral appears on the display 1.3 seconds after the former numeral has disappeared.

A change from one trouble code to another occurs at an interval of 1.8-seconds OFF.

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

In this way, all the detected malfunctions are classified by their DTC numbers. The DTC 0000 refers to no malfunction. Refer to <u>EC-938</u>, "<u>DTC Index</u>".

How to Erase Self-diagnostic Results

By performing this procedure, ECM memory is erased and the following diagnostic information is erased as well.

- Diagnostic trouble codes
- 1st trip diagnostic trouble codes
- · Freeze frame data
- 1st trip freeze frame data
- · System readiness test (SRT) codes
- Test values

NOTE:

Also, if a battery terminal is disconnected, ECM memory is erased and the diagnostic information as listed above is erased. (The amount of time required for erasing may vary from a few seconds to several hours.)

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Turn ignition switch ON.
- 5. Set ECM in "self-diagnostic results" mode.
- 6. The diagnostic information has been erased from the backup memory in the ECM. Fully depress the accelerator pedal and keep it depressed for more than 10 seconds.
- 7. Fully release the accelerator pedal, and confirm the DTC 0000 is displayed.

CONSULT Function

INFOID:0000000008451044

FUNCTION

Diagnostic test mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on the CONSULT screen.
Self diagnostic result	Self-diagnostic results such as 1st trip DTC, DTCs and 1st trip freeze frame data or freeze frame data can be read and erased quickly.*
Data monitor	Input/Output data in the ECM can be read.
Active test	Diagnostic Test Mode in which CONSULT drives some actuators apart from the ECMs and also shifts some parameters in a specified range.
DTC & SRT confirmation	The status of system monitoring tests and the self-diagnosis status/results can be confirmed.
ECU Identification	ECM part number can be read.

^{*:} The following emission-related diagnostic information is cleared when the ECM memory is erased.

- · Diagnostic trouble codes
- 1st trip diagnostic trouble codes
- Freeze frame data
- 1st trip freeze frame data
- · System readiness test (SRT) codes
- · Test values

WORK SUPPORT MODE

Work Item

Work item	Condition	Usage
FUEL PRESSURE RELEASE	Fuel pump will stop by touching "START" during idling. Crank a few times after engine stalls.	When releasing fuel pressure from fuel line
IDLE AIR VOL LEARN	The idle air volume that keeps the engine within the specified range is memorized in ECM.	When learning the idle air volume

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

Work item	Condition	Usage
SELF-LEARNING CONT	The coefficient of self-learning control mixture ratio returns to the original coefficient.	When clearing mixture ratio self- learning value
EVAP SYSTEM CLOSE	Close the EVAP canister vent control valve in order to make EVAP system close under the following conditions. Ignition switch ON Engine not running Ambient temperature is above 0°C (32°F). No vacuum and no high pressure in EVAP system Fuel tank temp. is more than 0°C (32°F). Within 10 minutes after starting "EVAP system close" When trying to execute "EVAP system close" under the condition except above, CONSULT will discontinue it and display appropriate instruction. NOTE: When starting engine, CONSULT may display "Battery voltage is low. Charge battery", even in using charged battery.	When detecting EVAP vapor leak point of EVAP system
VIN REGISTRATION	In this mode, VIN is registered in ECM.	When registering VIN in ECM
TARGET IDLE RPM ADJ*	Idle condition	When setting target idle speed
TARGET IGN TIM ADJ*	Idle condition	When adjusting target ignition timing
CLSD THL POS LEARN	Ignition on and engine stopped.	When learning the throttle valve closed position

^{*:} This function is not necessary in the usual service procedure.

SELF DIAGNOSTIC RESULT MODE

Self Diagnostic Item

Regarding items of DTC and 1st trip DTC, refer to <a>EC-938, "DTC Index".

How to Read DTC and 1st Trip DTC

DTCs and 1st trip DTCs related to the malfunction are displayed in "self-diag results".

- When ECM detects a 1st trip DTC, "1t" is displayed for "TIME".
- When ECM has detected a current DTC, "0" is displayed for "TIME".
- If "TIME" is neither "0" nor "1t", the DTC occurred in the past and ECM shows the number of times the vehicle has been driven since the last detection of the DTC.

How to Erase DTC and 1st Trip DTC

NOTE:

- If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
- If the DTC is not for CVT related items (see <u>EC-938</u>, "DTC Index"), skip step 1.
- 1. Erase DTC in TCM. Refer to TM-179, "DTC Index".
- Select "ENGINE" with CONSULT.
- Select "SELF-DIAG RESULTS".
- Touch "ERASE". (DTC in ECM will be erased.)

Freeze Frame Data and 1st Trip Freeze Frame Data

Freeze frame data item*	Description
DTC	The engine control component part/control system has a trouble code that is displayed as DTC. (Refer to EC-938, "DTC Index".)
FUEL SYS-B1	"Fuel injection system status" at the moment a malfunction is detected is displayed. One mode in the following is displayed. Mode2: Open loop due to detected system malfunction Mode3: Open loop due to driving conditions (power enrichment, deceleration enleanment) Mode4: Closed loop - using oxygen sensor(s) as feedback for fuel control Mode5: Open loop - has not yet satisfied condition to go to closed loop
CAL/LD VALUE [%]	The calculated load value at the moment a malfunction is detected is displayed.
COOLANT TEMP [°C] or [°F]	The engine coolant temperature at the moment a malfunction is detected is displayed.

EC-589 Revision: 2012 August 2013 CUBE

Α

EC

D

Е

Н

K

M

Ν

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

Freeze frame data item*	Description
L-FUEL TRM-B1 [%]	"Long-term fuel trim" at the moment a malfunction is detected is displayed. The long-term fuel trim indicates much more gradual feedback compensation to the base fuel schedule than short-term fuel trim.
S-FUEL TRM-B1 [%]	 "Short-term fuel trim" at the moment a malfunction is detected is displayed. The short-term fuel trim indicates dynamic or instantaneous feedback compensation to the base fuel schedule.
ENGINE SPEED [rpm]	The engine speed at the moment a malfunction is detected is displayed.
VEHICL SPEED [km/h] or [mph]	The vehicle speed at the moment a malfunction is detected is displayed.
ABSOL TH-P/S [%]	The throttle valve opening angle at the moment a malfunction is detected is displayed.
B/FUEL SCHDL [msec]	The base fuel schedule at the moment a malfunction is detected is displayed.
INT/A TEMP SE [°C] or [°F]	The intake air temperature at the moment a malfunction is detected is displayed.
FUEL SYS-B2	
L-FUEL TRM-B2 [%]	
S-FUEL TRM-B2 [%]	These items displayed but are not applicable to this model.
INT MANI PRES [kPa]	
COMBUST CONDITION	

^{*:} The items are the same as those of 1st trip freeze frame data.

DATA MONITOR MODE

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

For reference values of the following items, refer to EC-918. "Reference Value".

Monitored Item

Monitored item	Unit	Description	Remarks
ENG SPEED	rpm	Indicates the engine speed computed from the signal of the crankshaft position sensor (POS) and camshaft position sensor (PHASE).	 Accuracy becomes poor if engine speed drops below the idle rpm. If the signal is interrupted while the engine is running, an abnormal value may be indicated.
MAS A/F SE-B1	V	The signal voltage of the mass air flow sensor is displayed.	 When the engine is stopped, a certain value is indicated. When engine is running specification range is indicated in "SPEC".
B/FUEL SCHDL	ms	"Base fuel schedule" indicates the fuel injection pulse width programmed into ECM, prior to any learned on board correction.	When engine is running specification range is indicated in "SPEC".
A/F ALPHA-B1	%	The mean value of the air-fuel ratio feedback correction factor per cycle is indicated.	 When the engine is stopped, a certain value is indicated. This data also includes the data for the air-fuel ratio learning control. When engine is running specification range is indicated in "SPEC".
COOLANT TEMP/S	°C or °F	The engine coolant temperature (determined by the signal voltage of the engine coolant temperature sensor) is displayed.	When the engine coolant tempera- ture sensor is open or short-cir- cuited, ECM enters fail-safe mode. The engine coolant temperature determined by the ECM is dis- played.
A/F SEN1 (B1)	V	The A/F signal computed from the input signal of the air fuel ratio (A/F) sensor 1 is displayed.	

< SYSTEM DESCRIPTION >

Monitored item	Unit	Description	Remarks
HO2S2 (B1)	V	The signal voltage of the heated oxygen sensor 2 is displayed.	
HO2S2 MNTR(B1)	RICH/LEAN	Display of heated oxygen sensor 2 signal: RICH: means the amount of oxygen after three way catalyst is relatively small. LEAN: means the amount of oxygen after three way catalyst is relatively large.	When the engine is stopped, a certain value is indicated.
VHCL SPEED SE	km/h or mph	The vehicle speed computed from the vehicle speed signal sent from combination meter is displayed.	
BATTERY VOLT	V	The power supply voltage of ECM is displayed.	
ACCEL SEN 1	.,	The accelerator pedal position sensor signal voltage is	ACCEL SEN 2 signal is converted
ACCEL SEN 2	V	displayed.	by ECM internally. Thus, it differs from ECM terminal voltage signal.
TP SEN 1-B1		The throttle position sensor signal voltage is dis-	TP SEN 2-B1 signal is converted
TP SEN 2-B1	V	played.	by ECM internally. Thus, it differs from ECM terminal voltage signal.
FUEL T/TMP SE	°C or °F	The fuel temperature (determined by the signal voltage of the fuel tank temperature sensor) is displayed.	
INT/A TEMP SE	°C or °F	The intake air temperature (determined by the signal voltage of the intake air temperature sensor) is indicated.	
EVAP SYS PRES	V	The signal voltage of EVAP control system pressure sensor is displayed.	
FUEL LEVEL SE	V	The signal voltage of the fuel level sensor is displayed.	
START SIGNAL	ON/OFF	Indicates start signal status [ON/OFF] computed by the ECM according to the signals of engine speed and battery voltage.	After starting the engine, [OFF] is displayed regardless of the starter signal.
CLSD THL POS	ON/OFF	 Indicates idle position [ON/OFF] computed by ECM according to the accelerator pedal position sensor sig- nal. 	
AIR COND SIG	ON/OFF	Indicates [ON/OFF] condition of the air conditioner switch determined by the air conditioner ON signal.	
P/N POSI SW	ON/OFF	Indicates [ON/OFF] condition from the park/neutral position (PNP) switch signal (M/T models) or Transmission range switch signal (CVT models).	
PW/ST SIGNAL	ON/OFF	[ON/OFF] condition of the power steering system (determined by the signal sent from EPS control unit) is indicated.	
LOAD SIGNAL	ON/OFF	Indicates [ON/OFF] condition from the electrical load signal. ON: Rear window defogger switch is ON and/or lighting switch is in 2nd position. OFF: Both rear window defogger switch and lighting switch are OFF.	
IGNITION SW	ON/OFF	Indicates [ON/OFF] condition from ignition switch signal.	
HEATER FAN SW	ON/OFF	Indicates [ON/OFF] condition from the heater fan switch signal.	
BRAKE SW	ON/OFF	 Indicates [ON/OFF] condition from the stop lamp switch signal. 	
INJ PULSE-B1	msec	Indicates the actual fuel injection pulse width compensated by ECM according to the input signals.	When the engine is stopped, a certain computed value is indicat- ed.
IGN TIMING	BTDC	Indicates the ignition timing computed by ECM ac-	When the engine is stopped, a

< SYSTEM DESCRIPTION >

Monitored item	Unit	Description	Remarks
CAL/LD VALUE	%	"Calculated load value" indicates the value of the current air flow divided by peak air flow.	
MASS AIRFLOW	g/s	Indicates the mass air flow computed by ECM according to the signal voltage of the mass air flow sensor.	
PURG VOL C/V	%	 Indicates the EVAP canister purge volume control solenoid valve control value computed by the ECM according to the input signals. The opening becomes larger as the value increases. 	
INT/V TIM(B1)	°CA	Indicates [°CA] of intake camshaft advance angle.	
INT/V SOL(B1)	%	 The control value of the intake valve timing control solenoid valve (determined by ECM according to the input signals) is indicated. The advance angle becomes larger as the value increases. 	
SWRL CONT S/V	ON/OFF	The control condition of the tumble control valve (determined by ECM according to the input signals) is indicated. ON: Closed OFF: Open	
TMBL POS SEN	V	The tumble control valve position sensor signal voltage is displayed.	
AIR COND RLY	ON/OFF	The air conditioner relay control condition (determined by ECM according to the input signals) is indicated.	
FUEL PUMP RLY	ON/OFF	Indicates the fuel pump relay control condition determined by ECM according to the input signals.	
VENT CONT/V	ON/OFF	The control condition of the EVAP canister vent control valve (determined by ECM according to the input signals) is indicated. ON: Closed OFF: Open	
THRTL RELAY	ON/OFF	Indicates the throttle control motor relay control condition determined by the ECM according to the input signals.	
COOLING FAN	HI/LOW/ OFF	Indicates the condition of the cooling fan (determined by ECM according to the input signals). HI: High speed operation LOW: Low speed operation OFF: Stop	
HO2S2 HTR (B1)	ON/OFF	Indicates [ON/OFF] condition of heated oxygen sensor 2 heater determined by ECM according to the input signals.	
I/P PULLY SPD	rpm	Indicates the engine speed computed from the input shaft revolution signal.	
VEHICLE SPEED	km/h or mph	The vehicle speed computed from the vehicle speed signal sent from TCM is displayed.	
IDL A/V LEARN	YET/CMPLT	Display the condition of Idle Air Volume Learning YET: Idle air volume learning has not been performed yet. CMPLT: Idle air volume learning has already been performed successfully.	
TRVL AFTER MIL	km or mile	Distance traveled while MIL is activated.	
ENG OIL TEMP	°C or °F	The engine oil temperature (determined by the signal voltage of the engine oil temperature sensor) is displayed.	

< SYSTEM DESCRIPTION >

Monitored item	Unit	Description	Remarks
A/F S1 HTR(B1)	%	 Air fuel ratio (A/F) sensor 1 heater control value computed by ECM according to the input signals. The current flow to the heater becomes larger as the value increases. 	
AC PRESS SEN	V	The signal voltage from the refrigerant pressure sensor is displayed.	
A/F ADJ-B1	_	Indicates the correction of factor stored in ECM. The factor is calculated from the difference between the target air-fuel ratio stored in ECM and the air-fuel ratio calculated from A/F sensor 1 signal.	
BUT CUR SEN	mV	The signal voltage of battery current sensor is displayed.	
ALT DUTY SIG	ON/OFF	The control condition of the power generation voltage variable control (determined by ECM according to the input signals) is indicated. ON: Power generation voltage variable control is active. OFF: Power generation voltage variable control is inactive.	
ALT DUTY	%	Indicates the duty ratio of the power generation com- mand value. The ratio is calculated by ECM based on the battery current sensor signal.	
VHCL SPEED SE	km/h or mph	The vehicle speed computed from the vehicle speed signal sent from combination meter is displayed.	
SET VHCL SPD	km/h or mph	The preset vehicle speed is displayed.	
MAIN SW	ON/OFF	Indicates [ON/OFF] condition from MAIN switch signal.	
CANCEL SW	ON/OFF	Indicates [ON/OFF] condition from CANCEL switch signal.	
RESUME/ACC SW	ON/OFF	Indicates [ON/OFF] condition from RESUME/ACC switch signal.	
SET SW	ON/OFF	Indicates [ON/OFF] condition from SET switch signal.	
BRAKE SW1	ON/OFF	Indicates [ON/OFF] condition from ASCD brake switch signal and ASCD clutch switch signal (M/T models).	
BRAKE SW2	ON/OFF	Indicates [ON/OFF] condition of stop lamp switch signal.	
VHCL SPD CUT	NON/CUT	Indicates the vehicle cruse condition. NON: Vehicle speed is maintained at the ASCD set speed. CUT: Vehicle speed decreased to excessively low compared with the ASCD set speed, and ASCD operation is cut off.	
LO SPEED CUT	NON/CUT	Indicates the vehicle cruse condition. NON: Vehicle speed is maintained at the ASCD set speed. CUT: Vehicle speed decreased to excessively low and ASCD operation is cut off.	
AT OD MONITOR	ON/OFF	Indicates [ON/OFF] condition of CVT O/D according to the input signal from the TCM.	
AT OD CANCEL	ON/OFF	Indicates [ON/OFF] condition of CVT O/D cancel request signal from the TCM.	
CRUISE LAMP	ON/OFF	Indicates [ON/OFF] condition of CRUISE lamp determined by the ECM according to the input signals.	
SET LAMP	ON/OFF	Indicates [ON/OFF] condition of SET lamp determined by the ECM according to the input signals.	

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

Monitored item	Unit	Description	Remarks
THRTL STK CNT B1 [*]	_	_	
EVAP LEAK DIAG	YET/CMPLT	Indicates the condition of EVAP leak diagnosis. YET: EVAP leak diagnosis has not been performed yet. CMPLT: EVAP leak diagnosis has been performed successfully.	
EVAP DIAG READY	ON/OFF	Indicates the ready condition of EVAP leak diagnosis. ON: Diagnosis has been ready condition. OFF: Diagnosis has not been ready condition.	
HO2 S2 DIAG1 (B1)	INCMP/CM- PLT	Indicates DTC P0139 self-diagnosis (delayed response) condition. INCMP: Self-diagnosis is incomplete. CMPLT: Self-diagnosis is complete.	
HO2 S2 DIAG2 (B1)	INCMP/CM- PLT	Indicates DTC P0139 self-diagnosis (slow response) condition. INCMP: Self-diagnosis is incomplete. CMPLT: Self-diagnosis is complete.	
A/F SEN1 DIAG2(B1)	INCMP/CM- PLT	Indicates DTC P014C or P014D self-diagnosis condition. INCMP: Self-diagnosis is incomplete. CMPLT: Self-diagnosis is complete.	
A/F SEN1 DIAG3(B1)	ABSNT/ PRSNT	Indicates DTC P014C, P014D, P015A or P015B self-diagnosis condition. ABSNT: The vehicle condition is not within the diagnosis range. PRSNT: The vehicle condition is within the diagnosis range. Output Description:	
SYSTEM 1 DIAG- NOSIS A B1	INCMP/CM- PLT	Indicates DTC P117A self-daiagnosis condition. INCMP: Self-diagnosis is incomplete. CMPLT: Self-diagnosis is complete.	
SYSTEM 1 DIAG- NOSIS B B1	ABSENT/ PRSENT	Indicates DTC P117A self-daiagnosis condition. ABSENT: Self-diagnosis standby PRSENT: Under self-diagnosis	

^{*:} The item is indicated, but not used.

NOTE:

Any monitored item that does not match the vehicle being diagnosed is deleted from the display automatically.

ACTIVE TEST MODE

Test Item

Test item	Condition	Judgment	Check item (Remedy)
FUEL INJECTION	Engine: Return to the original trouble condition Change the amount of fuel injection using CONSULT.	If trouble symptom disappears, see CHECK ITEM.	Harness and connectors Fuel injector Air fuel ratio (A/F) sensor 1
IGNITION TIMING	Engine: Return to the original trouble condition Timing light: Set Retard the ignition timing using CONSULT.	If trouble symptom disappears, see CHECK ITEM.	Perform Idle Air Volume Learning.
POWER BALANCE	 Engine: After warming up, idle the engine. A/C switch OFF Selector lever: P or N position (CVT), Neutral position (M/T) Cut off each fuel injector signal one at a time using CONSULT. 	Engine runs rough or dies.	 Harness and connectors Compression Fuel injector Power transistor Spark plug Ignition coil

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

Test item	Condition	Judgment	Check item (Remedy)
COOLING FAN*	Ignition switch: ON Turn the cooling fan "LOW", "HI" and "OFF" using CONSULT.	Cooling fan moves and stops.	Harness and connectors IPDM E/R (Cooling fan relay) Cooling fan motor
ENG COOLANT TEMP	Engine: Return to the original trouble condition Change the engine coolant temperature using CONSULT.	If trouble symptom disappears, see CHECK ITEM.	Harness and connectors Engine coolant temperature sensor Fuel injector
FUEL PUMP RELAY	Ignition switch: ON (Engine stopped) Turn the fuel pump relay "ON" and "OFF" using CONSULT and listen to operating sound.	Fuel pump relay makes the operating sound.	Harness and connectors Fuel pump relay
PURG VOL CONT/V	 Engine: After warming up, run engine at 1,500 rpm. Change the EVAP canister purge volume control solenoid valve opening percent using CONSULT. 	Engine speed changes according to the opening percent.	Harness and connectors Solenoid valve
FUEL/T TEMP SEN	Change the fuel tank temperature	e using CONSULT.	
VENT CONTROL/V	Ignition switch: ON (Engine stopped) Turn solenoid valve "ON" and "OFF" using the CONSULT and listen to operating sound.	Solenoid valve makes an operating sound.	Harness and connectors Solenoid valve
V/T ASSIGN ANGLE	 Engine: Return to the original trouble condition Change intake valve timing us- ing CONSULT. 	If trouble symptom disappears, see CHECK ITEM.	Harness and connectors Intake valve timing control solenoid valve
ALTERNATOR DUTY	Engine: idle. Change duty ratio using CON-SULT.	Battery voltage charges.	Harness and connectors IPDM E/R Alternator
TUMBLE CONTROL VALVE	Ignition switch: ON Turn tumble control valve "ON" and "OFF" with CONSULT and listen to operating sound.	Tumble control valve motor makes an operating sound.	Harness and connectors Tumble control valve motor

^{*:} Leaving cooling fan OFF with CONSULT while engine is running may cause the engine to overheat.

DTC & SRT CONFIRMATION MODE

SRT STATUS Mode

- For items whose SRT codes are set, "CMPLT" is displayed on the CONSULT screen; for items whose SRT codes are not set, "INCMP" is displayed.
- "SRT STATUS" provides the presence or absence of permanent DTCs stored in ECM memory.

PERMANENT DTC STATUS Mode

How to display permanent DTC status

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Select "PERMANENT DTC STATUS" in "DTC & SRT CONFIRMATION" mode with CONSULT. 5.

Permanent DTCs stored in ECM memory are displayed on the CONSULT screen to show if a driving pattern required for erasing permanent DTCs is complete (CMPLT) or incomplete (INCMP). **CAUTION:**

EC-595 Revision: 2012 August 2013 CUBE

Ν

< SYSTEM DESCRIPTION >

[MR18DE (FOR CALIFORNIA)]

Since the "PERMANENT DTC STATUS" screen displays the previous trip information, repeat the following twice to update the information: "Ignition switch OFF", "Wait for more than 10 seconds" and "Ignition switch ON".

CAUTION: Turn ignition switch from O status screen.	N to OFF twice to update the informa	ation on the
PERMANENT DTC	DRIVING PATTERN B	DRIVING PATTERN D
XXXX	INCMP	INCMP
xxxx	CMPLT	INCMP
xxxx	INCMP	CMPLT
xxxx	CMPLT	INCMP
XXXX	INCMP	INCMP
XXXX	INCMP	INCMP

JSBIA0062GB

NOTE:

This mode is not used in regions that permanent DTCs are not regulated by law.

SRT WORK SUPPORT Mode

This mode enables a technician to drive a vehicle to set the SRT while monitoring the SRT status.

PERMANENT DTC WORK SUPPORT Mode

This mode enables a technician to drive a vehicle to complete the driving pattern that is required for erasing permanent DTC.

NOTE:

This mode is not used in regions that permanent DTCs are not regulated by law.

DTC WORK SUPPORT Mode

Test mode	Test mode Test item		Reference page
	EVP V/S LEAK P0456/P1456*	P0456	EC-772
EVAPORATIVE SYSTEM	PURG VOL CN/V P1444	P0443	EC-741
	PURG FLOW P0441	P0441	EC-735
A/F SEN1	A/F SEN1 (B1) P1278/P1279	_	_
AN SENT	A/F SEN1 (B1) P1276	P0130	EC-654
	HO2S2 (B1) P1146	P0138	EC-670
HO2S2	HO2S2 (B1) P1147	P0137	EC-664
	HO2S2 (B1) P139	P0139	EC-678

^{*:} DTC P1442, P1456 does not apply to this model but appears in DTC Work Support Mode screens.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

DTC/CIRCUIT DIAGNOSIS

TROUBLE DIAGNOSIS - SPECIFICATION VALUE

Description INFOID:0000000008451045

The specification (SP) value indicates the tolerance of the value that is displayed in "SPEC" of "DATA MONI-TOR" mode of CONSULT during normal operation of the Engine Control System. When the value in "SPEC" of "DATA MONITOR" mode is within the SP value, the Engine Control System is confirmed OK. When the value in "SPEC" of "DATA MONITOR" mode is NOT within the SP value, the Engine Control System may have one or more malfunctions.

The SP value is used to detect malfunctions that may affect the Engine Control System, but will not light the MIL.

The SP value will be displayed for the following three items:

- B/FUEL SCHDL (The fuel injection pulse width programmed into ECM prior to any learned on board correc-
- A/F ALPHA-B1 (The mean value of air-fuel ratio feedback correction factor per cycle)
- MAS A/F SE-B1 (The signal voltage of the mass air flow sensor)

Component Function Check

1.start

Make sure that all of the following conditions are satisfied.

- Vehicle driven distance: More than 5,000 km (3,107 miles)
- Barometric pressure: 98.3 104.3 kPa (1.003 1.064 kg/cm², 14.25 15.12 psi)
- Atmospheric temperature: 20 30°C (68 86°F)
- Engine coolant temperature: 75 95°C (167 203°F)
- Transmission: Warmed-up
- CVT models: After the engine is warmed up to normal operating temperature, drive vehicle until "FLUID TEMP SE" (CVT fluid temperature sensor signal) indicates more than 60°C (140°F).
- M/T models: After the engine is warmed up to normal operating temperature, drive vehicle for 5 minutes.
- Electrical load: Not applied
- Rear window defogger switch, air conditioner switch, lighting switch are OFF. Steering wheel is straight ahead.
- · Engine speed: Idle

>> GO TO 2.

2.PERFORM "SPEC" OF "DATA MONITOR" MODE

(P)With CONSULT

NOTE:

Perform "SPEC" in "DATA MONITOR" mode in maximum scale display.

- 1. Perform EC-483, "BASIC INSPECTION: Special Repair Requirement".
- Select "B/FUEL SCHDL", "A/F ALPHA-B1" and "MAS A/F SE-B1" in "SPEC" of "DATA MONITOR" mode with CONSULT.
- 3. Make sure that monitor items are within the SP value.

Is the inspection result normal?

YES >> END

NO >> Go to EC-598, "Diagnosis Procedure".

EC-597 Revision: 2012 August

EC

Α

 \Box

Е

INFOID:0000000008451046

Н

K

M

N

Р


< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

INFOID:0000000008451047

Diagnosis Procedure

OVERALL SEQUENCE

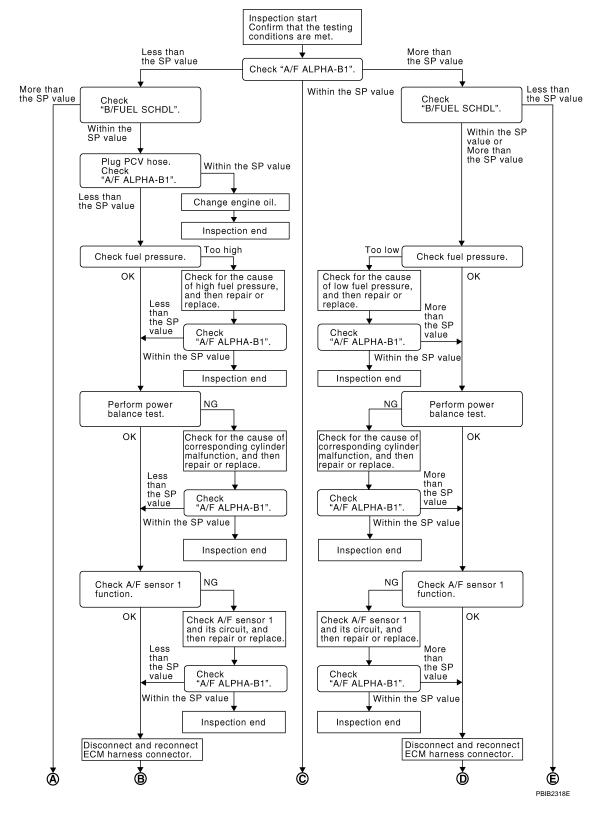


[MR18DE (FOR CALIFORNIA)]

Α

EC

D

Р

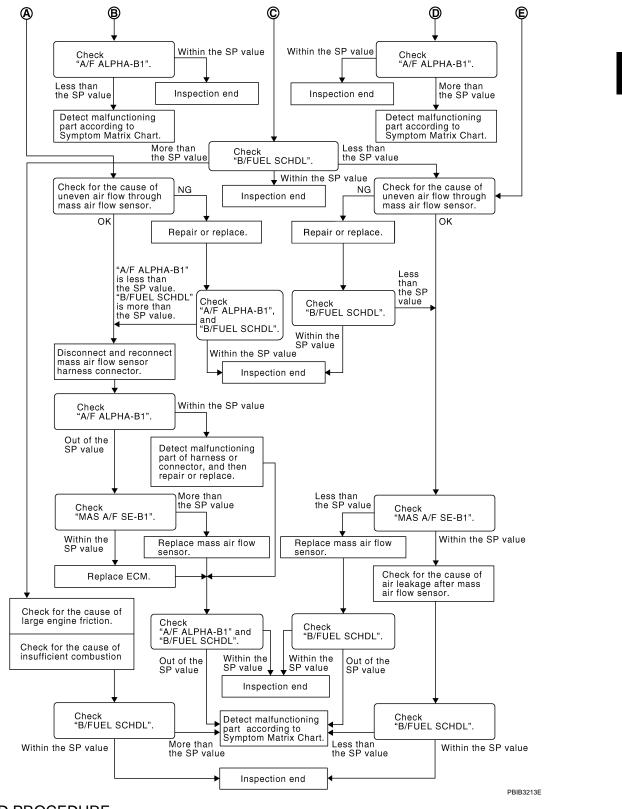

DETAILED PROCEDURE

1.CHECK "A/F ALPHA-B1"

(I) With CONSULT

- 1. Start engine
- Confirm that the testing conditions are met. Refer to <u>EC-597, "Component Function Check"</u>.
- 3. Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

NOTE:

Check "A/F ALPHA-B1" for approximately 1 minute because it may fluctuate. It is NG if the indication is out of the SP value even a little.

Is the measurement value within the SP value?

YES >> GO TO 17.

NO-1 >> Less than the SP value: GO TO 2.

NO-2 >> More than the SP value: GO TO 3.

$\mathbf{2}.$ CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> GO TO 4.

NO >> More than the SP value: GO TO 19.

3.CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> GO TO 6.

NO-1 >> More than the SP value: GO TO 6.

NO-2 >> Less than the SP value: GO TO 25.

4.CHECK "A/F ALPHA-B1"

- 1. Stop the engine.
- 2. Disconnect PCV hose, and then plug it.
- 3. Start engine.
- Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> GO TO 5.

NO >> GO TO 6.

5. CHANGE ENGINE OIL

- 1. Stop the engine.
- Change engine oil.

NOTE:

This symptom may occur when a large amount of gasoline is mixed with engine oil because of driving conditions (such as when engine oil temperature does not rise enough since a journey distance is too short during winter). The symptom will not be detected after changing engine oil or changing driving condition.

>> INSPECTION END

6.CHECK FUEL PRESSURE

Check fuel pressure. (Refer to EC-961, "Inspection".)

Is the inspection result normal?

YES >> GO TO 9.

NO-1 >> Fuel pressure is too high: Replace "fuel filter and fuel pump assembly" and then GO TO 8.

NO-2 >> Fuel pressure is too low: GO TO 7.

7.DETECT MALFUNCTIONING PART

Check fuel hoses and fuel tubes for clogging

Is the inspection result normal?

YES >> Replace "fuel filter and fuel pump assembly" and then GO TO 8.

NO >> Repair or replace and then GO TO 8.

8.CHECK "A/F ALPHA-B1"

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

1	Ctart.	engine.
	Start	enune.

Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

EC

D

Е

Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> GO TO 9.

9.PERFORM POWER BALANCE TEST

Perform "POWER BALANCE" in "ACTIVE TEST" mode.

Make sure that the each cylinder produces a momentary engine speed drop.

Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 10.

10.detect malfunctioning part

Check the following.

- Ignition coil and its circuit (Refer to EC-903. "Component Function Check".)
- Fuel injector and its circuit (Refer to EC-897, "Component Function Check".)
- Intake air leakage
- Low compression pressure (Refer to EM-21, "Inspection".)

Is the inspection result normal?

YES >> Replace fuel injector and then GO TO 11.

NO >> Repair or replace malfunctioning part and then GO TO 11.

11.CHECK "A/F ALPHA-B1"

Start engine.

Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> GO TO 12.

12.CHECK A/F SENSOR 1 FUNCTION

Perform all DTC CONFIRMATION PROCEDURE related with A/F sensor 1.

- For DTC P0130, refer to <u>EC-654, "DTC Logic"</u>.
 For DTC P0131, refer to <u>EC-658, "DTC Logic"</u>.
- For DTC P0132, refer to <u>EC-661, "DTC Logic"</u>.
- For DTC P014C, P014D, P015A, P015B, refer to EC-684, "DTC Logic".
- For DTC P2096, P2097, refer to <u>EC-859, "DTC Logic"</u>.

Is any DTC detected?

YES >> GO TO 15.

NO >> GO TO 13.

13. CHECK A/F SENSOR 1 CIRCUIT

Perform DIAGNOSTIC PROCEDURE according to corresponding DTC.

>> GO TO 14.

14.CHECK "A/F ALPHA-B1"

1. Start engine.

Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> GO TO 15.

15. DISCONNECT AND RECONNECT ECM HARNESS CONNECTOR

Stop the engine.

EC-601 Revision: 2012 August 2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- 2. Disconnect ECM harness connector.
- 3. Check pin terminal and connector for damage, and then reconnect it.

>> GO TO 16.

16.CHECK "A/F ALPHA-B1"

- 1. Start engine.
- Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> Detect malfunctioning part according to EC-949, "Symptom Table".

17. CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO-1 >> More than the SP value: GO TO 18.

NO-2 >> Less than the SP value: GO TO 25.

18. DETECT MALFUNCTIONING PART

- 1. Check for the cause of large engine friction. Refer to the following.
- Engine oil level is too high
- Engine oil viscosity
- Belt tension of power steering, alternator, A/C compressor, etc. is excessive
- Noise from engine
- Noise from transmission, etc.
- 2. Check for the cause of insufficient combustion. Refer to the following.
- Valve clearance malfunction
- Intake valve timing control function malfunction
- Camshaft sprocket installation malfunction, etc.

>> Repair or replace malfunctioning part, and then GO TO 30.

19. CHECK INTAKE SYSTEM

Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.

- · Crushed air ducts
- Malfunctioning seal of air cleaner element
- Uneven dirt of air cleaner element
- · Improper specification of intake air system

Is the inspection result normal?

YES >> GO TO 21.

NO >> Repair or replace malfunctioning part, and then GO TO 20.

20.CHECK "A/F ALPHA-B1", AND "B/FUEL SCHDL"

Select "A/F ALPHA-B1" and "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that each indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> "B/FUEL SCHDL" is more, "A/F ALPHA-B1" is less than the SP value: GO TO 21.

21. DISCONNECT AND RECONNECT MASS AIR FLOW SENSOR HARNESS CONNECTOR

- Stop the engine.
- 2. Disconnect mass air flow sensor harness connector.
- 3. Check pin terminal and connector for damage and then reconnect it again.

>> GO TO 22.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

22.CHECK "A/F ALPHA-B1"

Start engine.

Select "A/F ALPHA-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

>> Detect malfunctioning part of mass air flow sensor circuit and repair it. Refer to EC-623, "DTC Logic". Then GO TO 29.

NO >> GO TO 23.

23.CHECK "MAS A/F SE-B1"

Select "MAS A/F SE-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> GO TO 24.

NO >> More than the SP value: Replace mass air flow sensor, and then GO TO 29.

24.REPLACE ECM

Replace ECM.

Perform EC-486, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement".

>> GO TO 29.

25. CHECK INTAKE SYSTEM

Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.

Crushed air ducts

- Malfunctioning seal of air cleaner element
- · Uneven dirt of air cleaner element
- Improper specification of intake air system

Is the inspection result normal?

YES >> GO TO 27.

NO >> Repair or replace malfunctioning part, and then GO TO 26.

26.CHECK "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> Less than the SP value: GO TO 27.

27.CHECK "MAS A/F SE-B1"

Select "MAS A/F SE-B1" in "SPEC" of "DATA MONITOR" mode, and make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> GO TO 28.

NO >> Less than the SP value: Replace mass air flow sensor, and then GO TO 30.

28. CHECK INTAKE SYSTEM

Check for the cause of air leak after the mass air flow sensor. Refer to the following.

- Disconnection, looseness, and cracks in air duct
- Looseness of oil filler cap
- · Disconnection of oil level gauge
- Open stuck, breakage, hose disconnection, or cracks of PCV valve
- Disconnection or cracks of EVAP purge hose, open stuck of EVAP canister purge volume control solenoid
- Malfunctioning seal of rocker cover gasket
- Disconnection, looseness, or cracks of hoses, such as vacuum hose, connecting to intake air system parts

EC

C

Е

K

M

Ν

Р

2013 CUBE

EC-603 Revision: 2012 August

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

· Malfunctioning seal of intake air system, etc.

>> GO TO 30.

$29.\mathsf{CHECK}$ "A/F ALPHA-B1" AND "B/FUEL SCHDL"

Select "A/F ALPHA-B1" and "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and make sure that each indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> Detect malfunctioning part according to EC-949, "Symptom Table".

30.check "B/FUEL SCHDL"

Select "B/FUEL SCHDL" in "SPEC" of "DATA MONITOR" mode, and then make sure that the indication is within the SP value.

Is the measurement value within the SP value?

YES >> INSPECTION END

NO >> Detect malfunctioning part according to EC-949, "Symptom Table".

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000008451048

1. CHECK GROUND CONNECTION

OID.000000000008451048

Α

EC

D

Е

F

K

N

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK ECM GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Disconnect ECM harness connectors.
- 2. Check the continuity between ECM harness connector and ground.

ECM		Ground	Continuity	
Connector	Terminal	Glound	Continuity	
F7	11		Existed	
	107			
E16	108	Ground		
EIO	109			
	112			

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F1, E8
- Harness for open or short between ECM and ground

>> Repair open circuit or short to power in harness or connectors.

4. CHECK ECM POWER SUPPLY CIRCUIT-I

- 1. Reconnect ECM harness connectors.
- 2. Turn ignition switch ON.
- 3. Check the voltage between ECM harness connector and ground.

E	CM	Ground	Voltage
Connector	Connector Terminal		voltage
E16	93	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

${f 5.}$ DETECT MALFUNCTIONING PART

Check the following.

- 15 A fuse (No. 62)
- Harness for open or short between ECM and fuse
 - >> Repair open circuit or short to ground or short to power in harness or connectors.

EC-605

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

6. CHECK ECM POWER SUPPLY CIRCUIT-II

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON and then OFF.
- 3. Check the voltage between ECM harness connector and ground.

ECM		Ground	Voltage	
Connector	Terminal	Ground	voltage	
E16	105	Ground	After turning ignition switch OFF, battery voltage will exist for a few seconds, then drop approximately 0 V.	

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 9.

7.CHECK ECM POWER SUPPLY CIRCUIT-III

- 1. Turn ignition switch ON.
- 2. Check the voltage between IPDM E/R harness connector and ground.

IPDN	IPDM E/R		Voltage
Connector	Terminal	Ground	vollage
E14	44	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace IPDM E/R. Refer to <u>PCS-33</u>, "Removal and Installation" (With I-KEY) or <u>PCS-62</u>, "Removal and Installation" (Without I-KEY).

8. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

9. CHECK ECM POWER SUPPLY CIRCUIT-IV

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Check the voltage between ECM harness connector and ground.

E	ECM		Voltage
Connector	Terminal	Ground	vollage
F7	32	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 13. NO >> GO TO 10.

10. CHECK ECM POWER SUPPLY CIRCUIT-V

- Disconnect ECM harness connector.
- 2. Disconnect IPDM E/R harness connector E14.
- 3. Check the continuity between ECM harness connector and IPDM E/R harness connector.

EC	CM	IPDN	ЛE/R	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F7	32	E14	40	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

YES >> GO TO 12. NO >> GO TO 11.

11. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

12.CHECK FUSE

- Disconnect 20 A fuse (No. 43) from IPDM E/R.
- Check 20 A fuse.

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace 20 A fuse.

13. CHECK ECM POWER SUPPLY CIRCUIT-VI

- Disconnect ECM harness connector.
- Disconnect IPDM E/R harness connector E14.
- Check the continuity between ECM harness connector and IPDM E/R harness connector.

E	СМ	IPDN	M E/R	Continuity
Connector	Terminal	Connector	Terminal	Continuity
E16	105	E14	43	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 15.

NO >> GO TO 14.

14.detect malfunctioning part

Check the following.

- Harness connectors E8, F1
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

15. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

>> Replace IPDM E/R, Refer to PCS-33, "Removal and Installation" (With I-KEY) or PCS-62, YES "Removal and Installation" (Without I-KEY) .

>> Repair open circuit or short to ground or short to power in harness or connectors. NO

EC

Α

D

Е

M

Ν

Р

U0101 CAN COMM CIRCUIT

[MR18DE (FOR CALIFORNIA)]

U0101 CAN COMM CIRCUIT

Description INFOID:000000008451049

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
U0101	Lost communication with TCM	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) with TCM for 2 seconds or more.	CAN communication line between TCM and ECM (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 3 seconds.
- Check DTC.

Is DTC detected?

YES >> EC-608, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451051

Perform the trouble diagnosis for CAN communication system. Refer to <u>LAN-13</u>, "Trouble <u>Diagnosis Flow Chart"</u>.

U1001 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Α

EC

D

Е

F

Н

K

N

U1001 CAN COMM CIRCUIT

Description INFOID:000000008451052

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
U1001	CAN communication line	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission related diagnosis) for 2 seconds or more.	Harness or connectors (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1 . PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 3 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> EC-609, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

Perform the trouble diagnosis for CAN communication system. Refer to <u>LAN-13</u>, "Trouble <u>Diagnosis Flow Chart"</u>.

INFOID:0000000008451054

Revision: 2012 August

P0011 IVT CONTROL

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0011 is displayed with DTC P0075, first perform the trouble diagnosis for EC-798, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0011	Intake valve timing control performance	There is a gap between angle of target and phase-control angle degree.	Crankshaft position sensor (POS) Camshaft position sensor (PHASE) Intake valve control solenoid valve Accumulation of debris to the signal pick-up portion of the camshaft Timing chain installation Foreign matter caught in the oil groove for intake valve timing control

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 10 V and 16 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-I

(P)With CONSULT

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.
- 2. Start engine and warm it up to normal operating temperature.
- Maintain the following conditions for at least 6 consecutive seconds. Hold the accelerator pedal as steady as possible.

ENG SPEED	1,200 - 2,000 rpm
COOLAN TEMP/S	More than 60°C (140°F)
B/FUEL SCHDL	More than 4.2 msec
Selector lever	P or N position (CVT) Neutral position (M/T)

- 4. Stop vehicle with engine running and let engine idle for 10 seconds.
- Check 1st trip DTC.

With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Go to EC-611, "Diagnosis Procedure".

NO >> GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE-II

(P)With CONSULT

Maintain the following conditions for at least 20 consecutive seconds.

ENG SPEED	1,200 - 3,175 rpm (A constant rotation is maintained.)
COOLAN TEMP/S	More than 65°C (149°F)

P0011 IVT CONTROL

< DTC/CIRCUIT DIAGNOSIS >

Check the following.

< DTC/CIRCUIT	DIAGNOSIS >	[MIK 16DE (FOR CALIFORNIA)]	
Selector lever	1st or 2nd position		0
Driving location	Driving vehicle uphill (Increased engine load will help maintain the driving conditions required for this test.)		Α
CAUTION:			EC
Always driv 2. Check 1st tr	/e at a safe speed. ip DTC.	_	
⊕With GST			С
•	dure "With CONSULT" above.		
Is 1st trip DTC d YES >> Go 1			D
	o <u>EC-611, "Diagnosis Procedure"</u> . PECTION END		D
Diagnosis Pr	ocedure	INFOID:000000008451056	Е
1.CHECK OIL	PRESSURE WARNING LAMP		_
 Start engine Check oil p 	ressure warning lamp and confirm it is not ill	umi-	F
nated.		\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	
-	arning lamp illuminated?		G
YES >> Go t NO >> GO	to <u>LU-13, "Inspection"</u> . TO 2	\	
110 22 00	10 2.		
			Н
		, , , , , , , , , , , , , , , , , , ,	
2.CHECK INTA	KE VALVE TIMING CONTROL SOLENOID VAI		
Refer to EC-612	, "Component Inspection".		J
Is the inspection			
YES >> GO NO >> Rep	TO 3. lace intake valve timing control solenoid valve. I	Refer to EM-44 "Exploded View"	K
•	NKSHAFT POSITION SENSOR (POS)	telei to <u>Livi-44, Exploded view</u> .	
	, "Component Inspection".		
Is the inspection			L
YES >> GO			
	lace crankshaft position sensor (POS). Refer to	EM-88, "Exploded View".	\mathbb{M}
4.CHECK CAM	SHAFT POSITION SENSOR (PHASE)		
· · · · · · · · · · · · · · · · · · ·	, "Component Inspection".		Ν
Is the inspection			1 4
YES >> GO NO >> Rep	TO 5. lace camshaft position sensor (PHASE). Refer t	o EM-55. "Exploded View".	
'	SHAFT (INTAKE)		0

P0011 IVT CONTROL

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]


- Accumulation of debris to the signal plate of camshaft (1) rear end
- · Chipping signal plate of camshaft rear end

Is the inspection result normal?

YES >> GO TO 6.

NO

>> Remove debris and clean the signal plate of camshaft rear end or replace camshaft. Refer to EM-55, <a href="Exploded View".

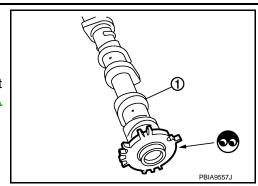

6.CHECK TIMING CHAIN INSTALLATION

Check service records for any recent repairs that may cause timing chain misaligned.

Are there any service records that may cause timing chain misaligned?

YES >> Check timing chain installation. Refer to EM-45, "Removal and Installation".

NO >> GO TO 7.

7.CHECK LUBRICATION CIRCUIT

Refer to LU-7, "Inspection", "INSPECTION AFTER INSTALLATION".

Is the inspection result normal?

YES >> GO TO 8.

NO >> Clean lubrication line.

8. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008451057

1. CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE-I

- 1. Turn ignition switch OFF.
- 2. Disconnect intake valve timing control solenoid valve harness connector.
- 3. Check resistance between intake valve timing control solenoid valve terminals as per the following.

Terminals	Resistance
1 and 2	6.7 - 7.7 Ω [at 20°C (68°F)]
1 or 2 and ground	$\stackrel{\scriptstyle \infty}{}_{\scriptstyle \Omega}$ (Continuity should not exist)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace intake valve timing control solenoid valve. Refer to EM-44, "Exploded View".

2.CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE-II

Remove intake valve timing control solenoid valve. Refer to EM-44, "Exploded View".

2. Provide 12 V DC between intake valve timing control solenoid valve terminals 1 and 2, and then interrupt it. Make sure that the plunger moves as shown in the figure.


CAUTION:

Do not apply 12 V DC continuously for 5 seconds or more. Doing so may result in damage to the coil in intake valve timing control solenoid valve.

NOTE:

Always replace O-ring when intake valve timing control solenoid valve is removed.

Is the inspection result normal?

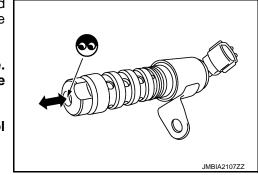

P0011 IVT CONTROL

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

YES >> INSPECTION END

NO >> Replace intake valve timing control solenoid valve. Refer to EM-44, "Exploded View".

EC

Α

D

С

Е

F

G

Н

1

J

K

L

M

Ν

0

Ρ

P0031, P0032 A/F SENSOR 1 HEATER

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P0031, P0032 A/F SENSOR 1 HEATER

Description INFOID.000000008451058

SYSTEM DESCRIPTION

Sensor	Input signal to ECM	ECM function	Actuator
Camshaft position sensor (PHASE) Crankshaft position sensor (POS)	Engine speed	Air fuel ratio (A/F) sensor 1	Air fuel ratio (A/F) sensor 1
Mass air flow sensor	Amount of intake air	neater control	neater

The ECM performs ON/OFF duty control of the A/F sensor 1 heater corresponding to the engine operating condition to keep the temperature of A/F sensor 1 element at the specified range.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0031	Air fuel ratio (A/F) sensor 1 heater control circuit low	The current amperage in the A/F sensor 1 heater circuit is out of the normal range. (An excessively low voltage signal is sent to ECM through the A/F sensor 1 heater.)	Harness or connectors (The A/F sensor 1 heater circuit is open or shorted.) A/F sensor 1 heater
P0032	Air fuel ratio (A/F) sensor 1 heater control circuit high	The current amperage in the A/F sensor 1 heater circuit is out of the normal range. (An excessively high voltage signal is sent to ECM through the A/F sensor 1 heater.)	Harness or connectors (The A/F sensor 1 heater circuit is shorted.) A/F sensor 1 heater

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than between 11 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for at least 10 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-614, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451060

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Disconnect air fuel ratio (A/F) sensor 1 harness connector.
- 2. Turn ignition switch ON.

P0031, P0032 A/F SENSOR 1 HEATER

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

3. Check the voltage between A/F sensor 1 harness connector and ground.

A/F sensor 1		Ground	Voltage
Connector	Terminal	Giodila	voltage
F51	4	Ground	Battery voltage

EC

Α

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3. С

Е

3.DETECT MALFUNCTIONING PART

Check the following.

- · Harness connectors E8, F1
- IPDM E/R harness connector E15
- 15 A fuse (No. 61)
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

4. CHECK A/F SENSOR 1 HEATER OUTPUT SIGNAL CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

A/F se	A/F sensor 1		ECM	
Connector	Terminal	Connector	Terminal	Continuity
F51	3	F7	8	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

5.CHECK A/F SENSOR 1 HEATER

Refer to EC-616, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

6.REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace malfunctioning air fuel ratio (A/F) sensor 1. Refer to EM-30, "Exploded View".

CAUTION:

- Discard any A/F sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new A/F sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

.CHECK INTERMITTENT INCIDENT

Perform GI-41, "Intermittent Incident".

>> Repair or replace.

Н

K

Ν

Р

2013 CUBE

P0031, P0032 A/F SENSOR 1 HEATER

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Component Inspection

INFOID:0000000008451061

1. CHECK AIR FUEL RATIO (A/F) SENSOR 1

- 1. Turn ignition switch OFF.
- 2. Disconnect A/F sensor 1 harness connector.
- 3. Check resistance between A/F sensor 1 terminals as per the following.

Terminals	Resistance
3 and 4	1.8 - 2.44 Ω [at 20°C (68°F)]
3 and 1, 2	∞ Ω
4 and 1, 2	(Continuity should not exist)

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1. Refer to EM-30, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

P0037, P0038 HO2S2 HEATER

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Α

EC

D

Е

Ν

Р

P0037, P0038 HO2S2 HEATER

Description INFOID:000000008451062

SYSTEM DESCRIPTION

Sensor	Input signal to ECM	ECM function	Actuator
Camshaft position sensor (PHASE) Crankshaft position sensor (POS)	Engine speed	Heated oxygen sensor 2	
Engine coolant temperature sensor	Engine coolant temperature	heater control	Heated oxygen sensor 2 heater
Mass air flow sensor	Amount of intake air		

The ECM performs ON/OFF control of the heated oxygen sensor 2 heater corresponding to the engine speed, amount of intake air and engine coolant temperature.

OPERATION

Engine speed	Heated oxygen sensor 2 heater	 F
Above 3,600 rpm	OFF	
Below 3,600 rpm after the following conditions are met. Engine: After warming up Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load	ON	G

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0037	Heated oxygen sensor 2 heater control circuit low	The current amperage in the heated oxygen sensor 2 heater circuit is out of the normal range. (An excessively low voltage signal is sent to ECM through the heated oxygen sensor 2 heater.)	Harness or connectors (The heated oxygen sensor 2 heater circuit is open or shorted.) Heated oxygen sensor 2 heater
P0038	Heated oxygen sensor 2 heater control circuit high	The current amperage in the heated oxygen sensor 2 heater circuit is out of the normal range. (An excessively high voltage signal is sent to ECM through the heated oxygen sensor 2 heater.)	Harness or connectors (The heated oxygen sensor 2 heater circuit is shorted.) Heated oxygen sensor 2 heater

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- Check 1st trip DTC.

With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

Revision: 2012 August EC-617 2013 CUBE

P0037, P0038 HO2S2 HEATER

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

YES >> Go to EC-618, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451064

2013 CUBE

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK HO2S2 POWER SUPPLY CIRCUIT

- 1. Disconnect heated oxygen sensor 2 (HO2S2) harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between HO2S2 harness connector and ground.

НО	HO2S2		Voltage
Connector	Terminal	Ground	voltage
F49	2	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- IPDM E/R connector E15
- 15 A fuse (No. 61)
- Harness for open or short between heated oxygen sensor 2 and fuse
 - >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK HO2S2 OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between HO2S2 harness connector and ECM harness connector.

НО	2S2	E(CM	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F49	3	F7	5	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5.CHECK HEATED OXYGEN SENSOR 2 HEATER

Refer to EC-619. "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

6. REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to <u>EX-5, "Exploded View"</u>. CAUTION:

P0037, P0038 HO2S2 HEATER

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

EC

D

Е

F

Н

Α

>> INSPECTION END

7. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008451065

1. CHECK HEATED OXYGEN SENSOR 2 HEATER

- 1. Turn ignition switch OFF.
- 2. Disconnect heated oxygen sensor 2 (HO2S2) harness connector.
- 3. Check resistance between HO2S2 terminals as per the following.

Terminals	Resistance
2 and 3	3.3 - 4.4 Ω [at 25°C (77°F)]
1 and 2, 3, 4	∞ Ω
4 and 1, 2, 3	(Continuity should not exist)

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

N

K

L

Ν

Р

Revision: 2012 August EC-619 2013 CUBE

P0075 IVT CONTROL SOLENOID VALVE

Description INFOID.000000008451066


Intake valve timing control solenoid valve is activated by ON/OFF pulse duty (ratio) signals from the ECM.

The intake valve timing control solenoid valve changes the oil amount and direction of flow through intake valve timing control unit or stops oil flow.

The longer pulse width advances valve angle.

The shorter pulse width retards valve angle.

When ON and OFF pulse widths become equal, the solenoid valve stops oil pressure flow to fix the intake valve angle at the control position.

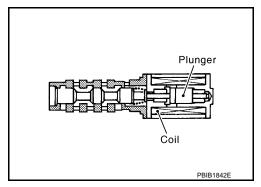

DTC Logic

INFOID:0000000008451067

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0075	Intake valve timing control solenoid valve circuit	An improper voltage is sent to the ECM through intake valve timing control solenoid valve.	Harness or connectors (Intake valve timing control solenoid valve circuit is open or shorted.) Intake valve timing control solenoid valve

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-620, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451068

1.check intake valve timing control solenoid valve power supply circuit

- 1. Turn ignition switch OFF.
- 2. Disconnect intake valve timing (IVT) control solenoid valve harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between intake valve timing control solenoid valve harness connector and ground.

IVT control s	olenoid valve	Ground	Voltage	
Connector Terminal		Glound	voltage	
F41	1	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

2.DETECT MALFUNCTIONING PART

P0075 IVT CONTROL SOLENOID VALVE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Check the following.

- Harness connectors E8, F1
- IPDM E/R connector E14
- Harness for open or short between IVT control solenoid valve and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

3.CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between IVT control solenoid valve harness connector and ECM harness connector.

IVT control s	solenoid valve ECM Continuity		ECM		
Connector	Terminal	Connector Terminal		Continuity	
F41	2	F8	73	Existed	

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

f 4 .CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE

Refer to EC-621, "Component Inspection".

Is the inspection result normal?

>> GO TO 5. YFS

NO >> Replace intake valve timing control solenoid valve. Refer to EM-44, "Exploded View".

5. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

 ${f 1}$.CHECK INTAKE VALVE TIMING CONTROL SOLENOID VALVE-I

- Turn ignition switch OFF.
- Disconnect intake valve timing control solenoid valve harness connector.
- Check resistance between intake valve timing control solenoid valve terminals as per the following.

Terminals	Resistance
1 and 2	6.7 - 7.7 Ω [at 20°C (68°F)]
1 or 2 and ground	$\stackrel{\infty}{\Omega} \Omega$ (Continuity should not exist)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace intake valve timing control solenoid valve. Refer to EM-44. "Exploded View".

2.check intake valve timing control solenoid valve-ii

Remove intake valve timing control solenoid valve. Refer to EM-44, "Exploded View".

EC

Α

Е

D

Н

INFOID:0000000008451069

P0075 IVT CONTROL SOLENOID VALVE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

2. Provide 12 V DC between intake valve timing control solenoid valve terminals 1 and 2, and then interrupt it. Make sure that the plunger moves as shown in the figure.

CAUTION:

Do not apply 12 V DC continuously for 5 seconds or more. Doing so may result in damage to the coil in intake valve timing control solenoid valve.


NOTE:

Always replace O-ring when intake valve timing control solenoid valve is removed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace intake valve timing control solenoid valve. Refer to EM-44, "Exploded View".

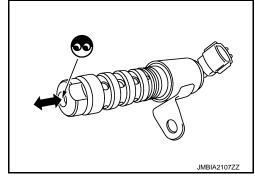


P0101 MAF SENSOR

Description INFOID:0000000008451070

The mass air flow (MAF) sensor (1) is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. The MAF sensor controls the temperature of the hot wire to a certain amount. The heat generated by the hot wire is reduced as the intake air flows around it. The more air, the greater the heat loss

Therefore, the electric current supplied to hot wire is changed to maintain the temperature of the hot wire as air flow increases. The ECM detects the air flow by means of this current change.

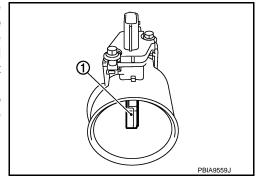

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0101 is displayed with other DTC, first perform the trouble diagnosis for other DTC.

DTC No.	Trouble diagnosis (Trouble diagnosis content)	DTC detecting condition	Possible cause	
P0101	MAF SEN/CIRCUIT-B1 [Mass air flow (MAF) sensor circuit range/performance]	 A high voltage from the sensor is sent to ECM under light load driving condition. A low voltage from the sensor is sent to ECM under heavy load driving condition. 	Harness or connectors (The sensor circuit is open or shorted.) Intake air leaks MAF sensor EVAP control system pressure sensor Intake air temperature sensor	-

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and warm it up to normal operating temperature.
- 2. Drive the vehicle for at least 5 seconds under the following conditions:

CAUTION:

Always drive vehicle at safe speed.

Selector lever	Suitable position
Vehicle speed	40 km/h (25 MPH) or more

NOTE:

- The gear must be fixed while driving the vehicle.
- · Keep the accelerator pedal as steady as possible during cruising.
- 3. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-624, "Diagnosis Procedure".

NO >> INSPECTION END

Revision: 2012 August EC-623 2013 CUBE

EC

Α

С

D

.

Е

F

J

K

L

M

Ν

С

Р

P0101 MAF SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Diagnosis Procedure

INFOID:0000000008451072

1. CHECK INTAKE SYSTEM

Check the following for connection.

- Air duct
- Vacuum hoses
- Intake air passage between air duct and intake manifold

Is the inspection result normal?

YES >> GO TO 2.

NO >> Reconnect the parts.

2.CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace ground connection.

3.CHECK MASS AIR FLOW (MAF) SENSOR POWER SUPPLY CIRCUIT

- 1. Disconnect MAF sensor harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between MAF sensor harness connector and ground.

MAF :	sensor	Ground	Voltage	
Connector	Connector Terminal		voltage	
F4	5	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 5. NO >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- Harness for open or short between mass air flow sensor and ECM
- Harness for open or short between mass air flow sensor and IPDM E/R
 - >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK MAF SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between MAF sensor harness connector and ECM harness connector.

MAF sensor		E	Continuity	
Connector	Terminal	Connector Terminal		Continuity
F4	4	F8	52	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

$oldsymbol{6}$.CHECK MAF SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between MAF sensor harness connector and ECM harness connector.

MAFs	ensor	EC	M	Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
F4	3	F8	45	Existed	
Also chec	k harness for	short to groun	d and short to	power.	
the inspection	on result norr	mal?			
	O TO 7.	rouit or obort to		out to novemen in h	
		MPERATURE		ort to power in r	arness or connectors.
	•		er to <u>EC-634, "</u>	Component Ins	<u>pection"</u> .
-	on result norr O TO 8.	<u>nai?</u>			
		sensor (with int	ake air tempei	rature sensor).	Refer to EM-24, "Exploded View".
	•	L SYSTEM PI	•	•	
					nent Inspection".
	on result norr	•			
	O TO 9.				
	•	control system	n pressure sen	sor. Refer to <u>Fl</u>	-14, "Exploded View".
CHECK MA	AF SENSOR				
neck MAF se	ensor. Refer t	o <u>EC-625, "Co</u>	mponent Inspe	ection".	
the inspection	on result norr	<u>nal?</u>			
	O TO 10.	annan Dafant	-EM 04 "Evel	- d - d \ /; !!	
_	•	sensor. Refer to NT INCIDENT		oded view".	
ieck intermit	tent incident.	Refer to GI-41	<u>I, "Intermittent</u>	<u>Incident"</u> .	
~~ IN	ISPECTION I	END			
omponen	t Inspectio	n			INFOID:00000000845107
.CHECK MA	ASS AIR FLO	W SENSOR-I			
With CONS	SUI T				
Turn igniti	on switch OF				
		connectors dis		poeraturo	
		d select "DATA			
		1" and check ir			
Monitor item		Condition		N	IAS A/F SE-B1
	_	h ON (Engine stop			Approx. 0.4 V
	Idle (Engine i	s warmed-up to no	ormal operating te	mper-	0.7 - 1.1 V

Monitor item	Condition	MAS A/F SE-B1
	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
WAS AN SE-BT	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
	Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Without CONSULT

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Start engine and warm it up to normal operating temperature.

Revision: 2012 August EC-625 2013 CUBE

4. Check the voltage between ECM harness connector and ground.

E	ECM		Condition	n Voltage	
Connector	Terminal	Ground	Condition	voltage	
			Ignition switch ON (Engine stopped.)		
F8	45 (MAE appear	Ground	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V	
F8 (MAF sensor signal)	Giodila	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V		
			Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*	

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. CHECK FOR THE CAUSE OF UNEVEN AIR FLOW THROUGH MASS AIR FLOW SENSOR

- 1. Turn ignition switch OFF.
- 2. Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.
- Crushed air ducts
- Malfunctioning seal of air cleaner element
- Uneven dirt of air cleaner element
- Intake valve deposits
- Improper specification of intake air system parts

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

3.CHECK MASS AIR FLOW SENSOR-II

(II) With CONSULT

- 1. Repair or replace malfunctioning part.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Connect CONSULT and select "DATA MONITOR" mode.
- 4. Select "MAS A/F SE-B1" and check indication.

Monitor item	Condition	MAS A/F SE-B1
	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
WIAS A/F SE-BT	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
	Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

♥Without CONSULT

- 1. Repair or replace malfunctioning part.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Check the voltage between ECM harness connector and ground.

E	ECM		Condition	Voltogo
Connector	Terminal	Ground	Condition	Voltage
	45 F8 (MAF sensor	Ground	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
F8			Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
10	signal)		2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
			Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

4. CHECK MASS AIR FLOW SENSOR-III

(P)With CONSULT

- Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector and reconnect it again.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Connect CONSULT and select "DATA MONITOR" mode.
- 5. Select "MAS A/F SE-B1" and check indication.

Monitor item	Condition	MAS A/F SE-B1
MAS A/F SE-B1	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
	Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

⋈Without CONSULT

- 1. Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector and reconnect it again.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Check the voltage between ECM harness connector and ground.

E	ECM		Condition	Voltage
Connector	Terminal	Ground	Condition	voltage
		Crownd	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
F8	45 (MAF sensor Ground signal)		Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
10		Giodila	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
			Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Clean or replace mass air flow sensor. Refer to EM-24, "Exploded View".

Revision: 2012 August EC-627 2013 CUBE

--

EC

Α

C

D

Е

F

G

Н

ı

J

Κ

I.

L

B //

N


0

Р

Description INFOID:000000008451074

The mass air flow (MAF) sensor (1) is placed in the stream of intake air. It measures the intake flow rate by measuring a part of the entire intake flow. The MAF sensor controls the temperature of the hot wire to a certain amount. The heat generated by the hot wire is reduced as the intake air flows around it. The more air, the greater the heat loss.

Therefore, the electric current supplied to hot wire is changed to maintain the temperature of the hot wire as air flow increases. The ECM detects the air flow by means of this current change.

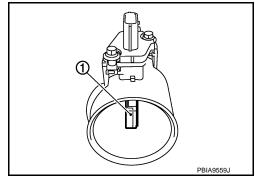

DTC Logic

INFOID:0000000008451075

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0102	Mass air flow sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (The sensor circuit is open or shorted.) Intake air leaks Mass air flow sensor
P0103	Mass air flow sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	Harness or connectors (The sensor circuit is open or shorted.) Mass air flow sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

Which DTC is detected?

P0102 >> GO TO 2.

P0103 >> GO TO 3.

2.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P0102

- 1. Start engine and wait at least 5 seconds.
- Check DTC.

Is DTC detected?

YES >> Go to EC-629, "Diagnosis Procedure".

NO >> INSPECTION END

3.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P0103-I

- 1. Turn ignition switch ON and wait at least 5 seconds.
- Check DTC.

Is DTC detected?

YES >> Go to EC-629, "Diagnosis Procedure".

NO >> GO TO 4.

4.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P0103-II

- 1. Start engine and wait at least 5 seconds.
- 2. Check DTC.

Is DTC detected?

YES >> Go to EC-629, "Diagnosis Procedure".

NO >> INSPECTION END

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

INFOID:0000000008451076

Diagnosis Procedure

1.INSPECTION START

Confirm the detected DTC. Which DTC is detected?

P0102 >> GO TO 2.

P0103 >> GO TO 3.

2.CHECK INTAKE SYSTEM

Check the following for connection.

- Air duct
- Vacuum hoses
- Intake air passage between air duct to intake manifold

Is the inspection result normal?

YES >> GO TO 3.

NO >> Reconnect the parts.

3.check ground connection

- Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace ground connection.

4. CHECK MAF SENSOR POWER SUPPLY CIRCUIT

- Disconnect mass air flow (MAF) sensor harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between MAF sensor harness connector and ground.

MAF	sensor	Ground	Voltage	
Connector Terminal		Glound	voitage	
F4	5	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- Harness for open or short between mass air flow sensor and ECM
- Harness for open or short between mass air flow sensor and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

6.CHECK MAF SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between MAF sensor harness connector and ECM harness connector.

MAF sensor		E	Continuity	
Connector	Terminal	Connector Terminal		Continuity
F4	4	F8	52	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

EC-629 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

F

Н

N

Р

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

YES >> GO TO 7.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

7.CHECK MAF SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between MAF sensor harness connector and ECM harness connector.

MAF sensor		ECM		Continuity	
Connector	Terminal	Connector Terminal		Continuity	
F4	3	F8	45	Existed	

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK MASS AIR FLOW SENSOR

Refer to EC-630, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace mass air flow sensor. Refer to EM-24, "Exploded View".

9. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008451077

1. CHECK MASS AIR FLOW SENSOR-I

(P)With CONSULT

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Connect CONSULT and select "DATA MONITOR" mode.
- 5. Select "MAS A/F SE-B1" and check indication.

Monitor item	Condition	MAS A/F SE-B1	
	Ignition switch ON (Engine stopped.)	Approx. 0.4 V	
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V	
WAS AT SE-BT	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V	
	Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*	

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

⋈Without CONSULT

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Check the voltage between ECM harness connector and ground.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Е	ECM		Condition	Voltage
Connector	Terminal	Ground	Condition	voltage
			Ignition switch ON (Engine stopped.)	Approx. 0.4 V
F8	45 (MAF sensor Ground signal)	0	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
10		Glodila	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
			Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.check for the cause of uneven air flow through mass air flow sensor

- Turn ignition switch OFF.
- 2. Check for the cause of uneven air flow through mass air flow sensor. Refer to the following.
- Crushed air ducts
- Malfunctioning seal of air cleaner element
- Uneven dirt of air cleaner element
- Intake valve deposits
- Improper specification of intake air system parts

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.CHECK MASS AIR FLOW SENSOR-II

(P)With CONSULT

- 1. Repair or replace malfunctioning part.
- Start engine and warm it up to normal operating temperature.
- Connect CONSULT and select "DATA MONITOR" mode.
- 4. Select "MAS A/F SE-B1" and check indication.

Monitor item	Condition	MAS A/F SE-B1
	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
MAS A/F SE-B1	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
WAS AVI GE-BI	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
	Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

♥Without CONSULT

- Repair or replace malfunctioning part.
- Start engine and warm it up to normal operating temperature.
- Check the voltage between ECM harness connector and ground.

EC

Α

D

Е

F

Ν

Р

E	ECM		Ground Condition	
Connector	Terminal	Giodila	Condition	Voltage
			Ignition switch ON (Engine stopped.)	Approx. 0.4 V
F8	45 (MAF sensor		Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
10	signal)		2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
			Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

4. CHECK MASS AIR FLOW SENSOR-III

(P)With CONSULT

- 1. Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector and reconnect it again.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Connect CONSULT and select "DATA MONITOR" mode.
- 5. Select "MAS A/F SE-B1" and check indication.

Monitor item	Condition	MAS A/F SE-B1
MAS A/F SE-B1	Ignition switch ON (Engine stopped.)	Approx. 0.4 V
	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
	2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V
	Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Without CONSULT

- 1. Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector and reconnect it again.
- 3. Start engine and warm it up to normal operating temperature.
- 4. Check the voltage between ECM harness connector and ground.

ECM		Ground	Condition	Voltage
Connector	Terminal	Ground	Condition	vollago
			Ignition switch ON (Engine stopped.)	Approx. 0.4 V
F8	45 (MAF sensor Ground signal)	Cround	Idle (Engine is warmed-up to normal operating temperature.)	0.7 - 1.1 V
10		2,500 rpm (Engine is warmed-up to normal operating temperature.)	1.3 - 1.7 V	
			Idle to about 4,000 rpm	0.7 - 1.1 V to Approx. 2.4 V*

^{*:} Check for linear voltage rise in response to engine being increased to about 4,000 rpm.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Clean or replace mass air flow sensor. Refer to EM-24, "Exploded View".

[MR18DE (FOR CALIFORNIA)]

P0111 IAT SENSOR

DTC Logic INFOID:0000000008451078

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis (Trouble diagnosis content)	DTC detecting condition	Possible cause	
P0111	IAT SENSOR 1 B1 [Intake air temperature (IAT) sensor circuit range/perfor- mance]	The comparison result of signals transmitted to ECM from each temperature sensor (IAT sensor, ECT sensor, FTT sensor, and EOT sensor, CVT fluid temperature sensor) shows that the voltage signal of the IAT sensor is higher/lower than that of other temperature sensors when the engine is started with its cold state.	Harness or connectors (High or low resistance in the IAT sensor circuit) IAT sensor	

DTC CONFIRMATION PROCEDURE

1.INSPECTION START

Is it necessary to erase permanent DTC?

YES >> GO TO 3. NO >> GO TO 2.

2.PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-634, "Component Function Check".

NOTE:

Use the component function check to check the overall function of the IAT sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

>> Proceed to EC-634, "Diagnosis Procedure". NO

${f 3.}$ PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

- Before performing the following procedure, do not add fuel.
- Before performing the following procedure, check that fuel level is between 1/4 and 4/4.
- Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 4.

f 4 . PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for 60 minutes.
- 2. Move the vehicle to a cool place.

NOTE:

Cool the vehicle in an environment of ambient air temperature between -10°C (14°F) and 35°C (95°F).

3. Turn ignition switch OFF and soak the vehicle for 12 hours.

CAUTION:

Never turn ignition switch ON during soaking.

NOTE:

The vehicle must be cooled with the food open.

4. Start engine and let it idle for 5 minutes or more.

CAUTION:

Revision: 2012 August

EC-633 2013 CUBE EC

Α

Е

D

F

Н

L

N

P0111 IAT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Never turn ignition switch OFF during idling.

5. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-634, "Diagnosis Procedure".

NO >> INSPECTION END

Component Function Check

INFOID:0000000008451079

1. CHECK INTAKE AIR TEMPERATURE (IAT) SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector.
- 3. Check resistance between mass air flow sensor terminals as follows.

Terminals	Condition		Resistance ($k\Omega$)
1 and 2	Temperature [°C (°F)]	25 (77)	1.800 – 2.200

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to EC-634, "Diagnosis Procedure".

2. CHECK INTERMITTENT INCIDENT

Check intermittent incident. Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-634, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008451080

1. CHECK INTAKE AIR TEMPERATURE (IAT) SENSOR

Check intake air temperature sensor. Refer to EC-634, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace mass air flow sensor (with intake air temperature sensor). Refer to EM-24, "Exploded View".

2. CHECK INTERMITTENT INCIDENT

Check intermittent incident. Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008451081

1. CHECK INTAKE AIR TEMPERATURE SENSOR

- Turn ignition switch OFF.
- Disconnect mass air flow sensor harness connector.
- 3. Check resistance between mass air flow sensor terminals as per the following.

Terminals	Condition		Resistance (k Ω)
1 and 2	Intake air temperature [°C (°F)]	25 (77)	1.800 - 2.200

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace mass air flow sensor (with intake air temperature sensor).

Α


D

P0112, P0113 IAT SENSOR

Description INFOID:0000000008451082

The intake air temperature sensor is built-into mass air flow sensor (1). The sensor detects intake air temperature and transmits a signal to the ECM.


The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

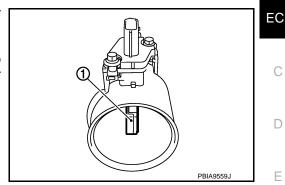

<Reference data>

Intake air temperature [°C (°F)]	Voltage* (V)	Resistance (kΩ)
25 (77)	3.3	1.800 - 2.200
80 (176)	1.2	0.283 - 0.359

^{*:} These data are reference values and are measured between ECM terminal 46 (Intake air temperature sensor) and ground.

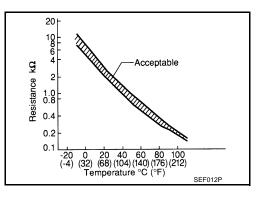

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0112	Intake air temperature sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (The sensor circuit is open or shorted.)
P0113	Intake air temperature sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	Intake air temperature sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON and wait at least 5 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-635, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

INFOID:0000000008451083

M

Ν

INFOID:0000000008451084

P0112, P0113 IAT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK INTAKE AIR TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

- 1. Disconnect mass air flow sensor (with intake air temperature sensor) harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between mass air flow sensor harness connector and ground.

MAF	sensor	Ground	Voltage
Connector	Terminal	Giodila	voltage
F4	5	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

3.CHECK INTAKE AIR TEMPERATURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between mass air flow sensor harness connector and ECM harness connector.

MAF	sensor	E	CM	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F4	4	F8	52	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

f 4.CHECK INTAKE AIR TEMPERATURE SENSOR

Refer to EC-634, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace mass air flow sensor (with intake air temperature sensor).

5. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008451085

1. CHECK INTAKE AIR TEMPERATURE SENSOR

- Turn ignition switch OFF.
- Disconnect mass air flow sensor harness connector.
- Check resistance between mass air flow sensor terminals as per the following.

Terminals	Condition		Resistance (k Ω)
1 and 2	Intake air temperature [°C (°F)]	25 (77)	1.800 - 2.200

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace mass air flow sensor (with intake air temperature sensor).

Α

EC

D

Е


Ν

Р

P0116 ECT SENSOR

Description


The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

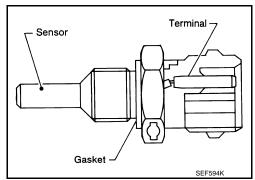

<Reference data>

Engine coolant temperature [°C (°F)]	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.37 - 2.63
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

^{*:} These data are reference values and are measured between ECM terminal 38 (Engine coolant temperature sensor) and ground.

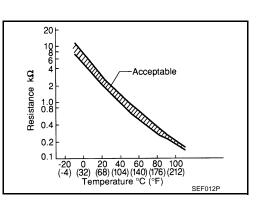

INFOID:0000000008451087

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis (Trouble diagnosis content)	DTC detecting condition	Possible cause	K
P0116	ECT SEN/CIRC [Engine coolant temperature (ECT) sensor circuit range/per- formance]	The comparison result of signals transmitted to ECM from each temperature sensor (IAT sensor, ECT sensor, FTT sensor, and EOT sensor, CVT fluid temperature sensor) shows that the voltage signal of the ECT sensor is higher/lower than that of other temperature sensors when the engine is started with its cold state.	Harness or connectors (High or low resistance in the ECT sensor circuit) ECT sensor	L

DTC CONFIRMATION PROCEDURE

1.INSPECTION START

Is it necessary to erase permanent DTC?

YES >> GO TO 3. NO >> GO TO 2.

2 Perform component function check

Perform component function check. Refer to EC-638, "Component Function Check".

NOTE:

Use the component function check to check the overall function of the ECT sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

Revision: 2012 August EC-637 2013 CUBE

[MR18DE (FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Proceed to EC-639, "Diagnosis Procedure".

3. PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

- · Before performing the following procedure, do not add fuel.
- Before performing the following procedure, check that fuel level is between 1/4 and 4/4.
- Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 4.

4. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 60 minutes.
- 2. Move the vehicle to a cool place.

NOTE:

Cool the vehicle in an environment of ambient air temperature between -10°C (14°F) and 35°C (95°F).

3. Turn ignition switch OFF and soak the vehicle for 12 hours.

CAUTION:

Never turn ignition switch ON during soaking.

NOTE:

The vehicle must be cooled with the food open.

4. Start engine and let it idle for 5 minutes or more.

CAUTION:

Never turn ignition switch OFF during idling.

5. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-639, "Diagnosis Procedure".

NO >> INSPECTION END


Component Function Check

INFOID:0000000008451088

1. CHECK ENGINE COOLANT TEMPERATURE (ECT) SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect ECT sensor harness connector.
- 3. Remove ECT sensor. Refer to CO-24, "Exploded View".
- 4. Check resistance between ECT sensor terminals by heating with hot water as shown in the figure.

sistance (kΩ)		Condition	Terminals
2.37 - 2.63	20 (68)		
0.68 – 1.00	50 (122)	Temperature [°C (°F)]	1 and 2
236 – 0.260	90 (194)		
	, ,	Temperature [°C (°F)]	1 and 2

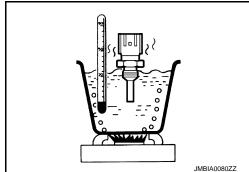

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to EC-639, "Diagnosis Procedure".

2.CHECK INTERMITTENT INCIDENT

Check intermittent incident. Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to <u>EC-639</u>, "<u>Diagnosis Procedure</u>".

P0116 ECT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Diagnosis Procedure

INFOID:0000000008451089

Α

EC

D

Е

F

K

L

M

Ν

1. CHECK ENGINE COOLANT TEMPERATURE (ECT) SENSOR

Check ECT sensor. Refer to EC-639, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace ECT sensor. Refer to CO-24, "Exploded View".

2.CHECK INTERMITTENT INCIDENT

Check intermittent incident. Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008451090

1. CHECK ENGINE COOLANT TEMPERATURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect engine coolant temperature sensor harness connector.
- Remove engine coolant temperature sensor. Refer to <u>CO-24, "Exploded View"</u>.
- 4. Check resistance between engine coolant temperature sensor terminals by heating with hot water as shown in the figure.

Terminals	Condition		Resistance
		20 (68)	2.37 - 2.63 kΩ
1 and 2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00 kΩ
		90 (194)	0.236 - 0.260 kΩ
	14 10		

Is the inspection result normal?

YES >> INSPECTION END


NO >> Replace engine coolant temperature sensor. Refer to <u>CO-24, "Exploded View"</u>.

Ρ

P0117, P0118 ECT SENSOR

Description INFOID:000000008451091


The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

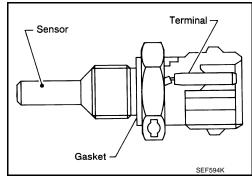

<Reference data>

Engine coolant temperature [°C (°F)]	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.37 - 2.63
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

^{*:} These data are reference values and are measured between ECM terminal 38 (Engine coolant temperature sensor) and ground.

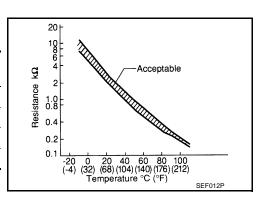

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible Cause
P0117	Engine coolant temperature sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (The sensor circuit is open or shorted.)
P0118	Engine coolant temperature sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	Engine coolant temperature sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 5 seconds.
- 2. Check DTC.

Is DTC detected?

YES >> Go to EC-640, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK GROUND CONNECTION

1. Turn ignition switch OFF.

Revision: 2012 August

INFOID:0000000008451093

INFOID:0000000008451092

P0117, P0118 ECT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK ECT SENSOR POWER SUPPLY CIRCUIT

- Disconnect engine coolant temperature (ECT) sensor harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between ECT sensor harness connector and ground.

ECT sensor		Ground	Voltage
Connector	Terminal	Glound	voltage
F28	1	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

3.check ect sensor ground circuit for open and short

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between ECT sensor harness connector and ECM harness connector.

ECT :	sensor	E	CM	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F28	2	F8	44	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

f 4.CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to EC-639, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace engine coolant temperature sensor. Refer to CO-24, "Exploded View".

5. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

1 CHECK ENGINE COOLANT TEMPERATURE SENSOR

- Turn ignition switch OFF.
- 2. Disconnect engine coolant temperature sensor harness connector.
- 3. Remove engine coolant temperature sensor. Refer to CO-24, "Exploded View".
- 4. Check resistance between engine coolant temperature sensor terminals by heating with hot water as shown in the figure.

Terminals	Condition		Resistance
		20 (68)	2.37 - 2.63 kΩ
1 and 2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00 kΩ
		90 (194)	0.236 - 0.260 kΩ

EC-641 Revision: 2012 August 2013 CUBE

EC

Α

Е

F

Н

M

N

INFOID:0000000008451094

P0117, P0118 ECT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Is the inspection result normal?

YES >> INSPECTION END


NO >> Replace engine coolant temperature sensor. Refer to CO-24, "Exploded View".

P0122, P0123 TP SENSOR

Description INFOID:0000000008451095

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometer which transform the throttle valve position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

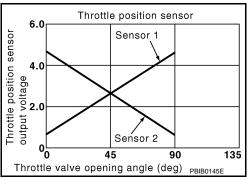

DTC Logic INFOID:0000000008451096

DTC DETECTION LOGIC

NOTE:

If DTC P0122 or P0123 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-798, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0122	Throttle position sensor 2 circuit low input	An excessively low voltage from the TP sensor 2 is sent to ECM.	Harness or connectors (TP sensor 2 circuit is open or shorted.)
P0123	Throttle position sensor 2 circuit high input	An excessively high voltage from the TP sensor 2 is sent to ECM.	Electric throttle control actuator (TP sensor 2)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2 Perform DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for 1 second.
- Check DTC.

Is DTC detected?

YES >> Go to EC-643, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2 .CHECK THROTTLE POSITION SENSOR 2 POWER SUPPLY CIRCUIT

- Disconnect electric throttle control actuator harness connector.
- Turn ignition switch ON.

EC-643 Revision: 2012 August 2013 CUBE

EC

Α

Е

Н

K

INFOID:0000000008451097

Р

P0122, P0123 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Check the voltage between electric throttle control actuator harness connector and ground.

Electric throttle control actuator		Ground	Voltage
Connector	Terminal	Glound	voltage
F29	2	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

3.CHECK THROTTLE POSITION SENSOR 2 GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

Electric throttle	control actuator	E(CM	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F29	4	F8	36	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4.CHECK THROTTLE POSITION SENSOR 2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

Electric throttle	control actuator	E	CM	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F29	3	F8	34	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

${f 5.}$ CHECK THROTTLE POSITION SENSOR

Refer to EC-645, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

Replace electric throttle control actuator. Refer to EM-26, "Exploded View".

>> INSPECTION END

.CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

P0122, P0123 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Component Inspection

INFOID:0000000008451098

1. CHECK THROTTLE POSITION SENSOR

- Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Perform EC-488, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".
- Turn ignition switch ON.
- 5. Set selector lever to D (CVT) or 1st (M/T) position.
- Check the voltage between ECM harness connector and ground.

E	СМ	Ground	Condition		Voltage
Connector	Terminal	Ground	001	idition	voltage
	33 (TP sensor			Fully released	More than 0.36V
F8	1 signal)	Ground Accel	Accelerator	Fully de- pressed	Less than 4.75V
10	34 (TP sensor	pedal		Fully released	Less than 4.75V
	2 signal)		Fully de- pressed	More than 0.36V	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace electric throttle control actuator. Refer to EM-26, "Exploded View". EC

Α

C

Е

D

F

Н

K

L

M

Ν


0

Р

P0125 ECT SENSOR

Description INFOID:000000008451099


The engine coolant temperature sensor is used to detect the engine coolant temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine coolant temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

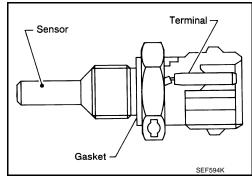

<Reference data>

Engine coolant temperature [°C (°F)]	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.37 - 2.63
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260

^{*:} These data are reference values and are measured between ECM terminal 38 (Engine coolant temperature sensor) and ground.

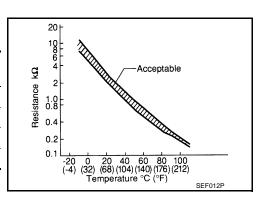

INFOID:0000000008451100

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P0125 is displayed with P0116, first perform the trouble diagnosis for DTC P0116. Refer to EC-637, "DTC Logic".
- If DTC P0125 is displayed with P0117 or P0118, first perform the trouble diagnosis for DTC P0117 or P0118. Refer to <u>EC-640, "DTC Logic"</u>.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0125	Insufficient engine coolant temperature for closed loop fuel control	 Voltage sent to ECM from the sensor is not practical, even when some time has passed after starting the engine. Engine coolant temperature is insufficient for closed loop fuel control. 	Harness or connectors (High resistance in the circuit) Engine coolant temperature sensor Thermostat

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK ENGINE COOLANT TEMPERATURE SENSOR FUNCTION

(P)With CONSULT

- 1. Turn ignition switch ON.
- 2. Select "DATA MONITOR" mode with CONSULT.
- 3. Check that "COOLAN TEMP/S" is above 10°C (50°F).

With GST

P0125 ECT SENSOR [MR18DE (FOR CALIFORNIA)] < DTC/CIRCUIT DIAGNOSIS > Follow the procedure "With CONSULT" above. Α <u>Is it above 10°C (50°F)?</u> YES >> INSPECTION END NO >> GO TO 3. EC 3.PERFORM DTC CONFIRMATION PROCEDURE (P)With CONSULT 1. Start engine and run it for 65 minutes at idle speed. Check 1st tip DTC. If "COOLAN TEMP/S" indication increases to more than 10°C (50°F) within 65 minutes, stop engine because the test result will be OK. D **CAUTION:** Be careful not to overheat engine. Follow the procedure "With CONSULT" above. Е Is 1st trip DTC detected? YES >> EC-647, "Diagnosis Procedure". NO >> INSPECTION END Diagnosis Procedure INFOID:0000000008451101 1. CHECK GROUND CONNECTION Turn ignition switch OFF. Check ground connection E38. Refer to GI-44, "Circuit Inspection". Н Is the inspection result normal? YES >> GO TO 2. NO >> Repair or replace ground connection. 2.CHECK ENGINE COOLANT TEMPERATURE SENSOR Refer to EC-647, "Component Inspection". Is the inspection result normal? YES >> GO TO 3. NO >> Replace engine coolant temperature sensor. Refer to CO-24, "Exploded View". K 3.CHECK THERMOSTAT OPERATION When the engine is cold [lower than 70°C (158°F)] condition, grasp lower radiator hose and confirm the engine coolant does not flow. Is the inspection result normal? YES >> GO TO 4. NO >> Repair or replace thermostat. Refer to CO-22, "Removal and Installation". M 4. CHECK INTERMITTENT INCIDENT Refer to GI-41. "Intermittent Incident".

>> INSPECTION END

Component Inspection

1. CHECK ENGINE COOLANT TEMPERATURE SENSOR

- Turn ignition switch OFF.
- 2. Disconnect engine coolant temperature sensor harness connector.
- Remove engine coolant temperature sensor. Refer to CO-24, "Exploded View".
- 4. Check resistance between engine coolant temperature sensor terminals by heating with hot water as shown in the figure.

N

INFOID:0000000008451102

P0125 ECT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Terminals	Condition		Resistance
1 and 2	Temperature [°C (°F)]	20 (68)	2.37 - 2.63 kΩ
		50 (122)	0.68 - 1.00 kΩ
		90 (194)	0.236 - 0.260 kΩ

Is the inspection result normal?

YES >> INSPECTION END


NO >> Replace engine coolant temperature sensor. Refer to CO-24. "Exploded View".

P0127 IAT SENSOR

Description INFOID:0000000008451103

The intake air temperature sensor is built-into mass air flow sensor (1). The sensor detects intake air temperature and transmits a signal to the ECM.


The temperature sensing unit uses a thermistor which is sensitive to the change in temperature. Electrical resistance of the thermistor decreases in response to the temperature rise.

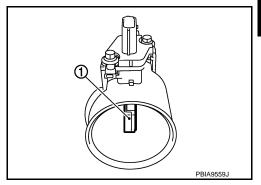

<Reference data>

Intake air temperature [°C (°F)]	Voltage* (V)	Resistance ($k\Omega$)
25 (77)	3.3	1.800 - 2.200
80 (176)	1.2	0.283 - 0.359

^{*:} These data are reference values and are measured between ECM terminal 46 (Intake air temperature sensor) and ground.

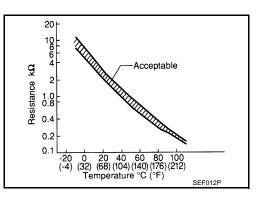

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	
P0127	Intake air temperature too high	Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signal from engine coolant temperature sensor.	 Harness or connectors (The sensor circuit is open or shorted) Intake air temperature sensor 	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

This test may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- Wait until engine coolant temperature is less than 96°C (205°F)
- Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT.
- Check the engine coolant temperature.
- If the engine coolant temperature is not less than 96°C (205°F), turn ignition switch OFF and cool down engine.

NOTE:

Perform the following steps before engine coolant temperature is above 96°C (205°F).

EC-649 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

INFOID:0000000008451104

Ν

P0127 IAT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- 2. Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT.
- 4. Start engine.
- 5. Hold vehicle speed at more than 70 km/h (43 MPH) for 100 consecutive seconds.

CAUTION:

Always drive vehicle at a safe speed.

6. Check 1st trip DTC.

With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Go to EC-650, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451105

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK INTAKE AIR TEMPERATURE SENSOR

Refer to EC-650, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace mass air flow sensor (with intake air temperature sensor). Refer to EM-24, "Exploded View".

3. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008451106

1. CHECK INTAKE AIR TEMPERATURE SENSOR

- Turn ignition switch OFF.
- 2. Disconnect mass air flow sensor harness connector.
- 3. Check resistance between mass air flow sensor terminals as per the following.

Terminals	Condition		Resistance (kΩ)
1 and 2	Intake air temperature [°C (°F)]	25 (77)	1.800 - 2.200

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace mass air flow sensor (with intake air temperature sensor). Refer to EM-24, "Exploded View".

P0128 THERMOSTAT FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P0128 THERMOSTAT FUNCTION

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0128 is displayed with DTC P0300, P0301, P0302, P0303 or P0304, first perform the trouble diagnosis for DTC P0300, P0301, P0302, P0303, P0304. Refer to <u>EC-714, "DTC Logic".</u>

Engine coolant temperature has not risen enough to open the thermostat even though the engine has run long enough.

This is due to a leak in the seal or the thermostat stuck open.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	
P0128	Thermostat function	The engine coolant temperature does not reach to specified temperature even though the engine has run long enough.	ThermostatLeakage from sealing portion of thermostatEngine coolant temperature sensor	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

- For best results, perform at ambient temperature of -10°C (14°F) or higher.
- For best results, perform at engine coolant temperature of -10°C (14°F) to 52°C (126°F).
- Before performing the following procedure, do not fill with the fuel.

>> GO TO 2.

2.PRECONDITIONING-II

(P)With CONSULT

- 1. Turn ignition switch ON.
- 2. Check the following conditions:

Ambient temperature	-10°C (14°F) or more
A/C switch	OFF
Blower fan switch	OFF

- 3. Select "DATA MONITOR" mode of "ENGINE" using CONSULT.
- Check the following conditions:

COOLAN TEMP/S	-10°C - 52°C (14 - 126°F)

Is the condition satisfied?

YES >> GO TO 3.

NO >> 1. Satisfy the condition.

2. GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE-I

With CONSULT

- 1. Start engine.
- 2. Drive the vehicle until the following condition is satisfied.

CAUTION:

Always drive vehicle at safe speed.

STEP 1

Drive the vehicle under the conditions instructed below until the difference between "COOLAN TEMP/S" and "FUEL T/TMP SE" becomes at least 24°C (43°F).

EC

Α

D

F

Е

G

Н

J

Κ

M

Ν

0

Р

Ρ

COOLAN TEMP/S	65°C (149°F) or less	
FUEL T/TMP SE	Less than the value calculated by subtracting 24°C (43°F) from "COOLAN TEMP/S".*	
*: Example		
COOLAN TEMP/S	FUEL T/TMP SE	
70°C (158°F)	46°C (115°F) or less	
65°C (149°F)	41°C (106°F) or less	

STEP 2 (MT models)

60°C (140°F)

Drive the vehicle at 60 km/h (37 MPH) or more with the difference between "COOLAN TEMP/S" and "FUEL T/TMP SE" maintained at 24°C (43°F) or more.

36°C (97°F) or less

STEP 2 (CVT models)

Drive the vehicle at 50 km/h (32 MPH) or more with the difference between "COOLAN TEMP/S" and "FUEL T/TMP SE" maintained at 24°C (43°F) or more.

NOTE:

Keep the accelerator pedal as steady as possible during cruising.

STEP 3 (MT models)

Drive the vehicle at 60 km/h (37 MPH) or more until "COOLAN TEMP/S" increases by 6°C (11°F).

STEP 3 (CVT models)

Drive the vehicle at 50 km/h (32 MPH) or more until "COOLAN TEMP/S" increases by 6°C (11°F).

NOTE:

Keep the accelerator pedal as steady as possible during cruising.

Is the condition satisfied?

YES >> GO TO 4. NO >> GO TO 1.

4. PERFORM DTC CONFIRMATION PROCEDURE-II

(P)With CONSULT

1. Drive the vehicle until the following condition is satisfied.

COOLAN TEMP/S	65°C (149°F) or more (MT models)
	59°C (139°F) or more (CVT models)

CAUTION:

Always drive vehicle at safe speed.

2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-652, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451108

1. CHECK ENGINE COOLANT TEMPERATURE SENSOR

Refer to EC-653, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace engine coolant temperature sensor. Refer to CO-24, "Exploded View".

2. CHECK THERMOSTAT

Refer to CO-23, "Inspection".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace thermostat. Refer to CO-22, "Removal and Installation".

P0128 THERMOSTAT FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Component Inspection

INFOID:0000000008451109

1.CHECK ENGINE COOLANT TEMPERATURE SENSOR

- Turn ignition switch OFF.
- 2. Disconnect engine coolant temperature sensor harness connector.
- Remove engine coolant temperature sensor. Refer to CO-24, "Exploded View".
- 4. Check resistance between engine coolant temperature sensor terminals by heating with hot water as shown in the figure.

Terminals	Condition		Resistance
			2.37 - 2.63 kΩ
1 and 2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00 kΩ
		90 (194)	0.236 - 0.260 kΩ

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace engine coolant temperature sensor. Refer to CO-24, "Exploded View". EC

Α

C

D

Е

F

Н

K

L

M

Ν

0


P0130 A/F SENSOR 1

Description INFOID:000000008451110


The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element.

The sensor is capable of precise measurement $\lambda = 1$, but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide λ range.

The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich.

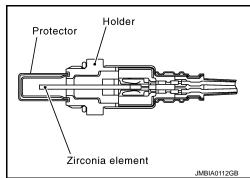

Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of about 800°C (1,472°F).

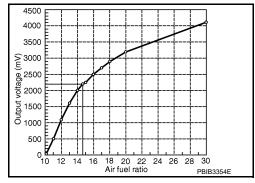

DTC Logic INFOID:0000000008451111

DTC DETECTION LOGIC

To judge the malfunction, the diagnosis checks that the A/F signal computed by ECM from the A/F sensor 1 signal fluctuates according to fuel feedback control.

DTC No.	Trouble diagnosis name	DTC detecting condition		Possible Cause
P0130	Air fuel ratio (A/F) sensor 1	A)	The A/F signal computed by ECM from the A/F sensor 1 signal is constantly in the range other than approx. 2.2 V.	Harness or connectors (The A/F sensor 1 circuit is open or shorted.)
	B)	The A/F signal computed by ECM from the A/F sensor 1 signal is constantly approx. 2.2 V.	• A/F sensor 1	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION A

(P)With CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- Let it idle for 2 minutes.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-656, "Diagnosis Procedure".

P0130 A/F SENSOR 1 [MR18DE (FOR CALIFORNIA)] < DTC/CIRCUIT DIAGNOSIS > NO-1 >> With CONSULT: GO TO 3. NO-2 >> Without CONSULT: GO TO 7. Α 3.check air fuel ratio (a/f) sensor 1 function Select "A/F SEN1 (B1)" in "DATA MONITOR" mode with CONSULT. EC Check "A/F SEN1 (B1)" indication. Does the indication fluctuates around 2.2 V? >> GO TO 4. YES NO >> Go to EC-656, "Diagnosis Procedure". f 4 .PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B-I Select "A/F SEN1 (B1) P1276" of "A/F SEN1" in "DTC WORK SUPPORT" mode with CONSULT. Touch "START". 2. When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Е **ENG SPEED** 1,000 - 3,200 rpm VHCL SPEED SE More than 64 km/h (40 mph) F B/FUEL SCHDL 1.0 - 8.0 msec D position (CVT) Selector lever 5th position (M/T) If "TESTING" is not displayed after 20 seconds, retry from step 2. **CAUTION:** Always drive vehicle at a safe speed. Н Is "TESTING" displayed on CONSULT screen? YES >> GO TO 5. NO >> Check A/F sensor 1 function again. GO TO 3. 5.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B-II Release accelerator pedal fully. NOTE: Never apply brake during releasing the accelerator pedal. Which does "TESTING" change to? COMPLETED>>GO TO 6. OUT OF CONDITION>>Retry DTC CONFIRMATION PROCEDURE. GO TO 4. $\mathsf{6}.\mathsf{PERFORM}$ DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B-III Touch "SELF-DIAG RESULT" Which is displayed on CONSULT screen? YES >> INSPECTION END M NO >> Go to EC-656, "Diagnosis Procedure". .PERFORM COMPONENT FUNCTION CHECK FOR MALFUNCTION B N

Perform Component Function Check. Refer to EC-655, "Component Function Check".

NOTE:

Use component function check to check the overall function of the A/F sensor 1 circuit. During this check, a 1st trip DTC might not be confirmed.

INFOID:0000000008451112

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-656, "Diagnosis Procedure".

Component Function Check

1. PERFORM COMPONENT FUNCTION CHECK

With GST

- Start engine and warm it up to normal operating temperature.
- Drive the vehicle at a speed of 80 km/h (50 MPH) for a few minutes in the suitable gear position.

EC-655 2013 CUBE Revision: 2012 August

3. Shift the selector lever to the D position (CVT) or 1st position (M/T), then release the accelerator pedal fully until the vehicle speed decreases to 50 km/h (31 MPH).

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

Never apply brake during releasing the accelerator pedal.

- 4. Repeat steps 2 to 3 for five times.
- 5. Stop the vehicle and turn ignition switch OFF.
- 6. Wait at least 10 seconds and restart engine.
- 7. Repeat steps 2 to 3 for five times.
- 8. Stop the vehicle.
- 9. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-656, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451113

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Disconnect A/F sensor 1 harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between A/F sensor 1 harness connector and ground.

A/F se	ensor 1	Ground	Voltage	
Connector	Connector Terminal		voltage	
F51	4	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8. F1
- IPDM E/R harness connector E15
- 15 A fuse (No. 61)
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

4. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

A/F se	ensor 1	ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F51	1	F8	49	Existed
F31	2	1.0	53	LAISIEU

P0130 A/F SENSOR 1

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

4. Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

A/F sensor 1		Ground	Continuity
Connector	Terminal	Glodila	Continuity
F51	1	Ground	Not existed
131	2	Glodila	Not existed

ECM		Ground	Continuity
Connector	Terminal	Glound	Continuity
F8	49	Ground	Not existed
10	53	Glound	

5. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK INTERMITTENT INCIDENT

Perform GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace.

6.REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1. Refer to EM-30, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

EC

Α

D

Е

C

Н

П

K

Ν

0


P0131 A/F SENSOR 1

Description INFOID:0000000008451114


The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element.

The sensor is capable of precise measurement $\lambda = 1$, but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide λ range.

The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich.

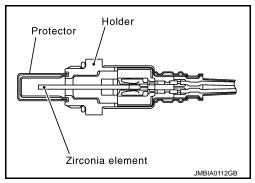

Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of about 800°C (1,472°F).

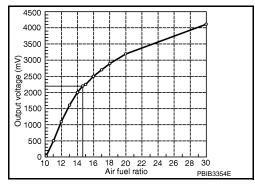

DTC Logic

DTC DETECTION LOGIC

To judge the malfunction, the diagnosis checks that the A/F signal computed by ECM from the A/F sensor 1 signal is not inordinately low.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible Cause
P0131	Air fuel ratio (A/F) sensor 1 circuit low voltage	The A/F signal computed by ECM from the A/F sensor 1 signal is constantly approx. 0 V.	Harness or connectors (The A/F sensor 1 circuit is open or shorted.) A/F sensor 1

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5 V at idle.

>> GO TO 2.

2. CHECK A/F SENSOR FUNCTION

(I) With CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- Select "A/F SEN1 (B1)" in "DATA MONITOR" mode with CONSULT.
- 3. Check "A/F SEN1 (B1)" indication.

With GST

Follow the procedure "With CONSULT" above.

Is the indication constantly approx. 0 V?

P0131 A/F SENSOR 1

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

YES >> Go to EC-659, "Diagnosis Procedure". NO >> GO TO 3.

3.PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

Turn ignition switch OFF, wait at least 10 seconds and then restart engine.

2. Drive and accelerate vehicle to more than 40 km/h (25 MPH) within 20 seconds after restarting engine. CAUTION:

Always drive vehicle at a safe speed.

3. Maintain the following conditions for about 20 consecutive seconds.

ENG SPEED	1,000 - 3,200 rpm
VHCL SPEED SE	More than 40 km/h (25 mph)
B/FUEL SCHDL	1.5 - 9.0 msec
Selector lever	Suitable position

NOTE:

- Keep the accelerator pedal as steady as possible during the cruising.
- If this procedure is not completed within 1 minute after restarting engine at step 1, return to step
- 4. Check 1st trip DTC.

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Go to EC-659, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- Disconnect A/F sensor 1 harness connector.
- Turn ignition switch ON.
- Check the voltage between A/F sensor 1 harness connector and ground.

A/F sensor 1		Ground	Voltage
Connector	Terminal	Glound	voltage
F51	4	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8. F1
- IPDM E/R harness connector E15
- 15 A fuse (No. 61)
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

EC

Α

Е

Н

INFOID:0000000008451116

N

4. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

A/F se	ensor 1	ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F51	1	F8	49	Existed
131	2	1-0	53	LAISIEU

4. Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

A/F sensor 1		Ground	Continuity
Connector	Terminal	Glound	Continuity
F51	1	Ground	Not existed
131	2	Giodila	Not existed

ECM		Ground	Continuity
Connector	Terminal	Glound	Continuity
F8	49	Ground	Not existed
ı-o	53	Giouna	

5. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK INTERMITTENT INCIDENT

Perform GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace.

6. REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1. Refer to EM-30, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

Α

D

F

Н

K

L

M

N


P0132 A/F SENSOR 1

Description INFOID:0000000008451117


The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element.

The sensor is capable of precise measurement $\lambda = 1$, but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide λ range.

The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich.

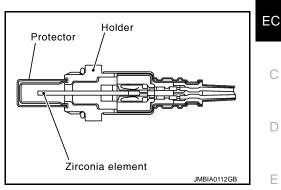

Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of about 800°C (1,472°F).

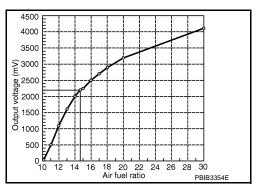

DTC Logic INFOID:0000000008451118

DTC DETECTION LOGIC

To judge the malfunction, the diagnosis checks that the A/F signal computed by ECM from the A/F sensor 1 signal is not inordinately high.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible Cause
P0132	Air fuel ratio (A/F) sensor 1 circuit high voltage	The A/F signal computed by ECM from the A/F sensor 1 signal is constantly approx. 5 V.	Harness or connectors (The A/F sensor 1 circuit is open or shorted.) A/F sensor 1

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5 V at idle.

>> GO TO 2.

2.CHECK A/F SENSOR FUNCTION

With CONSULT

- Start engine and warm it up to normal operating temperature.
- Select "A/F SEN1 (B1)" in "DATA MONITOR" mode with CONSULT.
- Check "A/F SEN1 (B1)" indication.

■With GST

Follow the procedure "With CONSULT" above.

Is the indication constantly approx. 5 V?

EC-661 2013 CUBE Revision: 2012 August

P0132 A/F SENSOR 1

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

YES >> Go to EC-662, "Diagnosis Procedure".

NO >> GO TO 3.

3.PERFORM DTC CONFIRMATION PROCEDURE

(I) With CONSULT

- 1. Turn ignition switch OFF, wait at least 10 seconds and then restart engine.
- Drive and accelerate vehicle to more than 40 km/h (25 MPH) within 20 seconds after restarting engine.CAUTION:

Always drive vehicle at a safe speed.

3. Maintain the following conditions for about 20 consecutive seconds.

ENG SPEED	1,000 - 3,200 rpm
VHCL SPEED SE	More than 40 km/h (25 mph)
B/FUEL SCHDL	1.5 - 9.0 msec
Selector lever	Suitable position

NOTE:

- Keep the accelerator pedal as steady as possible during the cruising.
- If this procedure is not completed within 1 minute after restarting engine at step 1, return to step 1.
- 4. Check 1st trip DTC.

®With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC is detected?

YES >> Go to EC-662, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451119

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- Disconnect A/F sensor 1 harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between A/F sensor 1 harness connector and ground.

A/F se	ensor 1	Ground	Voltage	
Connector	Terminal	Ground	voltage	
F51	4	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8. F1
- IPDM E/R harness connector E15
- 15 A fuse (No. 61)
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

P0132 A/F SENSOR 1

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

4. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

A/F sensor 1		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F51	1	F8	49	Existed
131	2	10	53	LXISIEU

Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

A/F se	ensor 1	Ground	Continuity	
Connector	Terminal	Giodila	Continuity	
F51	1	Ground	Not existed	
131	2	Giodila	INOL EXISTED	

E	CM	Ground	Continuity	
Connector	Terminal	Glound	Continuity	
F8	49	Ground	Not existed	
10	53	Glound		

5. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5.CHECK INTERMITTENT INCIDENT

Perform GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace.

O.REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1. Refer to EM-30, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

EC

Α

D

F

Е

G

Н

K

L

Ν

=

P0137 H02S2


Description INFOID:000000008451120

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas on each bank.

Even if switching characteristics of the air fuel ratio (A/F) sensor 1 are shifted, the air-fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1 V in richer conditions to 0 V in leaner conditions.


Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

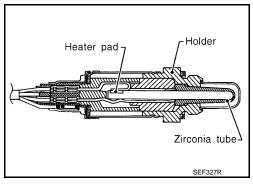

DTC Logic

DTC DETECTION LOGIC

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the air fuel ratio (A/F) sensor 1. The oxygen storage capacity of the three way catalyst (manifold) causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the maximum voltage of the sensor is sufficiently high during the various driving condition such as fuel-cut.

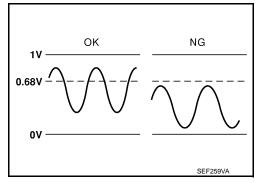

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0137	Heated oxygen sensor 2 circuit low voltage	The maximum voltage from the sensor is not reached to the specified voltage.	 Harness or connectors (The sensor circuit is open or shorted) Heated oxygen sensor 2 Fuel pressure Fuel injector Intake air leaks

DTC CONFIRMATION PROCEDURE

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2. NO >> GO TO 5.

2.PRECONDITIONING

If DTC confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

For better results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30°C (32 to 86°F).

>> GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE

P0137 H02S2

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- 6. Make sure that "COOLAN TEMP/S" indicates more than 70°C (158°F).

If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches 70°C (158°F).

- Open engine hood.
- 8. Select "HO2S2 (B1) P1147" of "HO2S2" in "DTC WORK SUPPORT" mode with CONSULT.
- 9. Follow the instruction of CONSULT.

NOTE:

It will take at most 10 minutes until "COMPLETED" is displayed.

10. Touch "SELF-DIAG RESULT".

Which is displayed on CONSULT screen?

OK >> INSPECTION END

NG >> Go to EC-666, "Diagnosis Procedure".

CAN NOT BE DIAGNOSED>>GO TO 4.

f 4.PERFORM DTC CONFIRMATION PROCEDURE AGAIN

- Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).
- 2. Perform DTC CONFIRMATION PROCEDURE again.

>> GO TO 3.

5. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to <a>EC-665, "Component Function Check".

NOTE:

Use component function check to check the overall function of the heated oxygen sensor 2 circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-666, "Diagnosis Procedure".

Component Function Check

1.PERFORM COMPONENT FUNCTION CHECK-I

♥Without CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 4. Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage
Connector	Terminal	Glound	Condition	voltage
F8	50 (HO2S2 signal)	Ground	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.PERFORM COMPONENT FUNCTION CHECK-II

Check the voltage between ECM harness connector and ground under the following condition.

EC

Α

D

G

Н

|

INFOID:0000000008451122

L

L

M

IVI

N

. .

0

ECM		Ground	Condition	Voltage
Connector	Terminal	Glound	Condition	vollage
F8	50 (HO2S2 signal)	Ground	Keeping engine speed at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 3.

3. PERFORM COMPONENT FUNCTION CHECK-III

Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage
Connector	Terminal	Glound	Condition	voltage
F8	50 (HO2S2 signal)	Ground	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.68 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-666, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008451123

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CLEAR THE MIXTURE RATIO SELF-LEARNING VALUE

- Clear the mixture ratio self-learning value. Refer to <u>EC-490, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".</u>
- Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC P0171 detected? Is it difficult to start engine?

YES >> Perform trouble diagnosis for DTC P0171. Refer to EC-689, "DTC Logic".

NO >> GO TO 3.

3.CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect heated oxygen sensor 2 (HO2S2) harness connector.
- Disconnect ECM harness connector.
- Check the continuity between HO2S2 harness connector and ECM harness connector.

НО	2S2	E	CM	Continuity
Connector	Terminal	Connector Terminal		Continuity
F49	1	F8	59	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT


1. Check the continuity between HO2S2 harness connector and ECM harness connector.

HO2S2 ECM						
Connector	Terminal	Connector	Terminal	Continuity		
F49	4	F8	50	Existed		
. Check the c	continuity betw	een HO2S2 ha	arness connecto	or and ground, or	r ECM harness connector	and
ground.						
HO2	S2					
Connector	Terminal	Ground	Continuity			
F49	4	Ground	Not existed			
ECI	M	Ground	Continuity			
Connector	Terminal					
F8	50	Ground	Not existed			
	narness for sho	•				
s the inspection YES >> GO		-				
		or short to gro	und or short to p	ower in harness	or connectors.	
CHECK HEA		_	·			
Refer to EC-667	, "Component	Inspection".				
the inspection	result normal?	<u>,</u>				
YES >> GO						
NO >> GO						
REPLACE HE						
Replace heated CAUTION:	oxygen sensoi	2. Refer to EX	-5, "Exploded V	<u>iew"</u> .		
	sensor which	has been drop	ped from a he	ight of more tha	n 0.5 m (19.7 in) onto a h	ard
		floor; use a n		-	wan Canaar Thread Clas	
					ygen Sensor Thread Clea seize Lubricant (commer	
service tool).	((**************************************	
_	PECTION END					
.CHECK INTE						
Refer to <u>GI-41, "</u>	Intermittent Inc	<u>cident"</u> .				
ss INC	PECTION END	,				
		,				
Component I	nspection				INFOID:0000000000	3451124
INSPECTION	I START					
o you have CO	NSULT?					
Do you have CO						
YES >> GO	TO 2.					
NO >> GO	TO 3					

- With CONSULT1. Turn ignition sw Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT. Start engine and warm it up to normal operating temperature.
- 2.
- Turn ignition switch OFF and wait at least 10 seconds.

2.CHECK HEATED OXYGEN SENSOR 2

- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)" as the monitor item with CONSULT.
- Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to ± 25%.

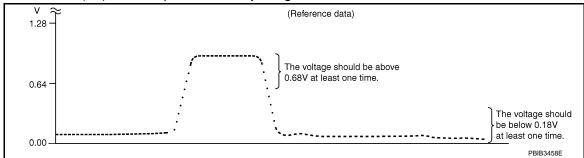

"HO2S2 (B1)" should be above 0.68 V at least once when the "FUEL INJECTION" is + 25%. "HO2S2 (B1)" should be below 0.18 V at least once when the "FUEL INJECTION" is – 25%.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

3.CHECK HEATED OXYGEN SENSOR 2-I

⋈Without CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 4. Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector and ground under the following condition.

E	ECM		Condition	Voltago	
Connector	Terminal	Ground	Condition	Voltage	
F8	50 (HO2S2 signal)	Ground	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

4. CHECK HEATED OXYGEN SENSOR 2-II

Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage
Connector	Terminal	Glound	Condition	voltage
F8	50 (HO2S2 signal)	Ground	Keeping engine speed at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 5.

5. CHECK HEATED OXYGEN SENSOR 2-III

Check the voltage between ECM harness connector and ground under the following condition.

P0137 H02S2

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

E	ECM		Condition	Voltage	
Connector	Terminal	Ground	Condition	voltage	
F8	50 (HO2S2 signal)	Ground	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

6.REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

Revision: 2012 August EC-669 2013 CUBE

Α

EC

D

_

Е

F

G

Н

Κ

L

 \mathbb{N}

Ν

0

P0138 H02S2


Description INFOID:000000008451125

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas on each bank.

Even if switching characteristics of the air fuel ratio (A/F) sensor 1 are shifted, the air-fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1 V in richer conditions to 0 V in leaner conditions.

Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

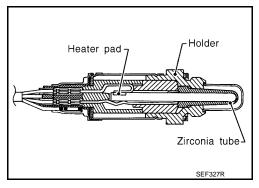

DTC Logic


INFOID:0000000008451126

DTC DETECTION LOGIC

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the air fuel ratio (A/F) sensor 1. The oxygen storage capacity of the three way catalyst (manifold) causes the longer switching time.


MALFUNCTION A

To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the voltage is unusually high during the various driving condition such as fuel-cut.

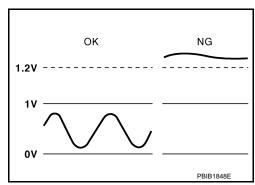

MALFUNCTION B

To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the minimum voltage of sensor is sufficiently low during the various driving condition such as fuel-cut.

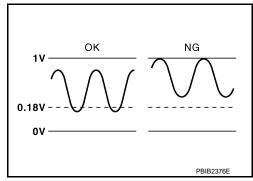

DTC No.	Trouble diagnosis name	DTC detecting condition		Possible cause
		A)	An excessively high voltage from the sensor is sent to ECM.	Harness or connectors (The sensor circuit is open or shorted) Heated oxygen sensor 2
P0138	Heated oxygen sensor 2 circuit high voltage	В)	The minimum voltage from the sensor is not reached to the specified voltage.	 Harness or connectors (The sensor circuit is open or shorted) Heated oxygen sensor 2 Fuel pressure Fuel injector

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

EC

Α

>> GO TO 2.

2.perform dtc confirmation procedure for malfunction a

D

Е

Н

- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 4. Let engine idle for 2 minutes.
- 5. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-672, "Diagnosis Procedure".

NO-1 >> With CONSULT: GO TO 3.

NO-2 >> Without CONSULT: GO TO 5.

3.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B

NOTE:

For better results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30°C (32 to 86°F).

Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.

- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- 6. Make sure that "COOLAN TEMP/S" indication is more than 70°C (158°F). If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches 70°C (158°F).
- 7. Open engine hood.
- 8. Select "HO2S2 (B1) P1146" of "HO2S2" in "DTC WORK SUPPORT" mode with CONSULT.
- Follow the instruction of CONSULT.

NOTE:

It will take at most 10 minutes until "COMPLETED" is displayed.

10. Touch "SELF-DIAG RESULT".

Which is displayed on CONSULT

OK >> INSPECTION END

NG >> Go to EC-672, "Diagnosis Procedure".

CAN NOT BE DIAGNOSED>>GO TO 4.

$oldsymbol{4}.$ PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B AGAIN

- Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).
- Perform DTC CONFIRMATION PROCEDURE again.

N

Р

${f 5.}$ PERFORM COMPONENT FUNCTION CHECK FOR MALFUNCTION B

Perform component function check. Refer to EC-672, "Diagnosis Procedure".

NOTE:

Use component function check to check the overall function of the heated oxygen sensor 2 circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

>> GO TO 3.

YES >> INSPECTION END

NO >> Go to EC-672, "Diagnosis Procedure".

Component Function Check

INFOID:0000000008451127

1.PERFORM COMPONENT FUNCTION CHECK-I

⋈Without CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage	
Connector	Terminal	Glound	Condition	voltage	
F8	50 (HO2S2 signal)	Ground	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.18 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.PERFORM COMPONENT FUNCTION CHECK-II

Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage	
Connector	Terminal	Glound	Condition	voltage	
F8	50 (HO2S2 signal)	Ground	Keeping engine speed at idle for 10 minutes	The voltage should be above 0.18 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 3.

3. PERFORM COMPONENT FUNCTION CHECK-III

Check the voltage between ECM harness connector and ground under the following condition.

E	ECM		Condition	Voltage	
Connector	Terminal	Ground	Condition	voltage	
F8	50 (HO2S2 signal)	Ground	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.18 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-672, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008451128

1. INSPECTION START

Confirm the detected malfunction (A or B). Refer to EC-670, "DTC Logic".

Which malfunction is detected?

A >> GO TO 2.

B >> GO TO 9.

2.CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace ground connection.

3. CHECK HO2S2 CONNECTOR FOR WATER

- Disconnect heated oxygen sensor 2 harness connector.
- Check connectors for water.

Water should not exist.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connectors.

f 4 .CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

- Disconnect ECM harness connector.
- 2. Check the continuity between HO2S2 harness connector and ECM harness connector.

НО	2\$2	E	Continuity		
Connector	Terminal	Connector	Terminal	Continuity	
F49	1	F8	59	Existed	

3. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5.CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between HO2S2 harness connector and ECM harness connector.

НО	2S2	E	Continuity	
Connector	Terminal	Connector Terminal		Continuity
F49	4	F8	50	Existed

Check the continuity between HO2S2 harness connector and ground, or ECM harness connector and ground.

НО	2S2	Ground	Continuity	
Connector	Terminal	Giodila	Continuity	
F49	4	Ground	Not existed	

E	CM	Ground	Continuity
Connector	Terminal	Glodila	Continuity
F8	50	Ground	Not existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

$oldsymbol{6}$.CHECK HEATED OXYGEN SENSOR 2

Refer to EC-675, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 7.

7. REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION:

 Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.

EC-673 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

F

Н

N

• Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

8.CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

9. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair or replace ground connection.

10.clear the mixture ratio self-learning value

- Clear the mixture ratio self-learning value. Refer to <u>EC-490, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".</u>
- 2. Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC P0172 detected? Is it difficult to start engine?

YES >> Perform trouble diagnosis for DTC P0172. Refer to EC-693, "DTC Logic".

NO >> GO TO 11.

11. CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect heated oxygen sensor 2 harness connector.
- Disconnect ECM harness connector.
- 4. Check the continuity between HO2S2 harness connector and ECM harness connector.

НО	2S2	E	Continuity	
Connector	Terminal	Connector Terminal		Continuity
F49	1	F8	59	Existed

5. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

12. CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between HO2S2 harness connector and ECM harness connector.


HO2S2		E	Continuity	
Connector	Terminal	Connector Terminal		Continuity
F49	4	F8	50	Existed

2. Check the continuity between HO2S2 harness connector or ECM harness connector and ground.

НО	2S2	Ground	Continuity	
Connector	Connector Terminal		Continuity	
F49	4	Ground	Not existed	

E	CM				A
Connector	Terminal	Ground	Continuity		
F8	50	Ground	Not existed		EC
3. Also check	harness for sh	ort to power.			
Is the inspectio		<u>?</u>			
) TO 13. pair open circu	it or short to arc	und or short to	power in harness or connectors.	С
		EN SENSOR 2	and or short to	sower in namedo di domicoloro.	
Refer to EC-67					<u> </u>
Is the inspectio	•				
YES >> GC	TO 15.	_			Е
) TO 14.				_
14.REPLACE	E HEATED OXY	GEN SENSOR	. 2		
Replace heated CAUTION:	d oxygen senso	or 2. Refer to E	(-5, "Exploded \	<u>'iew"</u> .	F
	sensor which	has been dro	oped from a he	ight of more than 0.5 m (19.7 in) onto a hai	rd
surface such	n as a concrete	e floor; use a n	ew one.	. ,	G
				reads using Oxygen Sensor Thread Cleand d approved Anti-seize Lubricant (commerci	
service tool)				- approved / co.zo zuzcu (co	
					Н
- —	SPECTION EN				
15.check in					
Refer to <u>GI-41,</u>	"Intermittent In	<u>cident"</u> .			
>> INS	SPECTION EN	D			j
Component					
	•			INFOID:0000000008451	1129 K
1.INSPECTIO	N START				r
Do you have C	ONSULT?				_
Do you have C					L
) TO 2.) TO 3.				
2.check he		I SENSOR 2			1
(P)With CONSI		1021100112			_
$\overline{}$		nd select "DATA	MONITOR" mo	de with CONSULT.	
Start engin	e and warm it ι	ip to normal ope	erating tempera		1
		and wait at least engine speed b		nd 4,000 rpm for at least 1 minute under no loa	d.
5. Let engine	idle for 1 minut	te.		·	
Select "FU CONSULT.		I" in "ACTIVE T	EST" mode, ar	d select "HO2S2 (B1)" as the monitor item wi	th
JOINGULI.					F

7. Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to \pm 25%.

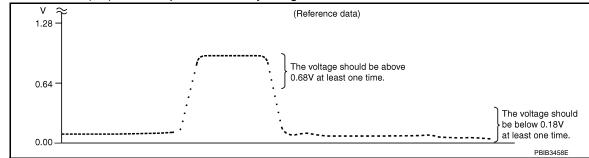

"HO2S2 (B1)" should be above 0.68 V at least once when the "FUEL INJECTION" is + 25%. "HO2S2 (B1)" should be below 0.18 V at least once when the "FUEL INJECTION" is – 25%.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

3.CHECK HEATED OXYGEN SENSOR 2-I

⋈Without CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 4. Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector and ground under the following condition.

E	ECM		Condition	Voltage	
Connector	Terminal	Ground	Condition	vollage	
F8	50 (HO2S2 signal)	Ground	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

4.CHECK HEATED OXYGEN SENSOR 2-II

Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage
Connector	Terminal	Glound	Condition	voltage
F8	50 (HO2S2 signal)	Ground	Keeping engine speed at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 5.

5.CHECK HEATED OXYGEN SENSOR 2-III

Check the voltage between ECM harness connector and ground under the following condition.

P0138 HO2S2

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

ECM		Ground	Condition	Voltage
Connector	Terminal	Glound	Condition	voltage
F8	50 (HO2S2 signal)	Ground	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

6. REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

EC-677 Revision: 2012 August 2013 CUBE

Α

EC

D

Е

F

Н

K

L

M

Ν

0

P0139 H02S2


Description INFOID:000000008451130

The heated oxygen sensor 2, after three way catalyst (manifold), monitors the oxygen level in the exhaust gas on each bank.

Even if switching characteristics of the air fuel ratio (A/F) sensor 1 are shifted, the air-fuel ratio is controlled to stoichiometric, by the signal from the heated oxygen sensor 2.

This sensor is made of ceramic zirconia. The zirconia generates voltage from approximately 1 V in richer conditions to 0 V in leaner conditions.


Under normal conditions the heated oxygen sensor 2 is not used for engine control operation.

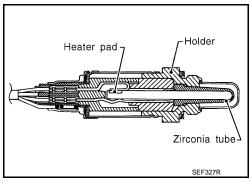

DTC Logic

DTC DETECTION LOGIC

The heated oxygen sensor 2 has a much longer switching time between rich and lean than the air fuel ratio (A/F) sensor 1. The oxygen storage capacity of the three way catalyst 1 causes the longer switching time. To judge the malfunctions of heated oxygen sensor 2, ECM monitors whether the switching response of the sensor's voltage is faster than specified during various driving conditions such as fuel cut.

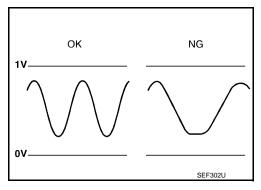

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0139	Heated oxygen sensor 2 (bank 1) circuit slow response	The switching time between rich and lean of a heated oxygen sensor 2 signal delays more than the specified time computed by ECM.	Harness or connectors (The sensor circuit is open or shorted) Heated oxygen sensor 2 Fuel system EVAP system Intake air system

DTC CONFIRMATION PROCEDURE

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2. NO >> GO TO 7.

2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

For better results, perform "DTC WORK SUPPORT" at a temperature of 0 to 30°C (32 to 86°F).

>> GO TO 3.

3.perform dtc confirmation procedure (P)With CONSULT

Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.

- Start engine and warm it up to the normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 7. Let engine idle for 1 minute.
- 8. Make sure that "COOLAN TEMP/S" indicates more than 70°C (158°F).
- 9. Drive the vehicle in a proper at 60 km/h (38MPH) and maintain the speed.

CAUTION:

Always drive vehicle at a safe speed.

10. Release the accelerator pedal fully at least 5 seconds.

CAUTION:

- Enable engine brake.
- · Always drive carefully.
- Never apply brake when releasing the accelerator pedal.
- 11. Repeat step 9 and 10 at least 8 times.
- 12. Check the following item of "DATA MONITOR".

Data monitor item	Status
HO2 S2 DIAG1 (B1)	CMPLT
HO2 S2 DIAG2 (B1)	CIVII LI

Is "CMPLT" displayed on CONSULT screen?

YES >> GO TO 6.

NO-1: "CMPLT" is not displayed on DIAG 1>>Perform DTC confirmation procedure again.

NO-2: "CMPLT" is not displayed on DIAG 2>>GO TO 4.

4.PERFORM DTC WORK SUPPORT

- Open engine hood.
- Select "HO2S2 (B1) P0139" in "DTC WORK SUPPORT" mode with CONSULT.
- Start engine and follow the instruction of CONSULT display.

NOTE:

It will take at most 10 minutes until "COMPLETED" is displayed.

Is "COMPLETED" displayed on CONSULT screen?

YES >> GO TO 6.

NO >> GO TO 5.

${f 5}$.PERFORM DTC CONFIRMATION PROCEDURE AGAIN

- Turn ignition switch OFF and leave the vehicle in a cool place (soak the vehicle).
- Perform DTC confirmation procedure again.

>> GO TO 3.

$\mathsf{6}.$ PERFORM SELF-DIAGNOSIS

(P)With CONSULT

Perform ECM self-diagnosis.

Is DTC "P0139" detected?

YES >> Proceed to EC-680, "Diagnosis Procedure".

>> INSPECTION END NO

7.PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-680, "Component Function Check".

NOTE:

Use component function check to check the overall function of the heated oxygen sensor 2 circuit. During this check, a 1st trip DTC might not be confirmed.

EC-679 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

K

N

[MR18DE (FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-680, "Diagnosis Procedure".

Component Function Check

INFOID:0000000008451132

1. PERFORM COMPONENT FUNCTION CHECK-I

⋈Without CONSULT

- Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 4. Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage
Connector	Terminal	Glound	Condition	voltage
F8	50 (HO2S2 signal)	Ground	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.8 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.PERFORM COMPONENT FUNCTION CHECK-II

Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage
Connector	Terminal	Giodila	Condition	vollage
F8	50 (HO2S2 signal)	Ground	Keeping engine speed at idle for 10 minutes	The voltage should be above 0.8 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 3.

3.perform component function check-iii

Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage
Connector	Terminal	Glound	Condition	voltage
F8	50 (HO2S2 signal)	Ground	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.8 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-680, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008451133

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.clear the mixture ratio self-learning value

- Clear the mixture ratio self-learning value. Refer to EC-490, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".
- Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC P0171 or P0172 detected? Is it difficult to start engine?

>> Perform trouble diagnosis for DTC P0171 or P0172. Refer to EC-689, "DTC Logic" or EC-693, "DTC Logic".

NO >> GO TO 3.

3.CHECK HO2S2 GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect heated oxygen sensor 2 harness connector. 2.
- 3. Disconnect ECM harness connector.
- Check the continuity between HO2S2 harness connector and ECM harness connector.

HO2S2		ECM		Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
F49	1	F8	59	Existed	

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

f 4.CHECK HO2S2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between HO2S2 harness connector and ECM harness connector.

HO2S2		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F49	4	F8	50	Existed

Check the continuity between HO2S2 harness connector and ground, or ECM harness connector and ground.

НО	2S2	Ground	Continuity	
Connector	Terminal	Ground	Continuity	
F49	4	Ground	Not existed	

E	СМ	Ground	Continuity	
Connector	Terminal	Glound	Continuity	
F8	50	Ground	Not existed	

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

${f 5.}$ CHECK HEATED OXYGEN SENSOR 2

Refer to EC-682, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

O.REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5. "Exploded View".

EC-681 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

Н

K

N

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

7. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008451134

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?


YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK HEATED OXYGEN SENSOR 2

(A) With CONSULT

- 1. Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.
- 2. Start engine and warm it up to normal operating temperature.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- 6. Select "FUEL INJECTION" in "ACTIVE TEST" mode, and select "HO2S2 (B1)" as the monitor item with CONSULT.
- Check "HO2S2 (B1)" at idle speed when adjusting "FUEL INJECTION" to ± 25%.

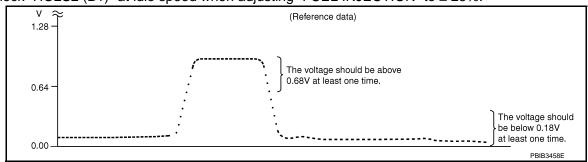

"HO2S2 (B1)" should be above 0.68 V at least once when the "FUEL INJECTION" is + 25%. "HO2S2 (B1)" should be below 0.18 V at least once when the "FUEL INJECTION" is – 25%.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

3. CHECK HEATED OXYGEN SENSOR 2-I

®Without CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- Let engine idle for 1 minute.
- 5. Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground Condition		Voltage
Connector	Terminal	Gloulia	Condition	vollage
F8	50 (HO2S2 signal)	Ground	Revving up to 4,000 rpm under no load at least 10 times	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 4.

4. CHECK HEATED OXYGEN SENSOR 2-II

Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage
Connector	Terminal	Glound	Condition	vollage
F8	50 (HO2S2 signal)	Ground	Keeping engine speed at idle for 10 minutes	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 5.

5.CHECK HEATED OXYGEN SENSOR 2-III

Check the voltage between ECM harness connector and ground under the following condition.

ECM		Ground	Condition	Voltage
Connector	Terminal	Glound	Condition	vollage
F8	50 (HO2S2 signal)	Ground	Coasting from 80 km/h (50 MPH) in D position (CVT), 4th gear position (M/T)	The voltage should be above 0.68 V at least once during this procedure. The voltage should be below 0.18 V at least once during this procedure.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 6.

6.REPLACE HEATED OXYGEN SENSOR 2

Replace heated oxygen sensor 2. Refer to EX-5, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

EC-683 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

F

Н

K

M

Ν


P014C, P014D, P015A, P015B A/F SENSOR 1

Description INFOID:000000008451135


The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element.

The sensor is capable of precise measurement $\lambda = 1$, but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide λ range.

The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich.

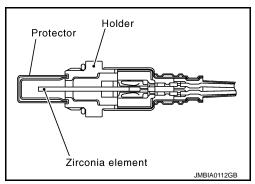

Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of about 800°C (1,472°F).

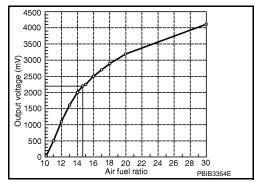

DTC Logic

DTC DETECTION LOGIC

To judge malfunctions, this diagnosis measures response time of the A/F signal computed by ECM from the A/F sensor 1 signal. The time is compensated by engine operating (speed and load), fuel feedback control constant, and the A/F sensor 1 temperature index. Judgment is based on whether the compensated time (the A/F signal cycling time index) is inordinately long or not.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible Cause
P014C	Air fuel ratio (A/F) sensor 1	The response time of a A/F sensor 1 signal de- lays more than the specified time computed by ECM.	Harness or connectors (The A/F sensor 1 circuit is open or shorted.) A/F sensor 1
P014D	(bank 1) circuit slow re- sponse		
P015A	Air fuel ratio (A/F) sensor 1		
P015B	(bank 1) circuit delayed response		

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

Do you have CONSULT?

YES >> GO TO 2. NO >> GO TO 6.

2.PERFORM DTC CONFIRMATION PROCEDURE-1

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

C DTG/CINCOTT DIAGN	0010 >	[
(P)With CONSULT			
1. Start engine and war	m it up to normal operating te	mperature.	7
	OFF and wait at least 10 seco	nds.	
3. Turn ignition switch (
	OFF and wait at least 10 seco	nds. 3,500 and 4,000 rpm for at least 1minute under no load.	С
6. Let engine idle for 1		5,500 and 4,000 ipin for at least infinite under no load.	
	speed up to about 3,600 rpm	and keep it for 10 seconds.	
8. Fully release acceler	ator pedal and then let engine	e idle for about 1 minute.)
	us of "DATA MONITOR" as fo	llows.	
NOTE:	d to "ADONT" refer to EC E	07 "Component Function Check"	
ii PRSNI Change	TO ABSNI , reier to EC-3	97, "Component Function Check".)
Data monitor item	Status		
		E	_
A/F SEN1 DIAG3 (B1)	PRSNT		_
Is "PRSNT" displayed on	CONSULT screen?		
YES >> GO TO 4. NO >> GO TO 3.		F	=
	EDMATION DESCRIPTION		
J.PERFORM DTC CON	FIRMATION PROCEDURE-2		
With CONSULT			3
Perform DTC confirmatio			
Is "PRSNT" displayed on	CONSULT screen?		
YES >> GO TO 4.	507.110		+
4	597, "Component Function C		
4.PERFORM DTC CON	FIRMATION PROCEDURE-2		
With CONSULT			
1. Wait for about 20 sec			
	us of "DATA MONITOR" as fo	llows.	J
NOTE:	d to "INCMP" refer to EC-5	97, "Component Function Check".	,
ii Oilii Ei Oilailige	To mom , refer to <u>reco</u>	7, Component unction oncor.	
Data monitor item	Status	k	<
A/F SEN1 DIAG1 (B1)			
A/F SEN1 DIAG2 (B1)	CMPLT		
, ,	OONOLUT O	L	-
Is "CMPLT" displayed on	CONSULT screen?		
YES >> GO TO 5. NO >> Refer to EC-	597, "Component Function C	pack"	п
_	•	<u>neck"</u> . N	/1
5.PERFORM SELF-DIA	GNOSIS		
With CONSULT Check the "SELF-DIAG F	PESIII T"	N	1
Is any DTC detected?	LOOLI .		
	C-598, "Diagnosis Procedure	п	
NO >> INSPECTION		- ·)
_	ATIO SELF-LEARNING VALU	E	
			5
With GSTStart engine and war	m it up to normal operating te	•	
2. Select Service \$01 w			

3. Calculate the total value of "Short term fuel trim" and "Long term fuel trim" indications.

Is the total percentage within ±15%?

YES >> GO TO 8. NO >> GO TO 7.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

7.DETECT MALFUNCTIONING PART

Check the following.

- · Intake air leaks
- · Exhaust gas leaks
- · Incorrect fuel pressure
- Lack of fuel
- Fuel injector
- Incorrect PCV hose connection
- PCV valve
- Mass air flow sensor

>> Repair or replace malfunctioning part.

8. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- 6. Increase the engine speed up to about 3,600 rpm and keep it for 10 seconds.
- 7. Fully release accelerator pedal and then let engine idle for about 1 minute.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-598, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451137

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.


2.RETIGHTEN A/F SENSOR 1

Loosen and retighten the A/F sensor 1. Refer to EM-30, "Exploded View".

>> GO TO 3.

3.CHECK EXHAUST GAS LEAK

- 1. Start engine and run it at idle.
- Listen for an exhaust gas leak before three way catalyst (manifold).

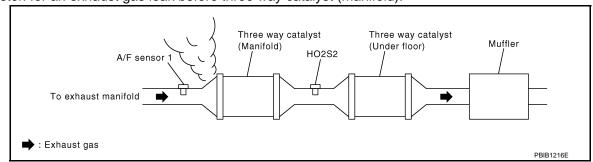

Is exhaust gas leak detected?

YES >> Repair or replace.

NO >> GO TO 4.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

4. CHECK FOR INTAKE AIR LEAK

Listen for an intake air leak after the mass air flow sensor.

Is intake air leak detected?

YES >> Repair or replace.

NO >> GO TO 5.

5.CLEAR THE MIXTURE RATIO SELF-LEARNING VALUE

- Clear the mixture ratio self-learning value. Refer to EC-490, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".
- 2. Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC P0171 or P172 detected? Is it difficult to start engine?

>> Perform trouble diagnosis for DTC P0171 or P0172. Refer to EC-689, "DTC Logic" or EC-693, "DTC Logic".

NO >> GO TO 6.

6.CHECK AIR FUEL RATIO (A/F) SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Disconnect A/F sensor 1 harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between A/F sensor 1 harness connector and ground.

A/F sensor 1		Ground	Voltage
Connector	Terminal	Glound	voltage
F51	4	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 7.

.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- IPDM E/R harness connector E15
- 15 A fuse (No. 61)
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

8.CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

A/F se	ensor 1	ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F51	1	F8	49	Existed
	2	10	53	LXISTEG

4. Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

A/F sensor 1		Ground	Continuity	
Connector	Terminal	Glound	Continuity	
F51	1	Ground	Not existed	
	2	Gloulia	Not existed	

EC-687 Revision: 2012 August 2013 CUBE

EC

D

N

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

ECM		Ground	Continuity	
Connector	Terminal	Glound	Continuity	
F8	49	Ground	Not existed	
10	53	Giodila	Not existed	

5. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

9. CHECK AIR FUEL RATIO (A/F) SENSOR 1 HEATER

Refer to EC-616, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 10. NO >> GO TO 13.

10. CHECK MASS AIR FLOW SENSOR

Refer to EC-625, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace mass air flow sensor. Refer to EM-24, "Exploded View".

11. CHECK PCV VALVE

Refer to EC-915, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair or replace PCV valve. Refer to EM-42, "Exploded View".

12. CHECK INTERMITTENT INCIDENT

Perform GI-41. "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 13.

NO >> Repair or replace.

13. REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1. Refer to EM-30, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J43897-12)] and approved Anti-seize Lubricant (commercial service tool).

>> INSPECTION END

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P0171 FUEL INJECTION SYSTEM FUNCTION

DTC Logic INFOID:0000000008451138

DTC DETECTION LOGIC

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the A/F sensors 1. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios.

In case the amount of the compensation value is extremely large (The actual mixture ratio is too lean.), the ECM judges the condition as the fuel injection system malfunction and lights up the MIL (2 trip detection logic).

Sensor	Input signal to ECM	ECM function	Actuator
A/F sensor 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection control	Fuel injector

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0171	Fuel injection system too lean	 Fuel injection system does not operate properly. The amount of mixture ratio compensation is too large. (The mixture ratio is too lean.) 	Intake air leaks A/F sensor 1 Fuel injector Exhaust gas leaks Incorrect fuel pressure Lack of fuel Mass air flow sensor Incorrect PCV hose connection

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2 .PERFORM DTC CONFIRMATION PROCEDURE-I

- Clear the mixture ratio self-learning value. Refer to EC-490, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".
- Start engine.

Is it difficult to start engine?

YES >> GO TO 3.

NO >> GO TO 4.

3.restart engine

If it is difficult to start engine, the fuel injection system has a malfunction, too.

Crank engine while depressing accelerator pedal.

NOTE:

When depressing accelerator pedal three-fourths (3/4) or more, the control system does not start the engine. Do not depress accelerator pedal too much.

Does engine start?

YES >> Go to EC-690, "Diagnosis Procedure".

NO >> Check exhaust and intake air leak visually.

f 4.PERFORM DTC CONFIRMATION PROCEDURE-II

- Start engine and let it idle for at least 5 minutes.
- Check 1st trip DTC. 2.

Is 1st trip DTC detected?

YES >> Go to EC-690, "Diagnosis Procedure".

NO >> GO TO 5.

EC-689 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

L

M

N

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

5. PERFORM DTC CONFIRMATION PROCEDURE-III

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Start engine.
- 3. Maintain the following conditions for at least 10 consecutive minutes.

Hold the accelerator pedal as steady as possible.

VHCL SPEED SE 50 - 1

50 - 120 km/h (31 - 75 MPH)

CAUTION:

Always drive vehicle at a safe speed.

4. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-690, "Diagnosis Procedure".


NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451139

1. CHECK EXHAUST GAS LEAK

- Start engine and run it at idle.
- Listen for an exhaust gas leak before three way catalyst (manifold).

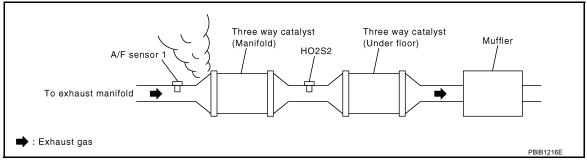

Is exhaust gas leak detected?

YES >> Repair or replace.

NO >> GO TO 2.

2 . CHECK FOR INTAKE AIR LEAK

- 1. Listen for an intake air leak after the mass air flow sensor.
- 2. Check PCV hose connection.

Intake air leak detected?

YES >> Repair or replace.

NO >> GO TO 3.

${f 3.}$ CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect corresponding A/F sensor 1 harness connector.
- 3. Disconnect ECM harness connector.
- 4. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

A/F se	ensor 1	ECM Connector Terminal		Continuity
Connector	Terminal			Continuity
F51	1	F8	49	Existed
	2	10	53	LXISIEU

5. Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

7 (1 30	nsor 1			
Connector	Terminal	Ground	Continuity	_
E51	1	Cround	Not evipted	
F51	2	Ground	Not existed	
EC	М	Ground	Continuity	
Connector	Terminal	Giodila	Continuity	
F8	49	Ground	Not existed	
10	53	Ground	Not existed	
6. Also check	harness for sh	ort to power.		
Is the inspection		<u>?</u>		
YES >> GO				
•	•	_	ound or short to	ver in harness or connectors.
4.CHECK FUE	L PRESSURE			
	•	r to <u>EC-961, "Ir</u>	spection".	
Is the inspection		<u>?</u>		
YES >> GO NO >> GO				
_		NO DADT		
5. DETECT MA				
Check fuel hose				
Is the inspection		_		
	olace "fuel filter oair or replace	and fuel pump	assembly". Re	o <u>FL-5, "Exploded View"</u> .
6.CHECK MAS	•	SENSOD		
		SENSOR		
With CONSU				
	moved parts. SS AIR FLOW	" in "DATA MON	JITOR" mode w	CONSULT.
		EC-965, "Mass		301130211
With GST			All Flow Seriso	
1 Install all re			All Flow Seriso	
	moved parts.	or signal in Sen		
2. Check mas	s air flow senso	or signal in Serv EC-965, "Mass	vice \$01 with G	
2. Check mas	s air flow senso ation, refer to <u>l</u>	EC-965, "Mass	vice \$01 with G Air Flow Senso	
 Check mas For specific 	s air flow senso ation, refer to <u>l</u> ment value with	EC-965, "Mass	vice \$01 with G Air Flow Senso	
2. Check mas3. For specificIs the measurerYES >> GONO >> Che	s air flow senso cation, refer to <u>l</u> ment value with TO 7. eck connectors	EC-965, "Mass nin the specificate for rusted term	vice \$01 with G Air Flow Senso tion? ninals or loose o	nections in the mass air flow sensor circuit or
2. Check mas 3. For specific Is the measurer YES >> GO NO >> Che gro	s air flow senso cation, refer to <u>I</u> ment value with TO 7. eck connectors unds. Refer to	EC-965, "Mass nin the specificate for rusted term EC-623, "DTC	vice \$01 with G Air Flow Senso tion? ninals or loose o	nections in the mass air flow sensor circuit or
2. Check mas3. For specificIs the measurerYES >> GONO >> Che	s air flow senso cation, refer to <u>I</u> ment value with TO 7. eck connectors unds. Refer to	EC-965, "Mass nin the specificate for rusted term EC-623, "DTC	vice \$01 with G Air Flow Senso tion? ninals or loose o	nections in the mass air flow sensor circuit or
2. Check mas 3. For specific ls the measurer YES >> GO NO >> Che gro 7. CHECK FUN	s air flow senso ation, refer to <u>I</u> ment value with TO 7. eck connectors unds. Refer to ICTION OF FU	EC-965, "Mass nin the specificate for rusted term EC-623, "DTC	vice \$01 with G Air Flow Senso tion? ninals or loose o	nections in the mass air flow sensor circuit or
2. Check mas 3. For specific Is the measurer YES >> GO NO >> Che gro 7. CHECK FUN With CONSU 1. Start engine	s air flow senso ation, refer to <u>I</u> ment value with TO 7. eck connectors unds. Refer to ICTION OF FU	EC-965, "Mass nin the specifica for rusted term EC-623, "DTC JEL INJECTOR	vice \$01 with G Air Flow Senso tion? ninals or loose of Logic".	
2. Check mas 3. For specific Is the measurer YES >> GO NO >> Che gro 7. CHECK FUN 1. Start engine 2. Perform "PO	s air flow senso ration, refer to <u>I</u> ment value with TO 7. eck connectors unds. Refer to ICTION OF FU ILT e. OWER BALAN	EC-965, "Mass nin the specifica for rusted term EC-623, "DTC JEL INJECTOR	vice \$01 with G Air Flow Senso tion? ninals or loose of Logic".	CONSULT.
2. Check mas 3. For specific Is the measurer YES >> GO NO >> Che gro 7. CHECK FUN 1. Start engine 2. Perform "PO	s air flow senso ration, refer to <u>I</u> ment value with TO 7. eck connectors unds. Refer to ICTION OF FU ILT e. OWER BALAN	EC-965, "Mass nin the specifica for rusted term EC-623, "DTC JEL INJECTOR	vice \$01 with G Air Flow Senso tion? ninals or loose of Logic".	CONSULT.
2. Check mas 3. For specific ls the measurer YES >> GO NO >> Che gro 7. CHECK FUN With CONSU 1. Start engine 2. Perform "PO	s air flow senso eation, refer to <u>I</u> ment value with TO 7. eck connectors unds. Refer to ICTION OF FU ILT e. OWER BALAN that each circuit	EC-965, "Mass nin the specifica for rusted term EC-623, "DTC JEL INJECTOR	vice \$01 with G Air Flow Senso tion? ninals or loose of Logic".	CONSULT.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Listen to each fuel injector operating sound.


Clicking noise should be heard.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Perform trouble diagnosis for FUEL INJECTOR, refer to

EC-897, "Component Function Check".

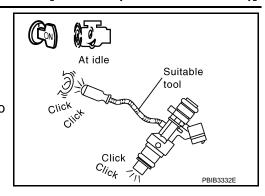

8. CHECK FUEL INJECTOR

- Turn ignition switch OFF.
- Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
- Disconnect all fuel injector harness connectors.
- Remove fuel tube assembly. Refer to EM-37, "Removal and Installation". Keep fuel hose and all fuel injectors connected to fuel tube.
- 5. Disconnect all ignition coil harness connectors.
- 6. Prepare pans or saucers under each fuel injector.
- 7. Crank engine for about 3 seconds.


Fuel should be sprayed evenly for each fuel injector.

Is the inspection result normal?

YES >> GO TO 9.

NO

>> Replace fuel injectors from which fuel does not spray out. Always replace O-ring with new ones. Refer to EM-37, "Exploded View".

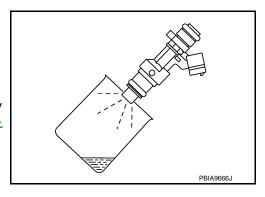

9. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P0172 FUEL INJECTION SYSTEM FUNCTION

DTC Logic

DTC DETECTION LOGIC

With the Air/Fuel Mixture Ratio Self-Learning Control, the actual mixture ratio can be brought closely to the theoretical mixture ratio based on the mixture ratio feedback signal from the A/F sensors 1. The ECM calculates the necessary compensation to correct the offset between the actual and the theoretical ratios.

In case the amount of the compensation value is extremely large (The actual mixture ratio is too rich.), the ECM judges the condition as the fuel injection system malfunction and lights up the MIL (2 trip detection logic).

Sensor	Sensor Input signal to ECM		Actuator
A/F sensor 1	Density of oxygen in exhaust gas (Mixture ratio feedback signal)	Fuel injection control	Fuel injector

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0172	Fuel injection system too rich	Fuel injection system does not operate properly. The amount of mixture ratio compensation is too large. (The mixture ratio is too rich.)	 A/F sensor 1 Fuel injector Exhaust gas leaks Incorrect fuel pressure Mass air flow sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-I

- Clear the mixture ratio self-learning value. Refer to <u>EC-490, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".</u>
- 2. Start engine.

Is it difficult to start engine?

YES >> GO TO 3.

NO >> GO TO 4.

RESTART ENGINE

If it is difficult to start engine, the fuel injection system has a malfunction, too.

Crank engine while depressing accelerator pedal.

NO IE:

When depressing accelerator pedal three-fourths (3/4) or more, the control system does not start the engine. Do not depress accelerator pedal too much.

Does engine start?

YES >> Go to EC-694, "Diagnosis Procedure".

NO >> Check exhaust and intake air leak visually.

4. PERFORM DTC CONFIRMATION PROCEDURE-II

- 1. Start engine and let it idle for at least 5 minutes.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-694, "Diagnosis Procedure".

NO >> GO TO 5.

5. PERFORM DTC CONFIRMATION PROCEDURE-III

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Start engine.

Revision: 2012 August EC-693 2013 CUBE

EC

Α

J

D

Е

F

C

Н

ı

J

K

M

Ν

0

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

3. Maintain the following conditions for at least 10 consecutive minutes. Hold the accelerator pedal as steady as possible.

VHCL SPEED SE 50 - 120 km/h (31 - 75 MPH)

CAUTION:

Always drive vehicle at a safe speed.

4. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-694, "Diagnosis Procedure".


NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451141

1. CHECK EXHAUST GAS LEAK

- 1. Start engine and run it at idle.
- 2. Listen for an exhaust gas leak before three way catalyst (manifold).

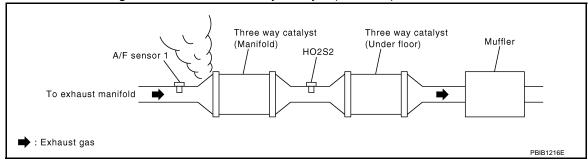

Is exhaust gas leak detected?

YES >> Repair or replace.

NO >> GO TO 2.

2. CHECK FOR INTAKE AIR LEAK

Listen for an intake air leak after the mass air flow sensor.

Is intake air leak detected?

YES >> Repair or replace.

NO >> GO TO 3.

3.check a/f sensor 1 input signal circuit

- 1. Turn ignition switch OFF.
- 2. Disconnect corresponding A/F sensor 1 harness connector.
- 3. Disconnect ECM harness connector.
- 4. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

A/F se	ensor 1	ECM		Continuity
Connector	Terminal	Connector	Connector Terminal	
F51	1	F8	49	Existed
131	2	10	53	LAISIEU

Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

A/F sensor 1		Ground	Continuity	
Connector	Terminal	Glound	Continuity	
F51	1	Ground	Not existed	
	2	Glound	Not existed	

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

<u> </u>	I DIAGNOSIS	, -		
				_
EC	CM	Ground	Continuity	
Connector	Terminal		,	
F8	49	Ground	Not existed	
	53			
	harness for sh	-		
s the inspection YES >> GO		<u>?</u>		
	_	t or short to arc	ound or short to po	ower in harness or connectors.
4.CHECK FUE		_	γαιτά στ στιστά το μ	
		r to <u>EC-961,</u> "Ir	espection"	
ls the inspection	•	<u>'</u>	ispection.	
YES >> GO		<u>.</u>		
NO >> GO				
5. DETECT MA	ALFUNCTIONI	NG PART		
Check fuel hose	es and fuel tube	es for clogging.		
ls the inspection	n result normal	<u>?</u>		
		and fuel pump	assembly". Refe	to FL-5, "Exploded View".
<u> </u>	pair or replace	OFNOOD		
O.CHECK MAS	SS AIR FLOW	SENSOR		
With CONSU				
	moved parts. SS AIR FLOW	in "DATA MON	NTOR" mode with	CONSULT.
For specific			Air Flow Sensor".	
With GST	moved parts			
	moved parts. s air flow senso	or signal in "Sei	vice \$01" with G	ST.
			Air Flow Sensor"	
		in the specifica	tion?	
YES >> GO NO >> Cho	_	for rusted torm	single or loose so	anactions in the mass air flow concer circuit or
		EC-623, "DTC		nnections in the mass air flow sensor circuit or
_ ~		IEL INJECTOR		
With CONSU				

- Start engine.
- Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.
- Make sure that each circuit produces a momentary engine speed drop.

Without CONSULT


- 1. Let engine idle.
- 2. Listen to each fuel injector operating sound.

Clicking noise should be heard.

Is the inspection result normal?

YES >> GO TO 8.

>> Perform trouble diagnosis for FUEL INJECTOR, refer to <u>EC-897</u>, "Component Function Check". NO

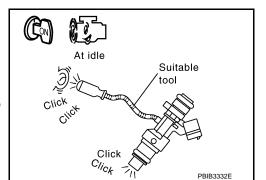

EC-695 Revision: 2012 August 2013 CUBE

Ν

0

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

8.CHECK FUEL INJECTOR

- Remove fuel injector assembly. Refer to <u>EM-37</u>. "<u>Removal and Installation</u>". Keep fuel hose and all fuel injectors connected to fuel tube.
- 2. Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
- 3. Disconnect all fuel injector harness connectors.
- 4. Disconnect all ignition coil harness connectors.
- 5. Prepare pans or saucers under each fuel injectors.
- Crank engine for about 3 seconds.
 Make sure fuel does not drip from fuel injector.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace the fuel injectors from which fuel is dripping. Always replace O-ring with new one. Refer to EM-37, "Exploded View".

9. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END


P0181 FTT SENSOR

Description INFOID:0000000008451142

The fuel tank temperature sensor is used to detect the fuel temperature inside the fuel tank. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the fuel temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

<Reference data>

Fluid temperature [°C (°F)]	Voltage* [V]	Resistance $[k\Omega]$
20 (68)	3.5	2.3 - 2.7
50 (122)	2.2	0.79 - 0.90

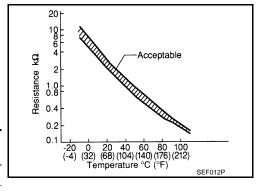

^{*:} These data are reference values and are measured between ECM terminal 43 (Fuel tank temperature sensor) and ground.

DTC Logic INFOID:0000000008451143

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis (Trouble diagnosis content)	DTC detecting condition		Possible cause
		A)	Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signals from ECT sensor and intake air temperature sensor.	Harness or connectors (The FTT sensor circuit is open or shorted) FTT sensor Combination meter
P0181	FTT SENSOR [Fuel tank temperature (FTT) sensor circuit range/performance]	B)	The comparison result of signals transmitted to ECM from each temperature sensor (IAT sensor, ECT sensor, EOT sensor, and FTT sensor, CVT fluid temperature sensor) shows that the voltage signal of the FTT sensor is higher/lower than that of other temperature sensors when the engine is started with its cold state.	Harness or connectors (High or low resistance in the FTT sensor circuit) FTT sensor

DTC CONFIRMATION PROCEDURE

1. INSPECTION START

Is it necessary to erase permanent DTC?

YES >> GO TO 7.

NO >> GO TO 2.

2.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON. 2.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 3.

${f 3.}$ PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION A-I

- 1. Turn ignition switch ON and wait at least 10 seconds.
- Check 1st trip DTC. 2.

EC-697 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

K

Ν

P0181 FTT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Is 1st trip DTC detected?

YES >> Proceed to EC-699, "Diagnosis Procedure".

NO >> GO TO 4.

4.CHECK ENGINE COOLANT TEMPERATURE

(P)With CONSULT

- 1. Select "COOLAN TEMP/S" in "DATA MONITOR" with CONSULT.
- 2. Check "COOLAN TEMP/S" value.

@With GST

Follow the procedure "With CONSULT" above.

"COOLAN TEMP/S" less than 60°C (140°F)?

YES >> INSPECTION END

NO >> GO TO 5.

5.perform dtc confirmation procedure for malfunction a-ii

(II) With CONSULT

- 1. Cool engine down until "COOLAN TEMP/S" is less than 60°C (140°F).
- 2. Wait at least 10 seconds.
- 3. Check 1st trip DTC.

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Proceed to <u>EC-699</u>, "<u>Diagnosis Procedure</u>".

NO >> GO TO 6.

6.PERFORM COMPONENT FUNCTION CHECK (FOR MALFUNCTION B)

Perform component function check. Refer to EC-699, "Component Function Check".

NOTE:

Use the component function check to check the overall function of the FTT sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to <u>EC-699</u>, "<u>Diagnosis Procedure</u>".

7.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

- Before performing the following procedure, do not add fuel.
- Before performing the following procedure, check that fuel level is between 1/4 and 4/4.
- Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 8.

8. PERFORM DTC CONFIRMATION PROCEDURE B

- 1. Start engine and let it idle for 60 minutes.
- 2. Move the vehicle to a cool place.

NOTE:

Cool the vehicle in an environment of ambient air temperature between -10°C (14°F) and 35°C (95°F).

3. Turn ignition switch OFF and soak the vehicle for 12 hours.

CAUTION:

Never turn ignition switch ON during soaking.

NOTE:

The vehicle must be cooled with the food open.

4. Start engine and let it idle for 5 minutes or more.

CAUTION:

Never turn ignition switch OFF during idling.

5. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-699, "Diagnosis Procedure".

NO >> INSPECTION END

Component Function Check

INFOID:0000000008451144

Α

EC

D

Е

Н


N

Р

1. CHECK FUEL TANK TEMPERATURE (FTT) SENSOR

- Turn ignition switch OFF.
- 2. Disconnect fuel level sensor unit and fuel pump harness connector.
- Remove fuel level sensor unit. Refer to FL-5, "Removal and Installation".
- 4. Check resistance between fuel level sensor unit and fuel pump terminals by heating with hot water as shown in the figure.

Terminals	Condition	Resistance ($k\Omega$)	
4 and 5	Temperature [°C (°F)]	20 (68)	2.3 – 2.7
4 and 5	remperature [°C (°F)]	50 (122)	0.79 – 0.90

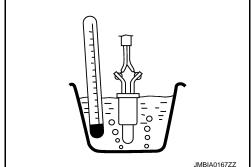

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to EC-699, "Diagnosis Procedure".

2. CHECK INTERMITTENT INCIDENT

Check intermittent incident. Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-699, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008451145

1. INSPECTION START

Confirm the detected malfunction (A or B). Refer to EC-697, "DTC Logic".

Which malfunction is detected?

A >> GO TO 2.

B >> GO TO 7.

2.CHECK DTC WITH COMBINATION METER

Check DTC with combination meter. Refer to MWI-30, "CONSULT Function (METER/M&A)".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Proceed to EC-699, "Component Function Check".

${f 3.}$ CHECK FUEL TANK TEMPERATURE (FTT) SENSOR POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect fuel level sensor unit and fuel pump harness connector.
- Turn ignition switch ON.
- Check the voltage between fuel level sensor unit and fuel pump harness connector and ground.

Fuel level sensor	unit and fuel pump	Ground	Voltage (V)
Connector	Terminal	Giodila	
B40	4	Ground	Approx. 5

Is the inspection result normal?

YES >> GO TO 5.

< DTC/CIRCUIT DIAGNOSIS >

NO >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- · Harness for open or short between ECM and fuel level sensor unit and fuel pump
- Loose or poor connection for each connector and harness
 - >> Repair open circuit, short to ground or short to power in harness or connector.

${f 5.}$ CHECK FTT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect combination meter harness connector.
- Check the continuity between fuel level sensor unit and fuel pump harness connector and combination meter harness connector.

	sor unit and fuel mp	Combination meter		Continuity
Connector	Terminal	Connector	Terminal	
B40	5	M34	24	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 6.

6. DETECT MALFUNCTIONING PART

Check the following.

- Harness for open or short between fuel level sensor unit and fuel pump and combination meter
- Loose or poor connection for each connector and harness
 - >> Repair open circuit, short to ground or short to power in harness or connector.

7. CHECK FTT SENSOR

Check FTT sensor. Refer to EC-700, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace fuel level sensor unit and fuel pump. Refer to FL-5, "Exploded View".

8.CHECK INTERMITTENT INCIDENT

Check intermittent incident. Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008451146

1. CHECK FUEL TANK TEMPERATURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect "fuel level sensor unit and fuel pump" harness connector.
- Remove fuel level sensor unit.
- 4. Check resistance between "fuel level sensor unit and fuel pump" terminals by heating with hot water as shown in the figure.

Terminals	Condition	Resistance	
4 and 5	Temperature [°C (°F)]	20 (68)	2.3 - 2.7 kΩ
4 and 5	remperature [C (1)]	50 (122)	0.79 - 0.90 kΩ

Is the inspection result normal?

P0181 FTT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

YES >> INSPECTION END

>> Replace "fuel level sensor unit and fuel pump". Refer to FL-5, "Exploded View". NO

EC

Α

С

D

Е

F

G

Н

J

Κ

L

M

Ν

0

Ρ


P0182, P0183 FTT SENSOR

Description INFOID:0000000008451147

The fuel tank temperature sensor is used to detect the fuel temperature inside the fuel tank. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the fuel temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

<Reference data>

Fluid temperature [°C (°F)]	Voltage* [V]	Resistance $[k\Omega]$
20 (68)	3.5	2.3 - 2.7
50 (122)	2.2	0.79 - 0.90

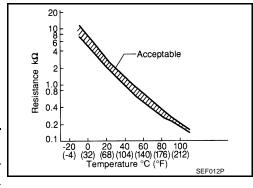

^{*:} These data are reference values and are measured between ECM terminal 43 (Fuel tank temperature sensor) and ground.

DTC Logic (INFOID:000000008451148

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0182	Fuel tank temperature sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (The sensor circuit is open or shorted.)
P0183	Fuel tank temperature sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	Fuel tank temperature sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-702, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451149

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK FUEL TANK TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect "fuel level sensor unit and fuel pump" harness connector.
- Turn ignition switch ON.
- Check the voltage between "fuel level sensor unit and fuel pump" harness connector and ground.

P0182, P0183 FTT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Connector		Ground	Voltage	
	Terminal			
B40	4	Ground	Approx. 5 V	
the inspection YES >> GO NO >> GO				
DETECT MAI	LFUNCTIONIN	G PART		
Harness conne Harness conne Harness conne Harness conne Harness for op	ectors B4, M79 ectors M77, E10 ectors E8, F1		d "fuel level sen	sor unit and fuel pump"
•		_	-	power in harness or connector.
		ERATURE SEN	ISOR GROUND	CIRCUIT FOR OPEN AND SHORT
	combination me			uel pump" harness connector and ECM harness
Fuel level sensor u	nit and fuel pump	Combinat	tion meter	
Connector	Terminal	Connector	Terminal	Continuity
B40	5	M34	24	Existed
the increation				
YES >> GO NO >> GO	TO 6. TO 5.			
YES >> GO	TO 6. TO 5.			
YES >> GO NO >> GO D.DETECT MAI Check the follow Harness conne	TO 6. TO 5. LFUNCTIONIN ring. ectors M79, B4	G PART	el sensor unit ar	nd fuel pump" and combination meter
YES >> GO NO >> GO D.DETECT MAI Check the follow Harness conne Harness for op	TO 6. TO 5. LFUNCTIONIN ring. ectors M79, B4 ben or short bet	G PART ween "fuel leve		
YES >> GO NO >> GO D.DETECT MAI Check the follow Harness conne Harness for op	TO 6. TO 5. LFUNCTIONIN ring. ectors M79, B4 ben or short bet air open circuit	G PART ween "fuel leve	und or short to	nd fuel pump" and combination meter bower in harness or connector.
YES >> GO NO >> GO DETECT MAI Check the follow Harness conne Harness for op >> Rep CHECK FUEI	TO 6. TO 5. LFUNCTIONIN ring. ectors M79, B4 ben or short bet air open circuit L TANK TEMPE	G PART ween "fuel leve or short to groe ERATURE SEN	und or short to	
YES >> GO NO >> GO D.DETECT MAI Check the follow Harness connection Harness for op	TO 6. TO 5. LFUNCTIONIN ring. ectors M79, B4 ben or short bet air open circuit L TANK TEMPE	G PART ween "fuel level or short to ground to	und or short to	
YES >> GO NO >> GO DETECT MAI Check the follow Harness conne Harness for op >> Rep CHECK FUEI Refer to EC-703 s the inspection YES >> GO	TO 6. TO 5. LFUNCTIONIN ring. ectors M79, B4 een or short bet air open circuit L TANK TEMPE . "Component I result normal? TO 7.	G PART ween "fuel leve or short to ground to	und or short to p	power in harness or connector.
YES >> GO NO >> GO DETECT MAI Check the follow Harness connection Harness for op >> Rep CHECK FUEI Refer to EC-703 Sthe inspection YES >> GO NO >> Rep	TO 6. TO 5. LFUNCTIONIN ring. ectors M79, B4 ben or short bet air open circuit L TANK TEMPE , "Component I result normal? TO 7. lace "fuel level	G PART ween "fuel level or short to ground to	und or short to p	
YES >> GO NO >> GO DETECT MAI Check the follow Harness conne Harness for op >> Rep CHECK FUEI Refer to EC-703 s the inspection YES >> GO	TO 6. TO 5. LFUNCTIONIN ring. ectors M79, B4 ben or short bet air open circuit L TANK TEMPE , "Component I result normal? TO 7. lace "fuel level	G PART ween "fuel level or short to ground to	und or short to p	power in harness or connector.
YES >> GO NO >> GO DETECT MAI Check the follow Harness connection Harness for op >> Rep CHECK FUEI Refer to EC-703 Sthe inspection YES >> GO NO >> Rep	TO 6. TO 5. LFUNCTIONIN ring. ectors M79, B4 ben or short bet air open circuit L TANK TEMPE , "Component I result normal? TO 7. lace "fuel level ERMITTENT INC	G PART ween "fuel level or short to ground ERATURE SEN INSPECTION". sensor unit and CIDENT	und or short to p	power in harness or connector.
YES >> GO NO >> GO DETECT MAI Check the follow Harness connection Harness for op >> Rep CHECK FUEI Refer to EC-703 Sthe inspection YES >> GO NO >> Rep CHECK INTE	TO 6. TO 5. LFUNCTIONIN ring. ectors M79, B4 ben or short bet air open circuit L TANK TEMPE , "Component I result normal? TO 7. lace "fuel level ERMITTENT INC	G PART ween "fuel level or short to ground to	und or short to p	power in harness or connector.
YES >> GO NO >> GO DETECT MAI Check the follow Harness connection Harness for op >> Rep CHECK FUEI Refer to EC-703 Sthe inspection YES >> GO NO >> Rep CHECK INTE	TO 6. TO 5. LFUNCTIONIN ring. ectors M79, B4 een or short bet air open circuit L TANK TEMPE . "Component I result normal? TO 7. lace "fuel level ERMITTENT INC	G PART ween "fuel level or short to ground to	und or short to p	power in harness or connector.

2. Disconnect "fuel level sensor unit and fuel pump" harness connector.

P0182, P0183 FTT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

4. Check resistance between "fuel level sensor unit and fuel pump" terminals by heating with hot water as shown in the figure.

Terminals	Condition	Resistance	
4 and 5	Temperature [°C (°F)]	20 (68)	2.3 - 2.7 kΩ
4 and 3	remperature [O (1)]	50 (122)	0.79 - 0.90 kΩ

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace "fuel level sensor unit and fuel pump". Refer to FL-5, "Exploded View".

Α

EC

D

Е


K

INFOID:0000000008451151

P0196 EOT SENSOR


Component Description

The engine oil temperature sensor is used to detect the engine oil temperature. The sensor modifies a voltage signal from the ECM. The modified signal returns to the ECM as the engine oil temperature input. The sensor uses a thermistor which is sensitive to the change in temperature. The electrical resistance of the thermistor decreases as temperature increases.

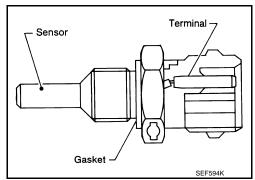

<Reference data>

Engine coolant tempera- ture [°C (°F)]	Voltage* (V)	Resistance (kΩ)
-10 (14)	4.4	7.0 - 11.4
20 (68)	3.5	2.37 - 2.63
50 (122)	2.2	0.68 - 1.00
90 (194)	0.9	0.236 - 0.260
110 (230)	0.6	0.143 - 0.153
150 (302)	0.3	0.050 - 0.065

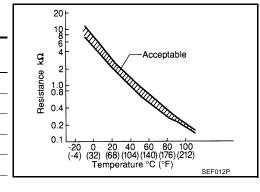

^{*:} This data is reference values and is measured between ECM terminal 27 (Engine oil temperature sensor) and ground.

CAUTION:

Do not use ECM ground terminals when measuring input/output voltage. Doing so may result in damage to the ECM's transistor. Use a ground other than ECM terminals, such as the ground.

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0196 is displayed with DTC P0197 or P0198, first perform the trouble diagnosis for DTC P0197 or P0198. Refer to <u>EC-709</u>, "DTC Logic".

DTC No.	Trouble diagnosis (Trouble diagnosis content)		DTC detecting condition	Possible cause	N
		A)	Rationally incorrect voltage from the sensor is sent to ECM, compared with the voltage signals from EOT sensor and intake air temperature sensor.	Harness or connectors (The EOT sensor circuit is open or shorted) EOT sensor	N
P0196	EOT SENSOR [Engine oil temperature (EOT) sensor circuit range/perfor- mance]	B)	The comparison result of signals transmitted to ECM from each temperature sensor (IAT sensor, ECT sensor, FTT sensor, and EOT sensor, CVT fluid temperature sensor) shows that the signal voltage of the EOT sensor is higher/lower than that of other temperature sensors when the engine is started with its cold state.	(High or low resistance in the EOT	C

DTC CONFIRMATION PROCEDURE

1. INSPECTION START

< DTC/CIRCUIT DIAGNOSIS >

Is it necessary to erase permanent DTC?

YES >> GO TO 6.

NO >> GO TO 2.

2.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 3.

${f 3.}$ PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION A-I

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- 5. Start engine and let it idle for 5 minutes and 10 seconds.
- 6. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-708, "Diagnosis Procedure".

NO >> GO TO 4.

f 4. PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION A-II

(P)With CONSULT

- 1. Select "DATA MONITOR" mode with CONSULT.
- 2. Check that "COOLAN TEMP/S" indicates above 80°C (176°F).

If it is above 80°C (176°F), go to the following steps.

If it is below 80°C (176°F), warm engine up until "COOLAN TEMP/S" indicates more than 80°C (176°F). Then perform the following steps.

- 3. Turn ignition switch OFF and soak the vehicle in a cool place.
- 4. Turn ignition switch ON.

NOTE:

Do not turn ignition switch OFF until step 8.

- Select "DATA MONITOR" mode with CONSULT.
- 6. Check the following.

COOLAN TEMP/S	Below 40°C (104°F)
INT/A TEMP SE	Below 40°C (104°F)
Difference between "COOLAN TEMP/S" and "INT/A TEMP SE"	Within 6°C (11°F)

If they are within the specified range, perform the following steps.

If they are out of the specified range, soak the vehicle to meet the above conditions. Then perform the following steps.

NOTE:

- · Do not turn ignition switch OFF.
- If it is supposed to need a long period of time, do not deplete the battery.
- 7. Start engine and let it idle for 5 minutes.
- 8. Check 1st trip DTC.

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Proceed to EC-708, "Diagnosis Procedure".

NO >> GO TO 5.

5. PERFORM COMPONENT FUNCTION CHECK (FOR MALFUNCTION B)

P0196 EOT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Perform component function check. Refer to EC-707, "Component Function Check".

NOTE:

Use the component function check to check the overall function of the EOT sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-708, "Diagnosis Procedure".

6.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON. 2.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

- Before performing the following procedure, do not add fuel.
- Before performing the following procedure, check that fuel level is between 1/4 and 4/4.
- Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 7.

7 .PERFORM DTC CONFIRMATION PROCEDURE B

- Start engine and let it idle for 60 minutes.
- 2. Move the vehicle to a cool place.

NOTE:

Cool the vehicle in an environment of ambient air temperature between -10°C (14°F) and 35°C (95°F).

3. Turn ignition switch OFF and soak the vehicle for 12 hours.

CAUTION:

Never turn ignition switch ON during soaking.

NOTE:

The vehicle must be cooled with the food open.

4. Start engine and let it idle for 5 minutes or more.

CAUTION:

Never turn ignition switch OFF during idling.

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-708, "Diagnosis Procedure".

NO >> INSPECTION END

Component Function Check

1. CHECK ENGINE OIL TEMPERATURE (EOT) SENSOR

- Turn ignition switch OFF.
- Disconnect EOT sensor harness connector. 2.
- Remove EOT sensor. Refer to EM-88, "Exploded View".
- Check resistance between EOT sensor terminals by heating with hot water as shown in the figure.


Terminals	Condition	Resistance (k Ω)	
	Temperature [°C (°F)]	20 (68)	2.37 - 2.63
1 and 2		50 (122)	0.68 – 1.00
		90 (194)	0.236 - 0.260

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to EC-708, "Diagnosis Procedure".

2.CHECK INTERMITTENT INCIDENT

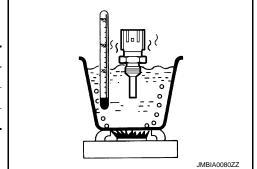

EC

Α

D

Е

Н

INFOID:0000000008451153

M

N

P0196 EOT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Check intermittent incident. Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to EC-708, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008451154

1. CHECK ENGINE OIL TEMPERATURE (EOT) SENSOR

Check EOT sensor. Refer to EC-708, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace EOT sensor. Refer to EM-88, "Exploded View".

2. CHECK INTERMITTENT INCIDENT

Check intermittent incident. Refer to GI-41, "Intermittent Incident".

>> INSPECTION END


Component Inspection

INFOID:0000000008451155

1. CHECK ENGINE OIL TEMPERATURE (EOT) SENSOR

- 1. Turn ignition switch OFF.
- 2. Disconnect EOT sensor harness connector.
- Remove EOT sensor. Refer to EM-88, "Exploded View".
- 4. Check resistance between EOT sensor terminals by heating with hot water as shown in the figure.

Terminals	Condition	Resistance (kΩ)	
	Temperature [°C (°F)]	20 (68)	2.37 - 2.63
1 and 2		50 (122)	0.68 - 1.00
		90 (194)	0.236 - 0.260

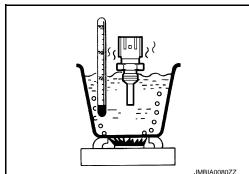

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EOT sensor. Refer to EM-88, "Exploded View".

P0197, P0198 EOT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P0197, P0198 EOT SENSOR

DTC Logic INFOID:0000000008451156

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC Detecting Condition	Possible Cause	•
P0197	EOT SEN/CIRC (Engine oil temperature sensor circuit low input)	An excessively low voltage from the engine oil temperature sensor is sent to ECM.	Harness or connectors (EOT sensor circuit is open or shorted.)	-
P0198	EOT SEN/CIRC (Engine oil temperature sensor circuit high input)	An excessively high voltage from the engine oil temperature sensor is sent to ECM.	Engine oil temperature sensor	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and wait at least 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

>> Proceed to EC-709, "Diagnosis Procedure". YES

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK ENGINE OIL TEMPERATURE SENSOR POWER SUPPLY

- Turn ignition switch OFF.
- Disconnect engine oil temperature (EOT) sensor harness connector.
- Turn ignition switch ON.
- Check the voltage between EOT sensor harness connector and ground.

+			Valtana	
EOT sensor		_	Voltage (Approx.)	
Connector Terminal				
F48	1	Ground	5 V	

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK ENGINE OIL TEMPERATURE SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between EOT sensor harness connector and ECM harness connector.

EC-709 Revision: 2012 August 2013 CUBE

EC

Α

D

Н

INFOID:0000000008451157

Ν

< DTC/CIRCUIT DIAGNOSIS >

+		_		
EOT s	ensor	EC	CM	Continuity
Connector	Terminal	Connector	Terminal	
F48	1	F7	27	Existed

4. Also check harness for short to ground.

Is the inspection result normal?

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> Repair or replace error-detected parts.

3.CHECK EOT SENSOR GROUND CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between EOT sensor harness connector and ECM harness connector.

+		-	_	
EOT s	ensor	EC	CM	Continuity
Connector	Terminal	Connector	Terminal	,
F48	2	F7	12	Existed

4. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace error-detected parts.

4. CHECK ENGINE OIL TEMPERATURE SENSOR

Check the engine oil temperature sensor. Refer to EC-710, "Component Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-41, "Intermittent Incident".


NO >> Replace engine oil temperature sensor. Refer to EM-34, "Exploded View".

Component Inspection

1. CHECK ENGINE OIL TEMPERATURE SENSOR

- Turn ignition switch OFF.
- Disconnect engine oil temperature sensor harness connector.
- 3. Remove engine oil temperature sensor. Refer to <a>EM-88, "Exploded View"
- 4. Check resistance between engine oil temperature sensor terminals by heating with hot water as shown in the figure.

•	temperature nsor	Condition		Resistance (k Ω)
+	_			
Terr	minal			
			20 (68)	2.37 - 2.63
1	2	Temperature [°C (°F)]	50 (122)	0.68 - 1.00
		(/)	90 (194)	0.236 - 0.260

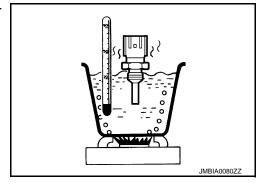

INFOID:0000000008451158

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace engine oil temperature sensor. Refer to EM-88, "Exploded View".

Α

EC

Е

Н

K

Р


INFOID:0000000008451161

P0222, P0223 TP SENSOR

Description INFOID:0000000008451159

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometer which transform the throttle valve position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

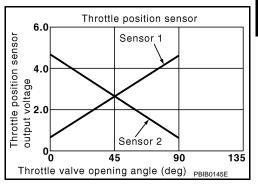

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0222 or P0223 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-726, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0222	Throttle position sensor 1 circuit low input	An excessively low voltage from the TP sensor 1 is sent to ECM.	Harness or connectors (TP sensor 1 circuit is open or shorted.)
P0223	Throttle position sensor 1 circuit high input	An excessively high voltage from the TP sensor 1 is sent to ECM.	Electric throttle control actuator (TP sensor 1)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 1 second.
- 2. Check DTC.

Is DTC detected?

YES >> Go to EC-711, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK THROTTLE POSITION SENSOR 1 POWER SUPPLY CIRCUIT

- Disconnect electric throttle control actuator harness connector.
- Turn ignition switch ON.

P0222, P0223 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

3. Check the voltage between electric throttle control actuator harness connector and ground.

Electric throttle	control actuator	Ground	Voltage
Connector	Terminal	Glound	voltage
F29	2	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

3.check throttle position sensor 1 ground circuit for open and short

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

Electric throttle	Electric throttle control actuator		ECM	
Connector	Terminal	Connector	Terminal	Continuity
F29	4	F8	36	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4.CHECK THROTTLE POSITION SENSOR 1 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

Electric throttle control actuator		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F29	1	F8	33	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

${f 5}.$ CHECK THROTTLE POSITION SENSOR

Refer to EC-713, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

6. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

Replace electric throttle control actuator. Refer to EM-26, "Exploded View".

>> INSPECTION END

.CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

P0222, P0223 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Component Inspection

INFOID:0000000008451162

1. CHECK THROTTLE POSITION SENSOR

- Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Perform EC-488, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".
- Turn ignition switch ON.
- Set selector lever to D (CVT) or 1st (M/T) position.
- Check the voltage between ECM harness connector and ground.

ECM		Ground	Cor	Condition	
Connector	Terminal	Ground	001	idition	Voltage
	33 (TP sensor	Ground Accelerator pedal	Fully released	More than 0.36V	
F8 _	1 signal)		Ground	Fully de- pressed	Less than 4.75V
10	34 (TP sensor 2 signal)			Fully released	Less than 4.75V
			Fully de- pressed	More than 0.36V	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace electric throttle control actuator. Refer to EM-26, "Exploded View". EC

Α

C

D

Е

F

Н

K

L

M

Ν

0

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P0300, P0301, P0302, P0303, P0304 MISFIRE

DTC Logic INFOID:0000000008451163

DTC DETECTION LOGIC

When a misfire occurs, engine speed will fluctuate. If the engine speed fluctuates enough to cause the crank-shaft position (CKP) sensor (POS) signal to vary, ECM can determine that a misfire is occurring.

Sensor	Input signal to ECM	ECM function
Crankshaft position sensor (POS)	Engine speed	On board diagnosis of misfire

The misfire detection logic consists of the following two conditions.

1. One Trip Detection Logic (Three Way Catalyst Damage)

On the 1st trip, when a misfire condition occurs that can damage the three way catalyst (TWC) due to overheating, the MIL will blink.

When a misfire condition occurs, the ECM monitors the CKP sensor signal every 200 engine revolutions for a change.

When the misfire condition decreases to a level that will not damage the TWC, the MIL will turn off.

If another misfire condition occurs that can damage the TWC on a second trip, the MIL will blink.

When the misfire condition decreases to a level that will not damage the TWC, the MIL will remain on.

If another misfire condition occurs that can damage the TWC, the MIL will begin to blink again.

2. Two Trip Detection Logic (Exhaust quality deterioration)

For misfire conditions that will not damage the TWC (but will affect vehicle emissions), the MIL will only light when the misfire is detected on a second trip. During this condition, the ECM monitors the CKP sensor signal every 1,000 engine revolutions.

A misfire malfunction can be detected on any one cylinder or on multiple cylinders.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0300	Multiple cylinder misfire detected	Multiple cylinders misfire.	Improper spark plug
P0301	No.1 cylinder misfire detected	No. 1 cylinder misfires.	Insufficient compression Incorrect fuel pressure
P0302	No. 2 cylinder misfire detected	No. 2 cylinder misfires.	The fuel injector circuit is open or shorted
P0303	No. 3 cylinder misfire detected	No. 3 cylinder misfires.	Fuel injector Intake air leak
P0304	No. 4 cylinder misfire detected	No. 4 cylinder misfires.	The ignition signal circuit is open or shorted Lack of fuel Signal plate A/F sensor 1 Incorrect PCV hose connection

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE-I

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Restart engine and let it idle for about 15 minutes.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-715, "Diagnosis Procedure".

NO >> GO TO 3.

3.perform dtc confirmation procedure-ii

1. Turn ignition switch OFF and wait at least 10 seconds.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Start engine and drive the vehicle under the similar conditions to (1st trip) Freeze Frame Data for a certain time. Refer to the table below.

Hold the accelerator pedal as steady as possible.

The similar conditions to (1st trip) Freeze Frame Data means the vehicle operation that the following conditions should be satisfied at the same time.

CAUTION:

Always drive vehicle in safe manner according to traffic conditions and obey all traffic laws when driving.

Engine speed	Engine speed in the freeze frame data $\pm400\ \text{rpm}$		
Vehicle speed in the freeze frame data ± 10 km/h (6 MPH)			
Base fuel schedule in freeze frame data \times (1 \pm 0.1)			
Engine coolant temperature (T)	When the freeze frame data shows lower than 70°C (158°F), T should be lower than 70°C (158°F).		
condition	When the freeze frame data shows higher than or equal to 70°C (158°F), T should be higher than or equal to 70°C (158°F).		

The time to driving varies according to the engine speed in the freeze frame data.

Engine speed	Time
Around 1,000 rpm	Approximately 10 minutes
Around 2,000 rpm	Approximately 5 minutes
More than 3,000 rpm	Approximately 3.5 minutes

Check 1st trip DTC.

Is 1st trip DTC detected?

>> Go to EC-715, "Diagnosis Procedure". YES

>> INSPECTION END NO

Diagnosis Procedure

1. CHECK FOR INTAKE AIR LEAK AND PCV HOSE

- Start engine and run it at idle speed.
- Listen for the sound of the intake air leak.
- Check PCV hose connection.

Is intake air leak detected?

YES >> Discover air leak location and repair.

NO >> GO TO 2.

2.check for exhaust system clogging

Stop engine and visually check exhaust tube, three way catalyst and muffler for dents.

Is the inspection result normal?

YES-1 >> With CONSULT: GO TO 3.

YES-2 >> Without CONSULT: GO TO 4.

NO >> Repair or replace it.

3.PERFORM POWER BALANCE TEST

(I) With CONSULT

- Start engine.
- Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.
- Make sure that each circuit produces a momentary engine speed drop.

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 4.

Revision: 2012 August

4. CHECK FUNCTION OF FUEL INJECTOR

Start engine and let engine idle.

EC

Α

C

D

Е

F

Н

INFOID:0000000008451164

M

Ν

Р

2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Listen to each fuel injector operating sound.


Clicking noise should be heard.

Is the inspection result normal?

YES >> GO TO 5.

NO

>> Perform trouble diagnosis for FUEL INJECTOR, refer to EC-898. "Component Inspection".

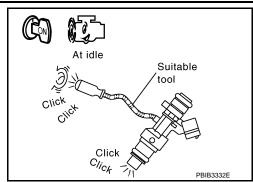

$\mathbf{5}$. CHECK FUNCTION OF IGNITION COIL-I

Do the following procedure in the place where ventilation is good without the combustible.

- Turn ignition switch OFF.
- Remove fuel pump fuse in IPDM E/R to release fuel pressure.

Do not use CONSULT to release fuel pressure, or fuel pressure applies again during the following procedure.

- Start engine.
- 4. After engine stalls, crank it two or three times to release all fuel pressure.
- Turn ignition switch OFF.
- 6. Remove all ignition coil harness connectors to avoid the electrical discharge from the ignition coils.
- 7. Remove ignition coil and spark plug of the cylinder to be checked.
- 8. Crank engine for 5 seconds or more to remove combustion gas in the cylinder.
- Connect spark plug and harness connector to ignition coil.
- 10. Fix ignition coil using a rope etc. with gap of 13 17 mm (0.52 -0.66 in) between the edge of the spark plug and grounded metal portion as shown in the figure.
- 11. Crank engine for about 3 seconds, and check whether spark is generated between the spark plug and the grounded metal por-

Spark should be generated.

CAUTION:

- During the operation, always stay 0.5 m (19.7 in) away from the spark plug and the ignition coil within. Be careful not to get an electrical shock while checking, because the electrical discharge voltage becomes 20 kV or more.
- It might cause to damage the ignition coil if the gap of more than 17 mm (0.66 in) is taken.

When the gap is less than 13 mm (0.52 in), the spark might be generated even if the coil is malfunctioning.

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 6.

6. CHECK FUNCTION OF IGNITION COIL-II


- Turn ignition switch OFF.
- Disconnect spark plug and connect a known-good spark plug.
- Crank engine for about 3 seconds, and recheck whether spark is generated between the spark plug and the grounded metal portion.

Spark should be generated.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Check ignition coil, power transistor and their circuits. Refer to EC-903, "Component Function Check".

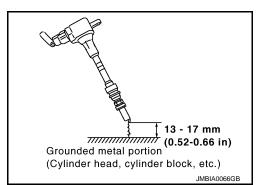

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]


7. CHECK SPARK PLUG

Check the initial spark plug for fouling, etc.

Is the inspection result normal?

YES >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to EM-115, "Spark Plug".

NO >> Repair or clean spark plug. Refer to EM-42, "Exploded View". Then GO TO 8.

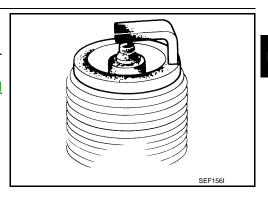

8. CHECK FUNCTION OF IGNITION COIL-III

1. Reconnect the initial spark plugs.

Crank engine for about 3 seconds, and recheck whether spark is generated between the spark plug and the grounded portion.

Spark should be generated.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to EM-115, "Spark Plug".

9. CHECK COMPRESSION PRESSURE

Check compression pressure. Refer to EM-21, "Inspection".

Is the inspection result normal?

YES >> GO TO 10.

NO >> Check pistons, piston rings, valves, valve seats and cylinder head gaskets.

10. CHECK FUEL PRESSURE

1. Install all removed parts.

Check fuel pressure. Refer to <u>EC-961</u>, "Inspection".

Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 11.

11. DETECT MALFUNCTIONING PART

Check fuel hoses and fuel tubes for clogging.

Is the inspection result normal?

YES >> Replace "fuel filter and fuel pump assembly". Refer to FL-5, "Exploded View".

NO >> Repair or replace.

12.CHECK IGNITION TIMING

Check the following items. Refer to <u>EC-483</u>, "BASIC INSPECTION: Special Repair Requirement". For specification, refer to <u>EC-965</u>, "Ignition Timing".

Is the inspection result normal?

YES >> GO TO 13.

NO >> Follow the EC-483, "BASIC INSPECTION: Special Repair Requirement".

13. CHECK A/F SENSOR 1 INPUT SIGNAL CIRCUIT

- Turn ignition switch OFF.
- Disconnect corresponding A/F sensor 1 harness connector.
- 3. Disconnect ECM harness connector.
- 4. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

EC

Α

D

Е

F

. .

Н

K

L

M

Ν

0

A/F se	ensor 1	ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F51	1	F8	49	Existed
131	2	1-0	53	LAISIEU

5. Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

A/F sensor 1		Ground	Continuity	
Connector	Terminal	Glound	Continuity	
F51	1	Ground	Not existed	
	2	Glound	inot existed	

ECM		Ground	Continuity	
Connector	Terminal	Glound	Continuity	
F8	49	Ground	Not existed	
10	53	Glound	ivot existed	

6. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

14.CHECK A/F SENSOR 1 HEATER

Refer to EC-616, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace A/F sensor 1. Refer to EM-30, "Exploded View".

15. CHECK MASS AIR FLOW SENSOR

(P)With CONSULT

Check "MASS AIR FLOW" in "DATA MONITOR" mode with CONSULT.

For specification, refer to EC-965, "Mass Air Flow Sensor".

With GST

Check mass air flow sensor signal in Service \$01 with GST.

For specification, refer to EC-965, "Mass Air Flow Sensor".

Is the measurement value within the specification?

YES >> GO TO 16.

NO >> Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or ground. Refer to <u>EC-623</u>, "<u>DTC Logic</u>".

16. CHECK SYMPTOM TABLE

Check items on the rough idle symptom in EC-949, "Symptom Table".

Is the inspection result normal?

YES >> GO TO 17.

NO >> Repair or replace.

17.ERASE THE 1ST TRIP DTC

Some tests may cause a 1st trip DTC to be set.

Erase the 1st trip DTC from the ECM memory after performing the tests. Refer to "How to Erase DTC and 1st Trip DTC" in EC-588, "CONSULT Function".

>> GO TO 18.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

18.CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

EC

D

Е

F

0

Н

K

L

M

Ν

0

P0327, P0328 KS

Description INFOID:0000000008451165

The knock sensor is attached to the cylinder block. It senses engine knocking using a piezoelectric element. A knocking vibration from the cylinder block is sensed as vibrational pressure. This pressure is converted into a voltage signal and sent to the ECM.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detected condition	Possible cause
P0327	Knock sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (The sensor circuit is open or shorted.)
P0328	Knock sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	Knock sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and run it for at least 5 seconds at idle speed.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-720, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451167

CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK KNOCK SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Disconnect knock sensor harness connector.
- Disconnect ECM harness connector.
- Check the continuity between knock sensor harness connector and ECM harness connector.

Knock sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F12	2	F8	40	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

[MR18DE (FOR CALIFORNIA)]

$3. \mathsf{CHECK}$ KNOCK SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between knock sensor harness connector and ECM harness connector.

Knock	sensor	ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F12	1	F8	37	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK KNOCK SENSOR

Refer to EC-721, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace knock sensor.

5. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

1. CHECK KNOCK SENSOR

- Turn ignition switch OFF.
- Disconnect knock sensor harness connector.
- 3. Check resistance between knock sensor terminals as per the following.

NOTE:

It is necessary to use an ohmmeter which can measure more than 10 $\text{M}\Omega.$

Terminals	Resistance	
1 and 2	Approx. 532 - 588 kΩ [at 20°C (68°F)]	

CAUTION:

Do not use any knock sensors that have been dropped or physically damaged. Use only new ones.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace knock sensor. Refer to EM-88, "Exploded View".

Revision: 2012 August EC-721 2013 CUBE

EC

Α

D

Е

F

G

П

INFOID:0000000008451168

J

...

Ν

0

P0335 CKP SENSOR (POS)

Description INFOID:000000008451169

The crankshaft position sensor (POS) is located on the oil pan facing the gear teeth (cogs) of the signal plate. It detects the fluctuation of the engine revolution.

The sensor consists of a permanent magnet and Hall IC.


When the engine is running, the high and low parts of the teeth cause the gap with the sensor to change.


The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

The ECM receives the voltage signal and detects the fluctuation of the engine revolution.

ECM receives the signals as shown in the figure.

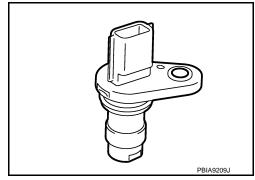

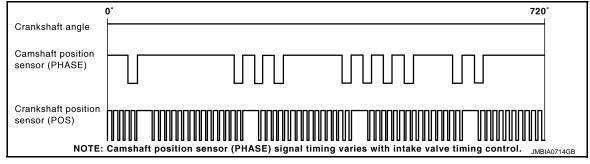

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0335	Crankshaft position sensor (POS) circuit	 The crankshaft position sensor (POS) signal is not detected by the ECM during the first few seconds of engine cranking. The proper pulse signal from the crankshaft position sensor (POS) is not sent to ECM while the engine is running. The crankshaft position sensor (POS) signal is not in the normal pattern during engine running. 	Harness or connectors [Crankshaft position sensor (POS) circuit is open or shorted.] (Refrigerant pressure sensor circuit is shorted.) (Accelerator pedal position sensor circuit is shorted.) (EVAP control system pressure sensor circuit is shorted.) (Battery current sensor circuit is shorted.) (Tumble control valve position sensor circuit is shorted.) Crankshaft position sensor (POS) Refrigerant pressure sensor Accelerator pedal position sensor EVAP control system pressure sensor Signal plate Battery current sensor Tumble control valve position sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5 V with ignition switch ON.

P0335 CKP SENSOR (POS)

< DTC/CIRCUIT DIAGNOSIS >

>> GO TO 2.

[MR18DE (FOR CALIFORNIA)]

2.PERFORM DTC CONFIRMATION PROCEDURE

Start engine and let it idle for at least 5 seconds.

If engine does not start, crank engine for at least 2 seconds.

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-723, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK GROUND CONNECTION

Turn ignition switch OFF.

Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.check crankshaft position (ckp) sensor (pos) power supply circuit-i

- Disconnect crankshaft position (CKP) sensor (POS) harness connector.
- Turn ignition switch ON. 2.
- Check the voltage between CKP sensor (POS) harness connector and ground.

CKP sen	sor (POS)	Ground	Voltage
Connector	Terminal	Glodila	
F20	1	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 3.

3.CHECK CKP SENSOR (POS) POWER SUPPLY CIRCUIT-II

- Turn ignition switch ON.
- Disconnect ECM harness connector. 2.
- Check the continuity between CKP sensor (POS) harness connector and ECM harness connector.

CKP sen	sor (POS)	Connector Terminal		Continuity	
Connector	Terminal			Continuity	
F20	1	F8	75	Existed	

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit.

f 4.CHECK CKP SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

EC-723 Revision: 2012 August 2013 CUBE

EC

Α

D INFOID:0000000008451171

F

Н

Ν

E	СМ	Sensor		
Connector Terminal		Name	Connector	Terminal
	69	Tumble control valve actuator	F22	1
	74	Refrigerant pressure sensor	E49	3
F8	75	CKP sensor (POS)	F20	1
. •	76	EVAP control system pressure sensor	B21	3
	71	Battery current sensor	F53	1
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair short to ground or short to power in harness or connectors.

5. CHECK COMPONENTS

Check the following.

- Buttery current sensor (Refer to EC-821, "Component Inspection".)
- EVAP control system pressure sensor (Refer to EC-760, "Component Inspection".)
- Refrigerant pressure sensor (Refer to <u>EC-916</u>, "<u>Diagnosis Procedure</u>".)
- Tumble control valve (Refer to EC-855, "Component Inspection".)

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace malfunctioning components.

6.CHECK APP SENSOR

Refer to EC-875, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 7.

7. REPLACE ACCELERATOR PEDAL ASSEMBLY

Replace accelerator pedal assembly. Refer to ACC-3, "Removal and Installation".

>> INSPECTION END

8. CHECK CKP SENSOR (POS) GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Check the continuity between CKP sensor (POS) harness connector and ECM harness connector.

CKP sen	CKP sensor (POS)		ECM	
Connector	Terminal	Connector	Terminal	Continuity
F20	2	F8	62	Existed

3. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

9.CHECK CKP SENSOR (POS) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Disconnect ECM harness connector.
- 2. Check the continuity between CKP sensor (POS) harness connector and ECM harness connector.

[MR18DE (FOR CALIFORNIA)]

CKP sen	sor (POS)	ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F20	3	F8	61	Existed

3. Also check harness for short to ground and short to power.

Is the inspection result normal?

>> GO TO 10. YES

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

10. CHECK CRANKSHAFT POSITION SENSOR (POS)

Refer to EC-725, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace crankshaft position sensor (POS).

11. CHECK GEAR TOOTH

Visually check for chipping signal plate gear tooth.

Is the inspection result normal?

YES >> GO TO 12.

NO >> Replace the signal plate.

12. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection


1. CHECK CRANKSHAFT POSITION SENSOR (POS)-I

- Turn ignition switch OFF.
- 2. Loosen the fixing bolt of the sensor.
- 3. Disconnect crankshaft position sensor (POS) harness connector.
- 4. Remove the sensor. Refer to EM-88, "Exploded View".
- 5. Visually check the sensor for chipping.

Is the inspection result normal?

YES >> GO TO 2.

>> Replace crankshaft position sensor (POS). Refer to EM-NO 88, "Exploded View".

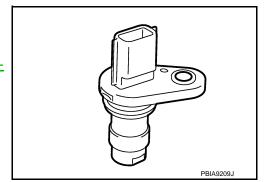

2.CHECK CRANKSHAFT POSITION SENSOR (POS)-II

Check resistance between crankshaft position sensor (POS) terminals as per the following.

Terminals (Polarity)	Resistance [Ω at 25°C (77°F)]
1 (+) - 2 (-)	
1 (+) - 3 (-)	Except 0 or ∞
2 (+) - 3 (-)	

Is the inspection result normal?

YES >> INSPECTION END

>> Replace crankshaft position sensor (POS). Refer to EM-88, "Exploded View". NO

EC-725 Revision: 2012 August 2013 CUBE

Α

EC

D

Е

INFOID:0000000008451172

K

M

Ν

P0340 CMP SENSOR (PHASE)

Description INFOID:000000008451173

The camshaft position sensor (PHASE) senses the retraction of camshaft (INT) to identify a particular cylinder. The camshaft position sensor (PHASE) senses the piston position.

When the crankshaft position sensor (POS) system becomes inoperative, the camshaft position sensor (PHASE) provides various controls of engine parts instead, utilizing timing of cylinder identification signals.


The sensor consists of a permanent magnet and Hall IC.


When engine is running, the high and low parts of the teeth cause the gap with the sensor to change.

The changing gap causes the magnetic field near the sensor to change.

Due to the changing magnetic field, the voltage from the sensor changes.

ECM receives the signals as shown in the figure.

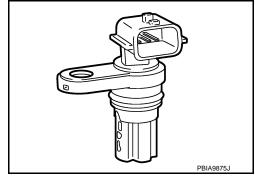

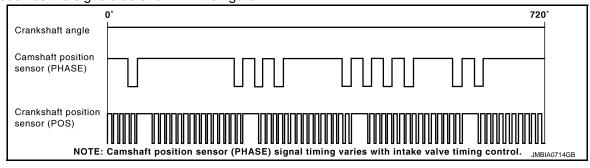

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0340 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-798, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0340	Camshaft position sensor (PHASE) circuit	 The cylinder No. signal is not sent to ECM for the first few seconds during engine cranking. The cylinder No. signal is not sent to ECM during engine running. The cylinder No. signal is not in the normal pattern during engine running. 	 Harness or connectors (The sensor circuit is open or shorted) Camshaft position sensor (PHASE) Camshaft (INT) Starter motor Starting system circuit Dead (Weak) battery

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5 V with ignition switch ON.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-I

- Start engine and let it idle for at least 5 seconds.
 If engine does not start, crank engine for at least 2 seconds.
- Check 1st trip DTC.

P0340 CMP SENSOR (PHASE)

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Is 1st trip DTC detected?

>> Go to EC-727, "Diagnosis Procedure". YES

>> GO TO 3. NO

3.perform dtc confirmation procedure-i

- Maintaining engine speed at more than 800 rpm for at least 5 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-727, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

CHECK STARTING SYSTEM

Turn ignition switch to START position.

Does the engine turn over? Does the starter motor operate?

YES >> GO TO 2.

NO >> Check starting system (Refer to STR-2, "Work Flow (With GR8-1200 NI)" or STR-5, "Work Flow (Without GR8-1200 NI)". For the details of the GR8-1200 NI, refer to STR-18, "Special Service Tools".).

2.CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection". 2.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace ground connection.

3.check camshaft position (cmp) sensor (phase) power supply circuit

- Disconnect camshaft position (CMP) sensor (PHASE) harness connector.
- Turn ignition switch ON.
- Check the voltage between CMP sensor (PHASE) harness connector and ground.

CMP sense	or (PHASE)	Ground	Voltage
Connector	Terminal	Glound	voltage
F26	1	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

f 4.CHECK CMP SENSOR (PHASE) GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Check the continuity between CMP sensor (PHASE) harness connector and ECM harness connector.

CMP sens	P sensor (PHASE) ECM Continuity		ECM	
Connector	Terminal	Connector Terminal		Continuity
F26	2	F8	63	Existed

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

${f 5.}$ CHECK CMP SENSOR (PHASE) INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1 Disconnect ECM harness connector.
- Check the continuity between CMP sensor (PHASE) harness connector and ECM harness connector.

EC-727 Revision: 2012 August 2013 CUBE

EC

Α

INFOID:0000000008451175

Н

< DTC/CIRCUIT DIAGNOSIS >

CMP sensor (PHASE)		ECM		Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
F26	3	F8	65	Existed	

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

6.CHECK CAMSHAFT POSITION SENSOR (PHASE)

Refer to EC-728, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace camshaft position sensor (PHASE). Refer to EM-55, "Exploded View".

7.CHECK CAMSHAFT (INT)

Check the following.


- Accumulation of debris to the signal plate of camshaft (1) rear end
- Chipping signal plate of camshaft rear end

Is the inspection result normal?

YES >> GO TO 8.

NO >> Remove

>> Remove debris and clean the signal plate of camshaft rear end or replace camshaft. Refer to EM-55, <a href="Exploded View".

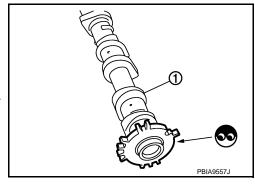

8. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008451176


1. CHECK CAMSHAFT POSITION SENSOR (PHASE)-I

- Turn ignition switch OFF.
- 2. Loosen the fixing bolt of the sensor.
- 3. Disconnect camshaft position sensor (PHASE) harness connector.
- 4. Remove the sensor. Refer to EM-55, "Exploded View".
- Visually check the sensor for chipping.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace camshaft position sensor (PHASE). Refer to <u>EM-55, "Exploded View"</u>.

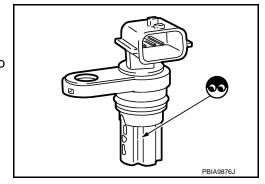

2. CHECK CAMSHAFT POSITION SENSOR (PHASE)-II

Check resistance camshaft position sensor (PHASE) terminals as per the following.

P0340 CMP SENSOR (PHASE)

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Terminals (Polarity)	Resistance [Ω at 25°C (77°F)]	- A
1 (+) - 2 (-)		<u> </u>
1 (+) - 3 (-)	Except 0 or ∞	EC
2 (+) - 3 (-)		
Is the inspection result norma YES >> INSPECTION EN NO >> Replace camshaf		er to <u>EM-55, "Exploded View"</u> .
		D
		E

Н

F

G

K

L

M

Ν

0

Ρ


DTC Logic

DTC DETECTION LOGIC

The ECM monitors the switching frequency ratio of air fuel ratio (A/F) sensor 1 and heated oxygen sensor 2.

A three way catalyst (manifold) with high oxygen storage capacity will indicate a low switching frequency of heated oxygen sensor 2. As oxygen storage capacity decreases, the heated oxygen sensor 2 switching frequency will increase.

When the frequency ratio of A/F sensor 1 and heated oxygen sensor 2 approaches a specified limit value, the three way catalyst (manifold) malfunction is diagnosed.

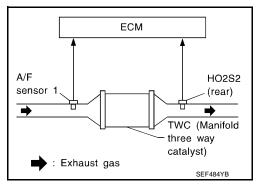

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0420	Catalyst system efficiency below threshold	 Three way catalyst (manifold) does not operate properly. Three way catalyst (manifold) does not have enough oxygen storage capacity. 	 Three way catalyst (manifold) Exhaust tube Intake air leaks Fuel injector Fuel injector leaks Spark plug Improper ignition timing

DTC CONFIRMATION PROCEDURE

1. INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 7.

2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Do not hold engine speed for more than the specified minutes below.

>> GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE-I

(P)With CONSULT

- Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.
- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 5. Let engine idle for 1 minute.
- 6. Make sure that "COOLAN TEMP/S" indication is more than 70°C (158°F). If not, warm up engine and go to next step when "COOLAN TEMP/S" indication reaches 70°C (158°F).
- Open engine hood.
- 8. Select "DTC & SRT CONFIRMATION" then "SRT WORK SUPPORT" mode with CONSULT.
- Rev engine up to 2,000 to 3,000 rpm and hold it for 3 consecutive minutes then release the accelerator pedal completely.
- 10. Check the indication of "CATALYST".

Which is displayed on CONSULT screen?

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

CMPLT>> GO TO 6. INCMP>> GO TO 4.

4.PERFORM DTC CONFIRMATION PROCEDURE-II

1. Wait 5 seconds at idle.

2. Rev engine up to 2,000 to 3,000 rpm and maintain it until "INCMP" of "CATALYST" changes to "CMPLT" (It will take approximately 5 minutes).

EC

Α

Does the indication change to "CMPLT"?

YES >> GO TO 6. NO >> GO TO 5.

${f 5.}$ PERFORM DTC CONFIRMATION PROCEDURE AGAIN

- 1. Stop engine and cool it down to less than 70°C (158°F).
- 2. Perform DTC CONFIRMATION PROCEDURE again.

>> GO TO 3.

Е

6.PERFORM DTC CONFIRMATION PROCEDURE-III

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-731, "Diagnosis Procedure".

NO >> INSPECTION END

G

7.PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-731, "Component Function Check".

NOTE:

Use component function check to check the overall function of the three way catalyst (manifold). During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-731, "Diagnosis Procedure".

INFOID:0000000008451178

Component Function Check

1. PERFORM COMPONENT FUNCTION CHECK

WWithout CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for at least 1 minute under no load.
- 4. Let engine idle for 1 minute.
- 5. Open engine hood.
- 6. Check the voltage between ECM harness connector and ground under the following condition.

E	Connector Terminal Ground		Condition	Voltage	
Connector			Condition		
F8	50 (HO2S2 signal)	Ground	Keeping engine speed at 2,500 rpm constant under no load	The voltage fluctuation cycle takes more than 5 seconds. 1 cycle: 0.6 - $1.0 \rightarrow 0$ - $0.3 \rightarrow 0.6$ - 1.0	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-731, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008451179

1. CHECK EXHAUST SYSTEM

Visually check exhaust tubes and muffler for dent.

Revision: 2012 August EC-731 2013 CUBE

N

M

K

1 4

0

ŀ

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]


Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace.

2.CHECK EXHAUST GAS LEAK

- Start engine and run it at idle.
- Listen for an exhaust gas leak before the three way catalyst (manifold).

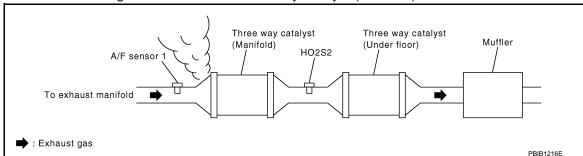

Is exhaust gas leak detected?

YES >> Repair or replace.

NO >> GO TO 3.

3. CHECK INTAKE AIR LEAK

Listen for an intake air leak after the mass air flow sensor.

Is intake air leak detected?

YES >> Repair or replace.

NO >> GO TO 4.

4. CHECK IDLE SPEED AND IGNITION TIMING

For procedure, refer to EC-487, "IGNITION TIMING: Special Repair Requirement".

For specification, refer to EC-965, "Idle Speed" and EC-965, "Ignition Timing".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Follow the instruction of EC-483, "BASIC INSPECTION: Special Repair Requirement".

5. CHECK FUEL INJECTOR

- 1. Stop engine and then turn ignition switch ON.
- 2. Check the voltage between ECM harness connector and ground.

E	ECM Ground Voltage			
Connector Terminal		Glound	voltage	
	25		Battery voltage	
F7	29	Ground		
Γ/	30	Glound		
	31			

Is the inspection result normal?

YES >> GO TO 6.

NO >> Perform <u>EC-897</u>, "<u>Diagnosis Procedure</u>".

6.CHECK FUNCTION OF IGNITION COIL-I

CAUTION:

Do the following procedure in the place where ventilation is good without the combustible.

- Turn ignition switch OFF.
- 2. Remove fuel pump fuse in IPDM E/R to release fuel pressure.


NOTE:

Do not use CONSULT to release fuel pressure, or fuel pressure applies again during the following procedure.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- 3. Start engine.
- 4. After engine stalls, crank it two or three times to release all fuel pressure.
- Turn ignition switch OFF.
- 6. Remove all ignition coil harness connectors to avoid the electrical discharge from the ignition coils.
- 7. Remove ignition coil and spark plug of the cylinder to be checked.
- 8. Crank engine for 5 seconds or more to remove combustion gas in the cylinder.
- 9. Connect spark plug and harness connector to ignition coil.
- 10. Fix ignition coil using a rope etc. with gap of 13 17 mm (0.52 0.66 in) between the edge of the spark plug and grounded metal portion as shown in the figure.
- 11. Crank engine for about 3 seconds, and check whether spark is generated between the spark plug and the grounded metal portion.

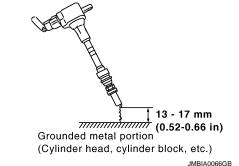

Spark should be generated.

CAUTION:

- During the operation, always stay 0.5 m (19.7 in) away from the spark plug and the ignition coil. Be careful not to get an electrical shock while checking, because the electrical discharge voltage becomes 20 kV or more.
- It might cause to damage the ignition coil if the gap of more than 17 mm (0.66 in) is taken.
 NOTE:

When the gap is less than 13 mm (0.52 in), the spark might be generated even if the coil is malfunctioning.

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 7.

7.CHECK FUNCTION OF IGNITION COIL-II

- 1. Turn ignition switch OFF.
- 2. Disconnect spark plug and connect a known-good spark plug.
- 3. Crank engine for about 3 seconds, and recheck whether spark is generated between the spark plug and the grounded metal portion.

Spark should be generated.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Check ignition coil, power transistor and their circuits. Refer to EC-903, "Diagnosis Procedure".


8. CHECK SPARK PLUG

Check the initial spark plug for fouling, etc.

Is the inspection result normal?

YES >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to EM-115, "Spark Plug".

NO >> Repair or clean spark plug. Then GO TO 9.

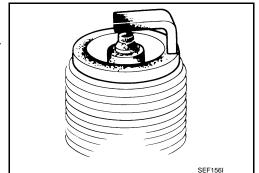

9. CHECK FUNCTION OF IGNITION COIL-III

- Reconnect the initial spark plugs.
- Crank engine for about three seconds, and recheck whether spark is generated between the spark plug and the grounded portion.

Spark should be generated.

EC

Α

С

D

Е

Н

Κ

M

N

0

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to EM-115, "Spark Plug".

10. CHECK FUEL INJECTOR

- 1. Turn ignition switch OFF. Refer to EM-37, "Removal and Installation".
- 2. Remove fuel injector assembly.
 - Keep fuel hose and all fuel injectors connected to fuel tube.
- 3. Disconnect all ignition coil harness connectors.
- 4. Reconnect all fuel injector harness connectors disconnected.
- 5. Turn ignition switch ON.

Does fuel drip from fuel injector?

YES >> GO TO 11.

NO >> Replace the fuel injector(s) from which fuel is dripping. Refer to EM-37, "Exploded View".

11. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace three way catalyst assembly. Refer to <a>EX-5, "Exploded View".

NO >> Repair or replace harness or connector

Α

EC

D

Е

F

N

Р

P0441 EVAP CONTROL SYSTEM

DTC Logic


DTC DETECTION LOGIC

NOTE:

If DTC P0441 is displayed with other DTC such as P2122, P2123, P2127, P2128 or P2138, first perform trouble diagnosis for other DTC.

In this evaporative emission (EVAP) control system, purge flow occurs during non-closed throttle conditions. Purge volume is related to air intake volume. Under normal purge conditions (non-closed throttle), the EVAP canister purge volume control solenoid valve is open to admit purge flow. Purge flow exposes the EVAP control system pressure sensor to intake manifold vacuum.

Under normal conditions (non-closed throttle), sensor output voltage indicates if pressure drop and purge flow are adequate. If not, a malfunction is determined.

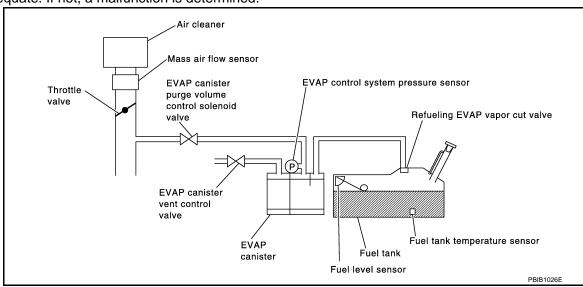

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0441	EVAP control system in- correct purge flow	EVAP control system does not operate properly, EVAP control system has a leak between intake manifold and EVAP control system pressure sensor.	EVAP canister purge volume control solenoid valve stuck closed EVAP control system pressure sensor and the circuit Loose, disconnected or improper connection of rubber tube Blocked rubber tube Cracked EVAP canister EVAP canister purge volume control solenoid valve circuit Accelerator pedal position sensor Blocked purge port EVAP canister vent control valve Drain filter

DTC CONFIRMATION PROCEDURE

1. INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 6.

2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

Revision: 2012 August EC-735 2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

>> GO TO 3.

3. PERFORM DTC CONFIRMATION PROCEDURE-I

(I) With CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and let it idle for at least 70 seconds.
- Select "PURG FLOW P0441" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CON-SULT.
- 5. Touch "START".

Is COMPLETED displayed on CONSULT screen?

YES >> GO TO 5.

NO >> GO TO 4.

4. PERFORM DTC CONFIRMATION PROCEDURE-II

When the following conditions are met, "TESTING" will be displayed on the CONSULT screen. Maintain the conditions continuously until "TESTING" changes to "COMPLETED". (It will take at least 35 seconds.)

Selector lever Suitable position		
VHCL SPEED SE	32 - 120 km/h (20 - 75 mph)	
ENG SPEED	500 - 3,800 rpm	
B/FUEL SCHDL	1.0 - 10.0 msec	
COOLAN TEMP/S	More than 0°C (32°F)	

CAUTION:

Always drive vehicle at a safe speed.

If "TESTING" is not changed for a long time, retry from step 2.

Is "COMPLETED" displayed on CONSULT screen?

YES >> GO TO 5.

NO >> Perform DTC CONFIRMATION PROCEDURE again. GO TO 3.

${f 5}$ PERFORM DTC CONFIRMATION PROCEDURE-II

Touch "SELF-DIAG RESULT".

Which is displayed on CONSULT screen?

OK >> INSPECTION END

NG >> Go to EC-737, "Diagnosis Procedure".

6.PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-736, "Component Function Check".

NOTE:

Use component function check to check the overall monitoring function of the EVAP control system purge flow monitoring. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-737, "Diagnosis Procedure".

Component Function Check

INFOID:0000000008451181

1. PERFORM COMPONENT FUNCTION CHECK

⋈Without CONSULT

- 1. Lift up drive wheels.
- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 4. Start engine and wait at least 70 seconds.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Set voltmeter probes to ECM harness connector and ground.

	ECM	Ground	
Connector Terminal		Ground	
F8	42 (EVAP control system pressure sensor signal)	Ground	

EC

Α

- Check EVAP control system pressure sensor value at idle speed and note it.
- Establish and maintain the following conditions for at least 1 minute.

Air conditioner switch	ON
Headlamp switch	ON
Rear window defogger switch	ON
Engine speed	Approx. 3,000 rpm
Selector lever	Any position other than P, N or R

Verify that EVAP control system pressure sensor value stays 0.1 V less than the value at idle speed (measured at step 6 for at least 1 second.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-737, "Diagnosis Procedure".

Diagnosis Procedure

1. CHECK EVAP CANISTER

- Turn ignition switch OFF.
- Check EVAP canister for cracks.

Is the inspection result normal?

YES-1 >> With CONSULT: GO TO 2.

YES-2 >> Without CONSULT: GO TO 3.

>> Replace EVAP canister. Refer to FL-14, "Exploded View".

2.CHECK PURGE FLOW

(P)With CONSULT

- Disconnect vacuum hose connected to EVAP canister purge volume control solenoid valve at EVAP service port and install vacuum gauge. For the location of EVAP service port, refer to EC-551, "System Description".
- 2. Start engine and let it idle.
- 3. Select "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT.
- 4. Rev engine up to 2,000 rpm.
- Touch "Qd" and "Qu" on CONSULT screen to adjust "PURG VOL C/V" opening and check vacuum existence.

PURG VOL C/V	Vacuum
100%	Existed
0%	Not existed

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 4.

3. CHECK PURGE FLOW

₩ Without CONSULT

- Start engine and warm it up to normal operating temperature.
- Stop engine.

D

Е

INFOID:0000000008451182 Н

M

Ν

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- Disconnect vacuum hose connected to EVAP canister purge volume control solenoid valve at EVAP service port and install vacuum gauge. For the location of EVAP service port, refer to EC-551, "System Description".
- Start engine and let it idle.

Do not depress accelerator pedal even slightly.

5. Check vacuum gauge indication before 60 seconds passed after starting engine.

Vacuum should not exist.

6. Revving engine up to 2,000rpm after 100 seconds passed after starting engine.

Vacuum should exist.

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 4.

4. CHECK EVAP PURGE LINE


- 1. Turn ignition switch OFF.
- 2. Check EVAP purge line for improper connection or disconnection. Refer to <u>EC-551</u>, "System Description".

Is the inspection result normal?

YES >> GO TO 5. NO >> Repair it.

${f 5.}$ CHECK EVAP PURGE HOSE AND PURGE PORT

- Disconnect purge hoses connected to EVAP service port A and EVAP canister purge volume control solenoid valve B.
- 2. Blow air into each hose and EVAP purge port C.

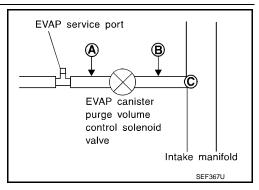


3. Check that air flows freely.

Is the inspection result normal?

YES-1 >> With CONSULT: GO TO 6. YES-2 >> Without CONSULT: GO TO 7.

NO >> Repair or clean hoses and/or purge port.

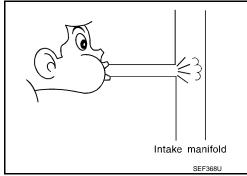

6. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

(P)With CONSULT

- Start engine.
- Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT. Check that engine speed varies according to the valve opening.

Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 7.

<	DΤ	CC/C	IRC	UIT	DIAC	SOME	is >

Refer to GI-41, "Intermittent Incident".

[MR18DE (FOR CALIFORNIA)]

7. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE
Refer to EC-744, "Component Inspection".
Is the inspection result normal?
YES >> GO TO 8.
NO >> Replace EVAP canister purge volume control solenoid valve. Refer to EM-26, "Exploded Vie
8.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR
Disconnect EVAP control system pressure sensor harness connector. Check connectors for weter.
2. Check connectors for water.
Water should not exist.
Is the inspection result normal?
YES >> GO TO 9.
NO >> Replace EVAP control system pressure sensor. Refer to <u>FL-14, "Exploded View"</u> .
9. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR FUNCTION
Refer to EC-761, "DTC Logic" for DTC P0452, EC-766, "DTC Logic" for DTC P0453.
Is the inspection result normal?
YES >> GO TO 10. NO >> Replace EVAP control system pressure sensor. Refer to <u>FL-14</u> , " <u>Exploded View</u> ".
10. CHECK RUBBER TUBE FOR CLOGGING
 Disconnect rubber tube connected to EVAP canister vent control valve. Check the rubber tube for clogging.
Is the inspection result normal?
YES >> GO TO 11.
NO >> Clean the rubber tube using an air blower.
11.check drain filter
Refer to EC-740, "Component Inspection (Drain filter)".
Is the inspection result normal?
YES >> GO TO 12.
NO >> Replace drain filter. EC-551, "System Description" 12
12.CHECK EVAP CANISTER VENT CONTROL VALVE
Refer to EC-751, "Component Inspection".
Is the inspection result normal? YES >> GO TO 13.
YES >> GO TO 13. NO >> Replace EVAP canister vent control valve. Refer to <u>FL-14, "Exploded View"</u> .
13.check evap purge line
Inspect EVAP purge line (pipe and rubber tube). Check for evidence of leaks.
Refer to <u>EC-963, "Inspection"</u> .
Is the inspection result normal?
YES >> GO TO 14.
NO >> Replace it.
14.clean evap purge line
Clean EVAP purge line (pipe and rubber tube) using air blower.
00.70.45
>> GO TO 15.
15. CHECK INTERMITTENT INCIDENT

Revision: 2012 August EC-739 2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

>> INSPECTION END

Component Inspection (Drain filter)

INFOID:0000000008451183


1. CHECK DRAIN FILTER

- 1. Check visually for insect nests in the drain filter air inlet.
- 2. Check visually for cracks or flaws in the appearance.
- 3. Check visually for cracks or flaws in the hose.
- 4. Blow air into port A and check that it flows freely out of port B.
- 5. Block port B.
- 6. Blow air into port A and check that there is no leakage.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace drain filter. Refer to <u>EC-551, "System Description"</u>.

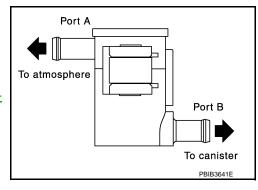


< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P0443 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Description INFOID:0000000008451188

The EVAP canister purge volume control solenoid valve is used to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

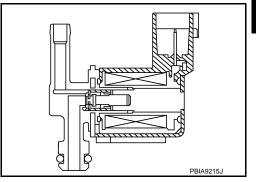

DTC Logic INFOID:0000000008451189

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name		DTC detecting condition	Possible cause
P0443	EVAP canister purge volume control solenoid	А	The canister purge flow is detected during the vehicle is stopped while the engine is running, even when EVAP canister purge volume control solenoid valve is completely closed.	 EVAP control system pressure sensor EVAP canister purge volume control solenoid valve (The valve is stuck open.) EVAP canister vent control valve
	valve	В	The canister purge flow is detected during the specified driving conditions, even when EVAP canister purge volume control solenoid valve is completely closed.	 EVAP canister Hoses (Hoses are connected incorrectly or clogged.)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

- Perform DTC CONFIRMATION PROCEDURE when the fuel is between 1/4 and 3/4 full, and vehicle is placed on flat level surface.
- Always perform test at a temperature of 5 to 60°C (41 to 140°F).
- Cool the vehicle so that engine coolant temperature becomes same level as ambient temperature.

Do you have CONSULT

YES >> GO TO 2. NO >> GO TO 4.

2.PERFORM DTC CONFIRMATION PROCEDURE A

(P)With CONSULT

- Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT.
- 3. Check that the following condition are met. FUEL T/TMP SE: 0 - 35°C (32 - 95°F)
- Start engine and wait at least 60 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

>> Go to EC-742, "Diagnosis Procedure". YES

NO >> GO TO 3.

3.PERFORM DTC CONFIRMATION PROCEDURE B

With CONSULT

EC-741 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

F

Ν

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

INFOID:0000000008451190

- 1. Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- Select "PURG VOL CN/V P1444" of "EVAPORATIVE SYSTEM" in "DTC WORK SUPPORT" mode with CONSULT.
- 5. Touch "START".
- Start engine and let it idle until "TESTING" on CONSULT changes to "COMPLETED". (It will take approximately 10 seconds.)

If "TESTING" is not displayed after 5 minutes, retry from step 2.

7. Touch "SELF-DIAG RESULT".

Which is displayed on CONSULT?

OK >> INSPECTION END

NG >> Go to EC-742, "Diagnosis Procedure".

4. PERFORM DTC CONFIRMATION PROCEDURE A

■With GST

- 1. Turn ignition switch ON.
- 2. Check the voltage between ECM harness connector and ground.

	ECM	Ground	Voltage (V)
Connector	Connector Terminal		voltage (v)
F8	43 (Fuel tank temperature sensor signal)	Ground	3.1 - 4.0

- 3. Start engine and wait at least 60 seconds.
- 4. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-742, "Diagnosis Procedure".

NO >> GO TO 5.

5. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and let it idle for at least 20 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-742, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- Disconnect EVAP canister purge volume control solenoid valve harness connector.
- Turn ignition switch ON.
- Check the voltage between EVAP canister purge volume control solenoid valve harness connector and ground.

•	rge volume control id valve	Ground	Voltage
Connector	Connector Terminal		
F32	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

2.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- IPDM E/R harness connector E14
- Harness for open or short between EVAP canister purge volume control solenoid valve and IPDM E/R
- Harness for open or short between EVAP canister purge volume control solenoid valve and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

3.check evap canister purge volume control solenoid valve output signal circuit FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between EVAP canister purge volume control solenoid valve harness connector and ECM harness connector.

•	rge volume control id valve	E	Continuity	
Connector Terminal		Connector	Terminal	
F32	F32 2		9	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

f 4 .CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR

- Disconnect EVAP control system pressure sensor harness connector.
- Check connectors for water.

Water should not exist.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace EVAP control system pressure sensor. Refer to FL-14, "Exploded View".

${f 5.}$ CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-760, "Component Inspection".

Is the inspection result normal?

YES-1 >> With CONSULT: GO TO 6.

YES-2 >> Without CONSULT: GO TO 7.

>> Replace EVAP control system pressure sensor. Refer to FL-14, "Exploded View".

$\mathsf{6}.$ CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

With CONSULT

- 1. Turn ignition switch OFF.
- Reconnect harness connectors disconnected.
- Start engine.
- 4. Perform "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT. Check that engine speed varies according to the valve opening.

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 7.

.CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to EC-744, "Component Inspection".

Is the inspection result normal?

Α

EC

D

F

Ν

Р

EC-743

Revision: 2012 August

2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

YES >> GO TO 8.

NO >> Replace EVAP canister purge volume control solenoid valve. Refer to <u>FL-14</u>, "Exploded View".

8.CHECK RUBBER TUBE FOR CLOGGING

- Disconnect rubber tube connected to EVAP canister vent control valve.
- 2. Check the rubber tube for clogging.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Clean the rubber tube using an air blower.

9. CHECK EVAP CANISTER VENT CONTROL VALVE

Refer to EC-751, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 10.


NO >> Replace EVAP canister vent control valve. Refer to FL-14, "Exploded View".

10.CHECK IF EVAP CANISTER IS SATURATED WITH WATER

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- 2. Check if water will drain from EVAP canister.

Does water drain from the EVAP canister?

YES >> GO TO 11. NO >> GO TO 13.

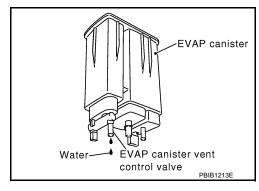

11. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

Is the inspection result normal?

YES >> GO TO 13. NO >> GO TO 12.

12. DETECT MALFUNCTIONING PART

Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection

>> Repair hose or replace EVAP canister. Refer to FL-14, "Exploded View".

13. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008451191

1. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

(P)With CONSULT

- 1. Turn ignition switch OFF.
- Reconnect all harness connectors disconnected.
- Disconnect EVAP purge hoses connected to EVAP canister purge volume control solenoid valve.


Revision: 2012 August EC-744 2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- Turn ignition switch ON.
- 5. Select "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT.
- Touch "Qd" and "Qu" on CONSULT screen to adjust "PURG VOL C/V" opening and check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

Condition (PURG VOL C/V value)	Air passage continuity between (A) and (B)
100%	Existed
0%	Not existed

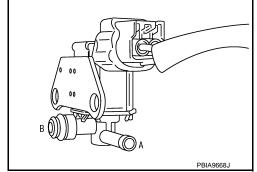

♥Without CONSULT

- Turn ignition switch OFF.
- Disconnect EVAP canister purge volume control solenoid valve harness connector.
- 3. Disconnect EVAP purge hoses connected to EVAP canister purge volume control solenoid valve.
- 4. Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.


Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals 1 and 2	Existed
No supply	Not existed



Is the inspection result normal?

YES >> INSPECTION END

>> Replace EVAP canister purge volume control solenoid NO valve. Refer to EM-26, "Exploded View".

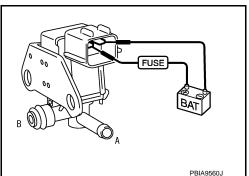

EC

Α

D

Е

F

Н

K

M

L

Ν


< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P0444, P0445 EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Description INFOID:0000000008451192

The EVAP canister purge volume control solenoid valve is used to control the flow rate of fuel vapor from the EVAP canister. The EVAP canister purge volume control solenoid valve is moved by ON/OFF pulses from the ECM. The longer the ON pulse, the greater the amount of fuel vapor that will flow through the valve.

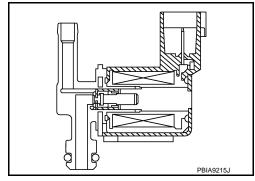

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0444	EVAP canister purge volume control solenoid valve circuit open	An excessively low voltage signal is sent to ECM through the valve	Harness or connectors (The solenoid valve circuit is open or shorted.) EVAP canister purge volume control solenoid valve
P0445	EVAP canister purge volume control solenoid valve circuit shorted	An excessively high voltage signal is sent to ECM through the valve	Harness or connectors (The solenoid valve circuit is shorted.) EVAP canister purge volume control solenoid valve

DTC CONFIRMATION PROCEDURE

1.CONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for at least 13 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-746, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451194

INFOID:00000000008451193

1. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- 2. Disconnect EVAP canister purge volume control solenoid valve harness connector.
- Turn ignition switch ON.
- Check the voltage between EVAP canister purge volume control solenoid valve harness connector and ground.

< DTC/CIRCUIT DIAGNOSIS >

>> INSPECTION END

[MR18DE (FOR CALIFORNIA)]

EVAP canister purg	ge volume control				
solenoid		Ground	Voltage		
Connector	Terminal		D		
F32	1	Ground	Battery voltage		
s the inspection YES >> GO NO >> GO 2.DETECT MA	TO 3. TO 2.				
theck the follow IPDM E/R hard Harness conno Harness for op	ving. ness connector ectors E8, F1 pen or short be	⁻ E14 tween EVAP ca			enoid valve and IPDM E/R enoid valve and ECM
>> Ror	nair onen circuit	t or short to are	und or short to p	ower in harnes	e or connectors
· ·	•	_	•		VE OUTPUT SIGNAL CIRCUIT
OR OPEN AND		ONOL VOLO	WE CONTROL (OCCUMOID VAL	VE COTT OT SIGNAL CINCOTT
	n switch OFF.				
2. Disconnect	ECM harness		_		
	•	een EVAP canis	ster purge volum	e control solen	oid valve harness connector and
ECIVI narnes	ss connector.				
EVAP canister nur	ne volume control				
EVAP canister purç solenoid		E	СМ	Continuity	
		Connector	CM Terminal	Continuity	
solenoid	d valve			Continuity	
Solenoid Connector F32	d valve Terminal	Connector F7	Terminal	Existed	
Connector F32	d valve Terminal 2 harness for sho	Connector F7 ort to ground ar	Terminal 9	Existed	
Solenoic Connector F32 Also check the inspection YES-1 >> With	to valve Terminal 2 harness for shoon result normal? h CONSULT: G	Connector F7 ort to ground ar C O TO 4.	Terminal 9	Existed	
Solenoic Connector F32 Also check the inspection YES-1 >> With YES-2 >> With	to valve Terminal 2 harness for showing result normal? CONSULT: Genout CONSULT	Connector F7 ort to ground ar O TO 4. GO TO 5.	Terminal 9 nd short to powe	Existed	
Connector F32 Also check the inspection YES-1 >> With YES-2 >> With NO >> Rep	Terminal 2 harness for shown result normal? h CONSULT: Grout CONSULT pair open circuit	Connector F7 Ort to ground an Orthogonal Connector O TO 4. Ground Ground an Orthogonal Connector and	Terminal 9 nd short to powe	Existed:	
Connector F32 Also check the inspection YES-1 >> With YES-2 >> With NO >> Rep	Terminal 2 harness for shown result normal? h CONSULT: Grout CONSULT pair open circuit	Connector F7 Ort to ground an Orthogonal Connector O TO 4. Ground Ground an Orthogonal Connector and	Terminal 9 nd short to powe	Existed:	s or connectors. /E OPERATION
Solenoic Connector F32 Also check the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVA	harness for short consult: General consu	Connector F7 Ort to ground an Orthogonal Connector O TO 4. Ground Ground an Orthogonal Connector and	Terminal 9 nd short to powe	Existed:	
solenoic Connector F32 Also check the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVA With CONSU Reconnect	harness for shoot consult. CONSULT: Good CONSULT cour consult. P CANISTER FULT	Connector F7 Ort to ground an Orthogonal Connector O TO 4. Ground Ground an Orthogonal Connector and	Terminal 9 nd short to power und or short to power ME CONTROL S	Existed:	
solenoic Connector F32 Also check the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVA With CONSU Reconnect a Start engine	to valve Terminal 2 harness for showing result normal? h CONSULT: Good CONSULT cair open circuit P CANISTER F ILT all harness condenses.	Connector F7 ort to ground and 2 O TO 4. THE GO TO 5. THE OR SHORT TO GROUND TO	Terminal 9 nd short to powe und or short to powe ME CONTROL Services.	Existed . ower in harnes OLENOID VAL	/E OPERATION
Solenoic Connector F32 Also check the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVA With CONSU Reconnect a Start engine Perform "PU	harness for shoot consult open circuit P CANISTER FULT all harness consult open circuit pall harness consult open circuit pall harness consult open circuit open ci	Connector F7 ort to ground and 2 O TO 4. THE GO TO 5. THE OF TO SHOP UNITY OF TO	Terminal 9 nd short to powe und or short to powe ME CONTROL Services.	Existed . ower in harnes OLENOID VAL	
Solenoid Connector F32 Also check the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVA With CONSU Reconnect a Start engine Perform "Pu according to	Terminal 2 harness for shown result normal? h CONSULT: Gonout CONSULT pair open circuit P CANISTER F ULT all harness conducted. URG VOL CONducted the valve open	Connector F7 Ort to ground and Ort to ground and Ort of the Control of the Contro	Terminal 9 nd short to powe und or short to powe ME CONTROL Services.	Existed . ower in harnes OLENOID VAL	/E OPERATION
Solenoic Connector F32 Also check the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVA With CONSU Reconnect a Start engine Perform "Pl according to the inspection YES >> GO	Terminal 2 harness for shown result normal? h CONSULT: Gonout CONSULT pair open circuit P CANISTER F ILT all harness condition by the valve open result normal? TO 6.	Connector F7 Ort to ground and Ort to ground and Ort of the Control of the Contro	Terminal 9 nd short to powe und or short to powe ME CONTROL Services.	Existed . ower in harnes OLENOID VAL	/E OPERATION
solenoic Connector F32 Also check the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVA With CONSU Reconnect a Start engine Perform "Pu according to the inspection YES >> GO NO >> GO	Terminal 2 harness for shown result normal? h CONSULT: Gonout CONSULT pair open circuit P CANISTER F ULT all harness conduct by the valve open result normal? TO 6. TO 5.	Connector F7 Ort to ground and 2 O TO 4. C GO TO 5. C or short to ground and 3 C TO TO 4. C TO	Terminal 9 Ind short to powe ound or short to powe of the control	Existed : ower in harnes OLENOID VAL	Check that engine speed varies
Solenoic Connector F32 Also check the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVA With CONSU Reconnect a Start engine Perform "Pu according to the inspection YES >> GO NO >> GO	Terminal 2 harness for shown result normal? h CONSULT: Gonout CONSULT pair open circuit P CANISTER F ULT all harness conduct by the valve open result normal? TO 6. TO 5.	Connector F7 Ort to ground and 2 O TO 4. C GO TO 5. C or short to ground and 3 C TO TO 4. C TO	Terminal 9 nd short to powe und or short to powe ME CONTROL Services.	Existed : ower in harnes OLENOID VAL	Check that engine speed varies
Solenoic Connector F32 Also check the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVA With CONSU Reconnect a Start engine Perform "Pu according to the inspection YES >> GO NO >> GO CHECK EVA	Terminal 2 harness for shown result normal? h CONSULT: Gonout CONSULT pair open circuit P CANISTER F ULT all harness conduct the valve open result normal? TO 6. TO 5. P CANISTER F	Connector F7 Ort to ground and 2 O TO 4. THE GO TO 5. THE OR SHORT TO GROUND TO THE COLUMN TO THE CO	Terminal 9 Ind short to powe ound or short to powe of the control	Existed : ower in harnes OLENOID VAL	Check that engine speed varies
Solenoid Connector F32 Also check Sthe inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVA With CONSU Reconnect a Start engine Perform "Pl according to sthe inspection YES >> GO NO >> GO CHECK EVA	Terminal 2 harness for show result normal? h CONSULT: Gonout CONSULT pair open circuit P CANISTER F ULT all harness conduct the valve open result normal? TO 6. TO 5. P CANISTER F 3, "Component	Connector F7 ort to ground and Control of the ground and Control of t	Terminal 9 Ind short to powe ound or short to powe of the control	Existed : ower in harnes OLENOID VAL	Check that engine speed varies
F32 Also check the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVA With CONSU Reconnect a Start engine Check Eva Check Eva the inspection YES >> GO NO >> GO	Terminal 2 harness for shown result normal? CONSULT: Gonout CONSULT: Gonout CONSULT CON	Connector F7 ort to ground and Control of the ground and Control of t	Terminal 9 Ind short to powe ound or short to powe of the control	Existed : ower in harnes OLENOID VAL	Check that engine speed varies
Solenoic Connector F32 Also check the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVA With CONSU Reconnect a Start engine Consumption YES >> GO NO >> GO CHECK EVA Refer to EC-748 Sthe inspection YES >> GO Sthe inspection YES >> GO Check EVA Refer to EC-748 Sthe inspection YES >> GO Start engine Start engine Start engine Consumption YES >> GO Check EVA Refer to EC-748 Sthe inspection YES >> GO	Terminal 2 harness for shown result normal? CONSULT: Gonout CONSULT: Gonout CONSULT CON	Connector F7 ort to ground and 2 O TO 4. THE GO TO 5. THO TO SHORT TO GROUND TO	Terminal 9 and short to powe found or short to powe for short to p	Existed : ower in harnes OLENOID VAL	Check that engine speed varies
Solenoic Connector F32 Also check the inspection YES-1 >> With YES-2 >> With NO >> Rep CHECK EVA With CONSU Reconnect a Start engine Perform "Pl according to the inspection YES >> GO CHECK EVA Refer to EC-748 the inspection YES >> GO Sthe inspection YES >> GO CHECK EVA Refer to EC-748 The inspection YES >> GO CHECK EVA Refer to EC-748 THE	Terminal 2 harness for show result normal? h CONSULT: Gonout CONSULT pair open circuit P CANISTER F ULT all harness conductor the valve open result normal? TO 6. TO 5. P CANISTER F 3, "Component or result normal? TO 6.	Connector F7 ort to ground and 2 O TO 4. F: GO TO 5. F: or short to ground and 3 O TO 4. F: GO TO 5. F: or short to ground and 3 O TO 4. F: GO TO 5. F: or short to ground and 3 O TO 4. F: GO TO 5. F: O TO 4. F: GO TO 5. F: O TO 4. F: O TO 5.	Terminal 9 and short to powe found or short to powe for short to p	Existed : ower in harnes OLENOID VAL	/E OPERATION Check that engine speed varies

Revision: 2012 August EC-747 2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Component Inspection


INFOID:0000000008451195

1. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

(P)With CONSULT

- Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Disconnect EVAP purge hoses connected to EVAP canister purge volume control solenoid valve.
- 4. Turn ignition switch ON.
- 5. Select "PURG VOL CONT/V" in "ACTIVE TEST" mode with CONSULT.
- Touch "Qd" and "Qu" on CONSULT screen to adjust "PURG VOL C/V" opening and check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.


Condition (PURG VOL C/V value)	Air passage continuity between (A) and (B)
100%	Existed
0%	Not existed

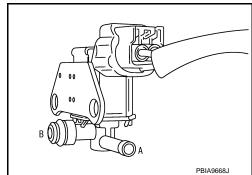

♥Without CONSULT

- 1. Turn ignition switch OFF.
- Disconnect EVAP canister purge volume control solenoid valve harness connector.
- 3. Disconnect EVAP purge hoses connected to EVAP canister purge volume control solenoid valve.
- 4. Check air passage continuity of EVAP canister purge volume control solenoid valve under the following conditions.

Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals 1 and 2	Existed
No supply	Not existed

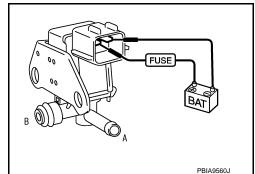

Is the inspection result normal?

YES >> INSPECTION END

NO

>> Replace EVAP canister purge volume control solenoid valve. Refer to EM-26, "Exploded View".

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P0447 EVAP CANISTER VENT CONTROL VALVE


Description INFOID:0000000008451196

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent.

This solenoid valve responds to signals from the ECM. When the ECM sends an ON signal, the coil in the solenoid valve is energized. A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System" diagnosis.

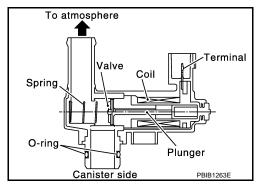

DTC Logic INFOID:0000000008451197

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0447	EVAP canister vent control valve circuit open	An improper voltage signal is sent to ECM through EVAP canister vent control valve.	Harness or connectors (The valve circuit is open or shorted.) EVAP canister vent control valve

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm battery voltage is more than 11 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and wait at least 8 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-749, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK EVAP CANISTER VENT CONTROL VALVE CIRCUIT

(P)With CONSULT

- Turn ignition switch OFF and then turn ON.
- Select "VENT CONTROL/V" in "ACTIVE TEST" mode with CONSULT.
- Touch "ON/OFF" on CONSULT screen. 3.
- Check for operating sound of the valve.

EC-749 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

Н

K

M

N

INFOID:0000000008451198

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Clicking sound should be heard.

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 3.

${f 3.}$ CHECK EVAP CANISTER VENT CONTROL VALVE POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect EVAP canister vent control valve harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between EVAP canister vent control valve harness connector and ground.

EVAP canister v	ent control valve	Ground	Voltage
Connector	Terminal	Glound	voltage
B20	B20 1		Battery voltage

Is the inspection result normal?

YES >> GO TO 5. NO >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- · Harness connectors E8, F1
- Harness connectors E105, M77
- Harness connectors B1. M18
- Harness for open or short between EVAP canister vent control valve and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK EVAP CANISTER VENT CONTROL VALVE OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between EVAP canister vent control valve harness connector and ECM harness connector.

EVAP canister vent control valve		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
B20	2	F7	28	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 6.

6. DETECT MALFUNCTIONING PART

Check the following.

- Junction block connector E8, F1
- Harness connectors E105, M77
- Harness connectors M79, B4
- Harness for open or short between EVAP canister vent control valve and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK RUBBER TUBE FOR CLOGGING

- 1. Disconnect rubber tube connected to EVAP canister vent control valve.
- 2. Check the rubber tube for clogging.

Is the inspection result normal?

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

YES >> GO TO 8.

NO >> Clean the rubber tube using an air blower.

8.CHECK EVAP CANISTER VENT CONTROL VALVE

Refer to EC-751, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace EVAP canister vent control valve. Refer to FL-14, "Exploded View".

9. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection


1. CHECK EVAP CANISTER VENT CONTROL VALVE-I

- Turn ignition switch OFF.
- Remove EVAP canister vent control valve from EVAP canister.
- Check portion (A) of EVAP canister vent control valve for being

Is it rusted?

YES >> Replace EVAP canister vent control valve. Refer to FL-14, "Exploded View".

NO >> GO TO 2.

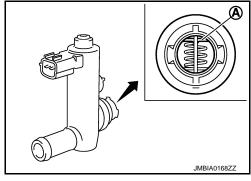

2. CHECK EVAP CANISTER VENT CONTROL VALVE-II

(P)With CONSULT

- 1. Reconnect harness connectors disconnected.
- 2. Turn ignition switch ON.
- 3. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.
- 4. Check air passage continuity and operation delay time.

Make sure new O-ring is installed properly.

VENT CONT/V condition	Air passage continuity between (A) and (B)
ON	Not existed
OFF	Existed

Operation takes less than 1 second.

®Without CONSULT

Check air passage continuity and operation delay time under the following conditions.

Make sure new O-ring is installed properly.

Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals (1) and (2)	Not existed
OFF	Existed

Operation takes less than 1 second.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace EVAP canister vent control valve. Refer to FL-14, "Exploded View".

JMBIA0169ZZ

Н

Α

EC

D

Е

INFOID:0000000008451199

K

M

Ν

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

3.check evap canister vent control valve-iii $\,$

(P)With CONSULT

- 1. Clean the air passage [portion (A) to (B)] of EVAP canister vent control valve using an air blower.
- 2. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.
- 3. Check air passage continuity and operation delay time. Make sure new O-ring is installed properly.


VENT CONT/V condition	Air passage continuity between (A) and (B)
ON	Not existed
OFF	Existed

Operation takes less than 1 second.

⋈Without CONSULT

- 1. Clean the air passage [portion (A) to (B)] of EVAP canister vent control valve using an air blower.
- 2. Check air passage continuity and operation delay time under the following conditions.

Make sure new O-ring is installed properly.

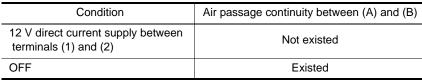


Operation takes less than 1 second.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP canister vent control valve. Refer to FL-14, "Exploded View".

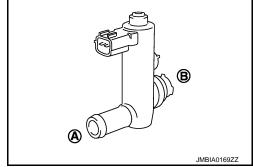

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P0448 EVAP CANISTER VENT CONTROL VALVE


Description INFOID:0000000008451200

The EVAP canister vent control valve is located on the EVAP canister and is used to seal the canister vent.

This solenoid valve responds to signals from the ECM. When the ECM sends an ON signal, the coil in the solenoid valve is energized. A plunger will then move to seal the canister vent. The ability to seal the vent is necessary for the on board diagnosis of other evaporative emission control system components.

This solenoid valve is used only for diagnosis, and usually remains opened.

When the vent is closed, under normal purge conditions, the evaporative emission control system is depressurized and allows "EVAP Control System" diagnosis.

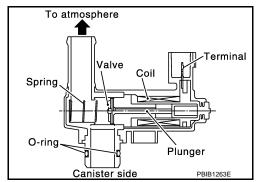

DTC Logic INFOID:0000000008451201

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	G
P0448	EVAP canister vent control valve close	EVAP canister vent control valve remains closed under specified driving conditions.	EVAP canister vent control valve EVAP control system pressure sensor and the circuit Blocked rubber tube to EVAP canister vent control valve EVAP canister is saturated with water	Н

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- 1. Turn ignition switch ON and wait at least 5 seconds.
- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON and select "DATA MONITOR" mode with CONSULT.
- 4. Start engine and let it idle for at least 1 minute.
- Repeat next procedures three times.
- Increase the engine speed up to 3,000 to 3,500 rpm and keep it for 2 minutes and 50 seconds to 3 minutes.

Never exceed 3 minutes.

- Fully released accelerator pedal and keep engine idle for about 5 seconds.
- Repeat next procedure 20 times.
- Quickly increase the engine speed up to 4,000 to 4,500 rpm or more and keep it for 25 to 30 seconds.

EC

Α

D

Е

F

K


M

N

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- Fully released accelerator pedal and keep engine idle for at least 35 seconds.

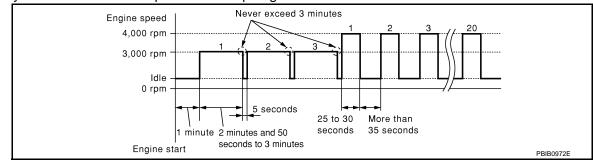

7. Check 1st trip DTC.

With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Go to EC-754, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451202

1. CHECK RUBBER TUBE

- 1. Turn ignition switch OFF.
- 2. Disconnect rubber tube connected to EVAP canister vent control valve.
- 3. Check the rubber tube for clogging.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Clean rubber tube using an air blower.

2.CHECK EVAP CANISTER VENT CONTROL VALVE

Refer to EC-755, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 3.


NO >> Replace EVAP canister vent control valve. Refer to FL-14, "Exploded View".

3. CHECK IF EVAP CANISTER IS SATURATED WITH WATER

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- 2. Check if water will drain from the EVAP canister.

Does water drain from EVAP canister?

YES >> GO TO 4. NO >> GO TO 6.

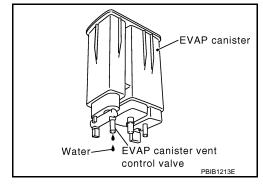

4. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

Is the inspection result normal?

YES >> GO TO 6. NO >> GO TO 5.

5. DETECT MALFUNCTIONING PART

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection

>> Repair hose or replace EVAP canister. Refer to FL-14, "Exploded View".

6. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR

- 1. Disconnect EVAP control system pressure sensor harness connector.
- Check connectors for water.

Water should not exist.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace EVAP control system pressure sensor. Refer to <u>FL-14</u>, "<u>Exploded View</u>".

7.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-760, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace EVAP control system pressure sensor. Refer to <u>FL-14. "Exploded View"</u>.

8.CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

1. CHECK EVAP CANISTER VENT CONTROL VALVE-I

- Turn ignition switch OFF.
- 2. Remove EVAP canister vent control valve from EVAP canister.
- Check portion (A) of EVAP canister vent control valve for being rusted.

Is it rusted?

YES >> Replace EVAP canister vent control valve. Refer to <u>FL-14</u>, "Exploded View".

NO >> GO TO 2.

JMBIA0168ZZ

2.CHECK EVAP CANISTER VENT CONTROL VALVE-II

(P)With CONSULT

- 1. Reconnect harness connectors disconnected.
- Turn ignition switch ON.
- 3. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.

EC

Α

D

Е

F

0

Н

INFOID:0000000008451203

Κ

L

M

Ν

Ρ

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Check air passage continuity and operation delay time.
 Make sure new O-ring is installed properly.

VENT CONT/V condition	Air passage continuity between (A) and (B)
ON	Not existed
OFF	Existed

Operation takes less than 1 second.

♥Without CONSULT

Check air passage continuity and operation delay time under the following conditions.

Make sure new O-ring is installed properly.

Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals (1) and (2)	Not existed
OFF	Existed

Operation takes less than 1 second.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace EVAP canister vent control valve. Refer to <u>FL-14</u>, "<u>Exploded View</u>".

3.CHECK EVAP CANISTER VENT CONTROL VALVE-III

(P)With CONSULT

- 1. Clean the air passage [portion (A) to (B)] of EVAP canister vent control valve using an air blower.
- 2. Perform "VENT CONTROL/V" in "ACTIVE TEST" mode.
- 3. Check air passage continuity and operation delay time.

Make sure new O-ring is installed properly.

VENT CONT/V condition	Air passage continuity between (A) and (B)
ON	Not existed
OFF	Existed

Operation takes less than 1 second.

♥Without CONSULT

- 1. Clean the air passage [portion (A) to (B)] of EVAP canister vent control valve using an air blower.
- Check air passage continuity and operation delay time under the following conditions.

Make sure new O-ring is installed properly.


Condition	Air passage continuity between (A) and (B)
12 V direct current supply between terminals (1) and (2)	Not existed
OFF	Existed

Operation takes less than 1 second.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP canister vent control valve. Refer to <u>FL-14</u>, "<u>Exploded View</u>".

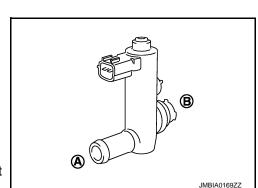


< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P0451 EVAP CONTROL SYSTEM PRESSURE SENSOR

Description INFOID:0000000008451204

The EVAP control system pressure sensor detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases.

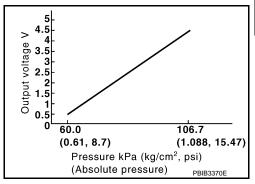

DTC Logic INFOID:0000000008451205

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0451	EVAP control system pressure sensor performance	ECM detects a sloshing signal from the EVAP control system pressure sensor	Harness or connectors (EVAP control system pressure sensor circuit is shorted.) [Crankshaft position sensor (POS) circuit is shorted.] (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) (Battery current sensor circuit is shorted.) (Tumble control valve position sensor circuit is shorted.) EVAP control system pressure sensor Crankshaft position sensor (POS) Accelerator pedal position sensor Refrigerant pressure sensor Battery current sensor Tumble control valve position sensor

DTC CONFIRMATION PROCEDURE

NOTE:

Never remove fuel filler cap during DTC confirmation procedure.

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

(I) With CONSULT>>GO TO 2.

®Without CONSULT>>GO TO 5.

2.PERFORM DTC CONFIRMATION PROCEDURE-1

With CONSULT

Start engine and let it idle for least 40 seconds.

Do not depress accelerator pedal even slightly.

2. Check 1st trip DTC.

Is 1st trip DTC detected?

>> Proceed to EC-758, "Diagnosis Procedure". YES

NO >> GO TO 3.

EC-757 Revision: 2012 August 2013 CUBE

EC

Α

Е

D

F

M

Ν

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

3.perform dtc confirmation procedure-2 $\,$

(P)With CONSULT

- 1. Select "EVAP DIAG READY" in "DATA MONITOR" mode of "ENGINE".
- Let it idle until "OFF" of "EVAP DIAG READY" changes to "ON".

NOTE:

It will take at most 2 hours until "OFF" of "EVAP DIAG READY" changes to "ON".

Turn ignition switch OFF and wait at least 90 minutes.

NOTE:

Never turn ignition switch ON during 90 minutes.

- 4. Turn ignition switch ON.
- 5. Select "EVAP LEAK DIAG" in "DATA MONITOR" mode of "ENGINE".
- 6. Check that "EVAP LEAK DIAG" indication.

Which is displayed on CONSULT?

CMPLT>> GO TO 4.

YET >> 1. Perform DTC CONFIRMATION PROCEDURE again.

2. GO TO 1.

4. PERFORM DTC CONFIRMATION PROCEDURE-3

(P)With CONSULT

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to <u>EC-758</u>, "<u>Diagnosis Procedure</u>".

NO >> INSPECTION END

${f 5.}$ PERFORM DTC CONFIRMATION PROCEDURE-4

@With GST

1. Start engine and let it idle for least 40 seconds.

NOTF:

Do not depress accelerator pedal even slightly.

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-758, "Diagnosis Procedure".

NO >> GO TO 6.

6.PERFORM DTC CONFIRMATION PROCEDURE-5

With GST

- 1. Let it idle for at least 2 hours.
- Turn ignition switch OFF and wait at least 90 minutes.

NOTE:

Never turn ignition switch ON during 90 minutes.

- 3. Turn ignition switch ON.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-758, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451206

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR CONNECTOR FOR WATER

1. Disconnect EVAP control system pressure sensor harness connector.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Check sensor harness connector for water.

Water should not exist.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness connector.

3.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch ON.
- Check the voltage between EVAP control system pressure sensor harness connector and ground.

•	tem pressure sen- or	Ground	Voltage
Connector Terminal			
B21	3	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 8.

>> GO TO 4. NO

f 4.CHECK SENSOR POWER SUPPLY CIRCUITS

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
	69	Tumble control valve actuator	F22	1
	74	Refrigerant pressure sensor	E49	3
F8	75	CKP sensor (POS)	F20	1
. •	76	EVAP control system pressure sensor	B21	3
	71	Battery current sensor	F53	1
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair short to ground or short to power in harness or connectors.

5. CHECK COMPONENTS

Check the following.

- Battery current sensor (Refer to EC-821, "Component Inspection".)
- Crankshaft position sensor (POS) (Refer to <u>EC-725</u>, "Component Inspection".)
- Refrigerant pressure sensor (Refer to EC-916, "Diagnosis Procedure".)
- Tumble control valve (Refer to EC-855, "Component Inspection".)

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace malfunctioning component.

6.CHECK APP SENSOR

Refer to EC-875, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 7.

7.REPLACE ACCELERATOR PEDAL ASSEMBLY

Replace accelerator pedal assembly. Refer to ACC-3, "Removal and Installation".

EC-759 Revision: 2012 August 2013 CUBE

EC

Α

Е

D

F

Н

N

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

>> INSPECTION END

8. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-760, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace EVAP control system pressure sensor. Refer to FL-14, "Exploded View".

9. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008451207

1. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Remove EVAP control system pressure sensor with its harness connector connected from EVAP canister. **Always replace O-ring with a new one.**
- 3. Install a vacuum pump to EVAP control system pressure sensor.
- 4. Turn ignition switch ON and check output voltage between ECM harness connector and ground under the following conditions.

	ECM	Condition	Voltage	
Connector	Terminal	[Applied vacuum kPa (kg/cm², psi)	voltage	
	42	Not applied	1.8 - 4.8 V	
F8	(EVAP control system pressure sensor signal)	-26.7 (-0.272, -3.87)	2.1 to 2.5 V lower than above value	

CAUTION:

- · Always calibrate the vacuum pump gauge when using it.
- Do not apply below -93.3 kPa (-0.952 kg/cm², -13.53 psi) or pressure over 101.3 kPa (1.033 kg/cm², 14.69 psi).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP control system pressure sensor. Refer to FL-14, "Exploded View".

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Α

D

Е

F

M


Ν

Р

P0452 EVAP CONTROL SYSTEM PRESSURE SENSOR

Description INFOID:0000000008451208

The EVAP control system pressure sensor detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases.

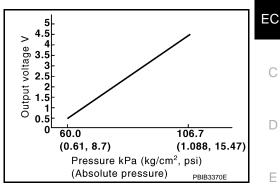

DTC Logic INFOID:0000000008451209

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0452	EVAP control system pressure sensor low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (EVAP control system pressure sensor circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.) (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) (Battery current sensor circuit is shorted.) (Tumble control valve position sensor circuit is shorted.) EVAP control system pressure sensor Crankshaft position sensor (POS) Accelerator pedal position sensor Refrigerant pressure sensor Battery current sensor Tumble control valve position sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

With CONSULT

- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds. 2.
- Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT.
- Make sure that "FUEL T/TMP SE" indication is more than 0°C (32°F).
- Start engine and wait at least 20 seconds.
- 7. Check 1st trip DTC.

With GST

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

1. Start engine and warm it up to normal operating temperature.

Set voltmeter probes to ECM harness connector and ground as per the following.

	ECM	Ground	
Connector	Connector Terminal		
F8	43 (Fuel tank temperature sensor signal)	Ground	

3. Make sure that the voltage is less than 4.2 V.

4. Turn ignition switch OFF and wait at least 10 seconds.

5. Start engine and wait at least 20 seconds.

6. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-762, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451210

1. CHECK GROUND CONNECTION

1. Turn ignition switch OFF.

2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK CONNECTOR

1. Disconnect EVAP control system pressure sensor harness connector.

Check sensor harness connector for water.

Water should not exist.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness connector.

3.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT-I

Turn ignition switch ON.

2. Check the voltage between EVAP control system pressure sensor harness connector and ground.

•	tem pressure sen- or	Ground	Voltage
Connector Terminal			
B21	3	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 10. NO >> GO TO 4.

4. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

EVAP control system pressure sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
B21	3	F8	76	Existed

EC

Α

Is the inspection result normal?

YES >> GO TO 6. NO >> GO TO 5.

D

Е

F

Н

Ν

Р

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B4. M79
- Harness connectors M77. E105
- Harness connectors E8, F1
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

6.CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
	69	Tumble control valve actuator	F22	1
	71	Battery current sensor	F53	1
F8	74	Refrigerant pressure sensor	E49	3
. •	75	CKP sensor (POS)	F20	1
	76	EVAP control system pressure sensor	B21	3
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair short to ground or short to power in harness or connectors.

7. CHECK COMPONENTS

Check the following.

- Battery current sensor (Refer to <u>EC-821, "Component Inspection"</u>.)
- Crankshaft position sensor (POS) (Refer to <u>EC-725</u>, "Component Inspection".)
- Refrigerant pressure sensor (Refer to EC-916, "Diagnosis Procedure".)
- Tumble control valve (Refer to <u>EC-855</u>, "Component Inspection".)

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace malfunctioning component.

8. CHECK APP SENSOR

Refer to EC-875, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 9.

9. REPLACE ACCELERATOR PEDAL ASSEMBLY

Replace accelerator pedal assembly. Refer to ACC-3, "Removal and Installation".

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

10.check evap control system pressure sensor ground circuit for open and short

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

EVAP control system pressure sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
B21	1	F8	51	Existed

^{4.} Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 12. NO >> GO TO 11.

11. DETECT MALFUNCTIONING PART

Check the following.

- · Harness connectors B4, M79
- Harness connectors M77, E105
- · Harness connectors E8, F1
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

12.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

EVAP control system pressure sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
B21	2	F8	42	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 14. NO >> GO TO 13.

13. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B4, M79
- Harness connectors M77, E105
- Harness connectors E8, F1
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

14. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-760, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace EVAP control system pressure sensor. Refer to FL-14, "Exploded View".

15. CHECK INTERMITTENT INCIDENT

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008451211

EC

D

Е

F

Α

1. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

- 1. Turn ignition switch OFF.
- 2. Remove EVAP control system pressure sensor with its harness connector connected from EVAP canister. **Always replace O-ring with a new one.**
- 3. Install a vacuum pump to EVAP control system pressure sensor.
- 4. Turn ignition switch ON and check output voltage between ECM harness connector and ground under the following conditions.

	ECM	Condition	Voltage
Connector	Terminal	[Applied vacuum kPa (kg/cm², psi)	voltage
	42	Not applied	1.8 - 4.8 V
F8	(EVAP control system pressure sensor signal)	-26.7 (-0.272, -3.87)	2.1 to 2.5 V lower than above value

CAUTION:

- · Always calibrate the vacuum pump gauge when using it.
- Do not apply below -93.3 kPa (-0.952 kg/cm², -13.53 psi) or pressure over 101.3 kPa (1.033 kg/cm², 14.69 psi).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP control system pressure sensor. Refer to FL-14, "Exploded View".

Н

K

L

M

Ν

O

Р


< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P0453 EVAP CONTROL SYSTEM PRESSURE SENSOR

Description INFOID:000000008451212

The EVAP control system pressure sensor detects pressure in the purge line. The sensor output voltage to the ECM increases as pressure increases.

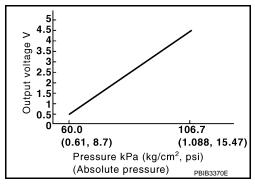

INFOID:0000000008451213

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0453	EVAP control system pressure sensor high input	An excessively high voltage from the sensor is sent to ECM.	Harness or connectors (EVAP control system pressure sensor circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.] (Accelerator pedal circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) (Battery current sensor circuit is shorted.) (Tumble control valve position sensor circuit is shorted.) EVAP control system pressure sensor Crankshaft position sensor (POS) Accelerator pedal position sensor Refrigerant pressure sensor EVAP canister vent control valve EVAP canister Rubber hose from EVAP canister vent control valve to vehicle frame Battery current sensor Tumble control valve position sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Always perform test at a temperature of 5°C (41°F) or more.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- 4. Select "DATA MONITOR" mode with CONSULT.
- 5. Make sure that "FUEL T/TMP SE" indication is more than 0°C (32°F).
- 6. Start engine and wait at least 20 seconds.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Α

EC

Е

Н

N

2013 CUBE

INFOID:0000000008451214

7	Check	1et tri	
,	CALIE CA	151 1111	, , , , , ,

With GST

1. Start engine and warm it up to normal operating temperature.

2. Set voltmeter probes to ECM harness connector and ground as per the following.

	Ground	
Connector	Terminal	Gloulia
F8	43 (Fuel tank temperature sensor signal)	Ground

- 3. Make sure that the voltage is less than 4.2 V.
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and wait at least 20 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-767, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK CONNECTOR

- Disconnect EVAP control system pressure sensor harness connector.
- Check sensor harness connector for water.

Water should not exist.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness connector.

3.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT

- Turn ignition switch ON.
- Check the voltage between EVAP control system pressure sensor harness connector and ground.

•	tem pressure sen- or	Ground	Voltage
Connector	Terminal		
B21	3	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 4.

Revision: 2012 August

f 4.CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

EC-767

[MR18DE (FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

EVAP control system pressure sensor		CM	Continuity	
Connector	Terminal	Connector Terminal		
B21	3	F8	76	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

5. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B4. M79
- Harness connectors M77, E105
- · Harness connectors E8, F1
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

6. CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
	69	Tumble control valve actuator	F22	1
	71	Battery current sensor	F53	1
F8	74	Refrigerant pressure sensor	E49	3
	75	CKP sensor (POS)	F20	1
	76	EVAP control system pressure sensor	B21	3
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair short to ground or short to power in harness or connectors.

7. CHECK COMPONENTS

Check the following.

- Battery current sensor (Refer to <u>EC-821, "Component Inspection"</u>.)
- Crankshaft position sensor (POS) (Refer to EC-725, "Component Inspection".)
- Refrigerant pressure sensor (Refer to EC-916, "Diagnosis Procedure".)
- Tumble control valve (Refer to <u>EC-855</u>, "Component Inspection".)

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace malfunctioning component.

8. CHECK APP SENSOR

Refer to EC-875, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 9.

REPLACE ACCELERATOR PEDAL ASSEMBLY

Replace accelerator pedal assembly. Refer to ACC-3, "Removal and Installation".

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

$10. \mathsf{check}$ evap control system pressure sensor ground circuit for open and SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

EVAP control system pressure sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
B21	1	F8	51	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 12. NO >> GO TO 11.

11. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B4, M79
- Harness connectors M77, E105
- Harness connectors E8, F1
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

12. Check evap control system pressure sensor input signal circuit for open and SHORT

1. Check the continuity between EVAP control system pressure sensor harness connector and ECM harness connector.

EVAP control system pressure sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
B21	2	F8	42	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 14. NO >> GO TO 13.

13. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B4, M79
- Harness connectors M77, E105
- Harness connectors E8. F1
- Harness for open or short between EVAP control system pressure sensor and ECM

>> Repair open circuit or short to ground or short to power in harness or connectors.

14. CHECK RUBBER TUBE

- Disconnect rubber tube connected to EVAP canister vent control valve.
- Check the rubber tube for clogging.

Is the inspection result normal?

YES >> GO TO 15.

NO >> Clean the rubber tube using an air blower, repair or replace rubber tube.

EC-769 Revision: 2012 August 2013 CUBE

EC

Е

F

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

15. CHECK EVAP CANISTER VENT CONTROL VALVE

Refer to EC-751, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 16.

NO >> Replace EVAP canister vent control valve. Refer to FL-14, "Exploded View".

16. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-760, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 17.


NO >> Replace EVAP control system pressure sensor. Refer to FL-14, "Exploded View".

17. CHECK IF EVAP CANISTER IS SATURATED WITH WATER

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- 2. Check if water will drain from the EVAP canister.

Does water drain from EVAP canister?

YES >> GO TO 18. NO >> GO TO 20.

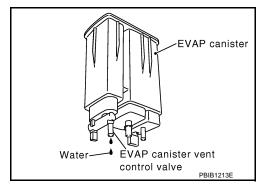

18. CHECK EVAP CANISTER

Weigh the EVAP canister with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

Is the inspection result normal?

YES >> GO TO 20. NO >> GO TO 19.

19. DETECT MALFUNCTIONING PART

Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection
 - >> Repair hose or replace EVAP canister. Refer to FL-14, "Exploded View".

20. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

NEOID-000000000845121

1. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

- 1. Turn ignition switch OFF.
- Remove EVAP control system pressure sensor with its harness connector connected from EVAP canister. Always replace O-ring with a new one.
- 3. Install a vacuum pump to EVAP control system pressure sensor.
- Turn ignition switch ON and check output voltage between ECM harness connector and ground under the following conditions.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

	ECM	Condition	Voltage
Connector	Terminal	[Applied vacuum kPa (kg/cm², psi)	voltage
F0	42 (F) (A P)	Not applied	1.8 - 4.8 V
F8	(EVAP control system pressure sensor signal)	-26.7 (-0.272, -3.87)	2.1 to 2.5 V lower than above value

EC

Α

CAUTION:

- Always calibrate the vacuum pump gauge when using it.
- Do not apply below -93.3 kPa (-0.952 kg/cm², -13.53 psi) or pressure over 101.3 kPa (1.033 kg/cm², 14.69 psi).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace EVAP control system pressure sensor. Refer to <u>FL-14, "Exploded View"</u>.

D

Е

F

G

Н

Κ

L

M

Ν

0


Р

DTC Logic

DTC DETECTION LOGIC

This diagnosis detects leaks in the EVAP line between fuel tank and EVAP canister purge volume control solenoid valve, using the negative pressure caused by decrease of fuel temperature in the fuel tank after turning ignition switch OFF.

If ECM judges there are no leaks, the diagnosis will be OK.

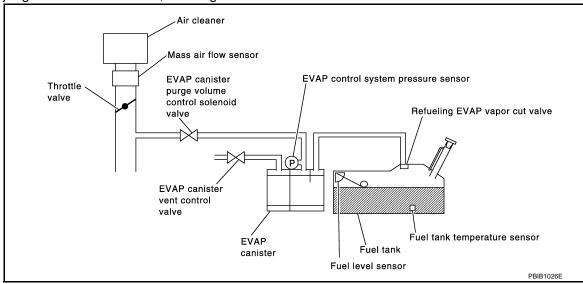

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0456	Evaporative emission control system leak	EVAP system has a leak. EVAP system does not operate properly.	 Incorrect fuel tank vacuum relief valve Incorrect fuel filler cap used Fuel filler cap remains open or fails to close. Foreign matter caught in fuel filler cap. Leak is in line between intake manifold and EVAP canister purge volume control solenoid valve. Foreign matter caught in EVAP canister vent control valve. EVAP canister or fuel tank leaks EVAP purge line (pipe and rubber tube) leaks EVAP purge line rubber tube bent Loose or disconnected rubber tube EVAP canister vent control valve and the circuit EVAP canister purge volume control solenoid valve and the circuit Fuel tank temperature sensor O-ring of EVAP canister vent control valve is missing or damaged EVAP canister is saturated with water EVAP control system pressure sensor Refueling EVAP vapor cut valve ORVR system leaks Fuel level sensor and the circuit Foreign matter caught in EVAP canister purge volume control solenoid valve

CAUTION:

- Use only a genuine NISSAN fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.
- If the fuel filler cap is not tightened properly, the MIL may come on.
- Use only a genuine NISSAN rubber tube as a replacement.

DTC CONFIRMATION PROCEDURE

P0456 EVAP CONTROL SYSTEM [MR18DE (FOR CALIFORNIA)] < DTC/CIRCUIT DIAGNOSIS > 1.PRECONDITIONING Α If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test. Turn ignition switch OFF and wait at least 10 seconds. EC Turn ignition switch ON. Turn ignition switch OFF and wait at least 10 seconds. Do you have CONSULT? YES >> GO TO 2. NO >> GO TO 4. 2.PERFORM DTC CONFIRMATION PROCEDURE-I D (P)With CONSULT Turn ignition switch ON and select "EVAP DIAG READY" in "DATA MONITOR" mode with CONSULT. Start engine and wait at idle until "OFF" of "EVAP DIAG READY" changes to "ON". Е NOTE: It will take at most 2 hours until "OFF" of "EVAP DIAG READY" changes to "ON". 3. Turn ignition switch OFF and wait at least 90 minutes. F NOTE: Never turn ignition switch ON during 90 minutes. 4. Turn ignition switch ON and select "EVAP LEAK DIAG" in "DATA MONITOR" mode with CONSULT. Check that "EVAP LEAK DIAG" indication. Which is displayed on CONSULT? CMPLT>> GO TO 3. >> Perform DTC CONFIRMATION PROCEDURE again. GO TO 1. Н 3.perform dtc confirmation procedure-ii Check 1st trip DTC. Is 1st trip DTC detected? YES >> Go to EC-773, "Diagnosis Procedure". NO >> INSPECTION END. 4. PERFORM DTC CONFIRMATION PROCEDURE K 1. Start engine and wait engine idle for at least 2 hours. Turn ignition switch OFF and wait at least 90 minutes. NOTE: Never turn ignition switch ON during 90 minutes.

- 3. Turn ignition switch ON.
- 4. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-773, "Diagnosis Procedure".

>> INSPECTION END. NO

Diagnosis Procedure

1.CHECK FUEL FILLER CAP DESIGN

1. Turn ignition switch OFF.

EC-773 Revision: 2012 August 2013 CUBE

M

N

INFOID:0000000008451221

Р

< DTC/CIRCUIT DIAGNOSIS >


[MR18DE (FOR CALIFORNIA)]

2. Check for genuine NISSAN fuel filler cap design.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace with genuine NISSAN fuel filler cap.

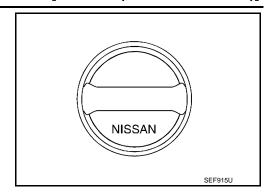

2. CHECK FUEL FILLER CAP INSTALLATION

Check that the cap is tightened properly by rotating the cap clockwise.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Open fuel filler cap, then clean cap and fuel filler neck threads using air blower. Then retighten until ratcheting sound is heard.

3. CHECK FUEL FILLER CAP FUNCTION

Check for air releasing sound while opening the fuel filler cap.

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. CHECK FUEL TANK VACUUM RELIEF VALVE

Refer to EC-777, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace fuel filler cap with a genuine one.

5.CHECK FOR EVAP LEAK

Refer to EC-963, "Inspection".

Is there any leak in EVAP line?

YES >> Repair or replace.

NO >> GO TO 6.

6.CHECK EVAP CANISTER VENT CONTROL VALVE

Check the following.

- EVAP canister vent control valve is installed properly.
 Refer to FL-14, "Exploded View".
- EVAP canister vent control valve.

EVAP canister vent control valve.

Refer to EC-755, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace EVAP canister vent control valve and O-ring. Refer to FL-14, "Exploded View".

7.CHECK IF EVAP CANISTER SATURATED WITH WATER

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]


- Remove EVAP canister (1) with EVAP canister vent control valve (2) and EVAP control system pressure sensor attached.
- Check if water will drain from the EVAP canister.

Does water drain from EVAP canister?

>> GO TO 8. YES

NO-1 >> With CONSULT: GO TO 10.

NO-2 >> Without CONSULT: GO TO 11.

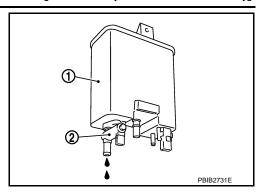

8.CHECK EVAP CANISTER

Weigh the EVAP canister assembly with the EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 2.2 kg (4.9 lb).

Is the inspection result normal?

YES-1 >> With CONSULT: GO TO 10.

YES-2 >> Without CONSULT: GO TO 11.

NO >> GO TO 9.

9. DETECT MALFUNCTIONING PART

Check the following.

- EVAP canister for damage
- EVAP hose between EVAP canister and vehicle frame for clogging or poor connection

>> Repair hose or replace EVAP canister. Refer to FL-14, "Exploded View".

10.check evap canister purge volume control solenoid valve operation

(P)With CONSULT

- 1. Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port.
- 2. Start engine and let it idle.
- 3. Select "PURG VOL CONT/V" in "ACTIVE TEST" mode.
- Touch "Qu" on CONSULT screen to increase "PURG VOL CONT/V" opening to 100%.
- Check vacuum hose for vacuum.

Vacuum should exist.

Is the inspection result normal?

YES >> GO TO 13.

NO >> GO TO 12.

11. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE OPERATION

- 1. Start engine and warm it up to normal operating temperature.
- 2. Stop engine.
- Disconnect vacuum hose to EVAP canister purge volume control solenoid valve at EVAP service port.
- 4. Start engine and let it idle for at least 80 seconds.
- 5. Check vacuum hose for vacuum when revving engine up to 2,000 rpm.

Vacuum should exist.

Is the inspection result normal?

YES >> GO TO 13.

NO >> GO TO 12.

12. CHECK VACUUM HOSE

Check vacuum hoses for clogging or disconnection. Refer to EC-551, "System Diagram". Is the inspection result normal?

EC

Α

D

Е

F

Н

M

N

Р

EC-775 2013 CUBE

Revision: 2012 August

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

YES >> GO TO 13.

NO >> Repair or reconnect the hose.

13. CHECK EVAP CANISTER PURGE VOLUME CONTROL SOLENOID VALVE

Refer to EC-744, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 14.

NO >> Replace EVAP canister purge volume control solenoid valve. Refer to EM-26, "Exploded View".

14. CHECK FUEL TANK TEMPERATURE SENSOR

Refer to EC-700, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace fuel level sensor unit. Refer to FL-5, "Exploded View".

15. CHECK EVAP CONTROL SYSTEM PRESSURE SENSOR

Refer to EC-760, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 16.

NO >> Replace EVAP control system pressure sensor. Refer to FL-14, "Exploded View".

16. CHECK EVAP PURGE LINE

Check EVAP purge line (pipe, rubber tube, fuel tank and EVAP canister) for cracks or improper connection. Refer to <u>EC-551</u>, "System Description".

Is the inspection result normal?

YES >> GO TO 17.

NO >> Repair or reconnect the hose.

17. CLEAN EVAP PURGE LINE

Clean EVAP purge line (pipe and rubber tube) using air blower.

>> GO TO 18.

18. CHECK EVAP/ORVR LINE

Check EVAP/ORVR line between EVAP canister and fuel tank for clogging, kink, looseness and improper connection. For location, refer to <u>EC-909</u>, "<u>Description</u>".

Is the inspection result normal?

YES >> GO TO 19.

NO >> Repair or replace hoses and tubes.

19. CHECK RECIRCULATION LINE

Check recirculation line between fuel filler tube and fuel tank for clogging, kink, cracks, looseness and improper connection.

Is the inspection result normal?

YES >> GO TO 20.

NO >> Repair or replace hose, tube or fuel filler tube.

20.CHECK REFUELING EVAP VAPOR CUT VALVE

Refer to EC-912, "Component Inspection (Refueling EVAP vapor cut valve)".

Is the inspection result normal?

YES >> GO TO 21.

NO >> Replace refueling EVAP vapor cut valve with fuel tank. Refer to FL-9, "Exploded View".

21. CHECK FUEL LEVEL SENSOR

Refer to MWI-43, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 22.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

NO >> Replace fuel level sensor unit. Refer to FL-5, "Exploded View".

22. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008451222

Α

EC

C

D


Е

F

Н

1. CHECK FUEL TANK VACUUM RELIEF VALVE

- 1. Turn ignition switch OFF.
- 2. Remove fuel filler cap.
- 3. Wipe clean valve housing.

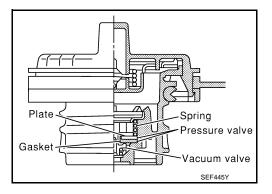

4. Check valve opening pressure and vacuum.

Pressure: 15.3 - 20.0 kPa (0.156 - 0.204 kg/cm², 2.22 -

2.90 psi)

Vacuum: -6.0 to -3.3 kPa (-0.061 to -0.034 kg/cm²,

-0.87 to -0.48 psi)

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

Vacuum/Pressure gauge Vacuum/ Pressure pump One-way valve Fuel filler cap adapter SEF943S

2.REPLACE FUEL FILLER CAP

Replace fuel filler cap.

CAUTION:

Use only a genuine fuel filler cap as a replacement. If an incorrect fuel filler cap is used, the MIL may come on.

>> INSPECTION END

M

Ν

L

K

Р

[MR18DE (FOR CALIFORNIA)]

P0460 FUEL LEVEL SENSOR

Description INFOID:000000008451223

The fuel level sensor is mounted in the fuel level sensor unit.

The sensor detects a fuel level in the fuel tank and transmits a signal to the combination meter. The combination meter sends the fuel level sensor signal to the ECM via the CAN communication line.

It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel mechanical float.

DTC Logic INFOID:000000008451224

DTC DETECTION LOGIC

NOTE:

- If DTC P0460 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0460 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-797, "DTC Logic".

When the vehicle is parked, naturally the fuel level in the fuel tank is stable. It means that output signal of the fuel level sensor does not change. If ECM senses sloshing signal from the sensor, fuel level sensor malfunction is detected.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0460	Fuel level sensor circuit noise	Even though the vehicle is parked, a signal being varied is sent from the fuel level sensor to ECM.	Harness or connectors (The CAN communication line is open or shorted) Harness or connectors (The sensor circuit is open or shorted) Combination meter Fuel level sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and wait maximum of 2 consecutive minutes.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-778, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451225

1. CHECK COMBINATION METER FUNCTION

Refer to MWI-30, "CONSULT Function (METER/M&A)".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to MWI-42, "Component Function Check"

2.CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

P0461 FUEL LEVEL SENSOR

Description INFOID:0000000008451226

The fuel level sensor is mounted in the fuel level sensor unit.

The sensor detects a fuel level in the fuel tank and transmits a signal to the combination meter. The combination meter sends the fuel level sensor signal to the ECM via the CAN communication line.

It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel mechanical float.

DTC Logic INFOID:0000000008451227

DTC DETECTION LOGIC

NOTE:

- If DTC P0461 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0461 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-797, "DTC Logic".

Driving long distances naturally affect fuel gauge level.

This diagnosis detects the fuel gauge malfunction of the gauge not moving even after a long distance has been driven.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	G
P0461	Fuel level sensor circuit range/performance	The output signal of the fuel level sensor does not change within the specified range even though the vehicle has been driven a long distance.	Harness or connectors (The CAN communication line is open or shorted) Harness or connectors (The sensor circuit is open or shorted) Combination meter Fuel level sensor	Н

DTC CONFIRMATION PROCEDURE

1. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-779, "Component Function Check".

Use component function check to check the overall function of the fuel level sensor function. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-780, "Diagnosis Procedure".

Component Function Check

1.PRECONDITIONING

WARNING:

When performing following procedure, be sure to observe the handling of the fuel. Refer to FL-2, "General Precautions".

TESTING CONDITION:

Before starting component function check, preparation of draining fuel and refilling fuel is required.

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 3.

2.PERFORM COMPONENT FUNCTION CHECK

(P)With CONSULT

NOTE:

Start from step 10, if it is possible to confirm that the fuel cannot be drained by 30 $\,\ell$ (7-7/8 US gal, 6-5/ 8 Imp gal) in advance.

Prepare a fuel container and a spare hose.

EC-779 2013 CUBE Revision: 2012 August

EC

Α

D

Е

L

M

Ν

Р

INFOID:0000000008451228

P0461 FUEL LEVEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- Release fuel pressure from fuel line, refer to <u>EC-961, "Inspection"</u>.
- 3. Remove the fuel feed hose on the fuel level sensor unit.
- 4. Connect a spare fuel hose where the fuel feed hose was removed.
- 5. Turn ignition switch OFF and wait at least 10 seconds then turn ON.
- 6. Select "FUEL LEVEL SE" in "DATA MONITOR" mode with CONSULT.
- 7. Check "FUEL LEVEL SE" output voltage and note it.
- 8. Select "FUEL PUMP RELAY" in "ACTIVE TEST" mode with CONSULT.
- 9. Touch "ON" and drain fuel approximately 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal) and stop it.
- 10. Check "FUEL LEVEL SE" output voltage and note it.
- 11. Fill fuel into the fuel tank for 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal).
- 12. Check "FUEL LEVEL SE" output voltage and note it.
- 13. Confirm whether the voltage changes more than 0.03 V during step 7 to 10 and 10 to 12.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-780, "Diagnosis Procedure".

3.perform component function check

®Without CONSULT

NOTE:

Start from step 8, if it is possible to confirm that the fuel cannot be drained by 30 $\,\ell$ (7-7/8 US gal, 6-5/8 Imp gal) in advance.

- 1. Prepare a fuel container and a spare hose.
- 2. Release fuel pressure from fuel line. Refer to <a>EC-961, "Inspection".
- 3. Remove the fuel feed hose on the fuel level sensor unit.
- 4. Connect a spare fuel hose where the fuel feed hose was removed.
- 5. Turn ignition switch ON.
- 6. Drain fuel by 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal) from the fuel tank using proper equipment.
- 7. Confirm that the fuel gauge indication varies.
- 8. Fill fuel into the fuel tank for 30 ℓ (7-7/8 US gal, 6-5/8 Imp gal).
- 9. Confirm that the fuel gauge indication varies.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-780, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008451229

1. CHECK COMBINATION METER FUNCTION

Refer to MWI-30, "CONSULT Function (METER/M&A)".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to MWI-42, "Component Function Check"

2. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

P0462, P0463 FUEL LEVEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P0462, P0463 FUEL LEVEL SENSOR

Description INFOID:0000000008451230

The fuel level sensor is mounted in the fuel level sensor unit.

The sensor detects a fuel level in the fuel tank and transmits a signal to the combination meter. The combination meter sends the fuel level sensor signal to the ECM via the CAN communication line.

It consists of two parts, one is mechanical float and the other is variable resistor. Fuel level sensor output voltage changes depending on the movement of the fuel mechanical float.

DTC Logic INFOID:0000000008451231

DTC DETECTION LOGIC

NOTE:

- If DTC P0462 or P0463 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0462 or P0463 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-797, "DTC Logic".

This diagnosis indicates the former, to detect open or short circuit malfunction.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0462	Fuel level sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (The CAN communication line is open or
P0463	Fuel level sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	 shorted) Harness or connectors (The sensor circuit is open or shorted) Combination meter Fuel level sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is between 11 V and 16 V at ignition switch ON.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON and wait at least 5 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-781, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK COMBINATION METER FUNCTION

Refer to MWI-30, "CONSULT Function (METER/M&A)".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to MWI-42, "Component Function Check"

2.check intermittent incident

Refer to GI-41, "Intermittent Incident".

EC

Α

D

Е

F

L

M

N

Р

2013 CUBE

INFOID:0000000008451232

Revision: 2012 August

P0462, P0463 FUEL LEVEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P0500 VSS

M/T MODELS

M/T MODELS: Description

INFOID:0000000008451233

The vehicle speed signal is sent to the combination meter from the "ABS actuator and electric unit (control unit)" via the CAN communication line. The combination meter then sends a signal to the ECM via the CAN communication line.

M/T MODELS: DTC Logic

INFOID:0000000008451234

DTC DETECTION LOGIC

NOTE:

- If DTC P0500 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0500 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to EC-797, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0500	Vehicle speed sensor	The vehicle speed signal sent to ECM is almost 0 km/h (0 MPH) even when vehicle is being driven.	Harness or connectors (The CAN communication line is open or shorted) Harness or connectors (The vehicle speed signal circuit is open or shorted) Wheel sensor Combination meter ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 5.

2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 3.

3.CHECK VEHICLE SPEED SIGNAL

NOTE:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

(P)With CONSULT

- Start engine.
- Read "VHCL SPEED SE" in "DATA MONITOR" mode with CONSULT. The vehicle speed on CONSULT should exceed 10 km/h (6 mph) when rotating wheels with suitable gear position.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Go to EC-784, "M/T MODELS : Diagnosis Procedure".

4. PERFORM DTC CONFIRMATION PROCEDURE

- Select "DATA MONITOR" mode with CONSULT.
- Warm engine up to normal operating temperature.
- Maintain the following conditions for at least 50 consecutive seconds. **CAUTION:**

Always drive vehicle at a safe speed.

EC-783 2013 CUBE Revision: 2012 August

EC

Α

D

Е

F

L

N

Р

ENG SPEED	2,200 - 6,000 rpm
COOLAN TEMP/S	More than 70°C (158°F)
B/FUEL SCHDL	4.0 - 31.8 msec
Selector lever	Except Neutral position
PW/ST SIGNAL	OFF

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-784, "M/T MODELS: Diagnosis Procedure".

NO >> INSPECTION END

5. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to <u>EC-784, "M/T MODELS: Component Function Check"</u>. Use component function check to check the overall function of the vehicle speed signal circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-784, "M/T MODELS : Diagnosis Procedure".

M/T MODELS: Component Function Check

1. PERFORM COMPONENT FUNCTION CHECK

With GST

- 1. Lift up drive wheels.
- 2. Start engine.
- Read vehicle speed signal in Service \$01 with GST.
 The vehicle speed signal on GST should be able to exceed 10 km/h (6 MPH) when rotating wheels with suitable gear position.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-784, "M/T MODELS : Diagnosis Procedure".

M/T MODELS: Diagnosis Procedure

INFOID:0000000008451236

INFOID:0000000008451235

1. CHECK DTC WITH "ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)"

Refer to BRC-23, "CONSULT Function".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace.

2. CHECK COMBINATION METER

Refer to MWI-30, "CONSULT Function (METER/M&A)".

>> INSPECTION END

EXCEPT FOR M/T MODELS

EXCEPT FOR M/T MODELS: Description

ECM receives vehicle speed signals from two different paths via CAN communication line: One is from the ABS actuator and electric unit (control unit) via the combination unit and the other is from TCM.

EXCEPT FOR M/T MODELS : DTC Logic

INFOID:0000000008451238

INFOID:0000000008451237

DTC DETECTION LOGIC

NOTE:

[MR18DE (FOR CALIFORNIA)]

ΞC

Е

Н

L

M

N

INFOID:0000000008451239

- If DTC P0500 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P0500 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to <u>EC-797</u>, "DTC Logic".

DTC No.	Trouble diagnosis (Trouble diagnosis content)	DTC detecting condition	Possible cause
P0500	VEH SPEED SEN/CIRC (Vehicle speed sensor)	At 20 km/h (13 MPH), ECM detects the following status continuously for 5 seconds or more: The difference between a vehicle speed calculated by a output speed sensor transmitted from TCM to ECM via CAN communication and the vehicle speed indicated on the combination meter exceeds 15km/h (10 MPH).	Harness or connector (The CAN communication line is open or shorted.) Combination meter ABS actuator and electric unit (control unit) Wheel sensor TCM Output speed sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC CONFIRMATION PROCEDURE has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is 10 V or more at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine.
- Shift the selector lever to D range and wait at least for 2 seconds.
- Drive the vehicle at least 5 seconds at 20 km/h (13 MPH) or more. CAUTION:

Always drive vehicle at a safe speed.

NOTE:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

4. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-785, "EXCEPT FOR M/T MODELS : Diagnosis Procedure"

NO >> INSPECTION END

EXCEPT FOR M/T MODELS : Diagnosis Procedure

1. CHECK DTC WITH TCM

Check DTC with TCM. Refer to TM-98, "CONSULT Function".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform trouble shooting relevant to DTC indicated.

2.CHECK DTC WITH ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Check DTC with ABS actuator and electric unit (control unit). Refer to BRC-23, "CONSULT Function".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Perform trouble shooting relevant to DTC indicated.

3. CHECK DTC WITH COMBINATION METER

Check DTC with combination meter. Refer to MWI-30, "CONSULT Function (METER/M&A)".

P0500 VSS

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Is the inspection result normal?

YES >> GO TO 4.

NO >> Perform trouble shooting relevant to DTC indicated.

4. CHECK OUTPUT SPEED SENSOR

Check output speed sensor. Refer to TM-118. "Diagnosis Procedure".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace or replace error-detected parts.

5. CHECK WHEEL SENSOR

Check wheel sensor. Refer to BRC-41, "Diagnosis Procedure".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-41, "Intermittent Incident".

NO >> Replace or replace error-detected parts.

[MR18DE (FOR CALIFORNIA)]

Α

EC

Е

Н

K

P0506 ISC SYSTEM

Description INFOID:0000000008451240

The ECM controls the engine idle speed to a specified level through the fine adjustment of the air, which is let into the intake manifold, by operating the electric throttle control actuator. The operating of the throttle valve is varied to allow for optimum control of the engine idling speed. The crankshaft position sensor (POS) detects the actual engine speed and sends a signal to the ECM.

The ECM controls the electric throttle control actuator so that the engine speed coincides with the target value memorized in the ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warming up, deceleration, and engine load (air conditioner, power steering and cooling fan operation, etc.).

DTC Logic INFOID:0000000008451241

DTC DETECTION LOGIC

NOTE:

If DTC P0506 is displayed with other DTC, first perform the trouble diagnosis for the other DTC.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0506	Idle speed control system RPM lower than expected	The idle speed is less than the target idle speed by 100 rpm or more.	Electric throttle control actuator Intake air leak

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

If the target idle speed is out of the specified value, perform EC-489, "IDLE AIR VOLUME LEARNING: Special Repair Requirement", before conducting DTC Confirmation Procedure.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.
- Always perform the test at a temperature above –10°C(14°F).

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and warm it up to normal operating temperature.
- Turn ignition switch OFF and wait at least 10 seconds.
- Start engine and run it for at least 1 minute at idle speed.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-787, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK INTAKE AIR LEAK

- Start engine and let it idle.
- Listen for an intake air leak after the mass air flow sensor.

Is intake air leak detected?

YES >> Discover air leak location and repair.

NO >> GO TO 2.

2.REPLACE ECM

- 1. Stop engine.
- Replace ECM.

INFOID:0000000008451242 P

EC-787 Revision: 2012 August 2013 CUBE

P0506 ISC SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

3. Perform <u>EC-486</u>, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement".

[MR18DE (FOR CALIFORNIA)]

P0507 ISC SYSTEM

Description INFOID:0000000008451243

The ECM controls the engine idle speed to a specified level through the fine adjustment of the air, which is let into the intake manifold, by operating the electric throttle control actuator. The operating of the throttle valve is varied to allow for optimum control of the engine idling speed. The crankshaft position sensor (POS) detects the actual engine speed and sends a signal to the ECM.

The ECM controls the electric throttle control actuator so that the engine speed coincides with the target value memorized in the ECM. The target engine speed is the lowest speed at which the engine can operate steadily. The optimum value stored in the ECM is determined by taking into consideration various engine conditions, such as during warming up, deceleration, and engine load (air conditioner, power steering and cooling fan operation, etc.).

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P0507 is displayed with other DTC, first perform the trouble diagnosis for the other DTC.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0507	Idle speed control system RPM higher than expected	The idle speed is more than the target idle speed by 200 rpm or more.	Electric throttle control actuator Intake air leak PCV system

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

If the target idle speed is out of the specified value, perform <u>EC-489, "IDLE AIR VOLUME LEARNING: Special Repair Requirement"</u>, before conducting DTC Confirmation Procedure.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.
- Always perform the test at a temperature above –10°C(14°F).

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and run it for at least 1 minute at idle speed.
- 4. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-789, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK PCV HOSE CONNECTION

Confirm that PCV hose is connected correctly.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace.

2. CHECK INTAKE AIR LEAK

- 1. Start engine and let it idle.
- Listen for an intake air leak after the mass air flow sensor.

EC

Α

D

Е

F

-

1

J

Κ

L

M

N

INFOID:00000000008451245

(

Р

2013 CUBE

P0507 ISC SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Is intake air leak detected?

YES >> Discover air leak location and repair.

NO >> GO TO 3.

3.REPLACE ECM

- 1. Stop engine.
- 2. Replace ECM.
- 3. Perform <u>EC-486</u>, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement".

P050A, P050B, P050E COLD START CONTROL

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P050A, P050B, P050E COLD START CONTROL

Description INFOID:000000008451246

ECM controls ignition timing and engine idle speed when engine is started with pre-warming up condition. This control promotes the activation of three way catalyst by heating the catalyst and reduces emissions.

INFOID:0000000008451247

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P050A, P050B or P050E is displayed with other DTC, first perform the trouble diagnosis for other DTC.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P050A	Cold start idle air control system performance	ECM does not control engine idle speed properly when engine is started with pre-warming up condition.	
P050B	Cold start ignition timing performance	ECM does not control ignition timing properly when engine is started with pre-warming up condition.	Lack of intake air volumeFuel injection systemECM
P050E	Cold start engine exhaust temperature too low	The temperature of the catalyst inlet does not rise to the proper temperature when the engine is started with pre-warming up condition.	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following procedure before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE-I

(P)With CONSULT

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT.
- Check the indication of "COOLAN TEMP/S".

With GST

Follow the procedure "With CONSULT" above.

Is the value of "COOLAN TEMP/S" between 15°C (59°F) and 36°C (97°F)?

YES >> GO TO 3.

NO-1 [If it is below 15°C (59°F)]>>Warm up the engine until the value of "COOLAN TEMP/S" reaches 15°C (59°F) or more. Retry from step 1.

NO-2 [If it is above 36°C (97°F)]>>Cool engine down to less than 36°C (97°F). Retry from step 1.

$oldsymbol{3}.$ PERFORM DTC CONFIRMATION PROCEDURE-II

(P)With CONSULT

- Set the select lever in N range.
- Start the engine and warm up in idle with the value of "COOLAN TEMP/S" between 15°C (59°F) and 40°C (104°F) for more than 15 seconds.
- Check 1st trip DTC.

Е

EC

Α

Н

J

N

L

Р

P050A, P050B, P050E COLD START CONTROL

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

With GST

Follow the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Go to EC-792, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451248

1. PERFORM IDLE AIR VOLUME LEARNING

Perform EC-489, "IDLE AIR VOLUME LEARNING: Special Repair Requirement".

Is Idle Air Volume Learning carried out successfully?

YES >> GO TO 2.

NO >> Follow the instruction of Idle Air Volume Learning.

2.CHECK INTAKE SYSTEM

Check for the cause of intake air volume lacking. Refer to the following.

- Crushed intake air passage
- Intake air passage clogging
- · Clogging of throttle body

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning part

3.check fuel injection system function

Perform DTC Confirmation Procedure for DTC P0171. Refer to EC-689, "DTC Logic".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Go to EC-690, "Diagnosis Procedure" for DTC P0171.

f 4.PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON.
- Erase DTC.
- 3. Perform DTC Confirmation Procedure.

See EC-791, "DTC Logic".

Is the 1st trip DTC P050A, P050B or P050E displayed again?

YES >> GO TO 5.

NO >> INSPECTION END

5.REPLACE ECM

- 1. Replace ECM.
- 2. Perform <u>EC-486</u>, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement".

Α

EC

D

Е

F

Н

K


N

INFOID:0000000008451251

P0603 ECM POWER SUPPLY

Description INFOID:0000000008451249

Battery voltage is supplied to the ECM even when the ignition switch is turned OFF for the ECM memory function of the DTC memory, the air-fuel ratio feedback compensation value memory, the idle air volume learning value memory, etc.

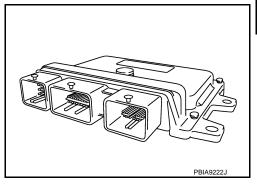

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0603	ECM power supply circuit	ECM back-up RAM system does not function properly.	Harness or connectors [ECM power supply (back-up) circuit is open or shorted.] ECM

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 10 seconds.
- 2. Turn ignition switch OFF and wait at least 5 minutes
- 3. Turn ignition switch ON and wait at least 10 seconds.
- Repeat steps 2 and 3 for five times.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-793, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK ECM POWER SUPPLY

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the voltage between ECM harness connector and ground.

ECI	М	Ground	Voltage	
Connector	Connector Terminal		voltage	
F8	F8 66		Battery voltage	

P0603 ECM POWER SUPPLY

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

2. DETECT MALFUNCTIONING PART

Check the following.

- 20 A fuse (No. 43)
- IPDM E/R harness connector E14
- Harness for open or short between ECM and IPDM E/R

>> Repair or replace harness or connectors.

3. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness or connectors.

4. PERFORM DTC CONFIRMATION PROCEDURE

(P)With CONSULT

- 1. Turn ignition switch ON.
- 2. Select "SELF-DIAG RESULTS" mode with CONSULT.
- 3. Touch "ERASE".
- 4. Perform DTC CONFIRMATION PROCEDURE.

See EC-793, "DTC Logic".

With GST

- 1. Turn ignition switch ON.
- 2. Select Service \$04 with GST.
- Perform DTC CONFIRMATION PROCEDURE.

See EC-793, "DTC Logic".

Is the 1st trip DTC P0603 displayed again?

YES >> GO TO 5.

NO >> INSPECTION END

5. REPLACE ECM

- 1. Replace ECM.
- 2. Perform <u>EC-486, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"</u>.

>> INSPECTION END

Α

EC

D

Е

F

Н


M

N

P0605 ECM

Description INFOID:0000000008451252

The ECM consists of a microcomputer and connectors for signal input and output and for power supply. The ECM controls the engine.

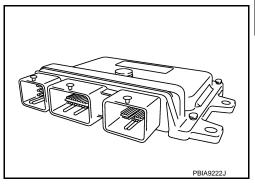

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition		Possible cause
		A)	ECM calculation function is malfunctioning.	
P0605	Engine control module	B)	ECM EEP-ROM system is malfunctioning.	• ECM
		C)	ECM self shut-off function is malfunctioning.	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2.perform dtc confirmation procedure for malfunction a

- 1. Turn ignition switch ON.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-796, "Diagnosis Procedure".

NO >> GO TO 3.

3.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B

- 1. Turn ignition switch ON and wait at least 1 second.
- 2. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
- 3. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-796, "Diagnosis Procedure".

NO >> GO TO 4.

${f 4.}$ PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION C

- 1. Turn ignition switch ON and wait at least 1 second.
- Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
- Repeat step 2 for 32 times.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-796, "Diagnosis Procedure".

NO >> INSPECTION END

P0605 ECM

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Diagnosis Procedure

INFOID:0000000008451254

1.INSPECTION START

- 1. Turn ignition switch ON.
- 2. Erase 1st trip DTC. Refer to "How to Erase DTC and 1st Trip DTC" in EC-588, "CONSULT Function".
- 3. Perform DTC CONFIRMATION PROCEDURE. Refer to EC-795, "DTC Logic".

Is the 1st trip DTC P0605 displayed again?

YES >> GO TO 2.

NO >> INSPECTION END

2.REPLACE ECM

- 1. Replace ECM.
- 2. Perform <u>EC-486</u>, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement".

>> INSPECTION END

P0607 ECM

Description INFOID:0000000008451255

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic INFOID:0000000008451256

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0607	CAN communication bus	When detecting error during the initial diagnosis of CAN controller of ECM.	• ECM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON.
- Check DTC.

Is DTC detected?

YES >> Go to EC-797, "Diagnosis Procedure".

>> INSPECTION END NO

Diagnosis Procedure

1. INSPECTION START

- Turn ignition switch ON.
- Erase DTC. Refer to "How to Erase DTC and 1st Trip DTC" in EC-588, "CONSULT Function".
- Perform DTC CONFIRMATION PROCEDURE. Refer to EC-797, "DTC Logic".
- Check DTC.

Is the DTC P0607 displayed again?

YES >> GO TO 2.

NO >> INSPECTION END

2.replace ecm

- Replace ECM.
- Perform EC-486. "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT: Special Repair Requirement".

>> INSPECTION END

EC

Α

D

Е

Н

INFOID:0000000008451257

K

M

N

P0643 SENSOR POWER SUPPLY

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P0643	Sensor power supply circuit short	ECM detects a voltage of power source for sensor is excessively low or high.	Harness or connectors (APP sensor 1 circuit is shorted.) (TP sensor circuit is shorted.) [Camshaft position sensor (PHASE) circuit is shorted.] Accelerator pedal position sensor Throttle position sensor Camshaft position sensor (PHASE)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 1 second.
- 2. Check DTC.

Is DTC detected?

YES >> Go to EC-798, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451259

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK ACCELERATOR PEDAL POSITION SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Disconnect accelerator pedal position (APP) sensor harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between APP sensor harness connector and ground.

APP :	sensor	Ground	Voltage
Connector	Terminal	Glound	vollage
E110	4	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 3.

3. CHECK SENSOR POWER SUPPLY CIRCUITS

Check harness for short to power and short to ground, between the following terminals.

P0643 SENSOR POWER SUPPLY

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

ECM		Sensor			
Connector	Terminal	Name	Connector	Terminal	
F8 -	72	Electric throttle control actuator	F29	2	
10	78	CMP sensor (PHASE)	F26	1	
E16	106	APP sensor	E110	4	
•	n result normal	<u>?</u>			
YES >> GO NO >> Rer		ound or short to power in harne	oce or connector	•	
1.CHECK CON	•	build of Short to power in harne	ess or connector	5.	
Check the follow Camshaft pos		HASE) (Refer to EC-728, "Con	nponent Inspecti	on".)	
s the inspection	•			,	
YES >> GO					
		position sensor (PHASE). Ref	er to <u>EM-55, "Ex</u>	<u>(ploded View"</u> .	
CHECK TP S					
Refer to EC-645	•				
s the inspectior YES >> GO		<u>?</u>			
NO >> GO	100.				
		OTTLE CONTROL ACTUATO)R		
.REPLACE E	LECTRIC THR	COTTLE CONTROL ACTUATO			
.REPLACE E	LECTRIC THR	OTTLE CONTROL ACTUATO actuator. Refer to EM-26, "Ex			
REPLACE E	LECTRIC THR	ol actuator. Refer to EM-26, "Ex			
REPLACE E	LECTRIC THR throttle contro	ol actuator. Refer to EM-26, "Ex			
REPLACE E Replace electric	LECTRIC THR throttle contro PECTION ENI SENSOR	ol actuator. Refer to <u>EM-26, "Ex</u> D			
REPLACE E Replace electric >> INS CHECK APP	throttle control SPECTION ENI SENSOR 5, "Component	ol actuator. Refer to EM-26, "Ex			
REPLACE E Replace electric >> INS CHECK APP Refer to EC-875 s the inspection YES >> GO	throttle control PECTION ENI SENSOR Component Presult normal	ol actuator. Refer to EM-26, "Ex			
REPLACE E Replace electric >> INS CHECK APP Refer to EC-875 the inspection YES >> GO NO >> GO	throttle control SPECTION END SENSOR To esult normal TO 9.	D Inspection".			
REPLACE E Replace electric >> INS CHECK APP Refer to EC-875 s the inspection YES >> GO NO >> GO REPLACE A	throttle control SPECTION END SENSOR TO 9. TO 8. CCELERATOR	ol actuator. Refer to EM-26, "Ex DINSPECTION". ?	(ploded View".		
REPLACE E Replace electric >> INS CHECK APP Refer to EC-875 s the inspection YES >> GO NO >> GO REPLACE A	throttle control SPECTION END SENSOR TO 9. TO 8. CCELERATOR	D Inspection".	(ploded View".	ion".	
REPLACE E Replace electric >> INS CHECK APP Refer to EC-875 s the inspection YES >> GO NO >> GO REPLACE A Replace acceler	throttle control SPECTION ENI SENSOR TO SENSOR TO 9. TO 8. CCELERATOR Trator pedal ass	Inspection". PEDAL ASSEMBLY sembly. Refer to ACC-3, "Remo	(ploded View".	i <u>on"</u> .	
REPLACE E Replace electric >> INS CHECK APP Refer to EC-875 the inspection YES >> GO NO >> GO REPLACE A Replace acceler >> INS	throttle control spection eni	Inspection". PEDAL ASSEMBLY Sembly. Refer to ACC-3, "Remo	(ploded View".	ion".	
REPLACE E Replace electric >> INS CHECK APP Refer to EC-875 the inspection YES >> GO NO >> GO REPLACE A Replace acceler >> INS CHECK INTE	throttle control PECTION ENI SENSOR TO 9. TO 8. CCELERATOR Tator pedal ass SPECTION ENI ERMITTENT IN	Inspection". PEDAL ASSEMBLY Sembly. Refer to ACC-3, "Remo	(ploded View".	ion".	
REPLACE E Replace electric >> INS CHECK APP Refer to EC-875 the inspection YES >> GO NO >> GO REPLACE A Replace acceler >> INS	throttle control PECTION ENI SENSOR TO 9. TO 8. CCELERATOR Tator pedal ass SPECTION ENI ERMITTENT IN	Inspection". PEDAL ASSEMBLY Sembly. Refer to ACC-3, "Remo	(ploded View".	ion".	
REPLACE E Replace electric >> INS CHECK APP Refer to EC-875 s the inspection YES >> GO NO >> GO REPLACE A Replace acceler >> INS CHECK INTER	throttle control PECTION ENI SENSOR TO 9. TO 8. CCELERATOR Tator pedal ass SPECTION ENI ERMITTENT IN	Inspection". R PEDAL ASSEMBLY rembly. Refer to ACC-3, "Remo	(ploded View".	ion".	
REPLACE E Replace electric >> INS CHECK APP Refer to EC-875 s the inspection YES >> GO NO >> GO REPLACE A Replace acceler >> INS CHECK INTER	throttle control c PECTION ENI c SENSOR c, "Component n result normal c TO 9. c TO 8. c CCELERATOR rator pedal ass c PECTION ENI ERMITTENT IN	Inspection". R PEDAL ASSEMBLY rembly. Refer to ACC-3, "Remo	(ploded View".	ion".	
REPLACE E Replace electric >> INS CHECK APP Refer to EC-875 s the inspection YES >> GO NO >> GO REPLACE A Replace acceler >> INS CHECK INTER	throttle control c PECTION ENI c SENSOR c, "Component n result normal c TO 9. c TO 8. c CCELERATOR rator pedal ass c PECTION ENI ERMITTENT IN	Inspection". R PEDAL ASSEMBLY rembly. Refer to ACC-3, "Remo	(ploded View".	ion".	
REPLACE E Replace electric >> INS CHECK APP Refer to EC-875 s the inspection YES >> GO NO >> GO REPLACE A Replace acceler >> INS CHECK INTER	throttle control c PECTION ENI c SENSOR c, "Component n result normal c TO 9. c TO 8. c CCELERATOR rator pedal ass c PECTION ENI ERMITTENT IN	Inspection". R PEDAL ASSEMBLY rembly. Refer to ACC-3, "Remo	(ploded View".	ion".	

P0850 PNP SWITCH

Description INFOID.000000008451260

For CVT models, transmission range switch is turn ON when the selector lever is P or N.

For M/T models, park/neutral position (PNP) range switch is ON when the selector lever is Neutral position. ECM detects the position because the continuity of the line (the ON) exists.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause	
P0850	Park/neutral position switch	For CVT models, the signal of transmission range switch is not changed in the process of engine starting and driving. For M/T models, the signal of the park/neutral position (PNP) switch is not changed in the process of engine starting and driving.	Harness or connectors [The transmission range switch circuit is open or shorted.(CVT models)] [The park/neutral position (PNP) switch circuit is open or shorted.(M/T models)] Transmission range switch (CVT models) Park/neutral position (PNP) switch (M/T models)	

DTC CONFIRMATION PROCEDURE

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 5.

2.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 3.

3. CHECK PNP SWITCH FUNCTION

(P)With CONSULT

- 1. Turn ignition switch ON.
- Select "P/N POSI SW" in "DATA MONITOR" mode with CONSULT. Then check the "P/N POSI SW" signal under the following conditions.

Selector lever position	Known-good signal
N or P position (CVT) Neutral position (M/T)	ON
Except above position	OFF

Is the inspection result normal?

YES >> GO TO 4.

NO >> Go to EC-801, "Diagnosis Procedure".

4. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Select "DATA MONITOR" mode with CONSULT.
- Start engine and warm it up to normal operating temperature.
- Maintain the following conditions for at least 60 consecutive seconds. CAUTION:

Always drive vehicle at a safe speed.

P0850 PNP SWITCH

[MR18DE (FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

ENG SPEED	1,200 - 6,375 rpm
COOLAN TEMP/S	More than 70°C (158°F)
B/FUEL SCHDL	2.5 - 31.8 msec
VHCL SPEED SE	More than 64 km/h (40 mph)
Selector lever	Suitable position

EC

Α

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-801, "Diagnosis Procedure".

NO >> INSPECTION END

D

Е

Н

M

Ν

Р

PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to <a>EC-801, <a>"Component Function Check".

NOTE:

Use component function check the overall function of the transmission range switch circuit (CVT models) or the park/neutral position (PNP) switch circuit (M/T models). During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-801, "Diagnosis Procedure".

INFOID:000000008451262

Component Function Check

1. PERFORM COMPONENT FUNCTION CHECK

Turn ignition switch ON.

2. Check the voltage between ECM harness connector and ground under the following conditions.

ECM		Ground	Condition		Voltage
Connector	Terminal	Glound	Condition		voltage
F7	14 (PNP signal)	Ground	Selector lever	P or N (CVT) Neutral (M/T)	Approx. 0 V
	(PNP Signal)			Except above	Battery voltage

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-801, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008451263

${\bf 1.} {\sf CHECK} \ {\sf TRANSMISSION} \ {\sf RANGE} \ {\sf SWITCH} \ ({\sf CVT}) \ {\sf OR} \ {\sf PNP} \ {\sf SWITCH} \ ({\sf M/T}) \ {\sf POWER} \ {\sf SUPPLY} \ {\sf CIRCUIT}$

- Turn ignition switch OFF.
- Disconnect transmission range switch (CVT) or park/neutral position (PNP) switch (M/T) harness connector.
- Turn ignition switch ON.
- 4. Check the voltage between transmission range switch (CVT) or PNP switch (M/T) harness connector and ground.

CVT models

Transmission	range switch	Ground	Voltage	
Connector	Terminal	Ground	voltage	
F21	1	Ground	Battery voltage	

P0850 PNP SWITCH

[MR18DE (FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

M/T models					
PNP sw	itch (M/T)	Ground	Voltage		
Connector	Terminal	Glound	voitage		
F23	2	Ground	Battery voltage		

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

2.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- Harness connectors E105, M77 (M/T)
- IPDM E/R harness connector E14 (CVT)
- 10 A fuse (No. 3) (M/T)
- 10 A fuse (No. 56) (CVT)
- Harness for open or short between PNP switch and fuse (M/T)

Is the inspection result normal?

>> Repair open circuit or short to ground or short to power in harness or connectors.

${f 3.}$ CHECK PNP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between transmission range switch (CVT) or PNP switch (M/T) harness connector and ECM harness connector.

CVT models

Transmission	sion range switch ECM		СМ	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F21	2	F7	14	Existed
M/T models				_
PNP switch		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F23	3	F7	14	Existed

^{4.} Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK TRANSMISSION RANGE SWITCH (CVT) OR PNP SWITCH (M/T)

Refer to TM-110, "Component Inspection (Transmission Range Switch)" (CVT) or TM-8, "PARK/NEUTRAL POSITION (PNP) SWITCH: Component Inspection" (M/T).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace transmission range switch (CVT). Refer to <u>TM-227, "Exploded View"</u>. or PNP switch (M/T). Refer to <u>TM-22, "Removal and Installation"</u>.

5. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

P1148 CLOSED LOOP CONTROL

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P1148 CLOSED LOOP CONTROL

DTC Logic INFOID:0000000008451264

DTC DETECTION LOGIC

NOTE:

DTC P1148 is displayed with another DTC for A/F sensor 1. Perform the trouble diagnosis for the corresponding DTC.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1148	Closed loop control function	The closed loop control function for bank 1 does not operate even when vehicle is driving in the specified condition.	1 1 - · · · · · · · · · · · · · · · · ·
1 1140	Closed loop control runction	The closed loop control function for bank 2 does not operate even when vehicle is driving in the specified condition.	A/F sensor 1

Diagnosis Procedure

DTC P1148 is displayed with DTC for A/F sensor1.

When the DTC is detected, perform the trouble diagnosis of DTC corresponding to A/F sensor1.

Refer to EC-938, "DTC Index".

EC

D

Е

Α

INFOID:0000000008451265

Н

K

M

L

Ν

0

P117A AIR FUEL RATIO

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P117A is displayed with other DTC, first perform the trouble diagnosis for the other DTC.

DTC No.	Trouble diagnosis name (Trouble diagnosis content)	DTC detecting condition	Possible cause
P117A	AIR FUEL RATIO B1 (Air fuel ratio imbalance among cylinders)	ECM detects a lean/rich air fuel ratio state in any cylinder for a specified length of time.	Fuel injector Exhaust gas leaks Incorrect fuel pressure Mass air flow sensor Intake air leaks Lack of fuel Incorrect PCV hose connection Improper spark plug Insufficient compression The fuel injector circuit is open or shorted ignition coil The ignition signal circuit is open or shorted

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING-1

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

NOTE:

Before performing the following procedure, confirm that battery voltage is 11 V or more at idle.

>> GO TO 2.

2.PRECONDITIONING-2

- 1. Turn ignition switch ON.
- Clear the mixture ratio self-learning value. Refer to <u>EC-490, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".</u>

Will CONSULT be used?

YES >> GO TO 3.

NO >> GO TO 6.

3.perform dtc confirmation procedure-1 $\,$

- Turn ignition switch ON.
- Select "COOLAN TEMP/S" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- 3. Start engine.
- 4. Make sure that "COOLAN TEMP/S" indicates more than 80°C (176°F).

>> GO TO 4.

4.PERFORM DTC CONFIRMATION PROCEDURE-2

With CONSULT

- Select "SYSTEM 1 DIAGNOSIS B B1" and "SYSTEM 1 DIAGNOSIS A B1" in "DATA MONITOR" mode of "ENGINE" using CONSULT.
- Drive vehicle under the following conditions for at least 5 consecutive seconds.

P117A AIR FUEL RATIO

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

CAUTION:

Always drive vehicle at a safe speed.

ENG SPEED	1,600 – 1,775rpm
COOLAN TEMP/S	More than 80°C (176°F)
B/FUEL SCHDL	3 – 12 msec
Selector lever	D position
SYSTEM 1 DIAGNOSIS B B1	PRSENT

EC

Α

NOTE:

- Drive the vehicle at approximately 88 km/h (55MPH) allows easy diagnosis.
- Keep the accelerator pedal as possible during cruising.

Е

D

Is "CMPLT" displayed?

YES >> GO TO 5.

NO >> GO TO 2.

F

5. PERFORM DTC CONFIRMATION PROCEDURE-3

Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to <u>EC-805</u>, "<u>Diagnosis Procedure</u>".

Check "SYSTEM 1 DIAGNOSIS A B1" indication.

NO >> INSPECTION END

Н

K

Р

6.PERFORM DTC CONFIRMATION PROCEDURE-4

⊗Without CONSULT

- 1. Start the engine and warm it up to normal operating temperature.
- 2. Drive vehicle under the following conditions for at least 5 consecutive seconds.

CAUTION:

Always drive vehicle at a safe speed.

		J

Engine speed	1,600 – 1,775 rpm
Calculated load value	21 –58 %
Selector lever	D position

NOTE:

- Drive the vehicle at approximately 88 km/h (55MPH) allows easy diagnosis.
- Keep the accelerator pedal as possible during cruising.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to <u>EC-805</u>, "<u>Diagnosis Procedure</u>".

NO >> INSPECTION END

INFOID:0000000008451267

2013 CUBE

Diagnosis Procedure

1. CHECK FOR INTAKE AIR LEAK

- 1. Stop engine and check the following for connection.
- Air duct
- Vacuum hoses
- PCV hose
- Intake air passage between air duct to intake manifold
- Start engine and let it idle.
- 3. Listen for an intake air leak after the mass air flow sensor.


Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace error-detected parts.

2.CHECK EXHAUST GAS LEAK

- 1. Stop engine and visually check exhaust tube, three way catalyst and muffler for dents connection.
- 2. Start engine and let it idle.
- 3. Listen for an exhaust gas leak before three way catalyst (manifold).

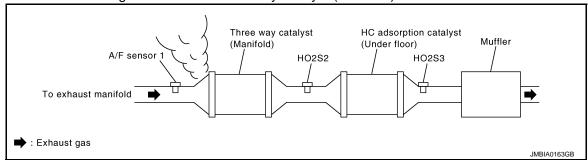

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace error-detected parts.

3.CHECK FUEL PRESSURE

- Release fuel pressure to zero. Refer to <u>EC-961</u>, "Inspection".
- 2. Check fuel pressure. Refer to EC-961, "Inspection".

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 9.

4. CHECK MASS AIR FLOW SENSOR

(P)With CONSULT

Check "MASS AIR FLOW" in "DATA MONITOR" mode of "ENGINE" using CONSULT.

For specification, refer to EC-965, "Mass Air Flow Sensor".

Without CONSULT

Check mass air flow sensor signal in Service \$01 using GST.

For specification, refer to EC-965, "Mass Air Flow Sensor".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check connectors for rusted terminals or loose connections in the mass air flow sensor circuit or grounds. Refer to <u>EC-629</u>, "<u>Diagnosis Procedure</u>".

${f 5.}$ CHECK FUNCTION OF FUEL INJECTOR-1

(I) With CONSULT

- Start engine.
- Perform "POWER BALANCE" in "ACTIVE TEST" mode of "ENGINE" using CONSULT.
- 3. Check that each circuit produces a momentary engine speed drop.

♥Without CONSULT

- Let engine idle.
- Listen to each fuel injector operating sound.


Clicking noise should be heard.

Is the inspection result normal?

YES >> GO TO 6.

NO

>> Perform trouble diagnosis for fuel injector, refer to <u>EC-897</u>, "Component Function Check".

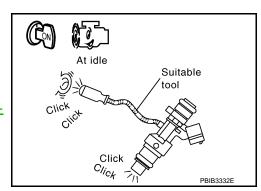

6. CHECK FUNCTION OF FUEL INJECTOR-2


Perform the following procedure in a place with no combustible objects and good ventilation.

- 1. Turn ignition switch OFF.
- Confirm that the engine is cooled down and there are no fire hazards near the vehicle.
- 3. Disconnect all fuel injector harness connectors.
- 4. Remove fuel tube assembly. Refer to EM-37, "Removal and Installation". Keep fuel hose and all fuel injectors connected to fuel tube.
- 5. Disconnect all ignition coil harness connectors.
- 6. Prepare pans or saucers under each fuel injector.
- 7. Crank engine for approximately 3 seconds.
 - Fuel should be sprayed evenly for each fuel injector.
 - Fuel must not drip from the tip of fuel injector.

Is the inspection result normal?

YES >> GO TO 7.

>> Replace fuel injector. Refer to EM-37, "Removal and NO Installation".

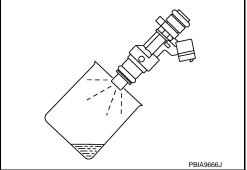

7.CHECK FUNCTION OF IGNITION COIL-1

CAUTION:

Perform the following steps in a well-ventilated area with no combustibles.

- Turn ignition switch OFF.
- Remove fuel pump fuse from IPDM E/R to release fuel pressure.

NOTE:

CONSULT must not be used to release fuel pressure. It develops again during the following steps, if released by using CONSULT.

- 3. Start the engine.
- 4. After an engine stall, crank the engine two or three times to release all the fuel pressure.
- 5. Turn ignition switch OFF.
- 6. Disconnect all the harness connectors of ignition coil to prevent electric discharge from occurring in ignition coil.
- 7. Remove ignition coil assembly and spark plug of cylinder. Refer to EM-42, "Removal and Installation".
- 8. Crank engine for 5 seconds or more to remove combustion gas in the cylinder.
- 9. Connect spark plug and harness connector to ignition coil.
- 10. Allow a 13-17mm (0.52-0.66 in) spacing between spark plug and grounded metal portion as shown in the figure to fix the ignition coil with a rope or an equivalent.
- 11. Crank the engine for approximately 3 seconds to see if sparking occurs between spark plug and the grounded metal portion.

Spark should be generated.

CAUTION:

- The discharge voltage becomes 20 kV or higher. Therefore, always stay away from the spark plug and ignition coil at least 50 cm (19.7 in) during the inspection.
- Leaving a space of more than 17mm (0.66 in) may damage the ignition coil.

NOTE:

When the gap is less than 13 mm (0.52 in), a the spark might be generated even if the coil is malfunctioning.

EC-807

Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 10.

 $oldsymbol{8}$.CHECK COMPRESSION PRESSURE

13 - 17 mm (0.52-0.66 in) Grounded metal portion (Cylinder head, cylinder block, etc.) JMBIA0066GB

2013 CUBE

Revision: 2012 August

EC

Α

D

Е

Н

M

N

P117A AIR FUEL RATIO

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Check compression pressure. Refer to EM-21, "Inspection".

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-41, "Intermittent Incident".

NO >> Check pistons, piston rings, valves, valve seats and cylinder head gaskets.

9. DETECT MALFUNCTIONING PART

Check fuel hoses and fuel tubes for clogging.

Is the inspection result normal?

YES >> Replace fuel filter and fuel pump assembly. Refer to FL-5, "Removal and Installation".

NO >> Repair or replace error-detected parts.

10. CHECK FUNCTION OF IGNITION COIL-2

- 1. Turn ignition switch OFF.
- 2. Disconnect spark plug and connect a non-malfunctioning spark plug.
- 3. Crank engine for approximately 3 seconds, and recheck whether spark is generated between the spark plug and the grounded metal portion.

Spark should be generated.

Is the inspection result normal?

YES >> GO TO 11.

NO >> Check ignition coil, power transistor and their circuits. Refer to EC-903, "Component Function <a href="Check".

11. CHECK SPARK PLUG


Check the initial spark plug for fouling, etc.

Is the inspection result normal?

YES >> 1. Repair or clean spark plug. Refer to <u>EM-17</u>, "Inspection".

2. GO TO 12.

NO >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to EM-42, "Removal and Installation".

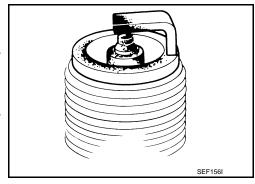

12. CHECK FUNCTION OF IGNITION COIL-3

- 1. Reconnect the initial spark plugs.
- 2. Crank engine for approximately 3 seconds, and recheck whether spark is generated between the spark plug and the grounded portion.

Spark should be generated.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-41, "Intermittent Incident".

NO >> Replace spark plug(s) with standard type one(s). For spark plug type, refer to EM-42, "Removal and Installation".

P1212 TCS COMMUNICATION LINE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P1212 TCS COMMUNICATION LINE

Description INFOID:0000000008451268

This CAN communication line is used to control the smooth engine operation during the TCS operation. Pulse signals are exchanged between ECM and "ABS actuator and electric unit (control unit)".

Be sure to erase the malfunction information such as DTC not only for "ABS actuator and electric unit (control unit)" but also for ECM after TCS related repair.

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P1212 is displayed with DTC U1001, first perform the trouble diagnosis for DTC U1001. Refer to <u>EC-609</u>, "DTC Logic".
- If DTC P1212 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to <u>EC-797</u>, "<u>DTC Logic"</u>.

Freeze frame data is not stored in the ECM for this self-diagnosis.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1212	TCS communication line	ECM can not receive the information from "ABS actuator and electric unit (control unit)" continuously.	Harness or connectors (The CAN communication line is open or shorted.) ABS actuator and electric unit (control unit) Dead (Weak) battery

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10.5V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for at least 10 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-809, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

Perform the trouble diagnosis for TCS. Refer to GI-37, "Work Flow".

NOTE:

If DTC P1212 is displayed with DTC UXXXX and/or P0607, perform the following trouble diagnosis.

- Trouble diagnosis for DTC UXXXX, Refer to <u>EC-938, "DTC_Index"</u>.
- Trouble diagnosis for DTC P0607, Refer to EC-797, "DTC Logic".

EC

Α

D

F

K

INFOID:0000000008451270

Ν

O

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P1217 ENGINE OVER TEMPERATURE

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P1217 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P1217 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to <u>EC-797</u>, "DTC Logic".

If the cooling fan or another component in the cooling system malfunctions, engine coolant temperature will rise.

When the engine coolant temperature reaches an abnormally high temperature condition, a malfunction is indicated.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1217	Engine over temperature (Overheat)	 Cooling fan does not operate properly (Overheat). Cooling fan system does not operate properly (Overheat). Engine coolant was not added to the system using the proper filling method. Engine coolant is not within the specified range. 	Harness or connectors (The cooling fan circuit is open or shorted.) IPDM E/R (Cooling fan relay-1) Cooling fan relays-2 and -3 Cooling fan motor Radiator hose Radiator Radiator cap Reservoir tank Water pump Thermostat Water control valve

CAUTION:

When a malfunction is indicated, be sure to replace the coolant. Refer to <u>CO-9</u>, "<u>Draining</u>". Also, replace the engine oil. Refer to <u>LU-8</u>, "<u>Refilling</u>".

- 1. Fill radiator with coolant up to specified level with a filling speed of 2 liters per minute. Be sure to use coolant with the proper mixture ratio. Refer to MA-10, "Anti-Freeze Coolant Mixture Ratio".
- 2. After refilling coolant, run engine to ensure that no water-flow noise is emitted.

DTC CONFIRMATION PROCEDURE

1. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-810, "Component Function Check".

NOTE:

Use component function check to check the overall function of the cooling fan. During this check, a DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-811, "Diagnosis Procedure".

Component Function Check

INFOID:0000000008451272

1.PERFORM COMPONENT FUNCTION CHECK-I

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could be caused by high pressure fluid escaping from the radiator.

Wrap a thick cloth around cap. Carefully remove the cap by turning it a quarter turn to allow built-up pressure to escape. Then turn the cap all the way off.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]


Check the coolant level in the reservoir tank and radiator.

Allow engine to cool before checking coolant level.

Is the coolant level in the reservoir tank and/or radiator below the proper range?

YES >> Go to EC-811, "Diagnosis Procedure".

NO >> GO TO 2.

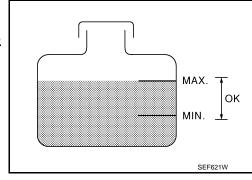

2.PERFORM COMPONENT FUNCTION CHECK-II

Confirm whether customer filled the coolant or not.

Did customer fill the coolant?

YES >> Go to EC-811, "Diagnosis Procedure".

NO >> GO TO 3.

3.perform component function check-iii

(P)With CONSULT

- 1. Turn ignition switch ON.
- Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT.
- 3. Make sure that cooling fan motor operates at each speed (LOW/HI).

Without CONSULT

Perform IPDM E/R auto active test and check cooling fan motor operation. Refer to PCS-11, "Diagnosis Description".

Is the inspection result normal?

YES >> INSPECTION END

>> Go to EC-811, "Diagnosis Procedure". NO

Diagnosis Procedure

1. CHECK COOLING FAN OPERATION

(II) With CONSULT

- 1. Turn ignition switch ON.
- Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT.
- Make sure that cooling fan motor operates at each speed (LOW/HI).

Without CONSULT

- 1. Perform IPDM E/R auto active test and check cooling fan motor operation. Refer to PCS-11, "Diagnosis Description".
- Make sure that cooling fan motor operates at each speed (Low/High).

Is the inspection result normal?

YFS >> GO TO 2.

NO >> Go to EC-893, "Diagnosis Procedure".

2.CHECK COOLING SYSTEM FOR LEAK-I

Check cooling system for leak. Refer to CO-9, "Inspection".

Is leakage detected?

YES >> GO TO 3.

NO >> GO TO 4.

3.CHECK COOLING SYSTEM FOR LEAK-II

Check the following for leak.

- Hose (Refer to <u>CO-25, "Inspection"</u>.)
- Radiator (Refer to CO-17, "Inspection".)
- Water pump (Refer to <u>CO-20, "Inspection"</u>.)

Α

EC

D

Е

F

INFOID:0000000008451273

K

N

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

>> Repair or replace malfunctioning part.

4. CHECK RADIATOR CAP

Check radiator cap. Refer to CO-13, "RADIATOR CAP: Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace radiator cap. Refer to CO-15, "Exploded View".

CHECK THERMOSTAT

Check thermostat. Refer to CO-23, "Inspection".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace thermostat. Refer to CO-22, "Removal and Installation".

6. CHECK WATER CONTROL VALVE

Check water control valve. Refer to CO-26, "Water Control Valve".

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace water control valve. Refer to CO-24, "Exploded View".

7.check engine coolant temperature sensor

Refer to EC-639, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace engine coolant temperature sensor. Refer to CO-24, "Exploded View".

8. CHECK MAIN 12 CAUSES

If the cause cannot be isolated, check the following.

Engine	Step	Inspection item	Equipment	Standard	Reference page
OFF	1	Blocked radiator Blocked condenser Blocked radiator grille Blocked bumper	Visual	No blocking	_
Ī	2	Coolant mixture	Coolant tester	MA-10, "Anti-Freeze Coo	olant Mixture Ratio"
	3	Coolant level	Visual	Coolant up to MAX level in reservoir tank and radiator filler neck	CO-9, "Inspection"
	4	Radiator cap	Pressure tester	CO-13, "RADIATOR CAP	: Inspection"
ON*2	5	Coolant leaks	Visual	No leaks	CO-9, "Inspection"
ON* ²	6	Thermostat	Touch the upper and lower radiator hoses	Both hoses should be hot	CO-23, "Inspection"
ON* ¹	7	Cooling fan motor	• CONSULT	Operating	EC-893, "Component Function Check"
OFF	8	Combustion gas leak	Color checker chemi- cal tester 4 Gas ana- lyzer	Negative	_
ON* ³	9	Coolant temperature gauge	Visual	Gauge less than 3/4 when driving	_
		Coolant overflow to reservoir tank	Visual	No overflow during driving and idling	CO-9, "Inspection"
OFF* ⁴	10	Coolant return from reservoir tank to radi- ator	Visual	Should be initial level in reservoir tank	CO-9, "Inspection"

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Engine	Step	Inspection item	Equipment	Standard	Reference page
OFF	11	Cylinder head	Straight gauge feeler gauge	0.1 mm (0.004 in) Maximum distortion (warping)	EM-69, "Disassembly and Assembly"
	12	Cylinder block and pistons	Visual	No scuffing on cylinder walls or piston	EM-98, "Inspection"

^{*1:} Turn the ignition switch ON.

For more information, refer to CO-4, "Troubleshooting Chart".

>> INSPECTION END

Α

EC

С

D

Е

F

G

Н

Κ

L

M

Ν

0

^{*2:} Engine running at 3,000 rpm for 10 minutes.

^{*3:} Drive at 90 km/h (56 MPH) for 30 minutes and then let idle for 10 minutes.


^{*4:} After 60 minutes of cool down time.

P1225 TP SENSOR

Description INFOID:000000008451274

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometer which transform the throttle valve position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

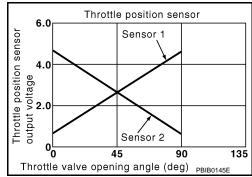

DTC Logic

INFOID:0000000008451275

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1225	Closed throttle position learning performance	Closed throttle position learning value is excessively low.	Electric throttle control actuator (TP sensor 1 and 2)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10 V at idle.

>> GO TO 2.

2.perform dtc confirmation procedure

- 1. Turn ignition switch ON.
- 2. Turn ignition switch OFF and wait at least 10 seconds.
- 3. Turn ignition switch ON.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-814, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451276

1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

- 1. Turn ignition switch OFF.
- 2. Remove the intake air duct.

P1225 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >


[MR18DE (FOR CALIFORNIA)]

- 3. Check if foreign matter is caught between the throttle valve (1) and the housing.
- Electric throttle control actuator (2)

Is the inspection result normal?

NO

- YES >> Replace electric throttle control actuator. Refer to EM-26, "Exploded View".
 - >> Remove the foreign matter and clean the electric throttle control actuator inside, then perform throttle valve closed position learning. Refer to EC-488, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

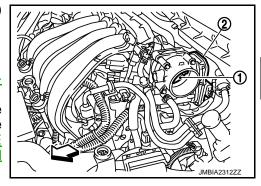

EC

Α

С

D

Е

F

G

Н

ı

K

L

M

Ν


0

P1226 TP SENSOR

Description INFOID:0000000008451277

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometer which transform the throttle valve position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

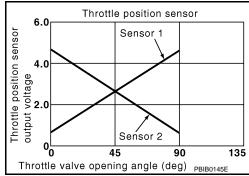

DTC Logic

INFOID:0000000008451278

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1226	Closed throttle position learning performance	Closed throttle position learning is not performed successfully, repeatedly.	Electric throttle control actuator (TP sensor 1 and 2)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 10 V at idle.

>> GO TO 2.

2.perform dtc confirmation procedure

- Turn ignition switch ON.
- Turn ignition switch OFF, wait at least 10 seconds.
- Turn ignition switch ON.
- Repeat steps 2 and 3 for 32 times.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-816, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451279

${f 1}$.CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

- Turn ignition switch OFF.
- Remove the intake air duct.

P1226 TP SENSOR


< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- 3. Check if foreign matter is caught between the throttle valve (1) and the housing.
- Electric throttle control actuator (2)

Is the inspection result normal?

- YES >> Replace electric throttle control actuator. Refer to EM-26, "Exploded View".
- NO >> Remove the foreign matter and clean the electric throttle control actuator inside, then perform throttle valve closed position learning. Refer to EC-488, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

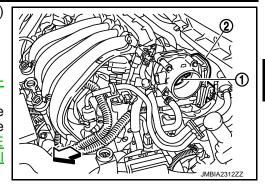

EC

Α

С

D

Е

F

G

Н

Κ

L

M

Ν

0

[MR18DE (FOR CALIFORNIA)]

P1550 BATTERY CURRENT SENSOR

Description INFOID.000000008451280

The power generation voltage variable control enables fuel consumption to be decreased by reducing the engine load which is caused by the power generation of the generator. The battery current sensor is installed to the battery cable at the negative terminal. The sensor measures the charging/discharging current of the battery. Based on the sensor signal, ECM judges whether or not the power generation voltage variable control is performed. When performing the power generation voltage variable control, ECM calculates the target power generation voltage based on the sensor signal. And ECM sends the calculated value as the power generation command value to IPDM E/R. For the details of the power generation voltage variable control, refer to PCS-66. "System Description".

CAUTION:

Never connect the electrical component or the ground wire directly to the battery terminal. The connection causes the malfunction of the power generation voltage variable control, and then the battery discharge may occur.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1550	Battery current sensor circuit range/performance	The output voltage of the battery current sensor remains within the specified range while engine is running.	Harness or connectors (Battery current sensor circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.] (EVAP control system pressure sensor circuit is shorted.) (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) (Tumble control valve position sensor circuit is shorted.) Battery current sensor Crankshaft position sensor (POS) EVAP control system pressure sensor Accelerator pedal position sensor Refrigerant pressure sensor Tumble control valve position sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and wait at least 10 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-819, "Diagnosis Procedure".

NO >> INSPECTION END

P1550 BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Diagnosis Procedure

INFOID:0000000008451282

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK BATTERY CURRENT SENSOR POWER SUPPLY CIRCUIT-I

- Disconnect battery current sensor harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between battery current sensor harness connector and ground.

Battery cur	rent sensor	Ground	Voltage
Connector Terminal		Glound	voltage
F53	1	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 3.

${f 3.}$ CHECK BATTERY CURRENT SENSOR POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery current sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F53	1	F8	71	Existed

Is the inspection result normal?

>> GO TO 4. YES

NO >> Repair open circuit.

f 4.CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
	69	Tumble control valve actuator	F22	1
	71	Battery current sensor	F53	1
F8	74	Refrigerant pressure sensor	E49	3
. 0	75	CKP sensor (POS)	F20	1
	76	EVAP control system pressure sensor	B21	3
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair short to ground or short to power in harness or connectors.

5. CHECK COMPONENTS

Check the following.

- Crankshaft position sensor (POS) (Refer to <u>EC-725, "Component Inspection"</u>.)

EC

Α

D

Е

N

Р

EVAP control system pressure sensor (Refer to EC-760, "Component Inspection".)

P1550 BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- Refrigerant pressure sensor (Refer to EC-916, "Diagnosis Procedure".)
- Tumble control valve (Refer to <u>EC-855</u>, "Component Inspection".)

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace malfunctioning components.

6.CHECK APP SENSOR

Refer to EC-875, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> GO TO 7.

7.REPLACE ACCELERATOR PEDAL ASSEMBLY

Replace accelerator pedal assembly. Refer to ACC-3, "Removal and Installation".

>> INSPECTION END

8.CHECK BATTERY CURRENT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery current sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F53	2	F8	64	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

9.CHECK BATTERY CURRENT SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery current sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F53	3	F8	57	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

10. CHECK BATTERY CURRENT SENSOR

Refer to EC-821, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace battery negative cable assembly.

11. CHECK INTERMITTENT INCIDENT

Refer to GI-41. "Intermittent Incident".

>> INSPECTION END

P1550 BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Component Inspection

INFOID:0000000008451283


1. CHECK BATTERY CURRENT SENSOR

- 1. Turn ignition switch OFF.
- 2. Reconnect harness connectors disconnected.
- 3. Disconnect battery negative cable.
- 4. Install jumper cable (Å) between battery negative terminal and body ground.

1 : Battery negative terminal

: To body ground

- 5. Turn ignition switch ON.
- Check the voltage between ECM harness connector and ground.

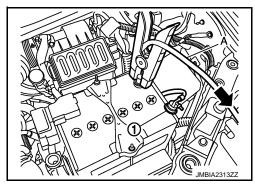

Connector	+	-	Voltage
Connector	Terminal	Terminal	
F8	57 (Battery current sensor signal)	64	Approx. 2.5 V

Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-3, "How to Handle Battery".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly.

EC

Α

D

Е

F

G

Н

1

Κ

L

M

Ν

0

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P1551, P1552 BATTERY CURRENT SENSOR

Description INFOID:000000008451284

The power generation voltage variable control enables fuel consumption to be decreased by reducing the engine load which is caused by the power generation of the generator. The battery current sensor is installed to the battery cable at the negative terminal. The sensor measures the charging/discharging current of the battery. Based on the sensor signal, ECM judges whether or not the power generation voltage variable control is performed. When performing the power generation voltage variable control, ECM calculates the target power generation voltage based on the sensor signal. And ECM sends the calculated value as the power generation command value to IPDM E/R. For the details of the power generation voltage variable control, refer to PCS-66. "System Description".

CAUTION:

Never connect the electrical component or the ground wire directly to the battery terminal. The connection causes the malfunction of the power generation voltage variable control, and then the battery discharge may occur.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1551	Battery current sensor circuit low input	An excessively low voltage from the sensor is sent to ECM.	Harness or connectors (Battery current sensor circuit is open
P1552	Battery current sensor circuit high input	An excessively high voltage from the sensor is sent to ECM.	or shorted.) [Crankshaft position sensor (POS) circuit is shorted.] (Power steering pressure sensor circuit is shorted.) (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) (Tumble control valve position sensor circuit is shorted.) • Battery current sensor • Crankshaft position sensor (POS) • Power steering pressure sensor • Accelerator pedal position sensor • Refrigerant pressure sensor • Tumble control valve position sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V with ignition switch ON

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 10 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-823, "Diagnosis Procedure".

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451286

1. CHECK GROUND CONNECTION

Α

EC

D

Е

Н

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK BATTERY CURRENT SENSOR POWER SUPPLY CIRCUIT-I

- Disconnect battery current sensor harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between battery current sensor harness connector and ground.

Battery cur	rent sensor	Ground	Voltage	
Connector Terminal		Glound	voltage	
F53	1	Ground	Approx. 5 V	

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 3.

3.check battery current sensor power supply circuit-ii

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery current sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F53	1	F8	71	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit.

4. CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
	69	Tumble control valve actuator	F22	1
	71	Battery current sensor	F53	1
F8	74	Refrigerant pressure sensor	E49	3
	75	CKP sensor (POS)	F20	1
	76	EVAP control system pressure sensor	B21	3
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair short to ground or short to power in harness or connectors.

5. CHECK COMPONENTS

Check the following.

Revision: 2012 August EC-823 2013 CUBE

N

L

Ν

0

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- Crankshaft position sensor (POS) (Refer to EC-725, "Component Inspection".)
- EVAP control system pressure sensor (Refer to <u>EC-770, "Component Inspection"</u>.)
- Refrigerant pressure sensor (Refer to EC-916, "Diagnosis Procedure".)
- Tumble control valve (Refer to <u>EC-855</u>, "Component Inspection".)

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace malfunctioning components.

CHECK APP SENSOR

Refer to EC-887, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> GO TO 7.

7. REPLACE ACCELERATOR PEDAL ASSEMBLY

Replace accelerator pedal assembly. Refer to ACC-3, "Removal and Installation".

>> INSPECTION END

8.CHECK BATTERY CURRENT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cur	Battery current sensor		ECM	
Connector	Terminal	Connector Terminal		Continuity
F53	2	F8	64	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

9.CHECK BATTERY CURRENT SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cui	Battery current sensor		ECM	
Connector	Terminal	Connector Terminal		Continuity
F53	3	F8	57	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

10. CHECK BATTERY CURRENT SENSOR

Refer to EC-833, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace battery negative cable assembly.

11. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Component Inspection

INFOID:0000000008451287


1. CHECK BATTERY CURRENT SENSOR

- 1. Turn ignition switch OFF.
- 2. Reconnect harness connectors disconnected.
- 3. Disconnect battery negative cable.
- 4. Install jumper cable (Å) between battery negative terminal and body ground.

1 : Battery negative terminal

: To body ground

- 5. Turn ignition switch ON.
- 6. Check the voltage between ECM harness connector and ground.

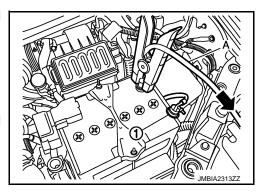

Connector	+	-	Voltage
Connector	Terminal	Terminal	
F8	57 (Battery current sensor signal)	64	Approx. 2.5 V

Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-3. "How to Handle Battery".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly.

EC

Α

C

D

Е

F

Н

- 1

J

Κ

L

M

Ν

0

[MR18DE (FOR CALIFORNIA)]

P1553 BATTERY CURRENT SENSOR

Description INFOID:000000008451288

The power generation voltage variable control enables fuel consumption to be decreased by reducing the engine load which is caused by the power generation of the generator. The battery current sensor is installed to the battery cable at the negative terminal. The sensor measures the charging/discharging current of the battery. Based on the sensor signal, ECM judges whether or not the power generation voltage variable control is performed. When performing the power generation voltage variable control, ECM calculates the target power generation voltage based on the sensor signal. And ECM sends the calculated value as the power generation command value to IPDM E/R. For the details of the power generation voltage variable control, refer to PCS-66. "System Description".

CAUTION:

Never connect the electrical component or the ground wire directly to the battery terminal. The connection causes the malfunction of the power generation voltage variable control, and then the battery discharge may occur.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1553	Battery current sensor performance	The signal voltage transmitted from the sensor to ECM is higher than the amount of the maximum power generation.	Harness or connectors (Battery current sensor circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.] (Power steering pressure sensor circuit is shorted.) (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) (Tumble control valve position sensor circuit is shorted.) Battery current sensor Crankshaft position sensor (POS) Power steering pressure sensor Accelerator pedal position sensor Refrigerant pressure sensor Tumble control valve position sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and wait at least 10 seconds.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-827, "Diagnosis Procedure".

NO >> INSPECTION END

P1553 BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Diagnosis Procedure

INFOID:0000000008451290

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK BATTERY CURRENT SENSOR POWER SUPPLY CIRCUIT-I

- 1. Disconnect battery current sensor harness connector.
- 2. Turn ignition switch ON.
- 3. Check the voltage between battery current sensor harness connector and ground.

Battery current sensor		Ground	Voltage	
Connector	Terminal	Glound	voltage	
F53	1	Ground	Approx. 5 V	

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 3.

${f 3.}$ CHECK BATTERY CURRENT SENSOR POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cui	Battery current sensor		ECM	
Connector	Terminal	Connector Terminal		Continuity
F53	1	F8	71	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit.

4. CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor			
Connector	Terminal	Name	Connector	Terminal	
	69	Tumble control valve actuator	F22	1	
	71	Battery current sensor	F53	1	
F8	74	Refrigerant pressure sensor	E49	3	
	75	CKP sensor (POS)	F20	1	
	76	EVAP control system pressure sensor	B21	3	
E16	102	APP sensor	E110	5	

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair short to ground or short to power in harness or connectors.

5. CHECK COMPONENTS

Check the following.

- Crankshaft position sensor (POS) (Refer to <u>EC-725, "Component Inspection"</u>.)
- EVAP control system pressure sensor (Refer to <u>EC-770, "Component Inspection"</u>.)

EC

Α

D

Е

1

Н

J

K

1

D //

. .

Ν

0

Revision: 2012 August EC-827 2013 CUBE

P1553 BATTERY CURRENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- Refrigerant pressure sensor (Refer to <u>EC-916</u>, "<u>Diagnosis Procedure</u>".)
- Tumble control valve (Refer to <u>EC-855</u>, "Component Inspection".)

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace malfunctioning components.

6.CHECK APP SENSOR

Refer to EC-887, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> GO TO 7.

7.REPLACE ACCELERATOR PEDAL ASSEMBLY

Replace accelerator pedal assembly. Refer to ACC-3, "Removal and Installation".

>> INSPECTION END

8.CHECK BATTERY CURRENT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cui	Battery current sensor		ECM	
Connector	Terminal	Connector Terminal		Continuity
F53	2	F8	64	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

9.CHECK BATTERY CURRENT SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery current sensor		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F53	3	F8	57	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

10. CHECK BATTERY CURRENT SENSOR

Refer to EC-833, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace battery negative cable assembly.

11. CHECK INTERMITTENT INCIDENT

Refer to GI-41. "Intermittent Incident".

>> INSPECTION END

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Component Inspection

INFOID:0000000008451291


1. CHECK BATTERY CURRENT SENSOR

- 1. Turn ignition switch OFF.
- 2. Reconnect harness connectors disconnected.
- 3. Disconnect battery negative cable.
- 4. Install jumper cable (Å) between battery negative terminal and body ground.

1 : Battery negative terminal

: To body ground

- 5. Turn ignition switch ON.
- Check the voltage between ECM harness connector and ground.

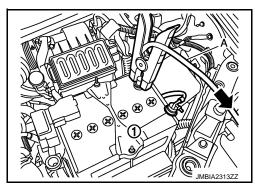

Connector	+	-	Voltage
Connector	Terminal	Terminal	
F8	57 (Battery current sensor signal)	64	Approx. 2.5 V

Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-3. "How to Handle Battery".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly.

EC

Α

D

Е

F

Н

K

L

M

Ν

0

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

INFOID:0000000008451294

P1554 BATTERY CURRENT SENSOR

Description INFOID:0000000008451292

The power generation voltage variable control enables fuel consumption to be decreased by reducing the engine load which is caused by the power generation of the generator. The battery current sensor is installed to the battery cable at the negative terminal. The sensor measures the charging/discharging current of the battery. Based on the sensor signal, ECM judges whether or not the power generation voltage variable control is performed. When performing the power generation voltage variable control, ECM calculates the target power generation voltage based on the sensor signal. And ECM sends the calculated value as the power generation command value to IPDM E/R. For the details of the power generation voltage variable control, refer to PCS-66, "System Description".

CAUTION:

Never connect the electrical component or the ground wire directly to the battery terminal. The connection causes the malfunction of the power generation voltage variable control, and then the battery discharge may occur.

DTC Logic INFOID:000000008451293

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1554	Battery current sensor performance	The output voltage of the battery current sensor is lower than the specified value while the battery voltage is high enough.	Harness or connectors (Battery current sensor circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.] (Power steering pressure sensor circuit is shorted.) (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) (Tumble control valve position sensor circuit is shorted.) Battery current sensor Crankshaft position sensor (POS) Power steering pressure sensor Accelerator pedal position sensor Refrigerant pressure sensor Tumble control valve position sensor

DTC CONFIRMATION PROCEDURE

1. PERFORM COMPONENT FUNCTION CHECK

Perform component function check. Refer to EC-830, "Component Function Check".

NOTE:

Use component function check to check the overall function of the battery current sensor circuit. During this check, a 1st trip DTC might not be confirmed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-831, "Diagnosis Procedure".

Component Function Check

1.PRECONDITIONING

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 12.8 V at idle.
- Before performing the following procedure, confirm that all load switches and A/C switch are turned OFF.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

>> GO TO 2.

2.perform component function check

(P)With CONSULT

Start engine and let it idle.

- Select "BAT CUR SEN" in "DATA MONITOR" mode with CONSULT.
- Check "BAT CUR SEN" indication for 10 seconds.

"BAT CUR SEN" should be above 2,300 mV at least once.

♥Without CONSULT

- Start engine and let it idle.
- 2. Check the voltage between ECM harness connector and ground.

Connector	+	-	Voltage
Connector	Terminal	Terminal	
F8	58 (Battery current sensor signal)	68	Above 2.3 V at least once

Is the inspection result normal?

>> INSPECTION END YES

>> Go to EC-831, "Diagnosis Procedure". NO

Diagnosis Procedure

1. CHECK GROUND CONNECTION

Turn ignition switch OFF.

Check ground connection E38. Refer to Ground Inspection in GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK BATTERY CURRENT SENSOR POWER SUPPLY CIRCUIT-I

- Disconnect battery current sensor harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between battery current sensor harness connector and ground.

Battery current sensor		Ground	Voltage
Connector	Terminal	Ground	voltage
F53	1	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 3.

3.check battery current sensor power supply circuit-ii

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cur	Battery current sensor ECM		Continuity	
Connector	Terminal	Connector Terminal		Continuity
F53	1	F8	71	Existed

Is the inspection result normal?

>> GO TO 4. YES

NO >> Repair open circuit.

EC-831 Revision: 2012 August 2013 CUBE

EC

Α

Е

D

F

INFOID:0000000008451295

Н

Ν

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

f 4.CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
	69	Tumble control valve actuator	F22	1
	71	Battery current sensor	F53	1
F8	74	Refrigerant pressure sensor	E49	3
	75	CKP sensor (POS)	F20	1
	76	EVAP control system pressure sensor	B21	3
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair short to ground or short to power in harness or connectors.

5. CHECK COMPONENTS

Check the following.

- Crankshaft position sensor (POS) (Refer to <u>EC-725, "Component Inspection"</u>.)
- EVAP control system pressure sensor (Refer to EC-770. "Component Inspection".)
- Refrigerant pressure sensor (Refer to <u>EC-916, "Diagnosis Procedure"</u>.)
- Tumble control valve (Refer to EC-855, "Component Inspection".)

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace malfunctioning components.

6.CHECK APP SENSOR

Refer to EC-887, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> GO TO 7.

/.REPLACE ACCELERATOR PEDAL ASSEMBLY

Replace accelerator pedal assembly. Refer to ACC-3, "Removal and Installation".

>> INSPECTION END

$8.\mathsf{CHECK}$ BATTERY CURRENT SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between battery current sensor harness connector and ECM harness connector.

Battery cui	rent sensor	ECM		Continuity	
Connector	Terminal	Connector Terminal			
F53	2	F8	64	Existed	

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

9. CHECK BATTERY CURRENT SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between battery current sensor harness connector and ECM harness connector.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Battery cur	rent sensor	ECM		Continuity	
Connector	Terminal	Connector Terminal			
F53	3	F8	57	Existed	

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

>> GO TO 10. YES

NO >> Repair open circuit, short to ground or short to power in harness or connectors.

10. CHECK BATTERY CURRENT SENSOR

Refer to EC-833, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace battery negative cable assembly.

11. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

1. CHECK BATTERY CURRENT SENSOR

Turn ignition switch OFF.

2. Reconnect harness connectors disconnected.


3. Disconnect battery negative cable.

4. Install jumper cable (A) between battery negative terminal and body ground.

: Battery negative terminal

: To body ground

- Turn ignition switch ON.
- Check the voltage between ECM harness connector and ground.

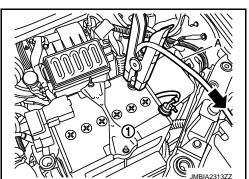

Connector	+	-	Voltage
Connector	Terminal	Terminal	
F8	57 (Battery current sensor signal)	64	Approx. 2.5 V

Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-3, "How to Handle Battery".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace battery negative cable assembly.

Р

EC-833 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

INFOID:0000000008451296

Ν

P1564 ASCD STEERING SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P1564 ASCD STEERING SWITCH

Description INFOID:000000008451297

ASCD steering switch has variant values of electrical resistance for each button. ECM reads voltage variation of switch, and determines which button is operated.

Refer to EC-534, "System Description" for the ASCD function.

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P1564 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to EC-795, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1564	ASCD steering switch	 An excessively high voltage signal from the ASCD steering switch is sent to ECM. ECM detects that input signal from the ASCD steering switch is out of the specified range. ECM detects that the ASCD steering switch is stuck ON. 	Harness or connectors (The switch circuit is open or shorted.) ASCD steering switch ECM

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON.
- 2. Wait at least 10 seconds.
- 3. Press MAIN switch for at least 10 seconds, then release it and wait at least 10 seconds.
- 4. Press CANCEL switch for at least 10 seconds, then release it and wait at least 10 seconds.
- Press RESUME/ACCELERATE switch for at least 10 seconds, then release it and wait at least 10 seconds.
- 6. Press SET/COAST switch for at least 10 seconds, then release it and wait at least 10 seconds.
- 7. Check DTC.

Is DTC detected?

YES >> Go to EC-834, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451299

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to Ground Inspection in GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK ASCD STEERING SWITCH CIRCUIT

(P) With CONSULT

1. Turn ignition switch ON.

P1564 ASCD STEERING SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Α

EC

D

Е

K

Ν

- 2. Select "MAIN SW", "CANCEL SW", "RESUME/ACC SW" and "SET SW" in "DATA MONITOR" mode with CONSULT.
- 3. Check each item indication under the following conditions.

Monitor item	Condition		Indication
MAIN SW	MAIN switch	Pressed	ON
WAINSW	MAIN SWILCH	Released	OFF
CANCEL SW	CANCEL switch	Pressed ON	
	CANCEL SWILLI	Released	OFF
RESUME/ACC	RESUME/ACCELERATE switch	Pressed	ON
SW	RESONE/ACCELERATE SWIGH	Released	OFF
SET SW	SET/COAST switch	Pressed	ON OFF ON OFF ON
	SE 1/OOAST SWILCH	Released	OFF

⋈ Without CONSULT

- 1. Turn ignition switch ON.
- 2. Check the voltage between ECM harness connector terminals.

ECM				
Connector	+	-	Condition	Voltage
Connector	Terminal	Terminal		
			MAIN switch: Pressed	Approx. 0V
			CANCEL switch: Pressed	Approx. 1V
	94		SET/COAST switch: Pressed	Approx. 2V
E16	(ASCD steering switch signal)	95	RESUME/ACCELERATE switch: Pressed	Approx. 3V
			All ASCD steering switches: Released	Approx. 4V

Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 3.

${f 3.}$ CHECK ASCD STEERING SWITCH GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Disconnect combination switch harness connector M352.
- 4. Check the continuity between combination switch and ECM harness connector.

Combination switch	E	Continuity	
Terminal	Connector		
16	E16	95	Existed

5. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M77, E105
- Combination switch (spiral cable)
- · Harness for open and short between ECM and combination switch

Revision: 2012 August EC-835 2013 CUBE

>> Repair open circuit or short to ground or short to power in harness or connectors.

5.check ascd steering switch input signal circuit for open and short

1. Check the continuity between ECM harness connector and combination switch.

combination switch	E	Continuity	
Terminal	Connector		
13	E16	94	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 6.

6. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors M77, E105
- Combination switch (spiral cable)
- Harness for open and short between ECM and combination switch

>> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK ASCD STEERING SWITCH

Refer to EC-836, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace ASCD steering switch. Refer to <u>ST-8</u>, "Exploded View".

8.CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008451300

1. CHECK ASCD STEERING SWITCH

- 1. Disconnect combination switch (spiral cable) harness connector.
- 2. Check the continuity between combination switch harness connector terminals under following conditions.

Combination switch		Condition	Resistance	
Connector	Terminals	Condition	Nesistance	
		MAIN switch: Pressed	Approx. 0 Ω	
		CANCEL switch: Pressed	Approx. 250 Ω	
		SET/COAST switch: Pressed	Approx. 660 Ω	
M302	13 and 16	RESUME/ACCELERATE switch: Pressed	Approx. 1,480 Ω	
		All ASCD steering switches: Re- leased	Approx. 4,000 Ω	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace ASCD steering switch. Refer to <u>ST-8</u>, "Exploded View".

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Α

EC

D

F

K

M

Ν

Р

P1572 ASCD BRAKE SWITCH

Description INFOID:0000000008451301

When the brake pedal is depressed, ASCD brake switch is turned OFF and stop lamp switch is turned ON. ECM detects the state of the brake pedal by this input of two kinds (ON/OFF signal).

Refer to EC-534, "System Description" for the ASCD function.

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P1572 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to EC-795, "DTC Logic".
- This self-diagnosis has the one trip detection logic. When malfunction A is detected, DTC is not stored in ECM memory. And in that case, 1st trip DTC and 1st trip freeze frame data are displayed.
 1st trip DTC is erased when ignition switch OFF. And even when malfunction A is detected in two consecutive trips, DTC is not stored in ECM memory.

DTC No.	Trouble diagnosis name		DTC detecting condition	Possible cause
		A)	When the vehicle speed is above 30 km/h (19 MPH), ON signals from the stop lamp switch and the ASCD brake switch are sent to the ECM at the same time.	Harness or connectors (The stop lamp switch circuit is shorted.) Harness or connectors (The ASCD brake switch circuit is shorted.)
P1572	ASCD brake switch	B)	ASCD brake switch signal is not sent to ECM for extremely long time while the vehicle is driving.	Harness or connectors (The ASCD clutch switch circuit is shorted.) Stop lamp switch ASCD brake switch ASCD clutch switch Incorrect stop lamp switch installation Incorrect ASCD brake switch installation Incorrect ASCD clutch switch installation ECM

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

NOTE:

Procedure for malfunction B is not described here. It takes extremely long time to complete procedure for malfunction B. By performing procedure for malfunction A, the incident that causes malfunction B can be detected.

>> GO TO 2.

2.perform dtc confirmation procedure for malfunction a

- Start engine.
- 2. Press MAIN switch and make sure that CRUISE indicator is displayed in combination meter.
- 3. Drive the vehicle for at least 5 consecutive seconds under the following conditions.

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

Vehicle speed	More than 30 km/h (19 mph)
Selector lever	Suitable position

4. Check DTC.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Is DTC detected?

YES >> Go to EC-838, "Diagnosis Procedure".

NO >> GO TO 3.

${f 3.}$ PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION B

1. Drive the vehicle for at least 5 consecutive seconds under the following conditions.

CAUTION:

Always drive vehicle at a safe speed.

NOTÉ:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

Vehicle speed	More than 30 km/h (19 mph)
Selector lever	Suitable position
Driving location	Depress the brake pedal for more than five seconds so as not to come off from the above-mentioned vehicle speed.

2. Check DTC.

Is DTC detected?

YES >> Go to EC-838, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451303

1. CHECK OVERALL FUNCTION-I

(P) With CONSULT

- 1. Turn ignition switch ON.
- 2. Select "BRAKE SW1" in "DATA MONITOR" mode with CONSULT.
- 3. Check "BRAKE SW1" indication under the following conditions.

Monitor item	Con	Indication	
DDAKE SWA	BRAKE SW1 Brake pedal (CVT) Brake pedal and clutch pedal (M/T)	Slightly depressed	OFF
DIVARLE SWI		Fully released	ON

⋈ Without CONSULT

- Turn ignition switch ON.
- 2. Check the voltage between ECM harness connector terminals.

ECM					
Connector	+	-	Condition		Voltage
Connector	Terminal	Terminal			
E16	100 (ASCD brake	108	Brake pedal (CVT) Brake pedal and clutch pedal (M/T)	Slightly de- pressed	Approx. 0V
	switch signal)		Brake pedar and clutch pedar (W/T)	Fully released	Battery voltage

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK OVERALL FUNCTION-II

(P) With CONSULT

Select "BRAKE SW2" and check indication in "DATA MONITOR" mode with CONSULT.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Monitor item	Con	Indication	
BRAKE SW2	Brake pedal	Slightly de- pressed	ON
		Fully released	OFF

EC

Α

Without CONSULT

Check the voltage between ECM harness connector terminals.

D

Е

ECM					
Connector	+	-	Condition		Voltage
Connector	Terminal	Terminal			
E16	99 (Stop lamp	108	Brake pedal	Slightly de- pressed	Battery voltage
	switch signal)			Fully released	Approx. 0V

F

Is the inspection result normal?

YES >> GO TO 16. NO >> GO TO 11.

3.CHECK ASCD BRAKE SWITCH POWER SUPPLY CIRCUIT-I

- Turn ignition switch OFF.
- 2. Disconnect ASCD brake switch harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between ASCD brake switch harness connector and ground.

ASCD brake switch		Ground	Voltage
Connector	Terminal	Glound	voltage
E112	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 9.

NO-1 >> CVT models: GO TO 4. NO-2 >> M/T models: GO TO 5.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E105, M77
- 10 A fuse (No. 2)
- · Harness for open or short between ASCD brake switch and fuse

Ν

Р

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK ASCD CLUTCH SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.

- 2. Disconnect ASCD clutch switch harness connector.
- Turn ignition switch ON.
- Check the voltage between ASCD clutch switch harness connector and ground.

ASCD clutch switch		Ground	Voltage	
Connector	Terminal	Glound	voltage	
E111	3	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 7. >> GO TO 6. NO

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

6. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E105, M77
- 10 A fuse (No. 2)
- · Harness for open or short between ASCD clutch switch and fuse
 - >> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK ASCD BRAKE SWITCH POWER SUPPLY CIRCUIT-II

- 1. Turn ignition switch OFF.
- 2. Disconnect ASCD brake switch harness connector.
- Check the continuity between ASCD clutch switch harness connector and ASCD brake switch harness connector.

ASCD clu	ıtch switch	ASCD bra	ake switch	Continuity
Connector	Terminal	Connector	Terminal	Continuity
E111	4	E112	1	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

8 . CHECK ASCD CLUTCH SWITCH

Refer to EC-842, "Component Inspection (ASCD Clutch Switch)".

Is the inspection result normal?

YES >> GO TO 16.

NO >> Replace ASCD clutch switch. Refer to <u>CL-10</u>, "<u>Exploded View</u>".

9.CHECK ASCD BRAKE SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between ASCD brake switch harness connector and ECM harness connector.

ASCD bra	ASCD brake switch ECM		Continuity	
Connector	Terminal	Connector	Terminal	Continuity
E112	2	E16	100	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

10. CHECK ASCD BRAKE SWITCH

Refer to EC-841, "Component Inspection (ASCD Brake Switch)".

Is the inspection result normal?

YES >> GO TO 16.

NO >> Replace ASCD brake switch. Refer to <u>BR-17</u>, "Exploded View".

11. CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect stop lamp switch harness connector.
- 3. Check the voltage between stop lamp switch harness connector and ground.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Stop lam	p switch				
Connector	Terminal	Ground	Voltage		
E114 (M/T) E115 (CVT)	1	Ground	Battery voltage		
s the inspection	result normal	?			l
YES >> GO NO >> GO					
12. детест м	MALFUNCTION	NING PART			
Check the follow					
Harness conne10A fuse (No.9		177			
		tween stop lam	p switch and ba	tery	
D					
`	•	•	•	ower in harness or co FOR OPEN AND SH	
			IGNAL CIRCUII	FOR OPEN AND SH	UN I
	ECM harness continuity between		ess connector an	d stop lamp switch har	rness connector.
		1			
EC		<u> </u>	np switch	Continuity	
Connector	Terminal	Connector E114 (M/T)	Terminal		
E16	99	E115 (CVT)	2	Existed	
3. Also check l	harness for sh	ort to ground ar	nd short to powe	<u>r.</u>	
s the inspection		<u>?</u>			
YES >> GO NG >> GO					
14. DETECT M	MALFUNCTION	NING PART			
Check the follow					
Harness for op	pen or short be	tween ECM an	d stop lamp swit	ch	
>> Ren	air onan circui	t or short to are	und or short to r	ower in harness or co	nnectors
15.CHECK ST	•	•	and or short to p	ower in harness of co	Tillectors.
			p Lamp Switch)'		
s the inspection				·	
YES >> GO		'.	. DD 47 E	1 177 11	
NO >> Rep 16. CHECK IN			to BR-17, "Explo	<u>ded View"</u> .	
Refer to <u>GI-41, "</u>	<u>intermittent In</u>	<u>ciaent"</u> .			
>> INS	PECTION ENI	כ			
Component I	Inspection (ASCD Brak	e Switch)		INFOID:000000008451304
1.CHECK ASC	D BRAKE SW	ITCH-I			
	n switch OFF.				
		witch harness o		le under the following	conditions

3. Check the continuity between ASCD brake switch terminals under the following conditions.

[MR18DE (FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

Terminals	Condition		Continuity
	Brake pedal	Fully released	Existed
1 and 2		Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. CHECK ASCD BRAKE SWITCH-II

- 1. Adjust ASCD brake switch installation. Refer to BR-18, "Inspection and Adjustment".
- 2. Check the continuity between ASCD brake switch terminals under the following conditions.

Terminals	Condition		Continuity
		Fully released	Existed
1 and 2	Brake pedal	Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace ASCD brake switch. Refer to <u>BR-17</u>, "Exploded View".

Component Inspection (ASCD Clutch Switch)

INFOID:0000000008451305

1. CHECK ASCD CLUTCH SWITCH-I

- Turn ignition switch OFF.
- 2. Disconnect ASCD clutch switch harness connector.
- 3. Check the continuity between ASCD clutch switch terminals under the following conditions.

Terminals	Condition		Continuity
		Fully released	Existed
1 and 2	Clutch pedal	Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.CHECK ASCD CLUTCH SWITCH-II

- 1. Adjust ASCD clutch switch installation. Refer to CL-11, "Inspection and Adjustment".
- 2. Check the continuity between ASCD clutch switch terminals under the following conditions.

Terminals	Condition		Continuity
		Fully released	Existed
1 and 2	Clutch pedal	Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace ASCD clutch switch. Refer to <u>CL-10</u>, "<u>Exploded View</u>".

Component Inspection (Stop Lamp Switch)

INFOID:0000000008451306

1. CHECK STOP LAMP SWITCH-I

- 1. Turn ignition switch OFF.
- 2. Disconnect stop lamp switch harness connector.
- 3. Check the continuity between stop lamp switch terminals under the following conditions.

Existed

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Terminals	Co	ndition	Continuity	•
		Fully released	Not existed	.
1 and 2	Brake pedal	Slightly de- pressed	Existed	-
Is the inspection	n result norma	<u>l?</u>		•
	SPECTION END TO 2.	ID		
2.CHECK STO	OP LAMP SWI	TCH-II		
				pection and Adjustment". under the following conditions.
Terminals	Co	ndition	Continuity	•
		Fully released	Not existed	•
1 and 2	Brake pedal	Slightly de-	Evisted	_

Is the i	inspection	result	normal?

YES >> INSPECTION END

>> Replace stop lamp switch. Refer to BR-17, "Exploded View". NO

pressed

EC-843 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

F

G

Н

L

Κ

M

Ν

0

P1574 ASCD VEHICLE SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P1574 ASCD VEHICLE SPEED SENSOR

Description INFOID:000000008451307

The ECM receives two vehicle speed sensor signals via CAN communication line. One is sent from combination meter, and the other is from TCM (Transmission control module). The ECM uses these signals for ASCD control. Refer to EC-534, "System Description" for ASCD functions.

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P1574 is displayed with DTC U1001, first perform the trouble diagnosis for DTC U1001. Refer to <u>EC-609</u>, "DTC Logic".
- If DTC P1574 is displayed with DTC P0500, first perform the trouble diagnosis for DTC P0500. Refer to <u>EC-783, "M/T MODELS: DTC Logic"</u>.
- If DTC P1574 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to EC-795, "DTC Logic".
- If DTC P1574 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to <u>EC-797</u>, "<u>DTC Logic"</u>.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1574	ASCD vehicle speed sensor	ECM detects a difference between two vehicle speed signals is out of the specified range.	Harness or connectors (The CAN communication line is open or shorted.) ABS actuator and electric unit (control unit) TCM ECM

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- Start engine.
- Drive the vehicle at more than 40 km/h (25 MPH).

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

This procedure may be conducted with the drive wheels lifted in the shop or by driving the vehicle. If a road test is expected to be easier, it is unnecessary to lift the vehicle.

3. Check DTC.

Is DTC detected?

YES >> Go to EC-844, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451309

1. CHECK DTC WITH TCM

Check DTC with TCM. Refer to TM-97, "Diagnosis Description".

Is DTC detected?

NO >> GO TO 2.

YES >> Perform trouble shooting relevant to DTC indicated.

P1574 ASCD VEHICLE SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

$\overline{2}$.CHECK DTC WITH "ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)"

Refer to BRC-23, "CONSULT Function".

Is DTC detected?

NO >> INSPECTION END

YES >> Perform trouble shooting relevant to DTC indicated.

EC

Α

D

Е

F

G

Н

J

Κ

L

M

Ν

0

P1715 INPUT SPEED SENSOR

Description INFOID:000000008451310

ECM receives input shaft revolution signal from TCM via the CAN communication line. ECM uses this signal for engine control.

DTC Logic INFOID:0000000008451311

DTC DETECTION LOGIC

NOTE:

- If DTC P1715 is displayed with DTC UXXXX, first perform the trouble diagnosis for DTC UXXXX.
- If DTC P1715 is displayed with DTC P0335, first perform the trouble diagnosis for DTC P0335. Refer to <u>EC-722</u>, "<u>DTC Logic"</u>.
- If DTC P1715 is displayed with DTC P0340, first perform the trouble diagnosis for DTC P0340. Refer to EC-726, "DTC Logic".
- If DTC P1715 is displayed with DTC P0605, first perform the trouble diagnosis for DTC P0605. Refer to EC-795, "DTC Logic".
- If DTC P1715 is displayed with DTC P0607, first perform the trouble diagnosis for DTC P0607. Refer to <u>EC-797</u>, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1715	Input speed sensor (TCM output)	Input shaft revolution signal is different from the theoretical value calculated by ECM from output shaft revolution signal and engine rpm signal.	Harness or connectors (The CAN communication line is open or shorted) Harness or connectors (Primary speed sensor circuit is open or shorted) TCM

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

Start engine and drive the vehicle at more than 50 km/h (31 MPH) for at least 5 seconds.

Always drive vehicle at a safe speed.

2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-846, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451312

1. CHECK DTC WITH TCM

Check DTC with TCM. Refer to TM-98, "CONSULT Function".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform trouble shooting relevant to DTC indicated.

2.REPLACE TCM

Replace TCM. Refer to TM-215, "Exploded View".

P1715 INPUT SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

>> INSPECTION END

Α

EC

С

D

Е

F

G

Н

J

Κ

L

 \mathbb{N}

Ν

0

Ρ

P1805 BRAKE SWITCH

Description INFOID:000000008451313

Brake switch signal is applied to the ECM through the stop lamp switch when the brake pedal is depressed. This signal is used mainly to decrease the engine speed when the vehicle is driving.

DTC Logic

DTC DETECTION LOGIC

DTC No.	c. Trouble diagnosis name DTC detecting condition		Possible cause	
P1805	Brake switch	A brake switch signal is not sent to ECM for extremely long time while the vehicle is driving.	Harness or connectors (Stop lamp switch circuit is open or shorted.) Stop lamp switch	

DTC CONFIRMATION PROCEDURE

${f 1}$. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON.
- 2. Fully depress the brake pedal for at least 5 seconds.
- Erase the DTC.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-848, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451315

1. CHECK STOP LAMP SWITCH CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Check the stop lamp when depressing and releasing the brake pedal.

Brake pedal	Stop lamp
Fully released	Not illuminated
Slightly de- pressed	Illuminated

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 2.

2.CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect stop lamp switch harness connector.
- 3. Check the voltage between stop lamp switch harness connector and ground.

Stop lan	np switch	Ground	Voltage
Connector	Connector Terminal		vollage
E114 (M/T) E115 (CVT)	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

${f 3.}$ DETECT MALFUNCTIONING PART

Check the following.

P1805 BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- Harness connectors E105, M77
- 10 A fuse (No. 9)
- Harness for open or short between stop lamp switch and battery

>> Repair open circuit or short to ground or short to power in harness or connectors.

f 4 .CHECK STOP LAMP SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Disconnect ECM harness connector.
- 2. Check the continuity between ECM harness connector and stop lamp switch harness connector.

ECM		Stop lan	Stop lamp switch	
Connector	Terminal	Connector	Terminal	Continuity
E16	99	E114 (M/T) E115 (CVT)	2	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

${f 5.}$ CHECK STOP LAMP SWITCH

Refer to EC-849, "Component Inspection (Stop Lamp Switch)".

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace stop lamp switch. Refer to BR-17, "Exploded View".

6.CHECK INTERMITTENT INCIDENT

Refer to GI-41. "Intermittent Incident".

>> INSPECTION END

Component Inspection (Stop Lamp Switch)

1.CHECK STOP LAMP SWITCH-I

- Turn ignition switch OFF.
- Disconnect stop lamp switch harness connector. 2.
- Check the continuity between stop lamp switch terminals under the following conditions.

Terminals	Condition		Continuity
		Fully released	Not existed
1 and 2	Brake pedal	Slightly de- pressed	Existed

Is the inspection result normal?

YFS >> INSPECTION END

NO >> GO TO 2.

2.CHECK STOP LAMP SWITCH-II

- Adjust stop lamp switch installation. Refer to BR-18, "Inspection and Adjustment".
- Check the continuity between stop lamp switch terminals under the following conditions.

Terminals	Condition		Continuity
		Fully released	Not existed
1 and 2	Brake pedal	Slightly de- pressed	Existed

Is the inspection result normal?

EC-849 Revision: 2012 August 2013 CUBE

EC

Α

Е

Н

INFOID:0000000008451316

N

P1805 BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

YES >> INSPECTION END

NO >> Replace stop lamp switch. Refer to <u>BR-17</u>, "Exploded View".

Description INFOID:0000000008451317


Tumble control valve (3) is installed in the intake manifold adapter

Tumble control valve actuator (2) is connected to the front end of the valve shaft.

Tumble control valve actuator consists of motor and position sensor,

The motor opens or closes the valve by the output signal of the ECM.

The sensor consists of a permanent magnet and Hall IC. It senses the valve shaft movement and feeds the voltage signals to the ECM.

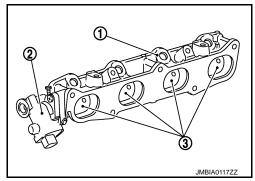

DTC Logic INFOID:0000000008451318

DTC DETECTION LOGIC

DTC No. Trouble diagnosis nan	e DTC detecting condition	Possible cause
P2004 Tumble control valve stud	The target angle of tumble control valve controlled by ECM and the input signal from tumble control valve position sensor is not in the normal range.	Harness or connectors (Tumble control valve motor circuit is open or shorted.) (Tumble control valve position sensor circuit is open or shorted.) (EVAP control system pressure sensor circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.) (Accelerator pedal position sensor circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) (Battery current sensor circuit is shorted.) • Tumble control valve actuator (Tumble control valve motor) (Tumble control valve position sensor) • EVAP control system pressure sensor • Crankshaft position sensor (POS) • Accelerator pedal position sensor • Refrigerant pressure sensor • Battery current sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- Turn ignition switch OFF and wait at least 10 seconds.
- Turn ignition switch ON.
- Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

- Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.
- Always perform the test at a temperature above 0°C (32°F)

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

(II) With CONSULT

EC-851 Revision: 2012 August 2013 CUBE

EC

Α

D

Е

F

Ν

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- 1. Turn ignition switch ON.
- Select "DATA MONITOR" mode with CONSULT.
- Check that "COOLAN TEMP/S" indicates between 5°C (41°F) to 45°C (113°F).
 If not, cool engine down or warm engine up until "COOLAN TEMP/S" indicates between 5°C (41°F) to 56°C (133°F). Then go to the following steps.
- 4. Fully release accelerator pedal and wait at least 5 seconds.
- 5. Depress accelerator pedal and wait at least 5 seconds.
- 6. Check 1st trip DTC.

With GST

Following the procedure "With CONSULT" above.

Is 1st trip DTC detected?

YES >> Go to EC-852, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451319

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to Ground Inspection in GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK TUMBLE CONTROL VALVE MOTOR POWER SUPPLY CIRCUIT-I

Check the voltage between ECM harness connector and ground.

ECM		Ground	Condition	Voltage	
Connector	Terminal	Orouna	Condition	voltage	
F7	3	Ground	Ignition switch OFF	Approx. 0 V	
17	3		Ignition switch ON	Battery voltage	

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 3.

${f 3.}$ CHECK TUMBLE CONTROL VALVE MOTOR POWER SUPPLY CIRCUIT-II

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Disconnect IPDM E/R harness connector.
- 4. Check the continuity between IPDM E/R harness connector and ECM harness connector.

IPDN	/I E/R	E	Continuity	
Connector	Connector Terminal		Terminal	Continuity
E14	44	F7	3	Existed

5. Also check harness for short to ground and short to power.

<u>Is the inspection result normal?</u>

YES >> Perform the trouble diagnosis for power supply circuit.

NO >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

${f 5.}$ CHECK TUMBLE CONTROL VALVE MOTOR OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Disconnect tumble control valve actuator harness connector.
- 2. Disconnect ECM harness connector.
- Check the continuity between tumble control valve actuator harness connector and ECM harness connec-

Tumble control v	alve actuator	ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
	5	F7 -	6	Not existed
F22			7	Existed
1 22			6	Existed
			7	Not existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

6.CHECK TUMBLE CONTROL VALVE POSITION SENSOR POWER SUPPLY CIRCUIT-I

- Reconnect ECM harness connector disconnected.
- Turn ignition switch ON.
- Check the voltage between tumble control valve actuator harness connector and ground.

Tumble control	Ground	Voltage	
Connector	onnector Terminal		
F22	1	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 7.

7.CHECK TUMBLE CONTROL VALVE POSITION SENSOR POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between tumble control valve actuator harness connector and ECM harness connector.

Tumble control	Tumble control valve actuator		ECM	
Connector	Terminal	Connector	Terminal	Continuity
F22	1	F8	69	Existed

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit.

8. CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

EC-853 Revision: 2012 August 2013 CUBE Ν

Α

D

Е

Н

K

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
	69	Tumble control valve actuator	F22	1
	71	Battery current sensor	F53	1
F8	74	Refrigerant pressure sensor	E49	3
. 0	75	CKP sensor (POS)	F20	1
	76	EVAP control system pressure sensor	B21	3
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair short to ground or short to power in harness or connectors.

9. CHECK COMPONENT

Check the following.

- Battery current sensor (Refer to EC-821, "Component Inspection".)
- Crankshaft position sensor (POS) (Refer to <u>EC-725, "Component Inspection"</u>.)
- Refrigerant pressure sensor (Refer to <u>EC-916</u>, "<u>Diagnosis Procedure</u>".)
- Tumble control valve (Refer to EC-855, "Component Inspection".)

Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace malfunctioning components.

10.CHECK APP SENSOR

Refer to EC-887, "Component Inspection".

Is the inspection result normal?

YFS >> GO TO 15.

NO >> GO TO 11.

11. REPLACE ACCELERATOR PEDAL ASSEMBLY

Replace accelerator pedal assembly. Refer to ACC-3, "Removal and Installation".

>> INSPECTION END

12. CHECK TUMBLE CONTROL VALVE POSITION SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between tumble control valve actuator harness connector and ECM harness connector.

Tumble control valve actuator		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
F22	2	F8	47	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 13.

>> Repair open circuit or short to ground or short to power in harness or connectors. NO

13. CHECK TUMBLE CONTROL VALVE POSITION SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between tumble control valve actuator harness connector and ECM harness connector.

[MR18DE (FOR CALIFORNIA)]

Ν

0

Р

< DTC/CIRCUIT DIAGNOSIS >

Tumble control	valve actuator	EC	CM	Combination	
Connector	Terminal	Connector	Terminal	Continuity	_
F22	3	F8	35	Existed	
2. Also chec	k harness fo	r short to gro	ound and s	nort to power.	
s the inspection	on result nor	mal?			
	O TO 14.				
	•		•	or short to power in harness or connectors.	
14. CHECK					
Refer to <u>EC-8</u>			<u>on"</u> .		
s the inspection		mal?			
	O TO 15.	manifold a	dantar Raf	er to EM-26, "Exploded View".	
15.check i	•		•	El to <u>Livi-20. Exploded view</u> .	
			IN I		
Refer to <u>GI-41</u>					
s the inspection YES >> Reference >> Referen			dontor Dof	or to EM 26 "Evoloded View"	
	epiace intakt epair or repla			er to <u>EM-26, "Exploded View"</u> . ors.	
Componen				INFOID:00000	000008451320
	•			02.5555	00000101020
.CHECK TU	IMBLE CON	TROL VALV	E		
With CON					
	on switch Of		Refer to FN	-27, "Removal and Installation".	
				eck if foreign matter is caught between the valve a	nd the
housing.		وروادي المرادي المرادي			
	umble contro on switch Of		ator names	s connector.	
6. Perform "	TUMBLE CC	NTROL VAL		TIVE TEST" mode with CONSULT.	
		check that th	e valve op	ens and closes.	
Without Control Turn ianiti	ONSULI on switch Of	-F			
2. Remove ii	ntake manifo	ld adapter. F		-27, "Removal and Installation".	
	heck the val	ve for dama	age and ch	eck if foreign matter is caught between the valve a	nd the
housing. 1. Supply tur	mble control	valve actuat	or terminal	s with battery voltage within 2 seconds and check ope	eration
. Cappiy tai			J. 1011111101	The second second and shock ope	
Tumble control	valve actuator				
Termi	nal	Operation			

Tumble control		
Term	Operation	
(+)	(-)	
4	5	Open
5	4	Close

CAUTION:

Never apply 12 V DC continuously for 30 seconds or more. Doing so may result in damage to the coil in tumble control valve motor.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace intake manifold adaptor. Refer to EM-26, "Exploded View".

Revision: 2012 August EC-855 2013 CUBE

P2014, P2016, P2017, P2018 TUMBLE CONTROL VALVE POSITION SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P2014, P2016, P2017, P2018 TUMBLE CONTROL VALVE POSITION SENSOR

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P2014, P2016, P2017 or P2018 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-798, "DTC Logic".

DTC No.	CONSULT screen terms (Trouble diagnosis content)	DTC detecting condition	Possible cause
P2014	IN/MANIFOLD RUNNER POS SEN B1 (Intake manifold runner position sensor/ switch circuit bank 1)	An excessively low voltage from the sen-	
P2016	IN/MANIFOLD RUNNER POS SEN B1 (Intake manifold runner position sensor/ switch circuit low bank 1)	sor is sent to ECM.	Harness or connectors (Intake manifold runner control position sensor circuit is short-
P2017	IN/MANIFOLD RUNNER POS SEN B1 (Intake manifold runner position sensor/ switch circuit high bank 1)	An excessively high voltage from the sen-	ed.) • Intake manifold runner control position sensor
P2018	IN/MANIFOLD RUNNER POS SEN B1 (Intake manifold runner position sensor/ switch circuit intermittent bank 1)	sor is sent to ECM.	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always perform the following before conducting the next test.

- 1. Turn ignition switch OFF and wait at least 10 seconds.
- 2. Turn ignition switch ON.
- 3. Turn ignition switch OFF and wait at least 10 seconds.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 10 seconds.
- 2. Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Proceed to EC-856, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008840796

1. CHECK TUMBLE CONTROL VALVE POSITION SENSOR POWER SUPPLY

- 1. Turn ignition switch OFF.
- 2. Disconnect tumble control valve position sensor harness connector.
- Turn ignition switch ON.
- 4. Check the voltage between tumble control valve position sensor harness connector.

P2014, P2016, P2017, P2018 TUMBLE CONTROL VALVE POSITION SENSOR [MR18DE (FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

Tumble control valve position sensor Voltage (Approx.) Connector **Terminal** F22 2 5 V 1

EC

Α

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 2.

D

Е

F

Ν

Р

2.CHECK TUMBLE CONTROL VALVE POSITION SENSOR POWER SUPPLY CIRCUIT

Check the voltage between tumble control valve position sensor harness connector and ground.

	+		
Tumble control valve position sensor		-	Voltage (Approx.)
Connector	Terminal		
F22	1	Ground	5 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Perform the trouble diagnosis for power supply circuit.

3.check ecm ground circuit

1. Turn ignition switch OFF.

2. Disconnect ECM harness connector.

Check the continuity between ECM harness connector and ground.

	+		
ECM		-	Continuity
Connector	Terminal		
F7	11		
	107		
E16	108	Ground	Existed
	109		
	112		

Also check harness for short to power.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to GI-41, "Intermittent Incident".

NO >> Repair or replace error-detected parts.

f 4.CHECK TUMBLE CONTROL VALVE POSITION SENSOR GROUND CIRCUIT

- Turn ignition switch OFF.
- Disconnect ECM harness connector. 2.
- Check the continuity between tumble control valve position sensor harness connector and ECM harness connector.

+		-		
Tumble control sen	•	ECM		Continuity
Connector	Terminal	Connector	Terminal	
F22	2	F8	47	Existed

Also check harness for short to power.

EC-857 Revision: 2012 August 2013 CUBE

P2014, P2016, P2017, P2018 TUMBLE CONTROL VALVE POSITION SENSOR [MR18DE (FOR CALIFORNIA)]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace error-detected parts.

5. CHECK TUMBLE CONTROL VALVE POSITION SENSOR INPUT SIGNAL CIRCUIT

Check the continuity between tumble control valve position sensor harness connector and ECM harness connector.

+		-		
Tumble control valve position sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	
F22	3	F8	35	Existed

2. Also check harness for short to ground and to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace error-detected parts.

6.CHECK INTERMITTENT INCIDENT

Perform GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace intake manifold assembly. Refer to EM-27, "Removal and Installation".


NO >> Repair or replace error-detected parts.

Description INFOID:0000000008451354


The air fuel ratio (A/F) sensor 1 is a planar one-cell limit current sensor. The sensor element of the A/F sensor 1 is composed an electrode layer, which transports ions. It has a heater in the element.

The sensor is capable of precise measurement $\lambda = 1$, but also in the lean and rich range. Together with its control electronics, the sensor outputs a clear, continuous signal throughout a wide λ range.

The exhaust gas components diffuse through the diffusion layer at the sensor cell. An electrode layer is applied voltage, and this current relative oxygen density in lean. Also this current relative hydrocarbon density in rich.

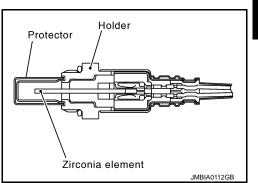

Therefore, the A/F sensor 1 is able to indicate air fuel ratio by this electrode layer of current. In addition, a heater is integrated in the sensor to ensure the required operating temperature of about 800°C (1,472°F).

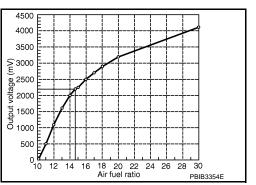

DTC Logic

DTC DETECTION LOGIC

To judge the malfunction, the A/F signal computed by ECM from the A/F sensor 1 signal is monitored not to be shifted to LEAN side or RICH side.

DTC No.	CONSULT screen terms (Trouble diagnosis content)	DTC detecting condition	Possible Cause
P2096	POST CAT FUEL TRIM SYS B1 (Post catalyst fuel trim system too lean bank 1)	The output voltage computed by ECM from the A/F sensor 1 signal is shifts to the lean side for a specified period.	A/F sensor 1 A/F sensor 1 heater Heated oxygen sensor 2
P2097	POST CAT FUEL TRIM SYS B1 (Post catalyst fuel trim system too rich bank 1)	The A/F signal computed by ECM from the A/F sensor 1 signal is shifts to the rich side for a specified period.	Fuel pressureFuel injectorIntake air leaksExhaust gas leaks

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V at idle.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE

- 1. Clear the mixture ratio self-learning value. Refer to <u>EC-490, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR : Special Repair Requirement"</u>.
- Turn ignition switch OFF and wait at least 10 seconds.
- 3. Start engine and keep the engine speed between 3,500 and 4,000 rpm for 1 minute under no load.
- 4. Let engine idle for 1 minute.

Revision: 2012 August EC-859 2013 CUBE

Α

EC

D

Е

G

ш

K

L

M

N

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- Keep engine speed between 2,500 and 3,000 rpm for 20 minutes.
- Check 1st trip DTC.

Is 1st trip DTC detected?

YES >> Go to EC-860, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451356

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK HARNESS CONNECTOR

- Disconnect A/F sensor 1 harness connector.
- Check harness connector for water.

Water should not exit.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness connector.

3.RETIGHTEN A/F SENSOR 1 AND HEATED OXYGEN SENSOR 2

1. Loosen and retighten the A/F sensor 1 and heated oxygen sensor 2. Refer to EM-30, "Exploded View" or EX-5, "Exploded View".

>> GO TO 4.

4.CHECK FOR EXHAUST GAS LEAK

- Start engine and run it at idle.
- Listen for an exhaust gas leak before the three way catalyst 2.

Is exhaust gas leak detected?

YES >> Repair or replace malfunctioning parts.

NO >> GO TO 5.

5.CHECK FOR INTAKE AIR LEAK

- Reconnect A/F sensor 1 harness connector.
- Start engine and run it at idle.
- 3. Listen for an intake air leak after the mass air flow sensor.

Is intake air leak detected?

YES >> Repair or replace.

NO >> GO TO 6.

6.CLEAR THE MIXTURE RATIO SELF-LEARNING VALUE

- Clear the mixture ratio self-learning value. Refer to <u>EC-490, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement"</u>.
- Run engine for at least 10 minutes at idle speed.

Is the 1st trip DTC P0171 or P0172 detected? Is it difficult to start engine?

YES >> Perform trouble diagnosis for DTC P0171or P0172. Refer to <u>EC-689, "DTC Logic"</u> or <u>EC-693, "DTC Logic"</u>.

NO >> GO TO 7.

7. CHECK A/F SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Disconnect A/F sensor 1 harness connector.
- Turn ignition switch ON.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Check the voltage between A/F sensor 1 harness connector and ground.

A/F sensor 1		Ground	Voltage
Connector	Terminal	Giodila	voltage
F51	4	Ground	Battery voltage

EC

Is the inspection result normal?

YES >> GO TO 9. NO >> GO TO 8.

8. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- IPDM E/R harness connector E15
- 10 A fuse (No. 61)
- Harness for open or short between A/F sensor 1 and fuse

>> Repair or replace harness or connectors.

9.check a/f sensor 1 input signal circuit for open and short

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between A/F sensor 1 harness connector and ECM harness connector.

A/F sensor 1		ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F51	1	F8	49	Existed
	2	10	53	LXISIGU

4. Check the continuity between A/F sensor 1 harness connector and ground, or ECM harness connector and ground.

A/F sensor 1		Ground	Continuity	
Connector Terminal		Ground	Continuity	
F51	1	Ground	Not existed	
	2	Ground	Not existed	

1	
_	
_	

ECM		Ground	Continuity	
Connector Terminal		Ground	Continuity	
F8	49	Ground	Not existed	
10	53	Ground	NOT EXISTED	

N

5. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

10.CHECK A/F SENSOR 1 HEATER

Refer to EC-616, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 11. NO >> GO TO 13.

11. CHECK HEATED OXYGEN SENSOR 2

Check heated oxygen sensor 2. Refer to EC-667, "Component Inspection".

EC-861 Revision: 2012 August 2013 CUBE

Α

Е

K

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Is the inspection result normal?

YES >> GO TO 12.

NO >> Replace heated oxygen sensor 2. Refer to <a>EX-5, "Exploded View".

12. CHECK INTERMITTENT INCIDENT

Perform GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 13.

NO >> Repair or replace.

13. REPLACE AIR FUEL RATIO (A/F) SENSOR 1

Replace air fuel ratio (A/F) sensor 1. Refer to EM-30, "Exploded View".

CAUTION:

- Discard any sensor which has been dropped from a height of more than 0.5 m (19.7 in) onto a hard surface such as a concrete floor; use a new one.
- Before installing new sensor, clean exhaust system threads using Oxygen Sensor Thread Cleaner [commercial service tool (J-43897-18 or J-43897-12)] and approved Anti-seize Lubricant (commercial service tool).

Do you have CONSULT?

YES >> GO TO 14. NO >> GO TO 15.

14.CONFIRM A/F ADJUSTMENT DATA

(P)With CONSULT

- 1. Turn ignition switch ON.
- Select "A/F ADJ-B1" in "DATA MONITOR" mode with CONSULT.
- 3. Make sure that "0.000" is displayed on CONSULT screen.

Is "0.000" displayed?

YES >> INSPECTION END

NO >> GO TO 15.

15. CLEAR THE MIXTURE RATIO SELF-LEARNING VALUE

Clear the mixture ratio self-learning value. Refer to EC-490, "MIXTURE RATIO SELF-LEARNING VALUE CLEAR: Special Repair Requirement".

Do you have CONSULT?

YES >> GO TO 16.

NO >> INSPECTION END

16.confirm a/f adjustment data

(P)With CONSULT

- 1. Turn ignition switch ON.
- 2. Select "A/F ADJ-B1" in "DATA MONITOR" mode with CONSULT.
- 3. Make sure that "0.000" is displayed on CONSULT screen.

>> INSPECTION END

P2100, P2103 THROTTLE CONTROL MOTOR RELAY

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P2100, P2103 THROTTLE CONTROL MOTOR RELAY

Description INFOID:0000000008451324

Power supply for the throttle control motor is provided to the ECM via throttle control motor relay. The throttle control motor relay is ON/OFF controlled by the ECM. When the ignition switch is turned ON, the ECM sends an ON signal to throttle control motor relay and battery voltage is provided to the ECM. When the ignition switch is turned OFF, the ECM sends an OFF signal to throttle control motor relay and battery voltage is not provided to the ECM.

DTC Logic INFOID:0000000008451325

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2100	Throttle control motor relay circuit open	ECM detects a voltage of power source for throttle control motor is excessively low.	Harness or connectors (Throttle control motor relay circuit is open) Throttle control motor relay
P2103	Throttle control motor relay circuit short	ECM detect the throttle control motor relay is stuck ON.	Harness or connectors (Throttle control motor relay circuit is shorted) Throttle control motor relay

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V.

Witch DTC is detected?

P2100 >> GO TO 2.

P2103 >> GO TO 3.

2.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P2100

- Turn ignition switch ON and wait at least 2 seconds.
- Start engine and let it idle for 5 seconds.
- Check DTC.

Is DTC detected?

YFS >> Go to EC-863, "Diagnosis Procedure".

>> INSPECTION END NO

3.PERFORM DTC CONFIRMATION PROCEDURE FOR DTC P2103

- Turn ignition switch ON and wait at least 1 second.
- Check DTC.

Is DTC detected?

YES >> Go to EC-863, "Diagnosis Procedure".

>> INSPECTION END NO

Diagnosis Procedure

${f 1}$.CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT-I

- Turn ignition switch OFF.
- Check the voltage between ECM harness connector and ground.

EC

Α

C

D

Е

Н

K

M

N

INFOID:0000000008451326

P2100, P2103 THROTTLE CONTROL MOTOR RELAY

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

E	ECM		Voltage
Connector	Terminal	Ground	voltage
F7	15	Ground	Battery voltage

OK or NG

OK >> GO TO 5.

NG >> GO TO 2.

2.CHECK THROTTLE CONTROL MOTOR RELAY POWER SUPPLY CIRCUIT-II

- Disconnect ECM harness connector.
- 2. Disconnect IPDM E/R harness connector.
- 3. Check the continuity between ECM harness connector and IPDM E/R harness connector.

E	CM	IPDI	M E/R	Continuity
Connector	Terminal	Connector Terminal		Continuity
F7	15	E15	57	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

4.CHECK FUSE

- 1. Disconnect 15 A fuse (No. 64) from IPDM E/R.
- 2. Check 15 A fuse for blown.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace 15 A fuse.

5. CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-I

Check the voltage between ECM harness connector and ground under the following conditions.

E	СМ	Ground	Condition	Voltage
Connector	Terminal	Giodila	Condition	
F7	F7 2	Ground	Ignition switch: OFF	Approximately 0 V
1 /	2	Giodila	Ignition switch: ON	Battery voltage

OK or NG

OK >> GO TO 8.

NG >> GO TO 6.

O.CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-II

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Disconnect IPDM E/R harness connector.
- 4. Check the continuity between ECM harness connector and IPDM E/R harness connector.

P2100, P2103 THROTTLE CONTROL MOTOR RELAY

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

·		Connector	Terminal	Continuity	
Also check harness for short to ground and short to power. the inspection result normal? YES >> GO TO 8. IDO >> GO TO 7. IDETECT MALFUNCTIONING PART The seck the following. Harness connectors E8, F1 Harness for open or short between ECM and IPDM E/R >> Repair open circuit or short to ground or short to power in harness or connectors. ICHECK INTERMITTENT INCIDENT Intermittent Incident". The inspection result normal? YES >> Replace IPDM E/R. Refer to PCS-33, "Removal and Installation" (With I-KEY), PCS-62, "Removal and Installation" (Without I-KEY).			Terrinia		
Also check harness for short to ground and short to power. the inspection result normal? TES >> GO TO 8. IDETECT MALFUNCTIONING PART THE TO THE T	F7 2	E15	54	Existed	
PES >> GO TO 8. **JO >> GO TO 7. **DETECT MALFUNCTIONING PART **neck the following. **Harness connectors E8, F1 **Harness for open or short between ECM and IPDM E/R **Nepair open circuit or short to ground or short to power in harness or connectors. **CHECK INTERMITTENT INCIDENT **Per to GI-41, "Intermittent Incident". **The inspection result normal? **YES >> Replace IPDM E/R. Refer to PCS-33, "Removal and Installation" (With I-KEY), PCS-62, "Removal and Installation" (Without I-KEY).		rt to ground and	d short to powe	r.	
DETECT MALFUNCTIONING PART neck the following. Harness connectors E8, F1 Harness for open or short between ECM and IPDM E/R >> Repair open circuit or short to ground or short to power in harness or connectors. CHECK INTERMITTENT INCIDENT efer to GI-41, "Intermittent Incident". the inspection result normal? >> Replace IPDM E/R. Refer to PCS-33, "Removal and Installation" (With I-KEY), PCS-62, "Removal and Installation" (Without I-KEY).	-				
DETECT MALFUNCTIONING PART neck the following. Harness connectors E8, F1 Harness for open or short between ECM and IPDM E/R >> Repair open circuit or short to ground or short to power in harness or connectors. CHECK INTERMITTENT INCIDENT efer to GI-41, "Intermittent Incident". the inspection result normal? (ES >> Replace IPDM E/R. Refer to PCS-33, "Removal and Installation" (With I-KEY), PCS-62, "Removal and Installation" (Without I-KEY).					
heck the following. Harness connectors E8, F1 Harness for open or short between ECM and IPDM E/R >> Repair open circuit or short to ground or short to power in harness or connectors. CHECK INTERMITTENT INCIDENT Efer to GI-41, "Intermittent Incident". the inspection result normal? >> Replace IPDM E/R. Refer to PCS-33, "Removal and Installation" (With I-KEY), PCS-62, "Removal and Installation" (Without I-KEY).		○ DA DT			
Harness connectors E8, F1 Harness for open or short between ECM and IPDM E/R >> Repair open circuit or short to ground or short to power in harness or connectors. CHECK INTERMITTENT INCIDENT efer to GI-41, "Intermittent Incident". the inspection result normal? (ES >> Replace IPDM E/R. Refer to PCS-33, "Removal and Installation" (With I-KEY), PCS-62, "Removal and Installation" (Without I-KEY).		G PART			
CHECK INTERMITTENT INCIDENT efer to GI-41, "Intermittent Incident". the inspection result normal? YES >> Replace IPDM E/R. Refer to PCS-33, "Removal and Installation" (With I-KEY), PCS-62, "Removal and Installation" (Without I-KEY).		ween ECM and	IPDM E/R		
CHECK INTERMITTENT INCIDENT efer to GI-41, "Intermittent Incident". the inspection result normal? YES >> Replace IPDM E/R. Refer to PCS-33, "Removal and Installation" (With I-KEY), PCS-62, "Removal and Installation" (Without I-KEY).					
efer to GI-41, "Intermittent Incident". the inspection result normal? (ES >> Replace IPDM E/R. Refer to PCS-33, "Removal and Installation" (With I-KEY), PCS-62, "Removal and Installation" (Without I-KEY).			ind or short to	power in harness or c	onnectors.
the inspection result normal? (ES >> Replace IPDM E/R. Refer to PCS-33, "Removal and Installation" (With I-KEY), PCS-62, "Removal and Installation" (Without I-KEY).	.CHECK INTERMITTENT INC	CIDENT			
'ES >> Replace IPDM E/R. Refer to PCS-33, "Removal and Installation" (With I-KEY), PCS-62, "Removal and Installation" (Without I-KEY).	efer to GI-41, "Intermittent Inci	ident".			
and Installation" (Without I-KEY).	the inspection result normal?				
			33, "Removal a	nd Installation" (With	I-KEY), PCS-62, "Removal
Topal of replace names of connectors.			ectors		
	10 >> Nopali of Topiace III	arriess or comm	501013.		

Revision: 2012 August EC-865 2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P2101 ELECTRIC THROTTLE CONTROL FUNCTION

Description INFOID:000000008451327

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc.

The throttle control motor is operated by the ECM and it opens and closes the throttle valve.

The current opening angle of the throttle valve is detected by the throttle position sensor and it provides feedback to the ECM. ECM controls the throttle valve opening angle in response to driving condition via the throttle control motor.

DTC Logic

DTC DETECTION LOGIC

NOTE:

- If DTC P2101 is displayed with DTC P2100, first perform the trouble diagnosis for DTC P2100. Refer to EC-863, "DTC Logic".
- If DTC P2101 is displayed with DTC P2119, first perform the trouble diagnosis for DTC P2119. Refer to <u>EC-872</u>, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2101	Electric throttle control performance	Electric throttle control function does not operate properly.	Harness or connectors (Throttle control motor circuit is open or shorted) Electric throttle control actuator

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 11 V when engine is running.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 2 seconds.
- 2. Start engine and let it idle for 5 seconds.
- Check DTC.

Is DTC detected?

YES >> Go to EC-866, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451329

CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-I

1. Check the voltage between ECM harness connector and ground under the following conditions.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

ECM		Ground	Condition	Voltago	
Connector	Terminal	Glound	Condition	Voltage	
F7	2	Ground	Ignition switch: OFF	Approx. 0 V	
Γ1	2	Ground	Ignition switch: ON	Battery voltage	
a the inspection result normal?					

EC

Α

Is the inspection result normal?

YES >> GO TO 9. NO >> GO TO 3.

D

Е

F

3.check throttle control motor relay power supply circuit

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Disconnect IPDM E/R harness connector.
- 4. Check the continuity between ECM harness connector and IPDM E/R harness connector.

IPDN	IPDM E/R		ECM	
Connector	Terminal	Connector	Terminal	Continuity
E15	57	F7	15	Existed

5. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F8
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

5.CHECK THROTTLE CONTROL MOTOR RELAY INPUT SIGNAL CIRCUIT-II

Check the continuity between ECM harness connector and IPDM E/R harness connector.

IPDI	M E/R	E	CM	Continuity
Connector	Terminal	Connector	Terminal	Continuity
E15	54	F7	2	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 7. NO >> GO TO 6.

 $\mathsf{6}.\mathsf{DETECT}$ MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

7. CHECK FUSE

- Disconnect 15 A fuse (No. 64) from IPDM E/R.
- Check 15 A fuse for blown.

Is the inspection result normal?

EC-867 Revision: 2012 August 2013 CUBE K

N

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

YES >> GO TO 8.

NO >> Replace 15 A fuse.

8. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to <u>PCS-33</u>, "Removal and Installation" (With I-KEY), <u>PCS-62</u>, "Removal and Installation" (Without I-KEY).

NO >> Repair or replace harness or connectors.

9.CHECK THROTTLE CONTROL MOTOR OUTPUT SIGNAL CIRCUIT FOR OPEN OR SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect electric throttle control actuator harness connector.
- 3. Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

Electric throttle	Electric throttle control actuator		ECM	
Connector	Terminal	Connector	Terminal	Continuity
	5 F7	F7	1	Not existed
F29			4	Existed
129			1	Existed
			4	Not existed

5. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair or replace.

10. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY


- 1. Remove the intake air duct.
- 2. Check if foreign matter is caught between the throttle valve (1) and the housing.
- Electric throttle control actuator (2)

Is the inspection result normal?

YES >> GO TO 11.

NO >> Remove t

>> Remove the foreign matter and clean the electric throttle control actuator inside, then perform throttle valve closed position learning. Refer to EC-488, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement"...

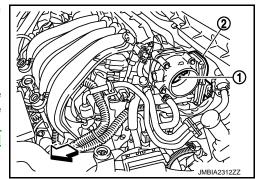

2013 CUBE

11. CHECK THROTTLE CONTROL MOTOR

Refer to EC-869, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 12.

NO >> GO TO 13.

12. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> GO TO 13.

Revision: 2012 August

NO >> Repair or replace harness or connectors.

13. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

Replace electric throttle control actuator. Refer to EM-26, "Exploded View".

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

>> INS	SPECTION END		А
Component Inspection 1. CHECK THROTTLE CONTROL MOTOR 1. Turn ignition switch OFF. 2. Disconnect electric throttle control actuator harness connector. 3. Check the resistance between electric throttle control actuator terminals as per the following. Terminals Resistance 5 and 6 Approx. 1 - 15 \Omega (at 25°C (77°F)) Is the inspection result normal? YES >> INSPECTION END NO >> GO TO 2. 2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR Replace electric throttle control actuator. Refer to EM-26, "Exploded View". >> INSPECTION END			
1.CHECK THE	ROTTLE CONTROL MOTOR		EC
Disconnect	electric throttle control actuato		g.
Terminals	Resistance	•	D
5 and 6	Approx. 1 - 15 Ω [at 25°C (77°F)]	•	
YES >> INS NO >> GO	SPECTION END TO 2.		Е
2.REPLACE E	LECTRIC THROTTLE CONTR	ROL ACTUATOR	F
Replace electric	throttle control actuator. Refe	r to EM-26, "Exploded View".	
>> INS	SPECTION END		G
			Н
			I
			J
			К
			L
			M
			Ν
			0
			Р

P2118 THROTTLE CONTROL MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P2118 THROTTLE CONTROL MOTOR

Description INFOID:000000008451331

The throttle control motor is operated by the ECM and it opens and closes the throttle valve.

The current opening angle of the throttle valve is detected by the throttle position sensor and it provides feedback to the ECM. ECM controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2118	Throttle control motor circuit short	ECM detects short in both circuits between ECM and throttle control motor.	Harness or connectors (Throttle control motor circuit is shorted.) Electric throttle control actuator (Throttle control motor)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Turn ignition switch ON and wait at least 2 seconds.
- 2. Start engine and let it idle for 5 seconds.
- Check DTC.

Is DTC detected?

YES >> Go to EC-870, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451333

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK THROTTLE CONTROL MOTOR OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Disconnect electric throttle control actuator harness connector.
- Disconnect ECM harness connector.
- Check the continuity between electric throttle control actuator harness connector and ECM harness connector.

Electric throttle	Electric throttle control actuator		ECM		
Connector	Terminal	Connector	Terminal	Continuity	
	-		1	Not existed	
F29	5	F7	4	Existed	
1 29		6	17	1	Existed
	0		4	Not existed	

P2118 THROTTLE CONTROL MOTOR < DTC/CIRCUIT DIAGNOSIS > [MR18DE (FOR CALIFORNIA)]	
4. Also check harness for short to ground and short to power.	
Is the inspection result normal?	Α
YES >> GO TO 3.	
NO >> Repair or replace.	
3.check throttle control motor	EC
Refer to EC-871, "Component Inspection".	
Is the inspection result normal?	С
YES >> GO TO 4.	
NO $>>$ GO TO 5. 4. CHECK INTERMITTENT INCIDENT	D
Refer to GI-41, "Intermittent Incident".	
Is the inspection result normal?	_
YES >> GO TO 5.	Е
NO >> Repair or replace harness or connectors.	
5. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR	F
Replace electric throttle control actuator. Refer to EM-26, "Exploded View".	
>> INSPECTION END	G
Component Inspection	
1. CHECK THROTTLE CONTROL MOTOR	Н
 Turn ignition switch OFF. Disconnect electric throttle control actuator harness connector. Check the resistance between electric throttle control actuator terminals as per the following. 	I
Terminals Resistance	.1
5 and 6 Approx. 1 - 15 Ω [at 25°C (77°F)]	O
Is the inspection result normal?	
YES >> INSPECTION END	K
NO >> GO TO 2.	
2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR	L
Replace electric throttle control actuator. Refer to EM-26, "Exploded View".	
>> INSPECTION END	M
	Ν
	-
	0
	Р

P2119 ELECTRIC THROTTLE CONTROL ACTUATOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

P2119 ELECTRIC THROTTLE CONTROL ACTUATOR

Description INFOID.000000008451335

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc.

The throttle control motor is operated by the ECM and it opens and closes the throttle valve.

The throttle position sensor detects the throttle valve position, and feeds the voltage signal to the ECM. The ECM judges the current opening angle of the throttle valve and controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition		Possible cause
		Α	Electric throttle control actuator does not function properly due to the return spring malfunction.	
P2119	Electric throttle control actuator	В	Throttle valve opening angle in fail-safe mode is not in specified range.	Electric throttle control actuator
		С	ECM detect the throttle valve is stuck open.	

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2.PERFORM DTC CONFIRMATION PROCEDURE FOR MALFUNCTION A AND B

- 1. Turn ignition switch ON and wait at least 1 second.
- 2. Set selector lever to D (CVT) or 1st (M/T) position and wait at least 3 seconds.
- 3. Set selector lever to P (CVT) or Neutral (M/T) position.
- 4. Turn ignition switch OFF and wait at least 10 seconds.
- 5. Turn ignition switch ON and wait at least 1 second.
- 6. Set selector lever to D (CVT) or 1st (M/T) position and wait at least 3 seconds.
- 7. Set selector lever to P (CVT) or Neutral (M/T) position.
- 8. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
- 9. Check DTC.

Is DTC detected?

YES >> Go to EC-872, "Diagnosis Procedure".

NO >> GO TO 3.

3.perform dtc confirmation procedure for malfunction c

- 1. Turn ignition switch ON and wait at least 1 second.
- 2. Set selector lever to D (CVT) or 1st (M/T) position and wait at least 3 seconds.
- 3. Set selector lever to P (CVT) or Neutral (M/T) position.
- 4. Start engine and let it idle for 3 seconds.
- 5. Check DTC.

Is DTC detected?

YES >> Go to EC-872, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451337

1. CHECK ELECTRIC THROTTLE CONTROL ACTUATOR VISUALLY

- Turn ignition switch OFF.
- 2. Remove the intake air duct.

P2119 ELECTRIC THROTTLE CONTROL ACTUATOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

3. Check if foreign matter is caught between the throttle valve (1) and the housing.


Electric throttle control actuator (2)

Is the inspection result normal?

YES >> GO TO 2.

NO

>> Remove the foreign matter and clean the electric throttle control actuator inside, then perform throttle valve closed position learning. Refer to EC-488, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".

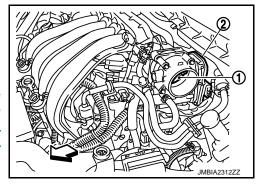

2. REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

Replace electric throttle control actuator. Refer to EM-26, "Exploded View".

>> INSPECTION END

EC

Α

С

D

Е

F

Н

. I

Κ

L

M

Ν

C


P2122, P2123 APP SENSOR

Description INFOID:000000008451338

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.

Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometer which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.

Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

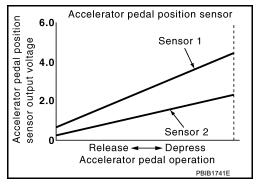

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P2122 or P2123 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to <u>EC-798</u>, "<u>DTC Logic"</u>.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2122	Accelerator pedal position sensor 1 circuit low input	An excessively low voltage from the APP sensor 1 is sent to ECM.	Harness or connectors (APP sensor 1 circuit is open or shorted.)
P2123	Accelerator pedal position sensor 1 circuit high input	An excessively high voltage from the APP sensor 1 is sent to ECM.	Accelerator pedal position sensor (APP sensor 1)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 1 second.
- 2. Check DTC.

Is DTC detected?

YES >> Go to EC-874, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000008451340

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2. CHECK APP SENSOR 1 POWER SUPPLY CIRCUIT

1. Disconnect accelerator pedal position (APP) sensor harness connector.

P2122, P2123 APP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- 2. Turn ignition switch ON.
- 3. Check the voltage between APP sensor harness connector and ground.

APP :	sensor	Ground	Voltage
Connector	Terminal	Giodila	
E110	4	Ground	Approx. 5 V

EC

D

Е

Α

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

3.CHECK APP SENSOR 1 GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between APP sensor harness connector and ECM harness connector.

APP :	sensor	E	СМ	Continuity
Connector	Terminal	Connector	Terminal	Continuity
E110	2	E16	111	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4.CHECK APP SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between APP sensor harness connector and ECM harness connector.

APP sensor		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E110	3	E16	110	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK APP SENSOR

Refer to EC-875, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

6.REPLACE ACCELERATOR PEDAL ASSEMBLY

Replace accelerator pedal assembly. Refer to ACC-3, "Removal and Installation".

>> INSPECTION END

7. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

1. CHECK ACCELERATOR PEDAL POSITION SENSOR

Ν

INFOID:0000000008451341

Revision: 2012 August EC-875 2013 CUBE

P2122, P2123 APP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- 1. Reconnect all harness connectors disconnected.
- 2. Turn ignition switch ON.
- 3. Check the voltage between ECM harness connector and ground.

E	ECM		Condition		Voltage
Connector	Terminal	Ground	Con	uition	voltage
	110			Fully released	0.6 - 0.9 V
F16	E16 (APP sensor 1 signal)	Ground	Accelerator ped-	Fully depressed	3.9 - 4.7 V
LIO				Fully released	0.3 - 0.6 V
	(APP sensor 2 signal)			Fully depressed	1.95 - 2.4 V

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. REPLACE ACCELERATOR PEDAL ASSEMBLY

Replace accelerator pedal assembly. Refer to ACC-3, "Removal and Installation".

>> INSPECTION END

Α

EC

D

E

M

Ν

Р

2013 CUBE


P2127, P2128 APP SENSOR

Description INFOID:000000008451342

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.

Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometer which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.

Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

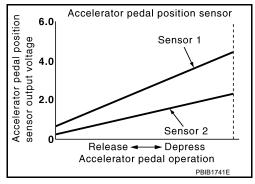

DTC Logic

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2127	Accelerator pedal position sensor 2 circuit low input	An excessively low voltage from the APP sensor 2 is sent to ECM.	Harness or connectors (APP sensor 2 circuit is open or shorted.)
P2128	Accelerator pedal position sensor 2 circuit high input	An excessively high voltage from the APP sensor 2 is sent to ECM.	[Crankshaft position sensor (POS) circuit is shorted.] (Refrigerant pressure sensor circuit is shorted.) (EVAP control system pressure sensor circuit is shorted.) (Battery current sensor circuit is shorted.) (Tumble control valve position sensor circuit is shorted.) • Accelerator pedal position sensor (APP sensor 2) • Crankshaft position sensor (POS) • Refrigerant pressure sensor • EVAP control system pressure sensor • Battery current sensor • Tumble control valve position sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- 1. Start engine and let it idle for 1 second.
- Check DTC.

Is DTC detected?

Revision: 2012 August

YES >> Go to EC-878, "Diagnosis Procedure".

NO >> INSPECTION END

EC-877

P2127, P2128 APP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Diagnosis Procedure

INFOID:0000000008451344

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-I

- 1. Disconnect accelerator pedal position (APP) sensor harness connector.
- Turn ignition switch ON.
- 3. Check the voltage between APP sensor harness connector and ground.

APP s	sensor	Ground	Voltage
Connector	Connector Terminal		voltage
E110	5	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 3.

3.CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between APP sensor harness connector and ECM harness connector.

APP	APP sensor		CM	Continuity
Connector	Terminal	Connector	Terminal	Continuity
E110	5	E16	102	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
	69	Tumble control valve actuator	F22	1
	71	Battery current sensor	F53	1
F8	74	Refrigerant pressure sensor	E49	3
. 0	75	CKP sensor (POS)	F20	1
	76	EVAP control system pressure sensor	B21	3
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair short to ground or short to power in harness or connectors.

5. CHECK COMPONENTS

Check the following.

- Battery current sensor (Refer to EC-821, "Component Inspection".)
- Crankshaft position sensor (POS) (Refer to <u>EC-725, "Component Inspection"</u>.)

P2127, P2128 APP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- Refrigerant pressure sensor (Refer to EC-916, "Diagnosis Procedure".)
- Tumble control valve (Refer to <u>EC-855, "Component Inspection"</u>.)

Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace malfunctioning component.

6.CHECK APP SENSOR 2 GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Check the continuity between APP sensor harness connector and ECM harness connector.

APP	APP sensor		ECM	
Connector	Terminal	Connector	Terminal	Continuity
E110	1	E16	104	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

7.CHECK APP SENSOR 2 INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between APP sensor harness connector and ECM harness connector.

APP	APP sensor		ECM	
Connector	Terminal	Connector	Terminal	Continuity
E110	6	E16	103	Existed

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

8.CHECK APP SENSOR

Refer to EC-887, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 9.

9. REPLACE ACCELERATOR PEDAL ASSEMBLY

Replace accelerator pedal assembly. Refer to ACC-3, "Removal and Installation".

>> INSPECTION END

10. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

1. CHECK ACCELERATOR PEDAL POSITION SENSOR

- Reconnect all harness connectors disconnected.
- Turn ignition switch ON.
- 3. Check the voltage between ECM harness connector and ground.

EC

Α

U

D

Е

F

G

Н

J

K

L

IVI

Ν

С

Р

INFOID:0000000008451345

P2127, P2128 APP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

E	ECM		Condition		\/altaga
Connector	Terminal	Ground	Condition		Voltage
	110			Fully released	0.6 - 0.9 V
E16	(APP sensor 1 signal)	Ground	Accelerator ped- al	Fully depressed	3.9 - 4.7 V
LIO	103			Fully released	0.3 - 0.6 V
	(APP sensor 2 signal)			Fully depressed	1.95 - 2.4 V

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.REPLACE ACCELERATOR PEDAL ASSEMBLY

Replace accelerator pedal assembly. Refer to ACC-3, "Removal and Installation".


>> INSPECTION END

P2135 TP SENSOR

Description INFOID:0000000008451346

Electric throttle control actuator consists of throttle control motor, throttle position sensor, etc. The throttle position sensor responds to the throttle valve movement.

The throttle position sensor has two sensors. These sensors are a kind of potentiometer which transform the throttle valve position into output voltage, and emit the voltage signals to the ECM. The ECM judges the current opening angle of the throttle valve from these signals and controls the throttle valve opening angle in response to driving conditions via the throttle control motor.

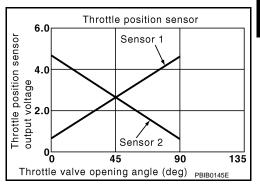

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P2135 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-798, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2135	Throttle position sensor circuit range/performance	Rationally incorrect voltage is sent to ECM compared with the signals from TP sensor 1 and TP sensor 2.	Harness or connector (TP sensor 1 or 2 circuit is open or shorted.) Electric throttle control actuator (TP sensor 1 or 2)

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2.perform dtc confirmation procedure

- 1. Start engine and let it idle for 1 second.
- 2. Check DTC.

Is DTC detected?

YES >> Go to EC-881, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK THROTTLE POSITION SENSOR POWER SUPPLY CIRCUIT

- 1. Disconnect electric throttle control actuator harness connector.
- 2. Turn ignition switch ON.

EC

Α

С

D

E

Н

J

L

...

N

INFOID:0000000008451348

< DTC/CIRCUIT DIAGNOSIS >

Check the voltage between electric throttle control actuator harness connector and ground.

Electric throttle	control actuator	Ground	Voltage
Connector	Connector Terminal		voltage
F29	2	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

3. CHECK THROTTLE POSITION SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between electric throttle control actuator harness connector and ground.

Electric throttle	Electric throttle control actuator		ECM	
Connector	Terminal	Connector	Terminal	Continuity
F29	4	F8	36	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4.CHECK THROTTLE POSITION SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between electric throttle control actuator harness connector and ground.

Electric throttle	control actuator	actuator ECM		Continuity
Connector	Terminal	Connector Terminal		Continuity
F29	1	F8	33	Existed
F29	3	го	34	EXISTECT

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK THROTTLE POSITION SENSOR

Refer to EC-882, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 6.

6.REPLACE ELECTRIC THROTTLE CONTROL ACTUATOR

Replace electric throttle control actuator. Refer to EM-26, "Exploded View".

>> INSPECTION END

7. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection

INFOID:0000000008451349

1. CHECK THROTTLE POSITION SENSOR

P2135 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- 1. Turn ignition switch OFF.
- 2. Reconnect all harness connectors disconnected.
- 3. Perform EC-488, "THROTTLE VALVE CLOSED POSITION LEARNING: Special Repair Requirement".
- 4. Turn ignition switch ON.
- 5. Set selector lever to D (CVT) or 1st (M/T) position.
- 6. Check the voltage between ECM harness connector and ground.

ECM		Ground	Col	Condition		
Connector	Terminal	Glound		nation	Voltage	
	33 (TP sensor			Fully released	More than 0.36V	
F8	1 signal)	Ground	Accelerator	Fully de- pressed	Less than 4.75V	
10	34 (TP sensor	Ground		pedal	Fully released	Less than 4.75V
	2 signal)			Fully de- pressed	More than 0.36V	

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.replace electric throttle control actuator

Replace electric throttle control actuator. Refer to EM-26, "Exploded View".

>> INSPECTION END

EC

Α

D

Е

F

G

Н

K

L

M

Ν

0


P2138 APP SENSOR

Description INFOID.000000008451350

The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly. The sensor detects the accelerator position and sends a signal to the ECM.

Accelerator pedal position sensor has two sensors. These sensors are a kind of potentiometer which transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM. The ECM judges the current opening angle of the accelerator pedal from these signals and controls the throttle control motor based on these signals.

Idle position of the accelerator pedal is determined by the ECM receiving the signal from the accelerator pedal position sensor. The ECM uses this signal for the engine operation such as fuel cut.

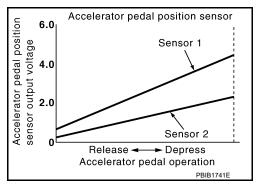

DTC Logic

DTC DETECTION LOGIC

NOTE:

If DTC P2138 is displayed with DTC P0643, first perform the trouble diagnosis for DTC P0643. Refer to EC-798, "DTC Logic".

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P2138	Accelerator pedal position sensor circuit range/performance	Rationally incorrect voltage is sent to ECM compared with the signals from APP sensor 1 and APP sensor 2.	Harness or connector (APP sensor 1 or 2 circuit is open or shorted.) [Crankshaft position sensor (POS) circuit is shorted.) (Refrigerant pressure sensor circuit is shorted.) (EVAP control system sensor circuit is shorted.) (Battery current sensor circuit is shorted.) (Tumble control valve position sensor circuit is shorted.) Accelerator pedal position sensor (APP sensor 1 or 2) Crankshaft position sensor (POS) Refrigerant pressure sensor EVAP control system pressure sensor Battery current sensor Tumble control valve position sensor

DTC CONFIRMATION PROCEDURE

1.PRECONDITIONING

If DTC Confirmation Procedure has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

TESTING CONDITION:

Before performing the following procedure, confirm that battery voltage is more than 8 V at idle.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

- Start engine and let it idle for 1 second.
- Check DTC.

Is DTC detected?

YES >> Go to EC-885, "Diagnosis Procedure".

NO >> INSPECTION END

Revision: 2012 August EC-884 2013 CUBE

P2138 APP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Diagnosis Procedure

INFOID:0000000008451352

1. CHECK GROUND CONNECTION

- 1. Turn ignition switch OFF.
- 2. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK APP SENSOR 1 POWER SUPPLY CIRCUIT

- 1. Disconnect accelerator pedal position (APP) sensor harness connector.
- 2. Turn ignition switch ON.
- Check the voltage between APP sensor harness connector and ground.

APP	sensor	Ground	Voltage	
Connector	Terminal	Glound	vollage	
E110	4	Ground	Approx. 5 V	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair open circuit or short to ground or shot to power in harness or connectors.

3. CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-I

1. Check the voltage between APP sensor harness connector and ground.

APP sensor		Ground	Voltage	
Connector	Connector Terminal		voltage	
E110	5	Ground	Approx. 5 V	

Is the inspection result normal?

YES >> GO TO 7.

NO >> GO TO 4.

4. CHECK APP SENSOR 2 POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between APP sensor harness connector and ECM harness connector.

APP :	APP sensor		ECM	
Connector	Terminal	Connector	Terminal	Continuity
E110	4	E16	106	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair open circuit or short to ground or shot to power in harness or connectors.

${f 5}.$ CHECK SENSOR POWER SUPPLY CIRCUIT

Check harness for short to power and short to ground, between the following terminals.

EC

Α

D

Е

Н

K

L

Ν

0

ECM		Sensor		
Connector	Terminal	Name	Connector	Terminal
	69	Tumble control valve actuator	F22	1
	71	Battery current sensor	F53	1
F8	74	Refrigerant pressure sensor	E49	3
	75	CKP sensor (POS)	F20	1
	76	EVAP control system pressure sensor	B21	3
E16	102	APP sensor	E110	5

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair short to ground or short to power in harness or connectors.

6. CHECK COMPONENTS

Check the following.

- Battery current sensor (Refer to EC-821, "Component Inspection".)
- Crankshaft position sensor (POS) (Refer to EC-725, "Component Inspection".)
- Refrigerant pressure sensor (Refer to EC-916, "Diagnosis Procedure".)
- Tumble control valve (Refer to EC-855, "Component Inspection".)

Is the inspection result normal?

YES >> GO TO 11.

NO >> Replace malfunctioning component.

7.CHECK APP SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- Check the continuity between APP sensor harness connector and ECM harness connector as per the following.

APP :	sensor	nsor ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E110	2	E16	111	Existed
£110	1	LIU	104	LAISIEU

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit or short to ground or shot to power in harness or connectors.

8.CHECK APP SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

1. Check the continuity between APP sensor harness connector and ECM harness connector as per the following.

APP	sensor	ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E110	3	E16	110	Existed
LIIO	6	LIO	103	LXISIGU

2. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit or short to ground or shot to power in harness or connectors.

9. CHECK APP SENSOR

P2138 APP SENSOR

[MR18DE (FOR CALIFORNIA)] < DTC/CIRCUIT DIAGNOSIS > Refer to EC-887, "Component Inspection". Α Is the inspection result normal? YES >> GO TO 11. NO >> GO TO 10. EC 10.replace accelerator pedal assembly Replace accelerator pedal assembly. Refer to ACC-3, "Removal and Installation". C >> INSPECTION END 11. CHECK INTERMITTENT INCIDENT D Refer to GI-41, "Intermittent Incident". >> INSPECTION END Е Component Inspection INFOID:0000000008451353 1. CHECK ACCELERATOR PEDAL POSITION SENSOR F Reconnect all harness connectors disconnected. 2. Turn ignition switch ON. Check the voltage between ECM harness connector and ground. **ECM** Ground Condition Voltage Н Connector Terminal 110 Fully released 0.6 - 0.9 V (APP sensor 1 3.9 - 4.7 V Fully depressed signal) Accelerator ped-E16 Ground 103 Fully released 0.3 - 0.6 V (APP sensor 2 Fully depressed 1.95 - 2.4 V signal) Is the inspection result normal? >> INSPECTION END YES K NO >> GO TO 2. 2.REPLACE ACCELERATOR PEDAL ASSEMBLY Replace accelerator pedal assembly. Refer to ACC-3, "Removal and Installation". >> INSPECTION END M Ν

Revision: 2012 August EC-887 2013 CUBE

Description INFOID:000000008451357

When the brake pedal is depressed, ASCD brake switch is turned OFF and stop lamp switch is turned ON. ECM detects the state of the brake pedal by this input of two kinds (ON/OFF signal). Refer to EC-534, "System Description" for the ASCD function.

Component Function Check

INFOID:0000000008451358

1. CHECK FOR ASCD BRAKE SWITCH FUNCTION

(II) With CONSULT

- 1. Turn ignition switch ON.
- Select "BRAKE SW1" in "DATA MONITOR" mode with CONSULT.
- Check "BRAKE SW1" indication under the following conditions.

Monitor item	Condition		Indication
BRAKE SW1	Brake pedal (CVT) Brake pedal and clutch pedal (M/T)	Slightly de- pressed	OFF
	Brake pedal and clutch pedal (W/1)	Fully released	ON

Without CONSULT

- 1. Turn ignition switch ON.
- Check the voltage between ECM harness connector terminals.

	ECM		Condition		
Connector	+	-			Voltage
Connector	Terminal	Terminal			
E16	100 (ASCD brake	108	Brake pedal (CVT) Brake pedal and clutch pedal (M/T)	Slightly de- pressed	Approx. 0 V
	switch signal)		Brake pedal and clutch pedal (W/T)	Fully released	Battery voltage

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-888, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008451359

1. CHECK ASCD BRAKE SWITCH POWER SUPPLY CIRCUIT-I

- 1. Turn ignition switch OFF.
- Disconnect ASCD brake switch harness connector.
- Turn ignition switch ON.
- 4. Check the voltage between ASCD brake switch harness connector and ground.

ASCD brake switch		Ground	Voltage
Connector	Terminal	Glound	voltage
E112	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 7.

NO-1 >> CVT models: GO TO 2. NO-2 >> M/T models: GO TO 3.

2. DETECT MALFUNCTIONING PART

Check the following.

Harness connectors E105, M77

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

- 10 A fuse (No. 2)
- · Harness for open or short between ASCD brake switch and fuse

А

EC

D

Е

K

N

Р

>> Repair open circuit or short to ground or short to power in harness or connectors. 3.CHECK ASCD CLUTCH SWITCH POWER SUPPLY CIRCUIT

Turn ignition switch OFF.

- 2. Disconnect ASCD clutch switch harness connector.
- Turn ignition switch ON.
- 4. Check the voltage between ASCD clutch switch harness connector and ground.

ASCD clutch switch		Ground	Voltage
Connector	Terminal	Glound	voltage
E111	3	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E105, M77
- 10 A fuse (No. 2)
- · Harness for open or short between ASCD clutch switch and fuse

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK ASCD BRAKE SWITCH POWER SUPPLY CIRCUIT-II

- Turn ignition switch OFF.
- Disconnect ASCD brake switch harness connector.
- 3. Check the continuity between ASCD clutch switch harness connector and ASCD brake switch harness connector.

ASCD clutch switch		ASCD brake switch		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E111	4	E112	1	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

6.CHECK ASCD CLUTCH SWITCH

Refer to EC-890, "Component Inspection (ASCD Clutch Switch)".

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace ASCD clutch switch. Refer to CL-10, "Exploded View".

7.CHECK ASCD BRAKE SWITCH INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- Check the continuity between ASCD brake switch harness connector and ECM harness connector.

ASCD brake switch		ECM		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E112	2	E16	100	Existed

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

8.CHECK ASCD BRAKE SWITCH

Refer to EC-890, "Component Inspection (ASCD Brake Switch)".

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace ASCD brake switch. Refer to <u>BR-17</u>, "Exploded View".

9. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection (ASCD Brake Switch)

INFOID:0000000008451360

1. CHECK ASCD BRAKE SWITCH-I

- 1. Turn ignition switch OFF.
- Disconnect ASCD brake switch harness connector.
- 3. Check the continuity between ASCD brake switch terminals under the following conditions.

Terminals	Con	Continuity	
		Fully released	Existed
1 and 2	Brake pedal	Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.CHECK ASCD BRAKE SWITCH-II

- 1. Adjust ASCD brake switch installation. Refer to BR-18, "Inspection and Adjustment".
- 2. Check the continuity between ASCD brake switch terminals under the following conditions.

Terminals	Con	Continuity	
		Fully released	Existed
1 and 2	Brake pedal	Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace ASCD brake switch. Refer to <u>BR-17</u>, "Exploded View".

Component Inspection (ASCD Clutch Switch)

INFOID:0000000008451361

1. CHECK ASCD CLUTCH SWITCH-I

- 1. Turn ignition switch OFF.
- Disconnect ASCD clutch switch harness connector.
- 3. Check the continuity between ASCD clutch switch terminals under the following conditions.

Terminals	Con	Continuity	
		Fully released	Existed
1 and 2	Clutch pedal	Slightly de- pressed	Not existed

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2. CHECK ASCD CLUTCH SWITCH-II

Adjust ASCD clutch switch installation. Refer to <u>CL-11, "Inspection and Adjustment"</u>.

2. Check the continuity between ASCD clutch switch terminals under the following conditions.

Terminals	Con	Continuity	
		Fully released	Existed
1 and 2	Clutch pedal	Slightly de- pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace ASCD clutch switch. Refer to <u>CL-10</u>, "Exploded View".

EC

Α

D

C

Е

F

G

Н

Κ

L

M

Ν

0

ASCD INDICATOR

Description INFOID:000000008451362

ASCD indicator lamp illuminates to indicate ASCD operation status. Lamp has two indicators, CRUISE and SET, and is integrated in combination meter.

CRUISE lamp illuminates when MAIN switch on ASCD steering switch is turned ON to indicated that ASCD system is ready for operation.

SET lamp illuminates when following conditions are met.

- CRUISE lamp is illuminated.
- SET/COAST switch on ASCD steering switch is turned ON while vehicle speed is within the range of ASCD setting.

SET lamp remains lit during ASCD control.

Refer to EC-534, "System Description" for the ASCD function.

Component Function Check

INFOID:0000000008451363

1. ASCD INDICATOR FUNCTION

Check ASCD indicator under the following conditions.

ASCD indicator	Cor	Specification	
CRUISE LAMP	Ignition switch: ON	MAIN switch: Pressed at the 1st time →at the 2nd time	$ON \to OFF$
	MAIN switch: ON	ASCD: Operating	ON
SET LAMP	When vehicle speed: Between 40 km/h (25 MPH) and 190 km/h (118 MPH) (For the Middle East), 40 km/h (25 MPH) and 160 km/h (100 MPH) (Except for the Middle East)	ASCD: Not operating	OFF

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-892, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008451364

1. CHECK DTC

Check that DTC U1001 is not displayed.

Is DTC detected?

NO >> GO TO 2

YES >> Perform trouble diagnosis for DTC U1001. Refer to EC-609, "DTC Logic".

2. CHECK COMBINATION METER OPERATION

Refer to MWI-6, "METER SYSTEM: System Description".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check combination meter circuit. Refer to MWI-6, "METER SYSTEM: System Diagram".

3.check intermittent incident

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

COOLING FAN

Description INFOID:0000000008451365

The ECM controls the cooling fan corresponding to the vehicle speed, engine coolant temperature, refrigerant pressure, and air conditioner ON signal. The control system has 3-step control [HIGH/LOW/OFF].

EC

D

Е

F

L

M

Ν

Р

Α

COOLING FAN MOTOR

Models without A/C

The cooling fan operates at each speed when the current flows in the cooling fan motor as per the following.

Cooling fan Speed	Cooling fan motor terminals		
Cooling lan Speed	(+)	(-)	
	1	3 and 4	
Low (LOW)	2	3 and 4	
	1 and 2	3	
	1 and 2	4	
High (HI)	1 and 2	3 and 4	

Models with A/C

The cooling fan operates at high (HI) speed when the current flows, and operates at low (LOW) speed when cooling fan motor and the resistor are circuited in series.

Component Function Check

INFOID:0000000008451366

1. CHECK COOLING FAN FUNCTION

(II) With CONSULT

- 1. Turn ignition switch ON.
- Perform "COOLING FAN" in "ACTIVE TEST" mode with CONSULT.
- 3. Touch "LOW" and "Hi" on the CONSULT screen.
- 4. Check that cooling fan operates at each speed.

Without CONSULT

- 1. Perform IPDM E/R auto active test and check cooling fan motor operation. Refer to <u>PCS-11, "Diagnosis Description"</u>.
- 2. Check that cooling fan operates at each speed.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Refer to EC-893, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008451367

1. CHECK GROUND CONNECTION

- Turn ignition switch OFF.
- Check ground connection E21. Refer to Ground Inspection in GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK COOLING FAN MOTOR CIRCUIT

- Disconnect cooling fan motor harness connector.
- Check the continuity between IPDM E/R harness connector and cooling fan motor harness connector.

IPDM E/R		Cooling fan motor		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E10	5		1	
LIU	7	E62	2	Existed
E11	10		3	

3. Check the continuity between cooling fan motor harness connector and ground.

Cooling fan motor		Ground	Continuity	
Connector	Terminal	Glound	Continuity	
E62	4	Ground	Existed	

4. Also check harness for short to ground and short to power.

OK or NG

OK >> GO TO 4. NG >> GO TO 3.

3.DETECT MALFUNCTIONING PART

Check the following.

- Harness for open or short between cooling fan motor and IPDM E/R
- · Harness for open or short between cooling fan motor and ground
 - >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK COOLING FAN MOTOR

Refer to EC-894, "Component Inspection".

OK or NG

OK >> GO TO 5.

NG >> Replace cooling fan motor. Refer to CO-18, "Exploded View".

5. CHECK INTERMITTENT INCIDENT

Perform GI-41, "Intermittent Incident".

OK or NG

OK >> Replace IPDM E/R. Refer to <u>PCS-33</u>, "Removal and Installation" (With I-Key) or <u>PCS-62</u>, "Removal and Installation" (WithouT I-Key).

NG >> Repair or replace harness or connector.

Component Inspection

INFOID:0000000008451368

COOLING FAN MOTOR

- Disconnect cooling fan motor harness connectors.
- 2. Supply cooling fan motor terminals with battery voltage and check operation.

	Speed	term	ninals
	Opeed	(+)	(–)
Cooling fan mo- tor	Low	1	4
		2	3
	High	1 and 2	3 and 4

Cooling fan motor should operate.

If NG, replace cooling fan motor.

ELECTRICAL LOAD SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

ELECTRICAL LOAD SIGNAL

Description INFOID:0000000008451369

The electrical load signal (Headlamp switch signal, rear window defogger switch signal, etc.) is transferred via the CAN communication line.

EC

D

Е

F

Н

K

N

Р

INFOID:0000000008451371

INFOID:0000000008451370

Α

Component Function Check

1. CHECK REAR WINDOW DEFOGGER SWITCH FUNCTION

- Turn ignition switch ON.
- 2. Connect CONSULT and select "DATA MONITOR" mode.
- Select "LOAD SIGNAL" and check indication under the following conditions.

Monitor item	Condition		Indication
LOAD SIGNAL	Rear window defogger switch	ON	ON
LOAD SIGNAL	iteal willdow delogger switch	OFF	OFF

Is the inspection result normal?

YES >> GO TO 2.

NO >> Go to EC-895, "Diagnosis Procedure".

2.CHECK LIGHTING SWITCH FUNCTION

Check "LOAD SIGNAL" indication under the following conditions.

Monitor item	Condition		Indication
LOAD SIGNAL	Lighting switch	ON at 2nd position	ON
		OFF	OFF

Is the inspection result normal?

YES >> GO TO 3.

NO >> Go to EC-895, "Diagnosis Procedure".

3.check heater fan control switch function

Select "HEATER FAN SW" and check indication under the following conditions.

Monitor item	Condition		Indication
HEATER FAN Heater fan control switch	ON	ON	
SW	Heater Ian control switch	OFF	OFF

Is the inspection result normal?

YES >> INSPECTION END

>> Go to EC-895, "Diagnosis Procedure". NO

Diagnosis Procedure

1.INSPECTION START

Confirm the malfunctioning circuit (rear window defogger, headlamp or heater fan). Refer to EC-895, "Component Function Check".

Which circuit is related to the incident?

Rear window defogger>>GO TO 2.

Headlamp>>GO TO 3.

Heater fan>>GO TO 4.

2.CHECK REAR WINDOW DEFOGGER SYSTEM

Refer to DEF-3, "Work Flow".

EC-895

ELECTRICAL LOAD SIGNAL

[MR18DE (FOR CALIFORNIA)]

>> INSPECTION END

3.CHECK HEADLAMP SYSTEM

Refer to EXL-5, "Work Flow".

>> INSPECTION END

4. CHECK HEATER FAN CONTROL SYSTEM


Refer to HA-3, "Work Flow".

>> INSPECTION END

FUEL INJECTOR

Description INFOID:0000000008451372

The fuel injector is a small, precise solenoid valve. When the ECM supplies a ground to the fuel injector circuit, the coil in the fuel injector is energized. The energized coil pulls the ball valve back and allows fuel to flow through the fuel injector into the intake manifold. The amount of fuel injected depends upon the injection pulse duration. Pulse duration is the length of time the fuel injector remains open. The ECM controls the injection pulse duration based on engine fuel needs.

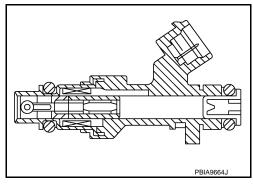

Component Function Check

1.INSPECTION START

Turn ignition switch to START.

Is any cylinder ignited?

YES >> GO TO 2.

NO >> Go to EC-897, "Diagnosis Procedure".

2.CHECK FUEL INJECTOR FUNCTION

(P)With CONSULT

- Start engine.
- Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.
- Make sure that each circuit produces a momentary engine speed drop.

Without CONSULT


- 1. Let engine idle.
- Listen to each fuel injector operating sound.

Clicking noise should be heard.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-897, "Diagnosis Procedure".

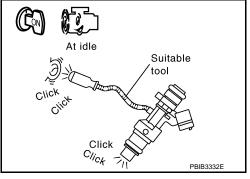

Diagnosis Procedure

1. CHECK FUEL INJECTOR POWER SUPPLY CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect fuel injector harness connector.
- Turn ignition switch ON.
- Check the voltage between fuel injector harness connector and ground.

EC

Α

F

D

Е

INFOID:0000000008451373

Р

Ν

INFOID:0000000008451374

Fuel injector		Ground	Voltage	
Cylinder	Connector	Terminal		Voltage
1	F37	1		
2	F38	1	Ground	Battery voltage
3	F39	1	Glound	
4	F40	1		

Is the inspection result normal?

YES >> GO TO 3. NO >> GO TO 2.

2. DETECT MALFUNCTIONING PART

Check the following.

- IPDM E/R harness connector E15
- 15 A fuse (No. 62)
- Harness for open or short between fuel injector and fuse
 - >> Repair open circuit or short to ground or short to power in harness or connectors.

3.CHECK FUEL INJECTOR OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between fuel injector harness connector and ECM harness connector.

Fuel injector		ECM		Continuity	
Cylinder	Connector	Terminal	Connector	Terminal	Continuity
1	F37	2		31	
2	F38	2	F7	30	Existed
3	F39	2	Г	29	Existed
4	F40	2		25	

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK FUEL INJECTOR

Refer to EC-898, "Component Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace malfunctioning fuel injector.

5. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to <u>PCS-33</u>, "Removal and Installation" (With I-KEY), <u>PCS-62</u>, "Removal and Installation" (Without I-KEY).

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

Component Inspection

INFOID:0000000008451375

1. CHECK FUEL INJECTOR

- 1. Turn ignition switch OFF.
- Disconnect fuel injector harness connector.

FUEL INJECTOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

3. Check resistance between fuel injector terminals as per the following.

Terminals	Resistance
1 and 2	11.1 - 14.5 Ω [at 10 - 60°C (50 - 140°F)]

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace malfunctioning fuel injector. Refer to EM-37, "Exploded View".

EC

Α

D

C

Е

F

G

Н

.

J

K

L

M

Ν

0

FUEL PUMP

Description INFOID:000000008451376

Sensor	Input signal to ECM	ECM function	Actuator
Crankshaft position sensor (POS) Camshaft position sensor (PHASE)	Engine speed*	Fuel pump control	Fuel pump relay ↓
Battery	Battery voltage*		Fuel pump

^{*:} ECM determines the start signal status by the signals of engine speed and battery voltage.

The ECM activates the fuel pump for several seconds after the ignition switch is turned ON to improve engine start ability. If the ECM receives a engine speed signal from the camshaft position sensor (PHASE), it knows that the engine is rotating, and causes the pump to operate. If the engine speed signal is not received when the ignition switch is ON, the engine stalls. The ECM stops pump operation and prevents battery discharging, thereby improving safety. The ECM does not directly drive the fuel pump. It controls the ON/OFF fuel pump relay, which in turn controls the fuel pump.

Condition	Fuel pump operation
Ignition switch is turned to ON.	Operates for 1 second.
Engine running and cranking	Operates.
When engine is stopped	Stops in 1.5 seconds.
Except as shown above	Stops.

Component Function Check

INFOID:0000000008451377

1. CHECK FUEL PUMP FUNCTION


- 1. Turn ignition switch ON.
- Pinch fuel feed hose (1) with two fingers.

Fuel pressure pulsation should be felt on the fuel feed hose for 1 second after ignition switch is turned ON.

Is the inspection result normal?

YES >> INSPECTION END

NO >> EC-900, "Diagnosis Procedure".

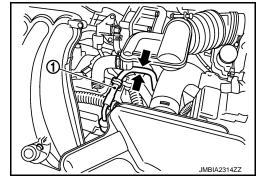

INFOID:0000000008451378

Diagnosis Procedure

1. CHECK FUEL PUMP POWER SUPPLY CIRCUIT-I

- 1. Turn ignition switch OFF.
- 2. Disconnect ECM harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between ECM harness connector and ground.

ECM		Ground	Voltage	
Connector	Terminal	Glound	voltage	
F7	23	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 2.

2. CHECK FUEL PUMP POWER SUPPLY CIRCUIT-II

Α

EC

Е

F

Н

Ν

Р

< DTC/CIRCUIT DIAGNOSIS >

- 1. Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector E13.
- 3. Turn ignition switch ON.
- 4. Check the voltage between IPDM E/R harness connector and ground.

IPDN	И E/R	Ground	Voltage	
Connector	Terminal	Glound	voltage	
E13	31	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 4. NO >> GO TO 3.

3.DETECT MALFUNCTIONING PART

Check the following.

- Harness or connectors E8, F1
- Harness for open or short between ECM and IPDM E/R

>> Repair open circuit or short to ground or short to power in harness or connectors.

4. CHECK FUEL PUMP POWER SUPPLY CIRCUIT-III

- 1. Turn ignition switch OFF.
- Reconnect all harness connectors disconnected.
- 3. Disconnect "fuel level sensor unit and fuel pump" harness connector.
- Turn ignition switch ON.
- 5. Check the voltage between "fuel level sensor unit and fuel pump" harness connector and ground.

Fuel level sensor unit and fuel pump		Ground	Voltage	
Connector	Terminal	Glound	voltage	
B40	1	Ground	Battery voltage should exist 1 second after ignition switch is turn ON.	

Is the inspection result normal?

YES >> GO TO 8. NO >> GO TO 5.

5. CHECK FUSE

- 1. Turn ignition switch OFF.
- Disconnect 15 A fuse (No. 60) from IPDM E/R.
- 3. Check 15 A fuse.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace15 A fuse.

6.CHECK FUEL PUMP POWER SUPPLY CIRCUIT-IV

- 1. Disconnect IPDM E/R harness connector E15.
- 2. Check the continuity between IPDM E/R harness connector and "fuel level sensor unit and fuel pump" harness connector.

	IPDN	ЛE/R	Fuel level sensor	Continuity	
С	onnector	Terminal	Connector	Terminal	Continuity
	E15	55	B40	1	Existed

3. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 10.

NO >> GO TO 7.

7.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors B1, M18
- Harness connectors M77, E105
- Harness for open or short between IPDM E/R and "fuel level sensor unit and fuel pump"
 - >> Repair open circuit or short to power in harness or connectors.

8. CHECK FUEL PUMP GROUND CIRCUIT

1. Check the continuity between "fuel level sensor unit and fuel pump" and ground.

Fuel level sensor	unit and fuel pump	Ground	Continuity	
Connector	Terminal	Giodila	Continuity	
B40	3	Ground	Existed	

2. Also heck harness for short to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit or short to power in harness or connectors.

9.CHECK FUEL PUMP

Refer to EC-902. "Component Inspection".

Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace "fuel level sensor unit and fuel pump". Refer to FL-5, "Exploded View".

10. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to <u>PCS-33</u>, "Removal and Installation" (With I-KEY), <u>PCS-62</u>, "Removal and Installation" (Without I-KEY).

NO >> Repair or replace harness or connectors.

Component Inspection

INFOID:0000000008451379

1. CHECK FUEL PUMP

- 1. Turn ignition switch OFF.
- 2. Disconnect "fuel level sensor unit and fuel pump" harness connector.
- 3. Check resistance between "fuel level sensor unit and fuel pump" terminals as per the following.

Terminals	Resistance
1 and 3	0.2 - 5.0 Ω [at 25°C (77°F)]

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace "fuel level sensor unit and fuel pump". Refer to FL-5, "Removal and Installation".

IGNITION SIGNAL

Description INFOID:0000000008451380

The ignition signal from the ECM is sent to and amplified by the power transistor. The power transistor turns ON and OFF the ignition coil primary circuit. This ON/OFF operation induces the proper high voltage in the coil secondary circuit.

EC

D

Е

Ν

INFOID:0000000008451382

INFOID:0000000008451381

Α

Component Function Check

1.INSPECTION START

Turn ignition switch OFF, and restart engine.

Does the engine start?

YES-1 >> With CONSULT: GO TO 2.

YES-2 >> Without CONSULT: GO TO 3.

NO >> Go to EC-903, "Diagnosis Procedure".

2. IGNITION SIGNAL FUNCTION

(I) With CONSULT

- 1. Perform "POWER BALANCE" in "ACTIVE TEST" mode with CONSULT.
- 2. Make sure that each circuit produces a momentary engine speed drop.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-903, "Diagnosis Procedure".

Terminal

17 18 21

22

${f 3.}$ ignition signal function

ECM

⊗ Without CONSULT

Let engine idle.

Connector

2. Read the voltage signal between ECM harness connector and ground.

Ground

Ground

Voltage signal								
	Voltag	e sig	nal		 =			
					_			
PBIA9265J	≥ 2.0 V/Div	50 ms/[Div T					
			PBI	A9265J	 _			

NOTE:

F7

The pulse cycle changes depending on rpm at idle.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-903, "Diagnosis Procedure".

Diagnosis Procedure

1. CHECK IGNITION COIL POWER SUPPLY CIRCUIT-I

- 1. Turn ignition switch OFF, wait at least 10 seconds and then turn ON.
- Check the voltage between ECM harness connector and ground.

E	CM	Ground	Voltage
Connector	Terminal	Glodila	voltage
E16	105	Ground	Battery voltage

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 2.

NO >> Go to EC-605, "Diagnosis Procedure".

2.CHECK IGNITION COIL POWER SUPPLY CIRCUIT-II

- 1. Turn ignition switch OFF.
- Disconnect Condenser harness connector.
- 3. Turn ignition switch ON.
- 4. Check the voltage between condenser harness connector and ground.

Cond	enser	Ground	Voltage
Connector	Terminal	Glound	voltage
F13	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 3.

3.CHECK IGNITION COIL POWER SUPPLY CIRCUIT-III

- 1. Turn ignition switch OFF.
- 2. Disconnect IPDM E/R harness connector E14.
- 3. Check the continuity between IPDM E/R harness connector and condenser harness connector.

IPDM E/R		Conc	Continuity	
Connector	Terminal	Connector	Continuity	
E14	44	F13	1	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> Go to EC-605, "Diagnosis Procedure".

NO >> GO TO 4.

4. DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- IPDM E/R harness connector E14
- · Harness for open or short between IPDM E/R and condenser

>> Repair open circuit or short to ground or short to power in harness or connectors.

5. CHECK CONDENSER GROUND CIRCUIT FOR OPEN AND SHORT

- 1. Turn ignition switch OFF.
- 2. Check the continuity between Condenser harness connector and ground.

Cond	lenser	Ground	Continuity	
Connector	Terminal	Glound	Continuity	
F13 2		Ground	Existed	

3. Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

6.CHECK CONDENSER

Refer to EC-907, "Component Inspection (Condenser)".

Is the inspection result normal?

YES >> GO TO 7.

< DTC/CIRCUIT DIAGNOSIS >

NO >> Replace condenser.

7.check ignition coil power supply circuit-v

- Reconnect all harness connectors disconnected.
- 2. Disconnect ignition coil harness connector.
- Turn ignition switch ON. 3.
- Check the voltage between ignition coil harness connector and ground.

	Ignition coil	Ground	Voltage	
Cylinder	Connector	Terminal	Glound	voltage
1	F33	3		
2	F34	3	Ground	Battery voltage
3	F35	3	Glound	
4	F36	3		

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

8.CHECK IGNITION COIL GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- 2. Check the continuity between ignition coil harness connector and ground.

	Ignition coil	Ground	Continuity	
Cylinder	Connector	Terminal	Glound	Continuity
1	F33	2		
2	F34	2	Ground	Existed
3	F35	2	Glound	
4	F36	2		

Also check harness for short to power.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

9.CHECK IGNITION COIL OUTPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

- Disconnect ECM harness connector.
- Check the continuity between ECM harness connector and ignition coil harness connector.

	Ignition coil ECM			Continuity	
Cylinder	Connector	Terminal	Connector	Terminal	Continuity
1	F33	1		17	Existed
2	F34	1	F7	18	
3	F35	1		22	Existed
4	F36	1		21	

3. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 10.

>> Repair open circuit or short to ground or short to power in harness or connectors. NO

10.CHECK IGNITION COIL WITH POWER TRANSISTOR

Refer to EC-906, "Component Inspection (Ignition Coil with Power Transistor)".

Is the inspection result normal?

YES >> GO TO 11.

EC-905 Revision: 2012 August 2013 CUBE

EC

Α

Е

Н

K

N

< DTC/CIRCUIT DIAGNOSIS >

NO >> Replace malfunctioning ignition coil with power transistor. Refer to EM-42, "Exploded View".

11. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

>> INSPECTION END

Component Inspection (Ignition Coil with Power Transistor)

INFOID:0000000008451383

1. CHECK IGNITION COIL WITH POWER TRANSISTOR-I

- 1. Turn ignition switch OFF.
- 2. Disconnect ignition coil harness connector.
- 3. Check resistance between ignition coil terminals as per the following.

Terminals	Resistance [Ω at 25°C (77°F)]	
1 and 2	Except 0 or ∞	
1 and 3	Event 0	
2 and 3	Except 0	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace malfunctioning ignition coil with power transistor. Refer to EM-42, "Exploded View".

2.CHECK IGNITION COIL WITH POWER TRANSISTOR-II

CAUTION:

Do the following procedure in the place where ventilation is good without the combustible.

- 1. Turn ignition switch OFF.
- Reconnect all harness connectors disconnected.
- 3. Remove fuel pump fuse in IPDM E/R to release fuel pressure.

NOTE:

Do not use CONSULT to release fuel pressure, or fuel pressure applies again during the following procedure.

- 4. Start engine.
- 5. After engine stalls, crank it two or three times to release all fuel pressure.
- 6. Turn ignition switch OFF.
- Remove all ignition coil harness connectors to avoid the electrical discharge from the ignition coils. Refer to EM-42, "Exploded View".
- 8. Remove ignition coil and spark plug of the cylinder to be checked.
- 9. Crank engine for 5 seconds or more to remove combustion gas in the cylinder.
- 10. Connect spark plug and harness connector to ignition coil.
- 11. Fix ignition coil using a rope etc. with gap of 13 17 mm (0.52 0.66 in) between the edge of the spark plug and grounded metal portion as shown in the figure.
- Crank engine for about three seconds, and check whether spark is generated between the spark plug and the grounded metal portion.


Spark should be generated.

CAUTION:

- During the operation, always stay 0.5 cm (19.7 in) away from the spark plug and the ignition coil. Be careful not to get an electrical shock while checking, because the electrical discharge voltage becomes 20 kV or more.
- It might cause to damage the ignition coil if the gap of more than 17 mm (0.66 in) is taken.

When the gap is less than 13 mm (0.52 in), the spark might be generated even if the coil is malfunctioning.

Is the inspection result normal?

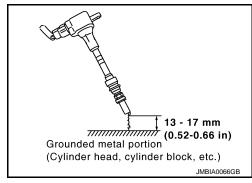

IGNITION SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

YES >> INSPECTION END

NO >> Replace malfunctioning ignition coil with power transistor. Refer to EM-42, "Exploded View".

Component Inspection (Condenser)

INFOID:0000000008451384

1. CHECK CONDENSER

- 1. Turn ignition switch OFF.
- 2. Disconnect condenser harness connector.
- 3. Check resistance between condenser terminals as per the following.

Terminals	Resistance
1 and 2	Above 1 MΩ [at 25°C (77°F)]

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace Condenser.

EC

C

Α

Е

 D

F

Н

ı

J

K

L

M

Ν

0

MALFUNCTION INDICATOR LAMP


Description INFOID:0000000084513885

The Malfunction Indicator Lamp (MIL) is located on the combination meter.

The MIL will light up when the ignition switch is turned ON without the engine running. This is a bulb check.

When the engine is started, the MIL should go off. If the MIL remains on, the on board diagnostic system has detected an engine system malfunction.

For details, refer to <u>EC-584</u>, "<u>DIAGNOSIS DESCRIPTION</u>: <u>Malfunction Indicator Lamp</u> (MIL)".

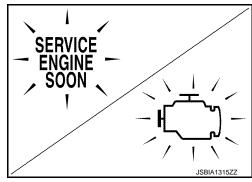

INFOID:0000000008451386

INFOID:0000000008451387

Component Function Check

1. CHECK MIL FUNCTION

- 1. Turn ignition switch ON.
- 2. Make sure that MIL lights up.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-908, "Diagnosis Procedure".

Diagnosis Procedure

1. CHECK DTC

Check that DTC UXXXX is not displayed.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform trouble diagnosis for DTC UXXXX.

2.CHECK DTC WITH METER

Refer to MWI-30, "CONSULT Function (METER/M&A)".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace.

3. CHECK INTERMITTENT INCIDENT


Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace combination meter. Refer to MWI-90, "Exploded View".

NO >> Repair or replace.

Description INFOID:0000000008451388

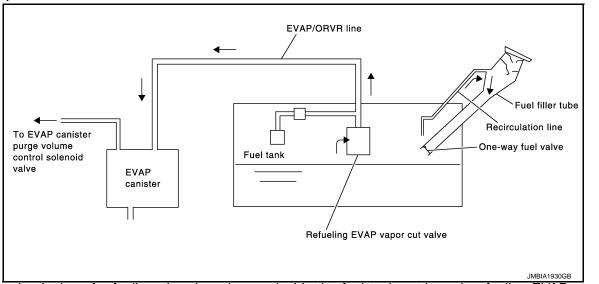

From the beginning of refueling, the air and vapor inside the fuel tank go through refueling EVAP vapor cut valve and EVAP/ORVR line to the EVAP canister. The vapor is absorbed by the EVAP canister and the air is released to the atmosphere.

When the refueling has reached the full level of the fuel tank, the refueling EVAP vapor cut valve is closed and refueling is stopped because of auto shut-off. The vapor which was absorbed by the EVAP canister is purged during driving.

WARNING:

When conducting inspections below, be sure to observe the following:

- Put a "CAUTION: FLAMMABLE" sign in workshop.
- Do not smoke while servicing fuel system. Keep open flames and sparks away from work area.
- Be sure to furnish the workshop with a CO2 fire extinguisher.

CAUTION:

- Before removing fuel line parts, carry out the following procedures:
- Put drained fuel in an explosion-proof container and put lid on securely.
- Release fuel pressure from fuel line. Refer to <u>EC-961</u>, "Inspection".
- Disconnect battery ground cable.
- Always replace O-ring when the fuel gauge retainer is removed.
- Do not kink or twist hose and tube when they are installed.
- Do not tighten hose and clamps excessively to avoid damaging hoses.
- After installation, run engine and check for fuel leaks at connection.
- Do not attempt to top off the fuel tank after the fuel pump nozzle shuts off automatically. Continued refueling may cause fuel overflow, resulting in fuel spray and possibly a fire.

Component Function Check

1. CHECK ORVE FUNCTION

Check whether the following symptoms are present.

- Fuel odor from EVAP canister is strong.
- Cannot refuel/Fuel odor from the fuel filler opening is strong while refueling.

Is any symptom present?

YES >> Go to EC-909, "Diagnosis Procedure".

>> INSPECTION END NO

Diagnosis Procedure

1.INSPECTION START

Check whether the following symptoms are present.

A: Fuel odor from EVAP canister is strong.

EC-909 Revision: 2012 August 2013 CUBE

EC

Α

Е

N

INFOID:0000000008451390

INFOID:0000000008451389

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

B: Cannot refuel/Fuel odor from the fuel filler opening is strong while refueling.

Which symptom is present?

- A >> GO TO 2.
- B >> GO TO 8.

2. CHECK EVAP CANISTER

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- Weigh the EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

Is the inspection result normal?

YES >> GO TO 3.


NO >> GO TO 4.

${f 3.}$ CHECK IF EVAP CANISTER IS SATURATED WITH WATER

Check if water will drain from EVAP canister.

Does water drain from the EVAP canister?

YES >> GO TO 4. NO >> GO TO 7.

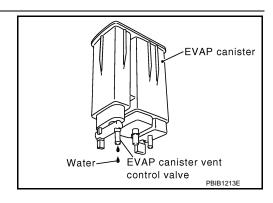

4. REPLACE EVAP CANISTER

Replace EVAP canister with a new one. Refer to FL-14, "Exploded View".

>> GO TO 5.

5. CHECK DRAIN FILTER

Refer to EC-914, "Component Inspection (Drain filter)".

Is the inspection result normal?

OK >> GO TO 6.

NO >> Replace drain filter. Refer to EC-551, "System Description".

6. DETECT MALFUNCTIONING PART

Check the EVAP hose between EVAP canister and vehicle frame for clogging or poor connection.

>> Repair or replace EVAP hose.

7. CHECK REFUELING EVAP VAPOR CUT VALVE

Refer to EC-912, "Component Inspection (Refueling EVAP vapor cut valve)".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace refueling EVAP vapor cut valve with fuel tank. Refer to FL-9, "Exploded View".

8.CHECK EVAP CANISTER

- Remove EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.
- Weigh the EVAP canister with EVAP canister vent control valve and EVAP control system pressure sensor attached.

The weight should be less than 1.9 kg (4.2 lb).

Is the inspection result normal?

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]


YES >> GO TO 9. NO >> GO TO 10.

9.CHECK IF EVAP CANISTER IS SATURATED WITH WATER

Check if water will drain from EVAP canister.

Does water drain from the EVAP canister?

YES >> GO TO 10. NO >> GO TO 13.

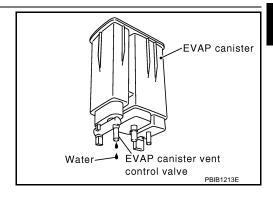

10. REPLACE EVAP CANISTER

Replace EVAP canister with a new one. Refer to FL-14, "Exploded View".

>> GO TO 11.

11. CHECK DRAIN FILTER

Refer to EC-914, "Component Inspection (Drain filter)".

Is the inspection result normal?

OK >> GO TO 12.

NO >> Replace drain filter. Refer to EC-551, "System Description".

12. DETECT MALFUNCTIONING PART

Check the EVAP hose between EVAP canister and vehicle frame for clogging or poor connection.

>> Repair or replace EVAP hose.

13.CHECK VENT HOSES AND VENT TUBES

Check hoses and tubes between EVAP canister and refueling control valve for clogging, kink, looseness and improper connection.

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair or replace hoses and tubes.

14. CHECK RECIRCULATION LINE

Check recirculation line for clogging, dents and cracks.

Is the inspection result normal?

YES >> GO TO 15.

NO >> Replace fuel filler tube.

15. CHECK REFUELING EVAP VAPOR CUT VALVE

Refer to EC-912, "Component Inspection (Refueling EVAP vapor cut valve)".

Is the inspection result normal?

YES >> GO TO 16.

NO >> Replace refueling EVAP vapor cut valve with fuel tank. Refer to FL-9, "Exploded View".

16. CHECK FUEL FILLER TUBE

Check fuel filler tube and hose connected to the fuel tank for clogging, dents and cracks.

Is the inspection result normal?

YES >> GO TO 17.

NO >> Replace fuel filler tube. EC

Α

D

F

Н

N

Р

2013 CUBE

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

17. CHECK ONE-WAY FUEL VALVE-I

Check one-way valve for clogging.

Is the inspection result normal?

YES >> GO TO 18.

NO >> Repair or replace one-way fuel valve with fuel tank. Refer to FL-9, "Exploded View".

18. CHECK ONE-WAY FUEL VALVE-II

- Make sure that fuel is drained from the tank.
- Remove fuel filler tube and hose.
- Check one-way fuel valve for operation as per the following. When a stick is inserted, the valve should open, when removing stick it should close.


Do not drop any material into the tank.

Is the inspection result normal?

YES >> INSPECTION END

NO

>> Replace fuel filler tube or replace one-way fuel valve with fuel tank. Refer to FL-9, "Exploded View".

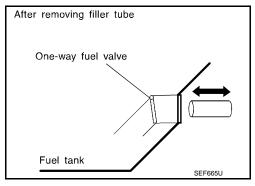

Component Inspection (Refueling EVAP vapor cut valve)

INFOID:0000000008451391

1.INSPECTION START

Do you have CONSULT?

Do you have CONSULT?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK REFUELING EVAP VAPOR CUT VALVE

(P)With CONSULT


- 1. Remove fuel tank. Refer to FL-9, "Removal and Installation".
- 2. Drain fuel from the tank as per the following:
- Remove fuel feed hose located on the fuel gauge retainer.
- Connect a spare fuel hose, one side to fuel gauge retainer where the hose was removed and the other side to a fuel container.
- Drain fuel using "FUEL PUMP RELAY" in "ACTIVE TEST" mode with CONSULT.
- 3. Check refueling EVAP vapor cut valve for being stuck to close as per the following. Blow air into the refueling EVAP vapor cut valve (from the end of EVAP/ORVR line hose), and check that the air flows freely into the tank.
- 4. Check refueling EVAP vapor cut valve for being stuck to open as per the following.
- Connect vacuum pump to hose end.
- Remove fuel gauge retainer with fuel gauge unit. Refer to FL-5, "Exploded View".

Always replace O-ring with new one.

- Put fuel tank upside down.
- Apply vacuum pressure to hose end [-13.3 kPa (-0.136 kg/cm³, -1.93 psi)] with fuel gauge retainer remaining open and check that the pressure is applicable.

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

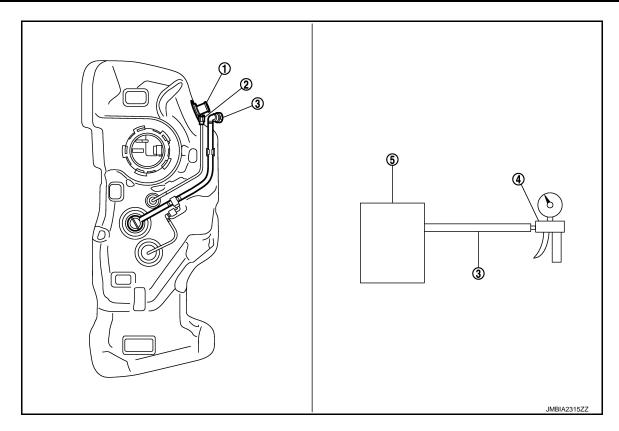

Filler tube

- Recirculation line Fuel tank
- 3. EVAP/ORVR line

Vacuum/pressure handy pump

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace refueling EVAP vapor cut valve with fuel tank. Refer to FL-9, "Exploded View".

3. CHECK REFUELING EVAP VAPOR CUT VALVE

®Without CONSULT

- 1. Remove fuel tank. Refer to FL-9, "Removal and Installation".
- Drain fuel from the tank as per the following:
- Remove fuel gauge retainer.
- Drain fuel from the tank using a handy pump into a fuel container.
- Check refueling EVAP vapor cut valve for being stuck to close as per the following. Blow air into the refueling EVAP vapor cut valve (from the end of EVAP/ORVR line hose), and check that the air flows freely into the tank.
- Check refueling EVAP vapor cut valve for being stuck to open as per the following.
- Connect vacuum pump to hose end.
- Remove fuel gauge retainer with fuel gauge unit. Refer to FL-5, "Exploded View".

Always replace O-ring with new one.

- Put fuel tank upside down.
- Apply vacuum pressure to hose end [-13.3 kPa (-0.136 kg/cm³, -1.93 psi)] with fuel gauge retainer remaining open and check that the pressure is applicable.


Α

EC

D

Е

Ν

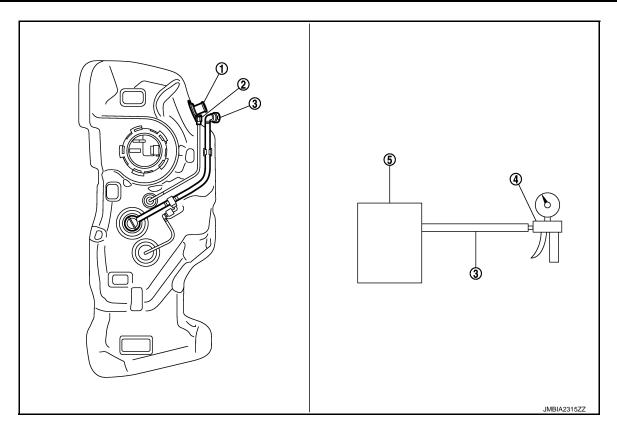

1. Filler tube

- 2. Recirculation line
- 5. Fuel tank

3. EVAP/ORVR line

Is the inspection result normal?

Vacuum/pressure handy pump

YES >> INSPECTION END

NO >> Replace refueling EVAP vapor cut valve with fuel tank. Refer to FL-9, "Exploded View".

Component Inspection (Drain filter)

INFOID:0000000008451392


1. CHECK DRAIN FILTER

- 1. Check visually for insect nests in the drain filter air inlet.
- 2. Check visually for cracks or flaws in the appearance.
- 3. Check visually for cracks or flaws in the hose.
- 4. Blow air into port A and check that it flows freely out of port B.
- Block port B.
- 6. Blow air into port A and check that there is no leakage.

Is the inspection result normal?


YES >> INSPECTION END

NO >> Replace drain filter. Refer to <u>EC-551, "System Description".</u>

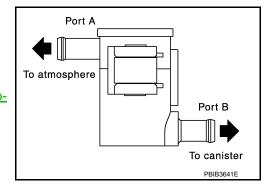

POSITIVE CRANKCASE VENTILATION

Description INFOID:000000008451393

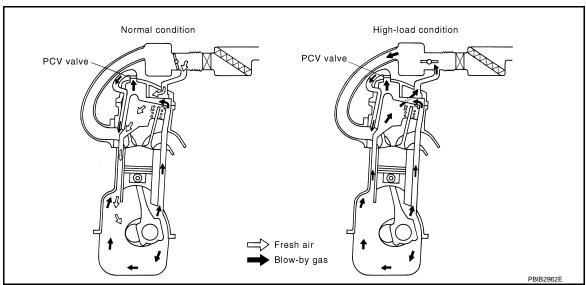

This system returns blow-by gas to the intake manifold.

The positive crankcase ventilation (PCV) valve is provided to conduct crankcase blow-by gas to the intake manifold.


During partial throttle operation of the engine, the intake manifold sucks the blow-by gas through the PCV valve.

Normally, the capacity of the valve is sufficient to handle any blow-by and a small amount of ventilating air.

The ventilating air is drawn from the air inlet tubes into the crankcase. In this process the air passes through the hose connecting air inlet tubes to rocker cover.

Under full-throttle condition, the manifold vacuum is insufficient to draw the blow-by flow through the valve. The flow goes through the hose connection in the reverse direction.

On vehicles with an excessively high blow-by, the valve does not meet the requirement. This is because some of the flow will go through the hose connection to the air inlet tubes under all conditions.

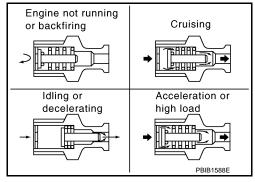

Component Inspection


1. CHECK PCV VALVE

With engine running at idle, remove PCV valve from rocker cover. A properly working valve makes a hissing noise as air passes through it. A strong vacuum should be felt immediately when a finger is placed over valve inlet.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace PCV valve. Refer to EM-42, "Exploded View".

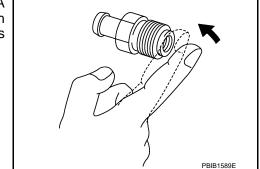

EC

Α

С

D

F

G

Н

. J

Κ

INFOID:0000000008451394

Ν


M

0

REFRIGERANT PRESSURE SENSOR

Description INFOID.000000008451395

The refrigerant pressure sensor is installed at the condenser of the air conditioner system. The sensor uses an electrostatic volume pressure transducer to convert refrigerant pressure to voltage. The voltage signal is sent to ECM, and ECM controls cooling fan system.

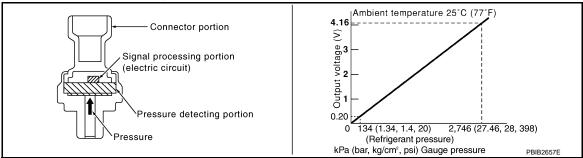

Component Function Check

INFOID:0000000008451396

1. CHECK REFRIGERANT PRESSURE SENSOR OVERALL FUNCTION

- 1. Start engine and warm it up to normal operating temperature.
- 2. Turn A/C switch and blower fan switch ON.
- 3. Check the voltage between ECM harness connector and ground.

ECM		Ground	Voltage	
Connector	Terminal	Glound	voltage	
F8	41 (Refrigerant pressure sensor signal)	Ground	1.0 - 4.0V	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to EC-916, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000008451397

1. CHECK GROUND CONNECTION

- Turn A/C switch and blower fan switch OFF.
- 2. Stop engine.
- 3. Turn ignition switch OFF.
- 4. Check ground connection E38. Refer to GI-44, "Circuit Inspection".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace ground connection.

2.CHECK REFRIGERANT PRESSURE SENSOR POWER SUPPLY CIRCUIT

- 1. Disconnect refrigerant pressure sensor harness connector.
- Turn ignition switch ON.
- Check the voltage between refrigerant pressure sensor harness connector and ground.

Refrigerant pressure sensor		Ground	Voltage
Connector	Terminal	Glound	voltage
E49	3	Ground	Approx. 5 V

Is the inspection result normal?

YES >> GO TO 4.

REFRIGERANT PRESSURE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

NO >> GO TO 3.

3.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors F1. E8
- Harness for open or short between ECM and refrigerant pressure sensor

EC

Α

>> Repair open circuit or short to ground or short to power in harness or connectors.

f 4.CHECK REFRIGERANT PRESSURE SENSOR GROUND CIRCUIT FOR OPEN AND SHORT

- Turn ignition switch OFF.
- Disconnect ECM harness connector.
- 3. Check the continuity between refrigerant pressure sensor harness connector and ECM harness connector.

Refrigerant pr	Refrigerant pressure sensor		ECM	
Connector	Terminal	Connector	Terminal	Continuity
E49	1	F8	48	Existed

4. Also check harness for short to ground and short to power.

Is the inspection result normal?

YES >> GO TO 6.

>> GO TO 5. NO

DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- Harness for open or short between ECM and refrigerant pressure sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

$oldsymbol{6}$.CHECK REFRIGERANT PRESSURE SENSOR INPUT SIGNAL CIRCUIT FOR OPEN AND SHORT

Check the continuity between ECM harness connector and refrigerant pressure sensor harness connector.

Refrigerant pr	Refrigerant pressure sensor		ECM	
Connector	Terminal	Connector	Terminal	Continuity
E49	2	F8	41	Existed

Also check harness for short to ground and short to power.

Is the inspection result normal?

>> GO TO 8. YES

NO >> GO TO 7.

.DETECT MALFUNCTIONING PART

Check the following.

- Harness connectors E8, F1
- Harness for open or short between ECM and refrigerant pressure sensor

>> Repair open circuit or short to ground or short to power in harness or connectors.

8. CHECK INTERMITTENT INCIDENT

Refer to GI-41, "Intermittent Incident".

Is the inspection result normal?

YES >> Replace refrigerant pressure sensor. Refer to HAC-116, "Exploded View".

NO >> Repair or replace.

D

Е

N

ECU DIAGNOSIS INFORMATION

ECM

Reference Value

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

- •Numerical values in the following table are reference values.
- •These values are input/output values that ECM receives/transmits and may differ from actual operations. Example:

The ignition timing shown by the timing light may differ from the ignition timing displayed on the data monitor. This occurs because the timing light shows a value calculated by ECM according to signals received from the cam shaft position sensor and other sensors related to ignition timing.

For outlines of following items, refer to EC-588, "CONSULT Function".

Monitor Item	Condition		Values/Status
ENG SPEED	Run engine and compare CONSULT value with the tachometer indication.		Almost the same speed as the tachometer indication.
MAS A/F SE-B1	See EC-598, "Diagnosis Procedure"		
B/FUEL SCHDL	See EC-598, "Diagnosis Procedure"		
A/F ALPHA-B1	See EC-598, "Diagnosis Procedure"		
COOLANT TEMP/S	Engine: After warming up		More than 70°C (158F)
A/F SEN1 (B1)	Engine: After warming up	Maintaining engine speed at 2,000 rpm	Fluctuates around 2.2 V
HO2S2 (B1)	are met.	00 rpm quickly after the following conditions	0 - 0.3 V ←→ Approx. 0.6 - 1.0 V
HO2S2 MNTR (B1)	Engine: After warming up After keeping engine speed betwe idle for 1 minute under no load	$LEAN \longleftrightarrow RICH$	
VHCL SPEED SE	Turn drive wheels and compare CONSULT value with the speedometer indication.		Almost the same speed as speedometer indication
BATTERY VOLT	Ignition switch: ON (Engine stopped)	ed)	11 - 14 V
ACCEL SEN 1	Ignition switch: ON (Engine stopped)	Accelerator pedal: Fully released	0.6 - 0.9 V
ACCEL SEN I		Accelerator pedal: Fully depressed	4.0 - 4.8 V
ACCEL SEN 2*1	Ignition switch: ON	Accelerator pedal: Fully released	0.6 - 0.9 V
ACCEL SEN 2	(Engine stopped)	Accelerator pedal: Fully depressed	3.9 - 4.8 V
	Ignition switch: ON	Accelerator pedal: Fully released	More than 0.36 V
TP SEN 1-B1	(Engine stopped)Selector lever position: D (CVT) or 1st (M/T)	Accelerator pedal: Fully depressed	Less than 4.75 V
	Ignition switch: ON	Accelerator pedal: Fully released	More than 0.36 V
TP SEN 2-B1* ¹	(Engine stopped)Selector lever position: D (CVT) or 1st (M/T)	Accelerator pedal: Fully depressed	Less than 4.75 V
START SIGNAL	• Ignition switch: $ON \rightarrow START \rightarrow ON$		$OFF \to ON \to OFF$
CLSD THL POS	Ignition switch: ON	Accelerator pedal: Fully released	ON
CLOD THE FOO	(Engine stopped)	Accelerator pedal: Slightly depressed	OFF
	• Engine: After warming up, idle the	Air conditioner switch: OFF	OFF
AIR COND SIG Engine: After warming up, idle thengine		Air conditioner switch: ON (Compressor operates.)	ON

ECM

[MR18DE (FOR CALIFORNIA)]

Monitor Item	С	ondition	Values/Status	_
P/N POSI SW	Ignition switch: ON	Selector lever position: P or N (CVT) or Neutral (M/T)	ON	-
		Selector lever position: Except above	OFF	
DW/CT CLONIAL	Engine: After warming up, idle the	Steering wheel: Not being turned	OFF	
PW/ST SIGNAL	engine	Steering wheel: Being turned	ON	
LOAD SIGNAL	Ignition switch: ON	Rear window defogger switch: ON and/or Lighting switch: 2nd position	ON	
LOAD SIGNAL	ignition switch. ON	Rear window defogger switch and lighting switch: OFF	OFF	_
IGNITION SW	• Ignition switch: $ON \rightarrow OFF \rightarrow ON$		$ON \to OFF \to ON$	
HEATER FAN SW	Engine: After warming up, idle the	Heater fan switch: ON	ON	
TILATER FAIN OW	engine	Heater fan switch: OFF	OFF	
BRAKE SW	Ignition switch: ON	Brake pedal: Fully released	OFF	
DIVAILE OW	- Ignition switch. ON	Brake pedal: Slightly depressed	ON	_
	Engine: After warming up	Idle	2.0 - 3.0 msec	_
INJ PULSE-B1	 Selector lever position: P or N (CVT) or Neutral (M/T) Air conditioner switch: OFF No load 	2,000 rpm	1.9 - 2.9 msec	
	Engine: After warming up	Idle	8 - 18°BTDC	_
IGN TIMING	 Selector lever position: P or N (CVT) or Neutral (M/T) Air conditioner switch: OFF No load 	2,000 rpm	25 - 45°BTDC	
	Engine: After warming up	Idle	10 - 35%	_
CAL/LD VALUE	 Selector lever position: P or N (CVT) or Neutral (M/T) Air conditioner switch: OFF No load 	2,500 rpm	10 - 35%	_
	Engine: After warming up	Idle	1.0 - 4.0 g/s	_
MASS AIRFLOW	 Selector lever position: P or N (CVT) or Neutral (M/T) Air conditioner switch: OFF No load 	2,500 rpm	2.0 - 10.0 g/s	
	Engine: After warming up	Idle	0%	_
PURG VOL C/V	 Selector lever position: P or N (CVT) or Neutral (M/T) Air conditioner switch: OFF No load 	2,000 rpm	0 - 50%	
	Engine: After warming up	Idle	−5 - 5°CA	_
INT/V TIM (B1)	 Selector lever position: P or N (CVT) or Neutral (M/T) Air conditioner switch: OFF No load 	2,000 rpm	Approx. 0 - 40°CA	
	Engine: After warming up	Idle	0 - 2%	_
INT/V SOL (B1)	 Selector lever position: P or N (CVT) or Neutral (M/T) Air conditioner switch: OFF No load 	2,000 rpm	Approx. 0 - 90%	
	Ignition switch: ON	Accelerator pedal: Fully released	ON	_
SWRL CONT S/V	 Engine coolant temperature: Between 5°C (41°F) and 40°C (104°F) 	Accelerator pedal: Slightly depressed	OFF	_

Monitor Item	C	ondition	Values/Status
TMBL POS SEN	 Ignition switch: ON Engine coolant temperature: Between 5°C (41°F) and 60°C (140°F) 	Accelerator pedal: Fully released Accelerator pedal: Slightly depressed	Less than 1.2 V More than 2.9 V
AIR COND RLY		Air conditioner switch: OFF	OFF
	Engine: After warming up, idle the engine	Air conditioner switch: ON (Compressor operates)	ON
FUEL PUMP RLY	For 1 second after turning ignition Engine running or cranking	switch: ON	ON
	Except above		OFF
THRTL RELAY	Ignition switch: ON		ON
	• Engine: After werning up idle the	Engine coolant temperature is 98°C (208°F) or less	OFF
COOLING FAN	Engine: After warning up, idle the engine Air conditioner switch: OFF	Engine coolant temperature is between 98°C (208°F) and 99°C (210°F)	LOW
		Engine coolant temperature is 100°C (212°F) or more	HIGH
HO2S2 HTR (B1)	Engine speed: Below 3,600 rpm after the following conditions are met. Engine: After warming up Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load		ON
VEHICLE SPEED	Turn drive wheels and compare CONSULT value with the speedometer indication.		Almost the same speed as the speedometer indication
IDL A/V LEARN	Engine: running	Idle air volume learning has not been performed yet.	YET
		Idle air volume learning has already been performed successfully.	CMPLT
TRVL AFTER MIL	Ignition switch: ON	Vehicle has traveled after MIL has turned ON.	0 - 65,535 km (0 - 40,723 miles)
ENG OIL TEMP	Engine: After warming up		More than 70°C (158F)
A/F S1 HTR (B1)	Engine: After warming up, idle the (More than 140 seconds after star)		4 - 100%
AC PRESS SEN	Engine: Idle Both A/C switch and blower fan sw	vitch: ON (Compressor operates)	1.0 - 4.0 V
EVAP SYS PRES	Ignition switch: ON		Approx 1.8 - 4.8 V
VENT CONT/V	Ignition switch: ON		OFF
I/P PULLY SPD	Vehicle speed: More than 20 km/h	(12MPH)	Almost the same speed as the tachometer indication.
A/F ADJ-B1	Engine: Running		-0.330 - 0.330
FUEL T/TMP SE	Ignition switch: ON		Indicates fuel tank tempera- ture.
INT/A TEMP SE	Ignition switch: ON		Indicates intake air tempera- ture.
FUEL LEVEL SE	Ignition switch: ON		Depending on fuel level of fuel tank.
BAT CUR SEN	 Engine speed: Idle Battery: Fuel charged*² Selector lever: P or N (CVT), Neutral (M/T) Air conditioner switch: OFF No load 		Approx 2,600 - 3,500 mV
	No load Engine: Idle		1

ECM

[MR18DE (FOR CALIFORNIA)]


Monitor Item	C	ondition	Values/Status
ALT DUTY SIG	Power generation voltage variable	control: Operating	ON
ALI DUTY SIG	Power generation voltage variable	OFF	
VHCL SPEED SE	Turn drive wheels and compare CONSULT value with the speedometer indication.		Almost the same speed as the speedometer indication.
SET VHCL SPD	Engine: Running	ASCD: Operating	The preset vehicle speed is displayed.
MAIN SW	Ignition switch: ON	MAIN switch: pressed	ON
WAIN SW	• Ignition Switch. ON	MAIN switch: Released	OFF
CANCEL SW	Ignition switch: ON	CANCEL switch: pressed	ON
SANGLE OV	- ignition switch. Oil	CANCEL switch: Released	OFF
SET SW	Ignition switch: ON	SET/COAST switch: pressed	ON
3L1 3W	· igililon switch. ON	SET/COAST switch: Released	OFF
DECLIME/ACC CW	a legition quitale ON	RESUME/ACCELERATE switch: pressed	ON
RESUME/ACC SW	Ignition switch: ON	RESUME/ACCELERATE switch: Released	OFF
BRAKE SW1	Ignition switch: ON	Brake pedal: Fully released (CVT) Brake pedal and clutch pedal: Fully released (M/T)	ON
(ASCD brake switch)) brake switch)	Brake pedal: Slightly depressed (CVT) Brake pedal and/or clutch pedal: Slightly depressed (M/T)	OFF
BRAKE SW2	• Ignition quitable ON	Brake pedal: Fully released	OFF
stop lamp switch)	Ignition switch: ON	Brake pedal: Slightly depressed	ON
/HCL SPD CUT	Ignition switch: ON		NON
O SPEED CUT	Ignition switch: ON		NON
AT OD MONITOR	Ignition switch: ON		OFF
AT OD CANCEL	Ignition switch: ON		OFF
CRUISE LAMP	Ignition switch: ON	MAIN switch: Pressed at the 1st time \rightarrow at the 2nd time	$ON \to OFF$
	MAIN switch: ON	ASCD: Operating	ON
SET LAMP	 Vehicle speed: Between 40 km/h (25 MPH) and 144 km/h (89 MPH) 	ASCD: Not operating	OFF
THRTL STK CNT B1	NOTE: The item is indicated, but not used.	L	_
EVAP LEAK DIAG	Ignition switch: ON		Indicates the condition of EVAP leak diagnosis.
EVAP DIAG READY	Ignition switch: ON		Indicates the ready condition of EVAP leak diagnosis.
HO2 S2 DIAC4 (B4)	DTC P0139 self-diagnosis (delayed	response) is incomplete.	INCMP
HO2 S2 DIAG1 (B1)	DTC P0139 self-diagnosis (delayed	response) is complete.	CMPLT
102 C2 DIA C2 (D4)	DTC P0139 self-diagnosis (slow res	ponse) is incomplete.	INCMP
IO2 S2 DIAG2 (B1)	DTC P0139 self-diagnosis (slow res	ponse) is complete.	CMPLT
VF SEN1 DIAG2	DTC P014C and P014D self-diagnos	sis is incomplete.	INCMP
B1)	DTC P014C and P014D self-diagnos	sis is complete.	CMPLT
A/F SEN1 DIAG3	The vehicle condition is not within th P015A or P015B.	e diagnosis range of DTC P014C, P014D,	ABSNT
(B1)	The vehicle condition is within the di P015A or P015B.	agnosis range of DTC P014C, P014D,	PRSNT

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Values/Status
SYSTEM 1 DIAG-	DTC P117A self-diagnosis is incomplete.	INCMP
NOSIS A B1	DTC P117A self-diagnosis is complete.	CMPLT
SYSTEM 1 DIAG-	DTC P117A self-diagnosis is on standby.	ABSENT
NOSIS B B1	DTC P117A self-diagnosis is under diagnosis.	PRSENT

^{*:} Accelerator pedal position sensor 2 signal and throttle position sensor 2 signal are converted by ECM internally. Thus, they differ from ECM terminals voltage signal.

TERMINAL LAYOUT

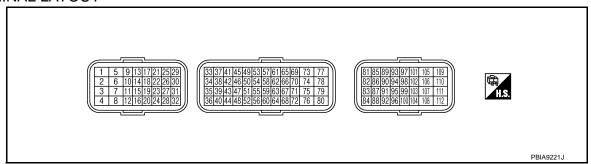

PHYSICAL VALUES

NOTE:

- ECM is located in the engine room left side near battery.
- Specification data are reference values and are measured between each terminal and ground.
- Pulse signal is measured by CONSULT.

Termin (Wire		Description		Condition	Value
+	_	Signal name	Input/ Output	Condition	(Approx.)
1 (P)	108 (B)	Throttle control motor (Open)	Output	[Ignition switch: ON] • Engine stopped • Selector lever: D (CVT), 1st (M/T) • Accelerator pedal: Fully depressed	3.2 V★ 1mSec/div 5V/div JMBIA0324GB
2 (SB)	108 (B)	Throttle control motor re- lay power supply	Input	[Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V)
3 (V)	108 (B)	Tumble control valve motor power supply	Input	[Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V)
4 (L)	108 (B)	Throttle control motor (Close)	Output	[Ignition switch: ON] • Engine stopped • Selector lever: D (CVT), 1st (M/T) • Accelerator pedal: Fully released	1.8 V★ 5mSec/div 5V/div JMBIA0326GB

^{*:} Before measuring the terminal voltage, confirm that the battery is fully charged. Refer to PG-3, "How to Handle Battery".

Termin (Wire		Description		Condition	Value	А
+	-	Signal name	Input/ Output	Condition	(Approx.)	
5 (G)	59 (O)	Heated oxygen sensor 2 heater	Output	 [Engine is running] Engine speed: Below 3,600 rpm after the following conditions are met Engine: after warming up Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load 	10 V★ 50mSec/div 10V/div JMBIA0325GB	C
				[Ignition switch: ON] • Engine stopped [Engine is running] • Engine speed: Above 3,600 rpm	BATTERY VOLTAGE (11 - 14 V)	Е
6	108	Tumble control valve mo-	Output	 [Ignition switch: OFF → ON] For a few seconds after turning ignition switch ON 	0 V ↓ BATTERY VOLTAGE (11 - 14 V) ↓ 0 V	F
(W)	(B) tor (Close)	·	 [Ignition switch: ON → OFf] For a few seconds after turning ignition switch OFF 	0 V ↓ 1.5 - 2.0 V ↓ 0 V	Н	
7	108	Tumble control valve mo-		[Ignition switch: OFF → ON] • For a few seconds after turning ignition switch ON	0 V ↓ 0.5 V ↓ 0 V	J
(R)	(B)	tor (Open)	Output	 [Ignition switch: ON → OFf] For a few seconds after turning ignition switch OFF 	0 V ↓ BATTERY VOLTAGE (11 - 14 V) ↓ 0 V	К
8 (G)	53 (LG)	A/F sensor 1 heater	Output	 [Engine is running] Warm-up condition Engine speed: Idle speed (More than 140 seconds after starting engine) 	2.9 - 8.8 V★ 50mSec/div 10V/div JMBIA0325GB	M N

0

Termir (Wire	nal No. color)	Description		Condition	Value	
+	_	Signal name	Input/ Output	Condition	(Approx.)	
9	9 108 (P) (B) EVAP canister purge volume control solenoid valve		Output	[Engine is running]Idle speedAccelerator pedal: Not depressed even slightly, after engine starting	BATTERY VOLTAGE (11 - 14 V)★ 50mSec/div 10V/div JMBIA0327GB	
(F)		valve		[Engine is running]Engine speed: About 2,000 rpm (More than 100 seconds after starting engine.)	10 V★ 50mSec/div 10V/div JMBIA0328GB	
11 (B)	_	ECM ground	_	_	_	
12 (GR)	_	Sensor ground (Engine oil temperature sensor)	_	_	_	
14 (BR)	108 (B) PNP signal	Input	[Ignition switch: ON] • Selector lever: P or N (CVT), Neutral (M/T)	BATTERY VOLTAGE (11 - 14 V)		
,				[Ignition switch: ON] • Selector lever: Except above	0 V	
15 (Y)	108 (B)	Throttle control motor re-	Output	[Ignition switch: OFF]	BATTERY VOLTAGE (11 - 14 V)	
17 (R)		Ignition signal No. 1		[Ignition switch: ON] [Engine is running] • Warm-up condition	0 - 1.0 V 0 - 0.3 V★ 50mSec/div	
18 (LG)	108	Ignition signal No. 2	Output	Idle speed NOTE: The pulse cycle changes depending on rpm at idle	2V/div JMBIA0329GB	
21 (G)	(B)	(B) Ignition signal No. 4	·	[Engine is running]	0.2 - 0.5 V★ 50mSec/div	
22 (SB)		Ignition signal No. 3		Warm-up conditionEngine speed: 2,500 rpm	2V/div JMBIA0330GB	
23 (GR)	108 (B)	Fuel pump relay	Output	[Ignition switch: ON]For 1 second after turning ignition switch ON[Engine is running]	0 - 1.0 V	

Terminal No. (Wire color)		Description		2	Value
+	_	Signal name	Input/ Output	Condition	(Approx.)
25 (V)		Fuel injector No. 4		[Engine is running]	BATTERY VOLTAGE (11 - 14 V)★ 50mSec/div
29 (Y)	108	Fuel injector No. 3	Output	Warm-up condition Idle speed NOTE: The pulse cycle changes depending on rpm at idle	10V/div JMBIA0331GB
30 (O)	(B)	Fuel injector No. 2	,		BATTERY VOLTAGE (11 - 14 V)★ 50mSec/div
31 (L)		Fuel injector No. 1		[Engine is running]Warm-up conditionEngine speed: 2,000 rpm	10V/div JMBIA0332GB
27 (R)	12 (GR)	Engine oil temperature sensor	Input	[Engine is running]	0 - 4.8 V Output voltage varies with engine oil temperature.
28 (SB)	108 (B)	EVAP canister vent control valve	Output	[Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V)
32 (P)	108 (B)	ECM relay (Self shut-off)	Output	[Engine is running][Ignition switch: OFF]A few seconds after turning ignition switch OFF	0 - 1.0 V
(,)	(2)	(con onat on)		[Ignition switch: OFF]More than a few seconds after turning ignition switch OFF	BATTERY VOLTAGE (11 - 14 V)
33	36	Throttle position sensor 1	Input	 [Ignition switch: ON] Engine stopped Selector lever: D (CVT), 1st (M/T) Accelerator pedal: Fully released 	More than 0.36 V
(LG)	(Y)	THIS DESIGN SOLICE	put	 [Ignition switch: ON] Engine stopped Selector lever: D (CVT), 1st (M/T) Accelerator pedal: Fully depressed 	Less than 4.75 V
34	36	Throttle position sensor 2	Input	 [Ignition switch: ON] Engine stopped Selector lever: D (CVT), 1st (M/T) Accelerator pedal: Fully released 	Less than 4.75 V
(R)	R) (Y) Throttle position sensor 2	mpat	 [Ignition switch: ON] Engine stopped Selector lever: D (CVT), 1st (M/T) Accelerator pedal: Fully depressed 	More than 0.36 V	
				 [Ignition switch: OFF → ON] For a few seconds after turning ignition switch ON 	0 V ↓ 0.7 V
35 (V)	47 (LG)	Tumble control valve position sensor	Input	 [Ignition switch: ON → OFf] For a few seconds after turning ignition switch OFF 	0.7 V ↓ 3.5 V ↓

< ECU DIAGNOSIS INFORMATION >

	nal No. color)	Description		Condition	Value
+	_	Signal name	Input/ Output	Condition	(Approx.)
36 (Y)	_	Sensor ground (Throttle position sensor)	_	_	_
37 (W)	40 (—)	Knock sensor	Input	[Engine is running] • Idle speed	2.5 V
38 (BR)	44 (GR)	Engine coolant tempera- ture sensor	Input	[Engine is running]	0 - 4.8 V Output voltage varies with engine coolant temperature.
40 (—)	_	Sensor ground (Knock sensor)	_	_	_
41 (GR)	48 (BR)	Refrigerant pressure sensor	Input	 [Engine is running] Warm-up condition Both A/C switch and blower fan motor switch: ON (Compressor operates) 	1.0 - 4.0 V
42 (V)	51 (Y)	EVAP control system pressure sensor	Input	[Ignition switch: ON]	1.8 - 4.8 V
43 (P)	108 (B)	Fuel tank temperature sensor	Input	[Engine is running]	0 - 4.8 V Output voltage varies with fuel tank temperature.
44 (GR)	_	Sensor ground (Engine coolant temperature sensor)	_	_	_
45 (G)	52 (R)	Mass air flow sensor	Input	 [Engine is running] Warm-up condition Idle speed [Engine is running] Warm-up condition Engine speed: 2,500 rpm 	0.7 - 1.1 V 1.3 - 1.7 V
46 (L)	55 (P)	Intake air temperature sensor	Input	[Engine is running]	0 - 4.8 V Output voltage varies with intake air temperature.
47 (LG)	_	Sensor ground (Tumble control valve position sensor)	_	_	_
48 (BR)	_	Sensor ground (Refrigerant pressure sensor)	_	_	_
49 (V)	53 (LG)	A/F sensor 1	Input	[Engine is running]Warm-up conditionEngine speed: 2,000 rpm	Approximately 1.8 V Output voltage varies with air fuel ratio.
50 (W)	59 (O)	Heated oxygen sensor 2	Input	 [Engine is running] Revving engine from idle to 3,000 rpm quickly after the following conditions are met Engine: after warming up Keeping the engine speed between 3,500 and 4,000 rpm for 1 minute and at idle for 1 minute under no load 	0 - 1.0 V
51 (Y)	_	Sensor ground (EVAP control system pressure sensor)	_	_	_
52 (R)	_	Sensor ground (Mass air flow sensor)	_	_	_

Termin (Wire	nal No. color)	Description		Quantity of	Value
+	_	Signal name	Input/ Output	Condition	(Approx.)
53 (LG)	_	Sensor ground (A/F sensor 1)	_	-	_
55 (P)	_	Sensor ground (Intake air temperature sensor)	_	_	_
57 (GR)	64 (SB)	Battery current sensor	Input	[Engine is running] • Battery: Fully charged *1 • Idle speed	2.6 - 3.5 V
59 (O)	_	Sensor ground (Heated oxygen sensor 2)	_	_	_
61	62	Crankshaft position sen-	Input	 [Engine is running] Warm-up condition Idle speed NOTE: The pulse cycle changes depending on rpm at idle 	4.0 V★ 5mSec/div 2V/div JMBIA0333GB
(W)		mput	[Engine is running] • Engine speed: 2,000 rpm	4.0 V★ 5mSec/div 2V/div JMBIA0334GB	
62 (B)	_	Sensor ground [Crankshaft position sensor (POS)]	_	_	_
63 (L)	_	Sensor ground [Camshaft position sensor (PHASE)]	_	_	_
64 (SB)	_	Sensor ground (Battery current sensor)	_	_	_
65	63	Camshaft position sensor	lan.	 [Engine is running] Warm-up condition Idle speed NOTE: The pulse cycle changes depending on rpm at idle 	0 - 5.0★ 20mSec/div 2V/div JMBIA0045GB
(Y)	(L)	(PHASE)	Input	[Engine is running] • Engine speed is 2,000 rpm	0 - 5.0★ 20mSec/div 2V/div JMBIA0046GB
66 (L)	108 (B)	Power supply for ECM (Back-up)	Input	[Ignition switch: OFF]	BATTERY VOLTAGE (11 - 14 V)

< ECU DIAGNOSIS INFORMATION >

Termin (Wire	nal No. color)	Description		O v Pri	Value
+	_	Signal name	Input/ Output	Condition	(Approx.)
69 (SB)	47 (LG)	Sensor power supply (Tumble control valve position sensor)	_	[Ignition switch: ON]	5 V
71 (Y)	64 (SB)	Sensor power supply [Battery current sensor]	_	[Ignition switch: ON]	5 V
72 (O)	36 (Y)	Sensor power supply (Throttle position sensor)	_	[Ignition switch: ON]	5 V
				[Engine is running]Warm-up conditionIdle speed	BATTERY VOLTAGE (11 - 14 V)
73 (P)	108 (B)	Intake valve timing control solenoid valve	Output	[Engine is running]Warm-up conditionWhen revving engine up to 2,000rpm Quickly	7 - 10 V★ >>> 10.0V/Div PBIA4937J
74 (W)	108 (B)	Sensor power supply (Refrigerant pressure sensor)	Input	[Ignition switch: ON]	5 V
75 (R)	62 (B)	Sensor power supply [Crankshaft position sen- sor (POS)]	_	[Ignition switch: ON]	5 V
76 (LG)	51 (Y)	Sensor power supply [EVAP control system pressure sensor]	_	[Ignition switch: ON]	5 V
78 (G)	63 (L)	Sensor power supply [Camshaft position sensor (PHASE)]	_	[Ignition switch: ON]	5 V
83 (P)	108 (B)	CAN communication line	Input/ Output	_	_
84 (L)	108 (B)	CAN communication line	Input/ Output	_	_
88 (LG)	108 (B)	Data link connector	Input/ Output	_	_
93 (L)	108 (B)	Ignition switch	Input	[Ignition switch: OFF] [Ignition switch: ON]	0 V BATTERY VOLTAGE
•				[Ignition switch: ON] • ASCD steering switch: OFF	(11 - 14 V) 4 V
				[Ignition switch: ON] • MAIN switch: Pressed	0 V
94	95 (BR)*2	ASCD steering switch	Input	[Ignition switch: ON] • CANCEL switch: Pressed	1 V
(SB)	(B)*3			[Ignition switch: ON] • RESUME/ACCELERATE switch: Pressed	3 V
				[Ignition switch: ON] • SET/COAST switch: Pressed	2 V

Termina (Wire o		Description		Condition	Value
+	-	Signal name	Input/ Output	Condition	(Approx.)
95 (BR) ^{*2} (B) ^{*3}	_	Sensor ground (ASCD steering switch)	_	_	_
99	108	Stop lamp switch	Input	[Ignition switch: OFF] • Brake pedal: Fully released	0 V
(W)	(B)		•	[Ignition switch: OFF] • Brake pedal: Slightly depressed	BATTERY VOLTAGE (11 - 14 V)
100 (SB)	108 (B)	ASCD brake switch	Input	[Ignition switch: ON] • Brake pedal: Slightly depressed (CVT) • Brake pedal and clutch pedal: Slightly depressed (M/T)	0 V
(02)	(-)			 [Ignition switch: ON] Brake pedal: Fully released (CVT) Brake pedal and/or clutch pedal: Fully released (M/T) 	BATTERY VOLTAGE (11 - 14 V)
102 (O)	108 (B)	Sensor power supply (Accelerator pedal position sensor 2)	_	[Ignition switch: ON]	5 V
103		lanut	[Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully released	0.3 - 0.6 V	
(G)		Input	[Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully depressed	1.95 - 2.4 V	
104 (R)	_	Sensor ground (Accelerator pedal position sensor 2)	_	_	_
105 (G)	108 (B)	Power supply for ECM	Input	[Ignition switch: ON]	BATTERY VOLTAGE (11 - 14 V)
106 (V)	108 (B)	Sensor power supply (Accelerator pedal position sensor 1)	_	[Ignition switch: ON]	5 V
107 (B)	_	ECM ground	_	_	_
108 (B)	_	ECM ground	_	_	_
109 (B)	_	ECM ground	_	_	_
110	111	Accelerator pedal position	Input	[Ignition switch: ON] • Engine stopped • Accelerator pedal: Fully released	0.6 - 0.9 V
(BR)	(Y)	sensor 1	•	[Ignition switch: ON]Engine stoppedAccelerator pedal: Fully depressed	3.9 - 4.7 V
111 (Y)	_	Sensor ground (Accelerator pedal position sensor 1)	_	_	_
112 (B)	_	ECM ground	_	_	_

^{★:} Average voltage for pulse signal (Actual pulse signal can be confirmed by oscilloscope.)

^{*1:} Before measuring the terminal voltage, confirm that the battery is fully changed. Refer to PG-3, "How to Handle Battery".


*2: CVT models


*3: M/T models


Wiring Diagram — ENGINE CONTROL SYSTEM —


INFOID:0000000008451399


For connector terminal arrangements, harness layouts, and alphabets in a (option abbreviation; if not described in wiring diagram), refer to GI-12, "Connector Information".

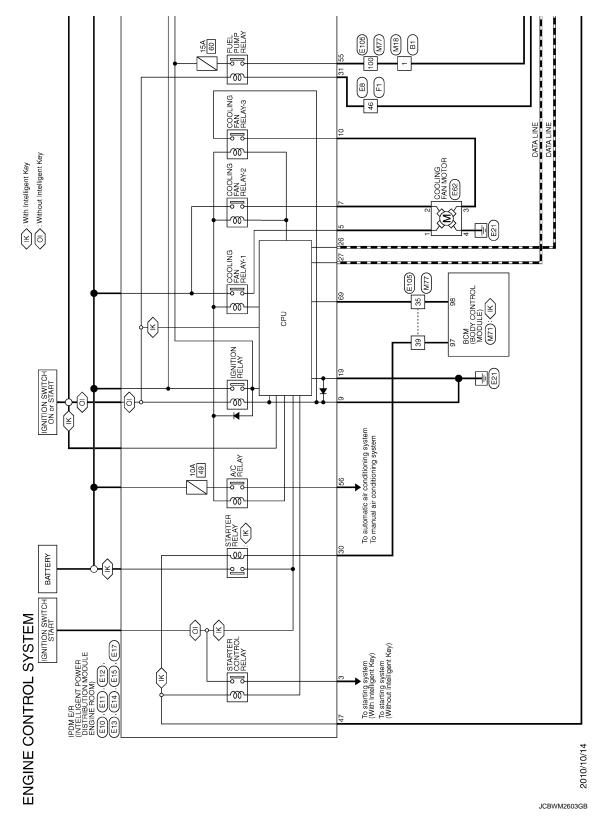

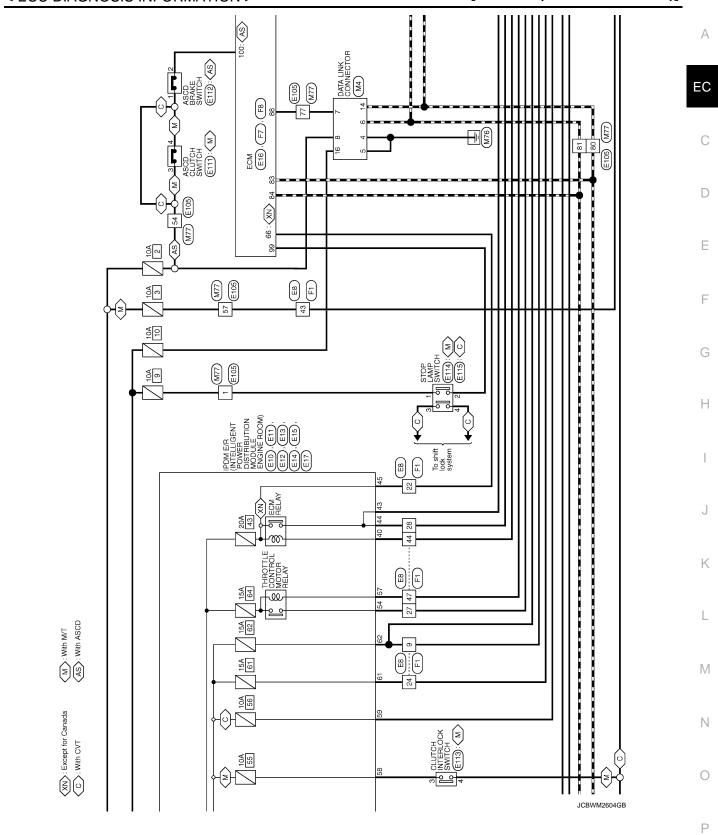

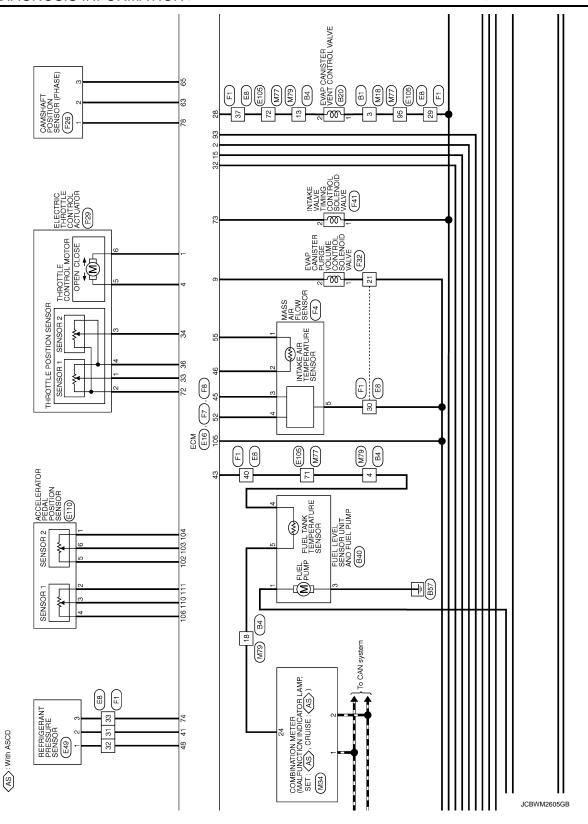

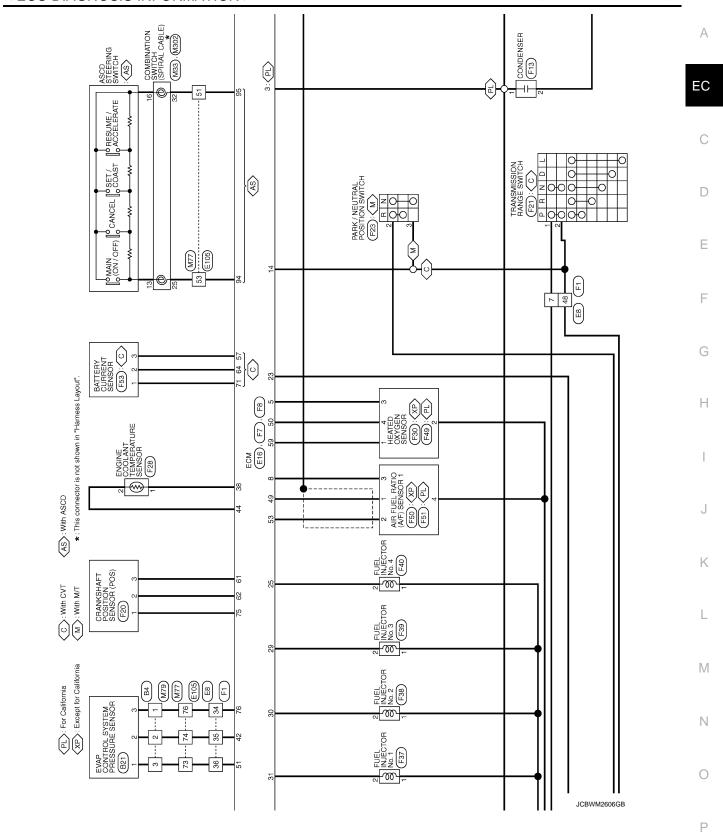

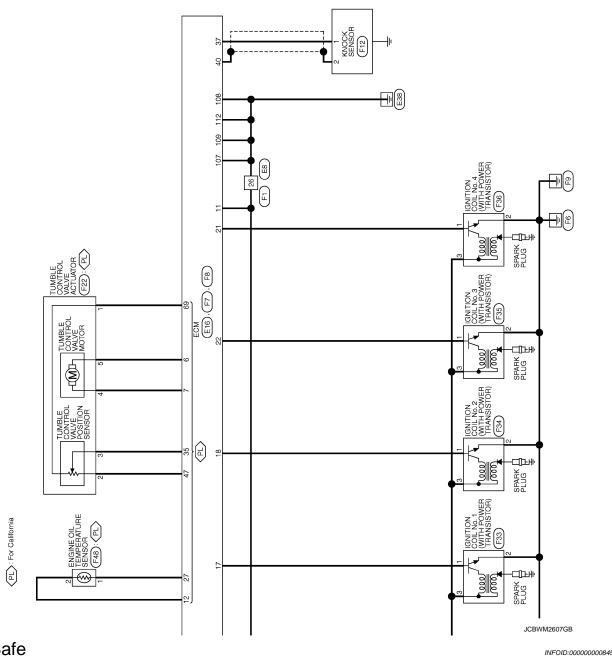

Fail Safe INFOID:0000000008451400

NON DTC RELATED ITEM

function

Detected i	tems	Engine operating co			Remarks		
Malfunction ir lamp circuit	on indicator Engine speed will not ris		ot rise	t rise When there is an open circuit on MIL circuit, the ECM cannot warn the driver by			
TC RELA	TED I	ГЕМ					
DTC No.	[Detected items	Engine o	pperating condition in fail-sa	afe mode		
P0011	Intake	valve timing control		al is not energized to the in	take valve timing control solenoid valve and the valve		
P0101 P0102 P0103	Mass a	air flow sensor circuit	Engine s	speed will not rise more tha	n 2,400 rpm due to the fuel cut.		
P0117 P0118	_	e coolant tempera- ensor circuit			determined by ECM based on the following condition. lant temperature decided by ECM.		
				Condition	Engine coolant temperature decided (CONSULT display)		
			Just as iq or STAR	gnition switch is turned ON T	40°C (104°F)		
			More that engine s	n approx. 4 minutes after tarting	80°C (176°F)		
			Except a	s shown above	40 - 80°C (104 - 176°F) (Depends on the time)		
		•	When the fail-safe system for engine coolant temperature sensor is activated, the cooling fan operates while engine is running.				
P0122 P0123 P0222 P0223 P2135	Throttl	order f The E0 conditi		the idle position to be with If regulates the opening sp	le control actuator in regulating the throttle opening in in +10 degrees. eed of the throttle valve to be slower than the normal		
P0196 P0197 P0198	Engine	e oil temperature	Intake va	alve timing control does no	t function.		
P0500	Vehicle	e speed sensor	The coo	ing fan operates (highest)	while engine is running.		
P0643	Senso	r power supply		ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.			
P0605	ECM		ECM sto	(When ECM calculation function is malfunctioning:) ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.			
P1805	Brake	switch	small rar		ontrol actuator by regulating the throttle opening to a		
			Vehicle of	condition	Driving condition		
			When er	ngine is idling	Normal		
			When a	ccelerating	Poor acceleration		
P2100 P2103	Throttl	e control motor relay		ps the electric throttle contening (approx. 5 degrees) t	rol actuator control, throttle valve is maintained at a by the return spring.		
P2101	Electri	c throttle control	ECM sto	ps the electric throttle cont	rol actuator control, throttle valve is maintained at a		

fixed opening (approx. 5 degrees) by the return spring.

< ECU DIAGNOSIS INFORMATION >

DTC No.	Detected items	Engine operating condition in fail-safe mode
P2118	Throttle control motor	ECM stops the electric throttle control actuator control, throttle valve is maintained at a fixed opening (approx. 5 degrees) by the return spring.
P2119	Electric throttle control actuator	(When electric throttle control actuator does not function properly due to the return spring malfunction:) ECM controls the electric throttle actuator by regulating the throttle opening around the idle position. The engine speed will not rise more than 2,000 rpm.
		(When throttle valve opening angle in fail-safe mode is not in specified range:) ECM controls the electric throttle control actuator by regulating the throttle opening to 20 degrees or less.
		(When ECM detects the throttle valve is stuck open:) While the vehicle is driving, it slows down gradually by fuel cut. After the vehicle stops, the engine stalls. The engine can restart in N or P (CVT), Neutral (M/T) position, and engine speed will not exceed 1,000 rpm or more.
P2122 P2123 P2127 P2128 P2138	Accelerator pedal position sensor	The ECM controls the electric throttle control actuator in regulating the throttle opening in order for the idle position to be within +10 degrees. The ECM regulates the opening speed of the throttle valve to be slower than the normal condition. So, the acceleration will be poor.

DTC Inspection Priority Chart

INFOID:0000000008451401

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Ρ

Priority	Detected items (DTC)	А
1	 U0100 U0101 U1001 CAN communication line P0101 P0102 P0103 Mass air flow sensor P0111 P0112 P0113 P0127 Intake air temperature sensor P0116 P0117 P0118 P0125 Engine coolant temperature sensor P0122 P0123 P0222 P0223 P1225 P1226 P2135 Throttle position sensor 	EC
	 P0128 Thermostat function P0196 P0197 P0198 Engine oil temperature sensor P0181 P0182 P0183 Fuel tank temperature sensor P0327 P0328 Knock sensor 	С
	 P0335 Crankshaft position sensor (POS) P0340 Camshaft position sensor (PHASE) P0460 P0461 P0462 P0463 Fuel level sensor P0500 Vehicle speed sensor 	D
	 P0603 P0605 P607 ECM P0643 Sensor power supply P0705 Transmission range switch P0850 Park/neutral position (PNP) switch 	Е
	 P1550 P1551P1552 P1553 P1554 Battery current sensor P1610 - P1615 NATS P2014 P2016 P2017 P2018 Tumble control valve position sensor P2122 P2123 P2127 P2128 P2138 Accelerator pedal position sensor 	F
2	 P0031 P0032 Air fuel ratio (A/F) sensor 1 heater P0037 P0038 Heated oxygen sensor 2 heater P0075 Intake valve timing control solenoid valve 	G
	 P0130 P0131 P0132 P014C P014D P015A P015B P2096 P2097 Air fuel ratio (A/F) sensor 1 P0137 P0138 P0139 Heated oxygen sensor 2 P0441 EVAP control system purge flow monitoring P0443 P0444 P0445 EVAP canister purge volume control solenoid valve P0447 P0448 EVAP canister vent control valve P0451 P0452 P0453 EVAP control system pressure sensor 	H
	 P0710 P0715 P0720 P0740 P0744 P0745 P0746 P0776 P0778 P0840 P1740 P1777 P1778 CVT related sensors, solenoid valves and switches P1217 Engine over temperature (OVERHEAT) P1805 Brake switch P2004 Tumble control valve P2100 P2103 Throttle control motor relay P2101 Electric throttle control function 	J
3	P2118 Throttle control motor P0011 Intake valve timing control P0171 P0172 Fuel injection system function P0300 - P0304 Misfire P0420 Three way catalyst function P0456 FVAR control system (SMALL LEAK VERY SMALL LEAK)	L
	 P0456 EVAP control system (SMALL LEAK, VERY SMALL LEAK) P0506 P0507 Idle speed control system P050A P050B P050E Cold start control P1148 Closed loop control P117A Air fuel ratio P1212 TCS communication line 	M
	 P1564 ASCD steering switch P1572 ASCD brake switch P1574 ASCD vehicle speed sensor P1715 Input speed sensor P2119 Electric throttle control actuator 	0

DTC Index

×:Applicable —: Not applicable

DTC*1						_	Deference
CONSULT GST*2	ECM*3	ltems (CONSULT screen terms)	SRT code	Trip	MIL	Permanent DTC group*4	Reference page
U0100	0100 ^{*5}	LOST COMM (ECM A)	_	1	×	В	TM-102
U0101	0101 ^{*5}	LOST COMM (TCM)	_	1	×	В	EC-608
U1001	1001 ^{*5}	CAN COMM CIRCUIT	_	2	_	_	EC-609
P0000	0000	NO DTC IS DETECTED. FURTHER TESTING MAY BE REQUIRED.	_	_	Flashing*8	_	_
P0011	0011	INT/V TIM CONT-B1	×	2	×	В	EC-610
P0031	0031	A/F SEN1 HTR (B1)	_	2	×	В	EC-614
P0032	0032	A/F SEN1 HTR (B1)	_	2	×	В	EC-614
P0037	0037	HO2S2 HTR (B1)	_	2	×	В	EC-617
P0038	0038	HO2S2 HTR (B1)	_	2	×	В	EC-617
P0075	0075	INT/V TIM V/CIR-B1	_	2	×	В	EC-620
P0101	0101	MAF SEN/CIRCUIT-B1	_	2	×	В	EC-623
P0102	0102	MAF SEN/CIRCUIT-B1	_	1	×	В	EC-628
P0103	0103	MAF SEN/CIRCUIT-B1	_	1	×	В	EC-628
P0111	0111	IAT SENSOR 1 B1	_	2	×	А	EC-633
P0112	0112	IAT SEN/CIRCUIT-B1	_	2	×	В	EC-635
P0113	0113	IAT SEN/CIRCUIT-B1	_	2	×	В	EC-635
P0116	0116	ECT SEN/CIRC	_	2	×	А	EC-637
P0117	0117	ECT SEN/CIRC	_	1	×	В	EC-640
P0118	0118	ECT SEN/CIRC	_	1	×	В	EC-640
P0122	0122	TP SEN 2/CIRC-B1	_	1	×	В	EC-643
P0123	0123	TP SEN 2/CIRC-B1	_	1	×	В	EC-643
P0125	0125	ECT SENSOR	_	2	×	В	EC-646
P0127	0127	IAT SENSOR-B1	_	2	×	В	EC-649
P0128	0128	THERMSTAT FNCTN	_	2	×	А	EC-651
P0130	0130	A/F SENSOR1 (B1)	_	2	×	А	EC-654
P0131	0131	A/F SENSOR1 (B1)	_	2	×	В	EC-658
P0132	0132	A/F SENSOR1 (B1)	_	2	×	В	EC-661
P0137	0137	HO2S2 (B1)	×	2	×	А	EC-664
P0138	0138	HO2S2 (B1)	×	2	×	А	EC-670
P0139	0139	HO2S2 (B1)	×	2	×	А	EC-678
P014C	014C	A/F SENSOR1 (B1)	×	2	×	А	EC-684
P014D	014D	A/F SENSOR1 (B1)	×	2	×	Α	EC-684
P015A	015A	A/F SENSOR1 (B1)	×	2	×	Α	EC-684
P015B	015B	A/F SENSOR1 (B1)	×	2	×	Α	EC-684
P0171	0171	FUEL SYS-LEAN-B1	_	2	×	В	EC-689
P0172	0172	FUEL SYS-RICH-B1	_	2	×	В	EC-693
P0181	0181	FTT SENSOR	_	2	×	A and B	EC-697
P0182	0182	FTT SEN/CIRCUIT	_	2	×	В	EC-702

Α

D

Е

F

G

Н

J

Κ

L

M

Ν

0

Ρ

DTO	C*1	Items				Permanent	Reference
CONSULT GST*2	ECM*3	(CONSULT screen terms)	SRT code	Trip	MIL	DTC group*4	page
P0183	0183	FTT SEN/CIRCUIT	_	2	×	В	EC-702
P0196	0196	EOT SEN/CIRC	_	2	×	A and B	EC-705
P0197	0197	EOT SEN/CIRC	_	2	×	В	EC-709
P0198	0198	EOT SEN/CIRC	_	2	×	В	EC-709
P0222	0222	TP SEN 1/CIRC-B1	_	1	×	В	EC-711
P0223	0223	TP SEN 1/CIRC-B1	_	1	×	В	EC-711
P0300	0300	MULTI CYL MISFIRE	_	1 or 2	×	В	EC-714
P0301	0301	CYL 1 MISFIRE	_	1 or 2	×	В	EC-714
P0302	0302	CYL 2 MISFIRE	_	1 or 2	×	В	EC-714
P0303	0303	CYL 3 MISFIRE	_	1 or 2	×	В	EC-714
P0304	0304	CYL 4 MISFIRE	_	1 or 2	×	В	EC-714
P0327	0327	KNOCK SEN/CIRC-B1	_	2	_	_	EC-720
P0328	0328	KNOCK SEN/CIRC-B1	_	2	_	_	EC-720
P0335	0335	CKP SEN/CIRCUIT	_	2	×	В	EC-722
P0340	0340	CMP SEN/CIRC-B1	_	2	×	В	EC-726
P0420	0420	TW CATALYST SYS-B1	×	2	×	А	EC-730
P0441	0441	EVAP PURG FLOW/MON	×	2	×	А	EC-735
P0443	0443	PURG VOLUME CONT/V	_	2	×	А	EC-741
P0444	0444	PURG VOLUME CONT/V	_	2	×	В	EC-746
P0445	0445	PURG VOLUME CONT/V	_	2	×	В	EC-746
P0447	0447	VENT CONTROL VALVE	_	2	×	В	EC-749
P0448	0448	VENT CONTROL VALVE	_	2	×	В	EC-753
P0451	0451	EVAP SYS PRES SEN	_	2	×	А	EC-757
P0452	0452	EVAP SYS PRES SEN	_	2	×	В	EC-761
P0453	0453	EVAP SYS PRES SEN	_	2	×	В	EC-766
P0456	0456	EVAP VERY SML LEAK	×*7	2	×	А	EC-772
P0460	0460	FUEL LEV SEN SLOSH	_	2	×	A	EC-778
P0461	0461	FUEL LEVEL SENSOR	_	2	×	В	EC-779
P0462	0462	FUEL LEVL SEN/CIRC	_	2	×	В	EC-781
P0463	0463	FUEL LEVL SEN/CIRC	_	2	×	В	EC-781
P0500	0500	VEHICLE SPEED SEN A*6	_	2	×	В	EC-783 (M/T) EC-784 (CVT)
P0506	0506	ISC SYSTEM	_	2	×	В	EC-787
P0507	0507	ISC SYSTEM	_	2	×	В	EC-789
P050A	050A	COLD START CONTROL	_	2	×	A	EC-791
P050B	050B	COLD START CONTROL	<u> </u>	2	×	Α	EC-791
P050E	050E	COLD START CONTROL	_	2	×	Α	EC-791
P0603	0603	ECM BACK UP/CIRCUIT	 	2	×	В	EC-793
P0605	0605	ECM	_	1 or 2	× or —	В	EC-795
P0607	0607	ECM	_	1 (CVT) 2 (M/T)	× (CVT) — (M/T)	В	EC-797

< ECU DIAGNOSIS INFORMATION >

DT	C*1					Permanent	Defende
CONSULT GST*2	ECM*3	ltems (CONSULT screen terms)	SRT code	Trip	MIL	DTC group*4	Reference page
P0643	0643	SENSOR POWER/CIRC	_	1	×	В	EC-798
P0705	0705	T/M RANGE SENSOR A	_	2	×	В	TM-108
P0710	0710	FLUID TEMP SENSOR A*9	_	1	×	В	<u>TM-111</u>
P0715	0715	INPUT SPEED SENSOR A	_	2	×	В	<u>TM-115</u>
P0720	0720	OUTPUT SPEED SENSOR*6	_	2	×	В	<u>TM-118</u>
P0740	0740	TORQUE CONVERTER	_	2	×	В	TM-122
P0744	0744	TORQUE CONVERTER	_	2	×	В	TM-125
P0745	0745	PC SOLENOID A	_	2	×	В	TM-128
P0746	0746	PC SOLENOID A	_	1	×	В	TM-130
P0776	0776	PC SOLENOID B	_	2	×	В	TM-132
P0778	0778	PC SOLENOID B	_	2	×	В	TM-134
P0840	0840	FLUID PRESS SEN/SW A	_	2	×	В	TM-136
P0850	0850	P-N POS SW/CIRCUIT	_	2	×	В	EC-800
P1148	1148	CLOSED LOOP-B1	_	1	×	А	EC-803
P117A	117A	AIR FUEL RATIO B1	_	2	×	А	EC-804
P1212	1212	TCS/CIRC	_	2	_	_	EC-809
P1217	1217	ENG OVER TEMP	_	1	×	В	EC-810
P1225	1225	CTP LEARNING-B1	_	2	_	_	EC-814
P1226	1226	CTP LEARNING-B1	_	2	_	_	EC-816
P1550	1550	BAT CURRENT SENSOR	_	2	_	_	EC-818
P1551	1551	BAT CURRENT SENSOR	_	2	_	_	EC-822
P1552	1552	BAT CURRENT SENSOR	_	2		_	EC-822
P1553	1553	BAT CURRENT SENSOR	_	2		_	EC-826
P1554	1554	BAT CURRENT SENSOR	_	2		_	EC-830
P1564	1564	ASCD SW	_	1	-	_	EC-834
P1572	1572	ASCD BRAKE SW	_	1	_	_	EC-837
P1574	1574	ASCD VHL SPD SEN	_	1	_	_	EC-844
P1610	1610	LOCK MODE	_	2	_	_	SEC-34
P1611	1611	ID DISCORD, IMMU-ECM	_	2	_	_	SEC-35
P1612	1612	CHAIN OF ECM-IMMU	_	2	_	_	SEC-37
P1614	1614	CHAIN OF IMMU-KEY	_	2	_	_	SEC-6
P1615	1615	DIFFERENCE OF KEY	_	2	_	_	SEC-6
P1715	1715	IN PULY SPEED	_	2	_	_	EC-846
P1740	1740	SLCT SOLENOID	_	2	×	В	TM-153
P1777	1777	STEP MOTOR	_	1	×	В	TM-156
P1778	1778	STEP MOTOR	_	2	×	В	TM-159
P1805	1805	BRAKE SW/CIRCUIT	_	2	_	_	EC-848
P2004	2004	TUMBLE CONT/V	_	2	×	В	EC-851
P2014	2014	IN/MANIFOLD RUNNER POS SEN B1	_	2	×	В	EC-856
P2016	2016	IN/MANIFOLD RUNNER POS SEN B1	_	2	×	В	EC-856
P2017	2017	IN/MANIFOLD RUNNER POS SEN B1	_	2	×	В	EC-856
P2018	2018	IN/MANIFOLD RUNNER POS SEN B1	_	2	×	В	EC-856

DT	C*1	- Items				Permanent	Reference
CONSULT GST*2	ECM*3	(CONSULT screen terms)	SRT code	Trip	MIL	DTC group*4	page
P2096	2096	POST CAT FUEL TRIM SYS B1	_	2	×	А	EC-859
P2097	2097	POST CAT FUEL TRIM SYS B1	_	2	×	А	EC-859
P2100	2100	ETC MOT PWR-B1	_	1	×	В	EC-863
P2101	2101	ETC FNCTN/CIRC-B1	_	1	×	В	EC-866
P2103	2103	ETC MOT PWR	_	1	×	В	EC-863
P2118	2118	ETC MOT-B1	_	1	×	В	EC-870
P2119	2119	ETC ACTR-B1	_	1	×	В	EC-872
P2122	2122	APP SEN 1/CIRC	_	1	×	В	EC-874
P2123	2123	APP SEN 1/CIRC	_	1	×	В	EC-874
P2127	2127	APP SEN 2/CIRC	_	1	×	В	EC-877
P2128	2128	APP SEN 2/CIRC	_	1	×	В	EC-877
P2135	2135	TP SENSOR-B1	_	1	×	В	EC-881
P2138	2138	APP SENSOR	_	1	×	В	EC-884

^{*1: 1}st trip DTC No. is the same as DTC No.

Test Value and Test Limit

The following is the information specified in Service \$06 of SAE J1979/ISO 15031-5.

The test value is a parameter used to determine whether a system/circuit diagnostic test is OK or NG while being monitored by the ECM during self-diagnosis. The test limit is a reference value which is specified as the maximum or minimum value and is compared with the test value being monitored.

These data (test value and test limit) are specified by On Board Monitor ID (OBDMID), Test ID (TID), Unit and Scaling ID and can be displayed on the GST screen.

The items of the test value and test limit will be displayed with GST screen which items are provided by the ECM. (e.g., if bank 2 is not applied on this vehicle, only the items of bank 1 are displayed)

EC

Α

D

Е

M

Ν

Р

INFOID:0000000008843171

Revision: 2012 August

^{*2:} This number is prescribed by SAE J2012/ISO 15031-6.

^{*3:} In Diagnostic Test Mode II (Self-diagnostic results), this number is controlled by NISSAN.

^{*4:} Refer to EC-498, "Description", "PERMANENT DTC".

^{*5:} The troubleshooting for this DTC needs CONSULT.

^{*6:} When the fail-safe operations for both self-diagnoses occur, the MIL illuminates.

^{*7:} SRT code will not be set if the self-diagnostic result is NG.

^{*8:} When the ECM is in the mode that displays SRT status, MIL may flash. For the details, refer to EC-492, "Description".

^{*9:} When erasing this DTC, always use CONSULT or GST.

	OBD-			li	e and Test mit display)	
Item	MID	Self-diagnostic test item	DTC	TID	Unitand Scaling ID	Description
			P0131	83H	0BH	Minimum sensor output voltage for test cycle
			P0131	84H	0BH	Maximum sensor output voltage for test cycle
			P0130	85H	0BH	Minimum sensor output voltage for test cycle
			P0130	86H	0BH	Maximum sensor output voltage for test cycle
			P0133	87H	04H	Response rate: Response ratio (lean to rich)
			P0133	88H	04H	Response rate: Response ratio (rich to lean)
			P2096	89H	84H	The amount of shift in air fuel ratio
			P2097	8AH	84H	The amount of shift in air fuel ratio
		A: (. 1 (. (A / E)	P0130	8BH	0BH	Difference in sensor output voltage
	01H	Air fuel ratio (A/F) sensor 1 (Bank 1)	P0133	8CH	83H	Response gain at the limited frequency
			P014C	8DH	04H	O2 sensor slow response - Rich to lean bank 1 sensor 1
			P014C	8EH	04H	O2 sensor slow response - Rich to lean bank 1 sensor 1
			P014D	8FH	84H	O2 sensor slow response - Lean to rich bank 1 sensor 1
HO2S			P014D	90H	84H	O2 sensor slow response - Lean to rich bank 1 sensor 1
			P015A	91H	01H	O2 sensor delayed response - Rich to lean bank 1 sensor 1
			P015A	92H	01H	O2 sensor delayed response - Rich to lean bank 1 sensor 1
			P015B	93H	01H	O2 sensor delayed response - Lean to rich bank 1 sensor 1
			P015B	94H	01H	O2 sensor delayed response - Lean to rich bank 1 sensor 1
			P0138	07H	0CH	Minimum sensor output voltage for test cycle
	221	Heated oxygen sensor 2	P0137	08H	0CH	Maximum sensor output voltage for test cycle
	02H	(Bank 1)	P0138	80H	0CH	Sensor output voltage
			P0139	81H	0CH	Difference in sensor output voltage
			P0139	82H	11H	Rear O2 sensor delay response diagnosis
			P0143	07H	0СН	Minimum sensor output voltage for test cycle
	03H	Heated oxygen sensor 3 (Bank 1)	P0144	08H	0CH	Maximum sensor output voltage for test cycle
		(Dank I)	P0146	80H	0CH	Sensor output voltage
			P0145	81H	0CH	Difference in sensor output voltage

				li	e and Test mit	
Item	OBD-	Self-diagnostic test item	DTC	(GST	display)	Description
	MID	,		TID	Unitand Scaling ID	·
			P0151	83H	0BH	Minimum sensor output voltage for test cycle
			P0151	84H	0BH	Maximum sensor output voltage for test cycle
			P0150	85H	0BH	Minimum sensor output voltage for test cycle
			P0150	86H	0BH	Maximum sensor output voltage for test cycle
			P0153	87H	04H	Response rate: Response ratio (lean to rich)
			P0153	88H	04H	Response rate: Response ratio (rich to lean)
			P2098	89H	84H	The amount of shift in air fuel ratio
		Air fuel ratio (A/F) sensor 1 (Bank 2)	P2099	8AH	84H	The amount of shift in air fuel ratio
			P0150	8BH	0BH	Difference in sensor output voltage
	05H		P0153	8CH	83H	Response gain at the limited frequency
			P014E	8DH	04H	O2 sensor slow response - Rich to lean bank 2 sensor 1
			P014E	8EH	04H	O2 sensor slow response - Rich to lean bank 2 sensor 1
			P014F	8FH	84H	O2 sensor slow response - Lean to rich bank 2 sensor 1
HO2S			P014F	90H	84H	O2 sensor slow response - Lean to rich bank 2 sensor 1
			P015C	91H	01H	O2 sensor delayed response - Rich to lean bank 2 sensor 1
			P015C	92H	01H	O2 sensor delayed response - Rich to lean bank 2 sensor 1
			P015D	93H	01H	O2 sensor delayed response - Lean to rich bank 2 sensor 1
			P015D	94H	01H	O2 sensor delayed response - Lean to rich bank 2 sensor 1
			P0158	07H	0CH	Minimum sensor output voltage for test cycle
		Heated oxygen sensor 2	P0157	08H	0CH	Maximum sensor output voltage for test cycle
	06H	(Bank 2)	P0158	80H	0CH	Sensor output voltage
			P0159	81H	0CH	Difference in sensor output voltage
			P0159	82H	11H	Rear O2 sensor delay response diagnosis
			P0163	07H	0CH	Minimum sensor output voltage for test cycle
	07H	Heated oxygen sensor 3 (Bank2)	P0164	08H	0CH	Maximum sensor output voltage for test cycle
		,	P0166	80H	0CH	Sensor output voltage
			P0165	81H	0CH	Difference in sensor output voltage

Item	OBD-	Self-diagnostic test item	DTC	li	e and Test mit display)	Description	
пеш	MID			TID	Unitand Scaling ID	Description	
			P0420	80H	01H	O2 storage index	
CATA- LYST	21H	Three way catalyst function	P0420	82H	01H	Switching time lag engine exhaust in dex value	
	2111	(Bank1)	P2423	83H	0CH	Difference in 3rd O2 sensor output voltage	
			P2423	84H	84H	O2 storage index in HC trap catalyst	
		Three way catalyst function (Bank2)	P0430	80H	01H	O2 storage index	
	22H		P0430	82H	01H	Switching time lag engine exhaust in dex value	
	22П		P2424	83H	0CH	Difference in 3rd O2 sensor output voltage	
			P2424	84H	84H	O2 storage index in HC trap catalyst	
			P0400	80H	96H	Low flow faults: EGR temp change rat (short term)	
			P0400	81H	96H	Low flow faults: EGR temp change rat (long term)	
EGR SYSTEM	31H	H EGR function	P0400	82H	96H	Low flow faults: Difference between max EGR temp and EGR temp unde idling condition	
			P0400	83H	96H	Low flow faults: Max EGR temp	
			P1402	84H	96H	High Flow Faults: EGR temp increas rate	

	OBD-			lii	e and Test mit display)	
Item	MID	Self-diagnostic test item	DTC	TID	Unitand Scaling ID	Description
			P0011	80H	9DH	VTC intake function diagnosis (VTC alignment check diagnosis)
			P0014	81H	9DH	VTC exhaust function diagnosis (VTC alignment check diagnosis)
			P0011	82H	9DH	VTC intake function diagnosis (VTC drive failure diagnosis)
	35H	VVT Monitor (Bank1)	P0014	83H	9DH	VTC exhaust function diagnosis (VTC drive failure diagnosis)
	3311	VVI MONITO (Banki)	P100A	84H	10H	VEL slow response diagnosis
			P1090	85H	10H	VEL servo system diagnosis
			P0011	86H	9DH	VTC intake intermediate lock function diagnosis (VTC intermediate position alignment check diagnosis)
VVT SYSTEM			Advanced: P052A Retarded: P052B	87H	9DH	VTC intake intermediate lock system diagnosis (VTC intermediate lock position check diagnosis)
		VVT Monitor (Bank2)	P0021	80H	9DH	VTC intake function diagnosis (VTC alignment check diagnosis)
			P0024	81H	9DH	VTC exhaust function diagnosis (VTC alignment check diagnosis)
			P0021	82H	9DH	VTC intake function diagnosis (VTC drive failure diagnosis)
	36H		P0024	83H	9DH	VTC exhaust function diagnosis (VTC drive failure diagnosis)
	3011		P100B	84H	10H	VEL slow response diagnosis
			P1093	85H	10H	VEL servo system diagnosis
			P0021	86H	9DH	VTC intake intermediate lock function diagnosis (VTC intermediate position alignment check diagnosis)
			Advanced: P052C Retarded: P052D	87H	9DH	VTC intake intermediate lock system diagnosis (VTC intermediate lock position check diagnosis)
	39H	EVAP control system leak (Cap Off)	P0455	80H	0CH	Difference in pressure sensor output voltage before and after pull down
	звн	EVAP control system leak (Small leak)	P0442	80H	05H	Leak area index (for more than 0.04 inch)
EVAP			P0456	80H	05H	Leak area index (for more than 0.02 inch)
SYSTEM	зсн	EVAP control system leak (Very small leak)	P0456	81H	FDH	Maximum internal pressure of EVAP system during monitoring
			P0456	82H	FDH	Internal pressure of EVAP system at the end of monitoring
	3DH	Purge flow system	P0441	83H	0CH	Difference in pressure sensor output voltage before and after vent control valve close

ltoro	OBD-	Self-diagnostic test item	DTC	liı	e and Test mit display)	Deceriation
Item	MID	Gen-diagnostic test nem	DTC	TID	Unitand Scaling ID	Description
	41H	A/F sensor 1 heater (Bank 1)	Low Input: P0031 High Input: P0032	81H	0BH	Converted value of heater electric cur rent to voltage
	42H	Heated oxygen sensor 2 heater (Bank 1)	Low Input: P0037 High Input: P0038	80H	0CH	Converted value of heater electric current to voltage
O2 SEN-	43H	Heated oxygen sensor 3 heater (Bank 1)	P0043	80H	0CH	Converted value of heater electric cur rent to voltage
SOR HEATER	45H	A/F sensor 1 heater (Bank 2)	Low Input: P0051 High Input: P0052	81H	0BH	Converted value of heater electric cur rent to voltage
	46H	Heated oxygen sensor 2 heater (Bank 2)	Low Input: P0057 High Input: P0058	80H	0CH	Converted value of heater electric cur rent to voltage
	47H	Heated oxygen sensor 3 heater (Bank 2)	P0063	80H	0CH	Converted value of heater electric cur rent to voltage
	71H	Secondary air system	P0411	80H	01H	Secondary air injection system incorrect flow detected
			Bank1: P0491 Bank2: P0492	81H	01H	Secondary air injection system insufficient flow
			P2445	82H	01H	Secondary air injection system pump stuck off
SEC- OND- ARY AIR			P2448	83H	01H	Secondary air injection system high airflow
			Bank1: P2440 Bank2: P2442	84H	01H	Secondary air injection system switch ing valve stuck open
			P2440	85H	01H	Secondary air injection system switch ing valve stuck open
			P2444	86H	01H	Secondary air injection system pump stuck on
			P0171 or P0172	80H	2FH	Long term fuel trim
	81H	Fuel injection system function (Bank 1)	P0171 or P0172	81H	24H	The number of lambda control clamped
FUEL			P117A	82H	03H	Cylinder A/F imbalance monitoring
SYSTEM			P0174 or P0175	80H	2FH	Long term fuel trim
	82H	Fuel injection system function (Bank 2)	P0174 or P0175	81H	24H	The number of lambda control clamped
			P117B	82H	03H	Cylinder A/F imbalance monitoring

lto	OBD-	Self-diagnostic test item	DTC	li	e and Test mit display)	Description
Item	MID	Self-diagnostic test item	DTC	TID	Unitand Scaling ID	Description
			P0301	80H	24H	Misfiring counter at 1000 revolution of the first cylinder
			P0302	81H	24H	Misfiring counter at 1000 revolution of the second cylinder
			P0303	82H	24H	Misfiring counter at 1000 revolution of the third cylinder
			P0304	83H	24H	Misfiring counter at 1000 revolution of the fourth cylinder
			P0305	84H	24H	Misfiring counter at 1000 revolution of the fifth cylinder
			P0306	85H	24H	Misfiring counter at 1000 revolution of the sixth cylinder
			P0307	86H	24H	Misfiring counter at 1000 revolution of the seventh cylinder
			P0308	87H	24H	Misfiring counter at 1000 revolution of the eighth cylinder
		.1H Multiple cylinder misfires	P0300	88H	24H	Misfiring counter at 1000 revolution of the multiple cylinders
MISFIRE	Λ1 ⊔		P0301	89H	24H	Misfiring counter at 200 revolution of the first cylinder
WIGI IKE	AIII		P0302	8AH	24H	Misfiring counter at 200 revolution of the second cylinder
			P0303	8BH	24H	Misfiring counter at 200 revolution of the third cylinder
			P0304	8CH	24H	Misfiring counter at 200 revolution of the fourth cylinder
			P0305	8DH	24H	Misfiring counter at 200 revolution of the fifth cylinder
			P0306	8EH	24H	Misfiring counter at 200 revolution of the sixth cylinder
			P0307	8FH	24H	Misfiring counter at 200 revolution of the seventh cylinder
			P0308	90H	24H	Misfiring counter at 200 revolution of the eighth cylinder
			P0300	91H	24H	Misfiring counter at 1000 revolution of the single cylinder
			P0300	92H	24H	Misfiring counter at 200 revolution of the single cylinder
			P0300	93H	24H	Misfiring counter at 200 revolution of the multiple cylinders

					e and Test mit	
Item	OBD-	Self-diagnostic test item	DTC		display)	Description
no	MID		510	TID	Unitand Scaling ID	Boothpaten
	A2H	No. 1 cylinder misfire	P0301	0BH	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
		·	P0301	0CH	24H	Misfire counts for last/current driving cycles
	АЗН	No. 2 cylinder misfire	P0302	ОВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
		,	P0302	0CH	24H	Misfire counts for last/current driving cycles
	A4H	No. 3 cylinder misfire	P0303	ОВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
			P0303	0CH	24H	Misfire counts for last/current driving cycles
	A5H	No. 4 cylinder misfire	P0304	0BH	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
MICEIDE			P0304	0CH	24H	Misfire counts for last/current driving cycles
MISFIRE	A6H	No. 5 cylinder misfire	P0305	0BH	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
			P0305	0CH	24H	Misfire counts for last/current driving cycles
	A7H	No. 6 cylinder misfire	P0306	ОВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
			P0306	0CH	24H	Misfire counts for last/current driving cycles
	A8H	No. 7 cylinder misfire	P0307	ОВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
		,	P0307	0CH	24H	Misfire counts for last/current driving cycles
	А9Н	No. 8 cylinder misfire	P0308	ОВН	24H	EWMA (Exponential Weighted Moving Average) misfire counts for last 10 driving cycles
			P0308	0CH	24H	Misfire counts for last/current driving cycles

ENGINE CONTROL SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

Α

SYMPTOM DIAGNOSIS

ENGINE CONTROL SYSTEM SYMPTOMS

Symptom Table EC

SYSTEM — BASIC ENGINE CONTROL SYSTEM

		SYMPTOM										С				
		HA)				NOIL					E HIGH					D
		(EXCP.		FLAT SPOT	ATION	RACCELERATION				IDLE	TEMPERATURE	SUMPTION	CONSUMPTION	R CHARGE)		Е
		START/RESTART	71	SURGING/	K/DETON/	POWER/POOR	OW IDLE	/HUNTING	ATION	TURN TO	WATER TE	FUEL CON		AD (UNDEF	Reference page	F
		HARD/NO ST	ENGINE STALL	HESITATION/SURGING/FLAT	SPARK KNOCK/DETONATION	LACK OF PO	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL	BATTERY DEAD (UNDER CHARGE)		G
Warrant	y symptom code	AA	AB	AC	AD	AE	AF	AG	АН	AJ	AK	AL	AM	НА		Н
Fuel	Fuel pump circuit	1	1	2	3	2		2	2			3		2	EC-900	
	Fuel pressure regulator system	3	3	4	4	4	4	4	4	4		4			EC-961	
	Fuel injector circuit	1	1	2	3	2		2	2			2			EC-897	
	Evaporative emission system	3	3	4	4	4	4	4	4	4		4			EC-551	
Air	Positive crankcase ventilation system	3	3	4	4	4	4	4	4	4		4	1		EC-915	J
	Incorrect idle speed adjustment						1	1	1	1		1			EC-486	K
	Electric throttle control actuator	1	1	2	3	3	2	2	2	2		2		2	EC-866 EC-870	
Ignition	Incorrect ignition timing adjustment	3	3	1	1	1		1	1			1			EC-487	L
	Ignition circuit	1	1	2	2	2		2	2			2			EC-903	
Main po	wer supply and ground circuit	2	2	3	3	3		3	3		2	3			EC-605	
Mass ai	r flow sensor circuit	1			2										EC-623 EC-628	M
Engine	coolant temperature sensor circuit	•					3			3					EC-637 EC-640	Ν
Air fuel ratio (A/F) sensor 1 circuit			1	2	3	2		2	2			2			EC-654 EC-658 EC-661 EC-684 EC-859	0
Throttle	position sensor circuit						2			2					EC-643 EC-711 EC-814 EC-816 EC-881	Р
Accelera	ator pedal position sensor circuit			3	2	1									EC-874 EC-877 EC-884	
Knock s	ensor circuit			2								3			EC-720	

Revision: 2012 August EC-949 2013 CUBE

		SYMPTOM												
	HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	Reference page
Warranty symptom code	AA	AB	AC	AD	AE	AF	AG	АН	AJ	AK	AL	AM	НА	
Crankshaft position sensor (POS) circuit	2	2												EC-722
Camshaft position sensor (PHASE) circuit	3	2												EC-726
Vehicle speed signal circuit		2	3		3						3			EC-783
ECM	2	2	3	3	3	3	3	3	3	3	3			EC-795 EC-797
Intake valve timing control solenoid valve circuit		3	2		1	3	2	2	3		3			EC-610
transmission range switch circuit			3		3		3	3			3			EC-800
PNP switch circuit			3		3		3	3			3			EC-800
Refrigerant pressure sensor circuit		2				3			3		4			EC-916
Electrical load signal circuit							3							EC-895
Tumble control valve motor					4	4								EC-851
Tumble control valve position sensor					4	4								EC-856
Air conditioner circuit	2	2	3	3	3	3	3	3	3		3		2	HAC-103 HAC-209
ABS actuator and electric unit (control unit)			4											BRC-93

^{1 - 6:} The numbers refer to the order of inspection. (continued on next table)

SYSTEM — ENGINE MECHANICAL & OTHER

ENGINE CONTROL SYSTEM SYMPTOMS

							S'	YMPT	ОМ							А
		P. HA)		TC		ERATION					URE HIGH	N)E)		EC
		HARD/NO START/RESTART (EXCP. HA)		HESITATION/SURGING/FLAT SPOT	NATION	LACK OF POWER/POOR ACCELERATION		ð		O IDLE	TEMPERATURE	CONSUMPTION	OIL CONSUMPTION	DEAD (UNDER CHARGE)		С
		START/RE	TALL	ON/SURGIN	SPARK KNOCK/DETONATION	POWER/PC	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	BRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER	FUEL	/E OIL CON	DEAD (UNI	Reference page	D
		HARD/NO	ENGINE STALL	HESITATION	SPARK KN	LACK OF	HIGH IDLE	ROUGHID	IDLING VIBRATION	SLOW/NO	OVERHEA	EXCESSIVE	EXCESSIVE	BATTERY		Е
Warranty	symptom code	A A	AB	AC	AD	AE	AF	AG	АН	AJ	AK	AL	AM	НА		F
Fuel	Fuel tank	_													FL-13	
	Fuel piping	5		5	5	5		5	5			5			<u>FL-4</u>	G
	Vapor lock		5												_	
	Valve deposit														_	Н
	Poor fuel (Heavy weight gasoline, Low octane)	5		5	5	5		5	5			5			_	П
Air	Air duct															ı
	Air cleaner														EM 45	1
	Air leakage from air duct (Mass air flow sensor — electric throttle control actuator)		5	5		5		5	5			5			<u>EM-15</u>	J
	Electric throttle control actuator	5			5		5			5					EM-26	K
	Air leakage from intake mani- fold/Collector/Gasket															
Cranking	Battery	1	1	1		1		1	1					1	PG-3	L
	Generator circuit	•	·	•											CHG-9	
	Starter circuit	3										1			STR-2 STR-5	M
	Signal plate	6													<u>EM-88</u>	
	Transmission range switch	4													TM-108 (CVT)	
	PNP switch	4													<u>TM-8</u> (M/T)	Ν
Engine	Cylinder head	5	5	5	5	5		5	5			5			<u>EM-67</u>	
	Cylinder head gasket										4		3			0
	Cylinder block	-														
	Piston												4			_
	Piston ring	6	6	6	6	6		6	6			6			<u>EM-88</u>	Р
	Connecting rod Bearing	-														
	Crankshaft															

							S'	YMPT	ОМ						
		HARD/NO START/RESTART (EXCP. HA)	ENGINE STALL	HESITATION/SURGING/FLAT SPOT	SPARK KNOCK/DETONATION	LACK OF POWER/POOR ACCELERATION	HIGH IDLE/LOW IDLE	ROUGH IDLE/HUNTING	IDLING VIBRATION	SLOW/NO RETURN TO IDLE	OVERHEATS/WATER TEMPERATURE HIGH	EXCESSIVE FUEL CONSUMPTION	EXCESSIVE OIL CONSUMPTION	BATTERY DEAD (UNDER CHARGE)	Reference page
Warranty	symptom code	A A	AB	AC	AD	AE	AF	AG	АН	AJ	AK	AL	AM	НА	
Valve	Timing chain														<u>EM-44</u>
mecha-	Camshaft														<u>EM-55</u>
nism	Intake valve timing control	5	5	5	5	5		5	5			5			<u>EM-44</u>
	Intake valve												_		
	Exhaust valve												3		<u>EM-67</u>
Exhaust	Exhaust manifold/Tube/Muf- fler/Gasket	5	5	5	5	5		5	5			5			<u>EM-30</u> <u>EX-4</u>
	Three way catalyst														<u>EX-4</u>
Lubrica- tion	Oil pan/Oil strainer/Oil pump/ Oil filter/Oil gallery/Oil cooler	5	5	5	5	5		5	5			5			<u>EM-34</u> <u>LU-7</u> <u>LU-11</u>
	Oil level (Low)/Filthy oil														<u>LU-7</u>
Cooling	Radiator/Hose/Radiator filler cap														CO-13 CO-13
	Thermostat									5					<u>CO-22</u>
	Water pump	5	5	5	5	5		5	5		4	5			<u>CO-20</u>
	Water gallery	5	5	5	5	5		5	5		4	5			<u>CO-2</u>
	Cooling fan														EC-893
	Coolant level (Low)/Contami- nated coolant									5					<u>CO-2</u>
NVIS (NIS tem — NA	SSAN Vehicle Immobilizer Sys- ATS)	1	1												<u>SEC-16</u>

^{1 - 6:} The numbers refer to the order of inspection.

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[MR18DE (FOR CALIFORNIA)]

NORMAL OPERATING CONDITION

Description INFOID:0000000008451405

FUEL CUT CONTROL (AT NO LOAD AND HIGH ENGINE SPEED)

If the engine speed is above 2,500 rpm under no load (for example, the selector lever position is neutral and engine speed is over 2,500 rpm) fuel will be cut off after some time. The exact time when the fuel is cut off varies based on engine speed.

Fuel cut will be operated until the engine speed reaches 2,000 rpm, then fuel cut will be cancelled. **NOTE:**

This function is different from deceleration control listed under Multiport Fuel Injection (MFI) System, <u>EC-511</u>. "System Description".

EC

Α

С

D

Е

F

Н

I

K

L

M

Ν

0

Р

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS


WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the
 ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with
 a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing
 serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

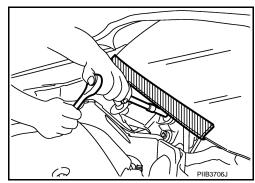

On Board Diagnosis (OBD) System of Engine and CVT

INFOID:0000000008451408

INFOID:0000000008451407

The ECM has an on board diagnostic system. It will light up the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.


CAUTION:

- Be sure to turn the ignition switch OFF and disconnect the negative battery cable before any repair
 or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will
 cause the MIL to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will
 cause the MIL to light up due to the open circuit. (Be sure the connector is free from water, grease,
 dirt, bent terminals, etc.)

- Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to PG-85, "Description".
- Be sure to route and secure the harnesses properly after work. The interference of the harness with a bracket, etc. may cause the MIL to light up due to the short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to light up due to the malfunction of the EVAP system or fuel injection system,
- Be sure to erase the unnecessary malfunction information (repairs completed) from the ECM and TCM (Transmission control module) before returning the vehicle to the customer.

General Precautions


- Always use a 12 volt battery as power source.
- Do not attempt to disconnect battery cables while engine is running.
- Before connecting or disconnecting the ECM harness connector, turn ignition switch OFF and disconnect negative battery cable. Failure to do so may damage the ECM because battery voltage is applied to ECM even if ignition switch is turned OFF.
- Before removing parts, turn ignition switch OFF and then disconnect negative battery cable.

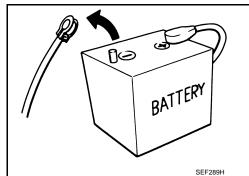


- Do not disassemble ECM.
- If a battery cable is disconnected, the memory will return to the ECM value.

The ECM will now start to self-control at its initial value. Thus, engine operation can vary slightly in this case. However, this is not an indication of a malfunction. Do not replace parts because of a slight variation.

- If the battery is disconnected, the following emission-related diagnostic information will be cleared within 24 hours.
- Diagnostic trouble codes
- 1st trip diagnostic trouble codes
- Freeze frame data
- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values
- When connecting ECM harness connector (1), fasten (B) it securely with a lever as far as it will go as shown in the figure.
 - **ECM** 2.
 - Α. Loosen

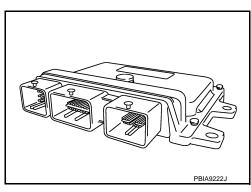

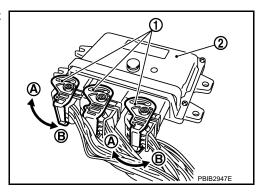

EC

D

INFOID:0000000008451409


Е


M


N


< PRECAUTION >

- When connecting or disconnecting pin connectors into or from ECM, take care not to damage pin terminals (bend or break).
 - Make sure that there are not any bends or breaks on ECM pin terminal, when connecting pin connectors.
- Securely connect ECM harness connectors.
 A poor connection can cause an extremely high (surge) voltage to develop in coil and condenser, thus resulting in damage to ICs.
- Keep engine control system harness at least 10 cm (4 in) away from adjacent harness, to prevent engine control system malfunctions due to receiving external noise, degraded operation of ICs, etc.
- Keep engine control system parts and harness dry.
- Before replacing ECM, perform ECM Terminals and Reference Value inspection and make sure ECM functions properly. Refer to <u>EC-918</u>, "<u>Reference Value</u>".
- Handle mass air flow sensor carefully to avoid damage.
- Do not clean mass air flow sensor with any type of detergent.
- Do not disassemble electric throttle control actuator.
- Even a slight leak in the air intake system can cause serious incidents.
- Do not shock or jar the camshaft position sensor (PHASE), crankshaft position sensor (POS).

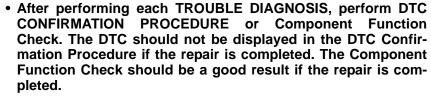


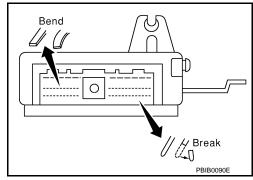

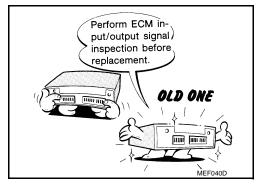


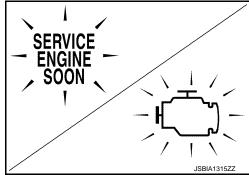


 When measuring ECM signals with a circuit tester, never allow the two tester probes to contact.
 Accidental contact of probes will cause a short circuit and damage the ECM power transistor.

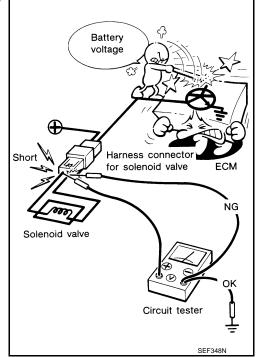

- Do not operate fuel pump when there is no fuel in lines.
- Tighten fuel hose clamps to the specified torque.
- Fuel level sensor unit and fuel pump (1)
- Fuel pressure regulator (2)
- Fuel level sensor (3)
- Fuel tank temperature sensor (4)

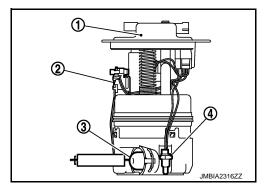

- Do not depress accelerator pedal when starting.
- Immediately after starting, do not rev up engine unnecessarily.
- Do not rev up engine just prior to shutdown.

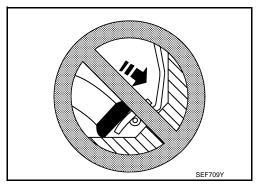

Α

EC

C

D

Е

F

Н

I

J

K

L

M

Ν


0

Р

PRECAUTIONS

< PRECAUTION >

- When installing C.B. ham radio or a mobile phone, be sure to observe the following as it may adversely affect electronic control systems depending on installation location.
- Keep the antenna as far as possible from the electronic control units.
- Keep the antenna feeder line more than 20 cm (8 in) away from the harness of electronic controls.
 Do not let them run parallel for a long distance.
- Adjust the antenna and feeder line so that the standing-wave ratio can be kept smaller.
- Be sure to ground the radio to vehicle body.

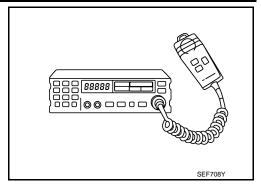

PREPARATION

PREPARATION

Special Service Tools

INFOID:0000000008451410

Α

EC

C

D

Е

F

Н

Κ

NOTE:

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

Tool number (Kent-Moore No.) Tool name		Description
(J-44321) Fuel pressure gauge kit	LEC642	Checks fuel pressure
(J-44321-6) Fuel pressure adapter	LBIA0376E	Connects fuel pressure gauge to quick connector type fuel lines.
KV10118400 Fuel tube adapter	PBIB3043E	Measures fuel pressure

Commercial Service Tools

INFOID:0000000008451411

Tool name (Kent-Moore No.)		Description	
Leak detector		Locates the EVAP leak	- 11
i.e.: (J-41416)			١
	S-NT703		(
EVAP service port		Applies positive pressure through EVAP service	_
adapter i.e.: (J-41413-OBD)		port	F
	S-NT704		

PREPARATION

< PREPARATION >

Tool name (Kent-Moore No.)		Description
Fuel filler cap adapter i.e.: (MLR-8382)		Checks fuel tank vacuum relief valve opening pressure
	S-NT815	
Socket wrench	19 mm (0.75 in) More than 32 mm (1.26 in)	Removes and installs engine coolant temperature sensor
Oxygen sensor thread cleaner i.e.: (J-43897-18) (J-43897-12)	Mating surface shave cylinder	Reconditions the exhaust system threads before installing a new oxygen sensor. Use with antiseize lubricant shown below. a: 18 mm diameter with pitch 1.5 mm for Zirconia Oxygen Sensor b: 12 mm diameter with pitch 1.25 mm for Titania Oxygen Sensor
Anti-seize lubricant i.e.: (Permatex TM 133AR or equivalent meeting MIL specifica- tion MIL-A-907)	S-N1779	Lubricates oxygen sensor thread cleaning tool when reconditioning exhaust system threads.

PERIODIC MAINTENANCE

FUEL PRESSURE

Inspection INFOID:0000000008451412

EC

Α

FUEL PRESSURE RELEASE

(P) With CONSULT

- 1. Turn ignition switch ON.
- 2. Perform "FUEL PRESSURE RELEASE" in "WORK SUPPORT" mode with CONSULT.
- 3. Start engine.
- 4. After engine stalls, crank it two or three times to release all fuel pressure.
- Turn ignition switch OFF.

(R) Without CONSULT

- 1. Remove fuel pump fuse located in IPDM E/R.
- Start engine.
- 3. After engine stalls, crank it two or three times to release all fuel pressure.
- 4. Turn ignition switch OFF.
- Reinstall fuel pump fuse after servicing fuel system.


FUEL PRESSURE CHECK

CAUTION:

Before disconnecting fuel line, release fuel pressure from fuel line to eliminate danger.

NOTE:

- Prepare pans or saucers under the disconnected fuel line because the fuel may spill out. The fuel pressure cannot be completely released because C11 models do not have fuel return system.
- The fuel hose connection method used when taking fuel pressure check must not be used for other purposes.
- Be careful not to scratch or put debris around connection area when servicing, so that the quick connector maintains seal ability with O-rings inside.
- Do not perform fuel pressure check with electrical systems operating (i.e. lights, rear defogger, A/C, etc.) Fuel pressure gauge may indicate false readings due to varying engine load and changes in manifold vacuum.
- Release fuel pressure to zero. Refer to "FUEL PRESSURE RELEASE".
- 2. Prepare fuel hose for fuel pressure check B and fuel tube adapter (KV10118400) D, then connect fuel pressure gauge A.
 - <: To quick connector
 - **(=:** To fuel tube (engine side)
 - C: Clamp
 - Use suitable fuel hose for fuel pressure check (genuine NIS-SAN fuel hose without quick connector).
 - To avoid unnecessary force or tension to hose, use moderately long fuel hose for fuel pressure check.
 - Do not use the fuel hose for checking fuel pressure with damage or cracks on it.
 - Use Pressure Gauge to check fuel pressure.
- 3. Remove fuel hose. Refer to EM-37, "Removal and Installation".
 - Do not twist or kink fuel hose because it is plastic hose.

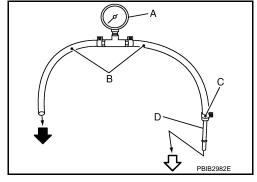

EC-961 2013 CUBE Revision: 2012 August

Е

Н

L

M

N

FUEL PRESSURE

[MR18DE (FOR CALIFORNIA)]

1 - 2 mm

(0.04 - 0.08 in)

PBIB2983E

< PERIODIC MAINTENANCE >

- Connect fuel hose for fuel pressure check (1) to fuel tube (engine side) with clamp (2) as shown in the figure.
 - No.2 spool (5)
 - Wipe off oil or dirt from hose insertion part using cloth moistened with gasoline.
 - Apply proper amount of gasoline between top of the fuel tube (3) and No.1 spool (4).
 - Insert fuel hose for fuel pressure check until it touches the No.1 spool on fuel tube.
 - Use NISSAN genuine hose clamp (part number: 16439 N4710 or 16439 40U00).
 - When reconnecting fuel line, always use new clamps.
 - Use a torque driver to tighten clamps.
 - Install hose clamp to the position within 1 2 mm (0.04 0.08 in).

Tightening torque: 1 - 1.5 N·m (0.1 - 0.15 kg-m, 9 - 13 in-lb)

- Make sure that clamp screw does not contact adjacent parts.
- Connect fuel tube adapter to quick connector.
 - A: Fuel pressure gauge
 - B: Fuel hose for fuel pressure check
- 6. After connecting fuel hose for fuel pressure check, pull the hose with a force of approximately 98 N (10 kg, 22 lb) to confirm fuel tube does not come off.
- 7. Turn ignition switch ON and check for fuel leakage.
- 8. Start engine and check for fuel leakage.
- 9. Read the indication of fuel pressure gauge.
 - · Do not perform fuel pressure check with system operating. Fuel pressure gauge may indicate false readings.
 - During fuel pressure check, confirm for fuel leakage from fuel connection every 3 minutes.

At idling: Approximately 350 kPa (3.57 kg/cm², 51 psi)

- 10. If result is unsatisfactory, go to next step.
- 11. Check the following.
 - Fuel hoses and fuel tubes for clogging
 - · Fuel filter for clogging
 - Fuel pump
 - Fuel pressure regulator for clogging

If OK, replace fuel pressure regulator.

If NG, repair or replace.

12. Before disconnecting Fuel Pressure Gauge and Fuel Pressure Adapter J-44321-6, release fuel pressure to zero. Refer to "FUEL PRESSURE RELEASE".

EVAP LEAK CHECK


Inspection INFOID:0000000008451413


CAUTION:

- Do not use compressed air or a high pressure pump.
- Do not exceed 4.12 kPa (0.042 kg/cm², 0.6 psi) of pressure in EVAP system. NOTE:
- Do not start engine.
- Improper installation of EVAP service port adapter [commercial service tool: (J-41413-OBD)] to the EVAP service port may cause a leak.


(P) WITH CONSULT

- Install EVAP service port adapter [commercial service tool: (J-41413-OBD)] and pressure pump to EVAP service port.
- 2. Turn ignition switch ON.
- 3. Select the "EVAP SYSTEM CLOSE" of "WORK SUPPORT" mode with CONSULT.
- 4. Touch "START". A bar graph (Pressure indicating display) will appear on the screen.
- 5. Apply positive pressure to the EVAP system until the pressure indicator reaches the middle of the bar graph.
- Remove EVAP service port adapter [commercial service tool: (J-41413-OBD)] and hose with pressure pump.
- Locate the leak using a leak detector [commercial service tool: (J-41416)]. Refer to <u>EC-551</u>, "System Description".

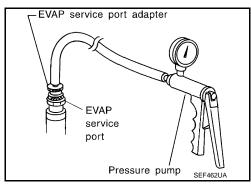

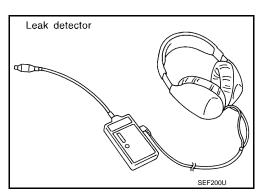

- 1. Install EVAP service port adapter [commercial service tool: (J-41413-OBD)] and pressure pump to EVAP service port.
- 2. Apply battery voltage between the terminals of EVAP canister vent control valve to make a closed EVAP system.
- 3. To locate the leak, deliver positive pressure to the EVAP system until pressure gauge points reach 1.38 to 2.76 kPa (0.014 to 0.028 kg/cm², 0.2 to 0.4 psi).
- Remove EVAP service port adapter [commercial service tool: (J-41413-OBD)] and hose with pressure pump.

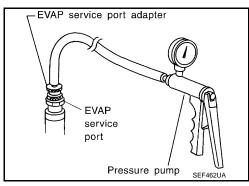

EC

Α

D

Е

F

Н

ı

J

K

L

M

Ν

0


Ρ

EVAP LEAK CHECK

< PERIODIC MAINTENANCE >

[MR18DE (FOR CALIFORNIA)]

5. Locate the leak using a leak detector [commercial service tool: (J-41416)]. Refer to <u>EC-551</u>, "System Description".

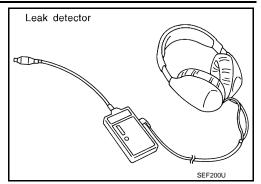

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[MR18DE (FOR CALIFORNIA)]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Idle Speed INFOID:0000000008451414 EC

Transmission	Condition	Specification
CVT	No load* (in P or N position)	700 ± 50 rpm
M/T	No load* (in Neutral position)	700 ± 50 rpm

^{*:} Under the following conditions

- · A/C switch: OFF
- · Electric load: OFF (Lights, heater fan & rear window defogger)
- · Steering wheel: Kept in straight-ahead position

Ignition Timing

Condition Transmission Specification

CVT No load* (in P or N position) $13 \pm 5^{\circ}BTDC$ No load* (in Neutral position) 13 ± 5°BTDC

- · A/C switch: OFF
- · Electric load: OFF (Lights, heater fan & rear window defogger)
- · Steering wheel: Kept in straight-ahead position

Calculated Load Value

Condition Specification (Using CONSULT or GST) At idle 10 - 35 %At 2,500 rpm 10 - 35 %

Mass Air Flow Sensor

Supply voltage Battery voltage (11 - 14 V) 0.9 - 1.3V*Output voltage at idle 1.0 - 4.0 g/sec at idle* Mass air flow (Using CONSULT or GST) 2.0 - 10.0 g/sec at 2,500 rpm*

Α

D

Е

Н

INFOID:0000000008451416

INFOID:0000000008451417

INFOID:0000000008451415

Ν

M

Р

^{*:} Under the following conditions

^{*:} Engine is warmed up to normal operating temperature and running under no load.