

# FSU

## SECTION FRONT SUSPENSION

A  
B  
C  
D

### CONTENTS

FSU

<b>PRECAUTION</b>	2	<b>UNIT REMOVAL AND INSTALLATION</b>	14
<b>PRECAUTIONS</b>	2	<b>COIL SPRING AND SHOCK ABSORBER</b>	14
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	Removal and Installation	14
Precaution for Front Suspension	2	Disposal	14
<b>PREPARATION</b>	3	<b>STABILIZER BAR</b>	15
<b>PREPARATION</b>	3	Removal and Installation	15
Special Service Tool	3	<b>UPPER LINK</b>	16
Commercial Service Tool	3	Removal and Installation	16
<b>SYMPTOM DIAGNOSIS</b>	5	<b>LOWER LINK</b>	17
<b>NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING</b>	5	Removal and Installation	17
NVH Troubleshooting Chart	5	<b>UPPER BALL JOINT AND LOWER BALL JOINT</b>	18
<b>PERIODIC MAINTENANCE</b>	6	Removal and Installation	18
<b>ON-VEHICLE SERVICE</b>	6	<b>KNUCKLE</b>	19
Front Suspension Parts	6	Removal and Installation	19
Front Wheel Alignment	6	<b>UNIT DISASSEMBLY AND ASSEMBLY</b>	22
<b>UPPER BALL JOINT AND LOWER BALL JOINT</b>	10	<b>COIL SPRING AND SHOCK ABSORBER</b>	22
Inspection	10	Disassembly and Assembly	22
<b>KNUCKLE</b>	12	<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b>	24
On-Vehicle Inspection and Service	12	<b>SERVICE DATA AND SPECIFICATIONS (SDS)</b>	24
<b>REMOVAL AND INSTALLATION</b>	13	General Specification (Front)	24
<b>FRONT SUSPENSION ASSEMBLY</b>	13	Spring Free Height	24
Component	13	Wheel Alignment (Unladen*1)*6	24
		Ball Joint	25
		Wheelarch Height (Unladen*1)	25

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

## PRECAUTIONS

< PRECAUTION >

# PRECAUTION

## PRECAUTIONS

### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000010151213

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

### Precaution for Front Suspension

INFOID:000000009478830

- When installing the rubber bushings, the final tightening must be done under unladen condition and with the tires on level ground. Oil will shorten the life of the rubber bushings, so wipe off any spilled oil immediately.
- Unladen condition means the fuel tank, engine coolant and lubricants are at the full specification. The spare tire, jack, hand tools, and mats are in their designated positions.
- After installing suspension components, check the wheel alignment.
- Lock nuts are not reusable. Always use new lock nuts for installation. New lock nuts are pre-oiled, do not apply any additional lubrication.

## PREPARATION

< PREPARATION >



# PREPARATION

## PREPARATION

### Special Service Tool


INFOID:000000009478831

The actual shape of the tools may differ from those illustrated here.

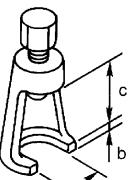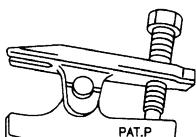Tool number (TechMate No.)	Description
ST29020001 (J-24319-01) Gear arm puller	<p>Removing ball joint for knuckle</p> <p>a: 34 mm (1.34 in) b: 6.5 mm (0.256 in) c: 61.5 mm (2.421 in)</p>  <p>NT694</p>
HT72520000 (J-25730-A) Ball joint remover	Removing tie-rod outer end
— (J-49286) Drift and pull gauge	<p>Measuring drift and pull</p>  <p>NT146</p>

### Commercial Service Tool

INFOID:000000009478832

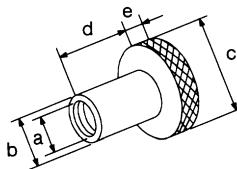Tool name	Description
Attachment wheel alignment	<p>Measuring wheel alignment</p> <p>a: Screw M24 x 1.5 pitch b: 35 mm (1.38 in) dia. c: 65 mm (2.56 in) dia. d: 56 mm (2.20 in) e: 12 mm (0.47 in)</p>  <p>NT148</p>

## PREPARATION

### < PREPARATION >

Tool name	Description
Spring compressor	Removing and installing coil spring
Power tool	Loosening nuts, screws and bolts

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

#### NVH Troubleshooting Chart

INFOID:000000009478833

Use the chart below to help you find the cause of the symptom. Repair or replace parts as necessary.

Reference page		Possible Cause and SUSPECTED PARTS												<a href="#">FSU-13</a>		Shock absorber deformation, damage or deflection	<a href="#">FSU-14</a>		Bushing or mounting deterioration	<a href="#">FSU-13</a>		Parts interference	<a href="#">FSU-13</a>		Spring fatigue	<a href="#">FSU-25</a>		Suspension looseness	<a href="#">FSU-6</a>		Incorrect wheel alignment	<a href="#">FSU-6</a>		Stabilizer bar fatigue	<a href="#">FSU-6</a>		DRIVE SHAFT	<a href="#">FAX-4, "NVH Troubleshooting Chart"</a>		DLN-184, "NVH Troubleshooting Chart"	<a href="#">FAX-4, "NVH Troubleshooting Chart"</a>		WHEEL HUB AND BEARING	<a href="#">FAX-4, "NVH Troubleshooting Chart"</a>		TIRES	<a href="#">FAX-4, "NVH Troubleshooting Chart"</a>		ROAD WHEEL	<a href="#">WT-44, "NVH Troubleshooting Chart"</a>		BRAKES	<a href="#">WT-44, "NVH Troubleshooting Chart"</a>		STEERING	<a href="#">WT-44, "NVH Troubleshooting Chart"</a>		ST-5, "NVH Troubleshooting Chart"
Symptom	Noise	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x																												
	Shake	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x																												
	Vibration	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x																												
	Shimmy	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x																												
	Shudder	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x																												
	Poor quality ride or handling	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x																												

x: Applicable

A  
B  
C  
D  
**FSU**  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

&lt; PERIODIC MAINTENANCE &gt;

# PERIODIC MAINTENANCE


## ON-VEHICLE SERVICE

### Front Suspension Parts

INFOID:0000000009478834


Check front suspension parts for excessive play, cracks, wear and other damage.

- Shake each front wheel to check for excessive play. If looseness is noted:
  - Inspect wheel bearing end play. Refer to [FAX-5, "On-Vehicle Inspection and Service"](#).
  - Check ball joint end play. Refer to [FSU-10, "Inspection"](#).
- Make sure that the cotter pin is inserted in drive shaft end (4WD only).
- Retighten all nuts and bolts to the specified torque.

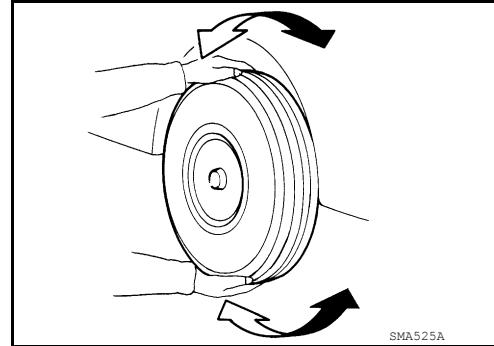

**Suspension component torques** : Refer to [FSU-13, "Component"](#).

- Check shock absorber for oil leakage and other damage.
- Check suspension ball joint for grease leakage and ball joint dust cover for cracks and other damage.

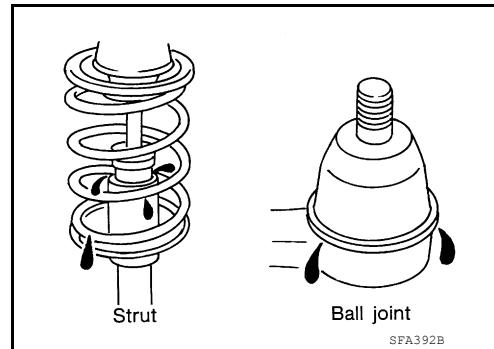

### Front Wheel Alignment

INFOID:0000000009478835

#### PRELIMINARY INSPECTION

**WARNING:**

Always adjust the alignment with the vehicle on a flat surface.

**NOTE:**

If alignment is out of specification, inspect and replace any damaged or worn rear suspension parts before making any adjustments.

1. Check and adjust the wheel alignment with the vehicle under unladen conditions. "Unladen conditions" means that the fuel, coolant, and lubricant are full; and that the spare tire, jack, hand tools and mats are in their designated positions.
2. Check the tires for incorrect air pressure and excessive wear.
3. Check the wheels for run out and damage. Refer to [WT-47, "Inspection"](#).
4. Check the wheel bearing axial end play. Refer to [FAX-5, "On-Vehicle Inspection and Service"](#).
5. Check the shock absorbers for leaks or damage.
6. Check each mounting point of the suspension components for any excessive looseness or damage.
7. Check each link, arm, and the suspension member for any damage.
8. Check the vehicle height. Refer to [FSU-25, "Wheelarch Height \(Unladen\\*1\)"](#).

#### GENERAL INFORMATION AND RECOMMENDATIONS

1. A Four-Wheel Thrust Alignment should be performed.
  - This type of alignment is recommended for any NISSAN vehicle.
  - The four-wheel "thrust" process helps ensure that the vehicle is properly aligned and the steering wheel is centered.
  - The alignment machine itself should be capable of accepting any NISSAN vehicle.
  - The alignment machine should be checked to ensure that it is level.

# ON-VEHICLE SERVICE

## < PERIODIC MAINTENANCE >

2. Make sure the alignment machine is properly calibrated.
- Your alignment machine should be regularly calibrated in order to give correct information.
  - Check with the manufacturer of your specific alignment machine for their recommended Service/Calibration Schedule.

A

B

C

D

FSU

E

F

G

H

I

J

K

L

M

N

O

P

## THE ALIGNMENT PROCESS

**IMPORTANT:** Use only the alignment specifications listed in this Service Manual. Refer to [FSU-24, "Wheel Alignment \(Unladen\)\\*1\)\\*6](#).

- When displaying the alignment settings, many alignment machines use "indicators": (Green/red, plus or minus, Go/No Go). **Do NOT use these indicators.**
  - The alignment specifications programmed into your alignment machine that operate these indicators may not be correct.
  - This may result in an ERROR.
- Most camera-type alignment machines are equipped with both "Rolling Compensation" method and optional "Jacking Compensation" method to "compensate" the alignment targets or head units. "Rolling Compensation" is the preferred method.
  - If using the "Rolling Compensation" method, after installing the alignment targets or head units, push or pull on the rear wheel to move the vehicle. Do not push or pull on the vehicle body.
  - If using the "Jacking Compensation" method, after installing the alignment targets or head units, raise the vehicle and rotate the wheels 1/2 turn both ways.

**NOTE:**

Do not use the "Rolling Compensation" method if you are using sensor-type alignment equipment.

- Follow all instructions for the alignment machine you are using for more information.

## CAMBER AND CASTER

- Measure camber and caster of both the right and left wheels with a suitable alignment gauge and adjust as necessary to specification.

**Camber : Refer to [FSU-24, "Wheel Alignment \(Unladen\)\\*1\)\\*6](#).**

**NOTE:**

Some vehicles may be equipped with straight (non-adjustable) lower link bolts and washers. In order to adjust camber and caster on these vehicles, first replace the lower link bolts and washers with adjustable (cam) bolts and washers.


- If outside of the specified value, adjust camber and caster using the adjusting bolts in the front lower link.

**CAUTION:**

**After adjusting the camber then check the toe-in.**

**NOTE:**

Camber changes about 3' (0.05°) minutes with each graduation of one adjusting bolt. Refer to table below for examples of lower link adjusting bolt effect on camber and caster.

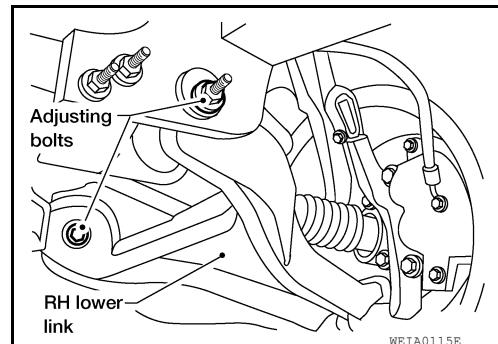

Rear adjusting bolt	1 In	1 Out	1 In	1 Out	0	0	1 In	1 Out
Front adjusting bolt	1 Out	1 In	1 In	1 Out	1 In	1 Out	0	0
Camber Degree minute (Decimal degree)	0' (0°)	0' (0°)	7' (0.12°)	- 7' (-0.12°)	3' (0.05°)	- 3' (-0.05°)	3' (0.05°)	- 3' (-0.05°)
Caster Degree minute (Decimal degree)	- 12' (-0.20°)	12' (0.20°)	0' (0°)	0' (0°)	6' (0.10°)	- 6' (-0.10°)	- 6' (-0.10°)	6' (0.10°)

# ON-VEHICLE SERVICE

## < PERIODIC MAINTENANCE >


3. Tighten the adjusting bolt nuts to specification. Refer to [FSU-13, "Component"](#).

### TOE-IN

#### **WARNING:**

- Always perform the following procedure on a flat surface.
- Make sure that no person is in front of the vehicle before pushing it.

1. Bounce the front of vehicle up and down to stabilize the vehicle height (posture).
2. Push the vehicle straight ahead about 5 m (16 ft).
3. Put a mark on base line of the tread (rear side) of both front tires at the same height as hub center as shown. These marks are measuring points.

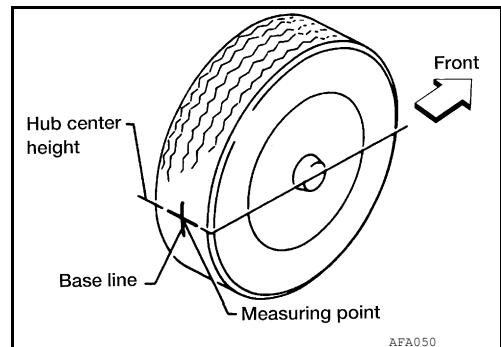


4. Measure the distance (A) on the rear side of the front tires as shown.
5. Push the vehicle slowly ahead to rotate the wheels 180° degrees (1/2 a turn).

#### **CAUTION:**

If the wheels have rotated more than 180° degrees (1/2 turn), start this procedure again from the beginning. Do not push the vehicle backward.

6. Measure the distance (B) on the front side of the front tires at the same marks as shown. Total toe-in is calculated as (A - B).

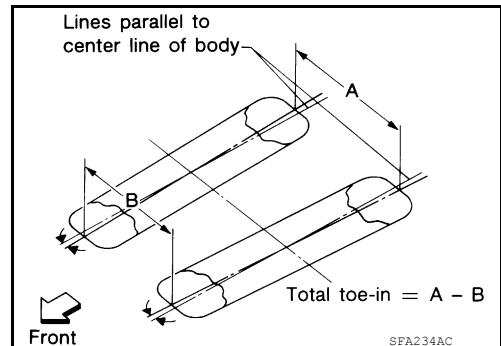


**Total toe-in** : Refer to [FSU-24, "Wheel Alignment \(Un-laden\)\\*1\)\\*6"](#).

7. Adjust the toe-in by varying the length of the steering outer tie-rods.
  - a. Loosen the outer tie-rod lock nuts.
  - b. Adjust the toe-in by screwing the outer tie-rods in or out.

**Standard length (L)** : Refer to [ST-31, "Tie-rod"](#).

- c. Tighten the outer tie-rod lock nuts to specification.

**Lock nut** : Refer to [ST-27, "Disassembly and Assembly"](#).

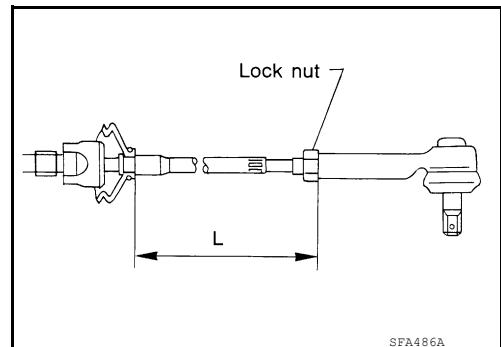

### FRONT WHEEL TURNING ANGLE

#### **NOTE:**

Check front wheel turning angle after the toe-in inspection.


# ON-VEHICLE SERVICE

## < PERIODIC MAINTENANCE >

1. Place front wheels on turning radius gauges in straight ahead position and rear wheels on stands so that vehicle can be level. Check the maximum inner and outer wheel turning angles for LH and RH road wheels.
2. Start engine and run at idle, turn steering wheel all the way right and left, measure the turning angle.

**Wheel turning angle** : Refer to FSU-24, "Wheel alignment (Unladen\*1)\*6".

- Any turning angles are not adjustable. If any of steering angles are out of the specification, check if the following parts are worn or damaged.
  - Steering gear
  - Steering column
  - Front suspension componentsIf found that they are worn or damaged, replace them with new ones.

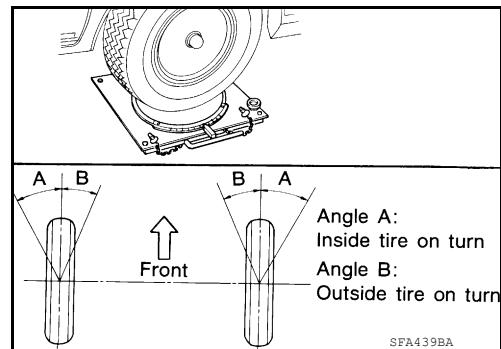

A  
B  
C  
D

FSU

F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# UPPER BALL JOINT AND LOWER BALL JOINT

< PERIODIC MAINTENANCE >

## UPPER BALL JOINT AND LOWER BALL JOINT

### Inspection

INFOID:0000000009478836


- Check the ball joint for excessive play. Replace the upper or lower link assembly if any of the following exists:
  - Ball joint stud is worn.
  - Ball joint is hard to swing.
  - Ball joint play in axial directions or end play is excessive.

### Swinging Force

#### NOTE:

Before checking the axial forces and end play, turn the lower ball joint at least 10 revolutions so that the ball joint is properly broken in.

1. Measure the ball joint swinging force using a suitable tool.
  - Measure at the cotter pin hole for upper ball joint as shown.
  - Measure at the groove for lower ball joint as shown.

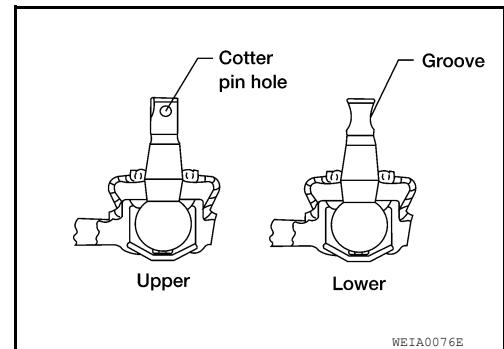

WEIA0076E


2. Verify the ball joint swinging force is within specification.

#### Swinging force (A)

(Measurement point at either cotter pin hole or groove of ball stud)

Upper : Refer to [FSU-25, "Ball Joint"](#).

Lower : Refer to [FSU-25, "Ball Joint"](#).

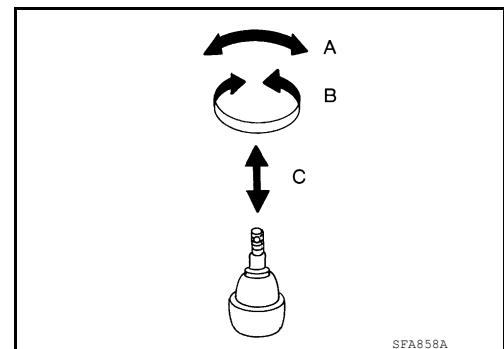

SFA858A

### Turning Force


#### NOTE:

Before checking the axial forces and end play, turn the lower ball joint at least 10 revolutions so that the ball joint is properly broken in.

#### Turning torque (B)

Upper : Refer to [FSU-25, "Ball Joint"](#).

Lower : Refer to [FSU-25, "Ball Joint"](#).

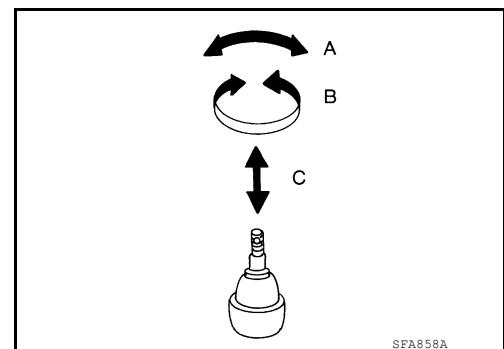

SFA858A

### Vertical End Play

Check dust cover for damage. Replace it and the cover clamp if necessary.


#### NOTE:

## UPPER BALL JOINT AND LOWER BALL JOINT

### < PERIODIC MAINTENANCE >

Before checking the axial forces and end play, turn the lower ball joint at least 10 revolutions so that the ball joint is properly broken in.

**Vertical end play (C)** : Refer to [FSU-25, "Ball Joint"](#).

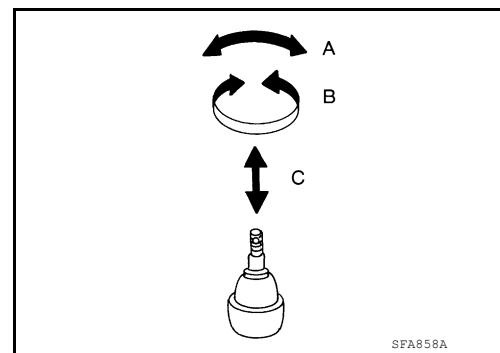

A  
B  
C  
D

FSU

F  
G  
H  
I  
J

K  
L  
M  
N

O  
P

# **KNUCKLE**

< PERIODIC MAINTENANCE >

## **KNUCKLE**

### **On-Vehicle Inspection and Service**

INFOID:0000000009478837

Make sure the mounting conditions (looseness, backlash) of each component and component status (wear, damage) are within specifications. Refer to [FSU-25, "Ball Joint"](#).


# FRONT SUSPENSION ASSEMBLY

< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION FRONT SUSPENSION ASSEMBLY

### Component

INFOID:000000009478838

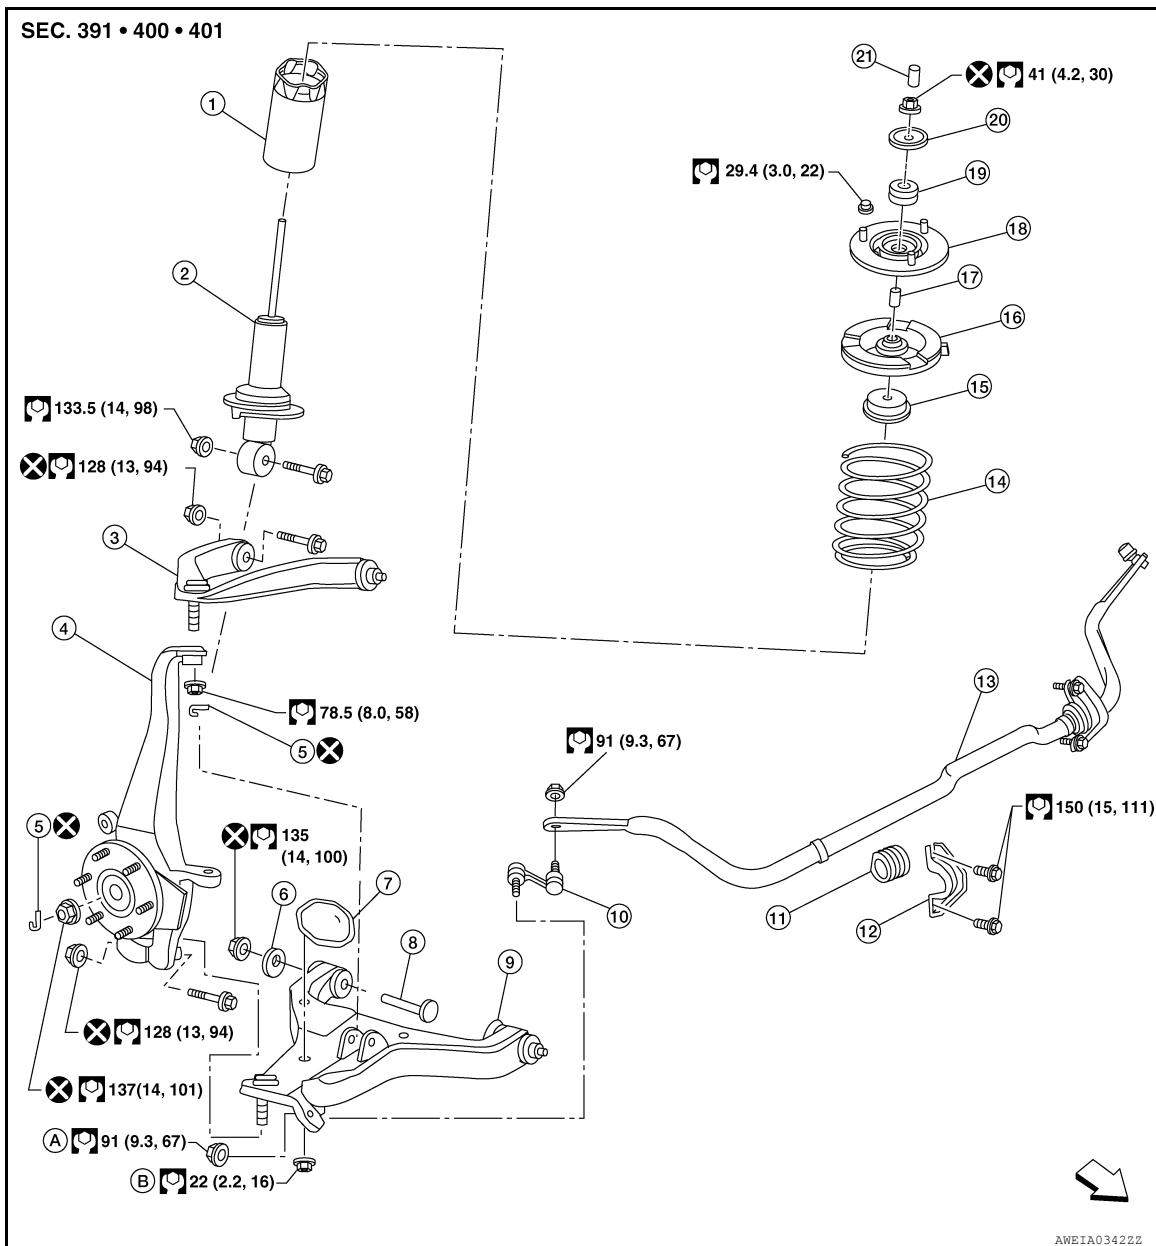

- |                       |                            |                              |
|-----------------------|----------------------------|------------------------------|
| 1. Dust cover         | 2. Shock absorber          | 3. Upper link                |
| 4. Steering knuckle   | 5. Cotter pin              | 6. Washer                    |
| 7. Jounce bumper      | 8. Bolt                    | 9. Lower link                |
| 10. Connecting rod    | 11. Stabilizer bar bushing | 12. Stabilizer bar bracket   |
| 13. Stabilizer bar    | 14. Coil spring            | 15. Dust cover cap           |
| 16. Upper spring seat | 17. Spacer                 | 18. Shock absorber insulator |
| 19. Spacer            | 20. Washer                 | 21. Cap                      |
| A. To connecting rod  | B. To jounce bumper        | Front                        |

A

B

C

FSU

F

G

H

I

J

K

L

M

N

O

P

# COIL SPRING AND SHOCK ABSORBER

< UNIT REMOVAL AND INSTALLATION >

## UNIT REMOVAL AND INSTALLATION


### COIL SPRING AND SHOCK ABSORBER

#### Removal and Installation

INFOID:0000000009478839

#### REMOVAL

1. Remove the wheel and tire using power tool. Refer to [WT-48, "Adjustment"](#).
2. Support the lower link using a suitable jack.
3. Remove connecting rod upper joints from stabilizer bar using power tool. Refer to [FSU-13, "Component"](#).
  - Swing stabilizer bar down, repositioning it out of the way to access shock absorber lower mount.
4. Remove the shock absorber lower bolt and nut using power tool.
5. Remove the three shock absorber upper nuts using power tool.
6. Remove the coil spring and shock absorber assembly.
  - Turn steering knuckle out to gain enough clearance for removal.

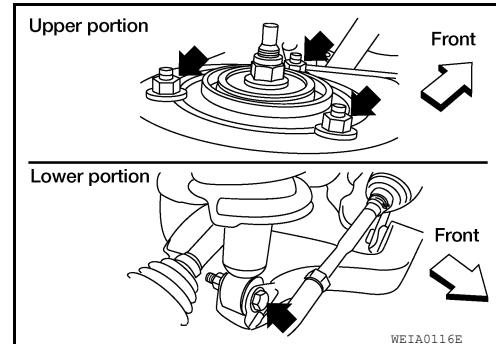

#### INSTALLATION

Installation is in the reverse order of removal.

- The step in the strut assembly lower seat faces outside of vehicle.
- Tighten all nuts and bolts to specification. Refer to [FSU-13, "Component"](#).
- When installing wheel and tire, refer to [WT-48, "Adjustment"](#).

#### Disposal

INFOID:0000000009478840


1. Set shock absorber horizontally with the piston rod fully extended.
2. Drill 2 – 3 mm (0.08 – 0.12 in) hole at the position (●) from top as shown to release gas gradually.

#### CAUTION:

- Wear eye protection (safety glasses).
- Wear gloves.
- Be careful with metal chips or oil blown out by the compressed gas.

#### NOTE:

- Drill vertically in this direction (←).
- Directly to the outer tube avoiding brackets.
- The gas is clear, colorless, odorless, and harmless.

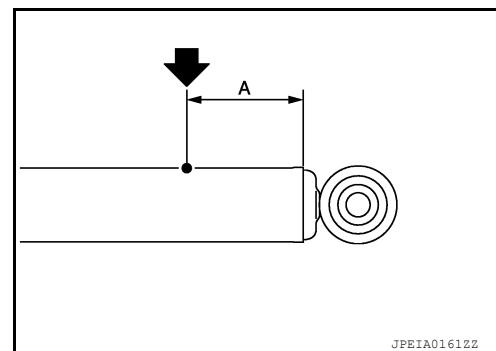

(A) : 20 – 30 mm (0.79 – 1.18 in)

3. Position the drilled hole downward and drain oil by moving the piston rod several times.

#### CAUTION:

Dispose of drained oil according to the law and local regulations.

# STABILIZER BAR

< UNIT REMOVAL AND INSTALLATION >


## STABILIZER BAR

### Removal and Installation

INFOID:0000000009478841

#### REMOVAL

1. Remove the front valance center. Refer to [EXT-15, "Removal and Installation"](#).
2. Remove engine under cover using power tool. Refer to [EXT-15, "Removal and Installation"](#).
3. Remove connecting rod nuts using power tool, as shown.
4. Loosen top bolts for stabilizer bar brackets, then remove lower bolts from stabilizer bar brackets and remove stabilizer bar.
5. Remove bushings from stabilizer bar.

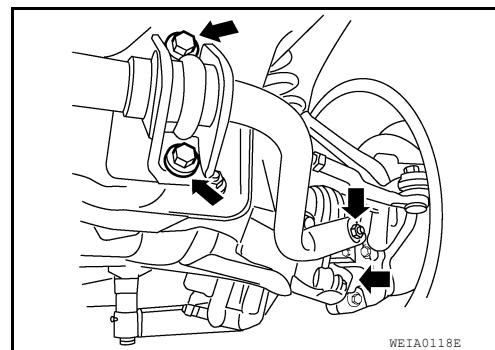

#### INSPECTION AFTER REMOVAL

- Check stabilizer bar for twist and deformation. Replace if necessary.
- Check rubber bushing for cracks, wear and deterioration. Replace if necessary.

#### INSTALLATION

Installation is in the reverse order of removal.

- Tighten all nuts and bolts to specification. Refer to [FSU-13, "Component"](#).

# UPPER LINK

< UNIT REMOVAL AND INSTALLATION >


## UPPER LINK

### Removal and Installation

INFOID:0000000009478842


#### REMOVAL

1. Remove the wheel and tire using power tool. Refer to [WT-48, "Adjustment"](#).
2. Support the lower link using a suitable jack.
3. For the LH side only, remove the pinch bolt from the lower joint shaft at the steering gear, and position the lower joint shaft out of the way.  
**CAUTION:**  
**Do not damage the lower joint.**

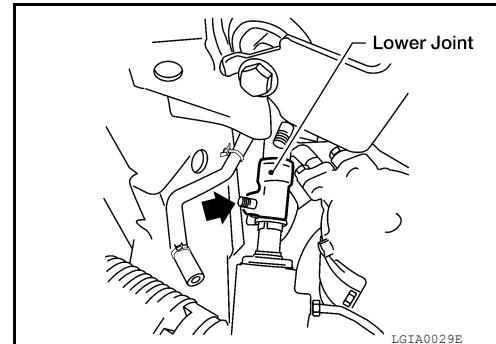


4. Remove cotter pin and nut from upper link ball joint.
5. Separate upper link ball joint stud from steering knuckle using Tool.

**Tool number : ST29020001 (J-24319-01)**

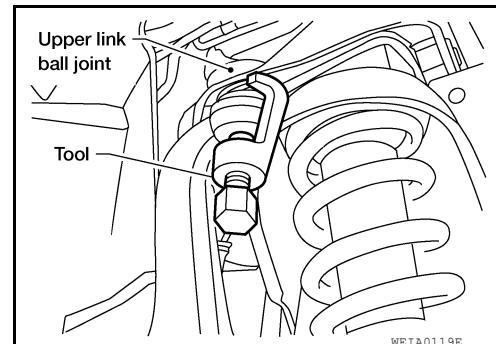

6. Remove upper link bolts and nuts.

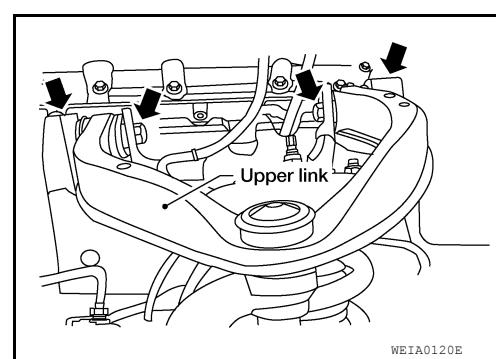

#### INSPECTION AFTER REMOVAL

##### Upper Link

Check for deformation and cracks. Replace if necessary.

##### Upper Link Ball Joint

Check for distortion and damage. Replace if necessary.

#### INSTALLATION

Installation is in the reverse order of removal.

- Tighten all nuts and bolts to specification. Refer to [FSU-13, "Component"](#).

**CAUTION:**

**Always replace drive shaft lock nut and cotter pin.**

- When installing wheel and tire, refer to [WT-48, "Adjustment"](#).

- After installation, check that the front wheel alignment is within specification. Refer to [FSU-6, "Front Wheel Alignment"](#).

## LOWER LINK

< UNIT REMOVAL AND INSTALLATION >


### LOWER LINK

#### Removal and Installation

INFOID:0000000009478843

##### REMOVAL


1. Remove the wheel and tire using power tool. Refer to [WT-48, "Adjustment"](#).
2. Remove lower shock absorber bolt.
3. Remove stabilizer bar connecting rod lower nut using power tool, then separate connecting rod from lower link. Refer to [FSU-15, "Removal and Installation"](#).
4. On 4WD models, remove the drive shaft. Refer to [FAX-6, "Removal and Installation"](#).
5. Remove pinch bolt from steering knuckle using power tool, then separate lower link ball joint from steering knuckle.

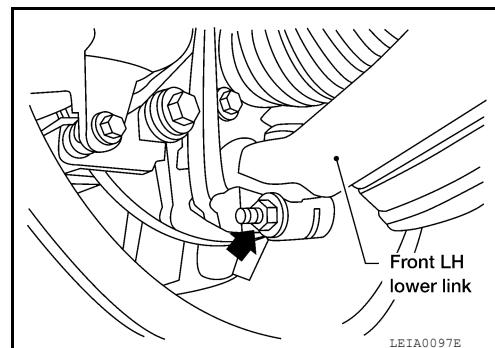

6. Remove lower link adjusting bolts and nuts, then the lower link.

**NOTE:**

Some vehicles may be equipped with straight (non-adjustable) lower link bolts and washers. In order to adjust camber and caster on these vehicles, first replace the lower link bolts and washers with adjustable (cam) bolts and washers.

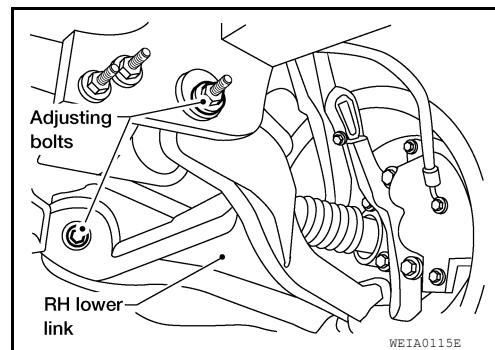

7. Remove the jounce bumper from the lower link.

#### INSPECTION AFTER REMOVAL

##### Lower Link

Check for deformation and cracks. Replace if necessary.

##### Lower Link Bushing

Check for distortion and damage. Replace if necessary.

#### INSTALLATION

Installation is in the reverse order of removal.

- Tighten all nuts and bolts to specification. Refer to [FSU-13, "Component"](#).
- When installing wheel and tire, refer to [WT-48, "Adjustment"](#).
- After installation, check that the front wheel alignment is within specification. Refer to [FSU-6, "Front Wheel Alignment"](#).

## **UPPER BALL JOINT AND LOWER BALL JOINT**

< UNIT REMOVAL AND INSTALLATION >

### **UPPER BALL JOINT AND LOWER BALL JOINT**

#### **Removal and Installation**

INFOID:0000000009478844

The ball joints are part of the upper and lower links. Refer to [FSU-16, "Removal and Installation"](#) (upper link), [FSU-17, "Removal and Installation"](#) (lower link).


# KNUCKLE

< UNIT REMOVAL AND INSTALLATION >

## KNUCKLE

### Removal and Installation

INFOID:0000000009478845

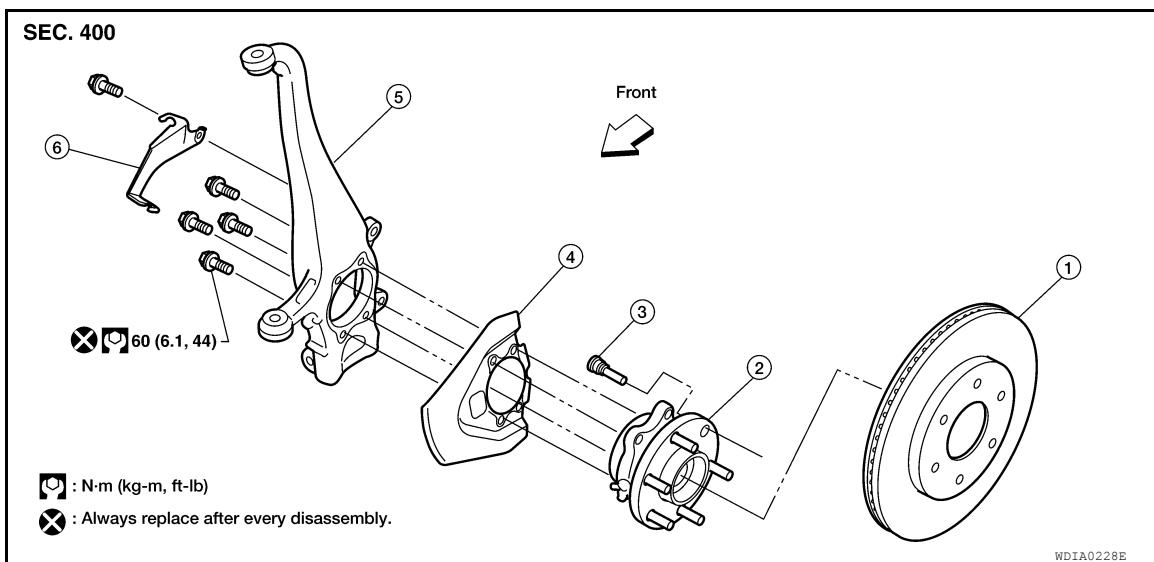

- 1. Disc rotor
- 2. Wheel hub and bearing assembly
- 3. Wheel stud
- 4. Splash guard
- 5. Steering knuckle
- 6. Wheel sensor bracket


### REMOVAL

1. Remove wheel and tire from vehicle using power tool. Refer to [WT-48, "Adjustment"](#).
2. Remove the engine under cover using power tool. Refer to [EXT-15, "Removal and Installation"](#).
3. Without disassembling the hydraulic lines, remove brake caliper using power tool. Reposition it aside with wire. Refer to [BR-35, "Removal and Installation of Brake Caliper and Disc Rotor"](#).

**NOTE:**

Avoid depressing brake pedal while brake caliper is removed.

4. Put alignment marks on disc rotor and wheel hub and bearing assembly, then remove disc rotor.

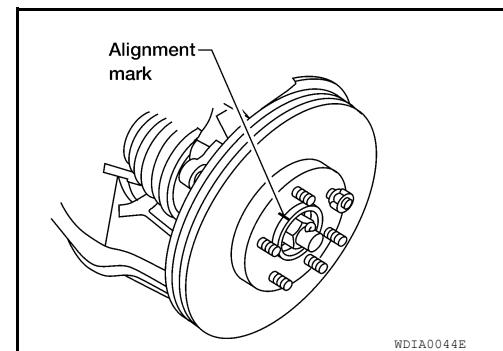

5. Disconnect wheel sensor and remove bracket from steering knuckle.

**CAUTION:**

**Do not pull on wheel sensor harness.**

6. On 4WD models, remove cotter pin, then remove lock nut from drive shaft using power tool. Refer to [FAX-6, "Removal and Installation"](#).
7. Remove steering outer socket cotter pin at steering knuckle, then loosen nut using power tool. Refer to [ST-15, "Removal and Installation"](#).

# KNUCKLE


## < UNIT REMOVAL AND INSTALLATION >

8. Disconnect steering outer socket from steering knuckle using Tool. Be careful not to damage ball joint boot.

Tool number : HT72520000 (J-25730-A)


**CAUTION:**

To prevent damage to threads and to prevent Tool from coming off suddenly, temporarily tighten nut.

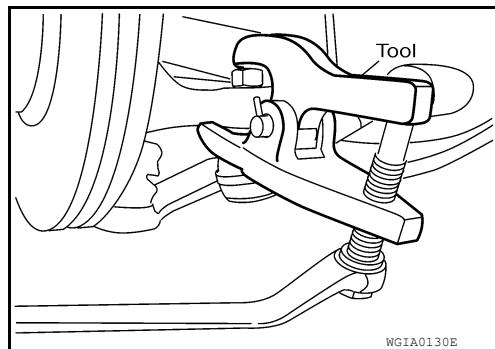


9. Remove wheel hub and bearing assembly bolts using power tool.
  10. Remove splash guard and wheel hub and bearing assembly from steering knuckle.
- CAUTION:**  
Do not pull on wheel sensor harness.
11. Remove cotter pin and nut from upper link ball joint.
  12. Separate upper link ball joint from steering knuckle using Tool.

Tool number : ST29020001 (J-24319-01)

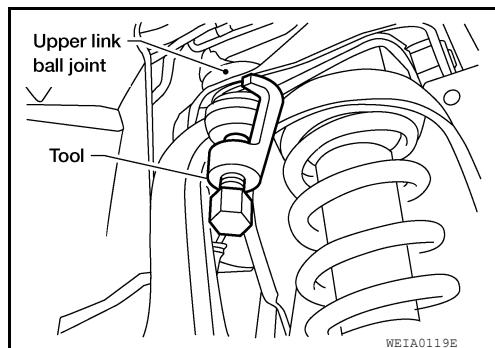

13. Remove pinch bolt from steering knuckle using power tool, then separate lower link ball joint from steering knuckle.

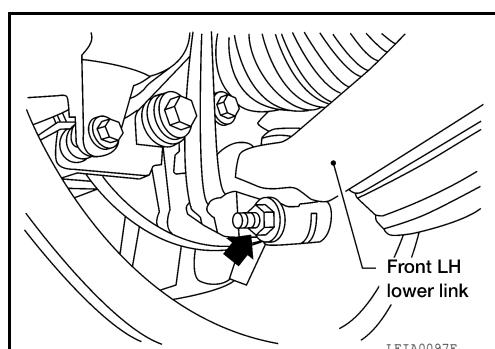

14. Remove steering knuckle from vehicle.

## INSPECTION AFTER REMOVAL

Check for deformity, cracks and damage on each part, replace if necessary.

- Perform ball joint inspection. Refer to [FSU-10, "Inspection"](#).

## INSTALLATION

Installation is in the reverse order of removal.

- For 4WD models, refer to [FAX-6, "Removal and Installation"](#) for drive shaft lock nut tightening torque.

**CAUTION:**

Always replace drive shaft lock nut and cotter pin.

- Refer to [ST-27, "Disassembly and Assembly"](#) for outer socket nut tightening torque.
- Refer to [FSU-13, "Component"](#) for front suspension tightening torques.

## KNUCKLE


### < UNIT REMOVAL AND INSTALLATION >

- When installing disc rotor on wheel hub and bearing assembly, align the marks.

**NOTE:**

When not using the alignment mark, refer to [BR-52, "Front Disc Brake"](#).

- When installing wheel and tire, refer to [WT-48, "Adjustment"](#).
- Perform wheel alignment. Refer to [FSU-6, "Front Wheel Alignment"](#).

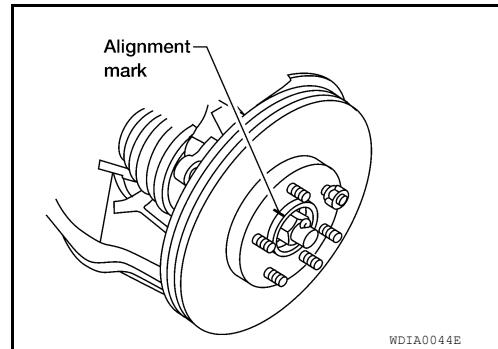

A  
B  
C  
D

FSU

F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# COIL SPRING AND SHOCK ABSORBER

< UNIT DISASSEMBLY AND ASSEMBLY >

## UNIT DISASSEMBLY AND ASSEMBLY

### COIL SPRING AND SHOCK ABSORBER

#### Disassembly and Assembly

INFOID:000000009478846

##### DISASSEMBLY

- Set the shock absorber in a vise, then loosen (without removing) the piston rod lock nut as shown.


**CAUTION:**

**Do not remove piston rod lock nut at this time.**

- Compress the spring using commercial service tool until the shock absorber insulator can be turned by hand.

**WARNING:**

**Make sure that the pawls of the two spring compressors are firmly hooked on the spring. The spring compressors must be tightened alternately and evenly so as not to tilt the spring.**

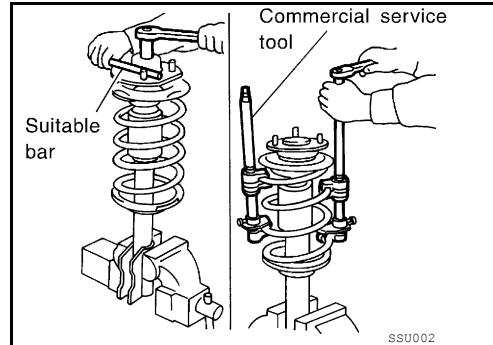

SSU002


- Remove the piston rod lock nut.

**CAUTION:**

**Do not reuse piston rod lock nut.**

- Remove the components from the shock absorber.

- Keep the spring compressed in the commercial service tool if reusing it for assembly.

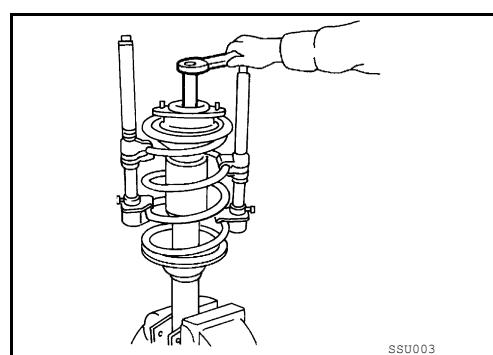

SSU003

#### INSPECTION AFTER DISASSEMBLY

##### Shock Absorber Assembly

- Check for smooth operation through a full stroke, both compression and extension.
- Check for oil leakage on welded or gland packing portions.
- Check piston rod for cracks, deformation or other damage and replace if necessary.

##### Shock Absorber Insulator and Rubber Parts

Check cemented rubber-to-metal portion for separation or cracks. Check rubber parts for deterioration and replace if necessary.

##### Coil Spring

- Check for cracks, deformation or other damage and replace if necessary.
- Check the free spring height.

##### Front spring free height

2WD : Refer to [FSU-24, "Spring Free Height"](#).


4WD : Refer to [FSU-24, "Spring Free Height"](#).

#### ASSEMBLY


# COIL SPRING AND SHOCK ABSORBER

## < UNIT DISASSEMBLY AND ASSEMBLY >

- When installing coil spring on strut, it must be positioned as shown.

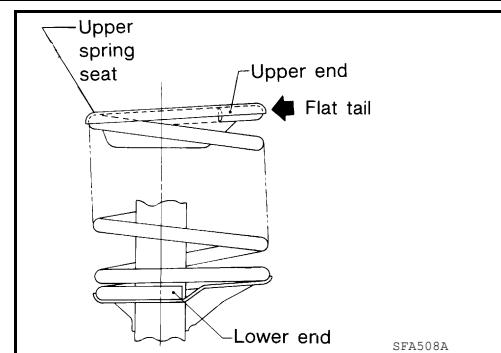

- Install the shock absorber insulator as shown in line with lower shock mount and step in lower seat.
  - The step in the strut assembly lower seat faces outside of vehicle.
- Tighten the new piston rod lock nut to specification. Refer to [FSU-13, "Component"](#).
- CAUTION:**  
**Do not reuse piston rod lock nut.**
- Remove commercial service tool.

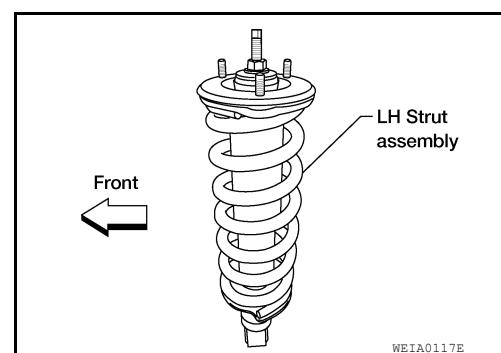

# SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### General Specification (Front)

INFOID:0000000009478847

Suspension type	Independent double wishbone coil over shock	
Shock absorber type	Double-acting hydraulic	
Stabilizer	Standard equipment	

#### Spring Free Height

INFOID:0000000009478848

VQ40DE

Unit: mm (in)

Drive type	2WD	4WD
Front spring free height - short wheel base	336 (13.23)	346 (13.62)
Front spring free height - long wheel base	337.1 (13.27)	346 (13.62)

QR25DE


Unit: mm (in)

Front spring free height	346 (13.62)
--------------------------	-------------

#### Wheel Alignment (Unladen\*1)\*6

INFOID:0000000009478849

Drive type	2WD	4WD
Camber Degree minute (decimal degree)	Minimum	-0° 30' (-0.50°)
	Nominal	0° 15' (0.25°)
	Maximum	1° 0' (1.00°)
	Cross camber	0° 45' (0.75°) or less
Caster Degree minute (decimal degree)	Minimum	2° 00' (2.00°)
	Nominal	2° 45' (2.75°)
	Maximum	3° 30' (3.50°)
	Cross caster	0° 45' (0.75°) or less
Kingpin inclination Degree minute (decimal degree)	Nominal	13° 0' (13.00°)
		12° 45' (12.75°)

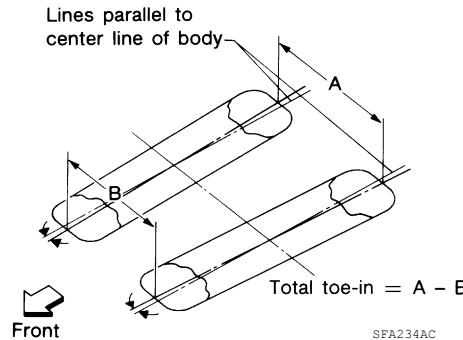

Total toe-in	Distance	Minimum	In 3.0 mm (In 0.12 in)
		Nominal	In 4.0 mm (In 0.16 in)
		Maximum	In 5.0 mm (In 0.20 in)
	Angle Degree minute (Decimal degree)	Minimum	In 0° 7' (In 0.12°)
		Nominal	In 0° 9' (In 0.15°)
		Maximum	In 0° 11' (In 0.18°)

# SERVICE DATA AND SPECIFICATIONS (SDS)

## < SERVICE DATA AND SPECIFICATIONS (SDS)

Drive type		2WD	4WD
Wheel turning angle (full turn)	Inside Degree minute (Decimal degree)	33° 28' – 35° 28' *2 (33.47° – 35.47°)	33° 38' – 35° 38' *4 (33.63° – 35.63°)
	Outside Degree minute (Decimal degree)	29° 27' – 31° 27' *3 (29.45° – 31.45°)	29° 49' – 31° 49' *5 (29.82° – 31.82°)

\*1: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

\*2: Target value 35° 28' (35.47°)

\*3: Target value 31° 27' (31.45°)

\*4: Target value 35° 38' (35.63°)


\*5: Target value 31° 49' (31.82°)

\*6: Some vehicles may be equipped with straight (non-adjustable) lower link bolts and washers. In order to adjust camber and caster on these vehicles, first replace the lower link bolts and washers with adjustable (cam) bolts and washers.

## Ball Joint

INFOID:000000009478850

FSU

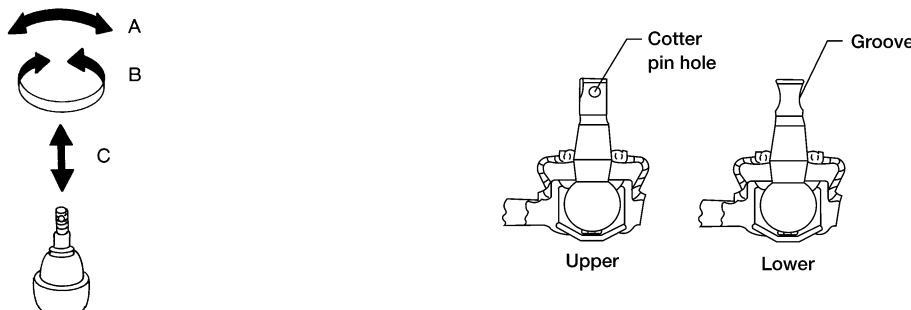

SFA858A

WEIA0076E


Swinging force (A) (Measurement point at either cotter pin hole or groove of ball stud.)	Upper	8.1 - 79 N (0.83 - 8.1 kg-f, 1.82 - 17.8 lb-f) at hole
	Lower	11.4 - 145.5 N (1.16 - 14.84 kg-f, 2.56 - 32.71 lb-f) at groove
Turning torque (B)	Upper	0.5 - 4.9 N·m (0.05 - 0.49 kg-m, 5 - 43 in-lb)
	Lower	0.5 - 6.4 N·m (0.05 - 0.65 kg-m, 5 - 56 in-lb)
Vertical end play (C)		0 mm (0 in)

## Wheelarch Height (Unladen\*<sup>1</sup>)

INFOID:000000009478851

King Cab

Unit: mm (in)

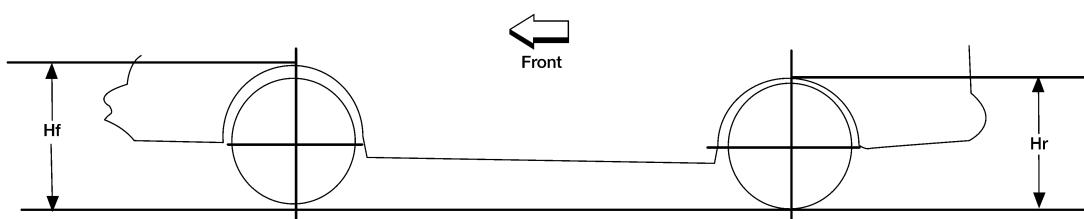

LEIA0085E

Drive type	2WD			4WD		
Engine type	QR25DE			VQ40DE		
Tire size	P235/75R15	P265/70R16	P265/70R16	P265/75R16	P265/70R16	P265/75R16

# SERVICE DATA AND SPECIFICATIONS (SDS)


## < SERVICE DATA AND SPECIFICATIONS (SDS)

Front wheelarch height (Hf)	850 (33.46)	865 (34.06)	868 (34.17)	880 (34.65)	881 (34.68)	893 (35.16)
Rear wheelarch height (Hr)	878 (34.57)	887 (34.92)	895 (35.24)	907 (35.71)	904 (35.59)	917 (36.10)

\*1: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

Crew Cab

Unit: mm (in)

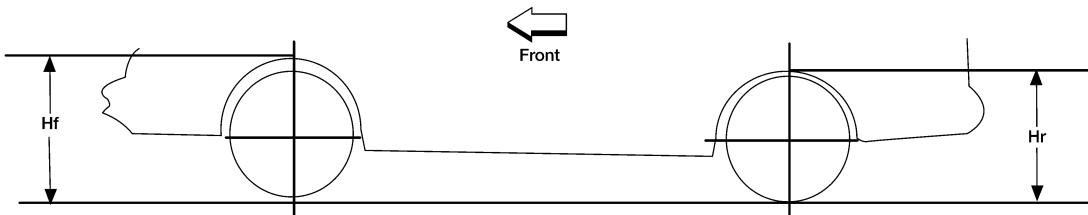

LEIA0085E

Engine type	VQ40DE									
Drive type	2WD					4WD				
Tire size	P265/70R16		P265/75R16		P265/60R18		P265/70R16	P265/75R16	P265/60R18	
Wheel base	Short	Long	Short	Short	Long	Short	Long	Short	Short	Long
Front wheelarch height (Hf)	867 (34.13)	870 (34.25)	879 (34.61)	866 (34.09)	869 (34.21)	879 (34.61)	882 (34.72)	891 (35.08)	879 (34.61)	882 (34.72)
Rear wheelarch height (Hr)	892 (35.12)	892 (35.12)	904 (35.59)	892 (35.12)	892 (35.12)	905 (35.63)	902 (35.51)	918 (36.14)	905 (35.63)	902 (35.51)

\*1: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.