

A  
STR  
STR  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# SECTION STR

## STARTING SYSTEM

### CONTENTS

|  |   |    |    |
|--|---|----|----|
| <b>PRECAUTION</b> .....  | <b>M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM</b> .....                     | 3  | 14 |
| <b>PRECAUTIONS</b> .....   | M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : System Diagram .....           | 3  | 15 |
| Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" ..... | M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : System Description .....       | 3  | 15 |
| Precaution for Power Generation Variable Voltage Control System .....                            | M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : Component Parts Location ..... | 3  | 15 |
| Precaution for Work .....  | M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : Component Description .....    | 3  | 16 |
| <b>PREPARATION</b> .....   | <b>DTC/CIRCUIT DIAGNOSIS</b> .....  | 5  | 17 |
| <b>PREPARATION</b> .....   | <b>B TERMINAL CIRCUIT</b> .....   | 5  | 17 |
| Special Service Tool .....   | Description .....   | 5  | 17 |
| Commercial Service Tool .....  | Diagnosis Procedure .....   | 5  | 17 |
| <b>BASIC INSPECTION</b> .....  | <b>S CONNECTOR CIRCUIT</b> .....  | 6  | 19 |
| <b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....   | Description .....   | 6  | 19 |
| Work Flow (With GR8-1200 NI) .....   | Diagnosis Procedure .....   | 6  | 19 |
| Work Flow (Without GR8-1200 NI) .....  | <b>WIRING DIAGRAM</b> .....   | 10 | 20 |
| <b>SYSTEM DESCRIPTION</b> .....  | <b>STARTING SYSTEM</b> .....  | 12 | 20 |
| <b>STARTING SYSTEM</b> .....   | Wiring Diagram - VQ40DE With Clutch Interlock Cancel System .....           | 12 | 20 |
| <b>A/T</b> .....   | Wiring Diagram - VQ40DE Without Clutch Interlock Cancel System .....        | 12 | 26 |
| A/T : System Diagram .....   | Wiring Diagram - QR25DE .....   | 12 | 30 |
| A/T : System Description .....   | <b>SYMPTOM DIAGNOSIS</b> .....  | 12 | 34 |
| A/T : Component Parts Location .....   | <b>STARTING SYSTEM</b> .....  | 12 | 34 |
| A/T : Component Description .....  | Symptom Table .....   | 13 | 34 |
| <b>M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM</b> .....   | <b>REMOVAL AND INSTALLATION</b> .....                                       | 13 | 35 |
| M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : System Diagram .....                                   | <b>STARTER MOTOR</b> .....  | 13 | 35 |
| M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : System Description .....                               | Removal and Installation (QR25DE) .....                                     | 13 | 35 |
| M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : Component Parts Location .....                         | Removal and Installation (VQ40DE) .....                                     | 14 | 36 |
| M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : Component Description .....                            |   | 14 |    |

---

|  |                            |           |
|--|----------------------------|-----------|
| <b>SERVICE DATA AND SPECIFICATIONS</b> | <b>STARTER MOTOR</b> ..... | <b>37</b> |
| <b>(SDS)</b> .....                     | Starter .....              | 37        |

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000010138396

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

#### Precaution for Power Generation Variable Voltage Control System

INFOID:000000009482278

#### **CAUTION:**

For this model, the battery current sensor that is installed to the negative battery cable measures the charging/discharging current of the battery and performs various engine controls. If an electrical component is connected directly to the negative battery terminal, the current flowing through that component will not be measured by the battery current sensor. This condition may cause a malfunction of the engine control system and battery discharge may occur. Do not connect an electrical component or ground wire directly to the battery terminal.

#### Precaution for Work

INFOID:000000009482279

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:
  - Water soluble dirt:
    - Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
    - Then rub with a soft, dry cloth.
  - Oily dirt:

## PRECAUTIONS

### < PRECAUTION >

---

- Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
- Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
- Then rub with a soft, dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

# PREPARATION

< PREPARATION >

## PREPARATION

### PREPARATION

#### Special Service Tool

INFOID:000000009482280

A

STR

The actual shape of the tools may differ from those illustrated here.

| Tool number<br>(TechMate No.)<br>Tool name   | Description  |
|--|--|
| <p>( — ) Model GR8-1200 NI<br/>Multitasking battery and electrical diagnostic station</p>  <p style="text-align: right; font-size: small;">AWIA12392Z</p> | <p>Tests batteries, starting and charging systems and charges batteries.<br/>For operating instructions, refer to diagnostic station instruction manual.</p> |

C

D

E

#### Commercial Service Tool

INFOID:000000009482281

F

| Tool name  | Description                             |
|--|---|
| <p>Power tool</p>  <p style="text-align: right; font-size: small;">PIIB1407E</p> | <p>Loosening nuts, screws and bolts</p> |

G

H

I

J

K

L

M

N

O

P

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

---

## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow (With GR8-1200 NI)

INFOID:000000009482282

#### STARTING SYSTEM DIAGNOSIS WITH GR8-1200 NI

To test the starting system, use the following special service tool:

- GR8-1200 NI Multitasking battery and electrical diagnostic station


**NOTE:**

Refer to the diagnostic station Instruction Manual for proper starting system diagnosis procedures.

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

## OVERALL SEQUENCE

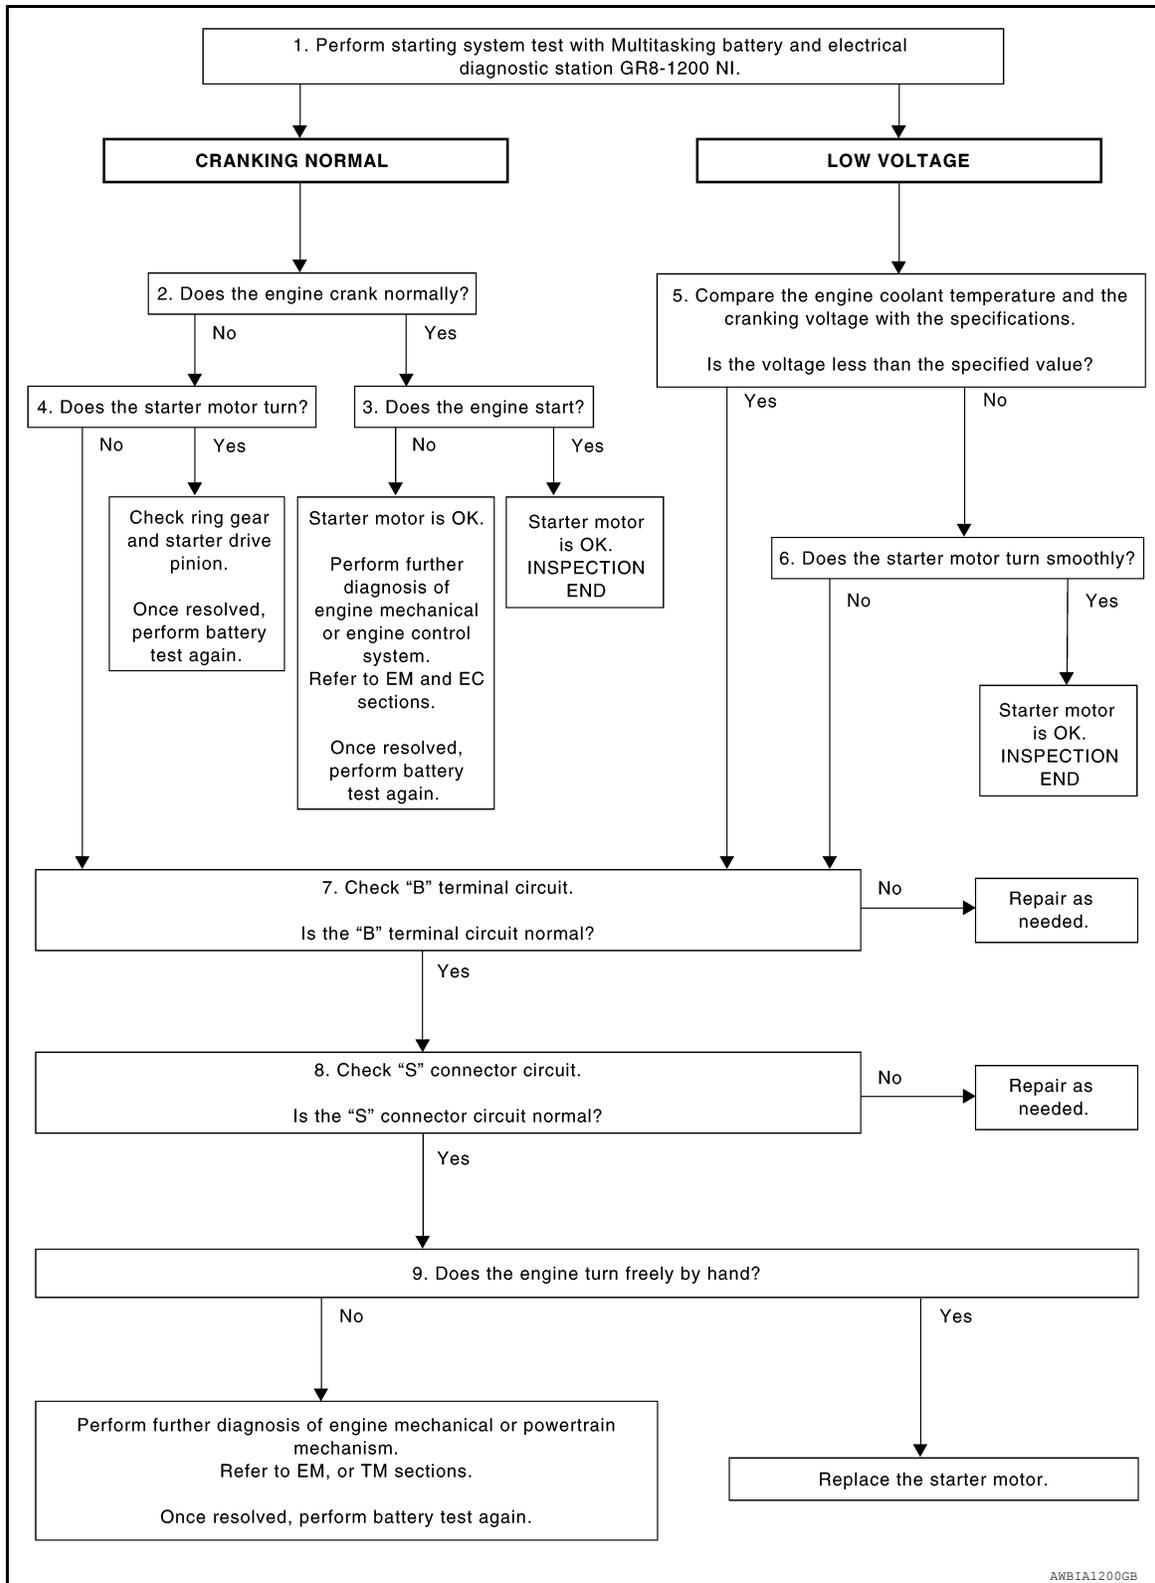

### DETAILED FLOW

#### NOTE:

To ensure a complete and thorough diagnosis, the battery, starter motor and generator test segments must be done as a set from start to finish.

### 1. DIAGNOSIS WITH MULTITASKING BATTERY AND ELECTRICAL DIAGNOSTIC STATION GR8-1200 NI

# DIAGNOSIS AND REPAIR WORKFLOW

## < BASIC INSPECTION >

Perform the starting system test with Multitasking battery and electrical diagnostic station GR8-1200 NI. For details and operating instructions, refer to diagnostic station Instruction Manual.

### Test result

CRANKING NORMAL>>GO TO 2.

LOW VOLTAGE>>GO TO 5.

CHARGE BATTERY>>Perform the slow battery charging procedure. (Initial rate of charge is 10A for 12 hours.) Perform battery test again. Refer to diagnostic station instruction manual.

REPLACE BATTERY>>Before replacing battery, clean the battery cable clamps and battery posts. Perform battery test again. Refer to diagnostic station instruction manual. If second test result is "REPLACE BATTERY", then do so. Perform battery test again to confirm repair.

## 2. CRANKING CHECK

Check that the starter motor operates properly.

### Does the engine crank normally?

YES >> GO TO 3.

NO >> GO TO 4.

## 3. ENGINE START CHECK

Check that the engine starts.

### Does the engine start?

YES >> Inspection End.

NO >> Perform further diagnosis of engine mechanical or engine control system. Refer to EM and EC sections. Once resolved, perform battery test again.

## 4. STARTER MOTOR ACTIVATION

Check that the starter motor operates.

### Does the starter motor turn?

YES >> Check ring gear and starter motor drive pinion. Once resolved, perform battery test again.

NO >> GO TO 7.

## 5. COMPARISON BETWEEN ENGINE COOLANT AND CRANKING VOLTAGE

Compare the engine coolant temperature and verify the cranking voltage is within specifications.

### Minimum Specification of Cranking Voltage Referencing Coolant Temperature

| Engine coolant temperature [°C (°F)] | Voltage [V] |
|--------------------------------------|-------------|
| -30 to -20 (-22 to -4)               | 8.6         |
| -19 to -10 (-2 to 14)                | 9.1         |
| -9 to 0 (16 to 32)                   | 9.5         |
| More than 1 (More than 34)           | 9.9         |

### Is the voltage less than the specified value?

YES >> GO TO 7.

NO >> GO TO 6.

## 6. STARTER OPERATION

Check the starter operation.

### Does the starter motor turn smoothly?

YES >> Inspection End.

NO >> GO TO 7.

## 7. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [STR-17, "Diagnosis Procedure"](#).

### Is "B" terminal circuit normal?

YES >> GO TO 8.

NO >> Repair as needed.

## 8. "S" CONNECTOR CIRCUIT INSPECTION

Check "S" connector circuit. Refer to [STR-19, "Diagnosis Procedure"](#).

# DIAGNOSIS AND REPAIR WORKFLOW

## < BASIC INSPECTION >

---

Is "S" connector circuit normal?

YES >> GO TO 9.

NO >> Repair as needed.

A

## 9. ENGINE ROTATION STATUS

---

Check that the engine can be rotated by hand.

Does the engine turn freely by hand?

YES >> Replace starter motor.

NO >> Perform further diagnosis of engine mechanical or powertrain mechanism. Once resolved, perform battery test again using Multitasking battery and electrical diagnostic station GR8-1200 NI. Refer to the diagnostic station Instruction Manual for proper testing procedures.

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P


# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

Work Flow (Without GR8-1200 NI)

INFOID:000000009482283

## OVERALL SEQUENCE

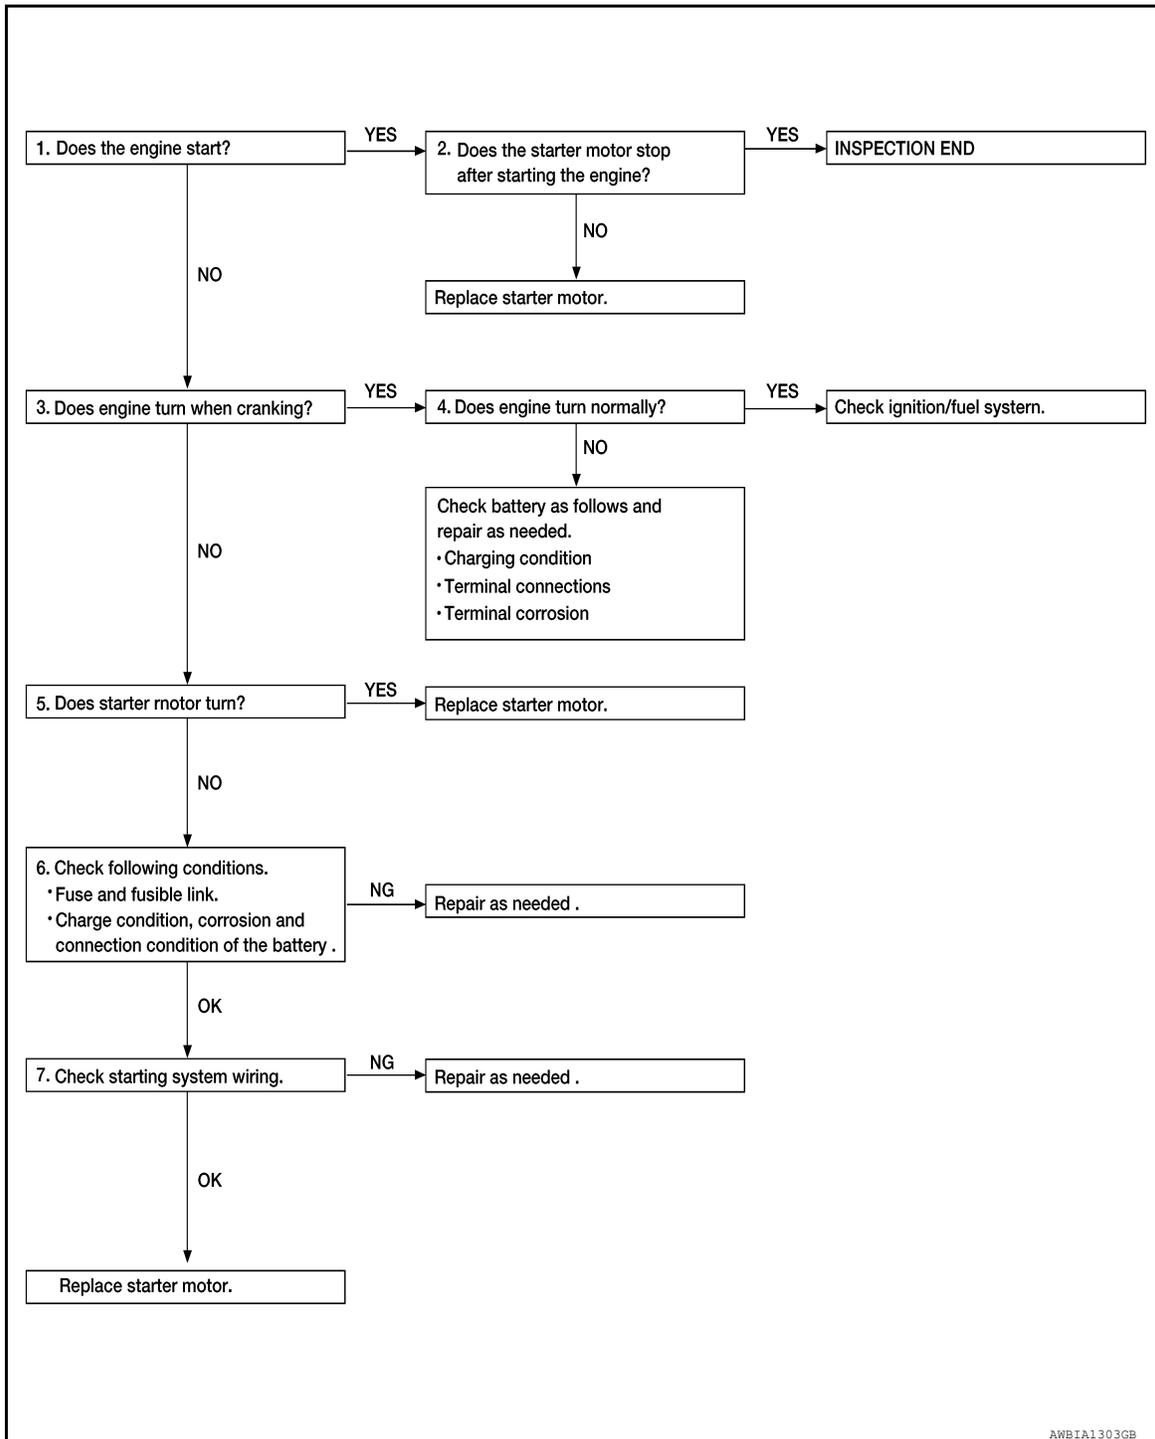

## DETAILED FLOW

### NOTE:

If any malfunction is found, immediately disconnect the battery cable from the negative terminal.

### 1. CHECK ENGINE START

Crank the engine and check that the engine starts.

Does the engine start?

YES >> GO TO 2.

NO >> GO TO 3.

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

## 2. CHECK THAT THE STARTER MOTOR STOPS

Check that the starter motor stops after starting the engine.

Does the starter motor stop?

YES >> Inspection End.

NO >> Replace starter motor. Refer to [STR-35, "Removal and Installation \(QR25DE\)"](#) or [STR-36, "Removal and Installation \(VQ40DE\)"](#).

## 3. CHECK THAT THE ENGINE TURNS WHEN CRANKING

Check that the engine turns when cranking.

Does engine turn when cranking?

YES >> GO TO 4.

NO >> GO TO 5.

## 4. CHECK THE ENGINE SPEED WHEN CRANKING

Check that the engine speed is not low when cranking.

Does engine turn normally?

YES >> Check ignition/fuel system.

NO >> Check charge condition, corrosion and connection condition of the battery.

## 5. CHECK STARTER MOTOR ACTIVATION

Check that the starter motor runs at cranking.

Does starter motor turn?

YES >> Replace starter motor. Refer to [STR-35, "Removal and Installation \(QR25DE\)"](#) or [STR-36, "Removal and Installation \(VQ40DE\)"](#).

NO >> GO TO 6.

## 6. CHECK POWER SUPPLY CIRCUIT

Check the following conditions:

- Fuse and fusible link
- Charge condition, corrosion and connection of the battery.

Are these inspection results normal?

YES >> GO TO 7.

NO >> Repair as needed.

## 7. CHECK STARTING SYSTEM WIRING

Check the following:

- "B" terminal circuit. Refer to [STR-17, "Diagnosis Procedure"](#).
- "S" terminal circuit. Refer to [STR-19, "Diagnosis Procedure"](#).

Are the inspection results normal?

YES >> Replace starter motor. Refer to [STR-35, "Removal and Installation \(QR25DE\)"](#) or [STR-36, "Removal and Installation \(VQ40DE\)"](#).

NO >> Repair as needed.

A

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

# STARTING SYSTEM

< SYSTEM DESCRIPTION >


## SYSTEM DESCRIPTION

### STARTING SYSTEM

A/T

A/T : System Diagram

INFOID:000000009482284

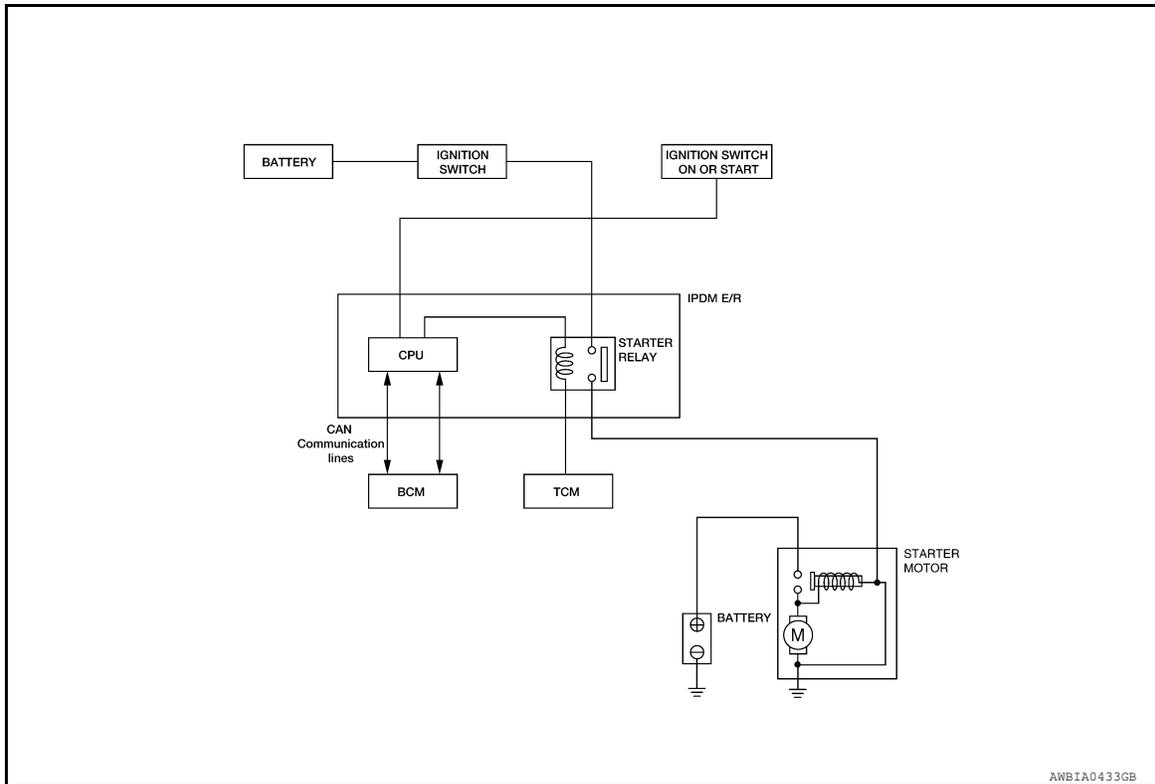

AWBIA0433GB


A/T : System Description

INFOID:000000009482285

The starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

A/T : Component Parts Location

INFOID:000000009482286

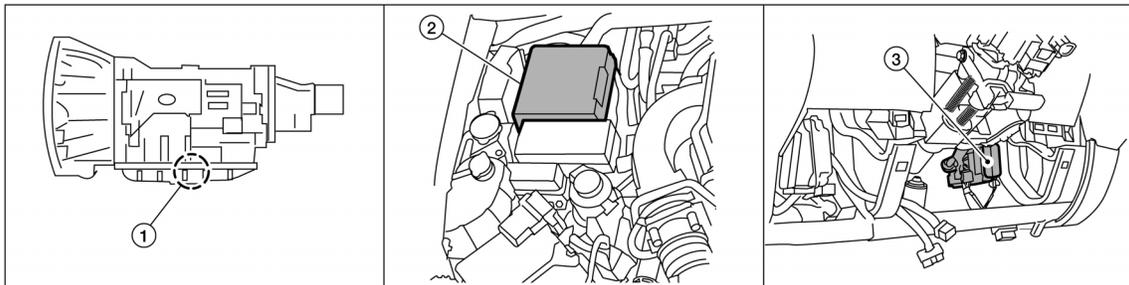

AWBIA1153ZZ

1. A/T assembly F9 (with built in TCM F502)
2. IPDM E/R E119, E120, E122, E124
3. BCM M18 (view with lower instrument panel LH removed)

# STARTING SYSTEM

< SYSTEM DESCRIPTION >

## A/T : Component Description


INFOID:000000009482287

| Component part | Description  |
|----------------|--|
| TCM            | TCM supplies power to the starter relay inside the IPDM E/R when the selector lever is shifted to the P or N position.   |
| BCM            | BCM sends a starter request signal to the CPU of the IPDM E/R over the CAN communication lines.  |
| IPDM E/R       | CPU inside IPDM E/R operates the starter relay at the request of the BCM over the CAN communication lines.   |
| Starter motor  | The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power. |

## M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM

### M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : System Diagram

INFOID:000000009482288

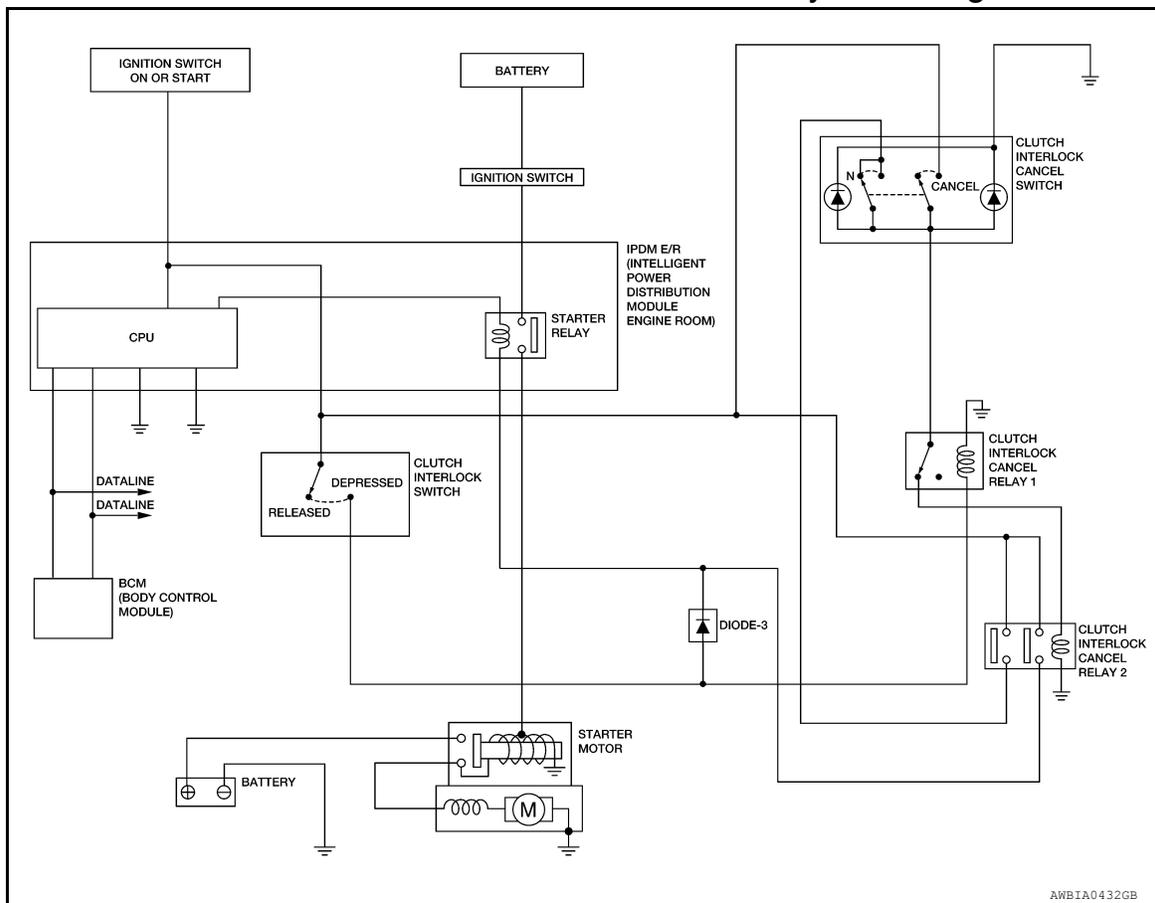

### M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : System Description

INFOID:000000009482289


The clutch interlock cancel (clutch start) switch allows for starting the engine without depressing the clutch pedal by bypassing the clutch interlock switch. The clutch interlock cancel system is canceled once the ignition switch is turned OFF. Once the clutch interlock cancel system is activated, the starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

# STARTING SYSTEM

< SYSTEM DESCRIPTION >

## M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : Component Parts Location

INFOID:000000009482290

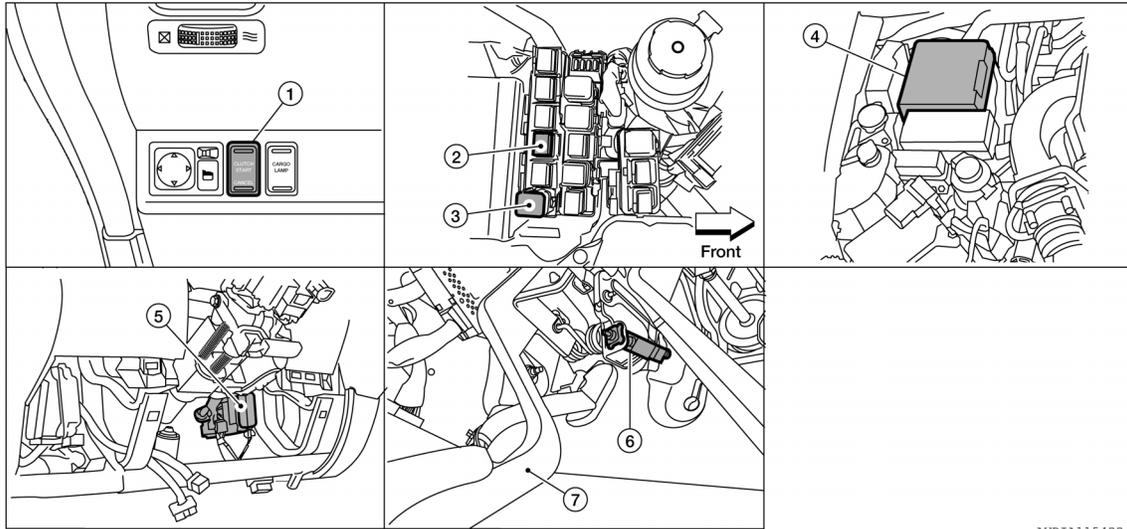

AMBIA11542Z

1. Clutch interlock cancel switch M163
2. Clutch interlock cancel relay 1 E171
3. Clutch interlock cancel relay 2 E166
4. IPDM E/R E119, E120, E122, E124
5. BCM M18 (view with lower instrument panel LH removed)
6. Clutch interlock switch E163
7. Clutch pedal

## M/T WITH CLUTCH INTERLOCK CANCEL SYSTEM : Component Description

INFOID:000000009482291

| Component part                 | Description  |
|--------------------------------|--|
| Clutch interlock switch        | Clutch interlock switch supplies power to the coil side of the starter relay when the clutch pedal is depressed to crank the engine.   |
| Clutch interlock cancel switch | Clutch interlock cancel switch bypasses the clutch interlock switch and supplies power to the coil side of the starter relay to crank the engine without the clutch pedal being depressed. |
| BCM                            | BCM sends a starter request signal to the CPU of the IPDM E/R over the CAN communication lines.  |
| IPDM E/R                       | CPU inside IPDM E/R operates the starter relay at the request of the BCM over the CAN communication lines.   |
| Starter motor                  | The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power.                     |


## M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM

# STARTING SYSTEM

< SYSTEM DESCRIPTION >

## M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : System Diagram

INFOID:000000009482292

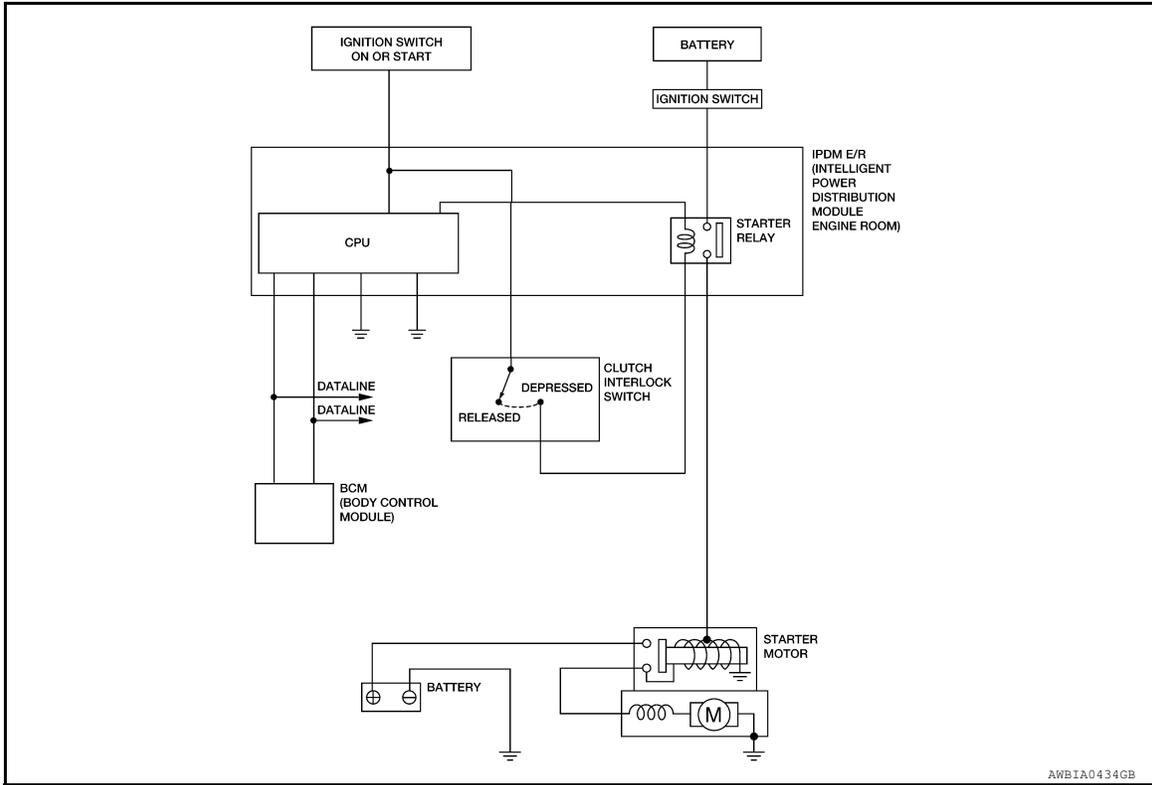

STR

C

D

E

F

G

H

I


## M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : System Description

INFOID:000000009482293

The starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

## M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : Component Parts Location

INFOID:000000009482294

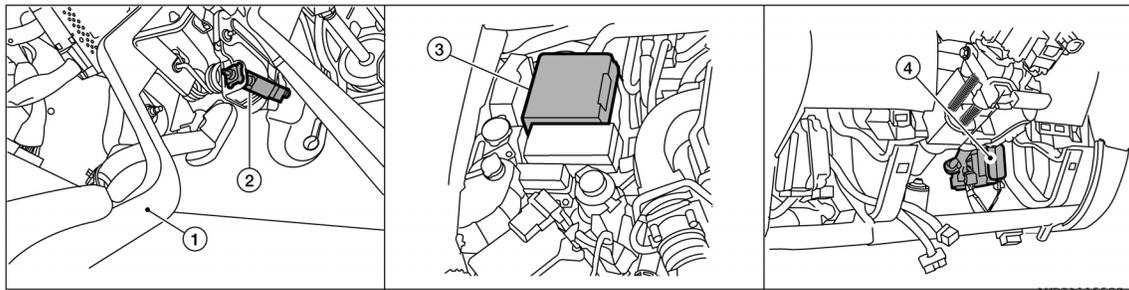

L

M

N

O

P

1. Clutch pedal

2. Clutch interlock switch E169

3. IPDM E/R E119, E120, E122, E124

4. BCM M18 (view with lower instrument panel LH removed)

# STARTING SYSTEM

< SYSTEM DESCRIPTION >

## M/T WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM : Component Description

INFOID:000000009482295

| Component part          | Description  |
|-------------------------|--|
| Clutch interlock switch | Clutch interlock switch supplies power to the coil side of the starter relay when the clutch pedal is depressed to crank the engine.                                   |
| BCM                     | BCM sends a starter request signal to the CPU of the IPDM E/R over the CAN communication lines.  |
| IPDM E/R                | CPU inside IPDM E/R operates the starter relay at the request of the BCM over the CAN communication lines.   |
| Starter motor           | The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the "S" terminal is supplied with electric power. |

# B TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### B TERMINAL CIRCUIT

#### Description

INFOID:000000009482296

STR

Terminal "B" is constantly supplied with battery power.

#### Diagnosis Procedure

INFOID:000000009482297

Regarding Wiring Diagram information, refer to [STR-20. "Wiring Diagram - VQ40DE With Clutch Interlock Cancel System"](#), [STR-26. "Wiring Diagram - VQ40DE Without Clutch Interlock Cancel System"](#) or [STR-30. "Wiring Diagram - QR25DE"](#).

#### CAUTION:

Perform diagnosis under the condition that the engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

#### 1. CHECK "B" TERMINAL CIRCUIT

1. Turn ignition switch OFF.
2. Check that starter motor "B" terminal connection is clean and tight.
3. Check voltage between starter motor connector E210 and ground.

| Terminals                  |          |        | Voltage (Approx.) |
|----------------------------|----------|--------|-------------------|
| (+)                        | (-)      |        |                   |
| Starter motor "B" terminal | Terminal |        | Battery voltage   |
| E210                       | 2        |        |                   |
|                            |          | Ground |                   |

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check harness between battery and starter motor for open circuit.

#### 2. CHECK BATTERY CABLE CONNECTION STATUS (VOLTAGE DROP TEST)

1. Shift selector lever to P (Park) or N (Neutral) position.
2. Check voltage between battery positive terminal and starter motor B terminal.

| Terminals                 |                            |          | Condition                                     | Voltage (Approx.) |
|---------------------------|----------------------------|----------|---|-------------------|
| (+)                       | (-)                        |          |   |                   |
|                           | Starter motor "B" terminal | Terminal | When the ignition switch is in START position | Less than 0.5V    |
| Battery positive terminal | E210                       | 2        |   |                   |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness between the battery and starter motor for continuity.

#### 3. CHECK GROUND CIRCUIT STATUS (VOLTAGE DROP TEST)

1. Shift selector lever to P (Park) or N (Neutral) position.
2. Check voltage between starter motor case and battery negative terminal.

| Terminals          |                           | Condition                                     | Voltage (Approx.) |
|--------------------|---------------------------|---|-------------------|
| (+)                | (-)                       |   |                   |
| Starter motor case | Battery negative terminal | When the ignition switch is in START position | Less than 0.2V    |

Is the inspection result normal?

## B TERMINAL CIRCUIT

### < DTC/CIRCUIT DIAGNOSIS >

---

- YES >> "B" terminal circuit is OK. Further inspection is necessary. Refer to [STR-6, "Work Flow \(With GR8-1200 NI\)"](#) or [STR-10, "Work Flow \(Without GR8-1200 NI\)"](#).
- NO >> Check the starter motor case to engine mounting for high resistance.

# S CONNECTOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## S CONNECTOR CIRCUIT

### Description

INFOID:000000009482298

The starter motor magnetic switch is supplied with power when the ignition switch is turned to the START position while the selector lever is in the P (Park) or N (Neutral) position.

### Diagnosis Procedure

INFOID:000000009482299

Regarding Wiring Diagram information, refer to [STR-20, "Wiring Diagram - VQ40DE With Clutch Interlock Cancel System"](#), [STR-26, "Wiring Diagram - VQ40DE Without Clutch Interlock Cancel System"](#) or [STR-30, "Wiring Diagram - QR25DE"](#).

#### CAUTION:

Perform diagnosis under the condition that engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

#### 1. CHECK "S" CONNECTOR CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect starter motor connector.
3. Shift selector lever to "P" (Park) or "N" (Neutral) position.
4. Check voltage between starter motor harness connector E211 (QR25DE) or E207 (VQ40DE) and ground.

| (+)           |          | (-)    | Condition                                     | Voltage (Approx.) |
|---------------|----------|--------|---|-------------------|
| Connector     | Terminal |        |   |                   |
| E211 (QR25DE) | 1        | Ground | When the ignition switch is in START position | Battery voltage   |
| E207 (VQ40DE) |          |        |   |                   |

Is the inspection result normal?

YES >> "S" circuit is OK. Further inspection is necessary. Refer to [STR-6, "Work Flow \(With GR8-1200 NI\)"](#) or [STR-10, "Work Flow \(Without GR8-1200 NI\)"](#).

NO >> GO TO 2.

#### 2. CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect IPDM E/R connector.
2. Check continuity between starter motor harness connector E211 (QR25DE) or E207 (VQ40DE) and the IPDM E/R harness connector E120.

| Starter motor harness connector |          | IPDM E/R harness connector |          | Continuity |
|---------------------------------|----------|----------------------------|----------|------------|
| Connector                       | Terminal | Connector                  | Terminal |            |
| E211 (QR25DE)                   | 1        | E120                       | 19       | Yes        |
| E207 (VQ40DE)                   |          |                            |          |            |

Is the inspection result normal?


YES >> Further inspection is necessary. Refer to [STR-6, "Work Flow \(With GR8-1200 NI\)"](#) or [STR-10, "Work Flow \(Without GR8-1200 NI\)"](#).

NO >> Repair or replace the harness or connectors.



# STARTING SYSTEM

< WIRING DIAGRAM >

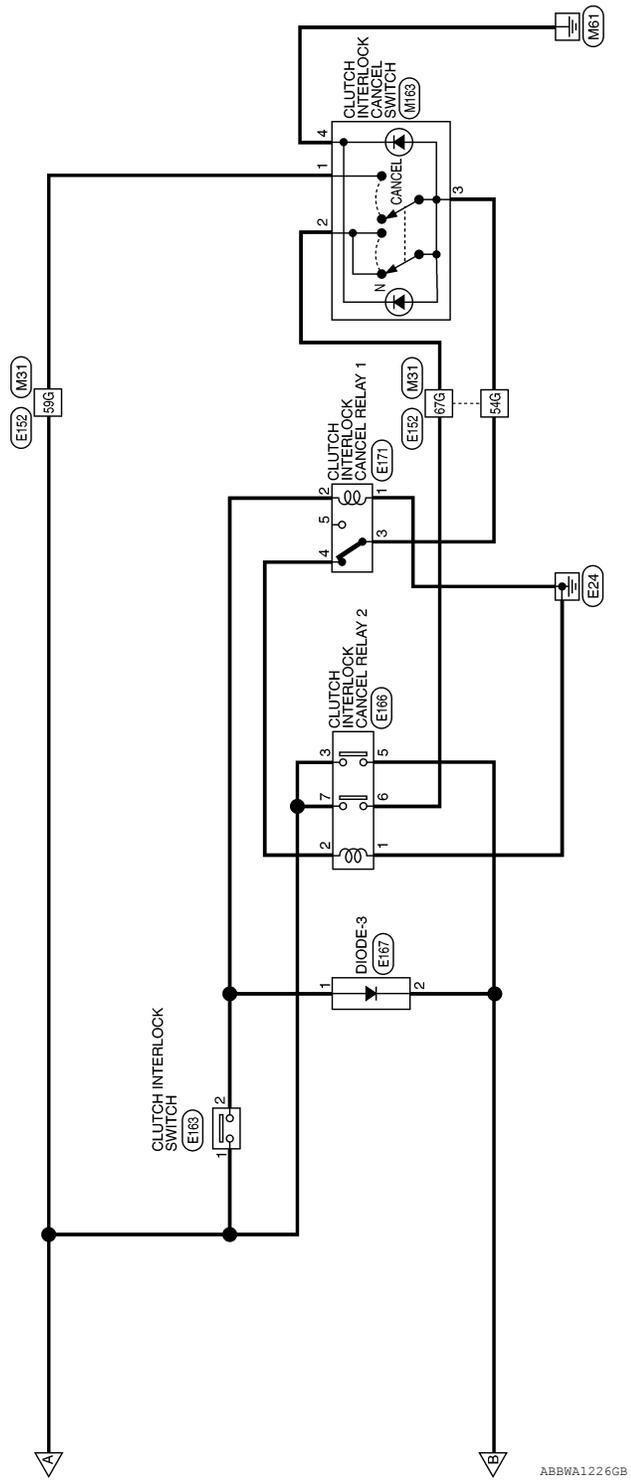

ABBWA1226GB

A

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

# STARTING SYSTEM

< WIRING DIAGRAM >

## STARTING SYSTEM CONNECTORS - VQ40DE WITH CLUTCH INTERLOCK CANCEL SYSTEM

|                 |              |
|-----------------|--------------|
| Connector No.   | M6           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |




|                 |                 |
|-----------------|-----------------|
| Connector No.   | M26             |
| Connector Name  | IGNITION SWITCH |
| Connector Color | WHITE           |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3            | GR            | -           |
| 4            | G             | -           |


| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| B            | G             | -           |
| ST           | GR            | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | M31          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

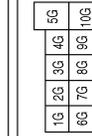


| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 54G          | BG            | -           |
| 59G          | W/G           | -           |
| 67G          | Y             | -           |

|                 |                                |
|-----------------|--------------------------------|
| Connector No.   | M163                           |
| Connector Name  | CLUTCH INTERLOCK CANCEL SWITCH |
| Connector Color | WHITE                          |

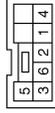

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | W/G           | -           |
| 2            | Y             | -           |
| 3            | BG            | -           |
| 4            | B             | -           |

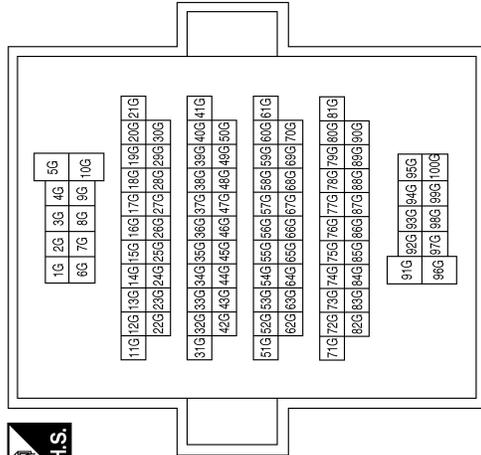

ABBIA2091GB

# STARTING SYSTEM


< WIRING DIAGRAM >

|                 |              |
|-----------------|--------------|
| Connector No.   | E10          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3            | GR            | -           |
| 4            | G             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | E40          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | GRAY         |

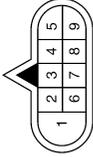


| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | W             | -           |

|                 |  |
|-----------------|--|
| Connector No.   | E119   |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE  |




| Terminal No. | Color of Wire | Signal Name        |
|--------------|---------------|--------------------|
| 14           | W/G           | A/T ECU IGN SUPPLY |

|                 |  |
|-----------------|--|
| Connector No.   | E120   |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE  |

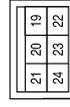

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 19           | W             | STARTER MTR |
| 21           | GR            | IGN SW (ST) |

|                 |  |
|-----------------|--|
| Connector No.   | E122   |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE  |

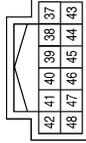

| Terminal No. | Color of Wire | Signal Name  |
|--------------|---------------|--------------|
| 38           | B             | GND (SIGNAL) |
| 39           | L             | CAN-H        |
| 40           | P             | CAN-L        |
| 48           | R             | RANGE SW     |

|                 |  |
|-----------------|--|
| Connector No.   | E124   |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | BLACK  |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 59           | B             | GND (POWER) |

ABBIA0871GB

A  
STR  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# STARTING SYSTEM

< WIRING DIAGRAM >


|                 |   |
|-----------------|---|
| Connector No.   | E163  |
| Connector Name  | CLUTCH INTERLOCK SWITCH (WITH CLUTCH INTERLOCK CANCEL SYSTEM) |
| Connector Color | BLUE  |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | W/G           | -           |
| 2            | L             | -           |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 54G          | BG            | -           |
| 59G          | W/G           | -           |
| 67G          | Y             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | E152         |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

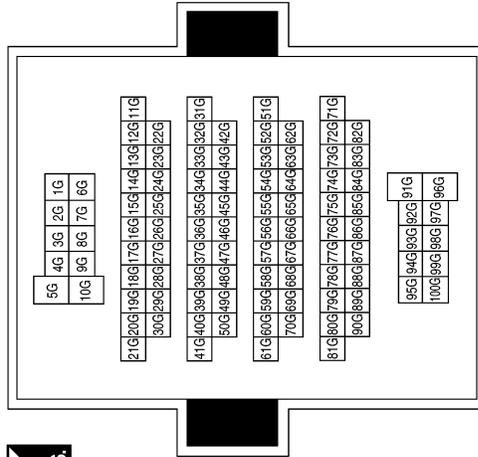

|                 |                                 |
|-----------------|---------------------------------|
| Connector No.   | E171                            |
| Connector Name  | CLUTCH INTERLOCK CANCEL RELAY 1 |
| Connector Color | BLACK                           |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | B             | -           |
| 2            | W             | -           |
| 3            | BG            | -           |
| 4            | R             | -           |

|                 |         |
|-----------------|---------|
| Connector No.   | E167    |
| Connector Name  | DIODE-3 |
| Connector Color | BLACK   |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | L             | -           |
| 2            | R             | -           |

|                 |                                 |
|-----------------|---------------------------------|
| Connector No.   | E166                            |
| Connector Name  | CLUTCH INTERLOCK CANCEL RELAY 2 |
| Connector Color | BROWN                           |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | B             | -           |
| 2            | R             | -           |
| 3            | W/G           | -           |
| 5            | B             | -           |
| 6            | Y             | -           |
| 7            | W/G           | -           |

ABBIA2092GB

# STARTING SYSTEM

< WIRING DIAGRAM >

|                 |                                |
|-----------------|--------------------------------|
| Connector No.   | E207                           |
| Connector Name  | STARTER MOTOR<br>(WITH VQ40DE) |
| Connector Color | GRAY                           |




|              |   |               |   |             |   |
|--------------|---|---------------|---|-------------|---|
| Terminal No. | 1 | Color of Wire | W | Signal Name | - |
|--------------|---|---------------|---|-------------|---|

|                 |                               |
|-----------------|-------------------------------|
| Connector No.   | E204                          |
| Connector Name  | FUSIBLE LINK<br>BOX (BATTERY) |
| Connector Color | -                             |



|              |   |               |     |             |   |
|--------------|---|---------------|-----|-------------|---|
| Terminal No. | 6 | Color of Wire | B/R | Signal Name | - |
|--------------|---|---------------|-----|-------------|---|

|                 |              |
|-----------------|--------------|
| Connector No.   | E201         |
| Connector Name  | WIRE TO WIRE |
| Connector Color | GRAY         |

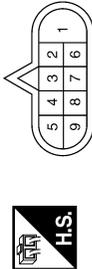

|              |   |               |   |             |   |
|--------------|---|---------------|---|-------------|---|
| Terminal No. | 1 | Color of Wire | W | Signal Name | - |
|--------------|---|---------------|---|-------------|---|

|                 |               |
|-----------------|---------------|
| Connector No.   | E210          |
| Connector Name  | STARTER MOTOR |
| Connector Color | -             |



|              |   |               |     |             |   |
|--------------|---|---------------|-----|-------------|---|
| Terminal No. | 2 | Color of Wire | B/R | Signal Name | - |
|--------------|---|---------------|-----|-------------|---|

ABBIA1561GB

A

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P



# STARTING SYSTEM

< WIRING DIAGRAM >

## STARTING SYSTEM CONNECTORS - VQ40DE WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM

|                 |              |
|-----------------|--------------|
| Connector No.   | M6           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



|   |   |   |
|---|---|---|
| 3 | 2 | 1 |
| 6 | 5 | 4 |

|              |               |             |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 3            | GR            | -           |
| 4            | G             | -           |

|                 |                 |
|-----------------|-----------------|
| Connector No.   | M26             |
| Connector Name  | IGNITION SWITCH |
| Connector Color | WHITE           |



|   |     |    |
|---|-----|----|
| B | ST  | IG |
| R | ACC | IG |

|              |               |             |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| B            | G             | -           |
| ST           | GR            | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | E5           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



|    |    |    |    |    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|----|----|----|----|
| 1  | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | 10 | 11 | 12 |
| 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |

|              |               |             |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 21           | R             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | E10          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



|   |   |   |
|---|---|---|
| 1 | 2 | 3 |
| 4 | 5 | 6 |

|              |               |             |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 3            | GR            | -           |
| 4            | G             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | E40          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | GRAY         |



|   |   |   |   |   |
|---|---|---|---|---|
| 1 | 2 | 3 | 4 | 5 |
| 6 | 7 | 8 | 9 |   |

|              |               |             |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 1            | W             | -           |

|                 |  |
|-----------------|--|
| Connector No.   | E119   |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE  |



|    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|
| 9  | 8  | 7  | 6  | 5  | 4  | 3  |
| 18 | 17 | 16 | 15 | 14 | 13 | 12 |
| 11 | 10 | 9  | 8  | 7  | 6  | 5  |

|              |               |                    |
|--------------|---------------|--------------------|
| Terminal No. | Color of Wire | Signal Name        |
| 14           | W/G           | A/T ECU IGN SUPPLY |

ABBIA0482GB

A  
STR  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# STARTING SYSTEM

< WIRING DIAGRAM >

|                 |  |
|-----------------|--|
| Connector No.   | E124   |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | BLACK  |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 59           | B             | GND (POWER) |

|                 |  |
|-----------------|--|
| Connector No.   | E122   |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE  |



| Terminal No. | Color of Wire | Signal Name  |
|--------------|---------------|--------------|
| 38           | B             | GND (SIGNAL) |
| 39           | L             | CAN-H        |
| 40           | P             | CAN-L        |
| 48           | R             | RANGE SW     |

|                 |  |
|-----------------|--|
| Connector No.   | E120   |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE  |

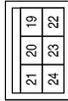


| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 19           | W             | STARTER MTR |
| 21           | GR            | IGN SW (ST) |

|                 |                            |
|-----------------|----------------------------|
| Connector No.   | E204                       |
| Connector Name  | FUSIBLE LINK BOX (BATTERY) |
| Connector Color | -                          |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 6            | B/R           | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | E201         |
| Connector Name  | WIRE TO WIRE |
| Connector Color | GRAY         |

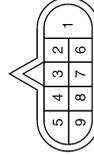

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | W             | -           |

|                 |  |
|-----------------|--|
| Connector No.   | E169   |
| Connector Name  | CLUTCH INTERLOCK SWITCH (WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM) |
| Connector Color | BLUE   |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | W/G           | -           |
| 2            | R             | -           |

ABBIA1218GB

# STARTING SYSTEM

< WIRING DIAGRAM >

|                 |              |
|-----------------|--------------|
| Connector No.   | F9           |
| Connector Name  | A/T ASSEMBLY |
| Connector Color | GREEN        |



|              |   |               |   |             |   |
|--------------|---|---------------|---|-------------|---|
| Terminal No. | 9 | Color of Wire | R | Signal Name | - |
|--------------|---|---------------|---|-------------|---|

|                 |               |
|-----------------|---------------|
| Connector No.   | E210          |
| Connector Name  | STARTER MOTOR |
| Connector Color | -             |




|              |   |               |     |             |   |
|--------------|---|---------------|-----|-------------|---|
| Terminal No. | 2 | Color of Wire | B/R | Signal Name | - |
|--------------|---|---------------|-----|-------------|---|

|                 |                             |
|-----------------|-----------------------------|
| Connector No.   | E207                        |
| Connector Name  | STARTER MOTOR (WITH VQ40DE) |
| Connector Color | GRAY                        |




|              |   |               |   |             |   |
|--------------|---|---------------|---|-------------|---|
| Terminal No. | 1 | Color of Wire | W | Signal Name | - |
|--------------|---|---------------|---|-------------|---|

|                 |                                   |
|-----------------|-----------------------------------|
| Connector No.   | F502                              |
| Connector Name  | TCM (TRANSMISSION CONTROL MODULE) |
| Connector Color | GRAY                              |

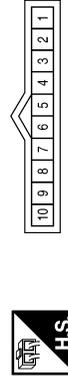

|              |   |               |   |             |           |
|--------------|---|---------------|---|-------------|-----------|
| Terminal No. | 8 | Color of Wire | G | Signal Name | START-RLY |
|--------------|---|---------------|---|-------------|-----------|

|                 |              |
|-----------------|--------------|
| Connector No.   | F14          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

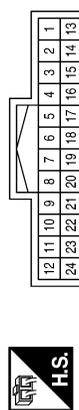

|              |    |               |   |             |   |
|--------------|----|---------------|---|-------------|---|
| Terminal No. | 21 | Color of Wire | R | Signal Name | - |
|--------------|----|---------------|---|-------------|---|

ABBIA1562GB

A  
STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

# STARTING SYSTEM


< WIRING DIAGRAM >

## Wiring Diagram - QR25DE

INFOID:00000009482302

⬡ : WITH A/T  
 ⬢ : WITH M/T

### STARTING SYSTEM - QR25DE

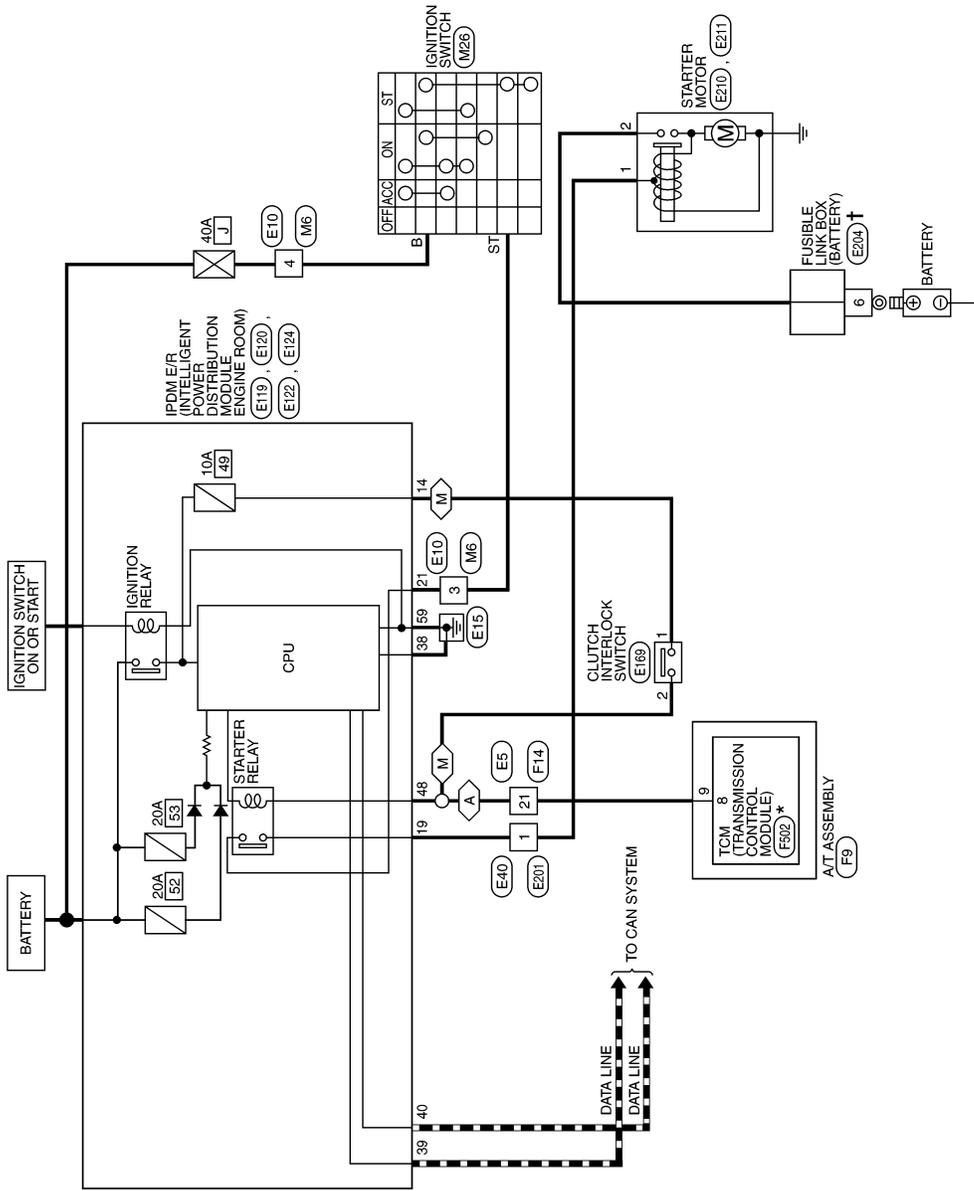

\*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT" OF PG SECTION.  
 †: THIS CONNECTOR IS AN INTEGRAL PART OF THE FUSIBLE LINK BOX (BATTERY).

ABBWA0974GB

# STARTING SYSTEM

< WIRING DIAGRAM >

## STARTING SYSTEM CONNECTORS - QR25DE

|                 |              |
|-----------------|--------------|
| Connector No.   | M6           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

|   |   |   |
|---|---|---|
| 3 | 2 | 1 |
| 6 | 5 | 4 |



|              |               |             |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 3            | GR            | -           |
| 4            | G             | -           |

|                 |                 |
|-----------------|-----------------|
| Connector No.   | M26             |
| Connector Name  | IGNITION SWITCH |
| Connector Color | WHITE           |

|   |     |    |
|---|-----|----|
| B | ST  | IG |
| R | ACC | R2 |



|              |               |             |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| B            | G             | -           |
| ST           | GR            | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | E5           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

|    |    |    |    |    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|----|----|----|----|
| 1  | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | 10 | 11 | 12 |
| 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |



|              |               |             |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 21           | R             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | E10          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

|   |   |   |
|---|---|---|
| 1 | 2 | 3 |
| 4 | 5 | 6 |



|              |               |             |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 3            | GR            | -           |
| 4            | G             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | E40          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | GRAY         |

|   |   |   |   |   |
|---|---|---|---|---|
| 1 | 2 | 3 | 4 | 5 |
| 6 | 7 | 8 | 9 |   |



|              |               |             |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 1            | W             | -           |

|                 |  |
|-----------------|--|
| Connector No.   | E119   |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE  |

|    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|
| 9  | 8  | 7  | 6  | 5  | 4  | 3  |
| 18 | 17 | 16 | 15 | 14 | 13 | 12 |
| 11 | 10 |    |    |    |    |    |



|              |               |                    |
|--------------|---------------|--------------------|
| Terminal No. | Color of Wire | Signal Name        |
| 14           | W/G           | A/T ECU IGN SUPPLY |

A  
STR  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# STARTING SYSTEM

< WIRING DIAGRAM >

|                 |  |
|-----------------|--|
| Connector No.   | E124   |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | BLACK  |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 59           | B             | GND (POWER) |

|                 |  |
|-----------------|--|
| Connector No.   | E122   |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE  |



| Terminal No. | Color of Wire | Signal Name  |
|--------------|---------------|--------------|
| 38           | B             | GND (SIGNAL) |
| 39           | L             | CAN-H        |
| 40           | P             | CAN-L        |
| 48           | R             | RANGE SW     |

|                 |  |
|-----------------|--|
| Connector No.   | E120   |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE  |

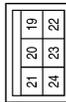


| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 19           | W             | STARTER MTR |
| 21           | GR            | IGN SW (ST) |

|                 |                            |
|-----------------|----------------------------|
| Connector No.   | E204                       |
| Connector Name  | FUSIBLE LINK BOX (BATTERY) |
| Connector Color | -                          |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 6            | B/R           | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | E201         |
| Connector Name  | WIRE TO WIRE |
| Connector Color | GRAY         |

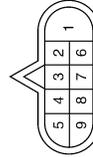

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | W             | -           |

|                 |  |
|-----------------|--|
| Connector No.   | E169   |
| Connector Name  | CLUTCH INTERLOCK SWITCH (WITHOUT CLUTCH INTERLOCK CANCEL SYSTEM) |
| Connector Color | BLUE   |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | W/G           | -           |
| 2            | R             | -           |

ABBIA1212GB

# STARTING SYSTEM

< WIRING DIAGRAM >

|                 |              |
|-----------------|--------------|
| Connector No.   | F9           |
| Connector Name  | A/T ASSEMBLY |
| Connector Color | GREEN        |

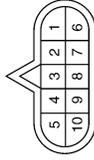

|              |   |               |   |             |   |
|--------------|---|---------------|---|-------------|---|
| Terminal No. | 9 | Color of Wire | R | Signal Name | - |
|--------------|---|---------------|---|-------------|---|

|                 |                             |
|-----------------|-----------------------------|
| Connector No.   | E211                        |
| Connector Name  | STARTER MOTOR (WITH QR25DE) |
| Connector Color | GRAY                        |




|              |   |               |   |             |   |
|--------------|---|---------------|---|-------------|---|
| Terminal No. | 1 | Color of Wire | W | Signal Name | - |
|--------------|---|---------------|---|-------------|---|

|                 |               |
|-----------------|---------------|
| Connector No.   | E210          |
| Connector Name  | STARTER MOTOR |
| Connector Color | -             |




|              |   |               |     |             |   |
|--------------|---|---------------|-----|-------------|---|
| Terminal No. | 2 | Color of Wire | B/R | Signal Name | - |
|--------------|---|---------------|-----|-------------|---|

|                 |                                   |
|-----------------|-----------------------------------|
| Connector No.   | F502                              |
| Connector Name  | TCM (TRANSMISSION CONTROL MODULE) |
| Connector Color | GRAY                              |

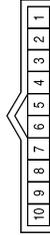

|              |   |               |   |             |           |
|--------------|---|---------------|---|-------------|-----------|
| Terminal No. | 8 | Color of Wire | G | Signal Name | START-RLY |
|--------------|---|---------------|---|-------------|-----------|

|                 |              |
|-----------------|--------------|
| Connector No.   | F14          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

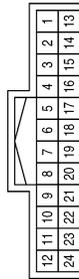

|              |    |               |   |             |   |
|--------------|----|---------------|---|-------------|---|
| Terminal No. | 21 | Color of Wire | R | Signal Name | - |
|--------------|----|---------------|---|-------------|---|

ABBIA1560GB

A  
STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

# STARTING SYSTEM

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### STARTING SYSTEM

#### Symptom Table

INFOID:000000009482303

| Symptom                       | Reference  |
|-------------------------------|--|
| No normal cranking            | Refer to <a href="#">STR-6. "Work Flow (With GR8-1200 NI)"</a> or <a href="#">STR-10. "Work Flow (Without GR8-1200 NI)".</a> |
| Starter motor does not rotate |  |

# STARTER MOTOR

< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION


### STARTER MOTOR

Removal and Installation (QR25DE)

INFOID:000000009482304

A

STR

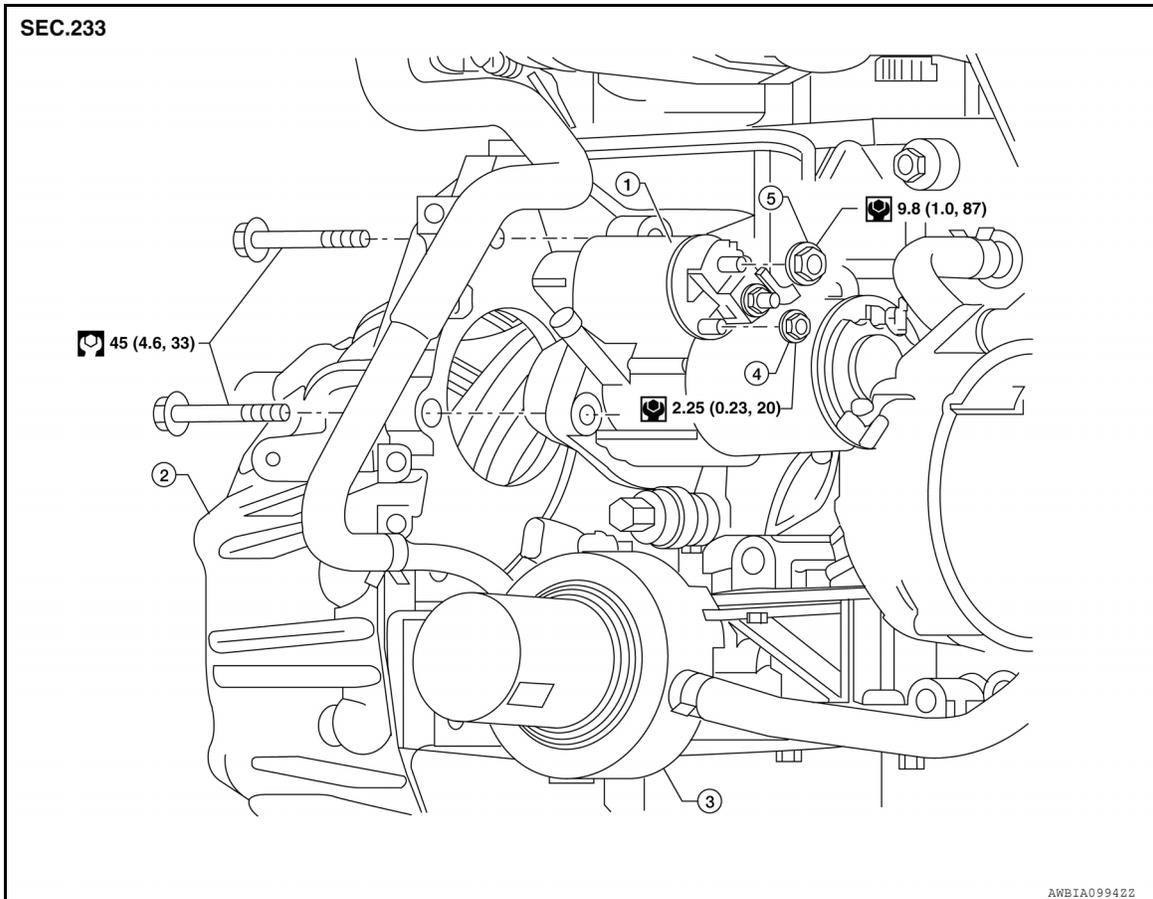

C

D

E

F

G

H

I

J

K

- |                           |                         |                      |
|---------------------------|-------------------------|----------------------|
| 1. Starter motor assembly | 2. Transmission housing | 3. Engine oil cooler |
| 4. Terminal "1" (S) nut   | 5. Terminal "2" (B) nut |                      |

L

#### REMOVAL

1. Disconnect the negative battery terminal. Refer to [PG-83. "Removal and Installation"](#).
2. Remove the air cleaner cover and the air cleaner to intake manifold collector duct. Refer to [EM-25. "Exploded View"](#).
3. Remove terminal "1" (S) and terminal "2" (B) nuts.
4. Remove the two starter motor bolts, using power tools.
5. Remove the starter motor.

M

N

#### INSTALLATION

Installation is in the reverse order of removal.

#### **CAUTION:**

**Be sure to tighten terminal nuts carefully.**

O


P

# STARTER MOTOR

< REMOVAL AND INSTALLATION >

## Removal and Installation (VQ40DE)


INFOID:000000009482305

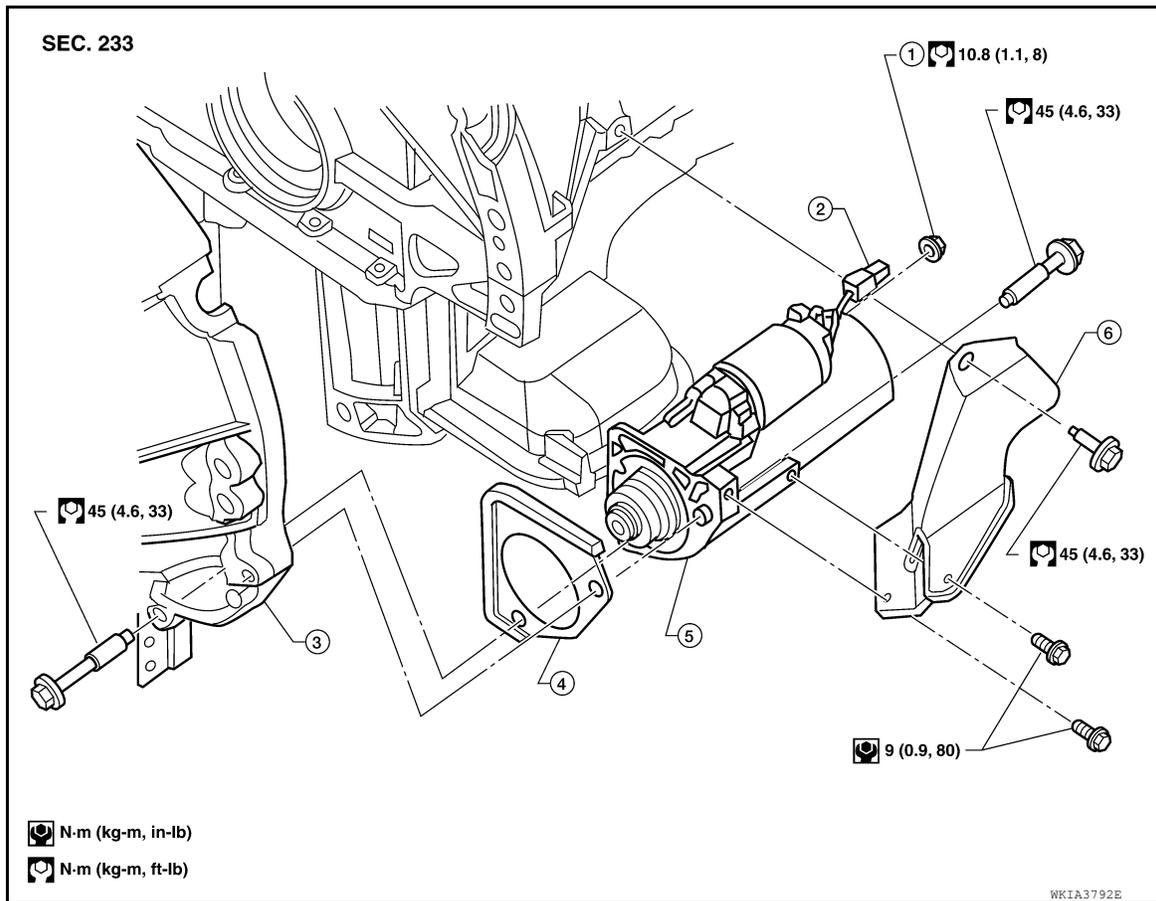

- |                               |                               |                         |
|-------------------------------|-------------------------------|-------------------------|
| 1. Terminal "2" (B) nut       | 2. Terminal "1" (S) connector | 3. Transmission housing |
| 4. Starter cover plate (rear) | 5. Starter motor assembly     | 6. Starter cover        |

### REMOVAL

1. Disconnect the negative battery terminal. Refer to [PG-83, "Removal and Installation"](#).
2. Remove starter cover bolts and starter cover.
3. Disconnect terminal "1" (S) connector and remove terminal "2" (B) nut.
4. Remove the two starter motor bolts, using power tools.
5. Remove the starter motor.

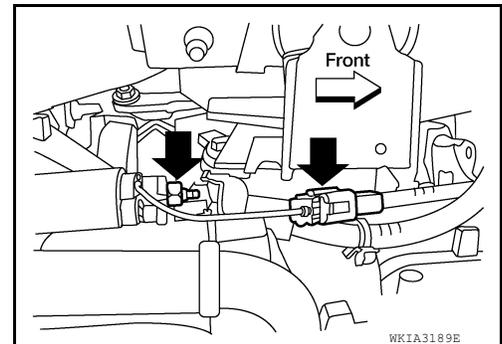

### INSTALLATION

Installation is in the reverse order of removal.

#### **CAUTION:**

**Be sure to tighten terminal "2" nut carefully.**

# STARTER MOTOR

< SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

### STARTER MOTOR

#### Starter

INFOID:000000009482306

A

STR

|                |                  |                          |                          |
|----------------|------------------|--------------------------|--------------------------|
| Application    |                  | QR25DE                   | VQ40DE                   |
| Type*          |                  | Mitsubishi<br>M000T88281 | Mitsubishi<br>M001TA0072 |
|                |                  | Reduction gear type      |                          |
| System voltage |                  | 12V                      |                          |
|                | Terminal voltage | 11V                      |                          |
| No-load        | Current          | Less than 90A            | Less than 120A           |
|                | Revolution       | More than 2,800 rpm      | More than 3,100 rpm      |

C

D

E

\*: Always check with the Parts Department for the latest parts information.

F

G

H

I

J

K

L

M

N

O

P