

SECTION **INL**

INTERIOR LIGHTING SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONTENTS

<p>BASIC INSPECTION 3</p> <p>DIAGNOSIS AND REPAIR WORKFLOW 3</p> <p style="padding-left: 20px;">Work Flow3</p> <p>SYSTEM DESCRIPTION 5</p> <p>INTERIOR ROOM LAMP CONTROL SYSTEM</p> <p style="text-align: right;">..... 5</p> <p style="padding-left: 20px;">System Diagram5</p> <p style="padding-left: 20px;">System Description5</p> <p style="padding-left: 20px;">Component Parts Location7</p> <p style="padding-left: 20px;">Component Description7</p> <p>INTERIOR ROOM LAMP BATTERY SAVER SYSTEM 8</p> <p style="padding-left: 20px;">System Diagram8</p> <p style="padding-left: 20px;">System Description8</p> <p style="padding-left: 20px;">Component Parts Location9</p> <p style="padding-left: 20px;">Component Description9</p> <p>ILLUMINATION CONTROL SYSTEM10</p> <p style="padding-left: 20px;">System Diagram10</p> <p style="padding-left: 20px;">System Description10</p> <p style="padding-left: 20px;">Component Parts Location11</p> <p style="padding-left: 20px;">Component Description11</p> <p>DIAGNOSIS SYSTEM (BCM)12</p> <p>COMMON ITEM12</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)12</p> <p>INT LAMP13</p> <p style="padding-left: 20px;">INT LAMP : CONSULT-III Function (BCM - INT LAMP)14</p> <p>BATTERY SAVER15</p> <p style="padding-left: 20px;">BATTERY SAVER : CONSULT-III Function (BCM - BATTERY SAVER)15</p> <p>DTC/CIRCUIT DIAGNOSIS17</p>	<p>POWER SUPPLY AND GROUND CIRCUIT17</p> <p>BCM17</p> <p style="padding-left: 20px;">BCM : Diagnosis Procedure17</p> <p>INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT18</p> <p style="padding-left: 20px;">Description18</p> <p style="padding-left: 20px;">Component Function Check18</p> <p style="padding-left: 20px;">Diagnosis Procedure18</p> <p>INTERIOR ROOM LAMP CONTROL CIRCUIT20</p> <p style="padding-left: 20px;">Description20</p> <p style="padding-left: 20px;">Component Function Check20</p> <p style="padding-left: 20px;">Diagnosis Procedure20</p> <p>STEP LAMP CIRCUIT22</p> <p style="padding-left: 20px;">Description22</p> <p style="padding-left: 20px;">Component Function Check22</p> <p style="padding-left: 20px;">Diagnosis Procedure22</p> <p>TRUNK ROOM LAMP CIRCUIT24</p> <p style="padding-left: 20px;">Description24</p> <p style="padding-left: 20px;">Component Function Check24</p> <p style="padding-left: 20px;">Diagnosis Procedure24</p> <p>PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT26</p> <p style="padding-left: 20px;">Description26</p> <p style="padding-left: 20px;">Component Function Check26</p> <p style="padding-left: 20px;">Diagnosis Procedure26</p> <p>INTERIOR ROOM LAMP CONTROL SYSTEM28</p> <p style="padding-left: 20px;">Wiring Diagram - INTERIOR ROOM LAMP -28</p> <p>ILLUMINATION36</p> <p style="padding-left: 20px;">Wiring Diagram - ILLUMINATION -36</p> <p>ECU DIAGNOSIS INFORMATION46</p>
--	--



BCM (BODY CONTROL MODULE)	46	Exploded View	98
Reference Value	46	Replacement	98
Wiring Diagram - BCM -	70	CIGARETTE LIGHTER ILLUMINATION	99
Fail-safe	75	Exploded View	99
DTC Inspection Priority Chart	77	Replacement	99
DTC Index	79	GLOVE BOX LAMP	100
COMBINATION METER	81	Exploded View	100
Reference Value	81	Replacement	100
Wiring Diagram - METER -	84	STEP LAMP	101
Fail-safe	93	Exploded View	101
DTC Index	94	Removal and Installation	101
SYMPTOM DIAGNOSIS	95	Replacement	101
INTERIOR LIGHTING SYSTEM SYMPTOMS ...	95	PERSONAL LAMP	102
Symptom Table	95	Exploded View	102
PRECAUTION	96	Removal and Installation	102
PRECAUTIONS	96	Replacement	103
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	96	TRUNK ROOM LAMP	104
REMOVAL AND INSTALLATION	97	Exploded View	104
MAP LAMP	97	Removal and Installation	104
Exploded View	97	Replacement	104
Removal and Installation	97	SERVICE DATA AND SPECIFICATIONS (SDS)	105
Replacement	97	SERVICE DATA AND SPECIFICATIONS (SDS)	105
VANITY MIRROR LAMP	98	Bulb Specifications	105

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000001835866

OVERALL SEQUENCE

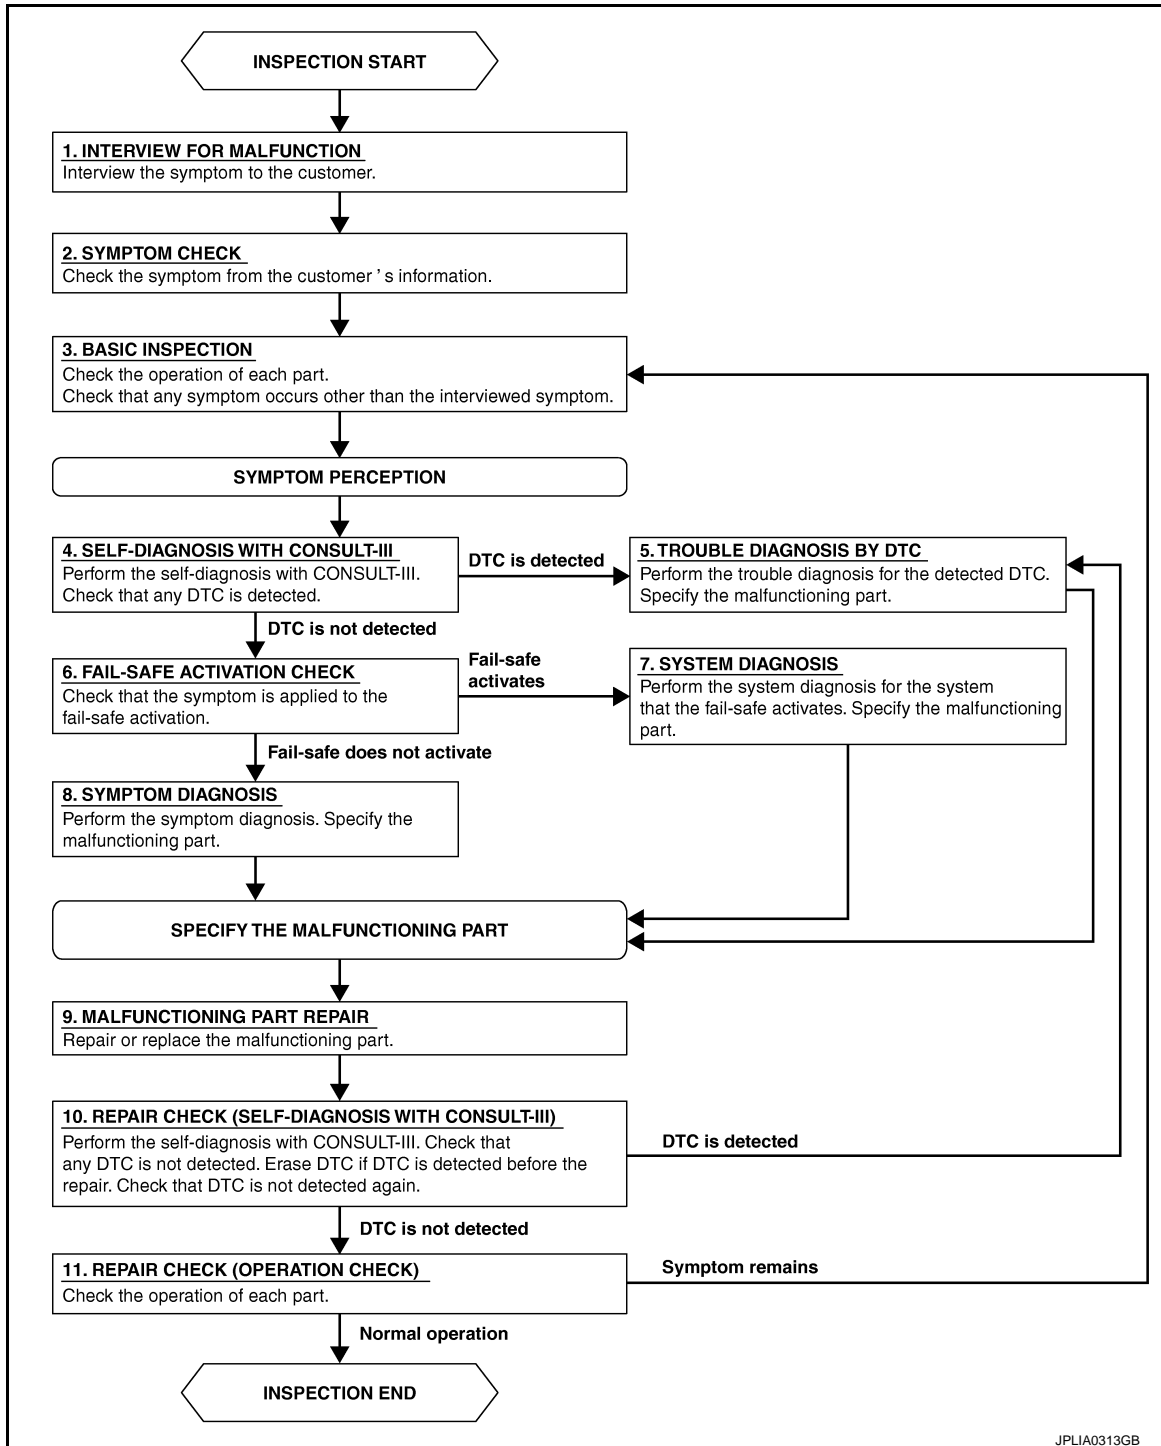

DETAILED FLOW

1. INTERVIEW FOR MALFUNCTION

Interview the symptom to the customer.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

>> GO TO 2.

2. SYMPTOM CHECK

Check the symptom from the customer's information.

>> GO TO 3.

3. BASIC INSPECTION

Check the operation of each part. Check that any symptom occurs other than the interviewed symptom.

>> GO TO 4.

4. SELF-DIAGNOSIS WITH CONSULT-III

Perform the self-diagnosis with CONSULT-III. Check that any DTC is detected.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 6.

5. TROUBLE DIAGNOSIS BY DTC

Perform the trouble diagnosis for the detected DTC. Specify the malfunctioning part.

>> GO TO 9.

6. FAIL-SAFE ACTIVATION CHECK

Check that the symptom is applied to the fail-safe activation.

Does the fail-safe activate?

YES >> GO TO 7.

NO >> GO TO 8.

7. SYSTEM DIAGNOSIS

Perform the system diagnosis for the system that the fail-safe activates. Specify the malfunctioning part.

>> GO TO 9.

8. SYMPTOM DIAGNOSIS

Perform the symptom diagnosis. Specify the malfunctioning part.

>> GO TO 9.

9. MALFUNCTION PART REPAIR

Repair or replace the malfunctioning part.

>> GO TO 10.

10. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT-III)

Perform the self-diagnosis with CONSULT-III. Check that any DTC is not detected. Erase DTC if DTC is detected before the repair. Check that DTC is not detected again.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 11.

11. REPAIR CHECK (OPERATION CHECK)

Check the operation of each part.

Does it operate normally?

YES >> INSPECTION END

NO >> GO TO 3.


INTERIOR ROOM LAMP CONTROL SYSTEM

< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

INTERIOR ROOM LAMP CONTROL SYSTEM

System Diagram

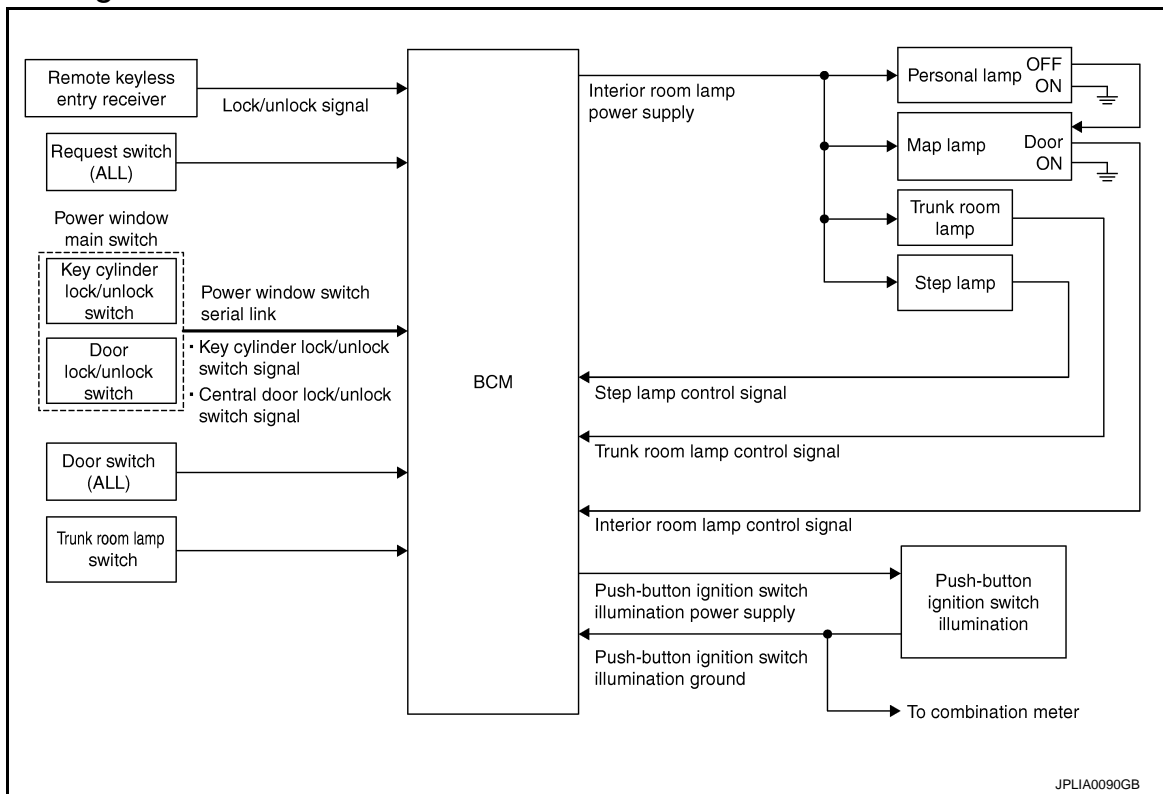

System Description


INFOID:000000001835868

OUTLINE

- Interior room lamps* are controlled by interior room lamp timer control function of BCM.
- *: Map lamp and personal lamp (when map lamp switch is in DOOR position).
- Trunk room lamp is controlled by trunk room lamp control function of BCM.
- Step lamp is controlled by step lamp control function of BCM.
- Push-button ignition switch illumination is controlled by the push-button ignition switch illumination control function of BCM.

INTERIOR ROOM LAMP TIMER CONTROL

Interior Room Lamp Timer Basic Operation

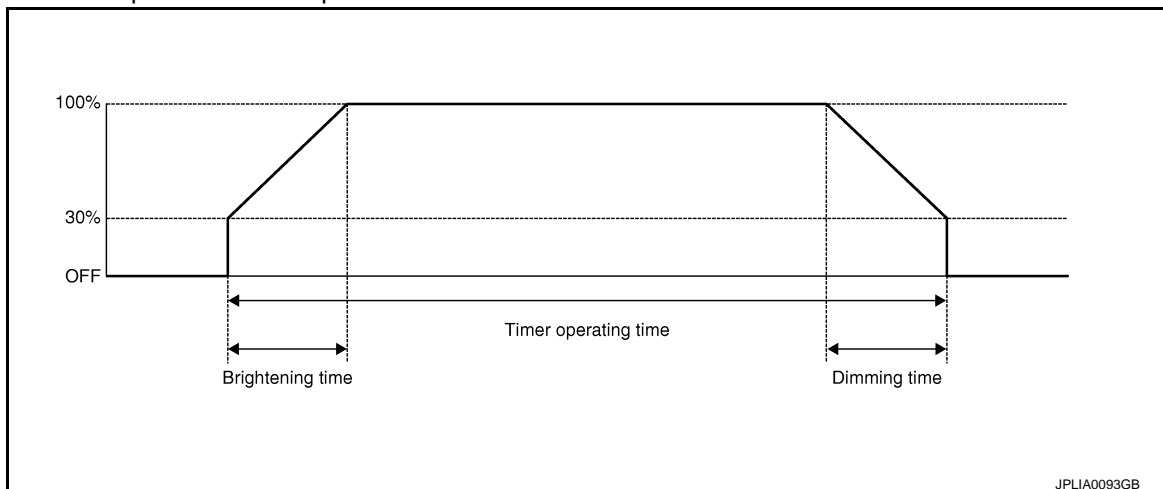

INTERIOR ROOM LAMP CONTROL SYSTEM

< SYSTEM DESCRIPTION >

- The interior room lamp turns ON and OFF (gradual brightening and dimming) by the interior room timer.
- BCM judges the vehicle condition with the following items. It activates the interior room timer.
 - Ignition switch status
 - Door switch signal (ALL)
 - Door lock/unlock signal (Remote keyless entry receiver, each request switch, key cylinder lock/unlock switch, central door lock/unlock switch)

NOTE:

Each function of interior room lamp timer can be set by CONSULT-III. Refer to [INL-14, "INT LAMP : CONSULT-III Function \(BCM - INT LAMP\)"](#).

Interior Room Lamp ON Operation

- BCM always turns the interior room lamp ON when any door opens.
- BCM activates the interior room timer in any of the following conditions to turn the interior room lamp ON for a period of time.
 - Any door opens before all doors close.
 - Ignition switch is turned ON → OFF.
 - Any door unlock signal is detected when all doors close with ignition switch OFF.

NOTE:

Restart the timer if new condition is input during the timer operating time.

Interior Room Lamp OFF Operation

BCM stops the timer in any of the following conditions to turn the interior room lamp OFF.

- The timer operating time is expired.
- Ignition switch position is other than OFF with all doors close.
- Any door lock operation is detected with all doors close.

TRUNK ROOM LAMP CONTROL

BCM controls the trunk room lamp (ground-side) to turn ON with the trunk room lamp switch ON.

STEP LAMP CONTROL

BCM controls the step lamp (ground-side) to turn ON with any door switch ON.

PUSH-BUTTON IGNITION SWITCH ILLUMINATION CONTROL

Push-button Ignition Switch Illumination Basic Operation

- BCM provides the power supply and the ground to turn the push-button ignition switch illumination ON.
- BCM cuts the ground supply while the each illumination (tail lamp) ON. BCM switches to the ground control with the meter illumination control function.

Push-button Ignition Switch Illumination ON Operation

BCM turns the push-button ignition switch illumination ON in the following conditions.

- Ignition switch ON
- Each illumination (tail lamp) ON
- Any of the following conditions with ignition switch OFF
 - Engine start permission is entered.
 - Intelligent Key inserted into the key slot.
 - Driver door is LOCK → UNLOCK.
 - Driver door is open.

Push-button Ignition Switch Illumination OFF Operation

BCM turns the push-button ignition switch illumination OFF in any of the following conditions.


- The push-button ignition switch illumination ON conditions do not satisfy.
- All of the following conditions with ignition switch OFF
 - Each illumination (tail lamp) OFF
 - The push-button ignition switch illumination ON conditions do not change (15 seconds after the ignition switch OFF) or the driver door is UNLOCK → LOCK.

INTERIOR ROOM LAMP CONTROL SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000001835869

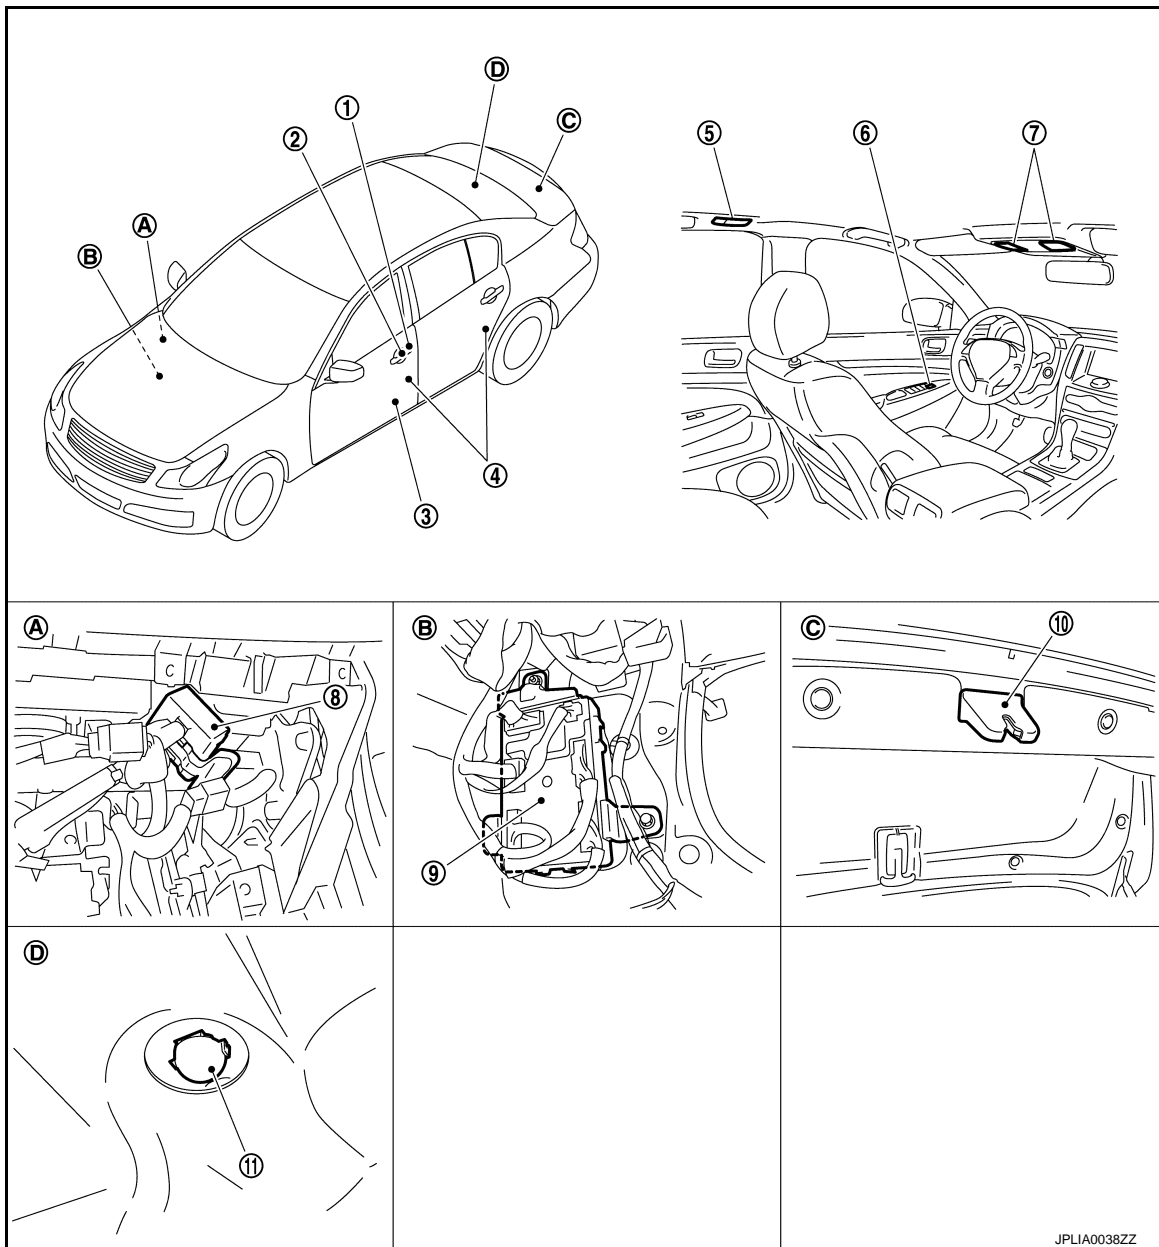

- | | | |
|----------------------------|-------------------------------------|-----------------------------|
| 1. Key cylinder switch | 2. Request switch | 3. Step lamp |
| 4. Door switch | 5. Personal lamp | 6. Central door lock switch |
| 7. Map lamp | 8. Remote keyless entry receiver | 9. BCM |
| 10. Trunk room lamp switch | 11. Trunk room lamp | |
| A. Behind glove box | B. Dash side lower (Passenger side) | C. Trunk lid lock assembly |
| D. Trunk room upward | | |

Component Description

INFOID:000000001835870

Part	Description
BCM	<ul style="list-style-type: none"> Activates the interior room lamp timer depending on the vehicle condition to turn the interior room lamp ON/OFF. Turns the trunk room lamp ON /OFF according to the trunk room lamp switch status. Turns the step lamp ON /OFF according to any door switch status.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

INL


INTERIOR ROOM LAMP BATTERY SAVER SYSTEM

< SYSTEM DESCRIPTION >

INTERIOR ROOM LAMP BATTERY SAVER SYSTEM

System Diagram

INFOID:000000001835871

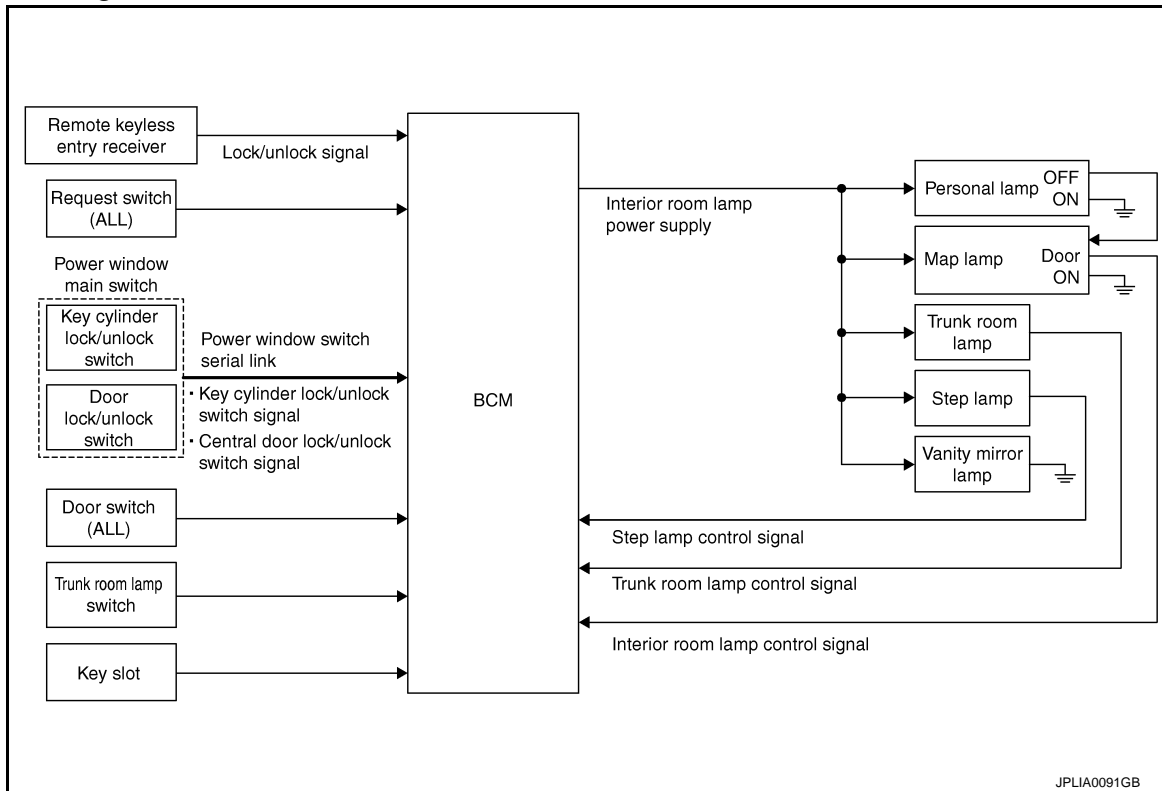

System Description

INFOID:000000001835872

OUTLINE

- Interior room lamp battery saver is controlled by BCM.
- BCM turns applicable lamps OFF depending on the vehicle condition. This function prevents the battery from over-discharging if the driver neglect turning OFF the any lamps.

Applicable lamps

- Map lamp
- Personal lamp
- Step lamp
- Trunk room lamp
- Vanity mirror lamp

INTERIOR ROOM LAMP BATTERY SAVER FUNCTION

- When the ignition switch is turned OFF, BCM operates the timer for a period of time to cut the interior room lamp power supply.
- BCM restart the timer when any of the following signals changes while operating the timer.
 - Ignition switch status
 - Door switch signal (ALL)
 - Door lock/unlock signal (Remote keyless entry receiver, each request switch, key cylinder lock/unlock switch, central door lock/unlock switch)
 - Trunk room lamp switch signal
 - Key switch signal (Key slot)
- BCM provides the interior room lamp power supply continuously when the ignition switch position is other than OFF.

NOTE:


Each function of interior room lamp battery saver can be set by CONSULT-III. Refer to [INL-15, "BATTERY SAVER : CONSULT-III Function \(BCM - BATTERY SAVER\)"](#).

INTERIOR ROOM LAMP BATTERY SAVER SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000001835873

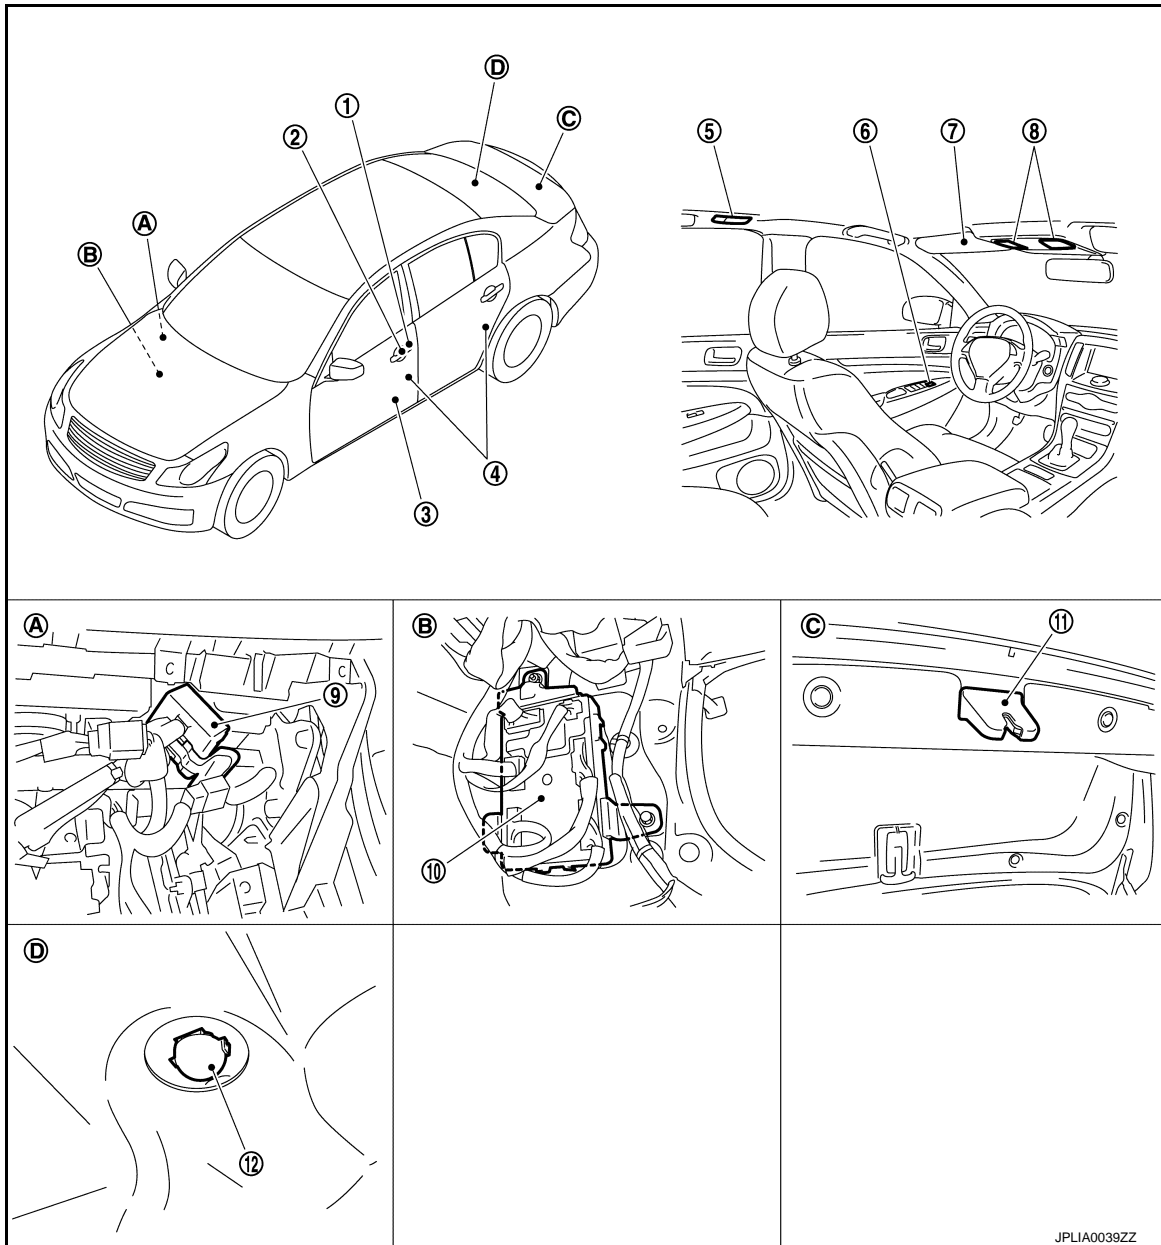

- | | | |
|------------------------|-------------------------------------|----------------------------------|
| 1. Key cylinder switch | 2. Request switch | 3. Step lamp |
| 4. Door switch | 5. Personal lamp | 6. Central door lock switch |
| 7. Vanity mirror lamp | 8. Map lamp | 9. Remote keyless entry receiver |
| 10. BCM | 11. Trunk room lamp switch | 12. Trunk room lamp |
| A. Behind glove box | B. Dash side lower (Passenger side) | C. Trunk lid lock assembly |
| D. Trunk room upward | | |

Component Description

INFOID:000000001835874


Part	Description
BCM	Operates the interior room lamp battery saver depending on the vehicle condition to cut the interior room lamp power supply.

ILLUMINATION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000001835877

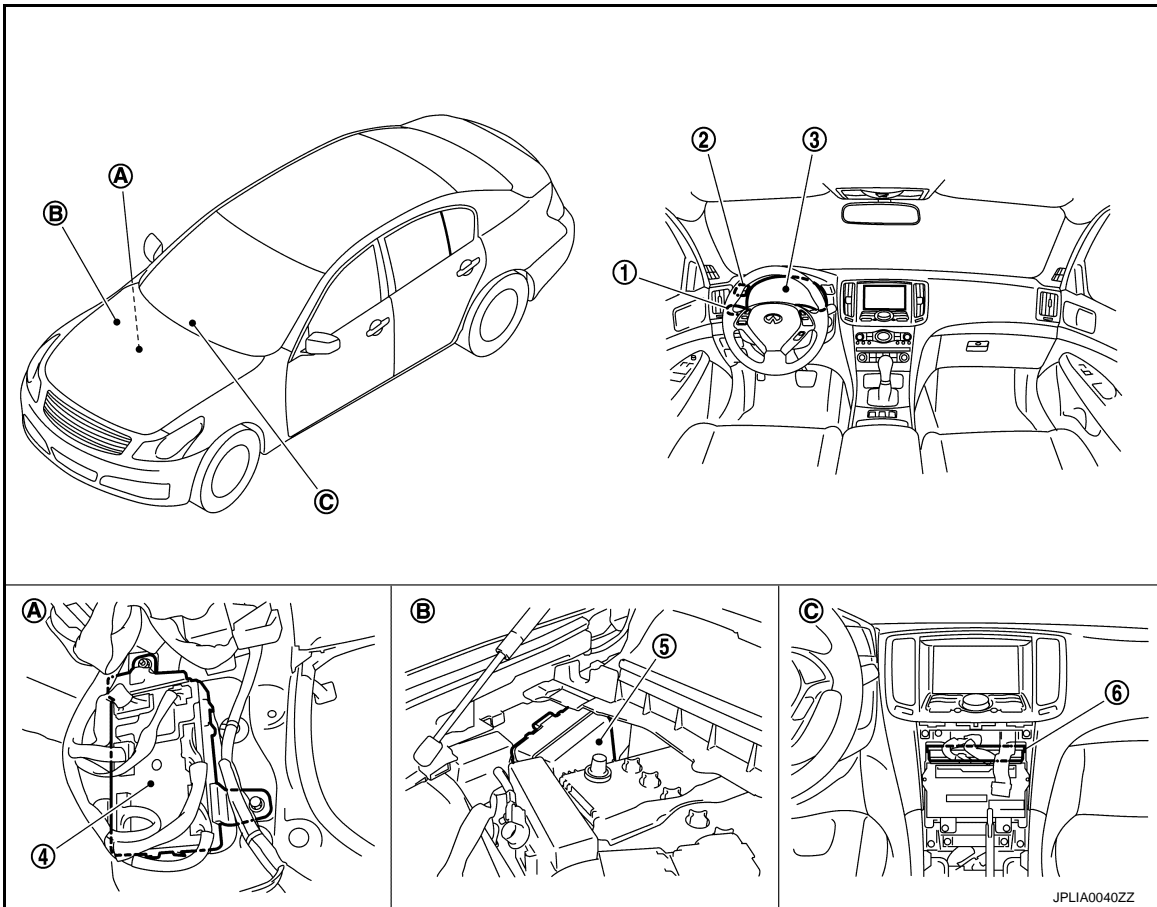

- | | | |
|------------------------------------|--------------------------------|-------------------------------|
| 1. Combination switch | 2. Illumination control switch | 3. Combination meter |
| 4. BCM | 5. IPDM E/R | 6. Unified meter and A/C amp. |
| A Dash side lower (Passenger side) | B. Engine room dash panel (RH) | C. Behind cluster lid C |

Component Description

INFOID:000000001835878

A
B
C
D
E
F
G
H
I
J
K

INL

M

N

O

P

Part	Description
BCM	<ul style="list-style-type: none"> Judges each switch condition by the combination switch reading function. Judges the illumination lamp ON/OFF status depending on the vehicle condition. And then it transmits position light request signal to IPDM E/R and combination meter (through the unified meter and A/C amp.) (with CAN communication).
IPDM E/R	Controls the integrated relay according to the request from BCM (with CAN communication).
COMBINATION METER	<ul style="list-style-type: none"> Enters in nighttime mode according to the request from BCM (with CAN communication). Controls the each illumination in the nighttime mode. Refer to MWI-25, "METER ILLUMINATION CONTROL : System Diagram" .
Combination switch (Lighting & turn signal switch)	Refer to BCS-5, "System Diagram" .

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000003038057

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	This function is not used even though it is displayed.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*		×	
Intelligent Key system	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
IVIS - NATS	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Trunk open	TRUNK		×	
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	TPMS (AIR PRESSURE MONITOR)	×	×	×

*: This item is displayed, but is not used.

FREEZE FRAME DATA (FFD) AND IGN COUNTER

Freeze Frame Data

The BCM records the following condition at the moment a particular DTC is detected.

- Vehicle Speed
- Odo/Trip Meter

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

- Vehicle Condition (BCM detected condition)

CONSULT screen terms	Description
SLEEP>LOCK	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK")
SLEEP>OFF	While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)
LOCK>ACC	While turning power supply position from "LOCK" to "ACC"
ACC>ON	While turning power supply position from "ACC" to "IGN"
RUN>ACC	While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)
CRANK>RUN	While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)
RUN>URGENT	While turning power supply position from "RUN" to "ACC" (Emergency stop operation)
ACC>OFF	While turning power supply position from "ACC" to "OFF"
OFF>LOCK	While turning power supply position from "OFF" to "LOCK"
OFF>ACC	While turning power supply position from "OFF" to "ACC"
ON>CRANK	While turning power supply position from "IGN" to "CRANKING"
OFF>SLEEP	While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode
LOCK>SLEEP	While turning BCM status from normal mode (Power supply position is "LOCK".) to low power consumption mode
LOCK	Power supply position is "LOCK" (Ignition switch OFF with steering is locked.)
OFF	Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.)
ACC	Power supply position is "ACC" (Ignition switch ACC)
ON	Power supply position is "IGN" (Ignition switch ON with engine stopped)
ENGINE RUN	Power supply position is "RUN" (Ignition switch ON with engine running)
CRANKING	Power supply position is "CRANKING" (At engine cranking)

IGN Counter

IGN counter indicates the number of times that ignition switch is turned ON after DTC is detected.

- The number is 0 when a malfunction is detected now.
- The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

INT LAMP


DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

INT LAMP : CONSULT-III Function (BCM - INT LAMP)

INFOID:000000001835880

WORK SUPPORT

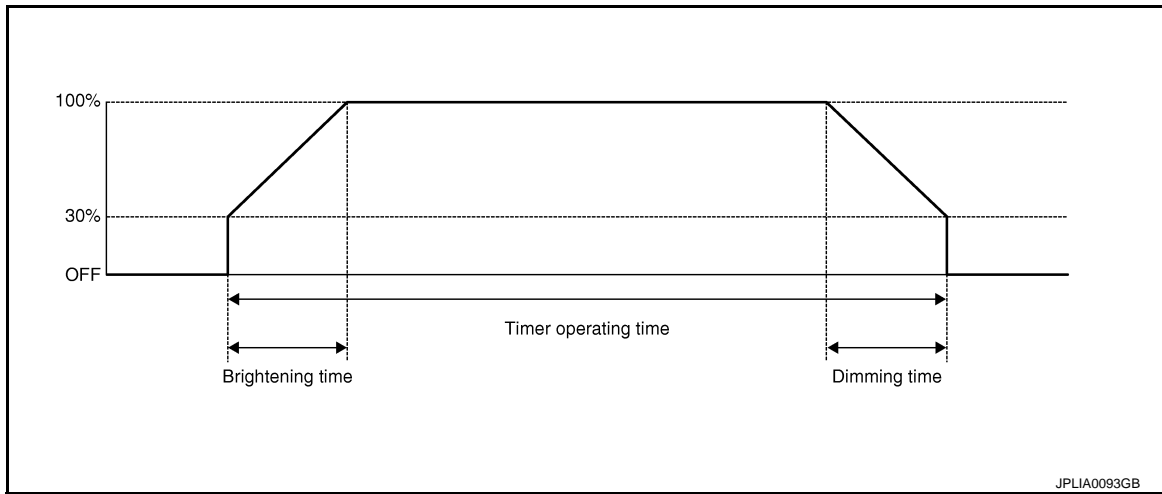

Service item	Setting item	Setting	
SET I/L D-UNLCK INTCON	ON*	With the interior room lamp timer function	
	OFF	Without the interior room lamp timer function	
ROOM LAMP TIMER SET	MODE 2	7.5 sec.	Sets the interior room lamp ON time. (Timer operating time)
	MODE 3*	15 sec.	
	MODE 4	30 sec.	
ROOM LAMP ON TIME SET	MODE 1	0.5 sec.	Sets the interior room lamp gradual brightening time.
	MODE 2*	1 sec.	
	MODE 3	2 sec.	
	MODE 4	3 sec.	
	MODE 5	0 sec.	
ROOM LAMP OFF TIME SET	MODE 1	0.5 sec.	Sets the interior room lamp gradual dimming time.
	MODE 2	1 sec.	
	MODE 3	2 sec.	
	MODE 4*	3 sec.	
R LAMP TIMER LOGIC SET	MODE 1*	Interior room lamp timer activates with synchronizing all doors.	
	MODE 2	Interior room lamp timer activates with synchronizing the driver door only.	

*: Initial setting

DATA MONITOR

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	The switch status input from request switch (driver side)
REQ SW-AS [On/Off]	The switch status input from request switch (passenger side)
PUSH SW [On/Off]	The switch status input from push-button ignition switch
ACC RLY-F/B [On/Off]	ACC relay feedback signal status input from ACC relay
KEY SW-SLOT [On/Off]	Key switch status input from key slot

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor item [Unit]	Description
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH
DOOR SW- RL [On/Off]	The switch status input from rear door switch LH
DOOR SW-BK [On/Off]	NOTE: The item is indicated, but not monitored.
CDL LOCK SW [On/Off]	Lock switch status received from central door lock switch by power window switch serial link
CDL UNLOCK SW [On/Off]	Unlock switch status received from central door lock switch by power window switch serial link
KEY CYL LK-SW [On/Off]	Lock switch status received from key cylinder switch by power window switch serial link
KEY CYL UN-SW [On/Off]	Unlock switch status received from key cylinder switch by power window switch serial link
TRNK/HAT MNTR [On/Off]	The switch status input from trunk room lamp switch
RKE-LOCK [On/Off]	Lock signal status received from remote keyless entry receiver
RKE-UNLOCK [On/Off]	Unlock signal status received from remote keyless entry receiver

ACTIVE TEST

Test item	Operation	Description
INT LAMP	On	Outputs the interior room lamp control signal to turn map lamp and personal lamp ON (Map lamp switch is in DOOR position).
	Off	Stops the interior room lamp control signal to turn map lamp and personal lamp OFF.
STEP LAMP TEST	On	Outputs the step lamp control signal to turn step lamp ON.
	Off	Stops the step lamp control signal to turn step lamp OFF.
LUGGAGE LAMP TEST	On	Outputs the trunk room lamp control signal to turn step lamp ON.
	Off	Stops the trunk room lamp control signal to turn step lamp ON.

BATTERY SAVER

BATTERY SAVER : CONSULT-III Function (BCM - BATTERY SAVER)

INFOID:000000001835881

WORK SUPPORT

Service item	Setting item	Setting	
BATTERY SAVER SET	On*	With the exterior lamp battery saver function	
	Off	Without the exterior lamp battery saver function	
ROOM LAMP BAT SAV SET	On*	With the interior room lamp battery saver function	
	Off	Without the interior room lamp battery saver function	
ROOM LAMP TIMER SET	MODE 1*	30 min.	Sets the interior room lamp battery saver timer operating time.
	MODE 2	60 min.	

*: Initial setting

DATA MONITOR

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

Monitor item [Unit]	Description
REQ SW-DR [On/Off]	The switch status input from request switch (driver side)
REQ SW-AS [On/Off]	The switch status input from request switch (passenger side)
REQ SW-RR [On/Off]	NOTE: The item is indicated, but not monitored.
REQ SW-RL [On/Off]	
PUSH SW [On/Off]	The switch status input from push-button ignition switch
ACC RLY-F/B [On/Off]	ACC relay feedback signal status input from ACC relay
KEY SW-SLOT [On/Off]	Key switch status input from key slot
UNLK SEN-DR [On/Off]	Driver door unlock status input from unlock sensor
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH
DOOR SW-RL [On/Off]	The switch status input from rear door switch LH
DOOR SW-BK [On/Off]	NOTE: The item is indicated, but not monitored.
CDL LOCK SW [On/Off]	Lock switch status received from central door lock switch by power window switch serial link
CDL UNLOCK SW [On/Off]	Unlock switch status received from central door lock switch by power window switch serial link
KEY CYL LK-SW [On/Off]	Lock switch status received from key cylinder switch by power window switch serial link
KEY CYL UN-SW [On/Off]	Unlock switch status received from key cylinder switch by power window switch serial link
TRNK/HAT MNTR [On/Off]	The switch status input from trunk room lamp switch
RKE-LOCK [On/Off]	Lock signal status received from remote keyless entry receiver
RKE-UNLOCK [On/Off]	Unlock signal status received from remote keyless entry receiver

ACTIVE TEST

Test item	Operation	Description
BATTERY SAVER	Off	Cuts the interior room lamp power supply to turn interior room lamp OFF.
	On	Outputs the interior room lamp power supply to turn interior room lamp ON.*

*: Each lamp switch is in ON position.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

POWER SUPPLY AND GROUND CIRCUIT

BCM

BCM : Diagnosis Procedure

INFOID:000000003038058

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse and fusible link No.
Battery power supply	M
	10

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground Battery voltage
Connector	Terminal	
M118	1	
M119	11	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	13		Existed

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

A
B
C
D
E
F
G
H
I
J
K
INL
M
N
O
P

INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT

Description

INFOID:000000001835884

Provides the interior room lamp power supply. Also cuts the power supply when the interior room lamp battery saver activating.

Component Function Check

INFOID:000000001835885

1. CHECK INTERIOR ROOM LAMP POWER SUPPLY FUNCTION

Ⓟ CONSULT-III ACTIVE TEST

1. Turn ignition switch ON.
2. Turn each interior room lamp ON.
 - Map lamp
 - Personal lamp
 - Step lamp
 - Vanity mirror lamp
 - Trunk room lamp
3. Select "BATTERY SAVER" of BCM (BATTERY SAVER) active test item.
4. With operating the test items, check that each interior room lamp turns ON/OFF.

Off : Interior room lamp OFF

On : Interior room lamp ON

Does the interior room lamp turn ON/OFF?

YES >> Interior room lamp power supply circuit is normal.

NO >> Refer to [INL-18. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000001835886

1. CHECK INTERIOR ROOM LAMP POWER SUPPLY OUTPUT

Ⓟ CONSULT-III ACTIVE TEST

1. Turn ignition switch ON.
2. Select "BATTERY SAVER" of BCM (BATTERY SAVER) active test item.
3. With operating the test item, check voltage between BCM harness connector and ground.

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
BCM		BATTERY SAVER	0 V
Connector	Terminal		
M119	4	Off	0 V
		On	Battery voltage

Is the measurement value normal?

YES >> GO TO 2.

NO >> Replace BCM.

2. CHECK INTERIOR ROOM LAMP POWER SUPPLY OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the following connectors.
 - Map lamp
 - Personal lamp
 - Vanity mirror lamp (LH)
 - Vanity mirror lamp (RH)
 - Trunk room lamp
 - Step lamp (driver side)
 - Step lamp (passenger side)

INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

3. Check continuity between BCM harness connector and each interior room lamp harness connector.

BCM		Each interior room lamp			Continuity
Connector	Terminal	Connector		Terminal	
M119	4	Map lamp	R15	1	Existed
		Personal lamp	R14	1	
		Vanity mirror lamp (LH)	R12	2	
		Vanity mirror lamp (RH)	R13	2	
		Trunk room lamp	B47	1	
		Step lamp (driver side)	D12	1	
		Step lamp (passenger side)	D42	1	

Does continuity exist?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3. CHECK INTERIOR ROOM LAMP POWER SUPPLY SHORT CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	4		Not existed

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> Check that each interior room lamp has no internal short circuit.

A
B
C
D
E
F
G
H
I
J
K

INL

M
N
O
P

INTERIOR ROOM LAMP CONTROL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

INTERIOR ROOM LAMP CONTROL CIRCUIT

Description

INFOID:000000001835887

Controls each interior room lamp (ground side) by PWM signal.

NOTE:

PWM signal control period is approximately 250 Hz (in the gradual brightening/dimming).

Component Function Check

INFOID:000000001835888

CAUTION:

Before performing the diagnosis, check that the following is normal.

- Interior room lamp power supply
- Map lamp bulb
- Personal lamp bulb

1. CHECK INTERIOR ROOM LAMP CONTROL FUNCTION

CONSULT-III ACTIVE TEST

1. Switch the map lamp switch to DOOR.
2. Turn ignition switch ON.
3. Select "INT LAMP" of BCM (INT LAMP) active test item.
4. With operating the test items, check that each interior room lamp turns ON/OFF (gradual brightening/dimming).

On : Interior room lamp gradual brightening

Off : Interior room lamp gradual dimming

Does the interior room lamp turns ON/OFF (gradual brightening/dimming)?

YES >> Interior room lamp control circuit is normal.

NO >> Refer to [INL-20, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000001835889

1. CHECK INTERIOR ROOM LAMP CONTROL OUTPUT

CONSULT-III ACTIVE TEST

1. Turn ignition switch OFF.
2. Remove all the bulbs of map lamp and personal lamp.
3. Select "INT LAMP" of BCM (INT LAMP) active test item.
4. With operating the test item, check continuity between BCM harness connector and ground.

BCM		Ground	Test item	Continuity
Connector	Terminal		INT LAMP	
M119	19		On	Existed
			Off	Not existed

Is the measurement value normal?

YES >> GO TO 2.

Fixed ON>>GO TO 3.

Fixed OFF>>Replace BCM.

2. CHECK INTERIOR ROOM LAMP CONTROL OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector, map lamp connector and personal lamp connector.
3. Check continuity between BCM harness connector, map lamp harness connector, and personal lamp harness connector.

INTERIOR ROOM LAMP CONTROL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

BCM		Map lamp/personal lamp			Continuity
Connector	Terminal	Connector		Terminal	
M119	19	Map lamp	R15	2	Existed
		Personal lamp	R14	3	

Does continuity exist?

YES >> Replace the map lamp or the personal lamp.

NO >> Repair the harnesses or connectors.

3. CHECK INTERIOR ROOM LAMP CONTROL SHORT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector, map lamp connector and personal lamp connector.
3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	19		Not existed

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> Replace BCM.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

INL

STEP LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

STEP LAMP CIRCUIT

Description

INFOID:000000001835890

Controls the step lamp (ground side) to turn the step lamp ON and OFF.

Component Function Check

INFOID:000000001835891

CAUTION:

Before performing the diagnosis, check that the following is normal.

- Interior room lamp power supply
- Step lamp bulb

1.CHECK STEP LAMP OPERATION

CONSULT-III ACTIVE TEST

1. Turn ignition switch ON.
2. Select "STEP LAMP TEST" of BCM (INT LAMP) active test item.
3. With operating the test items, check that step lamp turns ON/OFF.

On : Step lamp ON
Off : Step lamp OFF

Does the step lamp turn ON/OFF?

- YES >> Step lamp circuit is normal.
NO >> Refer to [INL-22, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000001835892

1.CHECK STEP LAMP OUTPUT

CONSULT-III ACTIVE TEST

1. Turn ignition switch OFF.
2. Remove the step lamp bulbs (driver side and passenger side).
3. Turn ignition switch ON.
4. Select "STEP LAMP TEST" of BCM (INT LAMP) active test item.
5. With operating the test item, check continuity between BCM harness connector and ground.

BCM		Ground	Test item	Continuity
Connector	Terminal		STEP LAMP TEST	
M119	7		On	Existed
			Off	Not existed

Is the measurement value normal?

- YES >> GO TO 2.
Fixed ON>>GO TO 3.
Fixed OFF>>Replace BCM.

2.CHECK STEP LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector, and step lamp connector.
3. Check continuity between BCM harness connector and step lamp harness connector.

BCM		Step lamp		Continuity
Connector	Terminal	Connector	Terminal	

STEP LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

M119	7	Driver side	D12	2	Existed
		Passenger side	D42	2	

Does continuity exist?

- YES >> Replace step lamp.
NO >> Repair harnesses or connectors.

3.CHECK STEP LAMP SHORT CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	7		Not existed

Does continuity exist?

- YES >> Repair the harnesses or connectors.
NO >> Replace BCM.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

INL

TRUNK ROOM LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

TRUNK ROOM LAMP CIRCUIT

Description

INFOID:000000001835893

Controls the trunk room lamp (ground side) to turn the trunk room lamp ON and OFF.

Component Function Check

INFOID:000000001835894

CAUTION:

Before performing the diagnosis, check that the following is normal.

- Interior room lamp power supply
- Trunk room lamp bulb

1.CHECK TRUNK ROOM LAMP OPERATION

CONSULT-III ACTIVE TEST

1. Turn ignition switch ON.
2. Select "LUGGAGE LAMP TEST" of BCM (INT LAMP) active test item.
3. With operating the test items, check that trunk room lamp turns ON/OFF.

On : Trunk room lamp ON

Off : Trunk room lamp OFF

Does the trunk room lamp turn ON/OFF?

- YES >> Trunk room lamp circuit is normal.
NO >> Refer to [INL-22, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000001835895

1.CHECK TRUNK ROOM LAMP OUTPUT

CONSULT-III ACTIVE TEST

1. Turn ignition switch OFF.
2. Remove trunk room lamp bulb.
3. Turn ignition switch ON.
4. Select "LUGGAGE LAMP TEST" of BCM (INT LAMP) active test item.
5. With operating the test item, check continuity between BCM harness connector and ground.

BCM		Ground	Test item	Continuity
Connector	Terminal		LUGGAGE LAMP TEST	
M120	30		On	Existed
			Off	Not existed

Is the measurement value normal?

- YES >> GO TO 2.
Fixed ON>>GO TO 3.
Fixed OFF>>Replace BCM.

2.CHECK TRUNK ROOM LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and trunk room lamp connector.
3. Check continuity between BCM harness connector and trunk room lamp harness connector.

BCM		Trunk room lamp		Continuity
Connector	Terminal	Connector	Terminal	
M120	30	B47	2	Existed

Does continuity exist?

- YES >> Replace trunk room lamp.

TRUNK ROOM LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair harnesses or connectors.

3. CHECK TRUNK ROOM LAMP SHORT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and trunk room lamp connector.
3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M120	30		Not existed

Does continuity exist?

YES >> Repair harnesses or connectors.

NO >> Replace BCM.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

INL

PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT

Description

INFOID:000000001835896

Provides the power supply and the ground to control the push-button ignition switch illumination.

Component Function Check

INFOID:000000001835897

1.CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION OPERATION

CONSULT-III ACTIVE TEST

1. Turn the ignition switch ON.
2. Select "ENGINE SW ILLUMI" of BCM (INTELLIGENT KEY) active test item.
3. With operating the test items, check that the push-button ignition switch illumination turns ON/OFF

On : Push-button ignition switch illumination ON

Off : Push-button ignition switch illumination OFF

Does the push-button ignition switch illumination turn ON/OFF?

- YES >> Push-button ignition switch illumination circuit is normal.
NO >> Refer to [INL-26, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000001835898

1.CHECK ILLUMINATION CONTROL SWITCHING OPERATION

1. Turn the ignition switch ON.
2. With operating the lighting switch, check that the push-button ignition switch illumination turns ON/OFF

Condition	Push-button ignition switch illumination
<ul style="list-style-type: none">• Ignition switch ON• Lighting switch 1ST	ON
<ul style="list-style-type: none">• Ignition switch OFF• Lighting switch OFF• Driver door LOCK	OFF

Does the push-button ignition switch illumination turn ON/OFF?

- YES >> GO TO 2.
NO >> GO TO 3.

2.CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector and the push-button ignition switch connector.
3. Check continuity between BCM harness connector and the push-button ignition switch harness connector.

BCM		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
M119	14	M50	2	Existed

Does the continuity exist?

- YES >> Replace BCM.
NO >> Repair the harness or the connector.

3.CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION POWER SUPPLY OUTPUT

CONSULT-III ACTIVE TEST

1. Turn the ignition switch ON.
2. Select "ENGINE SW ILLUMI" of BCM (INTELLIGENT KEY) active test item.
3. With operating the test item, check voltage between BCM harness connector and ground.

PUSH-BUTTON IGNITION SWITCH ILLUMINATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
BCM		ENGINE SW ILLUMI	
Connector	Terminal		
M123	133		
		ON	5 V
		OFF	0 V

Is the measurement value normal?

YES >> GO TO 4.

NO >> GO TO 5.

4. CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION POWER SUPPLY OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector and the push-button ignition switch connector.
3. Check continuity between BCM harness connector and the push-button ignition switch harness connector.

BCM		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
M123	133	M50	3	Existed

Does the continuity exist?

YES >> Replace push-button ignition switch.

NO >> Repair the harness or the connector.

5. CHECK PUSH-BUTTON IGNITION SWITCH ILLUMINATION POWER SUPPLY SHORT CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connector and the push-button ignition switch connector.
3. Check continuity between BCM harness connector and the push-button ignition switch harness connector.

BCM		Ground	Continuity
Connector	Terminal		
M123	133		Not existed

Does the continuity exist?

YES >> Repair the harness or the connector.


NO >> Replace BCM.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

INL

INTERIOR ROOM LAMP CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

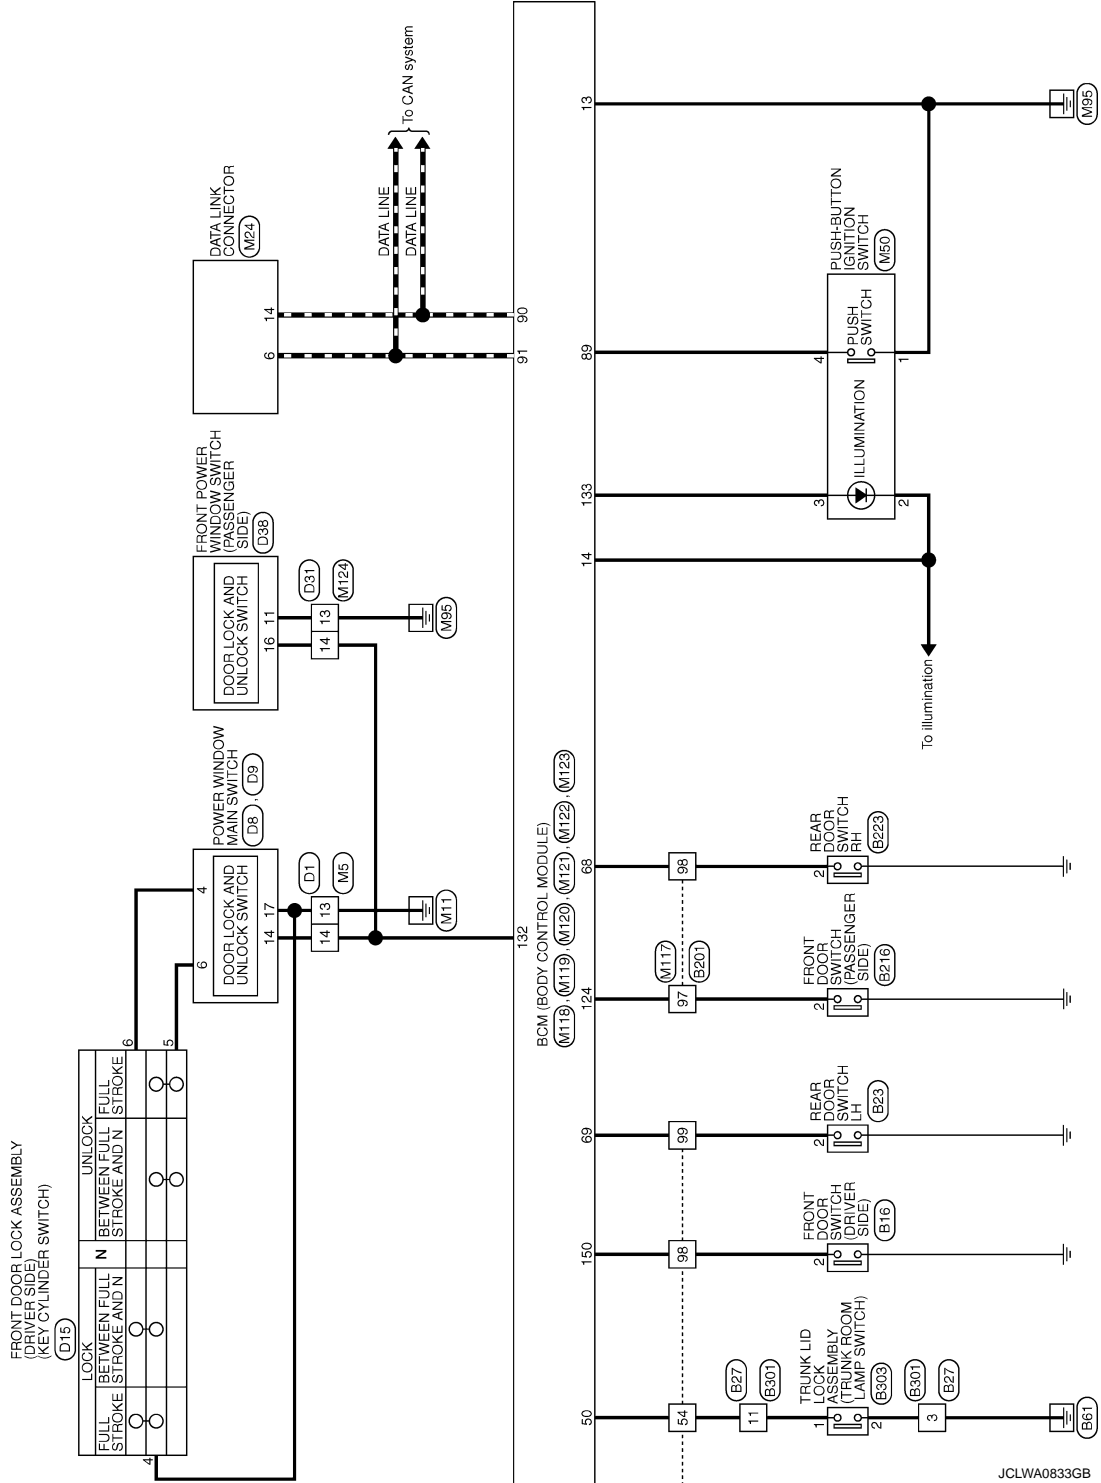

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


INL

INTERIOR ROOM LAMP CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >


INTERIOR ROOM LAMP

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	THBDFW-CS16-TM4




Terminal No.	Color of Wire	Signal Name [Specification]
54	L	-
71	BR	-
72	GR	-
98	V	-
99	R	-

Connector No.	B16
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	A03FW



Terminal No.	Color of Wire	Signal Name [Specification]
2	V	-

Connector No.	B23
Connector Name	REAR DOOR SWITCH LH
Connector Type	A03FW



Terminal No.	Color of Wire	Signal Name [Specification]
2	R	-

Connector No.	B27
Connector Name	WIRE TO WIRE
Connector Type	NS(BMW-GS)




Terminal No.	Color of Wire	Signal Name [Specification]
3	B	-
11	L	-

Connector No.	B47
Connector Name	TRUNK ROOM LAMP
Connector Type	S02FW




Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	GR	-

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	THBDFW-CS16-TM4




Terminal No.	Color of Wire	Signal Name [Specification]
97	GR	-
98	BR	-

Connector No.	B216
Connector Name	FRONT DOOR SWITCH (PASSENGER SIDE)
Connector Type	A03FW



Terminal No.	Color of Wire	Signal Name [Specification]
2	GR	-

Connector No.	B223
Connector Name	REAR DOOR SWITCH RH
Connector Type	A03FW



Terminal No.	Color of Wire	Signal Name [Specification]
2	BR	-


JCLWA0834GB

INTERIOR ROOM LAMP CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

INTERIOR ROOM LAMP

Connector No.	B301
Connector Name	WIRE TO WIRE
Connector Type	NS16FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
3	B	-
11	V	-

Connector No.	B303
Connector Name	TRUNK LID LOCK ASSEMBLY
Connector Type	TB03FW




Terminal No.	Color of Wire	Signal Name [Specification]
1	V	-
2	B	-

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
13	B	-
14	V	-
50	SB	-
51	R	-

Connector No.	D8
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
4	V	-
6	Y	-
14	V	-

Connector No.	B9
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS03FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
17	B	-

Connector No.	D12
Connector Name	STEP LAMP (DRIVER SIDE)
Connector Type	TB02FW




Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	SB	-

Connector No.	D15
Connector Name	FRONT DOOR LOCK ASSEMBLY (DRIVER SIDE)
Connector Type	ED06FY-RS



Terminal No.	Color of Wire	Signal Name [Specification]
4	B	-
5	Y	-
6	V	-

Connector No.	D31
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
13	B	-
14	V	-
50	SB	-
51	R	-

JCLWA0835GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


INL

INTERIOR ROOM LAMP CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >


INTERIOR ROOM LAMP

Connector No.	D38
Connector Name	FRONT POWER WINDOW SWITCH (PASSENGER SIDE)
Connector Type	NS16FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
11	B	-
14	V	-
16	V	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS (6-TM4)

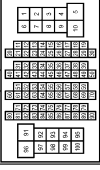


Terminal No.	Color of Wire	Signal Name [Specification]
91	W	-

Connector No.	D42
Connector Name	STEP LAMP (PASSENGER SIDE)
Connector Type	TB22FW




Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	SB	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS96FW-M2




Terminal No.	Color of Wire	Signal Name [Specification]
4A	P	-
7A	R	-

Connector No.	M5
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15

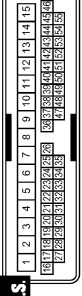


Terminal No.	Color of Wire	Signal Name [Specification]
13	B	-
14	V	-
50	SB	-
51	GR	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH60MW-CS (6-TM4)

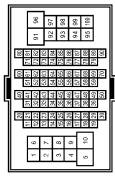


Terminal No.	Color of Wire	Signal Name [Specification]
91	W	-

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH60MW-CS (6-TM4)

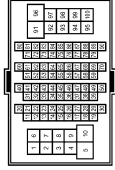

Terminal No.	Color of Wire	Signal Name [Specification]
54	O	-
71	V	-
72	P	-
98	GR	-
99	R	-

Connector No.	M22
Connector Name	KEY SLOT
Connector Type	TH12PW-NH

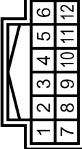

Terminal No.	Color of Wire	Signal Name [Specification]
1	R	BAT
7	B	GND
11	SB	KEY SWITCH SIGNAL


JCLWA0836GB

INTERIOR ROOM LAMP CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

INTERIOR ROOM LAMP

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color of Wire	Signal Name [Specification]
6	L	-
14	P	-

Connector No.	M50
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FBR



Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	W	-
3	L	-
4	BR	-

Connector No.	M106
Connector Name	WIRE TO WIRE
Connector Type	TK10MW-NSS



Terminal No.	Color of Wire	Signal Name [Specification]
6	LG	-
7	V	-
9	B	-

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH480MH-CS(6-TM4)




Terminal No.	Color of Wire	Signal Name [Specification]
97	LG	-
98	BR	-

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MUSPE-LC




Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (F/L)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
4	LG	BAT SAVER OUTPUT
7	SB	STEP LAMP OUTPUT
11	R	BAT (FUSE)
13	B	GND
14	W	RING/SW LED GND
19	V	ROOM LAMP OUTPUT

Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
30	P	TRUNK LAMP OUTPUT

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FY-NH



Terminal No.	Color of Wire	Signal Name [Specification]
50	O	TRUNK SW
68	BR	DOOR SW (RR RH)
69	R	DOOR SW (RR LH)

JCLWA0837GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


INL

INTERIOR ROOM LAMP CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >


INTERIOR ROOM LAMP

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH




Terminal No.	Color of Wire	Signal Name [Specification]
88	BR	ENG SW
90	P	CAN-L
91	L	CAN-H

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



Terminal No.	Color of Wire	Signal Name [Specification]
121	SB	KEY SWITCH SIGNAL
124	LG	DOOR SW (AS)
132	V	POWER WINDOW SERIAL LINK
133	L	RING/SW LED
150	GR	DOOR SW (DR)

Connector No.	M124
Connector Name	WIRE TO WIRE
Connector Type	TH40MM-CS/5




Terminal No.	Color of Wire	Signal Name [Specification]
13	B	
14	G	
50	P	
51	LG	

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	TK10FW-NS




Terminal No.	Color of Wire	Signal Name [Specification]
6	R	
7	V	
9	B	

Connector No.	R2
Connector Name	WIRE TO WIRE
Connector Type	TH12FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
6	B	
9	V	
12	R	

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	TH12MW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
6	B	
9	V	
12	R	

Connector No.	R12
Connector Name	VANITY MIRROR LAMP LH
Connector Type	MCA02FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	
2	R	

Connector No.	R13
Connector Name	VANITY MIRROR LAMP RH
Connector Type	MCA02FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	
2	R	

JCLWA0838GB

INTERIOR ROOM LAMP CONTROL SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

INTERIOR ROOM LAMP

Connector No.	R14
Connector Name	PERSONAL LAMP
Connector Type	THRMF-W-RH



Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	B	-
3	V	-

Connector No.	R15
Connector Name	MAP LAMP
Connector Type	TK6BFGY



Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	V	-
3	B	-
4	-	-

JCLWA0839GB

INL


ILLUMINATION

< DTC/CIRCUIT DIAGNOSIS >

ILLUMINATION

Wiring Diagram - ILLUMINATION -

INFOID:000000001835900

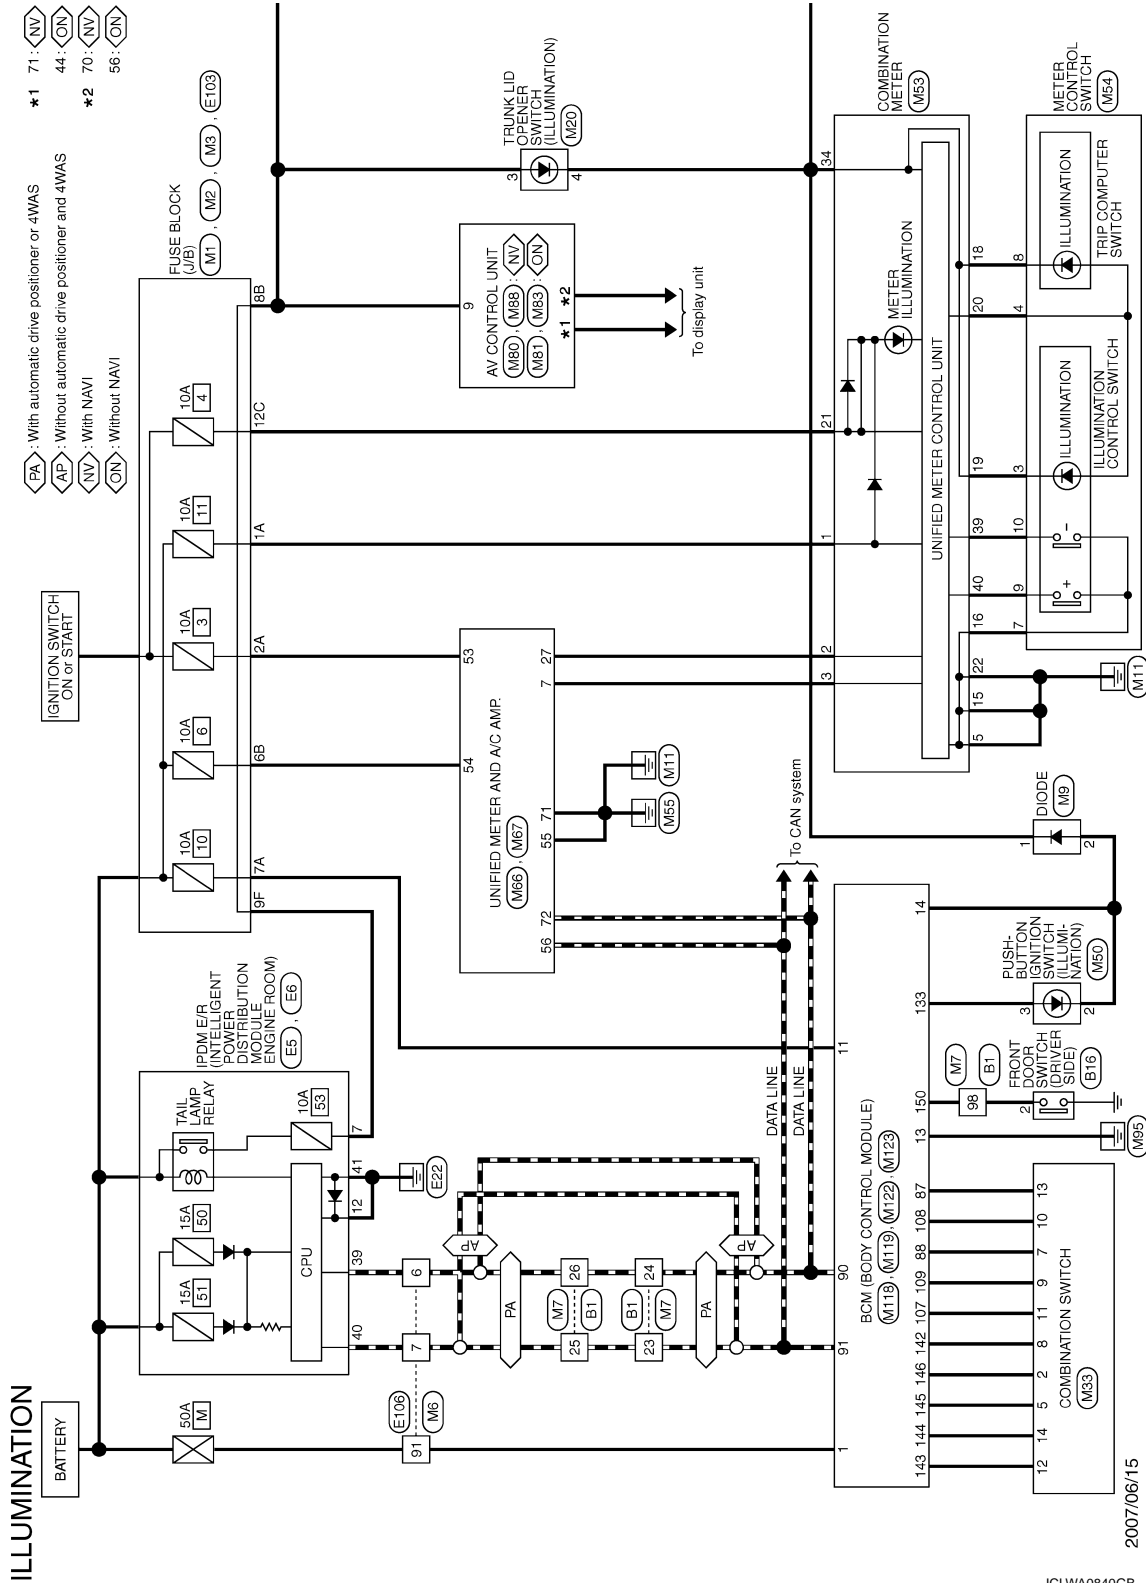


2007/06/15

JCLWA0840GB

ILLUMINATION

< DTC/CIRCUIT DIAGNOSIS >

- : With A/T
- : With M/T
- : AWD models
- : With AFS
- : With automatic drive positioner
- : Except

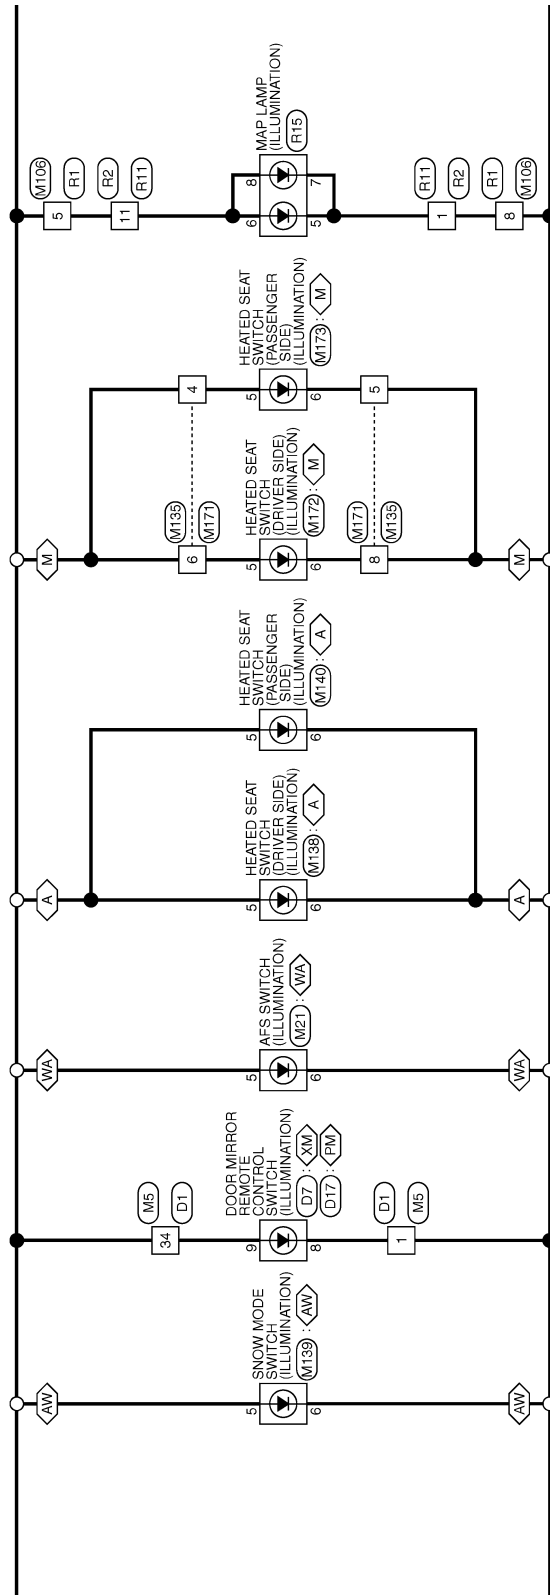

JCLWA0841GB


A
B
C
D
E
F
G
H
I
J
K
INL
M
N
O
P

ILLUMINATION

< DTC/CIRCUIT DIAGNOSIS >

◊ A : With AT

* : This connector is not shown in "Harness Layout".

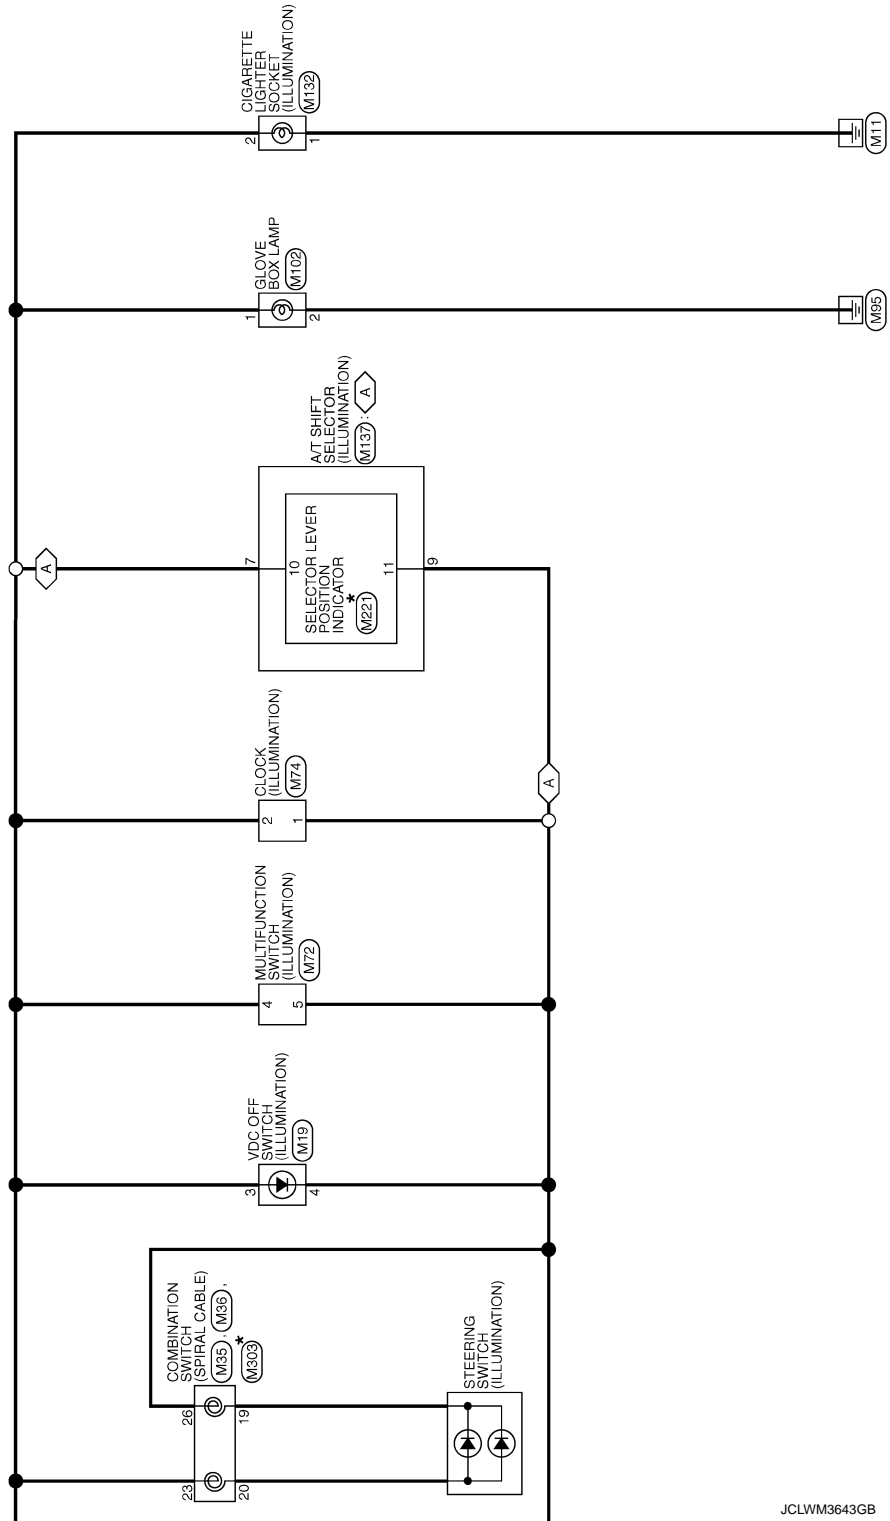


JCLWM3643GB

ILLUMINATION

< DTC/CIRCUIT DIAGNOSIS >


ILLUMINATION

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4

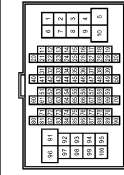


Terminal No.	Color of Wire	Signal Name [Specification]
23	L	-
24	P	-
25	L	-
26	P	-
9B	V	-

Connector No.	B16
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	A08FW




Terminal No.	Color of Wire	Signal Name [Specification]
2	V	-

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15




Terminal No.	Color of Wire	Signal Name [Specification]
1	B	-
34	R	-

Connector No.	D7
Connector Name	DOOR MIRROR REMOTE CONTROL SWITCH (WITHOUT AUTOMATIC DRIVE POSITIONER)
Connector Type	TK16FW




Terminal No.	Color of Wire	Signal Name [Specification]
8	B	-
9	R	-

Connector No.	D17
Connector Name	DOOR MIRROR REMOTE CONTROL SWITCH (WITH AUTOMATIC DRIVE POSITIONER)
Connector Type	TK16FBR




Terminal No.	Color of Wire	Signal Name [Specification]
8	B	-
9	R	-

Connector No.	E5
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH20FW-CS12-IM-TV




Terminal No.	Color of Wire	Signal Name [Specification]
7	R	-
12	B/W	-

Connector No.	E6
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH80FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B/W	-

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS











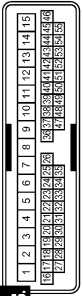

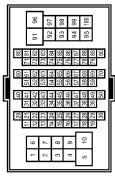

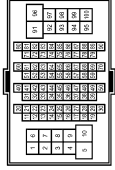

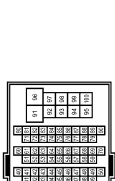

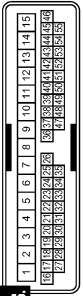



Terminal No.	Color of Wire	Signal Name [Specification]
9F	R	-

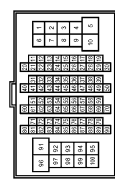A
B
C
D
E
F
G
H
I
J
K
INL
M
N
O
P

ILLUMINATION

< DTC/CIRCUIT DIAGNOSIS >

ILLUMINATION

Connector No. E106	WIRE TO WIRE TH60FW-CS16-TM4		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name			6	P	
Connector Type			7	L	
			91	W	
					
Connector No. M1	FUSE BLOCK (J/B) NS06FW-M2		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name			1A	V	
Connector Type			2A	G	
			7A	R	
					
Connector No. M2	FUSE BLOCK (J/B) NS10FW-CS		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name			6B	Y	
Connector Type			8B	R	
					
Connector No. M3	FUSE BLOCK (J/B) NS12FW-CS		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name			12C	R	
Connector Type					
					
Connector No. M4	WIRE TO WIRE TH60MW-CS15		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name			1	B	
Connector Type			34	G	
					
Connector No. M5	WIRE TO WIRE TH60MW-CS16-TM4		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name			6	P	
Connector Type			7	L	
			91	W	
					
Connector No. M6	WIRE TO WIRE TH60MW-CS16-TM4		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name			23	L	
Connector Type			24	P	
			25	L	
			26	P	
			98	GR	
					
Connector No. M7	WIRE TO WIRE TH60MW-CS16-TM4		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name			1	R	
Connector Type			2	W	
					
Connector No. M8	WIRE TO WIRE TH60MW-CS15		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name			1	B	
Connector Type			34	G	
					
Connector No. M9	DIODE Z4335 C9900		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name			1	R	
Connector Type			2	W	
					

JCLWA0844GB

ILLUMINATION

< DTC/CIRCUIT DIAGNOSIS >

ILLUMINATION

Connector No.	M18
Connector Name	VDC OFF SWITCH
Connector Type	TK08GY



Terminal No.	Color of Wire	Signal Name [Specification]
3	SB	
4	W	

Connector No.	M20
Connector Name	TRUNK LID OPENER SWITCH
Connector Type	TK08FW




Terminal No.	Color of Wire	Signal Name [Specification]
3	LG	
4	R	

Connector No.	M21
Connector Name	AFS SWITCH
Connector Type	TK08FW-IV




Terminal No.	Color of Wire	Signal Name [Specification]
5	O	
6	W	

Connector No.	M33
Connector Name	COMBINATION SWITCH
Connector Type	TK18FY-NH




Terminal No.	Color of Wire	Signal Name [Specification]
2	SB	OUTPUT 4
5	L	OUTPUT 3
7	V	INPUT 3
8	O	OUTPUT 5
9	Y	INPUT 2
10	R	INPUT 4
11	LG	INPUT 1
12	P	OUTPUT 1
13	BR	INPUT 5
14	G	OUTPUT 2

Connector No.	M35
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FY-EX-IV




Terminal No.	Color of Wire	Signal Name [Specification]
23	R	

Connector No.	M36
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FY-IV



Terminal No.	Color of Wire	Signal Name [Specification]
26	BR	

Connector No.	M50
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FBR



Terminal No.	Color of Wire	Signal Name [Specification]
2	W	
3	L	

JCLWA0845GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

INL

ILLUMINATION

< DTC/CIRCUIT DIAGNOSIS >

ILLUMINATION

Connector No.	M65
Connector Name	COMBINATION METER
Connector Type	SAB4FW



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
1	V	BAT
2	LG	COMM (METER->AMP.)
3	GR	COMM (AMP->METER)
5	B	GND
15	B	GND
16	BR	METER CONTROL SW GND
18	GR	ILL GND
19	B	ILL GND
20	R	ILL
21	R	IGN
22	B	GND

Connector No.	M67
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH32FW-NH



41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
53	W	IGN
54	Y	BAT
55	B	GND
56	L	CAN-H
71	GR	GND
72	P	CAN-L

34	R	ILLUMINATION CONTROL
39	P	ILLUMINATION CONTROL SW (-)
40	O	ILLUMINATION CONTROL SW (+)

Connector No.	M64
Connector Name	METER CONTROL SWITCH
Connector Type	TH12FW-NH



1	2	3	4	5	6	7	8	9	10	11	12
---	---	---	---	---	---	---	---	---	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
3	B	-
4	R	-
7	BR	-
8	GR	-
9	O	-
10	P	-

Connector No.	M72
Connector Name	MULTIFUNCTION SWITCH
Connector Type	TH16FW-NH



2	4	6	8	10	12	14	16
1	3	5	7	9	11	13	15

Terminal No.	Color of Wire	Signal Name [Specification]
4	O	ILL
5	V	ILL CONT

Connector No.	M66
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH40FW-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
7	GR	COMM (AMP->METER)
27	LG	COMM (METER->AMP.)

Connector No.	M60
Connector Name	AV CONTROL UNIT (WITH NAVI)
Connector Type	TH16FW-CS2



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
9	L	ILLUMINATION


JCLWA0846GB

ILLUMINATION

< DTC/CIRCUIT DIAGNOSIS >


ILLUMINATION

Connector No.	M81
Connector Name	AV CONTROL UNIT (WITHOUT NAVI)
Connector Type	TH18FW-GS2




Terminal No.	9
Color of Wire	L
Signal Name [Specification]	ILLUMINATION

Connector No.	M83
Connector Name	AV CONTROL UNIT (WITHOUT NAVI)
Connector Type	TH24FW-NH



Terminal No.	44
Color of Wire	L
Signal Name [Specification]	COMM (DISP->CONT) COMM (CONT->DISP)

Connector No.	M88
Connector Name	AV CONTROL UNIT (WITH NAVI)
Connector Type	TH12FW-NH




Terminal No.	70
Color of Wire	L
Signal Name [Specification]	COMM (DISP->DISP) COMM (DISP->CONT)

Connector No.	M102
Connector Name	GLOVE BOX LAMP
Connector Type	A02FW




Terminal No.	1
Color of Wire	R
Signal Name [Specification]	-

Connector No.	M106
Connector Name	WIRE TO WIRE
Connector Type	TK0MW-NSB




Terminal No.	5
Color of Wire	R
Signal Name [Specification]	-

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC




Terminal No.	1
Color of Wire	W
Signal Name [Specification]	BAT (F/L)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	11
Color of Wire	R
Signal Name [Specification]	BAT (FUSE)

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	87
Color of Wire	BR
Signal Name [Specification]	COMBI SW INPUT 5

JCLWA0847GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


INL

ILLUMINATION

< DTC/CIRCUIT DIAGNOSIS >

ILLUMINATION

Connector No.	M123
Connector Name	BOM (BODY CONTROL MODULE)
Connector Type	TH4UFG-NH



Terminal No.	Color of Wire	Signal Name [Specification]
133	L	RING-SW LED
142	O	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	GR	DOOR SW (DR)

Connector No.	M132
Connector Name	CIGARETTE LIGHTER SOCKET
Connector Type	NS03FW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
1	B	
2	BR	

Connector No.	M135
Connector Name	WIRE TO WIRE
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
4	L	
5	W	
6	R	
8	Y	

Connector No.	M137
Connector Name	A/T SHIFT SELECTOR
Connector Type	TH12FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
7	Y	
9	B	

Connector No.	M138
Connector Name	HEATED SEAT SWITCH (DRIVER SIDE)
Connector Type	NS08FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
5	R	
6	Y	

Connector No.	M139
Connector Name	SNOW MODE SWITCH
Connector Type	TK08FW



Terminal No.	Color of Wire	Signal Name [Specification]
5	P	
6	R	

Connector No.	M140
Connector Name	HEATED SEAT SWITCH (PASSENGER SIDE)
Connector Type	NS03FBR-CS



Terminal No.	Color of Wire	Signal Name [Specification]
5	L	
6	W	

Connector No.	M171
Connector Name	WIRE TO WIRE
Connector Type	NS12MH-CS



Terminal No.	Color of Wire	Signal Name [Specification]
4	R	
5	L	
6	P	
8	V	

JCLWM3644GB

ILLUMINATION

< DTC/CIRCUIT DIAGNOSIS >


ILLUMINATION

Connector No.	M172
Connector Name	HEATED SEAT SWITCH (DRIVER SIDE)
Connector Type	NS06FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
5	P	-
6	V	-

Connector No.	M173
Connector Name	HEATED SEAT SWITCH (PASSENGER SIDE)
Connector Type	NS06FR-CS



Terminal No.	Color of Wire	Signal Name [Specification]
5	R	-
6	L	-

Connector No.	M221
Connector Name	SELECTOR LEVER POSITION INDICATOR
Connector Type	TH12FW




Terminal No.	Color of Wire	Signal Name [Specification]
10	R	ILL
11	B	GND

Connector No.	M303
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FGY




Terminal No.	Color of Wire	Signal Name [Specification]
19	P	-
20	Y	-

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	TK10FW-NS8




Terminal No.	Color of Wire	Signal Name [Specification]
5	Y	-
8	B	-

Connector No.	R2
Connector Name	WIRE TO WIRE
Connector Type	TH12FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
11	Y	-
	B	-

Connector No.	R11
Connector Name	WIRE TO WIRE
Connector Type	TH12MMF-NH



Terminal No.	Color of Wire	Signal Name [Specification]
11	Y	-
	B	-

Connector No.	R15
Connector Name	MAP LAMP
Connector Type	TK08FGY



Terminal No.	Color of Wire	Signal Name [Specification]
5	B	-
6	Y	-
7	B	-
8	Y	-

JCLWA0849GB

A
B
C
D
E
F
G
H
I
J
K
INL
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000004743890

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT	Off
	Front wiper switch INT	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
RR FOG SW	NOTE: The item is indicated, but not monitored.	Off
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	Rear RH door closed	Off
	Rear RH door opened	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
DOOR SW-RL	Rear LH door closed	Off	A
	Rear LH door opened	On	
DOOR SW-BK	NOTE: The item is indicated, but not monitored.	Off	B
CDL LOCK SW	Other than power door lock switch LOCK	Off	C
	Power door lock switch LOCK	On	
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off	D
	Power door lock switch UNLOCK	On	
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off	E
	Driver door key cylinder LOCK position	On	
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off	E
	Driver door key cylinder UNLOCK position	On	
KEY CYL SW-TR	NOTE: The item is indicated, but not monitored.	Off	F
HAZARD SW	Hazard switch is not pressed	Off	G
	Hazard switch is pressed	On	
REAR DEF SW	NOTE: The item is indicated, but not monitored.	Off	H
H/L WASH SW	NOTE: The item is indicated, but not monitored.	Off	H
TR CANCEL SW	Trunk lid opener cancel switch OFF	Off	I
	Trunk lid opener cancel switch ON	On	
TR/BD OPEN SW	Trunk lid opener switch OFF	Off	J
	While the trunk lid opener switch is turned ON	On	
TRNK/HAT MNTR	Trunk lid closed	Off	J
	Trunk lid opened	On	
RKE-LOCK	LOCK button of Intelligent Key is not pressed	Off	K
	LOCK button of Intelligent Key is pressed	On	
RKE-UNLOCK	UNLOCK button of Intelligent Key is not pressed	Off	K
	UNLOCK button of Intelligent Key is pressed	On	
RKE-TR/BD	TRUNK OPEN button of Intelligent Key is not pressed	Off	M
	TRUNK OPEN button of Intelligent Key is pressed	On	
RKE-PANIC	PANIC button of Intelligent Key is not pressed	Off	M
	PANIC button of Intelligent Key is pressed	On	
RKE-P/W OPEN	UNLOCK button of Intelligent Key is not pressed	Off	N
	UNLOCK button of Intelligent Key is pressed and held	On	
RKE-MODE CHG	LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously	Off	O
	LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously	On	
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V	P
	Dark outside of the vehicle	Close to 0 V	
REQ SW-DR	Driver door request switch is not pressed	Off	
	Driver door request switch is pressed	On	
REQ SW-AS	Passenger door request switch is not pressed	Off	
	Passenger door request switch is pressed	On	

INL

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
REQ SW-BD/TR	Trunk request switch is not pressed	Off
	Trunk request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
ACC RLY -F/B	Ignition switch in OFF position	Off
	Ignition switch in ACC or ON position	On
CLUCH SW	The clutch pedal is not depressed	Off
	The clutch pedal is depressed	On
BRAKE SW 1	The brake pedal is depressed when No. 7 fuse is blown	Off
	The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal	On
BRAKE SW 2	The brake pedal is not depressed	Off
	The brake pedal is depressed	On
DETE/CANCL SW	<ul style="list-style-type: none"> • Selector lever in P position (Except M/T models) • The clutch pedal is depressed (M/T models) 	Off
	<ul style="list-style-type: none"> • Selector lever in any position other than P (Except M/T models) • The clutch pedal is not depressed (M/T models) 	On
SFT PN/N SW	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
S/L -LOCK	Steering is unlocked	Off
	Steering is locked	On
S/L -UNLOCK	Steering is locked	Off
	Steering is unlocked	On
S/L RELAY-F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
UNLK SEN-DR	Driver door is unlocked	Off
	Driver door is locked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT PN -IPDM	<ul style="list-style-type: none"> • Selector lever in any position other than P and N (Except M/T models) • The clutch pedal is not depressed (M/T models) 	Off
	<ul style="list-style-type: none"> • Selector lever in P or N position (Except M/T models) • The clutch pedal is depressed (M/T models) 	On
SFT P -MET	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT N -MET	Selector lever in any position other than N	Off
	Selector lever in N position	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
ENGINE STATE	Engine stopped	Stop	A
	While the engine stalls	Stall	
	At engine cranking	Crank	B
	Engine running	Run	
S/L LOCK-IPDM	Steering is unlocked	Off	
	Steering is locked	On	C
S/L UNLK-IPDM	Steering is locked	Off	
	Steering is unlocked	On	D
S/L RELAY-REQ	Steering lock system is not the LOCK condition and the changing condition from LOCK to UNLOCK	Off	
	Steering lock system are not the LOCK condition or the changing condition from LOCK to UNLOCK	On	E
VEH SPEED 1	While driving	Equivalent to speedometer reading	
VEH SPEED 2	While driving	Equivalent to speedometer reading	F
DOOR STAT-DR	Driver door is locked	LOCK	
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Driver door is unlocked	UNLK	G
DOOR STAT-AS	Passenger door is locked	LOCK	
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Passenger door is unlocked	UNLK	H
ID OK FLAG	Steering is locked	Reset	
	Steering is unlocked	Set	I
PRMT ENG STRT	The engine start is prohibited	Reset	
	The engine start is permitted	Set	J
PRMT RKE STRT	NOTE: The item is indicated, but not monitored.	Reset	
KEY SW -SLOT	Intelligent Key is not inserted into key slot	Off	
	Intelligent Key is inserted into key slot	On	K
RKE OPE COUN1	During the operation of Intelligent Key	Operation frequency of Intelligent Key	
RKE OPE COUN2	NOTE: The item is indicated, but not monitored.	—	INL
CONFIRM ID ALL	The key ID that the key slot receives is not recognized by any key ID registered to BCM.	Yet	
	The key ID that the key slot receives is recognized by any key ID registered to BCM.	Done	M
CONFIRM ID4	The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM.	Yet	
	The key ID that the key slot receives is recognized by the fourth key ID registered to BCM.	Done	N
CONFIRM ID3	The key ID that the key slot receives is not recognized by the third key ID registered to BCM.	Yet	
	The key ID that the key slot receives is recognized by the third key ID registered to BCM.	Done	O
CONFIRM ID2	The key ID that the key slot receives is not recognized by the second key ID registered to BCM.	Yet	
	The key ID that the key slot receives is recognized by the second key ID registered to BCM.	Done	P

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
CONFIRM ID1	The key ID that the key slot receives is not recognized by the first key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the first key ID registered to BCM.	Done
TP 4	The ID of fourth Intelligent Key is not registered to BCM	Yet
	The ID of fourth Intelligent Key is registered to BCM	Done
TP 3	The ID of third Intelligent Key is not registered to BCM	Yet
	The ID of third Intelligent Key is registered to BCM	Done
TP 2	The ID of second Intelligent Key is not registered to BCM	Yet
	The ID of second Intelligent Key is registered to BCM	Done
TP 1	The ID of first Intelligent Key is not registered to BCM	Yet
	The ID of first Intelligent Key is registered to BCM	Done
AIR PRESS FL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	ID of front LH tire transmitter is registered	Done
	ID of front LH tire transmitter is not registered	Yet
ID REGST FR1	ID of front RH tire transmitter is registered	Done
	ID of front RH tire transmitter is not registered	Yet
ID REGST RR1	ID of rear RH tire transmitter is registered	Done
	ID of rear RH tire transmitter is not registered	Yet
ID REGST RL1	ID of rear LH tire transmitter is registered	Done
	ID of rear LH tire transmitter is not registered	Yet
WARNING LAMP	Tire pressure indicator OFF	Off
	Tire pressure indicator ON	On
BUZZER	Tire pressure warning alarm is not sounding	Off
	Tire pressure warning alarm is sounding	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >


TERMINAL LAYOUT

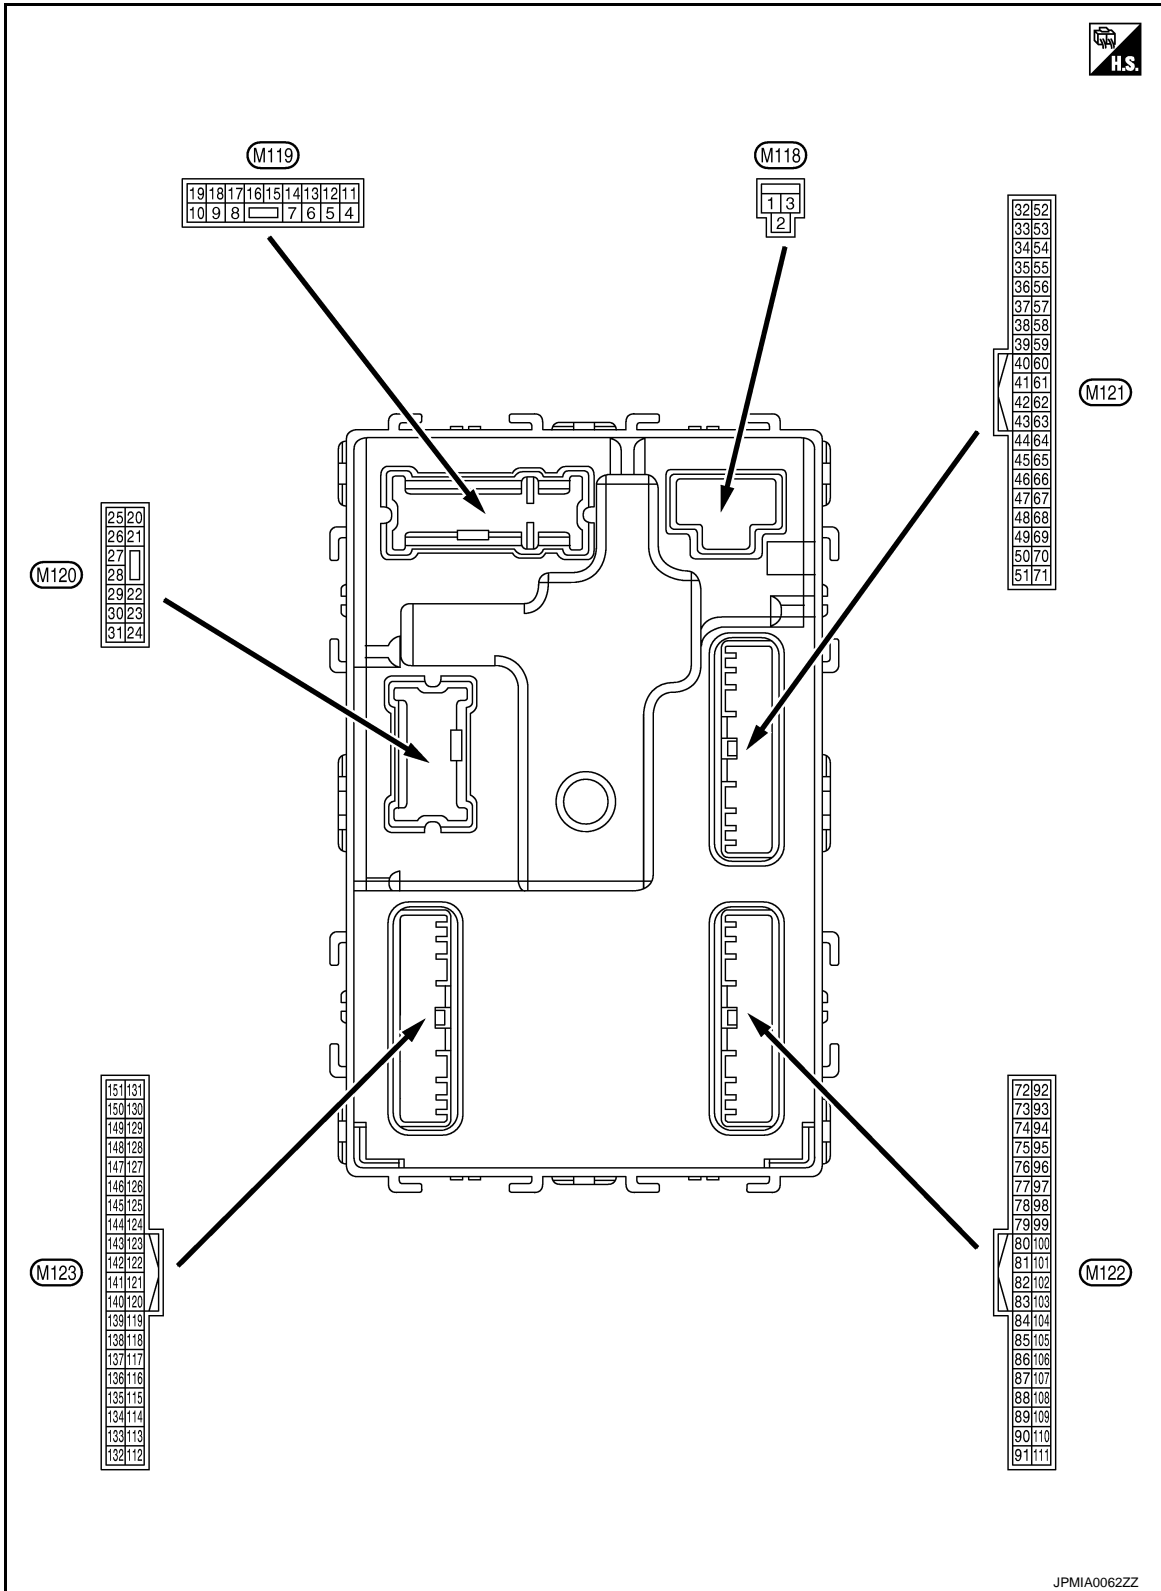

PHYSICAL VALUES





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

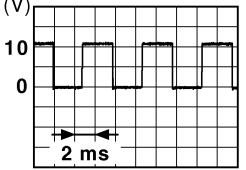Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (Y)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		Battery voltage
3 (O)	Ground	P/W power supply (RAP)	Output	Ignition switch ON		Battery voltage
4 (LG)	Ground	Interior room lamp power supply	Output	After passing the interior room lamp battery saver operation time		0 V
				Any other time after passing the interior room lamp battery saver operation time		Battery voltage
5 (V)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
7 (Y)	Ground	Step lamp	Output	Step lamp	ON	0 V
					OFF	Battery voltage
8 (V)	Ground	All doors, fuel lid LOCK	Output	All doors, fuel lid	LOCK (Actuator is activated)	Battery voltage
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door, fuel lid UNLOCK	Output	Driver door, fuel lid	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
10 (BR)	Ground	Rear RH door and rear LH door UN- LOCK	Output	Rear RH door and rear LH door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
11 (R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
14 (W)	Ground	Push-button ignition switch illumination ground	Output	Tail lamp	OFF	0 V
					ON	<p>NOTE: When the illumination brightening/dimming level is in the neutral position</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p>
15 (Y)	Ground	ACC indicator lamp	Output	Ignition switch	OFF	Battery voltage
					ACC or ON	0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

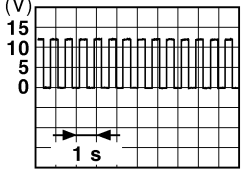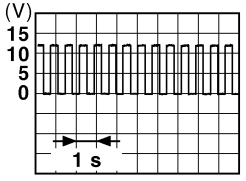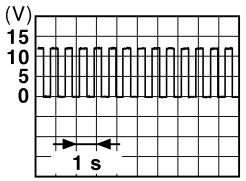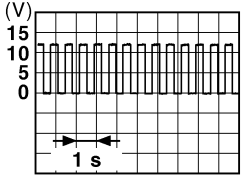Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
17 (W)	Ground	Turn signal (Front RH)	Output	Ignition switch ON	Turn signal switch OFF 0 V
				Turn signal switch RH	 <p style="text-align: center;">6.5 V</p>
18 (O)	Ground	Turn signal (Front LH)	Output	Ignition switch ON	Turn signal switch OFF 0 V
				Turn signal switch LH	 <p style="text-align: center;">6.5 V</p>
19 (V)	Ground	Room lamp timer control	Output	Interior room lamp	OFF Battery voltage
				ON	0 V
20 (V)	Ground	Turn signal (Rear RH)	Output	Ignition switch ON	Turn signal switch OFF 0 V
				Turn signal switch RH	 <p style="text-align: center;">6.5 V</p>
23 (G)	Ground	Trunk lid opening	Output	Trunk lid	Open (Trunk lid opener actuator is activated) Battery voltage
				Close (Trunk lid opener actuator is not activated)	0 V
25 (G)	Ground	Turn signal (Rear LH)	Output	Ignition switch ON	Turn signal switch OFF 0 V
				Turn signal switch LH	 <p style="text-align: center;">6.5 V</p>
30 (R)	Ground	Trunk room lamp	Output	Trunk room lamp	ON 0 V
				OFF	Battery voltage

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

INL

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
34 (SB)	Ground	Trunk room antenna 1 (-)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
35 (V)	Ground	Trunk room antenna 1 (+)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
38 (B)	Ground	Rear bumper anten- na (-)	Output	When the trunk lid request switch is operated with ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >






Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
39 (W)	Ground	Rear bumper antenna (+)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
47 (Y)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC Battery voltage ON 0 V
50 (R)	Ground	Trunk room lamp switch	Input	Trunk room lamp switch	<p style="text-align: right; font-size: small;">JPMIA0011GB</p> 11.8 V
				ON (Trunk is open)	0 V
52 (SB)	Ground	Starter relay control	Output	Ignition switch OFF (M/T models)	When the clutch pedal is depressed Battery voltage When the clutch pedal is not depressed 0 V
				Ignition switch ON (Except M/T models)	When selector lever is in P or N position and the brake is depressed Battery voltage
					When selector lever is in P or N position and the brake is not depressed 0 V
61 (W)	Ground	Trunk request switch	Input	Trunk request switch	ON (Pressed) 0 V OFF (Not pressed)
				<p style="text-align: right; font-size: small;">JPMIA0016GB</p> 1.0 V	
64 (V)	Ground	Request switch buzzer	Output	Request switch buzzer	Sounding 0 V Not sounding Battery voltage

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

INL







BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

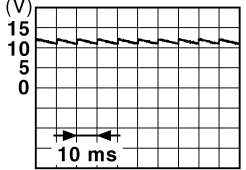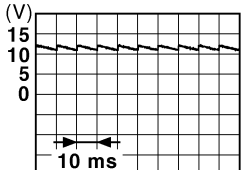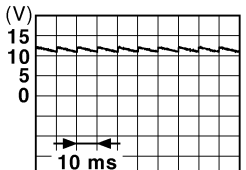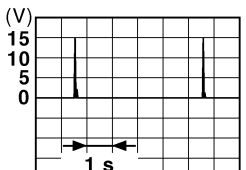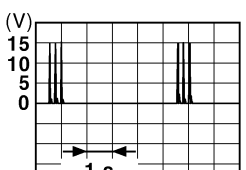Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
67 (GR)	Ground	Trunk lid opener switch	Input	Trunk lid opener switch	Pressed	0 V
				Not pressed	 <p style="text-align: right; font-size: small;">JPMIA0011GB 11.8 V</p>	
68 (BR)	Ground	Rear RH door switch	Input	Rear RH door switch	OFF (When rear RH door closes)	 <p style="text-align: right; font-size: small;">JPMIA0011GB 11.8 V</p>
				ON (When rear RH door opens)	0 V	
69 (R)	Ground	Rear LH door switch	Input	Rear LH door switch	OFF (When rear LH door closes)	 <p style="text-align: right; font-size: small;">JPMIA0011GB 11.8 V</p>
				ON (When rear LH door opens)	0 V	
72 (R)	Ground	Room antenna 2 (-) (Center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

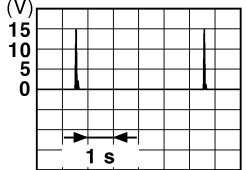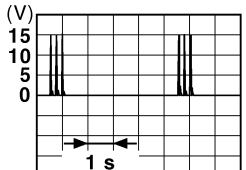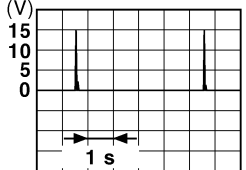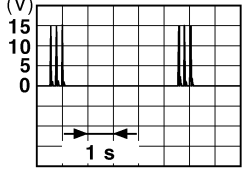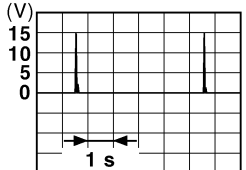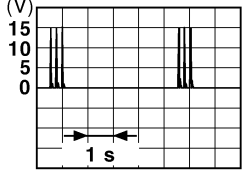Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
73 (G)	Ground	Room antenna 2 (+) (Center console)	Output	Ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
74 (SB)	Ground	Passenger door an- tenna (-)	Output	When the pas- senger door re- quest switch is operated with ig- nition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
75 (BR)	Ground	Passenger door an- tenna (+)	Output	When the pas- senger door re- quest switch is operated with ig- nition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

INL





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
76 (V)	Ground	Driver door antenna (-)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When the driver door request switch is operat- ed with ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
77 (LG)	Ground	Driver door antenna (+)	Output	When Intelligent Key is in the antenna detection area	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When the driver door request switch is operat- ed with ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>
78 (Y)	Ground	Room antenna (-) (In- strument panel)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	<p style="text-align: right; font-size: small;">JMKIA0063GB</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

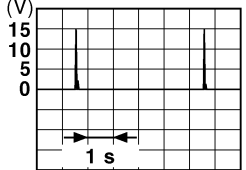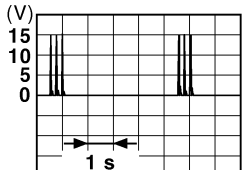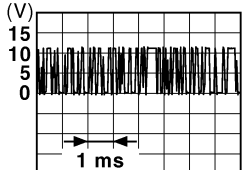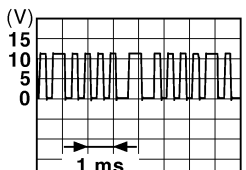

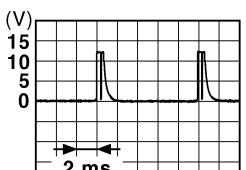
Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
79 (BR)	Ground	Room antenna (+) (Instrument panel)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment 	
					When Intelligent Key is not in the passenger compart- ment 	
80 (GR)	Ground	NATS antenna amp (Built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelli- gent Key into the key slot. Just after pressing ignition switch. Pointer of tester should move.	
81 (W)	Ground	NATS antenna amp (Built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelli- gent Key into the key slot. Just after pressing ignition switch. Pointer of tester should move.	
82 (R)	Ground	Ignition relay [fuse block (J/B)] control	Output	Ignition switch	OFF or ACC ON	0 V Battery voltage
83 (Y)	Ground	Remote keyless entry receiver signal	Input/ Output	During waiting		
				When operating either button on Intelligent Key		

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

INL




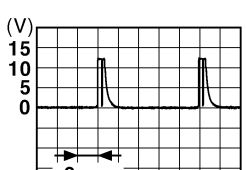
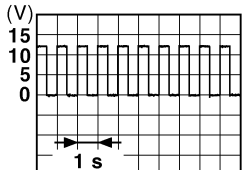
BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

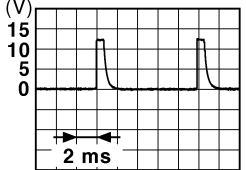Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
87 (BR)	Ground	Combination switch INPUT 5	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>
					Front fog lamp switch ON (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0037GB</p> <p style="text-align: center;">1.3 V</p>
					Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7 	 <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

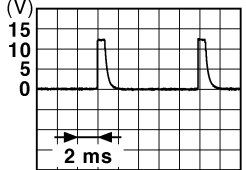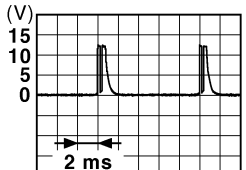Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
88 (V)	Ground	Combination switch INPUT 3	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>
					Lighting switch HI (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0036GB</p> <p style="text-align: center;">1.3 V</p>
					Lighting switch 2ND (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0037GB</p> <p style="text-align: center;">1.3 V</p>
					Any of the conditions below with all switch OFF	 <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p>
89 (BR)	Ground	Push-button ignition switch (Push switch)	Input	Push-button igni- tion switch (push switch)	Pressed	0 V
					Not pressed	Battery voltage
90 (P)	Ground	CAN - L	Input/ Output	—	—	
91 (L)	Ground	CAN - H	Input/ Output	—	—	
92 (LG)	Ground	Key slot illumination	Output	Key slot illumina- tion	OFF	0 V
					Blinking	 <p style="text-align: right; font-size: small;">JPMIA0015GB</p> <p style="text-align: center;">6.5 V</p>
					ON	Battery voltage



A
B
C
D
E
F
G
H
I
J
K

INL

M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

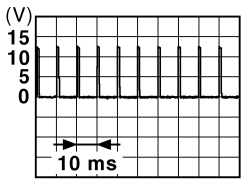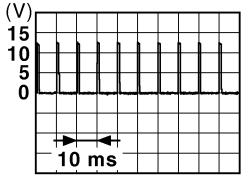Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
93 (V)	Ground	ON indicator lamp	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
95 (O)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
96 (GR)	Ground	A/T device (Detention switch) power supply	Output	—		Battery voltage
97 (L)	Ground	Steering lock condition No. 1	Input	Steering lock	LOCK status	0 V
					UNLOCK status	Battery voltage
98 (P)	Ground	Steering lock condition No. 2	Input	Steering lock	LOCK status	Battery voltage
					UNLOCK status	0 V
99 (R)	Ground	Selector lever P position switch	Input	Selector lever	P position	0 V
					Any position other than P	Battery voltage
		ASCD clutch switch (M/T models without ICC)		ASCD clutch switch	OFF (Clutch pedal is depressed)	0 V
					ON (Clutch pedal is not depressed)	Battery voltage
		ICC clutch switch (M/T models with ICC)		ICC clutch switch	OFF (Clutch pedal is depressed)	0 V
					ON (Clutch pedal is not depressed)	Battery voltage
100 (G)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: right; font-size: small;">JPMIA0016GB 1.0 V</p>
101 (SB)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: right; font-size: small;">JPMIA0016GB 1.0 V</p>
102 (O)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
103 (LG)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF		Battery voltage
106 (W)	Ground	Steering wheel lock unit power supply	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0 V

BCM (BODY CONTROL MODULE)





< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
107 (LG)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper intermittent dial 4)	All switch OFF	<p style="text-align: center;">1.4 V</p>
					Turn signal switch LH	<p style="text-align: center;">1.3 V</p>
					Turn signal switch RH	<p style="text-align: center;">1.3 V</p>
					Front wiper switch LO	<p style="text-align: center;">1.3 V</p>
					Front washer switch ON	<p style="text-align: center;">1.3 V</p>

A
B
C
D
E
F
G
H
I
J
K
INL
M
N
O
P




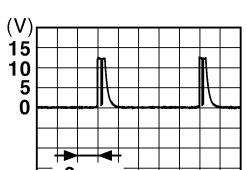

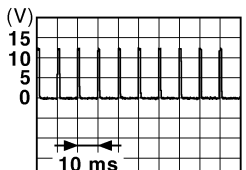
BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

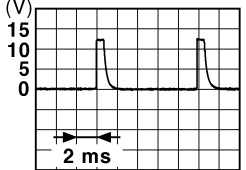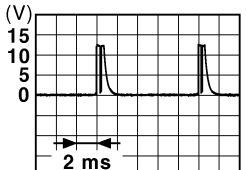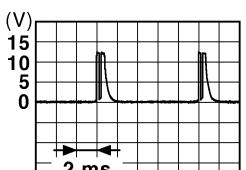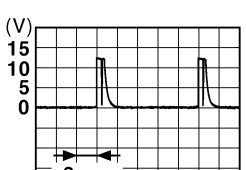Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
108 (R)	Ground	Combination switch INPUT 4	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	 <small>JPMIA0041GB</small> 1.4 V
					Lighting switch AUTO (Wiper intermittent dial 4)	 <small>JPMIA0038GB</small> 1.3 V
					Lighting switch 1ST (Wiper intermittent dial 4)	 <small>JPMIA0036GB</small> 1.3 V
					Any of the conditions below with all switch OFF	 <small>JPMIA0039GB</small> 1.3 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

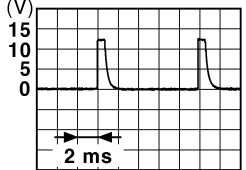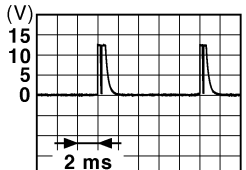Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
109 (Y)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	 <p style="text-align: right;">1.4 V</p>
					Lighting switch PASS	 <p style="text-align: right;">1.3 V</p>
					Lighting switch 2ND	 <p style="text-align: right;">1.3 V</p>
					Front wiper switch INT	 <p style="text-align: right;">1.3 V</p>
					Front wiper switch HI	 <p style="text-align: right;">1.3 V</p>
					Pressed	0 V
110 (G)	Ground	Hazard switch	Input	Hazard switch		
				Not pressed	 <p style="text-align: right;">1.1 V</p>	

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

INL




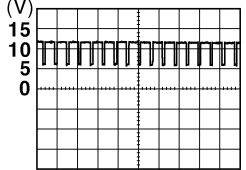
BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
111 (Y)	Ground	Steering lock unit communication	Input/ Output	Steering lock	LOCK status	Battery voltage
					LOCK or UNLOCK	<p style="text-align: right; font-size: small;">JMKIA0066GB</p>
					For 15 seconds after UN- LOCK	Battery voltage
				15 seconds or later after UNLOCK	0 V	
113 (P)	Ground	Optical sensor signal	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
114 (R)	Ground	Clutch interlock switch	Input	Clutch interlock switch	OFF (Clutch pedal is not depressed)	0 V
					ON (Clutch pedal is de- pressed)	Battery voltage
116 (SB)	Ground	Stop lamp switch 1	Input	—	Battery voltage	
118 (P)	Ground	Stop lamp switch 2	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is de- pressed)	Battery voltage
				ICC brake hold relay (With ICC)	OFF	0 V
					ON	Battery voltage
119 (SB)	Ground	Front door lock as- sembly driver side (Unlock sensor)	Input	Driver door	LOCK status	<p style="text-align: right; font-size: small;">JPMIA0011GB</p>
					UNLOCK status	0 V
						11.8 V
121 (R)	Ground	Key slot switch	Input	When Intelligent Key is inserted into key slot	Battery voltage	
				When Intelligent Key is not inserted into key slot	0 V	
122 (V)	Ground	ACC feedback signal	Input	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
123 (W)	Ground	IGN feedback signal	Input	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

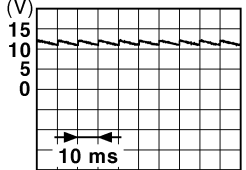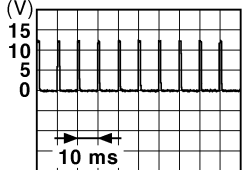

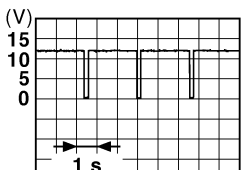
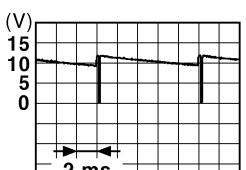
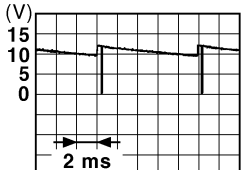
Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
124 (LG)	Ground	Passenger door switch	Input	Passenger door switch	OFF (When passenger door closes)	 11.8 V
					ON (When passenger door opens)	0 V
129 (O)	Ground	Trunk lid opener cancel switch	Input	Trunk lid opener cancel switch	CANCEL	 1.1 V
					ON	0 V
132 (V)	Ground	Power window switch communication	Input/ Output	Ignition switch ON		 10.2 V
					Ignition switch OFF or ACC	0 V
133 (W)	Ground	Push-button ignition switch illumination	Output	Push-button ignition switch illumination	ON (When tail lamps OFF)	5.5 V
					ON (When tail lamps ON)	NOTE: The pulse width of this wave is varied by the illumination bright- ening/dimming level.
						 5.5 V
				OFF	0 V	
134 (GR)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	ON	0 V
					OFF	Battery voltage
137 (O)	Ground	Receiver and sensor ground	Input	Ignition switch ON		0 V
138 (V)	Ground	Receiver and sensor power supply output	Output	Ignition switch	OFF	0 V
					ACC or ON	5.0 V

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

INL





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

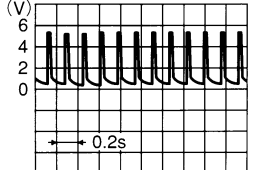Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
139 (L)	Ground	Tire pressure receiver signal	Input/ Output	Ignition switch ON	 <p style="text-align: right;">OCC3881D</p>	
				When receiving the signal from the transmitter	 <p style="text-align: right;">OCC3880D</p>	
140 (GR)	Ground	Selector lever P/N position signal	Input	Selector lever	P or N position 12.0 V Except P and N positions 0 V	
				141 (G)	Ground	Security indicator signal
Blinking	 <p style="text-align: right;">JPMA0014GB</p> <p style="text-align: center;">11.3 V</p>					
142 (O)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper intermittent dial 4)	All switch OFF	0 V
					Lighting switch 1ST	 <p style="text-align: right;">JPMA0031GB</p> <p style="text-align: center;">10.7 V</p>
143 (P)	Ground	Combination switch OUTPUT 1	Output	Combination switch	Lighting switch HI	
					Lighting switch 2ND	
143 (P)	Ground	Combination switch OUTPUT 1	Output	Combination switch	Turn signal switch RH	 <p style="text-align: right;">JPMA0032GB</p> <p style="text-align: center;">10.7 V</p>
					All switch OFF (Wiper intermittent dial 4) Front wiper switch HI (Wiper intermittent dial 4) Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 • Wiper intermittent dial 6 • Wiper intermittent dial 7 	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

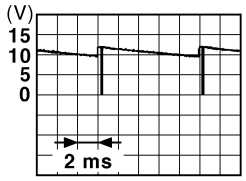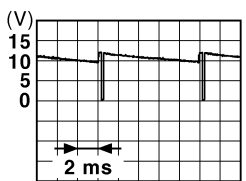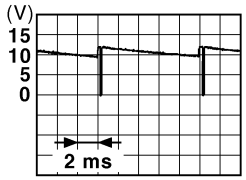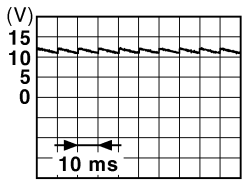Terminal No. (Wire color)		Description		Condition	Value (Approx.)		
+	-	Signal name	Input/ Output				
144 (G)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	0 V	
					Front washer switch ON (Wiper intermittent dial 4)	 <p style="text-align: right;">JPMAI0033GB</p>	
					Any of the conditions below with all switch OFF		10.7 V
145 (L)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	0 V	
					Front wiper switch INT	 <p style="text-align: right;">JPMAI0034GB</p>	
					Front wiper switch LO		10.7 V
					Lighting switch AUTO		
146 (SB)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	0 V	
					Front fog lamp switch ON	 <p style="text-align: right;">JPMAI0035GB</p>	
					Lighting switch 2ND		10.7 V
					Lighting switch PASS		
					Turn signal switch LH		
149 (W)	Ground	Tire pressure warn- ing check switch	Input	—	5 V		
150 (GR)	Ground	Driver door switch	Input	Driver door switch	OFF (When driver door closes)	 <p style="text-align: right;">JPMAI0011GB</p>	
					ON (When driver door opens)	0 V	
151 (G)	Ground	Rear window defog- ger relay	Output	Rear window de- fogger	Active	0 V	
					Not activated	Battery voltage	


A
B
C
D
E
F
G
H
I
J
K
INL
M
N
O
P

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Wiring Diagram - BCM -

INFOID:000000004743891

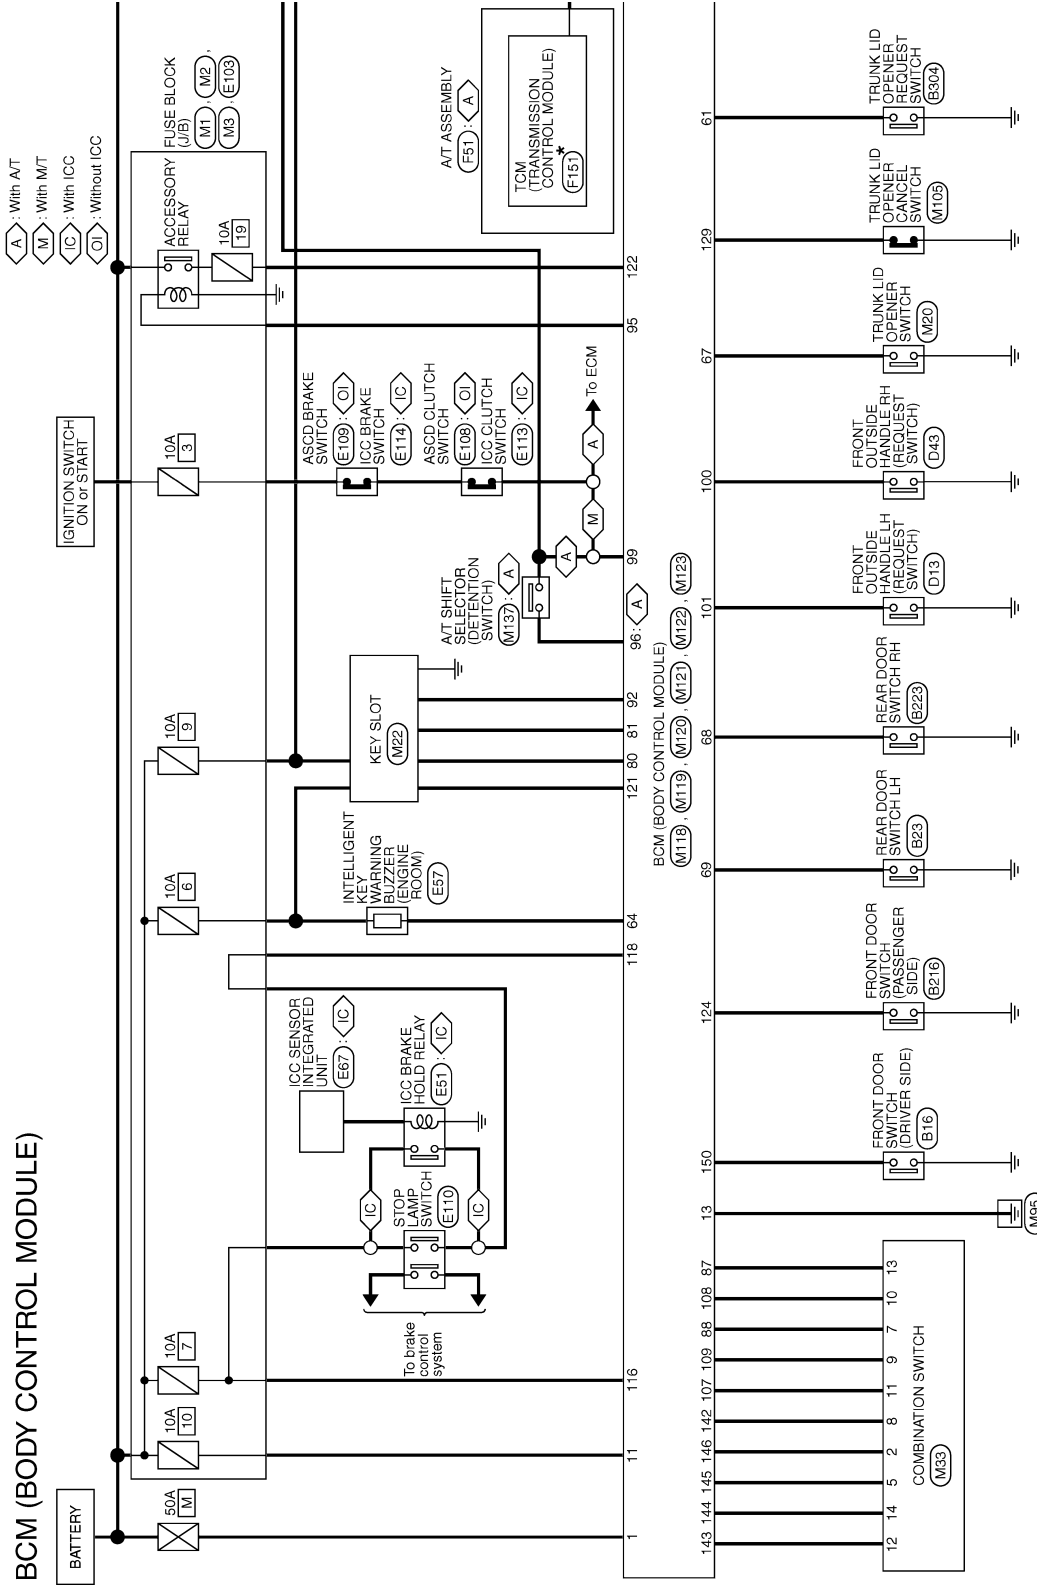


*: This connector is not shown in "Harness Layout".

2009/03/17

JCMWM4257GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

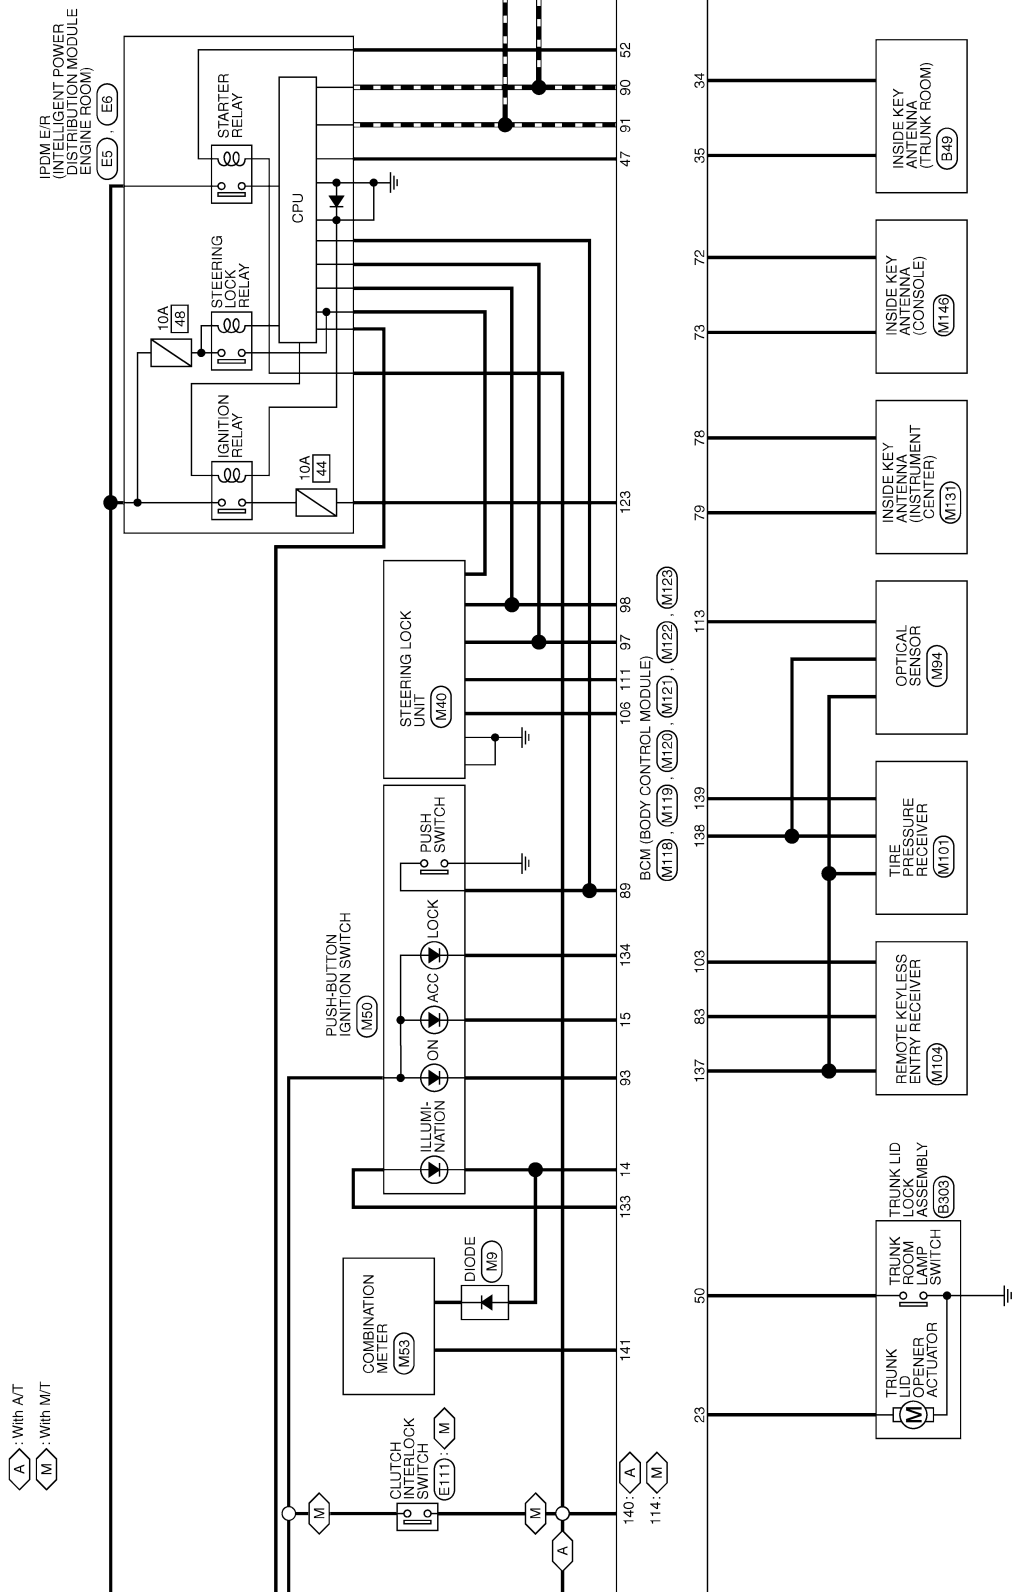


JCMWA0929GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

BCM (BODY CONTROL MODULE)

Connector No.	M33
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
2	SB	OUTPUT 4
5	L	OUTPUT 3
7	V	INPUT 3
8	O	OUTPUT 5
9	Y	INPUT 2
10	R	INPUT 4
11	LG	INPUT 1
12	P	OUTPUT 1
13	BR	INPUT 5
14	G	OUTPUT 2



Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MS12PW-CS




Terminal No.	Color of Wire	Signal Name [Specification]
20	V	REAR FLASHER OUTPUT(RIGHT)
23	L	TRUNK OPENER OUTPUT
25	Y	REAR FLASHER OUTPUT(LEFT)
30	P	TRUNK LAMP OUTPUT

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03EB-LC




Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT (E/L)
2	Y	POWER WINDOW POWER SUPPLY(BAT)
3	O	POWER WINDOW POWER SUPPLY(IRAP)

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FGY-NH



Terminal No.	Color of Wire	Signal Name [Specification]
34	SB	TRUNK ANTI-
35	V	TRUNK ANTI+
38	B	BACK ANTI-
39	W	BACK ANTI+
47	Y	ING USM CONT1
50	O	TRUNK SW
52	SR	ST CONT USM
61	SR	TRUNK REQUEST SW
64	G	BUTZES
67	GR	INTERIOR TRUNK SW
68	BK	DOOR SW (RR RH)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
4	LG	BAT SAVER OUTPUT
5	V	DOOR UNLOCK OUTPUT (AS)
7	SB	STEP LAMP OUTPUT
8	V	DOOR LOCK OUTPUT (ALL)
9	G	DOOR UNLOCK OUTPUT (DR)
10	BR	DOOR UNLOCK OUTPUT (RR)
11	R	BAT (FUSE)
13	B	GND
14	W	RING/ SW LED GND
15	O	ACC LED
17	W	FRONT FLASHER OUTPUT(RIGHT)

69	R	DOOR SW (RR LH)
----	---	-----------------

18	O	FRONT FLASHER OUTPUT(LEFT)
19	V	ROOM LAMP OUTPUT

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

133	L	RING/SW LED
134	LG	LOCK LED
137	O	SENSOR GND
138	V	AUTO LIGHT SENSOR POWER SUPPLY
139	L	RECEIVER SIGNAL
140	GR	SHIFT N/P
141	G	SECURITY INDICATOR OUTPUT
142	O	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
149	W	MODE TRG SW
150	GR	DOOR SW (DR)
151	G	REAR DEFROGGER OUTPUT

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH




Terminal No.	Color of Wire	Signal Name [Specification]
113	O	AUTO LIGHT SENSOR INPUT
114	R	CLUTCH SW
116	SB	STOP LAMP LOW
118	BR	STOP LAMP HIGH
119	SB	DR CONDITION SW
121	SB	KEY SWITCH SIGNAL
122	V	ACC F/B
123	W	IGN F/B
124	LG	DOOR SW (AS)
129	O	TRUNK CANCEL SW
132	V	POWER WINDOW SERIAL LINK

83	Y	KEYLESS TUNER SIGNAL
87	BR	COMBI SW INPUT 5
88	V	COMBI SW INPUT 3
89	BR	ENG SW
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT/ILL
93	V	ON LED
95	O	ACC CONT
96	GR	A/T SHIFT SELECTOR
97	L	S/L CONDITION 1
98	P	S/L CONDITION 2
99	R	SHIFT P (With A/T)
99	BR	SHIFT P (With M/T)
100	Y	AS REQUEST SW
101	P	DR REQUEST SW
102	O	IGN2 CONT
103	L	KEYLESS TUNER POWER SUPPLY
106	W	S/L F/V (GPU)
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	Y	IGN F/B
110	G	HAZARD SW
111	Y	S/L (K LINE)

BCM (BODY CONTROL MODULE)

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color of Wire	Signal Name [Specification]
72	R	ROOM ANT2-
73	G	ROOM ANT2+
74	SB	AS DOOR ANT-
75	BR	AS DOOR ANT+
76	V	DR DOOR ANT-
77	LG	DR DOOR ANT+
78	Y	ROOM ANTI-
79	BR	ROOM ANTI+
80	GR	IMMOBI ANTENNA CONTROL
81	W	IMMOBI ANTENNA SIGNAL
82	R	IGN ELEC CONT

Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

JCMWM4258GB

INFOID:000000004743892

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC
B2190: NATS ANTenna AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2557: VEHICLE SPEED	Inhibit steering lock	When normal vehicle speed signals are received from ABS actuator and electric unit (control unit) for 500 ms
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Starter control relay signal • Starter relay status signal
B2563: HI VOLTAGE	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock 	500 ms after the power supply voltage decreases to less than 18 V
B2601: SHIFT POSITION	Inhibit steering lock	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> • Selector lever P position switch signal • P range signal (CAN)
B2602: SHIFT POSITION	Inhibit steering lock	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Vehicle speed: 4 km/h (2.5 MPH) or more
B2603: SHIFT POSI STATUS	Inhibit steering lock	500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Selector lever P/N position signal: Except P and N positions (0 V)
B2604: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P and N position (battery voltage) - P range signal or N range signal (CAN): ON • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: Except P and N positions (0 V) - P range signal and N range signal (CAN): OFF
B2605: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position <ul style="list-style-type: none"> - Power position: IGN - Selector lever P/N position signal: Except P and N positions (0 V) - Interlock/PNP switch signal (CAN): OFF • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P or N position (battery voltage) - PNP switch signal (CAN): ON
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal)

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Display contents of CONSULT	Fail-safe	Cancellation
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> Steering lock relay signal (Request signal) Steering lock relay signal (Condition signal)
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> Starter motor relay control signal Starter relay status signal (CAN)
B2609: S/L STATUS	<ul style="list-style-type: none"> Inhibit engine cranking Inhibit steering lock 	When the following steering lock conditions agree <ul style="list-style-type: none"> BCM steering lock control status Steering lock condition No. 1 signal status Steering lock condition No. 2 signal status
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> IGN relay (IPDM E/R) control signal: OFF (Battery voltage) Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled <ul style="list-style-type: none"> Power position changes to ACC Receives engine status signal (CAN)
B2612: S/L STATUS	<ul style="list-style-type: none"> Inhibit engine cranking Inhibit steering lock 	When any of the following conditions are fulfilled <ul style="list-style-type: none"> Steering lock unit status signal (CAN) is received normally The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R)
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the steering lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E1: ENG STATE NO RES	Inhibit engine cranking	When any of the following conditions are fulfilled <ul style="list-style-type: none"> Power position changes to ACC Receives engine status signal (CAN)

HIGH FLASHER OPERATION

BCM detects the turn signal lamp circuit status by the current value.

BCM increases the turn signal lamp blinking speed if the bulb or harness open is detected with the turn signal lamp operating.

NOTE:

The blinking speed is normal while activating the hazard warning lamp.

DTC Inspection Priority Chart

INFOID:000000004743893

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	<ul style="list-style-type: none"> B2562: LOW VOLTAGE B2563: HI VOLTAGE
2	<ul style="list-style-type: none"> U1000: CAN COMM U1010: CONTROL UNIT(CAN)
3	<ul style="list-style-type: none"> B2190: NATS ANTENA AMP B2191: DIFFERENCE OF KEY B2192: ID DISCORD BCM-ECM B2193: CHAIN OF BCM-ECM B2195: ANTI SCANNING

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

Priority	DTC
4	<ul style="list-style-type: none"> • B2013: ID DISCORD BCM-S/L • B2014: CHAIN OF S/L-BCM • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP SW • B2605: PNP SW • B2606: S/L RELAY • B2607: S/L RELAY • B2608: STARTER RELAY • B2609: S/L STATUS • B260A: IGNITION RELAY • B260B: STEERING LOCK UNIT • B260C: STEERING LOCK UNIT • B260D: STEERING LOCK UNIT • B260F: ENG STATE SIG LOST • B2611: ACC RELAY • B2612: S/L STATUS • B2614: ACC RELAY CIRC • B2615: BLOWER RELAY CIRC • B2616: IGN RELAY CIRC • B2617: STARTER RELAY CIRC • B2618: BCM • B2619: BCM • B261A: PUSH-BTN IGN SW • B261E: VEHICLE TYPE • B26E1: ENG STATE NO RES • C1729: VHCL SPEED SIG ERR • U0415: VEHICLE SPEED SIG
5	<ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1712: [CHECKSUM ERR] FL • C1713: [CHECKSUM ERR] FR • C1714: [CHECKSUM ERR] RR • C1715: [CHECKSUM ERR] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1720: [CODE ERR] FL • C1721: [CODE ERR] FR • C1722: [CODE ERR] RR • C1723: [CODE ERR] RL • C1724: [BATT VOLT LOW] FL • C1725: [BATT VOLT LOW] FR • C1726: [BATT VOLT LOW] RR • C1727: [BATT VOLT LOW] RL • C1734: CONTROL UNIT
6	<ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

DTC Index

INFOID:000000004743894

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data and IGN Counter, refer to [BCS-13, "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)"](#).

CONSULT display	Fail-safe	Freeze Frame Data	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—	—
U1000: CAN COMM	—	—	—	—	BCS-33
U1010: CONTROL UNIT(CAN)	—	—	—	—	BCS-34
U0415: VEHICLE SPEED SIG	—	—	—	—	BCS-35
B2013: ID DISCORD BCM-S/L	×	×	—	—	SEC-54
B2014: CHAIN OF S/L-BCM	×	×	—	—	SEC-55
B2190: NATS ANTENA AMP	×	—	—	—	SEC-46
B2191: DIFFERENCE OF KEY	×	—	—	—	SEC-49
B2192: ID DISCORD BCM-ECM	×	—	—	—	SEC-50
B2193: CHAIN OF BCM-ECM	×	—	—	—	SEC-52
B2195: ANTI SCANNING	×	—	—	—	SEC-53
B2553: IGNITION RELAY	—	×	—	—	PCS-50
B2555: STOP LAMP	—	×	—	—	SEC-58
B2556: PUSH-BTN IGN SW	—	×	×	—	SEC-60
B2557: VEHICLE SPEED	×	×	×	—	SEC-62
B2560: STARTER CONT RELAY	×	×	×	—	SEC-63
B2562: LOW VOLTAGE	—	×	—	—	BCS-36
B2563: HI VOLTAGE	×	×	×	—	BCS-37
B2601: SHIFT POSITION	×	×	×	—	SEC-64
B2602: SHIFT POSITION	×	×	×	—	SEC-67
B2603: SHIFT POSI STATUS	×	×	×	—	SEC-69
B2604: PNP SW	×	×	×	—	SEC-72
B2605: PNP SW	×	×	×	—	SEC-74
B2606: S/L RELAY	×	×	×	—	SEC-76
B2607: S/L RELAY	×	×	×	—	SEC-77
B2608: STARTER RELAY	×	×	×	—	SEC-79
B2609: S/L STATUS	×	×	×	—	SEC-81
B260A: IGNITION RELAY	×	×	×	—	PCS-52
B260B: STEERING LOCK UNIT	—	×	×	—	SEC-85
B260C: STEERING LOCK UNIT	—	×	×	—	SEC-86
B260D: STEERING LOCK UNIT	—	×	×	—	SEC-87
B260F: ENG STATE SIG LOST	×	×	×	—	SEC-88
B2611: ACC RELAY	—	×	—	—	PCS-54
B2612: S/L STATUS	×	×	×	—	SEC-90
B2614: ACC RELAY CIRC	—	×	×	—	PCS-57

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Freeze Frame Data	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference page
B2615: BLOWER RELAY CIRC	—	×	×	—	PCS-60
B2616: IGN RELAY CIRC	—	×	×	—	PCS-63
B2617: STARTER RELAY CIRC	×	×	×	—	SEC-94
B2618: BCM	×	×	×	—	PCS-66
B2619: BCM	×	×	×	—	SEC-96
B261A: PUSH-BTN IGN SW	—	×	×	—	SEC-97
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	—	SEC-100
B2621: INSIDE ANTENNA	—	×	—	—	DLK-61
B2622: INSIDE ANTENNA	—	×	—	—	DLK-63
B2623: INSIDE ANTENNA	—	×	—	—	DLK-65
B26E1: ENG STATE NO RES	×	×	×	—	SEC-89
C1704: LOW PRESSURE FL	—	—	—	×	WT-15
C1705: LOW PRESSURE FR	—	—	—	×	WT-15
C1706: LOW PRESSURE RR	—	—	—	×	WT-15
C1707: LOW PRESSURE RL	—	—	—	×	WT-15
C1708: [NO DATA] FL	—	—	—	×	WT-17
C1709: [NO DATA] FR	—	—	—	×	WT-17
C1710: [NO DATA] RR	—	—	—	×	WT-17
C1711: [NO DATA] RL	—	—	—	×	WT-17
C1712: [CHECKSUM ERR] FL	—	—	—	×	WT-20
C1713: [CHECKSUM ERR] FR	—	—	—	×	WT-20
C1714: [CHECKSUM ERR] RR	—	—	—	×	WT-20
C1715: [CHECKSUM ERR] RL	—	—	—	×	WT-20
C1716: [PRESSDATA ERR] FL	—	—	—	×	WT-23
C1717: [PRESSDATA ERR] FR	—	—	—	×	WT-23
C1718: [PRESSDATA ERR] RR	—	—	—	×	WT-23
C1719: [PRESSDATA ERR] RL	—	—	—	×	WT-23
C1720: [CODE ERR] FL	—	—	—	×	WT-25
C1721: [CODE ERR] FR	—	—	—	×	WT-25
C1722: [CODE ERR] RR	—	—	—	×	WT-25
C1723: [CODE ERR] RL	—	—	—	×	WT-25
C1724: [BATT VOLT LOW] FL	—	—	—	×	WT-28
C1725: [BATT VOLT LOW] FR	—	—	—	×	WT-28
C1726: [BATT VOLT LOW] RR	—	—	—	×	WT-28
C1727: [BATT VOLT LOW] RL	—	—	—	×	WT-28
C1729: VHCL SPEED SIG ERR	—	—	—	×	WT-31
C1734: CONTROL UNIT	—	—	—	×	WT-32

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

COMBINATION METER


Reference Value

INFOID:000000003038079



VALUES ON THE DIAGNOSIS TOOL

Refer to [MWI-81, "Reference Value"](#).

TERMINAL LAYOUT





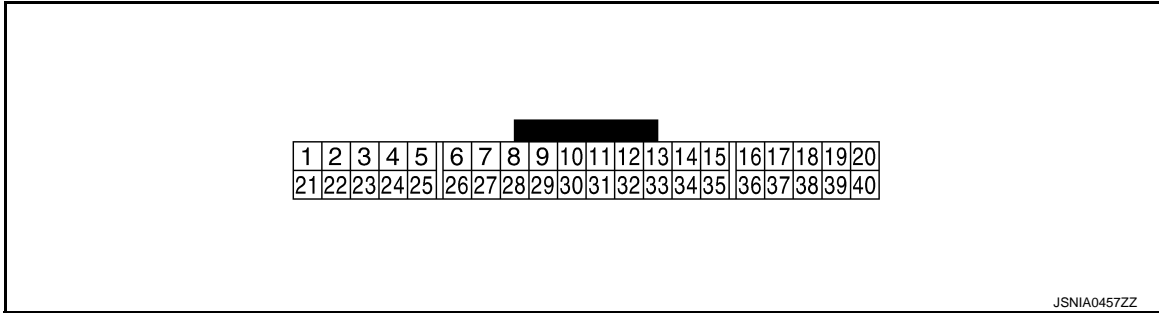


PHYSICAL VALUES

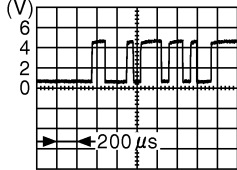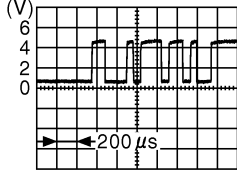Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (GR)*1 (V)*2	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
2 (LG)	Ground	Communication signal (METER→ AMP.)	Output	Ignition switch ON	—	 JSNIA0027GB
3 (GR)	Ground	Communication signal (AMP.→ METER)	Input	Ignition switch ON	—	 JSNIA0027GB
5 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
6 (W)	Ground	Alternator signal	Input	Ignition switch ON	Charge warning lamp ON	0 V
					Charge warning lamp OFF	12 V
7 (LG)	Ground	Air bag signal	Input	Ignition switch ON	Air bag warning lamp ON	4 V
					Air bag warning lamp OFF	0 V
10 (G)	Ground	Security signal	Input	Ignition switch OFF	Security warning lamp ON	0 V
					Security warning lamp OFF	12 V
15 (B)	Ground	Ground	—	Ignition switch ON	—	0 V




COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

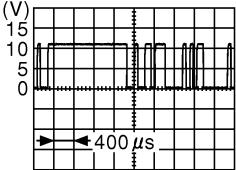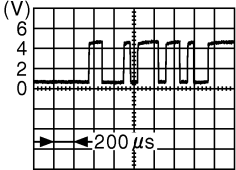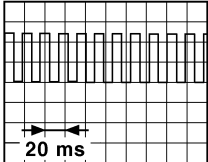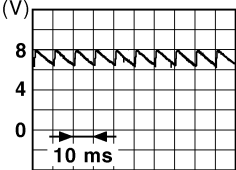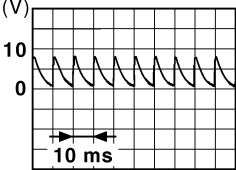Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
16 (B)	Ground	Meter control switch ground	—	Ignition switch ON	—	0 V
21 (R)	Ground	Ignition signal	Input	Ignition switch ON	—	12 V
22 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
24 (BR)	Ground	Communication signal (LCD→ AMP.)	Output	Ignition switch ON	—	 <small>JSNIA0028GB</small>
25 (Y)	Ground	Communication signal (AMP.→ LCD)	Input	Ignition switch ON	—	 <small>JSNIA0027GB</small>
26 (R)	Ground	Vehicle speed signal (8-pulse)	Input	Ignition switch ON	Speedometer operated [When vehicle speed is ap- prox. 40 km/h (25 MPH)]	<p>NOTE: The maximum voltage varies de- pending on the specification (destination unit).</p>  <small>JSNIA0012GB</small>
27 (V) ^{*1} (O) ^{*2}	Ground	Parking brake switch signal	Input	Ignition switch ON	Parking brake ON	0 V
					Parking brake OFF	 <small>JSNIA0007GB</small>
28 (W) ^{*1} (SB) ^{*2}	Ground	Brake fluid level switch sig- nal	Input	Ignition switch ON	Brake fluid level is normal.	 <small>JSNIA0008GB</small>
					The brake fluid level is low- er than the low level	0 V

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

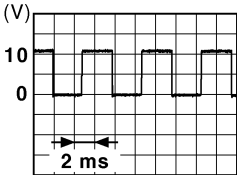Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
29 (SB) ^{*1} (L) ^{*2}	Ground	Seat belt buckle switch signal (driver side)	Input	Ignition switch ON	When driver seat belt is fastened	12 V
					When driver seat belt is unfastened	0 V
30 (G)	Ground	Seat belt buckle switch signal (passenger side)	Input	Ignition switch ON	<ul style="list-style-type: none"> When getting in the passenger seat When passenger seat belt is fastened 	12 V
					<ul style="list-style-type: none"> When getting in the passenger seat When passenger seat belt is unfastened 	0 V
31 (L)	Ground	Washer level switch signal	Input	Ignition switch ON	Washer level switch ON	0 V
					Washer level switch OFF	5 V
34 (R)	Ground	Illumination control signal	Output	Ignition switch ON	Lighting switch ON, then operate the illumination control switch.	<p>NOTE: When brightness level is midway</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p>
36 (LG)	16 (B)	Select switch signal	Input	Ignition switch ON	When ● is pressed	0 V
					Other than the above	5 V
37 (SB)	16 (B)	Enter switch signal	Input	Ignition switch ON	When □ is pressed	0 V
					Other than the above	5 V
38 (L)	16 (B)	Trip A/B reset switch signal	Input	Ignition switch ON	When trip A/B reset switch is pressed	0 V
					Other than the above	5 V
39 (P)	16 (B)	Illumination control switch signal (-)	Input	Ignition switch ON	When  switch is pressed	0 V
					Other than the above	5 V
40 (O)	16 (B)	Illumination control switch signal (+)	Input	Ignition switch ON	When  switch is pressed	0 V
					Other than the above	5 V

- *1: M/T models
- *2: A/T models


A
B
C
D
E
F
G
H
I
J
K
INL
M
N
O
P

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Wiring Diagram - METER -

INFOID:000000003038080

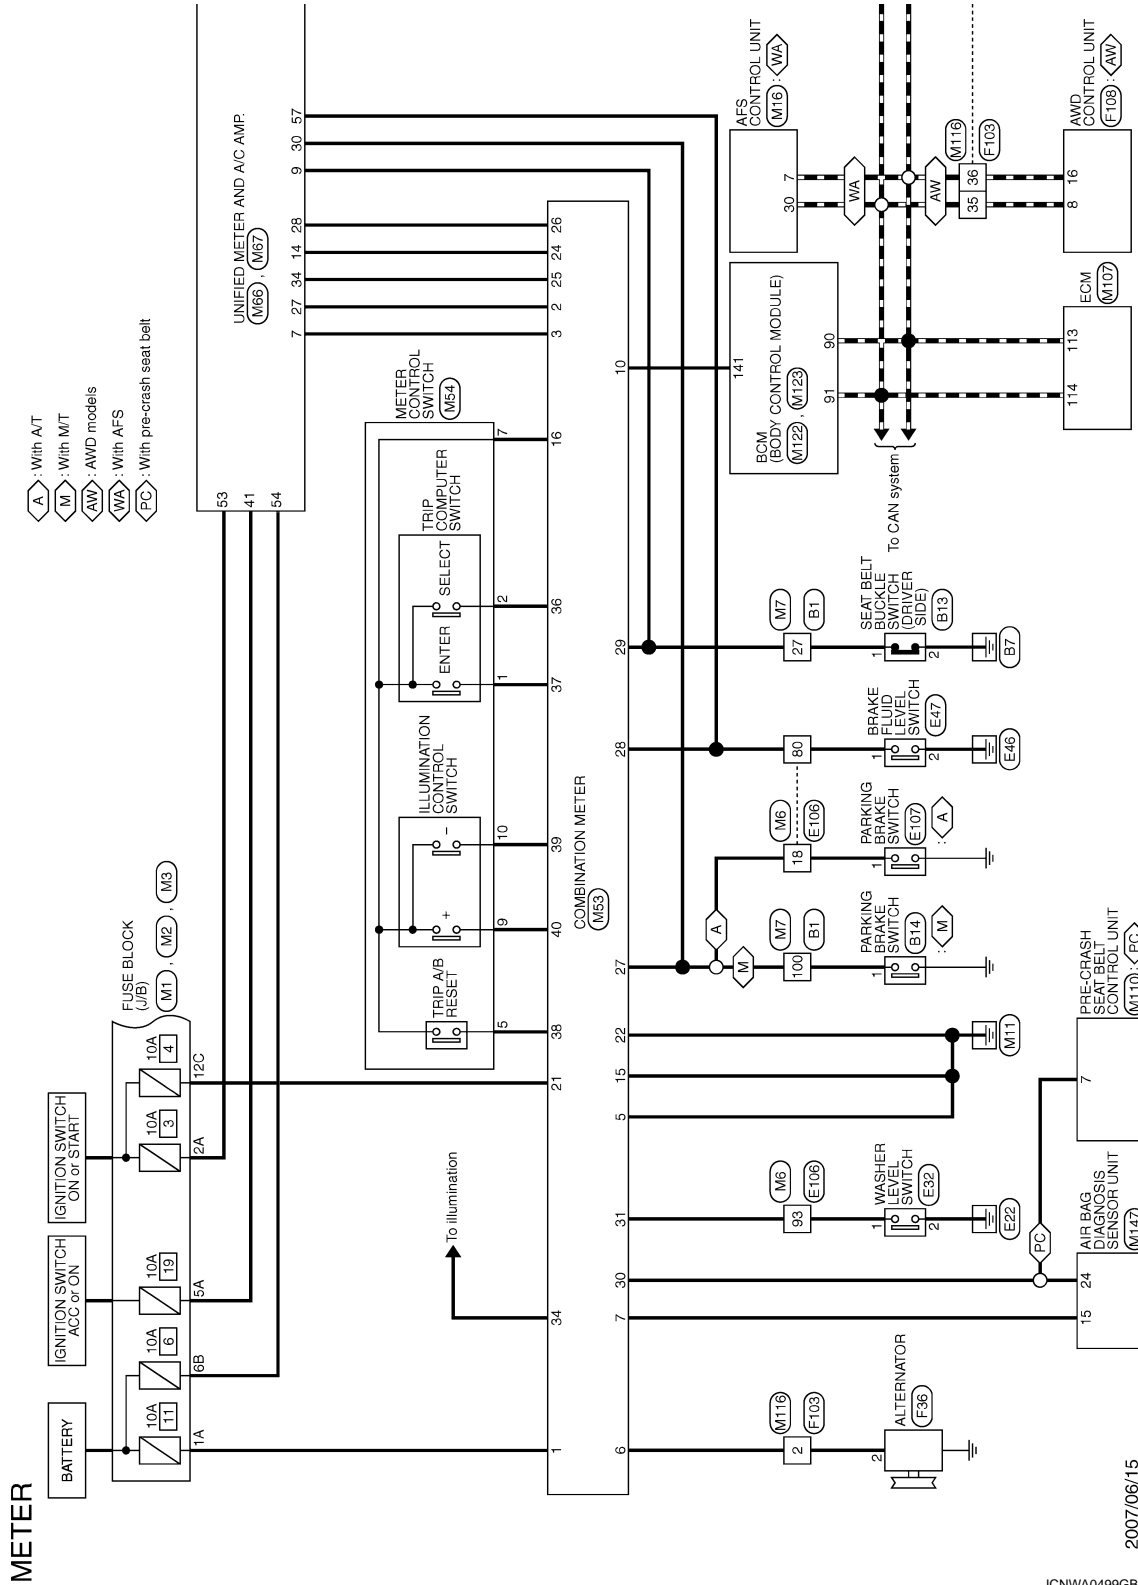

2007/06/15


JCNWA0499GB

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

- : With A/T
- : With NAVI
- : Without NAVI
- : With ICC
- : With 4WAS
- : With automatic drive positioner or 4WAS
- : Without automatic drive positioner and 4WAS
- : With paddle shifter switch

*: This connector is not shown in "Harness Layout".

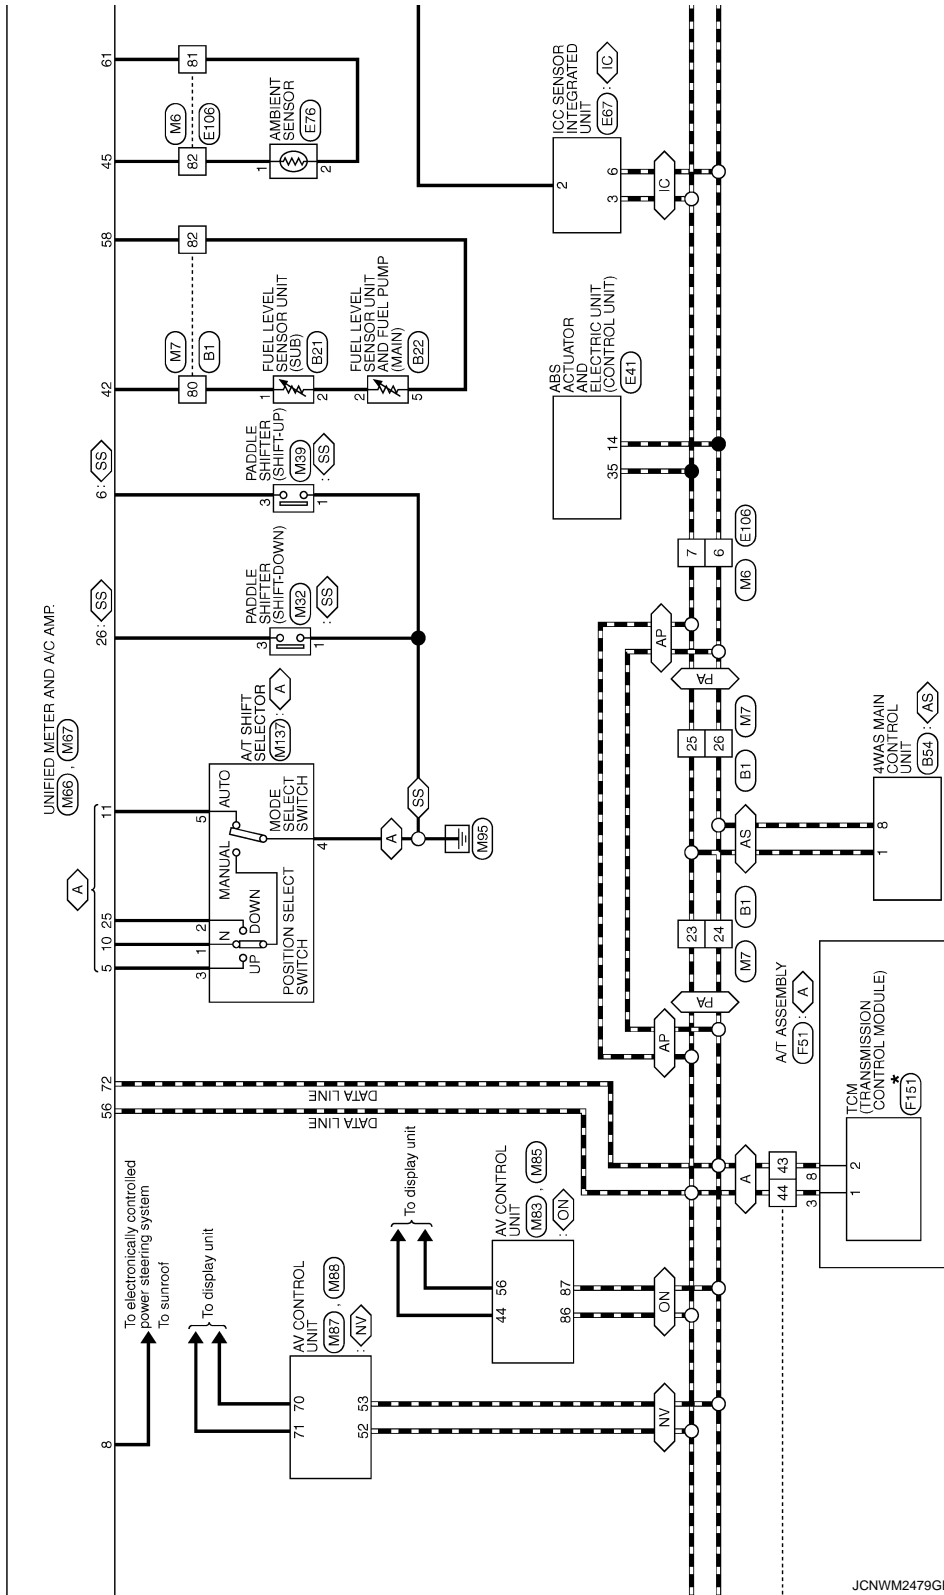

JCNWM2479GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

INL

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >


◁ IC ▷ : With ICC

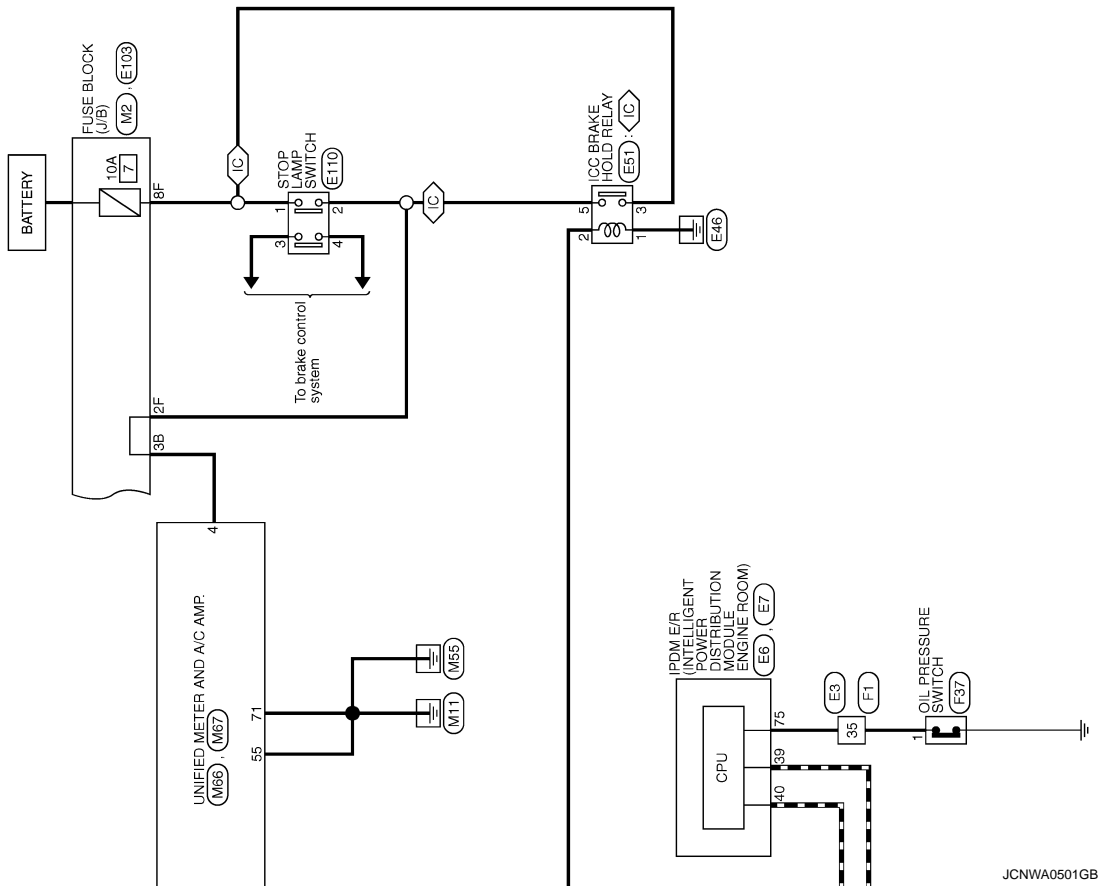

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

METER

Connector No. BI	WIRE TO WIRE TH08FW-GS16-TM4		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name			23	L	-
Connector Type			24	P	-
			25	L	-
			26	P	-
			27	SB	-
			80	Y	-
			82	B	-
			100	V	-
Connector No.	B1		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)	A03FW	1	SB	-
Connector Type			2	B	-
			3	-	-
Connector No.	B13		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	PARKING BRAKE SWITCH (M/T)	P01FB-A	1	V	-
Connector Type					
Connector No.	B21		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	FUEL LEVEL SENSOR UNIT (SUB)	E02FGY-RS	1	Y	-
Connector Type			2	W	-
Connector No.	B22		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	FUEL LEVEL SENSOR UNIT AND FUEL PUMP (MAIN)	E08FGY-RS	2	W	-
Connector Type			5	B	-
Connector No.	E3		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	WIRE TO WIRE	SAA38MB-RS10-SJ22	19	Y	-
Connector Type			20	21	22
			23	24	25
			26	27	28
			29	30	31
			32	33	34
			35	36	37
			38	39	40
			41	42	43
			44	45	46
			47	48	49
			50	51	52
Connector No.	E5		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	TH08FW-NH	39	P	-
Connector Type			40	L	-
Connector No.	E6		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)	TH08FW-NH			
Connector Type					
Connector No.	B54		Terminal No.	Color of Wire	Signal Name [Specification]
Connector Name	AWAS MAIN CONTROL UNIT	A38FW-M4	1	L	CAN-H
Connector Type			8	P	CAN-L

JCNWA0502GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


INL

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

METER

Connector No.	E7
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH02FW-GS12-34




Terminal No.	75	Y	Signal Name [Specification]
Color of Wire			

Connector No.	E32
Connector Name	WASHER LEVEL SWITCH
Connector Type	Z02EBR



Terminal No.	1	LG	Signal Name [Specification]
Color of Wire			
	2	B	

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BA442FB-AH24-LH




Terminal No.	14	P	Signal Name [Specification]
Color of Wire			
	35	L	CAN-L
			CAN-H

Connector No.	E47
Connector Name	BRAKE FLUID LEVEL SWITCH
Connector Type	Y102EGY




Terminal No.	1	W	Signal Name [Specification]
Color of Wire			
	2	B/W	

Connector No.	E51
Connector Name	ICC BRAKE HOLD RELAY
Connector Type	MS02FL-M2



Terminal No.	1	B	Signal Name [Specification]
Color of Wire			
	2	V	
	3	R	
	5	P	

Connector No.	E67
Connector Name	ICC SENSOR INTEGRATED UNIT
Connector Type	RS06FB-PR




Terminal No.	2	V	Signal Name [Specification]
Color of Wire			
	3	L	BRK LMP RLY
	6	P	CAN-H
			CAN-L

Connector No.	E76
Connector Name	AMBIENT SENSOR
Connector Type	RS02FB



Terminal No.	1	G	Signal Name [Specification]
Color of Wire			
	2	P	

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FY-CS



Terminal No.	2F	W	Signal Name [Specification]
Color of Wire			
	8F	L	


JCNWA0503GB

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >


METER

Connector No.	F1
Connector Name	WIRE TO WIRE
Connector Type	SAA36FB-RS10-SJZZ



Terminal No.	Color of Wire	Signal Name [Specification]
35	Y	-

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	MDAFW-LC




Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	W	-
3	L	-
4	SB	-

Connector No.	E107
Connector Name	PARKING BRAKE SWITCH (A/T)
Connector Type	TBD1FW




Terminal No.	Color of Wire	Signal Name [Specification]
1	O	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	THBDFW-GS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
6	P	-
7	L	-
18	O	-
80	W	-
81	P	-
82	G	-
93	LG	-

Connector No.	F103
Connector Name	WIRE TO WIRE
Connector Type	TK36FW-NS10



Terminal No.	Color of Wire	Signal Name [Specification]
2	G	-
35	L	-
36	P	-
43	P	-
44	L	-

Connector No.	F51
Connector Name	A/T ASSEMBLY
Connector Type	PK10FG-DGY



Terminal No.	Color of Wire	Signal Name [Specification]
3	L	-
8	P	-

Connector No.	F37
Connector Name	OIL PRESSURE SWITCH
Connector Type	ED1FGY-RS-AR



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-

Connector No.	F36
Connector Name	ALTERNATOR
Connector Type	FS03FB



Terminal No.	Color of Wire	Signal Name [Specification]
2	G	L

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


INL

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

METER

Connector No.	F108
Connector Name	AWD CONTROL UNIT
Connector Type	TH16FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
8	L	CAN-H
16	P	CAN-L

Connector No.	F151
Connector Name	TOM (TRANSMISSION CONTROL MODULE)
Connector Type	SPT0FEGY




Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	CAN-H
2	L/Y	CAN-L

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS30FW-M2




Terminal No.	Color of Wire	Signal Name [Specification]
1A	V	-
2A	G	-
5A	L	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FY-CS




Terminal No.	Color of Wire	Signal Name [Specification]
3B	P	-
6B	Y	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
12C	R	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH60MW-CS16-TM4

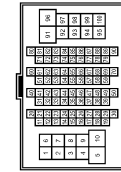


Terminal No.	Color of Wire	Signal Name [Specification]
6	P	-
7	L	-
16	O	-
80	SB	-
81	R	-
82	V	-
93	L	-

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH60MW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
23	L	-
24	P	-
25	L	-
26	P	-
27	L	-
80	Y	- [With A/T]
82	BR	- [With M/T]
83	B	-
100	O	-

Connector No.	M16
Connector Name	AFS CONTROL UNIT
Connector Type	TH40FY-NH



Terminal No.	Color of Wire	Signal Name [Specification]
7	P	CAN-L
30	L	CAN-H


JCNWA0505GB

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

METER

Connector No.	M32
Connector Name	PADDLE SHIFTER (SHIFT-DOWN)
Connector Type	A03FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
3	G	-

Connector No.	M39
Connector Name	PADDLE SHIFTER (SHIFT-UP)
Connector Type	A04FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
3	O	-


Connector No.	M33
Connector Name	COMBINATION METER
Connector Type	SAB09FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	BAT
2	LG	COMM (METER->AMP.)
3	GR	COMM (AMP->METER)
5	B	GND
6	W	ALTERNATOR
7	LG	AIR BAG
10	G	SECURITY
15	B	GND
16	BR	METER CONTROL SW GND
21	R	IGN
22	B	GND

24	BR	COMM (LCD->AMP.)
25	Y	COMM (AMP->LCD)
26	R	VEHICLE SPEED (8-PULSE)
27	O	PARKING BRAKE SW
28	SB	BRAKE FLUID LEVEL SW
29	L	SEAT BELT BUCKLE SW (DRIVER SIDE)
30	G	SEAT BELT
31	L	WASHER LEVEL SW
34	R	ILLUMINATION CONTROL
36	LG	SELECT SW
37	SB	ENTER SW
38	L	TRIP A/B RESET SW
39	P	ILLUMINATION CONTROL SW (-)
40	O	ILLUMINATION CONTROL SW (+)

Connector No.	M34
Connector Name	METER CONTROL SWITCH
Connector Type	TH12FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-
2	LG	-
5	L	-
7	BR	-
9	O	-
10	P	-

Connector No.	M36
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH40FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
4	G	STOP LAMP SW
5	L	SHIFT UP SW
6	O	PADDLE UP
7	GR	COMM (AMP->METER)
8	L	VEHICLE SPEED (2-PULSE)
9	SR	SEAT BELT BUCKLE SW (DRIVER SIDE)
10	W	MANUAL MODE SW
11	G	AUTO MODE SW
14	BR	COMM (LCD->AMP)
25	V	SHIFT DOWN SW
26	G	PADDLE DOWN

27	LG	COMM (METER->AMP.)
28	R	VEHICLE SPEED (8-PULSE)
30	V	PARKING BRAKE SW
34	Y	COMM (AMP->LCD)

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


INL

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >


METER

Connector No.	M87
Connector Name	UNIFIED METER AND A/C AMP.
Connector Type	TH32FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
41	L	ACC
42	Y	FUEL LEVEL SENS
45	V	AMB SENS
53	W	IGN
54	Y	BAT
55	B	GND
56	L	CAN-H
57	LG	BRAKE FLUID LEVEL SW
58	BR	FUEL LEVEL SENS GND [With A/T]
58	B	FUEL LEVEL SENS GND [With M/T]
61	R	AMB SENS GND


Connector No.	M87
Connector Name	AV CONTROL UNIT (WITH NAVI)
Connector Type	TH40FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
52	L	CAN-H
53	P	CAN-L

71	GR	GND
72	P	CAN-L

Connector No.	M83
Connector Name	AV CONTROL UNIT (WITHOUT NAVI)
Connector Type	TH24FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
44	L	COMM (DISP->CONT)
56	LG	COMM (CONT->DISP)

Connector No.	M107
Connector Name	ECM
Connector Type	RH24FGY-R25-R-LH-Z




Terminal No.	Color of Wire	Signal Name [Specification]
113	P	VEHCAN-LI
114	L	VEHCAN-HI

Connector No.	M88
Connector Name	AV CONTROL UNIT (WITH NAVI)
Connector Type	TH12FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
70	L	COMM (CONT->DISP)
71	LG	COMM (DISP->CONT)

Connector No.	M85
Connector Name	AV CONTROL UNIT (WITHOUT NAVI)
Connector Type	TH32FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
86	L	CAN-H
87	P	CAN-L

Connector No.	M110
Connector Name	PRE-CRASH SEAT BELT CONTROL UNIT
Connector Type	TH20FW-TB6



Terminal No.	Color of Wire	Signal Name [Specification]
7	G	INDICATOR

JCNWA0507GB

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

METER

Connector No.	M116
Connector Name	WIRE TO WIRE
Connector Type	TK38WF-NS10

Terminal No.	Color of Wire	Signal Name [Specification]
2	W	-
35	L	-
36	P	-
43	P	-
44	L	-

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH

Terminal No.	Color of Wire	Signal Name [Specification]
90	P	CAN-L
91	L	CAN-H

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH

Terminal No.	Color of Wire	Signal Name [Specification]
141	G	SECURITY INDICATOR OUTPUT

Connector No.	M137
Connector Name	A/T SHIFT SELECTOR
Connector Type	TH12FW-NH

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	L	-
4	BR	-
5	G	-

Connector No.	M147
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	TK28FY-EX-SC

Terminal No.	Color of Wire	Signal Name [Specification]
15	LG	AIR BAG W/L
24	G	SEAT BELT

Fail-safe

FAIL-SAFE

Combination meter performs fail-safe operation when unified meter and A/C amp. communication is malfunction.

Solution for communication error between the unified meter and A/C amp. and combination meter.

JCNWM2480GB

INFOID:000000003038081

A
B
C
D
E
F
G
H
I
J
K
INL
M
N
O
P

COMBINATION METER

< ECU DIAGNOSIS INFORMATION >

Function		Specifications
Speedometer		Reset to zero by suspending communication.
Tachometer		
Fuel gauge		
Water temperature gauge		
Illumination control		When suspending communication, change to nighttime mode.
Information display		The display turns off by suspending communication.
Buzzer		The buzzer turns off by suspending communication.
Warning lamp/indicator lamp	ABS warning lamp	The lamp turns on by suspending communication.
	VDC OFF indicator lamp	
	SLIP indicator lamp	
	Brake warning lamp	
	CRUISE warning lamp	
	BA warning lamp	
	High beam indicator	The lamp turns off by suspending communication.
	Turn signal indicator lamp	
	Oil pressure warning lamp	
	Malfunction indicator lamp	
	A/T CHECK warning lamp	
	AWD warning lamp	
	Low tire pressure warning lamp	
	Key warning lamp	
	AFS OFF indicator lamp	
	4WAS warning lamp	
Master warning lamp		

DTC Index

INFOID:000000003038082

Refer to [MWI-98, "DTC Index"](#).

INTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

INTERIOR LIGHTING SYSTEM SYMPTOMS

Symptom Table

INFOID:000000001835910

CAUTION:

Perform the self-diagnosis with CONSULT-III before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom	Possible cause	Inspection item
All the following lamps do not turn ON. <ul style="list-style-type: none"> • Map lamp • Personal lamp • Trunk room lamp • Step lamp • Vanity mirror lamp 	<ul style="list-style-type: none"> • Harness between BCM and each interior room lamp • BCM 	Interior room lamp power supply circuit Refer to INL-18 .
<ul style="list-style-type: none"> • Interior room lamp does not turn ON even though the door is open. (It turns ON when turning the interior room lamp ON.) • Interior room lamp does not turn OFF even though the door is closed. 	<ul style="list-style-type: none"> • Harness between BCM and each door switch • Harness between BCM and each interior room lamp • BCM 	Door switch circuit Refer to DLK-68 . Interior room lamp control circuit Refer to INL-20 .
Interior room lamp timer does not activate. (It turns ON/ OFF when the door opens/closes.)	—	Check the interior room lamp setting. Refer to INL-14 .
Step lamps (driver side and passenger side) do not turn ON. (The map lamp and the personal lamp turn ON.)	<ul style="list-style-type: none"> • Harness between BCM and each step lamp • BCM 	Step lamp circuit Refer to INL-22 .
Step lamps (driver side and passenger side) do not turn OFF. (The map lamp and the personal lamp turn OFF.)		
<ul style="list-style-type: none"> • Trunk room lamp does not turn ON. (The bulb is normal.) • Trunk room lamp does not turn OFF. 	<ul style="list-style-type: none"> • Harness between BCM and trunk room lamp switch • Harness between BCM and trunk room lamp • BCM 	Trunk room lamp switch circuit Refer to DLK-86 . Trunk room lamp circuit Refer to INL-24 .
Push-button ignition switch illumination does not illuminate.	<ul style="list-style-type: none"> • Harness between BCM and push-button ignition switch • BCM 	Push-button ignition switch illumination circuit Refer to INL-26 .
Interior room lamp battery saver does not activate.	—	Check the interior room lamp battery saver setting. Refer to INL-15 .

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

INL

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000001835911

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

MAP LAMP


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

MAP LAMP

Exploded View

INFOID:000000001835912

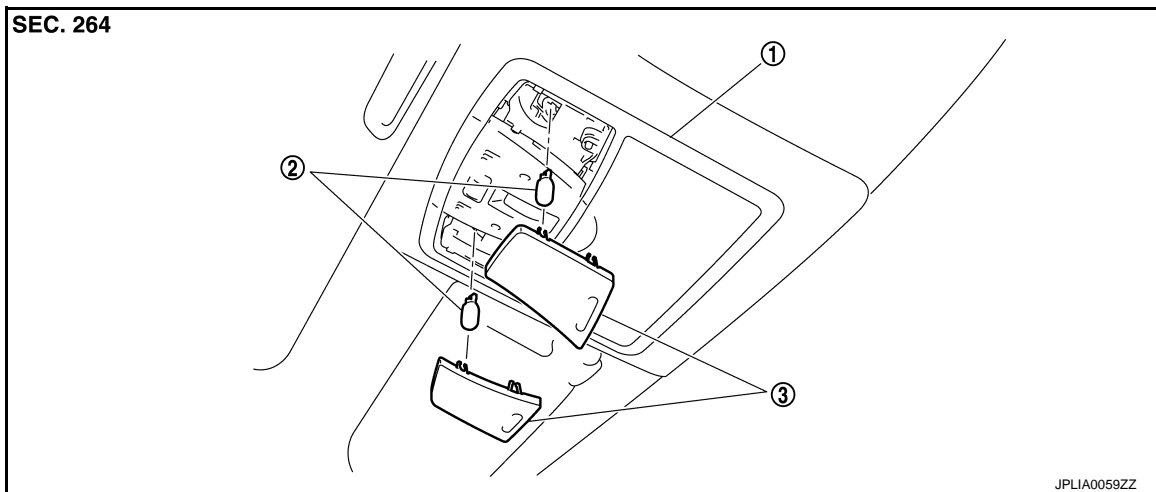

1. Map lamp assembly

2. Bulb

3. Lens

Removal and Installation

INFOID:000000001835913

Refer to [INT-23. "Exploded View"](#) for the map lamp assembly installation/removal.

Replacement

INFOID:000000001835914

CAUTION:

Disconnect the battery negative terminal or the fuse.

MAP LAMP BULB

1. Insert any appropriate tool into the gap between the lens. Remove the lens.
2. Remove the bulb.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P


VANITY MIRROR LAMP

< REMOVAL AND INSTALLATION >

VANITY MIRROR LAMP

Exploded View

INFOID:000000001835915

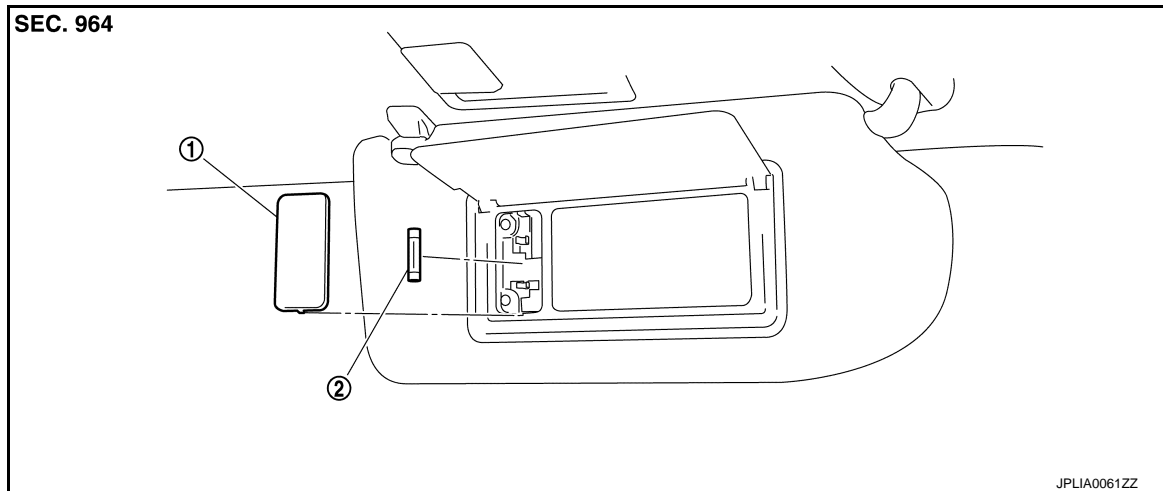

1. Lens

2. Bulb

Replacement

INFOID:000000001835916

CAUTION:

Disconnect the battery negative terminal or the fuse.

VANITY MIRROR LAMP BULB

1. Insert any appropriate tool into the gap between the lens. Remove the lens.
2. Remove the bulb.


CIGARETTE LIGHTER ILLUMINATION

< REMOVAL AND INSTALLATION >

CIGARETTE LIGHTER ILLUMINATION

Exploded View

INFOID:000000001835917

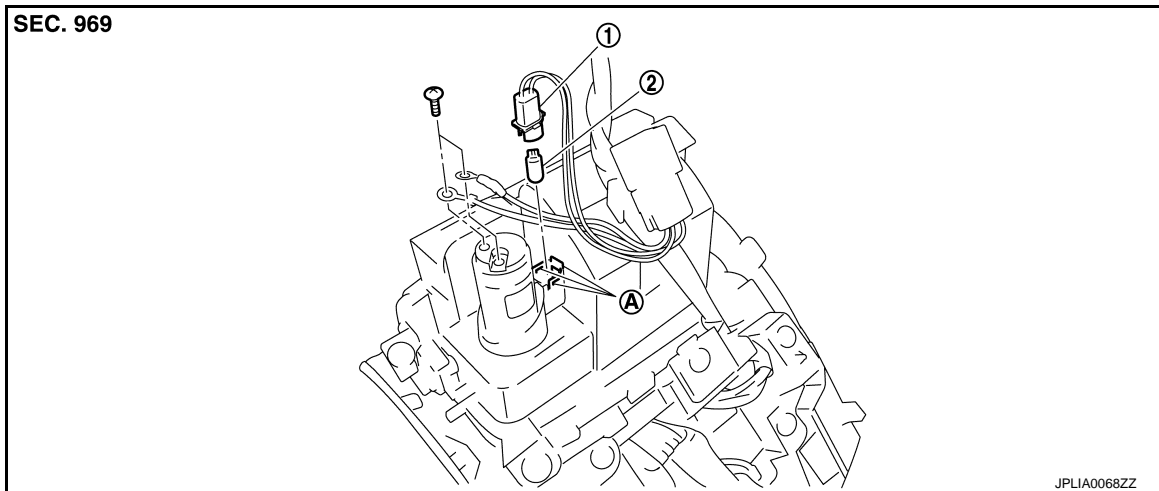

1. Bulb socket

2. Bulb
(Share with the ashtray illumination)

A Hook

Replacement

INFOID:000000001835918

CAUTION:

Disconnect the battery negative terminal or the fuse.

CIGARETTE LIGHTER ILLUMINATION BULB

1. Remove the console finisher. Refer to [IP-22, "Exploded View"](#).
2. Insert any appropriate tool into the gap of the bulb socket. Widen the hook and remove the bulb socket.
3. Remove the bulb.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

INL


GLOVE BOX LAMP

< REMOVAL AND INSTALLATION >

GLOVE BOX LAMP

Exploded View

INFOID:000000001835919

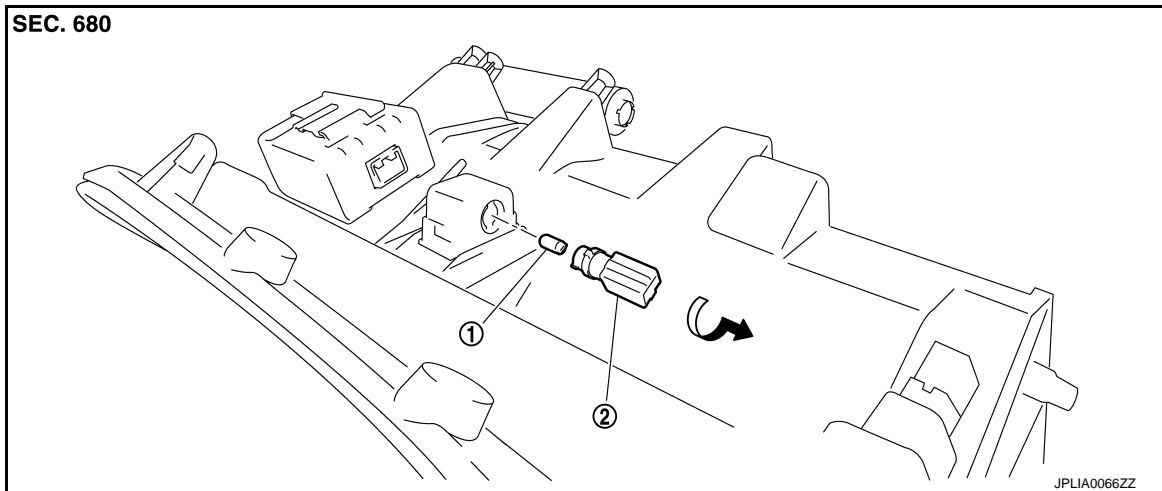

1. Bulb

2. Bulb socket

Replacement

INFOID:000000001835920

CAUTION:

Disconnect the battery negative terminal or the fuse.

GLOVE BOX LAMP BULB

1. Remove the instrument assist lower panel. Refer to [IP-11, "Exploded View"](#).
2. Rotate the bulb socket counterclockwise and unlock it.
3. Remove the bulb.


STEP LAMP

< REMOVAL AND INSTALLATION >

STEP LAMP

Exploded View

INFOID:000000001835921

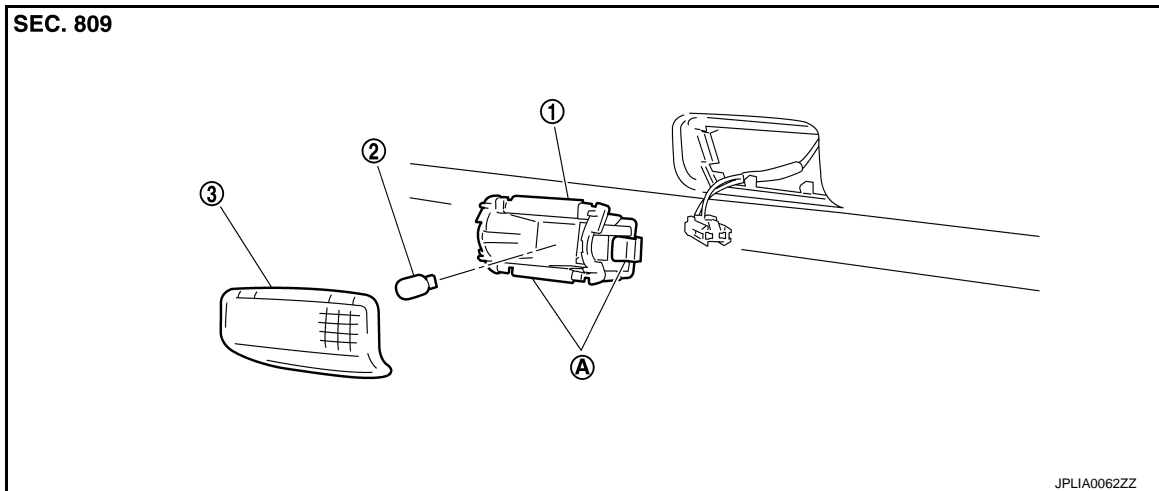

- 1. Step lamp case
- 2. Bulb
- 3. Lens
- A Metal clip

Removal and Installation

INFOID:000000001835922

CAUTION:

Disconnect the battery negative terminal or the fuse.

REMOVAL

1. Insert any appropriate tool into the gap between the step lamp and the door trim. Remove the step lamp.
2. Disconnect the connector.

INSTALLATION

Install in the reverse order of removal.

Replacement

INFOID:000000001835923

CAUTION:

Disconnect the battery negative terminal or the fuse.

STEP LAMP BULB

1. Remove the step lamp.
2. Remove the lens.
3. Remove the bulb.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

INL


PERSONAL LAMP

< REMOVAL AND INSTALLATION >

PERSONAL LAMP

Exploded View

INFOID:000000001835924

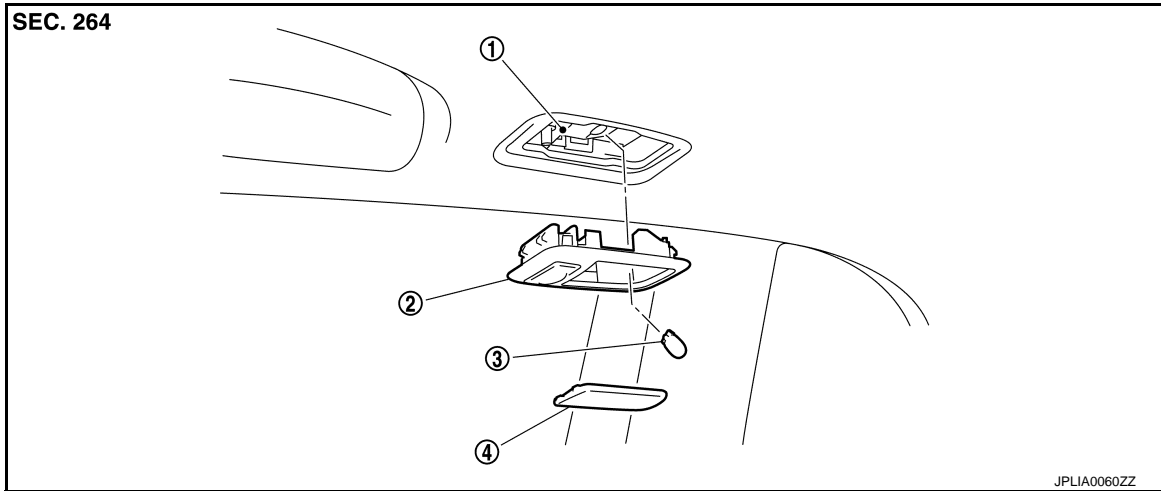

1. Personal lamp case
2. Personal lamp finisher
3. Bulb
4. Lens

NOTE:

Replace the personal lamp case as a set (right and left). Before installing the headlining assembly, remove the personal lamp case. Refer to [INT-23, "Exploded View"](#).

Removal and Installation

INFOID:000000001835925

CAUTION:


Disconnect the battery negative terminal or the fuse.

REMOVAL

1. Insert any appropriate tool into the gap between the lens. Remove the lens.
2. Press the both side pawls (A) to the arrow direction (←). Remove the personal lamp finisher.

NOTE:

Replace the personal lamp case as a set (right and left). Remove the personal lamp case after installing the headlining assembly. Refer to [INT-23, "Exploded View"](#).

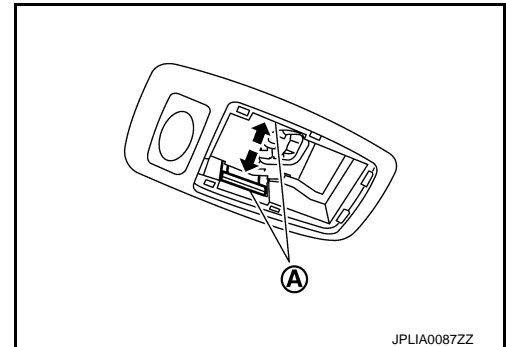

INSTALLATION

Install in the reverse order of removal.


NOTE:

The following is easier to install the personal lamp finisher with the headlining installed.

PERSONAL LAMP

< REMOVAL AND INSTALLATION >

- Press the personal lamp finisher to the headlining. Pull the personal lamp case pawl to the arrow direction (←) with any appropriate tool.

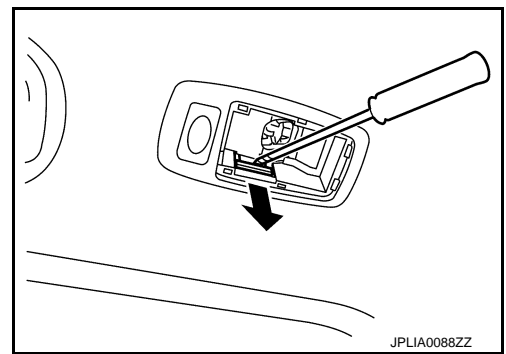

Replacement

CAUTION:
Disconnect the battery negative terminal or the fuse.

PERSONAL LAMP BULB

1. Insert any appropriate tool into the gap between the lens. Remove the lens.
2. Remove the bulb.

INFOID:000000001835926

A
B
C
D
E
F
G
H
I
J
K
INL
M
N
O
P


TRUNK ROOM LAMP

< REMOVAL AND INSTALLATION >

TRUNK ROOM LAMP

Exploded View

INFOID:000000001835927

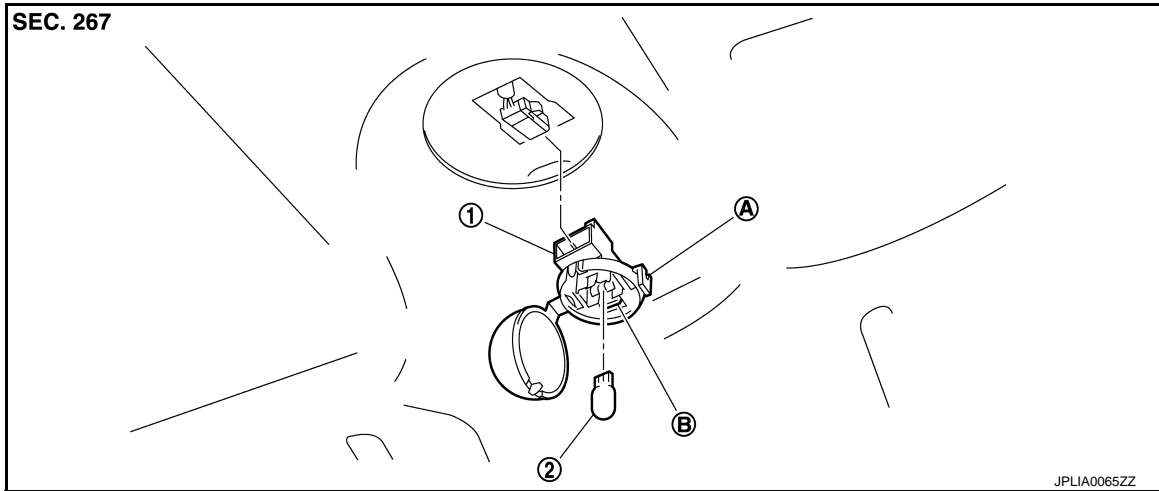

- | | |
|--------------------------|---------------------------------|
| 1. Trunk room lamp | 2. Bulb |
| A Pawl (for lens fixing) | B. Pawl (for case installation) |

Removal and Installation


INFOID:000000001835928

CAUTION:

Disconnect the battery negative terminal or the fuse.

REMOVAL

1. Widen the pawl (A). Open the lens (1).
2. Remove the bulb.
3. Pressing the pawl (B) to the arrow direction (←). Pull out the trunk room lamp.
4. Disconnect the connector.
5. Remove the trunk room lamp.

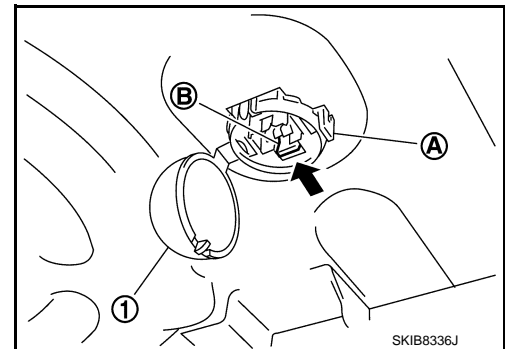

INSTALLATION

Install in the reverse order of removal.

Replacement

INFOID:000000001835929

CAUTION:

Disconnect the battery negative terminal or the fuse.

TRUNK ROOM LAMP BULB

1. Widen the lens pawl. Open the lens.
2. Remove the bulb.

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Bulb Specifications

INFOID:000000001835930

Item	Type	Wattage (W)
Push-button ignition switch illumination	LED	—
Map lamp	Wedge	8
Center console indirect illumination (Integrated into the map lamp assembly)	LED	—
Vanity mirror lamp	—	2
Glove box lamp	—	1.4
Cigarette lighter illumination (Shared with ash tray illumination)	—	1.4
Step lamp	Wedge	8
Personal lamp	Wedge	8
Trunk room lamp	Wedge	3.4

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

INL