

# SECTION PCS

## POWER CONTROL SYSTEM

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

### CONTENTS

<b>IPDM E/R</b>	Diagnosis Procedure .....	17
<b>SYSTEM DESCRIPTION</b> .....	<b>POWER SUPPLY AND GROUND CIRCUIT</b> ....	19
<b>RELAY CONTROL SYSTEM</b> .....	Diagnosis Procedure .....	19
System Diagram .....	<b>ECU DIAGNOSIS INFORMATION</b> .....	20
System Description .....	<b>IPDM E/R (INTELLIGENT POWER DISTRI-</b>	
Component Parts Location .....	<b>BUTION MODULE ENGINE ROOM)</b> .....	20
<b>POWER CONTROL SYSTEM</b> .....	Reference Value .....	20
System Diagram .....	Wiring Diagram - IPDM E/R - .....	27
System Description .....	Fail-safe .....	30
<b>SIGNAL BUFFER SYSTEM</b> .....	DTC Index .....	32
System Diagram .....	<b>PRECAUTION</b> .....	33
System Description .....	<b>PRECAUTIONS</b> .....	33
<b>POWER CONSUMPTION CONTROL SYS-</b>	Precaution for Supplemental Restraint System	
<b>TEM</b> .....	(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	
System Diagram .....	SIONER" .....	33
System Description .....	Precautions for Removing Battery Terminal .....	33
Component Parts Location .....	Precaution for Procedure without Cowl Top Cover...34	
<b>DIAGNOSIS SYSTEM (IPDM E/R)</b> .....	Precaution for Battery Service .....	34
Diagnosis Description .....	<b>REMOVAL AND INSTALLATION</b> .....	35
CONSULT Function (IPDM E/R) .....	<b>IPDM E/R (INTELLIGENT POWER DISTRI-</b>	
<b>DTC/CIRCUIT DIAGNOSIS</b> .....	<b>BUTION MODULE ENGINE ROOM)</b> .....	35
<b>U1000 CAN COMM CIRCUIT</b> .....	Exploded View .....	35
Description .....	Removal and Installation .....	35
DTC Logic .....	<b>POWER DISTRIBUTION SYSTEM</b>	
Diagnosis Procedure .....	<b>BASIC INSPECTION</b> .....	37
<b>B2098 IGNITION RELAY ON STUCK</b> .....	<b>DIAGNOSIS AND REPAIR WORK FLOW</b> .....	37
Description .....	Work Flow .....	37
DTC Logic .....	<b>SYSTEM DESCRIPTION</b> .....	40
Diagnosis Procedure .....	<b>POWER DISTRIBUTION SYSTEM</b> .....	40
<b>B2099 IGNITION RELAY OFF STUCK</b> .....	System Description .....	40
Description .....	Component Parts Location .....	42
DTC Logic .....		

PCS

Component Description .....	43	BCM : Diagnosis Procedure .....	63
<b>DIAGNOSIS SYSTEM (BCM) .....</b>	<b>44</b>	<b>PUSH-BUTTON IGNITION SWITCH .....</b>	<b>64</b>
<b>COMMON ITEM .....</b>	<b>44</b>	Description .....	64
COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) .....	44	Component Function Check .....	64
<b>INTELLIGENT KEY .....</b>	<b>45</b>	Diagnosis Procedure .....	64
INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY) .....	45	Component Inspection .....	65
<b>DTC/CIRCUIT DIAGNOSIS .....</b>	<b>50</b>	<b>PUSH-BUTTON IGNITION SWITCH POSI- TION INDICATOR .....</b>	<b>67</b>
<b>B2553 IGNITION RELAY .....</b>	<b>50</b>	Description .....	67
Description .....	50	Component Function Check .....	67
DTC Logic .....	50	Diagnosis Procedure .....	67
Diagnosis Procedure .....	50	<b>POWER DISTRIBUTION SYSTEM .....</b>	<b>69</b>
<b>B260A IGNITION RELAY .....</b>	<b>52</b>	Wiring Diagram - PDS (POWER DISTRIBUTION SYSTEM) - .....	69
Description .....	52	<b>ECU DIAGNOSIS INFORMATION .....</b>	<b>76</b>
DTC Logic .....	52	<b>BCM (BODY CONTROL MODULE) .....</b>	<b>76</b>
Diagnosis Procedure .....	52	Reference Value .....	76
<b>B2614 ACC RELAY .....</b>	<b>54</b>	Wiring Diagram - BCM - .....	99
Description .....	54	Fail-safe .....	111
DTC Logic .....	54	DTC Inspection Priority Chart .....	113
Diagnosis Procedure .....	54	DTC Index .....	114
Component Inspection .....	55	<b>PRECAUTION .....</b>	<b>116</b>
<b>B2615 BLOWER RELAY CIRCUIT .....</b>	<b>56</b>	<b>PRECAUTIONS .....</b>	<b>116</b>
Description .....	56	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER" .....	116
DTC Logic .....	56	Precautions for Removing Battery Terminal .....	116
Diagnosis Procedure .....	56	Precaution for Procedure without Cowl Top Cover .....	117
Component Inspection .....	57	Precautions Necessary for Steering Wheel Rota- tion After Battery Disconnection .....	117
<b>B2616 IGNITION RELAY CIRCUIT .....</b>	<b>58</b>	Precaution for Battery Service .....	117
Description .....	58	<b>SYMPTOM DIAGNOSIS .....</b>	<b>118</b>
DTC Logic .....	58	<b>PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE .....</b>	<b>118</b>
Diagnosis Procedure .....	58	Description .....	118
Component Inspection .....	59	Diagnosis Procedure .....	118
<b>B2618 BCM .....</b>	<b>60</b>	<b>PUSH-BUTTON IGNITION SWITCH POSI- TION INDICATOR DOES NOT ILLUMINATE .....</b>	<b>119</b>
Description .....	60	Diagnosis Procedure .....	119
DTC Logic .....	60	<b>REMOVAL AND INSTALLATION .....</b>	<b>120</b>
Diagnosis Procedure .....	60	<b>PUSH-BUTTON IGNITION SWITCH .....</b>	<b>120</b>
<b>B261A PUSH-BUTTON IGNITION SWITCH ....</b>	<b>61</b>	Removal and Installation .....	120
Description .....	61		
DTC Logic .....	61		
Diagnosis Procedure .....	61		
<b>POWER SUPPLY AND GROUND CIRCUIT ....</b>	<b>63</b>		
<b>BCM .....</b>	<b>63</b>		

# RELAY CONTROL SYSTEM

< SYSTEM DESCRIPTION >


[IPDM E/R]

## SYSTEM DESCRIPTION

### RELAY CONTROL SYSTEM

#### System Diagram

INFOID:000000011488473

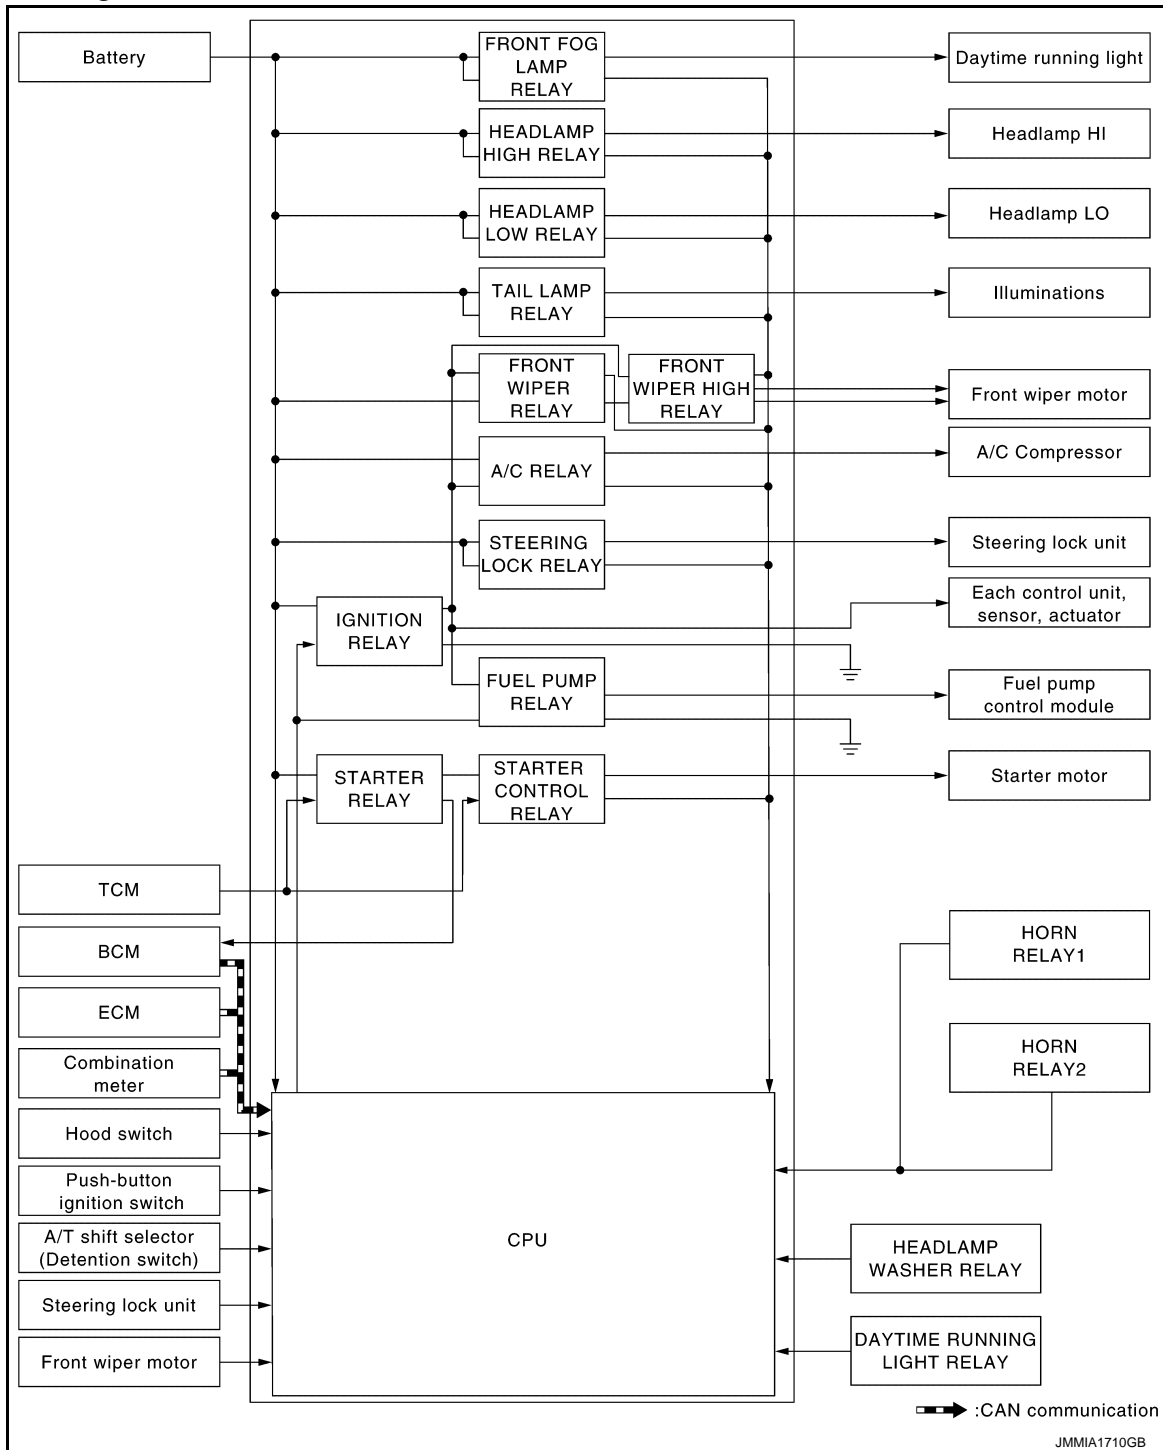

**NOTE:**  
Headlamp washer relay is not applied.

#### System Description

INFOID:000000011488474

IPDM E/R activates the internal control circuit to perform the relay ON-OFF control according to the input signals from various sensors and the request signals received from control units via CAN communication.

**CAUTION:**  
IPDM E/R integrated relays cannot be removed.

# RELAY CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]


Control relay	Input/output	Transmit unit	Control part	Reference page
<ul style="list-style-type: none"> <li>Headlamp low relay</li> <li>Headlamp high relay</li> </ul>	<ul style="list-style-type: none"> <li>Low beam request signal</li> <li>High beam request signal</li> </ul>	BCM (CAN)	<ul style="list-style-type: none"> <li>Headlamp low</li> <li>Headlamp high</li> </ul>	<a href="#">EXL-8</a>
Tail lamp relay	Position light request signal	BCM (CAN)	Illuminations	<a href="#">INL-13</a>
<ul style="list-style-type: none"> <li>Front wiper relay</li> <li>Front wiper high relay</li> </ul>	Front wiper request signal	BCM (CAN)	Front wiper	<a href="#">WW-6</a>
	Front wiper stop position signal	Front wiper motor		
<ul style="list-style-type: none"> <li>Horn relay 1</li> <li>Horn relay 2</li> </ul>	<ul style="list-style-type: none"> <li>Theft warning horn request signal</li> <li>Horn reminder signal</li> </ul>	BCM (CAN)	<ul style="list-style-type: none"> <li>Horn (low)</li> <li>Horn (high)</li> </ul>	<a href="#">SEC-19</a>
<ul style="list-style-type: none"> <li>Starter relay<sup>NOTE</sup></li> <li>Starter control relay</li> </ul>	Starter control relay signal	BCM (CAN)	Starter motor	<a href="#">SEC-102</a> , <a href="#">SEC-100</a>
	Steering lock unit condition signal	Steering lock unit		
	Starter relay control signal	TCM		
Steering lock relay	Steering lock relay signal	BCM (CAN)	Steering lock unit	<a href="#">SEC-94</a>
	Steering lock unit condition signal	Steering lock unit		
	A/T shift selector (Detention switch) signal	A/T shift selector (Detention switch)		
A/C relay	A/C compressor request signal	ECM (CAN)	A/C compressor (Magnet clutch)	<a href="#">HAC-32</a>
Ignition relay	Ignition switch ON signal	BCM (CAN)	Ignition relay	<a href="#">PCS-15</a>
	Vehicle speed signal	Combination meter (CAN)		
	Push-button ignition switch signal	Push-button ignition switch		
Daytime running light relay	Daytime running light request signal	BCM (CAN)	<ul style="list-style-type: none"> <li>Parking lamp</li> <li>License plate lamp</li> <li>Tail lamp</li> </ul>	<a href="#">EXL-19</a>
Front fog lamp relay	Front fog request signal	BCM (CAN)	Daytime running light	<a href="#">EXL-12</a>

**NOTE:**

BCM controls the starter relay.

## Component Parts Location

INFOID:000000011488475

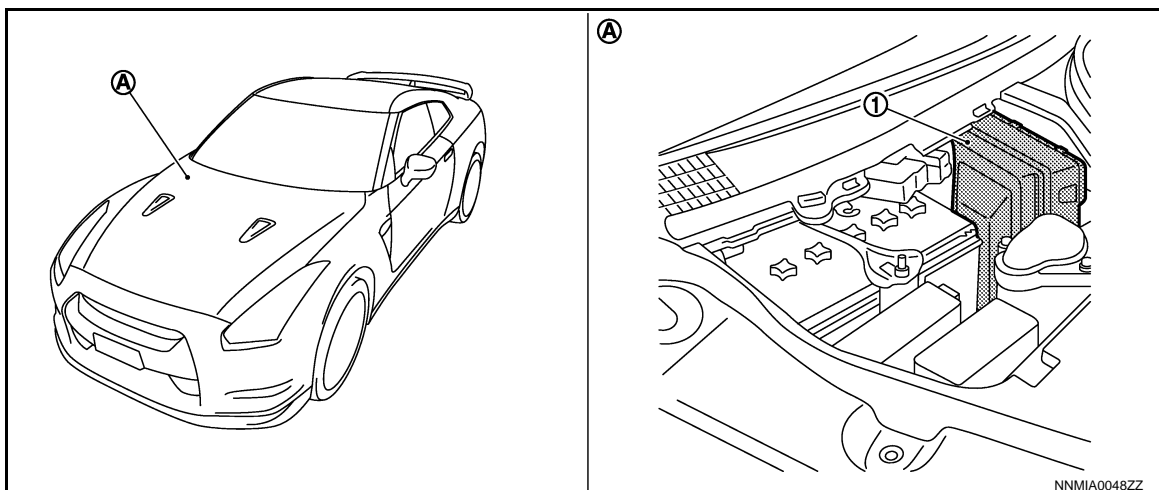


1. IPDM E/R

A. Engine room dash panel (RH)

POWER CONTROL SYSTEM

System Diagram

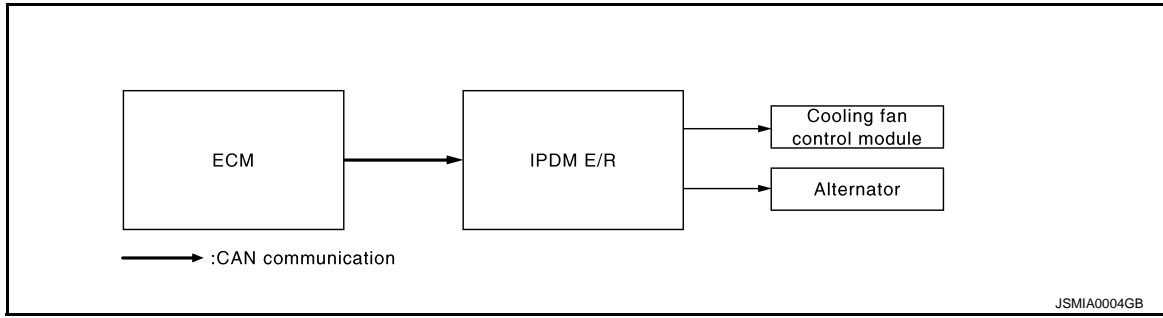

System Description

INFOID:000000011488477

COOLING FAN CONTROL

IPDM E/R outputs pulse duty signal (PWM signal) to the cooling fan control module according to the status of the cooling fan speed request signal received from ECM via CAN communication. Refer to [EC-94, "System Diagram \(GT-R certified NISSAN dealer\)"](#).

**NOTE:**

After ignition switch OFF, IPDM E/R turn the cooling fan relay ON and outputs pulse duty signal (PWM signal) to the cooling fan control module according to the request signal from ECM for cooling an engine by the situation. Refer to [EC-94, "System Description \(GT-R certified NISSAN dealer\)"](#).

ALTERNATOR CONTROL

IPDM E/R outputs power generation command signal (PWM signal) to the alternator according to the status of the power generation command value signal received from ECM via CAN communication. Refer to [CHG-12, "System Diagram"](#).


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

## SIGNAL BUFFER SYSTEM

### System Diagram

INFOID:000000011488478

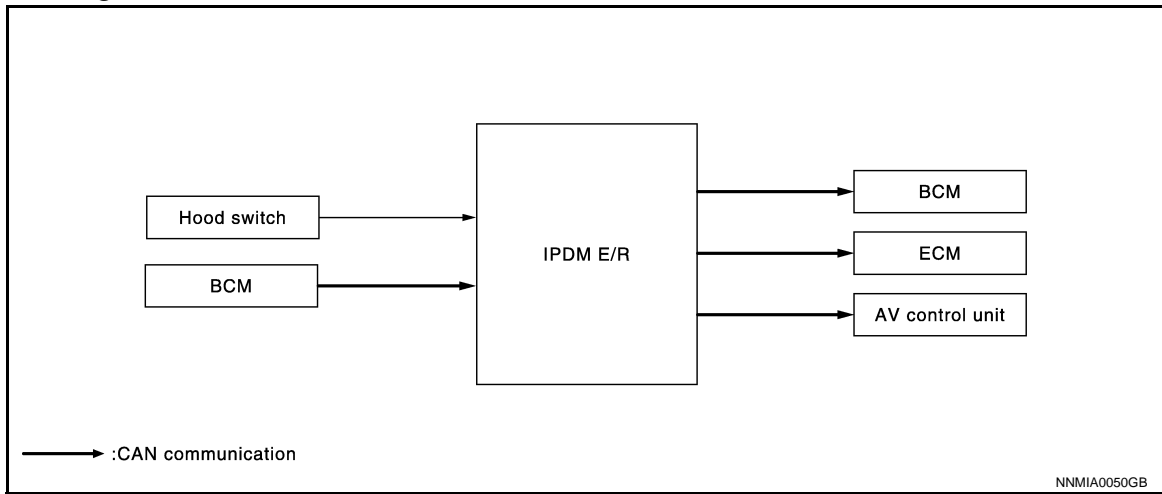


### System Description

INFOID:000000011488479

- IPDM E/R reads the status of the hood switch and transmits the hood switch signal to BCM via CAN communication. Refer to [SEC-111, "Description"](#).
- IPDM E/R receives the rear window defogger control signal from BCM via CAN communication and transmits it to ECM and AV control unit via CAN communication. Refer to [DEF-4, "System Diagram"](#).

POWER CONSUMPTION CONTROL SYSTEM

System Diagram

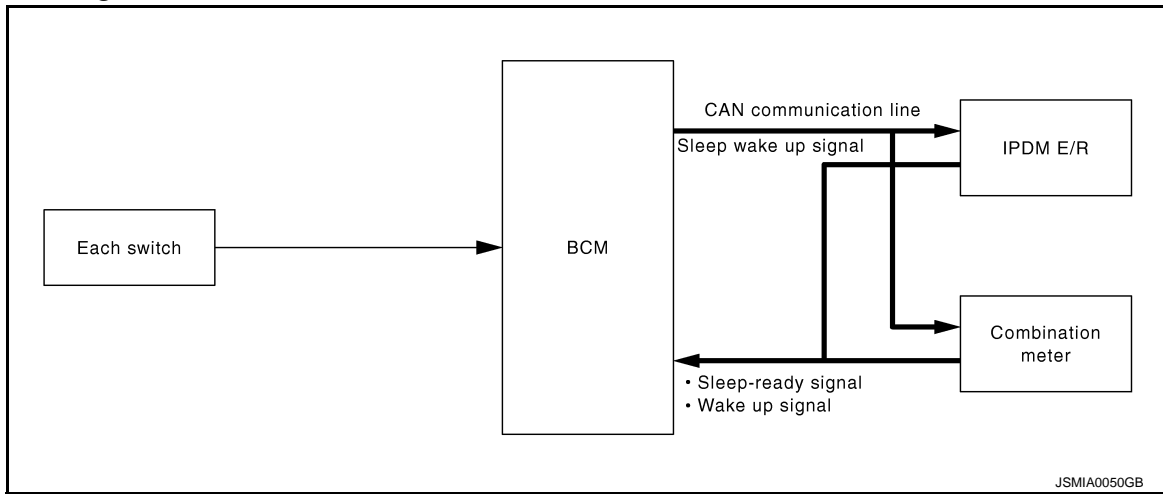

System Description

INFOID:000000011488481

OUTLINE

- IPDM E/R incorporates a power consumption control function that reduces the power consumption according to the vehicle status.
- IPDM E/R changes its status (control mode) with the sleep wake up signal received from BCM via CAN communication.

Normal mode (wake-up)

- CAN communication is normally performed with other control units.
- Individual unit control by IPDM E/R is normally performed.

Low power consumption mode (sleep)

- Low power consumption control is active.
- CAN transmission is stopped.

SLEEP MODE ACTIVATION

- IPDM E/R judges that the sleep-ready conditions are fulfilled when the ignition switch is OFF and none of the conditions below are present. Then it transmits a sleep-ready signal (ready) to BCM via CAN communication.
  - Outputting signals to actuators
  - Switches or relays operating
  - Hood switch status is kept 50 ms or less.
  - Output requests are being received from control units via CAN communication.
- IPDM E/R stops CAN communication and enters the low power consumption mode when it receives a sleep wake up signal (sleep) from BCM and the sleep-ready conditions are fulfilled.

WAKE-UP OPERATION

- IPDM E/R changes from the low power consumption mode to the normal mode when it receives a sleep wake-up signal (wake up) from BCM or any of the following conditions is fulfilled. In addition, it transmits a sleep-ready signal (not-ready) to BCM via CAN communication to report the CAN communication start.
  - Ignition switch ON
  - The hood switch status changes.
  - An output request is received from a control unit via CAN communication.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS


# POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

## Component Parts Location

INFOID:000000011488482

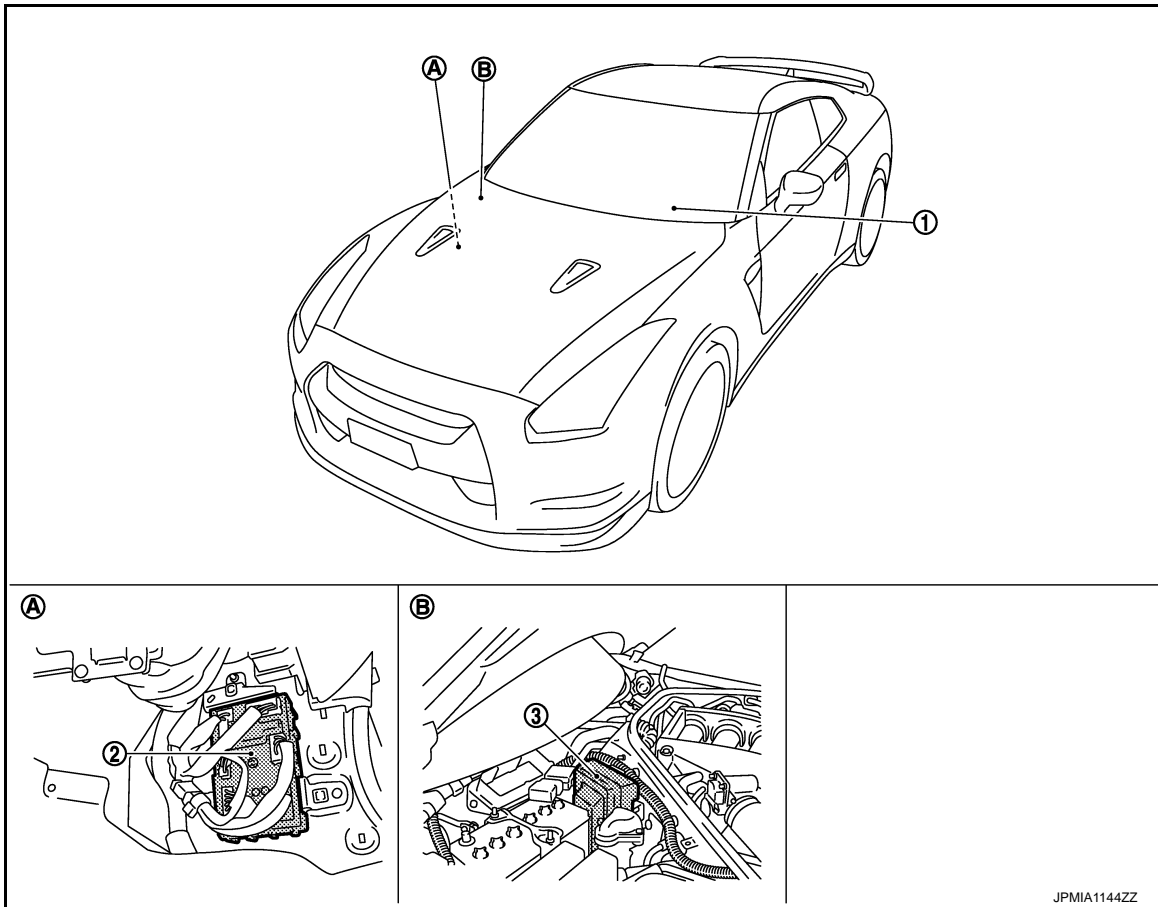

1. Combination meter

2. BCM

3. IPDM E/R

A. Dash side lower (passenger side)

B. Engine room dash panel (RH)



## DIAGNOSIS SYSTEM (IPDM E/R)

### Diagnosis Description

INFOID:000000011488483

#### AUTO ACTIVE TEST

##### Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Front wiper (LO, HI)
- Parking lamps
- License plate lamps
- Side marker lamps
- Tail lamps
- Daytime running light
- Headlamps (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan (cooling fan control module)

##### Operation Procedure

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)

**NOTE:**

When auto active test is performed with hood opened, sprinkle water on windshield beforehand.

2. Turn the ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the driver door switch 10 times. Then turn the ignition switch OFF.

**CAUTION:**

**Close passenger door.**

4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. After a series of the following operations is repeated 3 times, auto active test is completed.

**NOTE:**

When auto active test mode has to be cancelled halfway through test, turn the ignition switch OFF.

**CAUTION:**

- If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-63, "Component Function Check"](#).
- Do not start the engine.

##### Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 5 steps are repeated 3 times.

Operation sequence	Inspection location	Operation
1	Front wiper	LO for 5 seconds → HI for 5 seconds
2	<ul style="list-style-type: none"> <li>• Parking lamps</li> <li>• License plate lamps</li> <li>• Side marker lamps</li> <li>• Tail lamps</li> <li>• Daytime running light</li> </ul>	10 seconds
3	Headlamps	LO ↔ HI 5 times
4	A/C compressor (magnet clutch)	ON ↔ OFF 5 times
5*	Cooling fan	MID for 5 seconds → HI for 5 seconds


\*: Outputs duty ratio of 50% for 5 seconds → duty ratio of 100% for 5 seconds on the cooling fan control module.

# DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Concept of auto active test

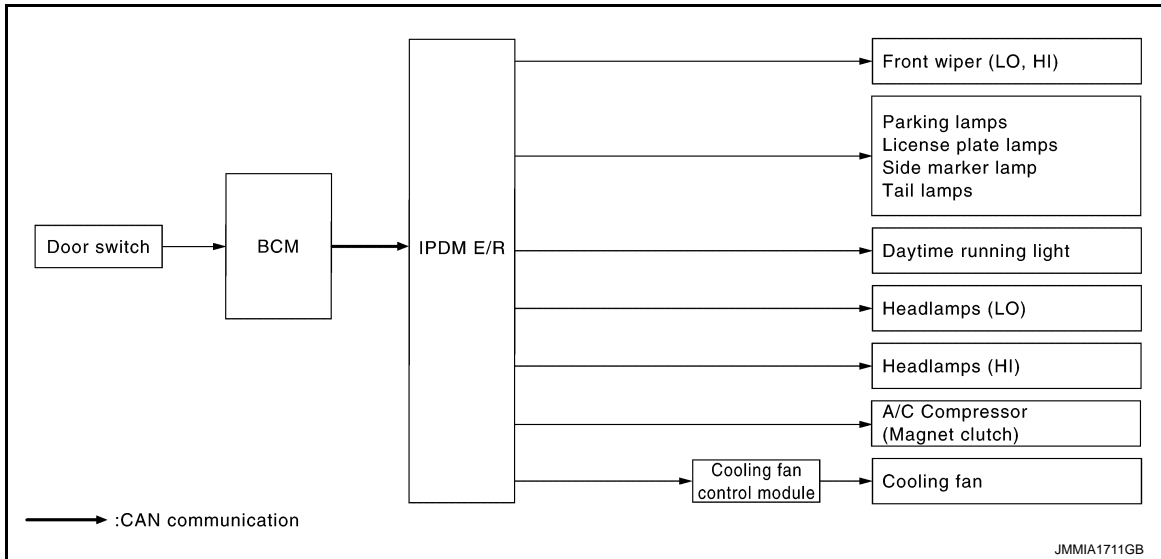

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Any of the following components do not operate <ul style="list-style-type: none"> <li>• Headlamp (HI, LO)</li> <li>• Front wiper (HI, LO)</li> <li>• Daytime running light</li> </ul>	Perform auto active test. Does the applicable system operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> <li>• Lamp or motor</li> <li>• Lamp or motor ground circuit</li> <li>• Harness or connector between IPDM E/R and applicable system</li> <li>• IPDM E/R</li> </ul>
Any of the following components do not operate <ul style="list-style-type: none"> <li>• Parking lamps</li> <li>• License plate lamps</li> <li>• Tail lamps</li> <li>• Side marker lamps</li> </ul>	Perform auto active test. Does the applicable system operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> <li>• Lamp</li> <li>• Lamp ground circuit</li> <li>• Harness or connector between daytime running light relay and applicable system</li> <li>• Harness or connector between IPDM E/R and daytime running relay</li> <li>• Daytime running relay power supply circuit</li> <li>• IPDM E/R</li> <li>• Daytime running light relay</li> </ul>
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES <ul style="list-style-type: none"> <li>• A/C amp. signal input circuit</li> <li>• CAN communication signal between A/C amp. and ECM</li> <li>• CAN communication signal between ECM and IPDM E/R</li> </ul>
		NO <ul style="list-style-type: none"> <li>• Magnet clutch</li> <li>• Harness or connector between IPDM E/R and magnet clutch</li> <li>• IPDM E/R</li> </ul>

# DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Symptom	Inspection contents	Possible cause
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES <ul style="list-style-type: none"> <li>ECM signal input circuit</li> <li>CAN communication signal between ECM and IPDM E/R</li> </ul>
		NO <ul style="list-style-type: none"> <li>Cooling fan</li> <li>Harness or connector between cooling fan and cooling fan control module</li> <li>Cooling fan control module</li> <li>Harness or connector between IPDM E/R and cooling fan control module</li> <li>Cooling fan relay</li> <li>Harness or connector between IPDM E/R and cooling fan relay</li> <li>IPDM E/R</li> </ul>

## CONSULT Function (IPDM E/R)

INFOID:000000011488484

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

### SELF DIAGNOSTIC RESULT

Refer to [PCS-32, "DTC Index"](#).

### DATA MONITOR

#### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item [Unit]	MAIN SIGNALS	Description
RAD FAN REQ [%]	×	Displays the value of the cooling fan speed signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog lamp request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper stop position signal judged by IPDM E/R.

PCS

# DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Monitor Item [Unit]	MAIN SIG- NALS	Description
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the shift position judged by IPDM E/R.
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.
ST/INHI RLY [Off/ ST ON/INHI ON/UNKWN]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.
DETENT SW [Off/On]		Displays the status of the A/T shift selector (detention switch) judged by IPDM E/R.
S/L RLY -REQ [Off/On]		Displays the status of the steering lock relay request signal received from BCM via CAN communication.
S/L STATE [LOCK/UNLOCK/UNKWN]		Displays the status of the steering lock judged by IPDM E/R.
DTRL REQ [Off/On]	×	Displays the status of the daytime running light request signal received from BCM via CAN communication.
OIL P SW [Open/Close]		<b>NOTE:</b> The item is indicated, but not monitored.
HOOD SW [Off/On]		Displays the status of the hood switch judged by IPDM E/R.
HL WASHER REQ [Off/On]		<b>NOTE:</b> The item is indicated, but not monitored.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.
CRNRNG LMP REQ [Off/On]		<b>NOTE:</b> The item is indicated, but not monitored.

## ACTIVE TEST

Test item	Operation	Description
CORNERING LAMP	Off	<b>NOTE:</b> The item is indicated, but cannot be tested.
	LH	
	RH	
HORN	On	Operates horn relay 1 and horn relay 2 for 20 ms.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.

# DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Test item	Operation	Description
MOTOR FAN	1	OFF
	2	Outputs 50% pulse duty signal (PWM signal) to the cooling fan control module.
	3	Outputs 80% pulse duty signal (PWM signal) to the cooling fan control module.
	4	Outputs 100% pulse duty signal (PWM signal) to the cooling fan control module.
HEAD LAMP WASHER	On	<b>NOTE:</b> The item is indicated, but cannot be tested.
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

PCS

N  
O  
P

## DTC/CIRCUIT DIAGNOSIS

### U1000 CAN COMM CIRCUIT

#### Description

INFOID:0000000011488485

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.  
 CAN Communication Signal Chart. Refer to [LAN-24, "CAN Communication Signal Chart"](#).

#### DTC Logic

INFOID:0000000011488486

#### DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more	CAN communication system

#### Diagnosis Procedure

INFOID:0000000011488487

#### 1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result" of IPDM E/R.

#### Is DTC "U1000" displayed?

- YES >> Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).  
 NO >> Refer to [GI-39, "Intermittent Incident"](#).

# B2098 IGNITION RELAY ON STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

## B2098 IGNITION RELAY ON STUCK

### Description

INFOID:000000011488488

- IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.
- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the unified meter and A/C amp.(Emergency OFF)
  - Press and hold the push-button ignition switch for 2 seconds or more.
  - Press the push-button ignition switch 3 times within 1.5 seconds.

#### NOTE:

The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

### DTC Logic

INFOID:000000011488489

#### DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible causes
B2098	IGN RELAY ON CIRC	The ignition relay ON is detected for 1 second at ignition switch OFF (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it)	Ignition relay malfunction

#### DTC CONFIRMATION PROCEDURE

##### 1.PERFORM SELF DIAGNOSIS

1. Turn the ignition switch ON.
2. Turn ignition switch OFF and wait 1 second or more.
3. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

##### Is DTC detected?

- YES >> Refer to [PCS-15, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011488490

##### 1.CHECK SELF DIAGNOSTIC RESULT

Check DTC using CONSULT.

##### What is the display history of DTC "B2098"?

- "CRNT">> GO TO 2.
- "PAST">> GO TO 5.

##### 2.CHECK IGNITION RELAY CONTROL CIRCUIT VOLTAGE 1

1. Turn ignition switch ON
2. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (Approx.)
IPDM E/R			
Connector	Terminal		
E5	27	Ground	0 V

##### Is the inspection result normal?

- YES >> GO TO 4.
- NO >> GO TO 3.

##### 3.CHECK IGNITION RELAY CONTROL CIRCUIT VOLTAGE 2

# B2098 IGNITION RELAY ON STUCK

[IPDM E/R]

## < DTC/CIRCUIT DIAGNOSIS >

1. Disconnect IPDM E/R connector.
2. Turn ignition switch ON
3. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (Approx.)
IPDM E/R			
Connector	Terminal	Ground	0 V
E5	27		

### Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).  
NO >> Check the harness of the ignition relay control circuit for a short to power.

## 4.CHECK IGNITION RELAY CONTROL CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	27		Not existed

### Is the inspection result normal?

- YES >> Perform the diagnosis procedure for DTC B260A. Refer to [PCS-52, "DTC Logic"](#).  
NO >> Repair or replace harness.

## 5.CHECK INTERMITTENT INCIDENT

Refer to [GI-39, "Intermittent Incident"](#).

>> INSPECTION END



# B2099 IGNITION RELAY OFF STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

## B2099 IGNITION RELAY OFF STUCK

### Description

INFOID:000000011488491

- IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.
- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the unified meter and A/C amp.(Emergency OFF)
  - Press and hold the push-button ignition switch for 2 seconds or more.
  - Press the push-button ignition switch 3 times within 1.5 seconds.

#### NOTE:

The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

### DTC Logic

INFOID:000000011488492

#### DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible causes
B2099	IGN RELAY OFF CIRC	The ignition relay OFF is detected for 1 second at ignition switch ON (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it)	Ignition relay malfunction

#### NOTE:

When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the "DTC: B2099" may be detected.

#### DTC CONFIRMATION PROCEDURE

##### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Turn ignition switch OFF and wait 1 second or more.
3. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

#### Is DTC detected?

- YES >> Refer to [PCS-17. "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011488493

##### 1. CHECK FUSE

Check that all of the fuses installed on the downstream of the contact point side circuit of the ignition relay in IPDM E/R are not blown.

#### Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Replace the blown fuse after replacing the affected circuit if a fuse is blown.

##### 2. CHECK IGNITION RELAY CONTROL CIRCUIT VOLTAGE

1. Turn ignition switch ON
2. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (Approx)
IPDM E/R			
Connector	Terminal		
E5	27	Ground	0 V

#### Is the inspection result normal?

## B2099 IGNITION RELAY OFF STUCK

[IPDM E/R]

< DTC/CIRCUIT DIAGNOSIS >

---

YES >> Replace IPDM E/R. Refer to [PCS-35. "Removal and Installation"](#).

NO >> GO TO 3.

### 3.CHECK BATTERY VOLTAGE

---

Check battery voltage.

Which is the measurement result?

More than 12.4 V>>GO TO 4.

Less than 12.4 V>>Perform battery inspection. Refer to [PG-3. "How to Handle Battery"](#).

### 4.CHECK INTERMITTENT INCIDENT

---

Refer to [GI-39. "Intermittent Incident"](#).

>> INSPECTION END

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

## POWER SUPPLY AND GROUND CIRCUIT

### Diagnosis Procedure

INFOID:000000011488494

#### 1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

Signal name	Fuses and fusible link No.
Battery power supply	C
	50
	51

#### Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

#### 2. CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between the IPDM E/R harness connector and the ground.

Terminals		Voltage (Approx.)
(+)	(-)	
IPDM E/R		Battery voltage
Connector	Terminal	
E4	1	

#### Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair the harness or connector.

#### 3. CHECK GROUND CIRCUIT

Check continuity between the IPDM E/R harness connectors and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	12		Existed
E6	41		

#### Does continuity exist?

YES >> INSPECTION END

NO >> Repair the harness or connector.

## ECU DIAGNOSIS INFORMATION

### IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

#### Reference Value

INFOID:000000011488495

#### VALUES ON THE DIAGNOSIS TOOL

**NOTE:**

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition		Value/Status
RAD FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 - 100 %
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND or HI		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND or HI		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Daytime running light system is not operated		Off
	Daytime running light system is operated		On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	Shift lever in any position other than P or N	Off
	Ignition switch ON	Shift lever in P or N position	On
ST RLY CONT	Ignition switch ON		Off
	At engine cranking		On
IHBT RLY -REQ	Ignition switch ON		Off
	At engine cranking		On

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Monitor Item	Condition	Value/Status	
ST/INHI RLY	Ignition switch ON	Off	A
	At engine cranking	INHI → ST ON	
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF	UNKWN	B
DETENT SW	Ignition switch ON	Off	C
	Release the knob button with shift lever in P position	On	D
S/L RLY -REQ	None of the conditions below are present	Off	
	<ul style="list-style-type: none"> <li>• Open the driver door after the ignition switch is turned OFF (for a few seconds)</li> <li>• Press the push-button ignition switch when the steering lock is activated</li> </ul>	On	E
S/L STATE	Steering lock is activated	LOCK	
	Steering lock is deactivated	UNLOCK	F
	[DTC: B210A] is detected	UNKWN	
DTRL REQ	Lighting switch OFF	Off	G
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)	On	
OIL P SW	<b>NOTE:</b> The item is indicated, but not monitored.	Open	H
HOOD SW	Close the hood	Off	
	Open the hood	On	I
HL WASHER REQ	<b>NOTE:</b> The item is indicated, but not monitored.	Off	
THFT HRN REQ	Not operating	Off	J
	<ul style="list-style-type: none"> <li>• Panic alarm is activated</li> <li>• Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM</li> </ul>	On	
HORN CHIRP	Not operating	Off	K
	<ul style="list-style-type: none"> <li>• Door locking with Intelligent Key (horn chirp mode)</li> <li>• Door locking with key fob (horn chirp mode)</li> </ul>	On	
CRNRNG LMP REQ	<b>NOTE:</b> The item is indicated, but not monitored.	Off	L

PCS

N

O


P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

## TERMINAL LAYOUT

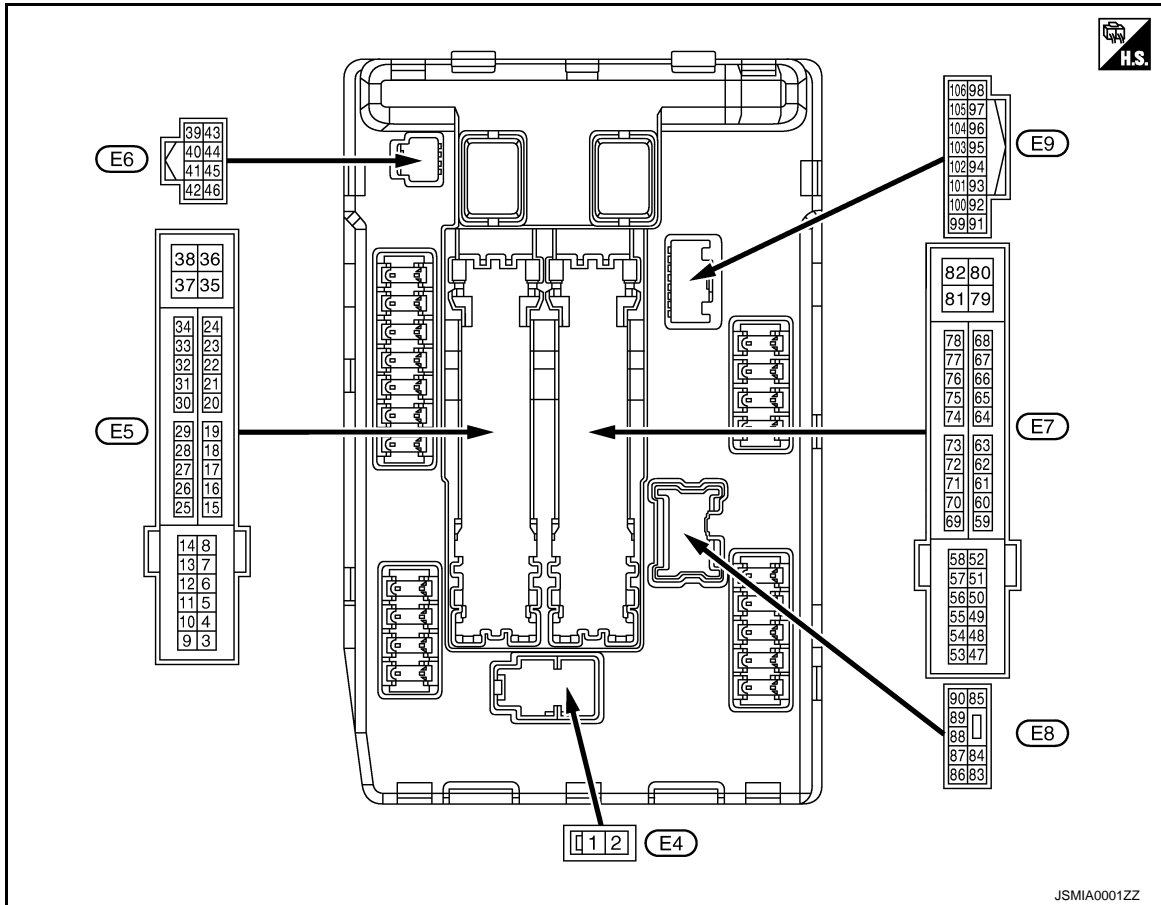

## PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (Y)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
4 (V)	Ground	Front wiper LO	Output	Ignition switch OFF	Front wiper switch OFF	0 V
				Ignition switch ON	Front wiper switch LO	Battery voltage
5 (L)	Ground	Front wiper HI	Output	Ignition switch OFF	Front wiper switch OFF	0 V
				Ignition switch ON	Front wiper switch HI	Battery voltage
6 (Y)	Ground	Daytime running light relay power supply	Input	Ignition switch OFF	Lighting switch OFF	Battery voltage
				Ignition switch ON	Lighting switch 1ST	0 V
7 (R)	Ground	Illuminations	Output	Ignition switch OFF	Lighting switch OFF	0 V
				Ignition switch ON	Lighting switch 1ST	Battery voltage
10 (W)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V
				<ul style="list-style-type: none"> <li>Ignition switch ON</li> <li>Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul>		Battery voltage

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)	
11 (SB)	Ground	Steering lock unit power supply	Output	Ignition switch OFF	A few seconds after opening the driver door	Battery voltage	A
				Ignition switch LOCK	Press the push-button ignition switch	Battery voltage	B
				Ignition switch ACC or ON		0 V	C
12 (B/W)	Ground	Ground	—	Ignition switch ON		0 V	D
13 (R)	Ground	Fuel pump power supply	Output	Ignition switch OFF		0 V	D
				<ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Engine running</li> </ul>		Battery voltage	E
16 (LG)	Ground	Front wiper stop position	Input	Ignition switch ON	Front wiper stop position	0 V	E
					Any position other than front wiper stop position	Battery voltage	F
25 (O)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V	F
				Ignition switch ON		Battery voltage	G
27 (Y)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC		Battery voltage	G
				Ignition switch ON		0 V	H
28 (G)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch		0 V	H
				Release the push-button ignition switch		Battery voltage	I
30 (GR)	Ground	Starter relay control	Input	Shift lever in any position other than P or N (Ignition switch ON)		0.4 V	I
				Shift lever P or N (Ignition switch ON)		Battery voltage	J
32 (L)	Ground	Steering lock unit condition-1	Input	Steering lock is activated		0 V	J
				Steering lock is deactivated		Battery voltage	K
33 (P)	Ground	Steering lock unit condition-2	Input	Steering lock is activated		Battery voltage	K
				Steering lock is deactivated		0 V	L
36 (LG)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage	L
39 (P)	—	CAN-L	Input/ Output	—		—	
40 (L)	—	CAN-H	Input/ Output	—		—	PCS
41 (B/Y)	Ground	Ground	—	Ignition switch ON		0 V	
42 (G)	Ground	Cooling fan relay control	Input	Ignition switch OFF or ACC		Battery voltage	N
				Ignition switch ON		0.7 V	
43 (SB)	Ground	A/T shift selector (Detention switch)	Input	Ignition switch ON	<ul style="list-style-type: none"> <li>• Press the knob button (Shift lever P)</li> <li>• Shift lever in any position other than P</li> </ul>	Battery voltage	O
					Release the knob button (Shift lever P)	0 V	P
44 (W)	Ground	Horn relay control	Input	The horn is deactivated		Battery voltage	
				The horn is activated		0 V	
46 (O)	Ground	Starter relay control	Input	Shift lever in any position other than P or N (Ignition switch ON)		0 V	
				Shift lever P or N (Ignition switch ON)		Battery voltage	

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]




Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
48 (L)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 V
					A/C switch ON (A/C compressor is operating)	Battery voltage
49 (P)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V	
				<ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul>	Battery voltage	
51 (LG)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	
				Ignition switch ON	Battery voltage	
53 (SB)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V	
				<ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul>	Battery voltage	
54 (W)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V	
				<ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul>	Battery voltage	
55 (O)	Ground	ECM power supply	Output	Ignition switch OFF	Battery voltage	
56 (R)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	
				Ignition switch ON	Battery voltage	
57 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	
				Ignition switch ON	Battery voltage	
58 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	
				Ignition switch ON	Battery voltage	
69 (O)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	Battery voltage	
				<ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul>	0 - 1.5 V	
70 (G)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF	0 - 1.0 V ↓ Battery voltage ↓ 0 V	
				Ignition switch ON	0 - 1.0 V	
71 (SB)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V	
				Ignition switch ON	Battery voltage	



# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

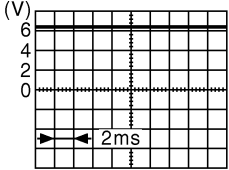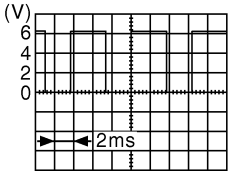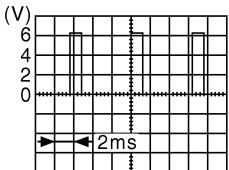Terminal No. (Wire color)		Description		Condition		Value (Approx.)
74 (LG)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
76 (P)	Ground	Power generation command signal	Output	Ignition switch ON		 <p style="text-align: center;">JPMIA0001GB 6.3 V</p>
				40% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"		 <p style="text-align: center;">JPMIA0002GB 3.8 V</p>
				80% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"		 <p style="text-align: center;">JPMIA0003GB 1.4 V</p>
77 (B/W)	Ground	Fuel pump relay control	Output	<ul style="list-style-type: none"> <li>Ignition switch ON</li> <li>Engine running</li> </ul>		0 V
80 (W)	Ground	Starter motor	Output	At engine cranking		Battery voltage
83 (R)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
84 (P)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
86* (W)	Ground	Daytime running light (RH)	Output	Daytime running light system	Not operated	0 V
					Operated	Battery voltage
87* (L)	Ground	Daytime running light (LH)	Output	Daytime running light system	Not operated	0 V
					Operated	Battery voltage
88 (G)	Ground	Washer pump power supply	Output	Ignition switch ON		Battery voltage
89 (BR)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					<ul style="list-style-type: none"> <li>Lighting switch HI</li> <li>Lighting switch PASS</li> </ul>	Battery voltage
90 (O)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					<ul style="list-style-type: none"> <li>Lighting switch HI</li> <li>Lighting switch PASS</li> </ul>	Battery voltage

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

PCS

N  
O  
P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
97 (Y)	Ground	Cooling fan control	Output	Engine idling		0 - 5 V
104 (LG)	Ground	Hood switch	Input	Close the hood		Battery voltage
				Open the hood		0 V
105 (GR)	Ground	Daytime running light relay control	Input	Ignition switch ON	Lighting switch OFF	Battery voltage
					Lighting switch 1ST	0 V


# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

## Wiring Diagram - IPDM E/R -

INFOID:000000011488496

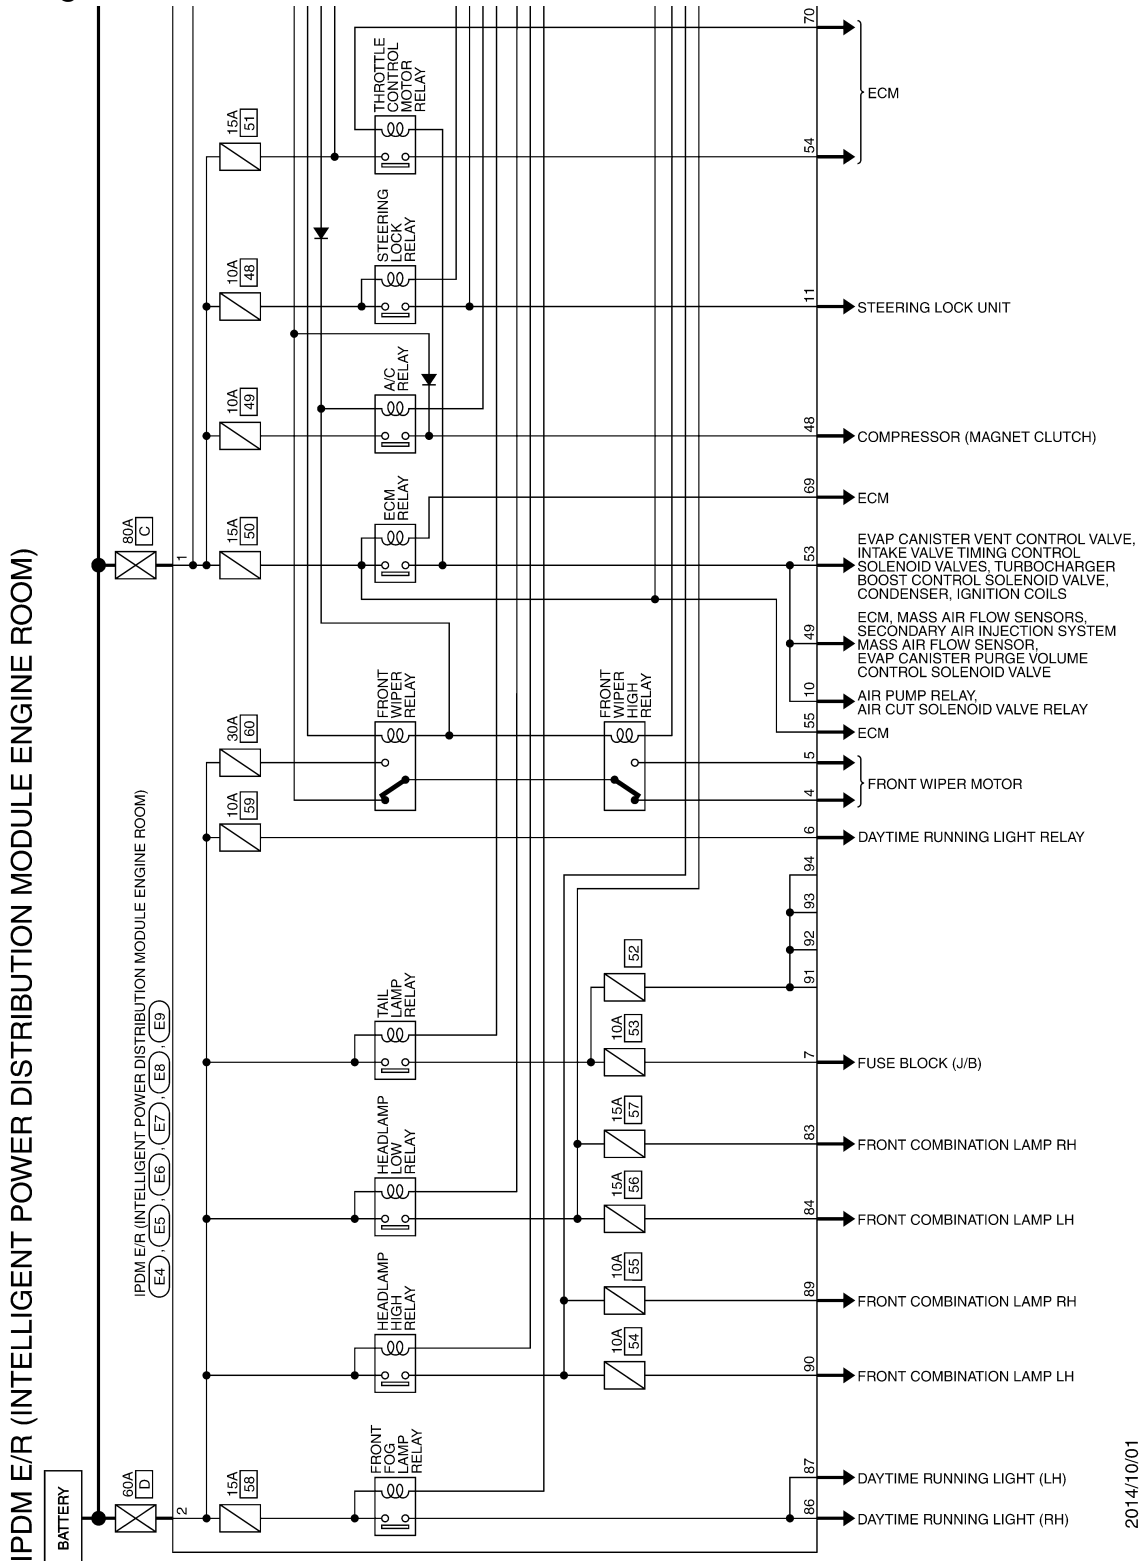

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

PCS


2014/10/01

JRMWG8094GB

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

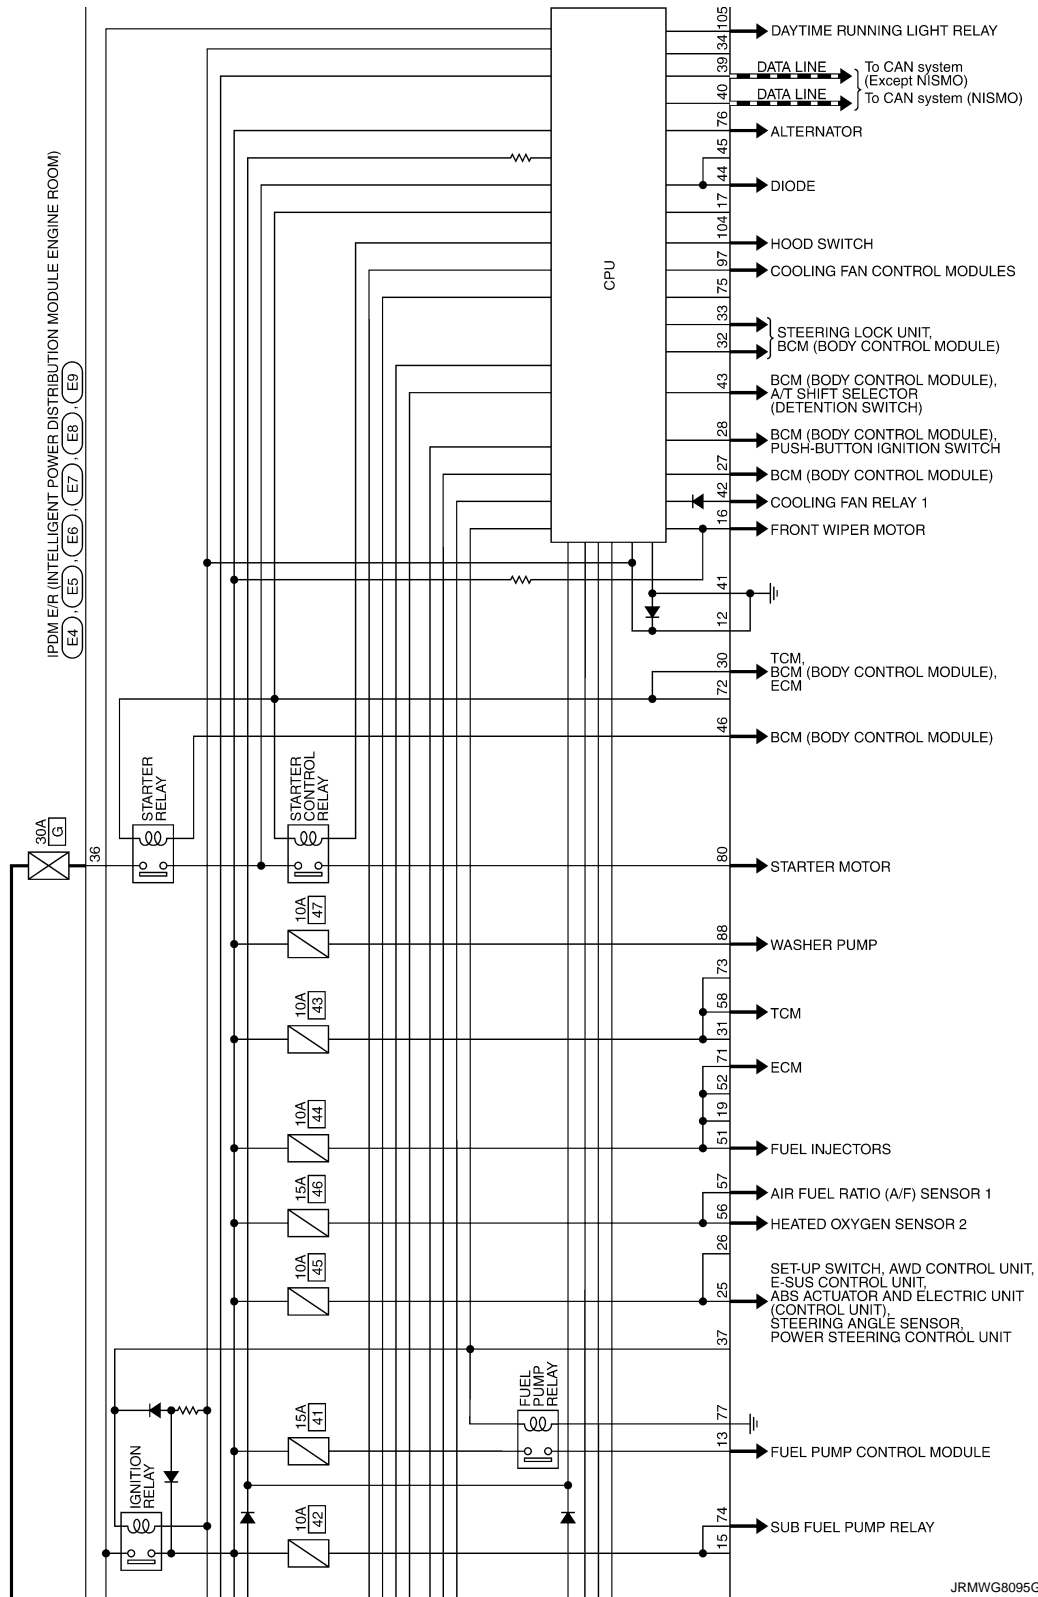

JRMWG8095GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

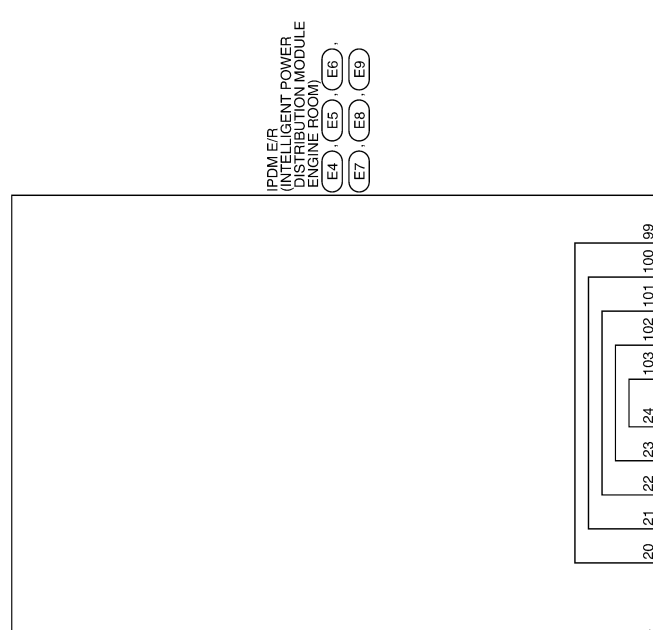



PCS

JRMWG8096GB


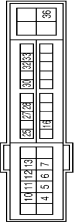
**IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)**

Connector No.	E4
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	L02FB4MC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	Y	-

Connector No.	E5
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-C52-M4-1V


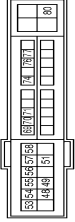
Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	Y	-

Connector No.	E6
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH38FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	BY	-
42	G	-
43	SB	-
44	W	-
46	BG	-

Connector No.	E7
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-C52-M4


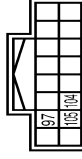
Terminal No.	Color Of Wire	Signal Name [Specification]
48	L	-
49	P	-
51	LG	-
53	SB	-
54	W	-
55	BG	-
56	R	-
57	G	-
58	Y	-
69	BG	-
70	G	-
71	SB	-

Connector No.	E8
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS08FW-CS

Terminal No.	Color Of Wire	Signal Name [Specification]
83	R	-
84	P	-
86	W	-
87	L	-
88	G	-
89	BR	-
90	BG	-

Connector No.	E9
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH16FW-NH

Terminal No.	Color Of Wire	Signal Name [Specification]
97	Y	-
104	LG	-
105	GR	-

## Fail-safe

### CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

JRMWG8015GB

INFOID:000000011488497

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Control part	Fail-safe operation
Cooling fan	<ul style="list-style-type: none"> <li>• Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON</li> <li>• Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF</li> </ul>
A/C compressor	A/C relay OFF

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> <li>• Turns ON the headlamp low relay when the ignition switch is turned ON</li> <li>• Turns OFF the headlamp low relay when the ignition switch is turned OFF</li> <li>• Headlamp high relay OFF</li> </ul>
Illuminations	<ul style="list-style-type: none"> <li>• Turns ON the tail lamp relay when the ignition switch is turned ON</li> <li>• Turns OFF the tail lamp relay when the ignition switch is turned OFF</li> </ul>
Front wiper	<ul style="list-style-type: none"> <li>• The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed.</li> <li>• The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.</li> </ul>
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF
Steering lock unit	Steering lock relay OFF
<ul style="list-style-type: none"> <li>• Parking lamps</li> <li>• License plate lamps</li> <li>• Side marker lamps</li> <li>• Tail lamps</li> </ul>	Daytime running light relay OFF
Daytime running light	Front fog lamp relay OFF

## IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay and daytime running light relay\* for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition relay excitation coil side		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	<ul style="list-style-type: none"> <li>• Detects DTC "B2098: IGN RELAY ON CIRC"</li> <li>• Turns ON the tail lamp relay and daytime running light relay* for 10 minutes</li> </ul>
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF CIRC"

\*: With daytime running light system

## FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

**NOTE:**

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

**STARTER MOTOR PROTECTION FUNCTION**

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

**DTC Index**

INFOID:000000011488498

**NOTE:**

- The details of time display are as follows.
  - CRNT: A malfunction is detected now.
  - PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
  - The number is 0 when is detected now.
  - The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
  - The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

CONSULT display	Fail-safe	Refer to
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	<a href="#">PCS-14</a>
B2098: IGN RELAY ON CIRC	×	<a href="#">PCS-15</a>
B2099: IGN RELAY OFF CIRC	—	<a href="#">PCS-17</a>
B2108: S/L RELAY ON	—	<a href="#">SEC-94</a>
B2109: S/L RELAY OFF	—	<a href="#">SEC-95</a>
B210A: S/L STATE SW	—	<a href="#">SEC-96</a>
B210B: STR CONT RLY ON CIRC	—	<a href="#">SEC-100</a>
B210C: STR CONT RLY OFF CIRC	—	<a href="#">SEC-101</a>
B210D: STARTER RLY ON CIRC	—	<a href="#">SEC-102</a>
B210E: STARTER RLY OFF CIRC	—	<a href="#">SEC-103</a>
B210F: INTRLCK/PNP SW ON	—	<a href="#">SEC-105</a>
B2110: INTRLCK/PNP SW OFF	—	<a href="#">SEC-107</a>



PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011488499

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

**WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precautions for Removing Battery Terminal

INFOID:000000011488500

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

**NOTE:**

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


**NOTE:**

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

**NOTE:**

The removal of 12V battery may cause a DTC detection error.

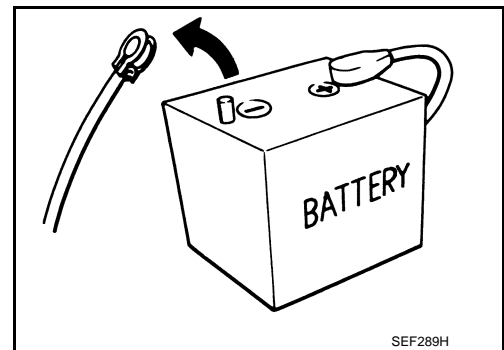

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# PRECAUTIONS


[IPDM E/R]

< PRECAUTION >

## Precaution for Procedure without Cowl Top Cover

INFOID:000000011488501

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

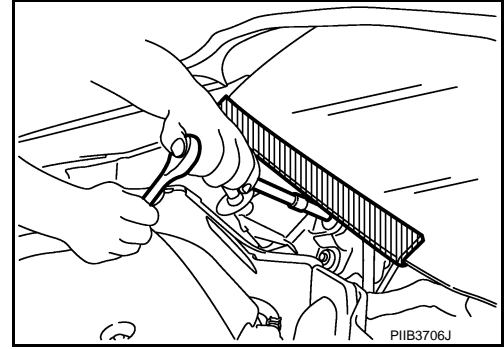

## Precaution for Battery Service

INFOID:000000011488502


Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

## REMOVAL AND INSTALLATION

### IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

#### Exploded View

INFOID:000000011488503

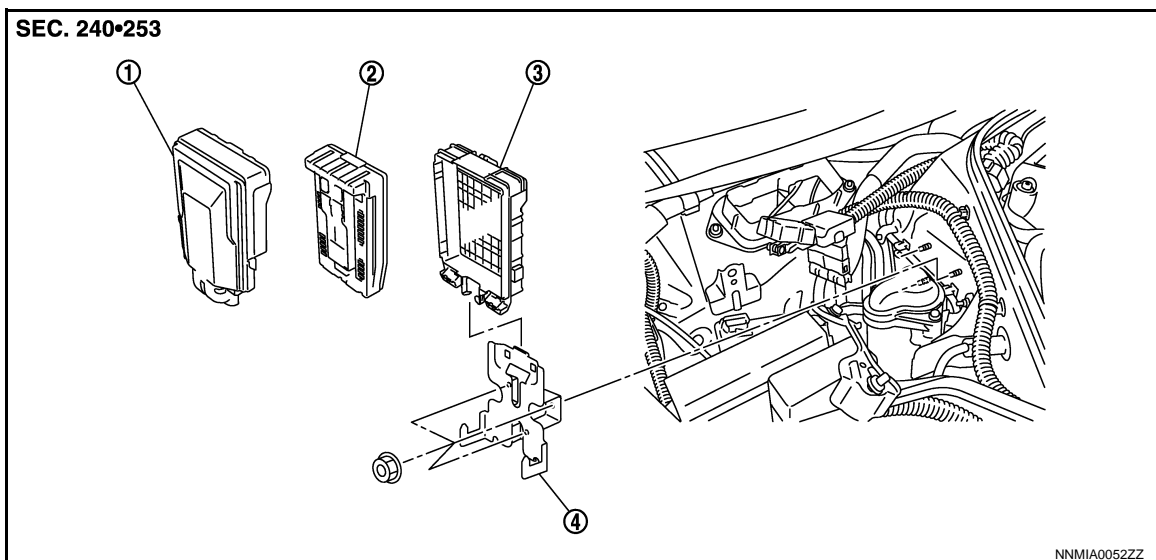

1. IPDM E/R cover A

2. IPDM E/R

3. IPDM E/R cover B

4. Bracket

#### Removal and Installation


INFOID:000000011488504

#### **CAUTION:**

**IPDM E/R integrated relays are not serviceable parts, and must not be removed from the unit.**

#### REMOVAL

1. Remove the battery. Refer to [PG-91, "Exploded View"](#).
2. Remove the cowl top cover (RH). Refer to [EXT-28, "Exploded View"](#).
3. Pull up the IPDM E/R assembly while pressing the pawls (A) on the back of the IPDM E/R cover B (1).

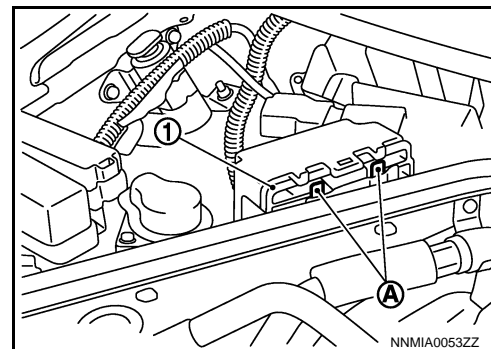

PCS

N

O


P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


[IPDM E/R]

## < REMOVAL AND INSTALLATION >


4. Remove the IPDM E/R cover A (1) while pressing the pawls (A) at the lower end of the IPDM E/R cover A.

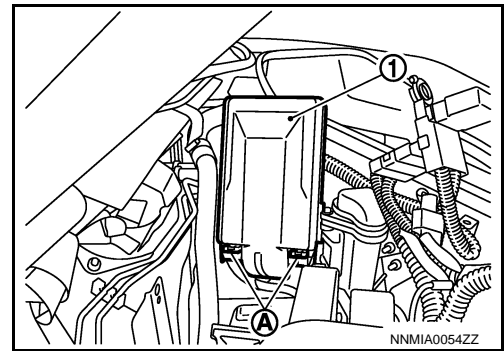

5. Disconnect the harness connector. And then remove the IPDM E/R (1).

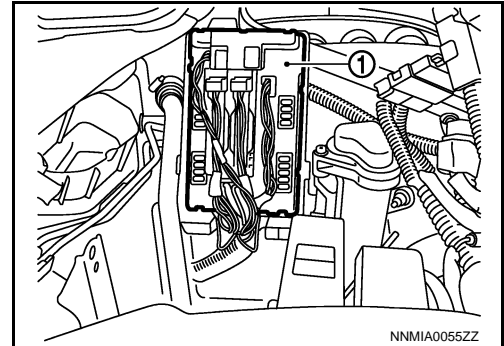

6. Remove the nuts (A). And then remove the bracket (1) from the vehicle.

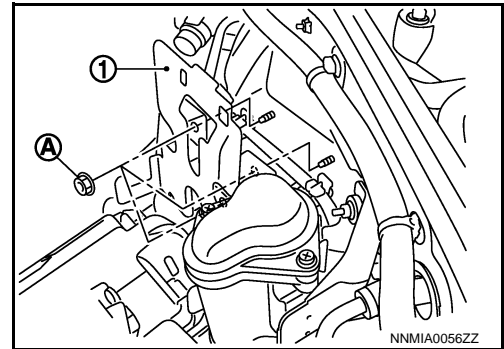

## INSTALLATION

Install in the reverse order of removal.

# DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000011488505

OVERALL SEQUENCE

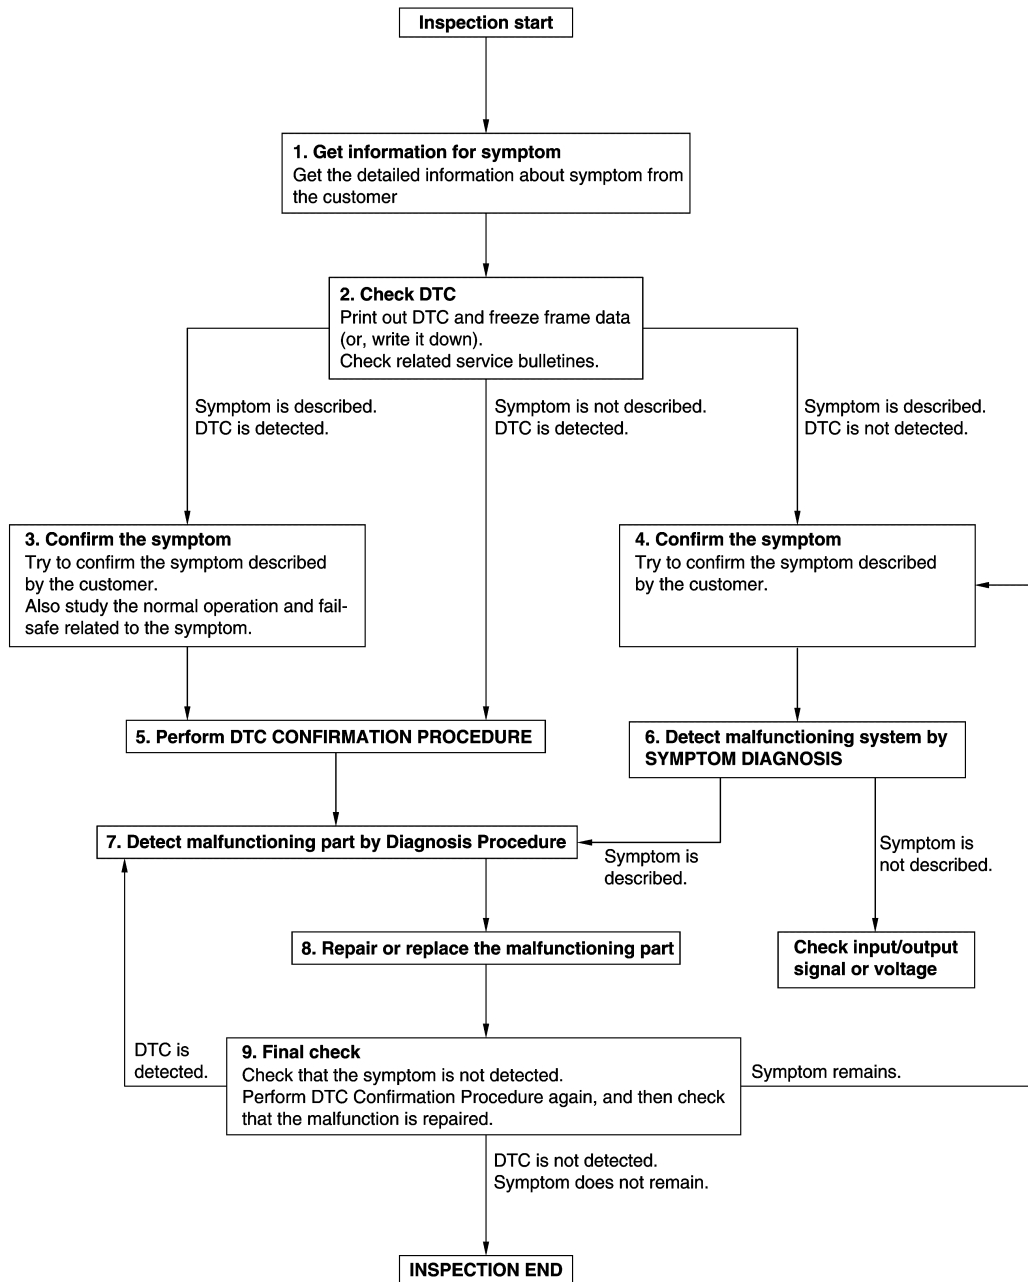

DETAILED FLOW

JMKIA8652GB

# DIAGNOSIS AND REPAIR WORK FLOW

[POWER DISTRIBUTION SYSTEM]

< BASIC INSPECTION >

## 1. GET INFORMATION FOR SYMPTOM

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

## 2. CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is detected.
  - Record DTC and freeze frame data (Print them out using CONSULT.)
  - Erase DTC.
  - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

## 3. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

## 4. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

## 5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time.

If two or more DTCs are detected, refer to [DLK-52. "INTELLIGENT KEY : CONSULT Function \(BCM - INTELLIGENT KEY\)"](#), and determine trouble diagnosis order.

**NOTE:**

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-39. "Intermittent Incident"](#).

## 6. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

## 7. DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

# DIAGNOSIS AND REPAIR WORK FLOW

## [POWER DISTRIBUTION SYSTEM]

### < BASIC INSPECTION >

Inspect according to Diagnosis Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-39. "Intermittent Incident"](#).

### 8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

### 9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

## SYSTEM DESCRIPTION

### POWER DISTRIBUTION SYSTEM

#### System Description

INFOID:000000011488506

- PDS (POWER DISTRIBUTION SYSTEM) is the system that BCM controls with the operation of the push-button ignition switch and performs the power distribution to each power circuit. This system is used instead of the mechanical power supply changing mechanism with the operation of the conventional key cylinder.
- The push-button ignition switch can be operated when Intelligent Key is in the following condition. Refer to Engine Start Function for details.
  - Intelligent Key is in the detection area of the inside key antenna
  - Insert Intelligent Key into the key slot
  - Insert key fob into the key slot
- The push-button ignition switch operation is input to BCM as a signal. BCM changes the power supply position according to the status and operates the following relays to supply power to each power circuit.
  - Ignition relay (built into IPDM E/R)
  - Ignition relay (inserted into fuse block)
  - ACC relay
  - Blower relay

**NOTE:**

The engine switch operation changes due to the conditions of brake pedal, shift lever position and vehicle speed.

- The power supply position can be confirmed with the illuminating of the indicators around the push-button ignition switch.

#### BATTERY SAVER SYSTEM

When all of the following conditions are met for 60 minutes, the battery saver system will cut off the power supply to prevent battery discharge.

- The ignition switch is in the ACC position
- All doors are closed
- Shift lever is in the P position

#### Reset Condition of Battery Saver System

In order to prevent the battery from discharging, the battery saver system will cut off the power supply when all doors are closed, the shift lever is in the P position and the ignition switch is left in the ACC position for 60 minutes. If any of the following conditions are met the battery saver system is released and the steering will change automatically to the LOCK position from the OFF position.

- Opening any door
- Operating with door key cylinder on door lock
- Operating with request switch on door lock
- Operating with Intelligent Key on door lock

Press push-button ignition switch and ignition switch will change to the ACC position from the OFF position.

#### STEERING LOCK OPERATION

Steering is locked by steering lock unit when ignition switch is in the OFF position, shift lever shift is in the P position and any of the following conditions are met.

- Opening door
- Closing door
- Door is locked with request switch
- Door is locked with Intelligent Key

#### POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION

The power supply position changing operation can be performed with the following operations.

**NOTE:**

- When an Intelligent Key is within the detection area of inside key antenna and when it is inserted to the key slot, it is equivalent to the operations below.
- When starting the engine, the BCM monitors under the engine start conditions,
  - Brake pedal operating condition
  - Shift lever position
  - Vehicle speed



# POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Vehicle speed: less than 4 km/h (2.5 MPH)

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Shift lever position	Brake pedal operation condition	
LOCK → ACC	—	Not depressed	1
LOCK → ACC → ON	—	Not depressed	2
LOCK → ACC → ON → OFF	—	Not depressed	3
LOCK → START ACC → START ON → START	P or N position	Depressed	1
Engine is running → OFF	—	—	1

Vehicle speed: 4 km/h (2.5 MPH) or more

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Shift lever position	Brake pedal operation condition	
Engine is running → ACC	—	—	Emergency stop operation
Engine stall return operation while driving	N position	Not depressed	1

Emergency stop operation

- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times or more within 1.5 seconds.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS


# POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

## Component Parts Location

INFOID:000000011488507

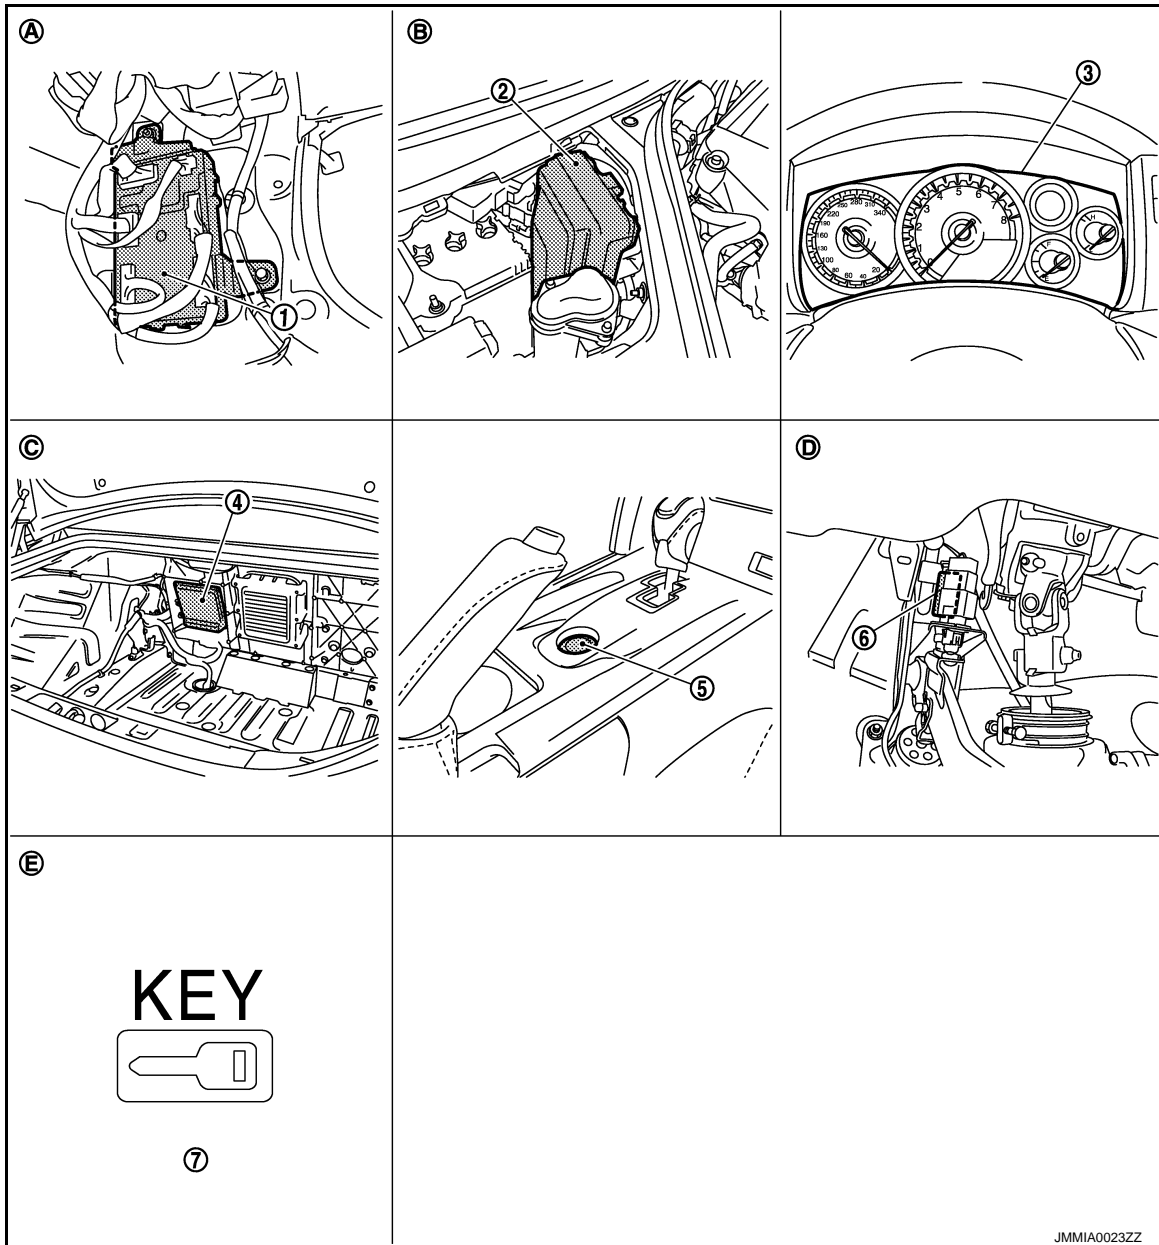

- |  |                                     |   |
|--|-------------------------------------|---|
| 1. BCM M118, M119, M121, M122, M123                  | 2. IPDM E/R E5, E6, F7              | 3. Combination meter M53                  |
| 4. TCM B45   | 5. Push button ignition switch M131 | 6. Stop lamp switch E110                  |
| 7. Combination meter (Key warning lamp) M53          |                                     |   |
| A. Behind the instrument lower panel (RH)            | B. Engine room dash panel (RH)      | C. View with trunk front finisher removed |
| D. View with instrument lower panel (driver) removed | E. Located on the combination meter |   |

JMMIA0023ZZ

# POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

## Component Description

INFOID:000000011488508

Component	Reference
IPDM E/R	<a href="#">PCS-5</a>
Ignition relay (built into IPDM E/R)	<a href="#">PCS-50</a>
Ignition relay (inserted into fuse block)	<a href="#">PCS-50</a>
Accessory relay	<a href="#">PCS-54</a>
Blower relay	<a href="#">PCS-56</a>
Stop lamp switch	<a href="#">SEC-52</a>
TCM	<a href="#">SEC-65</a>
Push-button ignition switch	<a href="#">PCS-61</a>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# DIAGNOSIS SYSTEM (BCM)

[POWER DISTRIBUTION SYSTEM]

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000011786815

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> <li>Read and save the vehicle specification.</li> <li>Write the vehicle specification when replacing BCM.</li> </ul>

### SYSTEM APPLICATION

BCM can perform the following functions for each system.

#### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*			
Intelligent Key system	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NVIS - NATS	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Trunk lid opener system	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×

\*: This item is displayed, but is not used.

### FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

# DIAGNOSIS SYSTEM (BCM)

## [POWER DISTRIBUTION SYSTEM]

< SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description	
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected	
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected	
Vehicle Condition	SLEEP>LOCK	Power position status of the moment a particular DTC is detected	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK")
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)
	LOCK>ACC		While turning power supply position from "LOCK" to "ACC"
	ACC>ON		While turning power supply position from "ACC" to "IGN"
	RUN>ACC		While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and shift lever is except P position.)
	CRANK>RUN		While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)
	RUN>URGENT		While turning power supply position from "RUN" to "ACC" (Emergency stop operation)
	ACC>OFF		While turning power supply position from "ACC" to "OFF"
	OFF>LOCK		While turning power supply position from "OFF" to "LOCK"
	OFF>ACC		While turning power supply position from "OFF" to "ACC"
	ON>CRANK		While turning power supply position from "IGN" to "CRANKING"
	OFF>SLEEP		While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode
	LOCK>SLEEP		While turning BCM status from normal mode (Power supply position is "LOCK".) to low power consumption mode
	LOCK		Power supply position is "LOCK" (Ignition switch OFF with steering is locked.)
	OFF		Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.)
	ACC		Power supply position is "ACC" (Ignition switch ACC)
ON	Power supply position is "IGN" (Ignition switch ON with engine stopped)		
ENGINE RUN	Power supply position is "RUN" (Ignition switch ON with engine running)		
CRANKING	Power supply position is "CRANKING" (At engine cranking)		
IGN Counter	0 - 39	<p>The number of times that ignition switch is turned ON after DTC is detected</p> <ul style="list-style-type: none"> <li>• The number is 0 when a malfunction is detected now.</li> <li>• The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.</li> <li>• The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.</li> </ul>	

## INTELLIGENT KEY

### INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)

INFOID:000000011807876

#### BCM CONSULT FUNCTION

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
WORK SUPPORT	Changes the setting for each system function.
SELF-DIAG RESULTS	Displays the diagnosis results judged by BCM.
DATA MONITOR	The BCM input/output signals are displayed.
ACTIVE TEST	The signals used to activate each device are forcibly supplied from BCM.

#### WORK SUPPORT

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Monitor item	Description
REMO CONT ID CONFIR	It can be checked whether Intelligent Key ID code is registered or not in this mode.
AUTO LOCK SET	Auto door lock time can be changed in this mode. <ul style="list-style-type: none"> <li>• MODE 1: 1 minute</li> <li>• MODE 2: 5 minutes</li> <li>• MODE 3: 30 seconds</li> <li>• MODE 4: 2 minutes</li> </ul>
LOCK/UNLOCK BY I-KEY	Door lock/unlock function by door request switch (driver side and passenger side) mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
ENGINE START BY I-KEY	Engine start function mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
TRUNK/GLASS HATCH OPEN	Buzzer reminder function mode by trunk lid opener request switch can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
PANIC ALARM SET	Panic alarm button pressing time on Intelligent Key remote control button can be selected from the following with this mode. <ul style="list-style-type: none"> <li>• MODE 1: 0.5 sec.</li> <li>• MODE 2: OFF: Non-operation</li> <li>• MODE 3: 1.5 sec.</li> </ul>
PW DOWN SET	This item is displayed, but cannot be used.
TRUNK OPEN DELAY	Trunk button pressing on Intelligent Key button can be selected as per the following in this mode. <ul style="list-style-type: none"> <li>• MODE 1: Press and hold</li> <li>• MODE 2: Press twice</li> <li>• MODE 3: Press and hold, or press twice</li> </ul>
LO-BATT OF KEY FOB WARN	Intelligent Key low battery warning mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
ANTI KEY LOCK IN FUNCTI	Key reminder function mode can be changed to operate (WITH) or not operate (WITHOUT) in this mode.
HAZARD ANSWER BACK	Hazard reminder function mode can be selected from the following in this mode. <ul style="list-style-type: none"> <li>• LOCK ONLY: Door lock operation only</li> <li>• UNLOCK ONLY: Door unlock operation only</li> <li>• LOCK/UNLOCK: Lock/unlock operation</li> <li>• OFF: Non-operational</li> </ul>
ANS BACK I-KEY LOCK	Buzzer reminder function (lock operation) mode by door request switch (driver side and passenger side) can be selected from the following in this mode. <ul style="list-style-type: none"> <li>• Horn chirp: Sound horn</li> <li>• Buzzer: Sound Intelligent Key warning buzzer</li> <li>• OFF: Non-operational</li> </ul>
ANS BACK I-KEY UNLOCK	Buzzer reminder function (unlock operation) mode by door request switch can be changed to operate (ON) or not operate (OFF) in this mode.
SHORT CRANKING OUTPUT	Starter motor can operate during the times below. <ul style="list-style-type: none"> <li>• 70 msec</li> <li>• 100 msec</li> <li>• 200 msec</li> </ul>
INSIDE ANT DIAGNOSIS	This function allows inside key antenna self-diagnosis.
HORN WITH KEYLESS LOCK	Horn reminder function mode by Intelligent Key button can be changed to operate (ON) or not operate (OFF) in this mode.

## SELF-DIAG RESULT

Refer to [BCS-84, "DTC Index"](#).

## DATA MONITOR

### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	
REQ SW -DR	Indicates [ON/OFF] condition of door request switch (driver side).	A
REQ SW -AS	Indicates [ON/OFF] condition of door request switch (passenger side).	
REQ SW -BD/TR	Indicates [ON/OFF] condition of trunk opener request switch.	B
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.	
IGN RLY2 -F/B	Indicates [ON/OFF] condition of ignition relay 2.	C
ACC RLY-FB	<b>NOTE:</b> This item is displayed, but cannot be monitored.	
CLUTCH SW	<b>NOTE:</b> This item is displayed, but cannot be monitored.	D
BRAKE SW 1	Indicates [ON/OFF]* condition of brake switch power supply.	
BRAKE SW 2	Indicates [ON/OFF] condition of brake switch.	E
DETE/CANCL SW	Indicates [ON/OFF] condition of P position.	
SFT PN/N SW	Indicates [ON/OFF] condition of P or N position.	
S/L -LOCK	Indicates [ON/OFF] condition of steering lock unit (LOCK).	F
S/L -UNLOCK	Indicates [ON/OFF] condition of steering lock unit (UNLOCK).	
S/L RELAY -F/B	Indicates [ON/OFF] condition of steering lock relay.	G
UNLK SEN -DR	Indicates [ON/OFF] condition of driver door UNLOCK status.	
PUSH SW -IPDM	Indicates [ON/OFF] condition of push-button ignition switch.	
IGN RLY1 -F/B	Indicates [ON/OFF] condition of ignition relay 1.	H
DETE SW -IPDM	Indicates [ON/OFF] condition of P position.	
SFT PN -IPDM	Indicates [ON/OFF] condition of P or N position.	I
SFT P -MET	Indicates [ON/OFF] condition of P position.	
SFT N -MET	Indicates [ON/OFF] condition of N position.	
ENGINE STATE	Indicates [STOP/STALL/CRANK/RUN] condition of engine states.	J
S/L LOCK-IPDM	Indicates [ON/OFF] condition of steering lock unit (LOCK).	
S/L UNLK-IPDM	Indicates [ON/OFF] condition of steering lock unit (UNLOCK).	
S/L RELAY-REQ	Indicates [ON/OFF] condition of steering lock relay.	K
VEH SPEED 1	Display the vehicle speed signal received from combination meter by numerical value [Km/h].	
VEH SPEED 2	Display the vehicle speed signal received from ABS or VDC or TCM by numerical value [Km/h].	L
DOOR STAT-DR	Indicates [LOCK/READY/UNLOCK] condition of driver side door status.	
DOOR STAT-AS	Indicates [LOCK/READY/UNLOCK] condition of passenger side door status.	
ID OK FLAG	Indicates [SET/RESET] condition of key ID.	PCS
PRMT ENG STRT	Indicates [SET/RESET] condition of engine start possibility.	
PRMT RKE STRT	<b>NOTE:</b> This item is displayed, but cannot be monitored.	N
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.	
TRNK/HAT MNTR	Indicates [ON/OFF] condition of trunk lid.	O
RKE-LOCK	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.	
RKE-UNLOCK	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.	
RKE-TR/BD	Indicates [ON/OFF] condition of TRUNK OPEN signal from Intelligent Key.	P
RKE-PANIC	Indicates [ON/OFF] condition of PANIC button of Intelligent Key.	
RKE-P/W OPEN	<b>NOTE:</b> This item is displayed, but cannot be monitored.	
RKE-MODE CHG	Indicates [ON/OFF] condition of MODE CHANGE signal from Intelligent Key.	

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition
RKE OPE COUN1	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
RKE OPE COUN2	<b>NOTE:</b> This item is displayed, but cannot be monitored.
REVERSE SWITCH	<b>NOTE:</b> This item is displayed, but cannot be monitored.

\*: OFF is displayed when brake pedal is depressed while brake switch power supply is OFF.

## ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check interior room lamp operation. The interior room lamp will be activated when "ON" on CONSULT screen is touched.
PW REMOTO DOWN SET	<b>NOTE:</b> This item is displayed, but cannot be used.
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation. The Intelligent Key warning buzzer will be activated when "ON" on CONSULT screen is touched.
INSIDE BUZZER	This test is able to check warning chime in combination meter operation. <ul style="list-style-type: none"> <li>• Take away warning chime sounds when "TAKE OUT" on CONSULT screen is touched.</li> <li>• Key warning chime sounds when "KEY" on CONSULT screen is touched.</li> <li>• P position warning chime sounds when "KNOB" on CONSULT screen is touched.</li> </ul>
INDICATOR	This test is able to check warning lamp operation. <ul style="list-style-type: none"> <li>• "KEY" Warning lamp illuminates when "KEY ON" on CONSULT screen is touched.</li> <li>• "KEY" Warning lamp blinks when "KEY IND" on CONSULT screen is touched.</li> </ul>
INT LAMP	This test is able to check interior room lamp operation. The interior room lamp will be activated when "ON" on CONSULT screen is touched.
LCD	This test is able to check meter display information <ul style="list-style-type: none"> <li>• Engine start information displays when "BP N" on CONSULT screen is touched.</li> <li>• Engine start information displays when "BP I" on CONSULT screen is touched.</li> <li>• Key ID warning displays when "ID NG" on CONSULT screen is touched.</li> <li>• Steering lock information displays when "ROTAT" on CONSULT screen is touched.</li> <li>• P position warning displays when "SFT P" on CONSULT screen is touched.</li> <li>• Intelligent Key insert information displays when "INSRT" on CONSULT screen is touched.</li> <li>• Intelligent Key low battery warning displays when "BATT" on CONSULT screen is touched.</li> <li>• Take away warning displays when "OUTKEY" on CONSULT screen is touched.</li> <li>• OFF position warning displays when "LK WN" on CONSULT screen is touched.</li> </ul>
TRUNK/GLASS HATCH	This test is able to check trunk lid opener actuator open operation. This actuator opens when "OPEN" on CONSULT screen is touched.
FLASHER	This test is able to check security hazard lamp operation. The hazard lamps will be activated when "RH" or "LH" on CONSULT screen is touched.
HORN	This test is able to check horn operation. The horn will be activated when "ON" on CONSULT screen is touched.
P RANGE	This test is able to check control device power supply Control device power is supplied when "ON" on CONSULT screen is touched.
ENGINE SW ILLUMI	This test is able to check push-ignition switch illumination operation. Push-ignition switch illumination illuminates when "ON" on CONSULT screen is touched.
LOCK INDICATOR	This test is able to check LOCK indicator in push-ignition switch operation. LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT screen is touched.
ACC INDICATOR	This test is able to check ACC indicator in push-ignition switch operation. ACC indicator in push-ignition switch illuminates when "ON" on CONSULT screen is touched.
IGNITION ON IND	This test is able to check ON indicator in push-ignition switch operation. ON indicator in push-ignition switch illuminates when "ON" on CONSULT screen is touched.



# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Test item	Description
KEY SLOT ILLUMI	This test is able to check key slot illumination operation. Key slot illumination illuminates when "ON" on CONSULT screen is touched.
TRUNK/BACK DOOR	This test is able to check trunk lid opener actuator open operation. This actuator opens when "OPEN" on CONSULT screen is touched.

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

## DTC/CIRCUIT DIAGNOSIS

### B2553 IGNITION RELAY

#### Description

INFOID:0000000011488511

BCM turns ON the following relays to ignition power supply to each ECU when the ignition switch is turned ON.

- Ignition relay (inserted into fuse box)
- Ignition relay (built into IPDM E/R)
- Blower relay

BCM checks any ignition relay ON request for consistency with the actual ignition relay operation status.

#### DTC Logic

INFOID:0000000011488512

#### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2553	IGNITION RELAY	BCM detects a difference of signal for 2 seconds or more between the following information. <ul style="list-style-type: none"> <li>• Ignition relay (fuse block) ON/OFF operation</li> <li>• Ignition relay (fuse block) feedback.</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (ignition relay feedback circuit is open or short)</li> <li>• Fuse</li> <li>• Ignition relay</li> <li>• IPDM E/R</li> </ul>

#### DTC CONFIRMATION PROCEDURE

##### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions (start the engine), and wait for at least 2 seconds.
  - Shift lever is in the P or N position.
  - Do not depress brake pedal.
2. Check "Self diagnostic result" with CONSULT.

##### Is DTC detected?

YES >> Go to [PCS-50, "Diagnosis Procedure"](#).

NO >> INSPECTION END

#### Diagnosis Procedure

INFOID:0000000011488513

##### 1. CHECK DTC WITH IPDM E/R

Check "Self diagnostic result" with CONSULT. Refer to [PCS-32, "DTC Index"](#).

##### Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning parts.

##### 2. CHECK FUSE

Check that the following fuse is not fusing.

Signal name	Connection position	Fuse No.	Capacity
Ignition power supply	FUSE BLOCK (J/B)	3	10A

##### Is the fuse fusing?

YES >> Repair the applicable circuit. And then replace the fuse.

NO >> GO TO 3.

##### 3. CHECK IGNITION RELAY FEEDBACK INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

# B2553 IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

(+)		(-)	Condition		Voltage (V) (Approx.)
BCM					
Connector	Terminal				
M123	123	Ground	Ignition switch	OFF	0
				ON	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 4.

## 4. CHECK IGNITION RELAY FEEDBACK CIRCUIT

1. Disconnect fuse block (J/B) connector.
2. Check continuity between BCM harness connector and fuse block (J/B) harness connector.

BCM		Fuse block (J/B)		Continuity
Connector	Terminal	Connector	Terminal	
M123	123	M1	2A	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M123	123		Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

## 5. CHECK INTERMITTENT INCIDENT

Refer to [GI-39. "Intermittent Incident"](#).

>> INSPECTION END

PCS

# B260A IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## B260A IGNITION RELAY

### Description

INFOID:000000011488514

When the ignition switch is turned ON, the BCM activates the following relays to provide power supply to each ECU.

- Ignition relay (inserted into fuse block)
- Ignition relay (built into IPDM E/R)
- Blower relay

BCM checks any ignition relay ON request for consistency with the actual ignition relay operation status.

### DTC Logic

INFOID:000000011488515

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B260A is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-36, "DTC Logic"](#).
- If DTC B260A is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-37, "DTC Logic"](#).
- If DTC B260A is displayed with DTC B261A, first perform the trouble diagnosis for DTC B261A. Refer to [PCS-61, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B260A	IGNITION RELAY	BCM detects a difference of signal for 2 seconds or more between the following information. <ul style="list-style-type: none"> <li>• Ignition relay (IPDM E/R) operation request</li> <li>• Ignition relay feedback from IPDM E/R (CAN).</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (Ignition relay operation circuit is open or shorted.)</li> <li>• IPDM E/R</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 2 seconds.
  - Shift lever is in the P or N position.
  - Do not depress brake pedal.
2. Check "Self diagnostic result" with CONSULT.

#### Is DTC detected?

- YES >> Go to [PCS-52, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011488516

#### 1. CHECK DTC WITH IPDM E/R

Check "Self diagnostic result" with CONSULT. Refer to [PCS-32, "DTC Index"](#).

#### Is DTC detected?

- YES >> Repair or replace the malfunctioning parts.  
NO >> GO TO 2.

#### 2. CHECK IGNITION RELAY INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal	Ground	Battery voltage
M121	47		

#### Is the inspection result normal?

# B260A IGNITION RELAY

[POWER DISTRIBUTION SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 4.
- NO >> GO TO 3.

## 3. CHECK IGNITION RELAY (IPDM E/R) CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and BCM harness connector.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E5	27	M121	47	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	27		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair or replace harness.

## 4. CHECK INTERMITTENT INCIDENT

Refer to [GI-39, "Intermittent Incident"](#).

>> INSPECTION END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# B2614 ACC RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## B2614 ACC RELAY

### Description

INFOID:000000011488517

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.  
BCM checks the power supply position internally.

### DTC Logic

INFOID:000000011488518

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2614	ACC relay	An immediate operation of ACC relay is requested by BCM, but there is no response for more than 1 second.	<ul style="list-style-type: none"> <li>• Harness or connectors (ACC relay circuit is open or shorted)</li> <li>• ACC relay</li> <li>• BCM</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn the power supply position to ACC under the following conditions, and wait for at least 1 second.
  - Shift lever is in the P or N position.
  - Do not depress brake pedal.
2. Check "Self diagnostic result" with CONSULT.

#### Is DTC detected?

- YES >> Go to [PCS-54, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011488519

#### 1.CHECK ACCESSORY RELAY POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect accessory relay.
3. Check voltage between accessory relay harness connector and ground.

(+)	(-)	Condition	Voltage (V) (Approx.)
Accessory relay Terminal			
1	Ground	Ignition switch	0
			Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2.CHECK ACCESSORY RELAY POWER SUPPLY CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between accessory relay harness connector and BCM harness connector.

Accessory relay Terminal	BCM		Continuity
	Connector	Terminal	
1	M122	95	Existed

3. Check continuity between accessory relay harness connector and ground.

# B2614 ACC RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Accessory relay	Ground	Continuity
Terminal		
1		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-89, "Removal and Installation"](#).
- NO >> Repair or replace harness.

## 3.CHECK ACCESSORY RELAY GROUND CIRCUIT

Check continuity between accessory relay harness connector and ground.

Accessory relay	Ground	Continuity
Terminal		
2		Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair accessory relay ground circuit.

## 4.CHECK ACCESSORY RELAY

Refer to [PCS-55, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Replace accessory relay.

## 5.CHECK INTERMITTENT INCIDENT

Refer to [GI-39, "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:000000011488520


## 1.CHECK ACCESSORY RELAY

1. Turn ignition switch OFF.
2. Remove accessory relay.
3. Check the continuity between accessory relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
	No current supply	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace accessory relay.

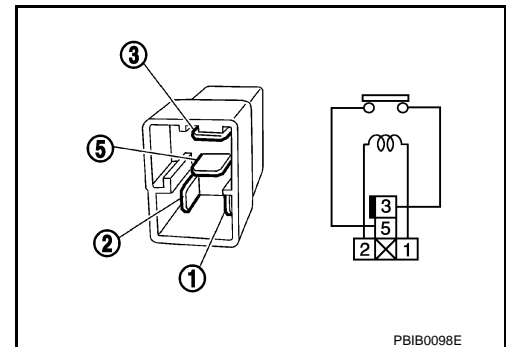

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# B2615 BLOWER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## B2615 BLOWER RELAY CIRCUIT

### Description

INFOID:000000011488521

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.  
BCM checks the power supply position internally.

### DTC Logic

INFOID:000000011488522

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2615	Blower relay circuit	BCM detects a difference of signal for 1 second or more between the following information. • Blower relay ON/OFF request • Blower relay feedback	<ul style="list-style-type: none"> <li>• Harness or connectors (Blower relay circuit is open or shorted)</li> <li>• Blower relay</li> <li>• BCM</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.
  - Shift lever is in the P or N position
  - Do not depress brake pedal
2. Check "Self diagnostic result" with CONSULT.

#### Is DTC detected?

- YES >> Go to [PCS-56, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011488523

#### 1.CHECK BLOWER RELAY POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect blower relay.
3. Check voltage between blower relay harness connector and ground.

(+)	(-)	Condition	Voltage (V) (Approx.)
Blower relay Terminal			
1	Ground	Ignition switch	0
			Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2.CHECK BLOWER RELAY POWER SUPPLY CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between blower relay harness connector and BCM harness connector.

Blower relay Terminal	BCM		Continuity
	Connector	Terminal	
1	M122	102	Existed

3. Check continuity between blower relay harness connector and ground.



# B2615 BLOWER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Blower relay	Ground	Continuity
Terminal		
1		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-89, "Removal and Installation"](#).
- NO >> Repair or replace harness.

## 3.CHECK BLOWER RELAY GROUND CIRCUIT

Check continuity between blower relay harness connector and ground.

Blower relay	Ground	Continuity
Terminal		
2		Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair blower relay ground circuit.

## 4.CHECK BLOWER RELAY

Refer to [PCS-57, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Replace blower relay.

## 5.CHECK INTERMITTENT INCIDENT

Refer to [GI-39, "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:000000011488524


### 1.CHECK BLOWER RELAY

1. Turn ignition switch OFF.
2. Remove blower relay.
3. Check the continuity between blower relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
	No current supply	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace blower relay.

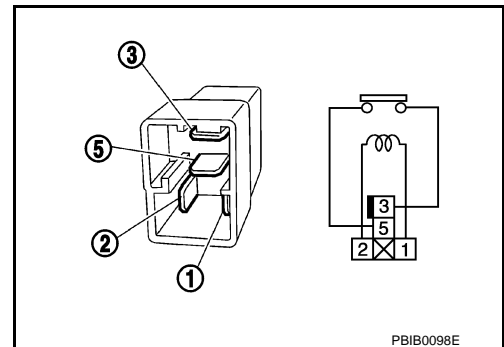

PBIB0098E

# B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## B2616 IGNITION RELAY CIRCUIT

### Description

INFOID:000000011488525

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.  
BCM checks the power supply position internally.

### DTC Logic

INFOID:000000011488526

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2616	Ignition relay circuit	An immediate operation of ignition relay (fuse block) is requested by BCM, but there is no response for more than 1 second	<ul style="list-style-type: none"> <li>Harness or connectors (Ignition relay circuit is open or shorted)</li> <li>Ignition relay (Fuse block)</li> <li>BCM</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON under the following conditions, and wait for at least 1 second.
  - Shift lever is in the P or N position.
  - Do not depress brake pedal.
- Check "Self diagnostic result" with CONSULT.

#### Is DTC detected?

- YES >> Go to [PCS-58, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011488527

#### 1. CHECK IGNITION RELAY POWER SUPPLY

- Turn ignition switch OFF.
- Disconnect ignition relay.
- Check voltage between ignition relay harness connector and ground.

(+)	(-)	Condition	Voltage (V) (Approx.)
Ignition relay Terminal			
1	Ground	Ignition switch	0
			Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2. CHECK IGNITION RELAY POWER SUPPLY CIRCUIT

- Disconnect BCM connector.
- Check continuity between ignition relay harness connector and BCM harness connector.

Ignition relay Terminal	BCM		Continuity
	Connector	Terminal	
1	M122	82	Existed

- Check continuity between ignition relay harness connector and ground.

# B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Ignition relay	Ground	Continuity
Terminal		
1		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-89, "Removal and Installation"](#).
- NO >> Repair or replace harness.

## 3.CHECK IGNITION RELAY GROUND CIRCUIT

Check continuity between ignition relay harness connector and ground.

Ignition relay	Ground	Continuity
Terminal		
2		Existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair ignition relay ground circuit.

## 4.CHECK IGNITION RELAY

Refer to [PCS-59, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Replace ignition relay.

## 5.CHECK INTERMITTENT INCIDENT

Refer to [GI-39, "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:000000011488528


## 1.CHECK IGNITION RELAY

1. Turn ignition switch OFF.
2. Remove ignition relay.
3. Check the continuity between ignition relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
	No current supply	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace Ignition relay.

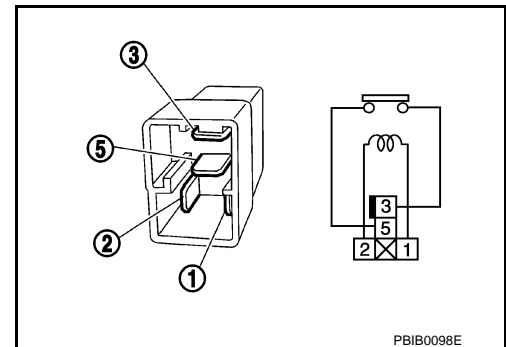

PBIB0098E

PCS

B2618 BCM

Description

INFOID:000000011488529

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.  
 BCM checks the power supply position internally.

DTC Logic

INFOID:000000011488530

DTC DETECTION LOGIC

**NOTE:**

- If DTC B2618 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-36, "DTC Logic"](#).
- If DTC B2618 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-37, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2618	BCM	An immediate operation of ignition relay (IPDM E/R) is requested by BCM, but there is no response for more than 1 second	BCM

DTC CONFIRMATION PROCEDURE

**1. PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.
  - Shift lever is in the P or N position.
  - Do not depress brake pedal.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-60, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000011488531

**1. INSPECTION START**

1. Turn ignition switch ON.
2. Select "Self diagnostic result" mode with CONSULT.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**  
 See [PCS-60, "DTC Logic"](#).

Is DTC detected?

- YES >> Replace BCM. Refer to [BCS-89, "Removal and Installation"](#)
- NO >> INSPECTION END

# B261A PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## B261A PUSH-BUTTON IGNITION SWITCH

### Description

INFOID:000000011488532

BCM transmits the change in the power supply position with the push-button ignition switch to IPDM E/R via the CAN communication line. IPDM E/R transmits the power supply position status via CAN communication line to BCM.

### DTC Logic

INFOID:000000011488533

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B261A is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-36, "DTC Logic"](#).
- If DTC B261A is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-37, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B261A	PUSH-BTN IGN SW	BCM detects a difference of signal for 1 second or more between the following information. <ul style="list-style-type: none"> <li>• Power supply position by push-button ignition switch</li> <li>• Power supply position from IPDM E/R (CAN)</li> </ul>	Harness or connectors (Push-button ignition switch circuit is open or shorted.)

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Press the push-button ignition switch under the following conditions, and wait for at least 1 second.
  - Shift lever is in the P or N position.
  - Do not depress brake pedal.
2. Check "Self diagnostic result" with CONSULT.

#### Is DTC detected?

- YES >> Go to [PCS-61, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000011488534

#### 1. CHECK BCM OUTPUT

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector and IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal		
E5	28	Ground	Battery voltage

#### Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).  
 NO >> GO TO 2.

#### 2. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and IPDM E/R harness connector.

# B261A PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

BCM		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M122	89	E5	28	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M122	89		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-89, "Removal and Installation"](#).
- NO >> Repair or replace harness.

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## POWER SUPPLY AND GROUND CIRCUIT

### BCM

#### BCM : Diagnosis Procedure

INFOID:000000011488535

#### 1.CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse and fusible link No.
Battery power supply	I
	10

#### Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

#### 2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground Battery voltage
Connector	Terminal	
M118	1	
M119	11	

#### Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

#### 3.CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	13		Existed

#### Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## PUSH-BUTTON IGNITION SWITCH

### Description

INFOID:000000011488536

BCM transmits the change in the power supply position with the push-button ignition switch to IPDM E/R via the CAN communication line. IPDM E/R transmits the power supply position status via CAN communication line to BCM.

### Component Function Check

INFOID:000000011488537

#### 1.CHECK FUNCTION

1. Select "PUSH SW" in "Data Monitor" mode with CONSULT.
2. Check the push-button ignition switch signal under the following condition.

Test item	Condition	Status
PUSH SW	Push-button ignition switch is pressed	ON
	Push-button ignition switch is not pressed	OFF

Is the indication normal?

- YES >> INSPECTION END  
NO >> Go to [PCS-64, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000011488538

#### 1.CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Press push-button ignition switch and check if it turns ON.

Does ignition switch turn ON?

- YES >> GO TO 2.  
NO >> GO TO 4.

#### 2.CHECK IGNITION SWITCH OUTPUT SIGNAL (IPDM E/R)

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector and BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal	Ground	Battery voltage
M122	89		

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> GO TO 3.

#### 3.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (IPDM E/R)

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and BCM harness connector.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E5	28	M122	89	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	28		Not existed



# PUSH-BUTTON IGNITION SWITCH

[POWER DISTRIBUTION SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-35. "Removal and Installation"](#).

NO >> Repair or replace harness.

## 4. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (BCM)

1. Check continuity between BCM harness connector and push-button ignition switch harness connector.

BCM		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
M122	89	M131	4	Existed

2. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M122	89		Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

## 5. CHECK PUSH-BUTTON IGNITION GROUND CIRCUIT

Check continuity between push-button ignition switch harness connector and ground.

Push-button ignition switch		Ground	Continuity
Connector	Terminal		
M131	1		Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

## 6. CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch. Refer to [PCS-65. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace push button ignition switch. Refer to [PCS-120. "Removal and Installation"](#).

## 7. CHECK INTERMITTENT INCIDENT

Refer to [GI-39. "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:0000000011488539

### 1. CHECK PUSH-BUTTON IGNITION SWITCH

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check continuity between push-button ignition switch terminals.

Push-button ignition switch		Condition		Continuity
Terminal		Push-button ignition switch	Pressed	
1	4			Pressed
			Not pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

PCS

N  
O  
P

## PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

---

NO >> Replace push-button ignition switch. Refer to [PCS-120. "Removal and Installation"](#).

# PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

### Description

INFOID:000000011488540

The switch that changes the power supply position.

BCM maintains the power supply position status.

BCM changes the power supply position with the operation of the push-button ignition switch.

### Component Function Check

INFOID:000000011488541

#### 1.CHECK FUNCTION

Check push-button ignition switch ("LOCK INDICATOR", "ACC INDICATOR" and "IGNITION ON IND") in Active Test Mode with CONSULT.

Test item		Description	
LOCK INDICATOR ACC INDICATOR IGNITION ON IND	ON	Position indicator	Illuminates
	OFF		Does not illuminate

Is the inspection result normal?

YES >> INSPECTION END

NO >> Refer to [PCS-67, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000011488542

#### 1.CHECK PUSH-BUTTON IGNITION SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check voltage between push-button ignition switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Push-button ignition switch			
Connector	Terminal	Ground	Battery voltage
M131	8		

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check 10 A fuse [No.11, located in fuse block (J/B)] and harness for open or short between push-button ignition switch and fuse.

#### 2.CHECK BCM INPUT

1. Connect push-button ignition switch connector.
2. Disconnect BCM connector.
3. Check voltage between BCM connector and ground.

(+)		(-)	Voltage (V) (Approx.)		
BCM					
Connector	Terminal	Ground	Battery voltage		
M119	15				
M122	93				
M123	134				

Is the inspection normal?

YES >> Replace BCM. Refer to [BCS-89, "Removal and Installation"](#).

NO >> GO TO 3.

#### 3.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT

1. Disconnect push-button ignition switch connector.

# PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

Indicator	BCM		Push-button ignition switch		Continuity
	Connector	Terminal	Connector	Terminal	
LOCK	M123	134	M131	5	Existed
ACC	M119	15		6	
ON	M122	93		7	

3. Check continuity between BCM harness connector and ground.

Indicator	BCM		Ground	Continuity
	Connector	Terminal		
LOCK	M123	134	Ground	Not existed
ACC	M119	15		
ON	M122	93		

Is the inspection result normal?


- YES >> Replace push-button ignition switch. Refer to [PCS-120, "Removal and Installation"](#).  
NO >> Repair or replace harness.



# POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

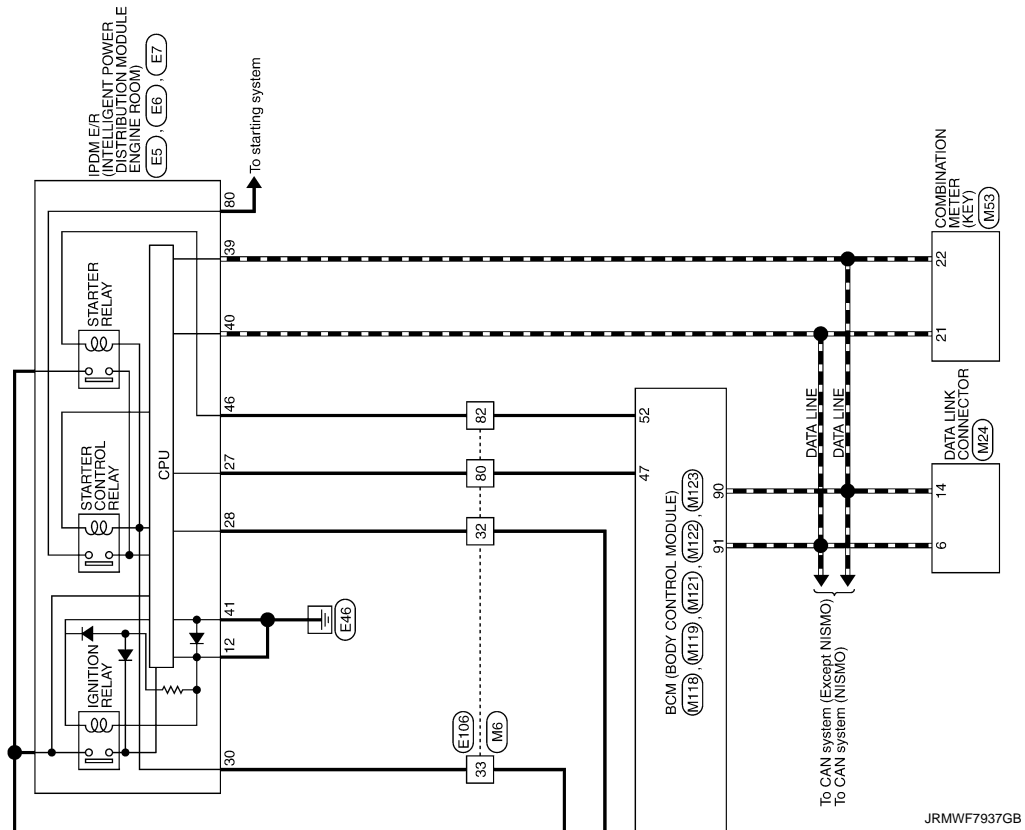

JRMWF7937GB

# POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## PDS (POWER DISTRIBUTION SYSTEM)

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-C516-TM4




Terminal No.	Color Of Wire	Signal Name [Specification]
2	L	-
3	P	-
4	V	-
5	W	-
6	Y	-
7	W	-
8	Y	-
9	Y	-
10	R	-
11	Y	- [Without active noise control unit]
12	GR	- [With active noise control unit]
13	BG	-
14	Y	-
15	BR	-
16	R	-
17	W	-
18	BR	-
20	GR	-
21	SB	-
22	W	-
23	G	-
24	BG	-
25	L	-
26	P	-
27	GR	-
28	BG	-
31	GR	-
32	L	-
33	V	-
34	BG	-
39	G	-
40	LG	-
41	V	-
42	SB	-
43	P	-
47	R	-
48	B	-

49	W	-
50	SHIELD	-
51	SB	-
52	B	-
53	R	-
54	B	-
56	R	-
57	G	-
58	G	-
59	R	-
60	BR	-
61	Y	-
62	SHIELD	-
63	LG	-
64	R	-
65	G	-
66	BR	-
67	BG	-
69	P	-
70	L	-
71	SHIELD	-
72	SHIELD	- [Without active noise control unit]
72	V	- [With active noise control unit]
73	SB	-
76	R	-
77	SB	-
78	G	-
79	Y	-
80	R	-
81	G	-
82	BR	- [Without active noise control unit]
82	G	- [With active noise control unit]
83	R	- [With active noise control unit]
83	Y	- [Without active noise control unit]
84	SHIELD	-
85	V	-
86	SB	- [Without active noise control unit]
86	W	- [With active noise control unit]
87	L	-
88	P	-
89	SHIELD	-
90	V	-
92	BR	-
93	SB	-
94	GR	-
95	BG	-
96	Y	-
97	Y	-
98	LG	-

99	R	-
100	G	-


Connector No.	B45
Connector Name	TCM
Connector Type	RH40FB-RZ8-L4-H-Z



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	POWER SUPPLY (MEMORY BACK-UP)-2
3	B	GROUND
4	B	GROUND
5	W	POWER SUPPLY (MEMORY BACK-UP)-3
7	B	GROUND
8	B	GROUND
9	P	POWER SUPPLY (MEMORY BACK-UP)-1
10	LG	BACK-UP LAMP SIGNAL
11	L	CANH
14	V	POWER OFF
15	P	CAN-L
16	W	STOP LAMP SWITCH SIGNAL
17	Y	IGNITION SWITCH SIGNAL
19	GR	STARTER RELAY SIGNAL
23	BR	AUTOMANUAL RANGE CHANGE SWITCH 1 SIGNAL
25	L	RANGE SENSOR POWER SOURCE 1
26	LG	RANGE SENSOR NO. 2 SIGNAL
27	G	RANGE SENSOR NO. 3 SIGNAL
28	V	AUTOMANUAL RANGE CHANGE SWITCH 2 SIGNAL
31	SB	ENGINE SPEED SIGNAL
33	V	RANGE SENSOR NO. 1 SIGNAL
34	BG	SAVE MODE SWITCH SIGNAL
35	G	RANGE SENSOR NO. 3 SIGNAL
37	GR	R MODE SWITCH SIGNAL
38	R	RANGE SENSOR NO. 2 SIGNAL
39	W	PADOLE SHIFTER (SHIFT) DOWN SWITCH SIGNAL
42	L	PADOLE SHIFTER (SHIFT) UP SWITCH SIGNAL
43	B	RANGE SENSOR NO. 4 SIGNAL
44	GR	RANGE SENSOR NO. 5 SIGNAL
45	BG	R MODE LAMP SIGNAL
46	W	SHIFT LOCK SOLENOID CONTROL SIGNAL

47	G	SAVE MODE LAMP SIGNAL
----	---	-----------------------

Connector No.	E5
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH20FW-C512-M4-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
6	Y	-
7	R	-
10	W	-
11	SB	-
12	BW	-
13	R	-
16	LG	-
25	BG	-
27	Y	-
28	G	-
30	GR	-
32	L	-
33	P	-
36	LG	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## PDS (POWER DISTRIBUTION SYSTEM)

Connector No.	E6
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH89FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	BY	-
42	G	-
43	SB	-
44	W	-
46	BG	-


Connector No.	E7
Connector Name	POWER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH89FW-CS12-M4



Terminal No.	Color Of Wire	Signal Name [Specification]
48	L	-
49	P	-
51	LG	-
53	SB	-
54	W	-
55	BG	-
56	R	-
57	G	-
58	Y	-
69	BG	-
70	G	-
71	SB	-
74	LG	-


Terminal No.	76	P	-
Terminal No.	77	BY	-
Terminal No.	80	W	-

Connector No.	E103
Connector Name	FUSE BLOCK (JIB)
Connector Type	NS16FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10F	GR	-
11F	Y	-
14F	LG	-
15F	P	-
1F	W	-
2F	W	-
4F	G	-
6F	BG	-
8F	L	-
9F	R	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH89FW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
3	BG	-
4	BG	-
5	R	-
6	P	-

7	BG	-
8	P	-
9	W	-
10	Y	-
11	SB	-
12	BG	-
13	P	-
14	L	-
15	SB	-
16	BG	-
17	SHIELD	-
18	L	-
19	P	-
20	B	-
21	Y	-
22	V	-
23	Y	-
24	V	-
25	RR	-
26	L	-
27	SHIELD	-
28	G	-
29	R	-
30	W	-
31	V	-
32	G	-
33	GR	-
34	P	-
35	LG	-
36	G	-
37	Y	-
38	SB	-
39	GR	-
40	G	-
41	V	-
42	V	-
43	L	-
44	BR	-
45	G	-
46	SB	-
48	BG	-
49	L	-
50	R	-
51	SHIELD	-
60	P	-
61	L	-
71	LG	-
72	SB	-
74	P	-
75	BR	-

76	LG	-
77	V	-
78	BR	-
79	W	-
80	Y	-
81	GR	-
82	BG	-
84	P	-
85	P	-
86	GR	-
87	R	-
88	L	-
89	BG	-
90	G	-
91	GR	-
92	R	-
93	R	-
94	LG	-
95	G	-
96	GR	-
97	L	-
98	LG	-
99	BG	-
100	L	-

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	W	-

JRMWG8017GB




# POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]


## PDS (POWER DISTRIBUTION SYSTEM)

Connector No.	M1
Fuse Block (J/B)	NS06FW-M2
Connector Type	NS06FW-M2




Terminal No.	Color Of Wire	Signal Name [Specification]
1A	V	-
2A	G	-
3A	LG	-
4A	SB	-
5A	Y	-
7A	R	-
8A	L	-

Connector No.	M2
Fuse Block (J/B)	NS10FW-CS
Connector Type	NS10FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10B	Y	-
1B	R	-
3B	P	-
4B	G	-
5B	EG	-
6B	Y	-
7B	R	-
8B	R	-
9B	SB	-

Connector No.	M3
Fuse Block (J/B)	NS12FW-CS
Connector Type	NS12FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10C	L	-
11C	R	-
12C	W	-
7C	B	-
9C	BR	-

Connector No.	M6
Fuse Block (J/B)	TH80MW-CS16-TM4
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
3	R	-
4	G	-
5	Y	-
6	P	-
7	W	-
8	V	-
9	L	-
10	Y	-
11	G	-
12	EG	-
13	R	-
14	L	-
15	BR	-

16	R	-
17	SHIELD	-
18	L	-
19	P	-
20	B	-
21	W	-
22	GR	-
23	L	-
24	V	-
25	BR	-
26	G	-
27	SHIELD	-
28	G	-
29	R	-
30	W	-
31	V	-
32	G	-
33	GR	-
34	LG	-
35	P	-
36	L	-
37	W	-
38	Y	-
39	GR	-
40	BG	-
41	W	-
42	R	-
43	Y	-
44	BR	-
45	G	-
46	LG	-
48	W	-
49	L	-
50	R	-
51	SHIELD	-
60	SB	-
61	V	-
71	W	-
72	LG	-
74	R	-
75	BR	-
76	LG	-
77	R	-
78	BR	-
79	W	-
80	Y	-
81	BG	-
82	SB	-
84	L	-
85	P	-

86	GR	-
87	R	-
88	L	-
89	G	-
90	P	-
91	W	-
92	R	-
93	LG	-
94	W	-
95	SB	-
96	L	-
97	L	-
98	Y	-
99	BG	-
100	L	-

Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
2	L	-
3	P	-
6	L	-
7	W	-
8	W	-
9	G	-
10	R	-
11	W	-
12	SB	-
13	G	-
14	W	-
15	BR	-
16	R	-
17	BG	-
18	SB	-
20	GR	-
21	L	-
22	R	-
23	G	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >


[POWER DISTRIBUTION SYSTEM]

## PDS (POWER DISTRIBUTION SYSTEM)

24	BR	-	SHIELD	-	-
25	L	-	V	-	-
26	LG	-	LG	-	[Without active noise control unit] - [With active noise control unit]
27	W	-	W	-	-
28	R	-	L	-	-
31	GR	-	P	-	-
32	L	-	SHIELD	-	-
33	V	-	V	-	-
34	BG	-	LG	-	-
39	W	-	W	-	-
40	BG	-	G	-	-
41	R	-	R	-	-
42	V	-	Y	-	-
43	W	-	R	-	-
47	G	-	G	-	-
48	R	-	L	-	-
49	W	-	W	-	-
50	SHIELD	-	W	-	-
51	SB	-	-	-	-
52	B	-	-	-	-
53	R	-	-	-	-
54	B	-	-	-	-
56	R	-	-	-	-
57	G	-	-	-	-
58	G	-	-	-	-
59	R	-	-	-	-
60	BR	-	-	-	-
61	Y	-	-	-	-
62	SHIELD	-	-	-	-
63	GR	-	-	-	-
64	R	-	-	-	-
65	G	-	-	-	-
66	BR	-	-	-	-
67	BG	-	-	-	-
69	P	-	-	-	-
70	L	-	-	-	-
71	SHIELD	-	-	-	-
72	SHIELD	-	-	-	[Without active noise control unit] - [With active noise control unit]
73	LG	-	-	-	-
76	R	-	-	-	-
77	SB	-	-	-	-
78	G	-	-	-	-
79	Y	-	-	-	-
80	R	-	-	-	-
81	G	-	-	-	-
82	BR	-	-	-	[Without active noise control unit]
82	G	-	-	-	[With active noise control unit]
83	R	-	-	-	[With active noise control unit]
83	Y	-	-	-	[Without active noise control unit]

84	SHIELD	-	-	-	-
85	V	-	-	-	-
86	LG	-	-	-	[Without active noise control unit] - [With active noise control unit]
87	L	-	-	-	-
88	P	-	-	-	-
89	SHIELD	-	-	-	-
90	V	-	-	-	-
92	LG	-	-	-	-
93	Y	-	-	-	-
94	G	-	-	-	-
95	R	-	-	-	-
96	Y	-	-	-	-
97	R	-	-	-	-
98	G	-	-	-	-
99	L	-	-	-	-
100	W	-	-	-	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color	Wire	Signal Name (Specification)
3	R	-	-
4	B	-	-
5	B	-	-
6	L	-	-
7	V	-	-
8	G	-	-
11	G	-	-
14	P	-	-
16	Y	-	-

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	SAB40FW




Terminal No.	Color	Wire	Signal Name (Specification)
1	V	-	BATTERY POWER SUPPLY
2	W	-	IGNITION POWER SUPPLY
3	B	-	GROUND
4	B	-	ILLUMINATION GROUND
5	B	-	GROUND
6	W	-	METER CONTROL SWITCH GROUND
7	Y	-	AG AUTO STOP CONVERTER CONTROL SIGNAL
8	SB	-	AMBIENT SENSOR GROUND
9	P	-	AMBIENT SENSOR SIGNAL
12	L	-	VEHICLE SPEED SIGNAL (2-PULSE)
13	V	-	VEHICLE SPEED SIGNAL (8-PULSE)
14	B	-	OIL PRESSURE SENSOR GROUND
15	R	-	AIR BAG SIGNAL
16	R	-	LED HEAD LAMP (RH) WARNING SIGNAL
18	L	-	FUEL LEVEL SENSOR GROUND
19	R	-	OIL LEVEL SENSOR GROUND
20	W	-	OIL LEVEL SENSOR SIGNAL
21	L	-	CAN-H
22	P	-	CAN-L
23	LG	-	ILLUMINATION CONTROL SWITCH SIGNAL (L)
24	BR	-	ILLUMINATION CONTROL SWITCH SIGNAL (R)
25	G	-	TRIP AB RESET SWITCH SIGNAL
26	BG	-	ENTER SWITCH SIGNAL
27	SB	-	SELECT SWITCH SIGNAL
28	BR	-	A/T FURNATOR
29	G	-	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE)
30	LG	-	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
31	V	-	PARKING BRAKE SWITCH SIGNAL
32	V	-	BRAKE FLUID LEVEL SWITCH SIGNAL
33	L	-	WASHER LEVEL SWITCH SIGNAL
34	GR	-	OIL PRESSURE SENSOR POWER
35	W	-	OIL PRESSURE SENSOR SIGNAL
38	BG	-	FUEL LEVEL SENSOR SIGNAL
39	Y	-	LED HEAD LAMP (LH) WARNING SIGNAL
40	V	-	ILLUMINATION CONTROL

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FBLC



Terminal No.	Color	Wire	Signal Name (Specification)
1	W	-	BAT (F/L)
2	R	-	POWER WINDOW POWER SUPPLY (BAT)
3	W	-	POWER WINDOW POWER SUPPLY (PAC)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MS16FW-CS



Terminal No.	Color	Wire	Signal Name (Specification)
4	R	-	INTERIOR ROOM LAMP POWER SUPPLY
5	G	-	PASSENGER DOOR UNLOCK OUTPUT
7	Y	-	STEP LAMP
8	V	-	ALL DOOR, FUEL LID LOCK OUTPUT
9	G	-	DRIVER DOOR, FUEL LID UNLOCK OUTPUT
11	R	-	BAT (F/USE)
13	B	-	GROUND
14	P	-	PUSH-BUTTON (IGNITION SW) ILL GND
15	Y	-	ACC GND
17	W	-	TURN SIGNAL RH (FRONT) OUTPUT
18	BG	-	TURN SIGNAL LH (FRONT) OUTPUT
19	V	-	ROOM LAMP TIMER CONTROL

JRMWG8019GB


# POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]


## PDS (POWER DISTRIBUTION SYSTEM)

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FGY-NH



Terminal No.	Wire	Signal Name [Specification]
34	P	TRUNK ROOM ANT-
35	L	TRUNK ROOM ANT+
38	R	REAR BUMPER ANT-
39	BR	REAR BUMPER ANT+
47	Y	IGN RELAY (F/B) CONT
50	R	TRUNK ROOM LAMP SW
52	SB	STARTER RELAY CONT
61	W	TRUNK LID REQUEST SW
64	EG	I-KEY WARN BUZZER (ENG ROOM)
67	G	TRUNK LID OPENER SW


Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Wire	Signal Name [Specification]
72	R	ROOM ANT2-
73	G	ROOM ANT2+
74	SB	PASSENGER DOOR ANT-
75	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	Y	ROOM ANT1-
79	BR	ROOM ANT1+
80	GR	IMMOBI ANTENNA CONTROL
81	L	IMMOBI ANTENNA SIGNAL

82	R	IGN RELAY (F/B) CONT
83	Y	KEYLESS ENTRY RECEIVER COMM
87	BR	COMBI SW INPUT 5
88	V	COMBI SW INPUT 3
89	BR	PUSH SW
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL OUTPUT
93	V	ON IND
95	EG	ACC RELAY CONT
96	SB	AT SHIFT SELECTOR POWER SUPPLY
97	L	S/L CONDITION 1
98	R	S/L CONDITION 2
99	G	SHIFT P
100	W	PASSENGER DOOR REQUEST SW
101	V	DRIVER DOOR REQUEST SW
102	RG	BLOWER FAN MOTOR RELAY CONT
103	LG	KEYLESS ENTRY RECEIVER POWER SUPPLY
106	P	S/L UNIT POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	Y	COMBI SW INPUT 2
110	G	HAZARD SW
111	Y	S/L UNIT COMM

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



Terminal No.	Wire	Signal Name [Specification]
113	P	OPTICAL SENSOR
116	SB	STOP LAMP SW 1
118	P	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	R	KEY SLOT SW
123	BR	IGN/F/B
124	LG	PASSENGER DOOR SW
128	P	DOOF LOCK/UNLOCK SW LOCK
129	EG	TRUNK CANCEL SW
131	BR	DOOR LOCK/UNLOCK SW UNLOCK

133	W	PUSH-BUTTON IGNITION SW ILL POWER
134	GR	LOCK IND
137	L	RECEIVER GND
138	Y	RECEIVER SENSOR POWER SUPPLY
140	BR	SHIFT NP
141	G	SECURITY INDICATOR
142	BG	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	GR	DRIVER DOOR SW
151	G	REAR WINDOW DEFOSGGER RELAY CONT

Connector No.	M131
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TKG8FB



Terminal No.	Wire	Signal Name [Specification]
1	B	-
2	P	-
3	W	-
4	BR	-
5	GR	-
6	Y	-
7	V	-
8	G	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## ECU DIAGNOSIS INFORMATION

### BCM (BODY CONTROL MODULE)

#### Reference Value

INFOID:0000000011786816

#### VALUES ON THE DIAGNOSIS TOOL

##### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

##### CONSULT MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT	Off
	Front wiper switch INT	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
RR FOG SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	<b>NOTE:</b> The item is indicated, but not monitored.	Off

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	Value/Status	
DOOR SW-RL	<b>NOTE:</b> The item is indicated, but not monitored.	Off	A
DOOR SW-BK	<b>NOTE:</b> The item is indicated, but not monitored.	Off	B
CDL LOCK SW	Other than power door lock switch LOCK	Off	C
	Power door lock switch LOCK	On	
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off	D
	Power door lock switch UNLOCK	On	
KEY CYL LK-SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off	E
KEY CYL UN-SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off	F
KEY CYL SW-TR	<b>NOTE:</b> The item is indicated, but not monitored.	Off	G
HAZARD SW	Hazard switch is not pressed	Off	H
	Hazard switch is pressed	On	
REAR DEF SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off	I
H/L WSR SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off	J
TR CANCEL SW	Trunk lid opener cancel switch OFF	Off	K
	Trunk lid opener cancel switch ON	On	
TR/BD OPEN SW	Trunk lid opener switch OFF	Off	L
	While the trunk lid opener switch is turned ON	On	
TRNK/HAT MNTR	Trunk lid closed	Off	PCS
	Trunk lid opened	On	
REVERSE SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off	N
RKE-LOCK	LOCK button of Intelligent Key is not pressed	Off	O
	LOCK button of Intelligent Key is pressed	On	
RKE-UNLOCK	UNLOCK button of Intelligent Key is not pressed	Off	P
	UNLOCK button of Intelligent Key is pressed	On	
RKE-TR/BD	TRUNK OPEN button of Intelligent Key is not pressed	Off	N
	TRUNK OPEN button of Intelligent Key is pressed	On	
RKE-PANIC	PANIC button of Intelligent Key is not pressed	Off	O
	PANIC button of Intelligent Key is pressed	On	
RKE-P/W OPEN	UNLOCK button of Intelligent Key is not pressed	Off	P
	UNLOCK button of Intelligent Key is pressed and held	On	
RKE-MODE CHG	LOCK/UNLOCK button of Intelligent Key is not pressed and held simultaneously	Off	P
	LOCK/UNLOCK button of Intelligent Key is pressed and held simultaneously	On	
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V	P
	Dark outside of the vehicle	Close to 0 V	
REQ SW-DR	Driver door request switch is not pressed	Off	P
	Driver door request switch is pressed	On	
REQ SW-AS	Passenger door request switch is not pressed	Off	P
	Passenger door request switch is pressed	On	

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	Value/Status
REQ SW-RL	<b>NOTE:</b> The item is indicated, but not monitored.	Off
REQ SW-RR	<b>NOTE:</b> The item is indicated, but not monitored.	Off
REQ SW-BD/TR	Trunk lid opener request switch is not pressed	Off
	Trunk lid opener request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	<b>NOTE:</b> The item is indicated, but not monitored.	Off
ACC RLY -F/B	<b>NOTE:</b> The item is indicated, but not monitored.	Off
CLUCH SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off
BRAKE SW 1	The brake pedal is depressed when No. 7 fuse is blown	Off
	The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal	On
BRAKE SW 2	The brake pedal is not depressed	Off
	The brake pedal is depressed	On
DETE/CANCL SW	Shift lever in P position	Off
	Shift lever in any position other than P	On
SFT PN/N SW	Shift lever in any position other than P and N	Off
	Shift lever in P or N position	On
S/L -LOCK	Steering is unlocked	Off
	Steering is locked	On
S/L -UNLOCK	Steering is locked	Off
	Steering is unlocked	On
S/L RELAY-F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
UNLK SEN-DR	Driver door is unlocked	Off
	Driver door is locked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Shift lever in any position other than P	Off
	Shift lever in P position	On
SFT PN -IPDM	Shift lever in any position other than P and N	Off
	Shift lever in P or N position	On
SFT P -MET	Shift lever in any position other than P	Off
	Shift lever in P position	On
SFT N -MET	Shift lever in any position other than N	Off
	Shift lever in N position	On

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	Value/Status	
ENGINE STATE	Engine stopped	Stop	A
	While the engine stalls	Stall	
	At engine cranking	Crank	B
	Engine running	Run	
S/L LOCK-IPDM	Steering is unlocked	Off	
	Steering is locked	On	C
S/L UNLK-IPDM	Steering is locked	Off	
	Steering is unlocked	On	D
S/L RELAY-REQ	Steering lock system is not the LOCK condition and the changing condition from LOCK to UNLOCK	Off	
	Steering lock system is the LOCK condition or the changing condition from LOCK to UNLOCK	On	E
VEH SPEED 1	While driving	Equivalent to speedometer reading	F
VEH SPEED 2	While driving	Equivalent to speedometer reading	
DOOR STAT-DR	Driver door is locked	LOCK	G
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Driver door is unlocked	UNLOCK	
DOOR STAT-AS	Passenger door is locked	LOCK	H
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Passenger door is unlocked	UNLOCK	
ID OK FLAG	Steering is locked	Reset	I
	Steering is unlocked	Set	
PRMT ENG STRT	The engine start is prohibited	Reset	J
	The engine start is permitted	Set	
PRMT RKE STRT	<b>NOTE:</b> The item is indicated, but not monitored.	Reset	K
KEY SW -SLOT	Intelligent Key is not inserted into key slot	Off	
	Intelligent Key is inserted into key slot	On	L
RKE OPE COUN1	During the operation of Intelligent Key	Operation frequency of Intelligent Key	
RKE OPE COUN2	<b>NOTE:</b> The item is indicated, but not monitored.	—	PCS
CONFIRM ID ALL	The key ID that the key slot receives is not recognized by any key ID registered to BCM.	Yet	
	The key ID that the key slot receives is recognized by any key ID registered to BCM.	Done	N
CONFIRM ID4	The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM.	Yet	O
	The key ID that the key slot receives is recognized by the fourth key ID registered to BCM.	Done	
CONFIRM ID3	The key ID that the key slot receives is not recognized by the third key ID registered to BCM.	Yet	
	The key ID that the key slot receives is recognized by the third key ID registered to BCM.	Done	P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	Value/Status
CONFIRM ID2	The key ID that the key slot receives is not recognized by the second key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the second key ID registered to BCM.	Done
CONFIRM ID1	The key ID that the key slot receives is not recognized by the first key ID registered to BCM.	Yet
	The key ID that the key slot receives is recognized by the first key ID registered to BCM.	Done
TP 4	The ID of fourth Intelligent Key is not registered to BCM	Yet
	The ID of fourth Intelligent Key is registered to BCM	Done
TP 3	The ID of third Intelligent Key is not registered to BCM	Yet
	The ID of third Intelligent Key is registered to BCM	Done
TP 2	The ID of second Intelligent Key is not registered to BCM	Yet
	The ID of second Intelligent Key is registered to BCM	Done
TP 1	The ID of first Intelligent Key is not registered to BCM	Yet
	The ID of first Intelligent Key is registered to BCM	Done




# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## TERMINAL LAYOUT

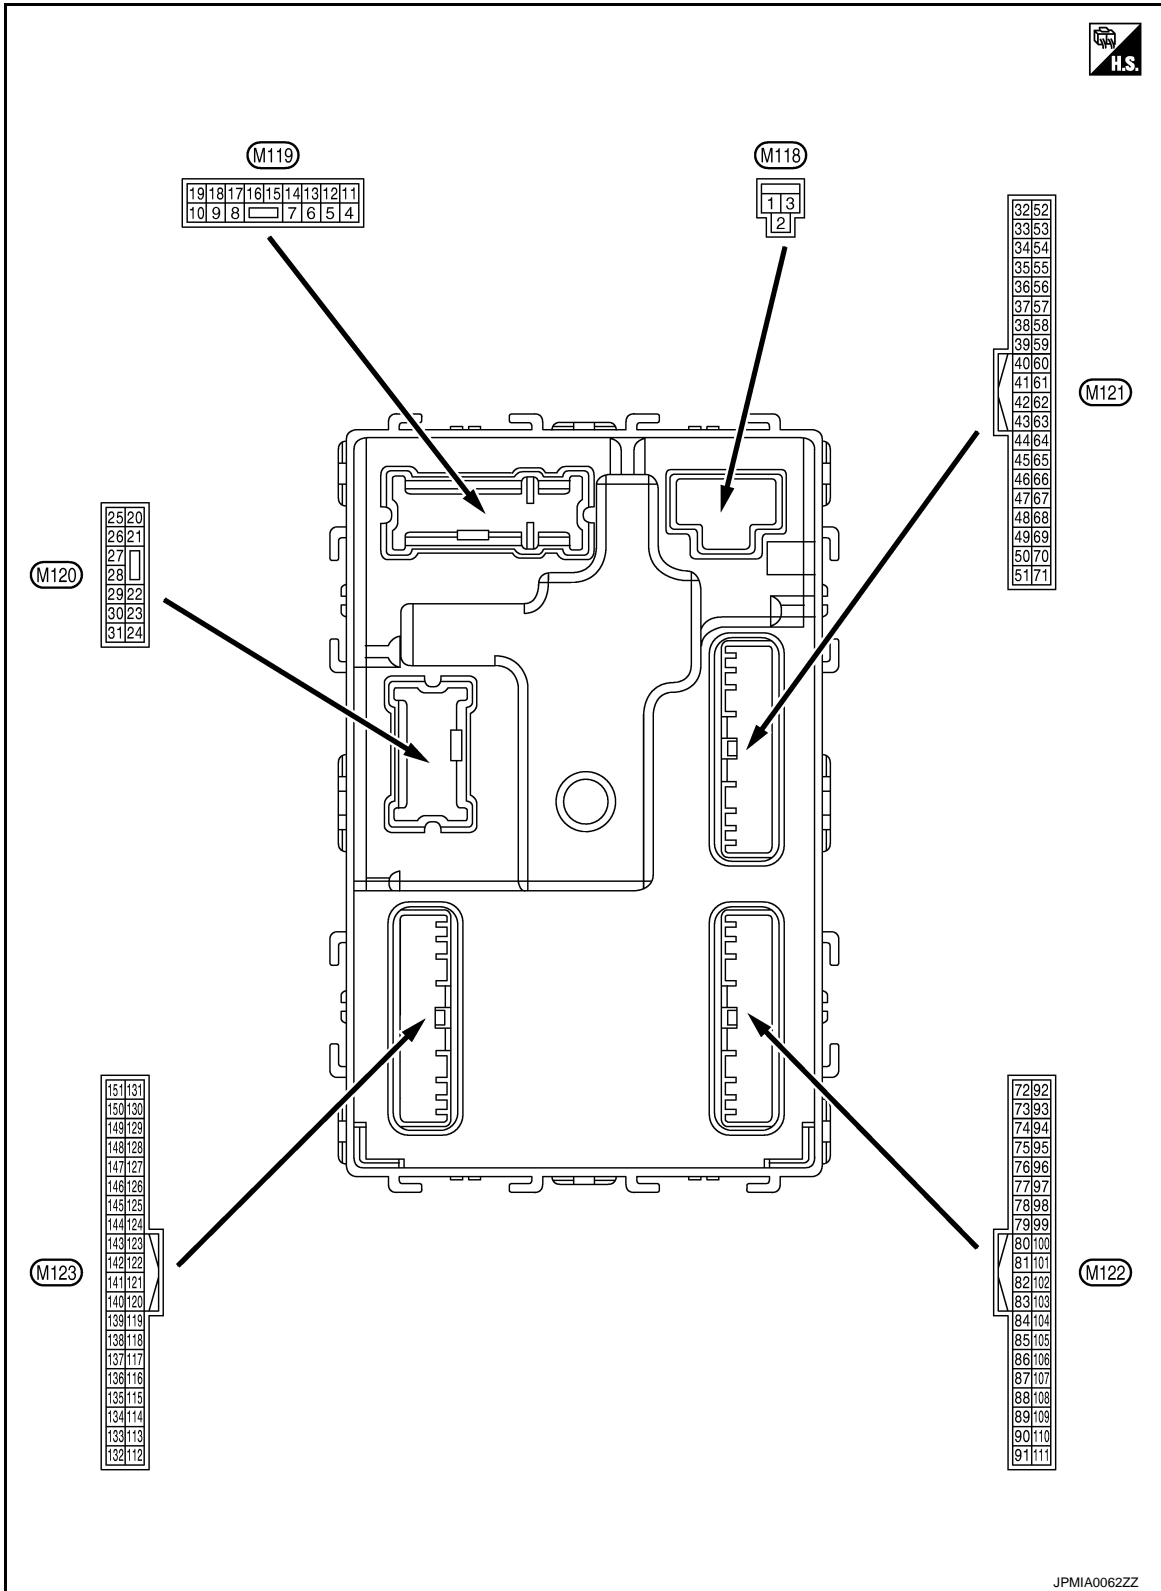

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

PCS


## PHYSICAL VALUES

JPMIA0062ZZ

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[POWER DISTRIBUTION SYSTEM]

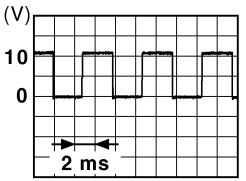Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (R)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		Battery voltage
3 (W)	Ground	P/W power supply (RAP)	Output	Ignition switch ON		Battery voltage
4 (R)	Ground	Interior room lamp power supply	Output	After passing the interior room lamp battery saver operation time		0 V
				Any other time after passing the interior room lamp battery saver operation time		Battery voltage
5 (G)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
7 (Y)	Ground	Step lamp control signal	Output	Step lamp	ON	0 V
					OFF	Battery voltage
8 (V)	Ground	All doors, fuel lid LOCK	Output	All doors, fuel lid	LOCK (Actuator is activated)	Battery voltage
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door, fuel lid UNLOCK	Output	Driver door, fuel lid	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
11 (R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
14 (P)	Ground	Push-button ignition switch illumination ground	Output	Tail lamp	OFF	0 V
					ON	<p><b>NOTE:</b> When the illumination brightening/dimming level is in the neutral position</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p>
15 (Y)	Ground	ACC indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ACC or ON	0 V

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]



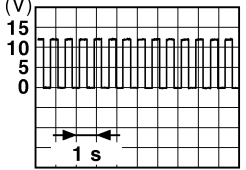
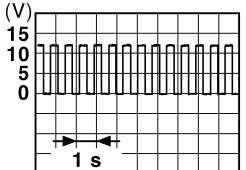
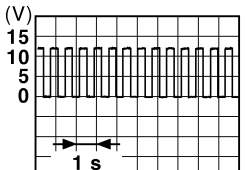
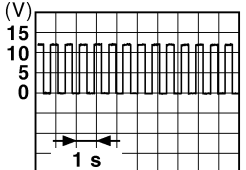
Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
17 (W)	Ground	Turn signal RH (Front)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 <p style="text-align: right; font-size: small;">PKID0926E</p>
18 (BG)	Ground	Turn signal LH (Front)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 <p style="text-align: right; font-size: small;">PKID0926E</p>
19 (V)	Ground	Interior room lamp control signal	Output	Interior room lamp	OFF	Battery voltage
					ON	0 V
20 (SB)	Ground	Turn signal RH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 <p style="text-align: right; font-size: small;">PKID0926E</p>
23 (G)	Ground	Trunk lid open	Output	Trunk lid	Open (Trunk lid opener ac- tuator is activated)	Battery voltage
					Close (Trunk lid opener ac- tuator is not activated)	0 V
25 (V)	Ground	Turn signal LH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 <p style="text-align: right; font-size: small;">PKID0926E</p>
30 (BG)	Ground	Trunk room lamp control signal	Output	Trunk room lamp	ON	0 V
					OFF	Battery voltage

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[POWER DISTRIBUTION SYSTEM]

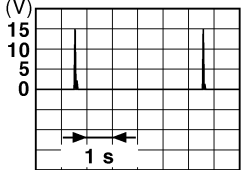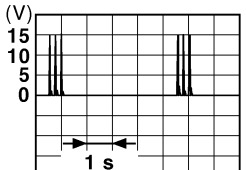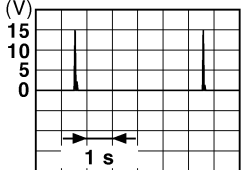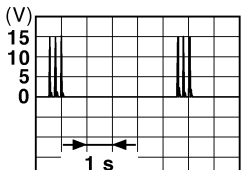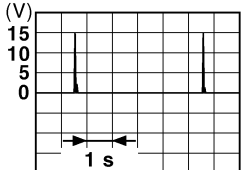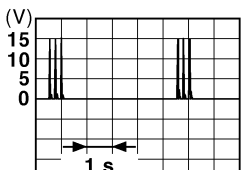Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
34 (P)	Ground	Trunk room antenna (-)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment  <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				Ignition switch OFF	When Intelligent Key is not in the passenger compart- ment  <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
35 (L)	Ground	Trunk room antenna (+)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment  <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				Ignition switch OFF	When Intelligent Key is not in the passenger compart- ment  <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
38 (R)	Ground	Rear bumper anten- na (-)	Output	When the trunk lid opener re- quest switch is operated with ig- nition switch OFF	When Intelligent Key is in the antenna detection area  <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				Ignition switch OFF	When Intelligent Key is not in the antenna detection area  <p style="text-align: right; font-size: small;">JMKIA0063GB</p>

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]


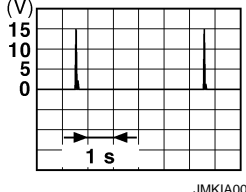
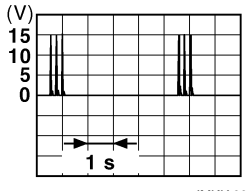
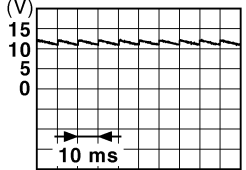
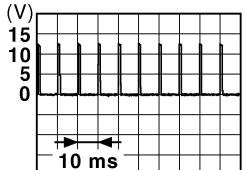
Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
39 (BR)	Ground	Rear bumper antenna (+)	Output	When the trunk lid opener request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area
				When Intelligent Key is not in the antenna detection area	When Intelligent Key is not in the antenna detection area
					
					
47 (Y)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC
					ON
					0 V
50 (R)	Ground	Trunk room lamp switch	Input	Trunk room lamp switch	OFF (Trunk is closed)
					ON (Trunk is open)
					
					11.8 V
52 (SB)	Ground	Starter relay control	Output	Ignition switch ON	When shift lever is in P or N position
					When shift lever is not in P or N position
					0 V
61 (W)	Ground	Trunk lid opener request switch	Input	Trunk lid opener request switch	ON (Pressed)
					OFF (Not pressed)
					
					1.0 V
64 (BG)	Ground	Intelligent Key warning buzzer (Engine room)	Output	Intelligent Key warning buzzer (Engine room)	Sounding
					Not sounding
					Battery voltage

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >







[POWER DISTRIBUTION SYSTEM]

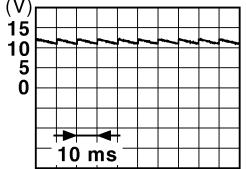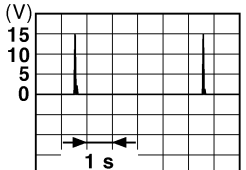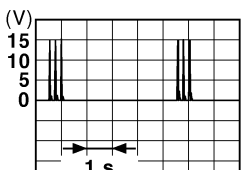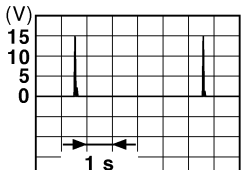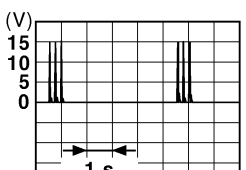Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
67 (G)	Ground	Trunk lid opener switch	Input	Trunk lid opener switch	Pressed	0 V
				Not pressed	Not pressed	 <p style="text-align: right; font-size: small;">JPMIA0011GB</p>
72 (R)	Ground	Room antenna 2 (-) (Center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>	
73 (G)	Ground	Room antenna 2 (+) (Center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>	

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

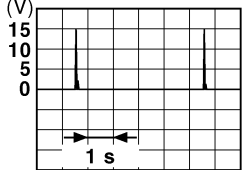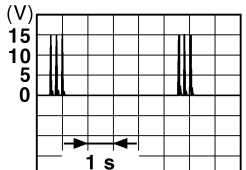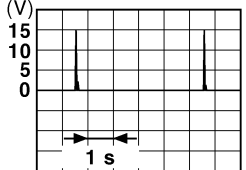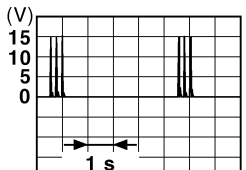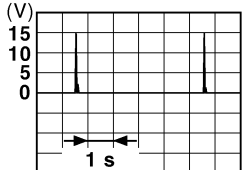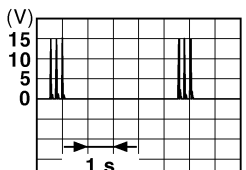Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
74 (SB)	Ground	Passenger door antenna (-)	Output	When Intelligent Key is in the antenna detection area	 <small>JMKIA0062GB</small>
				When the passenger door request switch is operated with ignition switch OFF	 <small>JMKIA0063GB</small>
75 (BR)	Ground	Passenger door antenna (+)	Output	When Intelligent Key is in the antenna detection area	 <small>JMKIA0062GB</small>
				When the passenger door request switch is operated with ignition switch OFF	 <small>JMKIA0063GB</small>
76 (V)	Ground	Driver door antenna (-)	Output	When Intelligent Key is in the antenna detection area	 <small>JMKIA0062GB</small>
				When the driver door request switch is operated with ignition switch OFF	 <small>JMKIA0063GB</small>







A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

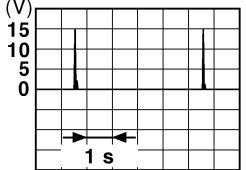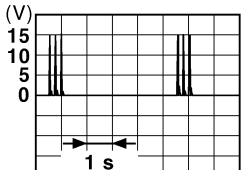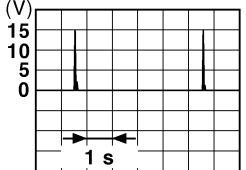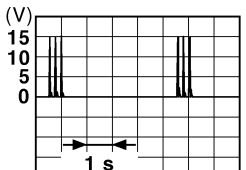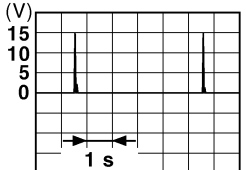
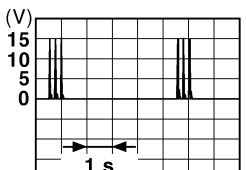


Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
77 (LG)	Ground	Driver door antenna (+)	Output	When the driver door request switch is operat- ed with ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
78 (Y)	Ground	Room antenna 1 (-) (Instrument panel)	Output	When Intelligent Key is in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
79 (BR)	Ground	Room antenna 1 (+) (Instrument panel)	Output	When Intelligent Key is in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

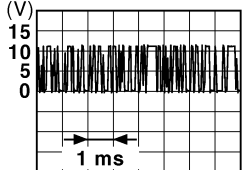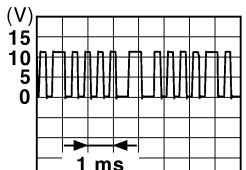[POWER DISTRIBUTION SYSTEM]




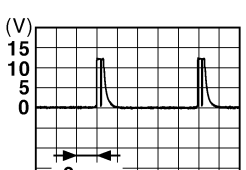
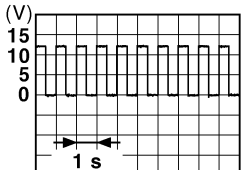
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
80 (GR)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
81 (L)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the Intelligent Key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
82 (R)	Ground	Ignition relay [fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
						ON
83 (Y)	Ground	Remote keyless entry receiver communication	Input/ Output	During waiting		 <p style="text-align: right; font-size: small;">JMKIA0064GB</p>
				When operating either button on Intelligent Key		 <p style="text-align: right; font-size: small;">JMKIA0065GB</p>
87 (BR)	Ground	Combination switch INPUT 5	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>
					Any of the conditions below with all switches OFF	<ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 6</li> <li>• Wiper intermittent dial 7</li> </ul>  <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >



[POWER DISTRIBUTION SYSTEM]

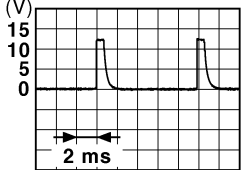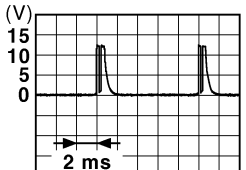Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
88 (V)	Ground	Combination switch INPUT 3	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 <small>JPMIA0041GB</small> 1.4 V
					Lighting switch HI (Wiper intermittent dial 4)	 <small>JPMIA0036GB</small> 1.3 V
					Lighting switch 2ND (Wiper intermittent dial 4)	 <small>JPMIA0037GB</small> 1.3 V
					Any of the conditions below with all switches OFF	<ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 3</li> </ul>  <small>JPMIA0040GB</small> 1.3 V
89 (BR)	Ground	Push-button ignition switch (push switch)	Input	Push-button igni- tion switch (push switch)	Pressed Not pressed	0 V Battery voltage
90 (P)	Ground	CAN - L	Input/ Output	—	—	—
91 (L)	Ground	CAN - H	Input/ Output	—	—	—
92 (LG)	Ground	Key slot illumination	Output	Key slot illumina- tion	OFF	Battery voltage
					Blinking	 <small>JPMIA0015GB</small> 6.5 V
					ON	0 V

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

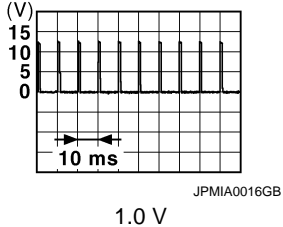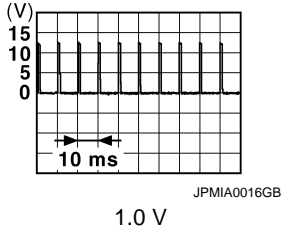

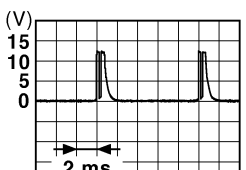
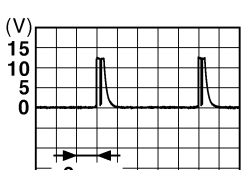
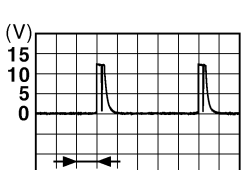
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
93 (V)	Ground	ON indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ON or ACC	0 V
95 (BG)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
96 (SB)	Ground	A/T shift selector (detention switch) power supply	Output	—		Battery voltage
97 (L)	Ground	Steering lock condition No. 1	Input	Steering lock	LOCK status	0 V
					UNLOCK status	Battery voltage
98 (R)	Ground	Steering lock condition No. 2	Input	Steering lock	LOCK status	Battery voltage
					UNLOCK status	0 V
99 (G)	Ground	Shift lever P position switch	Input	Shift lever	P position	0 V
					Any position other than P	Battery voltage
100 (W)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	
101 (V)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	
102 (BG)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
103 (LG)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF		Battery voltage
106 (P)	Ground	Steering lock unit power supply	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[POWER DISTRIBUTION SYSTEM]

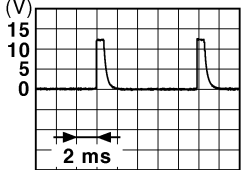Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
107 (LG)	Ground	Combination switch INPUT 1	Input	All switches OFF	 1.4 V
				Turn signal switch LH	 1.3 V
				Turn signal switch RH	 1.3 V
				Front wiper switch LO	 1.3 V
				Front washer switch ON	 1.3 V

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

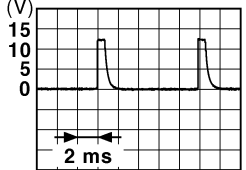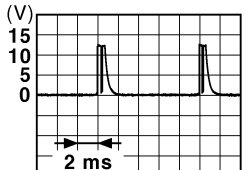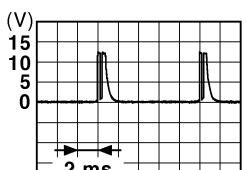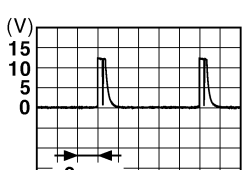Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
108 (R)	Ground	Combination switch INPUT 4	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)  1.4 V
					Lighting switch AUTO (Wiper intermittent dial 4)  1.3 V
					Lighting switch 1ST (Wiper intermittent dial 4)  1.3 V
					Any of the conditions below with all switches OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 5</li> <li>• Wiper intermittent dial 6</li> </ul>  1.3 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L



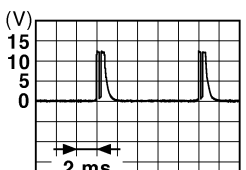
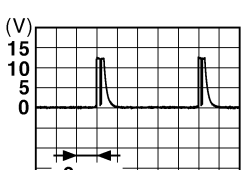
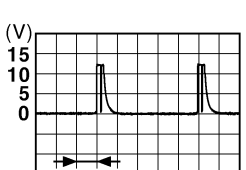
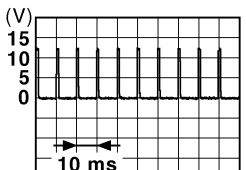
PCS

N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

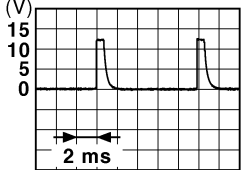Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
109 (Y)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper intermittent dial 4)	All switches OFF	 1.4 V
					Lighting switch PASS	 1.3 V
					Lighting switch 2ND	 1.3 V
					Front wiper switch INT	 1.3 V
					Front wiper switch HI	 1.3 V
					Pressed	0 V
110 (G)	Ground	Hazard switch	Input	Hazard switch	Not pressed	 1.1 V

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]





Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
111 (Y)	Ground	Steering lock unit communication	Input/ Output	Steering lock	LOCK status	Battery voltage
					LOCK or UNLOCK	<p style="text-align: right; font-size: small;">JMKIA0066GB</p>
					For 15 seconds after UNLOCK	Battery voltage
					15 seconds or later after UNLOCK	0 V
113 (P)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
				When dark outside of the vehicle	Close to 0 V	
116 (SB)	Ground	Stop lamp switch 1	Input	—	Battery voltage	
118 (P)	Ground	Stop lamp switch 2	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is depressed)	Battery voltage
119 (SB)	Ground	Driver side door lock actuator (Unlock sensor)	Input	Driver door	LOCK status (Unlock sensor switch OFF)	<p style="text-align: right; font-size: small;">JPMIA0011GB</p>
					UNLOCK status (Unlock sensor switch ON)	0 V
121 (R)	Ground	Key slot switch	Input	When Intelligent Key is inserted into key slot	Battery voltage	
				When Intelligent Key is not inserted into key slot	0 V	
123 (BR)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V
				ON	Battery voltage	
124 (LG)	Ground	Passenger door switch	Input	Passenger door switch	OFF (When passenger door closes)	<p style="text-align: right; font-size: small;">JPMIA0011GB</p>
					ON (When passenger door opens)	0 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

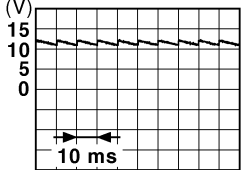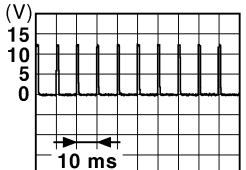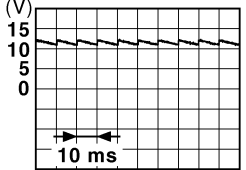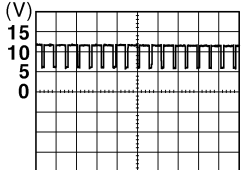Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
128 (P)	Ground	Door lock and unlock switch LOCK	Input	Door lock and un- lock switch (pow- er window main switch or power window sub- switch)	NEUTRAL position	 <small>JPMIA0011GB</small> 11.8 V
				LOCK position	0 V	
129 (BG)	Ground	Trunk lid opener can- cel switch	Input	Trunk lid opener cancel switch	CANCEL	 <small>JPMIA0012GB</small> 1.1 V
				ON	0 V	
131 (BR)	Ground	Door lock and unlock switch UNLOCK	Input	Door lock and un- lock switch (pow- er window main switch or power window sub- switch)	NEUTRAL position	 <small>JPMIA0011GB</small> 11.8 V
				LOCK position	0 V	
133 (W)	Ground	Push-button ignition switch illumination	Output	Push-button igni- tion switch illumi- nation	ON (When tail lamps OFF)	5.5 V
					ON (When tail lamps ON)	<p style="text-align: center;"><b>NOTE:</b> The pulse width of this wave is varied by the illumination bright- ening/dimming level.</p>  <small>JPMIA0159GB</small>
					OFF	0 V
134 (GR)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	ON	0 V
					OFF	Battery voltage
137 (L)	Ground	Receiver and sensor ground	Input	Ignition switch ON		0 V
138 (Y)	Ground	Sensor power supply	Output	Ignition switch	OFF	0 V
					ACC or ON	5.0 V
140 (BR)	Ground	Shift lever P/N posi- tion	Input	Shift lever	P or N position	12 V
					Except P and N positions	0 V



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)		
		Signal name	Input/ Output				
+	-						
141 (G)	Ground	Security indicator	Output	Security indicator	ON	0 V	
				Blinking	<p style="text-align: right; font-size: small;">JPMIA0014GB</p>	11.3 V	
				OFF	Battery voltage		
142 (BG)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper intermittent dial 4)	All switches OFF	0 V	
					Lighting switch 1ST	<p style="text-align: right; font-size: small;">JPMIA0031GB</p>	10.7 V
					Lighting switch HI		
					Lighting switch 2ND		
	Turn signal switch RH						
143 (P)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switches OFF (Wiper intermittent dial 4)	0 V	
					Front wiper switch HI (Wiper intermittent dial 4)	<p style="text-align: right; font-size: small;">JPMIA0032GB</p>	10.7 V
					Any of the conditions below with all switches OFF		
					<ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 3</li> <li>• Wiper intermittent dial 6</li> <li>• Wiper intermittent dial 7</li> </ul>		
144 (G)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switches OFF (Wiper intermittent dial 4)	0 V	
					Front washer switch ON (Wiper intermittent dial 4)	<p style="text-align: right; font-size: small;">JPMIA0033GB</p>	10.7 V
					Any of the conditions below with all switches OFF		
					<ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 5</li> <li>• Wiper intermittent dial 6</li> </ul>		
145 (L)	Ground	Combination switch OUTPUT 3	Output	Combination switch (Wiper intermittent dial 4)	All switches OFF	0 V	
					Front wiper switch INT	<p style="text-align: right; font-size: small;">JPMIA0034GB</p>	10.7 V
					Front wiper switch LO		
	Lighting switch AUTO						



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

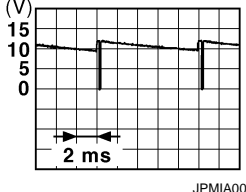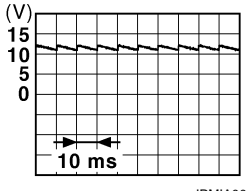Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
146 (SB)	Ground	Combination switch OUTPUT 4	Output	All switches OFF	0 V
				Lighting switch 2ND	
				Lighting switch PASS	
				Turn signal switch LH	
150 (GR)	Ground	Driver door switch	Input	OFF (When driver door closes)	 11.8 V
				ON (When driver door opens)	0 V
151 (G)	Ground	Rear window defogger relay control	Output	Rear window defogger	Active
				Not activated	Battery voltage


# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## Wiring Diagram - BCM -

INFOID:000000011786817

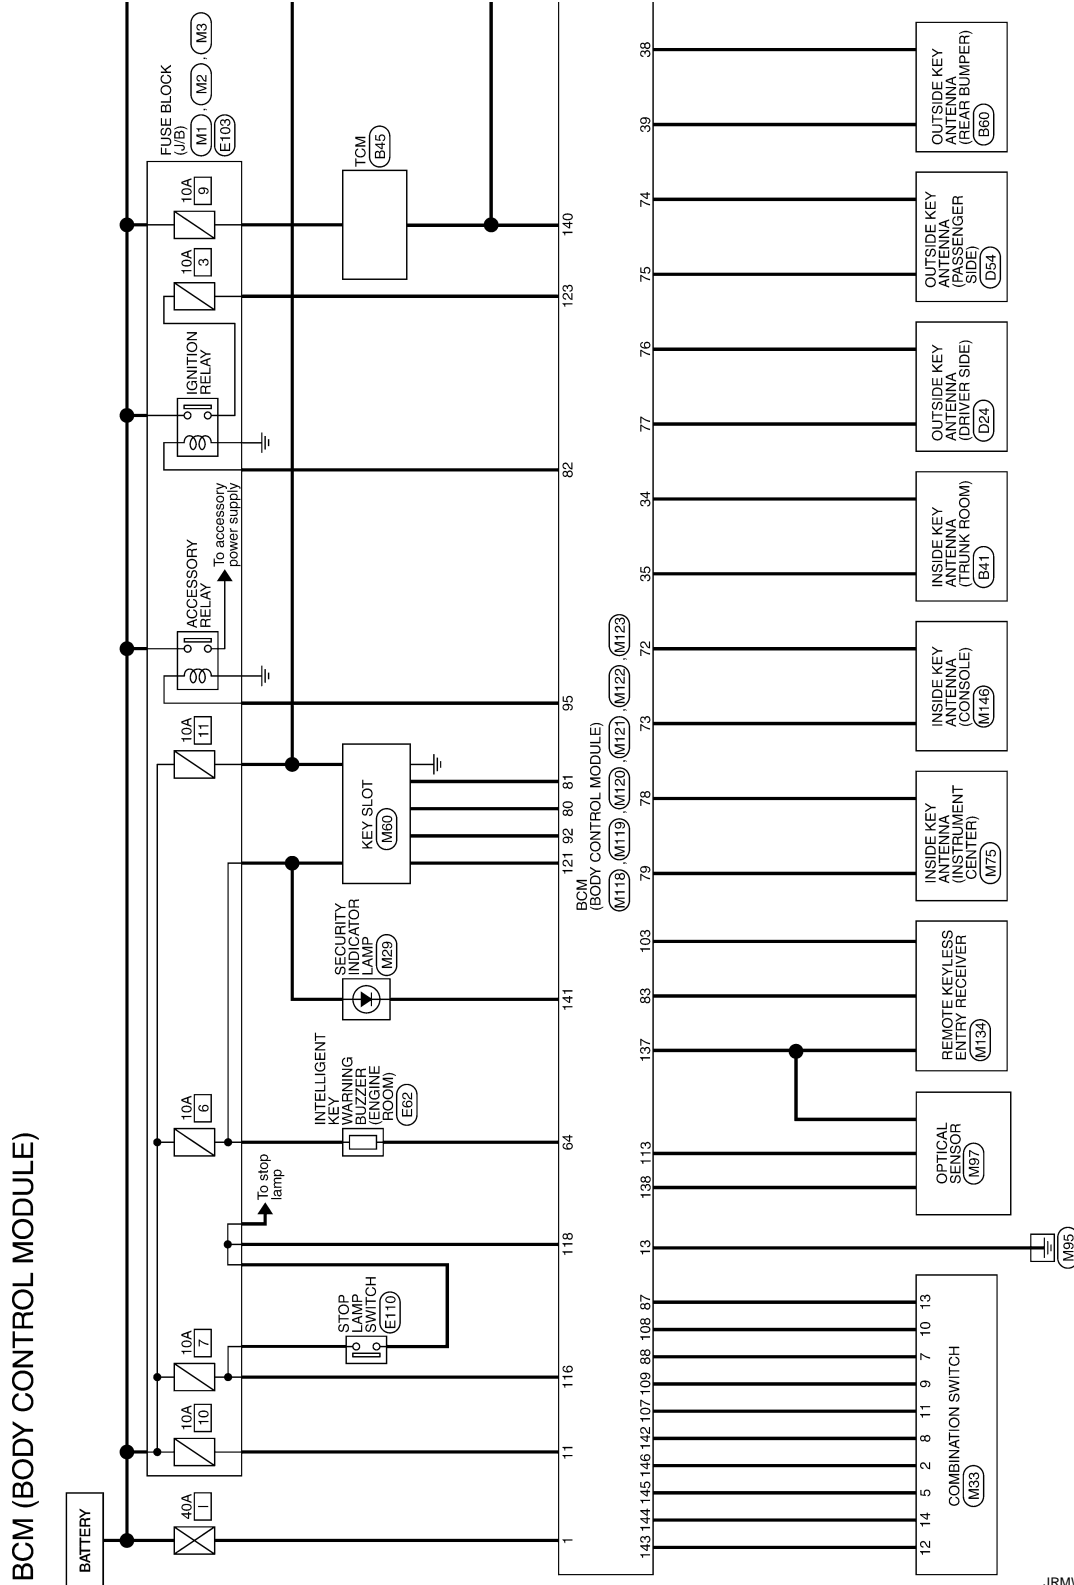

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS


2014/10/01

JRMWG7988GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

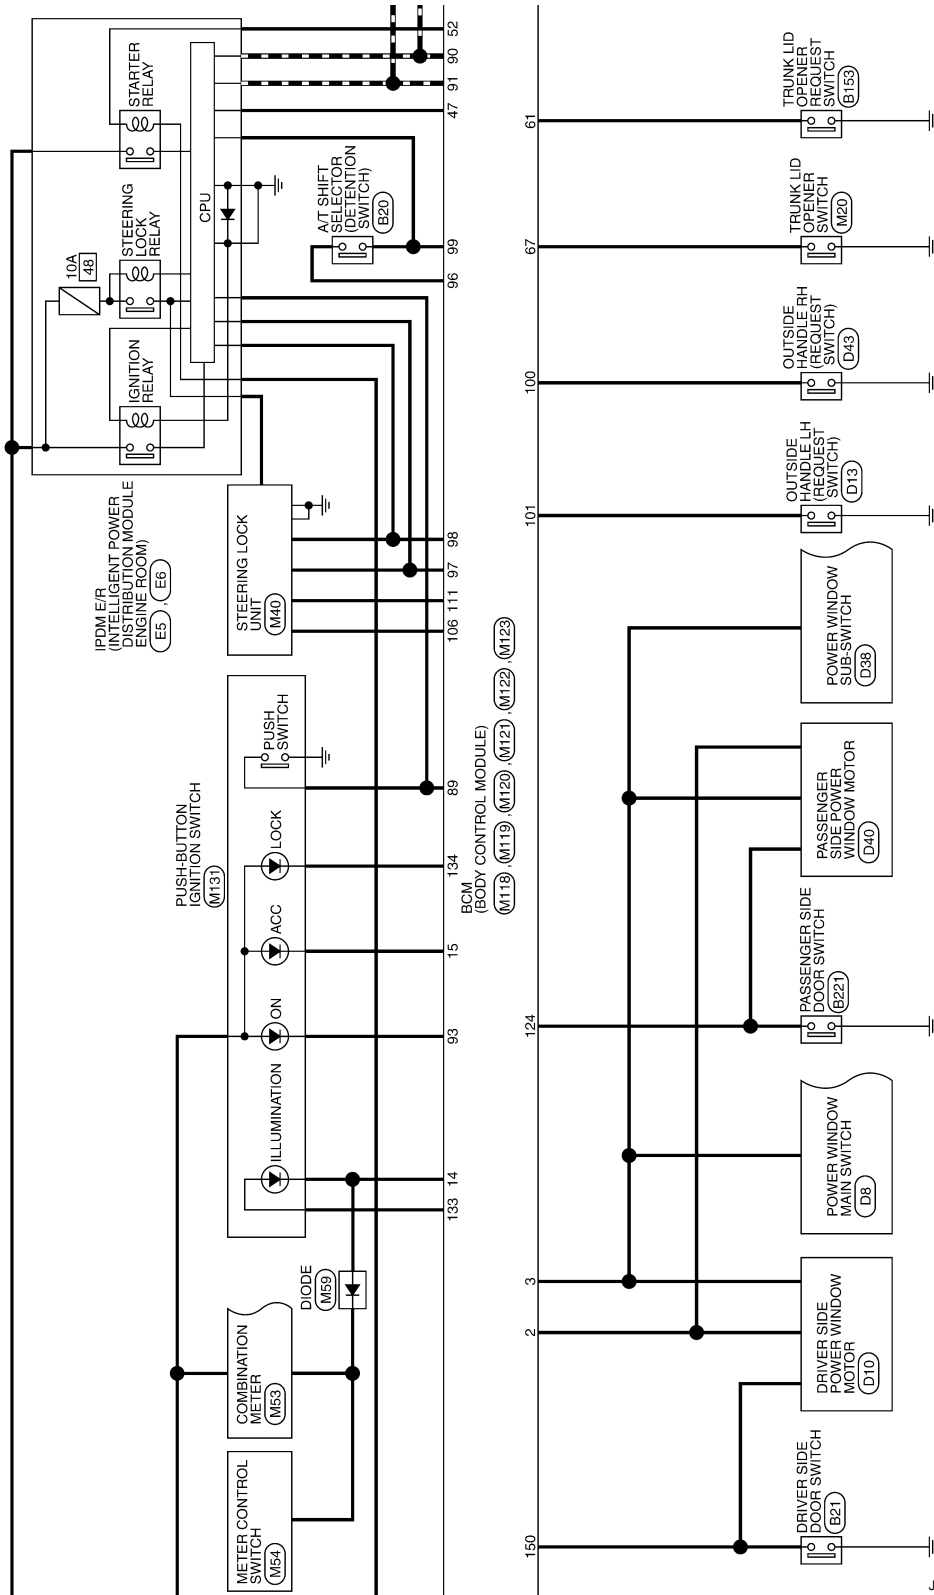


JRMWG7989GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

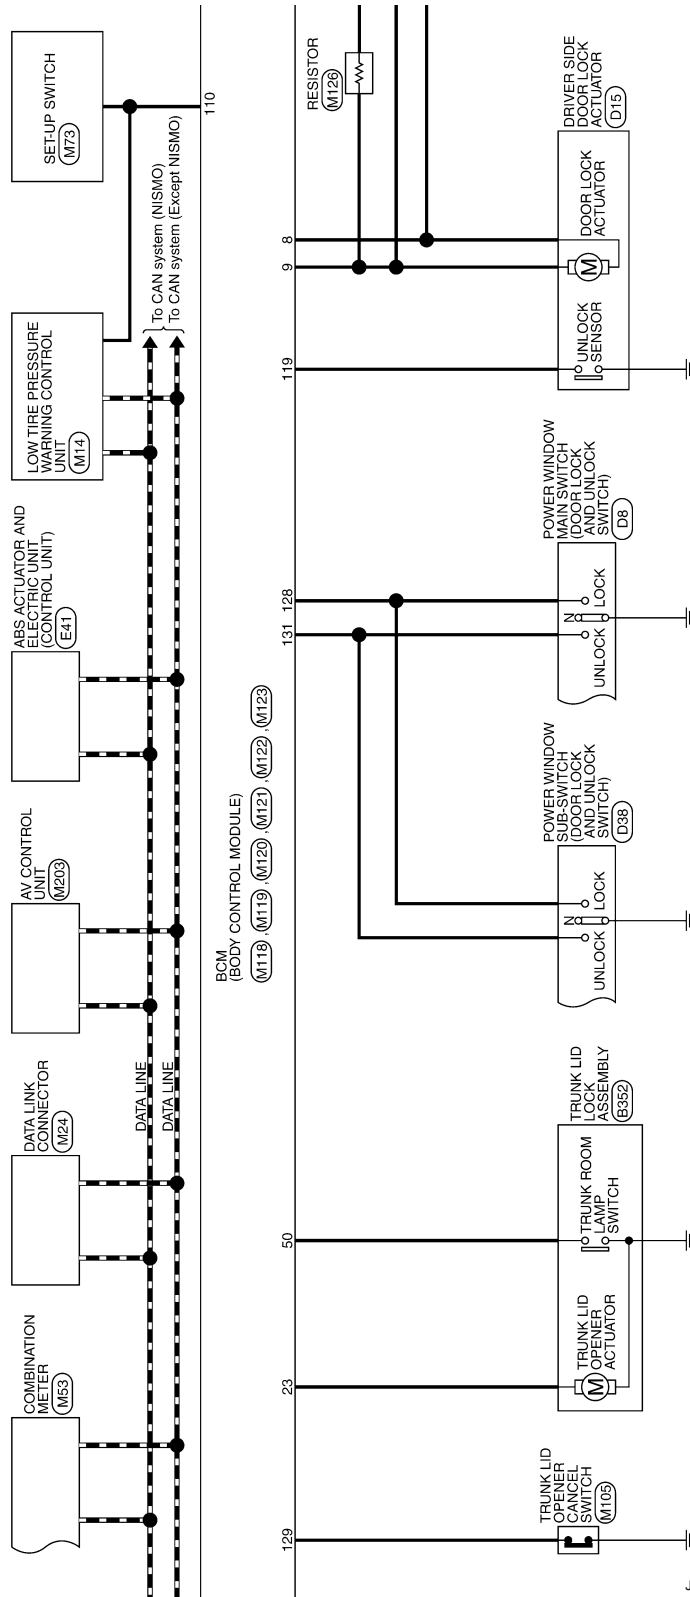

JRMWG7990GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

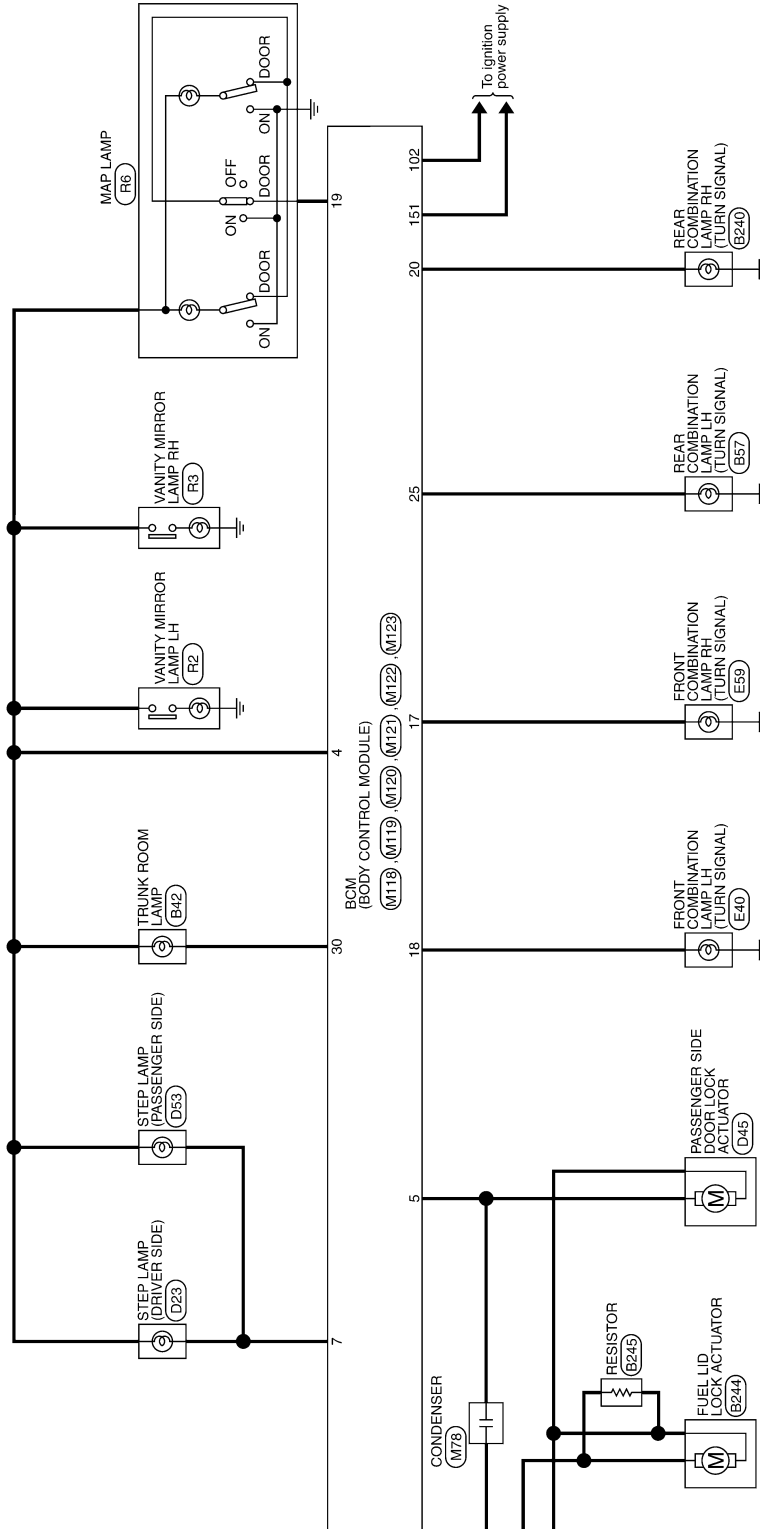

JRMWG7991GB


# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]


## BCM (BODY CONTROL MODULE)

Connector No.	B20
Connector Name	A/T SHIFT SELECTOR
Connector Type	1H24FW-NH



Terminal No.	Color	Wire	Signal Name [Specification]
1	GR	GR	BCM VCC IN
2	EG	EG	KEY I/LOCK(P)
3	B	B	GROUND
5	G	G	RANGE SENSOR No.1 SIGNAL
6	B	B	GROUND
8	V	V	RANGE SENSOR No.1 SIGNAL
10	G	G	RANGE SENSOR No.3 SIGNAL
12	GR	GR	RANGE SENSOR No.5 SIGNAL
13	Y	Y	VIGN
14	W	W	SHIFT LOCK SOLENOID CONTROL SIGNAL
15	LG	LG	RANGE SENSOR POWER SOURCE 2
16	L	L	RANGE SENSOR POWER SOURCE 1
17	R	R	ILLUMINATION
18	B	B	GROUND
20	BR	BR	AUTOMANUAL RANGE CHANGE SWITCH 1 SIGNAL
21	P	P	RANGE SENSOR No.4 SIGNAL
22	BR	BR	ILLUMINATION GND
23	R	R	RANGE SENSOR No.2 SIGNAL
24	V	V	AUTOMANUAL RANGE CHANGE SWITCH 2 SIGNAL

Connector No.	B21
Connector Name	DRIVER SIDE DOOR SWITCH
Connector Type	A03FW




Terminal No.	Color	Wire	Signal Name [Specification]
1	Y	Y	-
2	LG	LG	-

Connector No.	B41
Connector Name	INSIDE KEY ANTENNA (TRUNK ROOM)
Connector Type	PK02FGY



Terminal No.	Color	Wire	Signal Name [Specification]
1	L	L	-
2	P	P	-

Connector No.	B42
Connector Name	TRUNK ROOM LAMP
Connector Type	S02FW



Terminal No.	Color	Wire	Signal Name [Specification]
1	Y	Y	-
2	LG	LG	-

Connector No.	B45
Connector Name	TCM
Connector Type	RH40FB-R28-L-LHZ



Terminal No.	Color	Wire	Signal Name [Specification]
1	W	W	POWER SUPPLY (MEMORY BACK-UP)-2
3	B	B	GROUND
4	B	B	GROUND
5	W	W	POWER SUPPLY (MEMORY BACK-UP)-3
7	B	B	GROUND
8	B	B	GROUND
9	P	P	POWER SUPPLY (MEMORY BACK-UP)-1
10	LG	LG	BACK-UP LAMP SIGNAL
11	L	L	CANH
14	V	V	POWER OFF
15	P	P	CANL
18	W	W	STOP LAMP SWITCH SIGNAL
17	Y	Y	IGNITION SWITCH SIGNAL
19	GR	GR	STARTER RELAY SIGNAL
23	BR	BR	AUTOMANUAL RANGE CHANGE SWITCH 1 SIGNAL
25	L	L	RANGE SENSOR POWER SOURCE 1
26	LG	LG	RANGE SENSOR POWER SOURCE 2

27	G	G	RANGE SENSOR No.1 SIGNAL
28	V	V	AUTOMANUAL RANGE CHANGE SWITCH 2 SIGNAL
31	SB	SB	ENGINE SPEED SIGNAL
33	V	V	RANGE SENSOR No.1 SIGNAL
34	EG	EG	SAVE MODE SWITCH SIGNAL
35	G	G	RANGE SENSOR No.3 SIGNAL
37	GR	GR	RANGE SENSOR No.2 SIGNAL
38	R	R	RANGE SENSOR No.4 SIGNAL
39	W	W	PADDLE SHIFTER (SHIFT UP) SWITCH SIGNAL
42	L	L	PADDLE SHIFTER (SHIFT DOWN) SWITCH SIGNAL
43	P	P	RANGE SENSOR No.4 SIGNAL
44	GR	GR	RANGE SENSOR No.5 SIGNAL
45	EG	EG	R MODE LAMP SIGNAL
46	W	W	SHIFT LOCK SOLENOID CONTROL SIGNAL
47	G	G	SAVE MODE LAMP SIGNAL

Connector No.	B57
Connector Name	REAR COMBINATION LAMP LH
Connector Type	NS56MW-CS



Terminal No.	Color	Wire	Signal Name [Specification]
1	W	W	-
2	R	R	-
3	B	B	-
4	SB	SB	-
5	R	R	-
6	Y	Y	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

JRMWG7992GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## BCM (BODY CONTROL MODULE)

Connector No.	B60
Connector Name	OUTSIDE KEY ANTENNA (REAR BUMPER)
Connector Type	FKG2FGY




Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	R	-

Connector No.	B153
Connector Name	TRUNK LID OPENER REQUEST SWITCH
Connector Type	FKG2ML



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-

Connector No.	B221
Connector Name	PASSENGER SIDE DOOR SWITCH
Connector Type	A03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
2	GR	-

Connector No.	B240
Connector Name	REAR COMBINATION LAMP RH
Connector Type	NS68MW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	R	-
3	B	-
4	Y	-
5	R	-
6	BG	-

Connector No.	B244
Connector Name	FUEL LID LOCK ACTUATOR
Connector Type	M04FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	V	-

Connector No.	B245
Connector Name	RESISTOR
Connector Type	M04FL-R




Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	G	-

Connector No.	B352
Connector Name	TRUNK LID LOCK ASSEMBLY
Connector Type	TB03FW-IV



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	B	-
3	P	-

Connector No.	D8
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS16FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
2	W	-
3	R	-
5	GR	-
6	SB	-
7	O	-
8	B	-
10	G	-
11	L	-
13	BR	-
15	LG	-
16	V	-

JRMWG7993GB



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## BCM (BODY CONTROL MODULE)

Connector No.	D10
Connector Name	DRIVER SIDE POWER WINDOW MOTOR
Connector Type	NJ08FDGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	W	-
3	G	-
4	L	-
6	GR	-
7	R	-
8	B	-

Connector No.	D13
Connector Name	OUTSIDE HANDLE LH (REQUEST SWITCH)
Connector Type	RK02MGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-

Connector No.	D15
Connector Name	DRIVER SIDE DOOR LOCK ACTUATOR
Connector Type	FSM4FGY-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	SB	-
3	G	-
4	B	-

Connector No.	D23
Connector Name	STEP LAMP (DRIVER SIDE)
Connector Type	G02FW




Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	Y	-

Connector No.	D24
Connector Name	OUTSIDE KEY ANTENNA (DRIVER SIDE)
Connector Type	RK02MGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	V	-

Connector No.	D38
Connector Name	POWER WINDOW SUB-SWITCH
Connector Type	NS16FW-LS



Terminal No.	Color Of Wire	Signal Name [Specification]
2	GR	-
3	V	-
5	SB	-
6	O	-
7	LG	-
8	B	-
9	BR	-
11	W	-
14	R	-
15	G	-
16	L	-

Connector No.	D40
Connector Name	PASSENGER SIDE POWER WINDOW MOTOR
Connector Type	NJ08FDGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	W	-
3	G	-
4	L	-
6	LG	-
7	R	-
8	B	-

Connector No.	D43
Connector Name	OUTSIDE HANDLE RH (REQUEST SWITCH)
Connector Type	RK02MGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-

JRMWG7994GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## BCM (BODY CONTROL MODULE)

Connector No.	D45
Connector Name	PASSENGER SIDE DOOR LOCK ACTUATOR
Connector Type	RSM4FGY-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
3	G	-

Connector No.	D55
Connector Name	STEP LAMP (PASSENGER SIDE)
Connector Type	C02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	Y	-

Connector No.	D54
Connector Name	OUTSIDE KEY ANTENNA (PASSENGER SIDE)
Connector Type	RK02MGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	V	-

Connector No.	E5
Connector Name	FROM ECU INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	THE0FW-0S12-M4-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
6	Y	-
7	R	-
10	W	-
11	SB	-
12	B/W	-
13	R	-
16	LG	-
25	BG	-
27	Y	-
28	G	-
30	GR	-
32	P	-
33	P	-
36	LG	-

Connector No.	E6
Connector Name	FROM ECU INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH08FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B/Y	-
42	G	-
43	SB	-
44	W	-
46	BG	-

Connector No.	E40
Connector Name	FRONT COMBINATION LAMP LH
Connector Type	RS08FB-FR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B/W	-
2	B/G	-
3	Y	-
4	B/P	-
5	P	-
6	G	-
7	BG	-
8	R	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC LAMP CONTROL UNIT
Connector Type	AEZ43FB-AJZ4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	LBMR
2	V	DIAG-K
3	GR	VDC OFF SW
4	W	BLS
6	G	VDC UP SW
11	Y	CAN-H
15	P	CAN-L
16	B	GROUND
26	W	CAN-L
27	BR	G SENSOR GROUND
29	BG	UZ
30	L	CANH
32	BG	UBVR
33	W	DS FR
34	BG	DP FR
35	Y	VDC TOP POSITION LED
36	L	DP RL
37	R	DS RL
38	V	BRAKE FLUID LEVEL SW
39	G	G SENSOR POWER
42	V	DS RR
43	LG	DP RR
44	SB	VDC TOP POSITION LED
45	W	DP FL
46	R	DS FL
47	B	GROUND

JRMWG7995GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## BCM (BODY CONTROL MODULE)

Connector No.	E59
Connector Name	FRONT COMBINATION LAMP RH
Connector Type	RS08FB-FR



Terminal No.	Color	Wire	Signal Name [Specification]
1	B	-	-
2	BR	R	-
3	FR	-	-
4	BO	-	-
5	R	-	-
6	V	-	-
7	BR	-	-
8	BG	-	-


Connector No.	E62
---------------	-----

Connector Name	INTELLIGENT KEY WARNING BUZZER
Connector Type	FK03FBR-DGY



Terminal No.	Color	Wire	Signal Name [Specification]
1	Y	-	-
3	GR	-	-

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS



Terminal No.	Color	Wire	Signal Name [Specification]
10F	GR	-	-
11F	Y	-	-
14F	LG	-	-
15F	R	-	-
2F	W	-	-
4F	W	-	-
6F	BG	-	-
8F	L	-	-
9F	R	-	-


Connector No.	E110
---------------	------

Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC



Terminal No.	Color	Wire	Signal Name [Specification]
1	L	-	-
2	W	-	-


Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-MZ



Terminal No.	Color	Wire	Signal Name [Specification]
1A	V	-	-
2A	G	-	-
3A	L	-	-
4A	LG	-	-
5A	SB	-	-
6A	Y	-	-
7A	R	-	-
8A	L	-	-


Connector No.	M2
---------------	----

Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



Terminal No.	Color	Wire	Signal Name [Specification]
10B	Y	-	-
1B	R	-	-
3B	P	-	-
4B	G	-	-
5B	BG	-	-
6B	Y	-	-
7B	R	-	-
8B	R	-	-
9B	SB	-	-


Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



Terminal No.	Color	Wire	Signal Name [Specification]
10C	L	-	-
11C	R	-	-
12C	W	-	-
9C	R	-	-
7C	B	-	-
9C	BR	-	-

Connector No.	M14
---------------	-----

Connector Name	LOW THE PRESSURE WARNING CONTROL UNIT
Connector Type	TH32FW-NH



Terminal No.	Color	Wire	Signal Name [Specification]
1	P	-	CANL
2	L	-	CANH
3	BG	-	RR TUNER (SIG)
4	L	-	RL TUNER (SIG)
5	R	-	FR TUNER (SIG)
6	W	-	FL TUNER (SIG)
7	SB	-	RR TUNER (PWR)
8	GR	-	RL TUNER (PWR)
9	R	-	FR TUNER (PWR)
10	LG	-	FL TUNER (PWR)
12	W	-	SW SIG
15	G	-	IGN
19	R	-	RR TUNER (RSSI)
20	BG	-	RL TUNER (RSSI)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

JRMWG7996GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## BCM (BODY CONTROL MODULE)


21	P	FR TUNER (RSS)
22	G	FL TUNER (RSS)
23	GR	RR TUNER (RSS)
24	V	RL TUNER (GND)
25	L	FR TUNER (GND)
26	BR	FL TUNER (GND)
30	G	FLASHER SIG
32	B	GROUND

Connector No.	M20
Connector Name	TRUNK LID OPENER SWITCH
Connector Type	TK04FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-
3	R	-
4	V	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color Of Wire	Signal Name [Specification]
3	R	-
4	B	-
5	B	-
6	L	-
7	V	-
8	G	-


11	G	-
14	P	-
16	Y	-

Connector No.	M29
Connector Name	SECURITY INDICATOR LAMP
Connector Type	TK02FBR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	G	-

Connector No.	M33
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	SB	-
5	L	-
6	B	-
7	V	-
8	BG	-
9	Y	-
10	R	-
11	LG	-
12	P	-
13	BR	-
14	G	-

Connector No.	M40
Connector Name	STEERING LOCK UNIT
Connector Type	TH08FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	SIL 12V (MECHANICAL)
2	Y	SIL (K LINE)
3	L	SIL COND/L10N1
5	B	GND
6	B	GND
7	P	SIL 12V(CPU)
8	R	SIL COND/L10N2


Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	SAB40FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	BATTERY POWER SUPPLY
2	W	IGNITION POWER SUPPLY
3	B	GROUND
4	B	ILLUMINATION GROUND
5	B	GROUND
6	W	METER CONTROL SWITCH GROUND
7	Y	AC/AUTO AMP CONNECTION/ELECTRONIC SERVO
8	SB	AMBIENT SENSOR SIGNAL
9	P	AMBIENT SENSOR SIGNAL
12	L	VEHICLE SPEED SIGNAL (2-PULSE)
13	V	VEHICLE SPEED SIGNAL (8-PULSE)
14	B	OIL PRESSURE SENSOR GROUND
15	R	AIR BAG SIGNAL

16	R	LED HEAD LAMP (RH) WARNING SIGNAL
18	L	FUEL LEVEL SENSOR GROUND
19	R	OIL LEVEL SENSOR GROUND
20	W	OIL LEVEL SENSOR SIGNAL
21	L	CAN-H
22	P	CAN-L
23	LG	ILLUMINATION CONTROL SWITCH SIGNAL (-)
24	BR	ILLUMINATION CONTROL SWITCH SIGNAL (+)
25	G	TRIP A/B RESET SWITCH SIGNAL
26	BG	ENTER SWITCH SIGNAL
27	SB	SELECT SWITCH SIGNAL
28	BR	ALL TERNATOR
29	G	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE)
30	LG	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
31	V	PARKING BRAKE SWITCH SIGNAL
32	V	BRAKE FLUID LEVEL SWITCH SIGNAL
33	L	WASHER LEVEL SWITCH SIGNAL
34	GR	OIL PRESSURE SENSOR POWER
35	W	OIL PRESSURE SENSOR SIGNAL
38	RG	FUEL LEVEL SENSOR SIGNAL
39	Y	LED HEAD LAMP (LH) WARNING SIGNAL
40	V	ILLUMINATION CONTROL

Connector No.	M54
Connector Name	METER CONTROL SWITCH
Connector Type	TH12FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	W	-
3	LG	-
4	R	-
5	V	-
6	BG	-
7	SB	-
8	G	-

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]


## BCM (BODY CONTROL MODULE)

Connector No.	M59
Connector Name	DIODE
Connector Type	24335_C9800




Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	P	-

Connector No.	M60
Connector Name	KEY SLOT
Connector Type	TH12FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	BAT
2	GR	CLOCK
3	L	DATA
5	Y	ILL BATT
6	LG	ILL
7	B	GND
11	R	KEY SWITCH SIGNAL

Connector No.	M73
Connector Name	SET-UP SWITCH
Connector Type	TK24FW-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	VDC TOP POSITION LED
2	R	ILL
3	W	VDC TOP POSITION LED
4	V	VDC GND
5	L	VDC UP SW
6	P	E-SUS R MODE SW SIG
8	LG	E-SUS COMF MODE LAMP SIG
10	G	SAVE MODE LAMP SIGNAL
11	W	R MODE SWITCH SIGNAL
12	GR	VDC DN SW
13	G	HAZARD SW
16	R	R MODE LAMP SIGNAL
17	B	SW GND
18	G	IGN
19	BG	E-SUS R MODE LAMP SIG
23	BR	SAVE MODE SWITCH SIGNAL
24	R	E-SUS COMF MODE SW SIG

Connector No.	M75
Connector Name	INSIDE KEY ANTENNA (INSTRUMENT CENTER)
Connector Type	RK02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	Y	-

Connector No.	M78
Connector Name	CONDENSER
Connector Type	M02FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	G	-

Connector No.	M97
Connector Name	OPTICAL SENSOR
Connector Type	TK03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	POWER
2	P	OUTPUT
3	V	GROUND

Connector No.	M105
Connector Name	TRUNK LID OPENER CANCEL SWITCH
Connector Type	S02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	-
2	B	-

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT (FL)
2	R	POWER WINDOW POWER SUPPLY(BAT)
3	W	POWER WINDOW POWER SUPPLY(BAT)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]


**BCM (BODY CONTROL MODULE)**

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS18FW-CS



Terminal No.	Color	Wire	Signal Name [Specification]
4	R	R	INTERIOR ROOM LAMP POWER SUPPLY
5	G	G	PASSENGER DOOR UNLOCK OUTPUT
6	Y	Y	STEP LAMP
7	V	V	ALL DOOR FUEL LID LOCK OUTPUT
8	G	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
9	R	R	BAT (FUSE)
11	B	B	GND
13	B	B	PUSH-BUTTON IGNITION SW (LL GND)
14	P	P	ACC IND
15	Y	Y	TURN SIGNAL RH (FRONT) OUTPUT
17	W	W	TURN SIGNAL LH (FRONT) OUTPUT
18	EG	EG	ROOM LAMP TIMER CONTROL
19	V	V	


Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS



Terminal No.	Color	Wire	Signal Name [Specification]
20	SB	SB	TURN SIGNAL RH (REAR) OUTPUT
23	G	G	TRUNK LID OPEN OUTPUT
25	V	V	TURN SIGNAL LH (REAR) OUTPUT
30	EG	EG	TRUNK ROOM LAMP OUTPUT

**BCM (BODY CONTROL MODULE)**

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH0FGY-NH



Terminal No.	Color	Wire	Signal Name [Specification]
34	P	P	TRUNK ROOM ANT-
35	L	L	TRUNK ROOM ANT+
38	R	R	REAR BUMPER ANT-
39	ER	ER	REAR BUMPER ANT+
47	Y	Y	IGN RELAY (DRM EGR) CONT
50	R	R	TRUNK ROOM LAMP SW
52	SB	SB	STARTER RELAY CONT
61	W	W	TRUNK LID REQUEST SW
64	EG	EG	KEY WARN BUZZER (ENG ROOM)
67	G	G	TRUNK LID OPENER SW

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH0FBE-NH



Terminal No.	Color	Wire	Signal Name [Specification]
72	R	R	ROOM ANT2-
73	G	G	ROOM ANT2+
74	SB	SB	PASSENGER DOOR ANT-
75	ER	ER	PASSENGER DOOR ANT+
76	V	V	DRIVER DOOR ANT-
77	LG	LG	DRIVER DOOR ANT+
78	Y	Y	ROOM ANT1-
79	BR	BR	ROOM ANT1+
80	GR	GR	IMMOBI ANTENNA CONTROL
81	L	L	IMMOBI ANTENNA SIGNAL

82	R	R	IGN RELAY (F/B) CONT
83	Y	Y	KEYLESS ENTRY RECEIVER COMM
87	BR	BR	COMBI SW INPUT 5
88	V	V	COMBI SW INPUT 3
89	BR	BR	PUSH SW
90	P	P	CAN-L
91	L	L	CAN-H
92	LG	LG	KEY SLOT ILL OUTPUT
93	V	V	ON IND
95	EG	EG	ACC RELAY CONT
96	SB	SB	AT SHIFT SELECTOR POWER SUPPLY
97	L	L	S/L CONDITION 1
98	R	R	S/L CONDITION 2
99	G	G	SHIFT P
100	W	W	PASSENGER DOOR REQUEST SW
101	V	V	DRIVER DOOR REQUEST SW
102	RG	RG	BLOWER FAN MOTOR RELAY CONT
103	LG	LG	KEYLESS ENTRY RECEIVER POWER SUPPLY
106	P	P	S/L UNIT POWER SUPPLY
107	LG	LG	COMBI SW INPUT 1
108	R	R	COMBI SW INPUT 4
109	Y	Y	COMBI SW INPUT 2
110	G	G	HAZARD SW
111	Y	Y	S/L UNIT COMM

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH0FG-NH



Terminal No.	Color	Wire	Signal Name [Specification]
113	P	P	OPTICAL SENSOR
116	SB	SB	STOP LAMP SW 1
118	P	P	STOP LAMP SW 2
119	SB	SB	DR DOOR UNLOCK SENSOR
121	R	R	KEY SLOT SW
123	BR	BR	IGN E/B
124	LG	LG	PASSENGER DOORS SW
128	B	B	DOOR LOCK UNLOCK SW LOCK
129	EG	EG	TRUNK GANSEL SW
131	BR	BR	DOOR LOCK UNLOCK SW UNLOCK

133	W	W	PUSH-BUTTON IGNITION SW ILL POWER
134	GR	GR	LOCK IND
137	L	L	RECEIVER GND
138	Y	Y	REVERSE SENSOR POWER SUPPLY
140	BR	BR	SHIFT NP
141	G	G	SECURITY INDICATOR
142	BG	BG	COMBI SW OUTPUT 5
143	P	P	COMBI SW OUTPUT 1
144	G	G	COMBI SW OUTPUT 2
145	L	L	COMBI SW OUTPUT 3
146	SB	SB	COMBI SW OUTPUT 4
150	GR	GR	DRIVER DOOR SW
151	G	G	REAR WINDOW DEFOGGER RELAY CONT

Connector No.	M126
Connector Name	RESISTOR
Connector Type	M04FL-R



Terminal No.	Color	Wire	Signal Name [Specification]
1	G	G	
2	L	L	

Connector No.	M131
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FB-R



Terminal No.	Color	Wire	Signal Name [Specification]
1	B	B	
2	P	P	
3	W	W	

# BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

BCM (BODY CONTROL MODULE)

4	BR	-	-
5	GR	-	-
6	Y	-	-
7	V	-	-
8	G	-	-

Connector No.	M134
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	JAB04FB




Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	GND
2	Y	SIGNAL OUTPUT
4	LG	BATTERY

Connector No.	M146
Connector Name	INSIDE KEY ANTENNA (CONSOLE)
Connector Type	RK02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	R	-

Connector No.	M203
Connector Name	AV CONTROL UNIT
Connector Type	TH02FM-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
65	R	PARKING BRAKE
67	W	COMPOSITE IMAGE GND
68	R	COMPOSITE IMAGE SIGNAL
71	SHIELD	MICROPHONE GND
72	L	MICROPHONE VCC
73	V	COMM (CONT-DISP)
74	P	CAN-L
75	R	AV COMM (L)
76	R	AV COMM (L)
79	R	ILLUMINATION
80	W	IGNITION
81	BG	REVERSE
82	V	VEHICLE SPEED (8-PULSE)
83	SHIELD	SHIELD
84	B	COMPOSITE SYNCHRONIZING SIGNAL
87	P	MICROPHONE SIGNAL
88	SHIELD	SHIELD
89	SB	COMM (DISP-CONT)
90	L	CAN-H
91	G	AV COMM (H)
92	G	AV COMM (H)

Connector No.	R2
Connector Name	VANITY MIRROR LAMP LH
Connector Type	MCA02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	R	-

Connector No.	R3
Connector Name	VANITY MIRROR LAMP RH
Connector Type	MCA02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	R	-

Connector No.	R6
Connector Name	MAP LAMP
Connector Type	TK06FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	V	-
3	B	-

## Fail-safe

### FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

JRMWG8000GB

INFOID:0000000011786818

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI-SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2557: VEHICLE SPEED	Inhibit steering lock	When normal vehicle speed signals are received from ABS actuator and electric unit (control unit) for 500 ms
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Starter control relay signal</li> <li>• Starter relay status signal</li> </ul>
B2601: SHIFT POSITION	Inhibit steering lock	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> <li>• Shift lever P position switch signal</li> <li>• P range signal (CAN)</li> </ul>
B2602: SHIFT POSITION	Inhibit steering lock	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position</li> <li>• Shift lever P position switch signal: Except P position (Battery voltage)</li> <li>• Vehicle speed: 4 km/h (2.5 MPH) or more</li> </ul>
B2603: SHIFT POSI STATUS	Inhibit steering lock	500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position</li> <li>• Shift lever P position switch signal: Except P position (Battery voltage)</li> <li>• Shift lever P/N position signal: Except P and N positions (0 V)</li> </ul>
B2604: PNP/CLUTCH SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Status 1                             <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Shift lever P/N position signal: P and N position (Battery voltage)</li> <li>- P range signal or N range signal (CAN): ON</li> </ul> </li> <li>• Status 2                             <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Shift lever P/N position signal: Except P and N positions (0 V)</li> <li>- P range signal and N range signal (CAN): OFF</li> </ul> </li> </ul>
B2605: PNP/CLUTCH SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> <li>• Ignition switch is in the ON position                             <ul style="list-style-type: none"> <li>- Power position: IGN</li> <li>- Shift lever P/N position signal: Except P and N positions (0 V)</li> <li>- Interlock/PNP switch signal (CAN): OFF</li> </ul> </li> <li>• Status 2                             <ul style="list-style-type: none"> <li>- Ignition switch is in the ON position</li> <li>- Shift lever P/N position signal: P or N position (Battery voltage)</li> <li>- PNP switch signal (CAN): ON</li> </ul> </li> </ul>
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Steering lock relay signal (Request signal)</li> <li>• Steering lock relay signal (Condition signal)</li> </ul>
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Steering lock relay signal (Request signal)</li> <li>• Steering lock relay signal (Condition signal)</li> </ul>



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Display contents of CONSULT	Fail-safe	Cancellation
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> <li>Starter motor relay control signal</li> <li>Starter relay status signal (CAN)</li> </ul>
B2609: S/L STATUS	<ul style="list-style-type: none"> <li>Inhibit engine cranking</li> <li>Inhibit steering lock</li> </ul>	When the following steering lock conditions agree <ul style="list-style-type: none"> <li>BCM steering lock control status</li> <li>Steering lock condition No. 1 signal status</li> <li>Steering lock condition No. 2 signal status</li> </ul>
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> <li>IGN relay (IPDM E/R) control signal: OFF (Battery voltage)</li> <li>Ignition ON signal (CAN to IPDM E/R): OFF (Request signal)</li> <li>Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)</li> </ul>
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled <ul style="list-style-type: none"> <li>Power position changes to ACC</li> <li>Receives engine status signal (CAN)</li> </ul>
B2612: S/L STATUS	<ul style="list-style-type: none"> <li>Inhibit engine cranking</li> <li>Inhibit steering lock</li> </ul>	When any of the following conditions are fulfilled <ul style="list-style-type: none"> <li>Steering lock unit status signal (CAN) is received normally</li> <li>The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R)</li> </ul>
B2617: BCM	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the steering lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E9: S/L STATUS	<ul style="list-style-type: none"> <li>Inhibit engine cranking</li> <li>Inhibit steering lock</li> </ul>	When BCM transmits the LOCK request signal to steering lock unit, and receives LOCK response signal from steering lock unit, the following conditions are fulfilled <ul style="list-style-type: none"> <li>Steering condition No. 1 signal: LOCK (0 V)</li> <li>Steering condition No. 2 signal: LOCK (Battery voltage)</li> </ul>

## DTC Inspection Priority Chart

INFOID:000000011786819

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> <li>U1000: CAN COMM</li> <li>U1010: CONTROL UNIT (CAN)</li> </ul>
3	<ul style="list-style-type: none"> <li>B2190: NATS ANTENNA AMP</li> <li>B2191: DIFFERENCE OF KEY</li> <li>B2192: ID DISCORD BCM-ECM</li> <li>B2193: CHAIN OF BCM-ECM</li> <li>B2195: ANTI-SCANNING</li> </ul>

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Priority	DTC
4	<ul style="list-style-type: none"> <li>• B2013: ID DISCORD BCM-S/L</li> <li>• B2014: CHAIN OF S/L-BCM</li> <li>• B2553: IGNITION RELAY</li> <li>• B2555: STOP LAMP</li> <li>• B2556: PUSH-BTN IGN SW</li> <li>• B2557: VEHICLE SPEED</li> <li>• B2560: STARTER CONT RELAY</li> <li>• B2601: SHIFT POSITION</li> <li>• B2602: SHIFT POSITION</li> <li>• B2603: SHIFT POSI STATUS</li> <li>• B2604: PNP/CLUTCH SW</li> <li>• B2605: PNP/CLUTCH SW</li> <li>• B2606: S/L RELAY</li> <li>• B2607: S/L RELAY</li> <li>• B2608: STARTER RELAY</li> <li>• B2609: S/L STATUS</li> <li>• B260A: IGNITION RELAY</li> <li>• B260B: STEERING LOCK UNIT</li> <li>• B260C: STEERING LOCK UNIT</li> <li>• B260D: STEERING LOCK UNIT</li> <li>• B260F: ENG STATE SIG LOST</li> <li>• B2612: S/L STATUS</li> <li>• B2614: BCM</li> <li>• B2615: BCM</li> <li>• B2616: BCM</li> <li>• B2617: BCM</li> <li>• B2618: BCM</li> <li>• B2619: BCM</li> <li>• B261A: PUSH-BTN IGN SW</li> <li>• B261E: VEHICLE TYPE</li> <li>• B26E9: S/L STATUS</li> <li>• B26EA: KEY REGISTRATION</li> <li>• U0415: VEHICLE SPEED</li> </ul>
5	<ul style="list-style-type: none"> <li>• B2621: INSIDE ANTENNA</li> <li>• B2622: INSIDE ANTENNA</li> <li>• B2623: INSIDE ANTENNA</li> </ul>
6	B26E7: TPMS CAN COMM

## DTC Index

INFOID:0000000011786820

### NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [PCS-44, "COMMON ITEM : CONSULT Function \(BCM - COMMON ITEM\)"](#).

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warn- ing lamp ON	Reference page
No DTC is detected. Further testing may be required.	—	—	—	—
U1000: CAN COMM	—	—	—	<a href="#">BCS-36</a>
U1010: CONTROL UNIT (CAN)	—	—	—	<a href="#">BCS-37</a>
U0415: VEHICLE SPEED	—	—	—	<a href="#">BCS-38</a>
B2013: ID DISCORD BCM-S/L	×	×	—	<a href="#">SEC-48</a>
B2014: CHAIN OF S/L-BCM	×	×	—	<a href="#">SEC-49</a>
B2190: NATS ANTENNA AMP	×	—	—	<a href="#">SEC-40</a>

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warn- ing lamp ON	Reference page
B2191: DIFFERENCE OF KEY	×	—	—	<a href="#">SEC-43</a>
B2192: ID DISCORD BCM-ECM	×	—	—	<a href="#">SEC-44</a>
B2193: CHAIN OF BCM-ECM	×	—	—	<a href="#">SEC-46</a>
B2195: ANTI-SCANNING	×	—	—	<a href="#">SEC-47</a>
B2553: IGNITION RELAY	—	×	—	<a href="#">PCS-50</a>
B2555: STOP LAMP	—	×	—	<a href="#">SEC-52</a>
B2556: PUSH-BTN IGN SW	—	×	×	<a href="#">SEC-54</a>
B2557: VEHICLE SPEED	×	×	×	<a href="#">SEC-56</a>
B2560: STARTER CONT RELAY	×	×	×	<a href="#">SEC-57</a>
B2562: LOW VOLTAGE	—	×	—	<a href="#">BCS-39</a>
B2601: SHIFT POSITION	×	×	×	<a href="#">SEC-58</a>
B2602: SHIFT POSITION	×	×	×	<a href="#">SEC-61</a>
B2603: SHIFT POSI STATUS	×	×	×	<a href="#">SEC-63</a>
B2604: PNP/CLUTCH SW	×	×	×	<a href="#">SEC-65</a>
B2605: PNP/CLUTCH SW	×	×	×	<a href="#">SEC-67</a>
B2606: S/L RELAY	×	×	×	<a href="#">SEC-69</a>
B2607: S/L RELAY	×	×	×	<a href="#">SEC-70</a>
B2608: STARTER RELAY	×	×	×	<a href="#">SEC-72</a>
B2609: S/L STATUS	×	×	×	<a href="#">SEC-74</a>
B260A: IGNITION RELAY	×	×	×	<a href="#">PCS-52</a>
B260B: STEERING LOCK UNIT	—	×	×	<a href="#">SEC-78</a>
B260C: STEERING LOCK UNIT	—	×	×	<a href="#">SEC-79</a>
B260D: STEERING LOCK UNIT	—	×	×	<a href="#">SEC-80</a>
B260F: ENG STATE SIG LOST	×	×	×	<a href="#">SEC-81</a>
B2612: S/L STATUS	×	×	×	<a href="#">SEC-84</a>
B2614: BCM	—	×	×	<a href="#">PCS-54</a>
B2615: BCM	—	×	×	<a href="#">PCS-56</a>
B2616: BCM	—	×	×	<a href="#">PCS-58</a>
B2617: BCM	×	×	×	<a href="#">SEC-88</a>
B2618: BCM	×	×	×	<a href="#">PCS-60</a>
B2619: BCM	×	×	×	<a href="#">SEC-90</a>
B261A: PUSH-BTN IGN SW	—	×	×	<a href="#">SEC-91</a>
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	<a href="#">SEC-93</a>
B2621: INSIDE ANTENNA	—	×	—	<a href="#">DLK-56</a>
B2622: INSIDE ANTENNA	—	×	—	<a href="#">DLK-58</a>
B2623: INSIDE ANTENNA	—	×	—	<a href="#">DLK-60</a>
B26E7: TPMS CAN COMM	—	—	—	<a href="#">BCS-40</a>
B26E9: S/L STATUS	×	×	× (Turn ON for 15 seconds)	<a href="#">SEC-82</a>
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	<a href="#">SEC-83</a>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011488549

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

**WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precautions for Removing Battery Terminal

INFOID:000000011863849

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

**NOTE:**

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


**NOTE:**

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

**NOTE:**

The removal of 12V battery may cause a DTC detection error.

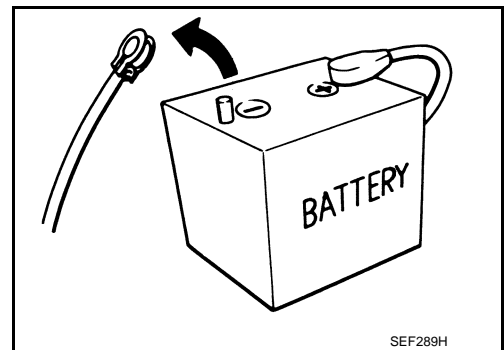

# PRECAUTIONS


< PRECAUTION >

[POWER DISTRIBUTION SYSTEM]

## Precaution for Procedure without Cowl Top Cover

INFOID:000000011488550

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

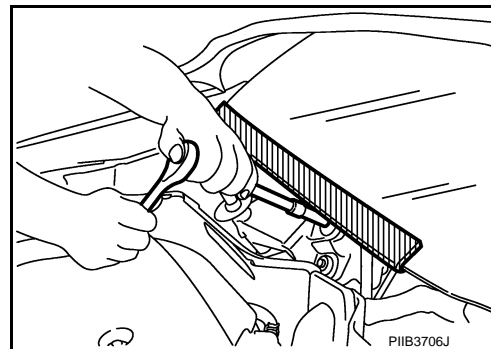

## Precautions Necessary for Steering Wheel Rotation After Battery Disconnection

INFOID:000000011488551

### CAUTION:

Comply with the following cautions to prevent any error and malfunction.

- Before removing and installing any control units, first turn the ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

For vehicle with steering lock unit, if the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the operation procedure below before starting the repair operation.

### OPERATION PROCEDURE

1. Connect both battery cables.

#### NOTE:

Supply power using jumper cables if battery is discharged.

2. Turn the ignition switch to ACC position.  
(At this time, the steering lock will be released.)
3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
4. Perform the necessary repair operation.
5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the ignition switch is turned to LOCK position.)
6. Perform self-diagnosis check of all control units using CONSULT.

## Precaution for Battery Service

INFOID:000000011488552

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## SYMPTOM DIAGNOSIS

### PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE

#### Description

INFOID:000000011488553

Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

#### NOTE:

The engine start function, door lock function, power distribution system and NATS-IVIS/NVIS in the Intelligent Key system are closely related to each other regarding control. The vehicle security function can operate only when the door lock and power distribution system are operating normally.

#### Conditions of Vehicle (Operating Conditions)

- "ENGINE START BY I-KEY" in "WORK SUPPORT" is ON when setting on CONSULT.
- Intelligent Key is not inserted in key slot.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

#### Diagnosis Procedure

INFOID:000000011488554

#### 1.PERFORM WORK SUPPORT

Perform "INSIDE ANT DIAGNOSIS" on "Work Support" of "INTELLIGENT KEY".

Refer to [DLK-52. "INTELLIGENT KEY : CONSULT Function \(BCM - INTELLIGENT KEY\)".](#)

>> GO TO 2.

#### 2.PERFORM SELF DIAGNOSTIC RESULT

Perform Self Diagnostic result of "BCM".

Is DTC detected?

YES >> Refer to [DLK-56. "DTC Logic"](#) (instrument center), refer to [DLK-58. "DTC Logic"](#) (console), refer to [DLK-60. "DTC Logic"](#) (luggage room).

NO >> GO TO 3.

#### 3.CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.

Refer to [PCS-64. "Component Function Check"](#).

Is the inspection normal?

YES >> GO TO 4.

NO >> Repair or replace malfunctioning parts.

#### 4.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection normal?

YES >> Check intermittent incident. Refer to [GI-39. "Intermittent Incident"](#).

NO >> GO TO 1.

# PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATE

< SYMPTOM DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATE

### Diagnosis Procedure

INFOID:000000011488555

#### 1. CHECK PUSH-BUTTON IGNITION SWITCH OPERATION

Check push-button ignition switch operation.

Refer to [PCS-40, "System Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Refer to [PCS-118, "Description"](#).

#### 2. CHECK PUSH-BUTTON IGNITION SWITCH INDICATOR

Check push-button ignition switch indicator.

Refer to [PCS-67, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

#### 3. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-39, "Intermittent Incident"](#).

NO >> GO TO 1.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

PCS

N  
O  
P

# PUSH-BUTTON IGNITION SWITCH

< REMOVAL AND INSTALLATION >

[POWER DISTRIBUTION SYSTEM]

## REMOVAL AND INSTALLATION

### PUSH-BUTTON IGNITION SWITCH


#### Removal and Installation

INFOID:000000011488556

#### REMOVAL

1. Remove control device. Refer to [TM-375. "Removal and Installation"](#).
2. Disconnect push-button ignition switch connector (2).
3. Remove the push-button ignition switch fixing pawl, and then remove push-button ignition switch (1).

 : Pawl

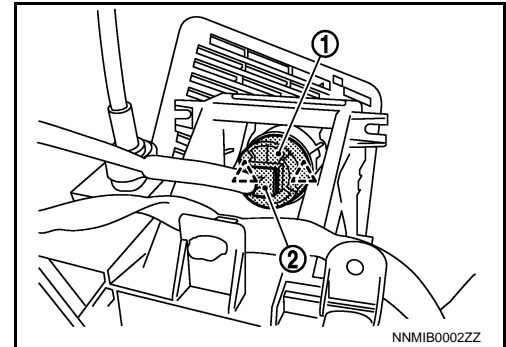

#### INSTALLATION

Install in the reverse order of removal.