

SECTION **DEF**
DEFOGGER

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

CONTENTS

PRECAUTION	3	REAR WINDOW DEFOGGER	12
PRECAUTIONS	3	REAR WINDOW DEFOGGER : CONSULT Function (BCM - REAR DEFOGGER)	12
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	DIAGNOSIS SYSTEM (IPDM E/R)	14
Precaution for Procedure without Cowl Top Cover.....	3	WITH INTELLIGENT KEY	14
Precautions for Removing of Battery Terminal	4	WITH INTELLIGENT KEY : Diagnosis Description	14
SYSTEM DESCRIPTION	5	WITH INTELLIGENT KEY : CONSULT Function (IPDM E/R)	16
COMPONENT PARTS	5	WITHOUT INTELLIGENT KEY	18
Component Parts Location	5	WITHOUT INTELLIGENT KEY : Diagnosis Description	18
Component Description	5	WITHOUT INTELLIGENT KEY : CONSULT Function (IPDM E/R)	20
SYSTEM	7	ECU DIAGNOSIS INFORMATION	22
WITH AUTO A/C	7	BCM, IPDM E/R	22
WITH AUTO A/C : System Diagram	7	List of ECU Reference	22
WITH AUTO A/C : System Description	7	BASIC INSPECTION	23
WITHOUT AUTO A/C	7	DIAGNOSIS AND REPAIR WORK FLOW	23
WITHOUT AUTO A/C : System Diagram	7	Work Flow	23
WITHOUT AUTO A/C : System Description	8	DTC/CIRCUIT DIAGNOSIS	24
DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)	9	REAR WINDOW DEFOGGER SWITCH	24
COMMON ITEM	9	WITH AUTO A/C	24
COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	9	WITH AUTO A/C : Description	24
REAR WINDOW DEFOGGER	10	WITH AUTO A/C : Component Function Check	24
REAR WINDOW DEFOGGER : CONSULT Function (BCM - REAR DEFOGGER)	10	WITH AUTO A/C : Diagnosis Procedure	24
DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM)	12	WITHOUT AUTO A/C	24
COMMON ITEM	12	WITHOUT AUTO A/C : Description	24
COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	12	WITHOUT AUTO A/C : Component Function Check	24
		WITHOUT AUTO A/C : Diagnosis Procedure	24
		WITHOUT AUTO A/C : Component Inspection	25

REAR WINDOW DEFOGGER RELAY	27	Description	41
Description	27	Diagnosis Procedure	41
Component Function Check	27		
Diagnosis Procedure	27		
REAR WINDOW DEFOGGER	28	REAR WINDOW DEFOGGER DOES NOT OPERATE BUT BOTH DOOR MIRROR DEFOGGERS OPERATE	42
Description	28	Diagnosis Procedure	42
Component Function Check	28		
Diagnosis Procedure	28	DOOR MIRROR DEFOGGER DOES NOT OPERATE	43
Component Inspection	29		
DOOR MIRROR DEFOGGER	31	BOTH SIDES	43
Description	31	BOTH SIDES : Description	43
Component Function Check	31	BOTH SIDES : Diagnosis Procedure	43
Diagnosis Procedure	31	DRIVER SIDE	43
DRIVER SIDE DOOR MIRROR DEFOGGER ...	32	DRIVER SIDE : Description	43
Description	32	DRIVER SIDE : Diagnosis Procedure	43
Component Function Check	32	PASSENGER SIDE	43
Diagnosis Procedure	32	PASSENGER SIDE : Description	43
PASSENGER SIDE DOOR MIRROR DEFOGGER	33	PASSENGER SIDE : Diagnosis Procedure	43
Description	33	ON IS NOT DISPLAYED WHEN PRESSING REAR WINDOW DEFOGGER SWITCH BUT IT IS OPERATED	45
Component Function Check	33	Diagnosis Procedure	45
Diagnosis Procedure	33	REAR WINDOW DEFOGGER INDICATOR DOES NOT ILLUMINATE	46
REAR WINDOW DEFOGGER FEEDBACK SIGNAL	34	Diagnosis Procedure	46
Description	34	REMOVAL AND INSTALLATION	47
Component Function Check	34	FILAMENT	47
Diagnosis Procedure	34	Inspection and Repair	47
REAR WINDOW DEFOGGER SYSTEM	35	CONDENSER	49
Wiring Diagram - DEFOGGER CONTROL SYSTEM -	35	Exploded View	49
SYMPTOM DIAGNOSIS	41	Removal and Installation	49
ALL DEFOGGER SYSTEMS DO NOT OPERATE	41		

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009754236

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:


Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

INFOID:000000010168230

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

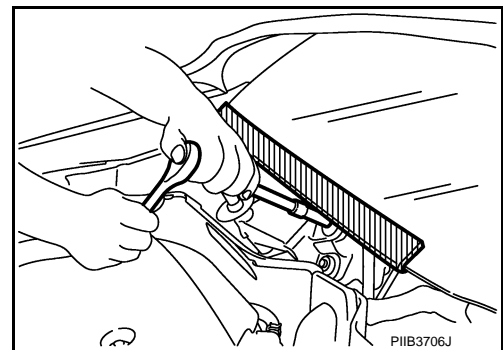

PRECAUTIONS

< PRECAUTION >

Precautions for Removing of Battery Terminal

INFOID:000000010168232

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

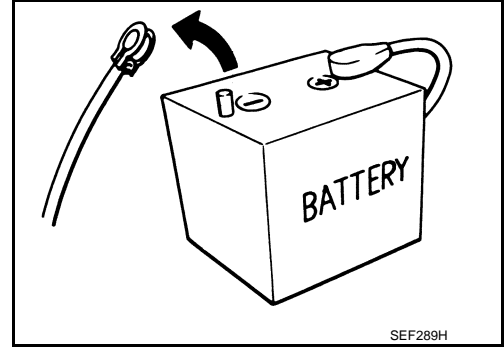

COMPONENT PARTS


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:000000009754237

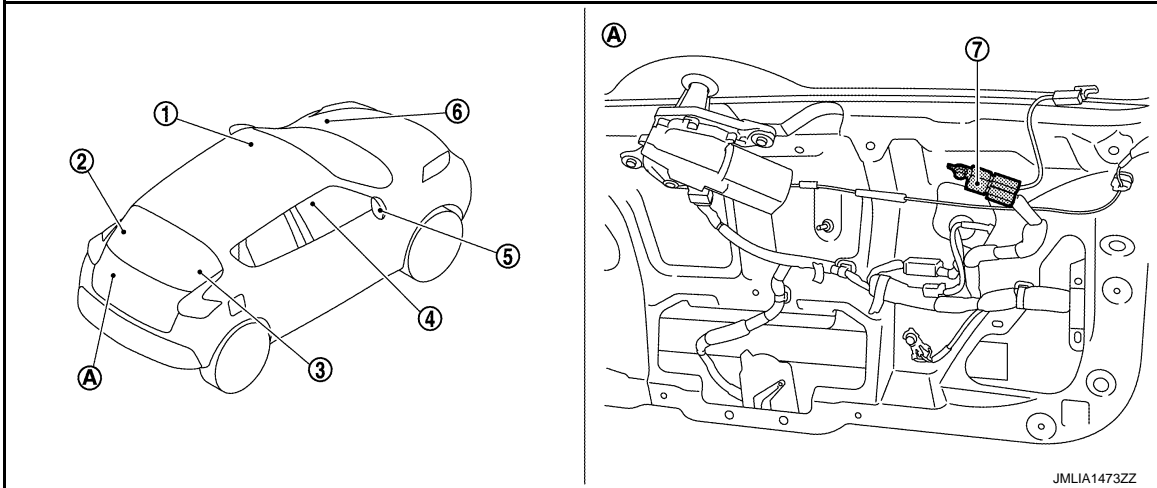

- | | | |
|--|---|--|
| <p>1. BCM
Refer to BCS-6. "BODY CONTROL SYSTEM : Component Parts Location" (With Intelligent Key system) or BCS-93. "BODY CONTROL SYSTEM : Component Parts Location" (Without Intelligent Key system).</p> <p>4. Multidisplay unit*1
A/C control*2
(Rear window defogger switch)</p> <p>7. Condenser</p> | <p>2. Rear window defogger connector</p> <p>5. Door mirror defogger*3</p> | <p>3. Rear window defogger connector</p> <p>6. IPDM E/R
Refer to PCS-5. "Component Parts Location" (With Intelligent Key system) or PCS-37. "Component Parts Location" (Without Intelligent Key system).</p> |
|--|---|--|

*1:With automatic A/C

*2:With manual A/C

*3:For models with door mirror defogger

Component Description

INFOID:000000009754238

BCM	<ul style="list-style-type: none"> Transmits rear window defogger control signal to IPDM E/R via CAN communication Performs the timer control of rear window defogger
IPDM E/R	<ul style="list-style-type: none"> Rear window defogger relay is installed. Receives rear window defogger control signal from BCM via CAN communication. Controls rear window defogger relay.
<ul style="list-style-type: none"> Multidisplay unit*1 A/C control*2 	<ul style="list-style-type: none"> The rear window defogger switch is installed Turns the indicator lamp ON when detecting the operation of rear window defogger
Rear window defogger switch	<ul style="list-style-type: none"> Rear window defogger and door mirror defogger*3 are operated by turning the rear window defogger switch ON. The indicator lamp in the rear window defogger illuminates when the rear window defogger is operating.

A
B
C
D
E
F
G
H
I
J
K

DEF

M
N
O
P

COMPONENT PARTS

< SYSTEM DESCRIPTION >

Rear window defogger relay	Operates rear window defogger and door mirror defogger* ³ with IPDM E/R control.
Rear window defogger	Heats the heating wire with the power supply from the rear window defogger relay to prevent the rear window from fogging up.
Door mirror defogger* ³	Heats the heating wire with the power supply from the rear window defogger relay to prevent the door mirror from fogging up.

*1:With automatic A/C

*2:With manual A/C

*3:For models with door mirror defogger


SYSTEM

< SYSTEM DESCRIPTION >

SYSTEM

WITH AUTO A/C

WITH AUTO A/C : System Diagram

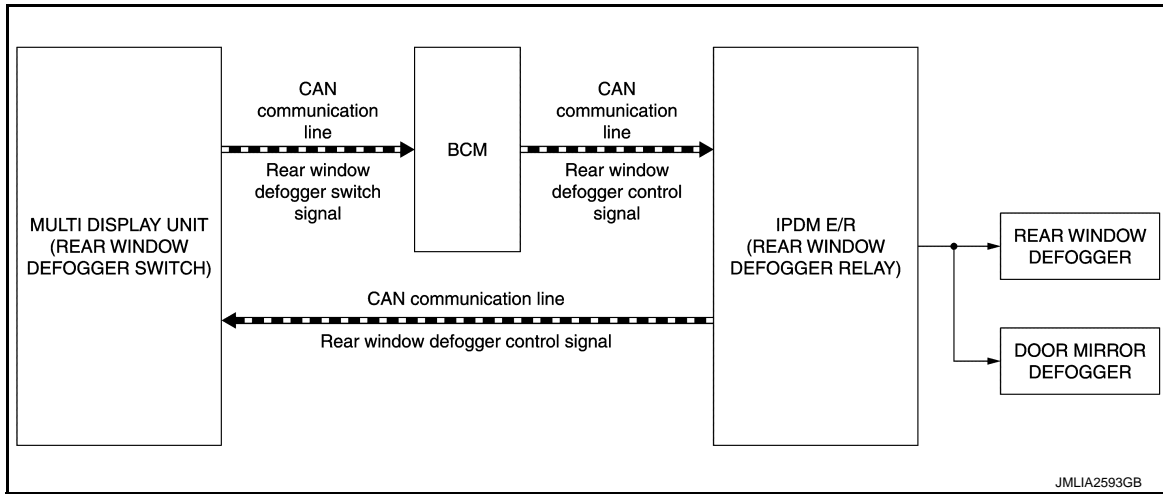

WITH AUTO A/C : System Description

INFOID:000000009754240

OPERATION DESCRIPTION

- BCM detects that the rear window defogger switch turns ON while ignition switch is ON, and then transmits the rear window defogger control signal to IPDM E/R via CAN communication for approximately 15 minutes.
 - IPDM E/R turns rear window defogger relay ON when it receives rear window defogger control signal.
 - The power is supplied to rear window defogger and door mirror defogger* when the rear window defogger relay turns ON.
 - When rear window defogger is activated, indicator lamp on rear window defogger switch turns ON.
- *: For models with door mirror defogger.


TIMER FUNCTION

- BCM transmits rear window defogger control signal to IPDM E/R for approximately 15 minutes when rear window defogger switch is turns ON while ignition switch is ON. Then, IPDM E/R activates rear window defogger and door mirror defogger*.
- The timer is cancelled if the rear window defogger switch is pressed again during timer operation. BCM stops the output of rear window defogger control signal. The same action occurs during timer operation if the ignition switch is OFF.

*: For models with door mirror defogger.

WITHOUT AUTO A/C

WITHOUT AUTO A/C : System Diagram

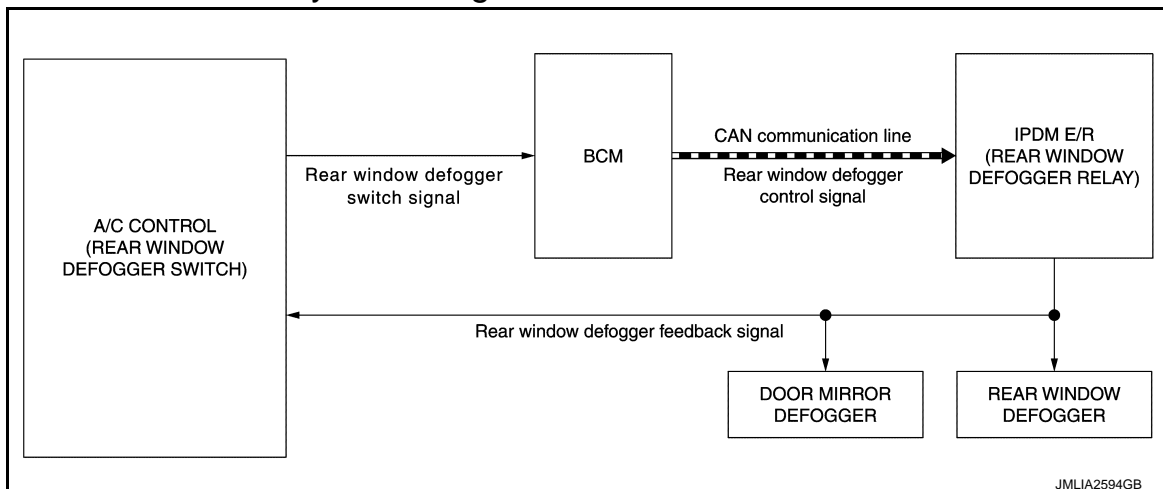

SYSTEM

< SYSTEM DESCRIPTION >

WITHOUT AUTO A/C : System Description

INFOID:000000009754242

OPERATION DESCRIPTION

- BCM detects that rear window defogger switch turns ON while ignition switch is ON, and then transmits rear window defogger control signal to IPDM E/R via CAN communication for approximately 15 minutes.
- IPDM E/R turns rear window defogger relay ON when it receives rear window defogger control signal.
- The power is supplied to rear window defogger and door mirror defogger* when rear window defogger relay turns ON.
- When rear window defogger is activated, indicator lamp on rear window defogger switch turns ON.

*: For models with door mirror defogger.

TIMER FUNCTION

- BCM transmits rear window defogger control signal to IPDM E/R for approximately 15 minutes when the rear window defogger switch is turns ON while ignition switch is ON. Then, IPDM E/R activates rear window defogger and door mirror defogger*.
- The timer is cancelled if the rear window defogger switch is pressed again during timer operation. BCM stops the output of rear window defogger control signal. The same action occurs during timer operation if the ignition switch is OFF.

*: For models with door mirror defogger.

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM) COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000010284033

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> Read and save the vehicle specification. Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
Air conditioning system	AIR CONDITONER		×	×*
<ul style="list-style-type: none"> Intelligent Key system Engine start system 	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NVIS - NATS	IMMU	×	×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door open	TRUNK		×	
Theft warning alarm	THEFT ALM	×	×	×
RAP	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	AIR PRESSURE MONITOR	×	×	×

NOTE:

*: For models with automatic A/C, this diagnosis mode is not used.

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description	
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected	
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected	
Vehicle Condition	SLEEP>LOCK	Power position status of the moment a particular DTC is detected	While turning BCM status from low power consumption mode to normal mode (Power position is "LOCK".)
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power position is "OFF".)
	LOCK>ACC		While turning power position from "LOCK"* to "ACC"
	ACC>ON		While turning power position from "ACC" to "IGN"
	RUN>ACC		While turning power position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)
	CRANK>RUN		While turning power position from "CRANKING" to "RUN" (From cranking up the engine to run it)
	RUN>URGENT		While turning power position from "RUN" to "ACC" (Emergency stop operation)
	ACC>OFF		While turning power position from "ACC" to "OFF"
	OFF>LOCK		While turning power position from "OFF" to "LOCK"*
	OFF>ACC		While turning power position from "OFF" to "ACC"
	ON>CRANK		While turning power position from "IGN" to "CRANKING"
	OFF>SLEEP		While turning BCM status from normal mode (Power position is "OFF".) to low power consumption mode
	LOCK>SLEEP		While turning BCM status from normal mode (Power position is "LOCK".) to low power consumption mode
	LOCK		Power position is "LOCK"*
	OFF		Power position is "OFF" (Ignition switch OFF)
	ACC		Power position is "ACC" (Ignition switch ACC)
	ON		Power position is "IGN" (Ignition switch ON with engine stopped)
ENGINE RUN	Power position is "RUN" (Ignition switch ON with engine running)		
CRANKING	Power position is "CRANKING" (At engine cranking)		
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> • The number is 0 when a malfunction is detected now. • The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. • The number is fixed to 39 until the self-diagnosis results are erased if it is over 39. 	

NOTE:

*: Power position shifts to "LOCK" from "OFF", when ignition switch is in the OFF position, selector lever is in the P position (A/T models and CVT models), and any of the following conditions are met.

- Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power position shifts to "ACC" when the push-button ignition switch (push switch) is pushed at "LOCK".

REAR WINDOW DEFOGGER

REAR WINDOW DEFOGGER : CONSULT Function (BCM - REAR DEFOGGER)

INFOID:000000009754244

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

Monitor Item	Description
REAR DEF SW	Displays "Press (ON)/other (OFF)" status determined with the rear window defogger switch.
PUSH SW	Indicates [ON/OFF] condition of push switch.

ACTIVE TEST

Test Item	Description
REAR DEFOGGER	Rear window defogger operates when "ON" on CONSULT screen is touched.

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

DEF

DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM) COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000010284034

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> • Read and save the vehicle specification. • Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp control	INT LAMP	×	×	×
Remote keyless entry system	MULTI REMOTE ENT	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER		×	×
Air conditioning system	AIR CONDITONER		×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NATS	IMMU	×		×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door open	TRUNK		×	
Theft warning alarm	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	×
Signal buffer system	SIGNAL BUFFER		×	×
Panic alarm	PANIC ALARM			×
TPMS	AIR PRESSUE MONITOR	×	×	×

REAR WINDOW DEFOGGER

REAR WINDOW DEFOGGER : CONSULT Function (BCM - REAR DEFOGGER)

INFOID:000000009754246

DATA MONITOR

DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Description
REAR DEF SW	Displays "Press (ON)/other (OFF)" status determined with the rear window defogger switch.
IGN ON SW	Indicates [ON/OFF] condition of ignition switch in ON position.
ACC ON SW	Indicates [ON/OFF] condition of ignition switch ACC position.

ACTIVE TEST

Test Item	Description
REAR DEFOGGER	Rear window defogger operates when "ON" on CONSULT screen is touched.

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

DEF

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (IPDM E/R) WITH INTELLIGENT KEY

WITH INTELLIGENT KEY : Diagnosis Description

INFOID:000000009754247

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Rear window defogger
- Front wiper motor
- Parking lamp
- License plate lamp
- Tail lamp
- Side marker lamp
- Front fog lamp
- Headlamp (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan

Operation Procedure

CAUTION:

Wiper arm interferes with hood when wiper is operated while wiper arm is in the raised position. Always perform auto active test without setting wiper arm in the raised position. Always pour water on front windshield glass in advance to auto active test so that damage on front windshield glass surface is prevented.

1. Turn the ignition switch OFF.
2. Turn the ignition switch ON, and within 20 seconds, press the driver door switch 10 times. Then turn the ignition switch OFF.

CAUTION:

Close passenger door.

3. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.

CAUTION:

Engine starts when ignition switch is turned ON while brake pedal is depressed.

4. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:

- When auto active test mode has to be cancelled halfway through test, turn the ignition switch OFF.
- When auto active test is not activated, door switch may be the cause. Check door switch. Refer to [DLK-81, "Component Function Check"](#).

Inspection in Auto Active Test Mode


When auto active test mode is actuated, the following operation sequence is repeated 3 times.

Operation sequence	Inspection location	Operation
1	Rear window defogger	10 seconds
2	Front wiper motor	LO for 5 seconds → HI for 5 seconds
3	<ul style="list-style-type: none">• Parking lamp• License plate lamp• Tail lamp• Side marker lamp• Front fog lamp	10 seconds
4	Headlamp	LO for 10 seconds → HI ON ↔ OFF 5 times
5	A/C compressor (magnet clutch)	ON ↔ OFF 5 times
6	Cooling fan	50% duty for 5 seconds → 100% duty for 5 seconds

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Concept of auto active test

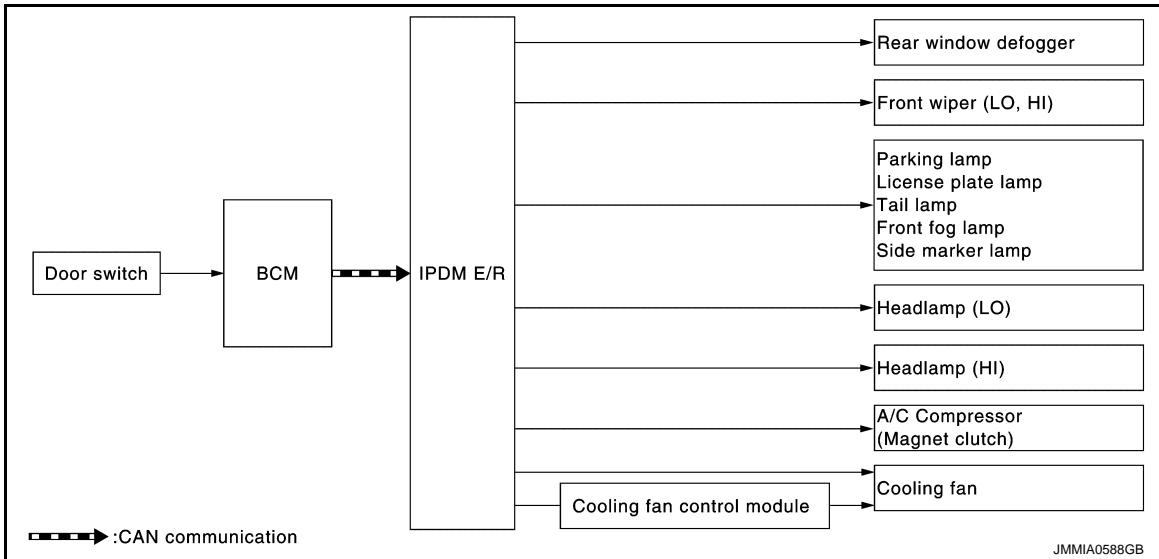

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Rear window defogger does not operate	Perform auto active test. Does the rear window defogger operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> • Rear window defogger • Rear window defogger ground circuit • Harness or connector between IPDM E/R and rear window defogger • IPDM E/R
Any of the following components do not operate <ul style="list-style-type: none"> • Parking lamp • License plate lamp • Tail lamp • Side marker lamp • Front fog lamp • Headlamp (HI, LO) • Front wiper motor 	Perform auto active test. Does the applicable system operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> • Lamp or motor • Lamp or motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES <ul style="list-style-type: none"> • A/C amp. signal input circuit • CAN communication signal between A/C amp. and ECM • CAN communication signal between ECM and IPDM E/R
		NO <ul style="list-style-type: none"> • Magnet clutch • Harness or connector between IPDM E/R and magnet clutch • IPDM E/R

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Symptom	Inspection contents	Possible cause
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES <ul style="list-style-type: none"> ECM signal input circuit CAN communication signal between ECM and IPDM E/R
		NO <ul style="list-style-type: none"> Harness or connector between IPDM E/R and cooling fan relay Harness or connector between IPDM E/R and cooling fan control module. Harness or connector between cooling fan control module and cooling fan motor Cooling fan motor Cooling fan relay Cooling fan control module IPDM E/R

WITH INTELLIGENT KEY : CONSULT Function (IPDM E/R)

INFOID:000000009754248

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC RESULT

Refer to [PCS-24, "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item [Unit]	MAIN SIGNALS	Description
RAD FAN REQ [%]	×	Displays the value of the cooling fan speed request signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	MAIN SIGNALS	Description
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the ignition power supply (M/T models) or shift position (CVT models) judged by IPDM E/R.
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.
ST/INHI RLY [Off/ ST ON/INHI ON/UNKWN]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.
DETENT SW [Off/On]		Displays the status of the CVT shift selector (detention switch) judged by IPDM E/R.
S/L RLY -REQ [Off/On]		NOTE: This item is indicated, but not monitored.
S/L STATE [LOCK/UNLK/UNKWN]		NOTE: This item is indicated, but not monitored.
DTRL REQ [Off/On]		Displays the status of the daytime running light request signal received from BCM via CAN communication. NOTE: This item is monitored only for the except for NISMO models.
OIL P SW [Open/Close]		NOTE: This item is indicated, but not monitored.
HOOD SW [Off/On]		NOTE: This item is indicated, but not monitored.
HL WASHER REQ [Off/On]		NOTE: This item is indicated, but not monitored.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder request signal received from BCM via CAN communication.

ACTIVE TEST

Test item

Test item	Operation	Description
HORN	On	Operates horn relay for 20 ms.
REAR DEFOGGER	Off	OFF
	On	Operates the rear window defogger relay.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.
MOTOR FAN	1	OFF
	2	Transmits 50% pulse duty signal (PWM signal) to the cooling fan control module.
	3	Transmits 75% pulse duty signal (PWM signal) to the cooling fan control module.
	4	Transmits 100% pulse duty signal (PWM signal) to the cooling fan control module.
HEAD LAMP WASHER	On	NOTE: This item is indicated, but cannot be tested.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Test item	Operation	Description
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

WITHOUT INTELLIGENT KEY

WITHOUT INTELLIGENT KEY : Diagnosis Description

INFOID:000000009754249

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Rear window defogger
- Front wiper motor
- Parking lamp
- License plate lamp
- Tail lamp
- Side marker lamp
- Front fog lamp
- Headlamp (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan

Operation Procedure

CAUTION:

Wiper arm interferes with hood when wiper is operated while wiper arm is in the raised position. Always perform auto active test without setting wiper arm in the raised position. Always pour water on front windshield glass in advance to auto active test so that damage on front windshield glass surface is prevented.

1. Turn the ignition switch OFF.
2. Turn the ignition switch ON, and within 20 seconds, press the driver door switch 10 times. Then turn the ignition switch OFF.

CAUTION:

Close passenger door.

3. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.

CAUTION:

Engine starts when ignition switch is turned ON while brake pedal is depressed.

4. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:

- When auto active test mode has to be cancelled halfway through test, turn the ignition switch OFF.
- When auto active test is not activated, door switch may be the cause. Check door switch. Refer to [DLK-220, "Component Function Check"](#).

Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following operation sequence is repeated 3 times.


Operation sequence	Inspection location	Operation
1	Rear window defogger	10 seconds
2	Front wiper motor	LO for 5 seconds → HI for 5 seconds

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Operation sequence	Inspection location	Operation
3	<ul style="list-style-type: none"> • Parking lamp • License plate lamp • Tail lamp • Side marker lamp • Front fog lamp 	10 seconds
4	Headlamp	LO for 10 seconds → HI ON ↔ OFF 5 times
5	A/C compressor (magnet clutch)	ON ↔ OFF 5 times
6	Cooling fan	50% duty for 5 seconds → 100% duty for 5 seconds

Concept of auto active test

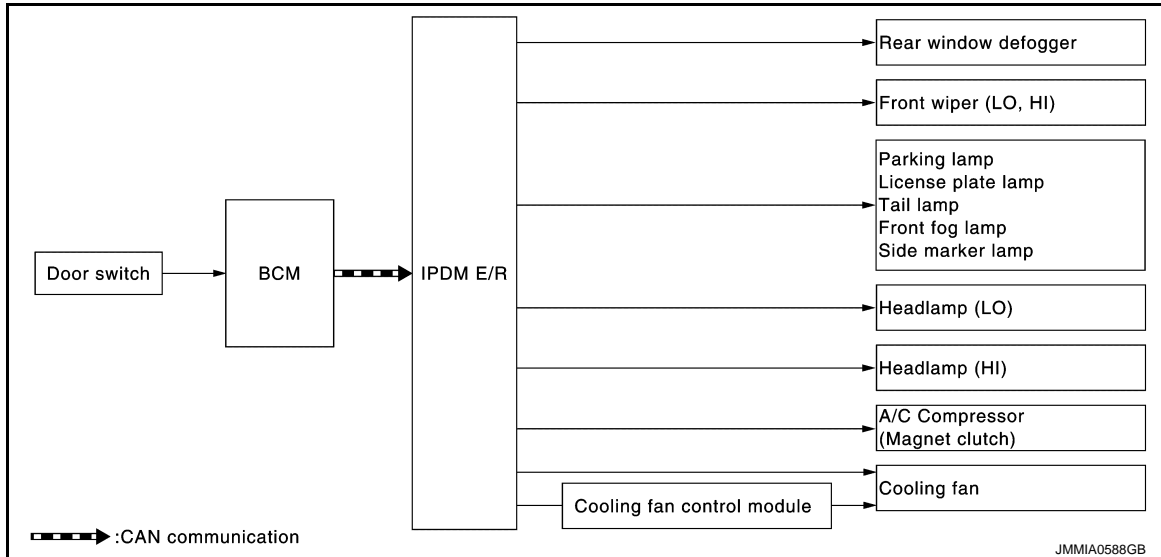

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Rear window defogger does not operate	Perform auto active test. Does the rear window defogger operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> • Rear window defogger • Rear window defogger ground circuit • Harness or connector between IPDM E/R and rear window defogger • IPDM E/R
Any of the following components do not operate <ul style="list-style-type: none"> • Parking lamp • License plate lamp • Tail lamp • Side marker lamp • Front fog lamp • Headlamp (HI, LO) • Front wiper motor 	Perform auto active test. Does the applicable system operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> • Lamp or motor • Lamp or motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Symptom	Inspection contents		Possible cause
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES	<ul style="list-style-type: none"> A/C amp. signal input circuit CAN communication signal between A/C amp. and ECM CAN communication signal between ECM and IPDM E/R
		NO	<ul style="list-style-type: none"> Magnet clutch Harness or connector between IPDM E/R and magnet clutch IPDM E/R
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES	<ul style="list-style-type: none"> ECM signal input circuit CAN communication signal between ECM and IPDM E/R
		NO	<ul style="list-style-type: none"> Harness or connector between IPDM E/R and cooling fan relay Harness or connector between IPDM E/R and cooling fan control module. Harness or connector between cooling fan control module and cooling fan motor Cooling fan motor Cooling fan relay Cooling fan control module IPDM E/R

WITHOUT INTELLIGENT KEY : CONSULT Function (IPDM E/R)

INFOID:000000009754250

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC RESULT

Refer to [PCS-53. "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item [Unit]	MAIN SIG- NALS	Description
RAD FAN REQ [%]	×	Displays the value of the cooling fan speed request signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	MAIN SIG- NALS	Description
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the shift position (CVT models) judged by IPDM E/R.
ST RLY REQ [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
DTRL REQ [Off/On]		Displays the status of the daytime running light request signal received from BCM via CAN communication.
OIL P SW [Open/Close]		NOTE: This item is indicated, but not monitored.
HOOD SW [Off/On]		NOTE: This item is indicated, but not monitored.
HL WASHER REQ [Off/On]		NOTE: This item is indicated, but not monitored.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder request signal received from BCM via CAN communication.

ACTIVE TEST

Test item

Test item	Operation	Description
HORN	On	Operates horn relay for 20 ms.
REAR DEFOGGER	Off	OFF
	On	Operates the rear window defogger relay.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.
MOTOR FAN	1	OFF
	2	Transmits 50% pulse duty signal (PWM signal) to the cooling fan control module.
	3	Transmits 75% pulse duty signal (PWM signal) to the cooling fan control module.
	4	Transmits 100% pulse duty signal (PWM signal) to the cooling fan control module.
HEAD LAMP WASHER	On	NOTE: This item is indicated, but cannot be tested.
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

BCM, IPDM E/R

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

BCM, IPDM E/R

List of ECU Reference

INFOID:000000009754251

ECU		Reference
BCM	(With Intelligent Key system)	BCS-36, "Reference Value"
		BCS-57, "Fail-safe"
		BCS-58, "DTC Inspection Priority Chart"
		BCS-59, "DTC Index"
	(Without Intelligent Key system)	BCS-118, "Reference Value"
		BCS-131, "Fail-safe"
		BCS-132, "DTC Inspection Priority Chart"
IPDM E/R	(With Intelligent Key system)	PCS-17, "Reference Value"
		PCS-23, "Fail-safe"
		PCS-24, "DTC Index"
	(Without Intelligent Key system)	PCS-47, "Reference Value"
		PCS-52, "Fail-safe"
		PCS-53, "DTC Index"

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000009754252

DETAILED FLOW

1.OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred) as much as possible when the customer brings the vehicle in.

>> GO TO 2.

2.CHECK FOR DTC

Perform self diagnosis with CONSULT.

Is any DTC detected?

YES-1 >> BCM: Refer to [BCS-59. "DTC Index"](#) (With Intelligent Key system) or [BCS-132. "DTC Index"](#) (Without Intelligent Key system).

YES-2 >> IPDM E/R: Refer to [PCS-24. "DTC Index"](#) (With Intelligent Key system) or [PCS-53. "DTC Index"](#) (Without Intelligent Key system).

NO >> GO TO 3.

3.REPRODUCE THE MALFUNCTION INFORMATION

Check the malfunction on the vehicle that the customer describes.
Inspect the relation of the symptoms and the condition when the symptoms occur.

>> GO TO 4.

4.IDENTIFY THE MALFUNCTIONING SYSTEM WITH "SYMPTOM DIAGNOSIS"

Use "Symptom diagnosis" from the symptom inspection result in step 3. Then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 5.

5.IDENTIFY MALFUNCTIONING PARTS WITH "COMPONENT DIAGNOSIS"

Perform the diagnosis with "Component diagnosis" of the applicable system.

>> GO TO 6.

6.REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 7.

7.FINAL CHECK

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 3.

Are all malfunctions corrected?

YES >> INSPECTION END

NO >> GO TO 4.

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

REAR WINDOW DEFOGGER SWITCH

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

REAR WINDOW DEFOGGER SWITCH WITH AUTO A/C

WITH AUTO A/C : Description

INFOID:000000009754253

- The rear window defogger is operated by turning the rear window defogger switch ON.
- The indicator lamp in the rear window defogger switch illuminates when the rear window defogger is operating.

WITH AUTO A/C : Component Function Check

INFOID:000000009754254

1.CHECK REAR WINDOW DEFOGGER SWITCH FUNCTION

Check that the indicator lamp of rear window defogger illuminates when rear window defogger switch ON.

Is the inspection result normal?

- YES >> Rear window defogger switch function is OK.
NO >> Refer to [DEF-24, "WITH AUTO A/C : Diagnosis Procedure"](#).

WITH AUTO A/C : Diagnosis Procedure

INFOID:000000009754255

1.CHECK MULTI DISPLAY UNIT (REAR WINDOW DEFOGGER SWITCH)

Does multi display unit (rear window defogger switch) operate normally?

Refer to [DEF-24, "WITH AUTO A/C : Description"](#).

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Replace multi display unit (rear window defogger switch).

WITHOUT AUTO A/C

WITHOUT AUTO A/C : Description

INFOID:000000009754256

- The rear window defogger is operated by turning the rear window defogger switch ON.
- The indicator lamp in the rear window defogger switch illuminates when the rear window defogger is operating.

WITHOUT AUTO A/C : Component Function Check

INFOID:000000009754257

1.CHECK FUNCTION

Check (REAR DEF SW) in BCM "DATA MONITOR" mode using CONSULT when rear window defogger switch is ON.

Is the inspection result normal?

- YES >> Rear window defogger switch function is OK.
NO >> Refer to [DEF-24, "WITHOUT AUTO A/C : Diagnosis Procedure"](#).

WITHOUT AUTO A/C : Diagnosis Procedure

INFOID:000000009754258

1.CHECK BCM OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect A/C control connector.
3. Check voltage between A/C control harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
A/C control			
Connector	Terminal		
M53	3	Ground	Battery voltage

Is the inspection result normal?

REAR WINDOW DEFOGGER SWITCH

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 3.
NO >> GO TO 2.

2.CHECK REAR WINDOW DEFOGGER SWITCH CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and A/C control harness connector.

BCM		A/C control		Continuity
Connector	Terminal	Connector	Terminal	
With Intelligent Key system	M68	M53	3	Existed
Without Intelligent Key system	M65			

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
With Intelligent Key system	M68	Ground	Not existed
Without Intelligent Key system	M65		

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-90, "Removal and Installation"](#) (With Intelligent Key system) or [BCS-157, "Removal and Installation"](#) (Without Intelligent Key system).
NO >> Repair or replace harness.

3.CHECK GROUND CIRCUIT

Check continuity between A/C control harness connector and ground.

A/C control		Ground	Continuity
Connector	Terminal		
M53	8		Existed

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace harness.

4.CHECK REAR WINDOW DEFOGGER SWITCH

Refer to [DEF-25, "WITHOUT AUTO A/C : Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Replace A/C control. Refer to [HAC-142, "Removal and Installation"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-46, "Intermittent Incident"](#).

Is the inspection result normal?

>> INSPECTION END

WITHOUT AUTO A/C : Component Inspection

INFOID:000000009754259

1.CHECK REAR WINDOW DEFOGGER SWITCH

1. Turn ignition switch OFF.
2. Disconnect A/C control connector.
3. Check continuity between A/C control terminals.

REAR WINDOW DEFOGGER SWITCH

< DTC/CIRCUIT DIAGNOSIS >

A/C control		Condition	Continuity	
Terminal				
3	8	Rear window defogger switch	Pressed	Existed
			Released	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace A/C control. Refer to [HAC-142. "Removal and Installation"](#).

REAR WINDOW DEFOGGER RELAY

< DTC/CIRCUIT DIAGNOSIS >

REAR WINDOW DEFOGGER RELAY

Description

INFOID:000000009754260

The rear window defogger is operated by turning the rear window defogger switch ON.

Component Function Check

INFOID:000000009754261

1.CHECK FUNCTION

1. Perform IPDM E/R Active Test ("REAR DEFOGGER") using CONSULT.
2. Touch "ON".
3. Check that the rear window heating wire is getting warmer.

Is the inspection result normal?

- YES >> Rear window defogger relay function is OK.
 NO >> Refer to [DEF-27. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009754262

1.CHECK FUSE

1. Turn ignition switch OFF.
2. Check the 15A fuse (No. 41 and 42 located in IPDM E/R).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

2.CHECK IPDM E/R OUTPUT SIGNAL

1. Perform IPDM E/R Active Test ("REAR DEFOGGER") using CONSULT.
2. Touch "ON".
3. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	CONSULT Active Test condition	Voltage (V) (Approx.)	
IPDM E/R					
Connector	Terminal				
E11	14	Ground	REAR DEFOGGER	ON	Battery voltage
				OFF	0

Is the inspection result normal?

- YES >> INSPECTION END
 NO >> Replace IPDM E/R. Refer to [PCS-34. "Removal and Installation"](#) (With Intelligent Key system) or [PCS-62. "Removal and Installation"](#) (Without Intelligent Key system).

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

REAR WINDOW DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

REAR WINDOW DEFOGGER

Description

INFOID:000000009754263

Heats the heating wire with the power supply from the rear window defogger relay to prevent the rear window from fogging up.

Component Function Check

INFOID:000000009754264

1.CHECK FUNCTION

1. Perform IPDM E/R Active Test ("REAR DEFOGGER") using CONSULT.
2. Touch "ON".
3. Check that the rear window heating wire is getting warmer.

Is the inspection result normal?

- YES >> Rear window defogger is OK.
NO >> Refer to [DEF-27, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009754265

1.CHECK REAR WINDOW DEFOGGER POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect rear window defogger connector.
3. Turn ignition switch ON.
4. Check voltage between rear window defogger harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
Connector	Terminal			
D202	1	Ground	Rear window defogger switch	ON Battery voltage OFF 0

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 4.

2.CHECK REAR WINDOW DEFOGGER GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between rear window defogger harness connector and ground.

Rear window defogger		Ground	Continuity
Connector	Terminal		
D203	2		Existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness.

3.CHECK FILAMENT

Refer to [DEF-47, "Inspection and Repair"](#).

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair filament.

4.CHECK REAR WINDOW DEFOGGER POWER SUPPLY CIRCUIT 1

1. Turn ignition switch OFF.
2. Disconnect condenser connector.
3. Check continuity between condenser harness connector and rear window defogger harness connector.

REAR WINDOW DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

Condenser		Rear window defogger		Continuity
Connector	Terminal	Connector	Terminal	
D201	2	D202	1	Existed

4. Check continuity between condenser connector and ground.

Condenser		Ground	Continuity
Connector	Terminal		
D201	2		Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

5.CHECK REAR WINDOW DEFOGGER POWER SUPPLY CIRCUIT 2

1. Disconnect IPDM E/R connectors.
2. Check continuity between IPDM E/R harness connector and condenser harness connector.

IPDM E/R		Condenser		Continuity
Connector	Terminal	Connector	Terminal	
E11	14	D103	1	Existed

3. Check continuity between IPDM E/R connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E11	14		Not existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

6.CHECK CONDENSER

Refer to [DEF-29, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace condenser. Refer to [DEF-49, "Removal and Installation"](#).

7.CHECK INTERMITTENT INCIDENT

Refer to [GI-46, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace harness or connector.

Component Inspection

INFOID:000000009754266

1.CHECK CONDENSER

1. Turn ignition switch OFF.
2. Disconnect condenser connector.
3. Check continuity between condenser connector and ground part of condenser.

Condenser		Ground part of condenser	Continuity
Connector	Terminal		
D103	1		Not existed
D202	2		

4. Check continuity between condenser terminals.

REAR WINDOW DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

Condenser				Continuity
Connector	Terminal	Connector	Terminal	
D103	1	D202	2	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace condenser. Refer to [DEF-49, "Removal and Installation"](#).

DOOR MIRROR DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

DOOR MIRROR DEFOGGER

Description

INFOID:000000009754267

Heats the heating wire with the power supply from the rear window defogger relay to prevent the door mirror from fogging up.

Component Function Check

INFOID:000000009754268

1.CHECK DOOR MIRROR DEFOGGER

1. Perform IPDM E/R Active Test ("REAR DEFOGGER") using CONSULT.
2. Touch "ON".
3. Check that both side door mirror glasses are getting warmer.

Is the inspection result normal?

- YES >> Door mirror defogger is OK.
NO >> Refer to [DEF-31, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009754269

1.CHECK FUSE

1. Turn ignition switch OFF.
2. Check 10A fuse [No.22, located in fuse block (J/B)].

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Replace the blown fuse after repairing the affected circuit if a fuse is blown.

2.CHECK DOOR MIRROR DEFOGGER CIRCUIT

1. Disconnect IPDM E/R connector and door mirror (both sides) connector.
2. Check continuity between IPDM E/R harness connector and door mirror (driver side) harness connector.

IPDM E/R		Door mirror (driver side)		Continuity
Connector	Terminal	Connector	Terminal	
E11	14	D29	3	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E11	14		Not existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace harness.

3.CHECK INTERMITTENT INCIDENT

Check intermittent incident.
Refer to [GI-46, "Intermittent Incident"](#).

>> INSPECTION END

DRIVER SIDE DOOR MIRROR DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

DRIVER SIDE DOOR MIRROR DEFOGGER

Description

INFOID:000000009754270

Heats the heating wire with the power supply from the rear window defogger relay to prevent the door mirror from fogging up.

Component Function Check

INFOID:000000009754271

1. CHECK DRIVER SIDE DOOR MIRROR DEFOGGER

1. Perform IPDM E/R Active Test ("REAR DEFOGGER") using CONSULT.
2. Touch "ON".
3. Check that the driver side door mirror glass is getting warmer.

Is the inspection result normal?

- YES >> Driver side door mirror defogger is OK.
NO >> Refer to [DEF-32, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009754272

1. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect door mirror (driver side) connector.
3. Turn ignition switch ON.
4. Check voltage between door mirror (driver side) harness connector and ground.

(+)		(-)	Condition		Voltage (V) (Approx.)
Door mirror (driver side)					
Connector	Terminal	Ground	Rear window defogger switch	ON	Battery voltage
D29	3				

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace harness.

2. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between door mirror (driver side) harness connector and ground.

Door mirror (driver side)		Ground	Continuity
Connector	Terminal		
D29	2		Existed

Is the inspection result normal?

- YES >> Replace door mirror glass (driver side). Refer to [MIR-17, "DOOR MIRROR ASSEMBLY : Removal and Installation"](#).
NO >> Repair or replace harness.

PASSENGER SIDE DOOR MIRROR DEFOGGER

< DTC/CIRCUIT DIAGNOSIS >

PASSENGER SIDE DOOR MIRROR DEFOGGER

Description

INFOID:000000009754273

Heats the heating wire with the power supply from the rear window defogger relay to prevent the door mirror from fogging up.

Component Function Check

INFOID:000000009754274

1.CHECK PASSENGER SIDE DOOR MIRROR DEFOGGER

1. Perform IPDM E/R Active Test ("REAR DEFOGGER") using CONSULT.
2. Touch "ON".
3. Check that the passenger side door mirror glass is getting warmer.

Is the inspection result normal?

- YES >> Passenger side door mirror defogger is OK.
 NO >> Refer to [DEF-33, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009754275

1.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect door mirror (passenger side) connector.
3. Turn ignition switch ON.
4. Check voltage between door mirror (passenger side) harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
Door mirror (passenger side) Connector	Terminal			
D8	3	Ground	Rear window defogger switch	ON Battery voltage
			OFF 0	

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace harness.

2.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between door mirror (passenger side) harness connector and ground.

Door mirror (passenger side)		Ground	Continuity
Connector	Terminal		
D8	2		Existed

Is the inspection result normal?

- YES >> Replace door mirror glass (passenger side). Refer to [MIR-17, "DOOR MIRROR ASSEMBLY : Removal and Installation"](#).
 NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

DEF

REAR WINDOW DEFOGGER FEEDBACK SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

REAR WINDOW DEFOGGER FEEDBACK SIGNAL

Description

INFOID:000000009754276

Turns the indicator lamp in the rear window defogger switch ON when operating the rear window defogger.

Component Function Check

INFOID:000000009754277

1. CHECK REAR WINDOW DEFOGGER FEEDBACK SIGNAL

Check that the indicator lamp of rear window defogger switch is illuminated when turning the rear window defogger switch ON.

Is the inspection result normal?

- OK >> Rear window defogger feedback signal is OK.
- NG >> Refer to [DEF-34, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000009754278

1. CHECK REAR WINDOW DEFOGGER FEEDBACK SIGNAL

1. Turn ignition switch ON.
2. Check voltage between A/C control harness connector and ground.

A/C control		Ground	Condition		Voltage (V) (Approx.)
Connector	Terminal				
M53	4		Rear window defogger switch	ON	Battery voltage
				OFF	0

Is the inspection result normal?

- YES >> Replace A/C control.
- NO >> Repair or replace harness.


REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

REAR WINDOW DEFOGGER SYSTEM

Wiring Diagram - DEFOGGER CONTROL SYSTEM -

INFOID:000000009754279

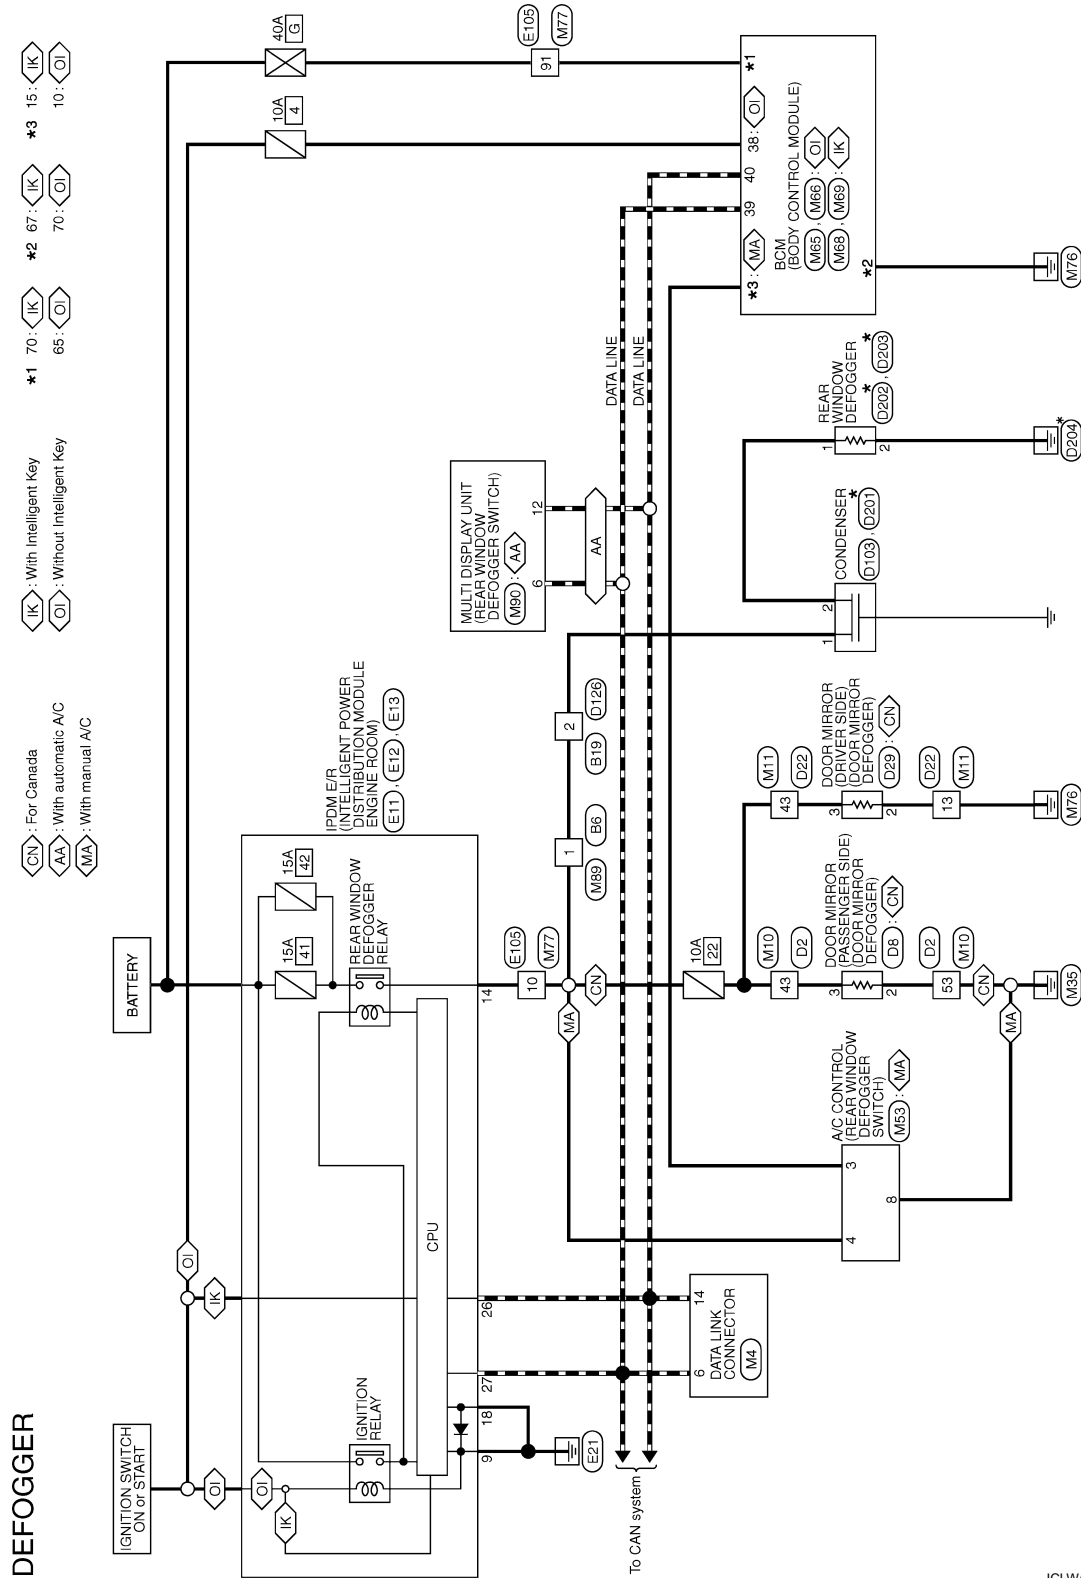

2010/08/30



JCLWA4334GB

REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

DEFOGGER

Connector No.	B6
Connector Name	WIRE TO WIRE
Connector Type	M02MW-LC






Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	R	-

Connector No. B19



Connector Name WIRE TO WIRE

Connector Type M02MB-P-LC

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	R	-

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15






Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	G	-
3	Y	-
4	V	-
13	W	-
14	SB	-
15	L	-
24	R	-
25	G	-
40	LG	-
41	Y	-
43	GR	-
44	V	-
45	W	-
46	RG	-
50	P	-
51	B	-
53	B	-

Connector No. D8



Connector Name DOOR MIRROR (PASSENGER SIDE)

Connector Type TH08MW-NH

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	R	-

Connector No.	D22
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15






Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	W	-
3	SB	-
4	V	-
7	G	-
8	LG	-
10	BR	-
11	W	-
12	SB	-
13	B	-
14	L	-
15	P	-
24	G	-
25	R	-
40	V	-
41	P	-
42	L	-
43	GR	-
44	Y	-
45	W	-
46	RG	-
47	G	-
48	L	-
49	R	-
50	LG	-

Connector No. D103



Connector Name CONDENSER

Connector Type P01FB-A

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-

Connector No.	D28
Connector Name	DOOR MIRROR (DRIVER SIDE)
Connector Type	TH08MW-NH






Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-
3	GR	-
7	EG	-
8	W	-

Connector No. D103

Connector Name CONDENSER

Connector Type P01FB-A

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-

JRLWD0886GB


REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >


Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	
2	R	

DEFOGGER

Connector No.	D126
Connector Name	WIRE TO WIRE
Connector Type	M02FB-LC




Connector No.	D203
Connector Name	REAR WINDOW DEFOGGER
Connector Type	P01FB-A




Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	
2	R	

Connector No.	D201
Connector Name	CONDENSER
Connector Type	P01FB-A



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	
2	R	


Connector No.	D202
Connector Name	REAR WINDOW DEFOGGER
Connector Type	P01FB-A



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	
2	R	


Terminal No.	Color Of Wire	Signal Name [Specification]
18	B/Y	
19	W	[With Front Fog Lamp]
20	G	[With Front Fog Lamp]
22	G	[With Front Fog Lamp]

Connector No.	E12
Connector Name	INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	NS09FB-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
23	SB	
25	BR	
26	P	
27	L	
28	Y	
30	V	
31	Y	
34	L	

Connector No.	E13
Connector Name	INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH12FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	
4	V	
5	GR	
6	GR	
8	G	
9	G	
10	R	
34	O	
35	GR	
36	B	
37	P	
52	SB	
53	BR	
54	V	
55	O	
58	V	
59	V	
64	LG	
65	GR	
66	R	
67	W	
68	SB	
70	R	
71	LG	
72	V	
73	L	
76	R	
78	B	
79	W	
80	V	
84	V	
85	LG	
86	GR	
88	O	
90	SHIELD	
91	G	
92	R	

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH08MM-CS1P-TM4



JRLWD0887GB

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P


REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

DEFOGGER


86	BR	-	-
87	GR	-	-
88	GR	-	-
89	W	-	-
90	V	-	-
100	O	-	-

Connector No. M4
Connector Name DATA LINK CONNECTOR
Connector Type ID1E1FW



Terminal No.	Color	Wire	Signal Name [Specification]
4	B	B	-
5	B	B	-
6	L	L	-
7	W	W	-
8	LG	LG	-
14	P	P	-
16	Y	Y	-


Connector No. M10
Connector Name WIRE TO WIRE
Connector Type TH40MW-C515



Terminal No.	Color	Wire	Signal Name [Specification]
1	R	R	-
3	G	G	-
4	V	V	-
7	R	R	-
8	G	G	-
9	LG	LG	-
10	Y	Y	-
11	GR	GR	-
12	GR	GR	-
13	B	B	-
14	L	L	-
15	Y	Y	-
16	GR	GR	-
25	V	V	-
41	P	P	-
42	GR	GR	-
43	V	V	-
44	P	P	-
45	G	G	-

14	GR	-	-
15	L	-	-
24	R	-	-
25	G	-	-
40	LG	-	-
41	Y	-	-
43	V	-	-
44	V	-	-
45	LG	-	-
46	BR	-	-
50	P	-	-
51	B	-	-
53	B	-	-


Connector No. M11
Connector Name WIRE TO WIRE
Connector Type TH40MW-C515



Terminal No.	Color	Wire	Signal Name [Specification]
1	Y	Y	-
2	SB	SB	-
3	W	W	-
4	R	R	-
5	V	V	-
6	GR	GR	-
8	B	B	-
9	B	B	-
10	W	W	-
11	R	R	-
12	Y	Y	-
13	L	L	-
14	LG	LG	-


46	Y	-	-
47	GR	-	-
48	L	-	-
49	R	-	-
50	LG	-	-
52	BR	-	-

Connector No. M53
Connector Name A/C CONTROL
Connector Type SEA09FB-SHA6



Terminal No.	Color	Wire	Signal Name [Specification]
1	Y	Y	-
2	SB	SB	-
3	W	W	-
4	R	R	-
5	V	V	-
6	GR	GR	-
8	B	B	-
9	B	B	-
10	W	W	-
11	R	R	-
12	Y	Y	-
13	L	L	-
14	LG	LG	-

Connector No. M55
Connector Name BCM (BODY CONTROL MODULE)
Connector Type TH46FW-NH



Terminal No.	Color	Wire	Signal Name [Specification]
2	GR	GR	COMBI SW INPUT 5
3	GR	GR	COMBI SW INPUT 4
4	BR	BR	COMBI SW INPUT 3
5	G	G	COMBI SW INPUT 2
6	W	W	COMBI SW INPUT 1
7	L	L	KEY CYL UNLOCK SW
8	R	R	KEY CYL LOCK SW
9	R	R	STOP LAMP SW
10	W	W	REAR WINDOW DEF SW
11	L	L	IGN SW ACC
12	Y	Y	DOOR LK & UNLK SW LOCK
13	BR	BR	DOOR LK & UNLK SW UNLOCK
15	W	W	-
16	V	V	RECEIVER GND
18	GR	GR	RECEIVER COM1
19	GR	GR	RECEIVER COM2
21	P	P	NATS ANT AMP
23	R	R	SECURITY IND LAMP CONT
24	SB	SB	DONGLE LINK
25	LG	LG	NATS ANT AMP
26	B	B	THERMO CONT AMP
27	W	W	A-C SW
28	O	O	BLOWER FAN SW
29	L	L	HAZARD SW
30	L	L	BK DOOR OPENER SW
31	G	G	FR DEFROST SW
32	LG	LG	COMBI SW OUTPUT 5
33	Y	Y	COMBI SW OUTPUT 4
34	V	V	COMBI SW OUTPUT 3
35	V	V	COMBI SW OUTPUT 2
36	P	P	COMBI SW OUTPUT 1
37	GR	GR	KEY SW
38	R	R	IGN SW ON
39	L	L	CAN-H
40	P	P	CAN-L

JRLWD0888GB

REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

DEFOGGER

Connector No.	M68
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA9FW-FH46-SA



56	57	58	60	63	64
65	66	67	68	69	70

Terminal No.	Color Of Wire	Signal Name [Specification]
56	W	DR DOOR UNLK OUTPUT
57	W	INT ROOM LAMP PWR SPLY
58	LG	INT ROOM LAMP CONT
60	BR	INT ROOM LAMP SPLY
63	SB	A/C IND OUTPUT
65	Y	BAT (F/L)
66	P	PW PWR SPLY (BAT)
67	L	PW PWR SPLY (IGN)
68	SB	PASS. RR DOOR UNLK OUTPUT
69	V	ALL DOOR LOCK OUTPUT
70	B	GND

Connector No.	M68
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH46FB-1H1



2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color Of Wire	Signal Name [Specification]
2	L	COMBI SW INPUT 5
3	GR	COMBI SW INPUT 4
4	BR	COMBI SW INPUT 2
5	G	COMBI SW INPUT 1
6	W	KEY CYL UNLOCK SW
7	L	KEY CYL LOCK SW
8	R	STOP LAMP SW 1
9	R	STOP LAMP SW 1
10	W	-

12	GR	DOOR L & UNLK SW LOCK (Without front fog lamp)
13	GR	DOOR LOCK UNLK SW UNLOCK
14	BR	DOOR L & UNLK SW UNLOCK
15	P	OPTICAL SENS
17	R	REDEFOGGER SW
18	V	OPTICAL SENS PWR SPLY
21	P	RECEIVER GND
23	R	NATS ANT AMP
24	SB	SECURITY IND LAMP CONT
25	LG	DONGLE LINK
26	B	NATS ANT AMP
27	W	THERMO AMP
28	Y	A/C SW (With front fog lamp)
29	LG	A/C SW (Without front fog lamp)
30	LG	BLOWER FAN SW (Without front fog lamp)
31	C	BLUETOOTH SW (With front fog lamp)
32	U	HAZARD SW (With front fog lamp)
33	SB	HAZARD SW (Without front fog lamp)
34	L	BK DOOR OPENER SW
35	GR	DR DOOR UNLK SENS
36	LG	COMBI SW OUTPUT 5
37	Y	COMBI SW OUTPUT 4
38	V	COMBI SW OUTPUT 3
39	R	COMBI SW OUTPUT 2
40	P	COMBI SW OUTPUT 1
41	G	DETENT SW
42	L	RECEIVER COMM
43	L	CAN-H
44	P	CAN-L

Connector No.	M68
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA9FW-FH46-SA



56	57	58	60	63	64
65	66	67	68	69	70

Terminal No.	Color Of Wire	Signal Name [Specification]
56	LG	INT ROOM LAMP PWR SPLY (With front fog lamp)
57	P	INT ROOM LAMP PWR SPLY (Without front fog lamp)
58	L	BAT (F/USE)
60	V	PASS DOOR UNLK OUTPUT
63	V	TURN SIG LH OUTPUT

61	W	TURN SIG RH OUTPUT
62	LG	INT ROOM LAMP CONT
64	R	RELEASE SW
65	V	ALL DOOR LOCK OUTPUT
66	W	DR DOOR UNLK OUTPUT
67	B	GND
68	L	PW PWR SPLY (IGN)
69	P	PW PWR SPLY (BAT)
70	Y	BAT (F/L)

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH8FW-2S16-TM4



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
4	V	-
5	W	-
6	P	-
8	P	-
10	R	-
34	LG	-
35	SB	-
36	B	-
37	P	-
38	R	-
39	L	-
54	SB	-
55	P	-
58	LG	-
59	G	-
64	G	-
65	GR	-
67	V	-
68	R	-
70	V	-
71	R	-
72	GR	-
73	G	-

Connector No.	M89
Connector Name	WIRE TO WIRE
Connector Type	M02FW-LC



1

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-

JRLWD0889GB


A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

REAR WINDOW DEFOGGER SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

DEFOGGER

Connector No.	M99
Connector Name	MULTI DISPLAY UNIT
Connector Type	TH2PW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	BAT
2	V	BL3
3	GR	ILLCONT
4	GR	ILLCONT
5	L	CAN-H
6	L	CAN-H
7	SB	IGN
8	SB	IGN
9	B	GND
10	B	GND
11	B	GND
12	P	CAN-L

JRLWD0890GB

ALL DEFOGGER SYSTEMS DO NOT OPERATE

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

ALL DEFOGGER SYSTEMS DO NOT OPERATE

Description

INFOID:000000009754280

Rear window defogger and door mirror defogger do not operate when rear window defogger switch operated.

Diagnosis Procedure

INFOID:000000009754281

1.CHECK REAR WINDOW DEFOGGER SWITCH

Check rear window defogger switch.

Refer to [DEF-24, "WITH AUTO A/C : Component Function Check"](#) (With Auto A/C) or [DEF-24, "WITHOUT AUTO A/C : Component Function Check"](#) (Without Auto A/C).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK REAR WINDOW DEFOGGER RELAY

Check rear window defogger relay.

Refer to [DEF-27, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CHECK REAR WINDOW DEFOGGER

Check rear window defogger.

Refer to [DEF-28, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-46, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

REAR WINDOW DEFOGGER DOES NOT OPERATE BUT BOTH DOOR MIRROR DEFOGGER OPERATE

< SYMPTOM DIAGNOSIS >

REAR WINDOW DEFOGGER DOES NOT OPERATE BUT BOTH DOOR MIRROR DEFOGGER OPERATE

Diagnosis Procedure

INFOID:000000009754282

1. CHECK REAR WINDOW DEFOGGER

Check rear window defogger.

Refer to [DEF-28, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CONFIRM THE OPERATION

Confirm the operation again

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-46, "Intermittent Incident"](#).

NO >> GO TO 1.

DOOR MIRROR DEFOGGER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

DOOR MIRROR DEFOGGER DOES NOT OPERATE BOTH SIDES

BOTH SIDES : Description

INFOID:000000009754283

Both door mirror defoggers do not operate.

BOTH SIDES : Diagnosis Procedure

INFOID:000000009754284

1.CHECK REAR WINDOW DEFOGGER

Check rear window defogger.

Refer to [DEF-28, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK DOOR MIRROR DEFOGGER

Check door mirror defogger.

Refer to [DEF-31, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace the malfunctioning parts.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-46, "Intermittent Incident"](#).

NO >> GO TO 1.

DRIVER SIDE

DRIVER SIDE : Description

INFOID:000000009754285

Driver side door mirror defogger does not operate but passenger side door mirror defogger operates.

DRIVER SIDE : Diagnosis Procedure

INFOID:000000009754286

1.CHECK DRIVER SIDE DOOR MIRROR DEFOGGER

Check driver side door mirror defogger.

Refer to [DEF-31, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-46, "Intermittent Incident"](#).

NO >> GO TO 1.

PASSENGER SIDE

PASSENGER SIDE : Description

INFOID:000000009754287

Passenger side door mirror defogger does not operate but driver side door mirror defogger operates.

PASSENGER SIDE : Diagnosis Procedure

INFOID:000000009754288

1.CHECK PASSENGER SIDE DOOR MIRROR DEFOGGER.

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

DOOR MIRROR DEFOGGER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

Check passenger side door mirror defogger.

Refer to [DEF-31, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-46, "Intermittent Incident"](#).

NO >> GO TO 1.

ON IS NOT DISPLAYED WHEN PRESSING REAR WINDOW DEFOGGER SWITCH BUT IT IS OPERATED

< SYMPTOM DIAGNOSIS >

ON IS NOT DISPLAYED WHEN PRESSING REAR WINDOW DEFOGGER SWITCH BUT IT IS OPERATED

Diagnosis Procedure

INFOID:000000009754289

1. CHECK MULTI DISPLAY UNIT FUNCTION

Check that the multi display unit is operating normally.

Refer to [HAC-42, "Work Flow"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-46, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P

REAR WINDOW DEFOGGER INDICATOR DOES NOT ILLUMINATE

< SYMPTOM DIAGNOSIS >

REAR WINDOW DEFOGGER INDICATOR DOES NOT ILLUMINATE

Diagnosis Procedure

INFOID:000000009754290

1. CHECK A/C CONTROL (REAR WINDOW DEFOGGER SWITCH)

Check that rear window defogger operates.

Is the inspection result normal?

- YES >> Replace A/C control (rear window defogger switch).
- NO >> Check rear window defogger system. Refer to [DEF-23. "Work Flow"](#).

FILAMENT

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION


FILAMENT

Inspection and Repair


INFOID:000000009754291

INSPECTION


1. When measuring voltage, wrap tin foil around the top of the negative probe. Then press the foil against the wire with your finger.

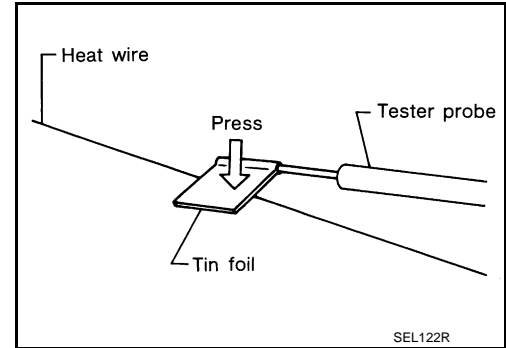

2. Attach probe circuit tester (in Volt range) to middle portion of each filament.

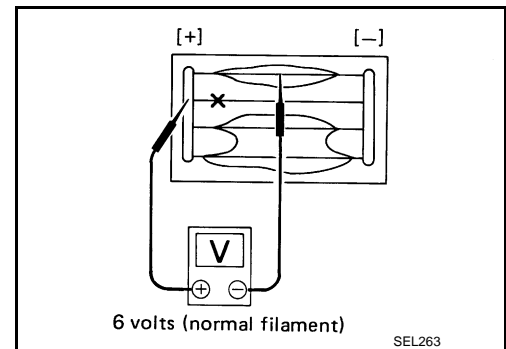

3. If a filament is burned out, circuit tester registers 0 or battery voltage.
4. To locate burned out point, move probe to left and right along filament. Test needle will swing abruptly when probe passes the point.

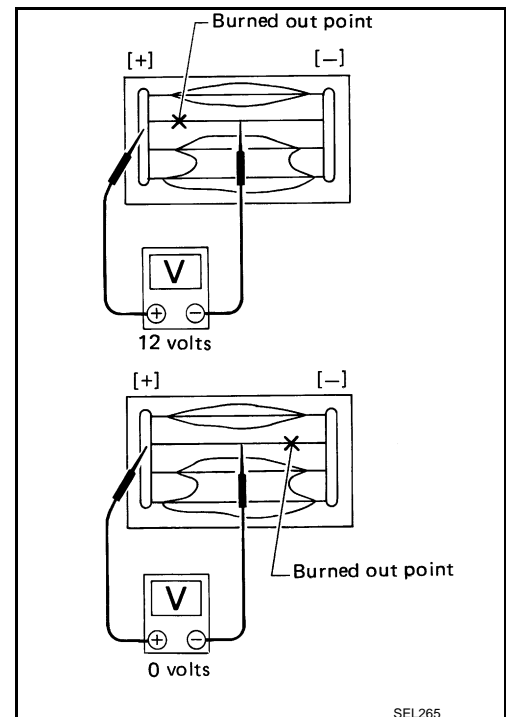

REPAIR

REPAIR EQUIPMENT

- Conductive silver composition (Dupont No. 4817 or equivalent)

A
B
C
D
E
F
G
H
I
J
K
DEF
M
N
O
P


FILAMENT

< REMOVAL AND INSTALLATION >


- Ruler 30 cm (11.8 in) long
- Drawing pen
- Heat gun
- Alcohol
- Cloth

REPAIRING PROCEDURE


1. Wipe broken heat wire and its surrounding area clean with a cloth dampened in alcohol.
2. Apply a small amount of conductive silver composition to tip of drawing pen. Shake silver composition container before use.
3. Place ruler on glass along broken line. Deposit conductive silver composition on break with drawing pen. Slightly overlap existing heat wire on both sides [preferably 5 mm (0.20 in)] of the break.

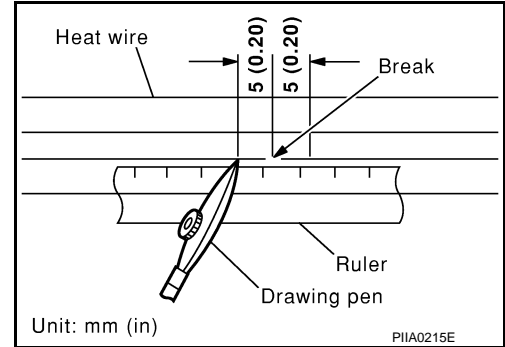

4. After repair has been completed, check repaired wire for continuity. This check should be conducted 10 minutes after silver composition is deposited. Do not touch repaired area while test is being conducted.

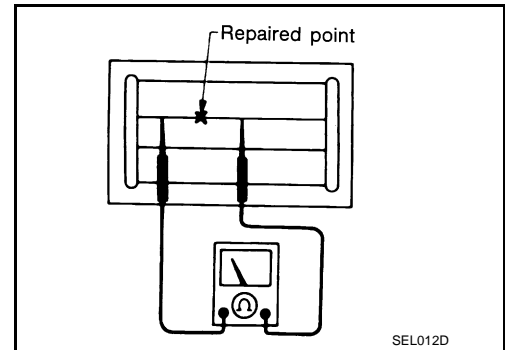

5. Apply a constant stream of hot air directly to the repaired area for approximately 20 minutes with a heat gun. A minimum distance of 3 cm (1.2 in) should be kept between repaired area and hot air outlet. If a heat gun is not available, let the repaired area dry for 24 hours.

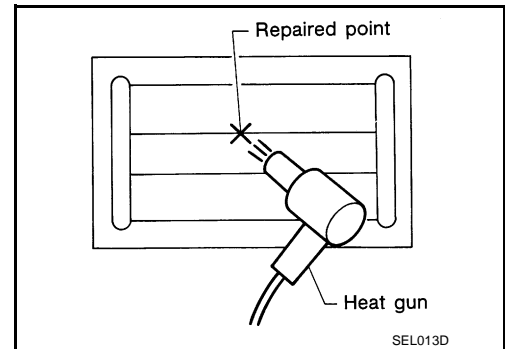

CONDENSER

< REMOVAL AND INSTALLATION >

CONDENSER

Exploded View

INFOID:000000009754292


Refer to [INT-38, "Exploded View"](#).

Removal and Installation

INFOID:000000009754293

REMOVAL

1. Remove the back door lower finisher.
Refer to [INT-39, "BACK DOOR LOWER FINISHER : Removal and Installation"](#).
2. Remove bolt (A), and then remove condenser (1) from the vehicle body.

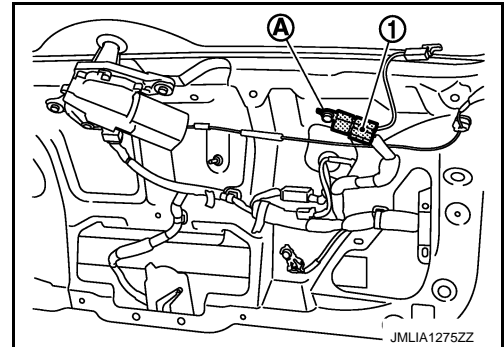

INSTALLATION

Install in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K

DEF

M
N
O
P