

SECTION

LAN

LAN SYSTEM

A

B

C

CONTENTS

E

CAN FUNDAMENTAL		HOW TO USE THIS SECTION	20	F
HOW TO USE THIS MANUAL	4	Information	20	
HOW TO USE THIS SECTION	4	Abbreviation List	20	G
Information	4	PRECAUTION	21	
PRECAUTION	5	PRECAUTIONS	21	H
PRECAUTIONS	5	Precaution for Technicians Using Medical Electric...21		
Precautions for Trouble Diagnosis	5	High Voltage Precautions	21	
Precautions for Harness Repair	5	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	23	I
SYSTEM DESCRIPTION	6	Point to Be Checked Before Starting Maintenance Work	24	J
SYSTEM	6	Precautions for Removing Battery Terminal	24	
CAN COMMUNICATION SYSTEM	6	Precautions for Trouble Diagnosis	25	
CAN COMMUNICATION SYSTEM : System Description	6	Precautions for Harness Repair	25	K
DIAG ON CAN	6	PREPARATION	26	
DIAG ON CAN : System Description	6	PREPARATION	26	L
Commercial Service Tools			26	
TROUBLE DIAGNOSIS	8	SYSTEM DESCRIPTION	27	LAN
Component Description	8	COMPONENT PARTS	27	
Condition of Error Detection	8	Component Parts Location	27	
Symptom When Error Occurs in CAN Communication System	9	SYSTEM	28	N
CAN Diagnosis with CONSULT	11	CAN COMMUNICATION SYSTEM	28	
Self-Diagnosis	12	CAN COMMUNICATION SYSTEM : System Description	28	O
CAN Diagnostic Support Monitor	12	CAN COMMUNICATION SYSTEM : CAN Communication Control Circuit	32	
How to Use CAN Communication Signal Chart	14	CAN COMMUNICATION SYSTEM : CAN System Specification Chart	32	P
BASIC INSPECTION	15	CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart	33	
DIAGNOSIS AND REPAIR WORKFLOW	15	WIRING DIAGRAM	39	
Trouble Diagnosis Flow Chart	15	CAN SYSTEM	39	
Trouble Diagnosis Procedure	15			
CAN				
HOW TO USE THIS MANUAL	20			

Wiring Diagram	39	BCM BRANCH LINE CIRCUIT	66
BASIC INSPECTION	47	Diagnosis Procedure	66
DIAGNOSIS AND REPAIR WORKFLOW	47	EV/HEV BRANCH LINE CIRCUIT (EV SYSTEM CAN CIRCUIT)	67
Interview Sheet	47	Diagnosis Procedure	67
DTC/CIRCUIT DIAGNOSIS	48	INV/MC BRANCH LINE CIRCUIT	68
MALFUNCTION AREA CHART	48	Diagnosis Procedure	68
CAN Communication Circuit	48	DLC BRANCH LINE CIRCUIT (EV SYSTEM CAN CIRCUIT)	69
EV System CAN Circuit	48	Diagnosis Procedure	69
MAIN LINE BETWEEN IPDM-E AND EHS/ PKB CIRCUIT	50	E-SHIFT BRANCH LINE CIRCUIT	70
Diagnosis Procedure	50	Diagnosis Procedure	70
MAIN LINE BETWEEN EHS/PKB AND DLC CIRCUIT	51	HVAC BRANCH LINE CIRCUIT	71
Diagnosis Procedure	51	Diagnosis Procedure	71
MAIN LINE BETWEEN INV/MC AND DLC CIRCUIT	52	TCU BRANCH LINE CIRCUIT	72
Diagnosis Procedure	52	Diagnosis Procedure	72
MAIN LINE BETWEEN DLC AND OBC CIRCUIT	54	OBC BRANCH LINE CIRCUIT	73
Diagnosis Procedure	54	Diagnosis Procedure	73
EV/HEV BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)	55	HV BAT BRANCH LINE CIRCUIT	74
Diagnosis Procedure	55	Diagnosis Procedure	74
ABS BRANCH LINE CIRCUIT	56	CAN COMMUNICATION CIRCUIT	76
Diagnosis Procedure	56	Diagnosis Procedure	76
BRAKE BRANCH LINE CIRCUIT	57	EV SYSTEM CAN CIRCUIT	78
Diagnosis Procedure	57	Diagnosis Procedure	78
IPDM-E BRANCH LINE CIRCUIT	58	CAN SYSTEM (TYPE 1)	
Diagnosis Procedure	58	DTC/CIRCUIT DIAGNOSIS	81
EHS/PKB BRANCH LINE CIRCUIT	59	MAIN LINE BETWEEN IPDM-E AND EHS/ PKB CIRCUIT	81
Diagnosis Procedure	59	Diagnosis Procedure	81
A-BAG BRANCH LINE CIRCUIT	60	MAIN LINE BETWEEN EHS/PKB AND DLC CIRCUIT	82
Diagnosis Procedure	60	Diagnosis Procedure	82
AV BRANCH LINE CIRCUIT	61	MAIN LINE BETWEEN INV/MC AND DLC CIRCUIT	83
Diagnosis Procedure	61	Diagnosis Procedure	83
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)	62	MAIN LINE BETWEEN DLC AND OBC CIRCUIT	85
Diagnosis Procedure	62	Diagnosis Procedure	85
EPS BRANCH LINE CIRCUIT	63	EV/HEV BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)	86
Diagnosis Procedure	63	Diagnosis Procedure	86
M&A BRANCH LINE CIRCUIT	64	ABS BRANCH LINE CIRCUIT	87
Diagnosis Procedure	64	Diagnosis Procedure	87
STRG BRANCH LINE CIRCUIT	65	BRAKE BRANCH LINE CIRCUIT	88
Diagnosis Procedure	65		

Diagnosis Procedure	88	
IPDM-E BRANCH LINE CIRCUIT	89	
Diagnosis Procedure	89	
EHS/PKB BRANCH LINE CIRCUIT	90	
Diagnosis Procedure	90	
A-BAG BRANCH LINE CIRCUIT	91	
Diagnosis Procedure	91	
AV BRANCH LINE CIRCUIT	92	
Diagnosis Procedure	92	
DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)	93	
Diagnosis Procedure	93	
EPS BRANCH LINE CIRCUIT	94	
Diagnosis Procedure	94	
M&A BRANCH LINE CIRCUIT	95	
Diagnosis Procedure	95	
STRG BRANCH LINE CIRCUIT	96	
Diagnosis Procedure	96	
BCM BRANCH LINE CIRCUIT	97	
Diagnosis Procedure	97	
EV/HEV BRANCH LINE CIRCUIT (EV SYSTEM CAN CIRCUIT)	98	A
Diagnosis Procedure	98	
INV/MC BRANCH LINE CIRCUIT	99	B
Diagnosis Procedure	99	
DLC BRANCH LINE CIRCUIT (EV SYSTEM CAN CIRCUIT)	100	C
Diagnosis Procedure	100	
E-SHIFT BRANCH LINE CIRCUIT	101	D
Diagnosis Procedure	101	
HVAC BRANCH LINE CIRCUIT	102	E
Diagnosis Procedure	102	
TCU BRANCH LINE CIRCUIT	103	F
Diagnosis Procedure	103	
OBC BRANCH LINE CIRCUIT	104	G
Diagnosis Procedure	104	
HV BAT BRANCH LINE CIRCUIT	105	H
Diagnosis Procedure	105	
CAN COMMUNICATION CIRCUIT	107	I
Diagnosis Procedure	107	
EV SYSTEM CAN CIRCUIT	109	J
Diagnosis Procedure	109	

LAN

N

O

P

HOW TO USE THIS MANUAL

HOW TO USE THIS SECTION

Information

INFOID:000000006977544

- “CAN FUNDAMENTAL” of LAN Section describes the basic knowledge of the CAN communication system and the method of trouble diagnosis.
- For information peculiar to a vehicle and inspection procedure, refer to “CAN”.

PRECAUTION

PRECAUTIONS

Precautions for Trouble Diagnosis

INFOID:000000006977545

CAUTION:

Follow the instructions listed below. Failure to do this may cause damage to parts:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the power switch OFF and disconnect the 12V battery cable from the negative terminal when checking the harness. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).


Precautions for Harness Repair

INFOID:000000006977546

- Solder the repaired area and wrap tape around the soldered area.

NOTE:


A fray of twisted lines must be within 110 mm (4.33 in).

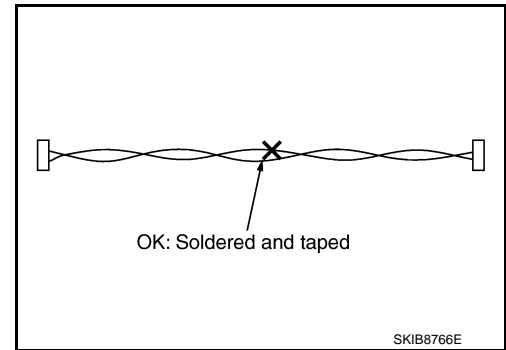

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

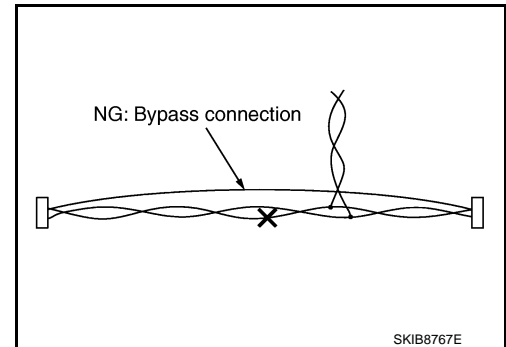

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

LAN

SYSTEM DESCRIPTION

SYSTEM

CAN COMMUNICATION SYSTEM

CAN COMMUNICATION SYSTEM : System Description

INFOID:000000006977547


CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DIAG ON CAN

DIAG ON CAN : System Description

INFOID:000000006977548

SYSTEM DIAGRAM

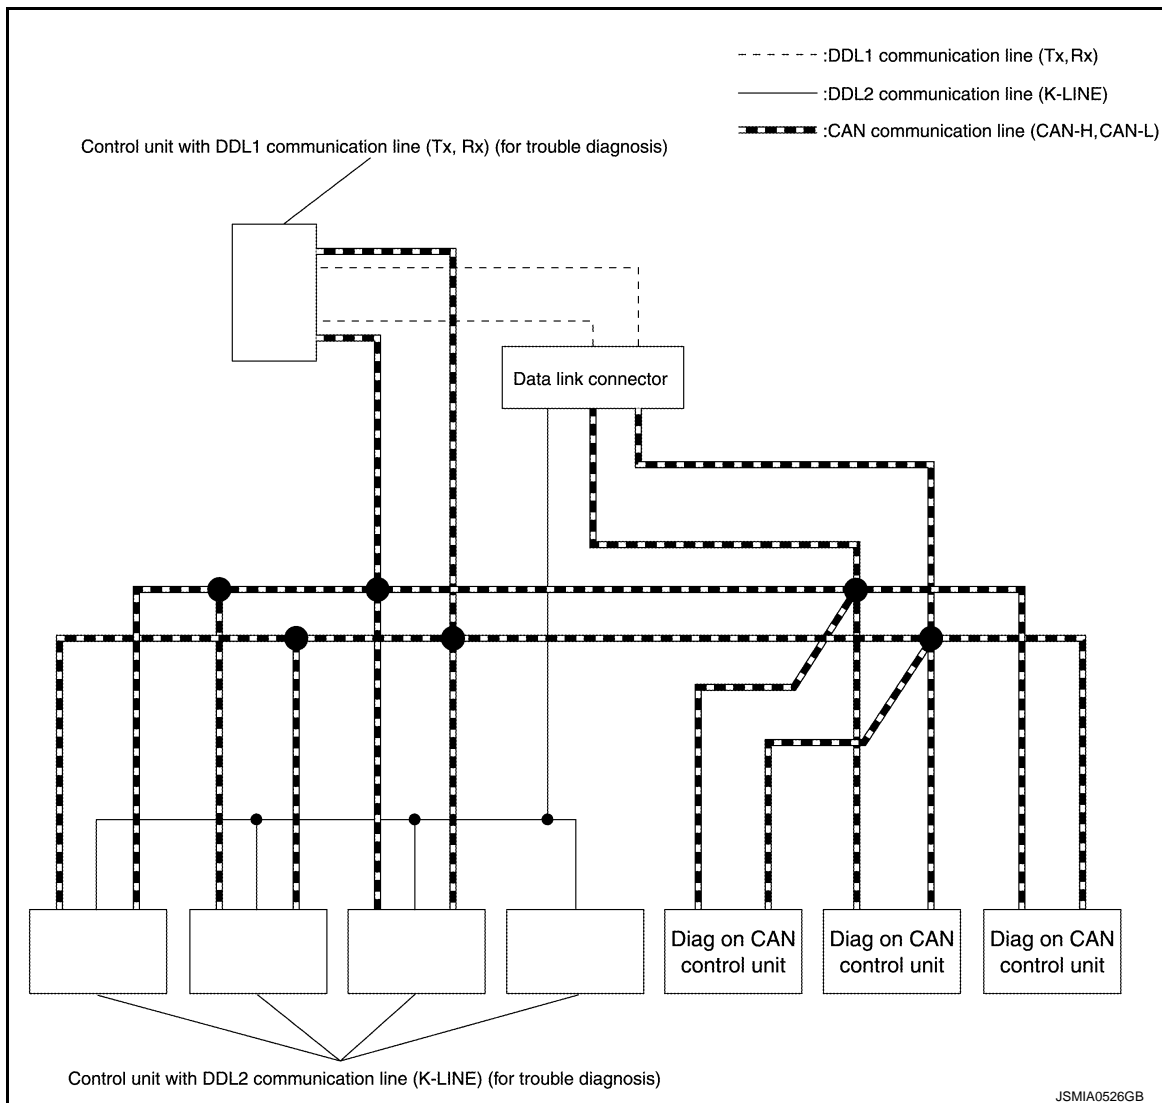

SYSTEM

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Name	Harness	Description
DDL1	Tx Rx	For communications with the diagnostic tool. (CAN-H and CAN-L are used for controlling)
DDL2	K-LINE	For communications with the diagnostic tool. (CAN-H and CAN-L are used for controlling)
Diag on CAN	CAN-H CAN-L	For communications with the diagnostic tool. (CAN-H and CAN-L are also used for control and diagnoses.)

DESCRIPTION

“Diag on CAN” is a diagnosis method which uses the CAN communication line for the communication between the control unit and the diagnostic tool.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N


O

P

TROUBLE DIAGNOSIS

Component Description

INFOID:000000006977549

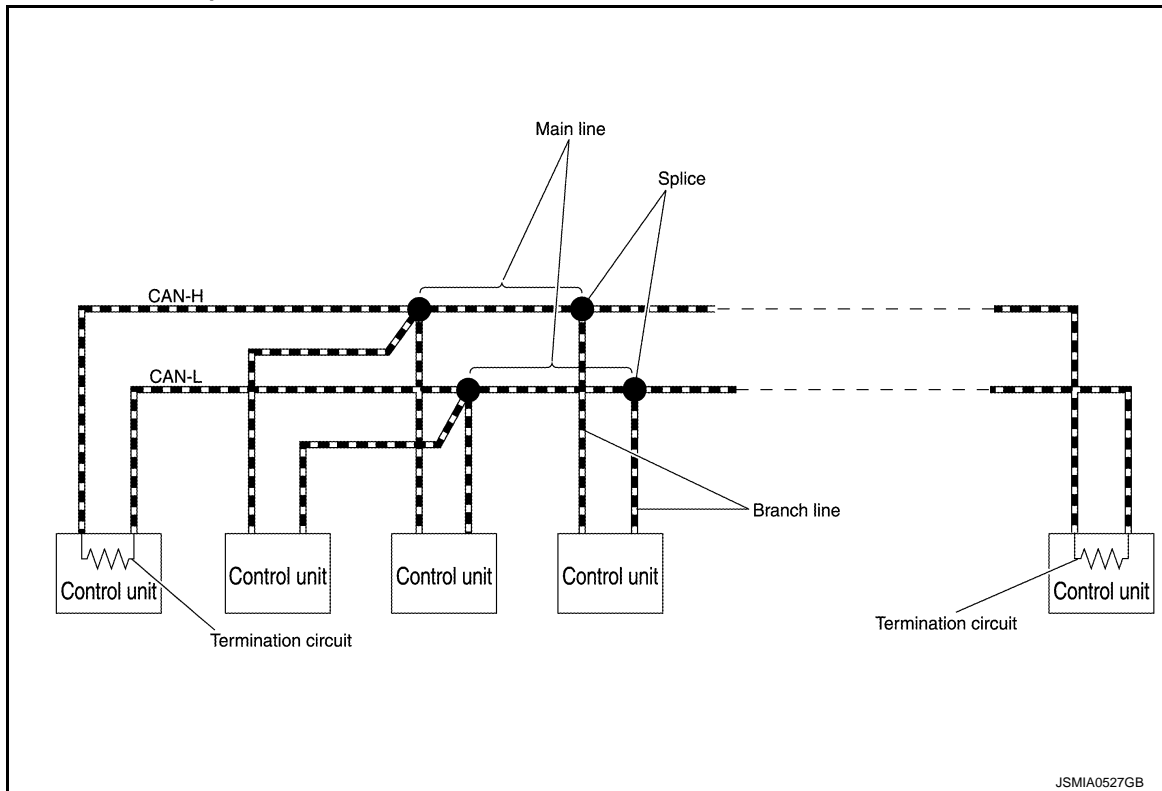

JSMIA0527GB

Component	Description
Main line	CAN communication line between splices
Branch line	CAN communication line between splice and a control unit
Splice	A point connecting a branch line with a main line
Termination circuit	Circuit connected across the CAN communication system. (Resistor)

Condition of Error Detection

INFOID:000000006977550

DTC (e.g. U1000 and U1001) of CAN communication is indicated on SELF-DIAG RESULTS on CONSULT if a CAN communication signal is not transmitted or received between units for 2 seconds or more.

CAN COMMUNICATION SYSTEM ERROR

- CAN communication line open (CAN-H, CAN-L, or both)
- CAN communication line short (ground, between CAN communication lines, other harnesses)
- Error of CAN communication control circuit of the unit connected to CAN communication line

WHEN DTC OF CAN COMMUNICATION IS INDICATED EVEN THOUGH CAN COMMUNICATION SYSTEM IS NORMAL

- Removal/installation of parts: Error may be detected when removing and installing CAN communication unit and related parts while turning the ignition switch ON. (A DTC except for CAN communication may be detected.)
- Fuse blown out (removed): CAN communication of the unit may cease.
- Voltage drop: Error may be detected if voltage drops due to discharged 12V battery when turning the ignition switch ON (Depending on the control unit which carries out CAN communication).
- Error may be detected if the power supply circuit of the control unit, which carries out CAN communication, malfunctions (Depending on the control unit which carries out CAN communication).
- Error may be detected if reprogramming is not completed normally.

NOTE:

CAN communication system is normal if DTC of CAN communication is indicated on SELF-DIAG RESULTS of CONSULT under the above conditions. Erase the memory of the self-diagnosis of each control unit.

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Symptom When Error Occurs in CAN Communication System

INFOID:000000006977551


In CAN communication system, multiple control units mutually transmit and receive signals. Each control unit cannot transmit and receive signals if any error occurs on CAN communication line. Under this condition, multiple control units related to the root cause malfunction or go into fail-safe mode.

ERROR EXAMPLE

NOTE:

Each vehicle differs in symptom of each control unit under fail-safe mode and CAN communication line wiring.

Example: Main Line Between Data Link Connector and ABS Actuator and Electric Unit (Control Unit) Open Circuit

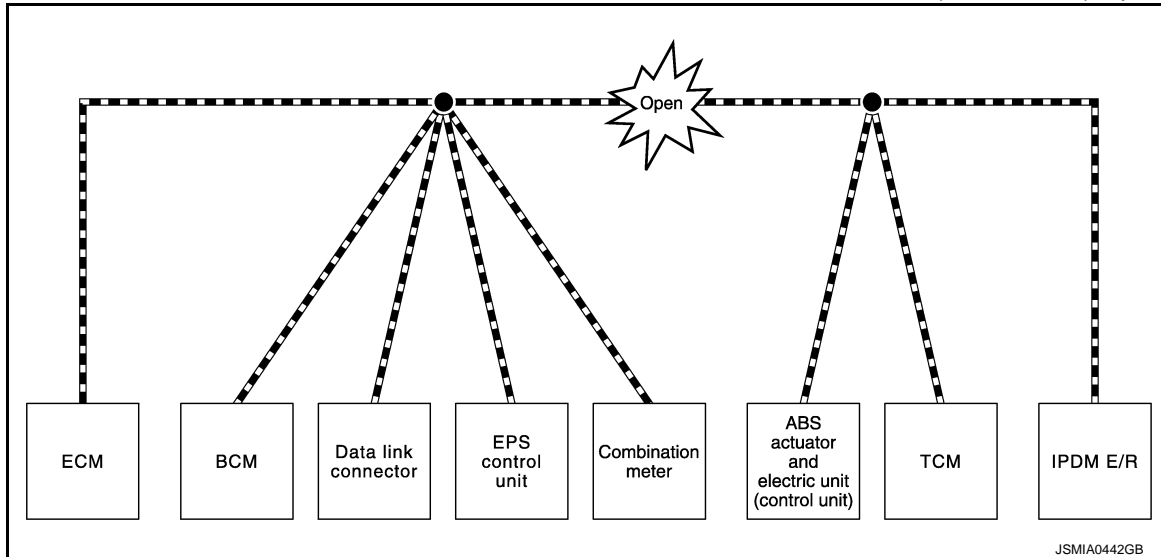


Unit name	Major symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	<ul style="list-style-type: none">Reverse warning buzzer does not sound.The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position.
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none">The shift position indicator and OD OFF indicator turn OFF.The speedometer is inoperative.The odo/trip meter stops.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none">The headlamps (Lo) turn ON.The cooling fan continues to rotate.

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Example: TCM Branch Line Open Circuit

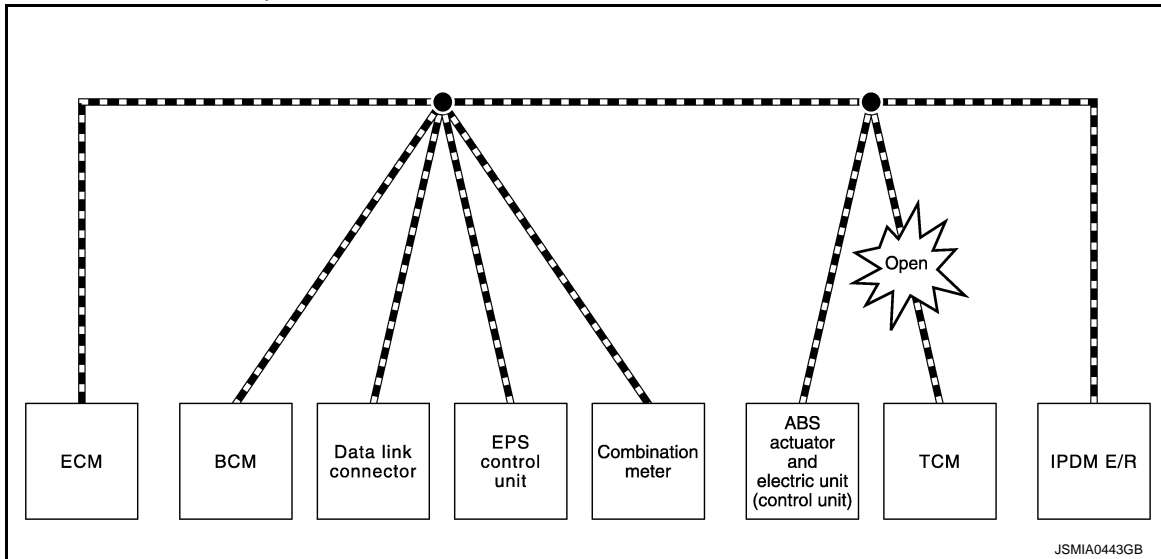


Unit name	Major symptom
ECM	Engine torque limiting is affected, and shift harshness increases.
BCM	Reverse warning buzzer does not sound.
EPS control unit	Normal operation.
Combination meter	<ul style="list-style-type: none"> Shift position indicator and O/D OFF indicator turn OFF. Warning lamps turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	Normal operation.

NOTE:

The model (all control units on CAN communication system are Diag on CAN) cannot perform CAN diagnosis with CONSULT if the following error occurs. The error is judged by the symptom.

Error	Difference of symptom
Data link connector branch line open circuit	Normal operation.
CAN-H, CAN-L harness short-circuit	Most of the control units which are connected to the CAN communication system enter fail-safe mode or are deactivated.

Example: Data Link Connector Branch Line Open Circuit

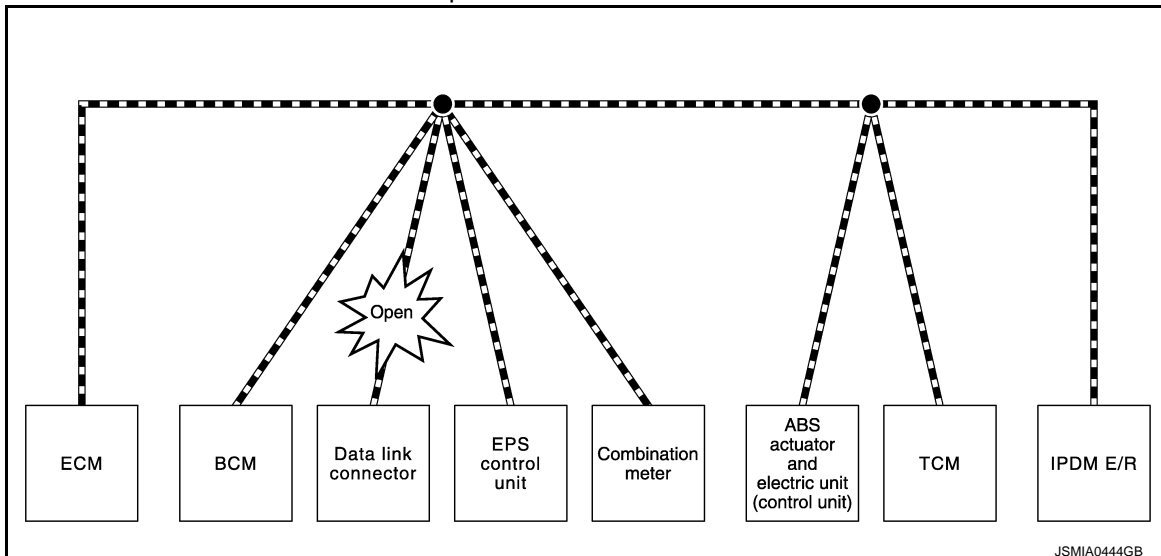

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >


[CAN FUNDAMENTAL]

Unit name	Major symptom
ECM	Normal operation.
BCM	
EPS control unit	
Combination meter	
ABS actuator and electric unit (control unit)	
TCM	
IPDM E/R	

NOTE:

When data link connector branch line is open, transmission and reception of CAN communication signals are not affected. Therefore, no symptoms occur. However, be sure to repair malfunctioning circuit.

Example: CAN-H, CAN-L Harness Short Circuit

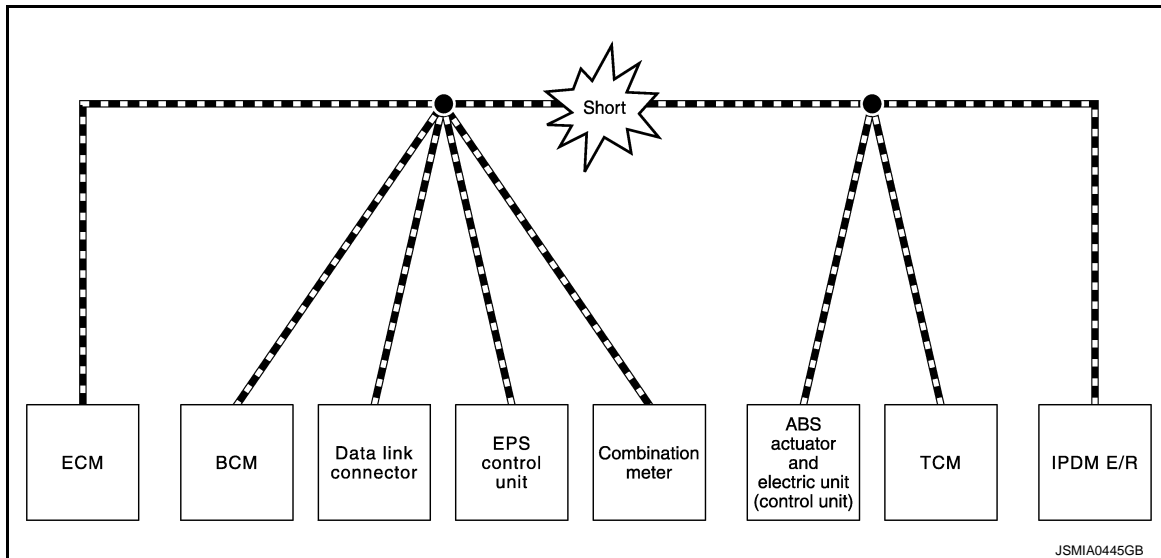

Unit name	Major symptom
ECM	<ul style="list-style-type: none"> Engine torque limiting is affected, and shift harshness increases. Engine speed drops.
BCM	<ul style="list-style-type: none"> Reverse warning buzzer does not sound. The front wiper moves under continuous operation mode even though the front wiper switch being in the intermittent position. The room lamp does not turn ON. The engine does not start (if an error or malfunction occurs while turning the ignition switch OFF.) The steering lock does not release (if an error or malfunction occurs while turning the ignition switch OFF.)
EPS control unit	The steering effort increases.
Combination meter	<ul style="list-style-type: none"> The tachometer and the speedometer do not move. Warning lamps turn ON. Indicator lamps do not turn ON.
ABS actuator and electric unit (control unit)	Normal operation.
TCM	No impact on operation.
IPDM E/R	When the ignition switch is ON, <ul style="list-style-type: none"> The headlamps (Lo) turn ON. The cooling fan continues to rotate.

CAN Diagnosis with CONSULT

INFOID:000000006977552

CAN diagnosis on CONSULT extracts the root cause by receiving the following information.

TROUBLE DIAGNOSIS

[CAN FUNDAMENTAL]

< SYSTEM DESCRIPTION >

- Response to the system call
- Control unit diagnosis information
- Self-diagnosis
- CAN diagnostic support monitor

Self-Diagnosis

INFOID:000000006977553

If communication signals cannot be transmitted or received among control units communicating via CAN communication line, CAN communication-related DTC is displayed on the CONSULT "Self Diagnostic Result" screen.

NOTE:

The following table shows examples of CAN communication-related DTC. For other DTC, refer to the applicable sections.

DTC	Self-diagnosis item (CONSULT indication)	DTC detection condition		Inspection/Action
U1000	CAN COMM CIRCUIT	ECM	When ECM is not transmitting or receiving CAN communication signal of OBD (emission-related diagnosis) for 2 seconds or more.	Start the inspection. Refer to the applicable section of the indicated control unit.
		Except for ECM	When a control unit (except for ECM) is not transmitting or receiving CAN communication signal for 2 seconds or more.	
U1001	CAN COMM CIRCUIT	When ECM is not transmitting or receiving CAN communication signal other than OBD (emission-related diagnosis) for 2 seconds or more.		
U1002	SYSTEM COMM	When a control unit is not transmitting or receiving CAN communication signal for 2 seconds or less.		
U1010	CONTROL UNIT(CAN)	When an error is detected during the initial diagnosis for CAN controller of each control unit.		
				Replace the control unit indicating “U1010”.

CAN Diagnostic Support Monitor

INFOID:000000006977554

MONITOR ITEM (CONSULT)

Example: CAN DIAG SUPPORT MNTR indication

Without PAST			With PAST		
ECM			ECM		
	PRSENT	PAST		PRSENT	PAST
INITIAL DIAG	OK		TRANSMIT DIAG	OK	OK
TRANSMIT DIAG	OK		VDC/TCS/ABS	-	-
TCM	OK		METER/M&A	OK	OK
VDC/TCS/ABS	UNKWN		BCM/SEC	OK	OK
METER/M&A	OK		ICC	-	-
ICC	UNKWN		HVAC	-	-
BCM/SEC	OK		TCM	OK	OK
IPDM E/R	OK		EPS	-	-
			IPDM E/R	OK	OK
			e4WD	-	-
			AWD/4WD	OK	OK

JSMIA0015GB

Without PAST

Item	PRSENT	Description
Initial diagnosis	OK	Normal at present
	NG	Control unit error (Except for some control units)

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

Item	PRSNT	Description
Transmission diagnosis	OK	Normal at present
	UNKWN	Unable to transmit signals for 2 seconds or more.
		Diagnosis not performed
Control unit name (Reception diagnosis)	OK	Normal at present
	UNKWN	Unable to receive signals for 2 seconds or more.
		Diagnosis not performed
		No control unit for receiving signals. (No applicable optional parts)

With PAST

Item	PRSNT	PAST	Description
Transmission diagnosis	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to transmit signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to transmit signals for 2 seconds or more at present.
Control unit name (Reception diagnosis)	OK	OK	Normal at present and in the past
		1 – 39	Normal at present, but unable to receive signals for 2 seconds or more in the past. (The number indicates the number of ignition switch cycles from OFF to ON.)
	UNKWN	0	Unable to receive signals for 2 seconds or more at present.
	–	–	Diagnosis not performed.
			No control unit for receiving signals. (No applicable optional parts)

LAN

TROUBLE DIAGNOSIS

< SYSTEM DESCRIPTION >

[CAN FUNDAMENTAL]

How to Use CAN Communication Signal Chart

INFOID:000000006977555

The CAN communication signal chart lists the signals transmitted/received among control units. It is useful for detecting the root cause by finding a signal related to the symptom, and by checking transmission and reception unit.


Example: Tachometer does not move even though the engine rotates.

T: Transmit R: Receive

Signal name/Connecting unit	ECM	BCM	M&A	STRG	ABS	IPDM-E
A/C compressor feedback signal	T		R			
A/C compressor request signal	T					R
Accelerator pedal position signal	T				R	
Cooling fan motor operation signal	T					R
Engine coolant temperature signal	T		R			
Engine speed signal	T		R		R	
Fuel consumption monitor signal	T		R			
Malfunction indicator lamp signal	T		R			
A/C switch signal	R	T				
Ignition switch signal		T				R
Sleep/wake up signal		T	R			R

No communication between ECM and M&A (Combination meter).

It indicates that an error occurs between ECM and Combination meter (Shaded area).

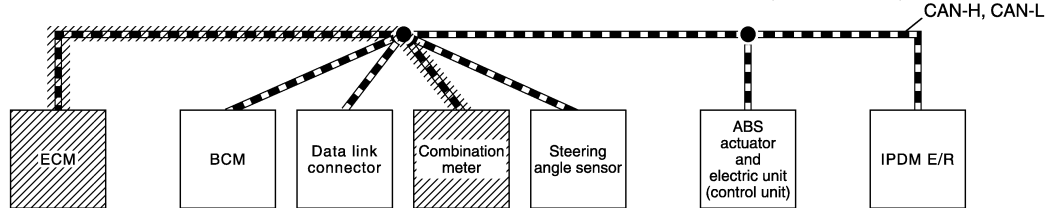


JSMIA0446GB

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Trouble Diagnosis Flow Chart

INFOID:000000006977556

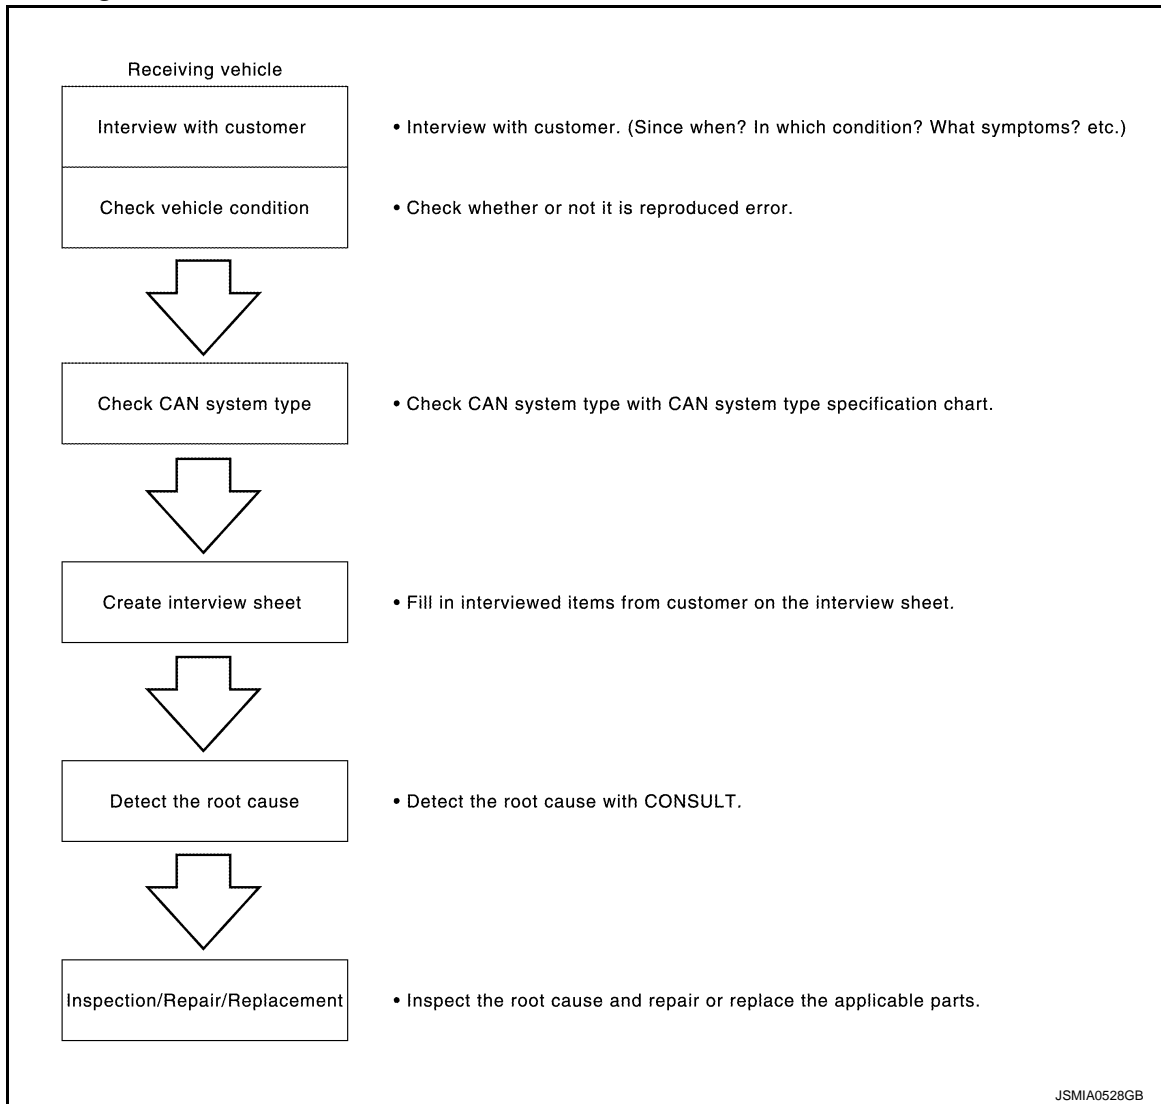

Trouble Diagnosis Procedure

INFOID:000000006977557

INTERVIEW WITH CUSTOMER

Interview with the customer is important to detect the root cause of CAN communication system errors and to understand vehicle condition and symptoms for proper trouble diagnosis.

Points in interview

- What: Parts name, system name
- When: Date, Frequency
- Where: Road condition, Place
- In what condition: Driving condition/environment
- Result: Symptom

Notes for checking error symptoms:


- Check normal units as well as error symptoms.
- Example: Circuit between ECM and the combination meter is judged normal if the customer indicates tachometer functions normally.
- When a CAN communication system error is present, multiple control units may malfunction or go into fail-safe mode.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

- Indication of the combination meter is important to detect the root cause because it is the most obvious to the customer, and it performs CAN communication with many units.

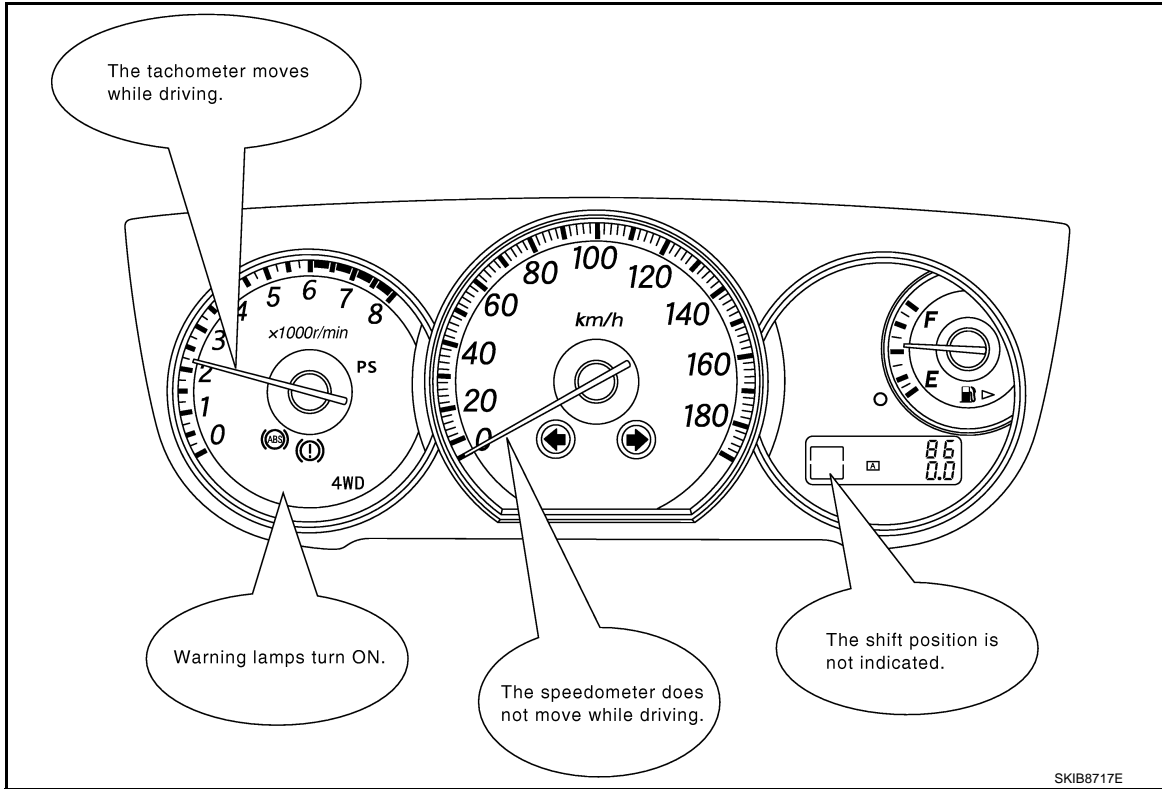

INSPECTION OF VEHICLE CONDITION

Check whether the symptom is reproduced or not.

NOTE:

Do not turn the ignition switch OFF or disconnect the 12V battery cable while reproducing the error. The error may temporarily correct itself, making it difficult to determine the root cause.

CHECK OF CAN SYSTEM TYPE (HOW TO USE CAN SYSTEM TYPE SPECIFICATION CHART)

Determine CAN system type based on vehicle equipment.

NOTE:

- This chart is used if CONSULT does not automatically recognize CAN system type.
- There are two styles for CAN system type specification charts. Depending on the number of available system types, either style A or style B may be used.

CAN System Type Specification Chart (Style A)

NOTE:

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:

Vehicle is equipped as follows: Wagon, AWD, VQ35DE, CVT, VDC, and Intelligent Key system. (○ shows an example of CAN system type.)

CAN System Specification Chart

Determine CAN system type from the following specification chart.


Body type	Wagon					
Axle	2WD			AWD		
Engine	QR25DE			VQ35DE		
Transmission	A/T			CVT		
Brake control	ABS			VDC		
Intelligent Key system		×		×		×
CAN system type	1	2	3	4	5	6
CAN communication control unit						
ECM	×	×	×	×	×	×
AWD control unit					×	×
Air bag diagnosis sensor unit	×	×	×	×	×	×
BCM	×	×	×	×	×	×
Intelligent Key unit		×		×		×
Steering angle sensor					×	×
EPS control unit	×	×	×	×	×	×
Combination meter	×	×	×	×	×	×
ABS actuator and electric unit (control unit)	×	×	×	×	×	×
TCM	×	×	×	×	×	×
IPDM E/R	×	×	×	×	×	×

×: Applicable

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION

NOTE:

Check CAN system type from the vehicle shape and equipment.

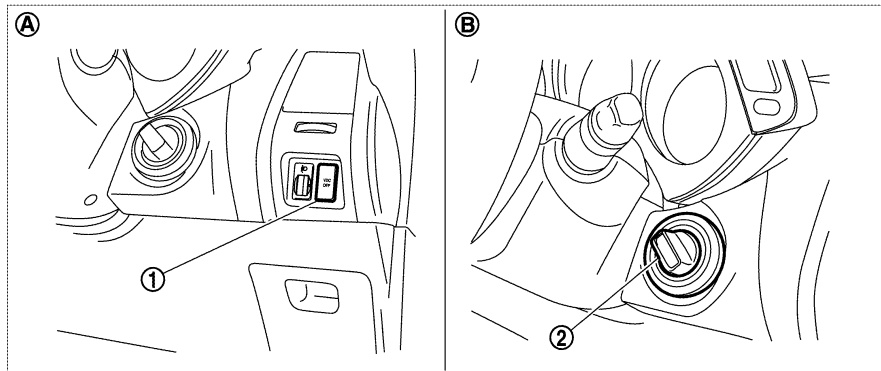

1. VDC OFF switch

A. With VDC

2. Ignition knob

B. With Intelligent Key system

For the above case, CAN system type is "6".

In the above example,
• Checking VDC OFF switch leads to judge whether or not VDC is equipped.

• Checking the ignition knob leads to judge whether or not Intelligent Key system is equipped.

JSMIA0529GB

CAN System Type Specification Chart (Style B)

NOTE:

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

CAN system type is easily checked with the vehicle equipment identification information shown in the chart.

Example:
Vehicle is equipped as follows: Sedan, 2WD, MR20DE, CVT, ABS, Active AFS, Intelligent Key system, Navigation system and Automatic drive positioner. (○ shows an example of CAN system type.)

CAN System Specification Chart
Refer to the specification as shown in the chart.

Body type	Sedan		
Axle	2WD		AWD
Engine	HR15DE	MR20DE	HR15DE
Transmission	A/T	CVT	A/T
Brake control	ABS		
Specification chart	XX.XX. SPECIFICATION CHART A.	XX.XX. SPECIFICATION CHART B.	XX.XX. SPECIFICATION CHART C.

×: Applicable

Check the vehicle equipment with the vehicle identification number plate.
Check the vehicle equipment.
Select the applicable vehicle equipment. Refer to the specification chart.

SPECIFICATION CHART B
Determine CAN system type from the following specification chart.

Body type	Sedan											
Axle	2WD											
Engine	MR20DE											
Transmission	CVT											
Brake control	ABS											
Active AFS		×			×	×			×	×	×	×
Intelligent Key system			×		×		×	×	×	×	×	×
Navigation system				×		×	×		×		×	×
Automatic drive positioner								×		×	×	×
CAN system type	9	10	11	12	13	14	15	16	17	18	19	20

ECM: × × × × × × × × × × × ×
AFS control unit: × × × × × × × × × × × ×
BCM: × × × × × × × × × × × ×
IPDM E/R: × × × × × × × × × × × ×

×: Applicable

Check the vehicle equipment.
The number indicates the CAN system type of the vehicle.

VEHICLE EQUIPMENT IDENTIFICATION INFORMATION
NOTE:
Check CAN system type from the vehicle shape and equipment.

In the above example,

- Checking Xenon bulb and bending lamp lead to judge whether or not Active AFS is equipped.
- Checking the ignition knob leads to judge whether or not Intelligent Key system is equipped.
- Checking display and multifunction switch lead to judge whether or not Navigation system is equipped.
- Checking seat memory switch leads to judge whether or not Automatic drive positioner is equipped.

1. Bending lamp

4. Display

A. With active AFS

D. With automatic drive positioner

2. Xenon bulb

5. Multifunction switch

B. With Intelligent Key system

3. Ignition knob

6. Seat memory switch

C. With navigation system

For the above case, CAN system type is "20".

JSMIA0530GB

CREATE INTERVIEW SHEET

Fill out the symptom described by the customer, vehicle condition, and CAN system type on the interview sheet.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[CAN FUNDAMENTAL]

Interview Sheet (Example)

CAN Communication System Diagnosis Interview Sheet	
Date received: 3, Feb. 2006	
Type: DBA-KG11	VIN No.: KG11-005040
Model: BDRARGZG11EDA-E-J-	
First registration: 10, Jan. 2001	Mileage: 62,140
CAN system type: Type 19	
Symptom (Results from interview with customer)	
<ul style="list-style-type: none">• Headlamps suddenly turn ON while driving the vehicle.• The engine does not restart after stopping the vehicle and turning the ignition switch OFF.• The cooling fan continues rotating while turning the ignition switch ON.	
Condition at inspection	
Error Symptom: Present / Past	
<p>The engine does not start.</p> <p>While turning the ignition switch ON,</p> <ul style="list-style-type: none">• The headlamps (Lo) turn ON, and the cooling fan continues rotating.• The interior lamp does not turn ON.	

JSMIA0531GB

DETECT THE ROOT CAUSE

CAN diagnosis function of CONSULT detects the root cause.

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

HOW TO USE THIS MANUAL

HOW TO USE THIS SECTION

Information

INFOID:000000006977725

- “CAN” of LAN Section describes information peculiar to a vehicle and inspection procedures.
- For trouble diagnosis procedure, refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#) of “CAN FUNDAMENTAL”.

Abbreviation List

INFOID:000000006977726

Control unit name abbreviations in CONSULT CAN diagnosis and in this section are as per the following list.

Abbreviation	Control unit name
A-BAG	Air bag diagnosis sensor unit
ABS	ABS actuator and electric unit (control unit)
AV	AV control unit
BCM	BCM
BRAKE	Electrically-driven intelligent brake unit
DLC	Data link connector
E-SHIFT	Electric shift control module
EHS/PKB	Electric parking brake control module
EPS	EPS control unit
EV/HEV	VCM
HVAC	A/C auto amp.
HV BAT	Li-ion battery controller
INV/MC	Traction motor inverter
IPDM-E	IPDM E/R
M&A	Combination meter
OBC	On board charger
STRG	Steering angle sensor
TCU	TCU

PRECAUTION

PRECAUTIONS

Precaution for Technicians Using Medical Electric

INFOID:000000007071855

OPERATION PROHIBITION

WARNING:

- Parts with strong magnet is used in this vehicle.
- Technicians using a medical electric device such as pacemaker must never perform operation on the vehicle, as magnetic field can affect the device function by approaching to such parts.

NORMAL CHARGE PRECAUTION

WARNING:

- If a technician uses a medical electric device such as an implantable cardiac pacemaker or an implantable cardioverter defibrillator, the possible effects on the devices must be checked with the device manufacturer before starting the charge operation.
- As radiated electromagnetic wave generated by on board charger at normal charge operation may effect medical electric devices, a technician using a medical electric device such as implantable cardiac pacemaker or an implantable cardioverter defibrillator must not enter the vehicle compartment (including luggage room) during normal charge operation.

PRECAUTION AT TELEMATICS SYSTEM OPERATION

WARNING:

- If a technician uses implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), avoid the device implanted part from approaching within approximately 220 mm (8.66 in) from interior/exterior antenna.
- The electromagnetic wave of TCU might affect the function of the implantable cardiac pacemaker or the implantable cardioverter defibrillator (ICD), when using the service, etc.
- If a technician uses other medical electric devices than implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), the electromagnetic wave of TCU might affect the function of the device. The possible effects on the devices must be checked with the device manufacturer before TCU use.

PRECAUTION AT INTELLIGENT KEY SYSTEM OPERATION


WARNING:

- If a technician uses implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), avoid the device implanted part from approaching within approximately 220 mm (8.66 in) from interior/exterior antenna.
- The electromagnetic wave of Intelligent Key might affect the function of the implantable cardiac pacemaker or the implantable cardioverter defibrillator (ICD), at door operation, at each request switch operation, or at engine starting.
- If a technician uses other medical electric devices than implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), the electromagnetic wave of Intelligent Key might affect the function of the device. The possible effects on the devices must be checked with the device manufacturer before Intelligent Key use.

High Voltage Precautions

INFOID:000000007064118

DANGER:

 Since hybrid vehicles and electric vehicles contain a high voltage battery, there is the risk of electric shock, electric leakage, or similar accidents if the high voltage component and vehicle are handled incorrectly. Be sure to follow the correct work procedures when performing inspection and maintenance.

WARNING:

- Be sure to remove the service plug in order to disconnect the high voltage circuits before performing inspection or maintenance of high voltage system harnesses and parts.
- The removed service plug must always be carried in a pocket of the responsible worker or placed in the tool box during the procedure to prevent the plug from being connected by mistake.

PRECAUTIONS

< PRECAUTION >

[CAN]

- Be sure to wear insulated protective equipment before beginning work on the high voltage system.
- Never allow workers other than the responsible person to touch the vehicle containing high voltage parts. To keep others from touching the high voltage parts, these parts must be covered with an insulating sheet except when using them.

CAUTION:

Never bring the vehicle into the READY status with the service plug removed unless otherwise instructed in the Service Manual. A malfunction may occur if this is not observed.

HIGH VOLTAGE HARNESS AND EQUIPMENT IDENTIFICATION

All the high voltage harnesses and connectors are orange. The Li-ion battery and other high voltage devices include an orange high voltage label. Never touch these harnesses and high voltage parts.

HANDLING OF HIGH VOLTAGE HARNESS AND TERMINALS

Immediately insulate disconnected high voltage connectors and terminals with insulating tape.

REGULATIONS ON WORKERS WITH MEDICAL ELECTRONICS

WARNING:

The vehicle contains parts that contain powerful magnets. If a person who is wearing a heart pacemaker or other medical device is close to these parts, the medical device may be affected by the magnets. Such persons must not perform work on the vehicle.

PROHIBITED ITEMS TO CARRY DURING THE WORK

Hybrid vehicles and electric vehicles contain parts with high voltage and intense magnetic force. Never carry metal products and magnetic recording media (e.g. cash card, prepaid card) to repair/inspect high voltage parts. If this is not observed, the metal products may create a risk of short circuit and the magnetic recording media may lose their magnetic recording.

POSTING A SIGN OF "DANGER! HIGH VOLTAGE AREA. KEEP OUT"

PRECAUTIONS

< PRECAUTION >

[CAN]

Indicate "HIGH VOLTAGE. DO NOT TOUCH" on the vehicle under repair/inspection to call attention to other workers.

**DANGER:
HIGH VOLTAGE
REPAIR IN PROGRESS.
DO NOT TOUCH!**

Person in charge:

**DANGER:
HIGH VOLTAGE
REPAIR IN PROGRESS.
DO NOT TOUCH!**

Person in charge:_____

Copy this page and put it after folding on the roof of the vehicle in service.

JSAIA1600GB

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000006968937

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS

PRECAUTIONS

< PRECAUTION >

[CAN]

system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the power switch ON, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the power switch OFF, disconnect the 12V battery, and wait at least 3 minutes before performing any service.

Point to Be Checked Before Starting Maintenance Work

INFOID:000000007079506

The high voltage system may start automatically. It is required to check that the timer air conditioner and timer charge (during EVSE connection) are not set before starting maintenance work.

NOTE:

If the timer air conditioner or timer charge (during EVSE connection) is set, the high voltage system starts automatically even when the power switch is in OFF state.

Precautions for Removing Battery Terminal


INFOID:000000006968932

- When removing the 12V battery terminal, turn OFF the power switch and wait at least 5 minutes.

NOTE:

ECU may be active for several minutes after the power switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- Always disconnect the battery terminal within 60 minutes after turning OFF the power switch. Even when the power switch is OFF, the 12V battery automatic charge control may automatically start after a lapse of 60 minutes from power switch OFF.
- Disconnect 12V battery terminal according to the following steps.

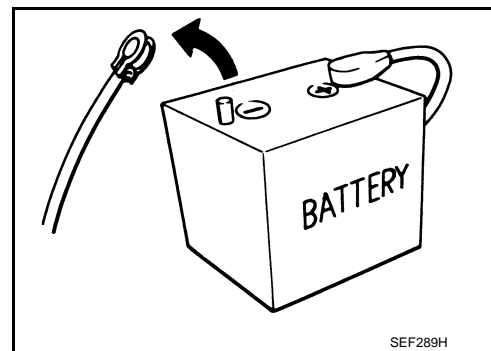

SEF289H

WORK PROCEDURE

1. Check that EVSE is not connected.

NOTE:

If EVSE is connected, the air conditioning system may be automatically activated by the timer A/C function.

2. Turn the power switch OFF → ON → OFF. Get out of the vehicle. Close all doors (including back door).
3. Check that the charge status indicator lamp does not blink and wait for 5 minutes or more.

NOTE:

If the battery is removed within 5 minutes after the power switch is turned OFF, plural DTCs may be detected.

4. Remove 12V battery terminal within 60 minutes after turning the power switch OFF → ON → OFF.

CAUTION:

PRECAUTIONS

< PRECAUTION >

[CAN]

- After all doors (including back door) are closed, if a door (including back door) is opened before battery terminals are disconnected, start over from Step 1.
- After turning the power switch OFF, if "Remote A/C" is activated by user operation, stop the air conditioner and start over from Step 1.

NOTE:

Once the power switch is turned ON → OFF, the 12V battery automatic charge control does not start for approximately 1 hour.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the power switch.

NOTE:

If the power switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

Precautions for Trouble Diagnosis

INFOID:000000006968933

CAUTION:

Follow the instructions listed below. Failure to do this may cause damage to parts:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.
- Turn the power switch OFF and disconnect the 12 V battery cable from the negative terminal when checking the harness. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).


Precautions for Harness Repair

INFOID:000000006968934

- Solder the repaired area and wrap tape around the soldered area.

NOTE:


A fray of twisted lines must be within 110 mm (4.33 in).

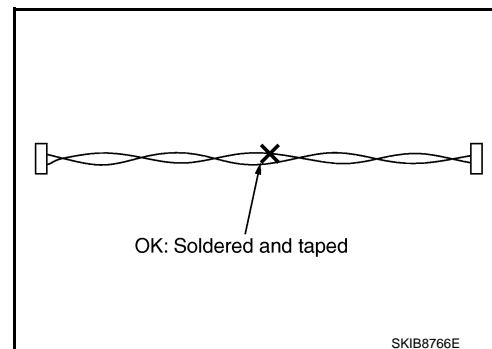

- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause CAN communication error. The spliced wire becomes separated and the characteristics of twisted line are lost.

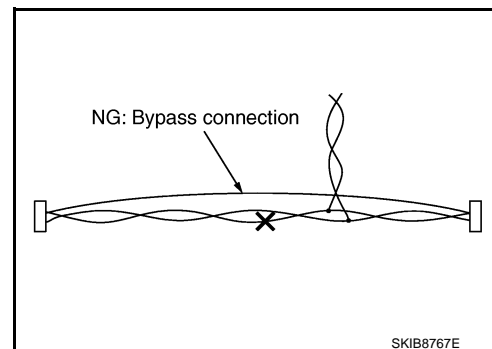

- Replace the applicable harness as an assembly if error is detected on the shield lines of CAN communication line.

PREPARATION

< PREPARATION >


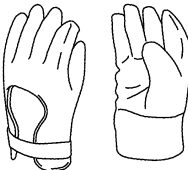

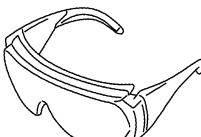
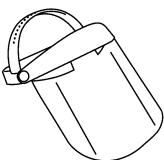
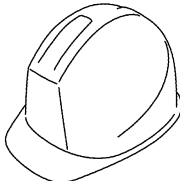
[CAN]

PREPARATION

PREPARATION

Commercial Service Tools

INFOID:000000006968935


Tool name		Description
Insulated gloves [Guaranteed insulation performance for 1000V/300A]	 JMCIA0149ZZ	Removing and installing high voltage components
Leather gloves [Use leather gloves that can fasten the wrist tight]	 JPCIA0066ZZ	<ul style="list-style-type: none"> • Removing and installing high voltage components • Protect insulated gloves
Insulated safety shoes	 JPCIA0011ZZ	Removing and installing high voltage components
Safety glasses [ANSI Z87.1]	 JPCIA0012ZZ	<ul style="list-style-type: none"> • Removing and installing high voltage components • To protect eye from the spatter on the work to electric line
Face shield	 JPCIA0167ZZ	<ul style="list-style-type: none"> • Removing and installing high voltage components • To protect face from the spatter on the work to electric line
Insulated helmet	 JPCIA0013ZZ	Removing and installing high voltage components

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000006977727

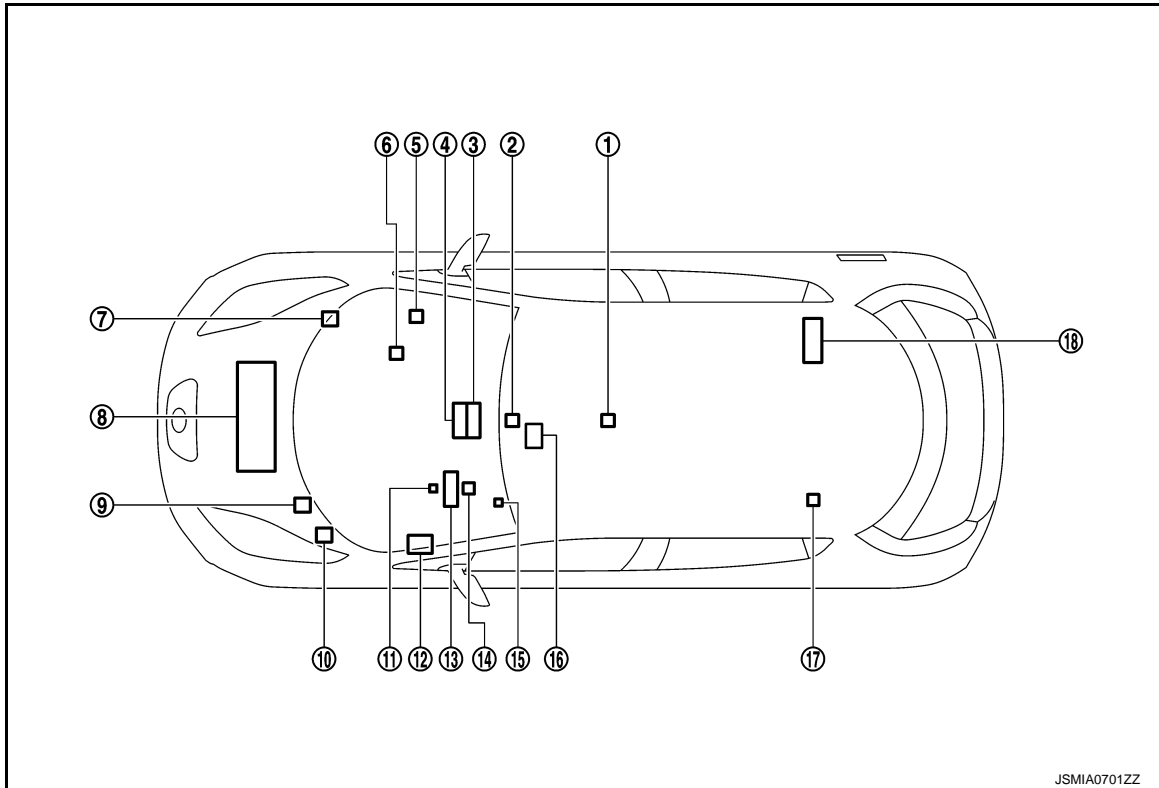

- | | | |
|--|---|---|
| 1. Air bag diagnosis sensor unit | 2. Electric shift control module | 3. AV control unit |
| 4. A/C auto amp. | 5. TCU | 6. VCM |
| 7. ABS actuator and electric unit (control unit) | 8. Traction motor inverter | 9. Electrically-driven intelligent brake unit |
| 10. IPDM E/R | 11. EPS control unit | 12. BCM |
| 13. Combination meter | 14. Steering angle sensor | 15. Data link connector |
| 16. Li-ion battery | 17. Electric parking brake control module | 18. On board charger |

LAN


SYSTEM

CAN COMMUNICATION SYSTEM

CAN COMMUNICATION SYSTEM : System Description

INFOID:000000006977728

SYSTEM DIAGRAM

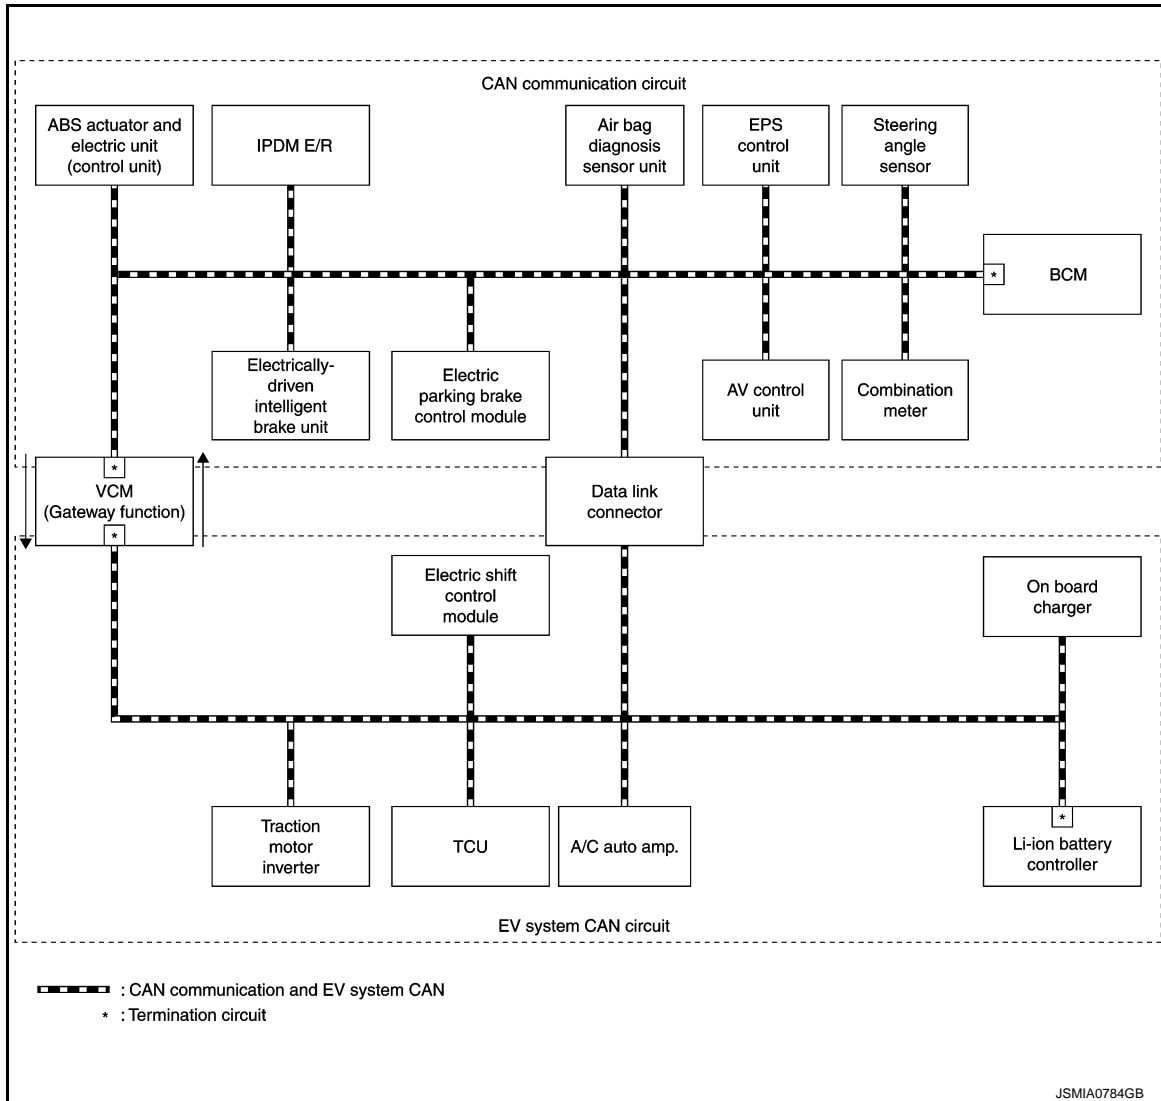


DESCRIPTION

- CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.
- VCM includes a gateway function and communicates signals between the CAN communication circuit and EV system CAN circuit. Refer to [EVC-19. "VCM"](#).

CAN Communication Signal Generation

< SYSTEM DESCRIPTION >


- Termination circuits (resistors) are connected across the CAN communication system. When transmitting a CAN communication signal, each control unit passes a current to the CAN-H line and the current returns to the CAN-L line.

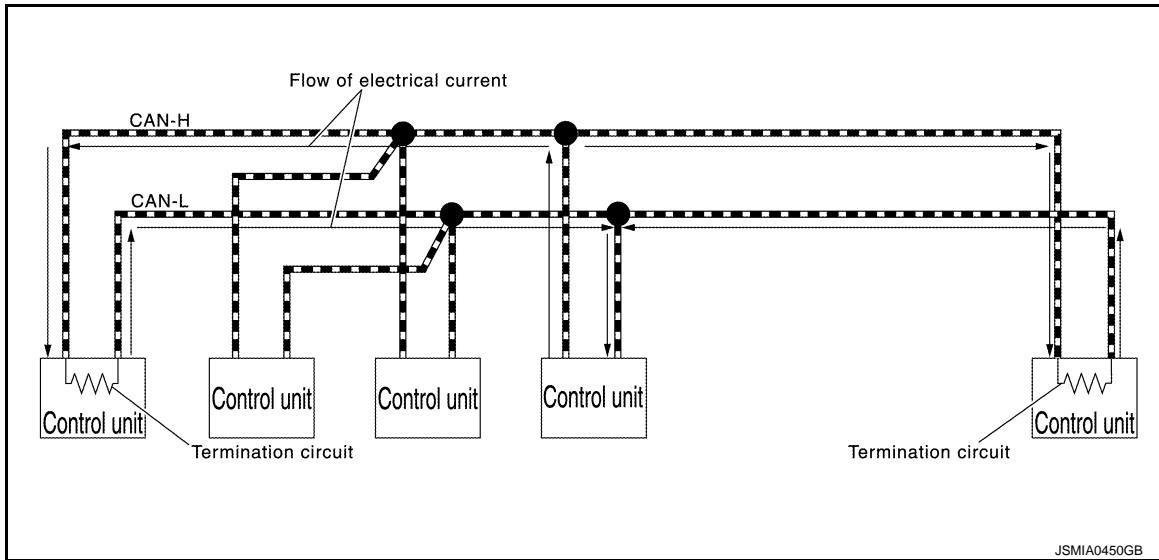


- The current flows separately into the termination circuits connected across the CAN communication system and the termination circuits drop voltage to generate a potential difference between the CAN-H line and the CAN-L line.

NOTE:


A signal with no current passage is called "Recessive" and one with current passage is called "Dominant".

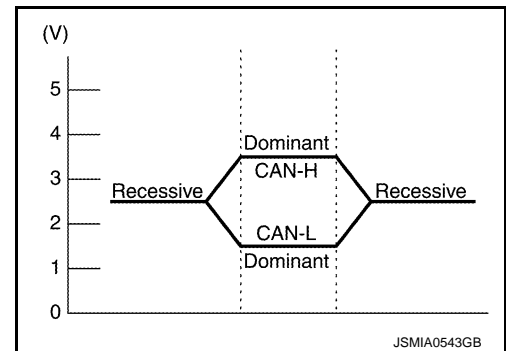

- The system produces digital signals for signal communications, by using the potential difference.

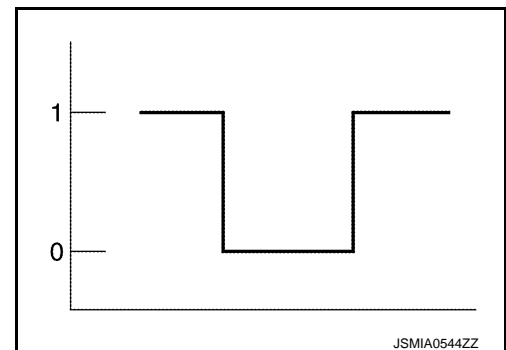


The Construction of CAN Communication Signal (Message)

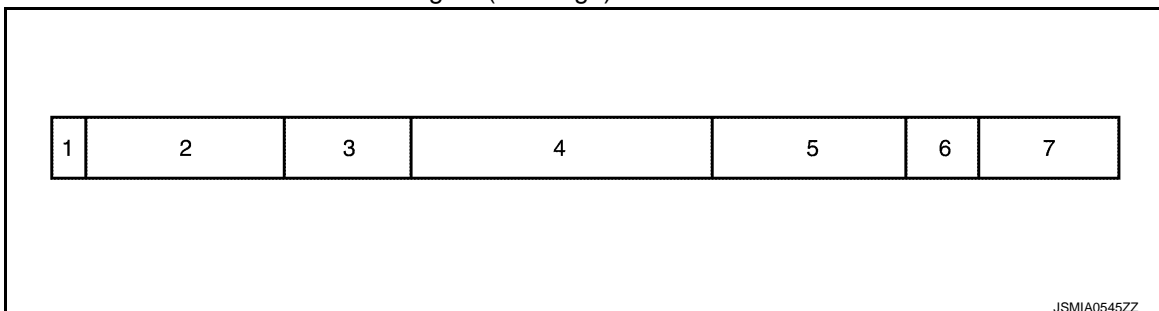

No.	Message name	Description
1	Start of frame (1 bit)	Start of message.
2	Arbitration of field (11 bit)	Priorities of message-sending are shown when there is a possibility that multiple messages are sent at the same time.
3	Control field (6 bit)	Signal quantity in data field is shown.
4	Data field (0-64 bit)	Actual signal is shown.
5	CRC field (16 bit)	<ul style="list-style-type: none"> The transmitting control unit calculates sending data in advance and writes the calculated value in a message. The receiving control unit calculates received data and judges that the data reception is normal when the calculated value is the same as the value written in the sent data.
6	ACK field (2 bit)	The completion of normal reception is sent to the transmitting control unit.
7	End of frame (7 bit)	End of message.

CAN COMMUNICATION LINE


The CAN communication line is a twisted pair wire consisting of strands of CAN-H (1) and CAN-L (2) and has noise immunity.

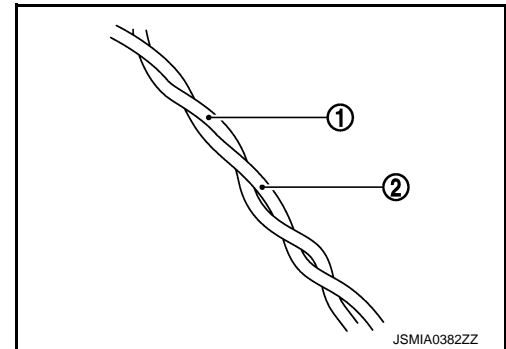

NOTE:

The CAN communication system has the characteristics of noise-resistant because this system produces digital signals by using the potential difference between the CAN-H line and the CAN-L line and has the twisted pair wire structure.

Since the CAN-H line and the CAN-L line are always adjacent to each other, the same degree of noise occurs, respectively, when a noise (1) occurs. Although the noise changes the voltage, the potential difference (2) between the CAN-H line and the CAN-L line is insensitive to noise. Therefore, noise-resistant signals can be obtained.

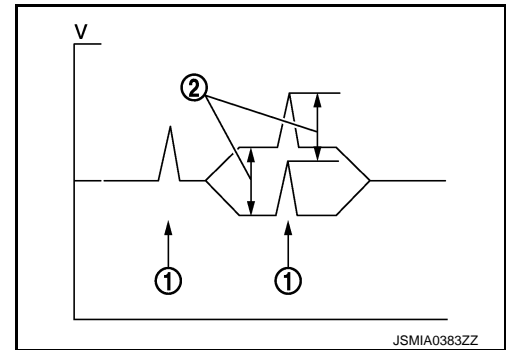


CAN SIGNAL COMMUNICATIONS


Each control unit of the CAN communication system transmits signals through the CAN communication control circuit included in the control unit and receives only necessary signals from each control unit to perform various kinds of control.

< SYSTEM DESCRIPTION >

• Example: Transmitted signals

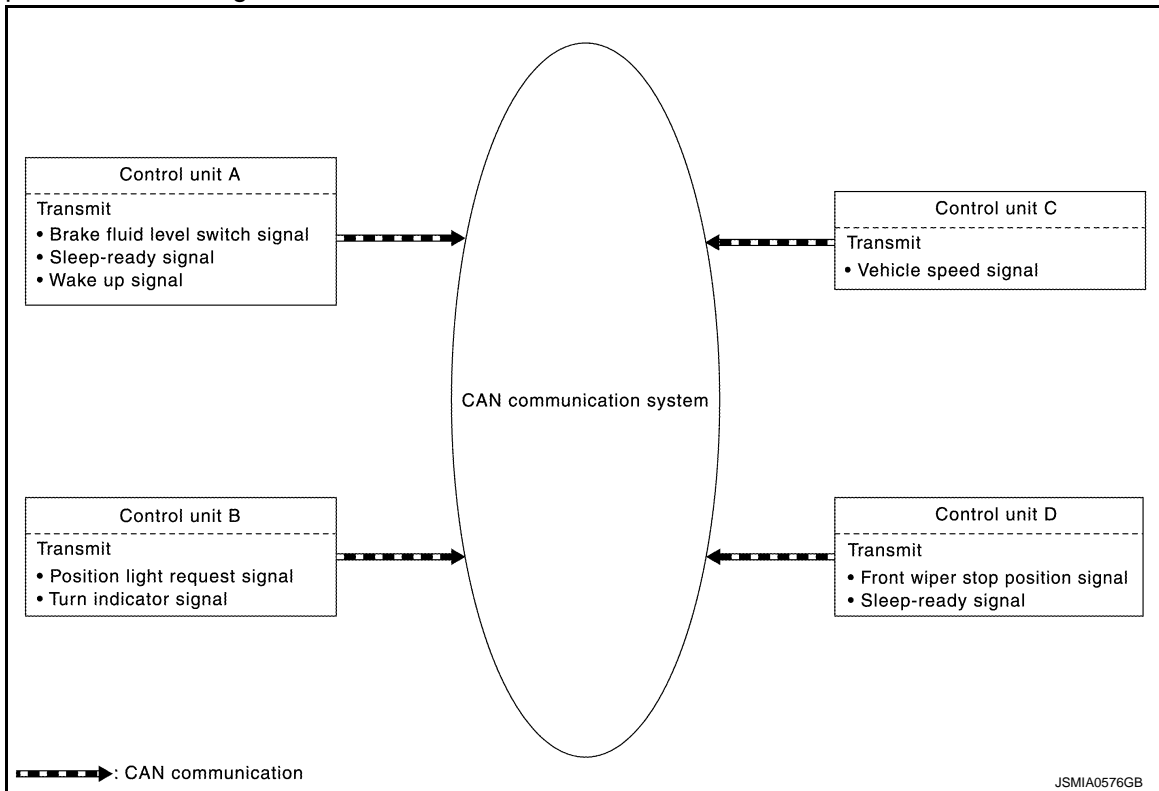

• Example: Received signals

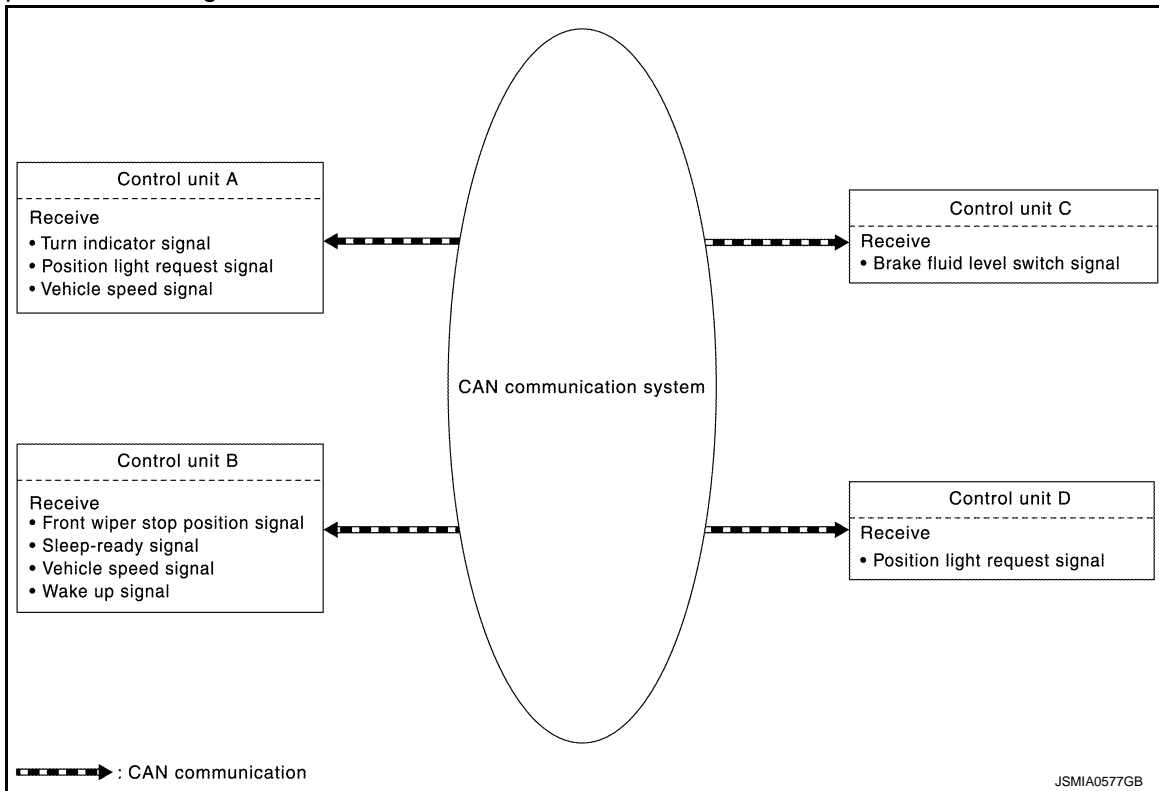**NOTE:**

The above signal names and signal communications are provided for reference purposes. For CAN communications signals of this vehicle, refer to [LAN-33. "CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart"](#).

SYSTEM


< SYSTEM DESCRIPTION >

[CAN]

CAN COMMUNICATION SYSTEM : CAN Communication Control Circuit

INFOID:000000006977729

CAN communication control circuit is incorporated into the control unit and transmits/receives CAN communication signals.

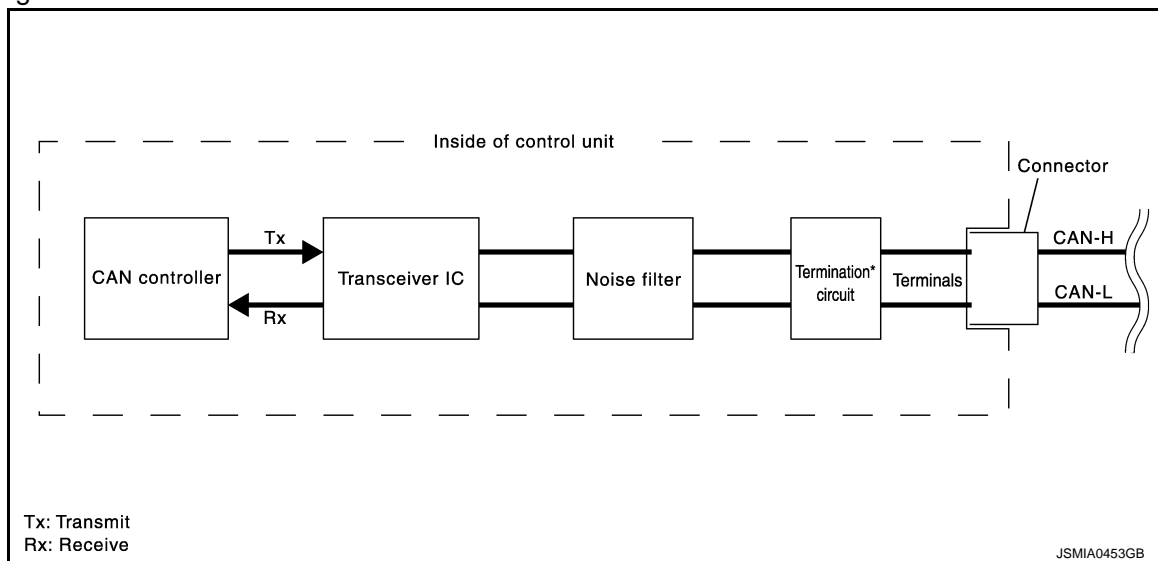

Component	System description
CAN controller	It controls CAN communication signal transmission and reception, error detection, etc.
Transceiver IC	It converts digital signal into CAN communication signal, and CAN communication signal into digital signal.
Noise filter	It eliminates noise of CAN communication signal.
Termination circuit* (Resistance of approx. 120 Ω)	Generates a potential difference between CAN-H and CAN-L.

*: These are the only control units wired with both ends of CAN communication system.

CAN COMMUNICATION SYSTEM : CAN System Specification Chart

INFOID:000000006977730

Determine CAN system type from the following specification chart.

NOTE:

Refer to [LAN-15, "Trouble Diagnosis Procedure"](#) for how to use CAN system specification chart.

Body type	4-door hatch back
Motor	EM61
Axle	2WD
Transmission	Reduction gear
Brake control	VDC
CAN system type	1
CAN communication control unit	
VCM	×
ABS actuator and electric unit (control unit)	×
Electrically-driven intelligent brake unit	×
IPDM E/R	×
Electric parking brake control module	×
Air bag diagnosis sensor unit	×
AV control unit	×
Data link connector	×
EPS control unit	×

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Body type	4-door hatch back
Motor	EM61
Axle	2WD
Transmission	Reduction gear
Brake control	VDC
Combination meter	×
Steering angle sensor	×
BCM	×
EV system CAN control unit	
VCM	×
Traction motor inverter	×
Data link connector	×
Electric shift control module	×
A/C auto amp.	×
TCU	×
On board charger	×
Li-ion battery controller	×

×: Applicable

CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart

INFOID:0000000006833640

Refer to [LAN-14. "How to Use CAN Communication Signal Chart"](#) for how to use CAN communication signal chart.

NOTE:

Refer to [LAN-20. "Abbreviation List"](#) for the abbreviations of the connecting units.

T: Transmit R: Receive

Signal name	CAN communication circuit										EV system CAN circuit						
	BCM	STRG	M&A	EPS	AV	A-BAG	EH/EPKB	IPDM-E	BRAKE	ABS	EV/HEV	INV/MC	E-SHIFT	HVAC	TCU	OBC	HV BAT
Buzzer output signal	T		R								T						
Daytime running light request signal*	T							R									
Door switch signal	T		R					R	R								
Front fog light request signal	T		R					R									
Front wiper request signal	T							R									
High beam request signal	T		R					R									
Horn reminder signal	T							R									
Low beam request signal	T							R									
Low tire pressure warning lamp signal	T		R														
Meter display signal	T		R														
Position light request signal	T		R					R									
Rear window defogger control signal	T							R									
								T			R						
Sleep wake up signal	T		R					R	R								
Stop lamp switch signal	T						R										
									R	T							
											T		R				

LAN

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name	CAN communication circuit										EV system CAN circuit						
	BCM	STRG	M&A	EPS	AV	A-BAG	EHS/PKB	IPDM-E	BRAKE	ABS	EV/HEV	INV/MC	E-SHIFT	HVAC	TCU	OBC	HV BAT
Theft warning horn request signal	T							R									
TPMS warning lamp signal	T		R														
Turn indicator signal	T		R														
Steering angle sensor signal		T			R				R	R							
Brake fluid level switch signal			T							R							
Odometer signal	R		T		R						R						
Parking brake switch signal			T							R							
Seat belt buckle switch signal (driver side)	R		T				R										
Sleep-ready signal	R		T					T									
Vehicle speed signal (Meter)	R		T	R	R			R			R						
Wake up signal	R		T														
EPS warning lamp signal			R	T													
Current time signal					T						R						
Car crash information signal						T					R						
Electric parking brake indicator lamp signal			R				T										
Master warning signal			R				T										
Front wiper status signal								T			R						
Front wiper stop position signal	R							T									
High beam status signal								T			R						
Hood switch signal	R							T									
Interlock/PNP switch signal	R							T									
	T							R									
Low beam status signal								T			R						
P position signal	R							T									
Power switch ON signal	R						R	T									
	T							R	R								
Power switch (push switch) status signal	R							T									
Brake assist request signal									T	R							
Brake backup operation signal									T	R							
Brake fluid pressure command signal									T	R							
Brake system warning lamp signal			R						T								
Brake warning lamp signal			R						T	T							
Electrically-driven intelligent brake control signal									T	R							
Target braking force signal									T		R						
ABS actuator and electric unit (control unit) control signal									R	T							
ABS warning lamp signal			R							T							
Brake warning lamp signal			R							T							
Decel G signal							R		R	T							
EBD malfunction signal									R	T							
EBD operation signal									R	T							

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name	CAN communication circuit										EV system CAN circuit						
	BCM	STRG	M&A	EPS	AV	A-BAG	EHS/PKB	IPDM-E	BRAKE	ABS	EV/HEV	INV/MC	E-SHIFT	HVAC	TCU	OBC	HV BAT
Front LH wheel speed signal									R	T							
Front RH wheel speed signal									R	T							
Rear LH wheel speed signal							R		R	T							
Rear RH wheel speed signal							R		R	T							
Side G signal									R	T							
Stop lamp OFF relay signal									R	T							
TCS operation signal									R	T	R						
Torque limit request signal										T	R						
VDC OFF indicator lamp signal			R							T							
VDC operation signal									R	T	R						
VDC warning lamp signal			R							T							
Vehicle speed signal (ABS)	R		R	R			R		R	T	R						
											T		R				
Yaw rate signal									R	T							
12-volt battery charge warning lamp request signal			R								T						
A/C consumption power status display signal					R						T						
A/C consumption signal			R		R						T						
A/C expected consumption signal											T				R		
A/C maximum power signal											T			R			
A/C OFF average electricity consumption for driving range signal			R								T						
			T		R												
A/C ON average electricity consumption for driving range signal			R								T						
			T		R												
Accelerator pedal position signal							R			R	T						
ASCD status signal			R								T						
Charge status signal											T				R		
Compressor ON inhibition signal											T			R			
Current motor power signal			R		R						T						
Current regenerative torque signal									R		T						
Driving range difference signal			R								T						
			T		R												
Driving range flashing request signal			R								T						
Driving range request signal			R								T						
Driving range signal			R								T						
ECO mode request signal											T			R			
ECO tree signal			R		R						T						
Electricity consumption signal			R								T						
F/S CHG relay status signal											T					R	
High voltage power supply status signal											T	R					
Instant ECO indicator signal			R								T						

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name	CAN communication circuit										EV system CAN circuit						
	BCM	STRG	M&A	EPS	AV	A-BAG	EHS/PKB	IPDM-E	BRAKE	ABS	EV/HEV	INV/MC	E-SHIFT	HVAC	TCU	OBC	HV BAT
Keep SOC request signal											T						R
Li-ion battery charging data signal					R						T						
Li-ion battery temperature signal			R								T						
Low battery charge warning lamp request signal			R								T						
Maximum charge power signal											T					R	
Maximum motor output power signal			R								T						
Maximum regenerable power signal			R								T						
Motor charge preparation request signal											T	R					
Motor discharge request signal											T	R					
Motor torque control signal										R	T						
Next charge time signal			R								T						
Next departure time signal			R								T						
Next pre-A/C time signal			R								T						
Others consumption signal			R		R						T						
Plug in warning display signal			R								T						
Power limitation cause signal			R								T						
Power limitation indicator lamp request signal			R								T						
Power OFF permit signal	R										T						
Power steering start activation request signal				R							T						
Pre-A/C priority signal					R						T						
Pre-A/C status signal											T				R		
Pre-A/C timer signal					R						T						
Pulse signal OFF signal											T	R					
READY condition signal	R										T						
READY to drive indicator lamp request signal			R								T						
Rear window defogger status signal											T			R			
Refrigerant pressure signal											T			R			
Regenerative torque command signal											T	R					
Remaining time to charge completion (100 V) signal			R		R						T				R		
Remaining time to charge completion (200 V) signal			R		R						T				R		
Shift P range request display signal			R								T						
Soon charge switch request signal			R								T						
System cut off signal											T	R					
Target Li-ion battery remained energy signal											T						R
Target motor torque signal											T	R					
Timer A/C request signal											T			R			
Traction motor consumption signal					R						T						

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name	CAN communication circuit											EV system CAN circuit						
	BCM	STRG	M&A	EPS	AV	A-BAG	EHS/PKB	IPDM-E	BRAKE	ABS	EV/HEV	INV/MC	E-SHIFT	HVAC	TCU	OBC	HV BAT	
VCM activation/deactivation command signal					R						T				R			
VCM control signal									R	R	T							
VCM status signal	R				R		R				T				R			
Vehicle stop and parking brake operation request display signal			R								T							
Vibration control switching signal											T	R						
Diagnostic trouble code signal											R	T				T	T	
High voltage discharge permit signal											R	T					T	
High voltage power supply preparation completion signal											R	T						
Input high voltage signal											R	T						
Motor discharge status signal											R	T						
Motor speed signal							R				R	T						
Motor torque limit signal											R	T						
System main relay ON permit signal											R	T					T	
Electric shift warning lamp signal											R		T					
			R								T							
Electric shift warning message signal											R		T					
			R								T							
Shift position signal											R	R	T					
	R		R				R			R	T	R						
Shift refuse buzzer signal											R		T					
			R								T							
A/C switch ON signal											R			T				
Ambient sensor signal											R			T				
			R								T							
Blower fan ON signal											R			T				
Evaporator temperature signal											R			T				
Target evaporator temperature signal											R			T				
Timer A/C operation time signal											R			T				
HV harness interlock signal (PTC)											R			T				
Remote A/C request signal											R				T			
Remote charge request signal											R				T			
VCM sleep signal											R				T			
AC input type signal											R				R	T		
EV system warning lamp request signal											R					T		
			R								T							
EVSE PWM communication signal											R					T		
HV harness interlock signal (OBC)											R					T		
Quick charge start/stop 1 signal											R					T		
Quick charge start/stop 2 signal											R					T		

A
B
C
D
E
F
G
H
I
J
K
L
LAN
N
O
P

SYSTEM

< SYSTEM DESCRIPTION >

[CAN]

Signal name	CAN communication circuit										EV system CAN circuit						
	BCM	STRG	M&A	EPS	AV	A-BAG	EHS/PKB	IPDM-E	BRAKE	ABS	EV/HEV	INV/MC	E-SHIFT	HVAC	TCU	OBC	HV BAT
Quick charge voltage signal											R					T	
Quick charger connecting signal											R					T	
Charge type signal											R					R	T
Insulation resistance signal											R						T
Li-ion battery available charge signal											R						T
			R								T				R		
Li-ion battery capacity signal											R					R	T
			R								T				R		
Li-ion battery cell control signal											R						T
Li-ion battery charge completion signal											R						T
Li-ion battery chargeable power signal											R						T
Li-ion battery connector interlock signal											R						T
Li-ion battery current signal											R					R	T
Li-ion battery dischargeable power signal											R						T
Li-ion battery gradual capacity loss signal											R						T
			R								T				R		
Li-ion battery main relay cut request signal											R						T
Li-ion battery voltage signal											R					R	T
Next start time signal											R						T
Power limit cause (LBC) signal											R						T
Remaining time to charge completion signal											R					R	T


*: With daytime running light system

WIRING DIAGRAM

CAN SYSTEM

Wiring Diagram

INFOID:000000006977731

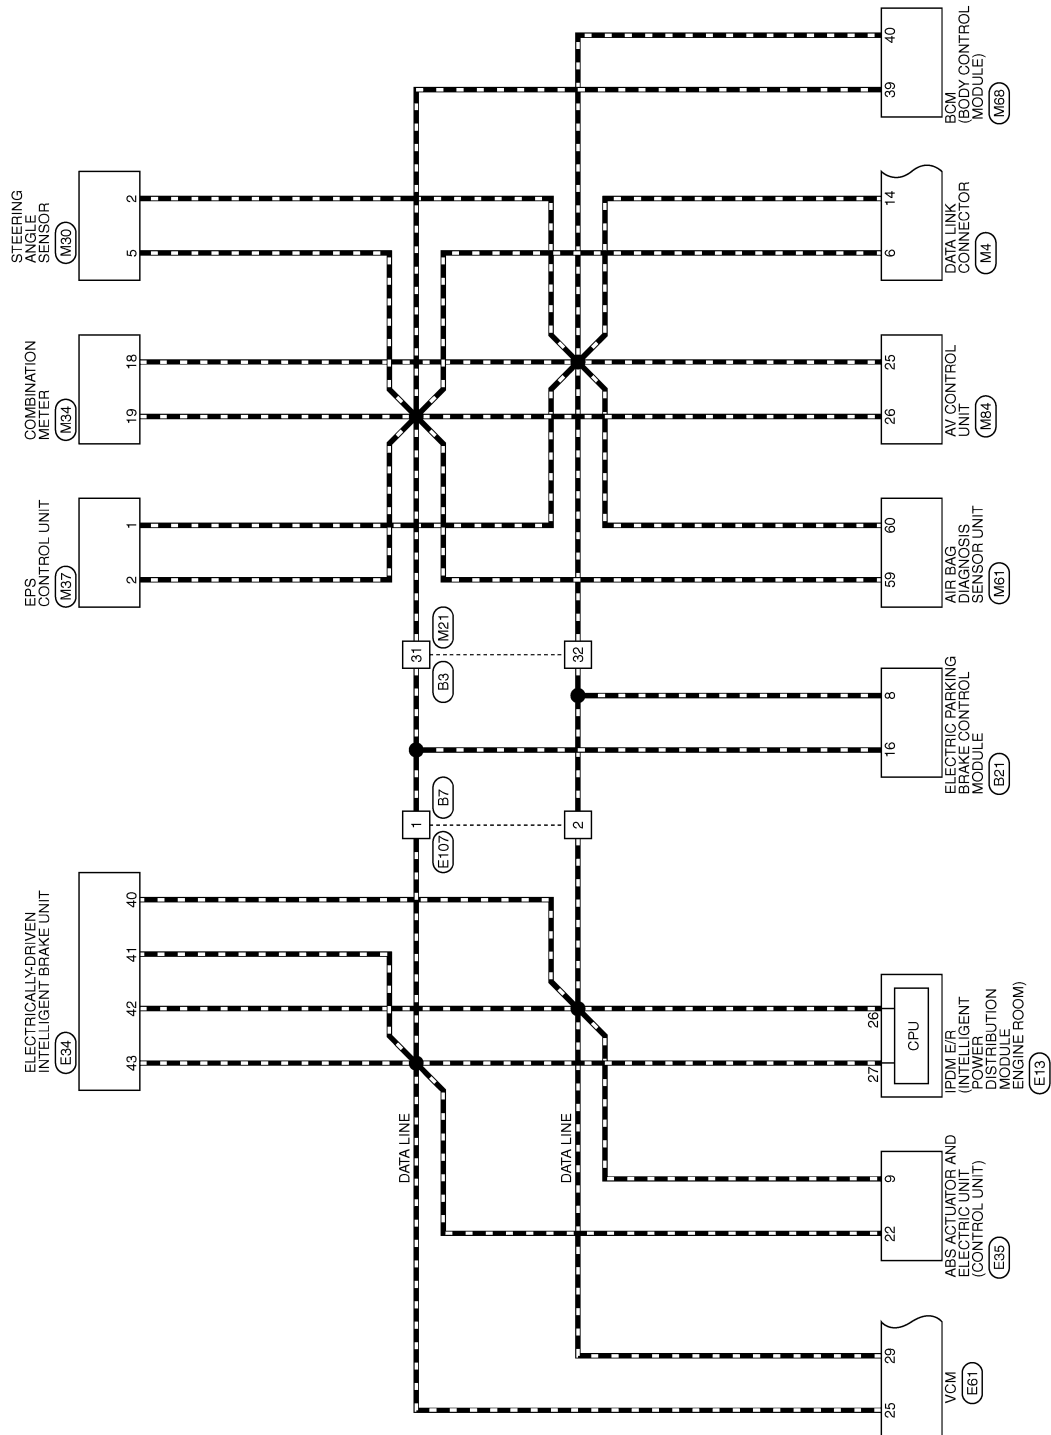

2010/10/29

JCMWA6923GB

CAN SYSTEM


A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN SYSTEM

< WIRING DIAGRAM >

[CAN]

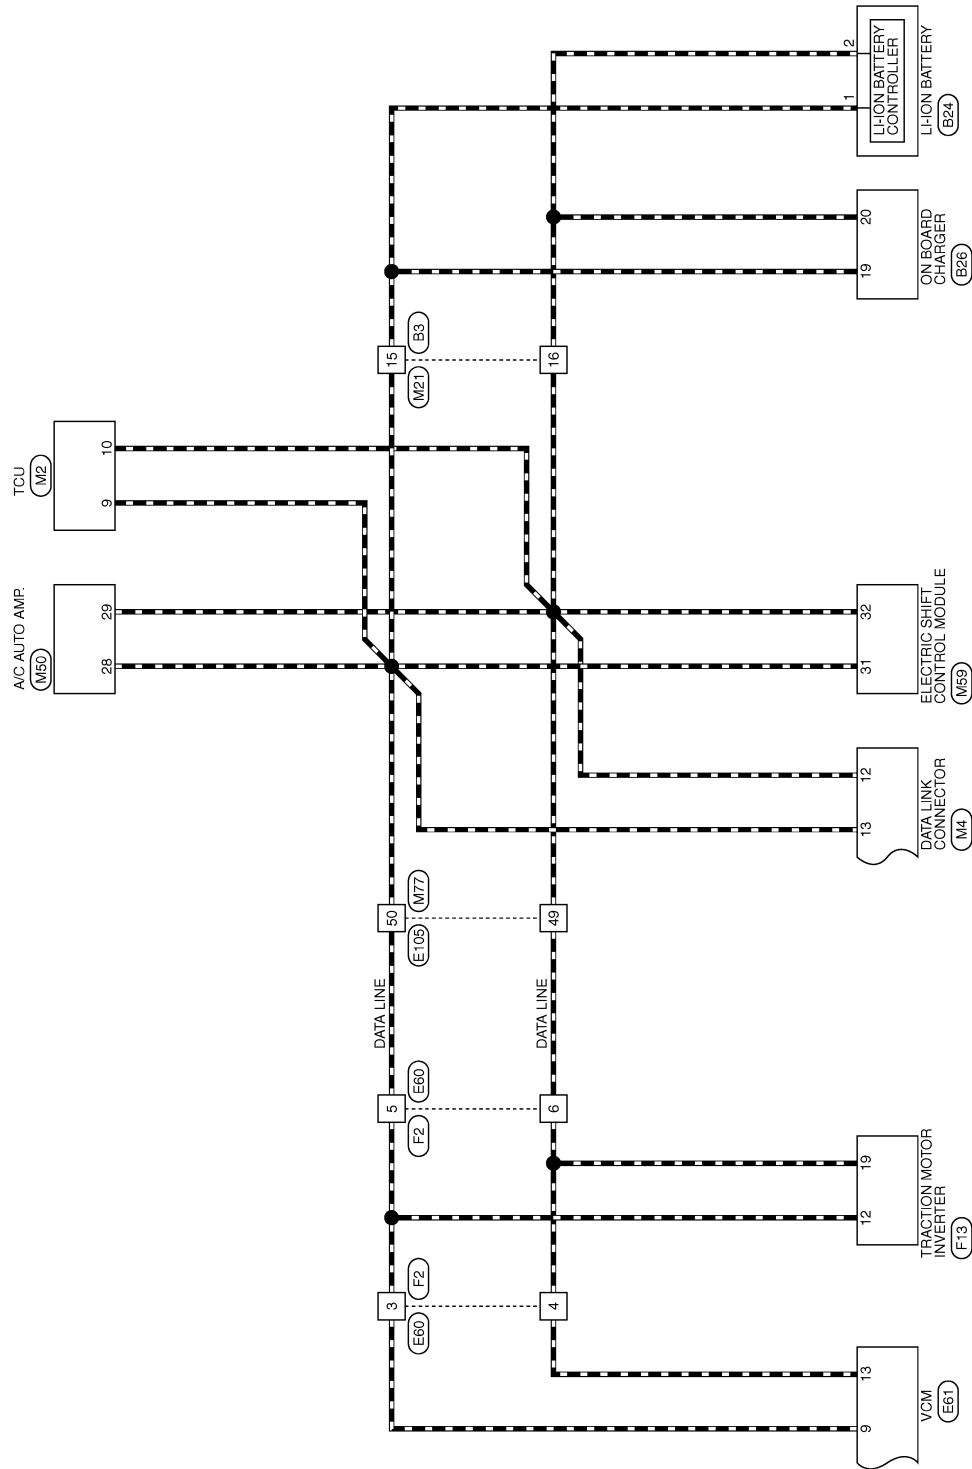

JCMWA6924GB

CAN SYSTEM

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM

Connector No.	B3
Connector Name	WIRE TO WIRE
Connector Type	TH2MW-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
3	SHIELD	-
4	B	-
5	W	-
6	R	-
11	G	-
13	L	-
16	G	-
18	L	-
19	BR	-
20	V	-
22	B	-
27	L	-
31	L	-
32	P	-

Connector No.	B7
Connector Name	WIRE TO WIRE
Connector Type	TH24VW-NH



12	11	10	9	8	7	6	5	4	3	2	1
----	----	----	---	---	---	---	---	---	---	---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	P	-
3	R	-
13	GR	-
14	B	-
15	LG	-
16	BR	-

17	G	-
18	B	-
19	Y	-
20	R	-
21	Y	-
22	W	-
23	SHIELD	-


Connector No.	B21
Connector Name	ELECTRIC PARKING BRAKE CONTROL MODULE
Connector Type	TH16FW-NH



1	2	3	4	5	6	7	8
---	---	---	---	---	---	---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	TENSION SENSOR1 SIGNAL
2	LG	TENSION SENSOR POWER SUPPLY
3	R	TENSION SENSOR2 SIGNAL
5	GR	POWER SWITCH ON
7	V	CONTROL MODULE BATTERY
8	P	CAN-L
9	L	RELEASE SW SIGNAL
10	W	ANALOG SW POWER SUPPLY
11	B	TENSION SENSOR GND
12	Y	ANALOG SW GND
13	SR	BRAKE SW SIGNAL
15	G	SHIELD GND
16	L	CAN-H

Connector No.	B24
Connector Name	LI-ION BATTERY
Connector Type	Yazaki: 7289-8750-30



Terminal No.	Color of Wire	Signal Name [Specification]
--------------	---------------	-----------------------------

1	L	EV CAN-H
2	G	EV CAN-L
4	R	IGN
5	R	BAT
6	B	GND3
7	B	GND2
8	B	GND1
10	B	PRE CHG GND
11	G	PRE CHG V
13	B	RLY2 GND
14	L	RLY2 V
16	B	RLY1 GND
17	Y	RLY1 V
21	R	CHG IGN

Connector No.	B26
Connector Name	ON BOARD CHARGER
Connector Type	RH12FB



Terminal No.	Color of Wire	Signal Name [Specification]
11	Y	BATTERY POWER SUPPLY
12	W	BATTERY POWER SUPPLY
13	V	POWER ON POWER SUPPLY
14	P	NORMAL CHARGE RELAY +
15	LG	NORMAL CHARGE RELAY -
16	L	QUICK CHARGE RELAY +
17	SB	QUICK CHARGE RELAY -
18	GR	EV ACTIVATION REQUEST SIGNAL
19	L	EV SYSTEM CAN-H
20	G	EV SYSTEM CAN-L
21	BR	PLUG IN SIGNAL
22	B	GROUND

Connector No.	E13
Connector Name	ENGINE & INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH12FW-NH



23	27	26	25	24	23
----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
25	R	-
26	P	-
27	L	-
28	G	-
32	SB	-
34	W	-

JCMWA8425GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN SYSTEM

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM


Connector No.	E34
Connector Name	ELECTRICALLY-DRIVEN INTELLIGENT BRAKE UNIT
Connector Type	SAZ4FEB-SJZ4-S



Terminal No.	Color of Wire	Signal Name [Specification]
1	R	MOTOR BATTERY
2	R	MOTOR BATTERY
5	L/O	STROKE SENSOR GND
7	W	PRESS SENSOR SIGNAL
8	O	BRAKE POWER SUPPLY BACKUP UNIT MAKEUP SIGNAL
10	W	BRAKE POWER SUPPLY BACKUP COMM
11	Y	CONTROL MODULE BATTERY
13	SB	STOP LAMP SW SIGNAL
19	W/L	STROKE SENSOR POWER SUPPLY
21	B	PRESS SENSOR POWER SUPPLY
22	W	Buzzer Signal
24	B	BRAKE COMM
25	R	Buzzer Power Supply
26	V	POWER SWITCH ON
31	B	GND
32	W	BRAKE POWER SUPPLY BACKUP UNIT BACKUP SIGNAL
35	L/Y	STROKE SENSOR1 SIGNAL
37	G	STROKE SENSOR2 SIGNAL
38	R	PRESS SENSOR GND
40	P	CAN2-L
41	L	CAN2-H
42	P	CAN1-L
43	L	CAN1-H

Connector No.	E35
---------------	-----

Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	RH28FB-RU4-DH



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	MOTOR BATTERY
2	R	VALVE BATTERY
3	B	GND
4	B	GND
5	P	ESP OFF SW SIGNAL
6	O	BRAKE SW SIGNAL
7	L/Y	PRESS SENSOR SIGNAL
8	SB	STOP LAMP SW SIGNAL
9	P	CAN-L
10	W/L	PRESS SENSOR POWER SUPPLY
11	BR	RR RH WHEEL SENSOR POWER SUPPLY
12	W	FR RH WHEEL SENSOR SIGNAL
13	G	G SENSOR POWER SUPPLY
14	B	G SENSOR SIGNAL (+)
15	LG	RR RH WHEEL SENSOR SIGNAL
16	V	POWER SWITCH ON
20	B	BRAKE COMM
21	B	FR RH WHEEL SENSOR POWER SUPPLY
22	L	CAN-H
23	R	FR LH WHEEL SENSOR POWER SUPPLY
26	B	RR LH WHEEL SENSOR POWER SUPPLY
27	Y	FR LH WHEEL SENSOR SIGNAL
28	R	G SENSOR GND
29	Y	G SENSOR SIGNAL (-)
30	G	RR LH WHEEL SENSOR SIGNAL
32	L/O	PRESS SENSOR GND


Connector No.	E60
Connector Name	WIRE TO WIRE
Connector Type	RH12MB



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
2	G	-
3	L	-
4	G	-
5	L	-
6	G	-
7	L	-
8	SB	-

9	V	-
10	O	-
11	BR	-
12	LG	-

Connector No.	E61
Connector Name	VCM
Connector Type	RH24FGY-RZ8-R-RH



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	POWER ON POWER SUPPLY
4	B/R	GROUND
5	SB	A/C RELAY
6	R	BATTERY POWER SUPPLY
7	W	SSOFF RELAY
8	B/R	GROUND
9	L	EV SYSTEM CAN-H
13	G	EV SYSTEM CAN-L
15	O	ASCD BRAKE SWITCH SIGNAL
18	SB	STOP LAMP SW SIGNAL
21	R	POWER ON POWER SUPPLY
23	P	HIGH VOLTAGE CABLE INTERLOCK
25	L	CAN-H
26	Y	WATER PUMP 2 SIGNAL
28	W	WATER PUMP 1 SIGNAL
29	P	CAN-L

JCMWA8426GB


CAN SYSTEM

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS(E-TM4)



Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	R	-
3	GR	-
4	LG	-
5	W	-
6	W	-
7	V	-
8	P	-
9	G	-
10	R	-
11	O	-
12	W	-
13	B	-
14	Y	-
15	BR	-
16	LG	-
17	L	-
18	G	-
19	V	-
20	P	-
21	P	-
22	LG	-
23	GR	-
24	L	-
25	R	-
26	SB	-
27	B	-
28	BR	-
29	W	-
30	W	-
31	V	-
32	LG	-
33	O	-
34	L	-
35	BR	-
36	SB	-
37	GR	-
38	Y	-
39	R	-
40	W	-
41	R	-
42	W	-
43	SB	-


44	GR	-
45	G	-
46	P	-
47	LG	-
48	V	-
49	G	-
50	L	-
51	W	-
54	P	-
55	O	-
56	Y	-
57	P	-
58	LG	-
60	LG	-
61	GR	-
62	BR	-
63	O	-
64	R	-
65	Y	-
66	G	-
67	V	-
68	W	-
69	SB	-
71	Y	-
72	L	-
73	R	-
74	L	-
75	V	-
76	P	-
80	O	-
81	L	-
82	SB	-
83	G	-
84	BR	-
85	LG	-
86	GR	-
88	B	-
89	W	-
90	SHIELD	-
91	Y	-
92	BR	-
93	W	-
94	R	-
95	V	-
96	P	-
97	G	-
98	SB	-
99	O	-

Connector No.	E107
Connector Name	WIRE TO WIRE
Connector Type	TH24MW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	P	-
3	SB	-
13	G	-
14	B	-
15	LG	-
16	BR	-
17	G	-
18	B	-
19	Y	-
20	R	-
21	O	-
22	W	-
23	SHIELD	-


Connector No.	F2
Connector Name	WIRE TO WIRE
Connector Type	RH12FB



Terminal No.	Color of Wire	Signal Name [Specification]
1	L/W	-
2	LG	-
3	L	-
4	G	-
5	L	-
6	G	-
7	V	-
8	Y/V	-

9	V	-
10	O	-
11	P/V	-
12	W/R	-

Connector No.	F13
Connector Name	TRACTION MOTOR INVERTER
Connector Type	RH38FG-GY



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	TRACTION MOTOR RESOLVER SIGNAL (S1)
2	B	GROUND
4	G	POWER SUPPLY (BATTERY)
6	W	TRACTION MOTOR RESOLVER SIGNAL (S3)
8	B	GROUND
10	G	POWER SUPPLY (BATTERY)
12	L	EV SYSTEM CAN-H
19	G	EV SYSTEM CAN-L
20	L	TRACTION MOTOR RESOLVER SIGNAL (S2)
27	P	TRACTION MOTOR RESOLVER SIGNAL (S4)
31	O	TRACTION MOTOR TEMPERATURE SENSOR GROUND
32	B/P	TRACTION MOTOR TEMPERATURE SENSOR
33	LG	POWER SUPPLY (CAN)
34	R	TRACTION MOTOR RESOLVER SIGNAL (R1)
35	G	TRACTION MOTOR RESOLVER SIGNAL (R2)

JCMWA8427GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

CAN SYSTEM

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM

Connector No.	M2
Connector Name	TCU
Connector Type	TH40FW-NH



2	4		10																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																		</
---	---	--	----	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	----

CAN SYSTEM

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM

Connector No.	M60
Connector Name	A/C AUTO AMP.
Connector Type	TH40FN-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23		26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	

CAN SYSTEM

< WIRING DIAGRAM >

[CAN]

CAN SYSTEM

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303	304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319	320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	347	348	349	350	351	352	353	354	355	356	357	358	359	360	361	362	363	364	365	366	367	368	369	370	371	372	373	374	375	376	377	378	379	380	381	382	383	384	385	386	387	388	389	390	391	392	393	394	395	396	397	398	399	400	401	402	403	404	405	406	407	408	409	410	411	412	413	414	415	416	417	418	419	420	421	422	423	424	425	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	442	443	444	445	446	447	448	449	450	451	452	453	454	455	456	457	458	459	460	461	462	463	464	465	466	467	468	469	470	471	472	473	474	475	476	477	478	479	480	481	482	483	484	485	486	487	488	489	490	491	492	493	494	495	496	497	498	499	500	501	502	503	504	505	506	507	508	509	510	511	512	513	514	515	516	517	518	519	520	521	522	523	524	525	526	527	528	529	530	531	532	533	534	535	536	537	538	539	540	541	542	543	544	545	546	547	548	549	550	551	552	553	554	555	556	557	558	559	560	561	562	563	564	565	566	567	568	569	570	571	572	573	574	575	576	577	578	579	580	581	582	583	584	585	586	587	588	589	590	591	592	593	594	595	596	597	598	599	600	601	602	603	604	605	606	607	608	609	610	611	612	613	614	615	616	617	618	619	620	621	622	623	624	625	626	627	628	629	630	631	632	633	634	635	636	637	638	639	640	641	642	643	644	645	646	647	648	649	650	651	652	653	654	655	656	657	658	659	660	661	662	663	664	665	666	667	668	669	670	671	672	673	674	675	676	677	678	679	680	681	682	683	684	685	686	687	688	689	690	691	692	693	694	695	696	697	698	699	700	701	702	703	704	705	706	707	708	709	710	711	712	713	714	715	716	717	718	719	720	721	722	723	724	725	726	727	728	729	730	731	732	733	734	735	736	737	738	739	740	741	742	743	744	745	746	747	748	749	750	751	752	753	754	755	756	757	758	759	760	761	762	763	764	765	766	767	768	769	770	771	772	773	774	775	776	777	778	779	780	781	782	783	784	785	786	787	788	789	790	791	792	793	794	795	796	797	798	799	800	801	802	803	804	805	806	807	808	809	810	811	812	813	814	815	816	817	818	819	820	821	822	823	824	825	826	827	828	829	830	831	832	833	834	835	836	837	838	839	840	841	842	843	844	845	846	847	848	849	850	851	852	853	854	855	856	857	858	859	860	861	862	863	864	865	866	867	868	869	870	871	872	873	874	875	876	877	878	879	880	881	882	883	884	885	886	887	888	889	890	891	892	893	894	895	896	897	898	899	900	901	902	903	904	905	906	907	908	909	910	911	912	913	914	915	916	917	918	919	920	921	922	923	924	925	926	927	928	929	930	931	932	933	934	935	936	937	938	939	940	941	942	943	944	945	946	947	948	949	950	951	952	953	954	955	956	957	958	959	960	961	962	963	964	965	966	967	968	969	970	971	972	973	974	975	976	977	978	979	980	981	982	983	984	985	986	987	988	989	990	991	992	993	994	995	996	997	998	999	1000	1001	1002	1003	1004	1005	1006	1007	1008	1009	1010	1011	1012	1013	1014	1015	1016	1017	1018	1019	1020	1021	1022	1023	1024	1025	1026	1027	1028	1029	1030	1031	1032	1033	1034	1035	1036	1037	1038	1039	1040	1041	1042	1043	1044	1045	1046	1047	1048	1049	1050	1051	1052	1053	1054	1055	1056	1057	1058	1059	1060	1061	1062	1063	1064	1065	1066	1067	1068	1069	1070	1071	1072	1073	1074	1075	1076	1077	1078	1079	1080	1081	1082	1083	1084	1085	1086	1087	1088	1089	1090	1091	1092	1093	1094	1095	1096	1097	1098	1099	1100	1101	1102	1103	1104	1105	1106	1107	1108	1109	1110	1111	1112	1113	1114	1115	1116	1117	1118	1119	1120	1121	1122	1123	1124	1125	1126	1127	1128	1129	1130	1131	1132	1133	1134	1135	1136	1137	1138	1139	1140	1141	1142	1143	1144	1145	1146	1147	1148	1149	1150	1151	1152	1153	1154	1155	1156	1157	1158	1159	1160	1161	1162	1163	1164	1165	1166	1167	1168	1169	1170	1171	1172	1173	1174	1175	1176	1177	1178	1179	1180	1181	1182	1183	1184	1185	1186	1187	1188	1189	1190	1191	1192	1193	1194	1195	1196	1197	1198	1199	1200	1201	1202	1203	1204	1205	1206	1207	1208	1209	1210	1211	1212	1213	1214	1215	1216	1217	1218	1219	1220	1221	1222	1223	1224	1225	1226	1227	1228	1229	1230	1231	1232	1233	1234	1235	1236	1237	1238	1239	1240	1241	1242	1243	1244	1245	1246	1247	1248	1249	1250	1251	1252	1253	1254	1255	1256	1257	1258	1259	1260	1261	1262	1263	1264	1265	1266	1267	1268	1269	1270	1271	1272	1273	1274	1275	1276	1277	1278	1279	1280	1281	1282	1283	1284	1285	1286	1287	1288	1289	1290	1291	1292	1293	1294	1295	1296	1297	1298	1299	1300	1301	1302	1303	1304	1305	1306	1307	1308	1309	1310	1311	1312	1313	1314	1315	1316	1317	1318	1319	1320	1321	1322	1323	1324	1325	1326	1327	1328	1329	1330	1331	1332	1333	1334	1335	1336	1337	1338	1339	1340	1341	1342	1343	1344	1345	1346	1347	1348	1349	1350	1351	1352	1353	1354	1355	1356	1357	1358	1359	1360	1361	1362	1363	1364	1365	1366	1367	1368	1369	1370	1371	1372	1373	1374	1375	1376	1377	1378	1379	1380	1381	1382	1383	1384	1385	1386	1387	1388	1389	1390	1391	1392	1393	1394	1395	1396	1397	1398	1399	1400	1401	1402	1403	1404	1405	1406	1407	1408	1409	1410	1411	1412	1413	1414	1415	1416	1417	1418	1419	1420	1421	1422	1423	1424	1425	1426	1427	1428	1429	1430	1431	1432	1433	1434	1435	1436	1437	1438	1439	1440	1441	1442	1443	1444	1445	1446	1447	1448	1449	1450	1451	1452	1453	1454	1455	1456	1457	1458	1459	1460	1461
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Interview Sheet

INFOID:000000006977732

NOTE:Refer to [LAN-15, "Trouble Diagnosis Procedure"](#) for how to use interview sheet.

CAN Communication System Diagnosis Interview Sheet	
Date received: <input type="text"/>	
Type: <input type="text"/>	VIN No.: <input type="text"/>
Model: <input type="text"/>	
First registration: <input type="text"/>	Mileage: <input type="text"/>
CAN system type: <input type="text"/>	
Symptom (Results from interview with customer)	
<div></div>	
Condition at inspection	
Error symptom : Present / Past	
<div></div>	

SKIB8898E

MALFUNCTION AREA CHART

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

DTC/CIRCUIT DIAGNOSIS

MALFUNCTION AREA CHART

CAN Communication Circuit

INFOID:000000006977733

MAIN LINE

Malfunction area	Reference
Main line between IPDM E/R and electric parking brake control module	LAN-50. "Diagnosis Procedure"
Main line between electric parking brake control module and data link connector	LAN-51. "Diagnosis Procedure"

BRANCH LINE

Malfunction area	Reference
VCM branch line circuit (CAN communication circuit)	LAN-55. "Diagnosis Procedure"
ABS actuator and electric unit (control unit) branch line circuit	LAN-56. "Diagnosis Procedure"
Electrically-driven intelligent brake unit branch line circuit	LAN-57. "Diagnosis Procedure"
IPDM E/R branch line circuit	LAN-58. "Diagnosis Procedure"
Electric parking brake control module branch line circuit	LAN-59. "Diagnosis Procedure"
Air bag diagnosis sensor unit branch line circuit	LAN-60. "Diagnosis Procedure"
AV control unit branch line circuit	LAN-61. "Diagnosis Procedure"
Data link connector branch line circuit (CAN communication circuit)	LAN-62. "Diagnosis Procedure"
EPS control unit branch line circuit	LAN-63. "Diagnosis Procedure"
Combination meter branch line circuit	LAN-64. "Diagnosis Procedure"
Steering angle sensor branch line circuit	LAN-65. "Diagnosis Procedure"
BCM branch line circuit	LAN-66. "Diagnosis Procedure"

SHORT CIRCUIT

Malfunction area	Reference
CAN communication circuit	LAN-76. "Diagnosis Procedure"

EV System CAN Circuit

INFOID:000000006977734

MAIN LINE

Malfunction area	Reference
Main line between traction motor inverter and data link connector	LAN-52. "Diagnosis Procedure"
Main line between data link connector and on board charger	LAN-54. "Diagnosis Procedure"

BRANCH LINE

Malfunction area	Reference
VCM branch line circuit (EV system CAN circuit)	LAN-67. "Diagnosis Procedure"
Traction motor inverter branch line circuit	LAN-68. "Diagnosis Procedure"
Data link connector branch line circuit (EV system CAN circuit)	LAN-69. "Diagnosis Procedure"
Electric shift control module branch line circuit	LAN-70. "Diagnosis Procedure"
A/C auto amp. branch line circuit	LAN-71. "Diagnosis Procedure"

MALFUNCTION AREA CHART

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

Malfunction area	Reference
TCU branch line circuit	LAN-72, "Diagnosis Procedure"
On board charger branch line circuit	LAN-73, "Diagnosis Procedure"
Li-ion battery controller branch line circuit	LAN-74, "Diagnosis Procedure"

SHORT CIRCUIT

Malfunction area	Reference
EV system CAN circuit	LAN-78, "Diagnosis Procedure"

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN IPDM-E AND EHS/PKB CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN IPDM-E AND EHS/PKB CIRCUIT

Diagnosis Procedure

INFOID:000000006977735

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E107
 - Harness connector B7

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - IPDM E/R
 - Harness connectors E107 and B7
2. Check the continuity between the IPDM E/R harness connector and the harness connector.

IPDM E/R harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E13	27	E107	1	Existed
	26		2	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the IPDM E/R and the harness connector E107.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of electric parking brake control module.
2. Check the continuity between the harness connector and the electric parking brake control module harness connector.

Harness connector		Electric parking brake control module harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B7	1	B21	16	Existed
	2		8	Existed

Is the inspection result normal?

YES (Present error)>>Connect all the connectors and diagnose again. Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

YES (Past error)>>Error was detected in the main line between the IPDM E/R and the electric parking brake control module.

NO >> Repair the main line between the harness connector B7 and the electric parking brake control module.

MAIN LINE BETWEEN EHS/PKB AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN EHS/PKB AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000006977736

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B3
 - Harness connector M21

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Electric parking brake control module
 - Harness connectors B3 and M21
2. Check the continuity between the electric parking brake control module harness connector and the harness connector.

Electric parking brake control module harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B21	16	B3	31	Existed
	8		32	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the electric parking brake control module and the harness connector B3.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M21	31	M4	6	Existed
	32		14	Existed

Is the inspection result normal?

YES (Present error)>>Connect all the connectors and diagnose again. Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

YES (Past error)>>Error was detected in the main line between the electric parking brake control module and the data link connector.

NO >> Repair the main line between the harness connector M21 and the data link connector.

MAIN LINE BETWEEN INV/MC AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN INV/MC AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000006977737

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector F2
 - Harness connector E60
 - Harness connector E105
 - Harness connector M77

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Traction motor inverter
 - Harness connectors F2 and E60
2. Check the continuity between the traction motor inverter harness connector and the harness connector.

Traction motor inverter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F13	12	F2	5	Existed
	19		6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the traction motor inverter and the harness connector F2.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors E105 and M77.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E60	5	E105	50	Existed
	6		49	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connector E60 and the harness connector E105.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M77	50	M4	13	Existed
	49		12	Existed

Is the inspection result normal?

YES (Present error)>>Connect all the connectors and diagnose again. Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

MAIN LINE BETWEEN INV/MC AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS > [CAN]

YES (Past error)>>Error was detected in the main line between the traction motor inverter and the data link connector.
NO >> Repair the main line between the harness connector M77 and the data link connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

MAIN LINE BETWEEN DLC AND OBC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

MAIN LINE BETWEEN DLC AND OBC CIRCUIT

Diagnosis Procedure

INFOID:000000006977738

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M21
 - Harness connector B3

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M21 and B3.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	13	M21	15	Existed
	12		16	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M21.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of on board charger.
2. Check the continuity between the harness connector and the on board charger harness connector.

Harness connector		On board charger harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B3	15	B26	19	Existed
	16		20	Existed

Is the inspection result normal?

YES (Present error)>>Connect all the connectors and diagnose again. Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

YES (Past error)>>Error was detected in the main line between the data link connector and the on board charger.

NO >> Repair the main line between the harness connector B3 and the on board charger.

EV/HEV BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

EV/HEV BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)

Diagnosis Procedure

INFOID:000000006977739

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the VCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of VCM.
2. Check the resistance between the VCM harness connector terminals.

VCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E61	25	29	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the VCM branch line (CAN communication circuit side).

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the VCM. Refer to [EVC-113, "VCM : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the VCM. Refer to [EVC-377, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the VCM branch line (CAN communication circuit side).
NO >> Repair the power supply and the ground circuit.

LAN

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006977740

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E35	22	9	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-132, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-154, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

BRAKE BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

BRAKE BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006977741

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the electrically-driven intelligent brake unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of electrically-driven intelligent brake unit.
2. Check the resistance between the electrically-driven intelligent brake unit harness connector terminals.

Electrically-driven intelligent brake unit harness connector		Resistance (Ω)
Connector No.	Terminal No.	
E34	41	40
	43	42
		Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the electrically-driven intelligent brake unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the electrically-driven intelligent brake unit. Refer to [BR-224, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the electrically-driven intelligent brake unit. Refer to [BR-261, "Removal and installation"](#).

YES (Past error)>>Error was detected in the electrically-driven intelligent brake unit branch line.

NO >> Repair the power supply and the ground circuit.

LAN

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006977742

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E13	27	26	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-29, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-30, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

EHS/PKB BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

EHS/PKB BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006977743

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the electric parking brake control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of electric parking brake control module.
2. Check the resistance between the electric parking brake control module harness connector terminals.

Electric parking brake control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B21	16	8	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the electric parking brake control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the electric parking brake control module. Refer to [PB-74, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the electric parking brake control module. Refer to [PB-84, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the electric parking brake control module branch line.

NO >> Repair the power supply and the ground circuit.

LAN

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006977744

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn power switch OFF, disconnect 12V battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24. "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-31. "Work Flow"](#).

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

AV BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006977745

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the AV control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	26	25	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the AV control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to [AV-95, "AV CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the AV control unit. Refer to [AV-119, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the AV control unit branch line.

NO >> Repair the power supply and the ground circuit.

LAN

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)

Diagnosis Procedure

INFOID:000000006977746

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M4	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Diagnose again. Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit side).

NO >> Repair the data link connector branch line (CAN communication circuit side).

EPS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006977747

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the EPS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of EPS control unit.
2. Check the resistance between the EPS control unit harness connector terminals.

EPS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the EPS control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the EPS control unit. Refer to [STC-20, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the steering column assembly. Refer to the following.
- With heated steering wheel: [ST-31, "Removal and Installation"](#)
 - Without heated steering wheel: [ST-53, "Removal and Installation"](#)
- YES (Past error)>>Error was detected in the EPS control unit branch line.
NO >> Repair the power supply and the ground circuit.

LAN

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006977748

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	19	18	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-88, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-101, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006977749

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M30	5	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-52, "Wiring Diagram"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-157, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the steering angle sensor branch line.
NO >> Repair the power supply and the ground circuit.

LAN

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006977750

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M68	39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-71, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-77, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

EV/HEV BRANCH LINE CIRCUIT (EV SYSTEM CAN CIRCUIT)

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

EV/HEV BRANCH LINE CIRCUIT (EV SYSTEM CAN CIRCUIT)

Diagnosis Procedure

INFOID:000000006977751

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - VCM
 - Harness connector E60
 - Harness connector F2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of VCM.
2. Check the resistance between the VCM harness connector terminals.

VCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E61	9	13	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the VCM branch line (EV system CAN circuit side).

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the VCM. Refer to [EVC-113, "VCM : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the VCM. Refer to [EVC-377, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the VCM branch line (EV system CAN circuit side).

NO >> Repair the power supply and the ground circuit.

LAN

INV/MC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

INV/MC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006977752

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the traction motor inverter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of traction motor inverter.
2. Check the resistance between the traction motor inverter harness connector terminals.

Traction motor inverter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F13	12	19	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the traction motor inverter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the traction motor inverter. Refer to [TMS-63, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the traction motor inverter. Refer to [TMS-116, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the traction motor inverter branch line.
NO >> Repair the power supply and the ground circuit.

DLC BRANCH LINE CIRCUIT (EV SYSTEM CAN CIRCUIT)

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

DLC BRANCH LINE CIRCUIT (EV SYSTEM CAN CIRCUIT)

Diagnosis Procedure

INFOID:000000006977753

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M4	13	12	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Diagnose again. Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

YES (Past error)>>Error was detected in the data link connector branch line circuit (EV system CAN circuit side).

NO >> Repair the data link connector branch line (EV system CAN circuit side).

LAN

E-SHIFT BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

E-SHIFT BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006977754

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the electric shift control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of electric shift control module.
2. Check the resistance between the electric shift control module harness connector terminals.

Electric shift control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M59	31	32	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the electric shift control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the electric shift control module. Refer to [TM-83, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the electric shift control module. Refer to [TM-138, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the electric shift control module branch line.

NO >> Repair the power supply and the ground circuit.

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006977755

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the A/C auto amp. for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M50	28	29	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the A/C auto amp. branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-123, "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-141, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the A/C auto amp. branch line.
NO >> Repair the power supply and the ground circuit.

LAN

TCU BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

TCU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006977756

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the TCU for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCU.
2. Check the resistance between the TCU harness connector terminals.

TCU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M2	9	10	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the TCU branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCU. Refer to [AV-202, "TCU : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the TCU. Refer to [AV-212, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCU branch line.
NO >> Repair the power supply and the ground circuit.

OBC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN]

OBC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006977757

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the on board charger for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of on board charger.
2. Check the resistance between the on board charger harness connector terminals.

On board charger harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B26	19	20	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the on board charger branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the on board charger. Refer to [VC-43, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the on board charger. Refer to [VC-112, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the on board charger branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

HV BAT BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006977758

WARNING:

- Because hybrid vehicles and electric vehicles contain a high voltage battery, there is the risk of electric shock, electric leakage, or similar accidents if the high voltage component and vehicle are handled incorrectly. Be sure to follow the correct work procedures when performing inspection and maintenance.
- Be sure to remove the service plug in order to disconnect the high voltage circuits before performing inspection or maintenance of high voltage system harnesses and parts.
- To prevent the removed service plug from being connected by mistake during the procedure, always carry it in your pocket or put it in the tool box.
- Be sure to wear insulating protective equipment consisting of glove, shoes, face shield and glasses before beginning work on the high voltage system.
- Clearly identify the persons responsible for high voltage work and ensure that other persons do not touch the vehicle. When not working, cover high voltage parts with an insulating cover sheet or similar item to prevent other persons from contacting them.
- Refer to [LAN-21, "High Voltage Precautions"](#).

CAUTION:

There is the possibility of a malfunction occurring if the vehicle is changed to READY status while the service plug is removed. Therefore do not change the vehicle to READY status unless instructed to do so in the Service Manual.

1. CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the Li-ion battery for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of Li-ion battery.
2. Check the resistance between the Li-ion battery harness connector terminals.

Li-ion battery harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B24	1	2	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the Li-ion battery branch line.

3. PRECONDITIONING**WARNING:**

Disconnect the high voltage. Refer to [GI-31, "How to Disconnect High Voltage"](#).

Check voltage in high voltage circuit. (Check that condenser are discharged.)

1. Lift up the vehicle and remove the Li-ion battery under covers. Refer to [EVB-169, "Exploded View"](#) (Type 1), [EVB-395, "Exploded View"](#) (Type 2), [EVB-626, "Exploded View"](#) (Type 3) or [EVB-866, "Exploded View"](#) (Type 4).

NOTE:

Check the vehicle type to confirm the service information. Refer to [EVB-14, "How to Check Vehicle Type"](#).

2. Disconnect high voltage harness connector from front side of Li-ion battery. Refer to [EVB-169, "Removal and Installation"](#) (Type 1), [EVB-395, "Removal and Installation"](#) (Type 2), [EVB-626, "Removal and Installation"](#) (Type 3) or [EVB-866, "Removal and Installation"](#) (Type 4).

HV BAT BRANCH LINE CIRCUIT

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

3. Measure voltage between high voltage harness connector terminals.

DANGER:



Touching high voltage components without using the appropriate protective equipment will cause electrocution.




Standard

: 5 V or less

CAUTION:

For voltage measurements, use a tester which can measure to 500 V or higher.

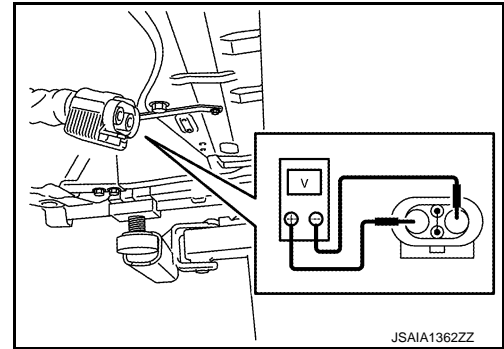

>> GO TO 4.

4.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the Li-ion battery controller. Refer to [EVB-164, "Diagnosis Procedure"](#) (Type 1), [EVB-390, "Diagnosis Procedure"](#) (Type 2), [EVB-621, "Diagnosis Procedure"](#) (Type 3) or [EVB-861, "Diagnosis Procedure"](#) (Type 4).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the power supply and the ground circuit.

5.CHECK HARNESS FOR OPEN CIRCUIT

1. Remove Li-ion battery controller. Refer to [EVB-192, "LI-ION BATTERY CONTROLLER : Disassembly and Assembly"](#) (Type 1), [EVB-419, "LI-ION BATTERY CONTROLLER : Disassembly and Assembly"](#) (Type 2), [EVB-645, "LI-ION BATTERY CONTROLLER : Removal and Installation"](#) (Type 3) or [EVB-885, "LI-ION BATTERY CONTROLLER : Removal and Installation"](#) (Type 4).
2. Check the continuity between vehicle communication harness (harness between Li-ion battery harness connector side and Li-ion battery controller side) connector terminals. Refer to [EVB-34, "Circuit Diagram"](#) (Type 1), [EVB-250, "Circuit Diagram"](#) (Type 2), [EVB-486, "Circuit Diagram"](#) (Type 3) or [EVB-716, "Circuit Diagram"](#) (Type 4).

Vehicle communication harness		Continuity
Li-ion battery harness connector side	Li-ion battery controller side	
Terminal No.	Terminal No.	
1	1	Existed
2	13	Existed

Is the measurement value within the specification?

YES (Present error)>>Replace the Li-ion battery controller. Refer to [EVB-192, "LI-ION BATTERY CONTROLLER : Disassembly and Assembly"](#) (Type 1), [EVB-419, "LI-ION BATTERY CONTROLLER : Disassembly and Assembly"](#) (Type 2), [EVB-645, "LI-ION BATTERY CONTROLLER : Removal and Installation"](#) (Type 3) or [EVB-885, "LI-ION BATTERY CONTROLLER : Removal and Installation"](#) (Type 4).

YES (Past error)>>Error was detected in the Li-ion battery controller branch line.

NO >> Repair the vehicle communication harness.

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000006977759

1.CONNECTOR INSPECTION

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Disconnect all the control unit connectors on CAN communication circuit.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK VCM AND BCM TERMINATION CIRCUIT

1. Remove the VCM and the BCM.
2. Check the resistance between the VCM terminals.

VCM		Resistance (Ω)
Terminal No.		
25	29	Approx. 108 – 132

3. Check the resistance between the BCM terminals.

BCM		Resistance (Ω)
Terminal No.		
39	40	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the VCM and/or the BCM.

5.CHECK SYMPTOM

CAN COMMUNICATION CIRCUIT

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK CONTROL UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each control unit.

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Disconnect one of the control unit connectors of CAN communication circuit.

NOTE:

VCM and BCM have a termination circuit. Check other control units first.

4. Connect the 12V battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although control unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other control units as per the above procedure.

Non-reproduced>>Replace the control unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

EV SYSTEM CAN CIRCUIT

Diagnosis Procedure

INFOID:000000006977760

WARNING:

- Because hybrid vehicles and electric vehicles contain a high voltage battery, there is the risk of electric shock, electric leakage, or similar accidents if the high voltage component and vehicle are handled incorrectly. Be sure to follow the correct work procedures when performing inspection and maintenance.
- Be sure to remove the service plug in order to disconnect the high voltage circuits before performing inspection or maintenance of high voltage system harnesses and parts.
- To prevent the removed service plug from being connected by mistake during the procedure, always carry it in your pocket or put it in the tool box.
- Be sure to wear insulating protective equipment consisting of glove, shoes, face shield and glasses before beginning work on the high voltage system.
- Clearly identify the persons responsible for high voltage work and ensure that other persons do not touch the vehicle. When not working, cover high voltage parts with an insulating cover sheet or similar item to prevent other persons from contacting them.
- Refer to [LAN-21, "High Voltage Precautions"](#).

CAUTION:

There is the possibility of a malfunction occurring if the vehicle is changed to READY status while the service plug is removed. Therefore do not change the vehicle to READY status unless instructed to do so in the Service Manual.

1. PRECONDITIONING

WARNING:

Disconnect the high voltage. Refer to [GI-31, "How to Disconnect High Voltage"](#).

Check voltage in high voltage circuit. (Check that condenser are discharged.)

1. Lift up the vehicle and remove the Li-ion battery under covers. Refer to [EVB-169, "Exploded View"](#) (Type 1), [EVB-395, "Exploded View"](#) (Type 2), [EVB-626, "Exploded View"](#) (Type 3) or [EVB-866, "Exploded View"](#) (Type 4).

NOTE:

Check the vehicle type to confirm the service information. Refer to [EVB-14, "How to Check Vehicle Type"](#).

2. Disconnect high voltage harness connector from front side of Li-ion battery. Refer to [EVB-169, "Removal and Installation"](#) (Type 1), [EVB-395, "Removal and Installation"](#) (Type 2), [EVB-626, "Removal and Installation"](#) (Type 3) or [EVB-866, "Removal and Installation"](#) (Type 4).
3. Measure voltage between high voltage harness connector terminals.


DANGER:

 Touching high voltage components without using the appropriate protective equipment will cause electrocution.



Standard

: 5 V or less

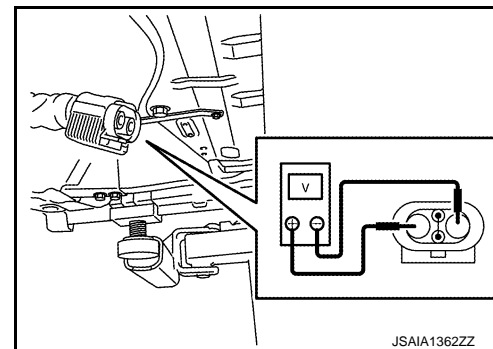

JSAIA1362ZZ

CAUTION:

For voltage measurements, use a tester which can measure to 500 V or higher.

>> GO TO 2.

2. CONNECTOR INSPECTION

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Disconnect all the control unit connectors on EV system CAN circuit. For the removal of Li-ion battery controller, refer to [EVB-192, "LI-ION BATTERY CONTROLLER : Disassembly and Assembly"](#) (Type 1), [EVB-](#)

EV SYSTEM CAN CIRCUIT

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

[419. "LI-ION BATTERY CONTROLLER : Disassembly and Assembly"](#) (Type 2), [EVB-645. "LI-ION BATTERY CONTROLLER : Removal and Installation"](#) (Type 3) or [EVB-885. "LI-ION BATTERY CONTROLLER : Removal and Installation"](#) (Type 4).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector		Continuity
Connector No.	Terminal No.	
M4	13	Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	13		Not existed
	12		Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair the root cause.

5.CHECK VCM AND LI-ION BATTERY CONTROLLER TERMINATION CIRCUIT

1. Remove the VCM.
2. Check the resistance between the VCM terminals.

VCM		Resistance (Ω)
Terminal No.		
9	13	Approx. 108 – 132

3. Remove the Li-ion battery controller. Refer to [EVB-192. "LI-ION BATTERY CONTROLLER : Disassembly and Assembly"](#) (Type 1), [EVB-419. "LI-ION BATTERY CONTROLLER : Disassembly and Assembly"](#) (Type 2), [EVB-645. "LI-ION BATTERY CONTROLLER : Removal and Installation"](#) (Type 3) or [EVB-885. "LI-ION BATTERY CONTROLLER : Removal and Installation"](#) (Type 4).

4. Check the resistance between the Li-ion battery controller terminals.

Li-ion battery controller		Resistance (Ω)
Terminal No.		
1	13	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 6.

NO >> Replace the VCM and/or the Li-ion battery controller.

6.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

EV SYSTEM CAN CIRCUIT

[CAN]

< DTC/CIRCUIT DIAGNOSIS >

Reproduced>>GO TO 7.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

7.CHECK CONTROL UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each control unit.

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24. "Precautions for Removing Battery Terminal"](#).
3. Disconnect one of the control unit connectors of EV system CAN circuit.

NOTE:

VCM and Li-ion battery controller have a termination circuit. Check other control units first.

4. Connect the 12V battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although control unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other control units as per the above procedure.

Non-reproduced>>Replace the control unit whose connector was disconnected.

MAIN LINE BETWEEN IPDM-E AND EHS/PKB CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

DTC/CIRCUIT DIAGNOSIS

MAIN LINE BETWEEN IPDM-E AND EHS/PKB CIRCUIT

Diagnosis Procedure

INFOID:000000006983352

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector E107
 - Harness connector B7

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - IPDM E/R
 - Harness connectors E107 and B7
2. Check the continuity between the IPDM E/R harness connector and the harness connector.

IPDM E/R harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E13	27	E107	1	Existed
	26		2	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the IPDM E/R and the harness connector E107.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of electric parking brake control module.
2. Check the continuity between the harness connector and the electric parking brake control module harness connector.

Harness connector		Electric parking brake control module harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B7	1	B21	16	Existed
	2		8	Existed

Is the inspection result normal?

YES (Present error)>>Connect all the connectors and diagnose again. Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

YES (Past error)>>Error was detected in the main line between the IPDM E/R and the electric parking brake control module.

NO >> Repair the main line between the harness connector B7 and the electric parking brake control module.

MAIN LINE BETWEEN EHS/PKB AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN EHS/PKB AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000006983353

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector B3
 - Harness connector M21

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Electric parking brake control module
 - Harness connectors B3 and M21
2. Check the continuity between the electric parking brake control module harness connector and the harness connector.

Electric parking brake control module harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B21	16	B3	31	Existed
	8		32	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the electric parking brake control module and the harness connector B3.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M21	31	M4	6	Existed
	32		14	Existed

Is the inspection result normal?

YES (Present error)>>Connect all the connectors and diagnose again. Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

YES (Past error)>>Error was detected in the main line between the electric parking brake control module and the data link connector.

NO >> Repair the main line between the harness connector M21 and the data link connector.

MAIN LINE BETWEEN INV/MC AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN INV/MC AND DLC CIRCUIT

Diagnosis Procedure

INFOID:000000006983354

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector F2
 - Harness connector E60
 - Harness connector E105
 - Harness connector M77

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the following harness connectors.
 - Traction motor inverter
 - Harness connectors F2 and E60
2. Check the continuity between the traction motor inverter harness connector and the harness connector.

Traction motor inverter harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F13	12	F2	5	Existed
	19		6	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the traction motor inverter and the harness connector F2.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors E105 and M77.
2. Check the continuity between the harness connectors.

Harness connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
E60	5	E105	50	Existed
	6		49	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the main line between the harness connector E60 and the harness connector E105.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check the continuity between the harness connector and the data link connector.

Harness connector		Data link connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M77	50	M4	13	Existed
	49		12	Existed

Is the inspection result normal?

YES (Present error)>>Connect all the connectors and diagnose again. Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

MAIN LINE BETWEEN INV/MC AND DLC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

YES (Past error)>>Error was detected in the main line between the traction motor inverter and the data link connector.

NO >> Repair the main line between the harness connector M77 and the data link connector.

MAIN LINE BETWEEN DLC AND OBC CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

MAIN LINE BETWEEN DLC AND OBC CIRCUIT

Diagnosis Procedure

INFOID:000000006983355

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the following terminals and connectors for damage, bend and loose connection (connector side and harness side).
 - Harness connector M21
 - Harness connector B3

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the harness connectors M21 and B3.
2. Check the continuity between the data link connector and the harness connector.

Data link connector		Harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M4	13	M21	15	Existed
	12		16	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the main line between the data link connector and the harness connector M21.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the connector of on board charger.
2. Check the continuity between the harness connector and the on board charger harness connector.

Harness connector		On board charger harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
B3	15	B26	19	Existed
	16		20	Existed

Is the inspection result normal?

YES (Present error)>>Connect all the connectors and diagnose again. Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

YES (Past error)>>Error was detected in the main line between the data link connector and the on board charger.

NO >> Repair the main line between the harness connector B3 and the on board charger.

EV/HEV BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

EV/HEV BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)

Diagnosis Procedure

INFOID:000000006983356

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the VCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of VCM.
2. Check the resistance between the VCM harness connector terminals.

VCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E61	25	29	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the VCM branch line (CAN communication circuit side).

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the VCM. Refer to [EVC-113, "VCM : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the VCM. Refer to [EVC-377, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the VCM branch line (CAN communication circuit side).
NO >> Repair the power supply and the ground circuit.

ABS BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

ABS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006983357

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the ABS actuator and electric unit (control unit) for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of ABS actuator and electric unit (control unit).
2. Check the resistance between the ABS actuator and electric unit (control unit) harness connector terminals.

ABS actuator and electric unit (control unit) harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E35	22	9	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the ABS actuator and electric unit (control unit) branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the ABS actuator and electric unit (control unit). Refer to [BRC-132, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the ABS actuator and electric unit (control unit). Refer to [BRC-154, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the ABS actuator and electric unit (control unit) branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

BRAKE BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

BRAKE BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006983358

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the electrically-driven intelligent brake unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of electrically-driven intelligent brake unit.
2. Check the resistance between the electrically-driven intelligent brake unit harness connector terminals.

Electrically-driven intelligent brake unit harness connector		Resistance (Ω)
Connector No.	Terminal No.	
E34	41	40
	43	42
		Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the electrically-driven intelligent brake unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the electrically-driven intelligent brake unit. Refer to [BR-224, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the electrically-driven intelligent brake unit. Refer to [BR-261, "Removal and installation"](#).

YES (Past error)>>Error was detected in the electrically-driven intelligent brake unit branch line.

NO >> Repair the power supply and the ground circuit.

IPDM-E BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

IPDM-E BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006983359

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the IPDM E/R for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of IPDM E/R.
2. Check the resistance between the IPDM E/R harness connector terminals.

IPDM E/R harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E13	27	26	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the IPDM E/R branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the IPDM E/R. Refer to [PCS-29, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the IPDM E/R. Refer to [PCS-30, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the IPDM E/R branch line.
NO >> Repair the power supply and the ground circuit.

LAN

EHS/PKB BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006983360

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the electric parking brake control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of electric parking brake control module.
2. Check the resistance between the electric parking brake control module harness connector terminals.

Electric parking brake control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B21	16	8	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the electric parking brake control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the electric parking brake control module. Refer to [PB-74, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the electric parking brake control module. Refer to [PB-84, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the electric parking brake control module branch line.
 NO >> Repair the power supply and the ground circuit.

A-BAG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

A-BAG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006983361

WARNING:

Always observe the following items for preventing accidental activation.

- Before servicing, turn power switch OFF, disconnect 12V battery negative terminal, and wait 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the air bag diagnosis sensor unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the main harness.

2.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Check the air bag diagnosis sensor unit. Refer to [SRC-31, "Work Flow"](#).

Is the inspection result normal?

YES >> Replace the main harness.

NO >> Replace parts whose air bag system has a malfunction.

LAN

AV BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006983362

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the AV control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of AV control unit.
2. Check the resistance between the AV control unit harness connector terminals.

AV control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M84	26	25	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
 NO >> Repair the AV control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the AV control unit. Refer to [AV-95, "AV CONTROL UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the AV control unit. Refer to [AV-119, "Removal and Installation"](#).
 YES (Past error)>>Error was detected in the AV control unit branch line.
 NO >> Repair the power supply and the ground circuit.

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

DLC BRANCH LINE CIRCUIT (CAN COMMUNICATION CIRCUIT)

Diagnosis Procedure

INFOID:000000006983363

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M4	6	14	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Diagnose again. Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

YES (Past error)>>Error was detected in the data link connector branch line circuit (CAN communication circuit side).

NO >> Repair the data link connector branch line (CAN communication circuit side).

LAN

EPS BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006983364

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the EPS control unit for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of EPS control unit.
2. Check the resistance between the EPS control unit harness connector terminals.

EPS control unit harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M37	2	1	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the EPS control unit branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the EPS control unit. Refer to [STC-20, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the steering column assembly. Refer to the following.

- With heated steering wheel: [ST-31, "Removal and Installation"](#)
- Without heated steering wheel: [ST-53, "Removal and Installation"](#)

YES (Past error)>>Error was detected in the EPS control unit branch line.

NO >> Repair the power supply and the ground circuit.

M&A BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

M&A BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006983365

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the combination meter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of combination meter.
2. Check the resistance between the combination meter harness connector terminals.

Combination meter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M34	19	18	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the combination meter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the combination meter. Refer to [MWI-88, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the combination meter. Refer to [MWI-101, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the combination meter branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

STRG BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

STRG BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006983366

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the steering angle sensor for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of steering angle sensor.
2. Check the resistance between the steering angle sensor harness connector terminals.

Steering angle sensor harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M30	5	2	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the steering angle sensor branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the steering angle sensor. Refer to [BRC-52, "Wiring Diagram"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the steering angle sensor. Refer to [BRC-157, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the steering angle sensor branch line.
NO >> Repair the power supply and the ground circuit.

BCM BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

BCM BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006983367

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the BCM for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of BCM.
2. Check the resistance between the BCM harness connector terminals.

BCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M68	39	40	Approx. 108 – 132

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the BCM branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the BCM. Refer to [BCS-71, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the BCM. Refer to [BCS-77, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the BCM branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

EV/HEV BRANCH LINE CIRCUIT (EV SYSTEM CAN CIRCUIT)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

EV/HEV BRANCH LINE CIRCUIT (EV SYSTEM CAN CIRCUIT)

Diagnosis Procedure

INFOID:000000006983368

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the following terminals and connectors for damage, bend and loose connection (unit side and connector side).
 - VCM
 - Harness connector E60
 - Harness connector F2

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of VCM.
2. Check the resistance between the VCM harness connector terminals.

VCM harness connector			Resistance (Ω)
Connector No.	Terminal No.		
E61	9	13	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the VCM branch line (EV system CAN circuit side).

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the VCM. Refer to [EVC-113, "VCM : Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the VCM. Refer to [EVC-377, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the VCM branch line (EV system CAN circuit side).

NO >> Repair the power supply and the ground circuit.

INV/MC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

INV/MC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006983369

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the traction motor inverter for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of traction motor inverter.
2. Check the resistance between the traction motor inverter harness connector terminals.

Traction motor inverter harness connector			Resistance (Ω)
Connector No.	Terminal No.		
F13	12	19	Approx. 54 – 66

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the traction motor inverter branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the traction motor inverter. Refer to [TMS-63, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES (Present error)>>Replace the traction motor inverter. Refer to [TMS-116, "Removal and Installation"](#).

YES (Past error)>>Error was detected in the traction motor inverter branch line.

NO >> Repair the power supply and the ground circuit.

LAN

DLC BRANCH LINE CIRCUIT (EV SYSTEM CAN CIRCUIT)

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

DLC BRANCH LINE CIRCUIT (EV SYSTEM CAN CIRCUIT)

Diagnosis Procedure

INFOID:000000006983370

1. CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the data link connector for damage, bend and loose connection (connector side and harness side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

Check the resistance between the data link connector terminals.

Data link connector			Resistance (Ω)
Connector No.	Terminal No.		
M4	13	12	Approx. 54 – 66

Is the measurement value within the specification?

YES (Present error)>>Diagnose again. Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).

YES (Past error)>>Error was detected in the data link connector branch line circuit (EV system CAN circuit side).

NO >> Repair the data link connector branch line (EV system CAN circuit side).

E-SHIFT BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

E-SHIFT BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006983371

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the electric shift control module for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of electric shift control module.
2. Check the resistance between the electric shift control module harness connector terminals.

Electric shift control module harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M59	31	32	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the electric shift control module branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the electric shift control module. Refer to [TM-83, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the electric shift control module. Refer to [TM-138, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the electric shift control module branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

HVAC BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

HVAC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006983372

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the A/C auto amp. for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of A/C auto amp.
2. Check the resistance between the A/C auto amp. harness connector terminals.

A/C auto amp. harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M50	28	29	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the A/C auto amp. branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the A/C auto amp. Refer to [HAC-123, "A/C AUTO AMP. : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the A/C auto amp. Refer to [HAC-141, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the A/C auto amp. branch line.
NO >> Repair the power supply and the ground circuit.

TCU BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

TCU BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006983373

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the TCU for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of TCU.
2. Check the resistance between the TCU harness connector terminals.

TCU harness connector			Resistance (Ω)
Connector No.	Terminal No.		
M2	9	10	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the TCU branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the TCU. Refer to [AV-202, "TCU : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the TCU. Refer to [AV-212, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the TCU branch line.
NO >> Repair the power supply and the ground circuit.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN

OBC BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006983374

1.CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the on board charger for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair the terminal and connector.

2.CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of on board charger.
2. Check the resistance between the on board charger harness connector terminals.

On board charger harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B26	19	20	Approx. 54 – 66

Is the measurement value within the specification?

- YES >> GO TO 3.
NO >> Repair the on board charger branch line.

3.CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the on board charger. Refer to [VC-43, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES (Present error)>>Replace the on board charger. Refer to [VC-112, "Removal and Installation"](#).
YES (Past error)>>Error was detected in the on board charger branch line.
NO >> Repair the power supply and the ground circuit.

HV BAT BRANCH LINE CIRCUIT

Diagnosis Procedure

INFOID:000000006983375

WARNING:

- Because hybrid vehicles and electric vehicles contain a high voltage battery, there is the risk of electric shock, electric leakage, or similar accidents if the high voltage component and vehicle are handled incorrectly. Be sure to follow the correct work procedures when performing inspection and maintenance.
- Be sure to remove the service plug in order to disconnect the high voltage circuits before performing inspection or maintenance of high voltage system harnesses and parts.
- To prevent the removed service plug from being connected by mistake during the procedure, always carry it in your pocket or put it in the tool box.
- Be sure to wear insulating protective equipment consisting of glove, shoes, face shield and glasses before beginning work on the high voltage system.
- Clearly identify the persons responsible for high voltage work and ensure that other persons do not touch the vehicle. When not working, cover high voltage parts with an insulating cover sheet or similar item to prevent other persons from contacting them.
- Refer to [LAN-21, "High Voltage Precautions"](#).

CAUTION:

There is the possibility of a malfunction occurring if the vehicle is changed to READY status while the service plug is removed. Therefore do not change the vehicle to READY status unless instructed to do so in the Service Manual.

1. CHECK CONNECTOR

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Check the terminals and connectors of the Li-ion battery for damage, bend and loose connection (unit side and connector side).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2. CHECK HARNESS FOR OPEN CIRCUIT

1. Disconnect the connector of Li-ion battery.
2. Check the resistance between the Li-ion battery harness connector terminals.

Li-ion battery harness connector			Resistance (Ω)
Connector No.	Terminal No.		
B24	1	2	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 3.

NO >> Repair the Li-ion battery branch line.

3. PRECONDITIONING**WARNING:**

Disconnect the high voltage. Refer to [GI-31, "How to Disconnect High Voltage"](#).

Check voltage in high voltage circuit. (Check that condenser are discharged.)

1. Lift up the vehicle and remove the Li-ion battery under covers. Refer to [EVB-169, "Exploded View"](#) (Type 1), [EVB-395, "Exploded View"](#) (Type 2), [EVB-626, "Exploded View"](#) (Type 3) or [EVB-866, "Exploded View"](#) (Type 4).

NOTE:

Check the vehicle type to confirm the service information. Refer to [EVB-14, "How to Check Vehicle Type"](#).

2. Disconnect high voltage harness connector from front side of Li-ion battery. Refer to [EVB-169, "Removal and Installation"](#) (Type 1), [EVB-395, "Removal and Installation"](#) (Type 2), [EVB-626, "Removal and Installation"](#) (Type 3) or [EVB-866, "Removal and Installation"](#) (Type 4).

HV BAT BRANCH LINE CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

3. Measure voltage between high voltage harness connector terminals.

DANGER:



Touching high voltage components without using the appropriate protective equipment will cause electrocution.




Standard

: 5 V or less

CAUTION:

For voltage measurements, use a tester which can measure to 500 V or higher.

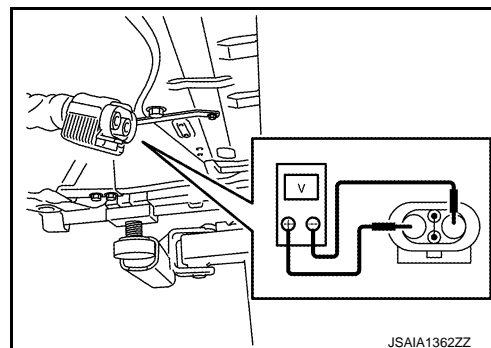

>> GO TO 4.

4. CHECK POWER SUPPLY AND GROUND CIRCUIT

Check the power supply and the ground circuit of the Li-ion battery controller. Refer to [EVB-164, "Diagnosis Procedure"](#) (Type 1), [EVB-390, "Diagnosis Procedure"](#) (Type 2), [EVB-621, "Diagnosis Procedure"](#) (Type 3) or [EVB-861, "Diagnosis Procedure"](#) (Type 4).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the power supply and the ground circuit.

5. CHECK HARNESS FOR OPEN CIRCUIT

1. Remove Li-ion battery controller. Refer to [EVB-192, "LI-ION BATTERY CONTROLLER : Disassembly and Assembly"](#) (Type 1), [EVB-419, "LI-ION BATTERY CONTROLLER : Disassembly and Assembly"](#) (Type 2), [EVB-645, "LI-ION BATTERY CONTROLLER : Removal and Installation"](#) (Type 3) or [EVB-885, "LI-ION BATTERY CONTROLLER : Removal and Installation"](#) (Type 4).
2. Check the continuity between vehicle communication harness (harness between Li-ion battery harness connector side and Li-ion battery controller side) connector terminals. Refer to [EVB-34, "Circuit Diagram"](#) (Type 1), [EVB-250, "Circuit Diagram"](#) (Type 2), [EVB-486, "Circuit Diagram"](#) (Type 3) or [EVB-716, "Circuit Diagram"](#) (Type 4).

Vehicle communication harness		Continuity
Li-ion battery harness connector side	Li-ion battery controller side	
Terminal No.	Terminal No.	
1	1	Existed
2	13	Existed

Is the measurement value within the specification?

YES (Present error)>>Replace the Li-ion battery controller. Refer to [EVB-192, "LI-ION BATTERY CONTROLLER : Disassembly and Assembly"](#) (Type 1), [EVB-419, "LI-ION BATTERY CONTROLLER : Disassembly and Assembly"](#) (Type 2), [EVB-645, "LI-ION BATTERY CONTROLLER : Removal and Installation"](#) (Type 3) or [EVB-885, "LI-ION BATTERY CONTROLLER : Removal and Installation"](#) (Type 4).

YES (Past error)>>Error was detected in the Li-ion battery controller branch line.

NO >> Repair the vehicle communication harness.

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

CAN COMMUNICATION CIRCUIT

Diagnosis Procedure

INFOID:000000006983376

1.CONNECTOR INSPECTION

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Disconnect all the control unit connectors on CAN communication circuit.
4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the terminal and connector.

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	6	14	Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check the harness and repair the root cause.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	6		Not existed
	14		Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK VCM AND BCM TERMINATION CIRCUIT

1. Remove the VCM and the BCM.
2. Check the resistance between the VCM terminals.

VCM		Resistance (Ω)
Terminal No.		
25	29	Approx. 108 – 132

3. Check the resistance between the BCM terminals.

BCM		Resistance (Ω)
Terminal No.		
39	40	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 5.

NO >> Replace the VCM and/or the BCM.

5.CHECK SYMPTOM

A

B

C

D

E

F

G

H

I

J

K

L

LAN

N

O

P

CAN COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

Reproduced>>GO TO 6.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

6.CHECK CONTROL UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each control unit.

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24. "Precautions for Removing Battery Terminal"](#).
3. Disconnect one of the control unit connectors of CAN communication circuit.

NOTE:

VCM and BCM have a termination circuit. Check other control units first.

4. Connect the 12V battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although control unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other control units as per the above procedure.

Non-reproduced>>Replace the control unit whose connector was disconnected.

EV SYSTEM CAN CIRCUIT

Diagnosis Procedure

INFOID:000000006983377

WARNING:

- Because hybrid vehicles and electric vehicles contain a high voltage battery, there is the risk of electric shock, electric leakage, or similar accidents if the high voltage component and vehicle are handled incorrectly. Be sure to follow the correct work procedures when performing inspection and maintenance.
- Be sure to remove the service plug in order to disconnect the high voltage circuits before performing inspection or maintenance of high voltage system harnesses and parts.
- To prevent the removed service plug from being connected by mistake during the procedure, always carry it in your pocket or put it in the tool box.
- Be sure to wear insulating protective equipment consisting of glove, shoes, face shield and glasses before beginning work on the high voltage system.
- Clearly identify the persons responsible for high voltage work and ensure that other persons do not touch the vehicle. When not working, cover high voltage parts with an insulating cover sheet or similar item to prevent other persons from contacting them.
- Refer to [LAN-21, "High Voltage Precautions"](#).

CAUTION:

There is the possibility of a malfunction occurring if the vehicle is changed to READY status while the service plug is removed. Therefore do not change the vehicle to READY status unless instructed to do so in the Service Manual.

1. PRECONDITIONING

WARNING:

Disconnect the high voltage. Refer to [GI-31, "How to Disconnect High Voltage"](#).

Check voltage in high voltage circuit. (Check that condenser are discharged.)

1. Lift up the vehicle and remove the Li-ion battery under covers. Refer to [EVB-169, "Exploded View"](#) (Type 1), [EVB-395, "Exploded View"](#) (Type 2), [EVB-626, "Exploded View"](#) (Type 3) or [EVB-866, "Exploded View"](#) (Type 4).

NOTE:

Check the vehicle type to confirm the service information. Refer to [EVB-14, "How to Check Vehicle Type"](#).

2. Disconnect high voltage harness connector from front side of Li-ion battery. Refer to [EVB-169, "Removal and Installation"](#) (Type 1), [EVB-395, "Removal and Installation"](#) (Type 2), [EVB-626, "Removal and Installation"](#) (Type 3) or [EVB-866, "Removal and Installation"](#) (Type 4).
3. Measure voltage between high voltage harness connector terminals.


DANGER:

Touching high voltage components without using the appropriate protective equipment will cause electrocution.



Standard

: 5 V or less

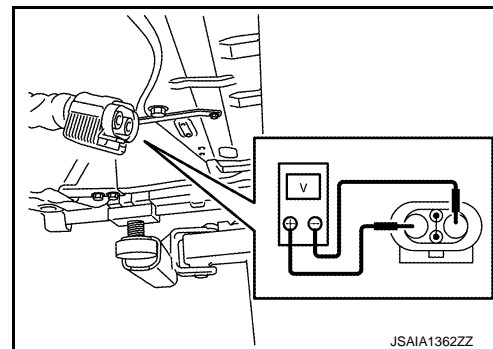

JSAIA1362ZZ

CAUTION:

For voltage measurements, use a tester which can measure to 500 V or higher.

>> GO TO 2.

2. CONNECTOR INSPECTION

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Disconnect all the control unit connectors on EV system CAN circuit. For the removal of Li-ion battery controller, refer to [EVB-192, "LI-ION BATTERY CONTROLLER : Disassembly and Assembly"](#) (Type 1), [EVB-](#)

EV SYSTEM CAN CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

[419. "LI-ION BATTERY CONTROLLER : Disassembly and Assembly"](#) (Type 2), [EVB-645. "LI-ION BATTERY CONTROLLER : Removal and Installation"](#) (Type 3) or [EVB-885. "LI-ION BATTERY CONTROLLER : Removal and Installation"](#) (Type 4).

4. Check terminals and connectors for damage, bend and loose connection.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the terminal and connector.

3.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector terminals.

Data link connector			Continuity
Connector No.	Terminal No.		
M4	13	12	Not existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check the harness and repair the root cause.

4.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

Check the continuity between the data link connector and the ground.

Data link connector		Ground	Continuity
Connector No.	Terminal No.		
M4	13		Not existed
	12		Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check the harness and repair the root cause.

5.CHECK VCM AND LI-ION BATTERY CONTROLLER TERMINATION CIRCUIT

1. Remove the VCM.
2. Check the resistance between the VCM terminals.

VCM		Resistance (Ω)
Terminal No.		
9	13	Approx. 108 – 132

3. Remove the Li-ion battery controller. Refer to [EVB-192. "LI-ION BATTERY CONTROLLER : Disassembly and Assembly"](#) (Type 1), [EVB-419. "LI-ION BATTERY CONTROLLER : Disassembly and Assembly"](#) (Type 2), [EVB-645. "LI-ION BATTERY CONTROLLER : Removal and Installation"](#) (Type 3) or [EVB-885. "LI-ION BATTERY CONTROLLER : Removal and Installation"](#) (Type 4).
4. Check the resistance between the Li-ion battery controller terminals.

Li-ion battery controller		Resistance (Ω)
Terminal No.		
1	13	Approx. 108 – 132

Is the measurement value within the specification?

YES >> GO TO 6.

NO >> Replace the VCM and/or the Li-ion battery controller.

6.CHECK SYMPTOM

Connect all the connectors. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

Inspection result

EV SYSTEM CAN CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[CAN SYSTEM (TYPE 1)]

Reproduced>>GO TO 7.

Non-reproduced>>Start the diagnosis again. Follow the trouble diagnosis procedure when past error is detected.

7.CHECK CONTROL UNIT REPRODUCTION

Perform the reproduction test as per the following procedure for each control unit.

1. Turn the power switch OFF.
2. Disconnect the 12V battery cable from the negative terminal. Refer to [LAN-24, "Precautions for Removing Battery Terminal"](#).
3. Disconnect one of the control unit connectors of EV system CAN circuit.

NOTE:

VCM and Li-ion battery controller have a termination circuit. Check other control units first.

4. Connect the 12V battery cable to the negative terminal. Check if the symptoms described in the "Symptom (Results from interview with customer)" are reproduced.

NOTE:

Although control unit-related error symptoms occur, do not confuse them with other symptoms.

Inspection result

Reproduced>>Connect the connector. Check other control units as per the above procedure.

Non-reproduced>>Replace the control unit whose connector was disconnected.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

LAN