

SECTION **SRC**

SRS AIRBAG CONTROL SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONTENTS

<p>PRECAUTION 3</p> <p>PRECAUTIONS 3</p> <p style="padding-left: 20px;">Precaution for Technicians Using Medical Electric.....3</p> <p style="padding-left: 20px;">Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"3</p> <p style="padding-left: 20px;">Point to Be Checked Before Starting Maintenance Work4</p> <p style="padding-left: 20px;">Service4</p> <p style="padding-left: 20px;">Precaution for Removing 12V Battery4</p> <p>SYSTEM DESCRIPTION 6</p> <p>COMPONENT PARTS 6</p> <p style="padding-left: 20px;">Component Parts Location6</p> <p>SYSTEM 8</p> <p style="padding-left: 20px;">System Description8</p> <p>DIAGNOSIS SYSTEM (AIR BAG)11</p> <p style="padding-left: 20px;">Description 11</p> <p style="padding-left: 20px;">On Board Diagnosis Function 11</p> <p style="padding-left: 20px;">CONSULT Function 15</p> <p>DIAGNOSIS SYSTEM (OCCUPANT DETECTION SYSTEM)17</p> <p style="padding-left: 20px;">CONSULT Function 17</p> <p>ECU DIAGNOSIS INFORMATION18</p> <p>DIAGNOSIS SENSOR UNIT18</p> <p style="padding-left: 20px;">DTC Index 18</p> <p>WIRING DIAGRAM23</p> <p>SRS AIR BAG SYSTEM23</p> <p style="padding-left: 20px;">Wiring Diagram23</p> <p>BASIC INSPECTION47</p> <p>DIAGNOSIS AND REPAIR WORK FLOW47</p> <p style="padding-left: 20px;">Work Flow47</p>	<p>INSPECTION AND ADJUSTMENT50</p> <p>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT50</p> <p style="padding-left: 20px;">ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description50</p> <p style="padding-left: 20px;">ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement50</p> <p>ZERO POINT RESET50</p> <p style="padding-left: 20px;">ZERO POINT RESET : Description50</p> <p style="padding-left: 20px;">ZERO POINT RESET : Special Repair Requirement50</p> <p>INTERMITTENT INCIDENT51</p> <p style="padding-left: 20px;">Inspection Procedure51</p> <p>DTC/CIRCUIT DIAGNOSIS52</p> <p>U1000 CAN COMM CIRCUIT52</p> <p style="padding-left: 20px;">Description52</p> <p style="padding-left: 20px;">DTC Logic52</p> <p style="padding-left: 20px;">Diagnosis Procedure52</p> <p>U1010 CONTROL UNIT (CAN)53</p> <p style="padding-left: 20px;">Description53</p> <p style="padding-left: 20px;">DTC Logic53</p> <p style="padding-left: 20px;">Diagnosis Procedure53</p> <p>B0001, B0002 DRIVER AIRBAG MODULE55</p> <p style="padding-left: 20px;">Description55</p> <p style="padding-left: 20px;">DTC Logic55</p> <p style="padding-left: 20px;">Diagnosis Procedure56</p> <p>B0010, B0011 PASSENGER AIRBAG MODULE58</p> <p style="padding-left: 20px;">Description58</p> <p style="padding-left: 20px;">DTC Logic58</p> <p style="padding-left: 20px;">Diagnosis Procedure59</p> <p>B0020 SIDE AIRBAG MODULE LH61</p> <p style="padding-left: 20px;">Description61</p> <p style="padding-left: 20px;">DTC Logic61</p>
--	--

SRC

Diagnosis Procedure	61	B00D5 FRONT PASSENGER AIR BAG OFF INDICATOR	90
B0021 SIDE CURTAIN AIR BAG MODULE LH	64	Description	90
Description	64	DTC Logic	90
DTC Logic	64	Diagnosis Procedure	91
Diagnosis Procedure	64	B1428 SEAT BELT BUCKLE SWITCH LH	93
B0028 SIDE AIRBAG MODULE RH	67	Description	93
Description	67	DTC Logic	93
DTC Logic	67	Diagnosis Procedure	94
Diagnosis Procedure	67	B1429 SEAT BELT BUCKLE SWITCH RH	96
B0029 SIDE CURTAIN AIR BAG MODULE RH	70	Description	96
Description	70	DTC Logic	96
DTC Logic	70	Diagnosis Procedure	97
Diagnosis Procedure	70	B1430, B1432 SEAT BELT PRE-TENSIONER LH	99
B0091 FRONT SIDE AIR BAG SATELLITE SENSOR LH	73	Description	99
Description	73	DTC Logic	99
DTC Logic	73	Diagnosis Procedure	100
Diagnosis Procedure	74	B1431 SEAT BELT PRE-TENSIONER	102
B0093 FRONT DOOR SATELLITE SENSOR LH	76	Description	102
Description	76	DTC Logic	102
DTC Logic	76	Diagnosis Procedure	102
Diagnosis Procedure	77	B142A IGN VOLTAGE	105
B0094 CRASH ZONE SENSOR	79	Description	105
Description	79	DTC Logic	105
DTC Logic	79	Diagnosis Procedure	105
Diagnosis Procedure	80	B142X COLLISION DETECTION	107
B0096 FRONT SIDE AIR BAG SATELLITE SENSOR RH	82	Description	107
Description	82	DTC Logic	107
DTC Logic	82	Diagnosis Procedure	107
Diagnosis Procedure	83	B14XX AIR BAG DIAGNOSIS SENSOR UNIT.	108
B0098 FRONT DOOR SATELLITE SENSOR RH	85	Description	108
Description	85	DTC Logic	108
DTC Logic	85	Diagnosis Procedure	108
Diagnosis Procedure	86	SYMPTOM DIAGNOSIS	110
B00A0 OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT	88	SRS AIR BAG WARNING LAMP DOES NOT TURN OFF	110
Description	88	Diagnosis Procedure	110
DTC Logic	88	SRS AIR BAG WARNING LAMP DOES NOT TURN ON	111
Diagnosis Procedure	89	Diagnosis Procedure	111
		SRS AIR BAG WARNING LAMP BLINKS	112
		Diagnosis Procedure	112

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Technicians Using Medical Electric

INFOID:000000009345699

OPERATION PROHIBITION

WARNING:

- Parts with strong magnet is used in this vehicle.
- Technicians using a medical electric device such as pacemaker must never perform operation on the vehicle, as magnetic field can affect the device function by approaching to such parts.

NORMAL CHARGE PRECAUTION

WARNING:

- If a technician uses a medical electric device such as an implantable cardiac pacemaker or an implantable cardioverter defibrillator, the possible effects on the devices must be checked with the device manufacturer before starting the charge operation.
- As radiated electromagnetic wave generated by PDM (Power Delivery Module) at normal charge operation may affect medical electric devices, a technician using a medical electric device such as implantable cardiac pacemaker or an implantable cardioverter defibrillator must not approach motor room [PDM (Power Delivery Module)] at the hood-opened condition during normal charge operation.

PRECAUTION AT TELEMATICS SYSTEM OPERATION

WARNING:

- If a technician uses implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), avoid the device implanted part from approaching within approximately 220 mm (8.66 in) from interior/exterior antenna.
- The electromagnetic wave of TCU might affect the function of the implantable cardiac pacemaker or the implantable cardioverter defibrillator (ICD), when using the service, etc.
- If a technician uses other medical electric devices than implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), the electromagnetic wave of TCU might affect the function of the device. The possible effects on the devices must be checked with the device manufacturer before TCU use.

PRECAUTION AT INTELLIGENT KEY SYSTEM OPERATION

WARNING:

- If a technician uses implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), avoid the device implanted part from approaching within approximately 220 mm (8.66 in) from interior/exterior antenna.
- The electromagnetic wave of intelligent key might affect the function of the implantable cardiac pacemaker or the implantable cardioverter defibrillator (ICD), at door operation, at each request switch operation, or at engine starting.
- If a technician uses other medical electric devices than implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), the electromagnetic wave of intelligent key might affect the function of the device. The possible effects on the devices must be checked with the device manufacturer before intelligent key use.

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009343646

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.

PRECAUTIONS

< PRECAUTION >

- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.**
- **Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- **When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.**
- **When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.**

Point to Be Checked Before Starting Maintenance Work

INFOID:000000008745371

The high voltage system may start automatically. It is required to check that the timer air conditioner and timer charge (during EVSE connection) are not set before starting maintenance work.

NOTE:

If the timer air conditioner or timer charge (during EVSE connection) is set, the high voltage system starts automatically even when the power switch is in OFF state.

Service

INFOID:000000008745372

- Never use electrical test equipment to check SRS circuits unless instructed to in this Service Manual.
- Before servicing the SRS, turn power switch OFF, disconnect 12V battery negative terminal and wait 3 minutes or more. Refer to [SRC-4, "Precaution for Removing 12V Battery"](#). For approximately 3 minutes after the cables are removed, it is still possible for the air bag and seat belt pretensioner to deploy. Therefore, never work on any SRS connectors or wires until at least 3 minutes have passed.
- Diagnosis sensor unit must always be installed with their arrow marks "←" pointing towards the front of the vehicle for proper operation. Also check diagnosis sensor unit for cracks, deformities or rust before installation and replace as required.
- The spiral cable must be aligned with the neutral position since its rotations are limited. Never turn steering wheel and column after removal of steering gear.
- Handle air bag module carefully. Always place driver and front passenger air bag modules with the pad side facing upward and seat mounted front side air bag module standing with the stud bolt side facing down.
- Conduct self-diagnosis to check entire SRS for proper function after replacing any components.
- After air bag inflates, the front instrument panel assembly should be replaced if damaged.
- Always replace instrument panel pad following front passenger air bag deployment.
- Never solder the harness when making repairs. Check that harness is not pinched and that there is no contact with other components.
- Never allow harness to come in contact with oil, grease, waste oil, or water.
- Never insert foreign materials, such as a screwdriver, into the harness connector. (This is to prevent accidental activation caused by static electricity.)
- Always use CONSULT or SRS air bag warning lamp to perform the circuit diagnosis. (Never use an electric tester such as a circuit tester.)

Precaution for Removing 12V Battery

INFOID:000000008745373

1. Check that EVSE is not connected.

NOTE:

If EVSE is connected, the air conditioning system may be automatically activated by the timer A/C function.

2. Turn the power switch OFF → ON → OFF. Get out of the vehicle. Close all doors (including back door).
3. Check that the charge status indicator lamp does not blink and wait for 5 minutes or more.

NOTE:

If the battery is removed within 5 minutes after the power switch is turned OFF, plural DTCs may be detected.

4. Remove 12V battery within 1 hour after turning the power switch OFF → ON → OFF.

PRECAUTIONS

< PRECAUTION >

NOTE:

- The 12V battery automatic charge control may start automatically even when the power switch is in OFF state.
- Once the power switch is turned ON → OFF, the 12V battery automatic charge control does not start for approximately 1 hour.

CAUTION:

- **After all doors (including back door) are closed, if a door (including back door) is opened before battery terminals are disconnected, start over from Step 1.**
- **After turning the power switch OFF, if “Remote A/C” is activated by user operation, stop the air conditioner and start over from Step 1.**

A

B

C

D

E

F

G

SRC

I

J

K

L

M

N

O

P

COMPONENT PARTS


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:000000008745374

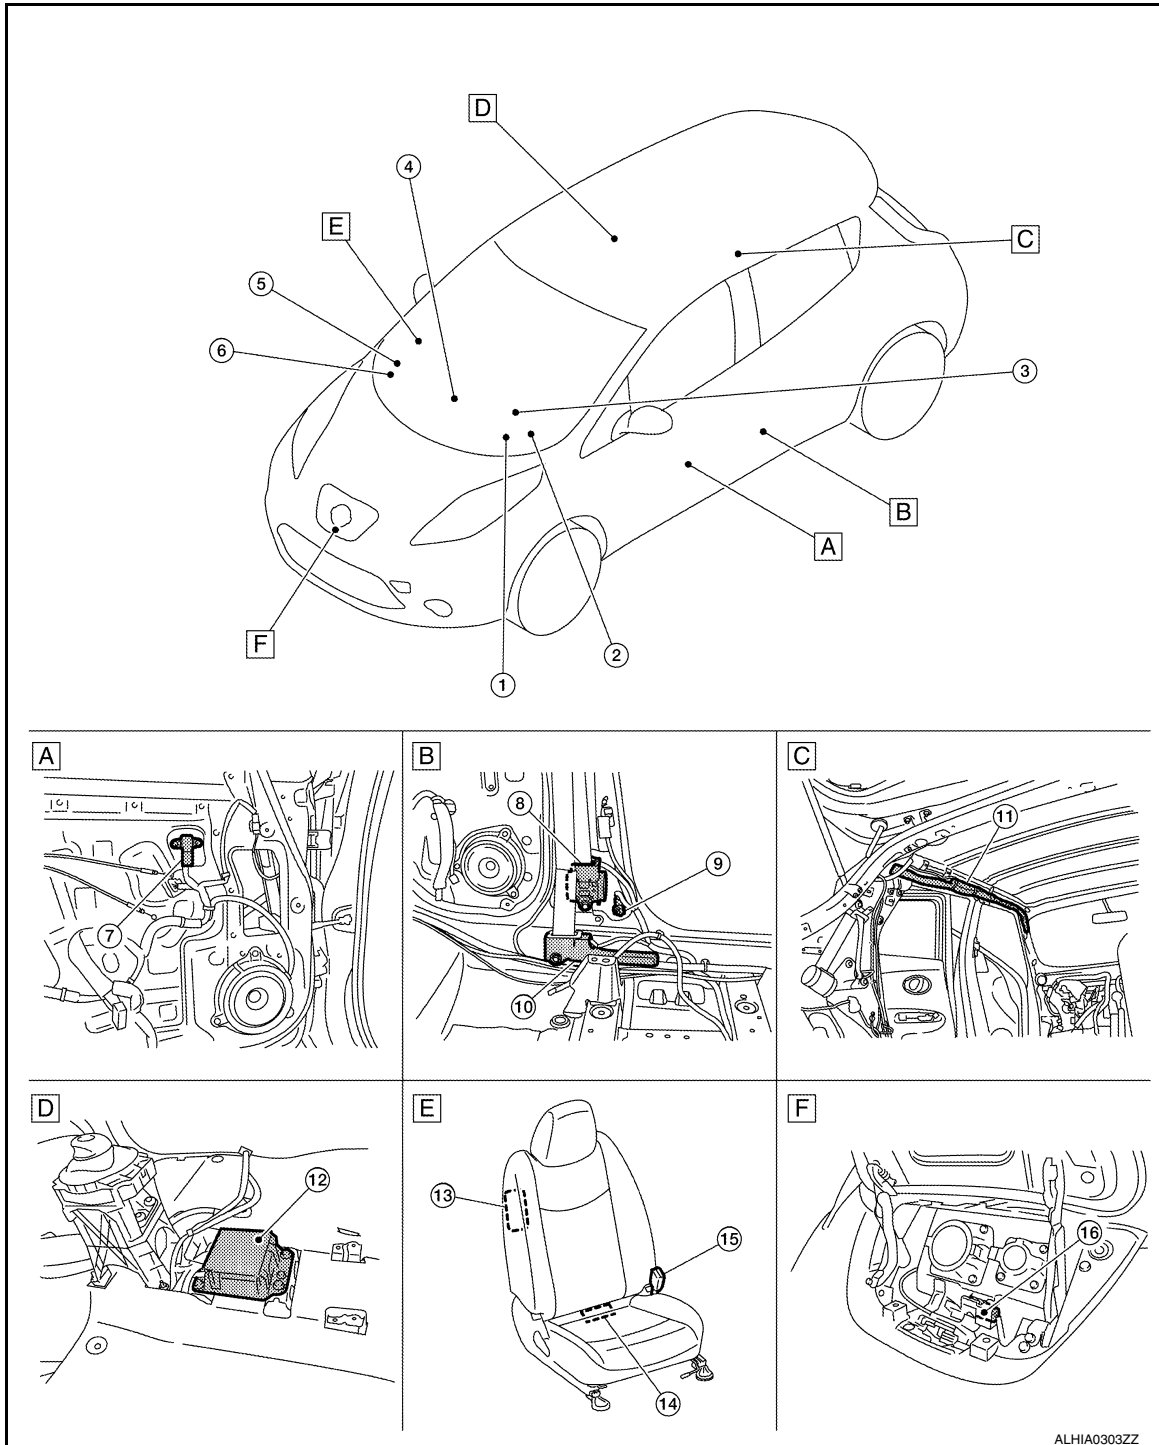

- A. View with door finisher removed
- B. Behind center pillar lower garnish
- C. View with headlining assembly removed
- D. View with center console assembly removed
- E. Passenger seat
- F. View with charge port lid open

COMPONENT PARTS

< SYSTEM DESCRIPTION >

No.	Component	Function
1.	Combination meter (air bag warning lamp)	Refer to SR-12, "MAIN COMPONENT PARTS AND FUNCTIONS : Air bag warning lamp" .
2.	Combination switch (spiral cable)	Refer to SR-11, "MAIN COMPONENT PARTS AND FUNCTIONS : Spiral cable" .
3.	Driver air bag module	Refer to SR-7, "AIR BAG MODULE : Driver air bag module" .
4.	Front passenger air bag OFF indicator	Turns the front passenger air bag OFF indicator lamp ON when the front passenger seat is occupied by a child or a child-seat
5.	Passenger air bag module	Refer to SR-7, "AIR BAG MODULE : Passenger air bag module" .
6.	VCM	Receive the collision detection signal when air bag diagnosis sensor unit detects collision. Refer to EVC-16, "Component Parts Location" for detailed installation location.
7.	Front door satellite sensor LH	Refer to SR-11, "MAIN COMPONENT PARTS AND FUNCTIONS : Satellite sensor" .
8.	Seat belt pre-tensioner LH	Refer to SB-5, "Seat belt pre-tensioner with Load limiter" .
9.	Satellite sensor LH	Refer to SR-11, "MAIN COMPONENT PARTS AND FUNCTIONS : Satellite sensor" .
10.	Lap pre-tensioner LH	Refer to SB-6, "Double pre-tensioner seat belt" .
11.	Curtain air bag module LH	Refer to SR-8, "AIR BAG MODULE : Curtain air bag module" .
12.	Air bag diagnosis sensor unit	Refer to SR-12, "MAIN COMPONENT PARTS AND FUNCTIONS : Air bag diagnosis sensor unit" .
13.	Side air bag module RH	Refer to SR-10, "INFLATOR : Side air bag inflator" .
14.	Occupant classification system control unit	Transmits the passenger seat status (occupied or empty) to air bag diagnosis sensor unit. It is installed in the passenger seat cushion. Refer to SE-8, "HEATED SEAT SYSTEM : Component Parts Location" for detailed installation location.
15.	Seat belt buckle switch RH	Controls deployment timing depending on the seat belt condition that is fastened or unfastened. It is installed in the seat belt buckle. Refer to SB-7, "Exploded View" for detailed installation location.
16.	Crash zone sensor	Refer to SR-11, "MAIN COMPONENT PARTS AND FUNCTIONS : Crash zone sensor" .

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

SYSTEM


< SYSTEM DESCRIPTION >

SYSTEM

System Description

INFOID:000000008745375

SYSTEM DIAGRAM

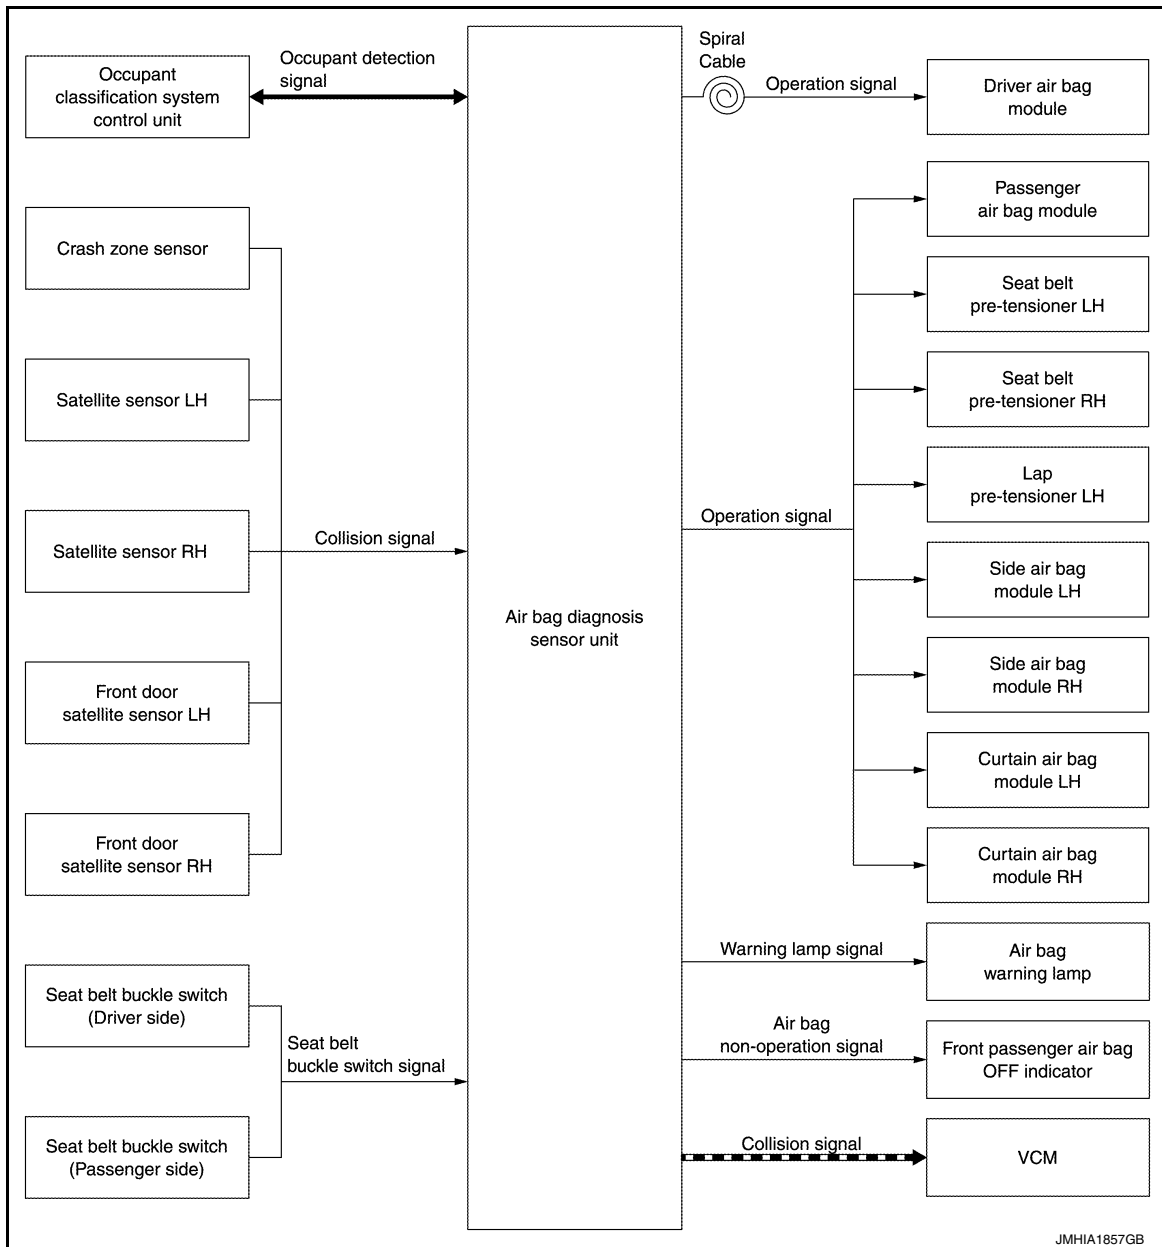

DESCRIPTION

Supplemental Restraint System (SRS) activates the air bag module and seat belt pre-tensioner when it detects a frontal collision or a side collision that is more than the specified limit.

Together with other safety devices, it reduces the impact that occupant receives when vehicle collision occurs. Air bag diagnosis sensor unit supplies power supply to air bag module and pre-tensioner seat belt when deceleration that is more than the specified limit is detected by G sensor in air bag diagnosis sensor unit, crash zone sensor, satellite sensor, or front door satellite sensor.

Air bag module is composed of electric igniter (squib), filter, pyrotechnic material, and gas generating material. When air bag module receives a signal from air bag diagnosis sensor unit, air bag module ignites pyrotechnic material using electric igniter (squib) so that gas generating material generates high temperature nitrogen gas. The gas through filter activates air bag. At the same time, pre-tensioner seat belt receives power supply from air bag diagnosis sensor unit, gas generator is activated, and then gas is generated.

Balls in pipe are moved according to generated gas pressure and strike pinion gear on ELR shaft. ELR shaft rotates and retracts seat belt.

SYSTEM

< SYSTEM DESCRIPTION >

AIR BAG DIAGNOSIS SENSOR UNIT FUNCTIONS

Air bag diagnosis sensor unit has the following functions:

- Detects a collision and supplies the energy for deploying air bag and seat belt pre-tensioner.
- Detects and records electrical malfunction in air bag system and seat belt pre-tensioner system, and blinking air bag warning lamp.
- Detects and records the deployment of air bag and seat belt pre-tensioner and turns ON the air bag warning lamp.
- Indicates malfunctioning portion via the number of blinks from the air bag warning lamp in the diagnosis mode.
- Indicates the malfunction record via CONSULT.
- Suppresses the deployment of passenger air bag when passenger seat is empty or occupied by child or child-seat.
- When passenger seat is occupied by child or child seat, turns ON passenger air bag OFF indicator.
- When judges that passenger seat is occupied by a adult or a child and passenger seat belt is not fasten, turns ON seat belt warning lamp. Further information for the seat belt warning system.
- When collision is detected, collision signal is transmitted to VCM (collision detection function).

COLLISION MODES

The operation of SRS is different depending on the collision modes applications. For example, the driver air bag module, passenger air bag module, and seat belt pre-tensioner are activated in a frontal collision or side collision.

SRS configurations that are activated for the following collision modes.

SRS configuration	: Apply —: Not apply		
	Frontal collision	Left side collision	Right side collision
Driver air bag module	×	—	—
Passenger air bag module	×	—	—
Seat belt pre-tensioner LH	×	×	—
Seat belt pre-tensioner RH	×	—	×
Lap pre-tensioner LH	×	×	—
Side air bag module LH	—	×	—
Side air bag module RH	—	—	×
Curtain air bag module LH	—	×	—
Curtain air bag module RH	—	—	×

OCCUPANT CLASSIFICATION SYSTEM

Occupant Classification System has the following functions.

1. Suppresses the deployment of passenger air bag when passenger seat is empty, or when occupied by child and child-seat.
2. Indicates malfunction portion with blinking times of air bag warning lamp in diagnosis mode.
3. Indicates the malfunctioning record by CONSULT.
4. When “zero point reset” for occupant detection system is incomplete, CONSULT indicates that “zero point reset” is incomplete.

NOTE:

- Operation of air bag diagnosis sensor unit when air bag diagnosis sensor unit receives information from Occupant Classification System.
- Even if zero point reset is “complete”, always perform zero point reset after the removal and installation of seat or the removal of control unit harness connector.

Status (front passenger seat)	Passenger air bag	Front passenger air bag OFF indicator	Air bag warning lamp	Seat belt warning lamp (when front passenger seat is unbuckled)
Empty	Suppress	OFF	OFF	OFF
An object	Suppress	ON	OFF	OFF
Child/ child-seat	Suppress	ON	OFF	ON
Adult	Enable to deploy	OFF	OFF	ON

SYSTEM

< SYSTEM DESCRIPTION >

Status (front passenger seat)	Passenger air bag	Front passenger air bag OFF indicator	Air bag warning lamp	Seat belt warning lamp (when front passenger seat is unbuckled)
Malfunction	Suppress	ON	Blinking	OFF
Zero point reset Not yet performed (NISSAN genuine parts only)	Suppress	ON	Blinking	OFF

DIAGNOSIS SYSTEM (AIR BAG)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (AIR BAG)

Description

INFOID:000000009344850

CAUTION:

- Never use electrical test equipment on any circuit related to the SRS unless instructed in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.
- Never repair, splice or modify the SRS wiring harness. If the harness is damaged, replace it with a new one.
- Keep ground portion clean.

DIAGNOSIS FUNCTION

- The SRS self-diagnostic results can be read with air bag warning lamp and/or CONSULT.
- The user mode is exclusively prepared for the customer (driver). This mode warns the driver of a system malfunction through the operation of the air bag warning lamp.
- The diagnosis mode allows the technician to locate and inspect the malfunctioning part.
- The mode applications for the air bag warning lamp and CONSULT are as per the following items.

×: Application, —: Not application

Diagnosis tool	User mode	Diagnosis mode
Air bag warning lamp	×	×
CONSULT	—	×

On Board Diagnosis Function

INFOID:000000009344851

SRC

ON-BOARD DIAGNOSIS

There are two self diagnosis functions with air bag warning lamp per the following items.

- USER MODE
- DIAGNOSIS MODE

METHOD OF STARTING

- Diagnosis mode changes from user mode to diagnosis mode when changing operation is performed.
- In user mode, when SRS air bag warning lamp is not blinking, changing to diagnosis mode by ignition switch operation is not possible.
- In diagnosis mode, when repair is complete and system is normal, the mode changes to user mode when ignition switch is turned from OFF to ON.

Procedure to Change Diagnosis Mode

1. Turn ignition switch from OFF to ON.
2. SRS air bag lamp turns ON for 7 second and turns OFF, then turn ignition switch OFF within 1second after the lamp turns OFF.
3. After turning ignition switch OFF, wait for 3 seconds or more.
4. Repeat operation 1 to 3 for 2 times so that operation 1 to 3 is repeated for 3times in total.
5. Turn ignition switch from OFF to ON. Diagnosis mode changes.

USER MODE

In USER MODE, air bag warning lamp on combination meter blinks when a malfunction is detected and warns the customer (driver).





How to Read Air Bag Warning Lamp

1. Turn the ignition switch from OFF to ON, and check that the air bag warning lamp blinks.
2. Compare the air bag warning lamp blinking pattern with the examples.

Air Bag Warning Lamp Examples

DIAGNOSIS SYSTEM (AIR BAG)

< SYSTEM DESCRIPTION >

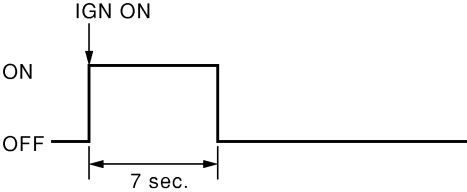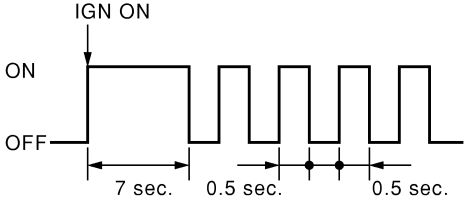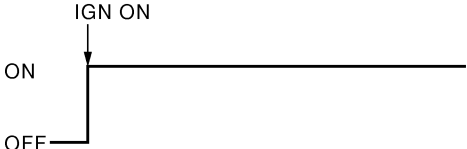Air bag warning lamp operation (user mode)	SRS condition	Reference item
 <p style="text-align: right;">SHIA0011E</p>	<ul style="list-style-type: none"> No malfunction is detected. No further action is necessary. 	<p style="text-align: center;">—</p>
 <p style="text-align: right;">SHIA0012E</p>	<ul style="list-style-type: none"> The system is malfunctioning. Self diagnostic result is not erased after repair. <p>Battery voltage is low (less than 9 V) or high battery voltage (more than 16V).</p> <p>Occupant detection function is disabled.</p> <p>Zero point reset is incomplete.</p> <p>Intermittent malfunction is detected in the past.</p>	<p>Erase "Self Diagnostic Result" Refer to SRC-15, "CONSULT Function", How to Erase Self-diagnostic Result.</p> <p>Check "CAUSE OF WARNING" in "Special Function" with CONSULT Refer to SRC-15, "CONSULT Function".</p> <p>Refer to SRC-17, "CONSULT Function".</p> <p>Refer to SRC-50, "ZERO POINT RESET : Special Repair Requirement".</p> <p>Go to GI-53, "Intermittent Incident".</p>
 <p style="text-align: right;">SHIA0013E</p>	<ul style="list-style-type: none"> Air bag is deployed. Seat belt pre-tensioner is deployed. Air bag diagnosis sensor unit is malfunctioning. Air bag power supply circuit is malfunctioning. Air bag warning lamp circuit is malfunctioning. 	<p>Go to SR-13, "For Frontal Collision" or SR-15, "For Side and Rollover Collision".</p> <p>Go to SRC-110, "Diagnosis Procedure".</p>
 <p style="text-align: right;">SHIA0014E</p>	<ul style="list-style-type: none"> Air bag diagnosis sensor unit is malfunctioning. Air bag warning lamp circuit is malfunctioning. 	<p>Go to SRC-111, "Diagnosis Procedure".</p>

DIAGNOSIS MODE

The diagnosis mode can only be switched when a malfunction is detected in the user mode. Malfunctioning system is indicated according to blinking pattern of air bag warning lamp.

How to Read Air Bag Warning Lamp

- Follow the procedures of "PROCEDURE TO CHANGE DIAGNOSIS MODE", and switch to the diagnosis mode.

DIAGNOSIS SYSTEM (AIR BAG)

< SYSTEM DESCRIPTION >

2. Turn ignition switch ON. Check the blinking pattern of air bag warning lamp.
 There are 4 blinking patterns for the air bag warning lamp as per the following items.
- Front air bag system: Two 1.5 second blink followed by a 0.5 second blink repeated.
 - Side air bag system: Three 1.5 second blinks followed by a 0.5 second blink repeated.
 - Air bag control unit system: 3 second blink followed by a 0.5 second blink repeated.
 - Sensor system: Two 3 second blinks followed by a 0.5 second blink repeated.

Front air bag system

Number of 0.5 second blinks	Malfunctioning items
1	Driver air bag module
2	Passenger air bag module
3	Seat belt pre-tensioner LH
4	Seat belt pre-tensioner RH
5	Lap pre-tensioner LH
6	Lap pre-tensioner RH

Side air bag system

Number of 0.5-second blinks	Malfunctioning items
1	Side air bag module LH
2	Side air bag module RH
3	Curtain air bag module LH
4	Curtain air bag module RH

Air bag control unit system

Number of 0.5 second blinks	Malfunctioning items
1	Collision detection
2	Air bag diagnosis sensor unit
3	Front passenger air bag indicator
5	Air bag cut OFF switch

Sensor system

Number of 0.5 second blinks	Malfunctioning items
1	Crash zone sensor
2	Satellite sensor LH
3	Satellite sensor RH
12	Other satellite sensor


How to Erase Self-diagnostic Result

After a malfunction is repaired, turn the ignition switch OFF for one second or more, then turn ignition switch ON. The diagnosis mode returns to the user mode. At that time the self-diagnostic result is cleared.

EXAMPLE OF AIR BAG WARNING LAMP OPERATION IN THE DIAGNOSIS MODE

System Normal

When system is normal.

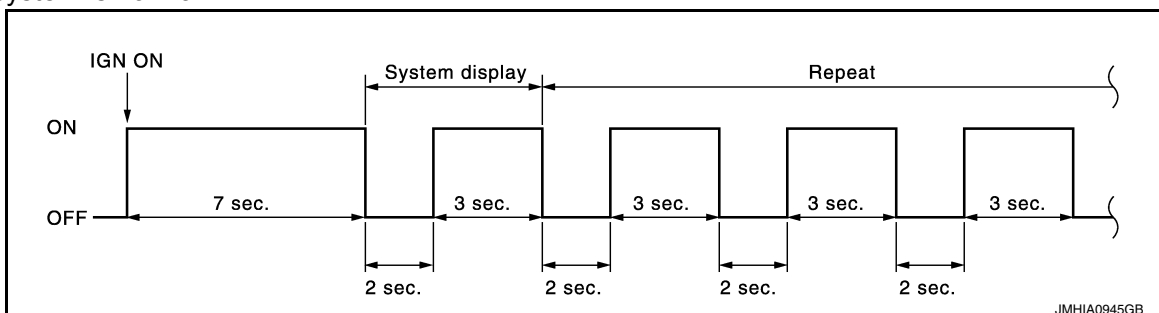


Single System Malfunction
 • Front air bag system

DIAGNOSIS SYSTEM (AIR BAG)


< SYSTEM DESCRIPTION >

When air bag diagnosis sensor unit system (Item display 1) is malfunctioning.

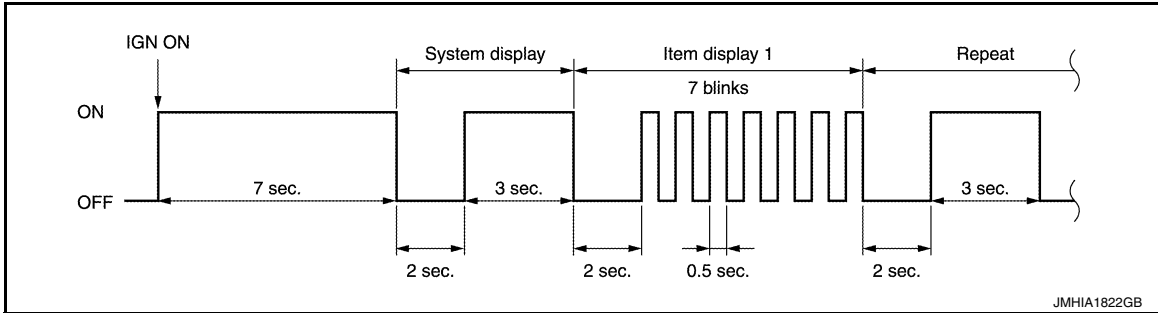

- Side air bag system


When rear curtain air bag module LH system (Item display 1) is malfunctioning.

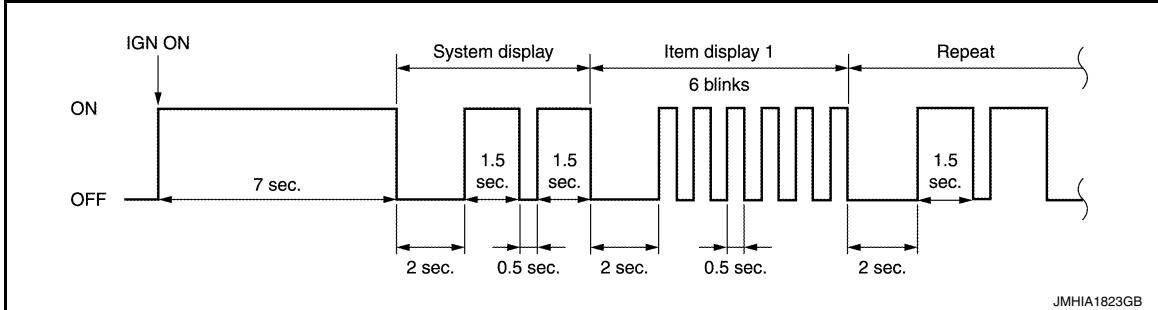

Multiple Systems Malfunction


- Front air bag system

When driver air bag module (Item display 1) and air bag diagnosis sensor unit system (Item display 2) are malfunctioning.

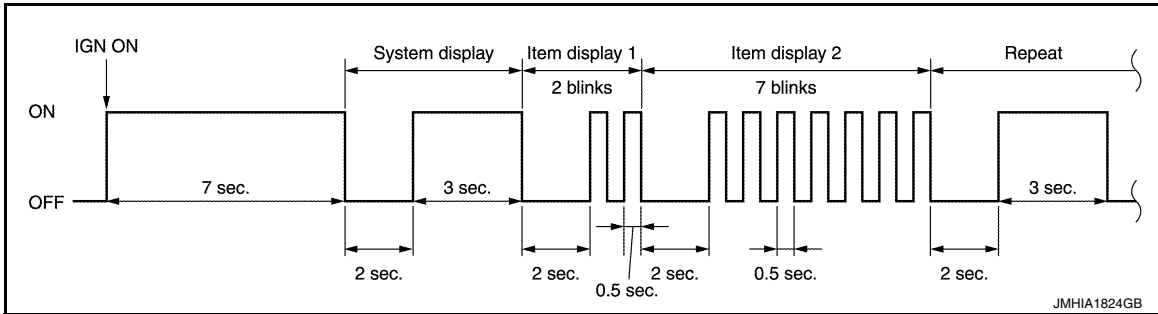

- Side air bag system

When front satellite sensor LH (Item display 1) and rear curtain air bag module LH system (Item display 2) are malfunctioning.

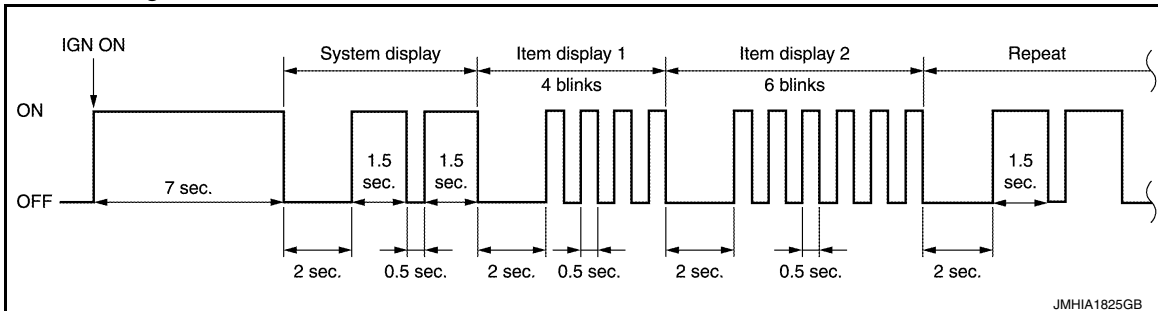


- Front air bag system and side air bag system

DIAGNOSIS SYSTEM (AIR BAG)

< SYSTEM DESCRIPTION >

When driver air bag module (Item display 1) and front satellite sensor RH (Item display2) are malfunctioning.

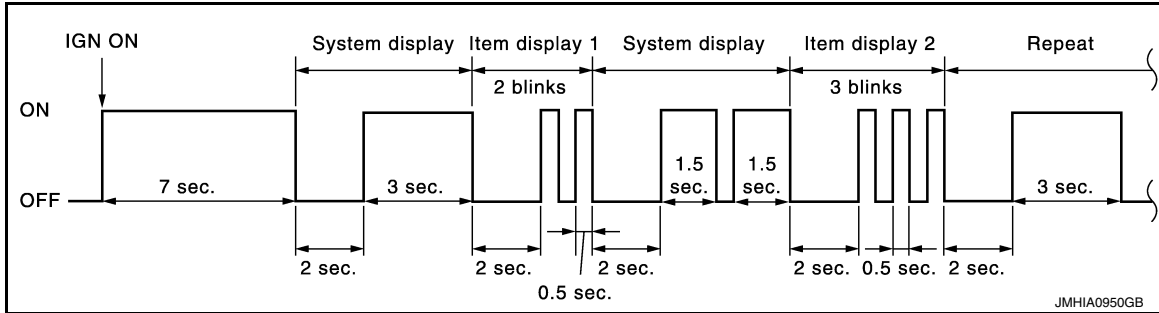

CONSULT Function

INFOID:000000009344852

APPLICATION ITEM

CONSULT performs the following functions.

Diagnosis mode	Description
Ecu Identification	Air bag diagnosis sensor unit ECU discriminated number (identification number) or part number is displayed. Air bag diagnosis sensor unit has individual ECU discriminated number (identification number) or part number based on model and equipment.
Self Diagnostic Result	The current self diagnosis results (also indicated with the number of air bag warning lamp blinks in the diagnosis mode) are displayed on CONSULT screen in real time. This refers to a malfunctioning part requiring repairs. Refer to SRC-18, "DTC Index" .
TROUBLE DIAG RECORD	With TROUBLE DIAG RECORD, diagnosis results previously erased by a reset operation can be displayed on CONSULT screen.
SELF-DIAG RESULT [CAN]	This item is displayed, but cannot be supported.
Cause of Warning Lamp	It displays the cause of warning lamp illumination that is not recorded in memory.

CAUSE OF WARNING LAMP

The SRS air bag warning lamp blinks when the ignition voltage is a voltage value (9V or less, or 16 V or more) at which the SRS air bag cannot operate normally. After blinking, if the ignition voltage returns to normal, SRS air bag warning lamp turns OFF. DTC memory is not performed while the abnormal ignition voltage is detected. The mode cannot be switched to trouble diagnosis mode when the ignition switch is operated. "No DTC" is displayed when checking "Self-diagnosis result" using CONSULT.

NOTE:

- SRS air bag warning may blink when the condition is out of detection area* of the satellite sensor in door. The system is normal if SRS air bag warning lamp turns OFF after the condition returns within detection area of the satellite sensor in door.
- SRS air bag warning lamp blinks when the zero point reset is incomplete after replacing the occupant detection system control unit. (SRS air bag warning lamp turns OFF after the zero point reset is complete.)
- *: Pressure inside of door is excessively low and air bag system cannot be operated normally (example: altitude is approximately 4,000 m or more).

DIAGNOSIS SYSTEM (AIR BAG)

< SYSTEM DESCRIPTION >

Display item	Display content	Actions by worker
IGN VOLT COND	<p>The ignition voltage recognized by air bag system (air bag control unit and occupant detection system control unit) is displayed or a message stating that condition is out of detection range of satellite sensor in door is displayed.</p> <ul style="list-style-type: none"> • OK: Normal • LOW: The ignition voltage is low, high, or out of detection range of satellite sensor in door 	<p>Perform the check at an altitude of 4,000 m or less.</p> <ul style="list-style-type: none"> • Check battery voltage if the ignition voltage status is displayed as "LOW". • Check battery voltage if the ignition voltage status is "OK" and the number of times detected is 1 or more. This is because an ignition voltage error may be detected in the past. <p>NOTE: If battery voltage is normal, the cause may be that out of detection range of satellite sensor in door is detected.</p>
IGN VOLT TIME	<p>Total number of times is displayed, summing up the number of times ignition voltage error is detected and the number of times that out of detection range of satellite sensor in door is detected. (Detection record is erased and counter returns to "0" by "ERASE MEMORY" in "Self-diagnosis results" using CONSULT.)</p>	
LOW V RECORDED	<p>Number of times ignition switch ON is displayed after ignition voltage error or out of detection range of satellite sensor in door is detected. (Detection record is erased and counter returns to "0" by "ERASE MEMORY" in "Self-diagnosis results" using CONSULT.)</p>	

DIAGNOSIS SYSTEM (OCCUPANT DETECTION SYSTEM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (OCCUPANT DETECTION SYSTEM)

CONSULT Function

INFOID:000000009344853

ZERO POINT RESET DESCRIPTION

This vehicle adopts occupant detection system with a weight detecting method. When replacing, or removing and installing passenger seat, always perform "zero point reset" so that the vehicle recognizes zero point. If zero point reset is incomplete, occupant detection seat sensor does not operate normally.

WORK SUPPORT

Monitor item	Description
Zero point reset function	Perform zero point reset. Refer to SRC-50, "ZERO POINT RESET : Special Repair Requirement" .

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

DIAGNOSIS SENSOR UNIT

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

DIAGNOSIS SENSOR UNIT

DTC Index

INFOID:000000009354893

DIAGNOSTIC CODE CHART

NOTE:

Follow the procedures in numerical order when repairing malfunctioning parts. Confirm whether malfunction is eliminated using air bag warning lamp or CONSULT each time repair is finished. If malfunction is still observed, proceed to the next step. When malfunction is eliminated, further repair work is not required.

CONSULT name	DTC	DTC detecting condition	Repair order
CAN COMMUNICATION FAILURE	U1000	CAN system communication failure.	Refer to SRC-52. "Diagnosis Procedure" .
CAN COMMUNICATION FAILURE [CONTROL UNIT]	U1010	CAN system (control unit) failure.	Refer to SRC-53. "Diagnosis Procedure" .
DRIVER AIRBAG MODULE CIRCUIT [OPEN]	B0001	Driver air bag module circuit (DR1) is open (including the spiral cable).	Refer to SRC-56. "Diagnosis Procedure" .
DRIVER AIRBAG MODULE CIRCUIT [VB-SHORT]		Driver air bag module circuit (DR1) is shorted to a power supply circuit (including the spiral cable).	
DRIVER AIRBAG MODULE CIRCUIT [GND-SHORT]		Driver air bag module circuit (DR1) is shorted to ground (including the spiral cable).	
DRIVER AIRBAG MODULE CIRCUIT [SHORT]		Driver air bag module circuits (DR1) are shorted to each other (including the spiral cable).	
DRIVER AIRBAG MODULE 2ND CIRCUIT [OPEN]	B0002	Driver air bag module circuit (DR2) is open (including the spiral cable).	
DRIVER AIRBAG MODULE 2ND CIRCUIT [VB-SHORT]		Driver air bag module circuit (DR2) is shorted to a power supply circuit (including the spiral cable).	
DRIVER AIRBAG MODULE 2ND CIRCUIT [GND-SHORT]		Driver air bag module circuit (DR2) is shorted to ground (including the spiral cable).	
DRIVER AIRBAG MODULE 2ND CIRCUIT [SHORT]		Driver air bag module circuits (DR2) are shorted to each other (including the spiral cable).	
ASSIST AIRBAG MODULE CIRCUIT [OPEN]	B0010	Front passenger air bag module circuit (AS1) is open.	Refer to SRC-59. "Diagnosis Procedure" .
ASSIST AIRBAG MODULE CIRCUIT [VB-SHORT]		Front passenger air bag module circuit (AS1) is shorted to a power supply circuit.	
ASSIST AIRBAG MODULE CIRCUIT [GND-SHORT]		Front passenger air bag module circuit (AS1) is shorted to ground.	
ASSIST AIRBAG MODULE CIRCUIT [SHORT]		Front passenger air bag module circuits (AS1) are shorted to each other.	
ASSIST AIRBAG MODULE 2ND CIRCUIT [OPEN]	B0011	Front passenger air bag module circuit (AS2) is open.	
ASSIST AIRBAG MODULE 2ND CIRCUIT [VB-SHORT]		Front passenger air bag module circuit (AS2) is shorted to a power supply circuit.	
ASSIST AIRBAG MODULE 2ND CIRCUIT [GND-SHORT]		Front passenger air bag module circuit (AS2) is shorted to ground.	
ASSIST AIRBAG MODULE 2ND CIRCUIT [SHORT]		Front passenger air bag module circuits (AS2) are shorted to each other.	

DIAGNOSIS SENSOR UNIT

< ECU DIAGNOSIS INFORMATION >

CONSULT name	DTC	DTC detecting condition	Repair order
SIDE AIRBAG MODULE LH CIRCUIT [OPEN]	B0020	Front LH side air bag module circuit is open.	Refer to SRC-61 , "Diagnosis Procedure".
SIDE AIRBAG MODULE LH CIRCUIT [VB-SHORT]		Front LH side air bag module circuit is shorted to a power supply circuit.	
SIDE AIRBAG MODULE LH CIRCUIT [GND-SHORT]		Front LH side air bag module circuit is shorted to ground.	
SIDE AIRBAG MODULE LH CIRCUIT [SHORT]		Front LH side air bag module circuits are shorted to each other.	
CURTAIN AIRBAG MODULE LH CIRCUIT [OPEN]	B0021	LH side curtain air bag module circuit is open.	Refer to SRC-64 , "Diagnosis Procedure".
CURTAIN AIRBAG MODULE LH CIRCUIT [VB-SHORT]		LH side curtain air bag module circuit is shorted to a power supply circuit.	
CURTAIN AIRBAG MODULE LH CIRCUIT [GND-SHORT]		LH side curtain air bag module circuit is shorted to ground.	
CURTAIN AIRBAG MODULE LH CIRCUIT [SHORT]		LH side curtain air bag module circuits are shorted to each other.	
SIDE AIRBAG MODULE RH CIRCUIT [OPEN]	B0028	Front RH side air bag module circuit is open.	Refer to SRC-67 , "Diagnosis Procedure".
SIDE AIRBAG MODULE RH CIRCUIT [VB-SHORT]		Front RH side air bag module circuit is shorted to a power supply circuit.	
SIDE AIRBAG MODULE RH CIRCUIT [GND-SHORT]		Front RH side air bag module circuit is shorted to ground.	
SIDE AIRBAG MODULE RH CIRCUIT [SHORT]		Front RH side air bag module circuits are shorted to each other.	
CURTAIN AIRBAG MODULE RH CIRCUIT [OPEN]	B0029	RH side curtain air bag module circuit is open.	Refer to SRC-70 , "Diagnosis Procedure".
CURTAIN AIRBAG MODULE RH CIRCUIT [VB-SHORT]		RH side curtain air bag module circuit is shorted to a power supply circuit.	
CURTAIN AIRBAG MODULE RH CIRCUIT [GND-SHORT]		RH side curtain air bag module circuit is shorted to ground.	
CURTAIN AIRBAG MODULE RH CIRCUIT [SHORT]		RH side curtain air bag module circuits are shorted to each other.	
B-PILLAR SATELLITE SENSOR LH [SENSOR FAIL]	B0091	Front side air bag satellite sensor LH has malfunctioned.	Refer to SRC-74 , "Diagnosis Procedure".
B-PILLAR SATELLITE SENSOR LH [COMM FAIL]		Front side air bag satellite sensor LH communication error.	
B-PILLAR SATELLITE SENSOR LH [DISCONNECT]		Front side air bag satellite sensor LH is disconnected.	
B-PILLAR SATELLITE SENSOR LH [UNMATCH]		Front side air bag satellite sensor LH is out of specification.	
B-PILLAR SATELLITE SENSOR LH [GND-SHORT]		Front side air bag satellite sensor LH circuit is shorted to ground.	
DOOR SATELLITE SENSOR LH [SENSOR FAIL]	B0093	Front door satellite sensor LH has malfunctioned.	Refer to SRC-77 , "Diagnosis Procedure".
DOOR SATELLITE SENSOR LH [COMM FAIL]		Front door satellite sensor LH communication error.	
DOOR SATELLITE SENSOR LH [DISCONNECT]		Front door satellite sensor LH is disconnected.	
DOOR SATELLITE SENSOR LH [UNMATCH]		Front door satellite sensor LH is out of specification.	
DOOR SATELLITE SENSOR LH [GND-SHORT]		Front door satellite sensor LH circuit is shorted to ground.	

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

DIAGNOSIS SENSOR UNIT

< ECU DIAGNOSIS INFORMATION >

CONSULT name	DTC	DTC detecting condition	Repair order
CRASH ZONE SENSOR [SENSOR FAIL]	B0094	Crash zone sensor has malfunctioned.	Refer to SRC-80 , " Diagnosis Procedure ".
CRASH ZONE SENSOR [COMM FAIL]		Crash zone sensor communication error.	
CRASH ZONE SENSOR [DISCONNECT]		Crash zone sensor is disconnected.	
CRASH ZONE SENSOR [UNMATCH]		Crash zone sensor is out of specification.	
CRASH ZONE SENSOR [GND-SHORT]		Crash zone sensor circuit is shorted to ground.	
B-PILLAR SATELLITE SENSOR RH [SENSOR FAIL]	B0096	Front side air bag satellite sensor RH has malfunctioned.	Refer to SRC-83 , " Diagnosis Procedure ".
B-PILLAR SATELLITE SENSOR RH [COMM FAIL]		Front side air bag satellite sensor RH communication error.	
B-PILLAR SATELLITE SENSOR RH [DISCONNECT]		Front side air bag satellite sensor RH is disconnected.	
B-PILLAR SATELLITE SENSOR RH [UNMATCH]		Front side air bag satellite sensor RH is out of specification.	
B-PILLAR SATELLITE SENSOR RH [GND-SHORT]		Front side air bag satellite sensor RH circuit is shorted to ground.	
DOOR SATELLITE SENSOR RH [SENSOR FAIL]	B0098	Front door satellite sensor RH has malfunctioned.	Refer to SRC-86 , " Diagnosis Procedure ".
DOOR SATELLITE SENSOR RH [COMM FAIL]		Front door satellite sensor RH communication error.	
DOOR SATELLITE SENSOR RH [DISCONNECT]		Front door satellite sensor RH is disconnected.	
DOOR SATELLITE SENSOR RH [UNMATCH]		Front door satellite sensor RH is out of specification.	
DOOR SATELLITE SENSOR RH [GND-SHORT]		Front door satellite sensor RH circuit is shorted to ground.	
OCCUPANT DETECTION SENSOR UNIT [UNIT FAIL]	B00A0	The OCS control unit is malfunctioning.	Refer to SRC-89 , " Diagnosis Procedure ".
OCCUPANT DETECTION SENSOR UNIT [NO DATA]			
OCCUPANT DETECTION SENSOR UNIT [UNDEFINED]			
OCCUPANT DETECTION SENSOR UNIT [RESET FAIL]			
OCCUPANT DETECTION SENSOR UNIT [COMM FAIL]		Communication between the OCS control unit and the air bag diagnosis sensor unit is interrupted.	
OCCUPANT DETECTION SENSOR [UNIT FAIL]		The OCS sensor is malfunctioning.	
OCCUPANT DETECTION SENSOR [POWER FAIL]		The OCS sensor circuit is malfunctioning.	
PASSENGER AIRBAG INDICATOR CIRCUIT [FAIL]	B00D5	Front passenger air bag OFF indicator is malfunctioning.	Refer to SRC-91 , " Diagnosis Procedure ".
PASSENGER AIRBAG INDICATOR CIRCUIT [OPEN]		Front passenger air bag OFF indicator circuit is open.	
PASSENGER AIRBAG INDICATOR CIRCUIT [VB-SHORT]		Front passenger air bag OFF indicator is shorted to a power supply circuit.	
PASSENGER AIRBAG INDICATOR CIRCUIT [GND-SHORT]		Front passenger air bag OFF indicator is shorted to ground.	

DIAGNOSIS SENSOR UNIT

< ECU DIAGNOSIS INFORMATION >

CONSULT name	DTC	DTC detecting condition	Repair order
FRONTAL COLLISION DETECTION	B1421	Frontal collision detected. Driver and/or front passenger air bag modules are deployed.	Refer to SR-13, "For Frontal Collision" .
SIDE COLLISION DETECTION	B1422	Side collision detected. Curtain air bag module and seat belt pre-tensioner are deployed.	Refer to SR-15, "For Side and Rollover Collision" .
REAR COLLISION DETECTION	B1425	Rear collision has been detected.	Replace air bag diagnosis unit. Refer to SR-38, "Removal and Installation" .
SEAT BELT BUCKLE SW LH CIRCUIT [OPEN]	B1428	LH seat belt buckle switch circuit is open.	Refer to SRC-94, "Diagnosis Procedure" .
SEAT BELT BUCKLE SW LH CIRCUIT [VB-SHORT]		LH seat belt buckle switch circuit is shorted to a power supply circuit.	
SEAT BELT BUCKLE SW LH CIRCUIT [GND-SHORT]		LH seat belt buckle switch circuit is shorted to ground.	
SEAT BELT BUCKLE SW LH CIRCUIT [UNDEFINED]		LH seat belt buckle switch circuit malfunction.	
SEAT BELT BUCKLE SW RH CIRCUIT [OPEN]	B1429	RH seat belt buckle switch circuit is open.	Refer to SRC-97, "Diagnosis Procedure" .
SEAT BELT BUCKLE SW RH CIRCUIT [VB-SHORT]		RH seat belt buckle switch circuit is shorted to a power supply circuit.	
SEAT BELT BUCKLE SW RH CIRCUIT [GND-SHORT]		RH seat belt buckle switch circuit is shorted to ground.	
SEAT BELT BUCKLE SW RH CIRCUIT [UNDEFINED]		RH seat belt buckle switch circuit malfunction.	
FRONT PRE-TEN LH CIRCUIT [OPEN]	B1430	LH seat belt pre-tensioner circuit is open. (shoulder belt)	Refer to SRC-100, "Diagnosis Procedure" .
FRONT PRE-TEN LH CIRCUIT [VB-SHORT]		LH seat belt pre-tensioner circuit is shorted to a power supply circuit. (shoulder belt)	
FRONT PRE-TEN LH CIRCUIT [GND-SHORT]		LH seat belt pre-tensioner circuit is shorted to ground. (shoulder belt)	
FRONT PRE-TEN LH CIRCUIT [SHORT]		LH seat belt pre-tensioner circuits are shorted to each other. (shoulder belt)	
FRONT PRE-TEN RH CIRCUIT [OPEN]	B1431	RH seat belt pre-tensioner circuit is open. (shoulder belt)	Refer to SRC-102, "Diagnosis Procedure" .
FRONT PRE-TEN RH CIRCUIT [VB-SHORT]		RH seat belt pre-tensioner circuit is shorted to a power supply circuit. (shoulder belt)	
FRONT PRE-TEN RH CIRCUIT [GND-SHORT]		RH seat belt pre-tensioner circuit is shorted to ground. (shoulder belt)	
FRONT PRE-TEN RH CIRCUIT [SHORT]		RH seat belt pre-tensioner circuits are shorted to each other. (shoulder belt)	
FRONT PRE-TEN2 LH CIRCUIT [OPEN]	B1432	LH seat belt pre-tensioner circuit is open. (lap belt)	Refer to SRC-100, "Diagnosis Procedure" .
FRONT PRE-TEN2 LH CIRCUIT [VB-SHORT]		LH seat belt pre-tensioner circuit is shorted to a power supply circuit. (lap belt)	
FRONT PRE-TEN2 LH CIRCUIT [GND-SHORT]		LH seat belt pre-tensioner circuit is shorted to ground. (lap belt)	
FRONT PRE-TEN2 LH CIRCUIT [SHORT]		LH seat belt pre-tensioner circuits are shorted to each other. (lap belt)	

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

DIAGNOSIS SENSOR UNIT

< ECU DIAGNOSIS INFORMATION >

CONSULT name	DTC	DTC detecting condition	Repair order
IGN VOLTAGE [LOW]	B142A	Ignition voltage to the air bag diagnosis sensor unit is low.	Refer to SRC-105, "Diagnosis Procedure" .
IGN VOLTAGE [HIGH]		Ignition voltage to the air bag diagnosis sensor unit is high.	
CONTROL UNIT [UNIT FAIL]	B14XX	Air bag diagnosis sensor unit is malfunctioning.	Refer to SRC-108, "Diagnosis Procedure" .

SRS AIR BAG SYSTEM


< WIRING DIAGRAM >

WIRING DIAGRAM

SRS AIR BAG SYSTEM

Wiring Diagram

INFOID:000000008745381

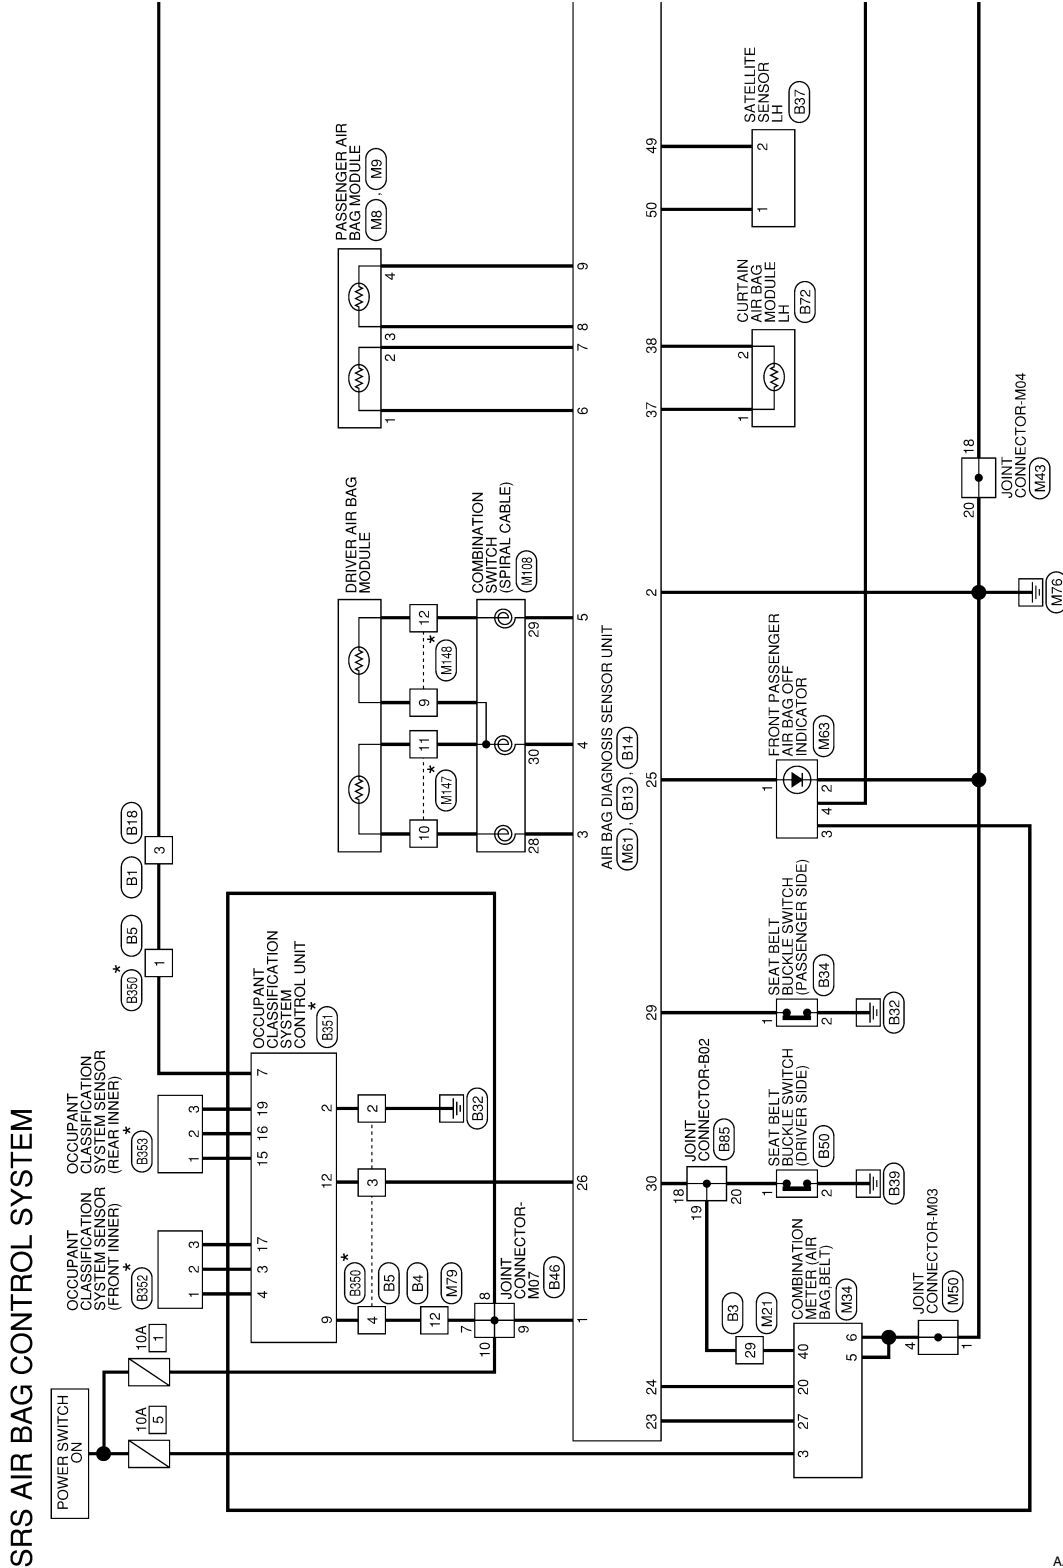


AAHWA0058GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SRC

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

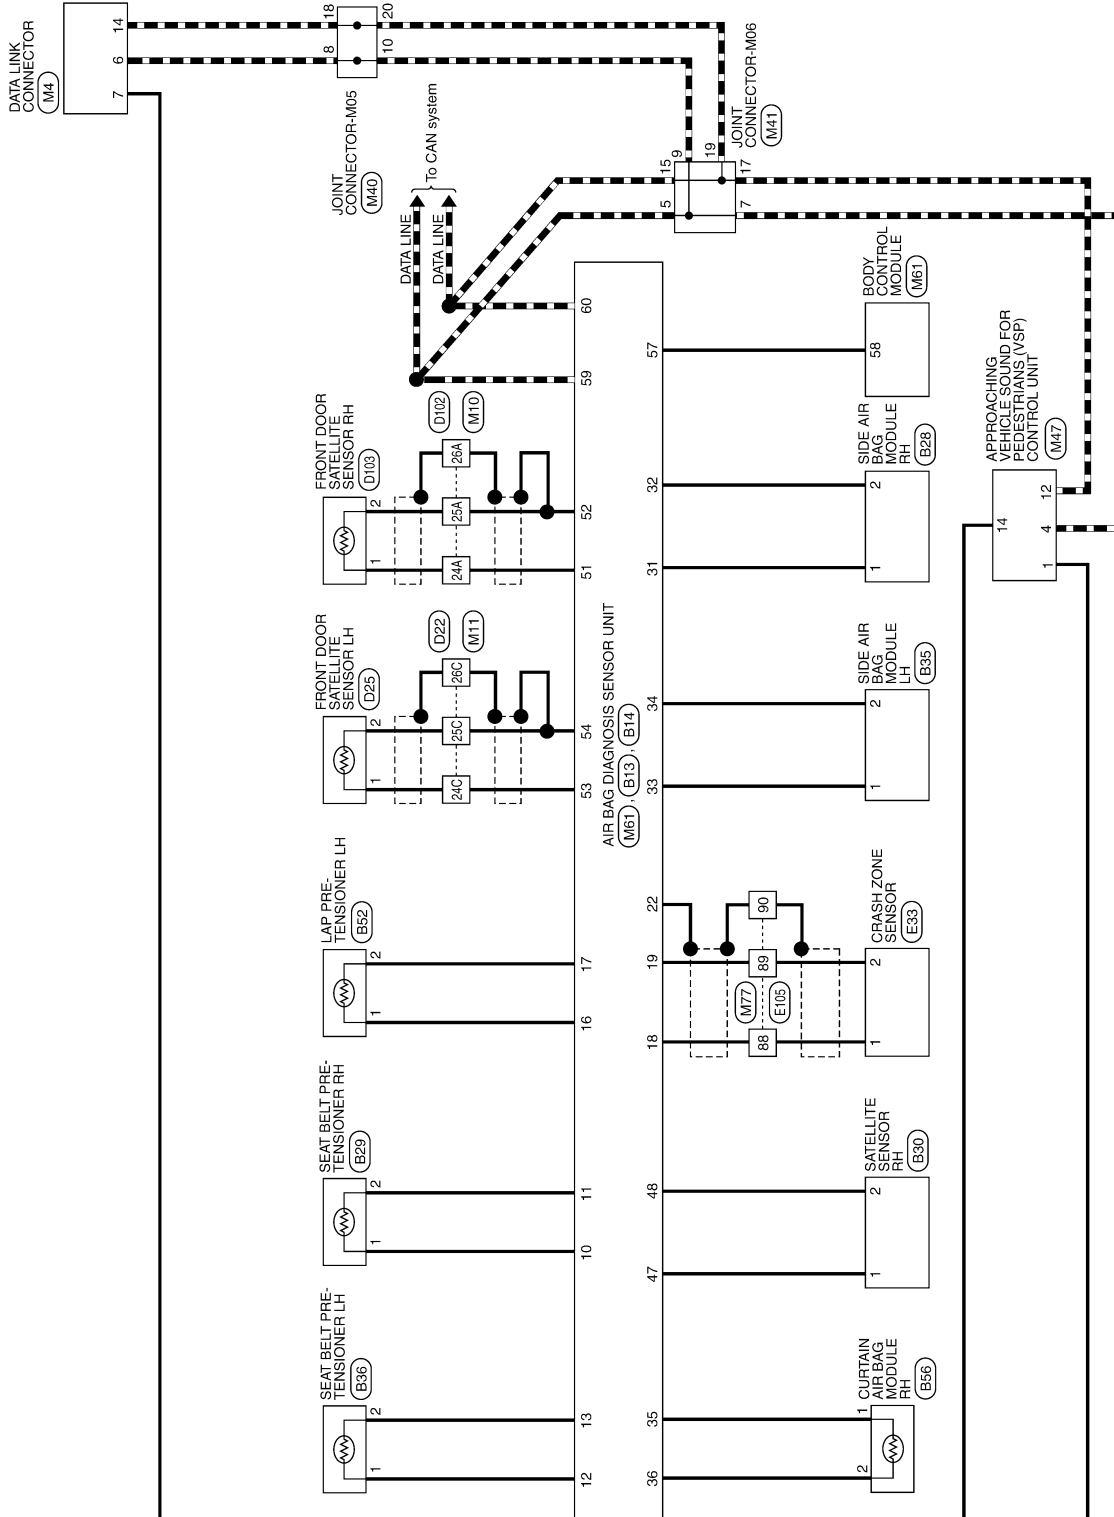


AAHWA0066GB

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

SRS AIR BAG CONTROL SYSTEM - CONNECTORS

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	LG	-
4	B	-
5	B	-
6	L	-
7	GR	-
8	G	-
9	-	-
10	-	-
11	SB	-
12	G	-
13	L	-
14	P	-
15	-	-
16	Y	-

Connector No.	M8
Connector Name	FRONT PASSENGER AIR BAG MODULE
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	Y	-

Connector No.	M9
Connector Name	FRONT PASSENGER AIR BAG MODULE
Connector Color	ORANGE



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	Y	-

A
B
C
D
E
F
G
SRC
I
J
K
L
M
N
O
P

AAHIA0202GB


SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
41A	-	-
42A	-	-
43A	V	-
44A	L	-
45A	LG	-
46A	BR	-
47A	W	-
48A	B	-
49A	R	-
50A	SHIELD	-
51A	-	-
52A	-	-
53A	-	-
54A	-	-
55A	-	-

Terminal No.	Color of Wire	Signal Name
14A	SB	-
15A	L	-
16A	-	-
17A	-	-
18A	-	-
19A	-	-
20A	-	-
21A	-	-
22A	-	-
23A	-	-
24A	Y	-
25A	BR	-
26A	SHIELD	-
27A	-	-
28A	-	-
29A	-	-
30A	-	-
31A	-	-
32A	-	-
33A	-	-
34A	-	-
35A	-	-
36A	B	-
37A	P	-
38A	Y	-
39A	LG	-
40A	-	-

Connector No.	M10
Connector Name	WIRE TO WIRE
Connector Color	WHITE

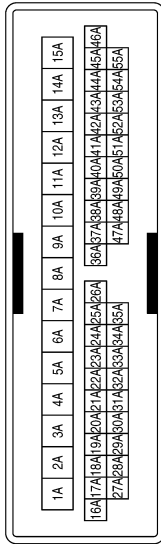


Terminal No.	Color of Wire	Signal Name
1A	L	- (WITH BOSE)
1A	R	- (WITHOUT BOSE)
2A	P	- (WITH BOSE)
2A	G	- (WITHOUT BOSE)
3A	SHIELD	-
4A	LG	-
5A	V	-
6A	-	-
7A	-	-
8A	-	-
9A	-	-
10A	BR	-
11A	Y	-
12A	B	-
13A	W	-

AAHIA0203GB

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Color	WHITE

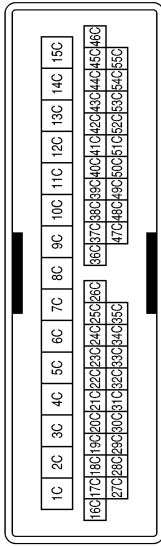

Terminal No.	Color of Wire	Signal Name
1C	R	-(WITH BOSE)
1C	P	-(WITHOUT BOSE)
2C	G	-(WITH BOSE)
2C	L	-(WITHOUT BOSE)
3C	SHIELD	-
4C	G	-
5C	V	-
6C	-	-
7C	BR	-
8C	SB	-
9C	LG	-
10C	Y	-
11C	W	-
12C	SB	-
13C	B	-
14C	L	-
15C	R	-
16C	-	-
17C	-	-
18C	-	-
19C	-	-
20C	-	-
21C	-	-
22C	-	-
23C	-	-
24C	G	-

Terminal No.	Color of Wire	Signal Name
25C	R	-
26C	SHIELD	-
27C	-	-
28C	-	-
29C	-	-
30C	-	-
31C	-	-
32C	-	-
33C	-	-
34C	-	-
35C	-	-
36C	LG	-
37C	R	-
38C	GR	-
39C	W	-
40C	P	-
41C	V	-
42C	V	-
43C	B	-
44C	L	-
45C	BR	-
46C	L	-
47C	Y	-
48C	BR	-
49C	B	-
50C	W	-
51C	R	-
52C	SHIELD	-
53C	-	-
54C	R	-
55C	LG	-

A
B
C
D
E
F
G
SRC
I
J
K
L
M
N
O
P


AAHIA0204GB

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
23	-	-
24	W	-
25	B	-
26	W	-
27	Y	-
28	-	-
29	W	-
30	L	-
31	L	-
32	P	-

Connector No.	M21
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	-	-
4	-	-
5	-	-
6	-	-
7	B	-
8	SHIELD	-
9	R	-
10	SB	-
11	P	-
12	V	-
13	GR	-
14	P	-
15	L	-
16	G	-
17	-	-
18	-	-
19	-	-
20	-	-
21	-	-
22	-	-

AAHIA0205GB

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >


Connector No.	M40
Connector Name	JOINT CONNECTOR-M05
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
3	BR	-
4	GR	-
5	L	-
6	L	-
7	L	-
8	L	-
9	L	-
10	L	-
11	LG	-
12	LG	-
13	L	-
14	R	-
15	P	-
16	P	-
17	P	-
18	P	-
19	P	-
20	P	-

Terminal No.	Color of Wire	Signal Name
21	-	-
22	GR	-
23	-	-
24	BG	-
25	SB	-
26	B	-
27	R	-
28	R	-
29	-	-
30	GR	-
31	-	-
32	W	-
33	G	-
34	L	-
35	-	-
36	-	-
37	-	-
38	V	-
39	LG	-
40	W	-

Connector No.	M34
Connector Name	COMBINATION METER
Connector Color	WHITE

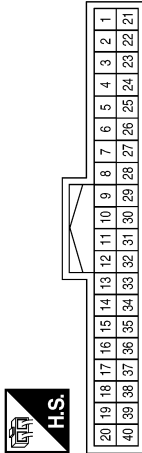

Terminal No.	Color of Wire	Signal Name
1	LG	-
2	Y	-
3	GR	-
4	BG	-
5	B	-
6	B	-
7	-	-
8	Y	-
9	BR	-
10	-	-
11	-	-
12	V	-
13	G	-
14	Y	-
15	BR	-
16	P	-
17	G	-
18	P	-
19	L	-
20	LG	-


AAHIA0206GB

A
B
C
D
E
F
G
SRC
I
J
K
L
M
N
O
P

SRS AIR BAG SYSTEM


< WIRING DIAGRAM >

Connector No.	M47
Connector Name	APPROACHING VEHICLE SOUND FOR PEDESTRIANS (VSP) CONTROL UNIT
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	GROUND
2	-	-
3	V	SIGNAL
4	L	CAN-H
5	-	-
6	-	-
7	L	(-)
8	Y	(+)
9	-	-
10	-	-
11	G	SUPPLY
12	P	CAN-L
13	R	SUPPLY
14	LG	SIGNAL
15	R	SPEAKER SIGNAL (-)
16	W	SPEAKER SIGNAL (+)

Connector No.	M43
Connector Name	JOINT CONNECTOR-M04
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	G	-
2	Y	-
3	W	-
4	W	-
5	W	-
6	Y	-
7	Y	-
8	G	-
9	W	-
10	W	-
11	Y	-
12	Y	-
13	-	-
14	-	-
15	-	-
16	-	-
17	-	-
18	B	-
19	B	-
20	B	-

Connector No.	M41
Connector Name	JOINT CONNECTOR-M06
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	SB	-
2	SB	-
3	SB	-
4	SB	-
5	L	-
6	L	-
7	L	-
8	L	-
9	L	-
10	L	-
11	LG	-
12	LG	-
13	LG	-
14	LG	-
15	P	-
16	P	-
17	P	-
18	P	-
19	P	-
20	P	-


AAHIA0207GB

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >


Terminal No.	Color of Wire	Signal Name
54	R	LH DOOR SATELITE SENSOR (-)
58	W	DEPLOYMENT INFORMATION OUTPUT
59	L	CAN-H
60	P	CAN-L

Connector No.	M61
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Color	YELLOW

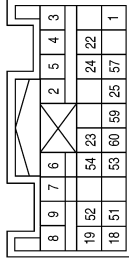

Terminal No.	Color of Wire	Signal Name
1	BR	IGN
2	B	GND
3	Y	DR1 (+)
4	Y	DR1 (-), DR2 (-)
5	Y	DR2 (+)
6	Y	AS1 (+)
7	Y	AS1 (-)
8	Y	AS2 (+)
9	Y	AS2 (-)
18	R	ECZS 1 (+)
19	G	ECZS 1 (-)
22	SHIELD	GND
23	R	AIRBAG W/L
24	LG	SEATBELT REMINDER / TELLTALE LAMP-B
25	R	TELLTALE LAMP-A
51	Y	RH DOOR SATELITE SENSOR (+)
52	BR	RH DOOR SATELITE SENSOR (-)
53	G	LH DOOR SATELITE SENSOR (+)

Connector No.	M50
Connector Name	JOINT CONNECTOR-CM03
Connector Color	PINK



Terminal No.	Color of Wire	Signal Name
1	B	-
2	B	-
3	B	-
4	B	-
5	B	-
6	B	-
7	B	-
8	B	-
9	B	-
10	B	-
11	G	-
12	G	-
13	G	-
14	G	-
15	G	-
16	L	-
17	L	-
18	L	-
19	L	-
20	L	-

AAHIA0208GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SRC

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

Connector No.	M63
Connector Name	FRONT PASSENGER AIR BAG OFF INDICATOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R	-
2	B	-
3	GR	-
4	LG	-

AAHIA0209GB


SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
60	Y	-
61	GR	-
62	W	-
63	BR	-
64	SHIELD	-
65	W	-
66	LG	-
67	R	-
68	G	-
69	BG	-
70	GR	-
71	R	-
72	R	-
73	B	-
74	W	-
76	L	-
80	W	-
81	LG	-
83	GR	-
84	L	-
85	Y	-
86	SB	-
88	R	-
89	G	-
90	SHIELD	-
91	Y	-
92	BR	-
93	W	-
94	P	-
95	L	-
96	P	-
97	G	-
98	V	-
99	LG	-
100	R	-

Terminal No.	Color of Wire	Signal Name
22	B	-
23	BG	-
24	B	-
25	W	-
26	G	-
27	B	-
28	B	-
29	R	-
31	R	-
32	W	-
33	GR	-
34	BR	-
35	BR	-
36	W	-
37	L	-
38	LG	-
39	SB	-
40	V	-
41	P	-
42	SB	-
43	G	-
44	LG	-
45	Y	-
46	R	-
47	W	-
48	L	-
49	G	-
50	L	-
51	SB	-
52	L	-
54	B	-
55	R	-
56	V	-
57	Y	-
58	L	-

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Color	WHITE

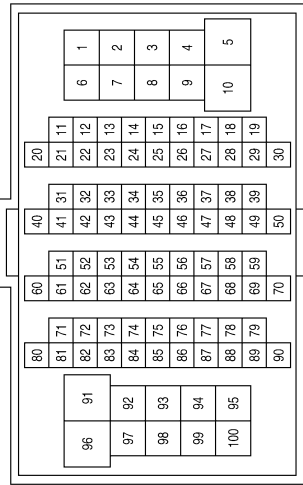

Terminal No.	Color of Wire	Signal Name
1	R	-
2	L	-
3	V	-
4	LG	-
6	P	-
7	GR	-
9	G	-
10	L	-
11	L	-
12	Y	-
13	V	-
14	R	-
15	G	-
16	W	-
17	R	-
18	G	-
19	W	-
20	GR	-
21	P	-

AAHIA0210GB

A
B
C
D
E
F
G
SRC
I
J
K
L
M
N
O
P

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >


Connector No.	M108
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
23	R	-
26	B	-
28	Y	-
29	Y	-
30	Y	-
34	G	-

Terminal No.	Color of Wire	Signal Name
21	V	-
22	SB	-
23	W	-
24	B	-
25	W	-
26	R	-
27	-	-
28	-	-
29	W	-
30	R	-
31	G	-
32	-	-

Connector No.	M79
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	P	-
3	SHIELD	-
4	G	-
5	R	-
6	SHIELD	-
7	L	-
8	GR	-
9	R	-
10	BR	-
11	L	-
12	BR	-
13	B	-
14	-	-
15	R	-
16	G	-
17	R	-
18	G	-
19	SHIELD	-
20	BR	-

AAHIA0211GB

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

Connector No.	E33
Connector Name	CRASH ZONE SENSOR
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	B	-
2	W	-

Connector No.	M148
Connector Name	DRIVER AIR BAG MODULE
Connector Color	ORANGE



Terminal No.	Color of Wire	Signal Name
9	R	DR2 (-)
12	G	DR2 (+)

Connector No.	M147
Connector Name	DRIVER AIR BAG MODULE
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
10	Y	DR1 (+)
11	L	DR1 (-)

A
B
C
D
E
F
G
SRC
I
J
K
L
M
N
O
P


AAHIA0231GB

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

57	Y	-
58	L	-
60	LG	-
61	GR	-
62	W	-
63	SB	-
64	SHIELD	-
65	W	-
66	G	-
67	V	-
68	R	-
69	B	-
70	BR	-
71	LG	-
72	R	-
73	B	-
74	O	-
76	L	-
77	Y	-
80	P	-
81	SB	-
83	GR	-
84	L	-
85	O	-
86	BR	-
88	B	-
89	W	-
90	SHIELD	-
91	Y	-
92	BR	-
93	O	-
94	R	-
95	V	-
96	P	-
97	G	-
98	W	-
99	O	-
100	SB	-

19	W/L	-
20	BR	-
21	R	-
22	B	-
23	LG	-
24	B	-
25	W	-
26	W	-
27	B	-
28	O/L	-
29	W	-
31	R	-
32	W	-
33	G	-
34	BR	-
35	V	-
36	O	-
37	L	-
38	SB	-
39	P	-
40	V	-
41	O	-
42	Y	-
43	BR	-
44	W	-
45	G	-
46	P	-
47	LG	-
47	R	-
48	B	-
49	L	-
50	G	-
51	W	-
52	O	-
54	B	-
55	R	-
56	Y	-

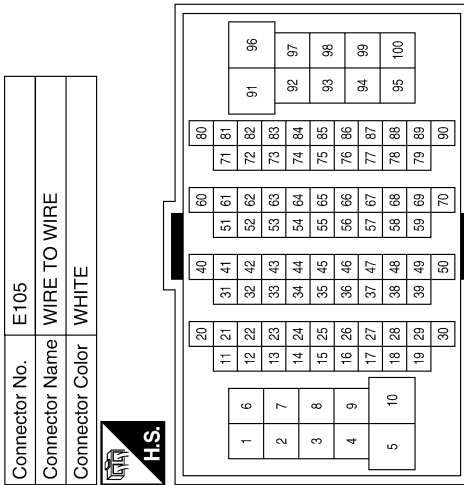

Terminal No.	Color of Wire	Signal Name
1	R	-
2	L	-
3	BW	-(WITHOUT FRONT FOG LAMPS)
3	R	-(WITH LED HEADLAMPS)
4	LG	-(WITH LED HEADLAMPS)
4	B/W	-(WITHOUT FRONT FOG LAMPS)
6	B/R	-
7	W	-
9	G	-
10	R	-
11	L	-
12	Y	-
13	W	-
14	R	-
15	G	-
16	G	-
17	R	-
18	O	-

AAHIA0232GB

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
19	-	-
20	-	-
21	-	-
22	-	-
23	-	-
24	R	-
25	W	-
26	LG	-
27	Y	-
28	-	-
29	R	-
30	GR	-
31	L	-
32	P	-

Connector No.	B3
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	-	-
4	-	-
5	-	-
6	-	-
7	B	-
8	SHIELD	-
9	B	-
10	SB	-
11	P	-
12	BR	-
13	GR	-
14	P	-
15	L	-
16	G	-
17	-	-
18	-	-

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

Terminal No.	Color of Wire	Signal Name
1	G	-
2	-	-
3	GR	-
4	L	-
5	G	-
6	R	-
7	BR	-
8	SB	-
9	GR	-
10	W	-
11	LG	-
12	P	-
13	V	-
14	Y	-
15	W	-
16	L	-


AAHIA0233GB

A
B
C
D
E
F
G
SRC
I
J
K
L
M
N
O
P

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >


Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	GR	-
2	B	-
3	R	-
4	BR	-

Terminal No.	Color of Wire	Signal Name
18	G	-
19	SHIELD	-
20	LG	-
21	V	-
22	GR	-
23	G	-
24	B	-
25	W	-
26	R	-
27	-	-
28	-	-
29	W	-
30	V	-
31	LG	-
32	SHIELD	-

Connector No.	B4
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	P	-
3	SHIELD	-
4	R	-
5	L	-
6	SHIELD	-
7	P	-
8	SB	-
9	R	-
10	BR	-
11	GR	-
12	BR	-
13	B	-
14	-	-
15	R	-
16	G	-
17	R	-

AAHIA0234GB

SRS AIR BAG SYSTEM


< WIRING DIAGRAM >

Connector No.	B18
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	-	-
2	-	-
3	-	-
4	P	-
5	P	-
6	BR	-
7	-	-
8	-	-
9	P	-
10	Y	-
11	B	-
12	W	-
13	R	-
14	L	-
15	LG	-
16	-	-
17	SHIELD	-
18	B	-
19	-	-
20	GR	-

Connector No.	B14
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Color	YELLOW

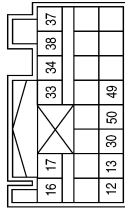

Terminal No.	Color of Wire	Signal Name
13	P	P-RH1 (+)
13	V	P-RH1 (-)
16	Y	SQUIB1-LH (+)
17	Y	SQUIB1-LH (-)
30	LG	LH SEAT BELT BUCKLE SWITCH (+)
33	Y	S-LH (+)
34	L	S-LH (-)
37	G	C-LH (+), HD-LH1 (+)
38	R	C-LH (-), HD-LH1 (-)
49	V	LH B-PILLAR SATELLITE SENSOR (+)
50	LG	LH B-PILLAR SATELLITE SENSOR (-)

Connector No.	B13
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Color	YELLOW

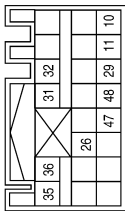

Terminal No.	Color of Wire	Signal Name
10	Y	P-RH1 (+)
11	LG	P-RH1 (-)
26	R	ODS INPUT
29	LG	SEAT BELT BUCKLE SWITCH (+)
31	Y	S-RH (+)
32	Y/R	S-RH (-)
35	Y	C-RH (+), HD-RH1 (+)
36	LG	C-RH (-), HD-RH1 (-)
47	G	RH B-PILLAR SATELLITE SENSOR (+)
48	R	RH B-PILLAR SATELLITE SENSOR (-)

AAHIA0235GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SRC

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

Connector No.	B30
Connector Name	RH SIDE AIR BAG (SATELLITE) SENSOR
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	G	-
2	R	-

Connector No.	B29
Connector Name	FRONT RH SEAT BELT PRE-TENSIONER
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	LG	-

Connector No.	B28
Connector Name	FRONT RH SIDE AIR BAG MOUDLE
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	Y/R	-

Connector No.	B36
Connector Name	FRONT LH SEAT BELT PRE-TENSIONER
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	P	-
2	V	-

Connector No.	B35
Connector Name	FRONT LH SIDE AIR BAG MOUDLE
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	L	-

Connector No.	B34
Connector Name	SEAT BELT BUCKLE SWITCH (PASSENGER SIDE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	B	-

AAHIA0236GB

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

Connector No.	B52
Connector Name	LAP SEAT BELT PRE-TENSIONER (DRIVER SIDE)
Connector Color	ORANGE



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	Y	-

Connector No.	B50
Connector Name	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	G	-
2	R	-

Connector No.	B37
Connector Name	LH SIDE AIR BAG (SATELLITE) SENSOR
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	V	-
2	LG	-

Connector No.	B72
Connector Name	LH SIDE FRONT CURTAIN AIR BAG MOUDLE
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	G	-
2	R	-

Connector No.	B56
Connector Name	RH SIDE FRONT CURTAIN AIR BAG MOUDLE
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	LG	-

AAHIA0237GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SRC

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

Connector No.	B351
Connector Name	OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	-	-
2	B	GND
3	LG	LOAD SENSOR FRONT INNER SIGNAL
4	R/B	LOAD SENSOR FRONT INNER GND
5	-	-
6	-	-
7	GR	K-LINE
8	-	-
9	W	IGN
10	-	-
11	-	-
12	BR/W	ACU COMM
13	-	-
14	-	-
15	W/L	LOAD SENSOR REAR INNER GND
16	SB	LOAD SENSOR REAR INNER SIGNAL
17	R	LOAD SENSOR FRONT INNER VCC
18	-	-
19	Y	LOAD SENSOR REAR INNER VCC
20	-	-

Connector No.	B350
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	GR	-
2	B	-
3	BR/W	-
4	W	-

Connector No.	B85
Connector Name	JOINT CONNECTOR-B02
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	B	-
2	-	-
3	B	-
4	B	-
5	-	-
6	-	-
7	L	-
8	W	-
9	V	-
10	V	-
11	SHIELD	-
12	SHIELD	-
13	B	-
14	B	-
15	G	-
16	G	-
17	G	-
18	LG	-
19	R	-
20	R	-

AAHIA0238GB

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

Connector No.	B353
Connector Name	OCCUPANT CLASSIFICATION SYSTEM SENSOR (REAR INNER)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W/B	-
2	SB	-
3	Y	-

Connector No.	B352
Connector Name	OCCUPANT CLASSIFICATION SYSTEM SENSOR (FRONT INNER)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R/B	-
2	LG	-
3	R	-

SRC

AAHIA0252GB


SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
33C	-	-
34C	-	-
35C	-	-
36C	LG	-
37C	R	-
38C	L	-
39C	G	-
40C	P	-
41C	-	-
42C	P	-
43C	GR	-
44C	L	-
45C	BR	-
46C	L	-
47C	Y	-
48C	BR	-
49C	B	-
50C	W	-
51C	R	-
52C	SHIELD	-
53C	-	-
54C	V	-
55C	LG	-

Terminal No.	Color of Wire	Signal Name
9C	LG	-
10C	Y	-
11C	W	-
12C	SB	-
13C	B	-
14C	V	-
15C	R	-
16C	-	-
17C	-	-
18C	-	-
19C	-	-
20C	-	-
21C	-	-
22C	-	-
23C	-	-
24C	G	-
25C	R	-
26C	SHIELD	-
27C	-	-
28C	-	-
29C	-	-
30C	-	-
31C	-	-
32C	-	-

Connector No.	D22
Connector Name	WIRE TO WIRE
Connector Color	WHITE

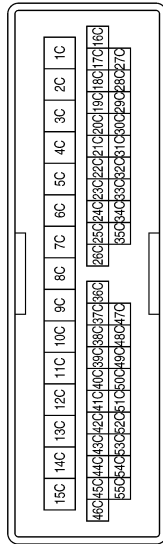

Terminal No.	Color of Wire	Signal Name
1C	R	- (WITH BOSE)
1C	L	- (WITHOUT BOSE)
2C	G	- (WITH BOSE)
2C	V	- (WITHOUT BOSE)
3C	SHIELD	-
4C	SB	-
5C	V	-
6C	-	-
7C	P	-
8C	BR	-

AAHIA0253GB

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

A
B
C
D
E
F
G
SRC
I
J
K
L
M
N
O
P

Connector No.	D25
Connector Name	FRONT DOOR SATELLITE SENSOR LH
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	G	-
2	R	-

AAHIA0254GB


SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
33A	-	-
34A	-	-
35A	-	-
36A	B	-
37A	P	-
38A	Y	-
39A	LG	-
40A	-	-
41A	-	-
42A	-	-
43A	V	-
44A	V	-
45A	W	-
46A	BG	-
47A	W	-
48A	B	-
49A	R	-
50A	SHIELD	-
51A	-	-
52A	-	-
53A	-	-
54A	-	-
55A	-	-

Terminal No.	Color of Wire	Signal Name
9A	-	-
10A	BR	-
11A	Y	-
12A	B	-
13A	W	-
14A	SB	-
15A	R	-
16A	-	-
17A	-	-
18A	-	-
19A	-	-
20A	-	-
21A	-	-
22A	-	-
23A	-	-
24A	Y	-
25A	BR	-
26A	SHIELD	-
27A	-	-
28A	-	-
29A	-	-
30A	-	-
31A	-	-
32A	-	-

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	WHITE

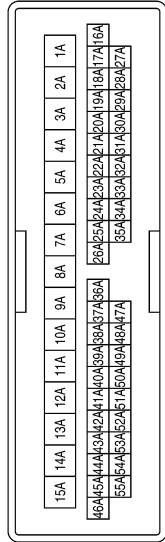

Terminal No.	Color of Wire	Signal Name
1A	L	- (WITH BOSE)
1A	BR	- (WITHOUT BOSE)
2A	P	- (WITH BOSE)
2A	R	- (WITHOUT BOSE)
3A	SHIELD	-
4A	Y	-
5A	V	-
6A	-	-
7A	-	-
8A	-	-

Terminal No.	Color of Wire	Signal Name
1	Y	-
2	BR	-

Connector No.	D103
Connector Name	FRONT DOOR SATELLITE SENSOR RH
Connector Color	YELLOW



AAHIA0255GB

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000009344715

OVERALL SEQUENCE

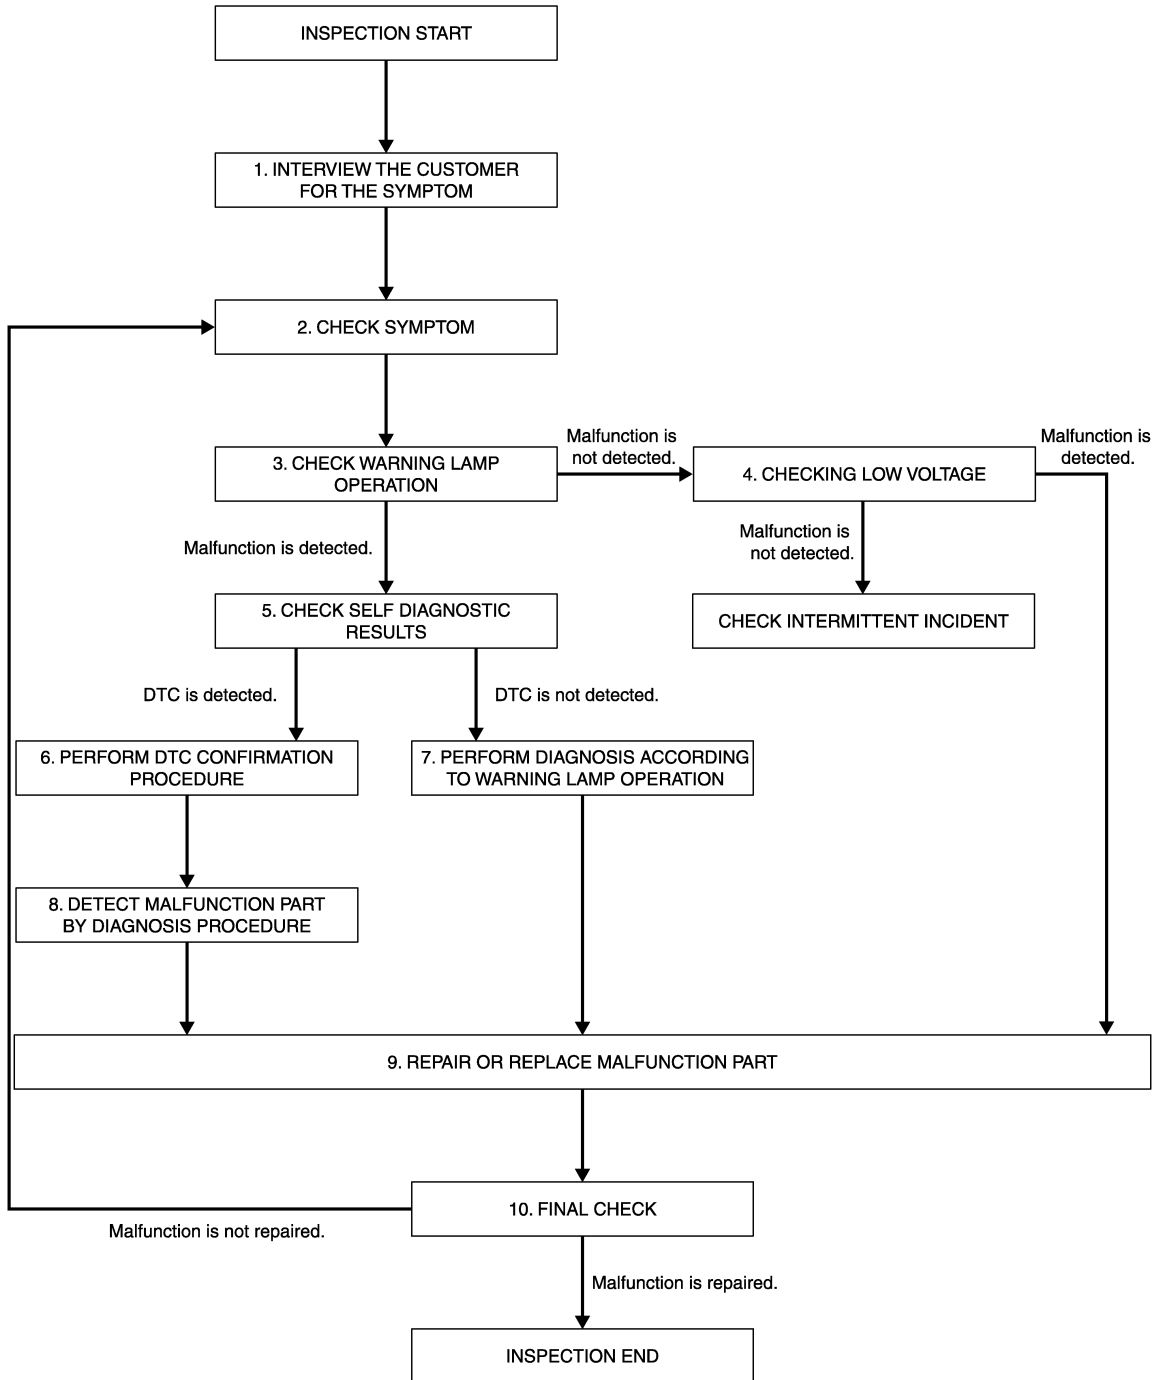

SRC

JMHIA1324GB

DETAILED FLOW

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

1. INTERVIEW THE CUSTOMER FOR THE SYMPTOM

Interview the customer for the symptom (the condition and the environment when the incident/malfunction occurs).

>> GO TO 2.

2. CHECK SYMPTOM

Check the symptom from the customer information.

>> GO TO 3.

3. CHECK WARNING LAMP OPERATION

Check air bag warning lamp operation in the user mode. Refer to [SRC-11, "On Board Diagnosis Function"](#).

Are any malfunction detected?

YES >> GO TO 5.

NO >> GO TO 4.

4. CHECK LOW VOLTAGE

Check low voltage with CONSULT. Refer to [SRC-15, "CONSULT Function"](#).

Are any malfunction detected?

YES >> GO TO 9.

NO >> Check intermittent incident. Refer to [GI-53, "Intermittent Incident"](#).

5. CHECK SELF DIAGNOSTIC RESULTS

Check self diagnostic result with CONSULT or diagnosis mode.

If it is impossible to switch to diagnosis mode, follow the same procedure that DTC is not detected.

NOTE:

Perform the following procedure if DTC is detected.

- Record DTC (Print them out with CONSULT.)
- Erase self diagnostic result.
- Study the relationship between the malfunction that DTC or air bag warning lamp indicates and the symptom that the customer describes.
- Check related service bulletins for information.

Is DTC detected?

YES >> GO TO 6.

NO >> GO TO 7.

6. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the DTC.

>> GO TO 8.

7. PERFORM DIAGNOSIS ACCORDING TO WARNING LAMP OPERATION

1. Check air bag warning lamp operation in the user mode. Refer to [SRC-11, "On Board Diagnosis Function"](#).
2. Perform Diagnosis Procedure for the air bag warning lamp operation. Refer to [SRC-11, "On Board Diagnosis Function"](#) (USER MODE).

>> GO TO 9.

8. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the DTC.

>> GO TO 9.

9. REPAIR OR REPLACE THE MALFUNCTION PART

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

Repair or replace the malfunctioning part.

>> GO TO 10.

10.FINAL CHECK

Check self diagnostic result and air bag warning lamp operation in the user mode.

Is the malfunction repaired?

YES >> INSPECTION END
NO >> GO TO 2.

A

B

C

D

E

F

G

SRC

I

J

K

L

M

N

O

P

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000009344507

WARNING:

Always perform zero point reset using CONSULT when removing and installing the front passenger seat or servicing the occupant classification system (OCS). If zero point reset is not performed, the OCS may not operate normally, which may increase the risk of serious injury in a collision.

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000009344508

WORK PROCEDURE WHEN REPLACING OCS CONTROL UNIT

1.PERFORM ZERO POINT RESET

Perform zero point reset. Refer to [SRC-50, "ZERO POINT RESET : Special Repair Requirement"](#).

>> Inspection End.

ZERO POINT RESET

ZERO POINT RESET : Description

INFOID:000000009344509

Zero point reset is an initializing procedure for the OCS (weight) sensors that must be performed using CONSULT when removing and installing passenger seat or servicing the OCS system. If zero point reset is not performed, the initialization is incomplete and OCS may not operate normally.

NOTE:

- When reinstalling the passenger seat, the initial value for the OCS sensors may change, and the OCS may not operate normally.
- When zero point reset is performed after removal and installation of passenger seat, CONSULT displays "complete".

ZERO POINT RESET : Special Repair Requirement

INFOID:000000009344510

1.PERFORM ZERO POINT RESET

-
1. Perform preliminary checks:

NOTE:

- Level the vehicle
- Minimize vibrations near the vehicle
- Remove any objects on passenger seat
- Do not touch the vehicle during zero point reset

2. Select START on ZERO POINT RESET from, WORK SUPPORT of "OCCUPANT DETECTION".
3. "Zero point reset" starts.

>> GO TO 2.

2.CONFIRM RESET

-
1. Check that "Complete" is displayed on "Zero point reset status".

CAUTION:

- "Complete" may be displayed if the seat has been reinstalled, or "zero point reset" has already been performed.
- "Incomplete" may be displayed if a new seat is installed.
- Air bag warning lamp blinks in user mode if zero point reset is "incomplete".

Is zero point reset status "complete"?

- YES >> Print out "ZERO POINT RESET CURRENT STATUS" screen. Inspection end.
NO >> Recheck the preliminary check items and perform zero point reset again.

INTERMITTENT INCIDENT

< BASIC INSPECTION >

INTERMITTENT INCIDENT

Inspection Procedure

INFOID:000000009344511

INTERMITTENT TROUBLE

An intermittent incident may have occurred in the past but is not being detected currently. This DTC will not be detected on SELF-DIAG [CURRENT], but may be viewed on SELF-DIAG [PAST] if the DTC has not been erased.

- A
- B
- C
- D
- E
- F
- G
- SRC**
- I
- J
- K
- L
- M
- N
- O
- P

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description

INFOID:000000008745383

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H-line, CAN L-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-36, "CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart"](#).

DTC Logic

INFOID:000000008745384

DTC DETECTION LOGIC

CONSULT name	DTC	DTC detection condition	Possible cause
CAN COMM CIRCUIT	U1000	When air bag diagnosis sensor unit cannot communicate CAN communication signal continuously for 2 seconds or more.	CAN communication system

Diagnosis Procedure

INFOID:000000008745385

1. PERFORM SELF DIAGNOSTIC

1. Turn power switch ON and wait for 2 seconds or more.
2. Check "SELF-DIAG [CAN]" in "special function" of "AIR BAG" using CONSULT.

Is DTC "U1000" displayed?

- YES >> Refer to [LAN-16, "Trouble Diagnosis Flow Chart"](#).
NO >> Refer to [GI-53, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

Description

INFOID:000000009327282

Air bag diagnosis sensor performs self-tests on key ON. If CAN communication failure within control unit is detected, DTC is set.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000008745386

DTC DETECTION LOGIC

CONSULT name	DTC	DTC detection condition	Possible cause
CONTROL UNIT (CAN)	U1010	Air bag diagnosis sensor unit detected internal CAN communication circuit malfunction.	Air bag diagnosis sensor unit

DTC CONFIRMATION PROCEDURE (With CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-53, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2.ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-53, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-53, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:000000008745387

1.HARNES CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform one of the following repairs:

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

- Visible damage: Replace the harness.
- Loose terminal: Secure the terminal.
- Poor connection: Secure the connection.

2.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 3.
NO >> Refer to [GI-53. "Intermittent Incident"](#).

3.WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace the harness.

4.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 5.
NO >> Refer to [GI-53. "Intermittent Incident"](#).

5.AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 6.
NO >> Clear DTC. Inspection End.

6.RELATED HARNESS

Replace the related harness.

>> **END**

B0001, B0002 DRIVER AIRBAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

B0001, B0002 DRIVER AIRBAG MODULE

Description

INFOID:000000009326208

DTC B0001 DRIVER AIR BAG MODULE

The driver air bag module is dual stage and wired to the air bag diagnosis sensor unit through the spiral cable. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the driver air bag module including the spiral cable.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009326209

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
DRIVER AIRBAG MODULE CIRCUIT [OPEN]	B0001	Driver air bag module circuit (DR1) is open (including the spiral cable).	Refer to SRC-56, "Diagnosis Procedure" .
DRIVER AIRBAG MODULE CIRCUIT [VB-SHORT]		Driver air bag module circuit (DR1) is shorted to a power supply circuit (including the spiral cable).	
DRIVER AIRBAG MODULE CIRCUIT [GND-SHORT]		Driver air bag module circuit (DR1) is shorted to ground (including the spiral cable).	
DRIVER AIRBAG MODULE CIRCUIT [SHORT]		Driver air bag module circuits (DR1) are shorted to each other (including the spiral cable).	
DRIVER AIRBAG MODULE 2ND CIRCUIT [OPEN]	B0002	Driver air bag module circuit (DR2) is open (including the spiral cable).	
DRIVER AIRBAG MODULE 2ND CIRCUIT [VB-SHORT]		Driver air bag module circuit (DR2) is shorted to a power supply circuit (including the spiral cable).	
DRIVER AIRBAG MODULE 2ND CIRCUIT [GND-SHORT]		Driver air bag module circuit (DR2) is shorted to ground (including the spiral cable).	
DRIVER AIRBAG MODULE 2ND CIRCUIT [SHORT]		Driver air bag module circuits (DR2) are shorted to each other (including the spiral cable).	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-56, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

B0001, B0002 DRIVER AIRBAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

Can the DTC be erased?

- YES >> Inspection End.
NO >> Refer to [SRC-56, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-56, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009326210

Recheck SRS after each replacement.

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 2
NO >> Perform one of the following repairs:
 - Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 3
NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 4
NO >> Replace the harness.

4. CHECK SPIRAL CABLE CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect driver air bag module harness connectors and spiral cable harness connector.
3. Check continuity between driver air bag module harness connector and spiral cable connector.

B0001, B0002 DRIVER AIRBAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

Driver air bag module		Spiral cable		Continuity
Connector	Terminal	Connector	Terminal	
M147	10	M108	28	Yes
	11		30	
M148	12		29	
	9		30	

4. Check continuity between driver air bag module harness connector and ground.

Driver air bag module		Ground	Continuity
Connector	Terminal		
M147	10	Ground	No
	11		
M148	12		
	9		

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace the spiral cable. Refer to [SR-23. "Removal and Installation"](#).

5.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Refer to [GI-53. "Intermittent Incident"](#).

6.AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7.FRONT DRIVER AIR BAG MODULE

1. Replace the Driver air bag module. Refer to [SR-20. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 8.

NO >> Clear DTC. Inspection End.

8.RELATED HARNESS

Replace the related harness.

>> END

B0010, B0011 PASSENGER AIRBAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

B0010, B0011 PASSENGER AIRBAG MODULE

Description

INFOID:000000009326205

DTC B0010 PASSENGER AIR BAG MODULE

The passenger air bag module is dual stage and wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the passenger air bag module.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009326206

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
ASSIST AIRBAG MODULE CIRCUIT [OPEN]	B0010	Front passenger air bag module circuit (AS1) is open.	Refer to SRC-59, "Diagnosis Procedure" .
ASSIST AIRBAG MODULE CIRCUIT [VB-SHORT]		Front passenger air bag module circuit (AS1) is shorted to a power supply circuit.	
ASSIST AIRBAG MODULE CIRCUIT [GND-SHORT]		Front passenger air bag module circuit (AS1) is shorted to ground.	
ASSIST AIRBAG MODULE CIRCUIT [SHORT]		Front passenger air bag module circuits (AS1) are shorted to each other.	
ASSIST AIRBAG MODULE 2ND CIRCUIT [OPEN]	B0011	Front passenger air bag module circuit (AS2) is open.	
ASSIST AIRBAG MODULE 2ND CIRCUIT [VB-SHORT]		Front passenger air bag module circuit (AS2) is shorted to a power supply circuit.	
ASSIST AIRBAG MODULE 2ND CIRCUIT [GND-SHORT]		Front passenger air bag module circuit (AS2) is shorted to ground.	
ASSIST AIRBAG MODULE 2ND CIRCUIT [SHORT]		Front passenger air bag module circuits (AS2) are shorted to each other.	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-59, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-59, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.

B0010, B0011 PASSENGER AIRBAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-59, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009326207

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

- NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. FRONT PASSENGER AIR BAG MODULE

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

B0010, B0011 PASSENGER AIRBAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

1. Replace the front passenger air bag module. Refer to [SR-26. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7.RELATED HARNESS

Replace the related harness.

>> **END**

B0020 SIDE AIRBAG MODULE LH

< DTC/CIRCUIT DIAGNOSIS >

B0020 SIDE AIRBAG MODULE LH

Description

INFOID:000000009326220

DTC B0020 FRONT LH SIDE AIR BAG MODULE

The front LH side air bag module is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the front LH side air bag module.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009326221

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
SIDE AIRBAG MODULE LH CIRCUIT [OPEN]	B0020	Front LH side air bag module circuit is open.	Refer to SRC-61, "Diagnosis Procedure" .
SIDE AIRBAG MODULE LH CIRCUIT [VB-SHORT]		Front LH side air bag module circuit is shorted to a power supply circuit.	
SIDE AIRBAG MODULE LH CIRCUIT [GND-SHORT]		Front LH side air bag module circuit is shorted to ground.	
SIDE AIRBAG MODULE LH CIRCUIT [SHORT]		Front LH side air bag module circuits are shorted to each other.	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

- YES (Current DTC)>>Refer to [SRC-61, "Diagnosis Procedure"](#).
- YES (Past DTC)>>GO TO 2.
- NO >> Inspection End.

2.ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

- YES >> Inspection End.
- NO >> Refer to [SRC-61, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-61, "Diagnosis Procedure"](#).
- NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009326222

1.HARNES CONNECTOR

B0020 SIDE AIRBAG MODULE LH

< DTC/CIRCUIT DIAGNOSIS >

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

- NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53. "Intermittent Incident"](#).

3.WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53. "Intermittent Incident"](#).

5.AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6.SIDE AIR BAG MODULE LH

1. Replace the side air bag module LH.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7.RELATED HARNESS

Replace the related harness.

B0020 SIDE AIRBAG MODULE LH

< DTC/CIRCUIT DIAGNOSIS >

>> END

A

B

C

D

E

F

G

SRC

I

J

K

L

M

N

O

P

B0021 SIDE CURTAIN AIR BAG MODULE LH

< DTC/CIRCUIT DIAGNOSIS >

B0021 SIDE CURTAIN AIR BAG MODULE LH

Description

INFOID:000000009326226

DTC B0021 LH SIDE CURTAIN AIR BAG MODULE

The LH side curtain air bag module is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the LH side curtain air bag module.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009326227

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
CURTAIN AIRBAG MODULE LH CIRCUIT [OPEN]	B0021	LH side curtain air bag module circuit is open.	Refer to SRC-64, "Diagnosis Procedure" .
CURTAIN AIRBAG MODULE LH CIRCUIT [VB-SHORT]		LH side curtain air bag module circuit is shorted to a power supply circuit.	
CURTAIN AIRBAG MODULE LH CIRCUIT [GND-SHORT]		LH side curtain air bag module circuit is shorted to ground.	
CURTAIN AIRBAG MODULE LH CIRCUIT [SHORT]		LH side curtain air bag module circuits are shorted to each other.	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

- YES (Current DTC)>>Refer to [SRC-64, "Diagnosis Procedure"](#).
- YES (Past DTC)>>GO TO 2.
- NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

- YES >> Inspection End.
- NO >> Refer to [SRC-64, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-64, "Diagnosis Procedure"](#).
- NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009326228

1. HARNESS CONNECTOR

B0021 SIDE CURTAIN AIR BAG MODULE LH

< DTC/CIRCUIT DIAGNOSIS >

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

A

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

B

Is the inspection result normal?

C

YES >> GO TO 2.

- NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

D

2.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

E

Is DTC still current?

F

YES >> GO TO 3.

NO >> Refer to [GI-53. "Intermittent Incident"](#).

G

3.WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

SRC

Is the inspection result normal?

I

YES >> GO TO 4.

NO >> Replace the harness.

4.CONFIRM DTC

J

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

K

Is DTC still current?

L

YES >> GO TO 5.

NO >> Refer to [GI-53. "Intermittent Incident"](#).

5.AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

M

Is DTC still current?

N

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6.SIDE CURTAIN AIR BAG MODULE LH

O

1. Replace the side curtain air bag module LH. Refer to [SR-29. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

P

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7.RELATED HARNESS

Replace the related harness.

B0021 SIDE CURTAIN AIR BAG MODULE LH

< DTC/CIRCUIT DIAGNOSIS >

>> END

B0028 SIDE AIRBAG MODULE RH

< DTC/CIRCUIT DIAGNOSIS >

B0028 SIDE AIRBAG MODULE RH

Description

INFOID:000000009326217

DTC B0028 FRONT RH SIDE AIR BAG MODULE

The front RH side air bag module is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the front RH side air bag module.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009326218

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
SIDE AIRBAG MODULE RH CIRCUIT [OPEN]	B0028	Front RH side air bag module circuit is open.	Refer to SRC-67, "Diagnosis Procedure" .
SIDE AIRBAG MODULE RH CIRCUIT [VB-SHORT]		Front RH side air bag module circuit is shorted to a power supply circuit.	
SIDE AIRBAG MODULE RH CIRCUIT [GND-SHORT]		Front RH side air bag module circuit is shorted to ground.	
SIDE AIRBAG MODULE RH CIRCUIT [SHORT]		Front RH side air bag module circuits are shorted to each other.	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

- YES (Current DTC)>>Refer to [SRC-67, "Diagnosis Procedure"](#).
- YES (Past DTC)>>GO TO 2.
- NO >> Inspection End.

2.ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

- YES >> Inspection End.
- NO >> Refer to [SRC-67, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-67, "Diagnosis Procedure"](#).
- NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009326219

1.HARNES CONNECTOR

B0028 SIDE AIRBAG MODULE RH

< DTC/CIRCUIT DIAGNOSIS >

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

- NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53. "Intermittent Incident"](#).

3.WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53. "Intermittent Incident"](#).

5.AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6.SIDE AIR BAG MODULE RH

1. Replace the side air bag module RH.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7.RELATED HARNESS

Replace the related harness.

B0028 SIDE AIRBAG MODULE RH

< DTC/CIRCUIT DIAGNOSIS >

>> END

A

B

C

D

E

F

G

SRC

I

J

K

L

M

N

O

P

B0029 SIDE CURTAIN AIR BAG MODULE RH

< DTC/CIRCUIT DIAGNOSIS >

B0029 SIDE CURTAIN AIR BAG MODULE RH

Description

INFOID:000000009326223

DTC B0029 RH SIDE CURTAIN AIR BAG MODULE

The RH side curtain air bag module is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the RH side curtain air bag module.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009326224

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
CURTAIN AIRBAG MODULE RH CIRCUIT [OPEN]	B0029	RH side curtain air bag module circuit is open.	Refer to SRC-70, "Diagnosis Procedure" .
CURTAIN AIRBAG MODULE RH CIRCUIT [VB-SHORT]		RH side curtain air bag module circuit is shorted to a power supply circuit.	
CURTAIN AIRBAG MODULE RH CIRCUIT [GND-SHORT]		RH side curtain air bag module circuit is shorted to ground.	
CURTAIN AIRBAG MODULE RH CIRCUIT [SHORT]		RH side curtain air bag module circuits are shorted to each other.	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

- YES (Current DTC)>>Refer to [SRC-70, "Diagnosis Procedure"](#).
- YES (Past DTC)>>GO TO 2.
- NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

- YES >> Inspection End.
- NO >> Refer to [SRC-70, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-70, "Diagnosis Procedure"](#).
- NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009326225

1. HARNESS CONNECTOR

B0029 SIDE CURTAIN AIR BAG MODULE RH

< DTC/CIRCUIT DIAGNOSIS >

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

A

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

B

Is the inspection result normal?

C

YES >> GO TO 2.

- NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

D

2.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

E

Is DTC still current?

F

YES >> GO TO 3.

NO >> Refer to [GI-53. "Intermittent Incident"](#).

G

3.WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

SRC

Is the inspection result normal?

I

YES >> GO TO 4.

NO >> Replace the harness.

4.CONFIRM DTC

J

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

K

Is DTC still current?

L

YES >> GO TO 5.

NO >> Refer to [GI-53. "Intermittent Incident"](#).

5.AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

M

Is DTC still current?

N

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6.SIDE CURTAIN AIR BAG MODULE RH

O

1. Replace the side curtain air bag module RH. Refer to [SR-29. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

P

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7.RELATED HARNESS

Replace the related harness.

B0029 SIDE CURTAIN AIR BAG MODULE RH

< DTC/CIRCUIT DIAGNOSIS >

>> **END**

B0091 FRONT SIDE AIR BAG SATELLITE SENSOR LH

< DTC/CIRCUIT DIAGNOSIS >

B0091 FRONT SIDE AIR BAG SATELLITE SENSOR LH

Description

INFOID:000000009327284

DTC B0091 FRONT SATELLITE SENSOR LH

The front side air bag satellite sensor LH is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor the front side air bag satellite sensor LH for internal failures and its circuits for communication errors.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009326252

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
B-PILLAR SATELLITE SENSOR LH [SENSOR FAIL]	B0091	Front side air bag satellite sensor LH has malfunctioned.	Refer to SRC-74, "Diagnosis Procedure" .
B-PILLAR SATELLITE SENSOR LH [COMM FAIL]		Front side air bag satellite sensor LH communication error.	
B-PILLAR SATELLITE SENSOR LH [DISCONNECT]		Front side air bag satellite sensor LH is disconnected.	
B-PILLAR SATELLITE SENSOR LH [UNMATCH]		Front side air bag satellite sensor LH is out of specification.	
B-PILLAR SATELLITE SENSOR LH [GND-SHORT]		Front side air bag satellite sensor LH circuit is shorted to ground.	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-74, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-74, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-74, "Diagnosis Procedure"](#).

NO >> Inspection End.

B0091 FRONT SIDE AIR BAG SATELLITE SENSOR LH

< DTC/CIRCUIT DIAGNOSIS >

INFOID:000000009326253

Diagnosis Procedure

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

- NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. SATELLITE SENSOR LH

1. Replace the satellite sensor LH. Refer to [SR-35, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

B0091 FRONT SIDE AIR BAG SATELLITE SENSOR LH

< DTC/CIRCUIT DIAGNOSIS >

7.RELATED HARNESS

Replace the related harness.

>> END

A

B

C

D

E

F

G

SRC

I

J

K

L

M

N

O

P

B0093 FRONT DOOR SATELLITE SENSOR LH

< DTC/CIRCUIT DIAGNOSIS >

B0093 FRONT DOOR SATELLITE SENSOR LH

Description

INFOID:000000009326247

DTC B0093 FRONT DOOR SATELLITE SENSOR LH

The front door satellite sensor RH is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor the front door satellite sensor RH for internal failures and its circuits for communication errors.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009326248

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
DOOR SATELLITE SENSOR LH [SENSOR FAIL]	B0093	Front door satellite sensor LH has malfunctioned.	Refer to SRC-77, "Diagnosis Procedure" .
DOOR SATELLITE SENSOR LH [COMM FAIL]		Front door satellite sensor LH communication error.	
DOOR SATELLITE SENSOR LH [DISCONNECT]		Front door satellite sensor LH is disconnected.	
DOOR SATELLITE SENSOR LH [UNMATCH]		Front door satellite sensor LH is out of specification.	
DOOR SATELLITE SENSOR LH [GND-SHORT]		Front door satellite sensor LH circuit is shorted to ground.	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-77, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-77, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-77, "Diagnosis Procedure"](#).

NO >> Inspection End.

B0093 FRONT DOOR SATELLITE SENSOR LH

< DTC/CIRCUIT DIAGNOSIS >

Diagnosis Procedure

INFOID:00000009326249

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform one of the following repairs:

- Visible damage: Replace the harness.
- Loose terminal: Secure the terminal.
- Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. FRONT DOOR SATELLITE SENSOR LH

1. Replace the front door satellite sensor LH. Refer to [SR-35, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

A

B

C

D

E

F

G

SRC

I

J

K

L

M

N

O

P

B0093 FRONT DOOR SATELLITE SENSOR LH

< DTC/CIRCUIT DIAGNOSIS >

7.RELATED HARNESS

Replace the related harness.

>> **END**

B0094 CRASH ZONE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

B0094 CRASH ZONE SENSOR

Description

INFOID:000000009326202

DTC B0094 CRASH ZONE SENSOR

The crash zone sensor is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the crash zone sensor.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009326203

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
CRASH ZONE SENSOR [SENSOR FAIL]	B0094	Crash zone sensor has malfunctioned.	Refer to SRC-80, "Diagnosis Procedure" .
CRASH ZONE SENSOR [COMM FAIL]		Crash zone sensor communication error.	
CRASH ZONE SENSOR [DISCONNECT]		Crash zone sensor is disconnected.	
CRASH ZONE SENSOR [UNMATCH]		Crash zone sensor is out of specification.	
CRASH ZONE SENSOR [GND-SHORT]		Crash zone sensor circuit is shorted to ground.	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-80, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-80, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-80, "Diagnosis Procedure"](#).

NO >> Inspection End.

B0094 CRASH ZONE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Diagnosis Procedure

INFOID:000000009326204

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

- NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. CRASH ZONE SENSOR

1. Replace the crash zone sensor. Refer to [SR-33, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

B0094 CRASH ZONE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

7.RELATED HARNESS

Replace the related harness.

>> END

A

B

C

D

E

F

G

SRC

I

J

K

L

M

N

O

P

B0096 FRONT SIDE AIR BAG SATELLITE SENSOR RH

< DTC/CIRCUIT DIAGNOSIS >

B0096 FRONT SIDE AIR BAG SATELLITE SENSOR RH

Description

INFOID:000000009327283

DTC B0096 FRONT SATELLITE SENSOR RH

The front side air bag satellite sensor RH is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor the front side air bag satellite sensor RH for internal failures and its circuits for communication errors.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009326250

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
B-PILLAR SATELLITE SENSOR RH [SENSOR FAIL]	B0096	Front side air bag satellite sensor RH has malfunctioned.	Refer to SRC-83, "Diagnosis Procedure" .
B-PILLAR SATELLITE SENSOR RH [COMM FAIL]		Front side air bag satellite sensor RH communication error.	
B-PILLAR SATELLITE SENSOR RH [DISCONNECT]		Front side air bag satellite sensor RH is disconnected.	
B-PILLAR SATELLITE SENSOR RH [UNMATCH]		Front side air bag satellite sensor RH is out of specification.	
B-PILLAR SATELLITE SENSOR RH [GND-SHORT]		Front side air bag satellite sensor RH circuit is shorted to ground.	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-83, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-83, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-83, "Diagnosis Procedure"](#).

NO >> Inspection End.

B0096 FRONT SIDE AIR BAG SATELLITE SENSOR RH

< DTC/CIRCUIT DIAGNOSIS >

Diagnosis Procedure

INFOID:00000009326251

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

- NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. SATELLITE SENSOR RH

1. Replace the satellite sensor RH. Refer to [SR-35, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

B0096 FRONT SIDE AIR BAG SATELLITE SENSOR RH

< DTC/CIRCUIT DIAGNOSIS >

7.RELATED HARNESS

Replace the related harness.

>> END

B0098 FRONT DOOR SATELLITE SENSOR RH

< DTC/CIRCUIT DIAGNOSIS >

B0098 FRONT DOOR SATELLITE SENSOR RH

Description

INFOID:000000009354894

DTC B0098 FRONT DOOR SATELLITE SENSOR RH

The front door satellite sensor RH is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor the front door satellite sensor RH for internal failures and its circuits for communication errors.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009354895

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
DOOR SATELLITE SENSOR RH [SENSOR FAIL]	B0098	Front door satellite sensor RH has malfunctioned.	Refer to SRC-86, "Diagnosis Procedure" .
DOOR SATELLITE SENSOR RH [COMM FAIL]		Front door satellite sensor RH communication error.	
DOOR SATELLITE SENSOR RH [DISCONNECT]		Front door satellite sensor RH is disconnected.	
DOOR SATELLITE SENSOR RH [UNMATCH]		Front door satellite sensor RH is out of specification.	
DOOR SATELLITE SENSOR RH [GND-SHORT]		Front door satellite sensor RH circuit is shorted to ground.	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

- Turn ignition switch ON.
- Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-86, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-86, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

- Turn ignition switch ON.
- Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-86, "Diagnosis Procedure"](#).

NO >> Inspection End.

B0098 FRONT DOOR SATELLITE SENSOR RH

< DTC/CIRCUIT DIAGNOSIS >

Diagnosis Procedure

INFOID:000000009354896

NOTE:

Follow the procedures in numerical order when repairing malfunctioning parts. Confirm whether malfunction is eliminated using air bag warning lamp each time repair is finished. If malfunction is still observed, proceed to the next step. When malfunction is eliminated, further repair work is not required.

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

- NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. FRONT DOOR SATELLITE SENSOR RH

Replace the front door satellite sensor RH. Refer to [SR-35, "Removal and Installation"](#).

B0098 FRONT DOOR SATELLITE SENSOR RH

< DTC/CIRCUIT DIAGNOSIS >

>> GO TO 7

7. RELATED HARNESS

Replace the related harness.

>> END

A

B

C

D

E

F

G

SRC

I

J

K

L

M

N

O

P

B00A0 OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

B00A0 OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT

Description

INFOID:000000009326241

DTC B00A0 OCCUPANT CLASSIFICATION SYSTEM (OCS)

The OCS control unit is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor the OCS for failures and interruptions in communication between the OCS control unit and the air bag diagnosis sensor unit.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009326242

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
OCCUPANT DETECTION SENSOR UNIT [UNIT FAIL]	B00A0	The OCS control unit is malfunctioning.	Refer to SRC-89, "Diagnosis Procedure" .
OCCUPANT DETECTION SENSOR UNIT [NO DATA]			
OCCUPANT DETECTION SENSOR UNIT [UNDEFINED]			
OCCUPANT DETECTION SENSOR UNIT [RESET FAIL]			
OCCUPANT DETECTION SENSOR [UNIT FAIL]		The OCS sensor is malfunctioning.	
OCCUPANT DETECTION SENSOR [POWER FAIL]		The OCS sensor circuit is malfunctioning.	
OCCUPANT DETECTION SENSOR UNIT [COMM FAIL]		Communication between the OCS control unit and the air bag diagnosis sensor unit is interrupted.	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

- YES (Current DTC)>>Refer to [SRC-89, "Diagnosis Procedure"](#).
YES (Past DTC)>>GO TO 2.
NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

- YES >> Inspection End.
NO >> Refer to [SRC-89, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

B00A0 OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-89, "Diagnosis Procedure"](#).
- NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009326243

Recheck SRS after each corrective action.

1. CHECK CURRENT DTC

Does CONSULT indicate B00A0?

YES or NO

- YES >> GO TO 2.
- NO >> GO TO 5.

2. HARNESS CONNECTOR

Is there any visible damage to the OCS sub-harness connector?

YES or NO

- YES >> Replace the harness.
- NO >> GO TO 3.

3. WIRING HARNESS

Is there any visible damage to the body or seat sub harness?

YES or NO

- YES >> Replace the harness.
- NO >> GO TO 4.

4. OCS CONTROL UNIT HARNESS CONNECTOR

Is the OCS control unit or body harness connector disconnected?

YES or NO

- YES >> Connect the harness. Clear the DTC.
- NO >> GO TO 5.

5. REPLACE RH FRONT SEAT CUSHION ASSEMBLY

Replace the RH front seat cushion assembly. Refer to [SE-31, "SEAT CUSHION : Disassembly and Assembly"](#).

>> GO TO 6.

6. AIR BAG DIAGNOSIS SENSOR UNIT

Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).

>> **END.**

A
B
C
D
E
F
G
SRC
I
J
K
L
M
N
O
P

B00D5 FRONT PASSENGER AIR BAG OFF INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

B00D5 FRONT PASSENGER AIR BAG OFF INDICATOR

Description

INFOID:000000009326238

DTC B00D5 FRONT PASSENGER AIR BAG OFF INDICATOR

The front passenger air bag off indicator is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit monitors the front passenger air bag off indicator and circuit for failures.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009326239

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
PASSENGER AIRBAG INDICATOR CIRCUIT [FAIL]	B00D5	Front passenger air bag OFF indicator is malfunctioning.	Refer to SRC-91, "Diagnosis Procedure" .
PASSENGER AIRBAG INDICATOR CIRCUIT [OPEN]		Front passenger air bag OFF indicator circuit is open.	
PASSENGER AIRBAG INDICATOR CIRCUIT [VB-SHORT]		Front passenger air bag OFF indicator is shorted to a power supply circuit.	
PASSENGER AIRBAG INDICATOR CIRCUIT [GND-SHORT]		Front passenger air bag OFF indicator is shorted to ground.	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-91, "Diagnosis Procedure"](#).
YES (Past DTC)>>GO TO 2.
NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.
NO >> Refer to [SRC-91, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-91, "Diagnosis Procedure"](#).
NO >> Inspection End.

B00D5 FRONT PASSENGER AIR BAG OFF INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

Diagnosis Procedure

INFOID:00000009326240

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

- NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. PASSENGER AIR BAG OFF INDICATOR

1. Replace the passenger air bag off indicator. Refer to [IP-30, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

A

B

C

D

E

F

G

SRC

I

J

K

L

M

N

O

P

B00D5 FRONT PASSENGER AIR BAG OFF INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

7.RELATED HARNESS

Replace the related harness.

>> **END**

B1428 SEAT BELT BUCKLE SWITCH LH

< DTC/CIRCUIT DIAGNOSIS >

B1428 SEAT BELT BUCKLE SWITCH LH

Description

INFOID:000000009354897

DTC B1428 SEAT BELT BUCKLE SWITCH LH

The air bag diagnosis sensor unit monitors the seat belt buckle switch LH status. If the control unit detects an open or short condition in the circuit, it will set the DTC.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009354898

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
SEAT BELT BUCKLE SW LH CIRCUIT [OPEN]	B1428	Seat belt buckle switch LH circuit is open.	Refer to SRC-94, "Diagnosis Procedure" .
SEAT BELT BUCKLE SW LH CIRCUIT [VB-SHORT]		Seat belt buckle switch LH circuit is shorted to a power supply circuit.	
SEAT BELT BUCKLE SW LH CIRCUIT [GND-SHORT]		Seat belt buckle switch LH circuit is shorted to ground.	
SEAT BELT BUCKLE SW LH CIRCUIT [UNDEFINED]		Seat belt buckle switch LH circuit is malfunctioning.	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

- YES (Current DTC)>>Refer to [SRC-86, "Diagnosis Procedure"](#).
- YES (Past DTC)>>GO TO 2.
- NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

- YES >> Inspection End.
- NO >> Refer to [SRC-94, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-94, "Diagnosis Procedure"](#).
- NO >> Inspection End.

B1428 SEAT BELT BUCKLE SWITCH LH

< DTC/CIRCUIT DIAGNOSIS >

Diagnosis Procedure

INFOID:000000009354899

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform one of the following repairs:

- Visible damage: Replace the harness.
- Loose terminal: Secure the terminal.
- Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. SEAT BELT BUCKLE SWITCH LH

Replace the seat belt buckle switch LH. Refer to [SB-13, "SEAT BELT BUCKLE : Removal and Installation"](#).

>> GO TO 7

7. RELATED HARNESS

Replace the related harness.

B1428 SEAT BELT BUCKLE SWITCH LH

< DTC/CIRCUIT DIAGNOSIS >

>> END

A

B

C

D

E

F

G

SRC

I

J

K

L

M

N

O

P

B1429 SEAT BELT BUCKLE SWITCH RH

< DTC/CIRCUIT DIAGNOSIS >

B1429 SEAT BELT BUCKLE SWITCH RH

Description

INFOID:000000009354900

DTC B1429 SEAT BELT BUCKLE SWITCH RH

The air bag diagnosis sensor unit monitors the seat belt buckle switch RH status. If the control unit detects an open or short condition in the circuit, it will set the DTC.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009354901

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
SEAT BELT BUCKLE SW RH CIRCUIT [OPEN]	B1429	Seat belt buckle switch RH circuit is open.	Refer to SRC-97, "Diagnosis Procedure" .
SEAT BELT BUCKLE SW RH CIRCUIT [VB-SHORT]		Seat belt buckle switch RH circuit is shorted to a power supply circuit.	
SEAT BELT BUCKLE SW RH CIRCUIT [GND-SHORT]		Seat belt buckle switch RH circuit is shorted to ground.	
SEAT BELT BUCKLE SW RH CIRCUIT [UNDEFINED]		Seat belt buckle switch RH circuit is malfunctioning.	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-97, "Diagnosis Procedure"](#).
YES (Past DTC)>>GO TO 2.
NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.
NO >> Refer to [SRC-97, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-97, "Diagnosis Procedure"](#).
NO >> Inspection End.

B1429 SEAT BELT BUCKLE SWITCH RH

< DTC/CIRCUIT DIAGNOSIS >

Diagnosis Procedure

INFOID:000000009354902

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

- NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. SEAT BELT BUCKLE SWITCH RH

Replace the seat belt buckle switch RH. Refer to [SB-13, "SEAT BELT BUCKLE : Removal and Installation"](#).

>> GO TO 7

7. RELATED HARNESS

Replace the related harness.

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

B1429 SEAT BELT BUCKLE SWITCH RH

< DTC/CIRCUIT DIAGNOSIS >

>> **END**

B1430, B1432 SEAT BELT PRE-TENSIONER LH

< DTC/CIRCUIT DIAGNOSIS >

B1430, B1432 SEAT BELT PRE-TENSIONER LH

Description

INFOID:000000009326214

DTC B1430 SEAT BELT PRE-TENSIONER LH

The seat belt pre-tensioner LH is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the seat belt pre-tensioner LH.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009326215

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
FRONT PRE-TEN LH CIRCUIT [OPEN]	B1430	LH seat belt pre-tensioner circuit is open. (shoulder belt)	Refer to SRC-100, "Diagnosis Procedure" .
FRONT PRE-TEN LH CIRCUIT [VB-SHORT]		LH seat belt pre-tensioner circuit is shorted to a power supply circuit. (shoulder belt)	
FRONT PRE-TEN LH CIRCUIT [GND-SHORT]		LH seat belt pre-tensioner circuit is shorted to ground. (shoulder belt)	
FRONT PRE-TEN LH CIRCUIT [SHORT]		LH seat belt pre-tensioner circuits are shorted to each other. (shoulder belt)	
FRONT PRE-TEN2 LH CIRCUIT [OPEN]	B1432	LH seat belt pre-tensioner circuit is open. (lap belt)	
FRONT PRE-TEN2 LH CIRCUIT [VB-SHORT]		LH seat belt pre-tensioner circuit is shorted to a power supply circuit. (lap belt)	
FRONT PRE-TEN2 LH CIRCUIT [GND-SHORT]		LH seat belt pre-tensioner circuit is shorted to ground. (lap belt)	
FRONT PRE-TEN2 LH CIRCUIT [SHORT]		LH seat belt pre-tensioner circuits are shorted to each other. (lap belt)	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-100, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-100, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

B1430, B1432 SEAT BELT PRE-TENSIONER LH

< DTC/CIRCUIT DIAGNOSIS >

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-100, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009326216

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Perform one of the following repairs:
 - Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 3.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 5.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 6.
NO >> Clear DTC. Inspection End.

6. SEAT BELT PRE-TENSIONER LH

1. Replace the seat belt pre-tensioner LH. Refer to [SR-40, "Removal and Installation"](#).
2. Turn ignition switch ON.

B1430, B1432 SEAT BELT PRE-TENSIONER LH

< DTC/CIRCUIT DIAGNOSIS >

3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7.RELATED HARNESS

Replace the related harness.

>> **END**

A

B

C

D

E

F

G

SRC

I

J

K

L

M

N

O

P

B1431 SEAT BELT PRE-TENSIONER

< DTC/CIRCUIT DIAGNOSIS >

B1431 SEAT BELT PRE-TENSIONER

Description

INFOID:000000009326211

DTC B1431 SEAT BELT PRE-TENSIONER RH

The seat belt pre-tensioner RH is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the seat belt pre-tensioner RH.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009326212

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
FRONT PRE-TEN RH CIRCUIT [OPEN]	B1431	RH seat belt pre-tensioner circuit is open. (shoulder belt)	Refer to SRC-102, "Diagnosis Procedure" .
FRONT PRE-TEN RH CIRCUIT [VB-SHORT]		RH seat belt pre-tensioner circuit is shorted to a power supply circuit. (shoulder belt)	
FRONT PRE-TEN RH CIRCUIT [GND-SHORT]		RH seat belt pre-tensioner circuit is shorted to ground. (shoulder belt)	
FRONT PRE-TEN RH CIRCUIT [SHORT]		RH seat belt pre-tensioner circuits are shorted to each other. (shoulder belt)	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

- YES (Current DTC)>>Refer to [SRC-102, "Diagnosis Procedure"](#).
- YES (Past DTC)>>GO TO 2.
- NO >> Inspection End.

2.ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

- YES >> Inspection End.
- NO >> Refer to [SRC-102, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-102, "Diagnosis Procedure"](#).
- NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009326213

1.HARNES CONNECTOR

B1431 SEAT BELT PRE-TENSIONER

< DTC/CIRCUIT DIAGNOSIS >

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

A

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

B

Is the inspection result normal?

C

YES >> GO TO 2.

- NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

D

2.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

E

Is DTC still current?

F

YES >> GO TO 3.

NO >> Refer to [GI-53. "Intermittent Incident"](#).

G

3.WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

SRC

Is the inspection result normal?

I

YES >> GO TO 4.

NO >> Replace the harness.

4.CONFIRM DTC

J

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

K

Is DTC still current?

L

YES >> GO TO 5.

NO >> Refer to [GI-53. "Intermittent Incident"](#).

5.AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

M

Is DTC still current?

N

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6.SEAT BELT PRE-TENSIONER RH

O

1. Replace the seat belt pre-tensioner RH. Refer to [SR-40. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

P

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7.RELATED HARNESS

Replace the related harness.

B1431 SEAT BELT PRE-TENSIONER

< DTC/CIRCUIT DIAGNOSIS >

>> **END**

B142A IGN VOLTAGE

< DTC/CIRCUIT DIAGNOSIS >

B142A IGN VOLTAGE

Description

INFOID:000000009353529

DTC B142A IGNITION VOLTAGE

Ignition voltage is supplied to the air bag diagnosis sensor unit when the ignition is in the ON position. The air bag diagnosis sensor unit will monitor for low or high ignition voltage.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009350915

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
IGN VOLTAGE [LOW]	B142A	Ignition voltage low at air bag diagnosis sensor unit.	Refer to SRC-105, "Diagnosis Procedure" .
IGN VOLTAGE [HIGH]		Ignition voltage high at air bag diagnosis sensor unit.	

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

- Turn ignition switch ON.
- Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-105, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-105, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

- Turn ignition switch ON.
- Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-105, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009350916

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

B142A IGN VOLTAGE

< DTC/CIRCUIT DIAGNOSIS >

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform one of the following repairs:

- Visible damage: Replace the harness.
- Loose terminal: Secure the terminal.
- Poor connection: Secure the connection.

2.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3.WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

5.AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6.RELATED HARNESS

Replace the related harness.

>> **END**

B142X COLLISION DETECTION

< DTC/CIRCUIT DIAGNOSIS >

B142X COLLISION DETECTION

Description

INFOID:000000009352072

DTC B1421, B1422 and B1425 COLLISION DETECTION

The air bag diagnosis sensor unit will set this DTC if it has detected a collision or rollover which has resulted in a deployment of one or more air bags or pre-tensioners. If this DTC is detected after a SRS repair, the air bag diagnosis sensor unit has not yet been replaced. This DTC can not be erased.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009352073

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
FRONTAL COLLISION DETECTION	B1421	Frontal collision detected. Driver and/or front passenger air bag modules are deployed.	Refer to SR-13, "For Frontal Collision" .
SIDE COLLISION DETECTION	B1422	Side collision detected. Curtain air bag module and seat belt pre-tensioner are deployed.	Refer to SR-15, "For Side and Rollover Collision" .
REAR COLLISION DETECTION	B1425	Rear collision has been detected.	Replace air bag diagnosis unit. Refer to SR-38, "Removal and Installation" .

DTC CONFIRMATION PROCEDURE (With CONSULT)

1.INSPECTION START

Turn ignition switch ON.

>> GO TO 2.

2.CHECK SELF-DIAG RESULT

Check for the DTC on CONSULT.

Is the DTC detected?

YES >> Refer to [SRC-107, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009352074

Refer to [SR-13, "For Frontal Collision"](#) or [SR-15, "For Side and Rollover Collision"](#).

B14XX AIR BAG DIAGNOSIS SENSOR UNIT

< DTC/CIRCUIT DIAGNOSIS >

B14XX AIR BAG DIAGNOSIS SENSOR UNIT

Description

INFOID:000000009344707

DTC B14XX AIR BAG DIAGNOSIS SENSOR UNIT

The air bag diagnosis sensor unit will run self diagnostics when the ignition switch is turned ON. It has the potential to set many diagnostic trouble codes which will conform to the B14XX format, but will not match any other SRS diagnostic trouble codes. Refer to [SRC-15, "CONSULT Function"](#).

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000009344708

DTC DETECTION LOGIC

With CONSULT

CONSULT name	DTC	DTC detecting condition	Repair order
CONTROL UNIT [UNIT FAIL]	B14XX	Air bag diagnosis sensor unit is malfunctioning.	Refer to SRC-108, "Diagnosis Procedure" .
AIRBAG DISPOSAL COMPLETION			

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

- YES (Current DTC)>>Refer to [SRC-108, "Diagnosis Procedure"](#).
- YES (Past DTC)>>GO TO 2.
- NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

- YES >> Inspection End.
- NO >> Refer to [SRC-108, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-108, "Diagnosis Procedure"](#).
- NO >> Inspection End.

Diagnosis Procedure

INFOID:000000009344709

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal

B14XX AIR BAG DIAGNOSIS SENSOR UNIT

< DTC/CIRCUIT DIAGNOSIS >

- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform one of the following repairs:

- Visible damage: Replace the harness.
- Loose terminal: Secure the terminal.
- Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. RELATED HARNESS

Replace the related harness.

>> END

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

SRS AIR BAG WARNING LAMP DOES NOT TURN OFF

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

SRS AIR BAG WARNING LAMP DOES NOT TURN OFF

Diagnosis Procedure

INFOID:000000008745552

1. CHECK AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

Check the deployment of air bag module.

Is air bag module deployed?

YES >> Replace the malfunctioning parts.

NO >> GO TO 2.

2. CHECK AIR BAG FUSE

Check 10 A fuse [No.1, located in fuse block (J/B)].

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the fuse.

3. CHECK HARNESS CONNECTOR

Check the harness connector.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace harness connectors.

4. CHECK WIRING HARNESS

Check the wiring harness externals.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace wiring harness.

5. REPLACE AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).

2. Check air bag warning lamp operation.

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 6.

6. REPLACE COMBINATION METER

1. Replace combination meter. Refer to [MWI-107, "Removal and Installation"](#).

2. Check air bag warning lamp operation.

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 1.

SRS AIR BAG WARNING LAMP DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

SRS AIR BAG WARNING LAMP DOES NOT TURN ON

Diagnosis Procedure

INFOID:000000008745553

1.CHECK COMBINATION METER POWER SUPPLY AND GROUND CIRCUIT

Check combination meter unit power supply and ground circuit. Refer to [MWI-92, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK HARNESS CONNECTOR

Check the harness connector.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace harness connectors.

3.CHECK WIRING HARNESS

Check the wiring harness externals.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace wiring harness.

4.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Disconnect air bag diagnosis sensor unit connector and turn power switch ON.

Does air bag warning lamp turn ON?

YES >> Replace air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).

NO >> Replace combination meter. Refer to [MWI-107, "Removal and Installation"](#).

A
B
C
D
E
F
G
SRC
I
J
K
L
M
N
O
P

SRS AIR BAG WARNING LAMP BLINKS

< SYMPTOM DIAGNOSIS >

SRS AIR BAG WARNING LAMP BLINKS

Diagnosis Procedure

INFOID:000000008745554

1. CHECK BATTERY

Check battery. Refer to [PG-59, "How to Handle 12V Battery"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning parts.

2. REPLACE OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT

1. Replace occupant classification system control unit. Refer to [SR-42, "Removal and Installation"](#).

2. Check air bag warning lamp operation.

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 3.

3. REPLACE AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).

2. Check air bag warning lamp operation.

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 1.