

SECTION **SRC**

SRS AIRBAG CONTROL SYSTEM

A
B
C
D
E
F
G
SRC
I
J
K
L
M
N
O
P

CONTENTS

PRECAUTION	3	Work Flow	34
PRECAUTIONS	3	INSPECTION AND ADJUSTMENT	37
Precaution for Technicians Using Medical Electric.....	3	ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT	37
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	3	ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description	37
Point to Be Checked Before Starting Maintenance Work	4	ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement	37
Service	4	ZERO POINT RESET	37
Precaution for Removing 12V Battery	4	ZERO POINT RESET : Description	37
SYSTEM DESCRIPTION	6	ZERO POINT RESET : Special Repair Requirement	37
COMPONENT PARTS	6	INTERMITTENT INCIDENT	38
Component Parts Location	6	Inspection Procedure	38
SYSTEM	8	DTC/CIRCUIT DIAGNOSIS	39
System Description	8	U1000 CAN COMM CIRCUIT	39
DIAGNOSIS SYSTEM (AIR BAG)	11	DTC Description	39
Description	11	Diagnosis Procedure	39
On Board Diagnosis Function	11	U1010 CONTROL UNIT (CAN)	40
CONSULT Function	13	DTC Description	40
DIAGNOSIS SYSTEM (OCCUPANT DETECTION SYSTEM)	15	Diagnosis Procedure	40
CONSULT Function	15	B0001 DRIVER AIR BAG MODULE	41
ECU DIAGNOSIS INFORMATION	16	DTC Description	41
DIAGNOSIS SENSOR UNIT	16	Diagnosis Procedure	42
DTC Index	16	B0002 DRIVER AIR BAG MODULE	45
Flash Code Index	20	DTC Description	45
WIRING DIAGRAM	22	Diagnosis Procedure	46
SRS AIR BAG SYSTEM	22	B0010 PASSENGER AIR BAG MODULE	49
Wiring Diagram	22	Description	49
BASIC INSPECTION	34	DTC Description	49
DIAGNOSIS AND REPAIR WORK FLOW	34	Diagnosis Procedure	50
		B0011 PASSENGER AIR BAG MODULE	52

Description	52	DTC Description	82
DTC Description	52	Diagnosis Procedure	83
Diagnosis Procedure	53		
B0020 SIDE AIRBAG MODULE LH	55	B00D5 FRONT PASSENGER AIR BAG OFF INDICATOR	85
Description	55	Description	85
DTC Description	55	DTC Description	85
Diagnosis Procedure	56	Diagnosis Procedure	86
B0021 SIDE CURTAIN AIR BAG MODULE LH	58	B1428 SEAT BELT BUCKLE SWITCH LH	88
Description	58	Description	88
DTC Description	58	DTC Description	88
Diagnosis Procedure	59	Diagnosis Procedure	89
B0028 SIDE AIRBAG MODULE RH	61	B1429 SEAT BELT BUCKLE SWITCH RH	91
Description	61	Description	91
DTC Description	61	DTC Logic	91
Diagnosis Procedure	62	Diagnosis Procedure	92
B0029 SIDE CURTAIN AIR BAG MODULE RH	64	B1430, B1432 SEAT BELT PRE-TENSIONER LH	94
Description	64	Description	94
DTC Description	64	DTC Description	94
Diagnosis Procedure	65	Diagnosis Procedure	96
B0091 FRONT SIDE AIR BAG SATELLITE SENSOR LH	67	B1431 SEAT BELT PRE-TENSIONER	98
Description	67	Description	98
DTC Description	67	DTC Description	98
Diagnosis Procedure	68	Diagnosis Procedure	99
B0093 FRONT DOOR SATELLITE SENSOR LH	70	B142A IGN VOLTAGE	101
Description	70	Description	101
DTC Description	70	DTC Description	101
Diagnosis Procedure	71	Diagnosis Procedure	102
B0094 CRASH ZONE SENSOR	73	B142X COLLISION DETECTION	103
Description	73	Description	103
DTC Description	73	DTC Description	103
Diagnosis Procedure	74	Diagnosis Procedure	103
B0096 FRONT SIDE AIR BAG SATELLITE SENSOR RH	76	B14XX AIR BAG DIAGNOSIS SENSOR UNIT	104
Description	76	Description	104
DTC Description	76	DTC Description	104
Diagnosis Procedure	77	Diagnosis Procedure	105
B0098 FRONT DOOR SATELLITE SENSOR RH	79	SYMPTOM DIAGNOSIS	107
Description	79	SRS AIR BAG WARNING LAMP DOES NOT TURN OFF	107
DTC Description	79	Diagnosis Procedure	107
Diagnosis Procedure	80	SRS AIR BAG WARNING LAMP DOES NOT TURN ON	108
B00A0 OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT	82	Diagnosis Procedure	108
Description	82	SRS AIR BAG WARNING LAMP BLINKS	109
		Diagnosis Procedure	109

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Technicians Using Medical Electric

INFOID:000000010122775

OPERATION PROHIBITION

WARNING:

- Parts with strong magnet is used in this vehicle.
- Technicians using a medical electric device such as pacemaker must never perform operation on the vehicle, as magnetic field can affect the device function by approaching to such parts.

NORMAL CHARGE PRECAUTION

WARNING:

- If a technician uses a medical electric device such as an implantable cardiac pacemaker or an implantable cardioverter defibrillator, the possible effects on the devices must be checked with the device manufacturer before starting the charge operation.
- As radiated electromagnetic wave generated by PDM (Power Delivery Module) at normal charge operation may affect medical electric devices, a technician using a medical electric device such as implantable cardiac pacemaker or an implantable cardioverter defibrillator must not approach motor room [PDM (Power Delivery Module)] at the hood-opened condition during normal charge operation.

PRECAUTION AT TELEMATICS SYSTEM OPERATION

WARNING:

- If a technician uses implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), avoid the device implanted part from approaching within approximately 220 mm (8.66 in) from interior/exterior antenna.
- The electromagnetic wave of TCU might affect the function of the implantable cardiac pacemaker or the implantable cardioverter defibrillator (ICD), when using the service, etc.
- If a technician uses other medical electric devices than implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), the electromagnetic wave of TCU might affect the function of the device. The possible effects on the devices must be checked with the device manufacturer before TCU use.

PRECAUTION AT INTELLIGENT KEY SYSTEM OPERATION

WARNING:

- If a technician uses implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), avoid the device implanted part from approaching within approximately 220 mm (8.66 in) from interior/exterior antenna.
- The electromagnetic wave of intelligent key might affect the function of the implantable cardiac pacemaker or the implantable cardioverter defibrillator (ICD), at door operation, at each request switch operation, or at engine starting.
- If a technician uses other medical electric devices than implantable cardiac pacemaker or implantable cardioverter defibrillator (ICD), the electromagnetic wave of intelligent key might affect the function of the device. The possible effects on the devices must be checked with the device manufacturer before intelligent key use.

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000010508806

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

A
B
C
D
E
F
G
SRC
I
J
K
L
M
N
O
P

PRECAUTIONS

< PRECAUTION >

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

Point to Be Checked Before Starting Maintenance Work

INFOID:000000010122777

The high voltage system may start automatically. It is required to check that the timer air conditioner and timer charge (during EVSE connection) are not set before starting maintenance work.

NOTE:

If the timer air conditioner or timer charge (during EVSE connection) is set, the high voltage system starts automatically even when the power switch is in OFF state.

Service

INFOID:000000010122778

- Never use electrical test equipment to check SRS circuits unless instructed to in this Service Manual.
- Before servicing the SRS, turn power switch OFF, disconnect 12V battery negative terminal and wait 3 minutes or more. Refer to [SRC-4. "Precaution for Removing 12V Battery"](#). For approximately 3 minutes after the cables are removed, it is still possible for the air bag and seat belt pretensioner to deploy. Therefore, never work on any SRS connectors or wires until at least 3 minutes have passed.
- Diagnosis sensor unit must always be installed with their arrow marks "←" pointing towards the front of the vehicle for proper operation. Also check diagnosis sensor unit for cracks, deformities or rust before installation and replace as required.
- The spiral cable must be aligned with the neutral position since its rotations are limited. Never turn steering wheel and column after removal of steering gear.
- Handle air bag module carefully. Always place driver and front passenger air bag modules with the pad side facing upward and seat mounted front side air bag module standing with the stud bolt side facing down.
- Conduct self-diagnosis to check entire SRS for proper function after replacing any components.
- After air bag inflates, the front instrument panel assembly should be replaced if damaged.
- Always replace instrument panel pad following front passenger air bag deployment.
- Never solder the harness when making repairs. Check that harness is not pinched and that there is no contact with other components.
- Never allow harness to come in contact with oil, grease, waste oil, or water.
- Never insert foreign materials, such as a screwdriver, into the harness connector. (This is to prevent accidental activation caused by static electricity.)
- Always use CONSULT or SRS air bag warning lamp to perform the circuit diagnosis. (Never use an electric tester such as a circuit tester.)

Precaution for Removing 12V Battery

INFOID:000000010122779

1. Check that EVSE is not connected.

NOTE:

If EVSE is connected, the air conditioning system may be automatically activated by the timer A/C function.

2. Turn the power switch OFF → ON → OFF. Get out of the vehicle. Close all doors (including back door).
3. Check that the charge status indicator lamp does not blink and wait for 5 minutes or more.

NOTE:

PRECAUTIONS

< PRECAUTION >

If the battery is removed within 5 minutes after the power switch is turned OFF, plural DTCs may be detected.

4. Remove 12V battery within 1 hour after turning the power switch OFF → ON → OFF.

NOTE:

- The 12V battery automatic charge control may start automatically even when the power switch is in OFF state.
- Once the power switch is turned ON → OFF, the 12V battery automatic charge control does not start for approximately 1 hour.

CAUTION:

- **After all doors (including back door) are closed, if a door (including back door) is opened before battery terminals are disconnected, start over from Step 1.**
- **After turning the power switch OFF, if “Remote A/C” is activated by user operation, stop the air conditioner and start over from Step 1.**

A

B

C

D

E

F

G

SRC

I

J

K

L

M

N

O

P

COMPONENT PARTS


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:000000010122780

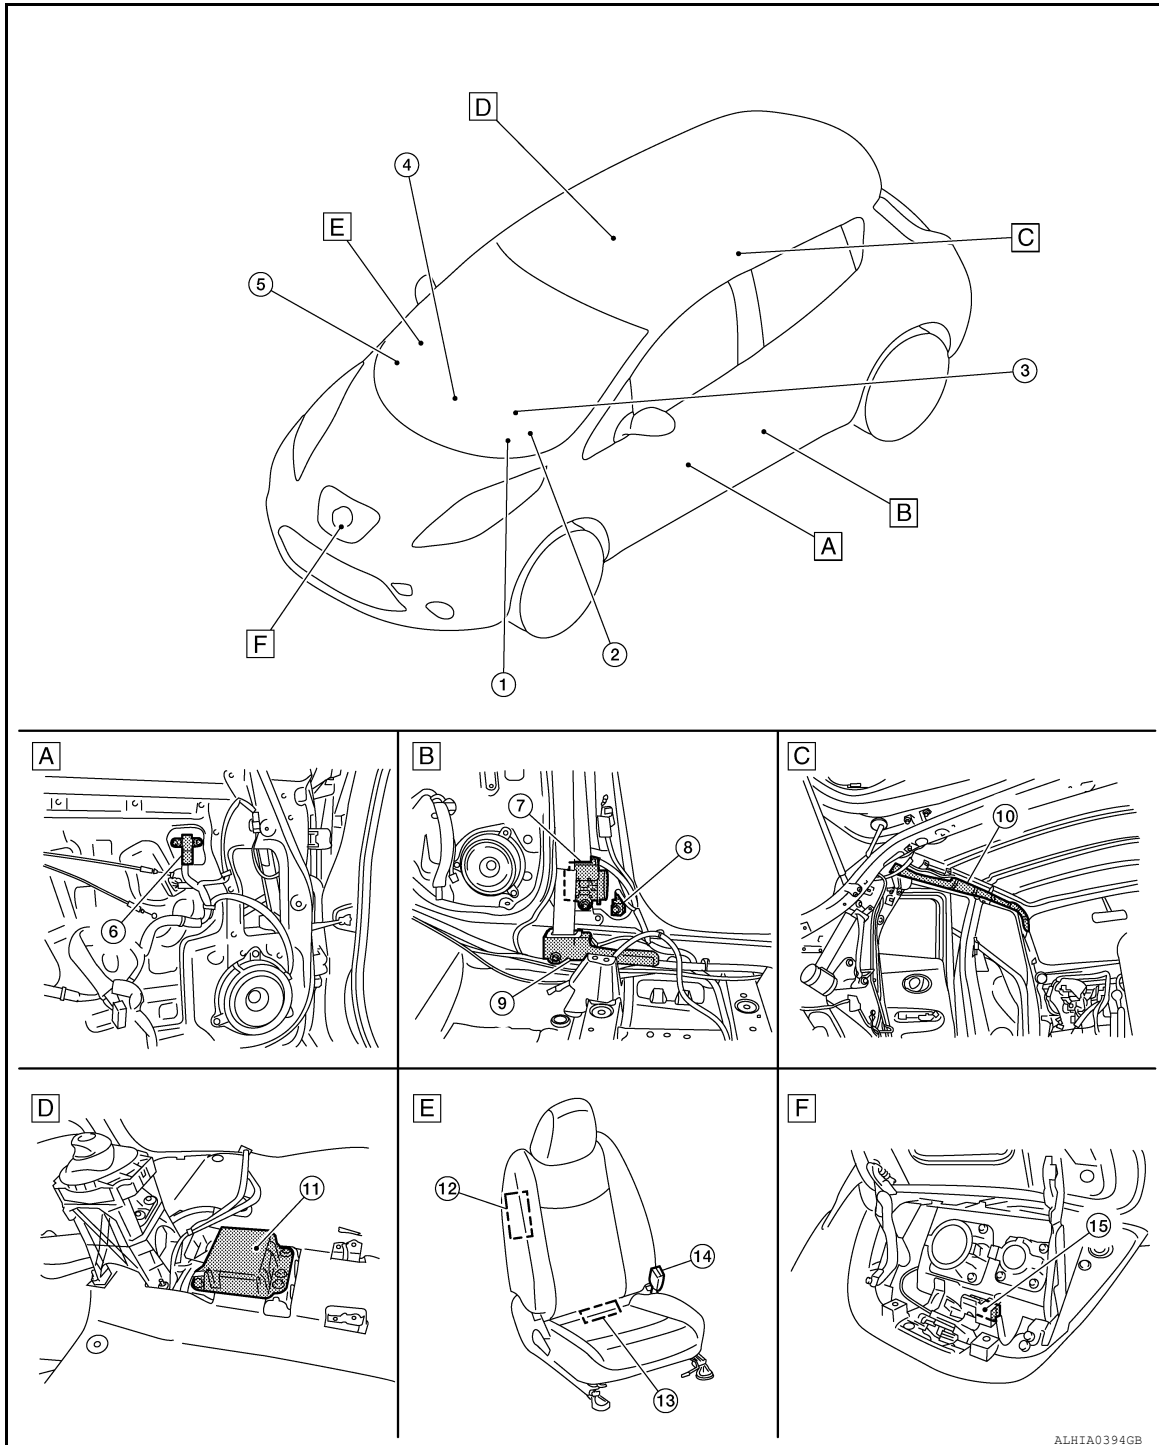

- A. View with door finisher removed
- B. Behind center pillar lower garnish
- C. View with headlining assembly removed
- D. View with center console assembly removed
- E. Passenger seat
- F. View with charge port lid open

COMPONENT PARTS

< SYSTEM DESCRIPTION >

No.	Component	Function
1.	Combination meter (air bag, belt warning lamp)	Refer to SR-12, "MAIN COMPONENT PARTS AND FUNCTIONS : Air bag warning lamp" .
2.	Combination switch (spiral cable)	Refer to SR-11, "MAIN COMPONENT PARTS AND FUNCTIONS : Spiral cable" .
3.	Driver air bag module	Refer to SR-7, "AIR BAG MODULE : Driver air bag module" .
4.	Front passenger air bag OFF indicator	Turns the front passenger air bag OFF indicator lamp ON when the front passenger seat is occupied by a child or a child-seat
5.	Passenger air bag module	Refer to SR-7, "AIR BAG MODULE : Passenger air bag module" .
6.	Front door satellite sensor LH	Refer to SR-11, "MAIN COMPONENT PARTS AND FUNCTIONS : Satellite sensor" .
7.	Front LH seat belt pre-tensioner	Refer to SB-8, "Seat belt pre-tensioner with Load limiter" .
8.	LH side air bag (satellite sensor)	Refer to SR-11, "MAIN COMPONENT PARTS AND FUNCTIONS : Satellite sensor" .
9.	Lap seat belt pre-tensioner (driver side)	Refer to SB-9, "Double pre-tensioner seat belt" .
10.	LH side front curtain air bag module	Refer to SR-8, "AIR BAG MODULE : Curtain air bag module" .
11.	Air bag diagnosis sensor unit	Refer to SR-12, "MAIN COMPONENT PARTS AND FUNCTIONS : Air bag diagnosis sensor unit" .
12.	RH side front curtain air bag module	Refer to SR-10, "INFLATOR : Side air bag inflator" .
13.	Occupant classification system control unit	Transmits the passenger seat status (occupied or empty) to air bag diagnosis sensor unit. It is installed in the passenger seat cushion. Refer to SE-11, "HEATED SEAT SYSTEM : Component Parts Location" for detailed installation location.
14.	Seat belt buckle switch (passenger side)	Controls deployment timing depending on the seat belt condition that is fastened or unfastened. It is installed in the seat belt buckle. Refer to SB-10, "Exploded View" for detailed installation location.
15.	Crash zone sensor	Refer to SR-11, "MAIN COMPONENT PARTS AND FUNCTIONS : Crash zone sensor" .

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

SYSTEM


< SYSTEM DESCRIPTION >

SYSTEM

System Description

INFOID:000000010122781

SYSTEM DIAGRAM

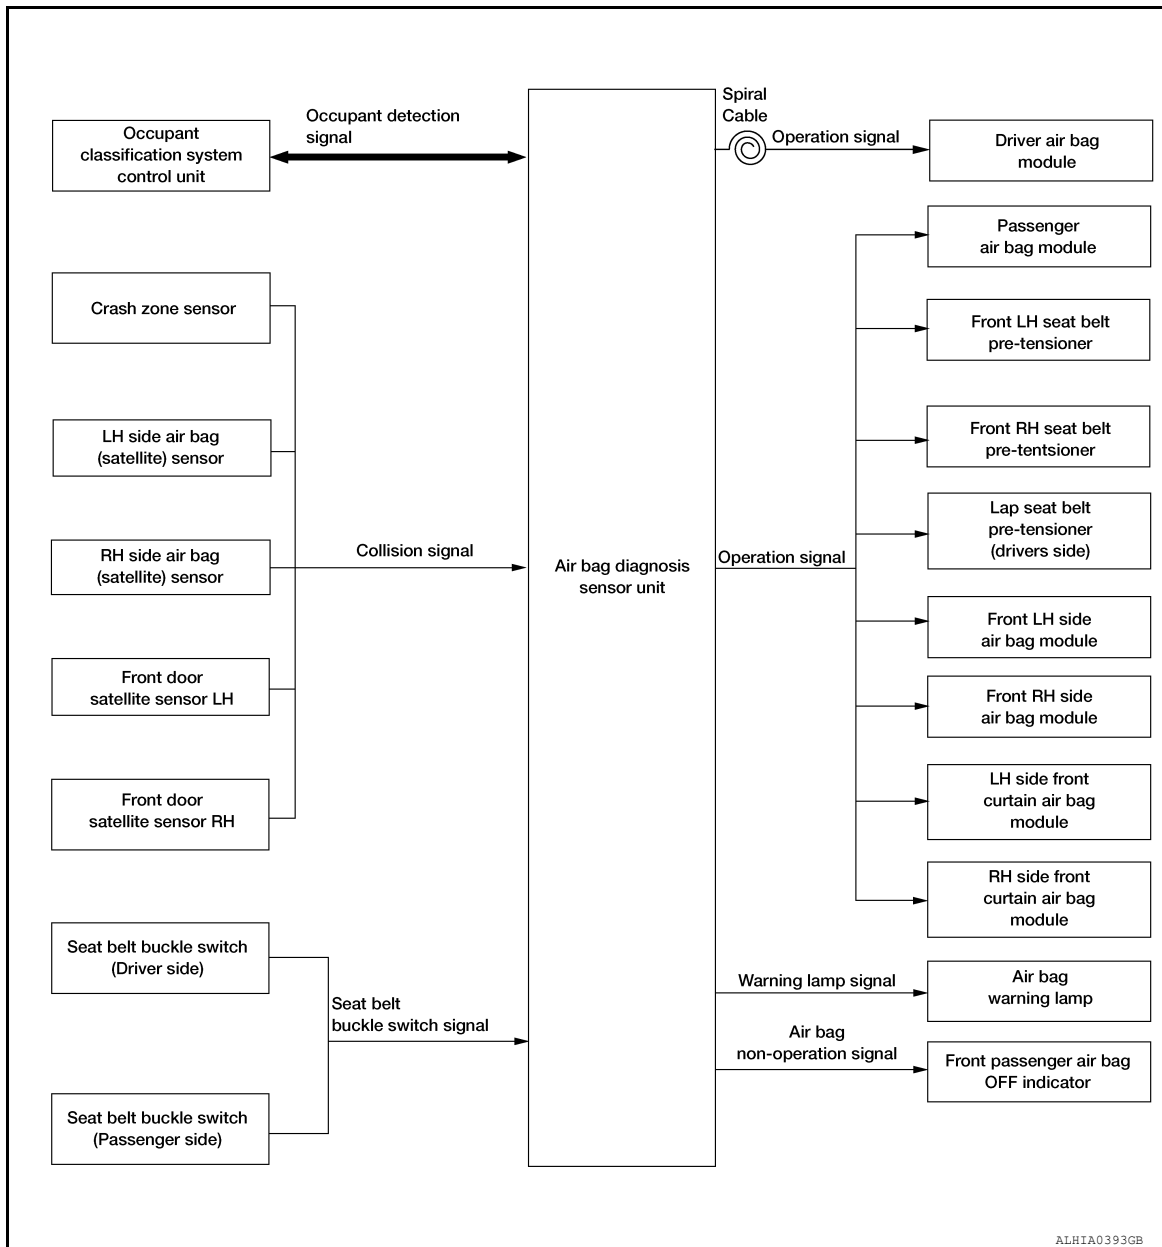

DESCRIPTION

Supplemental Restraint System (SRS) activates the air bag module and seat belt pre-tensioner when it detects a frontal collision or a side collision that is more than the specified limit.

Together with other safety devices, it reduces the impact that occupant receives when vehicle collision occurs. Air bag diagnosis sensor unit supplies power supply to air bag module and pre-tensioner seat belt when deceleration that is more than the specified limit is detected by G sensor in air bag diagnosis sensor unit, crash zone sensor, satellite sensor, or front door satellite sensor.

Air bag module is composed of electric igniter (squib), filter, pyrotechnic material, and gas generating material. When air bag module receives a signal from air bag diagnosis sensor unit, air bag module ignites pyrotechnic material using electric igniter (squib) so that gas generating material generates high temperature nitrogen gas. The gas through filter activates air bag. At the same time, pre-tensioner seat belt receives power supply from air bag diagnosis sensor unit, gas generator is activated, and then gas is generated.

Balls in pipe are moved according to generated gas pressure and strike pinion gear on ELR shaft. ELR shaft rotates and retracts seat belt.

SYSTEM

< SYSTEM DESCRIPTION >

AIR BAG DIAGNOSIS SENSOR UNIT FUNCTIONS

Air bag diagnosis sensor unit has the following functions:

- Detects a collision and supplies the energy for deploying air bag and seat belt pre-tensioner.
- Detects and records electrical malfunction in air bag system and seat belt pre-tensioner system, and blinking air bag warning lamp.
- Detects and records the deployment of air bag and seat belt pre-tensioner and turns ON the air bag warning lamp.
- Indicates malfunctioning portion via the number of blinks from the air bag warning lamp in the diagnosis mode.
- Indicates the malfunction record via CONSULT.
- Suppresses the deployment of passenger air bag when passenger seat is empty or occupied by child or child-seat.
- When passenger seat is occupied by child or child seat, turns ON passenger air bag OFF indicator.
- When judges that passenger seat is occupied by a adult or a child and passenger seat belt is not fasten, turns ON seat belt warning lamp. Further information for the seat belt warning system.

COLLISION MODES


The operation of SRS is different depending on the collision modes applications. For example, the driver air bag module, passenger air bag module, and seat belt pre-tensioner are activated in a frontal collision or side collision.

SRS configurations that are activated for the following collision modes.

×: Apply —: Not apply

SRS configuration	Frontal collision	Left side collision	Right side collision
Driver air bag module	×	—	—
Passenger air bag module	×	—	—
Seat belt pre-tensioner LH	×	×	—
Seat belt pre-tensioner RH	×	—	×
Lap pre-tensioner LH	×	×	—
Side air bag module LH	—	×	—
Side air bag module RH	—	—	×
Curtain air bag module LH	—	×	—
Curtain air bag module RH	—	—	×

OCCUPANT CLASSIFICATION SYSTEM

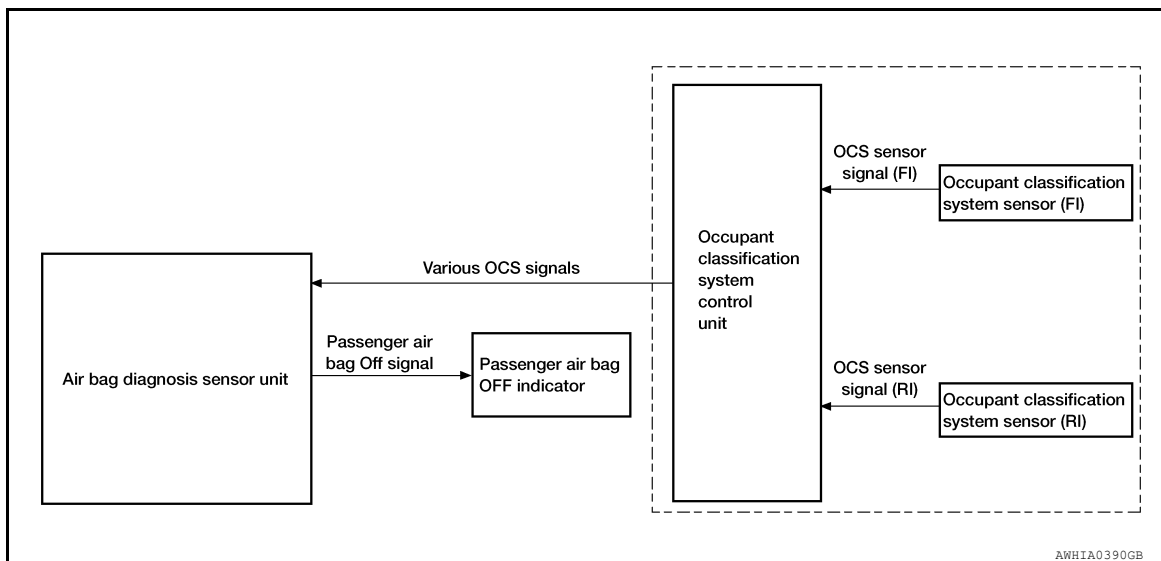

Occupant Classification System has the following functions.

1. Suppresses the deployment of passenger air bag when passenger seat is empty, or when occupied by child and child-seat.
2. Indicates malfunctioning portion with blinking times of air bag warning lamp in diagnosis mode.
3. Indicates the malfunctioning record by CONSULT.

SYSTEM

< SYSTEM DESCRIPTION >

4. When “Zero point reset” for occupant detection system is incomplete, CONSULT indicates that “Zero point reset” is incomplete.

NOTE:

- Operation of air bag diagnosis sensor unit when air bag diagnosis sensor unit receives information from Occupant Classification System.
- Even if zero point reset is “Complete”, always perform zero point reset after the removal and installation of seat or the removal of control unit harness connector.

Status (front passenger seat)	Passenger air bag	Front passenger air bag OFF indicator	Air bag warning lamp	Seat belt warning lamp (when front passenger seat is unbuckled)
Empty	Suppress	OFF	OFF	OFF
An object	Suppress	ON	OFF	OFF
Child/ child-seat	Suppress	ON	OFF	ON
Adult	Enable to deploy	OFF	OFF	ON
Malfunction	Suppress	ON	Blinking	OFF
Zero point reset Not yet performed (NISSAN genuine parts only)	Suppress	ON	Blinking	OFF

DIAGNOSIS SYSTEM (AIR BAG)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (AIR BAG)

Description

INFOID:000000010122782

CAUTION:

- **Never use electrical test equipment on any circuit related to the SRS unless instructed in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**
- **Never repair, splice or modify the SRS wiring harness. If the harness is damaged, replace it with a new one.**
- **Keep ground portion clean.**

DIAGNOSIS FUNCTION

- The SRS self-diagnostic results can be read with air bag warning lamp and/or CONSULT.
- The user mode is exclusively prepared for the customer (driver). This mode warns the driver of a system malfunction through the operation of the air bag warning lamp.
- The diagnosis mode allows the technician to locate and inspect the malfunctioning part.
- The mode applications for the air bag warning lamp and CONSULT are as per the following items.

×: Application, —: Not application

Diagnosis tool	User mode	Diagnosis mode
Air bag warning lamp	×	×
CONSULT	—	×

On Board Diagnosis Function

INFOID:000000010122783

SRC

ON-BOARD DIAGNOSIS

There are two self diagnosis functions with air bag warning lamp per the following items.

- USER MODE
- DIAGNOSIS MODE

METHOD OF STARTING

- Diagnosis mode changes from user mode to diagnosis mode when changing operation is performed.
- In user mode, when SRS air bag warning lamp is not blinking, changing to diagnosis mode by ignition switch operation is not possible.
- In diagnosis mode, when repair is complete and system is normal, the mode changes to user mode when ignition switch is turned from OFF to ON.

Procedure to Change Diagnosis Mode

1. Turn ignition switch from OFF to ON.
2. SRS air bag lamp turns ON for 7 second and turns OFF, then turn ignition switch OFF within 1second after the lamp turns OFF.
3. After turning ignition switch OFF, wait for 3 seconds or more.
4. Repeat operation 1 to 3 for 2 times so that operation 1 to 3 is repeated for 3times in total.
5. Turn ignition switch from OFF to ON. Diagnosis mode changes.

USER MODE

In USER MODE, air bag warning lamp on combination meter blinks when a malfunction is detected and warns the customer (driver).





How to Read Air Bag Warning Lamp

1. Turn the ignition switch from OFF to ON, and check that the air bag warning lamp blinks.
2. Compare the air bag warning lamp blinking pattern with the examples.

Air Bag Warning Lamp Examples

DIAGNOSIS SYSTEM (AIR BAG)

< SYSTEM DESCRIPTION >

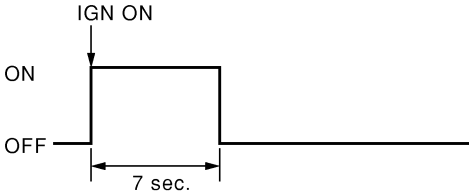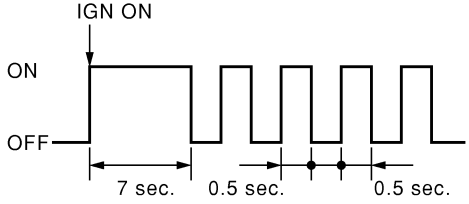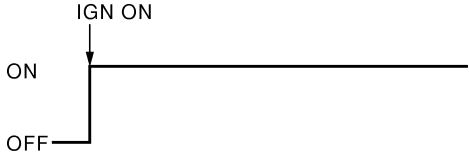Air bag warning lamp operation (user mode)	SRS condition	Reference item
 <p style="text-align: right;">SHIA0011E</p>	<ul style="list-style-type: none"> No malfunction is detected. No further action is necessary. 	<p style="text-align: center;">—</p>
 <p style="text-align: right;">SHIA0012E</p>	<ul style="list-style-type: none"> The system is malfunctioning. Self diagnostic result is not erased after repair. <p>Battery voltage is low (less than 9 V) or high battery voltage (more than 16V).</p> <p>Occupant detection function is disabled.</p> <p>Zero point reset is incomplete.</p> <p>Intermittent malfunction is detected in the past.</p>	<p>Erase "Self Diagnostic Result" Refer to SRC-13, "CONSULT Function", How to Erase Self-diagnostic Result.</p> <p>Check "CAUSE OF WARNING" in "Special Function" with CONSULT Refer to SRC-13, "CONSULT Function".</p> <p>Refer to SRC-15, "CONSULT Function".</p> <p>Refer to SRC-37, "ZERO POINT RESET : Special Repair Requirement".</p> <p>Go to GI-53, "Intermittent Incident".</p>
 <p style="text-align: right;">SHIA0013E</p>	<ul style="list-style-type: none"> Air bag is deployed. Seat belt pre-tensioner is deployed. Air bag diagnosis sensor unit is malfunctioning. Air bag power supply circuit is malfunctioning. Air bag warning lamp circuit is malfunctioning. 	<p>Go to SR-13, "For Frontal Collision" or SR-15, "For Side and Rollover Collision".</p> <p>Go to SRC-107, "Diagnosis Procedure".</p>
 <p style="text-align: right;">SHIA0014E</p>	<ul style="list-style-type: none"> Air bag diagnosis sensor unit is malfunctioning. Air bag warning lamp circuit is malfunctioning. 	<p>Go to SRC-108, "Diagnosis Procedure".</p>

DIAGNOSIS MODE

The diagnosis mode can only be switched when a malfunction is detected in the user mode. Malfunctioning system is indicated according to blinking pattern of air bag warning lamp.

How to Read Air Bag Warning Lamp

- Follow the procedures of "PROCEDURE TO CHANGE DIAGNOSIS MODE", and switch to the diagnosis mode.

DIAGNOSIS SYSTEM (AIR BAG)

< SYSTEM DESCRIPTION >

2. Turn ignition switch ON. Check the blinking pattern of air bag warning lamp.
There are 4 blinking patterns for the air bag warning lamp as per the following items.
- Front air bag system: Two 1.5 second blink followed by a 0.5 second blink repeated.
 - Side air bag system: Three 1.5 second blinks followed by a 0.5 second blink repeated.
 - Air bag control unit system: 3 second blink followed by a 0.5 second blink repeated.
 - Sensor system: Two 3 second blinks followed by a 0.5 second blink repeated.

Front air bag system

Number of 0.5 second blinks	Malfunctioning items
1	Driver air bag module
2	Passenger air bag module
3	Seat belt pre-tensioner LH
4	Seat belt pre-tensioner RH
5	Lap pre-tensioner LH

Side air bag system

Number of 0.5-second blinks	Malfunctioning items
1	Side air bag module LH
2	Side air bag module RH
3	Curtain air bag module LH
4	Curtain air bag module RH

Air bag control unit system

Number of 0.5 second blinks	Malfunctioning items
1	Collision detection
2	Air bag diagnosis sensor unit
3	Front passenger air bag indicator
5	Air bag cut OFF switch

Sensor system

Number of 0.5 second blinks	Malfunctioning items
1	Crash zone sensor
2	Satellite sensor LH
3	Satellite sensor RH
12	Other satellite sensor

How to Erase Self-diagnostic Result

After a malfunction is repaired, turn the ignition switch OFF for one second or more, then turn ignition switch ON. The diagnosis mode returns to the user mode. At that time the self-diagnostic result is cleared.

CONSULT Function

INFOID:000000010122784

APPLICATION ITEM

CONSULT performs the following functions.

Diagnosis mode	Description
Ecu Identification	Air bag diagnosis sensor unit ECU discriminated number (identification number) or part number is displayed. Air bag diagnosis sensor unit has individual ECU discriminated number (identification number) or part number based on model and equipment.
Self Diagnostic Result	The current self diagnosis results (also indicated with the number of air bag warning lamp blinks in the diagnosis mode) are displayed on CONSULT screen in real time. This refers to a malfunctioning part requiring repairs. Refer to SRC-16, "DTC Index" .
TROUBLE DIAG RECORD	With TROUBLE DIAG RECORD, diagnosis results previously erased by a reset operation can be displayed on CONSULT screen.

DIAGNOSIS SYSTEM (AIR BAG)

< SYSTEM DESCRIPTION >

Diagnosis mode	Description
SELF-DIAG RESULT [CAN]	This item is displayed, but cannot be supported.
Cause of Warning Lamp	It displays the cause of warning lamp illumination that is not recorded in memory.

CAUSE OF WARNING LAMP

The SRS air bag warning lamp blinks when the ignition voltage is a voltage value (9V or less, or 16 V or more) at which the SRS air bag cannot operate normally. After blinking, if the ignition voltage returns to normal, SRS air bag warning lamp turns OFF. DTC memory is not performed while the abnormal ignition voltage is detected. The mode cannot be switched to trouble diagnosis mode when the ignition switch is operated. "No DTC" is displayed when checking "Self-diagnosis result" using CONSULT.

NOTE:

- SRS air bag warning may blink when the condition is out of detection area* of the satellite sensor in door. The system is normal if SRS air bag warning lamp turns OFF after the condition returns within detection area of the satellite sensor in door.
- SRS air bag warning lamp blinks when the zero point reset is incomplete after replacing the occupant detection system control unit. (SRS air bag warning lamp turns OFF after the zero point reset is complete.)
- *: Pressure inside of door is excessively low and air bag system cannot be operated normally (example: altitude is approximately 4,000 m or more).

Display item	Display content	Actions by worker
IGN VOLT COND	The ignition voltage recognized by air bag system (air bag control unit and occupant detection system control unit) is displayed or a message stating that condition is out of detection range of satellite sensor in door is displayed. <ul style="list-style-type: none"> • OK: Normal • LOW: The ignition voltage is low, high, or out of detection range of satellite sensor in door 	Perform the check at an altitude of 4,000 m or less. <ul style="list-style-type: none"> • Check battery voltage if the ignition voltage status is displayed as "LOW". • Check battery voltage if the ignition voltage status is "OK" and the number of times detected is 1 or more. This is because an ignition voltage error may be detected in the past. NOTE: If battery voltage is normal, the cause may be that out of detection range of satellite sensor in door is detected.
IGN VOLT TIME	Total number of times is displayed, summing up the number of times ignition voltage error is detected and the number of times that out of detection range of satellite sensor in door is detected. (Detection record is erased and counter returns to "0" by "ERASE MEMORY" in "Self-diagnosis results" using CONSULT.)	
LOW V RECORDED	Number of times ignition switch ON is displayed after ignition voltage error or out of detection range of satellite sensor in door is detected. (Detection record is erased and counter returns to "0" by "ERASE MEMORY" in "Self-diagnosis results" using CONSULT.)	

DIAGNOSIS SYSTEM (OCCUPANT DETECTION SYSTEM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (OCCUPANT DETECTION SYSTEM)

CONSULT Function

INFOID:000000010122785

ZERO POINT RESET DESCRIPTION

This vehicle adopts occupant detection system with a weight detecting method. When replacing, or removing and installing passenger seat, always perform "Zero point reset" so that the vehicle recognizes zero point. If zero point reset is incomplete, occupant detection seat sensor does not operate normally.

WORK SUPPORT

Monitor item	Description
Zero point reset function	Perform zero point reset. Refer to SRC-37, "ZERO POINT RESET : Special Repair Requirement" .

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

DIAGNOSIS SENSOR UNIT

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

DIAGNOSIS SENSOR UNIT

DTC Index

INFOID:000000010876195

DTC	Diagnostic item	Number of times of warning lamp blinking in diagnosis mode		Reference page
		System display	Item display	
U1000-01	CAN COMM CIRCUIT	—	—	SRC-39. "Diagnosis Procedure"
U1010-49	CONTROL UNIT (CAN)	—	—	SRC-40. "Diagnosis Procedure"
B0001-00	DRIVER AIRBAG MODULE [SHORT]	Front air bag system	1	SRC-42. "Diagnosis Procedure"
B0001-09	DRIVER AIRBAG MODULE [SHORT]			
B0001-11	DRIVER AIRBAG MODULE [GND-SHORT]			
B0001-12	DRIVER AIRBAG MODULE [VB-SHORT]			
B0001-13	DRIVER AIRBAG MODULE [OPEN]			
B0001-1A	DRIVER AIRBAG MODULE [SHORT]			
B0002-00	DRIVER AIRBAG MODULE 2 [SHORT]	Front air bag system	1	SRC-46. "Diagnosis Procedure"
B0002-09	DRIVER AIRBAG MODULE 2 [SHORT]			
B0002-11	DRIVER AIRBAG MODULE 2 [GND-SHORT]			
B0002-12	DRIVER AIRBAG MODULE 2 [VB-SHORT]			
B0002-13	DRIVER AIRBAG MODULE 2 [OPEN]			
B0002-1A	DRIVER AIRBAG MODULE 2 [SHORT]			
B0010-09	ASSIST A/B MODULE [SHORT]	Front air bag system	2	SRC-50. "Diagnosis Procedure"
B0010-11	ASSIST A/B MODULE [GND-SHORT]			
B0010-12	ASSIST A/B MODULE [VB-SHORT]			
B0010-13	ASSIST A/B MODULE [OPEN]			
B0010-1A	ASSIST A/B MODULE [SHORT]			
B0011-09	ASSIST A/B MODULE 2 [SHORT]	Front air bag system	2	SRC-53. "Diagnosis Procedure"
B0011-11	ASSIST A/B MODULE 2 [GND-SHORT]			
B0011-12	ASSIST A/B MODULE 2 [VB-SHORT]			
B0011-13	ASSIST A/B MODULE 2 [OPEN]			
B0011-1A	ASSIST A/B MODULE 2 [SHORT]			
B0020-09	SIDE A/B MODULE LH [SHORT]	Side air bag system	1	SRC-56. "Diagnosis Procedure"
B0020-11	SIDE A/B MODULE LH [GND-SHORT]			
B0020-12	SIDE A/B MODULE LH [VB-SHORT]			
B0020-13	SIDE A/B MODULE LH [OPEN]			
B0020-1A	SIDE A/B MODULE LH [SHORT]			
B0021-09	CURTAIN A/B MODULE LH [SHORT]	Side air bag system	3	SRC-59. "Diagnosis Procedure"
B0021-11	CURTAIN A/B MODULE LH [GND-SHORT]			
B0021-12	CURTAIN A/B MODULE LH [VB-SHORT]			
B0021-13	CURTAIN A/B MODULE LH [OPEN]			
B0021-1A	CURTAIN A/B MODULE LH [SHORT]			

DIAGNOSIS SENSOR UNIT

< ECU DIAGNOSIS INFORMATION >

DTC	Diagnostic item	Number of times of warning lamp blinking in diagnosis mode		Reference page
		System display	Item display	
B0028-09	SIDE A/B MODULE RH [SHORT]	Side air bag system	2	SRC-62. "Diagnosis Procedure"
B0028-11	SIDE A/B MODULE RH [GND-SHORT]			
B0028-12	SIDE A/B MODULE RH [VB-SHORT]			
B0028-13	SIDE A/B MODULE RH [OPEN]			
B0028-1A	SIDE A/B MODULE RH [SHORT]			
B0029-09	CURTAIN A/B MODULE RH [SHORT]	Side air bag system	4	SRC-65. "Diagnosis Procedure"
B0029-11	CURTAIN A/B MODULE RH [GND-SHORT]			
B0029-12	CURTAIN A/B MODULE RH [VB-SHORT]			
B0029-13	CURTAIN A/B MODULE RH [OPEN]			
B0029-1A	CURTAIN A/B MODULE RH [SHORT]			
B0091-11	B-PILLAR SAT SEN LH [GND-SHORT]	Sensor system	2	SRC-68. "Diagnosis Procedure"
B0091-23	B-PILLAR SAT SEN LH [LOWER LIMIT ERR]			
B0091-24	B-PILLAR SAT SEN LH [UPPER LIMIT ERR]			
B0091-25	B-PILLAR SAT SEN LH [SELF-DIAG ERR]			
B0091-28	B-PILLAR SAT SEN LH [OFFSET ERR]			
B0091-81	B-PILLAR SAT SEN LH [COMM ERR]			
B0091-86	B-PILLAR SAT SEN LH [UNMATCH]			
B0091-88	B-PILLAR SAT SEN LH [OPEN]			
B0091-93	B-PILLAR SAT SEN LH [RESET]			
B0093-11	DOOR SATEL SENS LH [GND-SHORT]	Sensor system	6	SRC-71. "Diagnosis Procedure"
B0093-23	DOOR SATEL SENS LH [LOWER LIMIT ERR]			
B0093-24	DOOR SATEL SENS LH [UPPER LIMIT ERR]			
B0093-25	DOOR SATEL SENS LH [SELF-DIAG ERR]			
B0093-28	DOOR SATEL SENS LH [OFFSET ERR]			
B0093-81	DOOR SATEL SENS LH [COMM ERR]			
B0093-86	DOOR SATEL SENS LH [UNMATCH]			
B0093-88	DOOR SATEL SENS LH [OPEN]			
B0093-93	DOOR SATEL SENS LH [RESET]			
B0094-11	CRASH ZONE SENS [GND-SHORT]	Sensor system	1	SRC-74. "Diagnosis Procedure"
B0094-23	CRASH ZONE SENS [LOWER LIMIT ERR]			
B0094-24	CRASH ZONE SENS [UPPER LIMIT ERR]			
B0094-25	CRASH ZONE SENS [SELF-DIAG ERR]			
B0094-28	CRASH ZONE SENS [OFFSET ERR]			
B0094-81	CRASH ZONE SENS [COMM ERR]			
B0094-86	CRASH ZONE SENS [UNMATCH]			
B0094-88	CRASH ZONE SENS [OPEN]			
B0094-93	CRASH ZONE SENS [RESET]			

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

DIAGNOSIS SENSOR UNIT

< ECU DIAGNOSIS INFORMATION >

DTC	Diagnostic item	Number of times of warning lamp blinking in diagnosis mode		Reference page
		System display	Item display	
B0096-11	B-PILLAR SAT SEN RH [GND-SHORT]	Sensor system	3	SRC-77. "Diagnosis Procedure"
B0096-23	B-PILLAR SAT SEN RH [LOWER LIMIT ERR]			
B0096-24	B-PILLAR SAT SEN RH [UPPER LIMIT ERR]			
B0096-25	B-PILLAR SAT SEN RH [SELF-DIAG ERR]			
B0096-28	B-PILLAR SAT SEN RH [OFFSET ERR]			
B0096-81	B-PILLAR SAT SEN RH [COMM ERR]			
B0096-86	B-PILLAR SAT SEN RH [UNMATCH]			
B0096-88	B-PILLAR SAT SEN RH [OPEN]			
B0096-93	B-PILLAR SAT SEN RH [RESET]			
B0098-11	DOOR SATEL SENS RH [GND-SHORT]	Sensor system	7	SRC-80. "Diagnosis Procedure"
B0098-23	DOOR SATEL SENS RH [LOWER LIMIT ERR]			
B0098-24	DOOR SATEL SENS RH [UPPER LIMIT ERR]			
B0098-25	DOOR SATEL SENS RH [SELF-DIAG ERR]			
B0098-28	DOOR SATEL SENS RH [OFFSET ERR]			
B0098-81	DOOR SATEL SENS RH [COMM ERR]			
B0098-86	DOOR SATEL SENS RH [UNMATCH]			
B0098-88	DOOR SATEL SENS RH [OPEN]			
B0098-93	DOOR SATEL SENS RH [RESET]			
B00A0-00	OCCUPANT SENS [ABNOMAL VOLTAGE]	Air bag control unit system	4	SRC-83. "Diagnosis Procedure"
B00A0-02	OCCUPANT SENS [UNIT MALFUNC]			
B00A0-09	OCCUPANT SENS [UNIT MALFUNC]			
B00A0-04	OCCUPANT SENS C/U [UNIT MALFUNC]			
B00A0-83	OCCUPANT SENS C/U [COMM ERR]			
B00A0-86	OCCUPANT SENS C/U [COMM ERR]			
B00A0-87	OCCUPANT SENS C/U [COMM ERR]			
B00A0-88	OCCUPANT SENS C/U [COMM ERR]			
B00A0-8F	OCCUPANT SENS C/U [UNDEFINED]			
B00A0-93	OCCUPANT SENS C/U [RESET]			
B00D5-04	PASS A/B INDCTR CKT [UNIT MALFUNC]	Air bag control unit system	3	SRC-86. "Diagnosis Procedure"
B00D5-11	PASS A/B INDCTR CKT [GND-SHORT]			
B00D5-12	PASS A/B INDCTR CKT [VB-SHORT]			
B00D5-13	PASS A/B INDCTR CKT [OPEN]			
B00D5-15	PASS A/B INDCTR CKT [PWR-SHORT/OPEN]			
B1428-13	BUCKLE SW LH CIRCUIT [OPEN]	Air bag control unit system	8	SRC-89. "Diagnosis Procedure"
B1428-12	BUCKLE SW LH CIRCUIT [VB-SHORT]			
B1428-11	BUCKLE SW LH CIRCUIT [GND-SHORT]			
B1428-00	BUCKLE SW LH CIRCUIT [UNDEFINED]			
B1429-13	BUCKLE SW RH CIRCUIT [OPEN]		9	SRC-92. "Diagnosis Procedure"
B1429-12	BUCKLE SW RH CIRCUIT [VB-SHORT]			
B1429-11	BUCKLE SW RH CIRCUIT [GND-SHORT]			
B1429-00	BUCKLE SW RH CIRCUIT [UNDEFINED]			

DIAGNOSIS SENSOR UNIT

< ECU DIAGNOSIS INFORMATION >

DTC	Diagnostic item	Number of times of warning lamp blinking in diagnosis mode		Reference page	
		System display	Item display		
B1430-09	PRE-TEN FRONT LH [SHORT]	Front air bag system	3	SRC-96. "Diagnosis Procedure"	A
B1430-11	PRE-TEN FRONT LH [GND-SHORT]				B
B1430-12	PRE-TEN FRONT LH [VB-SHORT]				C
B1430-13	PRE-TEN FRONT LH [OPEN]				
B1430-1A	PRE-TEN FRONT LH [SHORT]				
B1431-09	PRE-TEN FRONT RH [SHORT]	Front air bag system	4	SRC-99. "Diagnosis Procedure"	D
B1431-11	PRE-TEN FRONT RH [GND-SHORT]				E
B1431-12	PRE-TEN FRONT RH [VB-SHORT]				
B1431-13	PRE-TEN FRONT RH [OPEN]				
B1431-1A	PRE-TEN FRONT RH [SHORT]				
B1432-09	PRE-TEN FRONT LH [SHORT]	Front air bag system	4	SRC-96. "Diagnosis Procedure"	F
B1432-11	PRE-TEN FRONT LH [GND-SHORT]				G
B1432-12	PRE-TEN FRONT LH [VB-SHORT]				
B1432-13	PRE-TEN FRONT LH [OPEN]				
B1432-1A	PRE-TEN FRONT LH [SHORT]				
B142A-16	IGNITION VOLTAGE [VB-LOW]	—	—	SRC-102. "Diagnosis Procedure"	SRC
B142A-17	IGNITION VOLTAGE [VB-HIGH]	—	—	SRC-102. "Diagnosis Procedure"	
B1400-00	CONTROL UNIT [UNIT MALFUNC]	Air bag control unit system	2	SRC-105. "Diagnosis Procedure"	I
B1401-00					J
B1402-00					
B1403-00					
B1404-00					
B1405-00					
B1406-00					
B1407-00					
B1408-00					
B1409-00					
B1410-00					
B1411-00					
B1412-00					
B1413-00					
B1414-00					
B1415-00					
B1416-00					
B1417-00					
B1418-00					
B1419-00					
B1420-00					
B1421-00	FRONTAL COLLISION	Air bag control unit system	1	SRC-103. "Diagnosis Procedure"	
B1422-00	SIDE COLLISION	Air bag control unit system	1	SRC-103. "Diagnosis Procedure"	

DIAGNOSIS SENSOR UNIT

< ECU DIAGNOSIS INFORMATION >

Flash Code Index

INFOID:000000010931414


WARNING LAMP FLASH CODE CHART

How to read flash codes

1. Put the vehicle in Diagnosis Mode. Refer to [SRC-11, "On Board Diagnosis Function"](#).
2. All codes are preceded by a seven second "holding" flash.
3. Identify how many primary flashes are displayed as well as the length of each primary flash.
4. Refer to the tables and examples below to determine which SRS subsystem the code belongs to.
5. Count the short secondary flashes that follow the primary flashes.
6. Match the correct flashing pattern to the malfunctioning component and perform the Diagnosis Procedure.


Refer to the illustrations below for an example of each flashing pattern.

Front subsystem

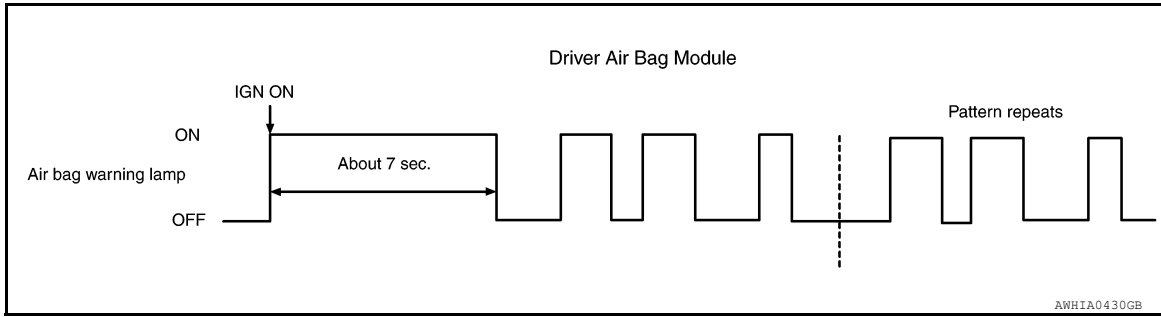

Flashes (Primary)	Flash Length (seconds)	Flashes (Secondary)	Malfunctioning Component or Circuit	Reference
2	1.5	1	Driver air bag module	SRC-42, "Diagnosis Procedure"
		2	Passenger air bag module	SRC-50, "Diagnosis Procedure"
		3	Front LH seat belt pre-tensioner (shoulder)	SRC-96, "Diagnosis Procedure"
		4	Front RH seat belt pre-tensioner (shoulder)	SRC-99, "Diagnosis Procedure"
		5	Front LH seat belt pre-tensioner (lap)	SRC-96, "Diagnosis Procedure"
		6	Front RH seat belt pre-tensioner (lap)	SRC-99, "Diagnosis Procedure"

Side subsystem

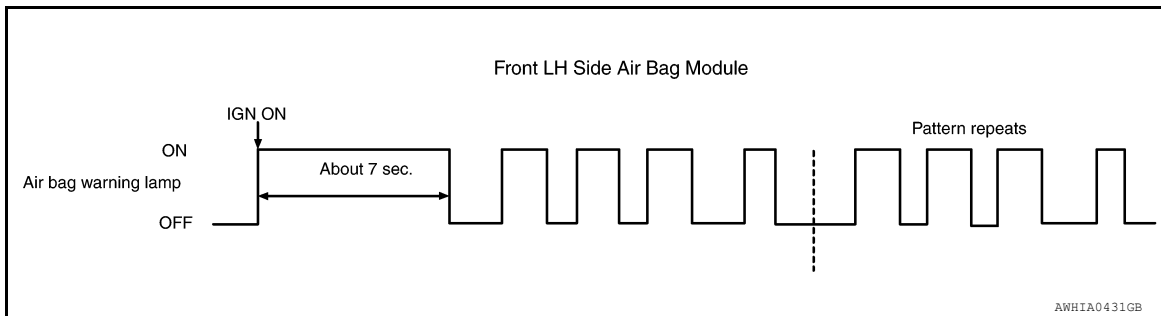


DIAGNOSIS SENSOR UNIT

< ECU DIAGNOSIS INFORMATION >


Flashes (Primary)	Flash Length (seconds)	Flashes (Secondary)	Malfunctioning Component or Circuit	Reference
3	1.5	1	Front LH side air bag module	SRC-56, "Diagnosis Procedure"
		2	Front RH side air bag module	SRC-65, "Diagnosis Procedure"
		3	LH side curtain air bag module	SRC-59, "Diagnosis Procedure"
		4	RH side curtain air bag module	SRC-62, "Diagnosis Procedure"

Air bag subsystem

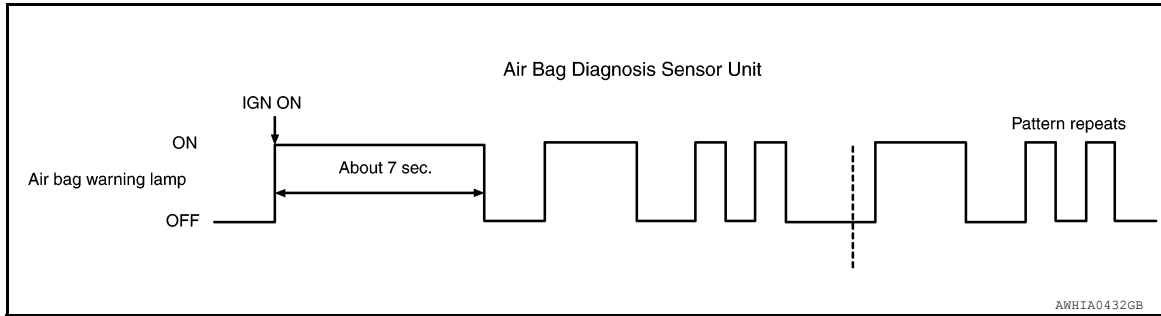

Flashes (Primary)	Flash Length (seconds)	Flashes (Secondary)	Malfunctioning Component or Circuit	Reference
1	3	1	Collision detection	SRC-103, "Diagnosis Procedure"
		2	Air bag diagnosis sensor unit	SRC-105, "Diagnosis Procedure"
		3	Passenger air bag OFF indicator	SRC-86, "Diagnosis Procedure"
		4	Occupant classification system	SRC-83, "Diagnosis Procedure"

Sensor subsystem

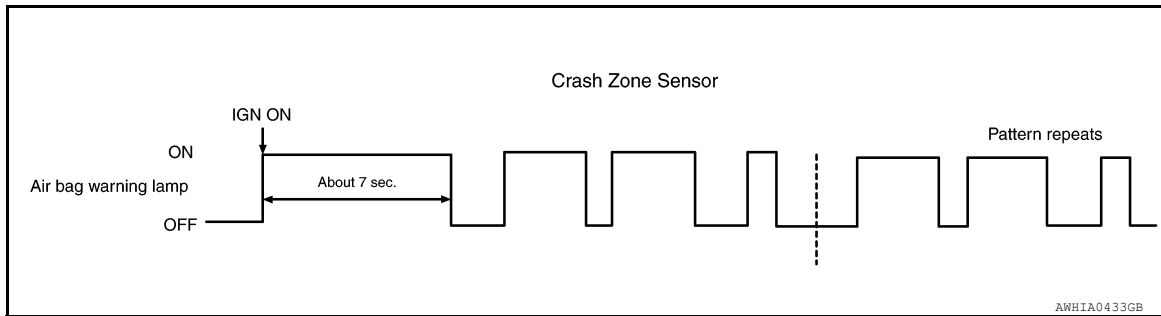


Flashes (Primary)	Flash Length (seconds)	Flashes (Secondary)	Malfunctioning Component or Circuit	Reference
2	3	1	Crash zone sensor	SRC-74, "Diagnosis Procedure"
		2	Front side air bag satellite sensor LH	SRC-68, "Diagnosis Procedure"
		3	Front side air bag satellite sensor RH	SRC-77, "Diagnosis Procedure"
		6	Front door satellite sensor LH	SRC-71, "Diagnosis Procedure"
		7	Front door satellite sensor RH	SRC-80, "Diagnosis Procedure"
		8	Seat belt buckle switch LH	SRC-89, "Diagnosis Procedure"
		9	Seat belt buckle switch RH	SRC-92, "Diagnosis Procedure"

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

SRS AIR BAG CONTROL SYSTEM - CONNECTORS

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Color	WHITE



Connector No.	M8
Connector Name	FRONT PASSENGER AIR BAG MODULE
Connector Color	BLACK



Connector No.	M9
Connector Name	FRONT PASSENGER AIR BAG MODULE
Connector Color	ORANGE



Terminal No.	Color of Wire	Signal Name
6	L	-
7	GR	-
14	P	-


Terminal No.	Color of Wire	Signal Name
1	Y	-
2	Y	-

Terminal No.	Color of Wire	Signal Name
3	Y	-
4	Y	-

Connector No.	M10
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Color	WHITE

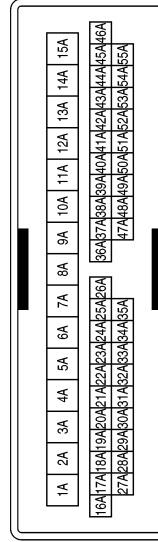

Terminal No.	Color of Wire	Signal Name
24A	Y	-
25A	BR	-
26A	SHIELD	-

Terminal No.	Color of Wire	Signal Name
24C	R	-
25C	G	-
26C	SHIELD	-

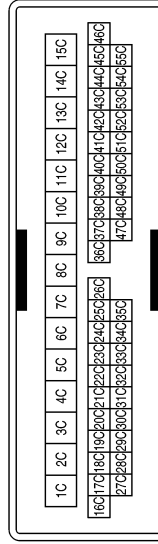



AAHIA0276GB

SRS AIR BAG SYSTEM


< WIRING DIAGRAM >

Connector No.	M34
Connector Name	COMBINATION METER
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
3	GR	IGN
5	B	GND1 (ILL)
6	B	GND2 (POWER)
20	LG	AS SEATBELT W/L
27	R	A/BAG WARN
40	W	BUCKLE SW FR DR

Connector No.	M25
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
58	W	SHOCK DET SIG

Connector No.	M21
Connector Name	WIRE TO WIRE
Connector Color	WHITE






Terminal No.	Color of Wire	Signal Name
29	W	-

Connector No.	M46
Connector Name	JOINT CONNECTOR-M07
Connector Color	ORANGE






Terminal No.	Color of Wire	Signal Name
7	BR	-
8	GR	-
9	BR	-
10	BR	-

Connector No.	M41
Connector Name	JOINT CONNECTOR-M06
Connector Color	BLUE

Terminal No.	Color of Wire	Signal Name
5	L	-
9	L	-
15	P	-
19	P	-

Connector No.	M40
Connector Name	JOINT CONNECTOR-M05
Connector Color	BLUE

Terminal No.	Color of Wire	Signal Name
8	L	-
10	L	-
18	P	-
20	P	-


AAHIA0277GB

A
B
C
D
E
F
G
SRC
I
J
K
L
M
N
O
P

SRS AIR BAG SYSTEM


< WIRING DIAGRAM >

Connector No.	M50
Connector Name	JOINT CONNECTOR-M03
Connector Color	PINK



Terminal No.	Color of Wire	Signal Name
1	B	-
4	B	-

Connector No.	M61
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Color	YELLOW

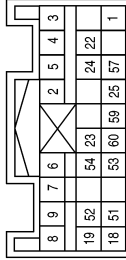

Terminal No.	Color of Wire	Signal Name
1	BR	IGN
2	B	GND
3	Y	DR1 (+)
4	Y	DR1 (-), DR2 (-)
5	Y	DR2 (+)
6	Y	AS1 (+)
7	Y	AS1 (-)
8	Y	AS2 (+)
9	Y	AS2 (-)

Terminal No.	Color of Wire	Signal Name
18	R	ECZS 1 (+)
19	G	ECZS 1 (-)
22	SHIELD	GND
23	R	AIRBAG W/L
24	LG	SEATBELT REMINDER / TELLTALE LAMP-B
25	R	TELLTALE LAMP-A
51	Y	RH DOOR SATELITE SENSOR (+)
52	BR	RH DOOR SATELITE SENSOR (-)
53	G	LH DOOR SATELITE SENSOR (+)
54	R	LH DOOR SATELITE SENSOR (-)
57	W	DEPLOYMENT INFORMATION OUTPUT
59	L	CAN-H
60	P	CAN-L

Connector No.	M63
Connector Name	FRONT PASSENGER AIR BAG OFF INDICATOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R	-
2	B	-
3	GR	-

AAHIA0278GB

SRS AIR BAG SYSTEM


< WIRING DIAGRAM >

Connector No.	M108
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Color	YELLOW




Terminal No.	Color of Wire	Signal Name
28	Y	-
29	Y	-
30	Y	-

Connector No.	M79
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
12	BR	-

Connector No.	M77
Connector Name	WIRE TO WIRE
Connector Color	WHITE

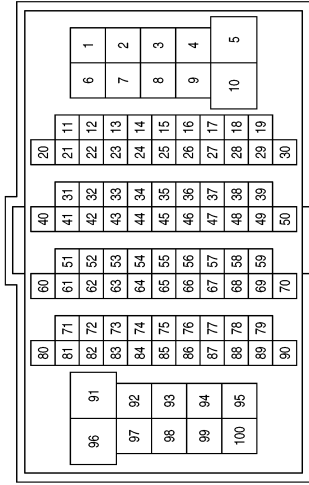

Terminal No.	Color of Wire	Signal Name
88	R	-
89	G	-
90	SHIELD	-

Connector No.	E33
Connector Name	CRASH ZONE SENSOR
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	B	-
2	W	-

Connector No.	M148
Connector Name	DRIVER AIR BAG MODULE
Connector Color	ORANGE



Terminal No.	Color of Wire	Signal Name
9	R	DR2 (-)
12	G	DR2 (+)

Connector No.	M147
Connector Name	DRIVER AIR BAG MODULE
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
10	Y	DR1 (+)
11	L	DR1 (-)

AAHIA0279GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SRC

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

Connector No.	B3
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Terminal No.	Color of Wire	Signal Name
29	R	-


Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7		
8	9	10	11	12	13	14	15	16

Terminal No.	Color of Wire	Signal Name
3	GR	-

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Color	WHITE

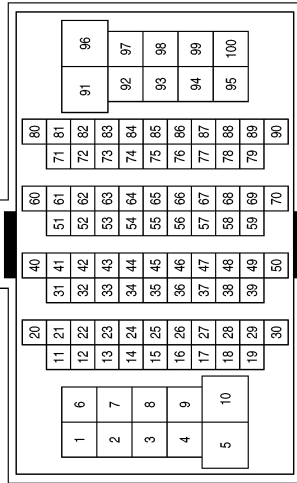

Terminal No.	Color of Wire	Signal Name
88	B	-
89	W	-
90	SHIELD	-

Connector No.	B5
Connector Name	WIRE TO WIRE
Connector Color	WHITE



4	3	2	1
---	---	---	---

Terminal No.	Color of Wire	Signal Name
1	GR	-
2	B	-
3	R	-
4	BR	-

Connector No.	B4
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32


Terminal No.	Color of Wire	Signal Name
12	BR	-

AAHIA0280GB

SRS AIR BAG SYSTEM


< WIRING DIAGRAM >

Connector No.	B18
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	GR	-

Connector No.	B14
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Color	YELLOW

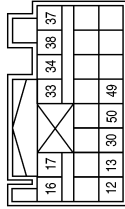

Terminal No.	Color of Wire	Signal Name
12	P	P-LH1 (+)
13	V	P-LH1 (-)
16	Y	SQUIB1-LH (+)
17	Y	SQUIB1-LH (-)
30	LG	LH SEAT BELT BUCKLE SWITCH (+)
33	Y	S-LH (+)
34	L	S-LH (-)
37	G	C-LH (+), HD-LH1 (+)
38	R	C-LH (-), HD-LH1 (-)
49	V	LH B-PILLAR SATELITE SENSOR (+)
50	LG	LH B-PILLAR SATELITE SENSOR (-)

Connector No.	B13
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Color	YELLOW

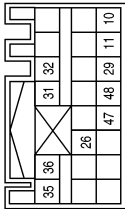

Terminal No.	Color of Wire	Signal Name
10	Y	P-RH1 (+)
11	LG	P-RH1 (-)
26	R	ODS INPUT
29	LG	SEAT BELT BUCKLE SWITCH (+)
31	Y	S-RH (+)
32	Y/R	S-RH (-)
35	Y	C-RH (+), HD-RH1 (+)
36	LG	C-RH (-), HD-RH1 (-)
47	G	RH B-PILLAR SATELITE SENSOR (+)
48	R	RH B-PILLAR SATELITE SENSOR (-)

Connector No.	B30
Connector Name	RH SIDE AIR BAG (SATELLITE) SENSOR
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	G	-
2	R	-

Connector No.	B29
Connector Name	FRONT RH SEAT BELT PRE-TENSIONER
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	LG	-

Connector No.	B28
Connector Name	FRONT RH SIDE AIR BAG MODULE
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	Y/R	-

AAHIA0281GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SRC

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

Connector No.	B36
Connector Name	FRONT LH SEAT BELT PRE-TENSIONER
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	P	-
2	V	-

Connector No.	B35
Connector Name	FRONT LH SIDE AIR BAG MODULE
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	L	-

Connector No.	B34
Connector Name	SEAT BELT BUCKLE SWITCH (PASSENGER SIDE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	B	-

Connector No.	B52
Connector Name	LAP SEAT BELT PRE-TENSIONER (DRIVER SIDE)
Connector Color	ORANGE



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	Y	-

Connector No.	B50
Connector Name	SEAT BELT BUCKLE SWITCH (DRIVER SIDE)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	R	-
2	B	-

Connector No.	B37
Connector Name	LH SIDE AIR BAG (SATELLITE) SENSOR
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	V	-
2	LG	-

AAHIA0282GB

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

Connector No.	B56
Connector Name	RH SIDE FRONT CURTAIN AIR BAG MODULE
Connector Color	YELLOW




Terminal No.	Color of Wire	Signal Name
1	Y	-
2	LG	-

Connector No.	B72
Connector Name	LH SIDE FRONT CURTAIN AIR BAG MODULE
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	G	-
2	R	-

Connector No.	B85
Connector Name	JOINT CONNECTOR-B02
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
18	LG	-
19	R	-
20	R	-

Connector No.	B350
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	GR	-
2	B	-
3	R	-
4	BR	-

Connector No.	B351
Connector Name	OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	-	-
2	B	GND
3	LG	LOAD SENSOR FRONT INNER SIGNAL
4	R/B	LOAD SENSOR FRONT INNER GND

Terminal No.	Color of Wire	Signal Name
5	-	-
6	-	-
7	GR	K-LINE
8	-	-
9	W	IGN
10	-	-
11	-	-
12	BR/W	ACU COMM
13	-	-
14	-	-
15	W/L	LOAD SENSOR REAR INNER GND
16	SB	LOAD SENSOR REAR INNER SIGNAL
17	R	LOAD SENSOR FRONT INNER VCC
18	-	-
19	Y	LOAD SENSOR REAR INNER VCC
20	-	-

AAHIA0283GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SRC

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >

Connector No.	D22
Connector Name	WIRE TO WIRE
Connector Color	WHITE

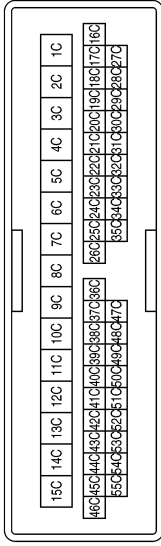

Terminal No.	Color of Wire	Signal Name
24C	R	-
25C	G	-
26C	SHIELD	-

Connector No.	B353
Connector Name	OCCUPANT CLASSIFICATION SYSTEM SENSOR (REAR INNER)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	W/L	-
2	SB	-
3	Y	-

Connector No.	B352
Connector Name	OCCUPANT CLASSIFICATION SYSTEM SENSOR (FRONT INNER)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	R/B	-
2	LG	-
3	R	-

Connector No.	D25
Connector Name	FRONT DOOR SATELLITE SENSOR LH
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	G	-
2	R	-

AAHIA0284GB

SRS AIR BAG SYSTEM

< WIRING DIAGRAM >


A
B
C
D
E
F
G
SRC
I
J
K
L
M
N
O
P

Connector No.	D103
Connector Name	FRONT DOOR SATELLITE SENSOR RH
Connector Color	YELLOW



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	BR	-

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Color	WHITE

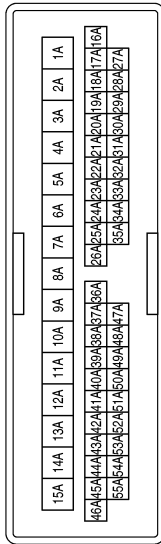

Terminal No.	Color of Wire	Signal Name
24A	Y	-
25A	BR	-
26A	SHIELD	-

AAHIA0285GB

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000010122788

OVERALL SEQUENCE

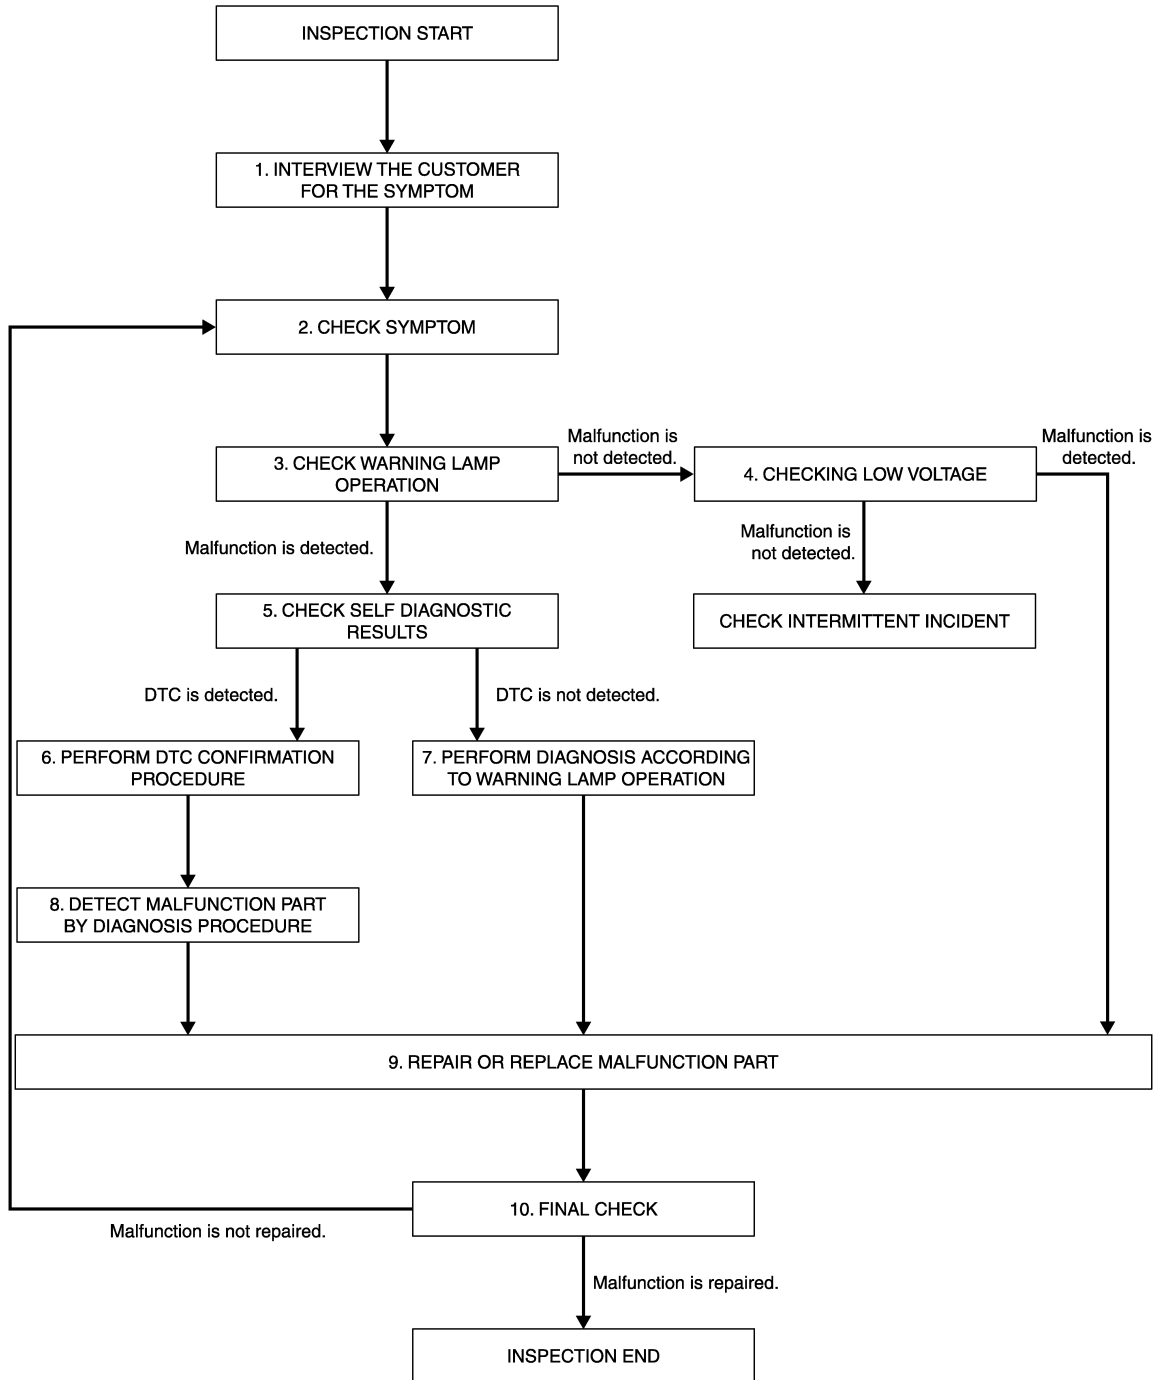

JMHIA1324GB

DETAILED FLOW

Revision: May 2014

SRC-34

2014 LEAF

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

1. INTERVIEW THE CUSTOMER FOR THE SYMPTOM

Interview the customer for the symptom (the condition and the environment when the incident/malfunction occurs).

>> GO TO 2.

2. CHECK SYMPTOM

Check the symptom from the customer information.

>> GO TO 3.

3. CHECK WARNING LAMP OPERATION

Check air bag warning lamp operation in the user mode. Refer to [SRC-11, "On Board Diagnosis Function"](#).

Are any malfunction detected?

YES >> GO TO 5.

NO >> GO TO 4.

4. CHECK LOW VOLTAGE

Check low voltage with CONSULT. Refer to [SRC-13, "CONSULT Function"](#).

Are any malfunction detected?

YES >> GO TO 9.

NO >> Check intermittent incident. Refer to [GI-53, "Intermittent Incident"](#).

5. CHECK SELF DIAGNOSTIC RESULTS

Check "Self diagnostic result" with CONSULT or diagnosis mode.

If it is impossible to switch to diagnosis mode, follow the same procedure that DTC is not detected.

NOTE:

Perform the following procedure if DTC is detected.

- Record DTC (Print them out with CONSULT.)
- Erase self diagnostic result.
- Study the relationship between the malfunction that DTC or air bag warning lamp indicates and the symptom that the customer describes.
- Check related service bulletins for information.

Is DTC detected?

YES >> GO TO 6.

NO >> GO TO 7.

6. PERFORM DTC CONFIRMATION PROCEDURE

Perform "Self Diagnostic Result" for the DTC.

>> GO TO 8.

7. PERFORM DIAGNOSIS ACCORDING TO WARNING LAMP OPERATION

1. Check air bag warning lamp operation in the user mode. Refer to [SRC-11, "On Board Diagnosis Function"](#).
2. Perform Diagnosis Procedure for the air bag warning lamp operation. Refer to [SRC-11, "On Board Diagnosis Function"](#) (USER MODE).

>> GO TO 9.

8. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the DTC.

>> GO TO 9.

9. REPAIR OR REPLACE THE MALFUNCTION PART

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

Repair or replace the malfunctioning part.

>> GO TO 10.

10.FINAL CHECK

Check self diagnostic result and air bag warning lamp operation in the user mode.

Is the malfunction repaired?

YES >> Inspection End.

NO >> GO TO 2.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000010122789

WARNING:

Always perform zero point reset using CONSULT when removing and installing the front passenger seat or servicing the occupant classification system (OCS). If zero point reset is not performed, the OCS may not operate normally, which may increase the risk of serious injury in a collision.

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000010122790

WORK PROCEDURE WHEN REPLACING OCS CONTROL UNIT

1.PERFORM ZERO POINT RESET

Perform zero point reset. Refer to [SRC-37, "ZERO POINT RESET : Special Repair Requirement"](#).

>> Inspection End.

ZERO POINT RESET

ZERO POINT RESET : Description

INFOID:000000010122791

Zero point reset is an initializing procedure for the OCS (weight) sensors that must be performed using CONSULT when removing and installing passenger seat or servicing the OCS system. If zero point reset is not performed, the initialization is incomplete and OCS may not operate normally.

NOTE:

- When reinstalling the passenger seat, the initial value for the OCS sensors may change, and the OCS may not operate normally.
- When zero point reset is performed after removal and installation of passenger seat, CONSULT displays "complete".

ZERO POINT RESET : Special Repair Requirement

INFOID:000000010122792

1.PERFORM ZERO POINT RESET

1. Perform preliminary checks:

NOTE:

- Level the vehicle
- Minimize vibrations near the vehicle
- Remove any objects on passenger seat
- Do not touch the vehicle during zero point reset

2. Select START on "Zero point reset function" from, "Work support" of "OCCUPANT DETECTION".
3. "Zero point reset" starts.

>> GO TO 2.

2.CONFIRM RESET

1. Check that "Complete" is displayed on "Zero point reset current status".

CAUTION:

- "Complete" may be displayed if the seat has been reinstalled, or "zero point reset" has already been performed.
- "Incomplete" may be displayed if a new seat is installed.
- Air bag warning lamp blinks in user mode if zero point reset is "incomplete".

Is zero point reset status "complete"?

YES >> Print out "Zero point reset current status" screen. Inspection end.

NO >> Recheck the preliminary check items and perform zero point reset again.

INTERMITTENT INCIDENT

< BASIC INSPECTION >

INTERMITTENT INCIDENT

Inspection Procedure

INFOID:000000010122793

INTERMITTENT TROUBLE

An intermittent incident may have occurred in the past but is not being detected currently. This DTC will not be detected on SELF-DIAG [CURRENT], but may be viewed on SELF-DIAG [PAST] if the DTC has not been erased.

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

DTC Description

INFOID:0000000010876518

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H-line, CAN L-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-37, "CAN COMMUNICATION SYSTEM : CAN Communication Signal Chart"](#).

DTC LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
U1000-01	CAN COMM CIRCUIT [CAN communication circuit]	When air bag diagnosis sensor unit cannot communicate CAN communication signal continuously for 2 seconds or more.

POSSIBLE CAUSE

CAN communication system

FAIL-SAFE

—

Diagnosis Procedure

INFOID:0000000010876519

1.PERFORM SELF DIAGNOSTIC

1. Turn power switch ON and wait for 2 seconds or more.
2. Check "SELF-DIAG [CAN]" in "special function" of "AIR BAG" using CONSULT.

Is DTC "U1000-01" displayed?

- YES >> Refer to [SRC-39, "DTC Description"](#).
NO >> Refer to [GI-53, "Intermittent Incident"](#).

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

DTC Description

INFOID:000000010876965

DTC LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
U1010-49	CONTROL UNIT (CAN) [Control unit (CAN)]	Air bag diagnosis sensor unit detected internal CAN communication circuit malfunction.

POSSIBLE CAUSE

Air bag diagnosis sensor unit

FAIL-SAFE

—

Diagnosis Procedure

INFOID:000000010876966

1. REPLACE AIR BAG DIAGNOSIS SENSOR UNIT

When DTC "U1010-49" is detected, replace air bag diagnosis sensor unit.

>> Replace air bag diagnosis sensor unit. Refer to [SR-38. "Removal and Installation"](#).

B0001 DRIVER AIR BAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

B0001 DRIVER AIR BAG MODULE

DTC Description

INFOID:000000010876967

DTC B0001 DRIVER AIRBAG MODULE

The driver air bag module is dual stage and wired to the air bag diagnosis sensor unit through the spiral cable. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the driver air bag module including the spiral cable.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B0001-00	[SHORT]	Driver air bag module circuits are shorted to each other (including the spiral cable)
B0001-09	[SHORT]	Driver air bag module circuits are shorted to each other (including the spiral cable)
B0001-11	[GND-SHORT]	Driver air bag module circuit is shorted to ground (including the spiral cable)
B0001-12	[VB-SHORT]	Driver air bag module circuit is shorted to power supply circuit (including the spiral cable)
B0001-13	[OPEN]	Driver air bag module circuit is open (including the spiral cable)
B0001-1A	[SHORT]	Driver air bag module circuits are shorted to each other (including the spiral cable)

POSSIBLE CAUSE

[B0001-00, B0001-09, B0001-1A]

- Connection malfunction or short circuit of harness and connector
- Internal malfunction of driver air bag module
- Internal malfunction of air bag diagnosis sensor unit

[B0001-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of driver air bag module
- Internal malfunction of air bag diagnosis sensor unit

[B0001-12]

- Connection malfunction or short circuit to power supply of harness and connector
- Internal malfunction of driver air bag module
- Internal malfunction of air bag diagnosis sensor unit

[B0001-13]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of driver air bag module
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-42, "Diagnosis Procedure"](#).

B0001 DRIVER AIR BAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2.ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-42, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.

2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-42, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000010876968

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait at least 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.HARNES CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2

NO >> Perform one of the following repairs:

- Visible damage: Replace the harness.
- Loose terminal: Secure the terminal.
- Poor connection: Secure the connection.

2.WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 3

NO >> Replace the harness.

3.CHECK DTC

Perform each inspection according to the displayed DTC.

Which DTC is displayed?

[B0001-13]>>GO TO 4.

[B0001-12]>>GO TO 7.

[B0001-11]>>GO TO 5.

[B0001-00, B0001-09, B0001-1A]>> GO TO 6.

B0001 DRIVER AIR BAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

4.CHECK SPIRAL CABLE CIRCUIT 1

1. Turn ignition switch OFF.
2. Disconnect driver air bag module connector and spiral cable harness connector.
3. Check continuity between driver air bag module harness and spiral cable connector.

Driver air bag module		Spiral cable		Continuity
Connector	Terminal	Connector	Terminal	
M147	10	M108	28	Yes
	11		30	

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace spiral cable. Refer to [SR-23, "Removal and Installation"](#).

5.CHECK SPIRAL CABLE CIRCUIT 2

1. Turn ignition switch OFF.
2. Disconnect driver air bag module connector and combination switch (spiral cable) connector.
3. Check continuity between spiral cable terminal and ground.

Spiral cable		Ground	Continuity
Connector	Terminal		
M108	28		No
	30		

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace spiral cable. Refer to [SR-23, "Removal and Installation"](#).

6.CHECK SPIRAL CABLE CIRCUIT 3

1. Turn ignition switch OFF.
2. Disconnect driver air bag module harness connector and spiral cable harness connector.
3. Check continuity between spiral cable terminals.

Spiral Cable		Continuity
Terminal		
28	30	No

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace spiral cable. Refer to [SR-23, "Removal and Installation"](#).

7.REPLACE SPIRAL CABLE

1. Replace spiral cable. Refer to [SR-23, "Removal and Installation"](#).
2. Perform DTC confirmation procedure. Refer to [SRC-41, "DTC Description"](#).

Is DTC detected?

YES >> GO TO 8.

NO >> Inspection End.

8.REPLACE AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Perform DTC confirmation procedure. Refer to [SRC-41, "DTC Description"](#).

Is DTC detected?

YES >> GO TO 9.

NO >> Inspection End.

9.REPLACE DRIVER AIR BAG MODULE

B0001 DRIVER AIR BAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

1. Replace driver air bag module. Refer to [SR-20, "Removal and Installation"](#).
2. Perform DTC confirmation procedure. Refer to [SRC-41, "DTC Description"](#).

Is DTC detected?

- YES >> GO TO 1.
NO >> Inspection End.

B0002 DRIVER AIR BAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

B0002 DRIVER AIR BAG MODULE

DTC Description

INFOID:000000010876969

DTC B0002 DRIVER AIRBAG MODULE

The driver air bag module is dual stage and wired to the air bag diagnosis sensor unit through the spiral cable. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the driver air bag module including the spiral cable.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B0002-00	[SHORT]	Driver air bag module circuits are shorted to each other (including the spiral cable)
B0002-09	[SHORT]	Driver air bag module circuits are shorted to each other (including the spiral cable)
B0002-11	[GND-SHORT]	Driver air bag module circuit is shorted to ground (including the spiral cable)
B0002-12	[VB-SHORT]	Driver air bag module circuit is shorted to power supply circuit (including the spiral cable)
B0002-13	[OPEN]	Driver air bag module circuit is open (including the spiral cable)
B0002-1A	[SHORT]	Driver air bag module circuits are shorted to each other (including the spiral cable)

POSSIBLE CAUSE

[B0002-00, B0002-09, B0002-1A]

- Connection malfunction or short circuit of harness and connector
- Internal malfunction of driver air bag module
- Internal malfunction of air bag diagnosis sensor unit

[B0002-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of driver air bag module
- Internal malfunction of air bag diagnosis sensor unit

[B0002-12]

- Connection malfunction or short circuit to power supply of harness and connector
- Internal malfunction of driver air bag module
- Internal malfunction of air bag diagnosis sensor unit

[B0002-13]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of driver air bag module
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-46, "Diagnosis Procedure"](#).

B0002 DRIVER AIR BAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2.ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-46, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.

2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-46, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000010876970

WARNING:

- Before servicing, turn ignition switch OFF, disconnect battery negative terminal, and wait at least 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1.HARNES CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2

NO >> Perform one of the following repairs:

- Visible damage: Replace the harness.
- Loose terminal: Secure the terminal.
- Poor connection: Secure the connection.

2.WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 3

NO >> Replace the harness.

3.CHECK DTC

Perform each inspection according to the displayed DTC.

Which DTC is displayed?

[B0002-13]>>GO TO 4.

[B0002-12]>>GO TO 7.

[B0002-11]>>GO TO 5.

[B0002-00, B0002-09, B0002-1A]>> GO TO 6.

B0002 DRIVER AIR BAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

4.CHECK SPIRAL CABLE CIRCUIT 1

1. Turn ignition switch OFF.
2. Disconnect driver air bag module connector and spiral cable harness connector.
3. Check continuity between driver air bag module harness and spiral cable connector.

Driver air bag module		Spiral cable		Continuity
Connector	Terminal	Connector	Terminal	
M148	9	M108	30	Yes
	12		29	

Is the inspection result normal?

YES >> GO TO 9.

NO >> Replace spiral cable. Refer to [SR-23, "Removal and Installation"](#).

5.CHECK SPIRAL CABLE CIRCUIT 2

1. Turn ignition switch OFF.
2. Disconnect driver air bag module connector and combination switch (spiral cable) connector.
3. Check continuity between spiral cable terminal and ground.

Spiral cable		Ground	Continuity
Connector	Terminal		
M108	29		No
	30		

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace spiral cable. Refer to [SR-23, "Removal and Installation"](#).

6.CHECK SPIRAL CABLE CIRCUIT 3

1. Turn ignition switch OFF.
2. Disconnect driver air bag module harness connector and spiral cable harness connector.
3. Check continuity between spiral cable terminals.

Spiral Cable		Continuity
Terminal		
29	30	No

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace spiral cable. Refer to [SR-23, "Removal and Installation"](#).

7.REPLACE SPIRAL CABLE

1. Replace spiral cable. Refer to [SR-23, "Removal and Installation"](#).
2. Perform DTC confirmation procedure. Refer to [SRC-45, "DTC Description"](#).

Is DTC detected?

YES >> GO TO 8.

NO >> Inspection End.

8.REPLACE AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Perform DTC confirmation procedure. Refer to [SRC-45, "DTC Description"](#).

Is DTC detected?

YES >> GO TO 9.

NO >> Inspection End.

9.REPLACE DRIVER AIR BAG MODULE

B0002 DRIVER AIR BAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

1. Replace driver air bag module. Refer to [SR-20, "Removal and Installation"](#).
2. Perform DTC confirmation procedure. Refer to [SRC-45, "DTC Description"](#).

Is DTC detected?

- YES >> GO TO 1.
NO >> Inspection End.

B0010 PASSENGER AIR BAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

B0010 PASSENGER AIR BAG MODULE

Description

INFOID:000000010876971

DTC B0010 PASSENGER AIR BAG MODULE

The passenger air bag module is dual stage and wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the passenger air bag module.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:000000010876972

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B0010-09		[SHORT] Passenger air bag module circuits are shorted to each other
B0010-11	ASSIST A/B MODULE [Passenger Frontal Stage 1 Deployment Control (Subfault)]	[GND-SHORT] Passenger air bag module circuit is shorted to ground
B0010-12		[VB-SHORT] Passenger air bag module circuit is shorted to power supply circuit
B0010-13		[OPEN] Passenger air bag module circuit is open
B0010-1A		[SHORT] Passenger air bag module circuits are shorted to each other

POSSIBLE CAUSE

[B0010-09, B0010-1A]

- Connection malfunction or short circuit of harness and connector
- Internal malfunction of passenger air bag module
- Internal malfunction of air bag diagnosis sensor unit

[B0010-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of passenger air bag module
- Internal malfunction of air bag diagnosis sensor unit

[B0010-12]

- Connection malfunction or short circuit to power supply of harness and connector
- Internal malfunction of passenger air bag module
- Internal malfunction of air bag diagnosis sensor unit

[B0010-13]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of passenger air bag module
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-50, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

B0010 PASSENGER AIR BAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

Can the DTC be erased?

- YES >> Inspection End.
NO >> Refer to [SRC-50, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-50, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000010876973

NOTE:

Follow the procedures in numerical order when repairing malfunctioning parts. Confirm whether malfunction is eliminated using air bag warning lamp each time repair is finished. If malfunction is still observed, proceed to the next step. When malfunction is eliminated, further repair work is not required.

1.HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 3.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

3.WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace the harness.

4.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

B0010 PASSENGER AIR BAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53. "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38. "Removal and Installation"](#).

2. Turn ignition switch ON.

3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. FRONT PASSENGER AIR BAG MODULE

1. Replace the front passenger air bag module. Refer to [SR-26. "Removal and Installation"](#).

2. Turn ignition switch ON.

3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7. RELATED HARNESS

Replace the related harness.

>> END

A

B

C

D

E

F

G

SRC

I

J

K

L

M

N

O

P

B0011 PASSENGER AIR BAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

B0011 PASSENGER AIR BAG MODULE

Description

INFOID:000000010876974

DTC B0011 PASSENGER AIR BAG MODULE

The passenger air bag module is dual stage and wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the passenger air bag module.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:000000010876975

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B0011-09		[SHORT] Passenger air bag module circuits are shorted to each other
B0011-11	ASSIST A/B MODULE [Passenger Frontal Stage 2 Deployment Control (Subfault)]	[GND-SHORT] Passenger air bag module circuit is shorted to ground
B0011-12		[VB-SHORT] Passenger air bag module circuit is shorted to power supply circuit
B0011-13		[OPEN] Passenger air bag module circuit is open
B0011-1A		[SHORT] Passenger air bag module circuits are shorted to each other

POSSIBLE CAUSE

[B0011-09, B0011-1A]

- Connection malfunction or short circuit of harness and connector
- Internal malfunction of passenger air bag module
- Internal malfunction of air bag diagnosis sensor unit

[B0011-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of passenger air bag module
- Internal malfunction of air bag diagnosis sensor unit

[B0011-12]

- Connection malfunction or short circuit to power supply of harness and connector
- Internal malfunction of passenger air bag module
- Internal malfunction of air bag diagnosis sensor unit

[B0011-13]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of passenger air bag module
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-53, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

B0011 PASSENGER AIR BAG MODULE

< DTC/CIRCUIT DIAGNOSIS >

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53. "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. FRONT PASSENGER AIR BAG MODULE

1. Replace the front passenger air bag module. Refer to [SR-26. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7. RELATED HARNESS

Replace the related harness.

>> **END**

B0020 SIDE AIRBAG MODULE LH

< DTC/CIRCUIT DIAGNOSIS >

B0020 SIDE AIRBAG MODULE LH

Description

INFOID:000000010876977

DTC B0020 FRONT LH SIDE AIR BAG MODULE

The front LH side air bag module is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the front LH side air bag module.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:000000010876978

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B0020-09	SIDE A/B MODULE LH [Left Side Airbag Deployment Control (Subfault)]	[SHORT] Side air bag module LH circuits are shorted to each other
B0020-11		[GND-SHORT] Side air bag module LH circuit is shorted to ground
B0020-12		[VB-SHORT] Side air bag module LH circuit is shorted to power supply circuit
B0020-13		[OPEN] Side air bag module LH circuit is open
B0020-1A		[SHORT] Side air bag module LH circuits are shorted to each other

POSSIBLE CAUSE

[B0020-09, B0020-1A]

- Connection malfunction or short circuit of harness and connector
- Internal malfunction of side air bag module LH
- Internal malfunction of air bag diagnosis sensor unit

[B0020-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of side air bag module LH
- Internal malfunction of air bag diagnosis sensor unit

[B0020-12]

- Connection malfunction or short circuit to power supply of harness and connector
- Internal malfunction of side air bag module LH
- Internal malfunction of air bag diagnosis sensor unit

[B0020-13]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of side air bag module LH
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-56, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

B0020 SIDE AIRBAG MODULE LH

< DTC/CIRCUIT DIAGNOSIS >

Can the DTC be erased?

- YES >> Inspection End.
NO >> Refer to [SRC-56, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-56, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000010876979

NOTE:

Follow the procedures in numerical order when repairing malfunctioning parts. Confirm whether malfunction is eliminated using air bag warning lamp each time repair is finished. If malfunction is still observed, proceed to the next step. When malfunction is eliminated, further repair work is not required.

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 3.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

B0020 SIDE AIRBAG MODULE LH

< DTC/CIRCUIT DIAGNOSIS >

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53. "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38. "Removal and Installation"](#).

2. Turn ignition switch ON.

3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. SIDE AIR BAG MODULE LH

1. Replace the side air bag module LH. Refer to [SR-32. "Removal and Installation"](#).

2. Turn ignition switch ON.

3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7. RELATED HARNESS

Replace the related harness.

>> END

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

B0021 SIDE CURTAIN AIR BAG MODULE LH

< DTC/CIRCUIT DIAGNOSIS >

B0021 SIDE CURTAIN AIR BAG MODULE LH

Description

INFOID:000000010876980

DTC B0021 LH SIDE CURTAIN AIR BAG MODULE

The LH side curtain air bag module is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the LH side curtain air bag module.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:000000010876981

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition	
B0021-09	CURTAIN A/B MODULE LH [Left Curtain Deployment Control 1 (Subfault)]	[SHORT]	Curtain air bag module LH circuits are shorted to each other
B0021-11		[GND-SHORT]	Curtain air bag module LH circuit is shorted to ground
B0021-12		[VB-SHORT]	Curtain air bag module LH circuit is shorted to power supply circuit
B0021-13		[OPEN]	Curtain air bag module LH circuit is open
B0021-1A		[SHORT]	Curtain air bag module LH circuits are shorted to each other

POSSIBLE CAUSE

[B0021-09, B0021-1A]

- Connection malfunction or short circuit of harness and connector
- Internal malfunction of curtain air bag module LH
- Internal malfunction of air bag diagnosis sensor unit

[B0021-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of curtain air bag module LH
- Internal malfunction of air bag diagnosis sensor unit

[B0021-12]

- Connection malfunction or short circuit to power supply of harness and connector
- Internal malfunction of curtain air bag module LH
- Internal malfunction of air bag diagnosis sensor unit

[B0021-13]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of curtain air bag module LH
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-59, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

B0021 SIDE CURTAIN AIR BAG MODULE LH

< DTC/CIRCUIT DIAGNOSIS >

Can the DTC be erased?

- YES >> Inspection End.
NO >> Refer to [SRC-59, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-59, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000010876982

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 3.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 5.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

B0021 SIDE CURTAIN AIR BAG MODULE LH

< DTC/CIRCUIT DIAGNOSIS >

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. SIDE CURTAIN AIR BAG MODULE LH

1. Replace the side curtain air bag module LH. Refer to [SR-29. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7. RELATED HARNESS

Replace the related harness.

>> **END**

B0028 SIDE AIRBAG MODULE RH

< DTC/CIRCUIT DIAGNOSIS >

B0028 SIDE AIRBAG MODULE RH

Description

INFOID:000000010876983

DTC B0028 FRONT RH SIDE AIR BAG MODULE

The front RH side air bag module is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the front RH side air bag module.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:000000010876984

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B0028-09	SIDE A/B MODULE RH [Right Side Airbag Deployment Control (Subfault)]	[SHORT] Side air bag module RH circuits are shorted to each other
B0028-11		[GND-SHORT] Side air bag module RH circuit is shorted to ground
B0028-12		[VB-SHORT] Side air bag module RH circuit is shorted to power supply circuit
B0028-13		[OPEN] Side air bag module RH circuit is open
B0028-1A		[SHORT] Side air bag module RH circuits are shorted to each other

POSSIBLE CAUSE

SRC

[B0028-09, B0028-1A]

- Connection malfunction or short circuit of harness and connector
- Internal malfunction of side air bag module RH
- Internal malfunction of air bag diagnosis sensor unit

[B0028-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of side air bag module RH
- Internal malfunction of air bag diagnosis sensor unit

[B0028-12]

- Connection malfunction or short circuit to power supply of harness and connector
- Internal malfunction of side air bag module RH
- Internal malfunction of air bag diagnosis sensor unit

[B0028-13]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of side air bag module RH
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-62, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

B0028 SIDE AIRBAG MODULE RH

< DTC/CIRCUIT DIAGNOSIS >

Can the DTC be erased?

- YES >> Inspection End.
NO >> Refer to [SRC-62, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-62, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000010876985

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 3.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 5.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

B0028 SIDE AIRBAG MODULE RH

< DTC/CIRCUIT DIAGNOSIS >

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 6.
NO >> Clear DTC. Inspection End.

6.SIDE AIR BAG MODULE RH

1. Replace the side air bag module RH.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 7.
NO >> Clear DTC. Inspection End.

7.RELATED HARNESS

Replace the related harness.

>> END

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

B0029 SIDE CURTAIN AIR BAG MODULE RH

< DTC/CIRCUIT DIAGNOSIS >

B0029 SIDE CURTAIN AIR BAG MODULE RH

Description

INFOID:000000010876986

DTC B0029 RH SIDE CURTAIN AIR BAG MODULE

The RH side curtain air bag module is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the RH side curtain air bag module.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:000000010876987

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B0029-09	[SHORT]	Curtain air bag module RH circuits are shorted to each other
B0029-11	[GND-SHORT]	Curtain air bag module RH circuit is shorted to ground
B0029-12	[VB-SHORT]	Curtain air bag module RH circuit is shorted to power supply circuit
B0029-13	[OPEN]	Curtain air bag module RH circuit is open
B0029-1A	[SHORT]	Curtain air bag module RH circuits are shorted to each other

POSSIBLE CAUSE

[B0029-09, B0029-1A]

- Connection malfunction or short circuit of harness and connector
- Internal malfunction of curtain air bag module RH
- Internal malfunction of air bag diagnosis sensor unit

[B0029-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of curtain air bag module RH
- Internal malfunction of air bag diagnosis sensor unit

[B0029-12]

- Connection malfunction or short circuit to power supply of harness and connector
- Internal malfunction of curtain air bag module RH
- Internal malfunction of air bag diagnosis sensor unit

[B0029-13]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of curtain air bag module RH
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-65, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

B0029 SIDE CURTAIN AIR BAG MODULE RH

< DTC/CIRCUIT DIAGNOSIS >

Can the DTC be erased?

- YES >> Inspection End.
NO >> Refer to [SRC-65, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-65, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000010876988

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 3.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 5.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

B0029 SIDE CURTAIN AIR BAG MODULE RH

< DTC/CIRCUIT DIAGNOSIS >

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. SIDE CURTAIN AIR BAG MODULE RH

1. Replace the side curtain air bag module RH. Refer to [SR-29, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7. RELATED HARNESS

Replace the related harness.

>> **END**

B0091 FRONT SIDE AIR BAG SATELLITE SENSOR LH

< DTC/CIRCUIT DIAGNOSIS >

B0091 FRONT SIDE AIR BAG SATELLITE SENSOR LH

Description

INFOID:000000010876989

DTC B0091 FRONT SATELLITE SENSOR LH

The front side air bag satellite sensor LH is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor the front side air bag satellite sensor LH for internal failures and its circuits for communication errors.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:000000010876990

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B0091-11	[GND-SHORT]	B-pillar satellite sensor LH circuit is shorted to ground
B0091-23	[LOWER LIMIT ERR]	Lower limit value malfunction of B-pillar satellite sensor LH
B0091-24	[UPPER LIMIT ERR]	Upper limit value malfunction of B-pillar satellite sensor LH
B0091-25	[SELF-DIAG ERR]	Diagnosis malfunction of B-pillar satellite sensor LH
B0091-28	[OFFSET ERR]	Offset malfunction of B-pillar satellite sensor LH
B0091-81	[COMM ERR]	Communication malfunction of B-pillar satellite sensor LH
B0091-86	[UNMATCH]	B-pillar satellite sensor LH is out of the specified specification
B0091-88	[OPEN]	B-pillar satellite sensor LH circuit is open
B0091-93	[RESET]	Reset malfunction of B-pillar satellite sensor LH

POSSIBLE CAUSE

[B0091-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of B-pillar satellite sensor LH
- Internal malfunction of air bag diagnosis sensor unit

[B0091-23, B0091-24, B0091-25, B0091-28]

- Internal malfunction of B-pillar satellite sensor LH
- Internal malfunction of air bag diagnosis sensor unit

[B0091-81, B0091-93]

- Connection malfunction of harness or connector
- Internal malfunction of B-pillar satellite sensor LH
- Internal malfunction of air bag diagnosis sensor unit

[B0091-86]

- Air bag diagnosis sensor unit and B-pillar satellite sensor LH is different from the part specified

[B0091-88]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of B-pillar satellite sensor LH
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.

B0091 FRONT SIDE AIR BAG SATELLITE SENSOR LH

< DTC/CIRCUIT DIAGNOSIS >

2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-68. "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2.ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-68. "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.

2. Check the air bag warning lamp status. Refer to [SRC-11. "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-68. "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000010876991

1.HARNES CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

- NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2.CONFIRM DTC

1. Reconnect all harness connectors.

2. Turn ignition switch ON.

3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53. "Intermittent Incident"](#).

3.WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4.CONFIRM DTC

B0091 FRONT SIDE AIR BAG SATELLITE SENSOR LH

< DTC/CIRCUIT DIAGNOSIS >

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

5.SATELLITE SENSOR LH

1. Replace the satellite sensor LH. Refer to [SR-35, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6.AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7.RELATED HARNESS

Replace the related harness.

>> **END**

A
B
C
D
E
F
G
SRC
I
J
K
L
M
N
O
P

B0093 FRONT DOOR SATELLITE SENSOR LH

< DTC/CIRCUIT DIAGNOSIS >

B0093 FRONT DOOR SATELLITE SENSOR LH

Description

INFOID:0000000010876992

DTC B0093 FRONT DOOR SATELLITE SENSOR LH

The front door satellite sensor LH is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor the front door satellite sensor LH for internal failures and its circuits for communication errors.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:0000000010876993

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B0093-11	[GND-SHORT]	Front door satellite sensor LH circuit is shorted to ground
B0093-23	[LOWER LIMIT ERR]	Lower limit value malfunction of front door satellite sensor LH
B0093-24	[UPPER LIMIT ERR]	Upper limit value malfunction of front door satellite sensor LH
B0093-25	[SELF-DIAG ERR]	Diagnosis malfunction of front door satellite sensor LH
B0093-28	[OFFSET ERR]	Offset malfunction of front door satellite sensor LH
B0093-81	[COMM ERR]	Communication malfunction of front door satellite sensor LH
B0093-93	[RESET]	Reset malfunction of front door satellite sensor LH
B0093-86	[UNMATCH]	Front door satellite sensor LH is out of the specified specification
B0093-88	[OPEN]	Front door satellite sensor LH circuit is open

POSSIBLE CAUSE

[B0093-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of front door satellite sensor LH
- Internal malfunction of air bag diagnosis sensor unit

[B0093-23, B0093-24, B0093-25, B0093-28]

- Internal malfunction of front door satellite sensor LH
- Internal malfunction of air bag diagnosis sensor unit

[B0093-81, B0093-93]

- Connection malfunction of harness or connector
- Internal malfunction of front door satellite sensor LH
- Internal malfunction of air bag diagnosis sensor unit

[B0093-86]

- Air bag diagnosis sensor unit and front door satellite sensor LH is different from the part specified

[B0093-88]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of front door satellite sensor LH
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

B0093 FRONT DOOR SATELLITE SENSOR LH

< DTC/CIRCUIT DIAGNOSIS >

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-71, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2.ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-71, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.

2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-71, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010876994

1.HARNES CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform one of the following repairs:

- Visible damage: Replace the harness.
- Loose terminal: Secure the terminal.
- Poor connection: Secure the connection.

2.CONFIRM DTC

1. Reconnect all harness connectors.

2. Turn ignition switch ON.

3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3.WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4.CONFIRM DTC

1. Reconnect all harness connectors.

B0093 FRONT DOOR SATELLITE SENSOR LH

< DTC/CIRCUIT DIAGNOSIS >

2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 5.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

5.FRONT DOOR SATELLITE SENSOR LH

1. Replace the front door satellite sensor LH. Refer to [SR-35, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 6.
NO >> Clear DTC. Inspection End.

6.AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 7.
NO >> Clear DTC. Inspection End.

7.RELATED HARNESS

Replace the related harness.

>> **END**

B0094 CRASH ZONE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

B0094 CRASH ZONE SENSOR

Description

INFOID:000000010876995

DTC B0094 CRASH ZONE SENSOR

The crash zone sensor is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the crash zone sensor.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:000000010876996

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B0094-11	[GND-SHORT]	Crash zone sensor circuit is shorted to ground
B0094-23	[LOWER LIMIT ERR]	Lower limit value malfunction of crash zone sensor
B0094-24	[UPPER LIMIT ERR]	Upper limit value malfunction of crash zone sensor
B0094-25	[SELF-DIAG ERR]	Diagnosis malfunction of crash zone sensor
B0094-28	[OFFSET ERR]	Offset malfunction of crash zone sensor
B0094-81	[COMM ERR]	Communication malfunction of crash zone sensor
B0094-86	[UNMATCH]	Crash zone sensor is out of the specified specification
B0094-88	[OPEN]	Crash zone sensor circuit is open
B0094-93	[RESET]	Reset malfunction of crash zone sensor

POSSIBLE CAUSE

[B0094-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of crash zone sensor
- Internal malfunction of air bag diagnosis sensor unit

[B0094-23, B0094-24, B0094-25, B0094-28]

- Internal malfunction of crash zone sensor
- Internal malfunction of air bag diagnosis sensor unit

[B0094-81, B0094-93]

- Connection malfunction of harness or connector
- Internal malfunction of crash zone sensor
- Internal malfunction of air bag diagnosis sensor unit

[B0094-86]

- Air bag diagnosis sensor unit and crash zone sensor is different from the part specified

[B0094-88]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of crash zone sensor
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

B0094 CRASH ZONE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-74, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2.ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-74, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.

2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-74, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010876997

1.HARNES CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform one of the following repairs:

- Visible damage: Replace the harness.
- Loose terminal: Secure the terminal.
- Poor connection: Secure the connection.

2.CONFIRM DTC

1. Reconnect all harness connectors.

2. Turn ignition switch ON.

3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3.WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4.CONFIRM DTC

1. Reconnect all harness connectors.

B0094 CRASH ZONE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 5.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. CRASH ZONE SENSOR

1. Replace the crash zone sensor. Refer to [SR-33, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 6.
NO >> Clear DTC. Inspection End.

6. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 7.
NO >> Clear DTC. Inspection End.

7. RELATED HARNESS

Replace the related harness.

>> **END**

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

B0096 FRONT SIDE AIR BAG SATELLITE SENSOR RH

< DTC/CIRCUIT DIAGNOSIS >

B0096 FRONT SIDE AIR BAG SATELLITE SENSOR RH

Description

INFOID:000000010876998

DTC B0096 FRONT SATELLITE SENSOR RH

The front side air bag satellite sensor RH is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor the front side air bag satellite sensor RH for internal failures and its circuits for communication errors.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:000000010876999

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B0096-11	[GND-SHORT]	B-pillar satellite sensor RH circuit is shorted to ground
B0096-23	[LOWER LIMIT ERR]	Lower limit value malfunction of B-pillar satellite sensor RH
B0096-24	[UPPER LIMIT ERR]	Upper limit value malfunction of B-pillar satellite sensor RH
B0096-25	[SELF-DIAG ERR]	Diagnosis malfunction of B-pillar satellite sensor RH
B0096-28	[OFFSET ERR]	Offset malfunction of B-pillar satellite sensor RH
B0096-81	[COMM ERR]	Communication malfunction of B-pillar satellite sensor RH
B0096-86	[UNMATCH]	B-pillar satellite sensor RH is out of the specified specification
B0096-88	[OPEN]	B-pillar satellite sensor RH circuit is open
B0096-93	[RESET]	Reset malfunction of B-pillar satellite sensor RH

POSSIBLE CAUSE

[B0096-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of B-pillar satellite sensor RH
- Internal malfunction of air bag diagnosis sensor unit

[B0096-23, B0096-24, B0096-25, B0096-28]

- Internal malfunction of B-pillar satellite sensor RH
- Internal malfunction of air bag diagnosis sensor unit

[B0096-81, B0096-93]

- Connection malfunction of harness or connector
- Internal malfunction of B-pillar satellite sensor RH
- Internal malfunction of air bag diagnosis sensor unit

[B0096-86]

- Air bag diagnosis sensor unit and B-pillar satellite sensor RH is different from the part specified

[B0096-88]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of B-pillar satellite sensor RH
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.

B0096 FRONT SIDE AIR BAG SATELLITE SENSOR RH

< DTC/CIRCUIT DIAGNOSIS >

2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-77. "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2.ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-77. "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.

2. Check the air bag warning lamp status. Refer to [SRC-11. "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-77. "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010877000

SRC

1.HARNES CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

- NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2.CONFIRM DTC

1. Reconnect all harness connectors.

2. Turn ignition switch ON.

3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53. "Intermittent Incident"](#).

3.WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4.CONFIRM DTC

B0096 FRONT SIDE AIR BAG SATELLITE SENSOR RH

< DTC/CIRCUIT DIAGNOSIS >

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

5.SATELLITE SENSOR RH

1. Replace the satellite sensor RH. Refer to [SR-35, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6.AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7.RELATED HARNESS

Replace the related harness.

>> **END**

B0098 FRONT DOOR SATELLITE SENSOR RH

< DTC/CIRCUIT DIAGNOSIS >

B0098 FRONT DOOR SATELLITE SENSOR RH

Description

INFOID:000000010877001

DTC B0098 FRONT DOOR SATELLITE SENSOR RH

The front door satellite sensor RH is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor the front door satellite sensor RH for internal failures and its circuits for communication errors.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:000000010877002

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B0098-11	[GND-SHORT]	Front door satellite sensor RH circuit is shorted to ground
B0098-23	[LOWER LIMIT ERR]	Lower limit value malfunction of front door satellite sensor RH
B0098-24	[UPPER LIMIT ERR]	Upper limit value malfunction of front door satellite sensor RH
B0098-25	[SELF-DIAG ERR]	Diagnosis malfunction of front door satellite sensor RH
B0098-28	[OFFSET ERR]	Offset malfunction of front door satellite sensor RH
B0098-81	[COMM ERR]	Communication malfunction of front door satellite sensor RH
B0098-86	[UNMATCH]	Front door satellite sensor RH is out of the specified specification
B0098-88	[OPEN]	Front door satellite sensor RH circuit is open
B0098-93	[RESET]	Reset malfunction of front door satellite sensor RH

POSSIBLE CAUSE

[B0098-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of front door satellite sensor RH
- Internal malfunction of air bag diagnosis sensor unit

[B0098-23, B0098-24, B0098-25, B0098-28]

- Internal malfunction of front door satellite sensor RH
- Internal malfunction of air bag diagnosis sensor unit

[B0098-81, B0098-93]

- Connection malfunction of harness or connector
- Internal malfunction of front door satellite sensor RH
- Internal malfunction of air bag diagnosis sensor unit

[B0098-86]

- Air bag diagnosis sensor unit and front door satellite sensor RH is different from the part specified

[B0098-88]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of front door satellite sensor RH
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the DTC using CONSULT.

B0098 FRONT DOOR SATELLITE SENSOR RH

< DTC/CIRCUIT DIAGNOSIS >

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-80, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2.ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-80, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.

2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS does not enter the diagnosis mode if no malfunction is detected in the user mode.

Is the DTC detected?

YES >> Refer to [SRC-80, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010877003

NOTE:

Follow the procedures in numerical order when repairing malfunctioning parts. Confirm whether malfunction is eliminated using air bag warning lamp each time repair is finished. If malfunction is still observed, proceed to the next step. When malfunction is eliminated, further repair work is not required.

1.HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform one of the following repairs:

- Visible damage: Replace the harness.
- Loose terminal: Secure the terminal.
- Poor connection: Secure the connection.

2.CONFIRM DTC

1. Reconnect all harness connectors.

2. Turn ignition switch ON.

3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3.WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

B0098 FRONT DOOR SATELLITE SENSOR RH

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 4.
NO >> Replace the harness.

4.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 5.
NO >> Refer to [GI-53. "Intermittent Incident"](#).

5.FRONT DOOR SATELLITE SENSOR RH

1. Replace the front door satellite sensor RH. Refer to [SR-35. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 6.
NO >> Clear DTC. Inspection End.

6.AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 7.
NO >> Clear DTC. Inspection End.

7.RELATED HARNESS

Replace the related harness.

>> END

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

B00A0 OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

B00A0 OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT

Description

INFOID:000000010877004

DTC B00A0 OCCUPANT CLASSIFICATION SYSTEM (OCS)

The OCS control unit is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor the OCS for failures and interruptions in communication between the OCS control unit and the air bag diagnosis sensor unit.

PART LOCATION

Refer to [SRC-6. "Component Parts Location"](#).

DTC Description

INFOID:000000010877005

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)		DTC detecting condition
B00A0-00	OCCUPANT SENS [Occupant Classification System (Subfault)]	[ABNORMAL VOLTAGE]	Power supply malfunction of occupant detection sensor
B00A0-02		[UNIT MALFUNC]	Malfunction of occupant detection sensor
B00A0-09		[UNIT MALFUNC]	Malfunction of occupant detection sensor
B00A0-04	OCCUPANT SENS C/U [Occupant Classification System (Subfault)]	[UNIT MALFUNC]	Malfunction of occupant detection sensor control unit
B00A0-83		[COMM ERR]	<ul style="list-style-type: none">• Communication malfunction of occupant detection sensor control unit• Communication blank of occupant detection sensor control unit
B00A0-86		[COMM ERR]	<ul style="list-style-type: none">• Communication malfunction of occupant detection sensor control unit• Communication blank of occupant detection sensor control unit
B00A0-87		[COMM ERR]	<ul style="list-style-type: none">• Communication malfunction of occupant detection sensor control unit• Communication blank of occupant detection sensor control unit
B00A0-88		[COMM ERR]	<ul style="list-style-type: none">• Communication malfunction of occupant detection sensor control unit• Communication blank of occupant detection sensor control unit
B00A0-8F		[UNDEFINED]	Undefined status of occupant detection sensor control unit
B00A0-93		[RESET]	Reset malfunction of occupant detection sensor control unit

POSSIBLE CAUSE

OCCUPANT SENS

- [B00A0-00]
 - Connection malfunction or short circuit to power supply of harness or connector
 - Internal malfunction of occupant detection sensor
 - Internal malfunction of air bag diagnosis sensor unit
- [B00A0-02, B00A0-09]
 - Connection malfunction of harness and connector
 - Internal malfunction of occupant detection sensor
 - Internal malfunction of air bag diagnosis sensor unit

OCCUPANT SENS C/U

- [B00A0-04, B00A0-83, B00A0-86, B00A0-87, B00A0-88, B00A0-8F]
 - Connection malfunction or open circuit of harness and connector
 - Internal malfunction of occupant detection sensor control unit
 - Internal malfunction of air bag diagnosis sensor unit

B00A0 OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

- [B00A0-93]
- Connection malfunction of harness and connector
- Internal malfunction of occupant detection sensor control unit
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

DTC CONFIRMATION PROCEDURE (With CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-83, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2.ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-83, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS does not enter the diagnosis mode if no malfunction is detected in the user mode.

Is the DTC detected?

YES >> Refer to [SRC-83, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010944825

1.HARNES CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis unit to the end component (including any in-line connectors)

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform the following repairs:

- Visible damage: Replace the harness.
- Loose terminal: Secure the terminal.
- Poor connection: Secure the connection.

2.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

B00A0 OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

3. WIRING HARNESS

Check the wiring harness for visible damage

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor to the end component (including and in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. REPLACE OCS CONTROL UNIT AND SENSORS

1. Replace the OCS control unit and sensors. Refer to [SR-42, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7. RELATED HARNESS

Replace the related harness

>> **END.**

B00D5 FRONT PASSENGER AIR BAG OFF INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

B00D5 FRONT PASSENGER AIR BAG OFF INDICATOR

Description

INFOID:000000010877007

DTC B00D5 FRONT PASSENGER AIR BAG OFF INDICATOR

The front passenger air bag off indicator is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit monitors the front passenger air bag off indicator and circuit for failures.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:000000010877008

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B00D5-04	PASS A/B INDCTR CKT [Restraint System Passenger Disable Indicator (Sub-fault)]	[UNIT MALFUNC] Malfunction in front passenger air bag OFF indicator circuit
B00D5-11		[GND-SHORT] Front passenger air bag OFF indicator circuit is shorted to ground
B00D5-12		[VB-SHORT] Front passenger air bag OFF indicator circuit is shorted to power supply circuit
B00D5-13		[OPEN] Front passenger air bag OFF indicator circuit is open
B00D5-15		[PWE-SHORT/OPEN] Front passenger air bag OFF indicator circuit is open or shorted to power supply circuit

POSSIBLE CAUSE

[B00D5-04]

- Internal malfunction of front passenger air bag OFF indicator
- Internal malfunction of air bag diagnosis sensor unit

[B00D5-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of front passenger air bag OFF indicator
- Internal malfunction of air bag diagnosis sensor unit

[B00D5-12]

- Connection malfunction or short circuit to power supply of harness and connector
- Internal malfunction of front passenger air bag OFF indicator
- Internal malfunction of air bag diagnosis sensor unit

[B00D5-13]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of front passenger air bag OFF indicator
- Internal malfunction of air bag diagnosis sensor unit

[B00D5-15]

- Connection malfunction or short circuit to power supply of harness and connector
- Connection malfunction or open circuit of harness and connector
- Internal malfunction of front passenger air bag OFF indicator
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the DTC using CONSULT.

B00D5 FRONT PASSENGER AIR BAG OFF INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-86, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2.ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-86, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.

2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS does not enter the diagnosis mode if no malfunction is detected in the user mode.

Is the DTC detected?

YES >> Refer to [SRC-86, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010877009

1.HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform one of the following repairs:

- Visible damage: Replace the harness.
- Loose terminal: Secure the terminal.
- Poor connection: Secure the connection.

2.CONFIRM DTC

1. Reconnect all harness connectors.

2. Turn ignition switch ON.

3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3.WIRING HARNESS

Check the wiring harness for visible damage^{NOTE}.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4.CONFIRM DTC

1. Reconnect all harness connectors.

B00D5 FRONT PASSENGER AIR BAG OFF INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 5.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. PASSENGER AIR BAG OFF INDICATOR

1. Replace the passenger air bag off indicator. Refer to [SR-44, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 6.
NO >> Clear DTC. Inspection End.

6. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 7.
NO >> Clear DTC. Inspection End.

7. RELATED HARNESS

Replace the related harness.

>> **END**

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

B1428 SEAT BELT BUCKLE SWITCH LH

< DTC/CIRCUIT DIAGNOSIS >

B1428 SEAT BELT BUCKLE SWITCH LH

Description

INFOID:000000010877010

DTC B1428 SEAT BELT BUCKLE SWITCH LH

The air bag diagnosis sensor unit monitors the seat belt buckle switch LH status. If the control unit detects an open or short condition in the circuit, it will set the DTC.

PART LOCATION

Refer to [SRC-6. "Component Parts Location"](#).

DTC Description

INFOID:000000010877011

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B1428-13	[OPEN]	Seat belt buckle switch LH circuit is open.
B1428-12	[VB-SHORT]	Seat belt buckle switch LH circuit is shorted to a power supply circuit.
B1428-11	[GND-SHORT]	Seat belt buckle switch LH circuit is shorted to ground.
B1428-00	[UNDEFINED]	Seat belt buckle switch LH circuit is malfunctioning.

POSSIBLE CAUSE

[B1428-13]

- Connection malfunction or open circuit of harness or connector
- Internal malfunction of seat belt buckle switch LH

[B1428-12]

- Connection malfunction or short circuit to power supply of harness and connector
- Internal malfunction of seat belt buckle switch LH

[B1428-11]

- Connection malfunction or short circuit to ground of harness or connector
- Internal malfunction of seat belt buckle switch LH

[B1428-00]

- Internal malfunction of seat belt buckle switch LH

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-89. "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-89. "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

B1428 SEAT BELT BUCKLE SWITCH LH

< DTC/CIRCUIT DIAGNOSIS >

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-89, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010877012

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Perform one of the following repairs:
 - Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 3
NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 5.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. SEAT BELT BUCKLE SWITCH LH

1. Replace the seat belt buckle switch LH. Refer to [SB-14, "SEAT BELT BUCKLE : Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

B1428 SEAT BELT BUCKLE SWITCH LH

< DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 6.
NO >> Clear DTC. Inspection End.

6. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.
NO >> Clear DTC. Inspection End.

7. RELATED HARNESS

Replace the related harness.

>> **END**

B1429 SEAT BELT BUCKLE SWITCH RH

< DTC/CIRCUIT DIAGNOSIS >

B1429 SEAT BELT BUCKLE SWITCH RH

Description

INFOID:000000010877013

DTC B1429 SEAT BELT BUCKLE SWITCH RH

The air bag diagnosis sensor unit monitors the seat belt buckle switch RH status. If the control unit detects an open or short condition in the circuit, it will set the DTC.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Logic

INFOID:000000010877014

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B1429-13	[OPEN]	Seat belt buckle switch RH circuit is open.
B1429-12	[VB-SHORT]	Seat belt buckle switch RH circuit is shorted to a power supply circuit.
B1429-11	[GND-SHORT]	Seat belt buckle switch RH circuit is shorted to ground.
B1429-00	[UNDEFINED]	Seat belt buckle switch RH circuit is malfunctioning.

POSSIBLE CAUSE

SRC

[B1429-13]

- Connection malfunction or open circuit of harness or connector
- Internal malfunction of seat belt buckle switch RH

[B1429-12]

- Connection malfunction or short circuit to power supply of harness and connector
- Internal malfunction of seat belt buckle switch RH

[B1429-11]

- Connection malfunction or short circuit to ground of harness or connector
- Internal malfunction of seat belt buckle switch RH

[B1429-00]

- Internal malfunction of seat belt buckle switch RH

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-92, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-92, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

B1429 SEAT BELT BUCKLE SWITCH RH

< DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

- YES >> Refer to [SRC-92, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010877015

1.HARNES CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Perform one of the following repairs:
 - Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 3
NO >> Refer to [GI-53, "Intermittent Incident"](#).

3.WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace the harness.

4.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 5.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

5.SEAT BELT BUCKLE SWITCH RH

Replace the seat belt buckle switch RH. Refer to [SB-14, "SEAT BELT BUCKLE : Removal and Installation"](#).

>> GO TO 6

6.AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.

B1429 SEAT BELT BUCKLE SWITCH RH

< DTC/CIRCUIT DIAGNOSIS >

3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 7.

NO >> Clear DTC. Inspection End.

7.RELATED HARNESS

Replace the related harness.

>> **END**

A

B

C

D

E

F

G

SRC

I

J

K

L

M

N

O

P

B1430, B1432 SEAT BELT PRE-TENSIONER LH

< DTC/CIRCUIT DIAGNOSIS >

B1430, B1432 SEAT BELT PRE-TENSIONER LH

Description

INFOID:000000010877016

DTC B1430 AND B1432 SEAT BELT PRE-TENSIONER LH

The seat belt pre-tensioner LH is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the seat belt pre-tensioner LH.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:000000010877017

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)		DTC detecting condition
B1430-09	PRE-TEN FRONT LH [front seat belt pre-tensioner squib left hand component failures (cross connection)]	[SHORT]	Seat belt pre-tensioner LH circuits are shorted to each other
B1430-11	PRE-TEN FRONT LH (front seat belt pre-tensioner squib left hand circuit short to GND)	[GND-SHORT]	Seat belt pre-tensioner LH circuit is shorted to ground
B1430-12	PRE-TEN FRONT LH (front seat belt pre-tensioner squib left hand circuit short to battery)	[VB-SHORT]	Seat belt pre-tensioner LH circuit is shorted to power supply circuit
B1430-13	PRE-TEN FRONT LH (front seat belt pre-tensioner squib left hand circuit)	[OPEN]	Seat belt pre-tensioner LH circuit is open
B1430-1A	PRE-TEN FRONT LH (front seat belt pre-tensioner squib left hand circuit resistance below threshold)	[SHORT]	Seat belt pre-tensioner LH circuits are shorted to each other
B1432-09	PRE-TEN FRONT LH 2 [front seat belt pre-tensioner squib left hand component failures (cross connection)]	[SHORT]	Seat belt pre-tensioner LH circuits are shorted to each other
B1432-11	PRE-TEN FRONT LH 2 (front seat belt pre-tensioner squib left hand circuit short to GND)	[GND-SHORT]	Seat belt pre-tensioner LH circuit is shorted to ground
B1432-12	PRE-TEN FRONT LH 2 (front seat belt pre-tensioner squib left hand circuit short to battery)	[VB-SHORT]	Seat belt pre-tensioner LH circuit is shorted to power supply circuit
B1432-13	PRE-TEN FRONT LH 2 (front seat belt pre-tensioner squib left hand circuit)	[OPEN]	Seat belt pre-tensioner LH circuit is open
B1432-1A	PRE-TEN FRONT LH 2 (front seat belt pre-tensioner squib left hand circuit resistance below threshold)	[SHORT]	Seat belt pre-tensioner LH circuits are shorted to each other

POSSIBLE CAUSE

[B1430-09, B1430-1A]

B1430, B1432 SEAT BELT PRE-TENSIONER LH

< DTC/CIRCUIT DIAGNOSIS >

- Connection malfunction or short circuit of harness and connector
- Internal malfunction of seat belt pre-tensioner LH
- Internal malfunction of air bag diagnosis sensor unit

A

[B1430-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of seat belt pre-tensioner LH
- Internal malfunction of air bag diagnosis sensor unit

B

[B1430-12]

- Connection malfunction or short circuit to power supply of harness and connector
- Internal malfunction of seat belt pre-tensioner LH
- Internal malfunction of air bag diagnosis sensor unit

C

[B1430-13]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of seat belt pre-tensioner LH
- Internal malfunction of air bag diagnosis sensor unit

D

E

[B1432-09, B1432-1A]

- Connection malfunction or short circuit of harness and connector
- Internal malfunction of seat belt pre-tensioner LH
- Internal malfunction of air bag diagnosis sensor unit

F

G

[B1432-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of seat belt pre-tensioner LH
- Internal malfunction of air bag diagnosis sensor unit

SRC

[B1432-12]

- Connection malfunction or short circuit to power supply of harness and connector
- Internal malfunction of seat belt pre-tensioner LH
- Internal malfunction of air bag diagnosis sensor unit

I

J

[B1432-13]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of seat belt pre-tensioner LH
- Internal malfunction of air bag diagnosis sensor unit

K

FAIL-SAFE

—

L

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

M

YES (Current DTC)>>Refer to [SRC-96. "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

N

O

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-96. "Diagnosis Procedure"](#).

P

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.

B1430, B1432 SEAT BELT PRE-TENSIONER LH

< DTC/CIRCUIT DIAGNOSIS >

2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-96, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010877018

1. HARNESS CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

- NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3. WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4. CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 5.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. SEAT BELT PRE-TENSIONER LH

B1430, B1432 SEAT BELT PRE-TENSIONER LH

< DTC/CIRCUIT DIAGNOSIS >

1. Replace the seat belt pre-tensioner LH. Refer to [SR-40. "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 7.
NO >> Clear DTC. Inspection End.

7.RELATED HARNESS

Replace the related harness.

>> **END**

A

B

C

D

E

F

G

SRC

I

J

K

L

M

N

O

P

B1431 SEAT BELT PRE-TENSIONER

< DTC/CIRCUIT DIAGNOSIS >

B1431 SEAT BELT PRE-TENSIONER

Description

INFOID:000000010877019

DTC B1431 SEAT BELT PRE-TENSIONER RH

The seat belt pre-tensioner RH is wired to the air bag diagnosis sensor unit. The air bag diagnosis sensor unit will monitor for opens and shorts in detected lines to the seat belt pre-tensioner RH.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:000000010877020

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)		DTC detecting condition
B1431-09	PRE-TEN FRONT RH [front seat belt pre-tensioner squib right hand component failures (cross connection)]	[SHORT]	Seat belt pre-tensioner RH circuits are shorted to each other
B1431-11	PRE-TEN FRONT RH (front seat belt pre-tensioner squib right hand circuit short to GND)	[GND-SHORT]	Seat belt pre-tensioner RH circuit is shorted to ground
B1431-12	PRE-TEN FRONT RH (front seat belt pre-tensioner squib right hand circuit short to battery)	[VB-SHORT]	Seat belt pre-tensioner RH circuit is shorted to power supply circuit
B1431-13	PRE-TEN FRONT RH (front seat belt pre-tensioner squib right hand circuit)	[OPEN]	Seat belt pre-tensioner RH circuit is open
B1431-1A	PRE-TEN FRONT RH (front seat belt pre-tensioner squib right hand circuit resistance below threshold)	[SHORT]	Seat belt pre-tensioner RH circuits are shorted to each other

POSSIBLE CAUSE

[B1431-09, B1431-1A]

- Connection malfunction or short circuit of harness and connector
- Internal malfunction of seat belt pre-tensioner RH
- Internal malfunction of air bag diagnosis sensor unit

[B1431-11]

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of seat belt pre-tensioner RH
- Internal malfunction of air bag diagnosis sensor unit

[B1431-12]

- Connection malfunction or short circuit to power supply of harness and connector
- Internal malfunction of seat belt pre-tensioner RH
- Internal malfunction of air bag diagnosis sensor unit

[B1431-13]

- Connection malfunction or open circuit of harness and connector
- Internal malfunction of seat belt pre-tensioner RH
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

—

B1431 SEAT BELT PRE-TENSIONER

< DTC/CIRCUIT DIAGNOSIS >

DTC CONFIRMATION PROCEDURE (With CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-99, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2.ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-99, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-99, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010877021

1.HARNES CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

- NO >> Perform one of the following repairs:
- Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3.WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

B1431 SEAT BELT PRE-TENSIONER

< DTC/CIRCUIT DIAGNOSIS >

- YES >> GO TO 4.
- NO >> Replace the harness.

4.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 5.
- NO >> Refer to [GI-53, "Intermittent Incident"](#).

5.AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 6.
- NO >> Clear DTC. Inspection End.

6.SEAT BELT PRE-TENSIONER RH

1. Replace the seat belt pre-tensioner RH. Refer to [SR-40, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 7.
- NO >> Clear DTC. Inspection End.

7.RELATED HARNESS

Replace the related harness.

>> **END**

B142A IGN VOLTAGE

< DTC/CIRCUIT DIAGNOSIS >

B142A IGN VOLTAGE

Description

INFOID:000000010877022

DTC B142A IGNITION VOLTAGE

Ignition voltage is supplied to the air bag diagnosis sensor unit when the ignition is in the ON position. The air bag diagnosis sensor unit will monitor for low or high ignition voltage.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:000000010877023

DTC DETECTION LOGIC

DTC	CONSULT screen items (Trouble diagnosis content)		DTC detecting condition
B142A-16	IGNITION VOLTAGE (Ignition voltage low)	[VB-LOW]	Power supply malfunction (low voltage) of air bag diagnosis sensor unit
B142A-17	IGNITION VOLTAGE (Ignition voltage high)	[VB-HIGH]	Power supply malfunction (high voltage) of air bag diagnosis sensor unit

POSSIBLE CAUSE

[B142A-16]

- Malfunction of battery voltage (low voltage)
- Connection malfunction of harness or connector
- Internal malfunction of air bag diagnosis sensor unit

[B142A-17]

- Malfunction of battery voltage (high voltage)
- Connection malfunction of harness or connector
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-102, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

NO >> Inspection End.

2. ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-102, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

B142A IGN VOLTAGE

< DTC/CIRCUIT DIAGNOSIS >

Is the DTC detected?

- YES >> Refer to [SRC-102, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010877024

1.HARNES CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Perform one of the following repairs:
 - Visible damage: Replace the harness.
 - Loose terminal: Secure the terminal.
 - Poor connection: Secure the connection.

2.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 3.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

3.WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Replace the harness.

4.CONFIRM DTC

1. Reconnect all harness connectors.
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 5.
NO >> Refer to [GI-53, "Intermittent Incident"](#).

5.AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

- YES >> GO TO 6.
NO >> Clear DTC. Inspection End.

6.RELATED HARNESS

Replace the related harness.

>> END

B142X COLLISION DETECTION

< DTC/CIRCUIT DIAGNOSIS >

B142X COLLISION DETECTION

Description

INFOID:000000010877025

DTC B1421 and B1422 COLLISION DETECTION

The air bag diagnosis sensor unit will set this DTC if it has detected a collision or rollover which has resulted in a deployment of one or more air bags or pre-tensioners. If this DTC is detected after a SRS repair, the air bag diagnosis sensor unit has not yet been replaced. This DTC can not be erased.

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:000000010877026

DTC DETECTION LOGIC

DTC	CONSULT screen items	DTC detecting condition
B1421-00	FRONTAL COLLISION DETECTION	Frontal collision detected. Driver and/or front passenger air bag modules are deployed.
B1422-00	SIDE COLLISION DETECTION	Side collision detected. Curtain air bag module and seat belt pre-tensioner are deployed.

POSSIBLE CAUSE

[B1421-00]

- Malfunction of frontal-related parts
- Internal malfunction of air bag diagnosis sensor unit

[B1422-00]

- Malfunction of side-related parts
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

DTC CONFIRMATION PROCEDURE (With CONSULT)

1.INSPECTION START

Turn ignition switch ON.

>> GO TO 2.

2.CHECK SELF-DIAG RESULT

Check for the DTC on CONSULT.

Is the DTC detected?

- YES >> Refer to [SRC-103, "Diagnosis Procedure"](#).
- NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010877027

Refer to [SR-13, "For Frontal Collision"](#) or [SR-15, "For Side and Rollover Collision"](#).

B14XX AIR BAG DIAGNOSIS SENSOR UNIT

< DTC/CIRCUIT DIAGNOSIS >

B14XX AIR BAG DIAGNOSIS SENSOR UNIT

Description

INFOID:000000010877028

DTC B14XX AIR BAG DIAGNOSIS SENSOR UNIT

The air bag diagnosis sensor unit will run self diagnostics when the ignition switch is turned ON. It has the potential to set many diagnostic trouble codes which will conform to the B14XX format, but will not match any other SRS diagnostic trouble codes. Refer to [SRC-13, "CONSULT Function"](#).

PART LOCATION

Refer to [SRC-6, "Component Parts Location"](#).

DTC Description

INFOID:000000010877029

DTC DETECTION LOGIC

DTC	CONSULT screen items	DTC detecting condition
B1400-00	CONTROL UNIT [UNIT MALFUNC]	Air bag diagnosis sensor unit is malfunctioning
B1401-00		
B1402-00		
B1403-00		
B1404-00		
B1405-00		
B1406-00		
B1407-00		
B1408-00		
B1409-00		
B1410-00		
B1411-00		
B1412-00		
B1413-00		
B1414-00		
B1415-00		
B1416-00		
B1417-00		
B1418-00		
B1419-00		
B1420-00		

POSSIBLE CAUSE

Malfunction in air bag diagnosis sensor unit

FAIL-SAFE

—

DTC CONFIRMATION PROCEDURE (With CONSULT)

1. CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.
2. Check for DTC using CONSULT.

Is the DTC detected?

YES (Current DTC)>>Refer to [SRC-105, "Diagnosis Procedure"](#).

YES (Past DTC)>>GO TO 2.

B14XX AIR BAG DIAGNOSIS SENSOR UNIT

< DTC/CIRCUIT DIAGNOSIS >

NO >> Inspection End.

2.ERASE SELF-DIAG RESULT

Erase the DTC using CONSULT.

Can the DTC be erased?

YES >> Inspection End.

NO >> Refer to [SRC-105, "Diagnosis Procedure"](#).

DTC CONFIRMATION PROCEDURE (Without CONSULT)

1.CHECK SELF-DIAG RESULT

1. Turn ignition switch ON.

2. Check the air bag warning lamp status. Refer to [SRC-11, "On Board Diagnosis Function"](#).

NOTE:

SRS will not enter diagnosis mode if no malfunction is detected in user mode.

Is the DTC detected?

YES >> Refer to [SRC-105, "Diagnosis Procedure"](#).

NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000010877030

1.HARNES CONNECTOR

Visually inspect all applicable harness connectors for the following:

- Visible damage to connector or terminal
- Loose terminal
- Poor connection

NOTE:

All harness connectors should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Perform one of the following repairs:

- Visible damage: Replace the harness.
- Loose terminal: Secure the terminal.
- Poor connection: Secure the connection.

2.CONFIRM DTC

1. Reconnect all harness connectors.

2. Turn ignition switch ON.

3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 3.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

3.WIRING HARNESS

Check the wiring harness for visible damage.

NOTE:

The entire wiring harness should be inspected from the air bag diagnosis sensor unit to the end component (including any in-line connectors).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace the harness.

4.CONFIRM DTC

1. Reconnect all harness connectors.

2. Turn ignition switch ON.

3. Check for DTC using CONSULT.

Is DTC still current?

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

B14XX AIR BAG DIAGNOSIS SENSOR UNIT

< DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 5.

NO >> Refer to [GI-53, "Intermittent Incident"](#).

5. AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace the air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).
2. Turn ignition switch ON.
3. Check for DTC using CONSULT.

Is DTC still current?

YES >> GO TO 6.

NO >> Clear DTC. Inspection End.

6. RELATED HARNESS

Replace the related harness.

>> **END**

SRS AIR BAG WARNING LAMP DOES NOT TURN OFF

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

SRS AIR BAG WARNING LAMP DOES NOT TURN OFF

Diagnosis Procedure

INFOID:000000010122860

1. CHECK AIR BAG MODULE AND SEAT BELT PRE-TENSIONER

Check the deployment of air bag module.

Is air bag module deployed?

YES >> Replace the malfunctioning parts.

NO >> GO TO 2.

2. CHECK AIR BAG FUSE

Check 10 A fuse [No.1, located in fuse block (J/B)].

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the fuse.

3. CHECK HARNESS CONNECTOR

Check the harness connector.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace harness connectors.

4. CHECK WIRING HARNESS

Check the wiring harness externals.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace wiring harness.

5. REPLACE AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).

2. Check air bag warning lamp operation.

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 6.

6. REPLACE COMBINATION METER

1. Replace combination meter. Refer to [MWI-102, "Removal and Installation"](#).

2. Check air bag warning lamp operation.

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 1.

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC

SRS AIR BAG WARNING LAMP DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

SRS AIR BAG WARNING LAMP DOES NOT TURN ON

Diagnosis Procedure

INFOID:000000010122861

1.CHECK COMBINATION METER POWER SUPPLY AND GROUND CIRCUIT

Check combination meter unit power supply and ground circuit. Refer to [MWI-85, "COMBINATION METER : Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2.CHECK HARNESS CONNECTOR

Check the harness connector.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace harness connectors.

3.CHECK WIRING HARNESS

Check the wiring harness externals.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace wiring harness.

4.CHECK AIR BAG DIAGNOSIS SENSOR UNIT

Disconnect air bag diagnosis sensor unit connector and turn power switch ON.

Does air bag warning lamp turn ON?

YES >> Replace air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).

NO >> Replace combination meter. Refer to [MWI-102, "Removal and Installation"](#).

SRS AIR BAG WARNING LAMP BLINKS

< SYMPTOM DIAGNOSIS >

SRS AIR BAG WARNING LAMP BLINKS

Diagnosis Procedure

INFOID:000000010122862

1. CHECK BATTERY

Check battery. Refer to [PG-83, "How to Handle 12V Battery"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace malfunctioning parts.

2. REPLACE OCCUPANT CLASSIFICATION SYSTEM CONTROL UNIT

1. Replace occupant classification system control unit. Refer to [SR-42, "Removal and Installation"](#).

2. Check air bag warning lamp operation.

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 3.

3. REPLACE AIR BAG DIAGNOSIS SENSOR UNIT

1. Replace air bag diagnosis sensor unit. Refer to [SR-38, "Removal and Installation"](#).

2. Check air bag warning lamp operation.

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 1.

A
B
C
D
E
F
G
I
J
K
L
M
N
O
P

SRC