

A
B
C

WW

SECTION

WIPER, WASHER & HORN

CONTENTS

<p>SERVICE INFORMATION 2</p> <p>PRECAUTION 2</p> <p style="padding-left: 20px;">Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"2</p> <p style="padding-left: 20px;">Precaution for Procedure without Cowl Top Cover.....2</p> <p>FRONT WIPER AND WASHER SYSTEM 3</p> <p style="padding-left: 20px;">Component Parts and Harness Connector Location3</p> <p style="padding-left: 20px;">System Diagram3</p> <p style="padding-left: 20px;">System Description4</p> <p style="padding-left: 20px;">CAN Communication System Description6</p> <p style="padding-left: 20px;">CAN Communication Unit6</p> <p style="padding-left: 20px;">Schematic7</p> <p style="padding-left: 20px;">Wiring Diagram - WIPER -8</p> <p style="padding-left: 20px;">Terminal and Reference Value for BCM12</p> <p style="padding-left: 20px;">Terminal and Reference Value for IPDM E/R16</p> <p style="padding-left: 20px;">How to Perform Trouble Diagnosis16</p> <p style="padding-left: 20px;">Preliminary Check16</p> <p style="padding-left: 20px;">CONSULT-III Functions (BCM)17</p> <p style="padding-left: 20px;">CONSULT-III Functions (IPDM E/R)18</p> <p style="padding-left: 20px;">Front Wiper Does Not Operate19</p> <p style="padding-left: 20px;">Front Wiper Does Not Return to Stop Position (After Front Wiper Operate for 10 Seconds, They Stop for 20 Seconds, and After Repeating the Operation Five Times, They Become Inoperative)21</p> <p style="padding-left: 20px;">Front Wiper Does Not Return to Stop Position When Front Wiper Motor Operates at Low Speed (After Front Wiper Operate for 10 Seconds, They Stop for 20 Seconds, and After Repeating the Operation Five Times, They Become Inoperative)22</p> <p style="padding-left: 20px;">Front Wiper Does Not Return to Stop Position When Front Wiper Motor Operates at HIGH Speed (After Front Wiper Operate for 10 Seconds, They Stop for 20 Seconds, and After Repeating the Operation Five Times, They Become Inoperative)23</p> <p style="padding-left: 20px;">Only Front Wiper Low Does Not Operate25</p>	<p style="padding-left: 20px;">Only Front Wiper HI Does Not Operate26</p> <p style="padding-left: 20px;">Only Front Wiper Auto Does Not Operate28</p> <p style="padding-left: 20px;">Front Wiper Intermittent Operation Switch Position Cannot Be Adjusted30</p> <p style="padding-left: 20px;">Wiper Does Not Wipe When Front Washer Operates30</p> <p style="padding-left: 20px;">Front Wiper Does Not Stop30</p> <p style="padding-left: 20px;">Removal and Installation of Front Wiper Arms, Adjustment of Wiper Arms Stop Location30</p> <p style="padding-left: 20px;">Removal and Installation of Front Wiper Drive Assembly31</p> <p style="padding-left: 20px;">Disassembly and Assembly of Front Wiper Drive Assembly32</p> <p style="padding-left: 20px;">Washer Nozzle Adjustment33</p> <p style="padding-left: 20px;">Washer Tube Layout33</p> <p style="padding-left: 20px;">Removal and Installation of Front Washer Nozzle...33</p> <p style="padding-left: 20px;">Inspection for Washer Nozzle34</p> <p style="padding-left: 20px;">Inspection of Front Wiper and Washer Switch Circuit34</p> <p style="padding-left: 20px;">Removal and Installation of Front Wiper and Washer Switch34</p> <p style="padding-left: 20px;">Removal and Installation of Washer Tank35</p> <p style="padding-left: 20px;">Removal and Installation of Washer Pump35</p> <p style="padding-left: 20px;">Removal and Installation of Rain Sensor36</p> <p>CIGARETTE LIGHTER37</p> <p style="padding-left: 20px;">Wiring Diagram - CIGAR -37</p> <p style="padding-left: 20px;">Removal and Installation37</p> <p>POWER SOCKET39</p> <p style="padding-left: 20px;">Wiring Diagram - P/SCKT -39</p> <p style="padding-left: 20px;">Removal and Installation of Center Console Box Power Socket39</p> <p style="padding-left: 20px;">Removal and Installation of Center Console Box Rear Side Power Socket40</p> <p>HORN41</p> <p style="padding-left: 20px;">Wiring Diagram - HORN -41</p> <p style="padding-left: 20px;">Removal and Installation41</p>
---	--

A
B
C
D
E
F
G
H
I
J
WW
L
M
N
O
P

WW

PRECAUTION

< SERVICE INFORMATION >

SERVICE INFORMATION

PRECAUTION

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003303621

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SUPPLEMENTAL RESTRAINT SYSTEM" and "SEAT BELTS" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SUPPLEMENTAL RESTRAINT SYSTEM".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS


WARNING:

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

INFOID:000000003303622

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

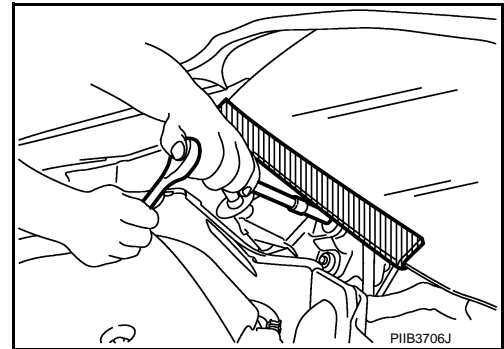

PIIB3706J


FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

FRONT WIPER AND WASHER SYSTEM

Component Parts and Harness Connector Location


INFOID:000000002956965

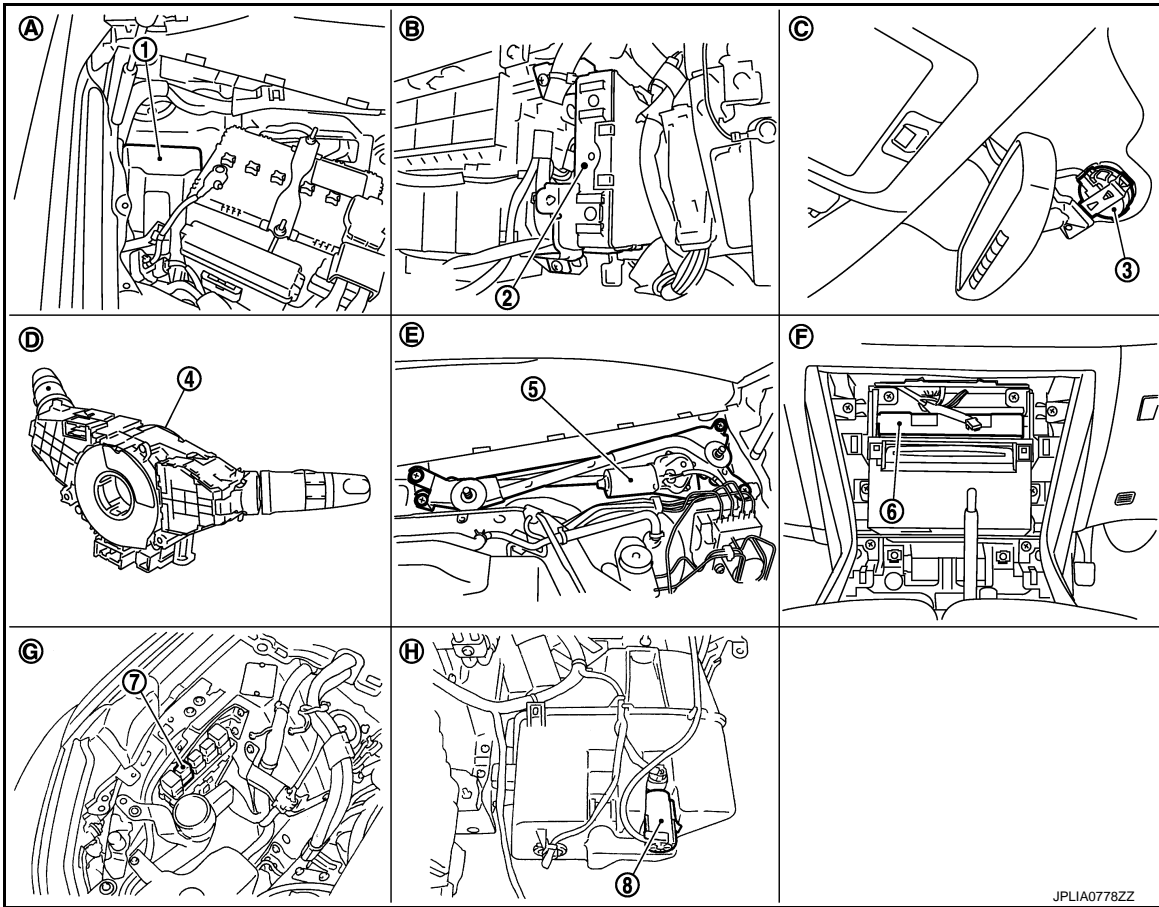

- | | | |
|---------------------------------|---------------------------------------|-------------------------------|
| 1. IPDM E/R | 2. BCM | 3. Rain sensor |
| 4. Combination switch | 5. Front wiper motor | 6. Unified meter and A/C amp. |
| 7. Front wiper reverse relay | 8. Front washer pump | |
| A. Engine room dash panel (RH) | B. Behind glove box | C. Wind shield upper |
| D. Steering column cover inside | E. Cowl top, left side of engine room | F. Behind cluster lid C |
| G. Engine room (Right side) | H. Radiator core support (RH) | |

System Diagram

INFOID:000000003350711

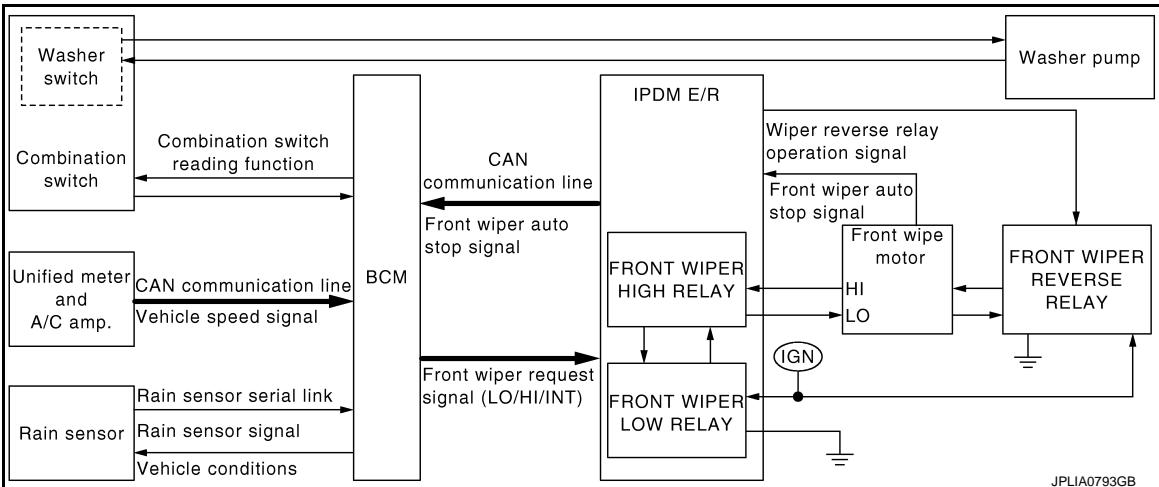

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

System Description

INFOID:000000003350710

OUTLINE

- Front wiper low relay and front wiper high relay are included in IPDM E/R (intelligent power distribution module engine room).
- Front wiper reverse relay is included in relay box-1.
- BCM detects the wiper switch (combination switch) condition by the combination switch reading function.
- BCM controls front wiper LO, HI and AUTO (rain sensing wiper) operation and requests front wiper operation to IPDM E/R via CAN communication.
- IPDM E/R operates wiper motor according to the request from BCM.
- Front wiper motor switches LOW speed to/from HIGH speed by BCM function to change polarity.
- BCM controls front wiper AUTO (Rain sensing) operation

FRONT WIPER BASIC OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the front wiper request signal to IPDM E/R via CAN communication depending on each operating condition of the front wiper.
- IPDM E/R turns ON/OFF front wiper low relay, front wiper high relay and front wiper reverse relay according to the front wiper request signal. IPDM E/R provides the power supply to operate the front wiper HI/LO operation.

FRONT WIPER LO OPERATION

- BCM transmits the front wiper request signal (LO) to IPDM E/R via CAN communication according to the front wiper LO operating condition.

Front wiper LO operating condition

- Ignition switch ON
- Front wiper switch LO or front wiper switch MIST (while pressing)
- IPDM E/R turns ON front wiper low relay according to the front wiper request signal (LO).
- Power is supplied;
 - from fuse
 - through front wiper low relay
 - through front wiper high relay
 - to front wiper motor.
- Ground is supplied;
 - to front wiper motor
 - through front wiper reverse relay
 - from ground.

FRONT WIPER HI OPERATION

- BCM transmits the front wiper request signal (HI) to IPDM E/R via CAN communication according to the front wiper HI operating condition.

Front wiper HI operating condition

- Ignition switch ON
- Front wiper switch HI
- IPDM E/R turns ON front wiper high relay and front wiper reverse relay according to the front wiper request signal (HI).
- Power is supplied;
 - from fuse
 - through front wiper reverse relay
 - to front wiper motor.
- Ground is supplied;
 - to front wiper motor
 - through front wiper high relay
 - through front wiper low relay
 - from ground.

FRONT WIPER AUTO OPERATION (RAIN SENSING WIPER)

Rain Sensing

Rain level and sensor conditions are detected by rain sensor.

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

- BCM transmits the vehicle conditions (vehicle speed, front wiper condition, rain sensor sensitivity setting, etc.) to the rain sensor via the rain sensor serial link. A
- Rain sensor judges a wiping speed for front wiper by rain condition and the vehicle conditions. And it transmits the wiping speed request signal to the BCM via the rain sensor serial link. B

Auto Wiping Operation

- BCM receives the wiping speed request signal from the rain sensor via the rain sensor serial link. B
- BCM controls front wiper operation according to the wiping speed request signals. And it transmits the front wiper request signals (LO or HI) to the IPDM E/R via CAN communication line. C

Front wiper AUTO operating condition

- Ignition switch ON
- Front wiper switch INT D

NOTE:

When the front wiper switch is turned to INT position, front wiper operates once regardless of a rainy condition. E

Rain Sensor Sensitivity Setting

BCM determines rain sensor sensitivity according to a wiper volume. E

Wiper intermittent dial position	Sensitivity	F
1	High sensitivity	
2		
3	Medium-high sensitivity	G
4		
5	Low-medium sensitivity	H
6		
7	Low sensitivity	I

NOTE:

When the wiper volume is turned up at 1 level with front wiper AUTO operating condition, front wiper operates once. J

FRONT WIPER AUTO STOP OPERATION

- BCM stops transmitting the front wiper request signal when the front wiper switch is turned OFF.
- IPDM E/R detects the front wiper stop position signal from the front wiper motor and detects the front wiper motor position (stop position/except stop position).
- When the front wiper request signal is stopped, IPDM E/R turns ON the front wiper low relay until the front wiper motor returns to the stop position. WW

NOTE:

- BCM stops the transmitting of the front wiper request signal when the ignition switch is OFF. L
- IPDM E/R turns front wiper relays OFF when the ignition switch is OFF.

FRONT WIPER OPERATION LINKED WITH WASHER

- BCM transmits the front wiper request signal (LO) to IPDM E/R via CAN communication according to the washer linked operating condition of the front wiper. M
- BCM transmits the front wiper request signal (LO) so that the front wiper operates approximately 3 times when the front washer switch OFF is detected. N

Washer linked operating condition of front wiper

- Ignition switch ON
- Front washer switch ON (0.4 second or more)
- IPDM E/R turns ON the integrated front wiper low relay according to the front wiper request signal (LO). O
- The washer pump is grounded through the combination switch with the front washer switch ON. P

FAIL-SAFE FUNCTION

CAN Communication Error

If an abnormality occurs in CAN communications, IPDM E/R holds the condition just before fail-safe status is initiated until ignition switch is turned OFF. (If wipers were operating in LO just before the initiation of fail-safe status, they continue to operate in LOW until ignition switch is turned OFF.)

Front Wiper Motor Protection

IPDM E/R performs the fail-safe function when the front wiper auto stop circuit is malfunctioning.

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

- IPDM E/R detects the front wiper stop position with the front wiper auto stop signal.
- When the front wiper auto stop signal is in the conditions listed below, IPDM E/R repeats a front wiper 10 seconds operation and 20 seconds stop until ignition switch is turned OFF.

Ignition switch	Front wiper switch	Front wiper auto stop signal
ON	ON	The front wiper auto stop signal (stop position) cannot be input for 10 seconds.
	OFF	The front wiper auto stop signal does not change for 10 seconds.

Rain Sensor Malfunction

- BCM judges the rain sensor serial link error by the rain sensor serial link condition and detects the rain sensor malfunction by rain sensor malfunction signal.
- When BCM detects the rain sensor serial link error or the rain sensor malfunction while front wiper AUTO operation, BCM operates a fail-safe control.

NOTE:

If rain sensor malfunction is detected when ignition switch is turned OFF ⇒ ON and front wiper switch is INT position, BCM operates front wiper LO.

COMBINATION SWITCH READING FUNCTION

Refer to [BCS-6, "Combination Switch Reading Function"](#).

CAN Communication System Description

INFOID:000000002956967

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-board multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H line, CAN L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Unit

INFOID:000000002956968


Refer to [LAN-29, "CAN System Specification Chart"](#).

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

Schematic

INFOID:00000002956969

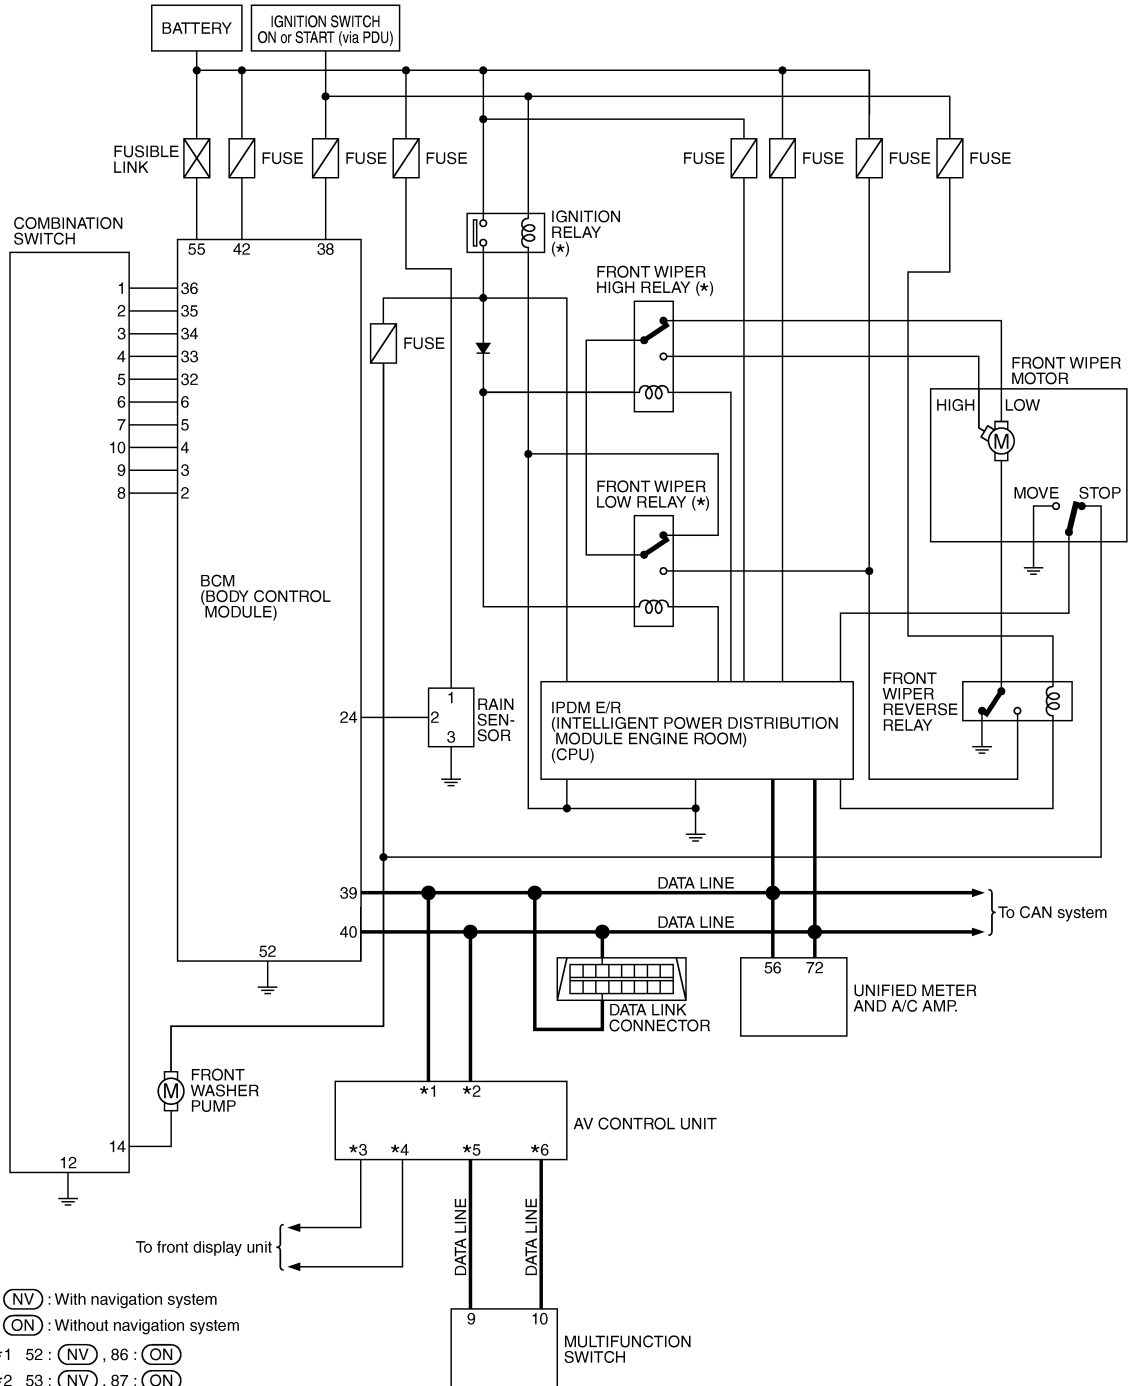

(NV) : With navigation system
 (ON) : Without navigation system

- *1 52 : (NV) , 86 : (ON)
- *2 53 : (NV) , 87 : (ON)
- *3 102 : (NV) , 56 : (ON)
- *4 103 : (NV) , 44 : (ON)
- *5 50 : (NV) , 88 : (ON)
- *6 51 : (NV) , 89 : (ON)

* : This relay is built into the IPDM E/R (Intelligent power distribution module engine room).

TKWT6872E

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P



WW

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

Wiring Diagram - WIPER -

INFOID:00000002956970

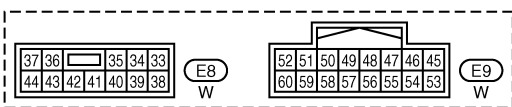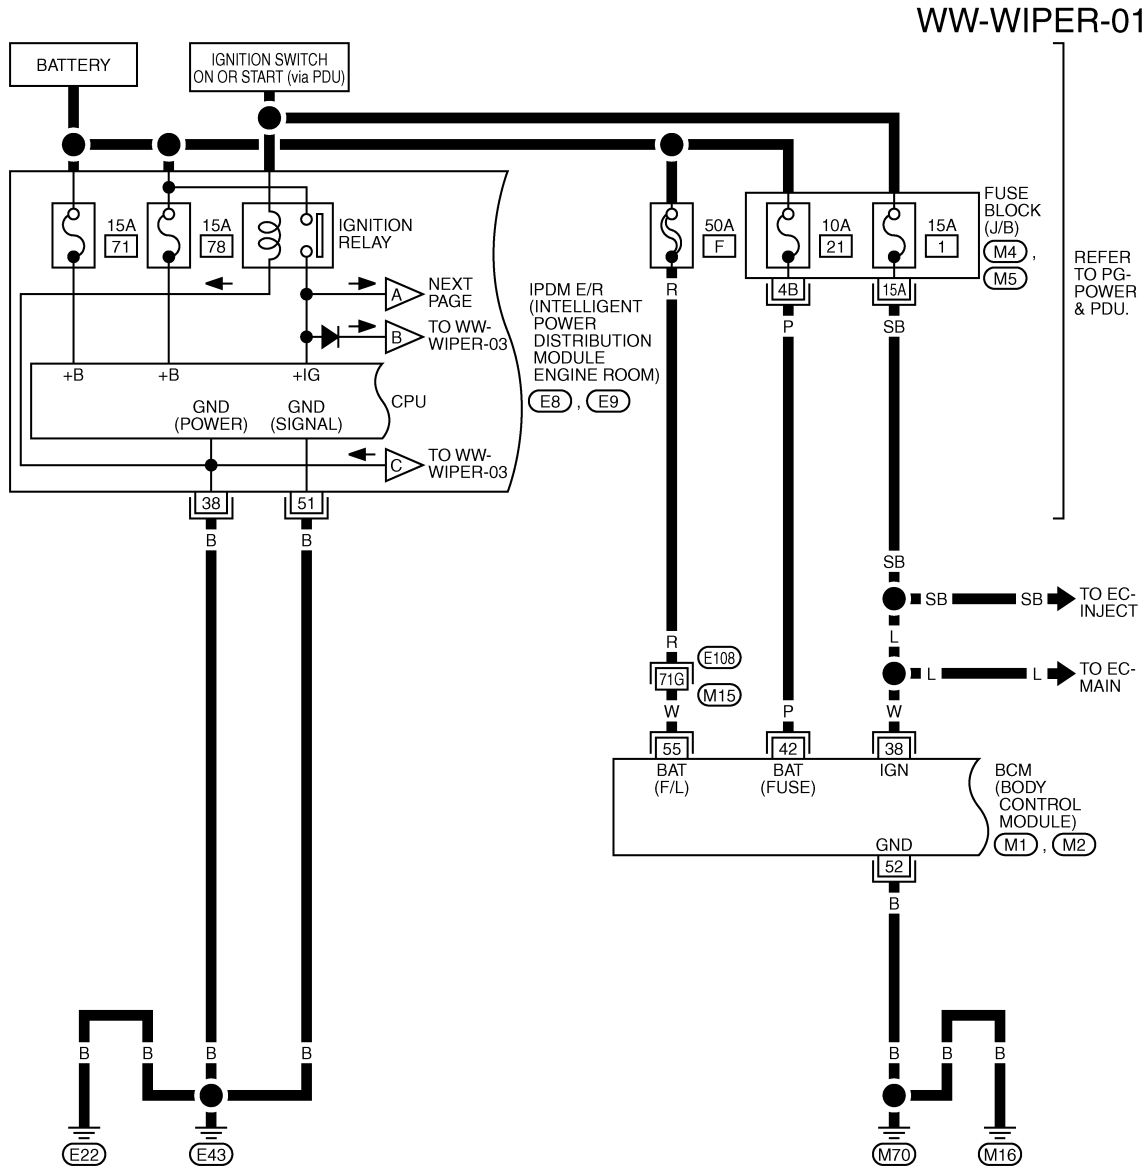

REFER TO THE FOLLOWING.



- (E108) -SUPER MULTIPLE JUNCTION (SMJ)
- (M4), (M5) -FUSE BLOCK-JUNCTION BOX (J/B)
- (M1), (M2) -ELECTRICAL UNITS

TKWT5090E

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

WW-WIPER-02

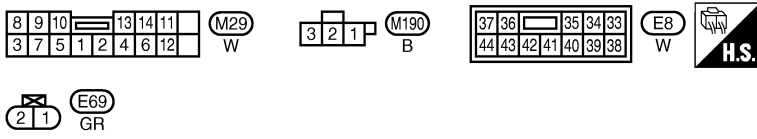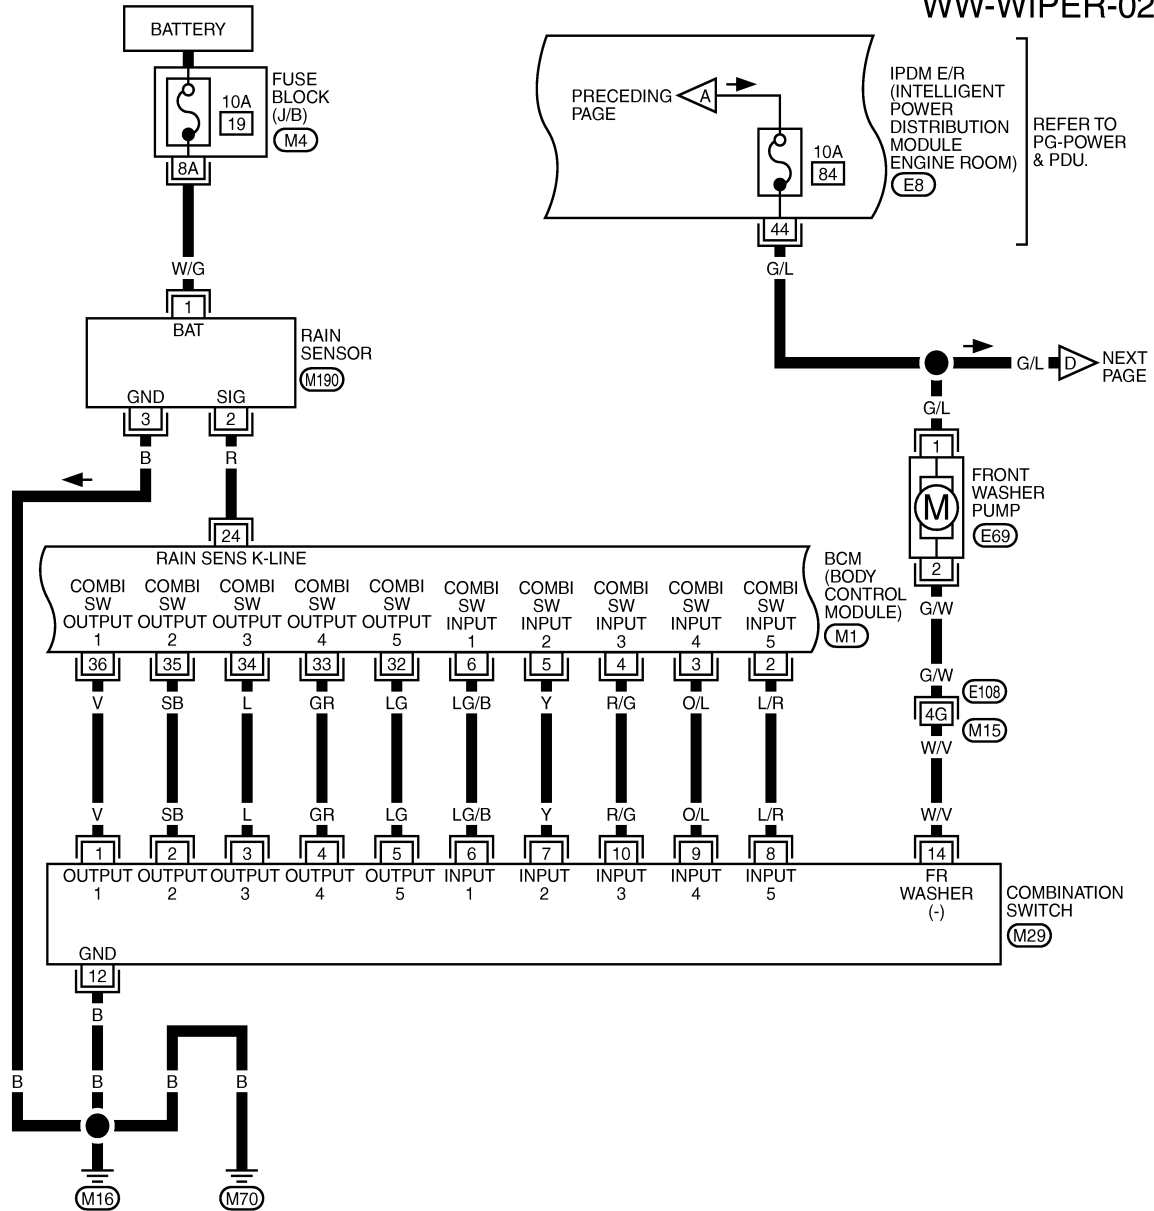

REFER TO THE FOLLOWING.
 (E108) - SUPER MULTIPLE JUNCTION (SMJ)
 (M4) - FUSE BLOCK - JUNCTION BOX (J/B)
 (M1) - ELECTRICAL UNITS

TKWT6873E




A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW


FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

WW-WIPER-03

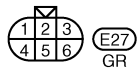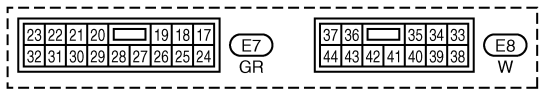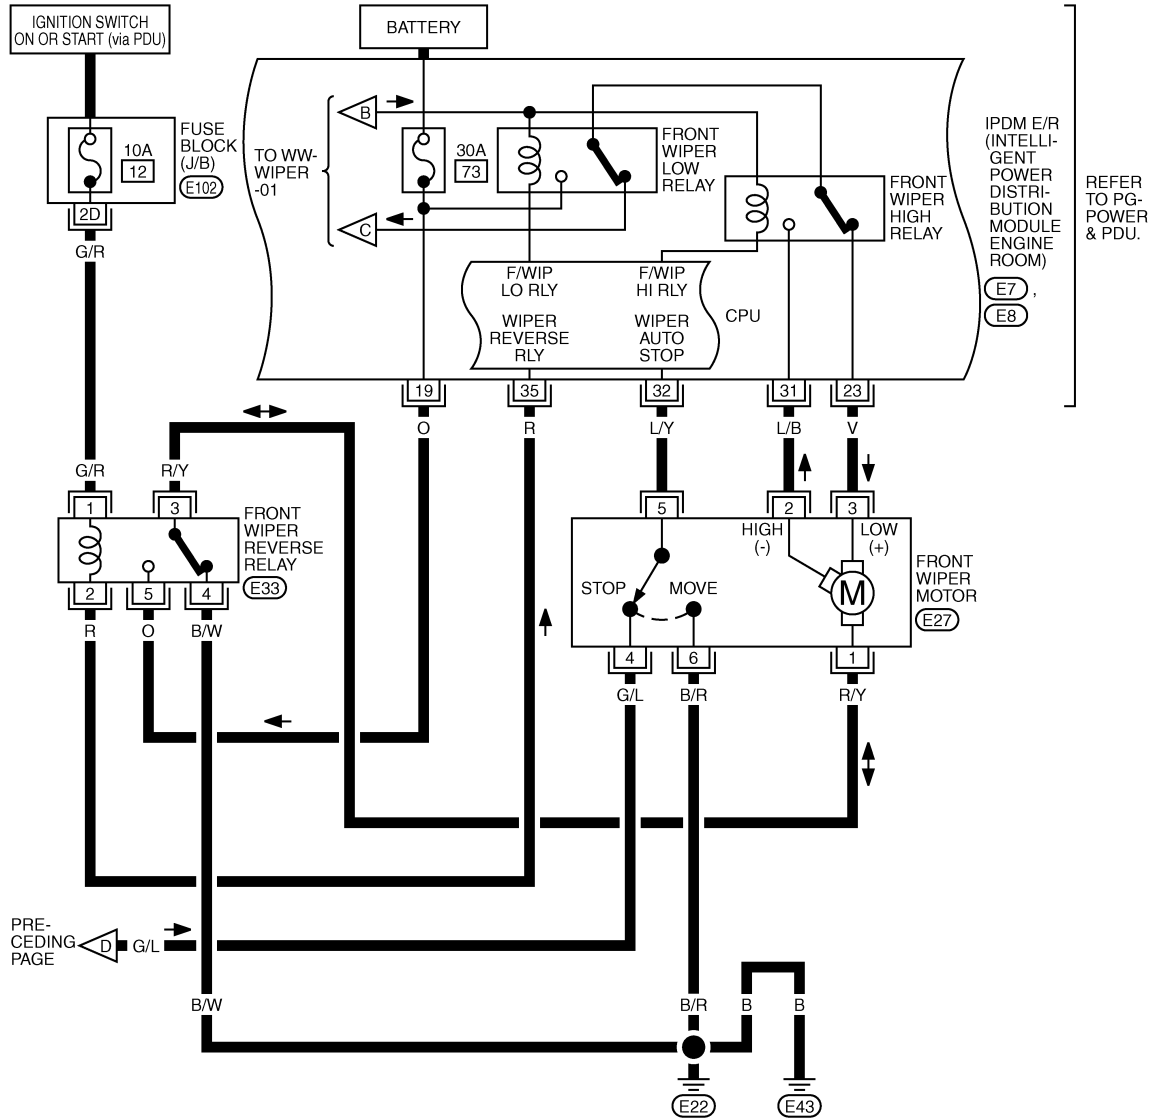

REFER TO THE FOLLOWING.
 (E102) - FUSE BLOCK-JUNCTION BOX (J/B)

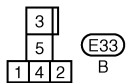

TKWT5290E

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

WW-WIPER-04

▬ : DATA LINE

◊NV : WITH NAVIGATION SYSTEM





◊ON : WITHOUT NAVIGATION SYSTEM

*1 102 : ◊NV , 56 : ◊ON

*2 103 : ◊NV , 44 : ◊ON

*3 50 : ◊NV , 88 : ◊ON

*4 51 : ◊NV , 89 : ◊ON

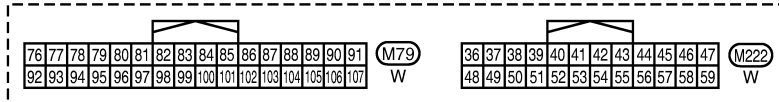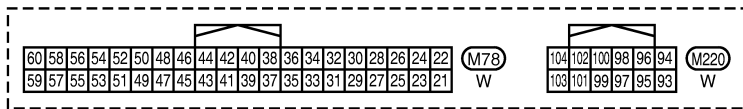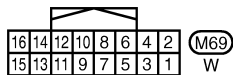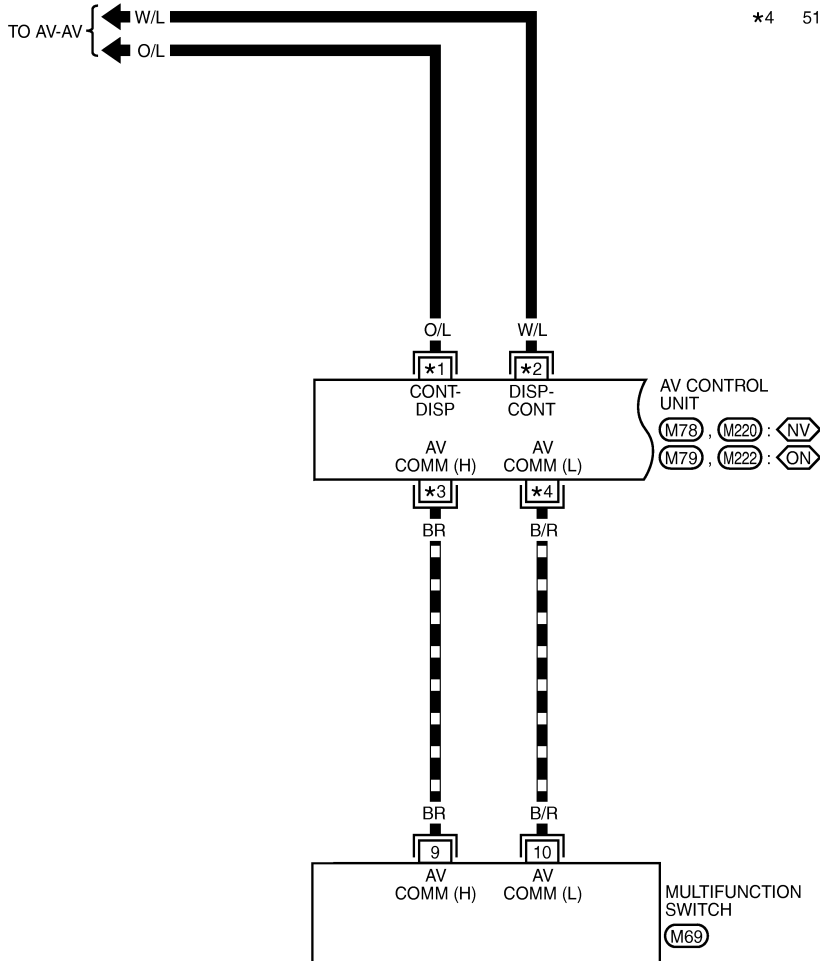

TKWT6874E



A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW


FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

WW-WIPER-05

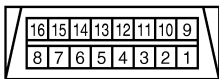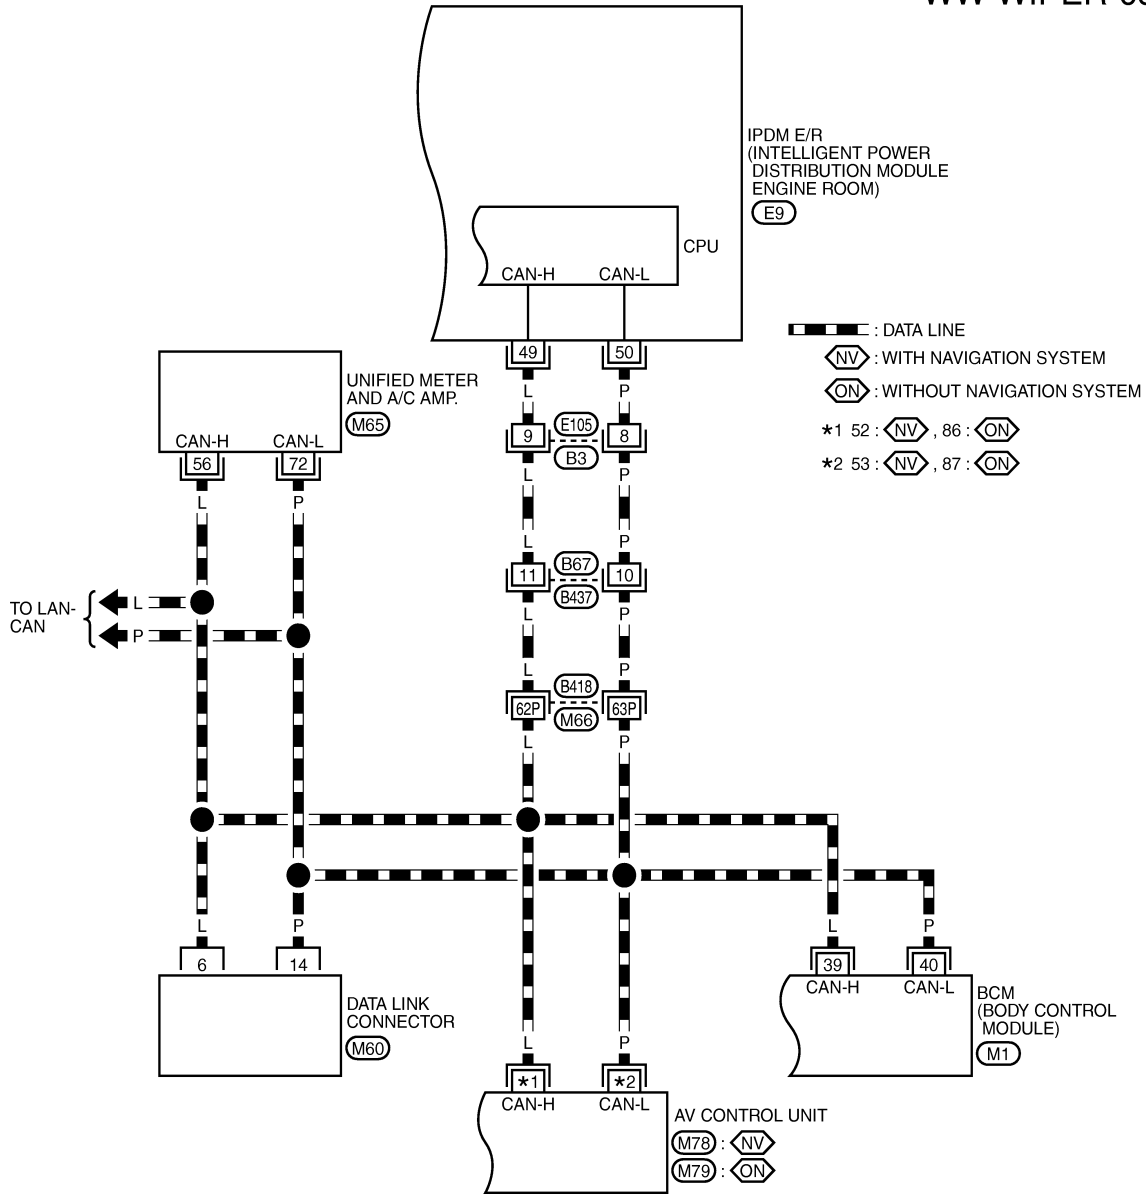

(M60) W

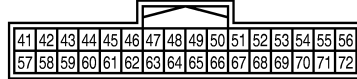


(M65) W




REFER TO THE FOLLOWING.

(B418) - SUPER MULTIPLE JUNCTION (SMJ)


(M1) - ELECTRICAL UNITS

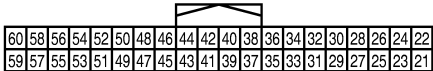


(M78) W

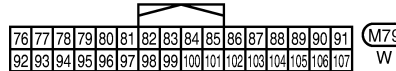

(M79) W

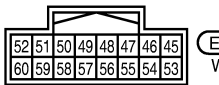

(E9) W

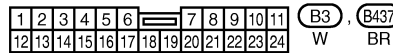

(B3) W

(B437) BR

TKWT6875E

INFOID:000000002956971






Terminal and Reference Value for BCM

CAUTION:

- Check combination switch system terminal waveform under the loaded condition with lighting switch, turn signal switch and wiper switch OFF not to be fluctuated by overloaded.
- Turn wiper dial position to 4 except when checking waveform or voltage of wiper dial position. Wiper dial position can be confirmed on CONSULT-III. Refer to [WW-17, "CONSULT-III Functions \(BCM\)"](#).

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

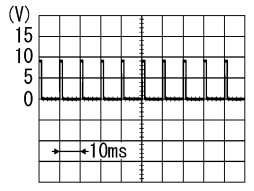
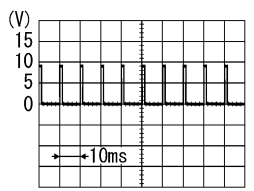
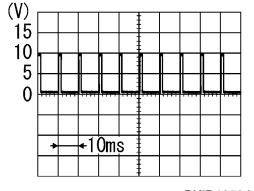
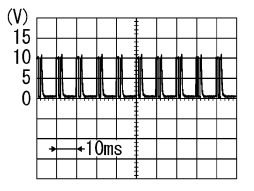
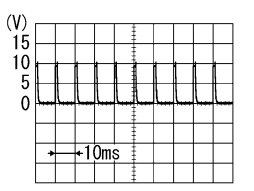
Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
4	R/G	Combination switch input 3	ON	Lighting, turn, wiper OFF (Wiper dial position 4)	<ul style="list-style-type: none"> Any of several conditions below Front wiper SW MIST Front wiper SW INT Front wiper SW LO  <p style="text-align: center;">Approx. 1.0 V</p>
				OFF	Approx. 0 V
5	Y	Combination switch input 2	ON	Lighting, turn, wiper OFF	<ul style="list-style-type: none"> Any of several conditions below Front washer switch (Wiper dial position 4) Wiper dial position 1 Wiper dial position 5 Wiper dial position 6  <p style="text-align: center;">Approx. 1.0 V</p>
				OFF (Wiper dial position 4)	Approx. 0 V
6	LG/B	Combination switch input 1	ON	Lighting, turn, wiper OFF	<ul style="list-style-type: none"> Any of several conditions below Front wiper switch HI (Wiper dial position 4) Wiper dial position 3  <p style="text-align: center;">Approx. 1.0 V</p>
				Lighting, turn, wiper OFF	<ul style="list-style-type: none"> Any of several conditions below Wiper dial position 1 Wiper dial position 2  <p style="text-align: center;">Approx. 1.7 V</p>
				Lighting, turn, wiper OFF	<ul style="list-style-type: none"> Any of several conditions below Wiper dial position 6 Wiper dial position 7  <p style="text-align: center;">Approx. 0.8 V</p>
				OFF (Wiper dial position 4)	Approx. 0 V

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

WW







FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

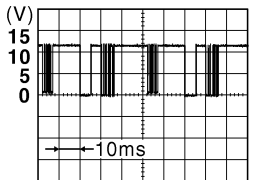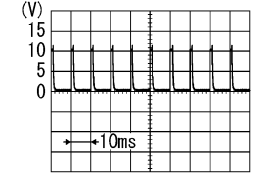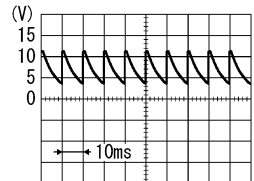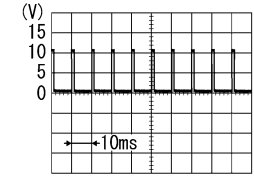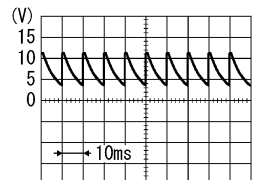Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
24	R	Rain sensor serial link	ON	—	 <p style="text-align: right; font-size: small;">JPMIA0156GB</p> <p style="text-align: center;">Approx. 8.7 V</p>
32	LG	Combination switch output 5	ON	Lighting, turn, wiper OFF	 <p style="text-align: right; font-size: small;">PKIB4956J</p> <p style="text-align: center;">Approx. 1.0 V</p>
				OFF (Wiper dial position 4)	 <p style="text-align: right; font-size: small;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.0 - 7.5 V</p>
33	GR	Combination switch output 4	ON	Lighting, turn, wiper OFF (Wiper dial position 4)	 <p style="text-align: right; font-size: small;">PKIB4958J</p> <p style="text-align: center;">Approx. 1.2 V</p>
				OFF (Wiper dial position 4)	 <p style="text-align: right; font-size: small;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.0 - 7.5 V</p>

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

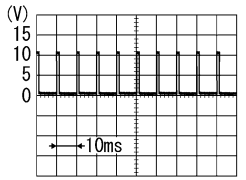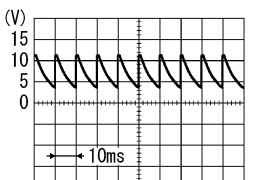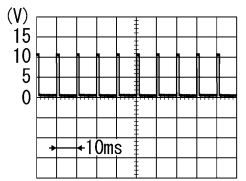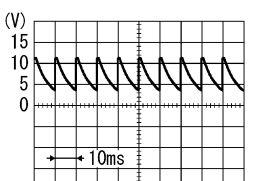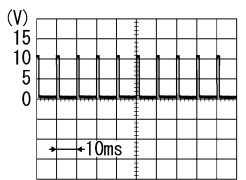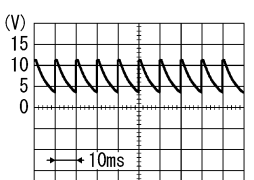Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
34	L	Combination switch output 3	ON	Lighting, turn, wiper OFF	<p>Any of several conditions below</p> <ul style="list-style-type: none"> • Wiper dial position 1 • Wiper dial position 2 • Wiper dial position 3  <p style="text-align: right;">PKIB4958J</p> <p style="text-align: center;">Approx. 1.2 V</p>
				OFF (Wiper dial position 4)	 <p style="text-align: right;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.0 - 7.5 V</p>
35	SB	Combination switch output 2	ON	Lighting, turn, wiper OFF (Wiper dial position 4)	<p>Any of several conditions below</p> <ul style="list-style-type: none"> • Front wiper switch INT • Front wiper switch HI  <p style="text-align: right;">PKIB4958J</p> <p style="text-align: center;">Approx. 1.2 V</p>
				OFF	 <p style="text-align: right;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.0 - 7.5 V</p>
36	V	Combination switch output 1	ON	Lighting, turn, wiper OFF (Wiper dial position 4)	<p>Any of several conditions below</p> <ul style="list-style-type: none"> • Front wiper switch MIST • Front wiper switch LO • Front washer switch  <p style="text-align: right;">PKIB4958J</p> <p style="text-align: center;">Approx. 1.2 V</p>
				OFF (Wiper dial position 4)	 <p style="text-align: right;">PKIB4960J</p> <p style="text-align: center;">Approx. 7.0 - 7.5 V</p>
38	W	Ignition switch (ON)	ON	—	Battery voltage

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

WW

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

Terminal No.	Wire color	Signal name	Measuring condition		Reference value
			Ignition switch	Operation or condition	
39	L	CAN-H	—	—	—
40	P	CAN-L	—	—	—
42	P	Battery power supply	OFF	—	Battery voltage
52	B	Ground	ON	—	Approx. 0 V
55	W	Battery power supply	OFF	—	Battery voltage

Terminal and Reference Value for IPDM E/R

INFOID:000000002956972

Terminal No.	Wire color	Signal name	Measuring condition		Reference value	
			Ignition switch	Operation or condition		
19	O	High speed signal	ON	—	Battery voltage	
23	V	Low speed signal	ON	Wiper switch	OFF	Approx. 0 V
					LO	Battery voltage
31	L/B	High speed ground	ON	—	Approx. 0 V	
32	L/Y	Wiper auto stop signal ^{NOTE}	ON	Wiper operating		Approx. 0 V
				Wiper stopped		Battery voltage
35	R	Front wiper reverse relay signal	ON	Wiper switch	OFF	Battery voltage
					HI	Approx. 0 V
38	B	Ground	ON	—	Approx. 0 V	
44	G/L	Front washer motor and front wiper auto stop signal (HI) power supply	ON	—	Battery voltage	
49	L	CAN-H	—	—	—	
50	P	CAN-L	—	—	—	
51	B	Ground	ON	—	Approx. 0 V	

NOTE:

- During LO operation, terminal No. 32 detects front wiper motor stopping or moving by front wiper auto stop signal.
- During HI operation, terminal No. 32 detects front wiper motor stopping or moving by front wiper auto stop signal that is output from terminal No. 44 (not from terminal No. 32).

How to Perform Trouble Diagnosis

INFOID:000000002956973

1. Confirm the symptoms and customer complaint.
2. Understand operation description and function description. Refer to [WW-4, "System Description"](#).
3. Perform the Preliminary Check. Refer to [WW-16, "Preliminary Check"](#).
4. Check symptom and repair or replace the cause of malfunction.
5. Does the front wiper and washer operate normally? If YES, GO TO 6. If NO, GO TO 4.
6. INSPECTION END

Preliminary Check

INFOID:000000002956974

CHECK POWER SUPPLY AND GROUND CIRCUIT

1. CHECK FUSES AND FUSIBLE LINK

Check for blown fuses and fusible link.

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

Unit	Power source	Fuse and fusible link No.
BCM	Battery	F
		21
	Ignition switch ON or START	1
Front washer motor, front washer pump and front wiper HI auto stop signal	Ignition switch ON or START	84
Front wiper motor, front wiper low relay, front wiper high relay	Battery	73
Front wiper reverse relay	Ignition switch ON or START	12

Refer to [WW-8. "Wiring Diagram - WIPER -"](#).

OK or NG


OK >> GO TO 2.

NG >> If fuse or fusible link is blown, be sure to eliminate cause of malfunction before installing new fuse or fusible link. Refer to [PG-4](#).

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminal (+)		Terminal (-)	Ignition switch position	
BCM connector	Terminal		OFF	ON
M1	38	Ground	Approx. 0 V	Battery voltage
M2	42		Battery voltage	Battery voltage
	55		Battery voltage	Battery voltage

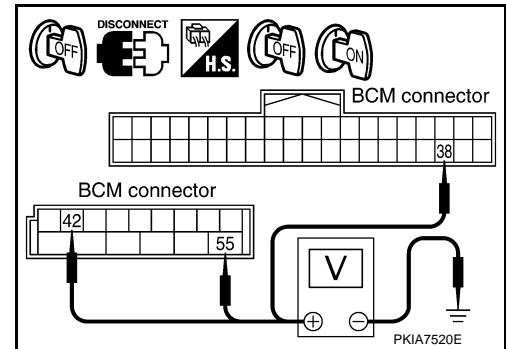

OK or NG


OK >> GO TO 3.

NG >> Repair harness or connector.

3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM connector	Terminal	Ground	Continuity
M2	52		Yes

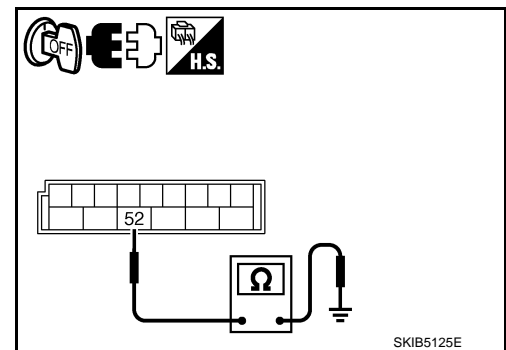

OK or NG

OK >> INSPECTION END

NG >> Repair harness or connector.

CONSULT-III Functions (BCM)

INFOID:000000002956975

CONSULT-III can display each diagnostic item using the diagnostic test mode shown following.

Diagnosis mode	Description
DATA MONITOR	Displays BCM input data in real time.
ACTIVE TEST	Device operation can be checked by applying a drive signal to device.
SELF-DIAG RESULTS	BCM performs self-diagnosis of CAN communication.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

DATA MONITOR

Display Item List

Monitor item	Contents
IGN ON SW "ON/OFF"	Displays status (ignition switch IGN position: ON/other: OFF) of ignition switch judged from the ignition switch signal.
IGN SW CAN "ON/OFF"	Displays status (ignition switch IGN position: ON/other: OFF) of ignition switch judged from the ignition switch signal (CAN communication lines).
FR WIPER HI "ON/OFF"	Displays status (front wiper switch high position: ON/other: OFF) of front wiper high switch judged from the wiper switch signal.
FR WIPER LOW "ON/OFF"	Displays status (front wiper switch low position: ON/other: OFF) of front wiper low switch judged from the wiper switch signal.
FR WIPER INT "ON/OFF"	Displays status (front wiper switch intermittent position: ON/other: OFF) of front wiper intermittent switch judged from the wiper switch signal.
FR WASHER SW "ON/OFF"	Displays status (front washer switch ON position: ON/other: OFF) of front washer switch judged from the wiper switch signal.
INT VOLUME "1 - 7"	Displays status (wiper intermittent dial position setting 1- 7) of intermittent volume switch judged from the wiper switch signal.
FR WIPER STOP "ON/OFF"	Displays status (front wiper stop position: ON/move: OFF) of front wiper motor stop judged from the front wiper auto stop signal.
VEHICLE SPEED "km/h"	Displays status vehicle speed as judged from vehicle speed signal.

ACTIVE TEST

Display Item List

Test item	Indication on CONSULT-III display	Description
Front wiper output	FR WIPER	With a certain operation (HI, LO, INT), the front wiper can be operated. ^{NOTE}

NOTE:

With INTERMITTENT operation, the front wiper moves only once.

CONSULT-III Functions (IPDM E/R)

INFOID:000000002956976

CONSULT-III can display each diagnostic item using the diagnostic test mode shown following.

Diagnosis Mode	Description
SELF-DIAG RESULTS	Refer to PG-20. "CONSULT-III Function (IPDM E/R)".
DATA MONITOR	The input/output data of IPDM E/R is displayed in real time.
CAN DIAG SUPPORT MNTR	The result of transmit/receive diagnosis of CAN communication can be read.
ACTIVE TEST	IPDM E/R sends a drive signal to electronic components to check their operation.

DATA MONITOR

All Signals, Main Signals, Selection From Menu

Item name	CONSULT-III screen display	Display or unit	Monitor item selection			Description
			ALL SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
FR wiper request	FR WIP REQ	STOP/1 LOW/ LOW/HI	×	×	×	Signal status input from BCM
Wiper auto stop	WIP AUTO STOP	ACT P/STOP P	×	×	×	Output status of IPDM E/R
Wiper protection	WIP PROT	OFF/BLOCK	×	×	×	Control status of IPDM E/R

NOTE:

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

Perform monitoring of IPDM E/R data with the ignition switch ON. When the ignition switch is at ACC, the display may not be correct.

ACTIVE TEST

Test item	CONSULT-III screen display	Description
Front wiper (HI, LO) output	FRONT WIPER	With a certain operation (HI, LO), the front wiper relay (HIGH and LOW) can be operated.

Front Wiper Does Not Operate

INFOID:000000002956977

CAUTION:

During IPDM E/R fail-safe control, front wipers may not operate. Refer to [PG-19, "System Description"](#) in "PG IPDM E/R" to make sure that it is not in fail-safe status.

1. ACTIVE TEST

With CONSULT-III

- Select "FRONT WIPER" of IPDM E/R active test item.
- With operating the test item, check that front wiper LO and HI operation.

Without CONSULT-III

Start up auto active test. Refer to [PG-22, "Auto Active Test"](#).

Does front wiper operate normally?

- YES >> GO TO 2.
NO >> GO TO 4.

2. CHECK CIRCUIT BETWEEN COMBINATION SWITCH AND BCM

With CONSULT-III

- Select "FR WIPER INT", "FR WIPER LOW", and "FR WIPER HI" of BCM data monitor item.
- With operating the wiper switch, check the monitor status.

Without CONSULT-III

Refer to [LT-202, "Combination Switch Inspection"](#).

OK or NG

- OK >> GO TO 3.
NG >> Check combination switch (wiper switch). Refer to [LT-202, "Combination Switch Inspection"](#).

3. CHECK CIRCUIT BETWEEN IPDM E/R AND BCM

Select "BCM" on CONSULT-III, and perform self-diagnosis for "BCM".

Displayed self-diagnosis results

- NO DTC >> Replace BCM. Refer to [BCS-14, "Removal and Installation of BCM"](#).
CAN COMM CIRCUIT >> Check CAN communication line of BCM. Refer to [LAN-29, "CAN System Specification Chart"](#).


4. CHECK CIRCUIT BETWEEN FRONT WIPER MOTOR AND FRONT WIPER REVERSE RELAY

- Turn ignition switch OFF.
- Disconnect front wiper motor connector.
- Remove front wiper reverse relay.
- Check continuity between front wiper motor harness connector (A) and front wiper reverse relay harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E27	1	E33	3	Yes

OK or NG

- OK >> GO TO 5.
NG >> Repair harness or connector.

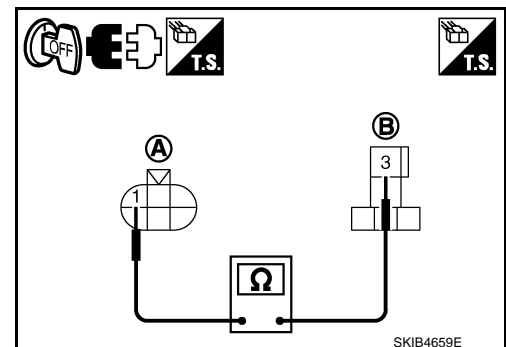


FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

5. CHECK FRONT WIPER REVERSE RELAY


1. Check continuity between front wiper reverse relay terminals.

Front wiper reverse relay terminals		Continuity
3	4	Yes

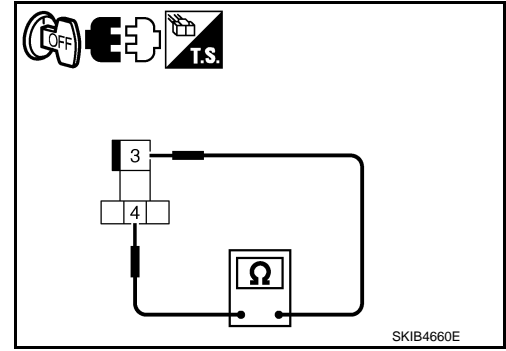

2. Check continuity between front wiper reverse relay terminals.

Front wiper reverse relay terminals		Condition	Continuity
3	5	Applying battery voltage to between terminals 1 and 2	Yes
		No battery voltage	No

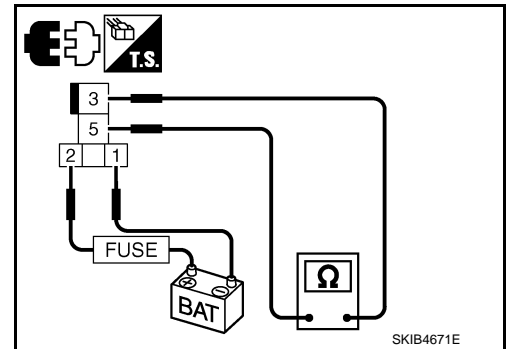

OK or NG


OK >> GO TO 6.

NG >> Replace front wiper reverse relay.

6. CHECK FRONT WIPER CIRCUIT


1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector (A) and front wiper motor harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E7	23	E27	3	Yes
	31		2	

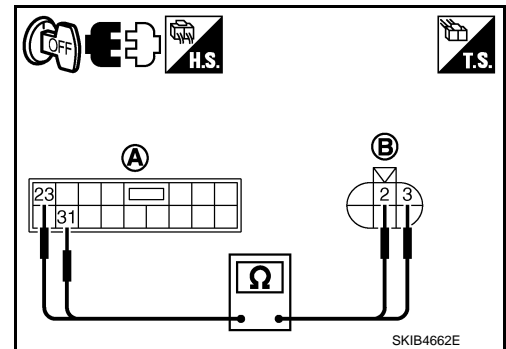

3. Check continuity between IPDM E/R harness connector (A) and front wiper reverse relay harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E7	19	E33	5	Yes

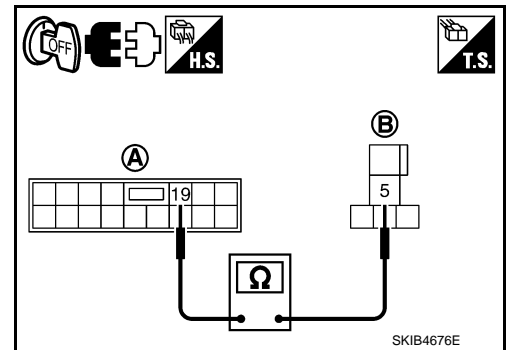

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

4. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R connector	Terminal	Ground	Continuity
E7	19		Ground
	23		

OK or NG

- OK >> GO TO 7.
 NG >> Repair harness or connector.

7. CHECK IPDM E/R

Ⓜ With CONSULT-III

1. Connect IPDM E/R connector and front wiper motor connector.
2. Install front wiper reverse relay.
3. Select "FRONT WIPER" of IPDM E/R active test item.
4. With operating the test item, check voltage between IPDM E/R harness connector and ground.

Terminal		Condition	Voltage (Approx.)
(+)	(-)		
IPDM E/R connector	Terminal		
E7	19	Stopped	Battery voltage
		HI operation	
	23	Stopped	0 V
		LO operation	Battery voltage

ⓧ Without CONSULT-III

1. Connect IPDM E/R connector and front wiper motor connector.
2. Install front wiper reverse relay.
3. Start up auto active test. Refer to [PG-22, "Auto Active Test"](#).
4. With operating the test item, check voltage between IPDM E/R harness connector and ground.

Terminal		Condition	Voltage (Approx.)
(+)	(-)		
IPDM E/R connector	Terminal		
E7	19	Stopped	Battery voltage
		HI operation	
	23	Stopped	0 V
		LO operation	Battery voltage



OK or NG

- OK >> Replace front wiper motor. Refer to [WW-32, "Disassembly and Assembly of Front Wiper Drive Assembly"](#).
 NG >> Replace IPDM E/R. Refer to [PG-27, "Removal and Installation of IPDM E/R"](#).

Front Wiper Does Not Return to Stop Position (After Front Wiper Operate for 10 Seconds, They Stop for 20 Seconds, and After Repeating the Operation Five Times, They Become Inoperative)

INFOID:000000002956978

CAUTION:

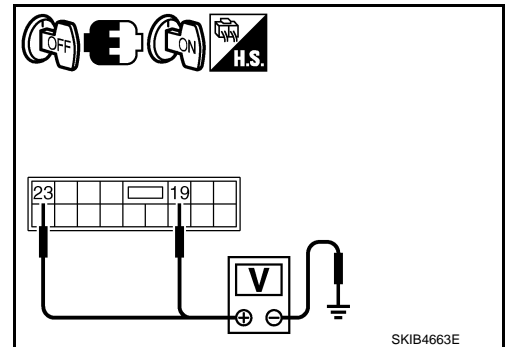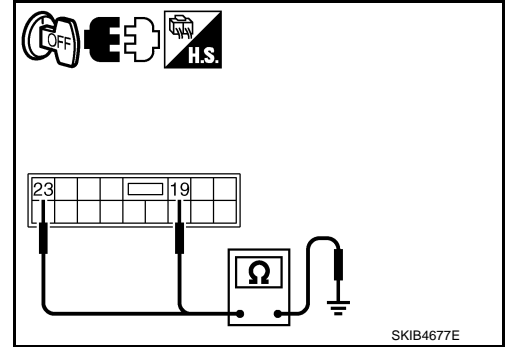

A
B
C
D
E
F
G
H
I
J

WW

L
M
N
O
P

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

- When auto stop signal has not varied for 10 seconds or longer while IPDM E/R is operating front wipers, IPDM E/R considers that front wipers are locked, and stops wiper output. That causes this symptom.
- This status can be checked by “DATA MONITOR” of “IPDM E/R” on which “WIPER PROTECTION” item shows “BLOCK”.

1. CHECK FRONT WIPER STOP SIGNAL

④ With CONSULT-III

1. Select “WIP AUTO STOP” of IPDM E/R data monitor item.
2. Check that “WIP AUTO STOP” turns “ACT P” - “STOP P” linked with wiper operation.

⊗ Without CONSULT-III

GO TO 2.

OK or NG


OK >> Replace IPDM E/R. Refer to [PG-27, "Removal and Installation of IPDM E/R"](#).

NG >> GO TO 2.

2. CHECK IPDM E/R

Check voltage between IPDM E/R harness connector and ground while front wiper motor is stopped and while front wiper (HI, LO) is operating.

Terminal		Condition	Voltage (Approx.)
(+)	(-)		
IPDM E/R connector	Terminal		
E7	32	Wiper stopped	Battery voltage
		Wiper operating	0 V

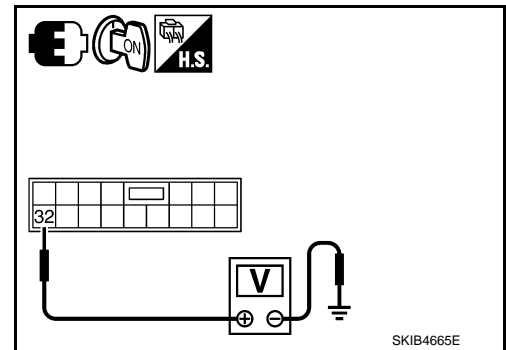

OK or NG

OK >> Replace IPDM E/R. Refer to [PG-27, "Removal and Installation of IPDM E/R"](#).

NG >> GO TO 3.


3. CHECK FRONT WIPER AUTO STOP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and front wiper motor connector.
3. Check continuity between IPDM E/R harness connector (A) and front wiper motor harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E7	32	E27	5	Yes

4. Check continuity between IPDM E/R harness connector (A) and ground.

A		Ground	Continuity
Connector	Terminal		
E7	32		No

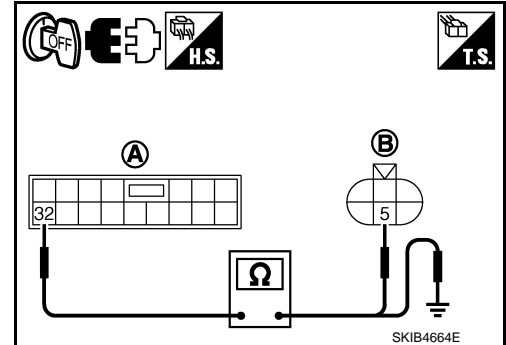

OK or NG

OK >> Replace front wiper motor. Refer to [WW-32, "Disassembly and Assembly of Front Wiper Drive Assembly"](#).

NG >> Repair harness or connector.

Front Wiper Does Not Return to Stop Position When Front Wiper Motor Operates at Low Speed (After Front Wiper Operate for 10 Seconds, They Stop for 20 Seconds, and

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

After Repeating the Operation Five Times, They Become Inoperative)

INFOID:000000002956979

CAUTION:

- When auto stop signal has not varied for 10 seconds or longer while IPDM E/R is operating front wipers, IPDM E/R considers that front wipers are locked, and stops wiper output. That causes this symptom.
- This status can be checked by "DATA MONITOR" of "IPDM E/R" on which "WIPER PROTECTION" item shows "BLOCK".

1. CHECK FRONT WIPER STOP SIGNAL

☐ With CONSULT-III

1. Select "WIP AUTO STOP" of IPDM E/R data monitor item.
2. Check that "WIP AUTO STOP" turns "ACT P" - "STOP P" linked with wiper LO operation.

☒ Without CONSULT-III

GO TO 2.


OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-27, "Removal and Installation of IPDM E/R"](#).
- NG >> GO TO 2.

2. CHECK IPDM E/R

Check voltage between IPDM E/R harness connector and ground while front wiper motor is stopped and while front wiper LO is operating.

Terminal		Condition	Voltage (Approx.)
(+)	(-)		
IPDM E/R connector	Terminal		
E7	32	Wiper stopped	Battery voltage
		Wiper operating	0 V

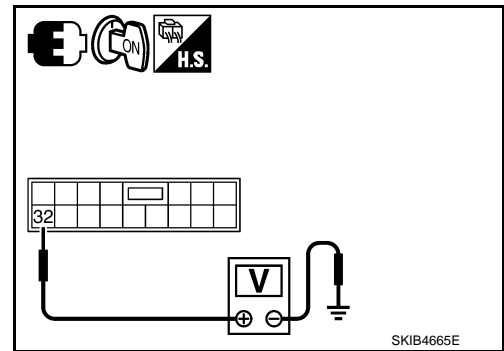


OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-27, "Removal and Installation of IPDM E/R"](#).
- NG >> GO TO 3.

3. CHECK CIRCUIT BETWEEN FRONT WIPER MOTOR AND GROUND

1. Turn ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Check continuity between front wiper motor harness connector and ground.

Front wiper motor connector	Terminal	Ground	Continuity
E27	6		

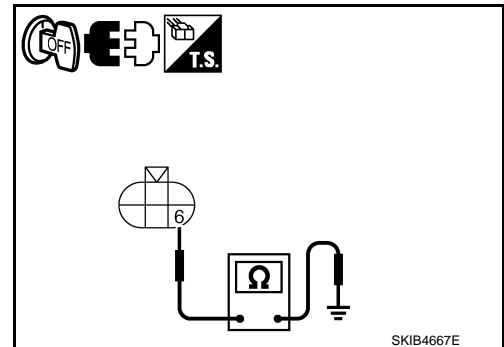

OK or NG

- OK >> Replace front wiper motor. Refer to [WW-32, "Disassembly and Assembly of Front Wiper Drive Assembly"](#).
- NG >> Repair harness or connector.

Front Wiper Does Not Return to Stop Position When Front Wiper Motor Operates at HIGH Speed (After Front Wiper Operate for 10 Seconds, They Stop for 20 Seconds, and After Repeating the Operation Five Times, They Become Inoperative)

INFOID:000000002956980

CAUTION:

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

- When auto stop signal has not varied for 10 seconds or longer while IPDM E/R is operating front wipers, IPDM E/R considers that front wipers are locked, and stops wiper output. That causes this symptom.
- This status can be checked by “DATA MONITOR” of “IPDM E/R” on which “WIPER PROTECTION” item shows “BLOCK”.

1. CHECK FRONT WIPER STOP SIGNAL

Ⓜ With CONSULT-III

1. Select “WIP AUTO STOP” of IPDM E/R data monitor item.
2. Check that “WIP AUTO STOP” turns “ACT P” - “STOP P” linked with wiper HI operation.

ⓧ Without CONSULT-III

GO TO 2.

OK or NG


OK >> Replace IPDM E/R. Refer to [PG-27, "Removal and Installation of IPDM E/R"](#).

NG >> GO TO 2.

2. CHECK IPDM E/R

Check voltage between IPDM E/R harness connector and ground while front wiper motor is stopped and while front wiper HI is operating.

Terminal		(-)	Condition	Voltage (Approx.)
(+)				
IPDM E/R connector	Terminal			
E7	32	Ground	Wiper stopped	Battery voltage
			Wiper operating	0 V

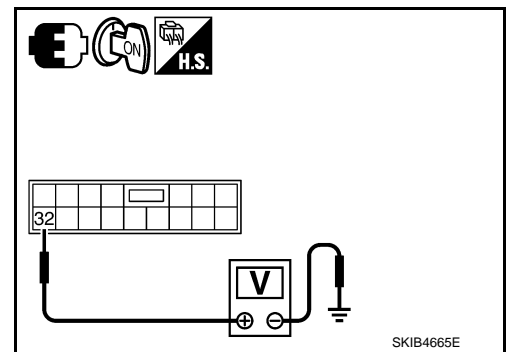

OK or NG


OK >> Replace IPDM E/R. Refer to [PG-27, "Removal and Installation of IPDM E/R"](#).

NG >> GO TO 3.

3. CHECK IPDM E/R

1. Disconnect front wiper motor connector.
2. Turn ignition switch ON.
3. Check voltage between front wiper motor harness connector and ground.

Terminal		(-)	Voltage (Approx.)
(+)			
Front wiper motor connector	Terminal		
E27	4	Ground	Battery voltage

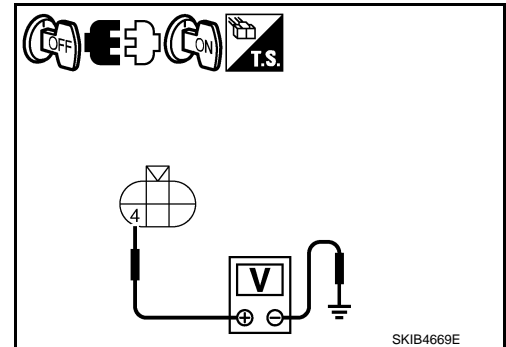

OK or NG

OK >> Replace front wiper motor. Refer to [WW-32, "Disassembly and Assembly of Front Wiper Drive Assembly"](#).

NG >> GO TO 4.

4. CHECK FRONT WIPER AUTO STOP CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

3. Check continuity between IPDM E/R harness connector (A) and front wiper motor harness connector (B).


A		B		Continuity
Connector	Terminal	Connector	Terminal	
E8	44	E27	4	Yes

4. Check continuity between IPDM E/R harness connector (A) and Ground.

A		Ground	Continuity
Connector	Terminal		
E8	44		No

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-27, "Removal and Installation of IPDM E/R"](#).
 NG >> Repair harness or connector.

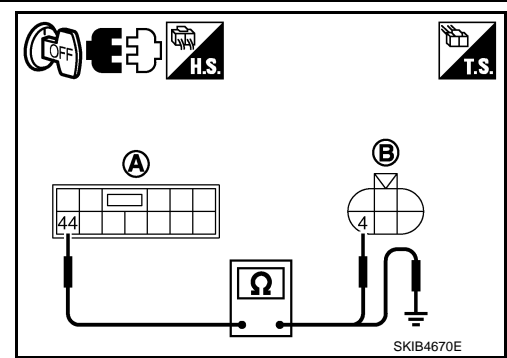

Only Front Wiper Low Does Not Operate

INFOID:000000002956981

1. ACTIVE TEST

With CONSULT-III

- Select "FRONT WIPER" of IPDM E/R active test item.
- With operating the test item, check that front wiper LO operation.

Without CONSULT-III

Start up auto active test. Refer to [PG-22, "Auto Active Test"](#).

Does front wiper operate normally?

- YES >> Refer to [LT-202, "Combination Switch Inspection"](#).
 NO >> GO TO 2.

2. CHECK IPDM E/R

With CONSULT-III

- Select "FRONT WIPER" of IPDM E/R active test item.
- With operating the test item, check voltage between IPDM E/R harness connector and ground.

Terminal (+)		Terminal (-)	Voltage (Approx.)
IPDM E/R connector	Terminal		
E7	23	Ground	Battery voltage


Without CONSULT-III

- Start up auto active test. Refer to [PG-22, "Auto Active Test"](#).
- Check voltage between IPDM E/R harness connector and ground.

Terminal (+)		Terminal (-)	Voltage (Approx.)
IPDM E/R connector	Terminal		
E7	23	Ground	Battery voltage

OK or NG

- OK >> GO TO 3.
 NG >> Replace IPDM E/R. Refer to [PG-27, "Removal and Installation of IPDM E/R"](#).

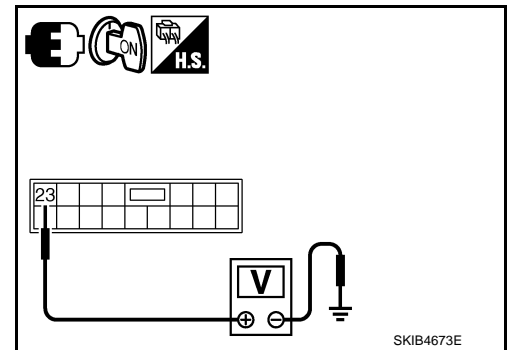

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

3. CHECK CIRCUIT BETWEEN IPDM E/R AND FRONT WIPER MOTOR

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and front wiper motor connector.
3. Check continuity between IPDM E/R harness connector (A) and front wiper motor harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E7	23	E27	3	Yes

4. Check continuity between IPDM E/R harness connector (A) and ground.

A		Ground	Continuity
Connector	Terminal		
E7	23		No

OK or NG

- OK >> GO TO 4.
 NG >> Repair harness or connector.

4. CHECK FRONT WIPER REVERSE RELAY

1. Remove front wiper reverse relay.
2. Check continuity between front wiper reverse relay terminals.

Front wiper reverse relay terminals		Continuity
3	4	
		Yes

OK or NG

- OK >> GO TO 5.
 NG >> Replace front wiper reverse relay.

5. CHECK CIRCUIT BETWEEN FRONT WIPER REVERSE RELAY AND GROUND

Check continuity between front wiper reverse relay harness connector and ground.

Front wiper reverse relay connector	Terminal	Ground	Continuity
E33	4		

OK or NG

- OK >> Replace front wiper motor. Refer to [WW-32. "Disassembly and Assembly of Front Wiper Drive Assembly"](#).
 NG >> Repair harness or connector.

Only Front Wiper HI Does Not Operate

1. ACTIVE TEST




With CONSULT-III

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check that front wiper HI operation.

Without CONSULT-III

Start up auto active test. Refer to [PG-22. "Auto Active Test"](#).

Does front wiper operate normally?

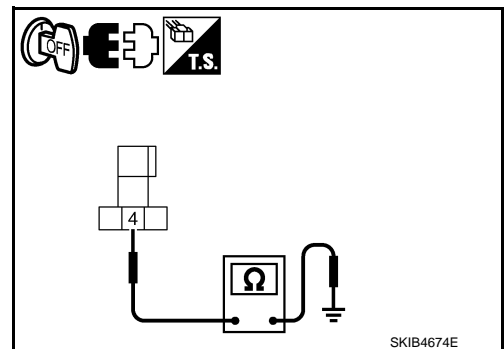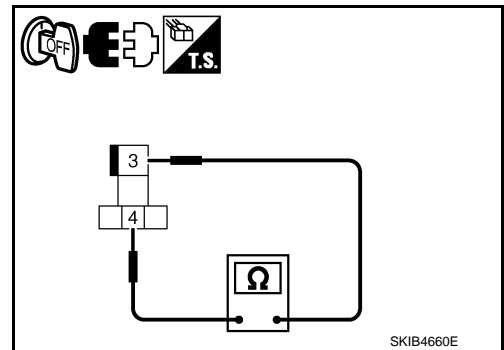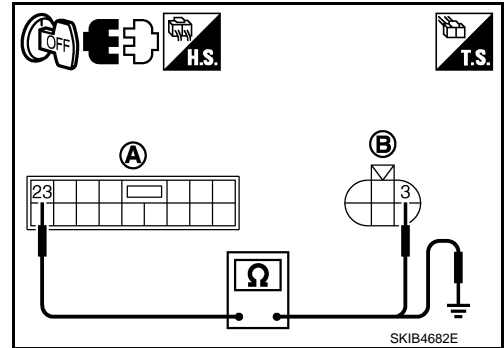

INFOID:000000002956982

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

- YES >> Refer to [LT-202. "Combination Switch Inspection"](#).
 NO >> GO TO 2.


2. CHECK IPDM E/R OUTPUT SIGNAL

1. Remove front wiper reverse relay.
2. Check voltage between front wiper reverse relay harness connector and ground.

Terminal		(-)	Voltage (Approx.)
(+)			
Front wiper reverse relay connector	Terminal		
E33	5	Ground	Battery voltage

OK or NG

- OK >> GO TO 4.
 NG >> GO TO 3.

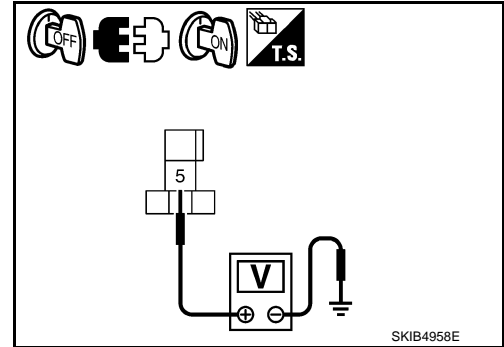

3. CHECK CIRCUIT BETWEEN IPDM E/R AND FRONT WIPER REVERSE RELAY

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector (A) and front wiper reverse relay harness connector (B).


A		B		Continuity
Connector	Terminal	Connector	Terminal	
E7	19	E33	5	Yes

3. Check continuity between IPDM E/R harness connector (A) and ground.

A		Ground	Continuity
Connector	Terminal		
E7	19		No

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-27. "Removal and Installation of IPDM E/R"](#).
 NG >> Repair harness or connector.

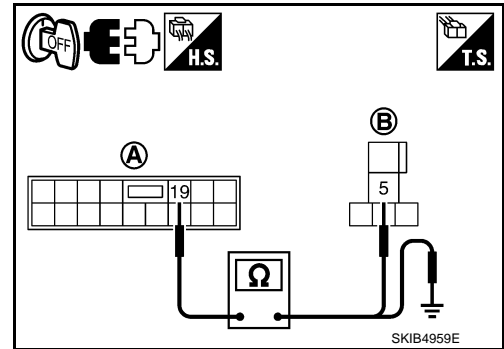


4. CHECK FRONT WIPER REVERSE RELAY

Check continuity between front wiper reverse relay terminals.

Front wiper reverse relay terminals		Condition	Continuity
3	5	Applying battery voltage to between terminals 1 and 2	Yes
		No battery voltage	No

OK or NG

- OK >> GO TO 5.
 NG >> Replace front wiper reverse relay.

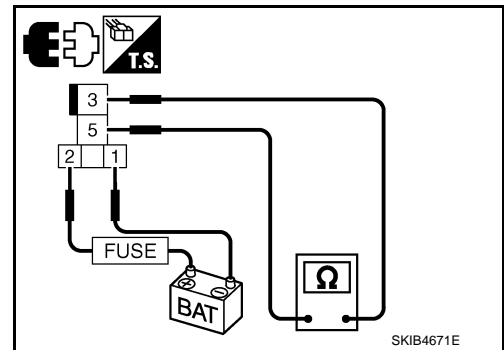

5. CHECK CIRCUIT BETWEEN IPDM E/R AND FRONT WIPER MOTOR

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector and front wiper motor connector.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

WW

FRONT WIPER AND WASHER SYSTEM


< SERVICE INFORMATION >

- Check continuity between IPDM E/R harness connector (A) and front wiper motor harness connector (B).

A		B		Continuity
Connector	Terminal	Connector	Terminal	
E7	31	E27	2	Yes

OK or NG

- OK >> GO TO 6.
- NG >> Repair harness or connector.

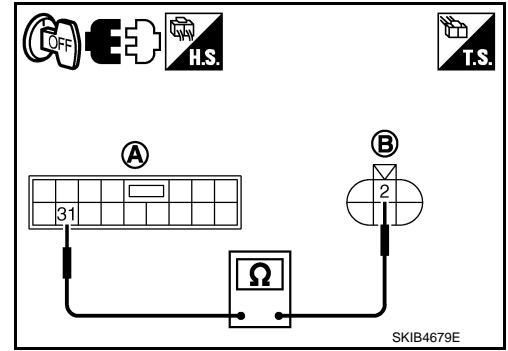


6. CHECK IPDM E/R

Ⓜ With CONSULT-III

- Connect IPDM E/R connector and front wiper motor connector.
- Install front wiper reverse relay.
- Select "FRONT WIPER" of IPDM E/R active test item.
- Check voltage between IPDM E/R harness connector and ground while front wiper HI is operating.

Terminal		Voltage (Approx.)
(+)	(-)	
IPDM E/R connector	Terminal	0 V
E7	31	

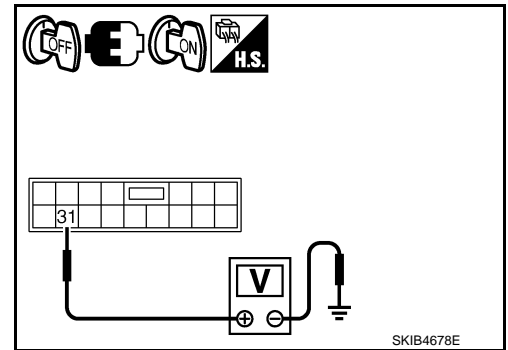

ⓧ Without CONSULT-III

- Connect IPDM E/R connector and front wiper motor connector.
- Install front wiper reverse relay.
- Start up auto active test. Refer to [PG-22, "Auto Active Test"](#).
- Check voltage between IPDM E/R harness connector and ground while front wiper HI is operating.

Terminal		Voltage (Approx.)
(+)	(-)	
IPDM E/R connector	Terminal	0 V
E7	31	

OK or NG

- OK >> Replace front wiper motor. Refer to [WW-32, "Disassembly and Assembly of Front Wiper Drive Assembly"](#).
- NG >> Replace IPDM E/R. Refer to [PG-27, "Removal and Installation of IPDM E/R"](#).

Only Front Wiper Auto Does Not Operate

INFOID:000000003302920

NOTE:

When the front wiper switch is turned to INT position, front wiper operates once regardless of a rainy condition.

1. CHECK CONDITIONS OF WINDSHIELD (RAIN SENSOR DETECTION AREA)

Check rain sensor detection area of windshield for dirt such as greases.

OK or NG

- OK >> GO TO 2.
- NG >> Clean rain sensor detection area of windshield fully.

2. CHECK RAIN SENSOR POWER SUPPLY

- Turn ignition switch OFF.
- Disconnect rain sensor connector.
- Turn ignition switch ON.
- Check voltage between rain sensor harness connector and ground.

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

Terminal		Voltage
(+)		
Rain sensor connector	Terminal	(-)
M190	1	Ground
		Battery voltage

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace harness.

3. CHECK RAIN SENSOR GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between rain sensor harness connector and ground.

Rain sensor		Ground	Continuity
Connector	Terminal		
M190	3		No

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace harness.

4. CHECK RAIN SENSOR SIGNAL

1. Connect rain sensor connector.
2. Turn ignition switch ON.
3. Check signal between BCM harness connector and ground with oscilloscope.

Terminal		Condition	Signal (Reference value)
(+)			
BCM connector	Terminal	(-)	
M1	24	Ground	Ignition switch ON

OK or NG

- OK >> Replace rain sensor. Refer to [WW-36. "Removal and Installation of Rain Sensor"](#).
- NG >> GO TO 5.

5. CHECK RAIN SENSOR SIGNAL CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and rain sensor harness connector.

BCM		Rain sensor		Continuity
Connector	Terminal	Connector	Terminal	
M1	24	M190	2	Yes

3. Check continuity between BCM harness connector and ground.

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

BCM		Ground	Continuity
Connector	Terminal		
M1	24		No

OK or NG

- OK >> Replace BCM. Refer to [BCS-14, "Removal and Installation of BCM"](#).
- NG >> Repair or replace harness.

Front Wiper Intermittent Operation Switch Position Cannot Be Adjusted

INFOID:000000002956985

1. CHECK CIRCUIT BETWEEN COMBINATION SWITCH AND BCM

Ⓟ With CONSULT-III

1. Select "INT VOLUME" of BCM data monitor item.
2. Check that "INT VOLUME", changes in order from 1 to 7 according to wiper switch operation.

ⓧ Without CONSULT-III

Refer to [LT-202, "Combination Switch Inspection"](#).

OK or NG

- OK >> Replace BCM. Refer to [BCS-14, "Removal and Installation of BCM"](#).
- NG >> Check combination switch (wiper switch). Refer to [LT-202, "Combination Switch Inspection"](#).

Wiper Does Not Wipe When Front Washer Operates

INFOID:000000002956986

1. CHECK CIRCUIT BETWEEN COMBINATION SWITCH AND BCM

Ⓟ With CONSULT-III

1. Select "FR WASHER SW" of BCM data monitor item.
2. Check that "FR WASHER SW" turn ON-OFF according to front wiper switch operation.

ⓧ Without CONSULT-III

Refer to [LT-202, "Combination Switch Inspection"](#).

OK or NG

- OK >> Replace BCM. Refer to [BCS-14, "Removal and Installation of BCM"](#).
- NG >> Check combination switch (wiper switch). Refer to [LT-202, "Combination Switch Inspection"](#).

Front Wiper Does Not Stop

INFOID:000000002956987

1. CHECK CIRCUIT BETWEEN COMBINATION SWITCH AND BCM

Ⓟ With CONSULT-III

1. Select "FR WIPER INT", "FR WIPER LOW", "FR WIPER HI", and "FR WASHER SW" of BCM data monitor item.
2. With operating the wiper switch, check the monitor status.

ⓧ Without CONSULT-III

Refer to [LT-202, "Combination Switch Inspection"](#).

OK or NG

- OK >> Replace IPDM E/R. Refer to [PG-27, "Removal and Installation of IPDM E/R"](#).
- NG >> Check combination switch (wiper switch). Refer to [LT-202, "Combination Switch Inspection"](#).

Removal and Installation of Front Wiper Arms, Adjustment of Wiper Arms Stop Location

INFOID:000000002956988

REMOVAL


1. Turn wiper switch ON to operate wiper motor, and then turn wiper switch OFF (auto stop).
2. Open hood, remove arm caps, and remove wiper arm nuts.
3. Raise wiper arms, and remove wiper arms from the vehicle.

INSTALLATION


FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

1. Clean up the pivot area as shown in the figure. This will reduce possibility of wiper arm looseness.

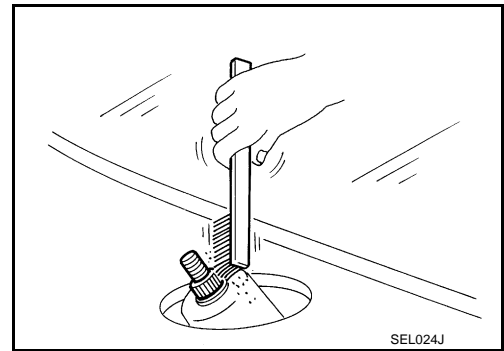

2. Prior to wiper arm installation, turn on wiper switch to operate wiper motor and then turn it "OFF" (auto stop).
3. Push wiper arm onto pivot shaft, paying attention to blind spline.
4. Lift the blade up and then set it down onto glass surface to set the blade center to clearance "L1" & "L2" immediately before tightening nuts.
5. Spray washer fluid. Turn on wiper switch to operate wiper motor and then turn it "OFF".
6. Make sure that wiper blades stop within clearance "L1" & "L2".

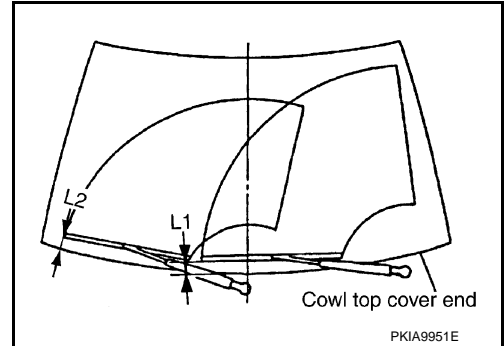

Clearance "L1" : 17.9 ± 7.5 mm (0.705 ± 0.295 in)

Clearance "L2" : 33.2 ± 7.5 mm (1.307 ± 0.295 in)

- Tighten wiper arm nuts to specified torque.

Front wiper arm nuts  : 23.5 N·m (2.4 kg·m, 17 ft·lb)

7. Attach wiper arm caps.

ADJUSTMENT

Refer to "INSTALLATION".


Removal and Installation of Front Wiper Drive Assembly

INFOID:000000002956989

WW

REMOVAL

1. Operate front wiper motor, and stop at the auto stop position.
2. Remove wiper arms. Refer to [WW-30. "Removal and Installation of Front Wiper Arms. Adjustment of Wiper Arms Stop Location"](#).
3. Remove cowl top cover. Refer to [EI-29](#).
4. Disconnect wiper motor connector and remove connector clips.
5. Remove front wiper drive assembly mounting bolts (A), and remove front wiper drive assembly (1) from the vehicle.

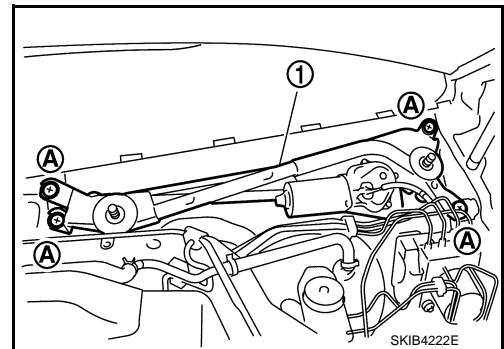

INSTALLATION

1. Install front wiper drive assembly to the vehicle.

FRONT WIPER AND WASHER SYSTEM


< SERVICE INFORMATION >

Front wiper drive assembly mounting bolts  : 4.5 N·m (0.46kg-m, 40 in-lb)


2. Connect wiper motor connector. Turn wiper switch ON to operate wiper motor, then turn wiper switch OFF (auto stop).
3. Install connector clips to the wiper frame, and install cowl top cover. Refer to [EI-29](#).
4. Attach wiper arms. Refer to [WW-30. "Removal and Installation of Front Wiper Arms. Adjustment of Wiper Arms Stop Location"](#).
5. Adjustment of wiper arm stop location.
6. Install arm caps.


Disassembly and Assembly of Front Wiper Drive Assembly

INFOID:000000002956990

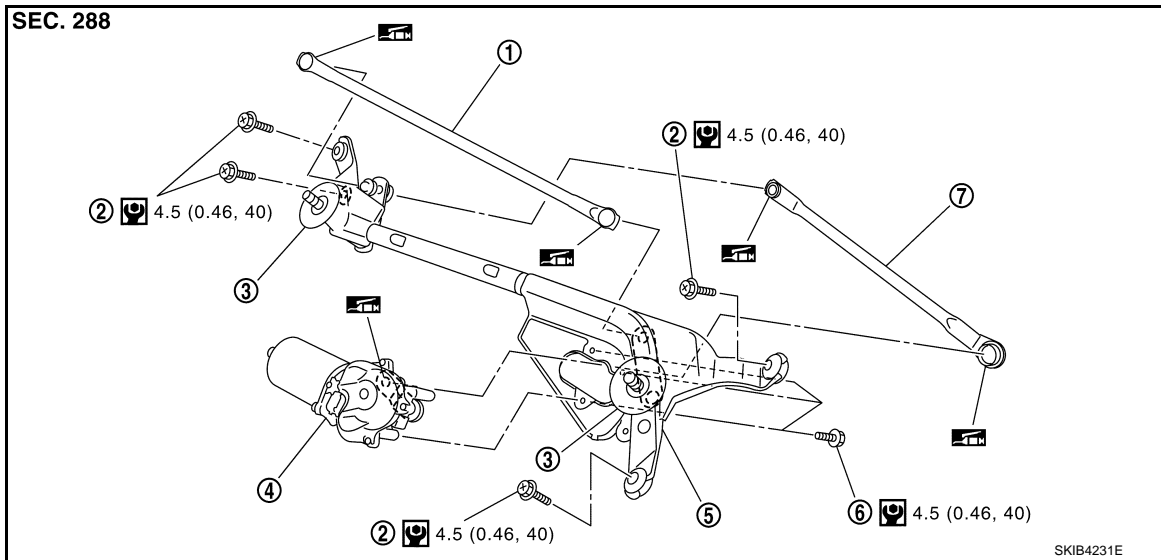

- | | | |
|--------------------|----------------|---------------|
| 1. Wiper linkage 1 | 2. Bolt | 3. Shaft seal |
| 4. Wiper motor | 5. Wiper frame | 6. Bolt |
| 7. Wiper linkage 2 | | |

 : N·m (kg-m, in-lb)

 : Should be lubricated with grease.

DISASSEMBLY

1. Remove wiper linkage from wiper motor and motor frame.
2. Remove wiper motor mounting bolts, and remove wiper motor from wiper frame.

CAUTION:

Be careful not to bend linkage and not to damage the resin part of ball joint when removing wiper linkage.

ASSEMBLY

1. Connect wiper motor connector. Turn wiper switch ON to operate wiper motor, and then turn wiper switch OFF (auto stop).
2. Disconnect wiper motor connector.
3. Install wiper motor to wiper frame.

Wiper motor mounting bolts  : 4.5 N·m (0.46 kg-m, 40 in-lb)

4. Install wiper linkage to wiper frame and wiper motor.

CAUTION:

• **Never drop the wiper motor or cause it to contact other parts.**

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

- Check grease conditions of the motor arm and wiper linkage joint (at retainer). Apply grease if necessary.


Washer Nozzle Adjustment

INFOID:000000002956991


Adjust spray positions to match the positions shown in the figure.

Unit: mm (in)

Spray position	h (height)	l (width)	φ (Diameter) (spray point area)
A	193.9 (7.63)	514.2 (20.24)	180 (7.09)
B	288.7 (11.37)	307.5 (12.11)	240 (9.45)
C	119.7 (4.71)	175.6 (6.91)	130 (5.12)
D	158.0 (6.22)	42.7 (1.68)	165 (6.50)
E	279.0 (10.98)	280.3 (11.04)	200 (7.87)
F	127.6 (5.02)	488.4 (19.23)	95 (3.74)

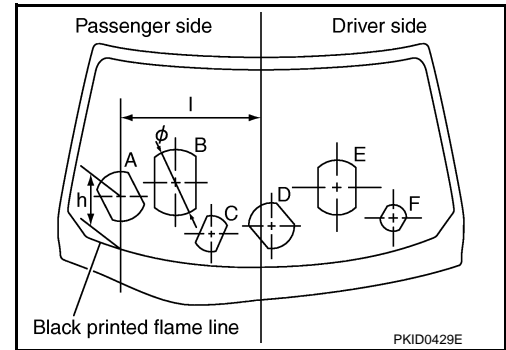


Insert a needle or suitable tool into the nozzle hole and move up/down and left/right to adjust the spray position.

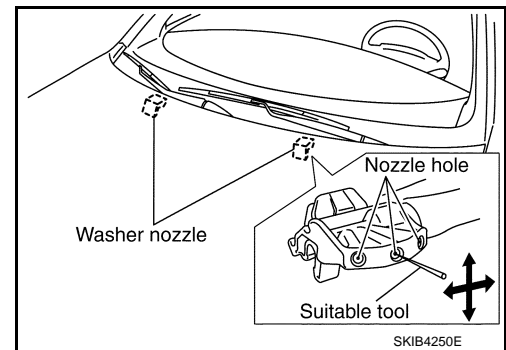

Washer Tube Layout

INFOID:000000002956992

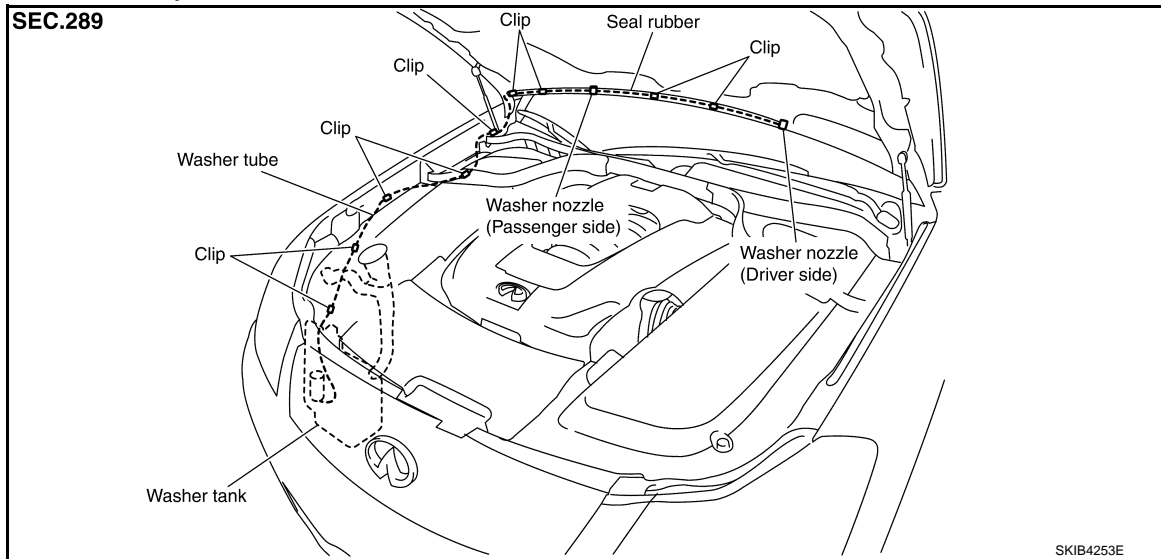

Removal and Installation of Front Washer Nozzle

INFOID:000000002956993


REMOVAL

1. Open hood, and turn off the washer hose seal rubber.

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

2. While pushing nozzle spray point side along body, use the nozzle stop point as the support point and rotate nozzle (1) to remove it from body.
3. Remove washer tube (2).

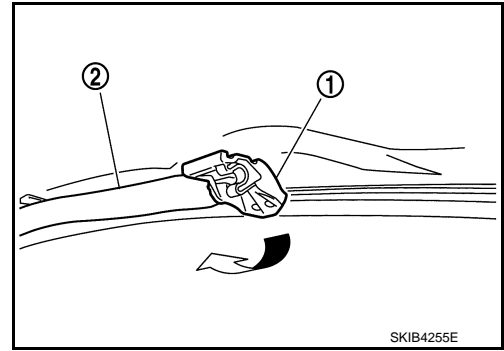

INSTALLATION

1. Install washer tube in nozzle.
2. Install nozzle to the vehicle.
3. Adjust nozzle spray location. Refer to [WW-33, "Washer Nozzle Adjustment"](#).

CAUTION:


The spray points differ, so be sure to install left and right nozzles correctly.

Inspection for Washer Nozzle

INFOID:000000002956994

CHECK VALVE INSPECTION

Blow air in the injection direction, and make sure that air flows only one way. Make sure that the reverse direction (inhale) is not possible.

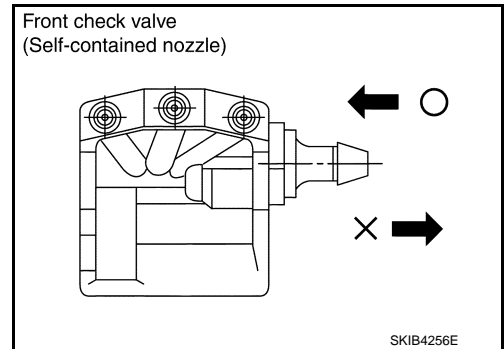

Inspection of Front Wiper and Washer Switch Circuit

INFOID:000000002956995


Refer to [LT-202, "Combination Switch Inspection"](#).

Removal and Installation of Front Wiper and Washer Switch

INFOID:000000002956996

REMOVAL

1. Remove steering column cover. Refer to [IP-11](#).
2. Disconnect the wiper and washer switch connector.
3. Pull wiper and washer switch (1) toward the passenger door while pressing pawls (A) in direction shown by the arrow in the figure, and remove it from the base.

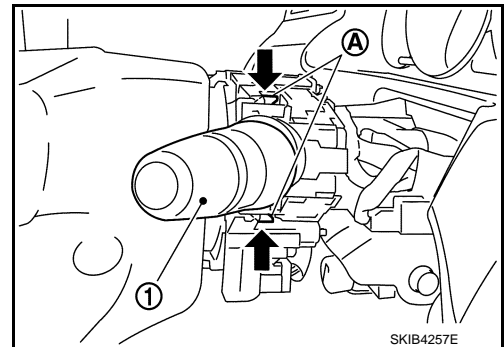

INSTALLATION

Installation is the reverse order of removal.

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >


Removal and Installation of Washer Tank

INFOID:000000002956997


↔: Vehicle front

REMOVAL

1. Remove engine room cover (RH). Refer to [EM-14, "Removal and Installation"](#).
2. Remove clip (A) and pull washer tank inlet (1) out of washer tank.

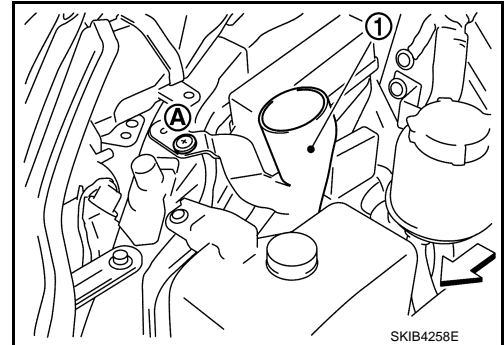

3. Remove front bumper. Refer to [EI-12, "STANDARD TYPE : Component Parts Location"](#).
4. Disconnect washer pump connector and wash fluid level sensor connector.
5. Remove washer tank mounting nuts (A) and remove bolt (B).
6. Remove washer tube, and remove washer tank (1) from vehicle.

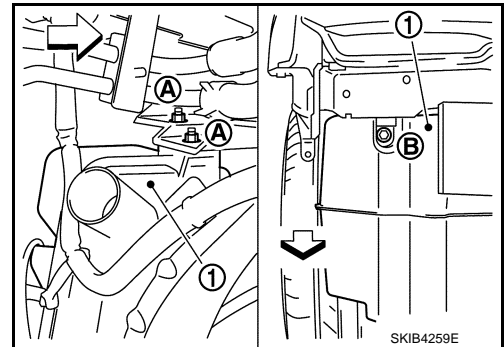

INSTALLATION

Note the following, and installation is the reverse order of removal.

CAUTION:

After installation, add water up to the upper level of washer tank inlet, and check for water leaks.

Washer tank mounting nuts

 : 4.5 N·m (0.46 kg-m, 40 in-lb)

Washer tank mounting bolt

 : 4.5 N·m (0.46 kg-m, 40 in-lb)


Removal and Installation of Washer Pump

INFOID:000000002956998

↔: Vehicle front

REMOVAL

1. Remove fender protector (front) RH. Refer to [EI-31](#).
2. Disconnect washer pump connector (1) and remove washer tube.
3. Pull out washer pump (2) in direction shown by the arrow in the figure. Remove washer pump from washer tank.

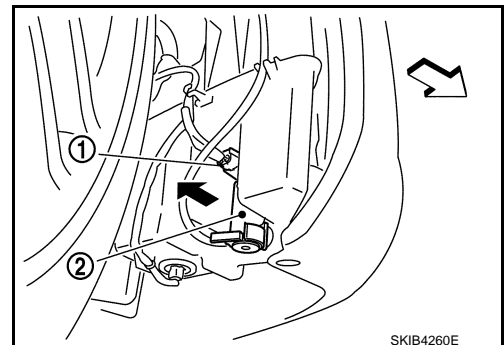

A
B
C
D
E
F
G
H
I
J

WW

L
M
N
O
P

FRONT WIPER AND WASHER SYSTEM

< SERVICE INFORMATION >

INSTALLATION

Note the following, and installation is the reverse order of removal.

CAUTION:

When installing washer pump, there should be no packing twists, etc.


Removal and Installation of Rain Sensor

INFOID:000000003302579

CAUTION:

When the rain sensor is removed from windshield, the rain sensor cannot be re-used.

EXPLODED VIEW

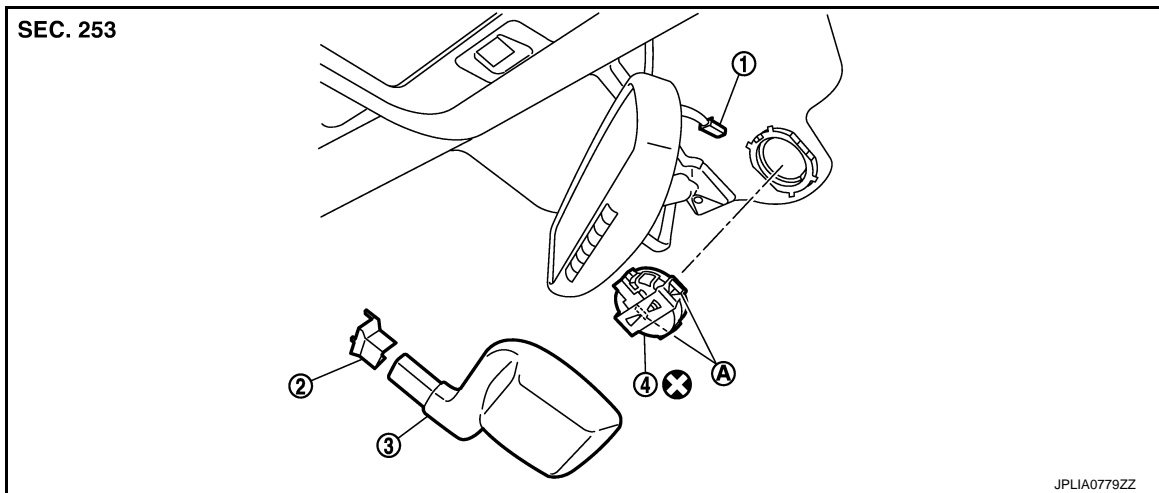

- 1. Rain sensor connector
- 2. Rain sensor cover (upper)
- 3. Rain sensor cover (lower)
- 4. Rain sensor
- A. Metal spring clip

Refer to [GI-9, "Component"](#) for symbols in the figure.

REMOVAL

1. Remove the rain sensor cover (upper and lower).
2. Disengage the both sides of metal spring clips, and remove the rain sensor from the windshield.
3. Disconnect rain sensor connector.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

- **Surface of windshield should be cleaned.**
- **Never touch gel/adhesive of new part.**
- **Lock the metal spring clips and install the rain sensor securely.**

CIGARETTE LIGHTER



< SERVICE INFORMATION >

CIGARETTE LIGHTER

Wiring Diagram - CIGAR -

INFOID:000000002956999

WW-CIGAR-01

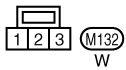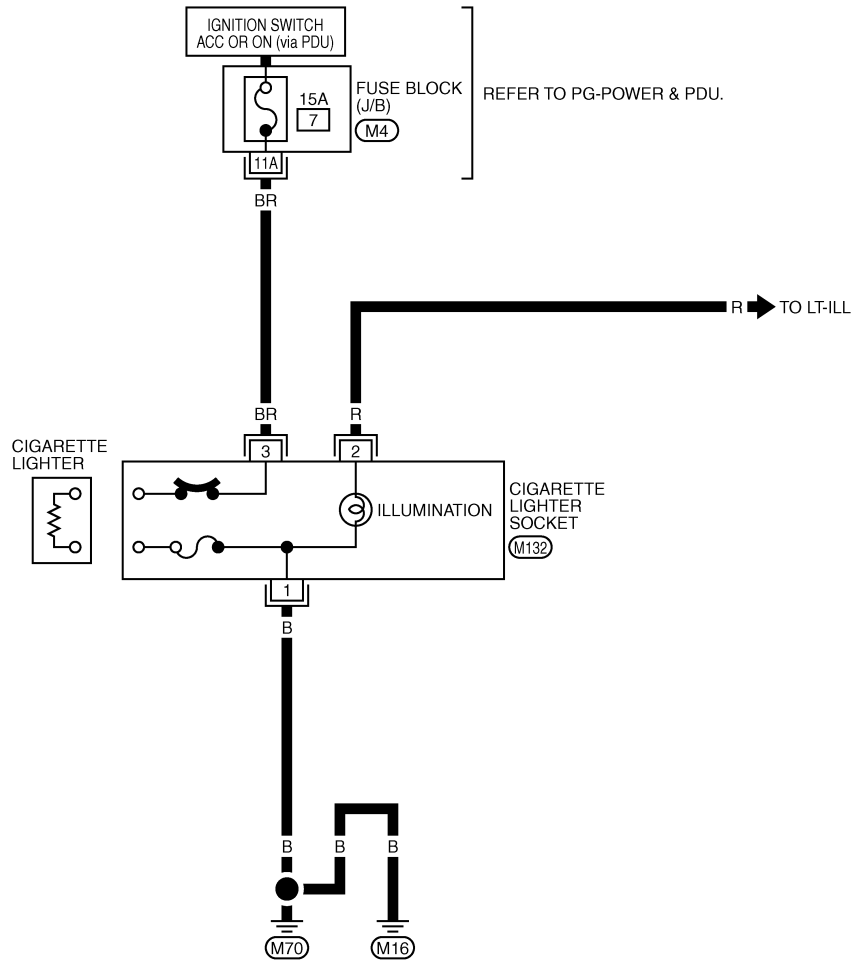

REFER TO THE FOLLOWING.
 (M4) - FUSE BLOCK-JUNCTION BOX (J/B)

TKWT7188E

Removal and Installation

INFOID:000000002957000


REMOVAL

1. Remove A/T console finisher. Refer to [IP-11](#).


CIGARETTE LIGHTER

< SERVICE INFORMATION >

2. Remove screws (A) from reverse side cigarette lighter socket.

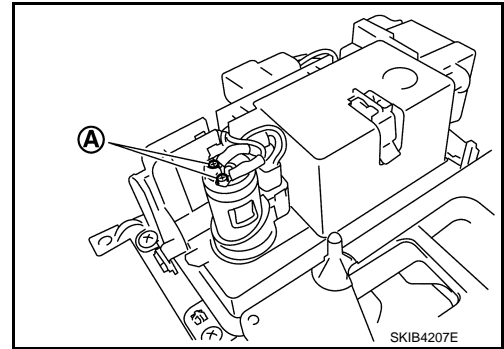

3. Pull out cigarette lighter (1).
4. Insert a small screwdriver or similar tool between the cigarette lighter socket (2) and cigarette lighter ring (3). Pull out cigarette lighter socket (2).

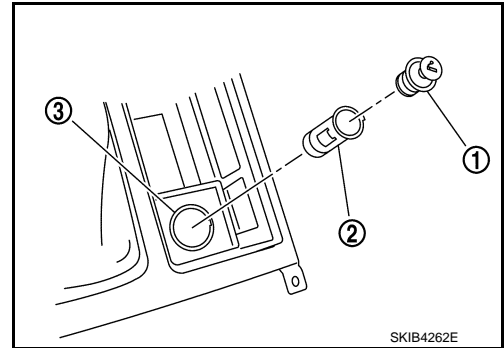

INSTALLATION

Note the following, and installation is the reverse order of removal.

CAUTION:

Align notches of cigarette lighter ring and cigarette lighter socket when installing.

POWER SOCKET

< SERVICE INFORMATION >



POWER SOCKET

Wiring Diagram - P/SCKT -

INFOID:000000002957001

WW-P/SCKT-01

: WITHOUT DVD PLAYER

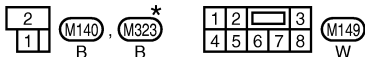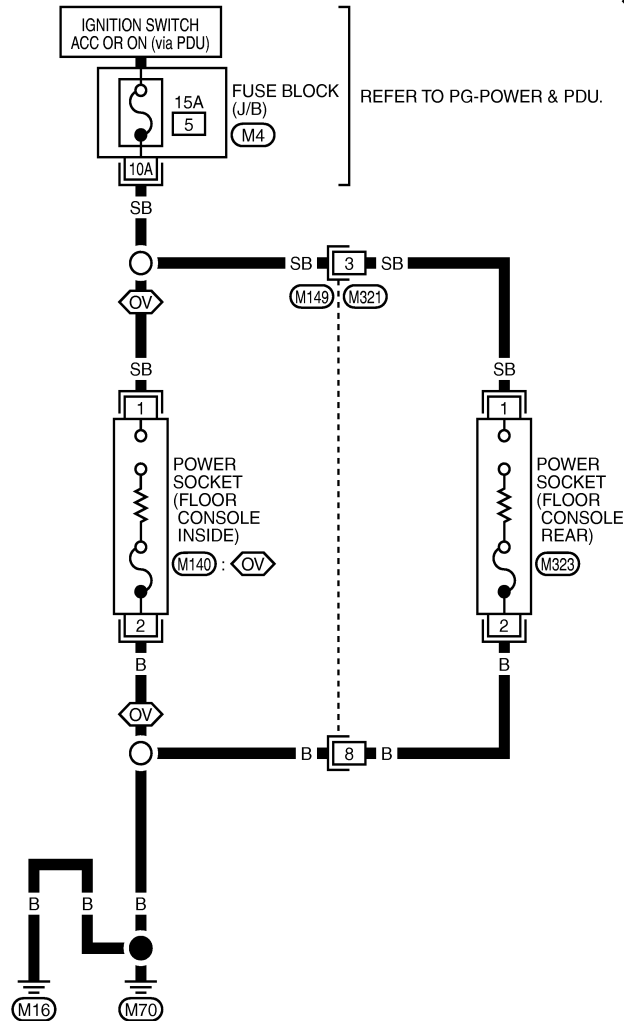

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

REFER TO THE FOLLOWING.
 - FUSE BLOCK - JUNCTION BOX (J/B)

TKWT6876E

Removal and Installation of Center Console Box Power Socket

INFOID:000000002957002


REMOVAL

1. Remove console box. Refer to [IP-11](#).

POWER SOCKET

< SERVICE INFORMATION >

2. Remove inner socket (1) from the ring (2) while pressing the hook (B) on the ring out from square hole (A).
3. Remove ring from console box while pressing pawls.

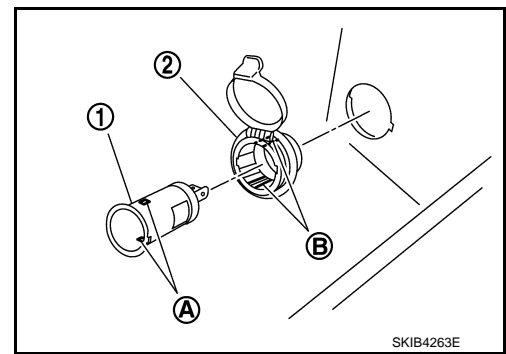

INSTALLATION

Note the following, and installation is the reverse order of removal.


CAUTION:

Align notches of inner socket and ring, and console box when installing.

Removal and Installation of Center Console Box Rear Side Power Socket INFOID:000000002957003

REMOVAL

1. Remove the console rear finisher. Refer to [IP-21, "CENTER CONSOLE : Component Parts Location"](#).
2. Remove inner socket (1) and ring (2) from the console rear finisher while pressing the hook on ring from square hole.

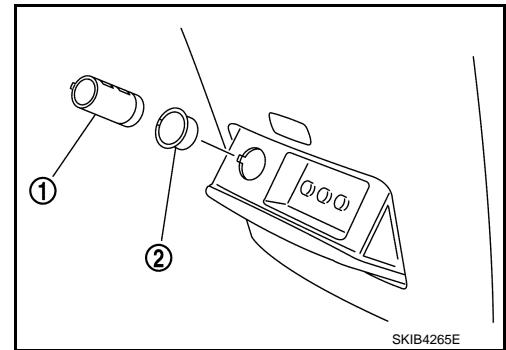

INSTALLATION

Note the following, and installation is the reverse order of removal.

CAUTION:

Align notches of inner socket and ring, and console box when installing.



HORN

< SERVICE INFORMATION >

HORN

Wiring Diagram - HORN -

INFOID:000000002957004

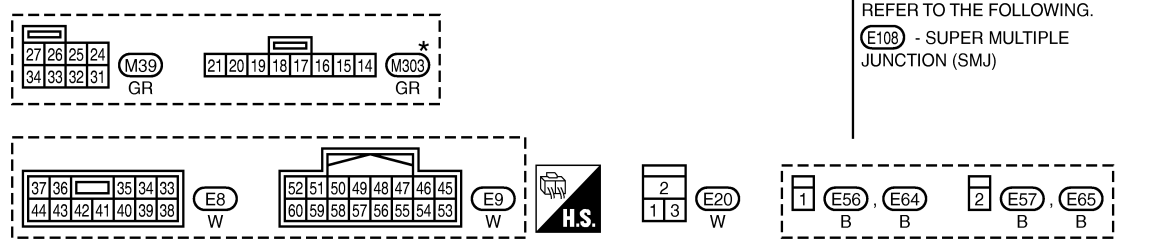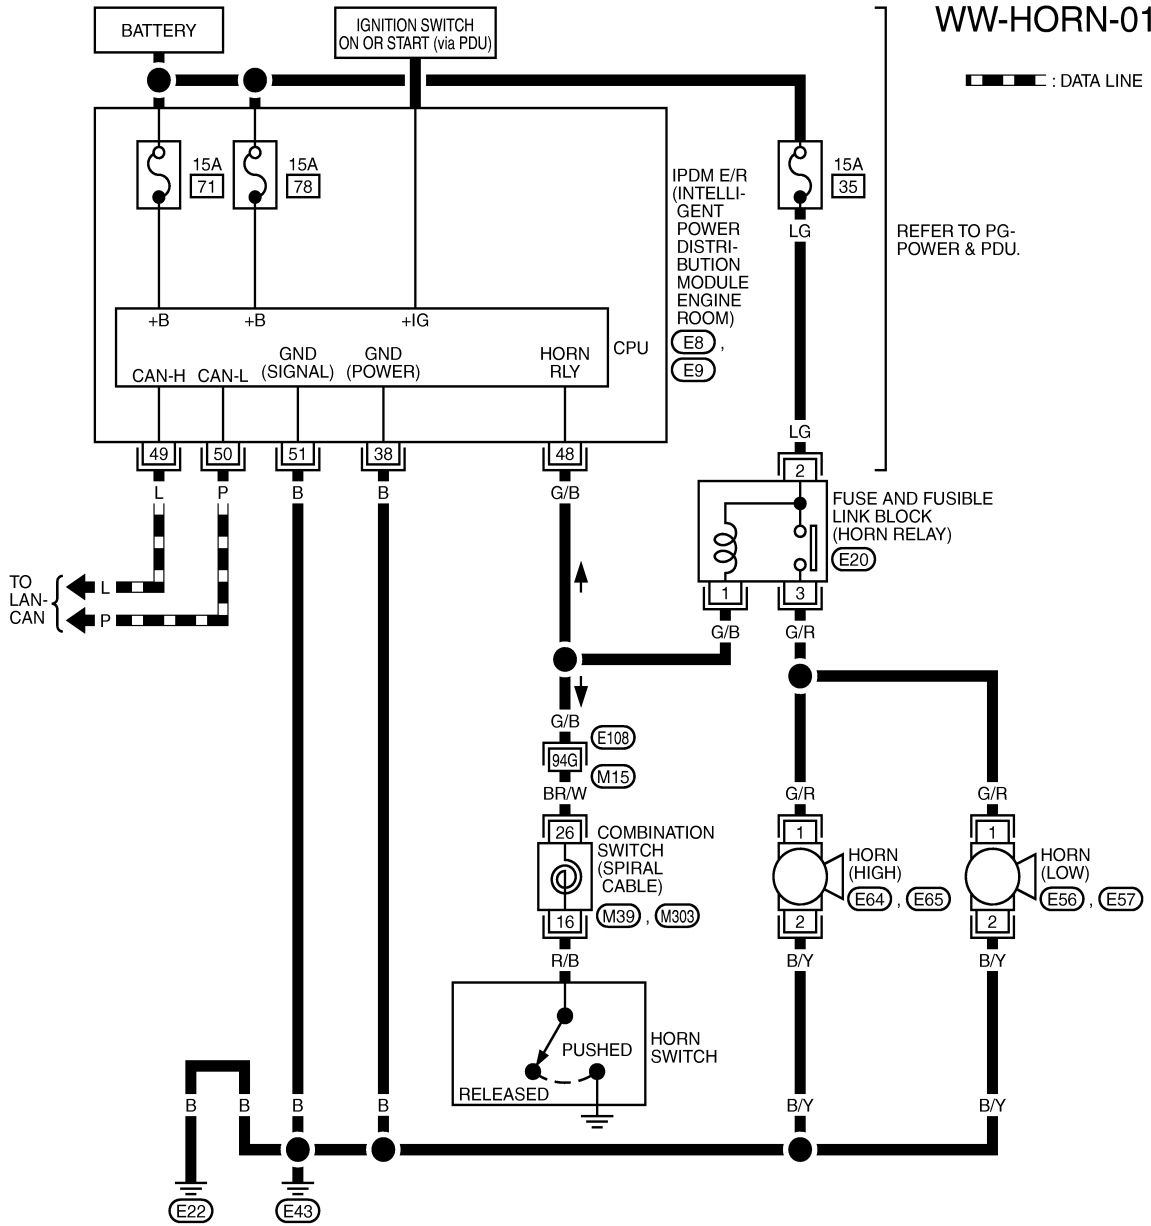

*: THIS CONNECTOR IS NOT SHOWN IN "HARNESS LAYOUT", PG SECTION.

TKWT6877E

Removal and Installation

INFOID:000000002957005


REMOVAL

1. Remove front grille. Refer to [EI-27](#).


HORN

< SERVICE INFORMATION >

2. Disconnect horn (HI) connectors.
3. Remove horn (HI) mounting bolt (A), and remove horn (HI) (1) from vehicle.

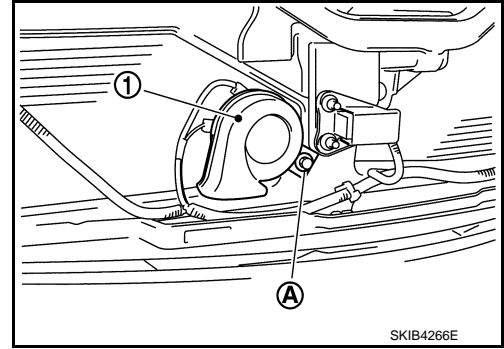

4. Remove fender protector (front) LH to obtain work space between the fender protector and fender.
5. Disconnect horn (LO) connectors.
6. Remove horn (LO) mounting bolts (A), and remove horn (LO) (1) from vehicle.

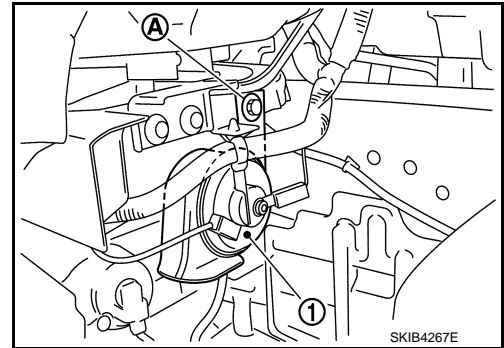

INSTALLATION

Tighten horn bolt to specified torque.

Horn mounting bolt  :17.1 N·m (1.7 kg-m, 13 ft-lb.)