

SECTION FAX

FRONT AXLE

A
B
C

FAX

CONTENTS

E

2WD	
SYMPTOM DIAGNOSIS	3
NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING	3
NVH Troubleshooting Chart	3
PRECAUTION	4
PRECAUTIONS	4
FOR USA AND CANADA	4
FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	4
FOR USA AND CANADA : Precautions for Drive Shaft	4
FOR USA AND CANADA : Precautions for Removing of Battery Terminal	5
FOR MEXICO	5
FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	5
FOR MEXICO : Precautions for Drive Shaft	5
FOR MEXICO : Precautions for Removing of Battery Terminal	6
PREPARATION	7
PREPARATION	7
Special Service Tool	7
Commercial Service Tool	8
PERIODIC MAINTENANCE	9
FRONT WHEEL HUB AND KNUCKLE	9
Inspection	9
FRONT DRIVE SHAFT	10
Inspection	10

REMOVAL AND INSTALLATION	11
FRONT WHEEL HUB AND KNUCKLE	11
Exploded View	11
Removal and Installation	11
Inspection	12
FRONT DRIVE SHAFT BOOT	13
Exploded View	13
WHEEL SIDE	14
WHEEL SIDE : Removal and Installation	14
TRANSAXLE SIDE	17
TRANSAXLE SIDE : Removal and Installation	17
Inspection	17
FRONT DRIVE SHAFT	18
Exploded View	18
LEFT SIDE	19
LEFT SIDE : Removal and Installation	19
RIGHT SIDE	20
RIGHT SIDE : Removal and Installation	20
WHEEL SIDE	21
WHEEL SIDE : Disassembly and Assembly	22
TRANSAXLE SIDE	23
TRANSAXLE SIDE : Disassembly and Assembly	23
Inspection	28
SERVICE DATA AND SPECIFICATIONS (SDS)	29
SERVICE DATA AND SPECIFICATIONS (SDS)	29
Wheel Bearing	29
Drive Shaft	29
AWD	
SYMPTOM DIAGNOSIS	30

F

G

H

I

J

K

L

M

N

O

P

NOISE, VIBRATION AND HARSHNESS		REMOVAL AND INSTALLATION	38
(NVH) TROUBLESHOOTING	30	FRONT WHEEL HUB AND KNUCKLE	38
NVH Troubleshooting Chart	30	Exploded View	38
PRECAUTION	31	Removal and Installation	38
PRECAUTIONS	31	Inspection	39
FOR USA AND CANADA	31	FRONT DRIVE SHAFT BOOT	40
FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	31	Exploded View	40
FOR USA AND CANADA : Precautions for Drive Shaft	31	WHEEL SIDE	41
FOR USA AND CANADA : Precautions for Removing of Battery Terminal	32	WHEEL SIDE : Removal and Installation	41
FOR MEXICO	32	TRANSAXLE SIDE	44
FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	32	TRANSAXLE SIDE : Removal and Installation	44
FOR MEXICO : Precautions for Drive Shaft	32	Inspection	44
FOR MEXICO : Precautions for Removing of Battery Terminal	33	FRONT DRIVE SHAFT	45
PREPARATION	34	Exploded View	45
PREPARATION	34	LEFT SIDE	46
Special Service Tool	34	LEFT SIDE : Removal and Installation	46
Commercial Service Tool	35	RIGHT SIDE	47
PERIODIC MAINTENANCE	36	RIGHT SIDE : Removal and Installation	47
FRONT WHEEL HUB AND KNUCKLE	36	WHEEL SIDE	49
Inspection	36	WHEEL SIDE : Disassembly and Assembly	49
FRONT DRIVE SHAFT	37	TRANSAXLE SIDE	50
Inspection	37	TRANSAXLE SIDE : Disassembly and Assembly... ..	50
		Inspection	54
		SERVICE DATA AND SPECIFICATIONS	
		(SDS)	55
		SERVICE DATA AND SPECIFICATIONS	
		(SDS)	55
		Wheel Bearing	55
		Drive Shaft	55

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

[2WD]

SYMPTOM DIAGNOSIS

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:000000009717885

Use chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Reference			—	FAX-28	—	FAX-11	—	FAX-9	NVH in FAX and FSU sections	Refer to FRONT AXLE in this chart	NVH in WT section	NVH in WT section	Refer to DRIVE SHAFT in this chart	NVH in BR section	NVH in ST section
Possible cause and SUSPECTED PARTS			Excessive joint angle	Joint sliding resistance	Imbalance	Improper installation, looseness	Parts interference	Wheel bearing damage	FRONT AXLE AND FRONT SUSPENSION	FRONT AXLE	TIRE	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING
Symptom	DRIVE SHAFT	Noise	x	x				x	x	x	x	x		x	x
		Shake	x		x			x	x	x	x	x		x	x
	FRONT AXLE	Noise				x	x	x	x		x	x	x	x	x
		Shake				x	x	x	x		x	x	x	x	x
		Vibration				x	x	x	x		x		x		x
		Shimmy				x	x		x		x	x		x	x
		Judder				x			x		x	x		x	x
		Poor quality ride or handling				x	x		x		x	x			

x: Applicable

A
B
C
FAX
E
F
G
H
I
J
K
L
M
N
O
P

PRECAUTION

PRECAUTIONS

FOR USA AND CANADA

FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009717886

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR USA AND CANADA : Precautions for Drive Shaft

INFOID:000000009717887

- Observe the following precautions when disassembling and assembling drive shaft.
- Never disassemble joint sub-assembly because it is non-overhaul parts.
- Perform work in a location which is as dust-free as possible.
- Clean the parts, before disassembling and assembling.
- Prevent the entry of foreign objects during disassembly of the service location.
- Reassemble disassembled parts carefully in the correct order. If work is interrupted, a clean cover must be placed over parts.
- Use paper waste. Fabric shop cloths must not be used because of the danger of lint adhering to parts.
- Clean disassembled parts (except for rubber parts) with kerosene which shall be removed by blowing with air or wiping with paper waste.

PRECAUTIONS

< PRECAUTION >

[2WD]

FOR USA AND CANADA : Precautions for Removing of Battery Terminal

INFOID:000000009956973

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

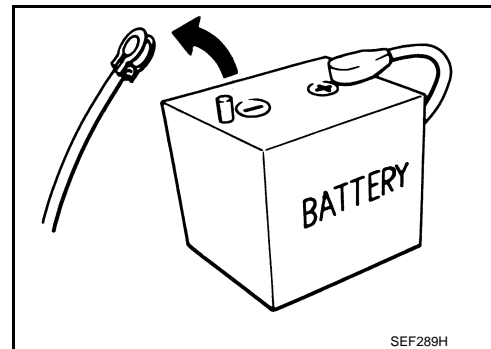

FOR MEXICO

FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009717888

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR MEXICO : Precautions for Drive Shaft

INFOID:000000009717889

- Observe the following precautions when disassembling and assembling drive shaft.
- Never disassemble joint sub-assembly because it is non-overhaul parts.
- Perform work in a location which is as dust-free as possible.
- Clean the parts, before disassembling and assembling.
- Prevent the entry of foreign objects during disassembly of the service location.
- Reassemble disassembled parts carefully in the correct order. If work is interrupted, a clean cover must be placed over parts.
- Use paper waste. Fabric shop cloths must not be used because of the danger of lint adhering to parts.
- Clean disassembled parts (except for rubber parts) with kerosene which shall be removed by blowing with air or wiping with paper waste.

PRECAUTIONS

< PRECAUTION >

[2WD]

FOR MEXICO : Precautions for Removing of Battery Terminal

INFOID:000000009956974

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

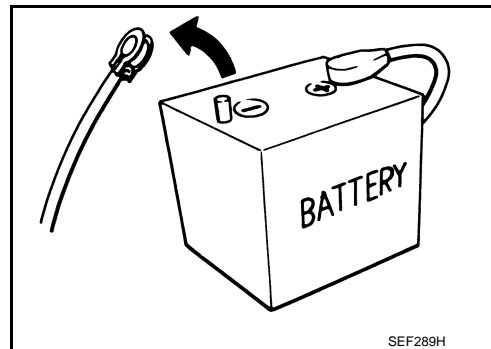

SEF289H

PREPARATION

< PREPARATION >

[2WD]



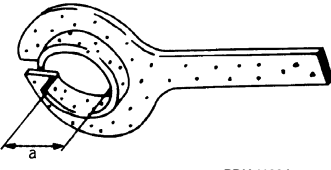
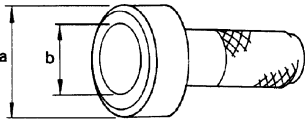
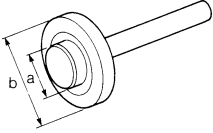
PREPARATION

PREPARATION

Special Service Tool

INFOID:000000009717890

The actual shapes of Kent-More tools may differ from those of special service tools illustrated here.

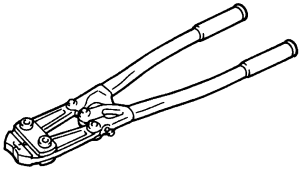Tool number (Kent-More No.) Tool name	Description
KV40107300 (—) Boot band crimping tool	Installing boot band
 ZZA1229D	
KV40107500 (—) Drive shaft attachment	Removing drive shaft
 ZZA1230D	
KV38107900 (—) Protector a: 32 mm (1.26 in) dia.	Installing drive shaft
 PDA1183J	
ST35271000 (—) Drift a: 72 mm (2.83 in) dia. b: 63 mm (2.48 in) dia.	Installing support bearing
 ZZA0701D	
ST17130000 (—) Drift a: 32 mm (1.26 in) dia. b: 60 mm (2.36 in) dia.	Removing support bearing
 ZZA0836D	

A

B

C

FAX

E

F

G

H

I

J

K

L

M

N

O

P


PREPARATION

< PREPARATION >

[2WD]

Commercial Service Tool

INFOID:000000009717891

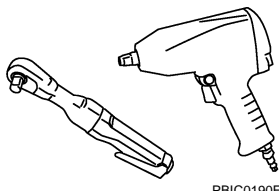Tool name	Description
Power tool	Loosening bolts and nuts
 <p>PBIC0190E</p>	

PERIODIC MAINTENANCE

FRONT WHEEL HUB AND KNUCKLE

Inspection

INFOID:000000009717892

MOUNTING INSPECTION

Make sure that the mounting conditions (looseness, backlash) of each component and component conditions (wear, damage) are normal.

WHEEL BEARING INSPECTION

- Move wheel hub and bearing assembly in the axial direction by hand. Make sure there is no looseness of wheel bearing.

Standard

Axial end play : Refer to [FAX-29, "Wheel Bearing"](#).

- Rotate wheel hub and bearing assembly and make sure there is no unusual noise or other irregular conditions. If there is any of irregular conditions, replace wheel hub and bearing assembly.

A

B

C

FAX

E

F

G

H

I

J

K

L

M

N

O

P

FRONT DRIVE SHAFT

< PERIODIC MAINTENANCE >

[2WD]

FRONT DRIVE SHAFT

Inspection

INFOID:000000009717893

- Check drive shaft mounting point and joint for looseness and other damage.
- Check boot for cracks and other damage.

CAUTION:

Replace entire drive shaft assembly when noise or vibration occurs from drive shaft.

FRONT WHEEL HUB AND KNUCKLE

< REMOVAL AND INSTALLATION >


[2WD]

REMOVAL AND INSTALLATION

FRONT WHEEL HUB AND KNUCKLE

Exploded View

INFOID:000000009717894

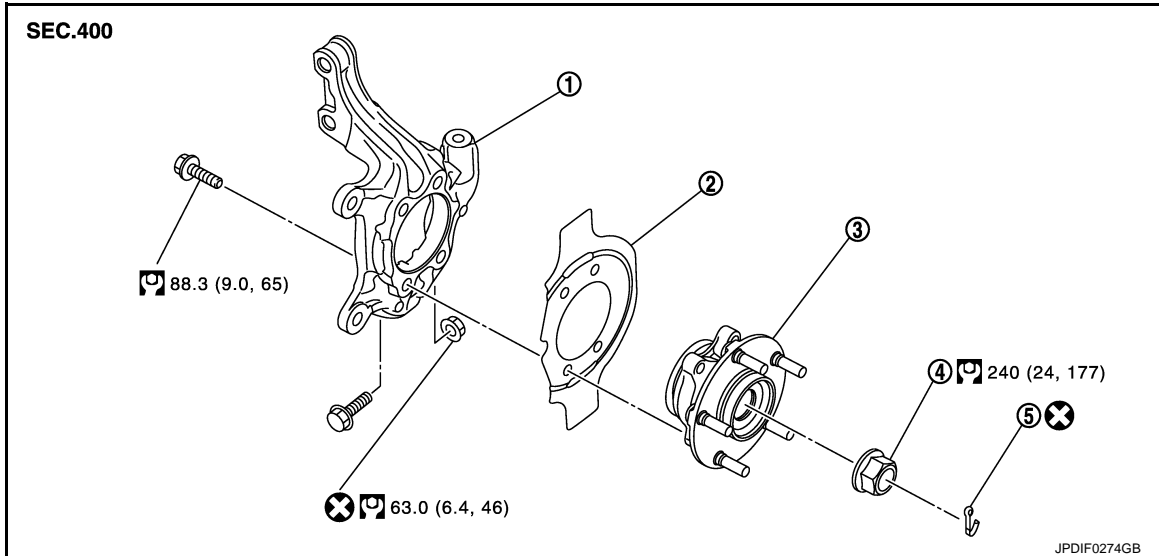

1. Steering knuckle
2. Splash guard
3. Wheel hub and bearing assembly
4. Wheel hub lock nut
5. Cotter pin

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000009717895

REMOVAL

1. Remove tires with power tool.
2. Remove wheel sensor and sensor harness. Refer to [BRC-123, "FRONT WHEEL SENSOR : Exploded View"](#).
3. Remove lock plate from strut assembly. Refer to [BR-22, "FRONT : Exploded View"](#).
4. Remove caliper assembly. Hang caliper assembly not to interfere with work. Refer to [BR-38, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Exploded View"](#) (1 PISTON TYPE), [BR-42, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Exploded View"](#) (2 PISTON TYPE).

CAUTION:

Never depress brake pedal while brake caliper is removed.

5. Remove disc rotor. Refer to [BR-39, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Removal and Installation"](#) (1 PISTON TYPE), [BR-43, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Removal and Installation"](#) (2 PISTON TYPE).
6. Remove cotter pin, and then loosen wheel hub lock nut with power tool.
7. Patch wheel hub lock nut with a piece of wood. Hammer the wood to disengage wheel hub and bearing assembly from drive shaft.

CAUTION:

- **Never place drive shaft joint at an extreme angle. Also be careful not to overextend slide joint.**
- **Never allow drive shaft to hang down without support for joint sub-assembly, shaft and the other parts.**

NOTE:

Use suitable puller, if wheel hub and bearing assembly and drive shaft cannot be separated even after performing the above procedure.

8. Remove wheel hub lock nut.
9. Remove strut assembly from steering knuckle. Refer to [FSU-9, "Exploded View"](#).

FRONT WHEEL HUB AND KNUCKLE

[2WD]

< REMOVAL AND INSTALLATION >

10. Remove drive shaft from wheel hub and bearing assembly, suspend the drive shaft with suitable wire. Refer to [FAX-18, "Exploded View"](#).
11. Temporarily tighten strut assembly and steering knuckle.
12. Remove wheel hub and bearing assembly, and then remove splash guard.
13. Remove steering outer socket from steering knuckle. Refer to [ST-46, "Exploded View"](#).
14. Remove steering knuckle from transverse link.
15. Remove steering knuckle from strut assembly.

INSTALLATION

Note the following, and install in the reverse order of the removal.

- Clean the matching surface of wheel hub lock nut and wheel hub and bearing assembly.

CAUTION:

Never apply lubricating oil to these matching surface.


- Clean the matching surface of drive shaft and wheel hub and bearing assembly.

CAUTION:

Apply paste [service parts (440037S000)] to cover entire flat surface (A) of joint sub-assembly of drive shaft.

Amount paste : 1.0 – 3.0 g (0.04 – 0.10 oz)

- Never use a power tool to tighten the wheel hub lock nut.
- Perform the final tightening of each of parts under unladen conditions, which were removed when removing wheel hub and bearing assembly and axle housing.
- Never reuse cotter pin.

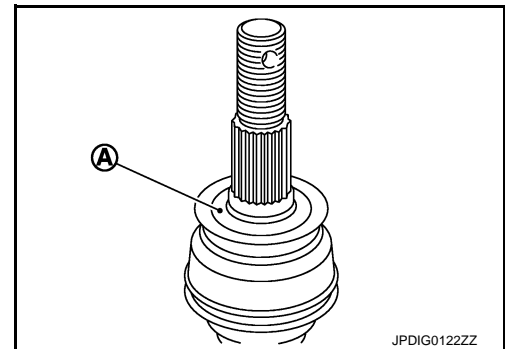

INFOID:000000009717896

Inspection

INSPECTION AFTER REMOVAL

Check components for deformation, cracks, and other damage. Replace if necessary.

Ball Joint Inspection

Check boots of transverse link and steering outer socket ball joint for breakage, axial play, and torque. Refer to [FSU-12, "Inspection"](#) and [ST-56, "Inspection"](#).

INSPECTION AFTER INSTALLATION

1. Check wheel sensor harness for proper connection. Refer to [BRC-123, "FRONT WHEEL SENSOR : Exploded View"](#).
2. Check the wheel alignment. Refer to [FSU-7, "Inspection"](#).
3. Adjust neutral position of steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

FRONT DRIVE SHAFT BOOT

< REMOVAL AND INSTALLATION >


[2WD]

FRONT DRIVE SHAFT BOOT

Exploded View

INFOID:000000009717897

LEFT SIDE

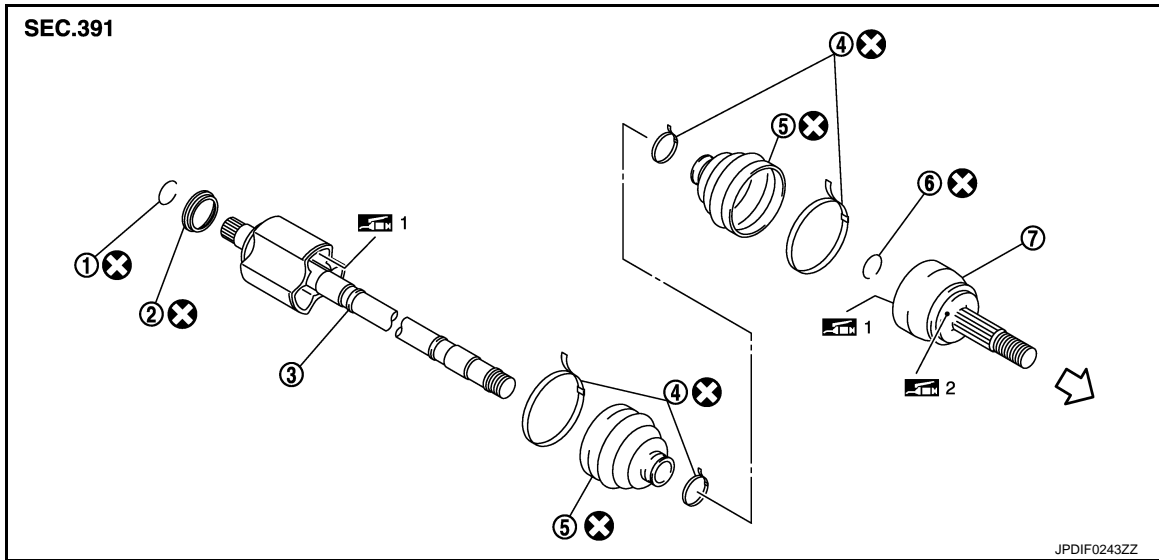

- | | | |
|-----------------------|----------------|---------------------|
| 1. Circular clip | 2. Dust shield | 3. Housing assembly |
| 4. Boot band | 5. Boot | 6. Circular clip |
| 7. Joint sub-assembly | | |


← : Wheel side

1: Fill NISSAN Genuine grease or equivalent.

2: Apply paste [service parts (440037S000)].


Refer to [GI-4, "Components"](#) for symbols not described on the above.


RIGHT SIDE

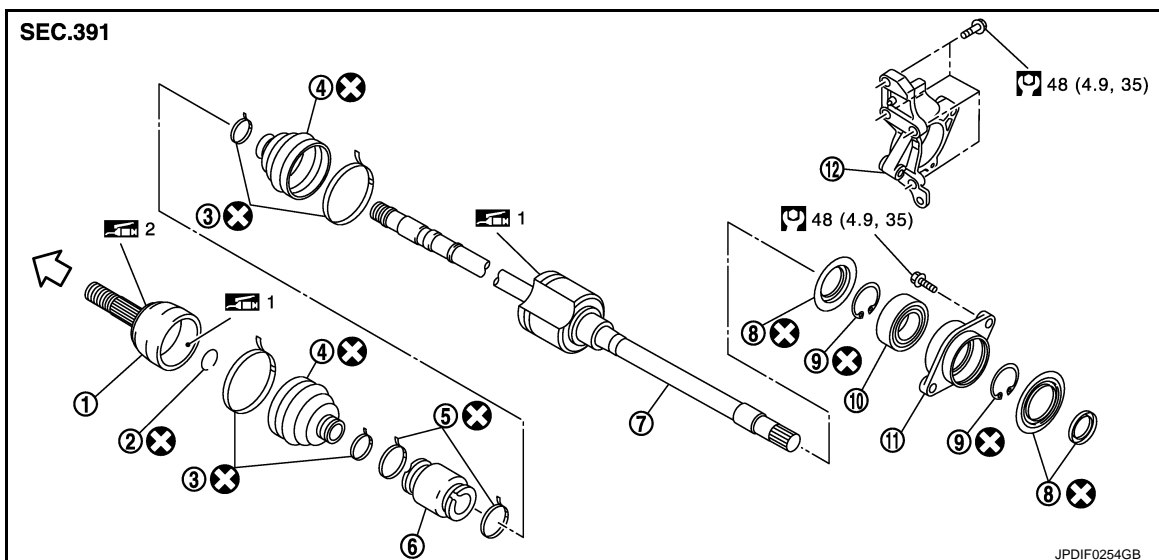

- | | | |
|-----------------------|--------------------|-----------------------------|
| 1. Joint sub-assembly | 2. Circular clip | 3. Boot band |
| 4. Boot | 5. Damper band | 6. Dynamic damper |
| 7. Housing assembly | 8. Dust shield | 9. Snap ring |
| 10. Support bearing | 11. Baring housing | 12. Support bearing bracket |

↩ : Wheel side

 1: Fill NISSAN Genuine grease or equivalent.

 2: Apply paste [service parts (440037S000)].

Refer to [GI-4, "Components"](#) for symbols not described on the above.

WHEEL SIDE

WHEEL SIDE : Removal and Installation

INFOID:000000009717898

REMOVAL

1. Remove tires with power tool.
2. Remove wheel sensor and sensor harness. Refer to [BRC-123, "FRONT WHEEL SENSOR : Exploded View"](#).
3. Remove lock plate from strut assembly. Refer to [BR-22, "FRONT : Exploded View"](#).
4. Remove caliper assembly. Hang caliper assembly not to interfere with work. Refer to [BR-38, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Exploded View"](#) (1 PISTON TYPE), [BR-42, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Exploded View"](#) (2 PISTON TYPE).

CAUTION:

Never depress brake pedal while brake caliper is removed.

5. Remove disc rotor. Refer to [BR-35, "BRAKE PAD \(1 PISTON TYPE\) : Removal and Installation"](#) (1 PISTON TYPE), [BR-37, "BRAKE PAD \(2 PISTON TYPE\) : Removal and Installation"](#) (2 PISTON TYPE).
6. Remove cotter pin, and then loosen wheel hub lock nut with power tool.
7. Patch wheel hub lock nut with a piece of wood. Hammer the wood to disengage wheel hub and bearing assembly from drive shaft.

CAUTION:

- **Never place drive shaft joint at an extreme angle. Also be careful not to overextend slide joint.**
- **Never allow drive shaft to hang down without support for joint sub-assembly, housing assembly and the other parts.**


NOTE:

Use suitable puller, if wheel hub and bearing assembly and drive shaft cannot be separated even after performing the above procedure.

8. Remove wheel hub lock nut.
9. Remove strut assembly from steering knuckle. Refer to [FSU-9, "Exploded View"](#).
10. Remove drive shaft from wheel hub and bearing assembly.
11. Remove boot bands, and then remove boot from joint sub-assembly.
12. Screw drive shaft puller (A) into joint sub-assembly screw part to a length of 30 mm (1.18 in) or more. Support drive shaft with one hand and pull out joint sub-assembly with a sliding hammer (B) from housing assembly.

CAUTION:

- **Align a sliding hammer and drive shaft and remove them by pulling firmly and uniformly.**
- **If joint sub-assembly cannot be pulled out, try after removing drive shaft from vehicle.**

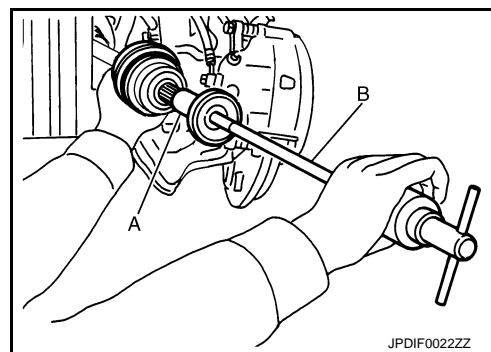


FRONT DRIVE SHAFT BOOT

< REMOVAL AND INSTALLATION >

[2WD]


13. Remove circular clip (1) from housing assembly.
14. Remove boot from housing assembly.

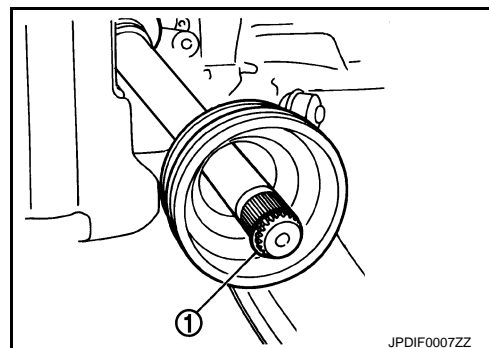


INSTALLATION

1. Clean the old grease on joint sub-assembly with paper waste.
2. Fill serration slot joint sub-assembly with NISSAN genuine grease or equivalent until the serration slot and ball groove become full to the brim.
CAUTION:
After applying grease, use a paper waste to wipe off old grease that has oozed out.
3. Install boot and boot bands to housing assembly.
CAUTION:
 - Wrap serration on housing assembly with tape to protect the boot from damage.
 - Never reuse boot and boot band.
4. Remove the tape wrapped around the serration on housing assembly.
5. Position the circular clip on groove at the housing assembly edge.
CAUTION:
Never reuse circular clip.
NOTE:
Drive joint inserter is recommended when installing circular clip.
6. Align both center axes of the housing assembly edge and joint sub-assembly. Then assemble housing assembly with joint sub-assembly holding circular clip.
7. Install joint sub-assembly (1) to housing assembly using plastic hammer.
CAUTION:
Confirm that joint sub-assembly is correctly engaged while rotating drive housing assembly.
8. Apply the specified amount of grease into the boot inside from large diameter side of boot.

Grease amount : Refer to [FAX-29, "Drive Shaft"](#).

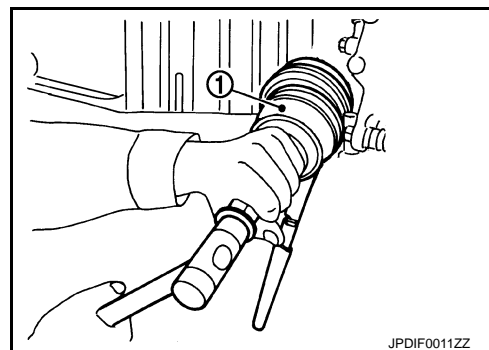

9. Install the boot securely into grooves (indicated by "*" marks) shown in the figure.
CAUTION:
If grease adheres to the boot mounting surface (indicated by "*" mark) on the housing assembly or joint sub-assembly, boot may be removed. Remove all grease from the boot mounting surface.
10. To prevent the deformation of the boot, adjust the boot installation length (L) to the specified value shown below by inserting the suitable tool into inside of the boot from the large diameter side of the boot and discharging the inside air.

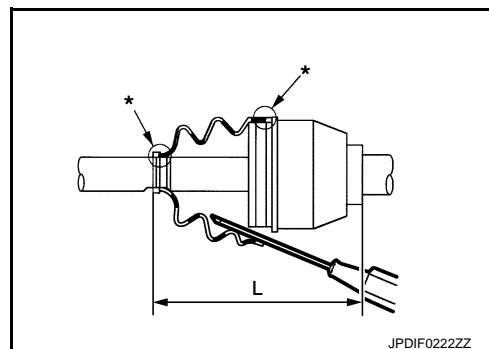

L : Refer to [FAX-29, "Drive Shaft"](#).

CAUTION:

- If the boot installation length exceeds the standard, it may cause breakage of boot.

FRONT DRIVE SHAFT BOOT

< REMOVAL AND INSTALLATION >


[2WD]

- Be careful not to touch the inside of the boot with a tip of tool.

11. Secure the large and small ends of the boot with boot bands using the boot band crimping tool (A) [SST: KV40107300 (—)].

CAUTION:

Never reuse boot band.

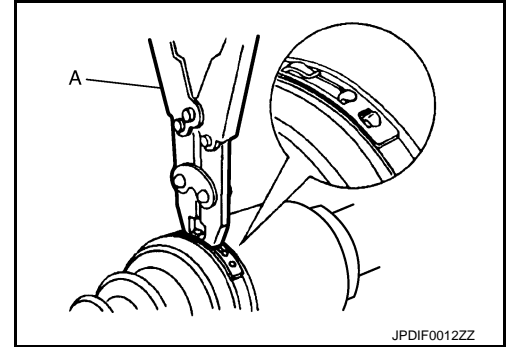

NOTE:

Secure boot band so that dimension (A) meets the specification as shown in the figure.

A : 7.0 mm (0.276 in) or less

12. Secure joint sub-assembly and housing assembly, and then make sure that they are in the correct position when rotating boot. Reinstall them using boot bands when boot installation positions become incorrect.

CAUTION:

Never reuse boot band.

13. Clean the matching surface of wheel hub lock nut and wheel hub and bearing assembly.

CAUTION:



Never apply lubricating oil to these matching surface.

14. Clean the matching surface of drive shaft and wheel hub and bearing assembly.

CAUTION:

Apply paste [service parts (440037S000)] to cover entire flat surface (A) of joint sub-assembly of drive shaft.

Amount paste : 1.0 – 3.0 g (0.04 – 0.10 oz)

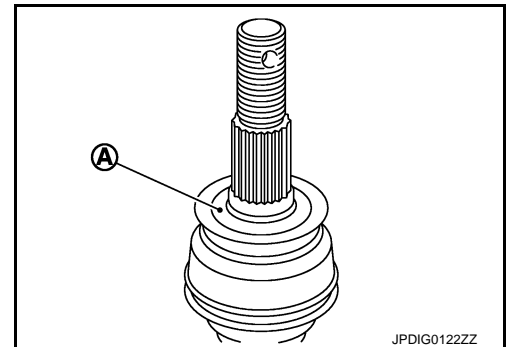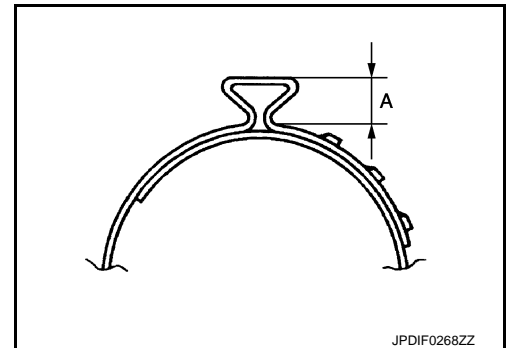

15. Insert drive shaft to wheel hub and bearing assembly, and then temporarily tighten wheel hub lock nut.
16. Install strut assembly to steering knuckle. Refer to [FSU-9, "Exploded View"](#).
17. Install disc rotor. Refer to [BR-39, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Removal and Installation"](#) (1 PISTON TYPE), [BR-43, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Removal and Installation"](#) (2 PISTON TYPE).
18. Install caliper assembly to steering knuckle. Refer to [BR-38, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Exploded View"](#) (1 PISTON TYPE), [BR-42, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Exploded View"](#) (2 PISTON TYPE).
19. Install lock plate to strut assembly. Refer to [BR-22, "FRONT : Exploded View"](#).
20. Install wheel sensor and sensor harness to steering knuckle. Refer to [BRC-123, "FRONT WHEEL SENSOR : Exploded View"](#).
21. Tighten the wheel hub lock nut to the specified torque. Refer to [FAX-11, "Exploded View"](#).

NOTE:

- Never use a power tool to tighten the wheel hub lock nut.

FRONT DRIVE SHAFT BOOT

< REMOVAL AND INSTALLATION >

[2WD]

- Perform the final tightening of each of parts under unladen conditions, which were removed when removing wheel hub and bearing assembly and axle housing.

22. Install cotter pin. Refer to [FAX-11. "Exploded View"](#).

CAUTION:

- Never reuse cotter pin.
- Bend cotter pin at the root sufficiently to prevent any looseness.

TRANSAXLE SIDE

TRANSAXLE SIDE : Removal and Installation

INFOID:000000009717899

NOTE:


Remove boot after removing drive shaft. Refer to [FAX-19. "LEFT SIDE : Removal and Installation"](#) (left side), [FAX-20. "RIGHT SIDE : Removal and Installation"](#) (right side).

Inspection

INFOID:000000009717900

INSPECTION AFTER REMOVAL

- Move joint up/down, left/right, and in the axial directions. Check for motion that is not smooth and for significant looseness.
- Check boot for cracks, damage, and leakage of grease.
- Disassemble drive shaft and exchange malfunctioning part if there is a non-standard condition.

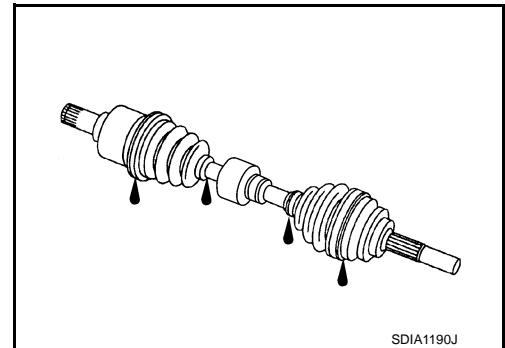

FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >


[2WD]

FRONT DRIVE SHAFT

Exploded View

INFOID:000000009717901

LEFT SIDE

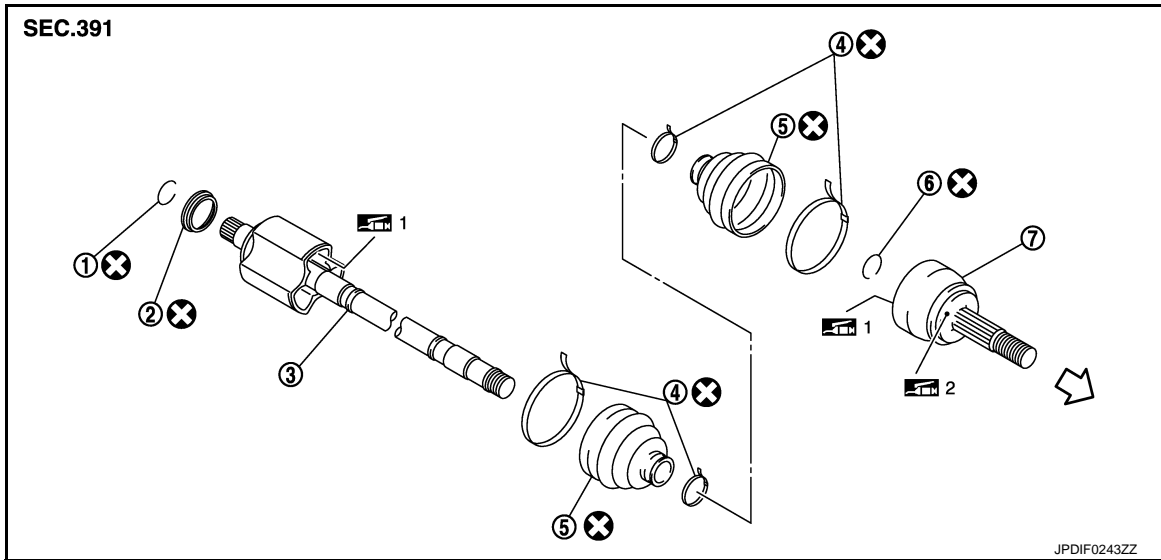

- | | | |
|-----------------------|----------------|---------------------|
| 1. Circular clip | 2. Dust shield | 3. Housing assembly |
| 4. Boot band | 5. Boot | 6. Circular clip |
| 7. Joint sub-assembly | | |


⇐ : Wheel side

1: Fill NISSAN Genuine grease or equivalent.

2: Apply paste [service parts (440037S000)].

Refer to [GI-4, "Components"](#) for symbols not described on the above.

RIGHT SIDE

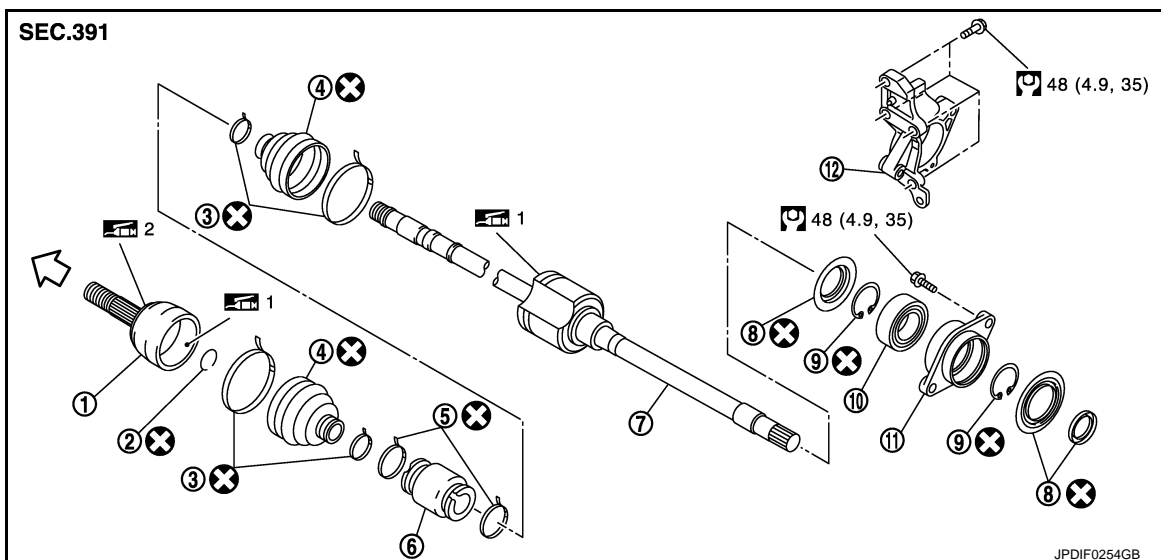


- | | | |
|-----------------------|---------------------|-----------------------------|
| 1. Joint sub-assembly | 2. Circular clip | 3. Boot band |
| 4. Boot | 5. Damper band | 6. Dynamic damper |
| 7. Housing assembly | 8. Dust shield | 9. Snap ring |
| 10. Support bearing | 11. Bearing housing | 12. Support bearing bracket |


FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >

[2WD]

⇐ : Wheel side

 1: Fill NISSAN Genuine grease or equivalent.

 2: Apply paste [service parts (440037S000)].

Refer to [GI-4, "Components"](#) for symbols not described on the above.

LEFT SIDE

LEFT SIDE : Removal and Installation

INFOID:000000009717902

REMOVAL

1. Remove tires with power tool.
2. Remove wheel sensor and sensor harness. Refer to [BRC-123, "FRONT WHEEL SENSOR : Exploded View"](#).
3. Remove lock plate from strut assembly. Refer to [BR-22, "FRONT : Exploded View"](#).
4. Remove caliper assembly. Hang caliper assembly not to interfere with work. Refer to [BR-38, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Exploded View"](#) (1 PISTON TYPE), [BR-42, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Exploded View"](#) (2 PISTON TYPE).

CAUTION:

Never depress brake pedal while brake caliper is removed.

5. Remove disc rotor. Refer to [BR-39, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Removal and Installation"](#) (1 PISTON TYPE), [BR-43, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Removal and Installation"](#) (2 PISTON TYPE).
6. Remove cotter pin, and then loosen wheel hub lock nut with power tool.
7. Patch wheel hub lock nut with a piece of wood. Hammer the wood to disengage wheel hub and bearing assembly from drive shaft.

CAUTION:

- **Never place drive shaft joint at an extreme angle. Also be careful not to overextend slide joint.**
- **Never allow drive shaft to hang down without support for joint sub-assembly, housing assembly and the other parts.**

NOTE:


Use suitable puller, if wheel hub and bearing assembly and drive shaft cannot be separated even after performing the above procedure.

8. Remove wheel hub lock nut.
9. Remove strut assembly from steering knuckle. Refer to [FSU-9, "Exploded View"](#).
10. Remove drive shaft from transaxle assembly.

- Use the drive shaft attachment (A) [SST: KV40107500 (—)] and a sliding hammer (B) while inserting tip of the drive shaft attachment between housing assembly and transaxle assembly.

CAUTION:

- **Never place drive shaft joint at an extreme angle when removing drive shaft. Also be careful not to overextend slide joint.**
- **Confirm that the circular clip is attached to the drive shaft.**

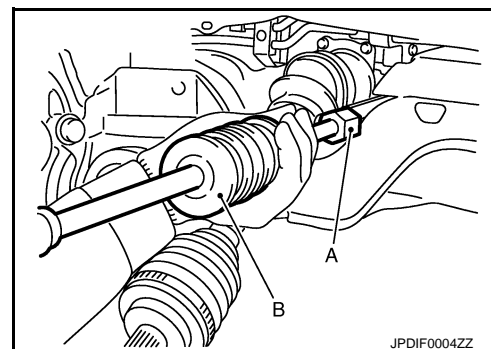

INSTALLATION

Note the following, and install in the reverse order of removal.

- Always replace differential side oil seal with new one when installing drive shaft. Refer to [TM-174, "2WD : Exploded View"](#).

FRONT DRIVE SHAFT


[2WD]

< REMOVAL AND INSTALLATION >

- Place the protector (A) [SST: KV38107900 (—)] onto transaxle assembly to prevent damage to the oil seal while inserting drive shaft. Slide drive shaft sliding joint and tap with a hammer to install securely.

CAUTION:

Make sure that circular clip is completely engaged.

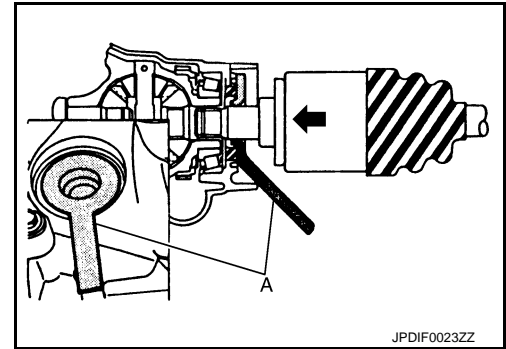

- Clean the matching surface of wheel hub lock nut and wheel hub and bearing assembly.

CAUTION:

Never apply lubricating oil to these matching surface.


- Clean the matching surface of drive shaft and wheel hub and bearing assembly.

CAUTION:

Apply paste [service parts (440037S000)] to cover entire flat surface (A) of joint sub-assembly of drive shaft.

Amount paste : 1.0 – 3.0 g (0.04 – 0.10 oz)

- Never use a power tool to tighten the wheel hub lock nut.
- Perform the final tightening of each of parts under unladen conditions, which were removed when removing wheel hub and bearing assembly and axle housing.
- Never reuse cotter pin.

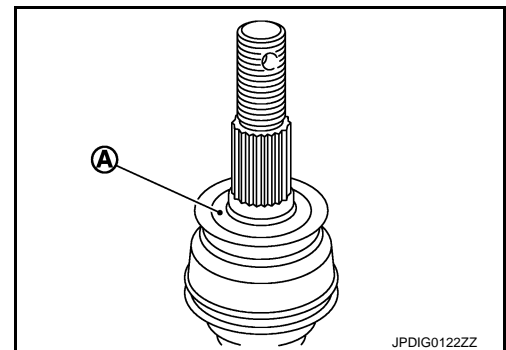

RIGHT SIDE

RIGHT SIDE : Removal and Installation

INFOID:000000009717903

REMOVAL

- Remove tires with power tool.
- Remove wheel sensor and sensor harness. Refer to [BRC-123, "FRONT WHEEL SENSOR : Exploded View"](#).
- Remove lock plate from strut assembly. Refer to [BR-22, "FRONT : Exploded View"](#).
- Remove caliper assembly. Hang caliper assembly not to interfere with work. Refer to [BR-38, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Exploded View"](#) (1 PISTON TYPE), [BR-42, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Exploded View"](#) (2 PISTON TYPE).

CAUTION:

Never depress brake pedal while brake caliper is removed.

- Remove disc rotor. Refer to [BR-39, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Removal and Installation"](#) (1 PISTON TYPE), [BR-43, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Removal and Installation"](#) (2 PISTON TYPE).
- Remove cotter pin, and then loosen wheel hub lock nut with power tool.
- Patch wheel hub lock nut with a piece of wood. Hammer the wood to disengage wheel hub and bearing assembly from drive shaft.

CAUTION:

- Never place drive shaft joint at an extreme angle. Also be careful not to overextend slide joint.**
- Never allow drive shaft to hang down without support for joint sub-assembly, housing assembly and the other parts.**

NOTE:

Use suitable puller, if wheel hub and bearing assembly and drive shaft cannot be separated even after performing the above procedure.

- Remove wheel hub lock nut.
- Remove strut assembly from steering knuckle. Refer to [FSU-9, "Exploded View"](#).

FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >

[2WD]

10. Remove drive shaft from wheel hub and bearing assembly.
11. Remove bearing housing mounting bolts.
12. Remove drive shaft from transaxle assembly.

CAUTION:


Never place drive shaft joint at an extreme angle when removing drive shaft. Also be careful not to overextend slide joint.

13. Remove support bearing bracket, follow the procedure described below.
 - a. Remove front exhaust tube. Refer to [EX-5, "Exploded View"](#).
 - b. Remove three way catalyst (bank 1) and heated oxygen sensor harness bracket. Refer to [EM-38, "Exploded View"](#).
 - c. Remove support bearing bracket.


INSTALLATION

Note the following, and install in the reverse order of removal.

- Always replace differential side oil seal with new one when installing drive shaft. Refer to [TM-174, "2WD : Exploded View"](#).
- Place the protector (A) [SST: KV38107900 (—)] onto transaxle assembly to prevent damage to the oil seal while inserting drive shaft. Slide drive shaft sliding joint and tap with a hammer to install securely.

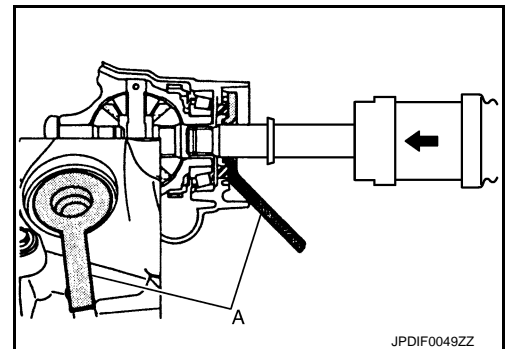

- Install support bearing bracket (1) in following procedure,
 - Temporarily tighten mounting bolts (A), then tighten them to specified torque.
 - Temporarily tighten mounting bolts (B), then tighten them to specified torque.

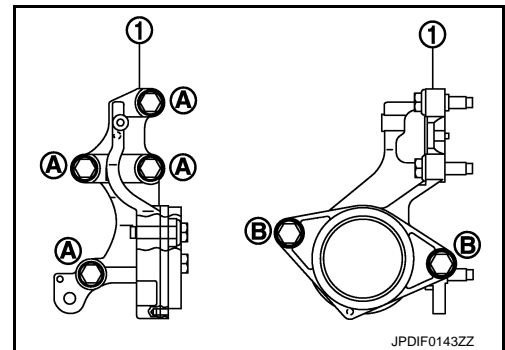

- Clean the matching surface of wheel hub lock nut and wheel hub and bearing assembly.

CAUTION:

Never apply lubricating oil to these matching surface.


- Clean the matching surface of drive shaft and wheel hub and bearing assembly.

CAUTION:

Apply paste [service parts (440037S000)] to cover entire flat surface (A) of joint sub-assembly of drive shaft.

Amount paste : 1.0 – 3.0 g (0.04 – 0.10 oz)

- Never use a power tool to tighten the wheel hub lock nut.
- Perform the final tightening of each of parts under unladen conditions, which were removed when removing wheel hub and bearing assembly and axle housing.
- Never reuse cotter pin.

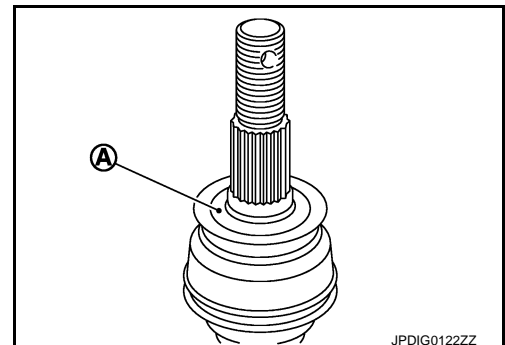

WHEEL SIDE

FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >

[2WD]

WHEEL SIDE : Disassembly and Assembly

INFOID:000000009717904

DISASSEMBLY

1. Fix shaft with a vise.

CAUTION:


Protect shaft when fixing with a vise using aluminum or copper plates.

2. Remove boot bands, and then remove boot from joint sub-assembly.
3. Screw drive shaft puller (A) into joint sub-assembly screw part to a length of 30 mm (1.18 in) or more. Support drive shaft with one hand and pull out joint sub-assembly with a sliding hammer (B) from housing assembly.

CAUTION:

- Align a sliding hammer and drive shaft and remove them by pulling firmly and uniformly.
- If joint sub-assembly cannot be pulled out, try after removing drive shaft from vehicle.

4. Remove circular clip (1) from housing assembly.
5. Remove boot from housing assembly.

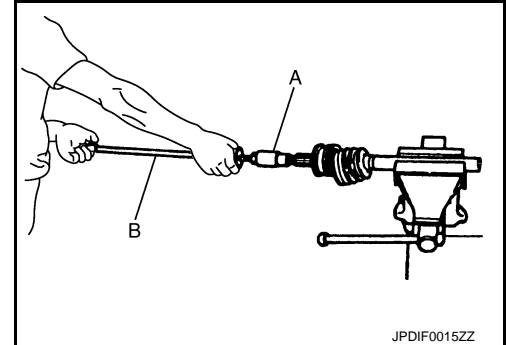

ASSEMBLY

1. Clean the old grease on joint sub-assembly with paper waste.
2. Fill serration slot joint sub-assembly with NISSAN genuine grease or equivalent until the serration slot and ball groove become full to the brim.

CAUTION:

After applying grease, use a paper waste to wipe off old grease that has oozed out.

3. Install boot and boot bands to housing assembly.

CAUTION:

- Wrap serration on housing assembly with tape to protect the boot from damage.
- Never reuse boot and boot band.

4. Remove the tape wrapped around the serration on housing assembly.
5. Position the circular clip on groove at the housing assembly edge.

CAUTION:

Never reuse circular clip.

NOTE:


Drive joint inserter is recommended when installing circular clip.

6. Align both center axes of the housing assembly edge and joint sub-assembly. Then assemble housing assembly with joint sub-assembly holding circular clip.
7. Install joint sub-assembly to housing assembly using plastic hammer.

CAUTION:

Confirm that joint sub-assembly is correctly engaged while rotating drive housing assembly.

8. Apply the specified amount of grease into the boot inside from large diameter side of boot.

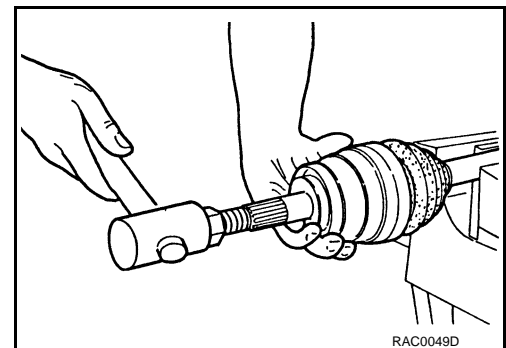

Grease amount : Refer to [FAX-29, "Drive Shaft"](#).

FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >


[2WD]

- Install the boot securely into grooves (indicated by "*" marks) shown in the figure.

CAUTION:

If grease adheres to the boot mounting surface (indicated by "*" mark) on the housing assembly or joint sub-assembly, boot may be removed. Remove all grease from the boot mounting surface.

- To prevent the deformation of the boot, adjust the boot installation length (L) to the specified value shown below by inserting the suitable tool into inside of the boot from the large diameter side of the boot and discharging the inside air.

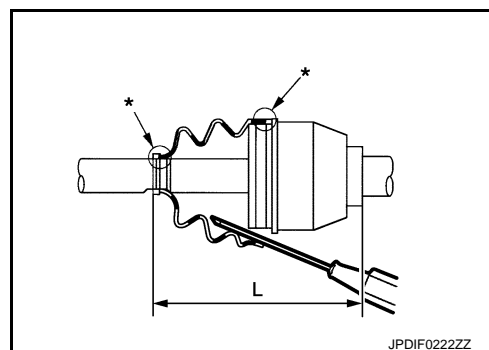

L : Refer to [FAX-29, "Drive Shaft"](#).


CAUTION:

- If the boot mounting length exceeds the standard, it may cause breakage of boot.
- Be careful not to touch the inside of the boot with a tip of tool.

- Secure the large and small ends of the boot with boot bands using the boot band crimping tool (A) [SST: KV40107300 (—)].

CAUTION:

Never reuse boot band.

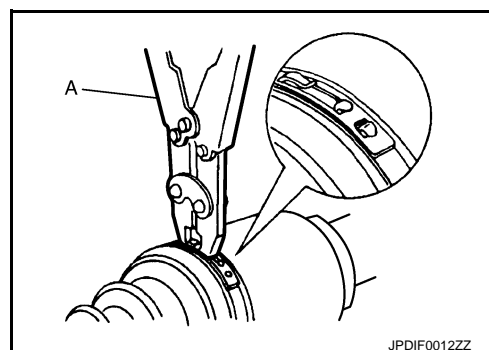

NOTE:


Secure boot band so that dimension (A) meets the specification as shown in the figure.

A : 7.0 mm (0.276 in) or less

- Secure joint sub-assembly and housing assembly, and then make sure that they are in the correct position when rotating boot. Reinstall them using boot bands when boot installation positions become incorrect.

CAUTION:

Never reuse boot band.

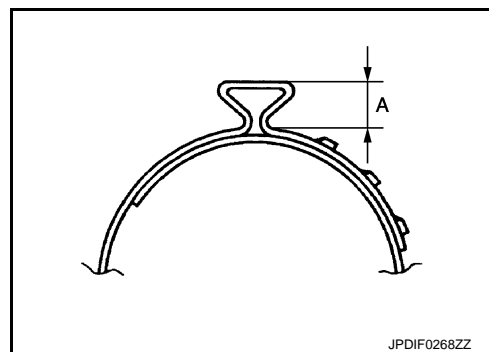

TRANSAXLE SIDE

TRANSAXLE SIDE : Disassembly and Assembly

INFOID:000000009717905

DISASSEMBLY

Left Side

- Fix drive shaft with a vise.
CAUTION:
Protect shaft using aluminum or copper plates when fixing with a vise.
- Disassemble boot (wheel side). Refer to [FAX-22, "WHEEL SIDE : Disassembly and Assembly"](#).
- Remove boot bands and boot (transaxle side).

Right Side


- Fix drive shaft with a vise.
CAUTION:
Protect shaft using aluminum or copper plates when fixing with a vise.
- Disassemble boot (wheel side). Refer to [FAX-22, "WHEEL SIDE : Disassembly and Assembly"](#).

FRONT DRIVE SHAFT


[2WD]

< REMOVAL AND INSTALLATION >


3. Remove boot bands and boot (transaxle side).
4. Remove support bearing, follow the procedure described below.
 - a. Remove dust shield.

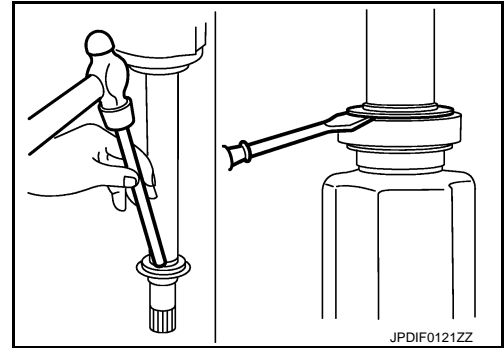


- b. Remove snap ring (1).

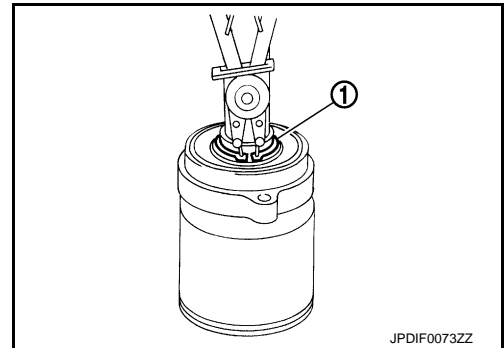

- c. Press out bearing housing and support bearing from housing assembly.
 - d. Remove dust shield.

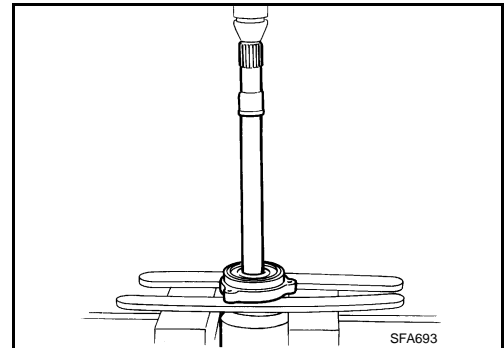

- e. Remove snap ring (1).

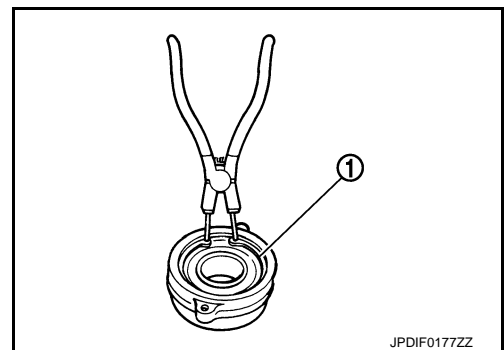


FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >

[2WD]


- f. Press out support bearing from bearing housing (1) with suitable drift (A) [SST: ST17130000 (—)].
5. Remove dynamic damper, follow the procedure described below.
 - a. Remove damper bands.
 - b. Remove dynamic damper from shaft.

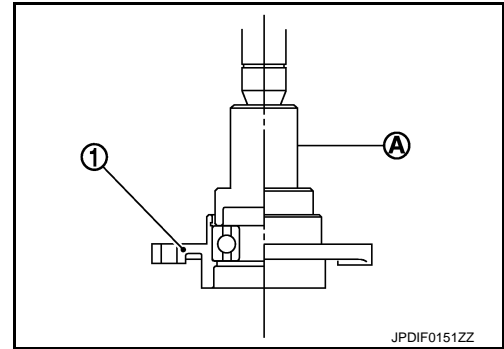

ASSEMBLY

Left Side

1. Install dust shield.
CAUTION:
Never reuse dust shield.
2. Install circular clip.
CAUTION:
Never reuse circular clip.
3. Clean old grease on housing assembly with paper waste.
4. Install boot securely into grooves (indicated by “*” marks) shown in the figure.
CAUTION:
If grease adheres to the boot mounting surface (indicated by “*” mark) on housing assembly, boot may be removed. Remove all grease from the boot mounting surface.
5. To prevent the deformation of the boot, adjust the boot installation length (L) to the specified value shown below by inserting the suitable tool into the inside of boot from the large diameter side of boot and discharging inside air.

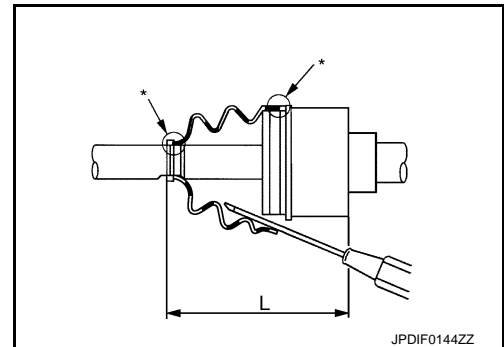

L : Refer to [FAX-29, "Drive Shaft"](#).


CAUTION:

- If the boot installation length exceeds the standard, it may cause breakage of boot.
- Be careful not to touch the inside of the boot with the tip of tool.

6. Install boot bands securely as shown in the figure.
 - a. Put boot band in the groove on drive shaft boot. Then fit pawls (➡) into holes to temporary installation.

NOTE:

For the large diameter side, fit projection (A) and guide slit (B) at first.

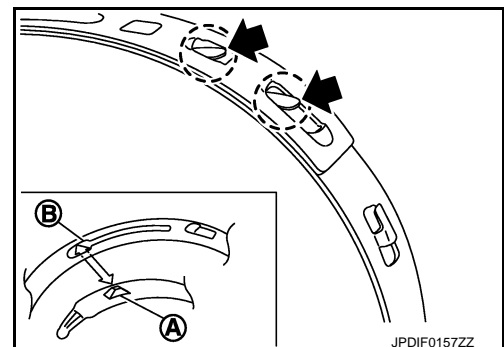


FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >


[2WD]

- b. Pinch projection on the band with suitable pliers to tighten band.
- c. Insert tip of band below end of the pawl.
7. Secure housing assembly, and then make sure that they are in the correct position when rotating boot. Reinstall them with boot bands when the mounting positions become incorrect.

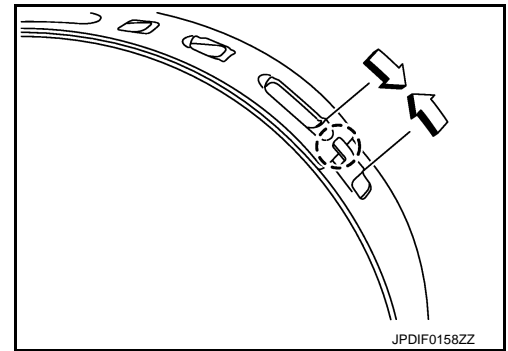


Right Side


1. Install dust shield.
CAUTION:
Never reuse dust shield.
2. Install circular clip.
CAUTION:
Never reuse circular clip.
3. Install support bearing, follow the procedure described below.
 - a. Press support bearing to bearing housing (1) with suitable drift (A) [SST: ST35271000 (—)].

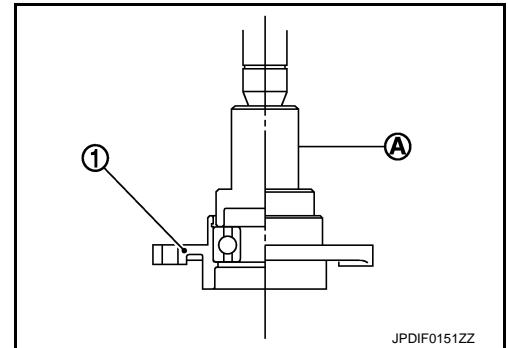

- b. Install snap ring (1).
CAUTION:
Never reuse snap ring.
- c. Install bearing housing and support bearing to housing assembly.

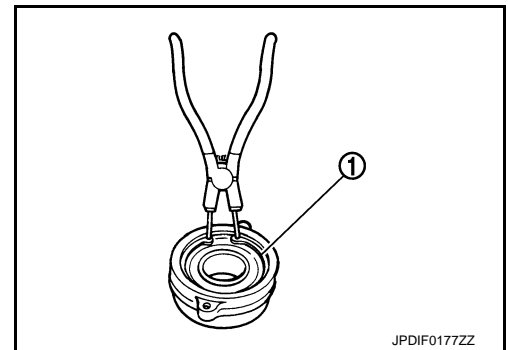

- d. Install snap ring (1).
CAUTION:
Never reuse snap ring.

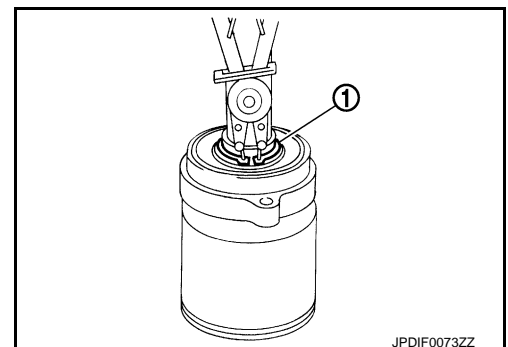


FRONT DRIVE SHAFT


< REMOVAL AND INSTALLATION >

[2WD]

- e. Install dust shields.
CAUTION:
Never reuse dust shields.
4. Clean old grease on housing assembly with paper waste.

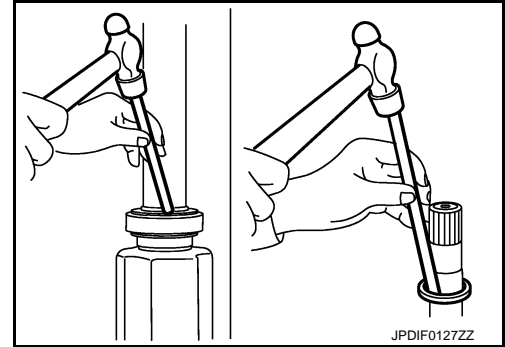

5. Install boot securely into grooves (indicated by “*” marks) shown in the figure.
CAUTION:
If grease adheres to the boot mounting surface (indicated by “*” mark) on housing assembly, boot may be removed. Remove all grease from the boot mounting surface.
6. To prevent from deformation of the boot, adjust the boot installation length (L) to the specified value shown below by inserting the suitable tool into the inside of boot from the large diameter side of boot and discharging inside air.

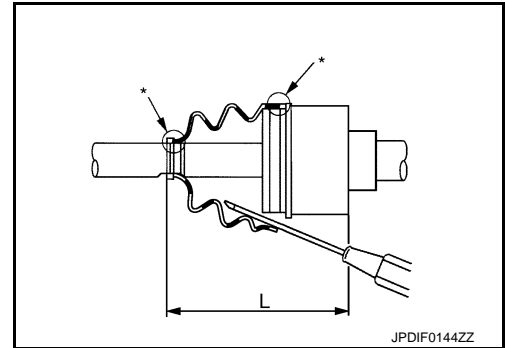


L : Refer to [FAX-29, "Drive Shaft"](#).


CAUTION:

- If the boot installation length exceeds the standard, it may cause breakage of boot.
- Be careful not to touch the inside of the boot with the tip of tool.

7. Install boot bands securely as shown in the figure.
- a. Put boot band in the groove on drive shaft boot. Then fit pawls (➡) into holes to temporary installation.
NOTE:
For the large diameter side, fit projection (A) and guide slit (B) at first.

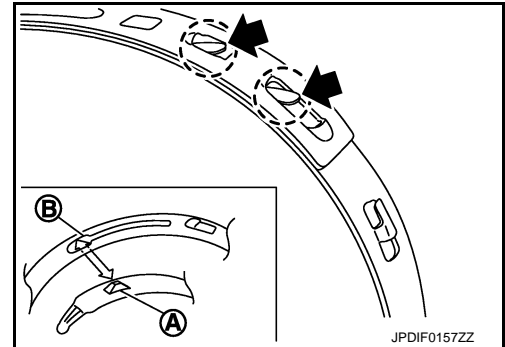

- b. Pinch projection on the band with suitable pliers to tighten band.
- c. Insert tip of band below end of the pawl.
8. Secure housing assembly, and then make sure that they are in the correct position when rotating boot. Reinstall them with boot bands when the mounting positions become incorrect.
9. Assemble boot (wheel side) and joint sub-assembly. Refer to [FAX-22, "WHEEL SIDE : Disassembly and Assembly"](#).
10. Install dynamic damper, follow the procedure described below.
- a. Install dynamic damper to shaft.

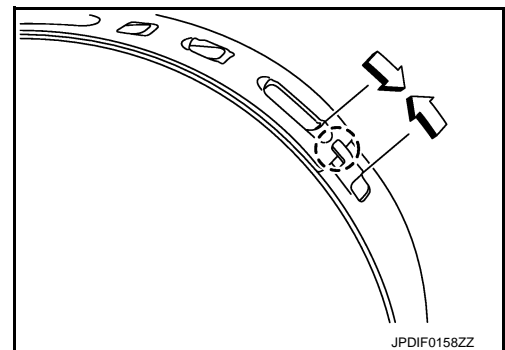

FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >


[2WD]

- b. Secure dynamic damper with bands in the following specified position (A) when installing.

CAUTION:

Never reuse bands.

A : Refer to [FAX-29, "Drive Shaft"](#).

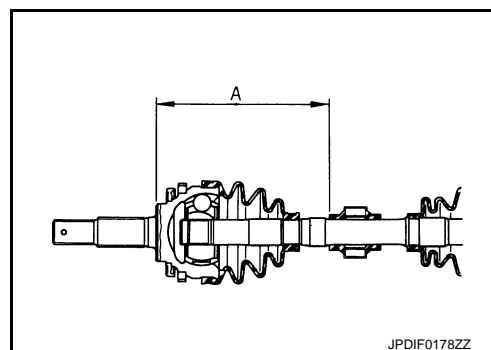


INFOID:000000009717906

Inspection

INSPECTION AFTER REMOVAL

- Move joint up/down, left/right, and in the axial directions. Check for motion that is not smooth and for significant looseness.
- Check boot for cracks, damage, and leakage of grease.
- Disassemble drive shaft and exchange malfunctioning part if there is a non-standard condition.

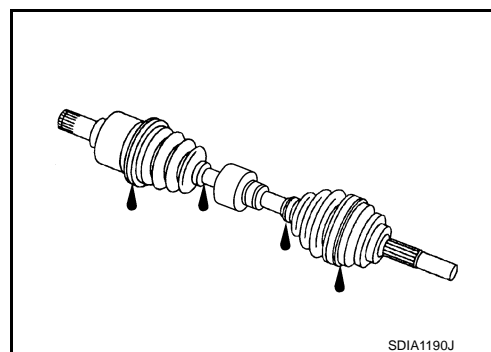

INSPECTION AFTER DISASSEMBLY

Shaft

Check shaft for runout, cracks, or other damage. Replace if necessary.

Dynamic Damper

Check damper for cracks or wear. Replace if necessary.

Joint Sub-Assembly (Wheel Side)

Check the following:

- Joint sub-assembly for rough rotation and excessive axial looseness.
 - The inside of the joint sub-assembly for entry of foreign material.
 - Joint sub-assembly for compression scars, cracks, and fractures inside of joint sub-assembly.
- Replace joint sub-assembly if there are any non-standard conditions of components.

Housing Assembly (Transaxle Side)

Replace housing assembly if there is scratching or wear of housing assembly roller contact surface.

Support Bearing (Right Side)

Make sure wheel bearing rolls freely and is free from noise, cracks, pitting or wear. Replace support bearing if there are any non-standard conditions.

Support Bearing Bracket (Right Side)

Check for bending, cracks, or damage. Replace support bearing bracket if there are any non-standard conditions.

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[2WD]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Wheel Bearing

INFOID:0000000009717907

Item	Standard
Axial end play	0.05 mm (0.002 in) or less

Drive Shaft

INFOID:0000000009717908

Item		Standard	
		Left side	Right side
Grease quantity	Wheel side	170 – 190 g (6.00 – 6.70 oz)	
	Transaxle side	155 – 175 g (5.47 – 6.17 oz)	
Boots installed length	Wheel side	158.6 mm (6.24 in)	
	Transaxle side	163.67 mm (6.44 in)	
Dimension of dynamic damper		—	202 – 208 mm (7.95 – 8.19 in)

A

B

C

FAX

E

F

G

H

I

J

K

L

M

N

O

P

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

[AWD]

SYMPTOM DIAGNOSIS

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:000000009717909

Use chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Reference			—	FAX-54	—	FAX-38	—	FAX-36	NVH in FAX and FSU sections	Refer to FRONT AXLE in this chart	NVH in WT section	NVH in WT section	Refer to DRIVE SHAFT in this chart	NVH in BR section	NVH in ST section
Possible cause and SUSPECTED PARTS			Excessive joint angle	Joint sliding resistance	Imbalance	Improper installation, looseness	Parts interference	Wheel bearing damage	FRONT AXLE AND FRONT SUSPENSION	FRONT AXLE	TIRE	ROAD WHEEL	DRIVE SHAFT	BRAKE	STEERING
Symptom	DRIVE SHAFT	Noise	×	×				×	×	×	×	×		×	×
		Shake	×		×			×	×	×	×	×		×	×
	FRONT AXLE	Noise				×	×	×	×		×	×	×	×	×
		Shake				×	×	×	×		×	×	×	×	×
		Vibration				×	×	×	×		×		×		×
		Shimmy				×	×		×		×	×		×	×
		Judder				×			×		×	×		×	×
		Poor quality ride or handling				×	×		×		×	×			

×: Applicable

PRECAUTION

PRECAUTIONS

FOR USA AND CANADA

FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009717910

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR USA AND CANADA : Precautions for Drive Shaft

INFOID:000000009717911

- Observe the following precautions when disassembling and assembling drive shaft.
- Never disassemble joint sub-assembly because it is non-overhaul parts.
- Perform work in a location which is as dust-free as possible.
- Clean the parts, before disassembling and assembling.
- Prevent the entry of foreign objects during disassembly of the service location.
- Reassemble disassembled parts carefully in the correct order. If work is interrupted, a clean cover must be placed over parts.
- Use paper waste. Fabric shop cloths must not be used because of the danger of lint adhering to parts.
- Clean disassembled parts (except for rubber parts) with kerosene which shall be removed by blowing with air or wiping with paper waste.

PRECAUTIONS

< PRECAUTION >

[AWD]

FOR USA AND CANADA : Precautions for Removing of Battery Terminal

INFOID:000000009956978

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

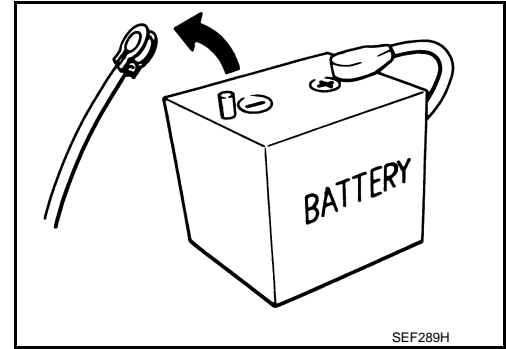

FOR MEXICO

FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009717912

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR MEXICO : Precautions for Drive Shaft

INFOID:000000009717913

- Observe the following precautions when disassembling and assembling drive shaft.
- Never disassemble joint sub-assembly because it is non-overhaul parts.
- Perform work in a location which is as dust-free as possible.
- Clean the parts, before disassembling and assembling.
- Prevent the entry of foreign objects during disassembly of the service location.
- Reassemble disassembled parts carefully in the correct order. If work is interrupted, a clean cover must be placed over parts.
- Use paper waste. Fabric shop cloths must not be used because of the danger of lint adhering to parts.
- Clean disassembled parts (except for rubber parts) with kerosene which shall be removed by blowing with air or wiping with paper waste.

PRECAUTIONS

< PRECAUTION >

[AWD]

FOR MEXICO : Precautions for Removing of Battery Terminal

INFOID:000000009956979

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

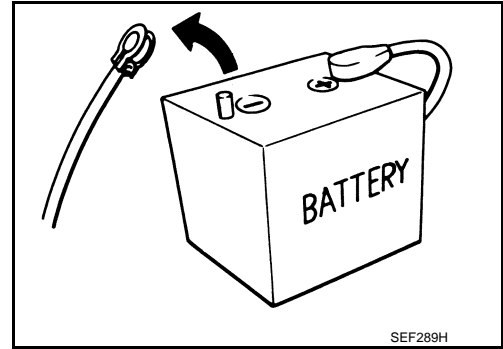

A

B

C

FAX

E

F

G

H

I

J

K

L

M

N

O

P



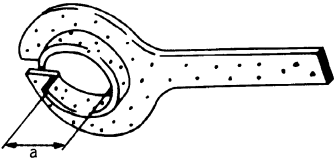

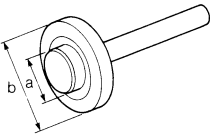
PREPARATION

PREPARATION

Special Service Tool

INFOID:000000009717914

The actual shapes of Kent-More tools may differ from those of special service tools illustrated here.

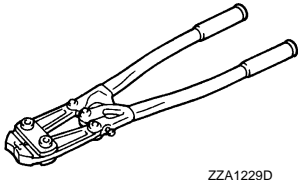Tool number (Kent-More No.) Tool name	Description
KV40107300 (—) Boot band crimping tool	Installing boot band  ZZA1229D
KV40107500 (—) Drive shaft attachment	Removing drive shaft  ZZA1230D
KV38107900 (—) Protector a: 32 mm (1.26 in) dia.	Installing drive shaft  PDIA1183J
ST35271000 (—) Drift a: 72 mm (2.83 in) dia. b: 63 mm (2.48 in) dia.	<ul style="list-style-type: none"> Installing oil seal Installing support bearing  ZZA0701D
ST17130000 (—) Drift a: 32 mm (1.26 in) dia. b: 60 mm (2.36 in) dia.	Removing support bearing  ZZA0836D


PREPARATION

< PREPARATION >

[AWD]

Commercial Service Tool

INFOID:000000009717915

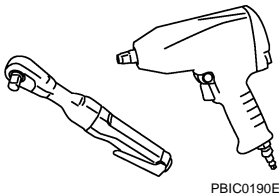Tool name	Description
Power tool	Loosening bolts and nuts
 PBIC0190E	

A

B

C

FAX

E

F

G

H

I

J

K

L

M

N

O

P

PERIODIC MAINTENANCE

FRONT WHEEL HUB AND KNUCKLE

Inspection

INFOID:000000009717916

MOUNTING INSPECTION

Make sure that the mounting conditions (looseness, backlash) of each component and component conditions (wear, damage) are normal.

WHEEL BEARING INSPECTION

- Move wheel hub and bearing assembly in the axial direction by hand. Make sure there is no looseness of wheel bearing.

Standard

Axial end play : Refer to [FAX-55, "Wheel Bearing"](#).

- Rotate wheel hub and bearing assembly and make sure there is no unusual noise or other irregular conditions. If there is any of irregular conditions, replace wheel hub and bearing assembly.

FRONT DRIVE SHAFT

< PERIODIC MAINTENANCE >

[AWD]

FRONT DRIVE SHAFT

Inspection

INFOID:000000009717917

- Check drive shaft mounting point and joint for looseness and other damage.
- Check boot for cracks and other damage.

CAUTION:

Replace entire drive shaft assembly when noise or vibration occurs from drive shaft.

A

B

C

FAX

E

F

G

H

I

J

K

L

M

N

O

P

FRONT WHEEL HUB AND KNUCKLE

< REMOVAL AND INSTALLATION >


[AWD]

REMOVAL AND INSTALLATION

FRONT WHEEL HUB AND KNUCKLE

Exploded View

INFOID:000000009717918

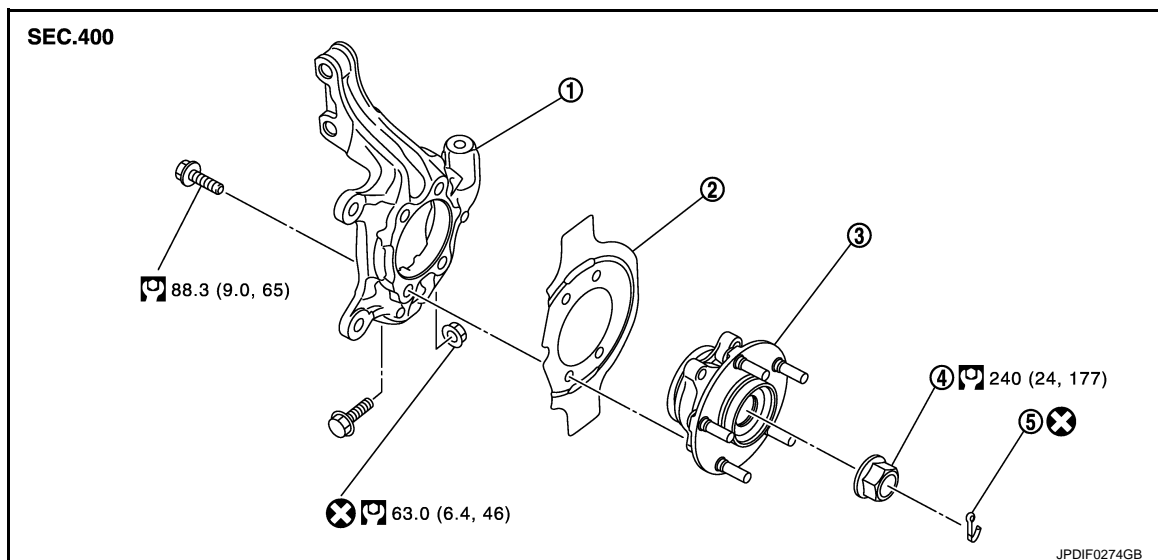

- | | | |
|-----------------------|-----------------|-----------------------------------|
| 1. Steering knuckle | 2. Splash guard | 3. Wheel hub and bearing assembly |
| 4. Wheel hub lock nut | 5. Cotter pin | |

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000009717919

REMOVAL

1. Remove tires with power tool.
2. Remove wheel sensor and sensor harness. Refer to [BRC-123, "FRONT WHEEL SENSOR : Exploded View"](#).
3. Remove lock plate from strut assembly. Refer to [BR-22, "FRONT : Exploded View"](#).
4. Remove caliper assembly. Hang caliper assembly not to interfere with work. Refer to [BR-38, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Exploded View"](#) (1 PISTON TYPE), [BR-42, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Exploded View"](#) (2 PISTON TYPE).

CAUTION:

Never depress brake pedal while brake caliper is removed.

5. Remove disc rotor. Refer to [BR-39, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Removal and Installation"](#) (1 PISTON TYPE), [BR-43, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Removal and Installation"](#) (2 PISTON TYPE).
6. Remove cotter pin, and then loosen wheel hub lock nut with power tool.
7. Patch wheel hub lock nut with a piece of wood. Hammer the wood to disengage wheel hub and bearing assembly from drive shaft.

CAUTION:

- **Never place drive shaft joint at an extreme angle. Also be careful not to overextend slide joint.**
- **Never allow drive shaft to hang down without support for joint sub-assembly, shaft and the other parts.**

NOTE:

Use suitable puller, if wheel hub and bearing assembly and drive shaft cannot be separated even after performing the above procedure.

8. Remove wheel hub lock nut.
9. Remove strut assembly from steering knuckle. Refer to [FSU-9, "Exploded View"](#).

FRONT WHEEL HUB AND KNUCKLE

< REMOVAL AND INSTALLATION >

[AWD]

10. Remove drive shaft from wheel hub and bearing assembly, suspend the drive shaft with suitable wire. Refer to [FAX-45, "Exploded View"](#).
11. Temporarily tighten strut assembly and steering knuckle.
12. Remove wheel hub and bearing assembly, and then remove splash guard.
13. Remove steering outer socket from steering knuckle. Refer to [ST-46, "Exploded View"](#).
14. Remove steering knuckle from transverse link.
15. Remove steering knuckle from steering knuckle.

INSTALLATION

Note the following, and install in the reverse order of the removal.

- Clean the matching surface of wheel hub lock nut and wheel hub and bearing assembly.

CAUTION:

Never apply lubricating oil to these matching surface.


- Clean the matching surface of drive shaft and wheel hub and bearing assembly.

CAUTION:

Apply paste [service parts (440037S000)] to cover entire flat surface (A) of joint sub-assembly of drive shaft.

Amount paste : 1.0 – 3.0 g (0.04 – 0.10 oz)

- Never use a power tool to tighten the wheel hub lock nut.
- Perform the final tightening of each of parts under unladen conditions, which were removed when removing wheel hub and bearing assembly and axle housing.
- Never reuse cotter pin.

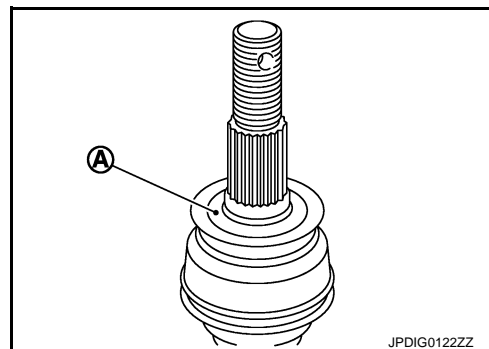

INFOID:000000009717920

Inspection

INSPECTION AFTER REMOVAL

Check components for deformation, cracks, and other damage. Replace if necessary.

Ball Joint Inspection

Check boots of transverse link and steering outer socket ball joint for breakage, axial play, and torque. Refer to [FSU-11, "Inspection"](#) and [ST-56, "Inspection"](#).

INSPECTION AFTER INSTALLATION

1. Check wheel sensor harness for proper connection. Refer to [BRC-123, "FRONT WHEEL SENSOR : Exploded View"](#).
2. Check the wheel alignment. Refer to [FSU-7, "Inspection"](#).
3. Adjust neutral position of steering angle sensor. Refer to [BRC-9, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

FRONT DRIVE SHAFT BOOT

< REMOVAL AND INSTALLATION >


[AWD]

FRONT DRIVE SHAFT BOOT

Exploded View

INFOID:000000009717921

LEFT SIDE

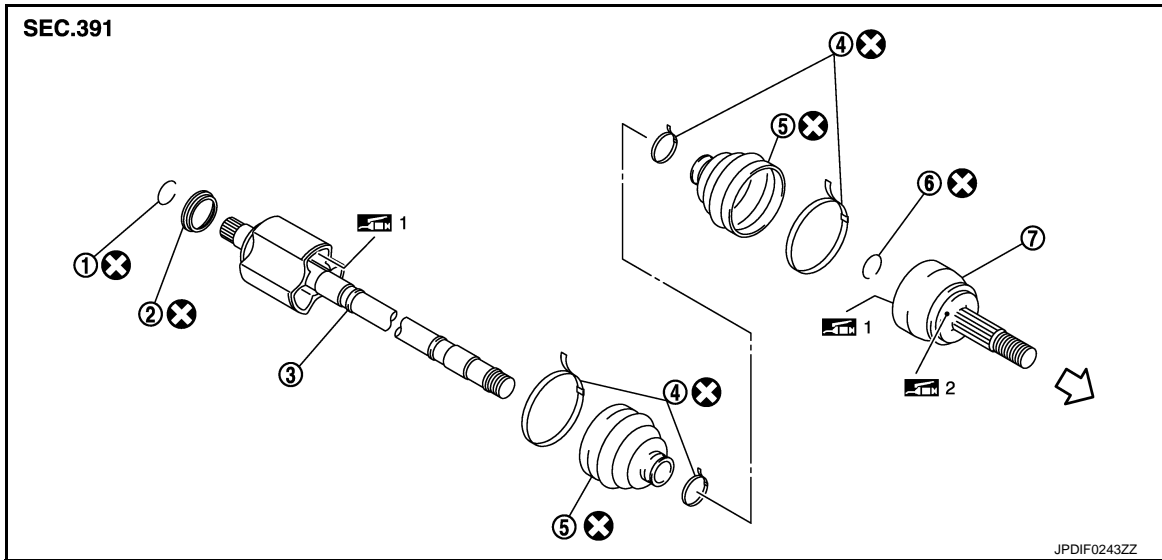

- | | | |
|-----------------------|----------------|---------------------|
| 1. Circular clip | 2. Dust shield | 3. Housing assembly |
| 4. Boot band | 5. Boot | 6. Circular clip |
| 7. Joint sub-assembly | | |


⇐ : Wheel side

1: Fill NISSAN Genuine grease or equivalent.

2: Apply paste [service parts (440037S000)].

Refer to [GI-4, "Components"](#) for symbols not described on the above.

RIGHT SIDE

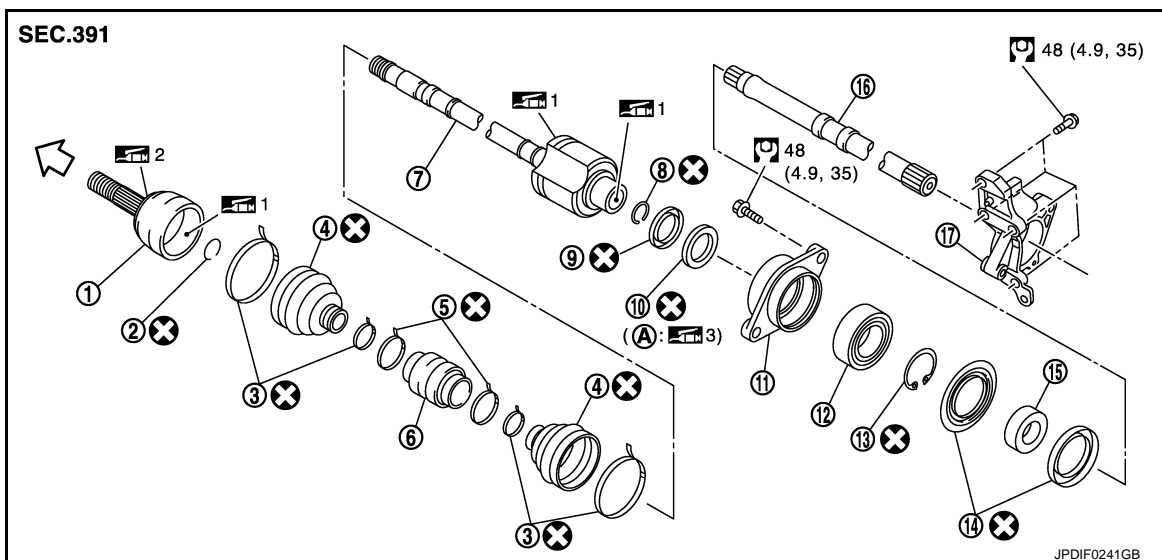

- | | | |
|-----------------------|---------------------|---------------------|
| 1. Joint sub-assembly | 2. Circular clip | 3. Boot band |
| 4. Boot | 5. Damper band | 6. Dynamic damper |
| 7. Housing assembly | 8. Circular clip | 9. Dust shield |
| 10. Oil seal | 11. Bearing housing | 12. Bearing bracket |

FRONT DRIVE SHAFT BOOT


< REMOVAL AND INSTALLATION >

[AWD]

- | | | |
|-----------------|-----------------------------|------------|
| 13. Snap ling | 14. Dust shield | 15. collar |
| 16. Link shaft | 17. Support bearing bracket | |
| A: Oil seal lip | | |
| ⇐ : Wheel side | | |

 1: Fill NISSAN Genuine grease or equivalent.

 2: Apply paste [service parts (440037S000)].

 3: Apply multi - purpose grease.

Refer to [GI-4. "Components"](#) for symbols not described on the above.

WHEEL SIDE

FAX

WHEEL SIDE : Removal and Installation

INFOID:000000009717922

REMOVAL

1. Remove tires with power tool.
2. Remove wheel sensor and sensor harness. Refer to [BRC-123. "FRONT WHEEL SENSOR : Exploded View"](#).
3. Remove lock plate from strut assembly. Refer to [BR-22. "FRONT : Exploded View"](#).
4. Remove caliper assembly. Hang caliper assembly not to interfere with work. Refer to [BR-38. "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Exploded View"](#) (1 PISTON TYPE), [BR-42. "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Exploded View"](#) (2 PISTON TYPE).

CAUTION:

Never depress brake pedal while brake caliper is removed.

5. Remove disc rotor. Refer to [BR-39. "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Removal and Installation"](#) (1 PISTON TYPE), [BR-43. "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Removal and Installation"](#) (2 PISTON TYPE).
6. Remove cotter pin, and then loosen wheel hub lock nut with power tool. Refer to [FAX-38. "Exploded View"](#).
7. Patch wheel hub lock nut with a piece of wood. Hammer the wood to disengage wheel hub and bearing assembly from drive shaft.

CAUTION:

- **Never place drive shaft joint at an extreme angle. Also be careful not to overextend slide joint.**
- **Never allow drive shaft to hang down without support for joint sub-assembly, housing assembly and the other parts.**


NOTE:

Use suitable puller, if wheel hub and bearing assembly and drive shaft cannot be separated even after performing the above procedure.

8. Remove wheel hub lock nut.
9. Remove strut assembly from steering knuckle. Refer to [FSU-9. "Exploded View"](#).
10. Remove drive shaft from wheel hub and bearing assembly.
11. Remove boot bands, and then remove boot from joint sub-assembly.
12. Screw drive shaft puller (A) into joint sub-assembly screw part to a length of 30 mm (1.18 in) or more. Support drive shaft with one hand and pull out joint sub-assembly with a sliding hammer (B) from housing assembly.

CAUTION:

- **Align a sliding hammer and drive shaft and remove them by pulling firmly and uniformly.**
- **If joint sub-assembly cannot be pulled out, try after removing drive shaft from vehicle.**

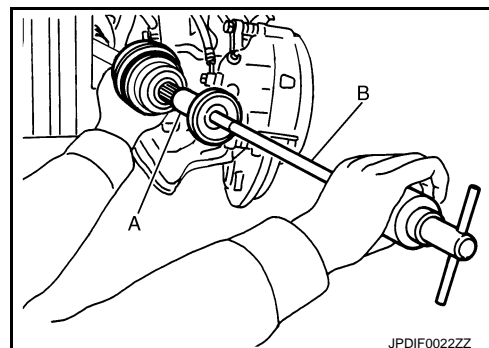


FRONT DRIVE SHAFT BOOT

< REMOVAL AND INSTALLATION >

[AWD]

13. Remove circular clip (1) from housing assembly.
14. Remove boot from housing assembly.

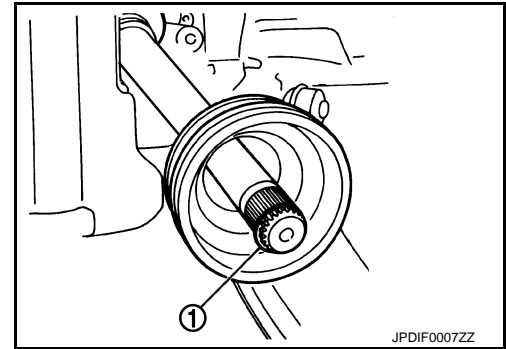

INSTALLATION

1. Clean the old grease on joint sub-assembly with paper waste.
2. Fill serration slot joint sub-assembly with NISSAN genuine grease or equivalent until the serration slot and ball groove become full to the brim.

CAUTION:

After applying grease, use a paper waste to wipe off old grease that has oozed out.

3. Install boot and boot bands to housing assembly.

CAUTION:

- Wrap serration on housing assembly with tape to protect the boot from damage.
- Never reuse boot and boot band.

4. Remove the tape wrapped around the serration on housing assembly.
5. Position the circular clip on groove at the housing assembly edge.

CAUTION:

Never reuse circular clip.

NOTE:

Drive joint inserter is recommended when installing circular clip.

6. Align both center axles of the housing assembly edge and joint sub-assembly. Then assemble housing assembly with joint sub-assembly holding circular clip.


7. Install joint sub-assembly (1) to housing assembly using plastic hammer.

CAUTION:

Confirm that joint sub-assembly is correctly engaged while rotating drive housing assembly.

8. Apply the specified amount of grease into the boot inside from large diameter side of boot.

Grease amount : Refer to [FAX-55, "Drive Shaft"](#).

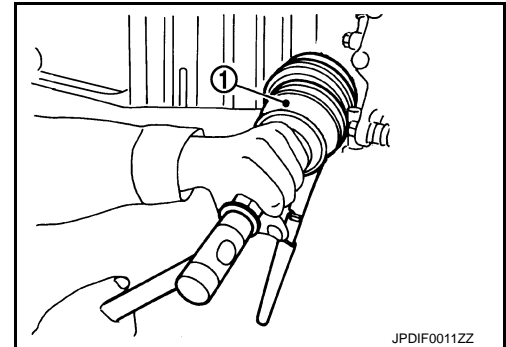


9. Install the boot securely into grooves (indicated by "*" marks) shown in the figure.

CAUTION:

If grease adheres to the boot mounting surface (indicated by "*" mark) on the housing assembly or joint sub-assembly, boot may be removed. Remove all grease from the boot mounting surface.

10. To prevent the deformation of the boot, adjust the boot installation length (L) to the specified value shown below by inserting the suitable tool into inside of the boot from the large diameter side of the boot and discharging the inside air.

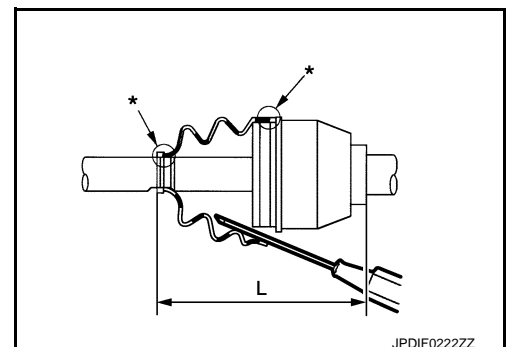

L : Refer to [FAX-55, "Drive Shaft"](#).

CAUTION:

- If the boot mounting length exceeds the standard, it may cause breakage of boot.

FRONT DRIVE SHAFT BOOT

< REMOVAL AND INSTALLATION >


[AWD]

- Be careful not to touch the inside of the boot with a tip of tool.

11. Secure the large and small ends of the boot with boot bands using the boot band crimping tool (A) [SST: KV40107300 (—)].

CAUTION:

Never reuse boot band.

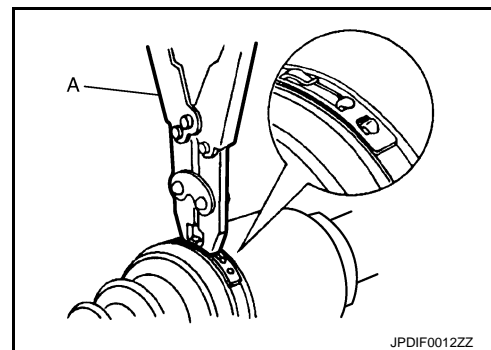

NOTE:

Secure boot band so that dimension (A) meets the specification as shown in the figure.

A : 7.0 mm (0.276 in) or less

12. Secure joint sub-assembly and housing assembly, and then make sure that they are in the correct position when rotating boot. Reinstall them using boot bands when boot installation positions become incorrect.

CAUTION:

Never reuse boot band.

13. Clean the matching surface of wheel hub lock nut and wheel hub and bearing assembly.

CAUTION:



Never apply lubricating oil to these matching surface.

14. Clean the matching surface of drive shaft and wheel hub and bearing assembly.

CAUTION:

Apply paste [service parts (440037S000)] to cover entire flat surface (A) of joint sub-assembly of drive shaft.

Amount paste : 1.0 – 3.0 g (0.04 – 0.10 oz)

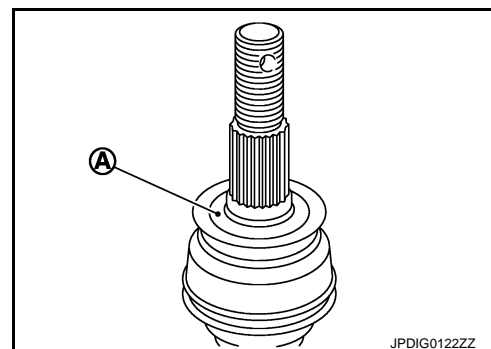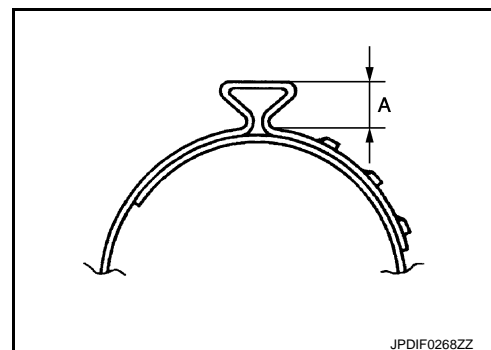

15. Insert drive shaft to wheel hub and bearing assembly, and then temporarily tighten wheel hub lock nut.
16. Install strut assembly to steering knuckle. Refer to [FSU-9, "Exploded View"](#).
17. Install disc rotor. Refer to [BR-39, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Removal and Installation"](#) (1 PISTON TYPE), [BR-43, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Removal and Installation"](#) (2 PISTON TYPE).
18. Install caliper assembly to steering knuckle. Refer to [BR-38, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Exploded View"](#) (1 PISTON TYPE), [BR-42, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Exploded View"](#) (2 PISTON TYPE).
19. Install lock plate to strut assembly. Refer to [BR-22, "FRONT : Exploded View"](#).
20. Install wheel sensor and sensor harness to steering knuckle. Refer to [BRC-123, "FRONT WHEEL SENSOR : Exploded View"](#).
21. Tighten the wheel hub lock nut to the specified torque. Refer to [FAX-38, "Exploded View"](#).

NOTE:

- Never use a power tool to tighten the wheel hub lock nut.

FRONT DRIVE SHAFT BOOT

[AWD]

< REMOVAL AND INSTALLATION >

- Perform the final tightening of each of parts under unladen conditions, which were removed when removing wheel hub and bearing assembly and axle housing.

22. Install cotter pin. Refer to [FAX-38. "Exploded View"](#).

CAUTION:

- Never reuse cotter pin.
- Bend cotter pin at the root sufficiently to prevent any looseness.

TRANSAXLE SIDE

TRANSAXLE SIDE : Removal and Installation

INFOID:000000009717923

NOTE:


Remove boot after removing drive shaft. Refer to [FAX-46. "LEFT SIDE : Removal and Installation"](#) (left side), [FAX-47. "RIGHT SIDE : Removal and Installation"](#) (right side).

Inspection

INFOID:000000009717924

INSPECTION AFTER REMOVAL

- Move joint up/down, left/right, and in the axial directions. Check for motion that is not smooth and for significant looseness.
- Check boot for cracks, damage, and leakage of grease.
- Disassemble drive shaft and exchange malfunctioning part if there is a non-standard condition.

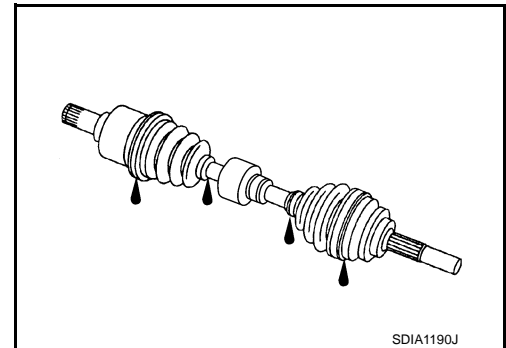

FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >


[AWD]

FRONT DRIVE SHAFT

Exploded View

LEFT SIDE

INFOID:000000009717925

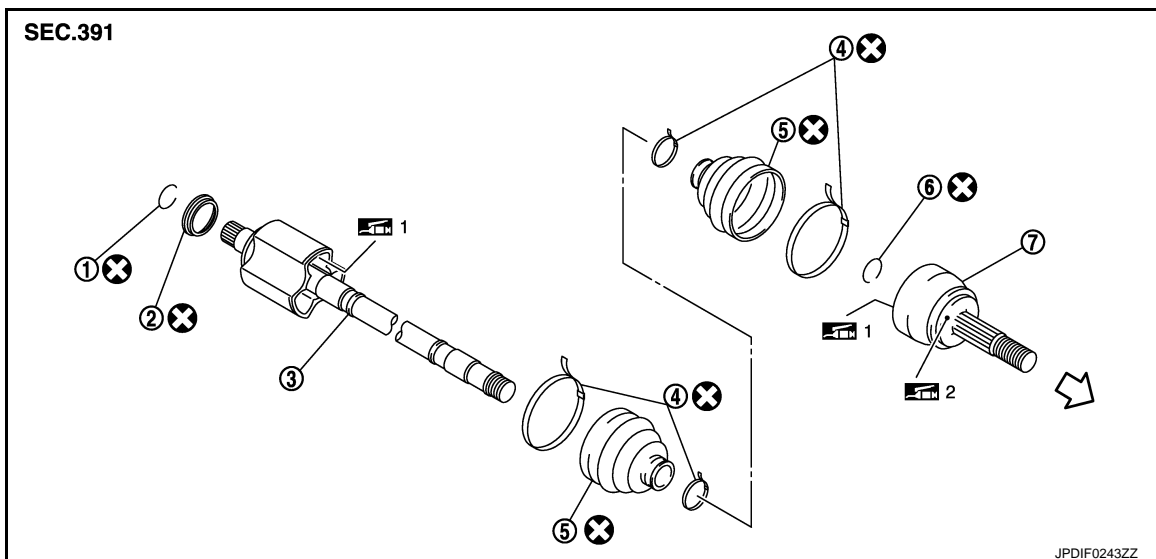

- | | | |
|-----------------------|----------------|---------------------|
| 1. Circular clip | 2. Dust shield | 3. Housing assembly |
| 4. Boot band | 5. Boot | 6. Circular clip |
| 7. Joint sub-assembly | | |


← : Wheel side

1: Fill NISSAN Genuine grease or equivalent.

2: Apply paste [service parts (440037S000)].

Refer to [GI-4, "Components"](#) for symbols not described on the above.

RIGHT SIDE

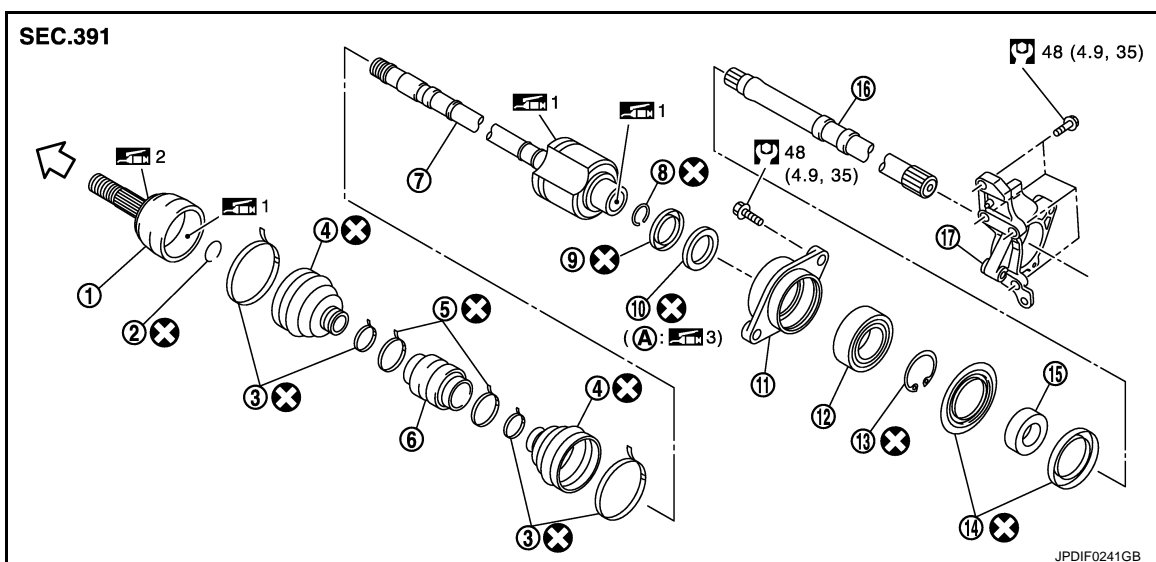

- | | | |
|-----------------------|---------------------|---------------------|
| 1. Joint sub-assembly | 2. Circular clip | 3. Boot band |
| 4. Boot | 5. Damper band | 6. Dynamic damper |
| 7. Housing assembly | 8. Circular clip | 9. Dust shield |
| 10. Oil seal | 11. Bearing housing | 12. Bearing bracket |


FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >


[AWD]

- | | | |
|-----------------|-----------------------------|------------|
| 13. Snap ling | 14. Dust shield | 15. collar |
| 16. Link shaft | 17. Support bearing bracket | |
| A: Oil seal lip | | |

⇐ : Wheel side

 1: Fill NISSAN Genuine grease or equivalent.

 2: Apply paste [service parts (440037S000)].

 3: Apply multi - purpose grease.

Refer to [GI-4. "Components"](#) for symbols not described on the above.

LEFT SIDE

LEFT SIDE : Removal and Installation

INFOID:000000009717926

REMOVAL

1. Remove tires with power tool.
2. Remove wheel sensor and sensor harness. Refer to [BRC-123. "FRONT WHEEL SENSOR : Exploded View"](#).
3. Remove lock plate from strut assembly. Refer to [BR-22. "FRONT : Exploded View"](#).
4. Remove caliper assembly. Hang caliper assembly not to interfere with work. Refer to [BR-38. "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Exploded View"](#) (1 PISTON TYPE), [BR-42. "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Exploded View"](#) (2 PISTON TYPE).

CAUTION:

Never depress brake pedal while brake caliper is removed.

5. Remove disc rotor. Refer to [BR-39. "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Removal and Installation"](#) (1 PISTON TYPE), [BR-43. "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Removal and Installation"](#) (2 PISTON TYPE).
6. Remove cotter pin, and then loosen wheel hub lock nut with power tool.
7. Patch wheel hub lock nut with a piece of wood. Hammer the wood to disengage wheel hub and bearing assembly from drive shaft.

CAUTION:

- **Never place drive shaft joint at an extreme angle. Also be careful not to overextend slide joint.**
- **Never allow drive shaft to hang down without support for joint sub-assembly, housing assembly and the other parts.**

NOTE:


Use suitable puller, if wheel hub and bearing assembly and drive shaft cannot be separated even after performing the above procedure.

8. Remove wheel hub lock nut.
9. Remove strut assembly from steering knuckle. Refer to [FSU-9. "Exploded View"](#).
10. Remove drive shaft from transaxle assembly.

- Use the drive shaft attachment (A) [SST: KV40107500 (—)] and a sliding hammer (B) while inserting tip of the drive shaft attachment between housing assembly and transaxle assembly.

CAUTION:

- **Never place drive shaft joint at an extreme angle when removing drive shaft. Also be careful not to overextend slide joint.**
- **Confirm that the circular clip is attached to the drive shaft.**

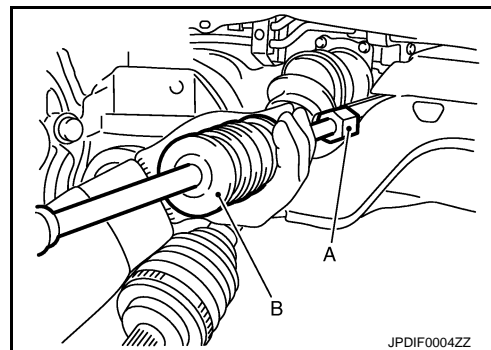

INSTALLATION

Note the following, and install in the reverse order of removal.

- Always replace differential side oil seal with new one when installing drive shaft. Refer to [TM-175. "AWD : Exploded View"](#).

FRONT DRIVE SHAFT


[AWD]

< REMOVAL AND INSTALLATION >

- Place the protector (A) [SST: KV38107900 (—)] onto transaxle assembly to prevent damage to the oil seal while inserting drive shaft. Slide drive shaft sliding joint and tap with a hammer to install securely.

CAUTION:

Make sure that circular clip is completely engaged.

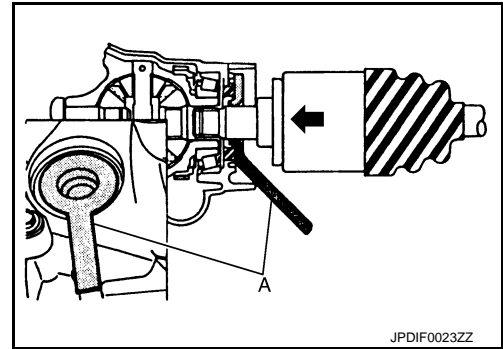

- Clean the matching surface of wheel hub lock nut and wheel hub and bearing assembly.

CAUTION:

Never apply lubricating oil to these matching surface.


- Clean the matching surface of drive shaft and wheel hub and bearing assembly.

CAUTION:

Apply paste [service parts (440037S000)] to cover entire flat surface (A) of joint sub-assembly of drive shaft.

Amount paste : 1.0 – 3.0 g (0.04 – 0.10 oz)

- Never use a power tool to tighten the wheel hub lock nut.
- Perform the final tightening of each of parts under unladen conditions, which were removed when removing wheel hub and bearing assembly and axle housing.
- Never reuse cotter pin.

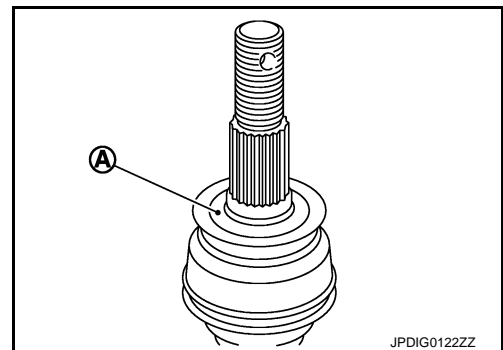

RIGHT SIDE

RIGHT SIDE : Removal and Installation

INFOID:000000009717927

REMOVAL

- Remove tires with power tool.
- Remove wheel sensor and sensor harness. Refer to [BRC-123, "FRONT WHEEL SENSOR : Exploded View"](#).
- Remove lock plate from strut assembly. Refer to [BR-22, "FRONT : Exploded View"](#).
- Remove caliper assembly. Hang caliper assembly not to interfere with work. Refer to [BR-38, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Exploded View"](#) (1 PISTON TYPE), [BR-42, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Exploded View"](#) (2 PISTON TYPE).

CAUTION:

Never depress brake pedal while brake caliper is removed.

- Remove disc rotor. Refer to [BR-39, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Removal and Installation"](#) (1 PISTON TYPE), [BR-43, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Removal and Installation"](#) (2 PISTON TYPE).
- Remove cotter pin, and then loosen wheel hub lock nut with power tool.
- Patch wheel hub lock nut with a piece of wood. Hammer the wood to disengage wheel hub and bearing assembly from drive shaft.

CAUTION:

- Never place drive shaft joint at an extreme angle. Also be careful not to overextend slide joint.
- Never allow drive shaft to hang down without support for joint sub-assembly, housing assembly and the other parts.

NOTE:

Use suitable puller, if wheel hub and bearing assembly and drive shaft cannot be separated even after performing the above procedure.


- Remove wheel hub lock nut.
- Remove strut assembly from steering knuckle. Refer to [FSU-9, "Exploded View"](#).

FRONT DRIVE SHAFT

[AWD]

< REMOVAL AND INSTALLATION >


10. Remove drive shaft from wheel hub and bearing assembly.
11. Remove drive shaft from link shaft.
 - Use the drive shaft attachment (A) [SST: KV40107500 (—)] and a sliding hammer (B) while inserting tip of the drive shaft attachment between housing assembly and link shaft assembly.
- CAUTION:**
Never place drive shaft joint at an extreme angle when removing drive shaft. Also be careful not to overextend slide joint.
12. Remove bearing housing mounting bolts.
13. Remove link shaft assembly from support bearing bracket.
14. Remove support bearing bracket, follow the procedure described below.
 - a. Remove front exhaust tube. Refer to [EX-5, "Exploded View"](#).
 - b. Remove three way catalyst (bank 1) and heated oxygen sensor harness bracket. Refer to [EM-38, "Exploded View"](#).
 - c. Remove support bearing bracket.

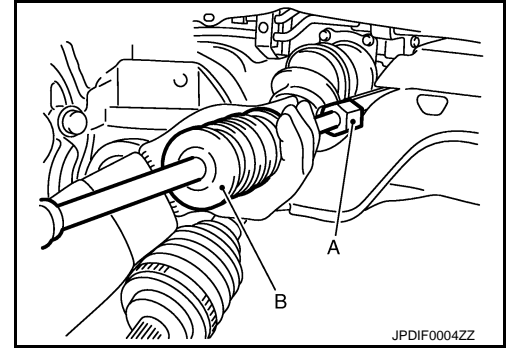


INSTALLATION

Note the following, and install in the reverse order of removal.

- Always replace differential side oil seal with new one when installing link shaft. Refer to [TM-175, "AWD : Exploded View"](#).
- Place the protector (A) [SST: KV38107900 (—)] onto transaxle assembly to prevent damage to the oil seal while inserting link shaft. Slide link shaft sliding joint and tap with a hammer to install securely.

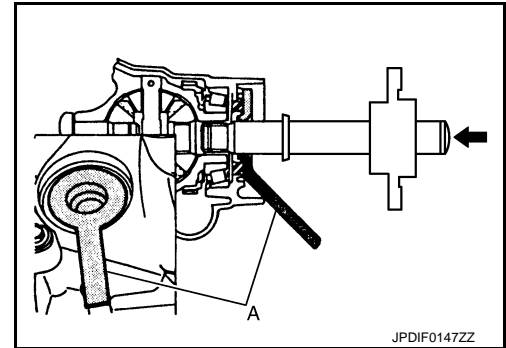

- Install support bearing bracket (1) in following procedure,
 - Temporarily tighten mounting bolts (A), then tighten them to specified torque.
 - Temporarily tighten mounting bolts (B), then tighten them to specified torque.

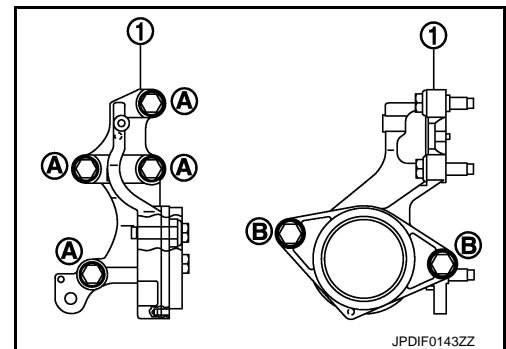

- Apply NISSAN genuine grease to drive shaft serration (link shaft side), and install drive shaft onto link shaft.

Standard : 1.5 – 2.5 g (0.053 – 0.088 oz)

- Clean the matching surface of wheel hub lock nut and wheel hub and bearing assembly.

CAUTION:

Never apply lubricating oil to these matching surface.

- Clean the matching surface of drive shaft and wheel hub and bearing assembly.

CAUTION:

FRONT DRIVE SHAFT


< REMOVAL AND INSTALLATION >

[AWD]

Apply paste [service parts (440037S000)] to cover entire flat surface (A) of joint sub-assembly of drive shaft.

Amount paste : 1.0 – 3.0 g (0.04 – 0.10 oz)

- Never use a power tool to tighten the wheel hub lock nut.
- Perform the final tightening of each of parts under unladen conditions, which were removed when removing wheel hub and bearing assembly and axle housing.
- Never reuse cotter pin.

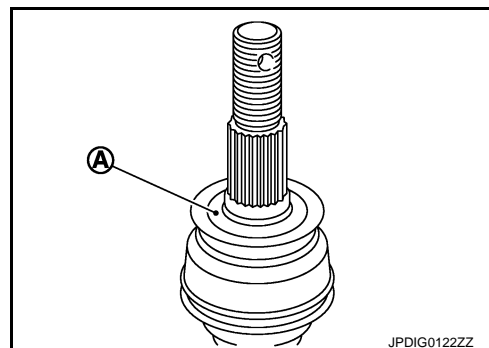

WHEEL SIDE

WHEEL SIDE : Disassembly and Assembly

INFOID:000000009717928

DISASSEMBLY

1. Fix shaft with a vise.

CAUTION:


Protect shaft using aluminum or copper plates when fixing with a vise.

2. Remove boot bands, and then remove boot from joint sub-assembly.
3. Screw drive shaft puller (A) into joint sub-assembly screw part to a length of 30 mm (1.18 in) or more. Support drive shaft with one hand and pull out joint sub-assembly with a sliding hammer (B) from housing assembly.

CAUTION:

- Align a sliding hammer and drive shaft and remove them by pulling firmly and uniformly.
- If joint sub-assembly cannot be pulled out, try after removing drive shaft from vehicle.

4. Remove circular clip (1) from housing assembly.
5. Remove boot from housing assembly.

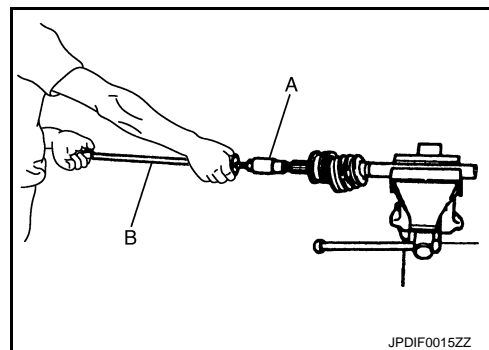

ASSEMBLY

1. Clean the old grease on joint sub-assembly with paper waste.
2. Fill serration slot joint sub-assembly with NISSAN genuine grease or equivalent until the serration slot and ball groove become full to the brim.

CAUTION:

After applying grease, use a paper waste to wipe off old grease that has oozed out.

3. Install boot and boot bands to housing assembly.

CAUTION:

- Wrap serration on housing assembly with tape to protect the boot from damage.
- Never reuse boot and boot band.

4. Remove the tape wrapped around the serration on housing assembly.
5. Position the circular clip on groove at the housing assembly edge.

CAUTION:

Never reuse circular clip.

NOTE:

Drive joint inserter is recommended when installing circular clip.

6. Align both center axes of the housing assembly edge and joint sub-assembly. Then assemble housing assembly with circular clip joint sub-assembly.


FRONT DRIVE SHAFT

[AWD]


< REMOVAL AND INSTALLATION >

7. Install joint sub-assembly to housing assembly using plastic hammer.
CAUTION:
Confirm that joint sub-assembly is correctly engaged while rotating drive housing assembly.
8. Apply the specified amount of grease into the boot inside from large diameter side of boot.

Grease amount : Refer to [FAX-55, "Drive Shaft"](#).

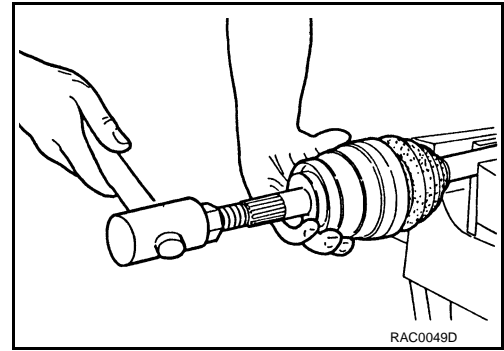

9. Install the boot securely into grooves (indicated by "*" marks) shown in the figure.
CAUTION:
If grease adheres to the boot mounting surface (indicated by "*" mark) on the housing assembly or joint sub-assembly, boot may be removed. Remove all grease from the boot mounting surface.
10. To prevent the deformation of the boot, adjust the boot installation length (L) to the specified value shown below by inserting the suitable tool into inside of the boot from the large diameter side of the boot and discharging the inside air.

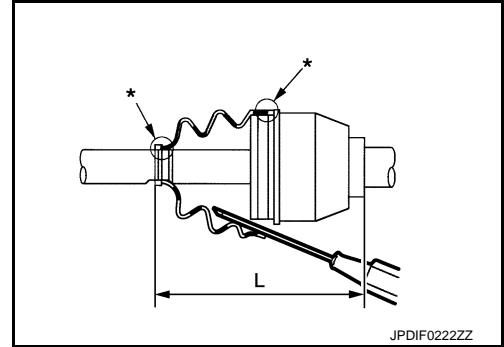

L : Refer to [FAX-55, "Drive Shaft"](#).


CAUTION:

- If the boot installation length exceeds the standard, it may cause breakage of boot.
- Be careful not to touch the inside of the boot with a tip of tool.

11. Secure the large and small ends of the boot with boot bands using the boot band crimping tool (A) [SST: KV40107300 (—)].

CAUTION:

Never reuse boot band.

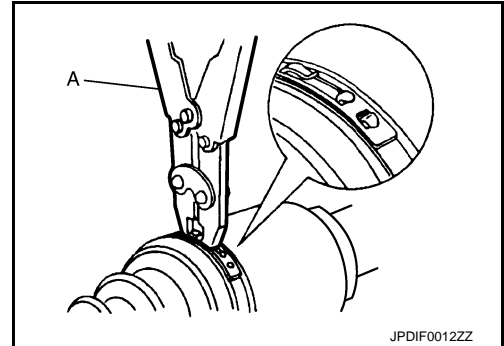

NOTE:


Secure boot band so that dimension (A) meets the specification as shown in the figure.

A : 7.0 mm (0.276 in) or less

12. Secure joint sub-assembly and housing assembly, and then make sure that they are in the correct position when rotating boot. Reinstall them using boot bands when boot installation positions become incorrect.

CAUTION:

Never reuse boot band.

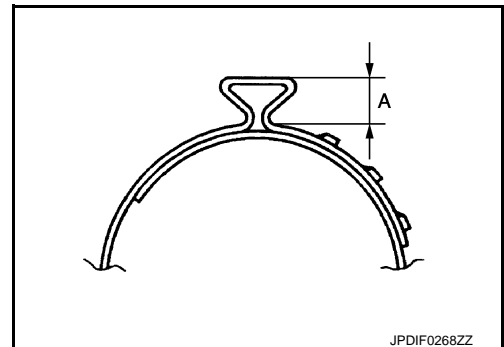

TRANSAXLE SIDE

TRANSAXLE SIDE : Disassembly and Assembly

DISASSEMBLY

INFOID:000000009717929

FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >

[AWD]

Left Side

1. Fix drive shaft with a vise.

CAUTION:

Protect shaft using aluminum or copper plates when fixing with a vise.

2. Disassemble boot (wheel side). Refer to [FAX-49, "WHEEL SIDE : Disassembly and Assembly"](#).
3. Remove boot bands and boot (transaxle side).


Right Side

1. Fix drive shaft with a vise.


CAUTION:

Protect shaft using aluminum or copper plates when fixing with a vise.

2. Disassemble boot (wheel side). Refer to [FAX-49, "WHEEL SIDE : Disassembly and Assembly"](#).
3. Remove dynamic damper, follow the procedure described below.
 - a. Remove damper bands.
 - b. Remove dynamic damper from shaft.
4. Remove boot bands and boot (transaxle side).
5. Remove dust shield from housing assembly.
6. Remove support bearing from link shaft, follow the procedure described below.
 - a. Press out bearing housing and support bearing from link shaft.
 - b. Remove dust shield from bearing housing.
 - c. Remove snap ring (1).
 - d. Remove oil seal.

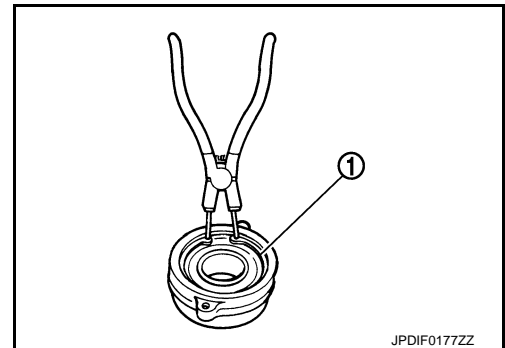

- e. Press out support bearing from bearing housing (1) with drift (A) [SST: ST17130000 (—)]

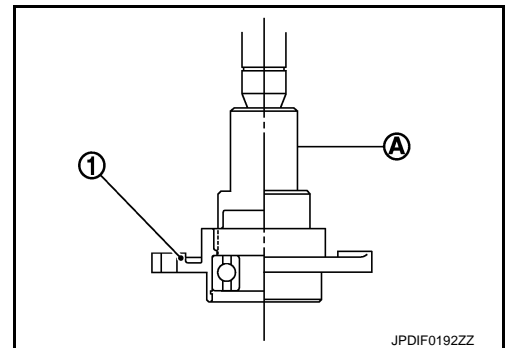

ASSEMBLY

Left Side

1. Install dust shield.

CAUTION:

Never reuse dust shield.

2. Install circular clip.

CAUTION:

Never reuse circular clip.

3. Clean old grease on housing assembly with paper waste.

FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >

[AWD]

4. Install boot securely into grooves (indicated by “*” marks) shown in the figure.

CAUTION:

If grease adheres to the boot mounting surface (indicated by “*” mark) on housing assembly, boot may be removed. Remove all grease from the boot mounting surface.

5. To prevent the deformation of the boot, adjust the boot installation length (L) to the specified value shown below by inserting the suitable tool into the inside of boot from the large diameter side of boot and discharging inside air.

L

: Refer to [FAX-55, "Drive Shaft"](#).



CAUTION:

- If the boot installation length exceeds the standard, it may cause breakage of boot.
- Be careful not to touch the inside of the boot with the tip of tool.


6. Install boot bands securely as shown in the figure.
 - a. Put boot band in the groove on drive shaft boot. Then fit pawls (➡) into holes to temporary installation.

NOTE:

For the large diameter side, fit projection (A) and guide slit (B) at first.

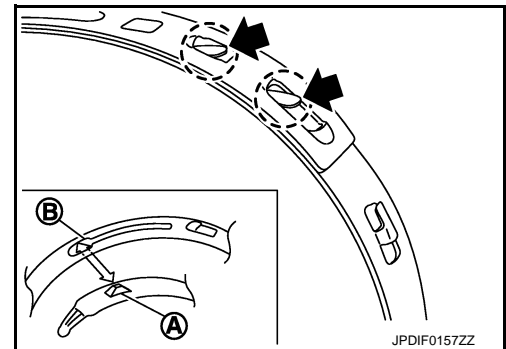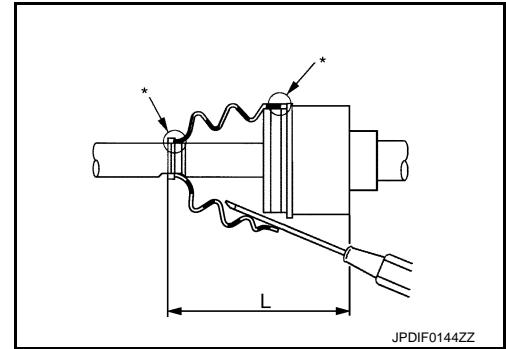


- b. Pinch projection on the band with suitable pliers to tighten band.
 - c. Insert tip of band below end of the pawl.
7. Secure housing assembly, and then make sure that they are in the correct position when rotating boot. Reinstall them with boot bands when the mounting positions become incorrect.

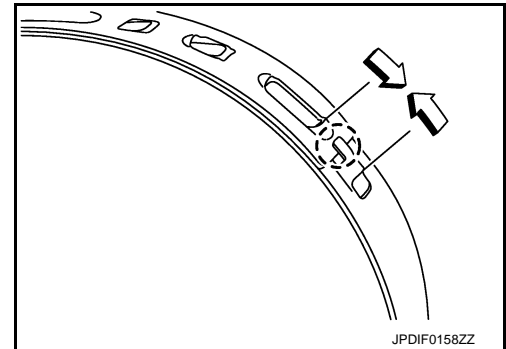

Right Side

1. Install support bearing from link shaft, follow the procedure described below.
 - a. Press support bearing to bearing housing (1) with drift (A) [SST: ST35271000 (—)]

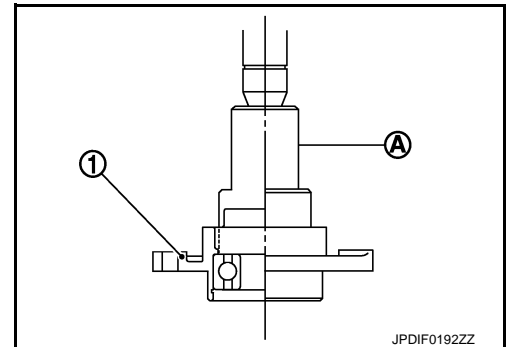


FRONT DRIVE SHAFT


< REMOVAL AND INSTALLATION >

[AWD]

- b. Install snap ring (1).
CAUTION:
Never reuse snap ring.
- c. Install dust shield to bearing housing.
CAUTION:
Never reuse dust shield.
- d. Install oil seal to bearing housing with drift.
CAUTION:
 - **Never reuse oil seal.**
 - **Apply multi - purpose grease to oil seal lip.**
- e. Press bearing housing assembly to link shaft.
- f. Install circular clip to link shaft.
CAUTION:
Never reuse circular clip.

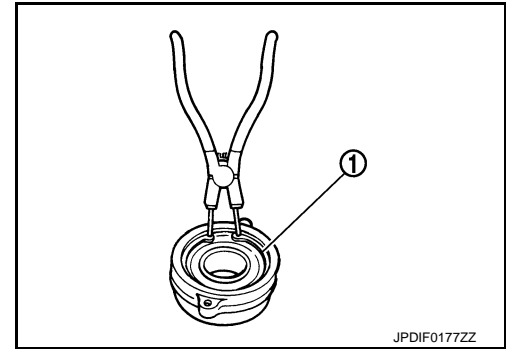

2. Clean old grease on housing assembly with paper waste.
3. Install boot securely into grooves (indicated by "*" marks) shown in the figure.
CAUTION:
If grease adheres to the boot mounting surface (indicated by "*" mark) on housing assembly, boot may be removed. Remove all grease from the boot mounting surface.
4. To prevent the deformation of the boot, adjust the boot installation length (L) to the specified value shown below by inserting the suitable tool into the inside of boot from the large diameter side of boot and discharging inside air.

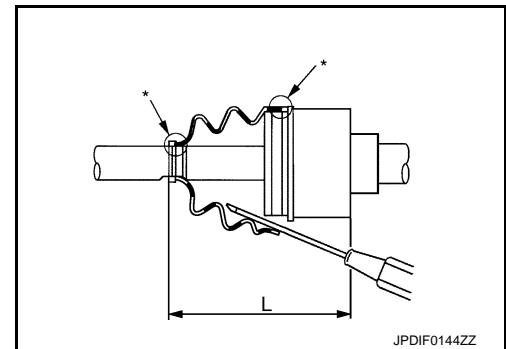


L : Refer to [FAX-54, "Inspection"](#).


CAUTION:

- If the boot installation length exceeds the standard, it may cause breakage of boot.
- Be careful not to touch the inside of the boot with the tip of tool.

5. Install boot bands securely as shown in the figure.
- a. Put boot band in the groove on drive shaft boot. Then fit pawls (➡) into holes to temporary installation.
NOTE:
For the large diameter side, fit projection (A) and guide slit (B) at first.

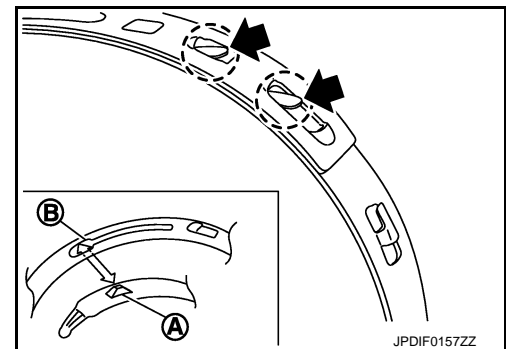

- b. Pinch projection on the band with suitable pliers to tighten band.
- c. Insert tip of band below end of the pawl.
6. Secure housing assembly, and then make sure that they are in the correct position when rotating boot. Reinstall them with boot bands when the mounting positions become incorrect.
7. Assemble boot (wheel side) and joint sub-assembly. Refer to [FAX-49, "WHEEL SIDE : Disassembly and Assembly"](#).
8. Install dynamic damper, follow the procedure described below.
- a. Install dynamic damper to shaft.

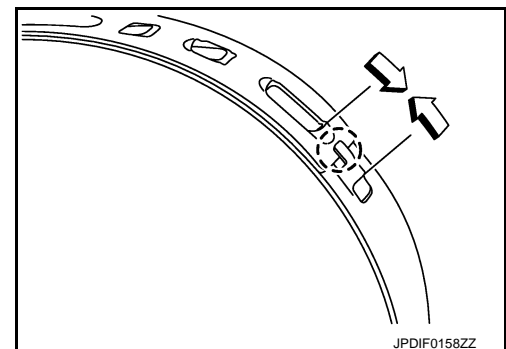

FRONT DRIVE SHAFT

< REMOVAL AND INSTALLATION >


[AWD]

- b. Secure dynamic damper with bands in the following specified position (A) when installing.

CAUTION:

Never reuse bands.

A : Refer to [FAX-55, "Drive Shaft"](#).

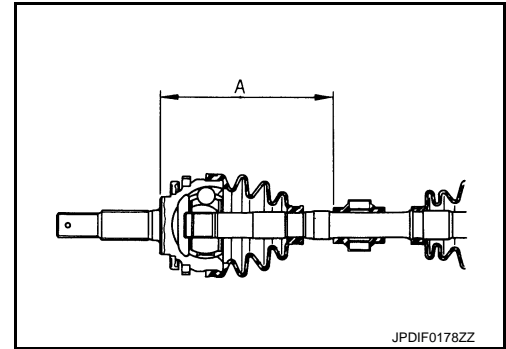


INFOID:000000009717930

Inspection

INSPECTION AFTER REMOVAL

- Move joint up/down, left/right, and in the axial directions. Check for motion that is not smooth and for significant looseness.
- Check boot for cracks, damage, and leakage of grease.
- Disassemble drive shaft and exchange malfunctioning part if there is a non-standard condition.

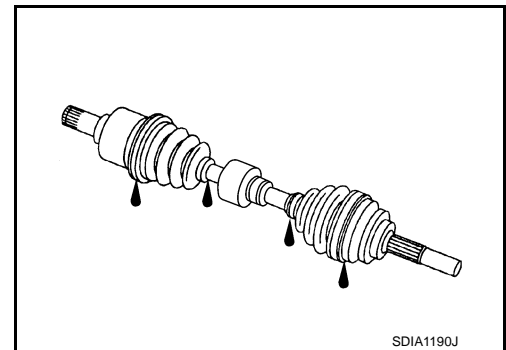

INSPECTION AFTER DISASSEMBLY

Shaft

Check shaft for runout, cracks, or other damage. Replace if necessary.

Dynamic Damper

Check damper for cracks or wear. Replace if necessary.

Joint Sub-Assembly (Wheel Side)

Check the following:

- Joint sub-assembly for rough rotation and excessive axial looseness.
- The inside of the joint sub-assembly for entry of foreign material.
- Joint sub-assembly for compression scars, cracks, and fractures inside of joint sub-assembly.

Replace joint sub-assembly if there are any non-standard conditions of components.

Housing Assembly (Transaxle Side)

Replace housing assembly if there is scratching or wear of housing assembly roller contact surface.

Link Shaft (Right side)

Check shaft for runout, cracks, or other damage. Replace if necessary.

Support Bearing (Right Side)

Make sure wheel bearing rolls freely and is free from noise, cracks, pitting or wear. Replace support bearing if there are any non-standard conditions.

Support Bearing Bracket (Right Side)

Check for bending, cracks, or damage. Replace support bearing bracket if there are any non-standard conditions.

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[AWD]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Wheel Bearing

INFOID:0000000009717931

Item	Standard
Axial end play	0.05 mm (0.002 in) or less

Drive Shaft

INFOID:0000000009717932

FAX

Item		Standard	
		Left side	Right side
Grease quantity	Wheel side	170 – 190 g (6.00 – 6.70 oz)	
	Transaxle side	155 – 175 g (5.47 – 6.17 oz)	
Boots installed length	Wheel side	158.6 mm (6.24 in)	
	Transaxle side	163.67 mm (6.44 in)	159.47 mm (6.28 in)
Dimension of dynamic damper		—	202 – 208 mm (7.95 – 8.19 in)