

A
B
C

SECTION **WW**

WIPER & WASHER

CONTENTS

PRECAUTION	DTC/CIRCUIT DIAGNOSIS	F
PRECAUTION	WIPER AND WASHER FUSE	G
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	Description	
	Diagnosis Procedure	
SYSTEM DESCRIPTION	FRONT WIPER MOTOR LO CIRCUIT	H
COMPONENT PARTS	Component Function Check	
Component Parts Location	Diagnosis Procedure	
Component Description	FRONT WIPER MOTOR HI CIRCUIT	I
SYSTEM	Component Function Check	
System Diagram	Diagnosis Procedure	
System Description	FRONT WIPER AUTO STOP SIGNAL CIRCUIT	J
Fail-Safe	Component Function Check	
DIAGNOSIS SYSTEM (BCM)	Diagnosis Procedure	K
COMMON ITEM	FRONT WIPER MOTOR GROUND CIRCUIT ...	
COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	Diagnosis Procedure	WW
WIPER	WASHER MOTOR CIRCUIT	
WIPER : CONSULT Function (BCM - WIPER)	Diagnosis Procedure	
DIAGNOSIS SYSTEM (IPDM E/R)	WASHER SWITCH	M
CONSULT Function (IPDM E/R)	Description	
ECU DIAGNOSIS INFORMATION	Component Inspection	N
BCM, IPDM E/R	SYMPTOM DIAGNOSIS	
List of ECU Reference	WIPER AND WASHER SYSTEM SYMPTOMS ...	O
WIRING DIAGRAM	Symptom Table	
FRONT WIPER AND WASHER SYSTEM	FRONT WIPER DOES NOT OPERATE	P
Wiring Diagram	Description	
BASIC INSPECTION	Diagnosis Procedure	
DIAGNOSIS AND REPAIR WORKFLOW	NORMAL OPERATING CONDITION	
Work Flow	Description	
	REMOVAL AND INSTALLATION	

FRONT WIPER ARM	35	FRONT WASHER NOZZLE	44
Exploded View	35	Removal and Installation	44
Removal and Installation	35	Adjustment	44
Adjustment	36	WASHER TANK	45
FRONT WIPER BLADE	37	Washer Tank	45
Exploded View	37	FRONT WIPER AND WASHER SWITCH	46
Removal and Installation	37	Wiper and Washer Switch	46
Replacement	37	SERVICE DATA AND SPECIFICATIONS	
FRONT WIPER DRIVE ASSEMBLY	41	(SDS)	47
Exploded View	41	SERVICE DATA AND SPECIFICATIONS	
Removal and Installation	41	(SDS)	47
FRONT WASHER TUBE	43	Specifications	47
Exploded View	43		
Removal and Installation	43		

PRECAUTION

< PRECAUTION >

PRECAUTION

PRECAUTION

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006918461

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

COMPONENT PARTS


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:000000006904842

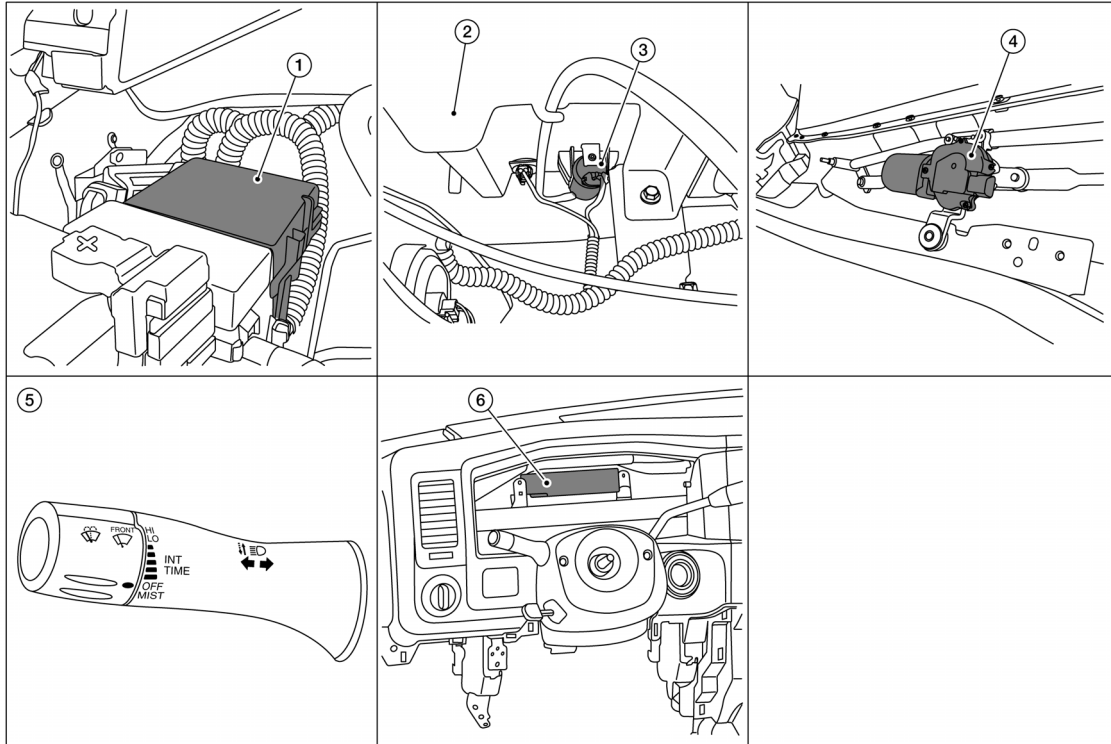

AWLIA18292Z

- | | | |
|--|---|--|
| 1. IPDM E/R | 2. Washer fluid reservoir | 3. Front washer motor |
| 4. Front wiper motor
(view with cowl top removed) | 5. Combination switch (wiper and washer switch) | 6. BCM
(view with combination meter and steering wheel removed) |

Component Description

INFOID:000000006904843


Component	Function
BCM	<ul style="list-style-type: none"> Monitors combination switch status by performing the combination switch reading function. Sends front wiper relay and front wiper high relay ON signals to IPDM E/R.
IPDM E/R	<ul style="list-style-type: none"> Controls front wiper relay and front wiper high relay. Performs the auto stop control of the front wiper.
Combination switch (Wiper and washer switch)	<ul style="list-style-type: none"> Provides input for wiper and washer control to BCM. Refer to WW-5, "System Description" for more information.
Front wiper motor	<ul style="list-style-type: none"> Drives windshield wipers in HI or LO mode. Sends wiper stop signal to IPDM E/R.
Front washer motor	Pumps windshield washer fluid to windshield in wash mode.

SYSTEM

< SYSTEM DESCRIPTION >

SYSTEM

System Diagram

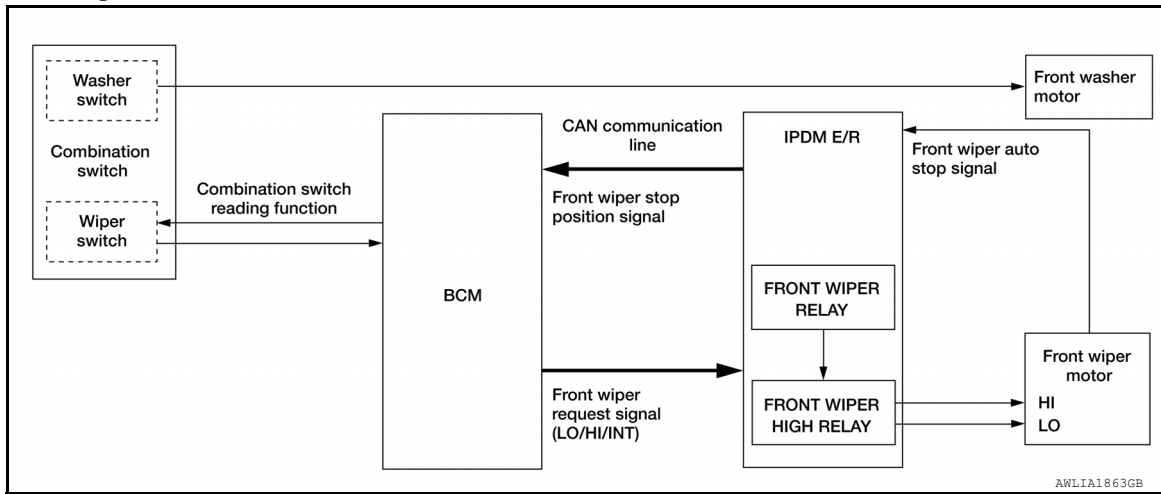

System Description

INFOID:000000006904841

FRONT WIPER CONTROL (BASIC)

1. BCM detects the combination switch position by the combination switch reading function.
2. BCM transmits the front wiper request signal to the IPDM E/R using CAN communication.
3. IPDM E/R controls the integrated front wiper relay and front wiper high relay based on the status of the front wiper request signal.
4. IPDM E/R provides power to operate the front wiper motor.

LOW SPEED OPERATION

1. Ignition switch ON.
2. Front wiper switch in LO or MIST position.
3. BCM reads the combination switch position and transmits the front wiper request signal (LO) to IPDM E/R using CAN communication.
4. IPDM E/R turns ON the front wiper relay.

HIGH SPEED OPERATION

1. Ignition switch ON.
2. Front wiper switch in HI.
3. BCM reads the combination switch position and transmits the front wiper request signal (HI) to IPDM E/R using CAN communication.
4. IPDM E/R turns ON the front wiper relay and the front wiper high relay.

INTERMITTENT OPERATION


1. Ignition switch ON.
2. Front wiper switch INT.
3. BCM reads the combination switch position. BCM calculates the delay interval based on the table below and then transmits the front wiper request signal (INT) to IPDM E/R using CAN communication.
4. IPDM E/R turns ON the front wiper relay only once.
5. BCM detects stop position of the front wiper motor based on the front wiper stop position signal received from the IPDM E/R.
6. BCM transmits the front wiper request signal (INT) again after the delay interval.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

SYSTEM


< SYSTEM DESCRIPTION >

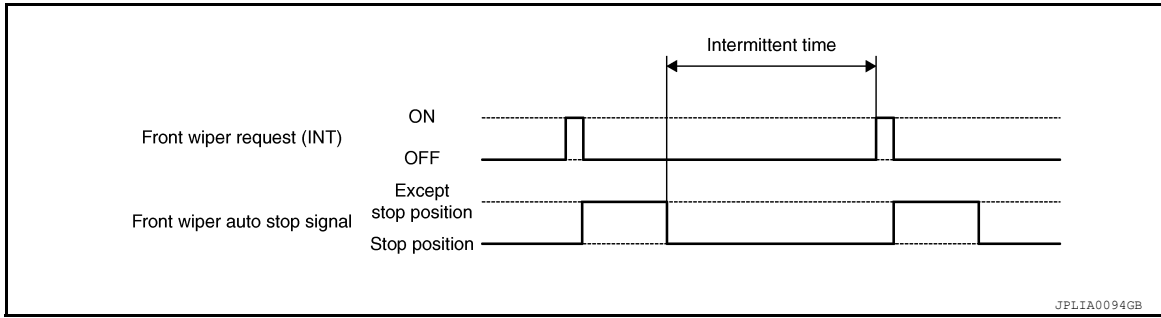

Intermittent switch position	Length of delay	Delay interval (s)
5	Short ↑	1
4		3
3		5
2	Long ↓	10
1		16

AUTO STOP OPERATION

1. Front wiper switch is turned OFF.
2. BCM monitors wiper switch position by combination switch reading position function.
3. BCM stops transmitting the front wiper request signal to the IPDM E/R.
4. IPDM E/R detects the front wiper auto stop signal from the position of the front wiper motor (stop position/ except stop position).
5. When the front wiper request signal is stopped, IPDM E/R turns ON the front wiper relay until the front wiper motor returns to the stop position.
6. IPDM E/R turns the front wiper relay OFF when the front wiper motor has reached the stop position.

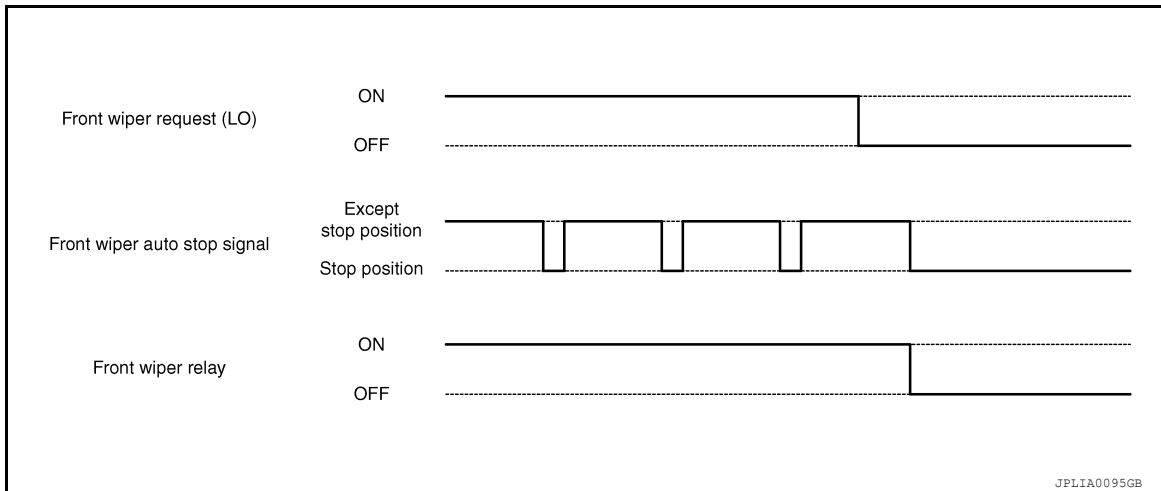

MIST OPERATION

1. Ignition switch ON.
2. Front washer switch in OFF position.
3. Front wiper switch in MIST position.
4. BCM reads the combination switch position and transmits the front wiper request signal (LO) to IPDM E/R using CAN communication.
5. IPDM E/R turns ON the front wiper relay.
6. The front wiper operates once after the front washer operation.

WIPER/WASHER OPERATION

1. Ignition switch ON.
2. Front washer switch ON.
3. The front washer switch provides power to the front washer motor.

SYSTEM

< SYSTEM DESCRIPTION >

4. BCM reads the combination switch position and transmits the front wiper request signal (LO) to IPDM E/R using CAN communication. A
5. BCM transmits the front wiper request signal (LO) to IPDM E/R using CAN communication.
6. IPDM E/R turns ON the front wiper relay.
7. The front wiper operates. B

NOTE:

BCM transmits the front wiper request signal (LO) so that the front wiper operates approximately 3 times after front washer switch OFF is detected. C

Fail-Safe

INFOID:000000006953163

FAIL-SAFE OPERATION

IPDM E/R performs the fail-safe function when the front wiper auto stop circuit is malfunctioning. Refer to [PCS-16, "Fail Safe"](#). D

E

F

G

H

I

J

K

WW

M

N

O

P

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000006904844

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
Ecu Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> • The vehicle specification can be read and saved. • The vehicle specification can be written when replacing BCM.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK			x	x	x		
Rear window defogger	REAR DEFOGGER			x	x			
Warning chime	BUZZER			x	x			
Interior room lamp timer	INT LAMP			x	x	x		
Remote keyless entry system	MULTI REMOTE ENT			x	x	x		
Exterior lamp	HEAD LAMP			x	x	x		
Wiper and washer	WIPER			x	x			
Turn signal and hazard warning lamps	FLASHER			x	x			
Air conditioner	AIR CONDITIONER			x				
Combination switch	COMB SW			x				
BCM	BCM	x	x			x	x	x
Immobilizer	IMMU		x		x			
Interior room lamp battery saver	BATTERY SAVER			x	x	x		
Vehicle security system	THEFT ALM			x	x	x		
RAP system	RETAINED PWR			x		x		
Signal buffer system	SIGNAL BUFFER			x	x			
Panic alarm system	PANIC ALARM				x			

WIPER

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

WIPER : CONSULT Function (BCM - WIPER)

INFOID:000000006904845

DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
IGN SW CAN [On/Off]	Indicates ignition switch ON signal received from IPDM E/R on CAN communication line.
FR WIPER HI [On/Off]	Indicates condition of front wiper operation of combination switch.
FR WIPER LOW [On/Off]	
FR WIPER INT [On/Off]	
FR WASHER SW [On/Off]	
INT VOLUME [1 - 5]	
FR WIPER STOP [On/Off]	Indicates front wiper motor auto stop signal received from IPDM E/R on CAN communication line.

ACTIVE TEST

Test Item	Description
FR WIPER	This test is able to check front wiper operation [Off/INT/Lo/Hi].

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (IPDM E/R)

CONSULT Function (IPDM E/R)

INFOID:000000007278293

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Direct Diagnostic Mode	Description
Self Diagnostic Result	The IPDM E/R self diagnostic results are displayed.
Data Monitor	The IPDM E/R input/output data is displayed in real time.
Active Test	The IPDM E/R activates outputs to test components.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

SELF DIAGNOSTIC RESULT

Refer to [PCS-17, "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Main Signals	Description
MOTOR FAN REQ [1/2/3/4]	×	Indicates cooling fan speed signal received from ECM on CAN communication line
AC COMP REQ [On/Off]	×	Indicates A/C compressor request signal received from ECM on CAN communication line
TAIL&CLR REQ [On/Off]	×	Indicates position light request signal received from BCM on CAN communication line
HL LO REQ [On/Off]	×	Indicates low beam request signal received from BCM on CAN communication line
HL HI REQ [On/Off]	×	Indicates high beam request signal received from BCM on CAN communication line
FR FOG REQ [On/Off]	×	Indicates fog lamp request signal received from BCM on CAN communication line
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Indicates front wiper request signal received from BCM on CAN communication line
WIP AUTO STOP [STOP P/ACT P]	×	Indicates condition of front wiper auto stop signal
WIP PROT [Off/BLOCK]	×	Indicates condition of front wiper fail-safe operation
ST RLY REQ [On/Off]		Indicates starter request signal received from ECM on CAN communication line
IGN RLY [On/Off]	×	Indicates condition of ignition relay
RR DEF REQ [On/Off]	×	Indicates rear defogger request signal received from AV control unit on CAN communication line
OIL P SW [Open/Close]		Indicates condition of oil pressure switch
DTRL REQ [On/Off]		Indicates daytime light request signal received from BCM on CAN communication line
THFT HRN REQ [On/Off]		Indicates theft warning horn request signal received from BCM on CAN communication line
HORN CHIRP [On/Off]		Indicates horn reminder signal received from BCM on CAN communication line

ACTIVE TEST

Test item	Description
REAR DEFOGGER	This test is able to check rear defogger operation [On/Off].
FRONT WIPER	This test is able to check wiper motor operation [Hi/Lo/Off].
MOTOR FAN	This test is able to check cooling fan operation [4/3/2/1].

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

Test item	Description
EXTERNAL LAMPS	This test is able to check external lamp operation [Hi/Lo/TAIL/Fog/Off].
HORN	This test is able to check horn operation [On].

CAN DIAG SUPPORT MNTR

Refer to [LAN-12. "CAN Diagnostic Support Monitor"](#).

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

BCM, IPDM E/R

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

BCM, IPDM E/R

List of ECU Reference

INFOID:000000006918462

ECU	Reference
BCM	BCS-25, "Reference Value"
	BCS-37, "Wiring Diagram"
	BCS-35, "Fail-safe"
	BCS-35, "DTC Inspection Priority Chart"
	BCS-35, "DTC Index"
IPDM E/R	PCS-12, "Reference Value"
	PCS-18, "Wiring Diagram"
	PCS-13, "Terminal Layout"
	PCS-13, "Physical Values"
	PCS-16, "Fail Safe"
	PCS-17, "DTC Index"

FRONT WIPER AND WASHER SYSTEM


< WIRING DIAGRAM >

WIRING DIAGRAM

FRONT WIPER AND WASHER SYSTEM

Wiring Diagram

INFOID:000000006904869

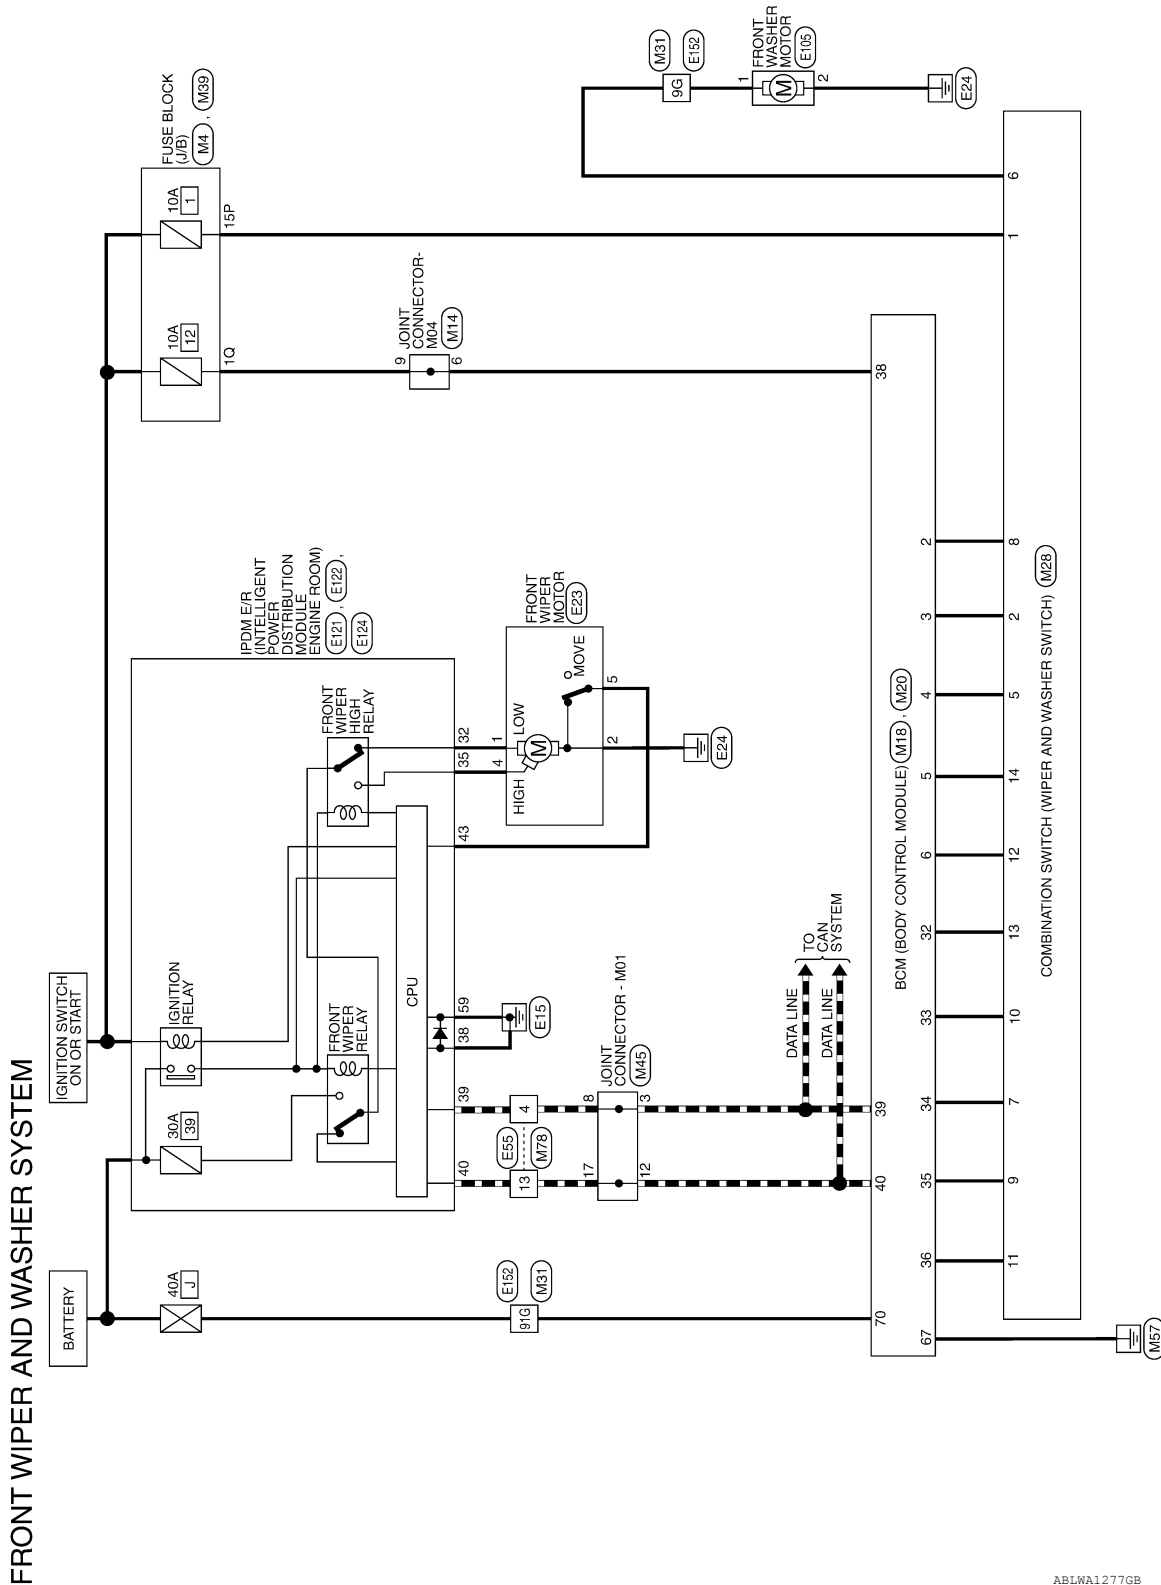

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW

FRONT WIPER AND WASHER SYSTEM

< WIRING DIAGRAM >

FRONT WIPER AND WASHER SYSTEM CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



7P	6P	5P	4P	3P	2P	1P		
16P	15P	14P	13P	12P	11P	10P	9P	8P



9	8	7	6	5	4	3	2	1		
20	19	18	17	16	15	14	13	12	11	10

Connector No.	M14
Connector Name	JOINT CONNECTOR - M04
Connector Color	BLUE

Terminal No.	Color of Wire	Signal Name
15P	R	-

Terminal No.	Color of Wire	Signal Name
6	R	-
9	R	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40

Terminal No.	Color of Wire	Signal Name
2	L	INPUT 5
3	P	INPUT 4
4	LG	INPUT 3
5	O	INPUT 2
6	R	INPUT 1
32	SB	OUTPUT 5
33	G	OUTPUT 4
34	Y	OUTPUT 3
35	BR	OUTPUT 2
36	Y	OUTPUT 1
38	R	IGN SW
39	L	CAN-H
40	P	CAN-L

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



56	57	58	59	60	61	62	63	64
65	66	67	68	69	70			


Terminal No.	Color of Wire	Signal Name
67	B	GND
70	R	BATTERY (F/L)

FRONT WIPER AND WASHER SYSTEM


< WIRING DIAGRAM >

Terminal No.	Color of Wire	Signal Name
9G	V	-
91G	R	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

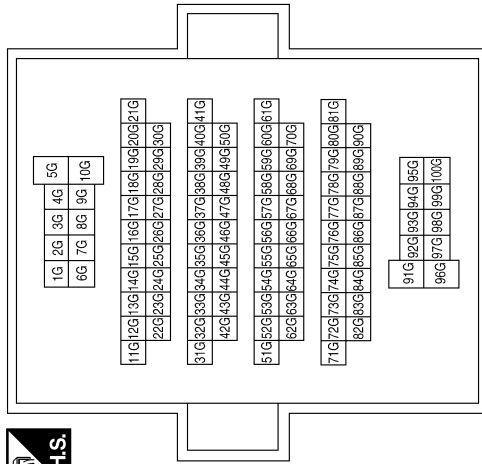

Connector No.	M28
Connector Name	COMBINATION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	R	-
2	P	OUTPUT 4
5	LG	OUTPUT 3
6	V	-
7	Y	INPUT 3
8	L	OUTPUT 5
9	BR	INPUT 2
10	G	INPUT 4
11	Y	INPUT 1
12	R	OUTPUT 1
13	SB	INPUT 5
14	O	OUTPUT 2

Connector No.	M78
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Connector No.	M45
Connector Name	JOINT CONNECTOR - M01
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
4	L	-
13	P	-

Connector No.	M39
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1Q	R	-

ABLIA2961GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW

FRONT WIPER AND WASHER SYSTEM


< WIRING DIAGRAM >

Connector No.	E105
Connector Name	FRONT WASHER MOTOR
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	V	-
2	B	-

Connector No.	E55
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	L	-
13	P	-

Connector No.	E23
Connector Name	FRONT WIPER MOTOR
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	L	-
2	B	-
4	SB	-
5	Y	-

Connector No.	E124
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
59	B	GND (POWER)

Connector No.	E122
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
38	B	GND (SIGNAL)
39	L	CAN-H
40	P	CAN-L
43	Y	AUTO STOP SW

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
32	L	FR WIPER LO
35	SB	FR WIPER HI

ABLIA2962GB


FRONT WIPER AND WASHER SYSTEM

< WIRING DIAGRAM >

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

Terminal No.	Color of Wire	Signal Name
9G	V	-
91G	R	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

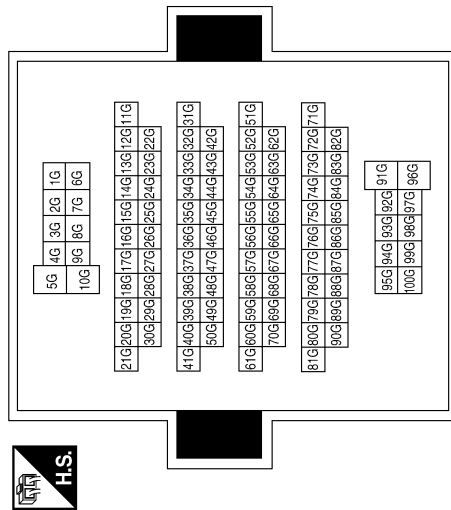

WW

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000006951620

WORK FLOW

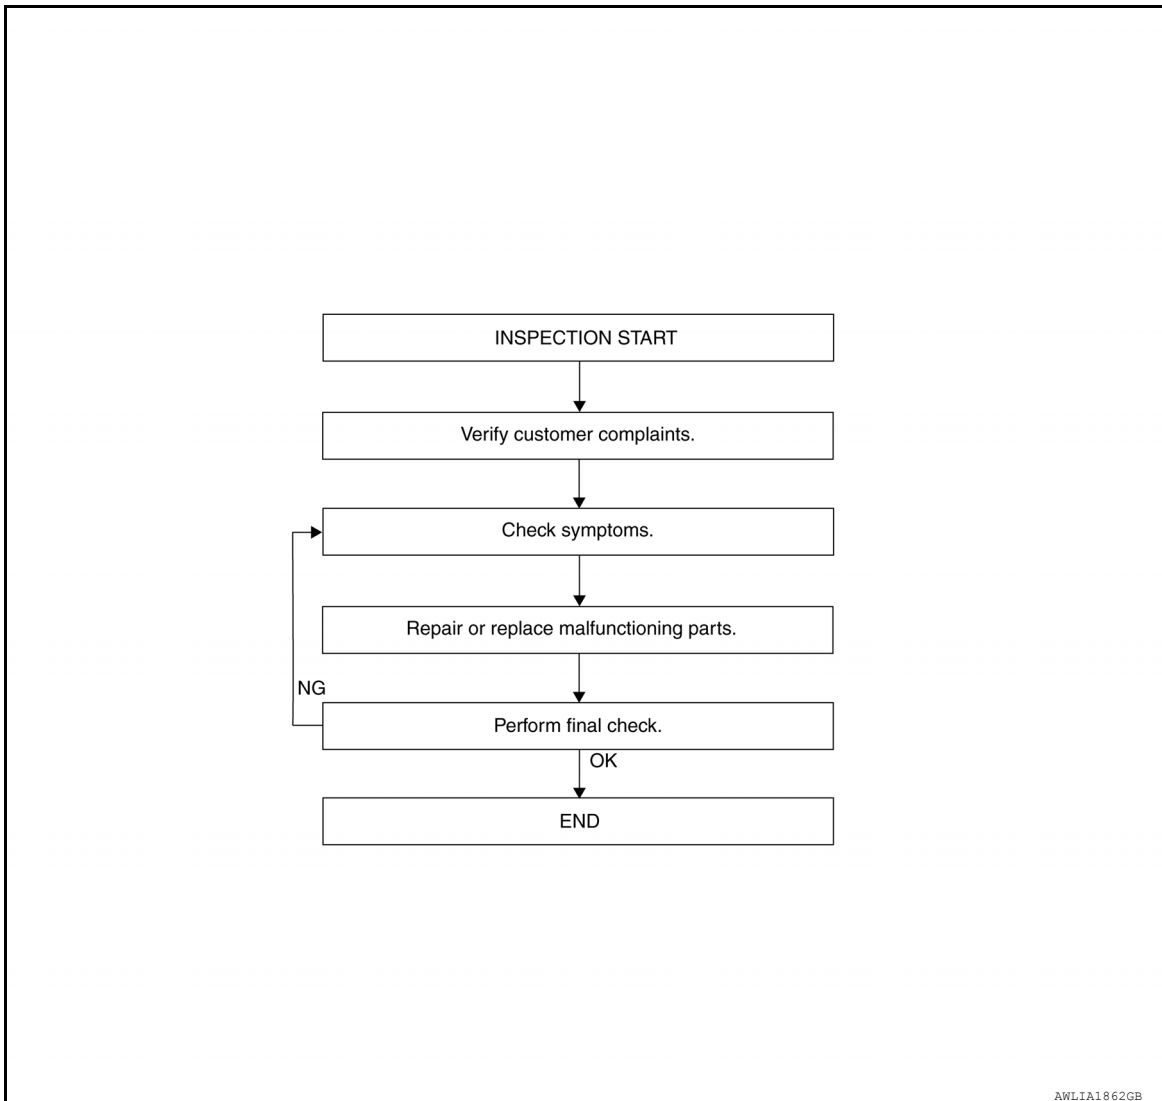

DETAILED FLOW

1. REVIEW CUSTOMER COMPLAINT

Review customer complaint. Try to obtain detailed information about the conditions when the symptom occurs.

>> GO TO 2

2. VERIFY THE SYMPTOM

Verify the symptom by performing an operational check. Refer to [WW-34. "Description"](#).

>> GO TO 3

3. PERFORM TROUBLE DIAGNOSIS BY SYMPTOM

Diagnose the vehicle by performing the appropriate trouble diagnosis. Refer to [WW-30. "Symptom Table"](#).

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

>> GO TO 4

4. REPAIR OR REPLACE MALFUNCTIONING PARTS

Repair or replace the specific parts.

>> GO TO 5

5. FINAL CHECK

Perform a final inspection of the system.

Is the inspection result normal?

YES >> Inspection End.

NO >> GO TO 2.

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

WIPER AND WASHER FUSE

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

WIPER AND WASHER FUSE

Description

INFOID:000000006904847

Component	Capacity	Fuse No.	Location
Front wiper motor	30 A	39	IPDM E/R
Front washer motor	10 A	1	Fuse block (J/B)

Diagnosis Procedure

INFOID:000000006904848

1. CHECK FUSES

Check that the following fuses are not blown.

Component	Capacity	Fuse No.	Location
Front wiper motor	30 A	39	IPDM E/R
Front washer motor	10 A	1	Fuse block (J/B)

Is the fuse or fusible link blown?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit.
- NO >> Inspection End.

FRONT WIPER MOTOR LO CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FRONT WIPER MOTOR LO CIRCUIT

Component Function Check

INFOID:000000006904849

1. CHECK FRONT WIPER LO OPERATION

IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-8, "Diagnosis Description"](#).
2. Check that the front wiper operates on LO operation.

CONSULT ACTIVE TEST

1. Select FR WIPER of BCM (WIPER) active test item.
2. Check front wiper operation.

LO : Front wiper (LO) operation

OFF : Front wiper OFF

Is the inspection result normal?

- YES >> Front wiper motor LO circuit is normal.
NO >> Refer to [WW-21, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000006904850

Regarding Wiring Diagram information, refer to [WW-13, "Wiring Diagram"](#).

1. CHECK FRONT WIPER MOTOR FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuse is not blown.

Component	Capacity	Fuse No.	Location
Front wiper motor	30 A	39	IPDM E/R

Is the fuse or fusible link blown?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit.
NO >> GO TO 2

2. CHECK FRONT WIPER MOTOR (LO) OUTPUT VOLTAGE

1. Turn the ignition switch ON.
2. Select FR WIPER of BCM (WIPER) active test item.
3. While performing the active test, check voltage between IPDM E/R harness connector and ground.

Terminals		FRONT WIPER	Voltage (Approx.)
(+)	(-)		
IPDM E/R		Ground	Battery voltage
Connector	Terminal		
E121	32		
		LO	Battery voltage
		OFF	0V

Is the inspection result normal?

- YES >> GO TO 3
NO >> Replace IPDM E/R. Refer to [PCS-24, "Removal and Installation"](#).

3. CHECK FRONT WIPER MOTOR (LO) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R and front wiper motor.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

FRONT WIPER MOTOR LO CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E121	32	E23	1	Yes

Is the inspection result normal?

- YES >> Replace front wiper motor. Refer to [WW-41, "Removal and Installation"](#).
NO >> Repair or replace harness.

FRONT WIPER MOTOR HI CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FRONT WIPER MOTOR HI CIRCUIT

Component Function Check

INFOID:000000006904851

1. CHECK FRONT WIPER HI OPERATION

IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-8, "Diagnosis Description"](#).
2. Check that the front wiper operates on HI operation.

CONSULT ACTIVE TEST

1. Select FR WIPER of BCM (WIPER) active test item.
2. Check front wiper operation.

HI : Front wiper (HI) operation

OFF : Front wiper OFF

Is the inspection result normal?

- YES >> Front wiper motor HI circuit is normal.
NO >> Refer to [WW-21, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000006904852

Regarding Wiring Diagram information, refer to [WW-13, "Wiring Diagram"](#).

1. CHECK FRONT WIPER MOTOR FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuse is not blown.

Component	Capacity	Fuse No.	Location
Front wiper motor	30 A	39	IPDM E/R

Is the inspection result normal?

- YES >> Replace the fuse after repairing the affected circuit.
NO >> GO TO 2

2. CHECK FRONT WIPER MOTOR (HI) OUTPUT VOLTAGE

1. Turn the ignition switch ON.
2. Select FR WIPER of BCM (WIPER) active test item.
3. While performing the active test, check voltage between IPDM E/R harness connector and ground.

Terminals		FRONT WIPER	Voltage (Approx.)
(+)	(-)		
IPDM E/R		Ground	Battery voltage
Connector	Terminal		
E121	35		
		HI	Battery voltage
		OFF	0V

Is the inspection result normal?

- YES >> GO TO 3
NO >> Replace IPDM E/R. Refer to [PCS-24, "Removal and Installation"](#).

3. CHECK FRONT WIPER MOTOR (HI) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R and front wiper motor.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

FRONT WIPER MOTOR HI CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E121	35	E23	4	Yes

Is the inspection result normal?

- YES >> Replace front wiper motor. Refer to [WW-41, "Removal and Installation"](#).
NO >> Repair or replace harness.

FRONT WIPER AUTO STOP SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FRONT WIPER AUTO STOP SIGNAL CIRCUIT

Component Function Check

INFOID:000000006904853

1. CHECK FRONT WIPER (AUTO STOP) SIGNAL

1. Select FR WIPER STOP of BCM (WIPER) data monitor item.
2. Operate the front wiper.
3. Check that FR WIPER STOP changes from ON to OFF according to the wiper position.

Data monitor	Condition		Status
FR WIPER STOP	Front wiper motor	Stop position	ON
		Except stop position	OFF

Is the inspection result normal?

- YES >> Front wiper auto stop signal circuit is normal.
NO >> Refer to [WW-25, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000006904854

Regarding Wiring Diagram information, refer to [WW-13, "Wiring Diagram"](#).

1. CHECK FRONT WIPER MOTOR (AUTO STOP) OUTPUT VOLTAGE

1. Turn the ignition switch ON.
2. Check voltage between IPDM E/R harness connector and ground.

Terminals		FRONT WIPER	Voltage (Approx.)
(+)	(-)		
IPDM E/R		Ground	Battery voltage
Connector	Terminal		
E122	43		
		Except stop position	Battery voltage
		Stop position	0 V

Is the inspection result normal?

- YES >> Check for intermittent failure.
NO >> GO TO 2

2. CHECK FRONT WIPER MOTOR (AUTO STOP) SHORT CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R and front wiper motor.
3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E122	43		No

Is the inspection result normal?

- YES >> Repair or replace harness.
NO >> GO TO 3.

3. CHECK FRONT WIPER MOTOR (AUTO STOP) CIRCUIT CONTINUITY

Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

FRONT WIPER AUTO STOP SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E122	43	E23	5	Yes

Is the inspection result normal?

- YES >> Replace front wiper motor. Refer to [WW-41, "Removal and Installation"](#).
NO >> Repair or replace harness.

FRONT WIPER MOTOR GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

FRONT WIPER MOTOR GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000006904855

Regarding Wiring Diagram information, refer to [WW-13. "Wiring Diagram"](#).

1. CHECK FRONT WIPER MOTOR GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor.
3. Check continuity between front wiper motor harness connector and ground.

Front wiper motor		Ground	Continuity
Connector	Terminal		Yes
E23	2		

Is the inspection result normal?

- YES >> Front wiper motor ground circuit is normal.
NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

WASHER MOTOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

WASHER MOTOR CIRCUIT

Diagnosis Procedure

INFOID:000000006904858

Regarding Wiring Diagram information, refer to [WW-13. "Wiring Diagram"](#).

1. CHECK FRONT WASHER MOTOR FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuse is not blown.

Component	Capacity	Fuse No.	Location
Front washer motor	10A	1	Fuse block (J/B)

Is the inspection result normal?

- YES >> Replace the fuse after repairing the affected circuit.
NO >> GO TO 2.

2. CHECK FRONT WASHER MOTOR POWER SUPPLY

1. Disconnect front washer motor.
2. Turn ignition switch ON.
3. Check voltage between front washer motor harness connector and ground.

Terminals		Washer switch	Voltage (Approx.)
(+)	(-)		
Front washer motor		Ground	Battery voltage
Connector	Terminal		
E105	1		
		ON	Battery voltage
		OFF	0 V

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 4.

3. CHECK FRONT WASHER MOTOR GROUND CIRCUIT

Check continuity between front washer motor harness connector and ground.

Front washer motor		Ground	Continuity
Connector	Terminal		
E105	2		Yes

Is the inspection result normal?

- YES >> Replace front washer motor. Refer to [WW-45. "Washer Tank"](#).
NO >> Repair or replace harness.

4. CHECK WASHER SWITCH

Check washer switch. Refer to [WW-29. "Component Inspection"](#).

Is the inspection result normal?

- YES >> Repair harness between fuse and front washer motor.
NO >> Replace washer switch. Refer to [WW-46. "Wiper and Washer Switch"](#).

WASHER SWITCH

< DTC/CIRCUIT DIAGNOSIS >

WASHER SWITCH

Description

INFOID:000000006904856

- Washer switch is integrated with combination switch.
- Washer switch supplies power to the front washer motor.

Component Inspection

INFOID:000000006904857

1. CHECK WASHER SWITCH

1. Turn the ignition switch OFF.
2. Disconnect combination switch (wiper and washer switch).
3. Check continuity between the combination switch (wiper and washer switch) terminals.

Combination switch (washer switch)		Condition	Continuity
Terminals			
1	6	Washer switch ON	Yes
		Washer switch OFF	No
11	14	Washer switch ON	Yes
		Washer switch OFF	No

Is the inspection result normal?

YES >> Washer switch is normal.

NO >> Replace combination switch (wiper and washer switch). Refer to [WW-46. "Wiper and Washer Switch"](#).

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

WIPER AND WASHER SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

WIPER AND WASHER SYSTEM SYMPTOMS

Symptom Table

INFOID:000000006904870

CAUTION:

Perform the self-diagnosis with CONSULT before performing the diagnosis by symptom. Perform the diagnosis by DTC if DTC is detected.

Symptom		Possible malfunction	Reference
Front wiper does not operate in...	HI only	<ul style="list-style-type: none"> Combination switch (wiper and washer switch) Harness between combination switch (wiper and washer switch) and BCM BCM 	Combination switch (wiper and washer switch) Refer to BCS-54, "Symptom Table" .
		<ul style="list-style-type: none"> IPDM E/R Harness between IPDM E/R and front wiper motor Front wiper motor 	Front wiper motor (HI) circuit Refer to WW-23, "Component Function Check" .
		Front wiper request signal (IPDM E/R)	Check FR WIP REQ in DATA MONITOR of IPDM E/R. Refer to PCS-10, "CONSULT Function (IPDM E/R)" .
	LO and INT	<ul style="list-style-type: none"> Combination switch (wiper and washer switch) Harness between combination switch (wiper and washer switch) and BCM BCM 	Combination switch (wiper and washer switch) Refer to BCS-54, "Symptom Table" .
		<ul style="list-style-type: none"> IPDM E/R Harness between IPDM E/R and front wiper motor Front wiper motor 	Front wiper motor (LO) circuit Refer to WW-21, "Component Function Check" .
		Front wiper request signal (IPDM E/R)	Check FR WIP REQ in DATA MONITOR of IPDM E/R. Refer to PCS-10, "CONSULT Function (IPDM E/R)" .
	INT only	<ul style="list-style-type: none"> Combination switch (wiper and washer switch) Harness between combination switch (wiper and washer switch) and BCM BCM 	Combination switch (wiper and washer switch) Refer to BCS-54, "Symptom Table" .
		Front wiper request signal (IPDM E/R)	Check FR WIP REQ in DATA MONITOR of IPDM E/R. Refer to PCS-10, "CONSULT Function (IPDM E/R)" .
	Any mode	—	Refer to WW-32, "Diagnosis Procedure" .
	Front wiper does not stop in...	Any mode	Front wiper auto stop signal (IPDM E/R)
<ul style="list-style-type: none"> Combination switch (wiper and washer switch) BCM 			Combination switch (wiper and washer switch) Refer to BCS-54, "Symptom Table" .

WIPER AND WASHER SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

Symptom		Possible malfunction	Reference
Front wiper operates abnormally because...	Intermittent adjustments cannot be made.	<ul style="list-style-type: none"> • Combination switch (wiper and washer switch) • Harness between combination switch (wiper and washer switch) and BCM • BCM 	Combination switch (wiper and washer switch) Refer to BCS-54, "Symptom Table" .
	Wiper/washer will not operate together.	<ul style="list-style-type: none"> • Combination switch (wiper and washer switch) • Harness between combination switch (wiper and washer switch) and BCM • BCM 	Combination switch (wiper and washer switch) Refer to BCS-54, "Symptom Table" .
	Wipers will not return to stop position (repeatedly operates for 10 seconds and then stops for 20 seconds. Wipers then stop operating).	<ul style="list-style-type: none"> • IPDM E/R • Harness between IPDM E/R and front wiper motor • Front wiper motor 	Front wiper auto stop signal circuit Refer to WW-25, "Component Function Check" .
Front washer motor does not operate...	When washer switch is pressed.	<ul style="list-style-type: none"> • Low washer fluid • Obstructed or disconnected washer hose or nozzle 	Refer to WW-43, "Exploded View" .
		<ul style="list-style-type: none"> • Front washer motor • Harness between combination switch (wiper and washer switch) and front washer motor 	Refer to WW-28, "Diagnosis Procedure" (washer motor). Refer to WW-29, "Component Inspection" (washer switch).
		Combination switch (wiper and washer switch)	Combination switch (wiper and washer switch) Refer to BCS-54, "Symptom Table" .

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

FRONT WIPER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

FRONT WIPER DOES NOT OPERATE

Description

INFOID:000000006904872

The front wiper does not operate under any operation conditions.

Diagnosis Procedure

INFOID:000000006904873

Regarding Wiring Diagram information, refer to [WW-13, "Wiring Diagram"](#).

1. CHECK WIPER RELAY OPERATION

⊗ IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-10, "CONSULT Function \(IPDM E/R\)"](#).
2. Check that the front wiper operates on LO and HI operation.

ⓐ CONSULT ACTIVE TEST

1. Select FR WIPER of BCM (WIPER) active test item.
2. Check front wiper operation.

LO : Front wiper LO operation
HI : Front wiper HI operation
OFF : Front wiper stop

Is the inspection result normal?

- YES >> GO TO 5
NO >> GO TO 2

2. CHECK FRONT WIPER MOTOR FUSE

Refer to [WW-20, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> Replace the fuse after repairing the affected circuit.
NO >> GO TO 3

3. CHECK FRONT WIPER MOTOR GROUND CIRCUIT

Refer to [WW-27, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 4
NO >> Repair or replace harness.

4. CHECK FRONT WIPER MOTOR OUTPUT VOLTAGE

1. Turn the ignition switch ON.
2. With CONSULT, select FRONT WIPER of IPDM E/R ACTIVE TEST item.
3. Check voltage between IPDM E/R harness connector and ground while wipers are operating.

Terminals		FRONT WIPER	Voltage (Approx.)		
(+)	(-)				
IPDM E/R		Ground			
Connector	Terminal				
E121	32			LO	Battery voltage
	35			OFF	0 V
		HI	Battery voltage		
		OFF	0 V		

Is the inspection result normal?

- YES >> Replace front wiper motor. Refer to [WW-41, "Removal and Installation"](#).

FRONT WIPER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

NO >> Replace IPDM E/R. Refer to [PCS-24, "Removal and Installation"](#).

5. CHECK FRONT WIPER REQUEST SIGNAL INPUT

1. With CONSULT, select FR WIP REQ in DATA MONITOR of IPDM E/R.
2. Switch the front wiper switch to HI and LO.
3. Check the status of FR WIP REQ while operating the switch.

Data monitor	Condition	Status
FR WIP REQ	Front wiper switch OFF	STOP
	Front wiper switch LO	LOW
	Front wiper switch HI	HI

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-24, "Removal and Installation"](#).

NO >> GO TO 6

6. CHECK COMBINATION SWITCH (WIPER AND WASHER SWITCH)

Check combination switch (wiper and washer switch). Refer to [BCS-54, "Symptom Table"](#).

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-55, "Removal and Installation"](#).

NO >> Repair or replace the applicable parts.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

NORMAL OPERATING CONDITION

Description

INFOID:000000006904871

FRONT WIPER MOTOR PROTECTION FUNCTION

- IPDM E/R may stop the front wiper to protect the front wiper motor if any obstruction (operation resistance) such as a large amount of snow is detected during the front wiper operation.
- At that time, turn OFF the front wiper and remove the foreign object. Wait for approximately 20 seconds or more and reactivate the front wiper. The wiper will operate normally.

FRONT WIPER ARM


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

FRONT WIPER ARM

Exploded View

INFOID:000000008440845

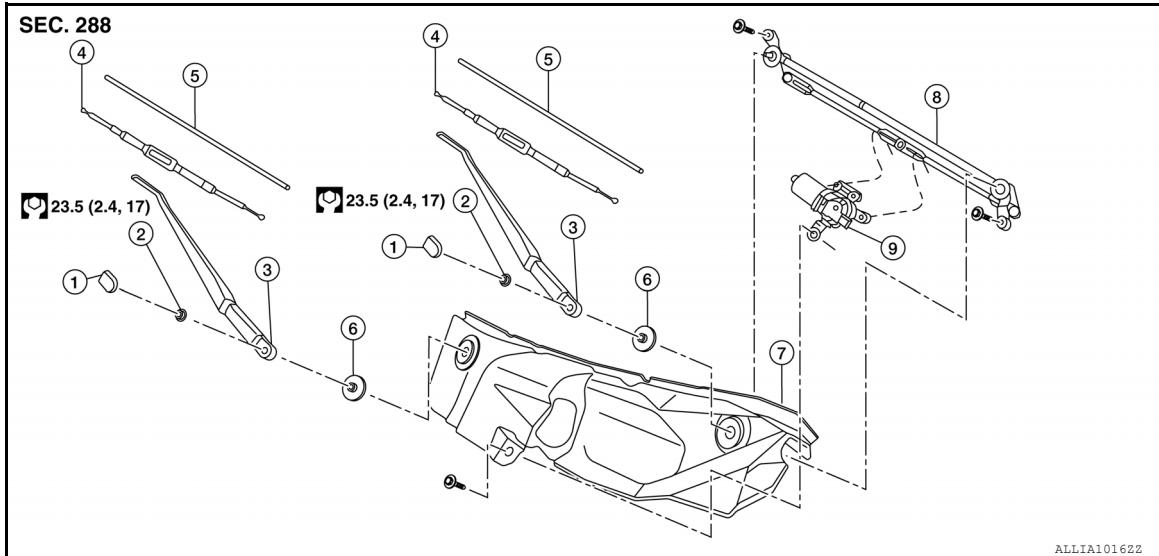

- | | | |
|----------------------------|---------------------------|--------------------------|
| 1. Wiper arm covers | 2. Wiper arm nuts | 3. Wiper arms |
| 4. Wiper frames | 5. Wiper blade refills | 6. Wiper arm shaft seals |
| 7. Wiper motor water cover | 8. Wiper linkage assembly | 9. Wiper Motor |

Removal and Installation


INFOID:000000006738263

REMOVAL

1. Remove wiper arm covers and wiper arm nuts.
2. Remove front wiper arm (LH/RH).
3. Remove front wiper blade assembly (LH/RH).

INSTALLATION

1. Operate wiper motor one full cycle, then turn "OFF" (Auto Stop).
2. Clean up the pivot area as shown. This will reduce possibility of wiper arm looseness.

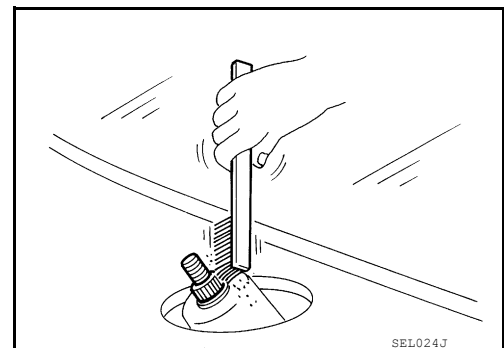

3. Install front RH blade assembly and front LH blade assembly.
4. Install front RH wiper arm and front LH wiper arm.
5. Tighten wiper arm nuts to specified torque, and install wiper arm covers.
6. Ensure that wiper blades stop within proper clearance. Refer to [WW-36, "Adjustment"](#).

FRONT WIPER ARM

< REMOVAL AND INSTALLATION >

Adjustment


INFOID:000000008440842

FRONT WIPER ARM ADJUSTMENT

1. Operate wiper motor one full cycle, then turn "OFF" (Auto Stop).
2. Lift the wiper blade up and then rest it onto glass surface, check the blade clearance "L1" and "L2".

Clearance "L1" : 39.4 ± 7.5 mm (1.55 ± 0.30 in)

Clearance "L2" : 43.0 ± 7.5 mm (1.69 ± 0.30 in)

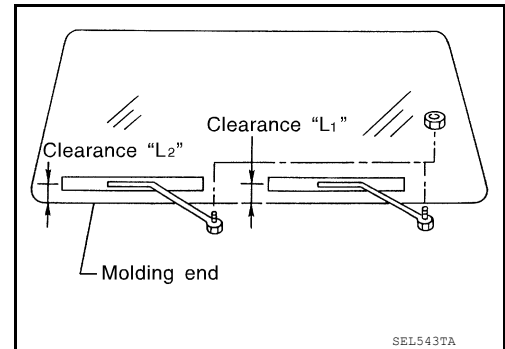

3. Remove wiper arm covers and wiper arm nuts.
4. Adjust front wiper arms on wiper motor pivot shafts to obtain above specified blade clearances.
5. Tighten wiper arm nuts to specified torque, and install wiper arm covers.


FRONT WIPER BLADE

< REMOVAL AND INSTALLATION >

FRONT WIPER BLADE

Exploded View

INFOID:000000008440846

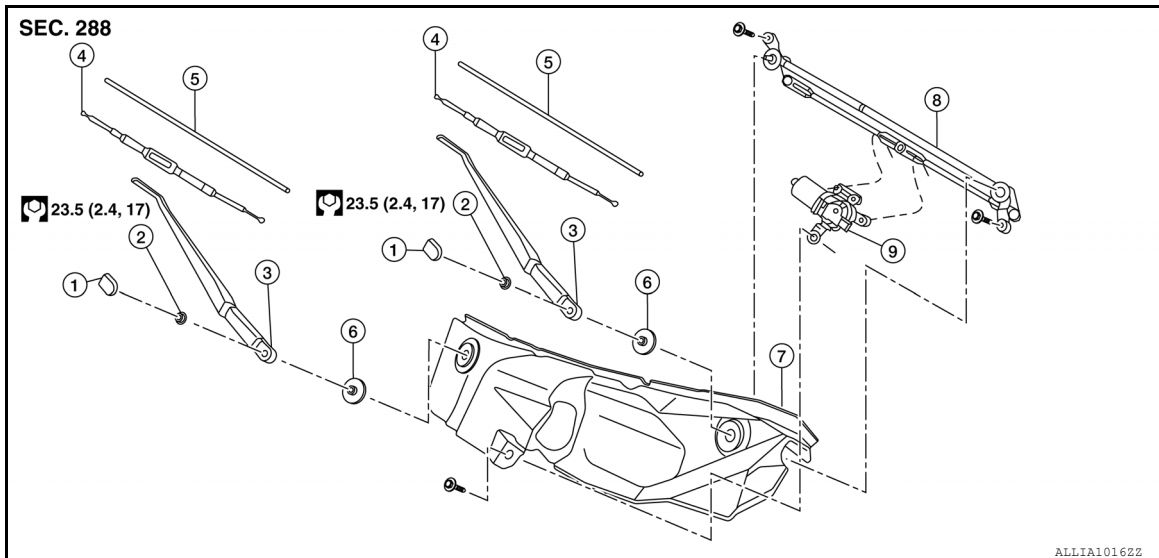


- | | | |
|----------------------------|---------------------------|--------------------------|
| 1. Wiper arm covers | 2. Wiper arm nuts | 3. Wiper arms |
| 4. Wiper frames | 5. Wiper blade refills | 6. Wiper arm shaft seals |
| 7. Wiper motor water cover | 8. Wiper linkage assembly | 9. Wiper Motor |

Removal and Installation

INFOID:000000008440844

REMOVAL

1. Lift the front wiper arm frame and blade assembly away from the windshield.
2. Rotate the front wiper frame assembly and push the release tab (A), then move the front wiper blade down (B) the front wiper arm.
3. Remove the front wiper blade.

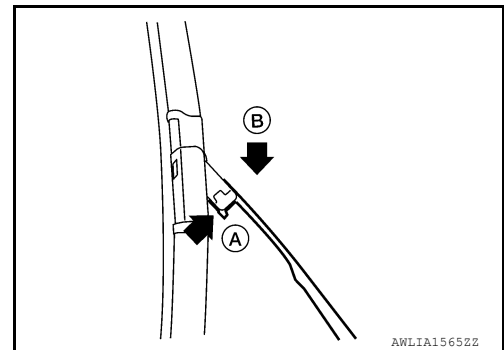

INSTALLATION

CAUTION:

- After the front wiper blade installation, return the front wiper arm to the original position on the windshield to prevent damage when the hood is opened.
- Check that the front wiper blade contacts the windshield properly. Refer to [WW-36, "Adjustment"](#).

1. Insert the front wiper blade onto the front wiper arm and slide it up until it clicks into place.
2. Rotate the front wiper blade so the dimple is in the groove.
3. Lay the front wiper arm and front wiper blade assembly back down on the windshield.

Replacement

INFOID:000000006958006


REMOVAL

1. Remove the front wiper blade. Refer to [WW-37, "Removal and Installation"](#).


FRONT WIPER BLADE

< REMOVAL AND INSTALLATION >

2. Hold the wiper blade refill lip at the end (A) of the front wiper blade (1) with a suitable tool (B) as shown, and pull it firmly in the direction (C).
D: U clip (part of the wiper blade assembly)

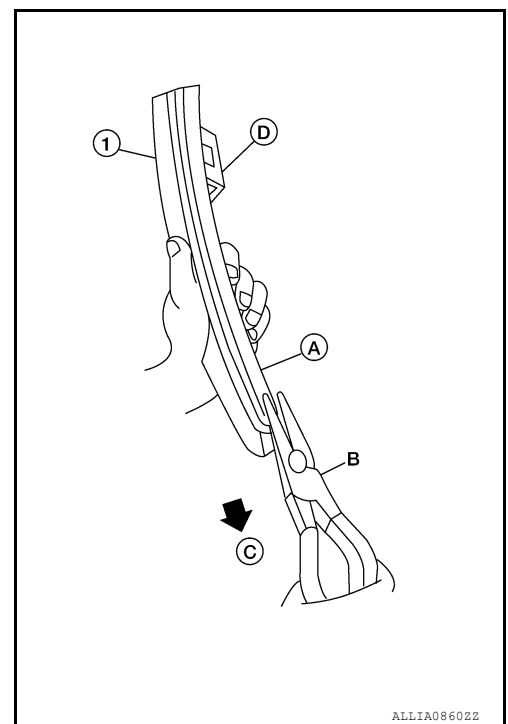


- If the wiper blade refill lip is torn due to wear, insert a suitable tool (A) into the space between the end of the wiper blade refill (1) and the front wiper blade (2) and pull the wiper blade refill (1) out as shown.

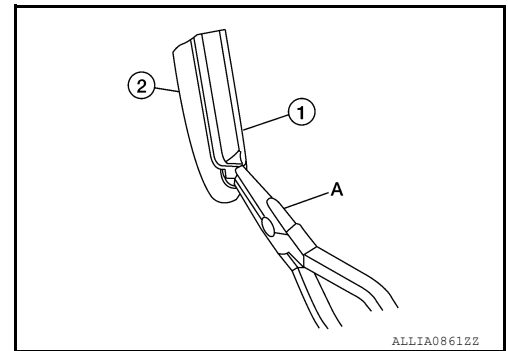

INSTALLATION


1. If the rib (A) has become detached from the wiper blade refill (1), check that the curve of the rib (A) is in the same direction as the curve of the wiper blade refill (1) and insert the rib (A) into the slit (B) in the wiper blade refill (1) as shown.

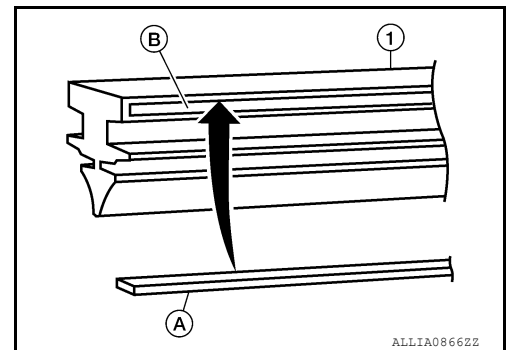


FRONT WIPER BLADE

< REMOVAL AND INSTALLATION >


- If the rib (A) has a notch (B), insert the rib (A) into the wiper blade refill (1) so the notch (B) fits over the protrusion (C) in the wiper blade refill (1) as shown.

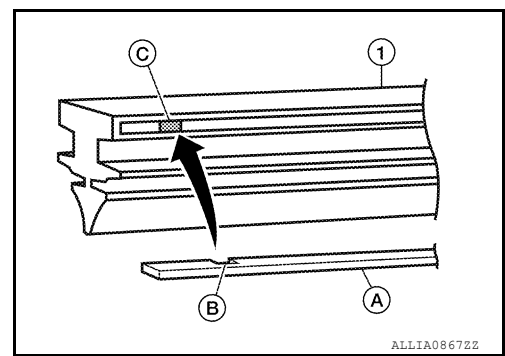

2. Insert the wiper blade refill (1) tip into the end of the front wiper blade (2). Push the wiper blade refill (1) in while pressing it into the end of the front wiper blade (2) as shown (C). After the wiper blade refill is fully inserted, remove the holder (B).
A : Tab (part of front wiper blade (2))

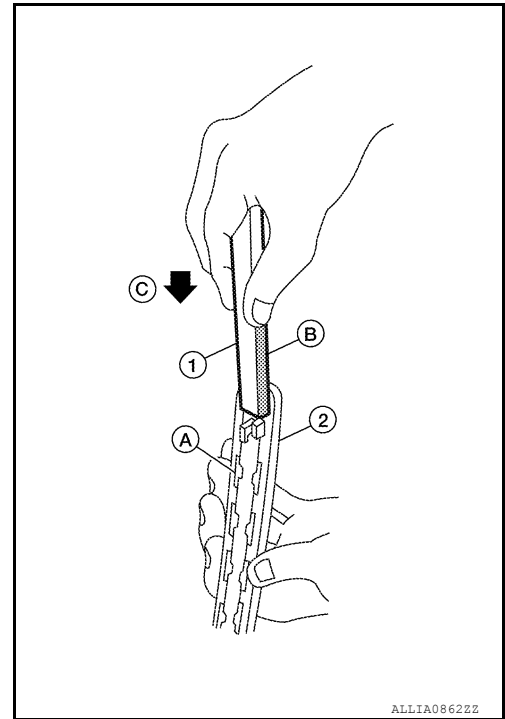

- Make sure to slide the refill into the front wiper blade so that the wiper blade refill is held by the tabs (A) on the front wiper blade as shown.

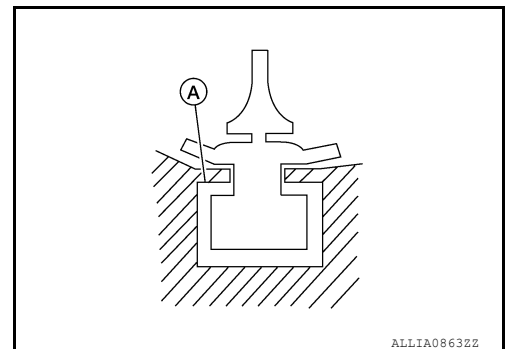


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW


FRONT WIPER BLADE

< REMOVAL AND INSTALLATION >

3. Push the wiper blade refill (1) until the tabs on the front wiper blade (2) fit into the stoppers (A) in the end of the wiper blade refill (1). Make sure the LOCK mark (B) on the wiper blade refill (1) is aligned with the lock point symbol (C) on the front wiper blade (2) as shown.

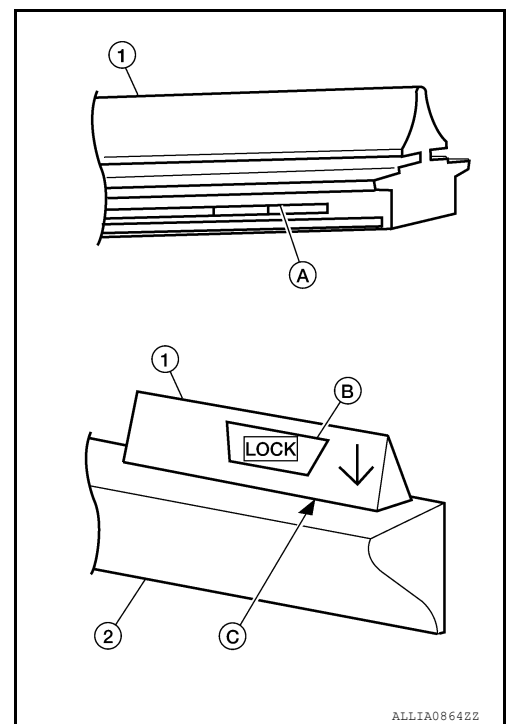

4. Before installing the front wiper blade, make sure that the wiper blade refill (1) end is fully covered by the front wiper blade (2) in area (A) as shown.
C: Lock point symbol

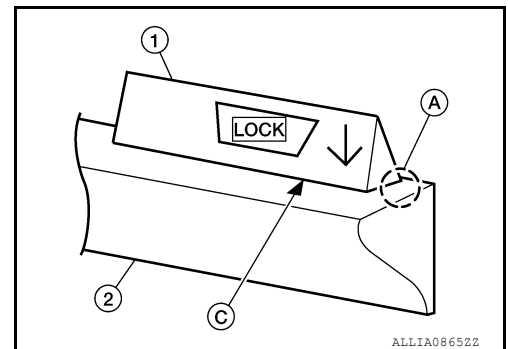

5. Install the front wiper blade.


FRONT WIPER DRIVE ASSEMBLY

< REMOVAL AND INSTALLATION >

FRONT WIPER DRIVE ASSEMBLY

Exploded View

INFOID:000000006738264

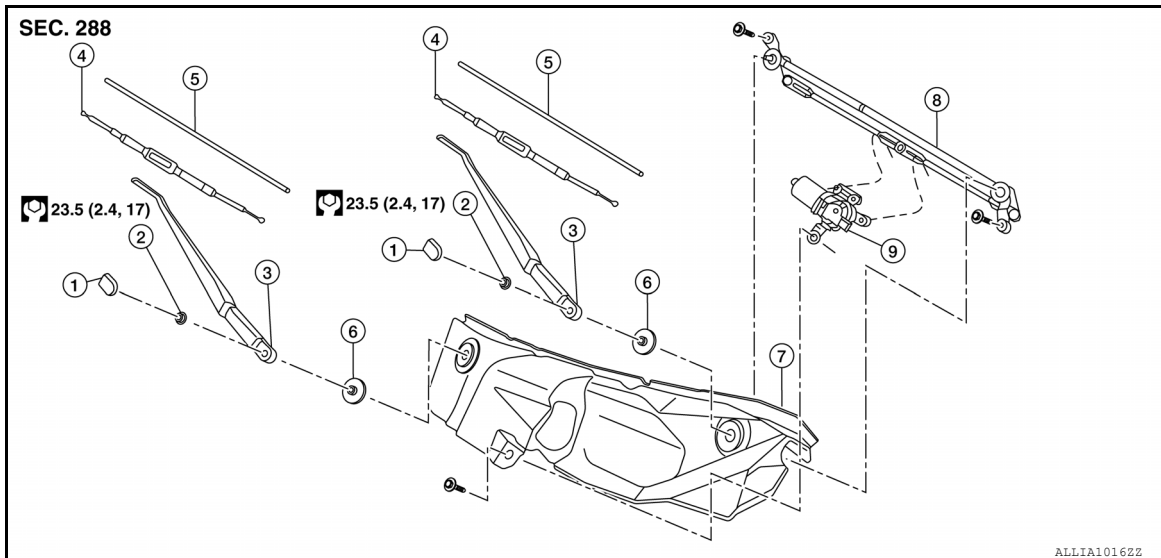


- | | | |
|----------------------------|---------------------------|--------------------------|
| 1. Wiper arm covers | 2. Wiper arm nuts | 3. Wiper arms |
| 4. Wiper frames | 5. Wiper blade refills | 6. Wiper arm shaft seals |
| 7. Wiper motor water cover | 8. Wiper linkage assembly | 9. Wiper Motor |

Removal and Installation


INFOID:000000007258442

REMOVAL

1. Remove the cowl top cover. Refer to [EXT-31, "Removal and Installation"](#).
2. Remove the bolts (A) and cowl extension reinforcement (1).

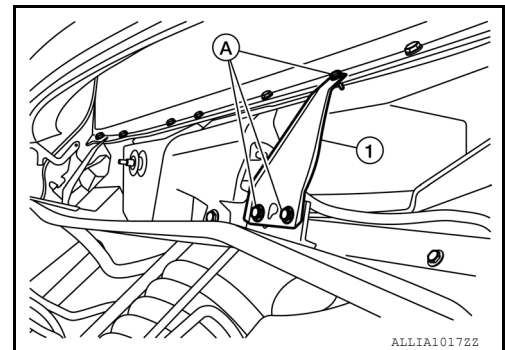

3. Disconnect the harness connector (A) and remove the bottom wiper linkage bolt (B).

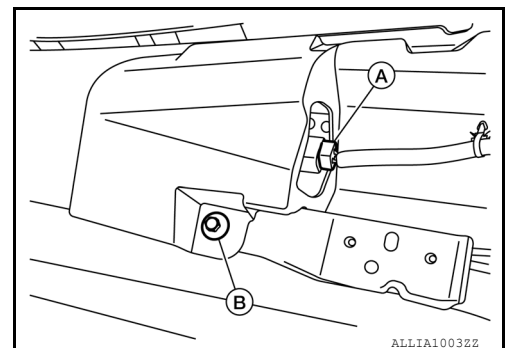


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW


FRONT WIPER DRIVE ASSEMBLY

< REMOVAL AND INSTALLATION >

4. Remove the wiper arm shaft seals (A) and remove the wiper motor water cover (1).

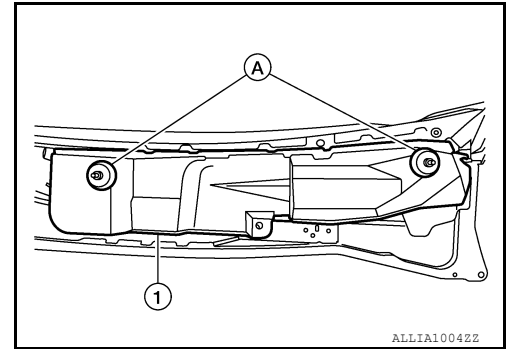

5. Remove wiper linkage bolts (A) and remove wiper linkage assembly (1).

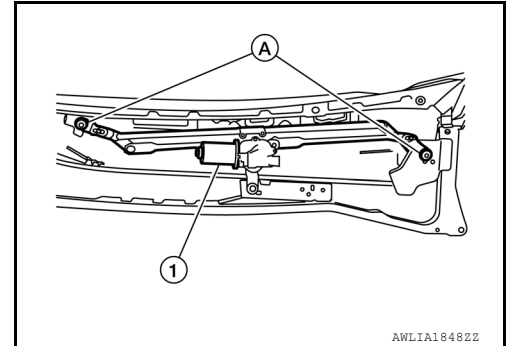


INSTALLATION

CAUTION:

- Do not drop the wiper linkage assembly or cause it to contact other parts.
- Check the grease conditions of the motor arm and wiper link joint(s). Apply grease if necessary.

1. Install the wiper linkage assembly and secure with the bolts.
2. Install the wiper motor water cover and the wiper arm shaft seals.
3. Connect harness connector to wiper motor, then install the bottom wiper linkage assembly bolt.
4. Install the cowl extension reinforcement (1) and bolts (A).

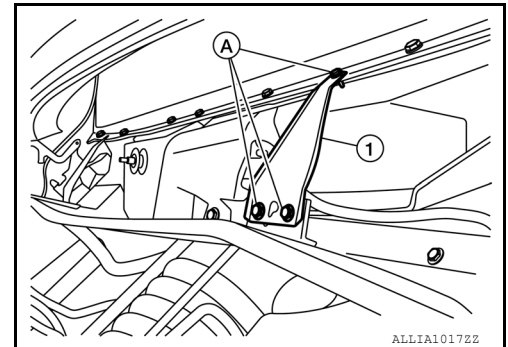

5. Install cowl top cover. Refer to [EXT-31, "Removal and Installation"](#).
6. Turn the wiper switch ON to operate wiper motor, then turn the wiper switch OFF (auto stop).
7. Ensure that wiper blades stop within proper clearance. Refer to [WW-36, "Adjustment"](#).


FRONT WASHER TUBE

< REMOVAL AND INSTALLATION >

FRONT WASHER TUBE

Exploded View

INFOID:000000007258482

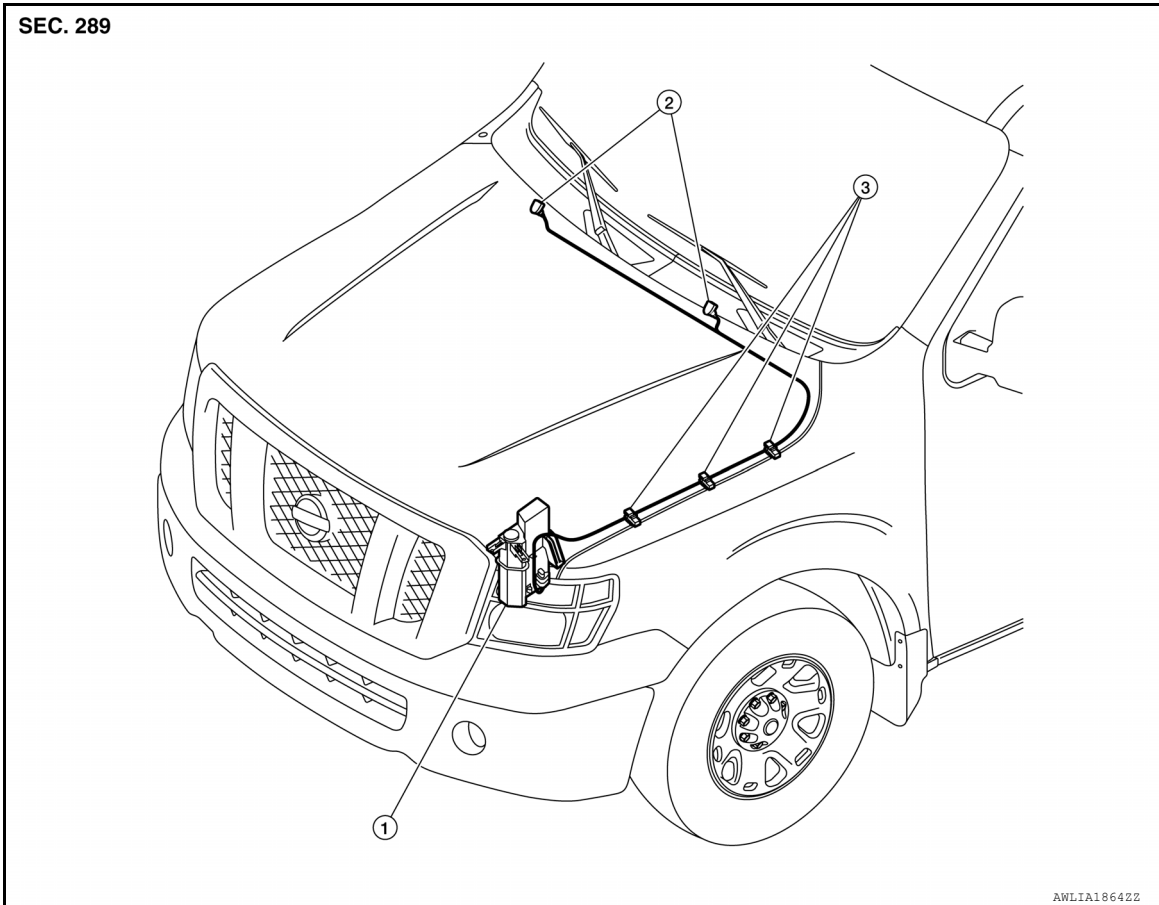

1. Washer tank

2. Washer nozzles

3. Washer tube clips

Removal and Installation

INFOID:000000007258483

REMOVAL

1. Remove cowl top cover. Refer to [EXT-31, "Removal and Installation"](#).
2. Disconnect washer tube from washer nozzles.
3. Disconnect washer tube from washer pump.
4. Release washer tube from the washer tube clips.
5. Remove washer tube.

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

FRONT WASHER NOZZLE

< REMOVAL AND INSTALLATION >

FRONT WASHER NOZZLE

Removal and Installation

INFOID:000000007258484

REMOVAL

1. Remove cowl top cover. Refer to [EXT-31, "Removal and Installation"](#).
2. Disconnect washer tube from the washer nozzle.
3. Remove washer nozzle from cowl top cover RH, LH.

INSTALLATION

Installation is in the reverse order of removal.


NOTE:

After installation be sure to adjust spray pattern. Refer to [WW-44, "Adjustment"](#).

Adjustment


INFOID:000000006738266

Adjust spray pattern to hit the aiming target zone as shown.

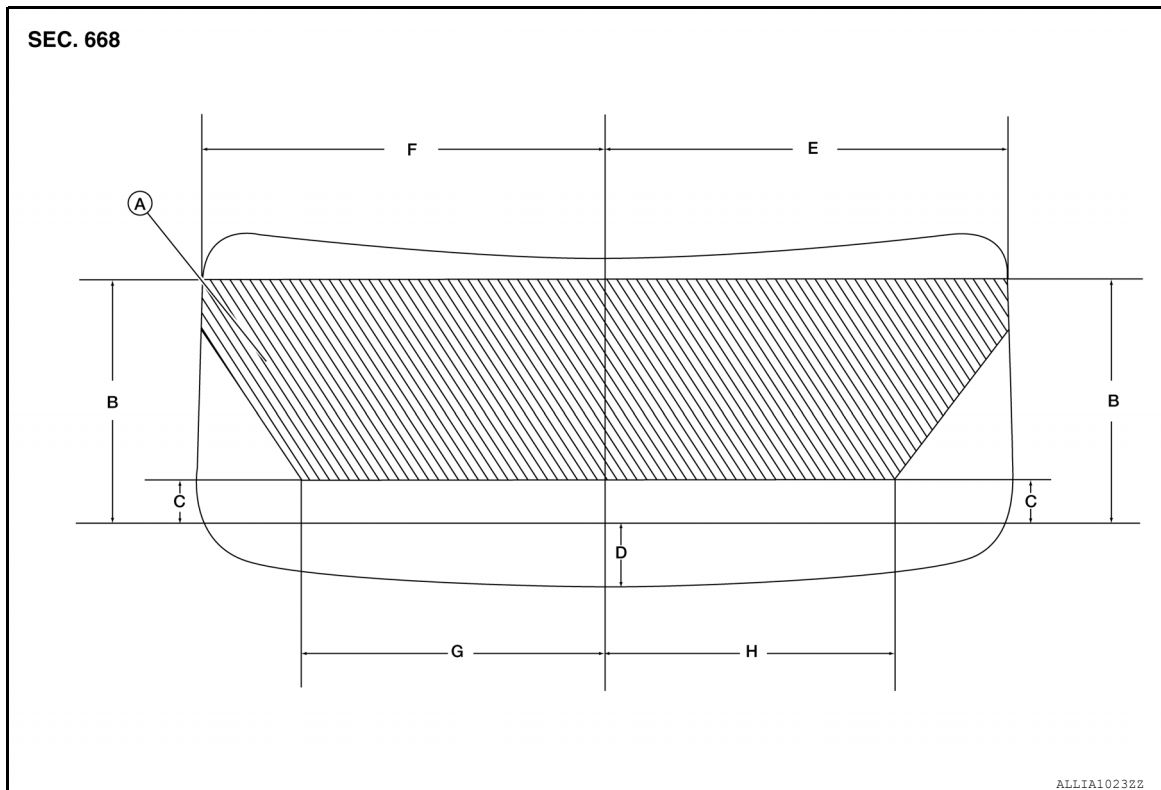

- | | | |
|-----------------------|----------------------|----------------------|
| A. Aiming target zone | B. 578 mm (22.76 in) | C. 121 mm (4.76 in) |
| D. 148 mm (5.83 in) | E. 856 mm (33.70 in) | F. 856 mm (33.70 in) |
| G. 588 mm (23.15 in) | H. 588 mm (23.15 in) | |

Move spray nozzle (A) up/down to adjust spray pattern using a suitable tool.

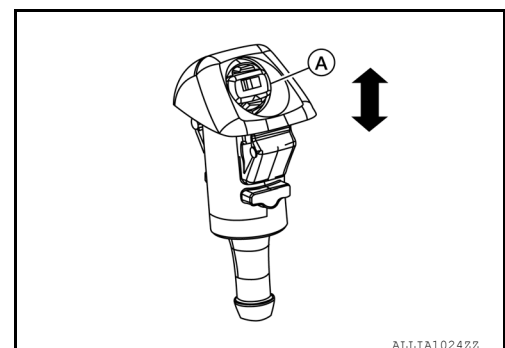

WASHER TANK

< REMOVAL AND INSTALLATION >

WASHER TANK


Washer Tank

INFOID:000000006738267


REMOVAL AND INSTALLATION

Removal


1. Disconnect the harness connector from the washer pump motor and washer fluid level sensor (if equipped) (A).
2. Disconnect the washer hose (B).

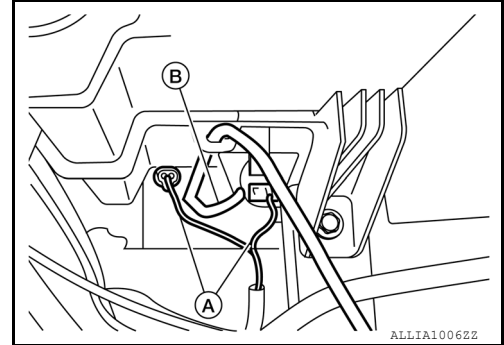

3. Remove the washer tank (1).
 - a. Remove the two upper washer tank bolts (A) and the rear washer tank bolt.

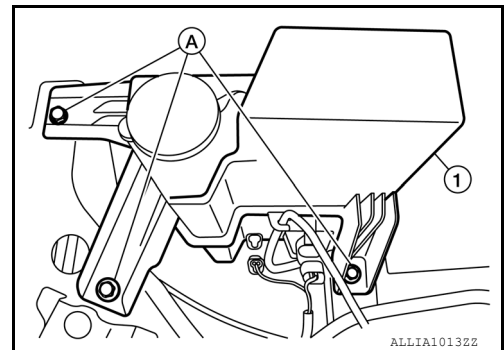

- b. Remove the lower washer tank bolt (B).

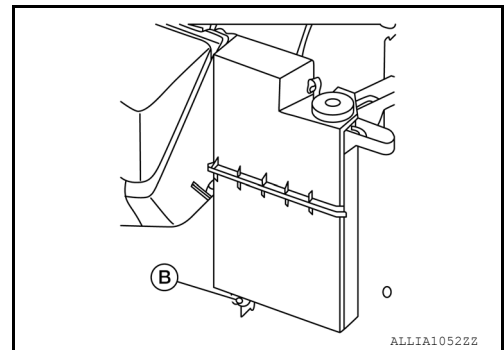

Installation

Installation is in the reverse order of removal.

- After installation, add washer fluid up to the upper level of the washer tank inlet and check for leaks.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

FRONT WIPER AND WASHER SWITCH

< REMOVAL AND INSTALLATION >

FRONT WIPER AND WASHER SWITCH

Wiper and Washer Switch

INFOID:000000006738269

REMOVAL AND INSTALLATION

The wiper and washer switch is serviced as part of the combination switch assembly. Refer to [EXL-121](#), "[Removal and Installation](#)".

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Specifications

INFOID:000000006738278

WINDSHIELD WASHER FLUID

Windshield washer fluid capacity	4.5 ℓ (4 3/4 US qt, 4 Imp qt)
Windshield washer fluid specification	Refer to MA-13. "Fluids and Lubricants"

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW