

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

SECTION MT

CONTENTS

| | | | |
|---|----|--|----|
| PREPARATION | 2 | DISASSEMBLY | 18 |
| Special Service Tools | 2 | INSPECTION | 22 |
| Commercial Service Tool..... | 4 | Shift Control Components | 22 |
| NOISE, VIBRATION AND HARSHNESS (NVH) | | INSPECTION..... | 22 |
| TROUBLESHOOTING | 5 | Gear Components | 22 |
| NVH Troubleshooting Chart..... | 5 | INSPECTION..... | 22 |
| MANUAL TRANSMISSION..... | 5 | ASSEMBLY | 24 |
| ON-VEHICLE SERVICE | 6 | Gear Components | 24 |
| Replacing Rear Oil Seal — 2WD Model..... | 6 | ASSEMBLY | 24 |
| REMOVAL..... | 6 | Shift Control Components | 32 |
| INSTALLATION..... | 6 | ASSEMBLY | 32 |
| Position Switch Check..... | 6 | Case Components | 33 |
| DESCRIPTION | 7 | ASSEMBLY | 33 |
| Cross-sectional View — 2WD Model..... | 7 | SERVICE DATA AND SPECIFICATIONS (SDS) | 35 |
| Cross-sectional View — 4WD Model..... | 8 | General Specifications..... | 35 |
| REMOVAL AND INSTALLATION | 9 | Gear End Play | 35 |
| Removal..... | 9 | Clearance Between Baulk Ring and Gear | 35 |
| 2WD MODEL..... | 9 | 2ND AND 3RD BAULK RING..... | 36 |
| 4WD MODEL..... | 10 | Distance between Rear Surface of Reverse | |
| Installation..... | 11 | Cone and Reverse Baulk Ring..... | 36 |
| OVERHAUL | 12 | Available Snap Ring | 36 |
| Case Components | 12 | MAIN DRIVE GEAR SNAP RING | 36 |
| Gear Components | 13 | MAINSHAFT FRONT SNAP RING..... | 36 |
| Shift Control Components | 15 | COUNTER GEAR REAR SNAP RING | 37 |
| DISASSEMBLY | 16 | Available C-ring | 37 |
| Case Components | 16 | MAINSHAFT C-RING | 37 |
| DISASSEMBLY..... | 16 | Available Shim and Washer | 37 |
| Shift Control Components | 17 | TABLE FOR SELECTING PROPER COUNTER | |
| DISASSEMBLY..... | 17 | GEAR FRONT BEARING THRUST WASHER | 37 |
| Gear Components | 18 | REVERSE IDLER REAR THRUST WASHER | 37 |









PREPARATION

Special Service Tools

Special Service Tools









NAMT0001

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.
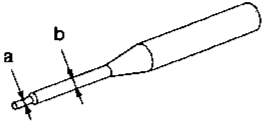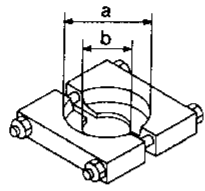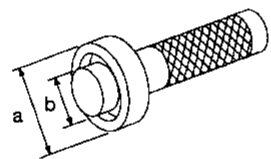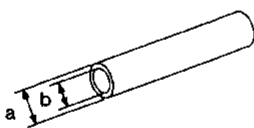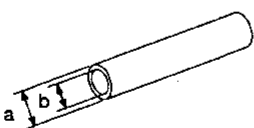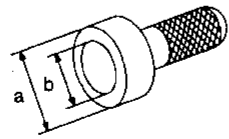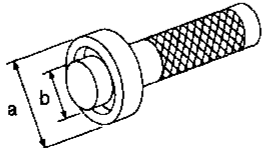
| Tool number (Kent-Moore No.) Tool name | Description | |
|--|--|--|
| ST23540000 (J25689-A) Pin punch |  <p>NT442</p> | Removing and installing retaining pin a: 2.3 mm (0.091 in) dia. b: 4 mm (0.16 in) dia. |
| ST30031000 (J22912-01) Puller |  <p>NT411</p> | Removing 1st & 2nd synchronizer assembly Removing counter gear rear thrust bearing Removing main drive bearing a: 90 mm (3.54 in) dia. b: 50 mm (1.97 in) dia. |
| ST33290001 (J25810-A) Puller |  <p>NT414</p> | Removing rear oil seal a: 250 mm (9.84 in) b: 160 mm (6.30 in) |
| ST33230000 (—) Drift |  <p>NT084</p> | Removing mainshaft and counter gear a: 51 mm (2.01 in) dia. b: 28.5 mm (1.122 in) dia. |
| ST22350000 (J25678-01) Drift |  <p>NT065</p> | Removing counter gear front bearing (Use with KV38100300) a: 34 mm (1.34 in) dia. b: 28 mm (1.10 in) dia. |
| KV38100300 (J25523) Drift |  <p>NT065</p> | Removing counter gear front bearing (Use with ST22350000) Installing counter gear rear bearing a: 54 mm (2.13 in) dia. b: 32 mm (1.26 in) dia. |
| ST30720000 1 (J34286) 2 (J34331) Drift |  <p>NT115</p> | 1 Removing mainshaft front bearing 2 Installing mainshaft front bearing a: 77 mm (3.03 in) dia. b: 55.5 mm (2.185 in) dia. |
| ST33210000 1 (J25523) 2 (J25803-01) Drift |  <p>NT084</p> | 1 Installing counter gear front bearing 2 Installing front cover oil seal a: 44 mm (1.73 in) dia. b: 24.5 mm (0.965 in) dia. |


PREPARATION

Special Service Tools (Cont'd)
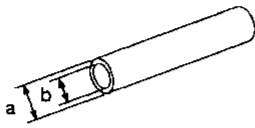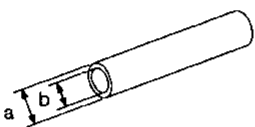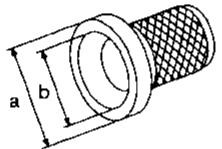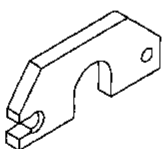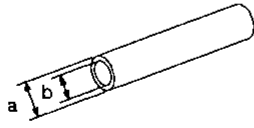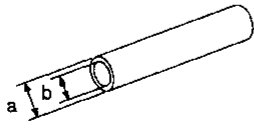
| Tool number (Kent-Moore No.) Tool name | Description | | |
|--|---|---|----------------------|
| ST30613000 (J25742-3) Drift |  | Installing main drive gear bearing a: 72 mm (2.83 in) dia. b: 48 mm (1.89 in) dia. | GI MA EM LC |
| NT073 | | | |
| ST37750000 1 (J34286) 2 (J34332) 3 (J34334) 4 (J25679-01) Drift |  | <ol style="list-style-type: none"> 1 Removing counter gear rear bearing 2 Installing OD gear bushing 2 Removing and installing mainshaft rear bearing (4WD model) 2 Installing reverse cone 3 Installing reverse counter gear 4 Installing counter gear rear end bearing a: 40 mm (1.57 in) dia. b: 31 mm (1.22 in) dia. | EC FE CL |
| NT065 | | | |
| ST22452000 (J34337) Drift |  | Installing reverse hub Installing mainshaft rear bearing (2WD model) a: 45 mm (1.77 in) dia. b: 36 mm (1.42 in) dia. | MT AT |
| NT065 | | | |
| ST33400001 (J26082) Drift |  | Installing rear oil seal a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia. | TF PD |
| NT086 | | | |
| (J26349-3) Puller leg |  | Installing mainshaft and counter gear (Use with J34328) | AX SU |
| NT078 | | | |
| (J34328) Puller |  | Installing mainshaft and counter gear (Use with J26349-3) | BR ST |
| NT079 | | | |
| (J26092) Drift |  | Installing sub-gear snap ring a: 44.5 mm (1.752 in) dia. b: 38.5 mm (1.516 in) dia. | RS BT |
| NT065 | | | |
| (J34342) Drift |  | Installing OD main gear Installing reverse gear bushing a: 44.5 mm (1.752 in) dia. b: 40.5 mm (1.594 in) dia. | HA SC |
| NT065 | | | EL |


PREPARATION

Special Service Tools (Cont'd)
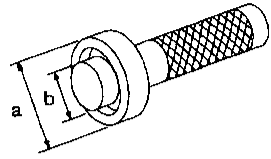
| Tool number (Kent-Moore No.) Tool name | Description | |
|--|---|---|
| ST33220000 (J25804-01) Drift |  | Installing mainshaft rear bearing a: 37 mm (1.46 in) dia. b: 22 mm (0.87 in) dia. |
| NT084 | | |


Commercial Service Tool

NAMT0002
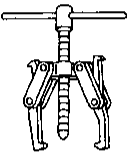
| Tool name | Description | |
|-----------|---|---|
| Puller |  | Removing counter gear rear end bearing Removing mainshaft rear bearing (2WD model) Removing reverse synchronizer hub Removing reverse counter gear |
| NT077 | | |

ON-VEHICLE SERVICE


Replacing Rear Oil Seal — 2WD Model

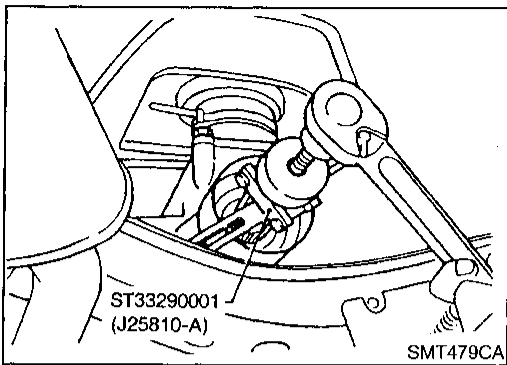

Replacing Rear Oil Seal — 2WD Model REMOVAL


NAMT0003

NAMT0003S01

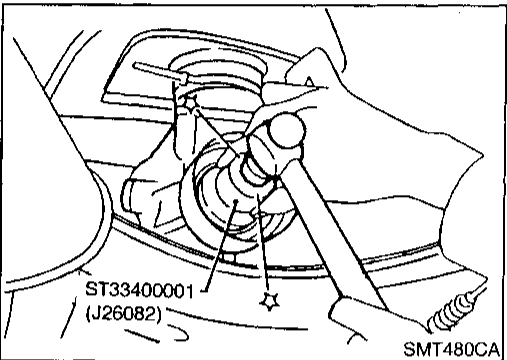

INSTALLATION

NAMT0003S02

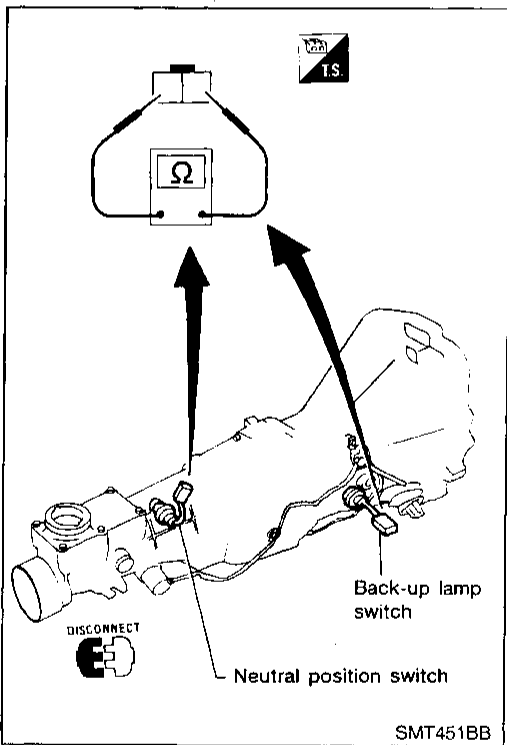

Position Switch Check

NAMT0004


| Switch | Gear position | Continuity |
|-------------------------|----------------|------------|
| Back-up lamp switch | Reverse | Yes |
| | Except reverse | No |
| Neutral position switch | Neutral | Yes |
| | Except neutral | No |

DESCRIPTION

Cross-sectional View — 2WD Model

Cross-sectional View — 2WD Model

NAMT0005SD1

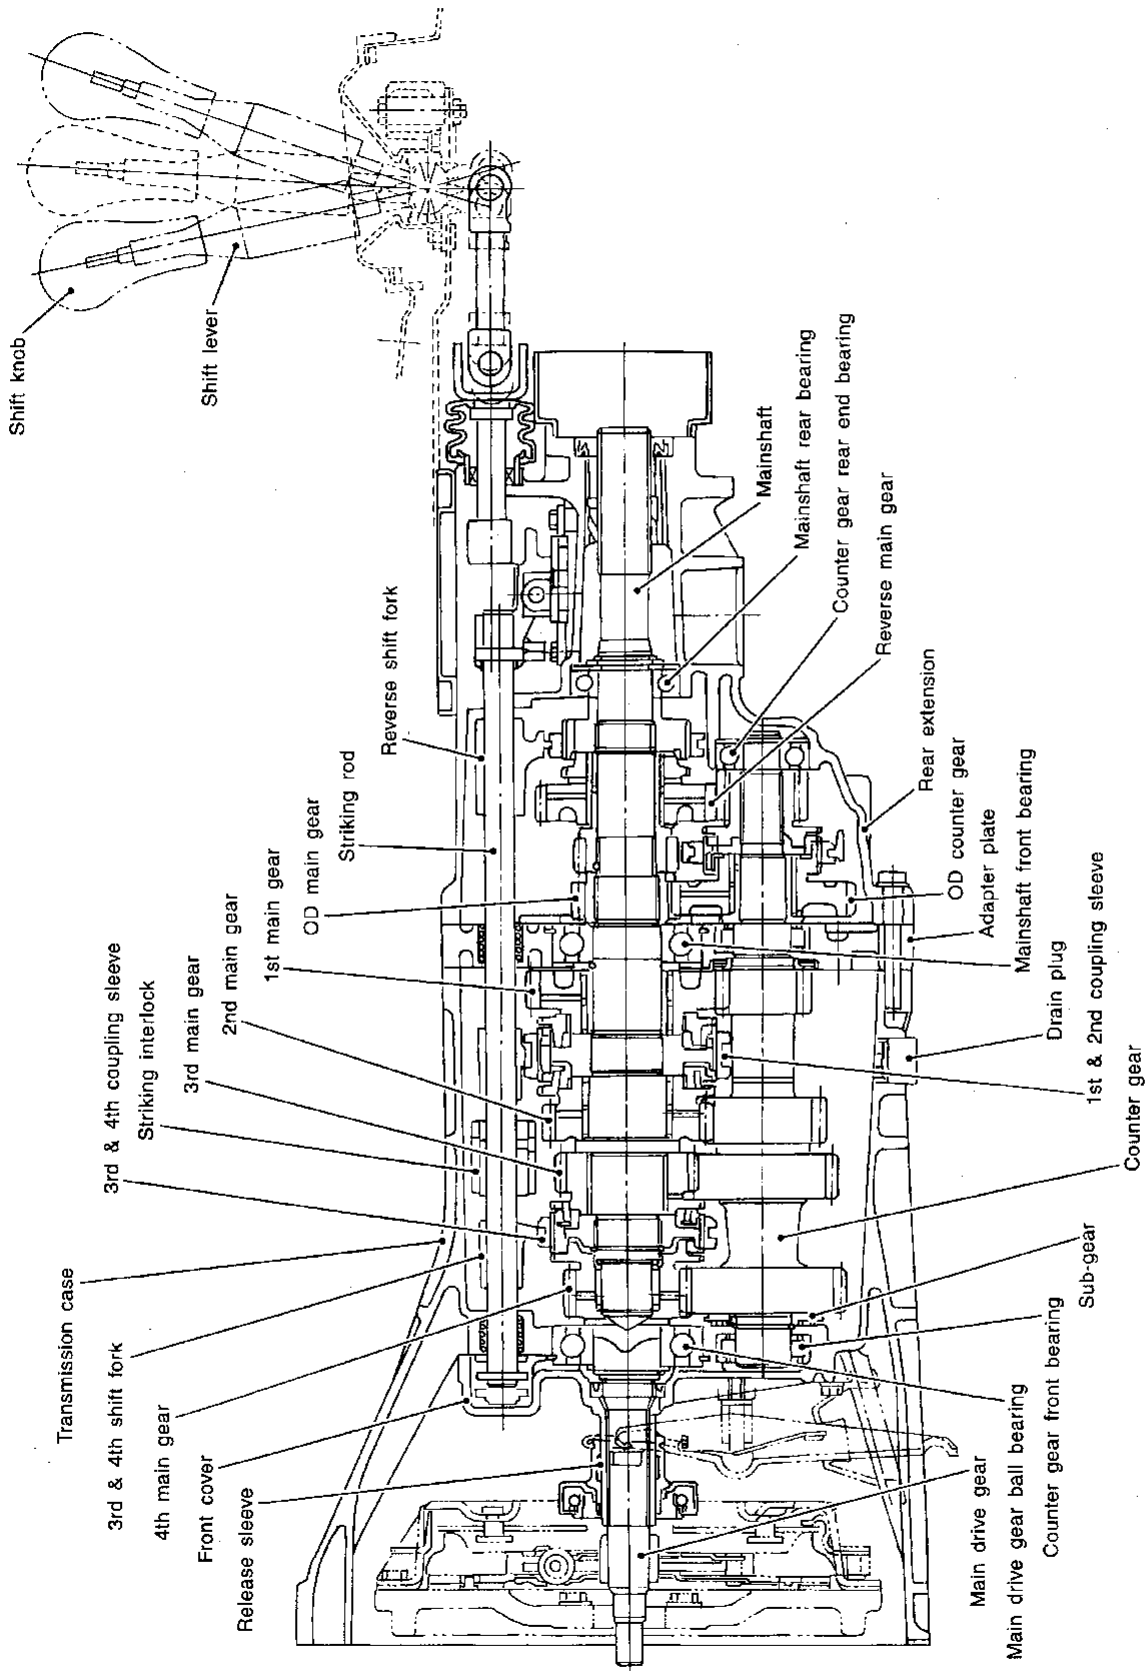

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

SMT209D


IDX

DESCRIPTION

Cross-sectional View — 4WD Model

Cross-sectional View — 4WD Model

NAMT0005S02

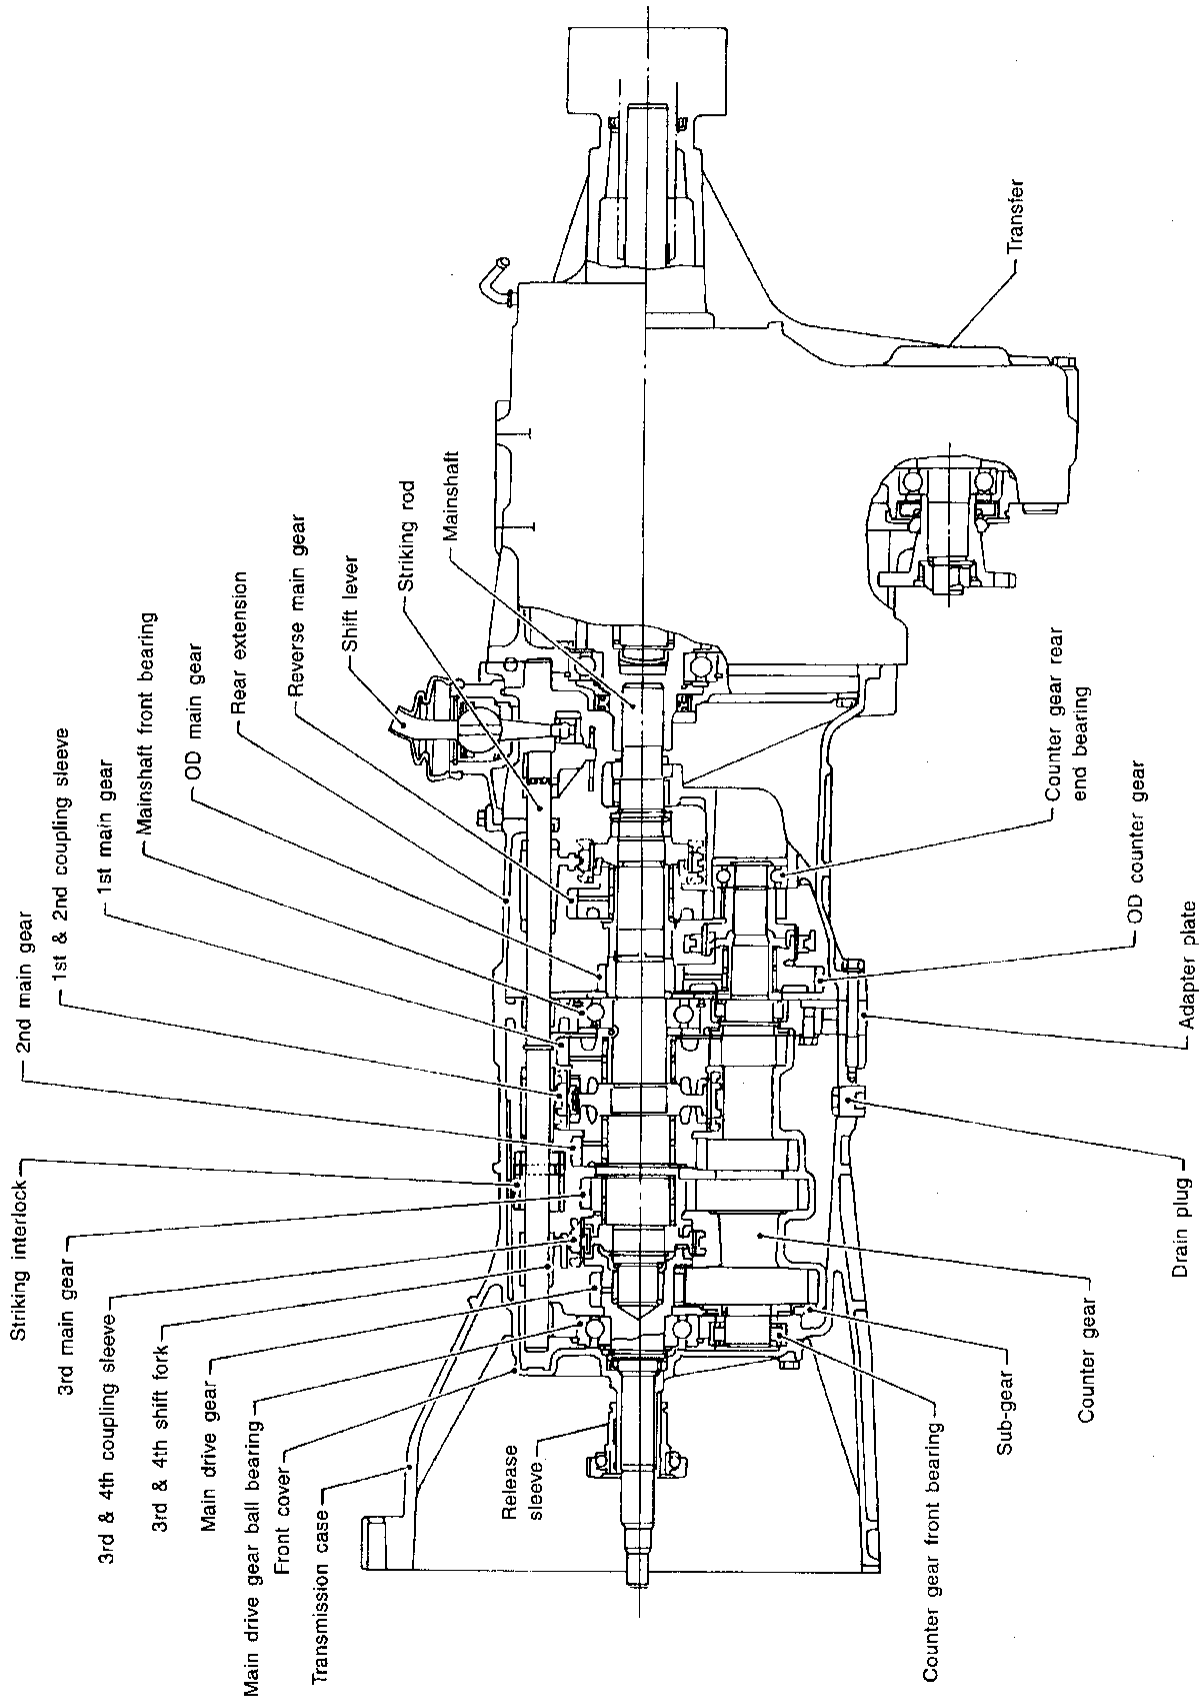

SMT870CA

Removal

CAUTION:

When removing the M/T assembly from engine, first remove the crankshaft position sensor (OBD) from the M/T assembly. Be careful not to damage sensor edge.

NAMT0006S01

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS


BT

HA

SC

EL


IDX

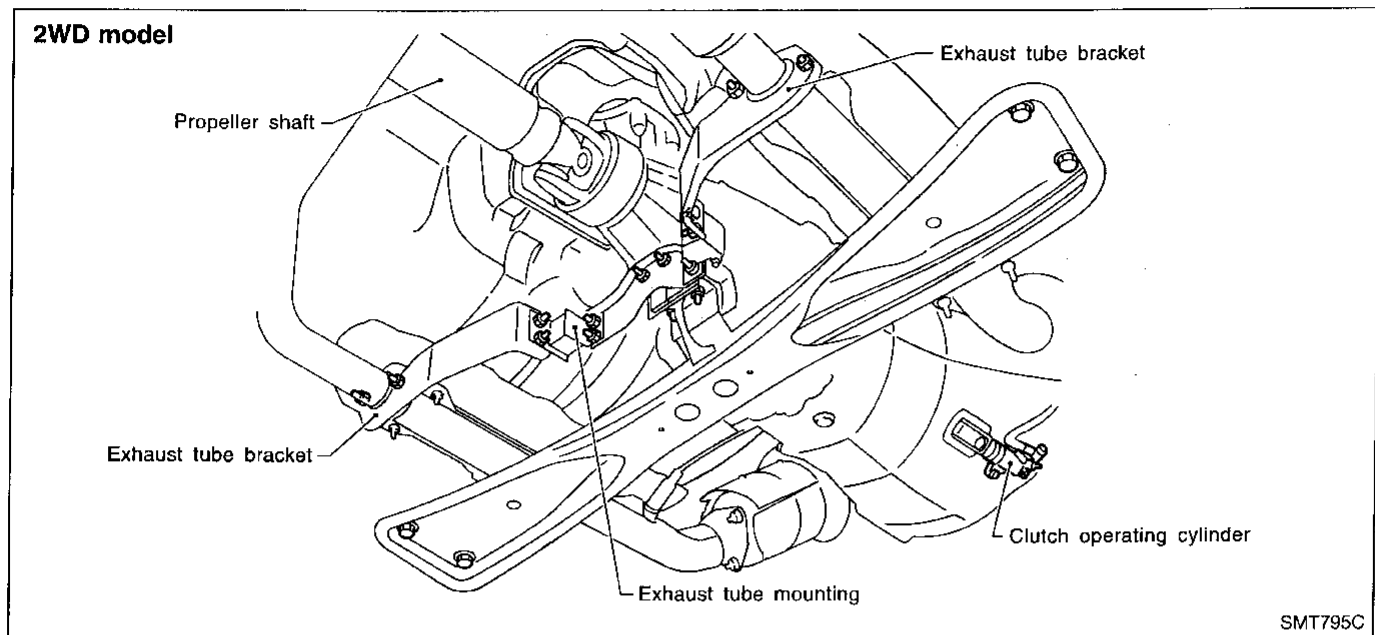

2WD MODEL

NAMT0006S0101

1. Remove battery negative terminal.
2. Remove shift lever with control housing from transmission.
3. Remove crankshaft position sensor (OBD) from upper side of transmission case.
4. Remove clutch operating cylinder from transmission. Tighten clutch operating cylinder to the specified torque. Refer to CL section ("CLUTCH SYSTEM").
5. Disconnect speed sensor, back-up lamp switch, rear heated oxygen sensor and neutral position switch harness connectors.
6. Remove starter motor from transmission.
 □ : 41 - 52 N·m (4.2 - 5.3 kg·m, 30 - 38 ft·lb)
7. Remove propeller shaft. Refer to PD section ("Removal", "PROPELLER SHAFT").
 - Insert plug into rear oil seal after removing propeller shaft.
 - Be careful not to damage spline, sleeve yoke and rear oil seal when removing propeller shaft.
8. Remove gussets from transmission or engine.
9. Remove exhaust tube mounting bracket from transmission. Refer to FE section ("EXHAUST SYSTEM").
10. Support manual transmission with a jack.
11. Remove rear mounting member. Tighten rear mounting member to the specified torque. Refer to EM section ("ENGINE REMOVAL").
12. Lower manual transmission as much as possible.

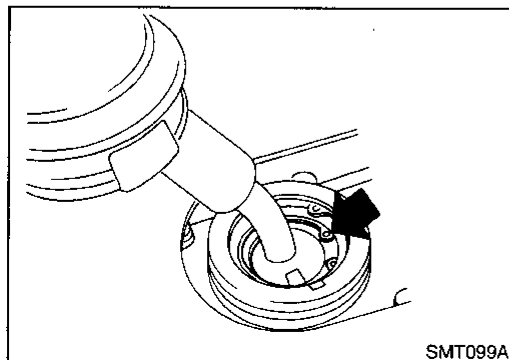


WARNING:

Support Manual Transmission together with transfer, while removing it.

REMOVAL AND INSTALLATION

Removal (Cont'd)

4WD model

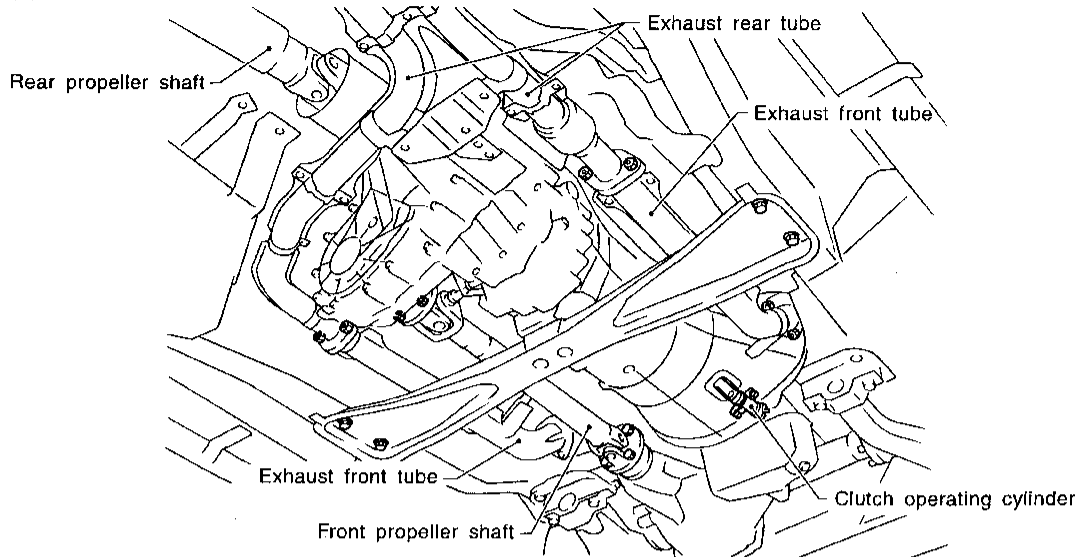

SMT815C


4WD MODEL

NAMT0006S0102

1. Remove battery negative terminal.
2. Remove shift lever from transmission and control lever from transfer.
3. Remove crankshaft position sensor (OBD) from upper side of transmission case.
4. Remove clutch operating cylinder from transmission. Tighten clutch operating cylinder to the specified torque. Refer to CL section ("CLUTCH SYSTEM").
5. Disconnect speed sensor, back-up lamp switch, rear heated oxygen sensor and neutral position switch harness connectors.
6. Remove starter motor from transmission.
⚙️ : 41 - 52 N·m (4.2 - 5.3 kg-m, 30 - 38 ft-lb)
7. Remove front and rear propeller shafts. Refer to PD section ("Removal", "PROPELLER SHAFT").
 - Insert plug into rear oil seal after removing propeller shaft.
 - Be careful not to damage spline, sleeve yoke and rear oil seal when removing propeller shaft.
8. Remove gussets from transmission or engine.
9. Remove exhaust tube mounting bracket from transmission. Refer to FE section ("EXHAUST SYSTEM").
10. Support manual transmission with a jack.
11. Remove rear mounting member. Tighten rear mounting member to the specified torque. Refer to EM section ("ENGINE REMOVAL").
12. Lower manual transmission as much as possible.

REMOVAL AND INSTALLATION

Removal (Cont'd)

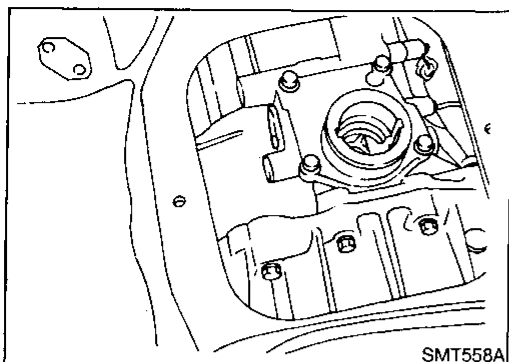

WARNING:

Support Manual Transmission together with transfer, while removing it.

Installation

- Apply sealant as below: — 4WD model

NAMT0006S02

Mating surface of engine block and engine rear plate


Mating surface of engine rear plate and transmission case

Do not apply sealant in this range.

Unit: mm (in)

Legend: : Apply genuine anaerobic liquid gasket, Three Bond TB1215, Loctite Part No. 51813 or equivalent.

SMT210D

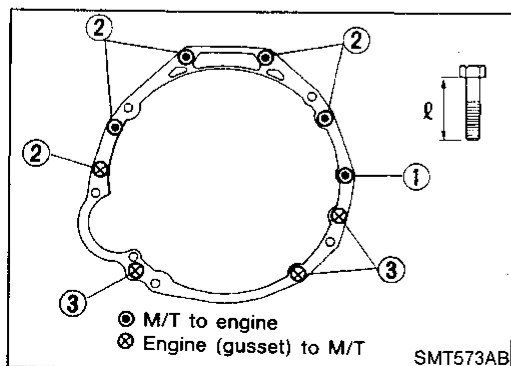

- Tighten bolt securing transmission.


| Bolt No. | Tightening torque N-m (kg-m, ft-lb) | ℓ mm (in) |
|------------------|-------------------------------------|-----------|
| 1 | 39 - 49 (4.0 - 5.0, 29 - 36) | 65 (2.56) |
| 2 | 39 - 49 (4.0 - 5.0, 29 - 36) | 58 (2.28) |
| 3 | 29 - 39 (3.0 - 4.0, 22 - 29) | 25 (0.98) |
| Gusset to engine | 29 - 39 (3.0 - 4.0, 22 - 29) | 20 (0.79) |

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Gear Components

NAMT0007S02

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

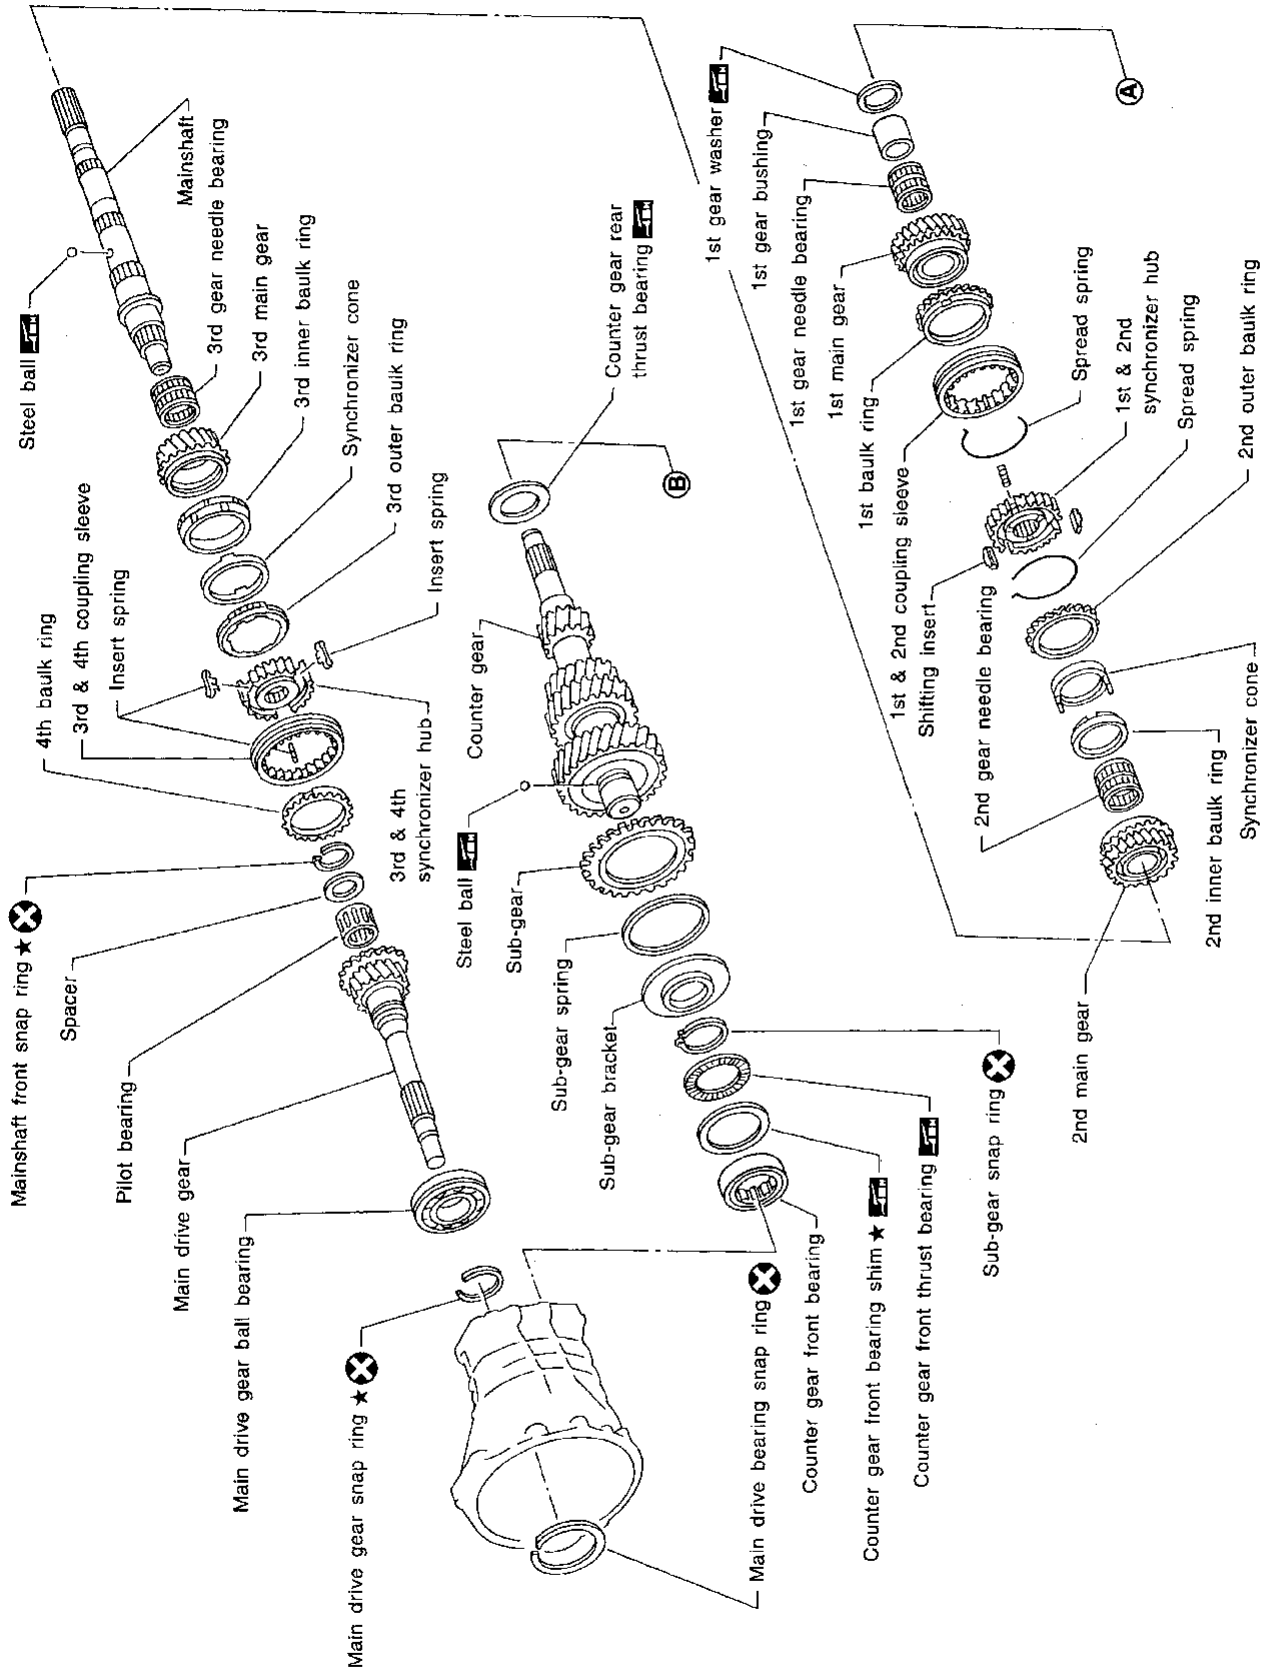


SEC. 322

SMT797CA

OVERHAUL

Gear Components (Cont'd)

SEC. 322

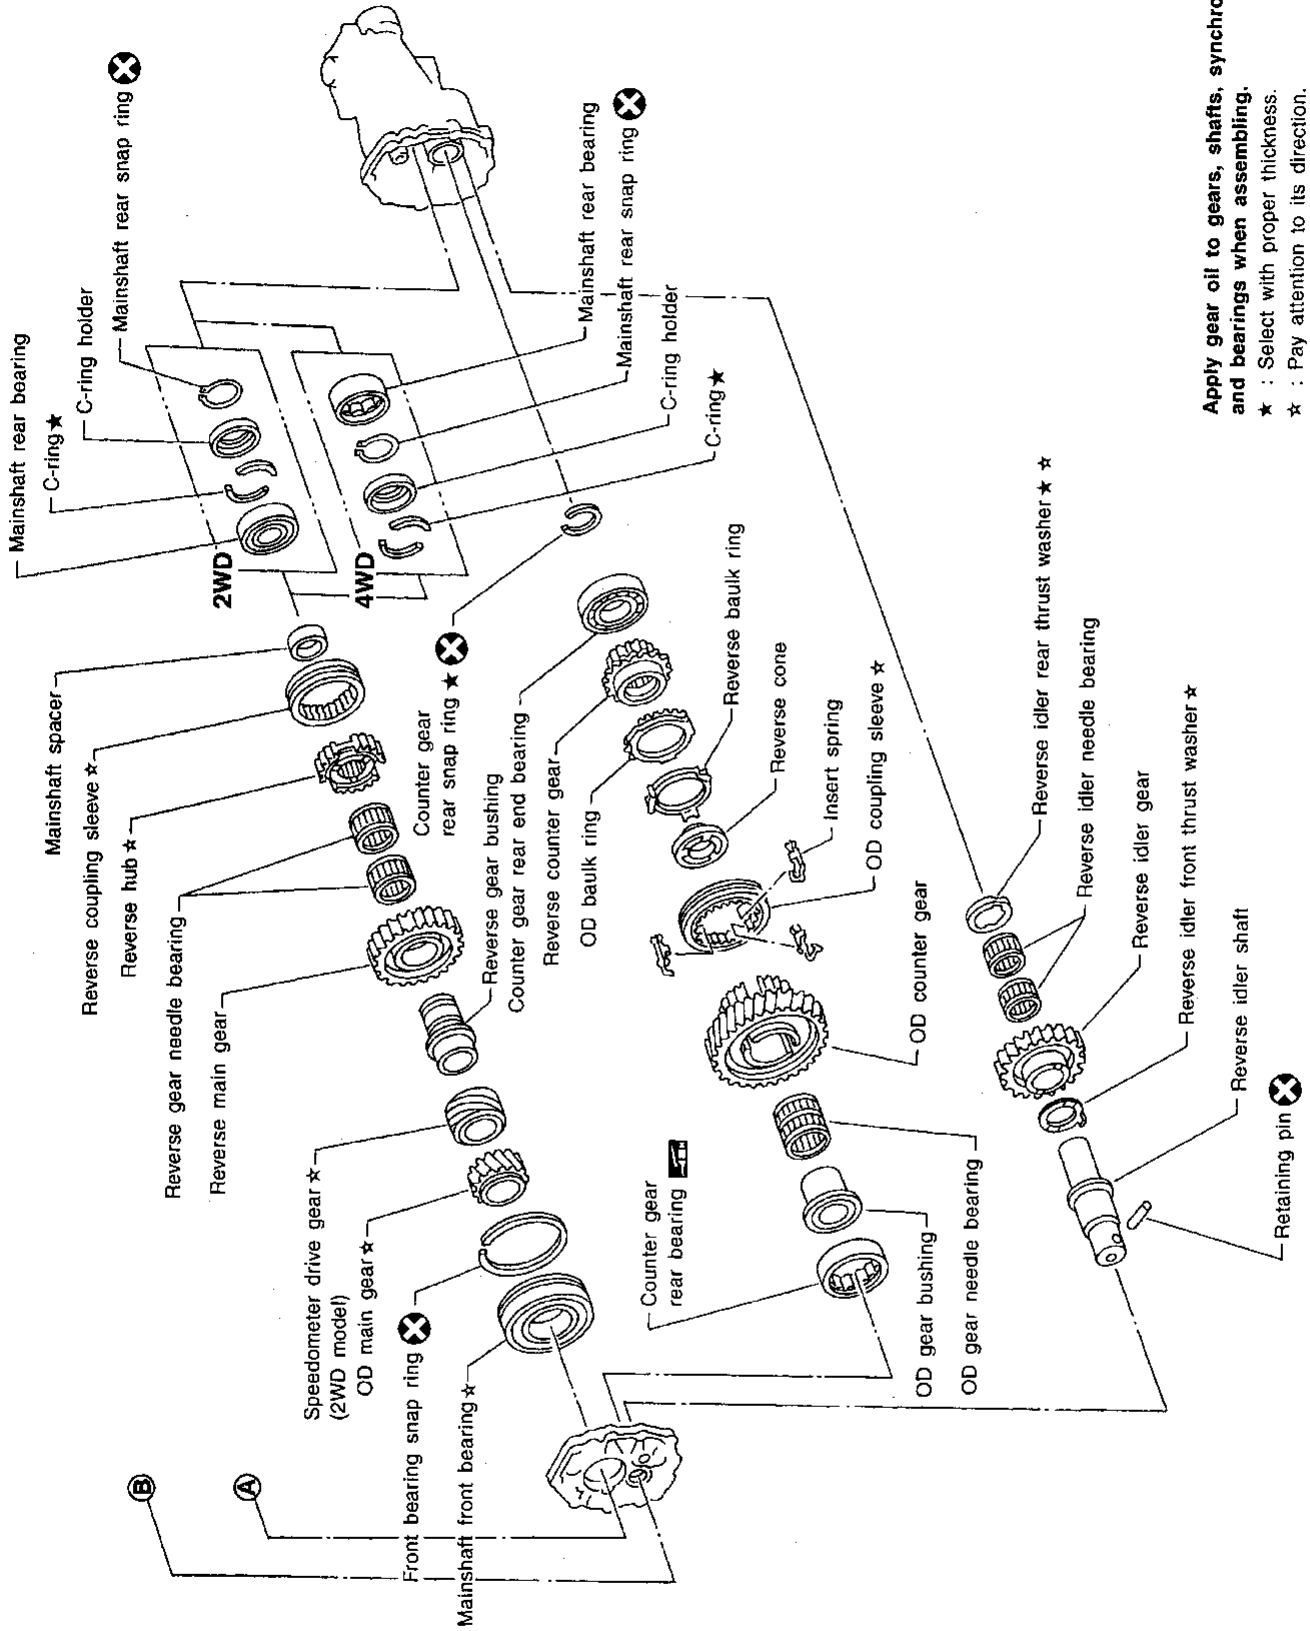


Apply gear oil to gears, shafts, synchronizers and bearings when assembling.

★ : Select with proper thickness.

✕ : Pay attention to its direction.

NAMT0007S03

Shift Control Components

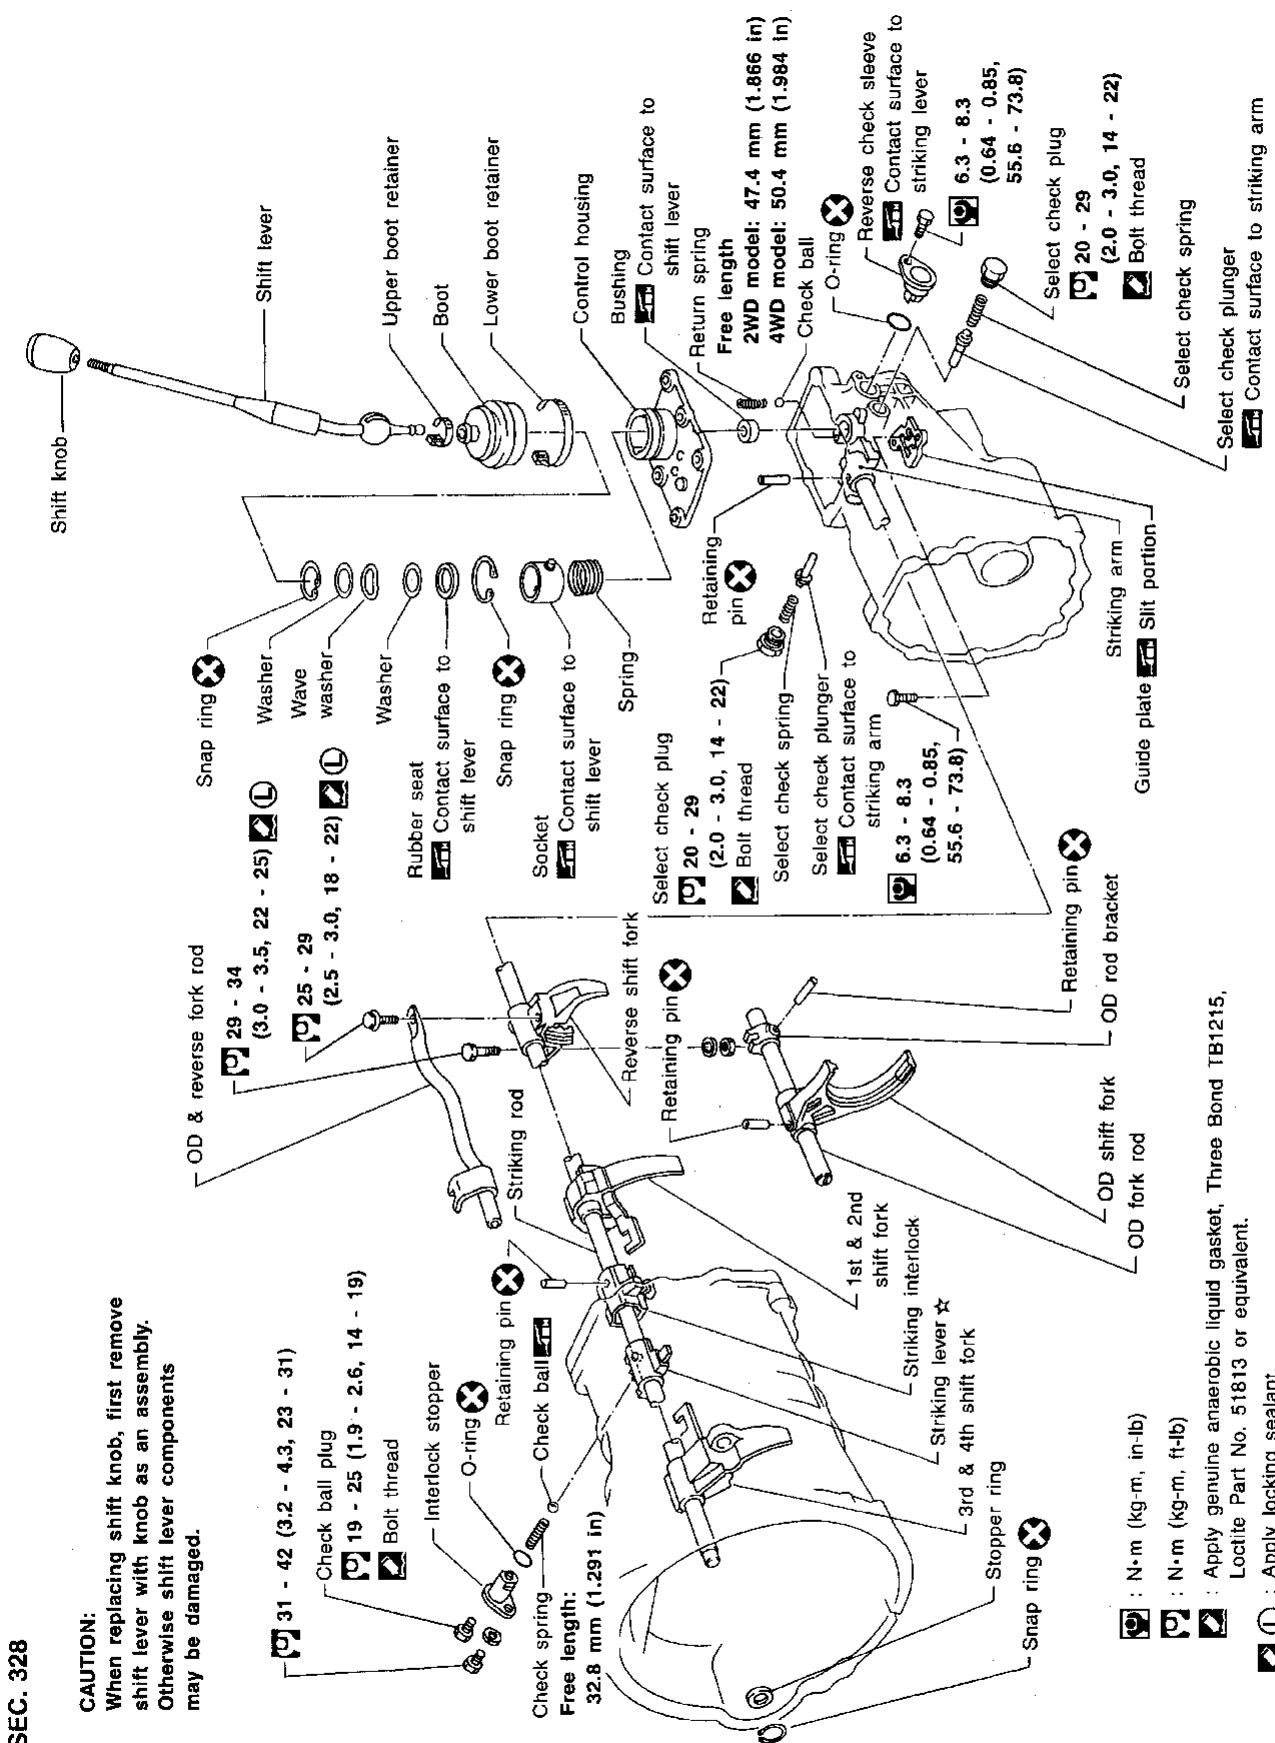

SEC. 328

CAUTION:
When replacing shift knob, first remove shift lever with knob as an assembly. Otherwise shift lever components may be damaged.

⊗ : N·m (kg-m, in-lb)

⊕ : N·m (kg-m, ft-lb)

⊠ : Apply genuine anaerobic liquid gasket, Three Bond TB1215, Loctite Part No. 51813 or equivalent.

⊡ : Apply locking sealant.

☆ : Pay attention to its direction.






MT-15

SMT816CA

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

DISASSEMBLY

Case Components

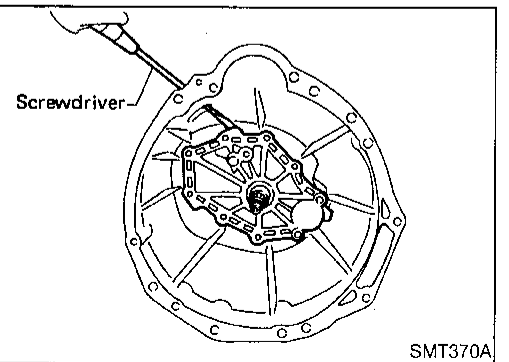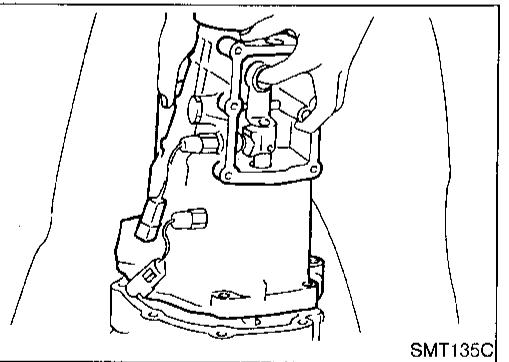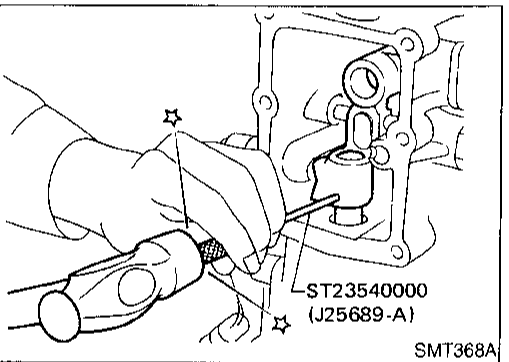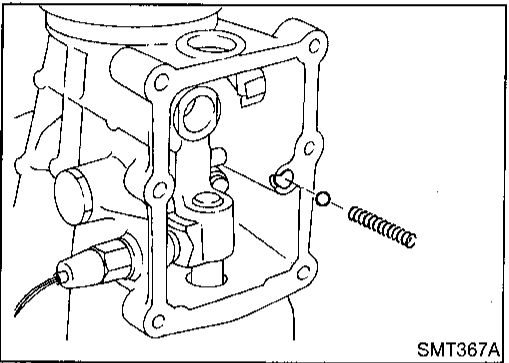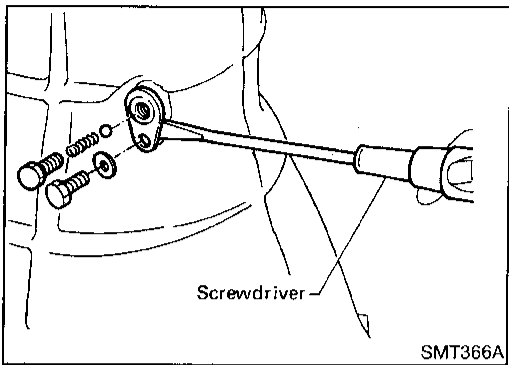

Case Components

DISASSEMBLY

1. Remove check ball plug, check spring and check ball. Then remove interlock stopper. NAMT0008

- If interlock assembly is removed as a unit, the check ball can fall into transmission case.
- Be careful not to lose check ball.


2. Remove control housing, return spring and check ball.

- Be careful not to lose check ball.

3. Drive out retaining pin from striking arm.

4. Remove rear extension (or OD gear case) together with striking arm by tapping lightly.

5. Remove front cover and gasket.

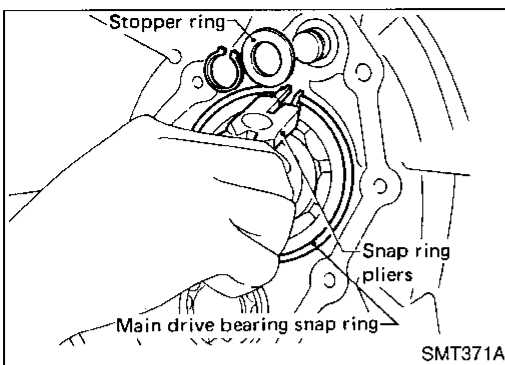

6. Remove stopper ring and main drive bearing snap ring.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS


BT

HA


SC

EL


IDX

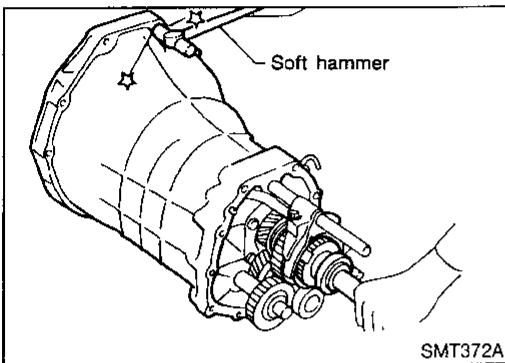

7. Remove transmission case by tapping lightly.

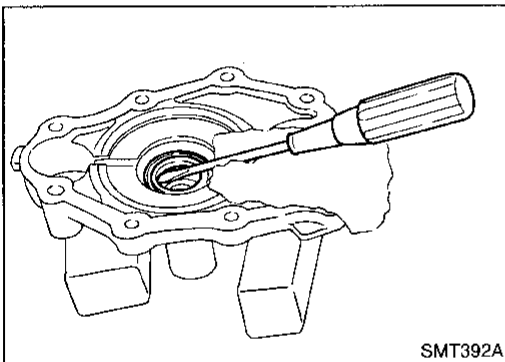


8. Remove front cover oil seal.

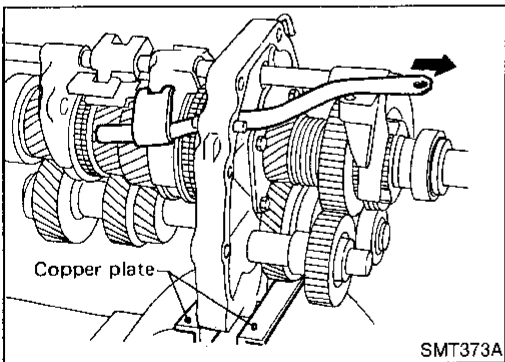

Shift Control Components DISASSEMBLY

NAMT0009


1. Mount adapter plate on vise.
2. Remove OD & reverse fork rod.

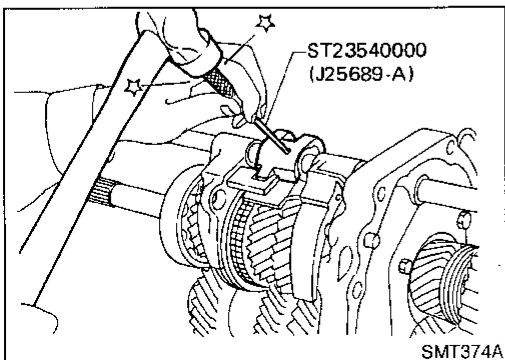


3. Drive out retaining pin from striking lever.
4. While pulling out striking rod, remove striking lever and striking interlock. Then remove 1st & 2nd, 3rd & 4th and reverse shift fork.

DISASSEMBLY

Shift Control Components (Cont'd)

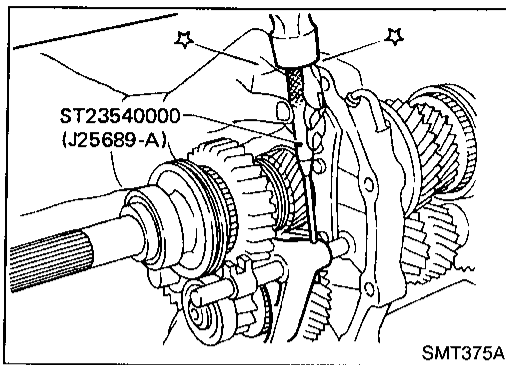

5. Drive out retaining pin from OD shift fork.
6. Pull out OD fork rod and then remove OD shift fork.

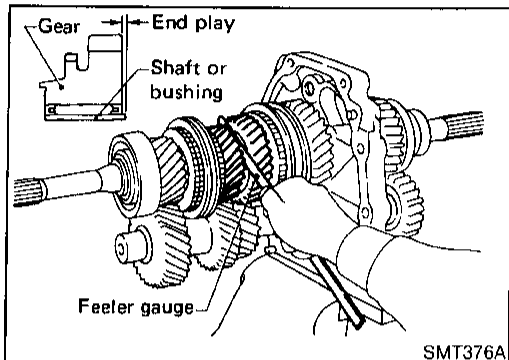

Gear Components DISASSEMBLY


NAMT0010

1. Before removing gears and shafts, measure each gear end play.


Gear end play:

Refer to SDS, MT-35.


- If not within specification, disassemble and check contact surface of gear to hub, washer, bushing, needle bearing and shaft.

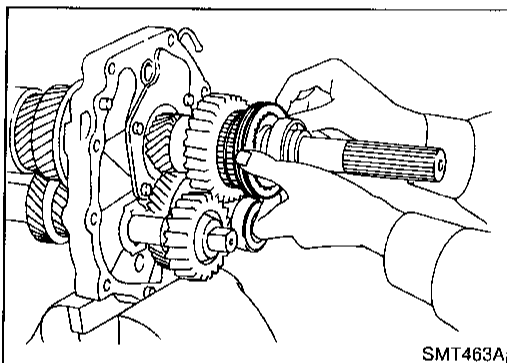

2. Remove rear side components on mainshaft and counter gear.
 - a. Remove reverse coupling sleeve.

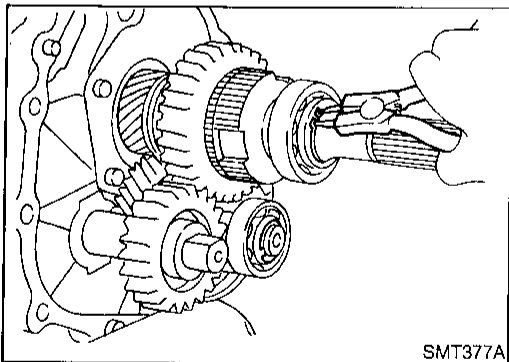


- b. Remove mainshaft rear snap ring and counter gear rear snap ring.
- c. Remove C-ring holder and mainshaft C-rings from mainshaft. Use punch and hammer to remove C-rings.

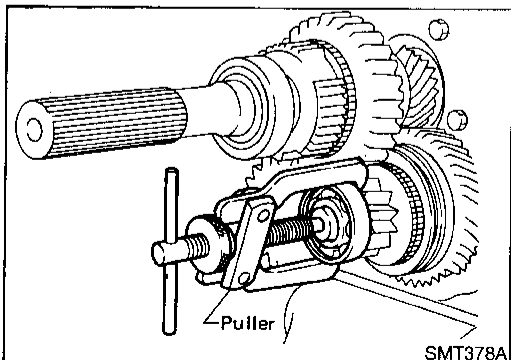

- d. Pull out counter gear rear end bearing.
- e. Remove reverse idler gear and reverse idler thrust washers.

DISASSEMBLY

Gear Components (Cont'd)

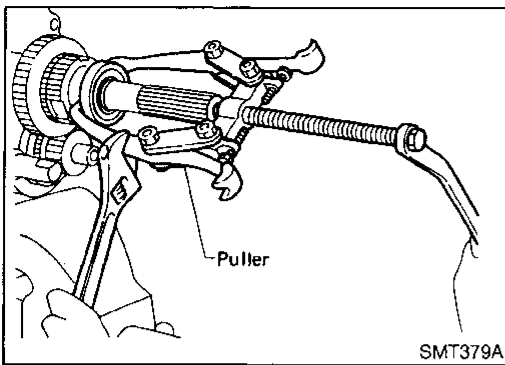

f. Pull out mainshaft rear bearing (2WD model).

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS


BT

HA


SC

EL

IDX

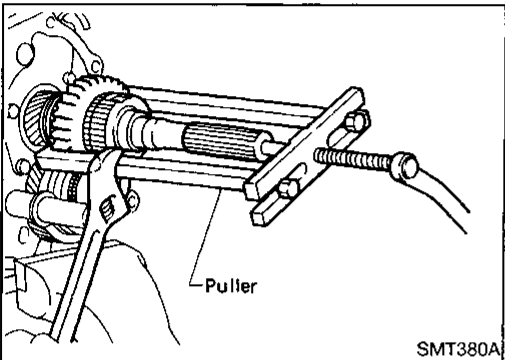


g. Pull out reverse main gear together with mainshaft spacer and reverse synchronizer hub. Then remove reverse gear needle bearings.

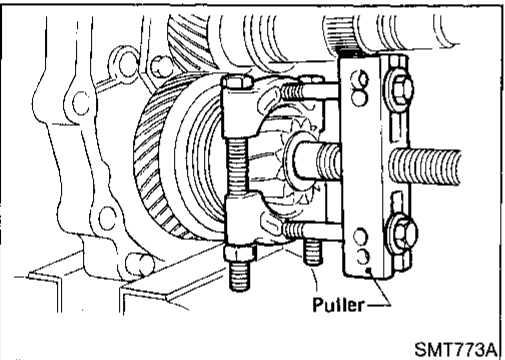


h. Pull out reverse counter gear.

i. Remove OD coupling sleeve together with OD baulk ring, reverse baulk ring and spring inserts.

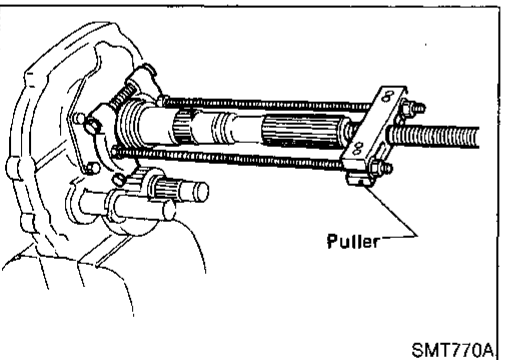



j. Pull out reverse gear bushing.

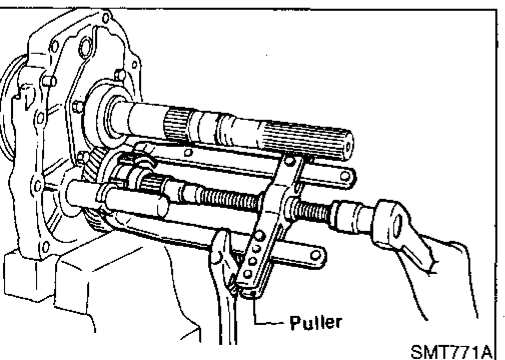


k. Pull out OD counter gear together with reverse cone.

DISASSEMBLY


3. Press out mainshaft and counter gear alternately.

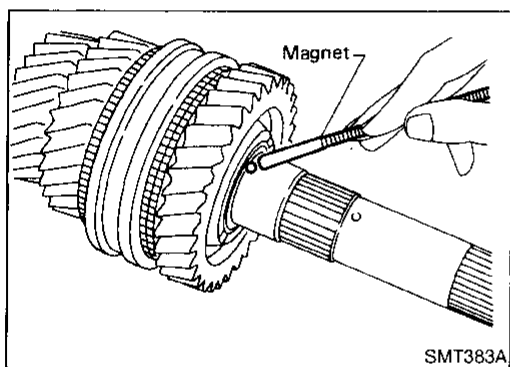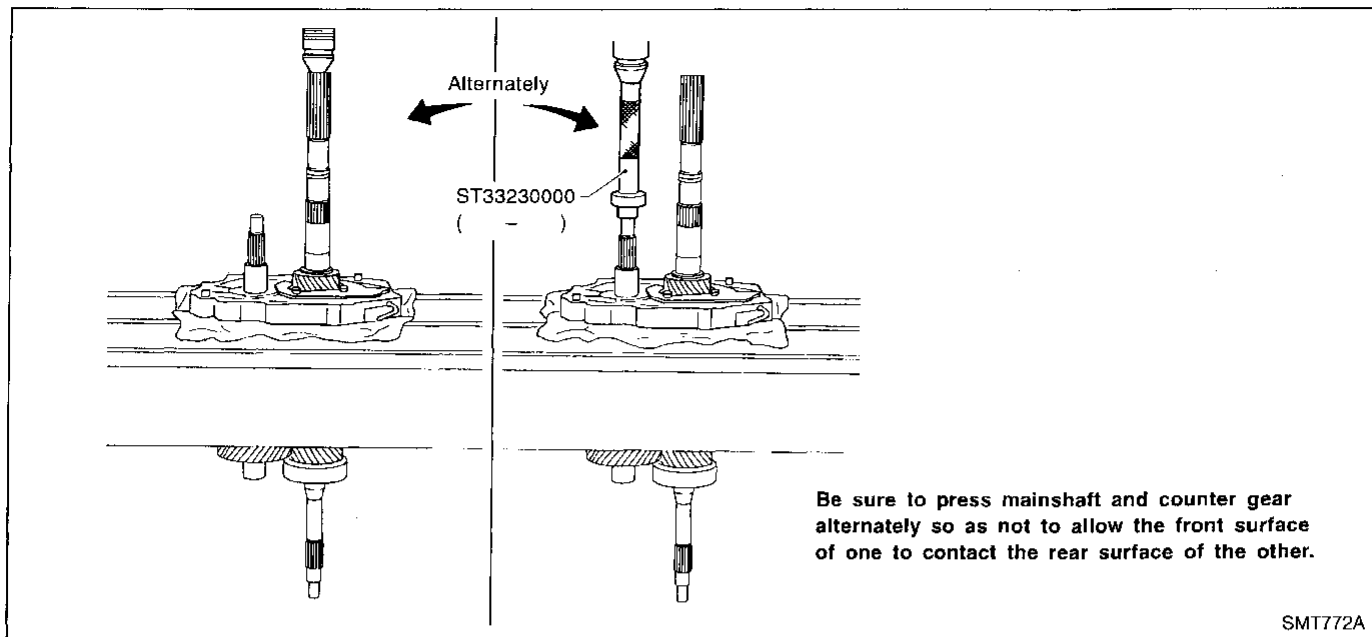

4. Remove front side components on mainshaft.
 - a. Remove 1st gear washer and steel ball.
 - b. Remove 1st main gear and 1st gear needle bearing.
 - **Be careful not to lose steel ball.**

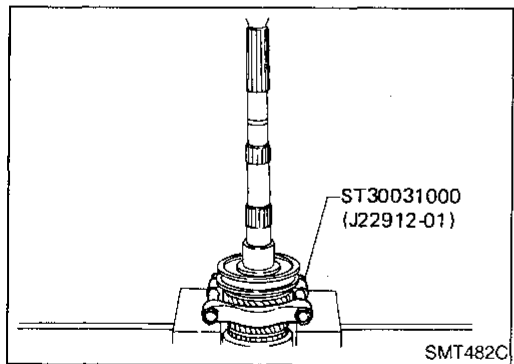

- c. Press out 2nd main gear together with 1st gear bushing and 1st & 2nd synchronizer assembly.
- d. Remove mainshaft front snap ring.

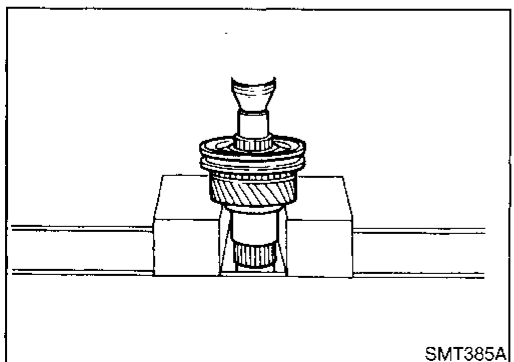


- e. Press out 3rd main gear together with 3rd & 4th synchronizer assembly and 3rd gear needle bearing.


DISASSEMBLY

Gear Components (Cont'd)


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

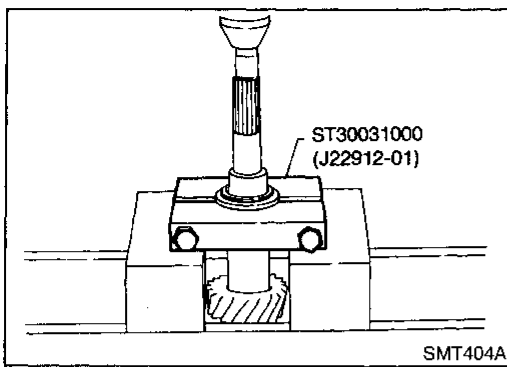

5. Remove front side components on counter gear.
 - a. Remove counter gear rear thrust bearing.

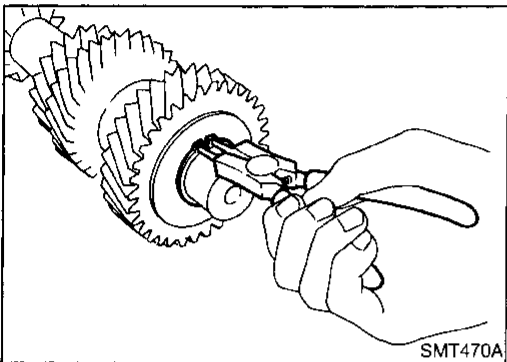

- b. Remove sub-gear components.

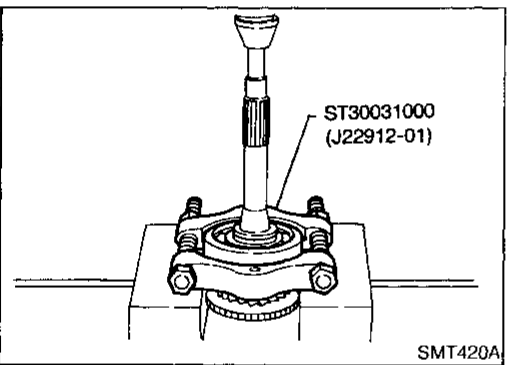


6. Remove main drive gear bearing.
 - a. Remove main drive gear snap ring.
 - b. Press out main drive gear bearing.

7. Remove bearings from case components.

| | |
|--|--|
| <p>Counter gear front bearing in transmission case</p> <p>ST22350000 (J25678-01)</p> <p>KV38100300 (J25523)</p> | <p>Mainshaft front bearing in adapter plate</p> <p>ST30720000 (J34331)</p> |
| <p>Mainshaft rear bearing in OD gear case (4WD model)</p> <p>ST37750000 (J34332)</p> | <p>Counter gear rear bearing in adapter plate</p> <p>ST37750000 (J34286)</p> <p>SMT206D</p> |

INSPECTION


Shift Control Components

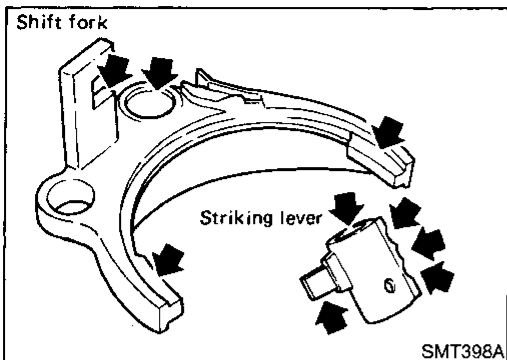

Shift Control Components

INSPECTION

- Check contact surface and sliding surface for wear, scratches, projections or other damage. NAMT0011


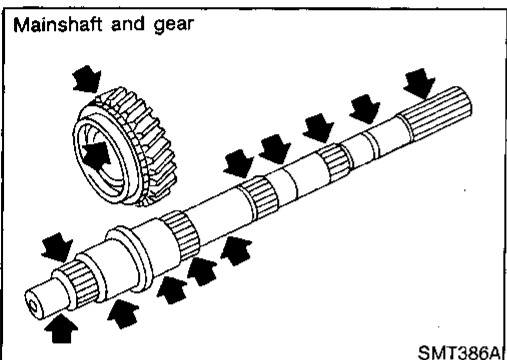


Gear Components

INSPECTION


Gears and Shafts

- Check shafts for cracks, wear or bending. NAMT0012
- Check gears for excessive wear, chips or cracks. NAMT0012S01

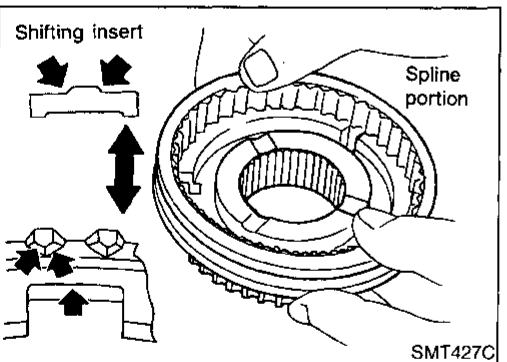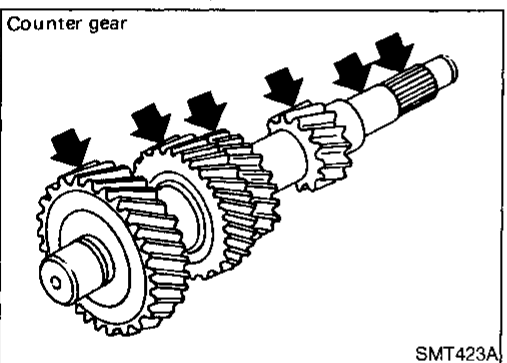

Synchronizers

- Check spline portion of coupling sleeves, hubs, and gears for wear or cracks. NAMT0012S02
- Check baulk rings for cracks or deformation.
- Check shifting inserts for wear or deformation.
- Check insert springs for deformation.

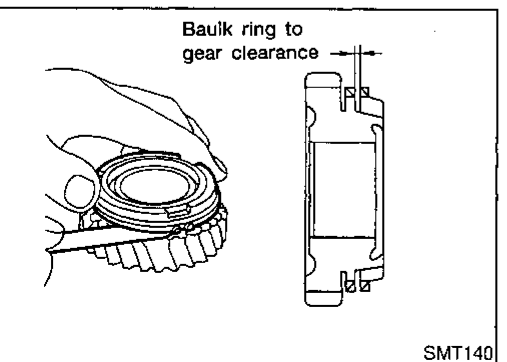


- Measure wear of main drive, 1st and OD baulk rings.

Clearance between baulk ring and gear:

Refer to SDS, MT-35.

- If the clearance is smaller than the wear limit, replace baulk ring.

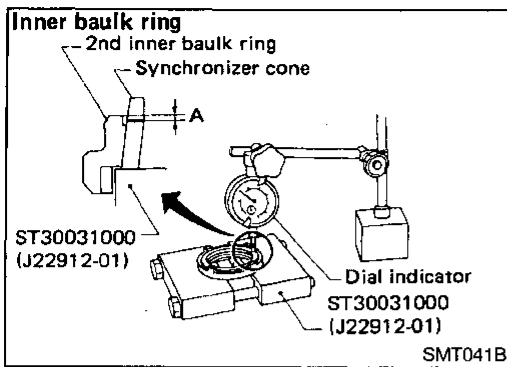

- Measure wear of 2nd and 3rd baulk rings.
- a) Place baulk rings in position on synchronizer cone.
- b) While holding baulk rings against synchronizer cone as far as it will go, measure dimensions "A" and "B".

Standard:



A 0.7 - 0.9 mm (0.028 - 0.035 in)

B 0.6 - 1.1 mm (0.024 - 0.043 in)

Wear limit:

0.2 mm (0.008 in)

- If dimension "A" or "B" is smaller than the wear limit, replace outer baulk ring, inner baulk ring and synchronizer cone as a set.

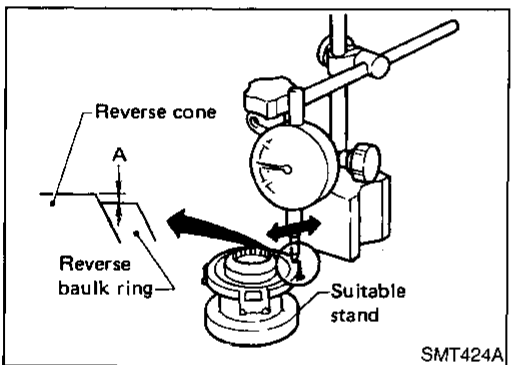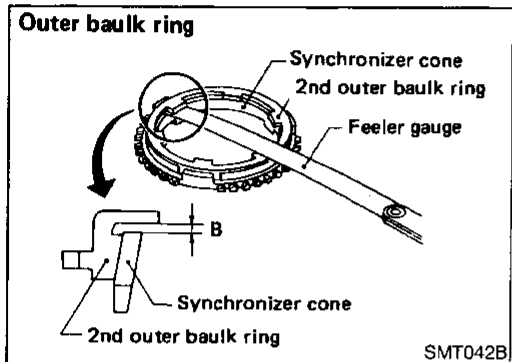


- Measure wear of reverse baulk ring.
- a) Place baulk ring in position on reverse cone.
- b) While holding baulk ring against reverse cone as far as it will go, measure dimension "A" with dial indicator.

Dimension "A":

Standard -0.1 to 0.35 mm (-0.0039 to 0.0138 in)

Wear limit 0.7 mm (0.028 in)

- c) If dimension "A" is larger than the wear limit, replace baulk ring.

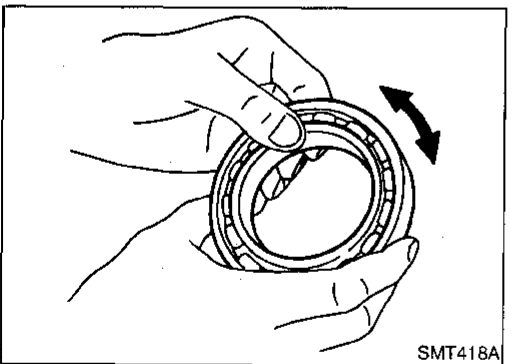

Bearings

- Make sure bearings roll freely and are free from noise, crack, pitting or wear.


NAMT0012S03

GI
 MA
 EM
 LC
 EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX


Gear Components ASSEMBLY

NAMT0013


Counter gear front bearing in transmission case

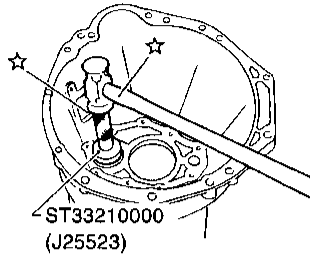


Mainshaft front bearing in adapter plate

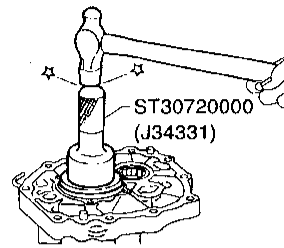

Mainshaft rear bearing in OD gear case
(4WD model)

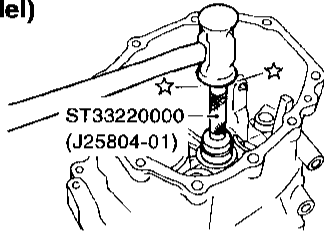


Counter gear rear bearing in adapter plate

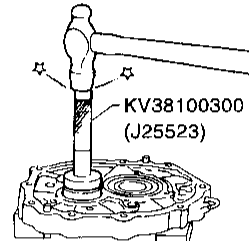


Be flush with front surface of OD gear case.


SMT207D

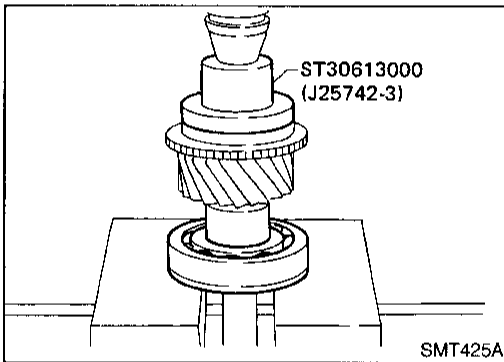

SMT425A

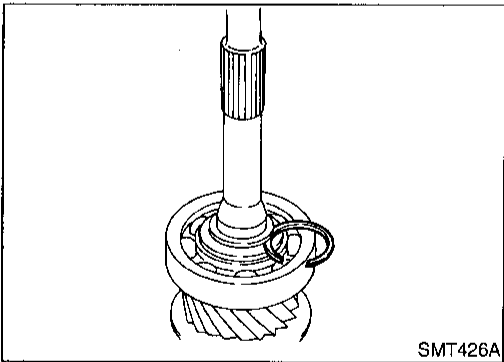


SMT426A

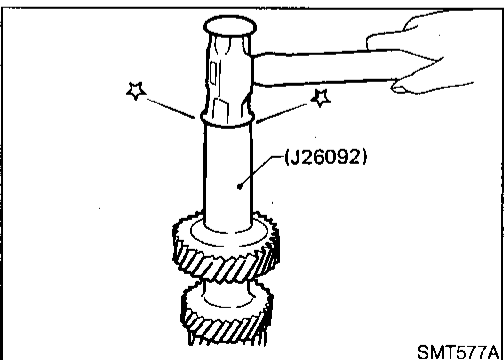


SMT577A

1. Install bearings into case components.
2. Install main drive gear bearing.
 - a. Press main drive gear bearing.
 - b. Select proper main drive gear snap ring to minimize clearance of groove.
 - Allowable clearance of groove:**
0 - 0.1 mm (0 - 0.004 in)
 - Main drive gear snap ring:**
Refer to SDS, MT-36.
 - c. Install selected snap ring on main drive gear.
3. Install components on counter gear.
 - a. Install sub-gear components.
 - When installing sub-gear snap ring, tap sub-gear snap ring into position on counter gear.

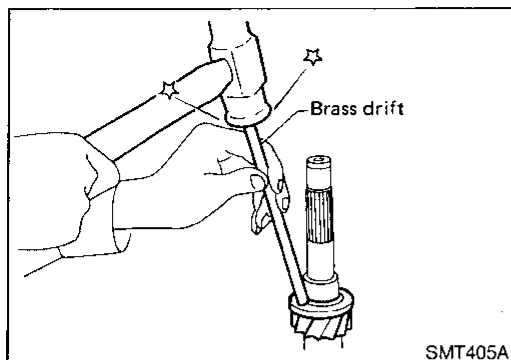


b. Install counter gear rear thrust bearing.

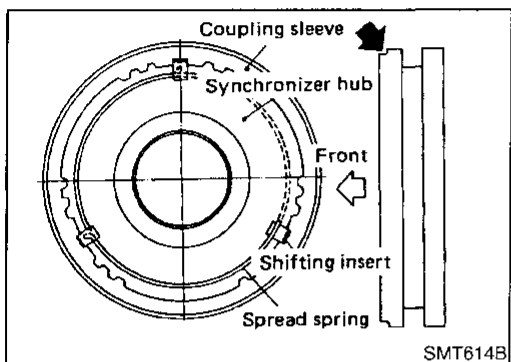


4. Install front side components on mainshaft.

a. Assemble 1st & 2nd synchronizer.

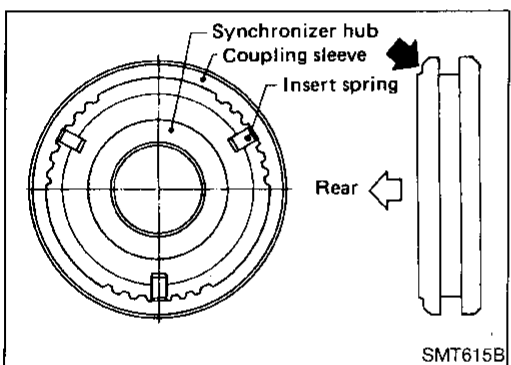


b. Assemble 3rd & 4th synchronizer.

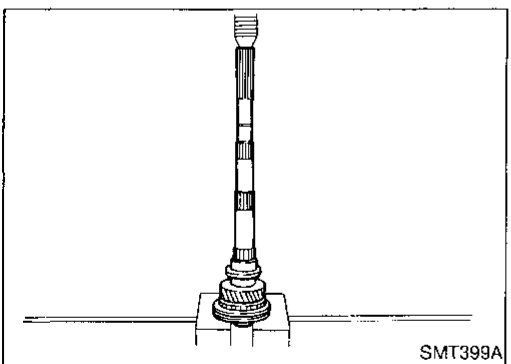

c. Press on 3rd & 4th synchronizer assembly together with 3rd main gear and 3rd gear needle bearing.

● Pay attention to direction of synchronizer assembly.

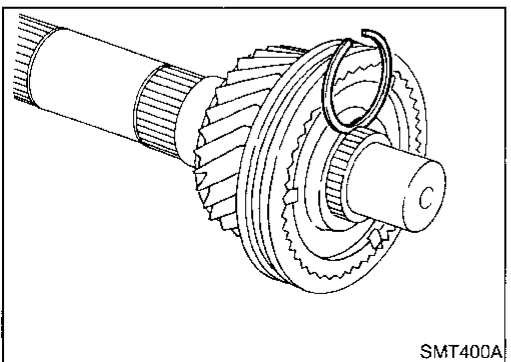

d. Select proper snap ring to minimize clearance of groove.

Allowable clearance of groove:

0 - 0.1 mm (0 - 0.004 in)

Mainshaft front snap ring:

Refer to SDS, MT-36.

e. Install selected snap ring on mainshaft.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL


IDX

ASSEMBLY


Gear Components (Cont'd)

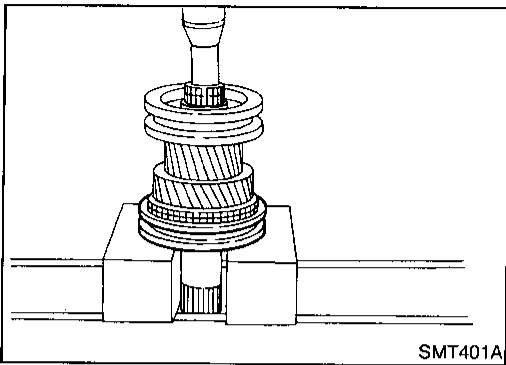


- f. Press on 1st & 2nd synchronizer assembly together with 2nd main gear and 2nd gear needle bearing.

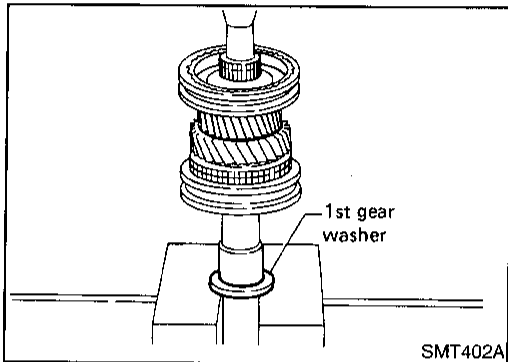


- g. Press on 1st gear bushing using 1st gear washer.
- h. Install 1st main gear and needle bearing.

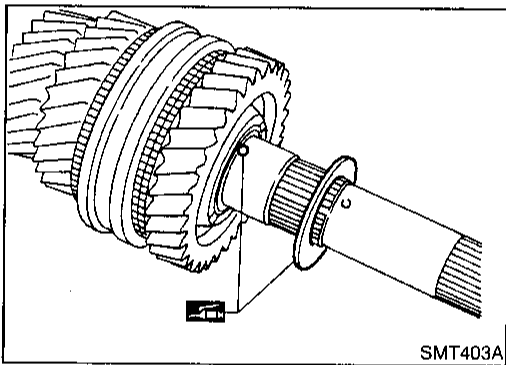

- i. Install steel ball and 1st gear washer.
- **Apply multi-purpose grease to steel ball and 1st gear washer before installing.**

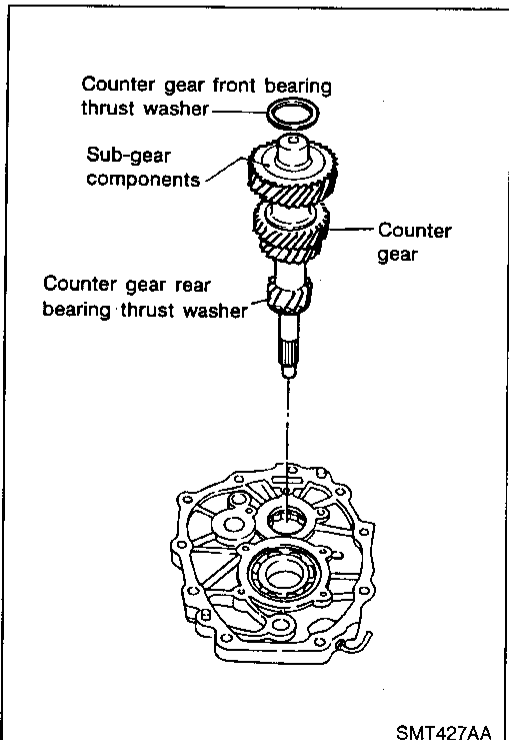

5. Select proper counter gear front bearing thrust washer when replacing transmission case, counter gear, counter gear rear thrust bearing or sub-gear components.
 - a. Install counter gear with sub-gear components, counter gear front and rear bearing thrust washer on adapter plate.
 - b. Remove counter gear front bearing thrust washer from transmission case.
 - c. Place adapter plate and counter gear assembly in transmission case (case inverted).

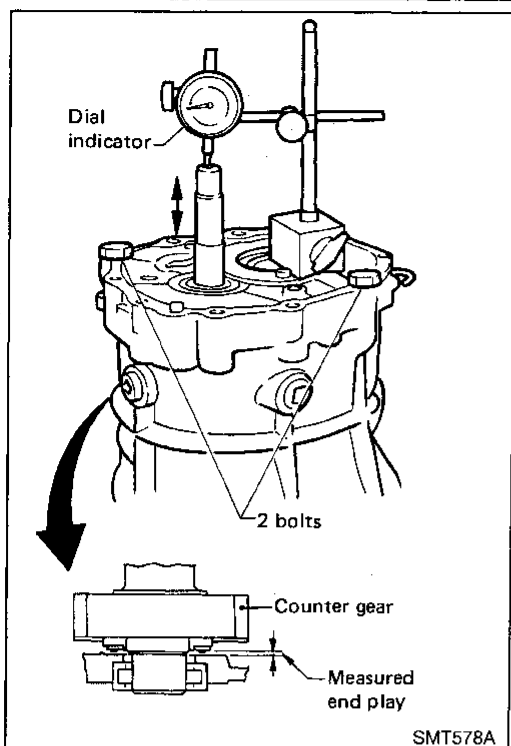


- d. Tighten adapter plate to transmission case using 2 bolts.
- e. Place dial indicator on rear end of counter gear.
- f. Move counter gear up and down and measure dial indicator deflection.
- g. Select proper thrust washer using table below as a guide.

Counter gear end play:

0.10 - 0.25 mm (0.0039 - 0.0098 in)

Table for selecting proper counter gear front bearing thrust washer:

Refer to SDS, MT-37.

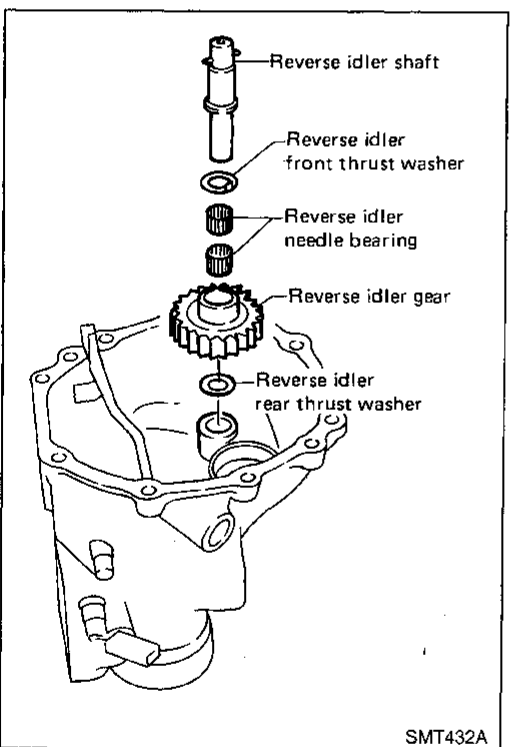

6. Select proper reverse idler rear thrust washer when replacing rear extension (or OD gear case), reverse idler gear, reverse idler shaft or reverse idler front thrust washer.
- a. Install reverse idler gear, reverse idler needle bearings, reverse idler front thrust washers and reverse idler shaft into rear extension (or OD gear case).

- **When replacing reverse idler rear thrust washer, install either A or B.**


Reverse idler rear thrust washer:

Refer to SDS, MT-37.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ASSEMBLY

Gear Components (Cont'd)

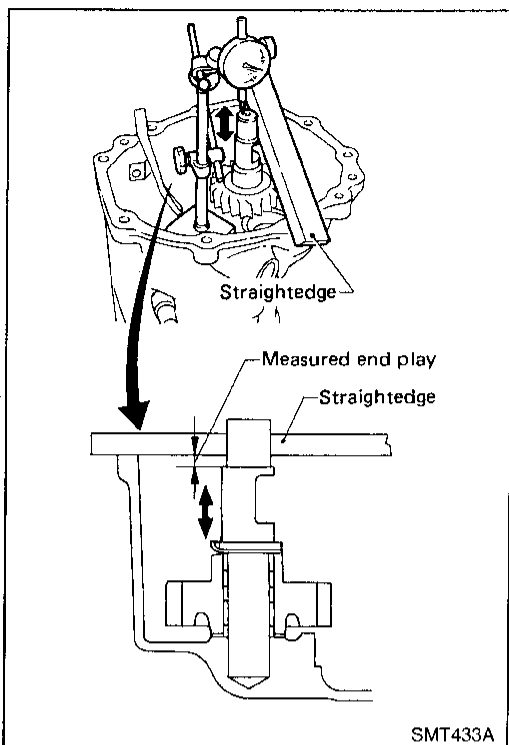


- b. Place dial indicator on front end of reverse idler shaft.
- c. Put straightedge on front surface of rear extension (or OD gear case) as a stopper of reverse idler shaft.
- d. Move reverse idler shaft up and down and measure reverse idler gear end play.


Reverse idler gear end play:

0.30 - 0.53 mm (0.0118 - 0.0209 in)


- e. If not within specification, replace reverse idler rear thrust washer with the other (A or B) and check again.

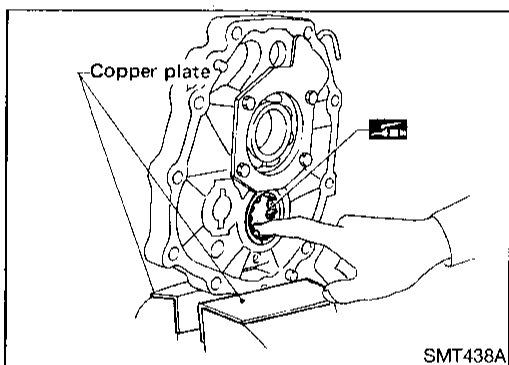

7. Install mainshaft and counter gear on adapter plate and main drive gear on mainshaft.
 - a. Mount adapter plate on vise and apply multi-purpose grease to counter gear rear bearing.

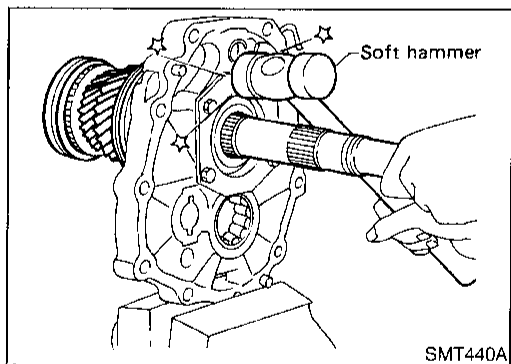






- b. Install mainshaft a little on mainshaft front bearing.
 - **To allow for installation of counter gear, do not install mainshaft completely.**

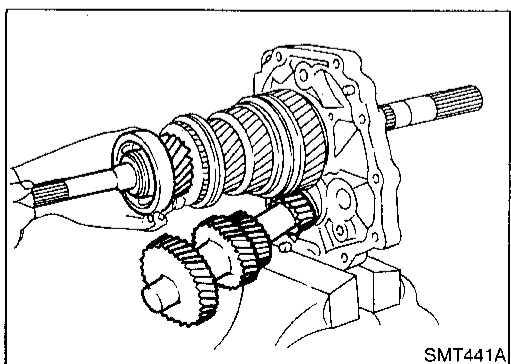

- c. Install counter gear on counter gear rear bearing and install main drive gear, pilot bearing and spacer on mainshaft.

ASSEMBLY

Gear Components (Cont'd)

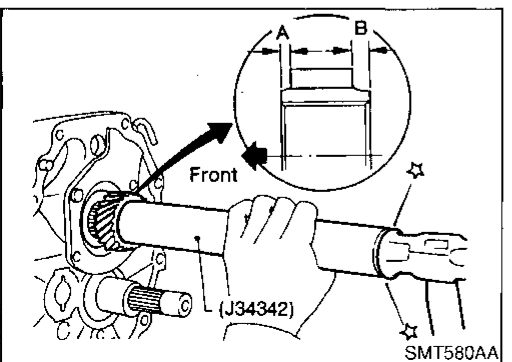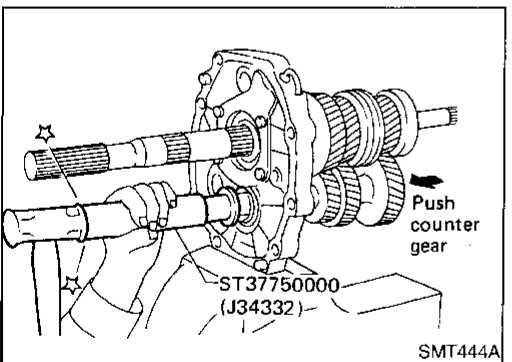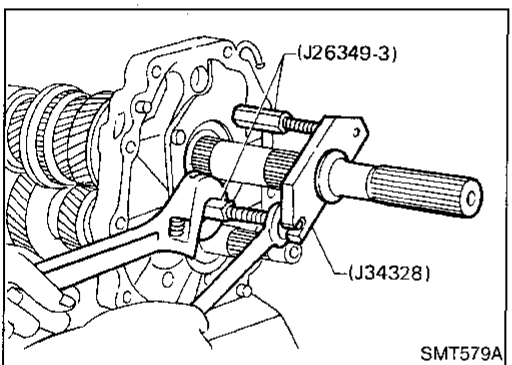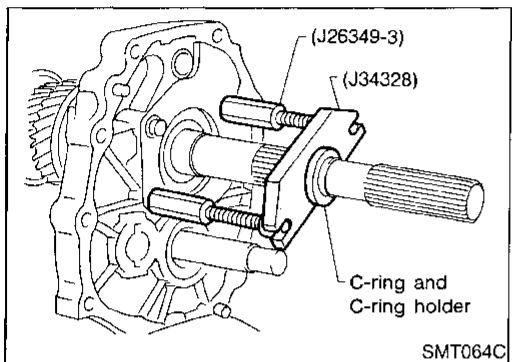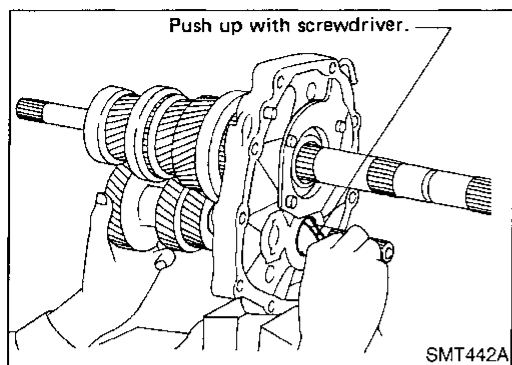

- When installing counter gear into counter gear rear bearing, push up on upper roller of counter gear rear bearing with screwdriver.

- Install Tools (J26349-3) onto adapter plate and C-ring and C-ring holder on mainshaft.
- Install Tool (J34328) on mainshaft.

- Install mainshaft and counter gear completely by extending length of (J26349-3).

- Install rear side components on mainshaft and counter gear.
 - Install OD gear bushing while pushing on the front of counter gear.

- Install OD main gear.
 - Pay attention to direction of OD main gear. (B is wider than A as shown at left.)
- Install adapter plate with gear assembly onto transmission case.
- Install OD gear needle bearing and then install OD counter gear and reverse idler shaft.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA


SC

EL


IDX

ASSEMBLY


Gear Components (Cont'd)

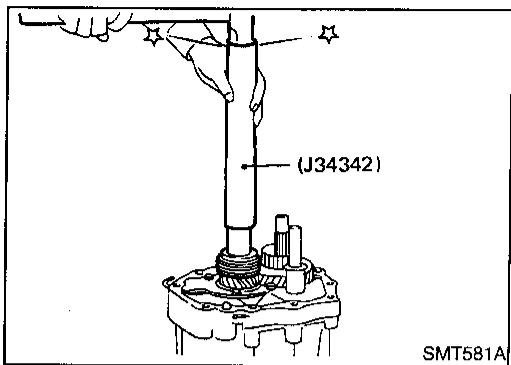

- e. Install reverse gear bushing with speedometer drive gear (2WD model).

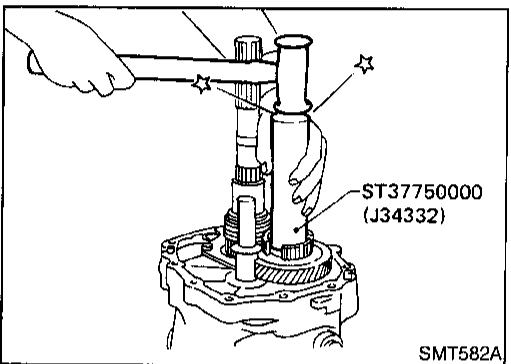


- f. Install reverse cone.

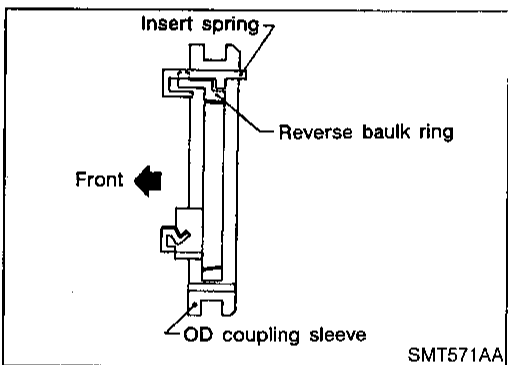


- g. Install insert springs and reverse baulk ring on OD coupling sleeve. Then install them and OD baulk ring on OD counter gear.

- Pay attention to direction of OD coupling sleeve.

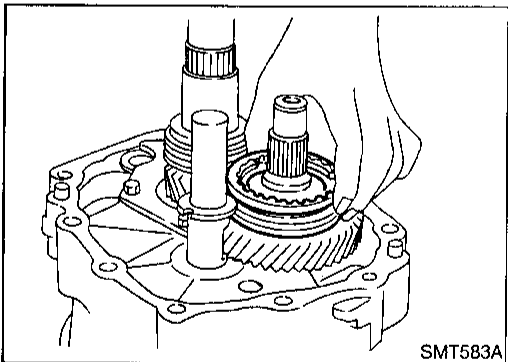


- h. Install reverse counter gear.

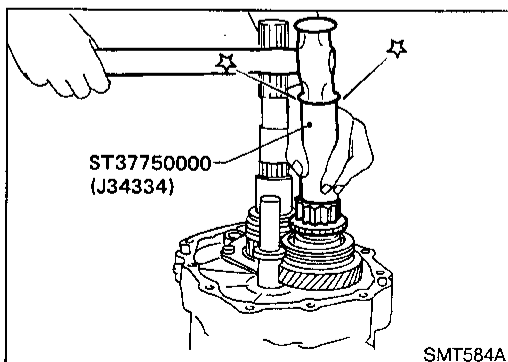

- i. Install reverse gear needle bearing and then install reverse main gear, reverse idler gear and reverse idler thrust washers.

ASSEMBLY

Gear Components (Cont'd)

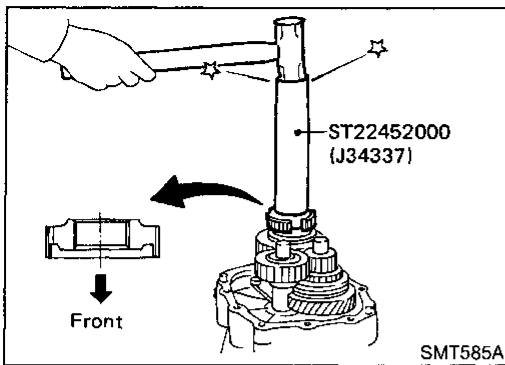

- j. Install reverse hub.
 ● Pay attention to its direction.

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS


BT

HA


SC

EL


IDX

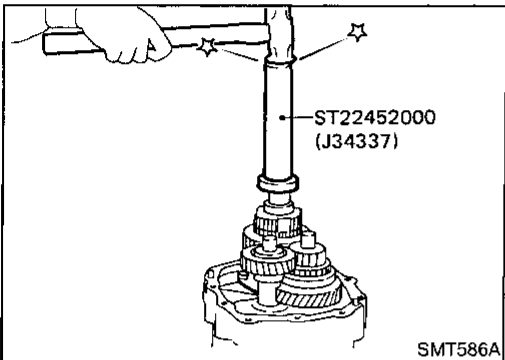

- k. Install mainshaft spacer and mainshaft rear bearing (2WD model).

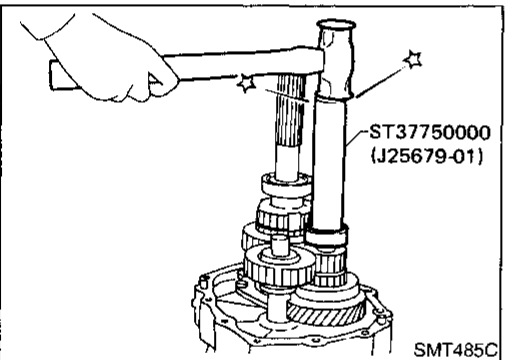

- l. Install counter gear rear end bearing.
 m. Separate adapter plate from transmission case and mount adapter plate on vice again.

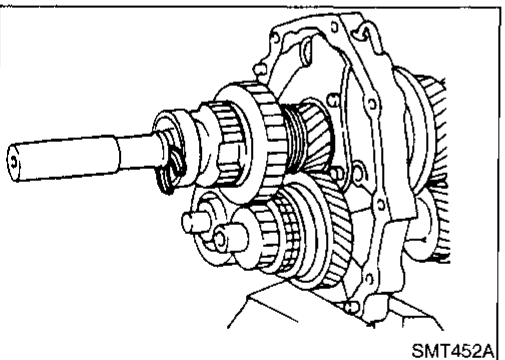


- n. Select proper mainshaft C-ring to minimize clearance of groove.

Allowable clearance of groove:

0 - 0.1 mm (0 - 0.004 in)

Mainshaft C-ring:


Refer to SDS, MT-37.

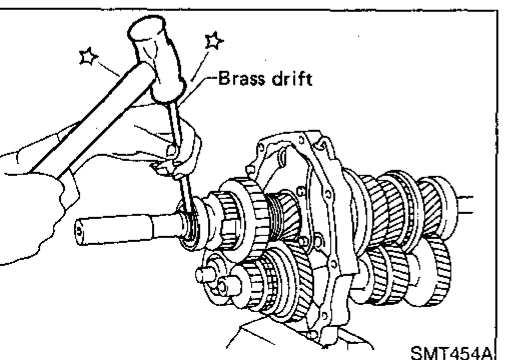

- o. Install selected C-ring, C-ring holder and mainshaft rear snap ring.

ASSEMBLY

Gear Components (Cont'd)

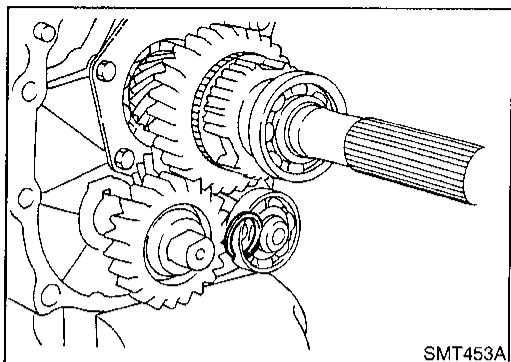

- p. Select proper counter gear rear snap ring to minimize clearance of groove.



Allowable clearance of groove:

0 - 0.1 mm (0 - 0.004 in)

Counter gear rear snap ring:

Refer to SDS, MT-37.


- q. Install selected counter gear rear snap ring.

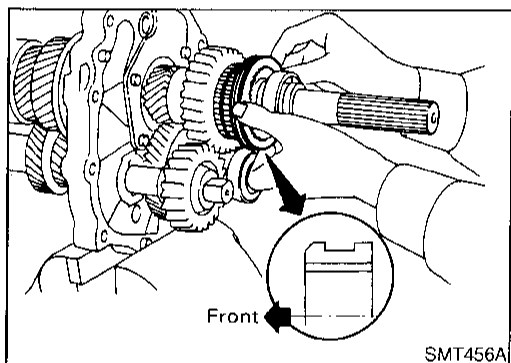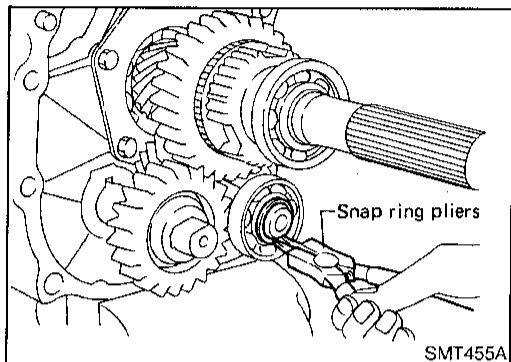

- r. Install reverse coupling sleeve.

● **Pay attention to its direction.**

- s. Measure each gear end play as a final check. Refer to "DISASSEMBLY", MT-18.

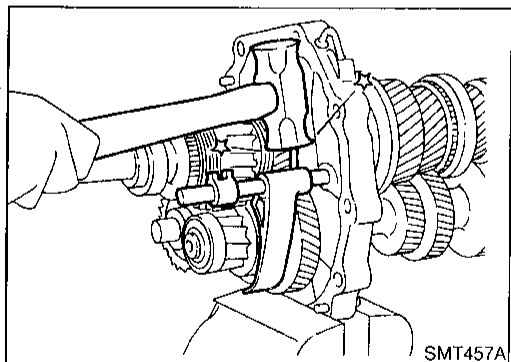


Shift Control Components

ASSEMBLY

NAMT0014

1. Install OD fork rod and OD shift fork. Then install retaining pin into OD shift fork.
2. Install 1st & 2nd, 3rd & 4th and reverse shift fork onto coupling sleeve.

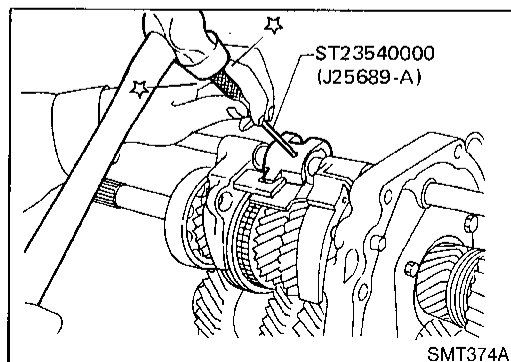

3. Install striking rod into hole of shift forks, striking lever and interlock and then install retaining pin into striking lever.






● **Make sure that striking rod moves smoothly.**

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

Case Components

ASSEMBLY


NAMT0015

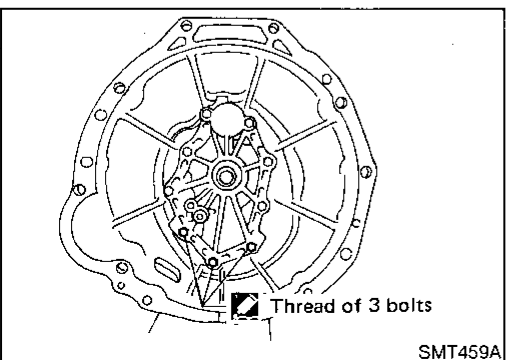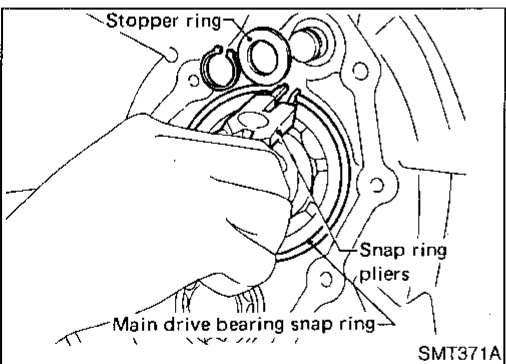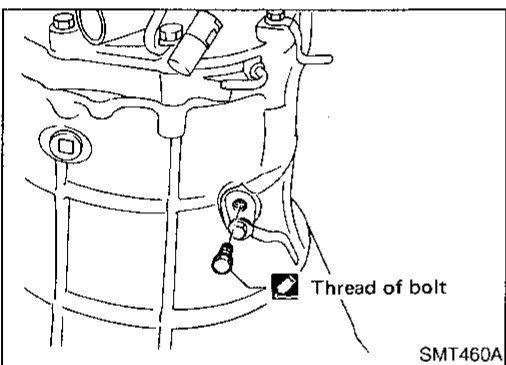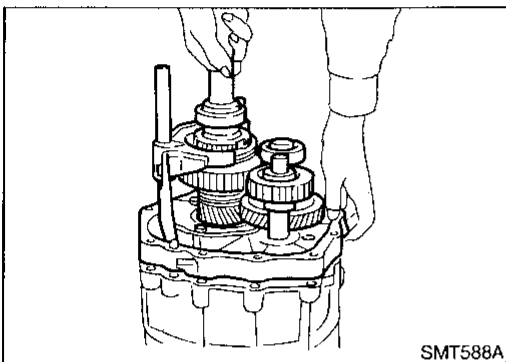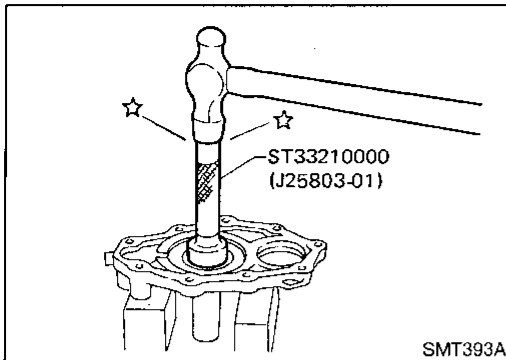


1. Install front cover oil seal.
 - **Apply multi-purpose grease to seal lip.**
2. Install selected counter gear front bearing shim onto transmission case.
 - **Apply multi-purpose grease.**
3. Apply sealant to mating surface of transmission case.
4. Install gear assembly onto transmission case.
5. Install check spring and check ball into interlock stopper.
 - **Apply multi-purpose grease to check ball.**
6. Install interlock stopper assembly and then tighten check ball plug.
 - **Apply sealant to thread of check ball plug. Refer to Shift Control Components, MT-15.**
7. Install stopper ring and main drive bearing snap ring.
8. Install front cover and gasket.
 - **Apply sealant to thread of 3 bolts shown left. Refer to Case Components, MT-12.**
9. Apply sealant to mating surface of adapter plate.

ASSEMBLY


Case Components (Cont'd)

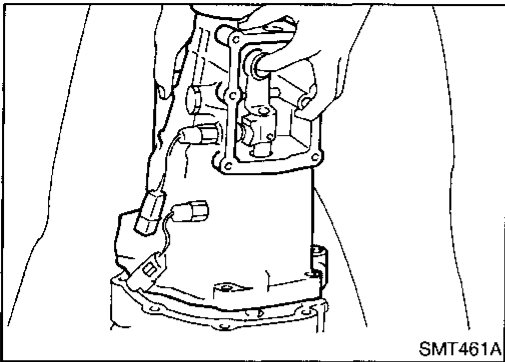

10. Install rear extension (or OD gear case) together with striking arm.

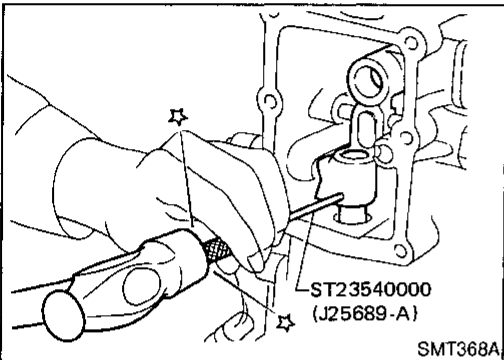


11. Install retaining pin into striking arm.

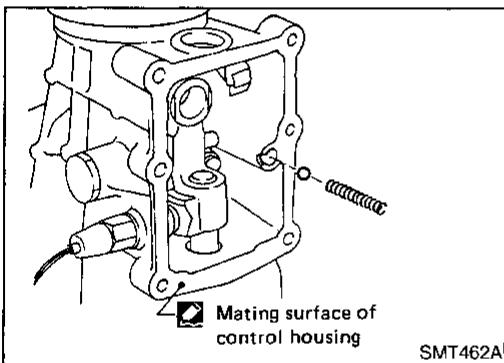

12. Install return spring and check ball and then install control housing.

- **Apply sealant to mating surface of rear extension (or OD gear case).**
Refer to Case Components, MT-12.

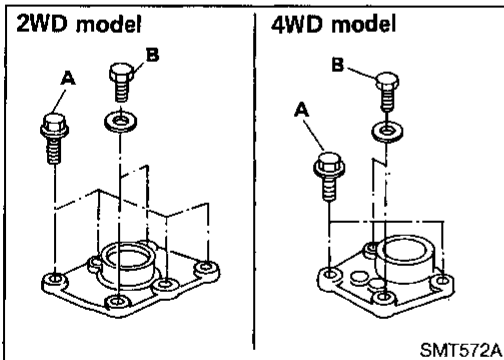

13. Tighten control housing bolts.

Bolt head size:

A bolts 12 mm (0.47 in)

B bolts 13 mm (0.51 in)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

General Specifications

NAMT0016

| | | | |
|--------------------------------|---|-----------------|-----------------|
| Applied model | VG33E | | |
| | 2WD | | 4WD |
| | Van | Wagon | |
| Transmission | FS5R30A | | |
| Number of speed | 5 | | |
| Shift pattern | | | |
| Synchromesh type | Warner | | |
| | Gear ratio | Number of teeth | |
| | | Mainshaft | Countershaft |
| Drive | — | 22 | 32 |
| 1st | 3.580 | 32 | 13 |
| 2nd | 2.077 | 30 | 21 |
| 3rd | 1.360 | 29 | 31 |
| 4th | 1.000 | — | — |
| OD | 0.811 | 24 | 43 |
| Reverse | 3.636 | 30 | 12 |
| Reverse idler gear | 22 | | |
| Oil capacity ℓ (US pt, Imp pt) | 2.4 (5-1/8, 4-1/4) | | 5.1 (10-3/4, 9) |
| Remarks | 2nd & 3rd double baulk ring type synchronizer | | |

Gear End Play

NAMT0017
Unit: mm (in)

| Gear | End play |
|--------------------|-------------------------------|
| 1st main gear | 0.23 - 0.33 (0.0091 - 0.0130) |
| 2nd main gear | 0.23 - 0.33 (0.0091 - 0.0130) |
| 3rd main gear | 0.06 - 0.16 (0.0024 - 0.0063) |
| OD counter gear | 0.23 - 0.33 (0.0091 - 0.0130) |
| Reverse main gear | 0.33 - 0.43 (0.0130 - 0.0169) |
| Counter gear | 0.10 - 0.25 (0.0039 - 0.0098) |
| Reverse idler gear | 0.30 - 0.53 (0.0118 - 0.0209) |

Clearance Between Baulk Ring and Gear

NAMT0018
Unit: mm (in)


| | Standard | Wear limit |
|------------|------------------------------|-------------|
| 1st | 1.05 - 1.3 (0.0413 - 0.0512) | 0.7 (0.028) |
| Main drive | 1.05 - 1.3 (0.0413 - 0.0512) | |
| OD | 1.05 - 1.3 (0.0413 - 0.0512) | |

SERVICE DATA AND SPECIFICATIONS (SDS)

Clearance Between Baulk Ring and Gear (Cont'd)

2ND AND 3RD BAULK RING

NAMT0018S01
Unit: mm (in)

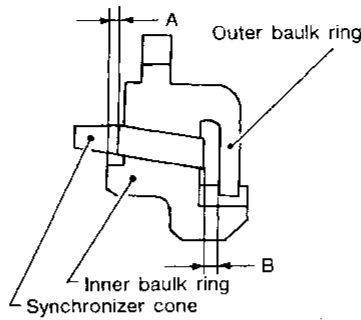


SMT742C

| Dimension | Standard | Wear limit |
|-----------|---------------------------|-------------|
| A | 0.7 - 0.9 (0.028 - 0.035) | 0.2 (0.008) |
| B | 0.6 - 1.1 (0.024 - 0.043) | |

Distance between Rear Surface of Reverse Cone and Reverse Baulk Ring

NAMT0019
Unit: mm (in)

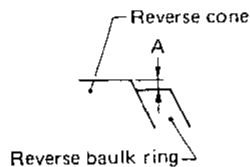

SMT428C

| Dimension "A" | Standard | Wear limit |
|---------------|----------------------------------|-------------|
| | -0.1 to 0.35 (-0.0039 to 0.0138) | 0.7 (0.028) |

Available Snap Ring

NAM10020

MAIN DRIVE GEAR SNAP RING

NAMT0020S01
Unit: mm (in)

| Allowable clearance | | 0 - 0.1 (0 - 0.004) | |
|---------------------|-------------|---------------------|-------------|
| Thickness | Part number | Thickness | Part number |
| 1.89 (0.0744) | 32204-01G60 | 2.03 (0.0799) | 32204-01G63 |
| 1.95 (0.0768) | 32204-01G61 | 2.07 (0.0815) | 32204-01G64 |
| 1.99 (0.0783) | 32204-01G62 | 2.11 (0.0831) | 32204-01G65 |

MAINSHAFT FRONT SNAP RING

NAMT0020S02
Unit: mm (in)

| Allowable clearance | | 0 - 0.1 (0 - 0.004) | |
|---------------------|-------------|---------------------|-------------|
| Thickness | Part number | Thickness | Part number |
| 1.99 (0.0783) | 32204-01G62 | 2.11 (0.0831) | 32204-01G65 |
| 2.03 (0.0799) | 32204-01G63 | 2.15 (0.0846) | 32204-01G66 |
| 2.07 (0.0815) | 32204-01G64 | 2.19 (0.0862) | 32204-01G67 |

SERVICE DATA AND SPECIFICATIONS (SDS)

Available Snap Ring (Cont'd)

COUNTER GEAR REAR SNAP RING

NAMT0020S03
Unit: mm (in)

| Allowable clearance | | 0 - 0.1 (0 - 0.004) | |
|---------------------|-------------|---------------------|-------------|
| Thickness | Part number | Thickness | Part number |
| 1.32 (0.0520) | 32236-01G00 | 1.56 (0.0614) | 32236-01G04 |
| 1.38 (0.0543) | 32236-01G01 | 1.62 (0.0638) | 32236-01G05 |
| 1.44 (0.0567) | 32236-01G02 | 1.68 (0.0661) | 32236-01G06 |
| 1.50 (0.0591) | 32236-01G03 | 1.74 (0.0685) | 32236-01G07 |

Available C-ring

MAINSHAFT C-RING

NAMT0021

NAMT0021S01
Unit: mm (in)

| Allowable clearance | | 0 - 0.1 (0 - 0.004) | |
|---------------------|-------------|---------------------|-------------|
| Thickness | Part number | Thickness | Part number |
| 2.63 (0.1035) | 32348-01G15 | 3.19 (0.1256) | 32348-01G07 |
| 2.70 (0.1063) | 32348-01G00 | 3.26 (0.1283) | 32348-01G08 |
| 2.77 (0.1091) | 32348-01G01 | 3.33 (0.1311) | 32348-01G09 |
| 2.84 (0.1118) | 32348-01G02 | 3.40 (0.1339) | 32348-01G10 |
| 2.91 (0.1146) | 32348-01G03 | 3.47 (0.1366) | 32348-01G11 |
| 2.98 (0.1173) | 32348-01G04 | 3.54 (0.1394) | 32348-01G12 |
| 3.05 (0.1201) | 32348-01G05 | 3.61 (0.1421) | 32348-01G13 |
| 3.12 (0.1228) | 32348-01G06 | 3.68 (0.1449) | 32348-01G14 |

Available Shim and Washer

TABLE FOR SELECTING PROPER COUNTER GEAR FRONT BEARING THRUST WASHER

NAMT0022
NAMT0022S01
Unit: mm (in)

| Dial indicator deflection | Thickness of proper washer | Part number |
|-------------------------------|----------------------------|-------------|
| 0.93 - 1.02 (0.0366 - 0.0402) | 0.80 (0.0315) | 32218-01G00 |
| 1.01 - 1.10 (0.0398 - 0.0433) | 0.88 (0.0346) | 32218-01G11 |
| 1.09 - 1.18 (0.0429 - 0.0465) | 0.96 (0.0378) | 32218-01G12 |
| 1.17 - 1.26 (0.0461 - 0.0496) | 1.04 (0.0409) | 32218-01G13 |
| 1.25 - 1.34 (0.0492 - 0.0528) | 1.12 (0.0441) | 32218-01G14 |
| 1.33 - 1.42 (0.0524 - 0.0559) | 1.20 (0.0472) | 32218-01G04 |
| 1.41 - 1.50 (0.0555 - 0.0591) | 1.28 (0.0504) | 32218-01G15 |
| 1.49 - 1.58 (0.0587 - 0.0622) | 1.36 (0.0535) | 32218-01G16 |
| 1.57 - 1.66 (0.0618 - 0.0654) | 1.44 (0.0567) | 32218-01G17 |

REVERSE IDLER REAR THRUST WASHER

NAMT0022S02
Unit: mm (in)

| | Thickness | Part number |
|---|---------------|-------------|
| A | 1.97 (0.0776) | 32284-01G10 |
| B | 2.07 (0.0815) | 32284-01G11 |