

ENGINE LUBRICATION & COOLING SYSTEMS

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX



SECTION LC

CONTENTS

ENGINE LUBRICATION SYSTEM2	CHECKING COOLING SYSTEM HOSES.....8	
Precautions.....2	CHECKING RADIATOR CAP.....8	
LIQUID GASKET APPLICATION PROCEDURE.....2	CHECKING COOLING SYSTEM FOR LEAKS.....9	
Preparation.....2	Water Pump.....9	
SPECIAL SERVICE TOOLS.....2	REMOVAL AND INSTALLATION.....9	
Lubrication Circuit.....3	INSPECTION.....10	
Oil Pressure Check.....3	Thermostat.....10	
Oil Pump.....4	REMOVAL.....10	
REMOVAL AND INSTALLATION.....4	INSPECTION.....11	
DISASSEMBLY AND ASSEMBLY.....4	INSTALLATION.....11	
INSPECTION.....5	Radiator.....12	
REGULATOR VALVE INSPECTION.....5	REMOVAL AND INSTALLATION.....12	
OIL FILTER.....5	COMPONENTS.....12	
OIL FILTER BRACKET.....6	PREPARATION.....13	
Service Data and Specifications (SDS).....6	DISASSEMBLY.....13	
OIL PRESSURE.....6	ASSEMBLY.....14	
REGULATOR VALVE.....6	INSPECTION.....15	
OIL PUMP.....6	Cooling Fan (Crankshaft driven).....16	
ENGINE COOLING SYSTEM7	REMOVAL AND INSTALLATION.....16	
Precautions.....7	INSPECTION.....16	
LIQUID GASKET APPLICATION PROCEDURE.....7	Refilling Engine Coolant.....17	
Preparation.....7	Overheating Cause Analysis.....17	
SPECIAL SERVICE TOOLS.....7	Service Data and Specifications (SDS).....18	
Cooling Circuit.....8	THERMOSTAT.....18	
System Check.....8	RADIATOR.....18	

ENGINE LUBRICATION SYSTEM

Precautions

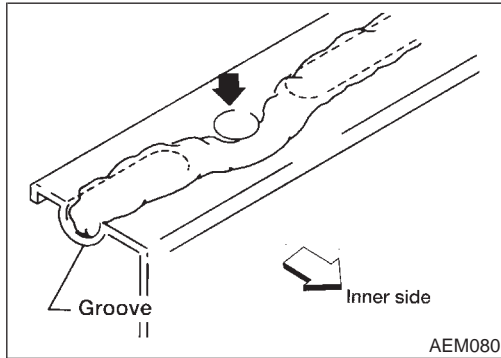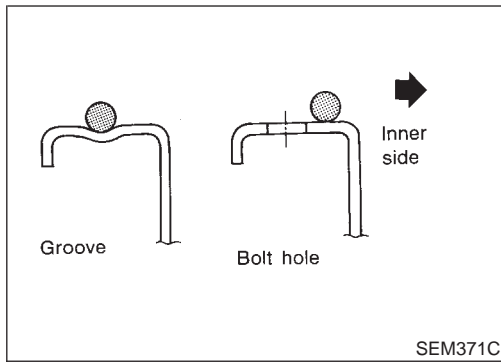

Precautions

LIQUID GASKET APPLICATION PROCEDURE

NALC0001





1. Use a scraper to remove all traces of old liquid gasket from mating surface and grooves. Also, completely clean any oil from these areas.
2. Apply a continuous bead of liquid gasket to mating surfaces. (Use Genuine RTV silicone sealant Part No. 999MP-A7007 or equivalent.)
 - **Be sure liquid gasket is 3.5 to 4.5 mm (0.138 to 0.177 in) dia. (for oil pan).**
 - **Be sure liquid gasket is 2.0 to 3.0 mm (0.079 to 0.118 in) dia. (in areas except oil pan).**
3. Apply liquid gasket around the inner side of bolt holes (unless otherwise specified).
4. Assembly should be done within 5 minutes after coating.
5. Wait at least 30 minutes before refilling engine oil and engine coolant.




Preparation

SPECIAL SERVICE TOOLS

NALC0002

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

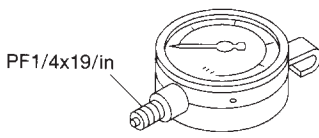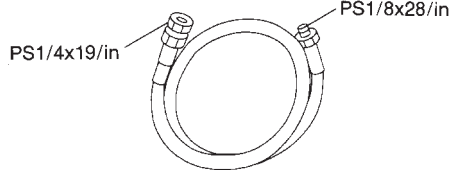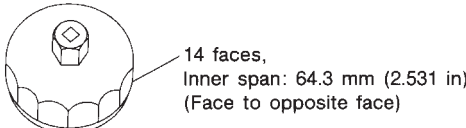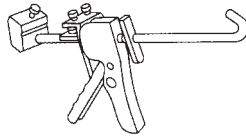Tool number (Kent-Moore No.) Tool name	Description
ST25051001 (J25695-1) Oil pressure gauge	 <p>Measuring oil pressure Maximum measuring range: 2,452 kPa (25 kg/cm², 356 psi)</p> <p>NT558</p>
ST25052000 (J25695-2) Hose	 <p>Adapting oil pressure gauge to cylinder block</p> <p>NT559</p>
KV10115801 (J38956) Oil filter wrench	 <p>Removing oil filter</p> <p>14 faces, Inner span: 64.3 mm (2.531 in) (Face to opposite face)</p> <p>NT362</p>
WS39930000 () Tube presser	 <p>Pressing the tube of liquid gasket</p> <p>NT052</p>

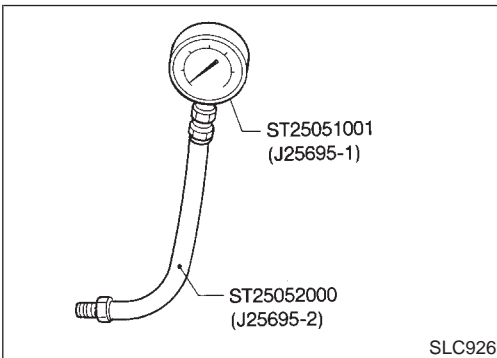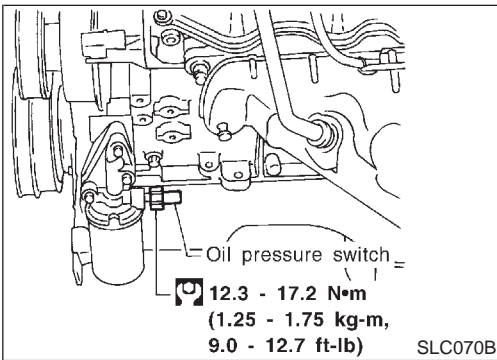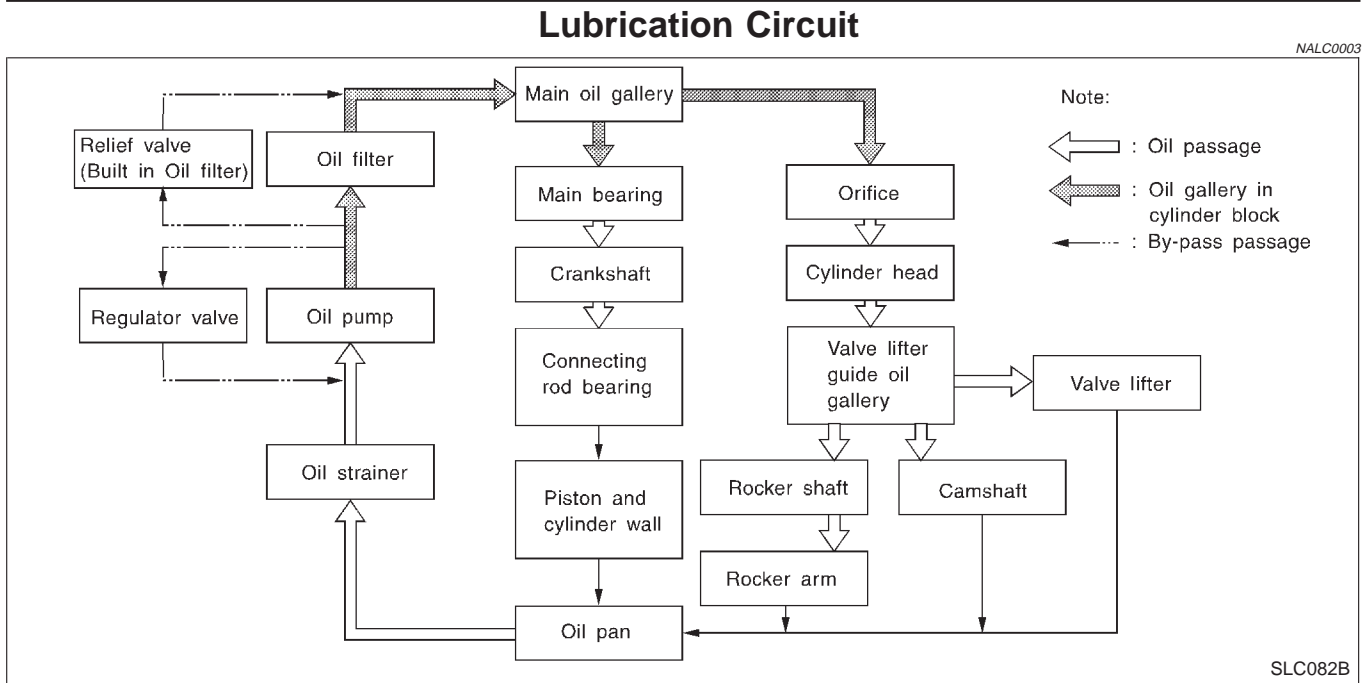

Oil Pressure Check

NALC0004

WARNING:

- Be careful not to burn yourself, as the engine and oil may be hot.
- Oil pressure check should be done in “Neutral position” (MT) or “Parking position” (AT).

1. Check oil level.
2. Remove oil pressure switch.
3. Install pressure gauge.
4. Start engine and warm it up to normal operating temperature.
5. Check oil pressure with engine running under no-load.

Engine speed rpm	Approximate discharge pressure kPa (kg/cm ² , psi)
Idle speed	More than 59 (0.6, 9)
2,000	412 - 451 (4.2 - 4.6, 60 - 65)

If difference is extreme, check oil passage and oil pump for oil leaks.

6. Install oil pressure switch with sealant.

Oil Pump


REMOVAL AND INSTALLATION

NALC0005


1. Drain engine oil.
2. Drain engine coolant from drain plug on radiator.
3. Remove air duct (from mass air flow sensor to throttle body).
4. Remove cooling fan.
5. Remove radiator hoses (upper and lower) and fan shroud. Refer to "Radiator".
6. Remove drive belts. Refer to MA-15, "Checking Drive Belts".
7. Remove crankshaft pulley and front upper and lower belt covers. Refer to EM-19, "TIMING BELT".
8. Remove oil pan. Refer to EM-15, "OIL PAN".
9. Remove oil strainer.
10. Remove oil pump assembly.

DISASSEMBLY AND ASSEMBLY

NALC0006

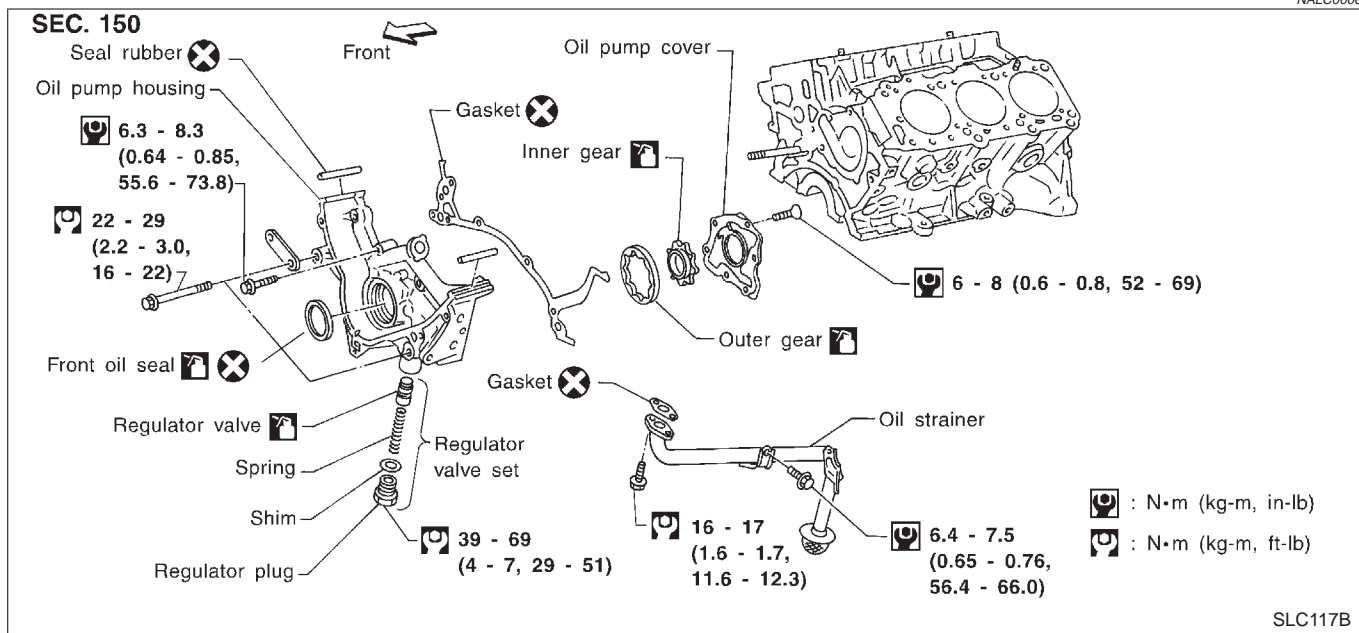

- Always replace with new oil seal and gasket.
- When installing oil pump, apply engine oil to inner and outer gears.
- Be sure that O-ring is properly installed.

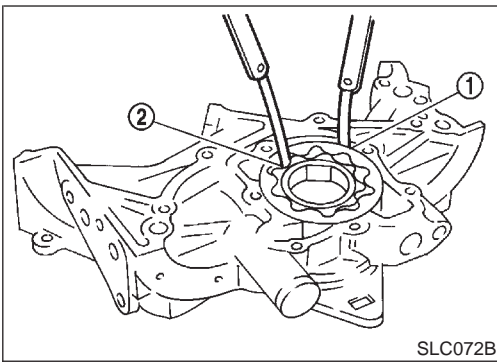

SLC072B

INSPECTION


Using a feeler gauge, straightedge and micrometers, check the following clearances:

NALC0007


Unit: mm (in)

Body to outer gear radial clearance 1	0.114 - 0.200 (0.0045 - 0.0079)
Inner gear to outer gear tip clearance 2	Below 0.18 (0.0071)
Body to inner gear axial clearance 3	0.05 - 0.09 (0.0020 - 0.0035)
Body to outer gear axial clearance 4	0.050 - 0.110 (0.0020 - 0.0043)
Inner gear to brazed portion of housing clearance 5	0.045 - 0.091 (0.0018 - 0.0036)


- If the tip clearance (2) exceeds the limit, replace gear set.
- If body to gear clearances (1, 3, 4, 5) exceed the limit, replace oil pump body assembly.

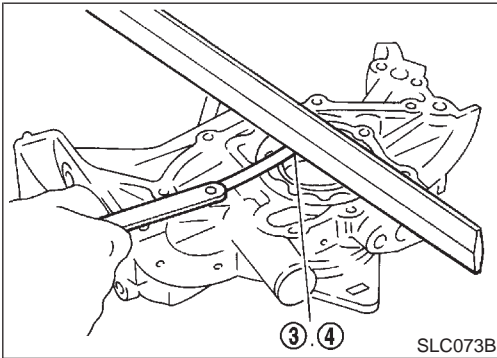

SLC073B

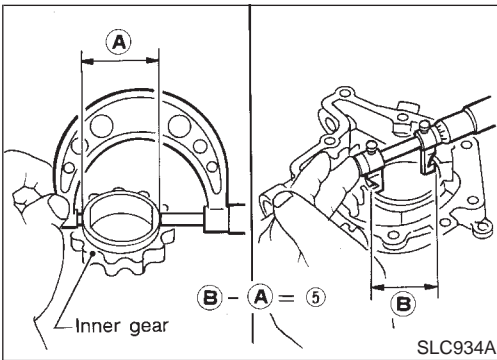

SLC934A

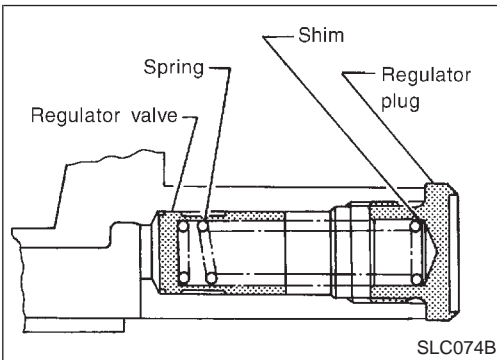


SLC074B

REGULATOR VALVE INSPECTION

NALC0008

1. Visually inspect components for wear and damage.
2. Check oil pressure regulator valve sliding surface and valve spring.
3. Coat regulator valve with engine oil. Check that it falls smoothly into the valve hole by its own weight.

If damaged, replace regulator valve set or oil pump assembly.

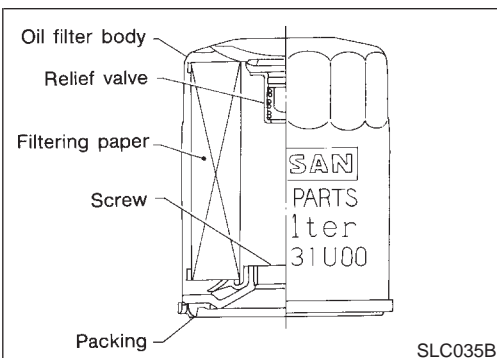

SLC035B

OIL FILTER


NALC0009

The oil filter is a small, full-flow cartridge type and is provided with a relief valve.

- Use Tool KV10115801 (J38956) for removing oil filter.

ENGINE LUBRICATION SYSTEM

Oil Pump (Cont'd)

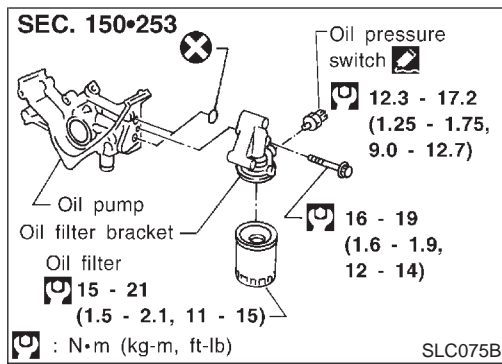

OIL FILTER BRACKET

NALC0010

1. Remove oil filter.
2. Disconnect oil pressure switch and connector.
3. Remove oil filter bracket.

Service Data and Specifications (SDS)

OIL PRESSURE

NALC0011

Engine speed rpm	Approximate discharge pressure kPa (kg/cm ² , psi)
Idle speed	More than 59 (0.6, 9)
2,000	412 - 451 (4.2 - 4.6, 60 - 65)

REGULATOR VALVE



NALC0012
Unit: mm (in)

Regulator valve to oil pump cover clearance	0.040 - 0.097 (0.0016 - 0.0038)
---	---------------------------------

OIL PUMP

NALC0013
Unit: mm (in)

Body to outer gear radial clearance	0.114 - 0.200 (0.0045 - 0.0079)
Inner gear to outer gear tip clearance	Below 0.18 (0.0071)
Body to inner gear axial clearance	0.05 - 0.09 (0.0020 - 0.0035)
Body to outer gear axial clearance	0.050 - 0.110 (0.0020 - 0.0043)
Inner gear to brazed portion of housing clearance	0.045 - 0.091 (0.0018 - 0.0036)

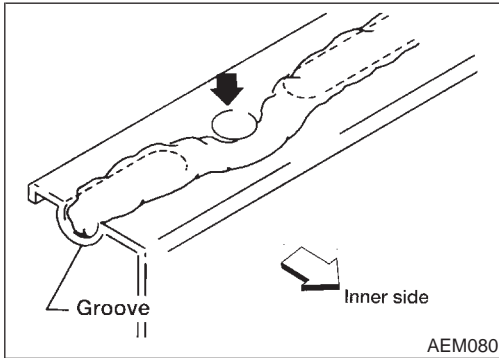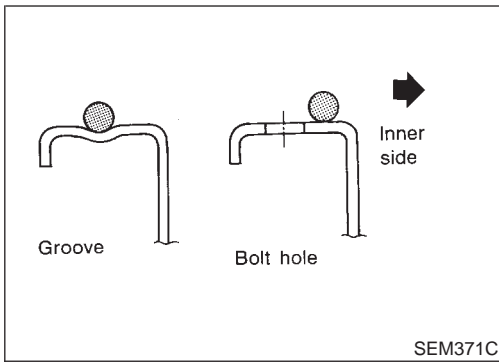

Precautions

LIQUID GASKET APPLICATION PROCEDURE

NALC0014

1. Use a scraper to remove all traces of old liquid gasket from mating surface and grooves. Also, completely clean any oil from these areas.
2. Apply a continuous bead of liquid gasket to mating surfaces. (Use Genuine RTV silicone sealant Part No. 999MP-A7007 or equivalent.)
 - **Be sure liquid gasket is 3.5 to 4.5 mm (0.138 to 0.177 in) dia. (for oil pan).**
 - **Be sure liquid gasket is 2.0 to 3.0 mm (0.079 to 0.118 in) dia. (in areas except oil pan).**
3. Apply liquid gasket around the inner side of bolt holes (unless otherwise specified).
4. Assembly should be done within 5 minutes after coating.
5. Wait at least 30 minutes before refilling engine oil and engine coolant.

Preparation

SPECIAL SERVICE TOOLS

NALC0015

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

Tool number (Kent-Moore No.) Tool name	Description
EG17650301 (J33984-A) Radiator cap tester adapter	<p>Adapting radiator cap tester to radiator filler neck a: 28 (1.10) dia. b: 31.4 (1.236) dia. c: 41.3 (1.626) dia. Unit: mm (in)</p>
WS39930000 (—) Tube presser	<p>Pressing the tube of liquid gasket</p>
KV99103510 (—) Radiator plate pliers A	<p>Installing radiator upper and lower tanks</p>
KV99103520 (—) Radiator plate pliers B	<p>Removing radiator upper and lower tanks</p>


GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ENGINE COOLING SYSTEM

Cooling Circuit

Cooling Circuit

NALC0016

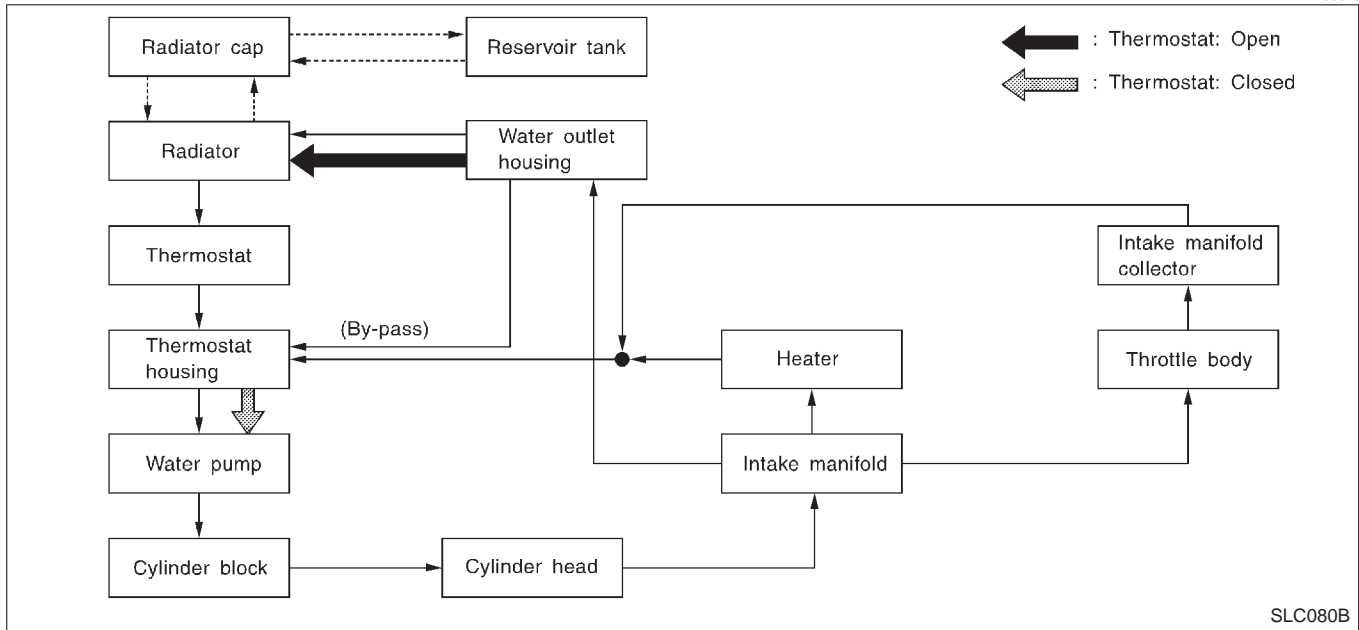


System Check

NALC0017

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could occur from high pressure coolant escaping from the radiator.


Wrap a thick cloth around the cap. Slowly turn it a quarter turn to allow built-up pressure to escape. Carefully remove the cap by turning it all the way.

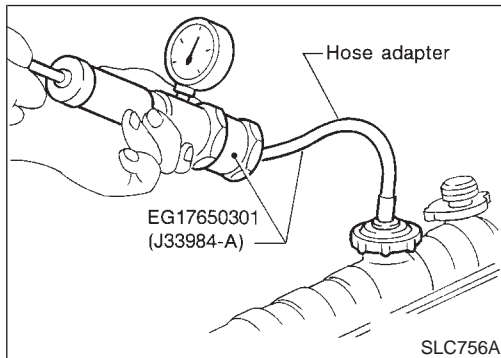

CHECKING COOLING SYSTEM HOSES

NALC0017S01

Check hoses for improper attachment, leaks, cracks, damage, loose connections, chafing and deterioration.

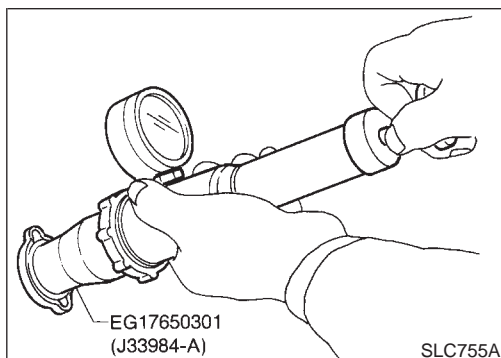

CHECKING RADIATOR CAP

NALC0017S02

To check radiator cap, apply pressure to cap with a tester.

Radiator cap relief pressure:

Standard

78 - 98 kPa (0.8 - 1.0 kg/cm², 11 - 14 psi)

Limit

59 - 98 kPa (0.6 - 1.0 kg/cm², 9 - 14 psi)

CHECKING COOLING SYSTEM FOR LEAKS

NALC0017S03

To check for leakage, apply pressure to the cooling system with a tester.


Testing pressure: 157 kPa (1.6 kg/cm², 23 psi)

CAUTION:

Higher pressure than specified may cause radiator damage.

Water Pump REMOVAL AND INSTALLATION

NALC0018

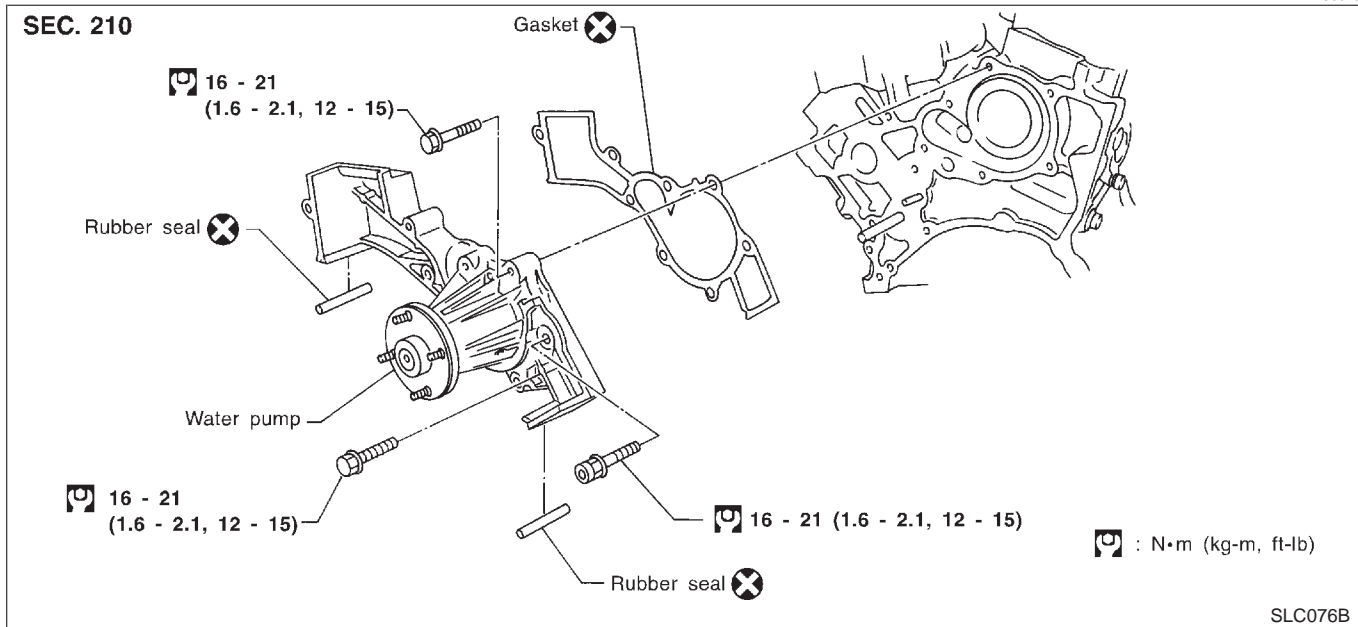



CAUTION:

- When removing water pump assembly, be careful not to get coolant on timing belt.
- Water pump cannot be disassembled and should be replaced as a unit.
- After installing water pump, connect hose and clamp securely, then check for leaks using radiator cap tester.
- To avoid deforming timing cover, make sure there is adequate clearance between it and the hose clamp.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


ENGINE COOLING SYSTEM

Water Pump (Cont'd)

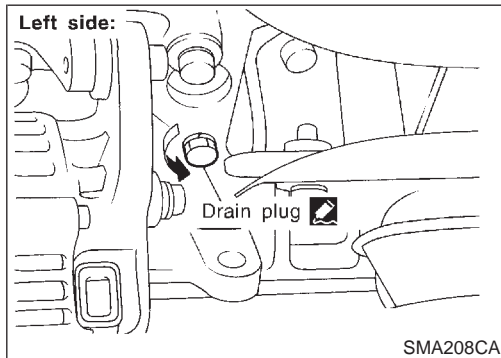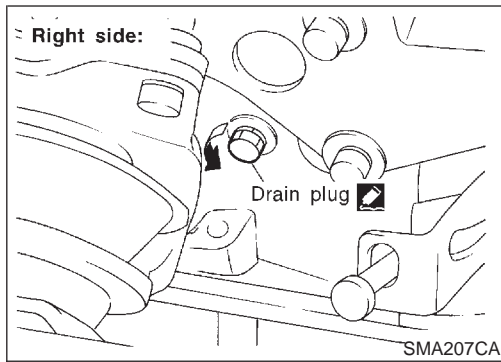

1. Drain coolant from drain plugs on both sides of cylinder block and radiator. Refer to MA-16, "Changing Engine Coolant".

2. Remove radiator hoses (upper and lower) and fan shroud. Refer to "Radiator".
3. Remove drive belts. Refer to MA-15, "Checking Drive Belts".
4. Remove water pump pulley.
5. Remove crankshaft pulley and front (upper and lower) belt cover. Refer to EM-19, "TIMING BELT".
6. Remove water pump.

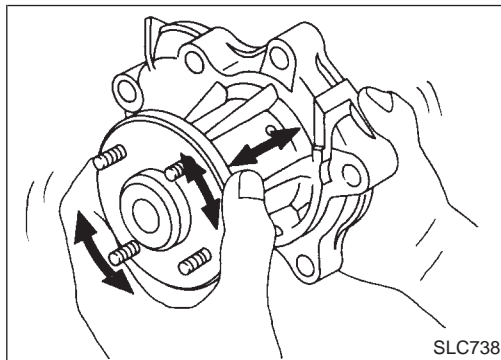


INSPECTION

1. Check for badly rusted or corroded body assembly and vanes. NALC0019
2. Check for rough operation due to excessive end play.

Thermostat

REMOVAL


1. Drain engine coolant from drain plugs on radiator. NALC0020
2. Remove radiator hoses (upper and lower) and fan shroud.
3. Remove drive belts.
4. Remove pulley bracket.
5. Remove water inlet and thermostat assembly.

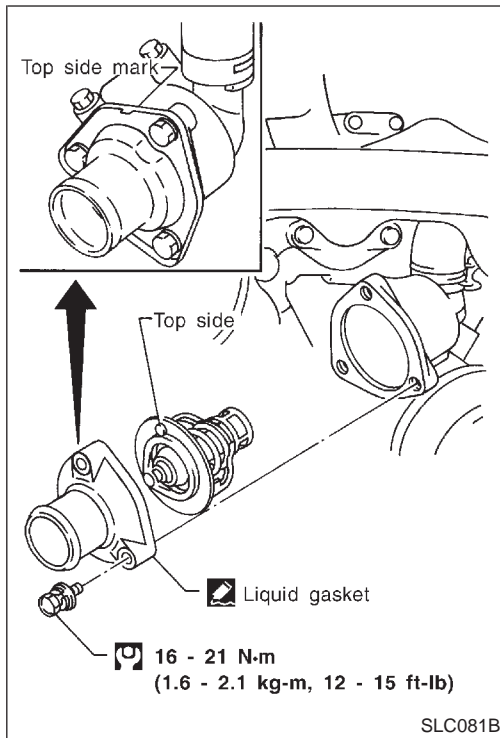

INSPECTION

NALC0021


1. Check valve seating condition at ordinary temperatures. It should seat tightly.

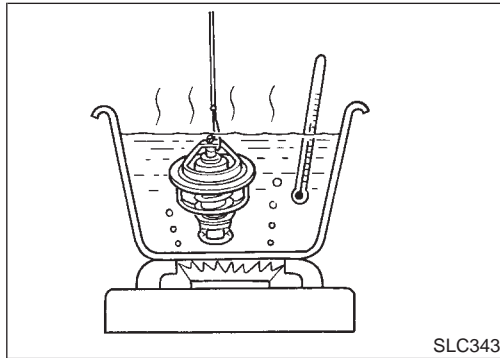

2. Check valve opening temperature and valve lift.

Valve opening temperature °C (°F)	82 (180)
Valve lift mm/°C (in/°F)	More than 10/95 (0.39/203)


3. Then check if valve is closed at 5°C (9°F) below valve opening temperature.

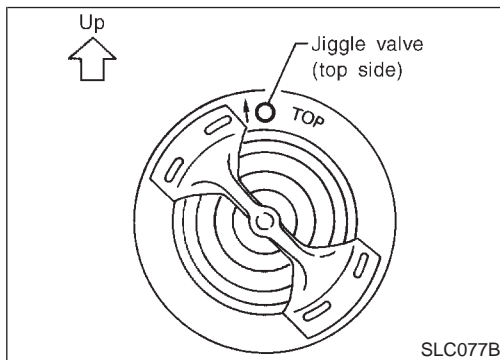

INSTALLATION

NALC0022

1. Install thermostat with jiggle valve or air bleeder at upper side.

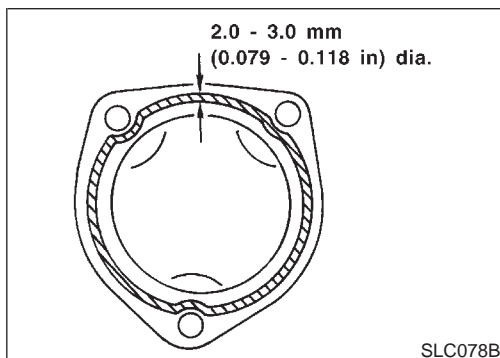

2. When installing water inlet apply liquid gasket as shown.
 - After installation, run engine for a few minutes, and check for leaks.
 - Be careful not to spill coolant over engine compartment. Use a rag to absorb coolant.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

ENGINE COOLING SYSTEM

Radiator

Radiator


REMOVAL AND INSTALLATION

NALC0023

1. Remove under cover.
2. Drain coolant from radiator drain plug.
3. Remove air duct. (From mass air flow sensor to throttle body)
4. Disconnect radiator upper and lower hoses.
5. Remove A/T oil cooler hoses. (A/T models only)
6. Remove radiator lower shroud.
7. Disconnect reservoir tank hose.
8. Remove radiator.
9. After repairing or replacing radiator, install any part removed in reverse order of removal.



COMPONENTS

NALC0024

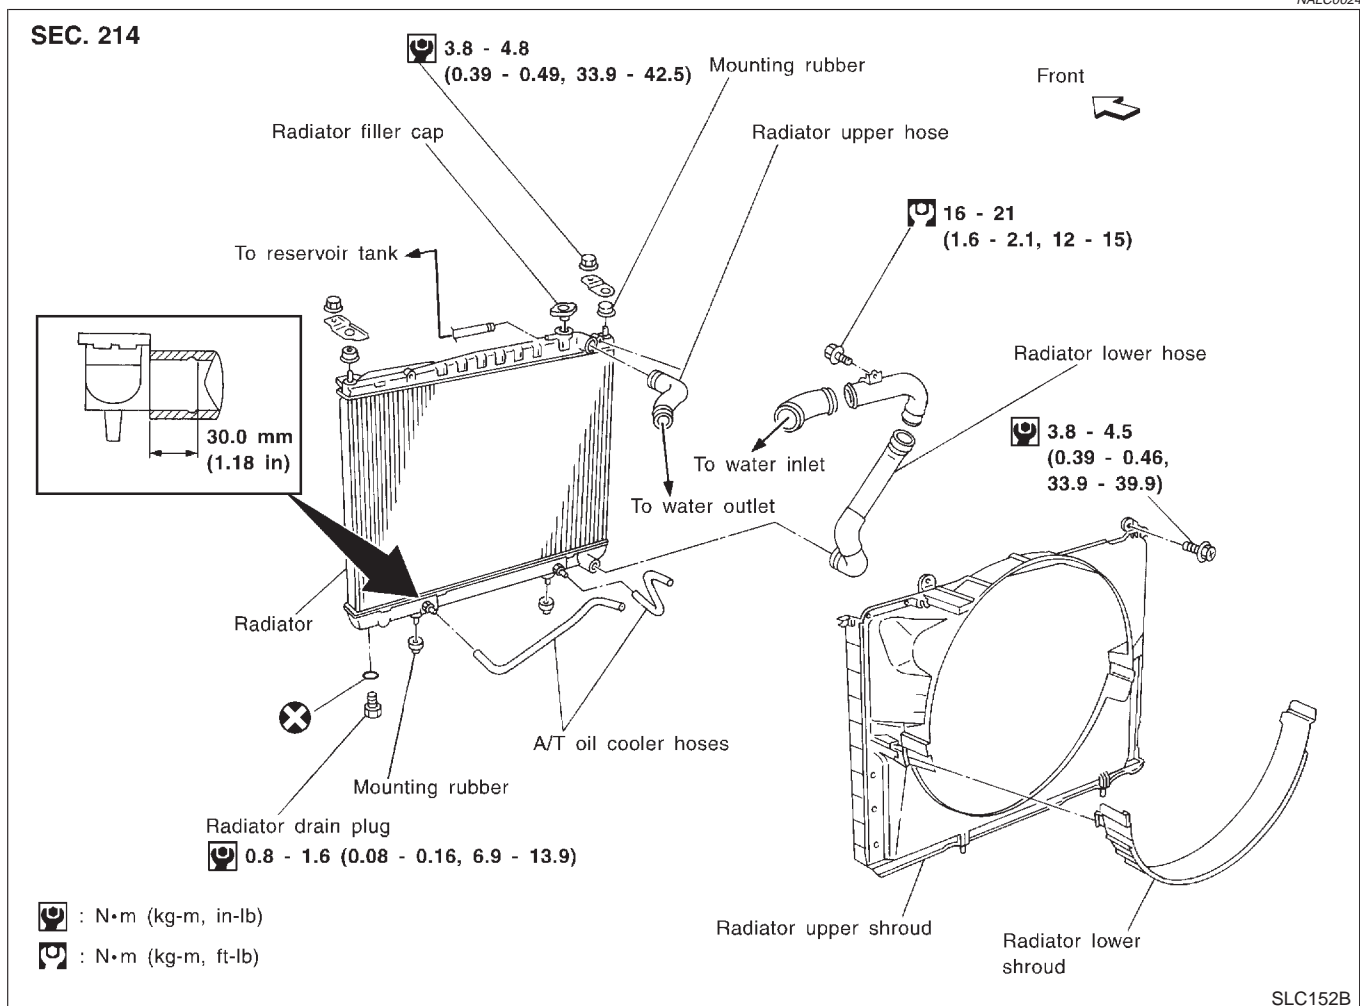


PREPARATION

NALC0025

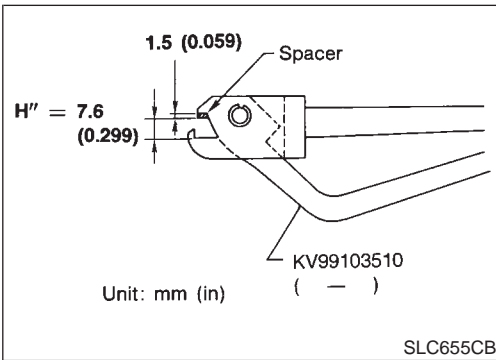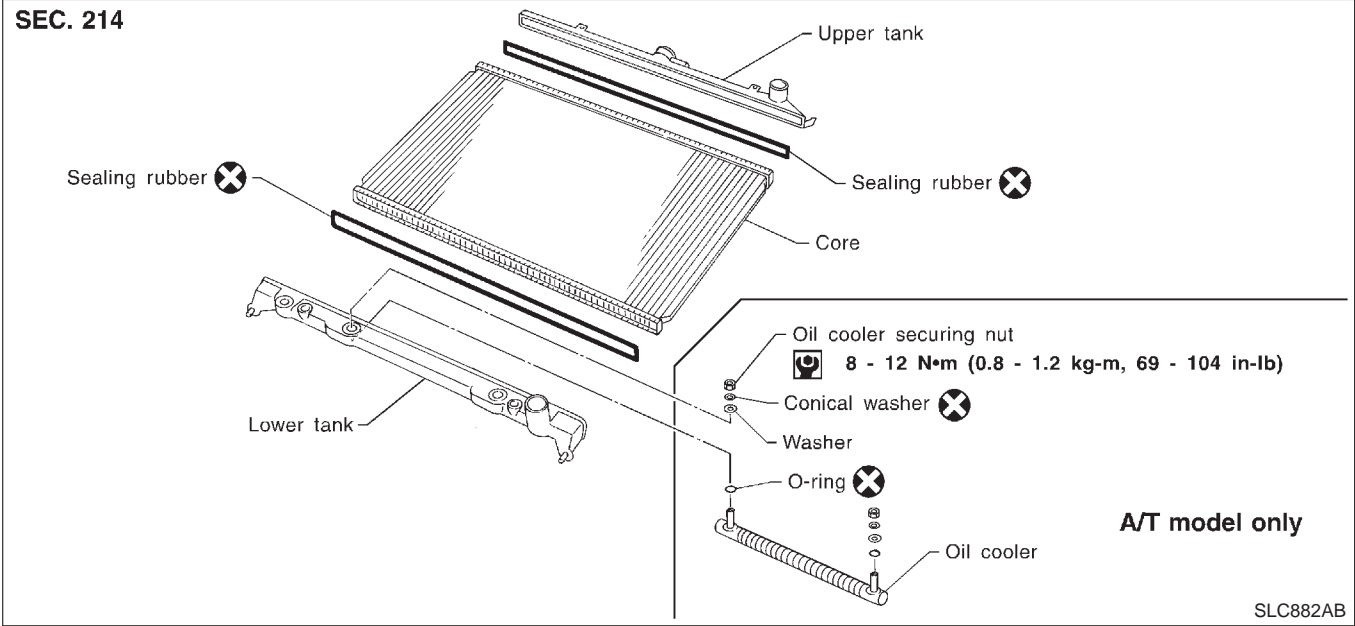


1. Attach the spacer to the tip of the radiator plate pliers A. Spacer specification: 1.5 mm (0.059 in) thick x 18 mm (0.71 in) wide x 8.5 mm (0.335 in) long.
2. Make sure that when radiator plate pliers A are closed dimension H'' is approx. 7.6 mm (0.299 in).
3. Adjust dimension H'' with the spacer, if necessary.

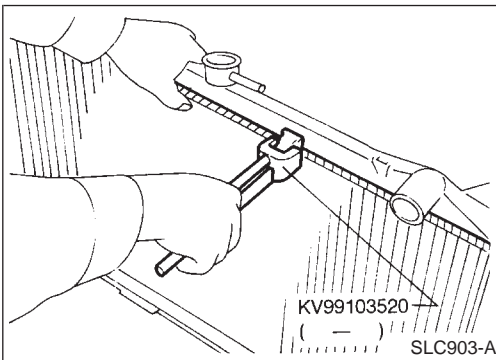

DISASSEMBLY

NALC0026

1. Remove tank with Tool.

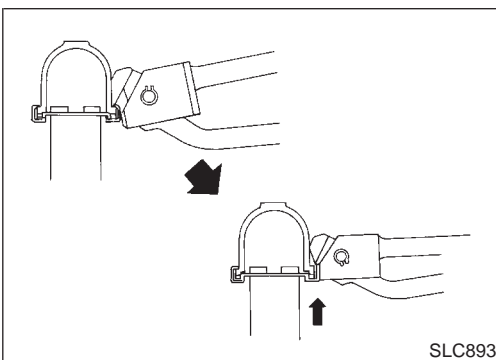


- Grip the crimped edge and bend it upwards so that Tool slips off.

Do not bend excessively.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX


ENGINE COOLING SYSTEM

Radiator (Cont'd)

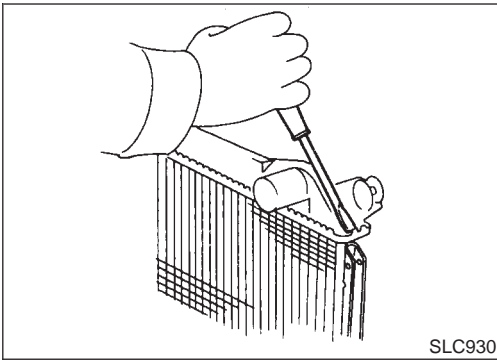


- In areas where Tool cannot be used, use a screwdriver to bend the edge up.

Be careful not to damage tank.

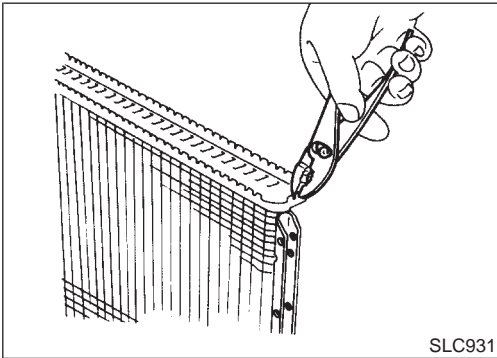

2. Make sure the edge stands straight up.
3. Remove oil cooler from tank. (A/T models only)

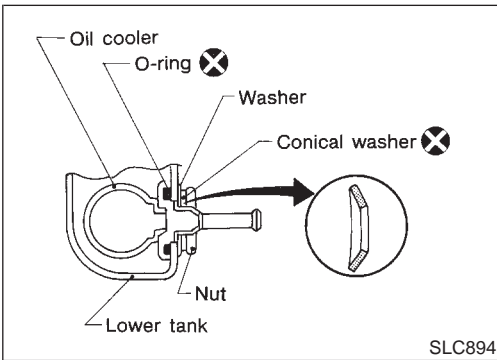


ASSEMBLY


1. Install oil cooler. (A/T models only)

Pay attention to direction of conical washer.

NALC0027

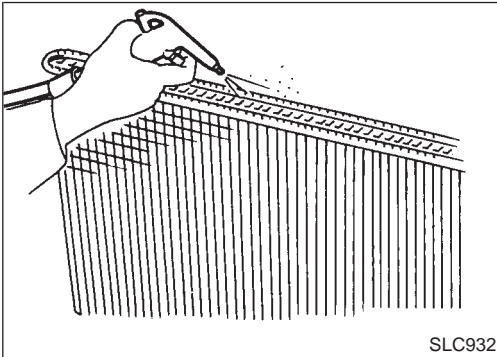


2. Clean contact portion of tank.

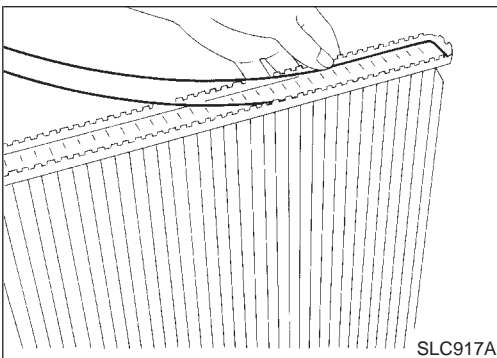



3. Install sealing rubber.
Push it in with fingers.
Be careful not to twist sealing rubber.

ENGINE COOLING SYSTEM


Radiator (Cont'd)

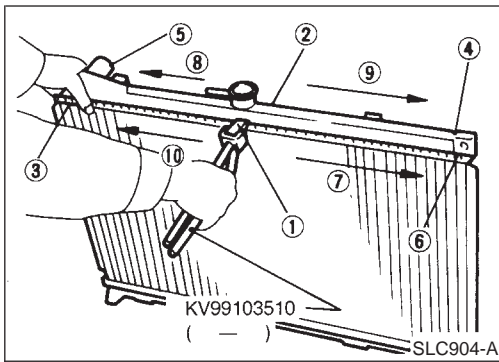

4. Caulk tank in specified sequence with Tool.

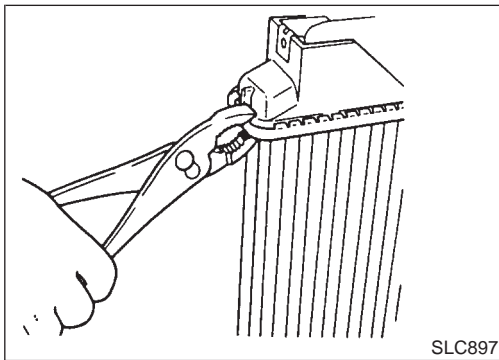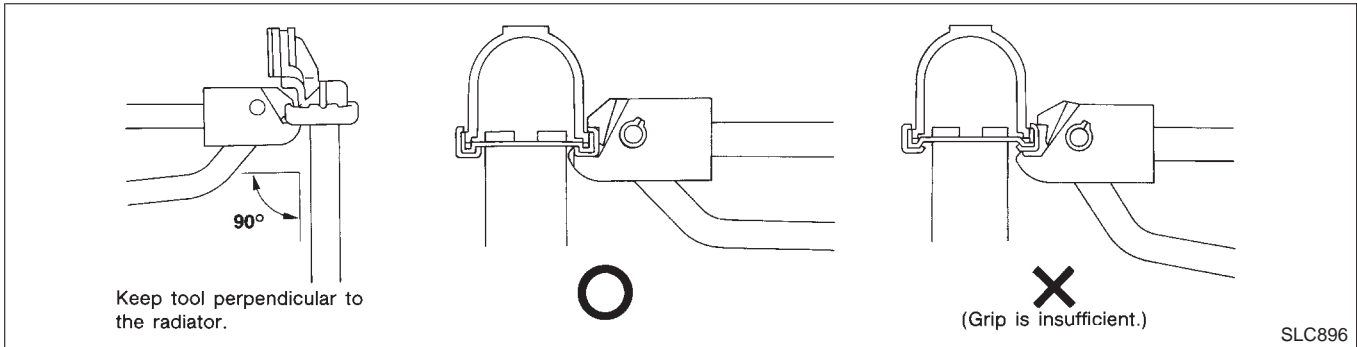

- Use pliers in the locations where Tool cannot be used.

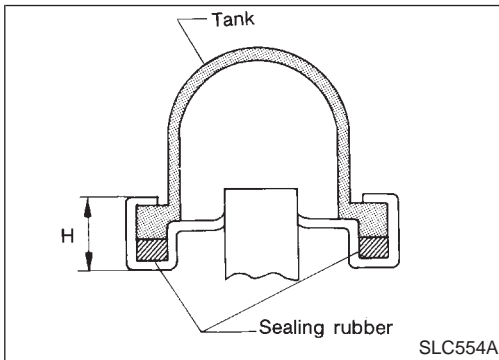


5. Make sure that the rim is completely crimped down.

Standard height "H":
8.0 - 8.4 mm (0.315 - 0.331 in)

6. Confirm that there is no leakage.

Refer to Inspection.

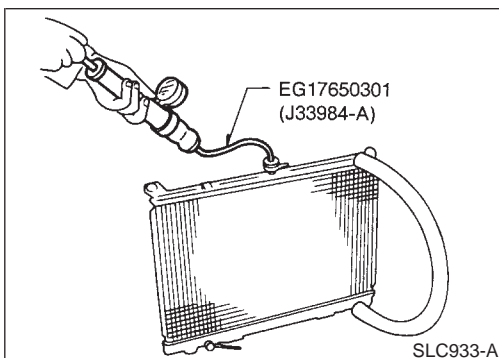

INSPECTION

1. Apply pressure with Tool.

Specified pressure value:
157 kPa (1.6 kg/cm², 23 psi)


WARNING:

To prevent the risk of the hose coming undone while under pressure, securely fasten it down with a hose clamp. Attach a hose to the oil cooler as well. (A/T models only)

GI
 MA
 EM
LC
 EC
 FE
 CL
 MT
 AT
 TF
 PD
 AX
 SU
 BR
 ST
 RS
 BT
 HA
 SC
 EL
 IDX


ENGINE COOLING SYSTEM

Radiator (Cont'd)

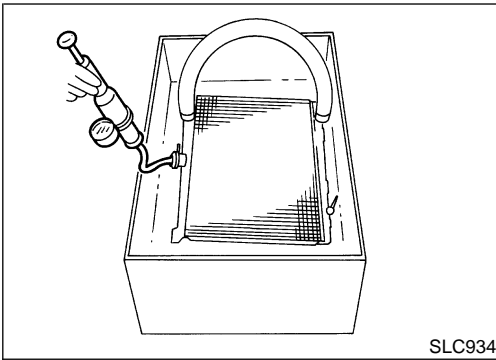

SLC934


2. Check for leakage.

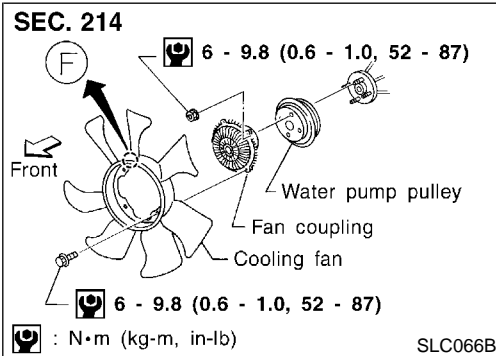

Cooling Fan (Crankshaft driven)

REMOVAL AND INSTALLATION


- Do not release the drive belt tension by removing the fan/water pump pulley. NALC0029
- Fan coupling cannot be disassembled and should be replaced as a unit. If front mark **F** is present, install fan so that side marked **F** faces the front.
- Install the drive belt only after the fan and fan coupling to water pump flange bolts/nuts have been properly torqued.
- Proper alignment of these components is essential. Improper alignment will cause them to wobble and may eventually cause the fan to separate from the water pump causing extensive damage.

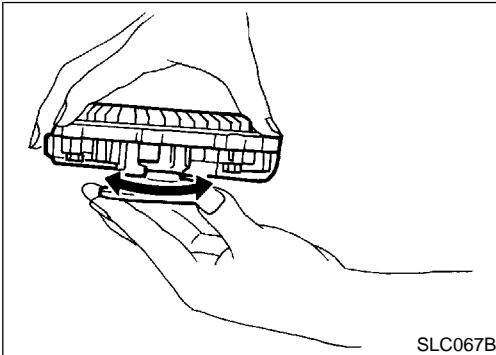

SLC067B

INSPECTION

Check fan coupling for rough operation, wobbling, oil leakage or bent bimetal. NALC0030

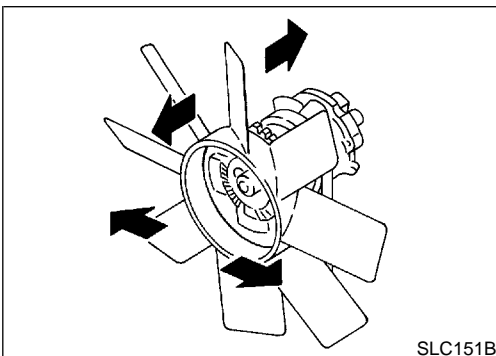

SLC151B

After assembly, verify the fan does not wobble or flap while the engine is running.

WARNING:

- When the engine is running, keep hands and clothing away from moving parts such as drive belts and fan.

Refilling Engine Coolant

For details on refilling engine coolant, refer to MA-17, "REFILLING ENGINE COOLANT".

=NALC0031

GI

MA

EM

LC

EC

Overheating Cause Analysis

NALC0032

		Symptom		Check items		
Cooling system parts malfunction	Poor heat transfer	Water pump malfunction	—	—		
		Thermostat stuck closed	—			
		Damaged fins	Dust contamination or paper clogging			—
			Mechanical damage			
		Clogged radiator cooling tube	Excess foreign material (rust, dirt, sand, etc.)			
	Reduced air flow	Cooling fan does not operate	—	—		
		High resistance to fan rotation				
		Damaged fan blades				
		Damaged radiator shroud	—	—		
		Improper coolant mixture ratio	—	—	—	
		Poor coolant quality	—	—	—	
	Insufficient coolant	Coolant leaks	Cooling hose	Loose clamp	BR	
				Cracked hose		
			Water pump	Poor sealing	ST	
			Radiator cap	Loose	RS	
Poor sealing						
Radiator			O-ring for damage, deterioration or improper fitting	BT		
		Cracked radiator tank				
		Cracked radiator core				
Reservoir tank	Cracked reservoir tank	HA				
Overflowing reservoir tank	Exhaust gas leaks into cooling system	Cylinder head deterioration	SC			
		Cylinder head gasket deterioration				

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

ENGINE COOLING SYSTEM

Overheating Cause Analysis (Cont'd)

		Symptom		Check items	
Except cooling system parts malfunction	—	Overload on engine	Abusive driving	High engine rpm under no load	—
				Driving in low gear for extended time	
				Driving at extremely high speed	
			Powertrain system malfunction		
			Installed improper size wheels and tires		
				Dragging brakes	
				Improper ignition timing.	
	Blocked or restricted air flow	Blocked bumper	—		
		Blocked radiator grille	Installed car brassiere		—
			Mud contamination or paper clogging		
Blocked radiator		—			
Blocked condenser		—			
Installed large fog lamp	—				

Service Data and Specifications (SDS)

THERMOSTAT

NALC0033

Valve opening temperature °C (°F)	82 (180)
Valve lift mm/°C (in/°F)	More than 10/95 (0.39/203)

RADIATOR

NALC0034
Unit: kPa (kg/cm², psi)

Cap relief pressure	Standard	78 - 98 (0.8 - 1.0, 11 - 14)
	Limit	59 - 98 (0.6 - 1.0, 9 - 14)
Leakage test pressure		157 (1.6, 23)