

SECTION FSU

FRONT SUSPENSION

A
B
C
D

FSU

CONTENTS

PRECAUTION	2	TRANSVERSE LINK	9
PRECAUTIONS	2	Exploded View	9
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	Removal and Installation	9
Precaution for Procedure without Cowl Top Cover.....	2		
Precautions for Suspension	2		
SYMPTOM DIAGNOSIS	3		
NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING	3		
NVH Troubleshooting Chart	3		
PREPARATION	4		
PREPARATION	4	FRONT STABILIZER	11
Special Service Tool	4	Exploded View	11
Commercial Service Tool	4	Removal and Installation	11
PERIODIC MAINTENANCE	5		
FRONT SUSPENSION ASSEMBLY	5	STEERING KNUCKLE	13
Inspection and Adjustment	5	Exploded View	13
REMOVAL AND INSTALLATION	7	Removal and Installation	13
FRONT COIL SPRING AND STRUT	7		
Exploded View	7	UNIT REMOVAL AND INSTALLATION	14
Removal and Installation	7	FRONT SUSPENSION MEMBER	14
Disposal	8	Exploded View	14
		Removal and Installation	14
		Inspection	14
		UNIT DISASSEMBLY AND ASSEMBLY	15
		FRONT COIL SPRING AND STRUT	15
		Disassembly and Assembly	15
		Inspection	17
		SERVICE DATA AND SPECIFICATIONS (SDS)	18
		SERVICE DATA AND SPECIFICATIONS (SDS)	18
		Wheel Alignment	18
		Ball Joint	19
		Wheelarch Height	19

F
G
H
I
J
K
L
M
N
O
P

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000008507519

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS


WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least 3 minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

INFOID:0000000008507520

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

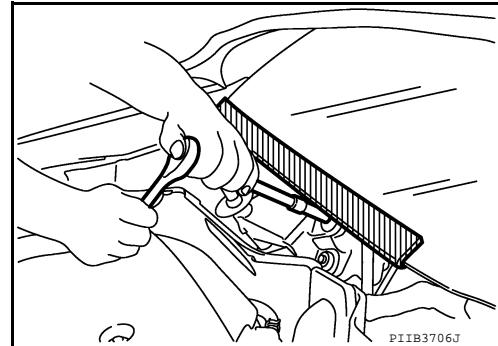

Precautions for Suspension

INFOID:0000000008507521

- When installing rubber bushings, the final tightening must be carried out under unladen conditions with tires on ground. Spilled oil might shorten the life of rubber bushings. Be sure to wipe off any spilled oil.
- Unladen conditions mean that fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.
- After servicing suspension parts, be sure to check wheel alignment.
- Self-lock nuts are not reusable. Always use new ones when installing. Since new self-lock nuts are pre-oiled, tighten as they are.

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:0000000008507522

Use chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Reference page		Noise	Shake	Vibration	Shimmy	Shudder	Poor quality ride or handling	Improper installation, looseness	Shock absorber deformation, damage or deflection	Bushing or mounting deterioration	Parts interference	Spring fatigue	Suspension looseness	Incorrect wheel alignment	Stabilizer bar fatigue	PROPELLER SHAFT (4WD)	DIFFERENTIAL (4WD)	FRONT AXLE	FRONT SUSPENSION	ROAD WHEEL AND TIRE	DRIVE SHAFT	BRAKE	STEERING	WT-55, "NVH Troubleshooting Chart"	FAX-5, "NVH Troubleshooting Chart"	DLN-99, "NVH Troubleshooting Chart"	DLN-112, "NVH Troubleshooting Chart"	FAX-5, "NVH Troubleshooting Chart"	WT-55, "NVH Troubleshooting Chart"	FAX-5, "NVH Troubleshooting Chart"	BR-3, "NVH Troubleshooting Chart"	ST-41, "NVH Troubleshooting Chart"
Symptom	FRONT SUSPENSION	x	x	x	x	x	x	x					x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x				
		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x					
		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x					
		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x					
		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x					
		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x					

x: Applicable

A
B
C
D
FSU
E
F
G
H
I
J
K
L
M
N
O
P

PREPARATION

< PREPARATION >




PREPARATION

PREPARATION

Special Service Tool


INFOID:000000008507523

The actual shapes of Kent-More tools may differ from those of special service tools illustrated here.

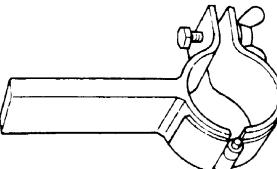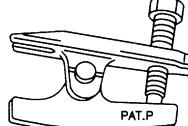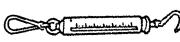Tool number (Kent-More No.) Tool name	Description
ST35652000 (—) Strut attachment	 Disassembling and assembling strut ZZA0807D
HT7252000 (J-25730-A) Ball joint remover	 Removing lower ball joint S-NT146
— (J-44372) Spring gauge	 Measuring steering wheel turning force and ball joint swinging force LST024

Commercial Service Tool

INFOID:000000008507524

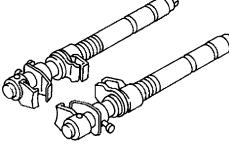Tool name	Description
Spring compressor	 Removing and installing coil spring S-NT717
Power tool	 Loosening nuts, screws and bolts PIIB1407E

FRONT SUSPENSION ASSEMBLY

< PERIODIC MAINTENANCE >

PERIODIC MAINTENANCE

FRONT SUSPENSION ASSEMBLY

Inspection and Adjustment

INFOID:000000008507525

INSPECTION

Make sure the mounting conditions (looseness, back lash) of each component and component conditions (wear, damage) are normal.

LOWER BALL JOINT END PLAY

1. Set front wheels in a straight-ahead position. Do not depress brake pedal.
2. Place an iron bar or similar tool between upper link and steering knuckle.
3. Measure axial end play by prying it up and down. Refer to [FSU-19, "Ball Joint"](#).

CAUTION:

Be careful not to damage ball joint boot. Do not damage the installation position by applying excessive force.

FSU

SHOCK ABSORBER

Check for oil leakage, damage and replace if malfunction is detected.

WHEEL ALIGNMENT

Description

Measure wheel alignment under unladen conditions.

NOTE:

"Unladen conditions" means that fuel, engine coolant, and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions.

General Information and Recommendations

- A four-wheel thrust alignment should be performed.
- This type of alignment is recommended for any NISSAN vehicle.
- The four-wheel "thrust" process helps ensure that the vehicle is properly aligned and the steering wheel is centered.
- The alignment rack itself should be capable of accepting any NISSAN vehicle.
- The rack should be checked to ensure that it is level.
- Make sure the machine is properly calibrated.
- Your alignment equipment should be regularly calibrated in order to give correct information.
- Check with the manufacturer of your specific equipment for their recommended Service/Calibration Schedule.

Preliminary Check

Check the following:

1. Tires for improper air pressure and wear.
2. Road wheels for runout. Refer to [WT-56, "Inspection"](#).
3. Wheel bearing axial end play. Refer to [FAX-32, "Wheel Bearing"](#).
4. Transverse link ball joint axial end play. Refer to [FSU-9, "Removal and Installation"](#).
5. Shock absorber operation.
6. Each mounting part of axle and suspension for looseness and deformation.
7. Each of suspension member, shock absorber, upper link and transverse link for cracks, deformation and other damage.
8. Vehicle height (posture).

Alignment Process

IMPORTANT:

Use only the alignment specifications listed in this Service Manual.

- When displaying the alignment settings, many alignment machines use "indicators" **Do not use these indicators.** (Green/red, plus or minus, Go/No Go).
- The alignment specifications programmed into your machine that operate these indicators may not be correct.

FRONT SUSPENSION ASSEMBLY

< PERIODIC MAINTENANCE >

- This may result in an ERROR.
- Most camera-type alignment machines are equipped with both "Rolling Compensation" method and optional "Jacking Compensation" method to "compensate" the alignment targets or head units. "Rolling Compensation" is the preferred method.
- If using the "Rolling Compensation" method, after installing the alignment targets or head units, push or pull on the rear wheel to move the vehicle. Do not push or pull the vehicle body.
- If using the "Jacking Compensation" method, after installing the alignment targets or head units, raise the vehicle and rotate the wheels 1/2 turn both ways.

NOTE:

Do not use the "Rolling Compensation" method if you are using sensor-type alignment equipment.

- Follow all instructions for the alignment machine you're using for more information.

ADJUSTMENT

Camber, Caster and Kingpin Inclination Angles

CAUTION:

Camber, caster, kingpin inclination angles cannot be adjusted.


FRONT COIL SPRING AND STRUT

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION FRONT COIL SPRING AND STRUT

Exploded View

INFOID:000000008507526

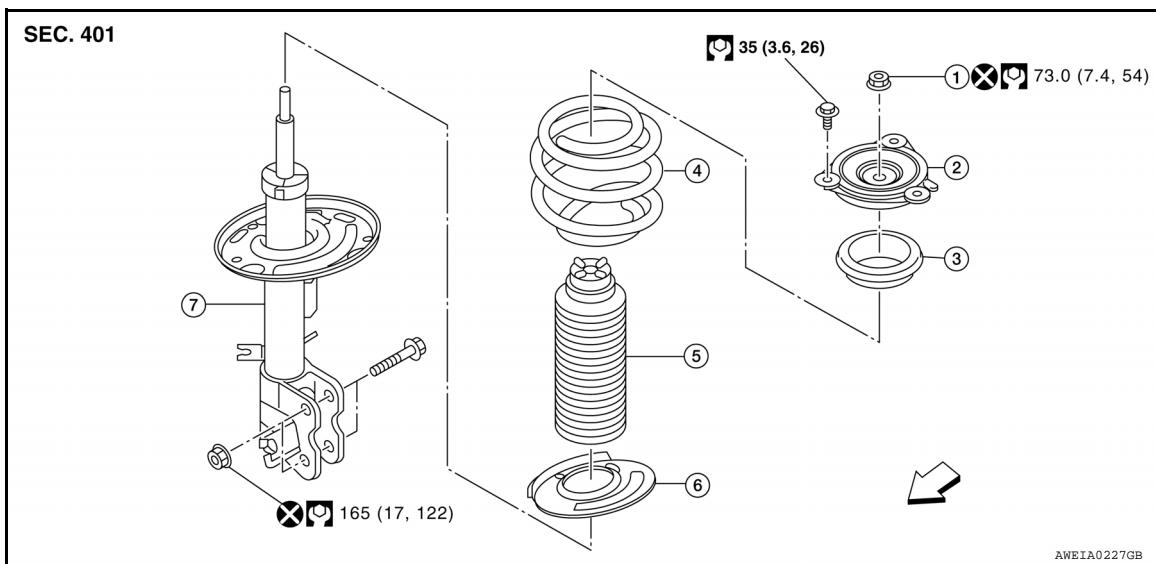

- 1. Piston rod lock nut
- 2. Strut mount insulator
- 3. Strut mount bearing
- 4. Coil spring
- 5. Bound bumper
- 6. Lower rubber seat
- 7. Strut


Front

Removal and Installation

INFOID:000000008507527

REMOVAL


1. Remove the wiper arm covers and the wiper arms. Refer to [WW-61, "Removal and Installation"](#).
2. Remove the cowl top finisher assembly. Refer to [EXT-25, "Exploded View"](#).
3. Remove the front coil spring and strut mounting insulator covers.
4. Remove the upper front coil spring and strut mounting insulator bolts using power tool.
5. Remove the front wheel and tire using power tool. Refer to [WT-64, "Road Wheel"](#).
6. Remove the wheel sensor harness from the front coil spring and strut.
7. Remove the brake hose lock plate (A).

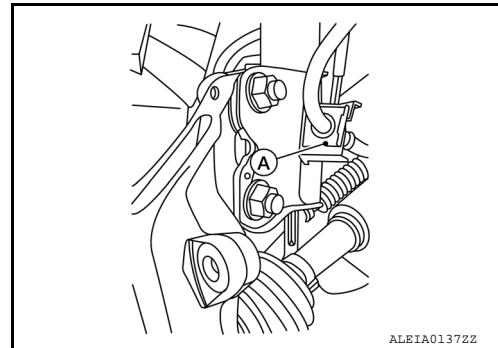

FRONT COIL SPRING AND STRUT

< REMOVAL AND INSTALLATION >

8. Remove the stabilizer connecting rod nut (A) from the front coil spring and strut. Position the stabilizer connecting rod aside. Refer to [FSU-11, "Exploded View"](#).

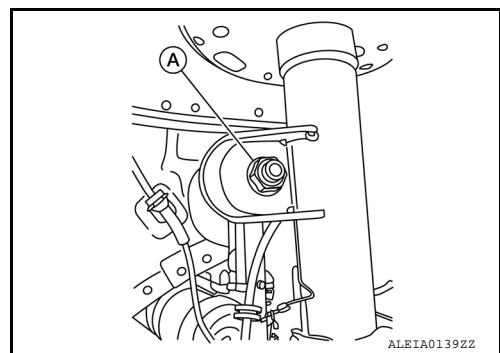

9. Remove the lower strut nuts and bolts with power tool.

10. Remove the front coil spring and strut.

INSTALLATION


Installation is in the reverse order of removal,

CAUTION:

Do not reuse lower strut nuts.

- Be sure tab (A) on strut mount insulator is positioned as shown.

◀ : Front

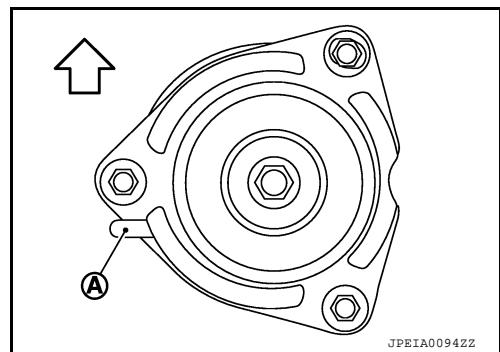

- Check the wheel alignment. Refer to [FSU-5, "Inspection and Adjustment"](#).
- Adjust the neutral position of the steering angle sensor. Refer to [BRC-55, "Work Procedure"](#).

Disposal

INFOID:0000000008507528

1. Set strut assembly horizontally with the piston rod fully extended.


2. Drill 2 – 3 mm (0.08 – 0.12 in) hole at the position (●) from top as shown in the figure to release gas gradually.

CAUTION:

- Wear eye protection (safety glasses).
- Wear gloves.
- Be careful with metal chips or oil blown out by the compressed gas.

NOTE:

- Drill vertically in this direction (◀).
- Directly to the outer tube avoiding brackets.
- The gas is clear, colorless, odorless, and harmless.

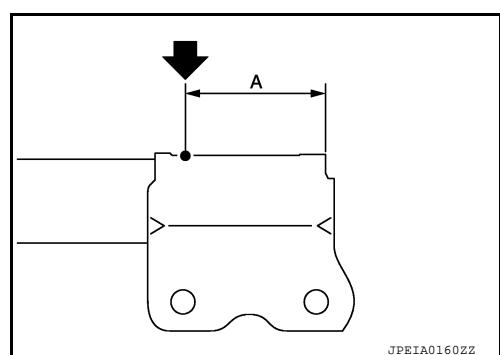

(A) : 20 – 30 mm (0.79 – 1.18 in)

3. Position the drilled hole downward and drain oil by moving the piston rod several times.

CAUTION:

Dispose of drained oil according to the law and local regulations.


TRANSVERSE LINK

< REMOVAL AND INSTALLATION >

TRANSVERSE LINK

Exploded View

INFOID:0000000008507529

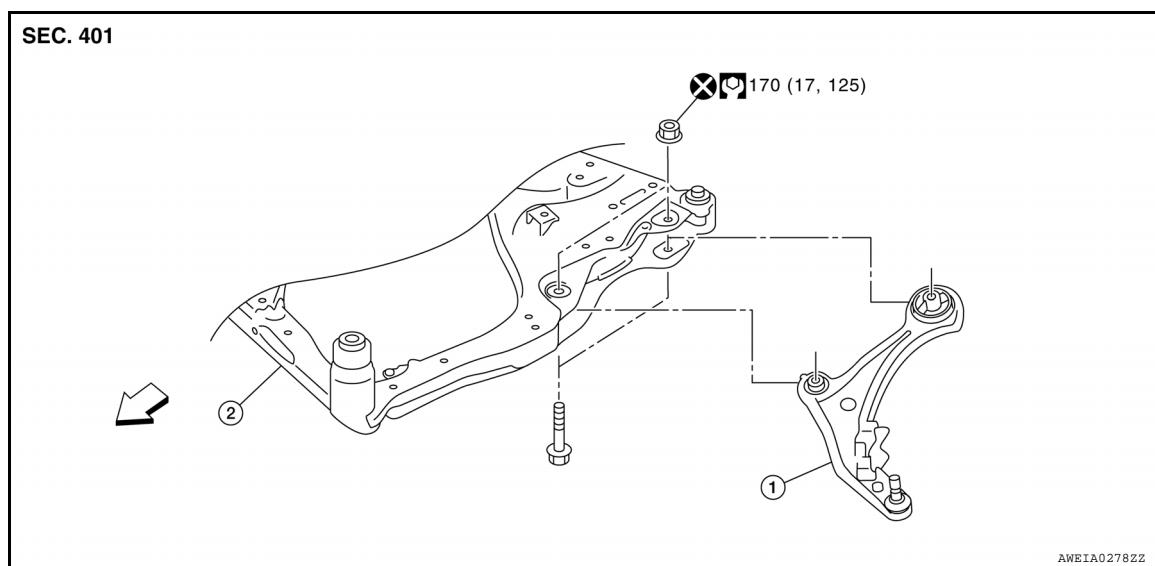

Removal and Installation

INFOID:0000000008507530

REMOVAL

1. Remove front wheel and tire using power tool. Refer to [WT-64, "Road Wheel"](#).
2. Remove brake caliper torque member bolts, leaving brake hose attached, reposition the caliper aside with wire. Refer to [BR-36, "BRAKE CALIPER ASSEMBLY : Removal and Installation"](#).
CAUTION:
Do not depress brake pedal while brake caliper is removed.
3. Put alignment marks on disc rotor and rear wheel hub and bearing assembly, then remove disc rotor.
CAUTION:
 - Put alignment marks on the wheel hub and bearing assembly and the disc rotor before removing the disc rotor.
 - Do not drop the disc rotor.
4. Remove speed sensor.
5. Disengage the drive shaft from wheel hub and bearing assembly. Refer to [FAX-15, "Exploded View \(LH\)"](#), [FAX-17, "Exploded View \(RH\)"](#).
6. Separate the outer socket from the knuckle. Refer to [FSU-14, "Exploded View"](#).
7. Remove the strut from the knuckle using power tool. Refer to [FSU-14, "Exploded View"](#).
8. Remove transverse link from steering knuckle.
9. Remove the steering knuckle and hub.
10. Remove transverse link nuts and bolts.
11. Remove transverse link from suspension member.

INSPECTION AFTER REMOVAL

Ball Joint Inspection

Manually move ball stud to confirm it moves smoothly with no binding.

Swing Torque Inspection

1. Move ball stud at least ten times by hand to check for smooth movement.

TRANSVERSE LINK


< REMOVAL AND INSTALLATION >

2. Hook a spring balance (A) at pinch bolt location. Confirm spring balance measurement value is within specifications when ball stud begins moving.

Swing torque :Refer to [FSU-19, "Ball Joint"](#).

Spring balance measurement :Refer to [FSU-19, "Ball Joint"](#).

- If swing torque exceeds standard range, replace transverse link.

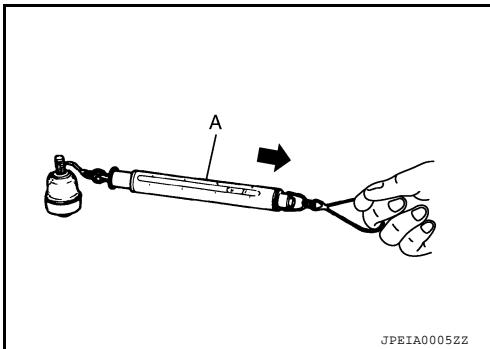

JPEIA00052Z

Axial End Play Inspection

1. Move ball stud at least ten times by hand to check for smooth movement.
2. Move tip of ball stud in axial direction to check for looseness.

Axial end play :Refer to [FSU-19, "Ball Joint"](#).

- If axial end play exceeds the standard value, replace transverse link.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

Do not reuse transverse link nuts.

- Perform final tightening of bolts and nuts at the front suspension member, under unladen conditions with tires on level ground.
- Check wheel alignment. Refer to [FSU-5, "Inspection and Adjustment"](#).
- Adjust neutral position of steering angle sensor. Refer to [BRC-55, "Work Procedure"](#).


FRONT STABILIZER

< REMOVAL AND INSTALLATION >

FRONT STABILIZER

Exploded View

INFOID:0000000008507531

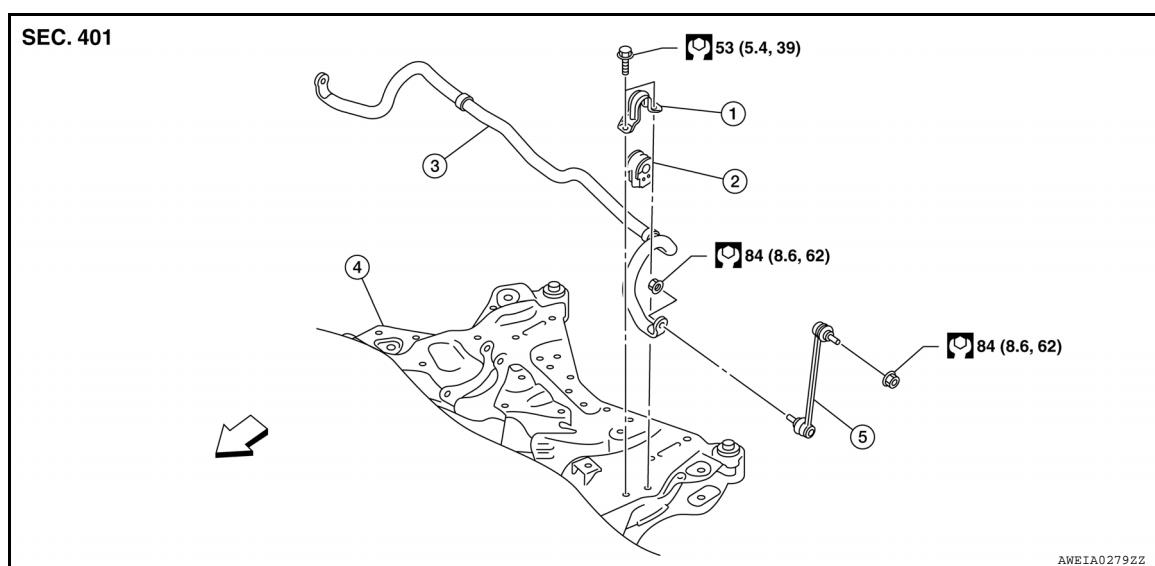

- 1. Stabilizer clamp
- 2. Stabilizer bushing
- 3. Stabilizer bar
- 4. Front suspension member
- 5. Stabilizer connecting rod


Front

Removal and Installation

INFOID:0000000008507532

REMOVAL

1. Remove both front wheels and tires using power tool. Refer to [WT-57, "Adjustment"](#).
2. Remove the heat insulator (4WD models).
3. Remove the rear propeller shaft (4WD models). Refer to [DLN-101, "Exploded View"](#).
4. Disconnect the LH outer socket from steering knuckle. Refer to [ST-48, "Exploded View"](#).
5. Remove the front exhaust tube. Refer to [EX-5, "Exploded View"](#).
6. Remove the engine rear mount bracket (2WD models).
7. Disconnect the steering column from the steering gear. Refer to [ST-46, "Exploded View"](#).
8. Remove the steering gear bolts. Refer to [ST-48, "Exploded View"](#).
9. Position the steering gear forward.
10. Disconnect the RH outer socket from the steering knuckle. Refer to [ST-48, "Exploded View"](#).
11. Remove the stabilizer connecting rod nut (A) from the front coil spring and strut.

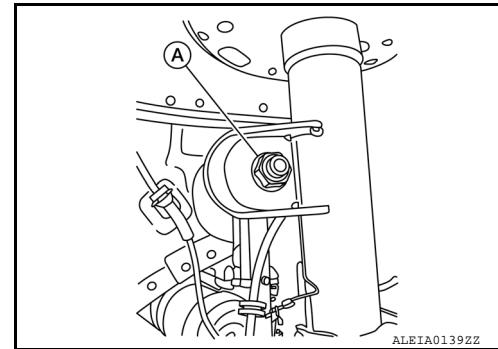


ALEIA0139ZZ

FRONT STABILIZER


< REMOVAL AND INSTALLATION >

12. Remove the stabilizer connecting rod nut (A) from the stabilizer bar and remove the stabilizer connecting rod.

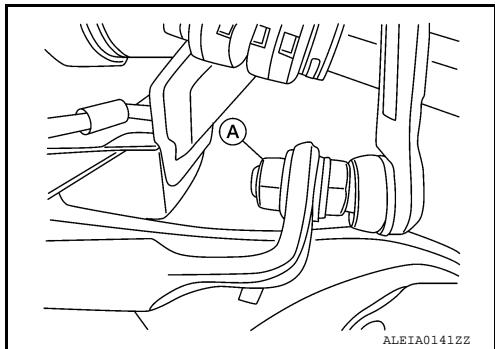

ALEIA0141ZZ

13. Remove the bolts (➡) from the stabilizer clamp, and then remove the stabilizer clamp and the stabilizer bushing from the front suspension member.

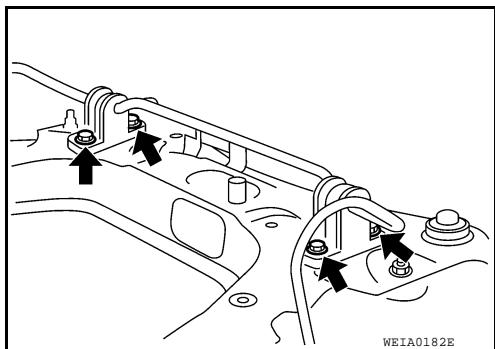


WEIA0182E

14. Remove the stabilizer bar from the LH side of vehicle.

INSTALLATION

Installation is in the reverse order of removal.

- Install the stabilizer clamp so that the notch (A) is facing the front of the vehicle (⬅).
- Install the stabilizer bushing so that the slit (B) is facing the front of the vehicle (⬅).

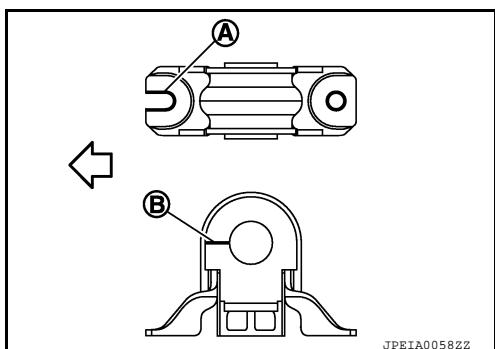

JPEIA0058ZZ

- Check the wheel alignment. Refer to [FSU-5, "Inspection and Adjustment"](#).
- Adjust the neutral position of the steering angle sensor. Refer to [BRG-55, "Work Procedure"](#).


STEERING KNUCKLE

< REMOVAL AND INSTALLATION >

STEERING KNUCKLE

Exploded View

INFOID:0000000008507533

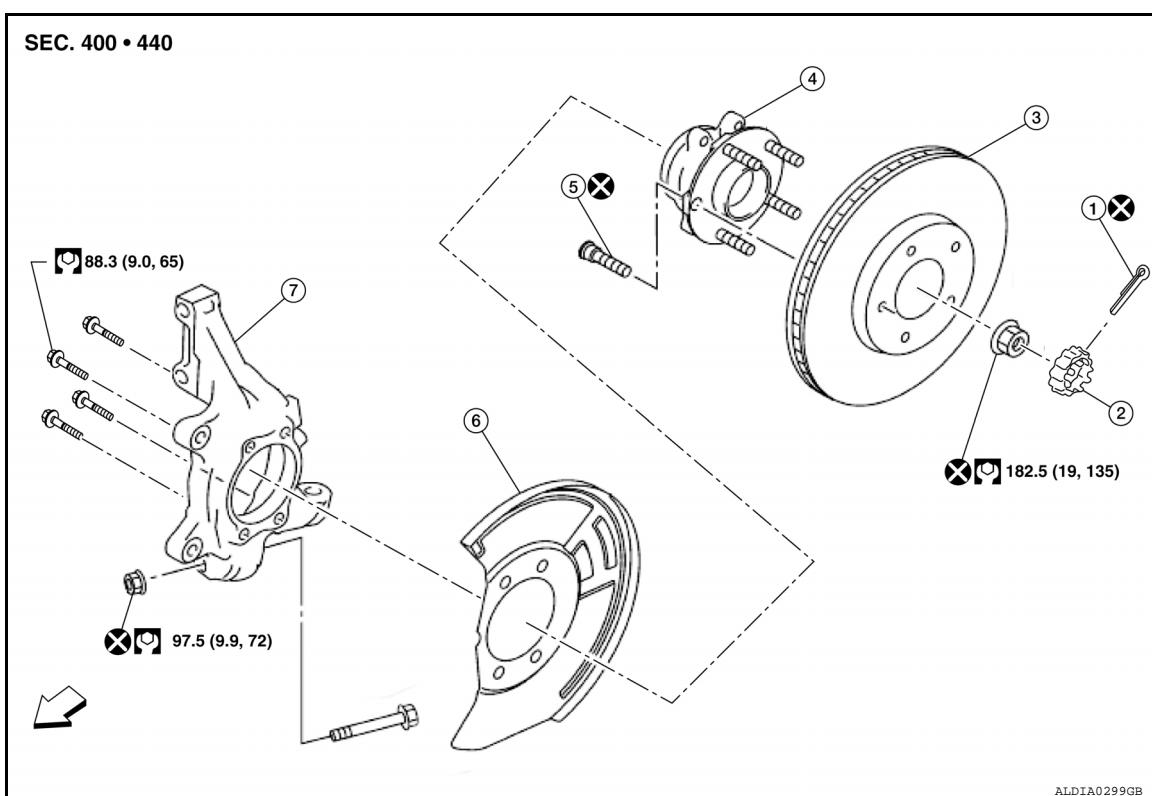

- | | | |
|--------------------------|-----------------|---------------------|
| 1. Cotter pin | 2. Nut retainer | 3. Disc brake rotor |
| 4. Wheel hub and bearing | 5. Wheel stud | 6. Splash guard |
| 7. Steering knuckle | Front | |

A
B
C
D
FSU
F
G
H
I

J
K
L
M
N
O
P

Removal and Installation

INFOID:0000000008507534

REMOVAL

1. Remove the wheel hub and bearing. Refer to [FAX-8, "Exploded View"](#).
2. Separate the outer socket from the steering knuckle. Refer to [ST-48, "Exploded View"](#).
3. Remove the steering knuckle lower pinch bolt and separate the transverse link from the steering knuckle.
4. Remove the lower strut nuts and bolts and remove the steering knuckle. Refer to [FSU-7, "Exploded View"](#).

INSPECTION AFTER REMOVAL

Check for deformity, cracks and damage on each part, replace if necessary.

Ball Joint Inspection

- Check for boot breakage, axial looseness, and torque of transverse link ball joint and repair as necessary.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Do not reuse the lower strut nuts.
- Do not reuse the wheel hub lock nut.
- Do not reuse the cotter pin.

FRONT SUSPENSION MEMBER


< UNIT REMOVAL AND INSTALLATION >

UNIT REMOVAL AND INSTALLATION

FRONT SUSPENSION MEMBER

Exploded View

INFOID:000000008507535

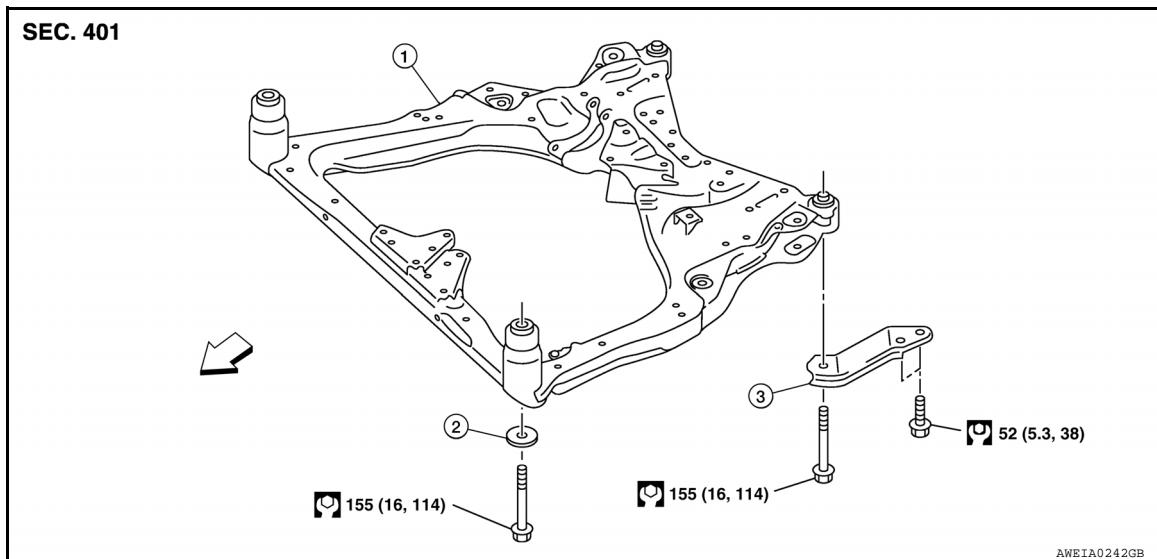

1. Front suspension member
 2. Rebound stopper
 3. Front suspension member stay
- Front

Removal and Installation

INFOID:000000008507536

REMOVAL

1. Remove both front wheels and tires using power tool. Refer to [WT-57, "Adjustment"](#).
2. Remove the engine and transmission with the front suspension member. Refer to [EM-102, "2WD : Removal and Installation"](#) (2WD) or [EM-107, "4WD : Removal and Installation"](#) (4WD).
 - The engine, transmission, and front suspension member must be removed as an assembly.
3. Lift the engine and transmission off of the front suspension member.
4. Remove both steering knuckle. Refer to [FSU-13, "Removal and Installation"](#).
5. Remove both transverse links and the stabilizer bar. Refer to [FSU-9, "Removal and Installation"](#) and [FSU-11, "Removal and Installation"](#).
6. Remove the steering gear assembly and hydraulic lines. Refer to [ST-48, "Exploded View"](#).

INSTALLATION

Installation is in the reverse order of removal.

- Refer to [FSU-14, "Exploded View"](#) for tightening torque.
- After installation, perform the final tightening of each part under unladen conditions with tires on the ground.

Inspection

INFOID:000000008507537

INSPECTION AFTER REMOVAL

Check the front suspension member for significant deformation, cracks, or damages. Replace it if necessary.

INSPECTION AFTER INSTALLATION

1. Check wheel sensor harness for proper connection. Refer to [BRC-116, "Exploded View - Front Wheel Sensor"](#).
2. Check wheel alignment. Refer to [FSU-5, "Inspection and Adjustment"](#).
3. Adjust the neutral position of the steering angle sensor. Refer to [BRC-55, "Work Procedure"](#).

FRONT COIL SPRING AND STRUT

< UNIT DISASSEMBLY AND ASSEMBLY >

UNIT DISASSEMBLY AND ASSEMBLY

FRONT COIL SPRING AND STRUT

Disassembly and Assembly

INFOID:000000008507538

DISASSEMBLY


1. Install Tool (A) to strut.

Tool (A) number : ST35652000 (—)

CAUTION:

When installing Tool (A), wrap a shop cloth around the strut to protect it from damage.

2. Secure Tool (A) in a vise.

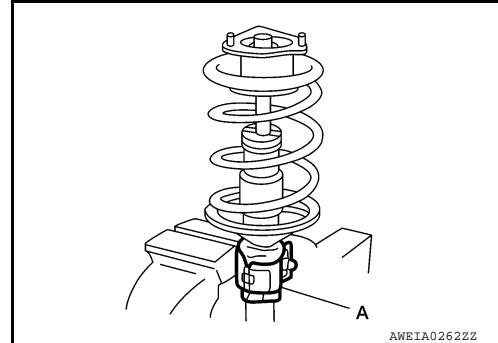

3. Install suitable tool to strut rod.

4. Slightly loosen piston rod lock nut.


WARNING:

Do not remove the piston rod lock nut completely. If the piston rod locknut is removed completely, the coil spring can jump out and may cause serious damage or injury.

5. Compress the coil spring using a suitable tool.

WARNING:

Make sure that the pawls of the suitable tool are firmly hooked on the spring. The suitable tool must be tightened alternately so as not to tilt the coil spring.

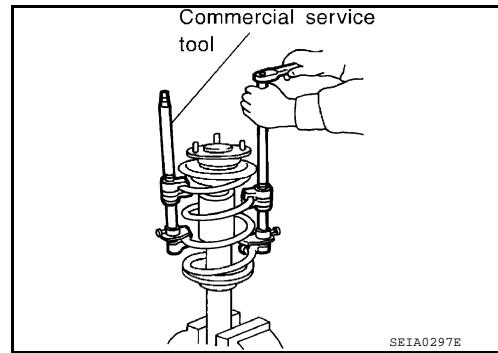

6. Make sure coil spring is free between upper and lower seats. Remove piston the rod lock nut.

7. Remove strut mount insulator and strut mount bearing.

8. Remove bound bumper from strut mount bearing.

9. Gradually release suitable tool and remove coil spring.

10. Remove lower rubber seat.

ASSEMBLY


CAUTION:

Do not reuse the piston rod lock nut.

FRONT COIL SPRING AND STRUT

< UNIT DISASSEMBLY AND ASSEMBLY >

1. Install the lower rubber seat to the strut. Make sure that the pin (A) on the lower rubber seat is positioned into the hole (B) on the strut.

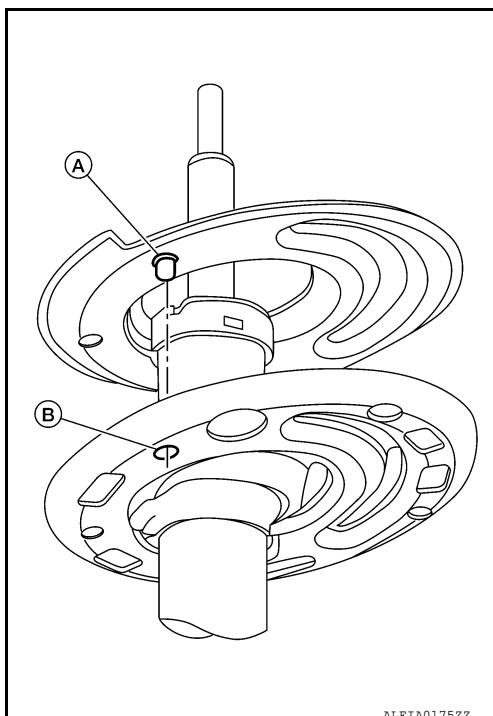


ALEIA0175ZZ

2. Compress the coil spring using a suitable tool and install the coil spring onto the strut.

WARNING:

Be sure suitable tool is securely attached to coil spring.
Compress coil spring.

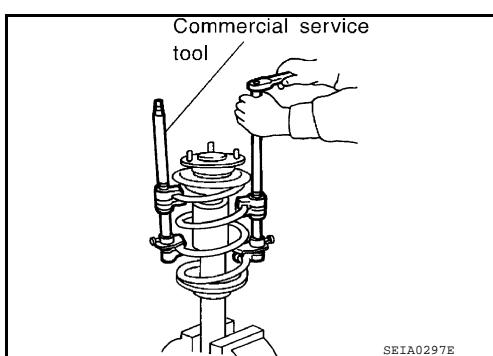


SEIA0297E

CAUTION:

Face tube side of the coil spring (1) downward. Align the lower end to the lower rubber seat (2) as shown.

Maximum Gap (A) : 5mm (0.20in)

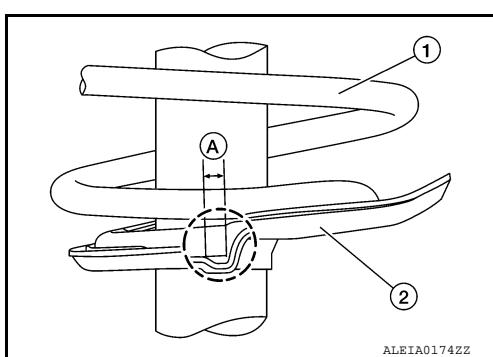

ALEIA0174ZZ

3. Connect bound bumper to strut mount bearing.

CAUTION:

- Be sure to install bound bumper to strut mount bearing securely.
- When installing bound bumper, use soapy water. Do not use machine oil or other lubricants.

4. Install strut mount bearing and strut mount insulator.

5. Temporarily install piston rod lock nut.

CAUTION:


Do not reuse piston rod lock nut.

FRONT COIL SPRING AND STRUT

< UNIT DISASSEMBLY AND ASSEMBLY >

6. Be sure that the tab (A) on the strut mount insulator is positioned on the outboard side of the vehicle as shown.

◀ : Front

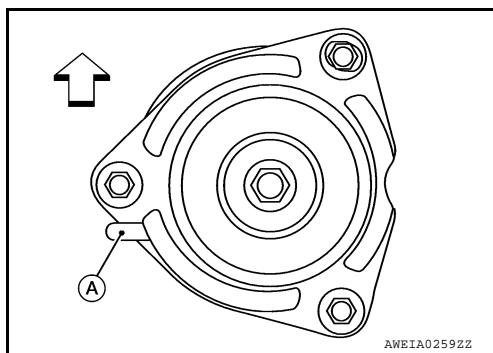

7. Be sure coil spring is properly set in spring rubber seat. Gradually release suitable tool.

CAUTION:

Be sure strut mount bearing is properly aligned to strut mount insulator and coil spring.

8. Tighten piston rod lock nut to the specified torque. Refer to [FSU-14, "Exploded View"](#).


FSU

9. Remove suitable tool from strut.

10. Remove Tool (A) from vise.

Tool (A) number : ST35652000 (—)

11. Remove Tool (A) from strut.

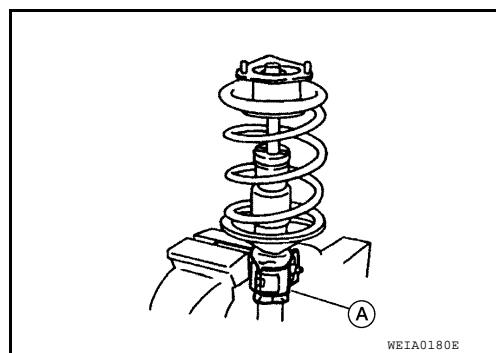

INFOID:000000008507539

Inspection

INSPECTION AFTER DISASSEMBLY

Strut

- Check strut for deformation, cracks, and damage, and replace if necessary.
- Check piston rod for damage, uneven wear, and distortion, and replace if necessary.
- Check welded and sealed areas for oil leakage, and replace if necessary.

Insulator and Rubber Parts

Check strut mount insulator for cracks, rubber parts for wear and replace if necessary.

Coil Spring

Check for cracks, wear, and damage and replace if necessary.

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)


SERVICE DATA AND SPECIFICATIONS (SDS)

Wheel Alignment

INFOID:000000008507540

UNITED STATES and MEXICO

Item		Standard	
		(LH) side	(RH) side
Measurement wheel			
Camber Degree minute (Decimal degree)	Minimum	-1° 00' (-1.00°)	-1° 15' (-1.25°)
	Nominal	-0° 15' (-0.25°)	-0° 30' (-0.50°)
	Maximum	0° 30' (0.50°)	0° 15' (0.25°)
	Left and right difference ^{*1}	-0° 15'± 0° 33' (0.25°± 0.55°)	
Caster Degree minute (Decimal degree)	Minimum	3° 55' (3.92°)	
	Nominal	4° 40' (4.67°)	
	Maximum	5° 25' (5.42°)	
	Left and right difference ^{*1}	0.30' (0.50°) Maximum	
Kingpin inclination Degree minute (Decimal degree)	Minimum	11° 55' (11.92°)	12° 10' (12.17°)
	Nominal	12° 40' (12.67°)	12° 55' (12.92°)
	Maximum	13° 25' (13.42°)	13° 40' (13.67°)

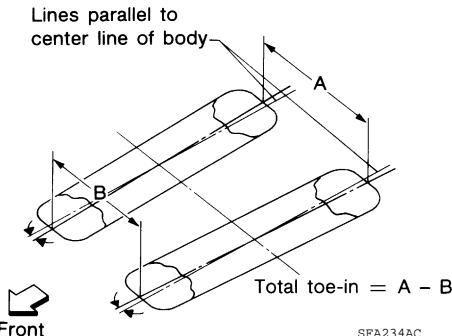

SPA234AC

Total toe-in	Distance (A - B)	Minimum	Out 0.6 mm (Out 0.024 in)
		Nominal	In 1.4 mm (In 0.055 in)
		Maximum	In 3.4 mm (In 0.134 in)
	Angle (left and right) Degree minute (Decimal degree)	Minimum	Out 0° 3' 36" (Out 0.06°)
		Nominal	In 0° 6' 14" (In 0.10°)
		Maximum	In 0° 15' 36" (In 0.26°)

Measure value under unladen conditions (Fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions).

*1: The (RH) camber angle shall be -0° 15'± 0° 33' (0.25°± 0.55°) with respect to the (LH) camber angle.


CANADA

Item		Standard	
		(LH) side	(RH) side
Measurement wheel			
Camber Degree minute (Decimal degree)	Minimum	-1° 00' (-1.00°)	-1° 15' (-1.25°)
	Nominal	-0° 15' (-0.25°)	-0° 30' (-0.50°)
	Maximum	0° 30' (0.50°)	0° 15' (0.25°)
	Left and right difference ^{*1}	-0° 15'± 0° 33' (0.25°± 0.55°)	

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

Item	Standard	
Caster Degree minute (Decimal degree)	Minimum	4° 00' (4.00°)
	Nominal	4° 45' (4.75°)
	Maximum	5° 30' (5.50°)
	Left and right difference* ¹	0.30' (0.50°) Maximum
Kingpin inclination Degree minute (Decimal degree)	Minimum	11° 55' (11.92°)
	Nominal	12° 40' (12.67°)
	Maximum	13° 25' (13.42°)
		12° 10' (12.17°)
		12° 55' (12.92°)
		13° 40' (13.67°)

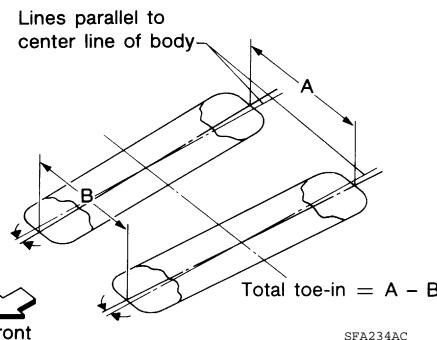

Total toe-in	Distance (A - B)	Minimum	Out 0.6 mm (Out 0.024 in)
		Nominal	In 1.4 mm (In 0.055 in)
		Maximum	In 3.4 mm (In 0.134 in)
	Angle (left and right) Degree minute (Decimal degree)	Minimum	Out 0° 3' 36" (Out 0.06°)
		Nominal	In 0° 6' 14" (In 0.10°)
		Maximum	In 0° 15' 36" (In 0.26°)

Measure value under unladen conditions. (Fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions).

*1: The (RH) camber angle shall be $-0^\circ 15' \pm 0^\circ 33'$ ($0.25^\circ \pm 0.55^\circ$) with respect to the (LH) camber angle.

Ball Joint

INFOID:0000000008507541

Item	Standard	
Swing torque	Transverse link	0.5 – 4.9 N·m (0.05 – 0.50 kg-m, 4 – 43 in-lb)
Measurement on spring balance	Transverse link	11.1 – 108.9 N (1.13 – 11.11 kg, 2.50 – 24.48 lb)
Axial end play		0 mm (0 in)

Wheelarch Height


INFOID:0000000008507542

UNITED STATES

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

Unit: mm (in)

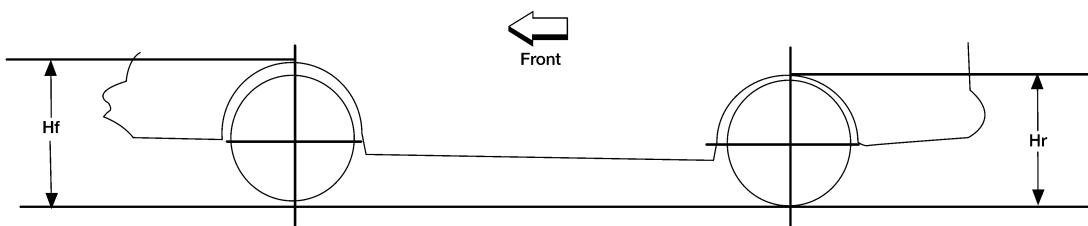


LEIA0085E

Axle type	2WD		4WD		
Wheel size	235/65R18		235/55R20	235/65R18	
Grade	S, SV	SL	Platinum	S, SV	SL, Platinum
Front (Hf)	823 (32.40)	823 (32.40)	821 (32.32)	822 (32.36)	822 (32.36)
Rear (Hr)	828 (32.60)	827 (32.56)	825 (32.48)	827 (32.56)	826 (32.52)

Measure value under unladen conditions. (Fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions).

CANADA

Unit: mm (in)

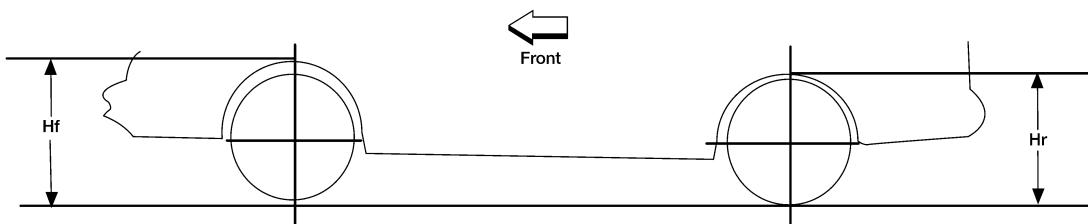

LEIA0085E

Axle type	2WD		4WD			
Wheel size	235/65R18			235/55R20		
Grade	S	SL	S	SV	SL	Platinum
Front (Hf)	823 (32.40)				822 (32.36)	
Rear (Hr)	829 (32.64)		828 (32.60)		827 (32.56)	


Measure value under unladen* conditions. (Fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions).

MEXICO

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

Unit: mm (in)

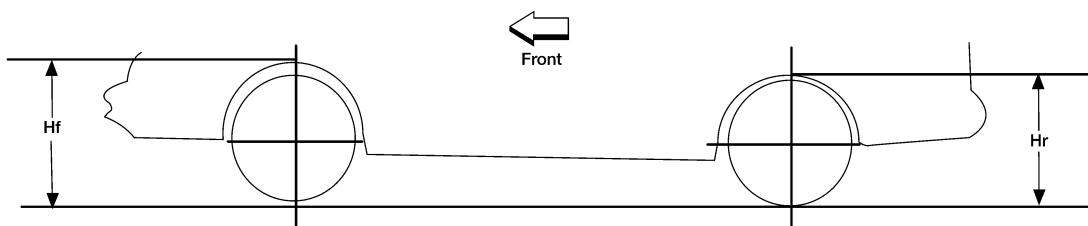

LEIA0085E

Axle type	2WD		4WD	
Wheel size	235/65R18		235/55R20	
Grade	Sense	Advance	Exclusive	Exclusive 4WD
Front (Hf)		823 (32.40)		821 (32.32)
Rear (Hr)		828 (32.60)	826 (32.52)	825 (32.48)

Measure value under unladen* conditions. (Fuel, engine coolant and lubricant are full. Spare tire, jack, hand tools and mats are in designated positions).

A

B

C

D

FSU

F

G

H

I

J

K

L

M

N

O

P