

SECTION **GI**
GENERAL INFORMATION

B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONTENTS

HOW TO USE THIS MANUAL	3	Cautions in Removing Battery Terminal, Display Control Unit, and AV Control Unit	23
HOW TO USE THIS MANUAL	3	General Precautions	24
Description	3	Three Way Catalyst	25
Terms	3	Multiport Fuel Injection System or Engine Control System	25
Units	3	Hoses	26
Contents	3	Engine Oils	26
Relation between Illustrations and Descriptions	4	Air Conditioning	27
Components	4	Fuel	27
HOW TO FOLLOW TROUBLE DIAGNOSES	6	LIFTING POINT	29
Description	6	Commercial Service Tools	29
How to Follow Test Groups in Trouble Diagnosis.....	6	Garage Jack and Safety Stand and 2-Pole Lift	29
Key to Symbols Signifying Measurements or Procedures	7	Board-On Lift	30
HOW TO READ WIRING DIAGRAMS	9	TOW TRUCK TOWING	31
Connector Symbols	9	Tow Truck Towing	31
Sample/Wiring Diagram -Example-	10	Vehicle Recovery (Freeing a Stuck Vehicle)	32
Connector Information	12	VEHICLE INFORMATION	34
ABBREVIATIONS	14	IDENTIFICATION INFORMATION	34
Abbreviation List	14	Model Variation	34
TIGHTENING TORQUE OF STANDARD BOLTS	19	Information About Identification or Model Code	35
Description	19	Dimensions	37
Tightening Torque Table (New Standard Included)	19	Wheels & Tires	38
RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS	22	BASIC INSPECTION	39
Recommended Chemical Products and Sealants...22		SERVICE INFORMATION FOR ELECTRICAL INCIDENT	39
PRECAUTION	23	Work Flow	39
PRECAUTIONS	23	Control Units and Electrical Parts	39
Description	23	How to Check Terminal	40
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	23	Intermittent Incident	43
Precaution for Procedure without Cowl Top Cover...23		Circuit Inspection	46
		CONSULT/GST CHECKING SYSTEM	51
		Description	51
		CONSULT Function and System Application*1	51

CONSULT/GST Data Link Connector (DLC) Circuit	52	ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL	77
Wiring Diagram - CONSULT/GST CHECKING SYSTEM -	54	ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Required Procedure After Battery Disconnection	77
INSPECTION AND ADJUSTMENT	77		

HOW TO USE THIS MANUAL

< HOW TO USE THIS MANUAL >

HOW TO USE THIS MANUAL

GI

Description

INFOID:000000009601590

This volume explains “Removal, Disassembly, Installation, Inspection and Adjustment” and “Trouble Diagnoses”.

Terms

INFOID:000000009601591

- The captions **WARNING** and **CAUTION** warn you of steps that must be followed to prevent personal injury and/or damage to some part of the vehicle.

WARNING indicates the possibility of personal injury if instructions are not followed.

CAUTION indicates the possibility of component damage if instructions are not followed.

BOLD TYPED STATEMENTS except **WARNING** and **CAUTION** give you helpful information.

Standard value: Tolerance at inspection and adjustment.

Limit value: The maximum or minimum limit value that should not be exceeded at inspection and adjustment.

Units

INFOID:000000009601592

- The **UNITS** given in this manual are primarily expressed as the SI UNIT (International System of Unit), and alternatively expressed in the metric system and in the yard/pound system. Also with regard to tightening torque of bolts and nuts, there are descriptions both about range and about the standard tightening torque.

“Example”

Range

Outer Socket Lock Nut : 59 - 78 N-m (6.0 - 8.0 kg-m, 43 - 58 ft-lb)

Standard

Drive Shaft Installation Bolt : 44.3 N-m (4.5 kg-m, 33 ft-lb)

Contents

INFOID:000000009601593

- **A QUICK REFERENCE INDEX**, a black tab (e.g. **BR**) is provided on the first page. You can quickly find the first page of each section by matching it to the section's black tab.
- **THE CONTENTS** are listed on the first page of each section.
- **THE TITLE** is indicated on the upper portion of each page and shows the part or system.
- **THE PAGE NUMBER** of each section consists of two or three letters which designate the particular section and a number (e.g. “BR-5”).
- **THE SMALL ILLUSTRATIONS** show the important steps such as inspection, use of special tools, knacks of work and hidden or tricky steps which are not shown in the previous large illustrations. Assembly, inspection and adjustment procedures for the complicated units such as the automatic transaxle or transmission, etc. are presented in a step-by-step format where necessary.


HOW TO USE THIS MANUAL

< HOW TO USE THIS MANUAL >

Relation between Illustrations and Descriptions

INFOID:000000009601594

The following sample explains the relationship between the part description in an illustration, the part name in the text and the service procedures.

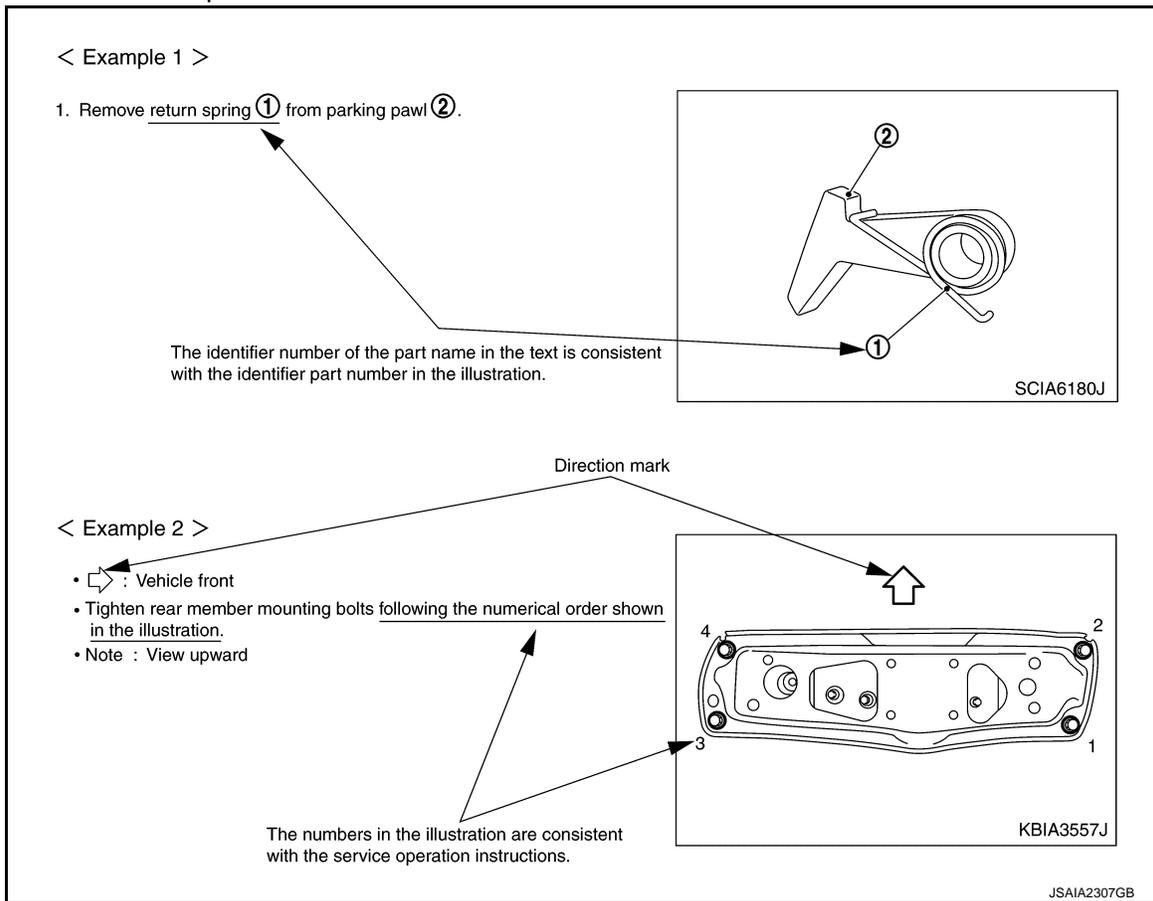

Components

INFOID:000000009601595


- **THE LARGE ILLUSTRATIONS** are exploded views (see the following) and contain tightening torques, lubrication points, section number of the **PARTS CATALOG** (e.g. SEC. 440) and other information necessary to perform repairs.

The illustrations should be used in reference to service matters only. When ordering parts, refer to the appropriate **PARTS CATALOG**.

Components shown in an illustration may be identified by a circled number. When this style of illustration is used, the text description of the components will follow the illustration.

HOW TO USE THIS MANUAL

< HOW TO USE THIS MANUAL >

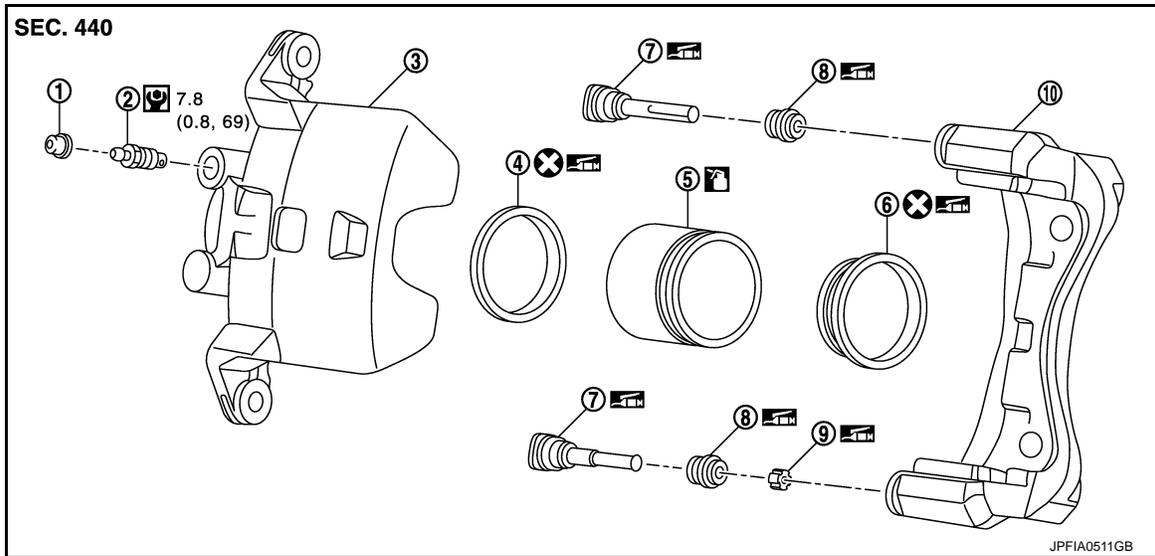

- | | | |
|-----------------|--------------------|-----------------|
| ① Cap | ② Bleeder valve | ③ Cylinder body |
| ④ Piston seal | ⑤ Piston | ⑥ Piston boot |
| ⑦ Sliding pin | ⑧ Sliding pin boot | ⑨ Bushing |
| ⑩ Torque member | | |

: Apply rubber grease.

: Apply brake fluid.

: N·m (kg-m, ft-lb)

: Always replace after every disassembly

SYMBOLS

SYMBOL	DESCRIPTION		SYMBOL	DESCRIPTION
	N·m (kg-m, ft-lb)	Tightening torque The tightening torque specifications of bolts and nuts may be presented as either a range or a standard tightening torque.		Always replace after every disassembly.
	N·m (kg-m, ft-lb)		★	Select with proper thickness.
	Should be lubricated with oil.		☆	Adjustment is required.
	Sealing point		←	Direction
	Should be lubricated with grease. Unless otherwise indicated, use recommended multi-purpose grease.			Metal clip
	Apply petroleum jelly.			Clip
	Sealing point with locking sealant.			Pawl
	Apply ATF.			

HOW TO FOLLOW TROUBLE DIAGNOSES

< HOW TO USE THIS MANUAL >

HOW TO FOLLOW TROUBLE DIAGNOSES

Description

INFOID:000000009601596

NOTICE:

Trouble diagnoses indicate work procedures required to diagnose problems effectively. Observe the following instructions before diagnosing.


- Before performing trouble diagnoses, read the “Work Flow” in each section.
- After repairs, re-check that the problem has been completely eliminated.
- Refer to Component Parts and Harness Connector Location for the Systems described in each section for identification/location of components and harness connectors.
- When checking circuit continuity, ignition switch should be OFF.
- Refer to the Circuit Diagram for quick pinpoint check.

If you need to check circuit continuity between harness connectors in more detail, such as when a sub-harness is used, refer to Wiring Diagram in each individual section and Harness Layout in PG section for identification of harness connectors.

- Before checking voltage at connectors, check battery voltage.
- After accomplishing the Diagnosis Procedures and Electrical Components Inspection, check that all harness connectors are reconnected as they were.

How to Follow Test Groups in Trouble Diagnosis

INFOID:000000009601597

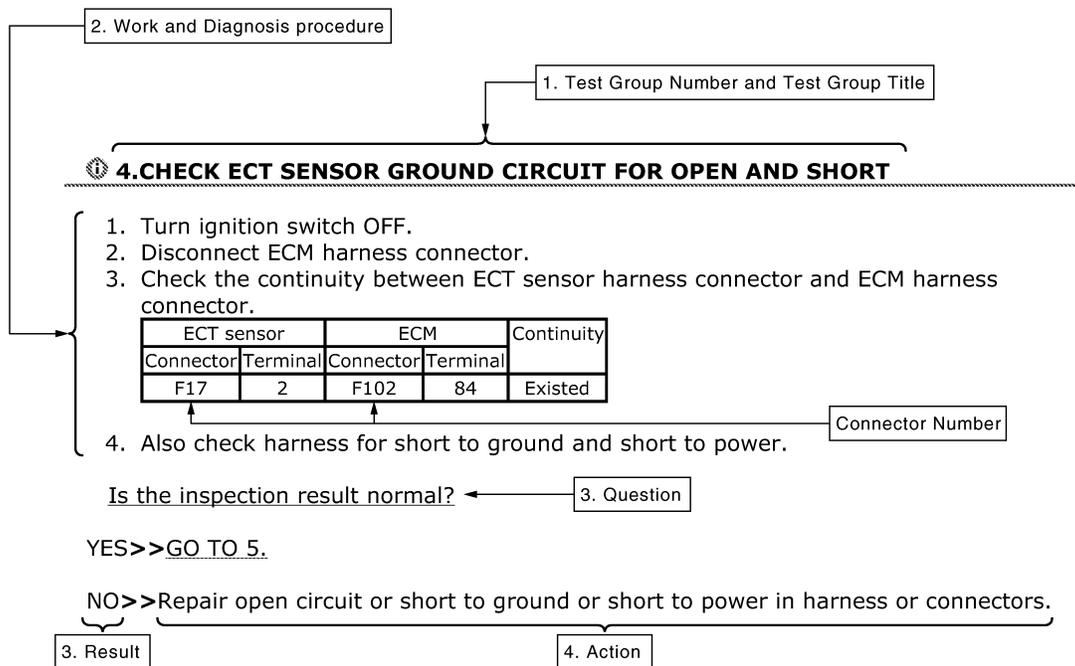

JPAIA0021GB




1. Test group number and test group title
 - Test group number and test group title are shown in the upper portion of each test group.
2. Work and diagnosis procedure
 - Start to diagnose a problem using procedures indicated in enclosed test groups.
3. Questions and results
 - Questions and required results are indicated in test group.
4. Action
 - Next action for each test group is indicated based on result of each question.

HOW TO FOLLOW TROUBLE DIAGNOSES

< HOW TO USE THIS MANUAL >

Key to Symbols Signifying Measurements or Procedures

INFOID:000000009601598

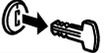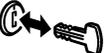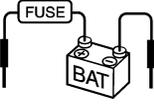SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	Check after disconnecting the connector to be measured.		Procedure with Generic Scan Tool. (GST, OBD-II scan tool)
	Check after connecting the connector to be measured.		Procedure without CONSULT or GST
	Insert key into ignition switch.		A/C switch is "OFF".
	Remove key from ignition switch.		A/C switch is "ON".
	Insert and remove key repeatedly.		REC switch is "ON".
	Turn ignition switch to "OFF" position.		REC switch is "OFF".
	Turn ignition switch to "ACC" position.		Fan switch is "ON". (At any position except for "OFF" position)
	Turn ignition switch to "ON" position.		Fan switch is "OFF".
	Turn ignition switch to "START" position.		Apply fuse.
	Turn ignition switch from "OFF" to "ACC" position.		Apply positive voltage from battery with fuse directly to components.
	Turn ignition switch from "ACC" to "ON" position.		
	Turn ignition switch from "ACC" to "OFF" position.		

JPAIA0982GB

GI

B

C

D

E

F

G

H

I

J

K

L

M



N

O

P

HOW TO FOLLOW TROUBLE DIAGNOSES

< HOW TO USE THIS MANUAL >

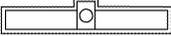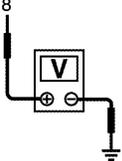SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	Turn ignition switch from "OFF" to "ON" position.		Drive vehicle.
	Turn ignition switch from "ON" to "OFF" position.		
	Do not start engine, or check with engine stopped.		Disconnect battery negative cable.
	Start engine, or check with engine running.		Depress brake pedal.
	Apply parking brake.		Release brake pedal.
	Release parking brake.		Depress accelerator pedal.
	Release parking brake.		Release accelerator pedal.
	Check after engine is warmed up sufficiently.	  	Pin terminal check for SMJ type ECM or TCM connectors. For details regarding the terminal arrangement, refer to the "ELECTRICAL UNITS" electrical reference page at the end of the manual.
	Voltage should be measured with a voltmeter.		
	Circuit resistance should be measured with an ohmmeter.		
			
	Current should be measured with an ammeter.		
	Pulse signal should be checked with an oscilloscope.		
	Procedure with CONSULT		
	Procedure without CONSULT		
	Place selector lever in "P" position.		
	Place selector lever in "N" position.		
	Jack up front portion.		
	Jack up rear portion.		
	Inspect under engine room.		
	Inspect under floor.		
	Inspect rear under floor.		

JSAIA1461GB

HOW TO READ WIRING DIAGRAMS

< HOW TO USE THIS MANUAL >

HOW TO READ WIRING DIAGRAMS


GI

Connector Symbols


INFOID:000000009601599

Most of connector symbols in wiring diagrams are shown from the terminal side.

- Connector symbols shown from the terminal side are enclosed by a single line and followed by the direction mark.
- Connector symbols shown from the harness side are enclosed by a double line and followed by the direction mark.
- Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to PG section, "Description", "HARNESS CONNECTOR".

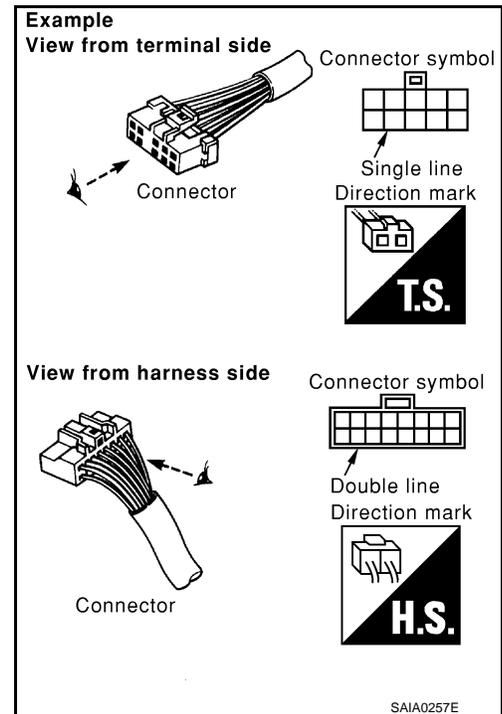

- Male and female terminals
Connector guides for male terminals are shown in black and female terminals in white in wiring diagrams.

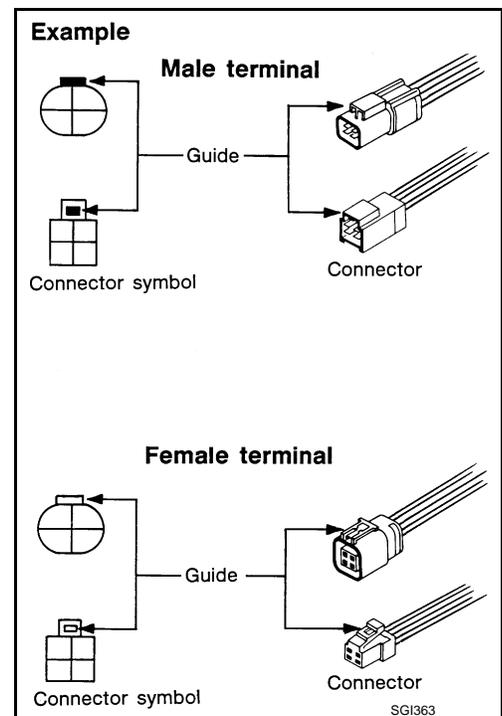

B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


HOW TO READ WIRING DIAGRAMS

< HOW TO USE THIS MANUAL >

Sample/Wiring Diagram -Example-

INFOID:00000009601600

Each section includes wiring diagrams.

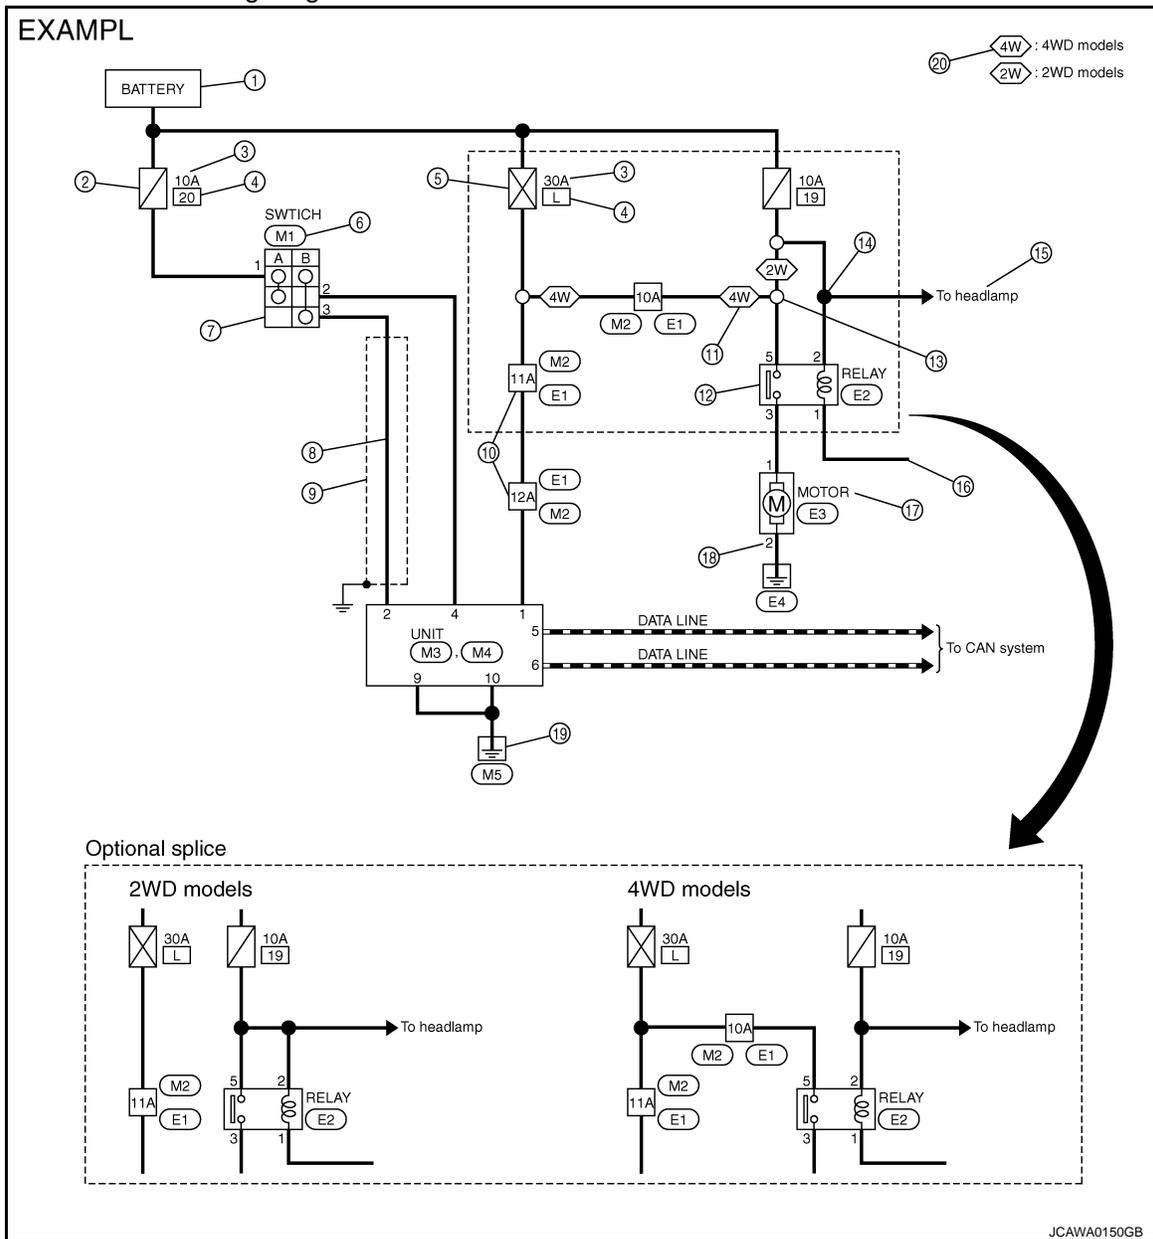

Description

Number	Item	Description
①	Power supply	• This means the power supply of fusible link or fuse.
②	Fuse	• “/” means the fuse.
③	Current rating of fusible link/fuse	• This means the current rating of the fusible link or fuse.
④	Number of fusible link/fuse	• This means the number of fusible link or fuse location.
⑤	Fusible link	• “X” means the fusible link.
⑥	Connector number	• Alphabetic characters show to which harness the connector is placed. • Numeric characters show the identification number of connectors.
⑦	Switch	• This shows that continuity exists between terminals 1 and 2 when the switch is in the A position. Continuity exists between terminals 1 and 3 when the switch is in the B position.
⑧	Circuit (Wiring)	• This means the wiring.

HOW TO READ WIRING DIAGRAMS

< HOW TO USE THIS MANUAL >


Number	Item	Description
⑨	Shielded line	• The line enclosed by broken line circle shows shield wire.
⑩	Connectors	• This means that a transmission line bypasses two connectors or more.
⑪	Option abbreviation	• This means the vehicle specifications which layouts the circuit between “O”.
⑫	Relay	• This shows an internal representation of the relay.
⑬	Optional splice	• The open circle shows that the splice is optional depending on vehicle application.
⑭	Splice	• The shaded circle “●” means the splice.
⑮	System branch	• This shows that the circuit is branched to other systems.
⑯	Page crossing	• This circuit continues to an adjacent page.
⑰	Component name	• This shows the name of a component.
⑱	Terminal number	• This means the terminal number of a connector.
⑲	Ground (GND)	• This shows the ground connection.
⑳	Explanation of option description	• This shows a description of the option abbreviation used on the page.

SWITCH POSITIONS

Switches are shown in wiring diagrams as if the vehicle is in the “normal” condition.

A vehicle is in the “normal” condition when:

- ignition switch is “OFF”
- doors, hood and trunk lid/back door are closed
- pedals are not depressed
- parking brake is released

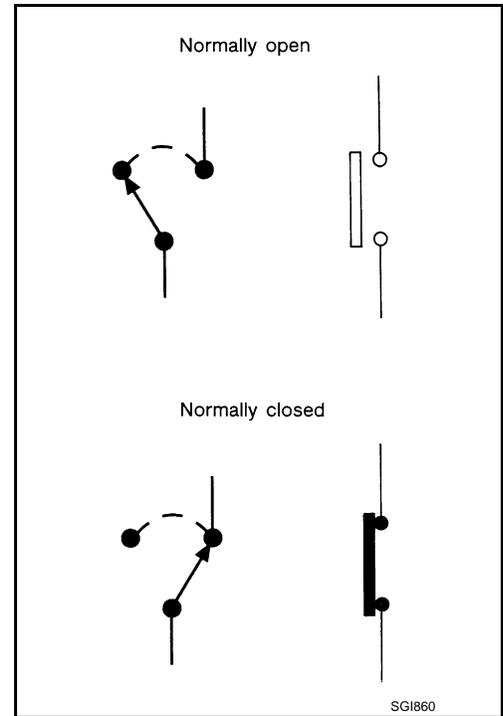

MULTIPLE SWITCH

The continuity of multiple switch is described in two ways as shown below.

- The switch chart is used in schematic diagrams.

HOW TO READ WIRING DIAGRAMS

< HOW TO USE THIS MANUAL >

- The switch diagram is used in wiring diagrams.

Example

(SWITCH CHART)

WIPER SWITCH		OFF	INT	LO	HI	WASH
1						○
2				○		
3	○	○	○			
4	○	○	○	○		
5		○				
6		○	○	○	○	

(SWITCH DIAGRAM)

Both switches are turned in combination.

Continuity circuit of wiper switch

SWITCH POSITION	CONTINUITY CIRCUIT
OFF	3-4
INT	3-4, 5-6
LO	3-6
HI	2-6
WASH	1-6

JSAIA0017GB

Connector Information

INFOID:000000009601601

HOW TO USE CONNECTOR INFORMATION

① Connector No. M3

Connector Name UNIT

② Connector Type NS06FW-M2

H.S.

③ ④

Terminal No.	Color of Wire	Signal Name [Specification]
1	W	BAT
2	G	SWITCH B
4	V	SWITCH A
5	L	CAN-H
6	P	CAN-L

⑤

Connector No. M4

Connector Name UNIT

Connector Type NS10FW-CS

H.S.

Terminal No.	Color of Wire	Signal Name [Specification]
9	B	GND
10	B	GND

JCAWA0152GB

HOW TO READ WIRING DIAGRAMS

< HOW TO USE THIS MANUAL >

Description				
Number	Item	Description		
①	Connector number	<ul style="list-style-type: none"> Alphabetic characters show to which harness the connector is placed. Numeric characters show the identification number of connectors. 		
②	Connector type	<ul style="list-style-type: none"> ①: Connector model ②: Cavity ③: Male (M) and female (F) terminals ④: Connector color ⑤: Special type <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>Example:</p> <p style="text-align: right; font-size: small;">JPMIA0113GB</p> </div>		
③	Terminal number	<ul style="list-style-type: none"> This means the terminal number of a connector. 		
④	Wire color	<ul style="list-style-type: none"> This shows a code for the color of the wire. <table style="width: 100%; border: none;"> <tr> <td style="width: 50%; border: none;"> B = Black W = White R = Red G = Green L = Blue Y = Yellow LG = Light Green BG or BE = Beige LA = Lavender </td> <td style="width: 50%; border: none;"> BR = Brown OR or O = Orange P = Pink PU or V (Violet) = Purple GY or GR = Gray SB = Sky Blue CH = Dark Brown DG = Dark Green </td> </tr> </table> <ul style="list-style-type: none"> When the wire color is striped, the base color is given first, followed by the stripe color as shown below: Example: L/W = Blue with White Stripe 	B = Black W = White R = Red G = Green L = Blue Y = Yellow LG = Light Green BG or BE = Beige LA = Lavender	BR = Brown OR or O = Orange P = Pink PU or V (Violet) = Purple GY or GR = Gray SB = Sky Blue CH = Dark Brown DG = Dark Green
B = Black W = White R = Red G = Green L = Blue Y = Yellow LG = Light Green BG or BE = Beige LA = Lavender	BR = Brown OR or O = Orange P = Pink PU or V (Violet) = Purple GY or GR = Gray SB = Sky Blue CH = Dark Brown DG = Dark Green			
⑤	Connector	<ul style="list-style-type: none"> This means the connector information. This unit-side is described by the connector symbols. 		

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

ABBREVIATIONS

< HOW TO USE THIS MANUAL >

ABBREVIATIONS

Abbreviation List

INFOID:00000009780762

The following **ABBREVIATIONS** are used:

A

ABBREVIATION	DESCRIPTION
A/C	Air conditioner
A/C	Air conditioning
A/F sensor	Air fuel ratio sensor
A/T	Automatic transaxle/transmission
ABS	Anti-lock braking system
ACCS	Advance climate control system
ACL	Air cleaner
AP	Accelerator pedal
APP	Accelerator pedal position
ATF	Automatic transmission fluid
AV	Audio visual
AWD	All wheel drive

B

ABBREVIATION	DESCRIPTION
BARO	Barometric pressure
BCI	Back-up collision intervention
BCM	Body control module
BLSD	Brake limited slip differential
BPP	Brake pedal position
BSW	Blind spot warning

C

ABBREVIATION	DESCRIPTION
CKP	Crankshaft position
CL	Closed loop
CMP	Camshaft position
CPP	Clutch pedal position
CTP	Closed throttle position
CVT	Continuously variable transaxle/transmission

D

ABBREVIATION	DESCRIPTION
D1	Drive range first gear
D2	Drive range second gear
D3	Drive range third gear
D4	Drive range fourth gear
DCA	Distance control assist
DDS	Downhill drive support
DFI	Direct fuel injection system
DLC	Data link connector
DTC	Diagnostic trouble code

ABBREVIATIONS

< HOW TO USE THIS MANUAL >

E		
ABBREVIATION	DESCRIPTION	
E/T	Exhaust temperature	GI
EBD	Electric brake force distribution	
EC	Engine control	B
ECL	Engine coolant level	
ECM	Engine control module	C
ECT	Engine coolant temperature	
ECV	Electrical control valve	
EEPROM	Electrically erasable programmable read only memory	D
EFT	Engine fuel temperature	
EGR	Exhaust gas recirculation	E
EGRT	Exhaust gas recirculation temperature	
EGT	Exhaust gas temperature	
EOP	Engine oil pressure	F
EP	Exhaust pressure	
EPR	Exhaust pressure regulator	G
EPS	Electronically controlled power steering	
ESP	Electronic stability program system	H
EVAP canister	Evaporative emission canister	
EVSE	Electric vehicle supply equipment	
EXC	Exhaust control	I

F		
ABBREVIATION	DESCRIPTION	
FC	Fan control	J
FCW	Forward collision warning	
FEB	Forward emergency braking	
FIC	Fuel injector control	K
FP	Fuel pump	
FR	Front	L
FRP	Fuel rail pressure	
FRT	Fuel rail temperature	
FTP	Fuel tank pressure	M
FTT	Fuel tank temperature	

G		
ABBREVIATION	DESCRIPTION	
GND	Ground	N
GPS	Global positioning system	O
GST	Generic scan tool	

H		
ABBREVIATION	DESCRIPTION	
HBMC	Hydraulic body-motion control system	P
HDD	Hard disk drive	
HO2S	Heated oxygen sensor	
HOC	Heated oxidation catalyst	
HPCM	Hybrid power train control module	

ABBREVIATIONS

< HOW TO USE THIS MANUAL >

I	
ABBREVIATION	DESCRIPTION
I/M	Inspection and maintenance
IA	Intake air
IAC	Idle air control
IAT	Intake air temperature
IBA	Intelligent brake assist
IC	Ignition control
ICC	Intelligent cruise control
ICM	Ignition control module
IPDM E/R	Intelligent power distribution module engine room
ISC	Idle speed control
ISS	Input shaft speed

K	
ABBREVIATION	DESCRIPTION
KS	Knock sensor

L	
ABBREVIATION	DESCRIPTION
LBC	Li-ion battery controller
LCD	Liquid crystal display
LCU	Local control unit
LDP	Lane departure prevention
LDW	Lane departure warning
LED	Light emitting diode
LH	Left-hand
LIN	Local interconnect network

M	
ABBREVIATION	DESCRIPTION
M/T	Manual transaxle/transmission
MAF	Mass airflow
MAP	Manifold absolute pressure
MDU	Multi display unit
MI	Malfunction indicator
MIL	Malfunction indicator lamp

N	
ABBREVIATION	DESCRIPTION
NOX	Nitrogen oxides

O	
ABBREVIATION	DESCRIPTION
O2	Oxygen
O2S	Oxygen sensor
OBD	On board diagnostic
OC	Oxidation catalytic converter
OD	Overdrive
OL	Open loop
OSS	Output shaft speed

ABBREVIATIONS

< HOW TO USE THIS MANUAL >

P		
ABBREVIATION	DESCRIPTION	
P/S	Power steering	GI
PBR	Potential balance resistor	
PCV	Positive crankcase ventilation	B
PFCW	Predictive forward collision warning	
PNP	Park/Neutral position	C
PSP	Power steering pressure	
PTC	Positive temperature coefficient	
PTO	Power takeoff	D
PWM	Pulse width modulation	
R		
ABBREVIATION	DESCRIPTION	
RAM	Random access memory	E
RAS	Rear active steer	F
RH	Right-hand	
ROM	Read only memory	G
RPM	Engine speed	
RR	Rear	
S		
ABBREVIATION	DESCRIPTION	
SAE	Society of Automotive Engineers, Inc.	H
SCK	Serial clock	I
SDS	Service Data and Specifications	
SRT	System readiness test	J
SST	Special Service Tools	
T		
ABBREVIATION	DESCRIPTION	
TC	Turbocharger	K
TCM	Transmission control module	
TCS	Traction control system	L
TCU	Telematics communication unit	
TP	Throttle position	M
TPMS	Tire pressure monitoring system	
TSS	Turbine shaft speed	
TWC	Three way catalytic converter	N
U		
ABBREVIATION	DESCRIPTION	
USS	Uphill start support	O
V		
ABBREVIATION	DESCRIPTION	
VCM	Vehicle control module	P
VDC	Vehicle dynamics control system	
VIN	Vehicle identification number	
VSS	Vehicle speed sensor	

ABBREVIATIONS

< HOW TO USE THIS MANUAL >

W

ABBREVIATION	DESCRIPTION
WOT	Wide open throttle

1

ABBREVIATION	DESCRIPTION
11	1st range first gear
12	1st range second gear
1GR	First gear

2

ABBREVIATION	DESCRIPTION
21	2nd range first gear
22	2nd range second gear
2GR	Second gear
2WD	2-wheel drive

3

ABBREVIATION	DESCRIPTION
3GR	Third gear

4

ABBREVIATION	DESCRIPTION
4GR	Fourth gear
4WAS	Four wheel active steer
4WD	Four wheel drive

5

ABBREVIATION	DESCRIPTION
5GR	Fifth gear

6

ABBREVIATION	DESCRIPTION
6GR	Sixth gear

7

ABBREVIATION	DESCRIPTION
7GR	Seventh gear

TIGHTENING TORQUE OF STANDARD BOLTS

< HOW TO USE THIS MANUAL >

TIGHTENING TORQUE OF STANDARD BOLTS

GI

Description

INFOID:000000009233765

This vehicle has both new standard based on ISO* and previous standard bolts/nuts. There are some differences between these two types of bolts/ nuts; shape of the head, grade of strength, hexagonal width across flats and the standard tightening torque.

- For guidance in discriminating, refer to [GI-19, "Tightening Torque Table \(New Standard Included\)"](#).
- The new standard machine screws and tapping screws have a head of ISO standard torx recess.
- If the tightening torque is not described in the description or figure, refer to [GI-19, "Tightening Torque Table \(New Standard Included\)"](#).

*ISO: International Organization for Standardization

Tightening Torque Table (New Standard Included)

INFOID:000000009233766

CAUTION:

- The special parts are excluded.
- The bolts/nuts in these tables have a strength (discrimination) number/symbol assigned to the head or the like. As to the relation between the strength grade in these tables and the strength (discrimination) number/symbol, refer to "DISCRIMINATION OF BOLTS AND NUTS".

PREVIOUS STANDARD

Grade (Strength grade)	Bolt size	Bolt di- ameter mm	Hexagonal width across flats mm	Pitch mm	Tightening torque (Without lubricant)							
					Hexagon head bolt				Hexagon flange bolt			
					N-m	kg-m	ft-lb	in-lb	N-m	kg-m	ft-lb	in-lb
4T	M6	6.0	10	1.0	5.5	0.56	4	49	7	0.71	5	62
	M8	8.0	12	1.25	13.5	1.4	10	—	17	1.7	13	—
				1.0	13.5	1.4	10	—	17	1.7	13	—
	M10	10.0	14	1.5	28	2.9	21	—	35	3.6	26	—
				1.25	28	2.9	21	—	35	3.6	26	—
	M12	12.0	17	1.75	45	4.6	33	—	55	5.6	41	—
1.25				45	4.6	33	—	65	6.6	48	—	
M14	14.0	19	1.5	80	8.2	59	—	100	10	74	—	
7T	M6	6.0	10	1.0	9	0.92	7	80	11	1.1	8	97
	M8	8.0	12	1.25	22	2.2	16	—	28	2.9	21	—
				1.0	22	2.2	16	—	28	2.9	21	—
	M10	10.0	14	1.5	45	4.6	33	—	55	5.6	41	—
				1.25	45	4.6	33	—	55	5.6	41	—
	M12	12.0	17	1.75	80	8.2	59	—	100	10	74	—
1.25				80	8.2	59	—	100	10	74	—	
M14	14.0	19	1.5	130	13	96	—	170	17	125	—	
9T	M6	6.0	10	1.0	11	1.1	8	—	13.5	1.4	10	—
	M8	8.0	12	1.25	28	2.9	21	—	35	3.6	26	—
				1.0	28	2.9	21	—	35	3.6	26	—
	M10	10.0	14	1.5	55	5.6	41	—	80	8.2	59	—
				1.25	55	5.6	41	—	80	8.2	59	—
	M12	12.0	17	1.75	100	10	74	—	130	13	96	—
1.25				100	10	74	—	130	13	96	—	
M14	14.0	19	1.5	170	17	125	—	210	21	155	—	

CAUTION:

TIGHTENING TORQUE OF STANDARD BOLTS

< HOW TO USE THIS MANUAL >

The parts with aluminum or the cast iron washer surface/thread surface are excluded.

NEW STANDARD BASED ON ISO

Grade (Strength grade)	Bolt size	Bolt di- ameter mm	Hexagonal width across flats mm	Pitch mm	Tightening torque							
					Hexagon head bolt				Hexagon flange bolt			
					N-m	kg-m	ft-lb	in-lb	N-m	kg-m	ft-lb	in-lb
4.8 (Without lubricant)	M6	6.0	10	1.0	5.5	0.56	4	49	7	0.71	5	62
	M8	8.0	13	1.25	13.5	1.4	10	—	17	1.7	13	—
				1.0	13.5	1.4	10	—	17	1.7	13	—
	M10	10.0	16	1.5	28	2.9	21	—	35	3.6	26	—
				1.25	28	2.9	21	—	35	3.6	26	—
	M12	12.0	18	1.75	45	4.6	33	—	55	5.6	41	—
1.25				45	4.6	33	—	65	6.6	48	—	
M14	14.0	21	1.5	80	8.2	59	—	100	10	74	—	
4.8 (With lu- bricant)	M6	6.0	10	1.0	4	0.41	3	35	5.5	0.56	4	49
	M8	8.0	13	1.25	11	1.1	8	—	13.5	1.4	10	—
				1.0	11	1.1	8	—	13.5	1.4	10	—
	M10	10.0	16	1.5	22	2.2	16	—	28	2.9	21	—
				1.25	22	2.2	16	—	28	2.9	21	—
	M12	12.0	18	1.75	35	3.6	26	—	45	4.6	33	—
1.25				35	3.6	26	—	45	4.6	33	—	
M14	14.0	21	1.5	65	6.6	48	—	80	8.2	59	—	
8.8 (With lu- bricant)	M6	6.0	10	1.0	8	0.82	6	71	10	1.0	7	89
	M8	8.0	13	1.25	21	2.1	15	—	25	2.6	18	—
				1.0	21	2.1	15	—	25	2.6	18	—
	M10	10.0	16	1.5	40	4.1	30	—	50	5.1	37	—
				1.25	40	4.1	30	—	50	5.1	37	—
	M12	12.0	18	1.75	70	7.1	52	—	85	8.7	63	—
1.25				70	7.1	52	—	85	8.7	63	—	
M14	14.0	21	1.5	120	12	89	—	140	14	103	—	
10.9 (With lu- bricant)	M6	6.0	10	1.0	10	1.0	7	89	12	1.2	9	106
	M8	8.0	13	1.25	27	2.8	20	—	32	3.3	24	—
				1.0	27	2.8	20	—	32	3.3	24	—
	M10	10.0	16	1.5	55	5.6	41	—	65	6.6	48	—
				1.25	55	5.6	41	—	65	6.6	48	—
	M12	12.0	18	1.75	95	9.7	70	—	110	11	81	—
1.25				95	9.7	70	—	110	11	81	—	
M14	14.0	21	1.5	160	16	118	—	180	18	133	—	

CAUTION:

1. Use tightening torque with lubricant for the new standard bolts/nuts in principle. Friction coefficient stabilizer is applied to the new standard bolts/nuts.
2. However, use tightening torque without lubricant for the following cases. Friction coefficient stabilizer is not applied to the following bolts/nuts.
 - Grade 4.8, M6 size bolt, Conical spring washer installed
 - Paint removing nut (Size M6 and M8) for fixing with weld bolt

TIGHTENING TORQUE OF STANDARD BOLTS

< HOW TO USE THIS MANUAL >

DISCRIMINATION OF BOLTS AND NUTS

GI

BOLTS


	Grade (Strength)	Discrimination	
Previous standard	4T (392N/mm ²)		 (No number/ symbol)
	7T (686N/mm ²)		
	9T (883N/mm ²)		
New Standard	4.8 (420N/mm ²)		 (No number/ symbol)
	8.8 (800N/mm ²)		
	10.9 (1040N/mm ²)		

NUTS

	Grade (Proof load stress)	Discrimination		
Previous standard	7N (686N/mm ²)	 (No number/ symbol)		
	9N (883N/mm ²)			
New Standard	8 (800N/mm ²)			 (No number/ symbol)
	10 (1040N/mm ²)			

NOTICE:

- A number is assigned on the side of the nuts in some cases.
- A number or symbol is assigned on the upper surface of the flange for the nut with flange.

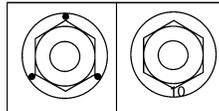

MACHINE SCREWS AND TAPPING SCREWS

Shape of the head :

Cross recess for the previous standard

Torx recess for the new standard

Screw size	Screw diameter	Torx size
M4	4.0	T20
M5	5.0	T20
M6	6.0	T30

NOTICE:

Use torx size T20 (united with M4 screw) for M5 screw although ISO standard specifies T25.

SAIA0453E

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS

< HOW TO USE THIS MANUAL >

RECOMMENDED CHEMICAL PRODUCTS AND SEALANTS

Recommended Chemical Products and Sealants

INFOID:000000009233767

Refer to the following chart for help in selecting the appropriate chemical product or sealant.

	Product Description	Purpose	Nissan North America Part No. (USA)	Nissan Canada Part No. (Canada)	Aftermarket Cross-reference Part Nos.
1	Rear View Mirror Adhesive	Used to permanently re-mount rear view mirrors to windows.	999MP-AM000P	99998-50505	Permatex 81844
2	Anaerobic Liquid Gasket	For metal-to-metal flange sealing. Can fill a 0.38 mm (0.015 inch) gap and provide instant sealing for most powertrain applications.	999MP-AM001P	99998-50503	Permatex 51813 and 51817
3	High Performance Thread Sealant	Provides instant sealing on any threaded straight or parallel threaded fitting. (Thread sealant only, no locking ability.) • Do not use on plastic.	999MP-AM002P	999MP-AM002P	Permatex 56521
4	Silicone RTV	Gasket Maker	999MP-AM003P (Ultra Grey)	99998-50506 (Ultra Grey)	Permatex Ultra Grey 82194; Three Bond 1207, 1215, 1216, 1217F, 1217G and 1217H Nissan RTV Part No. 999MP-A7007
		Gasket Maker for Maxima/Quest 5-speed automatic transmission (RE5F22A)	-	-	Three Bond 1281B or exact equivalent in its quality
5	High Temperature, High Strength Thread Locking Sealant (Red)	Threadlocker	999MP-AM004P	999MP-AM004P	Permatex 27200; Three Bond 1360, 1360N, 1305 N&P, 1307N, 1335, 1335B, 1363B, 1377C, 1386B, D&E and 1388 Loctite 648
6	Medium Strength Thread Locking Sealant (Blue)	Threadlocker (service tool removable)	999MP-AM005P	999MP-AM005P	Permatex 24200, 24206, 24240, 24283 and 09178; Three Bond 1322, 1322N, 1324 D&N, 1333D, 1361C, 1364D, 1370C and 1374

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Description

INFOID:000000009233768

Observe the following precautions to ensure safe and proper servicing. These precautions are not described in each individual section.

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009233769

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:


Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Procedure without Cowl Top Cover

INFOID:000000009233771

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

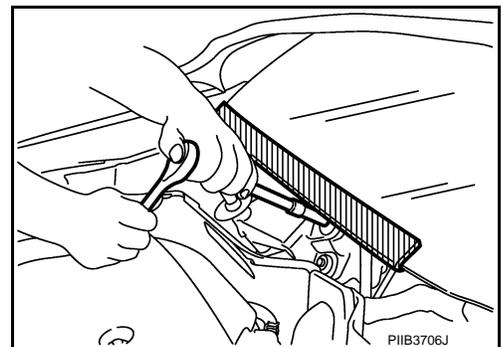

Cautions in Removing Battery Terminal, Display Control Unit, and AV Control Unit

INFOID:000000009730150

CAUTION:

Remove battery terminal, display control unit, and AV control unit after a lapse of 30 seconds or more after turning the ignition switch OFF.

PRECAUTIONS

< PRECAUTION >

NOTE:

After the ignition switch is turned OFF, the display control unit, and the AV control unit continues operating for approximately 30 seconds.


Therefore, data corruption may occur if battery voltage is cut off within 30 seconds.

General Precautions

INFOID:000000009233774

- Do not operate the engine for an extended period of time without proper exhaust ventilation.


Keep the work area well ventilated and free of any inflammable materials. Special care should be taken when handling any inflammable or poisonous materials, such as gasoline, refrigerant gas, etc. When working in a pit or other enclosed area, be sure to properly ventilate the area before working with hazardous materials. Do not smoke while working on the vehicle.

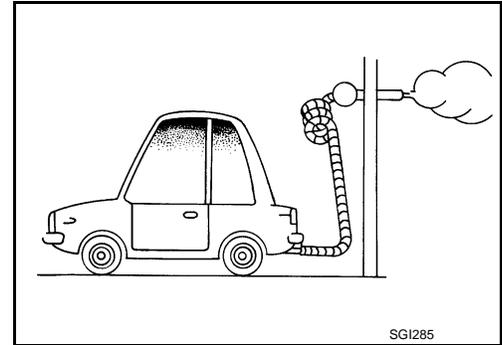


- Before jacking up the vehicle, apply wheel chocks or other tire blocks to the wheels to prevent the vehicle from moving. After jacking up the vehicle, support the vehicle weight with safety stands at the points designated for proper lifting before working on the vehicle.

These operations should be done on a level surface.

- When removing a heavy component such as the engine or transaxle/transmission, be careful not to lose your balance and drop them. Also, do not allow them to strike adjacent parts, especially the brake tubes and master cylinder.

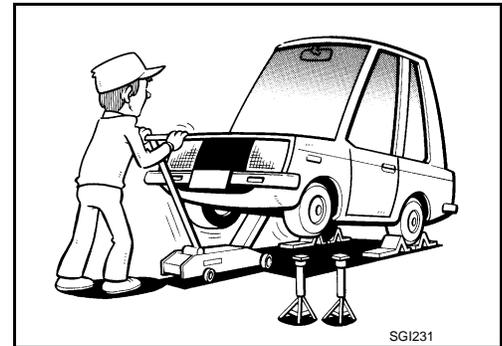

- Before starting repairs which do not require battery power:
 - Turn off ignition switch.
 - Disconnect the negative battery terminal.
- If the battery terminals are disconnected, recorded memory of radio and each control unit is erased.

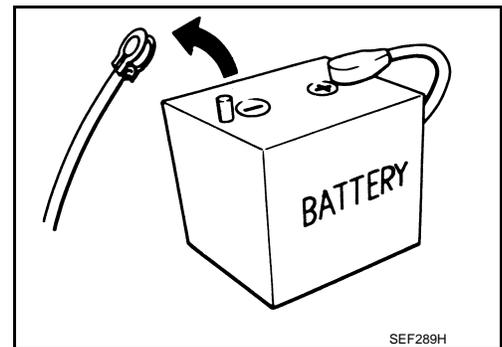


- To prevent serious burns:
 - Avoid contact with hot metal parts.
 - Do not remove the radiator cap when the engine is hot.
- Dispose of drained oil or the solvent used for cleaning parts in an appropriate manner.
- Do not attempt to top off the fuel tank after the fuel pump nozzle shuts off automatically. Continued refueling may cause fuel overflow, resulting in fuel spray and possibly a fire.
- Clean all disassembled parts in the designated liquid or solvent prior to inspection or assembly.
- Replace oil seals, gaskets, packings, O-rings, locking washers, cotter pins, self-locking nuts, etc. with new ones.
- Replace inner and outer races of tapered roller bearings and needle bearings as a set.
- Arrange the disassembled parts in accordance with their assembled locations and sequence.
- Do not touch the terminals of electrical components which use microcomputers (such as ECM).




PRECAUTIONS

< PRECAUTION >

- Static electricity may damage internal electronic components.
- After disconnecting vacuum or air hoses, attach a tag to indicate the proper connection.
- Use only the fluids and lubricants specified in this manual.
- Use approved bonding agent, sealants or their equivalents when required.
- Use hand tools, power tools (disassembly only) and recommended special tools where specified for safe and efficient service repairs.
- When repairing the fuel, oil, water, vacuum or exhaust systems, check all affected lines for leakage.

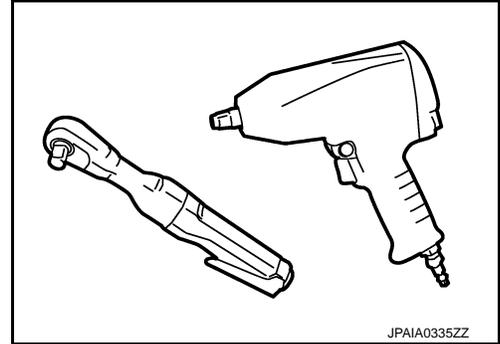

- Before servicing the vehicle:
Protect fenders, upholstery and carpeting with appropriate covers.
Take caution that keys, buckles or buttons do not scratch paint.

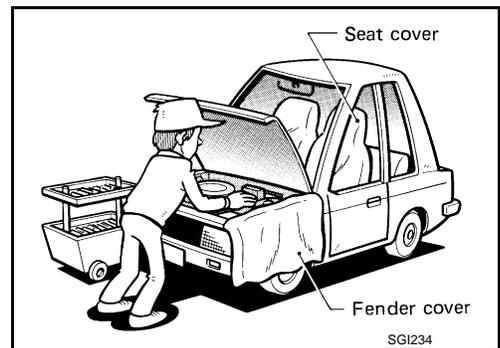

WARNING:

To prevent ECM from storing the diagnostic trouble codes, never carelessly disconnect the harness connectors which are related to the engine control system and TCM (transmission control module) system. The connectors should be disconnected only when working according to the WORK FLOW of TROUBLE DIAGNOSES in EC and TM sections.

Three Way Catalyst

INFOID:000000009233775

If a large amount of unburned fuel flows into the catalyst, the catalyst temperature will be excessively high. To prevent this, follow the instructions.


- Use unleaded gasoline only. Leaded gasoline will seriously damage the three way catalyst.
- When checking for ignition spark or measuring engine compression, make tests quickly and only when necessary.
- Do not run engine when the fuel tank level is low, otherwise the engine may misfire, causing damage to the catalyst.

Do not place the vehicle on flammable material. Keep flammable material off the exhaust pipe and the three way catalyst.

Multiport Fuel Injection System or Engine Control System

INFOID:000000009233776

- Before connecting or disconnecting any harness connector for the multiport fuel injection system or ECM:
Turn ignition switch to "OFF" position.
Disconnect negative battery terminal.
Otherwise, there may be damage to ECM.
- Before disconnecting pressurized fuel line from fuel pump to injectors, be sure to release fuel pressure.
- Be careful not to jar components such as ECM and mass air flow sensor.

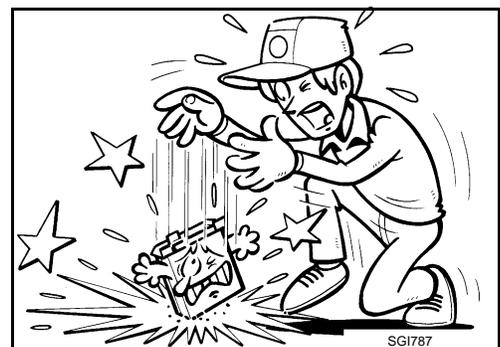

PRECAUTIONS


< PRECAUTION >

Hoses


INFOID:00000009233777

HOSE REMOVAL AND INSTALLATION

- To prevent damage to rubber hose, do not pry off rubber hose with tapered tool or screwdriver.

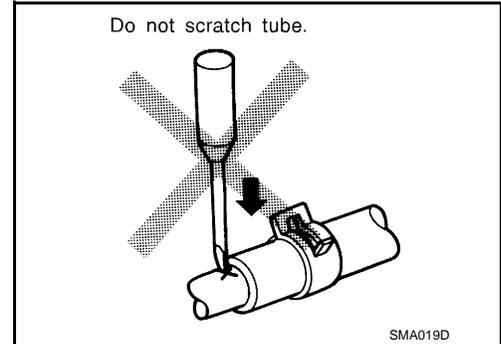


- To reinstall the rubber hose securely, check that hose insertion length and orientation is correct. (If tube is equipped with hose stopper, insert rubber hose into tube until it butts up against hose stopper.)

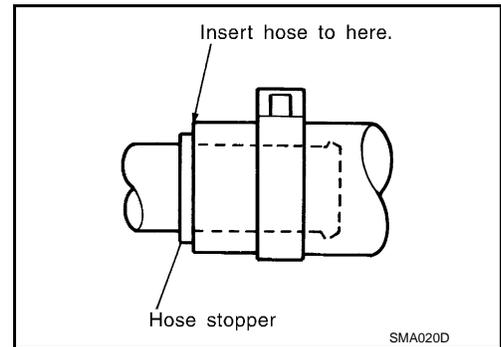


HOSE CLAMPING

- If old rubber hose is re-used, install hose clamp in its original position (at the indentation where the old clamp was). If there is a trace of tube bulging left on the old rubber hose, align rubber hose at that position.
- Discard old clamps; replace with new ones.

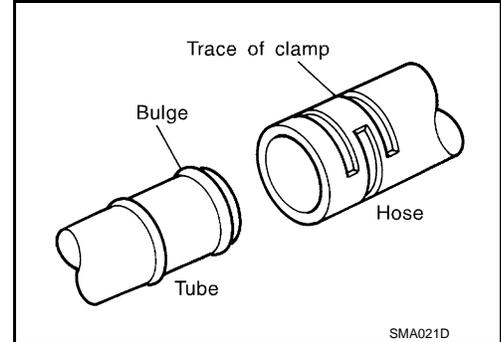

- After installing plate clamps, apply force to them in the direction of the arrow, tightening rubber hose equally all around.

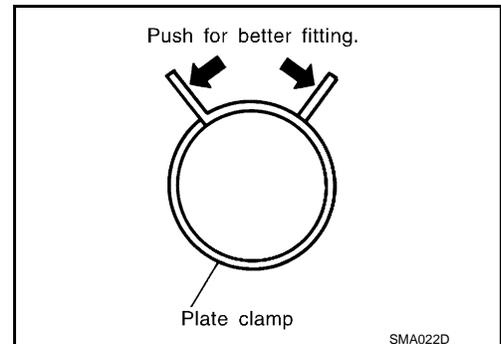

Engine Oils

INFOID:00000009233778

Prolonged and repeated contact with used engine oil may cause skin cancer. Try to avoid direct skin contact with used oil.

If skin contact is made, wash thoroughly with soap or hand cleaner as soon as possible.

HEALTH PROTECTION PRECAUTIONS

PRECAUTIONS

< PRECAUTION >

- Avoid prolonged and repeated contact with oils, particularly used engine oils.
- Wear protective clothing, including impervious gloves where practicable.
- Do not put oily rags in pockets.
- Avoid contaminating clothes, particularly underpants, with oil.
- Heavily soiled clothing and oil-impregnated footwear should not be worn. Overalls must be cleaned regularly.
- First aid treatment should be obtained immediately for open cuts and wounds.
- Use barrier creams, applying them before each work period, to help the removal of oil from the skin.
- Wash with soap and water to ensure all oil is removed (skin cleansers and nail brushes will help). Preparations containing lanolin replace the natural skin oils which have been removed.
- Do not use gasoline, kerosene, diesel fuel, gas oil, thinners or solvents for cleaning skin.
- If skin disorders develop, obtain medical advice without delay.
- Where practical, degrease components prior to handling.
- Where there is a risk of eye contact, eye protection should be worn, for example, chemical goggles or face shields; in addition an eye wash facility should be provided.

ENVIRONMENTAL PROTECTION PRECAUTIONS

Dispose of used oil and used oil filters through authorized waste disposal contractors to licensed waste disposal sites, or to the waste oil reclamation trade. If in doubt, contact the local authority for advice on disposal facilities.

It is illegal to pour used oil on to the ground, down sewers or drains, or into water sources. The regulations concerning pollution vary between regions.

Air Conditioning

INFOID:000000009233779

Use an approved refrigerant recovery unit any time the air conditioning system must be discharged. Refer to HA section "REFRIGERANT" for specific instructions.

Fuel

INFOID:000000009233780

For USA and Canada

Use unleaded premium gasoline with an octane rating of at least 91 AKI (Anti-Knock index) number (Research octane number 96).

If premium gasoline is not available, unleaded regular gasoline with an octane rating of 87 AKI number (Research octane number 91) may be temporarily used, but only under the following precautions:

- Have the fuel tank filled only partially with unleaded regular gasoline, and fill up with unleaded premium gasoline as soon as possible.
- Avoid full throttle driving and abrupt acceleration.

Use unleaded premium gasoline for maximum vehicle performance.

CAUTION:

- **Using a fuel other than that specified could adversely affect the emission control system, and may also affect warranty coverage.**
- **Under no circumstances should a leaded gasoline be used, because this will damage the three-way catalyst.**
- **Do not use E-15 or E-85 fuel in the vehicle. The vehicle is not designed to run on E-15 or E-85 fuel. Using E-15 or E-85 fuel in a vehicle not specifically designed for E-15 or E-85 fuel can adversely affect the emission control devices and systems of the vehicle. Damage caused by such fuel is not covered by the INFINITI new vehicle limited warranty.**
- **U.S. government regulations require ethanol dispensing pumps to be identified by a small, square, orange and black label with the common abbreviation or the appropriate percentage for that region.**

For Mexico

CAUTION:

Do not use leaded gasoline. Using leaded gasoline will damage the three-way catalyst.

Use unleaded premium gasoline with an octane rating of at least 91 AKI (Anti-Knock index) number (Research octane number 96).

If premium gasoline is not available, unleaded regular gasoline with an octane rating of 87 AKI number (Research octane number 91) may be temporarily used, but only under the following precautions:

- Have the fuel tank filled only partially with unleaded regular gasoline, and fill up with unleaded premium gasoline as soon as possible.
- Avoid full throttle driving and abrupt acceleration.

PRECAUTIONS

< PRECAUTION >

Use unleaded premium gasoline for maximum vehicle performance.

LIFTING POINT



< PRECAUTION >

LIFTING POINT

Commercial Service Tools

INFOID:000000009233781

GI

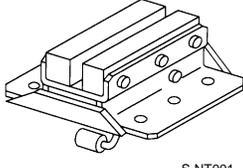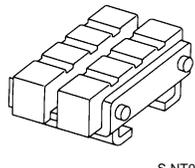Tool name	Description
Board on attachment	 <p>S-NT001</p>
Safety stand attachment	 <p>S-NT002</p>

B

C

D

E

F

G

CAUTION:

- Every time the vehicle is lifted up, maintain the complete vehicle curb condition.
- Since the vehicle's center of gravity changes when removing main parts on the front side (engine, transmission, suspension etc.), support a jack up point on the rear side garage jack with a mission jack or equivalent.
- Since the vehicle's center of gravity changes when removing main parts on the rear side (rear axle, suspension, etc.), support a jack up point on the front side garage jack with a mission jack or equivalent.
- Be careful not to smash or never do anything that would affect piping parts.

H

I

J

Garage Jack and Safety Stand and 2-Pole Lift

INFOID:000000009233782

WARNING:

- Park the vehicle on a level surface when using the jack. Check to avoid damaging pipes, tubes, etc. under the vehicle.
- Never get under the vehicle while it is supported only by the jack. Always use safety stands when you have to get under the vehicle.
- Place wheel chocks at both front and back of the wheels on the ground.
- When lifting the vehicle, open the lift arms as wide as possible and ensure that the front and rear of the vehicle are well balanced.
- When setting the lift arm, never allow the arm to contact the brake tubes, brake cable, fuel lines and sill spoiler.

K

L

M


N

O

P

LIFTING POINT

< PRECAUTION >

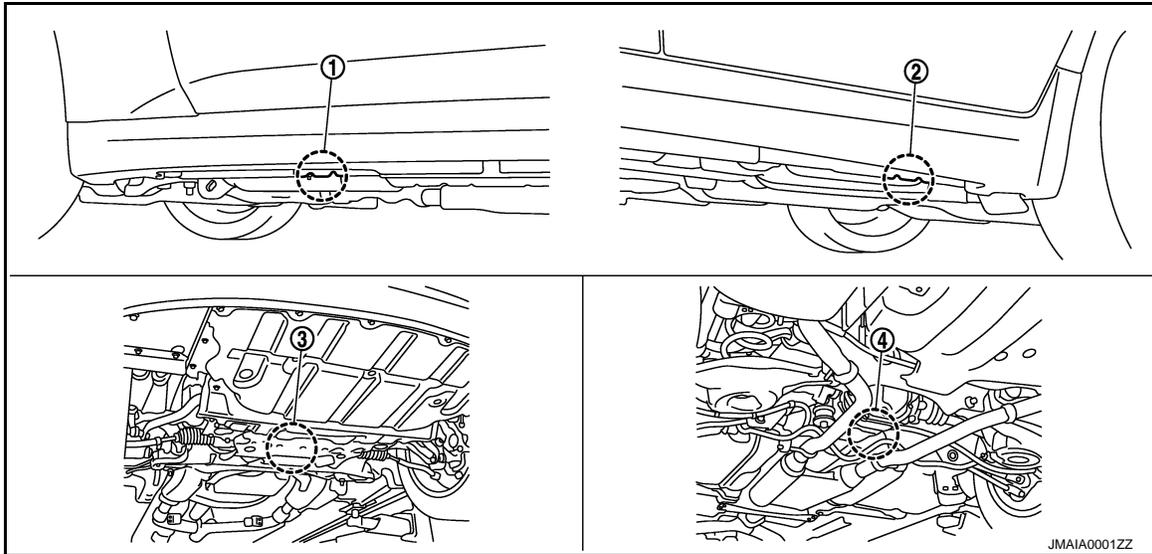

- ① Safety stand point and lift up point (front) ② Safety stand point and lift up point (rear) ③ Garage jack point (front)
④ Garage jack point (rear)

CAUTION:

There is canister just behind Garage jack point rear. Jack up carefully.

Board-On Lift


INFOID:000000009233783

CAUTION:

Check that vehicle is empty when lifting.

- The board-on lift attachment (A) set at front end of vehicle should be set on the front of the sill under the front door opening.
- Position attachments at front and rear ends of board-on lift.

← : Vehicle front

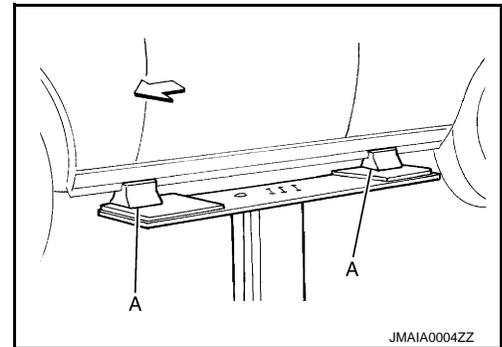

TOW TRUCK TOWING

< PRECAUTION >

TOW TRUCK TOWING

GI


Tow Truck Towing

INFOID:000000009233784

CAUTION:

- All applicable state or Provincial (in Canada) laws and local laws regarding the towing operation must be obeyed.
- It is necessary to use proper towing equipment to avoid possible damage to the vehicle during towing operation. Towing is in accordance with Towing Procedure Manual at dealer.
- Always attach safety chains before towing.
- When towing, check that the transmission, steering system and powertrain are in good order. If any unit is damaged, dollies must be used.
- Never tow an automatic transmission model from the rear (that is backward) with four wheels on the ground. This may cause serious and expensive damage to the transmission.

2WD MODELS

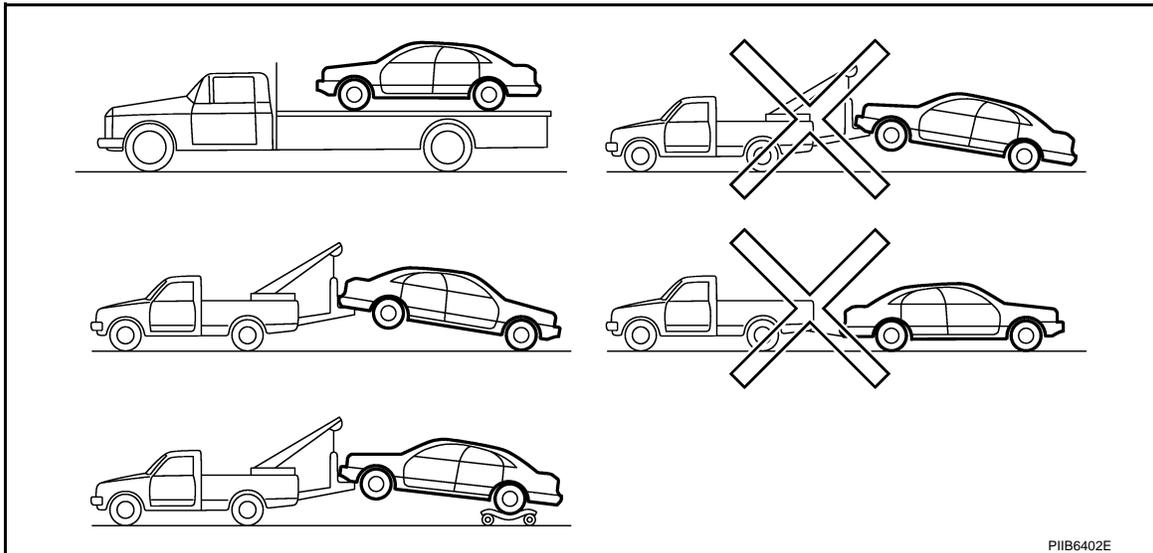

INFINITI recommends that vehicle be towed with the driving (rear) wheels off the ground or that a dolly be used as illustrated.

CAUTION:

- Never tow automatic transmission models with the rear wheels on the ground or four wheels on the ground (forward or backward), as this may cause serious and expensive damage to the transmission.

If it is necessary to tow the vehicle with the front wheels raised, always use towing dollies under the rear wheels.


- When towing rear wheel drive models with the front wheels on the ground or on towing dollies:
 - Turn the ignition switch to the OFF position, and secure the steering wheel in a straight ahead position with a rope or similar device. Never secure the steering wheel by turning the ignition switch to the LOCK position. This may damage the steering lock mechanism.
 - Move the selector lever to the N (Neutral) position.
- When the battery of vehicle equipped with the Intelligent Key system is discharged, your vehicle should be towed with the front wheels on towing dollies or place the vehicle on a flat bed truck.

If the speed or distance must necessarily be greater, remove the propeller shaft before towing to prevent damage to the transmission.

TOW TRUCK TOWING

< PRECAUTION >

AWD MODELS

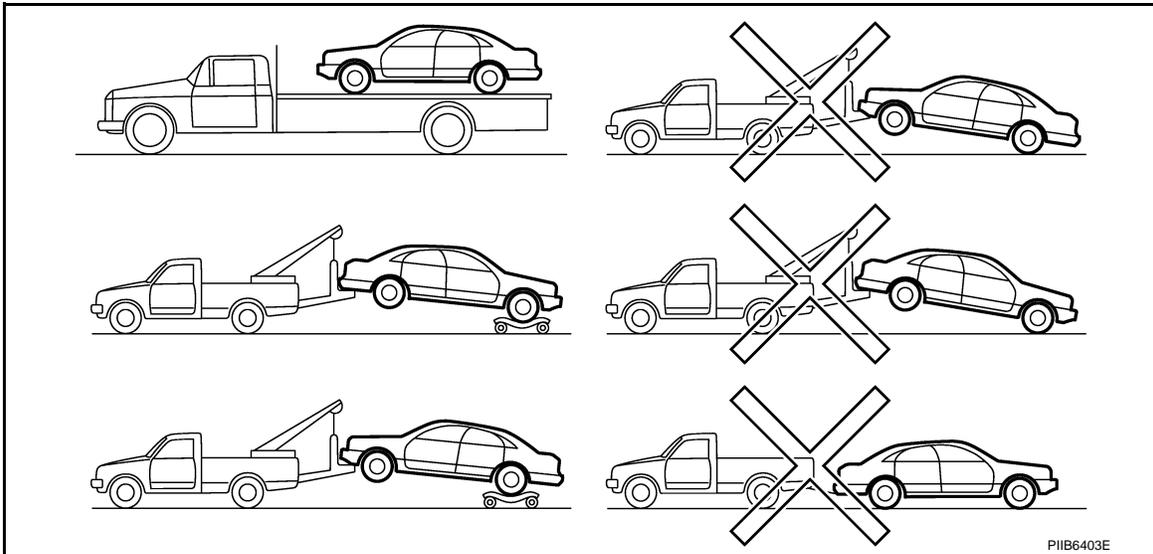

INFINITI recommends that a dolly be used as illustrated when towing AWD models.

CAUTION:

Never tow AWD models with any of the wheels on the ground as this may cause serious and expensive damage to the powertrain.

Vehicle Recovery (Freeing a Stuck Vehicle)

INFOID:000000009233785

FRONT


Securely install the vehicle recovery hook stored with jacking tools. Check that the hook is properly secured in the stored place after use.

WARNING:

- Stand clear of a stuck vehicle.
- Never spin your tires at high speed. This could cause them to explode and result in serious injury. Parts of your vehicle could also overheat and be damaged.

CAUTION:

- Tow chains or cables must be attached only to the vehicle recovery hooks or main structural members of the vehicle. Otherwise, the vehicle body will be damaged.
- Never use the vehicle tie downs to free a vehicle stuck in sand, snow, mud, etc. Never tow the vehicle using the vehicle tie downs or recovery hooks.
- Always pull the cable straight out from the front of the vehicle. Never pull on the hook at an angle.
- Pulling devices should be routed so they never touch any part of the suspension, steering, brake or cooling systems.
- Pulling devices such as ropes or canvas straps are not recommended for use in vehicle towing or recovery.

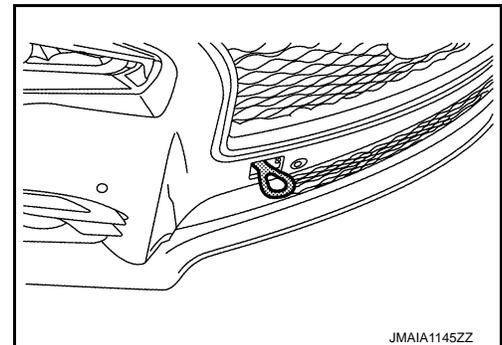

REAR

Recovery Hook

TOW TRUCK TOWING

< PRECAUTION >

Securely install the vehicle recovery hook stored with jacking tools. Check that the hook is properly secured in the stored place after use.

WARNING:

- Stand clear of a stuck vehicle.
- Never spin your tires at high speed. This could cause them to explode and result in serious injury. Parts of your vehicle could also overheat and be damaged.



CAUTION:

- Tow chains or cables must be attached only to the vehicle recovery hooks or main structural members of the vehicle. Otherwise, the vehicle body will be damaged.
- Never use the vehicle tie downs to free a vehicle stuck in sand, snow, mud, etc. Never tow the vehicle using the vehicle tie downs or recovery hooks.
- Always pull the cable straight out from the front of the vehicle. Never pull on the hook at an angle.
- Pulling devices should be routed so they never touch any part of the suspension, steering, brake or cooling systems.
- Pulling devices such as ropes or canvas straps are not recommended for use in vehicle towing or recovery.

Rear Hook

WARNING:

- Rear hook is not available.

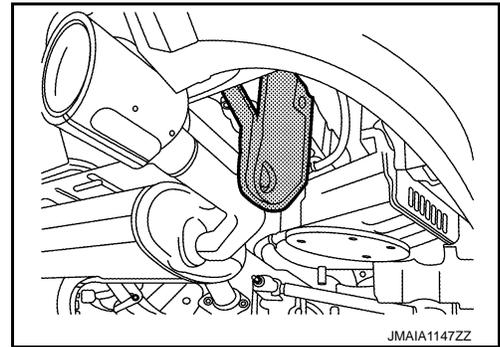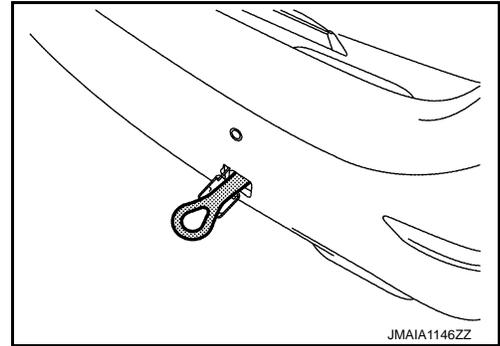

AUTOMATIC TRANSMISSION

To tow a vehicle equipped with an automatic transmission, an appropriate vehicle dolly **MUST** be placed under the towed vehicle's drive wheels. **Always** follow the dolly manufacturer's recommendations when using their product.

If the vehicle is stuck in sand, snow, mud, etc., use the following procedure:

1. Turn off the Vehicle Dynamic Control System.
2. Check the area in front and behind the vehicle is clear of obstructions.
3. Turn the steering wheel right and left to clear an area around the front tires.
4. Slowly rock the vehicle forward and backward.
Shift back and forth between R (reverse) and D (drive).
Apply the accelerator as little as possible to maintain the rocking motion.
Release the accelerator pedal before shifting between R and D.
Do not spin the tires above 35 mph (55 km/h).
5. If the vehicle can not be freed after a few tries, contact a professional towing service to remove the vehicle.

IDENTIFICATION INFORMATION

< VEHICLE INFORMATION >

VEHICLE INFORMATION


IDENTIFICATION INFORMATION

Model Variation

INFOID:000000009233786

Destination	Body	Engine	Axle	Handle	Transmission	Grade	Model
USA	Sedan	VQ37VHR	2WD	LHD	7A/T	Base	BLSALQL-EUA
						Premium	BLSALVL-EUA
						Premium deluxe touring	BLSALPL-EUA
						Premium sport	BLSALWL-EUA
						Premium sport deluxe touring	BLSALRL-EUA
			AWD			Base	BLSNLQL-EUA
						Premium	BLSNLVL-EUA
						Premium deluxe touring	BLSNLPL-EUA
						Premium sport	BLSNLWL-EUA
						Premium sport deluxe touring	BLSNLRL-EUA
Canada	Sedan	VQ37VHR	2WD	LHD	7A/T	Base	BLSALQL-ENA
						Premium	BLSALVL-ENA
						Premium deluxe touring	BLSALPL-ENA
						Premium sport	BLSALWL-ENA
						Premium sport deluxe touring	BLSALRL-ENA
			AWD			Base	BLSNLQL-ENA
						Premium	BLSNLVL-ENA
						Premium deluxe touring	BLSNLPL-ENA
						Premium sport	BLSNLWL-ENA
						Premium sport deluxe touring	BLSNLRL-ENA
Mexico	Sedan	VQ37VHR	2WD	LHD	7A/T	Base	BLSALQL-EJB
						Premium	BLSALVL-EJA

Model variation code (Prefix and suffix designations)

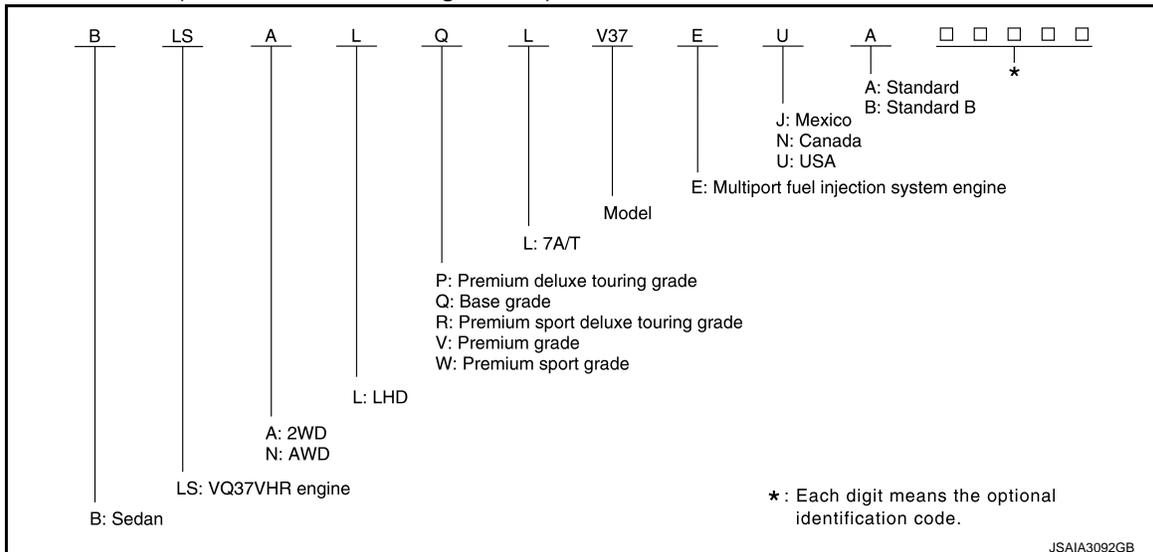

IDENTIFICATION INFORMATION


< VEHICLE INFORMATION >

Information About Identification or Model Code

INFOID:000000009233787

GI


IDENTIFICATION NUMBER

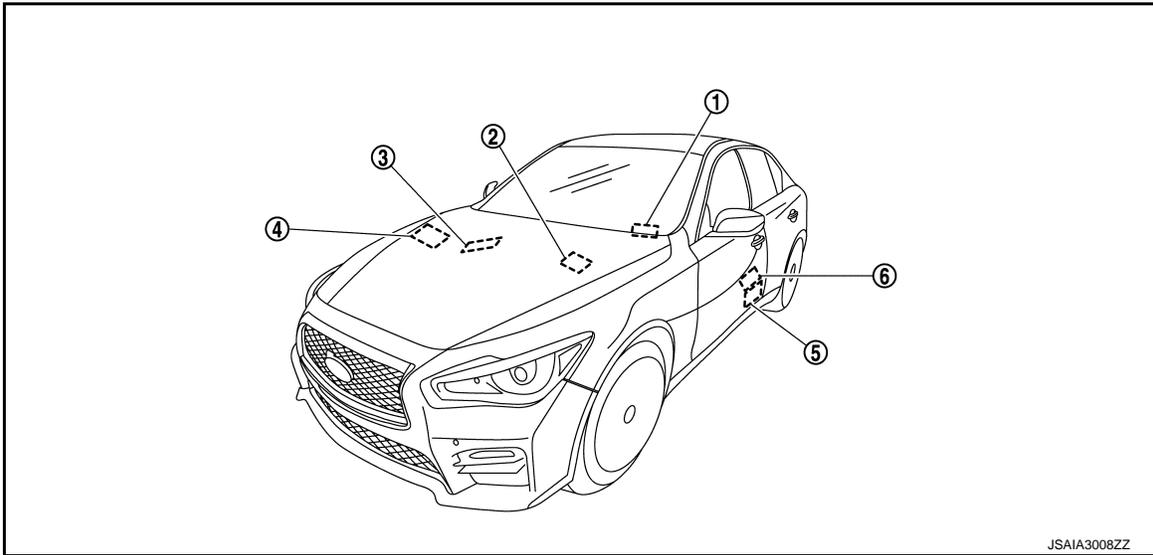

- ① Vehicle identification number plate
- ② Air conditioner specification label
- ③ Vehicle identification number (Chassis number)
- ④ Emission control information label (For USA and Canada)
- ⑤ Tire and loading information label (For USA and Canada)
Tire placard (For Mexico)
- ⑥ FMVSS certification label (For USA and Mexico)
CMVSS certification label (For Canada)

VEHICLE IDENTIFICATION NUMBER ARRANGEMENT

For USA and Canada

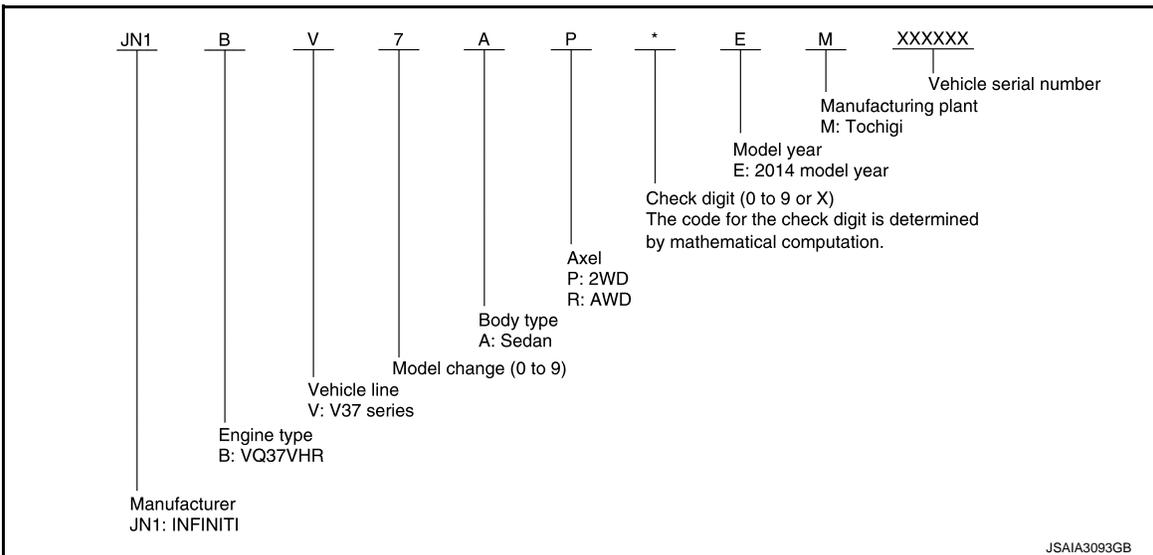


B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

IDENTIFICATION INFORMATION


< VEHICLE INFORMATION >

For Mexico

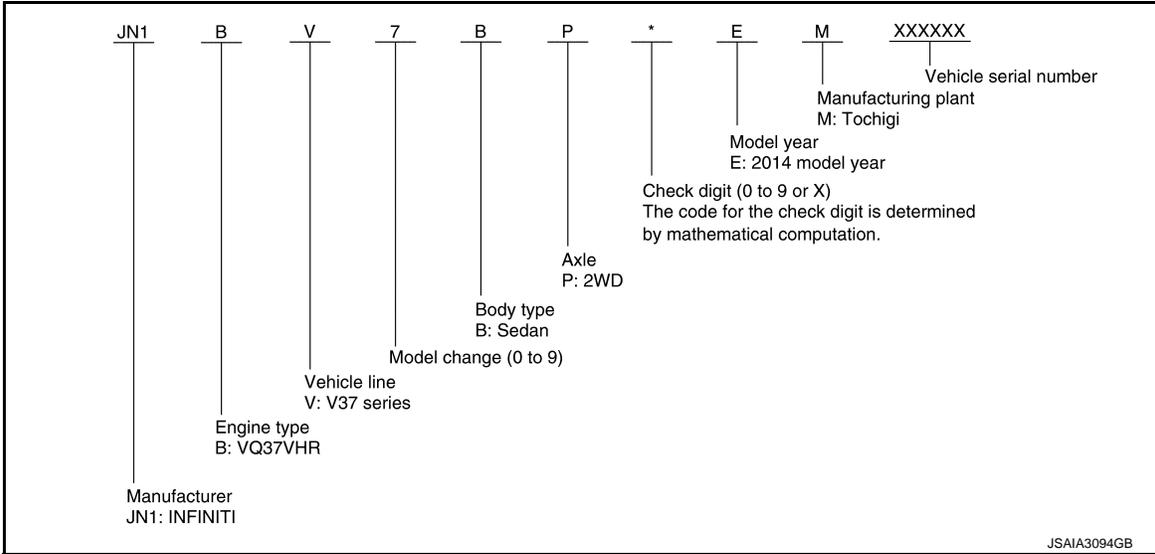


CERTIFICATION LABEL

FMVSS certification label

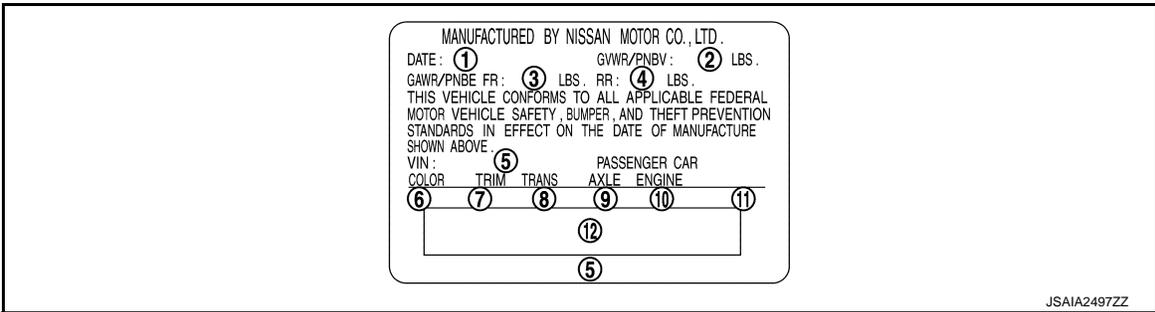

- | | | |
|-----------------------------------|---------------------------------|------------------------------------|
| ① MFR Month/Year | ② Gross vehicle weight rating | ③ Gross axle weight rating (Front) |
| ④ Gross axle weight rating (Rear) | ⑤ Vehicle identification number | ⑥ Body color code |
| ⑦ Trim color code | ⑧ Transmission model | ⑨ Axle model |
| ⑩ Engine model | ⑪ Engine displacement | ⑫ Vin bar code |

CMVSS certification label

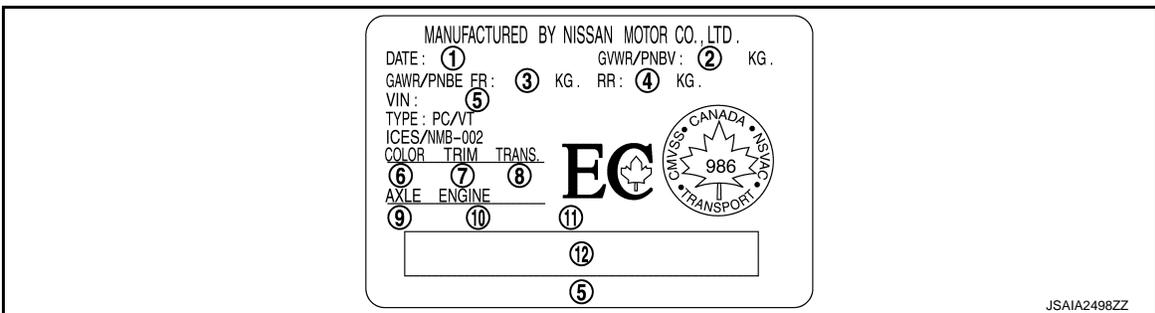

- | | | |
|-----------------------------------|---------------------------------|------------------------------------|
| ① MFR Month/Year | ② Gross vehicle weight rating | ③ Gross axle weight rating (Front) |
| ④ Gross axle weight rating (Rear) | ⑤ Vehicle identification number | ⑥ Body color code |
| ⑦ Trim color code | ⑧ Transmission model | ⑨ Axle model |
| ⑩ Engine model | ⑪ Engine displacement | ⑫ Vin bar code |


ENGINE SERIAL NUMBER

IDENTIFICATION INFORMATION

< VEHICLE INFORMATION >


VQ37VHR

← : Vehicle front

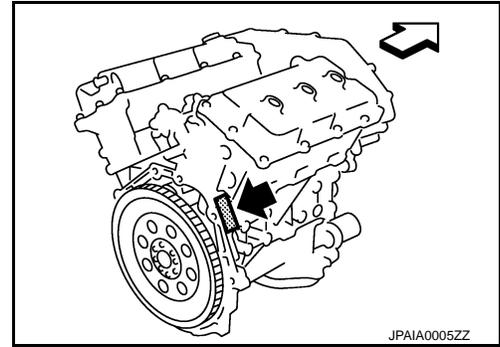

AUTOMATIC TRANSMISSION NUMBER

← : Vehicle front

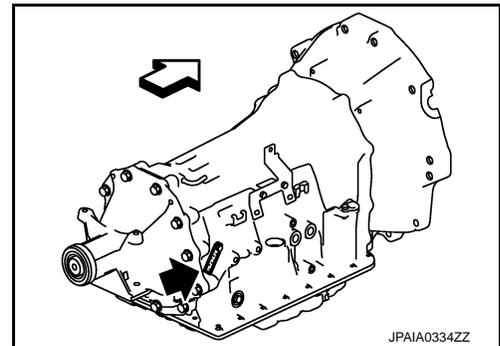

Dimensions

For USA and Canada

Unit: mm (in)

Overall length	4,790 (188.6) ^{*5, *7}
	4,782 (188.3) ^{*5, *8}
	4,802 (189.1) ^{*6, *7, *8}
Overall width	1,823 (71.8)
Overall height	1,443 (56.8) ^{*1, *2}
	1,453 (57.2) ^{*3, *4}
Front tread	1,545 (60.8) ^{*1, *3}
	1,535 (60.4) ^{*2, *4}
Rear tread	1,570 (61.8) ^{*1, *3}
	1,560 (61.4) ^{*2, *4}
Wheelbase	2,850 (112.2)

*1: 2WD 17-inch tire models

*2: 2WD 19-inch tire models

*3: AWD 17-inch tire models

*4: AWD 19-inch tire models

*5: Base / Premium models

*6: Sport models

*7: With front license plate

*8: Without front license plate

For Mexico

Unit: mm (in)

Overall length	4,790 (188.6)
Overall width	1,820 (71.7)

GI
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

IDENTIFICATION INFORMATION

< VEHICLE INFORMATION >

Overall height	1,445 (57.3)
Front tread	1,545 (60.8)
Rear tread	1,570 (61.8)
Wheelbase	2,850 (112.2)

Wheels & Tires

INFOID:000000009233789

Conventional	17 inch	Tire		P225/55RF17 95V
		Road wheel (Aluminum)	Size	17 × 7-1/2J
			Inset	45 mm (1.77 in)
	19 inch	Tire		P245/40RF19 94V 245/40RF19 94W
		Road wheel (Aluminum)	Size	19 × 8-1/2J
			Inset	50 mm (1.97 in)
Spare *	18 inch	Tire		T145/70R18 107M
		Road wheel (Aluminum)	Size	14 × 4T
			Inset	0 mm (0 in)

*: If equipped

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >


BASIC INSPECTION

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

Work Flow

INFOID:000000009233790

WORK FLOW

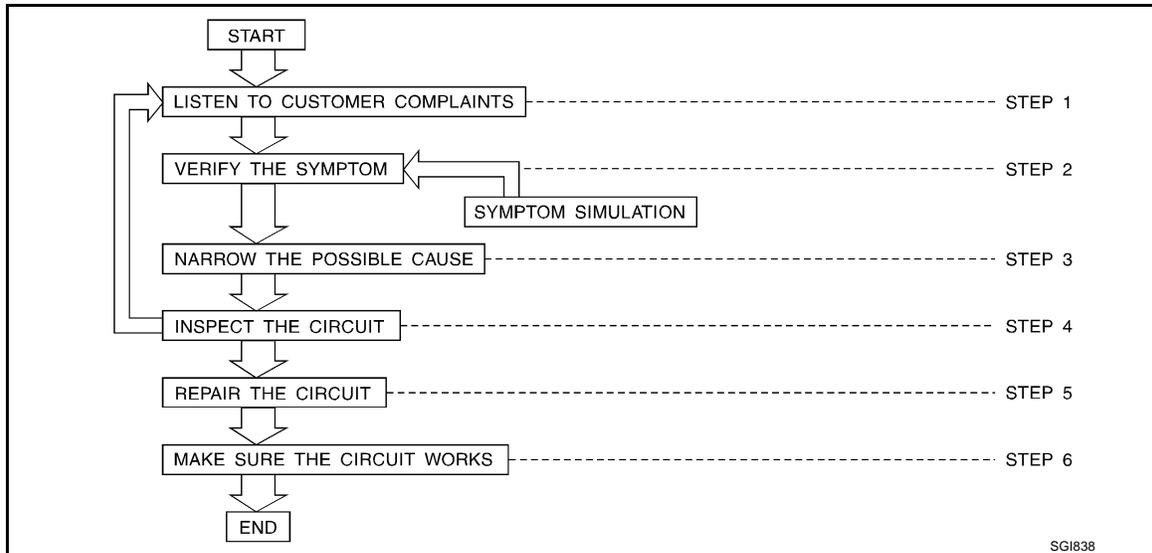

STEP	DESCRIPTION	
STEP 1	Get detailed information about the conditions and the environment when the incident occurred. The following are key pieces of information required to make a good analysis:	
	WHAT	Vehicle Model, Engine, Transmission/Transaxle and the System (i.e. Radio).
	WHEN	Date, Time of Day, Weather Conditions, Frequency.
	WHERE	Road Conditions, Altitude and Traffic Situation.
STEP 2	HOW	System Symptoms, Operating Conditions (Other Components Interaction). Service History and if any After Market Accessories have been installed.
	Operate the system, road test if necessary. Verify the parameter of the incident. If the problem cannot be duplicated, refer to "Incident Simulation Tests".	
STEP 3	Get the proper diagnosis materials together including: <ul style="list-style-type: none"> • Power Supply Routing • System Operation Descriptions • Applicable Service Manual Sections • Check for any Service Bulletins Identify where to begin diagnosis based upon your knowledge of the system operation and the customer comments.	
STEP 4	Inspect the system for mechanical binding, loose connectors or wiring damage. Determine which circuits and components are involved and diagnose using the Power Supply Routing and Harness Layouts.	
STEP 5	Repair or replace the incident circuit or component.	
STEP 6	Operate the system in all modes. Verify the system works properly under all conditions. check you have not inadvertently created a new incident during your diagnosis or repair steps.	

Control Units and Electrical Parts

INFOID:000000009233791

PRECAUTIONS

- Never reverse polarity of battery terminals.
- Install only parts specified for a vehicle.
- Before replacing the control unit, check the input and output and functions of the component parts.
- Do not apply excessive force when disconnecting a connector.


SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

- Do not apply excessive shock to the control unit by dropping or hitting it.
- Be careful to prevent condensation in the control unit due to rapid temperature changes and do not let water or rain get on it. If water is found in the control unit, dry it fully and then install it in the vehicle.
- Be careful not to let oil get on the control unit connector.
- Avoid cleaning the control unit with volatile oil.
- Do not disassemble the control unit, and do not remove the upper and lower covers.



- When using a DMM, be careful not to let test probes get close to each other to prevent the power transistor in the control unit from damaging battery voltage because of short circuiting.
- When checking input and output signals of the control unit, use the specified check adapter.

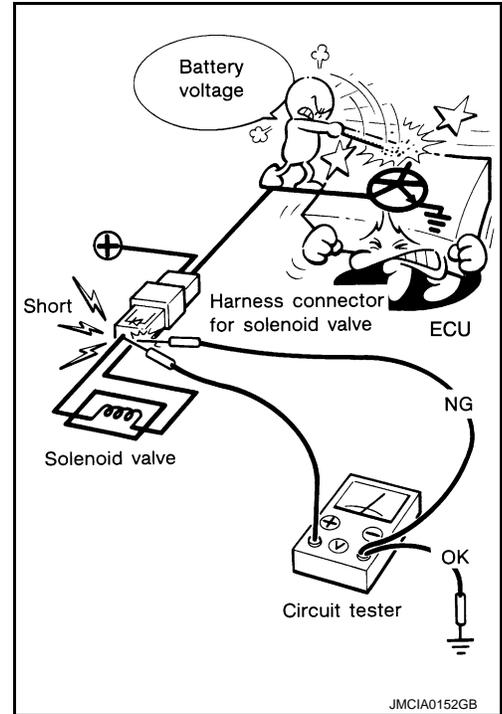

How to Check Terminal


INFOID:000000009233792

CONNECTOR AND TERMINAL PIN KIT

- Use the connector and terminal pin kits listed below when replacing connectors or terminals.
- The connector and terminal pin kits contain some of the most commonly used NISSAN/INFINITI connectors and terminals. For detailed connector and terminal pin replacement procedures, refer to the latest NISSAN/INFINITI CONNECTOR AND TERMINAL PIN SERVICE MANUAL.

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

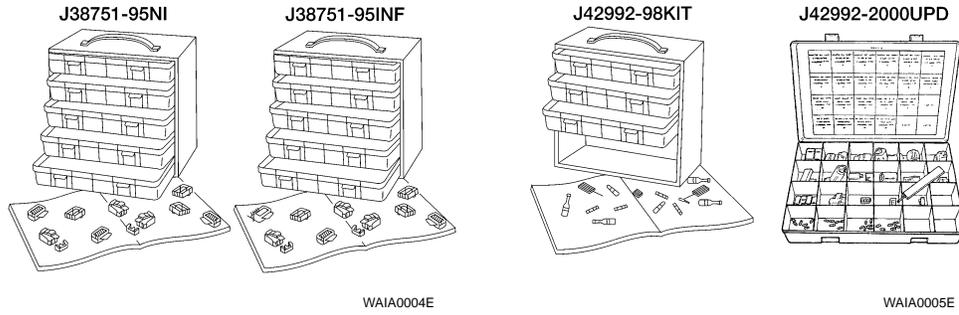Tool number (Kent-Moore No.) Tool name	Description
- (J38751-95NI) Connector and terminal pin kit (NISSAN) - (J38751-95INF) Connector and terminal pin kit (INFINITI) - (J42992-98KIT) OBD and terminal repair kit - (J42992-2000UPD) OBD-II Connector Kit Up- date	 <p style="text-align: center;">WAI A0004E WAI A0005E</p>

GI

B

C

D

E

F


HOW TO PROBE CONNECTORS

- Connector damage and an intermittent connection can result from improperly probing of the connector during circuit checks.
- The probe of a digital multimeter (DMM) may not correctly fit the connector cavity. To correctly probe the connector, follow the procedures below using a "T" pin. For the best contact grasp the "T" pin using an alligator clip.

Probing from Harness Side

Standard type (not waterproof type) connector should be probed from harness side with "T" pin.

- If the connector has a rear cover such as a ECM connector, remove the rear cover before probing the terminal.
- Do not probe waterproof connector from harness side. Damage to the seal between wire and connector may result.

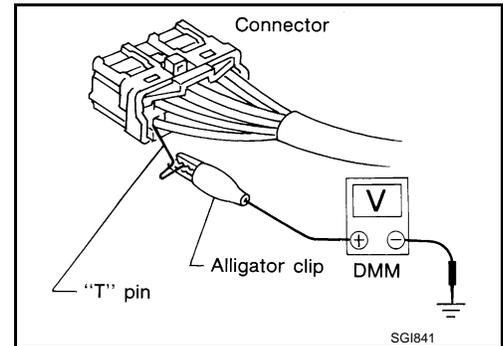

G

H

I


J

K

Probing from Terminal Side

FEMALE TERMINAL

- There is a small notch above each female terminal. Probe each terminal with the "T" pin through the notch. Do not insert any object other than the same type male terminal into female terminal.

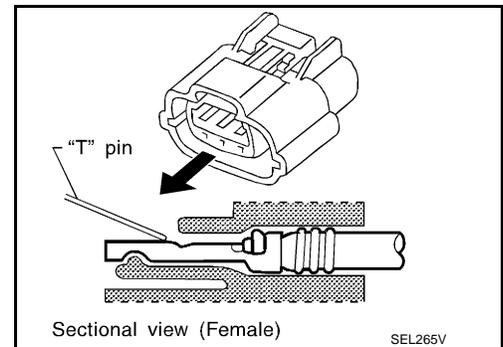

L

M

N


O

P

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

- Some connectors do not have a notch above each terminal. To probe each terminal, remove the connector retainer to make contact space for probing.

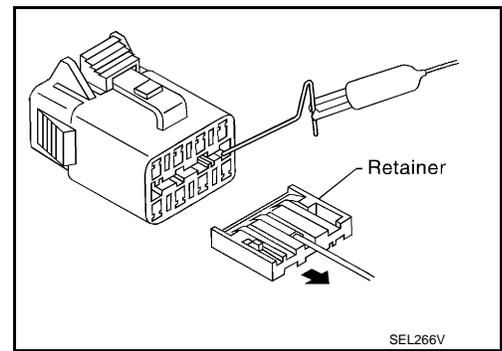


MALE TERMINAL

- Carefully probe the contact surface of each terminal using a “T” pin.

CAUTION:

Never bend terminal.

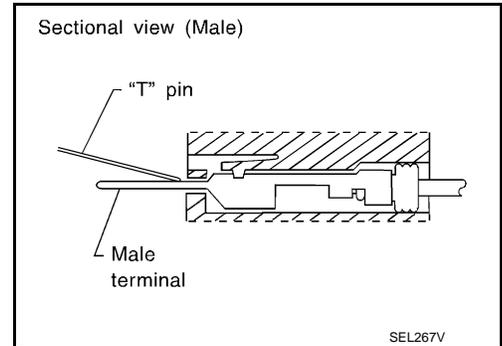

How to Check Enlarged Contact Spring of Terminal


- An enlarged contact spring of a terminal may create intermittent signals in the circuit.
- If the intermittent open circuit occurs, follow the procedure below to inspect for open wires and enlarged contact spring of female terminal.

1. Assemble a male terminal and approx. 10 cm (3.9 in) of wire.

NOTE:

Use a male terminal which matches the female terminal.


2. Disconnect the suspected faulty connector and hold it terminal side up.

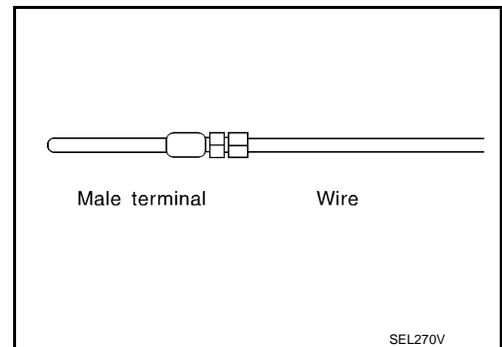

3. While holding the wire of the male terminal, try to insert the male terminal into the female terminal.

CAUTION:


Never force the male terminal into the female terminal with your hands.

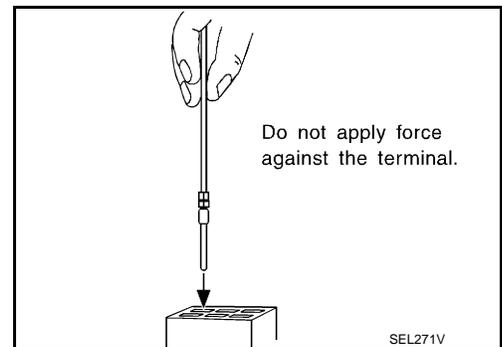


SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

- While moving the connector, check whether the male terminal can be easily inserted or not.

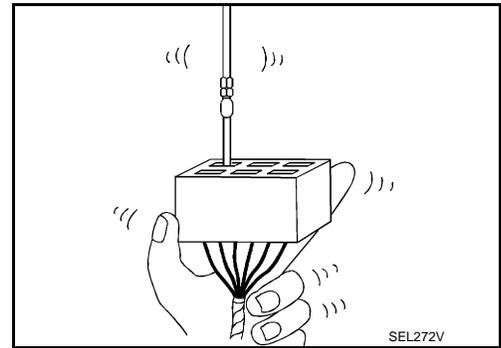

- If the male terminal can be easily inserted into the female terminal, replace the female terminal.

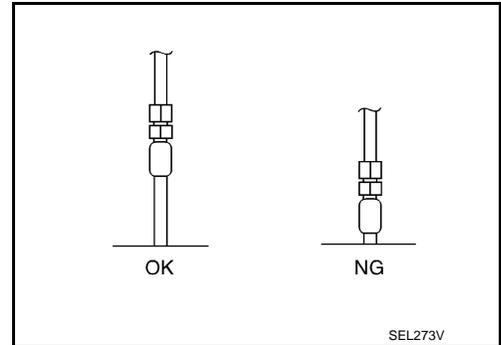


Waterproof Connector Inspection

If water enters the connector, it can short interior circuits. This may lead to intermittent problems. Check the following items to maintain the original waterproof characteristics.

RUBBER SEAL INSPECTION

- Most waterproof connectors are provided with a rubber seal between the male and female connectors. If the seal is missing, the waterproof performance may not meet specifications.
- The rubber seal may come off when connectors are disconnected. Whenever connectors are reconnected, check the rubber seal is properly installed on either side of male or female connector.

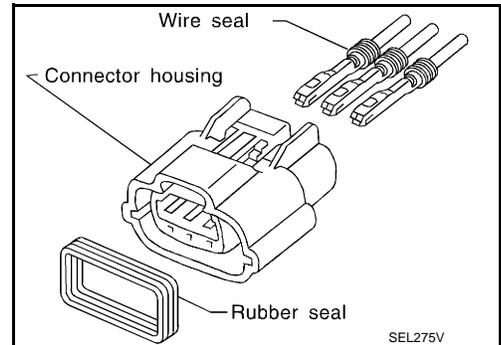


WIRE SEAL INSPECTION

- The wire seal must be installed on the wire insertion area of a waterproof connector. Be sure that the seal is installed properly.

Terminal Lock Inspection

Check for unlocked terminals by pulling wire at the end of connector. An unlocked terminal may create intermittent signals in the circuit.

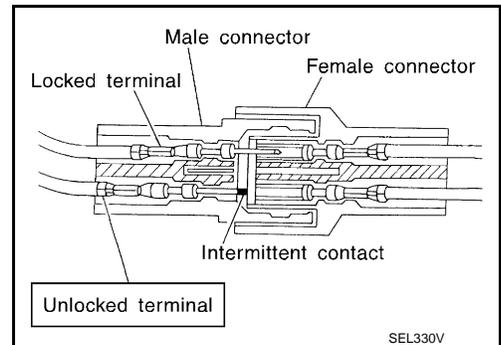

Intermittent Incident

INFOID:000000009233793

DESCRIPTION

Sometimes the symptom is not present when the vehicle is brought in for service. If possible, re-create the conditions present at the time of the incident. Doing so may help avoid a No Trouble Found Diagnosis. The fol-

GI
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

Following section illustrates ways to simulate the conditions/environment under which the owner experiences an electrical incident.

The section is broken into the six following topics:

- Vehicle vibration
- Heat sensitive
- Freezing
- Water intrusion
- Electrical load
- Cold or hot start up

Get a thorough description of the incident from the customer. It is important for simulating the conditions of the problem.

VEHICLE VIBRATION

The problem may occur or become worse while driving on a rough road or when engine is vibrating (idle with A/C on). In such a case, you will want to check for a vibration related condition. Refer to the following illustration.

Connector & Harness


Determine which connectors and wiring harness would affect the electrical system you are inspecting. Gently shake each connector and harness while monitoring the system for the incident you are trying to duplicate. This test may indicate a loose or poor electrical connection.

Hint

Connectors can be exposed to moisture. It is possible to get a thin film of corrosion on the connector terminals. A visual inspection may not reveal this without disconnecting the connector. If the problem occurs intermittently, perhaps the problem is caused by corrosion. It is a good idea to disconnect, inspect and clean the terminals on related connectors in the system.

Sensor & Relay

Gently apply a slight vibration to sensors and relays in the system you are inspecting. This test may indicate a loose or poorly mounted sensor or relay.

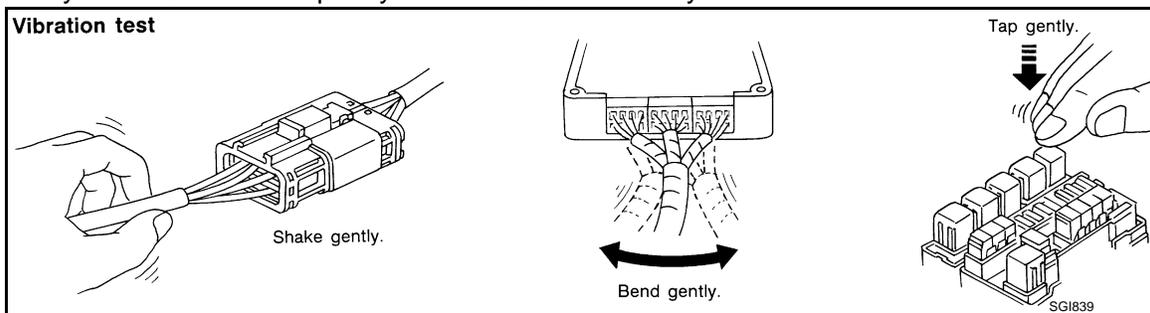

Engine Compartment

There are several reasons a vehicle or engine vibration could cause an electrical complaint. Some of the things to check for are:

- Connectors not fully seated.
- Wiring harness not long enough and is being stressed due to engine vibrations or rocking.
- Wires laying across brackets or moving components.
- Loose, dirty or corroded ground wires.
- Wires routed too close to hot components.

To inspect components under the hood, start by verifying the integrity of ground connections. (Refer to Ground Inspection described later.) First check that the system is properly grounded. Then check for loose connection by gently shaking the wiring or components as previously explained. Using the wiring diagrams inspect the wiring for continuity.

Behind the Instrument Panel

An improperly routed or improperly clamped harness can become pinched during accessory installation. Vehicle vibration can aggravate a harness which is routed along a bracket or near a screw.

Under Seating Areas

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

An unclamped or loose harness can cause wiring to be pinched by seat components (such as slide guides) during vehicle vibration. If the wiring runs under seating areas, inspect wire routing for possible damage or pinching.

HEAT SENSITIVE


- The customer's concern may occur during hot weather or after car has sat for a short time. In such cases you will want to check for a heat sensitive condition.
- To determine if an electrical component is heat sensitive, heat the component with a heat gun or equivalent.

CAUTION:

Never heat components above 60°C (140°F).

- If incident occurs while heating the unit, either replace or properly insulate the component.

Heating test

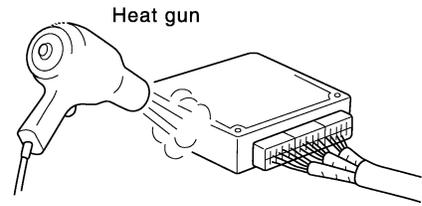


Never heat above 60°C (140°F).

JPAIA0733GB

FREEZING

- The customer may indicate the incident goes away after the car warms up (winter time). The cause could be related to water freezing somewhere in the wiring/electrical system.
- There are two methods to check for this. The first is to arrange for the owner to leave his car overnight. Check it will get cold enough to demonstrate his complaint. Leave the car parked outside overnight. In the morning, do a quick and thorough diagnosis of those electrical components which could be affected.
- The second method is to put the suspect component into a freezer long enough for any water to freeze. Reinstall the part into the car and check for the reoccurrence of the incident. If it occurs, repair or replace the component.

Freezing test

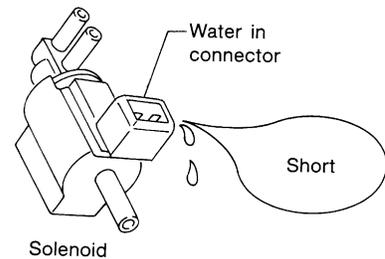

SGI843

WATER INTRUSION

The incident may occur only during high humidity or in rainy/snowy weather. In such cases the incident could be caused by water intrusion on an electrical part. This can be simulated by soaking the car or running it through a car wash.

CAUTION:

Never spray water directly on any electrical components.

Water intrusion test




SGI844

ELECTRICAL LOAD

The incident may be electrical load sensitive. Perform diagnosis with all accessories (including A/C, rear window defogger, radio, fog lamps) turned on.

Electrical load test

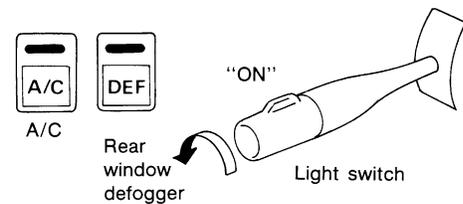

SGI845

COLD OR HOT START UP

On some occasions an electrical incident may occur only when the car is started cold, or it may occur when the car is restarted hot shortly after being turned off. In these cases you may have to keep the car overnight to make a proper diagnosis.

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

Circuit Inspection

INFOID:00000009233794

DESCRIPTION

- In general, testing electrical circuits is an easy task if it is approached in a logical and organized method. Before beginning it is important to have all available information on the system to be tested. Also, get a thorough understanding of system operation. Then you will be able to use the appropriate equipment and follow the correct test procedure.
- You may have to simulate vehicle vibrations while testing electrical components. Gently shake the wiring harness or electrical component to do this.


OPEN	A circuit is open when there is no continuity through a section of the circuit.	
SHORT	There are two types of shorts.	
	• SHORT CIRCUIT	When a circuit contacts another circuit and causes the normal resistance to change.
	• SHORT TO GROUND	When a circuit contacts a ground source and grounds the circuit.

NOTE:

Refer to [GI-40, "How to Check Terminal"](#) to probe or check terminal.

TESTING FOR "OPENS" IN THE CIRCUIT

Before you begin to diagnose and test the system, you should rough sketch a schematic of the system. This will help you to logically walk through the diagnosis process. Drawing the sketch will also reinforce your working knowledge of the system.

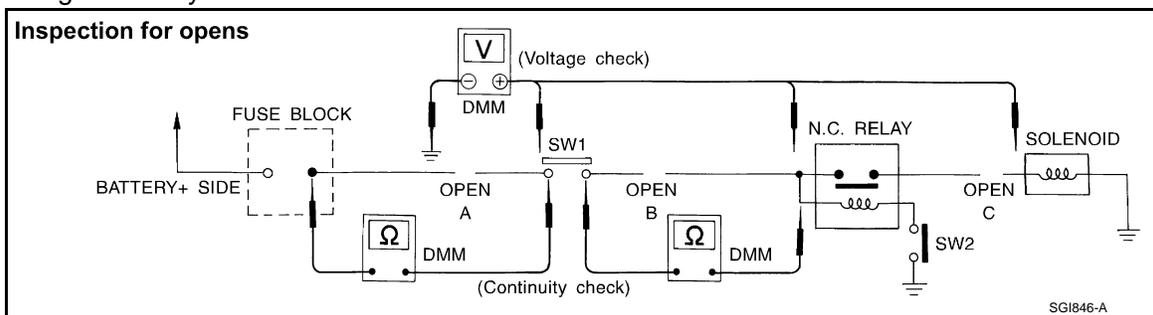

Continuity Check Method

The continuity check is used to find an open in the circuit. The digital multimeter (DMM) set on the resistance function will indicate an open circuit as over limit (no beep tone or no ohms symbol). Check to always start with the DMM at the highest resistance level.

To help in understanding the diagnosis of open circuits, please refer to the previous schematic.

- Disconnect the battery negative cable.
- Start at one end of the circuit and work your way to the other end. (At the fuse block in this example)
- Connect one probe of the DMM to the fuse block terminal on the load side.
- Connect the other probe to the fuse block (power) side of SW1. Little or no resistance will indicate that portion of the circuit has good continuity. If there were an open in the circuit, the DMM would indicate an over limit or infinite resistance condition. (point A)
- Connect the probes between SW1 and the relay. Little or no resistance will indicate that portion of the circuit has good continuity. If there were an open in the circuit, the DMM would indicate an over limit or infinite resistance condition. (point B)
- Connect the probes between the relay and the solenoid. Little or no resistance will indicate that portion of the circuit has good continuity. If there were an open in the circuit, the DMM would indicate an over limit or infinite resistance condition. (point C)

Any circuit can be diagnosed using the approach in the previous example.

Voltage Check Method

To help in understanding the diagnosis of open circuits please refer to the previous schematic.

In any powered circuit, an open can be found by methodically checking the system for the presence of voltage. This is done by switching the DMM to the voltage function.

- Connect one probe of the DMM to a known good ground.
- Begin probing at one end of the circuit and work your way to the other end.
- With SW1 open, probe at SW1 to check for voltage.
voltage: open is further down the circuit than SW1.

SERVICE INFORMATION FOR ELECTRICAL INCIDENT


< BASIC INSPECTION >

- no voltage: open is between fuse block and SW1 (point A).
- Close SW1 and probe at relay.
 - voltage: open is further down the circuit than the relay.
 - no voltage: open is between SW1 and relay (point B).
- Close the relay and probe at the solenoid.
 - voltage: open is further down the circuit than the solenoid.
 - no voltage: open is between relay and solenoid (point C).

Any powered circuit can be diagnosed using the approach in the previous example.

TESTING FOR "SHORTS" IN THE CIRCUIT

To simplify the discussion of shorts in the system, please refer to the following schematic.

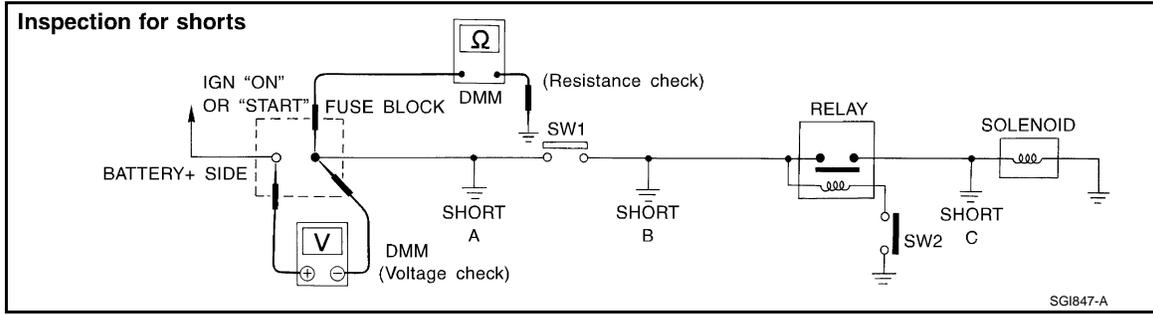

Resistance Check Method

- Disconnect the battery negative cable and remove the blown fuse.
- Disconnect all loads (SW1 open, relay disconnected and solenoid disconnected) powered through the fuse.
- Connect one probe of the DMM to the load side of the fuse terminal. Connect the other probe to a known good ground.
- With SW1 open, check for continuity.
 - continuity: short is between fuse terminal and SW1 (point A).
 - no continuity: short is further down the circuit than SW1.
- Close SW1 and disconnect the relay. Put probes at the load side of fuse terminal and a known good ground. Then, check for continuity.
 - continuity: short is between SW1 and the relay (point B).
 - no continuity: short is further down the circuit than the relay.
- Close SW1 and jump the relay contacts with jumper wire. Put probes at the load side of fuse terminal and a known good ground. Then, check for continuity.
 - continuity: short is between relay and solenoid (point C).
 - no continuity: check solenoid, retrace steps.

Voltage Check Method

- Remove the blown fuse and disconnect all loads (i.e. SW1 open, relay disconnected and solenoid disconnected) powered through the fuse.
- Turn the ignition switch to the ON or START position. Verify battery voltage at the battery + side of the fuse terminal (one lead on the battery + terminal side of the fuse block and one lead on a known good ground).
- With SW1 open and the DMM leads across both fuse terminals, check for voltage.
 - voltage: short is between fuse block and SW1 (point A).
 - no voltage: short is further down the circuit than SW1.
- With SW1 closed, relay and solenoid disconnected and the DMM leads across both fuse terminals, check for voltage.
 - voltage: short is between SW1 and the relay (point B).
 - no voltage: short is further down the circuit than the relay.
- With SW1 closed, relay contacts jumped with fused jumper wire check for voltage.
 - voltage: short is down the circuit of the relay or between the relay and the disconnected solenoid (point C).
 - no voltage: retrace steps and check power to fuse block.


GROUND INSPECTION

- Ground connections are very important to the proper operation of electrical and electronic circuits. Ground connections are often exposed to moisture, dirt and other corrosive elements. The corrosion (rust) can become an unwanted resistance. This unwanted resistance can change the way a circuit works.
- Electronically controlled circuits are very sensitive to proper grounding. A loose or corroded ground can drastically affect an electronically controlled circuit. A poor or corroded ground can easily affect the circuit. Even when the ground connection looks clean, there can be a thin film of rust on the surface.

SERVICE INFORMATION FOR ELECTRICAL INCIDENT

< BASIC INSPECTION >

- When inspecting a ground connection follow these rules:
 - Remove the ground bolt or screw.
 - Inspect all mating surfaces for tarnish, dirt, rust, etc.
 - Clean as required to assure good contact.
 - Reinstall bolt or screw securely.
- Inspect for “add-on” accessories which may be interfering with the ground circuit.
- If several wires are crimped into one ground eyelet terminal, check for proper crimps. Check all of the wires are clean, securely fastened and providing a good ground path. If multiple wires are cased in one eyelet check no ground wires have excess wire insulation.
- For detailed ground distribution information, refer to “Ground Distribution” in PG section.

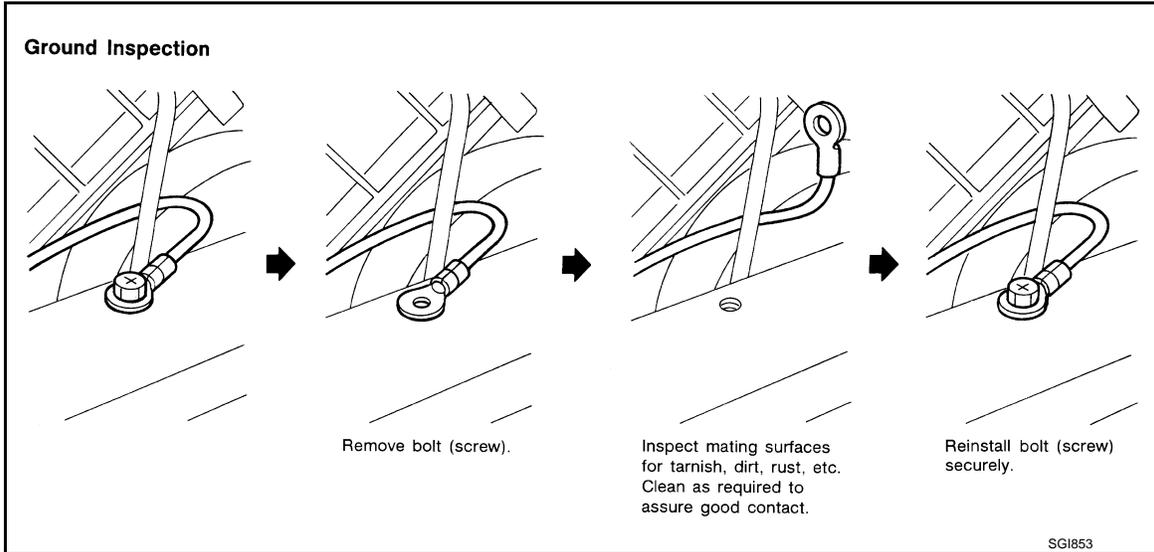

VOLTAGE DROP TESTS

- Voltage drop tests are often used to find components or circuits which have excessive resistance. A voltage drop in a circuit is caused by a resistance when the circuit is in operation.
- Check the wire in the illustration. When measuring resistance with DMM, contact by a single strand of wire will give reading of 0 ohms. This would indicate a good circuit. When the circuit operates, this single strand of wire is not able to carry the current. The single strand will have a high resistance to the current. This will be picked up as a slight voltage drop.
- Unwanted resistance can be caused by many situations as follows:
 - Undersized wiring (single strand example)
 - Corrosion on switch contacts
 - Loose wire connections or splices.
- If repairs are needed always use wire that is of the same or larger gauge.


Measuring Voltage Drop — Accumulated Method

- Connect the DMM across the connector or part of the circuit you want to check. The positive lead of the DMM should be closer to power and the negative lead closer to ground.
- Operate the circuit.
- The DMM will indicate how many volts are being used to “push” current through that part of the circuit.

SERVICE INFORMATION FOR ELECTRICAL INCIDENT


< BASIC INSPECTION >

Note in the illustration that there is an excessive 4.1 volt drop between the battery and the bulb.

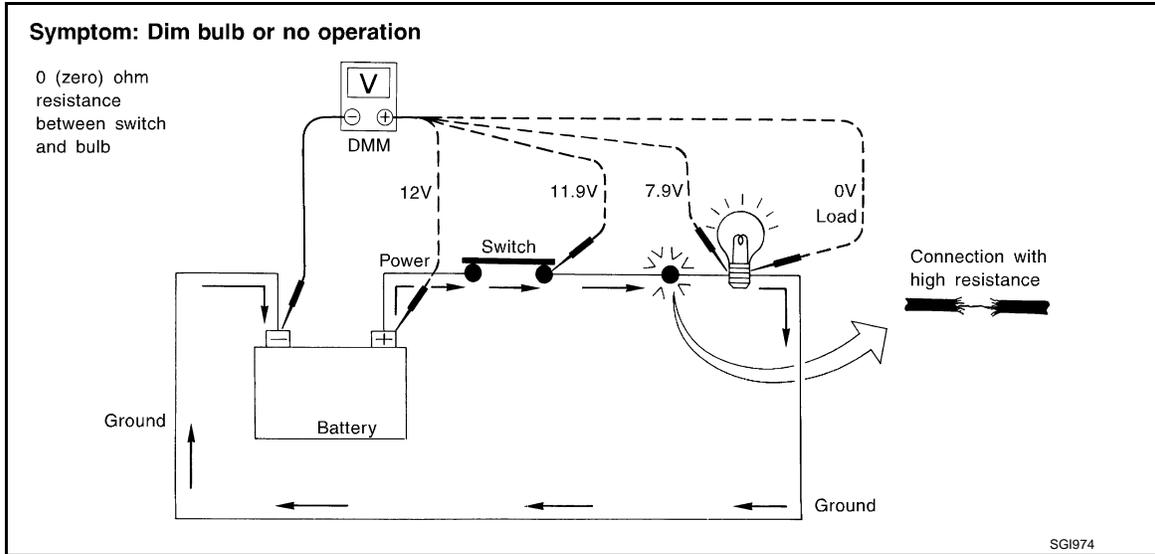

Measuring Voltage Drop — Step-by-Step

- The step-by-step method is most useful for isolating excessive drops in low voltage systems (such as those in “Computer Controlled Systems”).
- Circuits in the “Computer Controlled System” operate on very low amperage.
- The (Computer Controlled) system operations can be adversely affected by any variation in resistance in the system. Such resistance variation may be caused by poor connection, improper installation, improper wire gauge or corrosion.
- The step by step voltage drop test can identify a component or wire with too much resistance.

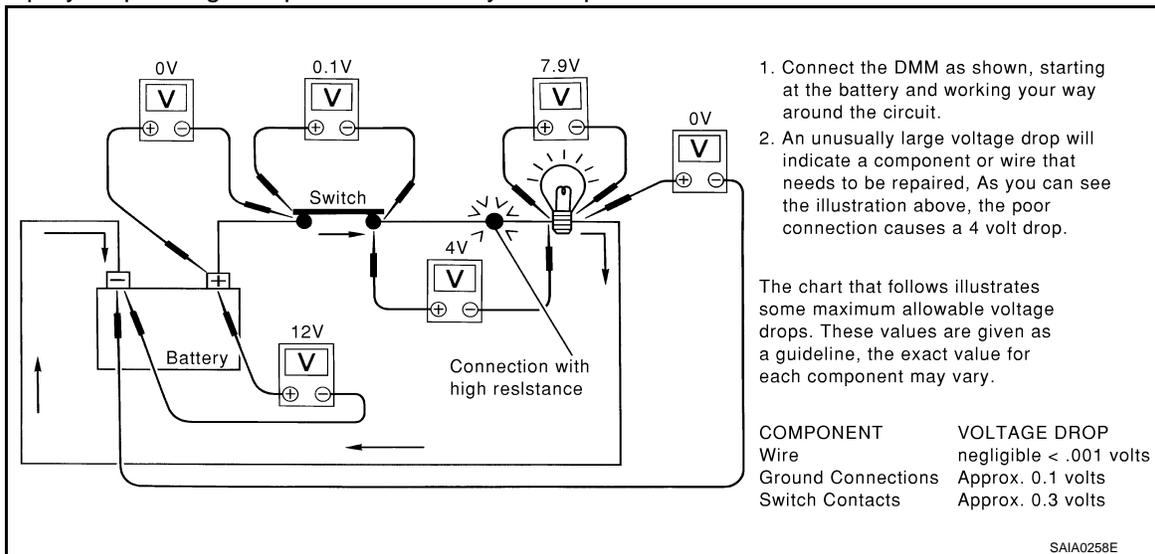


CONTROL UNIT CIRCUIT TEST

System Description

- When the switch is ON, the control unit lights up the lamp.

CASE 1

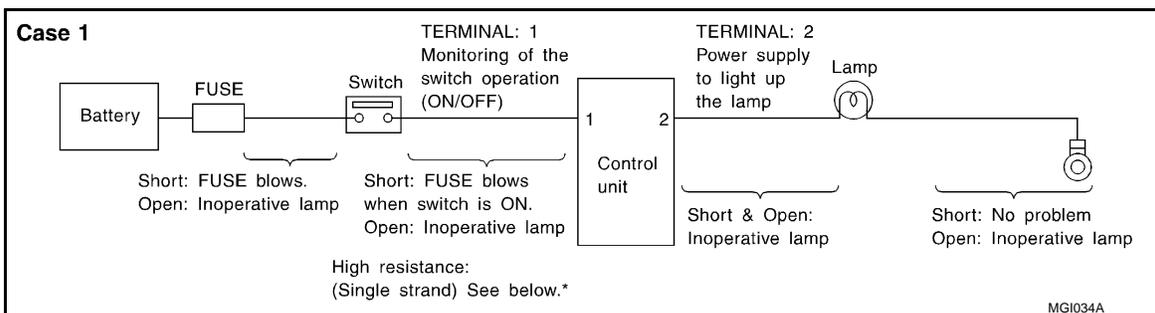

SERVICE INFORMATION FOR ELECTRICAL INCIDENT


< BASIC INSPECTION >

INPUT-OUTPUT VOLTAGE CHART

Terminal No.		Description		Condition	Value (Approx.)	In case of high resistance such as single strand (V) *
+	-	Signal name	Input/Output			
1	Body ground	Switch	Input	Switch ON	Battery voltage	Lower than battery voltage Approx. 8 (Example)
				Switch OFF	0 V	Approx. 0
2	Body ground	Lamp	Output	Switch ON	Battery voltage	Approx. 0 (Inoperative lamp)
				Switch OFF	0 V	Approx. 0

- The voltage value is based on the body ground.
- *: If high resistance exists in the switch side circuit (caused by a single strand), terminal 1 does not detect battery voltage. Control unit does not detect the switch is ON even if the switch does not turn ON. Therefore, the control unit does not supply power to light up the lamp.

CASE 2

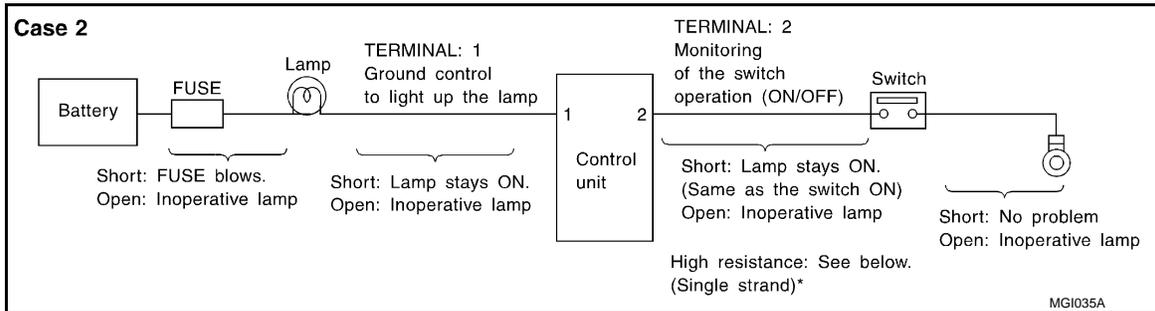

INPUT-OUTPUT VOLTAGE CHART

Terminal No.		Description		Condition	Value (Approx.)	In case of high resistance such as single strand (V) *
+	-	Signal name	Input/Output			
1	Body ground	Lamp	Output	Switch ON	0 V	Battery voltage (Inoperative lamp)
				Switch OFF	Battery voltage	Battery voltage
2	Body ground	Switch	Input	Switch ON	0 V	Higher than 0 Approx. 4 (Example)
				Switch OFF	5 V	Approx. 5

- The voltage value is based on the body ground.
- *: If high resistance exists in the switch side circuit (caused by a single strand), terminal 2 does not detect approx. 0 V. Control unit does not detect the switch is ON even if the switch does not turn ON. Therefore, the control unit does not control ground to light up the lamp.

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

CONSULT/GST CHECKING SYSTEM

GI


Description

INFOID:000000009601610

- When CONSULT/GST is connected with a data link connector **A** equipped on the vehicle side, it will communicate with the control unit equipped in the vehicle and then enable various kinds of diagnostic tests.

① : Instrument lower panel LH

- Refer to CONSULT Software Operation Manual for more information.

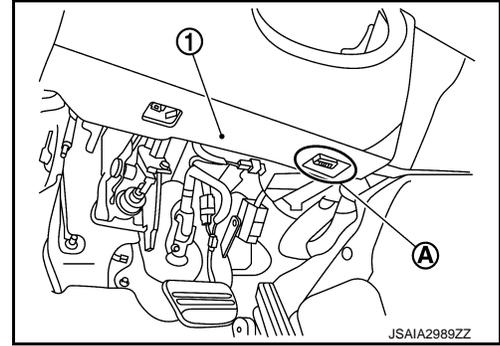

CONSULT Function and System Application*1

INFOID:000000009233796

FUNCTION

Mode	Function
All DTC Reading	Display all DTCs or diagnostic items that all ECUs are recording and judging.
Work Support	This mode enables a technician to adjust some devices faster and more accurately.
Self Diagnostic Results	Retrieve DTC from ECU and display diagnostic items.
Data Monitor	Monitor the input/output signal of the control unit in real time.
CAN Diagnosis	This mode displays a network diagnosis result about CAN by diagram.
CAN Diagnosis Support Monitor	It monitors the status of CAN communication.
Active Test	Send the drive signal from CONSULT to the actuator. The operation check can be performed.
ECU Identification	Display the ECU identification number (part number etc.) of the selected system.
Configuration	Function to READ/WRITE vehicle configuration.
SRT&P-DTC Confirmation	The state of System Readiness Test (SRT) items, the presence or absence of permanent DTC*, and driving conditions can be checked.
DTC work support	DTC reproduction procedure can be performed speedily and precisely.
Others	Other results or histories, etc. that are recorded in ECU are displayed.

*: Permanent DTC is not applied for regions where it is not mandated.

SYSTEM APPLICATION*1

System	All DTC Reading	Work Support	Self Diagnostic Results	Data Monitor	CAN Diagnosis	CAN Diagnosis Support Monitor	Active Test	ECU Identification	Configuration	SRT&P-DTC Confirmation	DTC work support	Others
ENGINE	x	x	x	x	x	x	x	x	-	x ^{*2}	x	-
TRANSMISSION	x	-	x	x	x	x	-	x	x	-	x	• CALIB DATA
AIR BAG	x	-	x	x	x	-	-	x	-	-	-	• TROUBLE DIAG RECORD
METER / M&A	x	x	x	x	x	x	-	x	-	-	-	• Warning history
BCM	x	x	x	x	x	x	x	x	x	-	-	-

B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

System	All DTC Reading	Work Support	Self Diagnostic Results	Data Monitor	CAN Diagnosis	CAN Diagnosis Support Monitor	Active Test	ECU Identification	Configuration	SRT&P-DTC Confirmation	DTC work support	Others
AUTO DRIVE POS.	x	x	x	x	x	x	x	x	-	-	-	-
ABS	x	x	x	x	x	x	x	x	x	-	-	-
IPDM E/R	x	-	x	x	x	x	x	x	-	-	-	-
ICC / ADAS	x	x	x	x	x	x	x	x	x	-	-	-
AIR PRESSURE MONITOR	x	x	x	x	-	x	x	x	-	-	-	-
ALL MODE AWD/4WD	x	-	x	x	x	x	x	x	-	-	-	-
MULTI AV	-	x	x	x	x	x	-	x	x	-	-	-
TCU	x	x	x	x	x	x	-	x	-	-	-	-
SONAR	x	x	x	x	x	x	-	x	x	-	-	-
AVM	x	x	x	x	x	x	-	x	x	-	-	-
PRECRASH SEAT BELT	x	x	x	x	x	x	-	x	-	-	-	-
ADAPTIVE LIGHT	x	x	x	x	x	x	x	x	x	-	-	-
HVAC	-	x	x	x	x	x	x	x	x	-	-	-
SIDE RADAR LEFT	x	-	x	x	x	x	x	x	-	-	-	-
SIDE RADAR RIGHT	x	-	x	x	x	x	x	x	-	-	-	-
CAN GATEWAY	x	-	x	-	x	x	-	x	x	-	-	-
LASER/RADAR	x	x	x	x	x	x	-	x	-	-	-	-
LANE CAMERA	x	x	x	x	x	x	-	x	-	-	-	-
ACCELE PEDAL ACT	x	-	x	x	x	x	x	x	-	-	-	-
HIGH BEAM ASSIST	x	-	x	x	x	x	x	x	x	-	-	-
EPS / DAST 3	x	x	x	x	x	x	-	x	x	-	-	-
DAST 1	x	-	x	x	x	x	-	x	x	-	-	-
DAST 2	x	-	x	x	-	-	-	x	x	-	-	-
CHASSIS CONTROL	x	x	x	x	x	x	x	x	x	-	-	-
BSW / BUZZER	x	-	x	x	x	x	x	x	-	-	-	-

x: Applicable

*1: If GST application is equipped, functions in accordance with SAE J1979 and ISO 15031-5 can be used.

*2: Permanent DTC is not applied for regions where it is not mandated.

CONSULT/GST Data Link Connector (DLC) Circuit

INFOID:000000009233797

INSPECTION PROCEDURE

If the CONSULT/GST cannot diagnose the system properly, check the following items.

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

Symptom	Check item
CONSULT/GST cannot access any system.	<ul style="list-style-type: none"> CONSULT/GST DLC power supply circuit (Terminal 8 and 16) and ground circuit (Terminal 4 and 5)
CONSULT cannot access individual system. (Other systems can be accessed.)	<ul style="list-style-type: none"> Power supply and ground circuit for the control unit of the system (For detailed circuit, refer to wiring diagram for each system.) Open or short circuit between the system and CONSULT DLC (For detailed circuit, refer to wiring diagram for each system.) Open or short circuit CAN communication line. Refer to LAN-26, "Trouble Diagnosis Flow Chart".

NOTE:

The DDL1 and DDL2 circuits from DLC pins 12, 13, 14 and 15 may be connected to more than one system. A short in a DDL circuit connected to a control unit in one system may affect CONSULT access to other systems. If the GST cannot operate properly, check the circuit based on the information of SAE J1962 and ISO 15031-3.

GI

B

C

D

E

F

G

H

I

J

K

L

M

N

O

P


CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

Wiring Diagram - CONSULT/GST CHECKING SYSTEM -

INFOID:00000009233798

WITHOUT AROUND VIEW MONITOR

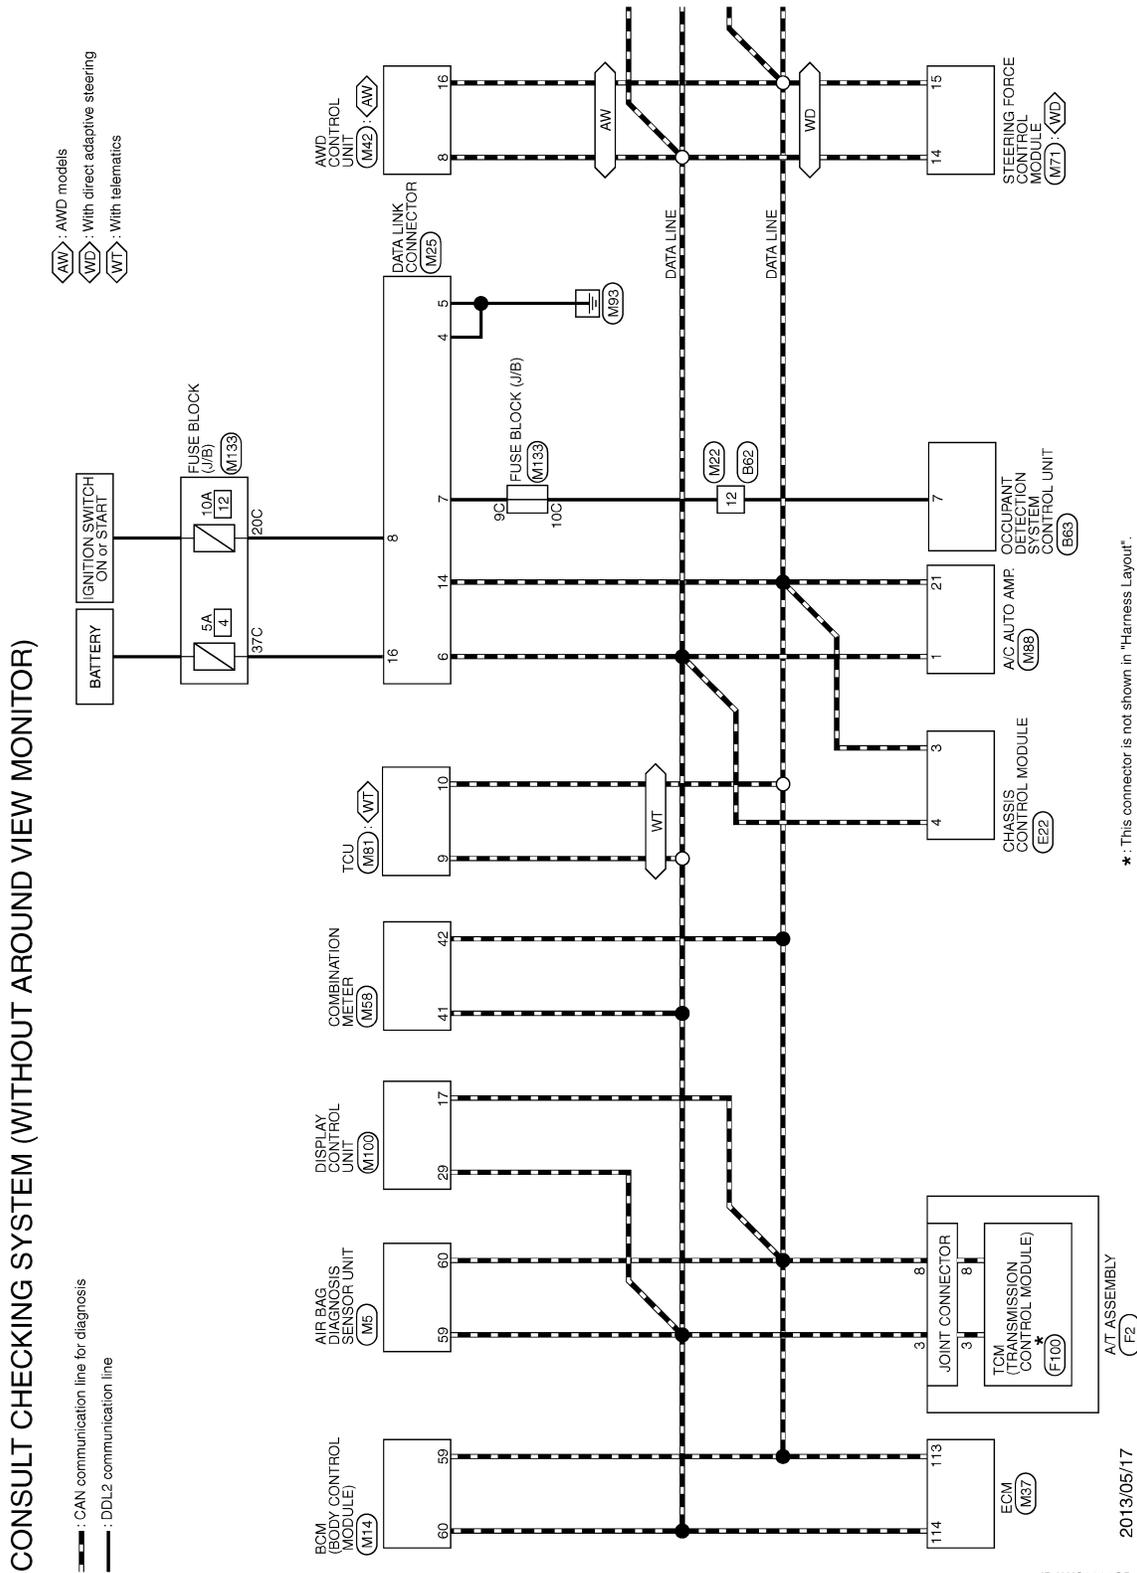

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

GI

B

C

D

E

F

G

H

I

J

K


L

M

N

O

P

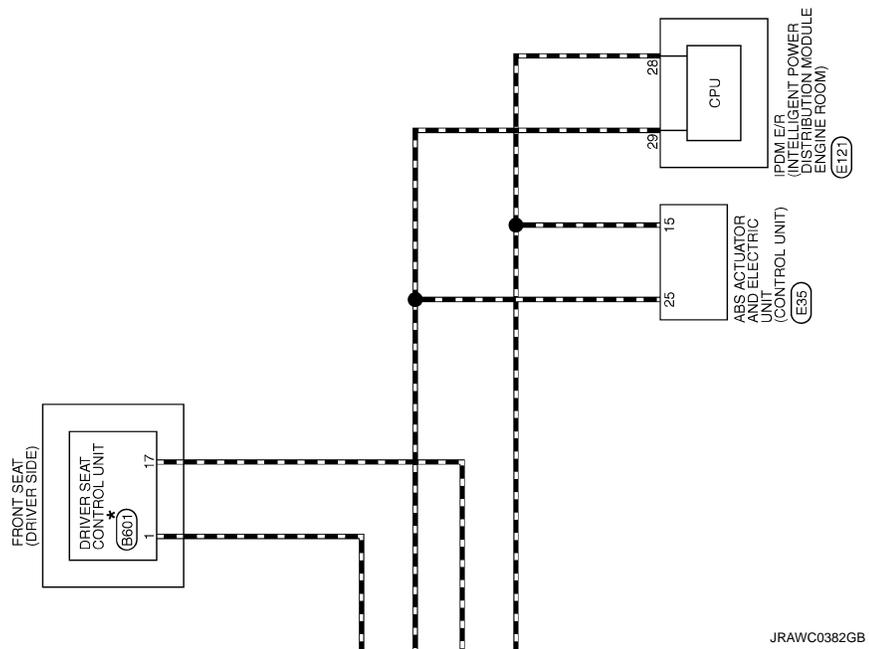


JRAWC0382GB

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >


CONSULT CHECKING SYSTEM (WITHOUT AROUND VIEW MONITOR)

Connector No.	B82
Connector Name	WIRE TO WIRE
Connector Type	TH88PW-TM

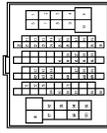


Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	L	-
3	R	- [With BOSE system]
4	W	- [Without BOSE system]
5	G	-
6	W	-
7	BR	- [Without BOSE system]
8	B	- [With BOSE system]
9	Y	- [Without BOSE system]
10	V	-
11	GR	-
12	Y	-
13	R	-
14	GR	-
15	GR	-
16	Y	-
17	P	-
18	L	-
19	R	-
20	GR	-
21	R	-
22	P	-
23	W	-
24	V	-
25	SB	-
26	G	-
29	P	-
30	LG	-
36	R	-
37	R	-
38	W	-
39	W	-

Connector No.	B63
Connector Name	OCCUPANT DETECTION SYSTEM CONTROL UNIT
Connector Type	TH88PW-NH

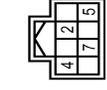

Terminal No.	Color Of Wire	Signal Name [Specification]
2	V	COMMUNICATION
4	R	IGN
5	B	GND
7	Y	K-LINE


Connector No.	B601
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	TH82FW-NH

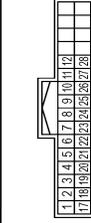

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
2	BR	UART (TX/RX)
3	R	START SW
4	P	PULSE (RECLINER)
5	V	PULSE (TELESCOPIC)
6	GY	ADDRESS 2
7	G	IND 2
8	V	SLIDE SW (BACKWARD)
9	W	RECLINER SW (BACKWARD)
10	O	TILT SW (DOWNWARD)
11	G	LIFTER SW (DOWNWARD)
12	SB	POWER SUPPLY (ENCODER)
17	P	CAN-L
18	LG	PULSE (SLIDE SENSOR)
19	W	PULSE (LIFTER FRONT)

20	GY	PULSE (LIFTER REAR)
21	SB	PULSE (TILT SENSOR)
22	O	ADDRESS 1
23	W	-
24	B	SLIDE SW (FORWARD)
25	Y	RECLINER SW (FORWARD)
26	GY	TILT SW (UPWARD)
27	L	LIFTER SW (UPWARD)
28	Y	SET SW

Connector No.	E22
Connector Name	CHASSIS CONTROL MODULE
Connector Type	TH24FW-NH

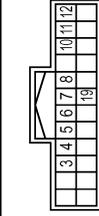

Terminal No.	Color Of Wire	Signal Name [Specification]
3	P	CAN-L [Without Gateway]
3	R	CAN-L [With Gateway]
4	L	CAN-H
5	V	DRIVE MODE SELECT SW (UP)
6	G	DRIVE MODE SELECT SW (DOWN)
7	W	CHASSIS COMM-L
10	G	IGN
11	L	CHASSIS COMM-H
12	B	GROUND
19	L	CHASSIS COMM-H

JRAWC0383GB


CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

GI


CONSULT CHECKING SYSTEM (WITHOUT AROUND VIEW MONITOR)

Connector No.	E35
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT CONTROL UNIT
Connector Type	SAZ20FB-SJZ4-U

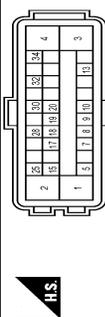


Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	B	GROUND
3	G	VALVE BATTERY
4	Y	MOTOR BATTERY
5	LG	STOP LAMP SW SIGNAL [With IEC]
6	V	RR LH WHEEL SENSOR SIGNAL
7	G	RR LH WHEEL SENSOR SIGNAL
8	G	FR RH WHEEL SENSOR POWER SUPPLY
9	BR	FR RH WHEEL SENSOR SIGNAL
10	GR	FR RH WHEEL SENSOR POWER SUPPLY
13	R	VACUUM SENSOR SIGNAL
15	P	CAN-L [Without Gateway]
15	R	CAN-L [With Gateway]
17	Y	RR RH WHEEL SENSOR SIGNAL
18	V	RR RH WHEEL SENSOR POWER SUPPLY
19	SB	FR LH WHEEL SENSOR SIGNAL
20	BG	FR LH WHEEL SENSOR POWER SUPPLY
23	L	VACUUM SENSOR POWER SUPPLY
26	G	VCC CAN SW SIGNAL
32	SHIELD	VACUUM SENSOR GROUND
34	G	IGN

Connector No.	E121
Connector Name	POWER INTELLIGENT POWER LOCKS DISTRIBUTION MODULE ENGINE
Connector Type	TR32FPV-NH

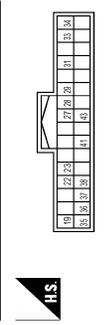

Terminal No.	Color Of Wire	Signal Name [Specification]
19	G	-
22	BG	-
23	LG	-
27	GR	-
28	P	-
29	L	-
31	G	-
33	SB	-
34	Y	-
35	G	-
36	SB	-
37	GR	-
38	BR	-
41	GR	-
43	V	-

Connector No.	F7
Connector Name	A/T ASSEMBLY
Connector Type	FR10FG-DGY

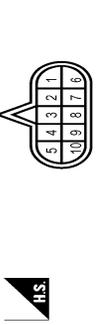


Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	IGNITION POWER SUPPLY
2	P	BATTERY POWER SUPPLY MEMORY BACK-UP
3	L	CAN-H
4	LG	K-LINE
5	B	GROUND

6	GR	IGNITION POWER SUPPLY
7	BG	BACK-UP LAMP RELAY
8	P	CAN-L
9	GR	STARTER RELAY
10	B	GROUND

Connector No.	F100
Connector Name	TOW TRANSMISSION CONTROL MODULE
Connector Type	SP10FG

Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	IGNITION POWER SUPPLY
2	-	BATTERY POWER SUPPLY MEMORY BACK-UP
3	-	CAN-H
4	-	K-LINE
5	-	GROUND
6	-	IGNITION POWER SUPPLY
7	-	BACK-UP LAMP RELAY
8	-	CAN-L
9	-	STARTER RELAY
10	-	GROUND


Connector No.	IM5
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	NR2EY-EX

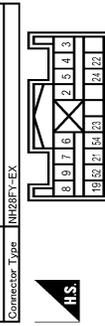

Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	IGN
2	B	GROUND
3	Y/R	DRL (+)

4	Y/B	DRL (-)
5	Y	DRZ (+)
6	Y/R	AST (+)
7	Y/B	AST (-)
8	Y/G	AST (+)
8	Y	AST (-)
18	Y	EC25A
19	BR	EC25B
20	Y/R	ACT VENT+
21	Y/B	ACT VENT-
22	SHIELD	GND
23	V	AIRBAG W/L
24	G	-
25	GR	A/B OFF IND
51	G	SATELLITE RH2 (+)
52	R	SIDE SENS. RH2-
53	V	SIDE SENS. LH2+
54	L	SIDE SENS. LH2-
57	LG	IVCS
59	L	CAN-H
60	P	CAN-L

Connector No.	IM14
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40PF-NH

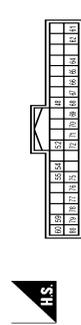

Terminal No.	Color Of Wire	Signal Name [Specification]
48	R	PUSH-BTN IGN SW ILL PWR
52	G	DOUBLE LINK
54	V	COAX LINE
55	R	RAIN SENSOR
59	P	CAN-L
60	L	CAN-H
61	G	REAR WINDOW DEF RLY CONT
62	R	STARTER RLY CONT
64	V	L-KEY WARM BUZZER
65	B	OUTS HD LAMP CONT
66	B	BLOWER FAN RLY CONT
67	W/B	IGN RLYAY (F/B) CONT
68	R	DIMMER

B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

CONSULT CHECKING SYSTEM (WITHOUT AROUND VIEW MONITOR)

69	GR	A/T SHIF. SELECT PWR SUPPLY
70	B	IGN RELAY (PDM) L/R CONT
71	B	DOOR PREG SW
72	SB	PASS LOCK SW
73	BR	COMBI SW INRLT 3
74	BR	COMBI SW INRLT 4
75	BR	COMBI SW INRLT 1
76	EG	COMBI SW INRLT 2
77	V	COMBI SW INRLT 3
78	Y	COMBI SW INRLT 2
79	LG	COMBI SW INRLT 1
80	L	TR LID. OPNR SW

Connector No. M22
 Connector Name WIRE TO WIRE
 Connector Type TH86MM-CS16-TM4

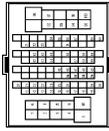


Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	
2	L	
3	R	
4	SHIELD	
5	SHIELD	
6	G	
7	EG	
8	LG	
9	R	
10	V	
11	GR	
12	V	
13	LG	
14	LG	
15	P	
16	SB	-- [With DCM]
17	V	-- [Without DCM]
18	L	
19	G	
20	GR	
21	R	
22	W	
23	L	

Connector No. M25
 Connector Name DATA LINK CONNECTOR
 Connector Type BD16FW



Terminal No.	Color Of Wire	Signal Name [Specification]
3	SB	AV COMM (L)
4	B	EARTH
5	B	EARTH
6	L	CAN-H
7	V	KLINE
8	W	IGN SW
11	LG	AV COMM (H)
12	R	CAN-L
13	L	CAN-L
14	P	CAN-L
16	W	POWER


Connector No. M37
 Connector Name ECM
 Connector Type RH24FGY-R26-R-LH-Z

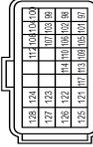

Terminal No.	Color Of Wire	Signal Name [Specification]
87	Y	ACCELERATOR PEDAL POSITION SENSOR 1
88	BR	ACCELERATOR PEDAL POSITION SENSOR 2
89	W	SENSOR POWER SUPPLY (ACCELERATOR PEDAL POSITION SENSOR 1)
100	G	SENSOR GROUND (ACCELERATOR PEDAL POSITION SENSOR 1)
101	SB	ASCD STEERING SWITCH
101	SB	IGS STEERING SWITCH
102	LG	EVAP CONTROL SYSTEM PRESSURE SENSOR
103	L	SENSOR POWER SUPPLY (EVAP CONTROL SYSTEM PRESSURE SENSOR 2)
104	R	SENSOR GROUND (EVAP CONTROL SYSTEM PRESSURE SENSOR 2)

105	L	REFRIGERANT PRESSURE SENSOR
106	P	FUEL TANK TEMPERATURE SENSOR
107	GR	
108	Y	SENSOR GROUND (ASCD) (IGS) STEERING SWITCH
109	Y	TRANSMISSION RANGE SWITCH
110	BR	ENGINE SPEED SIGNAL OUTPUT
111	V	ENGINE SPEED SIGNAL OUTPUT
112	V	GNDA (PRESS: FT/RES)
113	P	CAN COMMUNICATION LINE
114	L	CAN COMMUNICATION LINE
117	V	DATA LINK CONNECTOR
121	LG	EVAP CANISTER VENT CONTROL VALVE
122	SB	STOP LAMP SWITCH
123	B	ECM GROUND
124	B	ECM GROUND
125	R	POWER SUPPLY FOR ECM
126	EG	BRAKE PEDAL POSITION SWITCH
127	B	ECM GROUND
128	B	ECM GROUND

Connector No. M42
 Connector Name AWD CONTROL UNIT
 Connector Type TH18FW-NH

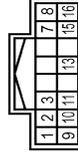

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	AWD SOL (+)
2	Y	AWD SOL (-)
3	W/B	FLUID TEMP (-)
7	G	IGN
8	L	CAN-H
9	EG	AWD SOL BAT
10	B	GND
11	B	GND
13	LG	FLUID TEMP (+)
15	W	BATTERY POWER SUPPLY
16	P	CAN-L [Without Gateway]
16	R	CAN-L [With Gateway]

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

GI

CONSULT CHECKING SYSTEM (WITHOUT AROUND VIEW MONITOR)


Connector No.	M38
Connector Name	COMBINATION METER
Connector Type	TH24FH-RH



HS

Terminal No.	Color	Wire	Signal Name [Specification]
41	L	CAN-H	
42	P	CAN-L	
43	B	ILLUMINATION CONTROL SIGNAL	
44	Y	FUEL LEVEL SENSOR GROUND	
45	W	BATTERY POWER SUPPLY	
46	R	IGNITION SIGNAL	
47	LG	AV COMMUNICATION SIGNAL (H)	
48	SB	AV COMMUNICATION SIGNAL (L)	
51	BR	FUEL LEVEL SENSOR SIGNAL	
52	B	GROUND	

Connector No.	M71
Connector Name	STEERING FORCE CONTROL MODULE
Connector Type	FR24FE-R28-L-RH

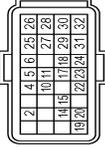

HS

Terminal No.	Color	Wire	Signal Name [Specification]
2	P	STEERING FORCE MOTOR RESOLVER SIGNAL (S1-S2)	
4	W	STEERING FORCE MOTOR RESOLVER SIGNAL (S1-S2)	
5	G	STEERING FORCE MOTOR RESOLVER SIGNAL (S2-S4)	
6	O	STEERING FORCE MOTOR RESOLVER SIGNAL (S2-S4)	
10	B	STEERING FORCE MOTOR RESOLVER SIGNAL (R1-R2)	
11	R	STEERING FORCE MOTOR RESOLVER SIGNAL (R1-R2)	
14	L	CAN COMMUNICATION-H	
15	P	CAN COMMUNICATION-L [Without Gateway]	
17	Y	PACK UP SIGNAL (FROM STEERING ANGLE MAIN CONTROL MODULE)	

18	Y	BACK UP SIGNAL (FROM STEERING ANGLE SUB CONTROL MODULE)
19	W	FLEXRAY COMMUNICATION-H
20	W	FLEXRAY COMMUNICATION-L
22	BB	BACK UP SIGNAL TO CAN WAKE UP
24	BR	CAN WAKE UP
26	W	BACK UP SIGNAL TO CAN WAKE UP (SUB CONTROL MODULE)
28	W	IGNITION POWER SUPPLY
29	R	STEERING CLUTCH +
27	WB	APERTURE POWER SUPPLY TO STEERING ANGLE SUB CONTROL MODULE
28	R	STEERING CLUTCH -
29	L	FORCE MOTOR TEMPERATURE SENSOR - GROUND
30	B	FORCE MOTOR TEMPERATURE SENSOR + GROUND


Connector No.	M81
Connector Name	TOU
Connector Type	TH40FW-RH



HS

Terminal No.	Color	Wire	Signal Name [Specification]
1	R	BAT	
2	P	IGN	
4	R	IGN	
5	SB	ACC OUTPUT	
6	SB	ACC OUTPUT	
7	B	IGN SW ON	
9	L	CAN-H	
10	P	CAN-L	
14	B	AUDIO TYPE RECOGNITION SIGNAL	
18	L	MICROPHONE VCC	
19	G	MICROPHONE SIGNAL	
20	SHIELD	SHIELD	
21	L	MICROPHONE VCC	
22	G	SHIELD	
23	SHIELD	SHIELD	
34	G	SOS CALL SWITCH SIGNAL	
35	BR	SOS SWITCH LED SIGNAL	

Connector No.	M88
Connector Name	A/C AUTO AMP.
Connector Type	TH40FW-RH

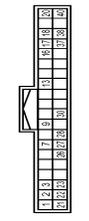

HS

Terminal No.	Color	Wire	Signal Name [Specification]
1	L	CAN-H	
2	B	GROUND	
3	W	BAT	
7	G	AMBIENT SENS	
9	R	SUNLOAD SENS	
13	V	IGN SW ACC	
16	P	LIN	
17	R	DOOR MOTOR PWR SPL	
18	P	BLOWER MOTOR CONT	
20	L	HEAT STRG WHL RLY CONT	
21	P	CAN-L	
22	B	GROUND	
23	W	IGN SW ON	
26	B	SENS GND	
27	LG	IN-VEHICLE SENS	
28	BR	INTRAPIC SENS	
30	PG	EXH GAS OUT ODO/DTCY SENS	
32	B	IGNREC CONT	
33	EG	EGY CONT	
49	EG	EGY CONT	


HS

Connector No.	M33
Connector Name	FUSE BLOCK (J/B)
Connector Type	TH40FW-RH



Terminal No.	Color	Wire	Signal Name [Specification]
10C	V		
11C	V		
13C	L		
14C	Y		
15C	R		
16C	R		
17C	L		

Connector No.	M100
Connector Name	DISPLAY CONTROL UNIT
Connector Type	TH24FH-RH

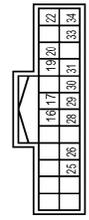

HS

Terminal No.	Color	Wire	Signal Name [Specification]
16	SB	AV COMM (L)	
17	P	CAN-L	
19	R	DIMMER SIGNAL	
20	BR	REVERSE SIGNAL	
22	B	GND	
25	SB		
26	BR	CAMERA SWITCH SIGNAL	
28	LG	AV COMM (H)	
29	L	CAN-H	
30	R	IGN	
31	R	VEHICLE SPEED SIGNAL (G-FUSE)	
33	SB	ACC	
34	Y	BAT	

Connector No.	M133
Connector Name	FUSE BLOCK (J/B)
Connector Type	TH40FW-RH

HS

B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

CONSULT CHECKING SYSTEM (WITHOUT AROUND VIEW MONITOR)

	BC	BC	
	P	- [Without DRPO]	
	B	- [With DRPO]	
	W	-	
	L	-	
	L	-	
	L	-	
	L	-	
	L	-	
	LG	-	
	SB	-	
	P	-	
	W	-	
	W	-	
	W	-	
	R	-	
	R	-	
	W	-	
	R	-	
	B	-	
	W/B	-	
	SB	-	
	R	-	
	R	-	
	W	-	
	SB	-	
	V	-	
	P	-	
	P	-	
	G	-	
	G	-	
	P	-	
	G	-	
	G	-	
	V	-	


JRAWC0387GB

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

WITH AROUND VIEM MONITOR, WITHOUT ICC

CONSULT CHECKING SYSTEM (WITH AROUND VIEW MONITOR, WITHOUT ICC)

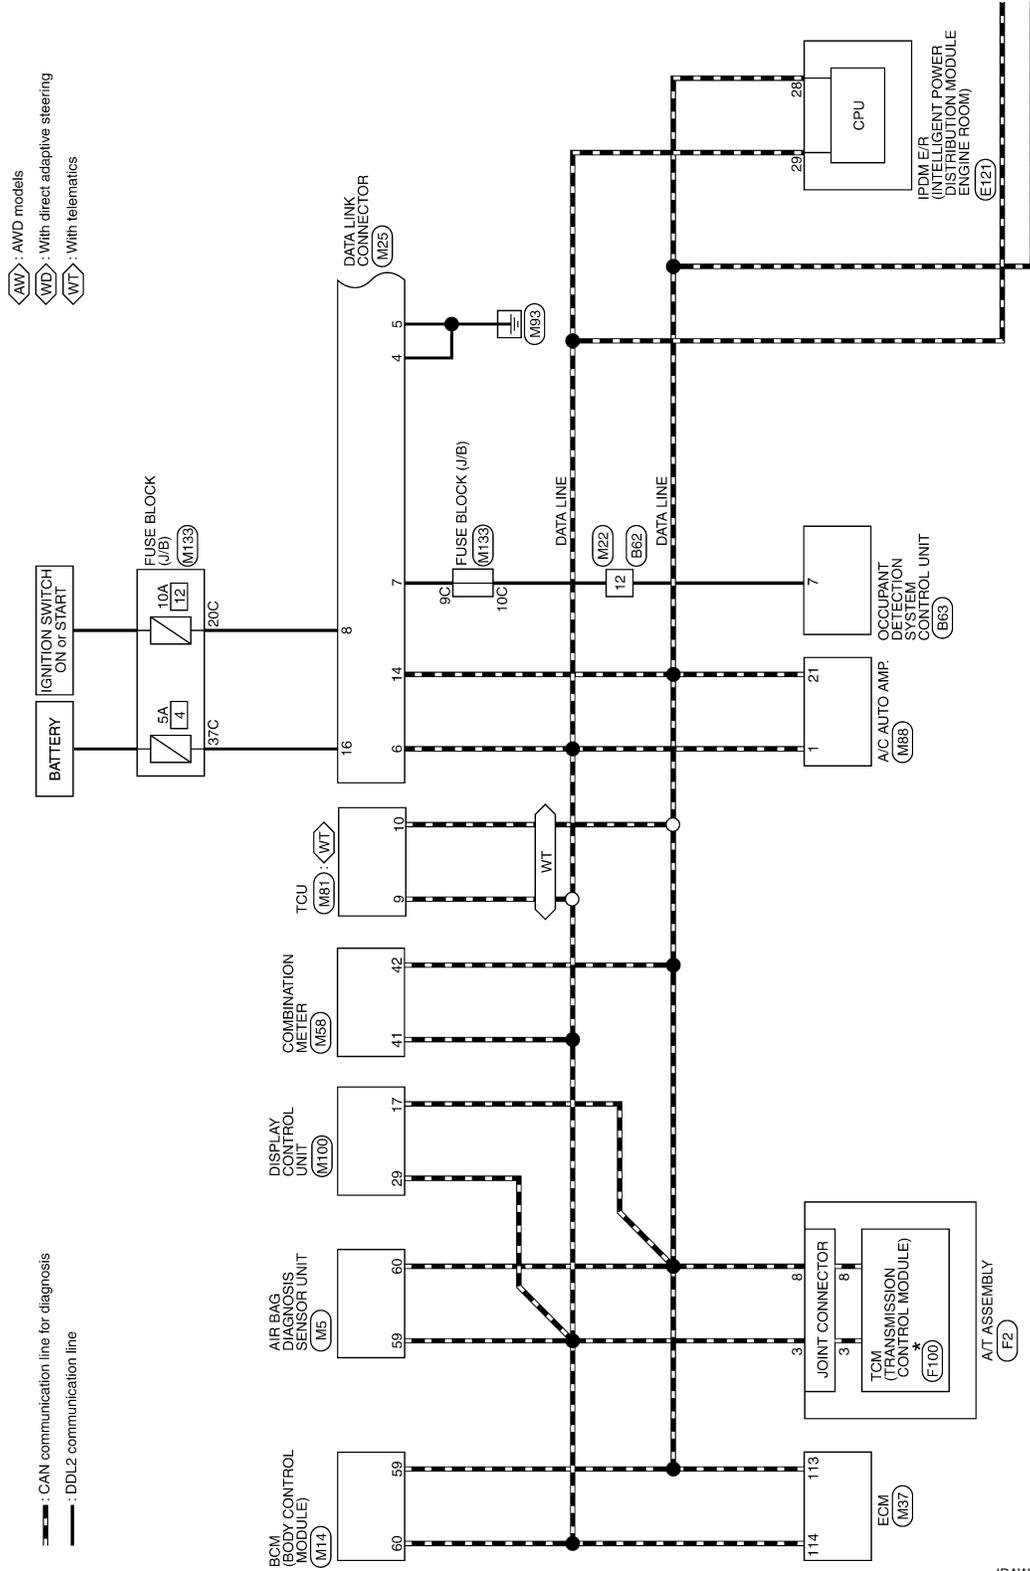

* : This connector is not shown in "Harness Layout".

2013/06/04


JRAWC0388GB

GI

B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

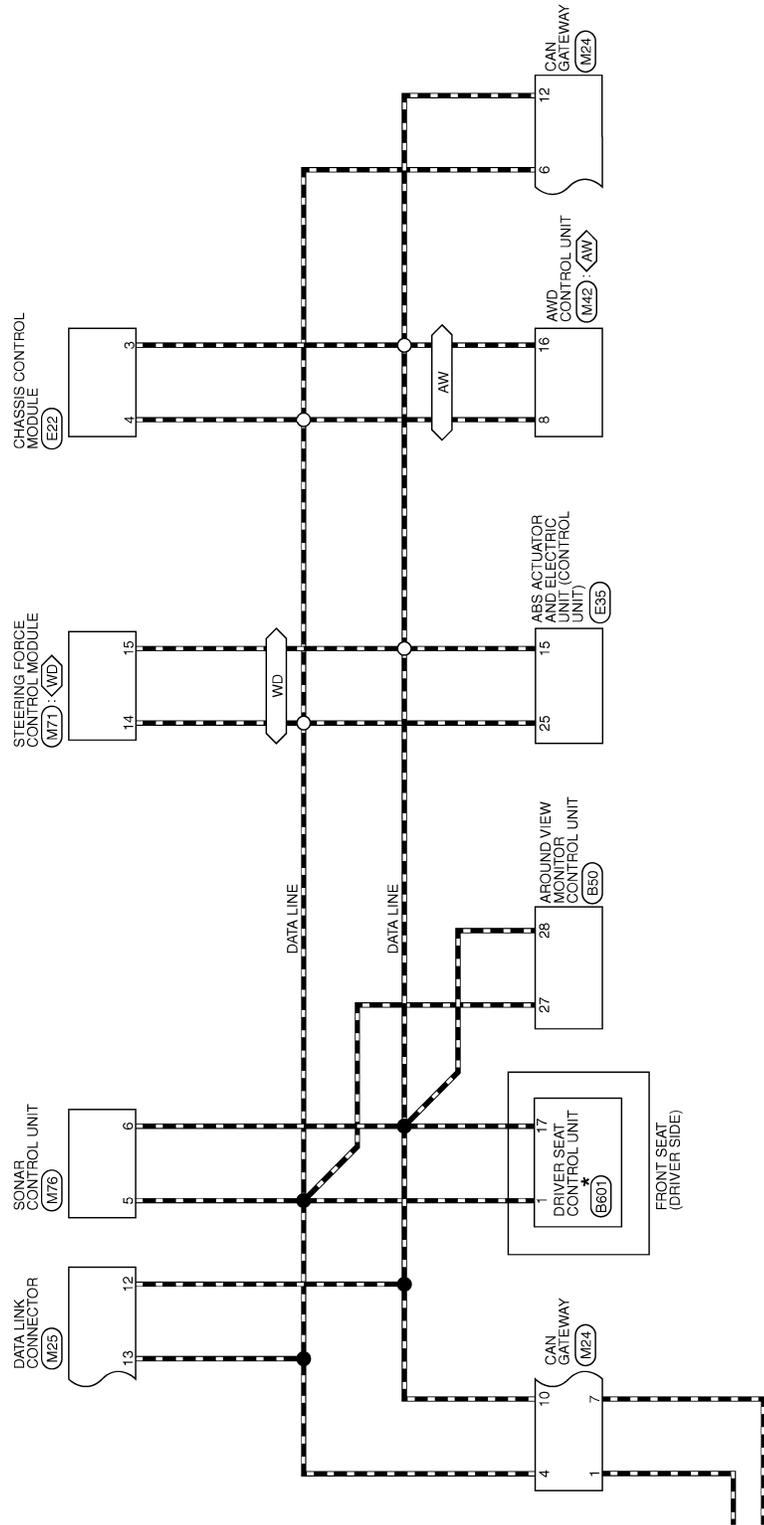

JRAWC0389GB

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

GI

CONSULT CHECKING SYSTEM (WITH AROUND VIEW MONITOR, WITHOUT ICC)

Connector No.	B50
Connector Name	AROUND VIEW MONITOR CONTROL UNIT
Connector Type	TH48FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GND
2	LG	IGN
3	LG	ACC
4	P	AV COMM (H)
19	LG	AV COMM (L)
20	P	AV COMM GND
23	SHIELD	REVERSE SIGNAL
25	BG	REVERSE SIGNAL
27	L	CAN-H
28	P	CAN-L (W/IR-ADAS)
28	R	CAN-L (W/IR-ASCD)
30	W	RETRACT MOTOR OPERATION SIGNAL (OPEN)
32	G	RETRACT MOTOR OPERATION SIGNAL (CLOSE)


Connector No.	B82
Connector Name	WIPE TO WIRE
Connector Type	TH88FW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	—
2	R	—
3	R	— [With BOSE system]
3	W	— [Without BOSE system]
4	SHIELD	—
5	G	—

CONSULT CHECKING SYSTEM (WITH AROUND VIEW MONITOR, WITHOUT ICC)

Connector No.	B61
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	TH38FW-NH

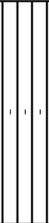

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
2	BR	UPSTRT SW
3	BR	START SW
4	P	PULSE (RECLINER)
5	V	PULSE (TELESCOPIE)
6	GY	ADDRESS 2
7	G	IND 2
8	V	SLIDE SW (BACKWARD)
9	W	RECLINER SW (BACKWARD)
10	O	TILT SW (DOWNWARD)
11	G	LIFTER SW (DOWNWARD)
12	SB	POWER SUPPLY (ENCODER)
17	P	CAN-L
18	LG	PULSE (SIDE SENSOR)
19	W	PULSE (UPPER FRONT)
20	SB	PULSE (TILT SENSOR)
22	O	ADDRESS 1
23	W	IND 1
24	P	SLIDE SW (FORWARD)
25	Y	RECLINER SW (FORWARD)
26	GY	TILT SW (UPWARD)
27	L	LIFTER SW (UPWARD)
28	Y	SET SW

Connector No.	B63
Connector Name	OCCUPANT DETECTION SYSTEM CONTROL UNIT
Connector Type	TH88FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
2	V	COMMUNICATION
4	R	IGN
5	B	GND
7	Y	K-LINE

Connector No.	B801
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	TH38FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
2	BR	UPSTRT SW
3	BR	START SW
4	P	PULSE (RECLINER)
5	V	PULSE (TELESCOPIE)
6	GY	ADDRESS 2
7	G	IND 2
8	V	SLIDE SW (BACKWARD)
9	W	RECLINER SW (BACKWARD)
10	O	TILT SW (DOWNWARD)
11	G	LIFTER SW (DOWNWARD)
12	SB	POWER SUPPLY (ENCODER)
17	P	CAN-L
18	LG	PULSE (SIDE SENSOR)
19	W	PULSE (UPPER FRONT)
20	SB	PULSE (TILT SENSOR)
22	O	ADDRESS 1
23	W	IND 1
24	P	SLIDE SW (FORWARD)
25	Y	RECLINER SW (FORWARD)
26	GY	TILT SW (UPWARD)
27	L	LIFTER SW (UPWARD)
28	Y	SET SW

JRAWC0390GB


B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >


CONSULT CHECKING SYSTEM (WITH AROUND VIEW MONITOR WITHOUT ICC)

Connector No.	E22
Connector Name	CHASSIS CONTROL MODULE
Connector Type	TU24EW-NH

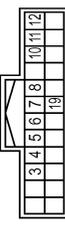


Terminal No.	Color	Wire	Signal Name [Specification]
1	B	P	IGN
2	R	P	CAN-L (With Gateway)
3	R	P	CAN-L (With Gateway)
4	L	V	DRIVE MODE SELECT SW (UP)
5	V	V	DRIVE MODE SELECT SW (DOWN)
6	G	G	CHASSIS COMM-L
7	W	W	CHASSIS COMM-L
8	W	W	CHASSIS COMM-L
10	G	G	IGN
11	L	L	CHASSIS COMM-H
12	B	B	GROUND
19	L	L	CHASSIS COMM-H

Connector No.	E35
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	SA220EP-SL24-U

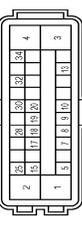

Terminal No.	Color	Wire	Signal Name [Specification]
1	B	B	GROUND
2	B	B	GROUND
3	G	G	VALVE BATTERY
4	Y	Y	MOUSE BATTERY
5	LG	LG	STOP LAMP SW SIGNAL (With ICC)
7	GR	GR	RR LH WHEEL SENSOR SIGNAL
8	G	G	RR LH WHEEL SENSOR POWER SUPPLY
9	BR	BR	FR RH WHEEL SENSOR SIGNAL
10	GR	GR	FR RH WHEEL SENSOR POWER SUPPLY

Connector No.	E21
Connector Name	FR L/R WHEEL SENSOR POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TU132PW-NH

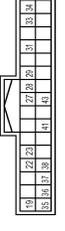

Terminal No.	Color	Wire	Signal Name [Specification]
1	R	R	VACUUM SENSOR SIGNAL
2	R	R	CAN-L (With Gateway)
3	R	R	CAN-L (With Gateway)
4	Y	Y	RR RH WHEEL SENSOR SIGNAL
5	SB	SB	FR LH WHEEL SENSOR SIGNAL
6	BG	BG	FR LH WHEEL SENSOR POWER SUPPLY
7	L	L	CAN-H
25	G	G	VACUUM SENSOR POWER SUPPLY
28	R	R	VDO OFF SW SIGNAL
30	R	R	VACUUM SENSOR GROUND
32	SHIELD	SHIELD	IGN
34	G	G	IGN

Connector No.	E100
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	SP10EFG



Terminal No.	Color	Wire	Signal Name [Specification]
1	-	-	IGNITION POWER SUPPLY
2	-	-	BATTERY POWER SUPPLY (EMERGENCY BACK-UP)
3	L	L	CAN-H
4	LG	LG	K-LINE
5	B	B	GROUND
6	GR	GR	IGNITION POWER SUPPLY
7	BG	BG	BACK-UP LAMP RELAY
8	P	P	CAN-L
9	GR	GR	STARTER RELAY
10	B	B	GROUND

Connector No.	F2
Connector Name	A/T ASSEMBLY
Connector Type	BK10EFG-DGY



Terminal No.	Color	Wire	Signal Name [Specification]
1	-	-	IGNITION POWER SUPPLY
2	-	-	BATTERY POWER SUPPLY (EMERGENCY BACK-UP)
3	-	-	CAN-L
4	-	-	K-LINE
5	-	-	GROUND
6	-	-	IGNITION POWER SUPPLY
7	-	-	BACK-UP LAMP RELAY
8	-	-	CAN-L
9	-	-	STARTER RELAY
10	-	-	GROUND

Connector No.	M5
Connector Name	AIR BAG DIAGNOSIS SENSOR UNIT
Connector Type	NIJ26FY-EX



Terminal No.	Color	Wire	Signal Name [Specification]
1	IG	IG	IGN
2	B	B	IGN
3	Y/R	Y/R	DB1 (+)
4	Y/B	Y/B	DB1 (-)
5	Y	Y	DB2 (+)
6	Y/R	Y/R	AS1 (+)
7	Y/B	Y/B	AS1 (-)
8	Y/G	Y/G	AS2 (+)
9	Y	Y	AS2 (-)
18	Y	Y	EGZS+
19	BR	BR	EGZS-
20	Y/R	Y/R	ACT-VENT+
21	Y/B	Y/B	ACT-VENT-
22	SHIELD	SHIELD	GNP
23	G	G	AMPAS W/L
24	G	G	AMPAS W/L
25	GR	GR	A/B OFF IND
51	G	G	SATELLITE RH2 (+)
52	R	R	SIDE SENS RH2-
53	V	V	SIDE SENS LH2+
54	L	L	SIDE SENS LH2-
57	LG	LG	IVCS
59	L	L	CAN-H
60	P	P	CAN-L

JRAWC0391GB


CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >


GI

CONSULT CHECKING SYSTEM (WITH AROUND VIEW MONITOR, WITHOUT ICC)

Connector No.	M14
Connector Name	BDM (BODY CONTROL MODULE)
Connector Type	1144FB-NH

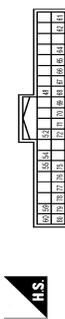

Connector No.	M22
Connector Name	WIRE TO WIRE
Connector Type	1168MW-CS16-TM4

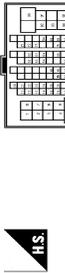

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	CAN-H
2	G	CAN-L
3	W	BATTERY
4	Y	CANZ-H
5	B	GND
6	L	CANZ-H
7	P	CAN-L
8	R	IGN
9	R	CANZ-L
10	R	GND
11	B	GND
12	R	CANZ-L

Connector No.	M25
Connector Name	DATA LINK CONNECTOR
Connector Type	BD18FW



Terminal No.	Color Of Wire	Signal Name [Specification]
3	SB	AV COMM(L)
4	B	AV COMM(R)
5	B	EARTH
6	L	CAN-H
7	V	KLUNE
8	W	IGN SW
11	LG	AV COMM(H)
12	R	CAN-L
13	L	CAN-H
14	P	CAN-L
16	W	POWER

48	BR	-
49	SP	-
50	R	-
51	R	-
52	R	-
53	R	-
54	GR	-
57	R	-
58	SB	-
59	LG	-
62	V	-
63	L	-
64	W	-
66	R	-
68	L	-
69	P	-
71	R	-
72	SHIELD	-
76	V	-
84	BR	-
85	BR	-
86	V	-
87	LG	-
89	BR	-
90	V	-
92	W	-
93	R	-
94	R	-
95	Y	-
96	W	-
97	Y	-
98	BR	-
100	BR	-

Connector No.	M24
Connector Name	CAN GATEWAY
Connector Type	11H12FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	R	-
3	B	-
4	SHIELD	-
5	G	-
6	BG	-
7	LG	-
8	P	-
9	SHIELD	-
10	V	-
11	GR	-
12	V	-
13	LG	-
14	LG	-
15	B	-
16	Y	- [WHL DCM]
17	Y	- [WHEEL DCM]
18	L	-
19	G	-
20	GR	-
21	R	-
22	W	-
23	L	-
24	V	-
25	LG	-
26	GR	-
28	SB	-
30	LG	-
31	R	-
32	R	-
35	W	-
38	V	-
45	G	-
46	SHIELD	-
47	G	-

Terminal No.	Color Of Wire	Signal Name [Specification]
18	R	PUSH-BTN IGN SW LLL PWR
19	G	IGN LINK
20	V	COMBI SW
21	R	RAIN SENSOR
22	P	CAN-H
23	L	REAR WINDOW DEF RLY CONT
24	G	STARTER RLY CONT
25	V	I-KEY WARN BUZZER
26	B	OUTS HD LAMP CONT
27	B	BLOWER FAN RLY CONT
28	W/B	IGN RLYAY (P/B) CONT
29	R	DIMMER
30	GR	A.T. SHIF. SELECT PWR SPLY
31	B	IGN RELAY (UP/DOWN) CONT
32	SB	PASS LOCK SW
33	SB	PASS LOCK SW
34	Y	COMBI SW INPUT 1
35	BR	COMBI SW INPUT 2
36	BG	COMBI SW INPUT 3
37	V	COMBI SW INPUT 4
38	Y	COMBI SW INPUT 5
39	LG	COMBI SW INPUT 6
40	L	TR. LTR. OPN/CL SW


JRAWC0392GB

B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

Connector No.	M78
Connector Name	SOMAR CONTROL UNIT
Connector Type	TH24EW-NH

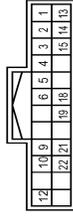

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	CENTER SENSOR SIGNAL FRONT RH
2	LB	CENTER SENSOR SIGNAL FRONT LH
3	WR	CORNER SENSOR SIGNAL FRONT LH
4	GR	CORNER SENSOR SIGNAL FRONT RH
5	L	CAN-H
6	R	CAN-L [With Gateway]
7	P	CAN-L [Without Gateway]
8	G	CENTER SENSOR SIGNAL REAR RH
9	EG	CORNER SENSOR SIGNAL REAR RH
10	B	IGN
11	R	FRONT SENSOR GND
12	B	REAR SENSOR GND
13	B	GND
14	B	FRONT BUZZER DRIVE SIGNAL
15	GR	FRONT BUZZER DRIVE SIGNAL
16	BR	CORNER SENSOR SIGNAL REAR LH
17	W	CORNER SENSOR SIGNAL REAR LH


Connector No.	M81
Connector Name	TCU
Connector Type	TH48FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	BAT
2	B	GND
3	V	ACC
4	R	IGN


51	BR	FUEL LEVEL SENSOR SIGNAL
52	B	GROUND

Connector No.	M71
Connector Name	STEERING FORCE CONTROL MODULE
Connector Type	RH42FB-RZL-RH

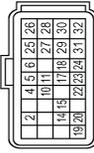

Terminal No.	Color Of Wire	Signal Name [Specification]
2	P	STEERING FORCE MOTOR RESOLVER SIGNAL (SF-S)
4	W	STEERING FORCE MOTOR RESOLVER SIGNAL (SF-S)
5	G	STEERING FORCE MOTOR RESOLVER SIGNAL (SF-S)
6	O	STEERING FORCE MOTOR RESOLVER SIGNAL (SF-S)
10	B	STEERING FORCE MOTOR RESOLVER SIGNAL (RH-H)
11	R	STEERING FORCE MOTOR RESOLVER SIGNAL (RH-H)
14	L	CAN COMMUNICATION-H
15	P	CAN COMMUNICATION-L [Without Gateway]
17	Y	BACK UP SIGNAL TO STEERING ANGLE SENSOR CONTROL MODULE
18	Y	BACK UP SIGNAL TO STEERING ANGLE SENSOR CONTROL MODULE
19	W	FLUXVAY COMMUNICATION-H
20	V	FLUXVAY COMMUNICATION-L
22	BR	BACK UP SIGNAL TO STEERING ANGLE SENSOR CONTROL MODULE
23	BR	CAN WAKE UP
24	R	BACK UP SIGNAL TO STEERING ANGLE SENSOR CONTROL MODULE
25	W	IGNITION POWER SUPPLY
26	R/W	STEERING CLUTCH +
27	W/B	STEERING CLUTCH -
28	R	STEERING CLUTCH -
29	L	FORCE MOTOR TEMPERATURE SENSOR -
30	B	GROUND
31	R	FORCE MOTOR TEMPERATURE SENSOR +
32	B	GROUND

Connector No.	M42
Connector Name	AWD CONTROL UNIT
Connector Type	TH18EW-NH

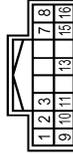


Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	AWD SOL (+)
2	W/B	AWD SOL (-)
3	W/B	FLUID TEMP (-)
7	G	IGN
8	L	CAN-H
9	BG	AWD SOL BATT
10	B	GND
11	B	GND
13	LG	FLUID TEMP (+)
15	W	BATTERY POWER SUPPLY
16	P	CAN-L [Without Gateway]
18	R	CAN-L [With Gateway]

Connector No.	M85
Connector Name	COMBINATION METER
Connector Type	TH12FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
41	L	CAN-H
42	P	CAN-L
43	B	ILLUMINATION CONTROL SIGNAL
44	Y	FUEL LEVEL SENSOR SIGNAL
45	W	BATTERY POWER SUPPLY
46	R	IGNITION SIGNAL
47	LG	AV COMMUNICATION SIGNAL (R)
48	SB	AV COMMUNICATION SIGNAL (L)

Connector No.	M87
Connector Name	ECM
Connector Type	RH24CV-RZL-R-LH-Z

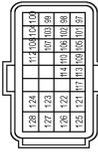

Terminal No.	Color Of Wire	Signal Name [Specification]
86	BR	ACCELERATOR PEDAL POSITION SENSOR 1
87	BR	ACCELERATOR PEDAL POSITION SENSOR 2
88	BR	ACCELERATOR PEDAL POSITION SENSOR 3
89	W	SENSOR GROUND (ACCELERATOR PEDAL POSITION SENSOR 1)
100	G	SENSOR GROUND (ACCELERATOR PEDAL POSITION SENSOR 2)
101	SB	ASCO STEERING SWITCH
102	SB	ICC STEERING SWITCH
102	LG	EVAP CONTROL SYSTEM PRESSURE SENSOR
103	L	SENSOR POWER SUPPLY (ACCELERATOR PEDAL POSITION SENSOR 1)
104	R	SENSOR GROUND (ACCELERATOR PEDAL POSITION SENSOR 1)
105	L	REFRIGERANT PRESSURE SENSOR
106	P	FUEL TANK TEMPERATURE SENSOR
107	GR	SENSOR GROUND (ASCO STEERING SWITCH)
108	Y	SENSOR GROUND (ICC STEERING SWITCH)
109	BP	TRANSMISSION RANGE SWITCH
110	Y	ENGINE OIL PRESSURE SWITCH
111	V	ENGINE OIL PRESSURE SWITCH
112	V	CAN COMMUNICATION LINE
113	P	CAN COMMUNICATION LINE
114	L	DATA LINK CONNECTOR
117	V	EVAP CANISTER VENT CONTROL VALVE
121	LG	STOP LAMP SWITCH
122	SB	ECM GROUND
123	B	ECM GROUND
124	B	ECM GROUND
125	R	POWER SUPPLY FOR ECM
126	EG	POWER SUPPLY FOR ECM
127	B	POWER SUPPLY FOR ECM
127	B	ECM GROUND
128	B	ECM GROUND

JRAWC0393GB

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

GI

B

C

D

E

F

G

H

I

J

K

L

M

N


O

P


CONSULT CHECKING SYSTEM (WITH AROUND VIEW MONITOR, WITHOUT ICC)

3	SB	ACC OUTPUT
5	SB	GND
6	B	CAN-H
9	B	CAN-L
10	P	AUDIO TYPE RECOGNITION SIGNAL
14	B	MICROPHONE VCC
18	L	MICROPHONE SIGNAL
19	G	SHIELD
20	L	MICROPHONE VCC
21	L	SOUND SIGNAL
22	G	SHIELD
23	G	SOS CALL SWITCH SIGNAL
34	G	SOS SWITCH LED SIGNAL
35	BR	

Connector No. M88
 Connector Name A.C AUTO AMP.
 Connector Type TH40FW-NH

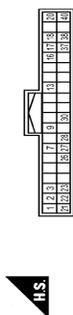


Connector No. M100
 Connector Name DISPLAY CONTROL UNIT
 Connector Type TH24FW-NH

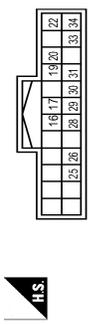

Terminal No.	Color	Wire	Signal Name [Specification]
16	SB		AV COMM (L)
17	R		EMERGENCY SIGNAL
18	R		REVERSE SIGNAL
20	BR		GND
22	B		
25	SB		
26	BR		CAMERA SWITCH SIGNAL
28	LG		AV COMM (H)
29	L		CAN-H
30	R		IGN
31	R		VEHICLE SPEED SIGNAL (9-PULSE)
33	SB		ACC
34	Y		BAT

Terminal No.	Color	Wire	Signal Name [Specification]
2	B		CAN-H
3	W		GND
4	W		BAT
7	G		AMBIENT SENS
9	R		SUNLOAD SENS
13	V		IGN SW ACC
16	P		LIN
17	R		DOOR MOTOR PWR SPLY
18	P		BLOWER MOTOR CONT
20	L		HEAT STRG WHLE RLY CONT
21	P		CAN-L
22	B		GND
23	W		IGN SW ON
24	B		REVERSE SENS
25	LG		IN-TAKE SENS
28	BR		INTAKE SENS
30	BG		EXH GAS/OUT DOOR/DICT SENS
37	B		GND
38	BG		IONIZER CONT
40	BG		ECV CONT

Connector No. M133
 Connector Name FUSE BLOCK (J/B)
 Connector Type TH40FW-NH

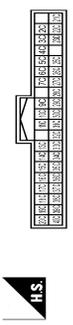


Terminal No.	Color	Wire	Signal Name [Specification]
10C	Y		
11C	Y		
13C	L		
14C	Y		
15C	R		
16C	R		
17C	L		

18C	BG		- [Without DPECO]
19C	B		- [With DPECO]
20C	W		
21C	L		
22C	L		
23C	L		
24C	LG		
25C	SB		
27C	P		
28C	W		
29C	W		
30C	R		
31C	W		
32C	B		
34C	W/B		
35C	SB		
36C	R		
37C	W		
38C	SB		
39C	V		
40C	G		
41C	P		
42C	P		
43C	P		
44C	G		
45C	G		
46C	G		
47C	G		
48C	V		

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >
WITH ICC

CONSULT CHECKING SYSTEM (WITH ICC)

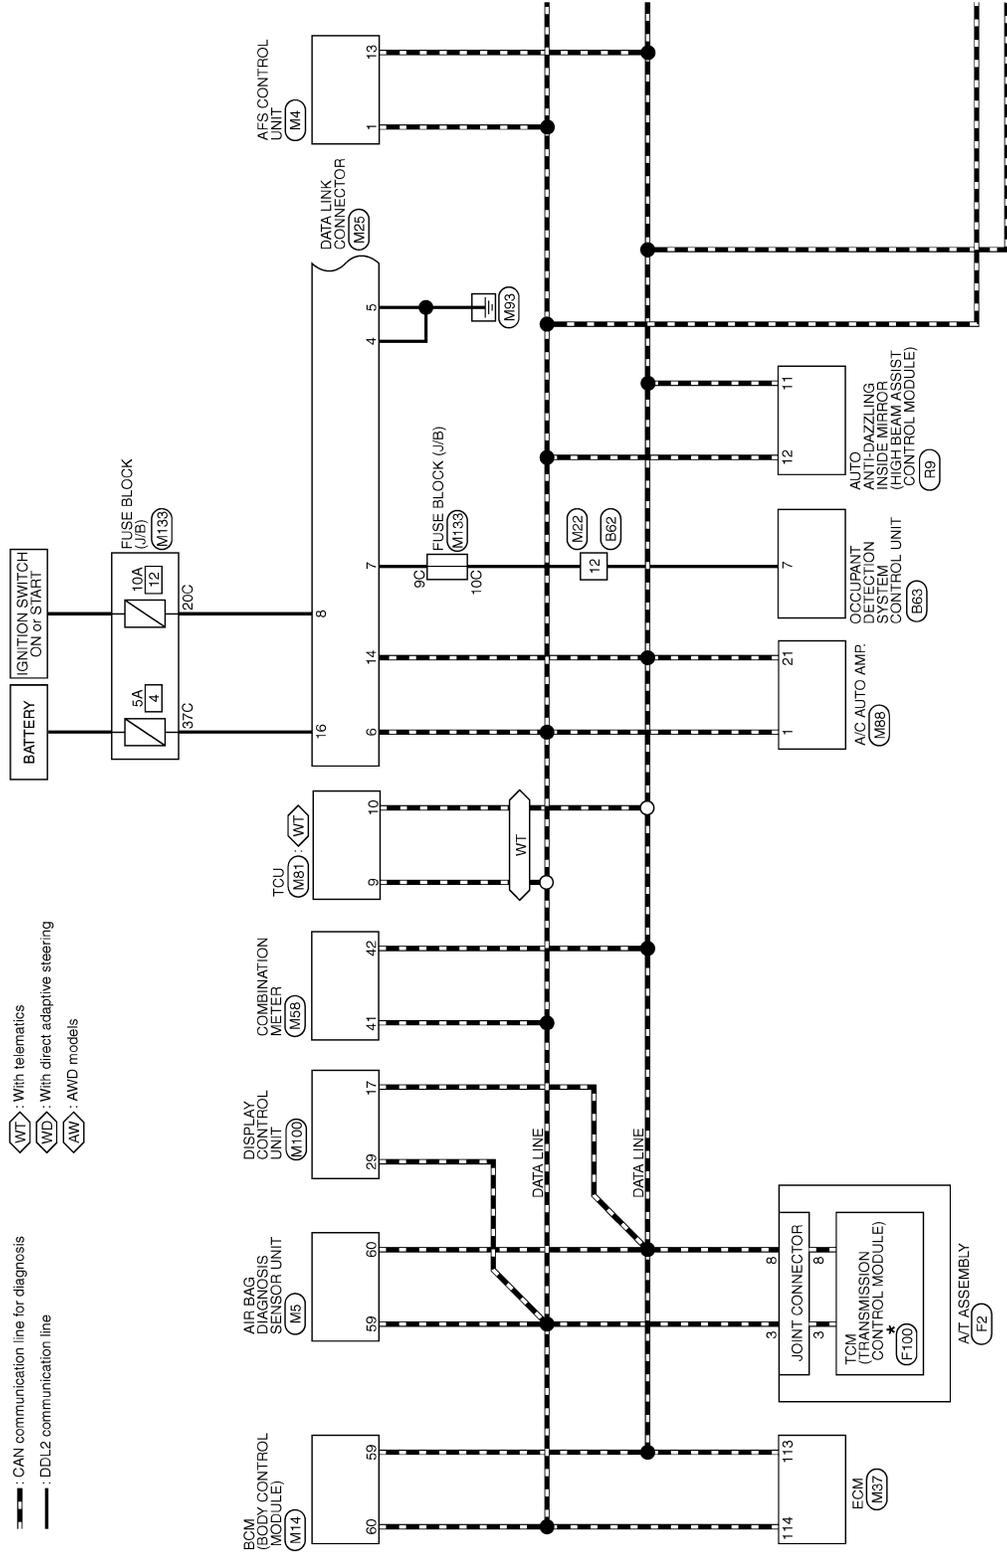


*: This connector is not shown in "Harness Layout".

2013/05/17

JRAWC0395GB

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

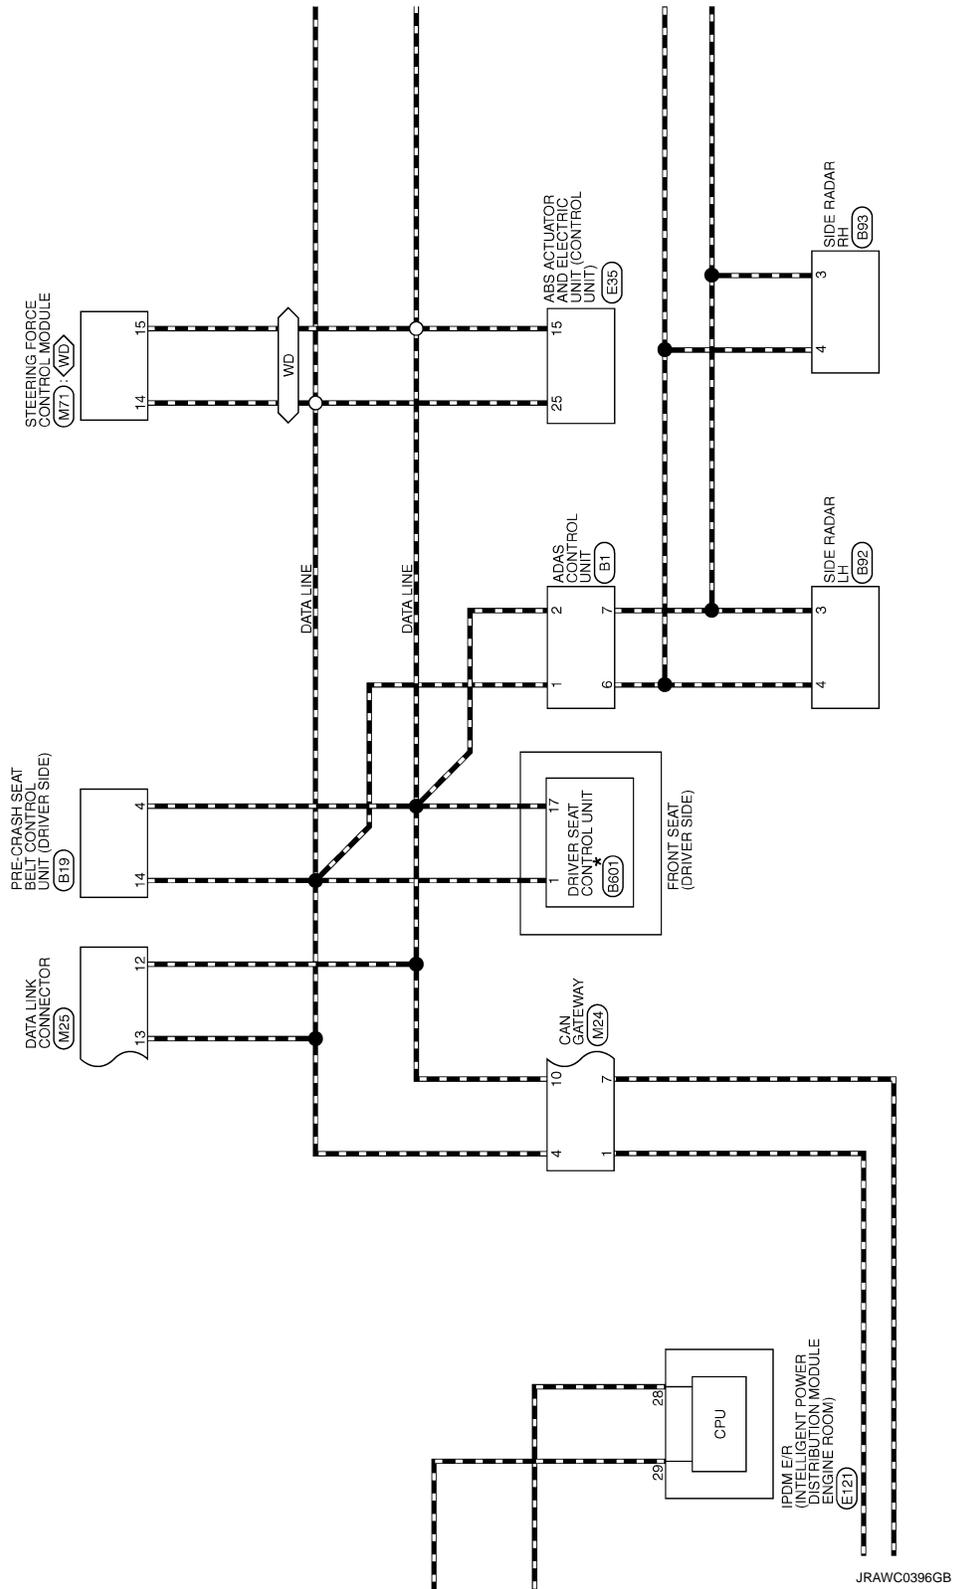


GI

B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

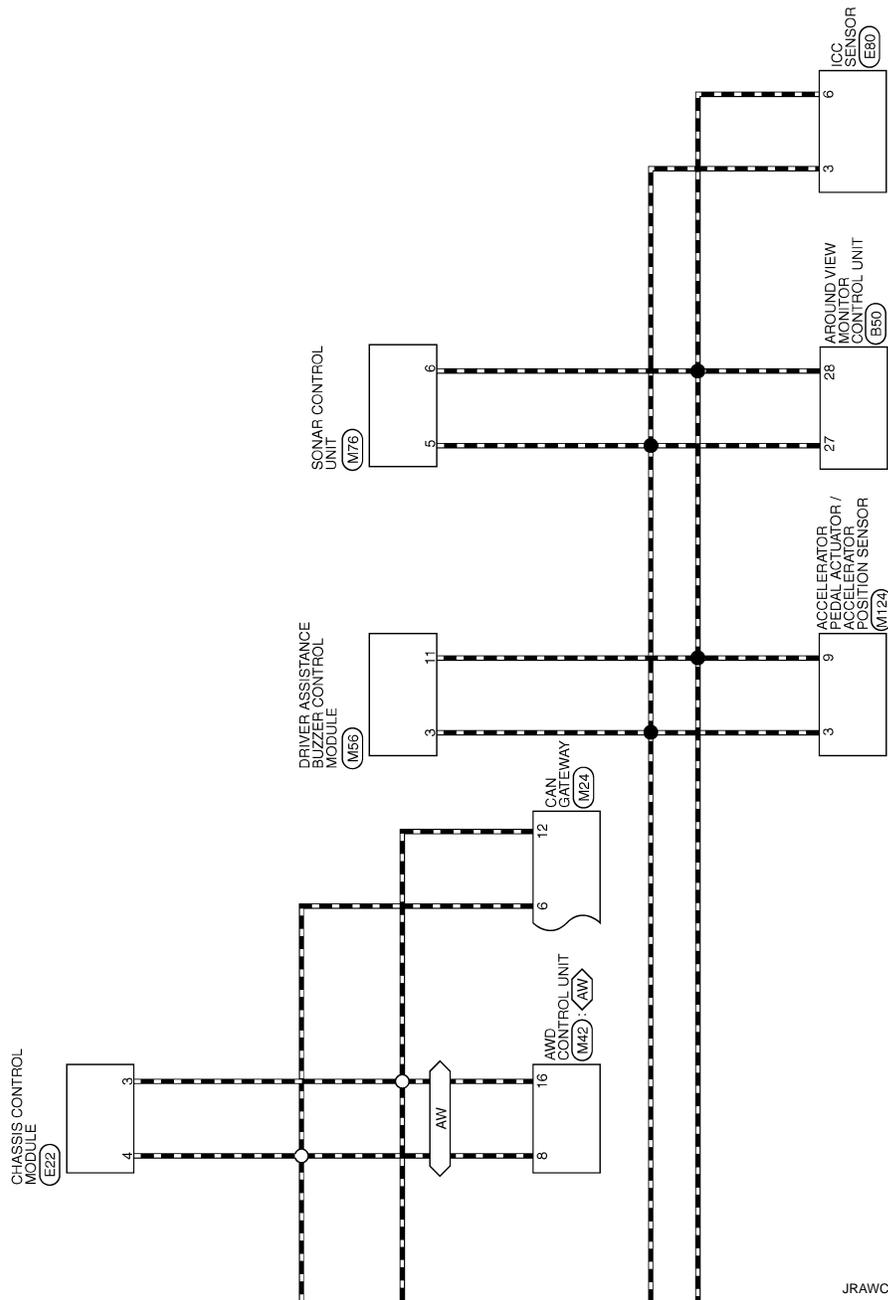

JRAWC0397GB

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

GI

B

C

D

E

F

G

H

I

J

K

L

M


N

O

P

CONSULT CHECKING SYSTEM (WITH ICC)


Connector No.	B1
Connector Name	ADAS CONTROL UNIT
Connector Type	TH2FW-NH

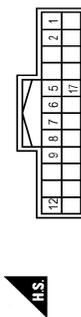

H.S.

Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
2	R	CAN-L
3	B	GROUND
5	B	ITS COMM-H
7	P	ITS COMM-L
8	L	CHASSIS COMM-H
9	V	CHASSIS COMM-L
12	GR	IGNITION
17	V	BRAKE HOLD RLY DRIVE SIGNAL

Connector No.	B19
Connector Name	PRE-CRASH SEAT BELT CONTROL UNIT (DRIVER SIDE)
Connector Type	TH18FW-CSZ

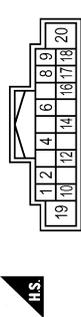

H.S.

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	SIG.BAT
2	G	OUT 1
4	R	CAN.LO
6	W	BACKLIT SVLEN NO
8	BR	PRE-CRASH PZ
9	SHIELD	SHIELD CAN
10	EL	SENS POWER 1
12	B	OUT 2
14	L	CAN.HI
16	Y	LOCAL COMM 1

Connector No.	B50
Connector Name	AROUND VIEW MONITOR CONTROL UNIT
Connector Type	TH40FW-NH



H.S.

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	IGN
2	Y	BAT
3	LG	IGN
4	P	ACC
19	LG	AV COMM (H)
20	P	AV COMM (L)
23	SHIELD	AV COMM GND
25	BG	REVERSE SIGNAL
27	G	CRUISE CAN-S
28	B	CAN-L [With CAS]
29	R	CAN-L [With CAS]
30	W	RETRACT MOTOR OPERATION SIGNAL (OPEN)
32	G	RETRACT MOTOR OPERATION SIGNAL (CLOSE)

Connector No.	B62
Connector Name	WIRE TO WIRE
Connector Type	TH8FW-CS16-1MA



H.S.

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-
3	W	- [With BOSE system]
4	SHIELD	- [Without BOSE system]
5	G	-
6	W	-
7	BR	- [Without BOSE system]
8	W	- [With BOSE system]
8	B	- [Without BOSE system]
8	Y	- [Without BOSE system]
9	SHIELD	-
10	V	-
11	GR	-
12	B	-
14	BG	-
15	GR	-
16	V	-
17	P	-
18	L	-
19	R	-
20	GR	-
21	R	-
22	P	-
23	V	-
24	V	-
25	SB	-
26	G	-
27	LG	-
28	LG	-
36	R	-
37	R	-
38	W	-
39	W	-

45	G	-
46	SHIELD	-
47	EG	-
48	EG	-
49	EG	-
52	Y	-
53	R	-
54	GR	-
57	R	-
58	P	-
59	LG	-
62	P	-
63	L	-
64	W	-
66	LG	-
68	B	-
71	R	-
72	G	-
73	SHIELD	-
76	GR	-
84	BR	-
85	BG	-
86	W	-
87	LG	-
89	LG	-
90	V	-
92	W	-
93	R	-
94	Y	-
95	Y	-
96	W	-
97	L	-
99	BR	-
100	BR	-

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >


CONSULT CHECKING SYSTEM (WITH ICC)

Connector No.	BR3
Connector Name	OCCUPANT DETECTION SYSTEM CONTROL UNIT
Connector Type	HUBBEN-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
4	Y	COMMUNICATION
2	B	GROUND
7	B	GND
5	B	K-LINE

Connector No.	BR2
Connector Name	SIDE RADAR LH
Connector Type	AAC09FB-WP-SP

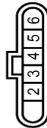

Terminal No.	Color Of Wire	Signal Name [Specification]
2	B	GROUND
3	R	ITS COMM-L
4	L	ITS COMM-H
5	GR	IGNITION
6	BR	BLIND SPOT WARNING/BLIND SPOT INTERVENTION INDICATOR

Connector No.	BR3
Connector Name	SIDE RADAR RH
Connector Type	AAC09FB-WP

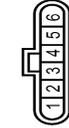

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	RIGHT/LEFT SWITCHING SIGNAL
2	B	GROUND
3	P	ITS COMM-L
4	L	ITS COMM-H
5	GR	IGNITION
6	SB	BLIND SPOT WARNING/BLIND SPOT INTERVENTION INDICATOR


Connector No.	BR01
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	TH32FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	CAN-H
2	BR	UART (TX/RX)
3	R	START SW
4	P	PULSE (RECLINER)
5	V	PULSE (TELESCOPIE)
6	GY	ADDRESS Z
7	Y	ADDRESS 2
8	W	SLIDE SW (BACKWARD)
9	W	RECLINER SW (BACKWARD)
10	O	TILT SW (DOWNWARD)
11	G	LIFTER SW (DOWNWARD)
12	SB	POWER SUPPLY (ENCODER)
17	P	CAN-L
18	LG	PULSE (SLIDE SENSOR)


19	W	PUL SE (LIFTER FRONT)
20	CY	PUL SE (LIFTER REAR)
21	SA	PUL SE (TILT SENSOR)
22	O	ADDRESS 1
23	W	IND 1
24	P	SLIDE SW (FORWARD)
25	Y	RECLINER SW (FORWARD)
26	GY	TILT SW (UPWARD)
27	L	LIFTER SW (UPWARD)
28	Y	SET SW

Connector No.	E22
Connector Name	CHASSIS CONTROL MODULE
Connector Type	TH34FW-NH

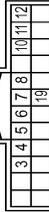

Terminal No.	Color Of Wire	Signal Name [Specification]
3	P	CAN-L (Without Gateway)
4	R	CAN-L (With Gateway)
5	V	DRIVE MODE SELECT SW (UP)
6	G	DRIVE MODE SELECT SW (DOWN)
7	W	CHASSIS COMM-L
8	W	CHASSIS COMM-H
10	G	IGN
11	L	CHASSIS COMM-H
12	B	GROUND
19	L	CHASSIS COMM-H

Connector No.	ES5
Connector Name	ABS ACTIVATOR AND ELECTRIC P/B CONTROL UNIT
Connector Type	SAZ09FB-SL24-U

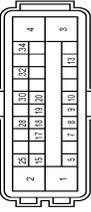

Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	B	GROUND
3	G	GROUND
4	Y	VALVE BATTERY
5	LG	STOP LAMP SW SIGNAL (With ICG)
6	V	STOP LAMP SW SIGNAL (With ASD)
7	GR	RR LH WHEEL SENSOR SIGNAL
8	G	RR RH WHEEL SENSOR POWER SUPPLY
9	BR	FR RH WHEEL SENSOR SIGNAL
10	GR	FR RH WHEEL SENSOR POWER SUPPLY
13	R	VACUUM SENSOR SIGNAL
15	P	CAN-L (Without Gateway)
16	P	CAN-L (With Gateway)
17	R	RR RH WHEEL SENSOR SIGNAL
18	Y	RR RH WHEEL SENSOR POWER SUPPLY
19	SB	FR LH WHEEL SENSOR SIGNAL
20	EG	FR LH WHEEL SENSOR POWER SUPPLY
25	L	CAN-H
28	G	VACUUM SENSOR POWER SUPPLY
30	R	VDC OFF SW SIGNAL
32	SHIELD	VACUUM SENSOR GROUND
34	G	IGN


CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

GI

CONSULT CHECKING SYSTEM (WITH ICC)

Connector No.	E80
Connector Name	ICC SENSOR
Connector Type	A4208FB

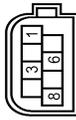

Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	IGNITION
2	R	ITS CAN-H
3	Y	ITS CAN-L
8	B	GROUND

Connector No.	E121
Connector Name	IPM F/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH38PW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
19	G	-
22	BG	-
23	LG	-
27	GR	-
28	P	-
29	L	-
31	G	-
33	SB	-
34	G	-
36	SB	-
37	GR	-
38	BR	-
41	GR	-
43	V	-

Connector No.	F2
Connector Name	A/T ASSEMBLY
Connector Type	FR10EFG-EGY




Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	IGNITION POWER SUPPLY
2	L	BATTERY POWER SUPPLY/MEMORY BACK-UP
3	L	CAN-H
4	LG	K-LINE
5	B	GROUND
6	GR	IGNITION POWER SUPPLY
7	BG	BACK-UP LAMP RELAY
8	P	CAN-L
9	GR	STARTER RELAY
10	B	GROUND

Connector No.	F100
Connector Name	TGM TRANSMISSION CONTROL MODULE
Connector Type	SP10FG




Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	IGNITION POWER SUPPLY
2	-	BATTERY POWER SUPPLY/MEMORY BACK-UP
3	-	CAN-H
4	-	GROUND
5	-	IGNITION POWER SUPPLY
6	-	BACK-UP LAMP RELAY
7	-	CAN-L
8	-	STARTER RELAY
9	-	GROUND
10	-	GROUND

Connector No.	M4
Connector Name	AFS CONTROL UNIT
Connector Type	TH34PW-NH

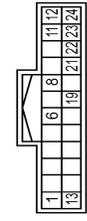

Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	CAN-H
8	GR	HEIGHT SENSOR SIGNAL
9	GR	SWIRL ACTUATOR IN SIGNAL
11	B	GROUND
12	B	IGNITION POWER SUPPLY
13	P	CAN-L
19	P	SWIRL ACTUATOR GROUND
21	LG	HEIGHT SENSOR POWER SUPPLY
22	SB	AIMING MOTOR DRIVE SIGNAL
23	GR	HEIGHT SENSOR GROUND
24	B	AIMING MOTOR GROUND


Connector No.	M5
Connector Name	AFR BAG DIAGNOSIS SENSOR UNIT
Connector Type	TH36PEY-EX

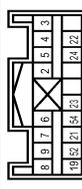

Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	IGN
2	B	GRD
3	Y/B	GR(-)
4	Y/B	GR(+)
5	Y	GR(+)
6	Y/R	ASI(+)
7	Y/B	ASI(-)
8	Y/G	ASZ(+)
9	Y	ASZ(-)

18	Y	EZS+
19	Br	EZS-
20	Y/R	ACT VENT+
21	Y/B	ACT VENT-
22	SHIELD	GND
23	V	AIRBAG W/L
24	G	-
25	GR	A/B OFF IND
51	G	SATELLITE RH2 (+)
52	R	SIDE SENS RH2-
53	V	SIDE SENS LH2+
54	L	SIDE SENS LH2-
57	LG	IVOS
59	L	CAN-H
60	P	CAN-L

Connector No.	M14
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH38PEF-NH

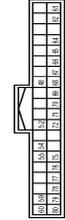

Terminal No.	Color Of Wire	Signal Name [Specification]
48	R	PUSH-BTN IGN SW/LL PWR
52	G	DOUBLE LINK
54	V	COAX LINE
55	R	RAIN SENSOR
59	P	CAN-L
60	L	CAN-H
61	G	REAR WINDOW DEF RLY CONT
62	R	STARTER RLY CONT
64	V	F-KEY WARN BUZZER
65	B	OUTS HD LAMP CONT
66	B	BLOWER FAN RLY CONT
67	W/B	IGN RETAR (P/B) CONT
68	GR	GR(-)
69	GR	A/T SHIF SELECT PWR SHLY
70	B	IGN RELAY (PDM) RLY CONT
71	G	GR DOOR REG SW
72	SB	PASS DOOR REG SW
75	BR	COMBI SW INPUT 5
76	BG	COMBI SW INPUT 4

B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

JRAWC0400GB

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

CONSULT CHECKING SYSTEM (WITH ICC)


77	Y	COMB SW INPUT 3
78	Y	COMB SW INPUT
79	LG	COMB SW INPUT 1
80	L	TR LID OPEN SW

Connector No.	M22
Connector Name	WIRE TO WIRE
Connector Type	TH88MM-CSI16-TM4



Terminal No.	Wire	Signal Name [Specification]
1	LG	-
2	L	-
3	R	-
4	SHIELD	-
5	G	-
6	BG	-
7	LG	-
8	P	-
9	SHIELD	-
10	GR	-
11	GR	-
12	V	-
13	LG	-
14	LG	-
15	P	-
16	SB	- [With DCM] - [Without DCM]
17	Y	-
18	L	-
19	G	-
20	GR	-
21	R	-
22	W	-
23	W	-
24	V	-
25	LG	-
26	GR	-
29	SB	-
30	LG	-
36	R	-

Connector No.	M24
Connector Name	CAN GATEWAY
Connector Type	TH12EW-BH

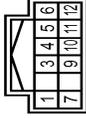

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	CAN-H
2	W	BATTERY
3	L	CAN2-H
4	L	GRD
5	B	CAN2-H
6	L	CAN2-H
7	P	CAN-L
8	R	IGN
9	R	CAN2-L
10	R	CAN2-L
11	B	GRD
12	R	CAN2-L

Connector No.	M25
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color Of Wire	Signal Name [Specification]
3	SB	AV COMM (L)
4	B	EARTH
5	B	CAN-H
6	V	KL LINE
7	V	IGN SW
8	W	IGN SW
11	LG	AV COMM (H)
12	R	CAN-L
13	L	CAN-H
14	P	CAN-L

Connector No.	M37
Connector Name	ECM
Connector Type	PH24FCY-R2E-R-LH-Z



Terminal No.	Color Of Wire	Signal Name [Specification]
87	Y	ACCELERATOR PEDAL POSITION SENSOR 1
88	BR	ACCELERATOR PEDAL POSITION SENSOR 2
89	W	SENSOR POWER SUPPLY ACCELERATOR PEDAL POSITION SENSOR 1
100	G	SENSOR GROUND ACCELERATOR PEDAL POSITION SENSOR 1
101	SB	ASC2 STEERING SWITCH
102	LG	EVAP CONTROL SYSTEM PRESSURE SENSOR
103	L	SENSOR POWER SUPPLY ACCELERATOR PEDAL POSITION SENSOR 2
104	R	SENSOR GROUND ACCELERATOR PEDAL POSITION SENSOR 2
105	L	REFRIGERANT PRESSURE SENSOR
106	P	FUEL TANK TEMPERATURE SENSOR
107	GR	SENSOR GROUND ASS2 ICC STEERING SWITCH
108	V	TRANSMISSION RANGE SWITCH
109	BR	ENGINE SPEED SIGNAL OUTPUT
110	V	GNDA FOPRES/TFPRES
112	V	CAN COMMUNICATION LINE
113	P	CAN COMMUNICATION LINE
114	L	CAN COMMUNICATION LINE
117	V	DATA LINK CONNECTOR
121	LG	EVAP CANISTER VENT CONTROL VALVE
122	SB	STOP LAMP SWITCH
123	B	ECM GROUND
124	B	ECM GROUND
125	R	POWER SUPPLY FOR ECM
126	BG	BRAKE PEDAL POSITION SWITCH
127	B	ECM GROUND
128	B	ECM GROUND

CONSULT/GST CHECKING SYSTEM


< BASIC INSPECTION >

GI

B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

CONSULT CHECKING SYSTEM (WITH ICC)

Connector No.	M62
Connector Name	AMD CONTROL UNIT
Connector Type	TH48FW-NH

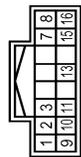


Terminal No.	Color	Wire	Signal Name [Specification]
1	BR	B	AWD SOL (+)
2	W/B	B	AWD SOL (-)
3	G	B	FLUID TEMP (-)
4	L	B	IGN
5	G	B	CAN-H
6	EG	R	AWD SOL BAT
7	B	B	GND
8	L	B	GND
9	LG	B	FLUID TEMP (+)
10	P	B	BATTERY POWER SUPPLY
11	R	B	CAN-L [With Gateway]
12	W	B	GND
13	P	B	GND
14	R	B	GND
15	P	B	GND
16	R	B	GND

Connector No.	M68
Connector Name	COMBINATION METER
Connector Type	TH12FW-NH




Terminal No.	Color	Wire	Signal Name [Specification]
1	B	B	CAN-H
2	B	B	ILLUMINATION CONTROL SIGNAL
3	B	B	FUEL LEVEL SENSOR GROUND
4	Y	B	BATTERY POWER SUPPLY
5	W	B	IGNITION SIGNAL
6	R	B	AV COMMUNICATION SIGNAL (R)
7	LG	B	AV COMMUNICATION SIGNAL (L)
8	SB	B	FUEL LEVEL SENSOR SIGNAL
9	BR	B	GROUND
10	B	B	GROUND
11	B	B	GROUND
12	B	B	GROUND
13	B	B	GROUND
14	B	B	GROUND
15	B	B	GROUND
16	B	B	GROUND

Connector No.	M71
Connector Name	STEERING FORCE CONTROL MODULE
Connector Type	FR42FB-R2P-L-RH

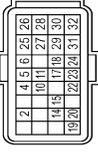

Terminal No.	Color	Wire	Signal Name [Specification]
1	B	B	STEERING FORCE MOTOR RESOLVER SIGNAL (S1-S2)
2	P	B	STEERING FORCE MOTOR RESOLVER SIGNAL (S1-S3)
3	W	B	STEERING FORCE MOTOR RESOLVER SIGNAL (S1-S4)
4	W	B	STEERING FORCE MOTOR RESOLVER SIGNAL (S2-S5)
5	G	B	STEERING FORCE MOTOR RESOLVER SIGNAL (S2-S6)
6	B	B	STEERING FORCE MOTOR RESOLVER SIGNAL (S2-S7)
7	B	B	STEERING FORCE MOTOR RESOLVER SIGNAL (S2-S8)
8	B	B	STEERING FORCE MOTOR RESOLVER SIGNAL (S2-S9)
9	B	B	STEERING FORCE MOTOR RESOLVER SIGNAL (S2-S10)
10	B	B	STEERING FORCE MOTOR RESOLVER SIGNAL (S2-S11)
11	R	B	STEERING FORCE MOTOR RESOLVER SIGNAL (S2-S12)
12	B	B	STEERING FORCE MOTOR RESOLVER SIGNAL (S2-S13)
13	B	B	STEERING FORCE MOTOR RESOLVER SIGNAL (S2-S14)
14	L	B	CAN COMMUNICATION-H
15	P	B	CAN COMMUNICATION-L [Without Gateway]
16	R	B	CAN COMMUNICATION-L [With Gateway]
17	Y	B	BACK UP SIGNAL FROM STEERING ANGLE MAIN CONTROL MODULE


Connector No.	M66
Connector Name	DRIVER ASSISTANCE BUZZER CONTROL MODULE
Connector Type	TH18FW-NH

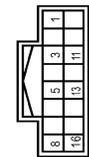

Terminal No.	Color	Wire	Signal Name [Specification]
1	G	B	IGNITION
2	B	B	IT GROUND
3	B	B	IT GROUND
4	B	B	IT GROUND
5	B	B	IT GROUND
6	B	B	IT GROUND
7	B	B	IT GROUND
8	B	B	IT GROUND
9	B	B	IT GROUND
10	B	B	IT GROUND
11	B	B	IT GROUND
12	B	B	IT GROUND
13	B	B	IT GROUND
14	B	B	IT GROUND
15	B	B	IT GROUND
16	B	B	IT GROUND


18	Y	B	BACK UP SIGNAL FROM STEERING ANGLE MAIN CONTROL MODULE
19	W	B	BACK UP SIGNAL FROM STEERING ANGLE MAIN CONTROL MODULE
20	V	B	BACK UP SIGNAL FROM STEERING ANGLE MAIN CONTROL MODULE
21	V	B	BACK UP SIGNAL FROM STEERING ANGLE MAIN CONTROL MODULE
22	BG	B	BACK UP SIGNAL FROM STEERING ANGLE MAIN CONTROL MODULE
23	BR	B	CAN WAKE-UP
24	R	B	BACK UP SIGNAL FROM STEERING ANGLE MAIN CONTROL MODULE
25	W	B	IGNITION POWER SUPPLY
26	R/W	B	STEERING CLUTCH +
27	W/B	B	IGNITION POWER SUPPLY FROM STEERING ANGLE MAIN CONTROL MODULE
28	R	B	STEERING CLUTCH -
29	L	B	FORCE MOTOR TEMPERATURE SENSOR - GROUND
30	B	B	FORCE MOTOR TEMPERATURE SENSOR - GROUND
31	R	B	FORCE MOTOR TEMPERATURE SENSOR - GROUND
32	B	B	FORCE MOTOR TEMPERATURE SENSOR - GROUND

Connector No.	M68
Connector Name	SOMAR CONTROL UNIT
Connector Type	TH48FW-NH

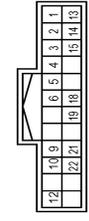


Terminal No.	Color	Wire	Signal Name [Specification]
1	LS	B	CENTER SENSOR SIGNAL FRONT RH
2	LS	B	CENTER SENSOR SIGNAL FRONT LH
3	W	B	CORNER SENSOR SIGNAL FRONT LH
4	GR	B	CORNER SENSOR SIGNAL FRONT RH
5	L	B	CAN-H
6	R	B	CAN-L [With Gateway]
7	P	B	CAN-L [Without Gateway]
8	G	B	CORNER SENSOR SIGNAL REAR RH
9	BG	B	CORNER SENSOR SIGNAL REAR LH
10	BG	B	CORNER SENSOR SIGNAL REAR RH
11	R	B	IGN
12	R	B	FRONT SENSOR GND
13	B	B	REAR SENSOR GND
14	B	B	GND
15	B	B	GND
16	B	B	FRONT BUZZER SIGNAL
17	B	B	REAR BUZZER SIGNAL
18	DA	B	BUZZER POWER SUPPLY
19	DA	B	BUZZER POWER SUPPLY
20	DA	B	BUZZER POWER SUPPLY
21	W	B	CORNER SENSOR SIGNAL REAR LH
22	W	B	CORNER SENSOR SIGNAL REAR RH

Connector No.	M81
Connector Name	TCU
Connector Type	TH48FW-NH

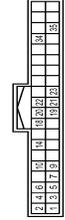

Terminal No.	Color	Wire	Signal Name [Specification]
1	Y	B	BAT
2	D	B	ACC
3	D	B	ACC
4	R	B	IGN
5	SB	B	ACC OUTPUT
6	SB	B	-
7	B	B	GND
8	L	B	CAN-H
9	L	B	CAN-H
10	P	B	CAN-L
11	B	B	AUDIO TYPE RECOGNITION SIGNAL
12	B	B	AUDIO TYPE RECOGNITION SIGNAL
13	L	B	MICROPHONE VCC
14	L	B	MICROPHONE VCC
15	L	B	MICROPHONE SIGNAL
16	L	B	MICROPHONE SIGNAL
17	L	B	MICROPHONE SIGNAL
18	L	B	MICROPHONE SIGNAL
19	G	B	SHIELD
20	SHIELD	B	SHIELD
21	L	B	MICROPHONE VCC
22	G	B	SHIELD
23	SHIELD	B	SHIELD
24	SHIELD	B	SHIELD
25	SHIELD	B	SHIELD
26	SHIELD	B	SHIELD
27	SHIELD	B	SHIELD
28	SHIELD	B	SHIELD
29	SHIELD	B	SHIELD
30	SHIELD	B	SHIELD
31	SHIELD	B	SHIELD
32	SHIELD	B	SHIELD
33	SHIELD	B	SHIELD
34	SHIELD	B	SHIELD
35	BR	B	SOS SWITCH LED SIGNAL

Connector No.	M88
Connector Name	A/C AUTO AMP
Connector Type	TH48FW-NH

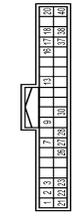

CONSULT/GST CHECKING SYSTEM

< BASIC INSPECTION >

Terminal No.	Color Of Wire	Signal Name [Specification]
9	BR	AUTO ANT-OZZLING OUTSIDE MIRROR GROUND
10	BG	BATTERY POWER SUPPLY
11	GR	CAN-L
12	BR	CAN-H

Terminal No.	Color Of Wire	Signal Name [Specification]
13C	L	-
13C	BG	- [MIRRO-DREO]
13C	P	- [MIR-DREO]
13C	B	-
13C	W	-
21C	L	-
22C	L	-
23C	L	-
23C	LG	-
23C	SB	-
27C	P	-
28C	W	-
29C	W	-
29C	R	-
29C	W	-
31C	W	-
32C	R	-
33C	B	-
34C	W/B	-
35C	SB	-
36C	R	-
37C	W	-
38C	SB	-
38C	V	-
39C	P	-
40C	G	-
41C	P	-
42C	P	-
43C	G	-
44C	V	-

Connector No.	Connector Name	Connector Type
FB	AUTO ANT-OZZLING INSIDE MIRROR	TH12FW-NH-B




Terminal No.	Color Of Wire	Signal Name [Specification]
3	B	GROUND
4	BG	AUTO ANT-OZZLING OUTSIDE MIRROR CONTROL SIGNAL
6	GR	IGNITION POWER SUPPLY

CONSULT CHECKING SYSTEM (WITH ICC)

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	CAN-H
2	B	GND
3	W	BAT
7	G	AMBIENT SENS
9	R	SUNLOAD SENS
13	V	IGN SW ACC
16	P	LIN
17	R	DOOR MOTOR PMR SPLY
18	P	BLOWER MOTOR CONT
20	L	HEAT STRG WHL RLY CONT
21	P	CAN-L
22	B	GND
23	W	IGN SW ON
24	W	IGN SW OFF
27	LG	IN-VEHICLE SENS
28	BR	IN-TAKE SENS
30	BG	EXH GAS/OUT ODO/DTC SENS
37	B	GND
38	BG	IONIZER CONT
40	BG	ECV CONT


Connector No.	Connector Name	Connector Type
M100	DISPLAY CONTROL UNIT	TH24FW-NH

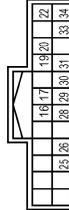

Terminal No.	Color Of Wire	Signal Name [Specification]
16	SB	AV COMM(L)
17	P	CAN-L
19	R	DIMMER SIGNAL
20	BR	REVERSE SIGNAL
22	SB	GND
26	BR	CAMERA SWITCH SIGNAL
28	LG	AV COMM(H)
29	L	CAN-H
30	R	IGN
31	R	VEHICLE SPEED SIGNAL (8-PULSE)
33	SB	ACC


Terminal No.	Color Of Wire	Signal Name [Specification]
M124	BAT	BAT

Connector No.	Connector Name	Connector Type
M124	ACCESSORY SERIAL ACTUATOR/ACCELERATOR SERIAL POSITION SENSOR	RH1ZFB

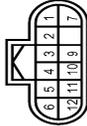

Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	BATTERY
2	G	IGNITION
3	L	ITS COMM-H
4	W	-
5	G	-
6	Y	-
7	B	GROUND
9	Y	ITS COMM-L
10	L	-
11	R	-
12	BR	-

Connector No.	Connector Name	Connector Type
M133	FUSE BLOCK (J/B)	TH40FW-NH

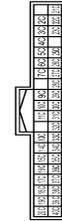

Terminal No.	Color Of Wire	Signal Name [Specification]
11C	V	-
13C	L	-
14C	Y	-
15C	R	-
16C	R	-

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL

ADDITIONAL SERVICE WHEN REMOVING BATTERY NEGATIVE TERMINAL : Re- quired Procedure After Battery Disconnection

INFOID:000000009233799

SYSTEM	ITEM	REFERENCE
Automatic air conditioning system	Temperature setting trimmer	HAC-58. "Temperature Setting Trimmer"
	Inlet port memory function (REC)	HAC-58. "Inlet Port Memory Function (REC)"
	Inlet port memory function (FRE)	HAC-59. "Inlet Port Memory Function (FRE)"
	Foot position setting trimmer	HAC-59. "Foot Position Setting Trimmer"
	Setting of target evaporator temperature upper limit value	HAC-59. "Setting of Target Evaporator Temperature Upper Limit Value"
	Exhaust gas/outside odor detecting gas sensor sensitivity adjustment function	HAC-60. "Exhaust Gas/outside Odor Detecting Sensor Sensitivity Adjustment Function"
	Auto intake switch interlocking movement change	HAC-60. "Auto Intake Switch Interlocking Movement Change Function"
Automatic drive positioner	Automatic drive positioner system	ADP-59. "Description"
Power window control	Power window control system	PWC-38. "Description"
Sunroof system*	Sunroof system	—
Sunshade system*	Sunshade system	—
Rear view monitor	Rear view monitor predictive course line center position adjustment	—
Around view monitor*	Predictive course line center position adjustment	—
Automatic back door system	Automatic back door system	—
Engine oil level read*	Engine oil level read	—

*: Not equipped.