

ENGINE LUBRICATION & COOLING SYSTEMS

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX



SECTION LC

CONTENTS

ENGINE LUBRICATION SYSTEM2	CHECKING RADIATOR CAP 11	AT
Precautions2	CHECKING COOLING SYSTEM FOR LEAKS 12	
LIQUID GASKET APPLICATION PROCEDURE2	Water Pump 12	TF
Preparation2	REMOVAL AND INSTALLATION 12	
SPECIAL SERVICE TOOLS2	REMOVAL 12	
COMMERCIAL SERVICE TOOL3	INSPECTION 14	PD
Lubrication Circuit3	INSTALLATION 14	
Oil Pressure Check4	Thermostat 16	
Oil Pump5	REMOVAL AND INSTALLATION 16	AX
REMOVAL AND INSTALLATION5	INSPECTION 16	
DISASSEMBLY AND ASSEMBLY5	Water Control Valve 17	
OIL PUMP INSPECTION6	REMOVAL AND INSTALLATION 17	SU
REGULATOR VALVE INSPECTION6	INSPECTION 18	
OIL FILTER7	Radiator 19	
Oil Cooler7	REMOVAL AND INSTALLATION 19	BR
REMOVAL AND INSTALLATION7	Cooling Fan (Crankshaft driven) 20	
INSPECTION8	REMOVAL AND INSTALLATION 20	ST
Service Data and Specifications (SDS)8	INSPECTION 20	
OIL PRESSURE8	Refilling Engine Coolant 20	
REGULATOR VALVE8	Radiator (Aluminum type) 21	RS
OIL PUMP8	PREPARATION 21	
ENGINE COOLING SYSTEM9	DISASSEMBLY 21	
Precautions9	ASSEMBLY 22	BT
LIQUID GASKET APPLICATION PROCEDURE9	INSPECTION 23	
Preparation9	Overheating Cause Analysis 24	
SPECIAL SERVICE TOOLS9	Service Data and Specifications (SDS) 25	HA
Cooling Circuit10	THERMOSTAT 25	
System Check11	WATER CONTROL VALVE 25	
CHECKING COOLING SYSTEM HOSES11	RADIATOR 25	SC
CHECKING RADIATOR 11		

ENGINE LUBRICATION SYSTEM

Precautions

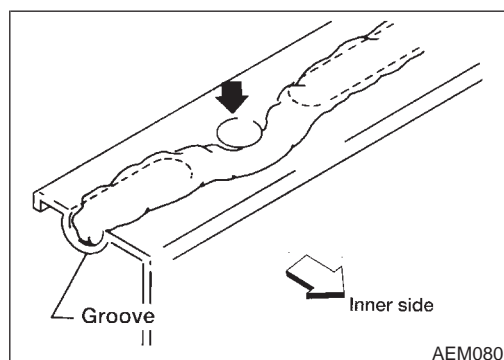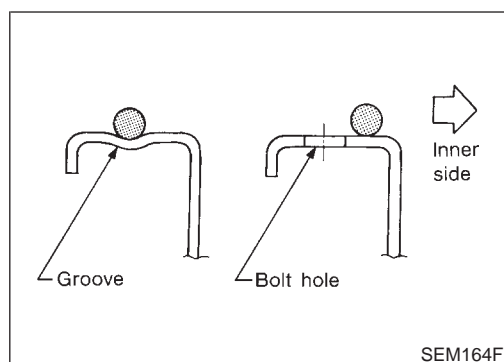

Precautions

LIQUID GASKET APPLICATION PROCEDURE

NBLC0001

1. Use a scraper to remove all traces of old liquid gasket from mating surfaces and grooves. Also, completely clean any oil from these areas.
2. Apply a continuous bead of liquid gasket to mating surfaces. **(Use Genuine RTV silicone sealant Part No. 999MP-A7007 or equivalent.)**
 - For oil pan, be sure liquid gasket diameter is 4.0 to 5.0 mm (0.157 to 0.197 in).
 - For areas except oil pan, be sure liquid gasket diameter is 2.0 to 3.0 mm (0.079 to 0.118 in).
3. Apply liquid gasket around the inner side of bolt holes (unless otherwise specified).
4. Assembly should be done within 5 minutes after coating.
5. Wait at least 30 minutes before refilling engine oil and engine coolant.

Preparation

SPECIAL SERVICE TOOLS

NBLC0002

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.


Tool number (Kent-Moore No.) Tool name	Description
ST25051001 (J25695-1) Oil pressure gauge	<p>NT050</p>
ST25052000 (J25695-2) Hose	<p>Adapting oil pressure gauge to upper oil pan</p> <p>NT559</p>
WS39930000 () Tube pressure	<p>Pressing the tube of liquid gasket</p> <p>NT052</p>

ENGINE LUBRICATION SYSTEM

Preparation (Cont'd)

COMMERCIAL SERVICE TOOL

NBLC0040

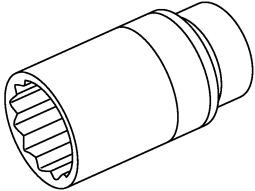Tool name	Description
Deep socket	<p>Removing and installing oil pressure switch Deep socket 26 mm, 3/8 drive</p>  <p>NT818</p>

GI

MA

EM

LC

EC


FE

AT

TF

Lubrication Circuit

NBLC0003

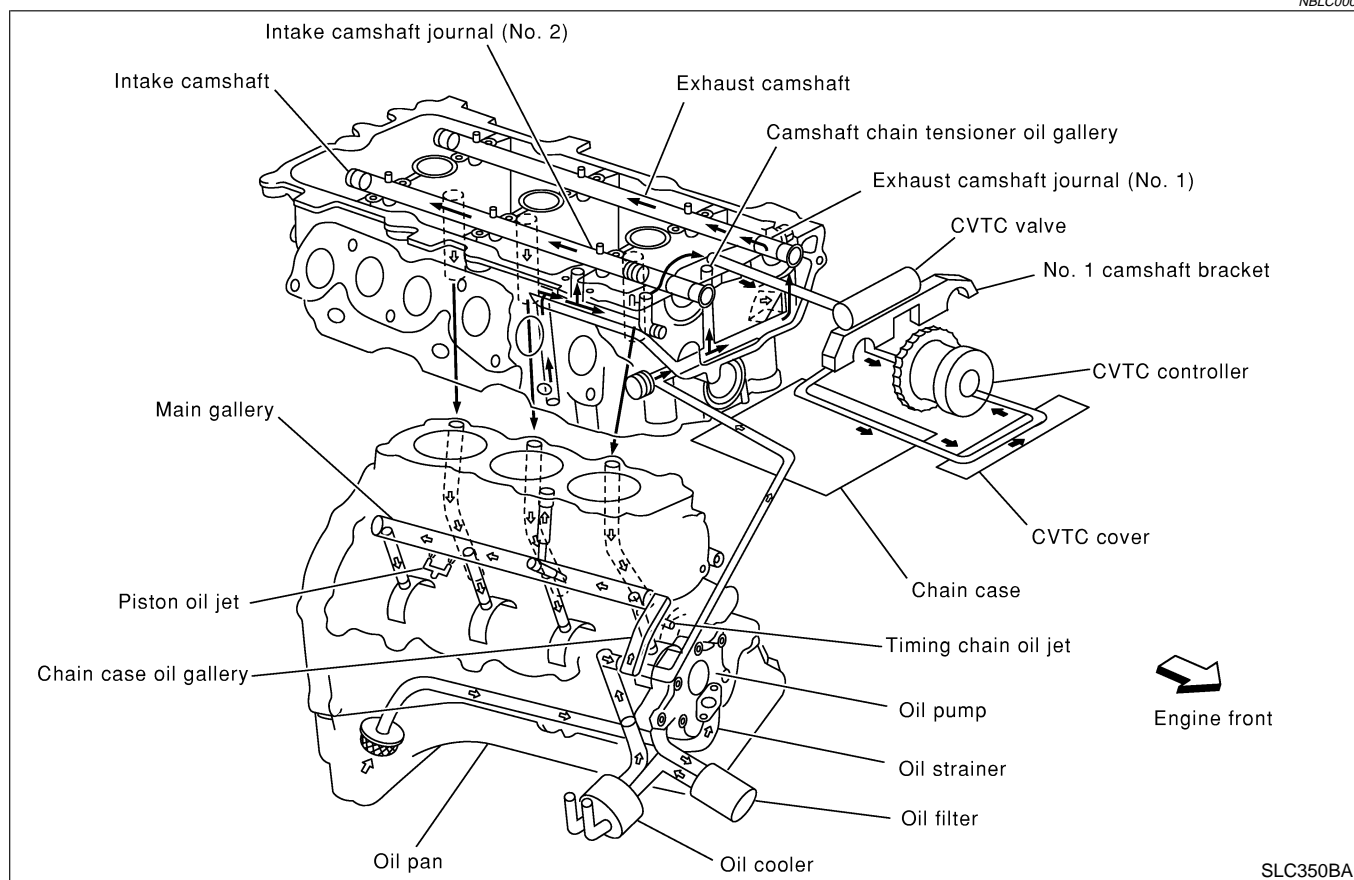

PD

AX

SU

BR

ST

RS

BT

HA




SC

EL

IDX

ENGINE LUBRICATION SYSTEM

Lubrication Circuit (Cont'd)

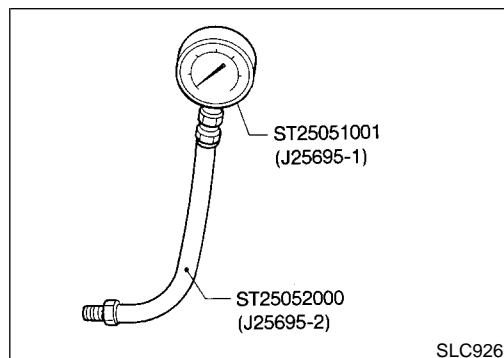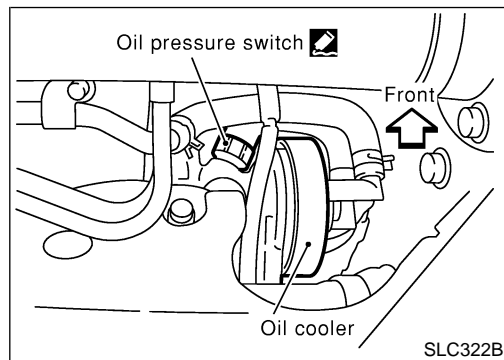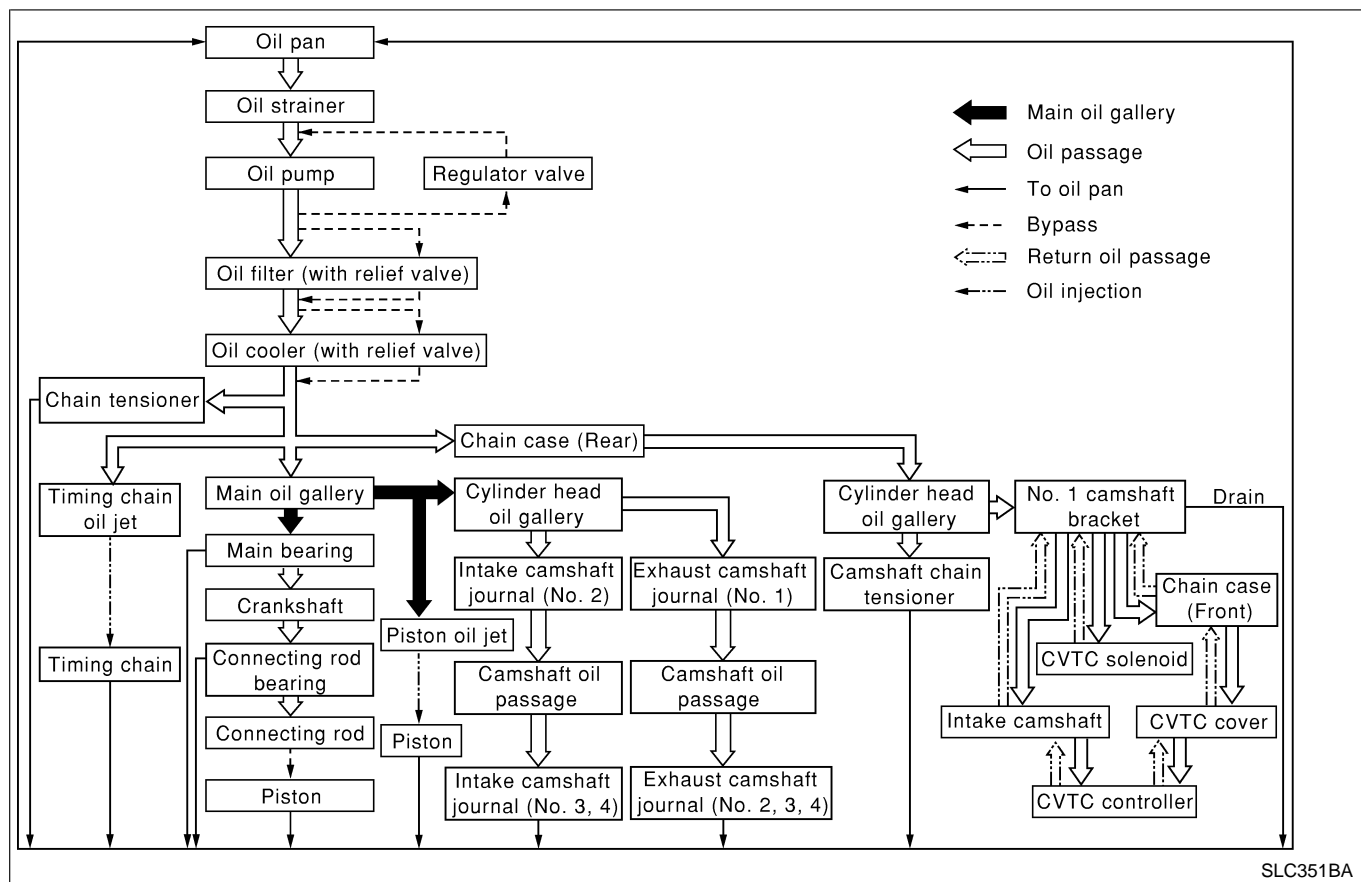

Oil Pressure Check

NBLC0004

WARNING:

- Be careful not to burn yourself, as the engine and oil may be hot.
 - Oil pressure check should be done in "Parking position".
1. Check oil level.
 2. Disconnect oil pressure switch harness connector.
 3. Remove oil pressure switch using a deep socket. (Commercial service tool)
 4. Install pressure gauge.
 5. Start engine and warm it up to normal operating temperature.
 6. Check oil pressure with engine running under no-load.

Engine speed rpm	Approximate discharge pressure kPa (kg/cm ² , psi)
Idle speed 2,000	More than 98 (1.0, 14) 294 (3.0, 43)

If difference is extreme, check oil passage and oil pump for oil leaks.

7. After the inspections, install the oil pressure switch as follows.
 - a. Remove the old sealant adhering to switch and engine.

- b. Apply Genuine RTV silicone sealant Part No. 999MP-A7007 or equivalent to the thread and tighten.

 **13 - 17 N·m (1.25 - 1.75 kg-m, 9 - 12 ft-lb)**

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

Oil Pump


REMOVAL AND INSTALLATION

1. Remove timing chain. Refer to EM-23, "Removal".
2. Remove oil pump assembly.
 - Inspect the oil pump after removing it.
3. Reinstall any parts removed in reverse order of removal.

NBLC0005

DISASSEMBLY AND ASSEMBLY


NBLC0006

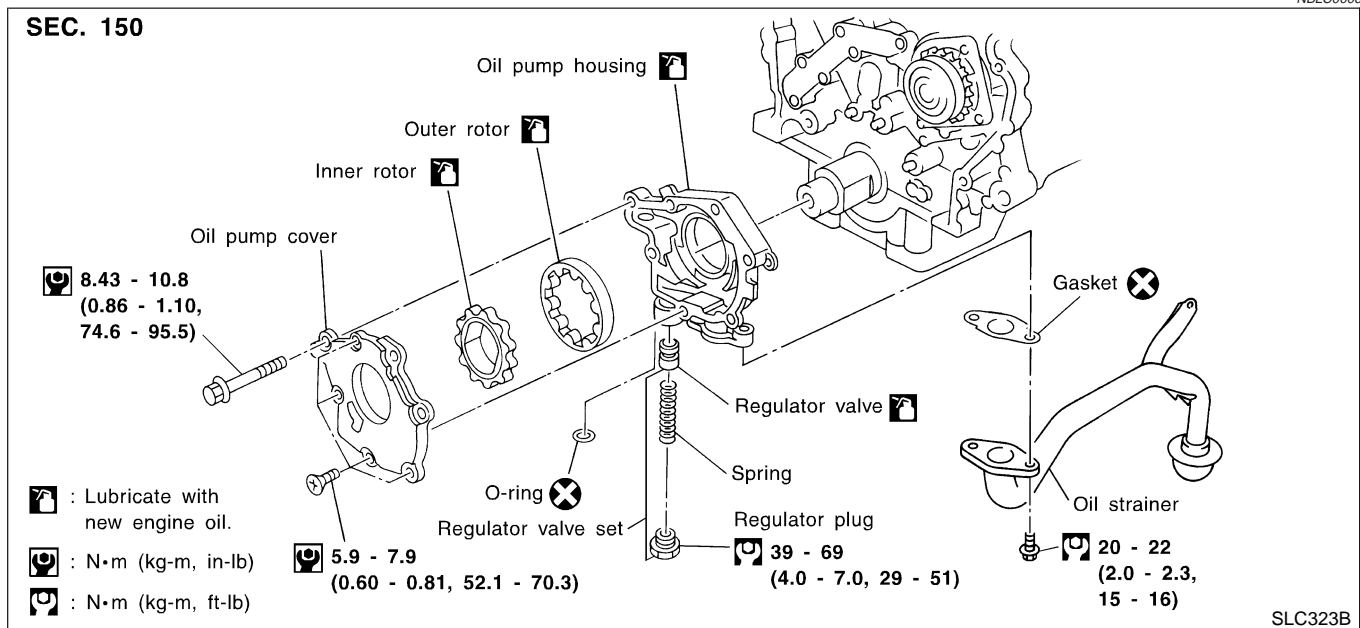

- When installing oil pump, apply engine oil to rotors.

ENGINE LUBRICATION SYSTEM

Oil Pump (Cont'd)

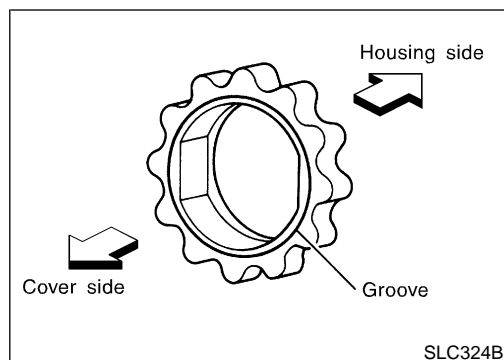

OIL PUMP INSPECTION

NBLC0007





- Install oil pump with the groove of the inner rotor facing the oil pump cover.

Using a feeler gauge, straightedge and micrometers, check the following clearances:

Unit: mm (in)

Body to outer rotor radial clearance 1	0.114 - 0.200 (0.0045 - 0.0079)
Inner rotor to outer gear tip clearance 2	Below 0.18 (0.0071)
Body to inner rotor axial clearance 3	0.030 - 0.070 (0.0012 - 0.0028)
Body to outer rotor axial clearance 4	0.050 - 0.110 (0.0020 - 0.0043)
Inner rotor to brazed portion of housing clearance 5	0.045 - 0.091 (0.0018 - 0.0036)

- If the tip clearance (2) exceeds the limit, replace rotor set.
- If body to rotor clearances (1, 3, 4, 5) exceed the limit, replace oil pump body assembly.

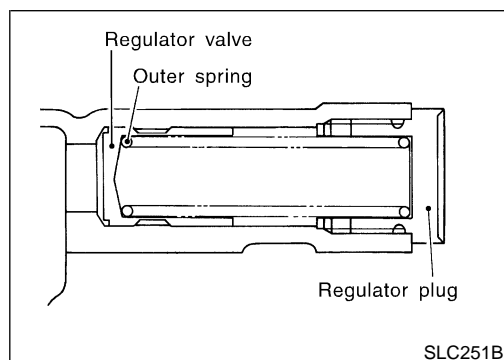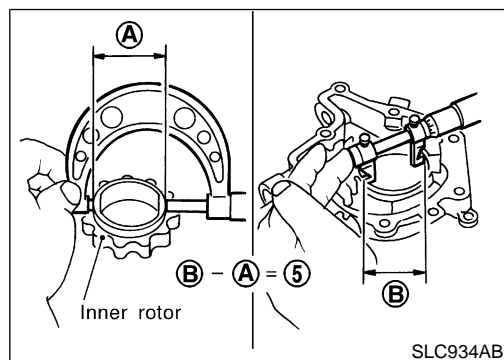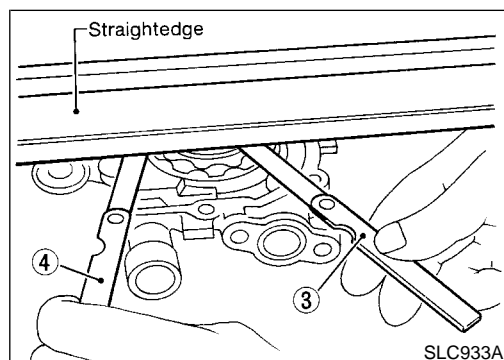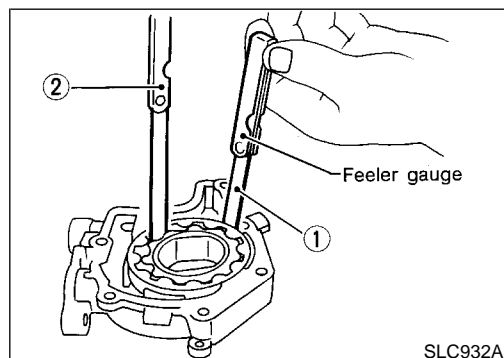


REGULATOR VALVE INSPECTION

NBLC0008

- Visually inspect components for wear and damage.
- Check oil pressure regulator valve sliding surface and valve spring.
- Coat regulator valve with engine oil. Check that it falls smoothly into the valve hole by its own weight.

If damaged, replace regulator valve set or oil pump body.

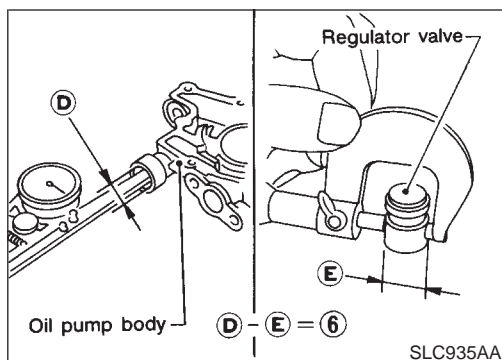


4. Check regulator valve to oil pump body clearance.

Clearance:

6 : 0.040 - 0.097 mm (0.0016 - 0.0038 in)

If it exceeds the limit, replace oil pump body.

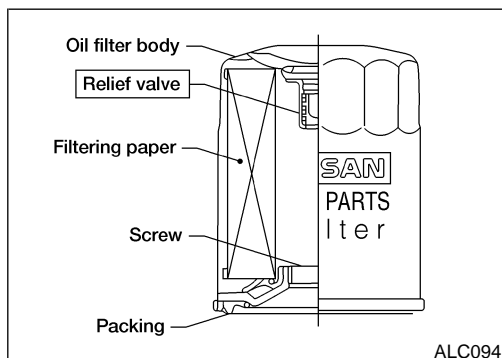

OIL FILTER

The oil filter is a small, full-flow cartridge type and is provided with a relief valve. NBLC0009


- Use Tool specified in MA-18 for changing oil filter.

Oil Cooler

REMOVAL AND INSTALLATION

NBLC0036

SEC. 150•213

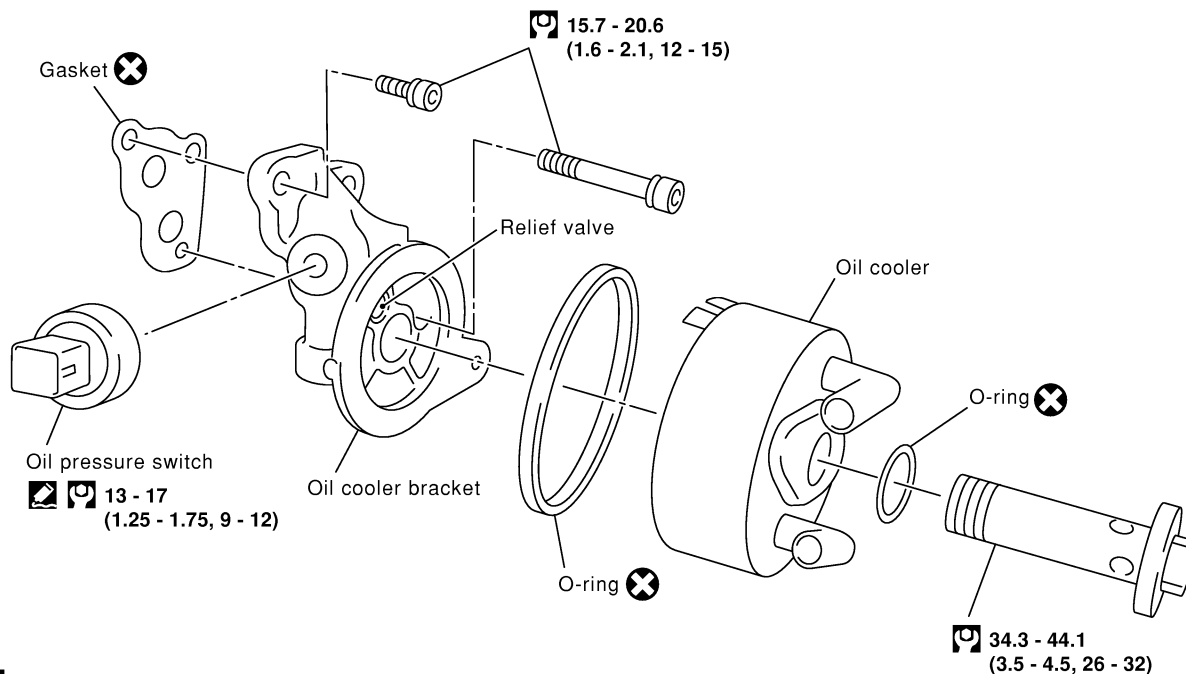

- ☑ : Apply liquid gasket (Genuine RTV silicone sealant part No. 999MP-A7007 or equivalent).
- ☑ : N•m (kg-m, ft-lb)


SLC332B

1. Drain engine oil and coolant.
- Do not spill coolant on the drive belt.
2. Remove oil cooler.

ENGINE LUBRICATION SYSTEM

Oil Cooler (Cont'd)

- Inspect the oil cooler after removing it.

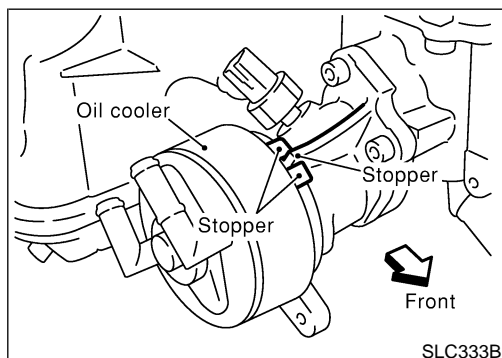

3. Installation is in reverse order of removal.

- **When installing the oil cooler, align the oil cooler stopper with the stopper of the oil cooler bracket.**

INSPECTION

Oil Cooler

NBLC0037

NBLC0037S01

1. Check oil cooler for cracks.
2. Check oil cooler for clogging by blowing through coolant inlet. If necessary, replace oil cooler assembly.

Oil Pressure Relief Valve

NBLC0037S02

Inspect oil pressure relief valve for movement, cracks and breaks by pushing the ball. If replacement is necessary, remove valve by prying it out with a suitable tool. Install a new valve in place by tapping it.

Service Data and Specifications (SDS)

OIL PRESSURE

NBLC0010

Engine speed rpm	Approximate discharge pressure kPa (kg/cm ² , psi)
Idle speed 2,000	More than 98 (1.0, 14) 294 (3.0, 43)

REGULATOR VALVE

NBLC0011

Unit: mm (in)



Regulator valve to oil pump cover clearance	0.040 - 0.097 (0.0016 - 0.0038)
---	---------------------------------

OIL PUMP

NBLC0012

Unit: mm (in)

Body to outer rotor radial clearance	0.114 - 0.200 (0.0045 - 0.0079)
Inner rotor to outer rotor tip clearance	Below 0.18 (0.0071)
Body to inner rotor axial clearance	0.030 - 0.070 (0.0012 - 0.0028)
Body to outer rotor axial clearance	0.050 - 0.110 (0.0020 - 0.0043)
Inner rotor to brazed portion of housing clearance	0.045 - 0.091 (0.0018 - 0.0036)

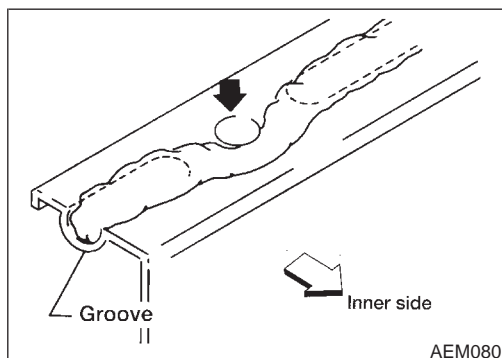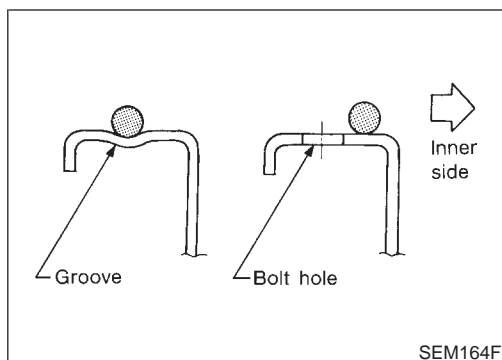

Precautions

LIQUID GASKET APPLICATION PROCEDURE

NBLC0013

1. Use a scraper to remove all traces of old liquid gasket from mating surfaces and grooves. Also, completely clean any oil from these areas.
2. Apply a continuous bead of liquid gasket to mating surfaces. **(Use Genuine RTV silicone sealant Part No. 999MP-A7007 or equivalent.)**
 - For oil pan, be sure liquid gasket diameter is 4.0 to 5.0 mm (0.157 to 0.197 in).
 - For areas except oil pan, be sure liquid gasket diameter is 2.0 to 3.0 mm (0.079 to 0.118 in).
3. Apply liquid gasket around the inner side of bolt holes (unless otherwise specified).
4. Assembly should be done within 5 minutes after coating.
5. Wait at least 30 minutes before refilling engine oil and engine coolant.

Preparation

SPECIAL SERVICE TOOLS

NBLC0014

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.



Tool number (Kent-Moore No.) Tool name	Description
WS39930000 (—) Tube pressure	<p>Pressing the tube of liquid gasket</p> <p>NT052</p>
EG17650301 (J33984-A) Radiator cap tester adapter	<p>Adapting radiator cap tester to radiator filler neck a: 28 (1.10) dia. b: 31.4 (1.236) dia. c: 41.3 (1.626) dia. Unit: mm (in)</p> <p>NT564</p>
KV99103510 (—) Radiator plate pliers A	<p>Installing radiator upper and lower tanks</p> <p>NT224</p>
KV99103520 (—) Radiator plate pliers B	<p>Removing radiator upper and lower tanks</p> <p>NT225</p>

ENGINE COOLING SYSTEM

Cooling Circuit

Cooling Circuit

NBLC0015

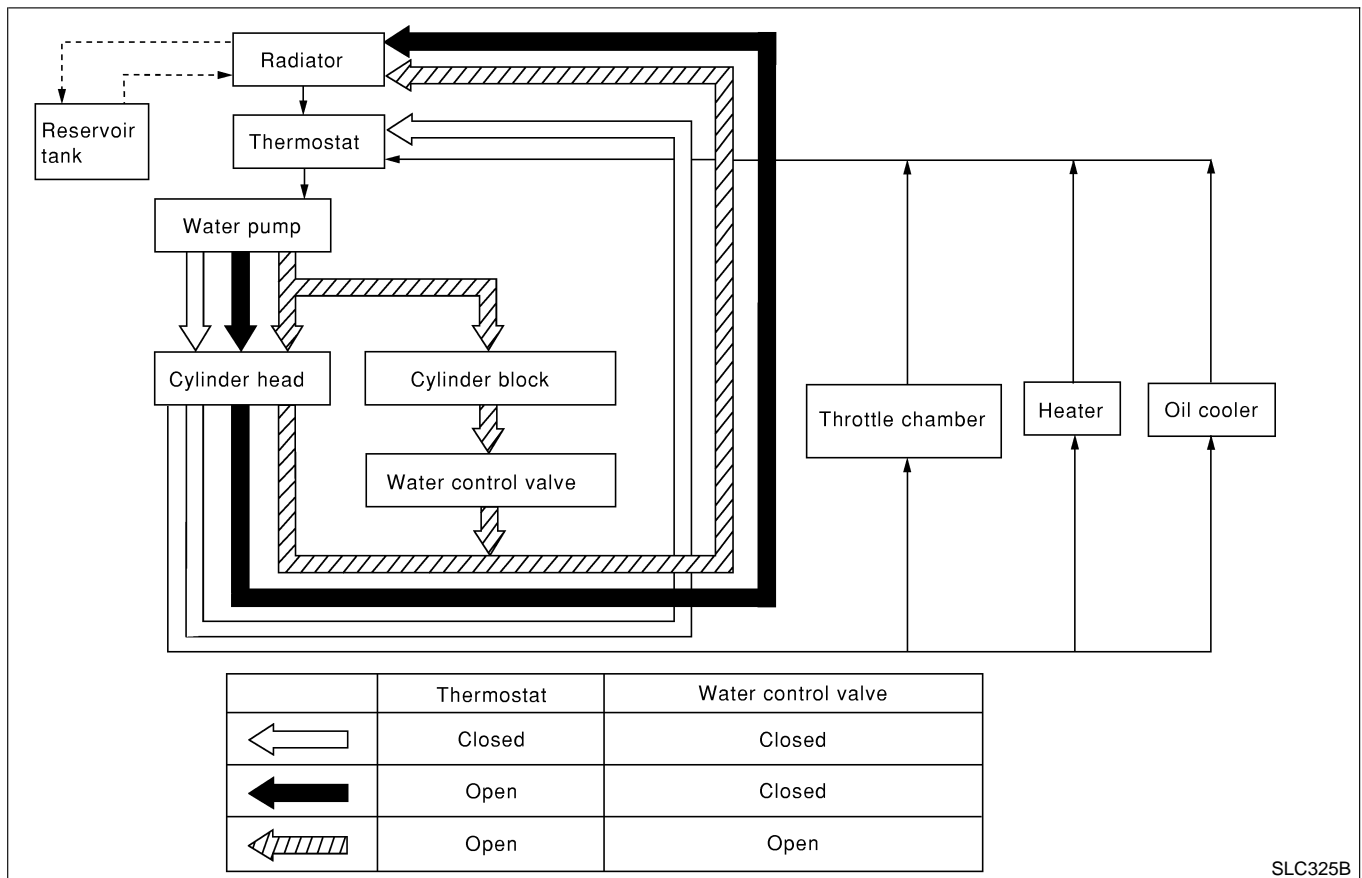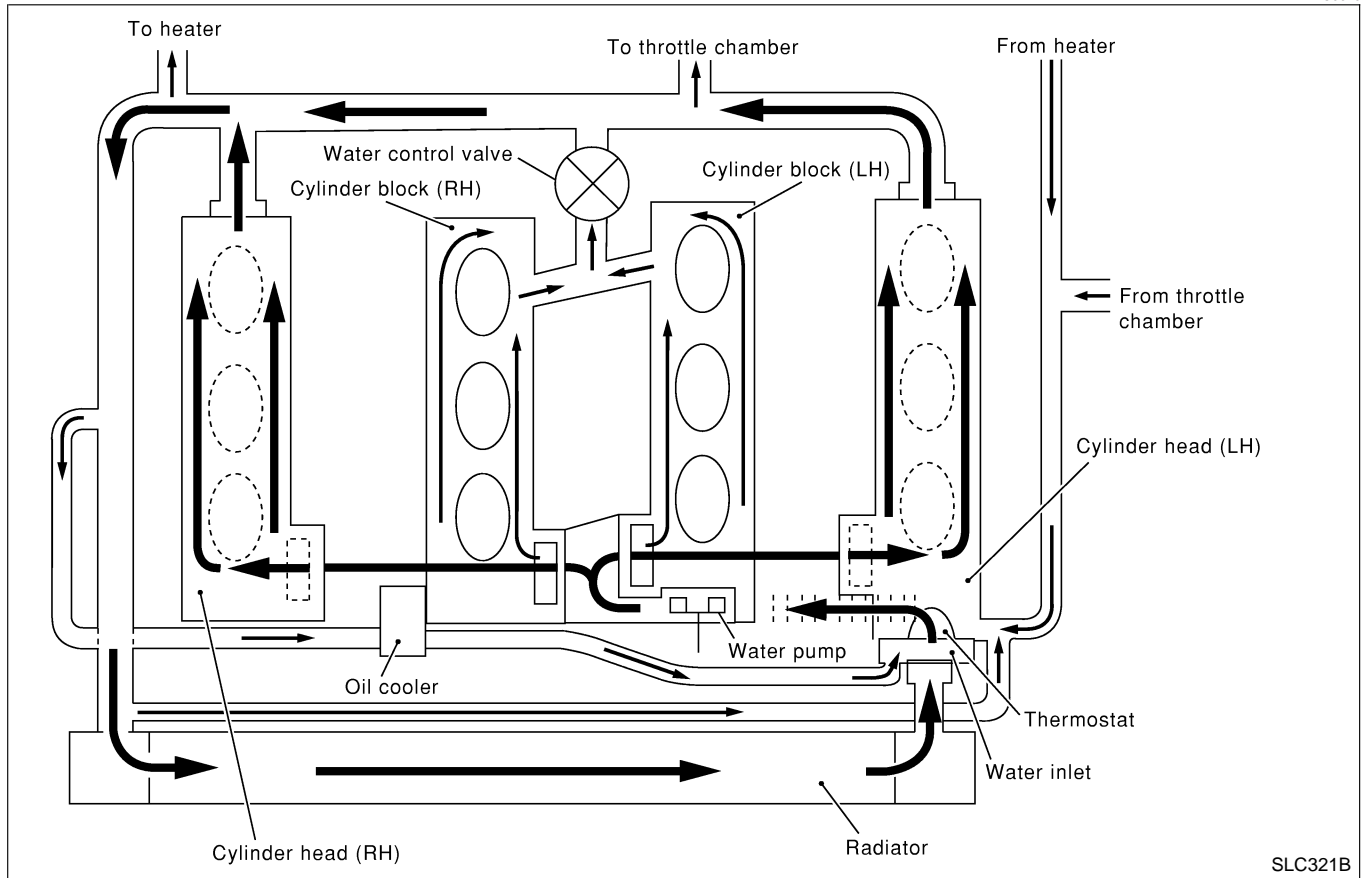

System Check

NBLC0016

WARNING:

Never remove the radiator cap when the engine is hot; serious burns could be caused by high pressure fluid escaping from the radiator.

Wrap a thick cloth around the cap and carefully remove it by turning it a quarter turn to allow built-up pressure to escape and then turn the cap all the way off.

CHECKING COOLING SYSTEM HOSES

NBLC0016S01



Check hoses for improper attachment, leaks, cracks, damage, loose connections, chafing and deterioration.

CHECKING RADIATOR

NBLC0016S02

Check radiator for mud or clogging. If necessary, clean radiator as follows.

- Be careful not to bend or damage the radiator fins.
 - When radiator is cleaned without removal, remove all surrounding parts such as cooling fan, radiator shroud and horns. Then tape the harness and connectors to prevent water from entering.
1. Apply water by hose to the back side of the radiator core vertically downward.
 2. Apply water again to all radiator core surfaces once per minute.
 3. Stop washing if any stains no longer flow out from the radiator.
 4. Blow air into the back side of radiator core vertically downward.
 - Use compressed air lower than 490 kPa (5 kg/cm², 71 psi) and keep distance more than 30 cm (11.8 in).
 5. Blow air again into all the radiator core surfaces once per minute until no water sprays out.

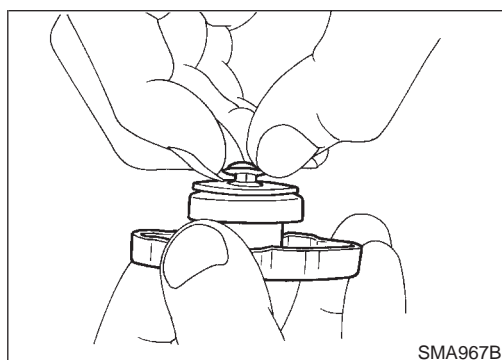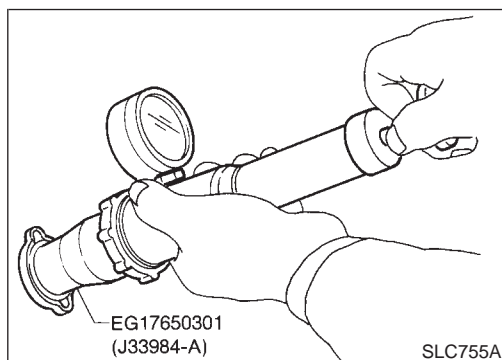**CHECKING RADIATOR CAP**

NBLC0016S03

To check radiator cap, apply pressure to cap with a tester.

Radiator cap relief pressure:**Standard**

78 - 98 kPa
(0.8 - 1.0 kg/cm², 11 - 14 psi)


Limit

59 - 98 kPa
(0.6 - 1.0 kg/cm², 9 - 14 psi)

Pull the negative pressure valve to open it.
Check that it closes completely when released.

ENGINE COOLING SYSTEM

System Check (Cont'd)

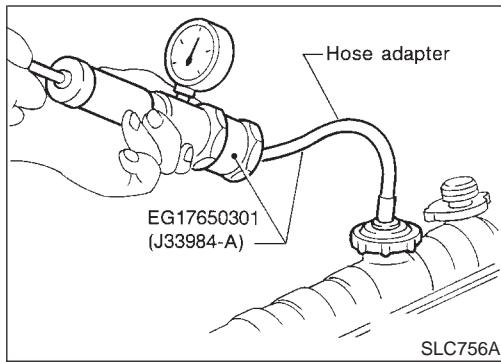

CHECKING COOLING SYSTEM FOR LEAKS

NBLC0016S04

To check for leakage, apply pressure to the cooling system with a tester.

Testing pressure:

157 kPa (1.6 kg/cm², 23 psi)

CAUTION:

Higher than the specified pressure may cause radiator damage.



Water Pump

REMOVAL AND INSTALLATION

NBLC0017

CAUTION:

- When removing water pump assembly, be careful not to get coolant on drive belt.
- Water pump cannot be disassembled and should be replaced as a unit.
- After installing water pump, connect hose and clamp securely, then check for leaks using radiator cap tester.

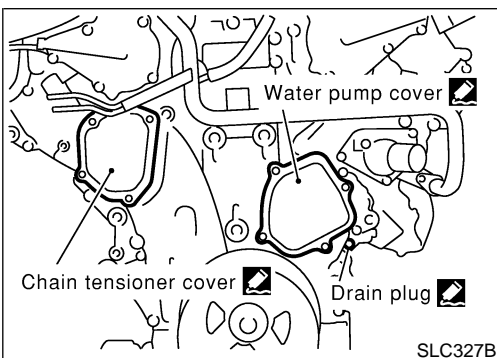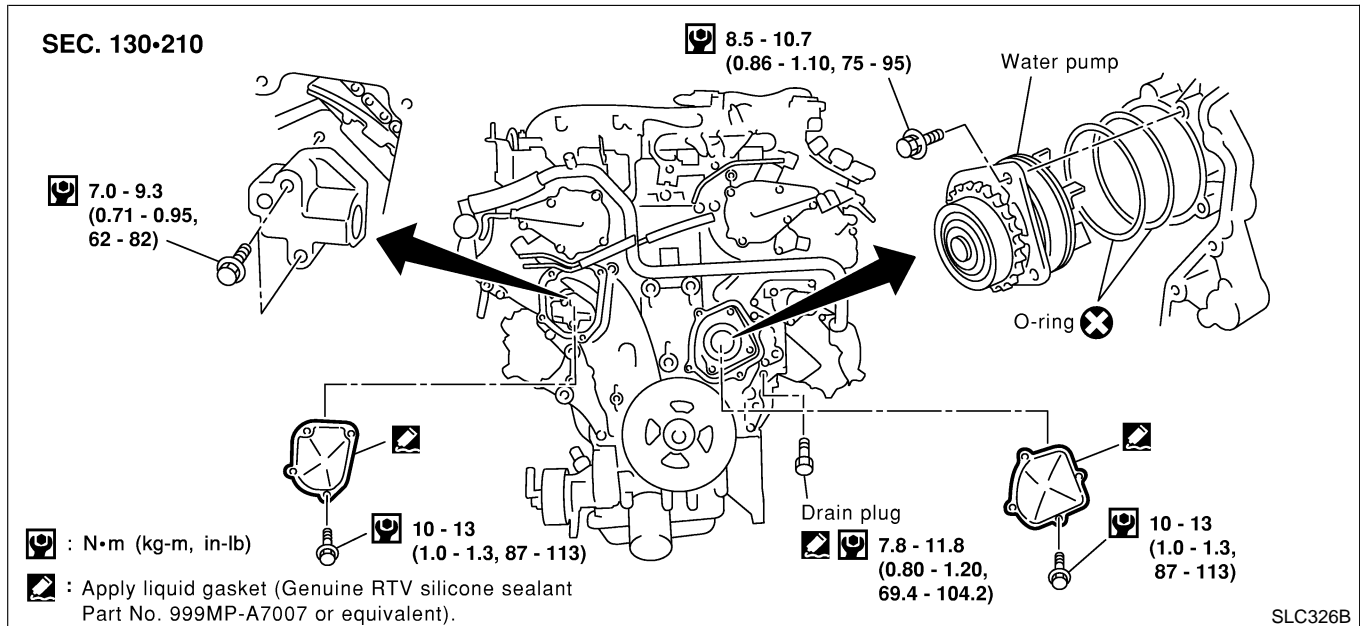


REMOVAL

NBLC0018


1. Remove under cover.
2. Remove suspension member stay.
3. Drain coolant from radiator.
4. Remove radiator shrouds.
5. Remove drive belts.
6. Remove cooling fan.
7. Remove water drain plug on water pump side of cylinder block.
8. Remove chain tensioner cover and water pump cover.

ENGINE COOLING SYSTEM


Water Pump (Cont'd)

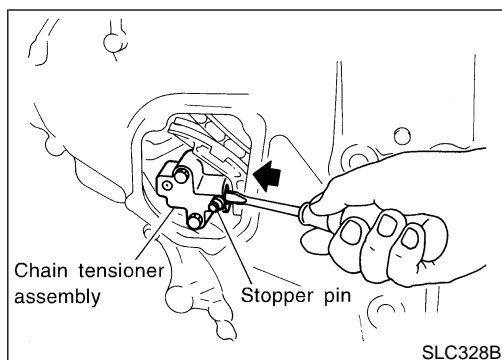

9. Pushing timing chain tensioner sleeve, apply a stopper pin so it does not return. Then remove the chain tensioner assembly.

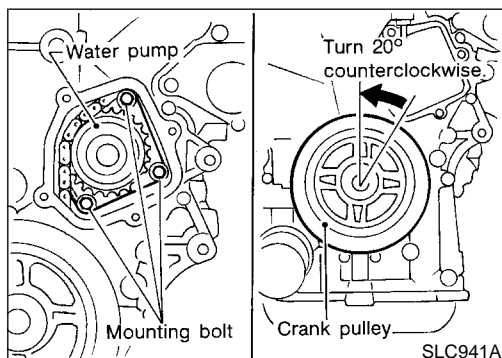

10. Remove the 3 water pump fixing bolts. Secure a gap between water pump gear and timing chain, by turning crankshaft pulley 20° backwards.

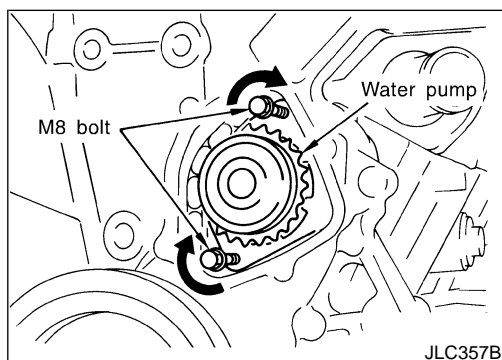

11. Put M8 bolts to two water pump fixing bolt holes.

GI

MA

EM

LC

EC

FE

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA




SC

EL

IDX


ENGINE COOLING SYSTEM

Water Pump (Cont'd)

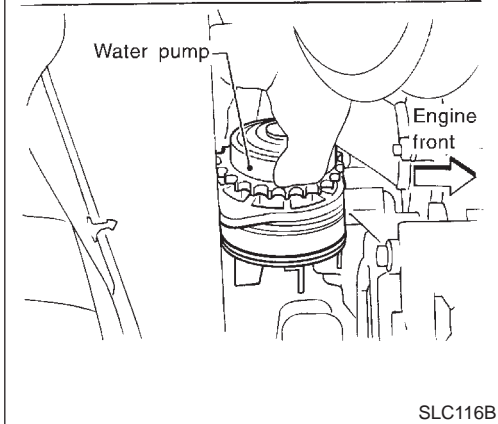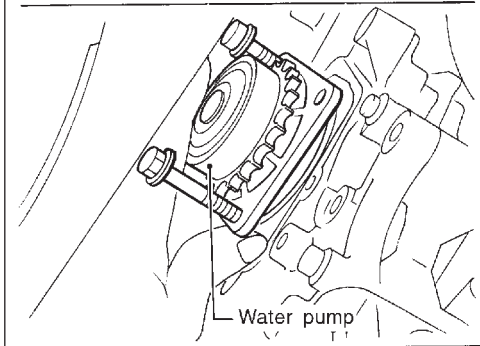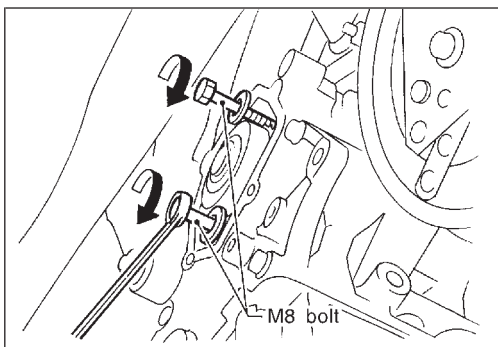

SLC116B

12. Tighten M8 bolts by turning half turn alternately until they reach timing chain rear case.
 - In order to prevent damages to water pump or timing chain rear case, do not tighten one bolt continuously. Always turn each bolt half turn each time.
13. Lift up water pump and remove it.
 - When lifting up water pump, do not allow water pump gear to hit timing chain.

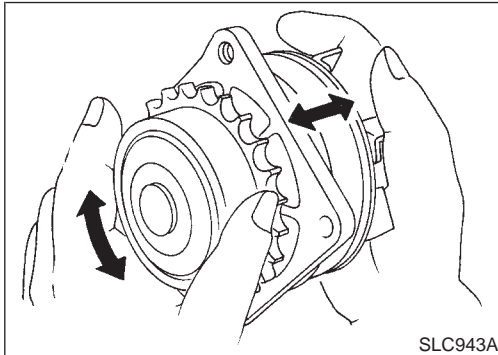


SLC943A

INSPECTION

1. Check for badly rusted or corroded body assembly.
2. Check for rough operation due to excessive end play.

NBLC0019

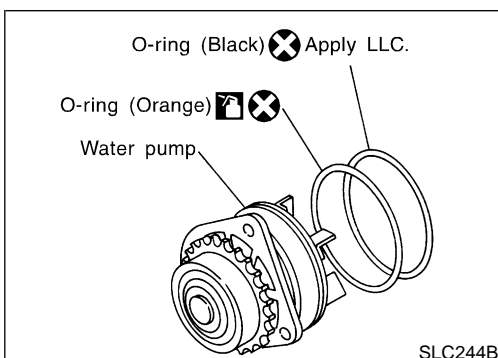


SLC244B


INSTALLATION

1. Apply engine oil and coolant to O-rings as shown in the figure.


NBLC0020

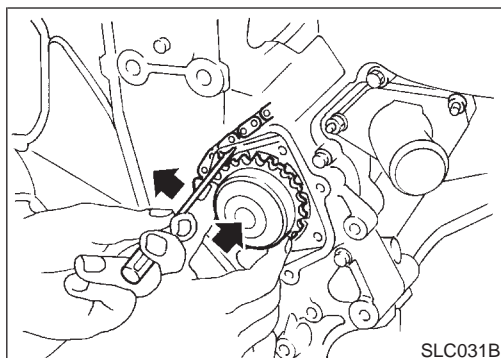


2. Install water pump.
 - **Do not allow cylinder block to nip O-rings when installing water pump.**

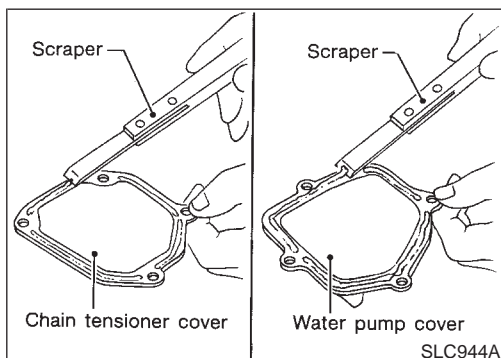


3. Before installing, remove all traces of liquid gasket from mating surface of water pump cover and chain tensioner cover using a scraper. Also remove traces of liquid gasket from mating surface of front cover.

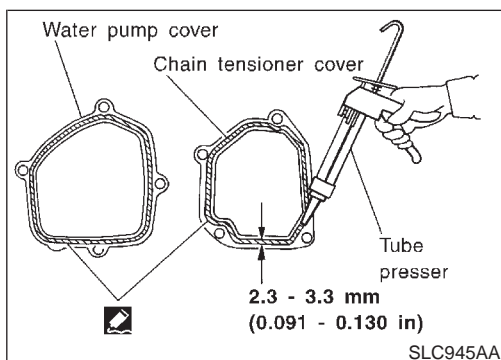

4. Apply a continuous bead of liquid gasket to mating surface of chain tensioner cover and water pump cover.

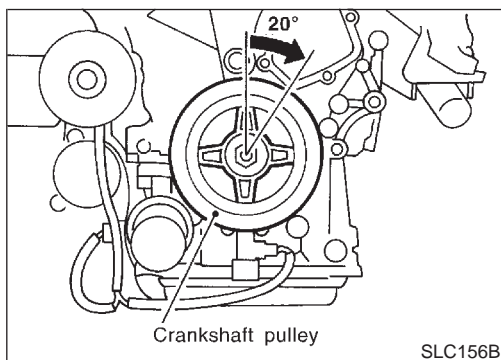

5. Return the crankshaft pulley to its original position by turning it 20° forward.

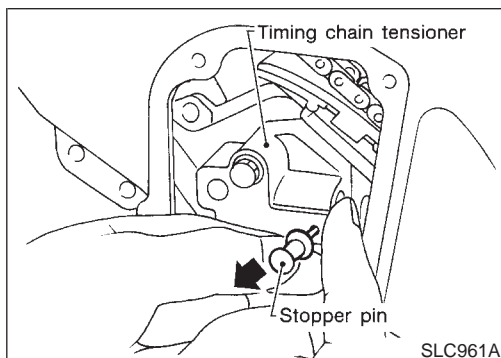





6. Install timing chain tensioner, then remove the stopper pin.
 - **When installing the timing chain tensioner, engine oil should be applied to the oil hole and tensioner.**
 - **After starting engine, let idle for three minutes, then rev engine up to 3,000 rpm under no load to purge air from the high-pressure chamber of the chain tensioners. The engine may produce a rattling noise. This indicates that air still remains in the chamber and is not a matter of concern.**
7. Reinstall any parts removed in reverse order of removal.

ENGINE COOLING SYSTEM

Thermostat

Thermostat REMOVAL AND INSTALLATION

NBLC0021

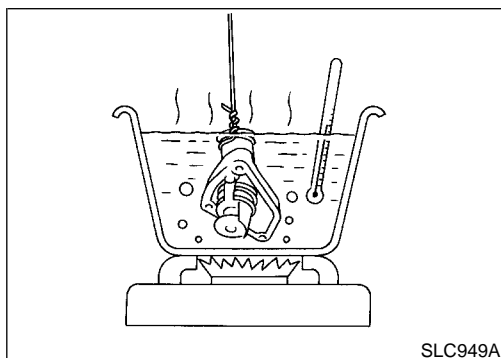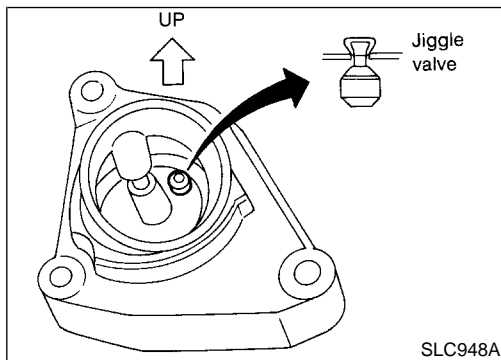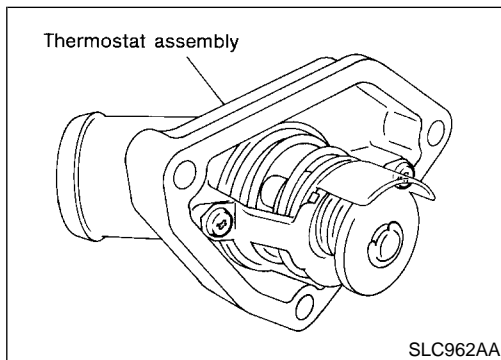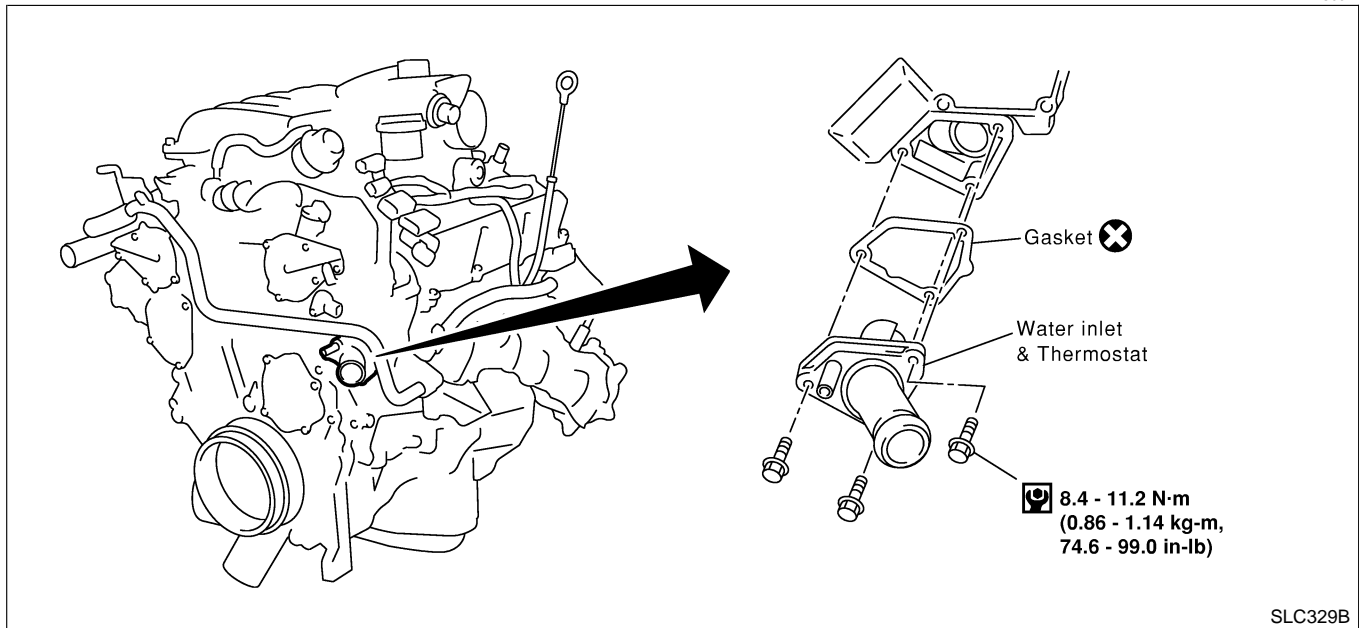

1. Remove under cover.
2. Remove suspension member stay.
3. Drain coolant from radiator.
4. Remove drive belts.
5. Remove water drain plug on water pump side of cylinder block.
6. Disconnect lower radiator hose.
7. Remove water inlet and thermostat assembly.
 - **Do not disassemble water inlet and thermostat. Replace them as a unit, if necessary.**
8. Install thermostat with jiggle valve facing upward.
 - **After installation, run engine for a few minutes, and check for leaks.**
 - **Be careful not to spill coolant over engine compartment. Use a rag to absorb coolant.**
9. Reinstall any removed parts in reverse order of removal.

INSPECTION

NBLC0022


1. Check valve seating condition at ordinary room temperatures. It should seat tightly.
2. Check valve opening temperature and maximum valve lift.

	Standard
Valve opening temperature	76.5°C (170°F)
Valve lift	More than 8.6 mm/90°C (0.339 in/194°F)

3. Then check if valve closes at 5°C (9°F) below valve opening temperature.

Water Control Valve REMOVAL AND INSTALLATION

NBLC0032

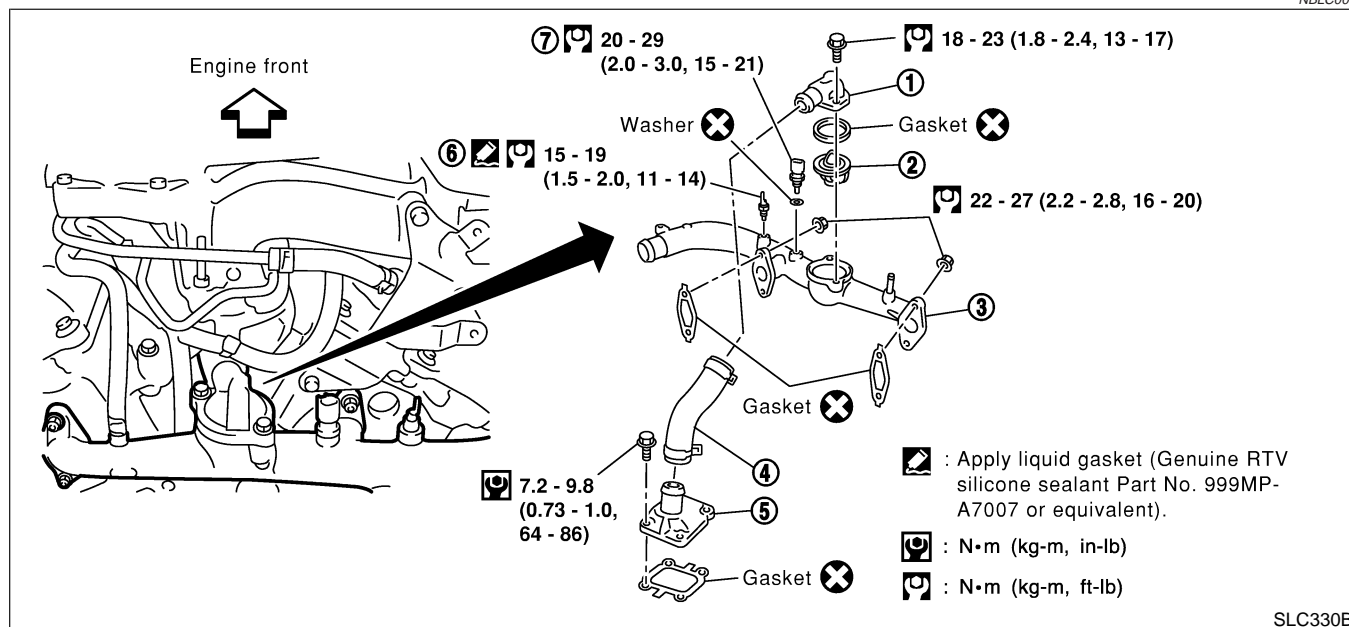


SLC330B

- | | | |
|-------------------------|--------------------------------|--------------------------------------|
| 1. Water outlet housing | 4. Water hose | 7. Engine coolant temperature sensor |
| 2. Water control valve | 5. Cylinder block water outlet | |
| 3. Water outlet | 6. Thermal transmitter | |


1. Release fuel pressure. Refer to EC-40, "Fuel Pressure Release".
2. Remove under cover.
3. Remove suspension member stay.
4. Drain coolant from radiator.
5. Remove engine cover.
6. Remove air duct with air cleaner assembly.
7. Disconnect wires, hoses, harness and so on.
8. Remove upper intake manifold corrector.
9. Remove intake manifold corrector support bolts.
10. Remove lower intake manifold corrector.
11. Disconnect injector harness connectors.
12. Remove injector tube.
13. Remove intake manifold.
14. Remove water outlet housing and water control valve.

ENGINE COOLING SYSTEM

Water Control Valve (Cont'd)

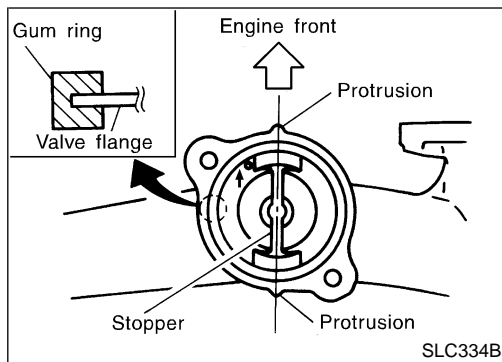

15. Install water control valve and water outlet housing.
 - a. Install gum ring to thermostat.
 - b. Point the arrow on the upper surface of the valve to the front of the engine, and also be sure to install the protrusions and the valve stopper so that they are aligned in a straight line.
16. Reinstall any removed parts in reverse order of removal.
 - When installing intake manifold, injector tube and intake manifold collectors, refer to EM-12, "TIGHTENING PROCEDURES".
 - After installation, run engine for a few minutes, and check for leaks.
 - Be careful not to spill coolant over engine compartment. Use a rag to absorb coolant.

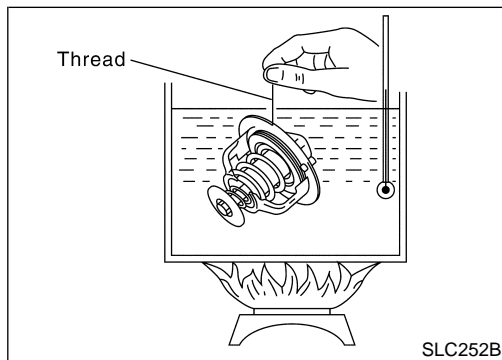

INSPECTION

NBLC0033

1. Check valve seating condition at ordinary room temperatures. It should seat tightly.
2. Check valve opening temperature and maximum valve lift.

	Standard
Valve opening temperature	95°C (203°F)
Valve lift	More than 8.0 mm/108°C (0.315 in/226°F)

3. Then check if valve closes at 5°C (9°F) below valve opening temperature.

Radiator


REMOVAL AND INSTALLATION

=NBLC0023

1. Remove under cover.
2. Remove suspension member stay.
3. Drain coolant from radiator.
4. Disconnect radiator upper and lower hoses.
5. Remove upper and lower radiator shroud.
6. Remove A/T oil cooler hoses.
7. Disconnect reservoir tank hose.
8. Remove radiator mounting bracket.
9. Remove radiator.
10. After repairing or replacing radiator, install any part removed in reverse order of removal.

When filling radiator with coolant, refer to MA-14, "Changing Engine Coolant".

SEC. 214

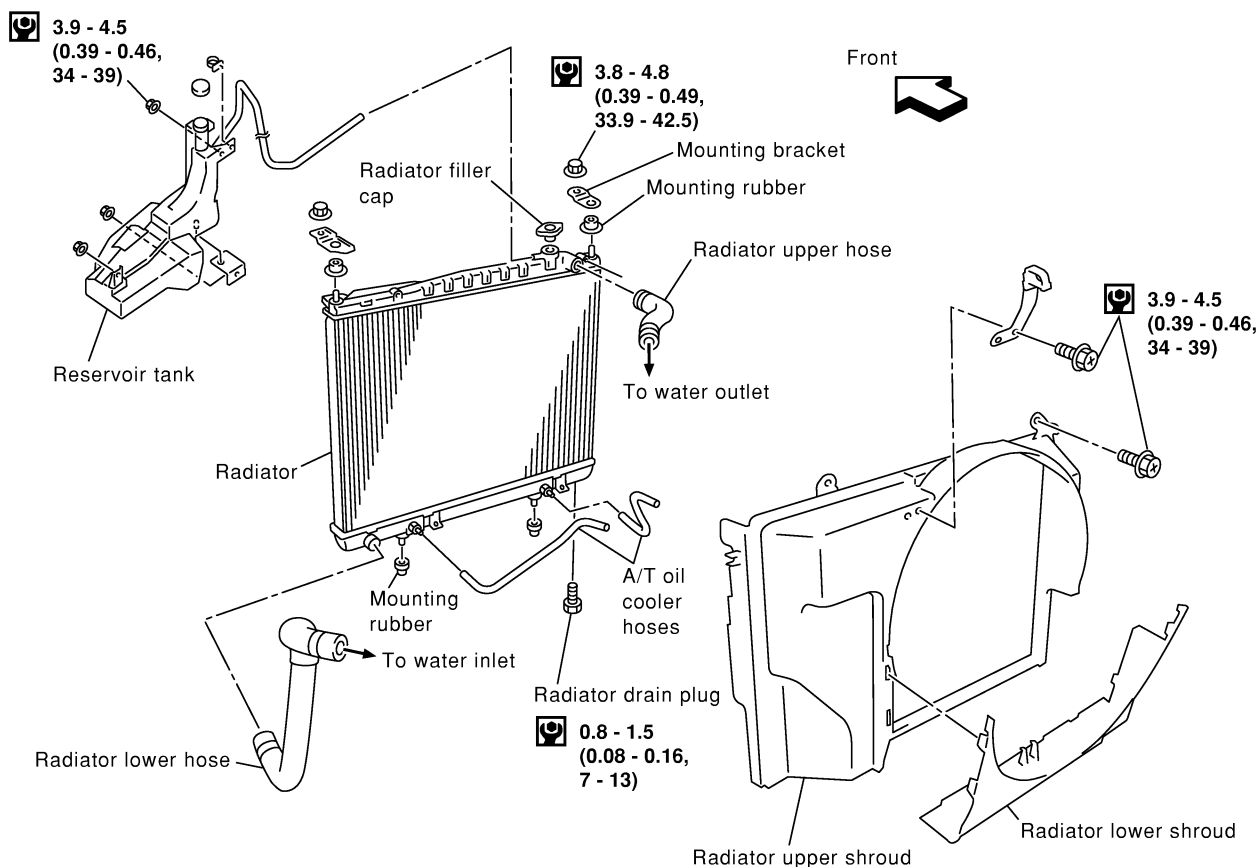


: N•m (kg-m, in-lb)

SLC331B

ENGINE COOLING SYSTEM

Cooling Fan (Crankshaft driven)

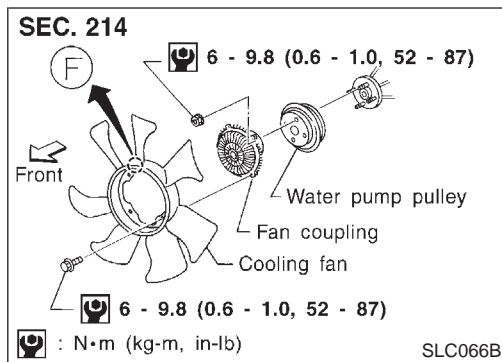


Cooling Fan (Crankshaft driven)

REMOVAL AND INSTALLATION

- Do not release the drive belt tension by removing the fan/water pump pulley.
- Fan coupling cannot be disassembled and should be replaced as a unit. If front mark **F** is present, install fan so that side marked **F** faces the front.
- Install the drive belt only after the fan and fan coupling to water pump flange bolts/nuts have been properly torqued.
- Proper alignment of these components is essential. Improper alignment will cause them to wobble and may eventually cause the fan to separate from the water pump causing extensive damage.


NBLC0038

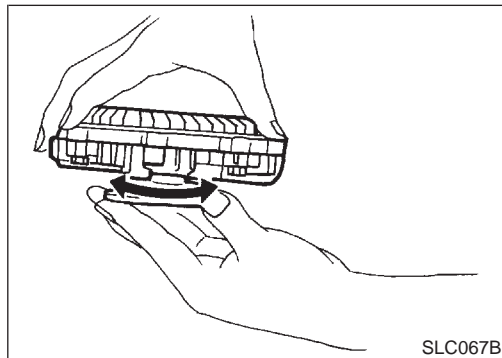

INSPECTION

Check fan coupling for rough operation, wobbling, oil leakage or bent bimetal.

NBLC0039

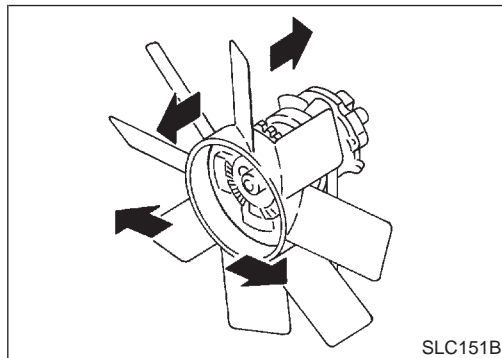

After assembly, verify the fan does not wobble or flap while the engine is running.

WARNING:

- When the engine is running, keep hands and clothing away from moving parts such as drive belts and fan.



Refilling Engine Coolant

For details on refilling engine coolant, refer to MA-15, "REFILLING ENGINE COOLANT".


NBLC0034

Radiator (Aluminum type) PREPARATION

NBLC0025

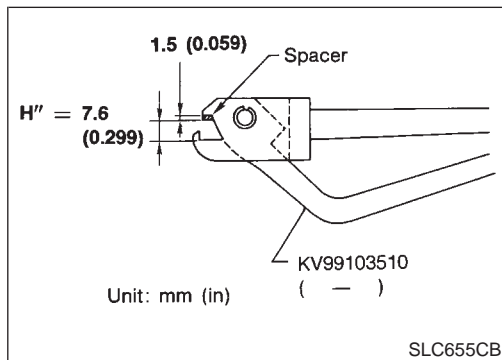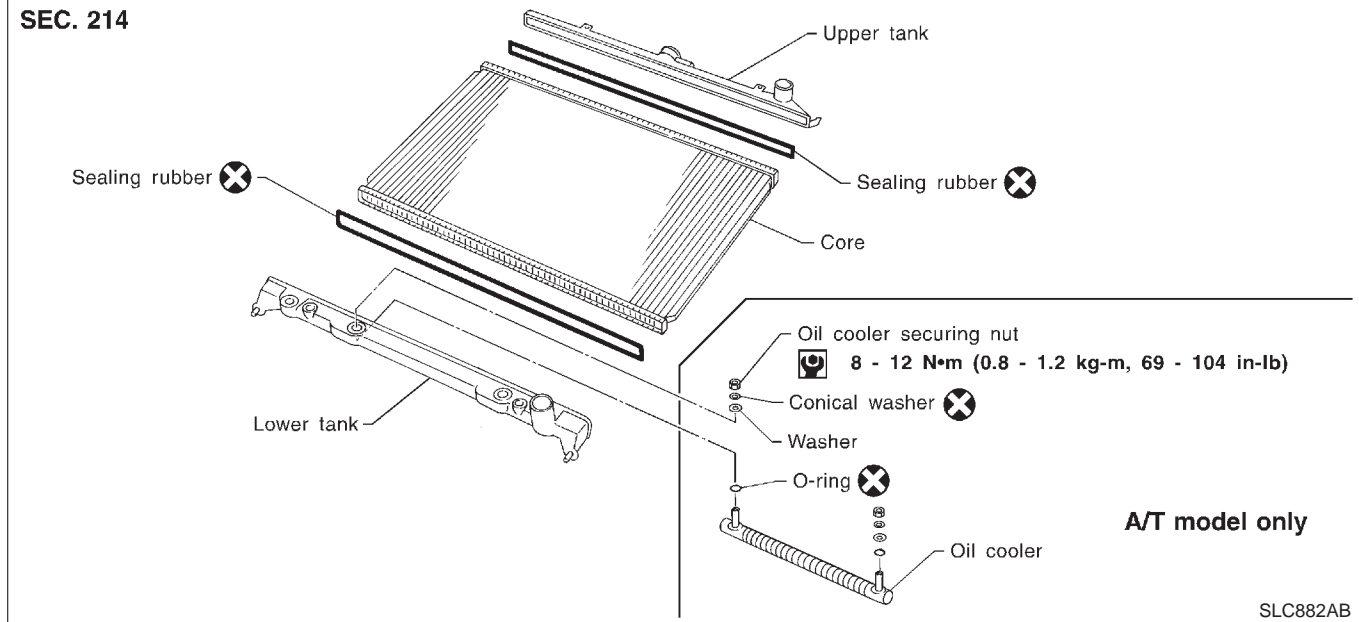


1. Attach the spacer to the tip of the radiator plate pliers A. Spacer specification: 1.5 mm (0.059 in) thick x 18 mm (0.71 in) wide x 8.5 mm (0.335 in) long.
2. Make sure that when radiator plate pliers A are closed dimension H'' is approx. 7.6 mm (0.299 in).
3. Adjust dimension H'' with the spacer, if necessary.

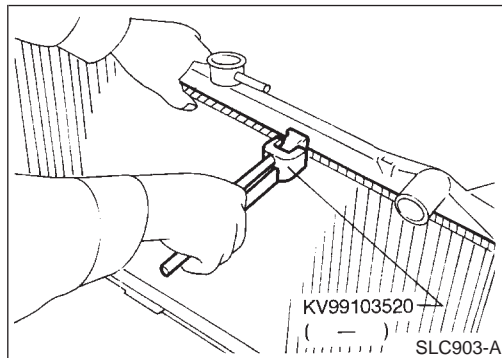

DISASSEMBLY

NBLC0026

1. Remove tank with Tool.

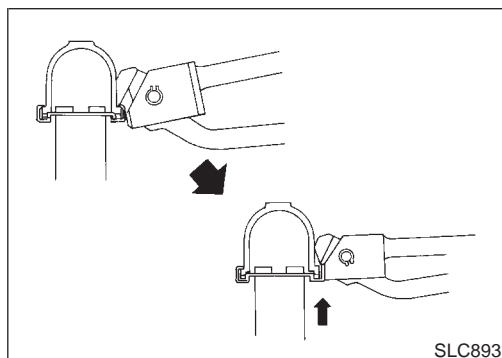


- Grip the crimped edge and bend it upwards so that Tool slips off.

Do not bend excessively.


ENGINE COOLING SYSTEM

Radiator (Aluminum type) (Cont'd)

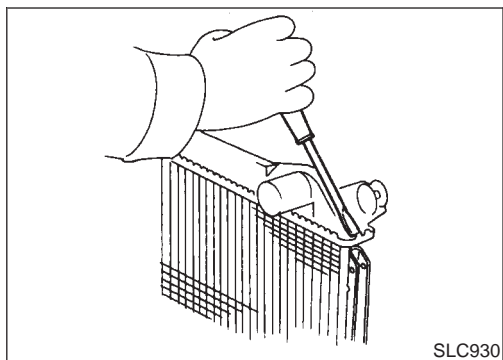


- In areas where Tool cannot be used, use a screwdriver to bend the edge up.

Be careful not to damage tank.

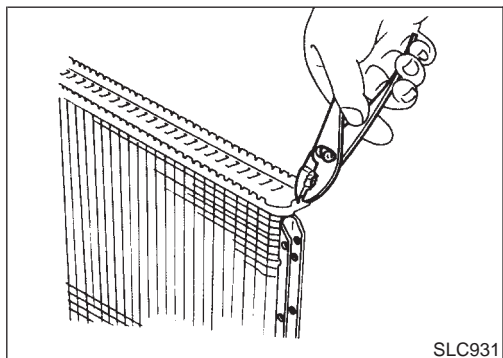

2. Make sure the edge stands straight up.
3. Remove oil cooler from tank.

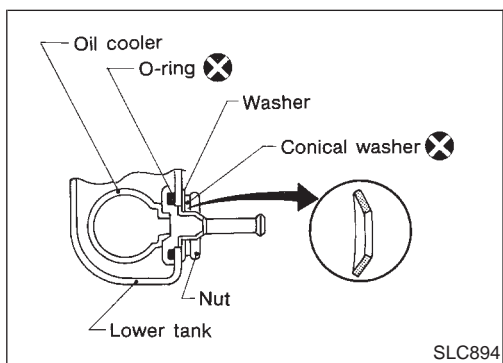


ASSEMBLY


NBLC0027

1. Install oil cooler.

Pay attention to direction of conical washer.

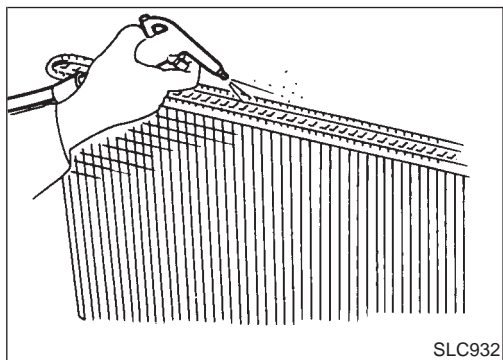


2. Clean contact portion of tank.

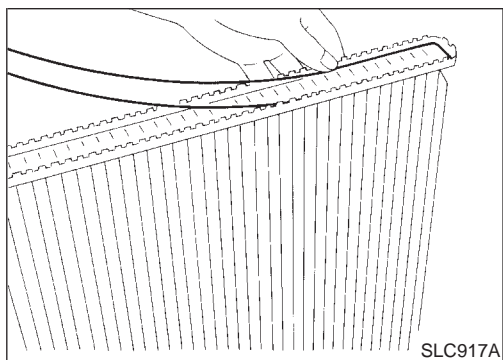



3. Install sealing rubber.
Push it in with fingers.
Be careful not to twist sealing rubber.

ENGINE COOLING SYSTEM


Radiator (Aluminum type) (Cont'd)

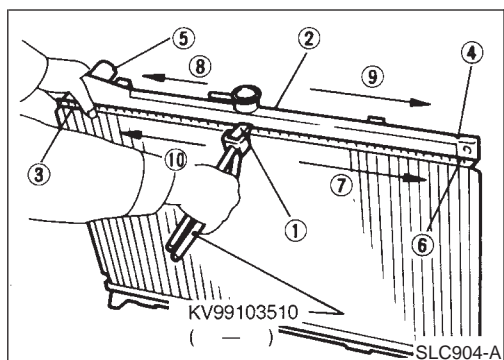

4. Caulk tank in specified sequence with Tool.

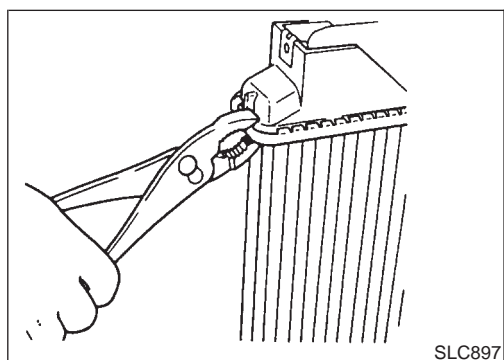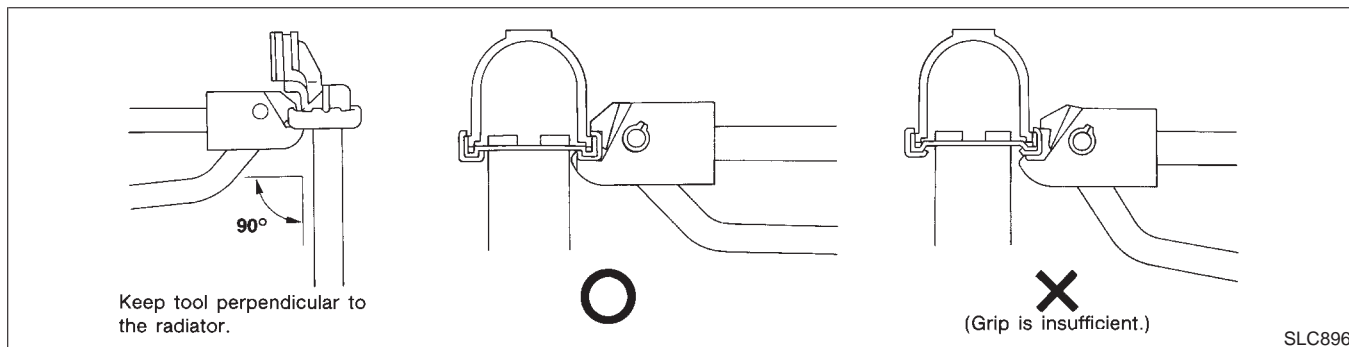

- Use pliers in the locations where Tool cannot be used.

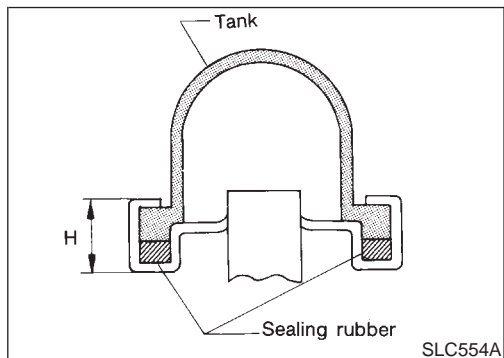


5. Make sure that the rim is completely crimped down.

Standard height "H":

8.0 - 8.4 mm (0.315 - 0.331 in)

6. Confirm that there is no leakage.

Refer to Inspection.

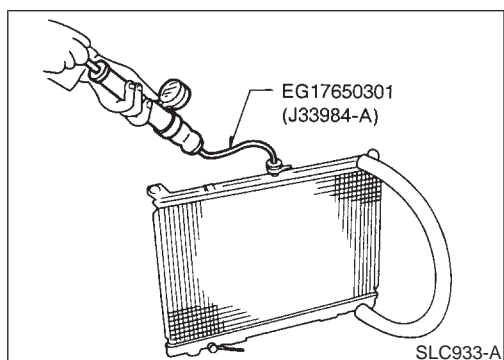

INSPECTION

Apply pressure with Tool.

Specified pressure value:

157 kPa (1.6 kg/cm², 23 psi)

WARNING:

To prevent the risk of the hose coming undone while under pressure, securely fasten it down with a hose clamp. Attach a hose to the oil cooler as well.

ENGINE COOLING SYSTEM

Overheating Cause Analysis

Overheating Cause Analysis

NBLC0029

	Symptom		Check items	
Cooling system parts malfunction	Poor heat transfer	Water pump malfunction	Worn or loose drive belt	—
		Thermostat stuck closed	—	
		Damaged fins	Dust contamination or paper clogging	
			Mechanical damage	
		Clogged radiator cooling tube	Excess foreign material (rust, dirt, sand, etc.)	
	Reduced air flow	Cooling fan does not operate	—	—
		High resistance to fan rotation		
		Damaged fan blades		
	Damaged radiator shroud	—	—	—
	Improper coolant mixture ratio	—	—	—
	Poor coolant quality	—	—	—
	Insufficient coolant	Coolant leaks	Cooling hose	Loose clamp
				Cracked hose
			Water pump	Poor sealing
			Radiator cap	Loose
				Poor sealing
			Radiator	O-ring for damage, deterioration or improper fitting
				Cracked radiator tank
				Cracked radiator core
			Reservoir tank	Cracked reservoir tank
		Overflowing reservoir tank	Exhaust gas leaks into cooling system	Cylinder head deterioration
				Cylinder head gasket deterioration

ENGINE COOLING SYSTEM

Overheating Cause Analysis (Cont'd)

	Symptom		Check items		
Except cooling system parts malfunction	—	Overload on engine	Abusive driving	High engine rpm under no load	GI
				Driving in low gear for extended time	MA
				Driving at extremely high speed	EM
			Powertrain system malfunction	—	LC
			Installed improper size wheels and tires		EC
			Dragging brakes		FE
			Improper ignition timing		FE
	Blocked or restricted air flow	Blocked bumper	—	—	
		Blocked radiator grille	Installed car brassiere		AT
			Mud contamination or paper clogging		TF
		Blocked radiator	—		TF
		Blocked condenser	—		PD
		Installed large fog lamp			

Service Data and Specifications (SDS)

THERMOSTAT

NBLC0030

Valve opening temperature	76.5°C (170°F)	RS
Valve lift	More than 8.6 mm/90°C (0.339 in/194°F)	BT

WATER CONTROL VALVE

NBLC0035

Valve opening temperature	95°C (203°F)	HA
Valve lift	More than 8.0 mm/108°C (0.315 in/226°F)	SC

RADIATOR

NBLC0031

Unit: kPa (kg/cm², psi)

Cap relief pressure	Standard	78 - 98 (0.8 - 1.0, 11 - 14)	EL
	Limit	59 - 98 (0.6 - 1.0, 9 - 14)	IDX
Leakage test pressure		157 (1.6, 23)	

NOTES