

# SECTION PCS

## POWER CONTROL SYSTEM

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

### CONTENTS

<p><b>IPDM E/R</b></p> <p><b>SYSTEM DESCRIPTION</b> ..... 3</p> <p><b>RELAY CONTROL SYSTEM</b> ..... 3</p> <p>    System Diagram ..... 3</p> <p>    System Description ..... 3</p> <p>    Component Parts Location ..... 4</p> <p><b>POWER CONTROL SYSTEM</b> ..... 5</p> <p>    System Diagram ..... 5</p> <p>    System Description ..... 5</p> <p><b>SIGNAL BUFFER SYSTEM</b> ..... 6</p> <p>    System Diagram ..... 6</p> <p>    System Description ..... 6</p> <p><b>POWER CONSUMPTION CONTROL SYSTEM</b> ..... 7</p> <p>    System Diagram ..... 7</p> <p>    System Description ..... 7</p> <p>    Component Parts Location ..... 8</p> <p><b>DIAGNOSIS SYSTEM (IPDM E/R)</b> ..... 9</p> <p>    Diagnosis Description ..... 9</p> <p>    CONSULT Function (IPDM E/R) ..... 11</p> <p><b>DTC/CIRCUIT DIAGNOSIS</b> ..... 14</p> <p><b>U1000 CAN COMM CIRCUIT</b> ..... 14</p> <p>    Description ..... 14</p> <p>    DTC Logic ..... 14</p> <p>    Diagnosis Procedure ..... 14</p> <p><b>B2098 IGNITION RELAY ON STUCK</b> ..... 15</p> <p>    Description ..... 15</p> <p>    DTC Logic ..... 15</p> <p>    Diagnosis Procedure ..... 15</p> <p><b>B2099 IGNITION RELAY OFF STUCK</b> ..... 17</p> <p>    Description ..... 17</p> <p>    DTC Logic ..... 17</p>	<p>    Diagnosis Procedure ..... 17</p> <p><b>POWER SUPPLY AND GROUND CIRCUIT</b> .... 19</p> <p>    Diagnosis Procedure ..... 19</p> <p><b>ECU DIAGNOSIS INFORMATION</b> ..... 20</p> <p><b>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</b> ..... 20</p> <p>    Reference Value ..... 20</p> <p>    Wiring Diagram - IPDM E/R - ..... 27</p> <p>    Fail-safe ..... 30</p> <p>    DTC Index ..... 32</p> <p><b>PRECAUTION</b> ..... 33</p> <p><b>PRECAUTIONS</b> ..... 33</p> <p>    Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" ..... 33</p> <p>    Precautions for Removing Battery Terminal ..... 33</p> <p>    Precaution for Procedure without Cowl Top Cover... 34</p> <p><b>REMOVAL AND INSTALLATION</b> ..... 35</p> <p><b>IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)</b> ..... 35</p> <p>    Exploded View ..... 35</p> <p>    Removal and Installation ..... 35</p> <p style="text-align: center;"><b>POWER DISTRIBUTION SYSTEM</b></p> <p><b>BASIC INSPECTION</b> ..... 37</p> <p><b>DIAGNOSIS AND REPAIR WORK FLOW</b> ..... 37</p> <p>    Work Flow ..... 37</p> <p><b>PROCEDURE FOR TEMPORARILY DISABLING THE IGNITION BATTERY SAVER SYSTEM</b> ..... 40</p> <p>    Description ..... 40</p> <p>    Work Procedure ..... 40</p>	<p>F G H I J K L N O P</p>
--	--	--



<b>SYSTEM DESCRIPTION</b> .....	<b>41</b>	<b>B261A PUSH-BUTTON IGNITION SWITCH</b> ....	<b>66</b>
<b>POWER DISTRIBUTION SYSTEM</b> .....	<b>41</b>	Description .....	66
System Description .....	41	DTC Logic .....	66
Component Parts Location .....	42	Diagnosis Procedure .....	66
Component Description .....	43	<b>POWER SUPPLY AND GROUND CIRCUIT</b> ....	<b>68</b>
<b>DIAGNOSIS SYSTEM (BCM)</b> .....	<b>44</b>	<b>BCM</b> .....	<b>68</b>
<b>COMMON ITEM</b> .....	<b>44</b>	BCM : Diagnosis Procedure .....	68
COMMON ITEM : CONSULT Function (BCM -		<b>PUSH-BUTTON IGNITION SWITCH</b> .....	<b>69</b>
COMMON ITEM) .....	44	Description .....	69
<b>INTELLIGENT KEY</b> .....	<b>45</b>	Component Function Check .....	69
INTELLIGENT KEY : CONSULT Function (BCM -		Diagnosis Procedure .....	69
INTELLIGENT KEY) .....	45	Component Inspection .....	70
<b>DTC/CIRCUIT DIAGNOSIS</b> .....	<b>50</b>	<b>PUSH-BUTTON IGNITION SWITCH POSI-</b>	
<b>U1000 CAN COMM</b> .....	<b>50</b>	<b>TION INDICATOR</b> .....	<b>71</b>
Description .....	50	Description .....	71
DTC Logic .....	50	Component Function Check .....	71
Diagnosis Procedure .....	50	Diagnosis Procedure .....	71
<b>U1010 CONTROL UNIT (CAN)</b> .....	<b>51</b>	<b>POWER DISTRIBUTION SYSTEM</b> .....	<b>73</b>
DTC Logic .....	51	Wiring Diagram - PDS (POWER DISTRIBUTION	
Diagnosis Procedure .....	51	SYSTEM) - .....	73
<b>B2553 IGNITION RELAY</b> .....	<b>52</b>	<b>ECU DIAGNOSIS INFORMATION</b> .....	<b>82</b>
Description .....	52	<b>BCM (BODY CONTROL MODULE)</b> .....	<b>82</b>
DTC Logic .....	52	Reference Value .....	82
Diagnosis Procedure .....	52	Wiring Diagram - BCM - .....	106
<b>B260A IGNITION RELAY</b> .....	<b>54</b>	Fail-safe .....	120
Description .....	54	DTC Inspection Priority Chart .....	121
DTC Logic .....	54	DTC Index .....	122
Diagnosis Procedure .....	54	<b>PRECAUTION</b> .....	<b>125</b>
<b>B2614 ACC RELAY</b> .....	<b>56</b>	<b>PRECAUTIONS</b> .....	<b>125</b>
Description .....	56	Precaution for Supplemental Restraint System	
DTC Logic .....	56	(SRS) "AIR BAG" and "SEAT BELT PRE-TEN-	
Diagnosis Procedure .....	56	SIONER" .....	125
Component Inspection .....	57	Precautions for Removing Battery Terminal .....	125
<b>B2615 BLOWER RELAY CIRCUIT</b> .....	<b>59</b>	Precaution for Procedure without Cowl Top Cover. ....	126
Description .....	59	<b>SYMPTOM DIAGNOSIS</b> .....	<b>127</b>
DTC Logic .....	59	<b>PUSH-BUTTON IGNITION SWITCH DOES</b>	
Diagnosis Procedure .....	59	<b>NOT OPERATE</b> .....	<b>127</b>
Component Inspection .....	60	Description .....	127
<b>B2616 IGNITION RELAY CIRCUIT</b> .....	<b>62</b>	Diagnosis Procedure .....	127
Description .....	62	<b>PUSH-BUTTON IGNITION SWITCH POSI-</b>	
DTC Logic .....	62	<b>TION INDICATOR DOES NOT ILLUMINATE</b> ..	<b>128</b>
Diagnosis Procedure .....	62	Description .....	128
Component Inspection .....	63	Diagnosis Procedure .....	128
<b>B2618 BCM</b> .....	<b>65</b>	<b>REMOVAL AND INSTALLATION</b> .....	<b>129</b>
Description .....	65	<b>PUSH-BUTTON IGNITION SWITCH</b> .....	<b>129</b>
DTC Logic .....	65	Removal and Installation .....	129
Diagnosis Procedure .....	65		

# RELAY CONTROL SYSTEM

< SYSTEM DESCRIPTION >


[IPDM E/R]

## SYSTEM DESCRIPTION

### RELAY CONTROL SYSTEM

#### System Diagram

INFOID:000000012173380

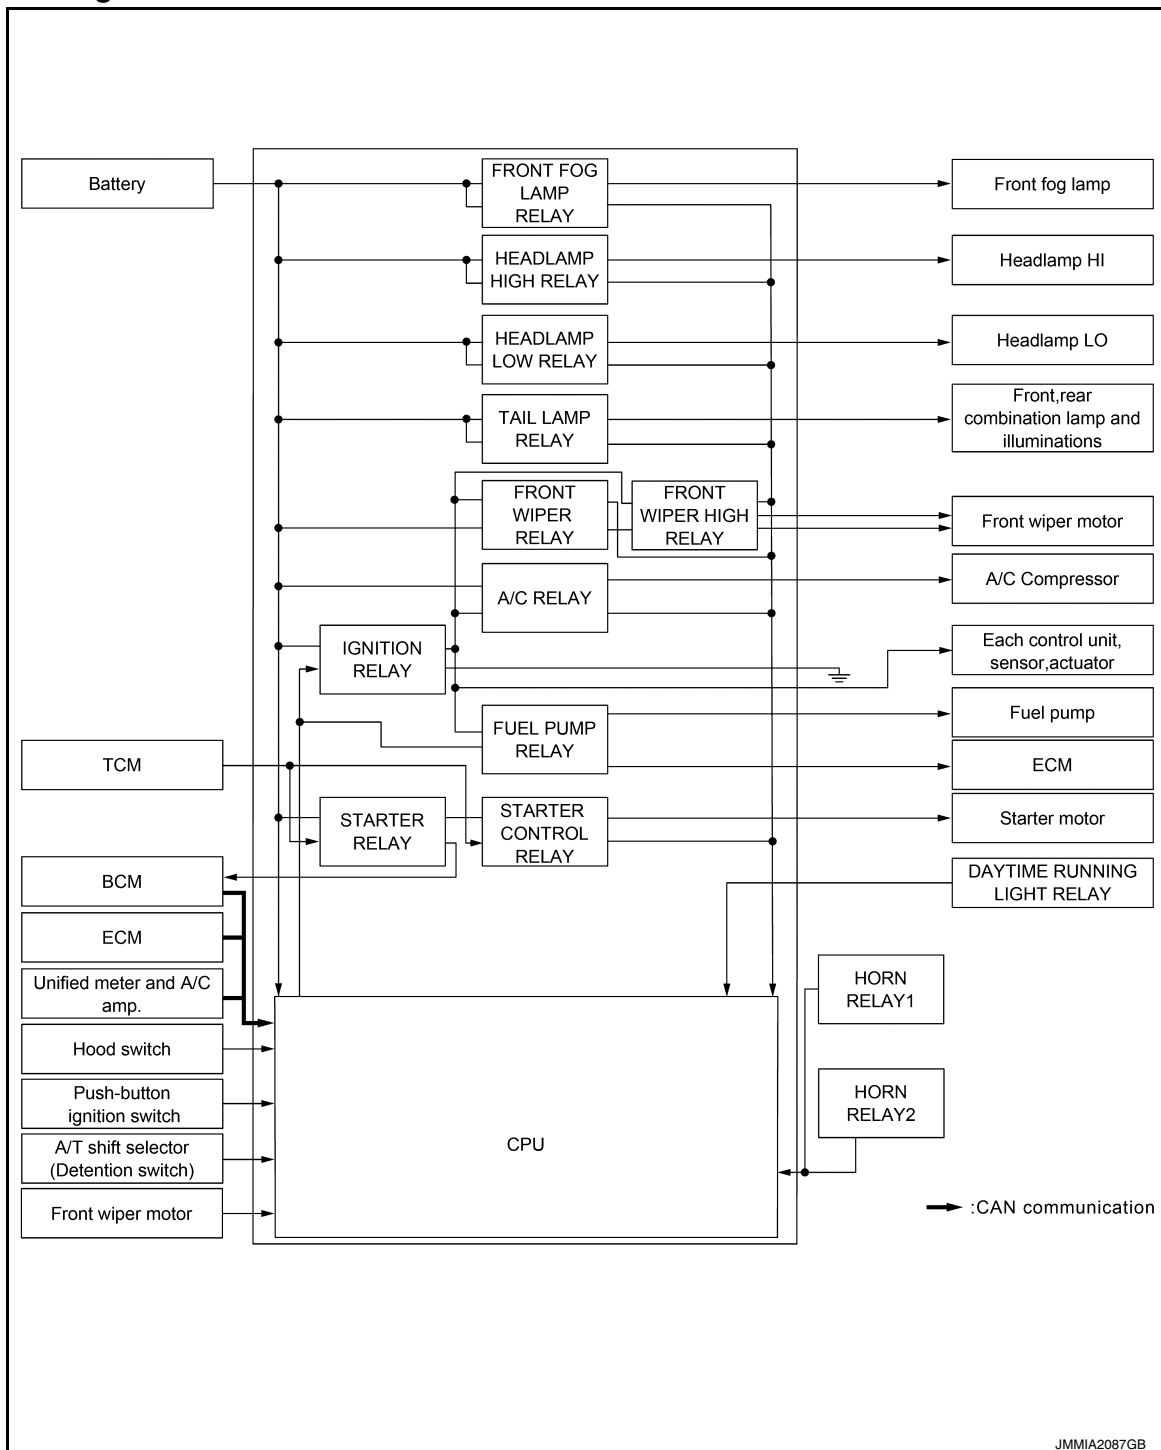

JMMA2087GB

#### System Description

INFOID:000000012173381

IPDM E/R activates the internal control circuit to perform the relay ON-OFF control according to the input signals from various sensors and the request signals received from control units via CAN communication.

**CAUTION:**

**IPDM E/R integrated relays cannot be removed.**

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# RELAY CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]


Control relay	Input/output	Transmit unit	Control part	Reference
<ul style="list-style-type: none"> <li>Headlamp low relay</li> <li>Headlamp high relay</li> </ul>	<ul style="list-style-type: none"> <li>Low beam request signal</li> <li>High beam request signal</li> </ul>	BCM (CAN)	<ul style="list-style-type: none"> <li>Headlamp low</li> <li>Headlamp high</li> </ul>	<ul style="list-style-type: none"> <li><a href="#">EXL-12</a> (Xenon headlamp)</li> <li><a href="#">EXL-255</a> (Halogen headlamp)</li> </ul>
Front fog lamp relay	Front fog light request signal	BCM (CAN)	Front fog lamp	<ul style="list-style-type: none"> <li><a href="#">EXL-25</a> (Xenon headlamp)</li> <li><a href="#">EXL-255</a> (Halogen headlamp)</li> </ul>
Tail lamp relay	Position light request signal	BCM (CAN)	<ul style="list-style-type: none"> <li>Parking lamp</li> <li>Side marker lamp</li> <li>License plate lamp</li> <li>Tail lamp</li> </ul>	<ul style="list-style-type: none"> <li><a href="#">EXL-29</a> (Xenon headlamp)</li> <li><a href="#">EXL-268</a> (Halogen headlamp)</li> </ul>
			Illuminations	<a href="#">INL-13</a>
<ul style="list-style-type: none"> <li>Front wiper relay</li> <li>Front wiper high relay</li> </ul>	Front wiper request signal	BCM (CAN)	Front wiper	<a href="#">WW-6</a>
	Front wiper stop position signal	Front wiper motor		
<ul style="list-style-type: none"> <li>Horn relay 1</li> <li>Horn relay 2</li> </ul>	<ul style="list-style-type: none"> <li>Theft warning horn request signal</li> <li>Horn reminder signal</li> </ul>	BCM (CAN)	<ul style="list-style-type: none"> <li>Horn (low)</li> <li>Horn (high)</li> </ul>	<a href="#">SEC-18</a>
<ul style="list-style-type: none"> <li>Starter relay<sup>NOTE</sup></li> <li>Starter control relay</li> </ul>	Starter control relay signal	BCM (CAN)	Starter motor	<a href="#">SEC-80</a> , <a href="#">SEC-77</a>
	Starter relay control signal	TCM		
A/C relay	A/C compressor request signal	ECM (CAN)	A/C compressor (magnet clutch)	<a href="#">HAC-42</a>
Daytime running light relay	Daytime running light request signal	BCM (CAN)	Daytime running light	<ul style="list-style-type: none"> <li><a href="#">EXL-18</a> (Xenon headlamp)</li> <li><a href="#">EXL-261</a> (Halogen headlamp)</li> </ul>
Ignition relay	Ignition switch ON signal	BCM (CAN)	Ignition relay	<a href="#">PCS-15</a>
	Vehicle speed signal	Unified meter and A/C amp. (CAN)		
	Push-button ignition switch signal	Push-button ignition switch		

**NOTE:**

BCM controls the starter relay.

## Component Parts Location

INFOID:000000012173382

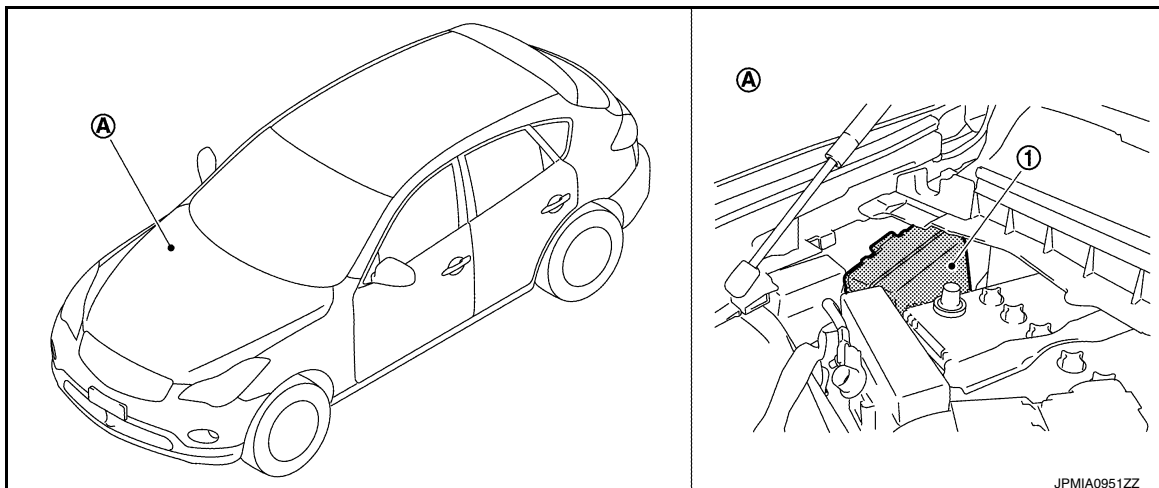


1. IPDM E/R

A. Engine room dash panel (RH)

## POWER CONTROL SYSTEM

### System Diagram

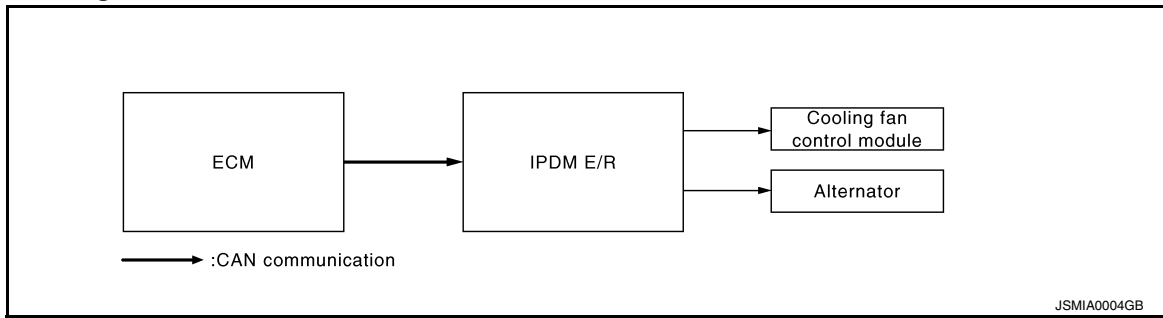

INFOID:000000012173383

JSMIA0004GB

### System Description

INFOID:000000012173384

#### COOLING FAN CONTROL

IPDM E/R outputs pulse duty signal (PWM signal) to the cooling fan control module according to the status of the cooling fan speed request signal received from ECM via CAN communication. Refer to [EC-88, "System Diagram"](#).

#### ALTERNATOR CONTROL

IPDM E/R outputs power generation command signal (PWM signal) to the alternator according to the status of the power generation command value signal received from ECM via CAN communication. Refer to [CHG-12, "System Diagram"](#).


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

## SIGNAL BUFFER SYSTEM

### System Diagram

INFOID:000000012173385

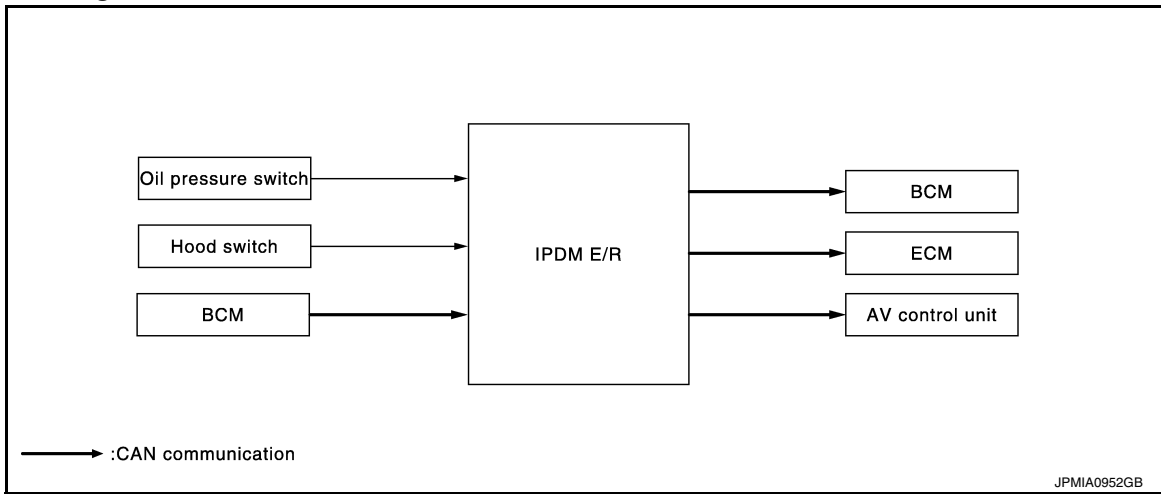


### System Description

INFOID:000000012173386

- IPDM E/R reads the status of the oil pressure switch and transmits the oil pressure switch signal to BCM via CAN communication. Refer to [MWI-25, "WARNING LAMPS/INDICATOR LAMPS : System Diagram"](#).
- IPDM E/R reads the status of the hood switch and transmits the hood switch signal to BCM via CAN communication. Refer to [SEC-90, "Description"](#).
- IPDM E/R receives the rear window defogger control signal from BCM via CAN communication and transmits it to ECM and AV control unit via CAN communication. Refer to [DEF-4, "System Diagram"](#).

## POWER CONSUMPTION CONTROL SYSTEM

### System Diagram

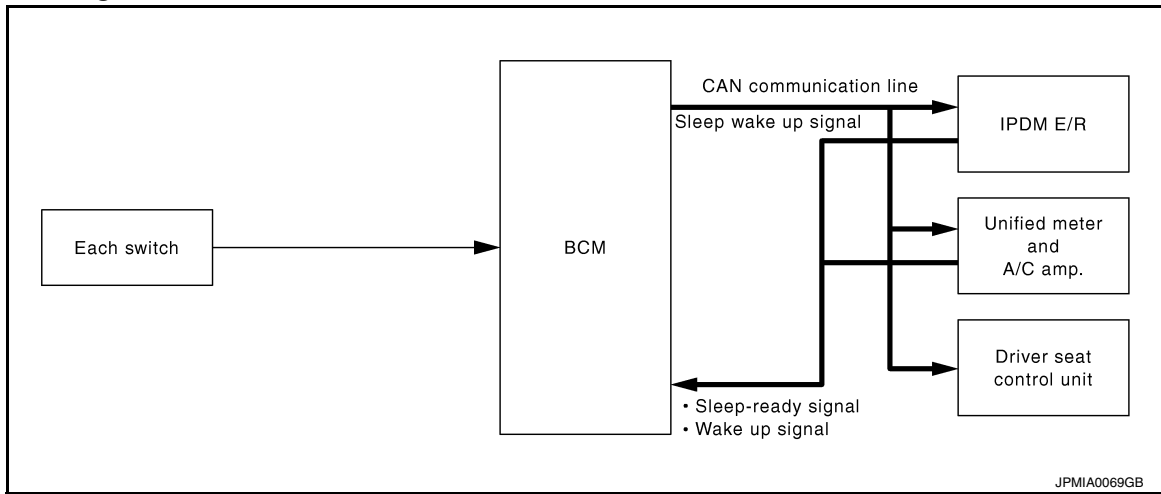

### System Description

INFOID:000000012173388

#### OUTLINE

- IPDM E/R incorporates a power consumption control function that reduces the power consumption according to the vehicle status.
- IPDM E/R changes its status (control mode) with the sleep wake up signal received from BCM via CAN communication.

#### Normal mode (wake-up)

- CAN communication is normally performed with other control units.
- Individual unit control by IPDM E/R is normally performed.

#### Low power consumption mode (sleep)

- Low power consumption control is active.
- CAN transmission is stopped.

#### SLEEP MODE ACTIVATION

- IPDM E/R judges that the sleep-ready conditions are fulfilled when the ignition switch is OFF and none of the conditions below are present. Then it transmits a sleep-ready signal (ready) to BCM via CAN communication.
  - Outputting signals to actuators
  - Switches or relays operating
  - Hood switch status is kept 50 ms or less.
  - Output requests are being received from control units via CAN communication.
- IPDM E/R stops CAN communication and enters the low power consumption mode when it receives a sleep wake up signal (sleep) from BCM and the sleep-ready conditions are fulfilled.

#### WAKE-UP OPERATION

- IPDM E/R changes from the low power consumption mode to the normal mode when it receives a sleep wake-up signal (wake up) from BCM or any of the following conditions is fulfilled. In addition, it transmits a sleep-ready signal (not-ready) to BCM via CAN communication to report the CAN communication start.
  - Ignition switch ON
  - The hood switch status changes.
  - An output request is received from a control unit via CAN communication.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS


# POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

[IPDM E/R]

## Component Parts Location

INFOID:000000012173389

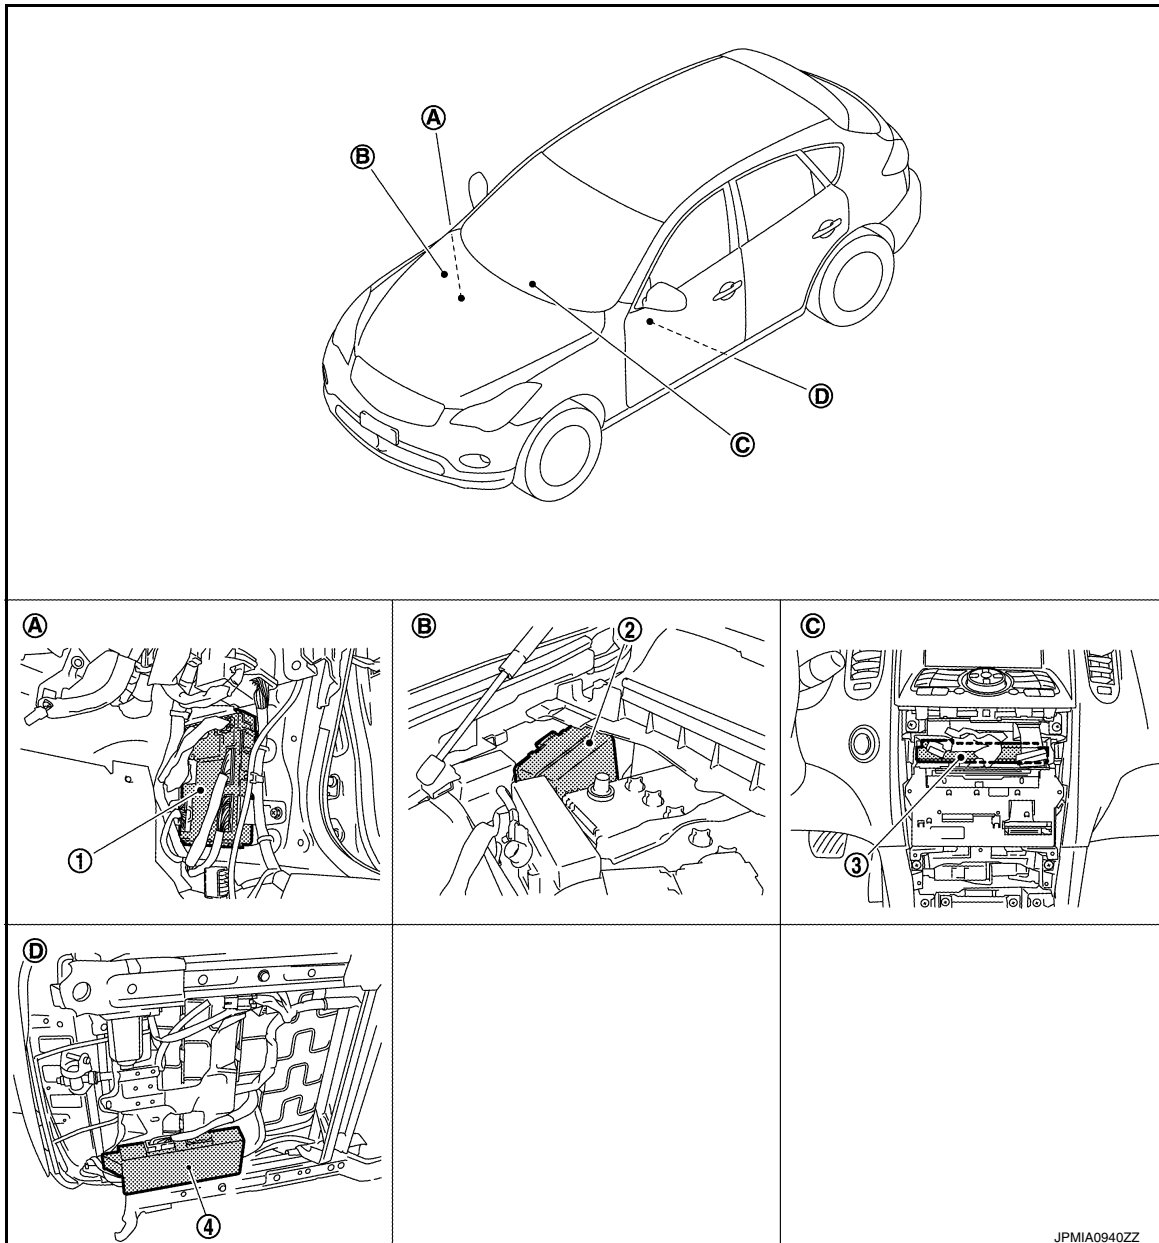

- |   |                                |                               |
|---|--------------------------------|-------------------------------|
| 1. BCM  | 2. IPDM E/R                    | 3. Unified meter and A/C amp. |
| 4. Driver seat control unit                   |                                |                               |
| A. Dash side lower (passenger side)           | B. Engine room dash panel (RH) | C. Behind cluster lid C       |
| D. Backside of the seat cushion (driver seat) |                                |                               |



## DIAGNOSIS SYSTEM (IPDM E/R)

### Diagnosis Description

INFOID:000000012173390

#### AUTO ACTIVE TEST

##### Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure warning lamp
- Front wiper (LO, HI)
- Parking lamps
- License plate lamps
- Side maker lamps
- Tail lamps
- Front fog lamps
- Daytime running light
- Headlamps (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan (cooling fan control module)

##### Operation Procedure

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)  
**NOTE:**  
 When auto active test is performed with hood opened, sprinkle water on windshield beforehand.
2. Turn the ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the front door switch (driver side) 10 times. Then turn the ignition switch OFF.  
**CAUTION:**  
**Close passenger door.**
4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. The oil pressure warning lamp starts blinking when the auto active test starts.
6. After a series of the following operations is repeated 3 times, auto active test is completed.

##### **NOTE:**

When auto active test mode has to be cancelled halfway through test, turn the ignition switch OFF.

##### **CAUTION:**

- **If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-65](#), "[Component Function Check](#)".**
- **Do not start the engine.**

##### Inspection in Auto Active Test Mode

When auto active test mode is actuated, the following 6 steps are repeated 3 times.

Operation sequence	Inspection location	Operation
1	Oil pressure warning lamp	Blinks continuously during operation of auto active test
2	Front wiper	LO for 5 seconds → HI for 5 seconds
3	<ul style="list-style-type: none"> <li>• Parking lamps</li> <li>• License plate lamps</li> <li>• Side maker lamps</li> <li>• Tail lamps</li> <li>• Front fog lamps</li> <li>• Daytime running light</li> </ul>	10 seconds
4	Headlamps	<ul style="list-style-type: none"> <li>• LO 10 seconds</li> <li>• HI ON ⇔ OFF 5 times</li> </ul>
5	A/C compressor (magnet clutch)	ON ⇔ OFF 5 times
6*	Cooling fan	MID for 5 seconds → HI for 5 seconds


# DIAGNOSIS SYSTEM (IPDM E/R)

[IPDM E/R]

## < SYSTEM DESCRIPTION >

\*: Outputs duty ratio of 50% for 5 seconds → duty ratio of 100% for 5 seconds on the cooling fan control module.

### Concept of auto active test

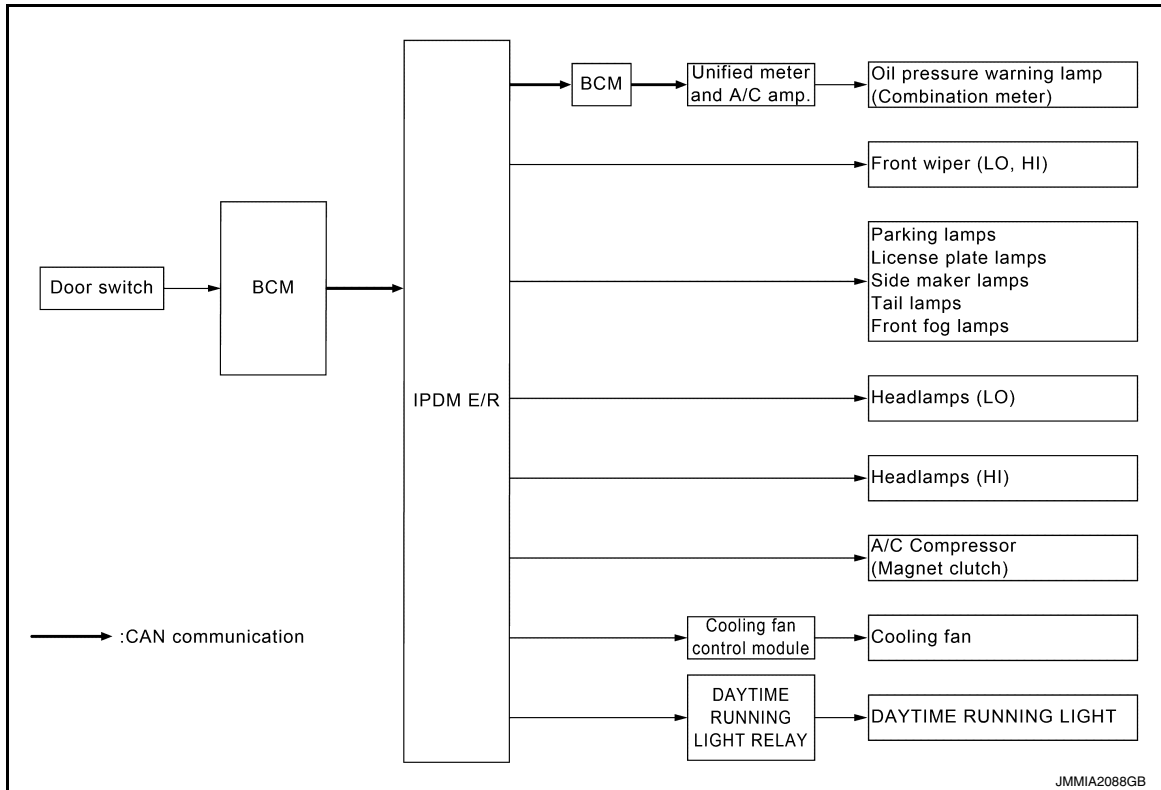

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

### Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Any of the following components do not operate <ul style="list-style-type: none"> <li>• Parking lamps</li> <li>• License plate lamps</li> <li>• Side maker lamps</li> <li>• Tail lamps</li> <li>• Front fog lamps</li> <li>• Headlamp (HI, LO)</li> <li>• Front wiper (HI, LO)</li> <li>• Daytime running light</li> </ul>	Perform auto active test. Does the applicable system operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> <li>• Lamp or motor</li> <li>• Lamp or motor ground circuit</li> <li>• Harness or connector between IPDM E/R and applicable system</li> <li>• IPDM E/R</li> </ul>
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES <ul style="list-style-type: none"> <li>• Unified meter and A/C amp. signal input circuit</li> <li>• CAN communication signal between unified meter and A/C amp. and ECM</li> <li>• CAN communication signal between ECM and IPDM E/R</li> </ul>
		NO <ul style="list-style-type: none"> <li>• Magnet clutch</li> <li>• Harness or connector between IPDM E/R and magnet clutch</li> <li>• IPDM E/R</li> </ul>

# DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Symptom	Inspection contents	Possible cause
Oil pressure warning lamp does not operate	Perform auto active test. Does the oil pressure warning lamp blink?	YES <ul style="list-style-type: none"> <li>• Harness or connector between IPDM E/R and oil pressure switch</li> <li>• Oil pressure switch</li> <li>• IPDM E/R</li> </ul>
		NO <ul style="list-style-type: none"> <li>• CAN communication signal between IPDM E/R and BCM</li> <li>• CAN communication signal between BCM and unified meter and A/C amp.</li> <li>• Combination meter</li> </ul>
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES <ul style="list-style-type: none"> <li>• ECM signal input circuit</li> <li>• CAN communication signal between ECM and IPDM E/R</li> </ul>
		NO <ul style="list-style-type: none"> <li>• Cooling fan</li> <li>• Harness or connector between cooling fan and cooling fan control module</li> <li>• Cooling fan control module</li> <li>• Harness or connector between IPDM E/R and cooling fan control module</li> <li>• Cooling fan relay</li> <li>• Harness or connector between IPDM E/R and cooling fan relay</li> <li>• IPDM E/R</li> </ul>

## CONSULT Function (IPDM E/R)

INFOID:000000012173391

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

### SELF DIAGNOSTIC RESULT

Refer to [PCS-32. "DTC Index"](#).

### DATA MONITOR

#### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item [Unit]	MAIN SIGNALS	Description
RAD FAN REQ [%]	×	Displays the value of the cooling fan speed signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.

# DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Monitor Item [Unit]	MAIN SIG- NALS	Description
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the shift position judged by IPDM E/R.
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.
ST/INH RLY [Off/ ST ON/INH ON/UNKWN]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.
DETENT SW [Off/On]		Displays the status of the A/T shift selector (detention switch) judged by IPDM E/R.
S/L RLY -REQ [Off/On]		<b>NOTE:</b> The item is indicated, but not monitored.
S/L STATE [LOCK/UNLOCK/UNKWN]		<b>NOTE:</b> The item is indicated, but not monitored.
DTRL REQ [Off/On]		Displays the status of the daytime running light request signal received from BCM via CAN communication.
OIL P SW [Open/Close]		Displays the status of the oil pressure switch judged by IPDM E/R.
HOOD SW [Off/On]		Displays the status of the hood switch judged by IPDM E/R.
HL WASHER REQ [Off/On]		<b>NOTE:</b> The item is indicated, but not monitored.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.
CRNRNG LMP REQ [Off/On]		<b>NOTE:</b> The item is indicated, but not monitored.

## ACTIVE TEST

Test item

# DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[IPDM E/R]

Test item	Operation	Description
CORNERING LAMP	Off	<b>NOTE:</b> The item is indicated, but cannot be tested.
	LH	
	RH	
HORN	On	Operates horn relay 1 and horn relay 2 for 20 ms.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.
MOTOR FAN	1	OFF
	2	Outputs 50% pulse duty signal (PWM signal) to the cooling fan control module.
	3	Outputs 80% pulse duty signal (PWM signal) to the cooling fan control module.
	4	Outputs 100% pulse duty signal (PWM signal) to the cooling fan control module.
HEAD LAMP WASHER	On	<b>NOTE:</b> The item is indicated, but cannot be tested.
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

## DTC/CIRCUIT DIAGNOSIS

### U1000 CAN COMM CIRCUIT

#### Description

INFOID:0000000012173392

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.  
 CAN Communication Signal Chart. Refer to [LAN-28, "CAN Communication Signal Chart"](#).

#### DTC Logic

INFOID:0000000012173393

#### DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible cause
U1000	CAN COMM CIRCUIT	When IPDM E/R cannot communicate CAN communication signal continuously for 2 seconds or more	CAN communication system

#### Diagnosis Procedure

INFOID:0000000012173394

#### 1. PERFORM SELF DIAGNOSTIC

1. Turn the ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result" of IPDM E/R.

#### Is DTC "U1000" displayed?

- YES >> Refer to [LAN-18, "Trouble Diagnosis Flow Chart"](#).
- NO >> Refer to [GI-42, "Intermittent Incident"](#).

# B2098 IGNITION RELAY ON STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

## B2098 IGNITION RELAY ON STUCK

### Description

INFOID:000000012173395

- IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.
- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the unified meter and A/C amp.(Emergency OFF)
  - Press and hold the push-button ignition switch for 2 seconds or more.
  - Press the push-button ignition switch 3 times within 1.5 seconds.

#### NOTE:

The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

### DTC Logic

INFOID:000000012173396

#### DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible causes
B2098	IGN RELAY ON CIRC	The ignition relay ON is detected for 1 second at ignition switch OFF (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it)	Ignition relay malfunction

#### DTC CONFIRMATION PROCEDURE

##### 1.PERFORM SELF DIAGNOSIS

1. Turn the ignition switch ON.
2. Turn ignition switch OFF and wait 1 second or more.
3. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

##### Is DTC detected?

- YES >> Refer to [PCS-15, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000012173397

##### 1.CHECK SELF DIAGNOSTIC RESULT

Check DTC using CONSULT.

##### What is the display history of DTC "B2098"?

- "CRNT">> GO TO 2.  
 "PAST" >> GO TO 5.

##### 2.CHECK IGNITION RELAY CONTROL CIRCUIT VOLTAGE 1

1. Turn ignition switch ON
2. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (Approx.)
IPDM E/R			
Connector	Terminal		
E5	27	Ground	0 V

##### Is the inspection result normal?

- YES >> GO TO 4.  
 NO >> GO TO 3.

##### 3.CHECK IGNITION RELAY CONTROL CIRCUIT VOLTAGE 2

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

## B2098 IGNITION RELAY ON STUCK

[IPDM E/R]

### < DTC/CIRCUIT DIAGNOSIS >

1. Disconnect IPDM E/R connector.
2. Turn ignition switch ON
3. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (Approx.)
IPDM E/R			
Connector	Terminal	Ground	0 V
E5	27		

#### Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).  
NO >> Check the harness of the ignition relay control circuit for a short to power.

### 4.CHECK IGNITION RELAY CONTROL CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	27		Not existed

#### Is the inspection result normal?

- YES >> Perform the diagnosis procedure for DTC B260A. Refer to [PCS-54, "DTC Logic"](#).  
NO >> Repair or replace harness.

### 5.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END



# B2099 IGNITION RELAY OFF STUCK

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

## B2099 IGNITION RELAY OFF STUCK

### Description

INFOID:000000012173398

- IPDM E/R operates the ignition relay when it receives an ignition switch ON signal from BCM via CAN communication.
- Turn the ignition relay OFF by pressing the push-button ignition switch once when the vehicle speed is 4 km/h (2.5 MPH) or less.
- Turn the ignition relay OFF with the following operation when the vehicle speed is more than 4 km/h (2.5 MPH) or when an abnormal condition occurs in CAN communication from the unified meter and A/C amp.(Emergency OFF)
  - Press and hold the push-button ignition switch for 2 seconds or more.
  - Press the push-button ignition switch 3 times within 1.5 seconds.

#### NOTE:

The ignition relay does not turn ON for 3 seconds after emergency OFF even if the push-button ignition switch is pressed.

### DTC Logic

INFOID:000000012173399

#### DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible causes
B2099	IGN RELAY OFF CIRC	The ignition relay OFF is detected for 1 second at ignition switch ON (CPU monitors the status at the contact and excitation coil circuits of the ignition relay inside it)	Ignition relay malfunction

#### NOTE:

When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the "DTC: B2099" may be detected.

#### DTC CONFIRMATION PROCEDURE

##### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Turn ignition switch OFF and wait 1 second or more.
3. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

#### Is DTC detected?

- YES >> Refer to [PCS-17, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000012173400

##### 1. CHECK FUSE

Check that all of the fuses installed on the downstream of the contact point side circuit of the ignition relay in IPDM E/R are not blown.

#### Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Replace the blown fuse after replacing the affected circuit if a fuse is blown.

##### 2. CHECK IGNITION RELAY CONTROL CIRCUIT VOLTAGE

1. Turn ignition switch ON
2. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (Approx)
IPDM E/R			
Connector	Terminal		
E5	27	Ground	0 V

#### Is the inspection result normal?

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

## B2099 IGNITION RELAY OFF STUCK

[IPDM E/R]

< DTC/CIRCUIT DIAGNOSIS >

---

YES >> Replace IPDM E/R. Refer to [PCS-35. "Removal and Installation"](#).

NO >> GO TO 3.

### 3.CHECK BATTERY VOLTAGE

---

Check battery voltage.

Which is the measurement result?

More than 12.4 V>>GO TO 4.

Less than 12.4 V>>Perform battery inspection. Refer to [PG-3. "How to Handle Battery"](#).

### 4.CHECK INTERMITTENT INCIDENT

---

Refer to [GI-42. "Intermittent Incident"](#).

>> INSPECTION END

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[IPDM E/R]

## POWER SUPPLY AND GROUND CIRCUIT

### Diagnosis Procedure

INFOID:000000012173401

#### 1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown (open).

Signal name	Fuses and fusible link No.
Battery power supply	C
	50
	51

Is the fuse blown (open)?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

#### 2. CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and the ground.

Terminals		Voltage (Approx.)
(+)	(-)	
IPDM E/R		Battery voltage
Connector	Terminal	
E4	1	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair the harness or connector.

#### 3. CHECK GROUND CIRCUIT

Check continuity between IPDM E/R harness connectors and the ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	12		Existed
E6	41		

Does continuity exist?

YES >> INSPECTION END

NO >> Repair the harness or connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

## ECU DIAGNOSIS INFORMATION

### IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

#### Reference Value

INFOID:0000000012173402

#### VALUES ON THE DIAGNOSIS TOOL

**NOTE:**

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition		Value/Status
RAD FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	0 – 100 %
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		<ul style="list-style-type: none"> <li>• Front fog lamp switch ON</li> <li>• Daytime running light activated (Only for Canada)</li> </ul>	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	Selector lever in any position other than P or N	Off
		Selector lever in P or N position	On

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Monitor Item	Condition	Value/Status
ST RLY CONT	Ignition switch ON	Off
	At engine cranking	On
IHBT RLY -REQ	Ignition switch ON	Off
	At engine cranking	On
ST/INHI RLY	Ignition switch ON	Off
	At engine cranking	INHI ON → ST ON
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF	UNKWN
DETENT SW	Ignition switch ON	Off
	Release the selector button with selector lever in P position	On
S/L RLY -REQ	<b>NOTE:</b> The item is indicated, but not monitored.	Off
S/L STATE	<b>NOTE:</b> The item is indicated, but not monitored.	UNLOCK
DTRL REQ	Daytime running light system is not operated	Off
	Daytime running light system is operated	On
OIL P SW	Ignition switch OFF, ACC or engine running	Open
	Ignition switch ON	Close
HOOD SW	Close the hood	Off
	Open the hood	On
HL WASHER REQ	<b>NOTE:</b> The item is indicated, but not monitored.	Off
THFT HRN REQ	Not operation	Off
	<ul style="list-style-type: none"> <li>Panic alarm is activated</li> <li>Horn is activated with VEHICLE SECURITY (THEFT WARNING) SYSTEM</li> </ul>	On
HORN CHIRP	Not operating	Off
	Door locking with Intelligent Key (horn chirp mode)	On
CRNRNG LMP REQ	<b>NOTE:</b> The item is indicated, but not monitored.	Off

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

PCS


N  
O  
P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

## TERMINAL LAYOUT

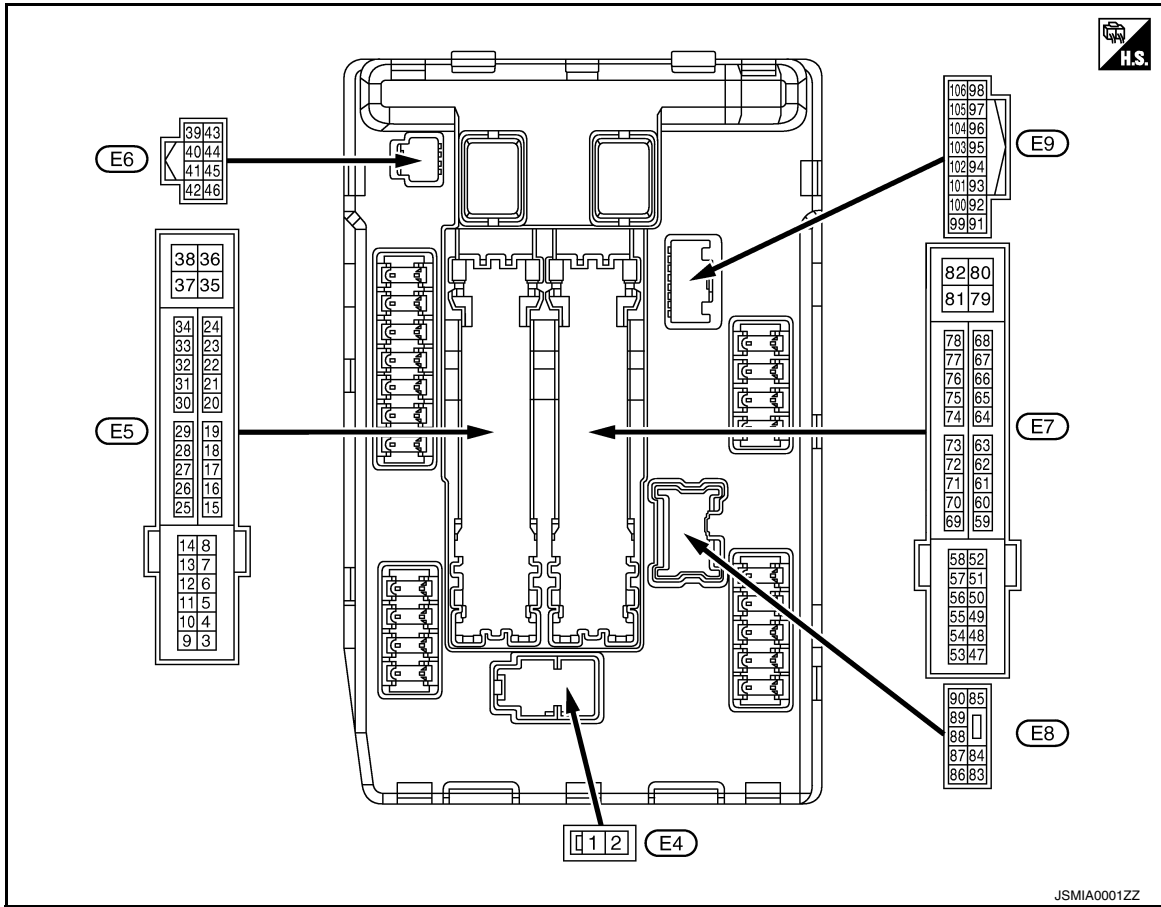

## PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (L)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
4 (V)	Ground	Front wiper LO	Output	Ignition switch OFF	Front wiper switch OFF	0 V
				Ignition switch ON	Front wiper switch LO	Battery voltage
5 (L)	Ground	Front wiper HI	Output	Ignition switch OFF	Front wiper switch OFF	0 V
				Ignition switch ON	Front wiper switch HI	Battery voltage
6 (R)	Ground	Daytime running light relay power supply	Output	Ignition switch OFF		Battery voltage
7 (R)	Ground	Tail, license plate lamps & interior lamps	Output	Ignition switch OFF	Lighting switch OFF	0 V
				Ignition switch ON	Lighting switch 1ST	Battery voltage
12 (B/W)	Ground	Ground	—	Ignition switch ON		0 V
13 (Y)	Ground	Fuel pump power supply	Output	Approximately 1 second or more after turning the ignition switch ON		0 V
				<ul style="list-style-type: none"> <li>Approximately 1 second after turning the ignition switch ON</li> <li>Engine running</li> </ul>		Battery voltage

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)	
16 (LG)	Ground	Front wiper auto stop	Input	Ignition switch ON	Front wiper stop position	0 V	A
					Any position other than front wiper stop position	Battery voltage	B
19 (W)	Ground	Ignition relay power supply	Output		Ignition switch OFF	0 V	C
					Ignition switch ON	Battery voltage	
25 (G)	Ground	Ignition relay power supply	Output		Ignition switch OFF	0 V	D
					Ignition switch ON	Battery voltage	
26* (R)	Ground	Ignition relay power supply	Output		Ignition switch OFF	0 V	E
					Ignition switch ON	Battery voltage	
27 (BG)	Ground	Ignition relay monitor	Input		Ignition switch OFF or ACC	Battery voltage	
					Ignition switch ON	0 V	
28 (L)	Ground	Push-button ignition switch	Input		Press the push-button ignition switch	0 V	F
					Release the push-button ignition switch	Battery voltage	
30 (GR)	Ground	Starter relay control	Input	Ignition switch ON	Selector lever in any position other than P or N	0 V	G
					Selector lever P or N	Battery voltage	
36 (G)	Ground	Battery power supply	Input		Ignition switch OFF	Battery voltage	H
39 (P)	—	CAN-L	Input/ Output		—	—	I
40 (L)	—	CAN-H	Input/ Output		—	—	
41 (B/W)	Ground	Ground	—		Ignition switch ON	0 V	J
43 (SB)	Ground	A/T shift selector (Detention switch)	Input	Ignition switch ON	<ul style="list-style-type: none"> <li>• Press the selector button (Selector lever P)</li> <li>• Selector lever in any position other than P</li> </ul>	Battery voltage	K
					Release the selector button (selector lever P)	0 V	L
44 (BR)	Ground	Horn relay control	Input		The horn is deactivated	Battery voltage	
					The horn is activated	0 V	
45 (G)	Ground	Anti theft horn relay control	Input		The horn is deactivated	Battery voltage	PCS
					The horn is activated	0 V	
46 (R)	Ground	Starter relay control	Input	Ignition switch ON	Selector lever in any position other than P or N	0 V	N
					Selector lever P or N	Battery voltage	
48 (L)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 V	O
					A/C switch ON (A/C compressor is operating)	Battery voltage	
49 (BG)	Ground	ECM relay power supply	Output		Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V	P
					<ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul>	Battery voltage	

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]




Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
51 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
53 (W)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				<ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul>	Battery voltage
54 (P)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				<ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul>	Battery voltage
55 (SB)	Ground	ECM power supply	Output	Ignition switch OFF	Battery voltage
56 (LG)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
57 (G)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
58 (V)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
69 (BR)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	Battery voltage
				<ul style="list-style-type: none"> <li>• Ignition switch ON</li> <li>• Ignition switch OFF (For a few seconds after turning ignition switch OFF)</li> </ul>	0 – 1.5 V
70 (BG)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF	0 – 1.0 V ↓ Battery voltage ↓ 0 V
				Ignition switch ON	0 – 1.0 V
74 (P)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
75 (SB)	Ground	Oil pressure switch	Input	Ignition switch ON	0 V
				Engine stopped	Battery voltage
				Engine running	Battery voltage



# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

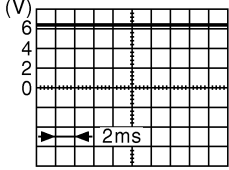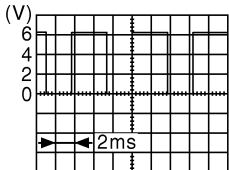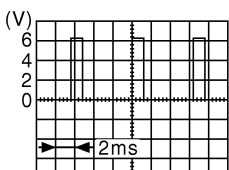Terminal No. (Wire color)		Description		Condition	Value (Approx.)
		Signal name	Input/ Output		
+	-				
76 (Y)	Ground	Power generation command signal	Output	Ignition switch ON	 6.3 V
				40% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"	 3.8 V
				80% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"	 1.4 V
77 (R)	Ground	Fuel pump relay control	Output	<ul style="list-style-type: none"> <li>• Approximately 1 second after turning the ignition switch ON</li> <li>• Engine running</li> </ul>	0 – 1.0 V
				Approximately 1 second or more after turning the ignition switch ON	Battery voltage
80 (W)	Ground	Starter motor	Output	At engine cranking	Battery voltage
83 (BG)	Ground	Headlamp LO (RH)	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
84 (V)	Ground	Headlamp LO (LH)	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
86 (W)	Ground	Front fog lamp (RH)	Output	Lighting switch OFF	0 V
				Lighting switch 2ND	<ul style="list-style-type: none"> <li>• Front fog lamp switch ON</li> <li>• Daytime running light activated (Only for Canada)</li> </ul> Battery voltage
87 (L)	Ground	Front fog lamp (LH)	Output	Lighting switch OFF	0 V
				Lighting switch 2ND	<ul style="list-style-type: none"> <li>• Front fog lamp switch ON</li> <li>• Daytime running light activated (Only for Canada)</li> </ul> Battery voltage
88 (GR)	Ground	Washer pump power supply	Output	Ignition switch ON	Battery voltage

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

PCS

N  
O  
P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
89 (BR)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					<ul style="list-style-type: none"> <li>• Lighting switch HI</li> <li>• Lighting switch PASS</li> </ul>	Battery voltage
90 (P)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					<ul style="list-style-type: none"> <li>• Lighting switch HI</li> <li>• Lighting switch PASS</li> </ul>	Battery voltage
91 (P)	Ground	Parking lamp (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
92 (BG)	Ground	Parking lamp (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 1ST	Battery voltage
97 (V)	Ground	Cooling fan control	Output	Engine idling		0 – 5 V
104 (LG)	Ground	Hood switch	Input	Close the hood		Battery voltage
				Open the hood		0 V
105 (SB)	Ground	Daytime running light relay control	Output	Daytime running light system is not operated.		Battery voltage
				Daytime running light system is operated.		0 V

\*: Only for the models with ICC system


# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

## Wiring Diagram - IPDM E/R -

INFOID:000000012173403

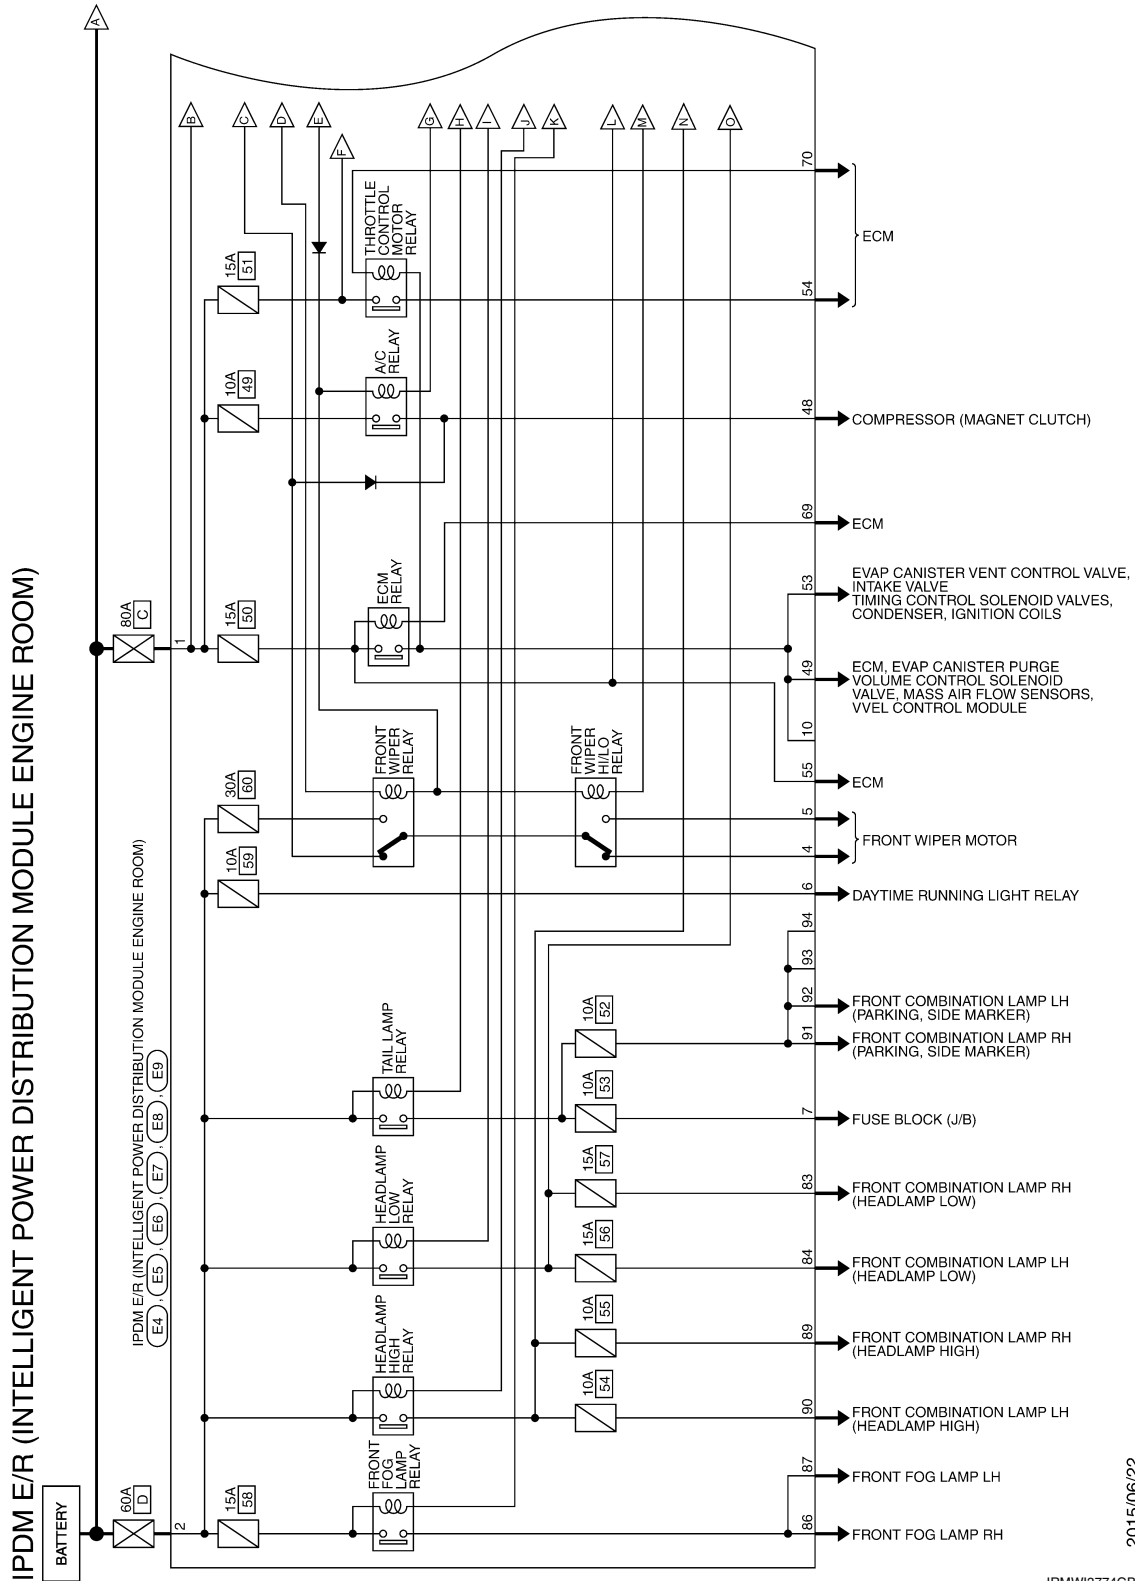

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS


2015/06/22

JRMW13774GB

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

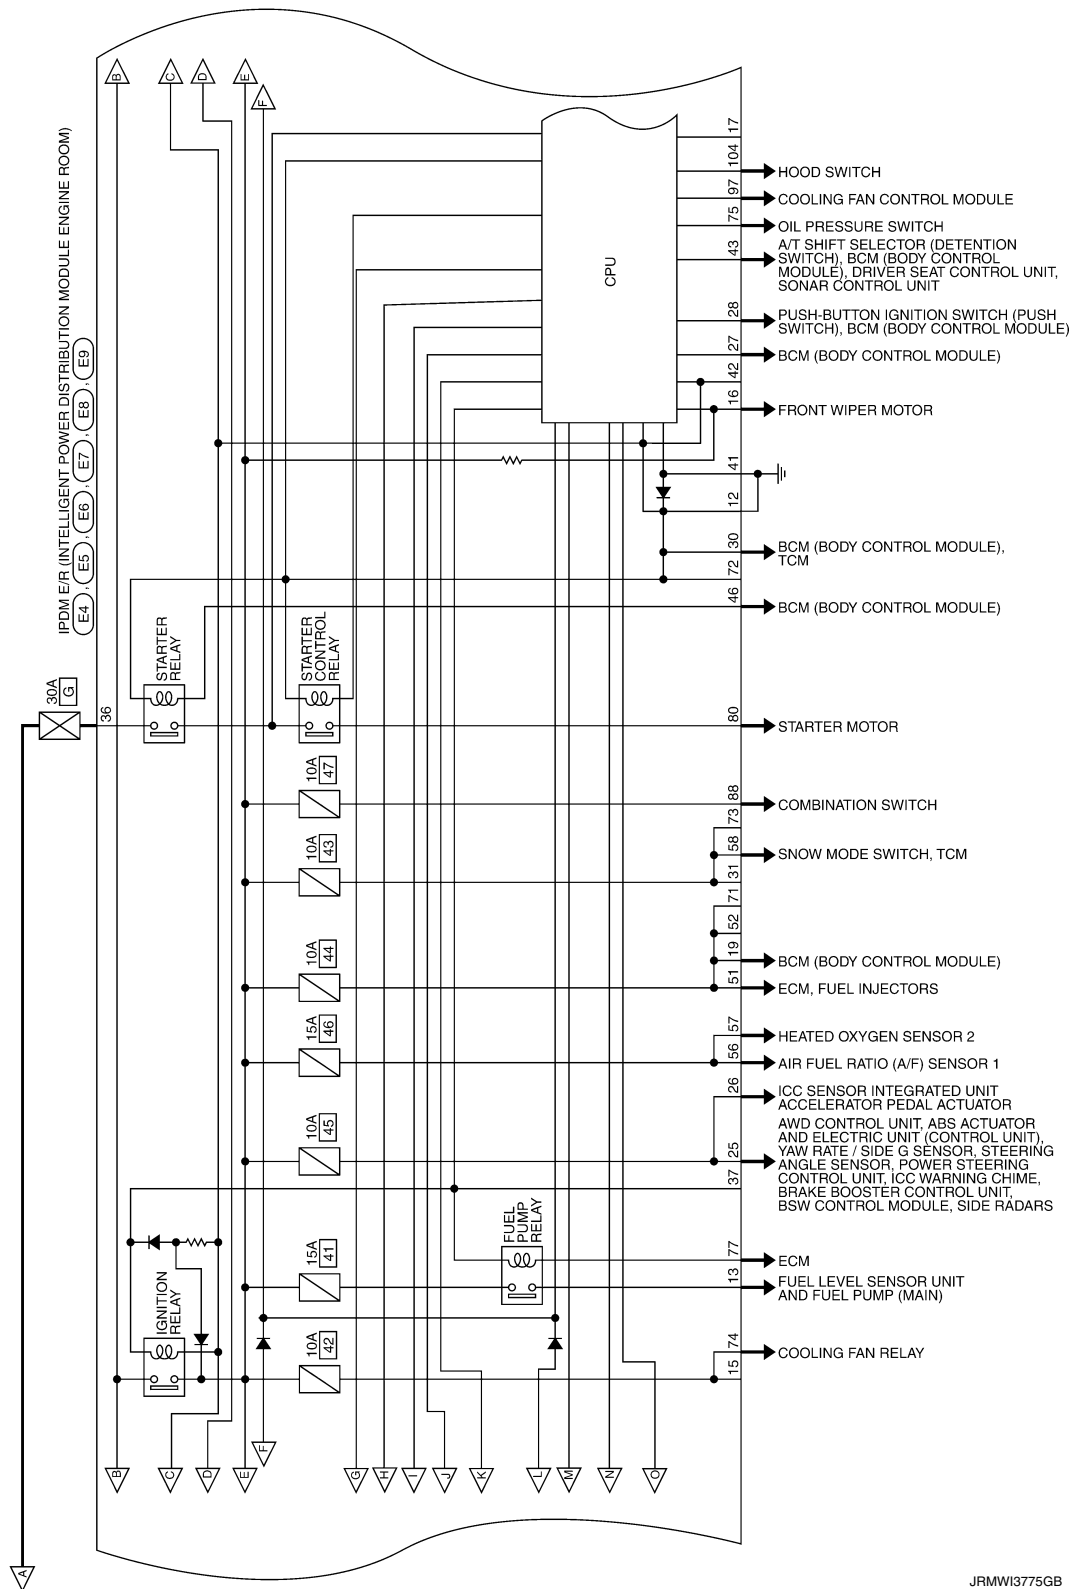

JRMW13775GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

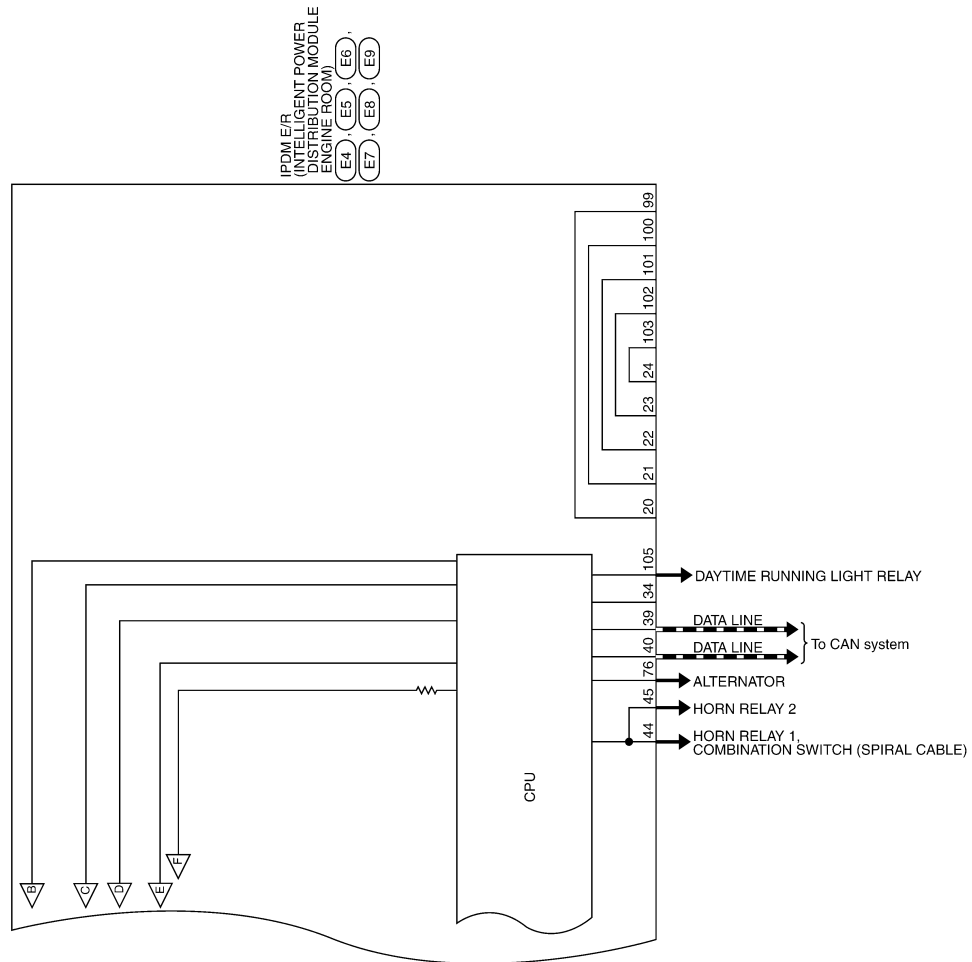

JRMW13776GB

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)		
Connector No.	E4	
Connector Name	IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM	
Connector Type	LO2FB-MC	
Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	
2	L	
Connector No. E5		
Connector Name IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM		
Connector Type TH20FW-CS12-MM-1V		
Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	
5	L	
6	R	
7	R	
12	B/W	
13	Y	
16	LG	
18	W	
25	B	
27	BG	
28	L	
30	GR	
36	G	
Connector No. E6		
Connector Name IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM		
Connector Type TH08FW-NH		
Terminal No.	Color Of Wire	Signal Name [Specification]
38	P	
40	L	
41	B/W	
43	SB	
44	BR	
45	G	
46	R	
Connector No. E7		
Connector Name IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM		
Connector Type TH20FW-CS12-MM		
Terminal No.	Color Of Wire	Signal Name [Specification]
48	L	
49	BG	
51	Y	
52	W	
55	SB	
56	LG	
57	G	
58	V	
69	BR	
70	BG	
74	P	
Connector No. E8		
Connector Name IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM		
Connector Type TH16FW-NH		
Terminal No.	Color Of Wire	Signal Name [Specification]
83	BG	
84	V	
86	W	
87	L	
88	GR	
89	BR	
90	P	
Connector No. E9		
Connector Name IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM		
Connector Type TH16FW-NH		
Terminal No.	Color Of Wire	Signal Name [Specification]
91	P	
92	BG	
97	V	
104	LG	
105	SB	
Connector No. E10		
Connector Name IPDM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM		
Connector Type TH08FW-NH		
Terminal No.	Color Of Wire	Signal Name [Specification]
75	SB	
76	Y	
77	R	
80	W	

## Fail-safe

### CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

JRMW1377GB

INFOID:000000012173404

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Control part	Fail-safe operation
Cooling fan	<ul style="list-style-type: none"> <li>• Outputs the pulse duty signal (PWM signal) 100% when the ignition switch is turned ON</li> <li>• Outputs the pulse duty signal (PWM signal) 0% when the ignition switch is turned OFF</li> </ul>
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> <li>• Turns ON the headlamp low relay when the ignition switch is turned ON</li> <li>• Turns OFF the headlamp low relay when the ignition switch is turned OFF</li> <li>• Headlamp high relay OFF</li> </ul>
<ul style="list-style-type: none"> <li>• Parking lamps</li> <li>• License plate lamps</li> <li>• Side maker lamps</li> <li>• Illuminations</li> <li>• Tail lamps</li> </ul>	<ul style="list-style-type: none"> <li>• Turns ON the tail lamp relay when the ignition switch is turned ON</li> <li>• Turns OFF the tail lamp relay when the ignition switch is turned OFF</li> </ul>
Front wiper	<ul style="list-style-type: none"> <li>• The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed.</li> <li>• The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.</li> </ul>
Front fog lamps	Front fog lamp relay OFF
Horn	Horn relay OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Daytime running light	Daytime running light relay OFF
Starter motor	Starter control relay OFF

## IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition relay excitation coil side		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	<ul style="list-style-type: none"> <li>• Detects DTC "B2098: IGN RELAY ON"</li> <li>• Turns ON the tail lamp relay for 10 minutes</li> </ul>
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF"

## FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper stop position signal.

When a front wiper stop position signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS INFORMATION >

[IPDM E/R]

Ignition switch	Front wiper switch	Front wiper stop position signal
ON	OFF	The front wiper stop position signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper stop position signal does not change for 10 seconds.

**NOTE:**

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

**STARTER MOTOR PROTECTION FUNCTION**

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

**DTC Index**

INFOID:000000012173405

**NOTE:**

- The details of time display are as follows.
- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
- The number is 0 when is detected now.
- The number increases like 1 → 2 … 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

×: Applicable

CONSULT display	Fail-safe	Reference
No DTC is detected. Further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	×	<a href="#">PCS-14</a>
B2098: IGN RELAY ON CIRC	×	<a href="#">PCS-15</a>
B2099: IGN RELAY OFF CIRC	—	<a href="#">PCS-17</a>
B210B: STR CONT RLY ON CIRC	—	<a href="#">SEC-77</a>
B210C: STR CONT RLY OFF CIRC	—	<a href="#">SEC-78</a>
B210D: STARTER RLY ON CIRC	—	<a href="#">SEC-80</a>
B210E: STARTER RLY OFF CIRC	—	<a href="#">SEC-82</a>
B210F: INTRLCK/PNP SW ON	—	<a href="#">SEC-84</a>
B2110: INTRLCK/PNP SW OFF	—	<a href="#">SEC-86</a>



PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000012762382

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery or batteries, and wait at least 3 minutes before performing any service.


Precautions for Removing Battery Terminal

INFOID:000000012762383

When disconnecting the battery terminal, pay attention to the following.

- Always use a 12V battery as power source.
- Never disconnect battery terminal while engine is running.
- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.
- For vehicles with the engine listed below, remove the battery terminal after a lapse of the specified time:

BR08DE	: 4 minutes	YD25DDTi	: 2 minutes
D4D engine	: 20 minutes	YS23DDT	: 4 minutes
HRA2DDT	: 12 minutes	YS23DDTT	: 4 minutes
K9K engine	: 4 minutes	ZD30DDTi	: 60 seconds
M9R engine	: 4 minutes	ZD30DDTT	: 60 seconds
R9M engine	: 4 minutes		
V9X engine	: 4 minutes		

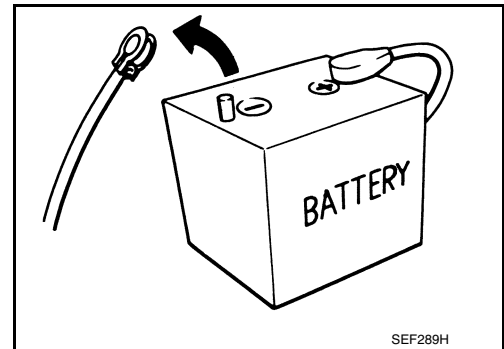

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- After high-load driving, if the vehicle is equipped with the V9X engine, turn the ignition switch OFF and wait for at least 15 minutes to remove the battery terminal.

NOTE:

# PRECAUTIONS

[IPDM E/R]

## < PRECAUTION >

- Turbocharger cooling pump may operate in a few minutes after the ignition switch is turned OFF.
- Example of high-load driving
  - Driving for 30 minutes or more at 140 km/h (86 MPH) or more.
  - Driving for 30 minutes or more on a steep slope.
- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.

**NOTE:**

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.


**NOTE:**

The removal of 12V battery may cause a DTC detection error.

## Precaution for Procedure without Cowl Top Cover

INFOID:000000012762384

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

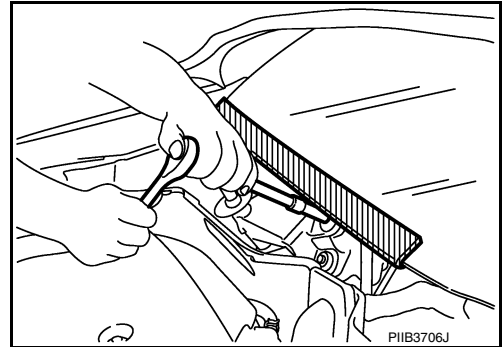


# REMOVAL AND INSTALLATION

## IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Exploded View

INFOID:0000000012173409

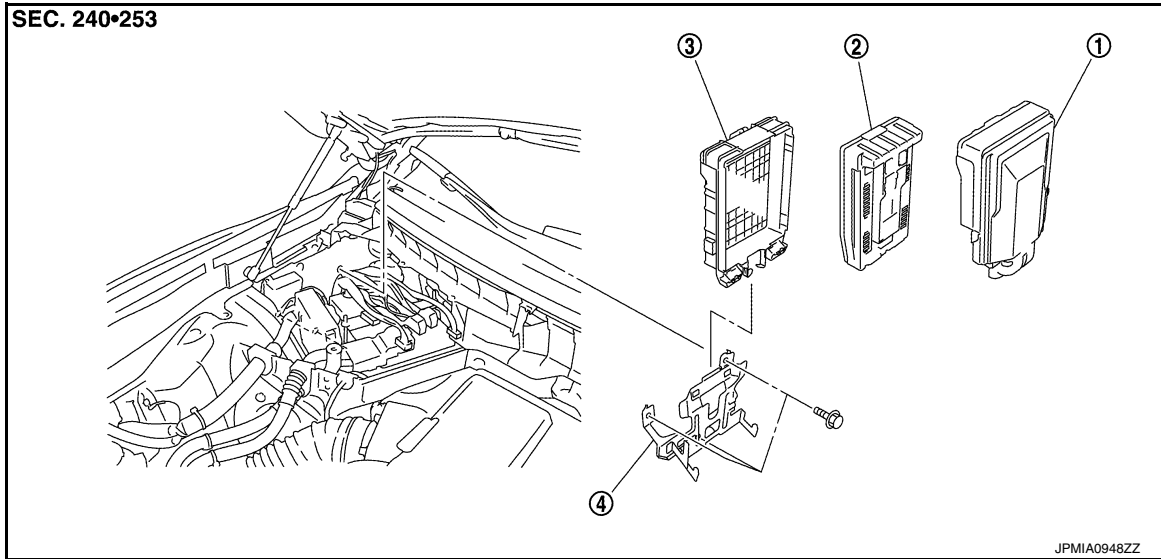

- 1. IPDM E/R cover A
- 2. IPDM E/R
- 3. IPDM E/R cover B
- 4. Bracket

### Removal and Installation


INFOID:0000000012173410

**CAUTION:**

**IPDM E/R integrated relays are not serviceable parts, and must not be removed from the unit.**

#### REMOVAL

1. Disconnect the battery cable from the negative terminal.
2. Remove the cowl top cover (RH). Refer to [EXT-22, "Exploded View"](#).
3. Pull up the IPDM E/R assembly while pressing the pawls (A) on the back of the IPDM E/R cover B (1).

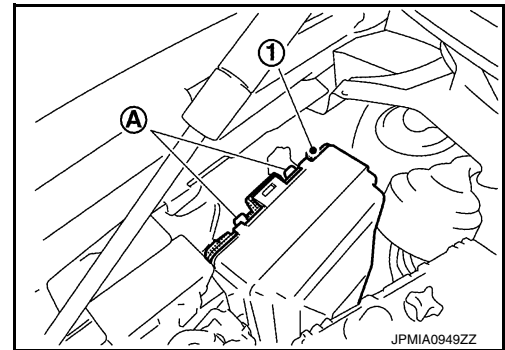


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

# IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)


[IPDM E/R]

## < REMOVAL AND INSTALLATION >

4. Remove the IPDM E/R cover A (1) while pressing the pawls (A) at the lower end of the IPDM E/R cover A.
5. Disconnect the harness connector and remove the IPDM E/R (2).

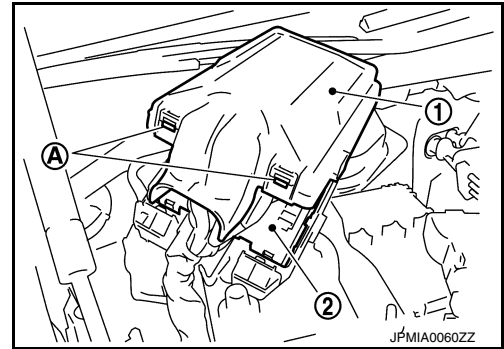

6. Remove the bolts (A) and remove the bracket (1) from the vehicle.

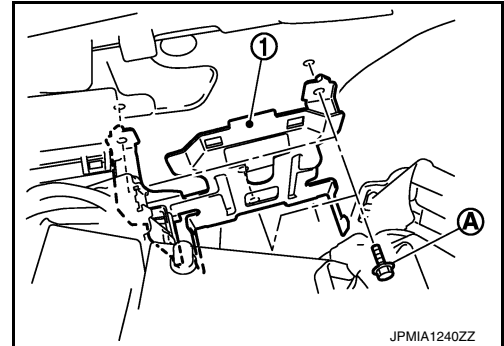

## INSTALLATION

Install in the reverse order of removal.

# DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000012173411

OVERALL SEQUENCE

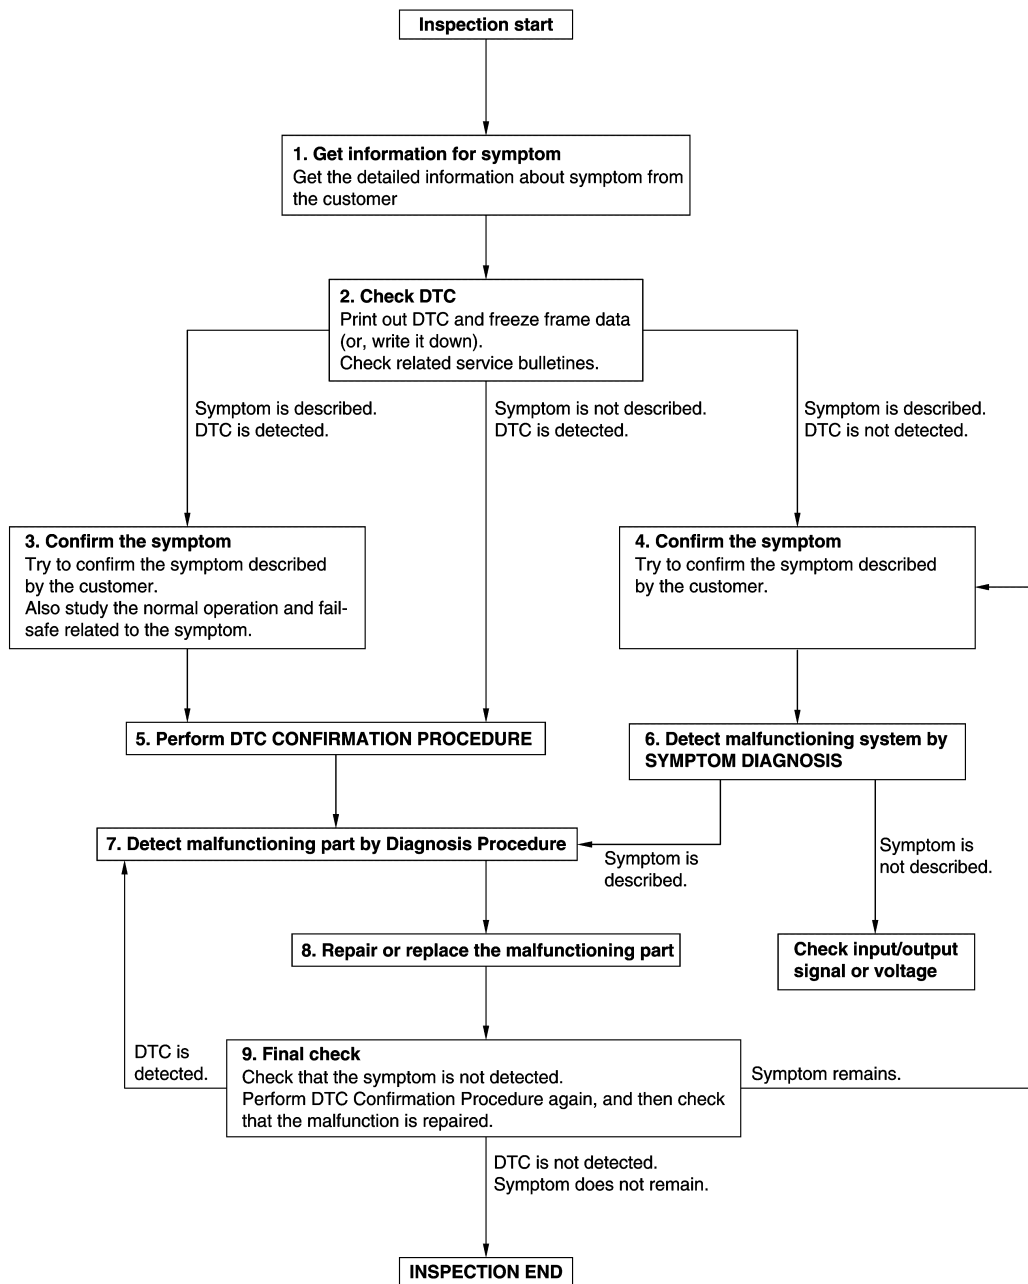

DETAILED FLOW

Revision: July 2016

PCS-37

2016 QX50

JMKIA8652GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

# DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]

---

## 1. GET INFORMATION FOR SYMPTOM

---

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

---

## 2. CHECK DTC

---

1. Check DTC.
2. Perform the following procedure if DTC is detected.
  - Record DTC and freeze frame data (Print them out using CONSULT.)
  - Erase DTC.
  - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

### Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

---

## 3. CONFIRM THE SYMPTOM

---

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

---

## 4. CONFIRM THE SYMPTOM

---

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

---

## 5. PERFORM DTC CONFIRMATION PROCEDURE

---

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time.

If two or more DTCs are detected, refer to [BCS-89. "DTC Inspection Priority Chart"](#) (BCM) or [PCS-32. "DTC Index"](#) (IPDM E/R), and determine trouble diagnosis order.

### **NOTE:**

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.  
If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

### Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-42. "Intermittent Incident"](#).

---

## 6. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

---

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

### Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

---

## 7. DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

---

# DIAGNOSIS AND REPAIR WORK FLOW

## [POWER DISTRIBUTION SYSTEM]

### < BASIC INSPECTION >

Inspect according to Diagnostic Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-42. "Intermittent Incident"](#).

### 8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

### 9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# PROCEDURE FOR TEMPORARILY DISABLING THE IGNITION BATTERY SAVER SYSTEM

< BASIC INSPECTION >

[POWER DISTRIBUTION SYSTEM]

## PROCEDURE FOR TEMPORARILY DISABLING THE IGNITION BATTERY SAVER SYSTEM

### Description

INFOID:000000012772684

The ignition battery saver system can be temporarily disabled, without using CONSULT, to prevent it from functioning when performing trouble diagnosis. Refer to [PCS-40. "Work Procedure"](#).

### Work Procedure

INFOID:000000012772685

1. Enter the vehicle carrying a registered Intelligent Key.
2. Place the ignition switch in the OFF position.
3. Without depressing the brake pedal, press and hold the push-button ignition switch continuously for 10 seconds.
4. Check that the buzzer in the combination meter sounds for 2 seconds.
5. Operation is completed.

**NOTE:**

When the ignition switch is placed in any position other than ON, the ignition battery saver system is activated again.



SYSTEM DESCRIPTION

POWER DISTRIBUTION SYSTEM

System Description

INFOID:0000000012173412

SYSTEM DESCRIPTION

- PDS (POWER DISTRIBUTION SYSTEM) is the system that BCM controls with the operation of the push-button ignition switch and performs the power distribution to each power circuit. This system is used instead of the mechanical power supply changing mechanism with the operation of the conventional key cylinder.
- The push-button ignition switch can be operated when Intelligent Key is in the following condition. Refer to Engine Start Function for details.
  - Intelligent Key is in the detection area of the inside key antenna
  - Insert Intelligent Key into the key slot
- The push-button ignition switch operation is input to BCM as a signal. BCM changes the power supply position according to the status and operates the following relays to supply power to each power circuit.
  - Ignition relay (built into IPDM E/R)
  - Ignition relay (inserted into fuse block)
  - ACC relay
  - Blower relay
- The power supply position changes due to the conditions of push-button ignition switch operation, brake pedal, selector lever and vehicle speed.

**NOTE:**

The power supply position can be confirmed with the lighting of the indicators near the push-button ignition switch.

IGNITION BATTERY SAVER SYSTEM

When all the following conditions are met for a period of time, the battery saver system will cut off the power supply (ignition switch ON/ACC → OFF) to prevent battery discharge.

- Ignition switch is in the ACC or ON position
- Turn signal lamp is not in operation
- Selector lever is in the P (park) position

Reset Condition of Ignition Battery Saver System

If any of the following conditions are met, the battery saver system is released.

- Ignition switch is not in the ACC or ON position
- Turn signal lamp is in operation
- Selector lever is not in the P (park) position

**NOTE:**

The ignition battery saver system can be temporarily disabled, without using CONSULT, to prevent it from functioning when performing trouble diagnosis. Refer to [PCS-40, "Work Procedure"](#).

POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION

The power supply position changing operation can be performed with the following operations.

**NOTE:**

- When an Intelligent Key is within the detection area of inside key antenna and when it is inserted to the key slot, it is equivalent to the operations below.
- When starting the engine, the BCM monitors under the engine start conditions,
  - Brake pedal operating condition
  - Selector lever position
  - Vehicle speed

Vehicle speed: less than 4 km/h (2.5 MPH)

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever position	Brake pedal operation condition	
LOCK → ACC	—	Not depressed	1
LOCK → ACC → ON	—	Not depressed	2
LOCK → ACC → ON → OFF	—	Not depressed	3

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P



# POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever position	Brake pedal operation condition	
LOCK → START ACC → START ON → START	P or N position	Depressed	1
Engine is running → OFF	—	—	1

Vehicle speed: 4 km/h (2.5 MPH) or more


Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever position	Brake pedal operation condition	
Engine is running → ACC	—	—	Emergency stop operation
Engine stall return operation while driving	N position	Not depressed	1

Emergency stop operation

- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times or more within 1.5 seconds.

## Component Parts Location

INFOID:000000012173413

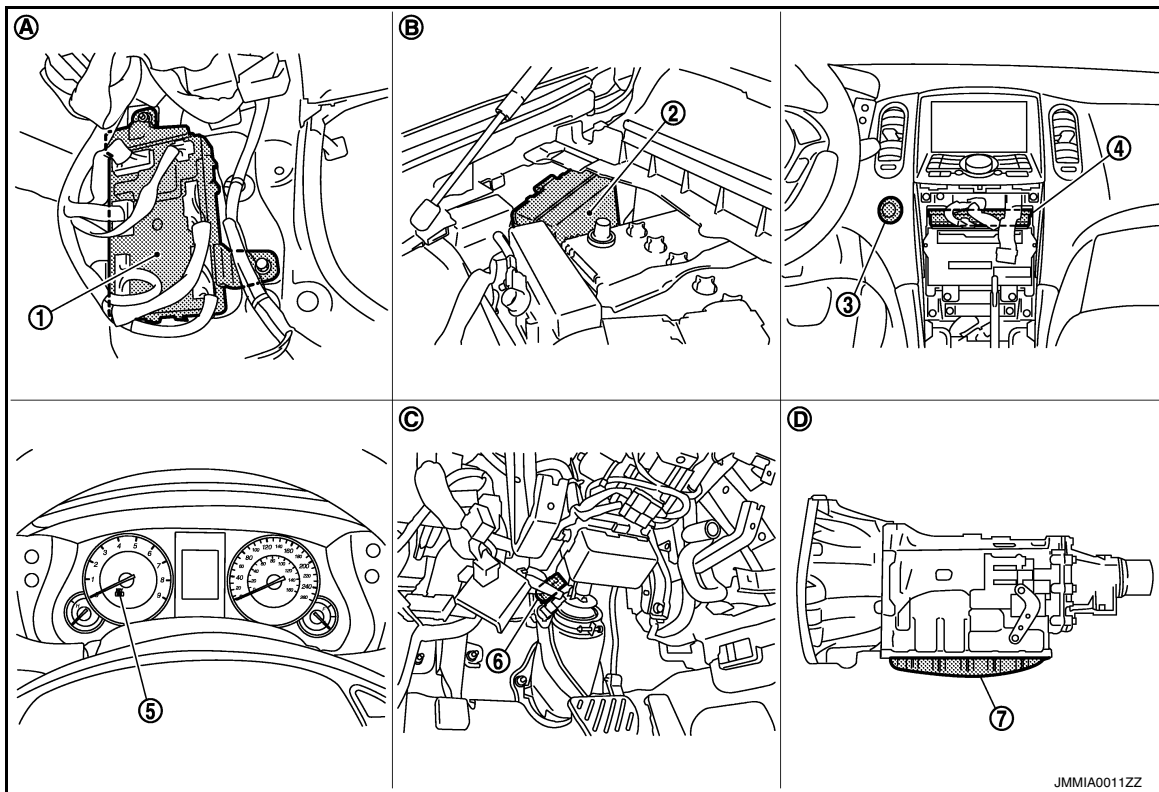

- |  |   |   |
|--|---|---|
| 1. BCM M118, M119, M121, M122, M123    | 2. IPDM E/R E5, E6, E7                      | 3. Push-button ignition switch M50          |
| 4. Unified meter and A/C amp. M66, M67 | 5. Combination meter (Key warning lamp) M53 | 6. Stop lamp switch E110                    |
| 7. TCM F151 (built into A/T assembly)  |   |   |
| A. Dash side lower (passenger side)    | B. Engine room dash panel (RH)              | C. Behind the instrument driver lower panel |
| D. A/T assembly                        |   |   |

# POWER DISTRIBUTION SYSTEM

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

## Component Description

INFOID:000000012173414

Component	Reference
IPDM E/R	<a href="#">PCS-5</a>
Ignition relay (Built-in IPDM E/R)	<a href="#">PCS-54</a>
Ignition relay (Built-in fuse block)	<a href="#">PCS-52</a>
Accessory relay	<a href="#">PCS-56</a>
Blower relay	<a href="#">PCS-59</a>
Stop lamp switch	<a href="#">SEC-47</a>
Transmission range switch	<a href="#">SEC-62</a>
Push-button ignition switch	<a href="#">PCS-69</a>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000012772709

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> <li>Read and save the vehicle specification.</li> <li>Write the vehicle specification when replacing BCM.</li> </ul>

### SYSTEM APPLICATION

BCM can perform the following functions for each system.

#### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*			
<ul style="list-style-type: none"> <li>Intelligent Key system</li> <li>Engine start system</li> </ul>	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
IVIS - NATS	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door open system	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR		×	
Signal buffer system	SIGNAL BUFFER		×	×
TPMS	AIR PRESSURE MONITOR	×	×	×

#### NOTE:

\*: This item is displayed, but is not used.

### FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

# DIAGNOSIS SYSTEM (BCM)

## [POWER DISTRIBUTION SYSTEM]

< SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description	
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected	
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected	
Vehicle Condition	SLEEP>LOCK	Power supply position status of the moment a particular DTC is detected*	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK"*)
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)
	LOCK>ACC		While turning power supply position from "LOCK"* to "ACC"
	ACC>ON		While turning power supply position from "ACC" to "IGN"
	RUN>ACC		While turning power supply position from "RUN" to "ACC" (Except emergency stop operation)
	CRANK>RUN		While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)
	RUN>URGENT		While turning power supply position from "RUN" to "ACC" (Emergency stop operation)
	ACC>OFF		While turning power supply position from "ACC" to "OFF"
	OFF>LOCK		While turning power supply position from "OFF" to "LOCK"*
	OFF>ACC		While turning power supply position from "OFF" to "ACC"
	ON>CRANK		While turning power supply position from "IGN" to "CRANKING"
	OFF>SLEEP		While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode
	LOCK>SLEEP		While turning BCM status from normal mode (Power supply position is "LOCK"*. ) to low power consumption mode
	LOCK		Power supply position is "LOCK"*
	OFF		Power supply position is "OFF" (Ignition switch OFF)
	ACC		Power supply position is "ACC" (Ignition switch ACC)
	ON		Power supply position is "IGN" (Ignition switch ON with engine stopped)
ENGINE RUN	Power supply position is "RUN" (Ignition switch ON with engine running)		
CRANKING	Power supply position is "CRANKING" (At engine cranking)		
IGN Counter	0 - 39	The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> <li>• The number is 0 when a malfunction is detected now.</li> <li>• The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.</li> <li>• The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.</li> </ul>	

### NOTE:

\*: Power supply position shifts to "LOCK" from "OFF", when ignition switch is in the OFF position, selector lever is in the P position, and any of the following conditions are met.

- Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power supply position shifts to "ACC" when the push-button ignition switch (push switch) is pushed at "LOCK".

## INTELLIGENT KEY

### INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)

INFOID:000000012801436

### WORK SUPPORT

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Monitor item	Description
CONFIRM KEY FOB ID	It can be checked whether Intelligent Key ID code is registered or not in this mode.
AUTO LOCK SET	Auto door lock time can be changed in this mode. <ul style="list-style-type: none"> <li>• MODE 1: 1 minute</li> <li>• MODE 2: 5 minutes</li> <li>• MODE 3: 30 seconds</li> <li>• MODE 4: 2 minutes</li> </ul>
LOCK/UNLOCK BY I-KEY	Door lock/unlock function by door request switch (driver side, passenger side and back door) mode can be changed to operate (ON) or not operate (OFF) in this mode.
ENGINE START BY I-KEY	Engine start function mode can be changed to operate (ON) or not operate (OFF) with this mode.
TRUNK/GLASS HATCH OPEN	Buzzer reminder function mode by back door request switch can be changed to operate (ON) or not operate (OFF) with this mode.
PANIC ALARM SET	Panic alarm button pressing time on Intelligent Key remote control button can be selected from the following with this mode. <ul style="list-style-type: none"> <li>• MODE 1: 0.5 sec.</li> <li>• MODE 2: Non-operation</li> <li>• MODE 3: 1.5 sec.</li> </ul>
PW DOWN SET	Unlock button pressing time on Intelligent Key button can be selected from the following with this mode. <ul style="list-style-type: none"> <li>• MODE 1: 3 sec.</li> <li>• MODE 2: Non-operation</li> <li>• MODE 3: 5 sec.</li> </ul>
TAKE OUT FROM WIN WARN	<b>NOTE:</b> This item is displayed, but cannot be supported.
TRUNK OPEN DELAY	<b>NOTE:</b> This item is displayed, but cannot be supported.
LO- BATT OF KEY FOB WARN	Intelligent Key low battery warning mode can be changed to operate (ON) or not operate (OFF) with this mode.
ANTI KEY LOCK IN FUNCTI	Key reminder function mode can be changed to operate (ON) or not operate (OFF) with this mode.
HAZARD ANSWER BACK	Hazard reminder function mode can be selected from the following with this mode. <ul style="list-style-type: none"> <li>• LOCK ONLY: Door lock operation only</li> <li>• UNLOCK ONLY: Door unlock operation only</li> <li>• LOCK/UNLOCK: Lock/unlock operation</li> <li>• OFF: Non-operation</li> </ul>
ANS BACK I-KEY LOCK	Buzzer reminder function (lock operation) mode by door request switch (driver side and passenger side) can be selected from the following with this mode. <ul style="list-style-type: none"> <li>• Horn chirp: Sound horn</li> <li>• Buzzer: Sound Intelligent Key warning buzzer</li> <li>• OFF: Non-operation</li> </ul>
ANS BACK I-KEY UNLOCK	Buzzer reminder function (unlock operation) mode by door request switch can be changed to operate (ON) or not operate (OFF) with this mode.
SHORT CRANKING OUTPUT	Starter motor can operate during the times below. <ul style="list-style-type: none"> <li>• 70 msec.</li> <li>• 100 msec.</li> <li>• 200 msec.</li> </ul>
INSIDE ANT DIAGNOSIS	This function allows inside key antenna self-diagnosis.
HORN WITH KEYLESS LOCK	Horn reminder function mode by Intelligent Key button can be changed to operate (ON) or not operate (OFF) with this mode.
WELCOME LIGHT OP SET	Welcome light function mode can be changed to operate (WITH) or not operate (WITHOUT) with this mode.
WELCOME LIGHT SELECT	Welcome light function mode can be selected from the following with this mode. <ul style="list-style-type: none"> <li>• Without room lamp</li> <li>• With room lamp</li> <li>• Without paddle lamp</li> <li>• With paddle lamp</li> </ul>

# DIAGNOSIS SYSTEM (BCM)

[POWER DISTRIBUTION SYSTEM]

< SYSTEM DESCRIPTION >

## SELF-DIAG RESULT

Refer to [BCS-90, "DTC Index"](#).

## DATA MONITOR

### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition
REQ SW -DR	Indicates [ON/OFF] condition of door request switch (driver side).
REQ SW -AS	Indicates [ON/OFF] condition of door request switch (passenger side).
REQ SW -RR	<b>NOTE:</b> This item is displayed, but cannot be monitored.
REQ SW -RL	<b>NOTE:</b> This item is displayed, but cannot be monitored.
REQ SW -BD/TR	Indicates [ON/OFF] condition of back door request switch.
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.
IGN RLY2 -F/B	Indicates [ON/OFF] condition of ignition relay 2.
CLUCH SW	<b>NOTE:</b> This item is displayed, but cannot be monitored.
BRAKE SW 1	Indicates [ON/OFF] condition of brake switch power supply.
BRAKE SW 2	Indicates [ON/OFF] condition of brake switch.
DETE/CANCL SW	Indicates [ON/OFF] condition of P position.
SFT PN/N SW	Indicates [ON/OFF] condition of P or N position.
S/L -LOCK	<b>NOTE:</b> This item is displayed, but cannot be monitored.
S/L -UNLOCK	<b>NOTE:</b> This item is displayed, but cannot be monitored.
S/L RELAY -F/B	<b>NOTE:</b> This item is displayed, but cannot be monitored.
UNLK SEN -DR	Indicates [ON/OFF] condition of driver door UNLOCK status.
PUSH SW -IPDM	Indicates [ON/OFF] condition of push-button ignition switch.
IGN RLY1 -F/B	Indicates [ON/OFF] condition of ignition relay 1.
DETE SW -IPDM	Indicates [ON/OFF] condition of P position.
SFT PN -IPDM	Indicates [ON/OFF] condition of P or N position.
SFT P -MET	Indicates [ON/OFF] condition of P position.
SFT N -MET	Indicates [ON/OFF] condition of N position.
ENGINE STATE	Indicates [STOP/START/CRANK/RUN] condition of engine states.
S/L LOCK-IPDM	<b>NOTE:</b> This item is displayed, but cannot be monitored.
S/L UNLK-IPDM	<b>NOTE:</b> This item is displayed, but cannot be monitored.
S/L RELAY-REQ	<b>NOTE:</b> This item is displayed, but cannot be monitored.
VEH SPEED 1	Display the vehicle speed signal received from unified meter and A/C amp. by numerical value [Km/h].
VEH SPEED 2	Display the vehicle speed signal received from ABS or VDC or CVT by numerical value [Km/h].
DOOR STAT-DR	Indicates [LOCK/READY/UNLOCK] condition of driver side door status.
DOOR STAT-AS	Indicates [LOCK/READY/UNLOCK] condition of passenger side door status.
ID OK FLAG	Indicates [SET/RESET] condition of key ID.
PRMT ENG STRT	Indicates [SET/RESET] condition of engine start possibility.

A

B

C

D

E

F

G

H

I

J

K

L

PCS

N

O

P

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition
PRMT RKE STRT	<b>NOTE:</b> This item is displayed, but cannot be monitored.
KEY SW -SLOT	Indicates [ON/OFF] condition of key slot.
TRNK/HAT MNTR	<b>NOTE:</b> This item is displayed, but cannot be monitored.
RKE-LOCK	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
RKE-UNLOCK	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
RKE-TR/BD	<b>NOTE:</b> This item is displayed, but cannot be monitored.
RKE-PANIC	Indicates [ON/OFF] condition of PANIC button of Intelligent Key.
RKE-P/W OPEN	Indicates [ON/OFF] condition of P/W DOWN signal from Intelligent Key.
RKE-MODE CHG	Indicates [ON/OFF] condition of MODE CHANGE signal from Intelligent Key.
RKE OPE COUN1	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
RKE OPE COUN2	<b>NOTE:</b> This item is displayed, but cannot be monitored.

## ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check interior room lamp operation. The interior room lamp will be activated after "ON" on CONSULT screen is touched.
PW REMOTO DOWN SET	This test is able to check power window down operation. The power window down will be activated after "ON" on CONSULT screen is touched.
INSIDE BUZZER	This test is able to check warning chime in combination meter operation. <ul style="list-style-type: none"> <li>• Take away warning chime sounds when "TAKE OUT" on CONSULT screen is touched.</li> <li>• Key warning chime sounds when "KEY WARN" on CONSULT screen is touched.</li> <li>• P position warning chime sounds when "P RNG WARN" on CONSULT screen is touched.</li> <li>• ACC warning chime sounds when "ACC WARN" on CONSULT screen is touched.</li> </ul>
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation. The Intelligent Key warning buzzer will be activated after "ON" on CONSULT screen is touched.
INDICATOR	This test is able to check warning lamp operation. <ul style="list-style-type: none"> <li>• "KEY" Warning lamp illuminates when "KEY ON" on CONSULT screen is touched.</li> <li>• "KEY" Warning lamp flashes when "KEY IND" on CONSULT screen is touched.</li> </ul>
INT LAMP	This test is able to check interior room lamp operation. The interior room lamp will be activated after "ON" on CONSULT screen is touched.
LCD	This test is able to check meter display information <ul style="list-style-type: none"> <li>• Engine start information displays when "BP N" on CONSULT screen is touched.</li> <li>• Engine start information displays when "BP I" on CONSULT screen is touched.</li> <li>• Key ID warning displays when "ID NG" on CONSULT screen is touched.</li> <li>• ROTAT: This item is displayed, but cannot be tested.</li> <li>• P position warning displays when "SFT P" on CONSULT screen is touched.</li> <li>• Intelligent Key insert information displays when "INSRT" on CONSULT screen is touched.</li> <li>• Intelligent Key low battery warning displays when "BATT" on CONSULT screen is touched.</li> <li>• Take away through window warning displays when "NO KY" on CONSULT screen is touched.</li> <li>• Take away warning display when "OUTKY" on CONSULT screen is touched.</li> <li>• OFF position warning display when "LK WN" on CONSULT screen is touched.</li> </ul>
TRUNK/GLASS HATCH	This test is able to check back door opener actuator open operation. This actuator opens when "ON" on CONSULT screen is touched.
FLASHER	This test is able to check hazard warning lamp operation. The hazard warning lamps will be activated after "ON" on CONSULT screen is touched.
HORN	This test is able to check horn operation. The horn will be activated after "ON" on CONSULT screen is touched.
P RANGE	This test is able to check A/T shift selector power supply A/T shift selector power is supplied when "ON" on CONSULT screen is touched.



# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

[POWER DISTRIBUTION SYSTEM]

Test item	Description
ENGINE SW ILLUMI	This test is able to check push-ignition switch illumination operation. Push-ignition switch illumination illuminates when "ON" on CONSULT screen is touched.
LOCK INDICATOR	This test is able to check LOCK indicator in push-ignition switch operation. LOCK indicator in push-ignition switch illuminates when "ON" on CONSULT screen is touched;
ACC INDICATOR	This test is able to check ACC indicator in push-ignition switch operation. Indicator in push-ignition switch illuminates when "ON" on CONSULT screen is touched.
IGNITION ON IND	This test is able to check ON indicator in push-ignition switch operation. Indicator in push-ignition switch illuminates when "ON" on CONSULT screen is touched.
KEY SLOT ILLUMI	This test is able to check key slot illumination operation. Key slot illumination flash when "ON" on CONSULT screen is touched.
TRUNK/BACK DOOR	<b>NOTE:</b> This item is displayed, but cannot be tested.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

PCS

N  
O  
P

# DTC/CIRCUIT DIAGNOSIS

## U1000 CAN COMM

### Description

INFOID:0000000012173417

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H-line, CAN L-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.  
 CAN Communication Signal Chart. Refer to [LAN-28, "CAN Communication Signal Chart"](#).

### DTC Logic

INFOID:0000000012173418

### DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible cause
U1000	CAN COMM	When BCM cannot communicate CAN communication signal continuously for 2 seconds or more.	CAN communication system

### Diagnosis Procedure

INFOID:0000000012173419

#### 1. PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result".

#### Is DTC "U1000" displayed?

- YES >> Refer to [LAN-18, "Trouble Diagnosis Flow Chart"](#).
- NO >> Refer to [GI-42, "Intermittent Incident"](#).

# U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## U1010 CONTROL UNIT (CAN)

### DTC Logic

INFOID:000000012173420

### DTC DETECTION LOGIC

DTC	CONSULT display description	DTC Detection Condition	Possible cause
U1010	CONTROL UNIT(CAN)	BCM detected internal CAN communication circuit malfunction.	BCM

### Diagnosis Procedure

INFOID:000000012173421

#### 1. REPLACE BCM

When DTC "U1010" is detected, replace BCM.

>> Replace BCM. Refer to [BCS-97. "Exploded View"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L

PCS

N  
O  
P

# B2553 IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## B2553 IGNITION RELAY

### Description

INFOID:000000012173422

BCM turns ON the following relays to ignition power supply to each ECU when the ignition switch is turned ON.

- Ignition relay (inserted into fuse block)
- Ignition relay (built into IPDM E/R)
- Blower relay

BCM checks any ignition relay ON request for consistency with the actual ignition relay operation status.

### DTC Logic

INFOID:000000012173423

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2553	IGN POWER CIRCUIT	BCM detects a difference of signal for 2 seconds or more between the following information. <ul style="list-style-type: none"><li>• Ignition relay ON/OFF operation</li><li>• Ignition relay (IPDM E/R) feedback.</li></ul>	<ul style="list-style-type: none"><li>• Harness or connectors (Ignition relay feedback circuit is open or short)</li><li>• BCM</li><li>• IPDM E/R</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions (start the engine), and wait for at least 2 seconds.
  - Selector lever is in the P or N position.
  - Do not depress brake pedal.
2. Check "Self diagnostic result" with CONSULT.

#### Is DTC detected?

- YES >> Go to [PCS-52, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000012173424

#### 1.CHECK DTC WITH IPDM E/R

Check "Self diagnostic result" with CONSULT. Refer to [PCS-32, "DTC Index"](#).

#### Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace malfunctioning parts.

#### 2.CHECK IGNITION RELAY FEEDBACK INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)	
BCM					
Connector	Terminal				
M123	123	Ground	Ignition switch	OFF	0
				ON	Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 4.  
NO >> GO TO 3.

#### 3.CHECK IGNITION RELAY FEEDBACK CIRCUIT

# B2553 IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

1. Disconnect IPDM E/R connector.
2. Check continuity between BCM harness connector and IPDM E/R harness connector.

BCM		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M123	123	E5	19	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M123	123		Not existed

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35. "Removal and Installation"](#).
- NO >> Repair or replace harness or connector.

## 4. CHECK INTERMITTENT INCIDENT

Refer to [GI-42. "Intermittent Incident"](#).

>> INSPECTION END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# B260A IGNITION RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## B260A IGNITION RELAY

### Description

INFOID:000000012173425

BCM turns ON the following relays to ignition power supply to each ECU when the ignition switch is turned ON.

- Ignition relay (inserted into fuse block)
- Ignition relay (built into IPDM E/R)
- Blower fan motor relay

BCM checks any ignition relay ON request for consistency with the actual ignition relay operation status.

### DTC Logic

INFOID:000000012173426

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B260A is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-50, "DTC Logic"](#).
- If DTC B260A is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [PCS-51, "DTC Logic"](#).
- If DTC B260A is displayed with DTC B261A, first perform the trouble diagnosis for DTC B261A. Refer to [PCS-66, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B260A	IGNITION RELAY	BCM detects a difference of signal for 2 second or more between the following information. <ul style="list-style-type: none"><li>• Ignition relay (IPDM E/R) operation request</li><li>• Ignition relay feedback from IPDM E/R (CAN).</li></ul>	<ul style="list-style-type: none"><li>• Harness or connectors (Ignition relay operation circuit is open or shorted.)</li><li>• BCM</li><li>• IPDM E/R</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 2 seconds.
  - Selector lever is in the P or N position.
  - Do not depress brake pedal.
2. Check "Self diagnostic result" with CONSULT.

#### Is DTC detected?

- YES >> Go to [PCS-54, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000012173427

#### 1. CHECK DTC WITH IPDM E/R

Check "Self diagnostic result" with CONSULT. Refer to [PCS-32, "DTC Index"](#).

#### Is DTC detected?

- YES >> Repair or replace the malfunctioning parts.  
NO >> GO TO 2.

#### 2. CHECK IGNITION RELAY INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M121	47	Ground	Battery voltage

# B260A IGNITION RELAY

[POWER DISTRIBUTION SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

## 3. CHECK IGNITION RELAY (IPDM E/R) CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and BCM harness connector.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E5	27	M121	47	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	27		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-35. "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

## 4. CHECK INTERMITTENT INCIDENT

Refer to [GI-42. "Intermittent Incident"](#).

>> INSPECTION END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# B2614 ACC RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## B2614 ACC RELAY

### Description

INFOID:000000012173428

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.  
BCM checks the power supply position internally.

### DTC Logic

INFOID:000000012173429

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2614	ACC RELAY CIRC	An immediate operation of accessory relay is requested by BCM, but there is no response for more than 1 second.	<ul style="list-style-type: none"> <li>Harness or connectors (Accessory relay circuit is open or shorted)</li> <li>Accessory relay</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

- Turn the power supply position to ACC under the following conditions, and wait for at least 1 second.
  - Selector lever is in the P or N position.
  - Do not depress brake pedal.
- Check "Self diagnostic result" with CONSULT.

#### Is DTC detected?

- YES >> Go to [PCS-56, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000012173430

#### 1. CHECK ACCESSORY RELAY POWER SUPPLY

- Turn ignition switch OFF.
- Disconnect accessory relay.
- Check voltage between accessory relay harness connector and ground.

(+)	(-)	Condition	Voltage (V) (Approx.)
Accessory relay Terminal			
1	Ground	Ignition switch	0
			Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2. CHECK ACCESSORY RELAY POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect BCM connector.
- Check continuity between accessory relay harness connector and BCM harness connector.

Accessory relay Terminal	BCM		Continuity
	Connector	Terminal	
1	M122	95	Existed

- Check continuity between accessory relay harness connector and ground.



# B2614 ACC RELAY

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Accessory relay	Ground	Continuity
Terminal		
1		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-97, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

## 3.CHECK ACCESSORY RELAY GROUND CIRCUIT

Check continuity between accessory relay harness connector and ground.

Accessory relay	Ground	Continuity
Terminal		
2		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair accessory relay ground circuit.

## 4.CHECK ACCESSORY RELAY POWER SUPPLY CIRCUIT-2

1. Turn ignition switch ACC.
2. Check voltage between accessory relay harness connector and ground.

(+)	(-)	Voltage (V) (Approx.)
Accessory		
Terminal		
5	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check continuity open or short between accessory relay and battery.

## 5.CHECK ACCESSORY RELAY

Refer to [PCS-57, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace accessory relay.

## 6.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:000000012173431

## 1.CHECK ACCESSORY RELAY

1. Turn ignition switch OFF.
2. Remove accessory relay.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# B2614 ACC RELAY

## < DTC/CIRCUIT DIAGNOSIS >

## [POWER DISTRIBUTION SYSTEM]


3. Check the continuity between accessory relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
	No current supply	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace accessory relay.

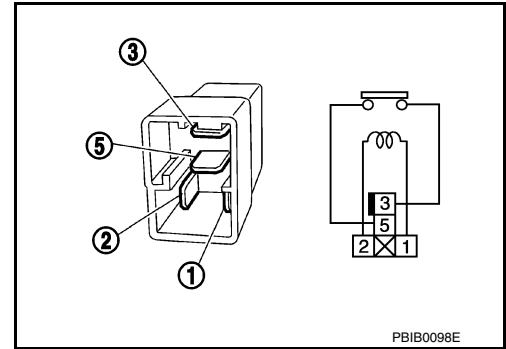

# B2615 BLOWER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## B2615 BLOWER RELAY CIRCUIT

### Description

INFOID:0000000012173432

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.  
BCM checks the power supply position internally.

### DTC Logic

INFOID:0000000012173433

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2615	BLOWER RELAY CIRC	BCM detects a difference of signal for 1 second or more between the following information. • Blower relay ON/OFF request • Blower relay inside feedback	• Harness or connectors (Blower relay circuit is open or shorted) • Blower relay

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON under the following conditions, and wait for at least 1 second.
  - Selector lever is in the P or N position
  - Do not depress brake pedal
- Check "Self diagnostic result" with CONSULT.

#### Is DTC detected?

- YES >> Go to [PCS-59. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000012173434

#### 1. CHECK BLOWER RELAY POWER SUPPLY

- Turn ignition switch OFF.
- Disconnect blower relay.
- Check voltage between blower relay harness connector and ground.

(+)	(-)	Condition	Voltage (V) (Approx.)
Blower relay Terminal			
1	Ground	Ignition switch	OFF or ACC
			ON

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2. CHECK BLOWER RELAY POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect BCM connector.
- Check continuity between blower relay harness connector and BCM harness connector.

Blower relay Terminal	BCM		Continuity
	Connector	Terminal	
1	M122	102	Existed

- Check continuity between blower relay harness connector and ground.

# B2615 BLOWER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Blower relay	Ground	Continuity
Terminal		
1		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-97, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

## 3.CHECK BLOWER RELAY GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between blower relay harness connector and ground.

Blower relay	Ground	Continuity
Terminal		
2		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair blower relay ground circuit.

## 4.CHECK BLOWER RELAY POWER SUPPLY CIRCUIT-2

1. Turn ignition switch ON or ACC.
2. Check voltage between blower relay harness connector and ground.

(+)	(-)	Voltage (V) (Approx.)
Blower relay		
Terminal		
5	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO >> Check continuity open or short between blower relay and battery.

## 5.CHECK BLOWER RELAY

Refer to [PCS-60, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace blower relay.

## 6.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:000000012173435

### 1.CHECK BLOWER RELAY

1. Turn ignition switch OFF.
2. Remove blower relay.

# B2615 BLOWER RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >


[POWER DISTRIBUTION SYSTEM]

3. Check the continuity between blower relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
	No current supply	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace blower relay.

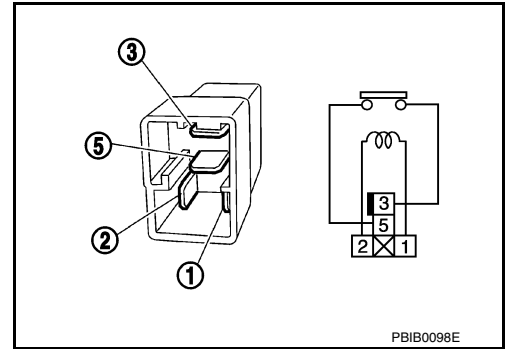

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## B2616 IGNITION RELAY CIRCUIT

### Description

INFOID:000000012173436

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.  
BCM checks the power supply position internally.

### DTC Logic

INFOID:000000012173437

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2616	IGN RELAY CIRC	An immediate operation of ignition relay (fuse block) is requested by BCM, but there is no response for more than 1 second	<ul style="list-style-type: none"> <li>Harness or connectors (Ignition relay circuit is open or shorted)</li> <li>Ignition relay (fuse block)</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

- Turn ignition switch ON under the following conditions, and wait for at least 1 second.
  - Selector lever is in the P or N position.
  - Do not depress brake pedal.
- Check "Self diagnostic result" with CONSULT.

#### Is DTC detected?

- YES >> Go to [PCS-62, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000012173438

#### 1. CHECK IGNITION RELAY POWER SUPPLY

- Turn ignition switch OFF.
- Disconnect ignition relay.
- Check voltage between ignition relay harness connector and ground.

(+)	(-)	Condition	Voltage (V) (Approx.)
Ignition relay Terminal			
1	Ground	Ignition switch	0
			Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2. CHECK IGNITION RELAY POWER SUPPLY CIRCUIT

- Turn ignition switch OFF.
- Disconnect BCM connector.
- Check continuity between ignition relay harness connector and BCM harness connector.

Ignition relay Terminal	BCM		Continuity
	Connector	Terminal	
1	M122	82	Existed

- Check continuity between ignition relay harness connector and ground.

# B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Ignition relay	Ground	Continuity
Terminal		
1		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-97, "Removal and Installation"](#).  
NO >> Repair or replace harness or connector.

## 3.CHECK IGNITION RELAY GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between ignition relay harness connector and ground.

Ignition relay	Ground	Continuity
Terminal		
2		Existed

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Repair ignition relay ground circuit.

## 4.CHECK IGNITION RELAY POWER SUPPLY CIRCUIT-2

1. Turn ignition switch ON.
2. Check voltage between ignition relay harness connector and ground.

(+)	(-)	Voltage (V) (Approx.)
Ignition relay		
Terminal		
5	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 5.  
NO >> Check continuity open or short between ignition relay and battery.

## 5.CHECK IGNITION RELAY

Refer to [PCS-63, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 6.  
NO >> Replace ignition relay.

## 6.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:000000012173439

### 1.CHECK IGNITION RELAY

1. Turn ignition switch OFF.
2. Remove ignition relay.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# B2616 IGNITION RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >


[POWER DISTRIBUTION SYSTEM]

3. Check the continuity between ignition relay terminals.

Terminals	Condition	Continuity
3 and 5	12 V direct current supply between terminals 1 and 2	Existed
	No current supply	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace Ignition relay.

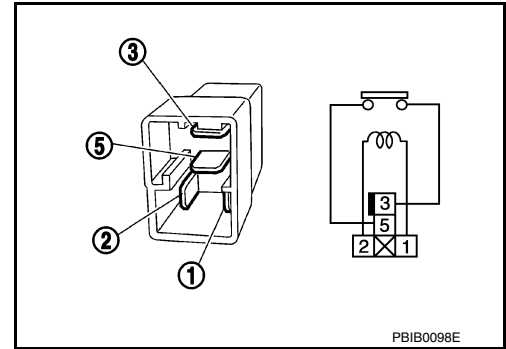



B2618 BCM

Description

INFOID:0000000012173440

BCM controls the various electrical components and simultaneously supplies power according to the power supply position.  
 BCM checks the power supply position internally.

DTC Logic

INFOID:0000000012173441

DTC DETECTION LOGIC

NOTE:

- If DTC B2618 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-50, "DTC Logic"](#).
- If DTC B2618 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [PCS-51, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2618	BCM	An immediate operation of ignition relay (IPDM E/R) is requested by BCM, but there is no response for more than 1 second	BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions, and wait for at least 1 second.
  - Selector lever is in the P or N position.
  - Do not depress brake pedal.
2. Check "Self diagnostic result" with CONSULT.

Is DTC detected?

- YES >> Go to [PCS-65, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000012173442

1. INSPECTION START

1. Turn ignition switch ON.
2. Select "Self diagnostic result" mode with CONSULT.
3. Touch "ERASE".
4. **Perform DTC Confirmation Procedure.**  
 See [PCS-65, "DTC Logic"](#).

Is the 1st trip DTC B2618 displayed again?

- YES >> Replace BCM. Refer to [BCS-97, "Removal and Installation"](#)
- NO >> INSPECTION END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# B261A PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## B261A PUSH-BUTTON IGNITION SWITCH

### Description

INFOID:000000012173443

BCM transmits the change in the power supply position with the push-button ignition switch to IPDM E/R via the CAN communication line. IPDM E/R transmits the power supply position status via CAN communication line to BCM.

### DTC Logic

INFOID:000000012173444

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B261A	PUSH-BTN IGN SW	BCM detects a difference of signal for 1 second or more between the following information. <ul style="list-style-type: none"> <li>• Push-button ignition switch (push switch) signal</li> <li>• Push-button ignition switch status signal from IPDM E/R (CAN)</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (Push-button ignition switch circuit is open or shorted.)</li> <li>• BCM</li> <li>• IPDM E/R</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Press the push-button ignition switch under the following conditions, and wait for 1 second or more.
  - Selector lever is in the P or N position.
  - Do not depress brake pedal.
2. Check "Self diagnostic result" with CONSULT.

#### Is DTC detected?

- YES >> Go to [PCS-66, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000012173445

#### 1. CHECK BCM OUTPUT

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector and IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal	Ground	Battery voltage
E5	28		

#### Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).

#### 2. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT (IPDM E/R)

1. Disconnect IPDM E/R connector and BCM connector.
2. Check continuity between IPDM E/R harness connector and push-button ignition switch harness connector.

IPDM E/R		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
E5	28	M50	4	Existed

3. Check continuity between IPDM E/R harness connector and ground.

# B261A PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

IPDM E/R		Ground	Continuity
Connector	Terminal		
E5	28		Not existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-97, "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## POWER SUPPLY AND GROUND CIRCUIT

### BCM

#### BCM : Diagnosis Procedure

INFOID:000000012772730

#### 1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown (open).

Signal name	Fuse and fusible link No.
Battery power supply	K
	10

Is the fuse or fusible link is blown (open)?

- YES >> Replace the blown (open) fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown (open).  
NO >> GO TO 2.

#### 2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground  Battery voltage
Connector	Terminal	
M118	1	
M119	11	

Is the measurement value normal?

- YES >> GO TO 3.  
NO >> Repair harness or connector.

#### 3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	13		Existed

Does continuity exist?

- YES >> INSPECTION END  
NO >> Repair harness or connector.

# PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## PUSH-BUTTON IGNITION SWITCH

### Description

INFOID:0000000012173447

BCM transmits the change in the power supply position with the push-button ignition switch to IPDM E/R via the CAN communication line. IPDM E/R transmits the power supply position status via CAN communication line to BCM.

### Component Function Check

INFOID:0000000012173448

#### 1.CHECK FUNCTION

1. Select "PUSH SW" in "Data Monitor" mode with CONSULT.
2. Check the push-button ignition switch signal under the following condition.

Test item	Condition	Status
PUSH SW	Push-button ignition switch is pressed	ON
	Push-button ignition switch is not pressed	OFF

Is the indication normal?

- YES >> INSPECTION END  
NO >> Go to [PCS-69, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000012173449

#### 1.CHECK PUSH-BUTTON IGNITION SWITCH OUTPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector and IPDM E/R connector.
3. Check voltage between push-button ignition switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Push-button ignition switch			
Connector	Terminal	Ground	Battery voltage
M50	4		

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

BCM		Push-button ignition switch		Continuity
Connector	Terminal	Connector	Terminal	
M121	60	M50	4	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M121	60		Not existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-97, "Removal and Installation"](#).  
NO >> Repair or replace harness.

#### 3.CHECK PUSH-BUTTON IGNITION SWITCH GROUND CIRCUIT

Check continuity between push-button ignition switch harness connector and ground.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

Push-button ignition switch		Ground	Continuity
Connector	Terminal		Existed
M50	1		

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

## 4.CHECK PUSH-BUTTON IGNITION SWITCH

Refer to [PCS-70. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace push-button ignition switch. Refer to [PCS-129. "Removal and Installation"](#).

## 5.CHECK INTERMITTENT INCIDENT

Refer to [GI-42. "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:000000012173450

## 1.CHECK PUSH-BUTTON IGNITION SWITCH

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check continuity between push-button ignition switch terminals.

Push-button ignition switch		Condition	Continuity
Terminal			Existed
1	4	Push-button ignition switch Pressed	Existed
		Not pressed	Not existed

Is the inspection result normal?

YES >> INSPECTION END.

NO >> Replace push-button ignition switch. Refer to [PCS-129. "Removal and Installation"](#).

# PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

### Description

INFOID:0000000012173451

The switch that changes the power supply position.  
BCM maintains the power supply position status.  
BCM changes the power supply position with the operation of the push-button ignition switch.

### Component Function Check

INFOID:0000000012173452

#### 1.CHECK FUNCTION

Check push-button ignition switch ("LOCK INDICATOR", "ACC INDICATOR" and "IGNITION ON IND") in Active Test Mode with CONSULT.

Test item		Description	
LOCK INDICATOR ACC INDICATOR IGNITION ON IND	ON	Position indicator	Illuminate
	OFF		Not illuminate

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Refer to [PCS-71, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000012173453

#### 1.CHECK PUSH-BUTTON IGNITION SWITCH INPUT SIGNAL

- Turn ignition switch OFF.
- Disconnect push-button ignition switch connector.
- Check voltage between push-button ignition switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Push-button ignition switch			
Connector	Terminal	Ground	Battery voltage
M50	8		

Is the inspection normal?

- YES >> GO TO 2.  
NO-1 >> Check 10 A fuse [No. 6, located in fuse block (J/B)].  
NO-2 >> Check harness for open or short between push-button ignition switch and fuse.

#### 2.CHECK BCM INPUT

- Connect push-button ignition switch connector.
- Disconnect BCM connector.
- Check voltage between BCM connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal	Ground	Battery voltage
M119	15		
M122	93		
M123	134		

Is the inspection normal?

- YES >> Replace BCM. Refer to [BCS-97, "Removal and Installation"](#).  
NO >> GO TO 3.

#### 3.CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT

- Disconnect push-button ignition switch connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

2. Check continuity between BCM harness connector and push-button ignition switch harness connector.

Indicator	BCM		Push-button ignition switch		Continuity
	Connector	Terminal	Connector	Terminal	
LOCK	M123	134	M50	5	Existed
ACC	M119	15		6	
ON	M122	93		7	

3. Check continuity between BCM harness connector and ground.

Indicator	BCM		Ground	Continuity
	Connector	Terminal		
LOCK	M123	134	Ground	Not existed
ACC	M119	15		
ON	M122	93		

Is the inspection normal?

YES >> Replace push-button ignition switch. Refer to [PCS-129, "Removal and Installation"](#).

NO >> Repair or replace harness.



# POWER DISTRIBUTION SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## POWER DISTRIBUTION SYSTEM

Wiring Diagram - PDS (POWER DISTRIBUTION SYSTEM) -

INFOID:000000012173454

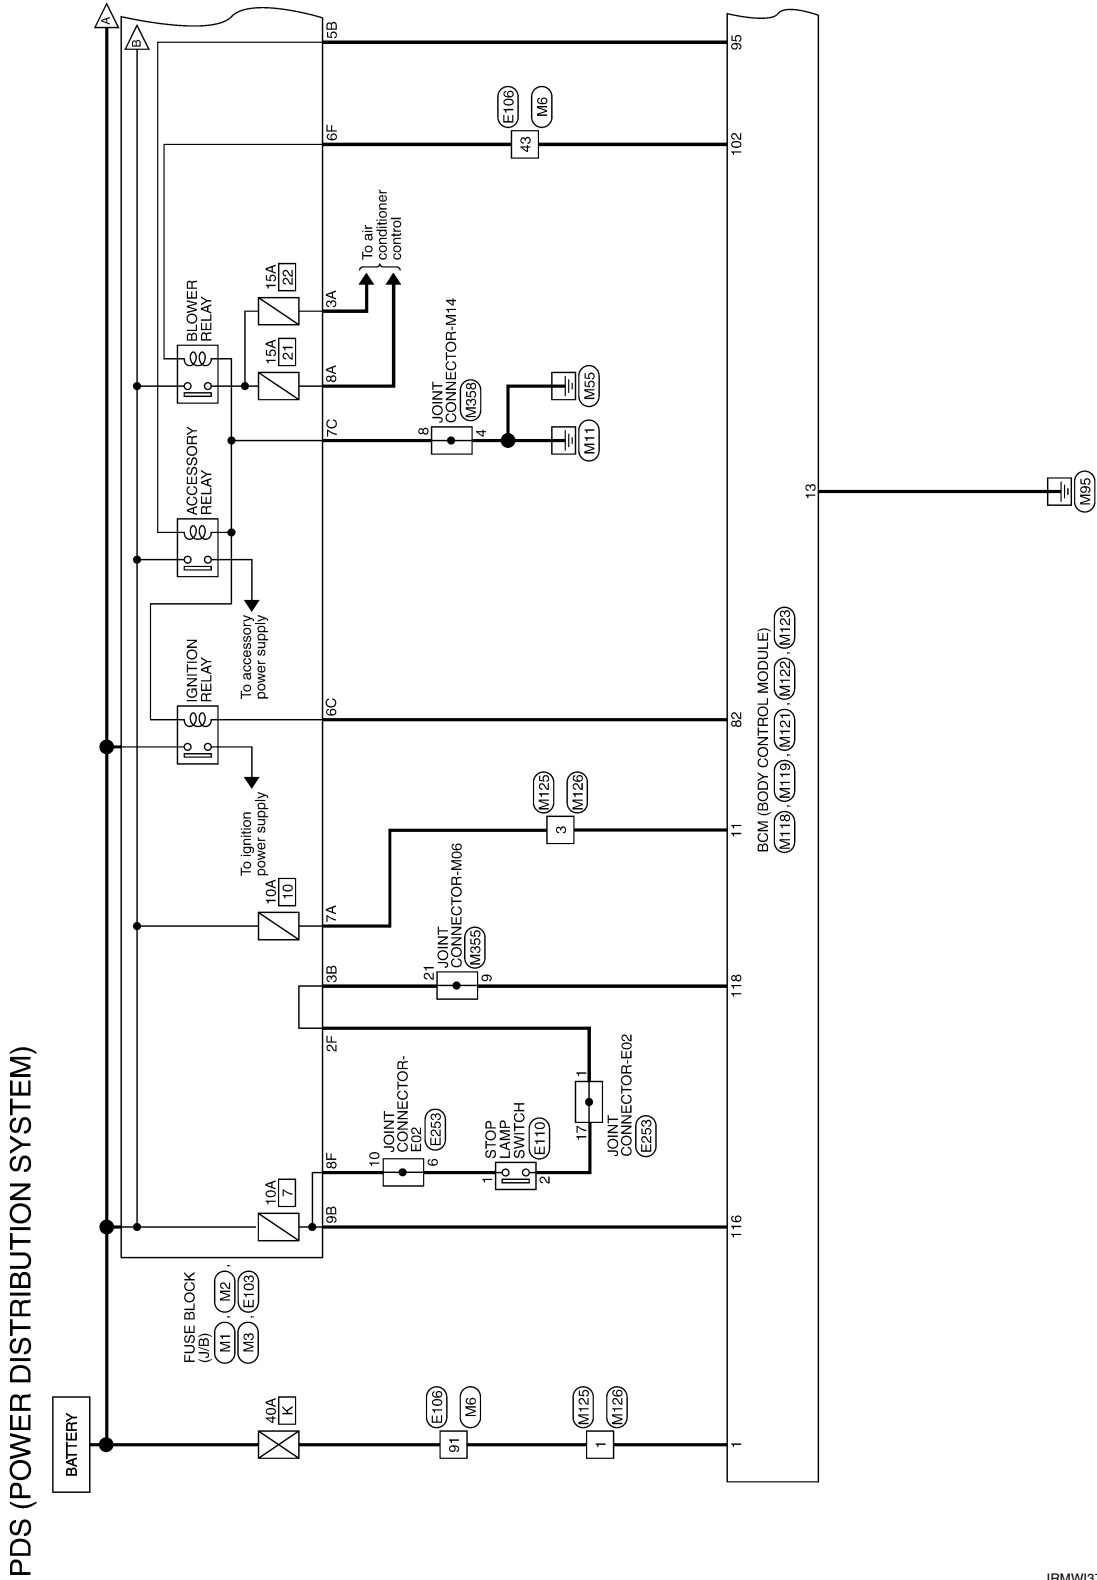

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P


2015/06/22

JRMW13778GB

# POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

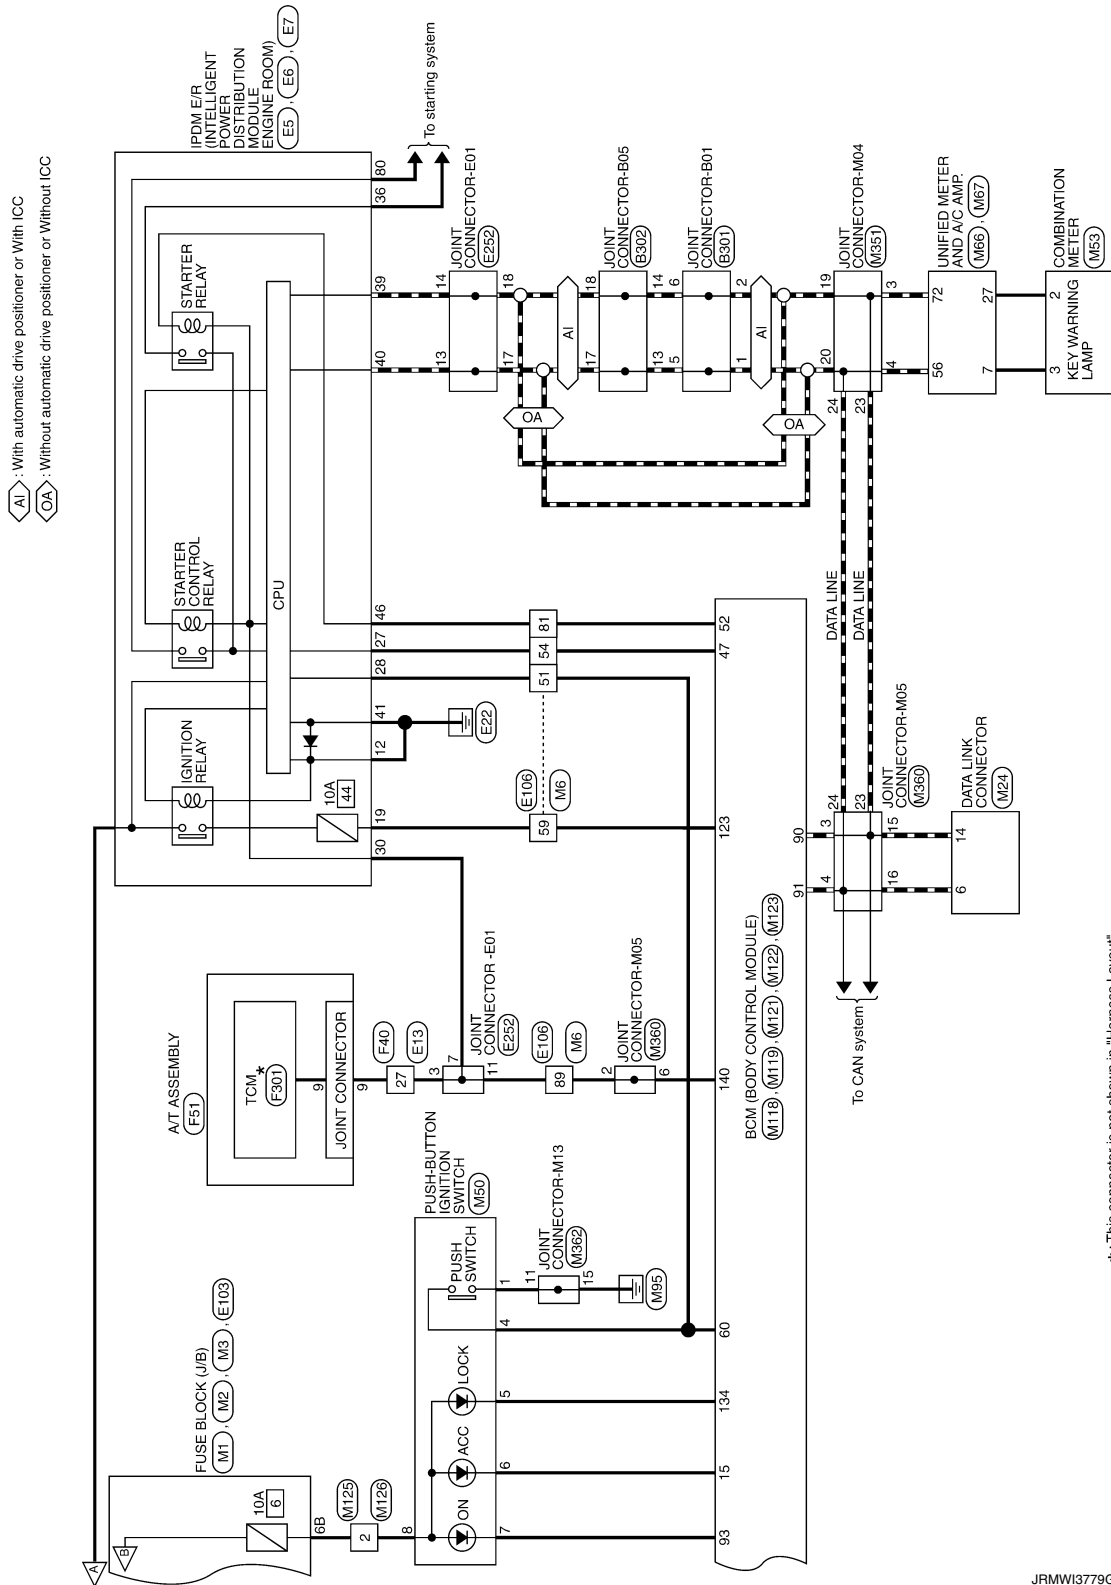

AI: With automatic drive positioner or With ICC  
 OA: Without automatic drive positioner or Without ICC

\*: This connector is not shown in "Harness Layout".

JRMW13779GB


# POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]


## PDS (POWER DISTRIBUTION SYSTEM)

Connector No.	E5D1
Connector Name	JOINT CONNECTOR-B01
Connector Type	NH24FEB-J



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	P	-
3	SB	-
4	LG	-
5	L	-
6	P	-
7	SB	-
8	LG	-
9	L	-
10	P	-
11	SB	-
12	LG	-
13	L	-
14	P	-
15	SB	-
16	Y	-
17	B	-
18	R	-
19	W	-
20	SB	-
21	R	-
22	Y	-
23	B	-
24	SB	-

Connector No.	B3B2
Connector Name	JOINT CONNECTOR-B05
Connector Type	NH24FGY-J



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	L	-
3	Y	-
4	L	-
7	Y	-
8	L	-
11	Y	-
12	L	-
13	L	-
14	P	-
15	Y	-
16	L	-
17	L	-
18	P	-
21	L	-
22	P	-
23	Y	-
24	L	-

Connector No.	E5
Connector Name	PSM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE (ECU)
Connector Type	TH20PW-CS12-IM-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
6	R	-


7	R	-
12	B/W	-
13	Y	-
16	LG	-
19	W	-
25	G	-
26	R	-
27	BG	-
28	L	-
30	GR	-
36	G	-

Connector No.	E6
Connector Name	PSM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE (ECU)
Connector Type	TH08PW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
41	B/W	-
43	SB	-
44	BR	-
45	G	-
46	R	-

Connector No.	E7
Connector Name	PSM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE (ECU)
Connector Type	TH20PW-CS12-M4



Terminal No.	Color Of Wire	Signal Name [Specification]
48	W	-
49	BG	-
51	Y	-
53	W	-
54	P	-
55	SB	-
56	LG	-
57	G	-
58	V	-
69	BR	-
70	BG	-
74	P	-
75	SB	-
76	P	-
77	D	-
80	W	-

Connector No.	E13
Connector Name	WIRE TO WIRE
Connector Type	SAAS3RMB-RSP-SH28



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/Y	-
2	SHIELD	-
3	L/B	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# POWER DISTRIBUTION SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

PDS (POWER DISTRIBUTION SYSTEM)


4	SHIELD	--	--
5	BR	--	--
7	G	--	--
8	W	--	--
9	W	--	--
10	Y	--	--
11	P	--	--
12	SB	--	--
13	L	--	--
14	G	--	--
15	R	--	--
16	G	--	--
18	BG	--	--
19	B	--	--
20	B	--	--
21	SB	--	--
22	W	--	--
23	L	--	--
24	G	--	--
25	LG	--	--
27	GR	--	--
28	V	--	--
29	P	--	--
30	R	--	--
31	BR	--	--
32	Y	--	--
33	G	--	--
34	BG	--	--
37	SHIELD	--	--
38	P	--	--
39	L	--	--
40	R	--	--
41	W	--	--
42	LG	--	--
43	G	--	--
45	BG	--	--
46	SHIELD	--	--
47	W	--	--
48	BR	--	--
49	G	--	--
50	SB	--	--
51	SB	--	--
52	R	--	--

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS18FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1F	W	--
2F	W	--
4F	G	--
6F	BR	--
8F	L	--
9F	R	--

Connector No.	E108
Connector Name	WIRE TO WIRE
Connector Type	TR88PW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	--
2	W	--
3	B	--
4	GR	--
5	GR	--
6	G	--
7	L	--
8	Y	--
9	BR	--
10	BG	--
11	SB	--
12	BG	--
13	L	--

75	W	--	[Without ICC]
76	W	--	[With ICC]
76	Y	--	[Without ICC]
77	P	--	[Without ICC]
77	R	--	[With ICC]
78	BR	--	[Without ICC]
78	L	--	[With ICC]
79	L	--	[Without ICC]
79	Y	--	[With ICC]
80	SB	--	--
81	R	--	--
82	SB	--	--
83	BG	--	--
84	G	--	--
85	G	--	--
86	P	--	--
87	V	--	--
89	GR	--	--
90	SHIELD	--	--
91	W	--	--
92	Y	--	--
93	V	--	--
94	LG	--	--
95	BG	--	--
96	P	--	--
97	R	--	--
98	SHIELD	--	--
99	SB	--	--
100	P	--	--

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	--
2	W	--
3	Y	--
4	SB	--

JRMW13781GB


# POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]


## PDS (POWER DISTRIBUTION SYSTEM)

Connector No.	E232
Connector Name	JOINT CONNECTOR-E21
Connector Type	NH4ZFW-J



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	IGNITION POWER SUPPLY
2	P	BATTERY POWER SUPPLY
3	GR	IGNITION POWER SUPPLY
7	GR	BACK-UP LAMP RELAY
11	GR	IGNITION POWER SUPPLY
13	L	IGNITION POWER SUPPLY
14	P	IGNITION POWER SUPPLY
17	L	IGNITION POWER SUPPLY
18	P	IGNITION POWER SUPPLY
21	L	IGNITION POWER SUPPLY
22	P	IGNITION POWER SUPPLY


Connector No.	E233
Connector Name	JOINT CONNECTOR-E22
Connector Type	SGA28FBR-J



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	IGNITION POWER SUPPLY
2	B	BATTERY POWER SUPPLY
3	G	IGNITION POWER SUPPLY
4	Y	IGNITION POWER SUPPLY
5	P	IGNITION POWER SUPPLY
6	L	IGNITION POWER SUPPLY
7	G	IGNITION POWER SUPPLY
8	Y	IGNITION POWER SUPPLY
10	L	IGNITION POWER SUPPLY

Terminal No.	Color Of Wire	Signal Name [Specification]
11	G	IGNITION POWER SUPPLY
12	W	IGNITION POWER SUPPLY
14	G	IGNITION POWER SUPPLY
15	P	IGNITION POWER SUPPLY
16	R	IGNITION POWER SUPPLY
17	W	IGNITION POWER SUPPLY
18	G	IGNITION POWER SUPPLY
19	GR	IGNITION POWER SUPPLY
20	B	IGNITION POWER SUPPLY
21	R	IGNITION POWER SUPPLY
22	G	IGNITION POWER SUPPLY
23	SHIELD	IGNITION POWER SUPPLY
24	B	IGNITION POWER SUPPLY
25	R	IGNITION POWER SUPPLY
26	G	IGNITION POWER SUPPLY
27	P	IGNITION POWER SUPPLY
28	G	IGNITION POWER SUPPLY
28	L	IGNITION POWER SUPPLY


Connector No.	F40
Connector Name	WIRE TO WIRE
Connector Type	SAAS8FP-FSS-SH28



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/Y	IGNITION POWER SUPPLY
2	SHIELD	IGNITION POWER SUPPLY
3	L/B	IGNITION POWER SUPPLY
4	SHIELD	IGNITION POWER SUPPLY
7	BR	IGNITION POWER SUPPLY
8	W	IGNITION POWER SUPPLY
9	W	IGNITION POWER SUPPLY
10	G	IGNITION POWER SUPPLY
11	R	IGNITION POWER SUPPLY
12	P	IGNITION POWER SUPPLY
13	L	IGNITION POWER SUPPLY
14	LG	IGNITION POWER SUPPLY
15	BR	IGNITION POWER SUPPLY


Terminal No.	Color Of Wire	Signal Name [Specification]
16	Y	IGNITION POWER SUPPLY
18	LG	IGNITION POWER SUPPLY
19	P	IGNITION POWER SUPPLY
20	O	IGNITION POWER SUPPLY
21	Y	IGNITION POWER SUPPLY
22	G	IGNITION POWER SUPPLY
23	Y	IGNITION POWER SUPPLY
24	LG	IGNITION POWER SUPPLY
25	V	IGNITION POWER SUPPLY
27	GR	IGNITION POWER SUPPLY
28	BR	IGNITION POWER SUPPLY
29	L	IGNITION POWER SUPPLY
30	R	IGNITION POWER SUPPLY
31	W	IGNITION POWER SUPPLY
32	W	IGNITION POWER SUPPLY
33	SB	IGNITION POWER SUPPLY
34	O	IGNITION POWER SUPPLY
37	SHIELD	IGNITION POWER SUPPLY
38	W	IGNITION POWER SUPPLY
39	Y	IGNITION POWER SUPPLY
40	G	IGNITION POWER SUPPLY
41	B	IGNITION POWER SUPPLY
42	GR	IGNITION POWER SUPPLY
43	R	IGNITION POWER SUPPLY
44	R	IGNITION POWER SUPPLY
45	O	IGNITION POWER SUPPLY
46	SHIELD	IGNITION POWER SUPPLY
47	W/L	IGNITION POWER SUPPLY
48	OG	IGNITION POWER SUPPLY
49	OG	IGNITION POWER SUPPLY
50	L/Y	IGNITION POWER SUPPLY
51	W	IGNITION POWER SUPPLY
52	L/G	IGNITION POWER SUPPLY

Connector No.	F51
Connector Name	A/T ASSEMBLY
Connector Type	IRK19FG-DGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	IGNITION POWER SUPPLY
2	BR	BATTERY POWER SUPPLY
3	O	IGNITION POWER SUPPLY
4	V	IGNITION POWER SUPPLY
5	B	IGNITION POWER SUPPLY
6	Y	IGNITION POWER SUPPLY
7	R	IGNITION POWER SUPPLY
8	LG	IGNITION POWER SUPPLY
9	GR	IGNITION POWER SUPPLY
10	B	IGNITION POWER SUPPLY

Connector No.	E301
Connector Name	TCM
Connector Type	SPT18FG



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	IGNITION POWER SUPPLY
2	BR	BATTERY POWER SUPPLY
3	O	IGNITION POWER SUPPLY
4	V	IGNITION POWER SUPPLY
5	B	IGNITION POWER SUPPLY
6	Y	IGNITION POWER SUPPLY
7	R	IGNITION POWER SUPPLY
8	LG	IGNITION POWER SUPPLY
9	GR	IGNITION POWER SUPPLY
10	B	IGNITION POWER SUPPLY

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS


# POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## PDS (POWER DISTRIBUTION SYSTEM)

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS08FW-M2




Terminal No.	Color Of Wire	Signal Name [Specification]
1A	Y	-
2A	G	-
3A	L	-
4A	R	-
5A	V	-
6A	Y	-
7A	R	-
8A	L	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
3B	P	-
4B	G	-
5B	Y	-
6B	R	-
7B	P	-
8B	R	-
9B	SB	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10C	L	-
11C	R	-
12C	BG	-
6C	R	-
7C	B	-
8C	G	-
9C	BG	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TR80MR-CS (E-TM)



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	- [With NAVI]
2	Y	- [Without NAVI]
3	B	- [Without NAVI]
4	R	- [With NAVI]
5	G	- [Without NAVI]
6	R	-
7	W	-
8	Y	-
9	BR	-
10	R	-

11	BR	-
12	BG	-
13	L	-
14	R	-
15	P	-
16	V	-
17	SB	-
18	V	-
20	BG	-
21	L	-
22	W	-
23	P	-
24	BR	-
25	SB	-
26	V	-
27	G	-
28	G	-
31	L	-
32	G	-
33	B	-
34	W	-
35	R	-
36	SHIELD	-
37	V	-
38	BG	-
39	BR	-
40	W	-
42	BG	-
43	BG	-
45	W	-
46	L	-
50	P	-
51	BR	-
54	G	-
57	G	-
59	W	-
60	L	-
61	G	-
62	SB	-
63	G	-
64	B	-
65	W	-
66	R	-
67	SHIELD	-
68	Y	-
69	GR	-
70	LG	-
71	LG	-
72	Y	-
73	SB	-

74	BR	- [With LCC]
74	L	- [Without LCC]
75	G	-
76	GR	- [Without LCC]
76	W	- [With LCC]
77	P	- [Without LCC]
77	R	- [With LCC]
78	L	-
78	R	- [Without LCC]
79	W	- [With LCC]
79	Y	- [Without LCC]
80	SB	-
81	SB	-
82	SB	-
83	V	-
84	G	-
85	L	-
86	P	-
87	W	-
89	GR	-
90	SHIELD	-
91	W	-
92	Y	-
93	BR	-
94	P	-
95	GR	-
96	W	-
97	Y	-
98	SHIELD	-
99	V	-
100	SB	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	B	-
5	B	-

# POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## PDS (POWER DISTRIBUTION SYSTEM)

6	P	ALTERNATOR SIGNAL
7	BR	AIR BAG SIGNAL
8	G	SECURITY SIGNAL
11	SB	GROUND
14	P	METER CONTROL SWITCH GROUND
16	Y	ILL. GND

Connector No.	M50
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FBR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	W	-
3	W	-
4	BR	-
8	GR	-
7	V	-
8	P	-

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	BATTERY POWER SUPPLY
2	LG	COMMUNICATION SIGNAL (METER->AMP.)
3	GR	COMMUNICATION SIGNAL (AMP->METER)
5	B	GROUND

6	P	ALTERNATOR SIGNAL
7	BR	AIR BAG SIGNAL
10	G	SECURITY SIGNAL
15	B	GROUND
16	B	METER CONTROL SWITCH GROUND
19	B	ILL. GND
20	R	ILL.
21	BG	IGNITION SIGNAL
22	B	GROUND
24	BR	COMMUNICATION SIGNAL (LDP->AMP.)
25	Y	COMMUNICATION SIGNAL (AMP->LDP)
26	R	VEHICLE SPEED SIGNAL (P-FULSE)
27	V	PARKING BRAKE SWITCH SIGNAL
28	W	VEHICLE SPEED SIGNAL
29	W	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
30	G	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE)
31	L	WASHER LEVEL SWITCH SIGNAL
33	B	ILLUMINATION CONTROL SIGNAL
36	LG	SELECT SWITCH SIGNAL
37	SB	ENTER SWITCH SIGNAL
38	L	TRIP A/B RESET SWITCH SIGNAL
39	P	ILLUMINATION CONTROL SWITCH SIGNAL (-)
40	BG	ILLUMINATION CONTROL SWITCH SIGNAL (+)


Connector No.	M66
Connector Name	UNIFIED METER AND A.C. AMP.
Connector Type	TH40FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
5	L	MANUAL MODE SHIFT UP SIGNAL
7	GR	COMMUNICATION SIGNAL (AMP->METER)
8	GR	COMMUNICATION SIGNAL (METER->AMP.)
8	SB	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
10	W	MANUAL MODE SIGNAL
11	G	NON-MANUAL MODE SIGNAL
14	BR	COMMUNICATION SIGNAL (LDP->AMP.)
20	L	IGN ON/OFF SIGNAL
23	Y	AT SNOW SWITCH SIGNAL
25	V	MANUAL MODE SHIFT DOWN SIGNAL
27	LG	COMMUNICATION SIGNAL (METER->AMP.)

28	R	VEHICLE SPEED SIGNAL (P-FULSE)
30	V	PARKING BRAKE SWITCH SIGNAL
34	Y	COMMUNICATION SIGNAL (AMP->LDP)
38	P	BLOWER MOTOR CONTROL SIGNAL

Connector No.	M67
Connector Name	UNIFIED METER AND A.C. AMP.
Connector Type	TH35FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
41	V	ACC POWER SUPPLY
42	Y	FUEL LEVEL SENSOR SIGNAL
43	R	INTAKE SENSOR SIGNAL
44	LG	IN-VEHICLE SENSOR SIGNAL
45	P	AMBIENT SENSOR SIGNAL
46	BG	SUNLOAD SENSOR SIGNAL
47	G	EVAPORATOR SWITCH SIGNAL (SENSOR SIGNAL)
52	G	IGNITION POWER SUPPLY
53	Y	BATTERY POWER SUPPLY
55	B	GROUND
56	L	CAN-H
57	W	BRAKE FLUID LEVEL SWITCH SIGNAL
58	BR	FUEL LEVEL SENSOR GROUND
59	GR	INTAKE SENSOR GROUND
60	L	IN-VEHICLE SENSOR GROUND
61	BR	AMBIENT SENSOR GROUND
62	SB	SUNLOAD SENSOR GROUND
63	R	-
65	BG	ECV SIGNAL
69	L	A/C LAN SIGNAL
70	R	EACH DOOR MOTOR POWER SUPPLY
71	B	GROUND
72	P	CAVE

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT (E/L)
2	W	POWER WINDOW POWER SUPPLY (BAT)
3	Y	POWER WINDOW POWER SUPPLY (VTRAP)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MS18FW-DS



Terminal No.	Color Of Wire	Signal Name [Specification]
4	LG	INTERIOR ROOM LAMP POWER SUPPLY
5	L	PASSENGER DOOR UNLOCK OUTPUT
7	Y	STEP LAMP CONT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
10	BR	REAR DOOR UNLOCK OUTPUT
11	R	BAT (FUSE)
13	B	GROUND
14	V	PUSH-BUTTON ON SW ILL GND
15	W	ACC I/O
17	W	TURN SIGNAL RH (FRONT)
18	BG	TURN SIGNAL LH (FRONT)
19	V	INT ROOM LAMP CONT

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

JRMW13784GB


# POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]


## PDS (POWER DISTRIBUTION SYSTEM)

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FGY-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
34	SB	LUGGAGE ROOM ANT+
35	V	LUGGAGE ROOM ANT-
38	B	BACK DOOR ANT+
39	W	BACK DOOR ANT-
47	Y	IGN RELAY (P/D/L/R) CONT
52	SB	STARTER RELAY CONT
60	BR	PUSH SW
61	W	BACK DOOR OPENER REQUEST SW
64	V	T-KEY WARN BUZZER (ENG ROOM)
65	EG	REAR WIPER STOP POSITION
66	R	BACK DOOR SW
67	GR	BACK DOOR OPENER SW
68	BR	REAR TR L DOOR SW
69	R	REAR TR R DOOR SW


Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
72	R	ROOM ANT2 -
73	G	ROOM ANT2 +
74	SB	PASSENGER DOOR ANT-
75	GR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+

78	Y	ROOM ANT1 -
79	BR	ROOM ANT1 +
80	GR	MATS ANT AMP
81	W	MATS ANT AMP
82	R	IGN RELAY (F/B) CONT
83	Y	KEYLESS ENTRY RECEIVER COMM
87	BR	COMBI SW INPUT 5
88	V	COMBI SW INPUT 3
90	L	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL CONT
93	V	IGN IND CONT
94	Y	PURGE RELAY CONT
95	EG	ACC RELAY CONT
96	GR	A/T SHIFT SELECTOR POWER SUPPLY
88	R	SHIFT P
100	G	PASSENGER DOOR REQUEST SW
101	SB	DRIVER DOOR REQUEST SW
102	BG	BLOWER FAN MOTOR RELAY CONT
103	LG	KEYLESS ENTRY RECEIVER POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	Y	COMBI SW INPUT 2
110	G	HAZARD SW


Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
113	SB	OPTICAL SENSOR
116	SB	STOP LAMP SW 1
118	P	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	BR	KEY SLOT SW
123	W	IGN F/B
124	LG	PASSENGER DOOR SW
132	BR	POWER WINDOW SW COMM
133	W	PUSH-BUTTON IGNITION SW ILL POWER
134	GR	LOCK IND

137	BG	RECEIVER/SENSOR GND
138	Y	RECEIVER/SENSOR POWER SUPPLY
139	L	TIRE PRESSURE RECEIVER COMM
140	GR	SHIFT N/P
141	G	SECURITY IND LAMP CONT
142	BG	COMBI SW OUTPUT 5
143	P	COMBI SW OUTPUT 1
144	G	COMBI SW OUTPUT 2
145	L	COMBI SW OUTPUT 3
146	SB	COMBI SW OUTPUT 4
150	LG	DRIVER DOOR SW
151	G	REAR WINDOW DEFOGGER RELAY CONT

Connector No.	M125
Connector Name	WIRE TO WIRE
Connector Type	M03FW-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	Y	-
3	R	-

Connector No.	M126
Connector Name	WIRE TO WIRE
Connector Type	M03MW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	Y	-
3	R	-

Connector No.	M351
Connector Name	JOINT CONNECTOR-M04
Connector Type	NH24FW-J



Terminal No.	Color Of Wire	Signal Name [Specification]
1	EG	-
2	B	-
3	P	-
4	L	-
6	B	-
7	P	-
8	L	-
10	W	-
11	P	-
12	L	-
14	B	-
15	P	-
17	V	-
18	B	-
19	P	-
20	L	-
21	V	-
22	B	-
23	P	-
24	L	-




# POWER DISTRIBUTION SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]


## PDS (POWER DISTRIBUTION SYSTEM)

Connector No.	M355
Connector Name	JOINT CONNECTOR-M08
Connector Type	NH24FW-J



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	L	-
3	P	-
4	L	-
5	P	-
6	L	-
7	P	-
8	L	-
9	P	-
10	L	-
11	P	-
12	L	-
13	P	-
14	L	-
15	P	-
16	L	-
17	P	-
18	V	-
19	P	-
20	B	-
21	V	-
22	V	-
23	P	-
24	L	-

Connector No.	M356
Connector Name	JOINT CONNECTOR-M14
Connector Type	SCM28FSS-J




Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	- [Without BOSE system]
2	LG	- [With BOSE system]

2	R	- [Without BOSE system]
3	B	-
4	B	-
5	BR	- [Without BOSE system]
6	V	- [With BOSE system]
7	LG	- [With BOSE system]
8	R	- [Without BOSE system]
9	B	-
10	W	-
11	B	-
12	Y	-
13	W	-
14	W	-
15	BR	-
16	Y	-
17	L	-
18	W	-
19	BR	-
20	BR	-
21	L	-
22	W	-
24	BR	-
28	BR	-



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	Y	-
3	Y	-
4	Y	-
5	Y	-
6	Y	-
7	Y	-
8	Y	-
9	Y	-
10	Y	-
11	Y	-
12	Y	-
13	Y	-
14	Y	-
15	Y	-
16	Y	-
17	Y	-
18	Y	-
19	Y	-
20	Y	-
21	Y	-
22	Y	-
24	Y	-
28	Y	-

Connector No.	M358
Connector Name	JOINT CONNECTOR-M05
Connector Type	NH24FW-J




Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	GR	-
3	P	-
4	L	-
5	R	-
6	GR	-
7	P	-
8	L	-
9	BR	-
11	P	-

12	L	-
13	BR	-
15	P	-
16	L	-
17	V	-
19	P	-
20	L	-
21	V	-
22	G	-
23	P	-
24	L	-



Connector No.	M352
Connector Name	JOINT CONNECTOR-M13
Connector Type	NH28FV-DC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	Y	-
3	Y	-
11	B	-
14	B	-
15	B	-
16	SHIELD	-
17	SHIELD	-
18	SHIELD	-
19	B	-
20	SHIELD	-

JRMW13786GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## ECU DIAGNOSIS INFORMATION

### BCM (BODY CONTROL MODULE)

#### Reference Value

INFOID:0000000012772722

#### VALUES ON THE DIAGNOSIS TOOL

##### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

##### CONSULT MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT	Off
	Front wiper switch INT	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
RR WIPER ON	Other than rear wiper switch ON	Off
	Rear wiper switch ON	On
RR WIPER INT	Other than rear wiper switch INT	Off
	Rear wiper switch INT	On
RR WASHER SW	Rear washer switch OFF	Off
	Rear washer switch ON	On
RR WIPER STOP	Rear wiper is in STOP position	Off
	Rear wiper is not in STOP position	On
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	Value/Status	
FR FOG SW	Front fog lamp switch OFF	Off	A
	Front fog lamp switch ON	On	
RR FOG SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off	B
DOOR SW-DR	Driver door closed	Off	C
	Driver door opened	On	
DOOR SW-AS	Passenger door closed	Off	D
	Passenger door opened	On	
DOOR SW-RR	Rear RH door closed	Off	E
	Rear RH door opened	On	
DOOR SW-RL	Rear LH door closed	Off	F
	Rear LH door opened	On	
DOOR SW-BK	Back door closed	Off	G
	Back door opened	On	
CDL LOCK SW	Other than power door lock switch LOCK	Off	H
	Power door lock switch LOCK	On	
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off	I
	Power door lock switch UNLOCK	On	
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off	J
	Driver door key cylinder LOCK position	On	
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off	K
	Driver door key cylinder UNLOCK position	On	
KEY CYL SW-TR	<b>NOTE:</b> The item is indicated, but not monitored.	Off	L
HAZARD SW	Hazard switch is OFF	Off	PCS
	Hazard switch is ON	On	
REAR DEF SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off	N
TR CANCEL SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off	O
TR/BD OPEN SW	Back door opener switch OFF	Off	P
	While the back door opener switch is turned ON	On	
TRNK/HAT MNTR	<b>NOTE:</b> The item is indicated, but not monitored.	Off	
REVERSE SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off	
RKE-LOCK	LOCK button of the key is not pressed	Off	
	LOCK button of the key is pressed	On	
RKE-UNLOCK	UNLOCK button of the key is not pressed	Off	
	UNLOCK button of the key is pressed	On	
RKE-TR/BD	<b>NOTE:</b> The item is indicated, but not monitored.	Off	
RKE-PANIC	PANIC button of the key is not pressed	Off	
	PANIC button of the key is pressed	On	
RKE-P/W OPEN	UNLOCK button of the key is not pressed	Off	
	UNLOCK button of the key is pressed and held	On	

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	Value/Status
RKE-MODE CHG	LOCK/UNLOCK button of the key is not pressed and held simultaneously	Off
	LOCK/UNLOCK button of the key is pressed and held simultaneously	On
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V
	Dark outside of the vehicle	Close to 0 V
REQ SW -DR	Driver door request switch is not pressed	Off
	Driver door request switch is pressed	On
REQ SW -AS	Passenger door request switch is not pressed	Off
	Passenger door request switch is pressed	On
REQ SW -RR	<b>NOTE:</b> The item is indicated, but not monitored.	Off
REQ SW -RL	<b>NOTE:</b> The item is indicated, but not monitored.	Off
REQ SW -BD/TR	Back door request switch is not pressed	Off
	Back door request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	<b>NOTE:</b> The item is indicated, but not monitored.	Off
ACC RLY -F/B	<b>NOTE:</b> The item is indicated, but not monitored.	Off
CLUCH SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off
BRAKE SW 1	The brake pedal is depressed when No. 7 fuse is blown	Off
	The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal	On
BRAKE SW 2	The brake pedal is not depressed	Off
	The brake pedal is depressed	On
DETE/CANCL SW	Selector lever in P position	Off
	Selector lever in any position other than P	On
SFT PN/N SW	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
S/L -LOCK	<b>NOTE:</b> The item is indicated, but not monitored.	Off
S/L -UNLOCK	<b>NOTE:</b> The item is indicated, but not monitored.	Off
S/L RELAY-F/B	<b>NOTE:</b> The item is indicated, but not monitored.	Off
UNLK SEN -DR	Driver door is unlocked	Off
	Driver door is locked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT PN -IPDM	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Monitor Item	Condition	Value/Status	
SFT P -MET	Selector lever in any position other than P	Off	A
	Selector lever in P position	On	
SFT N -MET	Selector lever in any position other than N	Off	B
	Selector lever in N position	On	
ENGINE STATE	Engine stopped	Stop	C
	While the engine stalls	Stall	
	At engine cranking	Crank	
	Engine running	Run	D
S/L LOCK-IPDM	<b>NOTE:</b> The item is indicated, but not monitored.	Off	
S/L UNLK-IPDM	<b>NOTE:</b> The item is indicated, but not monitored.	Off	E
S/L RELAY-REQ	<b>NOTE:</b> The item is indicated, but not monitored.	Off	F
VEH SPEED 1	While driving	Equivalent to speedometer reading	
VEH SPEED 2	While driving	Equivalent to speedometer reading	G
DOOR STAT-DR	Driver door is locked	LOCK	
	Wait with selective UNLOCK operation (5 seconds)	READY	H
	Driver door is unlocked	UNLOCK	
DOOR STAT-AS	Passenger door is locked	LOCK	I
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Passenger door is unlocked	UNLOCK	
ID OK FLAG	Driver side door is open after ignition switch is turned OFF (Shift position is in the P position)	Reset	J
	Ignition switch ON	Set	
PRMT ENG STRT	The engine start is prohibited	Reset	K
	The engine start is permitted	Set	
PRMT RKE STRT	<b>NOTE:</b> The item is indicated, but not monitored.	Reset	L
KEY SW -SLOT	The key is not inserted into key slot	Off	
	The key is inserted into key slot	On	
RKE OPE COUN1	During the operation of the key	Operation frequency of the key	PCS
RKE OPE COUN2	<b>NOTE:</b> The item is indicated, but not monitored.	—	N
CONFIRM ID ALL	The key ID that the key slot receives does not accord with any key ID registered to BCM.	Yet	O
	The key ID that the key slot receives accords with any key ID registered to BCM.	Done	
CONFIRM ID4	The key ID that the key slot receives does not accord with the fourth key ID registered to BCM.	Yet	P
	The key ID that the key slot receives accords with the fourth key ID registered to BCM.	Done	
CONFIRM ID3	The key ID that the key slot receives does not accord with the third key ID registered to BCM.	Yet	
	The key ID that the key slot receives accords with the third key ID registered to BCM.	Done	

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]


Monitor Item	Condition	Value/Status
CONFIRM ID2	The key ID that the key slot receives does not accord with the second key ID registered to BCM.	Yet
	The key ID that the key slot receives accords with the second key ID registered to BCM.	Done
CONFIRM ID1	The key ID that the key slot receives does not accord with the first key ID registered to BCM.	Yet
	The key ID that the key slot receives accords with the first key ID registered to BCM.	Done
TP 4	The ID of fourth key is not registered to BCM	Yet
	The ID of fourth key is registered to BCM	Done
TP 3	The ID of third key is not registered to BCM	Yet
	The ID of third key is registered to BCM	Done
TP 2	The ID of second key is not registered to BCM	Yet
	The ID of second key is registered to BCM	Done
TP 1	The ID of first key is not registered to BCM	Yet
	The ID of first key is registered to BCM	Done
AIR PRESS FL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	ID of front LH tire transmitter is registered	Done
	ID of front LH tire transmitter is not registered	Yet
ID REGST FR1	ID of front RH tire transmitter is registered	Done
	ID of front RH tire transmitter is not registered	Yet
ID REGST RR1	ID of rear RH tire transmitter is registered	Done
	ID of rear RH tire transmitter is not registered	Yet
ID REGST RL1	ID of rear LH tire transmitter is registered	Done
	ID of rear LH tire transmitter is not registered	Yet
WARNING LAMP	Tire pressure indicator OFF	Off
	Tire pressure indicator ON	On
BUZZER	Tire pressure warning alarm is not sounding	Off
	Tire pressure warning alarm is sounding	On

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## TERMINAL LAYOUT

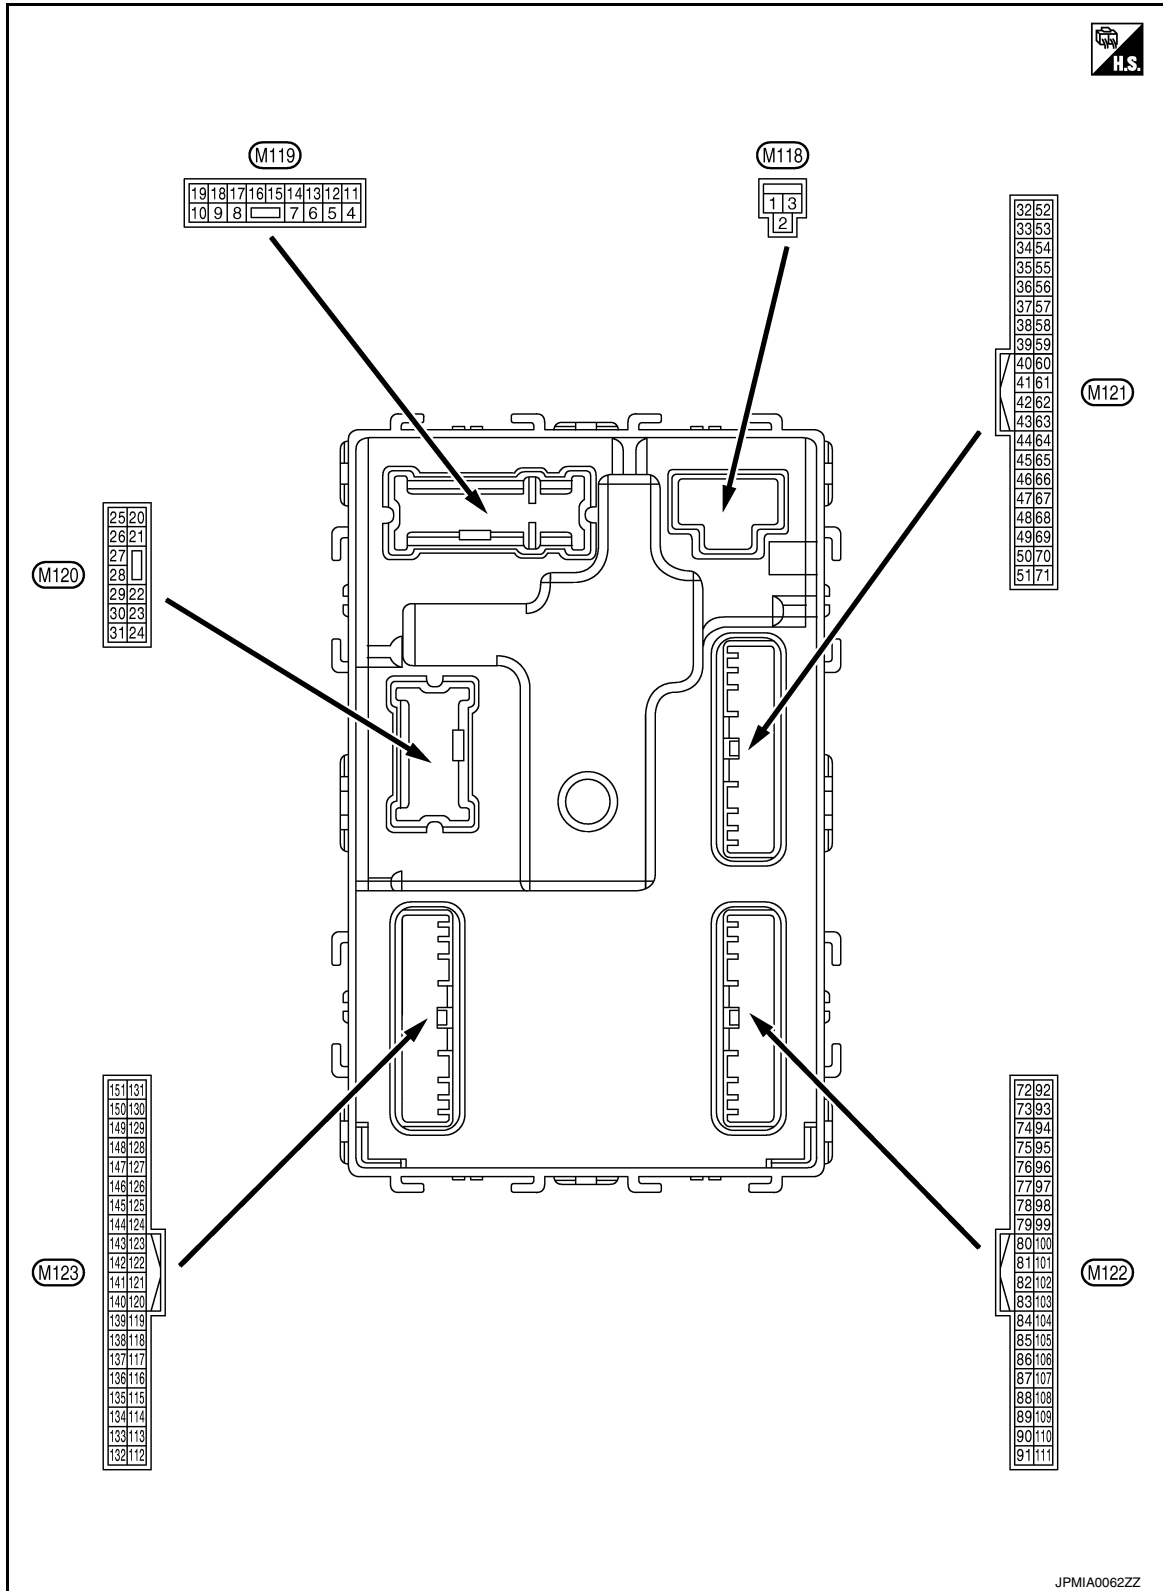

## PHYSICAL VALUES

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P


PCS

JPMIA0062ZZ

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

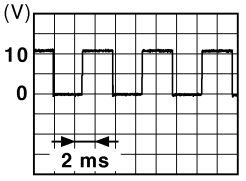Terminal No. (Wire color)		Description		Condition		Value (Approx.)
		Signal name	Input/ Output			
+	-					
1 (W)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (W)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		Battery voltage
3 (Y)	Ground	P/W power supply (RAP)	Output	Ignition switch ON		Battery voltage
4 (LG)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)		0 V
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)		Battery voltage
5 (L)	Ground	Passenger door UN- LOCK	Output	Passenger door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
7 (Y)	Ground	Step lamp	Output	Step lamp	ON	0 V
					OFF	Battery voltage
8 (V)	Ground	All doors, fuel lid LOCK	Output	All doors	LOCK (Actuator is activated)	Battery voltage
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door, fuel lid UNLOCK	Output	Driver door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
10 (BR)	Ground	Rear RH door and rear LH door UN- LOCK	Output	Rear RH door and rear LH door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
11 (R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
14 (W)	Ground	Push-button ignition switch illumination ground	Output	Tail lamp	OFF	0 V
					ON	<p><b>NOTE:</b> When the illumination brightening/dimming level is in the neutral position</p>  <p style="text-align: right; font-size: small;">JSNIA0010GB</p>
15 (Y)	Ground	ACC indicator lamp	Output	Ignition switch	OFF or ON	Battery voltage
					ACC	0 V



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
17 (W)	Ground	Turn signal RH (Front, side)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	<p style="text-align: right; font-size: small;">PKID0926E</p>
18 (BG)	Ground	Turn signal LH (Front, side)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	<p style="text-align: right; font-size: small;">PKID0926E</p>
19 (V)	Ground	Room lamp timer control	Output	Interior room lamp	OFF	Battery voltage
					ON	0 V
20 (V)	Ground	Turn signal RH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	<p style="text-align: right; font-size: small;">PKID0926E</p>
23 (G)	Ground	Back door open	Output	Back door	OPEN (Back door opener actuator is activated)	Battery voltage
					Other than OPEN (Back door opener actuator is not activated)	0 V
25 (G)	Ground	Turn signal LH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	<p style="text-align: right; font-size: small;">PKID0926E</p>
26 (G)	Ground	Rear wiper	Output	Rear wiper	OFF (Stopped)	0 V
					ON (Operated)	Battery voltage






A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[POWER DISTRIBUTION SYSTEM]

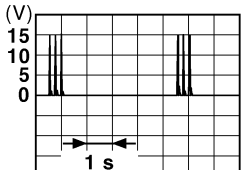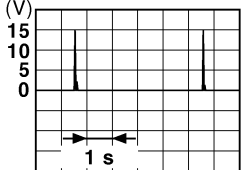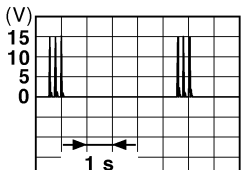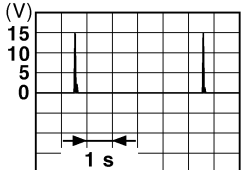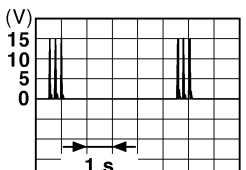Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
34 (SB)	Ground	Luggage room antenna (-)	Output		
				Ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
35 (V)	Ground	Luggage room antenna (+)	Output	Ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				Ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
38 (B)	Ground	Back door antenna (-)	Output	When the back door opener request switch is operated with ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				Ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

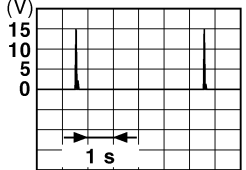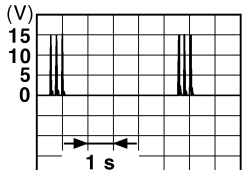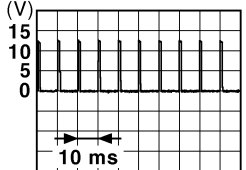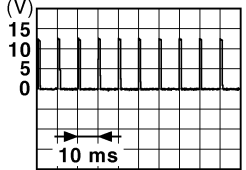Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
39 (W)	Ground	Back door antenna (+)	Output	When the back door opener request switch is operated with ignition switch OFF	When Intelligent Key is in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>	
47 (Y)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0 V
52 (SB)	Ground	Starter relay control	Output	Ignition switch ON	When selector lever is in P or N position	Battery voltage
					When selector lever is not in P or N position	0 V
60 (BR)	Ground	Push-button ignition switch (Push switch)	Input	Push-button ignition switch (push switch)	Pressed	0 V
					Not pressed	Battery voltage
61 (W)	Ground	Back door opener request switch	Input	Back door opener request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: right; font-size: small;">JPMIA0016GB</p>
64 (V)	Ground	Intelligent Key warning buzzer (Engine room)	Output	Intelligent Key warning buzzer (Engine room)	Sounding	0 V
					Not sounding	Battery voltage
65 (BG)	Ground	Rear wiper stop position	Input	Rear wiper	In stop position	 <p style="text-align: right; font-size: small;">JPMIA0016GB</p>
					Not in stop position	0 V





A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >







[POWER DISTRIBUTION SYSTEM]

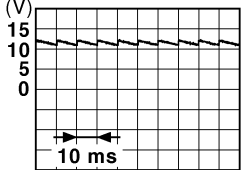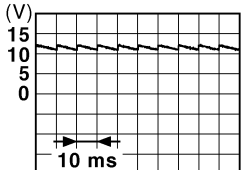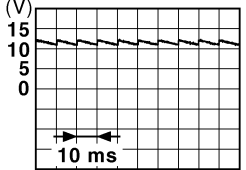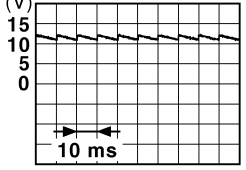Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
66 (R)	Ground	Back door switch	Input	Back door switch	OFF (Door close)	 <small>JPMIA0011GB</small> 11.8 V
					ON (Door open)	0 V
67 (GR)	Ground	Back door opener switch	Input	Back door opener switch	Pressed	0 V
					Not pressed	 <small>JPMIA0011GB</small> 11.8 V
68 (BR)	Ground	Rear RH door switch	Input	Rear RH door switch	OFF (Door close)	 <small>JPMIA0011GB</small> 11.8 V
					ON (Door open)	0 V
69 (R)	Ground	Rear LH door switch	Input	Rear LH door switch	OFF (Door close)	 <small>JPMIA0011GB</small> 11.8 V
					ON (Door open)	0 V

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

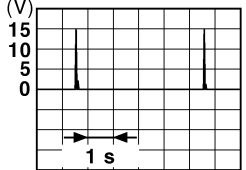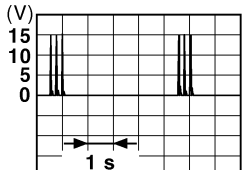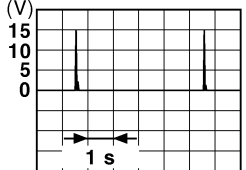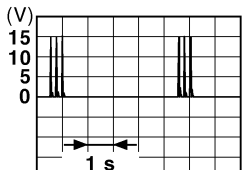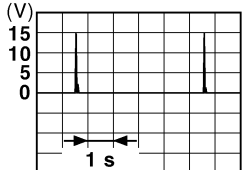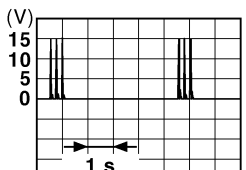Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
72 (R)	Ground	Room antenna 2 (-) (Console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment  <small>JMKIA0062GB</small>
				Ignition switch OFF	When Intelligent Key is not in the passenger compart- ment  <small>JMKIA0063GB</small>
73 (G)	Ground	Room antenna 2 (+) (Console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment  <small>JMKIA0062GB</small>
				Ignition switch OFF	When Intelligent Key is not in the passenger compart- ment  <small>JMKIA0063GB</small>
74 (SB)	Ground	Passenger door an- tenna (-)	Output	When the pas- senger door re- quest switch is operated with ig- nition switch OFF	When Intelligent Key is in the antenna detection area  <small>JMKIA0062GB</small>
				When Intelligent Key is not in the antenna detec- tion area  <small>JMKIA0063GB</small>	







A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





[POWER DISTRIBUTION SYSTEM]

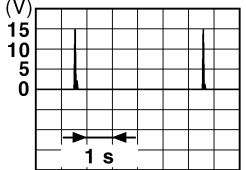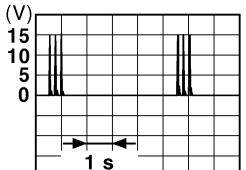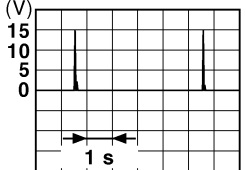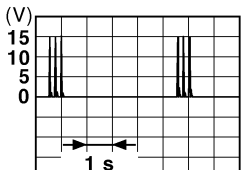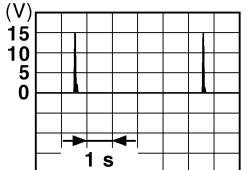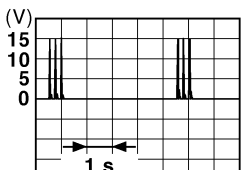Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
75 (GR)	Ground	Passenger door antenna (+)	Output	When Intelligent Key is in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When the passenger door request switch is operated with ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
76 (V)	Ground	Driver door antenna (-)	Output	When Intelligent Key is in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When the driver door request switch is operated with ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>
77 (LG)	Ground	Driver door antenna (+)	Output	When Intelligent Key is in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA0062GB</p>
				When the driver door request switch is operated with ignition switch OFF	 <p style="text-align: right; font-size: small;">JMKIA0063GB</p>

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

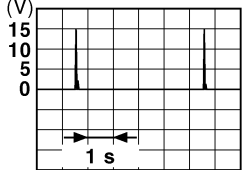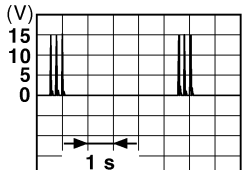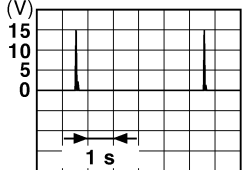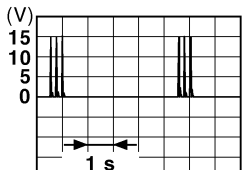Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
78 (Y)	Ground	Room antenna 1 (-) (Instrument panel)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMkia0062GB</p>
					When Intelligent Key is not in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMkia0063GB</p>
79 (BR)	Ground	Room antenna 1 (+) (Instrument panel)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMkia0062GB</p>
					When Intelligent Key is not in the passenger compart- ment	 <p style="text-align: right; font-size: small;">JMkia0063GB</p>
80 (GR)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
81 (W)	Ground	NATS antenna amp.	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
82 (R)	Ground	Ignition relay [Fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage




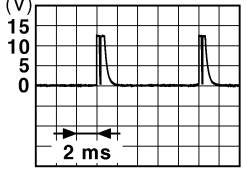

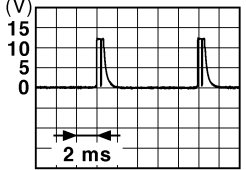

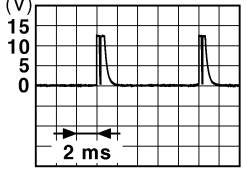

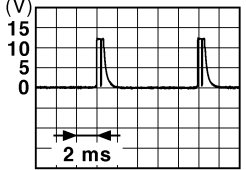

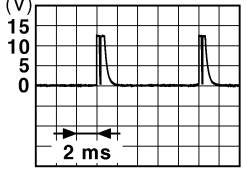

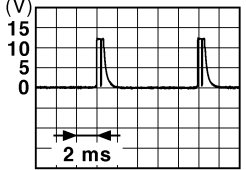
A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

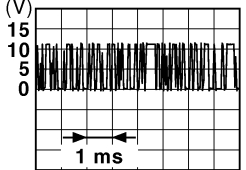
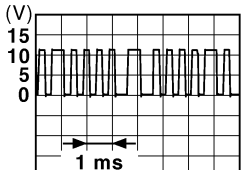

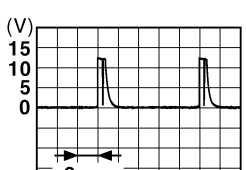

Terminal No. (Wire color)		Description		Condition	Value (Approx.)								
+	-	Signal name	Input/ Output										
83 (Y)	Ground	Remote keyless entry receiver communication	Input/ Output	During waiting	 <small>JMKIA0064GB</small>								
				When operating either button on the key	 <small>JMKIA0065GB</small>								
87 (BR)	Ground	Combination switch INPUT 5	Input	Combination switch	<table border="0" style="width: 100%;"> <tr> <td style="width: 50%; text-align: center;">                     All switches OFF (Wiper intermittent dial 4)                 </td> <td style="width: 50%; text-align: center;">   <small>JPMIA0041GB</small>                      1.4 V                 </td> </tr> <tr> <td style="text-align: center;">                     Front fog lamp switch ON (Wiper intermittent dial 4)                 </td> <td style="text-align: center;">   <small>JPMIA0037GB</small>                      1.3 V                 </td> </tr> <tr> <td style="text-align: center;">                     Rear wiper switch ON (Wiper intermittent dial 4)                 </td> <td style="text-align: center;">   <small>JPMIA0039GB</small>                      1.3 V                 </td> </tr> <tr> <td style="text-align: center;">                     Any of the conditions below with all switches OFF                     <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 6</li> <li>• Wiper intermittent dial 7</li> </ul> </td> <td style="text-align: center;">   <small>JPMIA0040GB</small>                      1.3 V                 </td> </tr> </table>	All switches OFF (Wiper intermittent dial 4)	 <small>JPMIA0041GB</small> 1.4 V	Front fog lamp switch ON (Wiper intermittent dial 4)	 <small>JPMIA0037GB</small> 1.3 V	Rear wiper switch ON (Wiper intermittent dial 4)	 <small>JPMIA0039GB</small> 1.3 V	Any of the conditions below with all switches OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 6</li> <li>• Wiper intermittent dial 7</li> </ul>	 <small>JPMIA0040GB</small> 1.3 V
				All switches OFF (Wiper intermittent dial 4)	 <small>JPMIA0041GB</small> 1.4 V								
				Front fog lamp switch ON (Wiper intermittent dial 4)	 <small>JPMIA0037GB</small> 1.3 V								
				Rear wiper switch ON (Wiper intermittent dial 4)	 <small>JPMIA0039GB</small> 1.3 V								
Any of the conditions below with all switches OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 6</li> <li>• Wiper intermittent dial 7</li> </ul>	 <small>JPMIA0040GB</small> 1.3 V												



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]


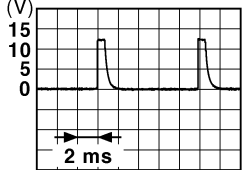
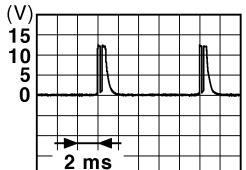
Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
88 (V)	Ground	Combination switch INPUT 3	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 1.4 V
					Lighting switch HI (Wiper intermittent dial 4)	 1.3 V
					Lighting switch 2ND (Wiper intermittent dial 4)	 1.3 V
					Rear washer switch ON (Wiper intermittent dial 4)	 1.3 V
					Any of the conditions below with all switches OFF • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3	 1.3 V
90 (P)	Ground	CAN-L	Input/ Output	—	—	
91 (L)	Ground	CAN-H	Input/ Output	—	—	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >




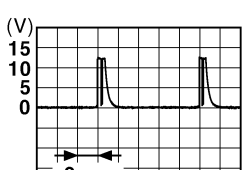

[POWER DISTRIBUTION SYSTEM]

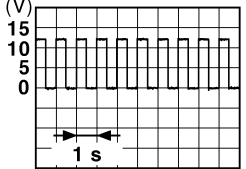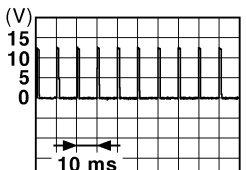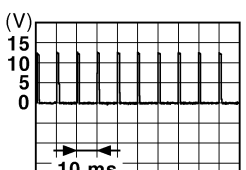Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
92 (LG)	Ground	Key slot illumination	Output	Key slot illumination	OFF	Battery voltage
					Blinking	 <p style="text-align: center;">6.5 V</p>
93 (V)	Ground	ON indicator lamp	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0 V
94 (Y)	Ground	Puddle lamp control	Output	Puddle lamp	OFF	Battery voltage
					ON	0 V
95 (BG)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
96 (GR)	Ground	A/T shift selector (Detention switch) power supply	Output	—	Battery voltage	
99 (R)	Ground	Selector lever P position switch	Input	Selector lever	P position	0 V
					Any position other than P	Battery voltage
100 (G)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: center;">1.0 V</p>
101 (SB)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: center;">1.0 V</p>
102 (BG)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
103 (LG)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF	Battery voltage	

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]




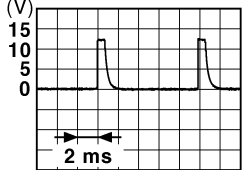
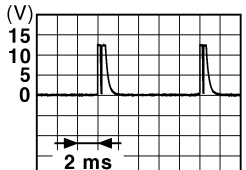
Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
107 (LG)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper intermittent dial 4)	All switches OFF	 1.4 V
					Turn signal switch LH	 1.3 V
					Turn signal switch RH	 1.3 V
					Front wiper switch LO	 1.3 V
					Front washer switch ON	 1.3 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >




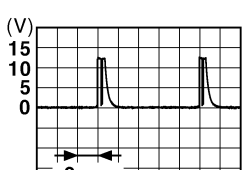

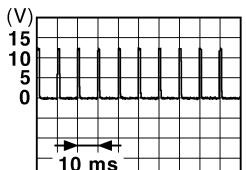
[POWER DISTRIBUTION SYSTEM]

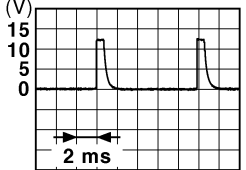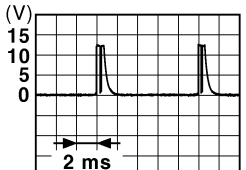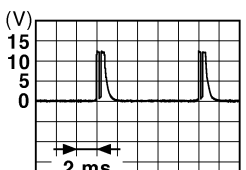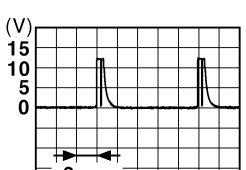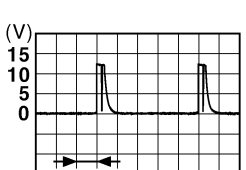Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
108 (R)	Ground	Combination switch INPUT 4	Input	Combination switch	All switches OFF (Wiper intermittent dial 4)	 <small>JPMIA0041GB</small> 1.4 V
					Lighting switch AUTO (Wiper intermittent dial 4)	 <small>JPMIA0038GB</small> 1.3 V
					Lighting switch 1ST (Wiper intermittent dial 4)	 <small>JPMIA0036GB</small> 1.3 V
					Rear wiper switch INT (Wiper intermittent dial 4)	 <small>JPMIA0040GB</small> 1.3 V
					Any of the conditions below with all switches OFF • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6	 <small>JPMIA0039GB</small> 1.3 V

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

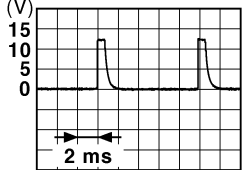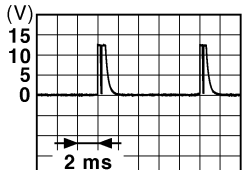Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
109 (Y)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper intermittent dial 4)	All switches OFF	 1.4 V
					Lighting switch PASS	 1.3 V
					Lighting switch 2ND	 1.3 V
					Front wiper switch INT	 1.3 V
					Front wiper switch HI	 1.3 V
					ON	0 V
110 (G)	Ground	Hazard switch	Input	Hazard switch	OFF	
				OFF	 1.1 V	




A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >




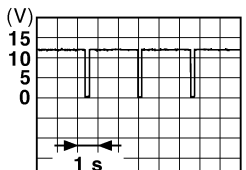
[POWER DISTRIBUTION SYSTEM]

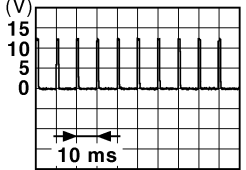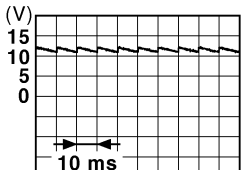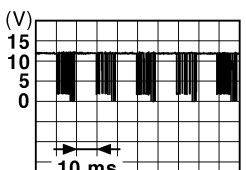Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
113 (P)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
116 (SB)	Ground	Stop lamp switch 1	Input	—		Battery voltage
118 (P)	Ground	Stop lamp switch 2 (Without ICC)	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
					ON (Brake pedal is de- pressed)	Battery voltage
		Stop lamp switch 2 (With ICC)		Stop lamp switch OFF (Brake pedal is not de- pressed) and ICC brake hold relay OFF		0 V
				Stop lamp switch ON (Brake pedal is de- pressed) or ICC brake hold relay ON		Battery voltage
119 (SB)	Ground	Front door lock as- sembly driver side (Unlock sensor)	Input	Driver door	LOCK status (Unlock sensor switch OFF)	 1.1 V
					UNLOCK status (Unlock switch sensor ON)	0 V
121 (BR)	Ground	Key slot switch	Input	When the key is inserted into key slot		Battery voltage
				When the key is not inserted into key slot		0 V
123 (W)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
124 (LG)	Ground	Passenger door switch	Input	Passenger door switch	OFF (Door close)	 11.8 V
					ON (Door open)	0 V
132 (BR)	Ground	Power window switch communication	Input/ Output	Ignition switch ON	 10.2 V	
				Ignition switch OFF or ACC	Battery voltage	

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]



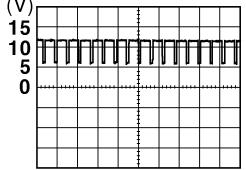
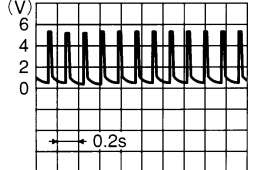
Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
133 (W)	Ground	Push-button ignition switch illumination	Output	Push-button ignition switch illumination	ON (Tail lamps OFF)	9.5 V
					ON (Tail lamps ON)	<p><b>NOTE:</b> The pulse width of this wave is varied by the illumination bright- ening/dimming level.</p>  <p style="text-align: right; font-size: small;">JPMIA0159GB</p>
134 (GR)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	OFF	Battery voltage
					ON	0 V
137 (BG)	Ground	Receiver and sensor ground	Input	Ignition switch ON	0 V	
138 (Y)	Ground	Receiver and sensor power supply	Output	Ignition switch	OFF	0 V
					ACC or ON	5.0 V
139 (L)	Ground	Tire pressure receiv- er communication	Input/ Output	Ignition switch ON	Standby state	 <p style="text-align: right; font-size: small;">OCC3881D</p>
					When receiving the signal from the transmitter	 <p style="text-align: right; font-size: small;">OCC3880D</p>
140 (GR)	Ground	Selector lever P/N position	Input	Selector lever	P or N position	Battery voltage
					Except P and N positions	0 V
141 (G)	Ground	Security indicator	Output	Security indicator	ON	0 V
					Blinking	 <p style="text-align: right; font-size: small;">JPMIA0014GB</p>
					11.3 V	
				OFF	Battery voltage	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

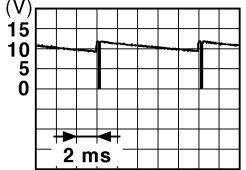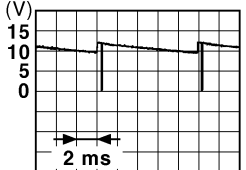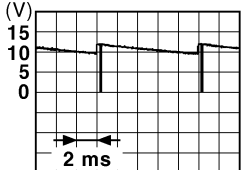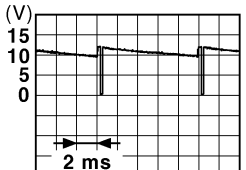Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
142 (BG)	Ground	Combination switch OUTPUT 5	Output	All switches OFF	0 V
				Lighting switch 1ST	
				Lighting switch HI	
				Lighting switch 2ND	
				Turn signal switch RH	
					10.7 V
143 (P)	Ground	Combination switch OUTPUT 1	Output	All switches OFF (Wiper intermittent dial 4)	0 V
				Front wiper switch HI (Wiper intermittent dial 4)	
				Rear wiper switch INT (Wiper intermittent dial 4)	
				Any of the conditions below with all switches OFF	
				<ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 3</li> <li>• Wiper intermittent dial 6</li> <li>• Wiper intermittent dial 7</li> </ul>	
					10.7 V
144 (G)	Ground	Combination switch OUTPUT 2	Output	All switches OFF (Wiper intermittent dial 4)	0 V
				Front washer switch ON (Wiper intermittent dial 4)	
				Rear wiper switch ON (Wiper intermittent dial 4)	
				Rear washer switch ON (Wiper intermittent dial 4)	
				Any of the conditions below with all switches OFF	
<ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 5</li> <li>• Wiper intermittent dial 6</li> </ul>					
					10.7 V
145 (L)	Ground	Combination switch OUTPUT 3	Output	All switches OFF	0 V
				Front wiper switch INT	
				Front wiper switch LO	
				Lighting switch AUTO	
					10.7 V



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
		Signal name	Input/ Output			
+	-					
146 (SB)	Ground	Combination switch OUTPUT 4	Output	Combination switch (Wiper intermit- tent dial 4)	All switches OFF	0 V
					Front fog lamp switch ON	
					Lighting switch 2ND	
					Lighting switch PASS	
					Turn signal switch LH	
150 (LG)	Ground	Driver door switch	Input	Driver door switch	OFF (Door close)	
					ON (Door open)	0 V
151 (G)	Ground	Rear window defog- ger relay control	Output	Rear window de- fogger	Active	0 V
					Not activated	Battery voltage

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS


# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## Wiring Diagram - BCM -

INFOID:000000012772723

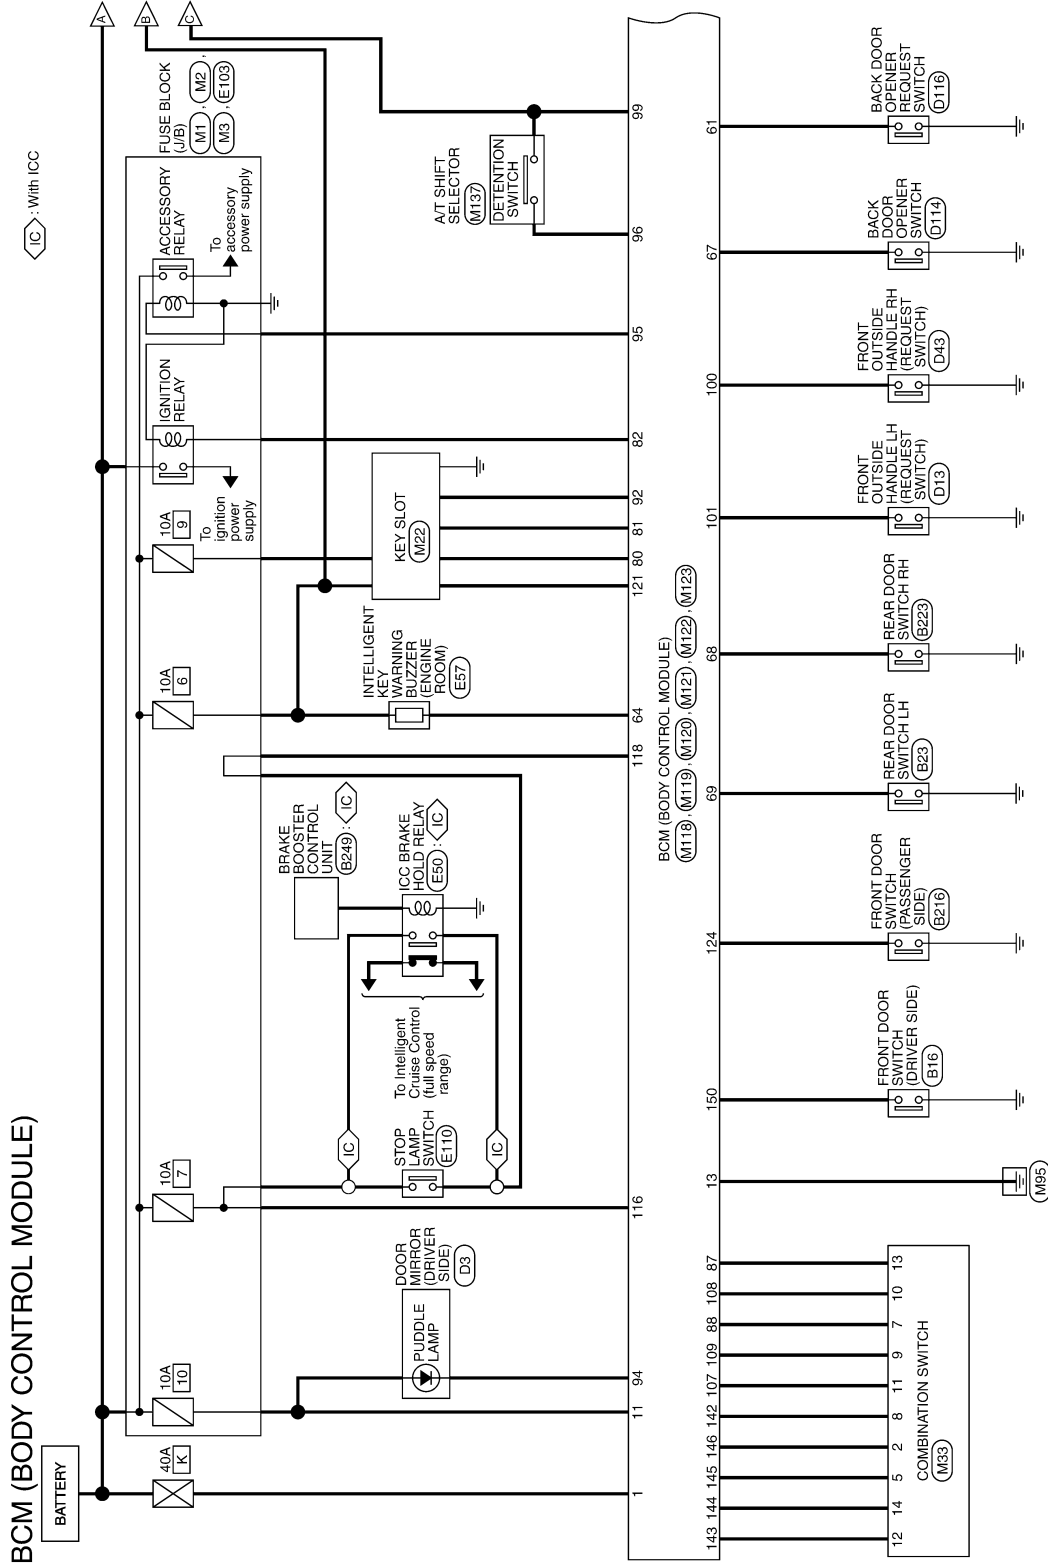


2015/06/22

JRMW13746GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

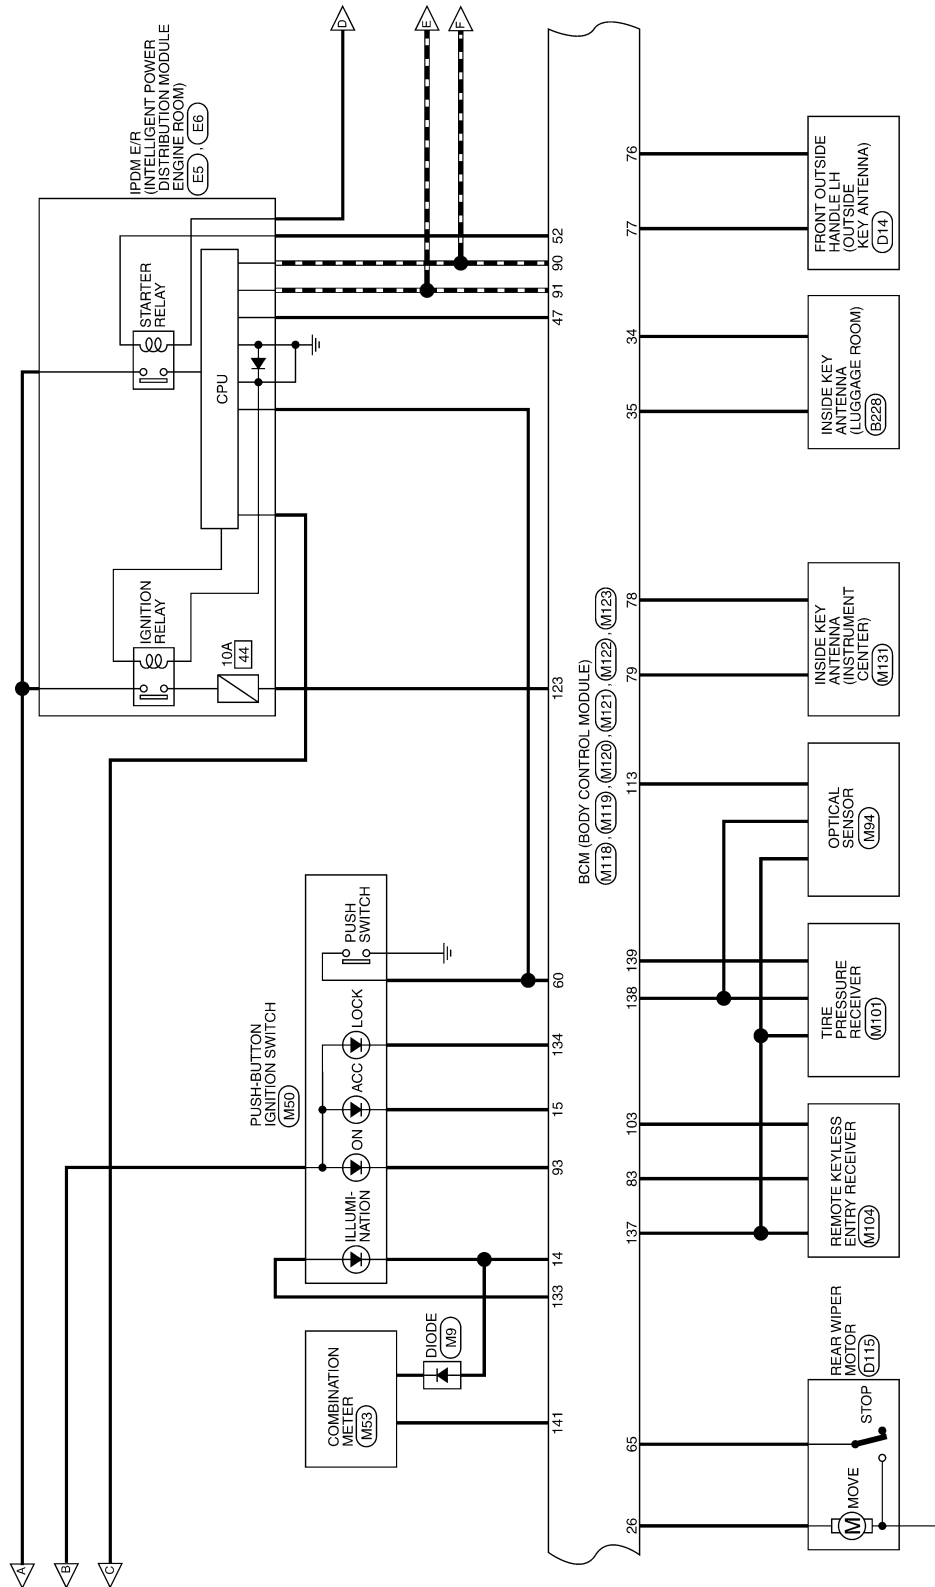

JRMW13747GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

PM : With automatic drive positioner

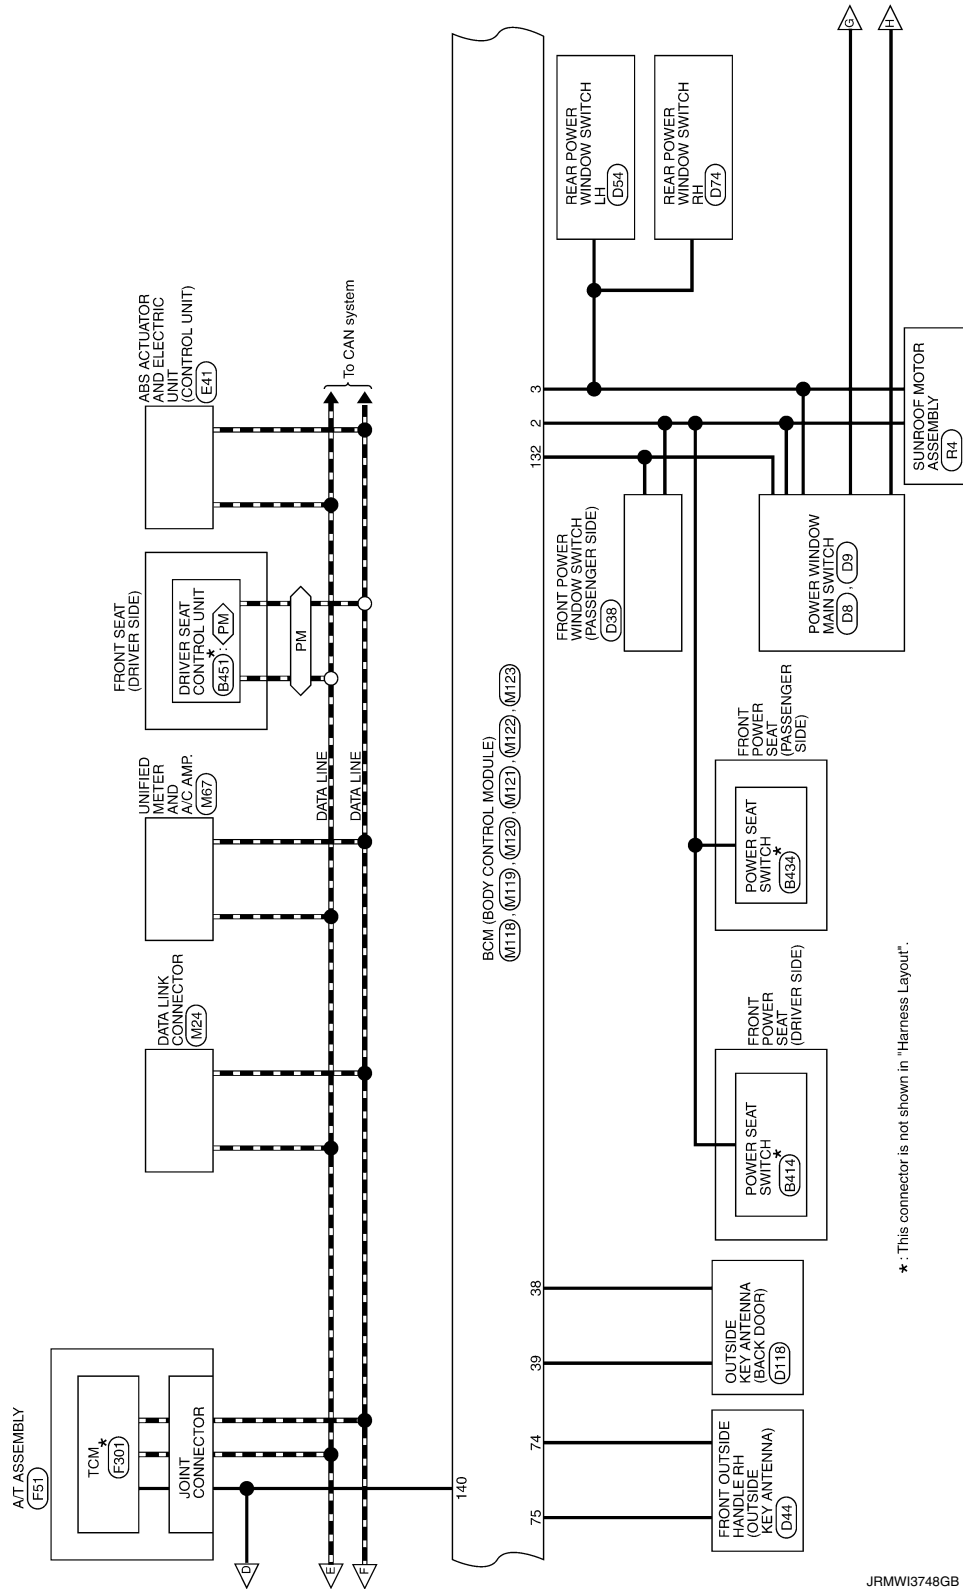


\* : This connector is not shown in "Harness Layout".

JRMWI3748GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

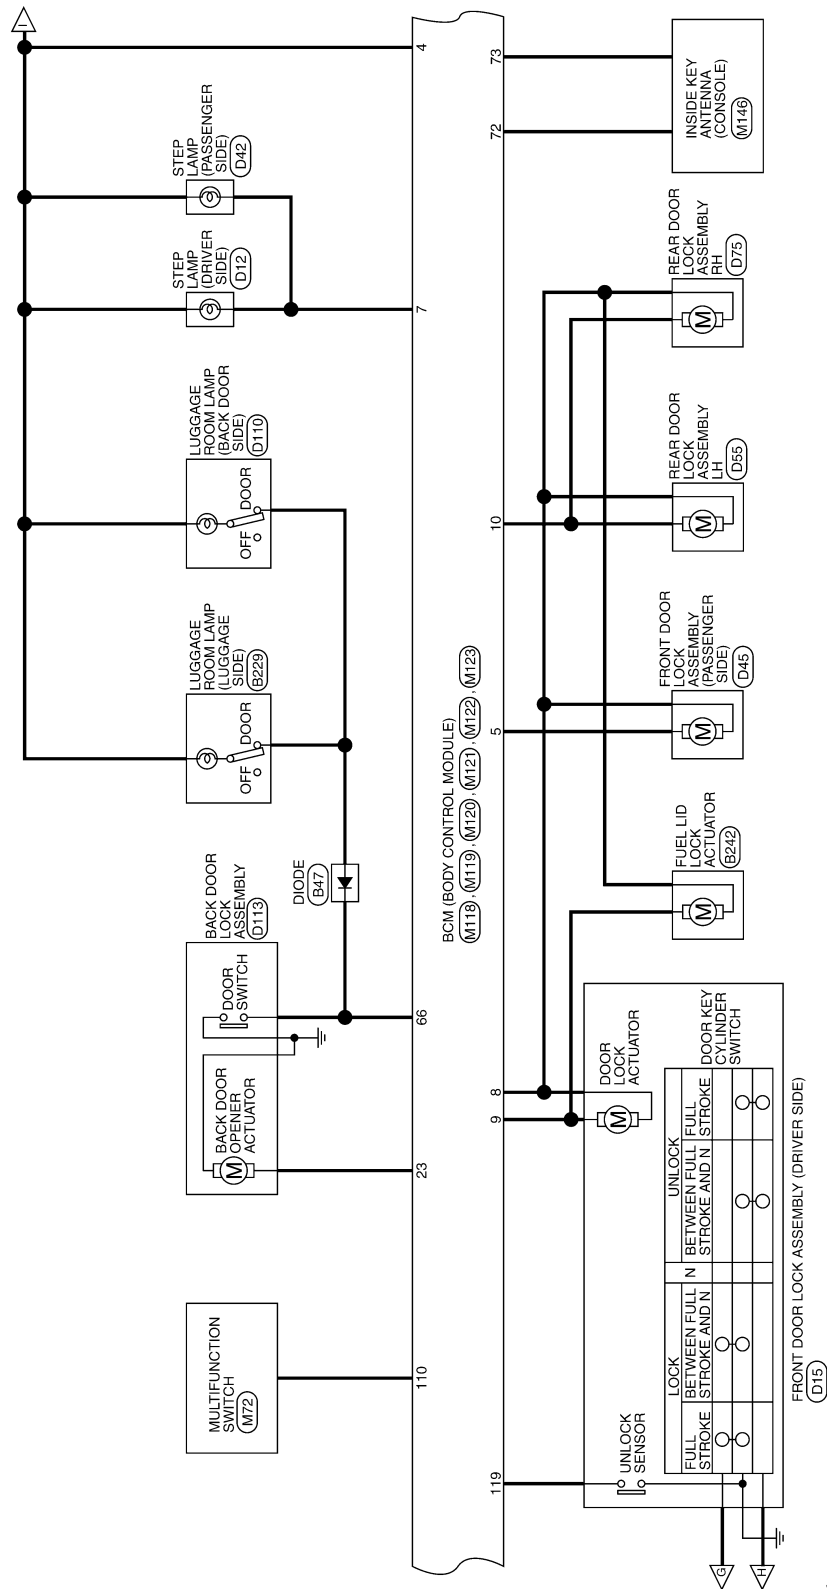

JRMW13749GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

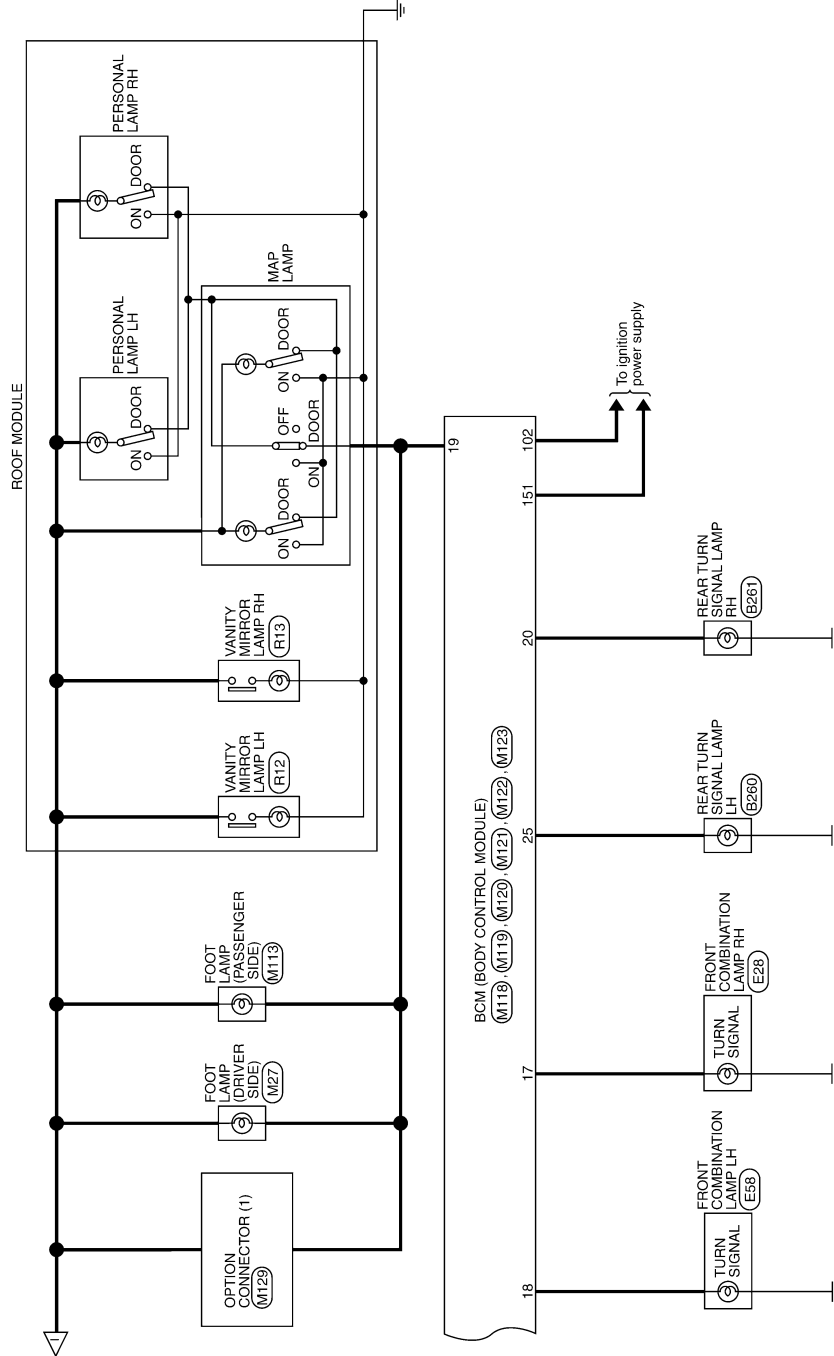

JRMW13750GB


# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## BCM (BODY CONTROL MODULE)



Connector No.	B216
Connector Name	FRONT DOOR SWITCH (DRIVER SIDE)
Connector Type	A03FW



Terminal No.	1	2
Color Of Wire	V	-

Terminal No.	1	2
Color Of Wire	V	-
Signal Name [Specification]	-	-

Connector No.	B23
Connector Name	REAR DOOR SWITCH LH
Connector Type	A03FW



Terminal No.	1	2
Color Of Wire	LG	-


Terminal No.	1	2
Color Of Wire	LG	-
Signal Name [Specification]	-	-

Connector No.	B47
Connector Name	DIODE
Connector Type	Z433E_C9900



Terminal No.	1	2
Color Of Wire	BR	-
Signal Name [Specification]	-	-



Terminal No.	1	2
Color Of Wire	B	L
Signal Name [Specification]	-	-



Connector No.	B21E
Connector Name	FRONT DOOR SWITCH (PASSENGER SIDE)
Connector Type	A03FW

Terminal No.	1	2
Color Of Wire	L	-
Signal Name [Specification]	-	-

Connector No.	B223
Connector Name	REAR DOOR SWITCH RH
Connector Type	A03FW



Terminal No.	1	2
Color Of Wire	BR	-
Signal Name [Specification]	-	-

Terminal No.	1	2
Color Of Wire	GR	L
Signal Name [Specification]	-	-

Connector No.	B228
Connector Name	INSIDE KEY ANTENNA (LUGGAGE ROOM)
Connector Type	RK02FCY



Terminal No.	1	2
Color Of Wire	Y	SB
Signal Name [Specification]	-	-

Terminal No.	1	2
Color Of Wire	Y	SB
Signal Name [Specification]	-	-

Connector No.	B229
Connector Name	LUGGAGE ROOM LAMP (LUGGAGE SIDE)
Connector Type	TN03FW



Terminal No.	1	2
Color Of Wire	GR	L
Signal Name [Specification]	-	-

Connector No.	B242
Connector Name	FUEL LID LOCK ACTUATOR
Connector Type	M04FW-LC



Terminal No.	1	2
Color Of Wire	V	-
Signal Name [Specification]	-	-

Terminal No.	1	2
Color Of Wire	V	-
Signal Name [Specification]	-	-

Connector No.	B249
Connector Name	BRAKE BOOSTER CONTROL UNIT
Connector Type	TR24FCY



Terminal No.	33	40	42	46	47
Color Of Wire	BR	SB	G	B	V
Signal Name [Specification]	IGNITION	IGNITION	IGNITION	GROUND	BRAKE HOLD RLY DRIVE SIGNAL

Terminal No.	33	40	42	46	47
Color Of Wire	BR	SB	G	B	V
Signal Name [Specification]	IGNITION	IGNITION	IGNITION	GROUND	BRAKE HOLD RLY DRIVE SIGNAL

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Connector No.	B280
Connector Name	REAR TURN SIGNAL LAMP LH
Connector Type	HS0ZFG-W



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	B	-

Connector No.	B281
Connector Name	REAR TURN SIGNAL LAMP RH
Connector Type	HS0ZFG-W



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	B	-

Connector No.	B414
Connector Name	POWER SEAT SWITCH
Connector Type	NS1DFW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	B	-
3	G/Y	-
4	P	-
5	W	-
6	V	-
7	L/Y	-
8	L	-
9	L/R	-
10	G/W	-

Connector No.	B434
Connector Name	POWER SEAT SWITCH
Connector Type	NS1DFW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	B	-
3	G/Y	-
4	P	-
5	W	-
6	V	-
7	L/Y	-
8	L	-
9	L/R	-
10	G/W	-

Connector No.	B451
Connector Name	DRIVER SEAT CONTROL UNIT
Connector Type	TH32HW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	CAN-H
2	-	LIART. (TX/RX)
3	BR	COAT
4	-	PULSE (RECLINER)
5	-	PULSE/TELESCOPIC
6	-	ADDRESS 2
7	-	IND 2
8	-	SLIDE SW (BACKWARD)
9	-	RECLINER SW (BACKWARD)
10	-	FRONT LIFTER SW (DOWNWARD)
11	-	FRONT LIFTER SW (UPWARD)
12	-	POWER SUPPLY (ENCODER)
13	-	PULSE (SLIDE)
14	-	PULSE (FRONT LIFTER)
15	-	PULSE (REAR LIFTER)
20	-	PUL (SECTIL1)
21	-	ADDRESS 1
22	-	IND 1
23	-	SLIDE SW (FORWARD)
24	-	RECLINER SW (FORWARD)
25	-	FRONT LIFTER SW (UPWARD)
26	-	FRONT LIFTER SW (DOWNWARD)
27	-	SET SW
28	-	SET SW

Connector No.	B3
Connector Name	DOOR MIRROR (DRIVER SIDE)
Connector Type	TH24MW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	O	-
3	BR	COAT
5	P	COMP+
6	SB	ON
7	W	-
10	G	-
11	P	-
12	O	-
14	LG	-
17	SHIELD	COMP-
18	LG	GROUND
19	GR	-
22	BR	-
23	V	-
24	V	-

Connector No.	B8
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS18FY-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	REAR POWER WINDOW MOTOR LH UP SIGNAL
2	BR	ENCODER GROUND
3	GR	REAR POWER WINDOW MOTOR LH DOWN SIGNAL



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## BCM (BODY CONTROL MODULE)

4	V	DOOR KEY CYLINDER SWITCH LH LOCK SIGNAL
5	O	REAR POWER WINDOW MOTOR RH DOWN SIGNAL
6	Y	DOOR KEY CYLINDER SWITCH LH UNLOCK SIGNAL
7	BR	REAR POWER WINDOW MOTOR RH UP SIGNAL
8	L	FRONT POWER WINDOW MOTOR (DRIVER SIDE) UP SIGNAL
9	O	ENCODER PULSE 2
10	Y	RETAINED POWER SIGNAL
11	G	FRONT POWER WINDOW MOTOR (DRIVER SIDE) DOWN SIGNAL
13	P	ENCODER PULSE 1
14	V	POWER WINDOW SERIAL LINK
15	B	ENCODER POWER SUPPLY

Connector No.	D9
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NS902FW-GS



Terminal No.	Color Of Wire	Signal Name [Specification]
17	B	GROUND
19	W	BATTERY POWER SUPPLY

Connector No.	D12
Connector Name	STEP LAMP (DRIVER SIDE)
Connector Type	TB02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	SB	-

Connector No.	D13
Connector Name	FRONT OUTSIDE HANDLE LH (REQUEST SWITCH)
Connector Type	RM02FL




Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	B	-

Connector No.	D14
Connector Name	FRONT OUTSIDE HANDLE LH (OUTSIDE KEY ANTENNA)
Connector Type	RM02MEY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	O	-
2	SB	-

Connector No.	D15
Connector Name	FRONT DOOR LOCK ASSEMBLY (DRIVER SIDE)
Connector Type	EA06FGV-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	P	-
3	L	-
4	B	-
5	Y	-
6	V	-

Connector No.	D38
Connector Name	FRONT POWER WINDOW SWITCH (PASSENGER SIDE)
Connector Type	NS16FW-GS



Terminal No.	Color Of Wire	Signal Name [Specification]
3	L	ENCODER GROUND
4	O	ENCODER POWER SUPPLY
8	W	POWER WINDOW MOTOR UP SIGNAL
9	O	POWER WINDOW MOTOR DOWN SIGNAL
10	W	BATTERY POWER SUPPLY
11	B	ENCODER PULSE 1
12	B	ENCODER PULSE 2
15	O	ENCODER PULSE 1
16	V	POWER WINDOW SERIAL LINK

Connector No.	D42
Connector Name	STEP LAMP (PASSENGER SIDE)
Connector Type	TB02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	SB	-

Connector No.	D43
Connector Name	FRONT OUTSIDE HANDLE RH (REQUEST SWITCH)
Connector Type	RM02FL



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

JRMW13753GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## BCM (BODY CONTROL MODULE)

Connector No.	D44
Connector Name	FRONT OUTSIDE HANDLE RH (OUTSIDE KEY ANTENNA)
Connector Type	RK02ZMGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	V	-

Connector No.	D45
Connector Name	FRONT DOOR LOCK ASSEMBLY PASSENGER SIDE
Connector Type	EB6FGY-RS




Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	-
2	LG	-

Connector No.	D54
Connector Name	REAR POWER WINDOW SWITCH LH
Connector Type	NS08FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	V	-
3	G	-
4	L	-
5	W	-
7	B	-

Connector No.	D55
Connector Name	REAR DOOR LOCK ASSEMBLY LH
Connector Type	EB6FGY-RS




Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	G	-

Connector No.	D74
Connector Name	REAR POWER WINDOW SWITCH RH
Connector Type	NS08FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	G	-
4	P	-
5	O	-
7	B	-

Connector No.	D75
Connector Name	REAR DOOR LOCK ASSEMBLY RH
Connector Type	EB6FGY-RS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	V	-

Connector No.	D110
Connector Name	LUGGAGE ROOM LAMP (BACK DOOR SBE)
Connector Type	TK03FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	P	-

Connector No.	D113
Connector Name	BACK DOOR LOCK ASSEMBLY
Connector Type	NS04FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
2	B	-
3	V	-
4	B	-

JRMWI3754GB

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## BCM (BODY CONTROL MODULE)

Connector No.	D114
Connector Name	BACK DOOR OPENER SWITCH
Connector Type	TH02M8R-P



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	-
2	B	-

Connector No.	D115
Connector Name	REAR WIPER MOTOR
Connector Type	GJ04FW-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
2	G	-
3	O	-
4	B	-

Connector No.	D116
Connector Name	BACK DOOR OPENER REQUEST SWITCH
Connector Type	TH02M8R-P




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-

Connector No.	D118
Connector Name	OUTSIDE KEY ANTENNA (BACK DOOR)
Connector Type	RK02FGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	R	-

Connector No.	E5
Connector Name	FRONT INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH20FW-C5Z-M-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
4	Y	-
5	L	-
6	R	-
7	R	-
12	B/W	-
13	Y	-
16	LG	-
19	W	-
25	G	-
26	R	-
27	BG	-
28	L	-
30	GR	-
36	G	-

Connector No.	E6
Connector Name	FRONT INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH08FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B/W	-
43	SB	-
44	BR	-
45	G	-

Connector No.	46
Connector Name	R



Connector No.	E28
Connector Name	FRONT COMBINATION LAMP RH
Connector Type	RS08FE-PR

Terminal No.	Color Of Wire	Signal Name [Specification]
2	B	-
3	B/Y	-
4	B/W	-
5	BG	-
6	V	-
7	BR	-
8	P	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAA42FB-AH24-1H



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
2	G	GROUND
3	O	LIBV2
4	B	GROUND
5	Y	DS FL
6	EG	DP RL
7	BR	DP RR
9	B	DP FR
10	W	DS FR
12	L	VAC

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## BCM (BODY CONTROL MODULE)

14	P	CAN-L
15	SHIELD	GROUND
19	P	LIST
25	Y	BUS-L
26	LG	DP FL
27	GR	DS RL
28	G	LZ
29	LG	DS RR
30	SB	BLS
31	R	VDC OFF SW
35	L	CAN-H
43	B	BUS-H

Connector No.	E50
Connector Name	IGCC BRAKE HOLD RELAY
Connector Type	M06FGV-R-JS



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	B	-
3	P	-
4	SB	-
6	P	-
7	R	-

Connector No.	E57
Connector Name	INTELLISKEY KEY WARNING BUZZER (ENGINE ROOM)
Connector Type	R002FBR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	-
3	V	-

Connector No.	E58
Connector Name	FRONT COMBINATION LAMP LH
Connector Type	RS5EFB-PR



Terminal No.	Color Of Wire	Signal Name [Specification]
2	B	-
3	B/Y	-
4	B/W	-
5	V	-
6	G	-
7	P	-
8	BIG	-

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS18FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
11F	W	-
1F	SB	-
2F	W	-
4F	G	-
6F	BR	-
8F	L	-
9F	R	-

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	M04FPL-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	W	-
3	V	-
4	SB	-

Connector No.	F51
Connector Name	A/T ASSEMBLY
Connector Type	RK10FC-DGY



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	IGNITION POWER SUPPLY
2	BR	BATTERY POWER SUPPLY
3	O	CAN-H
4	V	K-LINE
5	B	GROUND
6	Y	IGNITION POWER SUPPLY
7	R	BACK-UP LAMP RELAY
8	LG	CAN-L
9	GR	STARTER RELAY
10	B	GROUND

Connector No.	F301
Connector Name	TCM
Connector Type	SPT0FG



Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	IGNITION POWER SUPPLY
2	-	BATTERY POWER SUPPLY
3	-	CAN-H
4	-	K-LINE
5	-	GROUND
6	-	IGNITION POWER SUPPLY
7	-	BACK-UP LAMP RELAY
8	-	CAN-L
9	-	STARTER RELAY
10	-	GROUND


# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## BCM (BODY CONTROL MODULE)

Connector No.	M1
Connector Name	FUSE BLOCK (U/B)
Connector Type	NS06FW-M2




Terminal No.	Color Of Wire	Signal Name [Specification]
1A	Y	-
2A	G	-
3A	L	-
4A	R	-
5A	V	-
6A	Y	-
7A	R	-
8A	L	-

Connector No.	M2
Connector Name	FUSE BLOCK (U/B)
Connector Type	NS10FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
3B	P	-
4B	G	-
5B	BG	-
6B	P	-
7B	R	-
8B	SB	-

Connector No.	M3
Connector Name	FUSE BLOCK (U/B)
Connector Type	NS12FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10C	L	-
11C	R	-
12C	BG	-
6C	R	-
7C	B	-
8C	G	-
9C	BG	-

Connector No.	M9
Connector Name	DIODE
Connector Type	24335 C9600




Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	W	-

Connector No.	M22
Connector Name	KEY SLOT
Connector Type	TH18FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	ES	BAT
2	GR	CLOCK
3	W	DATA
5	Y	ILL BAT
6	LG	ILL
7	B	GROUND
11	BR	KEY SWITCH SIGNAL

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	ED18FW




Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	B	-
5	B	-
6	L	-
7	V	-
8	L	-
9	G	-
11	SB	-
14	P	-
16	Y	-

Connector No.	M27
Connector Name	FOOT LAMP (DRIVER SIDE)
Connector Type	A02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	FR	-
2	BR	-

Connector No.	M33
Connector Name	COMBINATION SWITCH
Connector Type	TH18FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P	FR WASHER(-)
2	SB	OUTPUT 4
3	GR	FR WASHER(+)
4	G	IGN
5	L	OUTPUT 3
6	B	GROUND
7	V	INPUT 3
8	BG	OUTPUT 5
9	L	INPUT 2
10	LG	INPUT 1
12	P	OUTPUT 1
13	BR	INPUT 5
14	G	OUTPUT 2

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]


## BCM (BODY CONTROL MODULE)

Connector No.	M50
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FBR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	W	-
3	W	-
4	BR	-
5	GR	-
6	Y	-
7	V	-
8	P	-


Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH40FPW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	BATTERY POWER SUPPLY
2	LG	COMMUNICATION SIGNAL (METER->AMP)
3	GR	COMMUNICATION SIGNAL (AMP->METER)
4	B	GROUND
5	B	GROUND
6	P	ALTERNATOR SIGNAL
7	BR	AIR BAG SIGNAL
10	G	SECURITY SIGNAL
15	B	GROUND
16	B	METER CONTROL SWITCH GROUND
19	B	ILL GND
20	R	ILL
21	BG	IGNITION SIGNAL


Terminal No.	Color Of Wire	Signal Name [Specification]
22	B	GROUND
24	BR	COMMUNICATION SIGNAL (LGD->AMP)
25	Y	COMMUNICATION SIGNAL (AMP->LGD)
26	R	VEHICLE SPEED SIGNAL (P-PULSE)
27	V	PARKING BRAKE SWITCH SIGNAL
28	W	BRAKE FLUID LEVEL SWITCH SIGNAL
29	SB	SEAT BELT BRUCKLE SWITCH SIGNAL (DRIVER SIDE)
30	G	SEAT BELT BRUCKLE SWITCH SIGNAL (PASSENGER SIDE)
31	L	WASHER LEVEL SWITCH SIGNAL
33	B	ILLUMINATION CONTROL SIGNAL
36	LG	SELECT SWITCH SIGNAL
37	SB	ENTER SWITCH SIGNAL
38	Y	TEMP SWITCH SIGNAL
39	B	ILLUMINATION CONTROL SWITCH SIGNAL
40	BG	ILLUMINATION CONTROL SWITCH SIGNAL (C)

Connector No.	M67
Connector Name	UNITED METER AND A/C AMP.
Connector Type	TH32FPW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
41	V	ACC POWER SUPPLY
42	Y	FUEL LEVEL SENSOR SIGNAL
43	R	INTAKE SENSOR SIGNAL
44	LG	IN-VEHICLE SENSOR SIGNAL
45	P	AMBIENT SENSOR SIGNAL
46	BG	SUNLOAD SENSOR SIGNAL
47	G	SMALLEST GAS / OUTSIDE DOOR DETECTING SENSOR SIGNAL
53	G	IGNITION POWER SUPPLY
54	Y	BATTERY POWER SUPPLY
55	B	GROUND
56	L	CAN-H
57	W	BRAKE FLUID LEVEL SWITCH SIGNAL
58	BR	FUEL LEVEL SENSOR GROUND
59	GR	INTAKE SENSOR GROUND
60	L	IN-VEHICLE SENSOR GROUND
61	BR	AMBIENT SENSOR GROUND
62	SB	SUNLOAD SENSOR GROUND
63	R	-
65	BG	ECV SIGNAL

68	L	A/C CLAN SIGNAL
70	R	EACH DOOR MOTOR POWER SUPPLY
71	B	GROUND
72	P	CAN-L



Connector No.	M72
Connector Name	MULTIFUNCTION SWITCH
Connector Type	TH16FPW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	GROUND
3	V	ACC
4	R	ILL
5	Y	ILL CONT.
6	SB	AV COMM (H)
8	LG	AV COMM (L)
9	B	DISK E-LOCK SIGNAL
14	Y	-
16	G	HAZARD ON

Connector No.	M84
Connector Name	OPTICAL SENSOR
Connector Type	TK09FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	POWER
2	P	OUTPUT
3	B	GROUND

Connector No.	M101
Connector Name	TIRE PRESSURE RECEIVER
Connector Type	TK04FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	EG	GROUND
2	L	SIGNAL
4	Y	BATTERY

Connector No.	M104
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	JAB04FB



Terminal No.	Color Of Wire	Signal Name [Specification]
1	EG	GROUND
2	Y	SIGNAL OUTPUT
4	LG	BATTERY

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

## BCM (BODY CONTROL MODULE)

Connector No.	M113
Connector Name	FOOT LAMP (PASSENGER SIDE)
Connector Type	A02FW




Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	BR	-

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT (F/L)
2	W	POWER WINDOW POWER SUPPLY(BAT)
3	Y	POWER WINDOW POWER SUPPLY(TRAP)

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
4	LG	INTERIOR ROOM LAMP POWER SUPPLY
5	L	PASSENGER DOOR UNLOCK OUTPUT
7	Y	STEP LAMP CONT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
10	BR	REAR DOOR UNLOCK OUTPUT
11	R	BAT (FUSE)
13	B	GROUND
14	W	PUSH-BUTTON IGNITION SW ILL GND
15	Y	ACC IND
17	W	TURN SIGNAL RH (FRONT)
18	BG	TURN SIGNAL LH (FRONT)
19	V	INT ROOM LAMP CONT

Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
20	V	TURN SIGNAL RH (REAR)
23	G	BACK DOOR OPEN OUTPUT
25	G	TURN SIGNAL LH (REAR)
26	G	REAR WIPER OUTPUT

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FCV-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
34	SB	LUGGAGE ROOM ANT-
35	V	LUGGAGE ROOM ANT+
38	B	BACK DOOR ANT-
39	W	BACK DOOR ANT+
47	Y	IGN RELAY (PDM F/R) CONT
52	SB	STARTER RELAY CONT
60	BR	PUSH SW
61	W	BACK DOOR OPENER REQUEST SW
64	V	I-KEY WARN BUZZER (ENG ROOM)
65	BG	REAR WIPER STOP POSITION
66	R	BACK DOOR SW
67	GR	BACK DOOR OPENER SW
68	BR	REAR RH DOOR SW
69	R	REAR LH DOOR SW


Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
72	R	ROOM ANT2 -
73	G	ROOM ANT2 +
74	SB	PASSENGER DOOR ANT-
75	GR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+

Terminal No.	Color Of Wire	Signal Name [Specification]
78	Y	ROOM ANT1-
79	BR	ROOM ANT1+
80	GR	MATS ANT AMP
81	W	MATS ANT AMP
82	R	IGN RELAY (F/B) CONT
83	Y	KEYLESS ENTRY RECEIVER COMA
87	BR	COMBI SW INPUT 5
88	V	COMBI SW INPUT 3
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL CONT
93	V	IGN IND
94	B	PUDGE LAMP CONT
95	BR	TRUNK LAMP CONT
96	GR	A, T SHIFT SELECTOR POWERS SUPPLY
99	GR	SHIFT P
100	G	PASSENGER DOOR REQUEST SW
101	SB	DRIVER DOOR REQUEST SW
102	BG	BLOWER FAN MOTOR RELAY CONT
103	LG	KEYLESS ENTRY RECEIVER POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	Y	COMBI SW INPUT 2
110	G	HAZARD SW

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FC-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
113	P	OPTICAL SENSOR
114	SB	STOP LAMP SW 1
118	SB	STOP LAMP SW 2
119	SB	DR DOOR UNLOCK SENSOR
121	BR	KEY SLOT SW
123	W	IGN F/B
124	LG	PASSENGER DOOR SW
132	BR	POWER WINDOW SW COMA
133	W	PUSH-BUTTON IGNITION SW ILL POWER
134	GR	LOCK IND

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

JRMW13759GB

# BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

BCM (BODY CONTROL MODULE)	
137	BQ RECEIVER SENSOR GND
138	Y RECEIVER SENSOR POWER SUPPLY
139	L TIRE PRESSURE RECEIVER COMM
140	GR SHIFTR N/P
141	G SECURITY IND LAMP GND
142	BG COMB SW OUTPUT 5
143	P COMB SW OUTPUT 1
144	G COMB SW OUTPUT 2
145	L COMB SW OUTPUT 3
146	SB COMB SW OUTPUT 4
150	LG DRIVER DOOR SW
151	G REAR WINDOW DEFOGGER RELAY CONT


Connector No.	M129
Connector Name	OPTION CONNECTOR (1)
Connector Type	TR408MW-NH

Terminal No.	Color Of Wire	Signal Name [Specification]
3	G	-
6	R	-


  

Connector No.	M131
Connector Name	INSIDE KEY ANTENNA (INSTRUMENT CENTER)
Connector Type	RK02FGY


Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	Y	-

Connector No.	M137
Connector Name	A/T SHIFT SELECTOR
Connector Type	TH1ZFW-NH


Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	L	-
4	B	-
5	G	-
7	R	-
8	SB	-
9	B	-
10	GR	-
11	R	-

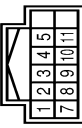Connector No.	R4
Connector Name	SUNROOF MOTOR ASSEMBLY
Connector Type	YEA10FGY


Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	SUNROOF CLOSE SWITCH (BITD) SIGNAL
5	P	SUNROOF OPEN SWITCH (BITD) SIGNAL
7	BR	SUNROOF POWER SUPPLY
8	L	VEHICLE SPEED SENSOR (2PULSE)
9	Y	RAF SIGNAL
10	G	GROUND

Connector No.	R13
Connector Name	VANITY MIRROR LAMP RH
Connector Type	MCA0ZFW

Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	R12
Connector Name	VANITY MIRROR LAMP LH
Connector Type	MCA0ZFW

Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	-
2	-	-

Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	-
2	-	-

## Fail-safe

### FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

JRMW13760GB

INFOID:000000012772724



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Display contents of CONSULT	Fail-safe	Cancellation
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2195: ANTI SCANNING	Inhibit engine cranking	Ignition switch ON → OFF
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Starter control relay signal</li> <li>• Starter relay status signal</li> </ul>
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> <li>• Starter motor relay control signal</li> <li>• Starter relay status signal (CAN)</li> </ul>
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> <li>• IGN relay (IPDM E/R) control signal: OFF (Battery voltage)</li> <li>• Ignition ON signal (CAN to IPDM E/R): OFF (Request signal)</li> <li>• Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)</li> </ul>
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions are fulfilled <ul style="list-style-type: none"> <li>• Power position changes to ACC</li> <li>• Receives engine status signal (CAN)</li> </ul>
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization

## REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper stop position signal. When the rear wiper stop position signal does not change for more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

Condition of cancellation

1. More than 1 minute is passed after the rear wiper stops.
2. Turn rear wiper switch OFF.
3. Operate the rear wiper switch or rear washer switch.

## DTC Inspection Priority Chart

INFOID:000000012772725

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> <li>• U1000: CAN COMM CIRCUIT</li> <li>• U1010: CONTROL UNIT (CAN)</li> </ul>
3	<ul style="list-style-type: none"> <li>• B2190: NATS ANTENNA AMP</li> <li>• B2191: DIFFERENCE OF KEY</li> <li>• B2192: ID DISCORD BCM-ECM</li> <li>• B2193: CHAIN OF BCM-ECM</li> <li>• B2195: ANTI SCANNING</li> </ul>

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

Priority	DTC
4	<ul style="list-style-type: none"> <li>• B2553: IGNITION RELAY</li> <li>• B2555: STOP LAMP</li> <li>• B2556: PUSH-BTN IGN SW</li> <li>• B2557: VEHICLE SPEED</li> <li>• B2560: STARTER CONT RELAY</li> <li>• B2601: SHIFT POSITION</li> <li>• B2602: SHIFT POSITION</li> <li>• B2603: SHIFT POSI STATUS</li> <li>• B2604: PNP SW</li> <li>• B2605: PNP SW</li> <li>• B2608: STARTER RELAY</li> <li>• B260A: IGNITION RELAY</li> <li>• B260F: ENG STATE SIG LOST</li> <li>• B2614: ACC RELAY CIRC</li> <li>• B2615: BLOWER RELAY CIRC</li> <li>• B2616: IGN RELAY CIRC</li> <li>• B2617: STARTER RELAY CIRC</li> <li>• B2618: BCM</li> <li>• B261A: PUSH-BTN IGN SW</li> <li>• B261E: VEHICLE TYPE</li> <li>• B26EA: KEY REGISTRATION</li> <li>• C1729: VHCL SPEED SIG ERR</li> <li>• U0415: VEHICLE SPEED SIG</li> </ul>
5	<ul style="list-style-type: none"> <li>• C1704: LOW PRESSURE FL</li> <li>• C1705: LOW PRESSURE FR</li> <li>• C1706: LOW PRESSURE RR</li> <li>• C1707: LOW PRESSURE RL</li> <li>• C1708: [NO DATA] FL</li> <li>• C1709: [NO DATA] FR</li> <li>• C1710: [NO DATA] RR</li> <li>• C1711: [NO DATA] RL</li> <li>• C1716: [PRESSDATA ERR] FL</li> <li>• C1717: [PRESSDATA ERR] FR</li> <li>• C1718: [PRESSDATA ERR] RR</li> <li>• C1719: [PRESSDATA ERR] RL</li> <li>• C1734: CONTROL UNIT</li> </ul>
6	<ul style="list-style-type: none"> <li>• B2621: INSIDE ANTENNA</li> <li>• B2622: INSIDE ANTENNA</li> <li>• B2623: INSIDE ANTENNA</li> </ul>

## DTC Index

INFOID:0000000012772726

### NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [BCS-18. "COMMON ITEM : CONSULT Function \(BCM - COMMON ITEM\)"](#).

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference
No DTC is detected. Further testing may be required.	—	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	—	<a href="#">BCS-41</a>
U1010: CONTROL UNIT (CAN)	—	—	—	—	<a href="#">BCS-42</a>
U0415: VEHICLE SPEED SIG	—	—	—	—	<a href="#">BCS-43</a>
B2190: NATS ANTENNA AMP	×	—	—	—	<a href="#">SEC-40</a>

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference
B2191: DIFFERENCE OF KEY	×	—	—	—	<a href="#">SEC-43</a>
B2192: ID DISCORD BCM-ECM	×	—	—	—	<a href="#">SEC-44</a>
B2193: CHAIN OF BCM-ECM	×	—	—	—	<a href="#">SEC-45</a>
B2195: ANTI SCANNING	×	—	—	—	<a href="#">SEC-46</a>
B2553: IGNITION RELAY	—	×	—	—	<a href="#">PCS-52</a>
B2555: STOP LAMP	—	×	—	—	<a href="#">SEC-47</a>
B2556: PUSH-BTN IGN SW	—	×	×	—	<a href="#">SEC-49</a>
B2557: VEHICLE SPEED	×	×	×	—	<a href="#">SEC-51</a>
B2560: STARTER CONT RELAY	×	×	×	—	<a href="#">SEC-52</a>
B2562: LOW VOLTAGE	—	×	—	—	<a href="#">BCS-44</a>
B2601: SHIFT POSITION	×	×	×	—	<a href="#">SEC-53</a>
B2602: SHIFT POSITION	×	×	×	—	<a href="#">SEC-56</a>
B2603: SHIFT POSI STATUS	×	×	×	—	<a href="#">SEC-59</a>
B2604: PNP SW	×	×	×	—	<a href="#">SEC-62</a>
B2605: PNP SW	×	×	×	—	<a href="#">SEC-64</a>
B2608: STARTER RELAY	×	×	×	—	<a href="#">SEC-66</a>
B260A: IGNITION RELAY	×	×	×	—	<a href="#">PCS-54</a>
B260F: ENG STATE SIG LOST	×	×	×	—	<a href="#">SEC-68</a>
B2614: ACC RELAY CIRC	—	×	×	—	<a href="#">PCS-56</a>
B2615: BLOWER RELAY CIRC	—	×	×	—	<a href="#">PCS-59</a>
B2616: IGN RELAY CIRC	—	×	×	—	<a href="#">PCS-62</a>
B2617: STARTER RELAY CIRC	×	×	×	—	<a href="#">SEC-71</a>
B2618: BCM	×	×	×	—	<a href="#">PCS-65</a>
B261A: PUSH-BTN IGN SW	—	×	×	—	<a href="#">SEC-73</a>
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-76</a>
B2621: INSIDE ANTENNA	—	×	—	—	<a href="#">DLK-58</a>
B2622: INSIDE ANTENNA	—	×	—	—	<a href="#">DLK-60</a>
B2623: INSIDE ANTENNA	—	×	—	—	<a href="#">DLK-62</a>
B26E1: ENG STATE NO RES	×	×	×	—	<a href="#">SEC-69</a>
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	—	<a href="#">SEC-70</a>
C1704: LOW PRESSURE FL	—	—	—	×	<a href="#">WT-25</a>
C1705: LOW PRESSURE FR	—	—	—	×	
C1706: LOW PRESSURE RR	—	—	—	×	
C1707: LOW PRESSURE RL	—	—	—	×	
C1708: [NO DATA] FL	—	—	—	×	<a href="#">WT-27</a>
C1709: [NO DATA] FR	—	—	—	×	
C1710: [NO DATA] RR	—	—	—	×	
C1711: [NO DATA] RL	—	—	—	×	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

[POWER DISTRIBUTION SYSTEM]

CONSULT display	Fail-safe	Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle Condition	Intelligent Key warning lamp ON	Tire pressure monitor warning lamp ON	Reference
C1716: [PRESSDATA ERR] FL	—	—	—	×	<a href="#">WT-30</a>
C1717: [PRESSDATA ERR] FR	—	—	—	×	
C1718: [PRESSDATA ERR] RR	—	—	—	×	
C1719: [PRESSDATA ERR] RL	—	—	—	×	
C1729: VHCL SPEED SIG ERR	—	—	—	×	<a href="#">WT-32</a>
C1734: CONTROL UNIT	—	—	—	×	<a href="#">WT-34</a>

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000012762385

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

**WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery or batteries, and wait at least 3 minutes before performing any service.


Precautions for Removing Battery Terminal

INFOID:000000012762386

When disconnecting the battery terminal, pay attention to the following.

- Always use a 12V battery as power source.
- Never disconnect battery terminal while engine is running.
- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.
- For vehicles with the engine listed below, remove the battery terminal after a lapse of the specified time:

BR08DE	: 4 minutes	YD25DDTi	: 2 minutes
D4D engine	: 20 minutes	YS23DDT	: 4 minutes
HRA2DDT	: 12 minutes	YS23DDTT	: 4 minutes
K9K engine	: 4 minutes	ZD30DDTi	: 60 seconds
M9R engine	: 4 minutes	ZD30DDTT	: 60 seconds
R9M engine	: 4 minutes		
V9X engine	: 4 minutes		

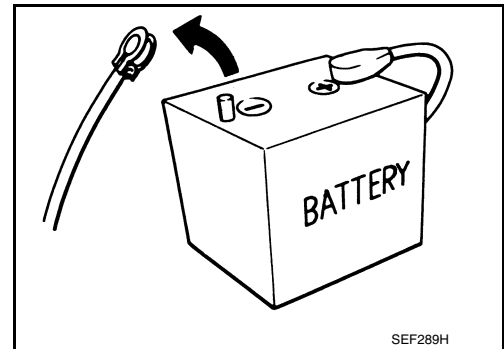

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
PCS  
N  
O  
P

**NOTE:**

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- After high-load driving, if the vehicle is equipped with the V9X engine, turn the ignition switch OFF and wait for at least 15 minutes to remove the battery terminal.

**NOTE:**

## PRECAUTIONS

### [POWER DISTRIBUTION SYSTEM]

#### < PRECAUTION >

- Turbocharger cooling pump may operate in a few minutes after the ignition switch is turned OFF.
- Example of high-load driving
  - Driving for 30 minutes or more at 140 km/h (86 MPH) or more.
  - Driving for 30 minutes or more on a steep slope.
- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.

**NOTE:**

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.


**NOTE:**

The removal of 12V battery may cause a DTC detection error.

#### Precaution for Procedure without Cowl Top Cover

INFOID:000000012762388

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

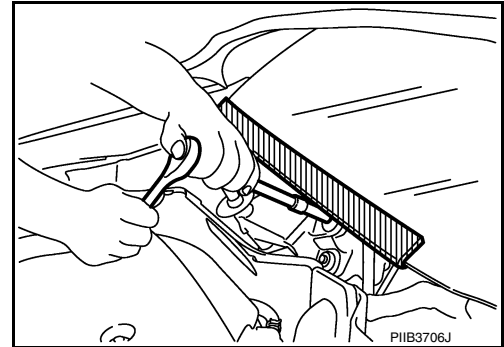

# PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## SYMPTOM DIAGNOSIS

### PUSH-BUTTON IGNITION SWITCH DOES NOT OPERATE

#### Description

INFOID:0000000012173464

Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.

#### NOTE:

The engine start function, door lock function, power distribution system, and NATS-IVIS/NVIS in the Intelligent Key system are closely related to each other regarding control. The vehicle security function can operate only when the door lock and power distribution system are operating normally.

#### Conditions of Vehicle (Operating Conditions)

- “ENGINE START BY I-KEY” in “WORK SUPPORT” is ON when setting on CONSULT.
- Intelligent Key is not inserted in key slot.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

#### Diagnosis Procedure

INFOID:0000000012173465

#### 1. CHECK INTELLIGENT KEY SYSTEM (DOOR LOCK FUNCTION)

Lock/unlock door with door request switch.

Refer to [DLK-19. "DOOR LOCK FUNCTION : System Description"](#).

Is the operation normal?

YES >> GO TO 2.

NO >> Check Intelligent Key system (door lock function). Refer to [DLK-188. "ALL DOOR : Diagnosis Procedure"](#).

#### 2. PERFORM WORK SUPPORT

Perform “INSIDE ANT DIAGNOSIS” on Work Support of “INTELLIGENT KEY”.

Refer to [DLK-51. "INTELLIGENT KEY : CONSULT Function \(BCM - INTELLIGENT KEY\)"](#).

>> GO TO 3.

#### 3. PERFORM SELF-DIAGNOSTIC RESULT

Perform Self-Diagnostic Result of “BCM”.

Is DTC detected?

YES >> Refer to [DLK-58. "DTC Logic"](#) (instrument center), [DLK-62. "DTC Logic"](#) (luggage room).

NO >> GO TO 4.

#### 4. CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.

Refer to [PCS-69. "Component Function Check"](#).

Is the operation normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

#### 5. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection normal?

YES >> Check intermittent incident. Refer to [GI-42. "Intermittent Incident"](#).

NO >> GO TO 1.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS

# PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATE

< SYMPTOM DIAGNOSIS >

[POWER DISTRIBUTION SYSTEM]

## PUSH-BUTTON IGNITION SWITCH POSITION INDICATOR DOES NOT ILLUMINATE

### Description

INFOID:000000012173466

- Before performing the diagnosis in the following table, check “Work Flow”. Refer to [PCS-37, "Work Flow"](#).
- Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.

### Conditions of Vehicle (Operating Conditions)

- “ENGINE START BY I-KEY” in “WORK SUPPORT” is ON when setting on CONSULT.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

### Diagnosis Procedure

INFOID:000000012173467

#### 1. CHECK PUSH-BUTTON IGNITION SWITCH INDICATOR

Check push-button ignition switch indicator.

Refer to [PCS-71, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

#### 2. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).

NO >> GO TO 1.



# PUSH-BUTTON IGNITION SWITCH

< REMOVAL AND INSTALLATION >

[POWER DISTRIBUTION SYSTEM]

## REMOVAL AND INSTALLATION


### PUSH-BUTTON IGNITION SWITCH

#### Removal and Installation

INFOID:000000012173468

#### REMOVAL

Remove the push-button ignition switch fixing pawl using a remover tool (A), and then remove push-button ignition switch (1).

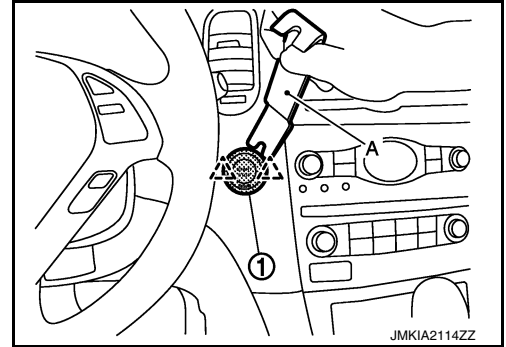

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
N  
O  
P

PCS