

A
B
C

TM

SECTION

TRANSAXLE & TRANSMISSION

TM

CONTENTS

7AT: RE7R01A		E
BASIC INSPECTION	5	F
DIAGNOSIS AND REPAIR WORK FLOW	5	G
Work Flow	5	
Diagnostic Work Sheet	6	
SYSTEM DESCRIPTION	8	H
A/T CONTROL SYSTEM	8	I
System Diagram	8	
System Description	8	
Component Parts Location	9	
Component Description	10	
LINE PRESSURE CONTROL	11	J
System Diagram	11	
System Description	11	
Component Parts Location	13	
Component Description	14	
SHIFT CHANGE CONTROL	15	K
System Diagram	15	
System Description	15	
Component Parts Location	18	
Component Description	19	
SHIFT PATTERN CONTROL	20	L
ASC (ADAPTIVE SHIFT CONTROL)	20	M
ASC (ADAPTIVE SHIFT CONTROL) : System Diagram	20	
ASC (ADAPTIVE SHIFT CONTROL) : System Description	20	
ASC (ADAPTIVE SHIFT CONTROL) : Component Parts Location	22	
ASC (ADAPTIVE SHIFT CONTROL) : Component Description	23	
MANUAL MODE	23	N
MANUAL MODE : System Diagram	24	
MANUAL MODE : System Description	24	
MANUAL MODE : Component Parts Location	25	
MANUAL MODE : Component Description	26	
LOCK-UP CONTROL	27	O
System Diagram	27	
System Description	27	
Component Parts Location	29	
Component Description	30	
SHIFT MECHANISM	31	P
Cross-Sectional View	31	
System Diagram	33	
System Description	33	
Component Parts Location	57	
Component Description	58	
SHIFT LOCK SYSTEM	59	
System Description	59	
Component Parts Location	60	
Component Description	60	
ON BOARD DIAGNOSTIC (OBD) SYSTEM	62	
Diagnosis Description	62	
DIAGNOSIS SYSTEM (TCM)	63	
CONSULT Function	63	
DTC/CIRCUIT DIAGNOSIS	69	
U0100 LOST COMMUNICATION (ECM A)	69	
DTC Logic	69	
Diagnosis Procedure	69	
U0300 CAN COMMUNICATION DATA	70	
Description	70	
DTC Logic	70	
Diagnosis Procedure	70	
U1000 CAN COMM CIRCUIT	71	
Description	71	
DTC Logic	71	
Diagnosis Procedure	71	

P0615 STARTER RELAY	72	Description	97
Description	72	DTC Logic	97
DTC Logic	72	Diagnosis Procedure	98
Diagnosis Procedure	72		
P0705 TRANSMISSION RANGE SENSOR A...	74	P0740 TORQUE CONVERTER	99
Description	74	Description	99
DTC Logic	74	DTC Logic	99
Diagnosis Procedure	74	Diagnosis Procedure	99
P0710 TRANSMISSION FLUID TEMPERA-		P0744 TORQUE CONVERTER	101
TURE SENSOR A	76	Description	101
Description	76	DTC Logic	101
DTC Logic	76	Diagnosis Procedure	101
Diagnosis Procedure	77	P0745 PRESSURE CONTROL SOLENOID A.	103
P0717 INPUT SPEED SENSOR A	79	Description	103
Description	79	DTC Logic	103
DTC Logic	79	Diagnosis Procedure	103
Diagnosis Procedure	79	P0750 SHIFT SOLENOID A	104
P0720 OUTPUT SPEED SENSOR	81	Description	104
Description	81	DTC Logic	104
DTC Logic	81	Diagnosis Procedure	104
Diagnosis Procedure	82	P0775 PRESSURE CONTROL SOLENOID B.	105
P0725 ENGINE SPEED	83	Description	105
Description	83	DTC Logic	105
DTC Logic	83	Diagnosis Procedure	105
Diagnosis Procedure	83	P0780 SHIFT	106
P0729 6GR INCORRECT RATIO	85	Description	106
Description	85	DTC Logic	106
DTC Logic	85	Diagnosis Procedure	106
Diagnosis Procedure	86	P0795 PRESSURE CONTROL SOLENOID C.	108
P0730 INCORRECT GEAR RATIO	87	Description	108
Description	87	DTC Logic	108
DTC Logic	87	Diagnosis Procedure	108
Diagnosis Procedure	87	P1705 TP SENSOR	109
P0731 1GR INCORRECT RATIO	89	Description	109
Description	89	DTC Logic	109
DTC Logic	89	Diagnosis Procedure	109
Diagnosis Procedure	90	P1721 VEHICLE SPEED SIGNAL	111
P0732 2GR INCORRECT RATIO	91	Description	111
Description	91	DTC Logic	111
DTC Logic	91	Diagnosis Procedure	112
Diagnosis Procedure	92	P1730 INTERLOCK	113
P0733 3GR INCORRECT RATIO	93	Description	113
Description	93	DTC Logic	113
DTC Logic	93	Judgment of A/T Interlock	113
Diagnosis Procedure	94	Diagnosis Procedure	114
P0734 4GR INCORRECT RATIO	95	P1734 7GR INCORRECT RATIO	115
Description	95	Description	115
DTC Logic	95	DTC Logic	115
Diagnosis Procedure	96	Diagnosis Procedure	116
P0735 5GR INCORRECT RATIO	97	P1815 M-MODE SWITCH	117
		Description	117

DTC Logic	117	PRECAUTION	169	A
Diagnosis Procedure	117	PRECAUTIONS	169	B
Component Inspection (Manual Mode Switch)	119	Caution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	169	C
P2713 PRESSURE CONTROL SOLENOID D. 120		On Board Diagnostic (OBD) System of Engine and A/T	169	TM
Description	120	General Precautions	170	
DTC Logic	120	Service Notice or Precaution	170	
Diagnosis Procedure	120	Caution for Procedure without Cowl Top Cover.	171	
P2722 PRESSURE CONTROL SOLENOID E. 121		Precautions for Removing Battery Terminal	171	
Description	121	PREPARATION	172	
DTC Logic	121	PREPARATION	172	E
Diagnosis Procedure	121	Special Service Tool	172	
P2731 PRESSURE CONTROL SOLENOID F. 122		Commercial Service Tool	173	F
Description	122	PERIODIC MAINTENANCE	174	
DTC Logic	122	A/T FLUID	174	G
Diagnosis Procedure	122	Inspection	174	
P2807 PRESSURE CONTROL SOLENOID G. 123		Changing	174	H
Description	123	Adjustment	176	
DTC Logic	123	A/T FLUID COOLER	177	I
Diagnosis Procedure	123	Cleaning	177	
MAIN POWER SUPPLY AND GROUND CIRCUIT	125	Inspection	179	J
Diagnosis Procedure	125	STALL TEST	180	K
SHIFT POSITION INDICATOR CIRCUIT	127	Inspection and Judgment	180	L
Description	127	A/T POSITION	181	M
Component Function Check	127	Inspection and Adjustment	181	N
Diagnosis Procedure	127	REMOVAL AND INSTALLATION	182	O
SHIFT LOCK SYSTEM	128	A/T SHIFT SELECTOR	182	P
Wiring Diagram - A/T SHIFT LOCK SYSTEM - ...	128	Exploded View	182	
Component Function Check	130	Removal and Installation	183	
Diagnosis Procedure	131	Inspection and Adjustment	184	
Component Inspection (Shift Lock Solenoid)	133	CONTROL ROD	185	
Component Inspection (Stop Lamp Switch)	133	Exploded View	185	
SELECTOR LEVER POSITION INDICATOR .. 134		Removal and Installation	185	
Description	134	Inspection and Adjustment	185	
Component Function Check	134	CONTROL VALVE & TCM	186	
Diagnosis Procedure	134	Exploded View	186	
Component Inspection (Selector Lever Position Indicator)	137	Removal and Installation	186	
ECU DIAGNOSIS INFORMATION	139	Inspection	190	
TCM	139	PARKING COMPONENTS	191	
Reference Value	139	2WD	191	
Wiring Diagram - A/T CONTROL SYSTEM -	145	2WD : Exploded View	191	
Fail-Safe	152	2WD : Removal and Installation	191	
Protection Control	155	2WD : Inspection and Adjustment	194	
DTC Inspection Priority Chart	156	REAR OIL SEAL	196	
DTC Index	157			
SYMPTOM DIAGNOSIS	159			
SYSTEM SYMPTOM	159			
Symptom Table	159			

2WD	196	Assembly	249
2WD : Exploded View	196	Inspection	273
2WD : Removal and Installation	196		
2WD : Inspection and Adjustment	197		
AWD	197		
AWD : Exploded View	197		
AWD : Removal and Installation	197		
AWD : Inspection and Adjustment	198		
OUTPUT SPEED SENSOR	199		
2WD	199		
2WD : Exploded View	199		
2WD : Removal and Installation	199		
2WD : Inspection and Adjustment	203		
AIR BREATHER HOSE	204		
2WD	204		
2WD : Exploded View	204		
2WD : Removal and Installation	204		
AWD	205		
AWD : Exploded View	205		
AWD : Removal and Installation	205		
FLUID COOLER SYSTEM	206		
2WD	206		
2WD : Exploded View	206		
2WD : Removal and Installation	206		
2WD : Inspection and Adjustment	207		
AWD	208		
AWD : Exploded View	208		
AWD : Removal and Installation	208		
AWD : Inspection and Adjustment	210		
UNIT REMOVAL AND INSTALLATION ...	211		
TRANSMISSION ASSEMBLY	211		
2WD	211		
2WD : Exploded View	211		
2WD : Removal and Installation	211		
2WD : Inspection and Adjustment	213		
AWD	213		
AWD : Exploded View	214		
AWD : Removal and Installation	214		
AWD : Inspection and Adjustment	216		
UNIT DISASSEMBLY AND ASSEMBLY ..	217		
TRANSMISSION ASSEMBLY	217		
Exploded View	217		
Oil Channel	228		
Location of Needle Bearings and Bearing Races ..	228		
Location of Snap Rings	231		
Disassembly	232		
		Assembly	285
		Inspection	286
		OIL PUMP, 2346 BRAKE, FRONT BRAKE	
		PISTON	276
		Exploded View	276
		Disassembly	276
		Assembly	280
		Inspection and Adjustment	283
		UNDER DRIVE CARRIER, FRONT BRAKE	
		HUB	285
		Exploded View	285
		Disassembly	285
		Assembly	286
		Inspection	286
		FRONT CARRIER, INPUT CLUTCH, REAR	
		INTERNAL GEAR	288
		Exploded View	288
		Disassembly	289
		Assembly	290
		Inspection	292
		MID SUN GEAR, REAR SUN GEAR, HIGH	
		AND LOW REVERSE CLUTCH HUB	293
		Exploded View	293
		Disassembly	293
		Assembly	295
		Inspection	297
		HIGH AND LOW REVERSE CLUTCH	298
		Exploded View	298
		Disassembly	298
		Assembly	299
		Inspection	299
		DIRECT CLUTCH	300
		Exploded View	300
		Disassembly	300
		Assembly	300
		Inspection	301
		SERVICE DATA AND SPECIFICATIONS	
		(SDS)	302
		SERVICE DATA AND SPECIFICATIONS	
		(SDS)	302
		General Specification	302
		Vehicle Speed at Which Gear Shifting Occurs ...	302
		Vehicle Speed at Which Lock-up Occurs/Releas-	
		es	302
		Stall Speed	303
		Torque Converter	303
		Total End Play	303
		Reverse Brake Clearance	303
		Front Brake Clearance	303
		2346 Brake Clearance	303

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000012167457

1.OBTAIN INFORMATION ABOUT SYMPTOM

Refer to [TM-6, "Diagnostic Work Sheet"](#) and interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred) as much as possible when the customer brings in the vehicle.

>> GO TO 2.

2.CHECK DTC

1. Before checking the malfunction, check whether any DTC exists.
2. If DTC exists, perform the following operations.
 - Record the DTC and freeze frame data. (Print out the data using CONSULT and affix it to the Work Order Sheet.)
 - Erase DTCs.
 - Check the relationship between the cause that is clarified with DTC and the malfunction information described by the customer. [TM-159, "Symptom Table"](#) is effective.
3. Check the information of related service bulletins and others also.

Do malfunction information and DTC exists?

- Malfunction information and DTC exists. >>GO TO 3.
- Malfunction information exists, but no DTC. >>GO TO 4.
- No malfunction information, but DTC exists. >>GO TO 5.

3.REPRODUCE MALFUNCTION SYMPTOM

Check any malfunction described by a customer, except those with DTC on the vehicle. Also investigate whether the symptom is a fail-safe or normal operation. Refer to [TM-152, "Fail-Safe"](#). When a malfunction symptom is reproduced, the question sheet is effective. Refer to [TM-6, "Diagnostic Work Sheet"](#).

Verify the relationship between the symptom and the conditions in which the malfunction described by the customer occurs.

>> GO TO 5.

4.REPRODUCE MALFUNCTION SYMPTOM

Check the malfunction described by the customer on the vehicle. Also investigate whether the symptom is a fail-safe or normal operation. Refer to [TM-152, "Fail-Safe"](#). When a malfunction symptom is reproduced, the question sheet is effective. Refer to [TM-6, "Diagnostic Work Sheet"](#).

Verify the relationship between the symptom and the conditions in which the malfunction described by the customer occurs.

>> GO TO 6.

5.PERFORM "DTC CONFIRMATION PROCEDURE"

Perform "DTC CONFIRMATION PROCEDURE" of the appropriate DTC to check if DTC is detected again. Refer to [TM-156, "DTC Inspection Priority Chart"](#) when multiple DTCs are detected, and then determine the order for performing the diagnosis.

NOTE:

If no DTC is detected, refer to the freeze frame data.

Is any DTC detected?

- YES >> GO TO 7.
- NO >> Check according to [GI-42, "Intermittent Incident"](#).

6.IDENTIFY MALFUNCTIONING SYSTEM WITH "DIAGNOSIS CHART BY SYMPTOM"

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[7AT: RE7R01A]

Use [TM-159. "Symptom Table"](#) from the symptom inspection result in step 4. Then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 8.

7. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the detected malfunctioning parts.

Reconnect parts or connector after repairing or replacing, and then erase DTC if necessary.

>> GO TO 8.

8. FINAL CHECK

Perform "DTC CONFIRMATION PROCEDURE" again to make sure that the repair is correctly performed. Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 3 or 4.

Is DTC or malfunction symptom reproduced?

YES-1 >> DTC is reproduced: GO TO 5.

YES-2 >> Malfunction symptom is reproduced: GO TO 6.

NO >> Before delivering the vehicle to the customer, make sure that DTC is erased.

Diagnostic Work Sheet

INFOID:000000012167458

DESCRIPTION

There are many operating conditions that may cause a malfunction of the transmission parts. By understanding those conditions properly, a quick and exact diagnosis can be achieved.

In general, customers have their own criteria for a problem. Therefore, it is important to understand the symptom and status well enough by asking the customer about the concerns carefully. In order to systemize all the information for the diagnosis, prepare the question sheet referring to the question points.

KEY POINTS

WHAT Vehicle & engine model
WHEN Date, Frequencies
WHERE..... Road conditions
HOW Operating conditions,
Weather conditions,
Symptoms

SEF907L

WORKSHEET SAMPLE

Question Sheet

Customer name	MR/MS	Engine #		Manuf. Date	
		Incident Date		VIN	
		Model & Year		In Service Date	
		Trans.		Mileage	km/Mile

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[7AT: RE7R01A]

Question Sheet							
Symptoms	<input type="checkbox"/> Vehicle does not move (<input type="checkbox"/> Any position <input type="checkbox"/> Particular position) <input type="checkbox"/> No up-shift (<input type="checkbox"/> 1GR → 2GR <input type="checkbox"/> 2GR → 3GR <input type="checkbox"/> 3GR → 4GR <input type="checkbox"/> 4GR → 5GR <input type="checkbox"/> 5GR → 6GR <input type="checkbox"/> 6GR → 7GR) <input type="checkbox"/> No down-shift (<input type="checkbox"/> 7GR → 6GR <input type="checkbox"/> 6GR → 5GR <input type="checkbox"/> 5GR → 4GR <input type="checkbox"/> 4GR → 3GR <input type="checkbox"/> 3GR → 2GR <input type="checkbox"/> 2GR → 1GR) <input type="checkbox"/> Lock-up malfunction <input type="checkbox"/> Shift point too high or too low <input type="checkbox"/> Shift shock or slip <input type="checkbox"/> Noise or vibration <input type="checkbox"/> No kick down <input type="checkbox"/> No pattern select <input type="checkbox"/> Others						
Frequency	<input type="checkbox"/> All the time <input type="checkbox"/> Under certain conditions <input type="checkbox"/> Sometimes (times a day)						
Weather conditions	<input type="checkbox"/> Not affected <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10%;">Weather</td> <td> <input type="checkbox"/> Fine <input type="checkbox"/> Clouding <input type="checkbox"/> Raining <input type="checkbox"/> Snowing <input type="checkbox"/> Other () </td> </tr> <tr> <td>Temp.</td> <td> <input type="checkbox"/> Hot <input type="checkbox"/> Warm <input type="checkbox"/> Cool <input type="checkbox"/> Cold <input type="checkbox"/> Temp. [Approx. °C (°F)] </td> </tr> <tr> <td>Humidity</td> <td> <input type="checkbox"/> High <input type="checkbox"/> Middle <input type="checkbox"/> Low </td> </tr> </table>	Weather	<input type="checkbox"/> Fine <input type="checkbox"/> Clouding <input type="checkbox"/> Raining <input type="checkbox"/> Snowing <input type="checkbox"/> Other ()	Temp.	<input type="checkbox"/> Hot <input type="checkbox"/> Warm <input type="checkbox"/> Cool <input type="checkbox"/> Cold <input type="checkbox"/> Temp. [Approx. °C (°F)]	Humidity	<input type="checkbox"/> High <input type="checkbox"/> Middle <input type="checkbox"/> Low
Weather	<input type="checkbox"/> Fine <input type="checkbox"/> Clouding <input type="checkbox"/> Raining <input type="checkbox"/> Snowing <input type="checkbox"/> Other ()						
Temp.	<input type="checkbox"/> Hot <input type="checkbox"/> Warm <input type="checkbox"/> Cool <input type="checkbox"/> Cold <input type="checkbox"/> Temp. [Approx. °C (°F)]						
Humidity	<input type="checkbox"/> High <input type="checkbox"/> Middle <input type="checkbox"/> Low						
Transmission conditions	<input type="checkbox"/> Not affected <input type="checkbox"/> Cold <input type="checkbox"/> During warm-up <input type="checkbox"/> After warm-up <input type="checkbox"/> Engine speed (rpm)						
Road conditions	<input type="checkbox"/> Not affected <input type="checkbox"/> In town <input type="checkbox"/> In suburbs <input type="checkbox"/> Freeway <input type="checkbox"/> Off road (Up / Down)						
Driving conditions	<input type="checkbox"/> Not affected <input type="checkbox"/> At starting <input type="checkbox"/> While idling <input type="checkbox"/> While engine racing <input type="checkbox"/> At racing <input type="checkbox"/> While cruising <input type="checkbox"/> While accelerating <input type="checkbox"/> While decelerating <input type="checkbox"/> While turning (Right / Left) <input type="checkbox"/> Vehicle speed [km/h (MPH)]						
Other conditions							


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM DESCRIPTION

A/T CONTROL SYSTEM

System Diagram

INFOID:000000012167459

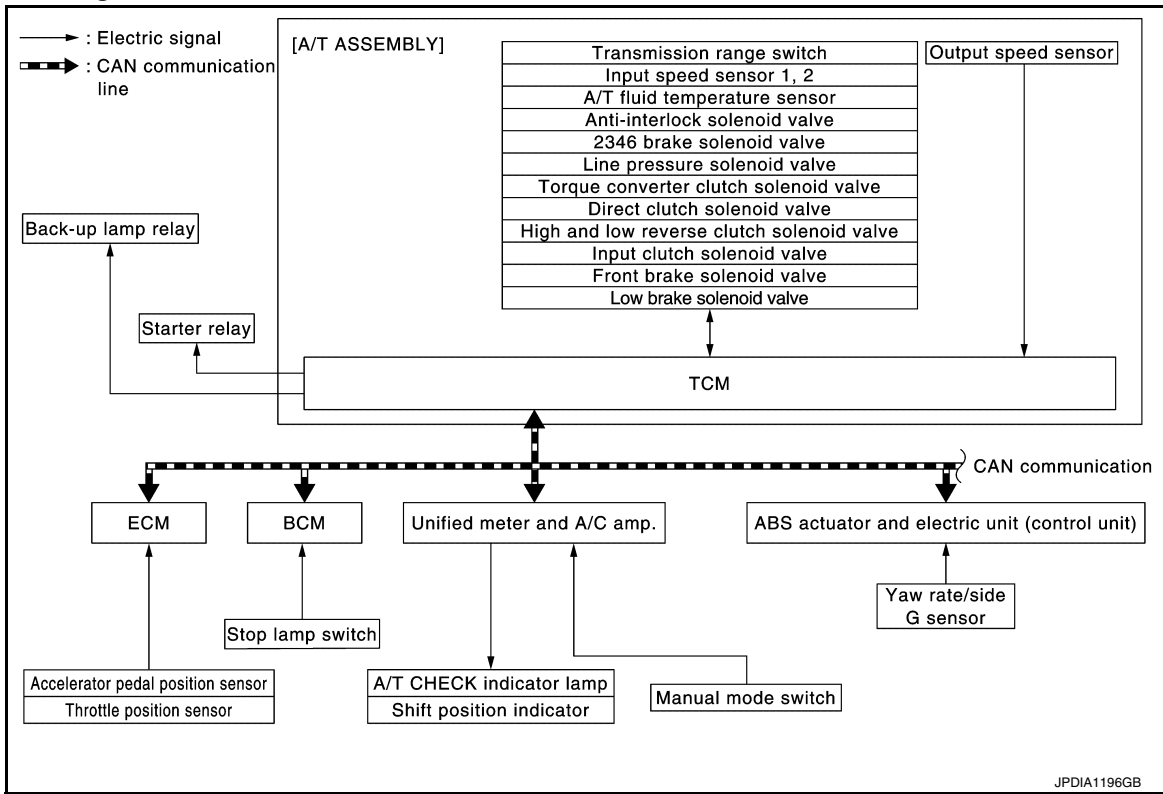

JPDIA1196GB

System Description

INFOID:000000012167460

INPUT/OUTPUT SIGNAL CHART


Sensor (or signal)	TCM function	Actuator
Transmission range switch	Line pressure control (TM-11) Shift change control (TM-15) Shift pattern control • ASC (Adaptive shift control) (TM-20) • Manual mode (TM-24) Lock-up control (TM-27) Fail-safe control (TM-152) Self-diagnosis (TM-63) CONSULT communication line (TM-63) CAN communication line (TM-71)	Input clutch solenoid valve Direct clutch solenoid valve Front brake solenoid valve High and low reverse clutch solenoid valve Low brake solenoid valve Torque converter clutch solenoid valve Line pressure solenoid valve Anti-interlock solenoid valve 2346 brake solenoid valve A/T CHECK indicator lamp Back-up lamp relay Starter relay
Accelerator pedal position signal		
Closed throttle position signal		
Wide open throttle position signal		
Engine speed signal		
A/T fluid temperature sensor		
Output speed sensor		
Vehicle speed signal		
Manual mode switch signal		
Stop lamp switch signal		
Side G sensor signal		
Input speed sensor 1, 2		

SYSTEM DESCRIPTION

- The A/T senses vehicle operating conditions through various sensors or signals. It always controls the optimum shift position and reduces shifting and lock-up shocks.
- Receive input signals transmitted from various switches and sensors.
- Determine required line pressure, shifting point, lock-up operation, etc.
- Transmit required output signals to the respective solenoids.

Component Parts Location

INFOID:000000012167461

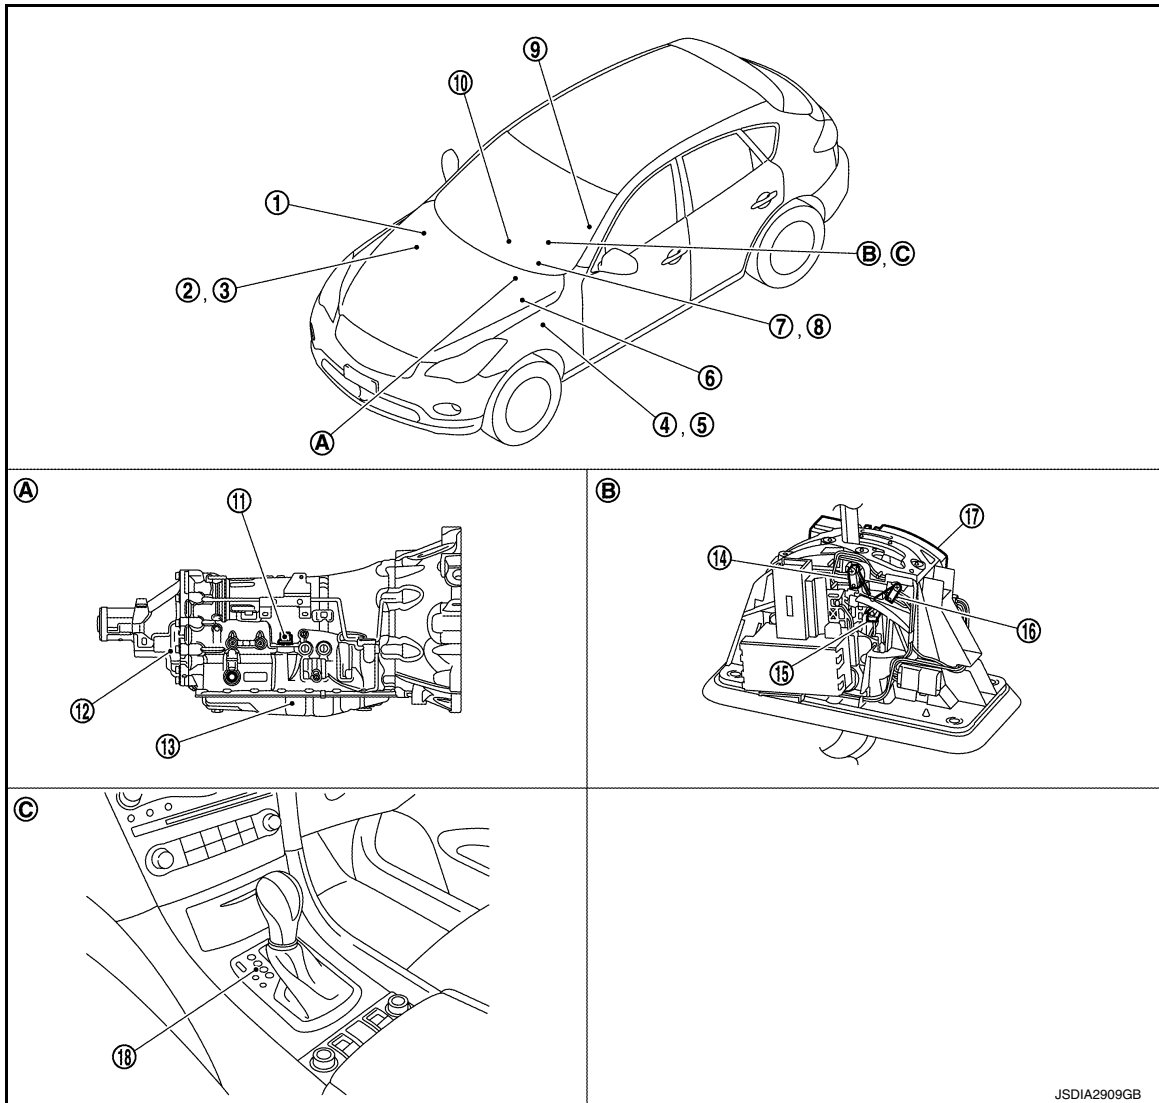

- | | | |
|--|---|---|
| 1. IPDM E/R
Refer to PCS-4. "Component Parts Location" . | 2. ECM
Refer to EC-39. "Component Parts Location" . | 3. BCM
Refer to BCS-9. "Component Parts Location" . |
| 4. Accelerator pedal position sensor
Refer to EC-39. "Component Parts Location" . | 5. Stop lamp switch
Refer to TM-60. "Component Parts Location" . | 6. ABS actuator and electric unit (control unit)
Refer to BRC-12. "Component Parts Location" . |
| 7. A/T CHECK indicator lamp
(On the combination meter) | 8. Shift position indicator
(On the combination meter) | 9. Yaw rate/side G sensor
Refer to BRC-12. "Component Parts Location" . |
| 10. Unified meter and A/C amp.
Refer to MWI-10. "METER SYSTEM : Component Parts Location" . | 11. Joint connector | 12. Output speed sensor*1 |
| 13. Control valve & TCM*2 | 14. Manual mode position select switch
(shift-up) | 15. Manual mode select switch |
| 16. Manual mode position select switch
(shift-down) | 17. Shift position switch | 18. Selector lever position indicator |
| A. A/T assembly | B. A/T shift selector assembly | C. Center console |

*1: Output speed sensor is installed in A/T assembly.

*2: Control valve & TCM is installed in A/T assembly.

A/T CONTROL SYSTEM

[7AT: RE7R01A]

< SYSTEM DESCRIPTION >

NOTE:

The following components are included in control valve & TCM.

- TCM
- Input speed sensor 1, 2
- A/T fluid temperature sensor
- Transmission range switch
- Direct clutch solenoid valve
- High and low reverse clutch solenoid valve
- Input clutch solenoid valve
- Front brake solenoid valve
- Low brake solenoid valve
- Anti-interlock solenoid valve
- 2346 brake solenoid valve
- Line pressure solenoid valve
- Torque converter clutch solenoid valve

Component Description

INFOID:000000012167462

Name	Function
TCM	The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.
Transmission range switch	TM-74. "Description"
Output speed sensor	TM-81. "Description"
Input speed sensor 1	TM-79. "Description"
Input speed sensor 2	
A/T fluid temperature sensor	TM-76. "Description"
Input clutch solenoid valve	TM-105. "Description"
Front brake solenoid valve	TM-108. "Description"
Direct clutch solenoid valve	TM-123. "Description"
High and low reverse clutch solenoid valve	TM-120. "Description"
Low brake solenoid valve	TM-121. "Description"
Anti-interlock solenoid valve	TM-104. "Description"
2346 brake solenoid valve	TM-122. "Description"
Torque converter clutch solenoid valve	TM-99. "Description"
Line pressure solenoid valve	TM-103. "Description"
Accelerator pedal position sensor	TM-109. "Description"
Throttle position sensor	
Manual mode switch	TM-117. "Description"
Starter relay	TM-72. "Description"
A/T CHECK indicator lamp	When the ignition switch is pushed to the ON position, the light comes on for 2 seconds.
Stop lamp switch	BRC-62. "Description"
ECM	EC-39. "System Description"
BCM	BCS-8. "System Description"
Unified meter and A/C amp.	MWI-6. "METER SYSTEM : System Description"
ABS actuator and electric unit (control unit)	BRC-21. "System Description"
Wheel sensor	BRC-36. "Description"
Yaw rate/side G sensor	BRC-84. "Description"


LINE PRESSURE CONTROL

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

LINE PRESSURE CONTROL

System Diagram

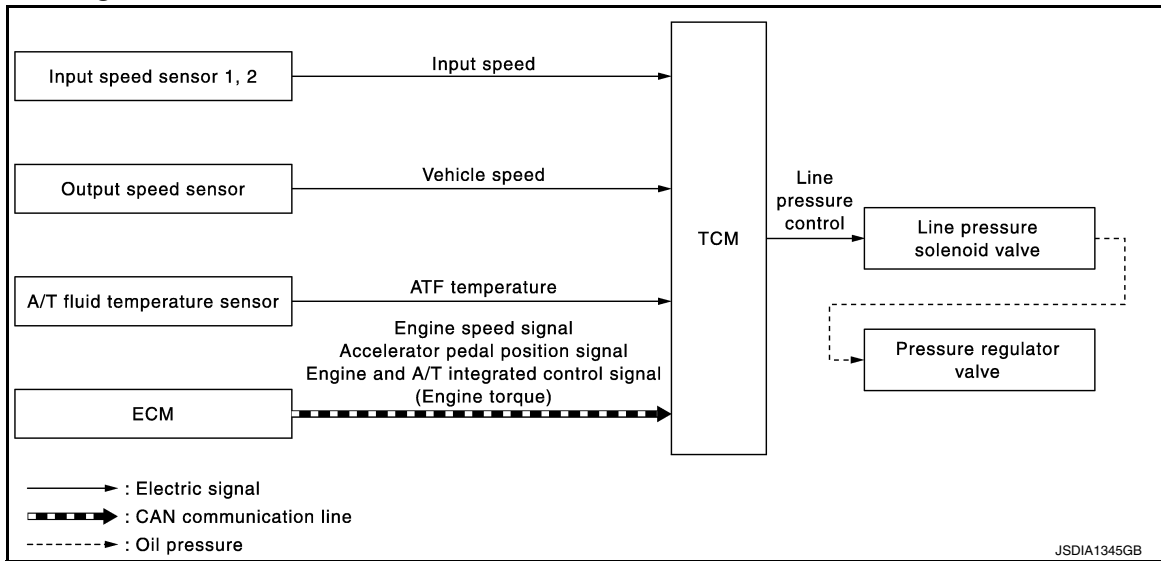

System Description

INFOID:000000012167464

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to TCM	TCM function	Actuator
Input speed sensor 1, 2	Input speed	Line pressure control	Line pressure solenoid valve ↓ Pressure regulator valve
Output speed sensor	Vehicle speed		
A/T fluid temperature sensor	ATF temperature		
ECM	Engine speed signal* Accelerator pedal position signal* Engine and A/T integrated control signal (Engine torque)*		

*: This signal is transmitted by CAN communication line.

SYSTEM DESCRIPTION

- When an engine and A/T integrated control signal (engine torque) equivalent to the engine drive force is transmitted from the ECM to the TCM, the TCM controls the line pressure solenoid valve. This line pressure solenoid controls the pressure regulator valve as the signal pressure and adjusts the pressure of the operating oil discharged from the oil pump to the line pressure most appropriate to the driving state.
- The TCM has stored in memory a number of patterns for the optimum line pressure characteristic for the driving state.
- In order to obtain the most appropriate line pressure characteristic to meet the current driving state, the TCM controls the line pressure solenoid current value and thus controls the line pressure.


Normal Control

LINE PRESSURE CONTROL

< SYSTEM DESCRIPTION >


[7AT: RE7R01A]

Each clutch is adjusted to the necessary pressure to match the engine drive force.

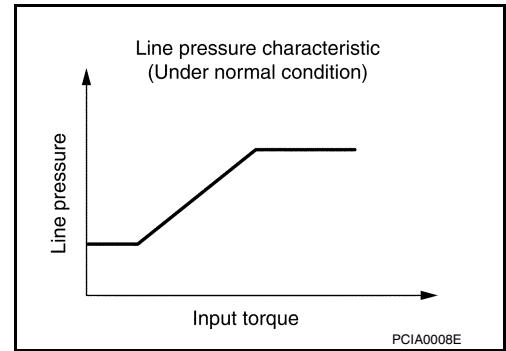


Back-up Control (Engine Brake)

When the select operation is performed during driving and the A/T is shifted down, the line pressure is set according to the vehicle speed.

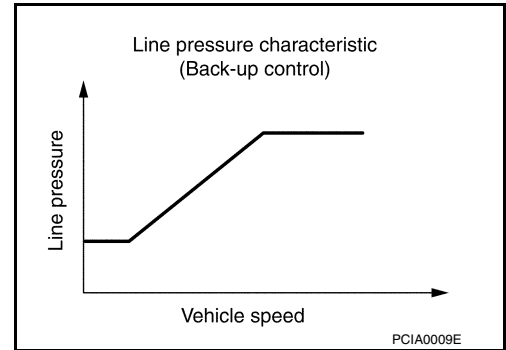

During Shift Change

The necessary and adequate line pressure for shift change is set. For this reason, line pressure pattern setting corresponds to engine torque and gearshift selection. Also, line pressure characteristic corresponds to engine speed, during engine brake operation.

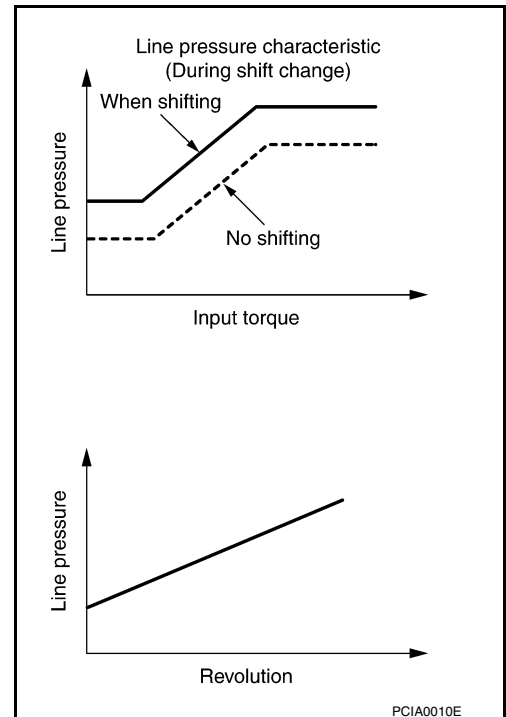


At Low Fluid Temperature

LINE PRESSURE CONTROL

< SYSTEM DESCRIPTION >


[7AT: RE7R01A]

When the A/T fluid temperature drops below the prescribed temperature, in order to speed up the action of each friction element, the line pressure is set higher than the normal line pressure characteristic.

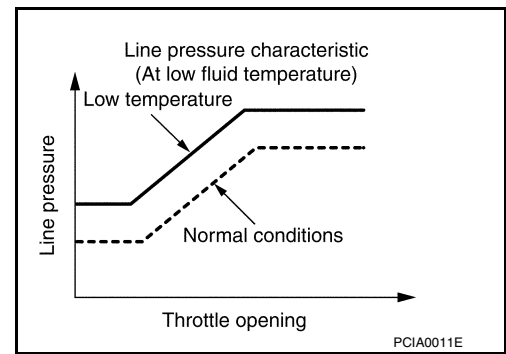

Component Parts Location

INFOID:000000012167465

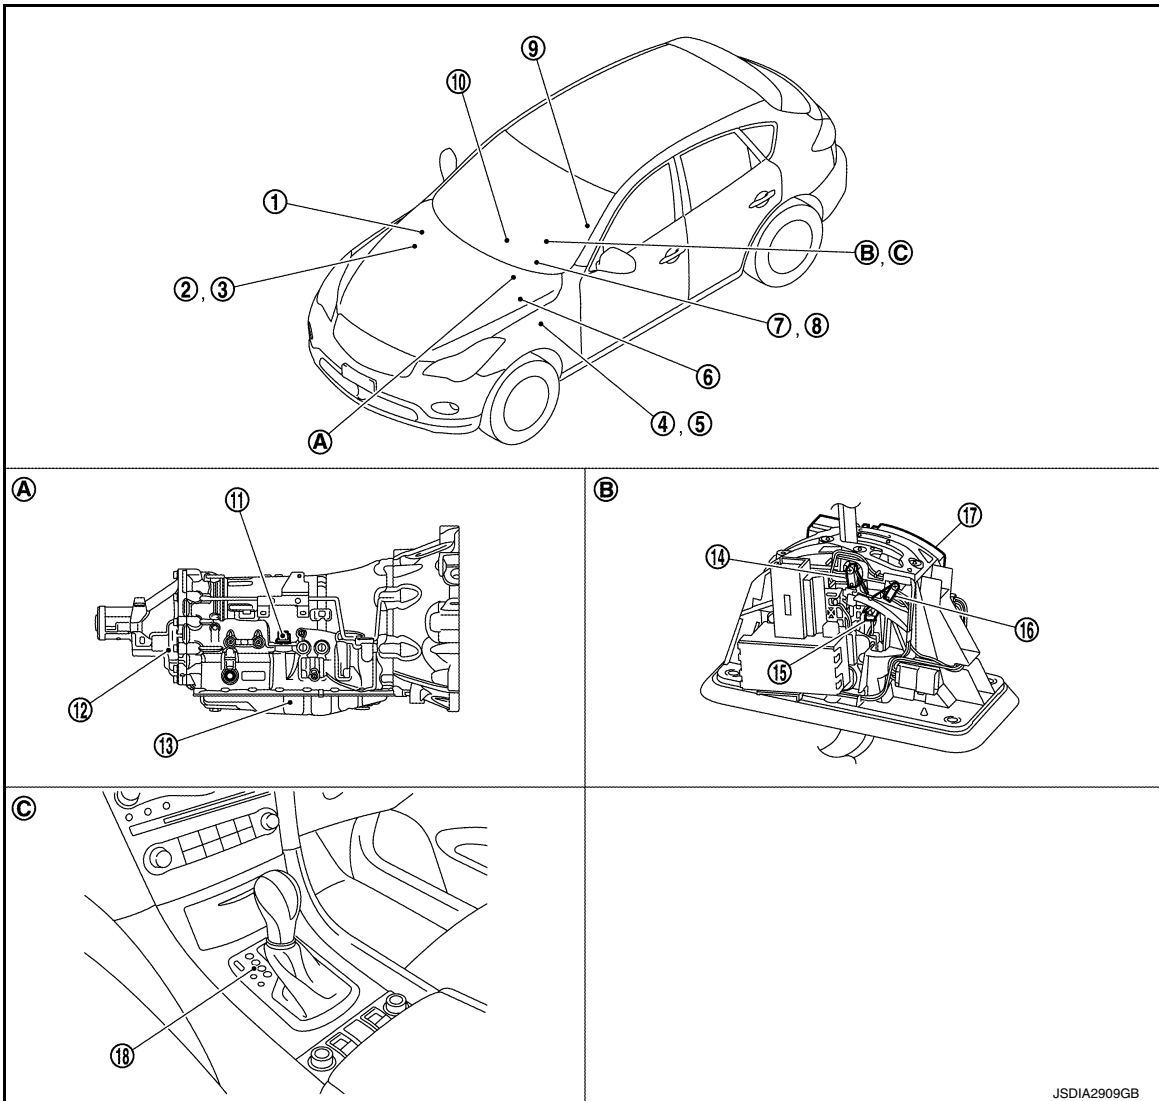

- | | | |
|--|---|---|
| 1. IPDM E/R
Refer to PCS-4, "Component Parts Location" . | 2. ECM
Refer to EC-39, "Component Parts Location" . | 3. BCM
Refer to BCS-9, "Component Parts Location" . |
| 4. Accelerator pedal position sensor
Refer to EC-39, "Component Parts Location" . | 5. Stop lamp switch
Refer to TM-60, "Component Parts Location" . | 6. ABS actuator and electric unit (control unit)
Refer to BRC-12, "Component Parts Location" . |

LINE PRESSURE CONTROL

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

- | | | |
|--|---|--|
| 7. A/T CHECK indicator lamp
(On the combination meter) | 8. Shift position indicator
(On the combination meter) | 9. Yaw rate/side G sensor
Refer to BRC-12, "Component Parts Location" . |
| 10. Unified meter and A/C amp.
Refer to MWI-10, "METER SYSTEM : Component Parts Location" . | 11. Joint connector | 12. Output speed sensor* ¹ |
| 13. Control valve & TCM* ² | 14. Manual mode position select switch
(shift-up) | 15. Manual mode select switch |
| 16. Manual mode position select switch
(shift-down) | 17. Shift position switch | 18. Selector lever position indicator |
| A. A/T assembly | B. A/T shift selector assembly | C. Center console |

*1: Output speed sensor is installed in A/T assembly.

*2: Control valve & TCM is installed in A/T assembly.

NOTE:

The following components are included in control valve & TCM.

- TCM
- Input speed sensor 1, 2
- A/T fluid temperature sensor
- Transmission range switch
- Direct clutch solenoid valve
- High and low reverse clutch solenoid valve
- Input clutch solenoid valve
- Front brake solenoid valve
- Low brake solenoid valve
- Anti-interlock solenoid valve
- 2346 brake solenoid valve
- Line pressure solenoid valve
- Torque converter clutch solenoid valve

Component Description

INFOID:000000012167466

Name	Function
TCM	The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.
Output speed sensor	TM-81, "Description"
Input speed sensor 1	TM-79, "Description"
Input speed sensor 2	
A/T fluid temperature sensor	TM-76, "Description"
Line pressure solenoid valve	TM-103, "Description"
Pressure regulator valve	Adjusts the oil discharged from the oil pump to the optimum pressure (line pressure) for the driving state.
ECM	EC-39, "System Description"


SHIFT CHANGE CONTROL

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

SHIFT CHANGE CONTROL

System Diagram

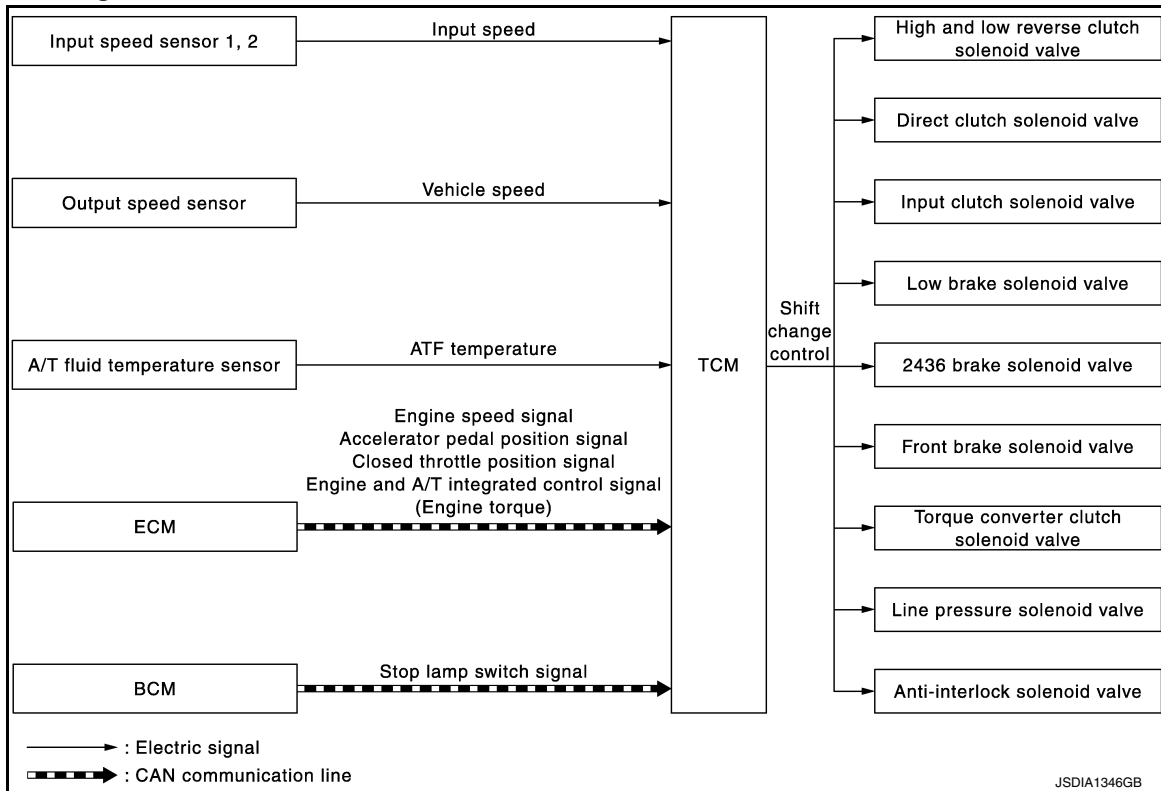

System Description

INFOID:000000012167468

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to TCM	TCM function	Actuator
Input speed sensor 1, 2	Input speed	Shift change control	<ul style="list-style-type: none"> High and low reverse clutch solenoid valve Direct clutch solenoid valve Input clutch solenoid valve Low brake solenoid valve 2436 brake solenoid valve Front brake solenoid valve Torque converter clutch solenoid valve Line pressure solenoid valve Anti-interlock solenoid valve
Output speed sensor	Vehicle speed		
A/T fluid temperature sensor	ATF temperature		
ECM	Engine speed signal*		
	Accelerator pedal position signal*		
	Closed throttle position signal*		
	Engine and A/T integrated control signal (Engine torque)*		
BCM	Stop lamp switch signal*		

*: This signal is transmitted by CAN communication line.

SYSTEM DESCRIPTION


The clutch pressure control solenoid is controlled by the signals from the switches and sensors. Thus, the clutch pressure is adjusted to be appropriate to the engine load state and vehicle driving state. It becomes

SHIFT CHANGE CONTROL

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]


possible to finely control the clutch hydraulic pressure with high precision and a smoother shift change characteristic is attained.

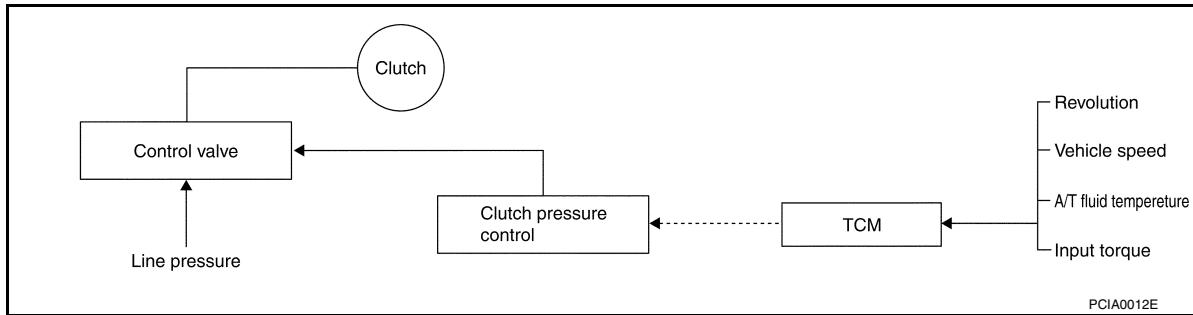

Shift Change

The clutch is controlled with the optimum timing and oil pressure by the engine speed, engine torque information, etc.

Shift Change System Diagram

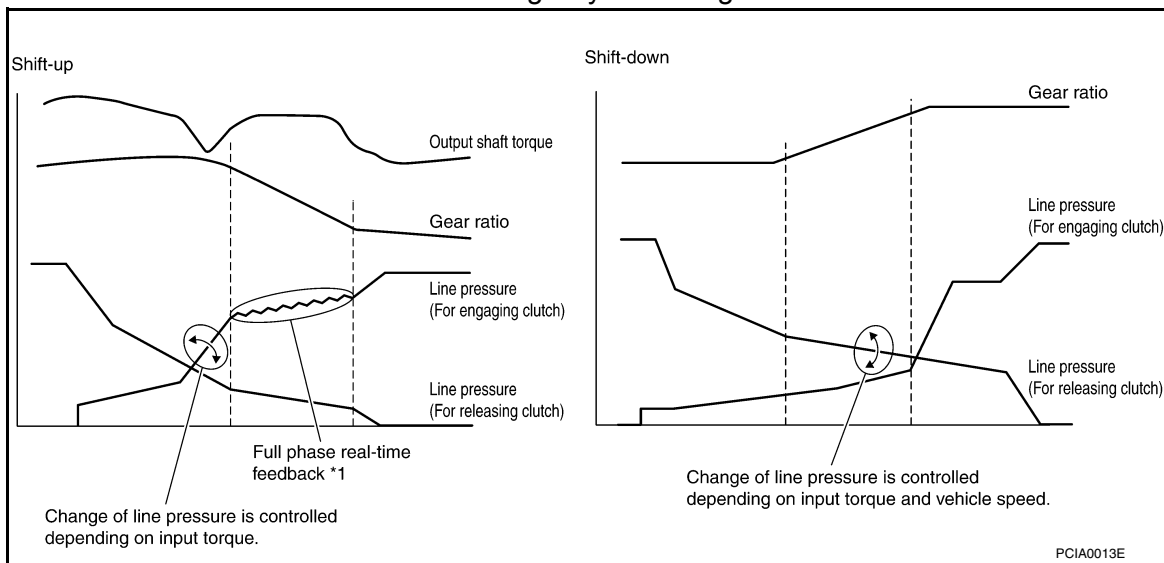


*1: Full phase real-time feedback control monitors movement of gear ratio at gear change, and controls oil pressure in real-time to achieve the best gear ratio.

Blipping Control

It controls (synchronizes) engine speed to have a quick shift clutch coupling, by calculating engine speed after downshifting and by cooperating with ASC (Adaptive Shift Control).

- “BLIPPING CONTROL” functions.
- When downshifting by accelerator pedal depression.
- When downshifting by the manual mode.
- It works on shift-down operation by ASC at high speed side when driving at D position or in DS mode.

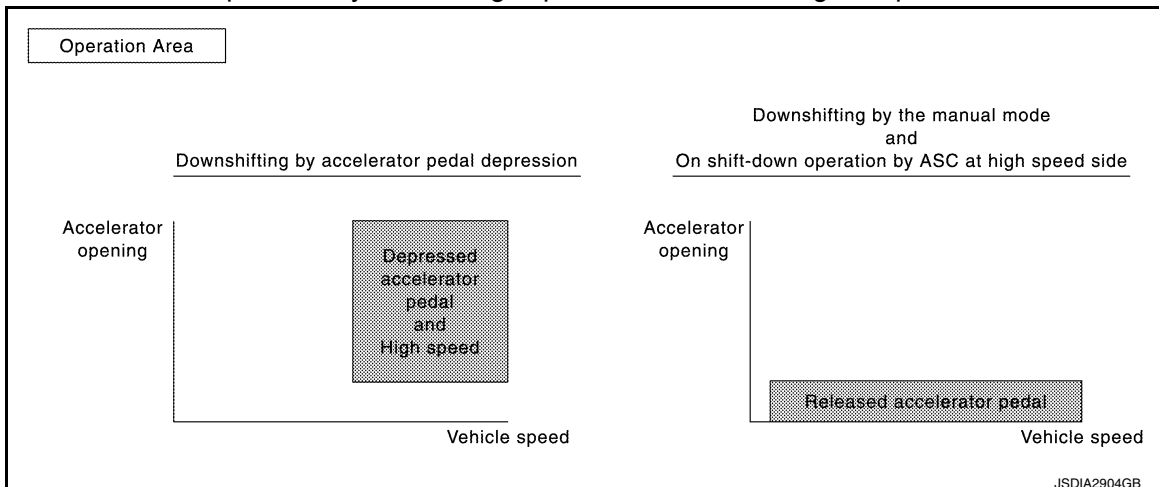


SHIFT CHANGE CONTROL

< SYSTEM DESCRIPTION >


[7AT: RE7R01A]

- TCM selects “BLIPPING CONTROL” or “NORMAL SHIFT CONTROL” according to the gear position, the selector lever position, the engine torque and the speed when accelerating by pedal depression.
- Engine speed control demand signal is transmitted from TCM to ECM under “BLIPPING CONTROL”.
- ECM synchronizes the engine speed according to the engine speed control demand signal.

Downshifting by accelerator pedal depression

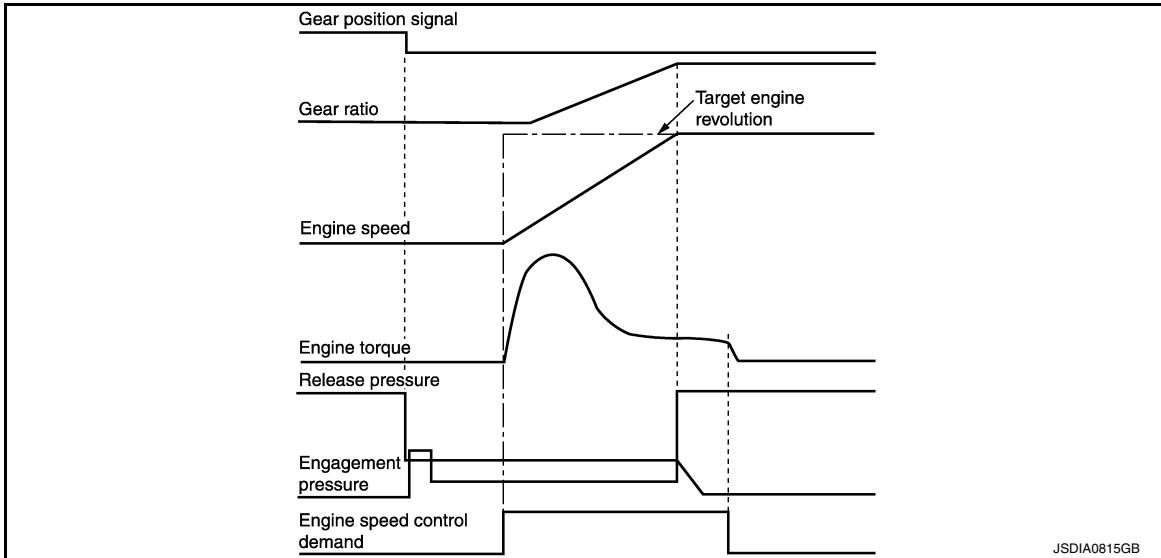

Downshifting by the manual mode and On shift-down operation by ASC at high speed side

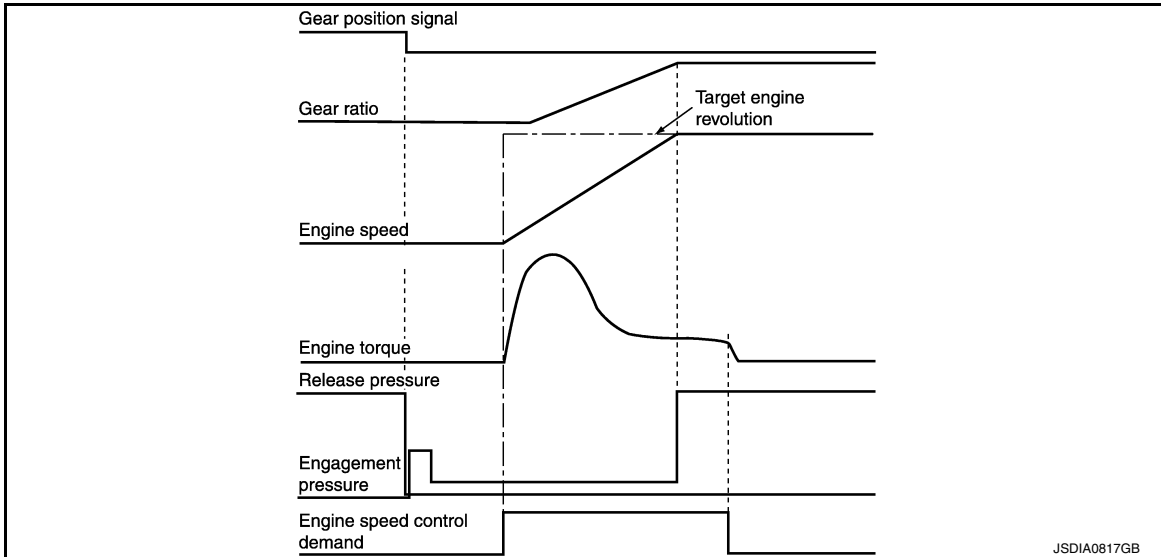

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P


SHIFT CHANGE CONTROL

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

Component Parts Location

INFOID:000000012167469

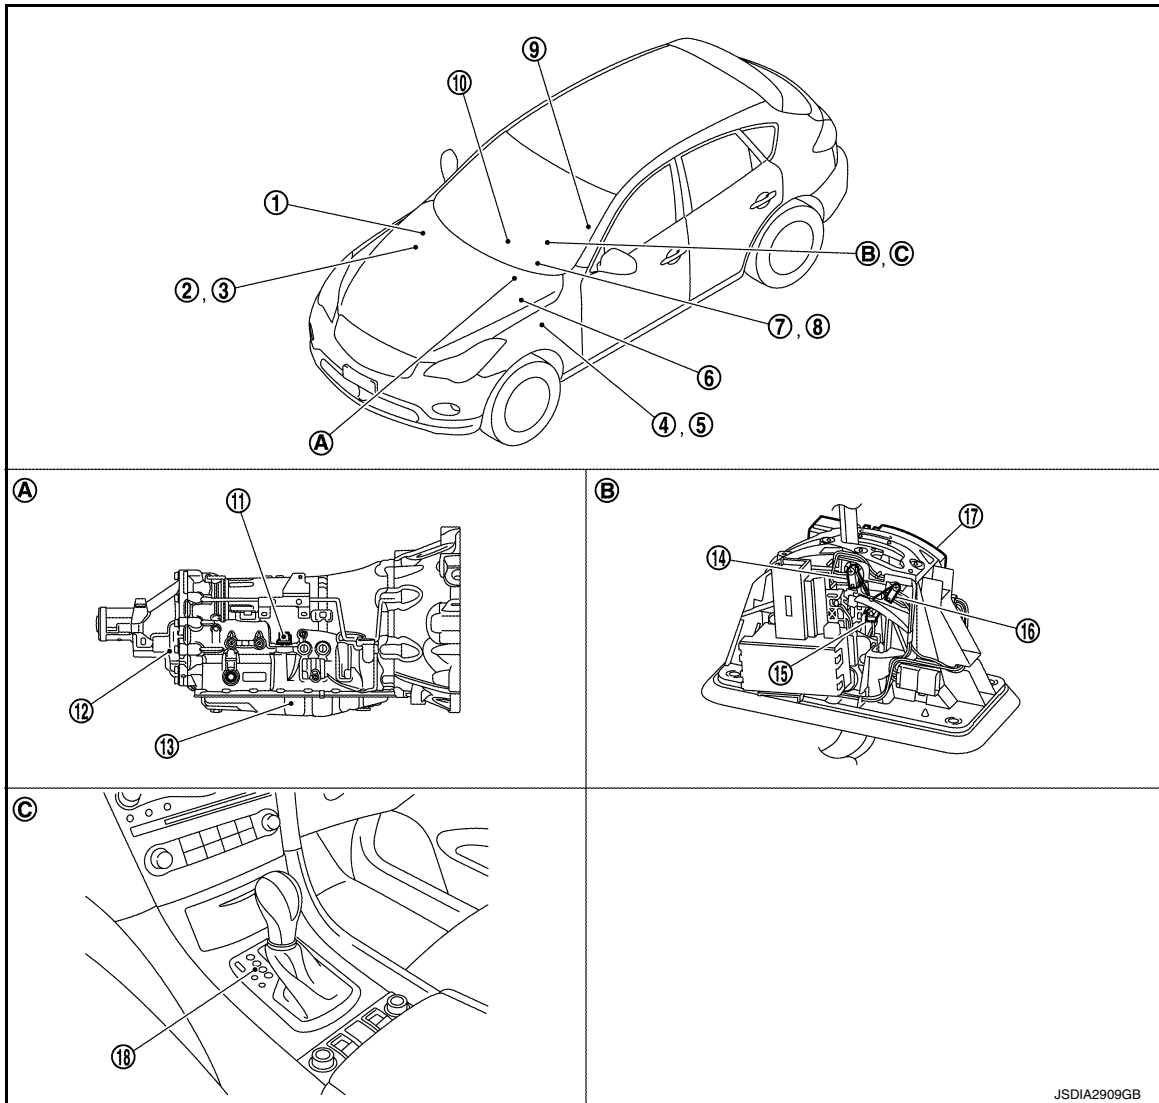

- | | | |
|--|---|---|
| 1. IPDM E/R
Refer to PCS-4, "Component Parts Location" . | 2. ECM
Refer to EC-39, "Component Parts Location" . | 3. BCM
Refer to BCS-9, "Component Parts Location" . |
| 4. Accelerator pedal position sensor
Refer to EC-39, "Component Parts Location" . | 5. Stop lamp switch
Refer to TM-60, "Component Parts Location" . | 6. ABS actuator and electric unit (control unit)
Refer to BRC-12, "Component Parts Location" . |
| 7. A/T CHECK indicator lamp
(On the combination meter) | 8. Shift position indicator
(On the combination meter) | 9. Yaw rate/side G sensor
Refer to BRC-12, "Component Parts Location" . |
| 10. Unified meter and A/C amp.
Refer to MWI-10, "METER SYSTEM : Component Parts Location" . | 11. Joint connector | 12. Output speed sensor* ¹ |
| 13. Control valve & TCM* ² | 14. Manual mode position select switch
(shift-up) | 15. Manual mode select switch |
| 16. Manual mode position select switch
(shift-down) | 17. Shift position switch | 18. Selector lever position indicator |
| A. A/T assembly | B. A/T shift selector assembly | C. Center console |

*1: Output speed sensor is installed in A/T assembly.

*2: Control valve & TCM is installed in A/T assembly.

SHIFT CHANGE CONTROL

[7AT: RE7R01A]

< SYSTEM DESCRIPTION >

NOTE:

The following components are included in control valve & TCM.

- TCM
- Input speed sensor 1, 2
- A/T fluid temperature sensor
- Transmission range switch
- Direct clutch solenoid valve
- High and low reverse clutch solenoid valve
- Input clutch solenoid valve
- Front brake solenoid valve
- Low brake solenoid valve
- Anti-interlock solenoid valve
- 2346 brake solenoid valve
- Line pressure solenoid valve
- Torque converter clutch solenoid valve

Component Description

INFOID:000000012167470

Name	Function
TCM	The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.
Output speed sensor	TM-81. "Description"
Input speed sensor 1	TM-79. "Description"
Input speed sensor 2	
A/T fluid temperature sensor	TM-76. "Description"
Input clutch solenoid valve	TM-105. "Description"
Front brake solenoid valve	TM-108. "Description"
Direct clutch solenoid valve	TM-123. "Description"
High and low reverse clutch solenoid valve	TM-120. "Description"
Low brake solenoid valve	TM-121. "Description"
Anti-interlock solenoid valve	TM-104. "Description"
2346 brake solenoid valve	TM-122. "Description"
Line pressure solenoid valve	TM-103. "Description"
Torque converter clutch solenoid valve	TM-99. "Description"
ECM	EC-39. "System Description"
BCM	BCS-8. "System Description"

SHIFT PATTERN CONTROL


[7AT: RE7R01A]

< SYSTEM DESCRIPTION >

SHIFT PATTERN CONTROL ASC (ADAPTIVE SHIFT CONTROL)

ASC (ADAPTIVE SHIFT CONTROL) : System Diagram

INFOID:000000012167471

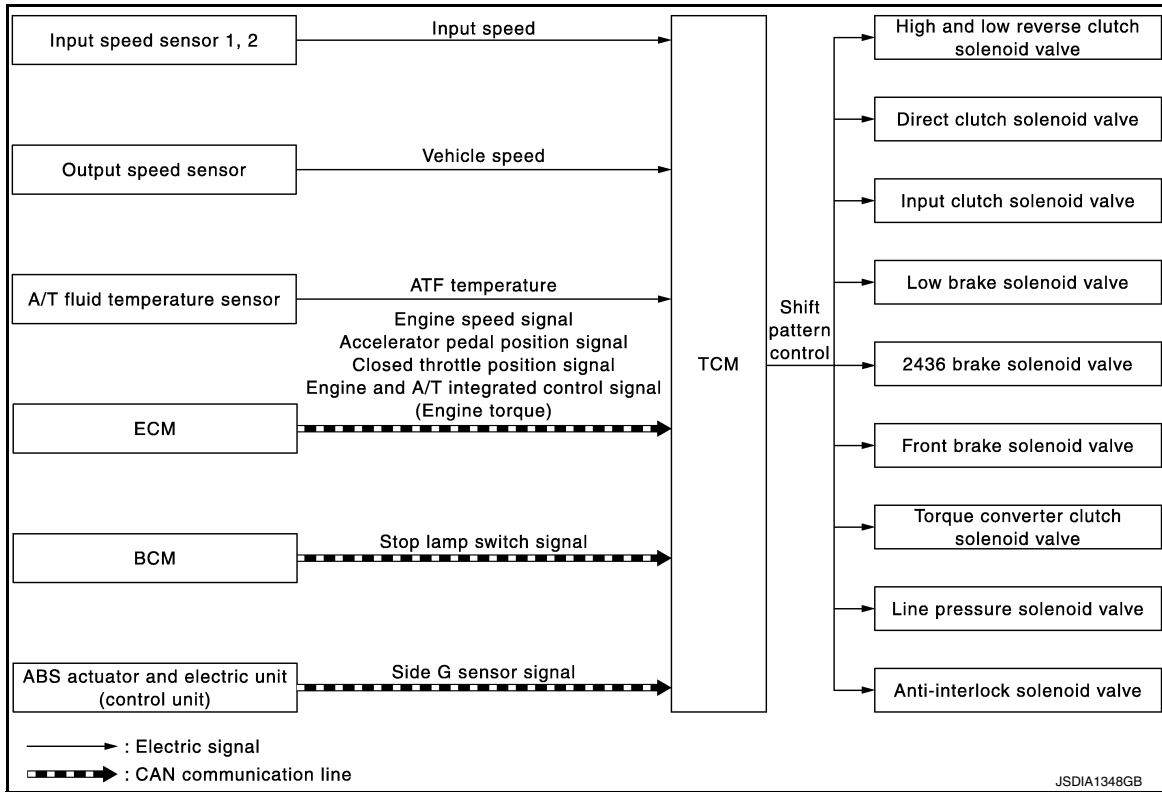

JSDIA1348GB

ASC (ADAPTIVE SHIFT CONTROL) : System Description

INFOID:000000012167472

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to TCM	TCM function	Actuator
Input speed sensor 1, 2	Input speed	Shift pattern control	<ul style="list-style-type: none"> High and low reverse clutch solenoid valve Direct clutch solenoid valve Input clutch solenoid valve Low brake solenoid valve 2346 brake solenoid valve Front brake solenoid valve Torque converter clutch solenoid valve Line pressure solenoid valve Anti-interlock solenoid valve
Output speed sensor	Vehicle speed		
A/T fluid temperature sensor	ATF temperature		
ECM	Engine speed signal*		
	Accelerator pedal position signal*		
	Closed throttle position signal*		
	Engine and A/T integrated control signal (engine torque)*		
ABS actuator and electric unit (control unit)	Side G sensor signal*		
BCM	Stop lamp switch signal*		

*: This signal is transmitted via CAN communication line.

SYSTEM DESCRIPTION

It automatically selects the shift pattern (such as road environment and driving style) suitable for the various situations so as to allow the vehicle to be driven efficiently and smoothly.

When Driving on an Up/Down Slope

- ASC judges up/down slope according to engine torque data transmitted from the ECM and vehicle speed. Fixing at 4GR, 5GR or 6GR on an up-slope prevents shift hunting and controls the vehicle to gain optimum

SHIFT PATTERN CONTROL


< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

driving force. On a down-slope, automatic shift-down to 4GR, 5GR or 6GR gear controls to gain optimum engine brake.

When Driving on a Curve

- In driving condition where acceleration, deceleration, or lateral acceleration continues, it corrects gear selection in order to keep a smooth vehicle speed during the curve and to give an adequate driving force at the curve end.
- When acceleration pedal is quickly released at curve entrance etc, it prevents an unnecessary shift-up.
- On braking operation at curve entrance, it gives an early shift-down according to the deceleration.
- In a sporty driving condition, it selects lower gear early even on a light braking operation, giving greater importance on driving force.
- TCM receives the side G sensor signal from the ABS actuator and electric unit (control unit). It locks to 4GR, 5GR or 6GR position in moderate cornering or to 3GR position in sharp cornering based on this signal. This prevents any upshift and kick down during cornering, maintaining smooth vehicle travel.

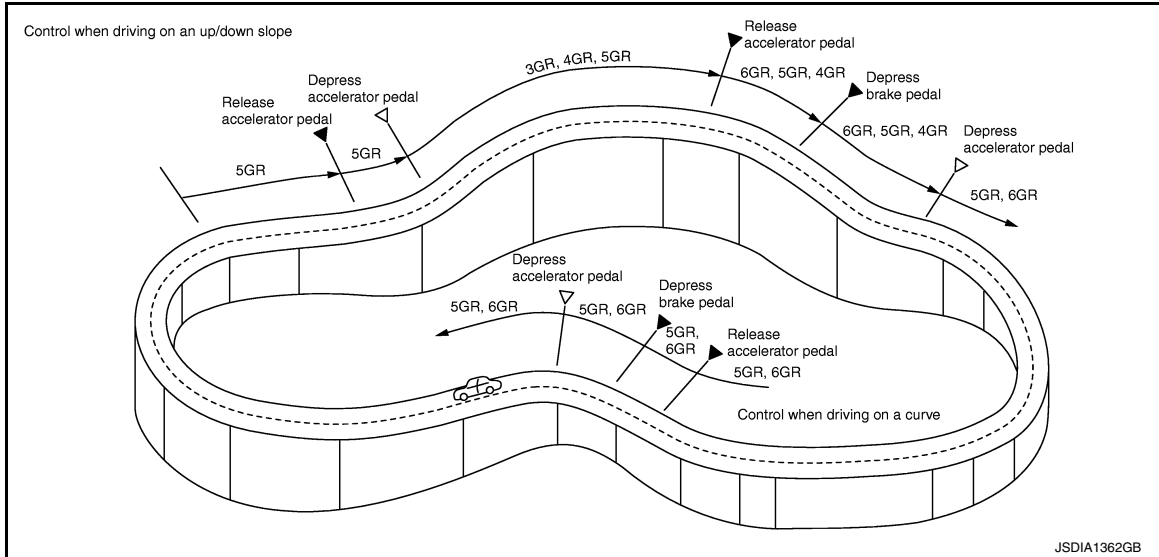

DS Mode

- Changes to the shift schedule that mainly utilizes the high engine speed zone when ASC is active.
- DS mode can be switched according to the following method.
- When the selector lever is in the "D" position, shifting the selector lever to manual shift gate enables switching to DS mode.
- When in DS mode, shifting the selector lever to the main shift gate enables to cancel DS mode.


SHIFT PATTERN CONTROL

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

ASC (ADAPTIVE SHIFT CONTROL) : Component Parts Location

INFOID:000000012167473

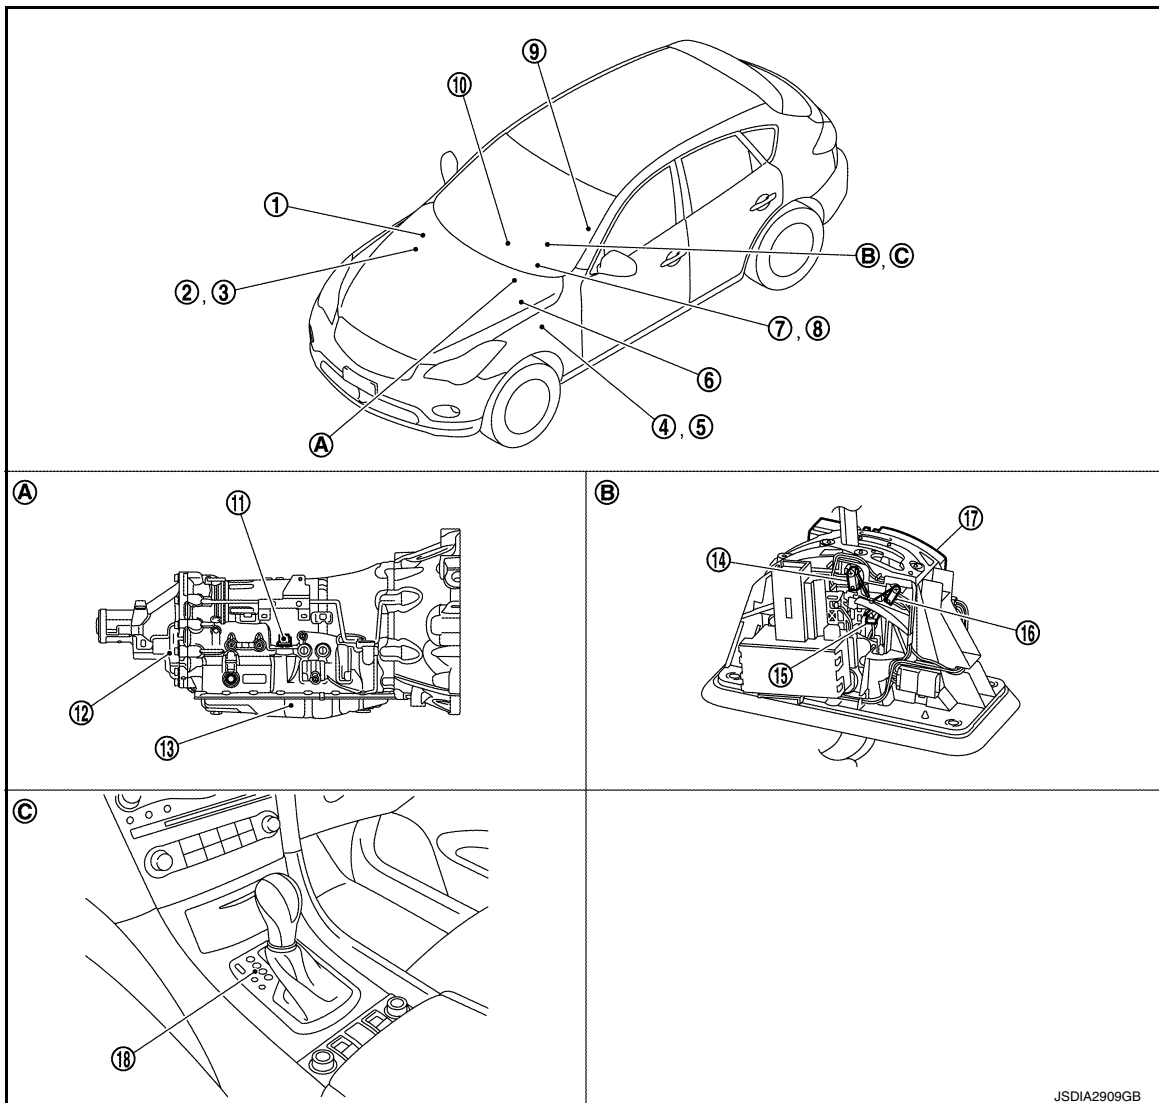

- | | | |
|--|---|---|
| 1. IPDM E/R
Refer to PCS-4, "Component Parts Location" . | 2. ECM
Refer to EC-39, "Component Parts Location" . | 3. BCM
Refer to BCS-9, "Component Parts Location" . |
| 4. Accelerator pedal position sensor
Refer to EC-39, "Component Parts Location" . | 5. Stop lamp switch
Refer to TM-60, "Component Parts Location" . | 6. ABS actuator and electric unit (control unit)
Refer to BRC-12, "Component Parts Location" . |
| 7. A/T CHECK indicator lamp
(On the combination meter) | 8. Shift position indicator
(On the combination meter) | 9. Yaw rate/side G sensor
Refer to BRC-12, "Component Parts Location" . |
| 10. Unified meter and A/C amp.
Refer to MWI-10, "METER SYSTEM : Component Parts Location" . | 11. Joint connector | 12. Output speed sensor* ¹ |
| 13. Control valve & TCM* ² | 14. Manual mode position select switch
(shift-up) | 15. Manual mode select switch |
| 16. Manual mode position select switch
(shift-down) | 17. Shift position switch | 18. Selector lever position indicator |
| A. A/T assembly | B. A/T shift selector assembly | C. Center console |

*1: Output speed sensor is installed in A/T assembly.

*2: Control valve & TCM is installed in A/T assembly.

SHIFT PATTERN CONTROL

[7AT: RE7R01A]

< SYSTEM DESCRIPTION >

NOTE:

The following components are included in control valve & TCM.

- TCM
- Input speed sensor 1, 2
- A/T fluid temperature sensor
- Transmission range switch
- Direct clutch solenoid valve
- High and low reverse clutch solenoid valve
- Input clutch solenoid valve
- Front brake solenoid valve
- Low brake solenoid valve
- Anti-interlock solenoid valve
- 2346 brake solenoid valve
- Line pressure solenoid valve
- Torque converter clutch solenoid valve

ASC (ADAPTIVE SHIFT CONTROL) : Component Description

INFOID:000000012167474

Name	Function
TCM	The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.
Output speed sensor	TM-81. "Description"
Input speed sensor 1	TM-79. "Description"
Input speed sensor 2	
A/T fluid temperature sensor	TM-76. "Description"
Input clutch solenoid valve	TM-105. "Description"
Front brake solenoid valve	TM-108. "Description"
Direct clutch solenoid valve	TM-123. "Description"
High and low reverse clutch solenoid valve	TM-120. "Description"
Low brake solenoid valve	TM-121. "Description"
Anti-interlock solenoid valve	TM-104. "Description"
2346 brake solenoid valve	TM-122. "Description"
Line pressure solenoid valve	TM-103. "Description"
Torque converter clutch solenoid valve	TM-99. "Description"
ECM	EC-39. "System Description"
BCM	BCS-8. "System Description"
ABS actuator and electric unit (control unit)	BRC-21. "System Description"

MANUAL MODE


SHIFT PATTERN CONTROL

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

MANUAL MODE : System Diagram

INFOID:000000012167475

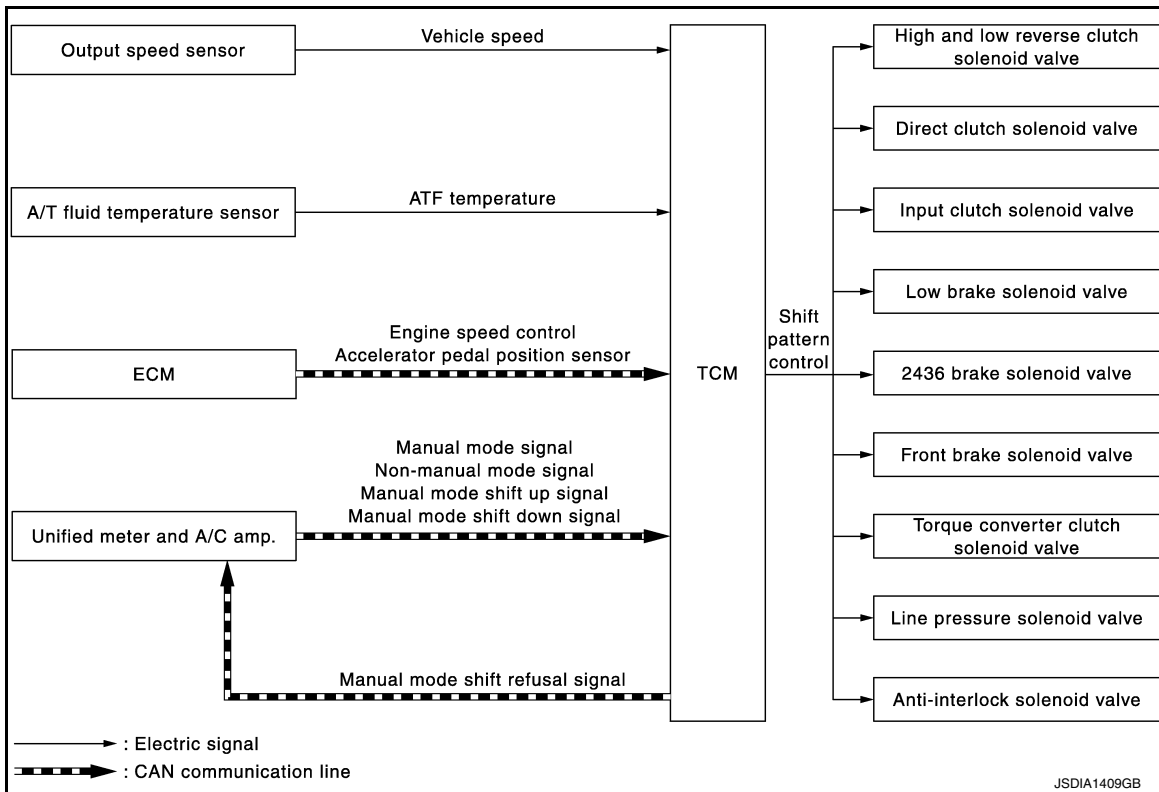

JSDIA1409GB

MANUAL MODE : System Description

INFOID:000000012167476

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to TCM	TCM function	Actuator
Output speed sensor	Vehicle speed	Shift pattern control	<ul style="list-style-type: none"> High and low reverse clutch solenoid valve Direct clutch solenoid valve Input clutch solenoid valve Low brake solenoid valve 2346 brake solenoid valve Front brake solenoid valve Torque converter clutch solenoid valve Line pressure solenoid valve Anti-interlock solenoid valve
A/T fluid temperature sensor	ATF temperature		
ECM	Engine speed signal*		
	Accelerator pedal position signal*		
Unified meter and A/C amp.	Manual mode signal*		
	Non-manual mode signal*		
	Manual mode shift up signal*		
	Manual mode shift down signal*		

*: This signal is transmitted via CAN communication line.

SYSTEM DESCRIPTION

- The TCM receives the manual mode signal, non-manual mode signal, manual mode shift up signal and manual mode shift down signal from unified meter and A/C amp. via CAN communication line. The TCM shifts shift pattern control to the manual mode based on these signals, and then shifts the A/T by operating each solenoid valve according to the shift operation of the driver.
- The TCM prohibits the manual mode while being in fail-safe mode due to an A/T malfunction. etc. Refer to [TM-152. "Fail-Safe"](#).
- The TCM transmits the manual mode shift refusal signal to the unified meter and A/C amp. if the TCM refuses the transmission from the driving status of vehicle when the selector lever shifts to UP or DOWN side. The unified meter and A/C amp. blinks shift indicator on the combination meter and sounds the buzzer to indicate the driver that the shifting is not performed when receiving this signal. However, the TCM does not transmit the manual mode shift refusal signal in the conditions as per the following.

SHIFT PATTERN CONTROL


[7AT: RE7R01A]

< SYSTEM DESCRIPTION >

- When the selector lever shifts to DOWN side while driving in 1GR.
- When the selector lever shifts to UP side while driving in 7GR.

MANUAL MODE : Component Parts Location

INFOID:000000012167477

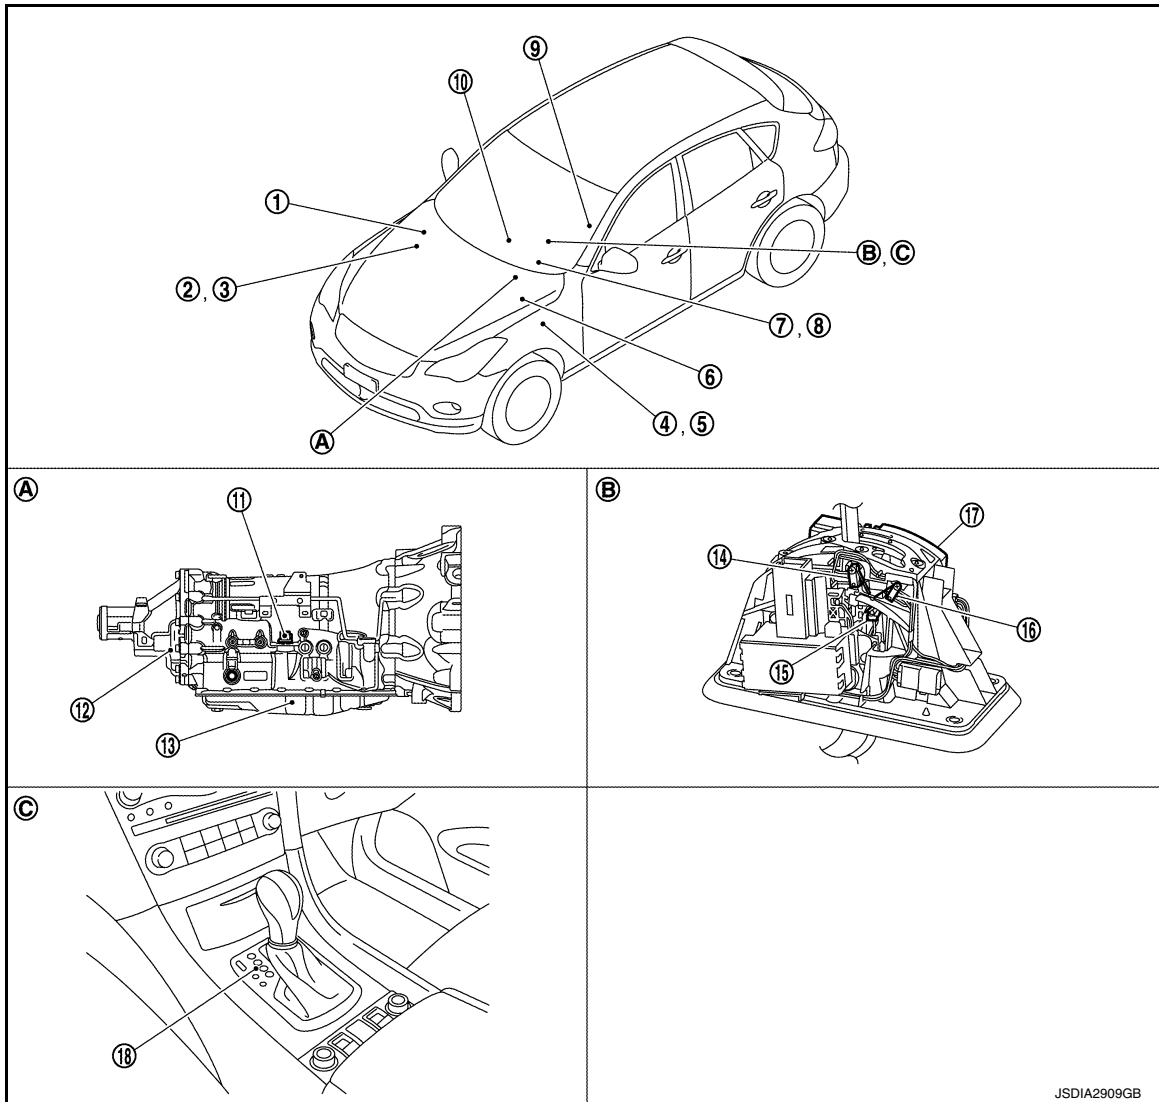

- | | | |
|--|---|---|
| 1. IPDM E/R
Refer to PCS-4, "Component Parts Location" . | 2. ECM
Refer to EC-39, "Component Parts Location" . | 3. BCM
Refer to BCS-9, "Component Parts Location" . |
| 4. Accelerator pedal position sensor
Refer to EC-39, "Component Parts Location" . | 5. Stop lamp switch
Refer to TM-60, "Component Parts Location" . | 6. ABS actuator and electric unit (control unit)
Refer to BRC-12, "Component Parts Location" . |
| 7. A/T CHECK indicator lamp
(On the combination meter) | 8. Shift position indicator
(On the combination meter) | 9. Yaw rate/side G sensor
Refer to BRC-12, "Component Parts Location" . |
| 10. Unified meter and A/C amp.
Refer to MWI-10, "METER SYSTEM : Component Parts Location" . | 11. Joint connector | 12. Output speed sensor*1 |
| 13. Control valve & TCM*2 | 14. Manual mode position select switch
(shift-up) | 15. Manual mode select switch |
| 16. Manual mode position select switch
(shift-down) | 17. Shift position switch | 18. Selector lever position indicator |
| A. A/T assembly | B. A/T shift selector assembly | C. Center console |

SHIFT PATTERN CONTROL

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

*1: Output speed sensor is installed in A/T assembly.

*2: Control valve & TCM is installed in A/T assembly.

NOTE:

The following components are included in control valve & TCM.

- TCM
- Input speed sensor 1, 2
- A/T fluid temperature sensor
- Transmission range switch
- Direct clutch solenoid valve
- High and low reverse clutch solenoid valve
- Input clutch solenoid valve
- Front brake solenoid valve
- Low brake solenoid valve
- Anti-interlock solenoid valve
- 2346 brake solenoid valve
- Line pressure solenoid valve
- Torque converter clutch solenoid valve

MANUAL MODE : Component Description

INFOID:000000012167478

Name	Function
TCM	The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.
Output speed sensor	TM-81. "Description"
A/T fluid temperature sensor	TM-76. "Description"
Input clutch solenoid valve	TM-105. "Description"
Front brake solenoid valve	TM-108. "Description"
Direct clutch solenoid valve	TM-123. "Description"
High and low reverse clutch solenoid valve	TM-120. "Description"
Low brake solenoid valve	TM-121. "Description"
Anti-interlock solenoid valve	TM-104. "Description"
2346 brake solenoid valve	TM-122. "Description"
Line pressure solenoid valve	TM-103. "Description"
Torque converter clutch solenoid valve	TM-99. "Description"
ECM	EC-39. "System Description"
Unified meter and A/C amp.	MWI-6. "METER SYSTEM : System Description"


LOCK-UP CONTROL

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

LOCK-UP CONTROL

System Diagram

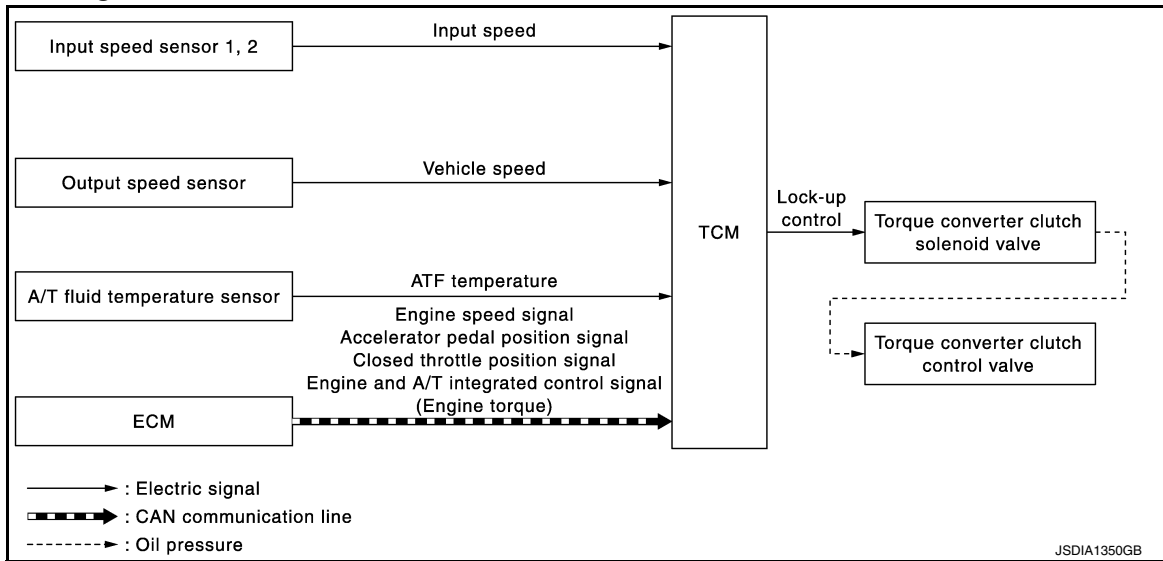

System Description

INFOID:000000012167480

INPUT/OUTPUT SIGNAL CHART

Sensor	Input signal to TCM	TCM function	Actuator
Input speed sensor 1, 2	Input speed	Lock-up control	Torque converter clutch solenoid valve ↓ Torque converter clutch control valve
Output speed sensor	Vehicle speed		
A/T fluid temperature sensor	ATF temperature		
ECM	Engine speed signal*		
	Accelerator pedal position signal*		
	Closed throttle position signal*		
	Engine and A/T integrated control signal (Engine torque)*		

*: This signal is transmitted by CAN communication line.

SYSTEM DESCRIPTION

The torque converter clutch piston in the torque converter is engaged to eliminate torque converter slip to increase power transmission efficiency.

The torque converter clutch control valve operation is controlled by the torque converter clutch solenoid valve, which is controlled by a signal from TCM, and the torque converter clutch control valve engages or releases the torque converter clutch piston.

Lock-up operation condition table


Selector lever	"D" position						"M" position					
	7	6	5	4	3	2	7	6	5	4	3	2
Lock-up	x	-	-	-	-	-	x	x	x	x	x	x
Slip lock-up	x	x	x	x	x	x	x	x	x	x	x	x

Torque Converter Clutch Control Valve Control Lock-up control system diagram

LOCK-UP CONTROL

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

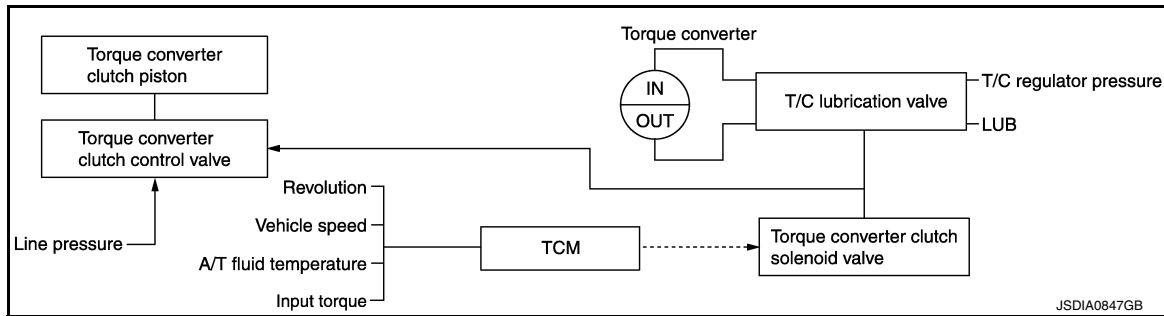

Lock-up released

- In the lock-up released state, the torque converter clutch control valve is set into the unlocked state by the torque converter clutch solenoid and the lock-up apply pressure is drained. In this way, the torque converter clutch piston is not coupled.

Lock-up Applied

- In the lock-up applied state, the torque converter clutch control valve is set into the locked state by the torque converter clutch solenoid and lock-up apply pressure is generated. In this way, the torque converter clutch piston is pressed and coupled.

Smooth Lock-up Control

When shifting from the lock-up released state to the lock-up applied state, the current output to the torque converter clutch solenoid is controlled with the TCM. In this way, when shifting to the lock-up applied state, the torque converter clutch is temporarily set to the half-clutched state to reduce the shock.

Half-clutched State

- The current output from the TCM to the torque converter clutch solenoid is varied to steadily increase the torque converter clutch solenoid pressure. In this way, the lock-up apply pressure gradually rises and while the torque converter clutch piston is put into half-clutched states, the torque converter clutch piston operating pressure is increased and the coupling is completed smoothly.

Slip Lock-up Control

- In the slip region, the torque converter clutch solenoid current is controlled with the TCM to put it into the half-clutched state. This absorbs the engine torque fluctuation and lock-up operates from low speed. This raises the fuel efficiency for 2nd, 3rd, 4th, 5th, 6th and 7th gears.


LOCK-UP CONTROL

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

Component Parts Location

INFOID:000000012167481

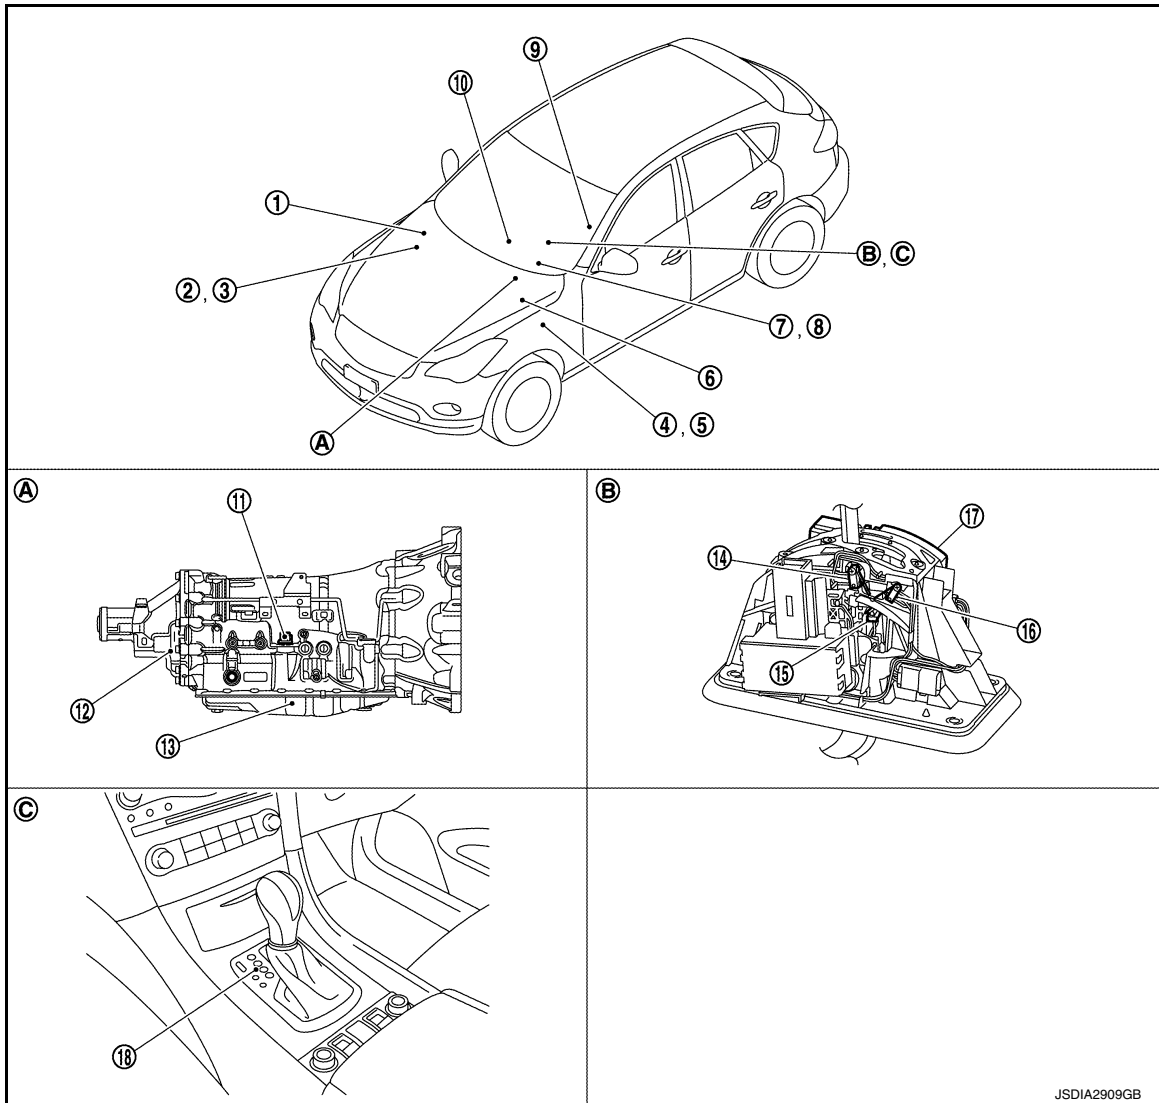

- | | | |
|--|---|---|
| 1. IPDM E/R
Refer to PCS-4. "Component Parts Location" . | 2. ECM
Refer to EC-39. "Component Parts Location" . | 3. BCM
Refer to BCS-9. "Component Parts Location" . |
| 4. Accelerator pedal position sensor
Refer to EC-39. "Component Parts Location" . | 5. Stop lamp switch
Refer to TM-60. "Component Parts Location" . | 6. ABS actuator and electric unit (control unit)
Refer to BRC-12. "Component Parts Location" . |
| 7. A/T CHECK indicator lamp
(On the combination meter) | 8. Shift position indicator
(On the combination meter) | 9. Yaw rate/side G sensor
Refer to BRC-12. "Component Parts Location" . |
| 10. Unified meter and A/C amp.
Refer to MWI-10. "METER SYSTEM : Component Parts Location" . | 11. Joint connector | 12. Output speed sensor*1 |
| 13. Control valve & TCM*2 | 14. Manual mode position select switch
(shift-up) | 15. Manual mode select switch |
| 16. Manual mode position select switch
(shift-down) | 17. Shift position switch | 18. Selector lever position indicator |
| A. A/T assembly | B. A/T shift selector assembly | C. Center console |

*1: Output speed sensor is installed in A/T assembly.

*2: Control valve & TCM is installed in A/T assembly.

LOCK-UP CONTROL

[7AT: RE7R01A]

< SYSTEM DESCRIPTION >

NOTE:

The following components are included in control valve & TCM.

- TCM
- Input speed sensor 1, 2
- A/T fluid temperature sensor
- Transmission range switch
- Direct clutch solenoid valve
- High and low reverse clutch solenoid valve
- Input clutch solenoid valve
- Front brake solenoid valve
- Low brake solenoid valve
- Anti-interlock solenoid valve
- 2346 brake solenoid valve
- Line pressure solenoid valve
- Torque converter clutch solenoid valve

Component Description

INFOID:000000012167482

Name	Function
TCM	The TCM consists of a microcomputer and connectors for signal input and output and for power supply. The TCM controls the A/T.
Output speed sensor	TM-81. "Description"
Input speed sensor 1	TM-79. "Description"
Input speed sensor 2	
A/T fluid temperature sensor	TM-76. "Description"
Torque converter clutch solenoid valve	TM-99. "Description"
Torque converter clutch control valve	Switches the lock-up to operating or released. Also, by performing the lock-up operation transiently, lock-up smoothly.
ECM	EC-39. "System Description"

SHIFT MECHANISM

< SYSTEM DESCRIPTION >


[7AT: RE7R01A]

SHIFT MECHANISM

Cross-Sectional View

INFOID:000000012167483

2WD MODELS

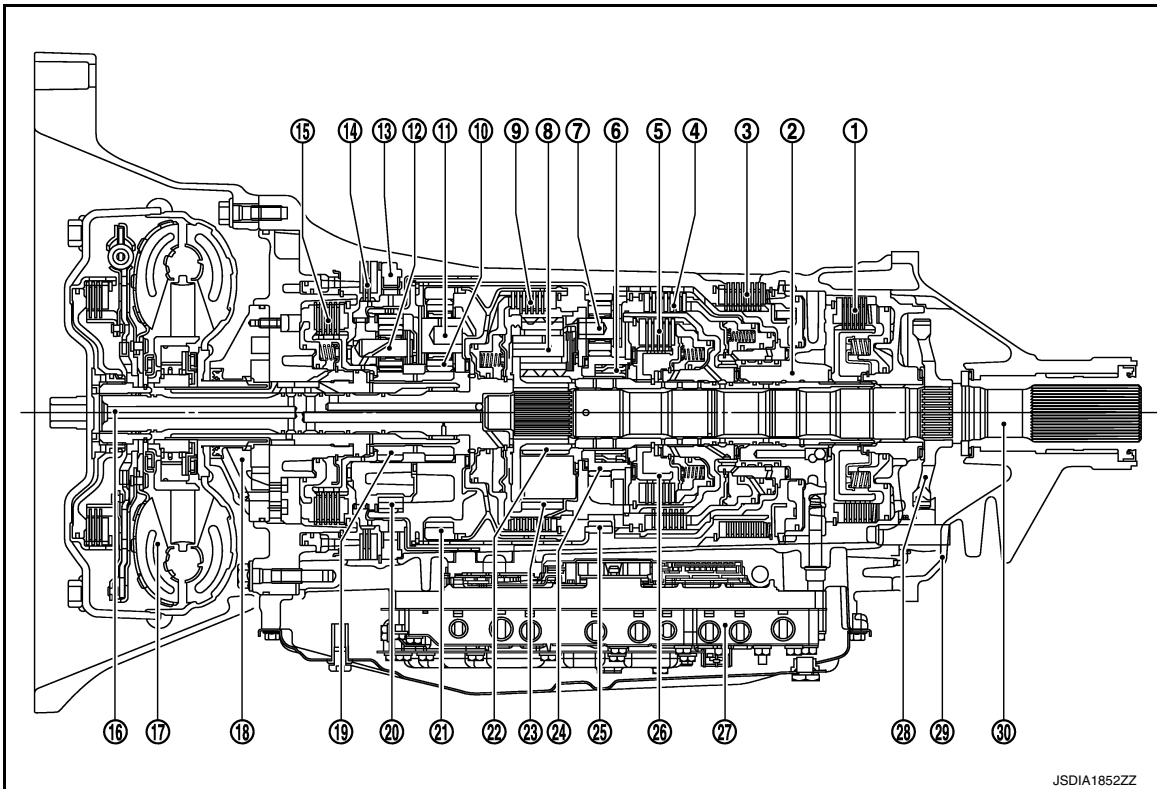

- | | | |
|----------------------------|-------------------------------------|---------------------------|
| 1. Low brake | 2. Drum support | 3. Reverse brake |
| 4. Direct clutch | 5. High and low reverse clutch | 6. 2nd one-way clutch |
| 7.*1 Rear carrier | 8. Mid carrier | 9. Input clutch |
| 10.*2 Front sun gear | 11.*3 Front carrier | 12. Under drive carrier |
| 13. 1st one-way clutch | 14. Front brake | 15. 2346 brake |
| 16.*4 Input shaft | 17. Torque converter | 18. Oil pump |
| 19.*2 Under drive sun gear | 20.*3 Under drive internal gear | 21.*4 Front internal gear |
| 22. Mid sun gear | 23.*1 Mid internal gear | 24. Rear sun gear |
| 25. Rear internal gear | 26. High and low reverse clutch hub | 27. Control valve & TCM |
| 28. Parking gear | 29. Rear extension | 30. Output shaft |

*1: 7 and 23 are one unit.

*2: 10 and 19 are one unit.

*3: 11 and 20 are one unit.


*4: 16 and 21 are one unit.

AWD MODELS

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

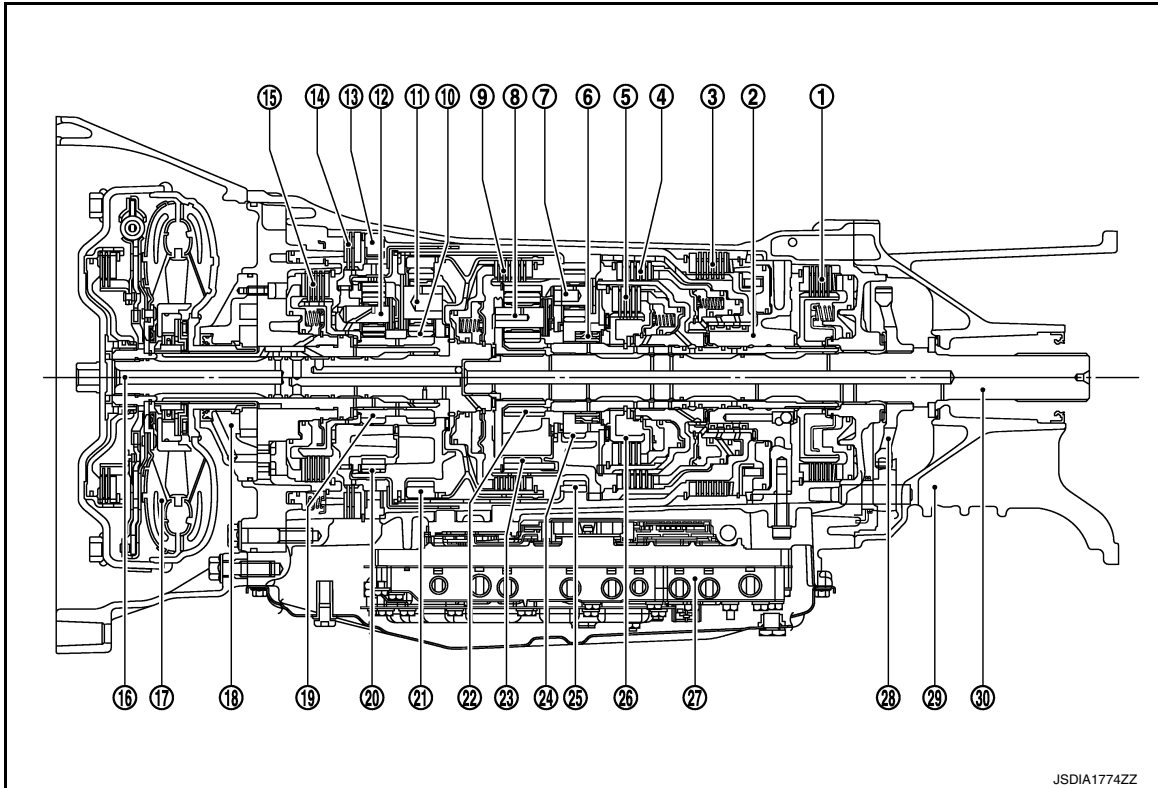

- | | | |
|----------------------------|-------------------------------------|---------------------------|
| 1. Low brake | 2. Drum support | 3. Reverse brake |
| 4. Direct clutch | 5. High and low reverse clutch | 6. 2nd one-way clutch |
| 7.*1 Rear carrier | 8. Mid carrier | 9. Input clutch |
| 10.*2 Front sun gear | 11.*3 Front carrier | 12. Under drive carrier |
| 13. 1st one-way clutch | 14. Front brake | 15. 2346 brake |
| 16.*4 Input shaft | 17. Torque converter | 18. Oil pump |
| 19.*2 Under drive sun gear | 20.*3 Under drive internal gear | 21.*4 Front internal gear |
| 22. Mid sun gear | 23.*1 Mid internal gear | 24. Rear sun gear |
| 25. Rear internal gear | 26. High and low reverse clutch hub | 27. Control valve & TCM |
| 28. Parking gear | 29. Adapter case | 30. Output shaft |

*1: 7 and 23 are one unit.

*2: 10 and 19 are one unit.

*3: 11 and 20 are one unit.

*4: 16 and 21 are one unit.


SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

System Diagram

INFOID:000000012167484

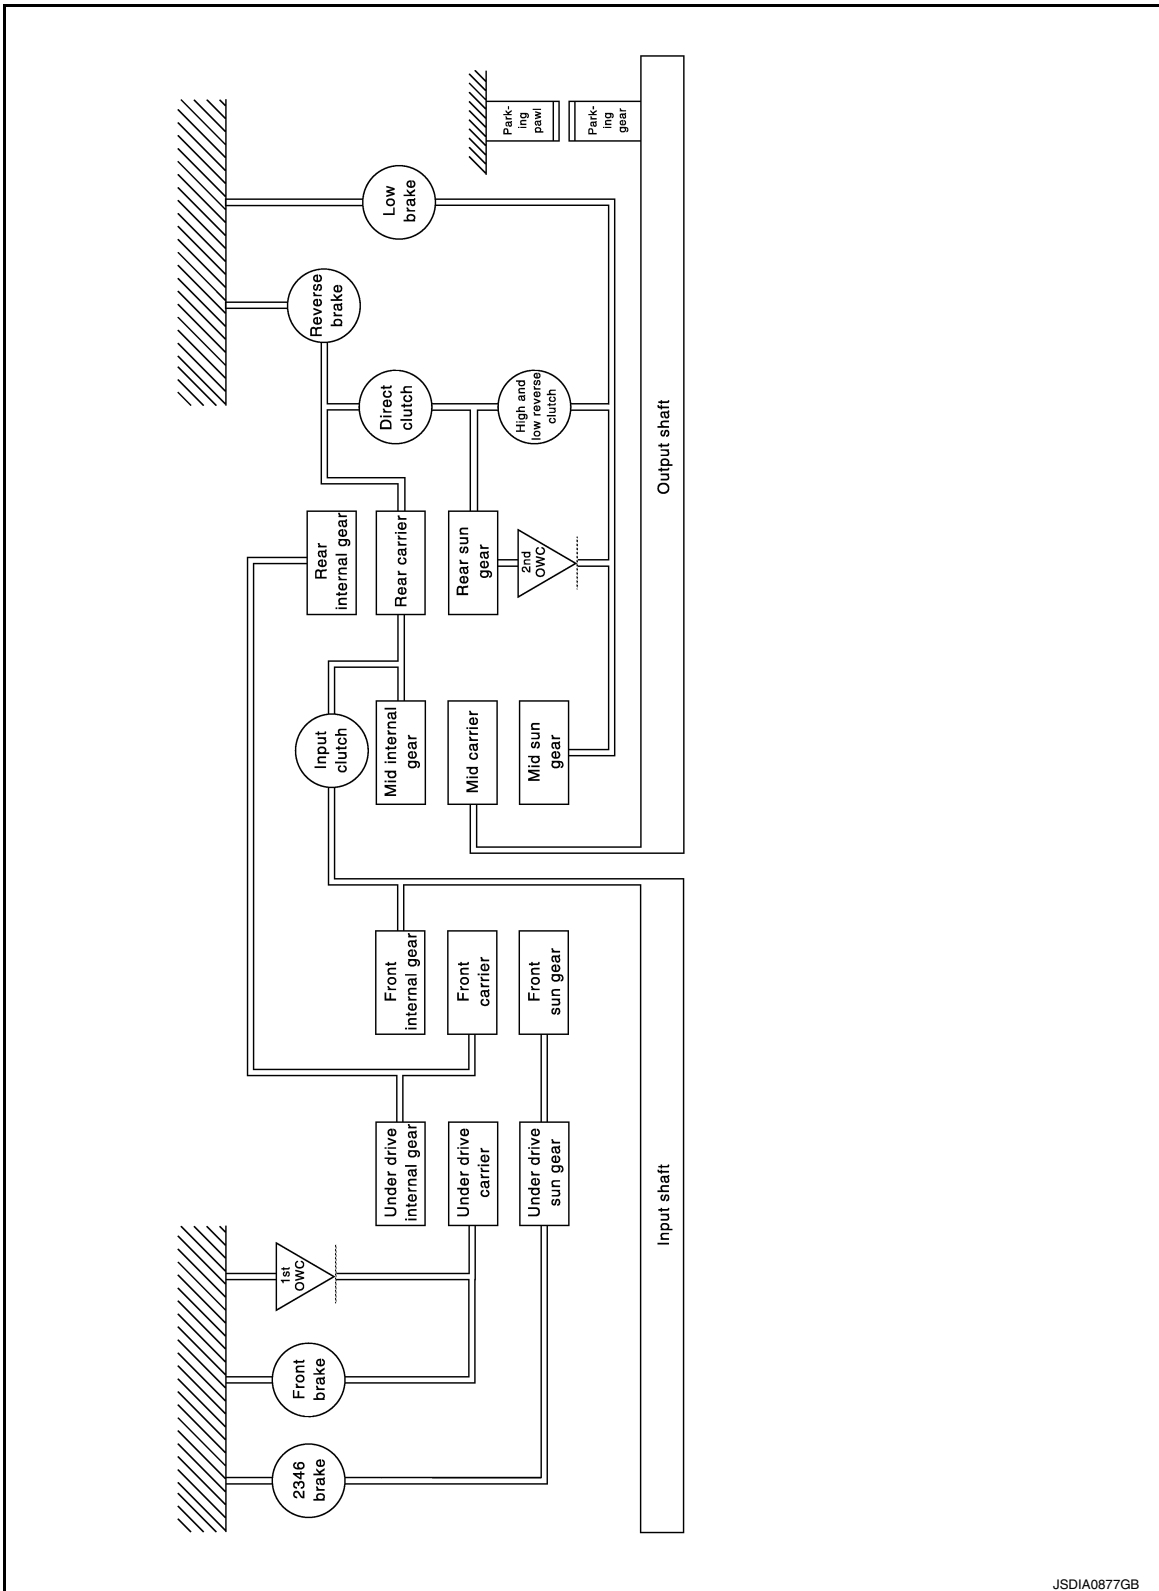

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

System Description

INFOID:000000012167485

DESCRIPTION

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

With the use of 4 sets of planetary gears, A/T enables 7-speed transmission for forward and 1-speed transmission for backward, depending on the combination of 3 sets of multiple-disc clutches, 4 sets of multiple-disc brakes and 2 sets of one-way clutches.

CLUTCH AND BRAKE CHART

Shift position	Name of the part	I/C	D/C		H&LR/C	F/B	L/B		2346/B	REV/B	1st OWC	2nd OWC	Remarks
			FRONT	REAR			INNER	OUTER					
P					△	△							Park position
R					◇	◇				○	◎	◎	Reverse position
N					△	△							Neutral position
D, DS	1st				☆	☆	○	○			◎	◎	Automatic shift 1⇄2⇄3⇄4⇄5⇄6⇄7
	2nd						○	○	○			◎	
	3rd		○	○			○		○				
	4th		○	○	○				○				
	5th	○		○	○								
	6th	○			○				○				
	7th	○			○	○							
7M	7th	○			○	○							Locks* (held stationary) in 7GR
6M	6th	○			○			○					Locks* (held stationary) in 6GR
5M	5th	○		○	○								Locks* (held stationary) in 5GR
4M	4th		○	○	○				○				Locks* (held stationary) in 4GR
3M	3rd		○	○			○		○				Locks* (held stationary) in 3GR
2M	2nd				◇		○	○	○			◎	Locks* (held stationary) in 2GR
1M	1st				◇	◇	○	○			◎	◎	Locks (held stationary) in 1GR

- – Operates
- ◎ – Operates during "progressive" acceleration.
- ◇ – Operates and affects power transmission while coasting.
- △ – Line pressure is applied but does not affect power transmission.
- ☆ – Operates at the fixed speed or less.

*: Down shift automatically according to the vehicle speed.

JSDIA1458GB


POWER TRANSMISSION

"N" Position

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

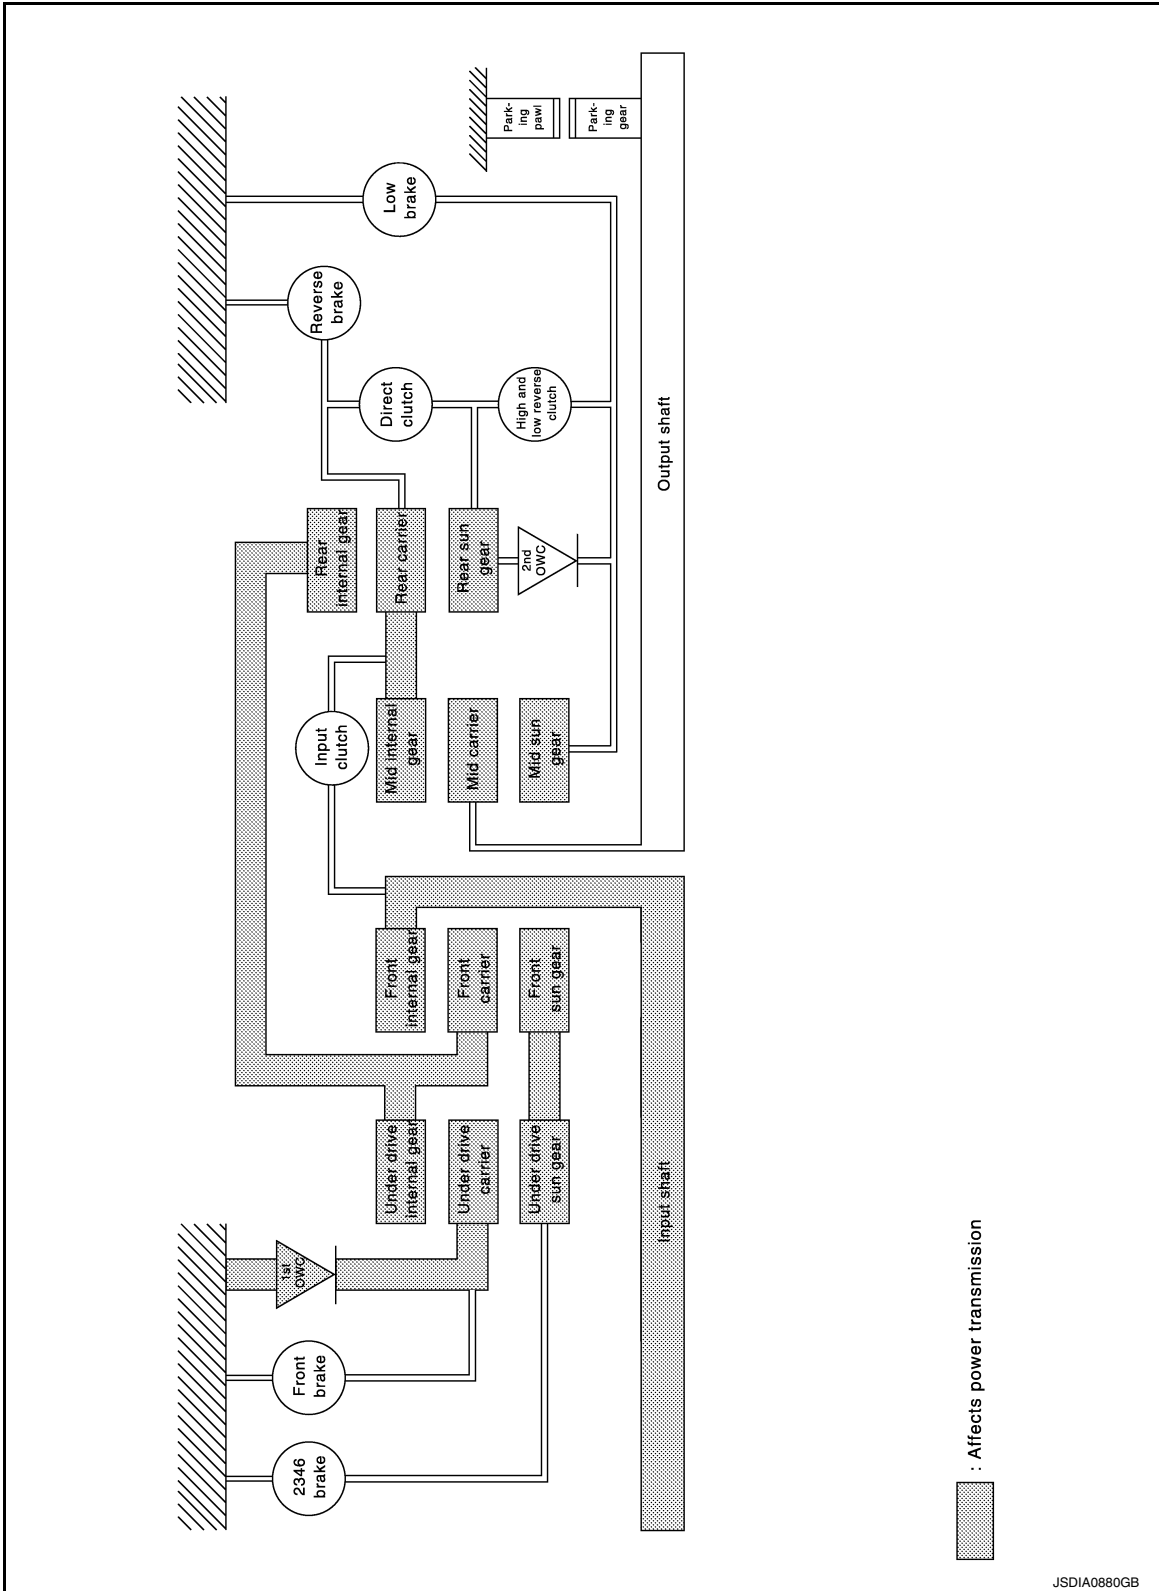

Since the low brake is released, torque from the input shaft drive is not transmitted to the output shaft.


“P” Position

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

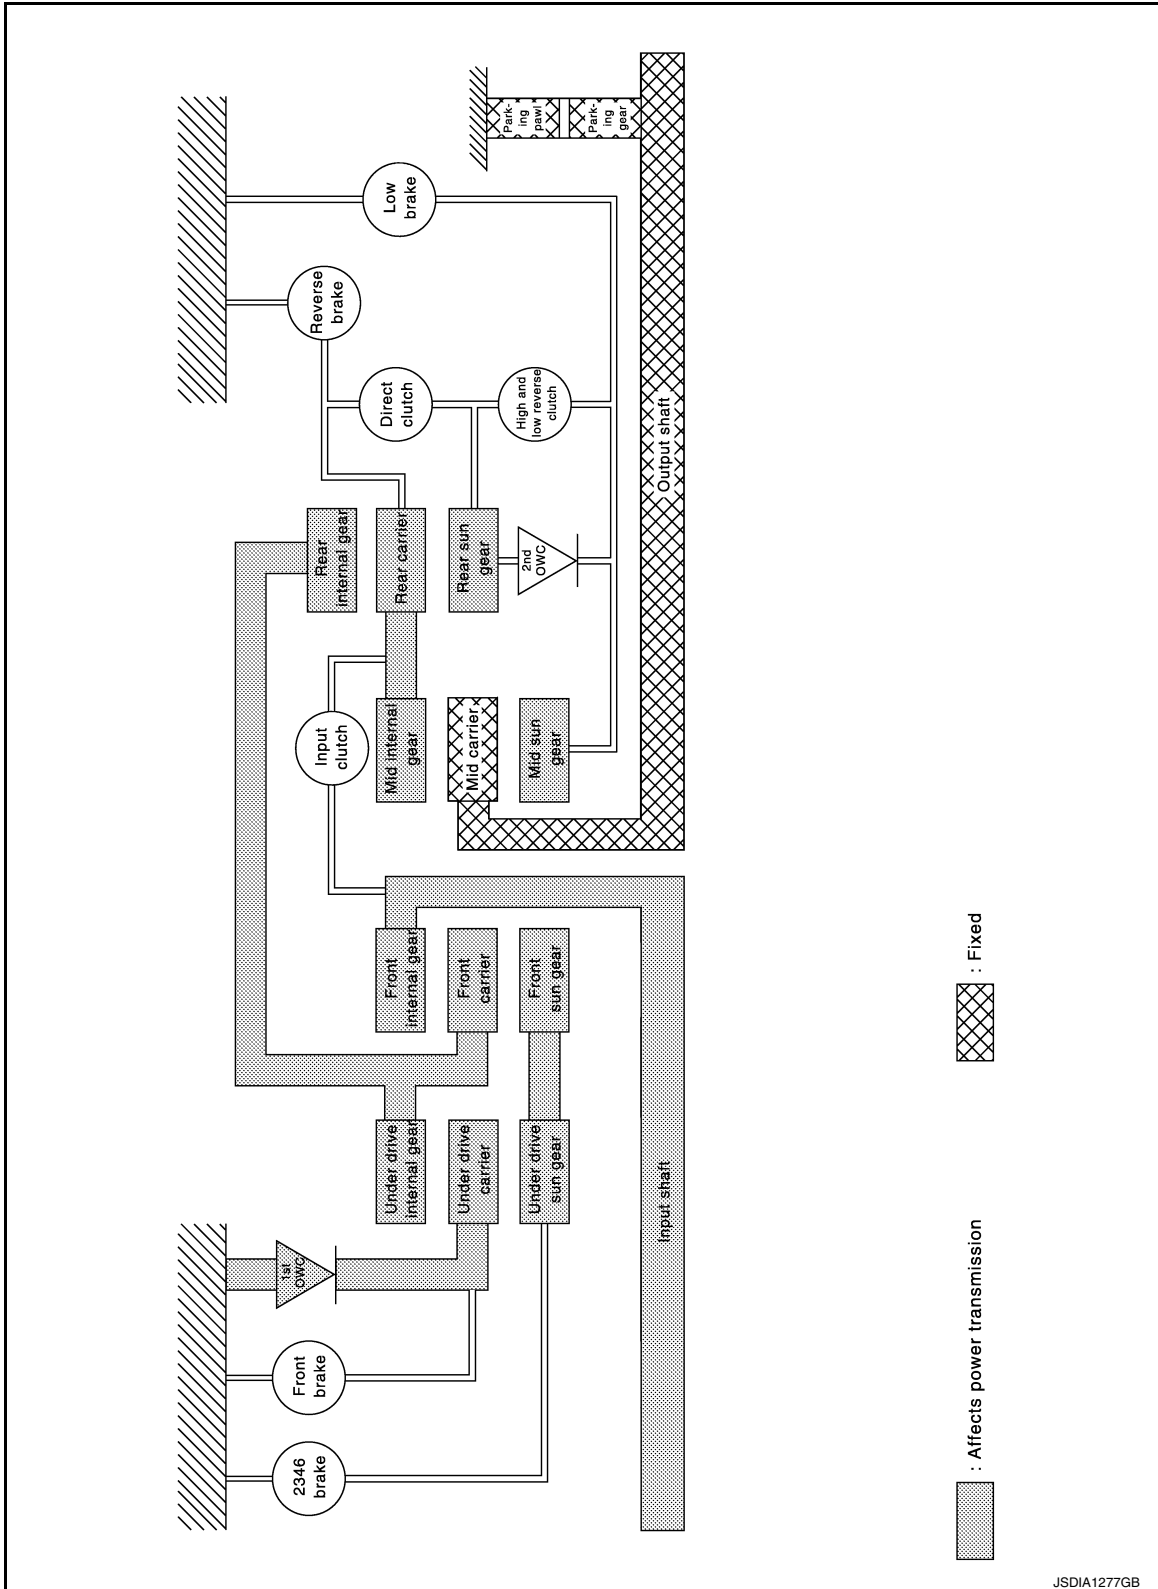


- The same as for the “N” position, since the low brake is released, so torque from the input shaft drive is not transmitted to the output shaft.
- The parking pawl linked with the selector lever meshes with the parking gear and fastens the output shaft mechanically.

“D1” and “DS1” Positions

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

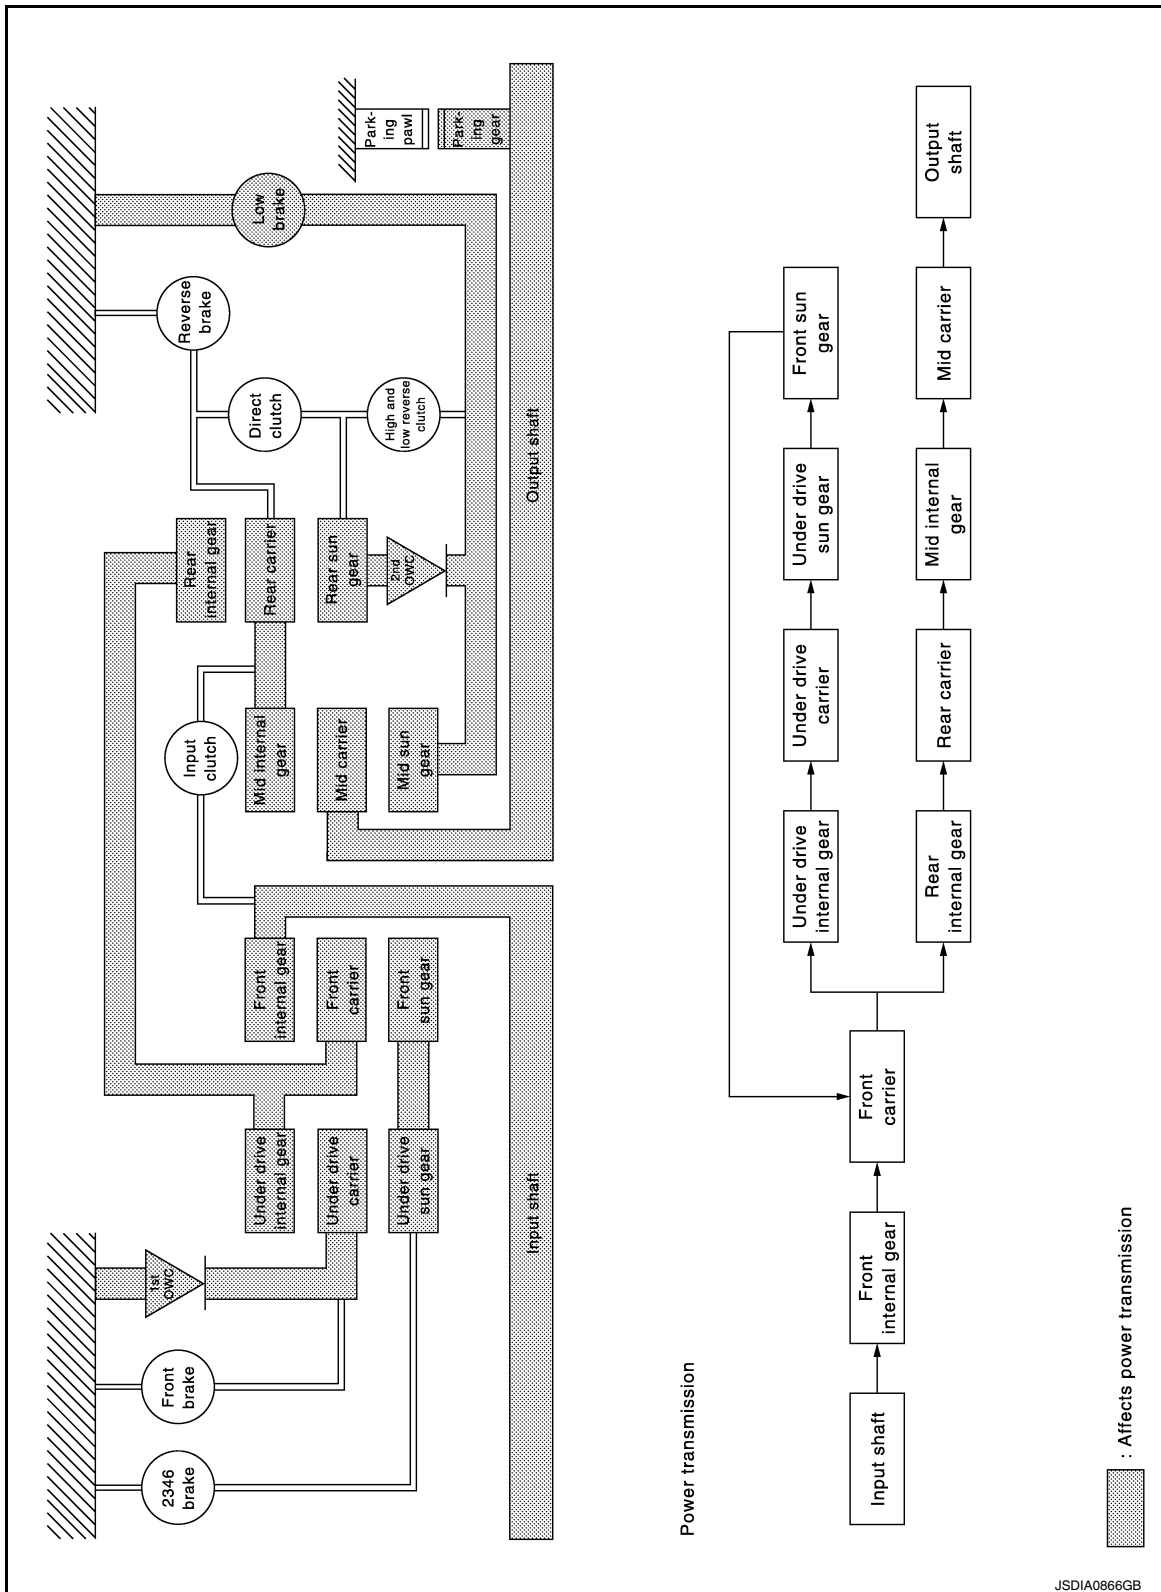

- The 1st one-way clutch regulates counterclockwise rotation of the under drive carrier.
- The 2nd one-way clutch regulates counterclockwise rotation of the rear sun gear.
- The mid sun gear is fixed by the low brake.
- Each planetary gear enters the state described below.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]


Front planetary gear			
Name	Front sun gear	Front carrier	Front internal gear
Condition	—	Output	Input
Direction of rotation	Counterclockwise revolution	Clockwise revolution	Clockwise revolution
Number of revolutions	Deceleration from front internal gear	Deceleration from front internal gear	Same number of revolution as the input shaft
Under drive planetary gear			
Name	Under drive sun gear	Under drive carrier	Under drive internal gear
Condition	—	Fixed	Input/Output
Direction of rotation	Counterclockwise revolution	—	Clockwise revolution
Number of revolutions	Acceleration from under drive internal gear	—	Same number of revolution as the front carrier
Rear planetary gear			
Name	Rear sun gear	Rear carrier	Rear internal gear
Condition	Fixed	Output	Input
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from rear internal gear	Same number of revolution as the under drive internal gear
Mid planetary gear			
Name	Mid sun gear	Mid carrier	Mid internal gear
Condition	Fixed	Output	Input
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from mid internal gear	Same number of revolution as the rear carrier

“M1” Position

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

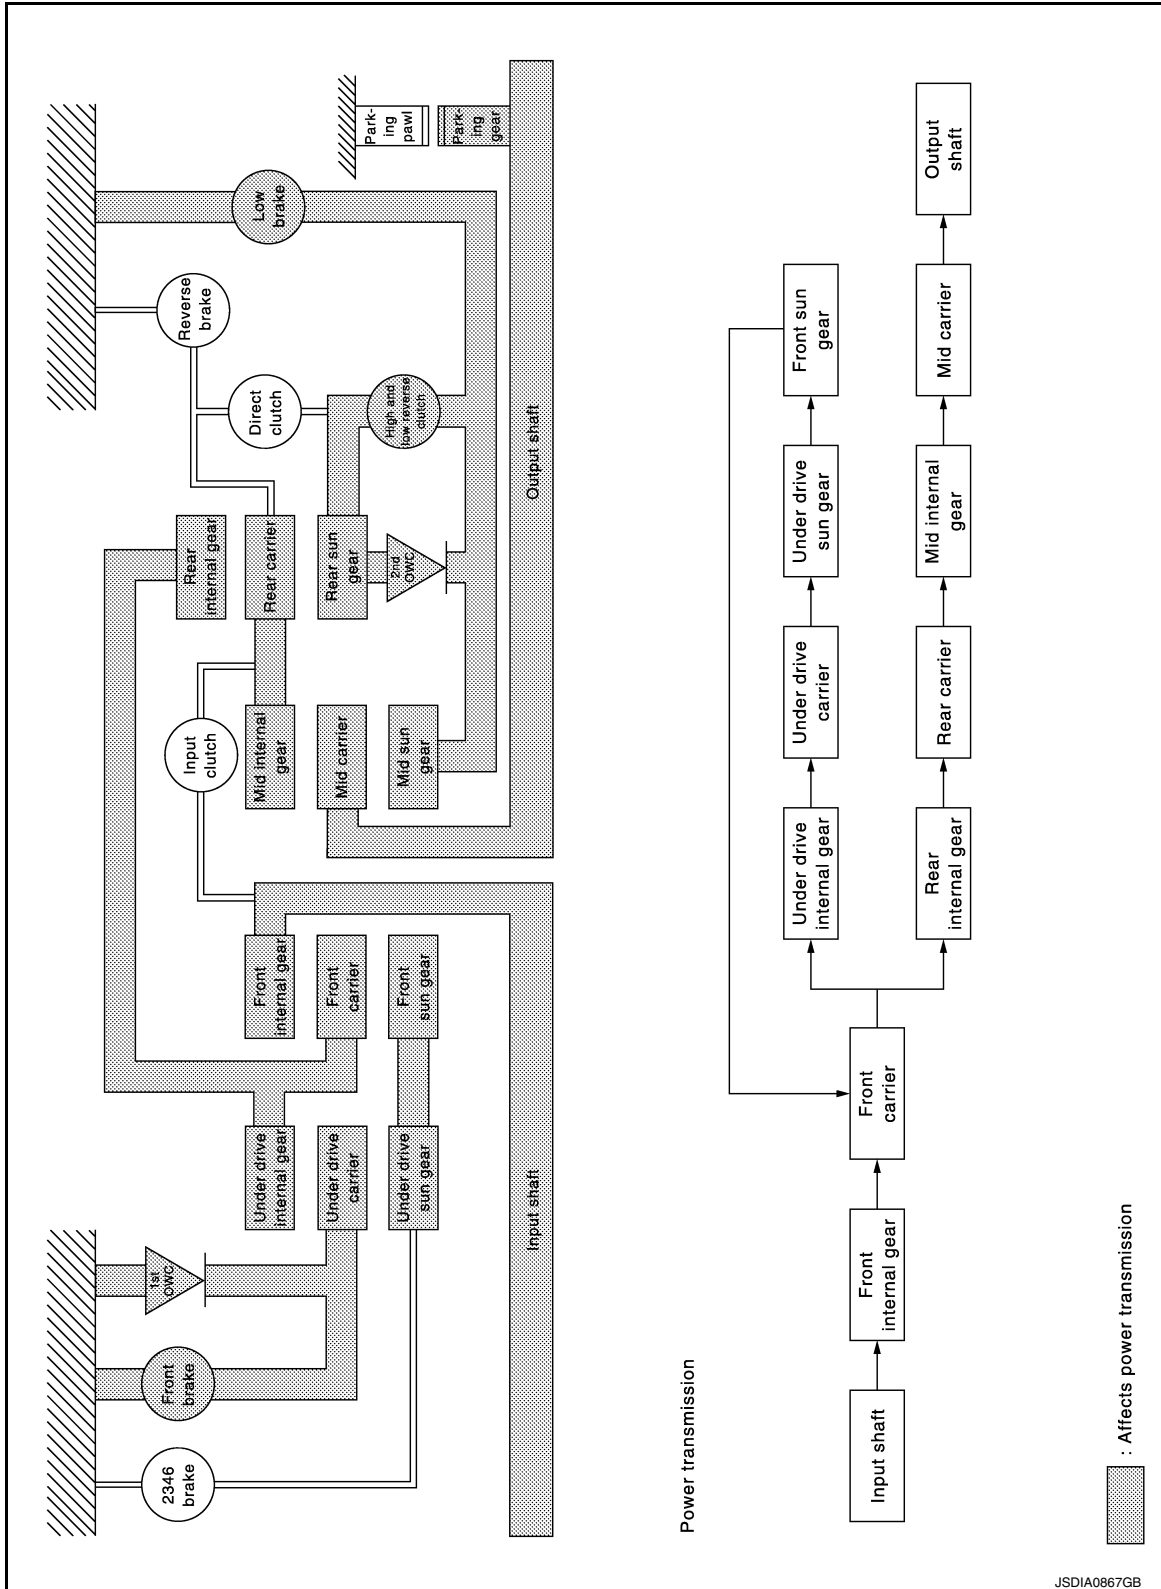

- The 1st one-way clutch and the front brake regulate counterclockwise rotation of the under drive carrier.

NOTE:

The front brake operates only while coasting.

- The 2nd one-way clutch and the high and low reverse clutch regulate counterclockwise rotation of the rear sun gear.

NOTE:

The high and low reverse clutch operates only while coasting.

- The mid sun gear is fixed by the low brake.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

- Each planetary gear enters the state described below.


Front planetary gear			
Name	Front sun gear	Front carrier	Front internal gear
Condition	—	Output	Input
Direction of rotation	Counterclockwise revolution	Clockwise revolution	Clockwise revolution
Number of revolutions	Deceleration from front internal gear	Deceleration from front internal gear	Same number of revolution as the input shaft
Under drive planetary gear			
Name	Under drive sun gear	Under drive carrier	Under drive internal gear
Condition	—	Fixed	Input/Output
Direction of rotation	Counterclockwise revolution	—	Clockwise revolution
Number of revolutions	Acceleration from under drive internal gear	—	Same number of revolution as the front carrier
Rear planetary gear			
Name	Rear sun gear	Rear carrier	Rear internal gear
Condition	Fixed	Output	Input
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from rear internal gear	Same number of revolution as the under drive internal gear
Mid planetary gear			
Name	Mid sun gear	Mid carrier	Mid internal gear
Condition	Fixed	Output	Input
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from mid internal gear	Same number of revolution as the rear carrier

“D2” and “DS2” Positions

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

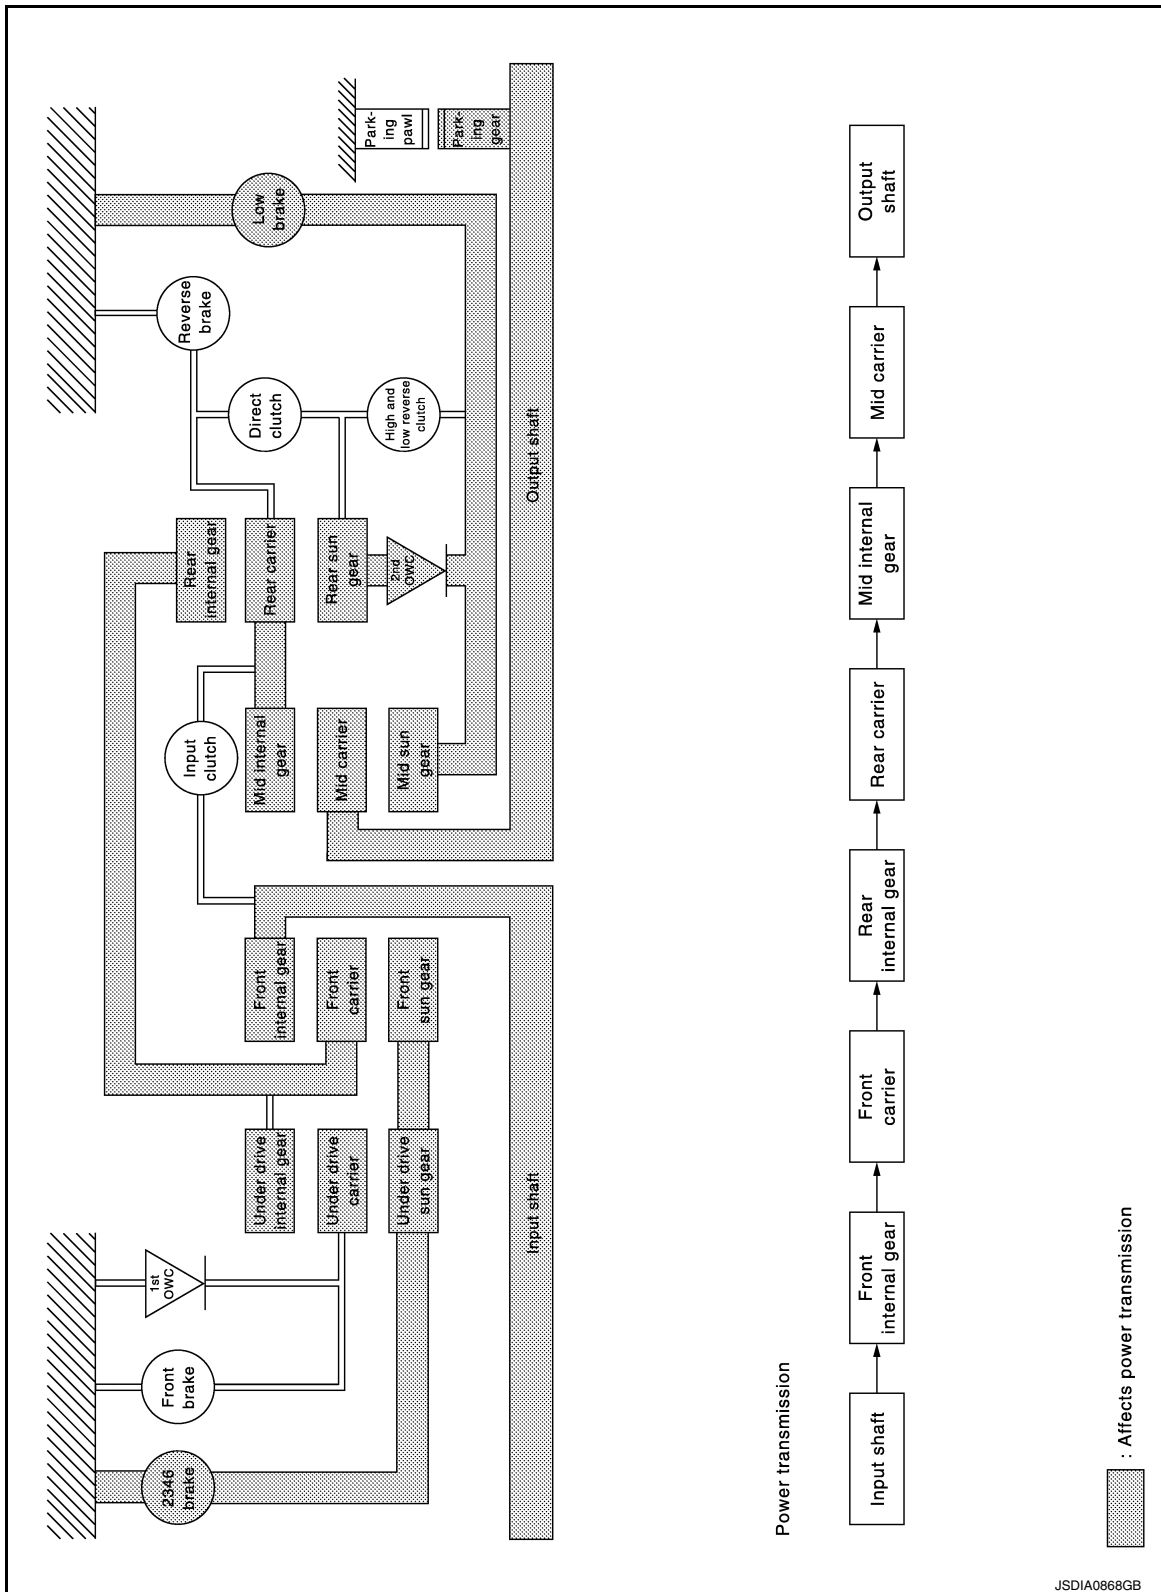

- The front sun gear and the under drive sun gear are fixed by the 2346 brake.
- The 2nd one-way clutch regulates counterclockwise rotation of the rear sun gear.
- The mid sun gear is fixed by the low brake.
- Each planetary gear enters the state described below.

: Affects power transmission

JSDIA0868GB

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

Front planetary gear			
Name	Front sun gear	Front carrier	Front internal gear
Condition	Fixed	Output	Input
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from front internal gear	Same number of revolution as the input shaft
Under drive planetary gear			
Name	Under drive sun gear	Under drive carrier	Under drive internal gear
Condition	Fixed	—	Input/Output
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from under drive internal gear	Same number of revolution as the front carrier
Rear planetary gear			
Name	Rear sun gear	Rear carrier	Rear internal gear
Condition	Fixed	Output	Input
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from rear internal gear	Same number of revolution as the under drive internal gear
Mid planetary gear			
Name	Mid sun gear	Mid carrier	Mid internal gear
Condition	Fixed	Output	Input
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from mid internal gear	Same number of revolution as the rear carrier

"M2" Position

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]


Front planetary gear			
Name	Front sun gear	Front carrier	Front internal gear
Condition	Fixed	Output	Input
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from front internal gear	Same number of revolution as the input shaft
Under drive planetary gear			
Name	Under drive sun gear	Under drive carrier	Under drive internal gear
Condition	Fixed	—	Input/Output
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from under drive internal gear	Same number of revolution as the front carrier
Rear planetary gear			
Name	Rear sun gear	Rear carrier	Rear internal gear
Condition	Fixed	Output	Input
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from rear internal gear	Same number of revolution as the under drive internal gear
Mid planetary gear			
Name	Mid sun gear	Mid carrier	Mid internal gear
Condition	Fixed	Output	Input
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from mid internal gear	Same number of revolution as the rear carrier

“D3”, “DS3” and “M3” Positions

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

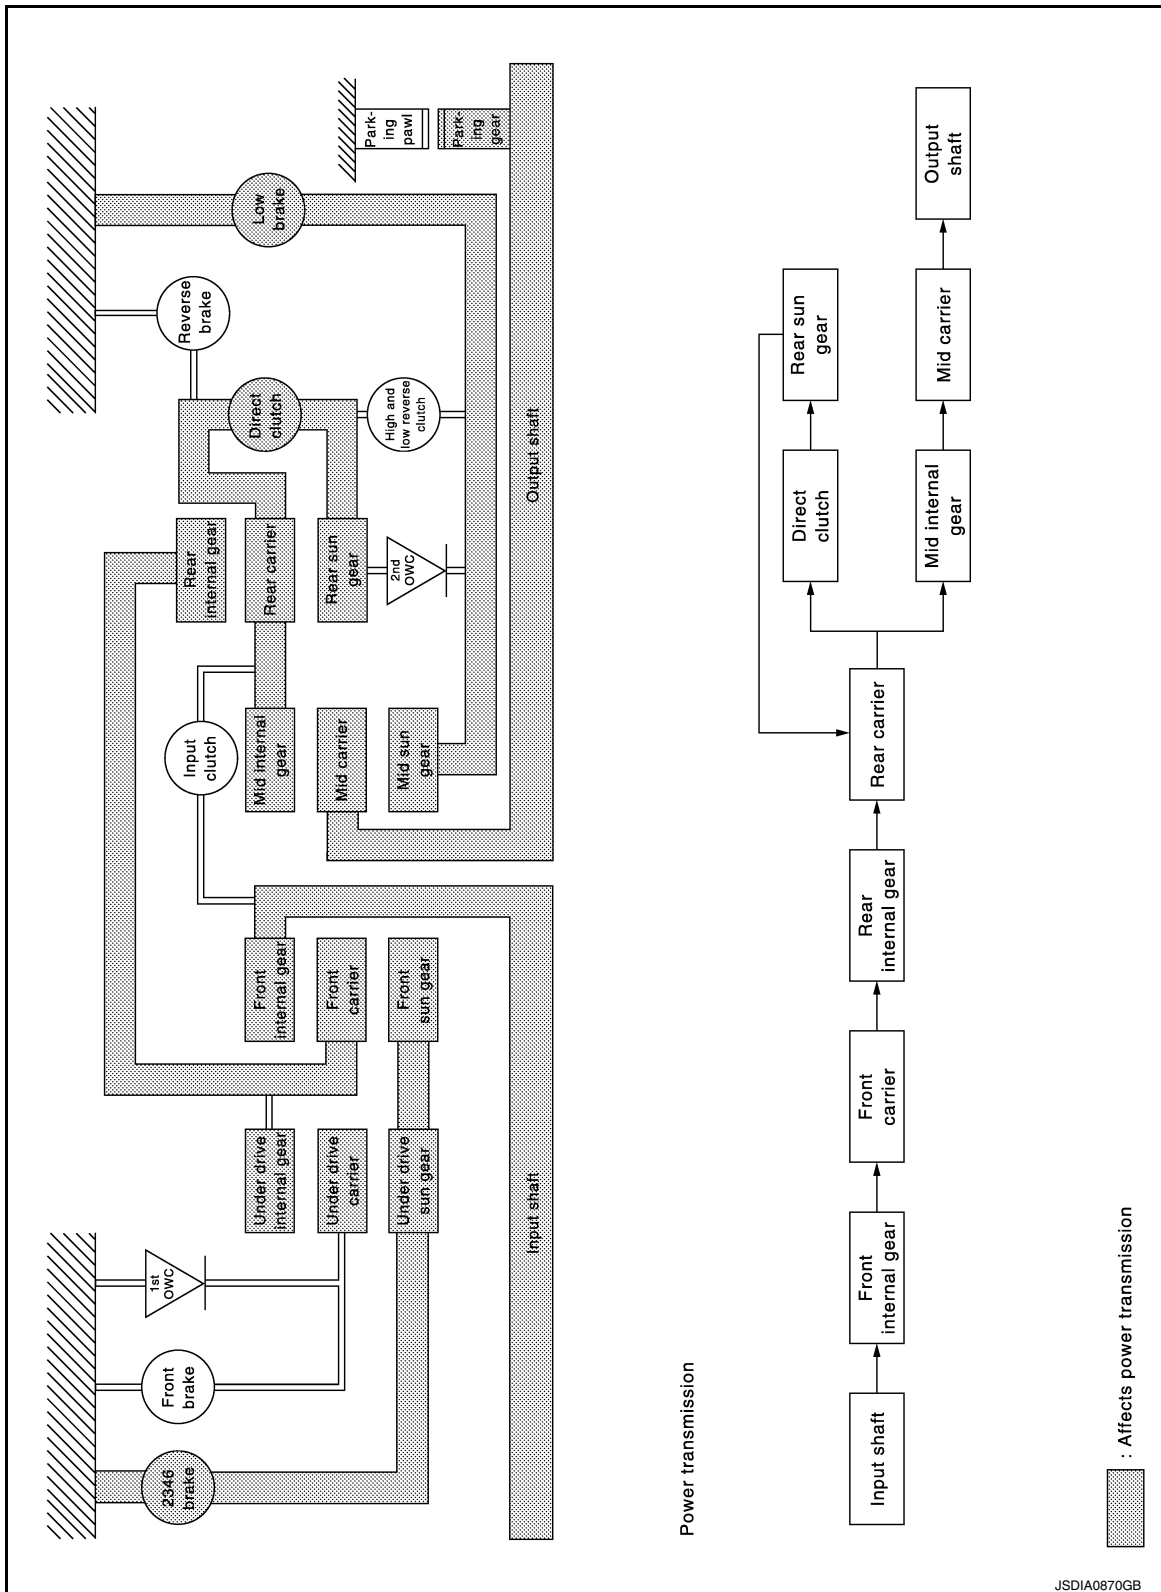

- The front sun gear and the under drive sun gear are fixed by the 2346 brake.
- The direct clutch gets engaged and connects the rear sun gear with the rear carrier.
- The mid sun gear is fixed by the low brake.
- Each planetary gear enters the state described below.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]


Front planetary gear			
Name	Front sun gear	Front carrier	Front internal gear
Condition	Fixed	Output	Input
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from front internal gear	Same number of revolution as the input shaft
Under drive planetary gear			
Name	Under drive sun gear	Under drive carrier	Under drive internal gear
Condition	Fixed	—	Input/Output
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from under drive internal gear	Same number of revolution as the front carrier
Rear planetary gear			
Name	Rear sun gear	Rear carrier	Rear internal gear
Condition	—	Output	Input
Direction of rotation	Clockwise revolution	Clockwise revolution	Clockwise revolution
Number of revolutions	Same number of revolution as the rear internal gear	Same number of revolution as the rear internal gear	Same number of revolution as the under drive internal gear
Mid planetary gear			
Name	Mid sun gear	Mid carrier	Mid internal gear
Condition	Fixed	Output	Input
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from mid internal gear	Same number of revolution as the rear carrier

“D4”, “DS4” and “M4” Positions

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

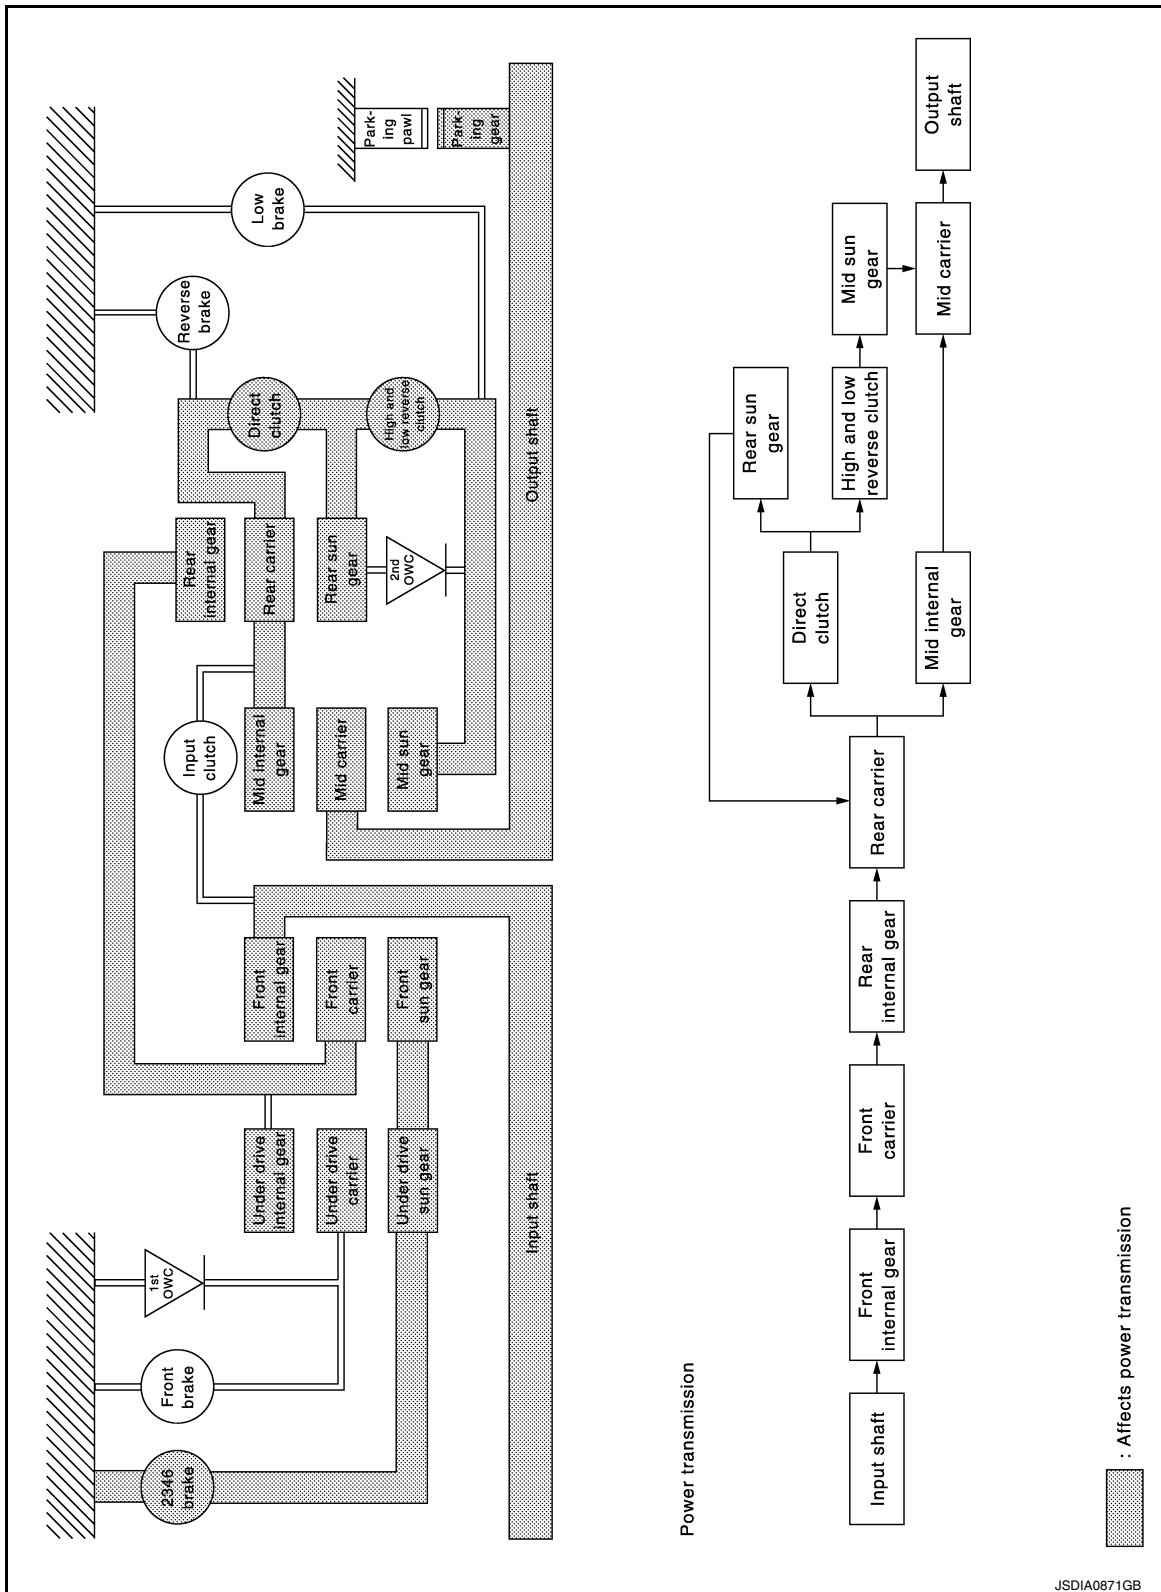

- The front sun gear and the under drive sun gear are fixed by the 2346 brake.
- The direct clutch gets engaged and connects the rear sun gear with the rear carrier.
- The high and low reverse clutch gets engaged and connects the rear sun gear with the mid sun gear.
- Each planetary gear enters the state described below.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]


Front planetary gear			
Name	Front sun gear	Front carrier	Front internal gear
Condition	Fixed	Output	Input
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from front internal gear	Same number of revolution as the input shaft
Under drive planetary gear			
Name	Under drive sun gear	Under drive carrier	Under drive internal gear
Condition	Fixed	—	Input/Output
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from under drive internal gear	Same number of revolution as the front carrier
Rear planetary gear			
Name	Rear sun gear	Rear carrier	Rear internal gear
Condition	—	Output	Input
Direction of rotation	Clockwise revolution	Clockwise revolution	Clockwise revolution
Number of revolutions	Same number of revolution as the rear internal gear	Same number of revolution as the rear internal gear	Same number of revolution as the under drive internal gear
Mid planetary gear			
Name	Mid sun gear	Mid carrier	Mid internal gear
Condition	—	Output	Input
Direction of rotation	Clockwise revolution	Clockwise revolution	Clockwise revolution
Number of revolutions	Same number of revolution as the mid internal gear	Same number of revolution as the mid internal gear	Same number of revolution as the rear carrier

“D5”, “DS5” and “M5” Positions

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

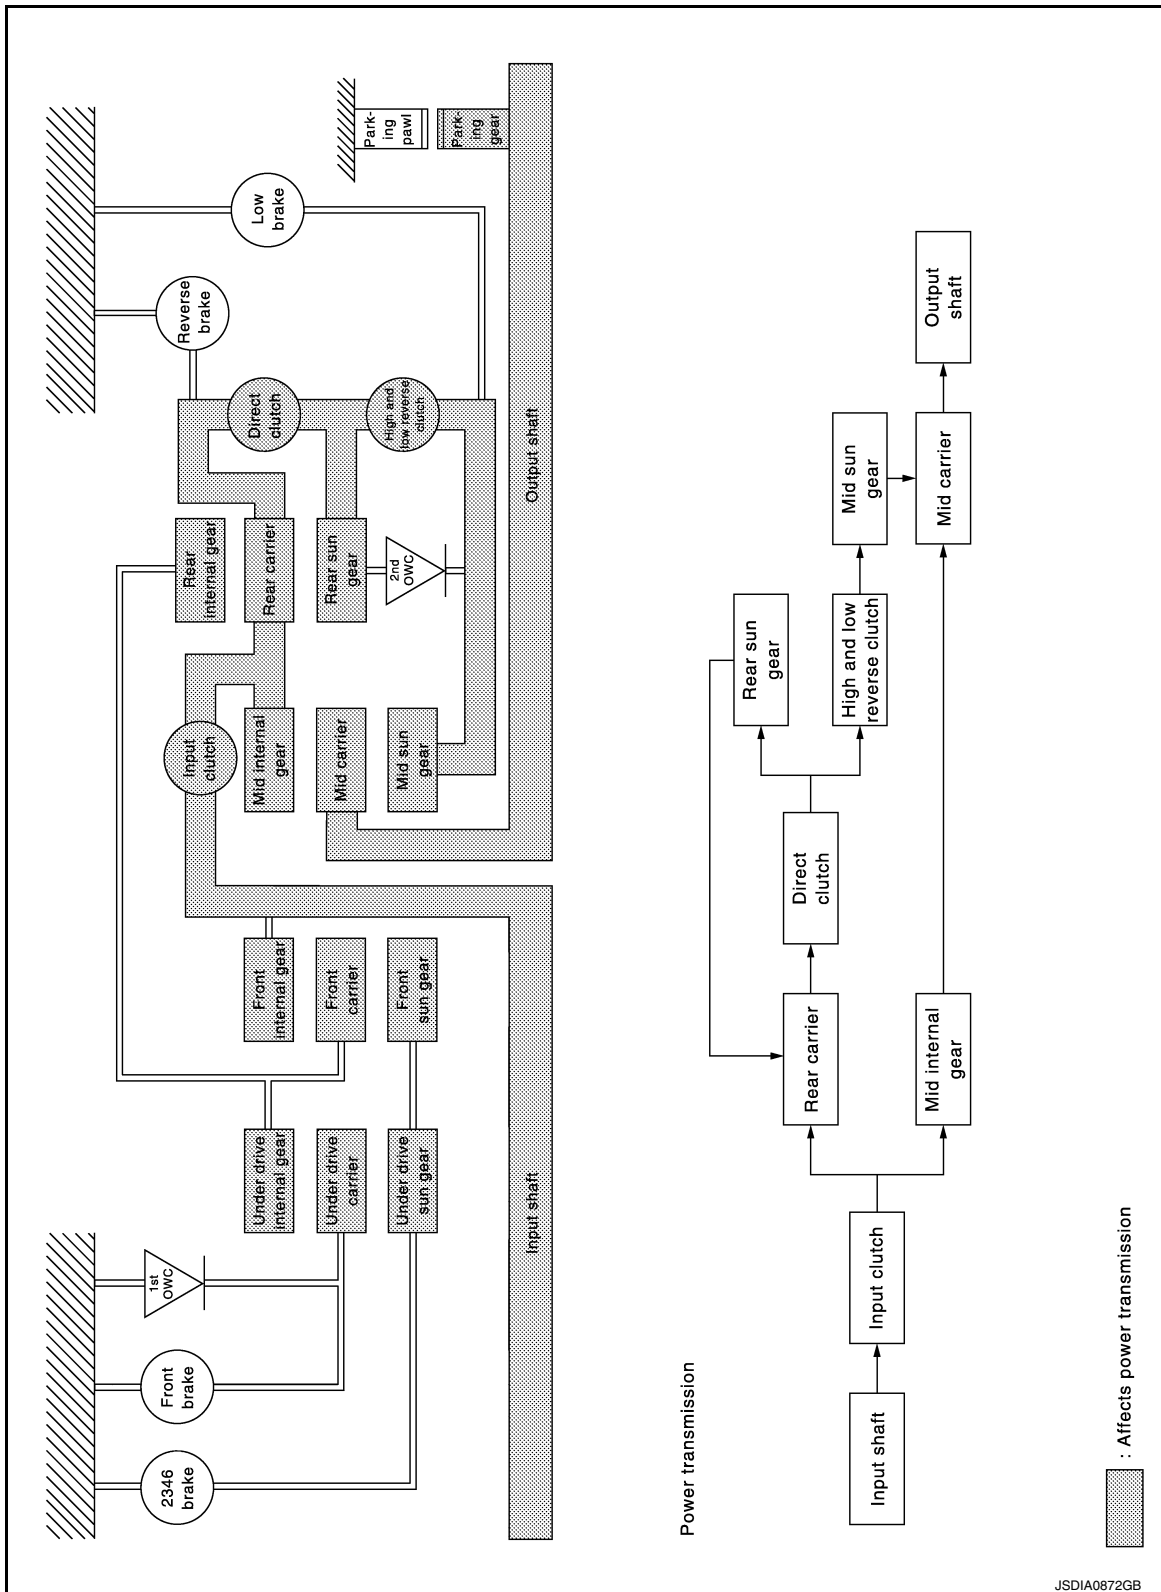

- The input clutch gets engaged and connects the mid internal gear with the rear carrier.
- The direct clutch gets engaged and connects the rear sun gear with the rear carrier.
- The high and low reverse clutch gets engaged and connects the rear sun gear with the mid sun gear.
- Each planetary gear enters the state described below.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]


Rear planetary gear			
Name	Rear sun gear	Rear carrier	Rear internal gear
Condition	—	input/Output	—
Direction of rotation	Clockwise revolution	Clockwise revolution	Clockwise revolution
Number of revolutions	Same number of revolution as the rear carrier	Same number of revolution as the input shaft	Same number of revolution as the rear carrier
Mid planetary gear			
Name	Mid sun gear	Mid carrier	Mid internal gear
Condition	—	Output	Input
Direction of rotation	Clockwise revolution	Clockwise revolution	Clockwise revolution
Number of revolutions	Same number of revolution as the mid internal gear	Same number of revolution as the mid internal gear	Same number of revolution as the input shaft

“D6”, “DS6” and “M6” Positions

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

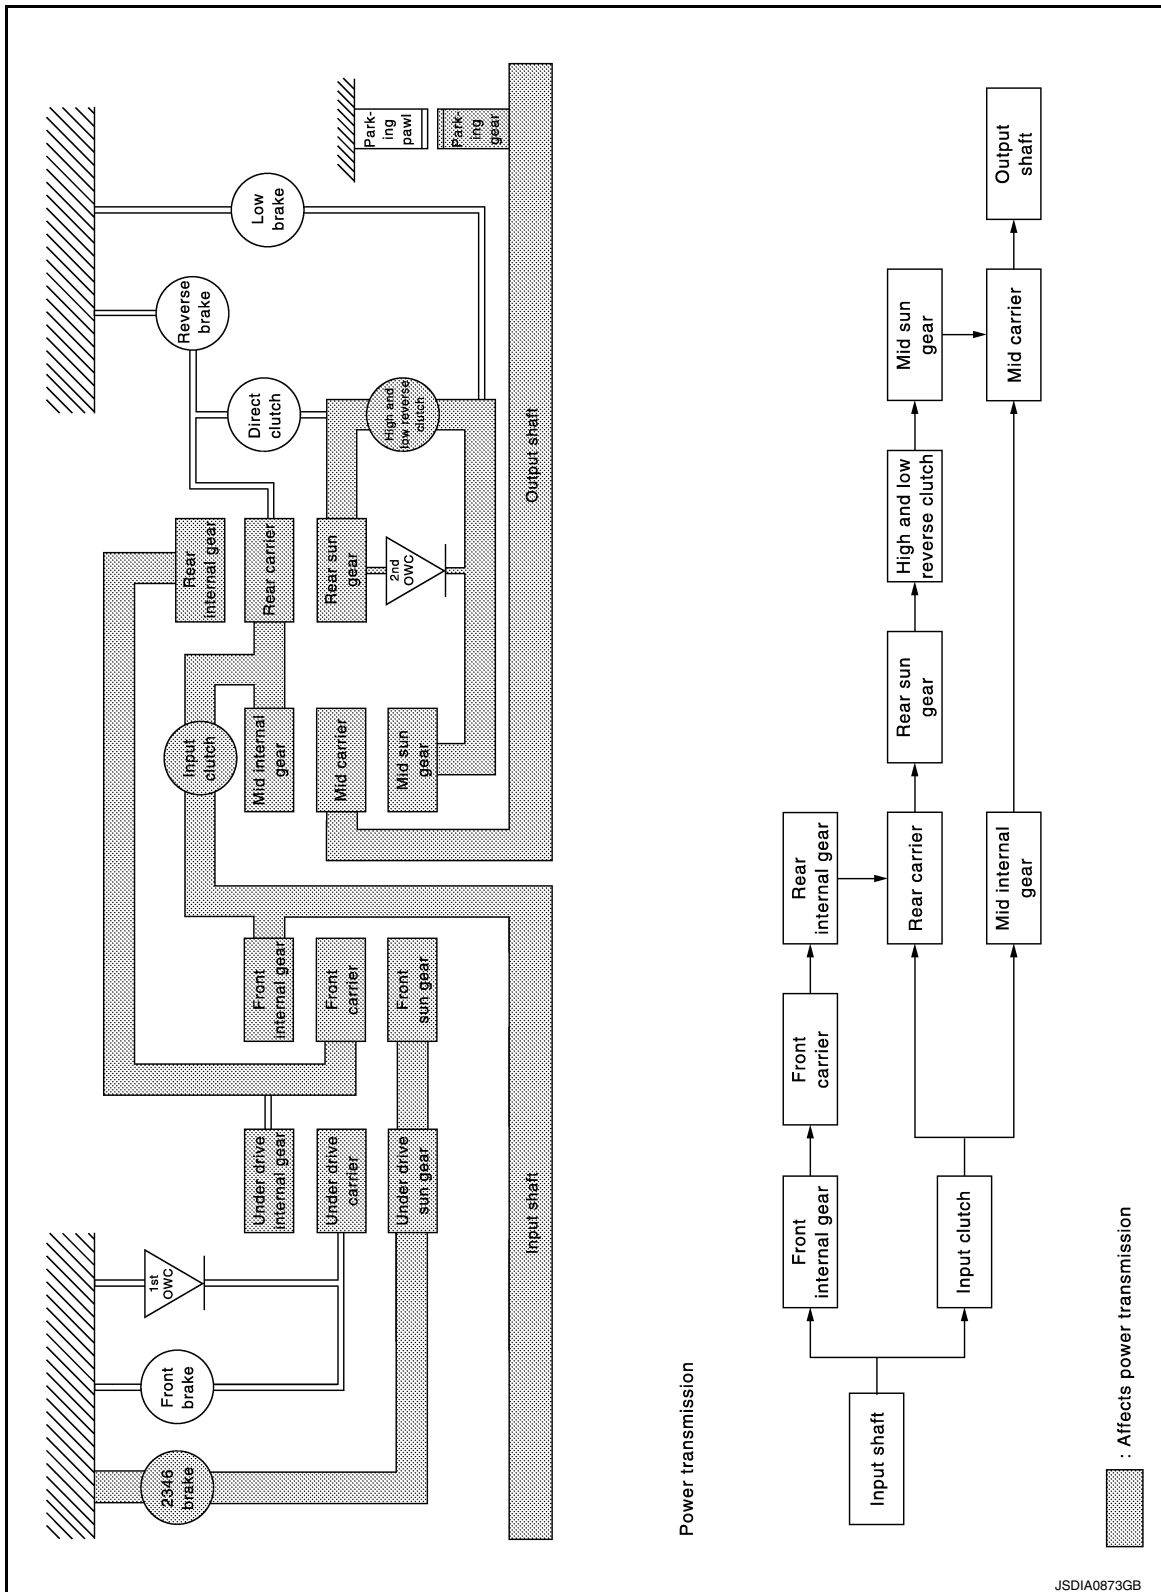

- The front sun gear and the under drive sun gear are fixed by the 2346 brake.
- The input clutch gets engaged and connects the mid internal gear with the rear carrier.
- The high and low reverse clutch gets engaged and connects the rear sun gear with the mid sun gear.
- Each planetary gear enters the state described below.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]


Front planetary gear			
Name	Front sun gear	Front carrier	Front internal gear
Condition	Fixed	Output	Input
Direction of rotation	—	Clockwise revolution	Clockwise revolution
Number of revolutions	—	Deceleration from front internal gear	Same number of revolution as the input shaft
Rear planetary gear			
Name	Rear sun gear	Rear carrier	Rear internal gear
Condition	—	Input/Output	Input
Direction of rotation	Clockwise revolution	Clockwise revolution	Clockwise revolution
Number of revolutions	Acceleration from rear carrier	Same number of revolution as the input shaft	Same number of revolution as the front carrier
Mid planetary gear			
Name	Mid sun gear	Mid carrier	Mid internal gear
Condition	—	Output	Input
Direction of rotation	Clockwise revolution	Clockwise revolution	Clockwise revolution
Number of revolutions	Acceleration from mid internal gear	Acceleration from mid internal gear	Same number of revolution as the input shaft

“D7”, “DS7” and “M7” Positions

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

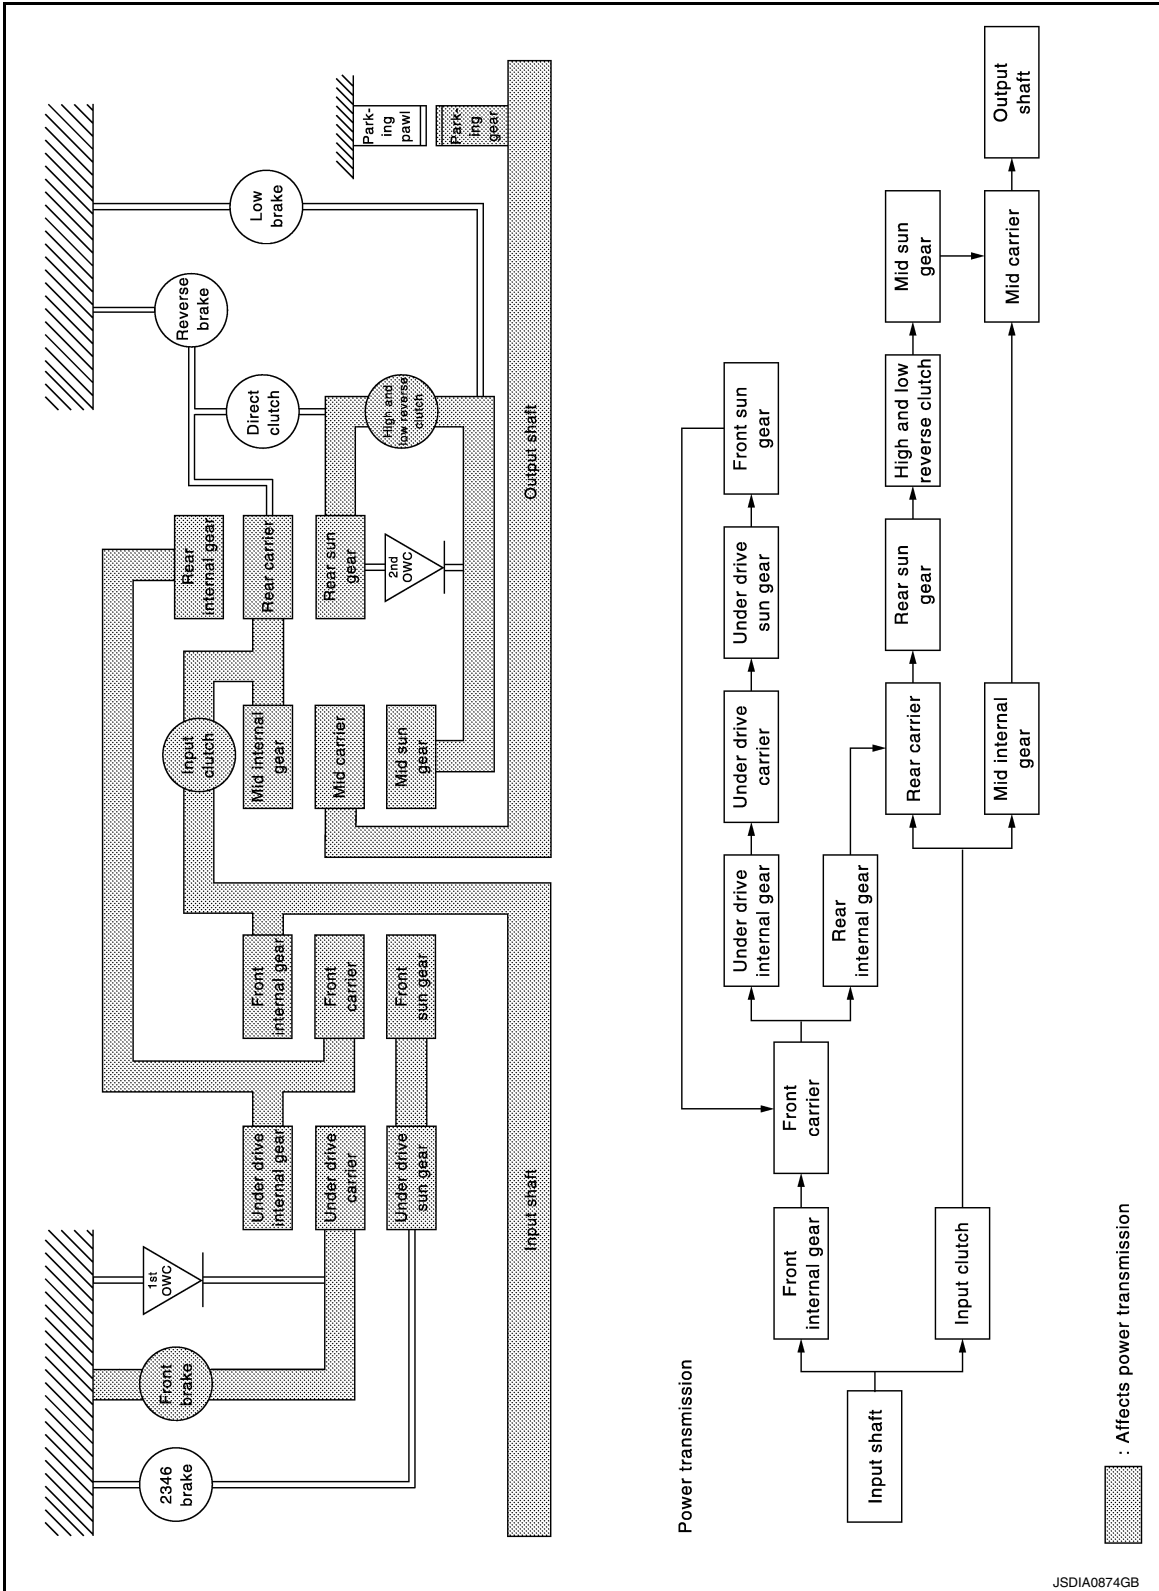

- The under drive carrier is fixed by the front brake.
- The input clutch gets engaged and connects the mid internal gear with the rear carrier.
- The high and low reverse clutch gets engaged and connects the rear sun gear with the mid sun gear.
- Each planetary gear enters state described below.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]


Front planetary gear			
Name	Front sun gear	Front carrier	Front internal gear
Condition	—	Output	Input
Direction of rotation	Counterclockwise revolution	Clockwise revolution	Clockwise revolution
Number of revolutions	Deceleration from front internal gear	Deceleration from front internal gear	Same number of revolution as the input shaft
Under drive planetary gear			
Name	Under drive sun gear	Under drive carrier	Under drive internal gear
Condition	—	Fixed	Input/Output
Direction of rotation	Counterclockwise revolution	—	Clockwise revolution
Number of revolutions	Acceleration from under drive internal gear	—	Same number of revolution as the front carrier
Rear planetary gear			
Name	Rear sun gear	Rear carrier	Rear internal gear
Condition	—	Input/Output	Input
Direction of rotation	Clockwise revolution	Clockwise revolution	Clockwise revolution
Number of revolutions	Acceleration from rear carrier	Same number of revolution as the input shaft	Same number of revolution as the under drive internal gear
Mid planetary gear			
Name	Mid sun gear	Mid carrier	Mid internal gear
Condition	—	Output	Input
Direction of rotation	Clockwise revolution	Clockwise revolution	Clockwise revolution
Number of revolutions	Acceleration from mid internal gear	Acceleration from mid internal gear	Same number of revolution as the input shaft

“R” Position

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

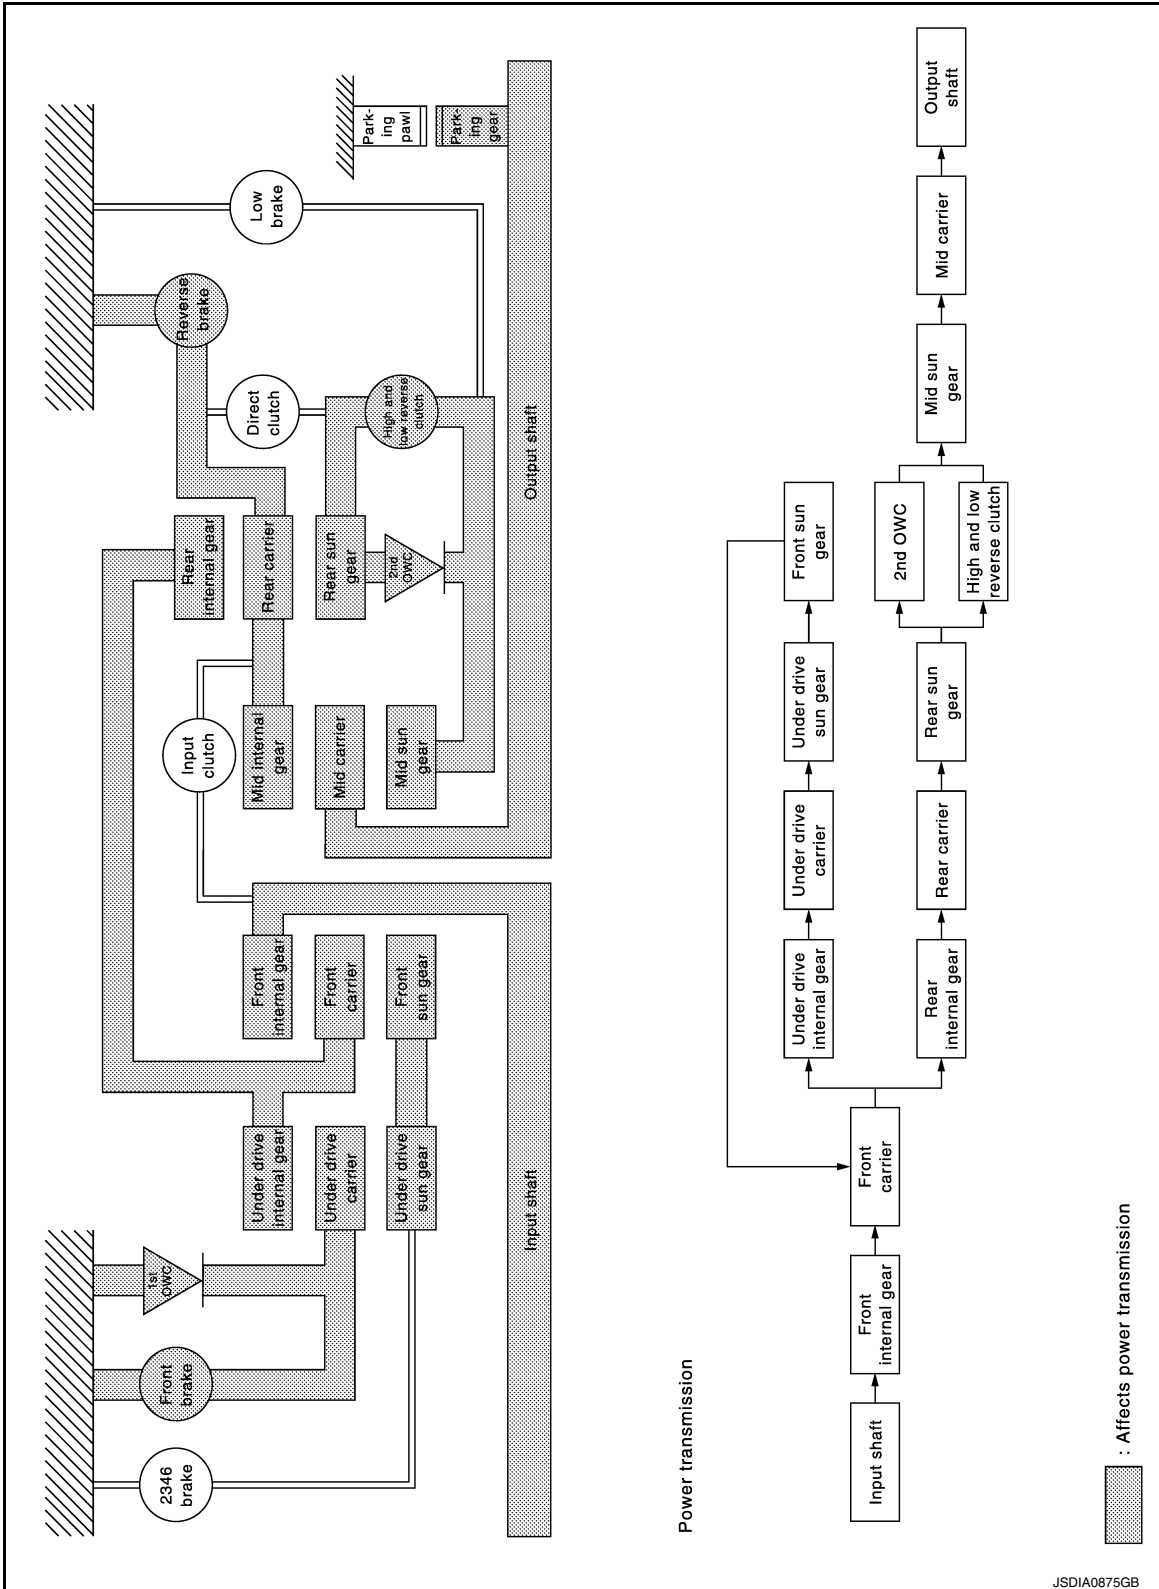

- The 1st one-way clutch and the front brake regulate counterclockwise rotation of the under drive carrier.

NOTE:

The front brake operates at the fixed speed or less.

- The rear carrier and the mid internal gear are fixed by the reverse brake.
- The mid sun gear rotates at the same speed as the rear sun gear by operation of the 2nd one-way clutch and the high and low reverse clutch.

NOTE:

The high and low reverse clutch operates at the fixed speed or less.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

- Each planetary gear enters the state described below.

Front planetary gear			
Name	Front sun gear	Front carrier	Front internal gear
Condition	—	Output	Input
Direction of rotation	Counterclockwise revolution	Clockwise revolution	Clockwise revolution
Number of revolutions	Deceleration from front internal gear	Deceleration from front internal gear	Same number of revolution as the input shaft
Under drive planetary gear			
Name	Under drive sun gear	Under drive carrier	Under drive internal gear
Condition	—	Fixed	Input/Output
Direction of rotation	Counterclockwise revolution	—	Clockwise revolution
Number of revolutions	Acceleration from under drive internal gear	—	Same number of revolution as the front carrier
Rear planetary gear			
Name	Rear sun gear	Rear carrier	Rear internal gear
Condition	Output	Fixed	Input
Direction of rotation	Counterclockwise revolution	—	Clockwise revolution
Number of revolutions	Acceleration from rear internal gear	—	Same number of revolution as the under drive internal gear
Mid planetary gear			
Name	Mid sun gear	Mid carrier	Mid internal gear
Condition	Input	Output	Fixed
Direction of rotation	Counterclockwise revolution	Counterclockwise revolution	—
Number of revolutions	Same number of revolution as the rear sun gear	Deceleration from mid sun gear	—


SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

Component Parts Location

INFOID:000000012167486

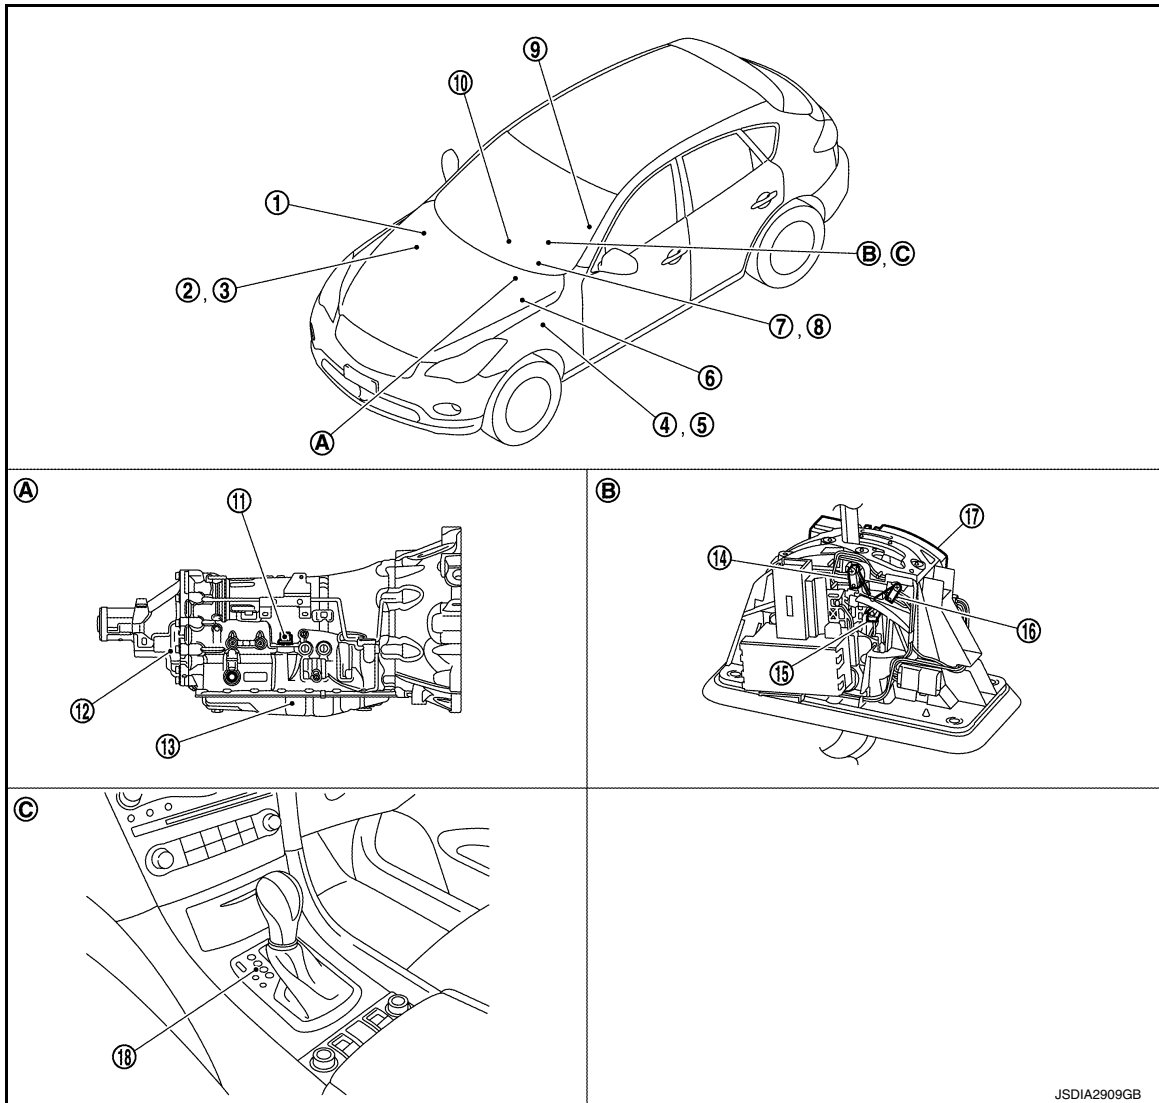

- | | | |
|--|---|---|
| 1. IPDM E/R
Refer to PCS-4. "Component Parts Location" . | 2. ECM
Refer to EC-39. "Component Parts Location" . | 3. BCM
Refer to BCS-9. "Component Parts Location" . |
| 4. Accelerator pedal position sensor
Refer to EC-39. "Component Parts Location" . | 5. Stop lamp switch
Refer to TM-60. "Component Parts Location" . | 6. ABS actuator and electric unit (control unit)
Refer to BRC-12. "Component Parts Location" . |
| 7. A/T CHECK indicator lamp
(On the combination meter) | 8. Shift position indicator
(On the combination meter) | 9. Yaw rate/side G sensor
Refer to BRC-12. "Component Parts Location" . |
| 10. Unified meter and A/C amp.
Refer to MWI-10. "METER SYSTEM : Component Parts Location" . | 11. Joint connector | 12. Output speed sensor*1 |
| 13. Control valve & TCM*2 | 14. Manual mode position select switch
(shift-up) | 15. Manual mode select switch |
| 16. Manual mode position select switch
(shift-down) | 17. Shift position switch | 18. Selector lever position indicator |
| A. A/T assembly | B. A/T shift selector assembly | C. Center console |

*1: Output speed sensor is installed in A/T assembly.

*2: Control valve & TCM is installed in A/T assembly.

SHIFT MECHANISM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

NOTE:

The following components are included in control valve & TCM.

- TCM
- Input speed sensor 1, 2
- A/T fluid temperature sensor
- Transmission range switch
- Direct clutch solenoid valve
- High and low reverse clutch solenoid valve
- Input clutch solenoid valve
- Front brake solenoid valve
- Low brake solenoid valve
- Anti-interlock solenoid valve
- 2346 brake solenoid valve
- Line pressure solenoid valve
- Torque converter clutch solenoid valve

Component Description

INFOID:000000012167487

Name of the Part (Abbreviation)	Function
Front brake (FR/B)	Fastens the under drive carrier.
Input clutch (I/C)	Connects the input shaft, the mid internal gear and the rear carrier.
Direct clutch (D/C)	Connects the rear carrier and the rear sun gear.
High and low reverse clutch (HLR/C)	Connects the rear sun gear and the mid sun gear.
Reverse brake (R/B)	Fastens the rear carrier.
Low brake (L/B)	Fastens the mid sun gear.
2346 brake (2346/B)	Fastens the under drive sun gear.
1st one-way clutch (1st OWC)	Allows the under drive carrier to turn freely in the forward direction but fastens it for reverse rotation.
2nd one-way clutch (2nd OWC)	Allows the rear sun gear to turn freely in the forward direction but fastens it for reverse rotation.
Torque converter	Amplifies driving force the engine, and transmits it to transmission input shaft.
Oil pump	Driven by the engine, oil pump supplies oil to torque converter, control valve assembly, and each lubricating system.
Bypass valve	Controls the flow rate of A/T fluid to fluid cooler according to the oil temperature.

SHIFT LOCK SYSTEM

System Description

INFOID:000000012167488

- Shift lock prevents an unintentional start of the vehicle that may be caused by an incorrect operation while selector lever is in the “P” position.
- Selector lever can be shifted from the “P” position to another position when the following conditions are satisfied.
 - Ignition switch ON
 - Stop lamp switch is ON (brake pedal is depressed)
 - Selector lever knob button is pressed


SHIFT LOCK OPERATION AT “P” POSITION

When Brake Pedal Is Not Depressed (No Shift Operation Allowed)

The shift lock solenoid (A) inside the shift lock unit is not energized if the brake pedal is not depressed while the ignition switch is ON.

The lock plate (B) lowers according to the downward movement of the position pin (C) when the selector button (D) is pressed, and presses only slider B (E) into the shift lock unit. Slider A (F) located below the lock plate prevents the downward movement of the lock plate with the spring force. The selector lever cannot be shifted from the “P” position for this reason.

However, slider A is forcibly pressed into the shift lock unit, allowing the selector lever to shift if the shift lock release button is pressed.

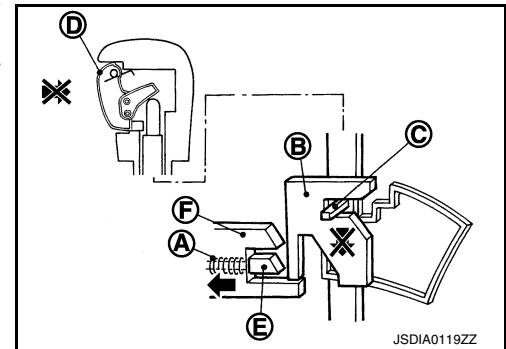


When Brake Pedal Is Depressed (Shift Operation Allowed)

The shift lock solenoid (A) inside the shift lock unit is energized and the relative positions of sliders A (B) and B (C) are maintained when the brake pedal is depressed while the ignition switch is ON.

The lock plate (D) lowers according to the downward movement of the position pin (E), thrusting away sliders A and B, when the selector button (F) is pressed.


The position pin lowers to the position that allows shift operation for this reason. As a result, the selector lever can be shifted out of the P position.

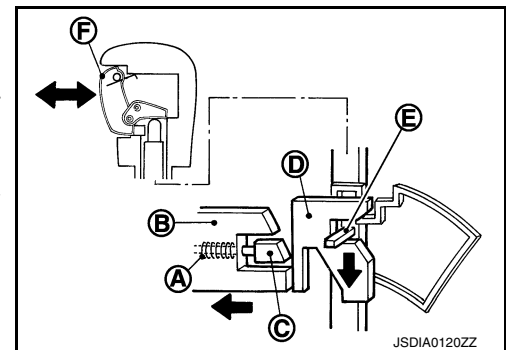

OPERATION AT OTHER THAN “P” POSITION

The shift lock function will not operate at any position other than “P” because the lock plate (A) is only set for the “P” position. Accordingly, the selector lever can be shifted to any position regardless of the brake operation.

The position pin (B) enters the “P” position thrusting away the lock plate when the selector lever is shifted to the “P” position. Then, the shift mechanism is locked when the selector button (C) is released.

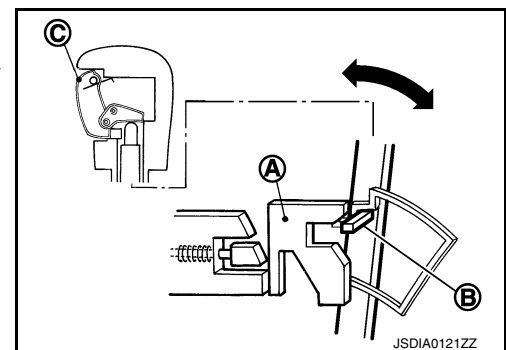

“P” POSITION RETAINING MECHANISM (IGNITION SWITCH LOCK)

When ignition switch is not in the ON position, power is not applied to the shift lock solenoid in the shift lock unit. This causes shift lock state, and then “P” position is retained.

When an actuating system in the shift lock unit has a malfunction, selector lever is unable to operate from the “P” position even when pressing the brake pedal with the ignition switch ON. However, when pressing the shift lock release button, slider A is forcibly pressed into the shift lock unit. This allows shift lock to be released and selector lever enables the select operation from the “P” position.

CAUTION:

SHIFT LOCK SYSTEM


< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

Never use the shift lock release button except when the select lever is inoperative even when pressing the brake pedal with the ignition switch ON.

Component Parts Location

INFOID:000000012167489

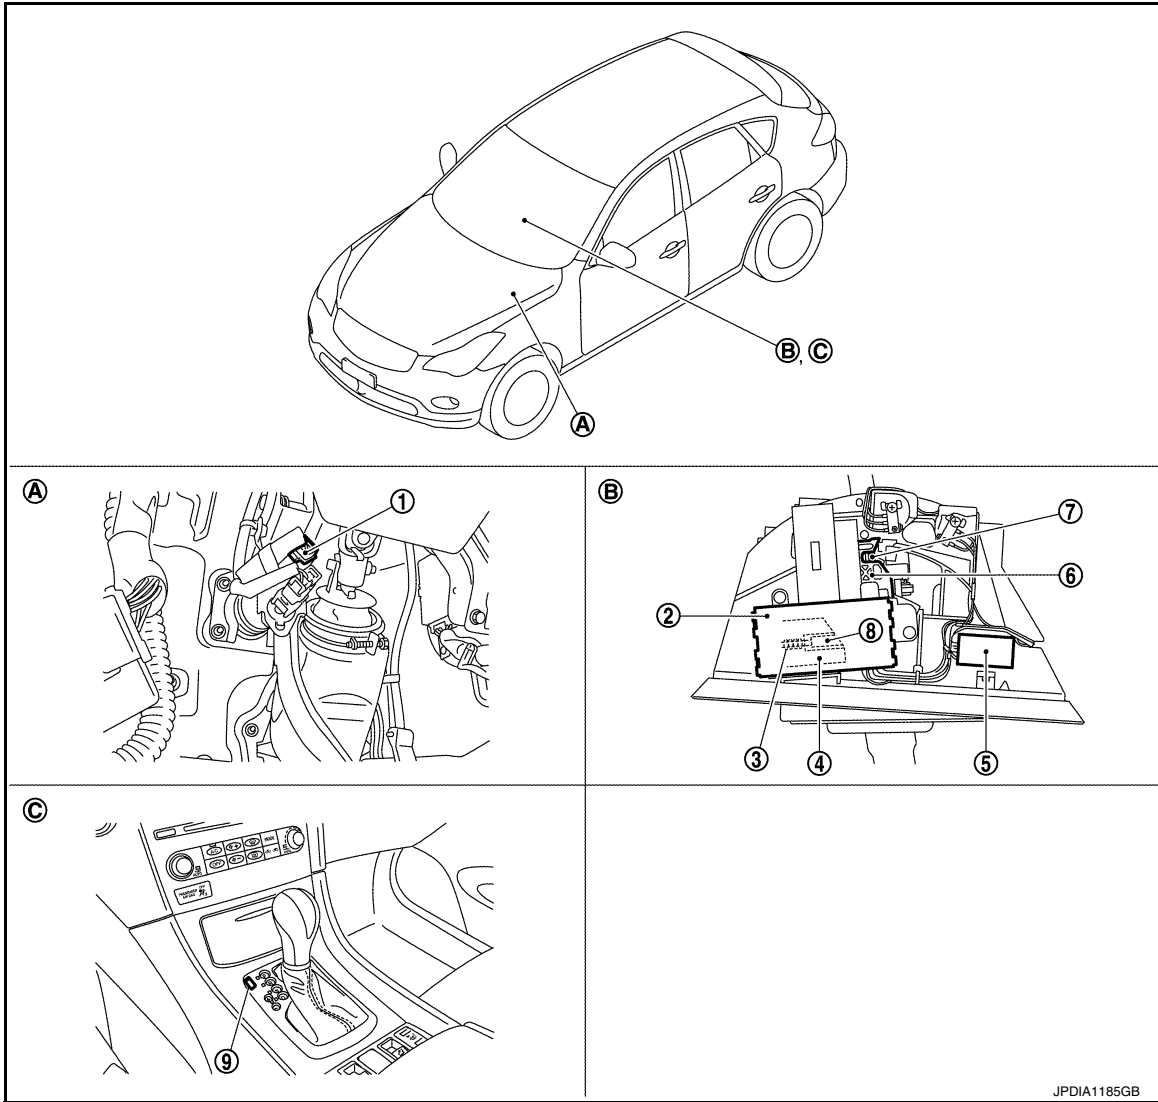

- | | | |
|-----------------------|---|------------------------|
| 1. Stop lamp switch | 2. Shift lock unit | 3. Shift lock solenoid |
| 4. Slider A | 5. A/T shift selector harness connector | 6. Lock plate |
| 7. Position pin | 8. Slider B | 9. Shift lock cover * |
| A. Brake pedal, upper | B. A/T shift selector assembly | C. Center console |

*: Shift lock release button becomes operative by removing shift lock cover.

Component Description

INFOID:000000012167490

Component	Function	
Shift lock unit	Shift lock solenoid	Activated by the ignition switch and stop lamp signals, it holds the relative positions of sliders A and B.
	Lock plate	Restricts position pin moving.
	Shift lock release button	Pressing the shift lock release button cancels the shift lock forcibly.

SHIFT LOCK SYSTEM

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

Component	Function
Position pin	Links with selector knob button and restricts selector lever shift operation.
Stop lamp switch	<ul style="list-style-type: none">• When brake pedal is depressed, stop lamp switch turns ON.• When stop lamp switch turns ON, power is supplied to shift lock unit.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

ON BOARD DIAGNOSTIC (OBD) SYSTEM

Diagnosis Description

INFOID:000000012167491

The A/T system has two self-diagnostic systems.

The first is the emission-related on board diagnostic system (OBD-II) performed by the TCM in combination with the ECM. A malfunction is indicated by the MIL (malfunction indicator lamp) and is stored as a DTC in the ECM memory and in the TCM memory.

The second is the TCM original self-diagnosis indicated by the TCM. A malfunction history is stored in the TCM memory. The detected items are overlapped with OBD-II self-diagnostic items. For details, refer to [EC-580. "DTC Index"](#).

OBD FUNCTION

The ECM provides emission-related on board diagnostic (OBD-II) functions for the A/T system.

One function is to receive a signal from the TCM used with OBD-related parts of the A/T system. The signal is sent to the ECM when a malfunction occurs in the corresponding OBD-related part.

The other function is to indicate a diagnostic result by means of the MIL (malfunction indicator lamp) on the instrument panel. Sensors, switches and solenoid valves are used as sensing elements.

The MIL automatically illuminates in "One or Two Trip Detection Logic" when a malfunction is sensed in relation to A/T system parts. For details, refer to [EC-136. "DIAGNOSIS DESCRIPTION : 1st Trip Detection Logic and Two Trip Detection Logic"](#).

DIAGNOSIS SYSTEM (TCM)

CONSULT Function

INFOID:000000012167492

CONSULT APPLICATION ITEMS

Diagnostic test mode	Function
Self Diagnostic Results	Retrieve DTC from ECU and display diagnostic items.
Data Monitor	Monitor the input/output signal of the control unit in real time.
CAN Diagnosis	This mode displays a network diagnosis result about CAN by a diagram.
CAN Diagnostic Support Monitor	It monitors the status of CAN communication.
DTC work support	DTC reproduction procedure can be performed speedily and precisely.
ECU Identification	Display the ECU identification number (part number etc.) of the selected system.
CALIB DATA*	The calibration data status of TCM can be checked.

*: Although "CALIB DATA" is selectable, do not use its.

SELF-DIAGNOSTIC RESULTS

Refer to [TM-157. "DTC Index"](#).

IGN Counter

The IGN counter is indicated in Freeze frame data (FFD) and indicates the number of times that the ignition switch is turned ON after returning to the normal state from DTC.

- CAN malfunction
 - The number is 0 when a malfunction is detected now.
 - The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.
 - The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.
- Other than CAN malfunction
 - The number is 0 when a malfunction is detected now.
 - The number increases like 1 → 2 → 3...254 → 255 after returning to the normal condition whenever ignition switch OFF → ON.
 - The number is fixed to 255 until the self-diagnosis results are erased if it is over 255.

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

X: Standard, —: Not applicable, ▼: Option

Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM ITEM	
VHCL/S SE-A/T (km/h or mph)	X	X	▼	Displays the vehicle speed calculated by the TCM from the output shaft revolution.
ESTM VSP SIG (km/h or mph)	X	—	▼	Displays the vehicle speed signal received via CAN communication.
OUTPUT REV (rpm)	X	X	▼	Displays the output speed calculated from the pulse signal of output speed sensor.
INPUT SPEED (rpm)	X	X	▼	Displays the input speed calculated from front sun gear revolution and front carrier revolution.
F SUN GR REV (rpm)	—	—	▼	Displays the front sun gear revolution calculated from the pulse signal of input speed sensor 1.

DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM ITEM	
F CARR GR REV (rpm)	—	—	▼	Displays the front carrier gear revolution calculated from the pulse signal of input speed sensor 2.
ENGINE SPEED (rpm)	X	X	▼	Displays the engine speed received via CAN communication.
TC SLIP SPEED (rpm)	—	X	▼	Displays the revolution difference between input speed and engine speed.
ACCELE POSI (0.0/8)	X	—	▼	Displays the accelerator position estimated value received via CAN communication.
THROTTLE POSI (0.0/8)	X	X	▼	Displays the throttle position received via CAN communication.
ATF TEMP 1 (°C or °F)	X	X	▼	Displays the ATF temperature of oil pan calculated from the signal voltage of A/T fluid temperature sensor.
ATF TEMP 2 (°C or °F)	X	X	▼	Displays the ATF temperature estimated value of torque converter outlet calculated from the signal voltage of A/T fluid temperature sensor.
ATF TEMP SE 1 (V)	—	—	▼	Displays the signal voltage of A/T fluid temperature sensor.
BATTERY VOLT (V)	X	—	▼	Displays the power supply voltage of TCM.
LINE PRES SOL (A)	—	X	▼	Displays the command current from TCM to the line pressure solenoid.
TCC SOLENOID (A)	—	X	▼	Displays the command current from TCM to the torque converter clutch solenoid.
L/B SOLENOID (A)	—	X	▼	Displays the command current from TCM to the low brake solenoid.
FR/B SOLENOID (A)	—	X	▼	Displays the command current from TCM to the front brake solenoid.
HLR/C SOL (A)	—	X	▼	Displays the command current from TCM to the high and low reverse clutch solenoid.
I/C SOLENOID (A)	—	X	▼	Displays the command current from TCM to the input clutch solenoid.
D/C SOLENOID (A)	—	X	▼	Displays the command current from TCM to the direct clutch solenoid.
2346/B SOL (A)	—	X	▼	Displays the command current from TCM to the 2346 brake solenoid.
L/P SOL MON (A)	—	—	▼	Monitors the command current from TCM to the line pressure solenoid, and displays the monitor value.
TCC SOL MON (A)	—	—	▼	Monitors the command current from TCM to the torque converter clutch solenoid, and displays the monitor value.
L/B SOL MON (A)	—	—	▼	Monitors the command current from TCM to the low brake solenoid, and displays the monitor value.
FR/B SOL MON (A)	—	—	▼	Monitors the command current from TCM to the front brake solenoid, and displays the monitor value.

DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM ITEM	
HLR/C SOL MON (A)	—	—	▼	Monitors the command current from TCM to the high and low reverse clutch solenoid, and displays the monitor value.
I/C SOL MON (A)	—	—	▼	Monitors the command current from TCM to the input clutch solenoid, and displays the monitor value.
D/C SOL MON (A)	—	—	▼	Monitors the command current from TCM to the direct clutch solenoid, and displays the monitor value.
2346/B SOL MON (A)	—	—	▼	Monitors the command current from TCM to the 2346 brake solenoid, and displays the monitor value.
GEAR RATIO	—	X	▼	Displays the gear ratio calculated from input speed and output speed.
ENGINE TORQUE (Nm)	—	—	▼	Displays the engine torque estimated value received via CAN communication.
ENG TORQUE D (Nm)	—	—	▼	Displays the engine torque estimated value reflected the requested torque of each control unit received via CAN communication.
INPUT TRQ S (Nm)	—	—	▼	Displays the input torque using for the oil pressure calculation process of shift change control.
INPUT TRQ L/P (Nm)	—	—	▼	Displays the input torque using for the oil pressure calculation process of line pressure control.
TRGT PRES L/P (kPa, kg/cm ² or psi)	—	—	▼	Displays the target oil pressure value of torque converter clutch solenoid valve calculated by the oil pressure calculation process of lock-up control.
TRGT PRES TCC (kPa, kg/cm ² or psi)	—	—	▼	Displays the target oil pressure value of torque converter clutch solenoid valve calculated by the oil pressure calculation process of shift change control.
TRGT PRES L/B (kPa, kg/cm ² or psi)	—	—	▼	Displays the target oil pressure value of low brake solenoid valve calculated by the oil pressure calculation process of shift change control.
TRGT PRE FR/B (kPa, kg/cm ² or psi)	—	—	▼	Displays the target oil pressure value of front brake solenoid valve calculated by the oil pressure calculation process of shift change control.
TRG PRE HLR/C (kPa, kg/cm ² or psi)	—	—	▼	Displays the target oil pressure value of high and low reverse clutch solenoid valve calculated by the oil pressure calculation process of shift change control.
TRGT PRES I/C (kPa, kg/cm ² or psi)	—	—	▼	Displays the target oil pressure value of input clutch solenoid valve calculated by the oil pressure calculation process of shift change control.
TRGT PRES D/C (kPa, kg/cm ² or psi)	—	—	▼	Displays the target oil pressure value of direct clutch solenoid valve calculated by the oil pressure calculation process of shift change control.
TRG PRE 2346/B (kPa, kg/cm ² or psi)	—	—	▼	Displays the target oil pressure value of 2346 brake solenoid valve calculated by the oil pressure calculation process of shift change control.
SHIFT PATTERN	—	—	▼	Displays the gear change data using the shift pattern control.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM ITEM	
VEHICLE SPEED (km/h or mph)	—	—	▼	Displays the vehicle speed for control using the control of TCM.
RANGE SW 4 (ON/OFF)	X	—	▼	Displays the operation status of transmission range switch 4.
RANGE SW 3 (ON/OFF)	X	—	▼	Displays the operation status of transmission range switch 3.
RANGE SW 2 (ON/OFF)	X	—	▼	Displays the operation status of transmission range switch 2.
RANGE SW 1 (ON/OFF)	X	—	▼	Displays the operation status of transmission range switch 1.
SFT DWN ST SW (ON/OFF)	X	—	▼	<ul style="list-style-type: none"> • Displays the operation status of paddle shifter (down switch). • Not mounted but displayed.
SFT UP ST SW (ON/OFF)	X	—	▼	<ul style="list-style-type: none"> • Displays the operation status of paddle shifter (up switch). • Not mounted but displayed.
DOWN SW LEVER (ON/OFF)	X	—	▼	Displays the operation status of selector lever (down switch).
UP SW LEVER (ON/OFF)	X	—	▼	Displays the operation status of selector lever (up switch).
NON M-MODE SW (ON/OFF)	X	—	▼	Displays whether the selector lever is in any position other than manual shift gate position.
MANU MODE SW (ON/OFF)	X	—	▼	Displays whether the selector lever is in the manual shift gate position.
TOW MODE SW (ON/OFF)	—	—	▼	<ul style="list-style-type: none"> • Displays the reception status of tow mode signal received via CAN communication. • Not mounted but displayed.
DS RANGE (ON/OFF)	—	—	▼	Displays whether it is the DS mode.
1 POSITION SW (ON/OFF)	X	—	▼	<ul style="list-style-type: none"> • Displays the reception status of 1 position switch signal received via CAN communication. • Not mounted but displayed.
OD CONT SW (ON/OFF)	X	—	▼	<ul style="list-style-type: none"> • Displays the reception status of overdrive control switch signal received via CAN communication. • Not mounted but displayed.
BRAKESW (ON/OFF)	X	—	▼	Displays the reception status of stop lamp switch signal received via CAN communication.
POWERSHIFT SW (ON/OFF)	X	—	▼	<ul style="list-style-type: none"> • Displays the reception status of POWER mode signal received via CAN communication. • Not mounted but displayed.
ASCD-OD CUT (ON/OFF)	X	—	▼	Displays the reception status of ASCD OD cancel request signal received via CAN communication.
ASCD-CRUISE (ON/OFF)	X	—	▼	Displays the reception status of ASCD operation signal received via CAN communication.
ABS SIGNAL (ON/OFF)	X	—	▼	Displays the reception status of ABS operation signal received via CAN communication.

DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM ITEM	
TCS GR/P KEEP (ON/OFF)	X	—	▼	Displays the reception status of TCS gear keep request signal received via CAN communication.
TCS SIGNAL 2 (ON/OFF)	X	—	▼	Displays whether the reception value of A/T shift schedule change demand signal received via CAN communication is "cold".
TCS SIGNAL 1 (ON/OFF)	X	—	▼	Displays whether the reception value of A/T shift schedule change demand signal received via CAN communication is "warm".
LOW/B PARTS (FAIL/NOTFAIL)	—	—	▼	Displays whether the identified malfunction point judged by TCM is the related parts of low brake.
HC/IC/FRB PARTS (FAIL/NOTFAIL)	—	—	▼	Displays whether the identified malfunction point judged by TCM is the related parts of high and low reversed clutch, input clutch or front brake.
IC/FRB PARTS (FAIL/NOTFAIL)	—	—	▼	Displays whether the identified malfunction point judged by TCM is the related parts of input clutch or front brake.
HLR/C PARTS (FAIL/NOTFAIL)	—	—	▼	Displays whether the identified malfunction point judged by TCM is the related parts of high and low reversed clutch.
W/O THL POS (ON/OFF)	X	—	▼	Displays the kickdown condition signal status received via CAN communication.
CLSD THL POS (ON/OFF)	X	—	▼	Displays the idling status signal status received via CAN communication.
DRV CST JUDGE (DRIVE/COAST)	—	—	▼	Displays the judgment results of "driving" or "coasting" judged by TCM.
SHIFT IND SIGNAL	—	—	▼	Displays the transmission value of shift position signal transmitted via CAN communication.
STARTER RELAY (ON/OFF)	—	—	▼	Displays the command status from TCM to starter relay.
F-SAFE IND/L (ON/OFF)	—	—	▼	Displays the transmission status of A/T CHECK indicator lamp signal transmitted via CAN communication.
ATF WARN LAMP (ON/OFF)	—	—	▼	<ul style="list-style-type: none"> • Displays the transmission status of ATF temperature signal transmitted via CAN communication. • Not mounted but displayed.
MANU MODE IND (ON/OFF)	—	—	▼	Displays the transmission status of manual mode signal transmitted via CAN communication.
ON OFF SOL MON (ON/OFF)	—	—	▼	Monitors the command value from TCM to the anti-interlock solenoid, and displays the monitor status.
START RLY MON (ON/OFF)	—	—	▼	Monitors the command value from TCM to the starter relay, and displays the monitor status.
ON OFF SOL (ON/OFF)	—	—	▼	Displays the command status from TCM to anti-interlock solenoid.
SLCT LVR POSI	—	X	▼	Displays the shift positions recognized by TCM.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

DIAGNOSIS SYSTEM (TCM)

< SYSTEM DESCRIPTION >

[7AT: RE7R01A]

Monitored item (Unit)	Monitor Item Selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM ITEM	
GEAR	—	X	▼	Displays the current transmission gear position recognized by TCM.
NEXT GR POSI	—	—	▼	Displays the target gear position of gear change that is calculated based on the vehicle speed information and throttle information.
SHIFT MODE	—	—	▼	Displays the transmission driving mode recognized by TCM.
D/C PARTS (FAIL/NOTFAIL)	—	—	▼	Displays whether the identified malfunction point judged by TCM is the related parts of direct clutch.
FR/B PARTS (FAIL/NOTFAIL)	—	—	▼	Displays whether the identified malfunction point judged by TCM is the related parts of front brake.
2346/B PARTS (FAIL/NOTFAIL)	—	—	▼	Displays whether the identified malfunction point judged by TCM is the related parts of 2346 brake.
2346B/DC PARTS (FAIL/NOTFAIL)	—	—	▼	Displays whether the identified malfunction point judged by TCM is the related parts of 2346 brake or direct clutch.

DTC WORK SUPPORT

Item name	Description	Check item
1ST GR FNCTN P0731	Following items for "1GR incorrect ratio" can be confirmed. <ul style="list-style-type: none"> • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG) 	<ul style="list-style-type: none"> • Input clutch solenoid valve • Front brake solenoid valve • Direct clutch solenoid valve • High and low reverse clutch solenoid valve • Low brake solenoid valve • 2346 brake solenoid valve • Anti-interlock solenoid valve • Each clutch and brake • Output speed sensor • Input speed sensor 1, 2 • Hydraulic control circuit
2ND GR FNCTN P0732	Following items for "2GR incorrect ratio" can be confirmed. <ul style="list-style-type: none"> • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG) 	
3RD GR FNCTN P0733	Following items for "3GR incorrect ratio" can be confirmed. <ul style="list-style-type: none"> • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG) 	
4TH GR FNCTN P0734	Following items for "4GR incorrect ratio" can be confirmed. <ul style="list-style-type: none"> • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG) 	
5TH GR FNCTN P0735	Following items for "5GR incorrect ratio" can be confirmed. <ul style="list-style-type: none"> • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG) 	
6TH GR FNCTN P0729	Following items for "6GR incorrect ratio" can be confirmed. <ul style="list-style-type: none"> • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG) 	
7TH GR FNCTN P1734	Following items for "7GR incorrect ratio" can be confirmed. <ul style="list-style-type: none"> • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG) 	
TCC SOL FUNCTN CHECK	Following items for "TCC solenoid function" can be confirmed. <ul style="list-style-type: none"> • Self-diagnosis status (whether the diagnosis is being performed or not) • Self-diagnostic results (OK or NG) 	<ul style="list-style-type: none"> • Harness or connectors • Torque converter clutch solenoid valve • Torque converter • Input speed sensor 1, 2 • Hydraulic control circuit

U0100 LOST COMMUNICATION (ECM A)

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

DTC/CIRCUIT DIAGNOSIS

U0100 LOST COMMUNICATION (ECM A)

DTC Logic

INFOID:000000012167493

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible causes
U0100	Lost Communication With ECM/PCM A	When the ignition switch is ON, TCM is unable to receive the CAN communications signal from ECM continuously for 2 seconds or more.	<ul style="list-style-type: none">• ECM• Harness or connector (CAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1. PREPARATION BEFORE WORK

If another "DTC CONFIRMATION PROCEDURE" occurs just before, turn ignition switch OFF and wait for at least 10 seconds, then perform the next test.

>> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

With CONSULT

1. Start the engine and wait for at least 5 seconds.
2. Check DTC.

With GST

Follow the procedure "With CONSULT".

Is "U0100" detected?

- YES >> Go to [TM-69, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000012167494

For the diagnosis procedure, refer to [LAN-18, "Trouble Diagnosis Flow Chart"](#).

U0300 CAN COMMUNICATION DATA

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

U0300 CAN COMMUNICATION DATA

Description

INFOID:000000012167495

The amount of data transmitted from each control unit is read.

DTC Logic

INFOID:000000012167496

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
U0300	Internal Control Module Software Incompatibility	When the amount of data transmitted from each control unit is smaller than the specified amount.	Control units other than TCM.

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Turn ignition switch ON and wait 2 seconds or more.
2. Perform "Self Diagnostic Results" in "TRANSMISSION".

Is "U0300" detected?

- YES >> Go to [TM-70, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000012167497

1. CHECK CONTROL UNIT

Check the number of control units replaced before detecting "U0300".

Is the number of replaced control units one?

- YES >> Since the replaced control unit may be out of specifications, check the part number and specifications.
NO >> GO TO 2.

2. INSPECTION CONTROL UNIT

With CONSULT

1. Remove one of the replaced control units.
2. Install the previous control unit mounted before replacement.
3. Turn ignition switch ON and wait 2 seconds or more.
4. Perform "Self Diagnostic Results" in "TRANSMISSION".

Is "U0300" detected?

- YES >> Turn OFF the ignition switch to check the other control units in the same method.
NO >> Since the removed control unit may be out of specifications, check the part number and specifications.

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

U1000 CAN COMM CIRCUIT

Description

INFOID:0000000012167498

CAN (Controller Area Network) is a serial communication line for real-time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independently). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:0000000012167499

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
U1000	CAN Communication Line	TCM cannot transmit or receive CAN communication signals continuously for 2 seconds or more when the ignition switch is ON.	<ul style="list-style-type: none">• Harness or connectors (CAN communication line is open or shorted.)• TCM

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Run engine for at least 2 consecutive seconds at idle speed.
3. Perform "Self Diagnostic Results" in "TRANSMISSION".

Is "U1000" detected?

- YES >> Go to [TM-71, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000012167500

Go to [LAN-18, "Trouble Diagnosis Flow Chart"](#).

P0615 STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0615 STARTER RELAY

Description

INFOID:000000012167501

TCM prohibits cranking other than at "P" or "N" position.

DTC Logic

INFOID:000000012167502

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0615	Starter Relay Circuit	The starter monitor value is OFF when the ignition switch is ON at the "P" and "N" positions.	<ul style="list-style-type: none"> • Harness or connectors (Starter relay and TCM circuit is open or shorted.) • Starter relay circuit

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Shift the selector lever to "P" and "N" positions.
2. Turn ignition switch ON and wait 2 seconds or more.
3. Perform "Self Diagnostic Results" in "TRANSMISSION".

Is "P0615" detected?

- YES >> Go to [TM-72, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000012167503

1. CHECK STARTER RELAY SIGNAL

1. Turn ignition switch ON.
2. Check voltage between IPDM E/R connector terminal and ground.

IPDM E/R connector		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
E5	30	Ground	Selector lever in "P" and "N" positions.	Battery voltage
			Selector lever in other positions.	0 V

Is the inspection result normal?

- YES >> Check starter relay circuit. Refer to [STR-11, "Wiring Diagram - STARTING SYSTEM -"](#).
 NO >> GO TO 2.

2. CHECK HARNESS BETWEEN A/T ASSEMBLY AND IPDM E/R (PART 1)

1. Turn ignition switch OFF.
2. Disconnect joint connector and IPDM E/R connector.
3. Check the continuity between A/T assembly vehicle side harness connector terminal and IPDM E/R vehicle side harness connector terminal.

P0615 STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

A/T assembly vehicle side harness connector		IPDM E/R vehicle side harness connector		Continuity
Connector	Terminal	Connector	Terminal	
F51	9	E5	30	Existed

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace damaged parts.

3. CHECK HARNESS BETWEEN A/T ASSEMBLY AND IPDM E/R (PART 2)

Check the continuity between A/T assembly vehicle side harness connector terminal and ground.

A/T assembly vehicle side harness connector		Ground	Continuity
Connector	Terminal		
F51	9		Not existed

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair or replace damaged parts.

4. CHECK JOINT CONNECTOR

1. Remove joint connector. Refer to [TM-186, "Removal and Installation"](#).
2. Check the continuity between joint connector terminals.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal	Terminal	
9	9	Existed

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair or replace damaged parts.

5. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).
- NO >> Repair or replace damaged parts.

P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0705 TRANSMISSION RANGE SENSOR A

Description

INFOID:000000012167504

- The transmission range switch incorporates four contact switches. Each contact switch transmits an ON/OFF signal to the TCM.
- The TCM judges a select lever position from a combination of ON/OFF signals transmitted from each contact switch.

Select lever position	Transmission range switch			
	SW1	SW2	SW3	SW4
P	OFF	OFF	OFF	OFF
R	ON	OFF	OFF	ON
N	ON	ON	OFF	OFF
D and M	ON	ON	ON	ON

DTC Logic

INFOID:000000012167505

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0705	Transmission Range Sensor A Circuit (PRNDL Input)	The TCM detects an ON/OFF combination pattern other than that of the transmission range switches 1, 2, 3 and 4.	<ul style="list-style-type: none">• Harness or connectors (Transmission range switches 1, 2, 3, 4 and TCM circuit is open or shorted.)• Transmission range switches 1, 2, 3 and 4

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "ACCELE POSI" and "VHCL/S SE-A/T" in "Data Monitor" in "TRANSMISSION".
3. Shift the selector lever throughout the entire shift position from "P" to "D". (Hold the selector lever at each position for 2 seconds or more)
4. Drive vehicle and maintain the following conditions for 2 seconds or more.

ACCELE POSI : More than 1.0/8

VHCL/S SE-A/T : 10 km/h (7 MPH) or more

5. Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

Follow the procedure "With CONSULT".

Is "P0705" detected?

- YES >> Go to [TM-74, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000012167506

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

P0705 TRANSMISSION RANGE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

Is the inspection result normal?

YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

P0710 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0710 TRANSMISSION FLUID TEMPERATURE SENSOR A

Description

INFOID:000000012167507

The A/T fluid temperature sensor detects the A/T fluid temperature and transmits a signal to the TCM.

DTC Logic

INFOID:000000012167508

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0710	Transmission Fluid Temperature Sensor A Circuit	TCM judges that the A/T fluid temperature is -40°C (-40°F) or less continuously for 5 seconds while driving at 10 km/h (7 MPH) or more.	<ul style="list-style-type: none">• Harness or connectors (Sensor circuit is open.)• A/T fluid temperature sensor
		TCM judges that the A/T fluid temperature is 180°C (356°F) or more continuously for 5 seconds while driving at 10 km/h (7 MPH) or more.	<ul style="list-style-type: none">• Harness or connectors (Sensor circuit is short.)• A/T fluid temperature sensor
		A/T fluid temperature does not rise to 20°C (68°F) after driving for a certain period of time with the TCM-received fluid temperature sensor value between -40°C (-40°F) and 19°C (66°F).	<ul style="list-style-type: none">• Harness or connectors (Sensor circuit is stuck.)• A/T fluid temperature sensor
		The following conditions are maintained for 5 minutes after the completion of engine diagnosis P0111, P0116, and P0196: <ul style="list-style-type: none">• A/T fluid temperature – Engine coolant temperature > 33°C (91.4°F)• A/T fluid temperature – Engine coolant temperature < -19°C (-2.2°F)	A/T fluid temperature sensor

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION (PART 1)

With CONSULT

1. Turn ignition switch ON.
2. Select "VHCL/S SE-A/T" in "Data Monitor" in "TRANSMISSION".
3. Start the engine and maintain the following condition for 10 seconds or more.

VHCL/S SE-A/T : 10 km/h (7 MPH) or more

With GST

Follow the procedure "With CONSULT".

Is "P0710" detected?

- YES >> Go to [TM-77, "Diagnosis Procedure"](#).
- NO >> GO TO 3.

3. CHECK A/T FLUID TEMPERATURE SENSOR FUNCTION

With CONSULT

1. Turn ignition switch OFF and cool the engine.
2. Turn ignition switch ON.

CAUTION:

P0710 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

Never start the engine.

3. Select "ATF TEMP 1" in "Data Monitor" in "TRANSMISSION".
4. Select "COOLANT TEMP/S" in "Data Monitor" in "ENGINE".
5. Check temperature difference between A/T fluid and engine coolant.

With GST

1. Complete engine diagnoses P0111, P0116, and P0196.
2. After starting the engine start, run the engine at idle for 5 minutes.
3. Check the DTC.

Is the temperature calculated by subtracting engine coolant temperature from A/T fluid temperature more than 33°C (91.4°F) or is it less than -19°C (-2.2°F)? (With CONSULT)/Is "P0710" detected? (With GST)

YES >> Go to [TM-77. "Diagnosis Procedure"](#).

NO-1 [With CONSULT: "ATF TEMP 1" is 20°C (68°F) or more]>>INSPECTION END

NO-2 [With CONSULT: "ATF TEMP 1" is 19°C (66°F) or less]>>GO TO 4.

NO-3 (With GST)>>GO TO 4.

4.CHECK DTC DETECTION (PART 2)

With CONSULT

1. Select "SLCT LVR POSI", "VHCL/S SE-A/T", "ACCELE POSI", "ATF TEMP 1" in "Data Monitor" in "TRANSMISSION".
2. Record A/T fluid temperature.
3. Start the engine and wait for at least 3 minutes.
4. Drive the vehicle for the total minutes specified in the Driving time column below with the following conditions satisfied.

SLCT LVR POSI	: D
VHCL/S SE-A/T	: 10 km/h (7 MPH) or more
ACCELE POSI	: 0.5/8 or more

A/T fluid temperature before engine start	Driving time
-40°C (-40°F) – -31°C (-23.8°F)	21 minutes or more
-30°C (-22°F) – -21°C (-5.8°F)	18 minutes or more
-20°C (-4°F) – -11°C (12.2°F)	15 minutes or more
-10°C (14°F) – -1°C (30.2°F)	12 minutes or more
0°C (32°F) – 9°C (48.2°F)	9 minutes or more
10°C (50°F) – 19°C (66.2°F)	6 minutes or more

5. Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

1. Turn ignition switch OFF and cool the engine.
2. Start the engine and wait for at least 3 minutes.
3. Drive the vehicle and maintain the following conditions for 21 minutes or more.

Selector lever	: D position
Vehicle speed	: 10 km/h (7 MPH) or more
Accelerator pedal opening	: 0.5/8 or more

4. Check the DTC.

Is "P0710" detected?

YES >> Go to [TM-77. "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000012167509

1.CHECK INTERMITTENT INCIDENT

Refer to [GI-42. "Intermittent Incident"](#).

Is the inspection result normal?

P0710 TRANSMISSION FLUID TEMPERATURE SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

- YES >> Replace control valve & TCM. Refer to [TM-186. "Removal and Installation"](#).
- NO >> Repair or replace damaged parts.

P0717 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0717 INPUT SPEED SENSOR A

Description

INFOID:0000000012167510

The input speed sensor detects input shaft rpm (revolutions per minute). It is located on the input side of the A/T. Monitors revolution of sensor 1 and sensor 2 for non-standard conditions.

DTC Logic

INFOID:0000000012167511

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0717	Input/Turbine Speed Sensor A Circuit No Signal	The revolution of input speed sensor 1 and/or 2 is 270 rpm or less.	<ul style="list-style-type: none"> • Harness or connectors (Sensor circuit is open.) • Input speed sensor 1 and/or 2

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "SLCT LVR POSI", "GEAR", "VHCL/S SE-A/T", "CLSD THL POS" and "ENGINE SPEED" in "Data Monitor" in "TRANSMISSION".
3. Drive vehicle and maintain the following conditions for 5 seconds or more.

CAUTION:

Keep the same gear position.

NOTE:

Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

SLCT LVR POSI	: D
GEAR	: 2nd, 3rd, 4th, 5th or 6th
VHCL/S SE-A/T	: More than 40 km/h (25 MPH)
CLSD THL POS	: OFF
ENGINE SPEED	: More than 1,500 rpm

4. Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

Follow the procedure "With CONSULT".

Is "P0717" detected?

- YES >> Go to [TM-79, "Diagnosis Procedure"](#).
- NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000012167512

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).

P0717 INPUT SPEED SENSOR A

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

NO >> Repair or replace damaged parts.

P0720 OUTPUT SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0720 OUTPUT SPEED SENSOR

Description

INFOID:0000000012167513

The output speed sensor detects the revolution of the parking gear and emits a pulse signal. The pulse signal is transmitted to the TCM which converts it into vehicle speed.

DTC Logic

INFOID:0000000012167514

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0720	Output Speed Sensor Circuit	<ul style="list-style-type: none"> The vehicle speed detected by the output speed sensor is 5 km/h (3 MPH) or less when the vehicle speed transmitted from the unified meter and A/C amp. to TCM is 20 km/h (12 MPH) or more. (Only when starts after the ignition switch is turned ON.) The vehicle speed transmitted from the unified meter and A/C amp. to TCM does not decrease despite the 36 km/h (23 MPH) or more of deceleration in vehicle speed detected by the output speed sensor. when the vehicle speed detected by the output speed sensor is 36 km/h (23 MPH) or more and the vehicle speed transmitted from the unified meter and A/C amp. to TCM is 24 km/h (15 MPH) or more. 	<ul style="list-style-type: none"> Harness or connectors (Sensor circuit is open.) Output speed sensor

DTC CONFIRMATION PROCEDURE

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

- Start the engine.
- Select "ESTM VSP SIG" in "Data Monitor" in "TRANSMISSION".
- Drive vehicle and maintain the following conditions for 60 seconds or more.

ESTM VSP SIG : 40 km/h (25 MPH) or more

- Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

Follow the procedure "With CONSULT".

Is "P0720" detected?

- YES >> Go to [TM-82. "Diagnosis Procedure"](#).
- NO >> INSPECTION END

P0720 OUTPUT SPEED SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

Diagnosis Procedure

INFOID:000000012167515

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2. REPLACE OUTPUT SPEED SENSOR AND CHECK DTC

1. Replace output speed sensor. Refer to [TM-199, "2WD : Exploded View"](#) (2WD) or [TM-217, "Exploded View"](#) (AWD).

2. Perform "DTC CONFIRMATION PROCEDURE". Refer to [TM-81, "DTC Logic"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).

P0725 ENGINE SPEED

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0725 ENGINE SPEED

Description

INFOID:0000000012167516

The engine speed signal is transmitted from the ECM to the TCM with CAN communication line.

DTC Logic

INFOID:0000000012167517

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0725	Engine Speed Input Circuit	<ul style="list-style-type: none"> TCM does not receive the CAN communication signal from the ECM. The engine speed is more less 150 rpm even if the vehicle speed is more than 10 km/h (7 MPH). 	Harness or connectors (ECM to TCM circuit is open or shorted.)

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

- Start the engine.
- Select "SLCT LVR POSI" and "VHCL/S SE-A/T" in "Data Monitor" in "TRANSMISSION".
- Drive vehicle and maintain the following conditions for 5 seconds or more.

SLCT LVR POSI : D

VHCL/S SE-A/T : More than 10km/h (7 MPH)

- Perform "Self Diagnostic Results" in "TRANSMISSION".

Is "P0725" detected?

YES >> Go to [TM-83, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000012167518

1. CHECK DTC OF ECM

With CONSULT

- Turn ignition switch ON.
- Perform "Self Diagnostic Results" in "ENGINE".

Is any DTC detected?

YES >> Check DTC detected item. Refer to [EC-580, "DTC Index"](#).

NO >> GO TO 2.

2. CHECK DTC OF TCM

With CONSULT

Perform "Self Diagnostic Results" in "TRANSMISSION".

Is any DTC other than "P0725" detected?

YES >> Check DTC detected item. Refer to [TM-157, "DTC Index"](#).

NO >> GO TO 3.

P0725 ENGINE SPEED

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

3. CHECK INTERMITTENT INCIDENT

Refer to [GI-42. "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace control valve & TCM. Refer to [TM-186. "Removal and Installation"](#).
- NO >> Repair or replace damaged parts.

P0729 6GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0729 6GR INCORRECT RATIO

Description

INFOID:0000000012167519

This malfunction is detected when the A/T does not shift into 6GR position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:0000000012167520

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0729	Gear 6 Incorrect Ratio	The gear ratio is: • 0.914 or more • 0.810 or less	<ul style="list-style-type: none"> • Input clutch solenoid valve • Direct clutch solenoid valve • High and low reverse clutch solenoid valve • Front brake solenoid valve • Low brake solenoid valve • 2346 brake solenoid valve • Anti-interlock solenoid valve • Each clutch and brake • Output speed sensor • Input speed sensor 1, 2 • Hydraulic control circuit

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-86, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PRECONDITIONING

If “DTC CONFIRMATION PROCEDURE” is previously conducted, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

>> GO TO 2.

2. CHECK ATF TEMPERATURE

With CONSULT

1. Start the engine.
2. Select “ATF TEMP 1” in “Data Monitor” in “TRANSMISSION”.
3. Check ATF temperature is in the following range.

ATF TEMP 1 : 20°C (68°F) – 140°C (284°F)

With GST

1. Start the engine.
2. Drive vehicle for approximately 5 minutes in urban areas.

Is ATF temperature within specified range?

YES >> GO TO 3.

NO >> Drive vehicle to warm ATF or stop engine to cool ATF.

3. CHECK SYMPTOM (PART 1)

With CONSULT

1. Select “6TH GR FNCTN P0729” in “DTC Work Support” in “TRANSMISSION”.
2. Drive vehicle with manual mode and maintain the following conditions.

P0729 6GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

GEAR : 6th
ACCELE POSI : 0.7/8 or more
VEHICLE SPEED : 10 km/h (7 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from "OUT OF CONDITION" to "TESTING".

CAUTION:

When "TESTING" is not indicated on CONSULT for a long time, check "Self Diagnostic Results" in "TRANSMISSION". When a DTC other than "P0729" is detected, check the DTC. Refer to [TM-157, "DTC Index"](#).

 **With GST**

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever : "M" position
Gear position : 6th
Accelerator pedal opening : 0.7/8 or more
Vehicle speed : 10 km/h (7 MPH) or more

2. Check DTC.

Is "OUT OF CONDITION", "STOP VEHICLE" or "COMPLETED RESULT NG" displayed? / Is "P0729" detected?

YES-1 (OUT OF CONDITION)>>Perform "Step 3" again.
YES-2 (STOP VEHICLE)>>GO TO 4.
YES-3 (COMPLETED RESULT NG)>>Go to [TM-86, "Diagnosis Procedure"](#).
YES-4 ("P0729" is detected)>>Go to [TM-86, "Diagnosis Procedure"](#).
NO >> GO TO 4.

4.CHECK SYMPTOM (PART 2)

1. Stop vehicle.
2. Drive vehicle in "D" position allowing it to shift from 1GR to 7GR and check shift timing and shift shock.

>> INSPECTION END

Diagnosis Procedure

INFOID:000000012167521

1.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.DETECT MALFUNCTIONING ITEM

Disassemble the A/T assembly to check component parts. Refer to [TM-232, "Disassembly"](#).

NOTE:

Check the component parts, referring to "Possible cause" in "DTC DETECTION LOGIC". Refer to [TM-85, "DTC Logic"](#).

Is the inspection result normal?

YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).
NO >> Repair or replace damaged parts.

P0730 INCORRECT GEAR RATIO

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0730 INCORRECT GEAR RATIO

Description

INFOID:0000000012167522

- TCM detects a high-rpm state of the under drive sun gear.
- The number of revolutions of the under drive sun gear is calculated with the input speed sensor 1 and 2.

DTC Logic

INFOID:0000000012167523

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0730	Incorrect Gear Ratio	The revolution of under drive sun gear is 8,000 rpm or more. NOTE: Not detected when in "P" or "N" position and during a shift to "P" or "N" position.	<ul style="list-style-type: none"> • 2346 brake solenoid valve • Front brake solenoid valve • Input speed sensor 2

DTC CONFIRMATION PROCEDURE

CAUTION:

- **"TM-87, "Diagnosis Procedure" must be performed before starting "DTC CONFIRMATION PROCEDURE".**
- **Never perform "DTC CONFIRMATION PROCEDURE" before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "Self Diagnostic Results" in "ENGINE".
3. Drive vehicle under the similar conditions to (1st trip) Freeze Frame Data for 10 minutes. Refer to the table below.
Hold the accelerator pedal as steady as possible.

ENGINE SPEED	Same value as the Freeze Frame Data.
VEHICLE SPEED	Same value as the Freeze Frame Data.
B/FUEL SCHDL	Same value as the Freeze Frame Data.

With GST

Follow the procedure "With CONSULT".

Is "P0730" detected?

- YES >> Go to [TM-87, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000012167524

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace damaged parts.

P0730 INCORRECT GEAR RATIO

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

2. DETECT MALFUNCTIONING ITEM

Disassemble the A/T assembly to check component parts. Refer to [TM-232, "Disassembly"](#).

NOTE:

Check the component parts, referring to "Possible cause" in "DTC DETECTION LOGIC". Refer to [TM-87, "DTC Logic"](#).

Is the inspection result normal?

- YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).
- NO >> Repair or replace damaged parts.

P0731 1GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0731 1GR INCORRECT RATIO

Description

INFOID:000000012167525

This malfunction is detected when the A/T does not shift into 1GR position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:000000012167526

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0731	Gear 1 Incorrect Ratio	The gear ratio is: • 5.219 or more • 4.629 or less	<ul style="list-style-type: none"> • Input clutch solenoid valve • Direct clutch solenoid valve • High and low reverse clutch solenoid valve • Front brake solenoid valve • Low brake solenoid valve • 2346 brake solenoid valve • Anti-interlock solenoid valve • Each clutch and brake • Output speed sensor • Input speed sensor 1, 2 • Hydraulic control circuit

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-90, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PRECONDITIONING

If “DTC CONFIRMATION PROCEDURE” is previously conducted, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

>> GO TO 2.

2. CHECK ATF TEMPERATURE

With CONSULT

1. Start the engine.
2. Select “ATF TEMP 1” in “Data Monitor” in “TRANSMISSION”.
3. Check ATF temperature is in the following range.

ATF TEMP 1 : 20°C (68°F) – 140°C (284°F)

With GST

1. Start the engine.
2. Drive vehicle for approximately 5 minutes in urban areas.

Is ATF temperature within specified range?

YES >> GO TO 3.

NO >> Drive vehicle to warm ATF or stop engine to cool ATF.

3. CHECK SYMPTOM (PART 1)

With CONSULT

1. Select “1ST GR FNCTN P0731” in “DTC & SRT confirmation” in “TRANSMISSION”.
2. Drive vehicle with manual mode and maintain the following conditions.

P0731 1GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

GEAR : 1st
ACCELE POSI : 0.7/8 or more
VEHICLE SPEED : 10 km/h (7 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from "OUT OF CONDITION" to "TESTING".

CAUTION:

When "TESTING" is not indicated on CONSULT for a long time, check "Self Diagnostic Results" in "TRANSMISSION". When a DTC other than "P0731" is detected, check the DTC. Refer to [TM-157, "DTC Index"](#).

 **With GST**

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever : "M" position
Gear position : 1st
Accelerator pedal opening : 0.7/8 or more
Vehicle speed : 10 km/h (7 MPH) or more

2. Check DTC.

Is "OUT OF CONDITION", "STOP VEHICLE" or "COMPLETED RESULT NG" displayed? / Is "P0731" detected?

YES-1 (OUT OF CONDITION)>>Perform "Step 3" again.

YES-2 (STOP VEHICLE)>>GO TO 4.

YES-3 (COMPLETED RESULT NG)>>Go to [TM-90, "Diagnosis Procedure"](#).

YES-4 ("P0731" is detected)>>Go to [TM-90, "Diagnosis Procedure"](#).

NO >> GO TO 4.

4.CHECK SYMPTOM (PART 2)

1. Stop vehicle.
2. Drive vehicle in "D" position allowing it to shift from 1GR to 7GR and check shift timing and shift shock.

>> INSPECTION END

Diagnosis Procedure

INFOID:000000012167527

1.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2.DETECT MALFUNCTIONING ITEM

Disassemble the A/T assembly to check component parts. Refer to [TM-232, "Disassembly"](#).

NOTE:

Check the component parts, referring to "Possible cause" in "DTC DETECTION LOGIC". Refer to [TM-89, "DTC Logic"](#).

Is the inspection result normal?

YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

P0732 2GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0732 2GR INCORRECT RATIO

Description

INFOID:0000000012167528

This malfunction is detected when the A/T does not shift into 2GR position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:0000000012167529

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0732	Gear 2 Incorrect Ratio	The gear ratio is: • 3.385 or more • 3.003 or less	<ul style="list-style-type: none"> • Input clutch solenoid valve • Direct clutch solenoid valve • High and low reverse clutch solenoid valve • Front brake solenoid valve • Low brake solenoid valve • 2346 brake solenoid valve • Anti-interlock solenoid valve • Each clutch and brake • Output speed sensor • Input speed sensor 1, 2 • Hydraulic control circuit

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-92, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PRECONDITIONING

If “DTC CONFIRMATION PROCEDURE” is previously conducted, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

>> GO TO 2.

2. CHECK ATF TEMPERATURE

With CONSULT

1. Start the engine.
2. Select “ATF TEMP 1” in “Data Monitor” in “TRANSMISSION”.
3. Check ATF temperature is in the following range.

ATF TEMP 1 : 20°C (68°F) – 140°C (284°F)

With GST

1. Start the engine.
2. Drive vehicle for approximately 5 minutes in urban areas.

Is ATF temperature within specified range?

YES >> GO TO 3.

NO >> Drive vehicle to warm ATF or stop engine to cool ATF.

3. CHECK SYMPTOM (PART 1)

With CONSULT

1. Select “2ND GR FNCTN P0732” in “DTC & SRT confirmation” in “TRANSMISSION”.
2. Drive vehicle with manual mode and maintain the following conditions.

P0732 2GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

GEAR : 2nd
ACCELE POSI : 0.7/8 or more
VEHICLE SPEED : 10 km/h (7 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from "OUT OF CONDITION" to "TESTING".

CAUTION:

When "TESTING" is not indicated on CONSULT for a long time, check "Self Diagnostic Results" in "TRANSMISSION". When a DTC other than "P0732" is detected, check the DTC. Refer to [TM-157, "DTC Index"](#).

 **With GST**

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever : "M" position
Gear position : 2nd
Accelerator pedal opening : 0.7/8 or more
Vehicle speed : 10 km/h (7 MPH) or more

2. Check DTC.

Is "OUT OF CONDITION", "STOP VEHICLE" or "COMPLETED RESULT NG" displayed? / Is "P0732" detected?

YES-1 (OUT OF CONDITION)>>Perform "Step 3" again.

YES-2 (STOP VEHICLE)>>GO TO 4.

YES-3 (COMPLETED RESULT NG)>>Go to [TM-92, "Diagnosis Procedure"](#).

YES-4 ("P0732" is detected)>>Go to [TM-92, "Diagnosis Procedure"](#).

NO >> GO TO 4.

4.CHECK SYMPTOM (PART 2)

1. Stop vehicle.
2. Drive vehicle in "D" position allowing it to shift from 1GR to 7GR and check shift timing and shift shock.

>> INSPECTION END

Diagnosis Procedure

INFOID:000000012167530

1.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2.DETECT MALFUNCTIONING ITEM

Disassemble the A/T assembly to check component parts. Refer to [TM-232, "Disassembly"](#).

NOTE:

Check the component parts, referring to "Possible cause" in "DTC DETECTION LOGIC". Refer to [TM-91, "DTC Logic"](#).

Is the inspection result normal?

YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

P0733 3GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0733 3GR INCORRECT RATIO

Description

INFOID:000000012167531

This malfunction is detected when the A/T does not shift into 3GR position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:000000012167532

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0733	Gear 3 Incorrect Ratio	The gear ratio is: • 2.165 or more • 1.921 or less	<ul style="list-style-type: none"> • Input clutch solenoid valve • Direct clutch solenoid valve • High and low reverse clutch solenoid valve • Front brake solenoid valve • Low brake solenoid valve • 2346 brake solenoid valve • Anti-interlock solenoid valve • Each clutch and brake • Output speed sensor • Input speed sensor 1, 2 • Hydraulic control circuit

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-94, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PRECONDITIONING

If “DTC CONFIRMATION PROCEDURE” is previously conducted, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

>> GO TO 2.

2. CHECK ATF TEMPERATURE

With CONSULT

1. Start the engine.
2. Select “ATF TEMP 1” in “Data Monitor” in “TRANSMISSION”.
3. Check ATF temperature is in the following range.

ATF TEMP 1 : 20°C (68°F) – 140°C (284°F)

With GST

1. Start the engine.
2. Drive vehicle for approximately 5 minutes in urban areas.

Is ATF temperature within specified range?

YES >> GO TO 3.

NO >> Drive vehicle to warm ATF or stop engine to cool ATF.

3. CHECK SYMPTOM (PART 1)

With CONSULT

1. Select “3RD GR FNCTN P0733” in “DTC & SRT confirmation” in “TRANSMISSION”.
2. Drive vehicle with manual mode and maintain the following conditions.

P0733 3GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

GEAR : 3rd
ACCELE POSI : 0.7/8 or more
VEHICLE SPEED : 10 km/h (7 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from "OUT OF CONDITION" to "TESTING".

CAUTION:

When "TESTING" is not indicated on CONSULT for a long time, check "Self Diagnostic Results" in "TRANSMISSION". When a DTC other than "P0733" is detected, check the DTC. Refer to [TM-157, "DTC Index"](#).

 **With GST**

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever : "M" position
Gear position : 3rd
Accelerator pedal opening : 0.7/8 or more
Vehicle speed : 10 km/h (7 MPH) or more

2. Check DTC.

Is "OUT OF CONDITION", "STOP VEHICLE" or "COMPLETED RESULT NG" displayed? / Is "P0733" detected?

YES-1 (OUT OF CONDITION)>>Perform "Step 3" again.

YES-2 (STOP VEHICLE)>>GO TO 4.

YES-3 (COMPLETED RESULT NG)>>Go to [TM-94, "Diagnosis Procedure"](#).

YES-4 ("P0733" is detected)>>Go to [TM-94, "Diagnosis Procedure"](#).

NO >> GO TO 4.

4.CHECK SYMPTOM (PART 2)

1. Stop vehicle.
2. Drive vehicle in "D" position allowing it to shift from 1GR to 7GR and check shift timing and shift shock.

>> INSPECTION END

Diagnosis Procedure

INFOID:000000012167533

1.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2.DETECT MALFUNCTIONING ITEM

Disassemble the A/T assembly to check component parts. Refer to [TM-232, "Disassembly"](#).

NOTE:

Check the component parts, referring to "Possible cause" in "DTC DETECTION LOGIC". Refer to [TM-93, "DTC Logic"](#).

Is the inspection result normal?

YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

P0734 4GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0734 4GR INCORRECT RATIO

Description

INFOID:000000012167534

This malfunction is detected when the A/T does not shift into 4GR position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:000000012167535

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0734	Gear 4 Incorrect Ratio	The gear ratio is: • 1.496 or more • 1.328 or less	<ul style="list-style-type: none"> • Input clutch solenoid valve • Direct clutch solenoid valve • High and low reverse clutch solenoid valve • Front brake solenoid valve • Low brake solenoid valve • 2346 brake solenoid valve • Anti-interlock solenoid valve • Each clutch and brake • Output speed sensor • Input speed sensor 1, 2 • Hydraulic control circuit

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-96, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PRECONDITIONING

If “DTC CONFIRMATION PROCEDURE” is previously conducted, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

>> GO TO 2.

2. CHECK ATF TEMPERATURE

With CONSULT

1. Start the engine.
2. Select “ATF TEMP 1” in “Data Monitor” in “TRANSMISSION”.
3. Check ATF temperature is in the following range.

ATF TEMP 1 : 20°C (68°F) – 140°C (284°F)

With GST

1. Start the engine.
2. Drive vehicle for approximately 5 minutes in urban areas.

Is ATF temperature within specified range?

YES >> GO TO 3.

NO >> Drive vehicle to warm ATF or stop engine to cool ATF.

3. CHECK SYMPTOM (PART 1)

With CONSULT

1. Select “4TH GR FNCTN P0734” in “DTC & SRT confirmation” in “TRANSMISSION”.
2. Drive vehicle with manual mode and maintain the following conditions.

P0734 4GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

GEAR : 4th
ACCELE POSI : 0.7/8 or more
VEHICLE SPEED : 10 km/h (7 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from "OUT OF CONDITION" to "TESTING".

CAUTION:

When "TESTING" is not indicated on CONSULT for a long time, check "Self Diagnostic Results" in "TRANSMISSION". When a DTC other than "P0734" is detected, check the DTC. Refer to [TM-157, "DTC Index"](#).

 **With GST**

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever : "M" position
Gear position : 4th
Accelerator pedal opening : 0.7/8 or more
Vehicle speed : 10 km/h (7 MPH) or more

2. Check DTC.

Is "OUT OF CONDITION", "STOP VEHICLE" or "COMPLETED RESULT NG" displayed? / Is "P0734" detected?

YES-1 (OUT OF CONDITION)>>Perform "Step 3" again.
YES-2 (STOP VEHICLE)>>GO TO 4.
YES-3 (COMPLETED RESULT NG)>>Go to [TM-96, "Diagnosis Procedure"](#).
YES-4 ("P0734" is detected)>>Go to [TM-96, "Diagnosis Procedure"](#).
NO >> GO TO 4.

4.CHECK SYMPTOM (PART 2)

1. Stop vehicle.
2. Drive vehicle in "D" position allowing it to shift from 1GR to 7GR and check shift timing and shift shock.

>> INSPECTION END

Diagnosis Procedure

INFOID:000000012167536

1.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> GO TO 2.
NO >> Repair or replace damaged parts.

2.DETECT MALFUNCTIONING ITEM

Disassemble the A/T assembly to check component parts. Refer to [TM-232, "Disassembly"](#).

NOTE:

Check the component parts, referring to "Possible cause" in "DTC DETECTION LOGIC". Refer to [TM-95, "DTC Logic"](#).

Is the inspection result normal?

YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).
NO >> Repair or replace damaged parts.

P0735 5GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0735 5GR INCORRECT RATIO

Description

INFOID:000000012167537

This malfunction is detected when the A/T does not shift into 5GR position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:000000012167538

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0735	Gear 5 Incorrect Circuit	The gear ratio is: <ul style="list-style-type: none">• 1.060 or more• 0.940 or less	<ul style="list-style-type: none">• Input clutch solenoid valve• Direct clutch solenoid valve• High and low reverse clutch solenoid valve• Front brake solenoid valve• Low brake solenoid valve• 2346 brake solenoid valve• Anti-interlock solenoid valve• Each clutch and brake• Output speed sensor• Input speed sensor 1, 2• Hydraulic control circuit

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-98, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PRECONDITIONING

If “DTC CONFIRMATION PROCEDURE” is previously conducted, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

>> GO TO 2.

2. CHECK ATF TEMPERATURE

With CONSULT

1. Start the engine.
2. Select “ATF TEMP 1” in “Data Monitor” in “TRANSMISSION”.
3. Check ATF temperature is in the following range.

ATF TEMP 1 : 20°C (68°F) – 140°C (284°F)

With GST

1. Start the engine.
2. Drive vehicle for approximately 5 minutes in urban areas.

Is ATF temperature within specified range?

YES >> GO TO 3.

NO >> Drive vehicle to warm ATF or stop engine to cool ATF.

3. CHECK SYMPTOM (PART 1)

With CONSULT

1. Select “5TH GR FNCTN P0735” in “DTC & SRT confirmation” in “TRANSMISSION”.
2. Drive vehicle with manual mode and maintain the following conditions.

P0735 5GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

GEAR : 5th
ACCELE POSI : 0.7/8 or more
VEHICLE SPEED : 10 km/h (7 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from "OUT OF CONDITION" to "TESTING".

CAUTION:

When "TESTING" is not indicated on CONSULT for a long time, check "Self Diagnostic Results" in "TRANSMISSION". When a DTC other than "P0735" is detected, check the DTC. Refer to [TM-157, "DTC Index"](#).

 **With GST**

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever : "M" position
Gear position : 5th
Accelerator pedal opening : 0.7/8 or more
Vehicle speed : 10 km/h (7 MPH) or more

2. Check DTC.

Is "OUT OF CONDITION", "STOP VEHICLE" or "COMPLETED RESULT NG" displayed? / Is "P0735" detected?

YES-1 (OUT OF CONDITION)>>Perform "Step 3" again.

YES-2 (STOP VEHICLE)>>GO TO 4.

YES-3 (COMPLETED RESULT NG)>>Go to [TM-98, "Diagnosis Procedure"](#).

YES-4 ("P0735" is detected)>>Go to [TM-98, "Diagnosis Procedure"](#).

NO >> GO TO 4.

4.CHECK SYMPTOM (PART 2)

1. Stop vehicle.
2. Drive vehicle in "D" position allowing it to shift from 1GR to 7GR and check shift timing and shift shock.

>> INSPECTION END

Diagnosis Procedure

INFOID:000000012167539

1.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2.DETECT MALFUNCTIONING ITEM

Disassemble the A/T assembly to check component parts. Refer to [TM-232, "Disassembly"](#).

NOTE:

Check the component parts, referring to "Possible cause" in "DTC DETECTION LOGIC". Refer to [TM-97, "DTC Logic"](#).

Is the inspection result normal?

YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

P0740 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0740 TORQUE CONVERTER

Description

INFOID:000000012167540

- The torque converter clutch solenoid valve is activated, with the gear in D2, D3, D4, D5, D6, D7, M2, M3, M4, M5, M6 and M7 by the TCM in response to signals transmitted from the vehicle speed sensor and accelerator pedal position sensor (throttle position sensor). Torque converter clutch piston operation will then be controlled.
- Lock-up operation, however, is prohibited when A/T fluid temperature is too low.
- When the accelerator pedal is depressed (less than 1.0/8) in lock-up condition, the engine speed should not change abruptly. If there is a big jump in engine speed, there is no lock-up.

DTC Logic

INFOID:000000012167541

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0740	Torque Converter Clutch Circuit/Open	The torque converter clutch solenoid valve monitor value is 0.2 A or less when the torque converter clutch solenoid valve command value is more than 0.75 A.	<ul style="list-style-type: none">• Harness or connectors (Solenoid valve circuit is open or shorted.)• Torque converter clutch solenoid valve

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "BATTERY VOLT", "MANU MODE SW", "GEAR" and "VEHICLE SPEED" in "Data Monitor" in "TRANSMISSION".
3. Drive vehicle and maintain the following conditions for 30 seconds or more.

NOTE:

Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

BATTERY VOLT : 9 V or more
MANU MODE SW : ON
GEAR : 2nd
VEHICLE SPEED : 40 km/h (25 MPH) or more

4. Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

Follow the procedure "With CONSULT".

Is "P0740" detected?

YES >> Go to [TM-99, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000012167542

1. CHECK INTERMITTENT INCIDENT

P0740 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

Refer to [GI-42. "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace control valve & TCM. Refer to [TM-186. "Removal and Installation"](#).
- NO >> Repair or replace damaged parts.

P0744 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0744 TORQUE CONVERTER

Description

INFOID:000000012167543

This malfunction is detected when the A/T does not lock-up. This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:000000012167544

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0744	Torque Converter Clutch Circuit Intermittent	The lock-up is not performed in spite of within the lock-up area.	<ul style="list-style-type: none"> • Harness or connectors • Torque converter clutch solenoid valve • Torque converter • Input speed sensor 1, 2 • Hydraulic control circuit

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "MANU MODE SW", "GEAR" and "VEHICLE SPEED" in "Data Monitor" in "TRANSMISSION".
3. Drive vehicle and maintain the following conditions for 10 seconds or more.

NOTE:

Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

MANU MODE SW : ON

GEAR : 2nd

VEHICLE SPEED : 40 km/h (25 MPH) or more

4. Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

Follow the procedure "With CONSULT".

Is "P0744" detected?

YES >> Go to [TM-101, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000012167545

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2. DETECT MALFUNCTIONING ITEM

P0744 TORQUE CONVERTER

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

Disassemble the A/T assembly to check component parts. Refer to [TM-232, "Disassembly"](#).

NOTE:

Check the component parts, referring to "Possible cause" in "DTC DETECTION LOGIC". Refer to [TM-101, "DTC Logic"](#).

Is the inspection result normal?

YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

P0745 PRESSURE CONTROL SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0745 PRESSURE CONTROL SOLENOID A

Description

INFOID:000000012167546

The line pressure solenoid valve regulates the oil pump discharge pressure to suit the driving condition in response to a signal transmitted from the TCM.

DTC Logic

INFOID:000000012167547

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0745	Pressure Control Solenoid A	The line pressure solenoid valve monitor value is 0.2 A or less when the line pressure solenoid valve command value is more than 0.75 A.	<ul style="list-style-type: none"> • Harness or connectors (Solenoid valve circuit is open or shorted.) • Line pressure solenoid valve

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "BATTERY VOLT" and "SLCT LVR POSI" in "Data Monitor" in "TRANSMISSION".
3. Shift the selector lever to "N" position.
4. Maintain the following conditions for 5 seconds or more.

BATTERY VOLT : 9 V or more

SLCT LVR POSI : N/P

5. Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

Follow the procedure "With CONSULT".

Is "P0745" detected?

YES >> Go to [TM-103, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000012167548

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

P0750 SHIFT SOLENOID A

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0750 SHIFT SOLENOID A

Description

INFOID:000000012167549

- Anti-interlock solenoid valve prevents the simultaneous activation of the input clutch and the low brake.
- The anti-interlock solenoid valve is an ON/OFF type solenoid valve.

DTC Logic

INFOID:000000012167550

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0750	Shift Solenoid A	<ul style="list-style-type: none">• The anti-interlock solenoid valve monitor value is ON when the anti-interlock solenoid valve command value is OFF.• The anti-interlock solenoid valve monitor value is OFF when the anti-interlock solenoid valve command value is ON.	<ul style="list-style-type: none">• Harness or connectors (Solenoid valve circuit is open or shorted.)• Anti-interlock solenoid valve

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "BATTERY VOLT", "MANU MODE SW", "GEAR" and "VHCL/S SE-A/T" in "Data Monitor" in "TRANSMISSION".
3. Drive vehicle and maintain the following conditions for 5 seconds or more.

BATTERY VOLT : 9 V or more
MANU MODE SW : ON
GEAR : 1st
VHCL/S SE-A/T : 10 km/h (7 MPH) or more

4. Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

Follow the procedure "With CONSULT".

Is "P0750" detected?

- YES >> Go to [TM-104, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000012167551

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).
NO >> Repair or replace damaged parts.

P0775 PRESSURE CONTROL SOLENOID B

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0775 PRESSURE CONTROL SOLENOID B

Description

INFOID:000000012167552

- The Input clutch solenoid valve is controlled by the TCM in response to signals transmitted from the transmission range switch, output speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- The Input clutch solenoid valve controls the input clutch control valve in response to a signal transmitted from the TCM.

DTC Logic

INFOID:000000012167553

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if..	Possible cause
P0775	Pressure Control Solenoid B	The input clutch solenoid valve monitor value is 0.2 A or less when the input clutch solenoid valve command value is more than 0.75 A.	<ul style="list-style-type: none">• Harness or connectors (Solenoid valve circuit is open or shorted.)• Input clutch solenoid valve

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "BATTERY VOLT", "MANU MODE SW", "GEAR" and "VHCL/S SE-A/T" in "Data Monitor" in "TRANSMISSION".
3. Drive vehicle and maintain the following conditions for 5 seconds or more.

BATTERY VOLT : 9 V or more
MANU MODE SW : ON
GEAR : 1st
VHCL/S SE-A/T : 10 km/h (7 MPH) or more

4. Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

Follow the procedure "With CONSULT".

Is "P0775" detected?

- YES >> Go to [TM-105, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000012167554

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).
NO >> Repair or replace damaged parts.

P0780 SHIFT

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0780 SHIFT

Description

INFOID:000000012167555

The TCM detects the malfunction of low brake solenoid valve. This is not only caused by electrical malfunction (circuits open or shorted) but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:000000012167556

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0780	Shift Error	<ul style="list-style-type: none"> When shifting from 3GR to 4GR with the selector lever in "D" position, the gear ratio does not shift to 1.412 (gear ratio of 4th). When shifting from 5GR to 6GR or 6GR to 7GR, the engine speed exceeds the prescribed speed. 	<ul style="list-style-type: none"> Anti-interlock solenoid valve Low brake solenoid valve Hydraulic control circuit

DTC CONFIRMATION PROCEDURE

CAUTION:

- **"[TM-106, "Diagnosis Procedure"](#)"** must be performed before starting "DTC CONFIRMATION PROCEDURE".
- **Never perform "DTC CONFIRMATION PROCEDURE" before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "SLCT LVR POSI", "ACCELE POSI" and "GEAR" in "Data Monitor" in "TRANSMISSION".
3. Drive vehicle and maintain the following conditions.

SLCT LVR POSI : D
ACCELE POSI : More than 1.0/8
GEAR : 3rd → 4th or 5th → 6th → 7th

4. Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

Follow the procedure "With CONSULT".

Is "P0780" detected?

- YES >> Go to [TM-106, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000012167557

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

P0780 SHIFT

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

- YES >> GO TO 2.
- NO >> Repair or replace damaged parts.

A

2.DETECT MALFUNCTIONING ITEM

Disassemble the A/T assembly to check component parts. Refer to [TM-232, "Disassembly"](#).

B

NOTE:

Check the component parts, referring to "Possible cause" in "DTC DETECTION LOGIC". Refer to [TM-106, "DTC Logic"](#).

C

Is the inspection result normal?

- YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).
- NO >> Repair or replace damaged parts.

TM

E

F

G

H

I

J

K

L

M

N

O

P

P0795 PRESSURE CONTROL SOLENOID C

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P0795 PRESSURE CONTROL SOLENOID C

Description

INFOID:000000012167558

- The front brake solenoid valve is controlled by the TCM in response to signals transmitted from the transmission range switch, output speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- The front brake solenoid valve controls the front brake control valve in response to a signal transmitted from the TCM.

DTC Logic

INFOID:000000012167559

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P0795	Pressure Control Solenoid C	The front brake solenoid valve monitor value is 0.2 A or less when the front brake solenoid valve command value is more than 0.75 A.	<ul style="list-style-type: none">• Harness or connectors (Solenoid valve circuit is open or shorted.)• Front brake solenoid valve

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "BATTERY VOLT", "MANU MODE SW", "GEAR" and "VHCL/S SE-A/T" in "Data Monitor" in "TRANSMISSION".
3. Drive vehicle and maintain the following conditions for 5 seconds or more.

BATTERY VOLT : 9 V or more
MANU MODE SW : ON
GEAR : 7th
VHCL/S SE-A/T : 10 km/h (7 MPH) or more

4. Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

Follow the procedure "With CONSULT".

Is "P0795" detected?

YES >> Go to [TM-108, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000012167560

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).
NO >> Repair or replace damaged parts.

P1705 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P1705 TP SENSOR

Description

INFOID:0000000012167561

- The accelerator pedal position sensor is installed on the upper end of the accelerator pedal assembly.
- The accelerator pedal position sensor detects the accelerator position.
- The accelerator pedal position sensor transform the accelerator pedal position into output voltage, and emit the voltage signal to the ECM.
- The TCM receives accelerator pedal position signal from the ECM via CAN communication.

DTC Logic

INFOID:0000000012167562

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P1705	Accelerator Pedal Position Sensor Signal Circuit	TCM detects the difference between two accelerator pedal position signals received from ECM via CAN communication.	Harness or connectors (Sensor circuit is open or shorted.)

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "SLCT LVR POSI" and "VHCL/S SE-A/T" in "Data Monitor" in "TRANSMISSION".
3. Drive vehicle and maintain the following conditions for 5 seconds or more.

SLCT LVR POSI : D
VHCL/S SE-A/T : 5 km/h (3 MPH) or more

4. Perform "Self Diagnostic Results" in "TRANSMISSION".

Is "P1705" detected?

- YES >> Go to [TM-109, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000012167563

1. CHECK DTC OF ECM

With CONSULT

1. Turn ignition switch ON.
2. Perform "Self Diagnostic Results" in "ENGINE".

Is any DTC detected?

- YES >> Check DTC detected item. Refer to [EC-580, "DTC Index"](#).
NO >> GO TO 2.

2. CHECK DTC OF TCM

With CONSULT

Perform "Self Diagnostic Results" in "TRANSMISSION".

Is any DTC other than "P1705" detected?

- YES >> Check DTC detected item. Refer to [TM-157, "DTC Index"](#).
NO >> GO TO 3.

P1705 TP SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

3. CHECK INTERMITTENT INCIDENT

Refer to [GI-42. "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace control valve & TCM. Refer to [TM-186. "Removal and Installation"](#).
- NO >> Repair or replace damaged parts.

P1721 VEHICLE SPEED SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P1721 VEHICLE SPEED SIGNAL

Description

INFOID:0000000012167564

The vehicle speed signal is transmitted from unified meter and A/C amp. to TCM by CAN communication line. The signal functions as an auxiliary device to the output speed sensor when it is malfunctioning. The TCM will then use the vehicle speed signal.

DTC Logic

INFOID:0000000012167565

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P1721	Vehicle Speed Signal Circuit	<ul style="list-style-type: none"> The vehicle speed transmitted from the unified meter and A/C amp. to TCM is 5 km/h (3 MPH) or less when the vehicle speed detected by the output speed sensor is 20 km/h (12 MPH) or more. (Only when starts after the ignition switch is turned ON.) The vehicle speed detected by the output speed sensor does not decrease despite the 36 km/h (23 MPH) or more of deceleration in vehicle speed received from the unified meter and A/C amp. when the vehicle speed transmitted from the unified meter and A/C amp. to TCM is 36 km/h (23 MPH) or more and the vehicle speed detected by the output speed sensor is 24 km/h (15 MPH) or more. 	Harness or connectors (Sensor circuit is open or shorted.)

DTC CONFIRMATION PROCEDURE

CAUTION:

- Always drive vehicle at a safe speed.
- Be careful not to rev engine into the red zone on the tachometer.

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "VHCL/S SE-A/T" in "Data Monitor" in "TRANSMISSION".
3. Drive vehicle and maintain the following conditions for 60 seconds or more.

VHCL/S SE-A/T : 40 km/h (25 MPH) or more

4. Perform "Self Diagnostic Results" in "TRANSMISSION".

Is "P1721" detected?

- YES >> Go to [TM-112, "Diagnosis Procedure"](#).
 NO >> INSPECTION END

P1721 VEHICLE SPEED SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

Diagnosis Procedure

INFOID:000000012167566

1. CHECK DTC OF UNIFIED METER AND A/C AMP.

④ With CONSULT

Perform "Self Diagnostic Results" in "METER/M&A".

Is any DTC detected?

YES >> Check DTC detected item. Refer to [MWI-108, "DTC Index"](#).

NO >> GO TO 2.

2. CHECK DTC OF TCM

④ With CONSULT

Perform "Self Diagnostic Results" in "TRANSMISSION".

Is any DTC other than "P1721" detected?

YES >> Check DTC detected item. Refer to [TM-157, "DTC Index"](#).

NO >> GO TO 3.

3. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

P1730 INTERLOCK

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P1730 INTERLOCK

Description

INFOID:0000000012167567

Fail-safe function to detect interlock conditions.

DTC Logic

INFOID:0000000012167568

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P1730	Interlock	The output speed sensor detects the deceleration of 12 km/h (7 MPH) or more for 1 second.	<ul style="list-style-type: none">• Harness or connectors (Solenoid valve circuit is open or shorted.)• Input clutch solenoid valve• Direct clutch solenoid valve• High and low reverse clutch solenoid valve• Front brake solenoid valve• Low brake solenoid valve• 2346 brake solenoid valve• Anti-interlock solenoid valve• Each clutch• Hydraulic control circuit

NOTE:

When the vehicle is driven fixed in 2GR, an input speed sensor malfunction is displayed, but this is not an input speed sensor malfunction.

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-114, "Diagnosis Procedure"](#)”** must be performed before starting **“DTC CONFIRMATION PROCEDURE”**.
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PRECONDITIONING

If “DTC CONFIRMATION PROCEDURE” has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select “SLCT LVR POSI” and “GEAR” in “Data Monitor” in “TRANSMISSION”.
3. Drive vehicle the following condition.

SLCT LVR POSI : D

GEAR : 1st through 7th

4. Perform “Self Diagnostic Results” in “TRANSMISSION”.

With GST

Follow the procedure “With CONSULT”.

Is “P1730” detected?

YES >> Go to [TM-114, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Judgment of A/T Interlock

INFOID:0000000012167569

Refer to [TM-152, "Fail-Safe"](#).

Diagnosis Procedure

INFOID:000000012167570

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2. DETECT MALFUNCTIONING ITEM

Disassemble the A/T assembly to check component parts. Refer to [TM-232, "Disassembly"](#).

NOTE:

Check the component parts, referring to "Possible cause" in "DTC DETECTION LOGIC". Refer to [TM-113, "DTC Logic"](#).

Is the inspection result normal?

YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

P1734 7GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P1734 7GR INCORRECT RATIO

Description

INFOID:0000000012167571

This malfunction is detected when the A/T does not shift into 7GR position as instructed by TCM. This is not only caused by electrical malfunction (circuits open or shorted) but by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

DTC Logic

INFOID:0000000012167572

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P1734	Gear 7 Incorrect Ratio	The gear ratio is: • 0.818 or more • 0.726 or less	<ul style="list-style-type: none"> • Input clutch solenoid valve • Direct clutch solenoid valve • High and low reverse clutch solenoid valve • Front brake solenoid valve • Low brake solenoid valve • 2346 brake solenoid valve • Anti-interlock solenoid valve • Each clutch and brake • Output speed sensor • Input speed sensor 1, 2 • Hydraulic control circuit

DTC CONFIRMATION PROCEDURE

CAUTION:

- **“[TM-116, "Diagnosis Procedure"](#)” must be performed before starting “DTC CONFIRMATION PROCEDURE”.**
- **Never perform “DTC CONFIRMATION PROCEDURE” before completing the repair, which may cause secondary malfunction.**
- **Always drive vehicle at a safe speed.**

1. PRECONDITIONING

If “DTC CONFIRMATION PROCEDURE” has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK ATF TEMPERATURE

With CONSULT

1. Start the engine.
2. Select “ATF TEMP 1” in “Data Monitor” in “TRANSMISSION”.
3. Check ATF temperature is in the following range.

ATF TEMP 1 : 20°C (68°F) – 140°C (284°F)

With GST

1. Start the engine.
2. Drive vehicle for approximately 5 minutes in urban areas.

Is ATF temperature within specified range?

YES >> GO TO 3.

NO >> Drive vehicle to warm ATF or stop engine to cool ATF.

3. CHECK SYMPTOM (PART 1)

With CONSULT

1. Select “7TH GR FNCTN P1734” in “DTC & SRT confirmation” in “TRANSMISSION”.
2. Drive vehicle with manual mode and maintain the following conditions.

P1734 7GR INCORRECT RATIO

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

GEAR : 7th
ACCELE POSI : 0.7/8 or more
VEHICLE SPEED : 10 km/h (7 MPH) or more

3. Keep the current driving status for 2 seconds or more if CONSULT screen changes from "OUT OF CONDITION" to "TESTING".

CAUTION:

When "TESTING" is not indicated on CONSULT for a long time, check "Self Diagnostic Results" in "TRANSMISSION". When a DTC other than "P1734" is detected, check the DTC. Refer to [TM-157, "DTC Index"](#).

 **With GST**

1. Drive vehicle and maintain the following conditions for 2 seconds or more.

Selector lever : "M" position
Gear position : 7th
Accelerator pedal opening : 0.7/8 or more
Vehicle speed : 10 km/h (7 MPH) or more

2. Check DTC.

Is "OUT OF CONDITION", "STOP VEHICLE" or "COMPLETED RESULT NG" displayed? / Is "P1734" detected?

YES-1 (OUT OF CONDITION)>>Perform "Step 3" again.

YES-2 (STOP VEHICLE)>>GO TO 4.

YES-3 (COMPLETED RESULT NG)>>Go to [TM-116, "Diagnosis Procedure"](#).

YES-4 ("P1734" is detected)>>Go to [TM-116, "Diagnosis Procedure"](#).

NO >> GO TO 4.

4.CHECK SYMPTOM (PART 2)

 **With CONSULT**

1. Stop vehicle.
2. Drive vehicle in "D" position allowing it to shift from 1GR to 7GR and check shift timing and shift shock.

>> INSPECTION END

Diagnosis Procedure

INFOID:000000012167573

1.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace damaged parts.

2.DETECT MALFUNCTIONING ITEM

Disassemble the A/T assembly to check component parts. Refer to [TM-232, "Disassembly"](#).

NOTE:

Check the component parts, referring to "Possible cause" in "DTC DETECTION LOGIC". Refer to [TM-115, "DTC Logic"](#).

Is the inspection result normal?

YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).

NO >> Repair or replace damaged parts.

P1815 M-MODE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P1815 M-MODE SWITCH

Description

INFOID:000000012167574

- The manual mode switch [mode select switch and position select switch (shift-up/shift-down)] is installed in the A/T shift selector assembly.
- The mode select switch detects the position (the main shift gate side or manual shift gate side) of the selector lever and transmits a manual mode signal or a non-manual mode signal to the unified meter and A/C amp. Then, the TCM receives a manual mode signal or non-manual mode signal from the unified meter and A/C amp.
- The position select switch (shift-up) detects that the selector lever is shifted to the shift-up side of the manual shift gate and transmits a manual mode shift up signal to the unified meter and A/C amp. Then, the TCM receives a manual mode shift up signal from the unified meter and A/C amp.
- The position select switch (shift-down) detects that the selector lever is shifted to the shift-down side of the manual shift gate and transmits a manual mode shift down signal to the unified meter and A/C amp. Then, the TCM receives a manual mode shift down signal from the unified meter and A/C amp.

DTC Logic

INFOID:000000012167575

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P1815	Manual Mode Switch Circuit	The TCM receives multiple signals from the manual mode switch or receives no signals for continuously 2 seconds or more.	<ul style="list-style-type: none">• Harness or connectors (These switches circuit is open or shorted.)• Manual mode select switch (Into A/T shift selector)• Manual mode position select switch (Into A/T shift selector)

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Turn ignition switch ON.
2. Select "SLCT LVR POSI" and "MANU MODE SW" in "Data Monitor" in "TRANSMISSION".
3. Maintain the following each conditions more than 2 seconds.

SLCT LVR POSI : D

MANU MODE SW : ON

4. Perform "Self Diagnostic Results" in "TRANSMISSION".

Is "P1815" detected?

YES >> Go to [TM-117, "Diagnosis Procedure"](#).

NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000012167576

1. CHECK MANUAL MODE SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector connector.
3. Turn ignition switch ON.
4. Check voltage between A/T shift selector vehicle side harness connector terminals.

P1815 M-MODE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

A/T shift selector vehicle side harness connector			Voltage (Approx.)
Connector	Terminal		
	+	-	
M137	1	4	Battery voltage
	2		
	3		
	5		

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 3.

2.CHECK MANUAL MODE SWITCH

1. Turn ignition switch OFF.
2. Check manual mode switch. Refer to [TM-119, "Component Inspection \(Manual Mode Switch\)"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace damaged parts.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between A/T shift selector vehicle side harness connector terminal and ground.

A/T shift selector vehicle side harness connector		Ground	Continuity
Connector	Terminal		
M137	4		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace damaged parts.

4.CHECK HARNESS BETWEEN A/T SHIFT SELECTOR AND UNIFIED METER AND A/C AMP. (PART 1)

1. Disconnect unified meter and A/C amp. connector.
2. Check continuity between A/T shift selector vehicle side harness connector terminals and unified meter and A/C amp. vehicle side harness connector terminals.

A/T shift selector vehicle side harness connector		Unified meter and A/C amp. vehicle side harness connector		Continuity
Connector	Terminal	Connector	Terminal	
M137	1	M66	10	Existed
	2		25	
	3		5	
	5		11	

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

5.CHECK HARNESS BETWEEN A/T SHIFT SELECTOR AND UNIFIED METER AND A/C AMP. (STEP 2)

Check continuity between A/T shift selector vehicle side harness connector terminals and ground.

P1815 M-MODE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

A/T shift selector vehicle side harness connector		Ground	Continuity
Connector	Terminal		
M137	1	Ground	Not existed
	2		
	3		
	5		

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair or replace damaged parts.

6.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> GO TO 7.
- NO >> Repair or replace damaged parts.

7.CHECK UNIFIED METER AND A/C AMP.

1. Reconnect all the connectors.
2. Turn ignition switch ON.
3. Select "M RANGE SW", "NM RANGE SW", "AT SFT UP SW" and "AT SFT DWN SW" in "Data Monitor" in "METER/M&A".
4. Check the ON/OFF operations of each monitor item. Refer to [MWI-87, "Reference Value"](#).

Is the inspection result normal?

- YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).
- NO >> Replace unified meter and A/C amp. Refer to [MWI-137, "Removal and Installation"](#).

Component Inspection (Manual Mode Switch)

INFOID:0000000012167577

1.CHECK MANUAL MODE SWITCH

Check continuity between A/T shift selector connector terminals.

A/T shift selector connector		Condition	Continuity
Terminal			
1	4	Selector lever is shifted to manual shift gate side	Existed
		Other than the above	Not existed
2		Selector lever is shifted to - side	Existed
		Other than the above	Not existed
3		Selector lever is shifted to + side	Existed
		Other than the above	Not existed
5		Selector lever is shifted to manual shift gate side	Not existed
		Other than the above	Existed

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Repair or replace damaged parts. Refer to [TM-183, "Removal and Installation"](#).

P2713 PRESSURE CONTROL SOLENOID D

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P2713 PRESSURE CONTROL SOLENOID D

Description

INFOID:0000000012167578

- The high and low reverse clutch solenoid valve is controlled by the TCM in response to signals transmitted from the transmission range switch, output speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- The high and low reverse clutch solenoid valve controls the high and low reverse clutch control valve in response to a signal transmitted from the TCM.

DTC Logic

INFOID:0000000012167579

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P2713	Pressure Control Solenoid D	The high and low reverse clutch solenoid valve monitor value is 0.2 A or less when the high and low reverse clutch solenoid valve command value is more than 0.75 A.	<ul style="list-style-type: none">• Harness or connectors (Solenoid valve circuit is open or shorted.)• High and low reverse clutch solenoid valve

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "BATTERY VOLT", "MANU MODE SW", "GEAR" and "VHCL/S SE-A/T" in "Data Monitor" in "TRANSMISSION".
3. Drive the vehicle and maintain the following conditions for 5 seconds or more.

BATTERY VOLT : 9 V or more
MANU MODE SW : ON
GEAR : 3rd
VHCL/S SE-A/T : 10 km/h (7 MPH) or more

4. Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

Follow the procedure "With CONSULT".

Is "P2173" detected?

- YES >> Go to [TM-120, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000012167580

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).
NO >> Repair or replace damaged parts.

P2722 PRESSURE CONTROL SOLENOID E

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P2722 PRESSURE CONTROL SOLENOID E

Description

INFOID:000000012167581

- The low brake solenoid valve is controlled by the TCM in response to signals transmitted from the transmission range switch, output speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- The low brake solenoid valve controls the low brake control valve in response to a signal transmitted from the TCM.

DTC Logic

INFOID:000000012167582

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if..	Possible cause
P2722	Pressure Control Solenoid E	The low brake solenoid valve monitor value is 0.2 A or less when the low brake solenoid valve command value is more than 0.75 A.	<ul style="list-style-type: none">• Harness or connectors (Solenoid valve circuit is open or shorted.)• Low brake solenoid valve

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "BATTERY VOLT", "MANU MODE SW", "GEAR" and "VHCL/S SE-A/T" in "Data Monitor" in "TRANSMISSION".
3. Drive vehicle and maintain the following conditions for 5 seconds or more.

BATTERY VOLT : 9 V or more
MANU MODE SW : ON
GEAR : 1st
VHCL/S SE-A/T : 10 km/h (7 MPH) or more

4. Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

Follow the procedure "With CONSULT".

Is "P2722" detected?

- YES >> Go to [TM-121, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000012167583

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).
NO >> Repair or replace damaged parts.

P2731 PRESSURE CONTROL SOLENOID F

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P2731 PRESSURE CONTROL SOLENOID F

Description

INFOID:000000012167584

- The 2346 brake solenoid valve is controlled by the TCM in response to signals transmitted from the transmission range switch, output speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- The 2346 brake solenoid valve controls the 2346 brake control valve in response to a signal transmitted from the TCM.

DTC Logic

INFOID:000000012167585

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected if...	Possible cause
P2731	Pressure Control Solenoid F	The 2346 brake solenoid valve monitor value is 0.2 A or less when the 2346 brake solenoid valve command value is more than 0.75 A.	<ul style="list-style-type: none">• Harness or connectors (Solenoid valve circuit is open or shorted.)• 2346 brake solenoid valve

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "BATTERY VOLT", "MANU MODE SW", "GEAR" and "VHCL/S SE-A/T" in "Data Monitor" in "TRANSMISSION".
3. Drive vehicle and maintain the following conditions for 5 seconds or more.

BATTERY VOLT : 9 V or more
MANU MODE SW : ON
GEAR : 2nd
VHCL/S SE-A/T : 10 km/h (7 MPH) or more

4. Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

Follow the procedure "With CONSULT".

Is "P2731" detected?

- YES >> Go to [TM-122, "Diagnosis Procedure"](#).
NO >> INSPECTION END.

Diagnosis Procedure

INFOID:000000012167586

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).
NO >> Repair or replace damaged parts.

P2807 PRESSURE CONTROL SOLENOID G

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

P2807 PRESSURE CONTROL SOLENOID G

Description

INFOID:0000000012167587

- The direct clutch solenoid valve is controlled by the TCM in response to signals transmitted from the transmission range switch, output speed sensor and accelerator pedal position sensor (throttle position sensor). Gears will then be shifted to the optimum position.
- The direct clutch solenoid valve controls the direct clutch control valve in response to a signal transmitted from the TCM.

DTC Logic

INFOID:0000000012167588

DTC DETECTION LOGIC

DTC	Trouble diagnosis name	DTC is detected is...	Possible cause
P2807	Pressure Control Solenoid G	The direct clutch solenoid valve monitor value is 0.2 A or less when the direct clutch solenoid valve command value is more than 0.75 A.	<ul style="list-style-type: none">• Harness or connectors (Solenoid valve circuit is open or shorted.)• Direct clutch solenoid valve

DTC CONFIRMATION PROCEDURE

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC CONFIRMATION PROCEDURE" has been previously performed, always turn ignition switch OFF. Then wait at least 10 seconds before performing the next test.

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Start the engine.
2. Select "BATTERY VOLT", "MANU MODE SW", "GEAR" and "VHCL/S SE-A/T" in "Data Monitor" in "TRANSMISSION".
3. Drive vehicle and maintain the following conditions for 5 seconds or more.

BATTERY VOLT : 9 V or more
MANU MODE SW : ON
GEAR : 1st
VHCL/S SE-A/T : 10 km/h (7 MPH) or more

4. Perform "Self Diagnostic Results" in "TRANSMISSION".

With GST

Follow the procedure "With CONSULT".

Is "P2807" detected?

- YES >> Go to [TM-123, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000012167589

1. CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).

P2807 PRESSURE CONTROL SOLENOID G

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

NO >> Repair or replace damaged parts.

MAIN POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

MAIN POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:0000000012167590

1. CHECK TCM POWER SOURCE (PART 1)

1. Turn ignition switch OFF.
2. Disconnect A/T assembly connector.
3. Check voltage between A/T assembly vehicle side harness connector terminal and ground.

A/T assembly vehicle side harness connector		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
F51	2		Always	Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 6.

2. CHECK TCM POWER SOURCE (PART 2)

Check voltage between A/T assembly vehicle side harness connector terminals and ground.

A/T assembly vehicle side harness connector		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
F51	1		Turn ignition switch ON	Battery voltage
			Turn ignition switch OFF	0 V
	6		Turn ignition switch ON	Battery voltage
			Turn ignition switch OFF	0 V

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 7.

3. CHECK TCM GROUND CIRCUIT

Check continuity between A/T assembly vehicle side harness connector terminals and ground.

A/T assembly vehicle side harness connector		Ground	Continuity
Connector	Terminal		
F51	5		Existed
	10		

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace damaged parts.

4. CHECK JOINT CONNECTOR

1. Remove joint connector. Refer to [TM-186, "Removal and Installation"](#).
2. Check the continuity between joint connector terminals.

A/T assembly harness connector side	TCM harness connector side	Continuity
Terminal	Terminal	
1	1	Existed
2	2	
5	5	
6	6	
10	10	

Is the inspection result normal?

MAIN POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

- YES >> GO TO 5.
NO >> Repair or replace damaged parts.

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-42, "Intermittent Incident"](#).

Is the inspection result normal?

- YES >> Replace the control valve & TCM. Refer to [TM-186, "Removal and Installation"](#).
NO >> Repair or replace damaged parts.

6.DETECT MALFUNCTIONING ITEM

Check the following items:

- Open circuit or short circuit in harness between battery positive terminal and A/T assembly vehicle side harness connector terminal 2. Refer to [PG-6, "Wiring Diagram - BATTERY POWER SUPPLY -"](#).
- Battery
- 10A fuse (No.36, located in the fuse, fusible link and relay box). Refer to [PG-112, "Fuse and Fusible Link Arrangement"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).
NO >> Repair or replace damaged parts.

7.CHECK HARNESS BETWEEN IPDM E/R AND A/T ASSEMBLY

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R vehicle side harness connector terminal and A/T assembly vehicle side harness connector terminals.

IPDM E/R vehicle side harness connector		A/T assembly vehicle side harness connector		Continuity
Connector	Terminal	Connector	Terminal	
E7	58	F51	1	Existed
			6	

Is the inspection result normal?

- YES >> GO TO 8.
NO >> Repair or replace damaged parts.

8.DETECT MALFUNCTIONING ITEM

Check the following items:

- Open circuit or short circuit in harness between ignition switch and IPDM E/R. Refer to [PG-46, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Short circuit in harness between IPDM E/R vehicle side harness connector terminal 58 and A/T assembly vehicle side harness connector terminal 1, and 6.
- Ignition switch
- 10A fuse (No.43, located in the IPDM E/R). Refer to [PG-113, "Fuse, Connector and Terminal Arrangement"](#).
- IPDM E/R

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).
NO >> Repair or replace damaged parts.

SHIFT POSITION INDICATOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

SHIFT POSITION INDICATOR CIRCUIT

Description

INFOID:0000000012167591

TCM transmits a shift position signal and a manual mode indicator signal to the unified meter and A/C amp. via CAN communication line. While the vehicle is running, the unified meter and A/C amp. displays a shift position on the combination meter, according to these signals.

Component Function Check

INFOID:0000000012167592

1. CHECK A/T INDICATOR

CAUTION:

Always drive vehicle at a safe speed.

1. Start the engine.
2. Check the actual selector lever position ("P", "R", "N", "D" and "DS") and the indication of the shift position indicator mutually coincide.
3. Drive vehicle in the manual mode, and then check that the actual gear position and the indication of the shift position indicator mutually coincide when the selector lever is shifted to "UP (+ side)" or "DOWN (- side)" side (1GR ⇔ 7GR).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Go to [TM-127, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:0000000012167593

1. CHECK INPUT SIGNALS

With CONSULT

1. Start the engine.
2. Select "SLCT LVR POSI" in "Data Monitor" in "TRANSMISSION".
3. Check the actual selector lever position ("P", "R", "N", "D" and "DS") and the indication of the "SLCT LVR POSI" mutually coincide. Refer to [TM-139, "Reference Value"](#).
4. Drive vehicle in the manual mode, and then check that the actual gear position and the indication of the "SLCT LVR POSI" mutually coincide when the selector lever is shifted to the "UP (+ side)" or "DOWN (- side)" side (1GR ⇔ 7GR). Refer to [TM-139, "Reference Value"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO-1 [The actual gear position does not change, or shifting into the manual mode is not possible (no gear shifting in the manual mode possible). Or the shift position indicator is not indicated.]>>Check manual mode switch. Refer to [TM-119, "Component Inspection \(Manual Mode Switch\)"](#).

- Check A/T main system (Fail-safe function actuated).

- Perform "Self Diagnostic Results" in "TRANSMISSION". Refer to [TM-157, "DTC Index"](#).

NO-2 (The actual gear position changes, but the shift position indicator is not indicated.)>>Perform "Self Diagnostic Results" in "TRANSMISSION". Refer to [TM-157, "DTC Index"](#).

NO-3 (The actual gear position and the indication on the shift position indicator do not coincide.)>>Perform "Self Diagnostic Results" in "TRANSMISSION". Refer to [TM-157, "DTC Index"](#).

NO-4 (Only a specific position or positions is/are not indicated on the shift position indicator.)>>Check the combination meter. Refer to [MWI-4, "Work flow"](#).

SHIFT LOCK SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

SHIFT LOCK SYSTEM

Wiring Diagram - A/T SHIFT LOCK SYSTEM -

INFOID:000000012167594

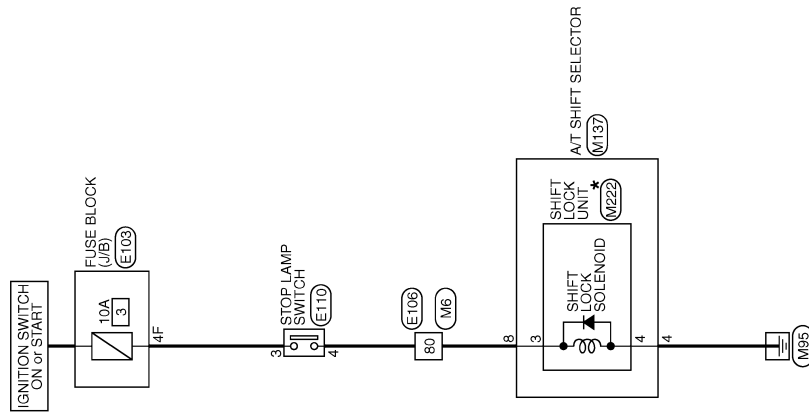

*: This connector is not shown in "Harness Layout".

A/T SHIFT LOCK SYSTEM

2009/07/16

JCDWA0543GB


SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]


A/T SHIFT LOCK SYSTEM

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	MS16FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
11F	W	-
1F	SB	-
2F	W	-
4F	G	-
6F	BR	-
8F	L	-
9F	R	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	W	-
3	B	-
4	GR	-
5	GR	-
6	G	-
7	L	-
8	Y	-
9	BR	-
10	BG	-
11	SB	-
12	BG	-


Terminal No.	Color Of Wire	Signal Name [Specification]
74	L	- [With ICC]
75	G	- [With ICC]
76	W	- [With ICC]
77	Y	- [With ICC]
78	BR	- [With ICC]
79	L	- [With ICC]
80	SB	-
81	R	-
82	SB	-
83	BG	-
84	G	-
85	L	-
86	P	-
87	V	-
88	GR	-
89	SHIELD	-
90	SHIELD	-
91	W	-
92	Y	-
93	V	-
94	LG	-
95	BG	-
96	P	-
97	R	-
98	SHIELD	-
99	P	-
100	P	-

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	W	-
3	Y	-
4	SB	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	- [With NAV]
2	Y	- [Without NAV]
3	R	- [With NAV]
4	G	- [Without NAV]
5	SHIELD	-
6	R	-
7	W	-
8	Y	-
9	BR	-
10	R	-
11	BR	-
12	BG	-
13	L	-
14	R	-
15	P	-
16	V	-
17	SB	-
18	V	-
19	Y	-
20	BG	-
21	L	-
22	W	-
23	P	-
24	BR	-
25	Y	-

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >


[7AT: RE7R01A]

A/T SHIFT LOCK SYSTEM

26	V	-
27	G	-
28	G	-
29	L	-
31	L	-
32	G	-
33	B	-
34	W	-
35	R	-
36	SHIELD	-
37	V	-
38	BG	-
39	BR	-
41	W	-
42	BG	-
43	BG	-
45	W	-
49	L	-
50	P	-
51	BR	-
54	Y	-
57	G	-
59	W	-
60	L	-
61	G	-
62	SB	-
63	G	-
64	W	-
65	W	-
66	R	-
67	SHIELD	-
68	Y	-
69	GR	-
70	LG	-
71	LG	-
72	Y	-
73	SB	- [With ICC]
74	BR	- [Without ICC]
74	L	- [Without ICC]
75	G	- [Without ICC]
76	GR	- [With ICC]
76	W	- [Without ICC]
77	P	- [With ICC]
77	R	- [With ICC]
78	L	- [Without ICC]
78	R	- [Without ICC]
79	W	- [Without ICC]
79	Y	- [With ICC]
80	SB	-
81	SB	-
82	SB	-

82	V	-
84	G	-
85	L	-
86	P	-
87	W	-
88	GR	-
90	SHIELD	-
91	W	-
92	Y	-
93	BR	-
94	P	-
95	GR	-
96	W	-
97	L	-
98	SHIELD	-
99	V	-
100	SB	-

Connector No.	IM137
Connector Name	A/T SHIFT SELECTOR
Connector Type	TH12PW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	L	-
4	B	-
5	G	-
7	R	-
8	SB	-
9	B	-
10	GR	-
11	R	-

Connector No.	M222
Connector Name	SHIFT LOCK UNIT
Connector Type	M222



Terminal No.	Color Of Wire	Signal Name [Specification]
3	-	IGN
4	-	GROUND

Component Function Check

JRDWC6477GB

INFOID:000000012167595

1. CHECK A/T SHIFT LOCK OPERATION (PART 1)

1. Turn ignition switch ON.
2. Shift the selector lever to "P" position.
3. Attempt to shift the selector lever to any other position with the brake pedal released.

Can the selector lever be shifted to any other position?

SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

- YES >> Go to [TM-131, "Diagnosis Procedure"](#).
NO >> GO TO 2.

2.CHECK A/T SHIFT LOCK OPERATION (PART 2)

Attempt to shift the selector lever to any other position with the brake pedal depressed.

Can the selector lever be shifted to any other position?

- YES >> INSPECTION END
NO >> Go to [TM-131, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000012167596

1.CHECK POWER SOURCE (PART 1)

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector connector.
3. Turn ignition switch ON.
4. Check voltage between A/T shift selector vehicle side harness connector terminal and ground.

A/T shift selector vehicle side harness connector		Ground	Condition	Voltage (Approx.)
Connector	Terminal		Depressed brake pedal.	Battery voltage
M137	8	Ground	Released brake pedal.	0 V

Is the inspection result normal?

- YES >> GO TO 2.
NO >> GO TO 5.

2.CHECK GROUND CIRCUIT

Check continuity between A/T shift selector vehicle side harness connector terminal and ground.

A/T shift selector vehicle side harness connector		Ground	Continuity
Connector	Terminal		Existed
M137	4	Ground	Existed

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace damaged parts.

3.CHECK HARNESS BETWEEN A/T SHIFT SELECTOR AND SHIFT LOCK UNIT

1. Disconnect shift lock unit connector.
2. Check continuity between A/T shift selector connector terminals and shift lock unit A/T shift selector side connector terminals.

A/T shift selector connector		Shift lock unit A/T shift selector side connector		Continuity
Connector	Terminal	Connector	Terminal	
M137	8	M222	3	Existed
	4		4	

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace damaged parts.

4.CHECK SHIFT LOCK UNIT

1. Remove shift lock unit. Refer to [TM-183, "Removal and Installation"](#).
2. Check shift lock unit. Refer to [TM-133, "Component Inspection \(Shift Lock Solenoid\)"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).
NO >> Replace shift lock unit. Refer to [TM-183, "Removal and Installation"](#).

SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

5. CHECK POWER SOURCE (PART 2)

1. Turn ignition switch OFF.
2. Disconnect stop lamp switch connector.
3. Turn ignition switch ON.
4. Check voltage between stop lamp switch vehicle side harness connector terminal and ground.

Stop lamp switch vehicle side harness connector		Ground	Voltage (Approx.)
Connector	Terminal		Battery voltage
E110	3		

Is the inspection result normal?

- YES >> GO TO 6.
NO >> GO TO 9.

6. CHECK STOP LAMP SWITCH (PART 1)

Check stop lamp switch. Refer to [TM-133. "Component Inspection \(Stop Lamp Switch\)".](#)

Is the inspection result normal?

- YES >> GO TO 7.
NO >> GO TO 11.

7. CHECK HARNESS BETWEEN STOP LAMP SWITCH AND SHIFT SELECTOR (PART 1)

Check continuity between stop lamp switch vehicle side harness connector terminal and A/T shift selector vehicle side harness connector terminal.

Stop lamp switch vehicle side harness connector		A/T shift selector vehicle side harness connector		Continuity
Connector	Terminal	Connector	Terminal	
E110	4	M137	8	Existed

Is the inspection result normal?

- YES >> GO TO 8.
NO >> Repair or replace damaged parts.

8. CHECK HARNESS BETWEEN STOP LAMP SWITCH AND SHIFT SELECTOR (PART 2)

Check continuity between stop lamp switch vehicle side harness connector terminal and ground.

Stop lamp switch vehicle side harness connector		Ground	Continuity
Connector	Terminal		Continuity
E110	4		Not existed

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-42. "Intermittent Incident".](#)
NO >> Repair or replace damaged parts.

9. CHECK HARNESS BETWEEN FUSE BLOCK (J/B) AND STOP LAMP SWITCH

1. Turn ignition switch OFF.
2. Disconnect fuse block (J/B) connector.
3. Check continuity between fuse block (J/B) vehicle side harness connector terminal and stop lamp switch vehicle side harness connector terminal.

Fuse block (J/B) vehicle side harness connector		Stop lamp switch vehicle side harness connector		Continuity
Connector	Terminal	Connector	Terminal	
E103	4F	E110	3	Existed

Is the inspection result normal?

- YES >> GO TO 10.
NO >> Repair or replace damaged parts.

10. DETECT MALFUNCTIONING ITEM

SHIFT LOCK SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

Check the following items:

- Open circuit or short circuit in harness between ignition switch and fuse block (J/B). Refer to [PG-46, "Wiring Diagram - IGNITION POWER SUPPLY -"](#).
- Short circuit in harness between fuse block (J/B) vehicle side harness connector terminal 4F and stop lamp switch vehicle side harness connector terminal 3.
- Ignition switch
- 10A fuse [No.3, located in the fuse block (J/B)]. Refer to [PG-111, "Fuse, Connector and Terminal Arrangement"](#).
- Fuse block (J/B)

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).
- NO >> Repair or replace damaged parts.

11.CHECK INSTALLATION POSITION OF STOP LAMP SWITCH

Adjust stop lamp switch position. Refer to [BR-10, "Inspection and Adjustment"](#).

>> GO TO 12.

12.CHECK STOP LAMP SWITCH (PART 2)

Check stop lamp switch. Refer to [TM-133, "Component Inspection \(Stop Lamp Switch\)"](#).

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace stop lamp switch. Refer to [BR-21, "Removal and Installation"](#).

Component Inspection (Shift Lock Solenoid)

INFOID:000000012167597

1.CHECK SHIFT LOCK SOLENOID

Apply voltage to terminals 3 and 4 of shift lock unit connector, and then check that shift lock solenoid is activated.

CAUTION:

Connect the fuse between the terminals when applying the voltage.

Shift lock unit connector		Condition	Status
Terminal			
+ (fuse)	-		
3	4	Apply 12 V direct current between terminals 3 and 4.	Shift lock solenoid operates

Can the lock plate be moved up and down?

- YES >> INSPECTION END
- NO >> Replace shift lock unit. Refer to [TM-183, "Removal and Installation"](#).

Component Inspection (Stop Lamp Switch)

INFOID:000000012167598

1.CHECK STOP LAMP SWITCH

Check continuity between stop lamp switch connector terminals 3 and 4.

Stop lamp switch connector		Condition	Continuity
Terminal			
3	4		
		Depressed brake pedal.	Existed
		Released brake pedal.	Not existed

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace stop lamp switch. Refer to [BR-21, "Removal and Installation"](#).

SELECTOR LEVER POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

SELECTOR LEVER POSITION INDICATOR

Description

INFOID:000000012167599

Indicates selector lever position.

Component Function Check

INFOID:000000012167600

1.CHECK SELECTOR LEVER POSITION INDICATOR (PART 1)

1. Turn ignition switch ON.
2. Check that each position indicator lamp of the selector lever position indicator turns on when shifting the selector lever from "P" to "M" position.

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Go to [TM-134, "Diagnosis Procedure"](#).

2.CHECK SELECTOR LEVER POSITION INDICATOR (PART 2)

Check that the night illumination of the selector lever position indicator turns on when setting the lighting switch in 1st position.

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Go to [TM-134, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000012167601

1.CHECK MALFUNCTIONING ITEM

Which item is abnormal?

- Position indicator lamp>> GO TO 2.
Illumination lamp>> GO TO 11.

2.CHECK POWER SOURCE

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector connector.
3. Turn ignition switch ON.
4. Check voltage between A/T shift selector vehicle side harness connector terminals.

A/T shift selector vehicle side harness connector		Ground	Voltage (Approx.)
Connector	Terminal		Battery voltage
M137	10		

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 8.

3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Check continuity between A/T shift selector vehicle side harness connector terminal and ground.

A/T shift selector vehicle side harness connector		Ground	Continuity
Connector	Terminal		Existed
M137	4		

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace damaged parts.

4.CHECK SHIFT POSITION SWITCH

SELECTOR LEVER POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

1. Disconnect shift position switch connector.
2. Check continuity between A/T shift selector harness connector terminals and shift position switch connector terminals.

A/T shift selector harness connector		Shift position switch connector		Condition	Continuity
Connector	Terminal	Connector	Terminal		
M137	4	M221	7	Selector lever in "D" position.	Existed
			2, 3, 4, 5, 6, 9, 10, 11		No existed
			9	Selector lever in "M" position.	Existed
			2, 3, 4, 5, 6, 7, 10, 11		No existed
	10		2, 6	Selector lever in "N" and "M" position.	Existed
			3, 4, 5, 7, 9, 10, 11		No existed
			3, 6	Selector lever in "D" position.	Existed
			2, 4, 5, 7, 9, 10, 11		No existed
			4, 6	Selector lever in "R" position.	Existed
			2, 3, 5, 7, 9, 10, 11		No existed
			5, 6	Selector lever in "P" position.	Existed
			2, 3, 4, 7, 9, 10, 11		No existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts. Refer to [TM-183, "Removal and Installation"](#).

5. CHECK HARNESS BETWEEN SHIFT POSITION SWITCH AND SELECTOR LEVER POSITION INDICATOR (PART 1)

1. Disconnect selector lever position indicator connector.
2. Check continuity between shift position switch harness connector terminals and selector lever position indicator connector terminals.

Shift position switch harness connector		Selector lever position indicator harness connector		Continuity
Connector	Terminal	Connector	Terminal	
M221	2	M223	3	Existed
	3		4	
	4		5	
	5		7	
	6		6	
	7		8	
	9		2	

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace damaged parts. Refer to [TM-183, "Removal and Installation"](#).

6. CHECK HARNESS BETWEEN SHIFT POSITION SWITCH AND SELECTOR LEVER POSITION INDICATOR (PART 2)

Check harness cladding between shift position switch connector and selector lever position indicator connector for damage.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace damaged parts. Refer to [TM-183, "Removal and Installation"](#).

7. CHECK SELECTOR LEVER POSITION INDICATOR

Check selector lever position indicator. Refer to [TM-137, "Component Inspection \(Selector Lever Position Indicator\)"](#).

SELECTOR LEVER POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).
NO >> Replace damaged parts.

8. CHECK HARNESS BETWEEN A/T SHIFT SELECTOR AND BCM (PART 1)

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between A/T shift selector vehicle side harness connector terminal and BCM vehicle side harness connector terminal.

A/T shift selector vehicle side harness connector		BCM vehicle side harness connector		Continuity
Connector	Terminal	Connector	Terminal	
M137	10	M122	96	Existed

Is the inspection result normal?

- YES >> GO TO 9.
NO >> Repair or replace damaged parts.

9. CHECK HARNESS BETWEEN A/T SHIFT SELECTOR AND BCM (PART 2)

Check continuity between A/T shift selector vehicle side harness connector terminal and ground.

A/T shift selector vehicle side harness connector		Ground	Continuity
Connector	Terminal		
M137	10		Not existed

Is the inspection result normal?

- YES >> GO TO 10.
NO >> Repair or replace damaged parts.

10. CHECK BCM INPUT/OUTPUT SIGNAL

Check BCM input/output signal. Refer to [BCS-50, "Reference Value"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-42, "Intermittent Incident"](#).
NO >> Repair or replace damaged parts.

11. CHECK POWER SOURCE

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector connector.
3. Turn ignition switch ON.
4. Check voltage between A/T shift selector vehicle side harness connector terminals.

A/T shift selector vehicle side harness connector		Condition	Voltage (Approx.)
Connector	Terminal		
M137	+	Lighting switch 1ST	Battery voltage
	-		
	7		
	9		

Is the inspection result normal?

- YES >> GO TO 12.
NO >> Check illumination circuit. Refer to [INL-42, "Wiring Diagram - ILLUMINATION -"](#).

12. CHECK SHIFT POSITION SWITCH

1. Disconnect shift position switch connector.
2. Check continuity between A/T shift selector harness connector terminals and shift position switch connector terminals.

SELECTOR LEVER POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

A/T shift selector harness connector		Shift position switch connector		Continuity
Connector	Terminal	Connector	Terminal	
M137	7	M221	10	Existed
			2, 3, 4, 5, 6, 7, 9, 11	No existed
	9		11	Existed
			2, 3, 4, 5, 6, 7, 9, 10	No existed

Is the inspection result normal?

YES >> GO TO 13.

NO >> Repair or replace damaged parts. Refer to [TM-183. "Removal and Installation"](#).

13. CHECK HARNESS BETWEEN SHIFT POSITION SWITCH AND SELECTOR LEVER POSITION INDICATOR (PART 1)

1. Disconnect selector lever position indicator connector.
2. Check continuity between shift position switch harness connector terminals and selector lever position indicator connector terminals.

Shift position switch harness connector		Selector lever position indicator harness connector		Continuity
Connector	Terminal	Connector	Terminal	
M221	10	M223	1	Existed
	11		9	

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair or replace damaged parts. Refer to [TM-183. "Removal and Installation"](#).

14. CHECK HARNESS BETWEEN SHIFT POSITION SWITCH AND SELECTOR LEVER POSITION INDICATOR (PART 2)

Check harness cladding between shift position switch connector and selector lever position indicator connector for damage.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace damaged parts. Refer to [TM-183. "Removal and Installation"](#).

Component Inspection (Selector Lever Position Indicator)

INFOID:000000012167602

1. CHECK SELECTOR LEVER POSITION INDICATOR

Check that selector lever position indicator lamps turn on.

CAUTION:

Connect the fuse between the terminals when applying the voltage.

Selector lever position indicator connector		Condition	Status
Terminal			
+ (fuse)	-		
1	9	Apply 12 V direct current between terminals 1 and 9.	Illumination lamp turns on.

SELECTOR LEVER POSITION INDICATOR

< DTC/CIRCUIT DIAGNOSIS >

[7AT: RE7R01A]

Selector lever position indicator connector		Condition	Status
Terminal			
+ (fuse)	-		
3	8	Apply 12 V direct current between terminals 3 and 8.	"N" position indicator lamp turns on.
4		Apply 12 V direct current between terminals 4 and 8.	"D" position indicator lamp turns on.
5		Apply 12 V direct current between terminals 5 and 8.	"R" position indicator lamp turns on.
7		Apply 12 V direct current between terminals 7 and 8.	"P" position indicator lamp turns on.
6	2	Apply 12 V direct current between terminals 6 and 2.	"M" mode indicator lamp turns on.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the selector lever position indicator. Refer to [TM-183, "Removal and Installation"](#).

ECU DIAGNOSIS INFORMATION

TCM

Reference Value

INFOID:0000000012167603

VALUES ON DIAGNOSIS TOOL

- The CONSULT electrically displays shift timing and lock-up timing (that is, operation timing of each solenoid).
Check for time difference between actual shift timing and the CONSULT display. If the difference is noticeable, mechanical parts (except solenoids, sensors, etc.) may be malfunctioning. Check mechanical parts using applicable diagnostic procedures.
- Shift schedule (which implies gear position) displayed on CONSULT and that indicated in Service Manual may differ slightly. This occurs because of the following reasons:
 - Actual shift schedule has more or less tolerance or allowance
 - Shift schedule indicated in Service Manual refers to the point where shifts start
 - Gear position displayed on CONSULT indicates the point where shifts are completed
- Display of solenoid valves on CONSULT changes at the start of shifting, while gear position is displayed upon completion of shifting (which is computed by TCM).

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Item name	Condition	Value / Status (Approx.)
VHCL/S SE-AT	During driving	Approximately equals the speedometer reading.
ESTM VSP SIG	During driving	Approximately equals the speedometer reading.
OUTPUT REV	During driving (lock-up ON)	Tachometer / Gear ratio
INPUT SPEED	During driving (lock-up ON)	Approximately equals the engine speed.
F SUN GR REV	During driving	Revolution of front sun gear is indicated.
F CARR GR REV	During driving	Revolution of front carrier is indicated.
ENGINE SPEED	Engine running	Closely equals the tachometer reading.
TC SLIP SPEED	During driving	Engine speed – Input speed
ACCELE POSI	Accelerator pedal is released	0.0/8
	Accelerator pedal is fully depressed	8.0/8
THROTTLE POSI	Accelerator pedal is released	0.0/8
	Accelerator pedal is fully depressed	8.0/8
ATF TEMP 1	Ignition switch ON	Temperature of ATF in the oil pan is indicated.
ATF TEMP 2	Ignition switch ON	Temperature of ATF at the exit of torque converter.
ATF TEMP SE 1	0°C (32° F) – 20°C (68°F) – 80°C (176°F)	3.3 – 2.7 – 0.9 V
BATTERY VOLT	Ignition switch ON	Battery voltage (11 V – 14 V)
LINE PRES SOL	—	—
TCC SOLENOID	—	—
L/B SOLENOID	—	—
FR/B SOLENOID	—	—
HLR/C SOL	—	—

TCM

< ECU DIAGNOSIS INFORMATION >

[7AT: RE7R01A]

Item name	Condition	Value / Status (Approx.)
I/C SOLENOID	—	—
D/C SOLENOID	—	—
2346/B SOL	—	—
L/P SOL MON	—	—
TCC SOL MON	—	—
L/B SOL MON	—	—
FR/B SOL MON	—	—
HLR/C SOL MON	—	—
I/C SOL MON	—	—
2346/B SOL MON	—	—
GEAR RATIO	Driving with 1GR	4.924
	Driving with 2GR	3.194
	Driving with 3GR	2.043
	Driving with 4GR	1.412
	Driving with 5GR	1.000
	Driving with 6GR	0.862
	Driving with 7GR	0.772
ENGINE TORQUE	During driving	Changes the value according to the acceleration or deceleration.
ENG TORQUE D	During driving	Changes the value according to the acceleration or deceleration.
INPUT TRQ S	During driving	Changes the value according to the acceleration or deceleration.
INPUT TRQ L/P	During driving	Changes the value according to the acceleration or deceleration.
TRGT PRES L/P	Selector lever in "P" and "N" positions	490 kPa
	Other than the above	490 – 1370 kPa
TRGT PRES TCC	Slip lock-up is active	0 – 600 kPa
	Lock-up is active	600 kPa
	Other than the above	0 kPa
TRGT PRES L/B	Low brake is engaged	1370 kPa
	Low brake is disengaged	0 kPa
TRGT PRES FR/B	Front brake is engaged	1370 kPa
	Front brake is disengaged	0 kPa
TRG PRE HLR/C	High and low reverse clutch is engaged	1370 kPa
	High and low reverse clutch is disengaged	0 kPa
TRGT PRES I/C	Input clutch is engaged	1370 kPa
	Input clutch is disengaged	0 kPa
TRGT PRES D/C	Direct clutch is engaged	1370 kPa
	Direct clutch is disengaged	0 kPa
TRG PRE 2346/B	2346 brake is engaged	1370 kPa
	2346 brake is disengaged	0 kPa
SHIFT PATTERN	During normal driving (without shift changes)	FF
VEHICLE SPEED	During driving	Approximately equals the speedometer reading.

TCM

< ECU DIAGNOSIS INFORMATION >

[7AT: RE7R01A]

Item name	Condition	Value / Status (Approx.)	
RANGE SW 4	Selector lever in "P" and "N" positions	OFF	A
	Other than the above	ON	
RANGE SW 3	Selector lever in "P", "R" and "N" positions	OFF	B
	Other than the above	ON	
RANGE SW 2	Selector lever in "P" and "R" positions	OFF	C
	Other than the above	ON	
RANGE SW 1	Selector lever in "P" position	OFF	
	Other than the above	ON	TM
SFT DWN ST SW*	Paddle shifter (shift-down) is pulled	ON	
	Other than the above	OFF	
SFT UP ST SW*	Paddle shifter (shift-up) is pulled	ON	E
	Other than the above	OFF	
DOWN SW LEVER	Selector lever is shifted to - side	ON	F
	Other than the above	OFF	
UP SW LEVER	Selector lever is shifted to + side	ON	
	Other than the above	OFF	G
NON M-MODE SW	Selector lever is shifted to manual shift gate side	OFF	
	Other than the above	ON	H
MANU MODE SW	Selector lever is shifted to manual shift gate side	ON	
	Other than the above	OFF	I
TOW MODE SW*	Tow mode	ON	
	Other than the above	OFF	J
DS RANGE	Driving with DS mode	ON	
	Other than the above	OFF	K
1 POSITION SW*	Selector lever in "1" position	ON	
	Other than the above	OFF	L
OD CONT SW*	When overdrive control switch is depressed	ON	
	When overdrive control switch is released	OFF	M
BRAKESW	Brake pedal is depressed	ON	
	Brake pedal is released	OFF	N
POWERSHIFT SW*	Power mode	ON	
	Other than the above	OFF	O
ASCD-OD CUT	When TCM receives ASCD OD cancel request signal	ON	
	Other than the above	OFF	P
ASCD-CRUISE	ASCD operate	ON	
	Other than the above	OFF	
ABS SIGNAL	ABS operate	ON	
	Other than the above	OFF	
TCS GR/P KEEP	When TCM receives TCS gear keep request signal	ON	
	Other than the above	OFF	
TCS SIGNAL 2	When the reception value of A/T shift schedule change demand signal is "cold"	ON	
	Other than the above	OFF	

TCM

< ECU DIAGNOSIS INFORMATION >

[7AT: RE7R01A]

Item name	Condition	Value / Status (Approx.)
TCS SIGNAL 1	When the reception value of A/T shift schedule change demand signal is "warm"	ON
	Other than the above	OFF
LOW/B PARTS	At 4GR - 5GR - 6GR shift control	FAIL
	Other than the above	NOTFAIL
HC/IC/FRB PARTS	At 1GR - 2GR - 3GR shift control	FAIL
	Other than the above	NOTFAIL
IC/FRB PARTS	At 4GR - 5GR - 6GR shift control	FAIL
	Other than the above	NOTFAIL
HLR/C PARTS	At 4GR - 5GR - 6GR shift control	FAIL
	Other than the above	NOTFAIL
W/O THL POS	Accelerator pedal is fully depressed	ON
	Accelerator pedal is released	OFF
CLSD THL POS	Accelerator pedal is released	ON
	Accelerator pedal is fully depressed	OFF
DRV CST JUDGE	Accelerator pedal is depressed	DRIVE
	Accelerator pedal is released	COAST
SHIFT IND SIGNAL	When the selector lever is positioned in between each position.	OFF
	Selector lever in "P" position	P
	Selector lever in "R" position	R
	Selector lever in "N" position	N
	Selector lever in "D" position	D
	Selector lever in "D" position: 7GR	6
	Selector lever in "D" position: 6GR	5
	Selector lever in "D" position: 5GR	4
	Selector lever in "D" position: 4GR	3
	Selector lever in "D" position: 3GR	2
	Selector lever in "D" position: 2GR	1
	Selector lever in "D" position: 1GR	M1
	Selector lever in "M" position: 1GR	M2
	Selector lever in "M" position: 2GR	M3
	Selector lever in "M" position: 3GR	M4
	Selector lever in "M" position: 4GR	M5
	Selector lever in "M" position: 5GR	M6
	Selector lever in "M" position: 6GR	M7
	Selector lever in "M" position: 7GR	DS
	Driving with DS mode	DS
STARTER RELAY	Selector lever in "P" and "N" positions	ON
	Other than the above	OFF
F-SAFE IND/L	For 2 seconds after the ignition switch is turned ON	ON
	Other than the above	OFF
ATF WARN LAMP*	When TCM transmits the ATF indicator lamp signal	ON
	Other than the above	OFF

TCM


< ECU DIAGNOSIS INFORMATION >

[7AT: RE7R01A]

Item name	Condition	Value / Status (Approx.)
MANU MODE IND	Driving with manual mode	ON
	Other than the above	OFF
ON OFF SOL MON	Selector lever in "P" and "N" positions	ON
	Driving with 1GR to 3GR	ON
	Other than the above	OFF
START RLY MON	Selector lever in "P" and "N" positions	ON
	Other than the above	OFF
ON OFF SOL	Selector lever in "P" and "N" positions	ON
	Driving with 1GR to 3GR	ON
	Other than the above	OFF
SLCT LVR POSI	Selector lever in "N" and "P" positions	N/P
	Selector lever in "R" position	R
	Selector lever in "D" and "DS" positions	D
	Selector lever in "M" position: 7GR	
	Selector lever in "M" position: 6GR	6
	Selector lever in "M" position: 5GR	5
	Selector lever in "M" position: 4GR	4
	Selector lever in "M" position: 3GR	3
	Selector lever in "M" position: 2GR	2
	Selector lever in "M" position: 1GR	1
GEAR	During driving	1st, 2nd, 3rd, 4th, 5th, 6th, 7th
NEXT GR POSI	During driving	1st, 2nd, 3rd, 4th, 5th, 6th, 7th
SHIFT MODE	Driving with the D position	0 or 3
	Driving with the manual mode	4 or 8
D/C PARTS	At 1GR - 2GR shift control	FAIL
	Other than the above	NOTFAIL
FR/B PARTS	At control fixed to 1GR	FAIL
	Other than the above	NOTFAIL
2346/B PARTS	At control fixed to 1GR	FAIL
	Other than the above	NOTFAIL
2346B/DC PARTS	At 2GR - 3GR - 4GR shift control	FAIL
	Other than the above	NOTFAIL

*: Not mounted but always display as OFF.

TERMINAL LAYOUT

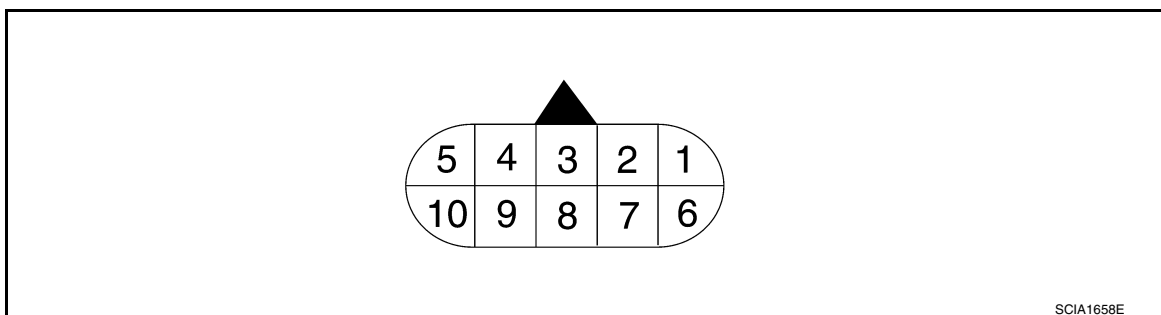

PHYSICAL VALUES

TCM


< ECU DIAGNOSIS INFORMATION >

[7AT: RE7R01A]

Terminal (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (Y)	Ground	Ignition power supply	Input	Ignition switch ON		Battery voltage
				Ignition switch OFF		0 V
2 (BR)	Ground	Battery power supply (Memory back-up)	Input	Always		Battery voltage
3 (O)	—	CAN-H	Input/ Output	—		—
4 (V)	—	K-line (CONSULT signal)	Input/ Output	—		—
5 (B)	Ground	Ground	Output	Always		0 V
6 (Y)	Ground	Ignition power supply	Input	Ignition switch ON		Battery voltage
				Ignition switch OFF		0 V
7 (R)	Ground	Back-up lamp relay	Input	Ignition switch ON	Selector lever in "R" position.	0 V
					Selector lever in other positions.	Battery voltage
8 (LG)	—	CAN-L	Input/ Output	—		—
9 (GR)	Ground	Starter relay	Output	Ignition switch ON	Selector lever in "N" and "P" positions.	Battery voltage
					Selector lever in other positions.	0 V
10 (B)	Ground	Ground	Output	Always		0 V

Wiring Diagram - A/T CONTROL SYSTEM -

INFOID:000000012167604

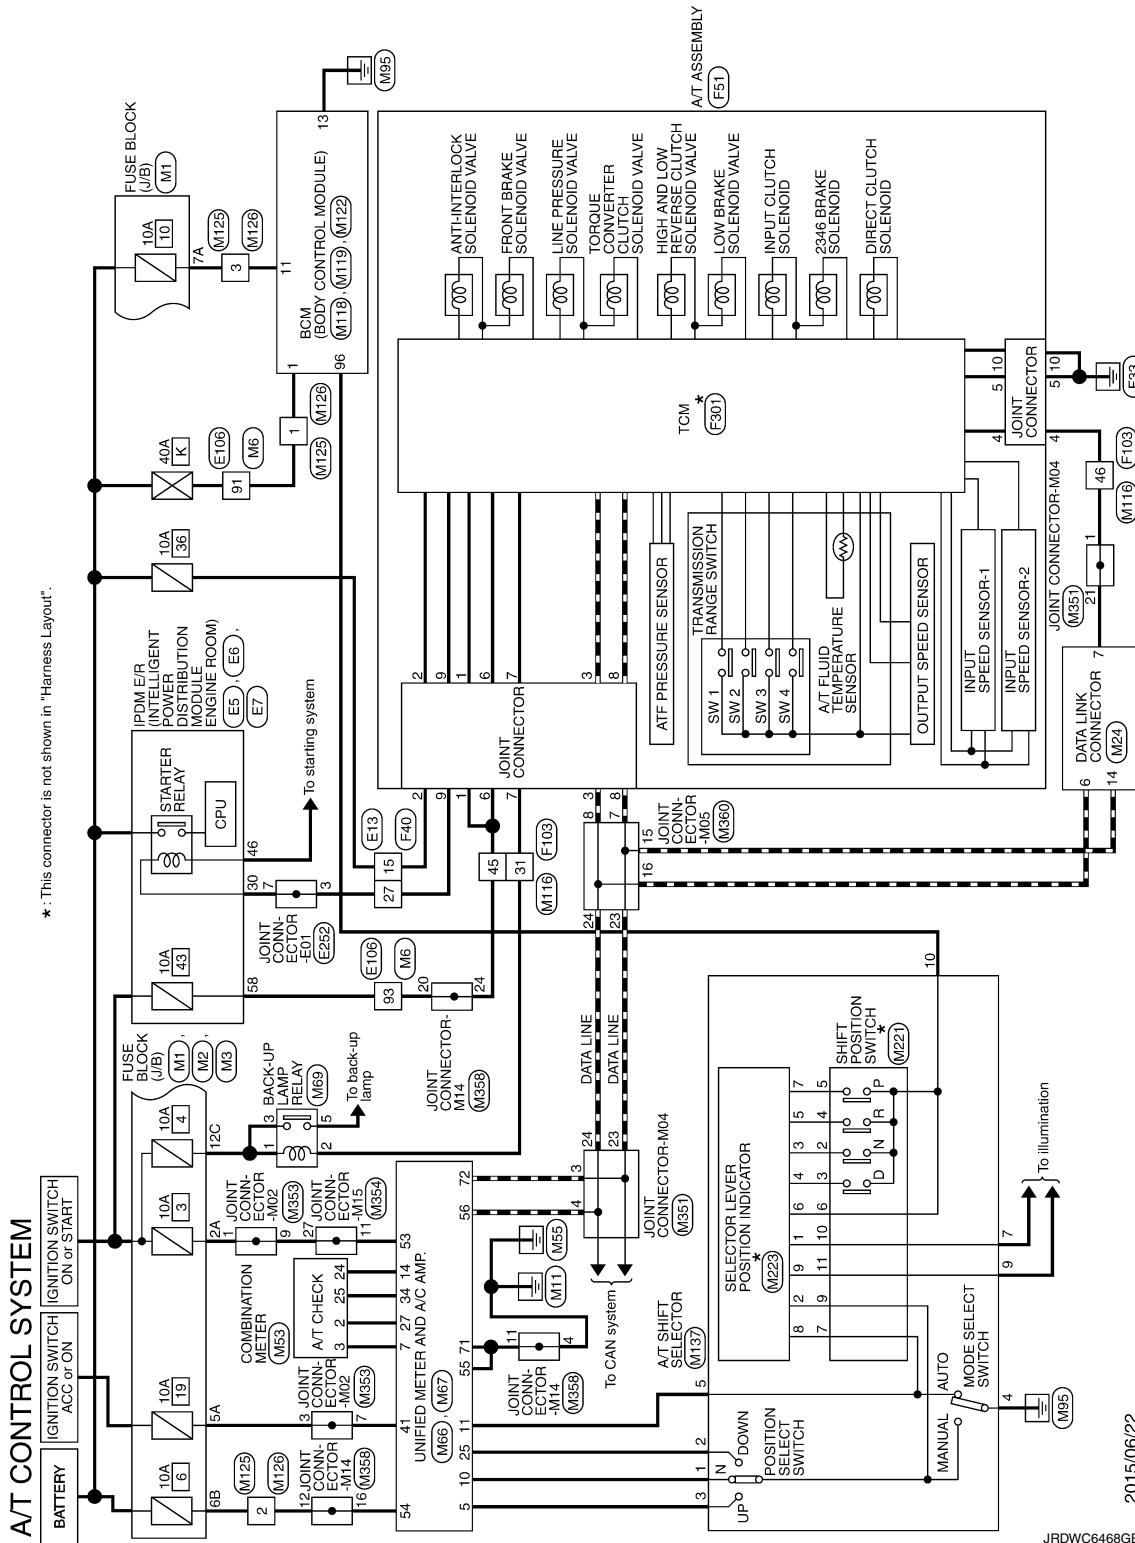

*: This connector is not shown in "Harness Layout".

2015/06/22

JRDWC6468GB

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

A/T CONTROL SYSTEM

Connector No.	E3
Connector Name	FROM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH420FW-CS12-AM-1V



Terminal No.	Color Of Wire	Signal Name [Specification]
4	V	-
5	L	-
6	R	-
7	R	-
12	B/W	-
13	Y	-
16	LG	-
19	W	-
25	G	-
26	R	-
27	BG	-
28	GR	-
30	G	-


Connector No.	E6
Connector Name	FROM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH80FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B/W	-
43	SB	-
44	BR	-

45	G	-
46	R	-

Connector No.	E7
Connector Name	FROM E/R INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM
Connector Type	TH420FW-CS12-M4



Terminal No.	Color Of Wire	Signal Name [Specification]
48	L	-
49	BG	-
51	Y	-
53	W	-
54	P	-
55	SB	-
56	LG	-
57	G	-
58	V	-
60	BR	-
70	BG	-
74	P	-
75	SB	-
76	Y	-
77	R	-
80	W	-


Connector No.	E13
Connector Name	WIRE TO WIRE
Connector Type	SAA36MB-RSF-SH28



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L/Y	-
2	SHIELD	-
3	L/B	-
4	SHIELD	-
5	BR	-
7	G	-
8	W	-
9	W	-
10	Y	-
11	P	-
12	SB	-
13	L	-
14	G	-
15	B	-
16	LG	-
18	Y	-
19	BG	-
20	B	-
21	SB	-
22	W	-
23	L	-
24	G	-
25	LG	-
27	GR	-
28	V	-
29	P	-
30	BR	-
32	Y	-
33	G	-
34	BG	-
37	SHIELD	-
38	L	-
39	P	-
40	R	-

41	W	-
42	LG	-
43	G	-
45	BG	-
46	SHIELD	-
47	W	-
48	BR	-
49	G	-
50	B	-
51	SB	-
52	R	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	W	-
3	B	-
4	GR	-
5	GR	-
6	G	-
7	L	-
8	Y	-
9	BR	-
10	BG	-
11	SB	-
12	BG	-
13	L	-
14	P	-
15	P	-
16	V	-
17	SB	-
18	V	-
20	BG	-
21	L	-
22	V	-
23	G	-

A/T CONTROL SYSTEM

Connector No.	F103
Connector Name	WIRE TO WIRE
Connector Type	TK38FW-AN10



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	W	-
3	R	-
4	B	-
5	Y	-
9	GR	-
10	EG	-
19	O	- [Without LCC]
20	Y	- [With LCC]
28	B	-
29	LG	-
31	R	-
32	BR	-
34	B	-
35	L	-
36	P	-
37	Y	-
38	G	-
43	LG	-
44	O	-
45	Y	-
46	V	-

Connector No.	F301
Connector Name	TCM
Connector Type	SP10FG



Terminal No.	Color Of Wire	Signal Name [Specification]
1	--	IGNITION POWER SUPPLY
2	--	BATTERY POWER SUPPLY
3	--	CAN-H
4	--	K-LINE
5	--	GROUND
6	--	IGNITION POWER SUPPLY
7	--	BACK-UP LAMP RELAY
8	--	CAN-L
9	--	STARTER RELAY
10	--	GROUND

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS18FW-M2




Terminal No.	Color Of Wire	Signal Name [Specification]
1A	Y	-
2A	G	-
3A	L	-
4A	R	-
5A	V	-
6A	Y	-
7A	R	-
8A	L	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
3B	P	-
4B	G	-
5B	BG	-
6B	Y	-
7B	P	-
8B	R	-
9B	SB	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10C	L	-
11C	R	-
12C	BG	-
13C	Y	-
14C	B	-
15C	G	-
16C	BG	-
17C	L	-
18C	L	-

Connector No.	M5
Connector Name	WIRE TO WIRE
Connector Type	TH80MM-GS16-TM4




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	- [With NAV]
2	Y	- [Without NAV]
3	B	- [Without NAV]
4	R	- [With NAV]
5	B	- [Without NAV]
6	G	- [Without NAV]
7	SHIELD	-
8	G	-
9	R	-
10	Y	-
11	BR	-
12	BR	-
13	EG	-
14	R	-
15	P	-
16	V	-
17	SB	-
18	V	-
20	BG	-
21	L	-
22	W	-
23	P	-
24	BR	-
25	Y	-
26	B	-
27	G	-
28	G	-
31	L	-
32	G	-
33	B	-
34	W	-
35	R	-
36	SHIELD	-

A/T CONTROL SYSTEM

37	V	-	-	-	-
38	BG	-	-	-	-
39	BR	-	-	-	-
41	W	-	-	-	-
42	BG	-	-	-	-
43	BG	-	-	-	-
45	W	-	-	-	-
49	L	-	-	-	-
50	P	-	-	-	-
51	BR	-	-	-	-
54	Y	-	-	-	-
57	G	-	-	-	-
58	W	-	-	-	-
60	G	-	-	-	-
61	G	-	-	-	-
62	SB	-	-	-	-
63	G	-	-	-	-
64	B	-	-	-	-
65	W	-	-	-	-
66	R	-	-	-	-
67	SHIELD	-	-	-	-
68	Y	-	-	-	-
69	GR	-	-	-	-
70	LG	-	-	-	-
71	LG	-	-	-	-
72	Y	-	-	-	-
73	SB	-	-	-	-
74	BR	- [With LCC]	-	-	-
74	BR	- [Without LCC]	-	-	-
75	G	-	-	-	-
76	GR	- [Without LCC]	-	-	-
76	W	- [With LCC]	-	-	-
77	P	- [Without LCC]	-	-	-
77	R	- [With LCC]	-	-	-
78	L	-	-	-	-
78	R	- [Without LCC]	-	-	-
79	W	- [With LCC]	-	-	-
79	Y	- [Without LCC]	-	-	-
80	SB	-	-	-	-
81	SB	-	-	-	-
82	SB	-	-	-	-
83	G	-	-	-	-
84	L	-	-	-	-
85	L	-	-	-	-
86	P	-	-	-	-
87	W	-	-	-	-
89	GR	-	-	-	-
90	SHIELD	-	-	-	-
91	W	-	-	-	-
92	Y	-	-	-	-


93	BR	-	-	-	-
94	P	-	-	-	-
95	GR	-	-	-	-
96	W	-	-	-	-
97	L	-	-	-	-
98	SHIELD	-	-	-	-
99	V	-	-	-	-
100	SB	-	-	-	-

Connector No. M24
Connector Name DATA LINK CONNECTOR
Connector Type BD16PW

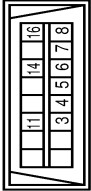


Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	B	-
8	B	-
7	V	-
8	G	-
11	SB	-
14	P	-
16	Y	-

Connector No. M53
Connector Name COMBINATION METER
Connector Type TH40PW-NH

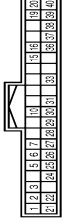

Terminal No.	Color Of Wire	Signal Name [Specification]
1	GR	BATTERY POWER SUPPLY
2	LG	COMMUNICATION SIGNAL (METER->AMP)
3	GR	COMMUNICATION SIGNAL (AMP->METER)
5	B	GROUND
6	P	ALTERNATOR SIGNAL
7	BR	AIR BAG SIGNAL
10	G	SECURITY SIGNAL
15	B	GROUND
16	B	METER CONTROL SWITCH GROUND
19	B	ILL. OND
20	R	ILL. SIGNAL
22	B	IGNITION SIGNAL
22	B	IGNITION SIGNAL
24	BR	COMMUNICATION SIGNAL (LCD->AMP)
25	Y	COMMUNICATION SIGNAL (AMP->LCD)
26	R	VEHICLE SPEED SIGNAL (8-PULSE)
27	V	PARKING BRAKE SWITCH SIGNAL
28	W	BRAKE FLUID LEVEL SWITCH SIGNAL
29	SB	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
30	G	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE)
31	L	WASHER LEVEL SWITCH SIGNAL
33	B	ILLUMINATION CONTROL SIGNAL
37	LG	SELECT SWITCH SIGNAL
38	SB	ENTER SWITCH SIGNAL
38	L	TRIP A/B RESET SWITCH SIGNAL
39	L	TRIP A/B RESET SWITCH SIGNAL
40	BG	ILLUMINATION CONTROL SWITCH SIGNAL (1)
40	BG	ILLUMINATION CONTROL SWITCH SIGNAL (2)


Connector No. M66
Connector Name UNIFIED METER AND A/C AMP.
Connector Type TH40PW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
5	L	MANUAL MODE SHIFT UP SIGNAL
7	GR	COMMUNICATION SIGNAL (AMP->METER)
8	L	VEHICLE SPEED SIGNAL (2-PULSE)
9	SB	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
10	W	MANUAL MODE SIGNAL

11	G	NON-MANUAL MODE SIGNAL
14	BR	COMMUNICATION SIGNAL (LCD->AMP)
20	L	IGN ON/OFF SIGNAL
23	V	AT SLOW SWITCH SIGNAL
25	Y	MANUAL MODE SHIFT DOWN SIGNAL
27	LG	COMMUNICATION SIGNAL (METER->AMP)
28	R	VEHICLE SPEED SIGNAL (8-PULSE)
30	V	PARKING BRAKE SWITCH SIGNAL
34	Y	COMMUNICATION SIGNAL (AMP->LCD)
38	P	BLOWER MOTOR CONTROL SIGNAL

Connector No. M67
Connector Name UNIFIED METER AND A/C AMP.
Connector Type TH32PW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
41	Y	ACC POWER SUPPLY
41	V	FUEL SENSOR SIGNAL
43	P	INTAKE SENSOR SIGNAL
44	LG	IN-VEHICLE SENSOR SIGNAL
45	P	AMBIENT SENSOR SIGNAL
46	BG	SUNLOAD SENSOR SIGNAL
47	G	EXHAUST GAS / OUTSIDE COOR DETECTING SENSOR SIGNAL
53	G	IGNITION POWER SUPPLY
54	Y	BATTERY POWER SUPPLY
55	B	GROUND
56	L	GROUND
57	W	GROUND
58	BR	GROUND
59	GR	GROUND
60	BR	GROUND
62	SB	GROUND
63	R	GROUND
65	BG	GROUND
69	L	A/C LAN SIGNAL
70	R	EACH DOOR MOTOR POWER SUPPLY
71	B	GROUND
72	P	GROUND

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P


A/T CONTROL SYSTEM

Connector No.	M89
Connector Name	BACK-UP LAMP RELAY
Connector Type	M50ZF-AMZ-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
2	W	-
3	R	-
5	BG	-


Connector No.	M116
Connector Name	WIRE TO WIRE
Connector Type	TK36MW-NS10



Terminal No.	Color Of Wire	Signal Name [Specification]
2	P	-
3	L	-
4	R	-
5	B	-
9	R	-
10	BG	-
20	G	-
28	B	-
29	LG	-
31	W	-
33	B	-
34	B	-
35	L	-
36	P	-
37	Y	-


38	G	-
43	P	-
44	L	-
45	BR	-
46	BG	-

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	BAT (P/L)
2	W	POWER WINDOW POWER SUPPLY(BAT)
3	Y	POWER WINDOW POWER SUPPLY(IGAP)


Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
4	LG	INTERIOR ROOM LAMP POWER SUPPLY
5	L	PASSENGER DOOR UNLOCK OUTPUT
7	Y	STEER LAMP CONT
8	V	ALL DOOR FUEL LID LOCK OUTPUT
9	G	DRIVER DOOR FUEL LID UNLOCK OUTPUT
10	BR	REAR DOOR UNLOCK OUTPUT
11	R	BAT (FUSE)
13	B	GROUND
14	W	PUSH-BUTTON IGNITION SW ILL GND
15	Y	ACC IND

17	W	TURN SIGNAL RH (FRONT)
18	BG	TURN SIGNAL LH (FRONT)
19	V	INT ROOM LAMP CONT

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
72	R	ROOM ANTZ -
73	G	ROOM ANTZ +
74	SB	PASSENGER DOOR ANT-
75	GR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	LG	ROOM ANT1 -
79	BR	ROOM ANT1 +
80	GR	MATS ANT AMP
81	W	MATS ANT AMP
82	R	IGN RELAY (F/B) CONT
83	Y	KEYLESS ENTRY RECEIVER COMM
87	BR	COMBI SW INPUT 5
88	V	COMBI SW INPUT 3
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL CONT
93	V	ON IND
94	Y	PUDDLE LAMP CONT
95	BG	ACC RELAY CONT
96	GR	A/T SHIFT SELECTOR POWER SUPPLY
97	R	PASSENGER DOOR REQUEST SW
100	G	DRIVER DOOR REQUEST SW
101	SB	DRIVER DOOR REQUEST SW
102	BG	BLOWER FAN MOTOR RELAY CONT
103	LG	KEYLESS ENTRY RECEIVER POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	Y	COMBI SW INPUT 2
110	G	HAZARD SW

Connector No.	M125
Connector Name	WIRE TO WIRE
Connector Type	M03FW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	Y	-
3	R	-


Connector No.	M126
Connector Name	WIRE TO WIRE
Connector Type	M03MW-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	Y	-
3	R	-


A/T CONTROL SYSTEM

Connector No.	M1321
Connector Name	A/T SHIFT SELECTOR
Connector Type	TH12FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	V	-
3	L	-
4	B	-
5	G	-
6	R	-
7	SB	-
8	B	-
9	GR	-
10	GR	-
11	R	-

Connector No.	M221
Connector Name	SHIFT POSITION SWITCH
Connector Type	TH12FW




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	-	N
3	-	B
4	-	P
5	-	L
6	-	M
7	-	AT
8	-	MT
9	-	ILL
10	-	-
11	-	GROUND

Connector No.	M223
Connector Name	SELECTOR LEVER POSITION INDICATOR
Connector Type	XARF-09V



Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	ILL
2	-	MT
3	-	N
4	-	D
5	-	R
6	-	M
7	-	P
8	-	AT
9	-	GROUND


Connector No.	M551
Connector Name	JOINT CONNECTOR-M04
Connector Type	MH2FW-J



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BG	-
2	B	-
3	B	-
4	L	-
5	L	-
6	L	-
7	P	-
8	L	-
9	L	-
10	W	-
11	P	-
12	L	-
13	L	-
14	B	-


15	P	-
16	L	-
17	V	-
18	B	-
19	P	-
20	L	-
21	V	-
22	P	-
23	B	-
24	L	-

Connector No.	M353
Connector Name	JOINT CONNECTOR-M02
Connector Type	SGA28FD0Y-J




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	V	- [Without BOSE system]
3	V	- [With BOSE system]
4	BG	-
5	G	-
6	R	-
7	V	-
8	BG	-
9	G	-
10	R	-
11	V	-
13	W	-
14	R	-
17	W	-
19	W	-
21	W	-
22	R	-
23	V	-
26	R	-
27	G	-

Connector No.	M354
Connector Name	JOINT CONNECTOR-M15
Connector Type	SGA28FD0Y-J




Terminal No.	Color Of Wire	Signal Name [Specification]
7	W	-
8	B	-
11	G	-
12	B	-
23	W	-
24	B	-
27	G	-

Connector No.	M358
Connector Name	JOINT CONNECTOR-M14
Connector Type	SGA28F5B-J



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	- [Without BOSE system]
1	V	- [With BOSE system]
2	LG	- [With BOSE system]
2	R	- [Without BOSE system]
3	R	-
4	B	-
5	BR	- [Without BOSE system]
5	V	- [With BOSE system]
6	LG	- [With BOSE system]
6	R	- [Without BOSE system]
7	B	-
8	B	-

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

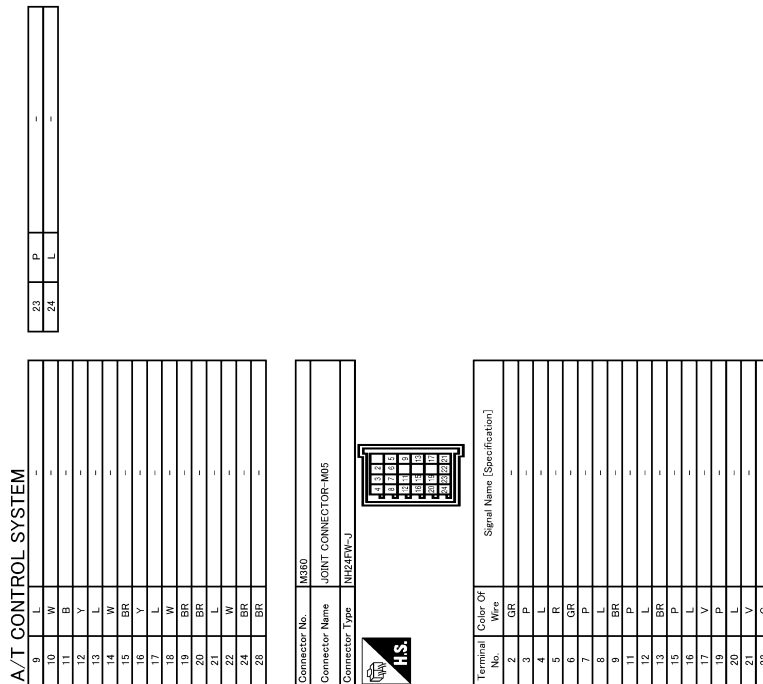

JRDWC6475GB

INFOID:000000012167605

Fail-Safe

TCM has the electrical fail-safe mode. The mode is divided into a maximum of 3 phases (1st fail-safe, 2nd fail-safe and final fail-safe) and functions so that the operation can be continued even if the signal circuit of the main electronically controlled input/output parts is damaged.

Even if the electronic circuit is normal, the fail-safe mode may start under special conditions (such as when the brake pedal is depressed suddenly from a hard wheel spin status to stop the rotation of wheels). In this case, turn the ignition switch OFF and back to ON after 5 seconds to resume the normal shift pattern.

Consequently, the customer's vehicle may already return to the normal condition. Refer to [TM-5, "Work Flow"](#).

1st fail-safe	The mode that the vehicle can stop safely, to prompt the driver to stop if the malfunction occurs and to shift to 2nd fail-safe early. It shifts to 2nd fail-safe or final fail-safe after the vehicle stopped.
2nd fail-safe	The mode that the vehicle shifts to final fail-safe without changing the behavior, by identifying the malfunctioning parts in the condition that the driving force required for the driving is secured.
Final fail-safe	<ul style="list-style-type: none"> • Selects the shifting pattern that the malfunctioning parts identified at 1st fail-safe and 2nd fail-safe are not used, and then secure the driving force that is required for the driving. • The mode that the shifting performance does not decrease by normal shift control.

FAIL-SAFE FUNCTION

DTC	Vehicle condition	Vehicle behavior for 1st fail-safe	Vehicle behavior for 2nd fail-safe	Vehicle behavior for final fail-safe
P0615	—	Starter is disabled	—	Starter is disabled
P0705	—	<ul style="list-style-type: none"> • Fixed in the "D" position (The shifting can be performed) • Lock-up is prohibited when 30 km/h (19 MPH) or less • The shifting between the gears of 3 - 4 - 5 - 6 - 7 can be performed • Manual mode is prohibited • Shift position indicator is switched OFF • Starter relay is switched OFF (starter is disabled) • Back-up lamp is OFF • Large shift shock 	—	<ul style="list-style-type: none"> • Fixed in the "D" position (The shifting can be performed) • Lock-up is prohibited when 30 km/h (19 MPH) or less • The shifting between the gears of 3 - 4 - 5 - 6 - 7 can be performed • Manual mode is prohibited • Shift position indicator is switched OFF • Starter relay is switched OFF (starter is disabled) • Back-up lamp is OFF • Large shift shock
P0710	Between the gears of 1 - 2 - 3	<ul style="list-style-type: none"> • The shifting between the gears of 1 - 2 - 3 can be performed • Manual mode is prohibited 	—	<ul style="list-style-type: none"> • The shifting between the gears of 1 - 2 - 3 can be performed • Manual mode is prohibited
	Between the gears of 4 - 5 - 6 - 7	<ul style="list-style-type: none"> • Fix the gear while driving • Manual mode is prohibited 	—	
P0717	Between the gears of 1 - 2 - 3	<ul style="list-style-type: none"> • The shifting between the gears of 1 - 2 - 3 can be performed • Manual mode is prohibited 	—	<ul style="list-style-type: none"> • The shifting between the gears of 1 - 2 - 3 can be performed • Manual mode is prohibited
	Between the gears of 4 - 5 - 6 - 7	<ul style="list-style-type: none"> • Fix the gear while driving • Manual mode is prohibited 	—	
P0720	Between the gears of 1 - 2 - 3	<ul style="list-style-type: none"> • Only downshift can be performed • Manual mode is prohibited • A vehicle speed signal from the unified meter and A/C amp. is regarded as an effective signal 	—	<ul style="list-style-type: none"> • The shifting between the gears of 1 - 2 - 3 can be performed • Manual mode is prohibited
	Between the gears of 4 - 5 - 6 - 7	<ul style="list-style-type: none"> • Fix the gear at driving • Manual mode is prohibited • A vehicle speed signal from the unified meter and A/C amp. is regarded as an effective signal 	—	

TCM

< ECU DIAGNOSIS INFORMATION >

[7AT: RE7R01A]

DTC	Vehicle condition		Vehicle behavior for 1st fail-safe	Vehicle behavior for 2nd fail-safe	Vehicle behavior for final fail-safe
P0729 P0731 P0732 P0733 P0734 P0735 P1734	Small gear ratio difference		Engine torque limit: Max 150 Nm	—	Engine torque limit: Max 150 Nm
	Great gear ratio difference	Neutral malfunction between the gears of 1 - 2 - 3 and 7	<ul style="list-style-type: none"> Locks in 2GR, 3GR or 4GR Manual mode is prohibited 	—	<ul style="list-style-type: none"> Locks in 1GR The shifting between the gears of 1 - 2 can be performed The shifting between the gears of 1 - 2 - 3 can be performed The shifting between the gears of 4 - 5 - 6 can be performed Manual mode is prohibited
		Other than the above	<ul style="list-style-type: none"> Locks in 1GR, 2GR, 3GR, 4GR, 5GR or 6GR Fix the gear while driving Manual mode is prohibited 	<ul style="list-style-type: none"> The shifting between the gears of 1 - 2 - 3 can be performed Manual mode is prohibited 	<ul style="list-style-type: none"> Locks in 1GR The shifting between the gears of 1 - 2 can be performed The shifting between the gears of 1 - 2 - 3 can be performed The shifting between the gears of 2 - 3 - 4 can be performed The shifting between the gears of 3 - 4 can be performed The shifting between the gears of 4 - 5 - 6 can be performed Manual mode is prohibited
P0730	—		<ul style="list-style-type: none"> Locks in 5GR, 6GR or 7GR Manual mode is prohibited 	<ul style="list-style-type: none"> The shifting between the gears of 1 - 2 - 3 can be performed Manual mode is prohibited 	<ul style="list-style-type: none"> Locks in 1GR The shifting between the gears of 1 - 2 can be performed The shifting between the gears of 1 - 2 - 3 can be performed Manual mode is prohibited
P0740	—		<ul style="list-style-type: none"> Lock-up is prohibited Slip lock-up is prohibited 	—	<ul style="list-style-type: none"> Lock-up is prohibited Slip lock-up is prohibited
P0744	—		<ul style="list-style-type: none"> Lock-up is prohibited Slip lock-up is prohibited 	—	<ul style="list-style-type: none"> Lock-up is prohibited Slip lock-up is prohibited
P0750 P0775 P0795 P2713 P2722 P2731 P2807	—		<ul style="list-style-type: none"> Locks in 2GR, 3GR, 4GR, 5GR, 6GR or 7GR Manual mode is prohibited 	—	<ul style="list-style-type: none"> Locks in 1GR The shifting between the gears of 1 - 2 - 3 can be performed The shifting between the gears of 3 - 4 - 5 can be performed The shifting between the gears of 4 - 5 - 6 can be performed The shifting between the gears of 1 - 2 - 3 - 4 - 5 - 6 can be performed Manual mode is prohibited
P0780	—		<ul style="list-style-type: none"> Locks in 3GR Manual mode is prohibited 	—	<ul style="list-style-type: none"> The shifting between the gears of 1 - 2 - 3 can be performed Manual mode is prohibited

DTC	Vehicle condition	Vehicle behavior for 1st fail-safe	Vehicle behavior for 2nd fail-safe	Vehicle behavior for final fail-safe
P1705	—	<ul style="list-style-type: none"> Downshift when accelerator pedal is depressed is prohibited Upshift when accelerator pedal is released is prohibited Manual mode is prohibited 	<ul style="list-style-type: none"> Downshift when accelerator pedal is depressed is prohibited Upshift when accelerator pedal is released is prohibited Manual mode is prohibited 	<ul style="list-style-type: none"> Downshift when accelerator pedal is depressed is prohibited Upshift when accelerator pedal is released is prohibited Manual mode is prohibited
P1730	—	<ul style="list-style-type: none"> Locks in 1GR, 2GR, 3GR, 4GR, 5GR, 6GR or 7GR Manual mode is prohibited 	<ul style="list-style-type: none"> The shifting between the gears of 1 - 2 - 3 can be performed Manual mode is prohibited 	<ul style="list-style-type: none"> Locks in 1GR The shifting between the gears of 2 - 3 - 4 can be performed The shifting between the gears of 3 - 4 can be performed The shifting between the gears of 4 - 5 - 6 can be performed Manual mode is prohibited
P1815	—	Manual mode is prohibited	—	Manual mode is prohibited
U0100 U0300 U1000	Between the gears of 1 - 2 - 3	<ul style="list-style-type: none"> The shifting between the gears of 1 - 2 - 3 can be performed Manual mode is prohibited 	—	<ul style="list-style-type: none"> The shifting between the gears of 1 - 2 - 3 can be performed Line pressure is set to the maximum hydraulic pressure Manual mode is prohibited
	Between the gears of 4 - 5 - 6 - 7	<ul style="list-style-type: none"> Fix the gear at driving Manual mode is prohibited 	—	<ul style="list-style-type: none"> Manual mode is prohibited
P0720 and P1721	—	Locks in 5GR	—	Locks in 5GR

Protection Control

INFOID:000000012167806

The TCM becomes the protection control status temporarily to protect the safety when the safety of TCM and transmission is lost. It automatically returns to the normal status if the safety is secured.

The TCM has the following protection control.

REVERSE INHIBIT CONTROL

Intercepts the torque transmission and shift to the neutral status if the selector lever is shifted to "R" position while the vehicle moves forward at the vehicle speed 10 km/h (7 MPH) or more.

Malfunction detection condition	Vehicle speed: 10 km/h (7 MPH) or more
Control at malfunction	Neutral
Normal return condition	<ul style="list-style-type: none"> Vehicle speed: 8 km/h (5 MPH) or less and Engine speed: 2,200 rpm or less
Vehicle behavior	<ul style="list-style-type: none"> The torque transmission cannot be performed There is a shock just before a vehicle stop

1ST ENGINE BRAKE PROTECTION CONTROL

Controls the engine brake so as not to make effective by turning the front brake solenoid output to OFF when each solenoid becomes the electricity pattern of 1st engine brake during driving at the vehicle speed 25 km/h or more in any positions other than "R" position and 1GR.

Malfunction detection condition	<ul style="list-style-type: none"> Select lever and gear: Any position other than "R" position and 1GR and Vehicle speed: More than 25 km/h (16 MPH)
Control at malfunction	Front brake solenoid output signal; OFF

TCM

< ECU DIAGNOSIS INFORMATION >

[7AT: RE7R01A]

Normal return condition	Other than detection condition of malfunction
Vehicle behavior	Does not exist

TCM HIGH TEMPERATURE PROTECTION CONTROL

Limit the accelerator opening and forcibly control the vehicle to the low torque driving when the electronic substrate in TCM reaches the high temperature.

Malfunction detection condition	TCM electronic substrate temperature <ul style="list-style-type: none"> • 145°C (293°F) and 120 seconds or • 150°C (302°F)
Control at malfunction	Accelerator opening: 0.5/8 or less
Normal return condition	<ul style="list-style-type: none"> • TCM electronic substrate temperature: Less than 140°C (284°F) and • Vehicle speed: 5 km/h (3 MPH) or less
Vehicle behavior	Accelerator opening: output torque of approximately 0.5/8

DTC Inspection Priority Chart

INFOID:000000012167607

If some DTCs are displayed at the same time, perform inspections one by one based on the priority as per the following list.

Priority	Detected items (DTC)	Reference
1	U0100 LOST COMM (ECM A)	TM-69, "DTC Logic"
	U1000 CAN COMM CIRCUIT	TM-71, "DTC Logic"
2	P0615 STARTER RELAY	TM-72, "DTC Logic"
	P0705 T/M RANGE SENSOR A	TM-74, "DTC Logic"
	P0710 FLUID TEMP SENSOR A	TM-76, "DTC Logic"
	P0717 INPUT SPEED SENSOR A	TM-79, "DTC Logic"
	P0720 OUTPUT SPEED SENSOR	TM-81, "DTC Logic"
	P0740 TORQUE CONVERTER	TM-99, "DTC Logic"
	P0745 PC SOLENOID A	TM-103, "DTC Logic"
	P0750 SHIFT SOLENOID A	TM-104, "DTC Logic"
	P0775 PC SOLENOID B	TM-105, "DTC Logic"
	P0795 PC SOLENOID C	TM-108, "DTC Logic"
	P2713 PC SOLENOID D	TM-120, "DTC Logic"
	P2722 PC SOLENOID E	TM-121, "DTC Logic"
	P2731 PC SOLENOID F	TM-122, "DTC Logic"
P2807 PC SOLENOID G	TM-123, "DTC Logic"	
3	P0729 6GR INCORRECT RATIO	TM-85, "DTC Logic"
	P0730 INCORRECT GR RATIO	TM-87, "DTC Logic"
	P0731 1GR INCORRECT RATIO	TM-89, "DTC Logic"
	P0732 2GR INCORRECT RATIO	TM-91, "DTC Logic"
	P0733 3GR INCORRECT RATIO	TM-93, "DTC Logic"
	P0734 4GR INCORRECT RATIO	TM-95, "DTC Logic"
	P0735 5GR INCORRECT RATIO	TM-97, "DTC Logic"
	P0744 TORQUE CONVERTER	TM-101, "DTC Logic"
	P0780 SHIFT	TM-106, "DTC Logic"
	P1730 INTERLOCK	TM-113, "DTC Logic"
	P1734 7GR INCORRECT RATIO	TM-115, "DTC Logic"

TCM

< ECU DIAGNOSIS INFORMATION >

[7AT: RE7R01A]

Priority	Detected items (DTC)	Reference
4	U0300 CAN COMM DATA	TM-70, "DTC Logic"
	P0725 ENGINE SPEED	TM-83, "DTC Logic"
	P1705 TP SENSOR	TM-109, "DTC Logic"
	P1721 VEHICLE SPEED SIGNAL	TM-111, "DTC Logic"
	P1815 M-MODE SWITCH	TM-117, "DTC Logic"

DTC Index

INFOID:000000012167608

NOTE:

- If some DTCs are displayed at the same time, perform inspections one by one based on the priority as per the following list. Refer to [TM-156, "DTC Inspection Priority Chart"](#).
- The IGN counter is indicated in Freeze frame data (FFD). Refer to [TM-63, "CONSULT Function"](#).

Items (CONSULT screen terms)	DTC*2		Reference page
	MIL*1, "ENGINE" with CONSULT or GST	CONSULT only "TRANS- MISSION"	
STARTER RELAY	—	P0615	TM-72, "DTC Logic"
T/M RANGE SENSOR A	P0705	P0705	TM-74, "DTC Logic"
FLUID TEMP SENSOR A	P0710	P0710	TM-76, "DTC Logic"
INPUT SPEED SENSOR A	P0717	P0717	TM-79, "DTC Logic"
OUTPUT SPEED SENSOR	P0720	P0720	TM-81, "DTC Logic"
ENGINE SPEED	—	P0725	TM-83, "DTC Logic"
6GR INCORRECT RATIO	P0729	P0729	TM-85, "DTC Logic"
INCORRECT GR RATIO	P0730	P0730	TM-87, "DTC Logic"
1GR INCORRECT RATIO	P0731	P0731	TM-89, "DTC Logic"
2GR INCORRECT RATIO	P0732	P0732	TM-91, "DTC Logic"
3GR INCORRECT RATIO	P0733	P0733	TM-93, "DTC Logic"
4GR INCORRECT RATIO	P0734	P0734	TM-95, "DTC Logic"
5GR INCORRECT RATIO	P0735	P0735	TM-97, "DTC Logic"
TORQUE CONVERTER	P0740	P0740	TM-99, "DTC Logic"
TORQUE CONVERTER	P0744	P0744	TM-101, "DTC Logic"
PC SOLENOID A	P0745	P0745	TM-103, "DTC Logic"
SHIFT SOLENOID A	P0750	P0750	TM-104, "DTC Logic"
PC SOLENOID B	P0775	P0775	TM-105, "DTC Logic"
SHIFT	P0780	P0780	TM-106, "DTC Logic"
PC SOLENOID C	P0795	P0795	TM-108, "DTC Logic"
TP SENSOR	—	P1705	TM-109, "DTC Logic"
VEHICLE SPEED SIGNAL	—	P1721	TM-111, "DTC Logic"
INTERLOCK	P1730	P1730	TM-113, "DTC Logic"
7GR INCORRECT RATIO	P1734	P1734	TM-115, "DTC Logic"
M-MODE SWITCH	—	P1815	TM-117, "DTC Logic"
PC SOLENOID D	P2713	P2713	TM-120, "DTC Logic"
PC SOLENOID E	P2722	P2722	TM-121, "DTC Logic"
PC SOLENOID F	P2731	P2731	TM-122, "DTC Logic"
PC SOLENOID G	P2807	P2807	TM-123, "DTC Logic"
LOST COMM (ECM A)	U0100	U0100	TM-69, "DTC Logic"

TCM

< ECU DIAGNOSIS INFORMATION >

[7AT: RE7R01A]

Items (CONSULT screen terms)	DTC*2		Reference page
	MIL *1, "ENGINE" with CONSULT or GST	CONSULT only "TRANS- MISSION"	
CAN COMM DATA	—	U0300	TM-70. "DTC Logic"
CAN COMM CIRCUIT	—	U1000	TM-71. "DTC Logic"

*1: Refer to [TM-62. "Diagnosis Description"](#).

*2: These numbers are prescribed by SAE J2012.

SYMPTOM DIAGNOSIS

SYSTEM SYMPTOM

Symptom Table

INFOID:000000012167609

- The diagnostics item numbers show the sequence for inspection. Inspect in order from item 1.
- Perform diagnoses of symptom table 1 before symptom table 2.

SYMPTOM TABLE 1

Symptom			Diagnostic item																									
			IM-181	IM-81	IM-111	IM-109	IM-83	IM-79	IM-76	IM-125	IM-74	IM-117	SEC-47	IM-103	IM-99	IM-121	IM-108	IM-120	IM-105	IM-123	IM-122	IM-104	IM-72	IM-71				
Poor performance	Driving performance	Shift point is high in "D" position.	1	2		3																						
		Shift point is low in "D" position.	1	2																								
		Large shock	When shifting gears	→ "D" position	4	7	6	6	5			3	2										3				1	
				→ "R" position	4	7	6	6	5			3									2							1
				1GR ⇔ 2GR	4	2	5	4	4															3				1
				2GR ⇔ 3GR	4	2	5	4	4													3						1
				3GR ⇔ 4GR	4	2	5	4	4									3		3								1
				4GR ⇔ 5GR	4	2	5	4	4												3		3					1
				5GR ⇔ 6GR	4	2	5	4	4													3	3					1
				6GR ⇔ 7GR	4	2	5	4	4											3				3				1
			Downshift when accelerator pedal is depressed	3	2	4	3	3																		1		
			Upshift when accelerator pedal is released	3	2	4	3	3																		1		
			Lock-up	4	2	4	4	4							3											1		
		Judder	Lock-up			2	1	1	4						3													
	Strange noise	In "R" position		2		1																						
In "N" position		2		1																								
In "D" position		2		1																								
Engine at idle		2		1																								

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[7AT: RE7R01A]

		Symptom	Diagnostic item																										
			TM-181	TM-81	TM-111	TM-109	TM-83	TM-79	TM-76	TM-125	TM-74	TM-117	SEC-47	TM-103	TM-99	TM-121	TM-108	TM-120	TM-105	TM-123	TM-122	TM-104	TM-72	TM-71					
Function trouble	Gear does not change	"D" position	Locks in 1GR	1																									
			Locks in 2GR																										
			Locks in 3GR																										
			Locks in 4GR																										
			Locks in 5GR							1																			
			Locks in 6GR																										
			Locks in 7GR																										
			1GR → 2GR		1													1		1		1							
			2GR → 3GR																				1						
			3GR → 4GR			2			2	2								2	2	2	2							1	
		4GR → 5GR																					1	1					
		5GR → 6GR																					1						
		6GR → 7GR															1	1	1	1				1					
		5GR → 4GR																			1								
		4GR → 3GR															1		1						1				
		3GR → 2GR										1												1					
		2GR → 1GR										1											1	1					
		Does not lock-up			2		2	2	2	4	5		3	2	2	2	2	2	2	2	2	2	2	2	2	2	1		
		"M" position	1GR ⇔ 2GR		3			3	3		3	2		3	3	3	3	3	3	3	3	3	3	3	3	3	1		
			2GR ⇔ 3GR		3			3	3		3	2		3	3	3	3	3	3	3	3	3	3	3	3	3	1		
	3GR ⇔ 4GR			3			3	3		3	2		3	3	3	3	3	3	3	3	3	3	3	3	3	1			
	4GR ⇔ 5GR			3			3	3		3	2		3	3	3	3	3	3	3	3	3	3	3	3	3	1			
	5GR ⇔ 6GR			3			3	3		3	2		3	3	3	3	3	3	3	3	3	3	3	3	3	1			
	6GR ⇔ 7GR			3			3	3		3	2		3	3	3	3	3	3	3	3	3	3	3	3	3	1			

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[7AT: RE7R01A]

Symptom				Diagnostic item																									
				TM-181	TM-81	TM-111	TM-109	TM-83	TM-79	TM-76	TM-125	TM-74	TM-117	SEC-47	TM-103	TM-99	TM-121	TM-108	TM-120	TM-105	TM-123	TM-122	TM-104	TM-72	TM-71				
Function trouble	Poor shifting	Slip	When shifting gears	1GR ⇔ 2GR	3			3	3	4							2									1			
				2GR ⇔ 3GR	3			3	3	4								2									1		
				3GR ⇔ 4GR	3			3	3	4								2	2		2					2		1	
				4GR ⇔ 5GR	3			3	3	4								2				2						1	
				5GR ⇔ 6GR	3			3	3	4								2					2					1	
				6GR ⇔ 7GR	3			3	3	4								2			2							1	
					"D" position → "M" position	5				5	5	6		4	2			3									1		
				Engine brake does not work	"M" position	7GR → 6GR	5			5	5	6		4	2			3									1		
						6GR → 5GR	5			5	5	6		4	2			3						3	3			1	
						5GR → 4GR	5			5	5	6		4	2			3					3						1
						4GR → 3GR	5			5	5	6		4	2			3			3						3		1
						3GR → 2GR	5			5	5	6		4	2			3					3						1
						2GR → 1GR	5			5	5	6		4	2			3										3	

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[7AT: RE7R01A]

			Symptom	Diagnostic item																							
				IM-181	IM-81	IM-111	IM-109	IM-83	IM-79	IM-76	IM-125	IM-74	IM-117	SEC-47	IM-103	IM-99	IM-121	IM-108	IM-120	IM-105	IM-123	IM-122	IM-104	IM-72	IM-71		
Func- tion trou- ble	Poor power trans- mission	Slip	With selector lever in "D" position, acceleration is extremely poor.	5	3			3	3	4					2		2						2		1		
			With selector lever in "R" position, acceleration is extremely poor.	5	3			3	3	4						2						2			2		1
			While starting off by accelerating in 1GR, engine races.		3			3	3	4						2		2							2		1
			While accelerating in 2GR, engine races.		3			3	3	4						2		2						2	2		1
			While accelerating in 3GR, engine races.		3			3	3	4						2		2				2	2				1
			While accelerating in 4GR, engine races.		3			3	3	4						2			2			2	2				1
			While accelerating in 5GR, engine races.		3			3	3	4						2			2	2	2			2	2		1
			While accelerating in 6GR, engine races.		3			3	3	4						2			2	2		2	2		2	2	1
			While accelerating in 7GR, engine races.		3			3	3	4						2			2	2	2				2		1
			Lock-up		3			3	3	4						2	2										1
			No creep at all.														1	1	1	1	1	1	1	1	1	1	
			Extremely large creep.					1																			

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[7AT: RE7R01A]

Symptom			Diagnostic item																							
			Control cable	Output speed sensor	Vehicle speed signal	Accelerator pedal position sensor	Engine speed signal	Input speed sensor	A/T fluid temperature sensor	Battery voltage	Transmission range switch	Manual mode switch	Stop lamp switch	Line pressure solenoid valve	Torque converter clutch solenoid valve	Low brake solenoid valve	Front brake solenoid valve	High and low reverse clutch solenoid valve	Input clutch solenoid valve	Direct clutch solenoid valve	2346 brake solenoid valve	Anti-interlock solenoid valve	Starter relay	CAN communication		
Function trouble	Power transmission cannot be performed	Vehicle cannot run in all position.	3								2			1	1	1	1	1	1	1	1	1				
		Driving is not possible in "D" position.	3								2			1	1	1	1	1	1	1	1	1				
		Driving is not possible in "R" position.	3								2			1						1			1			
		Engine stall		4	5	5				6			3		2									1		
		Engine stalls when selector lever shifted "N" → "D" or "R".		4	5	5					3				2										1	
		Engine does not start in "N" or "P" position.		3						1	2														1	
		Engine starts in position other than "N" or "P".		3							2														1	
	Poor operation	Vehicle does not enter parking condition.		1								2														
		Parking condition is not cancelled.		1								2														
		Vehicle runs with A/T in "P" position.		1								2														
		Vehicle moves forward with the "R" position.		1								2														
		Vehicle runs with A/T in "N" position.		1								2														
		Vehicle moves backward with the "D" position.		1								2														

SYMPTOM TABLE 2

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[7AT: RE7R01A]

Symptom			Diagnostic item													Parking component		
			Oil pump	Torque converter	Low brake*	Front brake	High and low reverse clutch	Input clutch	Direct clutch	2346 brake	Reverse brake	1st one-way clutch	2nd one-way clutch	gear	control valve			
Poor performance	Driving performance	Shift point is high in "D" position.																
		Shift point is low in "D" position.																
		Large shock	When shifting gears	→ "D" position	1	2												2
				→ "R" position	1							1						2
				1GR ⇔ 2GR								1						2
				2GR ⇔ 3GR							1						2	
				3GR ⇔ 4GR			2	1									2	
				4GR ⇔ 5GR					1		1					2		
				5GR ⇔ 6GR						1	1					2		
				6GR ⇔ 7GR				1				1					2	
		Downshift when accelerator pedal is depressed				2	1	1	1	1	1		1	1		2		
		Upshift when accelerator pedal is released				2	1	1	1	1	1		1	1		2		
	Lock-up				1										2			
	Judder		Lock-up												2			
	Strange noise	In "R" position		1	1							1			1	2		
		In "N" position		1	1										1	2		
		In "D" position		1	1	1									1	2		
		Engine at idle		1	1										1	2		

*: Parts behind drum support is impossible to perform inspection by disassembly. Refer to [TM-31, "Cross-Sectional View"](#).

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[7AT: RE7R01A]

Symptom			Diagnostic item															
			Oil pump	Torque converter	Low brake*	Front brake	High and low reverse clutch	Input clutch	Direct clutch	2346 brake	Reverse brake	1st one-way clutch	2nd one-way clutch	gear	control valve	Parking component		
			TM-276	TM-217	TM-217	TM-217	TM-298	TM-288	TM-300	TM-276	TM-217	TM-217	TM-293	TM-217	TM-186	TM-191 (2WD) TM-217 (AWD)		
Function trouble	Gear does no change	"D" position	Locks in 1GR				1		1		1					2		
			Locks in 2GR														1	
			Locks in 3GR															1
			Locks in 4GR															1
			Locks in 5GR															1
			Locks in 6GR															1
			Locks in 7GR															1
			1GR → 2GR				1		1		1							2
			2GR → 3GR									1						2
			3GR → 4GR			2	1	1	1									2
			4GR → 5GR								1	1						2
			5GR → 6GR								1							2
			6GR → 7GR			2	1	1	1									2
			5GR → 4GR							1								2
			4GR → 3GR			2		1										2
			3GR → 2GR								1				1			2
		2GR → 1GR								1	1		1				2	
		Does not lock-up			1	2	1	1	1	1	1	1		1	1		2	
		"M" position	1GR ⇔ 2GR			2	1	1	1	1	1	1		1	1		2	
			2GR ⇔ 3GR			2	1	1	1	1	1	1		1	1		2	
			3GR ⇔ 4GR			2	1	1	1	1	1	1		1	1		2	
			4GR ⇔ 5GR			2	1	1	1	1	1	1		1	1		2	
			5GR ⇔ 6GR			2	1	1	1	1	1	1		1	1		2	
			6GR ⇔ 7GR			2	1	1	1	1	1	1		1	1		2	

*: Parts behind drum support is impossible to perform inspection by disassembly. Refer to [TM-31. "Cross-Sectional View"](#).

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[7AT: RE7R01A]

Symptom				Diagnostic item														
				Oil pump	Torque converter	Low brake*	Front brake	High and low reverse clutch	Input clutch	Direct clutch	2346 brake	Reverse brake	1st one-way clutch	2nd one-way clutch	gear	control valve	Parking component	
				TM-276	TM-217	TM-217	TM-217	TM-298	TM-288	TM-300	TM-276	TM-217	TM-217	TM-293	TM-217	TM-186	TM-191 (2WD) TM-217 (AWD)	
Function trouble	Poor shifting	Slip	When shifting gears	1GR ⇔ 2GR	1						1		1			2		
				2GR ⇔ 3GR	1					1							2	
				3GR ⇔ 4GR	1		2	1									2	
				4GR ⇔ 5GR	1				1		1						2	
				5GR ⇔ 6GR	1					1	1						2	
				6GR ⇔ 7GR	1			1			1						2	
	En- gine brake does not work			"D" position → "M" position	1			1	1					1	1		2	
				7GR → 6GR	1			1				1					2	
				6GR → 5GR	1						1	1					2	
				5GR → 4GR	1					1		1					2	
				4GR → 3GR	1		2	1									2	
				3GR → 2GR	1			1		1			1	1			2	
				2GR → 1GR	1			1				1		1			2	

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[7AT: RE7R01A]

Symptom				Diagnostic item															
				Oil pump	Torque converter	Low brake*	Front brake	High and low reverse clutch	Input clutch	Direct clutch	2346 brake	Reverse brake	1st one-way clutch	2nd one-way clutch	gear	control valve	Parking component		
				TM-276	TM-217	TM-217	TM-217	TM-298	TM-288	TM-300	TM-276	TM-217	TM-217	TM-293	TM-217	TM-186	TM-191 (2WD) TM-217 (AWD)		
Function trouble	Poor power transmission	Slip	With selector lever in "D" position, acceleration is extremely poor.	1	1	2								1		1	2		
			With selector lever in "R" position, acceleration is extremely poor.	1	1										1	1	1	1	2
			While starting off by accelerating in 1GR, engine races.	1	1	2										1	1	1	2
			While accelerating in 2GR, engine races.	1		2							1				1	1	2
			While accelerating in 3GR, engine races.	1		2				1	1						1	1	2
			While accelerating in 4GR, engine races.	1				1		1	1						1	1	2
			While accelerating in 5GR, engine races.	1				1	1	1							1	1	2
			While accelerating in 6GR, engine races.	1				1	1		1						1	1	2
			While accelerating in 7GR, engine races.	1			1	1	1										2
			Lock-up	1	1													1	2
			No creep at all.	1	1	2	1	1	1	1	1			1	1	1	1	2	1
			Extremely large creep.		1														

*: Parts behind drum support is impossible to perform inspection by disassembly. Refer to [TM-31, "Cross-Sectional View"](#).

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

SYSTEM SYMPTOM

< SYMPTOM DIAGNOSIS >

[7AT: RE7R01A]

Symptom			Diagnostic item														
			Oil pump	Torque converter	Low brake*	Front brake	High and low reverse clutch	Input clutch	Direct clutch	2346 brake	Reverse brake	gear	1st one-way clutch	2nd one-way clutch	control valve	Parking component	
			TM-276	TM-217	TM-217	TM-217	TM-298	TM-288	TM-300	TM-276	TM-217	TM-217	TM-217	TM-293	TM-186	TM-191 (2WD) TM-217 (AWD)	
Function trouble	Power transmission cannot be performed	Vehicle cannot run in all position.	1	1	2	1	1	1	1	1			1	2	1		
		Driving is not possible in "D" position.	1	1	2	1	1	1	1	1		1	1	1	2	1	
		Driving is not possible in "R" position.	1									1	1	1	1	2	1
		Engine stall		1													
		Engine stalls when selector lever shifted "N" → "D" or "R".		1													
		Engine does not start in "N" or "P" position.		1													
	Poor operation	Vehicle does not enter parking condition.															1
		Parking condition is not cancelled.															1
		Vehicle runs with A/T in "P" position.			2	1	1	1	1	1	1	1			2	1	
		Vehicle moves forward with the "R" position.			2	1	1	1	1	1	1				2		
		Vehicle runs with A/T in "N" position.			2	1	1	1	1	1	1	1			2		
		Vehicle moves backward with the "D" position.										1			2		

*: Parts behind drum support is impossible to perform inspection by disassembly. Refer to [TM-31, "Cross-Sectional View"](#).

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000012167610

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, it is recommended that all maintenance and repair be performed by an authorized NISSAN/INFINITI dealer.
- Improper repair, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery or batteries, and wait at least 3 minutes before performing any service.

On Board Diagnostic (OBD) System of Engine and A/T

INFOID:000000012814082

The ECM has an on board diagnostic system. It will illuminate the malfunction indicator lamp (MIL) to warn the driver of a malfunction causing emission deterioration.

CAUTION:

- Always turn the ignition switch OFF and disconnect the negative battery cable before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MIL to illuminate.
- Always connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MIL to illuminate due to the open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Certain systems and components, especially those related to OBD, may use a new style slide-locking type harness connector. For description and how to disconnect, refer to [PG-106, "Description"](#).
- Always route and secure the harnesses properly after work. The interference of the harness with a bracket, etc. may cause the MIL to illuminate due to the short circuit.
- Always connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MIL to illuminate due to the malfunction of the EVAP system or fuel injection system, etc.
- Always erase the unnecessary malfunction information (repairs completed) from the ECM and TCM (Transmission control module) before returning the vehicle to the customer.

PRECAUTIONS


< PRECAUTION >

[7AT: RE7R01A]


General Precautions

INFOID:000000012167612

- Turn ignition switch OFF and disconnect the battery cable from the negative terminal before connecting or disconnecting the joint connector. Because battery voltage is applied to TCM even if ignition switch is turned OFF.

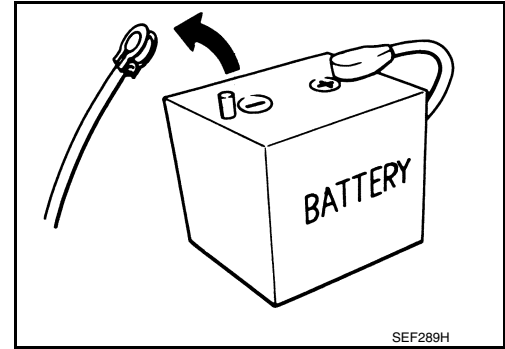

- Perform "DTC (Diagnostic Trouble Code) CONFIRMATION PROCEDURE" after performing each TROUBLE DIAGNOSIS. If the repair is completed DTC should not be displayed in the "DTC CONFIRMATION PROCEDURE".
- Always use the specified brand of ATF. Refer to [MA-10, "Fluids and Lubricants"](#).
- Use lint-free paper not cloth rags during work.
- Dispose of the waste oil using the methods prescribed by law, ordinance, etc. after replacing the ATF.
- Before proceeding with disassembly, thoroughly clean the outside of the transmission. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Disassembly should be done in a clean work area.
- Use lint-free paper or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the transmission.
- Place disassembled parts in order for easier and proper assembly.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Gaskets, seals and O-rings should be replaced any time the A/T is disassembled.
- It is very important to perform functional tests whenever they are indicated.
- The valve body contains precision parts and requires extreme care when parts are removed and serviced. Place disassembled valve body parts in order for easier and proper assembly. Care will also prevent springs and small parts from becoming scattered or lost.
- Properly installed valves, sleeves, plugs, etc. will slide along bores in valve body under their own weight.
- Before assembly, apply a coat of recommended ATF to all parts. Apply petroleum jelly to protect O-rings and seals, or hold bearings and washers in place during assembly. Never use grease.
- Extreme care should be taken to avoid damage to O-rings, seals and gaskets when assembling.
- When the A/T drain plug is removed, only some of the ATF is drained. Old ATF will remain in torque converter and ATF cooling system. Always follow the procedures under "Changing" when changing ATF. Refer to [TM-174, "Changing"](#).
- Occasionally, the parking gear may be locked with the torque insufficiently released, when stopping the vehicle by shifting the selector lever from "D" or "R" to "P" position with the brake pedal depressed. In this case, the shock with a thud caused by the abrupt release of torque may occur when shifting the selector lever from "P" position to other positions. However, this symptom is not a malfunction which results in the damage of parts.

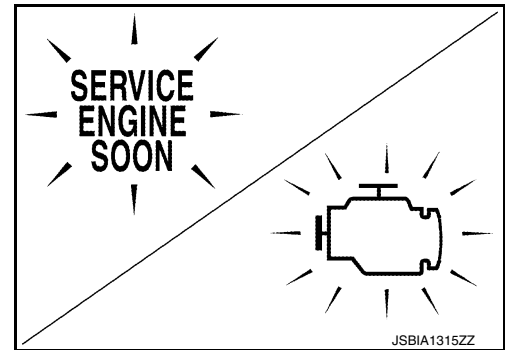

Service Notice or Precaution

INFOID:000000012167613

ATF COOLER SERVICE

If ATF contains frictional material (clutches, bands, etc.), or if an A/T is repaired, overhauled, or replaced, inspect and clean the A/T fluid cooler mounted in the radiator or replace the radiator. Flush cooler lines using cleaning solvent and compressed air after repair. For A/T fluid cooler cleaning procedure, refer to [TM-177, "Cleaning"](#). For radiator replacement, refer to [CO-14, "Removal and Installation"](#).

PRECAUTIONS


< PRECAUTION >

[7AT: RE7R01A]

Precaution for Procedure without Cowl Top Cover

INFOID:000000012167614

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

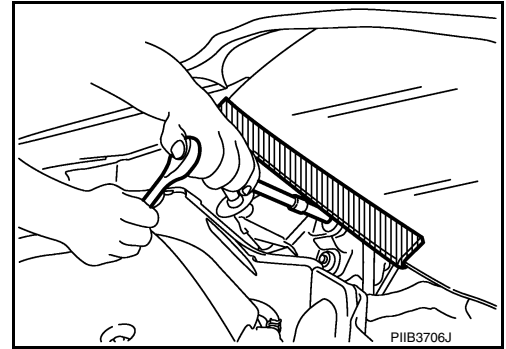


Precautions for Removing Battery Terminal

INFOID:000000012464495

When disconnecting the battery terminal, pay attention to the following.

- Always use a 12V battery as power source.
- Never disconnect battery terminal while engine is running.
- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.
- For vehicles with the engine listed below, remove the battery terminal after a lapse of the specified time:

BR08DE	: 4 minutes	YD25DDTi	: 2 minutes
D4D engine	: 20 minutes	YS23DDT	: 4 minutes
HRA2DDT	: 12 minutes	YS23DDTT	: 4 minutes
K9K engine	: 4 minutes	ZD30DDTi	: 60 seconds
M9R engine	: 4 minutes	ZD30DDTT	: 60 seconds
R9M engine	: 4 minutes		
V9X engine	: 4 minutes		

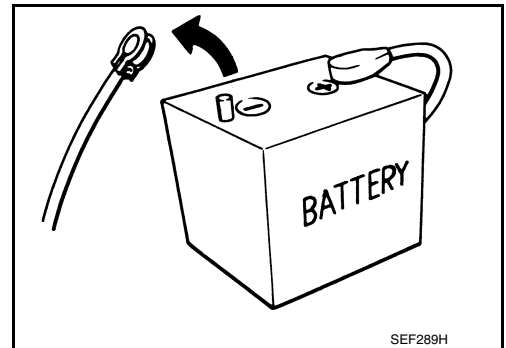

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- After high-load driving, if the vehicle is equipped with the V9X engine, turn the ignition switch OFF and wait for at least 15 minutes to remove the battery terminal.

NOTE:

- Turbocharger cooling pump may operate in a few minutes after the ignition switch is turned OFF.
- Example of high-load driving
 - Driving for 30 minutes or more at 140 km/h (86 MPH) or more.
 - Driving for 30 minutes or more on a steep slope.
- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.

NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

PREPARATION

< PREPARATION >

[7AT: RE7R01A]

PREPARATION

PREPARATION

Special Service Tool

INFOID:000000012167616

The actual shapes of TechMate tools may differ from those of special service tools illustrated here.

Tool number (TechMate No.) Tool name	Description
ST33400001 (J-26082) Drift a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia. <div data-bbox="621 527 834 674" style="text-align: center;"> </div> <div data-bbox="784 684 829 703" style="text-align: center;"> NT086 </div>	<ul style="list-style-type: none"> • Installing rear oil seal (2WD) • Installing oil pump housing oil seal
KV31102400 (J-34285 and J-34285-87) Clutch spring compressor a: 320 mm (12.60 in) b: 174 mm (6.85 in) <div data-bbox="581 751 878 953" style="text-align: center;"> </div> <div data-bbox="784 936 829 955" style="text-align: center;"> NT428 </div>	<ul style="list-style-type: none"> • Installing reverse brake spring retainer • Removing and installing 2346 brake spring retainer
KV31103800 (—) Clutch spring compressor 1. M12X1.75P <div data-bbox="609 1010 857 1184" style="text-align: center;"> </div> <div data-bbox="784 1188 870 1207" style="text-align: center;"> JSDIA1749ZZ </div>	Removing and installing front brake spring retainer
ST25850000 (J-25721-A) Sliding hammer a: 179 mm (7.05 in) b: 70 mm (2.76 in) c: 40 mm (1.57 in) dia. d: M12X1.75P <div data-bbox="565 1262 889 1444" style="text-align: center;"> </div> <div data-bbox="784 1440 829 1459" style="text-align: center;"> NT422 </div>	Remove oil pump assembly






PREPARATION

< PREPARATION >

[7AT: RE7R01A]

Commercial Service Tool

INFOID:000000012167617

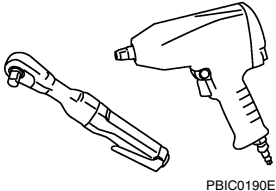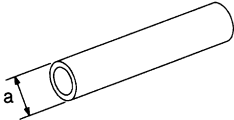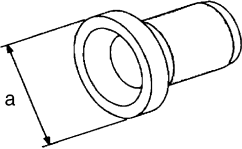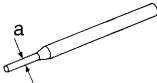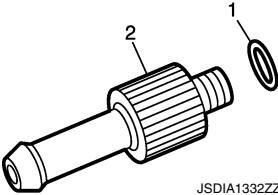Tool name	Description
<p>Power tool</p>  <p>PBI00190E</p>	<p>Loosening bolts and nuts</p>
<p>Drift a: 22 mm (0.87 in) dia.</p>  <p>NT083</p>	<p>Installing manual shaft oil seals</p>
<p>Drift a: 64 mm (2.52 in) dia.</p>  <p>SCIA5338E</p>	<p>Installing rear oil seal (AWD)</p>
<p>Pin punch a: 4 mm (0.16 in) dia.</p>  <p>NT410</p>	<p>Remove retaining pin</p>
<p>1. 315268E000* O-ring 2. 310811EA5A* Charging pipe</p>  <p>JSDIA1332ZZ</p>	<p>A/T fluid changing and adjustment</p>

*: Always check with the Parts Department for the latest parts information.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

PERIODIC MAINTENANCE


A/T FLUID

Inspection

INFOID:000000012167618

FLUID LEAKAGE

- Check transmission surrounding area (oil seal and plug etc.) for fluid leakage.
- If anything is found, repair or replace damaged parts and adjust A/T fluid level. Refer to [TM-176. "Adjustment"](#).

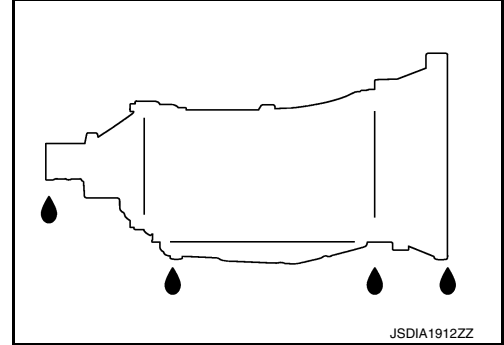

JSDIA1912ZZ

Changing

INFOID:000000012167619


Recommended fluid and fluid capacity : Refer to [MA-10. "Fluids and Lubricants"](#).

CAUTION:

- Use only recommended ATF. Never mix with other ATF.
- Using ATF other than recommended ATF will cause deterioration in driveability and A/T durability, and may damage the A/T, which is not covered by the INFINITI new vehicle limited warranty.
- When filling ATF, be careful not to scatter heat generating parts such as exhaust.

1. Step 1

- Install the O-ring (315268E000) (A) to the charging pipe (310811EA5A) (B).

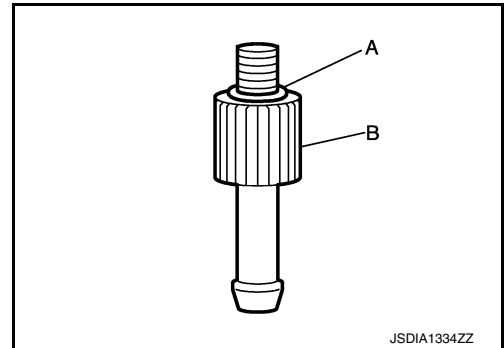

JSDIA1334ZZ

2. Step 2

- Use CONSULT to check that the ATF temperature is 40°C (104°F) or less.
- Lift up the vehicle.
- Remove the drain plug from the oil pan, and then drain the ATF.
- When the ATF starts to drip, temporarily tighten the drain plug to the oil pan.

NOTE:

Never replace drain plug and drain plug gasket with new ones yet.


- Remove overflow plug from oil pan.

A/T FLUID

< PERIODIC MAINTENANCE >


[7AT: RE7R01A]

- f. Install the charging pipe (A) to the overflow plug hole.
CAUTION:
Tighten the charging pipe by hand.
- g. Install the bucket pump hose (B) to the charging pipe.
CAUTION:
Insert the bucket pump hose all the way to the end of the charging pipe.
- h. Fill approximately 3 liters (3-1/8 US qt, 2-5/8 Imp qt) of the ATF.
- i. Remove the bucket pump hose to remove the charging pipe, and then temporarily tighten the overflow plug to the oil pan.
CAUTION:
Quickly perform the procedure to avoid ATF leakage from the oil pan.

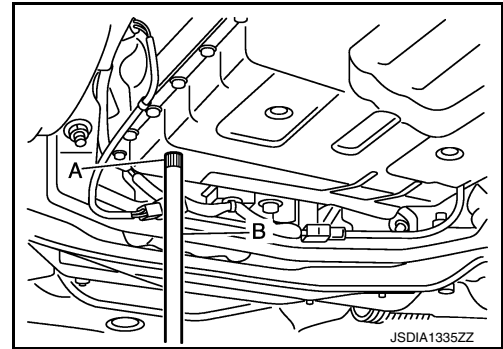

- j. Lift down the vehicle.
- k. Start the engine and wait for approximately 3 minutes.
- l. Stop the engine.
- 3. Step 3
- a. Repeat "Step 2".
- 4. Final Step
- a. Use CONSULT to check that the ATF temperature is 40°C (104°F) or less.
- b. Lift up the vehicle.
- c. Remove the drain plug from the oil pan, and then drain the ATF.
- d. When the ATF starts to drop, tighten the drain plug to the oil pan to the specified torque. Refer to [TM-186](#), "[Removal and Installation](#)".

- CAUTION:**
Never reuse drain plug and drain plug gasket.
- e. Remove overflow plug from oil pan.
- f. Install the charging pipe (A) to the overflow plug hole.
CAUTION:
Tighten the charging pipe by hand.
- g. Install the bucket pump hose (B) to the charging pipe.
CAUTION:
Insert the bucket pump hose all the way to the end of the charging pipe.
- h. Fill approximately 3 liters (3-1/8 US qt, 2-5/8 Imp qt) of the ATF.
- i. Remove the bucket pump hose to remove the charging pipe, and then temporarily tighten the overflow plug to the oil pan.
CAUTION:
Quickly perform the procedure to avoid ATF leakage from the oil pan.

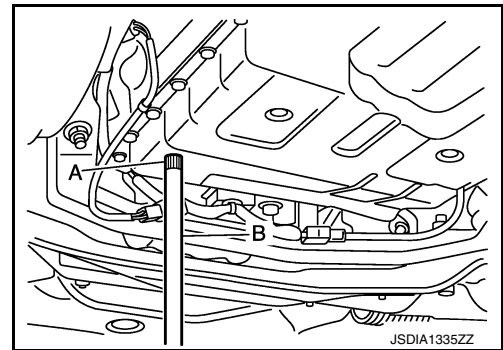

- j. Lift down the vehicle.
- k. Start the engine.
- l. Make the ATF temperature approximately 40°C (104°F).
NOTE:
The ATF level is greatly affected by the temperature. Always check the ATF temperature on "ATF TEMP 1" of "Data Monitor" using CONSULT.
- m. Park vehicle on level surface and set parking brake.
- n. Shift the selector lever through each gear position. Leave selector lever in "P" position.
- o. Lift up the vehicle when the ATF temperature reaches 40°C (104°F), and then remove the overflow plug from the oil pan.
- p. When the ATF starts to drop, tighten the overflow plug to the oil pan to the specified torque. Refer to [TM-186](#), "[Removal and Installation](#)".
CAUTION:
Never reuse overflow plug.

Adjustment

Recommended fluid and fluid capacity : Refer to [MA-10. "Fluids and Lubricants"](#).

CAUTION:

- Use only recommended ATF. Never mix with other ATF.
- Using ATF other than recommended ATF will cause deterioration in driveability and A/T durability, and may damage the A/T, which is not covered by the INFINITI new vehicle limited warranty.
- When filling ATF, be careful not to scatter heat generating parts such as exhaust.
- Always maintain the ATF temperature within between 35°C (95°F) and 45°C (113°F) while checking with CONSULT when the ATF level adjustment is performed.

1. Install the O-ring (315268E000) (A) to the charging pipe (310811EA5A) (B).
2. Start the engine.
3. Make the ATF temperature approximately 40°C (104°F).

NOTE:

The ATF level is greatly affected by the temperature. Always check the ATF temperature on "ATF TEMP 1" of "Data Monitor" using CONSULT.

4. Park vehicle on level surface and set parking brake.
5. Shift the selector lever through each gear position. Leave selector lever in "P" position.
6. Lift up the vehicle.
7. Check the ATF leakage from transmission.
8. Remove overflow plug from oil pan.
9. Install the charging pipe (A) to the overflow plug hole.

CAUTION:

Tighten the charging pipe by hand.

10. Install the bucket pump hose (B) to the charging pipe.



CAUTION:

Insert the bucket pump hose all the way to the end of the charging pipe.

11. Fill approximately 0.5 liters (1/2 US qt, 1/2 Imp qt) of the ATF.
12. Check that the ATF leaks when removing the charging pipe and the bucket pump hose. If the ATF does not leak, refill the ATF.
13. When the ATF starts to drip, tighten the overflow plug to the oil pan to the specified torque. Refer to [TM-186. "Removal and Installation"](#).

CAUTION:

Never reuse overflow plug.

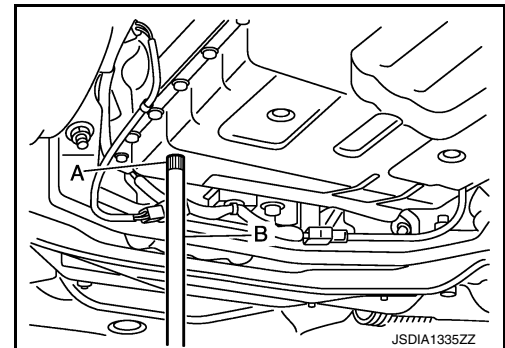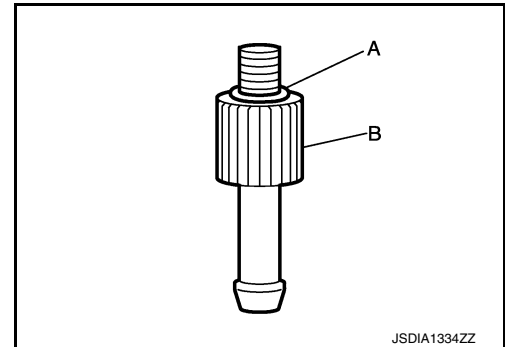

A/T FLUID COOLER

Cleaning

INFOID:000000012167621

Whenever an A/T is replaced, the A/T fluid cooler mounted in the radiator must be inspected and cleaned. Metal debris and friction material, if present, can become trapped in the A/T fluid cooler. This debris can contaminate the newly serviced A/T or, in severe cases, can block or restrict the flow of ATF. In either case, malfunction of the newly serviced A/T may result.

Debris, if present, may build up as ATF enters the cooler inlet. It will be necessary to back flush the cooler through the cooler outlet in order to flush out any built up debris.


CLEANING PROCEDURE

1. Position an oil pan under the A/T inlet and outlet cooler hoses.
2. Identify the inlet and outlet fluid cooler hoses.
3. Disconnect the A/T fluid cooler inlet and outlet rubber hoses from the steel cooler tubes or by-pass valve.

NOTE:

Replace the cooler hoses if rubber material from the hose remains on the tube fitting.

4. Allow any ATF that remains in the cooler hoses to drain into the oil pan.

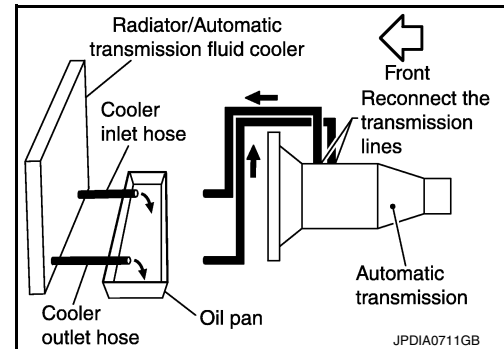


5. Insert the extension adapter hose of a can of Transmission Cooler Cleaner into the cooler outlet hose.

CAUTION:

- **Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.**
- **Spray Transmission Cooler Cleaner only with adequate ventilation.**
- **Avoid contact with eyes and skin.**
- **Never breathe vapors or spray mist.**

6. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until ATF flows out of the cooler inlet hose for 5 seconds.

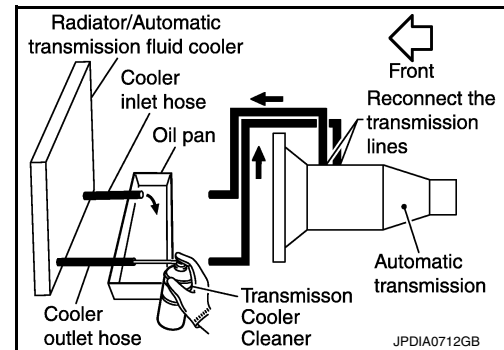

7. Insert the tip of an air gun into the end of the cooler outlet hose.

8. Wrap a shop rag around the air gun tip and of the cooler outlet hose.

9. Blow compressed air regulated to 5 to 9 kg/cm² (71 to 128 psi) through the cooler outlet hose for 10 seconds to force out any remaining ATF.

10. Repeat steps 5 through 9 three additional times.

11. Position an oil pan under the banjo bolts that connect the A/T fluid cooler steel lines to the A/T.

12. Remove the banjo bolts.


13. Flush each steel line from the cooler side back toward the A/T by spraying Transmission Cooler Cleaner in a continuous stream for 5 seconds.

14. Blow compressed air regulated to 5 to 9 kg/cm² (71 to 128 psi) through each steel line from the cooler side back toward the A/T for 10 seconds to force out any remaining ATF.

15. Ensure all debris is removed from the steel cooler lines.

16. Ensure all debris is removed from the banjo bolts and fittings.

17. Perform "DIAGNOSIS PROCEDURE".

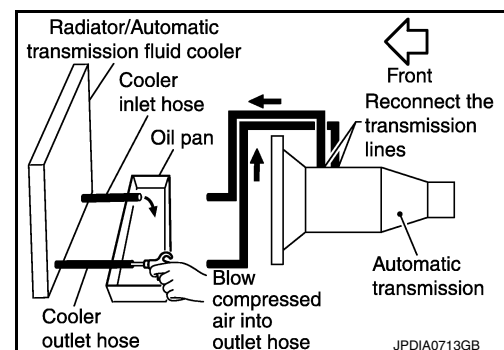

A/T FLUID COOLER

< PERIODIC MAINTENANCE >

[7AT: RE7R01A]

DIAGNOSIS PROCEDURE



NOTE:

Insufficient cleaning of the cooler inlet hose exterior may lead to inaccurate debris identification.


1. Position an oil pan under the A/T inlet and outlet cooler hoses.
2. Clean the exterior and tip of the cooler inlet hose.
3. Insert the extension adapter hose of a can of Transmission Cooler Cleaner into the cooler outlet hose.

CAUTION:

- Wear safety glasses and rubber gloves when spraying the Transmission Cooler Cleaner.
 - Spray Transmission Cooler Cleaner only with adequate ventilation.
 - Avoid contact with eyes and skin.
 - Never breathe vapors or spray mist.
4. Hold the hose and can as high as possible and spray Transmission Cooler Cleaner in a continuous stream into the cooler outlet hose until ATF flows out of the cooler inlet hose for 5 seconds.
 5. Tie a common white, basket-type coffee filter to the end of the cooler inlet hose.

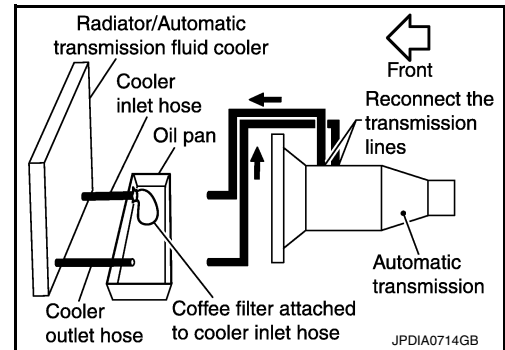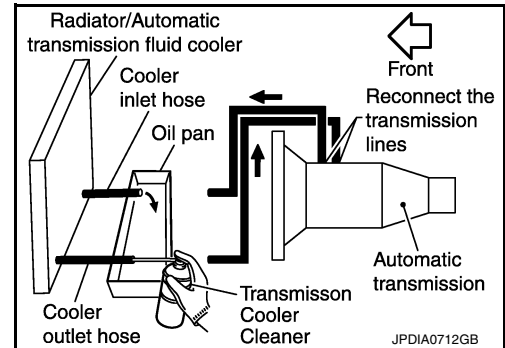


6. Insert the tip of an air gun into the end of the cooler outlet hose.
7. Wrap a shop rag around the air gun tip and end of cooler outlet hose.
8. Blow compressed air regulated to 5 to 9 kg/cm² (71 to 128 psi) through the cooler outlet hose to force any remaining ATF into the coffee filter.
9. Remove the coffee filter from the end of the cooler inlet hose.
10. Perform "INSPECTION PROCEDURE".

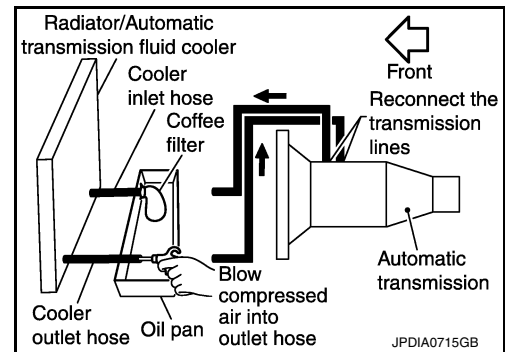

INSPECTION PROCEDURE

1. Inspect the coffee filter for debris.
 - a. If small metal debris less than 1 mm (0.040 in) in size or metal powder is found in the coffee filter, this is normal. If normal debris is found, the A/T fluid cooler/radiator can be re-used and the procedure is ended.

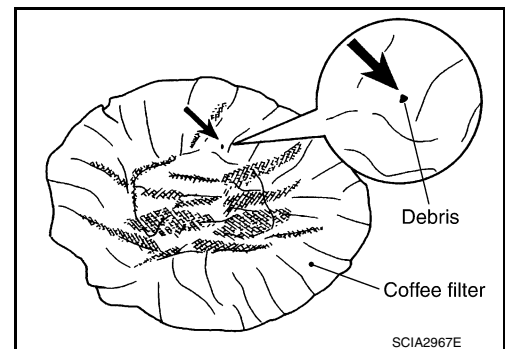


A/T FLUID COOLER

< PERIODIC MAINTENANCE >

[7AT: RE7R01A]

- b. If one or more pieces of debris are found that are over 1 mm (0.040 in) in size and/or peeled clutch facing material is found in the coffee filter, the A/T fluid cooler is not serviceable. The A/T fluid cooler/radiator must be replaced and the inspection procedure is ended. Refer to [CO-14, "Removal and Installation"](#).

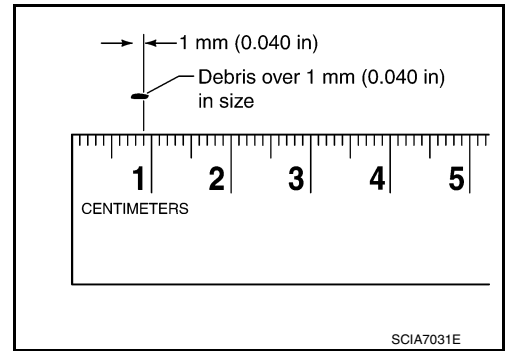

Inspection

INFOID:000000012167622

After performing all procedures, ensure that all remaining oil is cleaned from all components.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

STALL TEST

< PERIODIC MAINTENANCE >

[7AT: RE7R01A]

STALL TEST

Inspection and Judgment

INFOID:000000012167623

INSPECTION

1. Inspect the amount of engine oil. Replenish the engine oil if necessary.
2. Drive for about 10 minutes to warm up the vehicle so that the A/T fluid temperature is 50 to 80°C (122 to 176°F). Inspect the amount of ATF. Replenish if necessary.
3. Securely engage the parking brake so that the tires do not turn.
4. Start the engine, apply foot brake, and place selector lever in "D" position.
5. Gradually press down the accelerator pedal while holding down the foot brake.
6. Quickly read off the stall speed, and then quickly release the accelerator pedal.

CAUTION:

Never hold down the accelerator pedal for more than 5 seconds during this test.

Stall speed : Refer to [TM-303, "Stall Speed"](#).

7. Shift the selector lever to "N" position.
 8. Cool down the ATF.
- CAUTION:**
Run the engine at idle for at least 1 minute.
9. Repeat steps 5 through 8 with selector lever in "R" position.

JUDGMENT OF STALL TEST

	Selector lever position		Possible location of malfunction
	"D" and "M"	"R"	
Stall speed	H	O	<ul style="list-style-type: none"> • Low brake • 1st one-way clutch • 2nd one-way clutch
	O	H	<ul style="list-style-type: none"> • Reverse brake • 1st one-way clutch • 2nd one-way clutch
	L	L	<ul style="list-style-type: none"> • Engine and torque converter one-way clutch
	H	H	<ul style="list-style-type: none"> • Line pressure low

O: Stall speed within standard value position

H: Stall speed higher than standard value

L: Stall speed lower than standard value

Stall test standard value position

Does not shift-up "D" or "M" position 1 → 2	Slipping in 2GR, 3GR, 4GR or 6GR	2346 brake slippage
Does not shift-up "D" or "M" position 2 → 3	Slipping in 3GR, 4GR or 5GR	Direct clutch slippage
Does not shift-up "D" or "M" position 3 → 4	Slipping in 4GR, 5GR, 6GR or 7GR	High and low reverse clutch slippage
Does not shift-up "D" or "M" position 4 → 5	Slipping in 5GR, 6GR or 7GR	Input clutch slippage
Does not shift-up "D" or "M" position 5 → 6	Slipping in 2GR, 3GR, 4GR or 6GR	2346 brake slippage
Does not shift-up "D" or "M" position 6 → 7	Slipping in 7GR	Front brake slippage


A/T POSITION

Inspection and Adjustment

INFOID:000000012167624


INSPECTION

- Place selector lever in "P" position, and turn ignition switch ON (engine stop).
- Check that selector lever can be shifted to other than "P" position when brake pedal is depressed. Also check that selector lever can be shifted from "P" position only when brake pedal is depressed.
- Shift the selector lever and check for excessive effort, sticking, noise or rattle.
- Confirm that the selector lever stops at each position by feeling the engagement when it is moved through all the positions. Check whether or not the actual position the selector lever matches the position shown by the shift position indicator and the A/T body.
- The method of operating the lever to individual positions correctly is shown in the figure.
- When selector button is pressed in "P", "R", or "N" position without applying forward/backward force to selector lever, check button operation for sticking.
- Confirm that the back-up lamps illuminate only when lever is placed in the "R" position. Confirm that the back-up lamps do not illuminate when selector lever is pushed against "R" position in the "P" or "N" position.
- Confirm that the engine can only be started with the selector lever in the "P" and "N" positions. (With selector lever in the "P" position, engine can be started even when selector lever is moved forward and backward.)
- Make sure that A/T is locked completely in "P" position.
- DS mode must be indicated on the combination meter when the selector lever is shifted to the manual shift gate. When the selector lever is shifted to the "+" or "-" side in the DS mode, manual mode should be indicated on the combination meter.
In addition, a set shift position must be changed when the selector lever is shifted to the "+" or "-" side in the manual mode. (Only while driving.)

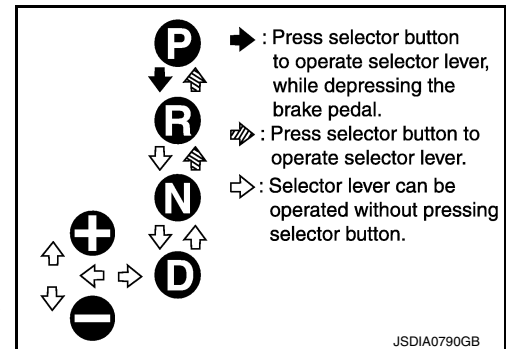

ADJUSTMENT

- Loosen nut (←).
- Place manual lever and selector lever in "P" position.
- While pressing lower lever (A) toward rear of vehicle (in "P" position direction), tighten nut to specified torque. Refer to [TM-183. "Removal and Installation"](#).
CAUTION:
Be careful not to touch the control rod while pressing lower lever of A/T shift selector assembly.
NOTE:
Press lower lever of A/T shift selector assembly with a force of approximately 1 kg (9.8 N).

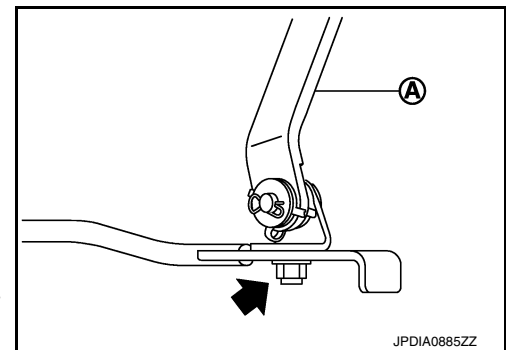

A/T SHIFT SELECTOR

< REMOVAL AND INSTALLATION >


[7AT: RE7R01A]

REMOVAL AND INSTALLATION

A/T SHIFT SELECTOR

Exploded View

INFOID:000000012167625

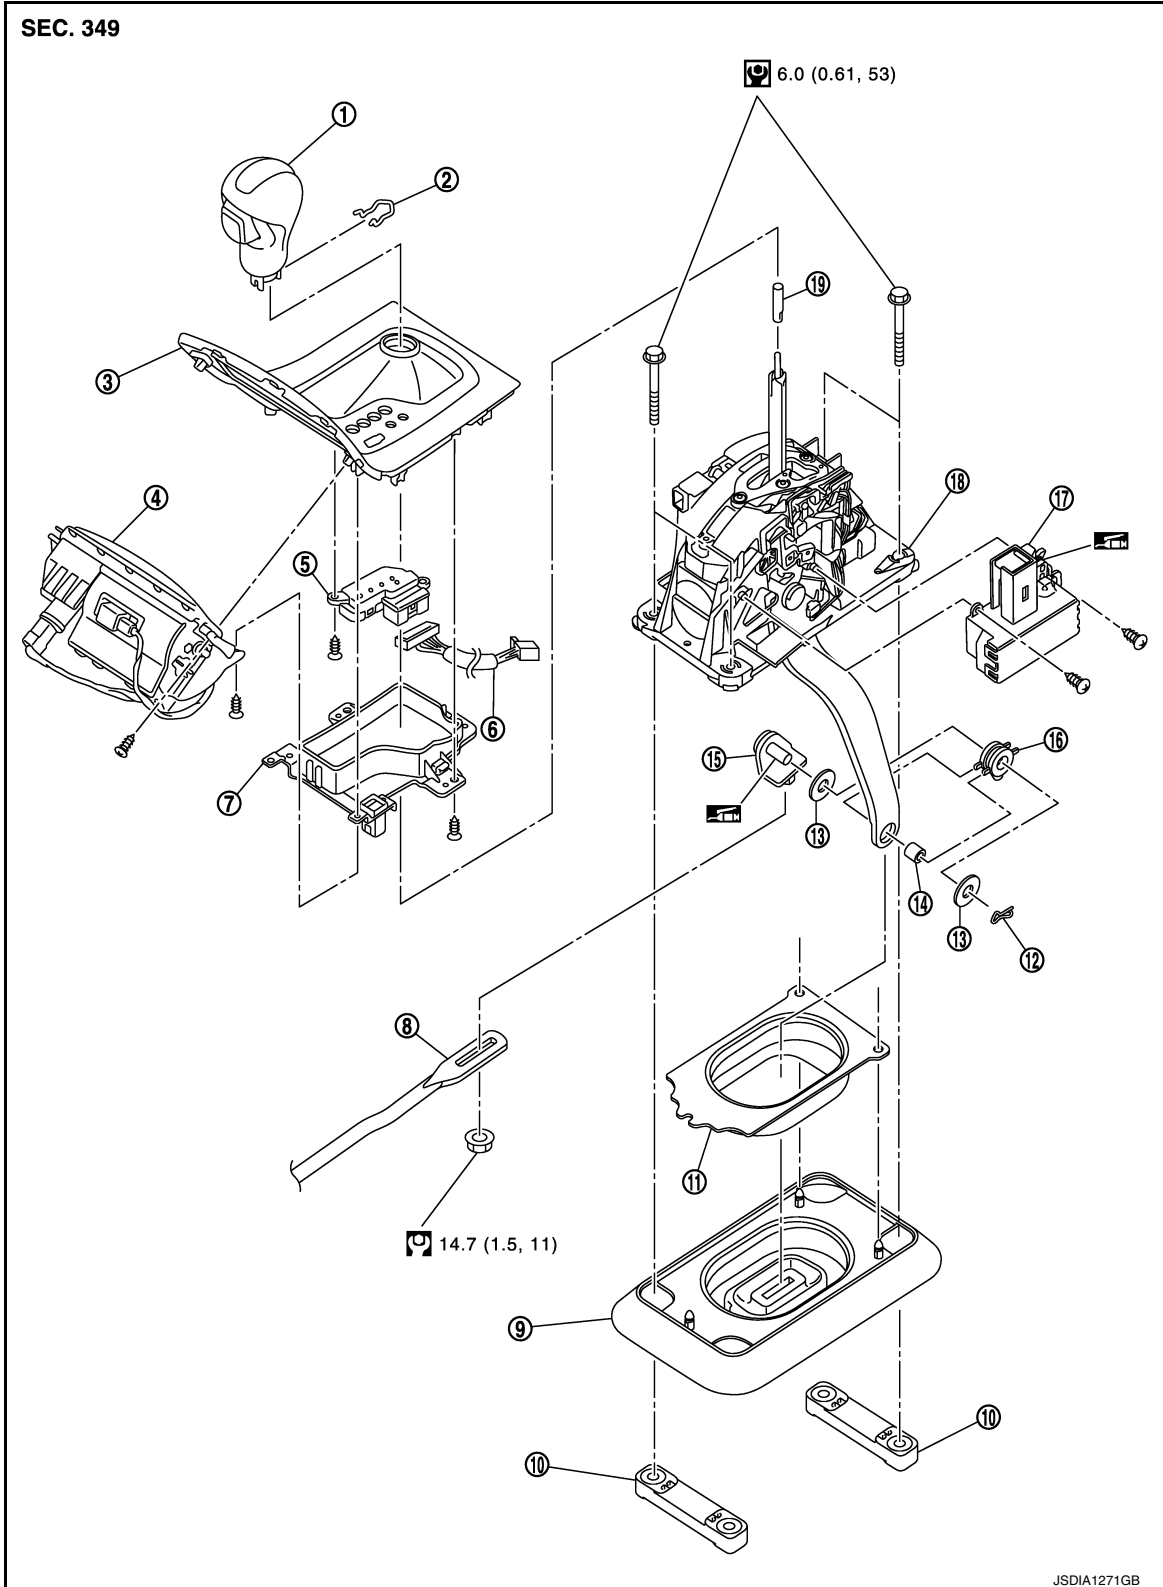


A/T SHIFT SELECTOR

< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]

- | | | |
|------------------------|--------------------------------------|---------------------------------|
| 1. Selector lever knob | 2. Lock pin | 3. Console finisher |
| 4. Ashtray (front) | 5. Selector lever position indicator | 6. Harness connector |
| 7. Insert finisher | 8. Control rod | 9. Dust cover |
| 10. Bracket | 11. Dust cover plate | 12. Snap pin |
| 13. Plain washer | 14. Collar | 15. Pivot pin |
| 16. Insulator | 17. Shift lock unit | 18. A/T shift selector assembly |
| 19. Adapter | | |

 : Apply multi-purpose grease.

Refer to [GI-4, "Components"](#) for symbols not described on the above.

Removal and Installation

INFOID:000000012167626



REMOVAL

1. Remove control rod from A/T shift selector assembly.
2. Shift the selector lever to "N" position.
3. Remove knob cover (A) below selector lever downward.
4. Pull lock pin (1) out of selector lever knob (2).
5. Remove selector lever knob.
6. Remove console finisher assembly and center console assembly. Refer to [IP-24, "Removal and Installation"](#).

CAUTION:

When disconnecting selector lever position indicator connector from shift position switch, never twist or apply an excessive load to the connector.

7. Remove the rear ventilator duct 1 (with rear ventilation). Refer to [VTL-16, "REAR VENTILATOR DUCT 1 : Removal and Installation"](#).
8. Disconnect A/T shift selector harness connector.
9. Remove harness clips from A/T shift selector assembly.
10. Shift the selector lever to "P" position.
11. Move passenger's seat to the end.
12. Remove A/T shift selector assembly mounting bolts.
13. Slightly lift the A/T shift selector assembly (1) and slide it rightward. Then pull it out in the diagonally right direction.
14. Remove adapter from A/T shift selector assembly.
15. Remove dust cover and dust cover plate from A/T shift selector assembly.
16. Remove dust cover plate from dust cover.
17. Remove shift lock unit from A/T shift selector assembly.
18. Remove bracket from vehicle floor panel.

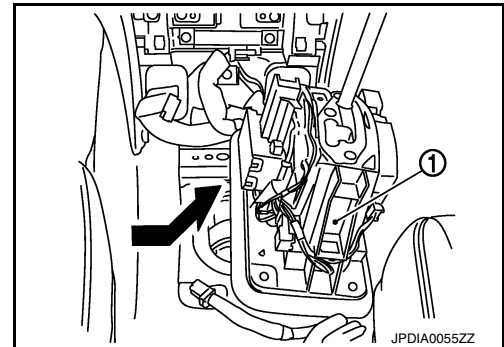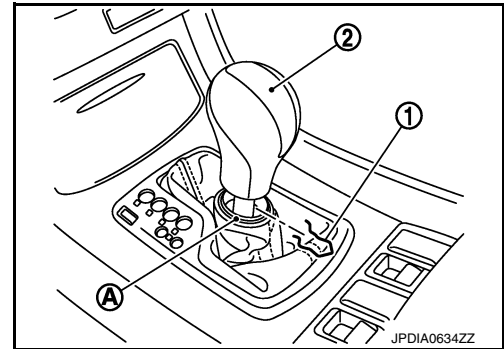

19. Remove selector lever position indicator from console finisher assembly.


A/T SHIFT SELECTOR

< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]

- a. Remove ashtray (front) (1) from console finisher assembly.


← : Screw

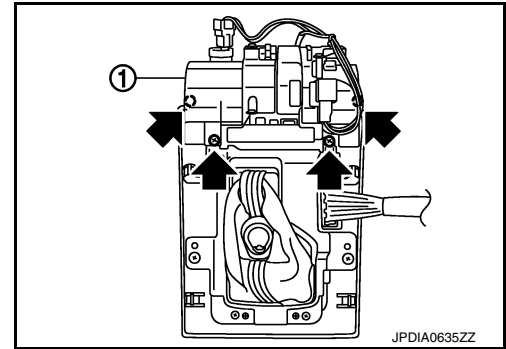

- b. Remove insert finisher (1) from console finisher assembly.


A : Screw (small)

B : Screw (large)

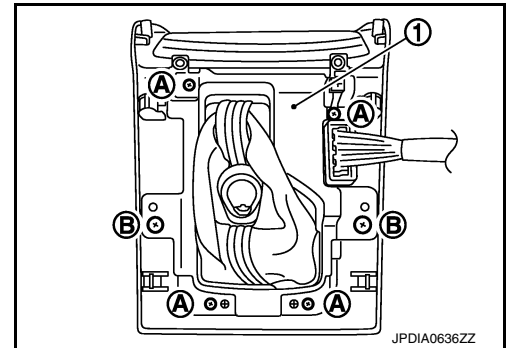

- c. Remove the selector lever position indicator (1).

← : Screw

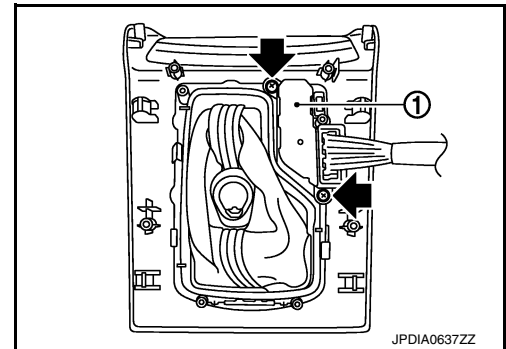

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

- Apply multi-purpose grease on the pin surface (that slides after installing a collar) of the pivot pin.
- Apply multi-purpose grease on the surface that the shift lock unit plate slides vertically.
- Refer to the followings when installing the selector lever knob to the A/T shift selector assembly.

1. Install the lock pin to the selector lever knob.
2. Insert the shift lever knob into the shift lever until it clicks.

CAUTION:

- Install it straight, and never tap or apply any shock to install it.
- Never press selector button.

Inspection and Adjustment

INFOID:000000012167627

INSPECTION AFTER INSTALLATION

Check A/T position after adjusting A/T position. Refer to [TM-181, "Inspection and Adjustment"](#).

ADJUSTMENT AFTER INSTALLATION

Adjust A/T position . Refer to [TM-181, "Inspection and Adjustment"](#).

CONTROL ROD


< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]


CONTROL ROD

Exploded View

INFOID:000000012167628

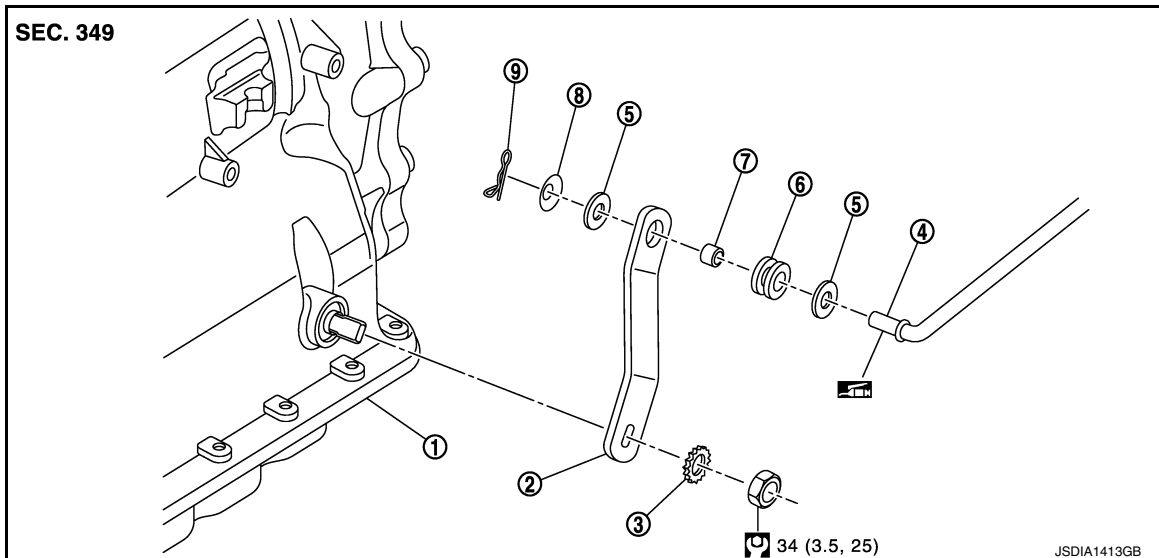

- | | | |
|-----------------|-------------------|----------------|
| 1. A/T assembly | 2. Manual lever | 3. Lock washer |
| 4. Control rod | 5. Washer | 6. Insulator |
| 7. Collar | 8. Conical washer | 9. Snap pin |

 : Apply multi-purpose grease.

Refer to [GI-4, "Components"](#) for symbols not described on the above.

Removal and Installation

INFOID:000000012167629

REMOVAL

1. Shift the selector lever to "P" position.
2. Remove control rod from A/T shift selector assembly. Refer to [TM-183, "Removal and Installation"](#).
3. Remove manual lever from A/T assembly.
4. Remove control rod from manual lever.
5. Remove insulator and collar from manual lever.

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

Apply multi-purpose grease on the pin surface (that slides after installing collar) of the tip of the control rod.

Inspection and Adjustment

INFOID:000000012167630

INSPECTION AFTER INSTALLATION

Check A/T position after adjusting A/T position. Refer to [TM-181, "Inspection and Adjustment"](#).

ADJUSTMENT AFTER INSTALLATION

Adjust A/T position. Refer to [TM-181, "Inspection and Adjustment"](#).

CONTROL VALVE & TCM


< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]

CONTROL VALVE & TCM

Exploded View

INFOID:000000012167631

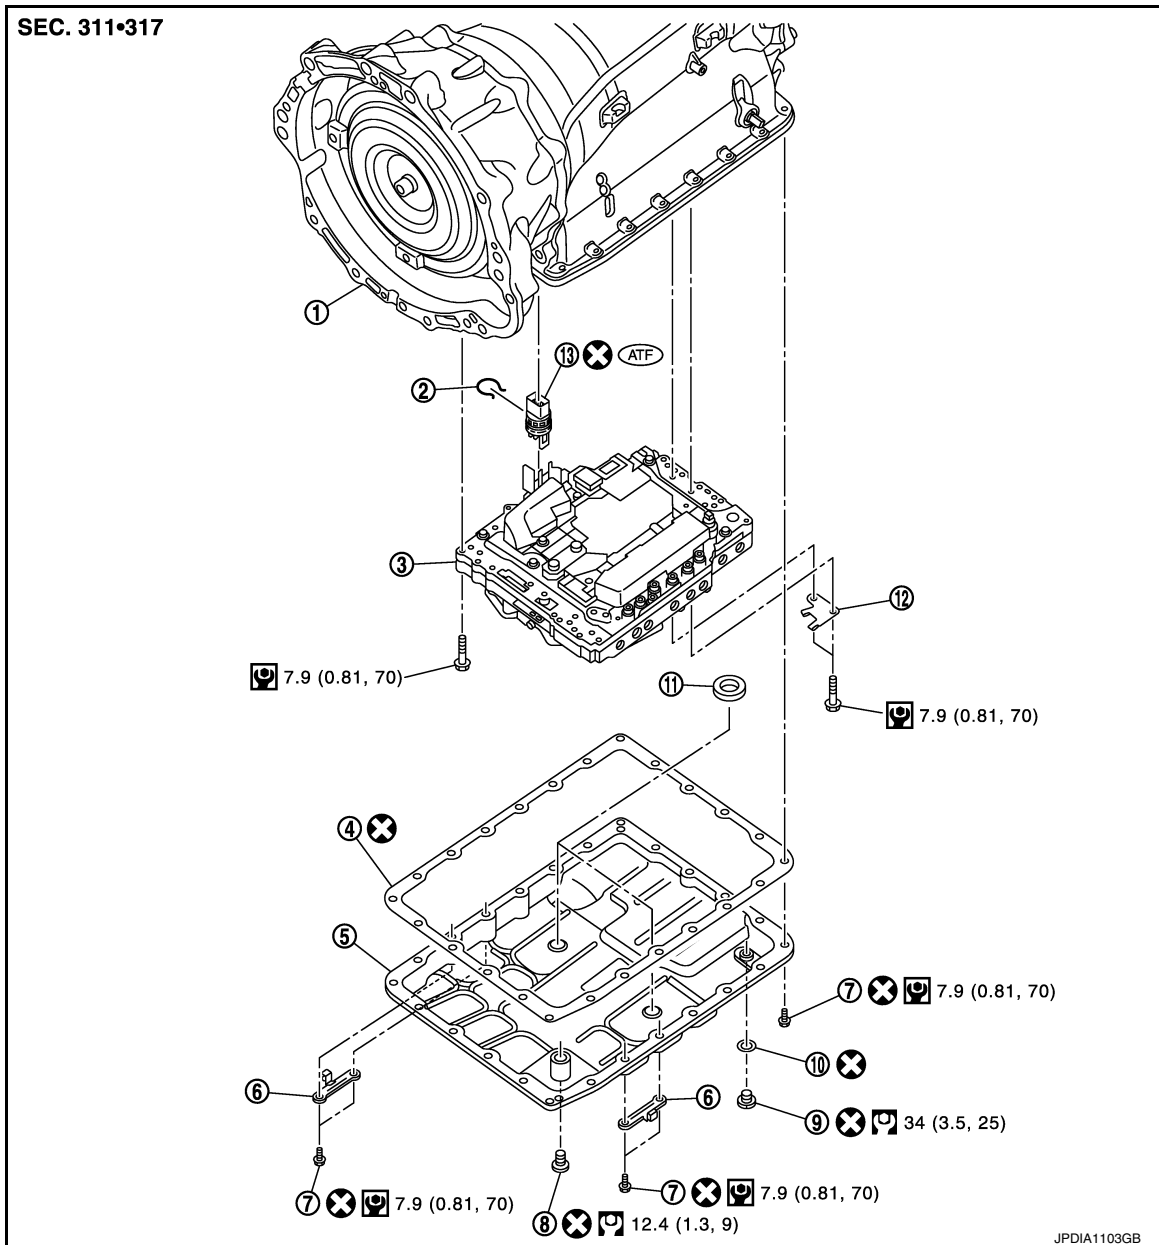

- | | | |
|--------------------------|------------------|------------------------|
| 1. A/T assembly | 2. Snap ring | 3. Control valve & TCM |
| 4. Oil pan gasket | 5. Oil pan | 6. Clip |
| 7. Oil pan mounting bolt | 8. Overflow plug | 9. Drain plug |
| 10. Drain plug gasket | 11. Magnet | 12. Clip |
| 13. Joint connector | | |

Refer to [GI-4. "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000012167632

REMOVAL

1. Drain ATF through drain plug.
2. Remove exhaust mounting bracket with power tool. Refer to [EX-6. "Removal and Installation"](#).

CONTROL VALVE & TCM

< REMOVAL AND INSTALLATION >


[7AT: RE7R01A]

3. Disconnect heated oxygen sensor 2 connectors (A).

⇐ : Vehicle front

← : Bolt

4. Remove heated oxygen sensor 2 harness (B) from clips (1).
5. Remove bracket (2) from A/T assembly. Refer to [TM-211, "2WD : Removal and Installation"](#) (2WD) or [TM-214, "AWD : Removal and Installation"](#) (AWD).

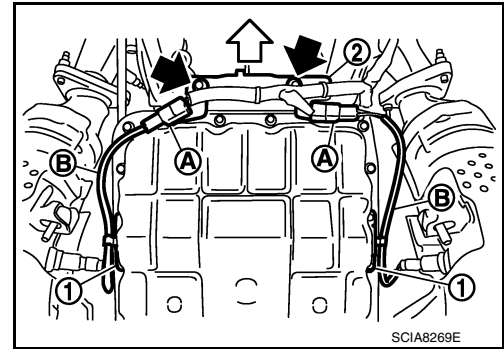


6. Remove clips (1).


⇐ : Vehicle front

← : Oil pan mounting bolt


7. Remove oil pan (2) and oil pan gasket.

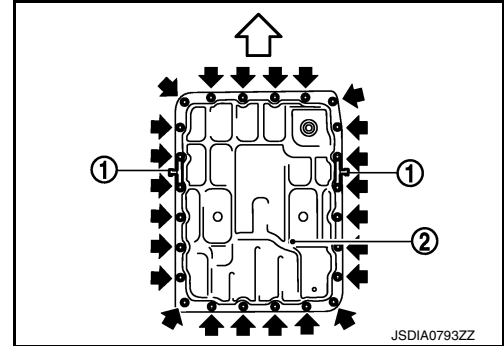


8. Remove magnets (1) from oil pan.

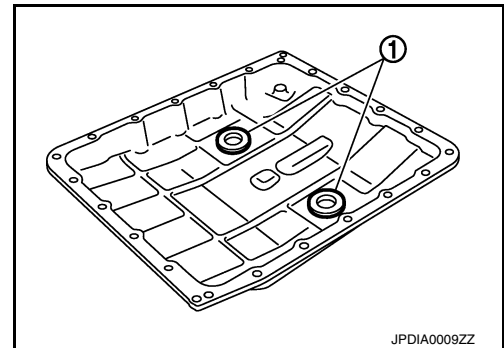

9. Remove snap ring (1) from joint connector (2).

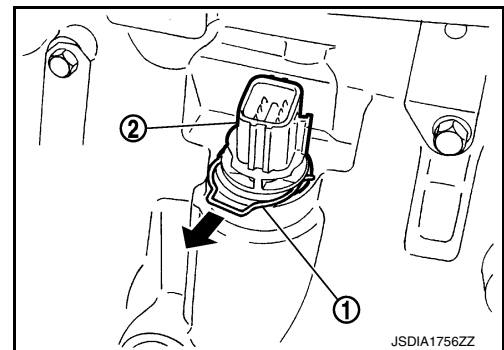

10. Push joint connector (1).

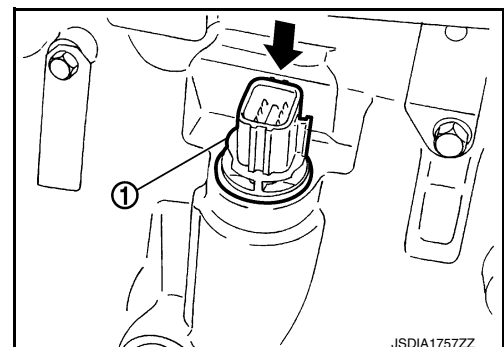

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

CONTROL VALVE & TCM

[7AT: RE7R01A]


< REMOVAL AND INSTALLATION >

11. Disconnect output speed sensor connector (A).

CAUTION:

Be careful not to damage connector.

12. Disengage terminal clip (←).

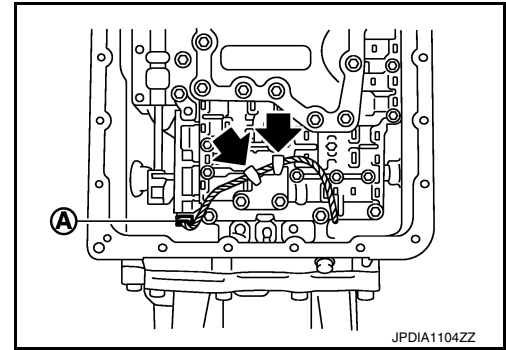


13. Remove bolts and clip (1) from the control valve & TCM.

↔ : Vehicle front

Bolt symbol	Length mm (in)	Number of bolts
A	43 (1.69)	3
B	40 (1.57)	2
C	54 (2.13)	6
D	50 (1.97)	2
E*	50 (1.97)	1


*: Reamer bolt

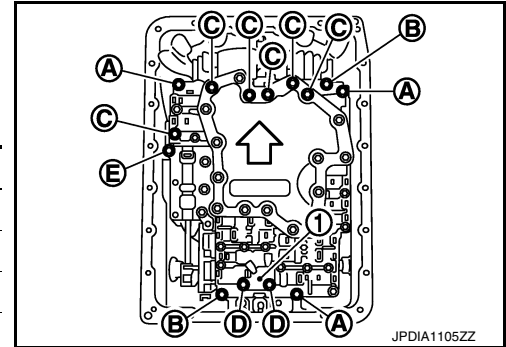

14. Remove the control valve & TCM from transmission case.

CAUTION:

When removing, be careful with the manual valve (1) notch and manual plate (2) height. Remove it vertically.

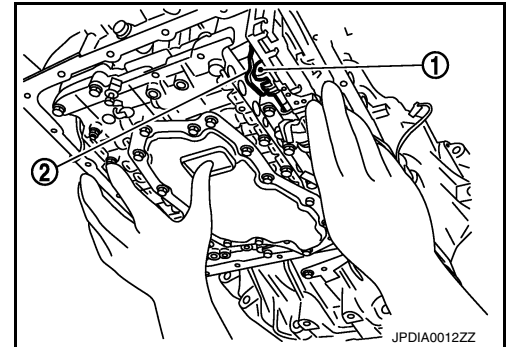


15. Remove joint connector (A) from the control valve & TCM using a flat-bladed screwdriver (B).

16. Disconnect TCM harness connector.

CAUTION:

Be careful not to damage connector.

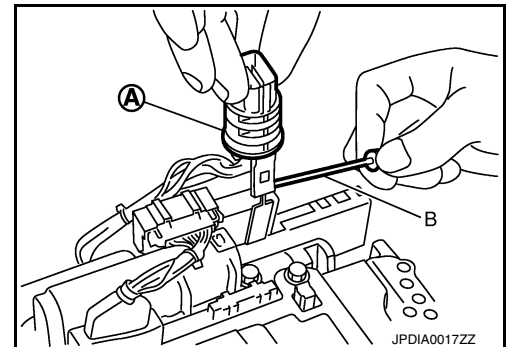

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

- Be careful not to damage connector when installing any connector.
- Never reuse joint connector.
- Apply ATF to O-ring of joint connector.
- Never reuse drain plug and drain plug gasket. In addition, install new drain plug and drain plug gasket after adjustment of A/T fluid filling.
- Refer to the following when installing the control valve & TCM to transmission case.


CONTROL VALVE & TCM

< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]

CAUTION:


- Make sure that input speed sensor securely installs input speed sensor holes (A).
- Hang down output speed sensor harness toward outside so as not to disturb installation of the control valve & TCM.
- Adjust joint connector of the control valve & TCM to terminal hole of transmission case.

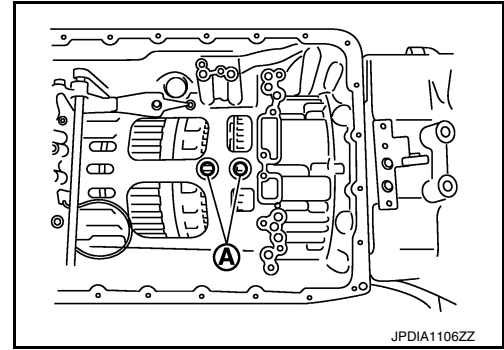

A
B
C

TM

- Assemble it so that manual valve (1) cutout is engaged with manual plate (2) projection.

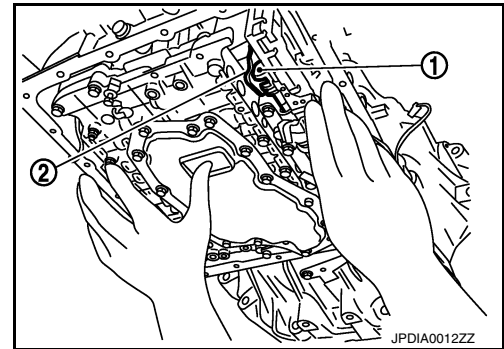


E
F
G

- Install bolts and clip (1) to the control valve & TCM. Tighten bolt (E) to the specified torque before tightening the other than bolts.

← : Vehicle front

Bolt symbol	Length mm (in)	Number of bolts
A	43 (1.69)	3
B	40 (1.57)	2
C	54 (2.13)	6
D	50 (1.97)	2
E*	50 (1.97)	1

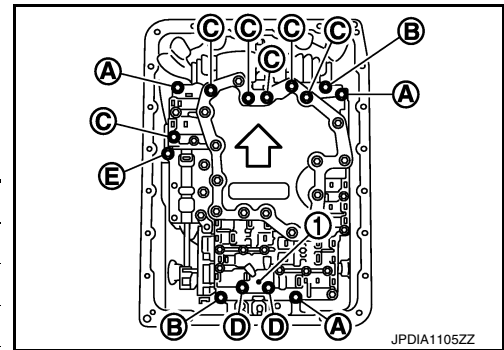

H
I
J

*: Reamer bolt


- Refer to the following when installing oil pan to transmission case.

CAUTION:

- Clean foreign materials (gear wear particles) that adhere on the inside of the oil pan and on the magnet, and then assembly.
- Completely remove all moisture, oil and old gasket, etc. from oil pan gasket mounting surface of transmission case and oil pan.
- Never reuse oil pan gasket and oil pan mounting bolts.
- Install oil pan gasket in the direction to align hole position.
- Tighten the oil pan mounting bolts to the specified torque in the numerical order as shown in the figure after temporarily tightening them.

← : Vehicle front

- Fill ATF after installation. Refer to [TM-174. "Changing"](#).

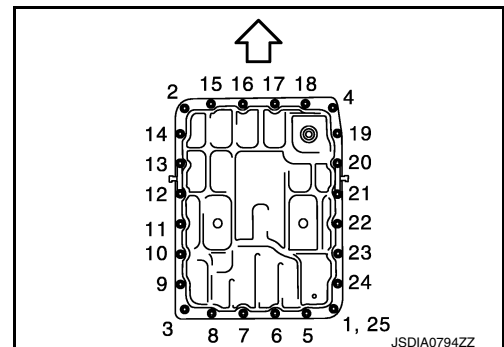

K
L
M

N
O
P

CONTROL VALVE & TCM

< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]


Inspection

INFOID:000000012167633

INSPECTION AFTER REMOVAL

Check foreign materials in oil pan to help determine causes of malfunction. If the ATF is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.

- If frictional material is detected, replace radiator after repair of A/T. Refer to [CO-14, "Removal and Installation"](#).

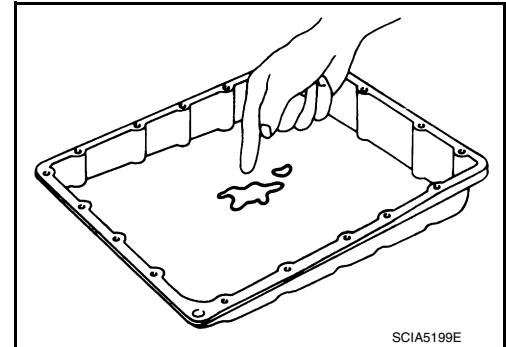

INSPECTION AFTER INSTALLATION

Start the engine and check visually that there is no leakage of ATF.

PARKING COMPONENTS

< REMOVAL AND INSTALLATION >


[7AT: RE7R01A]

PARKING COMPONENTS

2WD

2WD : Exploded View

INFOID:000000012167634

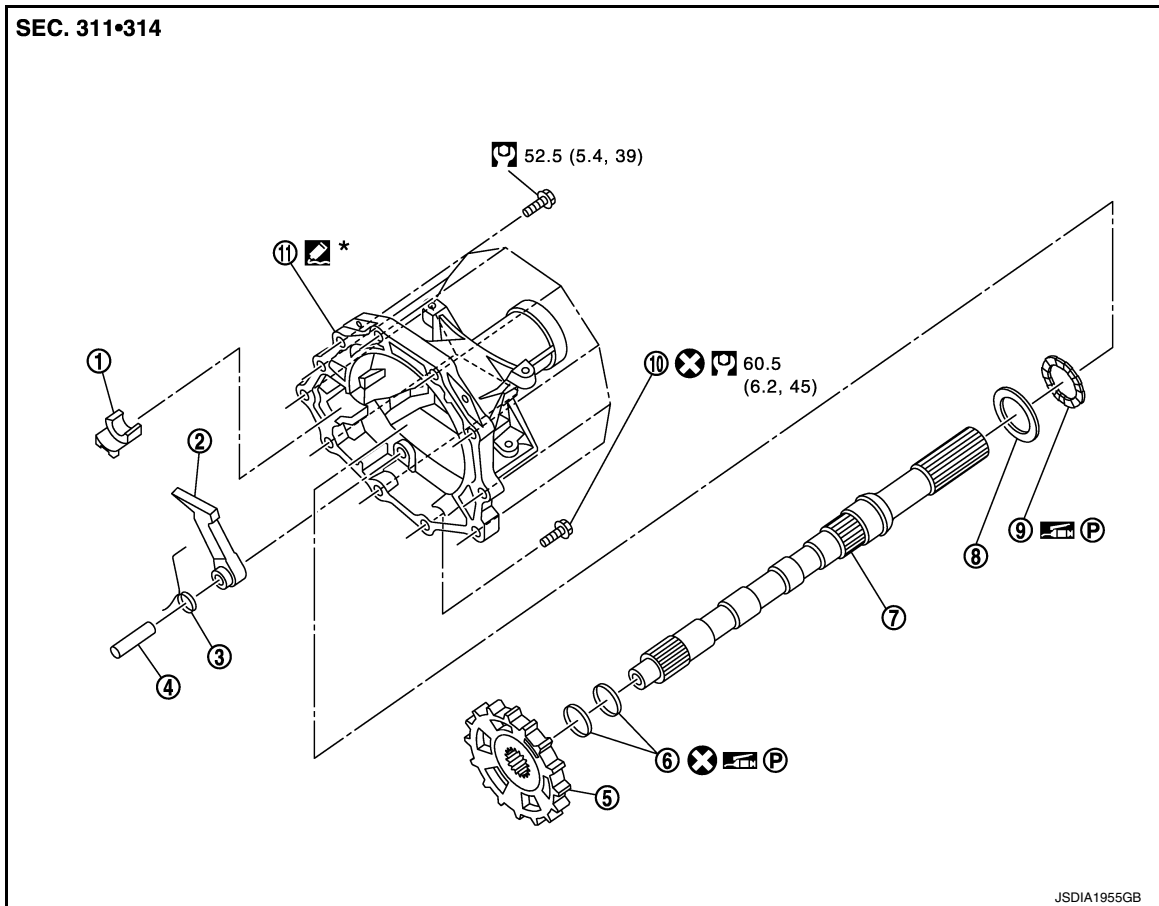

- | | | |
|-----------------------------|--------------------|-------------------|
| 1. Parking actuator support | 2. Parking pawl | 3. Return spring |
| 4. Pawl shaft | 5. Parking gear | 6. Seal ring |
| 7. Output shaft | 8. Bearing race | 9. Needle bearing |
| 10. Self-sealing bolt | 11. Rear extension | |

: Apply Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).
Refer to [GI-4, "Components"](#) for symbols not described on the above.

2WD : Removal and Installation

INFOID:000000012167635

REMOVAL

1. Drain ATF through drain plug.
2. Remove exhaust front tube and center muffler with power tool. Refer to [EX-6, "Removal and Installation"](#).
3. Remove propeller shaft assembly. Refer to [DLN-100, "Removal and Installation"](#).
4. Remove control rod. Refer to [TM-185, "Removal and Installation"](#).
5. Support A/T assembly with a transmission jack.
CAUTION:
When setting transmission jack, be careful not to allow it to collide against the drain plug.
6. Remove rear engine mounting member with power tool. Refer to [EM-70, "2WD : Exploded View"](#).
7. Remove engine mounting insulator (rear). Refer to [EM-70, "2WD : Exploded View"](#).


PARKING COMPONENTS

< REMOVAL AND INSTALLATION >


[7AT: RE7R01A]

8. Remove tightening bolts for rear extension assembly and transmission case.


A : Bolt
B : Self-sealing bolt

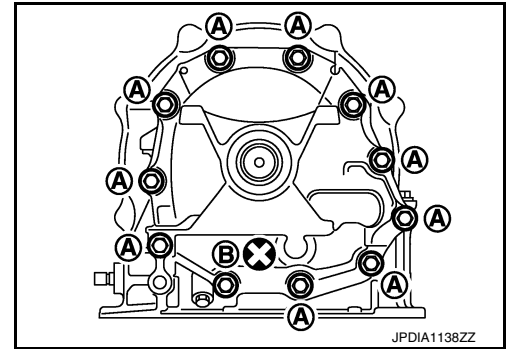


9. Tap rear extension assembly with a soft hammer (A).

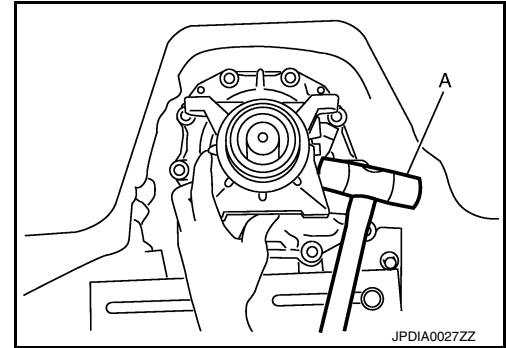


10. Remove rear extension assembly (with needle bearing) from transmission case.

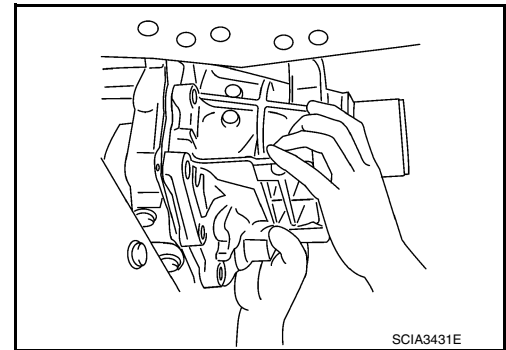

11. Remove bearing race (1) from output shaft (2).

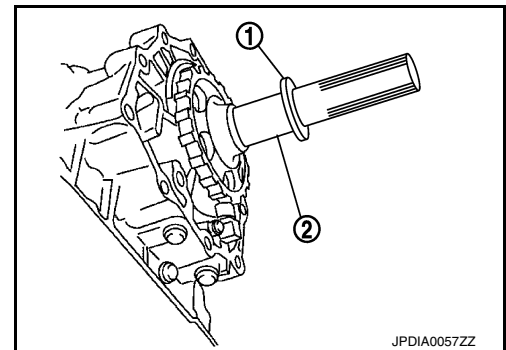

12. Remove output shaft (1) from transmission case by rotating left/right.

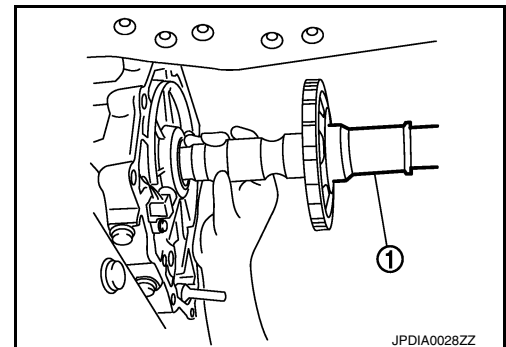


PARKING COMPONENTS


< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]


13. Remove parking gear (1) from output shaft (2).

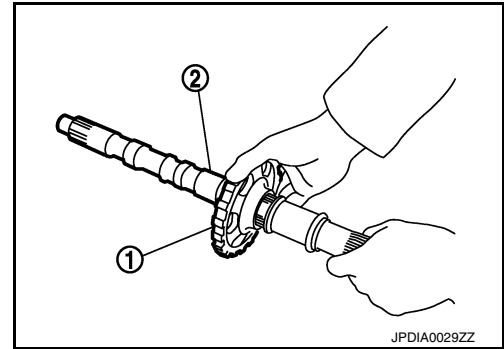


14. Remove seal rings (1) from output shaft.

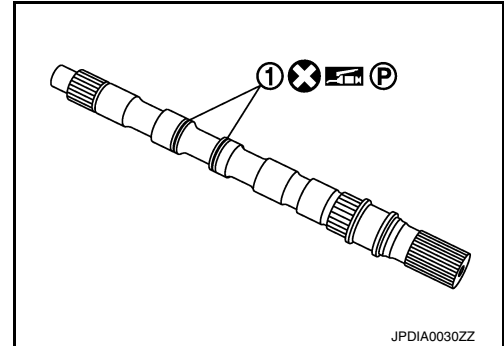


15. Remove needle bearing (1) from rear extension.

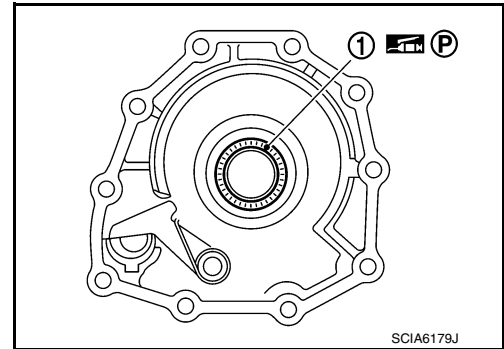

16. Remove parking actuator support (1) from rear extension.

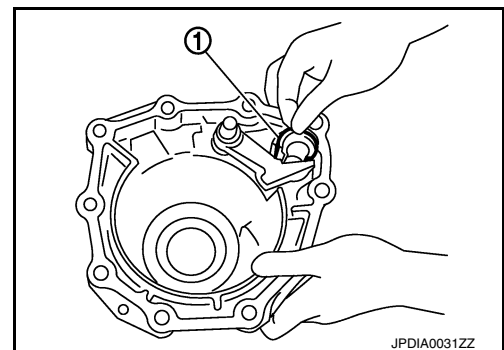

17. Remove parking pawl (with return spring) (1) and pawl shaft (2) from rear extension.

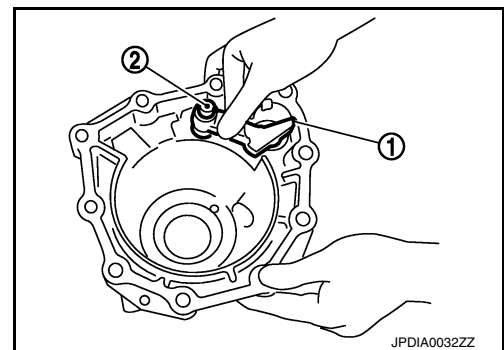


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

PARKING COMPONENTS

< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]

18. Remove return spring (1) from parking pawl (2).

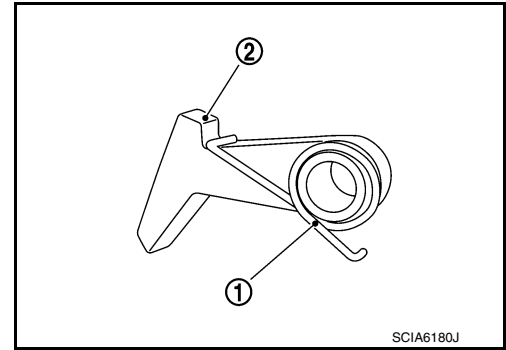

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:


- Never reuse seal rings and drain plug gasket.
- Apply petroleum jelly to needle bearing and seal rings.
- Insert the tip of parking rod between the parking pawl and the parking actuator support when assembling the rear extension assembly.
- Refer to the followings installing rear extension assembly.
- Apply recommended sealant to rear extension assembly as shown in the figure.

Use Anaerobic Liquid Gasket or an equivalent. Refer to [GI-22](#), "[Recommended Chemical Products and Sealants](#)".

Sealant starting point and end-point (A)	: Start and finish point shall be in the center of two bolts.
Overlap width of sealant starting point and end-point (B)	: 3 – 5 mm (0.12 – 0.20 in)
Sealant width (C)	: 1.0 – 2.0 mm (0.04 – 0.08 in)
Sealant height (C)	: 0.4 – 1.0 mm (0.016 – 0.04 in)

CAUTION:


Completely remove all moisture, oil and old sealant, etc. from transmission case and rear extension assembly mounting surfaces.

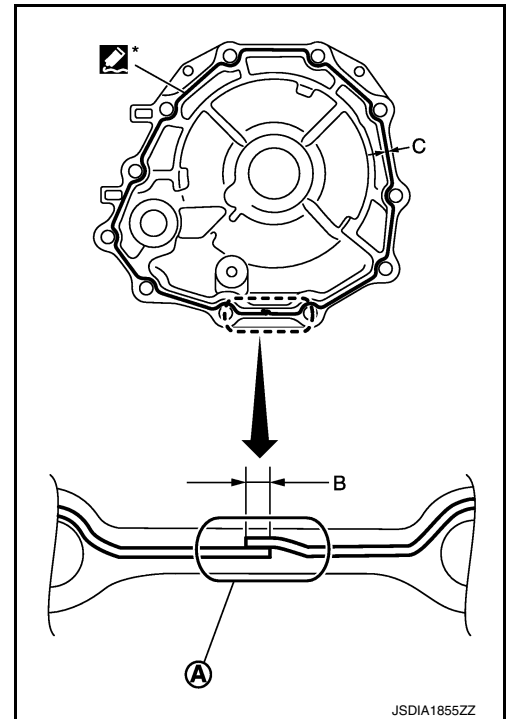

- Tighten rear extension assembly bolts to the specified torque.

- A : Bolt
- B : Self-sealing bolt

• Fill ATF after installation. Refer to [TM-174](#), "[Changing](#)".

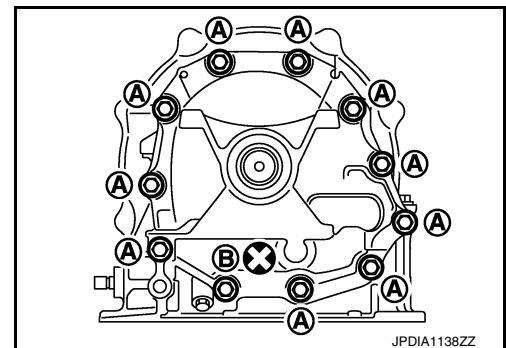

2WD : Inspection and Adjustment

INFOID:000000012167636


INSPECTION AFTER REMOVAL

PARKING COMPONENTS

< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]

If the contact surface on parking actuator support (1), parking pawl (2) and etc. has excessive wear, abrasion, bend, or any other damage, replace the components.

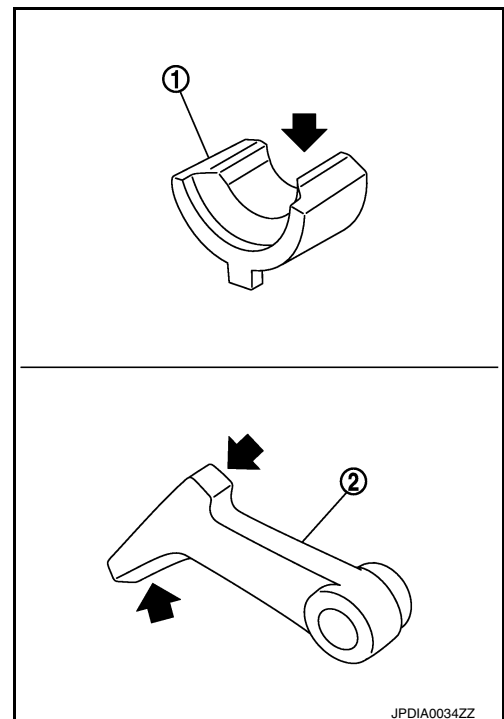

INSPECTION AFTER INSTALLATION

- Start the engine and check visually that there is no leakage of ATF.
- Check A/T position after adjusting A/T position. Refer to [TM-181, "Inspection and Adjustment"](#).

ADJUSTMENT AFTER INSTALLATION

Adjust A/T position. Refer to [TM-181, "Inspection and Adjustment"](#).

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

REAR OIL SEAL

< REMOVAL AND INSTALLATION >


[7AT: RE7R01A]

REAR OIL SEAL

2WD

2WD : Exploded View

INFOID:000000012167637

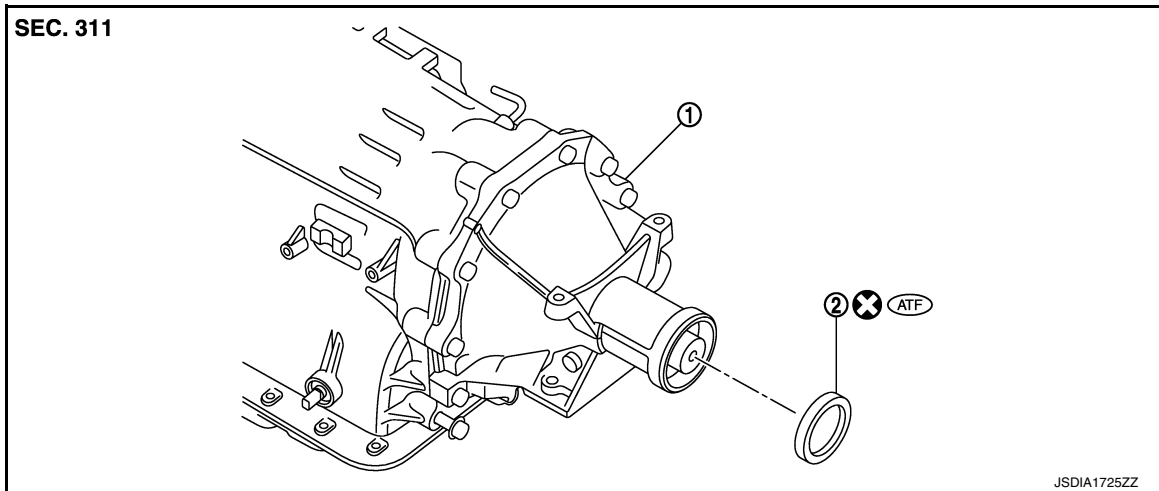

1. A/T assembly
 2. Rear oil seal
- Refer to [GI-4, "Components"](#) for symbols in the figure.

2WD : Removal and Installation


INFOID:000000012167638

REMOVAL

1. Separate propeller shaft assembly. Refer to [DLN-100, "Removal and Installation"](#).
2. Remove rear oil seal (1) using a flat-bladed screwdriver (A).

CAUTION:

Be careful not to scratch rear extension assembly.

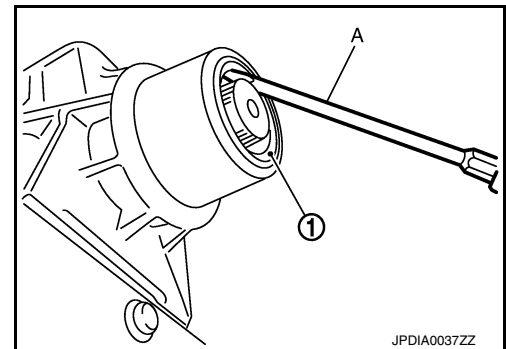


INSTALLATION

Note the following, and install in the reverse order of removal.

- As shown in the figure, use the drift [SST: ST33400001 (J-26082)] (A) to drive rear oil seal into rear extension assembly until it is flush.

CAUTION:

- Never reuse rear oil seal.
- Apply ATF to rear oil seal.
- Never incline rear oil seal.

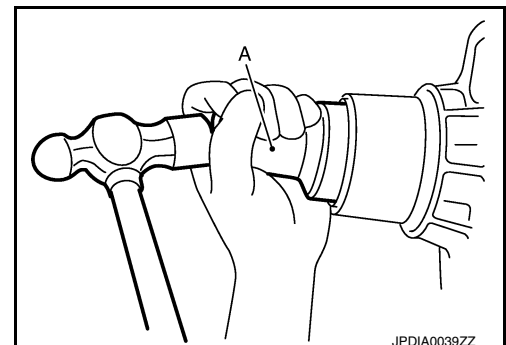

REAR OIL SEAL

< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]

2WD : Inspection and Adjustment

INFOID:000000012167639

INSPECTION AFTER INSTALLATION

Drive the vehicle and check visually that there is no leakage of ATF.


ADJUSTMENT AFTER INSTALLATION

Adjust A/T fluid level. Refer to [TM-176, "Adjustment"](#).

AWD

AWD : Exploded View

INFOID:000000012167640

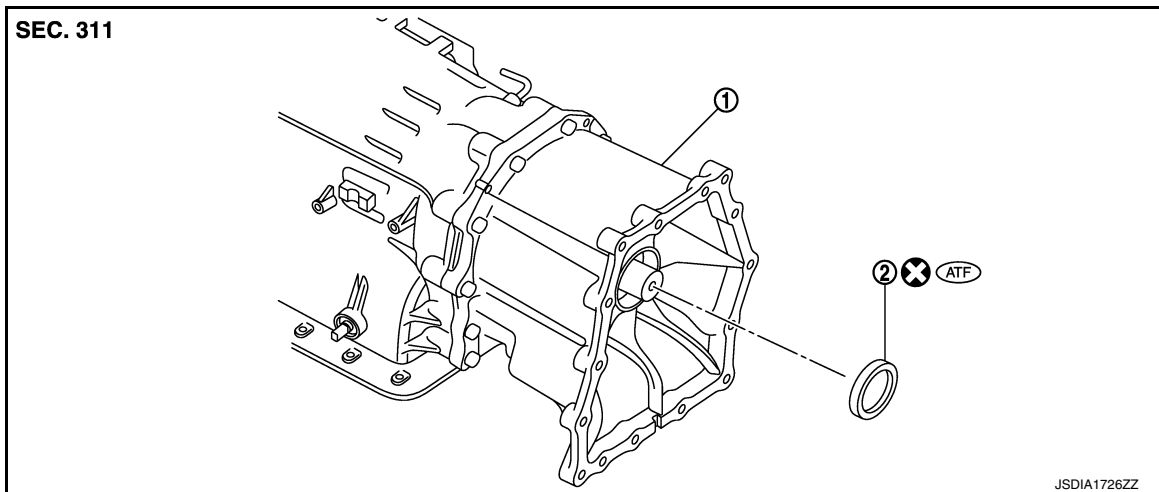

1. A/T assembly
2. Rear oil seal

Refer to [GI-4, "Components"](#) for symbols in the figure.

AWD : Removal and Installation


INFOID:000000012167641

REMOVAL

1. Remove transfer assembly from A/T assembly. Refer to [DLN-66, "Removal and Installation"](#).
2. Remove rear oil seal (1) using a flat-bladed screwdriver (A).

CAUTION:

Be careful not to scratch adapter case assembly.

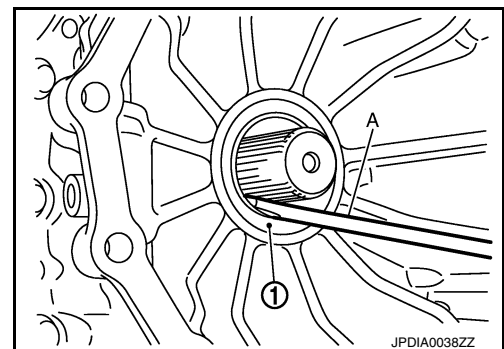

INSTALLATION

Note the following, and install in the reverse order of removal.

REAR OIL SEAL


< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]

- As shown in the figure, use the drift [64 mm (2.52 in) dia. commercial service tool] (A) to drive rear oil seal into adapter case assembly until it is flush.

CAUTION:

- **Never reuse rear oil seal.**
- **Apply ATF to rear oil seal.**
- **Never incline rear oil seal.**

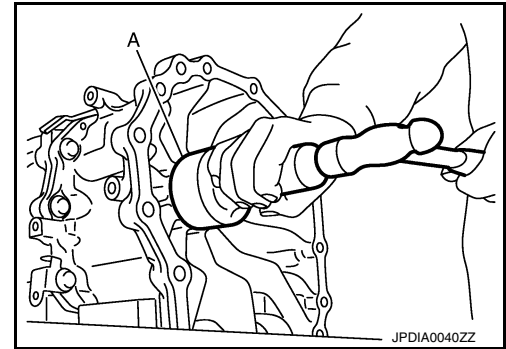

INFOID:000000012167642

AWD : Inspection and Adjustment

INSPECTION AFTER INSTALLATION

Drive the vehicle and check visually that there is no leakage of ATF.

ADJUSTMENT AFTER INSTALLATION

Adjust A/T fluid level. Refer to [TM-176, "Adjustment"](#).

OUTPUT SPEED SENSOR

< REMOVAL AND INSTALLATION >


[7AT: RE7R01A]

OUTPUT SPEED SENSOR

2WD

2WD : Exploded View

INFOID:000000012167643

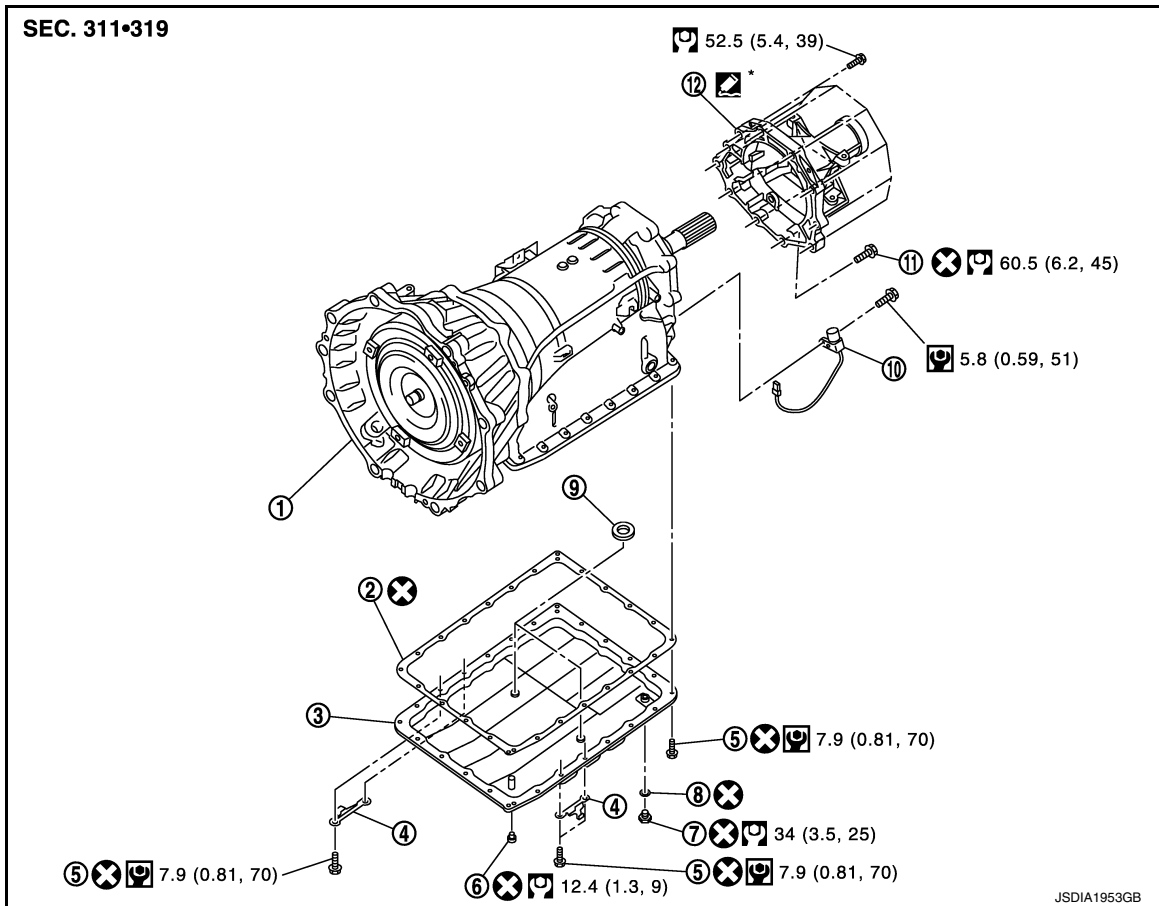

- | | | |
|-------------------------|--------------------------|--------------------|
| 1. A/T assembly | 2. Oil pan gasket | 3. Oil pan |
| 4. Clip | 5. Oil pan mounting bolt | 6. Overflow plug |
| 7. Drain plug | 8. Drain plug gasket | 9. Magnet |
| 10. Output speed sensor | 11. Self-sealing bolt | 12. Rear extension |

: Apply Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).
Refer to [GI-4, "Components"](#) for symbols not described on the above.

2WD : Removal and Installation

INFOID:000000012167644

REMOVAL

1. Disconnect the battery cable from the negative terminal.
2. Drain ATF through drain plug.
3. Remove exhaust front tube and center muffler with power tool. Refer to [EX-6, "Removal and Installation"](#).
4. Remove propeller shaft assembly. Refer to [DLN-100, "Removal and Installation"](#).
5. Remove control rod. Refer to [TM-185, "Removal and Installation"](#).
6. Remove exhaust mounting bracket. Refer to [EX-6, "Removal and Installation"](#).

OUTPUT SPEED SENSOR

< REMOVAL AND INSTALLATION >


[7AT: RE7R01A]

7. Disconnect heated oxygen sensor 2 harness connectors (A).

⇐ : Vehicle front

← : Bolt

8. Remove heated oxygen sensor 2 harness (B) from clips (1).
9. Remove bracket (2) from transmission assembly. Refer to [TM-211, "2WD : Removal and Installation"](#).

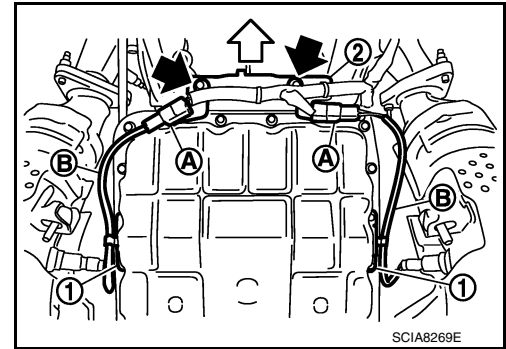

10. Remove clips (1).


⇐ : Vehicle front

← : Oil pan mounting bolt

11. Remove oil pan (2) and oil pan gasket.
12. Support A/T assembly with a transmission jack.

CAUTION:


When setting transmission jack, place wooden blocks to prevent from damaging control valve & TCM and transmission case.

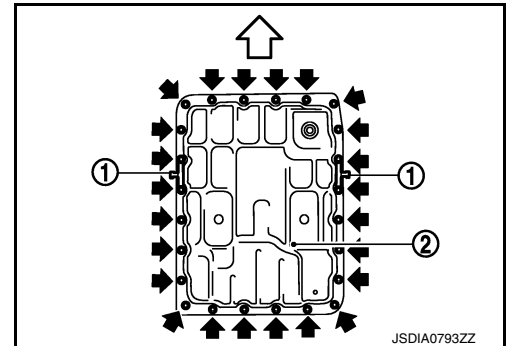


13. Remove rear engine mounting member with power tool. Refer to [EM-70, "2WD : Exploded View"](#).
14. Remove engine mounting insulator (rear). Refer to [EM-70, "2WD : Exploded View"](#).
15. Remove tightening bolts for rear extension assembly and transmission case.

A : Bolt

B : Self-sealing bolt

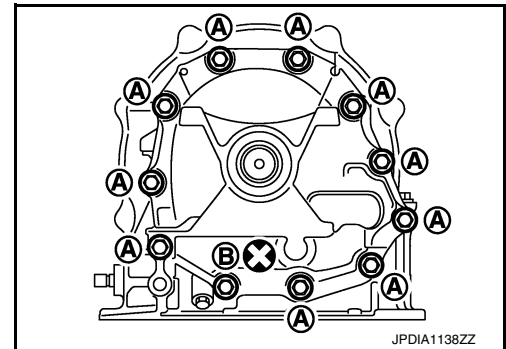

16. Tap rear extension assembly with a soft hammer (A).

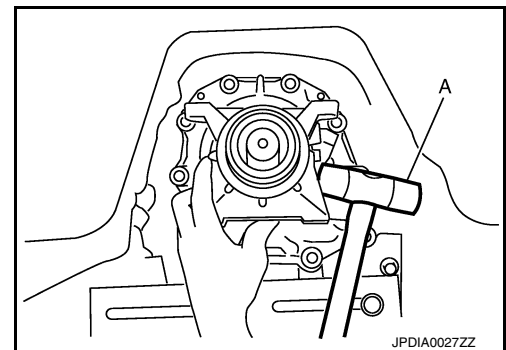


OUTPUT SPEED SENSOR

< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]

17. Remove rear extension assembly (with needle bearing) from transmission case.

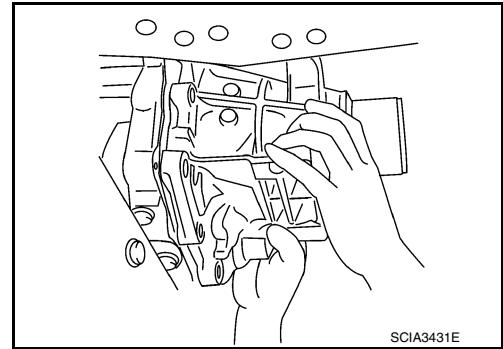


18. Disconnect output speed sensor connector (A).

CAUTION:

Be careful not to damage connector

19. Disengage terminal clips (←).

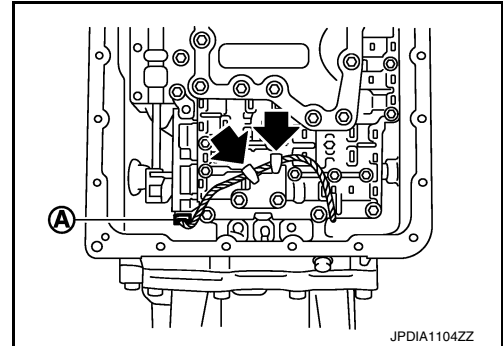


20. Remove output speed sensor (1) from transmission case.

← : Bolt

CAUTION:

- Never subject it to impact by dropping or hitting it.
- Never disassemble.
- Never allow metal filings, etc. to get on the sensor's front edge magnetic area.
- Never place in an area affected by magnetism.

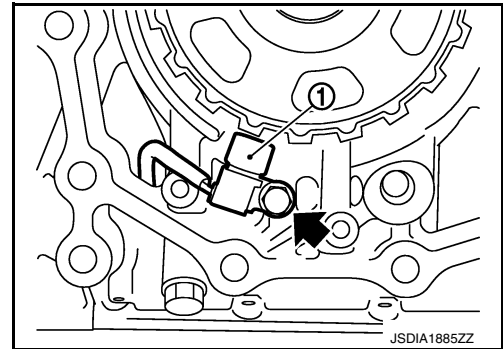

INSTALLATION

Note the following, and install in the reverse order removal.

CAUTION:

- Insert the tip of parking rod between the parking pole and the parking actuator support when assembling the rear extension assembly.
- Never reuse drain plug gasket.
- Refer to the followings when installing output speed sensor.

CAUTION:

- Never subject it to impact by dropping or hitting it.
 - Never disassemble.
 - Never allow metal filings, etc. to get on the sensor's front edge magnetic area.
 - Never place in an area affected by magnetism.
- Refer to the followings when installing rear extension assembly.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

OUTPUT SPEED SENSOR

[7AT: RE7R01A]


< REMOVAL AND INSTALLATION >

- Apply recommended sealant to rear extension assembly as shown in the figure.
Use Anaerobic Liquid Gasket or an equivalent. Refer to [GI-22](#), "[Recommended Chemical Products and Sealants](#)".

- Sealant starting point and end-point (A) :** Start and finish point shall be in the center of two bolts.
- Overlap width of sealant starting point and end-point (B) :** 3 – 5 mm (0.12 – 0.20 in)
- Sealant width (C) :** 1.0 – 2.0 mm (0.04 – 0.08 in)
- Sealant height (C) :** 0.4 – 1.0 mm (0.016 – 0.04 in)

CAUTION:


Completely remove all moisture, oil and old sealant, etc. from transmission case and rear extension assembly mounting surfaces.

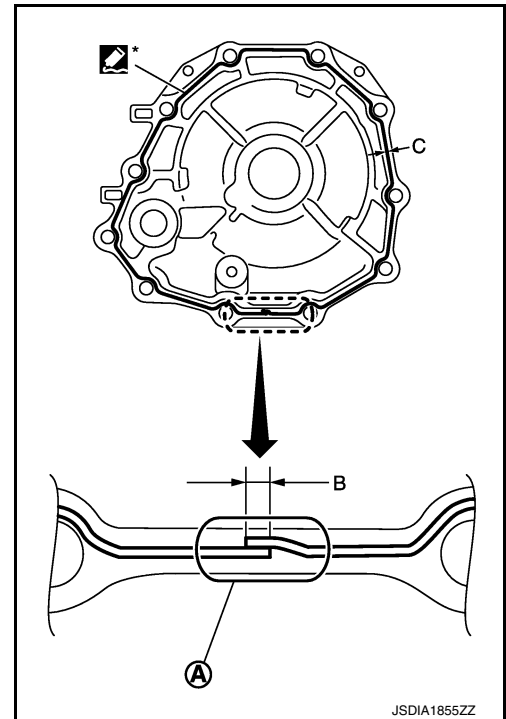

JSDIA1855ZZ

- Tighten rear extension assembly bolts to the specified torque.

- A : Bolt
B : Self-sealing bolt

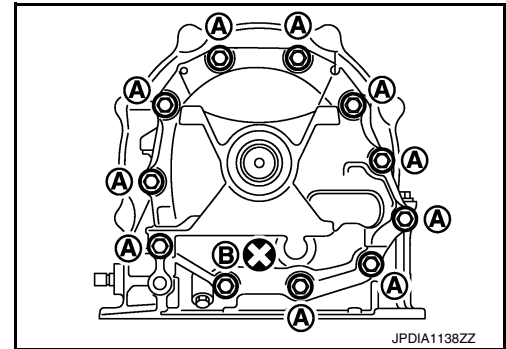


JPDIA1138ZZ

- Refer to the followings when installing oil pan (2) (with oil pan gasket) and clips (1) to transmission case.

- ⇐ : Vehicle front
◀ : Oil pan mounting bolt

CAUTION:

- Never reuse oil pan gasket and oil pan mounting bolts.
- Install oil pan gasket in the direction to align hole position.
- Install it so that drain plug comes to the position as shown in the figure.
- Be careful not to pinch harnesses.
- Completely remove all moisture, oil and old gasket, etc. from oil pan mounting surface.

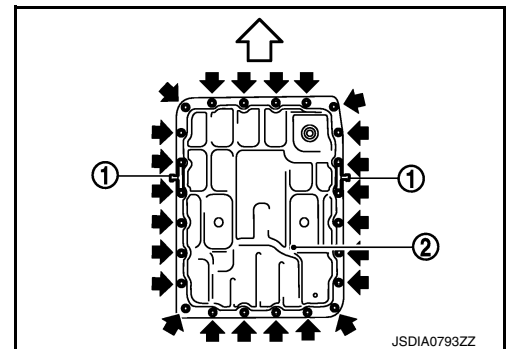

JSDIA0793ZZ

OUTPUT SPEED SENSOR


< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]

- Tighten oil pan mounting bolts to the specified torque in numerical order shown in the figure after temporarily tightening them. Tighten necessary oil pan mounting bolts with specified torque.

← : Vehicle front

- Fill ATF after installation. Refer to [TM-174, "Changing"](#).

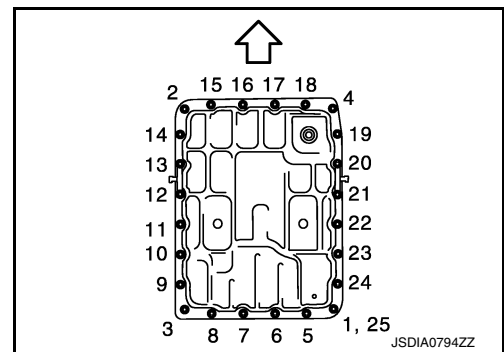


INFOID:000000012167645

2WD : Inspection and Adjustment

INSPECTION AFTER REMOVAL

Check foreign materials in oil pan to help determine causes of malfunction. If the ATF is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.

- **If frictional material is detected, replace radiator after repair of A/T. Refer to [CO-14, "Removal and Installation"](#).**

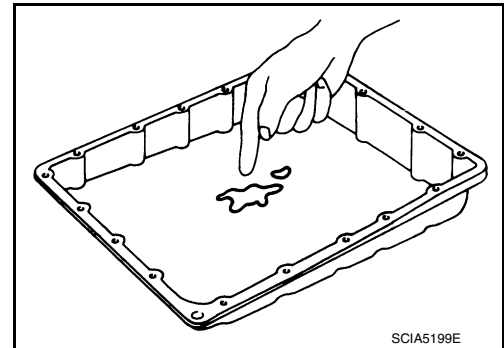

INSPECTION AFTER INSTALLATION

- Start the engine and check visually that there is no leakage of ATF.
- Check A/T position after adjusting A/T position. Refer to [TM-181, "Inspection and Adjustment"](#).

ADJUSTMENT AFTER INSTALLATION

Adjust A/T position. Refer to [TM-181, "Inspection and Adjustment"](#).

AIR BREATHER HOSE

< REMOVAL AND INSTALLATION >


[7AT: RE7R01A]

AIR BREATHER HOSE

2WD

2WD : Exploded View

INFOID:000000012167646

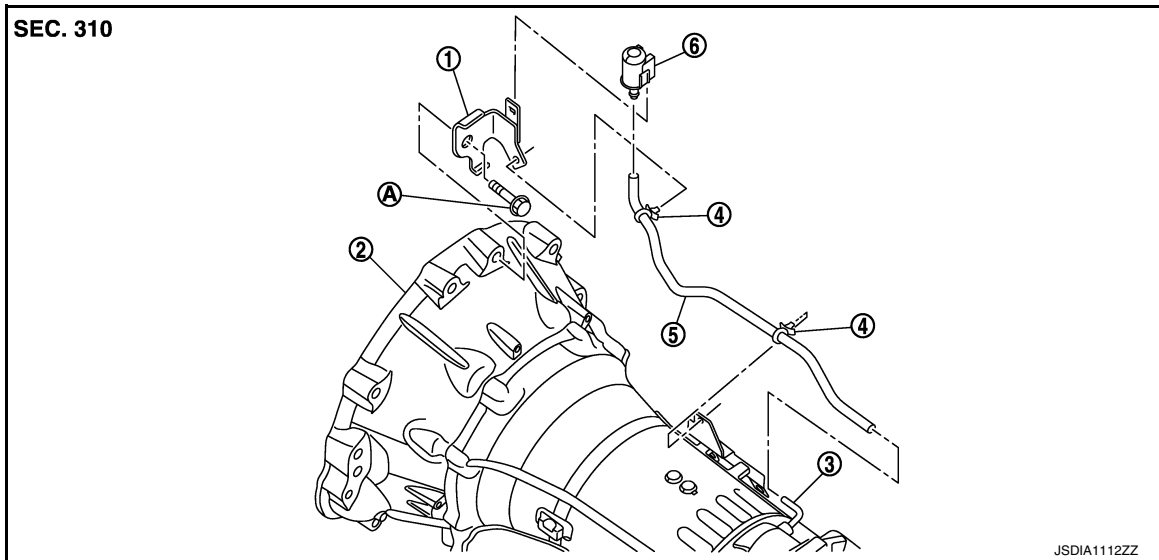

- | | | |
|------------|----------------------|----------------------|
| 1. Bracket | 2. A/T assembly | 3. Air breather tube |
| 4. Clip | 5. Air breather hose | 6. Air breather box |

A. Tightening must be done following the installation procedure. Refer to [TM-204, "2WD : Removal and Installation"](#).

2WD : Removal and Installation

INFOID:000000012167647

REMOVAL

1. Remove clips of air breather hose from brackets.
2. Remove air breather box from bracket.
3. Remove air breather box from air breather hose.
4. Remove air breather hose.
5. Separate propeller shaft assembly. Refer to [DLN-100, "Removal and Installation"](#).
6. Remove control rod from A/T shift selector assembly. Refer to [TM-183, "Removal and Installation"](#).
7. Support A/T assembly with a transmission jack.

CAUTION:

When setting the transmission jack, be careful not to allow it to collide against the drain plug and overflow plug.

8. Remove rear engine mounting member with a power tool. Refer to [EM-70, "2WD : Exploded View"](#).
9. Remove bolt fixing A/T assembly to engine with a power tool.
10. Remove bracket.

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

- When installing air breather hose, be careful not to crushed or blocked by folding or bending the hose.
- When inserting air breather hose to air breather tube, be sure to insert it fully until its end reaches the radius curve end.
- When inserting air breather hose to air breather box, be sure to insert it fully until its end reaches the stop.
- Install air breather hose to air breather box so that the paint mark is facing backward.
- Ensure clips are securely installed to brackets when installing air breather hose to brackets.

AIR BREATHER HOSE


< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]

AWD

AWD : Exploded View

INFOID:000000012167648

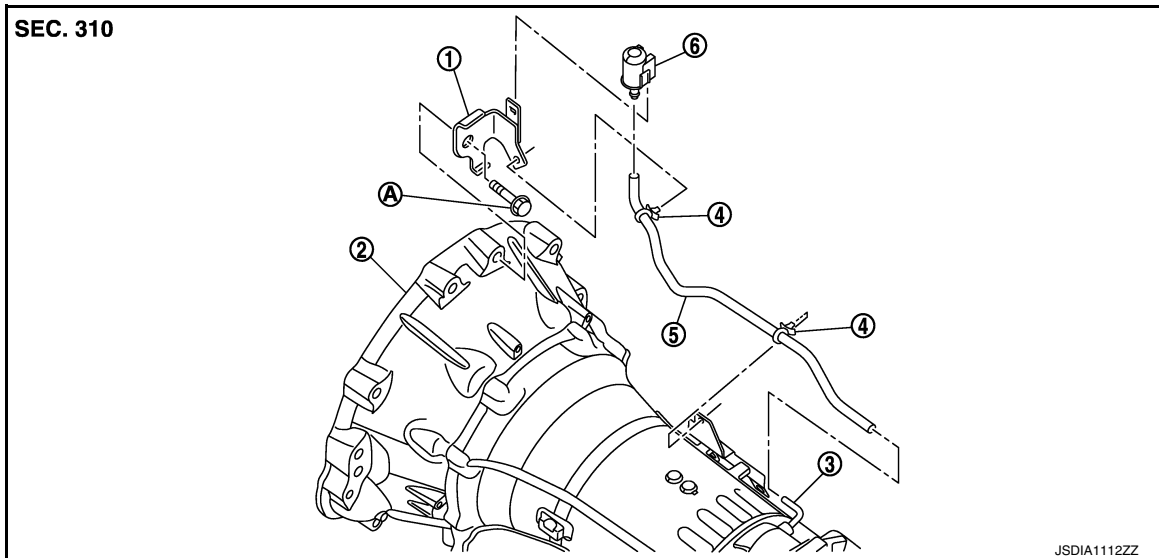

- | | | |
|------------|----------------------|----------------------|
| 1. Bracket | 2. A/T assembly | 3. Air breather tube |
| 4. Clip | 5. Air breather hose | 6. Air breather box |
- A. Tightening must be done following the installation procedure. Refer to [TM-205, "AWD : Removal and Installation"](#).

AWD : Removal and Installation

INFOID:000000012167649

REMOVAL

1. Remove propeller shaft assembly (front). Refer to [DLN-92, "Exploded View"](#).
2. Remove clips of air breather hose from brackets.
3. Remove air breather box from bracket.
4. Remove air breather box from air breather hose.
5. Remove air breather hose.
6. Remove propeller shaft assembly (rear). Refer to [DLN-110, "Exploded View"](#).
7. Remove control rod from A/T shift selector assembly. Refer to [TM-182, "Exploded View"](#).
8. Support A/T assembly with a transmission jack.

CAUTION:

Be careful not to allow it to collide against the drain plug and overflow plug when setting the transmission jack.

9. Remove rear engine mounting member with a power tool. Refer to [EM-74, "AWD : Exploded View"](#).
10. Remove bolt fixing A/T assembly to engine assembly with power tool.
11. Remove bracket.

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

- When installing air breather hose, be careful not to crushed or blocked by folding or bending the hose.
- When inserting air breather hose to air breather tube, be sure to insert it fully until its end reaches the radius curve end.
- When inserting air breather hose to air breather box, be sure to insert it fully until its end reaches the stop.
- Install air breather hose to air breather box so that the paint mark is facing backward.
- Ensure clips are securely installed to brackets when installing air breather hose to brackets.

FLUID COOLER SYSTEM

< REMOVAL AND INSTALLATION >


[7AT: RE7R01A]

FLUID COOLER SYSTEM

2WD

2WD : Exploded View

INFOID:000000012167650

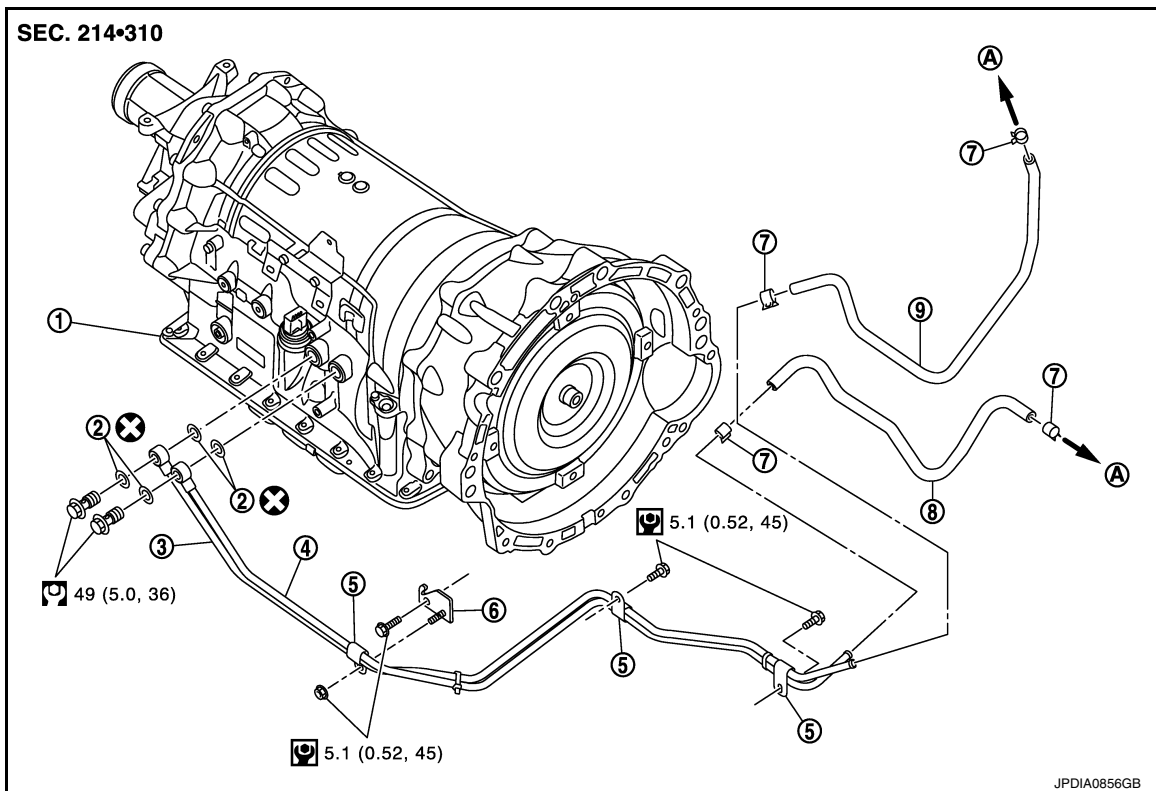

- | | | |
|--------------------------|----------------------------|----------------------------|
| 1. A/T assembly | 2. Copper washer | 3. A/T fluid cooler tube |
| 4. A/T fluid cooler tube | 5. Clip | 6. Bracket |
| 7. Hose clamp | 8. A/T fluid cooler hose B | 9. A/T fluid cooler hose A |
| A. To radiator | | |

Refer to [GI-4. "Components"](#) for symbols in the figure.

2WD : Removal and Installation

INFOID:000000012167651

REMOVAL

1. Remove engine lower cover with power tool. Refer to [EXT-31. "Removal and Installation"](#).
2. Remove A/T fluid cooler hose A and A/T fluid cooler hose B.
3. Remove A/T fluid cooler tubes from A/T assembly and engine.
4. Plug up opening such as the A/T fluid cooler tube hole.
5. Remove A/T fluid cooler tubes from the vehicle.
CAUTION:
Be careful not to bend A/T fluid cooler tubes.
6. Remove clips and bracket.

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

Never reuse copper washer.

- Refer to the following when installing A/T fluid cooler hoses.

FLUID COOLER SYSTEM

< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]

Hose name	Hose end	Paint mark	Position of hose clamp*
A/T fluid cooler hose A	Radiator assembly side	Facing backward	A
	A/T fluid cooler tube side	Facing downward	B
A/T fluid cooler hose B	Radiator assembly side	Facing downward	C
	A/T fluid cooler tube side	Facing downward	B


*: Refer to the illustrations for the specific position each hose clamp tab.

- The illustrations indicate the view from the hose ends.

↔ D : Vehicle front


↔ E : Vehicle upper

- When installing hose clamps center line of each hose clamp tab should be positioned as shown in the figure.

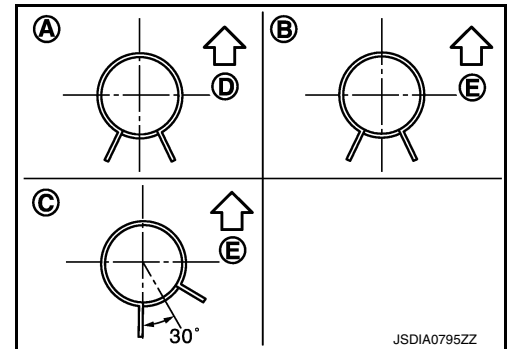

- Insert A/T fluid cooler hoses according to dimension "L" described below.


(1)	(2)	Tube type	Dimension "L"
A/T fluid cooler hose A	Radiator assembly side	A	End reaches the radius curve end.
	A/T fluid cooler tube side	B	30 mm (1.18 in) [End reaches the 2-stage bulge (D).]
A/T fluid cooler hose B	Radiator assembly side	C	Insert the hose until the hose touches the radiator.
	A/T fluid cooler tube side	B	30 mm (1.18 in) [End reaches the 2-stage bulge (D).]

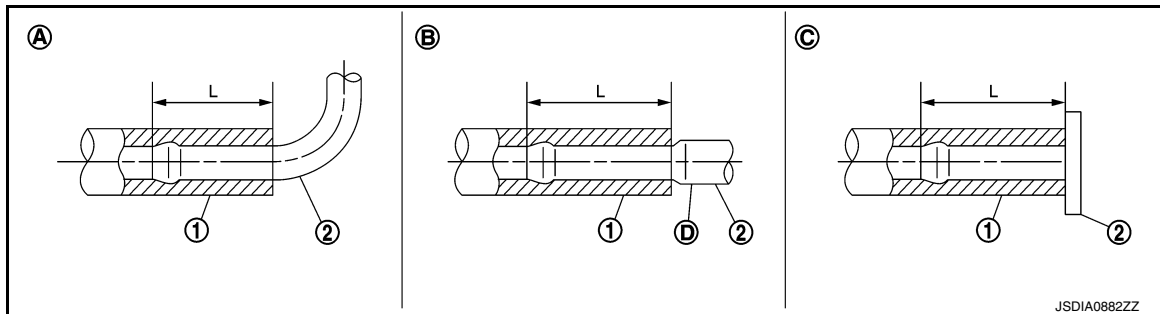

- Set hose clamps (1) at the both ends of A/T fluid cooler hoses (2) with dimension "A" from the hose edge.

Dimension "A" : 5 – 9 mm (0.20 – 0.35 in)

- Hose clamp should not interfere with the bulge of fluid cooler tube.

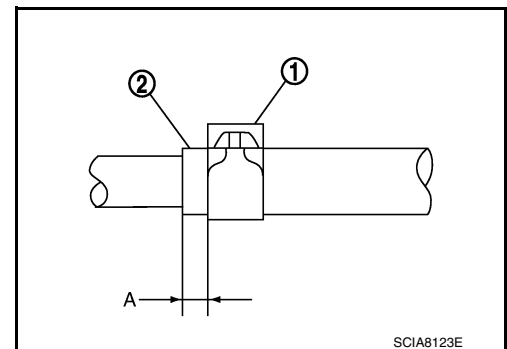

2WD : Inspection and Adjustment

INFOID:000000012167652

INSPECTION AFTER INSTALLATION

Start the engine and check visually that there is no leakage of ATF.

FLUID COOLER SYSTEM

< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]


ADJUSTMENT AFTER INSTALLATION

Adjust A/T fluid level. Refer to [TM-176. "Adjustment"](#).

AWD

AWD : Exploded View

INFOID:000000012167653

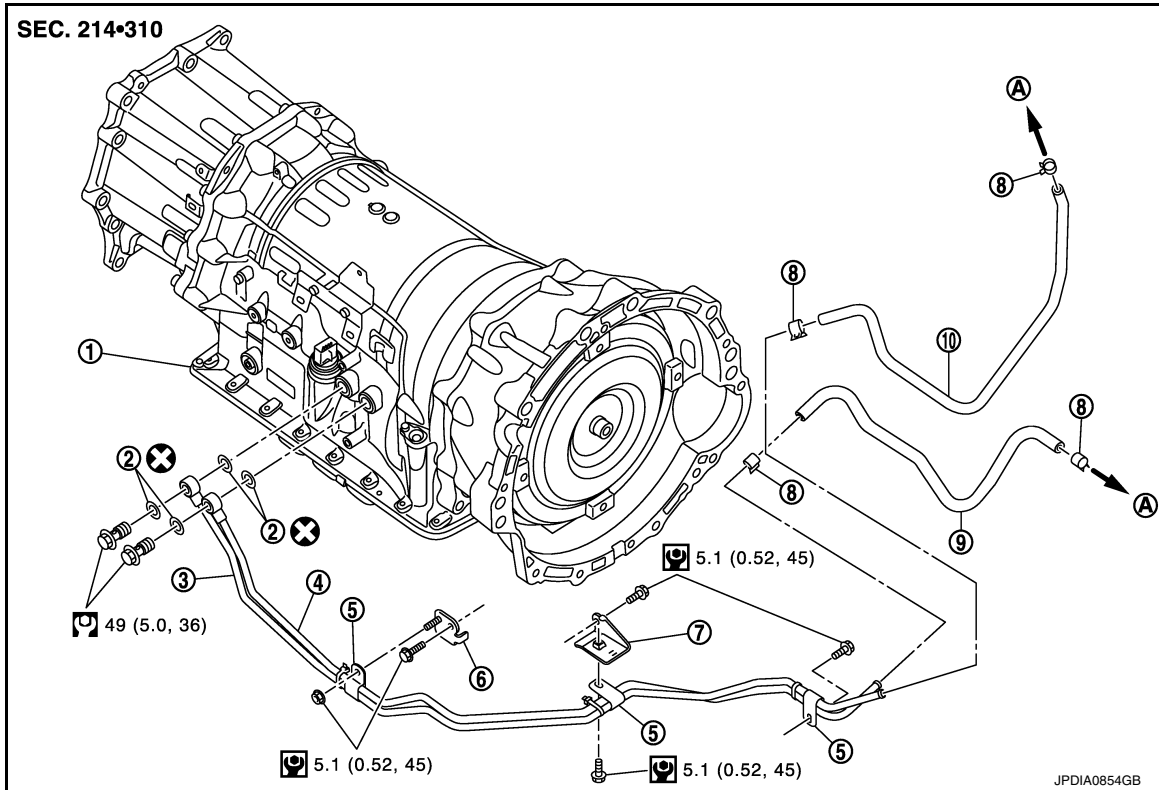

- | | | |
|-----------------------------|------------------|----------------------------|
| 1. A/T assembly | 2. Copper washer | 3. A/T fluid cooler tube |
| 4. A/T fluid cooler tube | 5. Clip | 6. Bracket |
| 7. Bracket | 8. Hose clamp | 9. A/T fluid cooler hose B |
| 10. A/T fluid cooler hose A | | |
- A. To radiator

Refer to [GI-4. "Components"](#) for symbols in the figure.

AWD : Removal and Installation

INFOID:000000012167654

REMOVAL

1. Remove engine lower cover with a power tool. Refer to [EXT-31. "Removal and Installation"](#).
2. Remove A/T fluid cooler hose A and A/T fluid cooler hose B.
3. Remove control rod from A/T shift selector. Refer to [TM-183. "Removal and Installation"](#).
4. Remove exhaust mounting bracket. Refer to [EX-6. "Removal and Installation"](#).

FLUID COOLER SYSTEM

< REMOVAL AND INSTALLATION >


[7AT: RE7R01A]

- Disconnect heated oxygen sensor 2 connectors (A).

↔ : Vehicle front

← : Bolt

- Remove heated oxygen sensor 2 harness (B) from clips (1).
- Remove bracket (2) from A/T assembly. Refer to [TM-214](#). "[AWD : Removal and Installation](#)".
- Remove propeller shaft assembly (rear). Refer to [DLN-110](#). "[Removal and Installation](#)".
- Remove propeller shaft assembly (front). Refer to [DLN-92](#). "[Removal and Installation](#)".

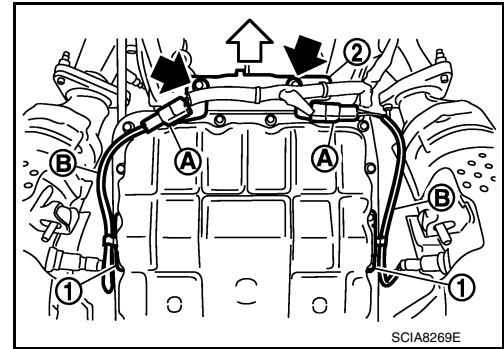

- Lift up a transmission jack to make the gap between converter housing of A/T assembly and front suspension member.

CAUTION:

Never contact the A/T and transfer assembly with the lower lever of A/T shift selector when lifting up a transmission jack.

- Remove A/T fluid cooler tubes from A/T assembly and engine.
- Plug up opening such as the A/T fluid cooler tube hole.
- Remove clips and brackets.
- Remove A/T fluid cooler tubes from the vehicle.

CAUTION:

Be careful not to bend A/T fluid cooler tubes.

INSTALLATION

Note the following, and install in the reverse order of removal.

CAUTION:

Never reuse copper washer.

- Refer to the following when installing A/T fluid cooler hoses.

Hose name	Hose end	Paint mark	Position of hose clamp*
A/T fluid cooler hose A	Radiator assembly side	Facing backward	A
	A/T fluid cooler tube side	Facing downward	B
A/T fluid cooler hose B	Radiator assembly side	Facing downward	C
	A/T fluid cooler tube side	Facing downward	B


*: Refer to the illustrations for the specific position each hose clamp tab.

- The illustrations indicate the view from the hose ends.

↔ D : Vehicle front

↔ E : Vehicle upper

- When installing hose clamps center line of each hose clamp tab should be positioned as shown in the figure.

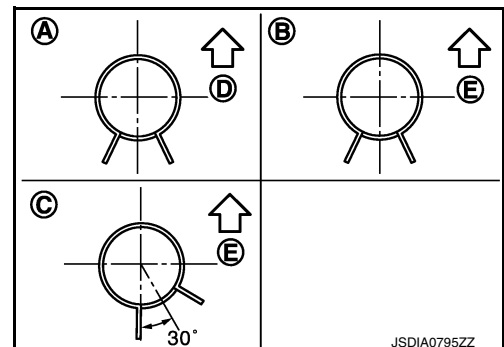

- Insert A/T fluid cooler hoses according to dimension "L" described below.


(1)	(2)	Tube type	Dimension "L"
A/T fluid cooler hose A	Radiator assembly side	A	End reaches the radius curve end.
	A/T fluid cooler tube side	B	30 mm (1.18 in) [End reaches the 2-stage bulge (D).]

FLUID COOLER SYSTEM

< REMOVAL AND INSTALLATION >

[7AT: RE7R01A]


(1)	(2)	Tube type	Dimension "L"
A/T fluid cooler hose B	Radiator assembly side	C	Insert the hose until the hose touches the radiator.
	A/T fluid cooler tube side	B	30 mm (1.18 in) [End reaches the 2-stage bulge (D).]

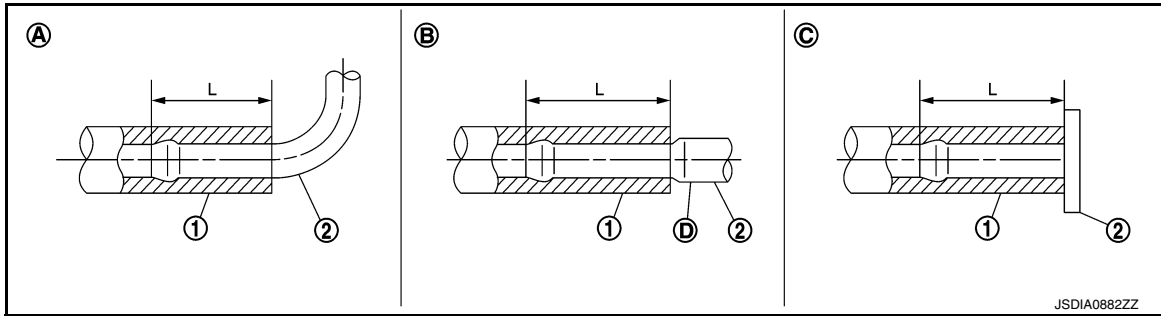

- Set hose clamps (1) at the both ends of A/T fluid cooler hoses (2) with dimension "A" from the hose edge.

Dimension "A" : 5 – 9 mm (0.20 – 0.35 in)

- Hose clamp should not interfere with the bulge of fluid cooler tube.

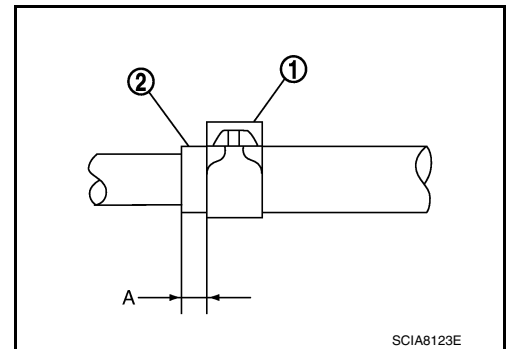

AWD : Inspection and Adjustment

INFOID:000000012167655

INSPECTION AFTER INSTALLATION

Start the engine and check visually that there is no leakage of ATF.

ADJUSTMENT AFTER INSTALLATION

Adjust A/T fluid level. Refer to [TM-176, "Adjustment"](#).

TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[7AT: RE7R01A]


UNIT REMOVAL AND INSTALLATION

TRANSMISSION ASSEMBLY

2WD

2WD : Exploded View

INFOID:000000012167656

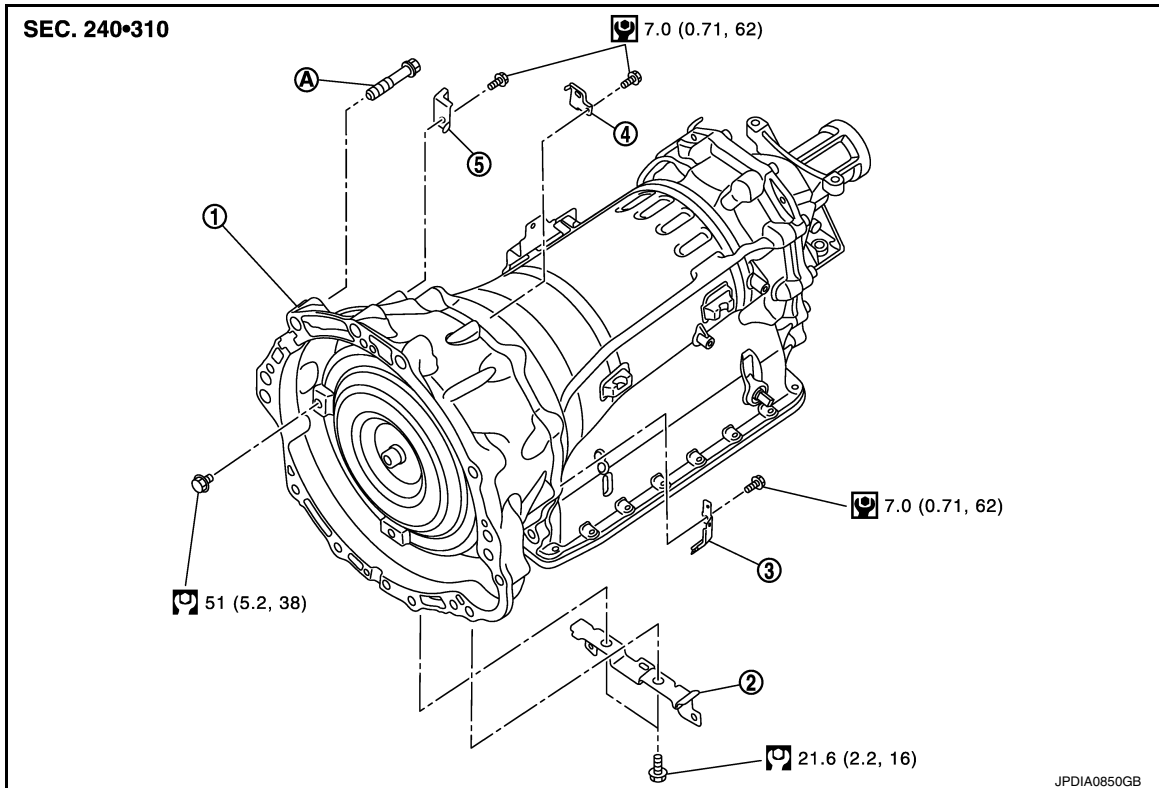

- | | | |
|-----------------|------------|------------|
| 1. A/T assembly | 2. Bracket | 3. Bracket |
| 4. Bracket | 5. Bracket | |

A. Tightening must be done following the installation procedure. Refer to [TM-211, "2WD : Removal and Installation"](#).

Refer to [GI-4, "Components"](#) for symbols in the figure.

2WD : Removal and Installation

INFOID:000000012167657

REMOVAL

CAUTION:

- When removing the A/T assembly from engine, first remove the crankshaft position sensor (POS) from the A/T assembly.
- Be careful not to damage sensor edge.

1. Shift the selector lever to "P" position, and then release the parking brake.
2. Disconnect the battery cable from the negative terminal.
3. Remove control rod from A/T shift selector assembly. Refer to [TM-183, "Removal and Installation"](#).
4. Remove propeller shaft assembly (rear). Refer to [DLN-100, "Removal and Installation"](#).
5. Remove engine lower cover with a power tool. Refer to [EXT-31, "Removal and Installation"](#).
6. Remove suspension member stay. Refer to [FSU-19, "Removal and Installation"](#).
7. Remove exhaust mounting bracket. Refer to [EX-6, "Removal and Installation"](#).
8. Remove three way catalyst (bank 1). Refer to [EX-6, "Removal and Installation"](#).
9. Remove crankshaft position sensor (POS) from A/T assembly. Refer to [EM-122, "Exploded View"](#).

CAUTION:


- Never subject it to impact by dropping or hitting it.

TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[7AT: RE7R01A]


- Never disassemble.
 - Never allow metal filings, etc. to get on the sensor's front edge magnetic area.
 - Never place in an area affected by magnetism.
10. Remove starter motor. Refer to [STR-21, "Removal and Installation"](#).
 11. Remove rear plate cover. Refer to [EM-44, "Exploded View"](#).
 12. Turn crankshaft, and remove the four tightening bolts for drive plate and torque converter.
CAUTION:
When turning the crankshaft, turn it clockwise as viewed from the front of the engine.
 13. Remove A/T fluid cooler tubes from A/T assembly and engine. Refer to [TM-206, "2WD : Removal and Installation"](#).
 14. Plug up openings such as the A/T fluid cooler tube hole.
 15. Support A/T assembly with a transmission jack.
CAUTION:
When setting the transmission jack, be careful not to allow it to collide against the drain plug and overflow plug.
 16. Remove rear engine mounting member and engine mounting insulator (rear) with a power tool. Refer to [EM-70, "2WD : Exploded View"](#).
 17. Disconnect A/T assembly harness connector.
 18. Remove harness and brackets.
 19. Remove bolts fixing A/T assembly to engine with a power tool.
 20. Remove A/T assembly from vehicle.
CAUTION:
 - Secure torque converter to prevent it from dropping.
 - Secure A/T assembly to a transmission jack.
 21. Remove air breather hose, air breather box, and bracket from A/T assembly. Refer to [TM-204, "2WD : Removal and Installation"](#).
 22. Remove manual lever from A/T assembly. Refer to [TM-185, "Removal and Installation"](#).

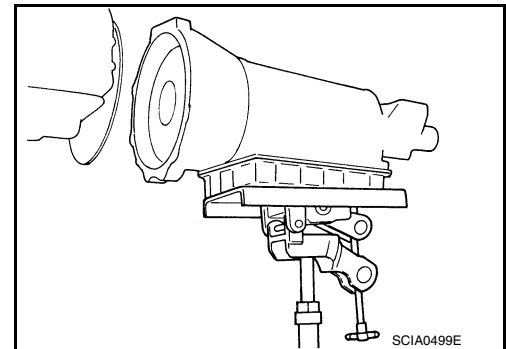

INSTALLATION

Note the following, and install in the reverse order of removal.

- Perform inspection before installing A/T assembly. Refer to [TM-213, "2WD : Inspection and Adjustment"](#).
- Check fitting of dowel pin (↔).

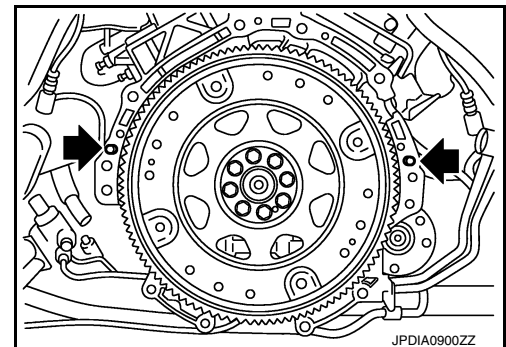


TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[7AT: RE7R01A]

- Install the fixing bolts of A/T assembly and engine according to the following standards.

Bolt symbol	A	B
Insertion direction	A/T assembly to engine	Engine to A/T assembly
Number of bolts	8	4
Bolt length "L" mm (in)	65 (2.56)	35 (1.38)
Tightening torque N·m (kg·m, ft·lb)	75 (7.7, 55)	46.6 (4.8, 34)

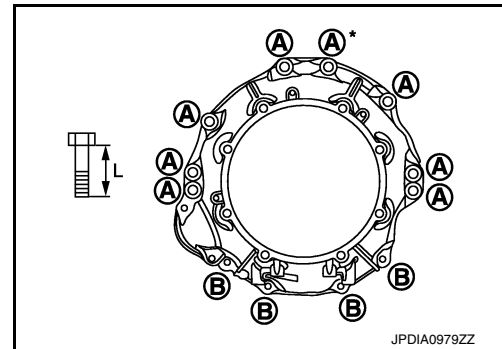

A
B
C

TM

E

F

G

H

I

J

K

L

M

N

O

P

- *: Tightening the bolt with bracket. Refer to [TM-204, "2WD : Removal and Installation"](#).
- Align the positions of tightening bolts for drive plate with those of the torque converter, and temporarily tighten the bolts. Then, tighten the bolts with the specified torque.

CAUTION:

- When turning crankshaft, turn it clockwise as viewed from the front of the engine.
- When tightening the tightening bolts for the torque converter after fixing the crankshaft pulley bolts, be sure to confirm the tightening torque of the crankshaft pulley mounting bolts. Refer to [EM-52, "Removal and Installation"](#).
- Rotate crankshaft several turns and check to be sure that A/T rotates freely without binding after converter is installed to drive plate.

2WD : Inspection and Adjustment


INFOID:000000012167658

INSPECTION BEFORE INSTALLATION

Check dimension (A) between the converter housing and torque converter.

- B : Scale
- C : Straightedge

Dimension (A) : Refer to [TM-303, "Torque Converter"](#).

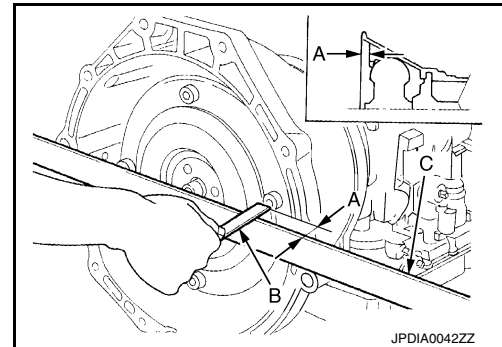

INSPECTION AFTER INSTALLATION

- Start the engine and check visually that there is no leakage of ATF.
- Check A/T position after adjusting A/T positions. Refer to [TM-181, "Inspection and Adjustment"](#).

ADJUSTMENT AFTER INSTALLATION

- Adjust A/T fluid level. Refer to [TM-176, "Adjustment"](#).
- Adjust A/T position. Refer to [TM-181, "Inspection and Adjustment"](#).

AWD


TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[7AT: RE7R01A]

AWD : Exploded View

INFOID:000000012167659

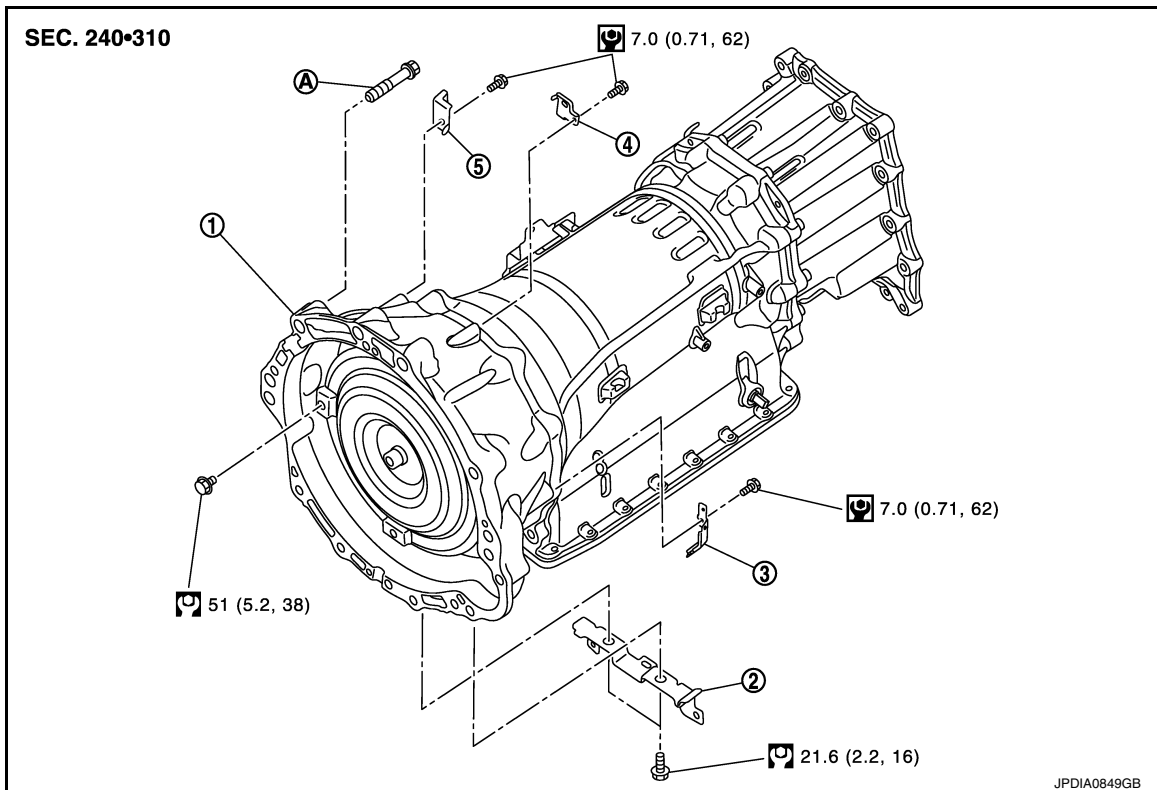

- | | | |
|-----------------|------------|------------|
| 1. A/T assembly | 2. Bracket | 3. Bracket |
| 4. Bracket | 5. Bracket | |

A. Tightening must be done following the installation procedure. Refer to [TM-214, "AWD : Removal and Installation"](#).
Refer to [GI-4, "Components"](#) for symbols in the figure.

AWD : Removal and Installation

INFOID:000000012167660

REMOVAL

CAUTION:

- When removing the A/T assembly from engine, first remove the crankshaft position sensor (POS) from the A/T assembly.

- Be careful not to damage sensor edge.

1. Shift the selector lever to "P" position, and then release the parking brake.
2. Disconnect the battery cable from the negative terminal.
3. Remove control rod from A/T shift selector assembly. Refer to [TM-183, "Removal and Installation"](#).
4. Remove propeller shaft assembly (rear). Refer to [DLN-110, "Removal and Installation"](#).
5. Remove propeller shaft assembly (front). Refer to [DLN-92, "Removal and Installation"](#).
6. Remove crankshaft position sensor (POS) from A/T assembly. Refer to [EM-122, "Exploded View"](#).

CAUTION:

- Never subject it to impact by dropping or hitting it.
- Never disassemble.
- Never allow metal filings, etc. to get on the sensor's front edge magnetic area.
- Never place in an area affected by magnetism.

7. Remove starter motor. Refer to [STR-21, "Removal and Installation"](#).
8. Remove rear plate cover. Refer to [EM-44, "Exploded View"](#).
9. Turn crankshaft, and remove the four tightening bolts for drive plate and torque converter.

CAUTION:

When turning the crankshaft, turn it clockwise as viewed from the front of the engine.

TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[7AT: RE7R01A]

10. Remove A/T fluid cooler tubes. Refer to [TM-208, "AWD : Removal and Installation"](#).

NOTE:

Cap or plug openings to prevent fluid from spilling.

11. Support A/T assembly with a transmission jack.

CAUTION:

When setting the transmission jack, be careful not to allow it to collide against the drain plug and overflow plug.

12. Remove rear engine mounting member and engine mounting insulator (rear) with power tool. Refer to [EM-74, "AWD : Exploded View"](#).

13. Disconnect A/T assembly connector and AWD solenoid connector.

14. Remove harness and brackets.

15. Remove bolts fixing A/T assembly to engine with a power tool.

16. Remove A/T assembly with transfer assembly from vehicle.


CAUTION:

- Secure torque converter to prevent it from dropping.
- Secure A/T assembly to a transmission jack.

17. Remove air breather hose, air breather box, and bracket from A/T assembly. Refer to [TM-205, "AWD : Removal and Installation"](#).

18. Remove manual lever from A/T assembly. Refer to [TM-185, "Removal and Installation"](#).


19. Remove transfer assembly from A/T assembly with a power tool. Refer to [DLN-66, "Removal and Installation"](#).

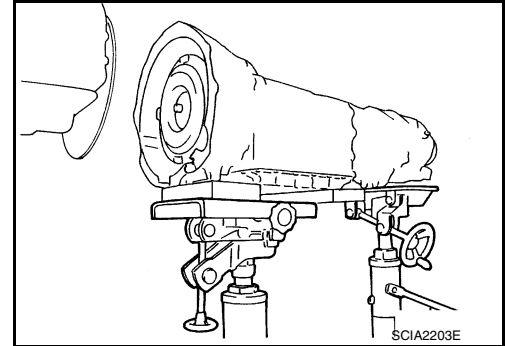

INSTALLATION


Note the following, and install in the reverse order of removal.

- Perform inspection before installing A/T assembly. Refer to [TM-216, "AWD : Inspection and Adjustment"](#).
- Check fitting of dowel pin (←).

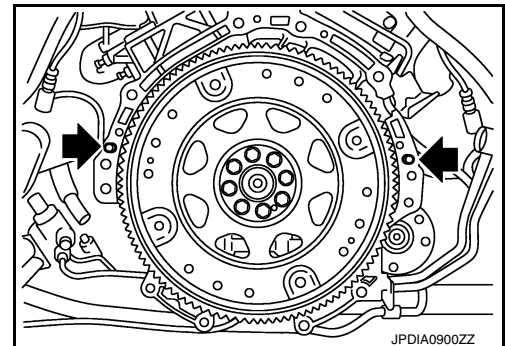

- Install the fixing bolts of A/T assembly and engine according to the following standards.

Bolt symbol	A	B
Insertion direction	A/T assembly to engine	Engine to A/T assembly
Number of bolts	8	4
Bolt length "L" mm (in)	65 (2.56)	35 (1.38)
Tightening torque N·m (kg·m, ft·lb)	75 (7.7, 55)	46.6 (4.8, 34)

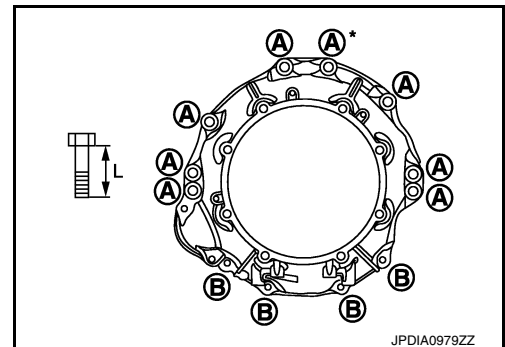

*: Tightening the bolt with bracket. Refer to [TM-205, "AWD : Removal and Installation"](#).

- Align the positions of tightening bolts for drive plate with those of the torque converter, and temporarily tighten the bolts. Then, tighten the bolts with the specified torque.

CAUTION:

- When turning crankshaft, turn it clockwise as viewed from the front of the engine.
- When tightening the tightening bolts for the torque converter after fixing the crankshaft pulley bolts, be sure to confirm the tightening torque of the crankshaft pulley mounting bolts. Refer to [EM-52, "Removal and Installation"](#).

TRANSMISSION ASSEMBLY

< UNIT REMOVAL AND INSTALLATION >

[7AT: RE7R01A]

- Rotate crankshaft several turns and check to be sure that A/T rotates freely without binding after converter is installed to drive plate.

AWD : Inspection and Adjustment


INFOID:000000012167661

INSPECTION BEFORE INSTALLATION

Check dimension (A) between the converter housing and torque converter.

- B : Scale
- C : Straightedge

Dimension (A) : Refer to [TM-303, "Torque Converter"](#).

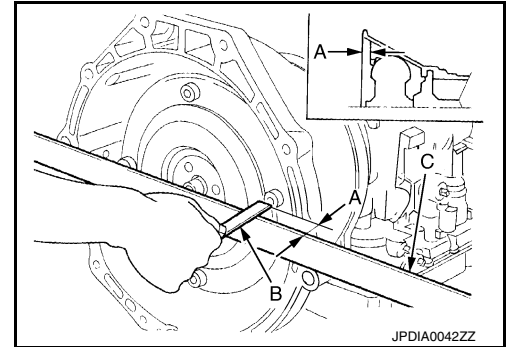

INSPECTION AFTER INSTALLATION

- Start the engine and check visually that there is no leakage of ATF.
- Check A/T position after adjusting A/T positions. Refer to [TM-181, "Inspection and Adjustment"](#).

ADJUSTMENT AFTER INSTALLATION

- Adjust A/T fluid level. Refer to [TM-176, "Adjustment"](#).
- Adjust A/T position. Refer to [TM-181, "Inspection and Adjustment"](#).

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


UNIT DISASSEMBLY AND ASSEMBLY

TRANSMISSION ASSEMBLY

Exploded View

INFOID:000000012167662

2WD MODELS

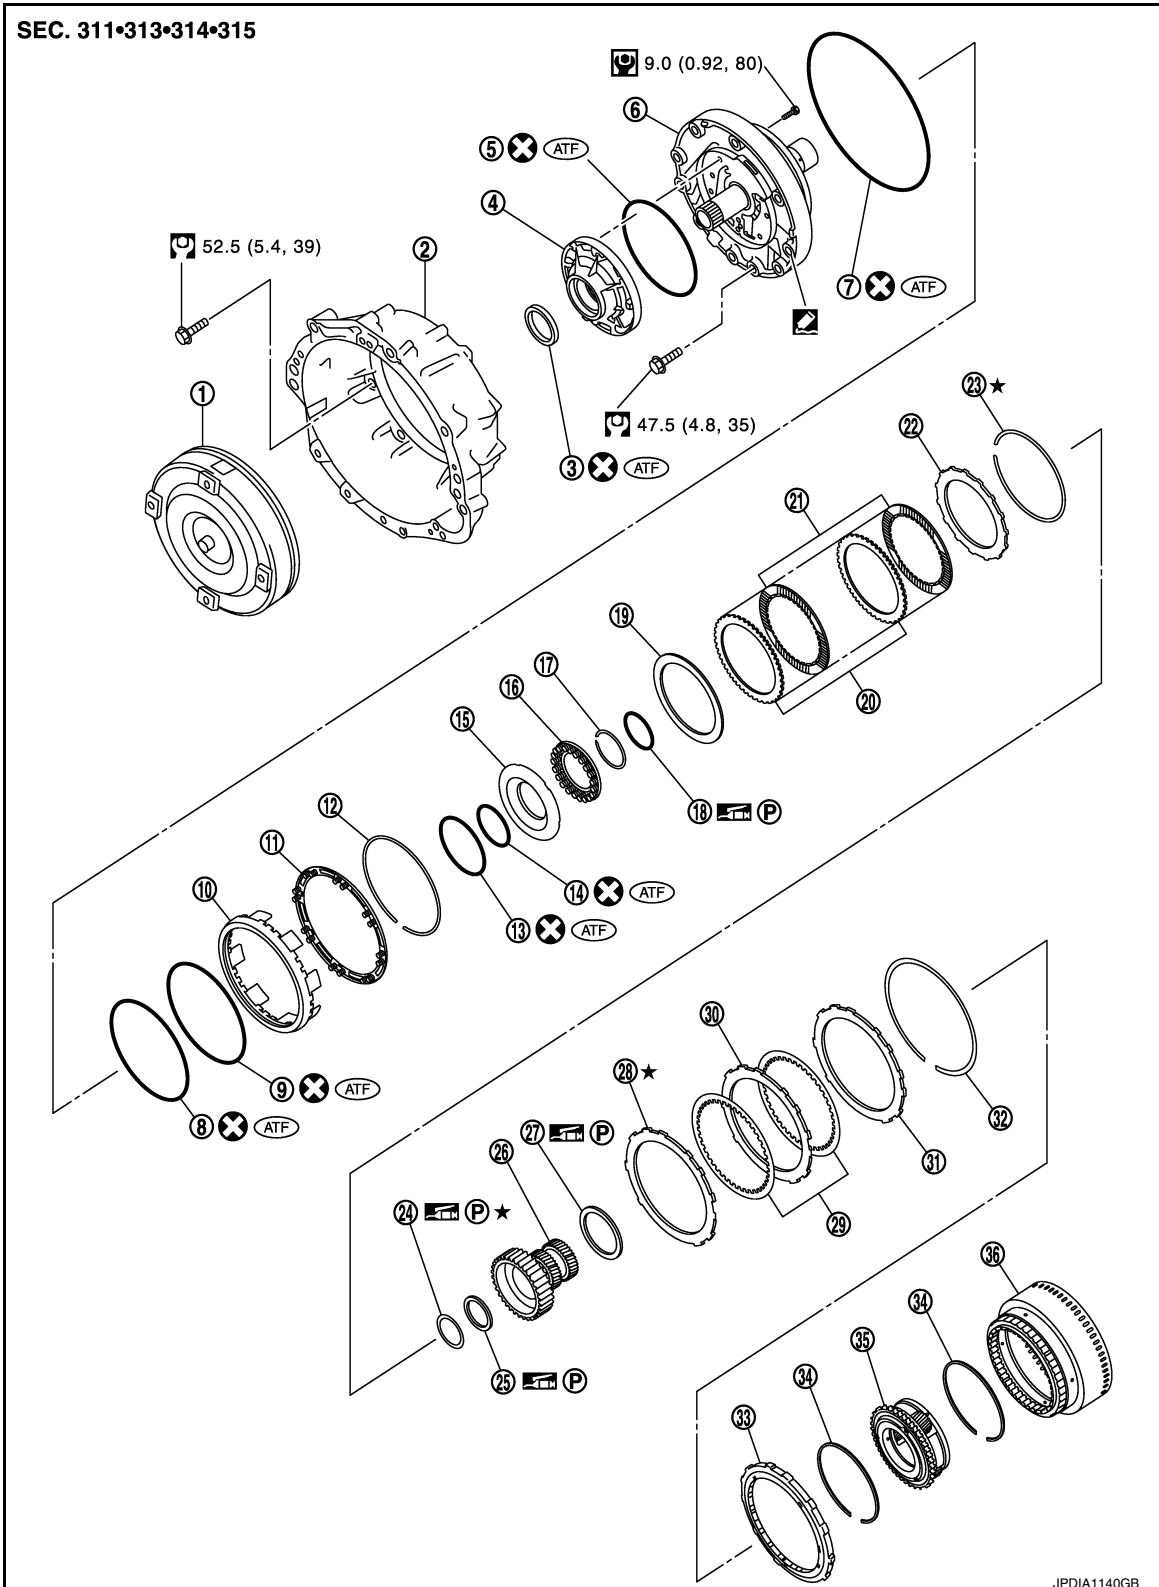


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

- | | | |
|---------------------------------|----------------------------------|------------------------------|
| 1. Torque converter | 2. Converter housing | 3. Oil pump housing oil seal |
| 4. Oil pump housing | 5. O-ring | 6. Oil pump cover |
| 7. O-ring | 8. D-ring | 9. D-ring |
| 10. Front brake piston | 11. Front brake spring retainer | 12. Snap ring |
| 13. D-ring | 14. D-ring | 15. 2346 brake piston |
| 16. 2346 brake spring retainer | 17. Snap ring | 18. Seal ring |
| 19. 2346 brake dish plate | 20. 2346 brake driven plate | 21. 2346 brake drive plate |
| 22. 2346 brake retaining plate | 23. Snap ring | 24. Bearing race |
| 25. Needle bearing | 26. Under drive sun gear | 27. Needle bearing |
| 28. Front brake retaining plate | 29. Front brake drive plate | 30. Front brake driven plate |
| 31. Front brake retaining plate | 32. Snap ring | 33. 1st one-way clutch |
| 34. Snap ring | 35. Under drive carrier assembly | 36. Front brake hub |

 Apply Genuine RTV silicone sealant or equivalent. Refer to [GI-22. "Recommended Chemical Products and Sealants"](#). Refer to [GI-4. "Components"](#) for symbols not described on the above.

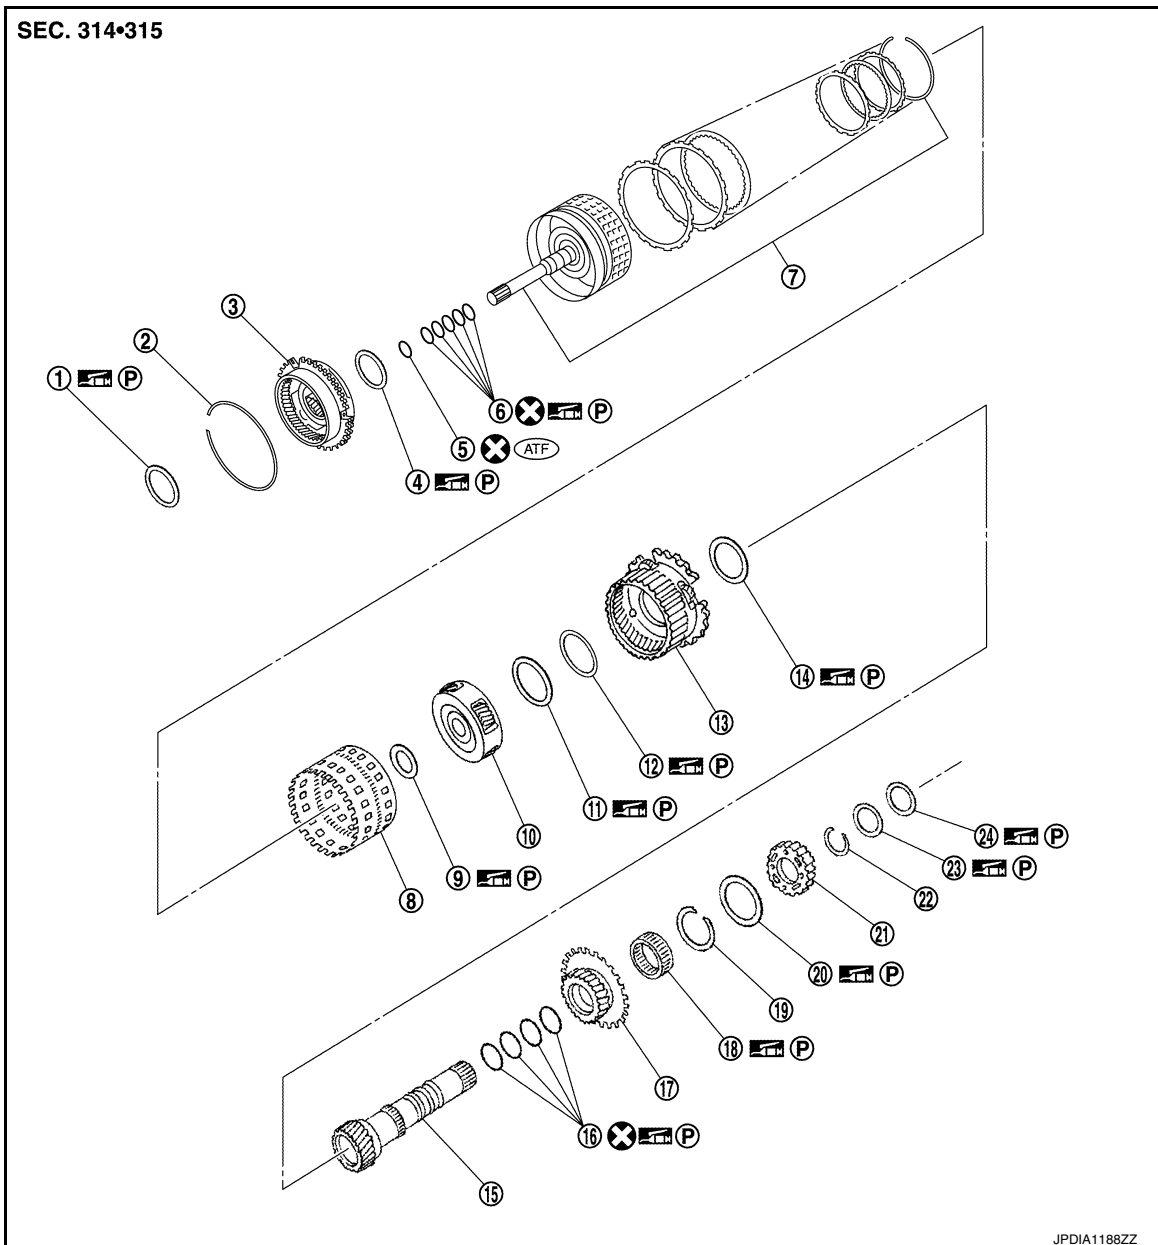

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

- | | | | |
|---------------------------|-----------------------|-------------------------------------|---|
| 1. Needle bearing | 2. Snap ring | 3. Front carrier assembly | A |
| 4. Needle bearing | 5. O-ring | 6. Seal ring | |
| 7. Input clutch assembly | 8. Rear internal gear | 9. Needle bearing | |
| 10. Mid carrier assembly | 11. Needle bearing | 12. Bearing race | B |
| 13. Rear carrier assembly | 14. Needle bearing | 15. Mid sun gear | |
| 16. Seal ring | 17. Rear sun gear | 18. 2nd one-way clutch | |
| 19. Snap ring | 20. Needle bearing | 21. High and low reverse clutch hub | C |
| 22. Snap ring | 23. Bearing race | 24. Needle bearing | |

Refer to [Gl-4, "Components"](#) for symbols in the figure.

TM

E

F

G

H

I

J

K

L

M

N


O

P

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

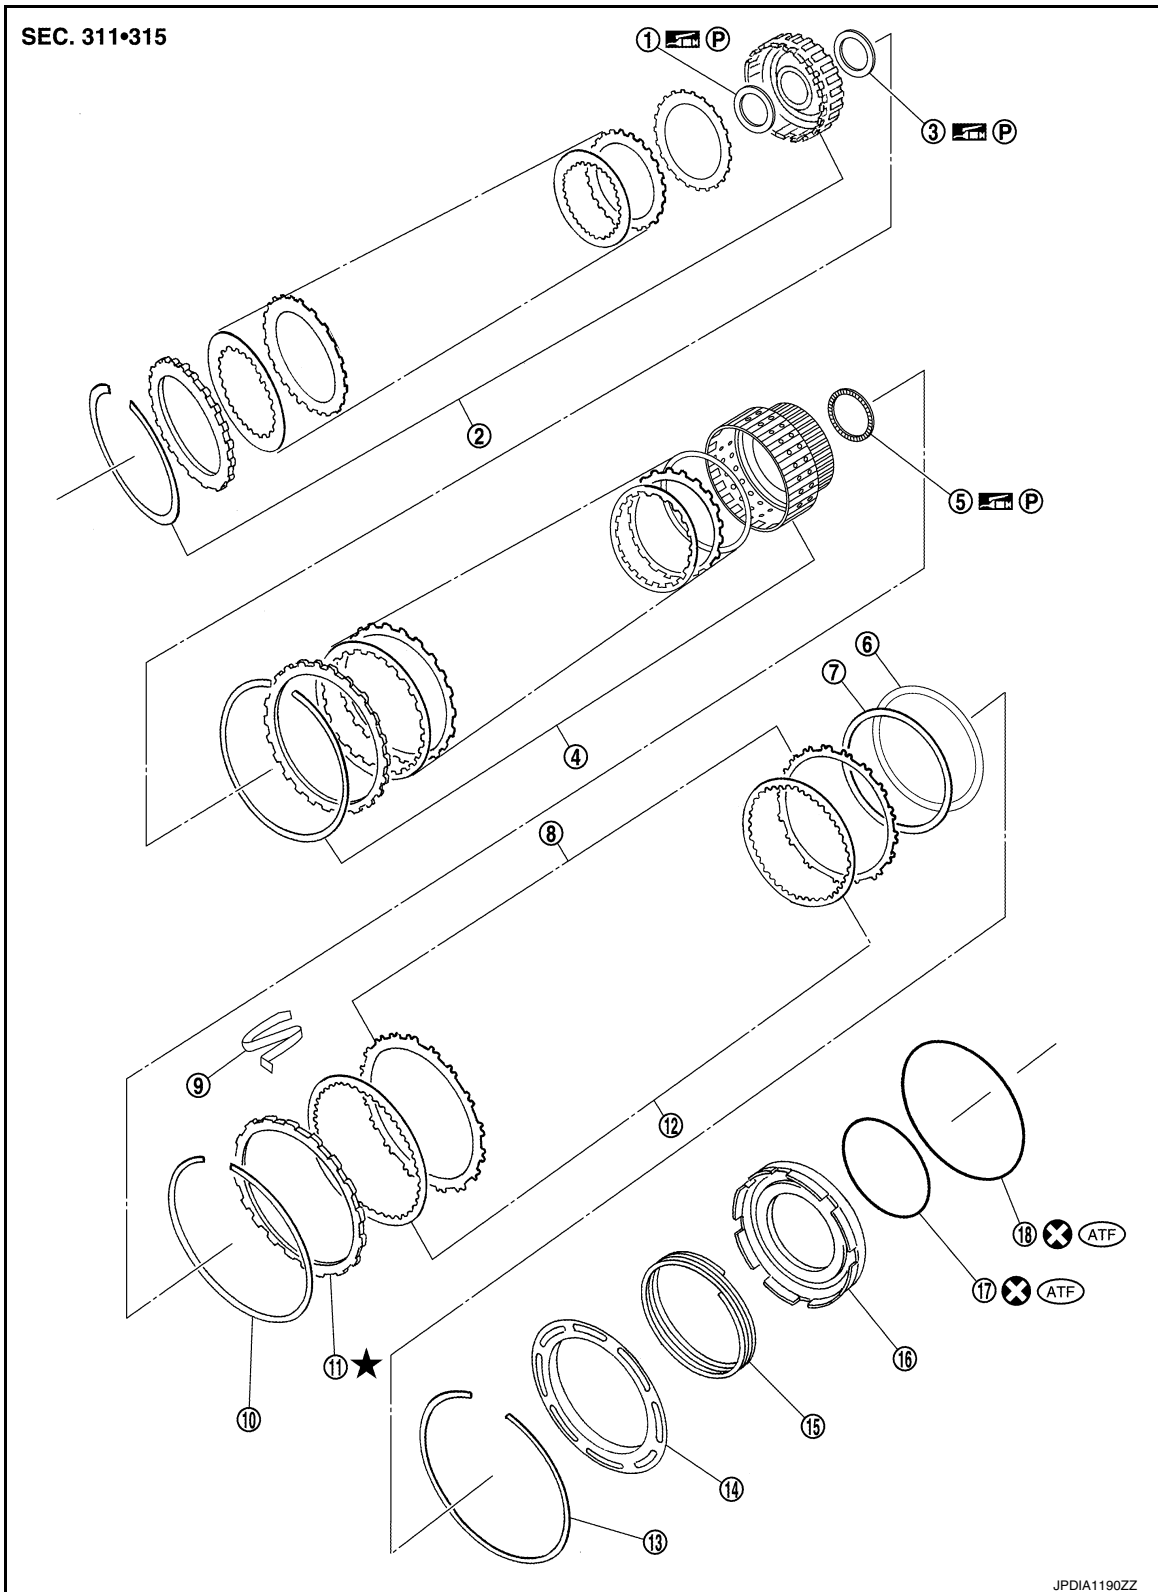

- | | | |
|-----------------------------|---|---------------------------------|
| 1. Bearing race | 2. High and low reverse clutch assembly | 3. Needle bearing |
| 4. Direct clutch assembly | 5. Needle bearing | 6. Reverse brake dish plate |
| 7. Reverse brake dish plate | 8. Reverse brake driven plate | 9. N-spring |
| 10. Snap ring | 11. Reverse brake retaining plate | 12. Reverse brake drive plate |
| 13. Snap ring | 14. Reverse brake spring retainer | 15. Reverse brake return spring |

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[7AT: RE7R01A]

16. Reverse brake piston

17. D-ring

18. D-ring

Refer to [GI-4, "Components"](#) for symbols in the figure.

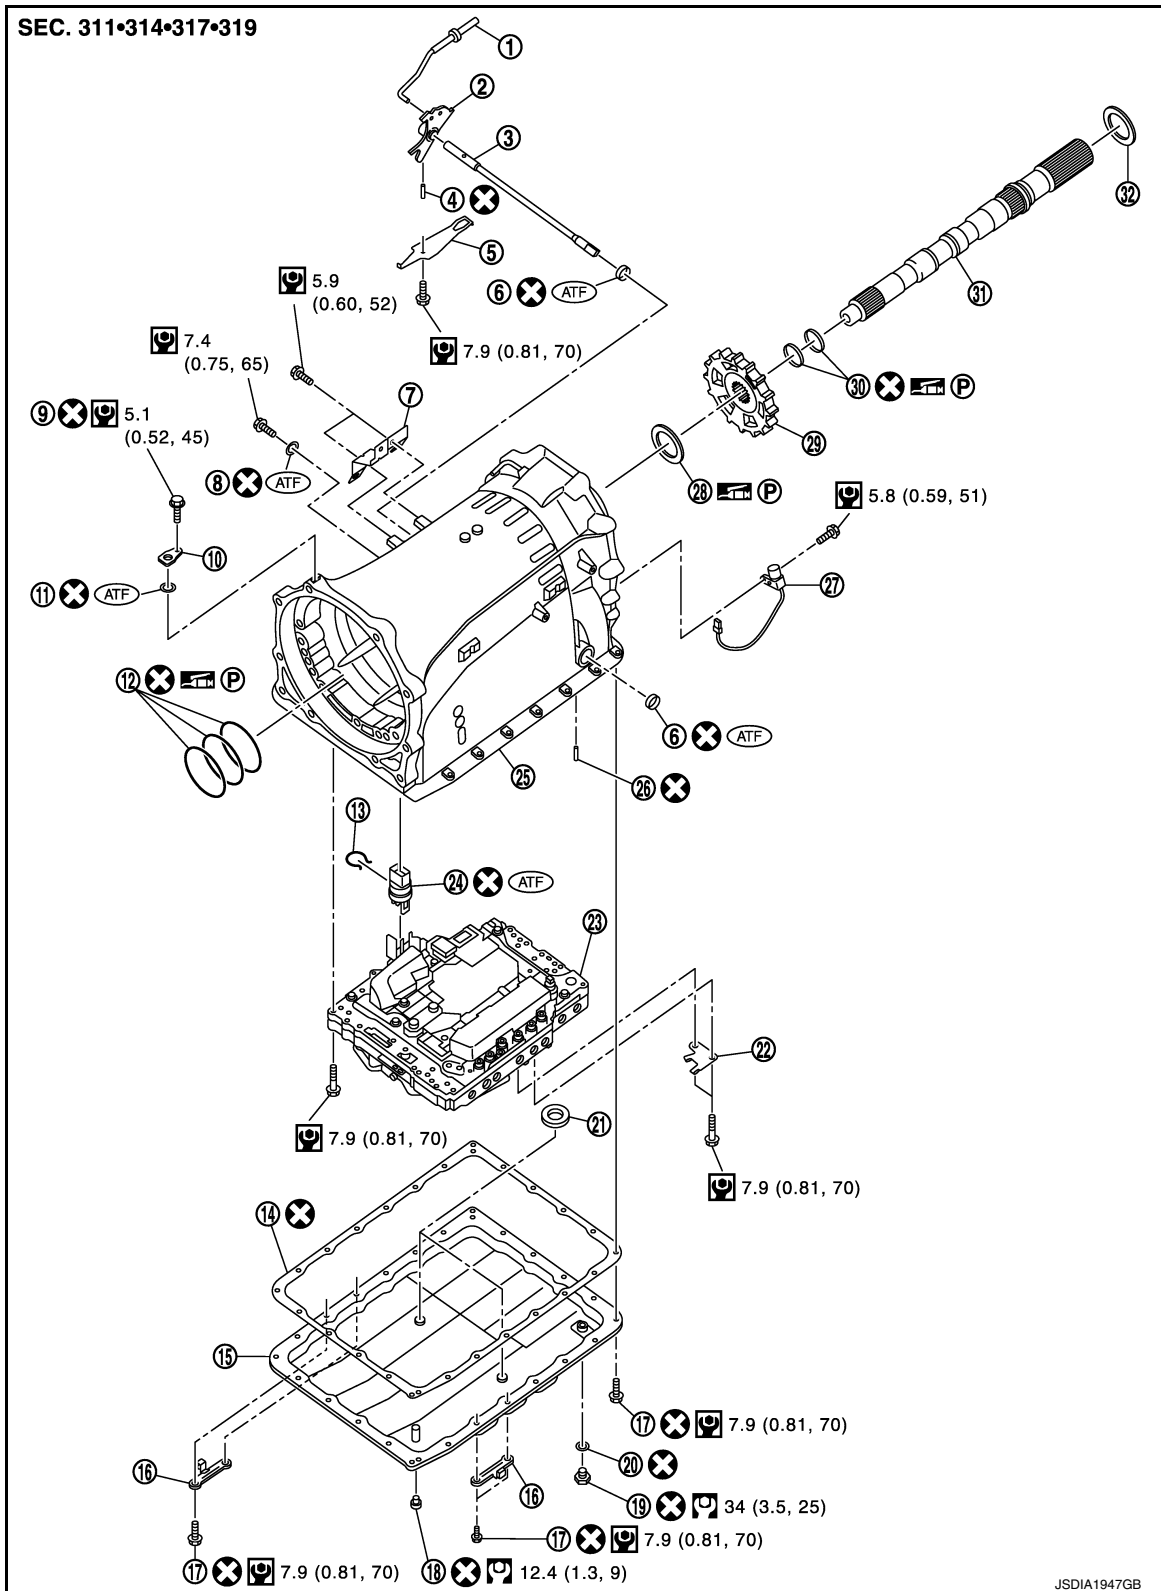

- 1. Parking rod
- 4. Retaining pin
- 7. Bracket
- 10. Baffle plate

- 2. Manual plate
- 5. Detent spring
- 8. O-ring
- 11. O-ring

- 3. Manual shaft
- 6. Manual shaft oil seal
- 9. Self-sealing bolt
- 12. Seal ring

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

- | | | |
|-----------------------|---------------------------|-------------------------|
| 13. Snap ring | 14. Oil pan gasket | 15. Oil pan |
| 16. Clip | 17. Oil pan mounting bolt | 18. Overflow plug |
| 19. Drain plug | 20. Drain plug gasket | 21. Magnet |
| 22. Clip | 23. Control valve & TCM | 24. Joint connector |
| 25. Transmission case | 26. Retaining pin | 27. Output speed sensor |
| 28. Needle bearing | 29. Parking gear | 30. Seal ring |
| 31. Output shaft | 32. Bearing race | |

Refer to [GI-4. "Components"](#) for symbols in the figure.

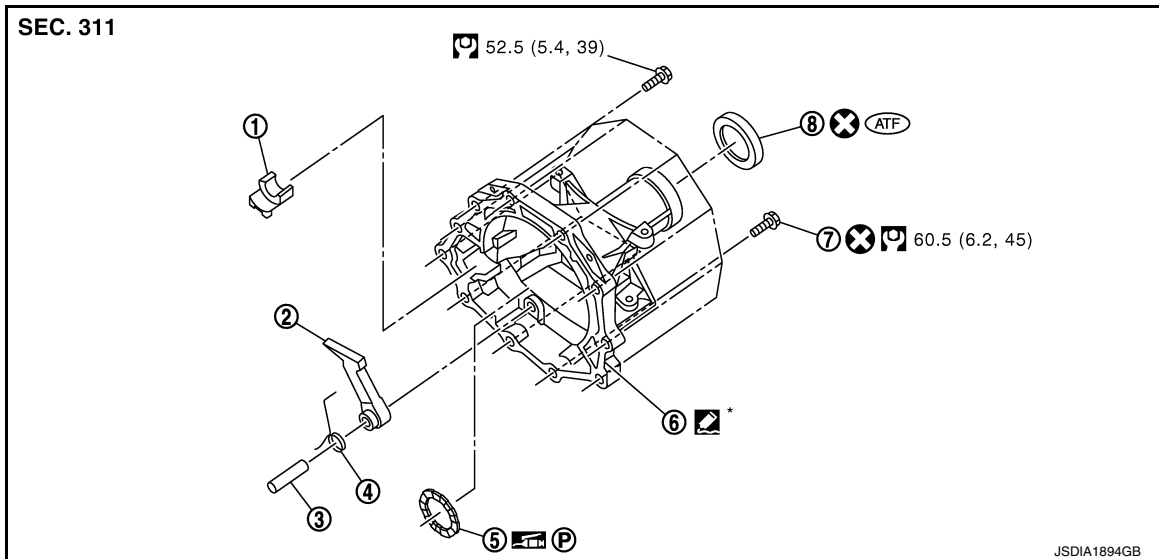

- | | | |
|-----------------------------|-------------------|-------------------|
| 1. Parking actuator support | 2. Parking pawl | 3. Pawl shaft |
| 4. Return spring | 5. Needle bearing | 6. Rear extension |
| 7. Self-sealing bolt | 8. Rear oil seal | |

*: Apply Genuine Anaerobic Liquid Gasket or equivalent. Refer to [GI-22. "Recommended Chemical Products and Sealants"](#).


Refer to [GI-4. "Components"](#) for symbols not described on the above.

AWD MODELS

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

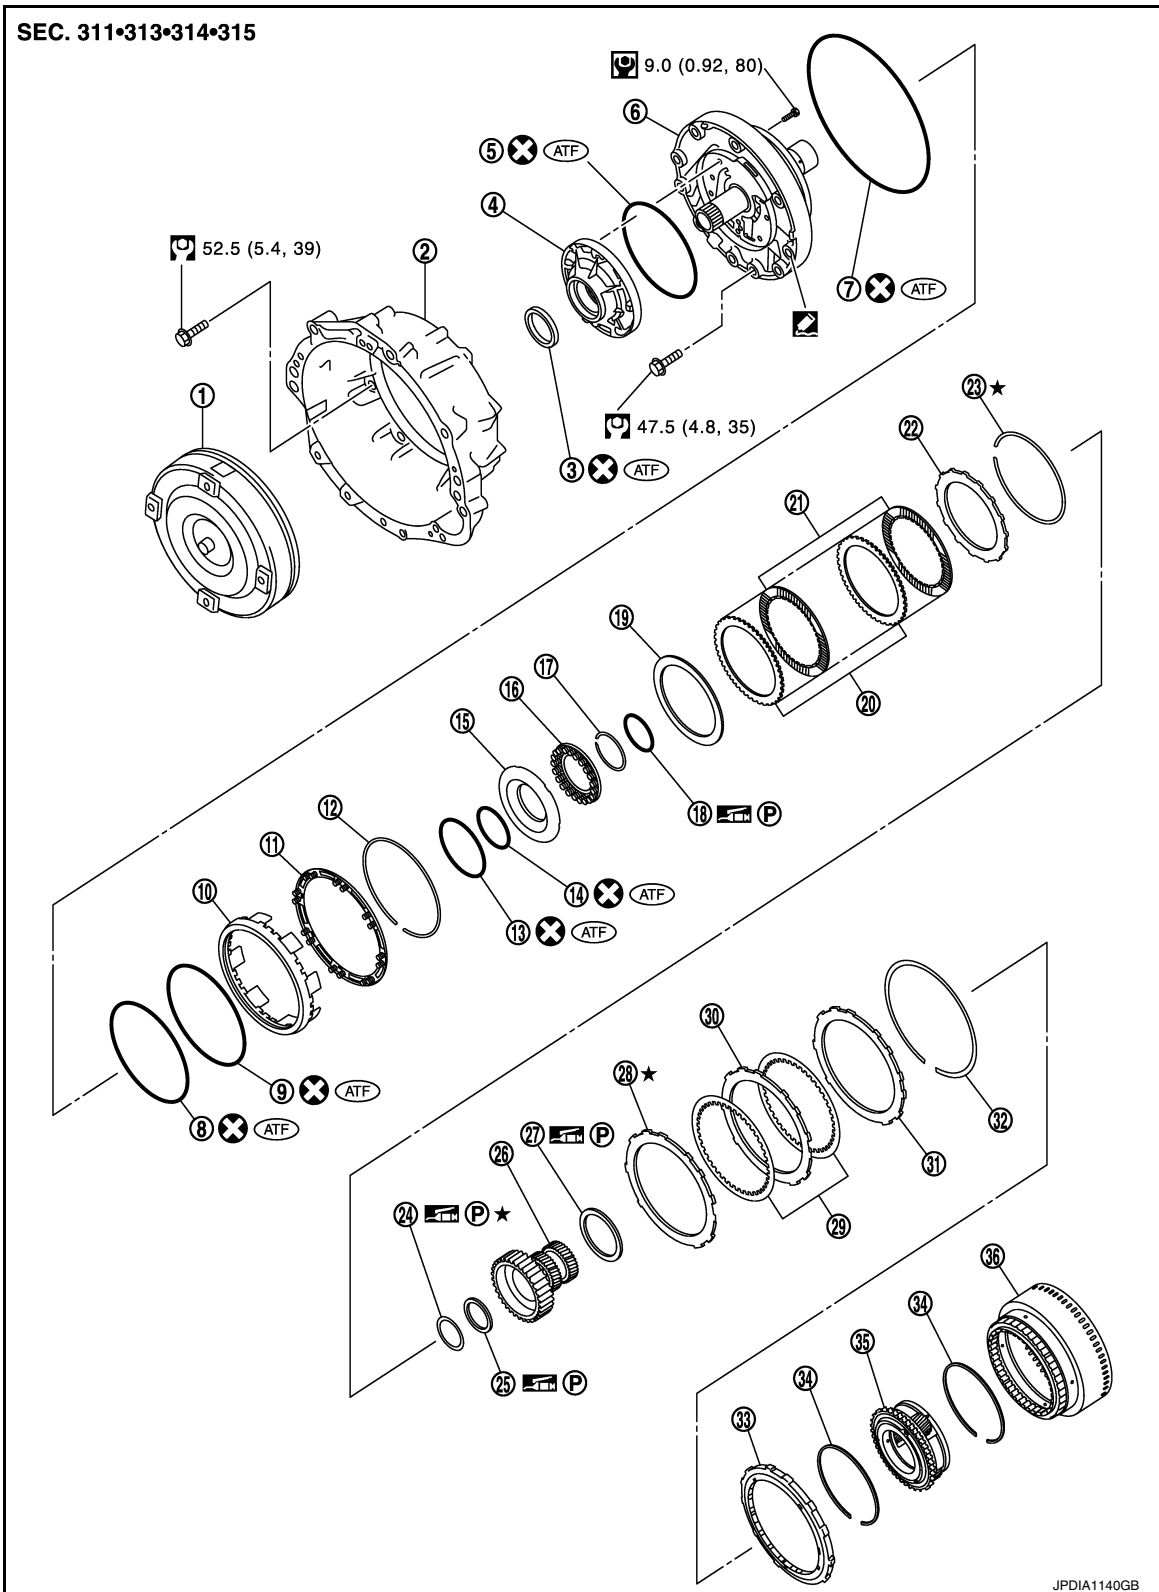

- | | | |
|--------------------------------|---------------------------------|------------------------------|
| 1. Torque converter | 2. Converter housing | 3. Oil pump housing oil seal |
| 4. Oil pump housing | 5. O-ring | 6. Oil pump cover |
| 7. O-ring | 8. D-ring | 9. D-ring |
| 10. Front brake piston | 11. Front brake spring retainer | 12. Snap ring |
| 13. D-ring | 14. D-ring | 15. 2346 brake piston |
| 16. 2346 brake spring retainer | 17. Snap ring | 18. Seal ring |


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

- | | | |
|---------------------------------|----------------------------------|------------------------------|
| 19. 2346 brake dish plate | 20. 2346 brake driven plate | 21. 2346 brake drive plate |
| 22. 2346 brake retaining plate | 23. Snap ring | 24. Bearing race |
| 25. Needle bearing | 26. Under drive sun gear | 27. Needle bearing |
| 28. Front brake retaining plate | 29. Front brake drive plate | 30. Front brake driven plate |
| 31. Front brake retaining plate | 32. Snap ring | 33. 1st one-way clutch |
| 34. Snap ring | 35. Under drive carrier assembly | 36. Front brake hub |

 Apply Genuine RTV silicone sealant or equivalent. Refer to [GI-22. "Recommended Chemical Products and Sealants"](#). Refer to [GI-4. "Components"](#) for symbols not described on the above.

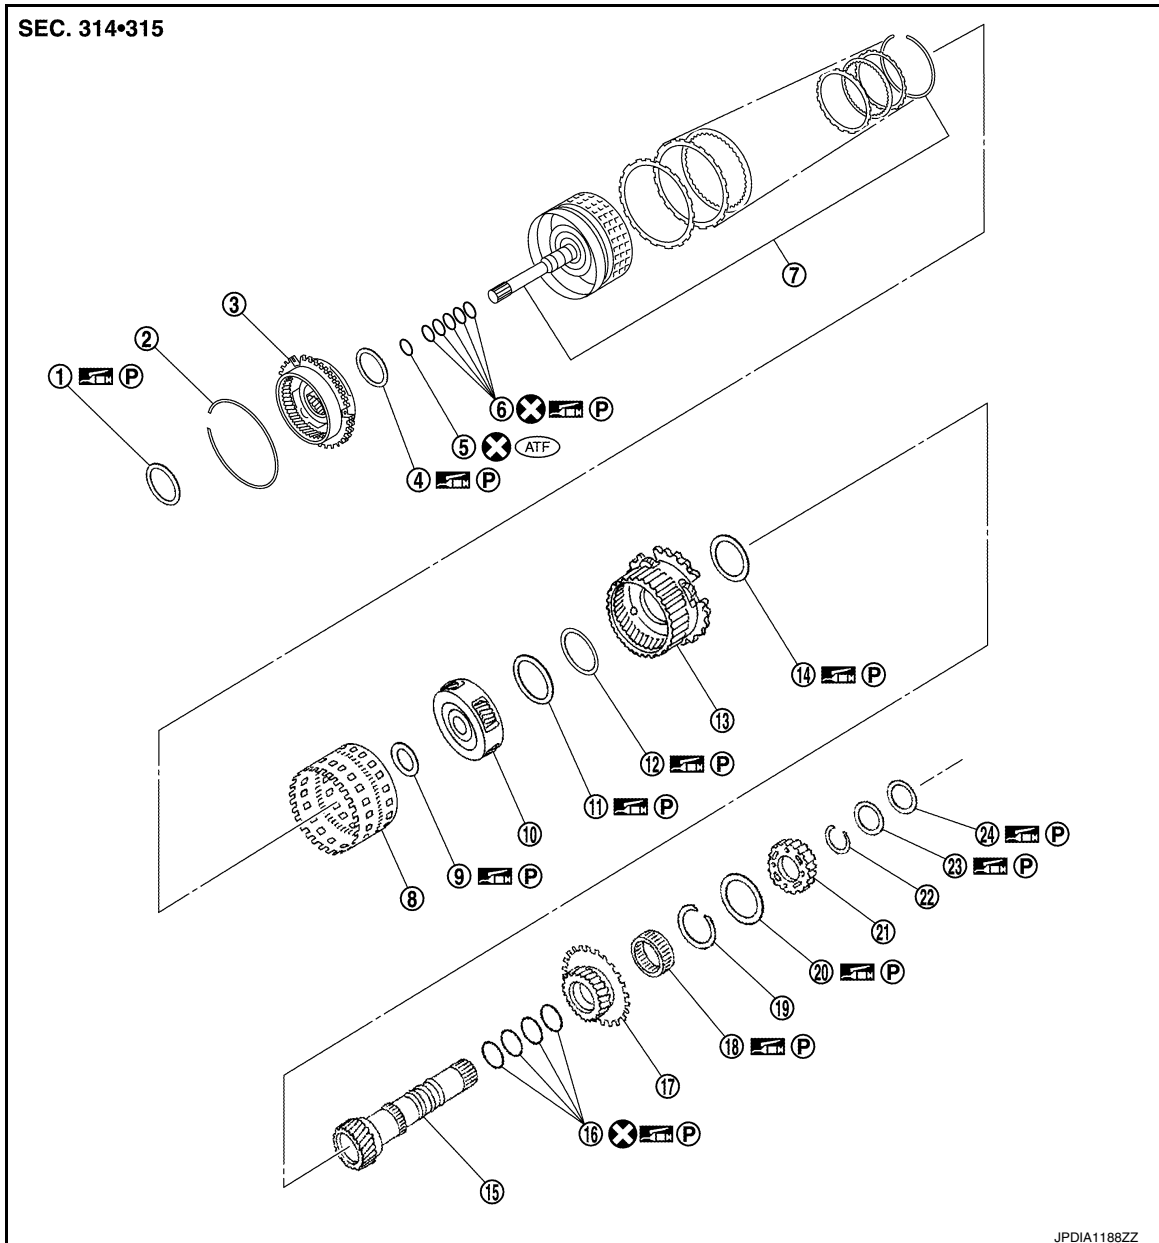

- | | | |
|---------------------------|-----------------------|-------------------------------------|
| 1. Needle bearing | 2. Snap ring | 3. Front carrier assembly |
| 4. Needle bearing | 5. O-ring | 6. Seal ring |
| 7. Input clutch assembly | 8. Rear internal gear | 9. Needle bearing |
| 10. Mid carrier assembly | 11. Needle bearing | 12. Bearing race |
| 13. Rear carrier assembly | 14. Needle bearing | 15. Mid sun gear |
| 16. Seal ring | 17. Rear sun gear | 18. 2nd one-way clutch |
| 19. Snap ring | 20. Needle bearing | 21. High and low reverse clutch hub |

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[7AT: RE7R01A]

22. Snap ring

23. Bearing race

24. Needle bearing

Refer to [GI-4, "Components"](#) for symbols in the figure.

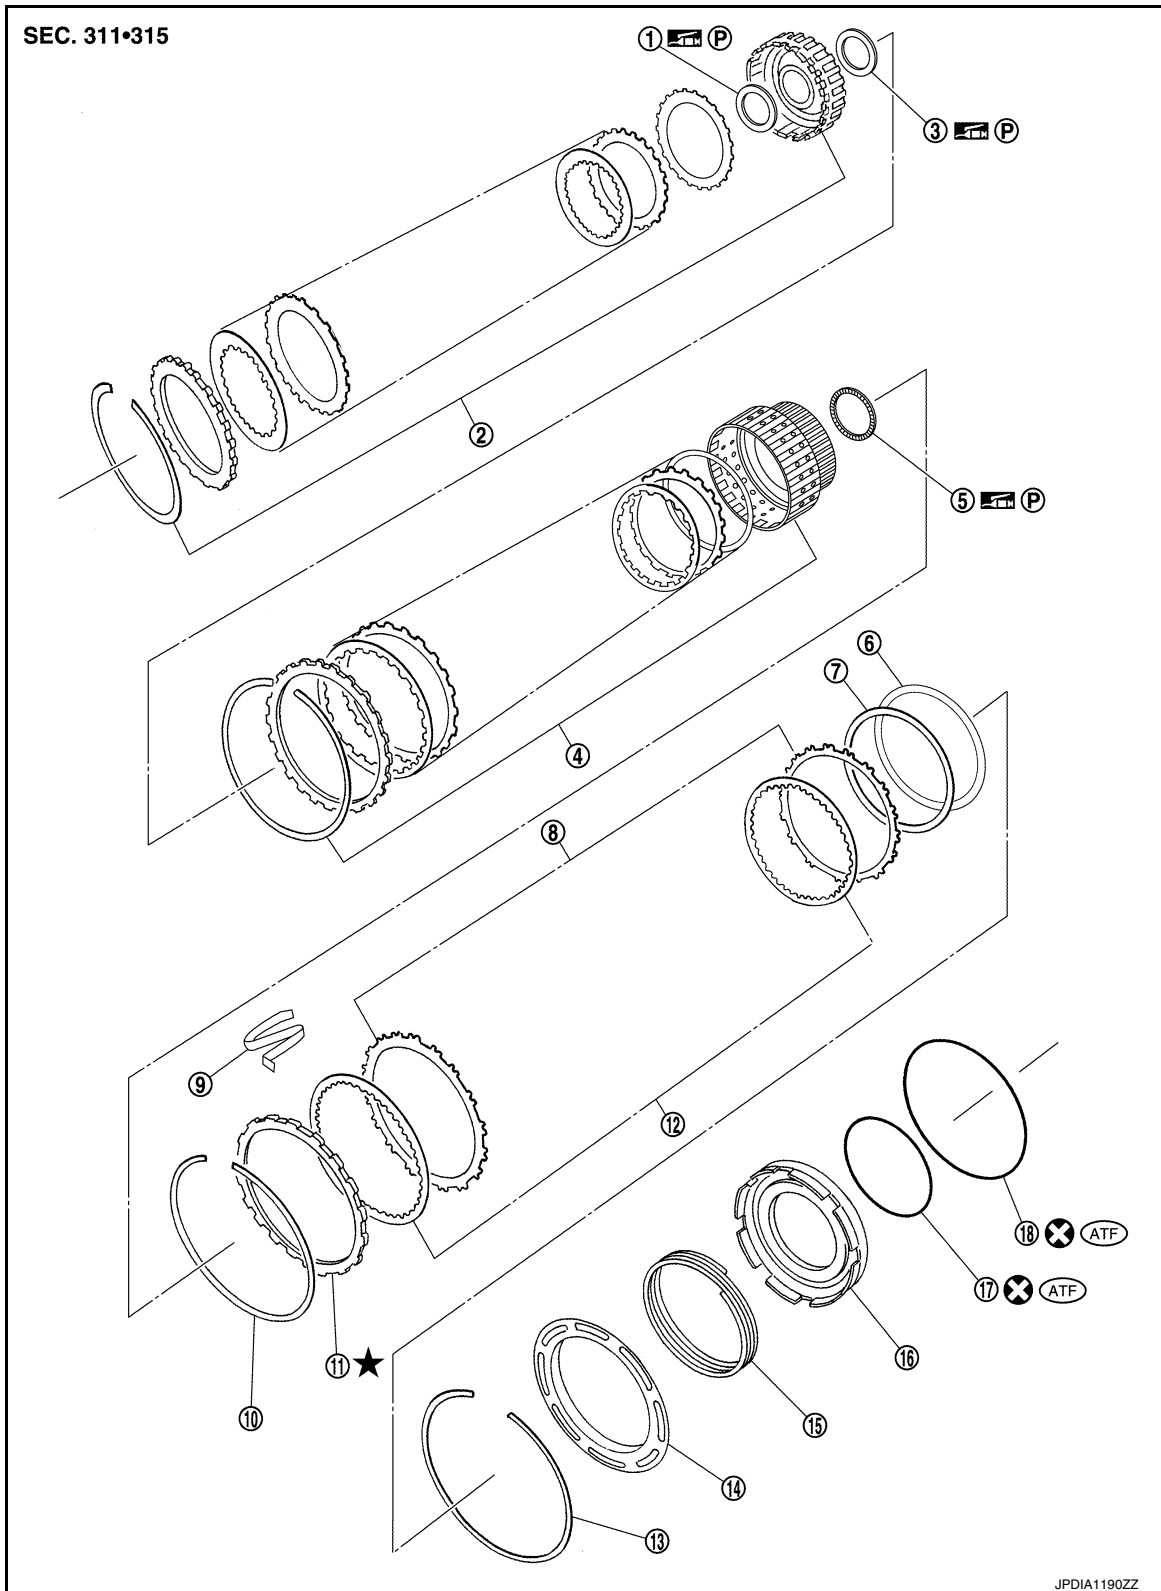

1. Bearing race

2. High and low reverse clutch assembly

3. Needle bearing

4. Direct clutch assembly

5. Needle bearing

6. Reverse brake dish plate

7. Reverse brake dish plate

8. Reverse brake driven plate

9. N-spring


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

- | | | |
|--------------------------|-----------------------------------|---------------------------------|
| 10. Snap ring | 11. Reverse brake retaining plate | 12. Reverse brake drive plate |
| 13. Snap ring | 14. Reverse brake spring retainer | 15. Reverse brake return spring |
| 16. Reverse brake piston | 17. D-ring | 18. D-ring |
- Refer to [GI-4. "Components"](#) for symbols in the figure.

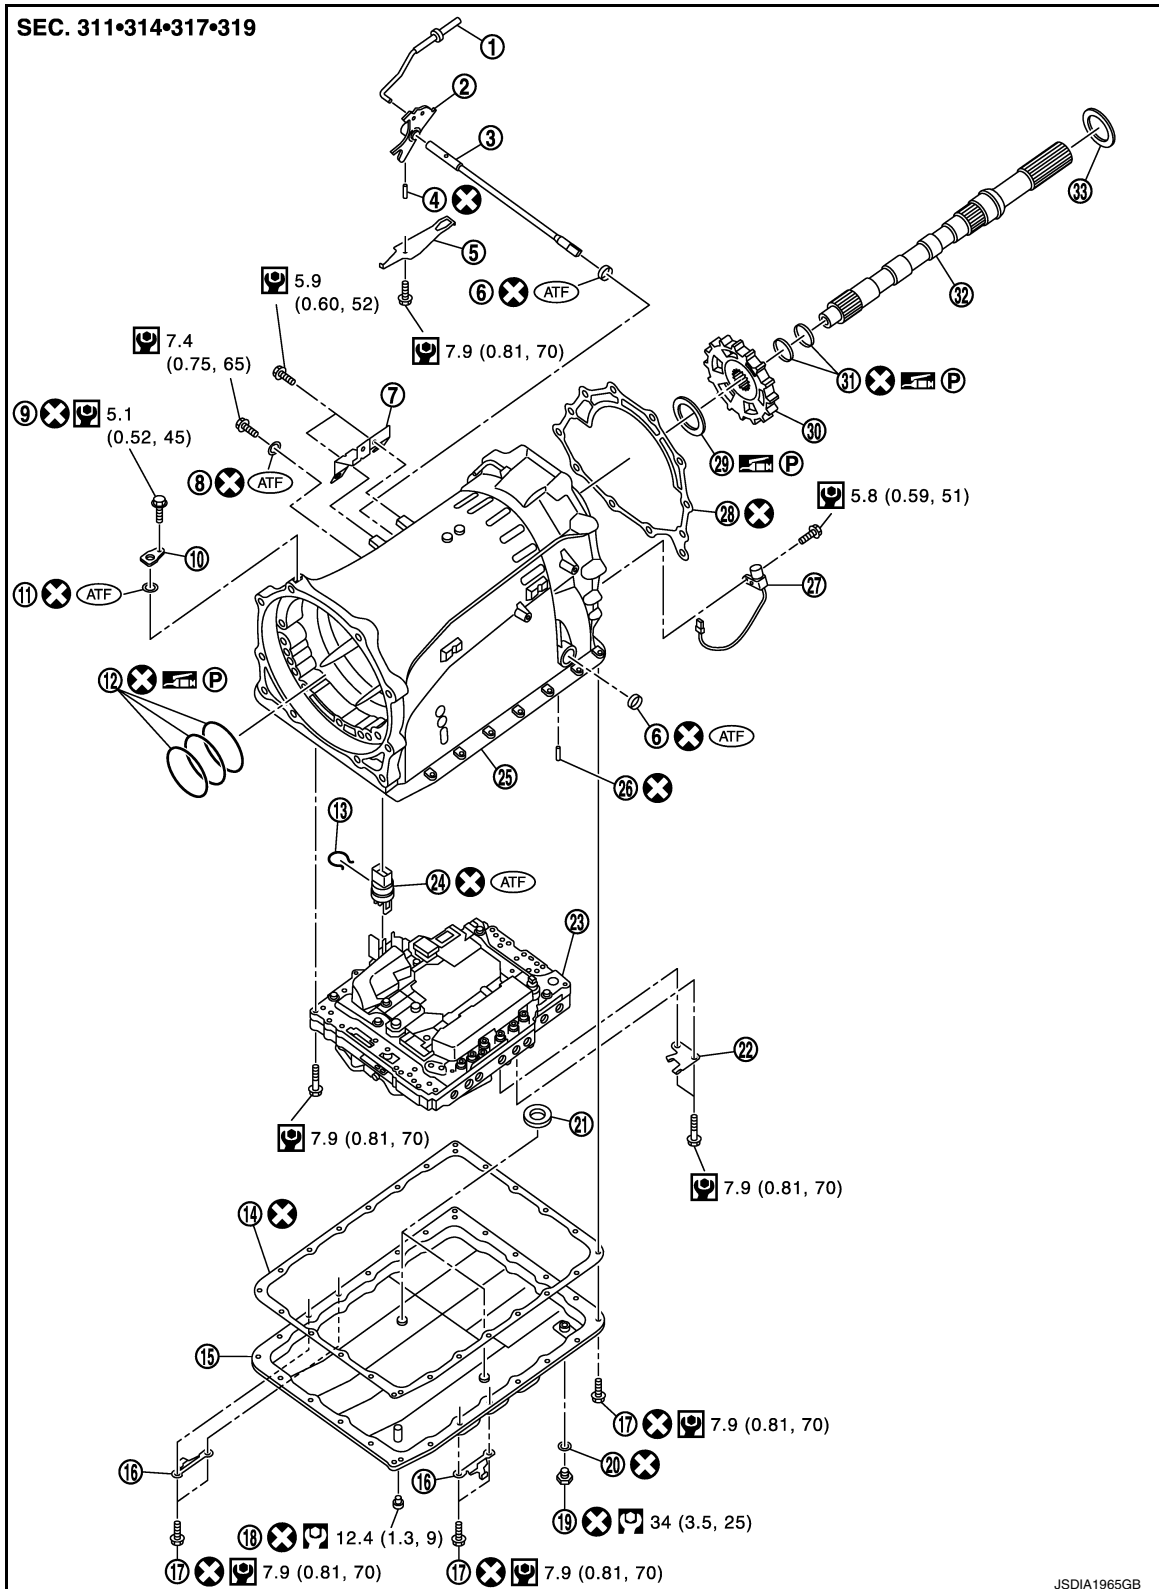

JSDIA1965GB

- | | | |
|------------------|------------------|--------------------------|
| 1. Parking rod | 2. Manual plate | 3. Manual shaft |
| 4. Retaining pin | 5. Detent spring | 6. Manual shaft oil seal |


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

- | | | |
|-----------------------|---------------------------|-------------------------|
| 7. Bracket | 8. O-ring | 9. Self-sealing bolt |
| 10. Baffle plate | 11. O-ring | 12. Seal ring |
| 13. Snap ring | 14. Oil pan gasket | 15. Oil pan |
| 16. Clip | 17. Oil pan mounting bolt | 18. Overflow plug |
| 19. Drain plug | 20. Drain plug gasket | 21. Magnet |
| 22. Clip | 23. Control valve & TCM | 24. Joint connector |
| 25. Transmission case | 26. Retaining pin | 27. Output speed sensor |
| 28. Gasket | 29. Needle bearing | 30. Parking gear |
| 31. Seal ring | 32. Output shaft | 33. Bearing race |

Refer to [GI-4, "Components"](#) for symbols in the figure.

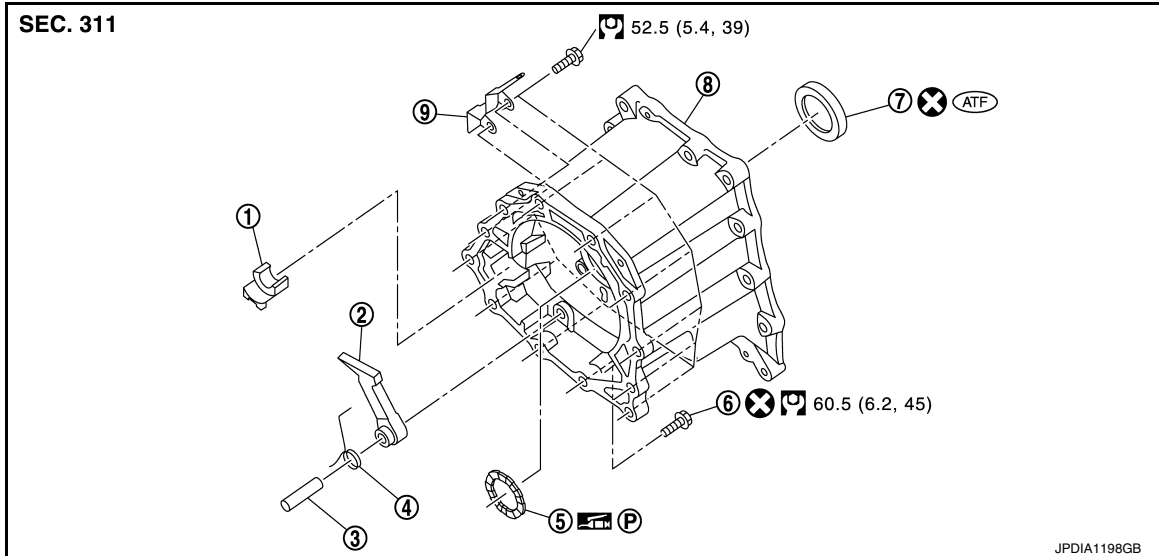

- | | | |
|-----------------------------|-------------------|----------------------|
| 1. Parking actuator support | 2. Parking pawl | 3. Pawl shaft |
| 4. Return spring | 5. Needle bearing | 6. Self-sealing bolt |
| 7. Rear oil seal | 8. Adapter case | 9. Bracket |

Refer to [GI-4, "Components"](#) for symbols in the figure.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

Oil Channel

INFOID:000000012167663

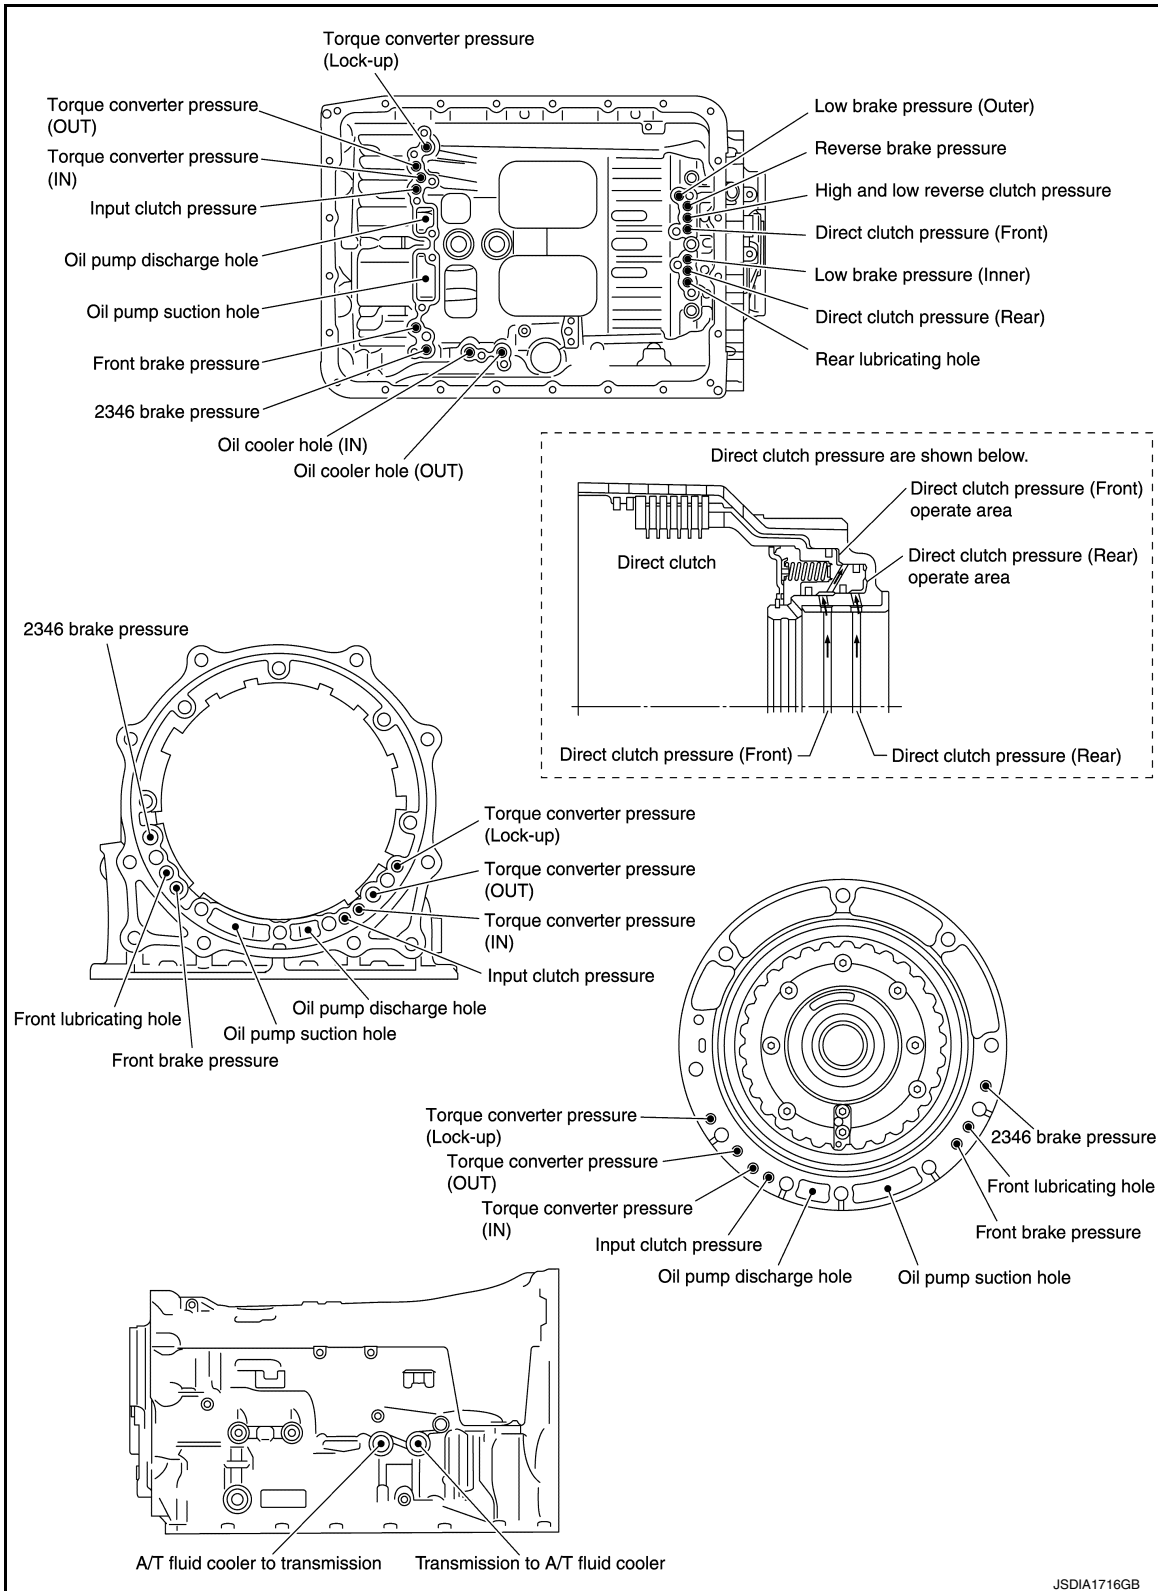

Location of Needle Bearings and Bearing Races


INFOID:000000012167664

2WD MODELS

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

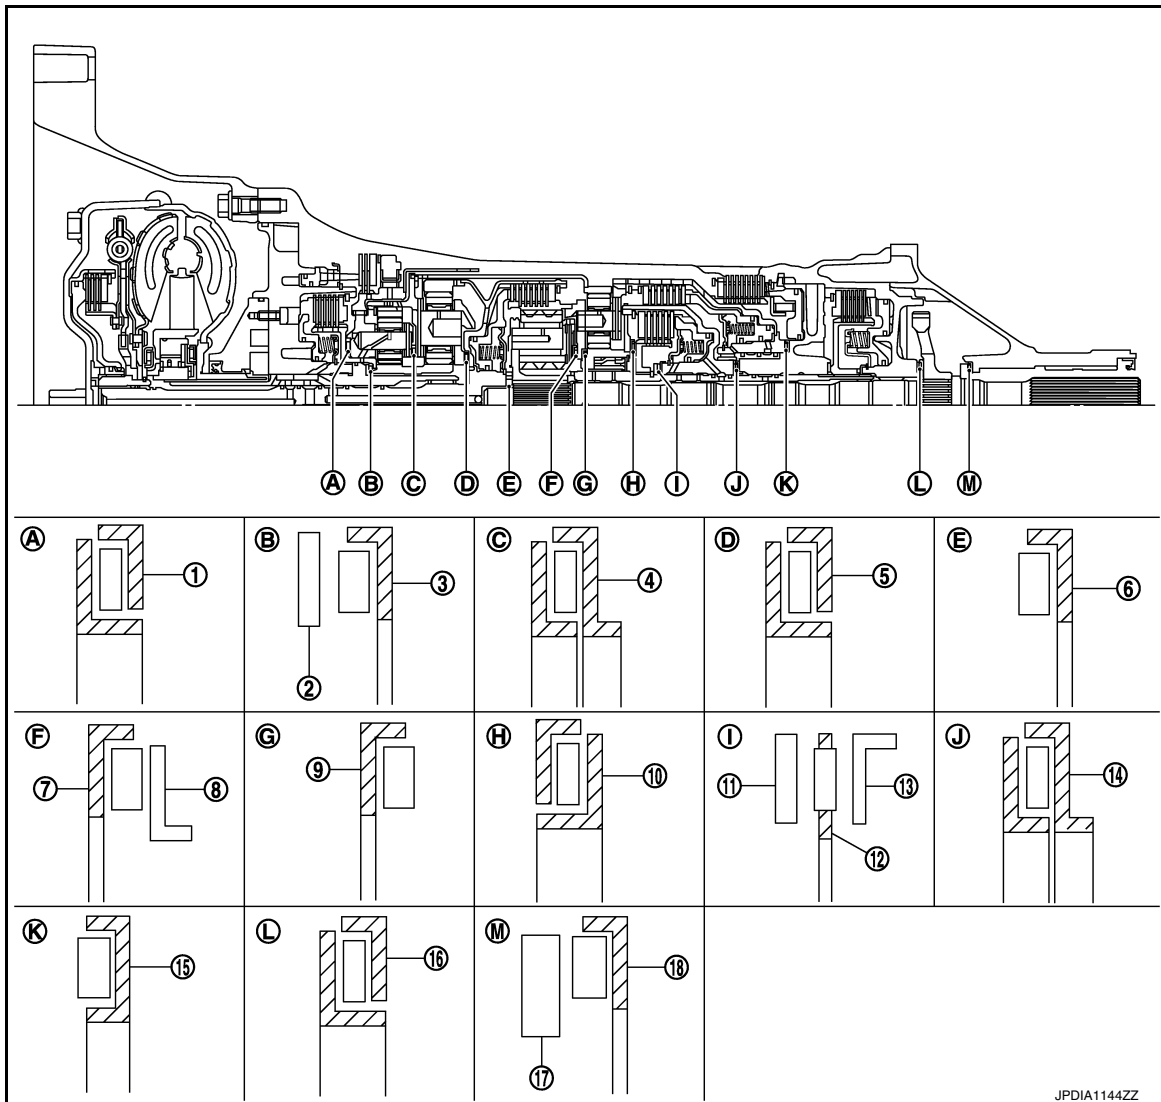

JPDIA1144ZZ

Location	Item	Outer diameter mm (in)
A	(1) Needle bearing	94 (3.701)
B	(2) Bearing race	58.6 (2.307)
	(3) Needle bearing	60 (2.362)
C	(4) Needle bearing	84.6 (3.331)
D	(5) Needle bearing	77 (3.031)
E	(6) Needle bearing	47 (1.850)
F	(7) Needle bearing	84 (3.307)
	(8) Bearing race	82 (3.228)
G	(9) Needle bearing	80 (3.150)
H	(10) Needle bearing	92 (3.622)
I	(11) Bearing race	61.1 (2.406)
	(12) Needle bearing	60 (2.362)
	(13) Bearing race	61.9 (2.437)
J	(14) Needle bearing	62.8 (2.472)
K	(15) Needle bearing	92 (3.622)
L	(16) Needle bearing	65 (2.559)


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

Location	Item	Outer diameter mm (in)
M	(17) Bearing race	58 (2.283)
	(18) Needle bearing	60 (2.362)

AWD MODELS

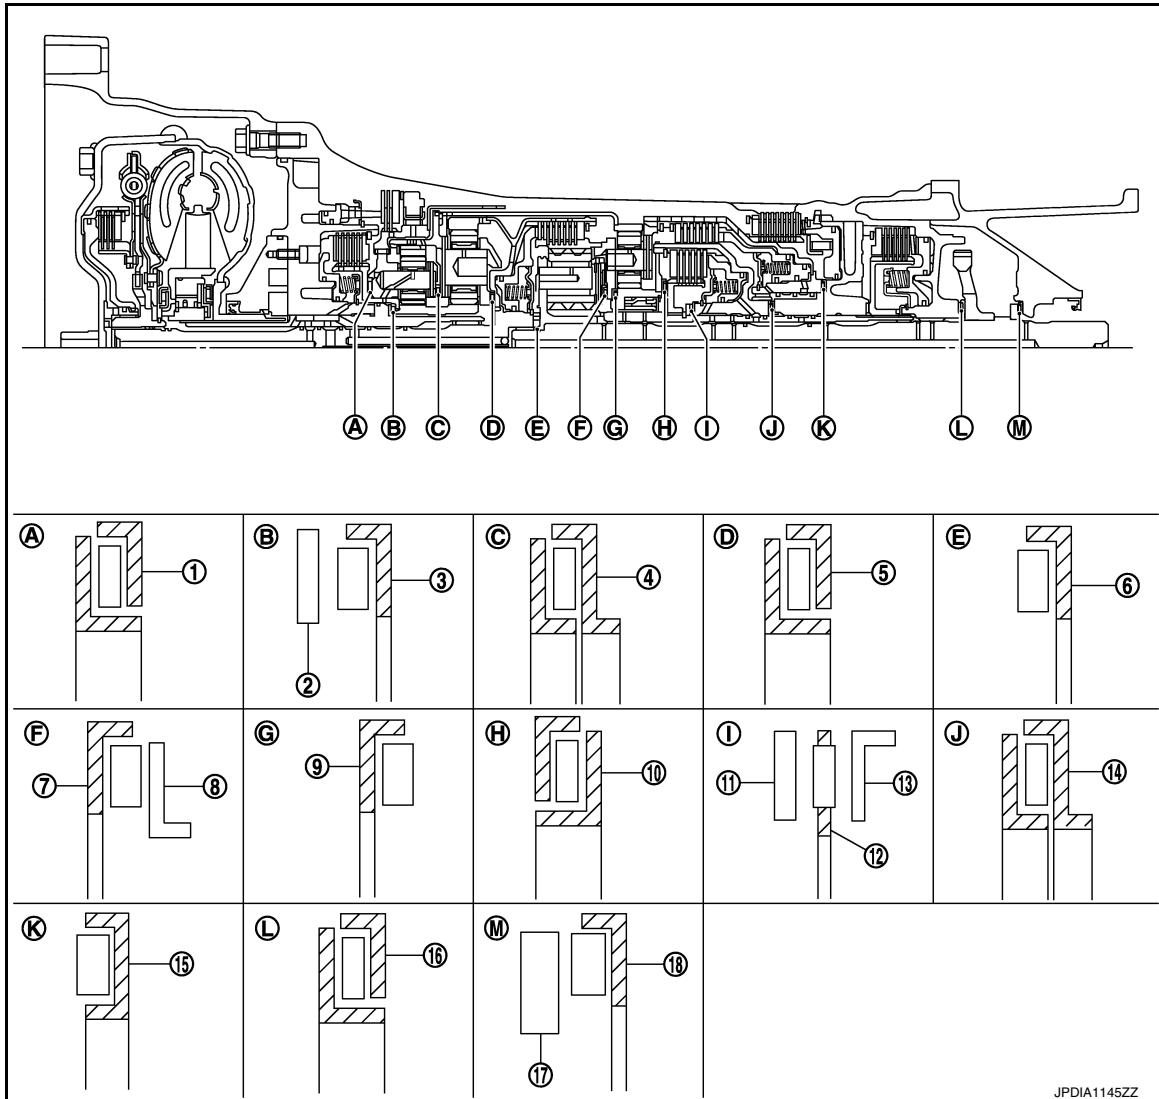

Location	Item	Outer diameter mm (in)
A	(1) Needle bearing	94 (3.701)
B	(2) Bearing race	58.6 (2.307)
	(3) Needle bearing	60 (2.362)
C	(4) Needle bearing	84.6 (3.331)
D	(5) Needle bearing	77 (3.031)
E	(6) Needle bearing	47 (1.850)
F	(7) Needle bearing	84 (3.307)
	(8) Bearing race	82 (3.228)
G	(9) Needle bearing	80 (3.150)
H	(10) Needle bearing	92 (3.622)

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[7AT: RE7R01A]

Location	Item	Outer diameter mm (in)
I	(11) Bearing race	61.1 (2.406)
	(12) Needle bearing	60 (2.362)
	(13) Bearing race	61.9 (2.437)
J	(14) Needle bearing	62.8 (2.472)
K	(15) Needle bearing	92 (3.622)
L	(16) Needle bearing	65 (2.559)
M	(17) Bearing race	58 (2.283)
	(18) Needle bearing	60 (2.362)

Location of Snap Rings

INFOID:000000012167665

2WD MODELS

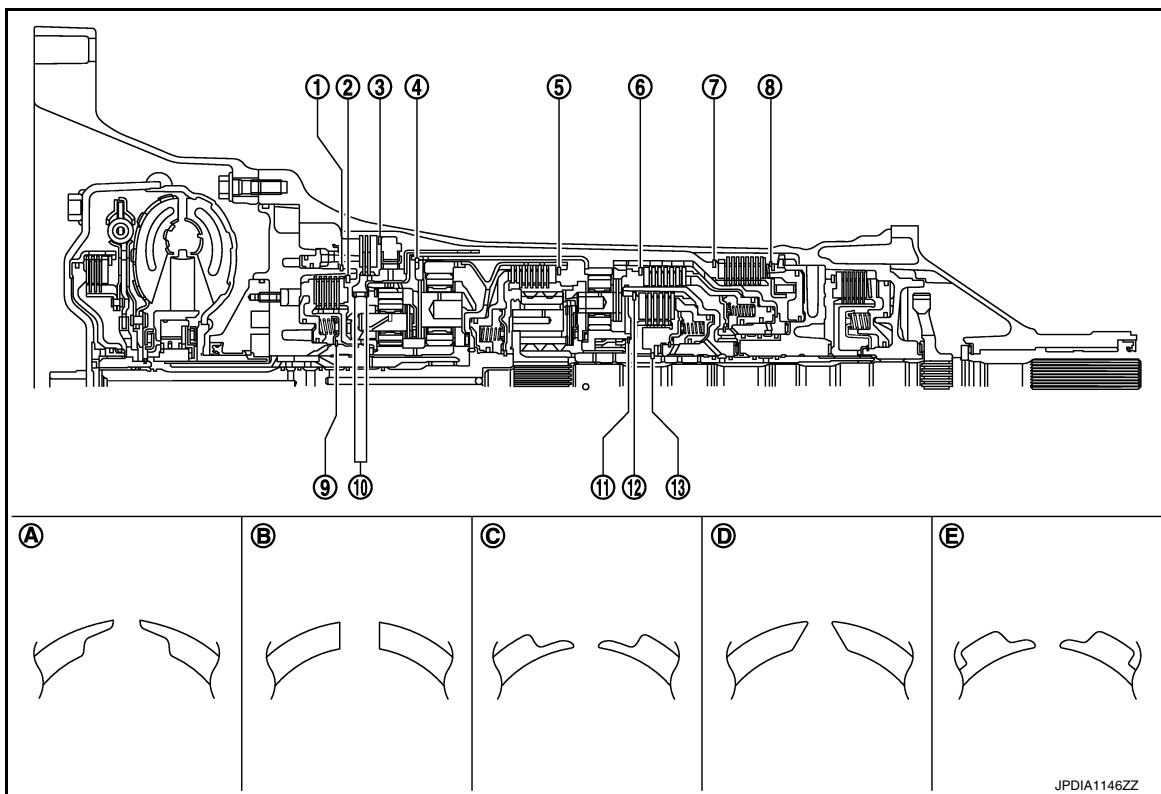

Location	Shape of snap ring	Outer diameter mm (in)
1	A	159.9 (6.295)
2	B	159 (6.260)
3	B	216 (8.504)
4	B	180.4 (7.102)
5	C	171.5 (6.752)
6	B	169 (6.654)
7	B	180.5 (7.106)
8	B	181.0 (7.126)
9	D	64.6 (2.543)
10	B	136 (5.354)
11	E	70.5 (2.776)


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

Location	Shape of snap ring	Outer diameter mm (in)
12	B	135 (5.315)
13	A	48.4 (1.906)

AWD MODELS

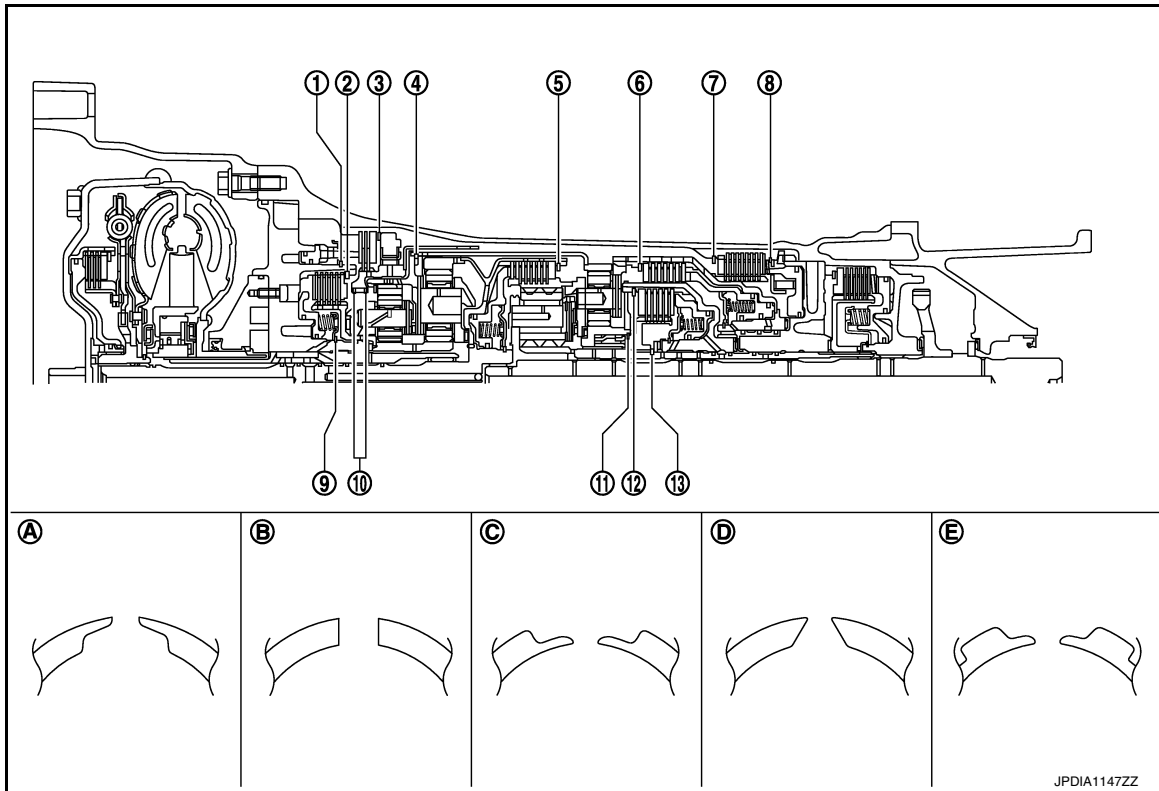

Location	Shape of snap ring	Outer diameter mm (in)
1	A	159.9 (6.295)
2	B	159 (6.260)
3	B	216 (8.504)
4	B	180.4 (7.102)
5	C	171.5 (6.752)
6	B	169 (6.654)
7	B	180.5 (7.106)
8	B	181.0 (7.126)
9	D	64.6 (2.543)
10	B	136 (5.354)
11	E	70.5 (2.776)
12	B	135 (5.315)
13	A	48.4 (1.906)

Disassembly

INFOID:000000012167666

CAUTION:

Never disassemble parts behind drum support. Refer to [TM-31, "Cross-Sectional View"](#).


1. Drain ATF through drain plug.

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


2. Remove torque converter by holding it firmly and turning while pulling straight out.

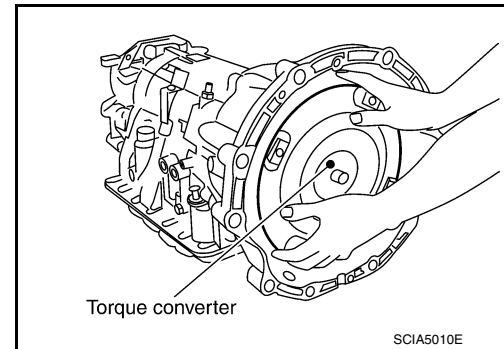


3. Remove tightening bolts (⬅) for converter housing and transmission case.
4. Remove converter housing from transmission case.
CAUTION:
Be careful not to scratch converter housing.

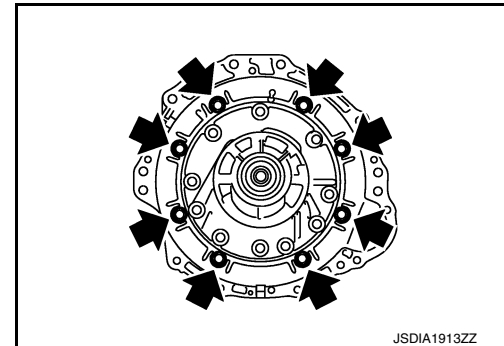

5. Remove O-ring from input clutch assembly.

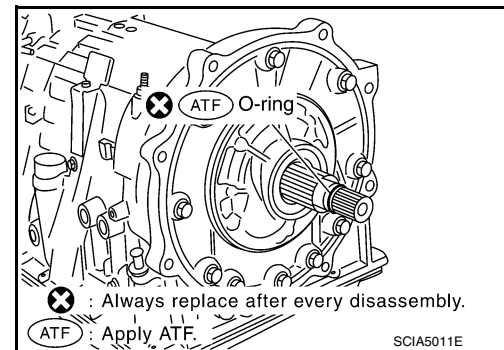

6. Remove tightening bolts (⬅) for oil pump assembly and transmission case.

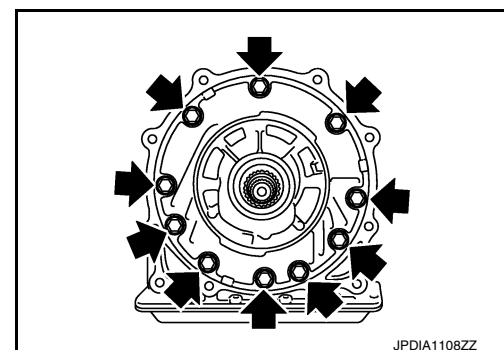

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[7AT: RE7R01A]

7. Attach the sliding hammers [SST: ST25850000 (J-25721-A)] (A) to oil pump assembly (1) and extract it evenly from transmission case.


B : Sliding hammer attachment position

CAUTION:


- Fully tighten the sliding hammer screws.
- Make sure that bearing race is installed to the oil pump assembly edge surface.

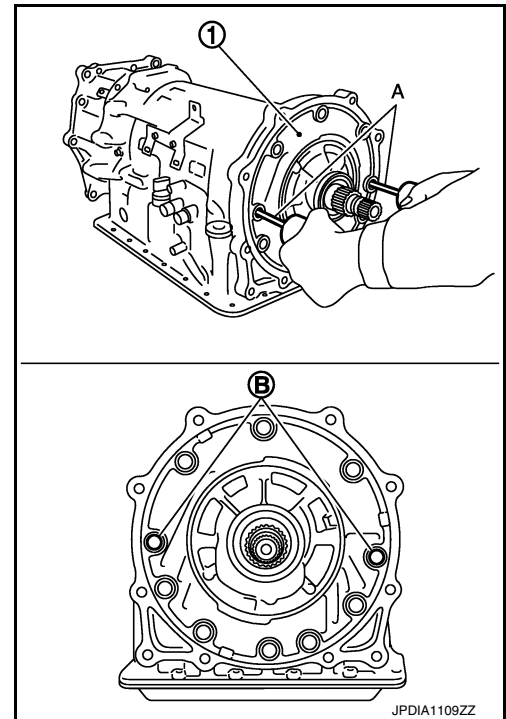


8. Remove O-ring (1) from oil pump assembly.

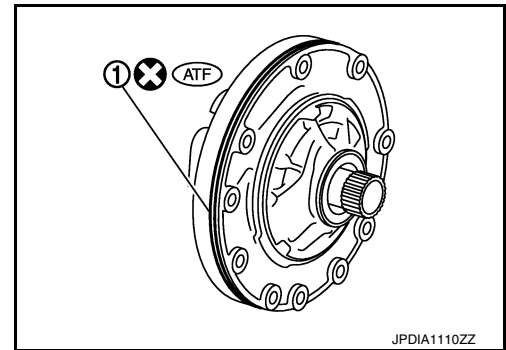

9. Remove bearing race (1) from oil pump assembly.

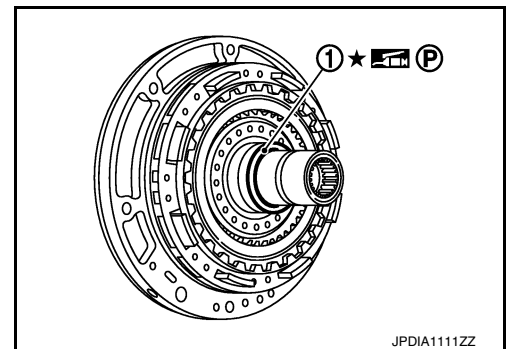

10. Remove seal ring (1) from oil pump assembly.

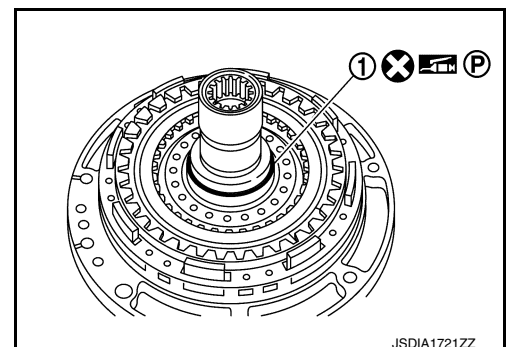


TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


11. Remove under drive sun gear (1) from under drive carrier assembly.

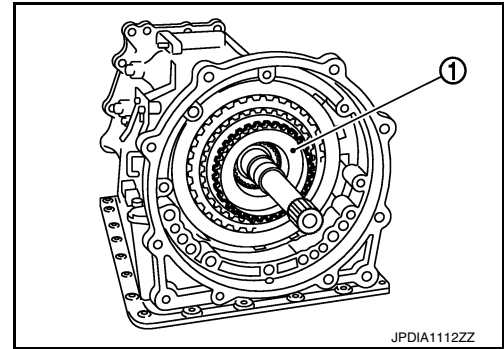


12. Remove needle bearing (1) from under drive sun gear.

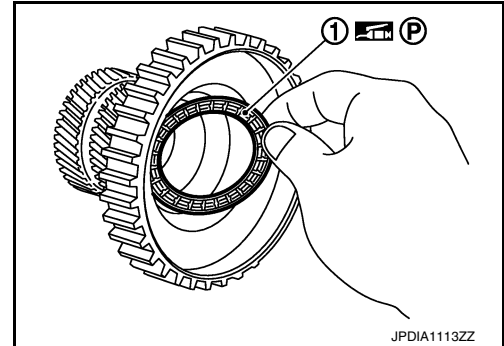

13. Remove needle bearing (1) from under drive carrier assembly.

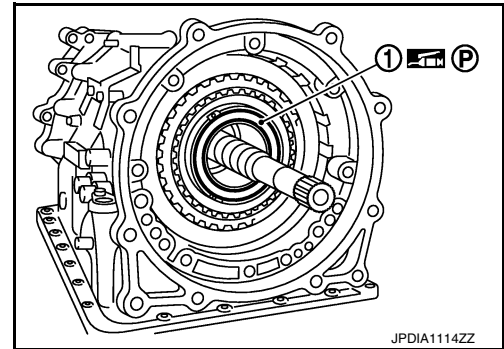


14. Remove front brake component part (retaining plates, drive plates and driven plate) from transmission case by using a wire (A) with its tip bent like a hook.

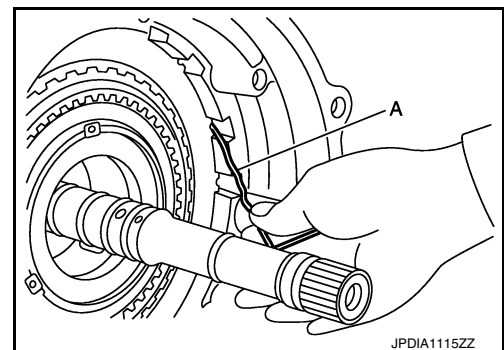

15. Remove snap ring (1) from transmission case using a flat-bladed screwdriver.

CAUTION:

- Be careful not to scratch transmission case and 1st one-way clutch.
- Be careful not to damage snap ring.

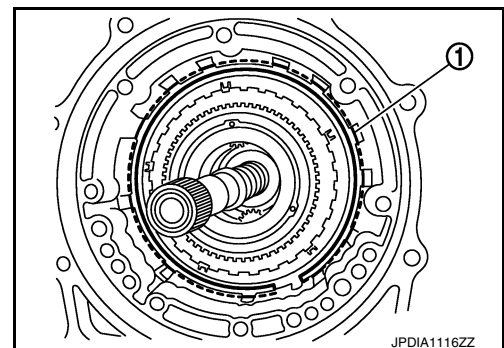


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


16. Remove input clutch assembly (with 1st one-way clutch, under drive carrier assembly, front brake hub, front carrier assembly, and rear internal gear) (1) from transmission case.

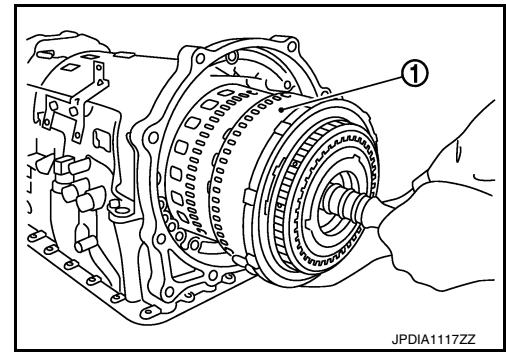


17. Remove 1st one-way clutch (1) from front brake hub.

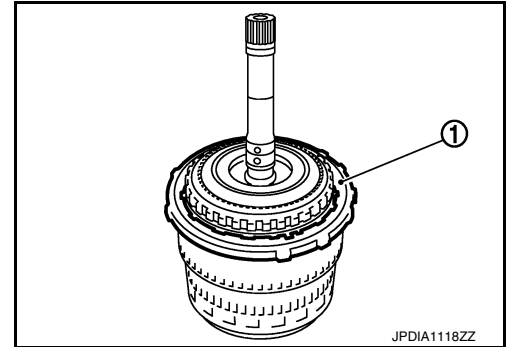


18. Remove under drive carrier assembly (with front brake hub) (1) from front carrier assembly.

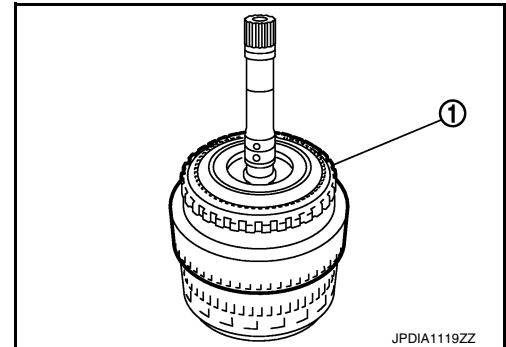

19. Remove needle bearing (1) from front carrier assembly.

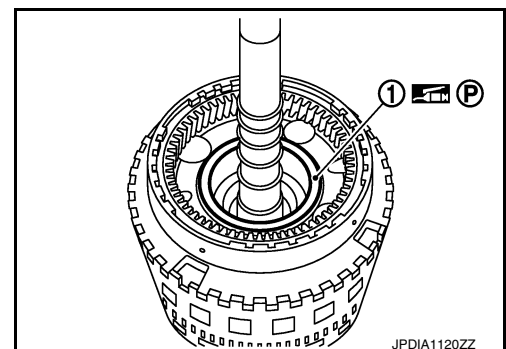

20. Remove seal rings (1) from input clutch assembly.

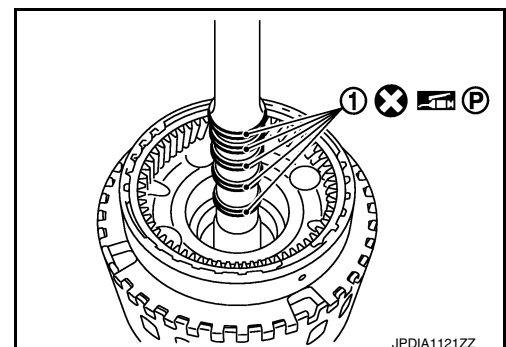


TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


21. Remove mid carrier assembly and rear carrier assembly as a unit.

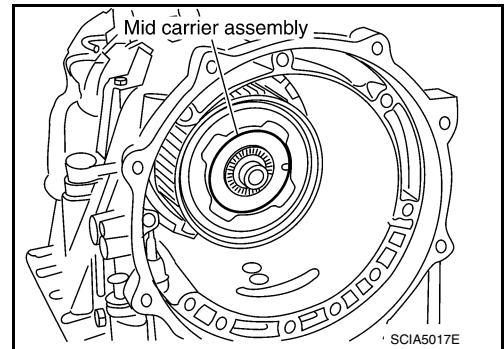


22. Remove mid carrier assembly from rear carrier assembly.

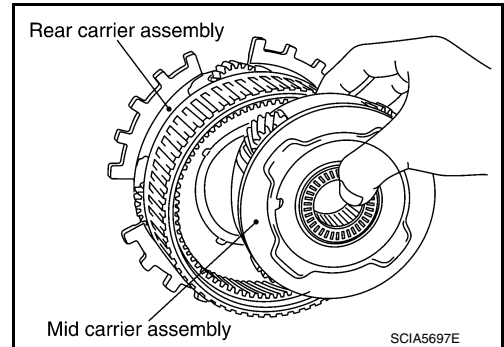


23. Remove needle bearing (front side) from mid carrier assembly.

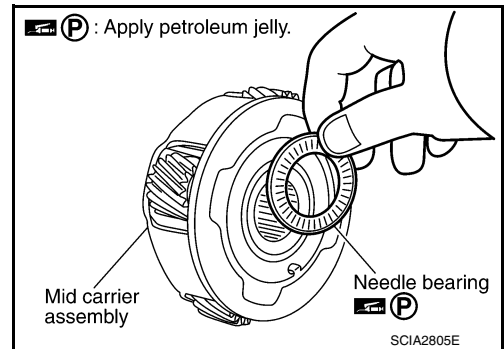

24. Remove needle bearing (rear side) from mid carrier assembly.

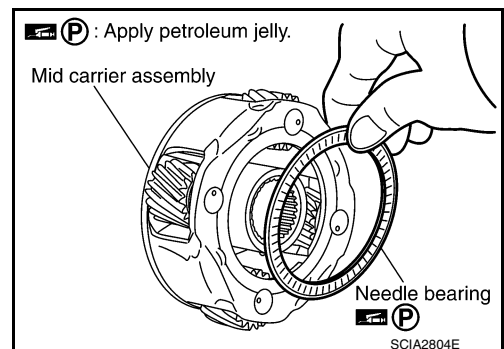

25. Remove bearing race from rear carrier assembly.

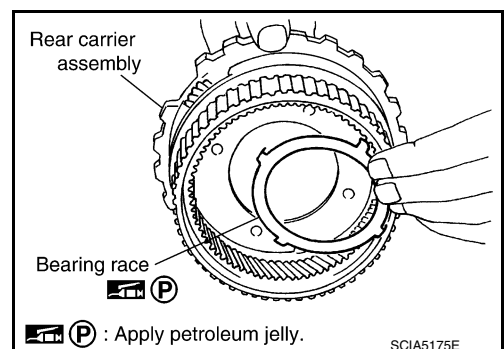


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


26. Remove needle bearing from rear carrier assembly.

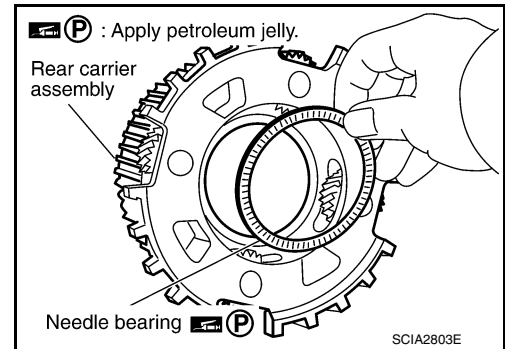

27. Remove mid sun gear assembly, rear sun gear assembly, and high and low reverse clutch hub as a unit.

CAUTION:


Be careful to remove them with bearing race and needle bearing.

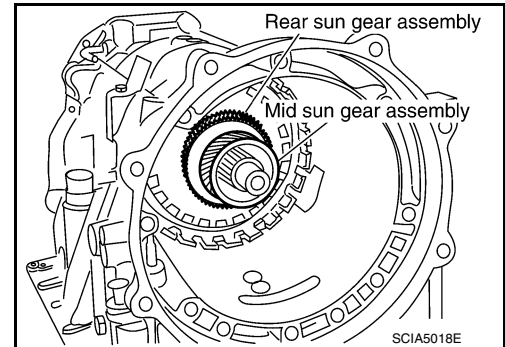


28. Remove high and low reverse clutch assembly from direct clutch assembly.

CAUTION:


Make sure that needle bearing is installed to the high and low reverse clutch assembly edge surface.

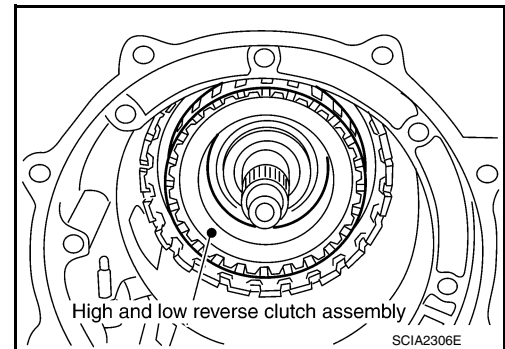

29. Remove direct clutch assembly from reverse brake.

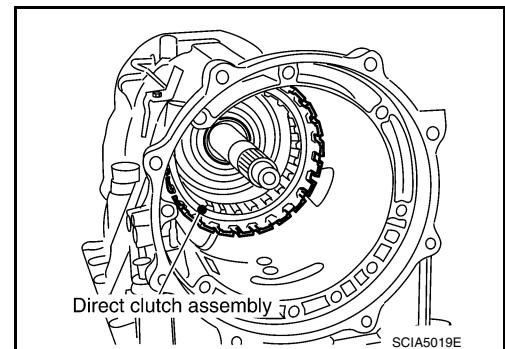

30. Remove needle bearing from drum support.

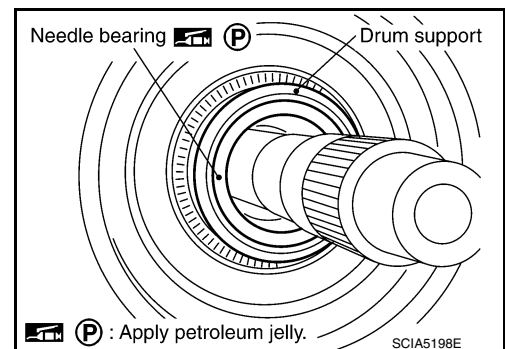


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[7AT: RE7R01A]

31. Remove snap ring (1) from joint connector (A).

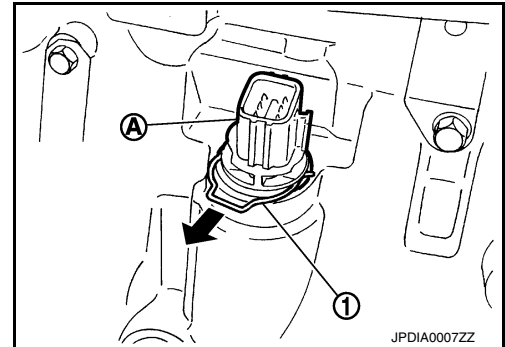

32. Push joint connector (A).


CAUTION:
Be careful not to damage connector.

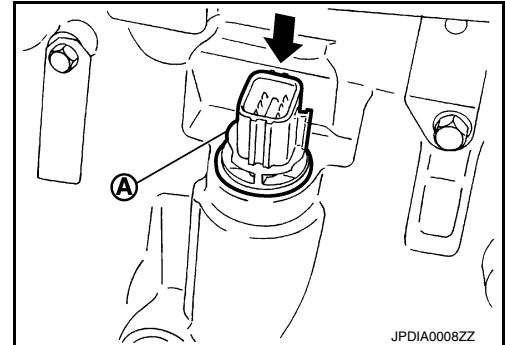


33. Remove oil pan mounting bolts (←).

1 : Clip
← : Front

34. Remove oil pan (2) and oil pan gasket.

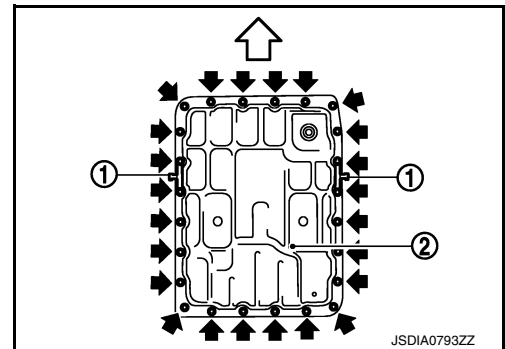


35. Remove magnets (1) from oil pan.

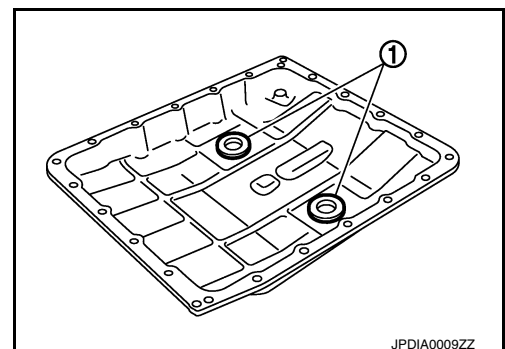

36. Disconnect output speed sensor connector (A).

CAUTION:
Be careful not to damage connector.

37. Disengage terminal clips (←).

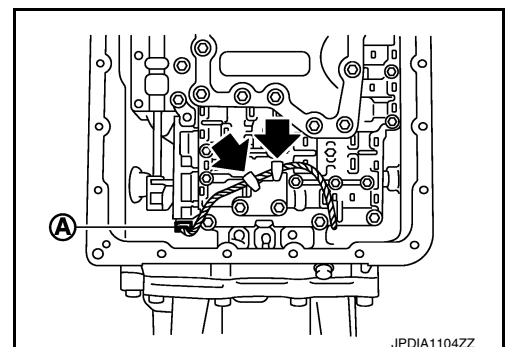

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[7AT: RE7R01A]

38. Remove control valve & TCM mounting bolts and clip (1) from the control valve & TCM.

↔ : Front

Bolt symbol	Length mm (in)	Number of bolts
A	43 (1.69)	3
B	40 (1.57)	2
C	54 (2.13)	6
D	50 (1.97)	2
E*	50 (1.97)	1


*: Reamer bolt

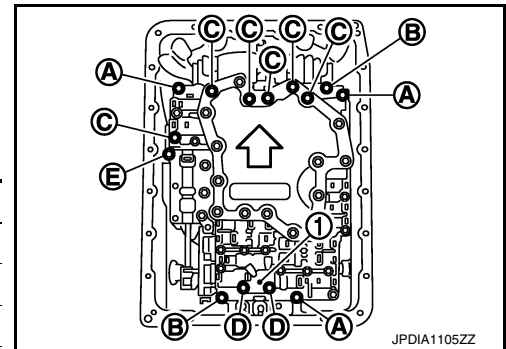


39. Remove the control valve & TCM (1) from transmission case.

CAUTION:

When removing, never with the manual valve notch and manual plate height. Remove it vertically.

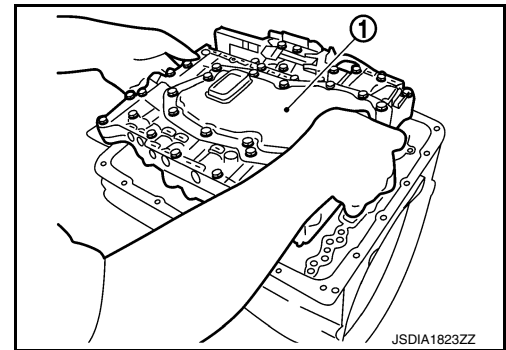


40. Remove joint connector (1) from the control valve & TCM using a flat-bladed screwdriver (A).

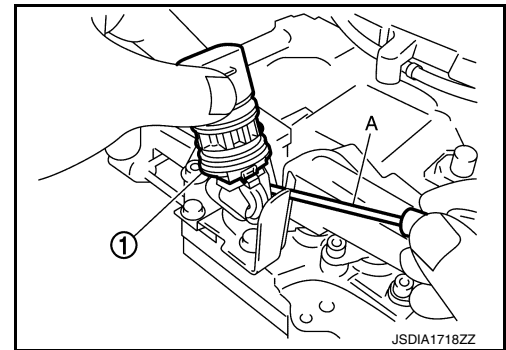

41. Disconnect TCM connector (A).

CAUTION:

Be careful not to damage connector.

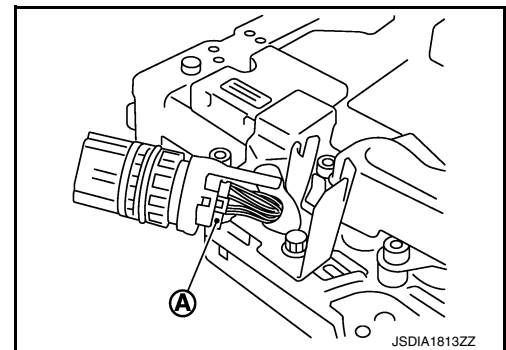

42. Remove rear extension assembly (2WD) or adapter case assembly (AWD) according to the following procedures.

a. **2WD**


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


- i. Remove tightening bolts for rear extension assembly and transmission case.

A : Bolt
B : Self-sealing bolt

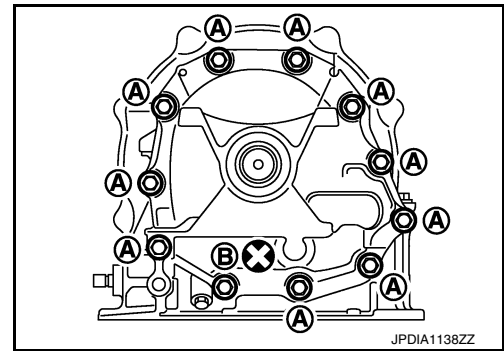


- ii. Tap rear extension assembly using a soft hammer.


CAUTION:
Be careful not to damage rear extension.

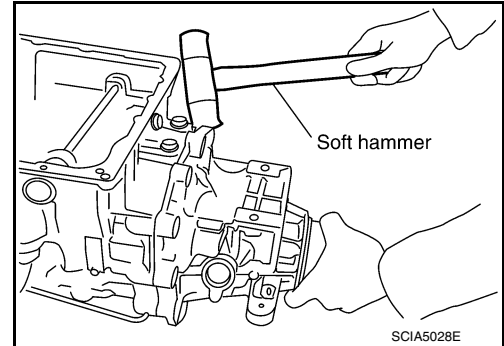


- iii. Remove rear extension assembly from transmission case. (With needle bearing.)

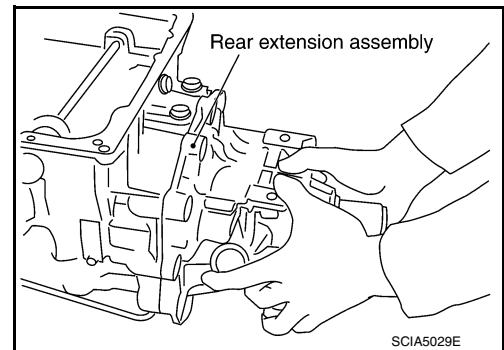

- iv. Remove bearing race from output shaft.

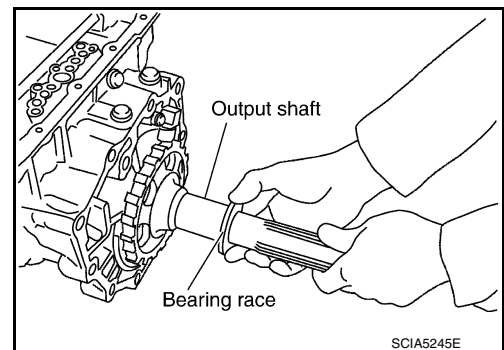

- v. Remove output shaft from transmission case by rotating left/right.

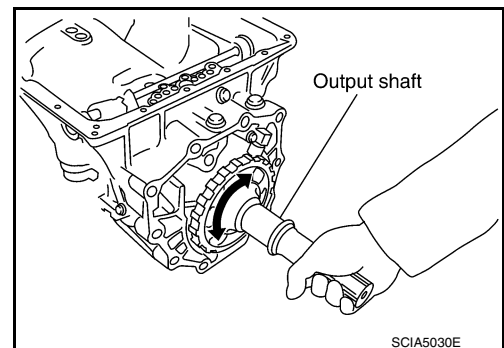


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

vi. Remove parking gear (1) from output shaft (2).

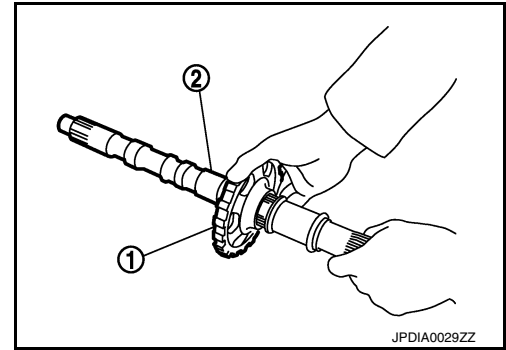


vii. Remove seal rings (1) from output shaft.

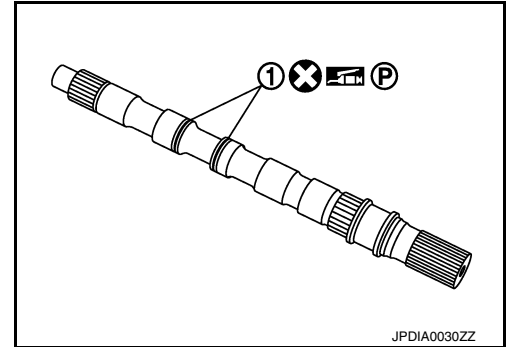

b. **AWD**

i. Remove tightening bolts for adapter case assembly and transmission case.

- 1 : Bracket
- A : Bolt
- B : Self-sealing bolt

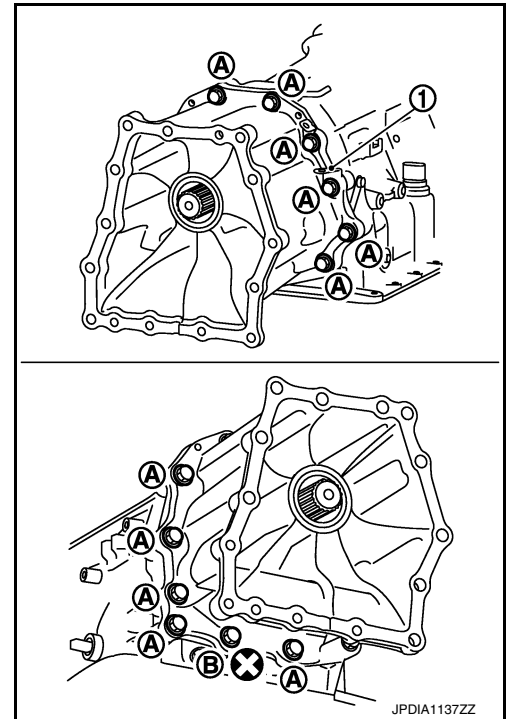

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


- ii. Tap adapter case assembly using a soft hammer.

CAUTION:


Be careful not to damage adapter case.

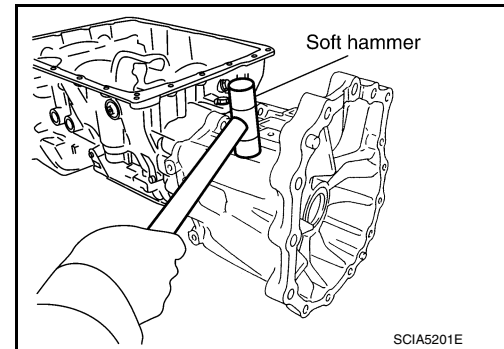


- iii. Remove adapter case assembly from transmission case. (With needle bearing)

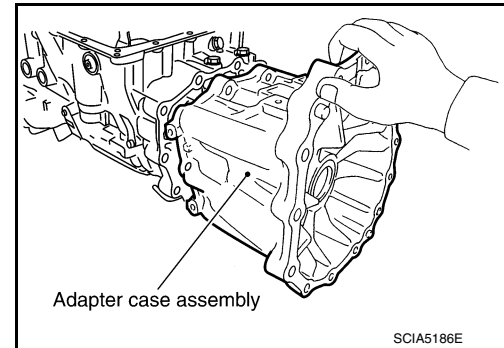


- iv. Remove bearing race from output shaft.

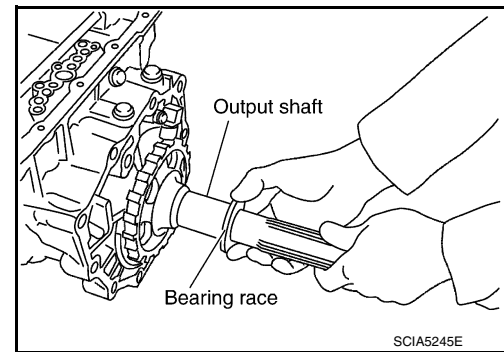

- v. Remove output shaft from transmission case by rotating left/right.

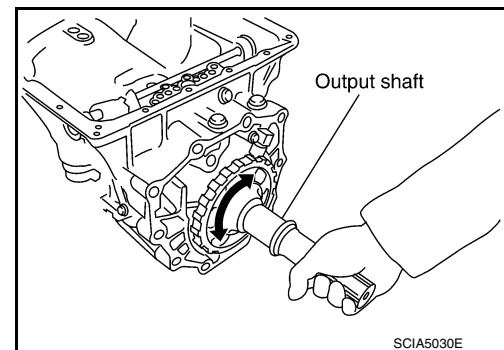

- vi. Remove gasket from transmission case.

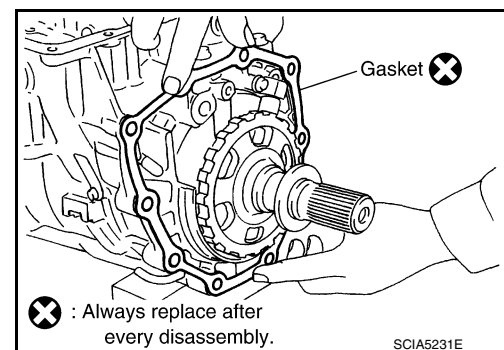

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O


P

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


vii. Remove parking gear (1) from output shaft (2).

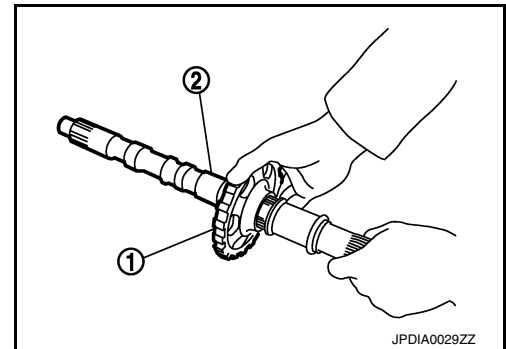

viii. Remove seal rings (1) from output shaft.

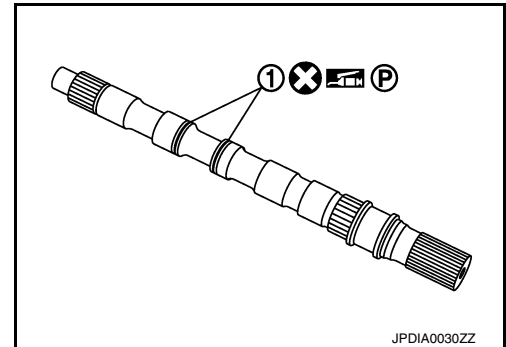

43. Remove needle bearing from transmission case.

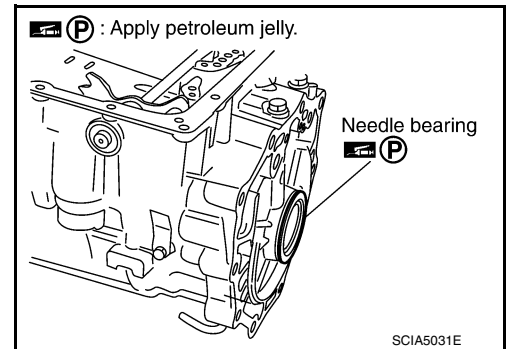


44. Remove output speed sensor (1) from transmission case.

← : Bolt

CAUTION:

- Never subject it to impact by dropping or hitting it.
- Never disassemble.
- Never allow metal filings, etc. to get on the sensor's front edge magnetic area.
- Never place in an area affected by magnetism.

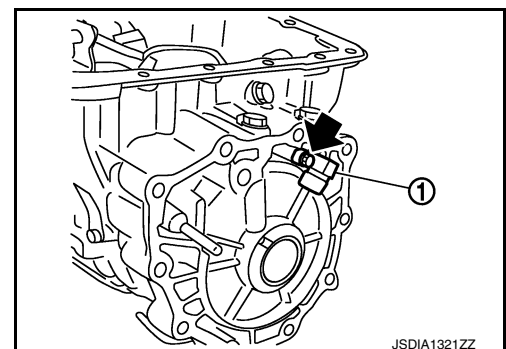


45. Remove reverse brake snap ring (fixing plate) with 2 flat-bladed screwdrivers.

CAUTION:

- Be careful not to scratch transmission case and reverse brake retaining plate.
- Be careful not to damage snap ring.

NOTE:

Press out snap ring from the transmission case oil pan side gap with a flat-bladed screwdriver, and remove it using a another screwdriver.

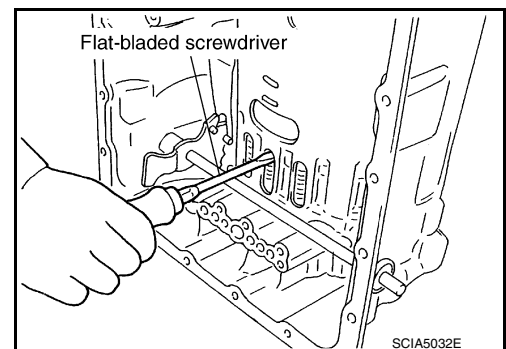


46. Remove reverse brake retaining plate from transmission case.

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

47. Remove N-spring from transmission case.

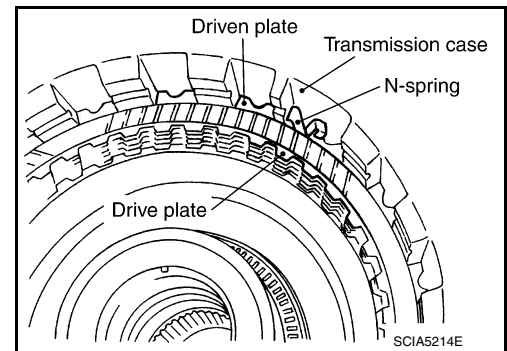


48. Remove reverse brake component part (drive plates, driven plates and dish plates) from transmission case.

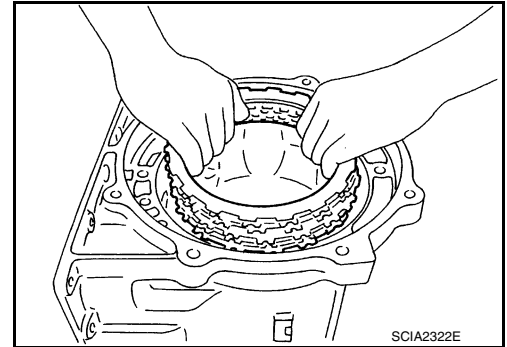


49. Remove snap ring (fixing spring retainer) using a flat-bladed screwdriver.

CAUTION:


- Be careful not to scratch transmission case and spring retainer.
- Be careful not to damage snap ring.

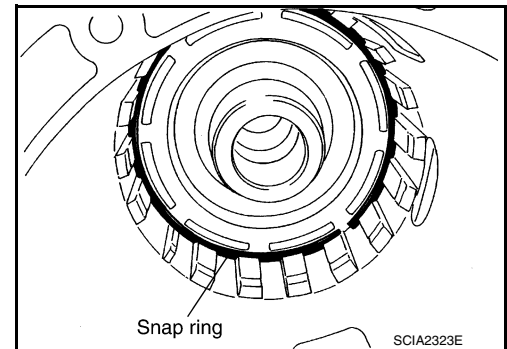

50. Remove reverse brake spring retainer and reverse brake return spring from transmission case.

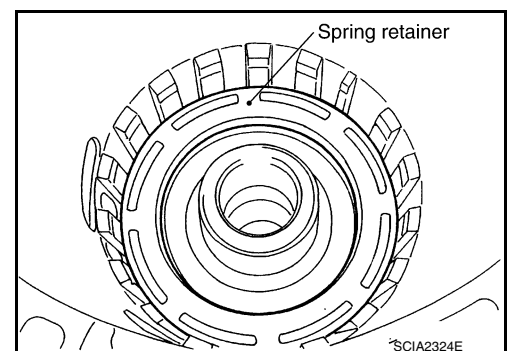

51. Remove seal rings from drum support.

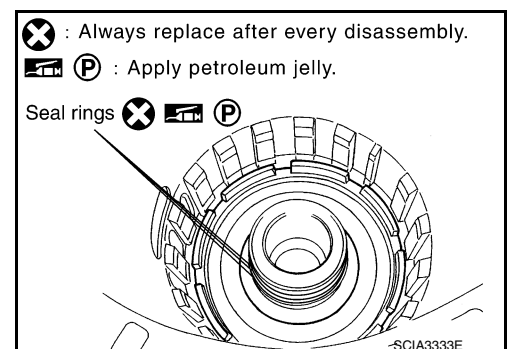


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

52. Remove needle bearing from drum support edge surface.

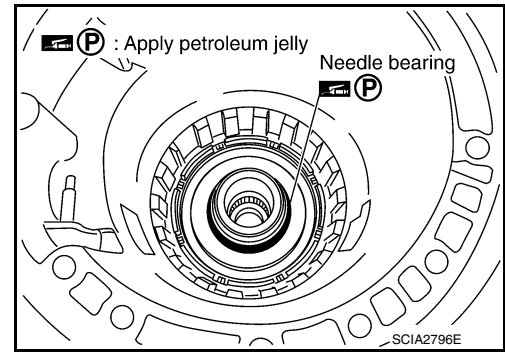


53. Remove reverse brake piston (1) from transmission case with compressed air. Refer to [TM-228, "Oil Channel"](#).


A : Reverse brake pressure hole

CAUTION:

Care should be taken not to abruptly blow air. It makes pistons incline, as the result, it becomes hard to disassemble the pistons.

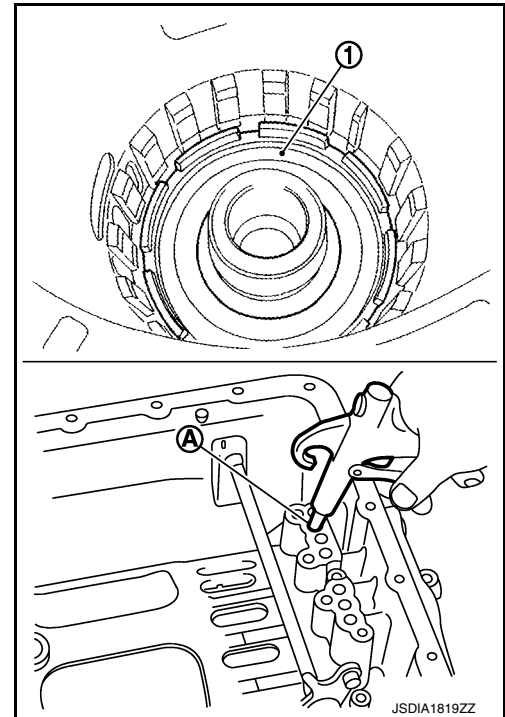


54. Remove D-rings from reverse brake piston.

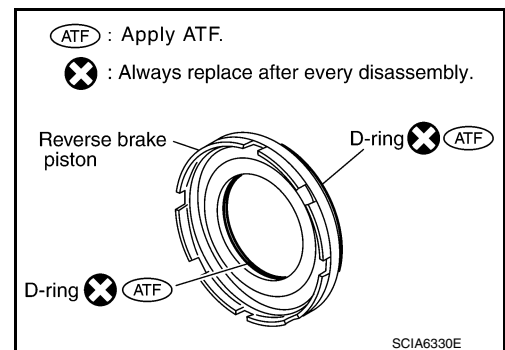

55. Remove retaining pin with pair of nippers.

CAUTION:

Be careful not to cut retaining pin.

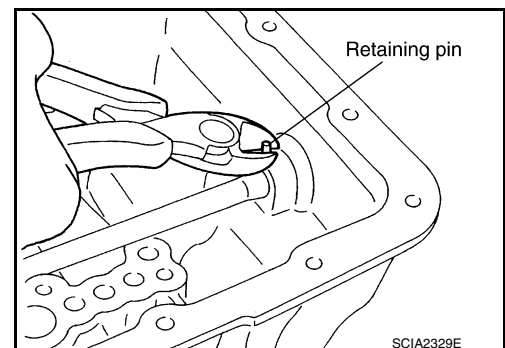


TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


- 56. Remove manual plate (1) from detent spring (2).
- 57. Remove parking rod (3) from manual plate.
- 58. Install manual plate to detent spring.

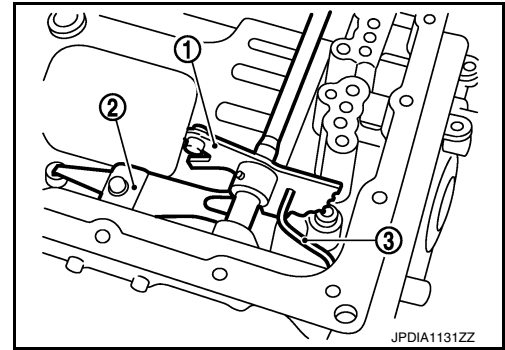


- 59. Use a pin punch [4 mm (0.16 in) dia. commercial service tool] to knock out retaining pin (1).

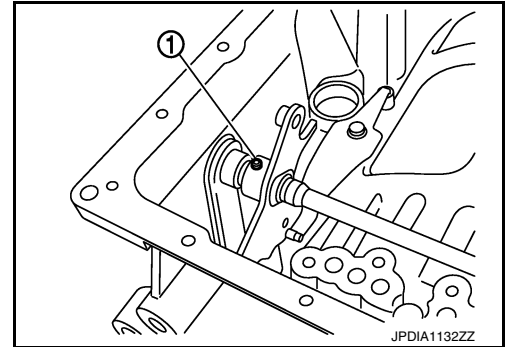


- 60. Remove manual plate from manual shaft.

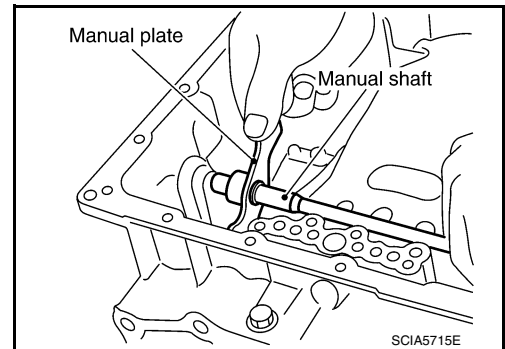

- 61. Remove manual shaft from transmission case.

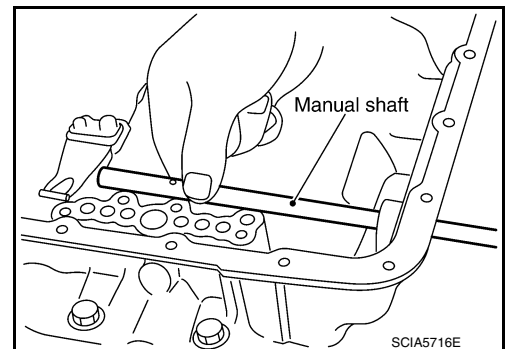

- 62. Remove manual shaft oil seals using a flat-bladed screwdriver.
CAUTION:
Be careful not to scratch transmission case.

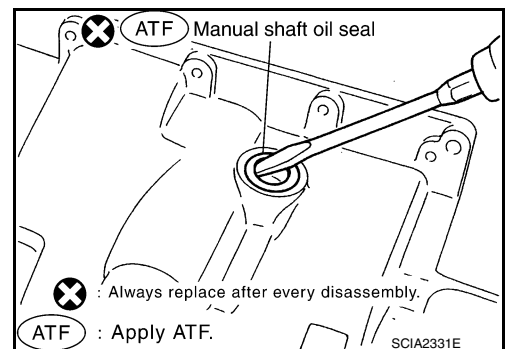

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[7AT: RE7R01A]

63. Remove detent spring (1) from transmission case.


← : Bolt

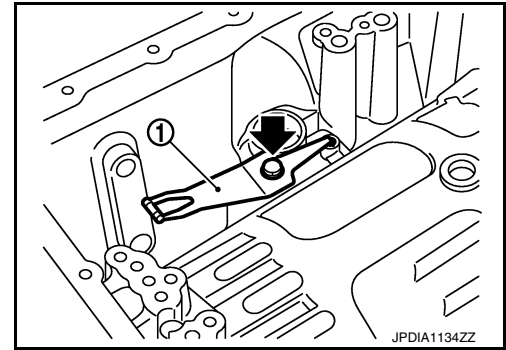


64. Remove needle bearing (1) from rear extension (2WD) or adapter case (AWD).

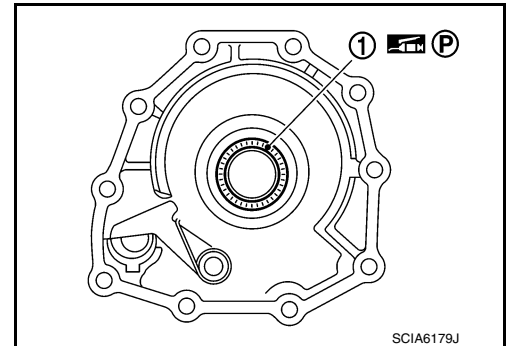


65. Remove parking actuator support from rear extension (2WD) or adapter case (AWD).

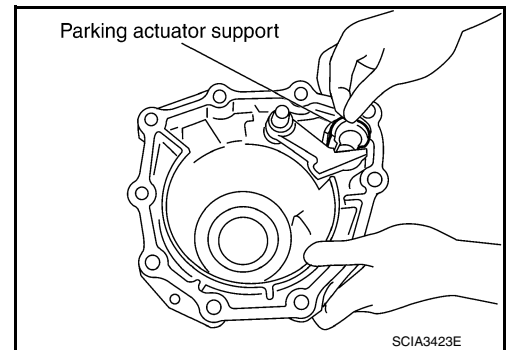

66. Remove parking pawl (with return spring) and pawl shaft from rear extension (2WD) or adapter case (AWD).

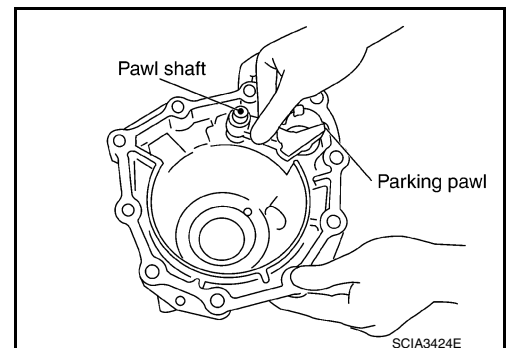

67. Remove return spring (1) from parking pawl (2).

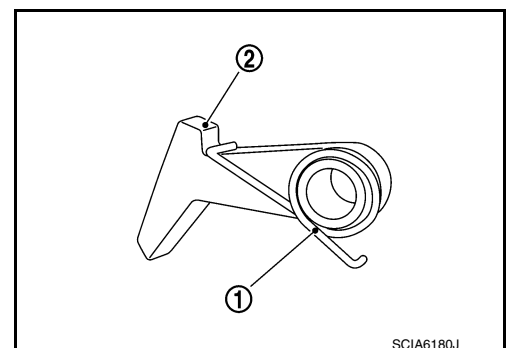

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


68. Remove rear oil seal from rear extension (B) or adapter case (C) using a flat-bladed screwdriver (A).

B : 2WD

C : AWD

CAUTION:

Be careful not to scratch rear extension (2WD) or adapter case (AWD).

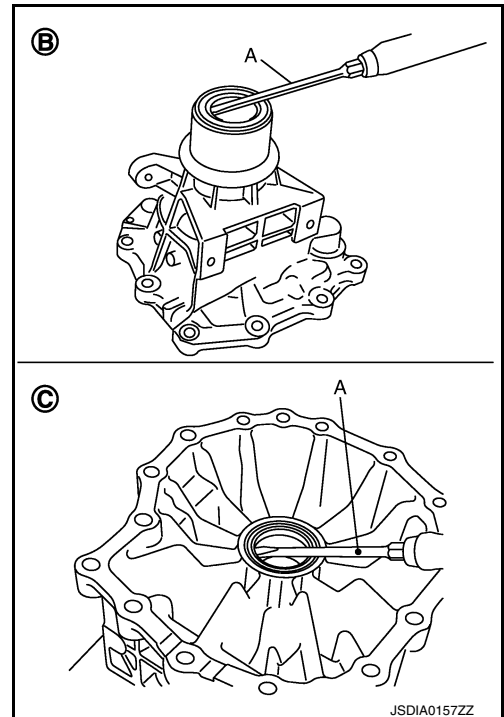


Assembly

INFOID:000000012167667

1. As shown in the figure, use a drift [22 mm (0.87 in) dia. commercial service tool] to drive manual shaft oil seals into the transmission case until it is flush.


CAUTION:

- Never reuse manual shaft oil seals.
- Apply ATF to manual shaft oil seals.

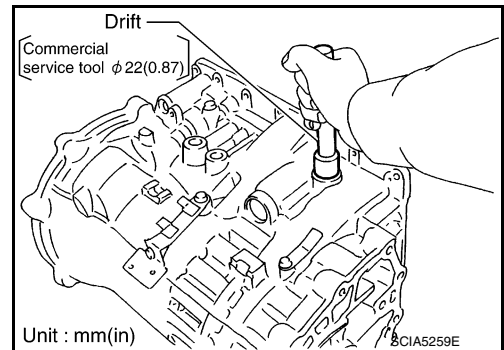

2. Install detent spring (1) to transmission case. Tighten detent spring bolt to the specified torque.

← : Bolt

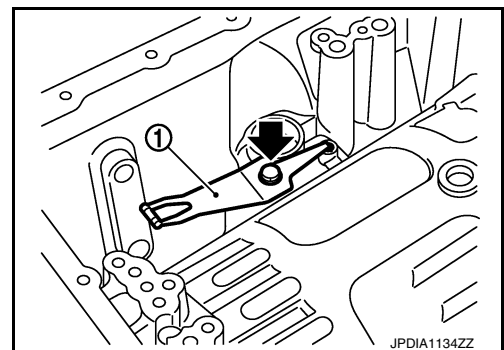


TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


3. Install manual shaft to transmission case.

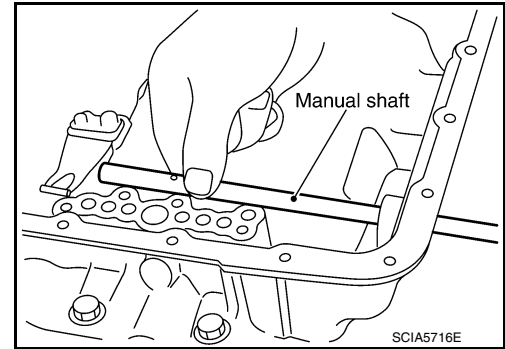

4. Install parking rod (1) to manual plate (2).

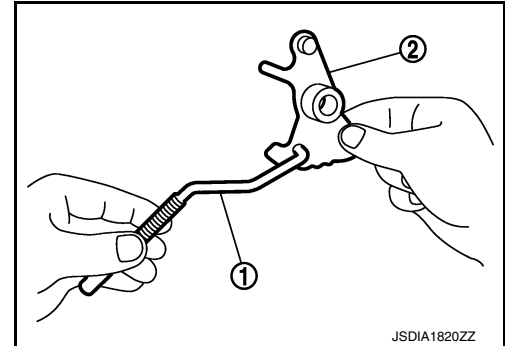

5. Install manual plate (with parking rod) to manual shaft.

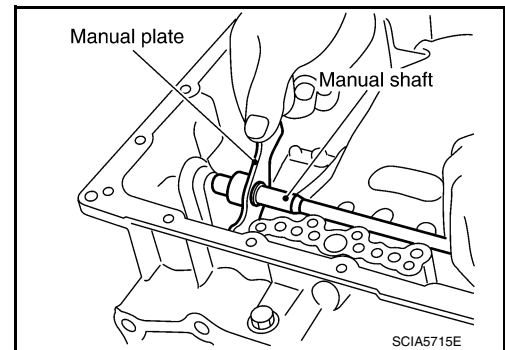


6. Install retaining pin (1) into the manual plate and manual shaft.
- a. Fit pinhole of the manual plate to pinhole of the manual shaft with a pin punch.
 - b. Use a hammer to tap the retaining pin into the manual plate.

A : Approx. 2 mm (0.08 in)

CAUTION:


Drive retaining pin to 2 ± 0.5 mm (0.08 ± 0.020 in) over the manual plate.

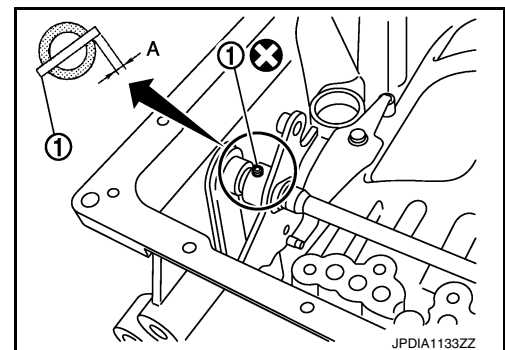

7. Install retaining pin into the transmission case and manual shaft.
- a. Fit pinhole of the transmission case to pinhole of the manual shaft with a pin punch.
 - b. Use a hammer to tap the retaining pin into the transmission case.

CAUTION:

Drive retaining pin to 5 ± 1 mm (0.20 ± 0.04 in) over the transmission case.

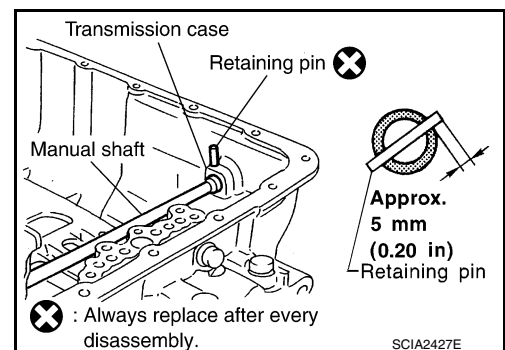


TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

8. Install D-rings to reverse brake piston.

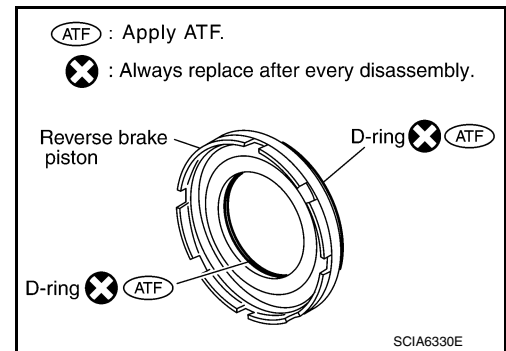


9. Install reverse brake piston to transmission case.

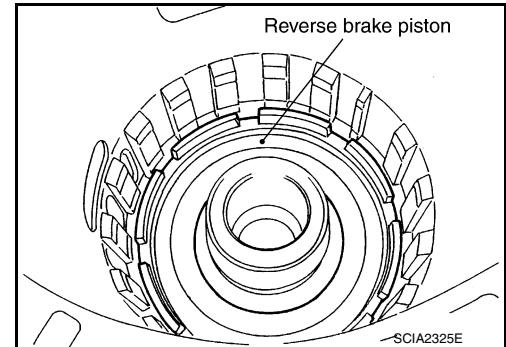


10. Install needle bearing to drum support edge surface.


CAUTION:
Check the direction of needle bearing. Refer to [TM-228](#),
["Location of Needle Bearings and Bearing Races"](#).

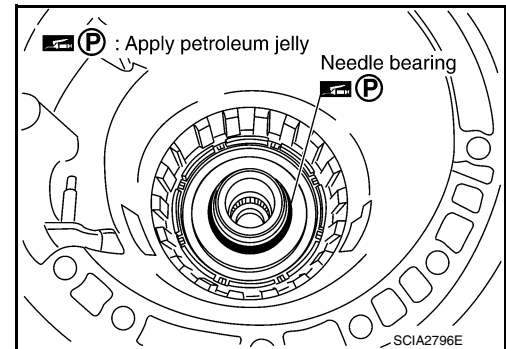

11. Install seal rings to drum support.

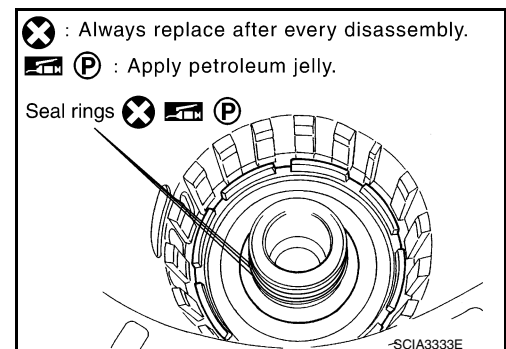

12. Install reverse brake spring retainer and reverse brake return spring to transmission case.

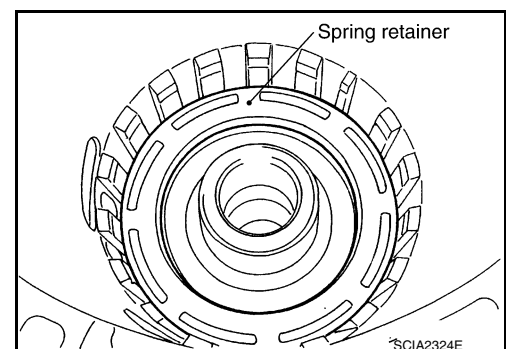

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

13. Set the clutch spring compressor [SST: KV31102400 (J-34285 and J-34285-87)] (A) on reverse brake spring retainer and install snap ring (fixing spring retainer) (1) to transmission case while compressing return spring.

CAUTION:

- Securely assemble them using a flat-bladed screwdriver so that snap ring tension is slightly weak.
- Be careful not to damage snap ring.

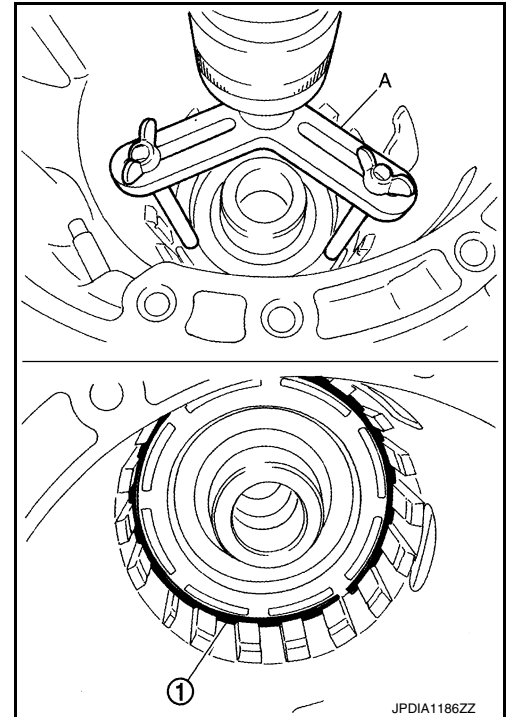


14. Install reverse brake component part (dish plates, driven plates, and drive plates) to transmission case.

- 1 : Snap ring
- 2 : Retaining plate
- 3 : Drive plate (six pieces)
- 4 : Driven plate (six pieces)
- 5 : Dish plate
- 6 : Dish plate


CAUTION:

Check order of plates.

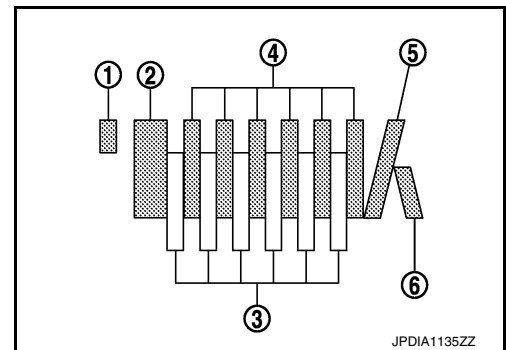

15. Assemble N-spring.

16. Install reverse brake retaining plate to transmission case.

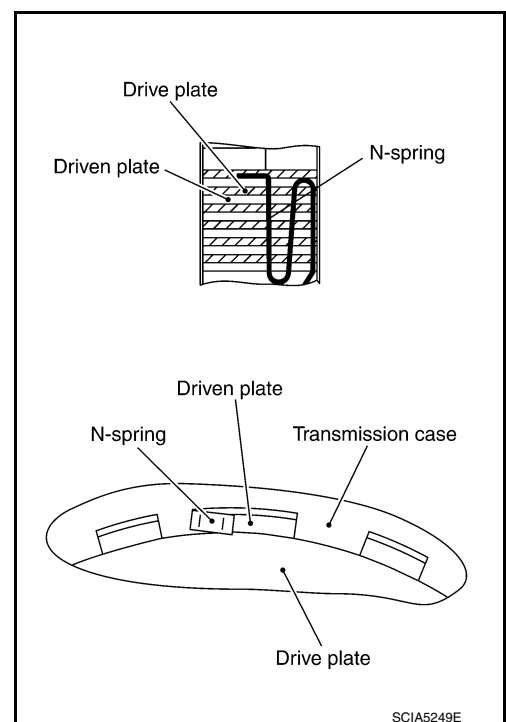

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

17. Install snap ring to transmission case.

CAUTION:

Be careful not to damage snap ring.

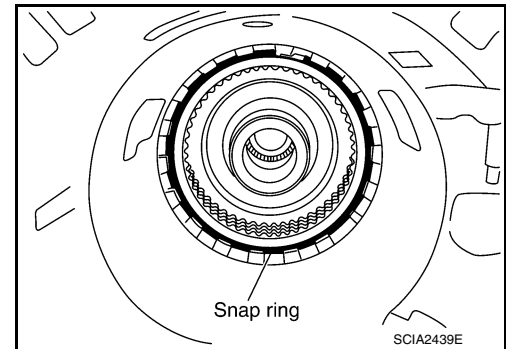


18. Measure clearance between reverse brake retaining plate and snap ring. If not within specified clearance, select proper retaining plate.

Specified reverse brake clearance "A"

Standard: Refer to [TM-303, "Reverse Brake Clearance"](#).


Retaining plate: Refer to [TM-303, "Reverse Brake Clearance"](#)

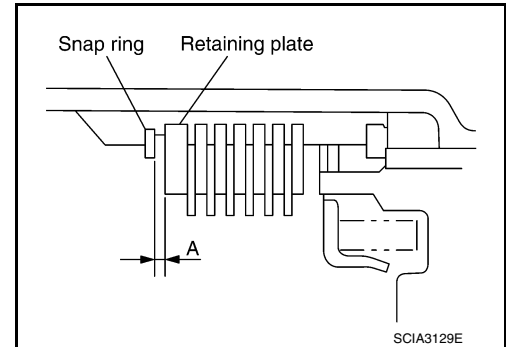

19. Install needle bearing to transmission case.

CAUTION:


Check the direction of needle bearing. Refer to [TM-228, "Location of Needle Bearings and Bearing Races"](#).

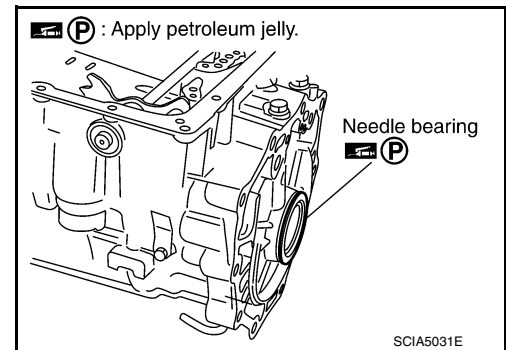

20. Install output speed sensor (1) to transmission case and tighten output speed sensor mounting bolt (←) to the specified torque.

CAUTION:

- Never subject it to impact by dropping or hitting it.
- Never disassemble.
- Never allow metal filings, etc. to get on the sensor's front edge magnetic area.
- Never place in an area affected by magnetism.

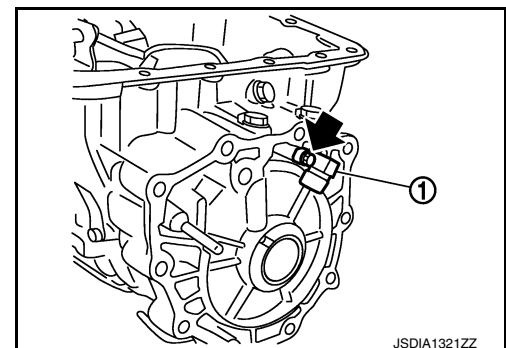

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[7AT: RE7R01A]

21. As shown in the figure, use the drift to drive rear oil seal into the rear extension (2WD) (A) or adapter case (AWD) (B) until it is flush.


- 1 : Drift [SST: 33400001 (J-26082)]
- 2 : Drift [Commercial service tool Ø64 mm (2.52 in)]

CAUTION:


- Never reuse rear oil seal.
- Apply ATF to rear oil seal.
- Never incline rear oil seal.

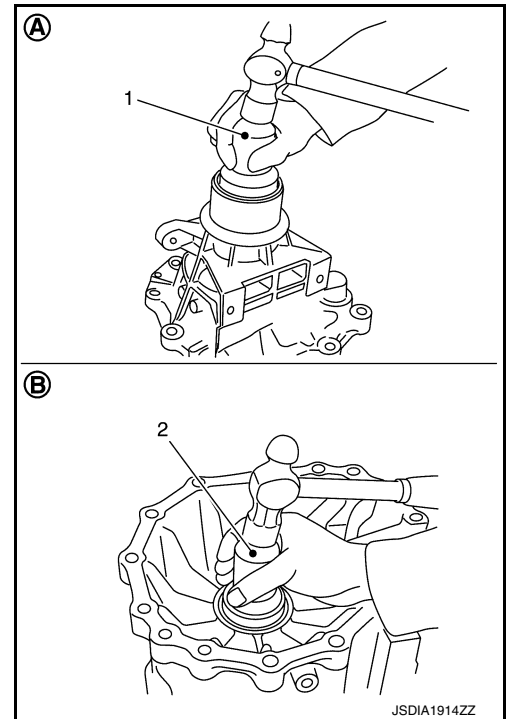


22. Install return spring (1) to parking pawl (2).

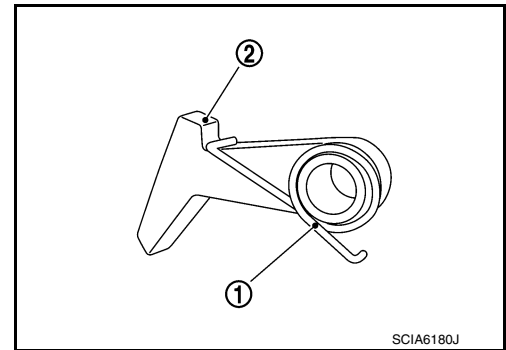

23. Install parking pawl (with return spring) and pawl shaft to rear extension (2WD) or adapter case (AWD).

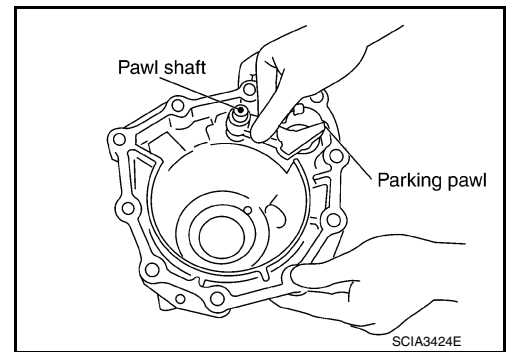

24. Install parking actuator support to rear extension (2WD) or adapter case (AWD).

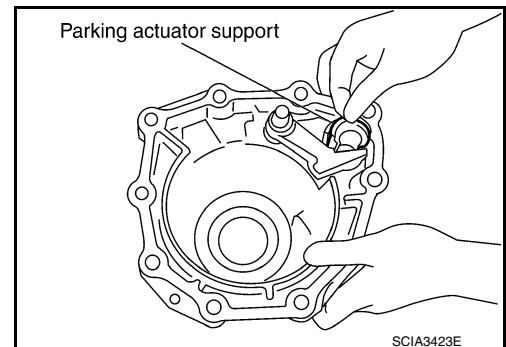

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

25. Install needle bearing (1) to rear extension (2WD) or adapter case (AWD).

CAUTION:


Check the direction of needle bearing. Refer to [TM-228](#), "[Location of Needle Bearings and Bearing Races](#)".

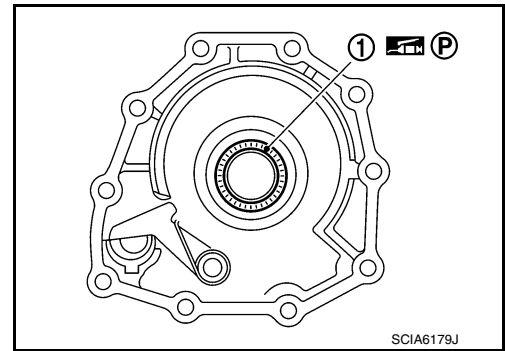


26. Install rear extension assembly (2WD) or adapter case assembly (AWD) according to the following procedures.

a. **2WD**

- i. Install seal rings (1) to output shaft.

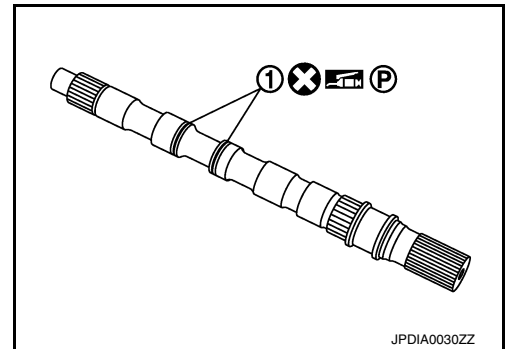


- ii. Install parking gear (1) to output shaft (2).

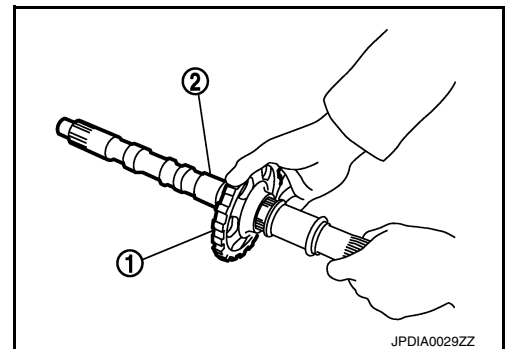

- iii. Install output shaft in transmission case.

CAUTION:

Be careful not to mistake front for rear because both sides looks similar. (Thinner end is front side.)

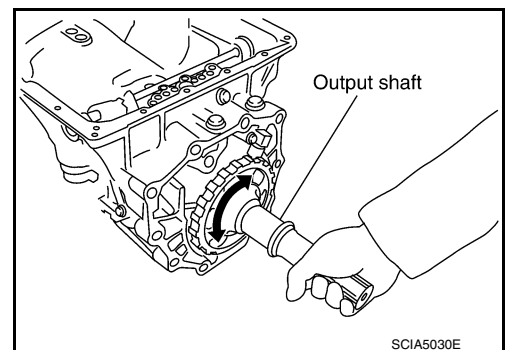


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


iv. Install bearing race to output shaft.

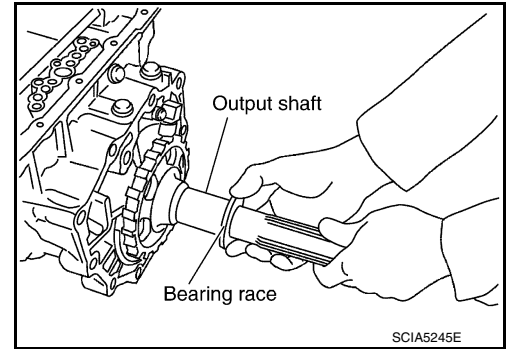

v. Apply recommended sealant to rear extension assembly as shown in the figure. Use Anaerobic Liquid Gasket or an equivalent. Refer to [GI-22](#), "[Recommended Chemical Products and Sealants](#)".


- Sealant starting point and end-point (A)** : Start and finish point shall be in the center of two bolts.
- Overlap width of sealant starting point and end-point (B)** : 3 – 5 mm (0.12 – 0.20 in)
- Sealant width (C)** : 1.0 – 2.0 mm (0.04 – 0.08 in)
- Sealant height (C)** : 0.4 – 1.0 mm (0.016 – 0.04 in)

CAUTION:
Completely remove all moisture, oil and old sealant, etc. from the transmission case and rear extension assembly mounting surfaces.

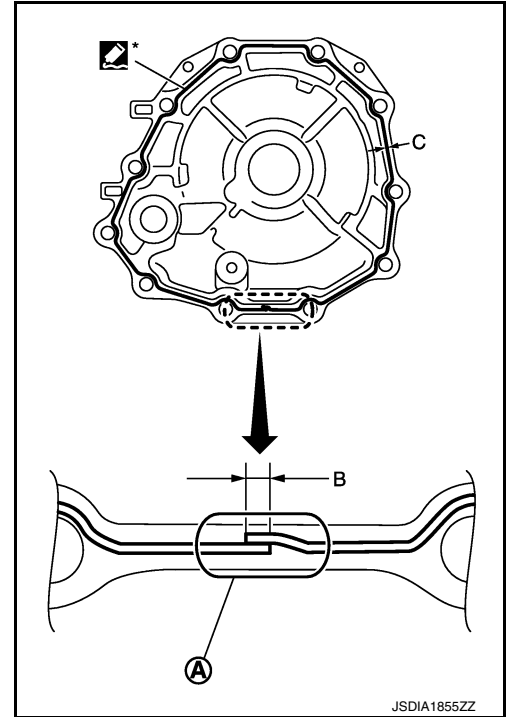


vi. Install rear extension assembly to transmission case.

CAUTION:
Insert the tip of parking rod between the parking pawl and the parking actuator support when assembling the rear extension assembly.

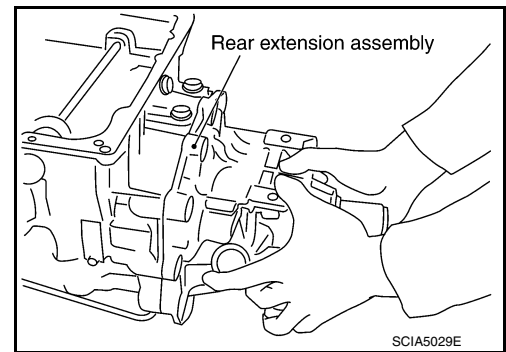

vii. Tighten rear extension assembly bolts to the specified torque.

- A : Bolt
- B : Self-sealing bolt

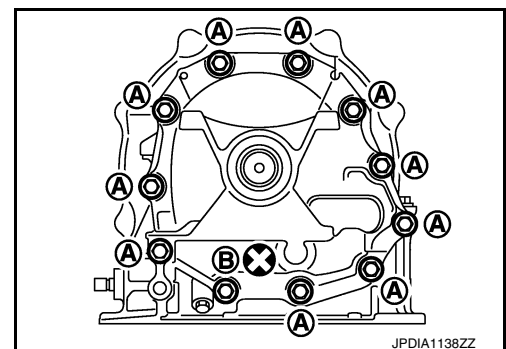


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[7AT: RE7R01A]

b. **AWD**

i. Install seal rings (1) to output shaft.

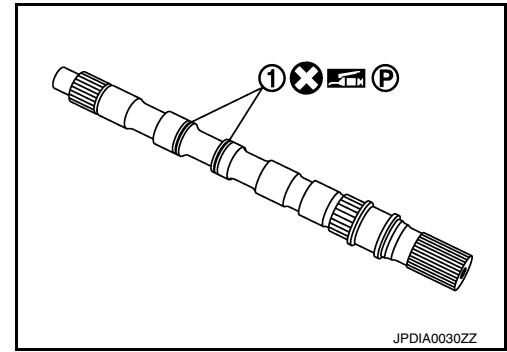


ii. Install parking gear (1) to output shaft (2).

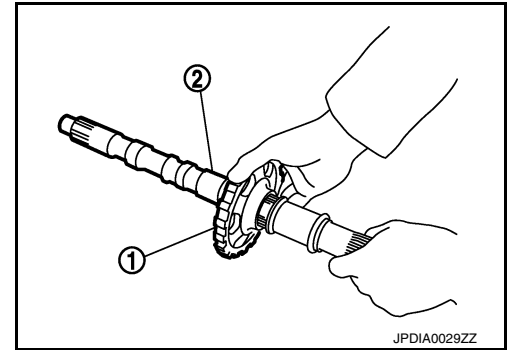


iii. Install output shaft in transmission case.

CAUTION:

Be careful not to mistake front for rear because both sides looks similar. (Thinner end is front side.)

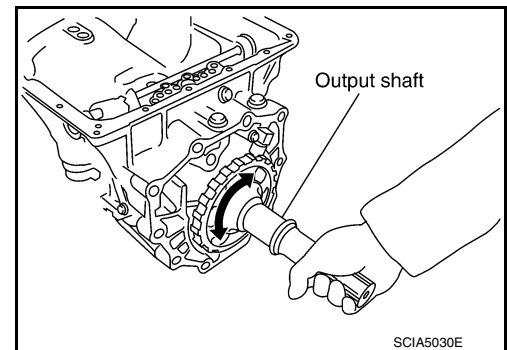

iv. Install bearing race to output shaft.

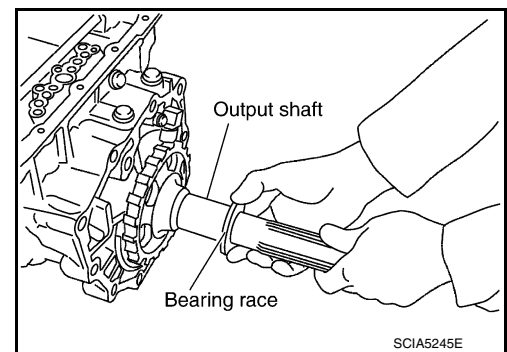

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

v. Install gasket onto transmission case.

CAUTION:


Completely remove all moisture, oil and old gasket, etc. from the transmission case and adapter case assembly mounting surfaces.

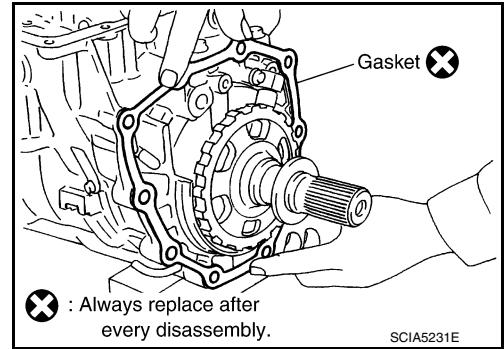

vi. Install adapter case assembly to transmission case.


CAUTION:

Insert the tip of parking rod between the parking pawl and the parking actuator support when assembling the adapter case assembly.

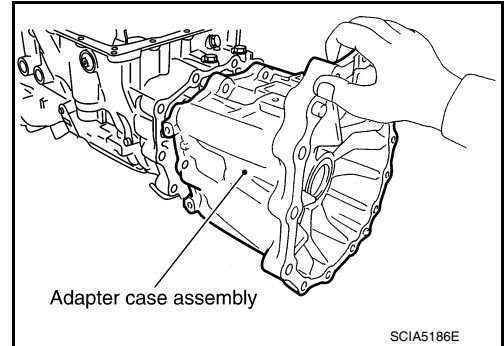

vii. Tighten adapter case assembly bolts to the specified torque.


- 1 : Bracket
- A : Bolt
- B : Self-sealing bolt

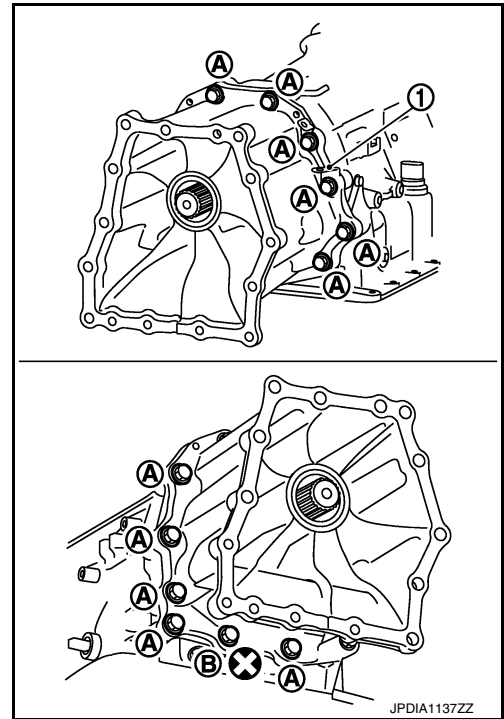

27. Install needle bearing to drum support.

CAUTION:

Check the direction of needle bearing. Refer to [TM-228](#), "[Location of Needle Bearings and Bearing Races](#)".

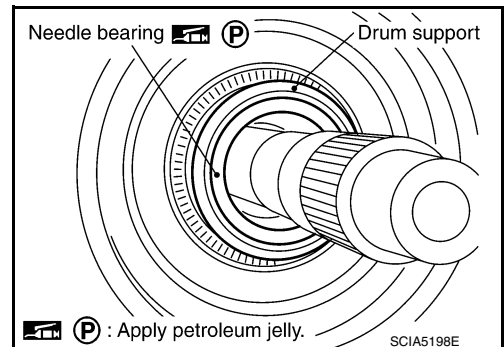

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


28. Install direct clutch assembly to reverse brake.

CAUTION:


Make sure that drum support edge surface and direct clutch inner boss edge surface come to almost same place.

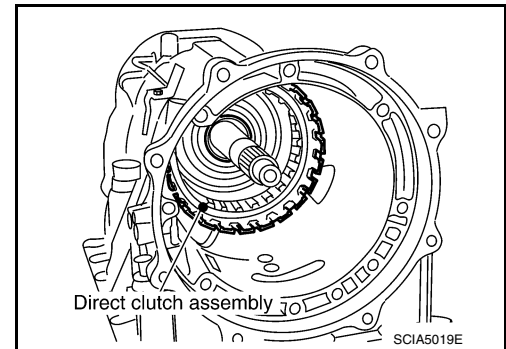


29. Install high and low reverse clutch assembly to direct clutch.

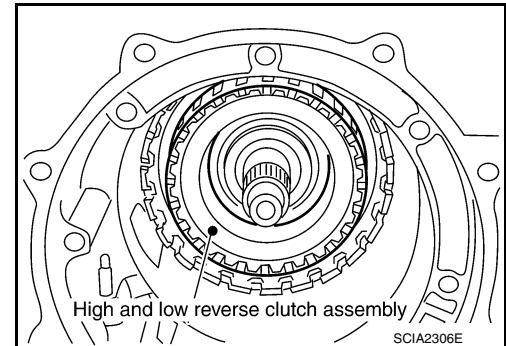

30. Align the drive plate using a flat-bladed screwdriver.

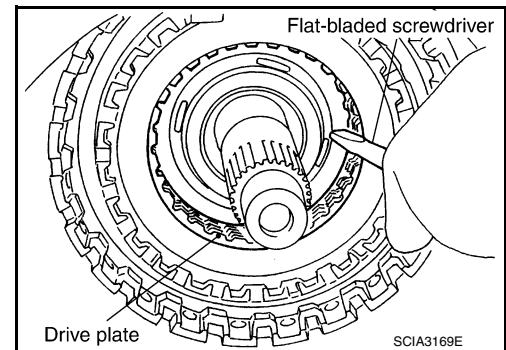

31. Install high and low reverse clutch hub, mid sun gear assembly, and rear sun gear assembly as a unit.

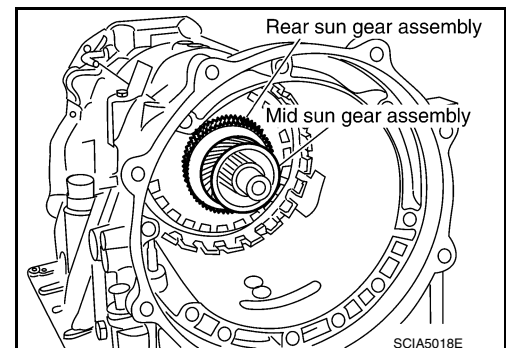

CAUTION:


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


Make sure that portion "A" of high and low reverse clutch drum protrudes approximately 2 mm (0.08 in) beyond portion "B" of rear sun gear.

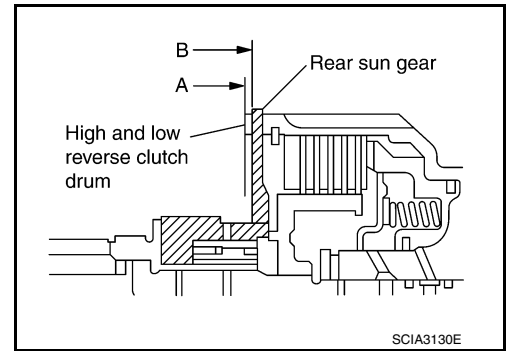

32. Install needle bearing to rear carrier assembly.

CAUTION:


Check the direction of needle bearing. Refer to [TM-228, "Location of Needle Bearings and Bearing Races"](#).

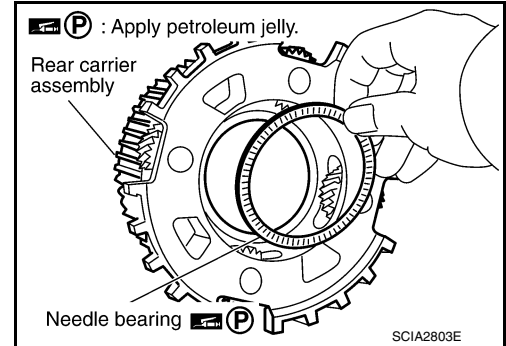


33. Install bearing race to rear carrier assembly.

CAUTION:

Check the direction of bearing race. Refer to [TM-228, "Location of Needle Bearings and Bearing Races"](#).

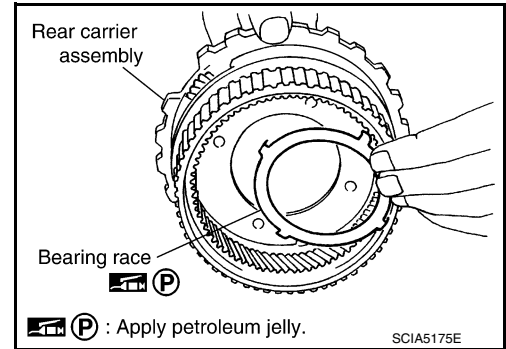


34. Install rear carrier assembly to direct clutch drum.

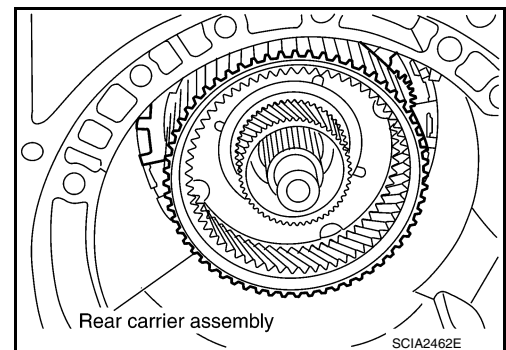

35. Install needle bearing (rear side) to mid carrier assembly.

CAUTION:

Check the direction of needle bearing. Refer to [TM-228, "Location of Needle Bearings and Bearing Races"](#).

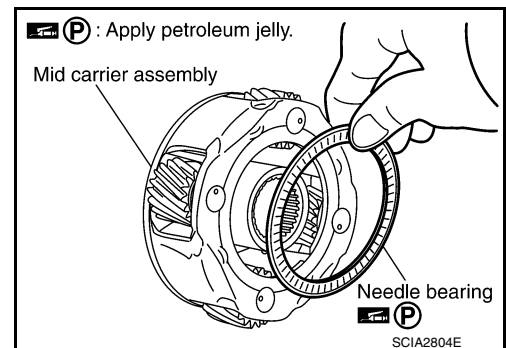

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


36. Install needle bearing (front side) to mid carrier assembly.

CAUTION:


Check the direction of needle bearing. Refer to [TM-228](#), "[Location of Needle Bearings and Bearing Races](#)".

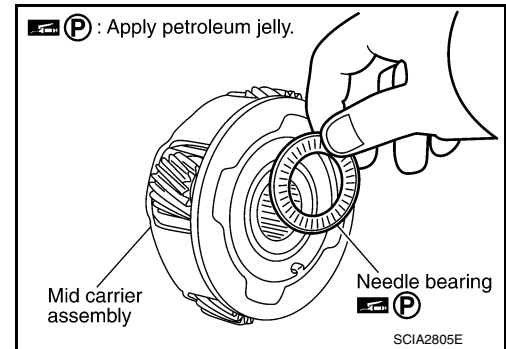

37. Install mid carrier assembly to rear carrier assembly.

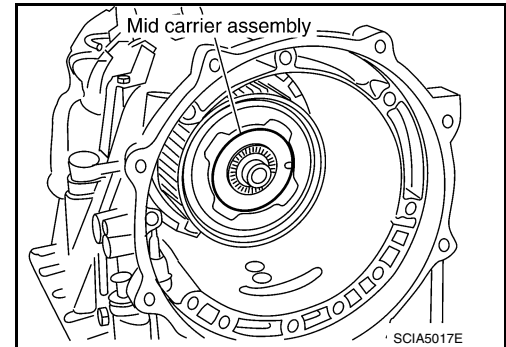


38. Install seal rings (1) to input clutch assembly.

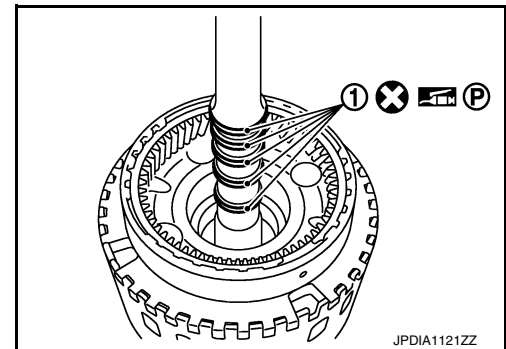

39. Install needle bearing (1) to front carrier assembly.

CAUTION:

Check the direction of needle bearing. Refer to [TM-228](#), "[Location of Needle Bearings and Bearing Races](#)".

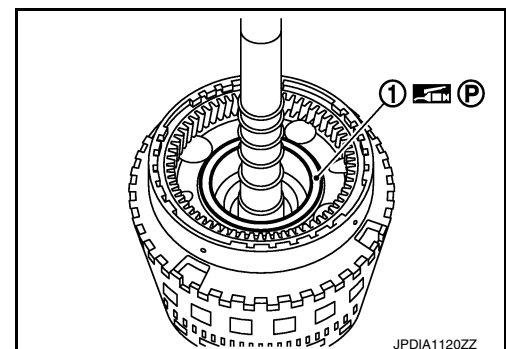

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

40. Install input clutch assembly (with front carrier assembly and rear internal gear) (1) to transmission case.

CAUTION:

Check that the needle bearing (2) is securely positioned. If the needle bearing position is misaligned, adjust it to the specified position.

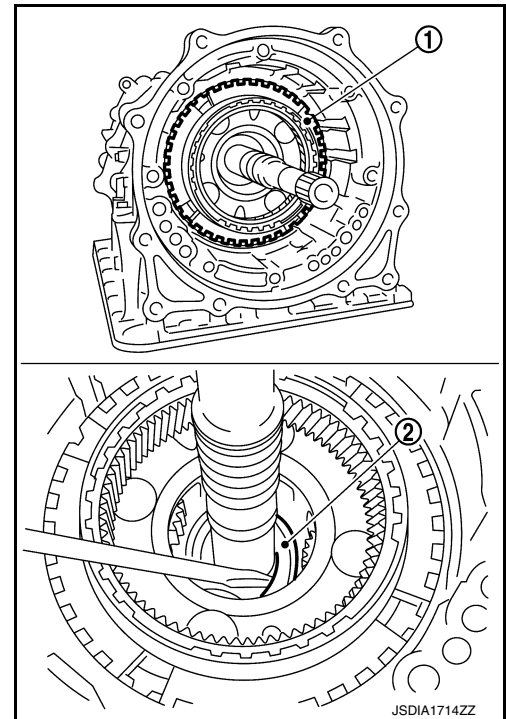


41. Install 1st one-way clutch (1) to front brake hub (with under drive carrier) (2).

42. Check operation of 1st one-way clutch.

- a. Hold 1st one-way clutch.
b. Check front brake hub for correct locking and unlocking directions.

← : Unlocked


⇐ : Locked

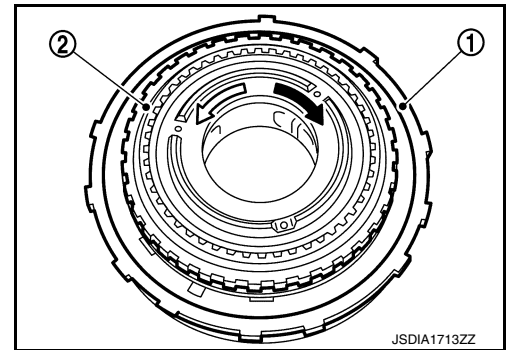

CAUTION:

If not shown in figure, check installation direction of 1st one-way clutch.

43. Install under drive carrier (with 1st one-way clutch) (1) to transmission case.

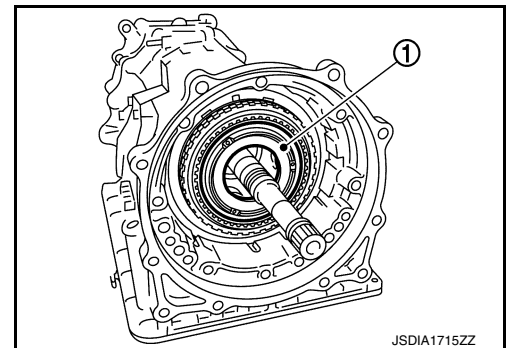

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

44. Install snap ring (1) to transmission case.

CAUTION:

Be careful not to damage snap ring.

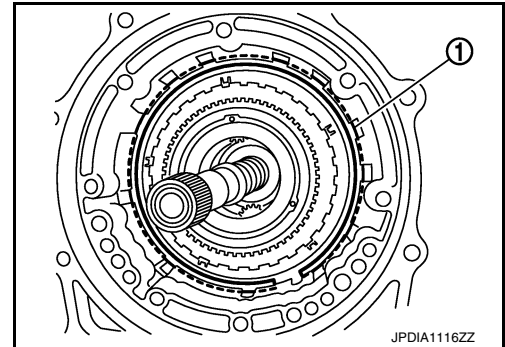

45. Install front brake component part (retaining plates, drive plates and, driven plate) to transmission case.

1 : Retaining plate (thin)

2 : Drive plate


3 : Driven plate

4 : Retaining plate (thick)

← : Front

CAUTION:


Check order of plates.

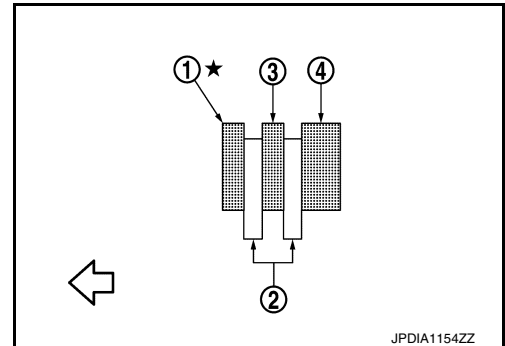


46. Install needle bearing (1) to under drive carrier assembly.

CAUTION:

Check the direction of needle bearing. Refer to [TM-228](#), "[Location of Needle Bearings and Bearing Races](#)".

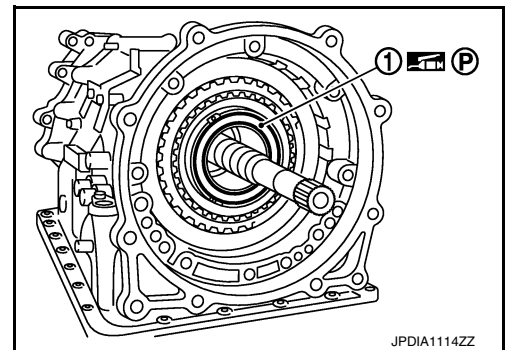


47. Install under drive sun gear (1) to under drive carrier assembly.

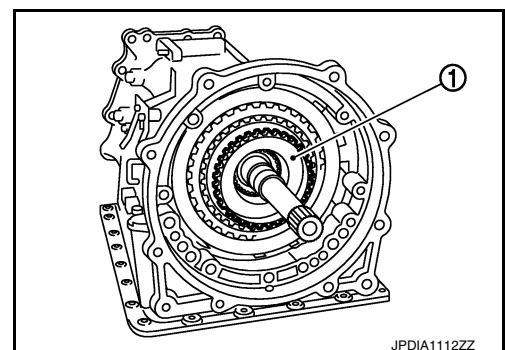

48. Adjustment of total end play "T".

- Measure clearance between bearing race (1) and oil pump cover (2).
- Select proper thickness of bearing race so that end play is within specifications.

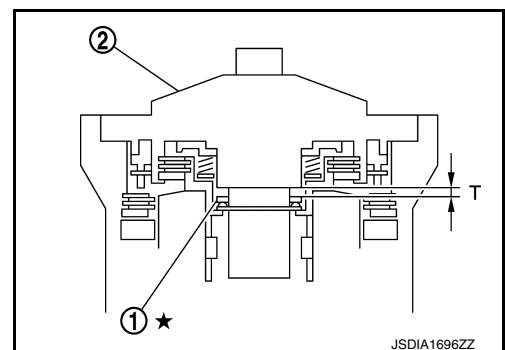

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[7AT: RE7R01A]

a. Measure dimensions “K” and “L”, and calculate dimension “J”.

- 1 : Transmission case
- 2 : Under drive sun gear
- A : Straightedge

“J” : Distance between the oil pump fitting surface of transmission case and the needle bearing mating surface of under drive sun gear.


$$J = K - L$$

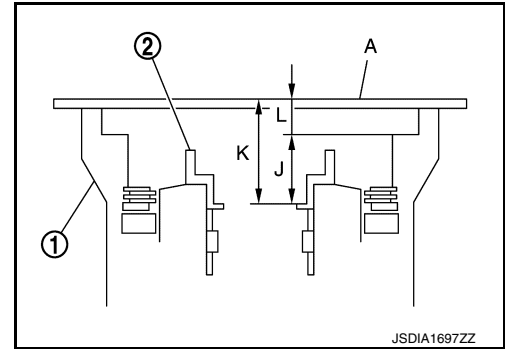

i. Measure dimension “K” between the converter housing fitting surface of transmission case (1) and the needle bearing mating surface of under drive sun gear (2).

CAUTION:

- Never change the straightedge (A) installation position before the completion of “L” measurement.
- Measure dimension “K” in at least three places, and take the average.

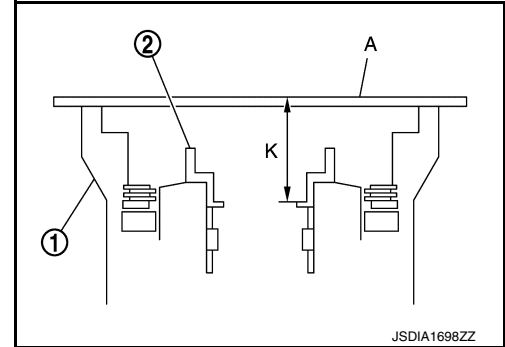

ii. Measure dimension “L” between the converter housing fitting surface of transmission case and the oil pump fitting surface of transmission case.


- 1 : Transmission case
- A : Straightedge

CAUTION:

Measure dimension “L” in at least three places, and take the average.

iii. Calculate dimension “J”.

$$J = K - L$$

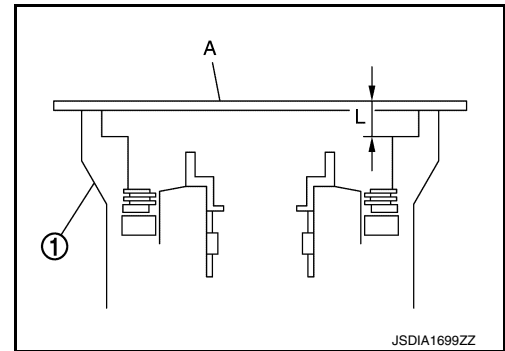


b. Measure dimensions “M1” and “M2”, and calculate dimension “M”.

- 1 : Bearing race
- 2 : Needle bearing
- 3 : Oil pump assembly
- A : Straightedge

“M” : Distance between the transmission case fitting surface of oil pump and the needle bearing on oil pump.

$$M = M1 - M2$$

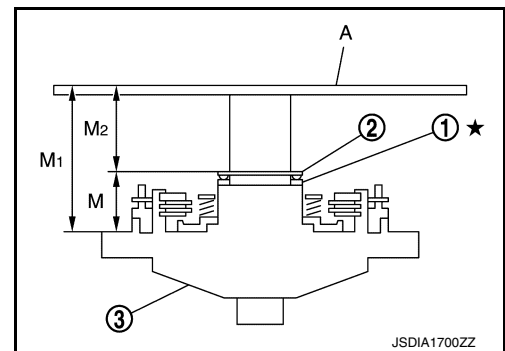


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

- i. Place bearing race (1) and needle bearing (2) on oil pump assembly (3).

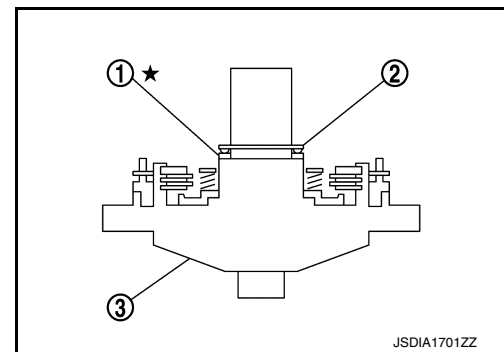


- ii. Measure dimension "M1" between the transmission case fitting surface of oil pump and the end of oil pump.

- 1 : Bearing race
- 2 : Needle bearing
- 3 : Oil pump assembly
- A : Straightedge

CAUTION:

Measure dimension "M1" in at least three places, and take the average.

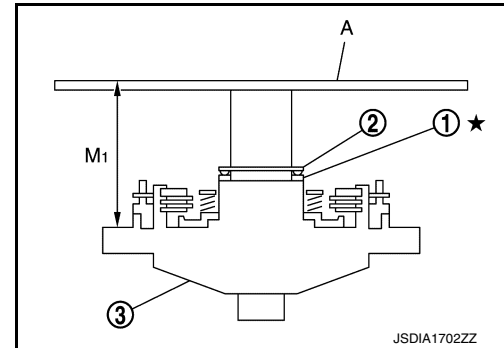


- iii. Measure dimension "M2" between the needle bearing on oil pump and the end of oil pump.

- 1 : Bearing race
- 2 : Needle bearing
- 3 : Oil pump assembly
- A : Straightedge

CAUTION:

Measure dimension "M2" in at least three places, and take the average.

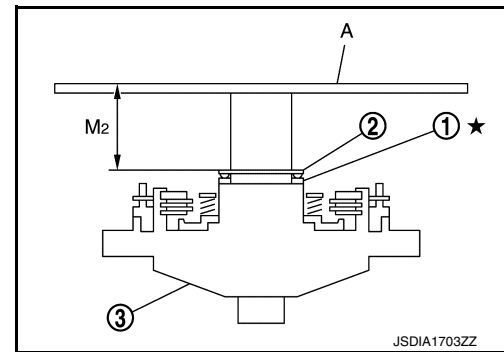

- iv. Calculate dimension "M".

$$M = M1 - M2$$

- c. Adjust total end play "T".


- 1 : Bearing race
- 2 : Oil pump assembly

$$T = J - M$$

Total end play "T" : Refer to [TM-303, "Total End Play"](#).

- Select proper thickness of bearing race so that total end play is within specifications.

Bearing races : Refer to [TM-303, "Total End Play"](#).

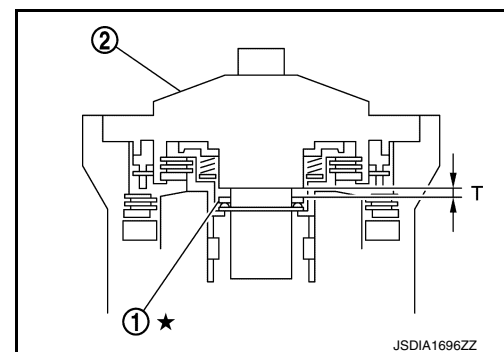

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

49. Adjustment of front brake clearance "C".

- Measure clearance between front brake piston (1) and front brake retaining plate (2).
- Select proper thickness of front brake retaining plate so that clearance is within specifications.

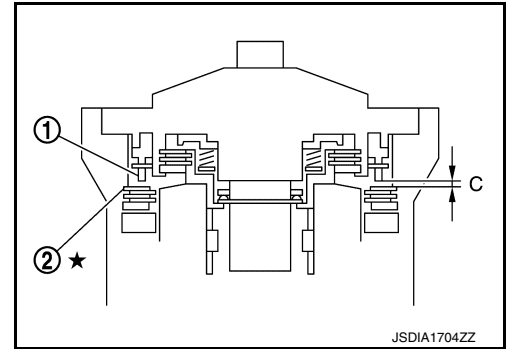


a. Measure dimensions "O" and "P", and calculate dimension "N".

- 1 : Transmission case
- 2 : Front brake retaining plate
- A : Straightedge

"N" : Distance between the oil pump fitting surface of transmission case and the front brake retaining plate.


$$N = O - P$$

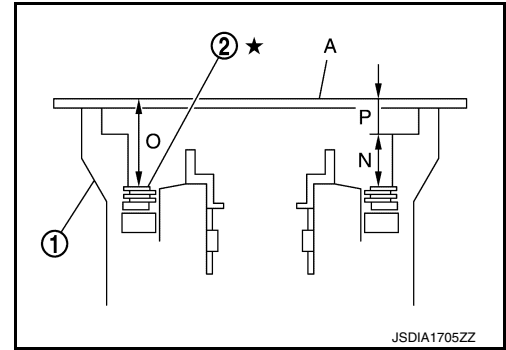

i. Measure dimension "O" between the converter housing fitting surface of transmission case (1) and the front brake retaining plate (2).

CAUTION:

- Never change the straightedge (A) installation position before the completion of "P" measurement.
- Measure dimension "O" in at least three places, and take the average.

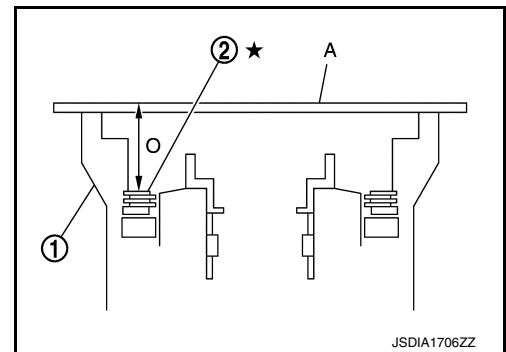


ii. Measure dimension "P" between the converter housing fitting surface of transmission case and the oil pump fitting surface of transmission case.

- 1 : Transmission case
- A : Straightedge

CAUTION:

Measure dimension "P" in at least three places, and take the average.

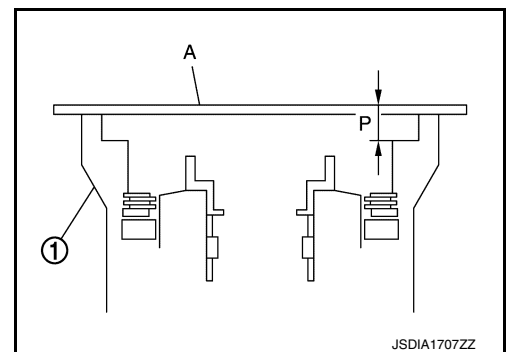

iii. Calculate dimension "N".

$$N = O - P$$

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >


[7AT: RE7R01A]

b. Measure dimensions "Q1" and "Q2", and calculate dimension "Q".

- 1 : Front brake piston
- 2 : Oil pump assembly
- A : Straightedge

"Q" : Distance between the transmission case fitting surface of oil pump and the front brake piston.

$$Q = Q1 - Q2$$

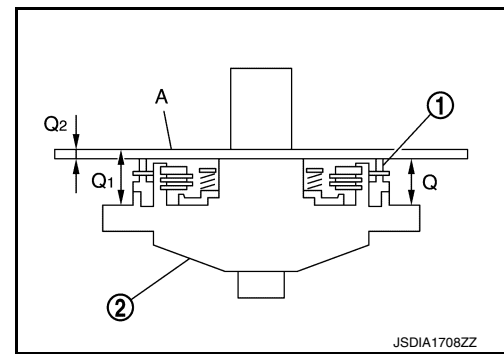


i. Measure dimension "Q1" between the transmission case fitting surface of oil pump and the straightedge on front brake piston.

- 1 : Front brake piston
- 2 : Oil pump assembly
- A : Straightedge

CAUTION:

Measure dimension "Q1" in at least three places, and take the average.

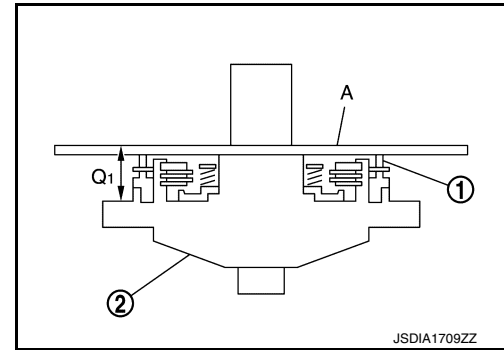


ii. Measure dimension "Q2" of the straightedge.

- 1 : Front brake piston
- 2 : Oil pump assembly
- A : Straightedge

iii. Calculate dimension "Q".

$$Q = Q1 - Q2$$

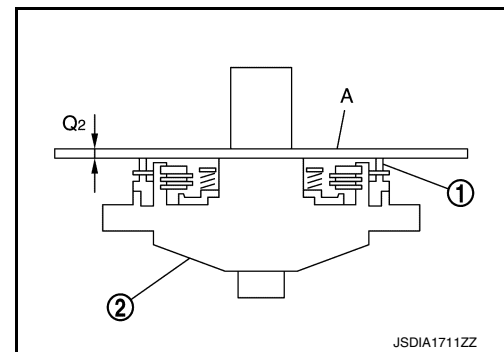

c. Adjust front brake clearance "C".


- 1 : Front brake piston
- 2 : Front brake retaining plate

$$C = N - Q$$

Front brake clearance "C" : Refer to [TM-303, "Front Brake Clearance"](#).

- Select proper thickness of front brake retaining plate so that front brake clearance is within specifications.

Retaining plate : Refer to [TM-303, "Front Brake Clearance"](#).

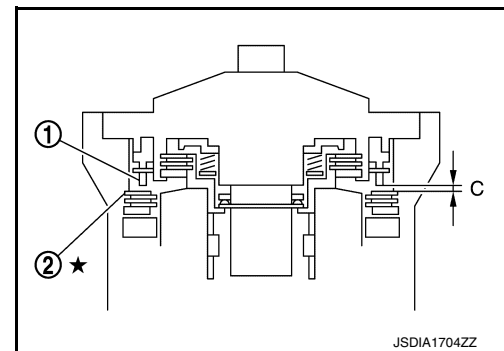


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


50. Remove under drive sun gear (1) from under drive carrier assembly.

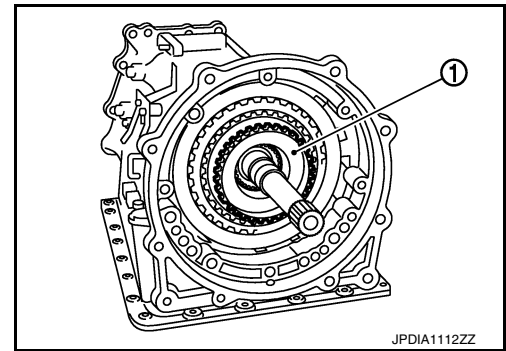


51. Install needle bearing (1) to under drive sun gear.

CAUTION:


Check the direction of needle bearing. Refer to [TM-228](#), "[Location of Needle Bearings and Bearing Races](#)".

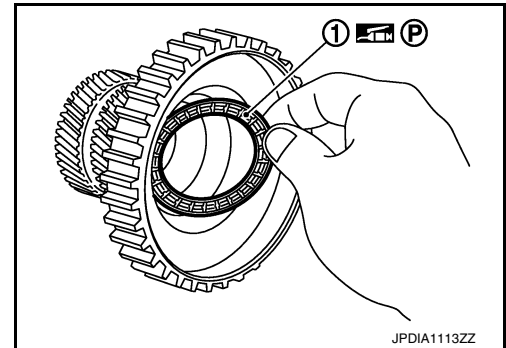


52. Install O-ring (1) to oil pump assembly.

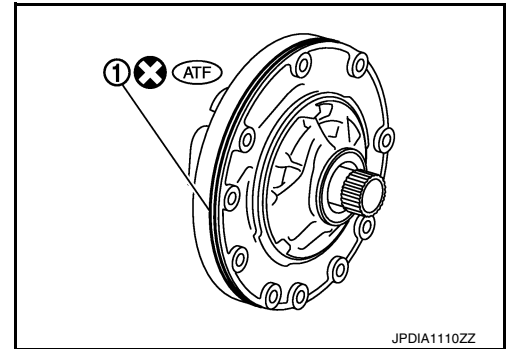

53. Install seal ring (1) to oil pump assembly.

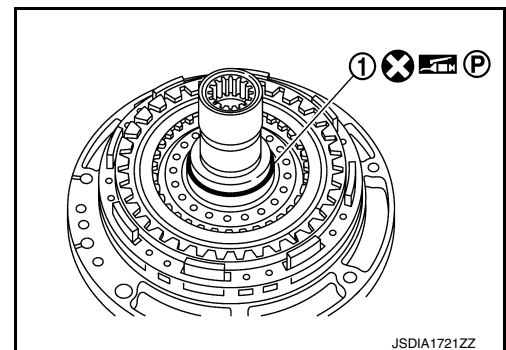

54. Install bearing race (1) to oil pump assembly.

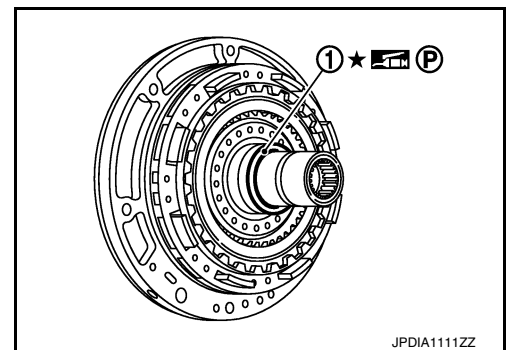


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


55. Install under drive sun gear (with needle bearing) (1) to oil pump assembly (2).

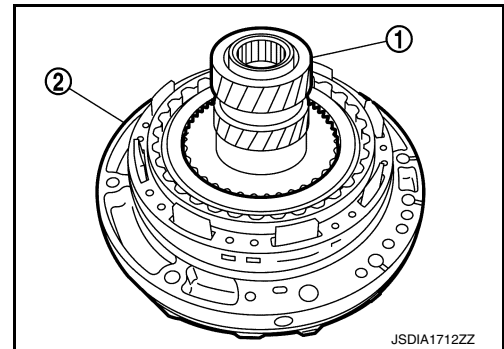

56. Install oil pump assembly (with under drive sun gear) to transmission case.

CAUTION:

Apply ATF to oil pump bearing.

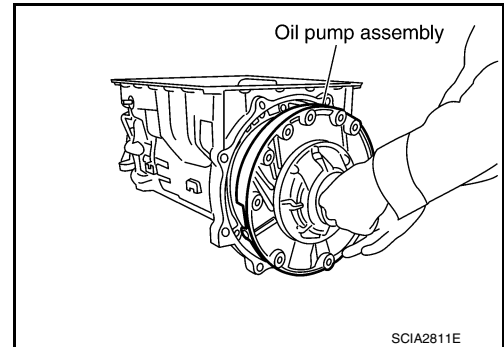


57. Apply recommended sealant to oil pump assembly as shown in the figure.


Use Genuine RTV Silicone Sealant or an equivalent. Refer to [GI-22, "Recommended Chemical Products and Sealants"](#).

CAUTION:


Completely remove all moisture, oil and old sealant, etc. from the oil pump mounting bolts and oil pump mounting bolt mounting surfaces.

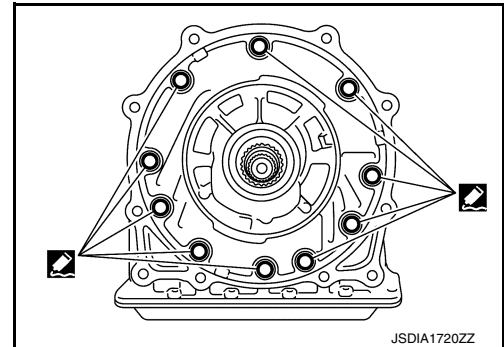

58. Tighten oil pump bolts (↩) to the specified torque.

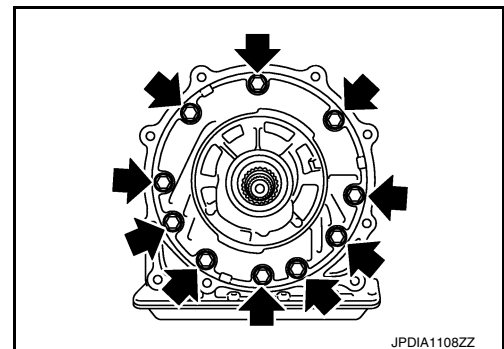

59. Install O-ring to input clutch assembly.

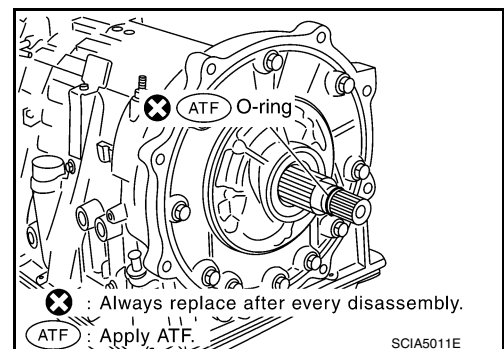


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


60. Install converter housing to transmission case, and tighten converter housing bolts (⬅) to the specified torque.

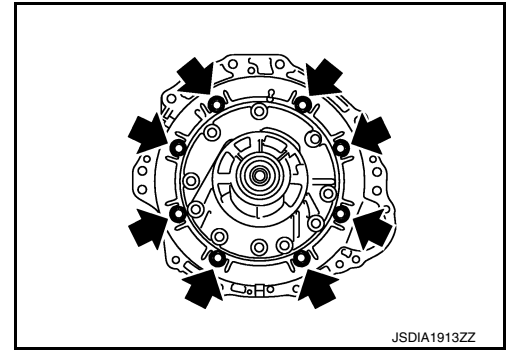


61. Connect TCM connector (A) to joint connector.

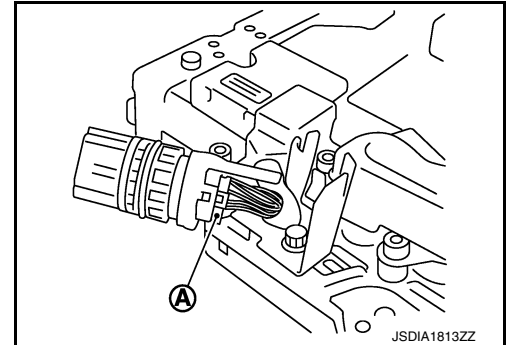

62. Install joint connector (1) to the control valve & TCM.
CAUTION:
Apply ATF to O-ring of joint connector.

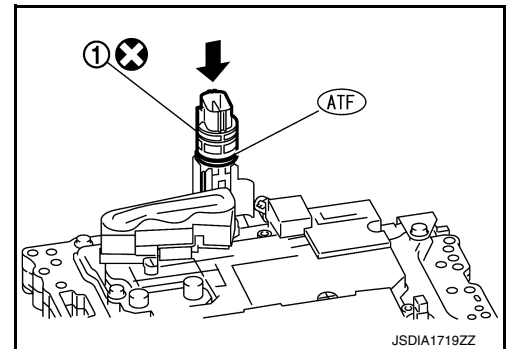

63. Install the control valve & TCM (1) to transmission case.

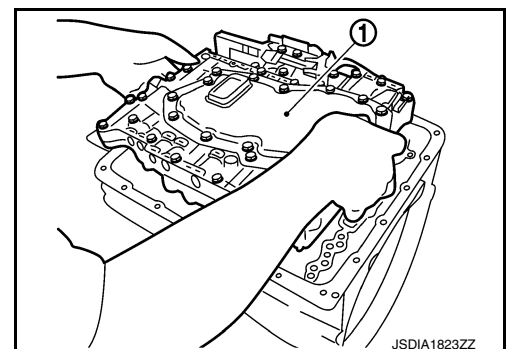


CAUTION:

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

- Make sure that input speed sensor securely installs input speed sensor holes (A).
- Hang down output speed sensor harness toward outside so as not to disturb installation of the control valve & TCM.
- Adjust joint connector of the control valve & TCM to terminal hole of transmission case.

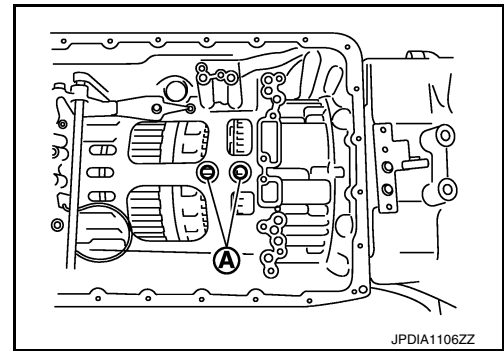

- Assemble it so that manual valve cutout is engaged with manual plate projection.

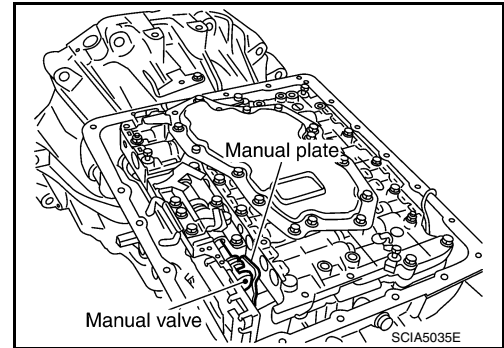


64. Install bolts and clip (1) to the control valve & TCM. Tighten bolt (E) to the specified torque before tightening the other than bolts.

← : Front


Bolt symbol	Length mm (in)	Number of bolts
A	43 (1.69)	3
B	40 (1.57)	2
C	54 (2.13)	6
D	50 (1.97)	2
E*	50 (1.97)	1

*: Reamer bolt

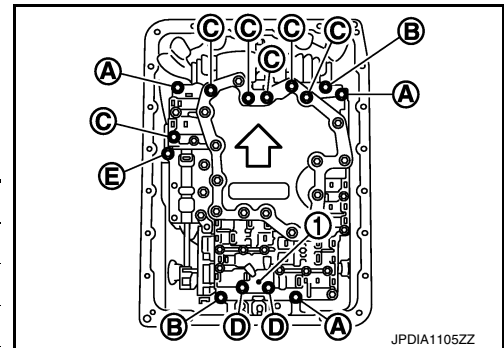

65. Connect output speed sensor connector (A).

66. Engage output speed sensor harness with terminal clips (◀▶).

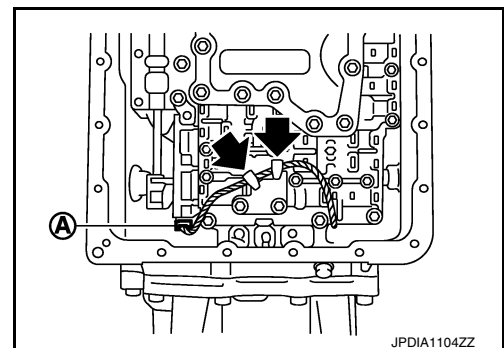

TRANSMISSION ASSEMBLY


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


67. Pull down joint connector (1).

CAUTION:

Be careful not to damage connector.

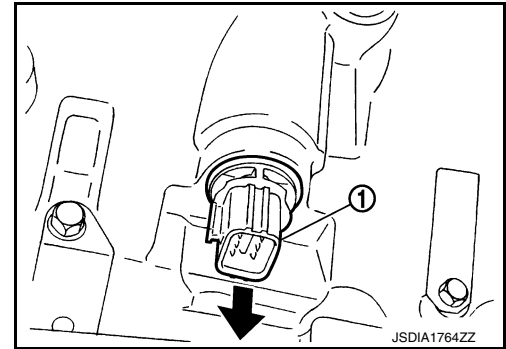

68. Install snap ring (1) to joint connector (2).

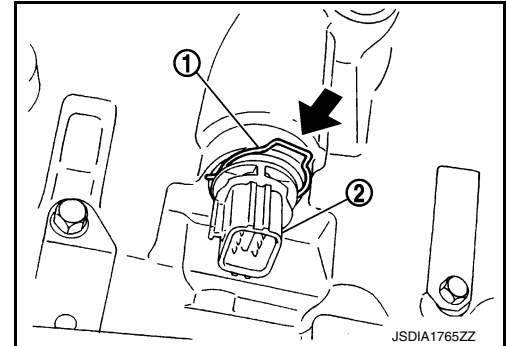


69. Install magnets (1) in oil pan.

70. Install oil pan gasket to transmission case.

CAUTION:

- Never reuse oil pan gasket.
- Install it in the direction to align hole positions.
- Completely remove all moisture, oil and old gasket, etc. from oil pan gasket mounting surface.

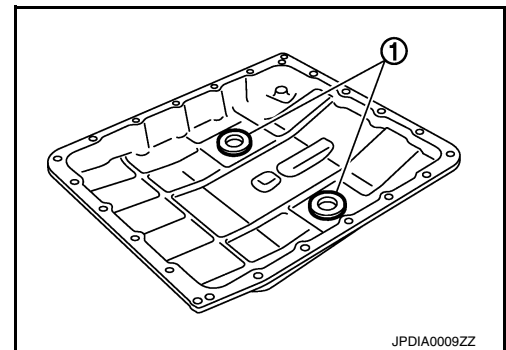


71. Install oil pan (2) and clips (1) to transmission case.

⇐ : Front

◀ : Oil pan mounting bolt

CAUTION:

- Be careful not to pinch harnesses.
- Completely remove all moisture, oil and old gasket, etc. from oil pan mounting surface.

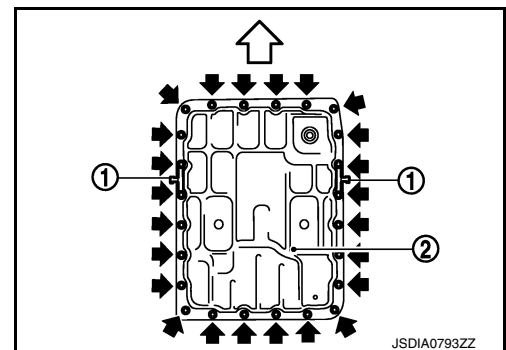

72. Tighten oil pan mounting bolts to the specified torque in numerical order shown in the figure after temporarily tightening them. Tighten oil pan mounting bolts to the specified torque.

⇐ : Front


CAUTION:

Never reuse oil pan mounting bolts.

73. Install drain plug and drain plug gasket to oil pan. Tighten drain plug to the specified torque.

CAUTION:

Never reuse drain plug and drain plug gasket.

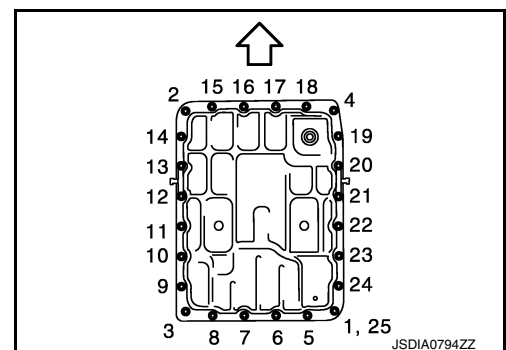


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

74. Pour ATF into torque converter.


- **Approximately 2 liter (2-1/8 US qt, 1-3/4 Imp qt) of ATF is required for a new torque converter.**
- **When reusing old torque converter, add the same amount of ATF as was drained.**

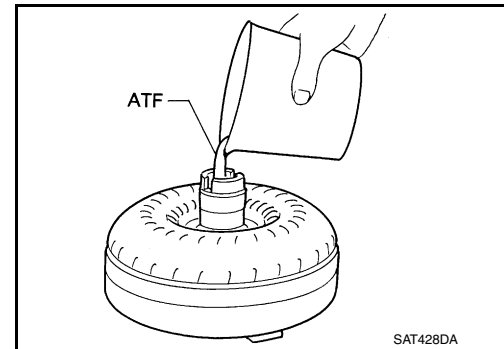

75. Install torque converter while aligning notches of torque converter with notches of oil pump.

CAUTION:


Install torque converter while rotating it.

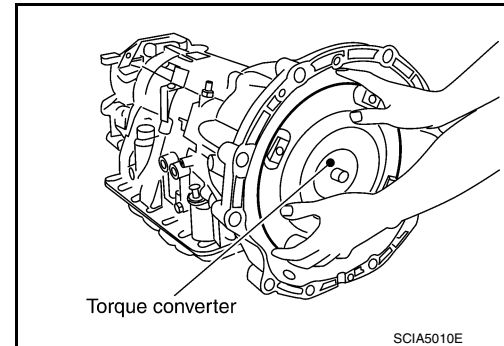

76. Measure dimension (A) to make sure that torque converter is in proper position.

- B : Scale
- C : Straightedge

Dimension (A) : Refer to [TM-303, "Torque Converter"](#).

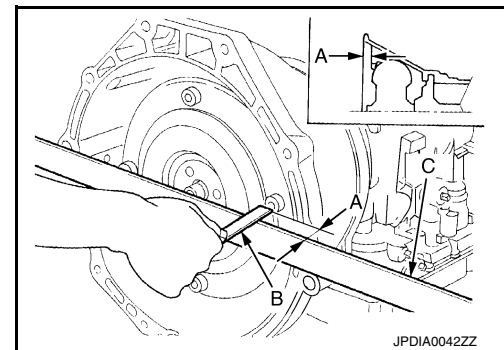

Inspection


INFOID:000000012167668

INSPECTION AFTER DISASSEMBLY

Oil Pan

Check foreign materials in oil pan to help determine causes of malfunction. If the ATF is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up. Varnish can cause valves, servo, and clutches to stick and can inhibit pump pressure.

- **If frictional material is detected, replace radiator after repair of A/T. Refer to [CO-14, "Removal and Installation"](#).**

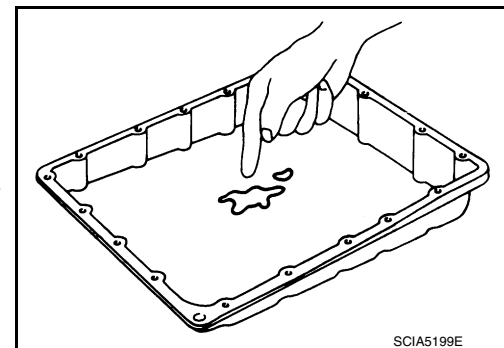

Torque Converter


TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

Check torque converter one-way clutch using a check tool as shown at figure.

1. Insert a check tool into the groove of bearing support built into one-way clutch outer race.
2. When fixing bearing support with a check tool, rotate one-way clutch spline using a screwdriver.
3. Make sure that inner race rotates clockwise only. If not, replace torque converter assembly.

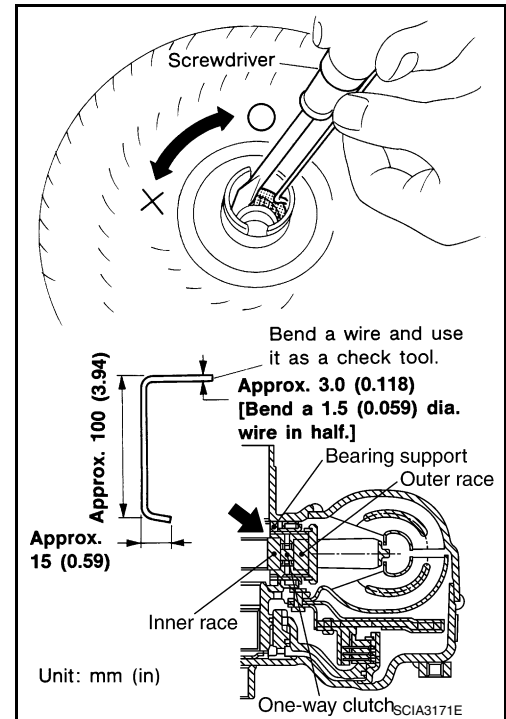


1st One-way Clutch

Check operation of 1st one-way clutch.

1. Install 1st one-way clutch (1) to front brake hub (with under drive carrier).
2. Hold 1st one-way clutch.
3. Check front brake hub for correct locking and unlocking directions. If necessary, replace 1st one-way clutch.

← : Unlocked

↶ : Locked

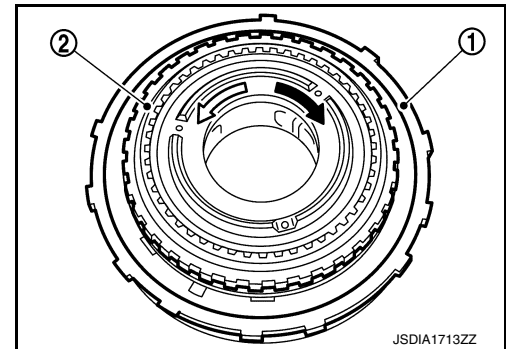

Under Drive Sun Gear

Check for deformation, fatigue or damage. If necessary, replace the under drive sun gear.

Mid Carrier Assembly

Check for deformation, fatigue or damage. If necessary, replace the mid carrier assembly.

Rear Carrier Assembly

Check for deformation, fatigue or damage. If necessary, replace the rear carrier assembly.

Reverse Brake Retaining Plate/Drive Plates/Driven Plates/Dish Plates

Check facing for burns, cracks or damage. If necessary, replace the damaged plate.

Front Brake Retaining Plates/Drive Plates/Driven Plate

Check facing for burns, cracks or damage. If necessary, replace the damaged plate.

Each Snap Ring

Check for deformation, fatigue or damage. If necessary, replace the snap ring.


Parking Actuator Support and Parking Pawl

TRANSMISSION ASSEMBLY

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

If the contact surface on parking actuator support (1) and parking pawl (2) has excessive wear, abrasion, bend or any other damage, replace the components.

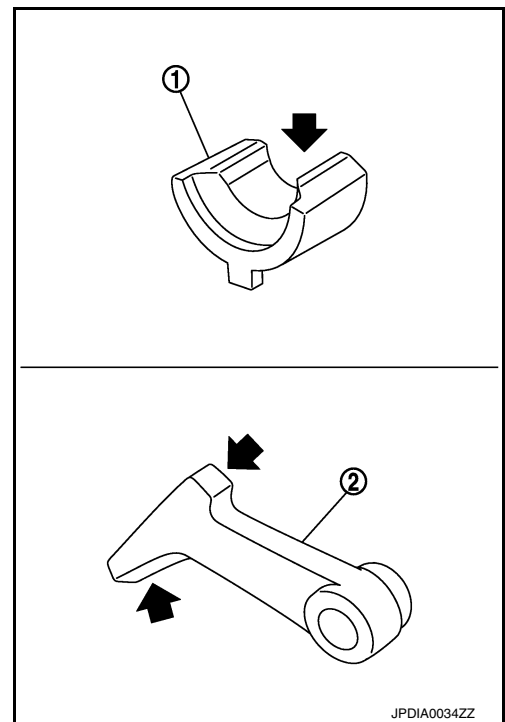

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

OIL PUMP, 2346 BRAKE, FRONT BRAKE PISTON


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

OIL PUMP, 2346 BRAKE, FRONT BRAKE PISTON

Exploded View

INFOID:000000012167669

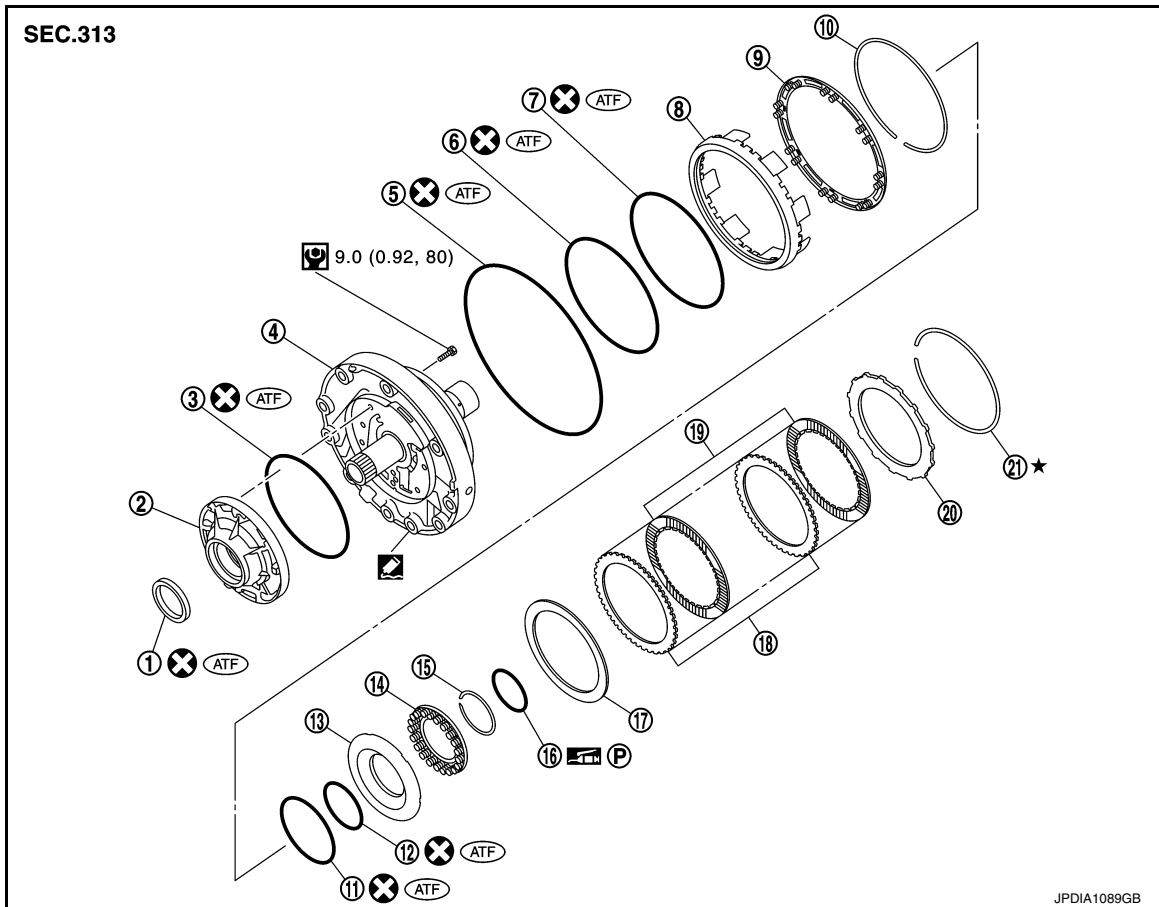

- | | | |
|------------------------------|--------------------------------|--------------------------------|
| 1. Oil pump housing oil seal | 2. Oil pump housing | 3. O-ring |
| 4. Oil pump cover | 5. O-ring | 6. D-ring |
| 7. D-ring | 8. Front brake piston | 9. Front brake spring retainer |
| 10. Snap ring | 11. D-ring | 12. D-ring |
| 13. 2346 brake piston | 14. 2346 brake spring retainer | 15. Snap ring |
| 16. Seal ring | 17. 2346 brake dish plate | 18. 2346 brake driven plate |
| 19. 2346 brake drive plate | 20. 2346 brake retaining plate | 21. Snap ring |

: Apply Genuine RTV silicone sealant or equivalent. Refer to [GI-22. "Recommended Chemical Products and Sealants"](#).

Refer to [GI-4. "Components"](#) for symbols not described on the above.


Disassembly

INFOID:000000012167670

1. Remove snap ring (1) from oil pump assembly using a flat-bladed screwdriver (A).

CAUTION:

- Be careful not to scratch oil pump cover and 2346 brake retaining plate.
- Be careful not to damage snap ring.

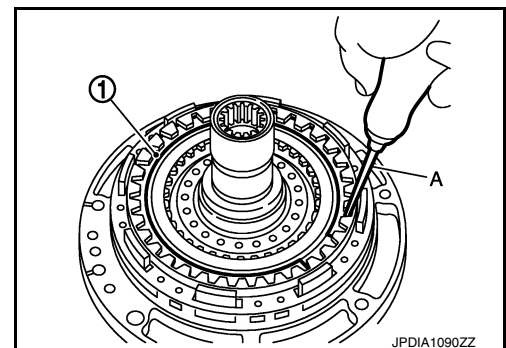


JPDIA1090ZZ

OIL PUMP, 2346 BRAKE, FRONT BRAKE PISTON


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

2. Remove 2346 brake component part (retaining plate, drive plate, driven plate and dish plate) (1) from oil pump assembly.

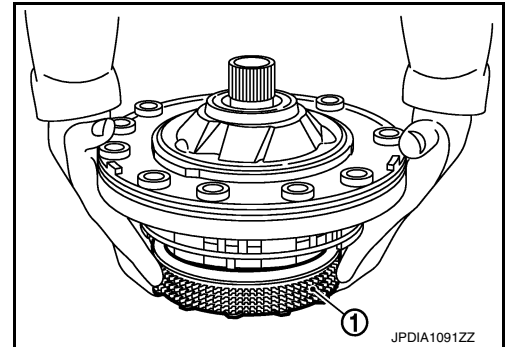


3. Remove seal ring (1) from oil pump assembly.

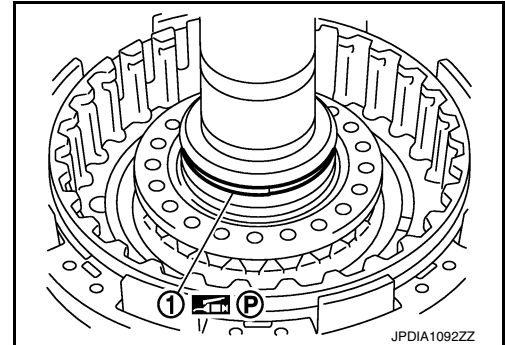


4. Set the clutch spring compressor [SST: KV31103800 (—)] (A) on front brake spring retainer and remove snap ring (fixing front brake spring retainer) (1) from oil pump assembly while compressing return spring.

CAUTION:

Be careful not to expand snap ring excessively.

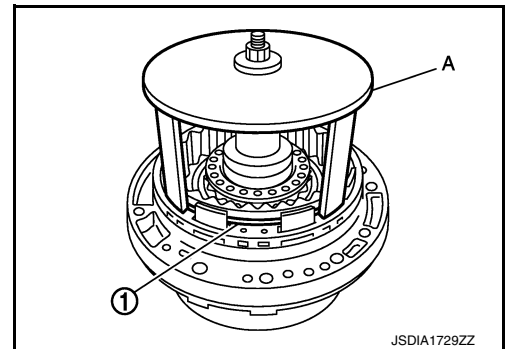

5. Remove front brake spring retainer (1) from oil pump assembly.

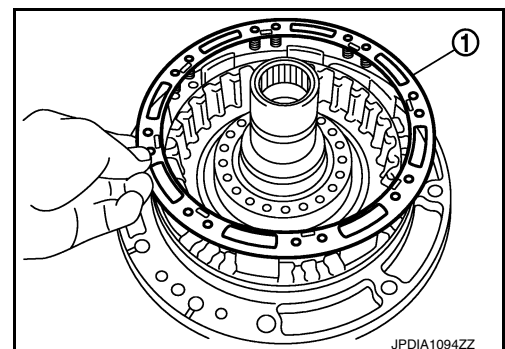


6. Set the clutch spring compressor [SST: KV31102400 (J-34285 and J-34285-87)] (A) on 2346 brake spring retainer and remove snap ring (fixing 2346 brake spring retainer) (1) from oil pump assembly while compressing return spring.

B : Press

CAUTION:

Be careful not to expand snap ring excessively.

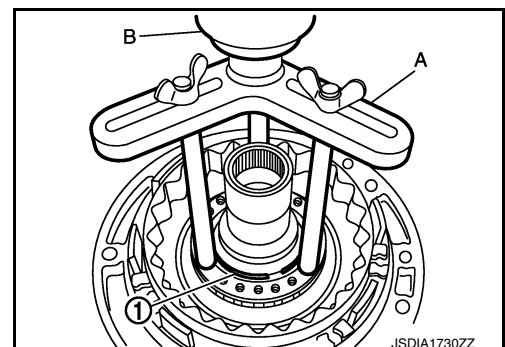


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

OIL PUMP, 2346 BRAKE, FRONT BRAKE PISTON

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

7. Remove 2346 brake spring retainer (1) from oil pump assembly.


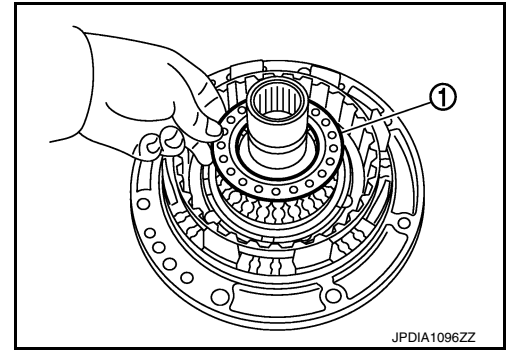


8. Remove front brake piston (1) from oil pump assembly with compressed air. Refer to [TM-228, "Oil Channel"](#).


A : Front brake pressure hole

CAUTION:

Care should be taken not to abruptly blow air. It makes piston incline, as the result, it becomes hard to disassemble the piston.

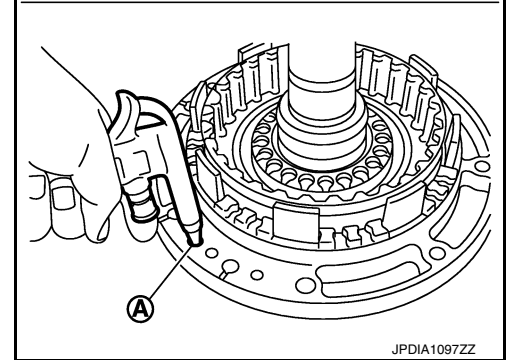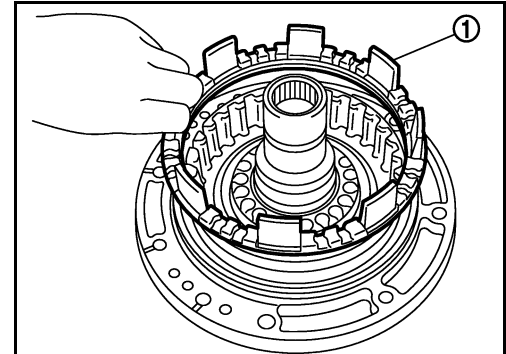

9. Remove D-ring (inner) (1) and D-ring (outer) (2) from front brake piston.

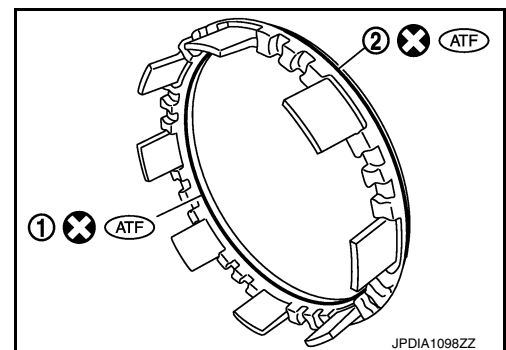

OIL PUMP, 2346 BRAKE, FRONT BRAKE PISTON

< UNIT DISASSEMBLY AND ASSEMBLY >


[7AT: RE7R01A]

10. Remove 2346 brake piston (1) from oil pump assembly with compressed air. Refer to [TM-228, "Oil Channel"](#).


A : 2346 brake pressure hole

CAUTION:


Care should be taken not to abruptly blow air. It makes piston incline, as the result, it becomes hard to disassemble the piston.

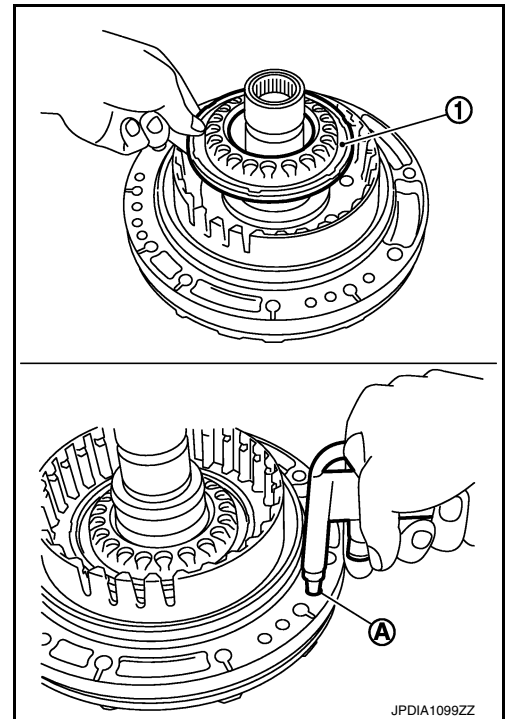

11. Remove D-ring (large) (1) and D-ring (small) (2) from 2346 brake piston.

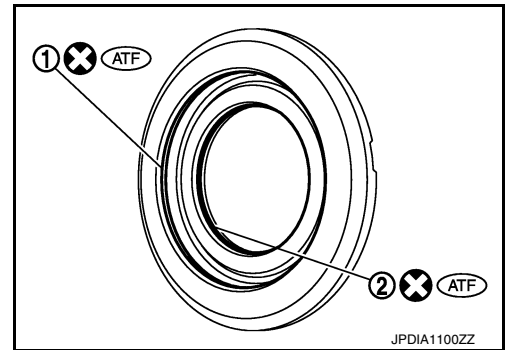


12. Loosen bolts (↔) in numerical order shown in the figure and remove oil pump housing from oil pump cover.

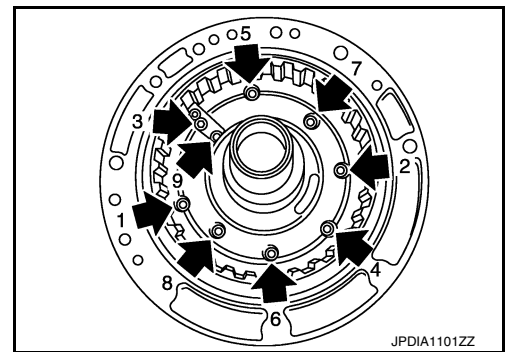

13. Remove oil pump housing oil seal using a flat-bladed screwdriver.

CAUTION:

Be careful not to scratch oil pump housing.

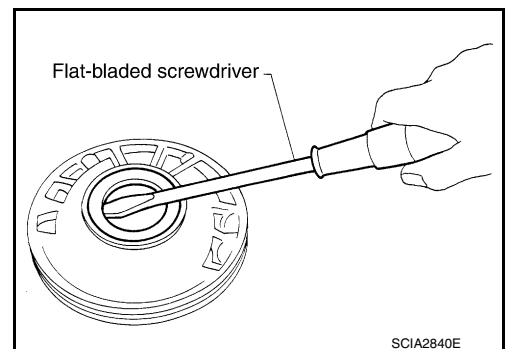


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

OIL PUMP, 2346 BRAKE, FRONT BRAKE PISTON


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

14. Remove O-ring from oil pump housing.

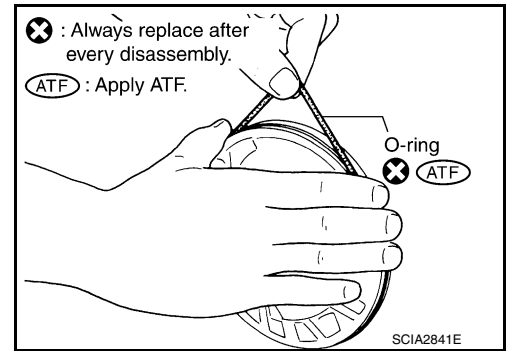


15. Remove O-ring (1) from oil pump cover.

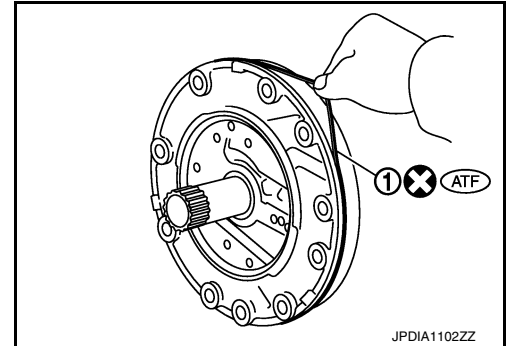


INFOID:000000012167671

Assembly

1. Install O-ring (1) to oil pump cover.

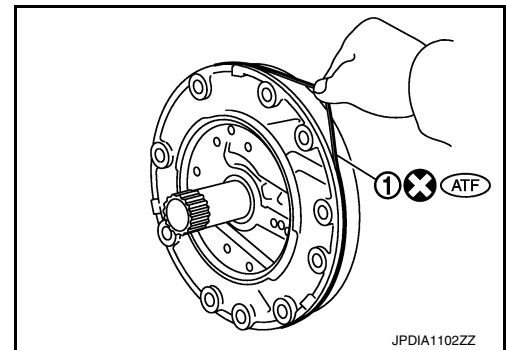

2. Install O-ring to oil pump housing.

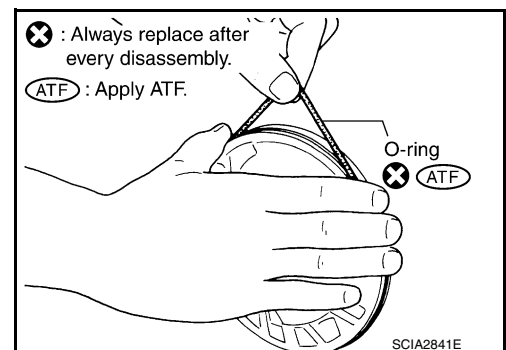

OIL PUMP, 2346 BRAKE, FRONT BRAKE PISTON


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


3. Using the drift (SST), install oil pump housing oil seal to the oil pump housing until it is flush.

CAUTION:


- Never reuse oil seal.
- Apply ATF to oil seal.

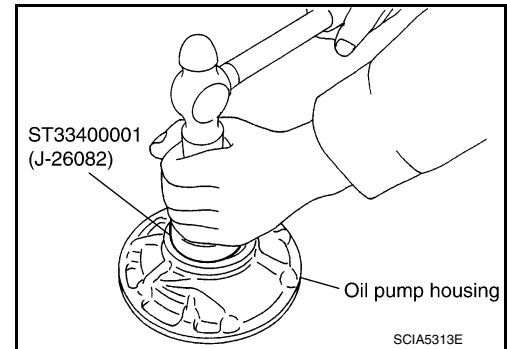


4. Install oil pump housing to oil pump cover and tighten bolts (←) to the specified torque in numerical order shown in the figure after temporarily tightening them.

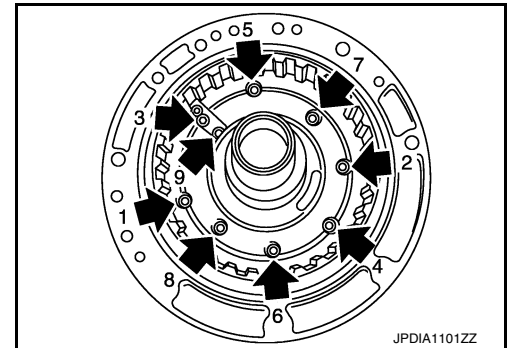


5. Install D-ring (large) (1) and D-ring (small) (2) to 2346 brake piston.

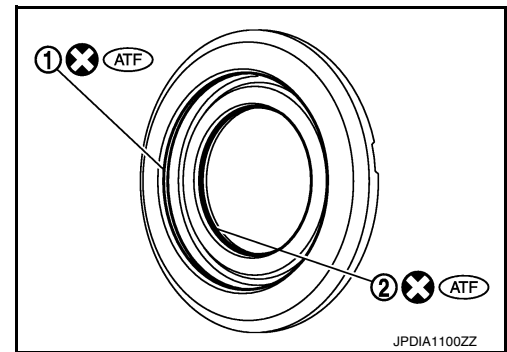

6. Install 2346 brake piston (1) to oil pump assembly.

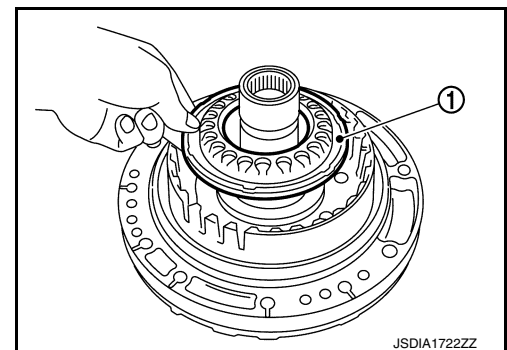

7. Install D-ring (inner) (1) and D-ring (outer) (2) to front brake piston.

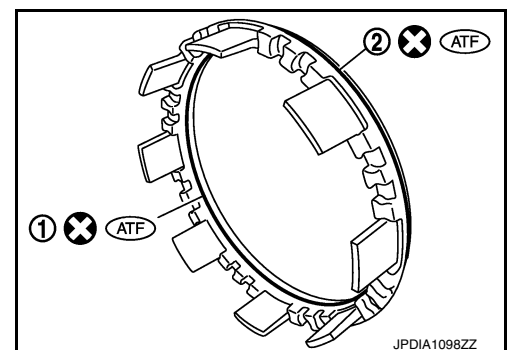


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

OIL PUMP, 2346 BRAKE, FRONT BRAKE PISTON


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

8. Install front brake piston (1) to oil pump assembly.

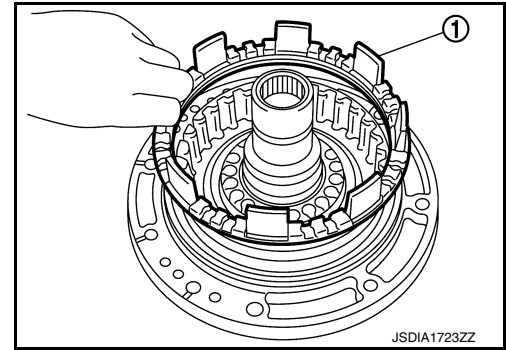


9. Install 2346 brake spring retainer (1) to oil pump assembly.

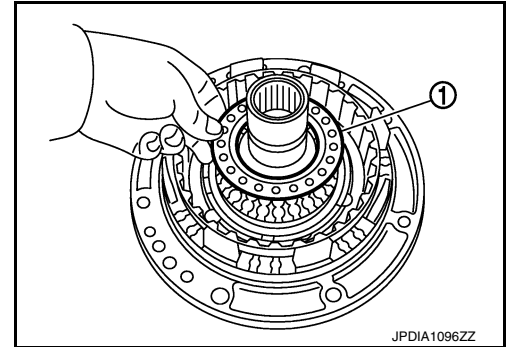


10. Set the clutch spring compressor [SST: KV31102400 (J-34285 and J-34285-87)] (A) on 2346 brake spring retainer and install snap ring (fixing 2346 brake spring retainer) (1) to oil pump assembly while compressing return spring.

B : Press

CAUTION:
Be careful not to expand snap ring excessively.

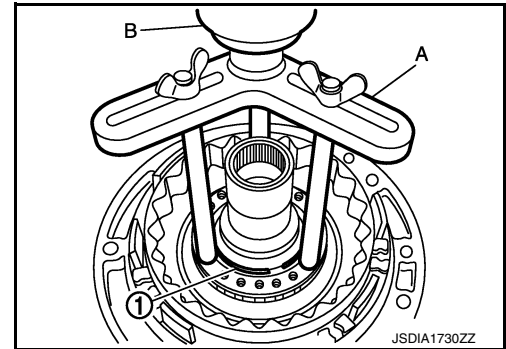


11. Install front brake spring retainer (1) to oil pump assembly.

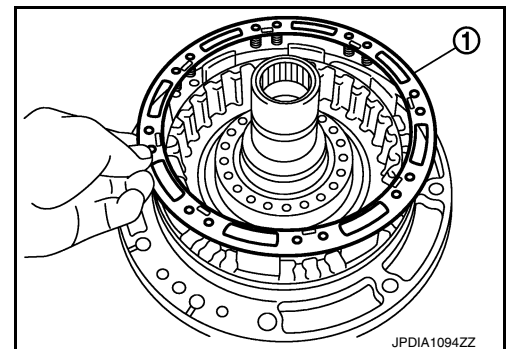

12. Set the clutch spring compressor [SST: KV31103800 (—)] (A) on front brake spring retainer and install snap ring (fixing front brake spring retainer) (1) to oil pump assembly while compressing return spring.

CAUTION:
Be careful not to expand snap ring excessively.

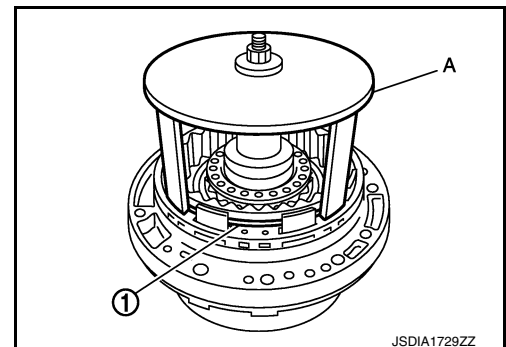


OIL PUMP, 2346 BRAKE, FRONT BRAKE PISTON

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


13. Install seal ring (1) to oil pump assembly.

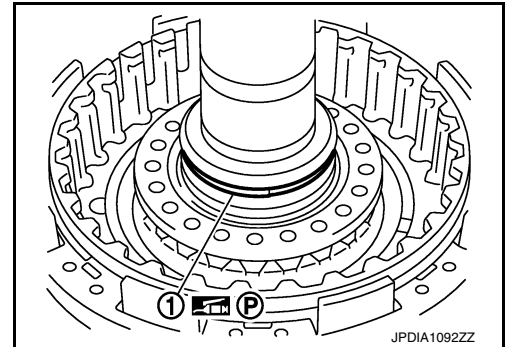

14. Install 2346 brake component part (retaining plate, drive plates, driven plates, dish plate and snap ring) to oil pump assembly.


- 1 : Dish plate
- 2 : Driven plate (four pieces)
- 3 : Drive plate (four pieces)
- 4 : Retaining plate
- 5 : Snap ring

CAUTION:
Check the order of plates.

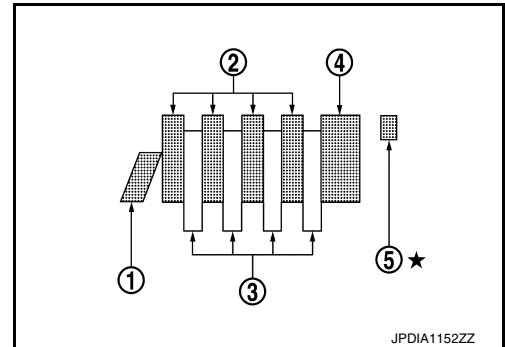


15. Install snap ring (1) from oil pump assembly using a flat-bladed screwdriver (A).

- CAUTION:**
- Be careful not to scratch oil pump cover and 2346 brake retaining plate.
 - Be careful not to damage snap ring.

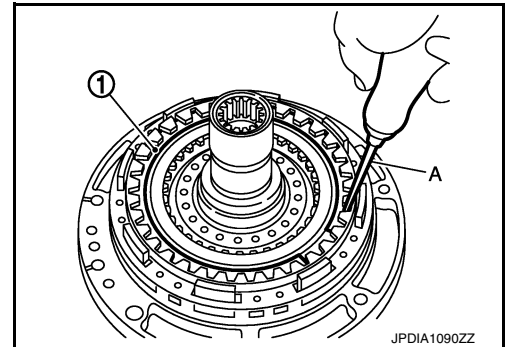

- Never install snap ring mating part (A) to the clearance groove [(B) shown in the figure] of oil pump cover.

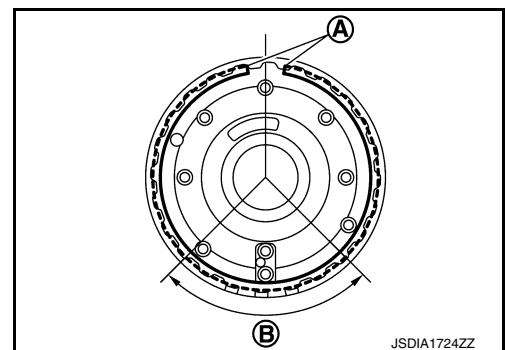

Inspection and Adjustment

INFOID:000000012167672

INSPECTION AFTER DISASSEMBLY

Each Snap Ring

Check for deformation, fatigue or damage. If necessary, replace snap ring.

Each Spring Retainer

Check for deformation, fatigue or damage. If necessary, replace spring retainer.

2346 Brake Retaining Plate/Drive Plates/Driven Plates/Dish Plate

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

OIL PUMP, 2346 BRAKE, FRONT BRAKE PISTON

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

Check facing for burns, cracks or damage. If necessary, replace the damaged plate.

ADJUSTMENT AFTER ASSEMBLY

2346 Brake Clearance


Set a dial indicator (A) as shown in the figure. Blow air into 2346 brake oil pressure hole (B), and measure 2346 brake clearance. If clearance is outside the specified value, adjust clearance by selecting an appropriate snap ring (1). Refer to [TM-228, "Oil Channel"](#).

Air pressure : 300 kPa (3.06 kg/cm², 43.5 psi)

2346 brake clearance : Refer to [TM-303, "2346 Brake Clearance"](#).

CAUTION:

Never exceed the specified air pressure value.

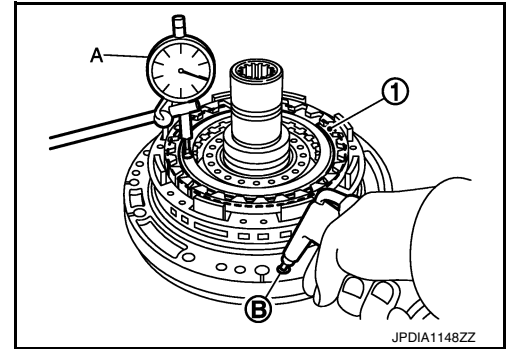

UNDER DRIVE CARRIER, FRONT BRAKE HUB


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

3. Remove snap ring (1) from front brake hub using a flat-bladed screwdriver.

CAUTION:

- Be careful not to scratch front brake hub.
- Be careful not to damage snap ring.

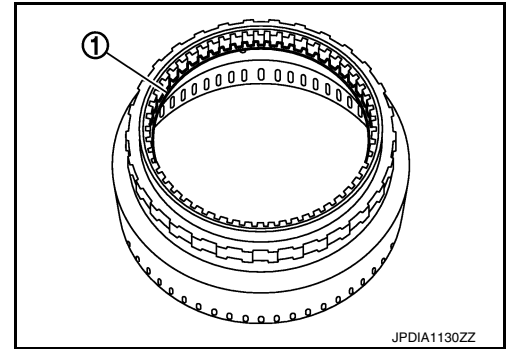


Assembly

INFOID:000000012167675


1. Install snap ring (1) to front brake hub.

CAUTION:

- Be careful not to damage snap ring.

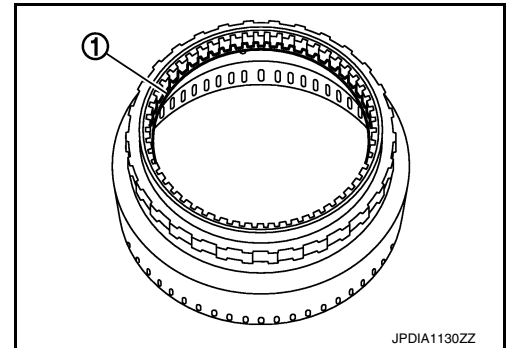


2. Install under drive carrier assembly (1) to front brake hub.

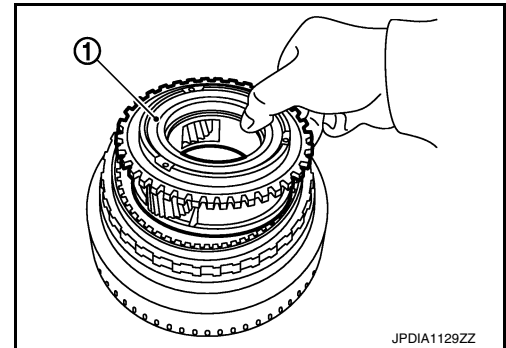

3. Install snap ring (1) to front brake hub using a flat-bladed screwdriver.

CAUTION:

- Be careful not to scratch front brake hub.
- Be careful not to damage snap ring.

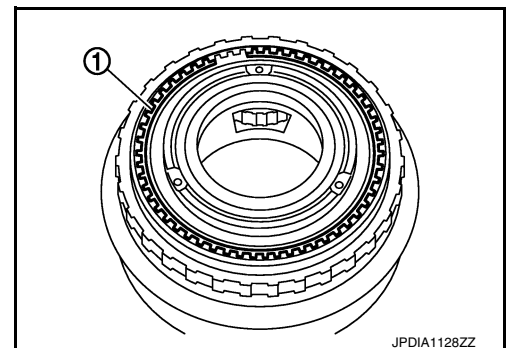

Inspection

INFOID:000000012167676

INSPECTION AFTER DISASSEMBLY

- Each Snap Ring
Check for deformation, fatigue or damage. If necessary, replace snap ring.
- Under Drive Carrier Assembly
Check for deformation, fatigue or damage. If necessary, replace under drive carrier assembly.
- Front Brake Hub

UNDER DRIVE CARRIER, FRONT BRAKE HUB

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

Check for deformation, fatigue or damage. If necessary, replace front brake hub.

A

B

C

TM

E

F

G

H

I

J

K

L

M

N

O

P

FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR

Exploded View

INFOID:000000012167677

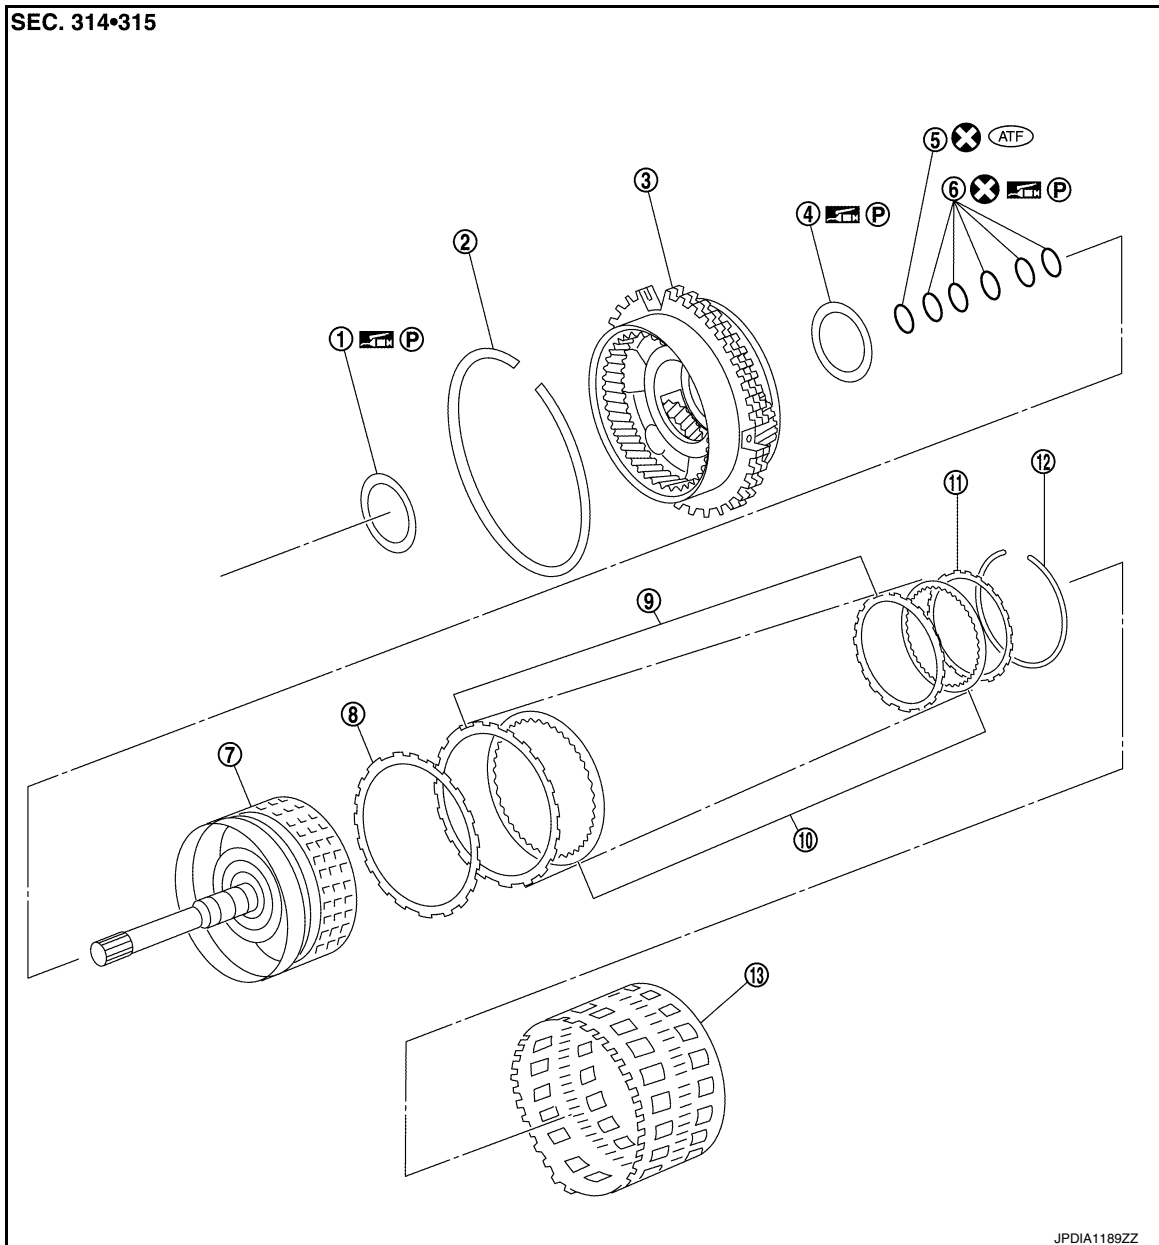

- | | | |
|------------------------------|----------------------------------|------------------------------|
| 1. Needle bearing | 2. Snap ring | 3. Front carrier assembly |
| 4. Needle bearing | 5. O-ring | 6. Seal ring |
| 7. Input clutch drum | 8. Input clutch dish plate | 9. Input clutch driven plate |
| 10. Input clutch drive plate | 11. Input clutch retaining plate | 12. Snap ring |
| 13. Rear internal gear | | |

Refer to [GI-4. "Components"](#) for symbols in the figure.

FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


Disassembly

INFOID:000000012167678


1. Remove needle bearing (1) from front carrier assembly.

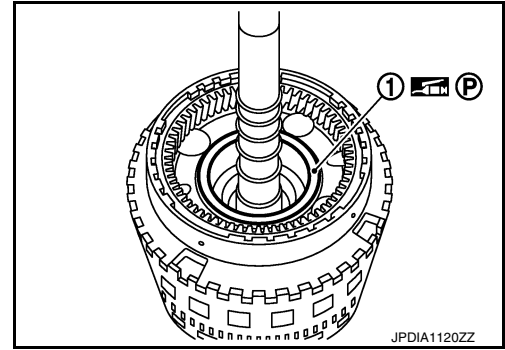


2. Compress snap ring (1) using flat-bladed screwdrivers (A).
CAUTION:
 - Be careful not to scratch rear internal gear.
 - Be careful not to damage snap ring.
3. Remove front carrier assembly and input clutch assembly from rear internal gear.
4. Remove front carrier assembly from input clutch assembly.

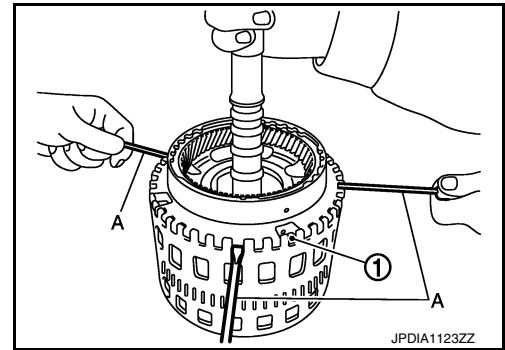

6. Remove snap ring (1) from front carrier assembly.
CAUTION:
Be careful not to expand snap ring excessively.

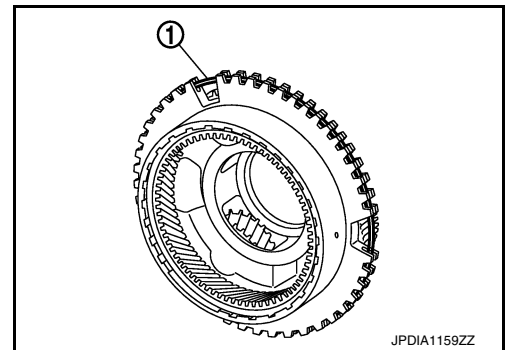

7. Remove O-ring (1) and seal rings (2) from input clutch assembly.

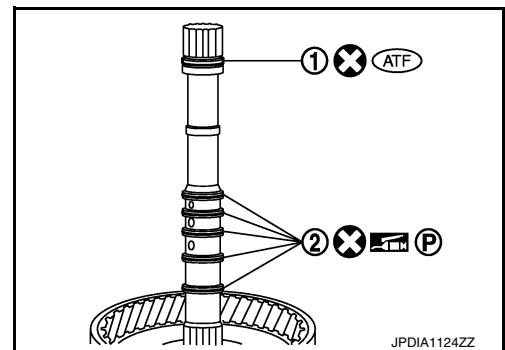


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

8. Remove needle bearing from input clutch assembly.

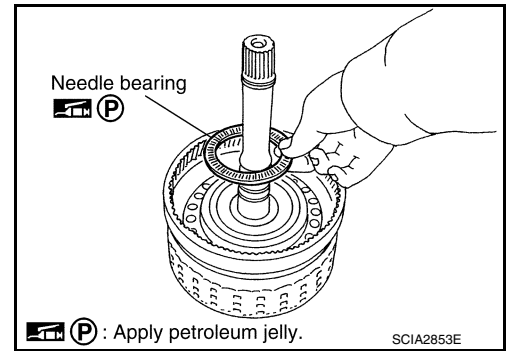


9. Remove snap ring from input clutch drum using a flat-bladed screwdriver.

CAUTION:

- Be careful not to scratch input clutch drum and input clutch retaining plate.
- Be careful not to damage snap ring.

10. Remove input clutch component part (drive plates, driven plates, retaining plate and dish plate) from input clutch drum.

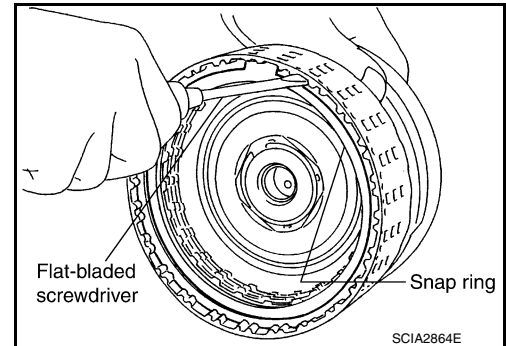

Assembly


INFOID:000000012167679

1. Install input clutch component part (drive plates, driven plates, retaining plate and dish plate) to input clutch drum.

- 1 : Snap ring
- 2 : Retaining plate
- 3 : Drive plate (six pieces)
- 4 : Driven plate (six pieces)
- 5 : Dish plate

CAUTION:


Check order of plates.

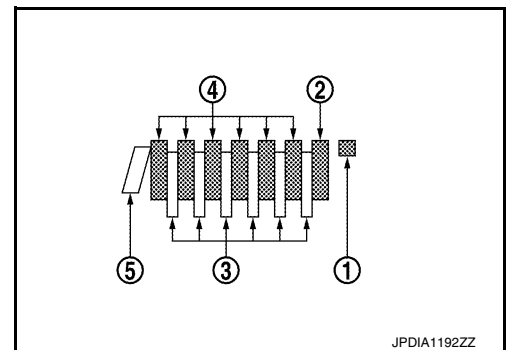

2. Install snap ring to input clutch drum using a flat-bladed screwdriver.

CAUTION:

- Be careful not to scratch input clutch drum and input clutch retaining plate.
- Be careful not to damage snap ring.

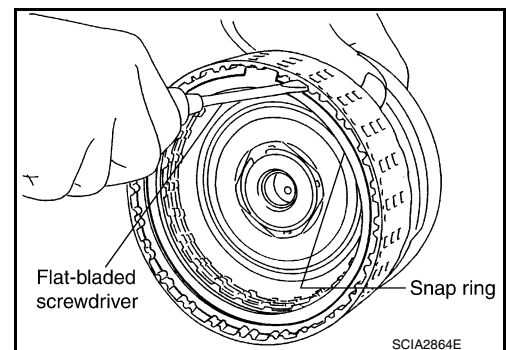

FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


3. Install needle bearing to input clutch assembly.

CAUTION:

Check the direction of needle bearing. Refer to [TM-228](#), "[Location of Needle Bearings and Bearing Races](#)".

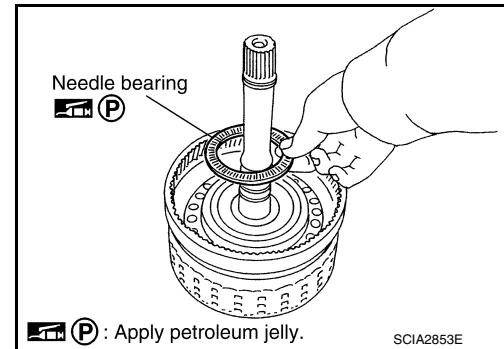


4. Install O-ring (1) and seal rings (2) to input clutch assembly.

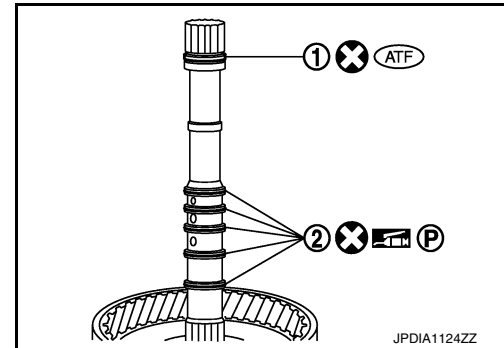

5. Install snap ring (1) to front carrier assembly.

CAUTION:

Be careful not to expand snap ring excessively.

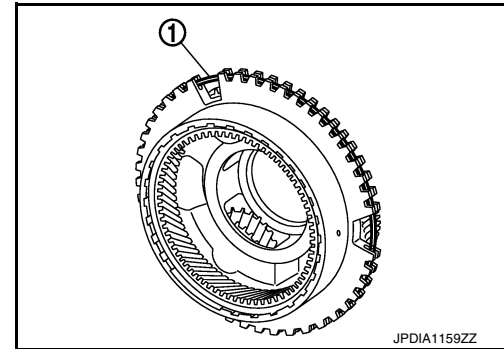


6. Compress snap ring (1) using flat-bladed screwdrivers (A).

CAUTION:

- Be careful not to scratch rear internal gear.
- Be careful not to damage snap ring.


7. Install front carrier assembly and input clutch assembly to rear internal gear.

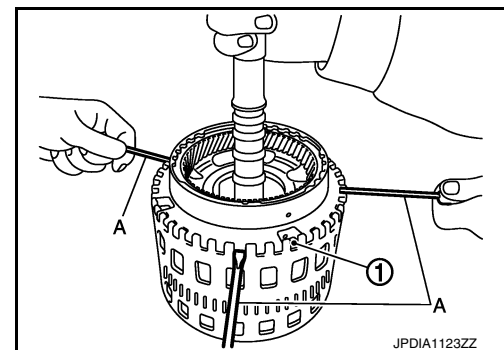

8. Install needle bearing (1) to front carrier assembly.

CAUTION:

Check the direction of needle bearing. Refer to [TM-228](#), "[Location of Needle Bearings and Bearing Races](#)".

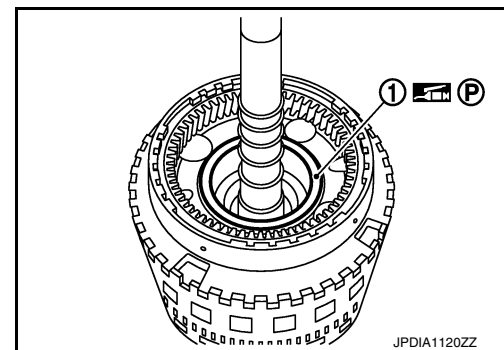

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

FRONT CARRIER, INPUT CLUTCH, REAR INTERNAL GEAR

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

Inspection

INFOID:000000012167680

INSPECTION AFTER DISASSEMBLY

Front Carrier Snap Ring

Check for deformation, fatigue or damage. If necessary, replace the snap ring.

Input Clutch Snap Ring

Check for deformation, fatigue or damage. If necessary, replace input clutch assembly.

Input Clutch Drum

Check for deformation, fatigue or damage or burns. If necessary, replace input clutch assembly.

Input Clutch Retaining Plate/Drive Plates/Driven Plates/Dish Plate

Check facing for burns, cracks or damage. If necessary, replace input clutch assembly.

Front Carrier

Check for deformation, fatigue or damage. If necessary, replace front carrier assembly.

Rear Internal Gear


Check for deformation, fatigue or damage. If necessary, replace rear internal gear.

MID SUN GEAR, REAR SUN GEAR, HIGH AND LOW REVERSE CLUTCH HUB
 < UNIT DISASSEMBLY AND ASSEMBLY > [7AT: RE7R01A]

MID SUN GEAR, REAR SUN GEAR, HIGH AND LOW REVERSE CLUTCH HUB

Exploded View

INFOID:000000012167681

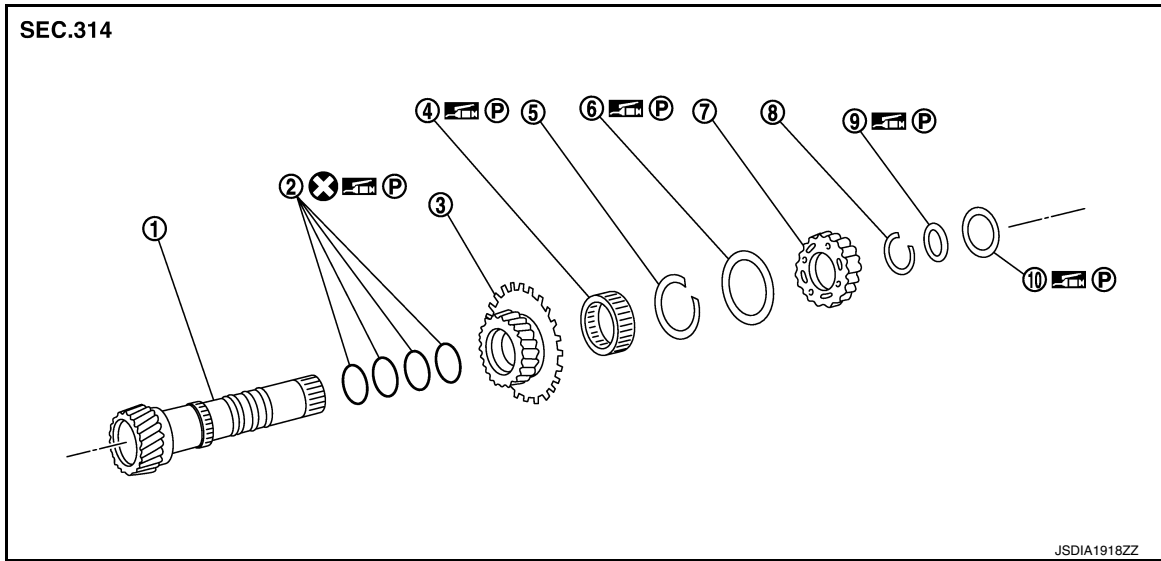


- | | | |
|------------------------------------|--------------|-------------------|
| 1. Mid sun gear | 2. Seal ring | 3. Rear sun gear |
| 4. 2nd one-way clutch | 5. Snap ring | 6. Needle bearing |
| 7. High and low reverse clutch hub | 8. Snap ring | 9. Bearing race |
| 10. Needle bearing | | |

Refer to [GI-4, "Components"](#) for symbols in the figure.

Disassembly


INFOID:000000012167682

1. Remove needle bearing and bearing race from high and low reverse clutch hub.

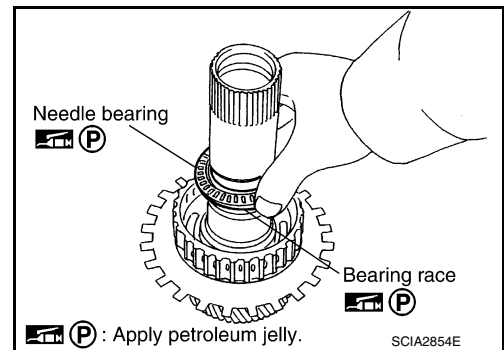

2. Remove snap ring from mid sun gear assembly using pair of snap ring pliers.

CAUTION:
 Be careful not to expand snap ring excessively.

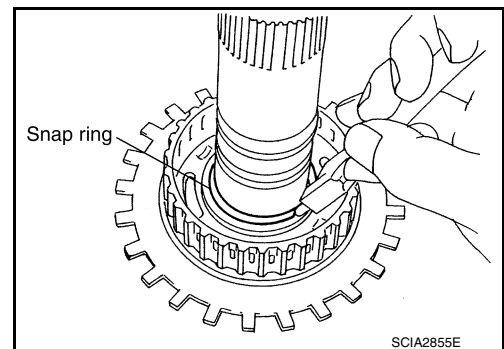


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

MID SUN GEAR, REAR SUN GEAR, HIGH AND LOW REVERSE CLUTCH HUB


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


3. Remove high and low reverse clutch hub from mid sun gear assembly.

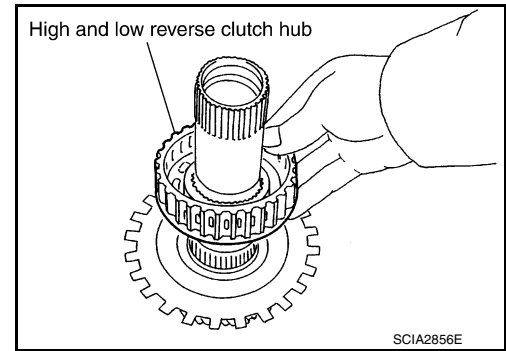

4. Remove needle bearing from high and low reverse clutch hub.

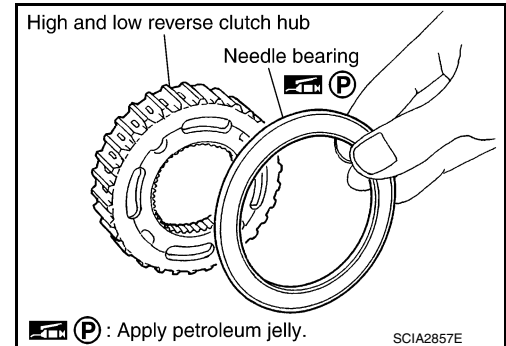


5. Remove rear sun gear assembly from mid sun gear assembly.

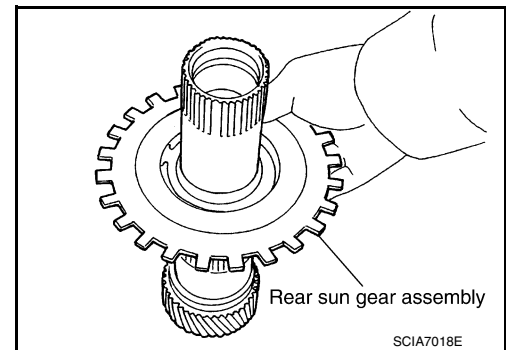


6. Remove snap ring from rear sun gear using a flat-bladed screwdriver.

CAUTION:

- Be careful not to scratch rear sun gear and 2nd one-way clutch.
- Be careful not to damage snap ring.

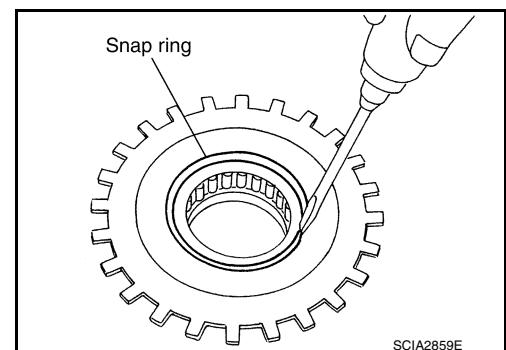

7. Remove 2nd one-way clutch (1) from rear sun gear.

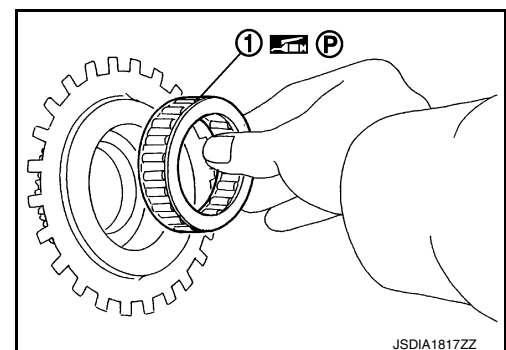


MID SUN GEAR, REAR SUN GEAR, HIGH AND LOW REVERSE CLUTCH HUB

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


8. Remove seal rings from mid sun gear.

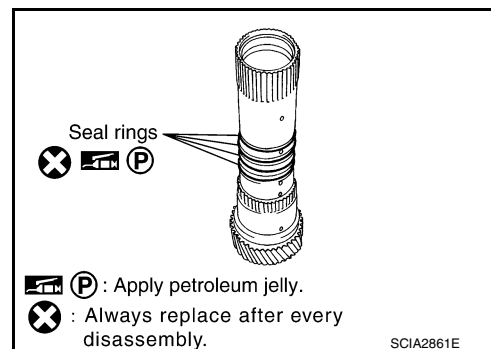


Assembly

INFOID:000000012167683

1. Install seal rings to mid sun gear.

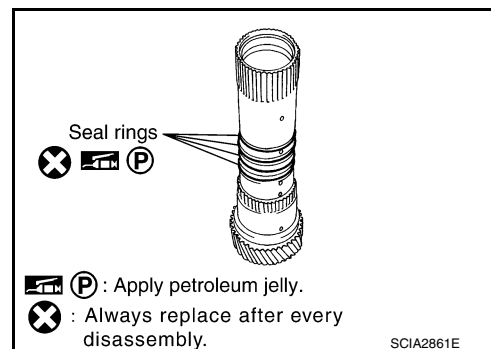


2. Install 2nd one-way clutch (1) to rear sun gear.

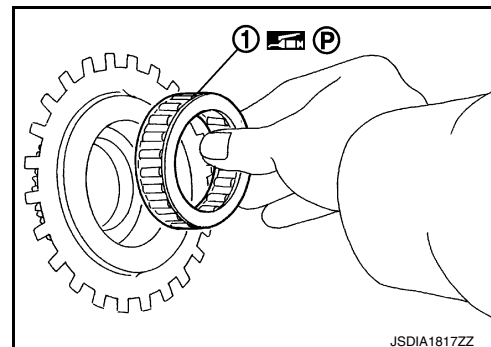

3. Install snap ring to rear sun gear using a flat-bladed screwdriver.

CAUTION:

- Be careful not to scratch rear sun gear and 2nd one-way clutch.
- Be careful not to damage snap ring.

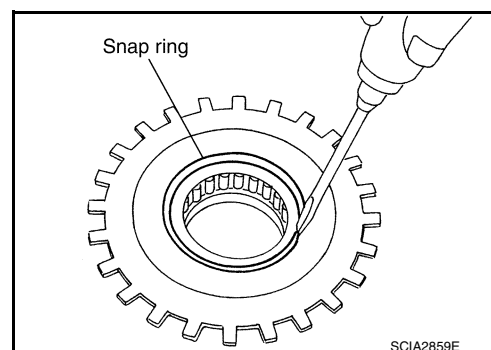


A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

MID SUN GEAR, REAR SUN GEAR, HIGH AND LOW REVERSE CLUTCH HUB

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


4. Install rear sun gear assembly to mid sun gear assembly.

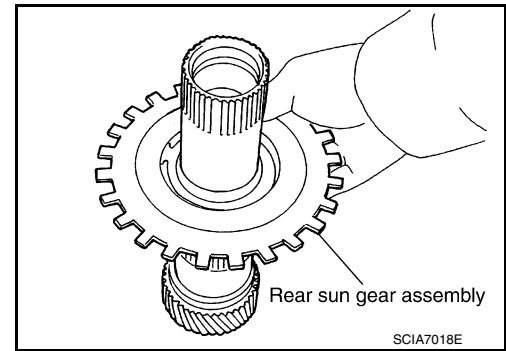


5. Install needle bearing to high and low reverse clutch hub.

CAUTION:

Check the direction of needle bearing. Refer to [TM-228](#), "[Location of Needle Bearings and Bearing Races](#)".

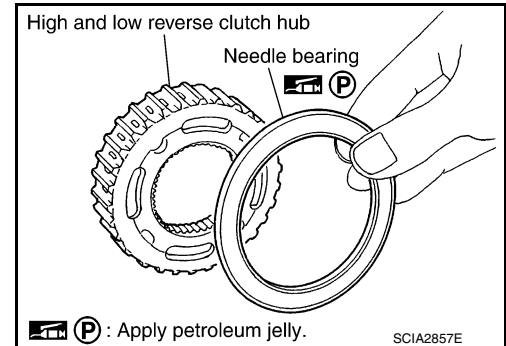


6. Install high and low reverse clutch hub to mid sun gear assembly.

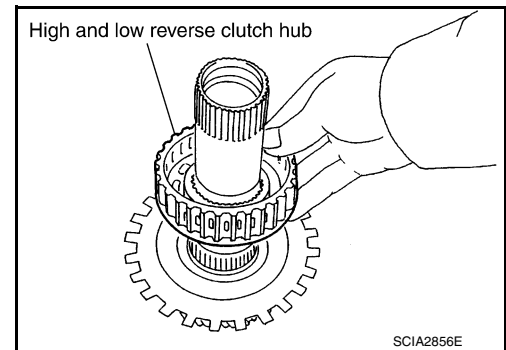

7. Install snap ring to mid sun gear assembly using pair of snap ring pliers.

CAUTION:

Be careful not to expand snap ring excessively.

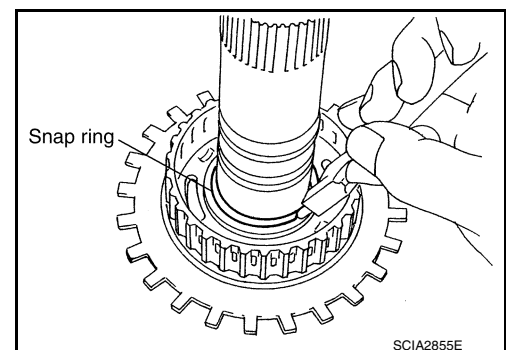

8. Check operation of 2nd one-way clutch.

MID SUN GEAR, REAR SUN GEAR, HIGH AND LOW REVERSE CLUTCH HUB


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

- Hold mid sun gear and turn rear sun gear.
- Check 2nd one-way clutch for correct locking and unlocking directions.

CAUTION:


If not as shown in the figure, check installation direction of 2nd one-way clutch.

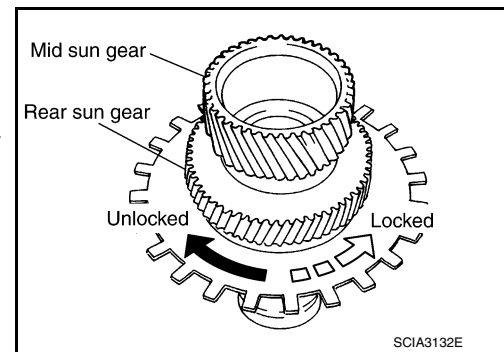

- Install needle bearing and bearing race to high and low reverse clutch hub.

CAUTION:

Check the direction of needle bearing and bearing race. Refer to [TM-228, "Location of Needle Bearings and Bearing Races"](#).

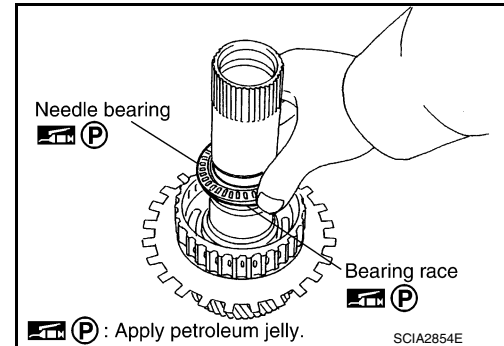


Inspection

INFOID:000000012167684

INSPECTION AFTER DISASSEMBLY

2nd One-way Clutch

- Hold mid sun gear and turn rear sun gear.
- Check 2nd one-way clutch for correct locking and unlocking directions. If necessary, replace 2nd one-way clutch.

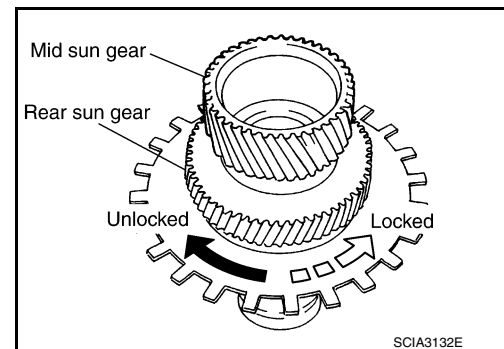

Each Snap Ring

Check for deformation, fatigue or damage. If necessary, replace the snap ring.

2nd One-way Clutch

Check frictional surface for wear or damage. If necessary, replace the 2nd one-way clutch.

Mid Sun Gear

Check for deformation, fatigue or damage. If necessary, replace the mid sun gear.

Rear Sun Gear

Check for deformation, fatigue or damage. If necessary, replace the rear sun gear.

High and Low Reverse Clutch Hub

Check for deformation, fatigue or damage. If necessary, replace the high and low reverse clutch hub.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

HIGH AND LOW REVERSE CLUTCH


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

HIGH AND LOW REVERSE CLUTCH

Exploded View

INFOID:000000012167685

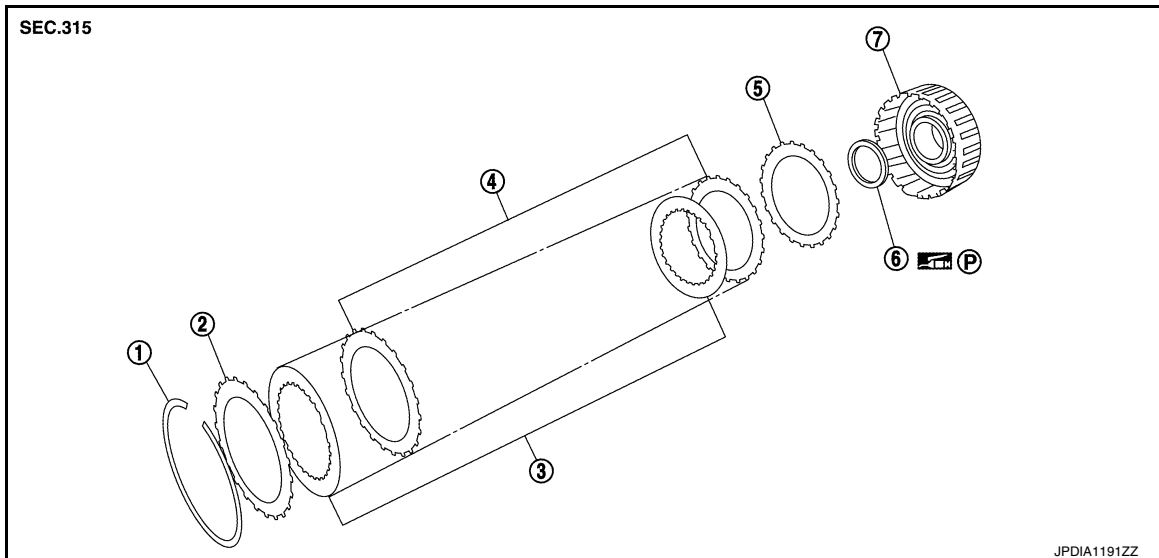


- | | | |
|---|--|--|
| 1. Snap ring | 2. High and low reverse clutch retaining plate | 3. High and low reverse clutch drive plate |
| 4. High and low reverse clutch driven plate | 5. High and low reverse clutch dish plate | 6. Bearing race |
| 7. High and low reverse clutch drum | | |

Refer to [GI-4, "Components"](#) for the symbols in the figure.

Disassembly

INFOID:000000012167686

1. Remove bearing race from high and low reverse clutch drum.

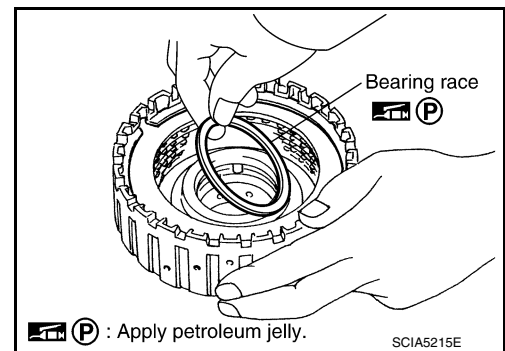


2. Remove snap ring from high and low reverse clutch drum using a flat-bladed screwdriver.

CAUTION:

- Be careful not to scratch high and low reverse clutch drum.
- Be careful not to damage snap ring.

3. Remove high and low reverse clutch component part (drive plates, driven plates, retaining plate and dish plate) from high and low reverse clutch drum.

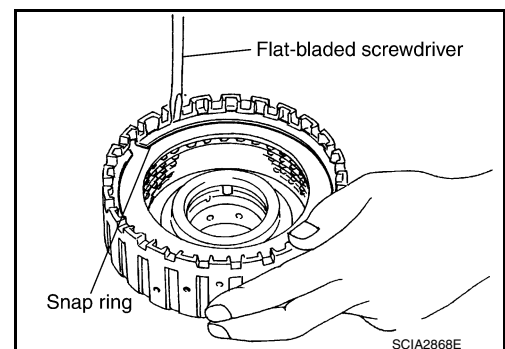

HIGH AND LOW REVERSE CLUTCH

< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]


INFOID:000000012167687

Assembly

1. Install high and low reverse clutch component part (dish plate, drive plates, driven plates and retaining plate) to high and low reverse clutch drum.

- 1 : Snap ring
- 2 : Retaining plate
- 3 : Drive plate (four pieces)
- 4 : Driven plate (four pieces)
- 5 : Dish plate

CAUTION:
Check the order of plates.

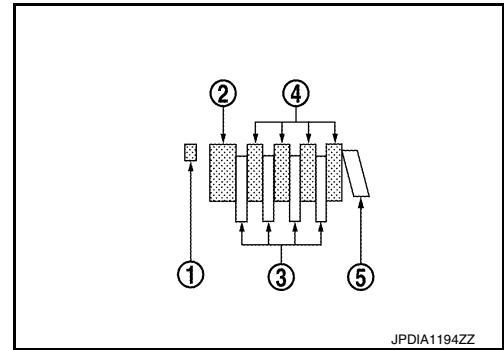


JPDIA1194ZZ

2. Install snap ring to high and low reverse clutch drum using a flat-bladed screwdriver.

CAUTION:


- Be careful not to scratch high and low reverse clutch drum.
- Be careful not to damage snap ring.

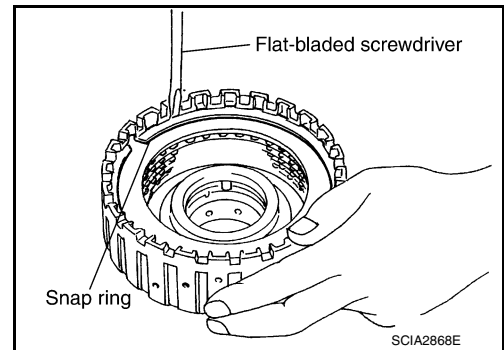

SCIA2868E

3. Install bearing race to high and low reverse clutch drum.

CAUTION:
Check the direction of bearing race. Refer to [TM-228, "Location of Needle Bearings and Bearing Races"](#).

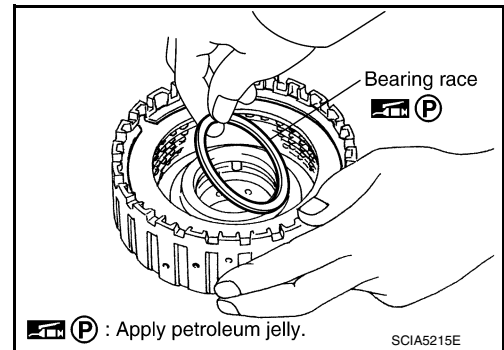

SCIA5215E

INFOID:000000012167688

Inspection

INSPECTION AFTER DISASSEMBLY

Check the following items. If necessary, replace high and low reverse clutch assembly.

Snap Ring

Check for deformation, fatigue or damage.

High and Low Reverse Clutch Retaining Plate/ Drive Plates/Driven Plates/Dish Plate

Check facing for burns, cracks or damage.

High and Low Reverse Clutch Drum

Check for deformation, fatigue or damage or burns.

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P

DIRECT CLUTCH


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

DIRECT CLUTCH

Exploded View

INFOID:000000012167689

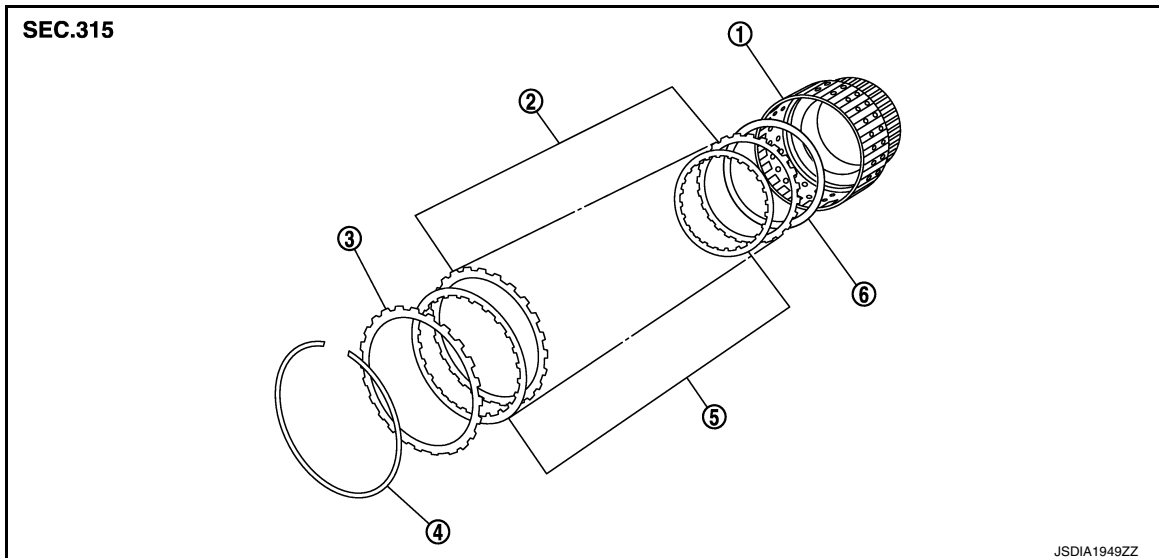


- | | | |
|-----------------------|-------------------------------|----------------------------------|
| 1. Direct clutch drum | 2. Direct clutch driven plate | 3. Direct clutch retaining plate |
| 4. Snap ring | 5. Direct clutch drive plate | 6. Direct clutch dish plate |

Disassembly

INFOID:000000012167690

1. Remove snap rings from direct clutch drum using a flat-bladed screwdriver.
CAUTION:
 - Be careful not to scratch direct clutch drum and direct clutch retaining plate.
 - Be careful not to damage snap ring.
2. Remove direct clutch component part (drive plates, driven plates, retaining plate and dish plate) from direct clutch drum.

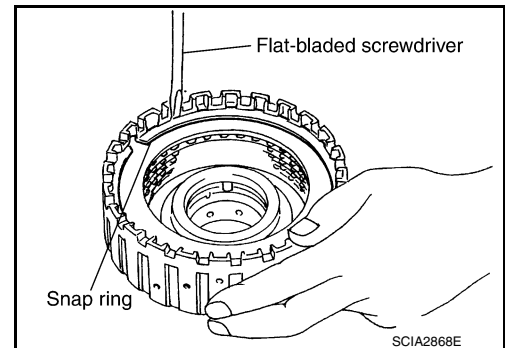


Assembly

INFOID:000000012167691

1. Install direct clutch component part (drive plates, driven plates, retaining plate and dish plate) to direct clutch drum.

- | | |
|---|------------------------------|
| 1 | : Snap ring |
| 2 | : Retaining plate |
| 3 | : Drive plate (five pieces) |
| 4 | : Driven plate (five pieces) |
| 5 | : Dish plate |

CAUTION:
Check the order of plates.

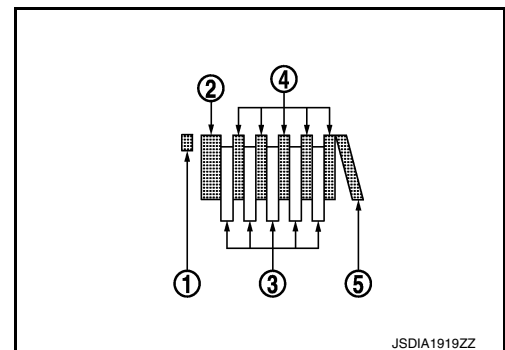

DIRECT CLUTCH


< UNIT DISASSEMBLY AND ASSEMBLY >

[7AT: RE7R01A]

2. Install snap rings to direct clutch drum using a flat-bladed screwdriver.

CAUTION:

- Be careful not to scratch direct clutch drum and direct clutch retaining plate.
- Be careful not to damage snap ring.

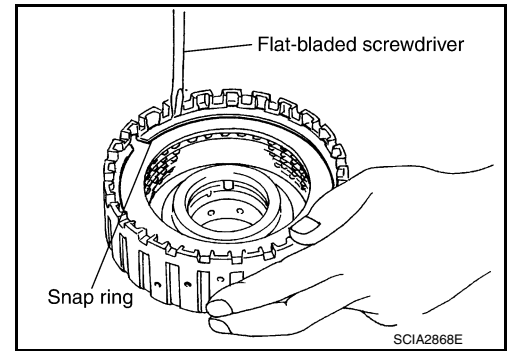

Inspection

INSPECTION AFTER DISASSEMBLY

Check the following items. If necessary, replace direct clutch assembly.

Snap Ring

Check for deformation, fatigue or damage.

Direct Clutch Retaining Plate/Drive Plates/Driven Plates/Dish Plate

Check facing for burns, cracks or damage.

Direct Clutch Drum

Check for deformation, fatigue or damage or burns.

INFOID:000000012167692

A
B
C
TM

E
F
G
H
I
J
K
L
M
N
O
P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[7AT: RE7R01A]

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specification

INFOID:0000000012167693

Applied model	Engine	VQ37VHR	
	Axle	2WD	AWD
Transmission model		RE7R01A	
Stall torque ratio		1.92 : 1	
Transmission gear ratio	1st	4.924	
	2nd	3.194	
	3rd	2.043	
	4th	1.412	
	5th	1.000	
	6th	0.862	
	7th	0.772	
	Reverse	3.972	
Recommended fluid and fluid capacity		Refer to MA-10, "Fluids and Lubricants" .	

Vehicle Speed at Which Gear Shifting Occurs

INFOID:0000000012167694

Unit: km/h (MPH)

Gear position	Throttle position	
	Full throttle	Half throttle
D1 → D2	58 – 62 (36 – 38)	45 – 49 (28 – 30)
D2 → D3	91 – 99 (57 – 61)	71 – 79 (44 – 49)
D3 → D4	143 – 153 (89 – 95)	106 – 116 (66 – 72)
D4 → D5	209 – 219 (130 – 136)	152 – 162 (94 – 101)
D5 → D6	251 – 261 (156 – 162)	184 – 194 (114 – 121)
D6 → D7	251 – 261 (156 – 162)	251 – 261 (156 – 162)
D7 → D6	240 – 250 (150 – 155)	127 – 137 (79 – 85)
D6 → D5	240 – 250 (150 – 155)	127 – 137 (79 – 85)
D5 → D4	180 – 190 (112 – 118)	105 – 115 (65 – 71)
D4 → D3	119 – 129 (74 – 80)	61 – 71 (38 – 44)
D3 → D2	62 – 70 (39 – 43)	36 – 44 (22 – 27)
D2 → D1	19 – 23 (12 – 14)	6 – 10 (4 – 6)

- At half throttle, the accelerator opening is 4/8 of the full opening.

Vehicle Speed at Which Lock-up Occurs/Releases

INFOID:0000000012167695

Throttle position	Vehicle speed km/h (MPH)	
	Lock-up ON	Lock-up OFF
Closed throttle	54 – 62 (34 – 38)	54 – 62 (34 – 39)
Half throttle	153 – 161 (95 – 100)	106 – 114 (66 – 71)

- Vehicle speed with D5 position.
- At closed throttle, the accelerator opening is less than 1/8 condition. (Closed throttle position signal OFF)
- At half throttle, the accelerator opening is 4/8 of the full opening.

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

[7AT: RE7R01A]

Stall Speed

INFOID:0000000012167696

Stall speed	2,050 – 2,350 rpm
-------------	-------------------

Torque Converter

INFOID:0000000012167697

Dimension between end of converter housing and torque converter	25.0 mm (0.98 in)
---	-------------------

Total End Play

INFOID:0000000012167698

Unit: mm (in)

Total end play	Standard	0.25 – 0.55 (0.0098 – 0.0217)
		1.0 (0.039)
		1.2 (0.047)
		1.4 (0.055)
Thickness of bearing race for adjusting total end play		1.6 (0.063)
		1.8 (0.071)
		2.0 (0.079)
		2.2 (0.087)
		2.2 (0.087)

Reverse Brake Clearance

INFOID:0000000012167699

Unit: mm (in)

Reverse brake clearance	Standard	0.8 – 1.2 (0.031 – 0.047)
		4.8 (0.189)
		5.0 (0.197)
Thickness of retaining plate for adjusting reverse brake clearance		5.2 (0.205)
		5.4 (0.213)
		5.6 (0.220)
		5.8 (0.228)
		6.0 (0.236)

Front Brake Clearance

INFOID:0000000012167700

Unit: mm (in)

Front brake clearance	Standard	0.7 – 1.1 (0.028 – 0.043)
		2.0 (0.079)
Thickness of retaining plate for adjusting front brake clearance		2.2 (0.087)
		2.4 (0.094)
		2.6 (0.102)
		2.8 (0.110)
		2.8 (0.110)

2346 Brake Clearance

INFOID:0000000012167701

Unit: mm (in)

2346 brake clearance	Standard	1.5 – 1.9 (0.059 – 0.075)
		2.0 (0.079)
Thickness of snap ring for adjusting 2346 brake clearance		2.2 (0.087)
		2.4 (0.094)
		2.6 (0.102)
		2.8 (0.110)
		3.0 (0.118)

A
B
C
TM
E
F
G
H
I
J
K
L
M
N
O
P