

STR

SECTION STR
STARTING SYSTEM

CONTENTS

PRECAUTION	2	DIAGNOSIS AND REPAIR WORKFLOW	10
PRECAUTIONS	2	Work Flow (With GR8-1200 NI)	10
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	Work Flow (Without GR8-1200 NI)	14
PREPARATION	3	DTC/CIRCUIT DIAGNOSIS	16
PREPARATION	3	B TERMINAL CIRCUIT	16
Special Service Tool	3	Description	16
Commercial Service Tools	3	Diagnosis Procedure	16
SYSTEM DESCRIPTION	4	S CONNECTOR CIRCUIT	17
COMPONENT PARTS	4	Description	17
Component Parts Location	4	Diagnosis Procedure	17
Component Description	4	SYMPTOM DIAGNOSIS	18
STARTING SYSTEM	5	STARTING SYSTEM	18
System Diagram	5	Symptom Table	18
System Description	5	REMOVAL AND INSTALLATION	19
WIRING DIAGRAM	6	STARTER MOTOR	19
STARTING SYSTEM	6	Exploded View	19
Wiring Diagram	6	Removal and Installation	19
BASIC INSPECTION	10	SERVICE DATA AND SPECIFICATIONS (SDS)	20
		Starter	20

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:0000000011146262

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes dual stage front air bag modules. The SRS system may only deploy one front air bag, depending on the severity of a collision and whether the front passenger seat is occupied. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

PREPARATION

< PREPARATION >

PREPARATION

PREPARATION

Special Service Tool

INFOID:0000000011146263

STR

A

The actual shape of the tools may differ from those illustrated here.

Tool number (TechMate No.)	Description
— (—) Model GR8-1200 NI Multitasking battery and electrical diagnostic station	 Tests batteries, starting and charging systems and charges batteries. For operating instructions, refer to diagnostic station instruction manual. AWIIIA1239ZZ

C

D

E

F

Commercial Service Tools

INFOID:0000000011146264

G

H

I

J

K

L

M

N

O

P

Tool name	Description
Power tool	 Loosening nuts, screws and bolts PIIB1407E

COMPONENT PARTS


< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000011146265

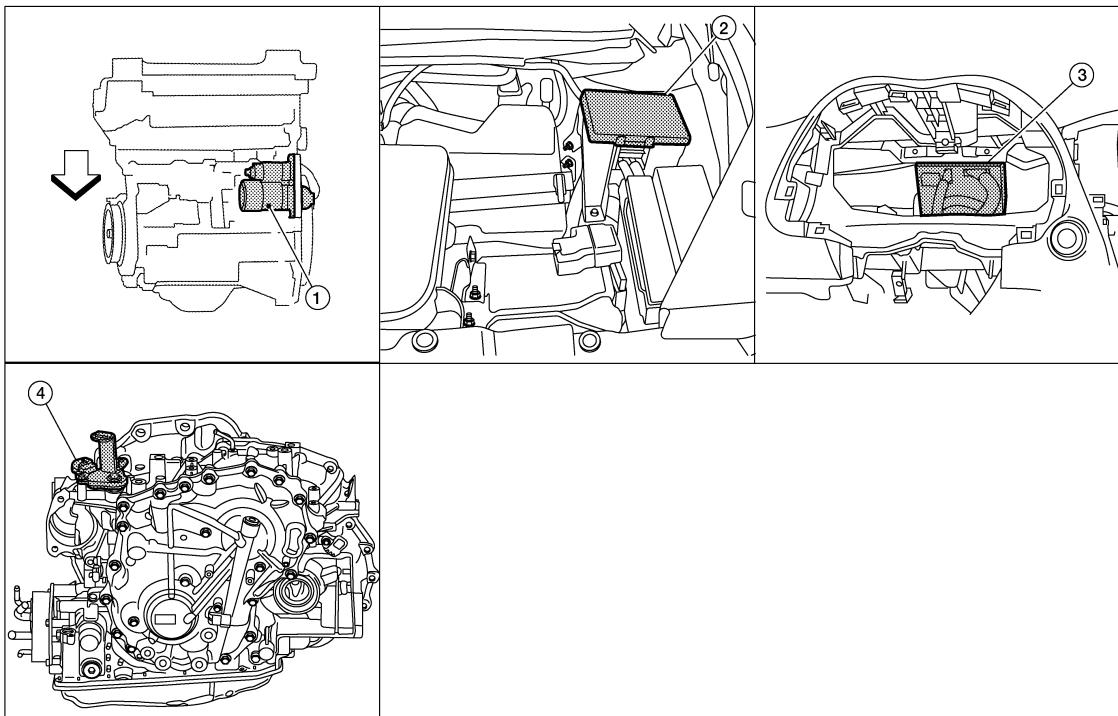

AWBIA1633ZZ

◀ Vehicle front

- | | | |
|------------------------------|-------------|--|
| 1. Starter motor | 2. IPDM E/R | 3. BCM (view with combination meter removed) |
| 4. Transmission range switch | | |

Component Description

INFOID:0000000011146266

Component part	Description
BCM	BCM controls the starter relay inside IPDM E/R.
IPDM E/R	CPU inside IPDM E/R operates the starter relay when the ignition switch is in the start position.
Starter motor	The starter motor plunger closes and the motor is supplied with battery power, which in turn cranks the engine, when the S terminal is supplied with electric power.
Transmission range switch	Transmission range switch supplies power to the starter relay and starter control relay inside IPDM E/R when the selector lever is shifted to the P or N position.


STARTING SYSTEM

< SYSTEM DESCRIPTION >

STARTING SYSTEM

System Diagram

INFOID:0000000011146267

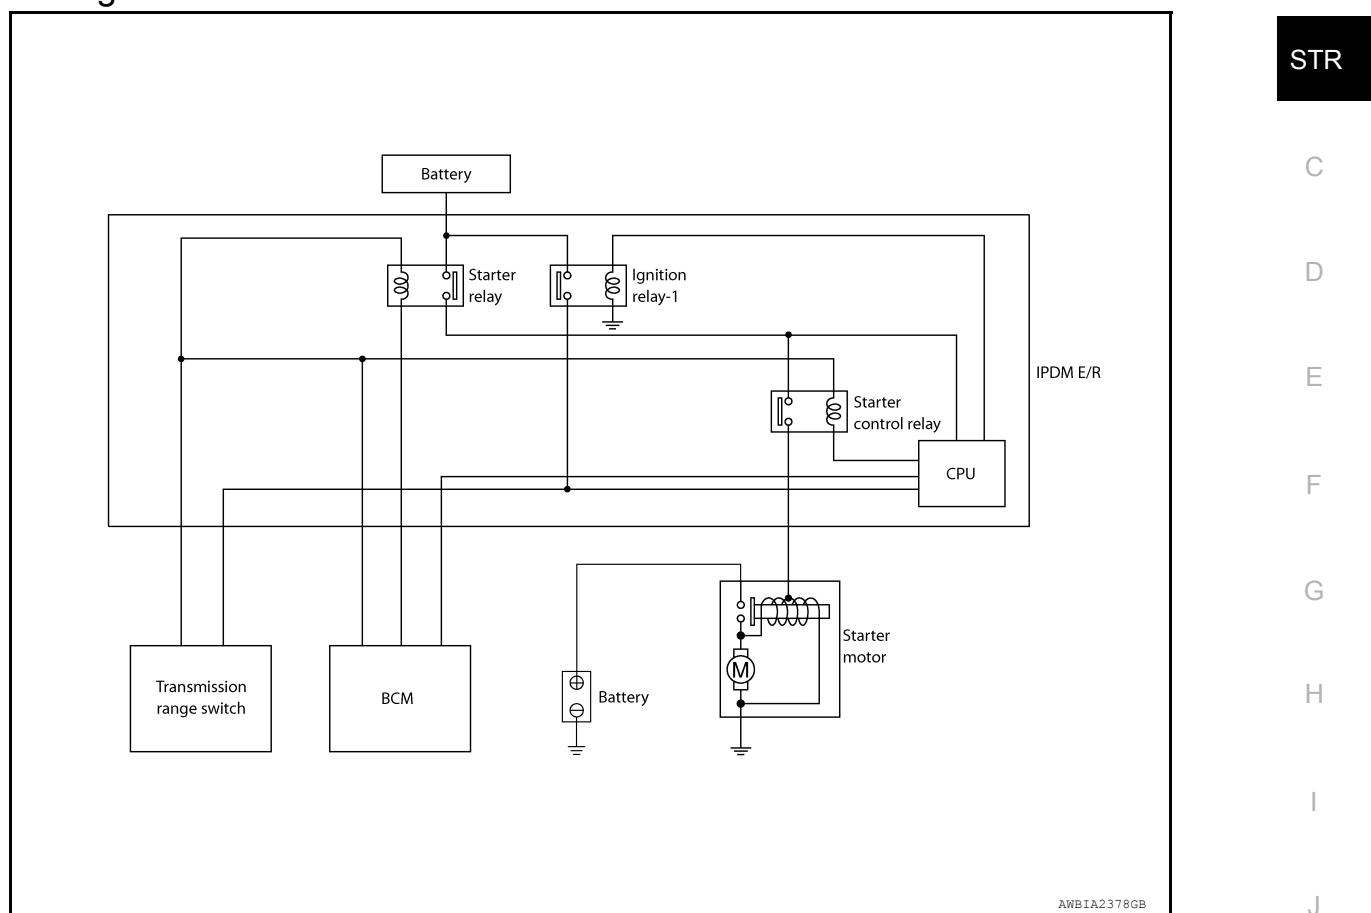

A

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

System Description

INFOID:0000000011146268

The starter motor plunger closes and provides a closed circuit between the battery and the starter motor. The starter motor is grounded to the cylinder block. With power and ground supplied, the starter motor operates.

STARTING SYSTEM


< WIRING DIAGRAM >

WIRING DIAGRAM STARTING SYSTEM

Wiring Diagram

INFOID:0000000011146269

STARTING SYSTEM

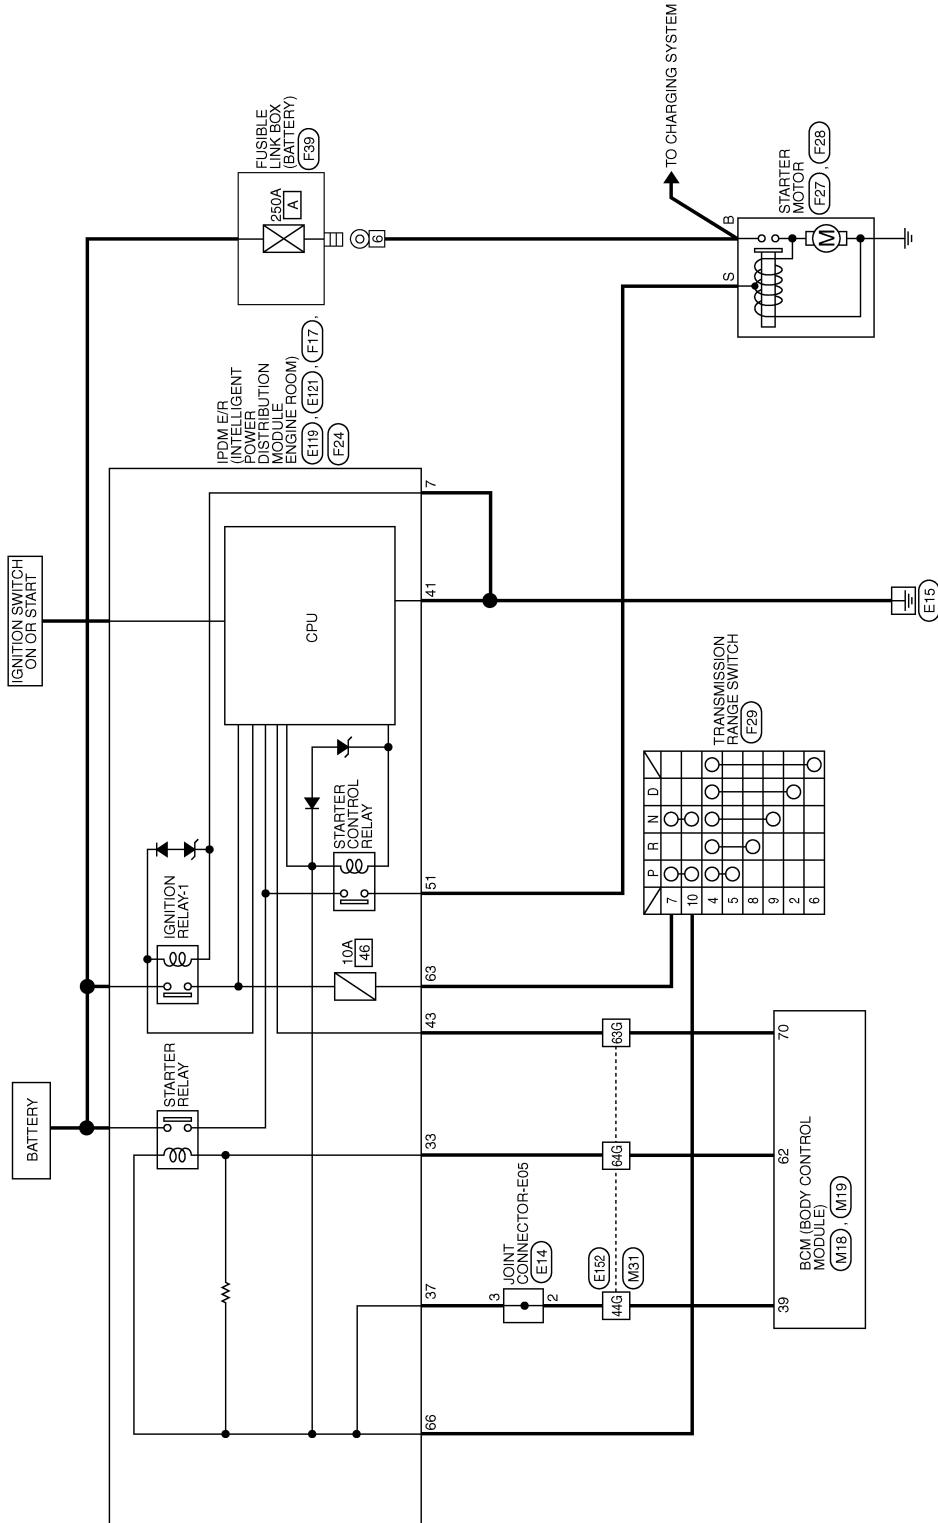


ABBWA1486GB

STARTING SYSTEM

< WIRING DIAGRAM >

STARTING SYSTEM CONNECTORS

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



Terminal No.	Color of Wire	Signal Name
39	G	SHIFT N/P
66	7G	WIRE TO WIRE



Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
62	W	STARTER RELAY OUT
70	P	IGN USM OUT 1


Terminal No.	Color of Wire	Signal Name
44G	G	-
63G	P	-
64G	W	-

Connector No.	E14
Connector Name	JOINT CONNECTOR-E05
Connector Color	BLACK

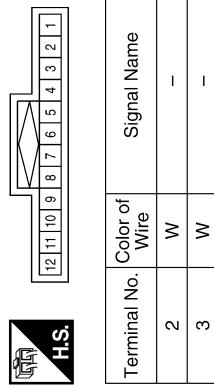



Terminal No.	Color of Wire	Signal Name
2	W	-
3	W	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE


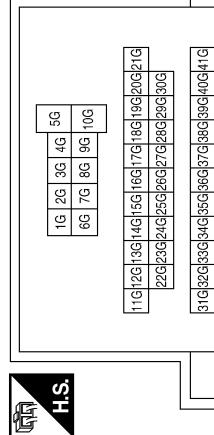


Connector No.	E14
Connector Name	JOINT CONNECTOR-E05
Connector Color	BLACK

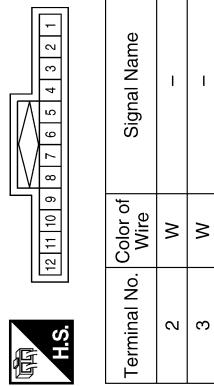

Terminal No.	Color of Wire	Signal Name
2	W	-
3	W	-

Connector No.	E14
Connector Name	JOINT CONNECTOR-E05
Connector Color	BLACK

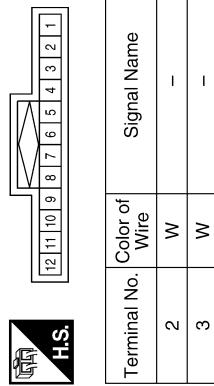


ABBIA1568GB

A
STR
C
D
E
F
G
H
I
J
K
L
M
N
O
Z
P

STARTING SYSTEM

< WIRING DIAGRAM >

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
33	R	START CONT
37	W	CLUTCH VL SW
41	B	GND (SIGNAL)
43	L	IGN SIGNAL

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	B	GND (POWER)


Connector No.	F17
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK

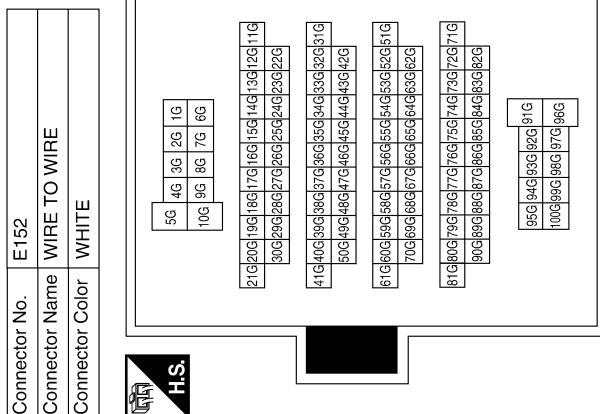

ABBIA1755GB

STARTING SYSTEM

< WIRING DIAGRAM >

Connector No.	F24
Connector Name	IPDM ECR (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE
	


Connector No.	F27
Connector Name	STARTER MOTOR
Connector Color	-



Terminal No.	Color of Wire	Signal Name
B	BR	-
S	W	-

Terminal No.	Color of Wire	Signal Name
B	BR	-
S	W	-

Terminal No.	Color of Wire	Signal Name
63	L	INHIBIT SW
66	G	NP SW

Connector No.	F24
Connector Name	IPDM ECR (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE
	




Terminal No.	Color of Wire	Signal Name
B	BR	-
S	W	-



Terminal No.	Color of Wire	Signal Name
6	BR	-
6	W	-

Connector No.	F29
Connector Name	TRANSMISSION RANGE SWITCH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
7	L	-
10	G	-



A

STR

C

D

E

F

G

H

I

J

K

L

M

N

O

P

ABBIA1756GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow (With GR8-1200 NI)

INFOID:000000011146270

STARTING SYSTEM DIAGNOSIS WITH GR8-1200 NI

To test the starting system, use the following special service tool:

- GR8-1200 NI Multitasking battery and electrical diagnostic station


NOTE:

Refer to the diagnostic station Instruction Manual for proper starting system diagnosis procedures.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

OVERALL SEQUENCE

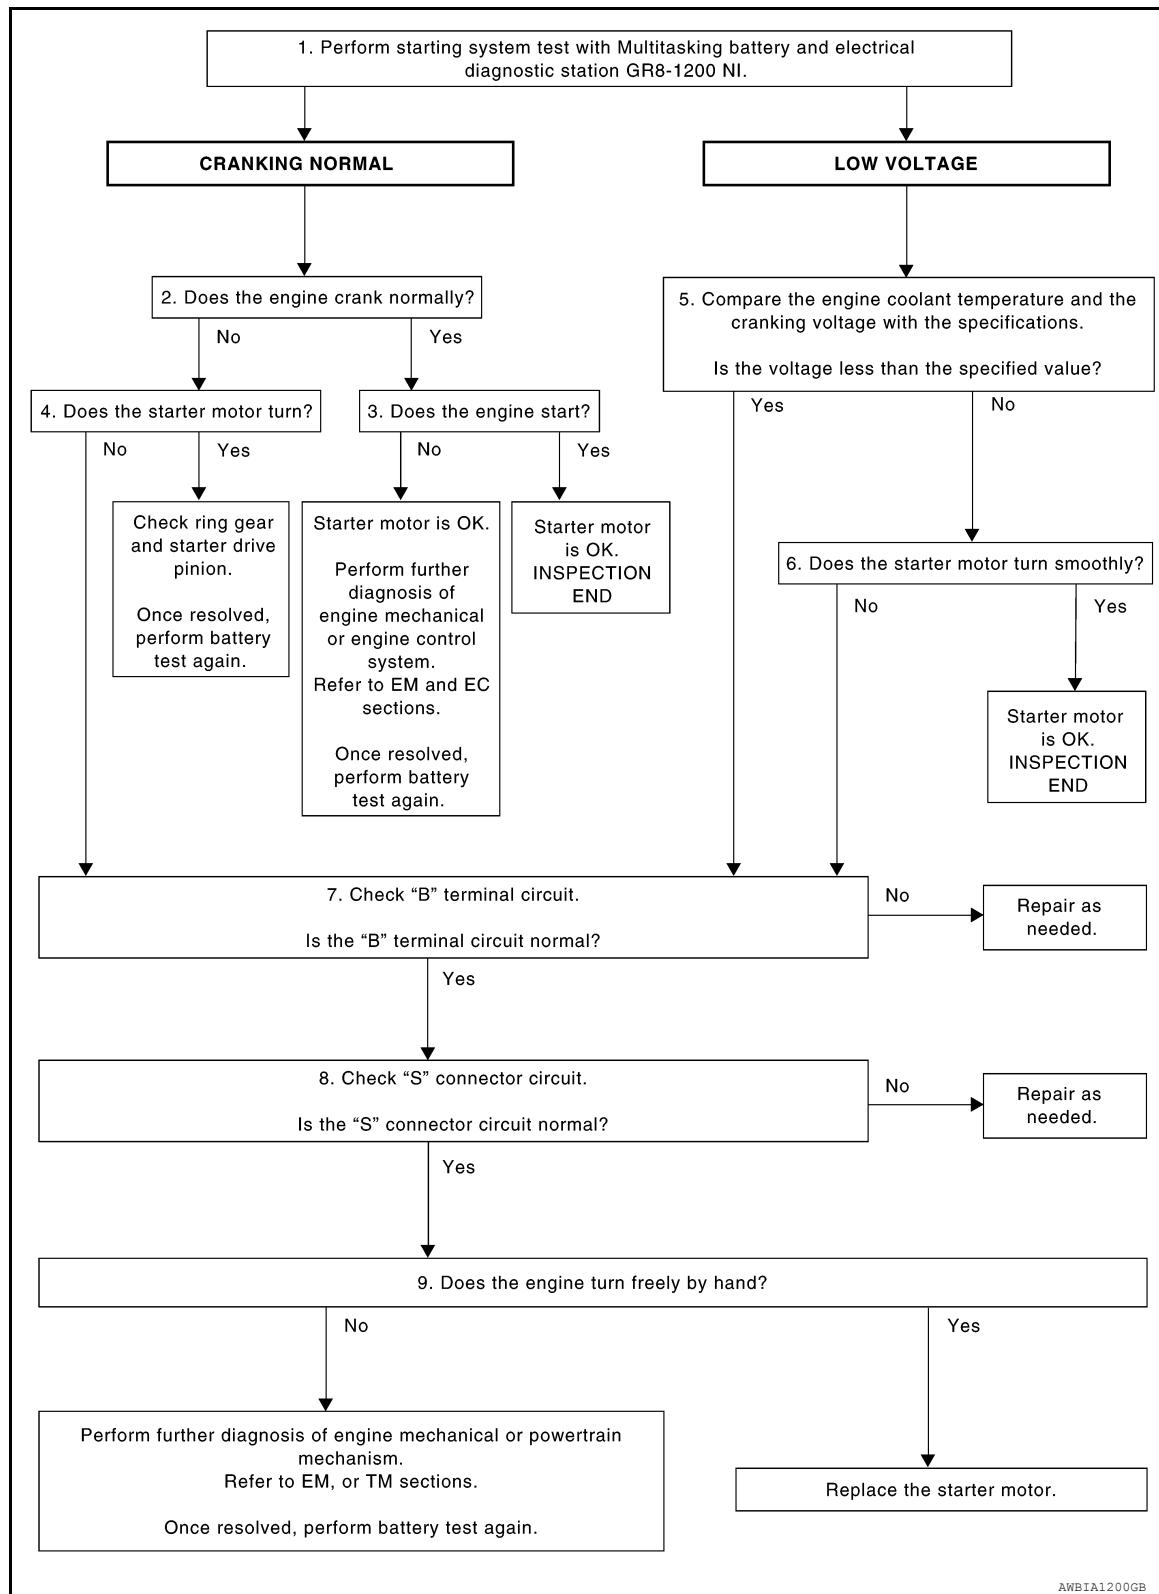

DETAILED FLOW

NOTE:

To ensure a complete and thorough diagnosis, the battery, starter motor and generator test segments must be done as a set from start to finish.

1. DIAGNOSIS WITH MULTITASKING BATTERY AND ELECTRICAL DIAGNOSTIC STATION GR8-1200 NI

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

Perform the starting system test with Multitasking battery and electrical diagnostic station GR8-1200 NI. For details and operating instructions, refer to diagnostic station Instruction Manual.

Test result

CRANKING NORMAL>>GO TO 2

LOW VOLTAGE>>GO TO 5

CHARGE BATTERY>>Perform the slow battery charging procedure. (Initial rate of charge is 10A for 12 hours.) Perform battery test again. Refer to diagnostic station instruction manual.

REPLACE BATTERY>>Before replacing battery, clean the battery cable clamps and battery posts. Perform battery test again. Refer to diagnostic station instruction manual. If second test result is "REPLACE BATTERY", then do so. Perform battery test again to confirm repair.

2.CRANKING CHECK

Check that the starter motor operates properly.

Does the engine crank normally?

YES >> GO TO 3

NO >> GO TO 4

3.ENGINE START CHECK

Check that the engine starts.

Does the engine start?

YES >> Inspection End.

NO >> Perform further diagnosis of engine mechanical or engine control system. Refer to EM and EC sections. Once resolved, perform battery test again.

4.STARTER MOTOR ACTIVATION

Check that the starter motor operates.

Does the starter motor turn?

YES >> Check ring gear and starter motor drive pinion. Once resolved, perform battery test again.

NO >> GO TO 7

5.COMPARISON BETWEEN ENGINE COOLANT AND CRANKING VOLTAGE

Compare the engine coolant temperature and verify the cranking voltage is within specifications.

Minimum Specification of Cranking Voltage Referencing Coolant Temperature

Engine coolant temperature [°C (°F)]	Voltage [V]
-30 to -20 (-22 to -4)	8.6
-19 to -10 (-2 to 14)	9.1
-9 to 0 (16 to 32)	9.5
More than 1 (More than 34)	9.9

Is the voltage less than the specified value?

YES >> GO TO 7

NO >> GO TO 6

6.STARTER OPERATION

Check the starter operation.

Does the starter motor turn smoothly?

YES >> Inspection End.

NO >> GO TO 7

7.“B” TERMINAL CIRCUIT INSPECTION

Check “B” terminal circuit. Refer to [STR-16, "Diagnosis Procedure"](#).

Is “B” terminal circuit normal?

YES >> GO TO 8

NO >> Repair as needed.

8.“S” CONNECTOR CIRCUIT INSPECTION

Check “S” connector circuit. Refer to [STR-17, "Diagnosis Procedure"](#).

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

Is "S" connector circuit normal?

YES >> GO TO 9

NO >> Repair as needed.

A

9. ENGINE ROTATION STATUS

STR

Check that the engine can be rotated by hand.

C

Does the engine turn freely by hand?

D

YES >> Replace starter motor.

NO >> Perform further diagnosis of engine mechanical or powertrain mechanism. Refer to EM or TM sections. Once resolved, perform battery test again using Multitasking battery and electrical diagnostic station GR8-1200 NI. Refer to the diagnostic station Instruction Manual for proper testing procedures.

E

F

G

H

I

J

K

L

M

N

O

P


DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

Work Flow (Without GR8-1200 NI)

INFOID:000000011146271

OVERALL SEQUENCE

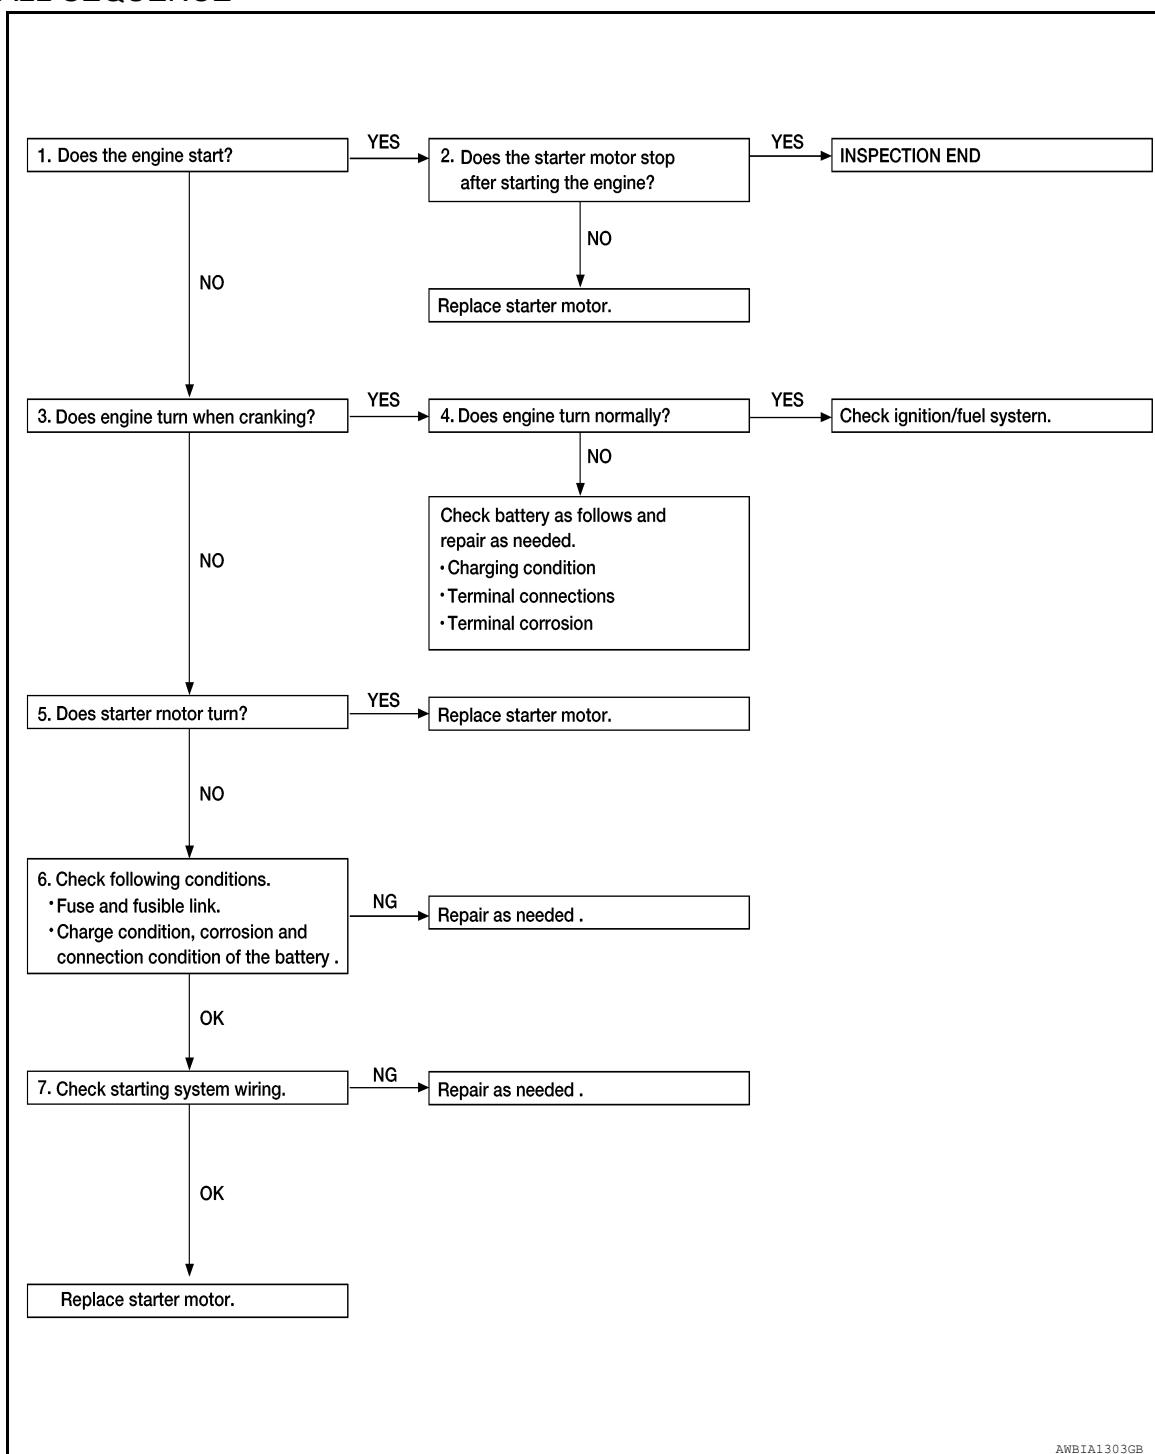

AWBIA1303GB

DETAILED FLOW

NOTE:

If any malfunction is found, immediately disconnect the battery cable from the negative terminal.

1. CHECK ENGINE START

Crank the engine and check that the engine starts.

Does the engine start?

- YES >> GO TO 2.
- NO >> GO TO 3.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

2.CHECK THAT THE STARTER MOTOR STOPS

Check that the starter motor stops after starting the engine.

Does the starter motor stop?

YES >> Inspection End.

NO >> Replace starter motor. Refer to [STR-19, "Removal and Installation".](#)

A

STR

3.CHECK THAT THE ENGINE TURNS WHEN CRANKING

Check that the engine turns when cranking.

Does engine turn when cranking?

YES >> GO TO 4.

NO >> GO TO 5.

C

D

4.CHECK THE ENGINE SPEED WHEN CRANKING

Check that the engine speed is not low when cranking.

Does engine turn normally?

YES >> Check ignition/fuel system.

NO >> Check charge condition, corrosion and connection condition of the battery. Refer to [PG-90, "How to Handle Battery".](#)

E

F

5.CHECK STARTER MOTOR ACTIVATION

Check that the starter motor runs at cranking.

Does starter motor turn?

YES >> Replace starter motor. Refer to [STR-19, "Removal and Installation".](#)

G

H

NO >> GO TO 6.

6.CHECK POWER SUPPLY CIRCUIT

Check the following conditions:

- Fuse and fusible link
- Charge condition, corrosion and connection of the battery.

I

J

Are these inspection results normal?

YES >> GO TO 7.

NO >> Repair as needed.

K

7.CHECK STARTING SYSTEM WIRING

Check the following:

- "B" terminal circuit. Refer to [STR-16, "Diagnosis Procedure".](#)
- "S" terminal circuit. Refer to [STR-17, "Diagnosis Procedure".](#)

L

Are the inspection results normal?

M

N

YES >> Replace starter motor. Refer to [STR-19, "Removal and Installation".](#)

O

P

NO >> Repair as needed.

B TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

B TERMINAL CIRCUIT

Description

INFOID:0000000011146272

Terminal "B" is constantly supplied with battery power.

Diagnosis Procedure

INFOID:0000000011146273

Regarding Wiring Diagram information, refer to [STR-6, "Wiring Diagram"](#).

CAUTION:

Perform diagnosis under the condition that the engine cannot start by the following procedure.

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is depleted.

1.CHECK TERMINAL B POWER SUPPLY VOLTAGE

1. Turn ignition switch OFF.
2. Make sure that starter motor connector F27 terminal B connection is clean and tight.
3. Check voltage between starter motor connector F27 terminal B and ground.

Connector	(+) Terminal		(-)	Voltage (Approx.)
	F27	B		Battery voltage

Is the inspection result normal?

- YES >> GO TO 2
NO >> Check harness between battery and starter motor for open circuit.

2.CHECK BATTERY CABLE (VOLTAGE DROP TEST)

1. Shift the transmission into P (Park) or N (Neutral).
2. Check voltage between battery positive terminal and starter motor connector F27 terminal B while cranking the engine.

(+)	(--) Terminal		Condition	Voltage (Approx.)
	Connector	Terminal		
Battery (+) terminal	F27	B	While cranking the engine	Less than 0.5V

Is the inspection result normal?

- YES >> GO TO 3
NO >> Check harness between the battery and the starter motor for high resistance.

3.CHECK GROUND CIRCUIT STATUS (VOLTAGE DROP TEST)

Check voltage between starter motor case and battery negative terminal while cranking the engine.

(+)	(-)	Condition	Voltage (Approx.)
Starter motor case	Battery (-) terminal	While cranking the engine	Less than 0.5V

Is the inspection result normal?

- YES >> Terminal B circuit is OK. Further inspection is necessary. Refer to [STR-10, "Work Flow \(With GR8-1200 NI\)"](#) or [STR-14, "Work Flow \(Without GR8-1200 NI\)"](#).
NO >> Check the starter motor case to engine mounting for high resistance.

S CONNECTOR CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

S CONNECTOR CIRCUIT

Description

INFOID:0000000011146274

Terminal "S" is the power supply for the starter motor magnetic switch. Terminal S is supplied with power when the ignition switch is turned to the START position while the selector lever is in the P (Park) or N (Neutral) position.

A

STR

Diagnosis Procedure

INFOID:0000000011146275

C

Regarding Wiring Diagram information, refer to [STR-6, "Wiring Diagram"](#).

D

CAUTION:

Perform diagnosis under the condition that engine cannot start by the following procedure.

E

1. Remove fuel pump fuse.
2. Crank or start the engine (where possible) until the fuel pressure is released.

F

1.CHECK STARTER MOTOR MAGNETIC SWITCH CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect starter motor connector F28.
3. Shift transmission into park or neutral.
4. Check voltage between starter motor connector F28 terminal S and ground with the ignition in START.

G

Connector	(+)	(-)	Condition	Voltage (Approx.)
Connector	Terminal	Terminal		
F28	S	Ground	Ignition switch in START position	Battery voltage

H

Is the inspection result normal?

I

YES >> Magnetic switch circuit is OK. Further inspection is necessary. Refer to [STR-10, "Work Flow \(With GR8-1200 NI\)"](#) or [STR-14, "Work Flow \(Without GR8-1200 NI\)"](#).

J

NO >> GO TO 2

K

2.CHECK CONNECTOR

L

1. Turn ignition switch OFF.
2. Check the IPDM E/R connector F17 and starter motor connector F28 for damage, bent pins and loose connections.

M

Is the inspection result normal?

N

YES >> GO TO 3

O

NO >> Repair the terminal and connector.

P

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect IPDM E/R connector F17 and starter motor connector F28.
2. Check continuity between starter motor connector F28 terminal S and IPDM E/R connector F17 terminal 51.

Connector	Terminal	Connector	Terminal	Continuity
Connector	Terminal	Connector	Terminal	Continuity
F28	S	F17	51	Yes

3. Check continuity between starter motor connector F28 terminal S and ground.

Connector	Terminal	—	Continuity
Connector	Terminal	Ground	Continuity
F28	S	—	No

Is the inspection result normal?

YES >> Further inspection is necessary. Refer to [STR-10, "Work Flow \(With GR8-1200 NI\)"](#) or [STR-14, "Work Flow \(Without GR8-1200 NI\)"](#).

NO >> Repair the harness.

STARTING SYSTEM

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

STARTING SYSTEM

Symptom Table

INFOID:000000011146276

Symptom	Reference
No normal cranking	Refer to STR-10, "Work Flow (With GR8-1200 NI)" or STR-14, "Work Flow (Without GR8-1200 NI)".
Starter motor does not rotate	

STARTER MOTOR


< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION STARTER MOTOR

Exploded View

INFOID:0000000011146277

STR

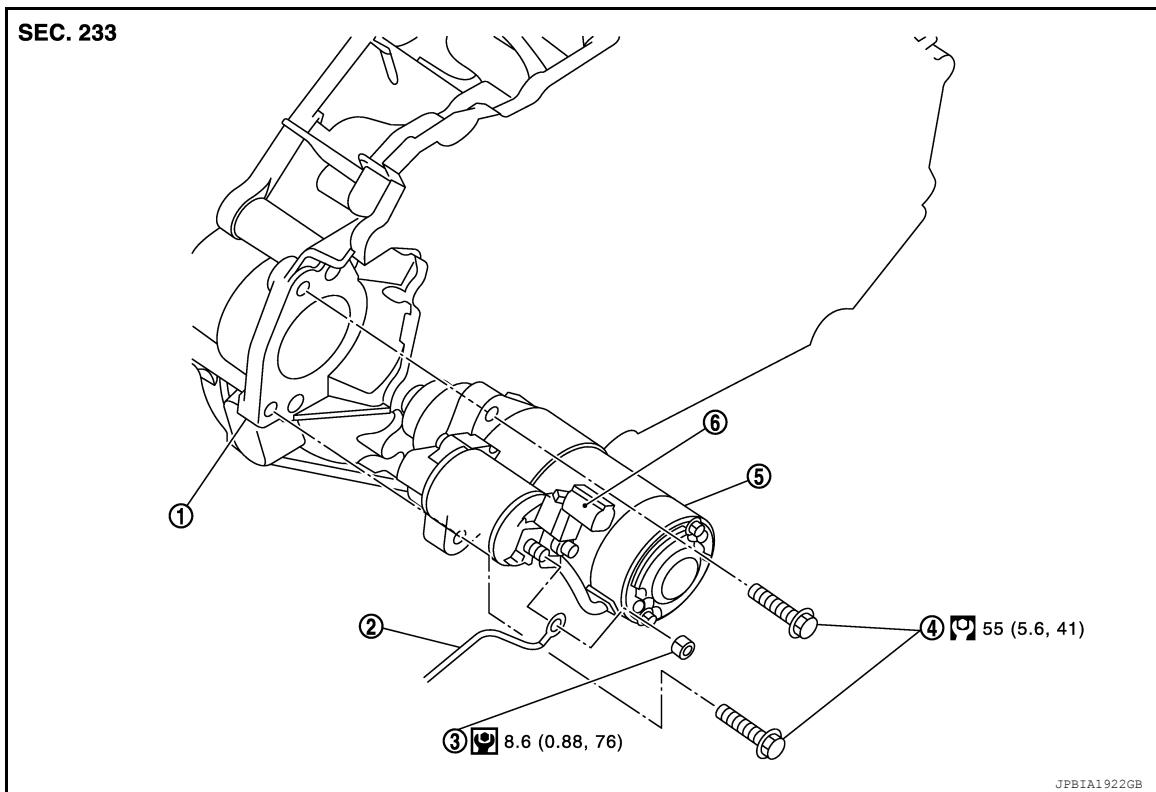

- 1. Converter housing
- 2. "B" terminal harness
- 3. Starter motor "B" terminal nut
- 4. Starter motor bolt
- 5. Starter motor
- 6. "S" connector

Removal and Installation

INFOID:0000000011146278

NOTE:

When removing components such as hoses, tubes/ lines, etc., cap or plug openings to prevent fluid from spilling.

REMOVAL

1. Remove the engine room cover. Refer to [EM-23, "Removal and Installation"](#).
2. Remove the battery tray and battery tray support. Refer to [PG-101, "Removal and Installation"](#).
3. Remove CVT water hose A. Refer to [TM-208, "Exploded View"](#).
4. Disconnect the "S" connector, and the "B" terminal harness.
5. Remove the starter motor bolts, then remove the starter motor.

INSTALLATION

Installation is in the reverse order of removal.

STARTER MOTOR

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

STARTER MOTOR

Starter

INFOID:000000011146279

Application		VQ35DE	
		For USA and Canada	For Mexico
Type*		Mitsubishi M000TB0271ZC	Mitsubishi M000TA0073ZC
		Reduction gear type	
System voltage		12V	
No-load	Terminal voltage	11V	
	Current	Less than 90A	
	Revolution	More than 2,370 rpm	More than 2,400 rpm

*: Always check with the Parts Department for the latest parts information.