

# SECTION **SEC**

## SECURITY CONTROL SYSTEM

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

### CONTENTS

<p><b>WITH INTELLIGENT KEY SYSTEM</b></p> <p><b>PRECAUTION</b> ..... 4</p> <p><b>PRECAUTIONS</b> ..... 4</p> <p style="padding-left: 20px;">Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....4</p> <p style="padding-left: 20px;">Precaution for Procedure without Cowl Top Cover.....4</p> <p><b>SYSTEM DESCRIPTION</b> ..... 5</p> <p><b>COMPONENT PARTS</b> ..... 5</p> <p style="padding-left: 20px;">Component Parts Location .....5</p> <p style="padding-left: 20px;">Component Description .....6</p> <p style="padding-left: 20px;">A/T Shift Selector (Detention Switch) .....6</p> <p style="padding-left: 20px;">BCM .....6</p> <p style="padding-left: 20px;">ECM .....7</p> <p style="padding-left: 20px;">IPDM E/R .....7</p> <p style="padding-left: 20px;">NATS Antenna Amp. ....7</p> <p style="padding-left: 20px;">TCM .....7</p> <p style="padding-left: 20px;">Combination Meter .....7</p> <p style="padding-left: 20px;">Door Switch .....7</p> <p style="padding-left: 20px;">Hood Switch .....7</p> <p style="padding-left: 20px;">Inside Key Antenna .....7</p> <p style="padding-left: 20px;">Intelligent Key .....7</p> <p style="padding-left: 20px;">Push-button Ignition Switch .....8</p> <p style="padding-left: 20px;">Remote Keyless Entry Receiver .....8</p> <p style="padding-left: 20px;">Security Indicator Lamp .....8</p> <p style="padding-left: 20px;">Starter Control Relay .....8</p> <p style="padding-left: 20px;">Starter Relay .....8</p> <p style="padding-left: 20px;">Stop Lamp Switch .....8</p> <p style="padding-left: 20px;">Transmission Range Switch .....8</p> <p style="padding-left: 20px;">Vehicle Information Display .....8</p> <p><b>SYSTEM</b> ..... 9</p> <p><b>INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION</b> .....9</p> <p style="padding-left: 20px;">INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Diagram .....9</p>	<p>INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Description ..... 9</p> <p><b>INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS...12</b></p> <p style="padding-left: 20px;">INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS : System Diagram .....13</p> <p style="padding-left: 20px;">INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS : System Description .....13</p> <p><b>VEHICLE SECURITY SYSTEM</b> .....15</p> <p style="padding-left: 20px;">VEHICLE SECURITY SYSTEM : System Diagram .....15</p> <p style="padding-left: 20px;">VEHICLE SECURITY SYSTEM : System Description .....15</p> <p><b>DIAGNOSIS SYSTEM (BCM)</b> .....19</p> <p><b>COMMON ITEM</b> .....19</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) .....19</p> <p><b>INTELLIGENT KEY</b> .....20</p> <p style="padding-left: 20px;">INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY) .....20</p> <p><b>THEFT ALM</b> .....24</p> <p style="padding-left: 20px;">THEFT ALM : CONSULT Function (BCM - THEFT) .....24</p> <p><b>IMMU</b> .....25</p> <p style="padding-left: 20px;">IMMU : CONSULT Function (BCM - IMMU) .....25</p> <p><b>DIAGNOSIS SYSTEM (IPDM E/R)</b> .....27</p> <p style="padding-left: 20px;">CONSULT Function (IPDM E/R) .....27</p> <p><b>ECU DIAGNOSIS INFORMATION</b> .....29</p> <p><b>ECM, IPDM E/R, BCM</b> .....29</p> <p style="padding-left: 20px;">List of ECU Reference .....29</p> <p><b>WIRING DIAGRAM</b> .....30</p> <p><b>SECURITY CONTROL SYSTEM</b> .....30</p> <p style="padding-left: 20px;">Wiring Diagram .....30</p>
---	--

**SEC**

<b>BASIC INSPECTION</b> .....	46	Diagnosis Procedure .....	70
		Component Inspection .....	71
<b>DIAGNOSIS AND REPAIR WORK FLOW</b> .....	46	<b>B2557 VEHICLE SPEED</b> .....	72
Work Flow .....	46	DTC Logic .....	72
		Diagnosis Procedure .....	72
<b>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT</b> .....	49	<b>B2601 SHIFT POSITION</b> .....	73
<b>ECM</b> .....	49	DTC Logic .....	73
ECM : Description .....	49	Diagnosis Procedure .....	73
ECM : Work Procedure .....	49	Component Inspection .....	75
<b>BCM</b> .....	49	<b>B2602 SHIFT POSITION</b> .....	76
BCM : Description .....	49	DTC Logic .....	76
BCM : Work Procedure .....	49	Diagnosis Procedure .....	76
		Component Inspection .....	77
<b>DTC/CIRCUIT DIAGNOSIS</b> .....	51	<b>B2603 SHIFT POSITION</b> .....	79
<b>P1610 LOCK MODE</b> .....	51	DTC Logic .....	79
Description .....	51	Diagnosis Procedure .....	79
DTC Logic .....	51	Component Inspection .....	81
Diagnosis Procedure .....	51	<b>B2604 SHIFT POSITION</b> .....	83
<b>P1611 ID DISCORD, IMMU-ECM</b> .....	52	DTC Logic .....	83
DTC Logic .....	52	Diagnosis Procedure .....	83
Diagnosis Procedure .....	52	<b>B2605 SHIFT POSITION</b> .....	85
<b>P1612 CHAIN OF ECM-IMMU</b> .....	53	DTC Logic .....	85
DTC Logic .....	53	Diagnosis Procedure .....	85
Diagnosis Procedure .....	53	<b>B2608 STARTER RELAY</b> .....	87
<b>P1614 CHAIN OF IMMU-KEY</b> .....	54	DTC Logic .....	87
DTC Logic .....	54	Diagnosis Procedure .....	87
Diagnosis Procedure .....	54	<b>B260F ENGINE STATUS</b> .....	89
<b>B2192 ID DISCORD, IMMU-ECM</b> .....	58	Description .....	89
DTC Logic .....	58	DTC Logic .....	89
Diagnosis Procedure .....	58	Diagnosis Procedure .....	89
<b>B2193 CHAIN OF ECM-IMMU</b> .....	59	<b>B261B REMOTE ENGINE START</b> .....	90
DTC Logic .....	59	DTC Logic .....	90
Diagnosis Procedure .....	59	Diagnosis Procedure .....	90
<b>B2195 ANTI-SCANNING</b> .....	60	<b>B26F3 STARTER CONTROL RELAY</b> .....	91
DTC Logic .....	60	DTC Logic .....	91
Diagnosis Procedure .....	60	Diagnosis Procedure .....	91
<b>B2196 DONGLE UNIT</b> .....	61	<b>B26F4 STARTER CONTROL RELAY</b> .....	92
Description .....	61	DTC Logic .....	92
DTC Logic .....	61	Diagnosis Procedure .....	92
Diagnosis Procedure .....	61	<b>B26F7 BCM</b> .....	93
<b>B2198 NATS ANTENNA AMP.</b> .....	63	DTC Logic .....	93
DTC Logic .....	63	Diagnosis Procedure .....	93
Diagnosis Procedure .....	63	<b>B26F8 BCM</b> .....	94
<b>B2555 STOP LAMP</b> .....	67	DTC Logic .....	94
DTC Logic .....	67	Diagnosis Procedure .....	94
Diagnosis Procedure .....	67	<b>B26F9 CRANKING REQUEST CIRCUIT</b> .....	95
Component Inspection .....	68	DTC Logic .....	95
<b>B2556 PUSH-BUTTON IGNITION SWITCH</b> ....	70	Diagnosis Procedure .....	95
DTC Logic .....	70		

<b>B26FA CRANKING REQUEST CIRCUIT</b> .....	<b>97</b>	<b>SECURITY INDICATOR LAMP</b> .....	<b>124</b>	<b>A</b>
DTC Logic .....	97	Component Function Check .....	124	
Diagnosis Procedure .....	97	Diagnosis Procedure .....	124	
<b>B26FC KEY REGISTRATION</b> .....	<b>99</b>	<b>SYMPTOM DIAGNOSIS</b> .....	<b>126</b>	<b>B</b>
DTC Logic .....	99	<b>ENGINE DOES NOT START WHEN INTELLI-</b>		
Diagnosis Procedure .....	99	<b>GENENT KEY IS INSIDE OF VEHICLE</b> .....	<b>126</b>	<b>C</b>
<b>B26FE HOOD SWITCH</b> .....	<b>100</b>	Description .....	126	
DTC Logic .....	100	Diagnosis Procedure .....	126	
Diagnosis Procedure .....	100	<b>SECURITY INDICATOR LAMP DOES NOT</b>		<b>D</b>
Component Inspection .....	101	<b>TURN ON OR BLINK</b> .....	<b>127</b>	<b>E</b>
<b>B209F CRANKING REQUEST CIRCUIT</b> .....	<b>103</b>	Description .....	127	
DTC Logic .....	103	Diagnosis Procedure .....	127	
Diagnosis Procedure .....	103	<b>VEHICLE SECURITY SYSTEM CANNOT BE</b>		<b>F</b>
<b>B20A0 CRANKING REQUEST CIRCUIT</b> .....	<b>105</b>	<b>SET</b> .....	<b>128</b>	<b>G</b>
DTC Logic .....	105	<b>INTELLIGENT KEY</b> .....	<b>128</b>	<b>H</b>
Diagnosis Procedure .....	105	INTELLIGENT KEY : Description .....	128	
<b>B210B STARTER CONTROL RELAY</b> .....	<b>107</b>	INTELLIGENT KEY : Diagnosis Procedure .....	128	<b>I</b>
DTC Logic .....	107	<b>DOOR REQUEST SWITCH</b> .....	<b>128</b>	<b>J</b>
Diagnosis Procedure .....	107	DOOR REQUEST SWITCH : Description .....	128	
<b>B210C STARTER CONTROL RELAY</b> .....	<b>108</b>	DOOR REQUEST SWITCH : Diagnosis Proce-		<b>SEC</b>
DTC Logic .....	108	dure .....	128	<b>L</b>
Diagnosis Procedure .....	108	<b>DOOR KEY CYLINDER</b> .....	<b>129</b>	<b>M</b>
<b>B210D STARTER RELAY</b> .....	<b>110</b>	DOOR KEY CYLINDER : Description .....	129	<b>N</b>
DTC Logic .....	110	DOOR KEY CYLINDER : Diagnosis Procedure ...	129	<b>O</b>
Diagnosis Procedure .....	110	<b>VEHICLE SECURITY ALARM DOES NOT</b>		<b>P</b>
<b>B210E STARTER RELAY</b> .....	<b>112</b>	<b>ACTIVATE</b> .....	<b>130</b>	
DTC Logic .....	112	Description .....	130	
Diagnosis Procedure .....	112	Diagnosis Procedure .....	130	
<b>B210F SHIFT POSITION/CLUTCH INTER-</b>		<b>PANIC ALARM FUNCTION DOES NOT OP-</b>		
<b>LOCK SWITCH</b> .....	<b>114</b>	<b>ERATE</b> .....	<b>131</b>	
DTC Logic .....	114	Description .....	131	
Diagnosis Procedure .....	114	Diagnosis Procedure .....	131	
<b>B2110 SHIFT POSITION/CLUTCH INTER-</b>		<b>REMOTE ENGINE START FUNCTION DOES</b>		
<b>LOCK SWITCH</b> .....	<b>116</b>	<b>NOT OPERATE</b> .....	<b>132</b>	
DTC Logic .....	116	Description .....	132	
Diagnosis Procedure .....	116	Diagnosis Procedure .....	132	
<b>HEADLAMP FUNCTION</b> .....	<b>118</b>	<b>REMOVAL AND INSTALLATION</b> .....	<b>133</b>	
Component Function Check .....	118	<b>NATS ANTENNA AMP.</b> .....	<b>133</b>	
Diagnosis Procedure .....	118	Removal and Installation .....	133	
<b>HOOD SWITCH</b> .....	<b>119</b>	<b>PUSH-BUTTON IGNITION SWITCH</b> .....	<b>134</b>	
Component Function Check .....	119	Exploded View .....	134	
Diagnosis Procedure .....	119	Removal and Installation .....	134	
Component Inspection .....	120	<b>HOOD SWITCH</b> .....	<b>135</b>	
<b>HORN FUNCTION</b> .....	<b>121</b>	Removal and Installation .....	135	
Component Function Check .....	121			
Diagnosis Procedure .....	121			
Component Inspection .....	123			

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000009012692

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

**WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**


Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution for Procedure without Cowl Top Cover

INFOID:000000009012693

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

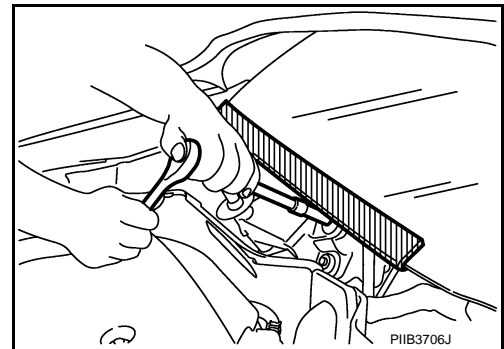

PIIB3706J

# COMPONENT PARTS

< SYSTEM DESCRIPTION >


[WITH INTELLIGENT KEY SYSTEM]

## SYSTEM DESCRIPTION

### COMPONENT PARTS

#### Component Parts Location

INFOID:000000009012694

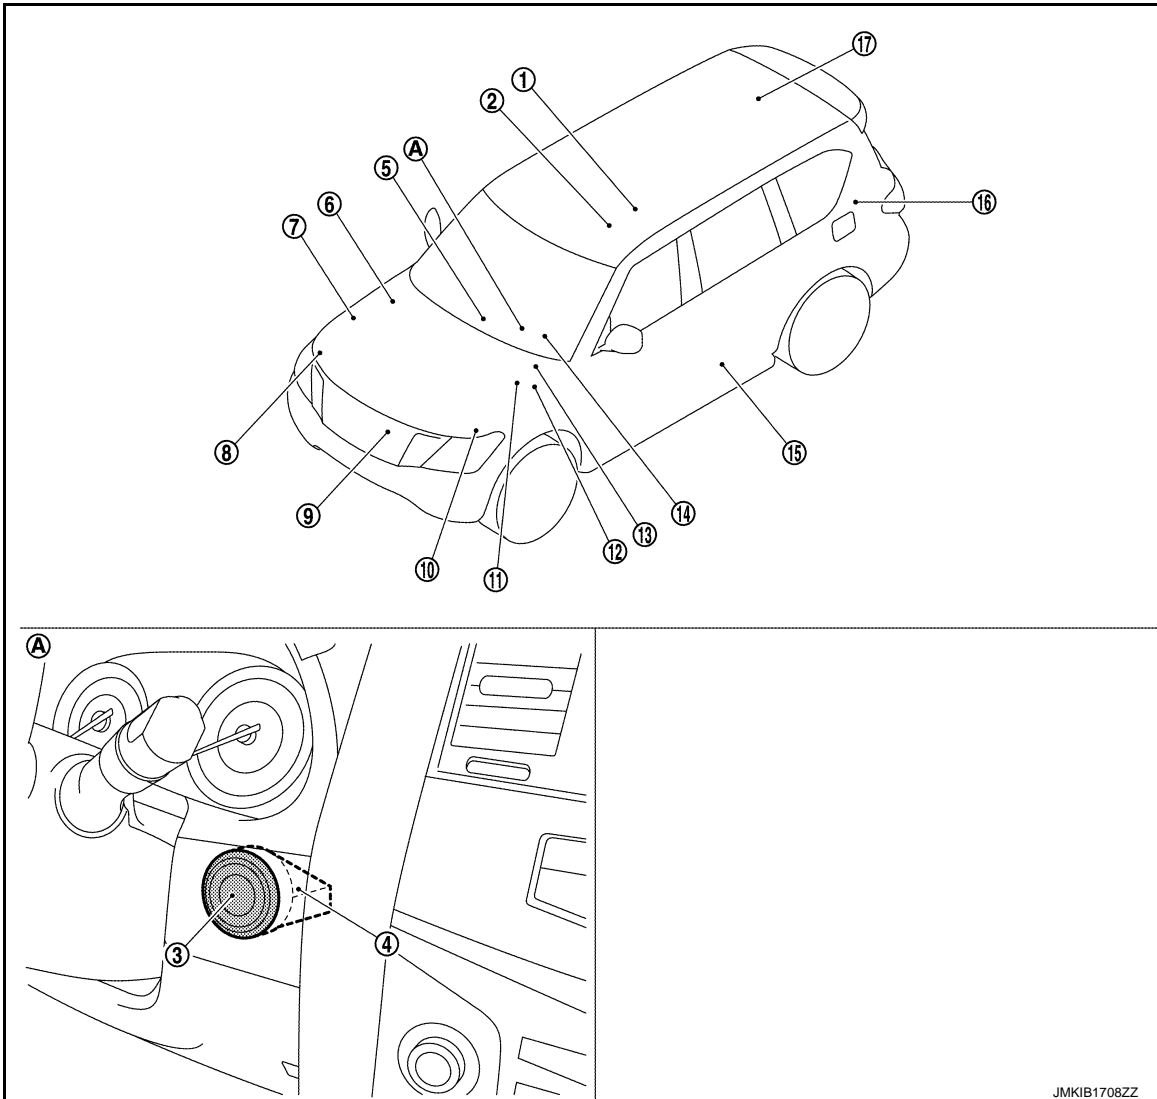

- |   |   |  |
|---|---|--|
| 1. Inside key antenna (console)<br>Refer to <a href="#">DLK-11, "DOOR LOCK SYSTEM : Component Parts Location"</a> .   | 2. A/T assembly<br>Refer to <a href="#">TM-11, "A/T CONTROL SYSTEM : Component Parts Location"</a> .                          | 3. Push-button ignition switch   |
| 4. NATS antenna amp.  | 5. Inside key antenna (instrument center)<br>Refer to <a href="#">DLK-11, "DOOR LOCK SYSTEM : Component Parts Location"</a> . | 6. IPDM E/R<br>Refer to <a href="#">PCS-4, "Component Parts Location"</a> .          |
| 7. ECM<br>Refer to <a href="#">EC-23, "Component Parts Location"</a> (for USA and CANADA), <a href="#">EC-593, "Component Parts Location"</a> (for MEXICO). | 8. Hood switch 1  | 9. Horn  |
| 10. Hood switch 2   | 11. ABS actuator and electric unit (control unit)<br>Refer to <a href="#">BRC-9, "Component Parts Location"</a> .             | 12. Stop lamp switch<br>Refer to <a href="#">EC-23, "Component Parts Location"</a> . |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

- |  |  |  |
|--|--|--|
| <p>13. BCM<br/>Refer to <a href="#">BCS-4, "BODY CONTROL SYSTEM : Component Parts Location"</a>.</p> <p>16. Remote keyless entry receiver<br/>Refer to <a href="#">DLK-11, "DOOR LOCK SYSTEM : Component Parts Location"</a>.</p> <p>A. Behind push-button ignition switch</p> | <p>14. Combination meter<br/>Refer to <a href="#">MWI-6, "METER SYSTEM : Component Parts Location"</a>.</p> <p>17. Inside key antenna (luggage room)<br/>Refer to <a href="#">DLK-11, "DOOR LOCK SYSTEM : Component Parts Location"</a>.</p> | <p>15. Front door switch (driver side)<br/>Refer to <a href="#">DLK-11, "DOOR LOCK SYSTEM : Component Parts Location"</a>.</p> |
|--|--|--|

## Component Description

INFOID:000000009012695

Component	Reference
A/T shift selector (detention switch)	<a href="#">SEC-6</a>
BCM	<a href="#">SEC-6</a>
ECM	<a href="#">SEC-7</a>
IPDM E/R	<a href="#">SEC-7</a>
NATS antenna amp.	<a href="#">SEC-7</a>
TCM	<a href="#">SEC-7</a>
Combination meter	<a href="#">SEC-7</a>
Door switch	<a href="#">SEC-7</a>
Hood switch	<a href="#">SEC-7</a>
Inside key antenna	<a href="#">SEC-7</a>
Intelligent Key	<a href="#">SEC-7</a>
Push-button ignition switch	<a href="#">SEC-8</a>
Remote keyless entry receiver	<a href="#">SEC-8</a>
Security indicator lamp	<a href="#">SEC-8</a>
Starter control relay	<a href="#">SEC-8</a>
Starter relay	<a href="#">SEC-8</a>
Stop lamp switch	<a href="#">SEC-8</a>
Transmission range switch	<a href="#">SEC-8</a>
Vehicle information display	<a href="#">SEC-8</a>

## A/T Shift Selector (Detention Switch)

INFOID:000000009012696

Detention switch detects that A/T shift selector is in the P position, and then transmits the signal to BCM and IPDM E/R.

BCM confirms the A/T shift selector position with the following 5 signals.

- P position signal from A/T shift selector (detention switch)
- P/N position signal from TCM
- P position signal from IPDM E/R (CAN)
- P/N position signal from IPDM E/R (CAN)
- P/N position signal from TCM (CAN)

IPDM E/R confirms the A/T shift selector position with the following 3 signals.

- P position signal from A/T shift selector (detention switch)
- P/N position signal from TCM
- P/N position signal from BCM (CAN)

## BCM

INFOID:000000009012697

BCM controls INTELLIGENT KEY SYSTEM (ENGINE START FUNCTION), INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS [IVIS (NATS)], and VEHICLE SECURITY SYSTEM.

# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

BCM performs the ID verification between BCM and Intelligent Key when the Intelligent Key is carried into the detection area of inside key antenna, and push-button ignition switch is pressed. If the ID verification result is OK, push-button ignition switch operation is available.

Then, when the power supply position is turned ON, BCM performs ID verification between BCM and ECM. If the ID verification result is OK, ECM can start engine.

## ECM

INFOID:000000009012698

ECM controls the engine.

When power supply position is turned ON, BCM starts communication with ECM and performs the ID verification between BCM and ECM.

If the verification result is OK, the engine can start. If the verification result is NG, the engine can not start.

## IPDM E/R

INFOID:000000009012699

IPDM E/R has starter relay and starter control relay inside. Starter relay and starter control relay are used for the engine starting function. IPDM E/R controls these relays while communicating with BCM.

## NATS Antenna Amp.

INFOID:000000009012700

The ID verification is performed between BCM and transponder in Intelligent Key via NATS antenna amp. when Intelligent Key backside is contacted to push-button ignition switch in case that Intelligent Key battery is discharged. If the ID verification result is OK, the operation of starting engine is available.

## TCM

INFOID:000000009012701

TCM transmits the shift position signal (P/N position) to BCM and IPDM E/R. And further, TCM transmits the shift position signal (P/N position) to BCM via CAN communication.

BCM confirms the A/T shift selector position with the following 5 signals.

- P position signal from A/T shift selector (detention switch)
- P/N position signal from TCM
- P position signal from IPDM E/R (CAN)
- P/N position signal from IPDM E/R (CAN)
- P/N position signal from TCM (CAN)

IPDM E/R confirms the A/T shift selector position with the following 3 signals.

- P position signal from A/T shift selector (detention switch)
- P/N position signal from TCM
- P/N position signal from BCM (CAN)

## Combination Meter

INFOID:000000009012702

Combination meter transmits the vehicle speed signal to BCM via CAN communication.

BCM also receives the vehicle speed signal from ABS actuator and electric unit (control unit) via CAN communication. BCM compares both signals to detect the vehicle speed.

## Door Switch

INFOID:000000009012703

Door switch detects door open/close condition and then transmits ON/OFF signal to BCM.

## Hood Switch

INFOID:000000009012704

Hood switch detects that hood is open, and then transmits the signal to IPDM E/R. IPDM E/R transmits hood switch signal to BCM via CAN communication. For models with remote engine starter function, two hood switches are installed.

## Inside Key Antenna

INFOID:000000009012705

Inside key antenna detects whether Intelligent Key is inside the vehicle, and transmits the signal to BCM. Three inside key antennas are installed in the instrument center, console and luggage room.

## Intelligent Key

INFOID:000000009012706

Each Intelligent key has an individual electronic ID, and transmits the ID signal by request from BCM.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# COMPONENT PARTS

[WITH INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Carrying the Intelligent Key whose ID is registered in BCM, the driver can perform door lock/unlock operation and push-button ignition switch operation.

### Push-button Ignition Switch

INFOID:000000009012707

Push-button ignition switch detects that push-button is pressed, and then transmits the signal to BCM. BCM changes the power supply position with the operation of push-button ignition switch. BCM maintains the power supply position status while push-button is not operated.

### Remote Keyless Entry Receiver

INFOID:000000009012708

Remote keyless entry receiver receives each button operation signal and electronic key ID signal from Intelligent Key, and then transmits the signal to BCM.

### Security Indicator Lamp

INFOID:000000009012709

Security indicator lamp is located on combination meter. Security indicator lamp blinks when power supply position is any position other than ON to warn that INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS [IVIS (NATS)] is on board.

### Starter Control Relay

INFOID:000000009012710

Engine starting system functions by controlling both starter relay and starter control relay. Both relays are integrated in IPDM E/R. Starter relay is controlled by BCM, and starter control relay is controlled by IPDM E/R on request from BCM. IPDM E/R transmits starter relay and starter control relay status signal to BCM via CAN communication.

### Starter Relay

INFOID:000000009012711

Engine starting system functions by controlling both starter relay and starter control relay. Both relays are integrated in IPDM E/R. Starter relay is controlled by BCM, and starter control relay is controlled by IPDM E/R on request from BCM. IPDM E/R transmits starter relay and starter control relay status signal to BCM via CAN communication.

### Stop Lamp Switch

INFOID:000000009012712

Stop lamp switch detects that brake pedal is depressed, and then transmits the signal to BCM.

### Transmission Range Switch

INFOID:000000009012713

Transmission range switch is integrated in A/T assembly, and detects the A/T shift selector position. TCM receives the transmission range switch signal and then transmits the P/N position signal to BCM and IPDM E/R.

BCM confirms the A/T shift selector position with the following 5 signals.

- P position signal from A/T shift selector (detention switch)
- P/N position signal from TCM
- P position signal from IPDM E/R (CAN)
- P/N position signal from IPDM E/R (CAN)
- P/N position signal from TCM (CAN)

IPDM E/R confirms the A/T shift selector position with the following 3 signals.

- P position signal from A/T shift selector (detention switch)
- P/N position signal from TCM
- P/N position signal from BCM (CAN)

### Vehicle Information Display

INFOID:000000009012714

Vehicle information display is integrated in combination meter. Various information and warnings regarding to the Intelligent Key System are displayed.




SYSTEM

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Diagram

INFOID:000000009012715

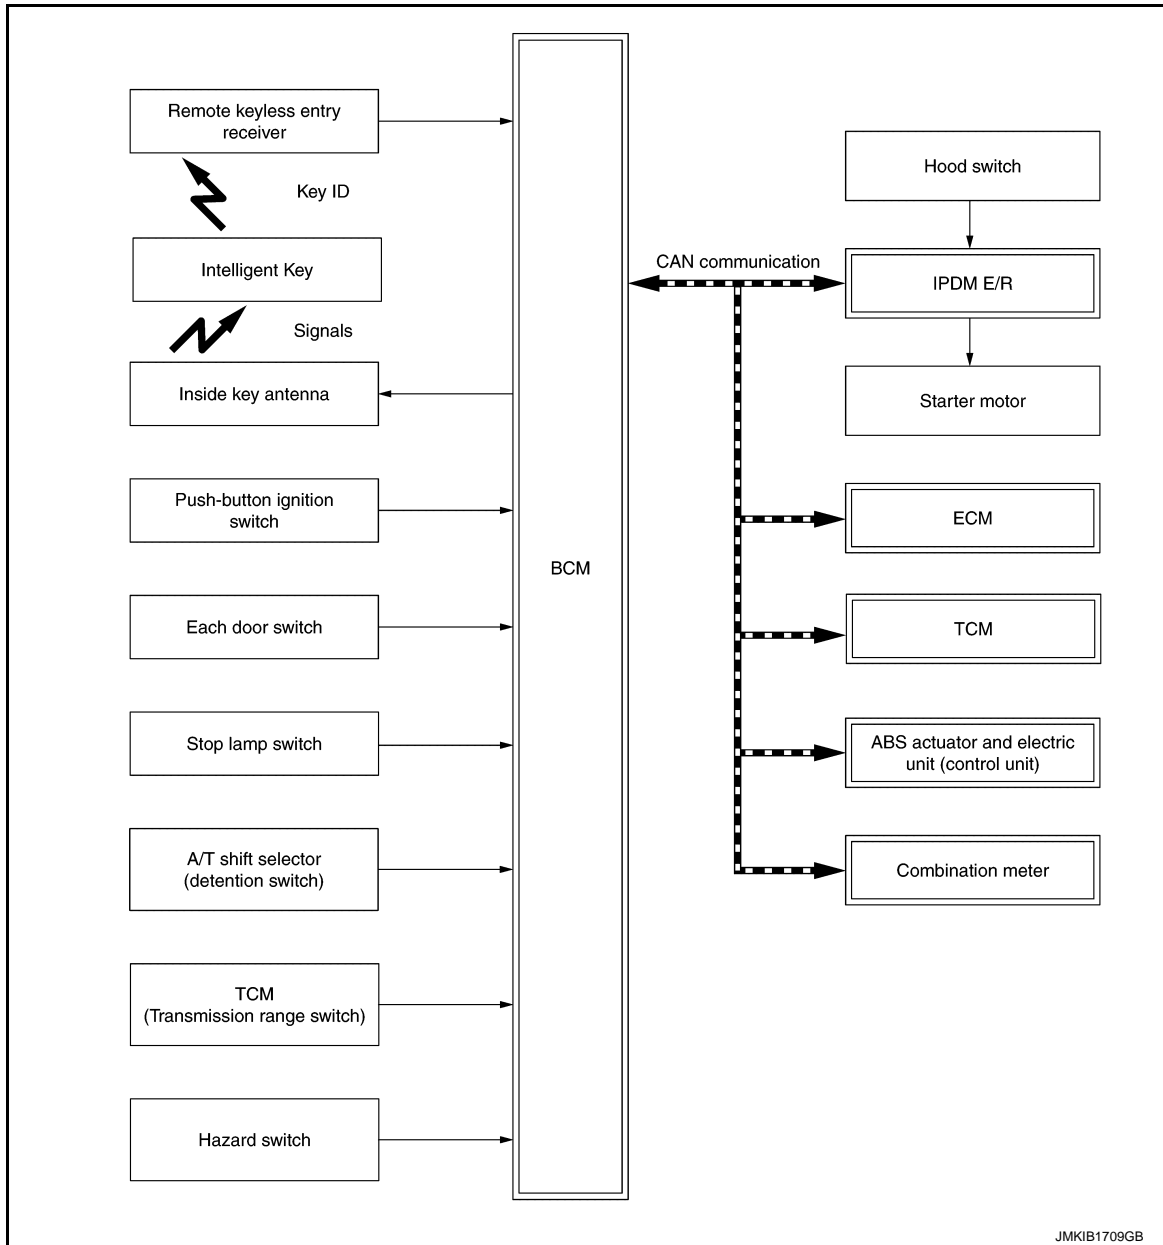

JMKIB1709GB

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Description

INFOID:000000009012716

SYSTEM DESCRIPTION

- The engine start function of Intelligent Key system makes it possible to start and stop the engine without using the key, based on the electronic ID verification. The electronic ID verification is performed between BCM and Intelligent Key when the push-button ignition switch is pressed while the Intelligent Key is within the detection area of inside key antenna.

**NOTE:**

The driver should carry the Intelligent Key at all times.

- Intelligent Key has 2 IDs [Intelligent Key ID and IVIS (NATS) ID]. It can perform the door lock/unlock operation and the push-button ignition switch operation when the registered Intelligent Key is carried.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

SEC

# SYSTEM

## < SYSTEM DESCRIPTION >

## [WITH INTELLIGENT KEY SYSTEM]

- When Intelligent Key battery is discharged, engine can be started by operating push-button ignition switch after contacting Intelligent Key backside to push-button ignition switch. At that time, the IVIS (NATS) ID verification is performed.
- If the ID is successfully verified, when push-button ignition switch is pressed, the engine can be started.
- Up to 4 Intelligent Keys can be registered (Including the standard Intelligent Key) upon request from the customer.

### NOTE:

Refer to [DLK-18. "INTELLIGENT KEY SYSTEM : System Description"](#) for any functions other than engine start function of Intelligent Key system.

## PRECAUTIONS FOR INTELLIGENT KEY SYSTEM

**The transponder [the chip for IVIS (NATS) ID verification] is integrated into the Intelligent Key. (For the conventional models, it is integrated into the mechanical key.) Therefore, ID verification cannot be performed by mechanical key only.**

**In that case, the IVIS (NATS) ID verification can be performed when Intelligent Key backside is contacted to push-button ignition switch. If verification result is OK, engine can be started.**

## OPERATION WHEN INTELLIGENT KEY IS CARRIED

1. When the push-button ignition switch is pressed, the BCM activates the inside key antenna and transmits the request signal to the Intelligent Key.
2. The Intelligent Key receives the request signal and transmits the Intelligent Key ID signal to the BCM.
3. BCM receives the Intelligent Key ID signal via remote keyless entry receiver and verifies it with the registered ID.
4. BCM turns ACC relay ON and transmits the ignition power supply ON signal to IPDM E/R.
5. IPDM E/R turns the ignition relay ON and starts the ignition power supply.
6. BCM detects that the selector lever position and brake pedal operating condition.
7. BCM transmits the starter request signal to IPDM E/R and turns the starter relay in IPDM E/R ON if BCM judges that the engine start condition\* is satisfied.
8. IPDM E/R turns the starter control relay ON when receiving the starter request signal.
9. Power supply is supplied through the starter relay and the starter control relay to operate the starter motor.

### CAUTION:

**If a malfunction is detected in the Intelligent Key system, the "KEY" warning lamp in the combination meter illuminates. At that time, the engine cannot be started.**

10. When BCM receives feedback signal from ECM indicating that the engine is started, the BCM transmits a stop signal to IPDM E/R and stops cranking by turning OFF the starter motor relay. (If engine start is unsuccessful, cranking stops automatically within 5 seconds.)

### CAUTION:

**When the Intelligent Key is carried outside of the vehicle (inside key antenna detection area) while the power supply is in the ACC or ON position, even if the engine start condition\* is satisfied, the engine cannot be started.**

\*: For the engine start condition, refer to "POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION".

## OPERATION RANGE

Engine can be started when Intelligent Key is inside the vehicle. However, sometimes engine may not start when Intelligent Key is on instrument panel or in glove box.

## ENGINE START OPERATION WHEN INTELLIGENT KEY IS CONTACTED TO PUSH-BUTTON IGNITION SWITCH

When Intelligent Key battery is discharged, the IVIS (NATS) ID verification between transponder in Intelligent Key and BCM is performed when Intelligent Key backside is contacted to push-button ignition switch. If the verification result is OK, engine can be started.

## POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION

The power supply position changing operation can be performed with the following operations.

### NOTE:

- When an Intelligent Key is within the detection area of inside key antenna and when Intelligent Key backside is contacted to push-button ignition switch, it is equivalent to the operations below.
- When starting the engine, the BCM monitors under the engine start conditions,

# SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

- Brake pedal operating condition
- Selector lever position
- Vehicle speed

Vehicle speed: less than 4 km/h (2.5 MPH)

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
LOCK → ACC	—	Not depressed	1
LOCK → ACC → ON	—	Not depressed	2
LOCK → ACC → ON → OFF	—	Not depressed	3
LOCK → START ACC → START ON → START	P or N position	Depressed	1
Engine is running → OFF	—	—	1

Vehicle speed: 4 km/h (2.5 MPH) or more

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
Engine is running → ACC	—	—	Emergency stop operation
Engine stall return operation while driving	N position	Not depressed	1

Emergency stop operation

- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times or more within 1.5 seconds.

## REMOTE ENGINE START FUNCTION

Remote engine start function enables engine to be started from vehicle outside by operating REMOTE ENGINE START button of Intelligent Key.

### Engine Start Procedures

Press LOCK button of Intelligent Key, and then within five seconds, press and hold REMOTE ENGINE START button of Intelligent Key for two seconds or more. Engine starts. Engine does not start while the vehicle is in the following status.

- All doors are UNLOCK or any door is open.
- Hood is open.
- A registered Intelligent Key is in passenger room.
- Shift position is other than P.
- Vehicle security alarm is in operation
- Hazard lamp is in operation.

### NOTE:

- Engine operation status described in the following 2 types
  - Normal engine run mode: Ordinary operation status of engine. Driving is allowed.
  - Remote engine run mode: Operation status of engine according to REMOTE ENGINE START button operation of Intelligent Key. Driving is not allowed.
- During remote engine run mode, the following display is indicated on information display in combination meter.



A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Display	Display ON condition	Display OFF condition
<div style="border: 1px solid black; padding: 10px; width: fit-content; margin: 0 auto;">   <p style="text-align: center; margin: 0;">BRAKE</p> <hr style="border: 0; border-top: 1px solid black; margin: 5px 0;"/> <p style="text-align: center; margin: 0;">PUSH BRAKE AND START BUTTON TO DRIVE</p> <p style="text-align: center; font-size: small; margin: 0;">JMKIB1003GB</p> </div>	<p>During remote engine run mode</p>	<p>Mode switch to normal engine run mode from remote engine run mode</p>

- While engine is in operation by Intelligent Key, engine status changes from remote engine run mode to normal engine run mode when push-button ignition switch is operated while brake pedal is depressed. The vehicle becomes available to drive.

**Engine Stop Procedures**

Press REMOTE ENGINE START button of Intelligent Key. Engine stops. Engine stops when the vehicle status changes to the following status.

- Ten minutes are passed since engine start.
- Push-button ignition switch is operated.
- Hood is open.
- Shift position is shifted to a position other than P.
- Vehicle security alarm starts to operate.

**NOTE:**

While engine is in operation by Intelligent Key, engine operation time can be extended for ten minutes. To extend engine operation time, press LOCK button of Intelligent Key, and then within five seconds, press and hold REMOTE ENGINE START button of Intelligent Key for two seconds or more.

**Operation Area**

The remote engine start operating range is approximately 60 m (197 ft.) from the vehicle.

**INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS**


# SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

## INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS : System Diagram

INFOID:000000009012717

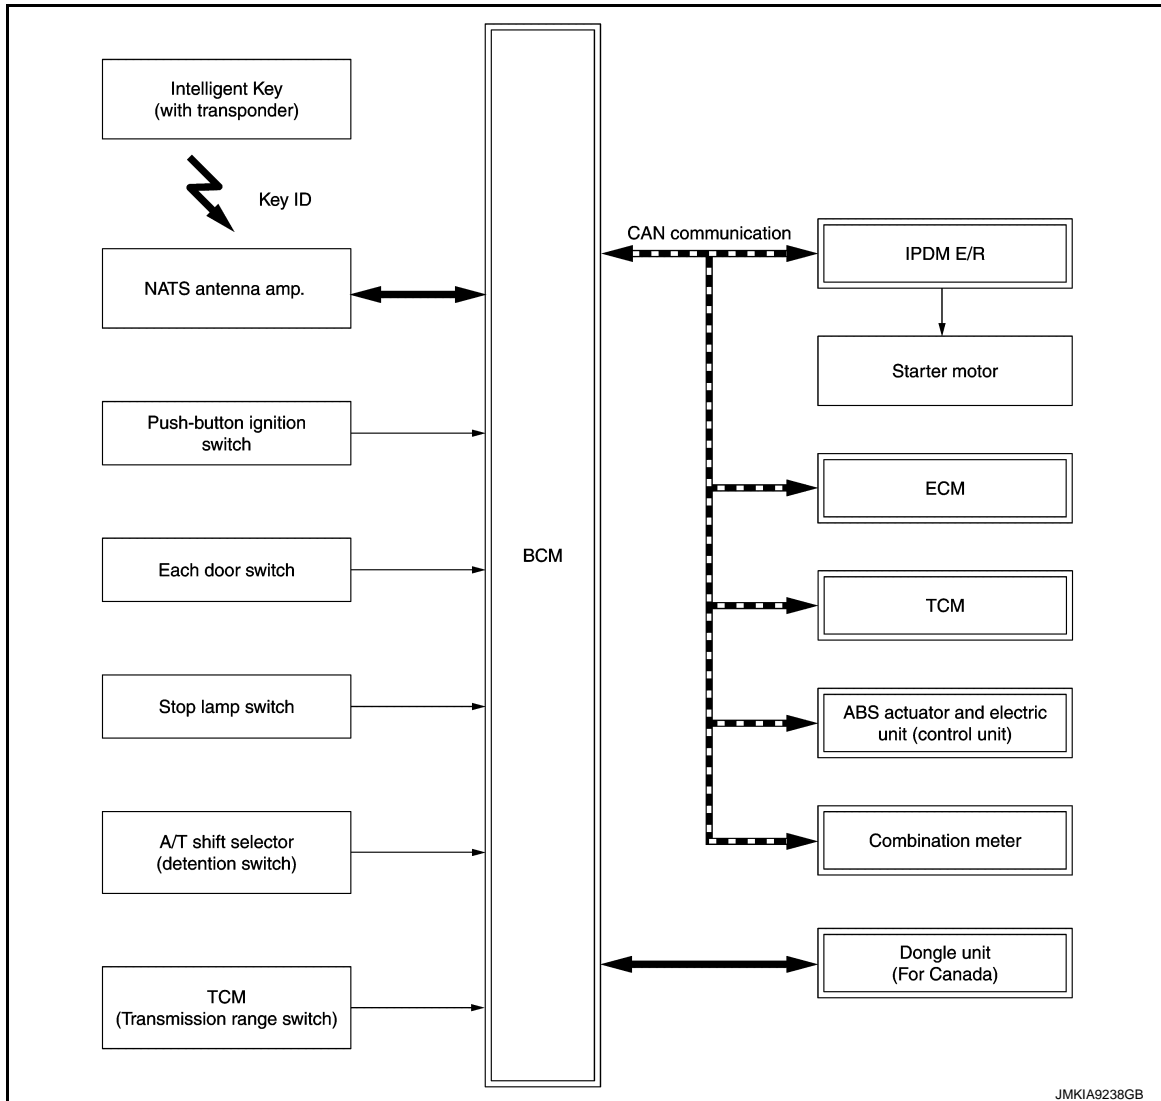

A  
B  
C  
D  
E  
F  
G  
H  
I  
J

SEC

## INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS : System Description

INFOID:000000009012718

### SYSTEM DESCRIPTION

- The INFINITI VEHICLE IMMOBILIZER SYSTEM-NATS [IVIS (NATS)] prevents the engine from being started by Intelligent Key whose ID is not registered to the vehicle (BCM). It has higher protection against auto theft involving the duplication of mechanical keys.
- The ignition key integrated in the Intelligent Key cannot start the engine. When the Intelligent Key battery is discharged, the IVIS (NATS) ID verification is performed between the transponder integrated with Intelligent Key and BCM via NATS antenna amp. when the Intelligent Key backside is contacted to push-button ignition switch. If the verification results are OK, the engine start operation can be performed by the push-button ignition switch operation.
- Locate the security indicator lamp and apply the anti-theft system equipment sticker that warns that the IVIS (NATS) is on board the model.
- Security indicator lamp always blinks when the power supply position is any position other than ON.
- Up to 4 Intelligent Keys can be registered (including the standard ignition key) upon request from the owner.
- Specified registration is required when replacing ECM, BCM or Intelligent Key.
- Possible symptom of IVIS (NATS) malfunction is "Engine cannot start". The engine can not be started because of other than IVIS (NATS) malfunction, so start the trouble diagnosis according to [SEC-46, "Work Flow"](#).
- If ECM other than genuine part is installed, the engine cannot be started. For ECM replacement procedure, refer to [EC-157, "Work Procedure"](#) (for USA and CANADA) or [EC-720, "Work Procedure"](#) (for MEXICO).

L  
M  
N  
O  
P

# SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

## PRECAUTIONS FOR KEY REGISTRATION

- The ID registration is a procedure that erases the current IVIS (NATS) ID once, and then reregisters a new ID. Therefore before starting the registration operation, collect all registered Intelligent Keys from the customer.
- When registering the Intelligent Key, perform only one procedure to simultaneously register both ID [IVIS (NATS) ID and Intelligent Key ID].

## SECURITY INDICATOR LAMP

- Warns that the vehicle is equipped with IVIS (NATS).
- Security indicator lamp always blinks when the power supply position is any position other than ON.

### NOTE:

Because security indicator lamp is highly efficient, the battery is barely affected.

## ENGINE START OPERATION WHEN INTELLIGENT KEY IS CONTACTED TO PUSH-BUTTON IGNITION SWITCH

1. When brake pedal is depressed while selector lever is in the P position, BCM activates NATS antenna amp. that is located behind push-button ignition switch.
2. When Intelligent Key (transponder built-in) backside is contacted to push-button ignition switch, BCM starts IVIS (NATS) ID verification between BCM and Intelligent Key (transponder built-in) via NATS antenna amp.
3. When the IVIS (NATS) ID verification result is OK, buzzer in combination meter sounds and BCM transmits the result to ECM.
4. BCM turns ACC relay ON and transmits ignition power supply ON signal to IPDM E/R.
5. IPDM E/R turns the ignition relay ON and starts the ignition power supply.
6. BCM detects that the selector lever position is P or N.
7. BCM transmits starter request signal to IPDM E/R and turns the starter relay in IPDM E/R ON if BCM judges that the engine start condition\* is satisfied.
8. IPDM E/R turns the starter control relay ON when receiving the starter request signal.
9. Power supply is supplied through the starter relay and the starter control relay to operate the starter motor.
10. When BCM receives feedback signal from ECM indicating that the engine is started, BCM transmits a stop signal to IPDM E/R and stops cranking by turning off the starter motor relay. (If engine start is unsuccessful, cranking stops automatically within 5 seconds.)

\*: For the engine start condition, refer to "POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION" below.

## POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION

The power supply position changing operation can be performed with the following operations.

### NOTE:

- When an Intelligent Key is within the detection area of inside key antenna and when Intelligent Key backside is contacted to push-button ignition switch, it is equivalent to the operations below.
- When starting the engine, the BCM monitors under the engine start conditions,
  - Brake pedal operating condition
  - Selector lever position
  - Vehicle speed

Vehicle speed: less than 4 km/h (2.5 MPH)

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
LOCK → ACC	—	Not depressed	1
LOCK → ACC → ON	—	Not depressed	2
LOCK → ACC → ON → OFF	—	Not depressed	3

# SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
LOCK → START ACC → START ON → START	P or N position	Depressed	1
Engine is running → OFF	—	—	1

Vehicle speed: 4 km/h (2.5 MPH) or more

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
Engine is running → ACC	—	—	Emergency stop operation
Engine stall return operation while driving	N position	Not depressed	1


Emergency stop operation

- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times or more within 1.5 seconds.

## VEHICLE SECURITY SYSTEM

### VEHICLE SECURITY SYSTEM : System Diagram

INFOID:000000009012719

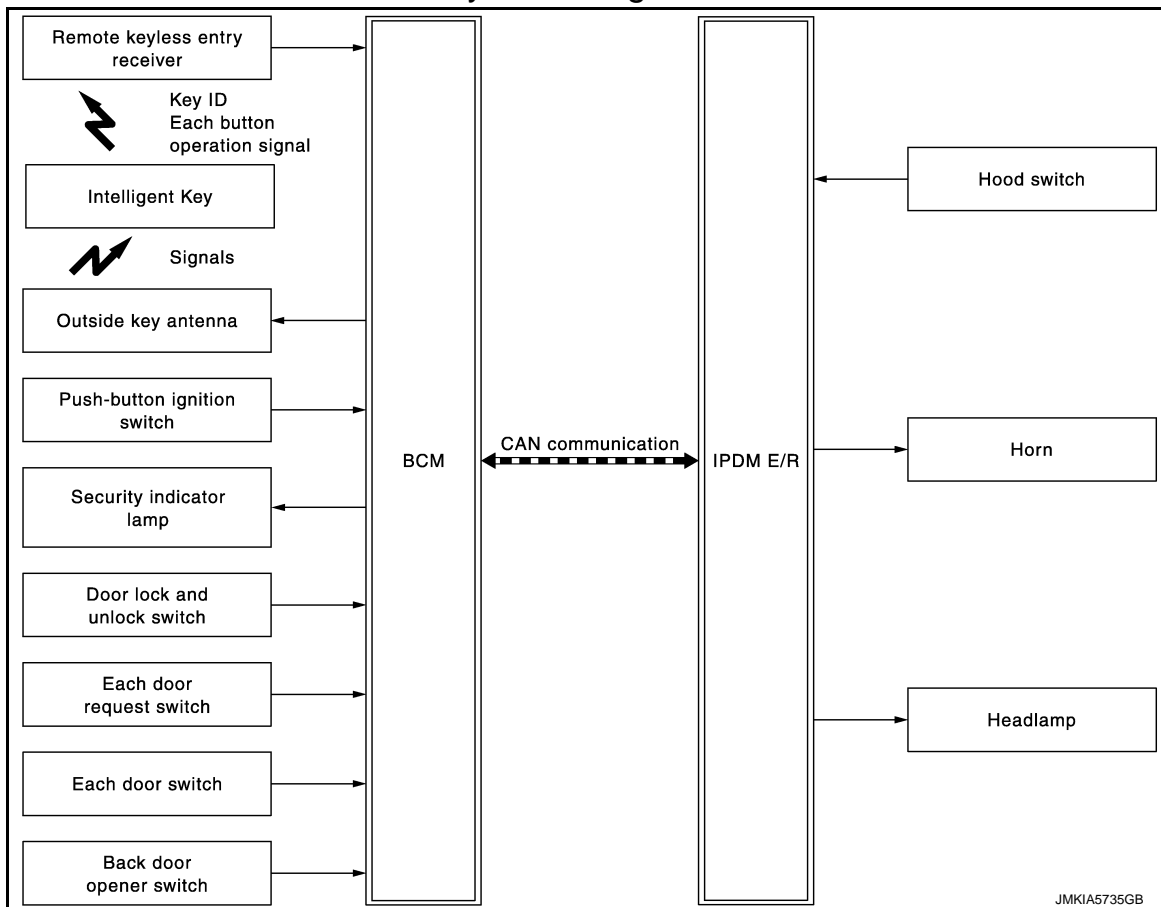

### VEHICLE SECURITY SYSTEM : System Description

INFOID:000000009012720

- The vehicle security system has two alarm functions (theft warning alarm and panic alarm), and reduces the possibility of a theft or mischief by activating horns and headlamps intermittently.

# SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >


- The panic alarm does not start when the theft warning alarm is activating, and the panic alarm stops when the theft warning alarm is activated.  
The priority of the functions are as per the following.

Priority	Function
1	Theft warning alarm
2	Panic alarm

## THEFT WARNING ALARM

- The theft warning alarm function activates horns and headlamps intermittently when BCM detects that any door or hood is opened by unauthorized means, while the system is in the ARMED state.
- Security indicator lamp on combination meter always blinks when power supply position is any position other than ON. Security indicator lamp blinking warns that the vehicle is equipped with a vehicle security system.

### Operation Flow

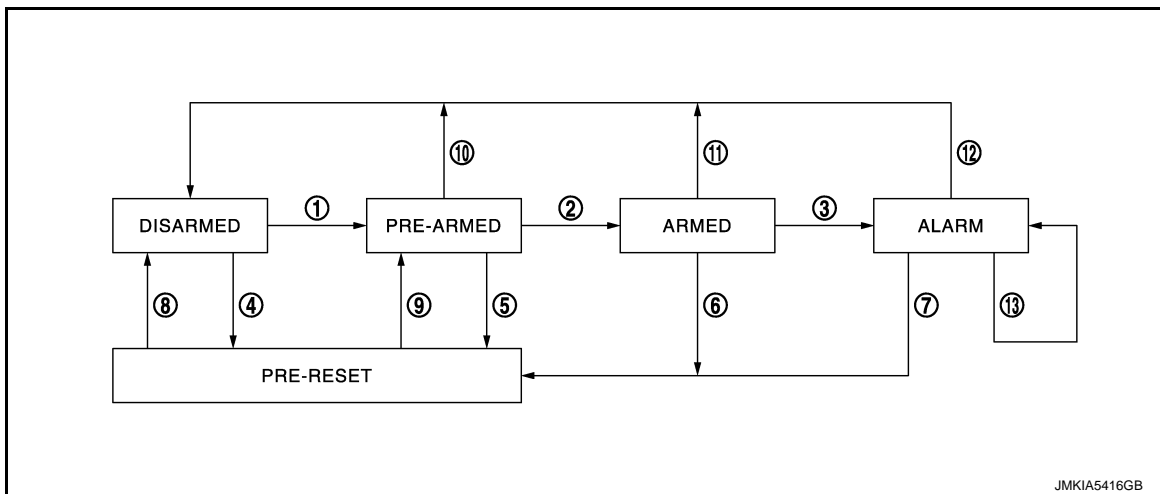

No.	System state	Switching condition					
		A	B				
1	DISARMED to PRE-ARMED	When all conditions of A and one condition of B is satisfied.	<table border="1"> <tr> <th>A</th> <th>B</th> </tr> <tr> <td> <ul style="list-style-type: none"> <li>Power supply position: OFF/LOCK</li> <li>All doors: Closed</li> <li>Hood: Closed</li> </ul> </td> <td>           All doors are locked by:           <ul style="list-style-type: none"> <li>Door key cylinder LOCK switch</li> <li>LOCK button of Intelligent Key</li> <li>Door request switch</li> </ul> </td> </tr> </table>	A	B	<ul style="list-style-type: none"> <li>Power supply position: OFF/LOCK</li> <li>All doors: Closed</li> <li>Hood: Closed</li> </ul>	All doors are locked by: <ul style="list-style-type: none"> <li>Door key cylinder LOCK switch</li> <li>LOCK button of Intelligent Key</li> <li>Door request switch</li> </ul>
A	B						
<ul style="list-style-type: none"> <li>Power supply position: OFF/LOCK</li> <li>All doors: Closed</li> <li>Hood: Closed</li> </ul>	All doors are locked by: <ul style="list-style-type: none"> <li>Door key cylinder LOCK switch</li> <li>LOCK button of Intelligent Key</li> <li>Door request switch</li> </ul>						
2	PRE-ARMED to ARMED	When all of the following conditions are satisfied for 30 seconds.	<table border="1"> <tr> <th>A</th> <th>B</th> </tr> <tr> <td> <ul style="list-style-type: none"> <li>Power supply position: OFF/LOCK</li> <li>All doors: Locked</li> <li>Hood: Closed</li> </ul> </td> <td></td> </tr> </table>	A	B	<ul style="list-style-type: none"> <li>Power supply position: OFF/LOCK</li> <li>All doors: Locked</li> <li>Hood: Closed</li> </ul>	
A	B						
<ul style="list-style-type: none"> <li>Power supply position: OFF/LOCK</li> <li>All doors: Locked</li> <li>Hood: Closed</li> </ul>							
3	ARMED to ALARM	When one condition of A and one condition of B are satisfied.	<table border="1"> <tr> <th>A</th> <th>B</th> </tr> <tr> <td>Intelligent Key: Not used</td> <td> <ul style="list-style-type: none"> <li>Any door: Open</li> <li>Hood: Open</li> </ul> </td> </tr> </table>	A	B	Intelligent Key: Not used	<ul style="list-style-type: none"> <li>Any door: Open</li> <li>Hood: Open</li> </ul>
A	B						
Intelligent Key: Not used	<ul style="list-style-type: none"> <li>Any door: Open</li> <li>Hood: Open</li> </ul>						
4	DISARMED to PRE-RESET	When all conditions of A and one condition of B is satisfied.	<table border="1"> <tr> <th>A</th> <th>B</th> </tr> <tr> <td> <ul style="list-style-type: none"> <li>Power supply position: OFF/LOCK</li> <li>All doors: Closed</li> <li>Hood: Open</li> </ul> </td> <td>           All doors are locked by:           <ul style="list-style-type: none"> <li>Door key cylinder LOCK switch</li> <li>LOCK button of Intelligent Key</li> <li>Door request switch</li> </ul> </td> </tr> </table>	A	B	<ul style="list-style-type: none"> <li>Power supply position: OFF/LOCK</li> <li>All doors: Closed</li> <li>Hood: Open</li> </ul>	All doors are locked by: <ul style="list-style-type: none"> <li>Door key cylinder LOCK switch</li> <li>LOCK button of Intelligent Key</li> <li>Door request switch</li> </ul>
A	B						
<ul style="list-style-type: none"> <li>Power supply position: OFF/LOCK</li> <li>All doors: Closed</li> <li>Hood: Open</li> </ul>	All doors are locked by: <ul style="list-style-type: none"> <li>Door key cylinder LOCK switch</li> <li>LOCK button of Intelligent Key</li> <li>Door request switch</li> </ul>						
5	PRE-ARMED to PRE-RESET	When one of the following conditions is satisfied.	<table border="1"> <tr> <th>A</th> <th>B</th> </tr> <tr> <td> <ul style="list-style-type: none"> <li>Hood: Open</li> </ul> </td> <td></td> </tr> </table>	A	B	<ul style="list-style-type: none"> <li>Hood: Open</li> </ul>	
A	B						
<ul style="list-style-type: none"> <li>Hood: Open</li> </ul>							
6	ARMED to PRE-RESET	No conditions.					
7	ALARM to PRE-RESET	No conditions.					



# SYSTEM

## < SYSTEM DESCRIPTION >

## [WITH INTELLIGENT KEY SYSTEM]

No.	System state	Switching condition	
8	PRE-RESET to DISARMED	When one of the following conditions is satisfied.	<ul style="list-style-type: none"> <li>• Power supply position: ACC/ON/CRANKING/RUN</li> <li>• Door key cylinder UNLOCK switch: ON</li> <li>• UNLOCK button of Intelligent Key: ON</li> <li>• Door request switch: ON</li> <li>• Back door opener switch: ON</li> <li>• UNLOCK switch of door lock and unlock switch: ON</li> <li>• Any door: Open</li> </ul>
9	PRE-RESET to PRE-ARMED	When all of the following conditions are satisfied.	<ul style="list-style-type: none"> <li>• Power supply position: OFF/LOCK</li> <li>• All doors: Closed</li> <li>• Hood: Closed</li> </ul>
10	PRE-ARMED to DISARMED	When one of the following condition is satisfied.	<ul style="list-style-type: none"> <li>• Power supply position: ACC/ON/CRANKING/RUN</li> <li>• Door key cylinder UNLOCK switch: ON</li> <li>• UNLOCK button of Intelligent Key: ON</li> <li>• AUTO BACK DOOR button of Intelligent Key: ON</li> <li>• Door request switch: ON</li> <li>• Back door opener switch: ON</li> <li>• Any door: Open</li> </ul>
11	ARMED to DISARMED	When one of the following condition is satisfied.	<ul style="list-style-type: none"> <li>• Power supply position: ACC/ON/CRANKING/RUN</li> <li>• Door key cylinder UNLOCK switch: ON</li> <li>• UNLOCK button of Intelligent Key: ON</li> <li>• AUTO BACK DOOR button of Intelligent Key: ON</li> <li>• Door request switch: ON</li> <li>• Back door opener switch: ON</li> </ul>
12	ALARM to DISARMED		
13	RE-ALARM	When one of the following condition is satisfied after the ALARM operation is finished.	<ul style="list-style-type: none"> <li>• Any door: Open</li> <li>• Hood: Open</li> </ul>

**NOTE:**

- BCM ignores the door key cylinder UNLOCK switch signal input for 1 second after the door key cylinder LOCK switch signal input.
- To lock/unlock all doors by operating remote controller button of Intelligent Key or door request switch, Intelligent Key must be within the detection area of outside key antenna. For details, refer to [DLK-18. "INTELLIGENT KEY SYSTEM : System Description"](#).
- To open back door by operating back door opener switch, Intelligent Key must be within the detection area of outside key antenna. For details, refer to [DLK-18. "INTELLIGENT KEY SYSTEM : System Description"](#).

**DISARMED Phase**

The vehicle security system is not set in the DISARMED phase. The vehicle security system stays in this phase while any door is open, because it is assumed that the owner is inside or nearby the vehicle. Security indicator lamp blinks every 2.4 seconds.

When the vehicle security system is reset, each phase switches to the DISARMED phase directly.

**PRE-ARMED Phase**

The PRE-ARMED phase is the transient state between the DISARMED phase and the ARMED phase. This phase is maintained for 30 seconds, so that the owner can reset the setting due to a mis-operation. This phase switches to the ARMED phase when vehicle conditions are not changed for 30 seconds. Security indicator lamp illuminates while being in this phase.

To reset the PRE-ARMED phase, refer to the switching condition of No. 10 in the table above.

**ARMED Phase**

The vehicle security system is set, and BCM monitors all necessary inputs. If any door or hood is opened without using Intelligent Key, vehicle security system switches to the ALARM phase. Security indicator lamp blinks every 2.4 seconds.

To reset the ARMED phase, refer to the switching condition of No. 11 in the table above.

**ALARM Phase**

BCM transmits "Theft Warning Horn Request" signal and "High Beam Request" signal intermittently to IPDM E/R via CAN communication. In this phase, horns and headlamps are activated intermittently for approximately 50 seconds to warn that the vehicle is accessed by unauthorized means. ON/OFF timing of horns and headlamps are synchronized. After 50 seconds, the vehicle security system returns to the ARMED phase. At this time, if BCM still detects unauthorized access to the vehicle, the system is switched to the ALARM phase again. This RE-ALARM operation is carried out a maximum of 2 times.

To cancel the ALARM operation, refer to the switching condition of No. 12 in the table above.

**NOTE:**

# SYSTEM

## < SYSTEM DESCRIPTION >

## [WITH INTELLIGENT KEY SYSTEM]

If a battery terminal is disconnected during the ALARM phase, theft warning alarm stops. But when the battery terminal is reconnected, theft warning alarm is activated again.

### PRE-RESET Phase

The PRE-RESET phase is the transient state between each phase and DISARMED phase. If only the condition of hood is not satisfied, the system switches to the PRE-RESET phase. Then, when any condition is changed, the system switches to the DISARMED phase or PRE-ARMED phase.

### PANIC ALARM

- The panic alarm function activates horns and headlamps intermittently when the owner presses the PANIC ALARM button of Intelligent Key outside the vehicle while the power supply position is OFF or LOCK.
- When BCM receives panic alarm signal from Intelligent Key, BCM transmits "Theft Warning Horn Request" signal and "High Beam Request" signal intermittently to IPDM E/R via CAN communication. To prevent the activation due to mis-operation of Intelligent Key by owner, the panic alarm function is activated when BCM receives the signal for 0.4 - 0.6 seconds.
- Panic alarm operation is maintained for 25 seconds.
- Panic alarm operation is cancelled when BCM receives one of the following signals.
  - LOCK button of Intelligent Key: ON
  - UNLOCK button of Intelligent Key: ON
  - PANIC ALARM button of Intelligent Key: Long pressed
  - Any door request switch: ON

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

#### COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000009814754

#### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM. Refer to <a href="#">BCS-57, "DTC Index"</a> .
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> <li>Read and save the vehicle specification.</li> <li>Write the vehicle specification when replacing BCM.</li> </ul>

#### SYSTEM APPLICATION

BCM can perform the following functions for each system.

#### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

x: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	x	x	x
Rear window defogger	REAR DEFOGGER		x	x
Warning chime	BUZZER		x	x
Interior room lamp timer	INT LAMP	x	x	x
Exterior lamp	HEAD LAMP	x	x	x
Wiper and washer	WIPER	x	x	x
Turn signal and hazard warning lamps	FLASHER	x	x	x
—	AIR CONDITONER*		x	x
<ul style="list-style-type: none"> <li>Intelligent Key system</li> <li>Engine start system</li> </ul>	INTELLIGENT KEY	x	x	x
Combination switch	COMB SW		x	
Body control system	BCM	x		
IVIS	IMMU	x	x	x
Interior room lamp battery saver	BATTERY SAVER	x	x	x
Back door	TRUNK		x	
Vehicle security system	THEFT ALM	x	x	x
RAP system	RETAINED PWR		x	
Signal buffer system	SIGNAL BUFFER		x	x
—	AIR PRESSURE MONITOR*	x	x	x

\*: This item is indicated, but not used.

#### FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

CONSULT screen item	Indication/Unit	Description	
Vehicle Speed	km/h	Vehicle speed of the moment a particular DTC is detected	
Odo/Trip Meter	km	Total mileage (Odometer value) of the moment a particular DTC is detected	
Vehicle Condition	SLEEP>LOCK	Power position status of the moment a particular DTC is detected	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK")
	SLEEP>OFF		While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)
	LOCK>ACC		While turning power supply position from "LOCK" to "ACC"
	ACC>ON		While turning power supply position from "ACC" to "IGN"
	RUN>ACC		While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)
	CRANK>RUN		While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)
	RUN>URGENT		While turning power supply position from "RUN" to "ACC" (Emergency stop operation)
	ACC>OFF		While turning power supply position from "ACC" to "OFF"
	OFF>LOCK		While turning power supply position from "OFF" to "LOCK"
	OFF>ACC		While turning power supply position from "OFF" to "ACC"
	ON>CRANK		While turning power supply position from "IGN" to "CRANKING"
	OFF>SLEEP		While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode
	LOCK>SLEEP		While turning BCM status from normal mode (Power supply position is "LOCK".) to low power consumption mode
	LOCK		Power supply position is "LOCK" (Ignition switch OFF with steering is locked.)
	OFF		Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.)
	ACC		Power supply position is "ACC" (Ignition switch ACC)
	ON		Power supply position is "IGN" (Ignition switch ON with engine stopped)
ENGINE RUN	Power supply position is "RUN" (Ignition switch ON with engine running)		
CRANKING	Power supply position is "CRANKING" (At engine cranking)		
IGN Counter	0 - 39	<p>The number of times that ignition switch is turned ON after DTC is detected</p> <ul style="list-style-type: none"> <li>• The number is 0 when a malfunction is detected now.</li> <li>• The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.</li> <li>• The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.</li> </ul>	

## INTELLIGENT KEY

### INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)

INFOID:000000009814756

## WORK SUPPORT

Monitor item	Description
INSIDE ANT DIAGNOSIS	This function allows inside key antenna self-diagnosis
LOCK/UNLOCK BY I-KEY	<p>Door lock/unlock function by door request switch mode can be changed to operation in this mode</p> <ul style="list-style-type: none"> <li>• On: Operate</li> <li>• Off: Non-operation</li> </ul>

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Monitor item	Description	
ENGINE START BY I-KEY	Engine start function mode can be changed to operation with this mode <ul style="list-style-type: none"> <li>• On: Operate</li> <li>• Off: Non-operation</li> </ul>	A
TRUNK/GLASS HATCH OPEN	Buzzer reminder function mode by back door opener switch can be changed to operation with this mode <ul style="list-style-type: none"> <li>• On: Operate</li> <li>• Off: Non-operation</li> </ul>	B
PANIC ALARM SET	Panic alarm button pressing time on Intelligent Key button can be selected from the following with this mode <ul style="list-style-type: none"> <li>• MODE 1: 0.5 sec.</li> <li>• MODE 2: Non-operation</li> <li>• MODE 3: 1.5 sec.</li> </ul>	C
TRUNK OPEN DELAY	Back door open button pressing to Intelligent Key button can be selected as per the following in this mode <ul style="list-style-type: none"> <li>• MODE 1: Press and hold</li> <li>• MODE 2: Press twice</li> <li>• MODE 3: Press and hold, or press twice</li> </ul>	D
LO- BATT OF KEY FOB WARN	Intelligent Key low battery warning mode can be changed to operation with this mode <ul style="list-style-type: none"> <li>• On: Operate</li> <li>• Off: Non-operation</li> </ul>	E
ANTI KEY LOCK IN FUNCTI	Key reminder function mode can be changed to operation with this mode <ul style="list-style-type: none"> <li>• On: Operate</li> <li>• Off: Non-operation</li> </ul>	F
HAZARD ANSWER BACK	Hazard reminder function mode by door request switch and Intelligent Key button can be selected from the following with this mode <ul style="list-style-type: none"> <li>• Lock Only: Door lock operation only</li> <li>• Unlock Only: Door unlock operation only</li> <li>• Lock/Unlock: Lock and unlock operation</li> <li>• Off: Non-operation</li> </ul>	G
ANS BACK I-KEY LOCK	Buzzer reminder function (lock operation) mode by door request switch can be selected from the following with this mode <ul style="list-style-type: none"> <li>• Horn Chirp: Sound horn</li> <li>• Buzzer: Sound Intelligent Key warning buzzer</li> <li>• Off: Non-operation</li> </ul>	H
ANS BACK I-KEY UNLOCK	Buzzer reminder function (unlock operation) mode by door request switch can be changed to operation with this mode <ul style="list-style-type: none"> <li>• On: Operate</li> <li>• Off: Non-operation</li> </ul>	I
SHORT CRANKING OUTPUT	Starter motor can operate during the times below <ul style="list-style-type: none"> <li>• 70 msec</li> <li>• 100 msec</li> <li>• 200 msec</li> </ul>	J
CONFIRM KEY FOB ID	It can be checked whether Intelligent Key ID code is registered or not in this mode	K
AUTO LOCK SET	Auto door lock operation time can be changed in this mode <ul style="list-style-type: none"> <li>• MODE 1: OFF</li> <li>• MODE 2: 30 sec.</li> <li>• MODE 3: 1 minute</li> <li>• MODE 4: 2 minutes</li> <li>• MODE 5: 3 minutes</li> <li>• MODE 6: 4 minutes</li> <li>• MODE 7: 5 minutes</li> </ul>	L
HORN WITH KEYLESS LOCK	Horn reminder function mode by Intelligent Key button can be selected from the following with this mode <ul style="list-style-type: none"> <li>• On: Operate</li> <li>• Off: Non-operation</li> </ul>	M

SEC

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Monitor item	Description
PW DOWN SET	Unlock button pressing time on Intelligent Key button can be selected from the following with this mode <ul style="list-style-type: none"> <li>• MODE 1: 3 sec.</li> <li>• MODE 2: Non-operation</li> <li>• MODE 3: 5 sec.</li> </ul>
WELCOME LIGHT SELECT	Welcome light function mode can be selected from the following with this mode <ul style="list-style-type: none"> <li>• Puddle/Outside Handle</li> <li>• Room lamp</li> <li>• Head &amp; Tail Lamps (this item is displayed, but cannot be used)</li> <li>• Heart Beat</li> </ul>
WELCOME LIGHT OP SET	Welcome light function mode can be changed to operation with this mode <ul style="list-style-type: none"> <li>• On: Operate</li> <li>• Off: Non-operation</li> </ul>

## SELF-DIAG RESULT

Refer to [BCS-57, "DTC Index"](#).

## DATA MONITOR

### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition
REQ SW -DR	Indicates [On/Off] condition of door request switch (driver side)
REQ SW -AS	Indicates [On/Off] condition of door request switch (passenger side)
REQ SW -BD/TR	Indicates [On/Off] condition of back door request switch
PUSH SW	Indicates [On/Off] condition of push-button ignition switch
CLUTCH SW	<b>NOTE:</b> This item is displayed, but cannot be monitored
BRAKE SW 1	Indicates [On/Off]* condition of stop lamp switch power supply
BRAKE SW 2	Indicates [On/Off] condition of stop lamp switch
DETE/CANCL SW	Indicates [On/Off] condition of P position
SFT PN/N SW	Indicates [On/Off] condition of P or N position
S/L -LOCK	<b>NOTE:</b> This item is displayed, but cannot be monitored
S/L -UNLOCK	<b>NOTE:</b> This item is displayed, but cannot be monitored
S/L RELAY -F/B	<b>NOTE:</b> This item is displayed, but cannot be monitored
UNLK SEN -DR	Indicates [On/Off] condition of driver door UNLOCK status
PUSH SW -IPDM	Indicates [On/Off] condition of push-button ignition switch
IGN RLY1 -F/B	Indicates [On/Off] condition of ignition relay 1
DETE SW -IPDM	Indicates [On/Off] condition of P position
SFT PN -IPDM	Indicates [On/Off] condition of P or N position
SFT P -MET	Indicates [On/Off] condition of P position
SFT N -MET	Indicates [On/Off] condition of N position
ENGINE STATE	Indicates [Stop/Stall/Crank/Run] condition of engine states
S/L LOCK-IPDM	<b>NOTE:</b> This item is displayed, but cannot be monitored
S/L UNLK-IPDM	<b>NOTE:</b> This item is displayed, but cannot be monitored
S/L RELAY-REQ	<b>NOTE:</b> This item is displayed, but cannot be monitored

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Monitor Item	Condition
VEH SPEED 1	Display the vehicle speed signal received from combination meter by numerical value [Km/h]
VEH SPEED 2	Display the vehicle speed signal received from ABS or VDC or TCM by numerical value [Km/h]
DOOR STAT-DR	Indicates [LOCK/READY/UNLK] condition of unlock sensor
DOOR STAT-AS	Indicates [LOCK/READY/UNLK] condition of passenger side door status
ID OK FLAG	Indicates [Set/Reset] condition of key ID
PRMT ENG STRT	Indicates [Set/Reset] condition of engine start possibility
PRMT RKE STRT	<b>NOTE:</b> This item is displayed, but cannot be monitored
TRNK/HAT MNTR	<b>NOTE:</b> This item is displayed, but cannot be monitored
RKE-LOCK	Indicates [On/Off] condition of LOCK signal from Intelligent Key
RKE-UNLOCK	Indicates [On/Off] condition of UNLOCK signal from Intelligent Key
RKE-TR/BD	<b>NOTE:</b> This item is displayed, but cannot be monitored
RKE-PANIC	Indicates [On/Off] condition of PANIC button of Intelligent Key
RKE-MODE CHG	Indicates [On/Off] condition of MODE CHANGE signal from Intelligent Key
RKE OPE COUN1	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing
RKE OPE COUN2	<b>NOTE:</b> This item is displayed, but cannot be monitored
SHFTLCK SLNID PWR SPLY	Indicates [On/Off] condition of shift lock solenoid

\*: OFF is displayed when brake pedal is depressed while brake switch power supply is OFF.

## ACTIVE TEST

Test item	Description
BATTERY SAVER	This test is able to check interior room lamp operation <ul style="list-style-type: none"> <li>• On: Operate</li> <li>• Off: Non-operation</li> </ul>
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation <ul style="list-style-type: none"> <li>• On: Operate</li> <li>• Off: Non-operation</li> </ul>
INSIDE BUZZER	This test is able to check warning chime in combination meter operation <ul style="list-style-type: none"> <li>• Take Out: Take away warning chime sounds when CONSULT screen is touched</li> <li>• Key: Key warning chime sounds when CONSULT screen is touched</li> <li>• Knob: OFF position warning chime sounds when CONSULT screen is touched</li> <li>• Off: Non-operation</li> </ul>
INDICATOR	This test is able to check warning lamp operation <ul style="list-style-type: none"> <li>• KEY ON: "KEY" Warning lamp illuminates when CONSULT screen is touched</li> <li>• KEY IND: "KEY" Warning lamp blinks when CONSULT screen is touched</li> <li>• Off: Non-operation</li> </ul>
INT LAMP	This test is able to check interior room lamp operation <ul style="list-style-type: none"> <li>• On: Operate</li> <li>• Off: Non-operation</li> </ul>

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Test item	Description
LCD	<p>This test is able to check meter display information</p> <ul style="list-style-type: none"> <li>• Engine start information displays when "BP N" on CONSULT screen is touched</li> <li>• Engine start information displays when "BP I" on CONSULT screen is touched</li> <li>• Key ID warning displays when "ID NG" on CONSULT screen is touched</li> <li>• ROTAT: This item is displayed, but cannot be monitored</li> <li>• P position warning displays when "SFT P" on CONSULT screen is touched</li> <li>• INSR: This item is displayed, but cannot be monitored</li> <li>• BATT: This item is displayed, but cannot be monitored</li> <li>• Take away through window warning displays when "NO KY" on CONSULT screen is touched</li> <li>• Take away warning display when "OUTKEY" on CONSULT screen is touched</li> <li>• OFF position warning display when "LK WN" on CONSULT screen is touched</li> </ul>
FLASHER	<p>This test is able to check security hazard lamp operation</p> <p>The hazard lamps are activated after "LH/RH/Off" on CONSULT screen is touched</p>
P RANGE	<p>This test is able to check A/T shift selector power supply</p> <ul style="list-style-type: none"> <li>• On: Operate</li> <li>• Off: Non-operation</li> </ul>
ENGINE SW ILLUMI	<p>This test is able to check push-button ignition switch illumination operation</p> <p>Push-ignition switch illumination illuminates when "ON" on CONSULT screen is touched</p>
LOCK INDICATOR	<p>This test is able to check LOCK indicator (push-button ignition switch) operation</p> <ul style="list-style-type: none"> <li>• On: Operate</li> <li>• Off: Non-operation</li> </ul>
ACC INDICATOR	<p>This test is able to check ACC indicator (push-button ignition switch) operation</p> <ul style="list-style-type: none"> <li>• On: Operate</li> <li>• Off: Non-operation</li> </ul>
IGNITION ON IND	<p>This test is able to check ON indicator (push-button ignition switch) operation</p> <ul style="list-style-type: none"> <li>• On: Operate</li> <li>• Off: Non-operation</li> </ul>
HORN	<p>This test is able to check horn operation</p> <ul style="list-style-type: none"> <li>• On: Operate</li> <li>• Off: Non-operation</li> </ul>
TRUNK/BACK DOOR	<p><b>NOTE:</b> This item is displayed, but cannot be used</p>

## THEFT ALM

### THEFT ALM : CONSULT Function (BCM - THEFT)

INFOID:000000009012723

### DATA MONITOR

**NOTE:**

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitored Item	Description
REQ SW -DR	Indicates [ON/OFF] condition of door request switch (driver side).
REQ SW -AS	Indicates [ON/OFF] condition of door request switch (passenger side).
REQ SW -RR	<p><b>NOTE:</b> This item is displayed, but cannot be monitored.</p>
REQ SW -RL	<p><b>NOTE:</b> This item is displayed, but cannot be monitored.</p>
REQ SW -BD/TR	Indicates [ON/OFF] condition of back door request switch.
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch
UNLK SEN -DR	Indicates [ON/OFF] condition of driver door UNLOCK status.
DOOR SW-DR	Indicates [ON/OFF] condition of front door switch (driver side).
DOOR SW-AS	Indicates [ON/OFF] condition of front door switch (passenger side).



# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Monitored Item	Description
DOOR SW-RR	Indicates [ON/OFF] condition of rear door switch RH.
DOOR SW-RL	Indicates [ON/OFF] condition of rear door switch LH.
DOOR SW-BK	Indicates [ON/OFF] condition of back door switch.
CDL LOCK SW	Indicates [ON/OFF] condition of lock signal from door lock/unlock switch LH and RH.
CDL UNLOCK SW	Indicates [ON/OFF] condition of unlock signal from door lock/unlock switch LH and RH.
KEY CYL LK-SW	Indicates [ON/OFF] condition of lock signal from door key cylinder.
KEY CYL UN-SW	Indicates [ON/OFF] condition of unlock signal from door key cylinder.
TR/BD OPEN SW	Indicates [ON/OFF] condition of back door opener switch.
TRNK/HAT MNTR	<b>NOTE:</b> This item is displayed, but cannot be monitored.
RKE-LOCK	Indicates [ON/OFF] condition of LOCK signal from Intelligent Key.
RKE-UNLOCK	Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key.
RKE-TR/BD	<b>NOTE:</b> This item is displayed, but cannot be monitored.

## WORK SUPPORT

Service Item	Description
SECURITY ALARM SET	This mode is able to confirm and change security alarm ON-OFF setting.
THEFT ALM TRG	The switch which triggered vehicle security alarm is recorded. This mode is able to confirm and erase the record of vehicle security alarm. The trigger data can be erased by touching "CLEAR" on CONSULT screen.

## ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator lamp operation. Security indicator lamp is turned on when "ON" on CONSULT screen is touched.
VEHICLE SECURITY HORN	This test is able to check horn operation. Horn is activated for 0.5 seconds after "ON" on CONSULT screen is touched.
HEADLAMP(HI)	This test is able to check headlamp operation. Headlamps are activated for 0.5 seconds after "ON" on CONSULT screen is touched.
FLASHER	This test is able to check hazard warning lamp operation. Hazard warning lamps are activated after "ON" on CONSULT screen is touched.

## IMMU

### IMMU : CONSULT Function (BCM - IMMU)

INFOID:000000009012724

### DATA MONITOR

**NOTE:**

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item	Content
CONFIRM ID ALL	Indicates [YET] at all time. Switches to [DONE] when a registered Intelligent Key backside is contacted to push-button ignition switch.
CONFIRM ID4	
CONFIRM ID3	
CONFIRM ID2	
CONFIRM ID1	
NOT REGISTERED	Indicates [ID OK] when key ID that is registered is received or is not yet received. Indicates [ID NG] when key ID that is not registered is received.

# DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Monitor item	Content
TP 4	Indicates the number of IDs that are registered.
TP 3	
TP 2	
TP 1	
PUSH SW	Indicates [ON/OFF] condition of push-button ignition switch.

## ACTIVE TEST

Test item	Description
THEFT IND	This test is able to check security indicator lamp operation. Security indicator lamp is turned on when "ON" on CONSULT screen touched.

## WORK SUPPORT

Service item	Description
CONFIRM DONGLE ID	It is possible to check that dongle unit is applied to the vehicle.

# DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

## DIAGNOSIS SYSTEM (IPDM E/R)

### CONSULT Function (IPDM E/R)

INFOID:000000009814755

#### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

#### SELF DIAGNOSTIC RESULT

Refer to [PCS-22. "DTC Index"](#).

#### DATA MONITOR

##### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item [Unit]	MAIN SIG- NALS	Description
RAD FAN REQ [1/2/3/4]	×	Displays the value of the cooling fan speed request signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the shift position judged by IPDM E/R.
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.

# DIAGNOSIS SYSTEM (IPDM E/R)

[WITH INTELLIGENT KEY SYSTEM]

## < SYSTEM DESCRIPTION >

Monitor Item [Unit]	MAIN SIG- NALS	Description
ST/INHI RLY [Off/ ST ON/INHI ON/UNKWN]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.
DETENT SW [Off/On]		Displays the status of the A/T shift selector (detention switch) judged by IPDM E/R.
S/L RLY -REQ [Off/On]		<b>NOTE:</b> The item is indicated, but not monitored.
S/L STATE [LOCK/UNLK/UNKWN]		<b>NOTE:</b> The item is indicated, but not monitored.
OIL P SW [Open/Close]		Displays the status of the oil pressure switch judged by IPDM E/R.
HOOD SW [Off/On]		Displays the status of the hood switch 1 judged by IPDM E/R.
HL WASHER REQ [Off/On]		Displays the status of the headlamp washer request signal received from BCM via CAN communication.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.
HOOD SW 2 [Off/On]		Displays the status of the hood switch 2 judged by IPDM E/R.

## ACTIVE TEST

Test item	Operation	Description
CORNERING LAMP	LH	<b>NOTE:</b> This item is indicated, but cannot be tested.
	RH	
HORN	On	Operates horn relay for 20 ms.
REAR DEFOGGER	Off	OFF
	On	Operates the rear window defogger relay.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.
MOTOR FAN*	1	OFF
	2	Transmits 50% pulse duty signal (PWM signal) to the cooling fan control module.
	3	Transmits 75% pulse duty signal (PWM signal) to the cooling fan control module.
	4	Transmits 100% pulse duty signal (PWM signal) to the cooling fan control module.
HEAD LAMP WASHER	On	Operates the headlamp washer relay for 1 second.
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

\*: Operates while the engine is running.

# ECU DIAGNOSIS INFORMATION

## ECM, IPDM E/R, BCM

### List of ECU Reference

INFOID:000000009012726

ECU		Reference	
ECM	VK56VD for USA and CANADA	Reference Value	<a href="#">EC-81, "Reference Value"</a>
		Fail-safe	<a href="#">EC-102, "Fail-safe"</a>
		DTC Inspection Priority Chart	<a href="#">EC-105, "DTC Inspection Priority Chart"</a>
		DTC Index	<a href="#">EC-107, "DTC Index"</a>
	VK56VD for MEXICO	Reference Value	<a href="#">EC-647, "Reference Value"</a>
		Fail-safe	<a href="#">EC-668, "Fail-safe"</a>
		DTC Inspection Priority Chart	<a href="#">EC-671, "DTC Inspection Priority Chart"</a>
		DTC Index	<a href="#">EC-672, "DTC Index"</a>
IPDM E/R	Reference Value	<a href="#">PCS-15, "Reference Value"</a>	
	Fail-safe	<a href="#">PCS-20, "Fail-safe"</a>	
	DTC Index	<a href="#">PCS-22, "DTC Index"</a>	
IBCM	Reference Value	<a href="#">BCS-35, "Reference Value"</a>	
	Fail-safe	<a href="#">BCS-56, "Fail-safe"</a>	
	DTC Inspection Priority Chart	<a href="#">BCS-57, "DTC Inspection Priority Chart"</a>	
	DTC Index	<a href="#">BCS-57, "DTC Index"</a>	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# SECURITY CONTROL SYSTEM

[WITH INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

## WIRING DIAGRAM

### SECURITY CONTROL SYSTEM

Wiring Diagram

INFOID:000000009012727

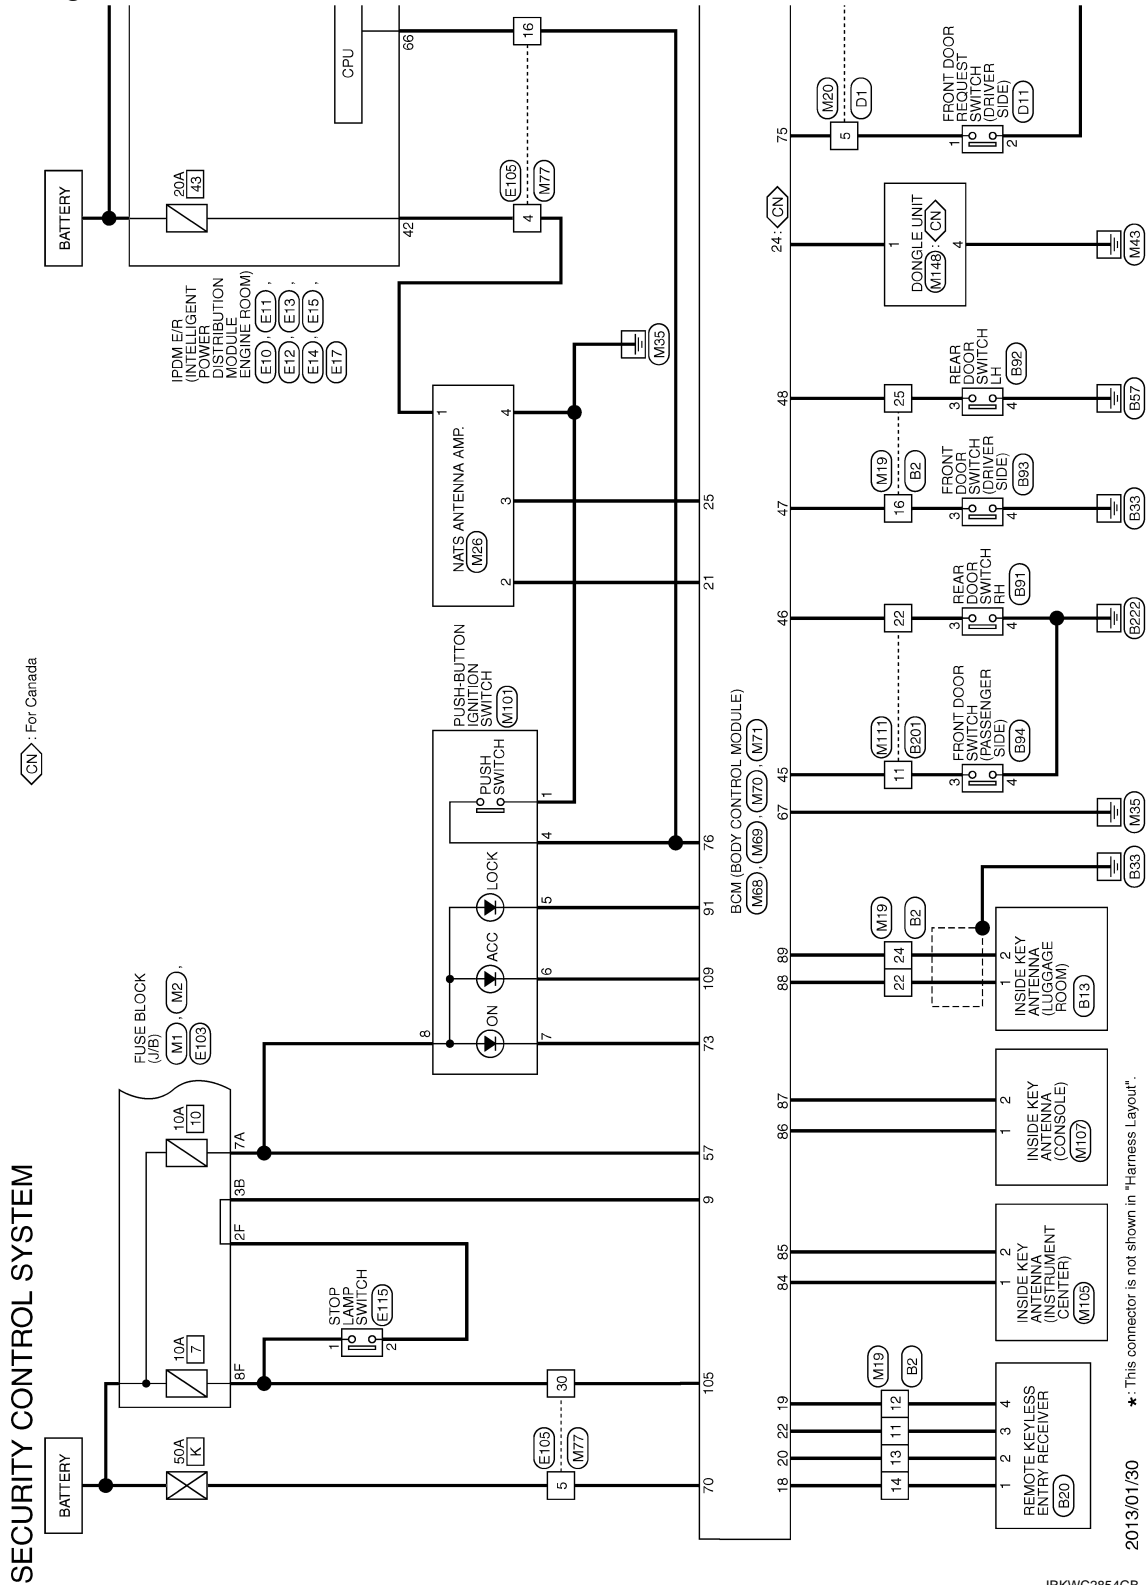

For Canada








# SECURITY CONTROL SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

## SECURITY CONTROL SYSTEM


Connector No.	B2
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
2	L	-
3	BR	-
5	RW	-
6	L	-
7	V	-
9	G	-
11	WB	-
12	BR	-
13	GR	-
14	BY	-
15	WR	-
16	GR	-
18	GW	-
19	V	-
20	WG	-
21	BW	-
22	V	-
24	G	-
25	O	-
26	Y	-
27	LO	-
28	YR	-
29	L	-
30	R	-
31	GY	-
32	B/SB	-
33	LG/R	-
34	BR/W	-
35	GR/R	-
36	SB	-
37	LG	-
38	L	-
39	B	-
40	WG	-
41	O	-

42	GR	-
43	V/W	-
44	LG/B	-
45	RY	-
46	B	-
47	BR	-
49	GR	-
50	R/B	-
51	WR	-
52	BR/Y	-
53	O/B	-
54	G/O	-
55	R/B	-
56	LG/R	-
57	GR/R	-
58	Y/G	-
59	V/W	-
60	R	-
63	B	-
64	R	-
65	W	-
66	G	-
67	SHIELD	-
69	LG/B	-
70	PL	-
71	L	-
72	R	-
77	Y/B	-
78	Y/L	-
79	Y	-
80	WR	-
81	Y/L	-
84	L/O	-
86	O	-
87	WR	-
88	O	-
89	W/L	-
90	GR/L	-
91	W	-
92	G	-
94	WR	-
96	L/W	-
97	R	-
98	V	-
99	L/W	-
100	P/B	-

Connector No.	B6
Connector Name	WIRE TO WIRE
Connector Type	TH24MW-AH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	B	-
3	B	-
4	LG	-
6	GR	-
7	LO	-
8	Y	-
9	L	-
10	BW	-
11	WG	-
12	WR	-
13	SHIELD	-
14	G	-
17	BR/Y	-
18	W/L	-
19	Y/L	-
20	GY	-
21	LY	-
22	L/W	-
23	GW	-
24	L/R	-

Connector No.	B13
Connector Name	INSIDE KEY ANTENNA (LUGGAGE ROOM)
Connector Type	RK02FL



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	G	-

Connector No.	B20
Connector Name	REMOTE KEYLESS ENTRY RECEIVER
Connector Type	TK04FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	W/B	-
3	G/R	-
4	B/Y	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC



# SECURITY CONTROL SYSTEM


< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

## SECURITY CONTROL SYSTEM

100	W	-
-----	---	---


Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	V	-
4	Y	-
5	LG/R	-
6	BR/W	-
8	V	-
9	G	-
10	L	-
12	BY	-
13	Y	-
14	R	-
15	B	-
16	GR/R	-
17	R/W	-
18	B	-
19	R	-
20	P	-
22	V	-
23	P/B	-
24	L/O	-
25	BR/W	-
26	W/R	-
27	V	-
28	W/G	-
29	Y/G	-
30	OIL	-
31	GS/B	-
32	BR	-
33	V/W	-
36	GO	-
37	BR/Y	-
38	SB	-

39	W/L	-
40	L/W	-
41	Y/G	-
42	P/L	-
43	LG	-
44	GR/L	-
45	SHIELD	-
46	W	-
47	LG	-
48	G/W	-
49	Y	-
50	L/Y	-
51	GR/R	-
52	LG/B	-
53	G	-
54	B	-
55	R	-

Connector No.	D5
Connector Name	POWER WINDOW MAIN SWITCH
Connector Type	NST6FW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	W	-
3	G/R	-
4	W	-
5	G	-
6	L	-
7	B	-
9	Y	-
10	W/B	-
11	GY	-
12	GW	-
13	V	-
15	R	-
16	W	-

Connector No.	D11
Connector Name	FRONT DOOR REQUEST SWITCH (DRIVER SIDE)
Connector Type	RK02FL



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG/R	-
2	B	-


Connector No.	D21
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	W	-
3	V	-
5	P/L	-
6	L/R	-
8	L/W	-
9	GY	-
10	L	-
12	BY	-
13	L	-
14	R	-
15	B	-
18	BR/W	-
19	R	-
20	P	-
22	Y/R	-
23	LG/B	-
24	L/O	-

25	R/W	-
26	W/R	-
36	GO	-
37	Y/B	-
38	V	-
39	W/L	-
40	L/O	-
44	GR/L	-
45	G	-
46	W	-
47	LG	-
48	L/R	-
49	Y	-
50	R/B	-
53	SHIELD	-
54	B	-
55	R	-

Connector No.	D25
Connector Name	FRONT POWER WINDOW SWITCH (PASSENGER SIDE)
Connector Type	NST6FW-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
3	W/B	-
4	G/R	-
8	L	-
9	G	-
10	W	-
11	B	-
12	GY	-
15	GW	-
16	V	-

JRKWC5508GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# SECURITY CONTROL SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

## SECURITY CONTROL SYSTEM

Connector No.	D31
Connector Name	FRONT DOOR REQUEST SWITCH (PASSENGER SIDE)
Connector Type	IK02FL



Terminal No.	Color Of Wire	Signal Name [Specification]
1	P/L	-
2	B	-

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Type	IM02FW-LC




Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	L	-

Connector No.	D102
Connector Name	WIRE TO WIRE
Connector Type	IM01FBR-S-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-


Connector No.	D109
Connector Name	WIRE TO WIRE
Connector Type	TR024FW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	R	-
3	B	-
5	LG	-
6	GR	-
7	L/O	-
8	Y	-
9	L	-
10	B/W	-
11	W/G	-
12	W/R	-
13	SHIELD	-
14	G	-
17	BR/Y	-
18	W/L	-
19	Y/L	-
20	G/Y	-
21	L/Y	-
22	L/W	-

23	GW	-
24	L/R	-

Connector No.	D114
Connector Name	WIRE TO WIRE
Connector Type	TR024FW-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/L	-
2	W/R	-
3	L/O	-
4	GR	-
5	BR/Y	-
6	B/W	-
7	W/G	-
10	B	-
11	R	-
12	W	-
13	L/W	-
14	L/Y	-
15	G/Y	-
16	Y/L	-
17	Y	-
18	L	-
23	G	-
24	SHIELD	-

Connector No.	D154
Connector Name	BACK DOOR OPENER SWITCH ASSEMBLY
Connector Type	TH04MW-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W/L	-
2	B	-
3	B	-
4	W/R	-

Connector No.	D157
Connector Name	BACK DOOR LOCK ASSEMBLY
Connector Type	NS08FW-CS




Terminal No.	Color Of Wire	Signal Name [Specification]
1	R	-
2	V	-
4	G/Y	-
5	L/Y	-
6	L/W	-
7	Y/L	-
8	B	-

JRKWC5509GB

# SECURITY CONTROL SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

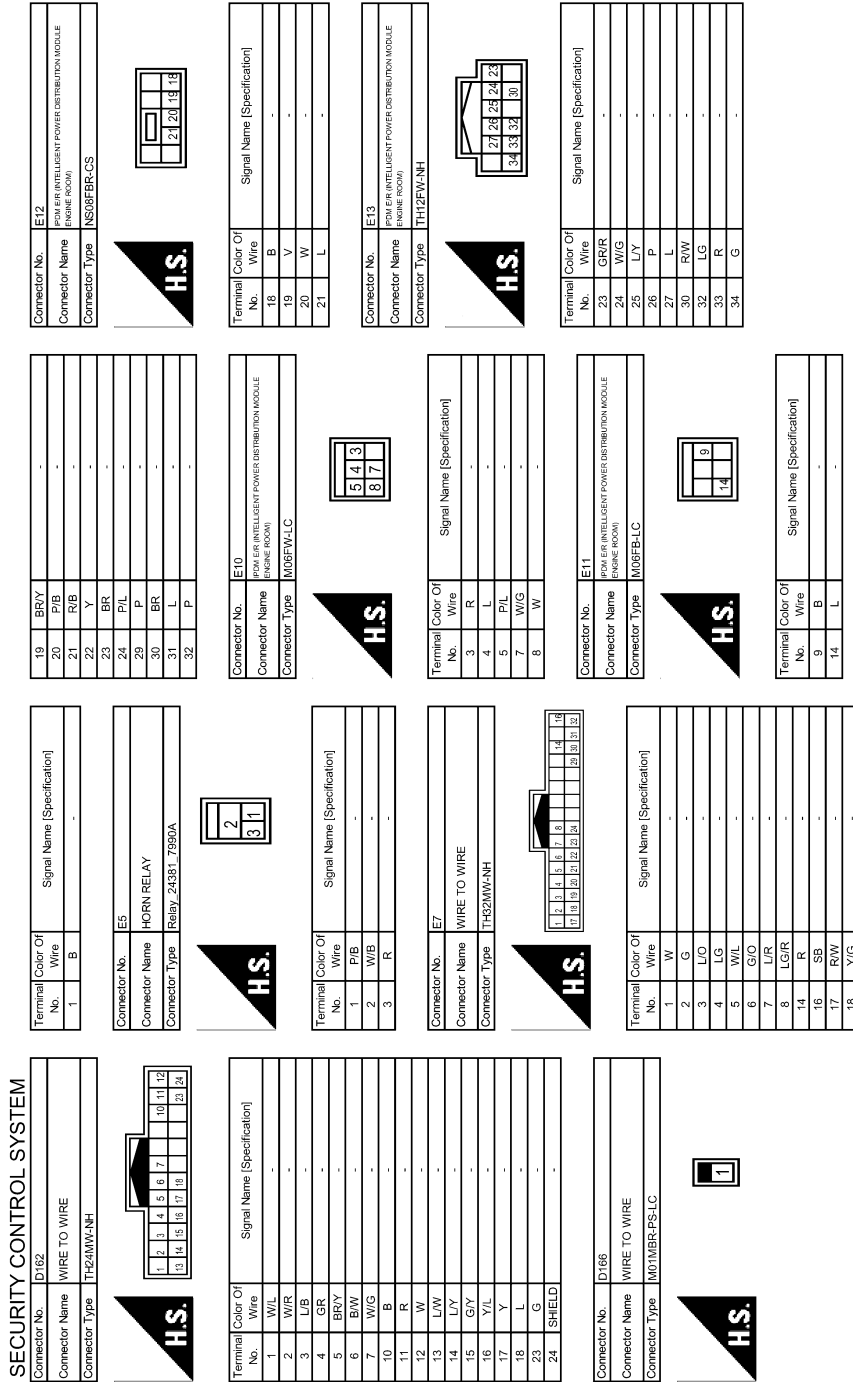

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

SEC

JRKWC5510GB

# SECURITY CONTROL SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >


## SECURITY CONTROL SYSTEM

Connector No.	E14
Connector Name	IPOMER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS12FBR-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
35	W	-
36	V	-
37	L	-
38	Y	-
39	LB	-
40	LG	-
41	L	-
42	LG	-
43	L/W	-
44	Y/R	-
45	Y/R	-

Connector No.	E15
Connector Name	IPOMER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	NS16FM-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
48	BR	-
49	R	-
50	LG/B	-
51	BR/Y	-
52	W	-
53	O	-
54	V	-
55	BR/R	-
56	W/B	-

60	V/R	-
61	W	-
62	SB	-

Connector No.	E17
Connector Name	IPOMER INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH10FB-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
60	W	-
61	G/Y	-
62	L	-
63	SB	-
64	O	-
65	W/B	-
66	Y/R	-
67	Y/R	-
68	Y/R	-
69	Y/R	-

Connector No.	E24
Connector Name	REMOTE ENGINE START RELAY
Connector Type	MS02FL-M2-LC



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BY	-
2	G	-
3	L/R	-
5	G	-

Connector No.	E36
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	SA242FB-SJ24



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	BAT
2	B	GND
3	B	GND
4	W	MOTOR SUPPLY
5	R/B	WAVE RATE / RES / RES / LG SENSOR COMBINATION SW
10	R/B	WAVE RATE / RES / RES / LG SENSOR COMBINATION SW
13	GR	BRAKE FLUID LEVEL SW
17	L/R	STP2
18	W/B	IGN
19	O	DS FR
20	SB	DP FL
21	RO	DS RR
22	V	DP RL
27	P	CANL
33	LG	DP FR
34	G	DS FL
35	BR	DP RR
36	P	DS RL
37	R	STP
39	L/W	VDC OFF SW
41	L	CAN-H
46	W	STOP LAMP SW ON

Connector No.	E49
Connector Name	HOOD SWITCH 2
Connector Type	W02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	BR	-
2	B	-

Connector No.	E57
Connector Name	HOOD SWITCH
Connector Type	W02FW



Terminal No.	Color Of Wire	Signal Name [Specification]
1	LG	-
2	B	-

JRKWC5511GB

# SECURITY CONTROL SYSTEM

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

## SECURITY CONTROL SYSTEM

Connector No.	E69
Connector Name	HORN (HIGH)
Connector Type	P01FB-BR-A



Terminal No.	1	R	Signal Name [Specification]	-
--------------	---	---	-----------------------------	---

Connector No.	E70
Connector Name	HORN (HIGH)
Connector Type	P01FB-A



Terminal No.	2	B	Signal Name [Specification]	-
--------------	---	---	-----------------------------	---

Connector No.	E71
Connector Name	HORN (LOW)
Connector Type	P01FB-BR-A




Terminal No.	1	R	Signal Name [Specification]	-
--------------	---	---	-----------------------------	---

Connector No.	E72
Connector Name	HORN (LOW)
Connector Type	P01FB-A



Terminal No.	2	B	Signal Name [Specification]	-
--------------	---	---	-----------------------------	---

Connector No.	E80
Connector Name	ECM
Connector Type	MA855FB-MEB10-LH



Terminal No.	111	R	Signal Name [Specification]	FUEL INJECTOR DRIVER POWER SUPPLY
112	SB			FUEL INJECTOR DRIVER POWER SUPPLY
113	G			ECM GROUND
114	B			ECM GROUND
115	B			ECM GROUND
120	Y			EVAP CANISTER VENT CONTROL VALVE
122	BRW			WAS CATALYTIC RELAY MOTOR CONTROL MODULE
123	Y/R			THROTTLE CONTROL MOTOR RELAY
125	GR			FUEL PUMP CONTROL MODULE (FCM)
126	O			ACCELERATOR PEDAL POSITION SENSOR 2
128	Y			ASC/DC STEERING SWITCH
129	PL			SENSOR GROUND
130	R			SENSOR GROUND
131	L/W			SENSOR POWER SUPPLY

Terminal No.	8F	L/B	Signal Name [Specification]	-
9F	Y			-


Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH80MMW-CS16-TM4



Terminal No.	1	L	Signal Name [Specification]	-
2	L/W			-
3	R/B			-
4	L			-
5	Y			-
7	W/G			-
8	P/B			-
9	W/B			-
10	G			-
11	L			-
12	P			-
13	P/B			-
14	BR			-
15	L/B			-
16	SB			-
18	BR			-
19	Y/G			-
20	BR/Y			-
21	Y/V			-
22	L			-
23	Y			-
24	L/W			-
28	O			-
29	RAW			-
30	L/B			-
31	Y			-
32	GR/L			-
34	Y			-
35	R			-
36	BR			-
37	G/Y			-
38	G			-

133	SB			SENSOR POWER SUPPLY
134	V/W			FUEL TEMPERATURE SENSOR
136	W/R			ACCELERATOR PEDAL POSITION SENSOR 1
137	W/G			SENSOR POWER SUPPLY
138	V			BATTERY CURRENT SENSOR
139	G			BATTERY TEMPERATURE SENSOR
140	R/Y			SENSOR GROUND
141	SB			IGNITION SWITCH
142	R/W			FUEL PUMP CONTROL MODULE (FP/CM) CHECK
143	L/Y			EVAP CONTROL SYSTEM PRESSURE SENSOR
144	O/B			REFRIGERANT PRESSURE SENSOR
146	L			CAN COMMUNICATION LINE
147	G/Y			ASC/DC BRAKE SWITCH
150	R			SENSOR GROUND
151	P			CAN COMMUNICATION LINE
156	L			POWER SUPPLY FOR ECM (BACK-UP)
158	W/B			STOP LAMP SWITCH
161	R/W			ECM COMMUNICATION LINE
163	G			ECM RELAY (SELF-SHUT-OFF)
165	GR/R			ECM COMMUNICATION LINE
166	W			ENGINE SPEED SIGNAL OUTPUT
169	G/B			POWER SUPPLY FOR ECM
171	W			POWER SUPPLY FOR ECM
172	W			POWER SUPPLY FOR ECM
173	O			THROTTLE CONTROL MOTOR POWER SUPPLY
174	B			ECM GROUND
175	B			ECM GROUND

Connector No.	E103
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-CS



Terminal No.	10F	G	Signal Name [Specification]	-
14F	Y			-
15F	G			-
16F	W/B			-
2F	R			-
4F	G			-
6F	Y/G			-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

SEC

# SECURITY CONTROL SYSTEM


< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

## SECURITY CONTROL SYSTEM

40	SB	-
41	W/R	-
42	R	-
43	V	-
51	L/O	-
52	BRW	-
53	BR/Y	-
54	GR/L	-
60	W	-
61	B	-
62	R	-
63	G	-
64	SHIELD	-
91	BR	-
92	L/W	-
94	Y/B	-
95	G/R	-
97	R	-
98	G/B	-
100	W/R	-

Connector No.	E107
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name (Specification)
1	L	-
4	V/W	-
5	G/R	-
6	P	-
9	GR/L	-
10	Y/R	-
11	L/R	-
12	W/G	-
13	BR/Y	-
14	L/G	-
15	BR/W	-
16	BY	-
17	W/B	-
18	GR/R	-

20	W/R	-
21	B	-
22	R/L	-
23	G/R	-
24	R/W	-
25	W/L	-
26	R	-
27	L	-
28	G/B	-
35	G	-
36	Y	-
37	R	-
38	G/Y	-
39	O	-
40	W	-
41	R	-
42	B	-
43	G	-
44	SHIELD	-
46	B	-
47	W	-
48	SHIELD	-
49	W	-
50	SHIELD	-
51	Y/R	-
52	GR	-
53	LG/B	-
54	LG/R	-
55	RG	-
56	B/R	-
57	SB	-
60	G	-
61	B	-
62	W	-
63	R	-
64	SHIELD	-
65	L/Y	-
66	V	-
67	B/W	-
91	G/R	-
95	SB	-
96	G/R	-
97	GR/L	-
98	GW	-
99	R/Y	-
100	L	-

Connector No.	E115
Connector Name	STOP LAMP SWITCH
Connector Type	M04FW-LC



Terminal No.	Color Of Wire	Signal Name (Specification)
1	L/B	-
2	R	-
3	G	-
4	L/R	-

Connector No.	E124
Connector Name	VEHICLE SECURITY HORN RELAY
Connector Type	M03FW-R-LC



Terminal No.	Color Of Wire	Signal Name (Specification)
1	L/R	-
2	R	-
3	P/B	-

Connector No.	E125
Connector Name	VEHICLE SECURITY HORN
Connector Type	P01FB-A




Terminal No.	Color Of Wire	Signal Name (Specification)
1	R	-

Connector No.	E126
Connector Name	DIODE
Connector Type	Z4335 CS900



Terminal No.	Color Of Wire	Signal Name (Specification)
1	G	-
2	P/B	-

Connector No.	F1
Connector Name	WIRE TO WIRE
Connector Type	TH32FW-NH





# SECURITY CONTROL SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

## SECURITY CONTROL SYSTEM

Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	G	-
3	L/O	-
4	LG	-
5	W/L	-
6	G/O	-
7	L/R	-
8	LG/R	-
14	R	-
16	SB	-
17	R/W	-
18	Y/G	-
19	BR/Y	-
20	P/B	-
21	R/B	-
22	V	-
23	BR/W	-
24	P/L	-
29	P	-
30	BR	-
31	L	-
32	P	-

Connector No.	F51
Connector Name	A/T ASSEMBLY
Connector Type	RK1DFG




Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	IGNITION POWER SUPPLY
2	P	BATTERY POWER SUPPLY
3	L	CANH
4	SB	K-LINE
5	B	GROUND
6	V	IGNITION POWER SUPPLY
7	R	BACK-UP LAMP RELAY
8	P	CANL
9	BR	STARTER RELAY
10	B	GROUND

Connector No.	F301
Connector Name	TCM (TRANSMISSION CONTROL MODULE)
Connector Type	SP1DFG




Terminal No.	Color Of Wire	Signal Name [Specification]
1	-	IGNITION POWER SUPPLY
2	-	BATTERY POWER SUPPLY
3	-	CANH
4	-	K-LINE
5	-	GROUND
6	-	IGNITION POWER SUPPLY
7	-	BACK-UP LAMP RELAY
8	-	CANL
9	-	STARTER RELAY
10	-	GROUND

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS08FV-M2



Terminal No.	Color Of Wire	Signal Name [Specification]
1A	Y	-
2A	GR	-
3A	W	-
4A	Y/G	-
5A	V	-
6A	L/W	-
7A	LG	-
8A	W	-

Connector No.	M2
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS10FV-CS



Terminal No.	Color Of Wire	Signal Name [Specification]
10B	W/B	-
1B	R	-
3B	R	-
4B	B	-
5B	BR	-
6B	Y	-
8B	L/O	-

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FV



Terminal No.	Color Of Wire	Signal Name [Specification]
3	LG	-
4	B	-
5	B	-
6	L	-
7	SB	-
8	GR	-
11	SB	-
12	R	-
13	L	-
14	P	-
16	Y	-

Connector No.	M19
Connector Name	WIRE TO WIRE
Connector Type	TH89FV-CS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
2	L	-
3	BR	-
6	R/W	-
7	L	-
9	G	-
11	W/B	-
12	BR	-
13	GR	-
14	BY	-
15	W/R	-
16	GR/R	-
18	GW	-
19	V	-
20	W/G	-
21	B/W	-
22	V	-
24	G	-
25	O	-
26	Y	-
27	L/O	-
28	Y/R	-
29	L	-
30	R	-
31	GY	-
32	B/SB	-
33	LG/R	-
34	BR/W	-
35	GR/R	-
36	SB	-
37	LG	-
38	L	-
39	P	-
40	W/G	-
41	O	-
42	GR	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

SEC

JRKWC5514GB

# SECURITY CONTROL SYSTEM


< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

SECURITY CONTROL SYSTEM

43	V/W	-
44	LG/B	-
45	R/Y	-
46	B	-
47	BR/W	-
49	GR	-
50	R/B	-
51	W/R	-
52	BR/Y	-
53	O/B	-
54	G/O	-
55	R/B	-
56	LG/R	-
57	GR/R	-
58	Y/G	-
59	V/W	-
60	R	-
63	B	-
64	B	-
65	W	-
66	G	-
67	SHIELD	-
69	LG/B	-
70	P/L	-
71	L	-
72	R	-
77	Y/B	-
78	Y/L	-
79	Y	-
80	W/R	-
81	Y/L	-
84	L/O	-
86	O	-
87	W/R	-
88	O	-
89	W/L	-
90	GR/L	-
91	W	-
92	G	-
94	W/R	-
96	L/W	-
97	R	-
98	V	-
99	L/W	-
100	P/B	-


Connector No.	M20
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15



Terminal No.	Color Of Wire	Signal Name [Specification]
1	V	-
2	W	-
3	V	-
4	Y	-
5	LG/R	-
6	BR/W	-
8	V	-
9	G	-
10	L	-
12	BR/Y	-
13	Y	-
14	R	-
15	B	-
16	GR/R	-
17	V/W	-
18	B	-
19	R	-
20	P	-
22	V	-
23	P/B	-
24	L/O	-
25	BR/W	-
26	W/R	-
27	V	-
28	W/G	-
29	Y/G	-
30	O/L	-
31	GR/B	-
32	BR	-
33	V/W	-
36	G/O	-
37	BR/Y	-
38	SB	-
39	W/L	-
40	L/W	-
41	Y/G	-

42	P/L	-
43	LG	-
44	GR	-
45	SHIELD	-
46	W	-
47	LG	-
48	GW	-
49	Y	-
50	L/Y	-
51	GR/R	-
52	LG/B	-
53	G	-
54	B	-
55	R	-

Connector No.	M22
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15



Terminal No.	Color Of Wire	Signal Name [Specification]
1	G	-
2	W	-
3	V	-
5	P/L	-
6	L/R	-
8	L/W	-
9	GY	-
10	L	-
12	BY	-
13	L	-
14	R	-
15	B	-
18	BAW	-
19	R	-
20	P	-
22	Y/R	-
23	LG/B	-
24	L/W	-
25	W/R	-
26	W/R	-

36	G/O	-
37	Y/B	-
38	V	-
39	W/L	-
40	L/O	-
44	GR	-
45	G	-
46	W	-
47	LG	-
48	L/R	-
49	Y	-
50	R/B	-
53	SHIELD	-
54	B	-
55	R	-

Connector No.	M26
Connector Name	NATS ANTENNA AMP.
Connector Type	TH40FW-N4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	BAT
2	P	CLK
3	LG/R	DATA
4	B	GND

JRKWC5515GB


# SECURITY CONTROL SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >


## SECURITY CONTROL SYSTEM

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH40FV-NH




Terminal No.	Color Of Wire	Signal Name [Specification]
1	Y	BATTERY POWER SUPPLY
2	GR	IGNITION SIGNAL
3	B	GROUND
4	B	ILL GND
5	B	ILL CONTROL OUTPUT
7	R	TOW MODE SIGNAL
8	P/L	TRIP RESET SWITCH SIGNAL
11	G	ENTER SWITCH SIGNAL
12	O	SELECT SWITCH SIGNAL
13	W/R	ILLUMINATION CONTROL SWITCH SIGNAL (*)
14	R	ILLUMINATION CONTROL SWITCH SIGNAL (-)
15	R/W	AIR BAG SIGNAL
18	W/R	AMBIENT SENSOR SIGNAL
19	V/W	AC/AUTO AMP CONNECTION/RECOGNITION SIGNAL
20	B	AMBIENT SENSOR GROUND
21	L	CAN-H
22	P	CAN-L
23	B	GROUND
24	V	FUEL LEVEL SENSOR GROUND
25	O/L	ALTERNATOR SIGNAL
26	W	PARKING BRAKE SWITCH SIGNAL
28	GR/R	SECURITY SIGNAL
29	BR	WASHER LEVEL SWITCH SIGNAL
30	SB	VEHICLE SPEED SIGNAL (2-PULSE)
31	BR/W	VEHICLE SPEED SIGNAL (8-PULSE)
33	W	SNOW MODE SIGNAL
34	BR/Y	FUEL LEVEL SENSOR SIGNAL
35	O/B	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SEAT)
36	GY	PASSENGER SEAT BELT WARNING SIGNAL
37	R/Y	NON-MANUAL MODE SIGNAL
38	L/W	MANUAL MODE SHIFT DOWN SIGNAL
39	Y/B	MANUAL MODE SHIFT UP SIGNAL
40	GY	MANUAL MODE SIGNAL

Connector No.	M57
Connector Name	A/T SHIFT SELECTOR
Connector Type	TH18FV-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
1	GW	-
2	L/W	-
3	Y/B	-
4	B/SB	-
5	R/Y	-
9	L/W	-
10	B	-
11	L/R	-
12	B	-
13	R/B	-
14	GY	-


Connector No.	M68
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FV-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
2	BR/Y	COMBI SW INPUT 5
3	GR	COMBI SW INPUT 4
4	L	COMBI SW INPUT 3
5	L	COMBI SW INPUT 2
6	V	COMBI SW INPUT 1
8	V	POWER WINDOW SW COMM
9	R	STOP LAMP SW 1
11	R	RAIN SENSOR SERIAL LINK
14	P/B	OPTICAL SENSOR


Terminal No.	Color Of Wire	Signal Name [Specification]
16	L/O	DIMMER SIGNAL
17	Y/G	SENSOR PWR SPLY
18	BY	RECEIVER/SENSOR GND
19	BR	RECEIVER PWR SPLY
20	G/R	KYLS ENT RECEIVER COMM
21	P	NATS ANT AMP
22	W/B	KYLS ENT RECEIVER RSSI
23	GR/R	SECURITY IND CONT
24	SB	DONGLE LINK
25	LGR	NATS ANT AMP
26	O	INTELLIGENT KEY IDENTIFICATION
29	W	HAZARD SW
30	W/L	BK DOOR OPNR SW
31	W/G	DR DOOR UNLCK SW
32	LG	COMBI SW OUTPUT 5
33	Y	COMBI SW OUTPUT 4
34	W	COMBI SW OUTPUT 3
35	R/W	COMBI SW OUTPUT 2
36	SB	COMBI SW OUTPUT 1
37	GY	SHIFT P
39	L	CAN-H
40	P	CAN-L

Connector No.	M69
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA08FB-FH4G-SA




Terminal No.	Color Of Wire	Signal Name [Specification]
43	Y/L	BK DOOR SW
44	GW	REAR WIPER STOP POSITION
45	W	PASSENGER DOOR SW
46	GR	REAR RH DOOR SW
47	GR/R	DRIVER DOOR SW
48	O	REAR LH DOOR SW
49	BR/Y	LUGGAGE ROOM LAMP CONT
50	BY	REMOTE ENGINE START
51	W/R	BACK DOOR REG SW
54	L	REAR WIPER OUTPUT
55	G	REAR DOOR UNLK OUTPUT

Connector No.	M70
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	FEA08FW-FH4G-SA



Terminal No.	Color Of Wire	Signal Name [Specification]
56	W/R	INT ROOM LAMP PWR SPLY
57	LG	BAT (FUSE)
58	R/W	SHOCK DETECT SENS
59	G	PASSENGER DOOR UNLK OUTPUT
60	G	TURN SIGNAL LH OUTPUT
61	GY	TURN SIGNAL RH OUTPUT
62	R	STEP LAMP CONT
63	BR	ROOM LAMP TIMER CONT
64	GR/R	CRANKING REQUEST
65	R	ALL DOOR LOCK OUTPUT
66	V	DR DOOR FUEL LID UNLK OUTPUT
67	B	GND
68	Y	PW PWR SPLY (IGN)
69	W	PW PWR SPLY (BAT)
70	Y	BAT (F/L)

Connector No.	M71
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FV-NH



Terminal No.	Color Of Wire	Signal Name [Specification]
72	P	PUDDLE LAMP CONT
73	W	ON IND
74	Y/B	TRAILER TURN SIG R/L CONT
75	LGR	DRIVER DOOR REQUEST SW
76	SB	PUSH SW

JRKWC5516GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

SEC

# SECURITY CONTROL SYSTEM

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

## SECURITY CONTROL SYSTEM

77	O/L	TRAILER TURN SIG LH CONT
78	P/B	DRIVER DOOR ANT+
79	V	DRIVER DOOR ANT-
80	LG/B	PASSENGER DOOR ANT+
81	Y/R	PASSENGER DOOR ANT-
82	W/G	BACK DOOR ANT+
83	B/W	BACK DOOR ANT-
84	BR	ROOM ANT1+
85	Y	ROOM ANT1-
86	W	ROOM ANT2+
87	B	ROOM ANT2-
88	V	LAGGAGE ROOM ANT+
89	G	LAGGAGE ROOM ANT-
90	Y	PUSHBTN IGN SW ILL PWR
91	O	LOCK IND
92	L	LOW SIDE PUSHLED
93	GR/R	I-KEY WARN BUZZER
96	BR	ACC RELAY CONT
97	ROW	STARTER RELAY CONT
98	O	IGN RELAY (P/BER) CONT
99	R	IGN RELAY (P/B) CONT
100	P/L	PASSENGER DOOR REQUEST SW
101	W/B	IGN PWR SPLY 2
102	BR	SHIFT N/P
104	R/B	AT SHIFT SELECT PWR SPLY
105	O/L	STOP LAMP SW 2
106	Y/G	BLWR FAN MTR RELAY CONT
109	L/W	ACC IND


Connector No.	IM77
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-GS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	W	-
2	L/W	-
3	R/B	-
4	Y	-
5	V	-
6	SB	-

7	W/G	-
8	P/B	-
9	W/B	-
10	G	-
11	L	-
12	P	-
13	P/B	-
14	BR	-
15	O/L	-
16	SB	-
18	BR	-
19	Y/G	-
20	BRY	-
21	V	-
22	L	-
23	Y	-
24	L/W	-
28	O	-
29	ROW	-
30	O/L	-
31	V	-
32	GR/R	-
34	Y	-
35	R	-
36	B/O	-
37	G/Y	-
38	G	-
40	SB	-
41	W/R	-
42	R	-
43	V	-
51	L/O	-
52	BR/W	-
53	BRY	-
54	GR/L	-
60	W	-
61	B	-
62	G	-
63	R	-
64	SHIELD	-
91	BR	-
92	L/W	-
94	Y/B	-
95	L/R	-
97	R	-
98	O/L	-
100	W/B	-

Connector No.	IM82
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-GS16-TM4



Terminal No.	Color Of Wire	Signal Name [Specification]
1	L	-
4	V/W	-
5	GR/R	-
6	P	-
8	GS/L	-
10	Y/R	-
11	L/R	-
12	W/G	-
13	BRY	-
14	LG	-
15	BR/W	-
16	B/Y	-
17	W/B	-
18	GR/R	-
20	W/R	-
21	B	-
22	R/L	-
23	G/R	-
24	R/W	-
25	W/L	-
26	R	-
27	L	-
28	B/SB	-
35	G	-
36	Y	-
37	R	-
38	G/Y	-
39	O	-
40	W	-
41	R	-
42	B	-
43	G	-
44	SHIELD	-
46	B	-
47	W	-
48	SHIELD	-

49	W	-
50	SHIELD	-
51	Y/R	-
52	GR	-
53	LG/B	-
54	LG/R	-
55	R/G	-
56	B/O	-
57	SB	-
60	G	-
61	B	-
62	W	-
63	R	-
64	SHIELD	-
65	L/Y	-
66	V	-
67	B/W	-
69	GR	-
85	SB	-
86	GR	-
87	GR/L	-
96	GW	-
99	P	-
100	L	-

Connector No.	IM101
Connector Name	PUSH-BUTTON IGNITION SWITCH
Connector Type	TK08FBR



Terminal No.	Color Of Wire	Signal Name [Specification]
1	B	-
2	L	-
3	Y	-
4	SB	-
5	O	-
6	L/W	-
7	W	-
8	LG	-

JRKWC5517GB

# SECURITY CONTROL SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

## SECURITY CONTROL SYSTEM

Connector No.	M105
Connector Name	INSIDE KEY ANTENNA (INSTRUMENT CENTER)
Connector Type	RK02FL



Terminal Color Of No.	Wire	Signal Name [Specification]
1	BR	-
2	Y	-

Connector No.	M107
Connector Name	INSIDE KEY ANTENNA (CONSOLE)
Connector Type	RK02FL



Terminal Color Of No.	Wire	Signal Name [Specification]
1	W	-
2	B	-

Connector No.	M111
Connector Name	WIRE TO WIRE
Connector Type	TH80FM-CS16-TM4



Terminal Color Of No.	Wire	Signal Name [Specification]
1	R/B	-
2	G	-
3	W/B	-
4	W/B	-
5	P/Y	-
6	R	-
7	GR	-
8	GR/R	-
9	W	-
10	Y	-
11	L/O	-
12	Y	-
13	Y	-
14	Y	-
15	Y	-
16	L/O	-
17	GR/L	-
18	R/G	-
19	L/Y	-
20	G/Y	-
21	R	-
22	GR	-
23	L/O	-
24	SB	-
25	SB	-
26	Y/L	-
27	W/R	-
28	W/G	-
29	L/R	-
30	G	-
31	V	-
32	SHIELD	-
33	P/B	-
34	W/R	-
35	S	-
36	L/W	-
37	B/W	-
38	L	-
39	P	-
40	SHIELD	-
41	SHIELD	-
42	SHIELD	-
43	SHIELD	-
44	SHIELD	-
45	SHIELD	-
46	SHIELD	-

47	R	-
48	W	-
49	SHIELD	-
50	V	-
51	O/L	-
52	L/R	-
53	SB	-
54	V/W	-
55	L	-
56	GR	-
57	P/L	-
58	B/SB	-
59	R/Y	-
60	BR	-
61	O	-
62	W	-
63	SHIELD	-
64	B	-
65	R	-
66	G	-
67	Y	-
68	SB	-
69	LG	-
70	R/B	-
71	W/B	-
72	Y	-
73	L	-
74	L/R	-
75	R	-
76	W	-
77	W	-
78	W	-
79	W	-
80	W	-
81	W	-
82	W	-
83	W	-
84	W	-
85	W	-
86	W	-
87	W	-
88	W	-
89	W	-
90	W	-
91	W	-
92	W	-
93	W	-
94	W	-
95	W	-
96	W	-
97	W	-
98	W	-
99	W	-
100	W	-

Connector No.	M148
Connector Name	DONGLE UNIT
Connector Type	TH04FW-NH



Terminal Color Of No.	Wire	Signal Name [Specification]
1	SB	DONGLE LINK
4	B	GND

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000009012728

OVERALL SEQUENCE

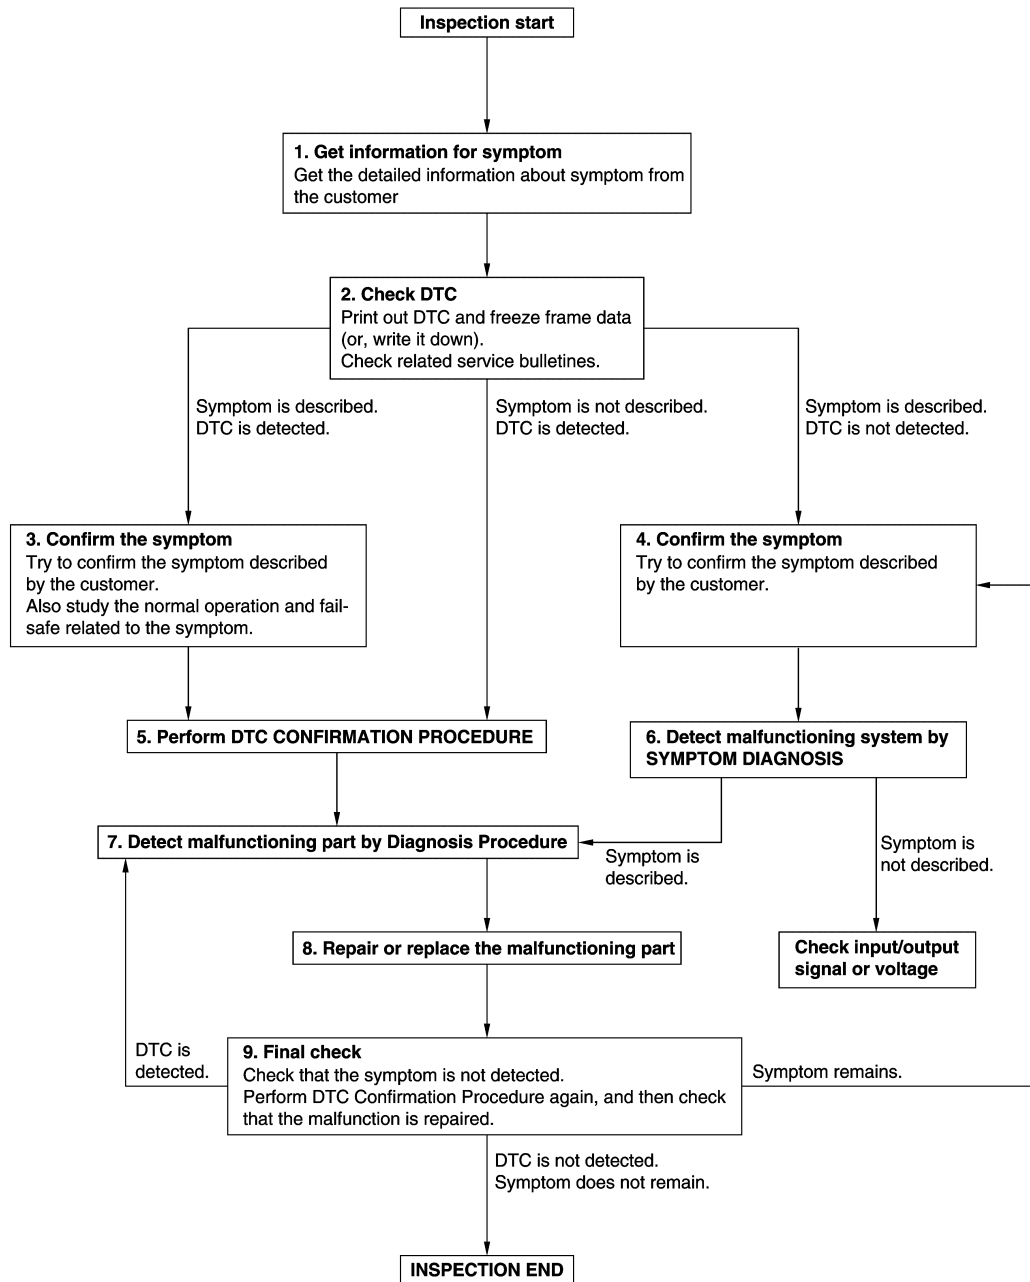

JMKIA8652GB

DETAILED FLOW

# DIAGNOSIS AND REPAIR WORK FLOW

[WITH INTELLIGENT KEY SYSTEM]

< BASIC INSPECTION >

## 1.GET INFORMATION FOR SYMPTOM

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

## 2.CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is detected.
  - Record DTC and freeze frame data (Print them out using CONSULT.)
  - Erase DTC.
  - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

## 3.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

## 4.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

## 5.PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time. If two or more DTCs are detected, refer to [BCS-57. "DTC Inspection Priority Chart"](#) and determine trouble diagnosis order.

**NOTE:**

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-43. "Intermittent Incident"](#).

## 6.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

## 7.DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

## DIAGNOSIS AND REPAIR WORK FLOW

[WITH INTELLIGENT KEY SYSTEM]

< BASIC INSPECTION >

Inspect according to Diagnosis Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-43. "Intermittent Incident"](#).

### 8. REPAIR OR REPLACE THE MALFUNCTIONING PART

---

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

### 9. FINAL CHECK

---

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.



# ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

## ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

### ECM

#### ECM : Description

INFOID:000000009012729

Performing the following procedure can automatically activate recommunication of ECM and BCM, but only when the ECM is replaced with a new one\*.

\*: New one means a virgin ECM that has never been energized on-board.

(In this step, initialization procedure by CONSULT is not necessary)

#### NOTE:

- If multiple keys are attached to the key holder, separate them before beginning work.
- Distinguish keys with unregistered key IDs from those with registered IDs.

#### ECM : Work Procedure

INFOID:000000009012730

### 1.PERFORM ECM RECOMMUNICATING FUNCTION

1. Install ECM.
2. Contact backside of registered Intelligent Key\* to push-button ignition switch, then turn ignition switch to ON.  
\*: To perform this step, use the key that is used before performing ECM replacement.
3. Maintain ignition switch in the ON position for at least 5 seconds.
4. Turn ignition switch to OFF.
5. Check that the engine starts.

>> GO TO 2.

### 2.PERFORM ADDITIONAL SERVICE WHEN REPLACING ECM

Perform [EC-157. "Work Procedure"](#).

>> END

### BCM

#### BCM : Description

INFOID:000000009012731

#### BEFORE REPLACEMENT

When replacing BCM, save or print current vehicle specification with CONSULT configuration before replacement.

#### NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

#### AFTER REPLACEMENT

#### CAUTION:

When replacing BCM, always perform "WRITE CONFIGURATION" with CONSULT. Or not doing so, BCM control function does not operate normally.

- Complete the procedure of "WRITE CONFIGURATION" in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.

#### NOTE:

When replacing BCM, perform the system initialization (NATS).

#### BCM : Work Procedure

INFOID:000000009012732

### 1.SAVING VEHICLE SPECIFICATION

#### CONSULT Configuration

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-80. "CONFIGURATION \(BCM\) : Description"](#).

#### NOTE:

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

## ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

>> GO TO 2.

### 2.REPLACE BCM

---

Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).

>> GO TO 3.

### 3.WRITING VEHICLE SPECIFICATION

---

ⓈCONSULT Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual selection" to write vehicle specification. Refer to [BCS-80, "CONFIGURATION \(BCM\) : Work Procedure"](#).

>> GO TO 4.

### 4.INITIALIZE BCM (NATS)

---

Perform BCM initialization. (NATS)

>> WORK END

# DTC/CIRCUIT DIAGNOSIS

## P1610 LOCK MODE

### Description

INFOID:000000009012733

ECM forcibly switches to the mode that inhibits engine start, when engine start operation is performed 5 times or more while communication between ECM and BCM is not normal.

### DTC Logic

INFOID:000000009012734

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1610	LOCK MODE	When ECM detects a communication malfunction between ECM and BCM 5 times or more.	—

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self Diagnostic Result" mode of "ENGINE" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-51. "Diagnosis Procedure"](#).
- NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012735

#### 1. CHECK ENGINE START FUNCTION

1. Check that DTC except for DTC P1610 is not detected.  
If detected, erase the DTC after fixing.
2. Turn ignition switch OFF.
3. Contact the registered Intelligent Key backside to push-button ignition switch and wait 5 seconds.
4. Turn ignition switch ON.
5. Turn ignition switch OFF and wait 5 seconds.
6. Repeat steps 3 and 5 twice (a total of 3 times).
7. Check that engine can start.

>> INSPECTION END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P



# P1611 ID DISCORD, IMMU-ECM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## P1611 ID DISCORD, IMMU-ECM

### DTC Logic

INFOID:000000009012736

#### DTC DETECTION LOGIC

##### NOTE:

- If DTC P1611 is displayed with DTC U1000 (for BCM), first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC P1611 is displayed with DTC U1010 (for BCM), first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1611	ID DISCORD, IMMU-ECM	The ID verification results between BCM and ECM are NG.	<ul style="list-style-type: none"><li>• Harness or connectors (The CAN communication line is open or shorted.)</li><li>• BCM</li><li>• ECM</li></ul>

#### DTC CONFIRMATION PROCEDURE

##### 1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self Diagnostic Result" mode of "ENGINE" using CONSULT.

##### Is DTC detected?

- YES >> Go to [SEC-52, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

#### Diagnosis Procedure

INFOID:000000009012737

##### 1.PERFORM INITIALIZATION

Perform initialization of BCM and reregistration of all Intelligent Keys using CONSULT.

##### Can the system be initialized and can the engine be started with reregistered Intelligent Key?

- YES >> INSPECTION END  
NO >> GO TO 2.

##### 2.CHECK SELF DIAGNOSTIC RESULT

1. Select "Self Diagnostic Result" mode of "ENGINE" using CONSULT.
2. Erase DTC.
3. Perform DTC CONFIRMATION PROCEDURE for DTC P1611. Refer to [SEC-52, "DTC Logic"](#).

##### Is DTC detected?

- YES >> GO TO 3.  
NO >> INSPECTION END

##### 3.REPLACE BCM

1. Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

##### Can the system be initialized and can the engine be started with registered Intelligent Key?

- YES >> INSPECTION END  
NO >> GO TO 4.

##### 4.REPLACE ECM

Replace ECM. Refer to [EC-582, "Removal and Installation"](#) (VK56VD for USA and CANADA) or [EC-582, "Removal and Installation"](#) (VK56VD for MEXICO).

>> INSPECTION END

# P1612 CHAIN OF ECM-IMMU

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

## P1612 CHAIN OF ECM-IMMU

### DTC Logic

INFOID:000000009012738

### DTC DETECTION LOGIC

#### NOTE:

- If DTC P1612 is displayed with DTC U1000 (for BCM), first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC P1612 is displayed with DTC U1010 (for BCM), first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1612	CHAIN OF ECM-IMMU	Inactive communication between ECM and BCM	<ul style="list-style-type: none"><li>• Harness or connectors (The CAN communication line is open or shorted.)</li><li>• BCM</li><li>• ECM</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self Diagnostic Result" mode of "ENGINE" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-53, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012739

#### 1.REPLACE BCM

1. Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

#### Can the system be initialized and can the engine be started with registered Intelligent Key?

- YES >> INSPECTION END  
NO >> GO TO 2.

#### 2.REPLACE ECM

Replace ECM. Refer to [EC-582, "Removal and Installation"](#) (VK56VD for USA and CANADA) or [EC-582, "Removal and Installation"](#) (VK56VD for MEXICO).

>> INSPECTION END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# P1614 CHAIN OF IMMU-KEY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## P1614 CHAIN OF IMMU-KEY

### DTC Logic

INFOID:000000009012740

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1614	CHAIN OF IMMU-KEY	Inactive communication between NATS antenna amp. and BCM	<ul style="list-style-type: none"><li>• Harness or connectors (NATS antenna amp. circuit is open or shorted.)</li><li>• NATS antenna amp.</li><li>• IPDM E/R</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1.PERFORM DTC CONFIRMATION PROCEDURE 1

1. Contact Intelligent Key backside to push-button ignition switch.
2. Check DTC in "Self Diagnostic Result" mode of "ENGINE" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-54. "Diagnosis Procedure"](#).  
NO >> GO TO 2.

#### 2.PERFORM DTC CONFIRMATION PROCEDURE 2

1. Press the push-button ignition switch.
2. Check DTC in "Self Diagnostic Result" mode of "ENGINE" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-54. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012741

#### 1.CHECK FUSE

1. Turn ignition switch OFF.
2. Check that the following fuse in IPDM E/R is not blown.

Signal name	Fuse No.
Battery power supply	43

#### Is the fuse fusing?

- YES >> Replace the blown fuse after repairing the cause of blowing.  
NO >> GO TO 2.

#### 2.CHECK NATS ANTENNA AMP. POWER SUPPLY

1. Disconnect NATS antenna amp. connector.
2. Check voltage between NATS antenna amp. harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
NATS antenna amp.			
Connector	Terminal	Ground	Battery voltage
M26	1		

#### Is the inspection result normal?

- YES >> GO TO 4.  
NO >> GO TO 3.

#### 3.CHECK NATS ANTENNA AMP. POWER SUPPLY CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and NATS antenna amp. connector.

# P1614 CHAIN OF IMMU-KEY

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

IPDM E/R		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
E14	42	M26	1	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E14	42		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

NO >> Repair or replace harness.

## 4. CHECK NATS ANTENNA AMP. OUTPUT SIGNAL 1

1. Connect NATS antenna amp. connector.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M68	21	Ground	12

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

## 5. CHECK NATS ANTENNA AMP. OUTPUT SIGNAL CIRCUIT 1

1. Disconnect NATS antenna amp. connector.
2. Check continuity between BCM harness connector and NATS antenna amp. connector.

BCM		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
M68	21	M26	2	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M68	21		Not existed

Is the inspection result normal?

YES >> Replace NATS antenna amp. Refer to [SEC-133, "Removal and Installation"](#).

NO >> Repair or replace harness.

## 6. CHECK NATS ANTENNA AMP. COMMUNICATION SIGNAL 1

1. Connect BCM connector.
2. Check voltage between BCM harness connector and ground using analog tester.

(+)		(-)	Condition	Voltage (V) (Approx.)
BCM				
Connector	Terminal			
M68	21	Ground	Contact Intelligent Key backside to push-button ignition switch, then turn ignition switch ON.	Just after pressing push-button ignition switch, pointer of analog tester should move.

Is the inspection result normal?

# P1614 CHAIN OF IMMU-KEY

[WITH INTELLIGENT KEY SYSTEM]

## < DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 7.

NO >> Replace NATS antenna amp. Refer to [SEC-133, "Removal and Installation"](#).

### 7. CHECK NATS ANTENNA AMP. OUTPUT SIGNAL 2

1. Disconnect BCM connector.
2. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M68	25	Ground	12

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 8.

### 8. CHECK NATS ANTENNA AMP. OUTPUT SIGNAL CIRCUIT 2

1. Disconnect NATS antenna amp. connector.
2. Check continuity between BCM harness connector and NATS antenna amp. connector.

BCM		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
M68	25	M26	3	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M68	25		Not existed

Is the inspection result normal?

YES >> Replace NATS antenna amp. Refer to [SEC-133, "Removal and Installation"](#).

NO >> Repair or replace harness.

### 9. CHECK NATS ANTENNA AMP. COMMUNICATION SIGNAL 2

1. Connect BCM connector.
2. Check voltage between BCM harness connector and ground using analog tester.

(+)		(-)	Condition	Voltage (V) (Approx.)
BCM				
Connector	Terminal			
M68	25	Ground	Contact Intelligent Key backside to push-button ignition switch, then turn ignition switch ON.	Just after pressing push-button ignition switch, pointer of analog tester should move.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace NATS antenna amp. Refer to [SEC-133, "Removal and Installation"](#).

### 10. CHECK NATS ANTENNA AMP. GROUND CIRCUIT

1. Disconnect NATS antenna amp. connector.
2. Check continuity between NATS antenna amp. harness connector and ground.

NATS antenna amp.		Ground	Continuity
Connector	Terminal		
M26	4		Existed

Is the inspection result normal?



# P1614 CHAIN OF IMMU-KEY

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 11.  
NO >> Repair or replace harness.

## 11.CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# B2192 ID DISCORD, IMMUECM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B2192 ID DISCORD, IMMUECM

### DTC Logic

INFOID:000000009012742

#### DTC DETECTION LOGIC

##### NOTE:

- If DTC B2192 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B2192 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2192	ID DISCORD BCM-ECM	The ID verification results between BCM and ECM are NG.	<ul style="list-style-type: none"><li>• Harness or connectors (The CAN communication line is open or shorted.)</li><li>• BCM</li><li>• ECM</li></ul>

#### DTC CONFIRMATION PROCEDURE

##### 1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

##### Is DTC detected?

- YES >> Go to [SEC-58, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

#### Diagnosis Procedure

INFOID:000000009012743

##### 1.PERFORM INITIALIZATION

Perform initialization of BCM and reregistration of all Intelligent Keys using CONSULT.

##### Can the system be initialized and can the engine be started with reregistered Intelligent Key?

- YES >> INSPECTION END  
NO >> GO TO 2.

##### 2.CHECK SELF-DIAGNOSIS RESULT

1. Select "Self Diagnostic Result" mode of "BCM" using CONSULT.
2. Erase DTC.
3. Perform DTC CONFIRMATION PROCEDURE for DTC B2192. Refer to [SEC-58, "DTC Logic"](#).

##### Is DTC detected?

- YES >> GO TO 3.  
NO >> INSPECTION END

##### 3.REPLACE BCM

1. Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).
2. Perform initialization of BCM and reregistration of all Intelligent Keys using CONSULT.

##### Can the system be initialized and can the engine be started with registered Intelligent Key?

- YES >> INSPECTION END  
NO >> GO TO 4.

##### 4.REPLACE ECM

Replace ECM. Refer to [EC-582, "Removal and Installation"](#) (VK56VD for USA and CANADA) or [EC-582, "Removal and Installation"](#) (VK56VD for MEXICO).

>> INSPECTION END

# B2193 CHAIN OF ECM-IMMU

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B2193 CHAIN OF ECM-IMMU

### DTC Logic

INFOID:000000009012744

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B2193 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B2193 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2193	CHAIN OF BCM-ECM	Inactive communication between BCM and ECM	<ul style="list-style-type: none"><li>• Harness or connectors (The CAN communication line is open or shorted.)</li><li>• BCM</li><li>• ECM</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-59, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012745

#### 1.REPLACE BCM

1. Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

#### Can the system be initialized and can the engine be started with registered Intelligent Key?

- YES >> INSPECTION END  
NO >> GO TO 2.

#### 2.REPLACE ECM

Replace ECM. Refer to [EC-582, "Removal and Installation"](#) (VK56VD for USA and CANADA) or [EC-582, "Removal and Installation"](#) (VK56VD for MEXICO).

>> INSPECTION END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# B2195 ANTI-SCANNING

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

## B2195 ANTI-SCANNING

### DTC Logic

INFOID:000000009012746

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2195	ANTI-SCANNING	ID verification between BCM and ECM that is out of the specified specification is detected.	ID verification request out of the specified specification

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Refer to [SEC-60, "Diagnosis Procedure"](#).  
NO >> INSPECTION END.

### Diagnosis Procedure

INFOID:000000009012747

#### 1. CHECK SELF DIAGNOSTIC RESULT 1

1. Select "Self Diagnostic Result" mode of "BCM" using CONSULT.
2. Erase DTC.
3. Perform DTC CONFIRMATION PROCEDURE for DTC B2195. Refer to [SEC-60, "DTC Logic"](#).

#### Is DTC detected?

- YES >> GO TO 2.  
NO >> INSPECTION END

#### 2. CHECK EQUIPMENT OF THE VEHICLE

Check that unspecified accessory part related to engine start is not installed.

#### Is unspecified accessory part related to engine start installed?

- YES >> GO TO 3.  
NO >> GO TO 4.

#### 3. CHECK SELF DIAGNOSTIC RESULT 2

1. Obtain the customers approval to remove unspecified accessory part related to engine start, and then remove it.
2. Select "Self Diagnostic Result" of "BCM" using CONSULT.
3. Erase DTC.
4. Perform DTC CONFIRMATION PROCEDURE for DTC B2195. Refer to [SEC-60, "DTC Logic"](#).

#### Is DTC detected?

- YES >> GO TO 4.  
NO >> INSPECTION END

#### 4. REPLACE BCM

1. Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

>> INSPECTION END

# B2196 DONGLE UNIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B2196 DONGLE UNIT

### Description

INFOID:000000009012748

BCM performs ID verification between BCM and dongle unit.  
When verification result is OK, BCM permits cranking.

### DTC Logic

INFOID:000000009012749

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B2196 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B2196 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2196	DONGLE NG	The ID verification results between BCM and dongle unit is NG.	<ul style="list-style-type: none"><li>• Harness or connectors (Dongle unit circuit is open or shorted.)</li><li>• Dongle unit</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Turn ignition switch OFF.
3. Turn ignition switch ON.
4. Check "Self-diagnosis result" using CONSULT.

#### Is the DTC detected?

- YES >> Refer to [SEC-61, "Diagnosis Procedure"](#).  
NO >> INSPECTION END.

### Diagnosis Procedure

INFOID:000000009012750

#### 1. PERFORM INITIALIZATION

1. Perform initialization of BCM and reregistration of all Intelligent Keys using CONSULT.
2. Start the engine.

#### Dose the engine start?

- YES >> INSPECTION END  
NO >> GO TO 2.

#### 2. CHECK DONGLE UNIT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and dongle unit connector.
3. Check continuity between BCM harness connector and dongle unit harness connector.

BCM		Dongle unit		Continuity
Connector	Terminal	Connector	Terminal	
M68	24	M142	7	Existed

4. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M68	24		Not existed

#### Is the inspection result normal?

- YES >> GO TO 3.

## B2196 DONGLE UNIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

NO >> Repair or replace harness.

### 3.CHECK DONGLE UNIT GROUND CIRCUIT

Check continuity between dongle unit harness connector and ground.

Dongle unit		Ground	Continuity
Connector	Terminal		
M142	1		Existed

Is the inspection result normal?

YES >> Replace dongle unit.

NO >> Repair or replace harness.

# B2198 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B2198 NATS ANTENNA AMP.

### DTC Logic

INFOID:000000009012751

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2198	NATS ANTENNA AMP.	Inactive communication between NATS antenna amp. and BCM	<ul style="list-style-type: none"> <li>• Harness or connectors (NATS antenna amp. circuit is open or shorted.)</li> <li>• NATS antenna amp.</li> <li>• IPDM E/R</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1.PERFORM DTC CONFIRMATION PROCEDURE 1

1. Contact Intelligent Key backside to push-button ignition switch.
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-63. "Diagnosis Procedure"](#).  
 NO >> GO TO 2.

#### 2.PERFORM DTC CONFIRMATION PROCEDURE 2

1. Press the push-button ignition switch.
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-63. "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012752

#### 1.CHECK FUSE

1. Turn ignition switch OFF.
2. Check that the following fuse in IPDM E/R is not blown.

Signal name	Fuse No.
Battery power supply	43

#### Is the fuse fusing?

- YES >> Replace the blown fuse after repairing the cause of blowing.  
 NO >> GO TO 2.

#### 2.CHECK NATS ANTENNA AMP. POWER SUPPLY

1. Disconnect NATS antenna amp. connector.
2. Check voltage between NATS antenna amp. harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
NATS antenna amp.			
Connector	Terminal		
M26	1	Ground	Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 4.  
 NO >> GO TO 3.

#### 3.CHECK NATS ANTENNA AMP. POWER SUPPLY CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and NATS antenna amp. connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# B2198 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

IPDM E/R		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
E14	42	M26	1	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E14	42		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

NO >> Repair or replace harness.

## 4. CHECK NATS ANTENNA AMP. OUTPUT SIGNAL 1

1. Connect NATS antenna amp. connector.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M68	21	Ground	12

Is the inspection result normal?

YES >> GO TO 6.

NO >> GO TO 5.

## 5. CHECK NATS ANTENNA AMP. OUTPUT SIGNAL CIRCUIT 1

1. Disconnect NATS antenna amp. connector.
2. Check continuity between BCM harness connector and NATS antenna amp. connector.

BCM		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
M68	21	M26	2	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M68	21		Not existed

Is the inspection result normal?

YES >> Replace NATS antenna amp. Refer to [SEC-133, "Removal and Installation"](#).

NO >> Repair or replace harness.

## 6. CHECK NATS ANTENNA AMP. COMMUNICATION SIGNAL 1

1. Connect BCM connector.
2. Check voltage between BCM harness connector and ground using analog tester.

(+)		(-)	Condition	Voltage (V) (Approx.)
BCM				
Connector	Terminal			
M68	21	Ground	Contact Intelligent Key backside to push-button ignition switch, then turn ignition switch ON.	Just after pressing push-button ignition switch, pointer of analog tester should move.

Is the inspection result normal?



# B2198 NATS ANTENNA AMP.

[WITH INTELLIGENT KEY SYSTEM]

## < DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 7.

NO >> Replace NATS antenna amp. Refer to [SEC-133, "Removal and Installation"](#).

### 7. CHECK NATS ANTENNA AMP. OUTPUT SIGNAL 2

1. Disconnect BCM connector.
2. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M68	25	Ground	12

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 8.

### 8. CHECK NATS ANTENNA AMP. OUTPUT SIGNAL CIRCUIT 2

1. Disconnect NATS antenna amp. connector.
2. Check continuity between BCM harness connector and NATS antenna amp. connector.

BCM		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
M68	25	M26	3	Existed

3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M68	25		Not existed

Is the inspection result normal?

YES >> Replace NATS antenna amp. Refer to [SEC-133, "Removal and Installation"](#).

NO >> Repair or replace harness.

### 9. CHECK NATS ANTENNA AMP. COMMUNICATION SIGNAL 2

1. Connect BCM connector.
2. Check voltage between BCM harness connector and ground using analog tester.

(+)		(-)	Condition	Voltage (V) (Approx.)
BCM				
Connector	Terminal			
M68	25	Ground	Contact Intelligent Key backside to push-button ignition switch, then turn ignition switch ON.	Just after pressing push-button ignition switch, pointer of analog tester should move.

Is the inspection result normal?

YES >> GO TO 10.

NO >> Replace NATS antenna amp. Refer to [SEC-133, "Removal and Installation"](#).

### 10. CHECK NATS ANTENNA AMP. GROUND CIRCUIT

1. Disconnect NATS antenna amp. connector.
2. Check continuity between NATS antenna amp. harness connector and ground.

NATS antenna amp.		Ground	Continuity
Connector	Terminal		
M26	4		Existed

Is the inspection result normal?

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

## B2198 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

---

YES >> GO TO 11.

NO >> Repair or replace harness.

**11**.CHECK INTERMITTENT INCIDENT

---

Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

# B2555 STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B2555 STOP LAMP

### DTC Logic

INFOID:000000009012753

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2555	STOP LAMP	BCM makes a comparison between the upper voltage and lower voltage of stop lamp switch. It judges from their values to detect the malfunctioning circuit.	<ul style="list-style-type: none"><li>• Harness or connectors (Stop lamp switch circuit is open or shorted.)</li><li>• Stop lamp switch</li><li>• Fuse</li><li>• BCM</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1.PERFORM DTC CONFIRMATION PROCEDURE

1. Depress the brake pedal and wait 1 second or more.
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-67. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012754

#### 1.CHECK STOP LAMP SWITCH INPUT SIGNAL 1

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal		
M71	105	Ground	Battery voltage

#### Is the inspection normal?

- YES >> GO TO 2.  
NO-1 >> Check 10 A fuse [No. 7, located in the fuse block (J/B)].  
NO-2 >> Check harness for open or short between BCM and fuse.

#### 2.CHECK STOP LAMP SWITCH POWER SUPPLY CIRCUIT

1. Disconnect stop lamp switch connector.
2. Check voltage between stop lamp switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Stop lamp switch			
Connector	Terminal		
E115	1	Ground	Battery voltage

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Check harness for open or short between stop lamp switch and fuse.

#### 3.CHECK STOP LAMP SWITCH INPUT SIGNAL 2

1. Connect stop lamp switch connector.
2. Check voltage between BCM harness connector and ground.

# B2555 STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

(+)		(-)	Condition		Voltage (V) (Approx.)
BCM					
Connector	Terminal				
M68	9	Ground	Brake pedal	Depressed	Battery voltage
				Not depressed	0

Is the inspecting result normal?

YES >> GO TO 4.

NO >> GO TO 5.

## 4. REPLACE BCM

1. Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

>> INSPECTION END

## 5. CHECK STOP LAMP SWITCH CIRCUIT

1. Disconnect stop lamp switch connector.
2. Check continuity between stop lamp switch harness connector and BCM harness connector.

Stop lamp switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E115	2	M68	9	Existed

3. Check continuity between stop lamp switch harness connector and ground.

Stop lamp switch		Ground	Continuity
Connector	Terminal		
E115	2		Not existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

## 6. CHECK STOP LAMP SWITCH

Refer to [SEC-68, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace stop lamp switch. Refer to [BR-20, "Removal and Installation"](#).

## 7. CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:000000009012755

### 1. CHECK STOP LAMP SWITCH

1. Turn ignition switch OFF.
2. Disconnect stop lamp switch connector.
3. Check continuity between stop lamp switch terminals.

# B2555 STOP LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Stop lamp switch		Condition		Continuity
Terminal				
1	2	Brake pedal	Not depressed	Not existed
			Depressed	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace stop lamp switch. Refer to [BR-20, "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# B2556 PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B2556 PUSH-BUTTON IGNITION SWITCH

### DTC Logic

INFOID:000000009012756

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2556	PUSH-BTN IGN SW	BCM detects the push-button ignition switch stuck at ON for 100 seconds or more.	<ul style="list-style-type: none"><li>• Harness or connectors (Push-button ignition switch circuit is shorted.)</li><li>• Push-button ignition switch</li><li>• BCM</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Press push-button ignition switch under the following condition.
  - Brake pedal: Not depressed
2. Release push-button ignition switch and wait 100 seconds or more.
3. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-70. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012757

#### 1. CHECK PUSH-BUTTON IGNITION SWITCH INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check voltage between push-button ignition switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Push-button ignition switch			
Connector	Terminal	Ground	12
M101	4		

#### Is the inspection result normal?

- YES >> GO TO 4.  
NO >> GO TO 2.

#### 2. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between push-button ignition switch harness connector and BCM harness connector.

Push-button ignition switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M101	4	M71	100	Existed

3. Check continuity between push-button ignition switch harness connector and ground.

Push-button ignition switch		Ground	Continuity
Connector	Terminal		
M101	4		Not existed

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace harness.

# B2556 PUSH-BUTTON IGNITION SWITCH

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

## 3. REPLACE BCM

1. Replace BCM. Refer to [BCS-95. "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

>> INSPECTION END

## 4. CHECK PUSH-BUTTON IGNITION SWITCH GROUND CIRCUIT

Check continuity between push-button ignition switch harness connector and ground.

Push-button ignition switch		Ground	Continuity
Connector	Terminal		
M101	1		Existed

Is the inspection result normal?

- YES >> GO TO 5.  
NO >> Repair or replace harness.

## 5. CHECK PUSH-BUTTON IGNITION SWITCH

Refer to [SEC-71. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 6.  
NO >> Replace push-button ignition switch. Refer to [SEC-134. "Removal and Installation"](#).

## 6. CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:000000009012758

## 1. CHECK PUSH-BUTTON IGNITION SWITCH

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check continuity between push-button ignition switch terminals.

Push-button ignition switch		Condition		Continuity
Terminal		Push-button ignition switch		
1	4		Pressed	Existed
		Not pressed	Not existed	

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace push-button ignition switch. Refer to [SEC-134. "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# B2557 VEHICLE SPEED

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B2557 VEHICLE SPEED

### DTC Logic

INFOID:000000009012759

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B2557 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B2557 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible causes
B2557	VEHICLE SPEED	BCM detects one of the following conditions for 10 seconds continuously. <ul style="list-style-type: none"><li>• Vehicle speed signal from combination meter is 10 km/h (6.2 MPH) or more, and vehicle speed signal from ABS actuator and electric unit (control unit) is 4 km/h (2.5 MPH) or less.</li><li>• Vehicle speed signal from combination meter is 4 km/h (2.5 MPH) or less, and vehicle speed signal from ABS actuator and electric unit (control unit) is 10 km/h (6.2 MPH) or more.</li></ul>	<ul style="list-style-type: none"><li>• Harness or connectors (The CAN communication line is open or shorted.)</li><li>• Combination meter</li><li>• ABS actuator and electric unit (control unit)</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Start engine and wait 10 seconds or more.
2. Drive the vehicle at a vehicle speed of 10 km/h (6.2 MPH) or more for 10 seconds or more.
3. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-72, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012760

#### 1. CHECK DTC OF "ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)"

Check DTC in "Self Diagnostic Result" mode of "ABS" using CONSULT.

#### Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [BRC-50, "DTC Index"](#).  
NO >> GO TO 2.

#### 2. CHECK DTC OF "COMBINATION METER"

Check DTC in "Self Diagnostic Result" mode of "METER/M&A" using CONSULT.

#### Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [MWI-44, "DTC Index"](#).  
NO >> GO TO 3.

#### 3. CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END



# B2601 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B2601 SHIFT POSITION

### DTC Logic

INFOID:000000009012761

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B2601 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B2601 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2601	SHIFT POSITION	When there is a difference between P range signal from A/T shift selector (detention switch) and P position signal from IPDM E/R (CAN).	<ul style="list-style-type: none"> <li>• Harness or connectors (CAN communication line is open or shorted.)</li> <li>• Harness or connectors [A/T shift selector (detention switch) circuit is open or shorted.]</li> <li>• A/T shift selector (detention switch)</li> <li>• BCM</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Shift the selector lever to the P position.
2. Turn ignition switch ON and wait 2 seconds or more.
3. Shift the selector lever to any position other than P, and wait 2 seconds or more.
4. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-73, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012762

#### 1. CHECK A/T SHIFT SELECTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector (detention switch) connector.
3. Check voltage between A/T shift selector (detention switch) harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
A/T shift selector (detention switch)	Connector		
	Terminal		
M57	13	Ground	12

#### Is the inspection result normal?

- YES >> GO TO 4.  
 NO >> GO TO 2.

#### 2. CHECK A/T SHIFT SELECTOR POWER SUPPLY CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between A/T shift selector (detention switch) harness connector and BCM harness connector.

A/T shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M57	13	M71	104	Existed

3. Check continuity between A/T shift selector (detention switch) harness connector and ground.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

## B2601 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

A/T shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M57	13		Not existed

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace harness.

### 3. REPLACE BCM

1. Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

>> INSPECTION END

### 4. CHECK A/T SHIFT SELECTOR CIRCUIT (BCM)

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between A/T shift selector (detention switch) harness connector and BCM harness connector.

A/T shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M57	14	M68	37	Existed

3. Check continuity between A/T shift selector (detention switch) harness connector and ground.

A/T shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M57	14		Not existed

Is the inspection result normal?

- YES >> GO TO 5.  
NO >> Repair or replace harness.

### 5. CHECK A/T SHIFT SELECTOR CIRCUIT (IPDM E/R)

Check continuity between A/T shift selector (detention switch) harness connector and IPDM E/R harness connector.

A/T shift selector (detention switch)		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M57	14	E17	64	Existed

Is the inspection result normal?

- YES >> GO TO 6.  
NO >> Repair or replace harness.

### 6. CHECK A/T SHIFT SELECTOR (DETENTION SWITCH)

Refer to [SEC-75, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 7.  
NO >> Replace A/T shift selector. Refer to [TM-185, "Removal and Installation"](#).

### 7. CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

# B2601 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## Component Inspection

INFOID:000000009012763

### 1. CHECK A/T SHIFT SELECTOR (DETENTION SWITCH)

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector connector.
3. Check continuity between A/T shift selector (detention switch) terminals.

A/T shift selector (detention switch)		Condition		Continuity
Terminal				
13	14	Selector lever	P position	Not existed
			Other than above	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace A/T shift selector. Refer to [TM-185, "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# B2602 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B2602 SHIFT POSITION

### DTC Logic

INFOID:000000009012764

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B2602 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B2602 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2602	SHIFT POSITION	BCM detects the following status for 10 seconds. <ul style="list-style-type: none"> <li>• Selector lever is in the P position</li> <li>• Vehicle speed is 4 km/h (2.5 MPH) or more</li> <li>• Ignition switch is in the ON position</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (CAN communication line is open or shorted.)</li> <li>• Harness or connectors [A/T shift selector (detention switch) circuit is open or shorted.]</li> <li>• A/T shift selector (detention switch)</li> <li>• Combination meter</li> <li>• BCM</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Start engine.
2. Drive vehicle at a speed of 4 km/h (2.5 MPH) or more for 10 seconds or more.
3. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-76, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012765

#### 1. CHECK DTC OF COMBINATION METER

Check DTC in "Self Diagnostic Result" mode of "METER/M&A" using CONSULT.

#### Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [MWI-44, "DTC Index"](#).  
 NO >> GO TO 2.

#### 2. CHECK A/T SHIFT SELECTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector (detention switch) connector.
3. Check voltage between A/T shift selector (detention switch) harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
A/T shift selector (detention switch) Connector	Terminal		
M57	13	Ground	12

#### Is the inspection result normal?

- YES >> GO TO 5.  
 NO >> GO TO 3.

#### 3. CHECK A/T SHIFT SELECTOR POWER SUPPLY CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between A/T shift selector (detention switch) harness connector and BCM harness connector.

# B2602 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

A/T shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M57	13	M71	104	Existed

3. Check continuity between A/T shift selector (detention switch) harness connector and ground.

A/T shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M57	13		Not existed

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Repair or replace harness.

## 4.REPLACE BCM

1. Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

>> INSPECTION END

## 5.CHECK A/T SHIFT SELECTOR CIRCUIT

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between A/T shift selector (detention switch) harness connector and BCM harness connector.

A/T shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M57	14	M68	37	Existed

3. Check continuity between A/T shift selector (detention switch) harness connector and ground.

A/T shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M57	14		Not existed

Is the inspection result normal?

- YES >> GO TO 6.  
NO >> Repair or replace harness.

## 6.CHECK A/T SHIFT SELECTOR (DETENTION SWITCH)

Refer to [SEC-77, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 7.  
NO >> Replace A/T shift selector. Refer to [TM-185, "Removal and Installation"](#).

## 7.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:000000009012766

### 1.CHECK A/T SHIFT SELECTOR (DETENTION SWITCH)

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector connector.
3. Check continuity between A/T shift selector (detention switch) terminals.

## B2602 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

A/T shift selector (detention switch)		Condition		Continuity
Terminal				
13	14	Selector lever	P position	Not existed
			Other than above	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace A/T shift selector. Refer to [TM-185, "Removal and Installation"](#).

# B2603 SHIFT POSITION

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

## B2603 SHIFT POSITION

### DTC Logic

INFOID:000000009012767

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B2603 is displayed with DTC B2601, first perform the trouble diagnosis for DTC B2601. Refer to [SEC-73, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible causes
B2603	SHIFT POSI STATUS	BCM detects the following status when ignition switch is in the ON position. <ul style="list-style-type: none"><li>• P position signal from TCM: approx. 0 V</li><li>• A/T shift selector (detention switch) signal: approx. 0 V</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector [A/T shift selector (detention switch) circuit is open or shorted.]</li><li>• Harness or connectors (TCM circuit is open or shorted.)</li><li>• A/T shift selector (detention switch)</li><li>• A/T assembly (TCM)</li><li>• BCM</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE 1

1. Shift the selector lever to the P position.
2. Turn ignition switch ON and wait 1 second or more.
3. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-79, "Diagnosis Procedure"](#).  
NO >> GO TO 2.

#### 2. PERFORM DTC CONFIRMATION PROCEDURE 2

1. Shift the selector lever to any position other than P, and wait 1 second or more.
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-79, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012768

#### 1. INSPECTION START

Perform inspection in accordance with procedure that confirms DTC.

#### Which procedure confirms DTC?

- DTC confirmation procedure 1 >> GO TO 2.  
DTC confirmation procedure 2 >> GO TO 6.

#### 2. CHECK DTC OF TCM

Check DTC in "Self Diagnostic Result" mode of "TCM" using CONSULT.

#### Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [TM-82, "DTC Index"](#).  
NO >> GO TO 3.

#### 3. CHECK BCM INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between BCM harness connector and ground.

## B2603 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

(+)		(-)	Condition		Voltage (V) (Approx.)
BCM					
Connector	Terminal				
M71	102	Ground	Selector lever	P or N position	12
				Other than above	0

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 5.

### 4. REPLACE BCM

1. Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

>> INSPECTION END

### 5. CHECK BCM INPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Disconnect A/T assembly connector.
4. Check continuity between A/T assembly harness connector and BCM harness connector.

A/T assembly		BCM		Continuity
Connector	Terminal	Connector	Terminal	
F51	9	M71	102	Existed

5. Check continuity between A/T assembly harness connector and ground.

A/T assembly		Ground	Continuity
Connector	Terminal		
F51	9		Not existed

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace harness.

### 6. CHECK A/T SHIFT SELECTOR POWER SUPPLY

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector (detention switch) connector.
3. Check voltage between A/T shift selector (detention switch) harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
A/T shift selector (detention switch)			
Connector	Terminal		
M57	13	Ground	12

Is the inspection result normal?

YES >> GO TO 9.

NO >> GO TO 7.

### 7. CHECK A/T SHIFT SELECTOR POWER SUPPLY CIRCUIT

1. Disconnect BCM connector.
2. Check continuity between A/T shift selector (detention switch) harness connector and BCM harness connector.



# B2603 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

A/T shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M57	13	M71	104	Existed

3. Check continuity between A/T shift selector (detention switch) harness connector and ground.

A/T shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M57	13		Not existed

Is the inspection result normal?

- YES >> GO TO 8.  
NO >> Repair or replace harness.

## 8. REPLACE BCM

1. Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

>> INSPECTION END

## 9. CHECK A/T SHIFT SELECTOR CIRCUIT

1. Disconnect BCM connector and IPDM E/R connector.
2. Check continuity between A/T shift selector (detention switch) harness connector and BCM harness connector.

A/T shift selector (detention switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M57	14	M68	37	Existed

3. Check continuity between A/T shift selector (detention switch) harness connector and ground.

A/T shift selector (detention switch)		Ground	Continuity
Connector	Terminal		
M57	14		Not existed

Is the inspection result normal?

- YES >> GO TO 10.  
NO >> Repair or replace harness.

## 10. CHECK A/T SHIFT SELECTOR (DETENTION SWITCH)

Refer to [SEC-81, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 11.  
NO >> Replace A/T shift selector. Refer to [TM-185, "Removal and Installation"](#).

## 11. CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:000000009012769

### 1. CHECK A/T SHIFT SELECTOR (DETENTION SWITCH)

1. Turn ignition switch OFF.
2. Disconnect A/T shift selector connector.
3. Check continuity between A/T shift selector (detention switch) terminals.

## B2603 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

A/T shift selector (detention switch)		Condition		Continuity
Terminal				
13	14	Selector lever	P position	Not existed
			Other than above	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace A/T shift selector. Refer to [TM-185, "Removal and Installation"](#).

# B2604 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B2604 SHIFT POSITION

### DTC Logic

INFOID:000000009012770

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B2604 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B2604 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2604	PNP/CLUTCH SW	<p>The following states are detected for 5 seconds while ignition switch is ON.</p> <ul style="list-style-type: none"> <li>• P/N position signal is sent from TCM but shift position signal input (CAN) from TCM is other than P and N</li> <li>• P/N position signal is not sent from TCM but shift position signal input (CAN) from TCM is P or N</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (CAN communication line is open or shorted.)</li> <li>• Harness or connectors (TCM circuit is open or shorted.)</li> <li>• TCM</li> <li>• BCM</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Shift the selector lever to the P position.
2. Turn ignition switch ON and wait 5 seconds or more.
3. Shift the selector lever to the N position and wait 5 seconds or more.
4. Shift the selector lever to any position other than P and N, and wait 5 seconds or more.
5. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-83, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012771

#### 1. CHECK DTC OF TCM

Check DTC in "Self Diagnostic Result" mode of "TCM" using CONSULT.

#### Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [TM-82, "DTC Index"](#).  
 NO >> GO TO 2.

#### 2. CHECK BCM INPUT SIGNAL

1. Turn ignition switch ON.
2. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)	
BCM					
Connector	Terminal				
M71	102	Ground	Selector lever	P or N position	12
				Other than above	0

#### Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> GO TO 4.

#### 3. REPLACE BCM

1. Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# B2604 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

>> INSPECTION END

## 4. CHECK BCM INPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect A/T assembly connector.
3. Disconnect BCM connector.
4. Check continuity between A/T assembly harness connector and BCM harness connector.

A/T assembly		BCM		Continuity
Connector	Terminal	Connector	Terminal	
F51	9	M71	102	Existed

5. Check continuity between A/T assembly harness connector and ground.

A/T assembly		Ground	Continuity
Connector	Terminal		
F51	9		Not existed

Is the inspection result normal?

- YES >> GO TO 5.  
NO >> Repair or replace harness.

## 5. CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

# B2605 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B2605 SHIFT POSITION

### DTC Logic

INFOID:000000009012772

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B2605 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B2605 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2605	PNP/CLUTCH SW	When ignition switch is ON, P/N position signal input from TCM and P/N position signal (CAN) input from IPDM E/R do not match.	<ul style="list-style-type: none"> <li>• Harness or connectors (CAN communication line is open or shorted.)</li> <li>• Harness or connectors (TCM circuit is open or shorted.)</li> <li>• IPDM E/R</li> <li>• BCM</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Shift the selector lever to the P position.
2. Turn ignition switch ON and wait 1 second or more.
3. Shift the selector lever to the N position and wait 1 second or more.
4. Shift the selector lever to any position other than P and N, and wait 1 second or more.
5. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-85, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012773

#### 1. CHECK IPDM E/R INPUT SIGNAL

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Turn ignition switch ON.
4. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
IPDM E/R				
Connector	Terminal			
E15	48	Ground	Selector lever	P or N position 12
				Other than above 0

#### Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).  
 NO >> GO TO 2.

#### 2. CHECK IPDM E/R INPUT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between IPDM E/R harness connector and BCM harness connector.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E15	48	M71	102	Existed

## B2605 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

4. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E15	48		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

### 3.REPLACE BCM

1. Replace BCM. Refer to [BCS-95. "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

>> INSPECTION END

# B2608 STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B2608 STARTER RELAY

### DTC Logic

INFOID:000000009012774

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B2608 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B2608 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2608	STARTER RELAY	BCM outputs starter motor relay OFF signal but BCM receives starter motor relay ON signal from IPDM E/R (CAN).	<ul style="list-style-type: none"> <li>• Harness or connectors (CAN communication line is open or shorted.)</li> <li>• Harness or connectors (Starter relay circuit is open or shorted.)</li> <li>• IPDM E/R</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Press push-button ignition switch under the following conditions to start engine.
  - Selector lever: In the P position
  - Brake pedal: Depressed
2. Wait 1 second after engine started.
3. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-87, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012775

#### 1. CHECK DTC OF IPDM E/R

Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

#### Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [PCS-22, "DTC Index"](#).  
 NO >> GO TO 2.

#### 2. CHECK BCM POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)
BCM				
Connector	Terminal			
M71	97	Ground	Selector lever	N or P position 12
				Other than above 0

#### Is the inspection result normal?

- YES >> GO TO 4.  
 NO >> GO TO 3.

#### 3. CHECK STARTER RELAY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Disconnect BCM connector.
4. Check continuity between IPDM E/R harness connector and BCM harness connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

## B2608 STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E13	30	M71	97	Existed

5. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E13	30		Not existed

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

NO >> Repair or replace harness.

### 4. CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END



# B260F ENGINE STATUS

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

## B260F ENGINE STATUS

### Description

INFOID:000000009012776

BCM receives the engine status signal from ECM via CAN communication.

### DTC Logic

INFOID:000000009012777

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B260F is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B260F is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B260F	ENG STATE SIG LOST	BCM has not yet received the engine status signal from ECM when ignition switch is in the ON position.	<ul style="list-style-type: none"><li>• Harness or connectors (CAN communication line is open or shorted.)</li><li>• ECM</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON and wait 2 seconds or more.
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-89, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012778

#### 1. INSPECTION START

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "BCM" using CONSULT.
3. Touch "ERASE".
4. Perform DTC CONFIRMATION PROCEDURE for DTC B260F. Refer to [SEC-89, "DTC Logic"](#).

#### Is DTC detected?

- YES >> GO TO 2.  
NO >> INSPECTION END

#### 2. REPLACE ECM

Replace ECM. Refer to [EC-582, "Removal and Installation"](#) (VK56VD for USA and CANADA) or [EC-582, "Removal and Installation"](#) (VK56VD for MEXICO).

>> INSPECTION END

# B261B REMOTE ENGINE START

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B261B REMOTE ENGINE START

### DTC Logic

INFOID:000000009325269

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B261B is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B261B is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).
- If DTC B261B is displayed with DTC B26F1, first perform the trouble diagnosis for DTC B26F1. Refer to [PCS-67, "Diagnosis Procedure"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B261B	RES ENG RUN STUCK MALFNC	Engine status signal, which is received from ECM via CAN communication 10 seconds after BCM stops engine while remote engine start function is in operation, indicates that engine is in operation status.	<ul style="list-style-type: none"><li>• Harness or connectors [Ignition relay (IPDM E/R) control circuit is open or shorted.]</li><li>• Harness or connectors (CAN communication line is open or shorted.)</li><li>• BCM</li><li>• ECM</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Operate REMOTE ENGINE START button of Intelligent Key. Start engine.
2. Operate REMOTE ENGINE START button of Intelligent Key. Stop engine.
3. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Refer to [SEC-90, "Diagnosis Procedure"](#)  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009325270

#### 1. CHECK DTC OF ECM

Check DTC in "Self Diagnostic Result" mode of "ECM" using CONSULT.

#### Is DTC detected?

- YES >> Perform the diagnosis procedure related to the detected DTC. Refer to [EC-107, "DTC Index"](#) (VK56VD for USA and CANADA) or [EC-672, "DTC Index"](#) (VK56VD for MEXICO).  
NO >> GO TO 2.

#### 2. REPLACE BCM

Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).

>> INSPECTION END

# B26F3 STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B26F3 STARTER CONTROL RELAY

### DTC Logic

INFOID:000000009012779

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B26F3 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B26F3 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26F3	START CONT RLY ON	BCM requests IPDM E/R to turn starter control relay OFF, but BCM cannot receive starter control relay OFF state signal from IPDM E/R (CAN).	<ul style="list-style-type: none"><li>• Harness or connectors (CAN communication line is open or shorted.)</li><li>• IPDM E/R</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Press push-button ignition switch under the following conditions to start engine.
  - Selector lever: In the P position
  - Brake pedal: Depressed
2. Wait 2 seconds after engine started.
3. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-91, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012780

#### 1. CHECK DTC OF IPDM E/R

Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

#### Is DTC detected?

- YES >> Perform the diagnosis procedure related to the detected DTC. Refer to [PCS-22, "DTC Index"](#).  
NO >> GO TO 2.

#### 2. CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

# B26F4 STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B26F4 STARTER CONTROL RELAY

### DTC Logic

INFOID:000000009012781

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B26F4 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B26F4 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26F4	START CONT RELAY OFF	BCM requests IPDM E/R to turn starter control relay ON, but BCM cannot receive starter control relay ON state signal from IPDM E/R.	<ul style="list-style-type: none"><li>• Harness or connectors (CAN communication line is open or shorted.)</li><li>• IPDM E/R</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Press push-button ignition switch under the following conditions to start engine, and wait 1 second or more.
  - Selector lever: In the P position
  - Brake pedal: Depressed
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-92, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012782

#### 1. CHECK DTC OF IPDM E/R

Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

#### Is DTC detected?

- YES >> Perform the diagnosis procedure related to the detected DTC. Refer to [PCS-22, "DTC Index"](#).  
NO >> GO TO 2.

#### 2. CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

# B26F7 BCM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B26F7 BCM

### DTC Logic

INFOID:000000009012783

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26F7	BCM	Inside key antenna output circuit in BCM is malfunctioning.	BCM

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Press door request switch.
2. Turn ignition switch ON.
3. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-94, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012784

#### 1. INSPECTION START

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "BCM" using CONSULT.
3. Touch "ERASE".
4. Perform DTC CONFIRMATION PROCEDURE for DTC B26F7. Refer to [SEC-93, "DTC Logic"](#).

#### Is DTC detected?

- YES >> GO TO 2.  
NO >> INSPECTION END

#### 2. REPLACE BCM

1. Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

>> INSPECTION END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

**B26F8 BCM****DTC Logic**

INFOID:000000009012785

**DTC DETECTION LOGIC****NOTE:**

DTC B26F8 can be detected even though the related circuit is not used in this vehicle.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26F8	BCM	Starter control replay control signal and feedback circuit signal (inside BCM) does not match.	BCM

**DTC CONFIRMATION PROCEDURE****1.PERFORM DTC CONFIRMATION PROCEDURE**

1. Turn ignition switch ON and wait 1 second.
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

**Is DTC detected?**

- YES >> Go to [SEC-94, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

**Diagnosis Procedure**

INFOID:000000009012786

**1.INSPECTION START**

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "BCM" using CONSULT.
3. Touch "ERASE".
4. Perform DTC CONFIRMATION PROCEDURE for DTC B26F8.  
Refer to [SEC-94, "DTC Logic"](#).

**Is DTC detected?**

- YES >> GO TO 2.  
 NO >> INSPECTION END

**2.REPLACE BCM**

1. Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

>> INSPECTION END

# B26F9 CRANKING REQUEST CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B26F9 CRANKING REQUEST CIRCUIT

### DTC Logic

INFOID:000000009012787

### DTC DETECTION LOGIC

#### NOTE:

- DTC B26F9 can be detected even though the related circuit is not used in this vehicle.
- If DTC B26F9 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B26F9 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26F9	CRANK REQ CIR SHORT	BCM detects that the status of the following signals does not match. <ul style="list-style-type: none"><li>• Cranking request signal from ECM</li><li>• Starter control relay control signal from ECM (CAN)</li></ul>	<ul style="list-style-type: none"><li>• Harness or connectors (Can communication line is open or shorted.)</li><li>• Harness or connectors (Cranking request signal circuit is open or shorted.)</li><li>• ECM</li><li>• BCM</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION

1. Start engine and wait 2 seconds or more at idle speed.
2. Drive vehicle for 2 seconds or more.
3. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-95, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012788

#### 1. CHECK CRANKING REQUEST SIGNAL

1. Turn ignition switch ON.
2. Check voltage between BCM harness connector and ground under the following conditions.

(+)		(-)	Condition	Voltage (V) (Approx.)
BCM				
Connector	Terminal			
M69	64	Ground	Ignition switch ON	<ul style="list-style-type: none"><li>• Engine: Stopped</li><li>• Selector lever position: P</li></ul> 0
				<ul style="list-style-type: none"><li>• Engine: Stopped</li><li>• Selector lever position: Other than P</li></ul> 12
				Engine running

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2. CHECK CRANKING REQUEST SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Disconnect ECM connector.
4. Check continuity between BCM harness connector and ECM harness connector.

## B26F9 CRANKING REQUEST CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

BCM		ECM		Continuity
Connector	Terminal	Connector	Terminal	
M69	64	E80	165	Existed

5. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M69	64		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

### 3.REPLACE BCM

1. Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.
3. Perform DTC CONFIRMATION PROCEDURE for DTC B26F9. Refer to [SEC-95, "DTC Logic"](#).

Is DTC detected?

YES >> GO TO 4.

NO >> INSPECTION END

### 4.REPLACE ECM

Replace ECM. Refer to [EC-582, "Removal and Installation"](#) (VK56VD for USA and CANADA) or [EC-582, "Removal and Installation"](#) (VK56VD for MEXICO).

>> INSPECTION END



# B26FA CRANKING REQUEST CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B26FA CRANKING REQUEST CIRCUIT

### DTC Logic

INFOID:000000009012789

### DTC DETECTION LOGIC

#### NOTE:

- DTC B26FA can be detected even though the related circuit is not used in this vehicle.
- If DTC B26FA is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B26FA is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26FA	CRANK REQ CIR OPEN	BCM detects that the status of the following signals does not match. <ul style="list-style-type: none"> <li>• Cranking request signal from ECM</li> <li>• Starter control relay control signal from ECM (CAN)</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (Can communication line is open or shorted.)</li> <li>• Harness or connectors (Cranking request signal circuit is open or shorted.)</li> <li>• BCM</li> <li>• ECM</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION

1. Start engine and wait 2 seconds or more at idle speed.
2. Drive vehicle for 2 seconds or more.
3. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-97, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012790

#### 1. CHECK CRANKING REQUEST SIGNAL

1. Turn ignition switch ON.
2. Check voltage between BCM harness connector and ground under the following conditions.

(+)		(-)	Condition	Voltage (V) (Approx.)
BCM				
Connector	Terminal			
M69	64	Ground	Ignition switch ON	<ul style="list-style-type: none"> <li>• Engine: Stopped</li> <li>• Selector lever position: P</li> </ul> 0
			<ul style="list-style-type: none"> <li>• Engine: Stopped</li> <li>• Selector lever position: Other than P</li> </ul> 12	
			Engine running	12

#### Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> GO TO 2.

#### 2. CHECK CRANKING REQUEST SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Disconnect ECM connector.
4. Check continuity between BCM harness connector and ECM harness connector.

# B26FA CRANKING REQUEST CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

BCM		ECM		Continuity
Connector	Terminal	Connector	Terminal	
M69	64	E80	165	Existed

5. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M69	64		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

## 3.REPLACE BCM

1. Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.
3. Perform DTC CONFIRMATION PROCEDURE for DTC B26FA. Refer to [SEC-97, "DTC Logic"](#).

Is DTC detected?

YES >> GO TO 4.

NO >> INSPECTION END

## 4.REPLACE ECM

Replace ECM. Refer to [EC-582, "Removal and Installation"](#) (VK56VD for USA and CANADA) or [EC-582, "Removal and Installation"](#) (VK56VD for MEXICO).

>> INSPECTION END

# B26FC KEY REGISTRATION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B26FC KEY REGISTRATION

### DTC Logic

INFOID:000000009012791

### DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26FC	KEY REGISTRATION	Intelligent Key that does not match the vehicle is registered.	<ul style="list-style-type: none"><li>Improper registration operation</li><li>Intelligent Key</li><li>BCM</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1.PERFORM DTC CONFIRMATION PROCEDURE

1. Perform initialization of BCM and reregistration of all Intelligent Keys using CONSULT.
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-99. "Diagnosis Procedure"](#)  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012792

#### 1.REPLACE INTELLIGENT KEY

1. Prepare Intelligent Key that matches the vehicle.
2. Perform initialization of BCM and registration of Intelligent Key using CONSULT.
3. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> GO TO 2.  
NO >> INSPECTION END

#### 2.REPLACE BCM

1. Replace BCM. Refer to [BCS-95. "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

>> INSPECTION END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# B26FE HOOD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B26FE HOOD SWITCH

### DTC Logic

INFOID:000000009325271

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B26FE is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-83, "DTC Logic"](#).
- If DTC B26FE is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-84, "DTC Logic"](#).

DTC	CONSULT display description	DTC detecting condition	Possible cause
B26FE	HOOD SW CAN DIAG ERROR	Hood switch signals (Hood switch 1 and Hood switch 2) received from IPDM E/R via CAN communication are different.	<ul style="list-style-type: none"> <li>• Harness or connector (hood switch circuit is open or shorted)</li> <li>• Hood switch 1</li> <li>• Hood switch 2</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Open the hood.
3. Close the hood.
4. Check Self Diagnostic Result mode of BCM using CONSULT.

#### Is DTC detected?

- YES >> Refer to [SEC-100, "Diagnosis Procedure"](#).  
 NO >> Hood switch is OK.

### Diagnosis Procedure

INFOID:000000009325272

#### 1. CHECK HOOD SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect hood switch connector.
3. Check voltage between hood switch harness connector and ground.

#### Hood switch 1

(+)		(-)	Voltage (V) (Approx.)
Hood switch 1			
Connector	Terminal		
E57	1	Ground	12

#### Hood switch 2

(+)		(-)	Voltage (V) (Approx.)
Hood switch 2			
Connector	Terminal		
E49	1	Ground	12

#### Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> GO TO 2.

#### 2. CHECK HOOD SWITCH SIGNAL CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and hood switch harness connector.

# B26FE HOOD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## Hood switch 1

Hood switch 1		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E57	1	E13	32	Existed

## Hood switch 2

Hood switch 2		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E49	1	E17	71	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E13	32		Not existed
E17	71		

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

NO >> Repair or replace harness.

## 3.CHECK HOOD SWITCH GROUND CIRCUIT

Check continuity between hood switch harness connector and ground.

### Hood switch 1

Hood switch 1		Ground	Continuity
Connector	Terminal		
E57	2		Existed

### Hood switch 2

Hood switch 2		Ground	Continuity
Connector	Terminal		
E49	2		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

## 4.CHECK HOOD SWITCH

Refer to [SEC-101, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace hood switch. Refer to [SEC-135, "Removal and Installation"](#).

## 5.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:000000009325273

### 1.CHECK HOOD SWITCH

1. Turn ignition switch OFF.
2. Disconnect hood switch connector.
3. Check continuity between hood switch terminals.

## B26FE HOOD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Hood switch		Condition		Continuity
Terminal				
1	2	Hood switch	Press	Not existed
			Release	Existed

Is the inspection result normal?

YES >> INSPECTION END.

NO >> Replace hood switch. Refer to [SEC-135, "Removal and Installation"](#).

# B209F CRANKING REQUEST CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B209F CRANKING REQUEST CIRCUIT

### DTC Logic

INFOID:000000009012793

### DTC DETECTION LOGIC

#### NOTE:

- DTC B209F can be detected even though the related circuit is not used in this vehicle.
- If DTC B209F is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-28. "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B209F	CRANK REQ CIR OPEN	When the following items do not match, a malfunction is detected. <ul style="list-style-type: none"><li>• Cranking request signal from ECM</li><li>• Starter control relay control signal from ECM (CAN)</li></ul>	<ul style="list-style-type: none"><li>• Harness or connectors (CAN communication line is open or shorted.)</li><li>• Harness or connectors (Cranking request signal circuit is open or shorted.)</li><li>• IPDM E/R</li><li>• ECM</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Start engine and wait 1 second or more at idle speed.
2. Drive vehicle for 1 second or more.
3. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

#### Is DTC detected?

- YES >> Refer to [SEC-103. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012794

#### 1. CHECK CRANKING REQUEST SIGNAL

1. Turn ignition switch ON.
2. Check voltage between IPDM E/R harness connector and ground under the following conditions.

(+)		(-)	Condition	Voltage (V) (Approx.)
IPDM E/R				
Connector	Terminal			
E13	23	Ground	Ignition switch ON <ul style="list-style-type: none"><li>• Engine: Stopped</li><li>• Selector lever position: P</li></ul>	0
			<ul style="list-style-type: none"><li>• Engine: Stopped</li><li>• Selector lever position: Other than P</li></ul>	12
			Engine running	12

#### Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

#### 2. CHECK CRANKING REQUEST SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Disconnect ECM connector.
4. Check continuity between IPDM E/R harness connector and ECM harness connector.

## B209F CRANKING REQUEST CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

IPDM E/R		ECM		Continuity
Connector	Terminal	Connector	Terminal	
E13	23	E80	165	Existed

5. Check continuity between BCM harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E13	23		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

### 3. REPLACE IPDM E/R

1. Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

2. Perform DTC CONFIRMATION PROCEDURE for DTC B209F. Refer to [SEC-103, "DTC Logic"](#).

Is DTC detected?

YES >> GO TO 4.

NO >> INSPECTION END

### 4. REPLACE ECM

Replace ECM. Refer to [EC-582, "Removal and Installation"](#) (VK56VD for USA and CANADA) or [EC-582, "Removal and Installation"](#) (VK56VD for MEXICO).

>> INSPECTION END



# B20A0 CRANKING REQUEST CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B20A0 CRANKING REQUEST CIRCUIT

### DTC Logic

INFOID:000000009012795

### DTC DETECTION LOGIC

#### NOTE:

- DTC B20A0 can be detected although the related circuit is not used in this vehicle.
- If DTC B20A0 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-28. "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B20A0	CRANKREQ CIR SHORT	When the following items do not match, a malfunction is detected. <ul style="list-style-type: none"> <li>• Cranking request signal from ECM</li> <li>• Starter control relay control signal from ECM (CAN)</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (CAN communication line is open or shorted.)</li> <li>• Harness or connectors (Cranking request signal circuit is open or shorted.)</li> <li>• IPDM E/R</li> <li>• ECM</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Start engine and wait 1 second or more at idle speed.
2. Drive vehicle for 1 second or more.
3. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

#### Is DTC detected?

- YES >> Refer to [SEC-105. "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012796

#### 1. CHECK CRANKING REQUEST SIGNAL

1. Turn ignition switch ON.
2. Check voltage between IPDM E/R harness connector and ground under the following conditions.

(+)		(-)	Condition	Voltage (V) (Approx.)
IPDM E/R				
Connector	Terminal			
E13	23	Ground	Ignition switch ON <ul style="list-style-type: none"> <li>• Engine: Stopped</li> <li>• Selector lever position: P</li> </ul>	0
			<ul style="list-style-type: none"> <li>• Engine: Stopped</li> <li>• Selector lever position: Other than P</li> </ul>	12
			Engine running	12

#### Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> GO TO 2.

#### 2. CHECK CRANKING REQUEST SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Disconnect ECM connector.
4. Check continuity between IPDM E/R harness connector and ECM harness connector.

## B20A0 CRANKING REQUEST CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

IPDM E/R		ECM		Continuity
Connector	Terminal	Connector	Terminal	
E13	23	E80	165	Existed

5. Check continuity between BCM harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E13	23		Not existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

### 3.REPLACE IPDM E/R

1. Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

2. Perform DTC CONFIRMATION PROCEDURE for DTC B20A0. Refer to [SEC-105, "DTC Logic"](#).

Is DTC detected?

YES >> GO TO 4.

NO >> INSPECTION END

### 4.REPLACE ECM

Replace ECM. Refer to [EC-582, "Removal and Installation"](#) (VK56VD for USA and CANADA) or [EC-582, "Removal and Installation"](#) (VK56VD for MEXICO).

>> INSPECTION END

# B210B STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B210B STARTER CONTROL RELAY

### DTC Logic

INFOID:000000009012797

### DTC DETECTION LOGIC

#### NOTE:

If DTC B210B is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-28. "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210B	STR CONT RLY ON CIRC	When comparing the following items, IPDM E/R detects that starter control relay is stuck in the ON position for 1 second or more. <ul style="list-style-type: none"><li>• Starter control relay signal (CAN) from BCM</li><li>• Starter relay status signal (CAN) from BCM</li><li>• Starter control relay and starter relay status signal (IPDM E/R input)</li><li>• Starter control relay control signal (IPDM E/R output)</li><li>• P/N position signal input</li></ul>	<ul style="list-style-type: none"><li>• Harness or connectors (CAN communication line is open or shorted.)</li><li>• IPDM E/R</li><li>• BCM</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Turn ignition switch OFF and wait for 1 second or more.
3. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

#### Is DTC detected?

- YES >> Refer to [SEC-107. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012798

#### 1. CHECK SELF DIAGNOSTIC RESULT

Check DTC using CONSULT.

#### What is the display history of DTC "B210B"?

- "CRNT">> Replace IPDM E/R. Refer to [PCS-34. "Removal and Installation"](#).  
"PAST">> GO TO 2.

#### 2. CHECK INTERMITTENT INCIDENT

Refer to [GI-43. "Intermittent Incident"](#)

>> INSPECTION END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# B210C STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B210C STARTER CONTROL RELAY

### DTC Logic

INFOID:000000009012799

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B210C is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-28, "DTC Logic"](#).
- When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the DTC B210C may be detected.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210C	STR CONT RLY OFF CIRC	When comparing the following items, IPDM E/R detects that starter control relay is stuck in the OFF position for 1 second or more. <ul style="list-style-type: none"> <li>• Starter control relay signal (CAN) from BCM</li> <li>• Starter relay status signal (CAN) from BCM</li> <li>• Starter control relay and starter relay status signal (IPDM E/R input)</li> <li>• Starter control relay control signal (IPDM E/R output)</li> <li>• P/N position signal input</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (CAN communication line is open or shorted.)</li> <li>• IPDM E/R</li> <li>• BCM</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Press push-button ignition switch to start engine, and wait 1 second or more.
2. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

#### Is DTC detected?

- YES >> Refer to [SEC-108, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012800

#### 1. CHECK SELF DIAGNOSTIC RESULT

Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

#### What is the display history of DTC "B210C"?

- "CRNT">> GO TO 3.  
"PAST">> GO TO 2.

#### 2. CHECK BATTERY VOLTAGE

Measure the battery voltage.

#### Which is the measurement result?

- More than 12.4 V>>GO TO 5  
Less than 12.4 V>>Perform battery inspection. Refer to [PG-114, "How to Handle Battery"](#).

#### 3. CHECK P/N POSITION SIGNAL CIRCUIT VOLTAGE

1. Turn ignition switch ON
2. Selector lever is in P position.
3. Check the voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (Approx.)
IPDM E/R			
Connector	Terminal		
E15	48	Ground	Battery voltage

#### Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).  
NO >> GO TO 4.

# B210C STARTER CONTROL RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## 4.CHECK P/N POSITION SIGNAL CIRCUIT

1. Turn ignition switch OFF
2. Disconnect IPDM E/R connector and BCM connector.
3. Check continuity between IPDM E/R harness connector and BCM harness connector.

IPDM E/R		BCM		Continuity
Connector	Terminal	Connector	Terminal	
E15	48	M71	102	Existed

Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-95. "Removal and Installation"](#).  
NO >> Repair or replace harness.

## 5.CHECK INTERMITTENT INCIDENT

Check intermittent incident. Refer to [GI-43. "Intermittent Incident"](#).

>> INSPECTION END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# B210D STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B210D STARTER RELAY

### DTC Logic

INFOID:000000009012801

### DTC DETECTION LOGIC

#### NOTE:

If DTC B210D is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-28, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210D	STARTER RLY ON CIRC	<p>When comparing the following items, IPDM E/R detects that starter relay is stuck in the ON position for 1 second or more.</p> <ul style="list-style-type: none"> <li>• Starter control relay signal (CAN) from BCM</li> <li>• Starter relay status signal (CAN) from BCM</li> <li>• Starter control relay and starter relay status signal (IPDM E/R input)</li> <li>• Starter control relay control signal (IPDM E/R output)</li> <li>• P/N position signal input</li> </ul>	<ul style="list-style-type: none"> <li>• Harness or connectors (CAN communication line is open or shorted.)</li> <li>• IPDM E/R</li> </ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Turn ignition switch OFF and wait for 1 second or more.
3. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

#### Is DTC detected?

- YES >> Refer to [SEC-110, "Diagnosis Procedure"](#).  
 NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012802

#### 1. CHECK SELF DIAGNOSTIC RESULT

Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

#### What is the display history of DTC "B210D"?

- "CRNT" >> GO TO 2.  
 "PAST" >> GO TO 4.

#### 2. CHECK STARTER RELAY CONTROL SIGNAL CIRCUIT VOLTAGE

Check the voltage between IPDM E/R harness connector and ground.

(+)		(-)	Condition	Voltage (Approx.)
IPDM E/R				
Connector	Terminal			
E13	30	Ground	Other than at engine cranking	Battery voltage

#### Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).  
 NO >> GO TO 3.

#### 3. CHECK STARTER RELAY CONTROL SIGNAL CIRCUIT

1. Turn ignition switch OFF
2. Disconnect IPDM E/R connector and BCM connector.
3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E13	30		Not existed

## B210D STARTER RELAY

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> Perform the diagnosis procedure for DTC B2608 of BCM. Refer to [SEC-87, "DTC Logic"](#).

NO >> Repair or replace harness.

### 4.CHECK INTERMITTENT INCIDENT

Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

# B210E STARTER RELAY

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B210E STARTER RELAY

### DTC Logic

INFOID:000000009012803

### DTC DETECTION LOGIC

#### NOTE:

- If DTC B210E is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-28, "DTC Logic"](#).
- If DTC B210E is displayed with DTC B2605, first perform the trouble diagnosis for DTC B2605. Refer to [SEC-85, "DTC Logic"](#).
- When IPDM E/R power supply voltage is low (Approx. 7 - 8 V for about 1 second), the DTC B210E may be detected.

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210E	STARTER RLY OFF CIRC	When comparing the following items, IPDM E/R detects that starter relay is stuck in the OFF position for 1 second or more. <ul style="list-style-type: none"><li>• Starter control relay signal (CAN) from BCM</li><li>• Starter relay status signal (CAN) from BCM</li><li>• Starter control relay and starter relay status signal (IPDM E/R input)</li><li>• Starter control relay control signal (IPDM E/R output)</li><li>• P/N position signal input</li></ul>	<ul style="list-style-type: none"><li>• Harness or connector (CAN communication line is open or shorted.)</li><li>• Harness or connector (Starter relay circuit is open or shorted.)</li><li>• IPDM E/R</li><li>• BCM</li><li>• Battery</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Press push-button ignition switch to start engine, and wait 1 seconds or more.
2. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

#### Is DTC detected?

- YES >> Refer to [SEC-112, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012804

#### 1. CHECK SELF DIAGNOSTIC RESULT

Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

#### What is the display history of DTC "B210E"?

- "CRNT">> GO TO 3.  
"PAST">> GO TO 2.

#### 2. CHECK BATTERY VOLTAGE

Check the battery voltage.

#### Which is the measurement result?

- More than 12.4 V>>GO TO 5.  
Less than 12.4 V>>Perform battery inspection. Refer to [PG-114, "How to Handle Battery"](#).

#### 3. CHECK STARTER RELAY CONTROL SIGNAL

Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Condition	Voltage (Approx.)
IPDM E/R				
Connector	Terminal			
E13	30	Ground	Other than at engine cranking	12 V

#### Is the inspection result normal?

- YES >> GO TO 4.



# B210E STARTER RELAY

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

## 4.CHECK STARTER RELAY CONTROL SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and IPDM E/R connector.
3. Check continuity between BCM harness connector and IPDM E/R harness connector.

BCM		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M71	97	E13	30	Existed

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).

NO >> Repair or replace harness.

## 5.CHECK INTERMITTENT INCIDENT

Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# B210F SHIFT POSITION/CLUTCH INTERLOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B210F SHIFT POSITION/CLUTCH INTERLOCK SWITCH

### DTC Logic

INFOID:000000009012805

### DTC DETECTION LOGIC

#### NOTE:

If DTC B210F is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-28, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B210F	INTER LOCK/PNP SW ON	There is a difference between P/N position signal from TCM and P/N position signal from BCM (CAN).	<ul style="list-style-type: none"><li>• Harness or connectors (CAN communication line is open or shorted.)</li><li>• Harness or connectors (TCM circuit is open or shorted.)</li><li>• A/T assembly (TCM)</li><li>• IPDM E/R</li><li>• BCM</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Shift selector lever to the P position.
2. Turn ignition switch ON and wait 1 second or more.
3. Shift selector lever to the N position and wait 1 second or more.
4. Shift selector lever to any position other than P and N, and wait 1 second or more.
5. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-114, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012806

#### 1. CHECK DTC OF BCM

Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [BCS-57, "DTC Index"](#).  
NO >> GO TO 2.

#### 2. CHECK DTC OF TCM

Check DTC in "Self Diagnostic Result" mode of "TCM" using CONSULT.

#### Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [TM-82, "DTC Index"](#).  
NO >> GO TO 3.

#### 3. CHECK IPDM E/R SIGNAL CIRCUIT OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Disconnect A/T assembly connector.
4. Check continuity between IPDM E/R harness connector and A/T assembly harness connector.

IPDM E/R		A/T assembly		Continuity
Connector	Terminal	Connector	Terminal	
E15	48	F51	9	Existed

5. Check continuity between IPDM E/R harness connector and ground.

# B210F SHIFT POSITION/CLUTCH INTERLOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

(+)		(-)	Continuity
IPDM E/R			
Connector	Terminal		
E15	48	Ground	Not existed

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
- NO >> Repair or replace harness.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# B2110 SHIFT POSITION/CLUTCH INTERLOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## B2110 SHIFT POSITION/CLUTCH INTERLOCK SWITCH

### DTC Logic

INFOID:000000009012807

### DTC DETECTION LOGIC

#### NOTE:

If DTC B2110 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [PCS-28, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2110	INTER LOCK/PNP SW OFF	There is a difference between P/N position signal from TCM and P/N position signal from BCM (CAN).	<ul style="list-style-type: none"><li>• Harness or connectors (CAN communication line is open or shorted.)</li><li>• Harness or connectors (TCM circuit is open or shorted.)</li><li>• A/T assembly (TCM)</li><li>• IPDM E/R</li><li>• BCM</li></ul>

### DTC CONFIRMATION PROCEDURE

#### 1. PERFORM DTC CONFIRMATION PROCEDURE

1. Shift selector lever to the P position.
2. Turn ignition switch ON and wait 1 second or more.
3. Shift selector lever to the N position and wait 1 second or more.
4. Shift selector lever to any position other than P and N, and wait 1 second or more.
5. Check DTC in "Self Diagnostic Result" mode of "IPDM E/R" using CONSULT.

#### Is DTC detected?

- YES >> Go to [SEC-116, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000009012808

#### 1. CHECK DTC OF BCM

Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

#### Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [BCS-57, "DTC Index"](#).  
NO >> GO TO 2.

#### 2. CHECK DTC OF TCM

Check DTC in "Self Diagnostic Result" mode of "TCM" using CONSULT.

#### Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [TM-82, "DTC Index"](#).  
NO >> GO TO 3.

#### 3. CHECK IPDM E/R SIGNAL CIRCUIT OPEN AND SHORT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Disconnect A/T assembly connector.
4. Check continuity between IPDM E/R harness connector and A/T assembly harness connector.

IPDM E/R		A/T assembly		Continuity
Connector	Terminal	Connector	Terminal	
E15	48	F51	9	Existed

5. Check continuity between IPDM E/R harness connector and ground.

# B2110 SHIFT POSITION/CLUTCH INTERLOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

(+)		(-)	Continuity
IPDM E/R			
Connector	Terminal		
E15	48	Ground	Not existed

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).
- NO >> Repair or replace harness.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# HEADLAMP FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## HEADLAMP FUNCTION

### Component Function Check

INFOID:000000009012809

#### 1.CHECK FUNCTION

1. Perform "HEAD LAMP(HI)" in "ACTIVE TEST" mode of "THEFT ALM" of "BCM" using CONSULT.
2. Check headlamps operation.

Test item		Description	
HEAD LAMP (HI)	ON	Headlamps (Hi)	Light
	OFF		Do not light

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Refer to [SEC-118, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000009012810

#### 1.CHECK HEADLAMP FUNCTION

Refer to [EXL-87, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair or replace the malfunctioning parts.

#### 2.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

# HOOD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## HOOD SWITCH

### Component Function Check

INFOID:000000009012811

#### 1. CHECK FUNCTION

1. Select "HOOD SW" and "HOOD SW 2" in "Data Monitor" mode of "IPDM E/R" using CONSULT.
2. Check "HOOD SW" and "HOOD SW 2" indication under the following condition.

Monitor item	Condition		Indication
•HOOD SW •HOOD SW 2	Hood	Open	On
		Close	Off

Is the indication normal?

- YES >> Hood switch 1 and 2 is OK.  
 NO >> Go to [SEC-119, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000009012812

#### 1. CHECK HOOD SWITCH SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect hood switch connector.
3. Check voltage between hood switch harness connector and ground.

Hood switch 1

(+)		(-)	Voltage (V) (Approx.)
Hood switch 1			
Connector	Terminal	Ground	12
E57	1		

Hood switch 2

(+)		(-)	Voltage (V) (Approx.)
Hood switch 2			
Connector	Terminal	Ground	12
E49	1		

Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> GO TO 2.

#### 2. CHECK HOOD SWITCH SIGNAL CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and hood switch harness connector.

Hood switch 1

Hood switch 1		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E57	1	E13	32	Existed

Hood switch 2

Hood switch 2		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E49	1	E17	71	Existed

3. Check continuity between IPDM E/R harness connector and ground.

# HOOD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

IPDM E/R		Ground	Continuity
Connector	Terminal		
E13	32		
E17	71		

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

NO >> Repair or replace harness.

## 3.CHECK HOOD SWITCH GROUND CIRCUIT

Check continuity between hood switch harness connector and ground.

Hood switch 1

Hood switch 1		Ground	Continuity
Connector	Terminal		
E57	2		

Hood switch 2

Hood switch 2		Ground	Continuity
Connector	Terminal		
E49	2		

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

## 4.CHECK HOOD SWITCH

Refer to [SEC-120, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace hood switch. Refer to [SEC-135, "Removal and Installation"](#).

## 5.CHECK INTERMITTENT INCIDENT

Refer to [GI-43, "Intermittent Incident"](#).

>> INSPECTION END

## Component Inspection

INFOID:000000009012813

### 1.CHECK HOOD SWITCH

1. Turn ignition switch OFF.
2. Disconnect hood switch connector.
3. Check continuity between hood switch terminals.

Hood switch		Condition	Continuity	
Terminal				
1	2	Hood switch	Press	Not existed
			Release	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace hood switch. Refer to [SEC-135, "Removal and Installation"](#).



# HORN FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## HORN FUNCTION

### Component Function Check

INFOID:000000009012814

#### 1.CHECK FUNCTION 1

1. Disconnect vehicle security horn relay.
2. Perform "VEHICLE SECURITY HORN" in "ACTIVE TEST" mode of "THEFT ALM" of "BCM" using CONSULT.
3. Check the horn operation.

Test item		Description	
VEHICLE SECURITY HORN	ON	Horn	Sounds (for 0.5 sec)

Is the operation normal?

YES >> GO TO 2.

NO >> Go to [SEC-121, "Diagnosis Procedure"](#).

#### 2.CHECK FUNCTION 2

1. Reconnect vehicle security horn relay.
2. Disconnect horn relay.
3. Perform "VEHICLE SECURITY HORN" in "ACTIVE TEST" mode of "THEFT ALM" of "BCM" using CONSULT.
4. Check the horn operation.

Test item		Description	
VEHICLE SECURITY HORN	ON	Vehicle security horn	Sounds (for 0.5 sec)

Is the operation normal?

YES >> INSPECTION END

NO >> Go to [SEC-121, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000009012815

#### 1.INSPECTION START

Perform inspection in accordance with procedure that confirms malfunction.

Which procedure confirms malfunction?

Component Function Check 1>>GO TO 2.

Component Function Check 2>>GO TO 4.

#### 2.CHECK HORN FUNCTION

Check that horns function properly using horn switch.

Do horns sound?

YES >> GO TO 3.

NO >> Check horn circuit. Refer to [HRN-3, "Wiring Diagram"](#).

#### 3.CHECK HORN CONTROL CIRCUIT

1. Disconnect horn relay.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and horn relay harness connector.

IPDM E/R		Horn relay		Continuity
Connector	Terminal	Connector	Terminal	
E13	34	E5	1	Existed

4. Check continuity between IPDM E/R harness connector and ground.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# HORN FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

IPDM E/R		Ground	Continuity
Connector	Terminal		
E13	34		

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-34, "Removal and Installation"](#).

NO >> Repair or replace harness.

## 4. CHECK VEHICLE SECURITY HORN RELAY POWER SUPPLY

1. Disconnect vehicle security horn relay.
2. Check voltage between vehicle security horn relay harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Vehicle security horn relay			
Connector	Terminal		
E124	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 5.

NO-1 >> Check 10 A fuse [No. 36 located in the fuse block (J/B)].

NO-2 >> Check harness for open or short between vehicle security horn relay and fuse.

## 5. CHECK VEHICLE SECURITY HORN CONTROL CIRCUIT

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and vehicle security horn relay harness connector.

IPDM E/R		Vehicle security horn relay		Continuity
Connector	Terminal	Connector	Terminal	
E13	34	E124	3	Existed

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E13	34		

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace harness.

## 6. CHECK VEHICLE SECURITY HORN CIRCUIT

1. Disconnect vehicle security horn connector.
2. Check continuity between vehicle security horn relay harness connector and vehicle security horn harness connector.

Vehicle security horn relay		Vehicle security horn		Continuity
Connector	Terminal	Connector	Terminal	
E124	2	E125	1	Existed

3. Check continuity between vehicle security horn relay harness connector and ground.

Vehicle security horn relay		Ground	Continuity
Connector	Terminal		
E124	2		

Is the inspection result normal?

YES >> GO TO 7.

# HORN FUNCTION

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness.

## 7. CHECK VEHICLE SECURITY HORN RELAY

Refer to [SEC-123, "Component Inspection"](#).

Is the inspection result normal?

YES >> Replace vehicle security horn.

NO >> Replace vehicle security horn relay.

## Component Inspection

INFOID:000000009012816

## 1. CHECK VEHICLE SECURITY HORN RELAY

1. Turn ignition switch OFF.
2. Disconnect vehicle security horn relay.
3. Check voltage between vehicle security horn relay terminal and ground under the following conditions.

(+)	(-)	Condition	Voltage (V) (Approx.)
Vehicle security horn relay Terminal			
2	Ground	12 V direct current supply between terminals 1 and 3	12
		No current supply	0

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace vehicle security horn relay.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# SECURITY INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## SECURITY INDICATOR LAMP

### Component Function Check

INFOID:000000009012817

#### 1.CHECK FUNCTION

1. Perform "THEFT IND" in "ACTIVE TEST" mode of "IMMU" of "BCM" using CONSULT.
2. Check security indicator lamp operation.

Test item		Description	
THEFT IND	ON	Security indicator lamp	Illuminates
	OFF		Does not illuminate

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Go to [SEC-124, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000009012818

#### 1.CHECK SECURITY INDICATOR LAMP POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check voltage between combination meter harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Combination meter			
Connector	Terminal	Ground	Battery voltage
M34	1		

Is the inspection result normal?

- YES >> GO TO 2.  
NO-1 >> Check 10 A fuse [No. 11, located in the fuse block (J/B)].  
NO-2 >> Check harness for open or short between combination meter and fuse.

#### 2.CHECK SECURITY INDICATOR LAMP SIGNAL

1. Connect combination meter connector.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
BCM			
Connector	Terminal	Ground	Battery voltage
M68	23		

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 4.

#### 3.REPLACE BCM

1. Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.

>> INSPECTION END

#### 4.CHECK SECURITY INDICATOR LAMP CIRCUIT

1. Disconnect combination meter connector.
2. Check continuity between combination meter harness connector and BCM harness connector.

# SECURITY INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Combination meter		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M34	28	M68	23	Existed

3. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M34	28		Not existed

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-87, "Removal and Installation"](#).
- NO >> Repair or replace harness.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

## SYMPTOM DIAGNOSIS

### ENGINE DOES NOT START WHEN INTELLIGENT KEY IS INSIDE OF VEHICLE

#### Description

INFOID:000000009012819

Engine does not start when push-button ignition switch is pressed while carrying Intelligent Key.

**NOTE:**

- Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.
- The engine start function, door lock function, power distribution system, and NATS-IVIS/NVIS in the Intelligent Key system are closely related to each other regarding control. The vehicle security function can operate only when the door lock and power distribution system are operating normally.

#### Conditions of Vehicle (Operating Conditions)

- “ENGINE START BY I-KEY” in “WORK SUPPORT” is ON when setting on CONSULT.
- Intelligent Key is not inserted in key slot.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

#### Diagnosis Procedure

INFOID:000000009012820

#### 1. PERFORM WORK SUPPORT

Perform “INSIDE ANT DIAGNOSIS” on Work Support in “INTELLIGENT KEY”.

Refer to [DLK-42, "INTELLIGENT KEY : CONSULT Function \(BCM - INTELLIGENT KEY\)"](#).

>> GO TO 2.

#### 2. PERFORM SELF-DIAGNOSIS RESULT

Perform Self-Diagnosis Result in “BCM”, and check whether or not DTC of inside key antenna is detected.

Is DTC detected?

- YES >> Refer to [BCS-57, "DTC Index"](#).  
NO >> GO TO 3.

#### 3. CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.

Refer to [PCS-72, "Component Function Check"](#).

Is the operation normal?

- YES >> GO TO 4.  
NO >> Repair or replace malfunctioning parts.

#### 4. CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection normal?

- YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).  
NO >> GO TO 1.

# SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK

### Description

INFOID:000000009012821

Security indicator lamp does not blink when ignition switch is in a position other than ON

#### NOTE:

- Before performing the diagnosis, check "Work Flow". Refer to [SEC-46, "Work Flow"](#).
- Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

### Conditions of Vehicle (Operating Conditions)

Ignition switch is not in the ON position.

### Diagnosis Procedure

INFOID:000000009012822

#### 1. CHECK SECURITY INDICATOR LAMP

Check security indicator lamp.

Refer to [SEC-124, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

#### 2. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# VEHICLE SECURITY SYSTEM CANNOT BE SET

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## VEHICLE SECURITY SYSTEM CANNOT BE SET INTELLIGENT KEY

### INTELLIGENT KEY : Description

INFOID:000000009012823

Armed phase is not activated when door is locked using Intelligent Key.

**NOTE:**

Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.

#### CONDITION OF VEHICLE (OPERATING CONDITION)

Confirm the setting of “SECURITY ALARM SET” is ON in “WORK SUPPORT” mode of “THEFT ALM” of “BCM” using CONSULT.

### INTELLIGENT KEY : Diagnosis Procedure

INFOID:000000009012824

#### 1.CHECK INTELLIGENT KEY SYSTEM (REMOTE KEYLESS ENTRY FUNCTION)

Lock/unlock door with Intelligent Key.

Refer to [DLK-19. "DOOR LOCK FUNCTION : System Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check Intelligent Key system (remote keyless entry function). Refer to [DLK-180. "Diagnosis Procedure"](#).

#### 2.CHECK HOOD SWITCH

Check hood switch.

Refer to [SEC-119. "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace hood switch.

#### 3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43. "Intermittent Incident"](#).

NO >> GO TO 1.

## DOOR REQUEST SWITCH

### DOOR REQUEST SWITCH : Description

INFOID:000000009012825

Armed phase is not activated when door is locked using door request switch.

**NOTE:**

Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.

#### CONDITION OF VEHICLE (OPERATING CONDITION)

Confirm the setting of “SECURITY ALARM SET” is ON in “WORK SUPPORT” mode of “THEFT ALM” of “BCM” using CONSULT.

### DOOR REQUEST SWITCH : Diagnosis Procedure

INFOID:000000009012826

#### 1.CHECK INTELLIGENT KEY SYSTEM (DOOR LOCK FUNCTION)

Lock/unlock door with door request switch.

Refer to [DLK-19. "DOOR LOCK FUNCTION : System Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check Intelligent Key system (door lock function). Refer to [DLK-177. "ALL DOOR REQUEST SWITCHES : Diagnosis Procedure"](#).



# VEHICLE SECURITY SYSTEM CANNOT BE SET

[WITH INTELLIGENT KEY SYSTEM]

< SYMPTOM DIAGNOSIS >

## 2.CHECK HOOD SWITCH

Check hood swiwtch.

Refer to [SEC-119, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace hood switch.

## 3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

## DOOR KEY CYLINDER

### DOOR KEY CYLINDER : Description

INFOID:000000009012827

Armed phase is not activated when door is locked using mechanical key.

#### **NOTE:**

Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

### CONDITION OF VEHICLE (OPERATING CONDITION)

Confirm the setting of "SECURITY ALARM SET" is ON in "WORK SUPPORT" mode of "THEFT ALM" of "BCM" using CONSULT.

### DOOR KEY CYLINDER : Diagnosis Procedure

INFOID:000000009012828

## 1.CHECK POWER DOOR LOCK SYSTEM

Lock/unlock door with mechanical key.

Refer to [DLK-16, "System Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check power door lock system. Refer to [DLK-176, "Diagnosis Procedure"](#).

## 2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# VEHICLE SECURITY ALARM DOES NOT ACTIVATE

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## VEHICLE SECURITY ALARM DOES NOT ACTIVATE

### Description

INFOID:000000009012829

Alarm does not operate when alarm operating condition is satisfied.

**NOTE:**

Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

### CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

Confirm the setting of "SECURITY ALARM SET" is ON in "WORK SUPPORT" mode of "THEFT ALM" of "BCM" using CONSULT.

### Diagnosis Procedure

INFOID:000000009012830

#### 1.CHECK DOOR SWITCH

Check door switch.

Refer to [DLK-119, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the malfunctioning door switch

#### 2.CHECK HOOD SWITCH

Check hood swiwtch.

Refer to [SEC-119, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace hood switch.

#### 3.CHECK HORN FUNCTION

Check horn function.

Refer to [SEC-121, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

#### 4.CHECK HEADLAMP FUNCTION

Check headlamp function.

Refer to [SEC-118, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace the malfunctioning parts.

#### 5.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

# PANIC ALARM FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## PANIC ALARM FUNCTION DOES NOT OPERATE

### Description

INFOID:000000009012831

#### NOTE:

- Before performing the diagnosis following procedure, check “Work Flow”. Refer to [SEC-46, "Work Flow"](#).
- Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.

#### CONDITIONS OF VEHICLE (OPERATION CONDITIONS)

- Ignition switch is in OFF or LOCK position.
- Intelligent Key is removed from key slot.

### Diagnosis Procedure

INFOID:000000009012832

#### 1.CHECK REMOTE KEYLESS ENTRY FUNCTION

Check remote keyless entry function.

Does door lock/unlock with Intelligent Key button?

YES >> GO TO 2.

NO >> Go to [DLK-180, "Diagnosis Procedure"](#).

#### 2.CHECK VEHICLE SECURITY ALARM OPERATION

Check vehicle security alarm operation.

Does alarm (headlamps and horns) active?

YES >> GO TO 3.

NO >> Go to [SEC-15, "VEHICLE SECURITY SYSTEM : System Description"](#).

#### 3.CHECK “PANIC ALARM SET” SETTING IN “WORK SUPPORT”

Check “PANIC ALARM SET” setting in “WORK SUPPORT”.

Refer to [DLK-42, "INTELLIGENT KEY : CONSULT Function \(BCM - INTELLIGENT KEY\)"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Set “PANIC ALARM SET” setting in “WORK SUPPORT”.

#### 4.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# REMOTE ENGINE START FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

## REMOTE ENGINE START FUNCTION DOES NOT OPERATE

### Description

INFOID:000000009325274

Engine does not start when operating REMOTE ENGINE START button of Intelligent Key.

#### NOTE:

Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

#### Conditions of Vehicle (Operating Conditions)

- Shift position is in P position.
- Vehicle security system is not in operation.
- Registered Intelligent Key is not in the vehicle.

### Diagnosis Procedure

INFOID:000000009325275

#### 1. CHECK INTELLIGENT KEY SYSTEM (REMOTE KEYLESS ENTRY FUNCTION)

Lock/unlock door with Intelligent Key.

Refer to [DLK-23, "REMOTE KEYLESS ENTRY FUNCTION : System Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check Intelligent Key system (remote keyless entry function). Refer to [DLK-180, "Diagnosis Procedure"](#).

#### 2. CHECK DOOR SWITCH

Check door switch.

Refer to [DLK-119, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning parts.

#### 3. CHECK HAZARD SWITCH

Check hazard switch.

Refer to [EXL-106, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace malfunctioning parts.

#### 4. CHECK SHIFT LOCK SYSTEM

Check shift lock system.

Refer to [TM-162, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning parts.

#### 5. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-43, "Intermittent Incident"](#).

NO >> GO TO 1.

# NATS ANTENNA AMP.

< REMOVAL AND INSTALLATION >

[WITH INTELLIGENT KEY SYSTEM]

## REMOVAL AND INSTALLATION


### NATS ANTENNA AMP.


#### Removal and Installation

INFOID:000000009012833

#### REMOVAL

1. Remove the push-button ignition switch. Refer to [SEC-134. "Removal and Installation"](#).
2. Disengage the NATS antenna amp. pawl, and then remove NATS antenna amp.

 : Pawl

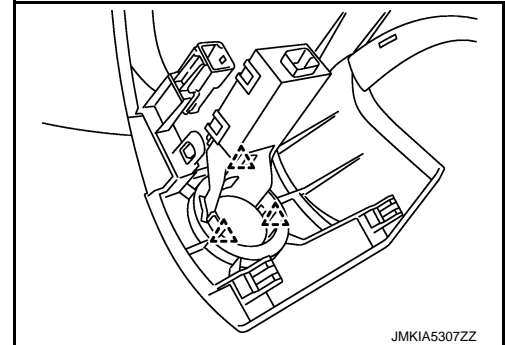

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC

# PUSH-BUTTON IGNITION SWITCH

< REMOVAL AND INSTALLATION >

[WITH INTELLIGENT KEY SYSTEM]

## PUSH-BUTTON IGNITION SWITCH

### Exploded View

INFOID:000000009012834


Refer to [IP-13, "Exploded View"](#).


### Removal and Installation

INFOID:000000009012835

#### REMOVAL

1. Remove the cluster lid A. Refer to [IP-14, "Removal and Installation"](#).
2. Disengage the push-button ignition switch fixing pawl and then remove push-button ignition switch.

 : Pawl

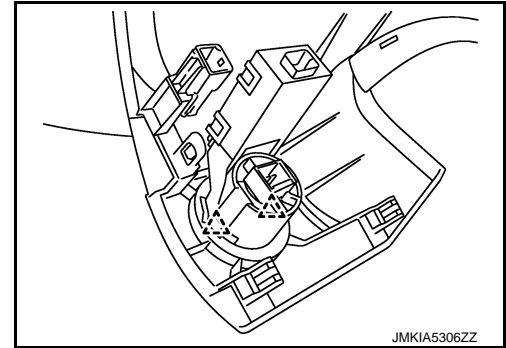

#### INSTALLATION

Install in the reverse order of removal.

# HOOD SWITCH

< REMOVAL AND INSTALLATION >

[WITH INTELLIGENT KEY SYSTEM]


## HOOD SWITCH

### Removal and Installation

INFOID:000000009325276

#### REMOVAL

1. Disconnect hood switch connector ②.
2. Remove the hood switch mounting bolt ①, and then remove hood switch ③.

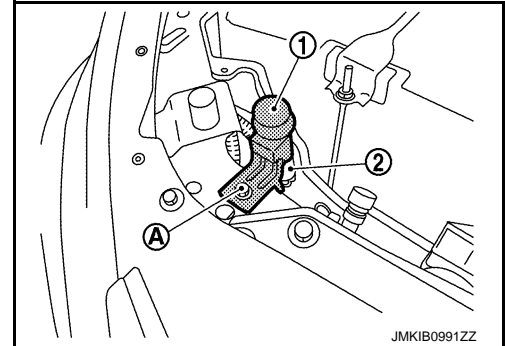

#### NOTE:

The same procedure is also performed for hood switch 1 and hood switch 2.

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

SEC