

SECTION **BCS**  
BODY CONTROL SYSTEM

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

CONTENTS

<b>SERVICE INFORMATION</b> .....	2	BCM Terminal Arrangement .....	10
<b>PRECAUTIONS</b> .....	2	Terminal and Reference Value for BCM .....	11
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER" .....	2	BCM Power Supply and Ground Circuit Inspection .....	15
<b>BCM (BODY CONTROL MODULE)</b> .....	3	CONSULT-III Function (BCM) .....	15
System Description .....	3	CAN Communication Inspection Using CON- SULT-III (Self-Diagnosis) .....	17
CAN Communication System Description .....	7	Configuration .....	17
Schematic .....	8	Removal and Installation of BCM .....	18

BCS

# PRECAUTIONS

< SERVICE INFORMATION >

---

## SERVICE INFORMATION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000001719305

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

**WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

# BCM (BODY CONTROL MODULE)

< SERVICE INFORMATION >

## BCM (BODY CONTROL MODULE)

### System Description

INFOID:000000001719306

- BCM (body control module) controls the operation of various electrical units installed on the vehicle.

### BCM FUNCTION

BCM has a combination switch reading function for reading the operation of combination switches (light, wiper washer, turn signal) in addition to the function for controlling the operation of various electrical components. Also, it functions as an interface that receives signals from the front air control, and sends signals to ECM using CAN communication.


### COMBINATION SWITCH READING FUNCTION

#### 1. Description

- BCM reads combination switch (light, wiper) status, and controls various electrical components according to the results.
- BCM reads information of a maximum of 20 switches by combining five output terminals (OUTPUT 1-5) and five input terminals (INPUT 1-5).

#### 2. Operation description

- BCM activates transistors of output terminals (OUTPUT 1-5) periodically and allows current to flow in turn.
- If any (1 or more) of the switches are turned ON, circuit of output terminals (OUTPUT 1-5) and input terminals (INPUT 1-5) becomes active.
- At this time, transistors of output terminals (OUTPUT 1-5) are activated to allow current to flow. When voltage of input terminals (INPUT 1-5) corresponding to that switch changes, interface in BCM detects voltage change and BCM determines that switch is ON.

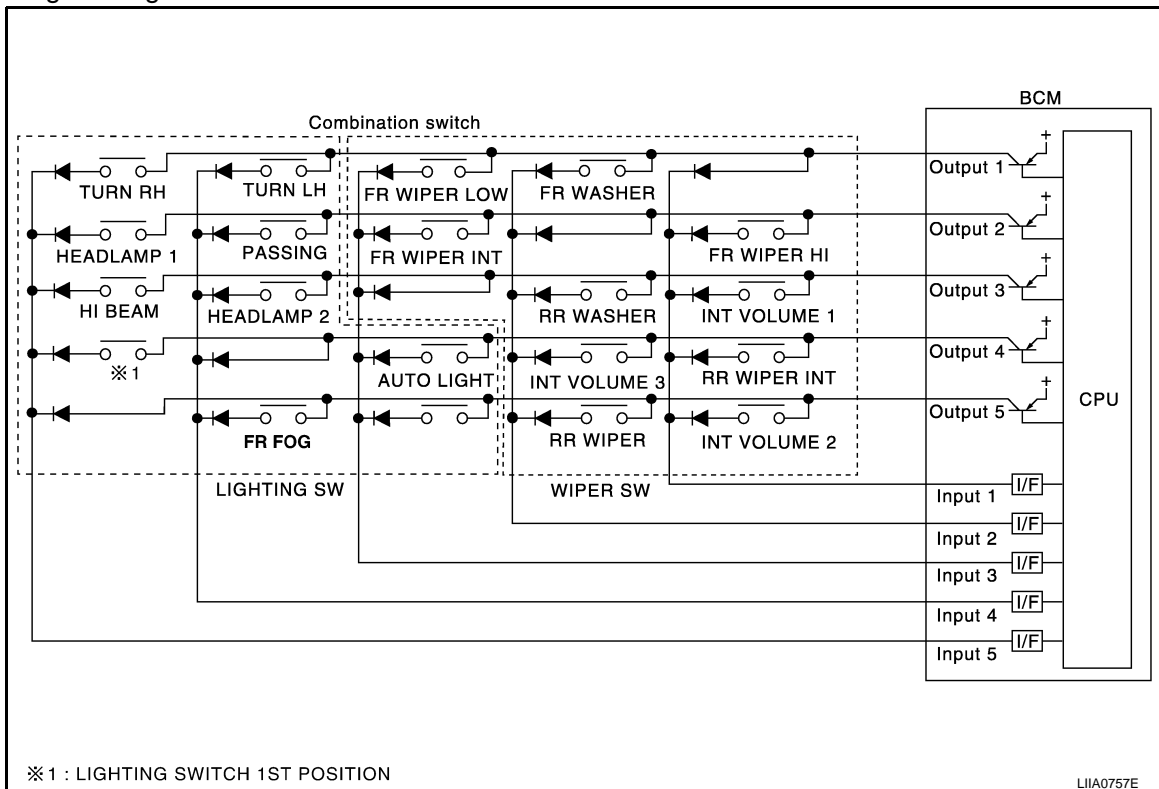

#### 3. BCM - Operation table of combination switch

- BCM reads operation status of combination switch by the combination shown in the following table.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

BCS

# BCM (BODY CONTROL MODULE)

## < SERVICE INFORMATION >


	COMB SW OUTPUT 1		COMB SW OUTPUT 2		COMB SW OUTPUT 3		COMB SW OUTPUT 4		COMB SW OUTPUT 5	
	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF
COMB SW INPUT 1	—	—	FR WIPER HI ON	FR WIPER HI OFF	INT VOLUME 1 ON	INT VOLUME 1 OFF	RR WIPER INT ON	RR WIPER INT OFF	INT VOLUME 2 ON	INT VOLUME 2 OFF
COMB SW INPUT 2	FR WASHER ON	FR WASHER OFF	—	—	RR WASHER ON	RR WASHER OFF	INT VOLUME 3 ON	INT VOLUME 3 OFF	RR WIPER ON	RR WIPER OFF
COMB SW INPUT 3	FR WIPER LOW ON	FR WIPER LOW OFF	FR WIPER INT ON	FR WIPER INT OFF	—	—	AUTO LIGHT ON	AUTO LIGHT OFF	—	—
COMB SW INPUT 4	TURN LH ON	TURN LH OFF	PASSING ON	PASSING OFF	HEAD-LAMP 2 ON	HEAD-LAMP 2 OFF	—	—	FR FOG ON	FR FOG OFF
COMB SW INPUT 5	TURN RH ON	TURN RH OFF	HEAD-LAMP 1 ON	HEAD-LAMP 1 OFF	HI BEAM ON	HI BEAM OFF	LIGHTING SW (1st) ON	LIGHTING SW (1st) OFF	—	—

SKIA4959E

### NOTE:

Headlamp has a dual system switch.

- Example operation: (When lighting switch 1st position turned ON)
  - When lighting switch 1st position is turned ON, contact in combination switch turns ON. At this time if OUTPUT 4 transistor is activated, BCM detects that voltage changes in INPUT 5.
  - When OUTPUT 4 transistor is ON, BCM detects that voltage changes in INPUT 5, and judges lighting switch 1st position is ON. Then BCM sends tail lamp ON signal to IPDM E/R using CAN communication.
  - When OUTPUT 4 transistor is activated again, BCM detects that voltage changes in INPUT 5 and recognizes that lighting switch 1st position is continuously ON.

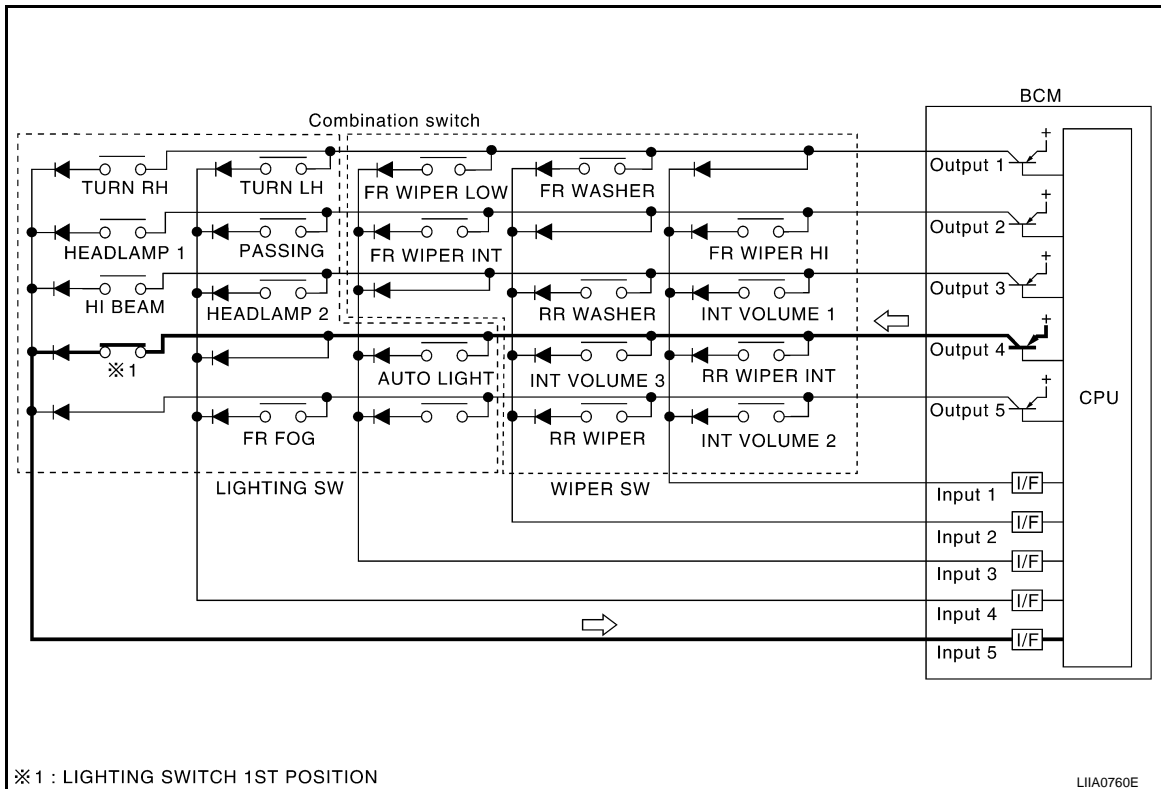

### NOTE:

Each OUTPUT terminal transistor is activated at 10 ms intervals. Therefore, after a switch is turned ON, electrical loads are activated with a time delay. But this time delay is so short that it cannot be noticed.

- Operation mode

- Combination switch reading function has operation modes as follows:

# BCM (BODY CONTROL MODULE)


## < SERVICE INFORMATION >

### Normal status

- When BCM is not in sleep status, OUTPUT terminals (1-5) each turn ON-OFF every 10 ms.

### Sleep status

- When BCM is in sleep mode, transistors of OUTPUT 1 and 5 stop the output, and BCM enters low-current-consumption mode. OUTPUTS (2, 3, and 4) turn ON-OFF at 60 ms intervals, and receives lighting switch input only.

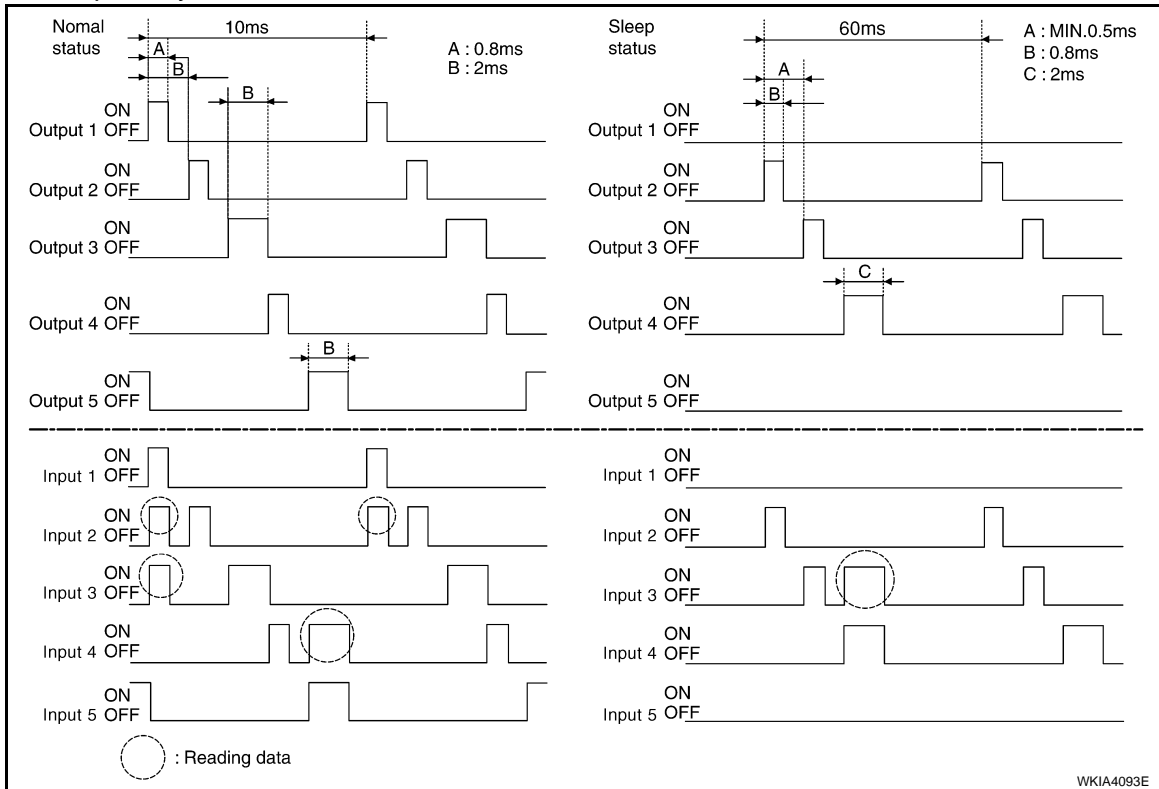

## CAN COMMUNICATION CONTROL

CAN communication allows a high rate of information through the two communication lines (CAN-L, CAN-H) connecting the various control units in the system. Each control unit transmits/receives data, but selectively reads required data only.

## BCM STATUS CONTROL

BCM changes its status depending on the operation status in order to save power consumption.

- CAN communication status**
  - With ignition switch ON, CAN communicates with other control units normally.
  - Control by BCM is being operated properly.
  - When ignition switch is OFF, switching to sleep mode is possible.
  - Even when ignition switch is OFF, if CAN communication with IPDM E/R and combination meter is active, CAN communication status is active.
- Sleep transient status**
  - This status shuts down CAN communication when ignition switch is turned OFF.
  - It transmits sleep request signal to IPDM E/R and combination meter.
  - Two seconds after CAN communication of all control units stops, CAN communication switches to inactive status.
- CAN communication inactive status**
  - With ignition switch OFF, CAN communication is not active.
  - With ignition switch OFF, control performed only by BCM is active.
  - Three seconds after CAN communication of all control units stops, CAN communication switches to inactive status.
- Sleep status**
  - BCM is activated with low current consumption mode.
  - CAN communication is not active.

# BCM (BODY CONTROL MODULE)

## < SERVICE INFORMATION >

- When CAN communication operation is detected, it switches to CAN communication status.
- When a state of the following switches changes, it switches to CAN communication state:
  - Key switch
  - Hazard switch
  - Door lock/unlock switch
  - Front door switch (LH, RH)
  - Rear door switch (LH, RH)
  - Back door switch
  - Combination switch (passing, lighting switch 1st position, front fog lamp)
  - Keyfob (lock/unlock signal)
  - Front door lock assembly LH (key cylinder switch)
- When control performed only by BCM is required by switch, it shifts to CAN communication inactive mode.
- Status of combination switch reading function is changed.

## SYSTEMS CONTROLLED BY BCM DIRECTLY

- Power door lock system. Refer to [BL-16](#).
- Remote keyless entry system. Refer to [BL-48](#).
- Power window system. Refer to [GW-17](#). <sup>NOTE</sup>
- Sunroof system. Refer to [RF-10](#). <sup>NOTE</sup>
- Room lamp timer. Refer to [LT-106](#).
- Warning chime system. Refer to [DI-34](#).
- Turn signal and hazard warning lamps system. Refer to [LT-55](#).
- Rear wiper and washer system. Refer to [WW-25](#).
- NVIS (NATS) system. Refer to [BL-180](#).

### NOTE:

Power supply only. No system control.

## SYSTEMS CONTROLLED BY BCM AND IPDM E/R

- Panic system. Refer to [BL-48](#).
- Theft warning system. Refer to [BL-72](#).
- Headlamp, daytime light, fog lamp, tail lamp, auto light and battery saver control systems. Refer to [LT-5](#), [LT-25](#), [LT-47](#), [LT-90](#), or [LT-35](#).
- Front wiper and washer system. Refer to [WW-3](#).
- Rear window defogger system. Refer to [GW-76](#).

## MAJOR COMPONENTS AND CONTROL SYSTEM

System	Input	Output
Remote keyless entry system	Remote keyless entry receiver (keyfob)	<ul style="list-style-type: none"> <li>• All door locking actuators</li> <li>• Back door opener actuator</li> <li>• Turn signal lamps</li> </ul>
Power door lock system	<ul style="list-style-type: none"> <li>• Front power door lock/unlock switch (LH, RH)</li> <li>• All door switches</li> <li>• Key switch</li> </ul>	All door locking actuators
Power supply (IGN/RAP) to power window and sunroof	Ignition/retained power supply	Power supply to power window and sunroof system
Power supply (BAT) to power window, sunroof and power seat	Battery power supply	Power supply to power window, sunroof system and power seat
Panic alarm	<ul style="list-style-type: none"> <li>• Key switch</li> <li>• Remote keyless entry receiver (keyfob)</li> </ul>	IPDM E/R
Auto light system	<ul style="list-style-type: none"> <li>• Optical sensor</li> <li>• Combination switch</li> </ul>	IPDM E/R
Battery saver control	<ul style="list-style-type: none"> <li>• Ignition switch</li> <li>• Combination switch</li> <li>• Front door switch LH and RH</li> </ul>	IPDM E/R
Headlamp	Combination switch	IPDM E/R
Tail lamp	Combination switch	IPDM E/R
Fog lamp	Combination switch	IPDM E/R

# BCM (BODY CONTROL MODULE)

## < SERVICE INFORMATION >

System	Input	Output	
Turn signal lamp	Combination switch	<ul style="list-style-type: none"> <li>• Turn signal lamp</li> <li>• Combination meter</li> </ul>	A
Hazard lamp	Hazard switch	<ul style="list-style-type: none"> <li>• Turn signal lamp</li> <li>• Combination meter</li> </ul>	B
Room lamp timer	<ul style="list-style-type: none"> <li>• Key switch</li> <li>• Remote keyless entry receiver (keyfob)</li> <li>• Main power window and door lock/unlock switch</li> <li>• Front door lock assembly LH (key cylinder switch)</li> <li>• All door switches</li> </ul>	Interior room lamp	C
Key warning chime	<ul style="list-style-type: none"> <li>• Key switch</li> <li>• Front door switch LH</li> </ul>	Combination meter (warning buzzer)	D
Light warning chime	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Key switch</li> <li>• Front door switch LH</li> </ul>	Combination meter (warning buzzer)	E
Vehicle-speed-sensing intermittent wiper	<ul style="list-style-type: none"> <li>• Combination switch</li> <li>• Combination meter</li> </ul>	IPDM E/R	F
Rear window defogger	Rear window defogger switch	IPDM E/R	F
Air conditioner switch signal	Front air control	ECM	G
Blower fan switch signal	Front air control	ECM	G
Low tire pressure warning system	Remote keyless entry receiver	<ul style="list-style-type: none"> <li>• Combination meter</li> <li>• Display control unit</li> </ul>	H
Vehicle security system	<ul style="list-style-type: none"> <li>• Remote keyless entry receiver (keyfob)</li> <li>• Main power window and door lock/unlock switch</li> <li>• Power window and door lock/unlock switch RH</li> <li>• Front door lock assembly LH (key cylinder switch)</li> <li>• All door switches</li> <li>• Back door latch (door ajar switch)</li> </ul>	<ul style="list-style-type: none"> <li>• IPDM E/R</li> <li>• Security indicator lamp</li> </ul>	I

## CAN Communication System Description

INFOID:000000001719307

Refer to [LAN-3, "CAN Communication System"](#).

BCS

L

M

N

O


P

# BCM (BODY CONTROL MODULE)

< SERVICE INFORMATION >

## Schematic

INFOID:000000001719308

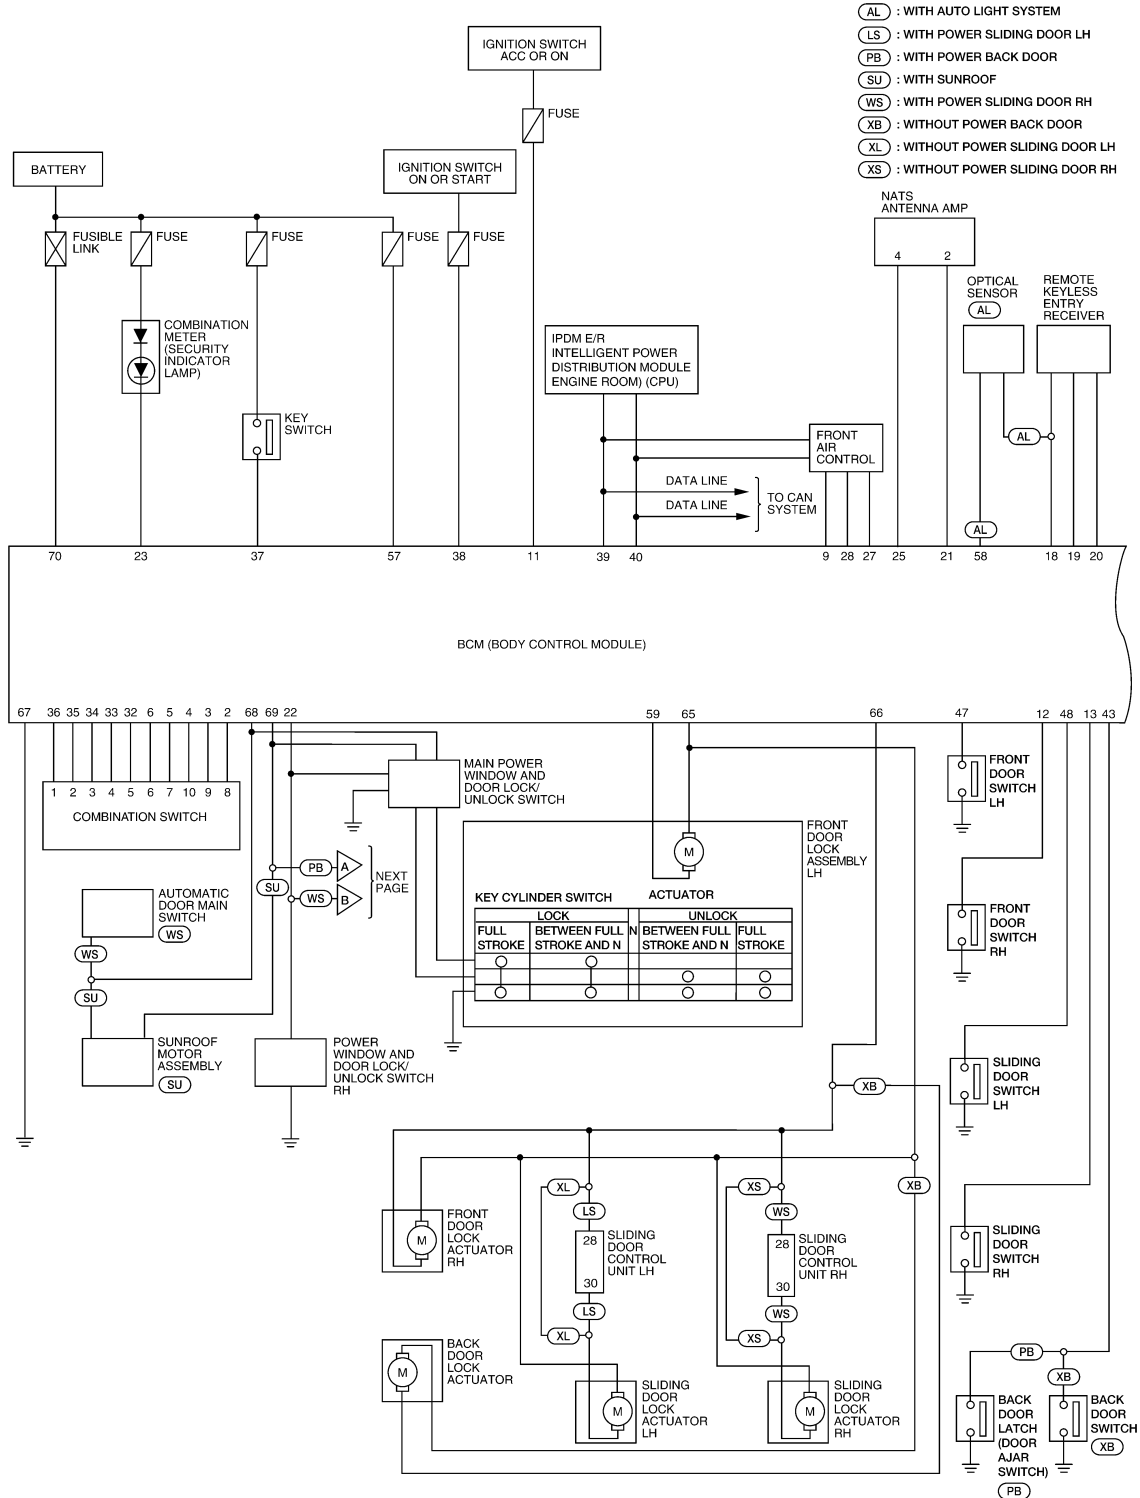


ALMWA0126GE



# BCM (BODY CONTROL MODULE)

< SERVICE INFORMATION >

- (LS) : WITH POWER SLIDING DOOR LH
- (PB) : WITH POWER BACK DOOR
- (RF) : WITH REAR ROOF CONSOLE
- (VN) : WITH VANITY LAMPS
- (WS) : WITH POWER SLIDING DOOR RH
- (XF) : WITHOUT REAR ROOF CONSOLE

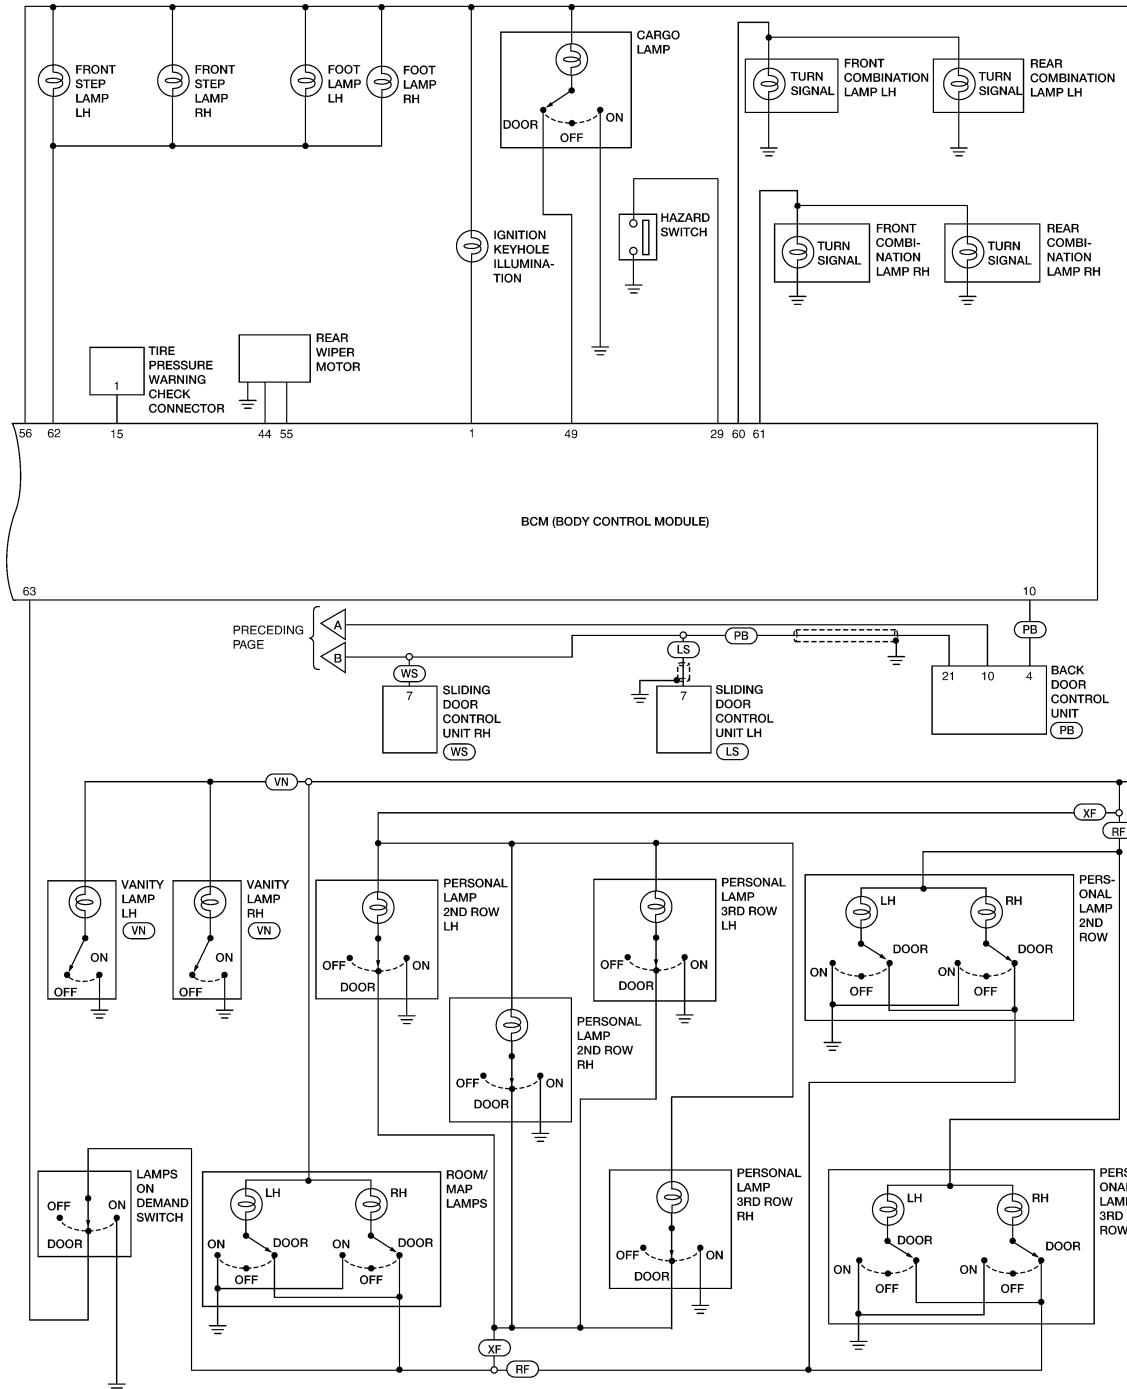

ALMWA0127GE

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


BCS

# BCM (BODY CONTROL MODULE)

< SERVICE INFORMATION >

## BCM Terminal Arrangement

INFOID:00000001719309

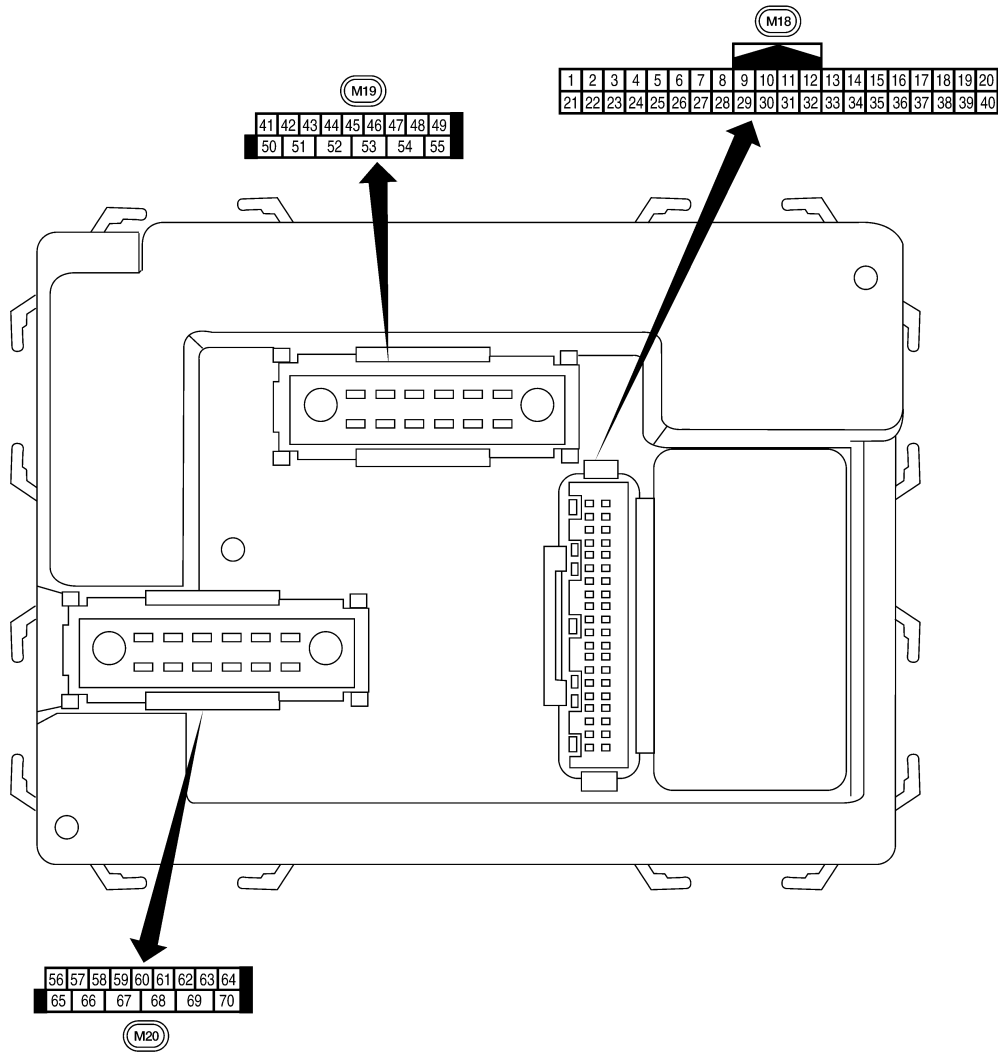





LIA2443E

# BCM (BODY CONTROL MODULE)

< SERVICE INFORMATION >

## Terminal and Reference Value for BCM

INFOID:000000001719310

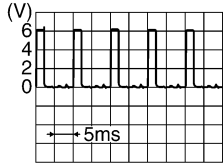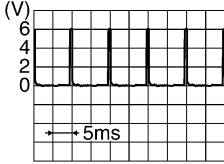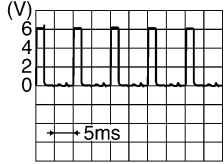Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
1	BR/W	Ignition keyhole illumination	Output	OFF	Door is locked (SW OFF)	Battery voltage
					Door is unlocked (SW ON)	0V
2	GR/R	Combination switch input 5	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
3	G/Y	Combination switch input 4	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
4	G/R	Combination switch input 3	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5291E</p>
5	G/B	Combination switch input 2	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right;">SKIA5292E</p>
6	G/W	Combination switch input 1				
9	W/L	Rear window defogger switch	Input	ON	Rear window defogger switch ON	0V
					Rear window defogger switch OFF	5V
10	GR	Hazard lamp flash	Input	OFF	ON (opening or closing)	0V
					OFF (other than above)	Battery voltage
11	V	Ignition switch (ACC or ON)	Input	ACC or ON	Ignition switch ACC or ON	Battery voltage
12	GR/L	Front door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
13	O/B	Rear door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
15	L/W	Tire pressure warning check connector	Input	OFF	—	5V

A

B

C

D

E

F

G

H

I

J

BCS

L

M





N

O

P



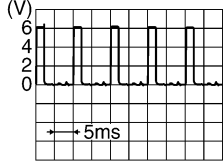
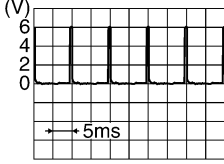
# BCM (BODY CONTROL MODULE)

## < SERVICE INFORMATION >

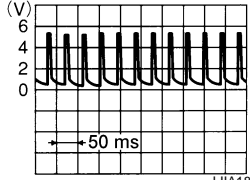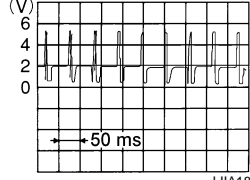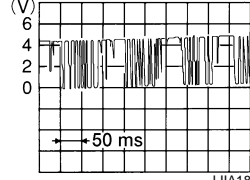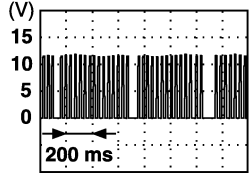Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
18	P	Remote keyless entry receiver (Ground)	Output	OFF	—	0V
19	V/W	Remote keyless entry receiver (power supply)	Output	OFF	Ignition switch OFF	 LIA1893E
20	Y/G	Remote keyless entry receiver signal (Signal)	Input	OFF	Stand-by (keyfob buttons released)	 LIA1894E
					When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed)	 LIA1895E
21	O	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
22	Y/B	BUS	—	—	Ignition switch ON or power window timer operates	 PIA2344E
23	G/O	Security indicator lamp	Output	OFF	Goes OFF → illuminates (Every 2.4 seconds)	Battery voltage → 0V
25	BR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
27	L/R	Compressor ON signal	Input	ON	A/C switch OFF	5V
					A/C switch ON	0V
28	L/Y	Front blower monitor	Input	ON	Front blower motor OFF	Battery voltage
					Front blower motor ON	0V
29	Y/R	Hazard switch	Input	OFF	ON	0V
					OFF	5V

# BCM (BODY CONTROL MODULE)

## < SERVICE INFORMATION >

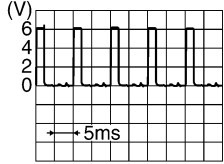
Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
32	R/G	Combination switch output 5	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
33	R/Y	Combination switch output 4	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
34	R	Combination switch output 3	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5291E</p>
35	R/B	Combination switch output 2	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	 <p style="text-align: right; font-size: small;">SKIA5292E</p>
36	R/W	Combination switch output 1				
37	B/R	Key switch	Input	OFF	Key inserted Key removed	Battery voltage 0V
38	G	Ignition switch (ON)	Input	ON	—	Battery voltage
39	L	CAN-H	—	—	—	—
40	P	CAN-L	—	—	—	—
43	O	Back door switch	Input	OFF	ON (open) OFF (closed)	0V Battery voltage
44	BR	Rear wiper auto stop	Input	ON	Rear wiper operating Rear wiper stopped	0 Battery
47	GR/R	Front door switch LH	Input	OFF	ON (open) OFF (closed)	0V Battery voltage
48	W/G	Rear door switch LH	Input	OFF	ON (open) OFF (closed)	0V Battery voltage
49	W/V	Cargo lamp	Output	OFF	Any door open (ON) All doors closed (OFF)	0V Battery voltage
55	SB	Rear wiper motor output	Output	ON	OFF ON	0 Battery voltage

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

BCS

# BCM (BODY CONTROL MODULE)

## < SERVICE INFORMATION >

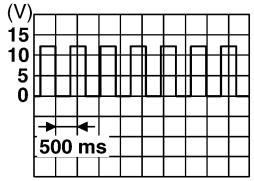Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)	
				Ignition switch	Operation or condition		
56	R/G	Battery saver output	Output	OFF	30 minutes after ignition switch is turned OFF	0V	
				ON	—	Battery voltage	
57	Y/G	Battery power supply	Input	OFF	—	Battery voltage	
58	W/R	Optical sensor	Input	ON	When optical sensor is illuminated	3.1V or more	
					When optical sensor is not illuminated	0.6V or less	
59	G	Front door lock assembly LH actuator (unlock)	Output	OFF	OFF (neutral)	0V	
					ON (unlock)	Battery voltage	
60	GR/L	Turn signal (left)	Output	ON	Turn left ON	 <small>SKIA3009J</small>	
61	G/R	Turn signal (right)	Output	ON	Turn right ON	 <small>SKIA3009J</small>	
62	R/W	Step lamp LH and RH	Output	OFF	ON (any door open)	0V	
					OFF (all doors closed)	Battery voltage	
63	P	Interior room/map lamp	Output	OFF	Any door switch	ON (open)	0V
					OFF (closed)	Battery voltage	
65	V	All door lock actuators (lock)	Output	OFF	OFF (neutral)	0V	
					ON (lock)	Battery voltage	
66	G/Y	Front door lock actuator RH, rear door lock actuators LH/RH and back door lock actuator (unlock)	Output	OFF	OFF (neutral)	0V	
					ON (unlock)	Battery voltage	
67	B/W	Ground	Input	ON	—	0V	
68	W/L	Power window power supply (RAP)	Output	—	Ignition switch ON	Battery voltage	
					Within 45 seconds after ignition switch OFF	Battery voltage	
					More than 45 seconds after ignition switch OFF	0V	
					When front door LH or RH is open or power window timer operates	0V	
69	W/R	Power window power supply	Output	—	—	Battery voltage	
70	W/B	Battery power supply	Input	OFF	—	Battery voltage	

# BCM (BODY CONTROL MODULE)

< SERVICE INFORMATION >

## BCM Power Supply and Ground Circuit Inspection

INFOID:000000001719311

### 1. CHECK FUSES AND FUSIBLE LINK

- Check 50A fusible link (letter j, located in the fuse and fusible link box).
- Check 10A fuses [No. 4 and 16, located in the fuse block (J/B)] and 15A fuses [No. 3, located in the fuse block (J/B)].

OK or NG


OK >> GO TO 2.

NG >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

### 2. CHECK BCM POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check voltage between BCM connectors and ground.

Connector	Terminals		Power source	Condition	Voltage (V) (Approx.)
	(+)	(-)			
M18	11	Ground	ACC power supply	Ignition switch ACC or ON	Battery voltage
	38	Ground	Ignition power supply	Ignition switch ON or START	Battery voltage
M20	57	Ground	Battery power supply	Ignition switch OFF	Battery voltage
	70	Ground	Battery power supply	Ignition switch OFF	Battery voltage

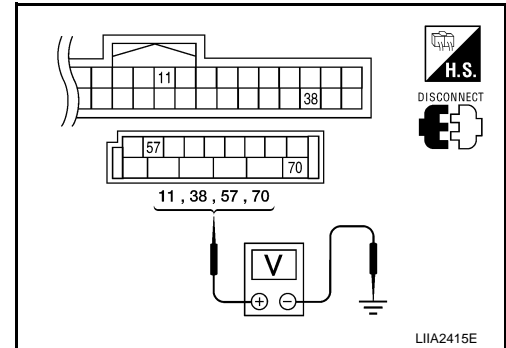

OK or NG

OK >> GO TO 3.

NG >> Repair or replace the harness.

### 3. CHECK GROUND CIRCUIT


Check continuity between BCM connector M20 terminal 67 and ground.

**67 - Ground : Continuity should exist.**

OK or NG

OK >> Power supply and ground circuit is OK.

NG >> Repair or replace harness.

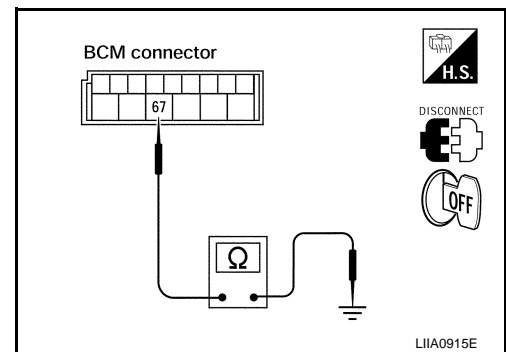

### CONSULT-III Function (BCM)

INFOID:000000001719312

CONSULT-III can display each diagnostic item using the diagnostic test modes shown following.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

BCS

## BCM (BODY CONTROL MODULE)

### < SERVICE INFORMATION >

BCM diagnostic test item	Diagnostic mode	Content
Inspection by part	WORK SUPPORT	Supports inspections and adjustments. Commands are transmitted to the BCM for setting the status suitable for required operation, input/output signals are received from the BCM and received data is displayed.
	DATA MONITOR	Displays BCM input/output data in real time.
	ACTIVE TEST	Operation of electrical loads can be checked by sending drive signal to them.
	SELF-DIAG RESULTS	Displays BCM self-diagnosis results.
	CAN DIAG SUPPORT MNTR	The results of transmit/receive diagnosis of CAN communication can be read.
	ECU PART NUMBER	BCM part number can be read.
	CONFIGURATION	Performs BCM configuration read/write functions.

### ITEMS OF EACH PART

**NOTE:**

CONSULT-III will only display systems the vehicle possesses.

System and item	CONSULT-III display	Diagnostic test mode (Inspection by part)						
		WORK SUPPORT	SELF-DIAG RESULTS	DATA MONITOR	CAN DIAG SUPPORT MNTR	ECU PART NUMBER	ACTIVE TEST	CONFIGURATION
BCM	BCM	×	×		×	×		×
Power door lock system	DOOR LOCK	×		×			×	
Rear defogger	REAR DEFOGGER			×			×	
Warning chime	BUZZER			×			×	
Room lamp timer	INT LAMP	×		×			×	
Remote keyless entry system	MULTI REMOTE ENT	×		×			×	
Headlamp	HEAD LAMP	×		×			×	
Wiper	WIPER			×			×	
Turn signal lamp Hazard lamp	FLASHER			×			×	
Blower fan switch signal Air conditioner switch signal	AIR CONDITIONER			×				
Combination switch	COMB SW			×				
NVIS (NATS)	IMMU			×			×	
Interior lamp battery saver	BATTERY SAVER	×		×			×	
Back door	BACK DOOR			×			×	
Retained power control	RETAINED PWR	×		×			×	
Low tire pressure monitor system	AIR PRESSURE MONITOR	×	×	×				×
Oil pressure switch	SIGNAL BUFFER			×			×	
Panic system	PANIC ALARM						×	
Vehicle security system	THEFT ALM	×		×			×	

### WORK SUPPORT

Display Item List



# BCM (BODY CONTROL MODULE)

< SERVICE INFORMATION >

Item	Description
RESET SETTING VALUE	Return a value set with WORK SUPPORT of each system to a default value in factory shipment.

## CAN Communication Inspection Using CONSULT-III (Self-Diagnosis)

INFOID:000000001719313

### 1. SELF-DIAGNOSTIC RESULT CHECK

1. Connect to CONSULT-III, and select "BCM" on "SELECT SYSTEM" screen.
2. Select "BCM" on "SELECT TEST ITEM" screen, and select "SELF-DIAG RESULTS".
3. Check display content in self-diagnostic results.

CONSULT-III display code	Diagnosis item
U1000	INITIAL DIAG
	TRANSMIT DIAG
	ECM
	IPDM E/R
	METER/M&A
	I-KEY

#### Contents displayed

No malfunction>>Inspection End

Malfunction in CAN communication system>>After printing the monitor items, go to [LAN-3, "CAN Communication System"](#).

## Configuration

INFOID:000000003302384

### DESCRIPTION

CONFIGURATION has three functions as follows:

- READ CONFIGURATION is the function to read (extract) vehicle configuration of current BCM.
- WRITE CONFIGURATION-Manual selection is the function to select and write vehicle configuration on BCM manually.
- WRITE CONFIGURATION-Config file is the function to write vehicle configuration with the data extracted from current BCM.
- For READ CONFIGURATION and WRITE CONFIGURATION-Config file, refer to CONSULT-III Operation Manual.
- For WRITE CONFIGURATION-Manual selection using the following chart, identify the correct model and configuration list. Confirm and/or change setting value for each item according to the configuration list. Depending on CONSULT-III software version being used, some or all of the write configuration items shown in the following configuration lists may be displayed. If an item does not appear on the CONSULT-III WRITE CONFIGURATION-Manual selection screen(s), then it is an auto setting item and it cannot be manually set or changed.

BCS

L  
M

N

O

P

#### NOTE:

Confirm vehicle model on IDENTIFICATION PLATE. Refer to [GI-43, "Model Variation"](#).

ITEM	SET VAL
AUTO LIGHT	WITH ⇔ WITHOUT
FR FOG LAMP	WITH ⇔ WITHOUT
SPEED SENS WIP	WITH ⇔ WITHOUT

#### CAUTION:

- When replacing BCM, you must perform WRITE CONFIGURATION with CONSULT-III.
- Complete the procedure of WRITE CONFIGURATION in order.
- If you set incorrect WRITE CONFIGURATION, incidents will occur.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.

# BCM (BODY CONTROL MODULE)

< SERVICE INFORMATION >

## Removal and Installation of BCM


INFOID:000000001719315

### REMOVAL

#### NOTE:

If possible, before removing BCM, retrieve current BCM configuration to use for reference when configuring brand-new BCM after installation. Refer to [BCS-17. "Configuration"](#).

1. Disconnect negative battery cable.
2. Remove the parking brake pedal assembly. Refer to [PB-5. "Removal and Installation"](#).
3. Remove the BCM (1) by removing the screw (A) and disconnecting the harness connectors (2).
  - ← : Front

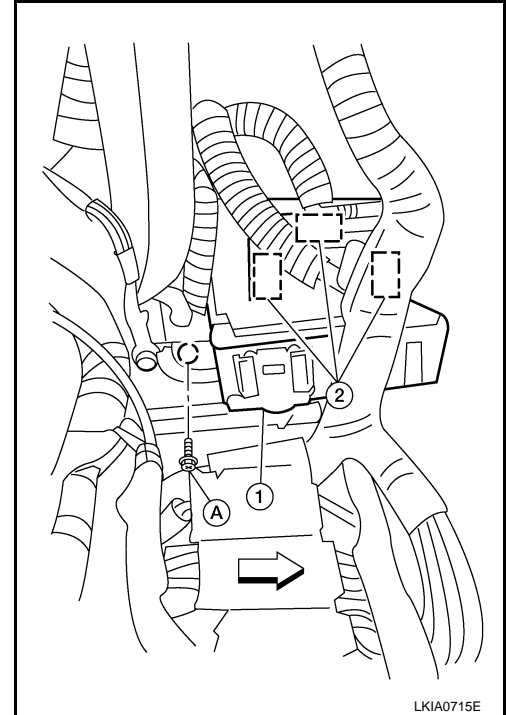

### INSTALLATION

Installation is in the reverse order of removal.

#### NOTE:

- When replacing BCM, it must be configured. Refer to [BCS-17. "Configuration"](#).
- When replacing BCM, perform initialization of NATS system and registration of all NATS ignition key IDs. Refer to [BL-180](#).
- When replacing BCM, perform ID registration procedure of low tire pressure warning system. Refer to [WT-13. "ID Registration Procedure"](#).