

# SECTION **BR**

## BRAKE SYSTEM

### CONTENTS

<b>SYMPTOM DIAGNOSIS</b> .....	3	Inspection .....	12
<b>NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING</b> .....	3	Draining .....	12
NVH Troubleshooting Chart .....	3	Refilling .....	12
<b>PRECAUTION</b> .....	4	Bleeding Brake System .....	13
<b>PRECAUTIONS</b> .....	4	<b>BRAKE MASTER CYLINDER</b> .....	14
<b>FOR USA AND CANADA</b> .....	4	Inspection .....	14
FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	4	<b>BRAKE BOOSTER</b> .....	15
FOR USA AND CANADA : Precaution Necessary for Steering Wheel Rotation After Battery Disconnect .....	4	Inspection .....	15
FOR USA AND CANADA : Precaution for Procedure without Cowl Top Cover .....	5	<b>FRONT DISC BRAKE</b> .....	16
FOR USA AND CANADA : Precaution for Brake System .....	5	<b>BRAKE PAD</b> .....	16
<b>FOR MEXICO</b> .....	5	BRAKE PAD : Inspection .....	16
FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	5	<b>DISC ROTOR</b> .....	16
FOR MEXICO : Precaution Necessary for Steering Wheel Rotation After Battery Disconnect .....	6	DISC ROTOR : Inspection .....	16
FOR MEXICO : Precaution for Procedure without Cowl Top Cover .....	7	<b>REAR DISC BRAKE</b> .....	18
FOR MEXICO : Precaution for Brake System .....	7	<b>BRAKE PAD</b> .....	18
<b>PREPARATION</b> .....	8	BRAKE PAD : Inspection .....	18
<b>PREPARATION</b> .....	8	<b>DISC ROTOR</b> .....	18
Commercial Service Tool .....	8	DISC ROTOR : Inspection .....	18
<b>PERIODIC MAINTENANCE</b> .....	9	<b>REMOVAL AND INSTALLATION</b> .....	20
<b>BRAKE PEDAL</b> .....	9	<b>BRAKE PEDAL</b> .....	20
Inspection and Adjustment .....	9	Exploded View .....	20
<b>BRAKE FLUID</b> .....	12	Removal and Installation .....	20
		Inspection and Adjustment .....	21
		<b>BRAKE PIPING</b> .....	22
		<b>FRONT</b> .....	22
		FRONT : Exploded View .....	22
		FRONT : Hydraulic Piping .....	23
		FRONT : Removal and Installation .....	24
		FRONT : Inspection .....	24
		<b>REAR</b> .....	25
		REAR : Exploded View .....	25

REAR : Hydraulic Piping .....	26	BRAKE CALIPER ASSEMBLY : Disassembly and Assembly .....	39
REAR : Removal and Installation .....	26	BRAKE CALIPER ASSEMBLY : Inspection and Adjustment .....	41
REAR : Inspection .....	27		
<b>BRAKE MASTER CYLINDER .....</b>	<b>28</b>	<b>REAR DISC BRAKE .....</b>	<b>42</b>
Exploded View .....	28	<b>BRAKE PAD .....</b>	<b>42</b>
Removal and Installation .....	28	BRAKE PAD : Exploded View .....	42
Disassembly and Assembly .....	29	BRAKE PAD : Removal and Installation .....	42
Inspection .....	30	BRAKE PAD : Inspection and Adjustment .....	43
<b>BRAKE BOOSTER .....</b>	<b>31</b>	<b>BRAKE CALIPER ASSEMBLY .....</b>	<b>43</b>
Exploded View .....	31	BRAKE CALIPER ASSEMBLY : Exploded View ...	44
Removal and installation .....	31	BRAKE CALIPER ASSEMBLY : Removal and In- stallation .....	44
Inspection and Adjustment .....	32	BRAKE CALIPER ASSEMBLY : Disassembly and Assembly .....	45
<b>VACUUM LINES .....</b>	<b>34</b>	BRAKE CALIPER ASSEMBLY : Inspection and Adjustment .....	47
Exploded View .....	34		
Removal and Installation .....	34	<b>SERVICE DATA AND SPECIFICATIONS (SDS) .....</b>	<b>49</b>
Inspection .....	34	<b>SERVICE DATA AND SPECIFICATIONS (SDS) .....</b>	<b>49</b>
<b>FRONT DISC BRAKE .....</b>	<b>36</b>	General Specifications .....	49
<b>BRAKE PAD .....</b>	<b>36</b>	Brake Pedal .....	49
BRAKE PAD : Exploded View .....	36	Brake Booster .....	49
BRAKE PAD : Removal and Installation .....	36	Front Disc Brake .....	49
BRAKE PAD : Inspection and Adjustment .....	37	Rear Disc Brake .....	49
<b>BRAKE CALIPER ASSEMBLY .....</b>	<b>37</b>		
BRAKE CALIPER ASSEMBLY : Exploded View ...	38		
BRAKE CALIPER ASSEMBLY : Removal and In- stallation .....	38		

## < SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

# NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

## NVH Troubleshooting Chart

INFOID:000000005255264

Use the chart below to find the cause of the symptom. If necessary, repair or replace these parts.

Symptom			BRAKE	Possible cause and SUSPECTED PARTS		Reference page
				Noise	Shake	
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				
		×				</

×: Applicable

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### FOR USA AND CANADA

#### FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005530468

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### FOR USA AND CANADA : Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000005530470

#### **NOTE:**

- This Procedure is applied only to models with Intelligent Key system and NVIS/IVIS (NISSAN/INFINITI VEHICLE IMMOBILIZER SYSTEM - NATS).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NVIS/IVIS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

#### OPERATION PROCEDURE

1. Connect both battery cables.

#### **NOTE:**

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.

## PRECAUTIONS


### < PRECAUTION >

3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.
5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT-III.

### FOR USA AND CANADA : Precaution for Procedure without Cowl Top Cover

INFOID:000000005530472

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

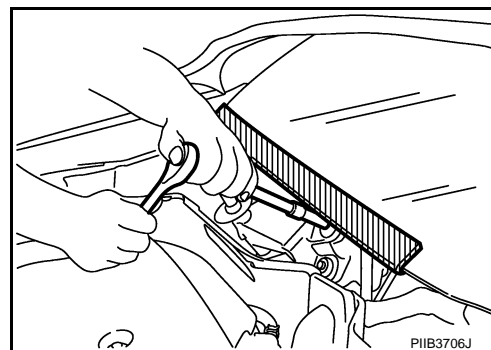


### FOR USA AND CANADA : Precaution for Brake System

INFOID:000000005255268

#### **WARNING:**

**Clean any dust from the front brake and rear brake with a vacuum dust collector. Never blow with compressed air.**

- Only use "DOT 3" brake fluid. Refer to [MA-14, "FOR NORTH AMERICA : Fluids and Lubricants"](#).
  - Never reuse drained brake fluid.
  - Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.
  - Always clean with new brake fluid when cleaning the master cylinder, brake caliper and other components.
  - Never use mineral oils such as gasoline or light oil to clean. They may damage rubber parts and cause improper operation.
  - Always loosen the brake tube flare nut with a flare nut wrench.
  - Tighten the brake tube flare nut to the specified torque with crow-foot (A) and torque wrench (B).
  - Always confirm the specified tightening torque when installing the brake pipes.
  - Turn the ignition switch OFF and disconnect the ABS actuator and electric unit (control unit) connector or the battery negative terminal before performing the work.
  - Check that no brake fluid leakage is present after replacing the parts.
  - Burnish the brake contact surfaces after refinishing or replacing rotors, after replacing pads, or if a soft pedal occurs at very low mileage.
- Front brake pad: refer to [BR-37, "BRAKE PAD : Inspection and Adjustment"](#).
  - Front disc rotor: refer to [BR-41, "BRAKE CALIPER ASSEMBLY : Inspection and Adjustment"](#).
  - Rear brake pad: refer to [BR-43, "BRAKE PAD : Inspection and Adjustment"](#).
  - Rear disc rotor: refer to [BR-47, "BRAKE CALIPER ASSEMBLY : Inspection and Adjustment"](#).

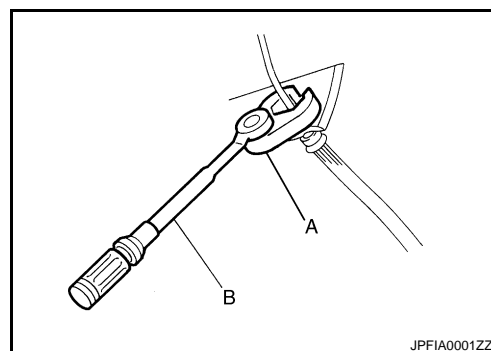

### FOR MEXICO

### FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005530469

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

# PRECAUTIONS

## < PRECAUTION >

### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIR BAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

## PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

### **WARNING:**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

## FOR MEXICO : Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000005530471

### **NOTE:**

- This Procedure is applied only to models with Intelligent Key system and NVIS/IVIS (NISSAN/INFINITI VEHICLE IMMOBILIZER SYSTEM - NATS).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NVIS/IVIS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

## OPERATION PROCEDURE

1. Connect both battery cables.

### **NOTE:**

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.
5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT-III.


## PRECAUTIONS

### < PRECAUTION >

#### FOR MEXICO : Precaution for Procedure without Cowl Top Cover

INFOID:000000005530473

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

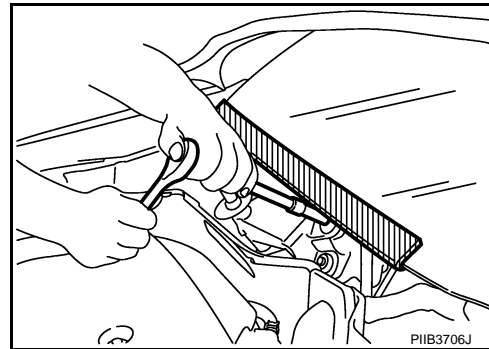


#### FOR MEXICO : Precaution for Brake System

INFOID:000000005255272

#### **WARNING:**

**Clean any dust from the front brake and rear brake with a vacuum dust collector. Never blow with compressed air.**

- Only use "DOT 3" brake fluid. Refer to [MA-15, "FOR MEXICO : Fluids and Lubricants"](#).
- Never reuse drained brake fluid.
- Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.
- Always clean with new brake fluid when cleaning the master cylinder, brake caliper and other components.
- Never use mineral oils such as gasoline or light oil to clean. They may damage rubber parts and cause improper operation.
- Always loosen the brake tube flare nut with a flare nut wrench.
- Tighten the brake tube flare nut to the specified torque with crow-foot (A) and torque wrench (B).
- Always confirm the specified tightening torque when installing the brake pipes.
- Turn the ignition switch OFF and disconnect the ABS actuator and electric unit (control unit) connector or the battery negative terminal before performing the work.
- Check that no brake fluid leakage is present after replacing the parts.
- Burnish the brake contact surfaces after refinishing or replacing rotors, after replacing pads, or if a soft pedal occurs at very low mileage.
- Front brake pad: refer to [BR-37, "BRAKE PAD : Inspection and Adjustment"](#).
- Front disc rotor: refer to [BR-41, "BRAKE CALIPER ASSEMBLY : Inspection and Adjustment"](#).
- Rear brake pad: refer to [BR-43, "BRAKE PAD : Inspection and Adjustment"](#).
- Rear disc rotor: refer to [BR-47, "BRAKE CALIPER ASSEMBLY : Inspection and Adjustment"](#).

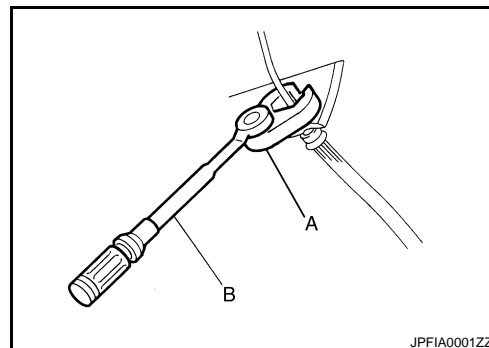

# PREPARATION



< PREPARATION >

## PREPARATION

### PREPARATION

#### Commercial Service Tool

INFOID:000000005255273

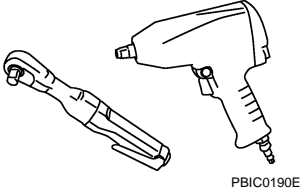Tool name	Description
<p>Power tool</p>  <p>PBIC0190E</p>	<p>Loosening bolts and nuts</p>
<p>Pin punch a: 4 mm (0.16 in) dia.</p>  <p>NT410</p>	<p>Removing and installing reservoir tank pin</p>



# BRAKE PEDAL

< PERIODIC MAINTENANCE >

## PERIODIC MAINTENANCE

### BRAKE PEDAL

#### Inspection and Adjustment

INFOID:000000005255274

#### INSPECTION

##### Brake Pedal Height

Check the height (H<sub>1</sub>) between the accelerator pedal stopper (1) and the brake pedal upper surface.


##### Standard

Brake pedal height (H<sub>1</sub>)

: Refer to [BR-49, "Brake Pedal"](#).

##### CAUTION:

Remove the floor trim.

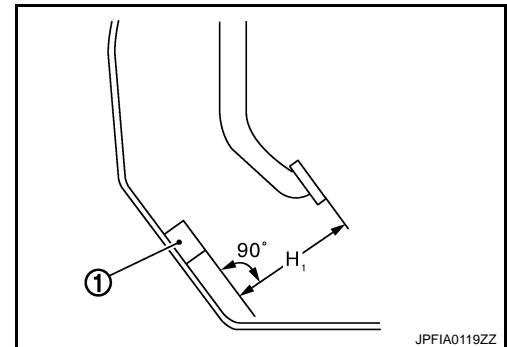

##### Stop Lamp Switch and ASCD Brake Switch

Check the clearance (C) between stopper rubber (1) and stop lamp switch and ASCD brake switch (2) threaded end.

##### Standard

Clearance (C) between stopper rubber and stop lamp switch and ASCD brake switch threaded end


: Refer to [BR-49, "Brake Pedal"](#).

##### CAUTION:

The stop lamp must be turned off when the brake pedal is released.

##### NOTE:

Pull the brake pedal pad to make the clearance between stopper rubber and stop lamp switch and ASCD brake switch threaded end.

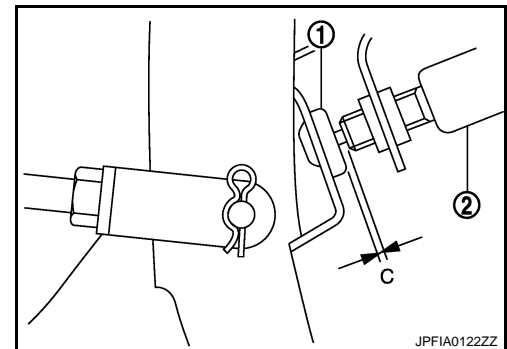


##### Brake Pedal Play

Press the brake pedal. Check the brake pedal play (A).

##### Standard

Pedal play (A)

: Refer to [BR-49, "Brake Pedal"](#).

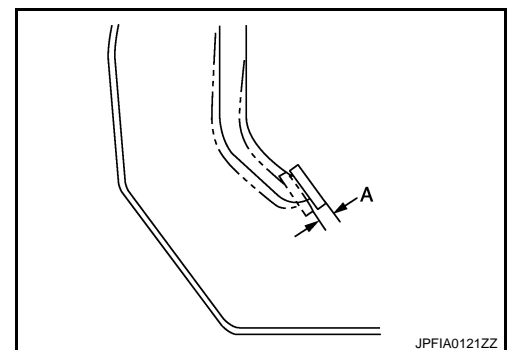

##### Depressed Brake Pedal Height

# BRAKE PEDAL

## < PERIODIC MAINTENANCE >

Check the height between the accelerator pedal stopper (1) and the brake pedal upper surface (H<sub>2</sub>) when depressing the brake pedal at 490 N (50 kg, 110 lb) while turning engine ON.


### Standard

Depressed brake pedal height (H<sub>2</sub>)

: Refer to [BR-49, "Brake Pedal"](#).

### CAUTION:

Remove the floor trim.

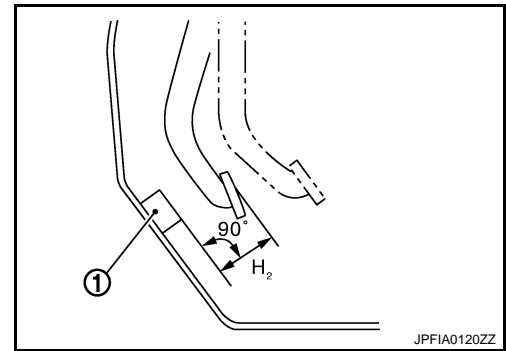


## ADJUSTMENT

### Brake Pedal Height

1. Disconnect the stop lamp switch and ASCD brake switch harness connector.
2. Turn the stop lamp switch and ASCD brake switch 45° counterclockwise.
3. Loosen the input rod lock nut (1). Adjust the brake pedal height to the specification. Tighten the input rod lock nut to the specification. Refer to [BR-31, "Exploded View"](#).

### CAUTION:


The threaded end of the input rod (2) must project to the inner side (L) of the clevis (3).

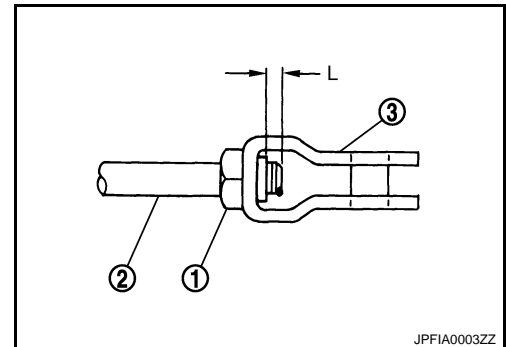

### Standard

Brake pedal height (H<sub>1</sub>)

: Refer to [BR-49, "Brake Pedal"](#).

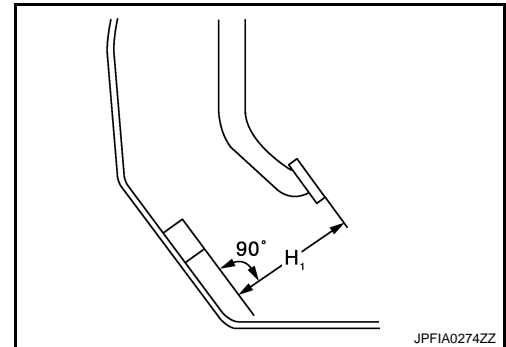


### Stop Lamp Switch and ASCD Brake Switch

1. Disconnect the stop lamp switch and ASCD brake switch harness connector.
2. Turn the stop lamp switch and ASCD brake switch 45° counterclockwise.
3. Press-fit stop lamp switch and ASCD brake switch (2) until stop lamp switch and ASCD brake switch hits the stopper rubber (1) 45° clockwise.

### CAUTION:

- The clearance (C) between the stopper rubber and stop lamp switch and ASCD brake switch threaded end must be the specified value. Refer to [BR-49, "Brake Pedal"](#).
- The stop lamp must be turned off when the brake pedal is released.

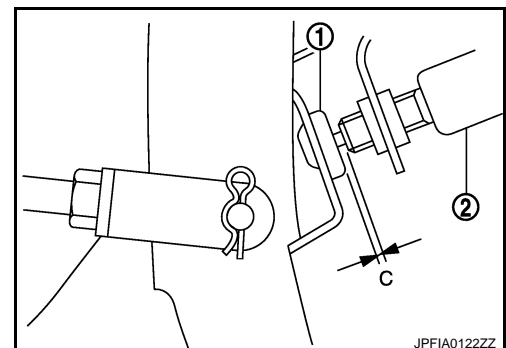

### Brake Pedal Play

1. Disconnect the stop lamp switch and ASCD brake switch harness connector.
2. Turn the stop lamp switch and ASCD brake switch 45° counterclockwise.


## BRAKE PEDAL

### < PERIODIC MAINTENANCE >

3. Press-fit stop lamp switch and ASCD brake switch (2) until stop lamp switch and ASCD brake switch hits the stopper rubber (1) 45° clockwise.

**CAUTION:**

- The clearance (C) between the stopper rubber and stop lamp switch and ASCD brake switch threaded end must be the specified value. Refer to [BR-49, "Brake Pedal"](#).
- The stop lamp must be turned off when the brake pedal is released.

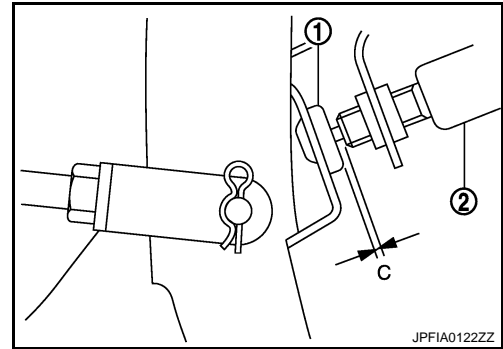

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BR

# BRAKE FLUID

< PERIODIC MAINTENANCE >


## BRAKE FLUID

### Inspection

INFOID:000000005255275

#### BRAKE FLUID LEVEL

- Check that the fluid level in the reservoir tank is within the specified range (MAX – MIN lines).
- Visually check for any brake fluid leakage around the reservoir tank.
- Check the brake system for any leakage if the fluid level is extremely low (lower than MIN).
- Check the brake system for fluid leakage if the warning lamp remains illuminated even after the parking brake is released.

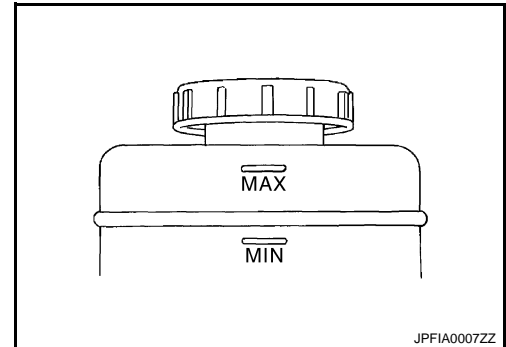


#### BRAKE LINE

1. Check brake line (tubes and hoses) for cracks, deterioration or other damage. Replace any damaged parts.
2. Check for fluid leakage by fully depressing brake pedal while engine is running.

#### **CAUTION:**

**If leakage occurs around joints, retighten or, if necessary, replace damaged parts.**

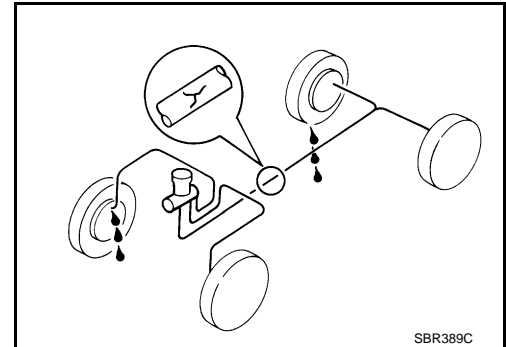


### Draining

INFOID:000000005255276

#### **CAUTION:**

- **Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.**
- **Turn the ignition switch OFF and disconnect the ABS actuator and electric unit (control unit) connector or the battery negative terminal before draining.**

1. Connect a vinyl tube to the bleed valve.
2. Depress the brake pedal and loosen the bleeder valve to gradually discharge brake fluid.

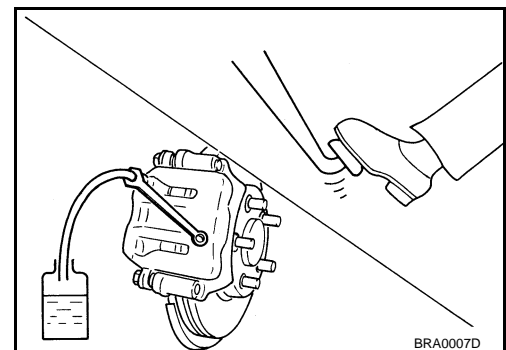

### Refilling

INFOID:000000005255277

#### **CAUTION:**

**Turn the ignition switch OFF and disconnect the ABS actuator and electric unit (control unit) connector or the battery negative terminal before refilling.**

# BRAKE FLUID


## < PERIODIC MAINTENANCE >

1. Check that there is no foreign material in the reservoir tank, and refill with new brake fluid.

### **CAUTION:**

**Never reuse drained brake fluid.**

2. Loosen the bleeder valve, slowly depress the brake pedal to the full stroke, and then release the pedal. Repeat this operation at intervals of 2 or 3 seconds until all brake fluid is discharged. Then close the bleeder valve with the brake pedal depressed. Repeat the same work on each wheel.
3. Perform the air bleeding. Refer to [BR-13, "Bleeding Brake System"](#).

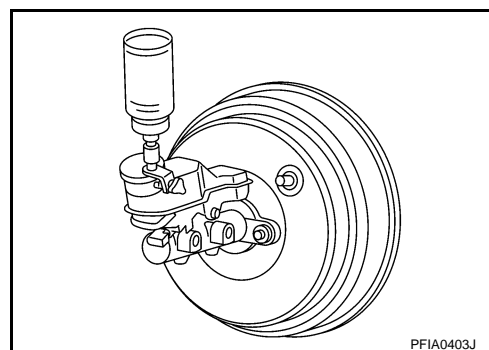

INFOID:000000005255278

## Bleeding Brake System

### **CAUTION:**

- Turn the ignition switch OFF and disconnect the ABS actuator and electric unit (control unit) connector or the battery negative terminal before performing the work.
- Monitor the fluid level in the reservoir tank during the air bleeding.
- Always use new brake fluid for refilling. Never reuse the drained brake fluid.

1. Connect a vinyl tube to the bleeder valve of the rear right brake.
2. Fully depress the brake pedal 4 to 5 times.
3. Loosen the bleeder valve and bleed air with the brake pedal depressed, and then quickly tighten the bleeder valve.
4. Repeat steps 2 and 3 until all of the air is out of the brake line.
5. Tighten the bleeder valve to the specified torque.
  - Front disc brake: refer to [BR-38, "BRAKE CALIPER ASSEMBLY : Exploded View"](#).
  - Rear disc brake: refer to [BR-44, "BRAKE CALIPER ASSEMBLY : Exploded View"](#).
6. Perform steps 1 to 5 for the rear right brake → front left brake → rear left brake → and front right brake in order.
7. Check that the fluid level in the reservoir tank is within the specified range after air bleeding. Refer to [BR-12, "Inspection"](#).

## **BRAKE MASTER CYLINDER**

< PERIODIC MAINTENANCE >

---

### **BRAKE MASTER CYLINDER**

#### **Inspection**

INFOID:000000005255279

#### **FLUID LEAK**

Check for brake fluid leakage from the master cylinder mounting face, reservoir tank mounting face and brake tube connections.

# BRAKE BOOSTER

< PERIODIC MAINTENANCE >

## BRAKE BOOSTER

### Inspection


INFOID:000000005255280

### OPERATION

Depress the brake pedal several times at 5-second intervals with the engine stopped. Start the engine with the brake pedal fully depressed. Check that the clearance between brake pedal and dash lower panel decreases.


#### NOTE:

A slight impact with a small click may be felt on the pedal when the brake pedal is fully depressed. This is a normal phenomenon due to the brake system operation.

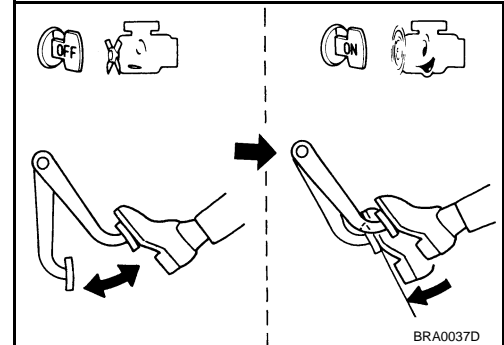

### AIR TIGHT


- Idle the engine for 1 minute to apply vacuum to the brake booster, and stop the engine. Then depress the brake pedal several times at 5-second intervals until the accumulated vacuum is released to atmospheric pressure. Check that the clearance between brake pedal and dash lower panel gradually increases (A → B → C) each time the brake pedal is depressed during this operation.

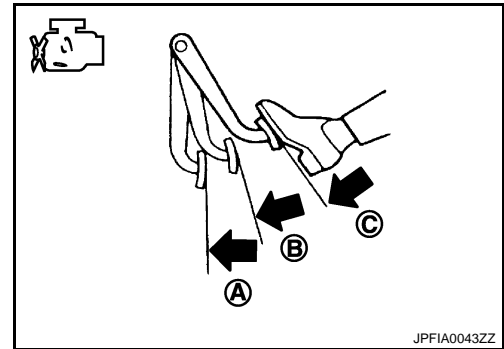

- Depress the brake pedal with the engine running. Then stop the engine while holding down the brake pedal. Check that the brake pedal stroke does not change after holding down the brake pedal for 30 seconds or more.

#### NOTE:

A slight impact with a small click may be felt on the pedal when the brake pedal is fully depressed. This is a normal phenomenon due to the brake system operation.

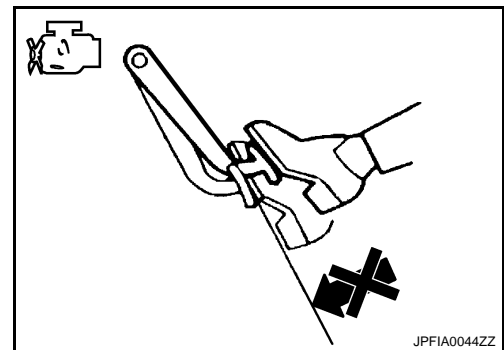

# FRONT DISC BRAKE

< PERIODIC MAINTENANCE >

## FRONT DISC BRAKE BRAKE PAD

### BRAKE PAD : Inspection

INFOID:000000005255281

#### PAD WEAR


Check pad thickness from an inspection hole on cylinder body.  
Check using a scale if necessary.

**Standard thickness**

: Refer to [BR-49, "Front Disc Brake"](#).

**Wear limit thickness**

: Refer to [BR-49, "Front Disc Brake"](#).

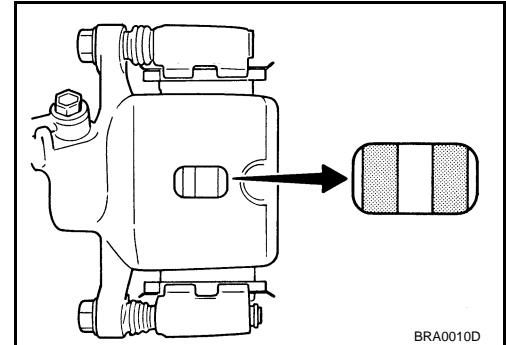

## DISC ROTOR

### DISC ROTOR : Inspection

INFOID:000000005255282

#### APPEARANCE

Check surface of disc rotor for uneven wear, cracks, and serious damage. Replace if there are any abnormal conditions.

#### RUNOUT

1. Fix the disc rotor to the wheel hub and bearing assembly with wheel nuts (2 points at least).
2. Inspect the runout with a dial gauge. [Measured at 10 mm (0.39 in) inside the disc edge.]

**Runout limit**

: Refer to [BR-49, "Front Disc Brake"](#).

#### NOTE:

Check the wheel bearing axial end play before the inspection. Refer to [FAX-8, "Inspection"](#) (2WD), [FAX-32, "Inspection"](#) (AWD).


3. Find the installation position with a minimum runout by shifting the disc rotor-to-wheel hub and bearing assembly installation position by one hole at a time if the runout exceeds the limit value.
4. Refinish the disc rotor if the runout is outside the limit even after performing the above operation. [When refinishing, use the Pro-Cut PEM On-Car brake Lathe (Tool No. 38-PFM90.5) or equivalent.]

#### CAUTION:

- Check in advance that the that the thickness of the disc rotor is wear thickness + 0.3 mm (0.012 in) or more.
- If the thickness is less than wear thickness + 0.3 mm (0.012 in), replace the disc rotor.

**Wear limit thickness**

: Refer to [BR-49, "Front Disc Brake"](#).

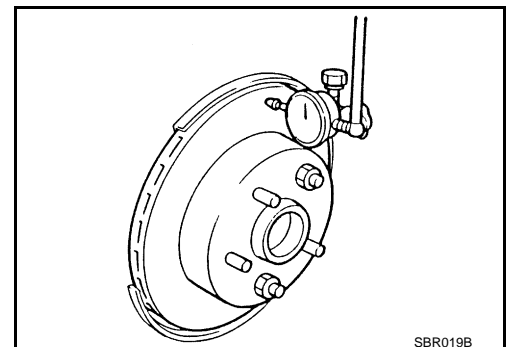

## THICKNESS




## FRONT DISC BRAKE

### < PERIODIC MAINTENANCE >

Check the thickness of the disc rotor using a micrometer. Replace the disc rotor if the thickness is below the wear limit.

**Wear limit thickness**

**: Refer to [BR-49, "Front Disc Brake"](#).**

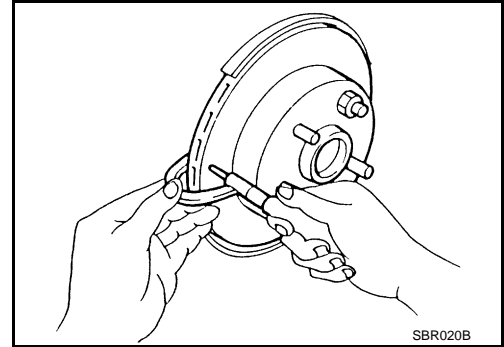

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BR

## REAR DISC BRAKE

< PERIODIC MAINTENANCE >

### REAR DISC BRAKE BRAKE PAD

#### BRAKE PAD : Inspection

INFOID:000000005255283

#### PAD WEAR


Check pad thickness from an inspection hole on cylinder body.  
Check using a scale if necessary.

**Standard thickness**

: Refer to [BR-49, "Rear Disc Brake"](#).

**Wear limit thickness**

: Refer to [BR-49, "Rear Disc Brake"](#).

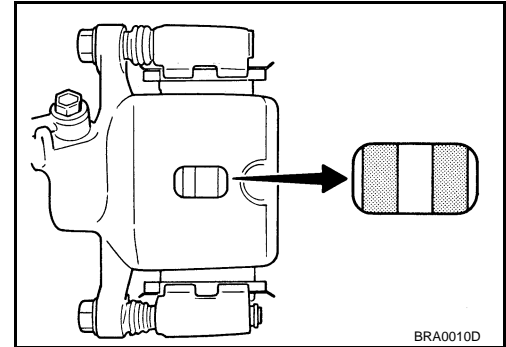

### DISC ROTOR

#### DISC ROTOR : Inspection

INFOID:000000005255284

#### APPEARANCE

Check surface of disc rotor for uneven wear, cracks, and serious damage. Replace if there are any abnormal conditions.

#### RUNOUT

1. Fix the disc rotor to the wheel hub and bearing assembly with wheel nuts (2 points at least).
2. Inspect the runout with a dial gauge. [Measured at 10 mm (0.39 in) inside disc edge.]

**Runout limit**

: Refer to [BR-49, "Rear Disc Brake"](#).

#### NOTE:

Check the wheel bearing axial end play before the inspection. Refer to [RAX-4, "Inspection"](#) (2WD), [RAX-11, "Inspection"](#) (AWD).


3. Find the installation position with a minimum runout by shifting the disc rotor-to-wheel hub and bearing assembly installation position by one hole at a time if the runout exceeds the limit value.
4. Refinish the disc rotor if the runout is outside the limit even after performing the above operation. [When refinishing, use the Pro-Cut PEM On-Car brake Lathe (Tool No. 38-PFM90.5) or equivalent.]

#### CAUTION:

- Check in advance that the that the thickness of the disc rotor is wear thickness + 0.3 mm (0.012 in) or more.
- If the thickness is less than wear thickness + 0.3 mm (0.012 in), replace the disc rotor.

**Wear limit thickness**

: Refer to [BR-49, "Rear Disc Brake"](#).

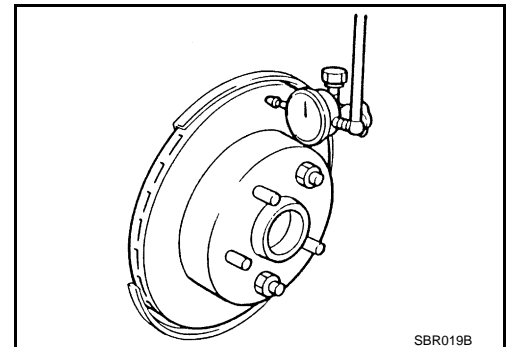

#### THICKNESS


## REAR DISC BRAKE

### < PERIODIC MAINTENANCE >

Check the thickness of the disc rotor using a micrometer. Replace the disc rotor if the thickness is below the wear limit.

**Wear limit thickness**

**: Refer to [BR-49, "Rear Disc Brake"](#).**

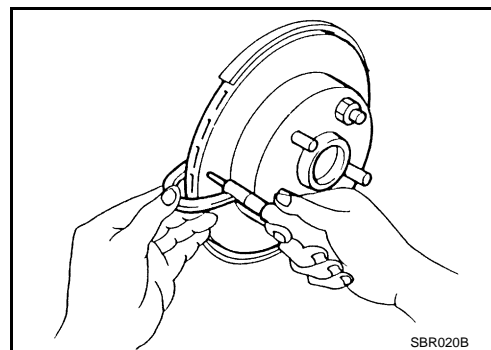

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

BR

# BRAKE PEDAL


< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION


### BRAKE PEDAL

#### Exploded View

INFOID:000000005255285

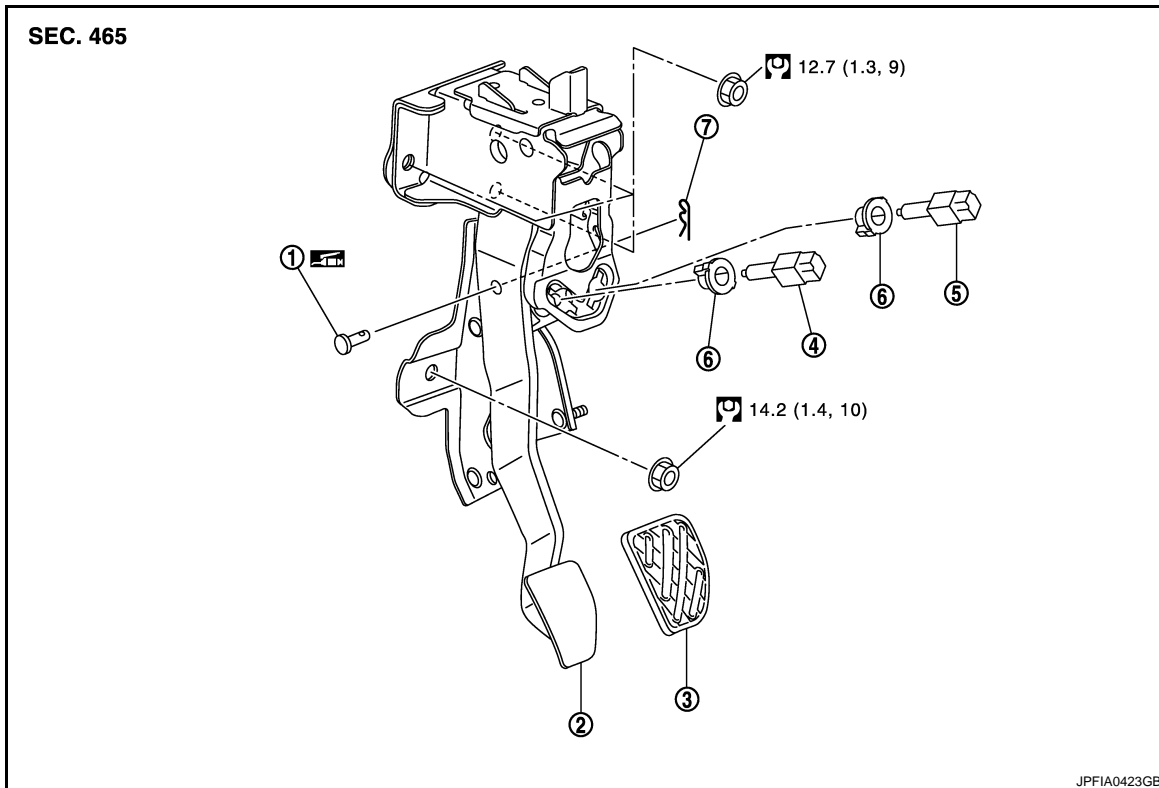

- |                     |                         |                    |
|---------------------|-------------------------|--------------------|
| 1. Clevis pin       | 2. Brake pedal assembly | 3. Brake pedal pad |
| 4. Stop lamp switch | 5. ASCD brake switch    | 6. Clip            |
| 7. Snap pin         |                         |                    |

: Apply multi-purpose grease.

Refer to [GI-4, "Components"](#) for symbols not described on the above.

### Removal and Installation

INFOID:000000005255286

#### REMOVAL

1. Remove instrument driver lower cover. Refer to [IP-12, "Exploded View"](#).
2. Remove front foot duct LH. Refer to [VTL-10, "Exploded View"](#).
3. Remove mode door motor. Refer to [HAC-91, "Exploded View"](#).
4. Disconnect the stop lamp switch and ASCD brake switch harness connectors.
5. Disconnect accelerator pedal position sensor harness connector.
6. Remove steering member stay.
7. Remove snap pin and clevis pin from clevis of brake booster.
8. Remove the brake pedal assembly and the accelerator pedal.
9. Remove the accelerator pedal from brake pedal assembly. Refer to [ACC-4, "Exploded View"](#).

#### INSTALLATION

Note the following, and installation is the reverse order of removal.

- Apply the multi-purpose grease to the clevis pin and the mating faces. (Not necessary if grease has been already applied.)

#### NOTE:

# BRAKE PEDAL

## < REMOVAL AND INSTALLATION >

The clevis pin may be inserted in either direction.

### Inspection and Adjustment


INFOID:000000005255287

#### INSPECTION AFTER REMOVAL


- Check the following items and replace the brake pedal assembly if necessary.
- Check the brake pedal upper rivet (A) for deformation.
- Check the brake pedal for bend, damage, and cracks on the welded parts.
- Check the lapping length (X) of sub-bracket (B) and slide plate (C).

#### Standard

Lapping length : 5.0 mm (0.197 in) or more

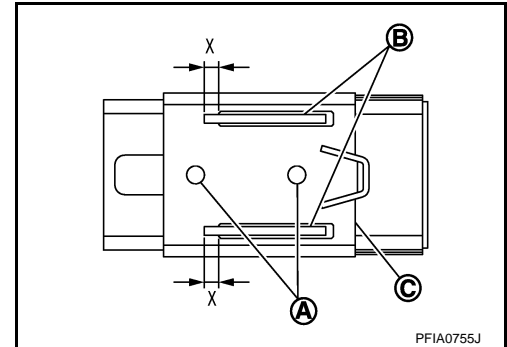

- Check clevis pin and plastic stopper (A) for damage and deformation. If any damage is found, replace clevis pin.

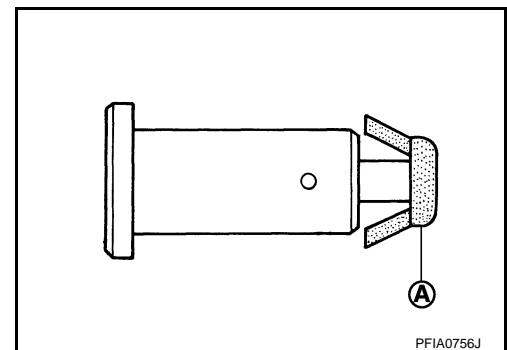


#### ADJUSTMENT AFTER INSTALLATION

- Perform the brake pedal adjustment after installing the brake pedal assembly. Refer to [BR-9, "Inspection and Adjustment"](#).
- Perform the accelerator pedal check after installing the accelerator pedal. Refer to [ACC-5, "Inspection"](#).

INFOID:000000005255288

WITHOUT VDC

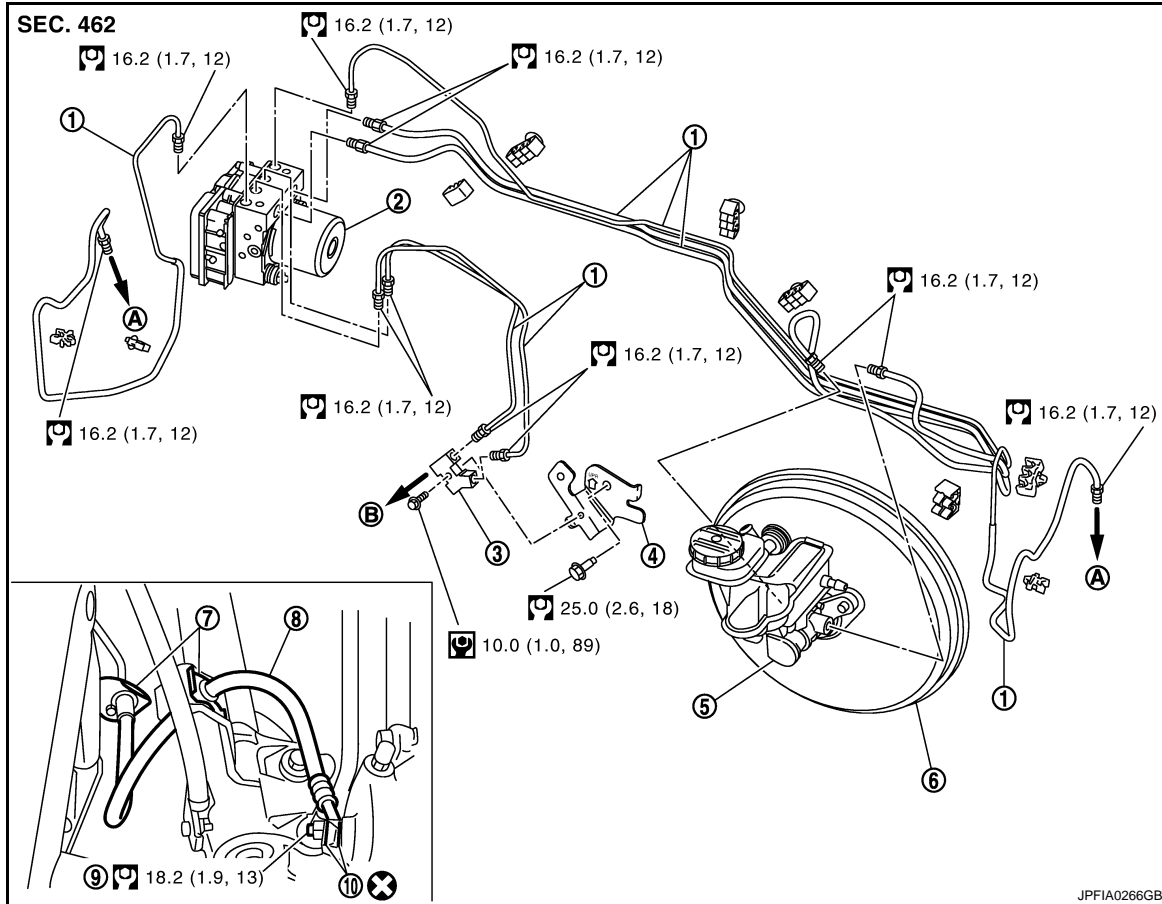


- |                        |  |                  |
|------------------------|--|------------------|
| 1. Brake tube          | 2. ABS actuator and electric unit (control unit) | 3. Connector     |
| 4. Connector bracket   | 5. Master cylinder assembly                      | 6. Brake booster |
| 7. Lock plate          | 8. Brake hose                                    | 9. Union bolt    |
| 10. Copper washer      |  |                  |
| A. To front brake hose | B. To rear brake tube                            |                  |

Refer to GI-4, "Components" for symbols in the figure.

# BRAKE PIPING

< REMOVAL AND INSTALLATION >

WITH VDC

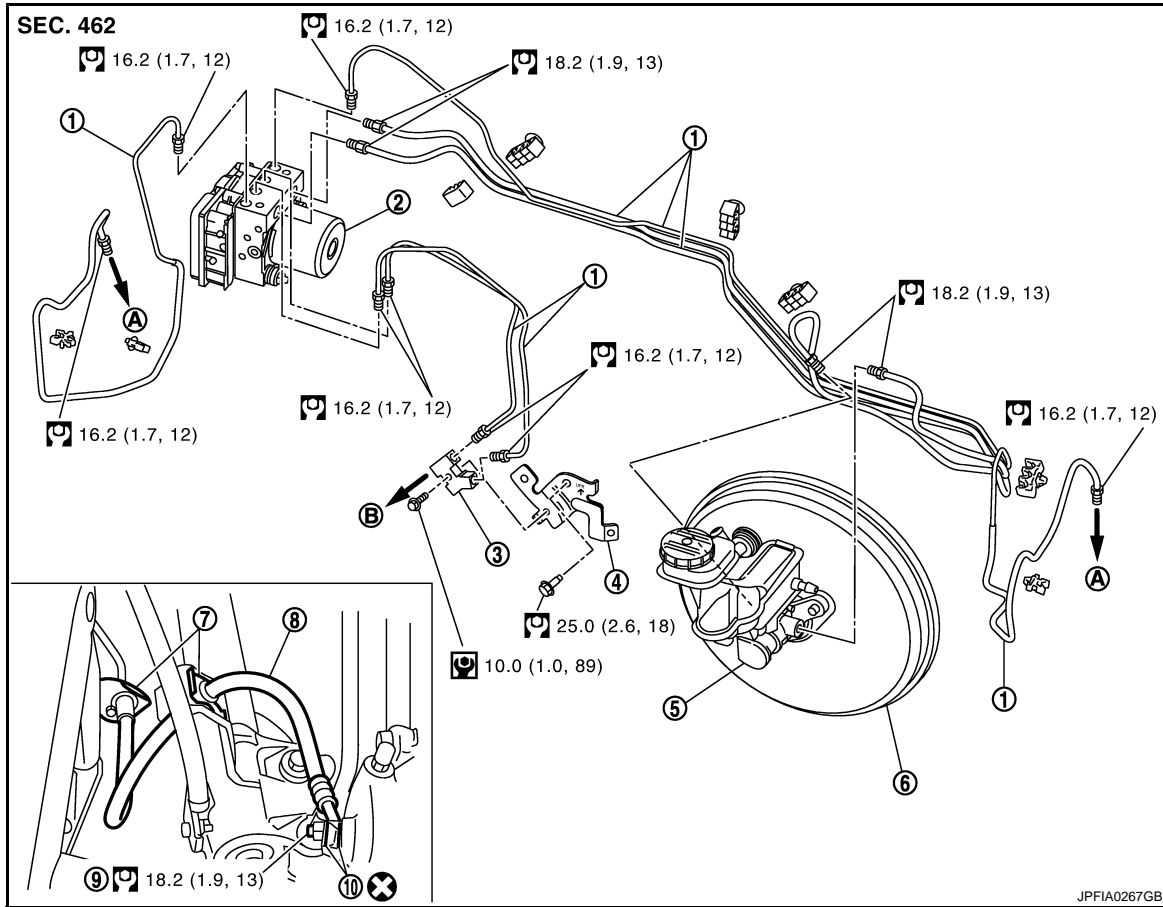


- |                        |  |                  |
|------------------------|--|------------------|
| 1. Brake tube          | 2. ABS actuator and electric unit (control unit) | 3. Connector     |
| 4. Connector bracket   | 5. Master cylinder assembly                      | 6. Brake booster |
| 7. Lock plate          | 8. Brake hose                                    | 9. Union bolt    |
| 10. Copper washer      |  |                  |
| A. To front brake hose | B. To rear brake tube                            |                  |

Refer to [GI-4, "Components"](#) for symbols in the figure.

## FRONT : Hydraulic Piping

INFOID:000000005255289

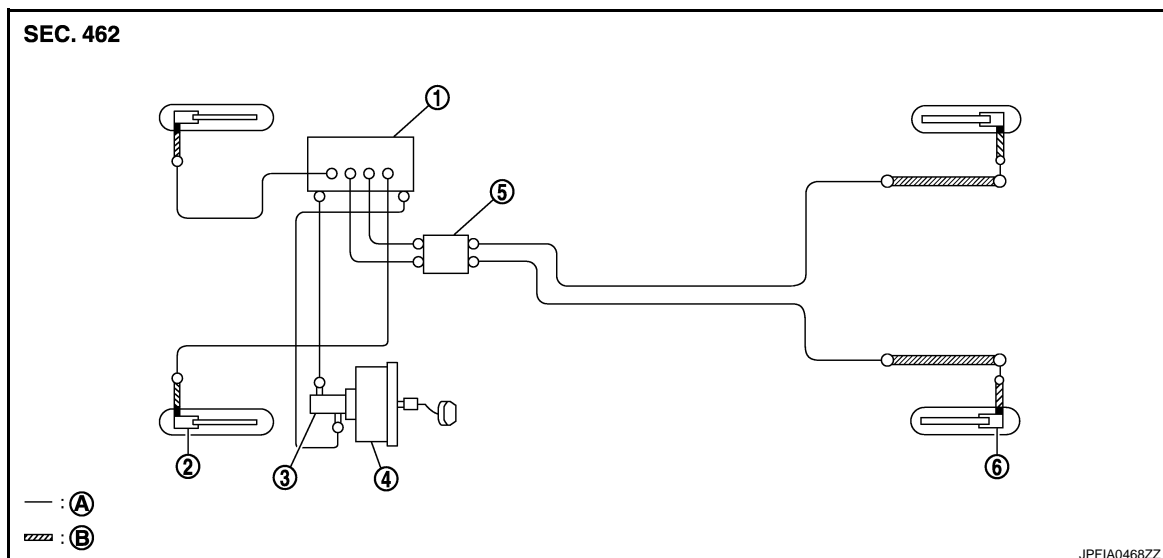

# BRAKE PIPING

## < REMOVAL AND INSTALLATION >

- |  |                     |                             |
|--|---------------------|-----------------------------|
| 1. ABS actuator and electric unit (control unit) | 2. Front disc brake | 3. Master cylinder assembly |
| 4. Brake booster                                 | 5. Connector        | 6. Rear disc brake          |
| A. Brake tube                                    | B. Brake hose       |                             |

○: Flare nut

■: Union bolt

### FRONT : Removal and Installation

INFOID:000000005255290

#### REMOVAL

##### CAUTION:

**Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.**

1. Remove tires with power tool.
2. Drain brake fluid. Refer to [BR-12. "Draining"](#).
3. Loosen the flare nut with a flare nut wrench and separate the brake tube from the hose.

##### CAUTION:

- **Never scratch the flare nut and the brake tube.**
- **Never bend sharply, twist or strongly pull out the brake hoses and tubes.**
- **Cover open end of brake tubes and hoses when disconnecting to prevent entrance of dirt.**

4. Remove the union bolt and copper washers, and remove the brake hose from the brake caliper assembly.
5. Remove the lock plate and remove the brake hose.

#### INSTALLATION

##### CAUTION:

**Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.**

1. Assemble the union bolt and the copper washers to the brake hose.

##### CAUTION:

**Never reuse the copper washer.**

2. Align the brake hose pin to the projection (A) of the brake caliper assembly and tighten the union bolt (1) to the specified torque.
3. Install the brake tube to the brake hose, temporarily tighten the flare nut by hand until it does not rotate further, and fix the brake hose to the bracket with the lock plate.

##### CAUTION:

**Check that all brake hoses and tubes are not twisted and bent.**

4. Tighten the flare nut to the specified torque with a crowfoot and torque wrench.

##### CAUTION:


**Never scratch the flare nut and the brake tube.**

5. Refill with new brake fluid and perform the air bleeding. Refer to [BR-13. "Bleeding Brake System"](#).

##### CAUTION:

**Never reuse drained brake fluid.**

6. Install tires.

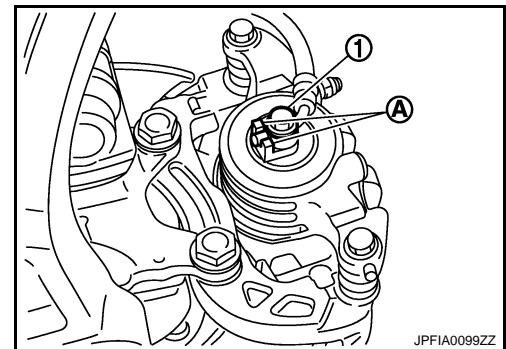

### FRONT : Inspection

INFOID:000000005255291

#### INSPECTION AFTER INSTALLATION

1. Check the brake hoses and tubes for the following: no scratches; no twist and deformation; no interference with other components when steering the steering wheel; no looseness at connections.
2. Depress the brake pedal with a force of 785 N (80 kg, 177 lb) and hold down the pedal for approximately 5 seconds with the engine running. Check for any fluid leakage.

##### CAUTION:



# BRAKE PIPING


## < REMOVAL AND INSTALLATION >

Retighten the applicable connection to the specified torque and repair any abnormal (damaged, worn or deformed) part if any brake fluid leakage is present.

### REAR

### REAR : Exploded View

INFOID:000000005255292

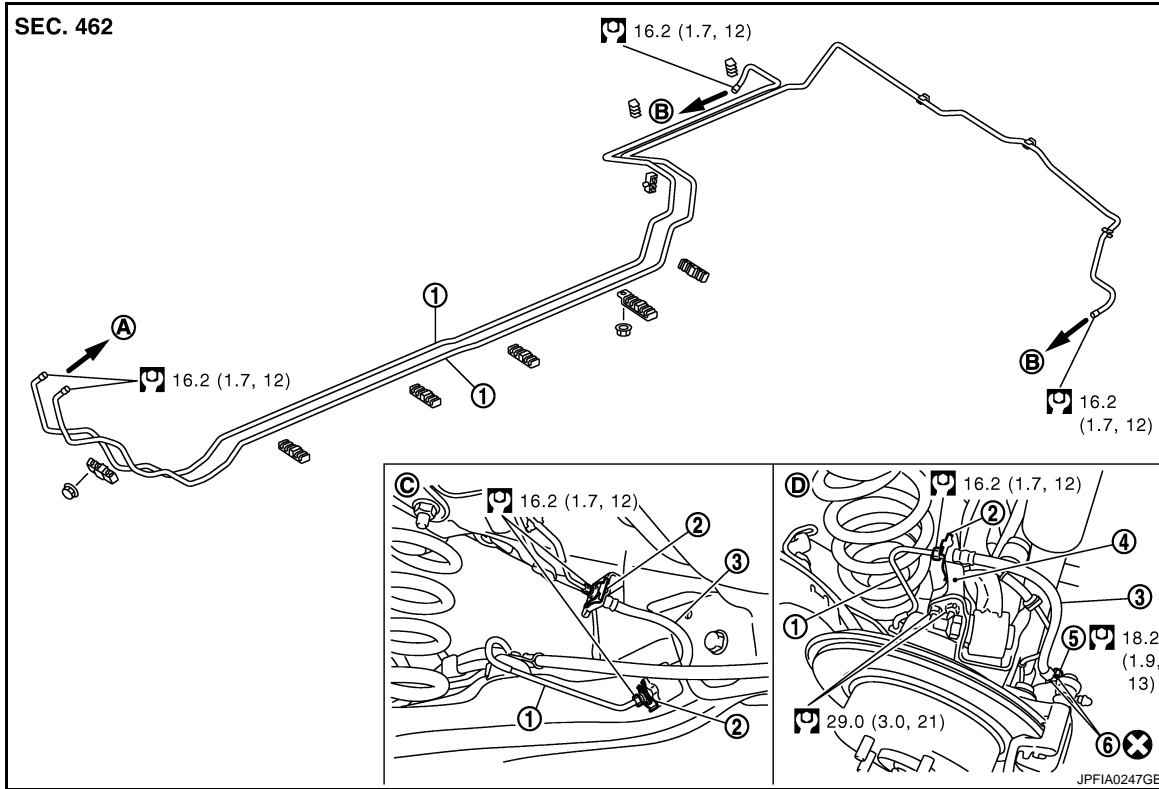

- |                        |                       |                  |
|------------------------|-----------------------|------------------|
| 1. Brake tube          | 2. Lock plate         | 3. Brake hose    |
| 4. Brake hose bracket  | 5. Union bolt         | 6. Copper washer |
| A. To front brake tube | B. To rear brake hose | C. Floor side    |
| D. Caliper side        |                       |                  |


Refer to [GI-4, "Components"](#) for symbols in the figure.

# BRAKE PIPING

< REMOVAL AND INSTALLATION >

## REAR : Hydraulic Piping

INFOID:000000005255293

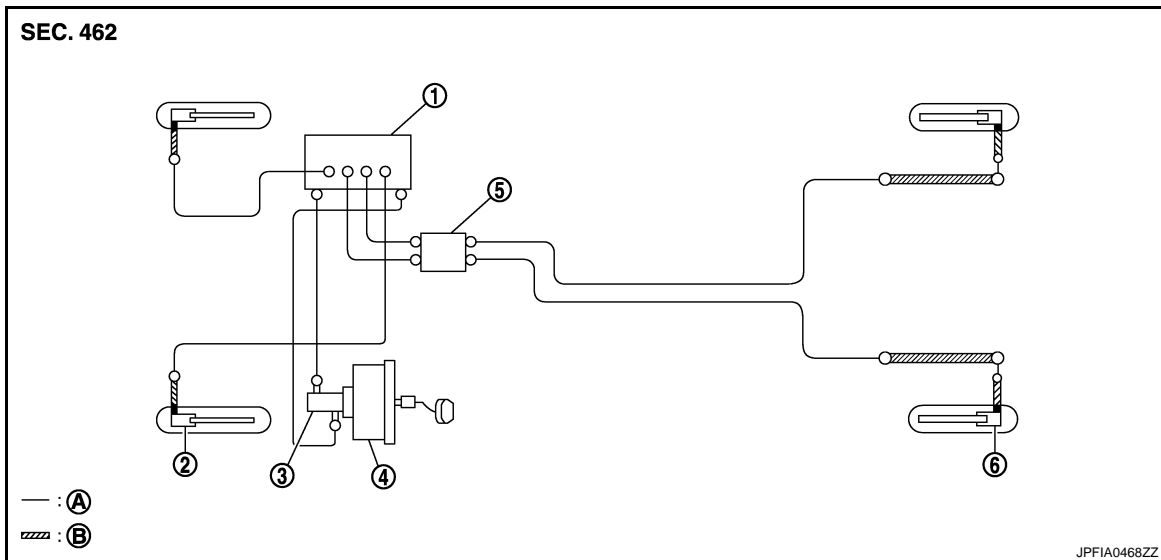

- |  |                     |                             |
|--|---------------------|-----------------------------|
| 1. ABS actuator and electric unit (control unit) | 2. Front disc brake | 3. Master cylinder assembly |
| 4. Brake booster                                 | 5. Connector        | 6. Rear disc brake          |
| A. Brake tube                                    | B. Brake hose       |                             |

○: Flare nut

■: Union bolt

## REAR : Removal and Installation

INFOID:000000005255294

### REMOVAL

#### CAUTION:

**Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.**

1. Remove tires with power tool.
2. Drain brake fluid. Refer to [BR-12, "Draining"](#).
3. Loosen the flare nut with a flare nut wrench and separate the brake tube from the hose.

#### CAUTION:

- **Never scratch the flare nut and the brake tube.**
- **Never sharply bend, twist or strongly pull the brake hoses and tubes.**
- **Cover the open end of brake tubes and hoses when disconnecting to prevent entrance of dirt.**

4. Remove the union bolt and copper washers, and remove the brake hose from the brake caliper assembly.
5. Remove the lock plate and remove the brake hose from the vehicle.

### INSTALLATION

#### CAUTION:

**Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.**

1. Assemble the union bolt and the copper washers to the brake hose.

#### CAUTION:

**Never reuse copper washer.**

## BRAKE PIPING

### < REMOVAL AND INSTALLATION >

2. Install the brake hose L-pin by aligning it with the brake caliper assembly positioning hole, and tighten the union bolt (1) to the specified torque.

3. Connect the hose to the brake tube, temporarily tighten the flare nut by hand until it does not rotate further, and fix the brake hose to the bracket with the lock plate.

**CAUTION:**

**Check that the brake hoses and tubes are not twisted and bent.**

4. Tighten the flare nut to the specified torque with a crowfoot and torque wrench.

**CAUTION:**


**Never scratch the flare nut and the brake tube.**

5. Refill with new brake fluid and perform the air bleeding. Refer to [BR-13, "Bleeding Brake System"](#).

**CAUTION:**

**Never reuse drained brake fluid.**

6. Install tires.

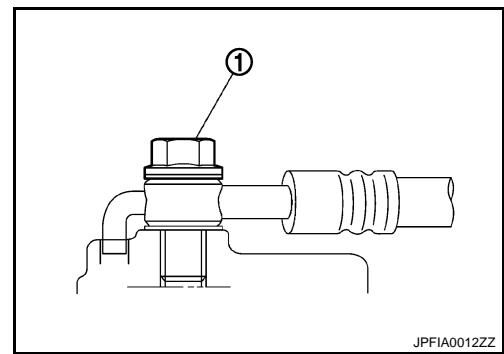

### REAR : Inspection

INFOID:000000005255295

BR

### INSPECTION AFTER INSTALLATION

1. Check the brake hoses and tubes for the following: no scratches; no twist and deformation; no interference with other components when steering the steering wheel; no looseness at connections.
2. Depress the brake pedal with a force of 785 N (80 kg, 177 lb) and hold down the pedal for approximately 5 seconds with the engine running. Check for any fluid leakage.

**CAUTION:**

**Retighten the applicable connection to the specified torque and repair any abnormal (damaged, worn or deformed) part if any brake fluid leakage is present.**


# BRAKE MASTER CYLINDER

< REMOVAL AND INSTALLATION >

## BRAKE MASTER CYLINDER

### Exploded View

INFOID:000000005255296

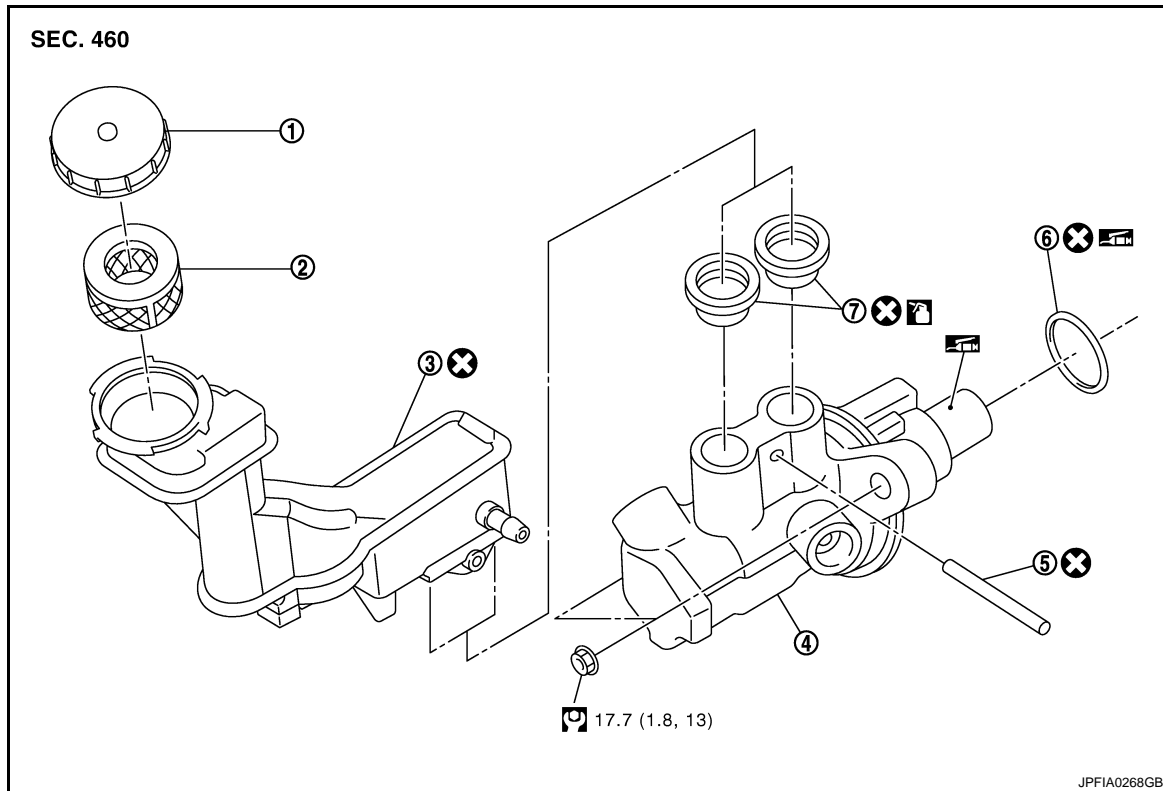

- |                  |                 |                   |
|------------------|-----------------|-------------------|
| 1. Reservoir cap | 2. Oil strainer | 3. Reservoir tank |
| 4. Cylinder body | 5. Pin          | 6. O-ring         |
| 7. Grommet       |                 |                   |

Apply PBC (Poly Butyl Cuprysil) grease or silicone-based grease.

Apply brake fluid.

Refer to [GI-4, "Components"](#) for symbols not described on the above.

### Removal and Installation

INFOID:000000005255297

#### REMOVAL

##### CAUTION:

**Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.**

1. Remove battery and bracket.
2. Remove air duct and resonator assembly and air cleaner case. Refer to [EM-28, "Exploded View"](#).
3. Drain brake fluid. Refer to [BR-12, "Draining"](#).
4. Separate the brake fluid level switch harness connector.
5. Separate the brake tubes from the master cylinder assembly with a flare nut wrench.

##### CAUTION:

**Never scratch the flare nut and the brake tube.**

6. Remove the master cylinder assembly.

##### CAUTION:

- Depress the brake pedal several times to release the vacuum pressure from the brake booster. Then remove the master cylinder assembly.
- Never depress the brake pedal after the master cylinder assembly is removed.

# BRAKE MASTER CYLINDER


## < REMOVAL AND INSTALLATION >

- The piston of the master cylinder assembly is exposed. Never damage it when removing the master cylinder.
- The piston may drop off when pulled out strongly. Never hold the piston. Hold the cylinder body when handling the master cylinder assembly.

### INSTALLATION

Note the following, and installation is the reverse order of removal.

- Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.
- Never depress the brake pedal after the master cylinder assembly is removed.
- Apply silicone grease to the brake booster [see (A) in the figure] when installing the master cylinder assembly to the brake booster.
- The piston of the master cylinder assembly is exposed. Never damage it when handling the master cylinder and check that no dirt and dust are present on the piston before installation. Clean it with new brake fluid if necessary.
- The piston may drop off when pulled strongly. Never hold the piston. Hold the cylinder body when handling the master cylinder assembly.
- Temporarily tighten the brake tube flare nut to the master cylinder assembly by hand. Then tighten it to the specified torque with a crowfoot and torque wrench. Refer to [BR-22, "FRONT : Exploded View"](#).

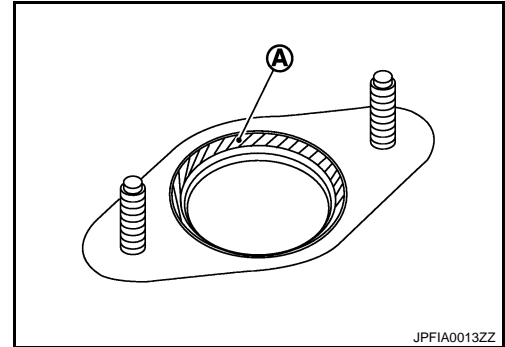

#### CAUTION:

**Never scratch the flare nut and the brake tube.**

- After installation, perform the air bleeding. Refer to [BR-13, "Bleeding Brake System"](#).

#### CAUTION:

**Never reuse drained brake fluid.**

### Disassembly and Assembly

INFOID:000000005255298

### DISASSEMBLY

#### CAUTION:

- **Never disassemble the cylinder body.**
- **Remove the reservoir tank if necessary.**

1. Fix the master cylinder assembly to a vise.


#### CAUTION:

**Always set copper plates or cloth between vise when fixing the cylinder body to a vise. Never overtighten the vise.**

2. Remove the reservoir tank mounting pin with a pin punch.
3. Remove the reservoir tank and grommet from the cylinder body.

#### CAUTION:

**Never drop the removed parts. The parts must not be reused if they are dropped.**

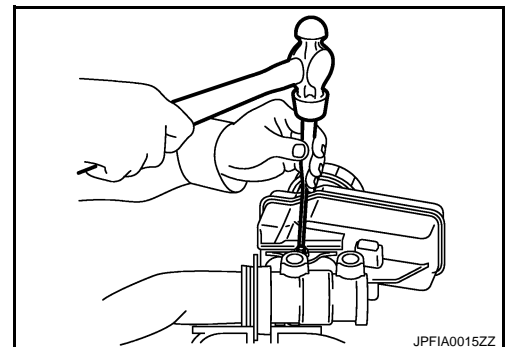

### ASSEMBLY

1. Apply new brake fluid to the grommet and install it to the cylinder body.

#### CAUTION:

- **Never use mineral oil such as gasoline or light oil.**
- **Never reuse the grommets.**

2. Install the reservoir tank to the cylinder body.

#### CAUTION:

- **Never drop the parts when installing. The parts must not be reused if they are dropped.**
- **Never reuse reservoir tank.**


# BRAKE MASTER CYLINDER

## < REMOVAL AND INSTALLATION >

3. Fix the cylinder body to a vise.

**CAUTION:**


- Place the reservoir tank with the chamfered pin hole (↔) facing up.
- Always set copper plates or cloth between vise when fixing the cylinder body to a vise. Never overtighten the vise.

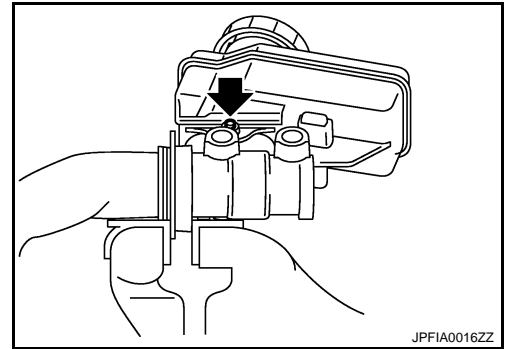

4. Tilt the reservoir tank so that a mounting pin can be inserted. Insert a mounting pin. Return the reservoir tank to the horizontal position. Insert another mounting pin into the pin hole on the opposite side in the same manner after the mounting pin passes through the cylinder body pin hole.

**CAUTION:**

**Never reuse the mounting pin.**

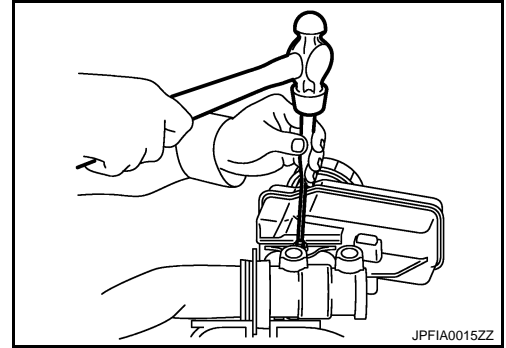

## Inspection

INFOID:000000005255299

## INSPECTION AFTER INSTALLATION

### Fluid Leak

Check for brake fluid leakage from the cylinder body-to-brake booster mounting face, reservoir tank mounting face and brake tube connections.


# BRAKE BOOSTER

< REMOVAL AND INSTALLATION >

## BRAKE BOOSTER

### Exploded View

INFOID:000000005255300

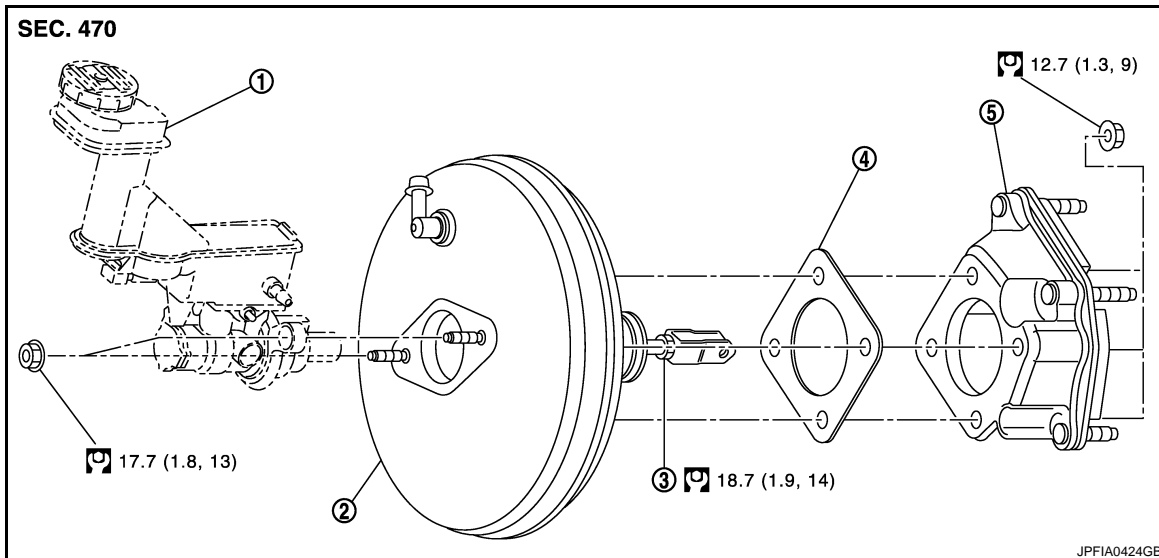

- |                             |                  |             |
|-----------------------------|------------------|-------------|
| 1. Master cylinder assembly | 2. Brake booster | 3. Lock nut |
| 4. Gasket                   | 5. Spacer        |             |


Refer to [GI-4, "Components"](#) for symbols in the figure.

### Removal and installation

INFOID:000000005255301

#### REMOVAL

1. Remove battery and bracket.
2. Remove air duct and resonator assembly and air cleaner case. Refer to [EM-28, "Exploded View"](#).
3. Remove brake master cylinder assembly. Refer to [BR-28, "Exploded View"](#).  
**CAUTION:**
  - Depress the brake pedal several times to release the vacuum pressure from the brake booster. Then remove the master cylinder assembly.
  - Never depress the brake pedal after the master cylinder assembly is removed.
  - The piston of the master cylinder assembly is exposed. Never damage it when removing the master cylinder.
  - The piston may drop off when pulled out strongly. Never hold the piston. Hold the cylinder body when handling the master cylinder assembly.
4. Remove vacuum hose from brake booster. Refer to [BR-34, "Exploded View"](#).
5. Remove snap pin (1) and clevis pin (2) from inside vehicle.
6. Remove nuts on brake booster and brake pedal assembly. Refer to [BR-20, "Exploded View"](#).
7. Remove brake booster from dash panel in engine room side.  
**CAUTION:**  
**Never deform or bend the brake tubes.**
8. Remove the spacer from brake booster.

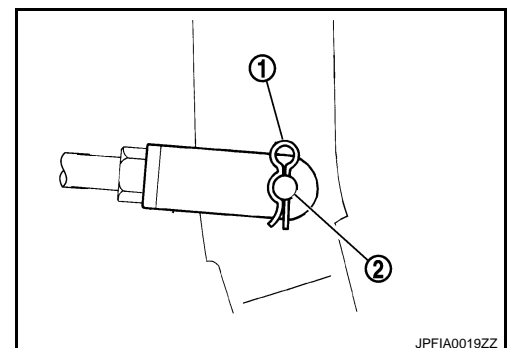

#### INSTALLATION

Note the following, and installation is the reverse order of removal.

- Be careful not to damage brake booster stud bolt threads. If brake booster is tilted during installation, the dash panel may damage the threads.

# BRAKE BOOSTER

## < REMOVAL AND INSTALLATION >

- Never deform or bend the brake tubes when installing the brake booster.
- Always use a new gasket between the brake booster and the spacer.
- Replace the clevis pin if it is damaged. Refer to [BR-21. "Inspection and Adjustment"](#).
- After installation, perform the air bleeding. Refer to [BR-13. "Bleeding Brake System"](#).

### CAUTION:

**Never reuse drained brake fluid.**

## Inspection and Adjustment

INFOID:000000005255302

### INSPECTION BEFORE REMOVAL

#### Air Tight

### CAUTION:

**Check the air tight condition when the master cylinder and the brake booster is installed.**

1. With a handy vacuum pump, apply vacuum pressure of  $-66.7$  kPa ( $-500$  mmHg,  $-19.70$  inHg) to the brake booster.
2. If the air tight condition cannot be maintained, perform the following operation.
  - a. Check the no dirt and dust are present on the brake booster and brake master cylinder mating faces. Clean it if necessary.
  - b. Check O-ring on the master cylinder. If anything is found, replace the O-ring.
  - c. Check the air tight condition again. If the condition still cannot be maintained, replace the brake booster.

### INSPECTION AFTER REMOVAL

#### Input Rod Length Inspection


1. Loosen the lock nut (1) and adjust the input rod (2) to the specified length (B).

#### Standard

**Input rod length (B)**

**: Refer to [BR-49. "Brake Booster"](#).**

2. Tighten the lock nut to the specified torque.

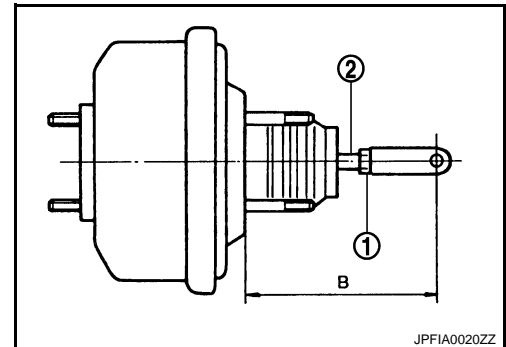


### INSPECTION AFTER INSTALLATION

#### Operation

Depress the brake pedal several times at 5-second intervals with the engine stopped. Start the engine with the brake pedal fully depressed. Check that the clearance between brake pedal and dash lower pane decreases.

### NOTE:

A slight impact with a small click may be felt on the pedal when the brake pedal is fully depressed. This is a normal phenomenon due to the brake system operation.

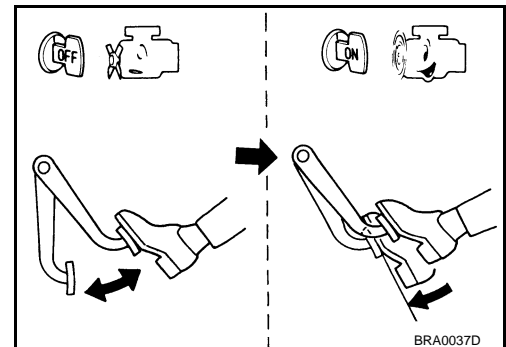


#### Air Tight



# BRAKE BOOSTER

## < REMOVAL AND INSTALLATION >


- Idle the engine for 1 minute to apply vacuum to the brake booster, and stop the engine. Then depress the brake pedal several times at 5-second intervals until the accumulated vacuum is released to atmospheric pressure. Check that the clearance between brake pedal and dash lower panel gradually increases (A → B → C) each time the brake pedal is depressed during this operation.

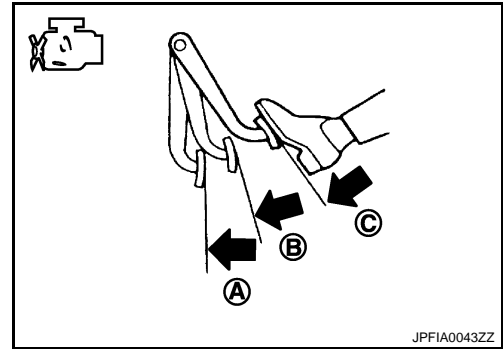

- Depress the brake pedal with the engine running. Then stop the engine while holding down the brake pedal. Check that the brake pedal stroke does not change after holding down the brake pedal for 30 seconds or more.

### NOTE:

A slight impact with a small click may be felt on the pedal when the brake pedal is fully depressed. This is a normal phenomenon due to the brake system operation.

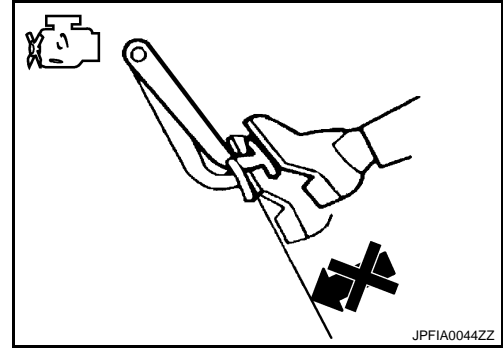

## ADJUSTMENT AFTER INSTALLATION

Perform the brake pedal adjustment after installing the brake pedal assembly. Refer to [BR-9, "Inspection and Adjustment"](#).


# VACUUM LINES

< REMOVAL AND INSTALLATION >

## VACUUM LINES

### Exploded View

INFOID:000000005255303

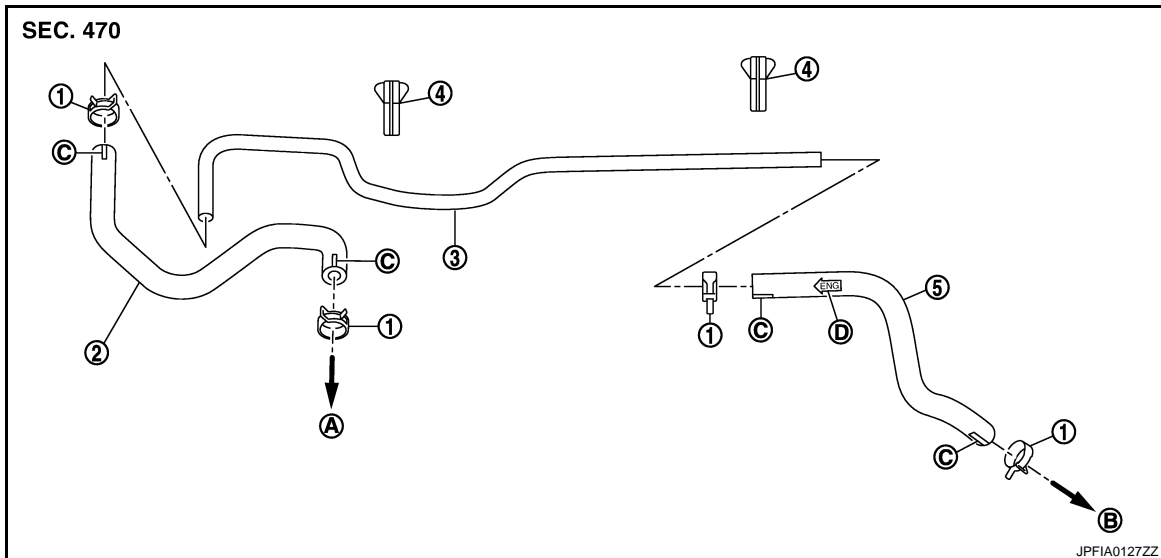

- |                                      |                                       |                |
|--------------------------------------|---------------------------------------|----------------|
| 1. Clamp                             | 2. Vacuum hose                        | 3. Vacuum tube |
| 4. Clip                              | 5. Vacuum hose (built in check valve) |                |
| A. To intake manifold                | B. To brake booster                   | C. Paint mark  |
| D. Stamp indicating engine direction |                                       |                |

### Removal and Installation

INFOID:000000005255304

#### REMOVAL

Remove the vacuum hose and tube.

#### INSTALLATION

Note the following, install the vacuum hose and tube.


- Face the marking side up when assembling of vacuum hose.
- Face the marking side vehicle front when assembling of vacuum hose (built in check valve).
- When installing vacuum hose, insert it until its tip reaches the back-end of area (A) or further as shown in the figure.

#### Standard

Length (A) : 24 mm (0.95 in) or more

#### CAUTION:

- Because vacuum hose contains a check valve, it must be installed in the correct position. Refer to the stamp to confirm correct installation. Brake booster will not operate normally if the hose is installed in the wrong direction.
- Never use lubricating oil during assembly.

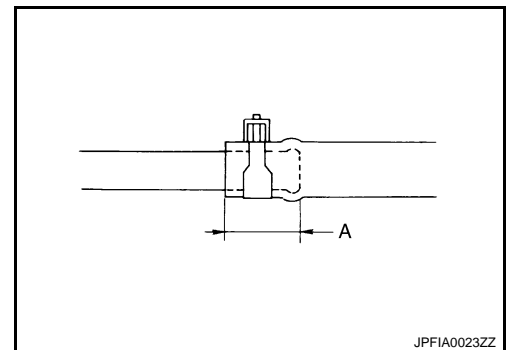

### Inspection

INFOID:000000005255305

#### INSPECTION AFTER REMOVAL

##### Appearance

Check for correct assembly, damage and deterioration.

##### Check Valve Airtightness

## VACUUM LINES

### < REMOVAL AND INSTALLATION >

- Use a handy vacuum pump (A) to check.


**When connected to the brake booster side (B):**

**Vacuum should decrease within 1.3 kPa (10 mm-Hg, 0.39 inHg) for 15 seconds under a vacuum of –66.7 kPa (–500 mmHg, –19.70 inHg).**

**When connected to the engine side (C):**

**Vacuum should not exist.**

- Replace vacuum hose assembly if vacuum hose and check valve are malfunctioning.

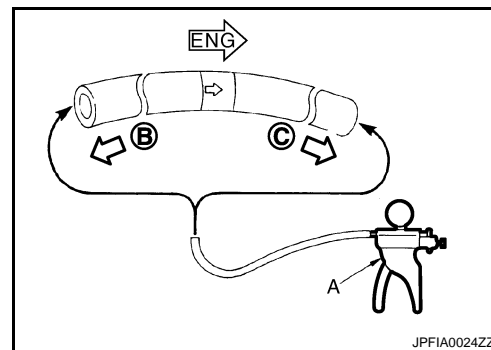

A

B

C

D

E

BR

G

H

I

J

K

L

M

N

O

P

# FRONT DISC BRAKE


< REMOVAL AND INSTALLATION >

## FRONT DISC BRAKE


### BRAKE PAD


#### BRAKE PAD : Exploded View


INFOID:000000005255306

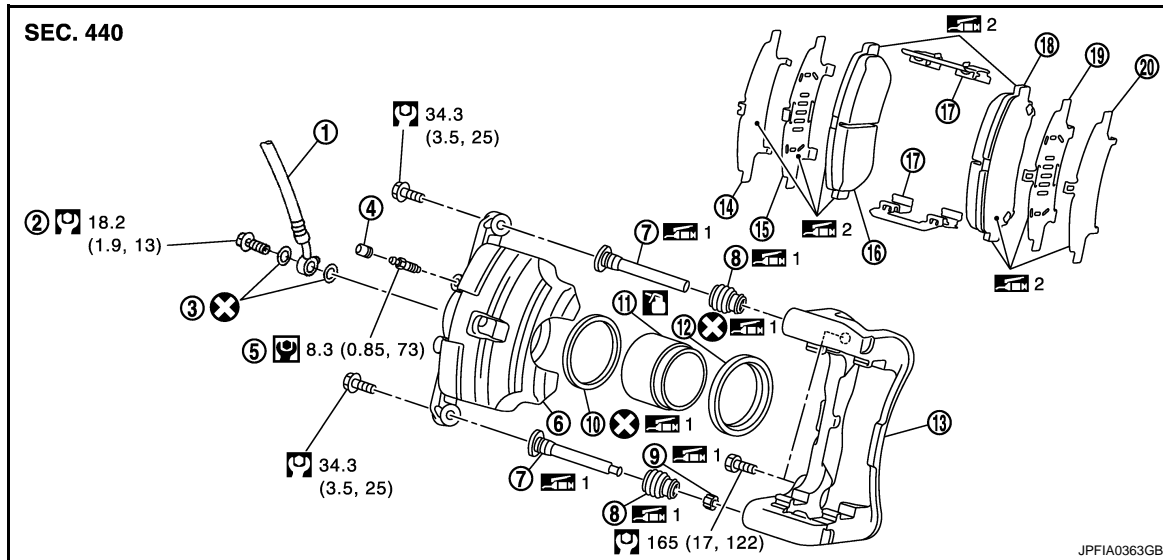

- |   |                      |                  |
|---|----------------------|------------------|
| 1. Brake hose                                     | 2. Union bolt        | 3. Copper washer |
| 4. Cap  | 5. Bleeder valve     | 6. Cylinder body |
| 7. Sliding pin                                    | 8. Sliding pin boot  | 9. Bushing       |
| 10. Piston seal                                   | 11. Piston           | 12. Piston boot  |
| 13. Torque member                                 | 14. Inner shim cover | 15. Inner shim   |
| 16. Inner pad (only RH side with pad wear sensor) | 17. Pad retainer     | 18. Outer pad    |
| 19. Outer shim                                    | 20. Outer shim cover |                  |

1: Apply rubber grease.

2: Apply copper based brake grease.

3: Apply brake fluid.

Refer to [GI-4. "Components"](#) for symbols not described on the above.

#### BRAKE PAD : Removal and Installation

INFOID:000000005255307

##### REMOVAL

##### **WARNING:**

Clean any dust from the brake caliper and brake pads with a vacuum dust collector. Never blow with compressed air.

##### **CAUTION:**

- Never depress the brake pedal while removing the brake pads because the piston may pop out.
- Never spill or splash brake fluid on the disc rotor.

1. Remove tires with power tool.
2. Remove lower sliding pin bolt.
3. Suspend the cylinder body with suitable wire so that the brake hose will not stretch. Then remove the brake pad from the torque member.

##### **CAUTION:**

- Never deform the pad retainer when removing the pad retainer from the torque member.
- Never damage the piston boot.
- Never drop the brake pads, shims, and the shim covers.

##### INSTALLATION

# FRONT DISC BRAKE

## < REMOVAL AND INSTALLATION >

### **WARNING:**

Clean any dust from the brake caliper and brake pads with a vacuum dust collector. Never blow with compressed air.

### **CAUTION:**

- Never depress the brake pedal while removing the brake pads or the cylinder body because the piston may pop out.
- Never spill or splash brake fluid on the disc rotor.

1. Install the pad retainer to the torque member if the pad retainers has been removed.

### **CAUTION:**

- Securely assemble the pad retainers so that it will not be lifted up from the torque member.
- Never deform the pad retainers.

2. Apply copper based brake grease to the mating faces between the pads, shims and shim covers, and install them to the brake pad.

### **CAUTION:**

Always replace the shims together with the shim covers when replacing the brake pad.

3. Install the cylinder body and brake pads to the torque member.

### **CAUTION:**

- Never damage the piston boot.
- When replacing a pad with new one, check a brake fluid level in the reservoir tank because brake fluid returns to master cylinder reservoir tank when pressing piston in.

### **NOTE:**

Use a disc brake piston tool to easily press piston.

4. Install the lower sliding pin bolt and tighten it to the specified torque.
5. Depress the brake pedal several times to check that no drag feel is present for the front disc brake.
6. Install tires.

## BRAKE PAD : Inspection and Adjustment

INFOID:000000005255308

### INSPECTION AFTER REMOVAL

Replace the shims and the shim covers if rust is excessively attached.

### ADJUSTMENT AFTER INSTALLATION

#### Brake Burnishing Procedure

Burnish contact surfaces between pads according to the following procedure after refinishing or replacing pads, or if a soft pedal occurs at very low mileage.

### **CAUTION:**

- Be careful of vehicle speed because the brake does not operate firmly/securely until pads and disc rotor are securely fitted.
- Only perform this procedure under safe road and traffic conditions. Use extreme caution.

1. Drive vehicle on straight, flat road.
2. Depress brake pedal with the power to stop vehicle within 3 to 5 seconds until the vehicle stops.
3. Drive without depressing brake for a few minutes to cool the brake.
4. Repeat steps 1 to 3 until pad and disc rotor are securely fitted.


## BRAKE CALIPER ASSEMBLY

# FRONT DISC BRAKE

< REMOVAL AND INSTALLATION >

## BRAKE CALIPER ASSEMBLY : Exploded View

INFOID:000000005255309

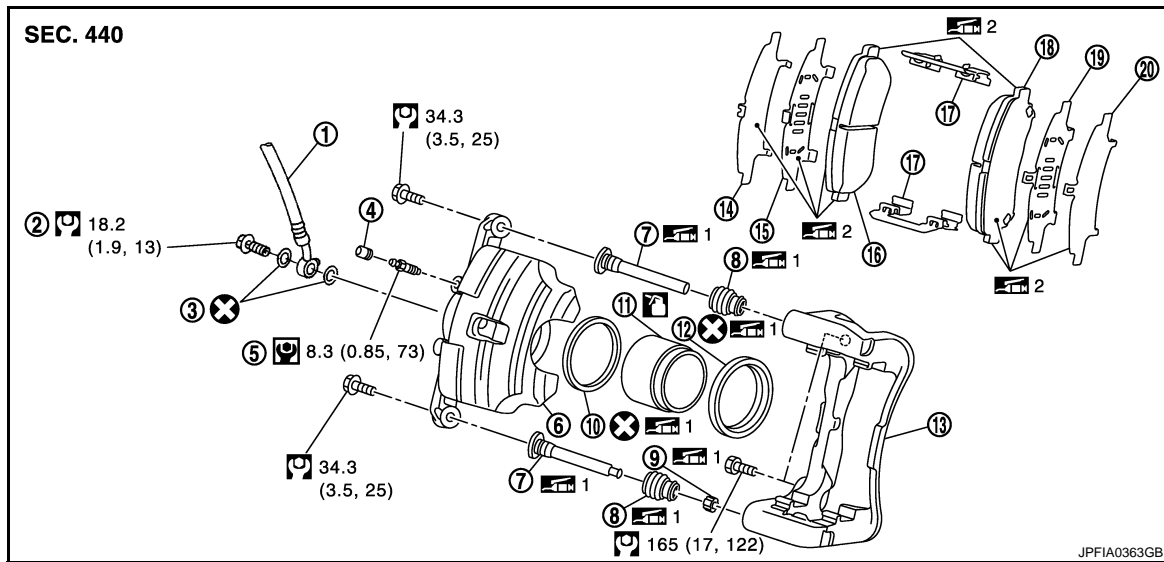

- |   |                      |                  |
|---|----------------------|------------------|
| 1. Brake hose                                     | 2. Union bolt        | 3. Copper washer |
| 4. Cap  | 5. Bleeder valve     | 6. Cylinder body |
| 7. Sliding pin                                    | 8. Sliding pin boot  | 9. Bushing       |
| 10. Piston seal                                   | 11. Piston           | 12. Piston boot  |
| 13. Torque member                                 | 14. Inner shim cover | 15. Inner shim   |
| 16. Inner pad (only RH side with pad wear sensor) | 17. Pad retainer     | 18. Outer pad    |
| 19. Outer shim                                    | 20. Outer shim cover |                  |

1: Apply rubber grease.

2: Apply copper based brake grease.

: Apply brake fluid.

Refer to [GI-4, "Components"](#) for symbols not described on the above.

## BRAKE CALIPER ASSEMBLY : Removal and Installation

INFOID:000000005255310

### REMOVAL

#### **WARNING:**

**Clean any dust from the brake caliper and brake pads with a vacuum dust collector. Never blow with compressed air.**

#### **CAUTION:**

**Never depress the brake pedal. Brake fluid may splash while removing the brake hose.**

1. Remove tires with power tool.
2. Fix the disc rotor using wheel nuts.
3. Drain brake fluid. Refer to [BR-12, "Draining"](#).

#### **CAUTION:**

**Never spill or splash brake fluid on the disc rotor.**

4. Remove union bolt and copper washers, and then disconnect brake hose from caliper assembly.

## FRONT DISC BRAKE

### < REMOVAL AND INSTALLATION >

5. Remove torque member mounting bolts, and remove brake caliper assembly.


**CAUTION:**

**Never drop brake pads and caliper assembly.**

6. Remove disc rotor.

**CAUTION:**

- Put matching marks on the wheel hub and bearing assembly and the disc rotor before removing the disc rotor.
- Never drop disc rotor.

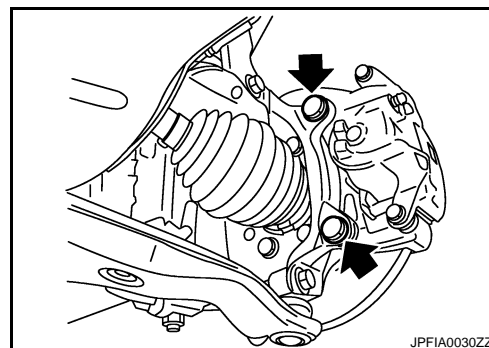

### INSTALLATION

**WARNING:**

**Clean any dust from the brake caliper and brake pads with a vacuum dust collector. Never blow with compressed air.**

**CAUTION:**

**Never depress the brake pedal. Brake fluid may splash while removing the brake hose.**

1. Install disc rotor.

**CAUTION:**

**Align the matching marks put during removal when reusing the disc rotor.**

2. Install the brake caliper assembly to the vehicle and tighten the torque member mounting bolts to the specified torque.

**CAUTION:**

**Never spill or splash any grease and moisture on the brake caliper assembly mounting face, threads, mounting bolts and washers. Wipe out any grease and moisture.**

3. Install brake hose and copper washers to brake caliper assembly, and tighten union bolts to the specified torque.

**CAUTION:**

**Never reuse copper washer.**

4. Refill with new brake fluid and perform the air bleeding. Refer to [BR-13. "Bleeding Brake System"](#).

**CAUTION:**

- Never reuse drained brake fluid.
- Never spill or splash brake fluid on the disc rotor.

5. Check that no drag feel is present for the front disc brake.
6. Install tires.

### BRAKE CALIPER ASSEMBLY : Disassembly and Assembly

INFOID:000000005255311

#### DISASSEMBLY

**NOTE:**

**Never remove the torque member, brake pads, shims, shim covers and pad retainers when disassembling and assembling the cylinder body.**

1. Remove the sliding pin bolts, and remove the cylinder body from the torque member.

**CAUTION:**

**Never drop brake pads, shims, shim covers and pad retainers from torque member.**

2. Remove sliding pins and sliding pin boots from torque member.
3. Remove bushing from sliding pin.


## FRONT DISC BRAKE

### < REMOVAL AND INSTALLATION >

4. Place a wooden block as shown in the figure, and blow air from union bolt mounting hole to remove piston and piston boot.

**CAUTION:**


**Never get fingers caught in the piston.**

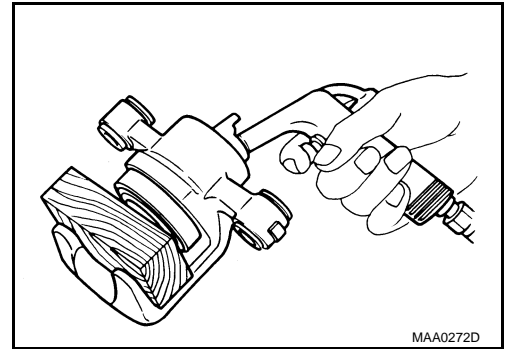

5. Remove piston seal from cylinder body using suitable tool.

**CAUTION:**

**Be careful not to damage a cylinder inner wall.**

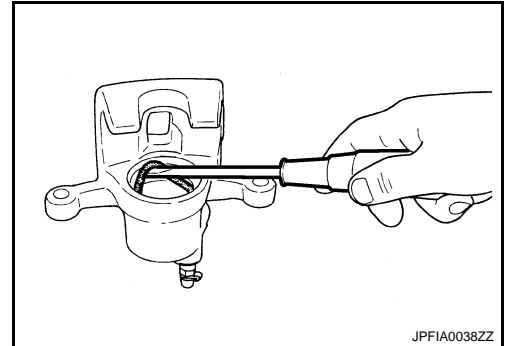


### ASSEMBLY

1. Apply rubber grease to piston seal (1), and install to cylinder body.

**CAUTION:**


**Never reuse piston seal.**

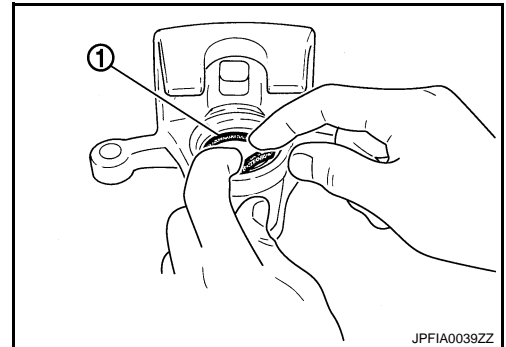

2. Apply rubber grease to piston boot (1). Cover the piston (2) end with piston boot, and then install cylinder side lip on piston boot securely into a groove on cylinder body.

**CAUTION:**

**Never reuse piston boot.**

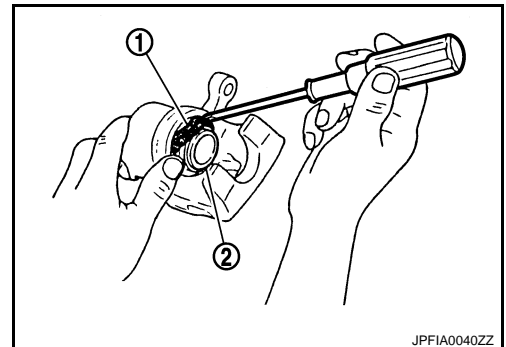



## FRONT DISC BRAKE


### < REMOVAL AND INSTALLATION >

3. Apply brake fluid to piston (1). Push piston into cylinder body by hand and push piston boot (2) piston-side lip into the piston groove.

**CAUTION:**

**Press the piston evenly and vary the pressing point to prevent cylinder inner wall from being rubbed.**

4. Apply rubber grease to bushing, install bushing to sliding pin.
5. Apply rubber grease to sliding pins and sliding pin boots, install sliding pins and sliding pin boots to torque member.
6. Install the cylinder body to the torque member and tighten the sliding pin bolts to the specified torque.

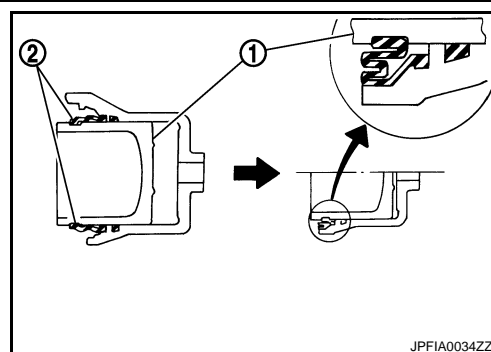

## BRAKE CALIPER ASSEMBLY : Inspection and Adjustment

INFOID:000000005255312

### INSPECTION AFTER DISASSEMBLY

#### Cylinder Body

Check the inner wall of the cylinder for rust, wear, cracks or damage. Replace the cylinder if any abnormal condition is detected.

**CAUTION:**

**Always clean with new brake fluid. Never clean with mineral oil such as gasoline and light oil.**

#### Torque Member

Check the torque member for rust, wear, cracks or damage. Replace the member if any abnormal condition is detected.

#### Piston

Check the surface of the piston for rust, wear, cracks or damage. Replace the piston if any abnormal condition is detected.

**CAUTION:**

**A piston sliding surface is plated. Never polish with sandpaper.**

#### Sliding Pin and Sliding Pin Boot

Check the sliding pins and sliding boots for rust, wear, cracks or damage. Replace the parts if any abnormal condition is detected.

### ADJUSTMENT AFTER INSTALLATION

#### Brake Burnishing Procedure

Burnish contact surfaces between disc rotors and pads according to the following procedure after refinishing or replacing disc rotor, or if a soft pedal occurs at very low mileage.

**CAUTION:**

- **Be careful of vehicle speed because the brake does not operate firmly/securely until pad and disc rotor are securely fitted.**
  - **Only perform this procedure under safe road and traffic conditions. Use extreme caution.**
1. Drive vehicle on straight, flat road.
  2. Depress brake pedal with the power to stop vehicle within 3 to 5 seconds until the vehicle stops.
  3. Drive without depressing brake for a few minutes to cool the brake.
  4. Repeat steps 1 to 3 until pad and disc rotor are securely fitted.

# REAR DISC BRAKE


< REMOVAL AND INSTALLATION >

## REAR DISC BRAKE

### BRAKE PAD

#### BRAKE PAD : Exploded View

INFOID:000000005255313

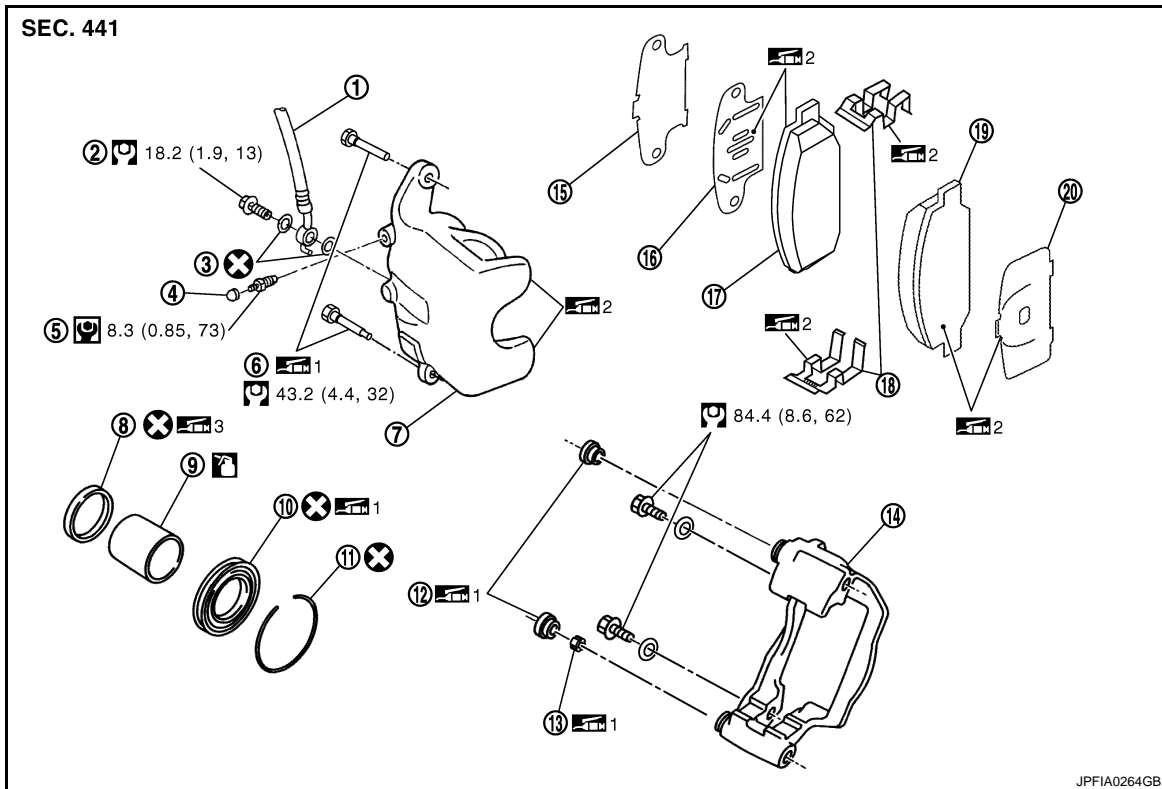

- |                  |                    |   |
|------------------|--------------------|---|
| 1. Brake hose    | 2. Union bolt      | 3. Copper washer                        |
| 4. Cap           | 5. Bleeder valve   | 6. Sliding pin bolt                     |
| 7. Cylinder body | 8. Piston seal     | 9. Piston                               |
| 10. Piston boot  | 11. Retaining ring | 12. Sliding pin boot                    |
| 13. Bushing      | 14. Torque member  | 15. Inner shim cover                    |
| 16. Inner shim   | 17. Inner pad      | 18. Pad wear sensor (RH inner pad only) |
| 19. Pad retainer | 20. Outer pad      | 21. Outer shim                          |

1: Apply rubber grease.

2: Apply copper based brake grease.

3: Apply polyglycol ether based lubricant.

: Apply brake fluid.

Refer to [GI-4, "Components"](#) for symbols not described on the above.

#### BRAKE PAD : Removal and Installation

INFOID:000000005255314

##### REMOVAL

##### **WARNING:**

Clean any dust from the brake caliper and brake pads with a vacuum dust collector. Never blow with compressed air.

##### **CAUTION:**

- Never depress the brake pedal while removing the brake pads or the cylinder body because the piston may pop out.
- Never spill or splash brake fluid on the disc rotor.

## REAR DISC BRAKE

### < REMOVAL AND INSTALLATION >

1. Remove tires with power tool.
2. Remove the lower sliding pin bolt.
3. Suspend the cylinder body with suitable wire so that the brake hose will not stretch. Remove the brake pads from the torque member.

#### CAUTION:

- Never deform the pad retainers if removing the pad retainers.
- Never damage the piston boot.
- Never drop the brake pad, shims, and the shim cover.

### INSTALLATION

#### WARNING:

Clean any dust from the brake caliper and brake pads with a vacuum dust collector. Never blow with compressed air.

#### CAUTION:

- Never depress the brake pedal while removing the brake pads or the cylinder body because the piston may pop out.
- Never spill or splash brake fluid on the disc rotor.

1. Install the pad retainers to the torque member if the pad retainers has been removed.

#### CAUTION:

- Securely assemble the pad retainers not to be lifted up from the torque member.
- Never deform the pad retainers.

2. Apply copper based brake grease to the mating faces between the brake pads, the shims and pawls part of cylinder body, and install them to the brake pad.

#### CAUTION:

Always replace the shims together with the shim cover when replacing the brake pad.

3. Install cylinder body and brake pads to torque member.

#### CAUTION:

- Never damage the piston boot.
- When replacing pads with new one, check a brake fluid level in the reservoir tank because brake fluid returns to master cylinder reservoir tank when pressing piston in.

#### NOTE:

Use a disc brake piston tool to easily press piston.

4. Install the lower sliding pin bolt and tighten it to the specified torque.
5. Depress the brake pedal several times to check that no drag feel is present for the rear disc brake.
6. Install tires.

### BRAKE PAD : Inspection and Adjustment

INFOID:000000005255315

### INSPECTION AFTER REMOVAL

Replace the shims and the shim cover if rust is excessively attached.

### ADJUSTMENT AFTER INSTALLATION

#### Brake Burnishing Procedure

Burnish contact surfaces between pads according to following procedure after refinishing or replacing pads, or if a soft pedal occurs at very low mileage.

#### CAUTION:

- Be careful of vehicle speed because the brake does not operate firmly/securely until pad and disc rotor are securely fitted.
- Only perform this procedure under safe road and traffic conditions. Use extreme caution.

1. Drive vehicle on straight, flat road.
2. Depress brake pedal with the power to stop vehicle within 3 to 5 seconds until the vehicle stops.
3. Drive without depressing brake for a few minutes to cool the brake.
4. Repeat steps 1 to 3 until pad and disc rotor are securely fitted.


### BRAKE CALIPER ASSEMBLY

# REAR DISC BRAKE

< REMOVAL AND INSTALLATION >

## BRAKE CALIPER ASSEMBLY : Exploded View

INFOID:000000005255316

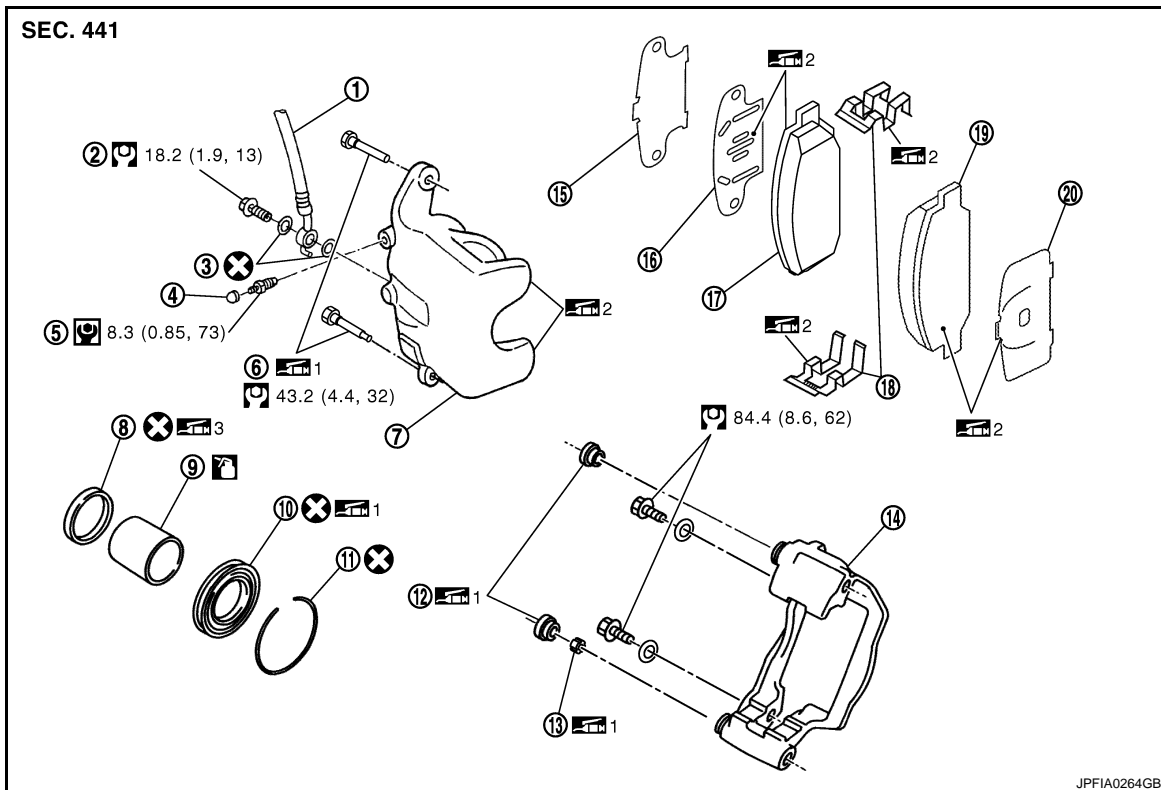

- |                  |                    |   |
|------------------|--------------------|---|
| 1. Brake hose    | 2. Union bolt      | 3. Copper washer                        |
| 4. Cap           | 5. Bleeder valve   | 6. Sliding pin bolt                     |
| 7. Cylinder body | 8. Piston seal     | 9. Piston                               |
| 10. Piston boot  | 11. Retaining ring | 12. Sliding pin boot                    |
| 13. Bushing      | 14. Torque member  | 15. Inner shim cover                    |
| 16. Inner shim   | 17. Inner pad      | 18. Pad wear sensor (RH inner pad only) |
| 19. Pad retainer | 20. Outer pad      | 21. Outer shim                          |

1: Apply rubber grease.

2: Apply copper based brake grease.

3: Apply polyglycol ether based lubricant.

4: Apply brake fluid.

Refer to [GI-4. "Components"](#) for symbols not described on the above.

## BRAKE CALIPER ASSEMBLY : Removal and Installation

INFOID:000000005255317

### REMOVAL

#### **WARNING:**

Clean any dust from the brake caliper and brake pads with a vacuum dust collector. Never blow with compressed air.

#### **CAUTION:**

Never depress the brake pedal. Brake fluid may splash while removing the brake hose.

1. Remove tires with power tool.
2. Fix the disc rotor using wheel nuts.
3. Drain brake fluid. Refer to [BR-12. "Draining"](#).

#### **CAUTION:**

Never spill or splash brake fluid on the disc rotor.

## REAR DISC BRAKE

### < REMOVAL AND INSTALLATION >

4. Remove union bolt (1) and copper washers then disconnect brake hose (2) from caliper assembly.
5. Remove torque member mounting bolts, and remove brake caliper assembly.


**CAUTION:**

**Never drop brake pads and caliper assembly.**

6. Remove disc rotor.

**CAUTION:**

- Put matching marks on the wheel hub and bearing assembly and the disc rotor before removing the disc rotor.
- Never drop disc rotor.

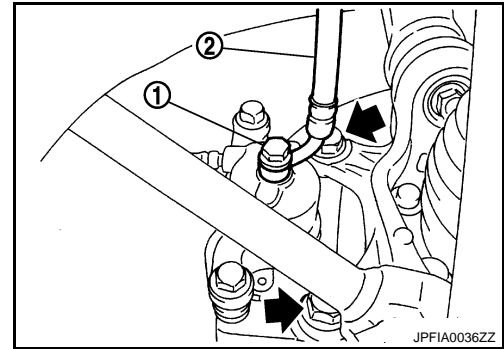

### INSTALLATION

**WARNING:**

Clean any dust from the brake caliper and brake pads with a vacuum dust collector. Never blow with compressed air.

**CAUTION:**

Never depress the brake pedal. Brake fluid may splash while removing the brake hose.

1. Install disc rotor.

**CAUTION:**

**Align the matching marks put during removal when reusing the disc rotor.**

2. Install the brake caliper assembly to the vehicle and tighten the torque member mounting bolts to the specified torque.

**CAUTION:**

**Never spill or splash any grease and moisture on the brake caliper assembly mounting face, threads, mounting bolts, and washers. Wipe out any grease and moisture.**

3. Install brake hose and copper washers to brake caliper assembly, and tighten union bolts to the specified torque.

**CAUTION:**

**Never reuse copper washer.**

4. Refill with new brake fluid and perform the air bleeding. Refer to [BR-13, "Bleeding Brake System"](#).

**CAUTION:**

- Never reuse drained brake fluid.
- Never spill or splash brake fluid on the disc rotor.

5. Check that no drag feel is present for the rear disc brake.

6. Install tires.

### BRAKE CALIPER ASSEMBLY : Disassembly and Assembly

INFOID:000000005255318

#### DISASSEMBLY

**NOTE:**

Never remove the torque member, brake pads, shims, shim cover and pad retainers when disassembling and assembling the cylinder body.

1. Remove the sliding pin bolts and remove the cylinder body from the torque member.

**CAUTION:**


**Never drop pads, shims, shim cover and pad retainers from torque member.**

2. Remove sliding pin boots from torque member.
3. Remove bushing from sliding pin bolt.

## REAR DISC BRAKE

### < REMOVAL AND INSTALLATION >


4. Remove retaining ring (1) from cylinder body using suitable tool.

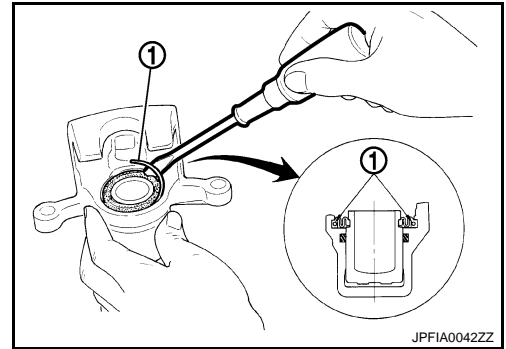

5. Place a wooden block as shown in the figure, and blow air from union bolt mounting hole to remove piston and piston boot.

**CAUTION:**


**Never get fingers caught in the piston.**

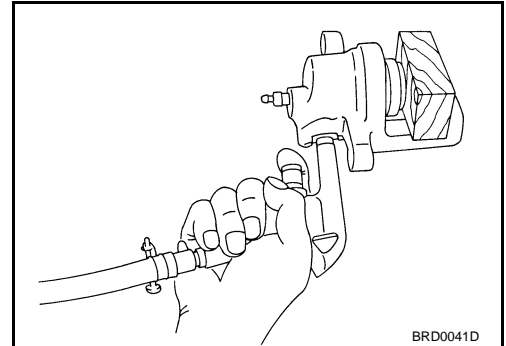

6. Remove piston seal from cylinder body using suitable tool.

**CAUTION:**

**Be careful not to damage a cylinder inner wall.**

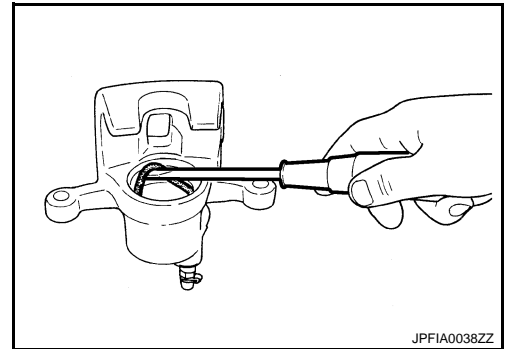


### ASSEMBLY

1. Apply polyglycol ether based lubricant to piston seal (1), and install to cylinder body.

**CAUTION:**

**Never reuse piston seal.**

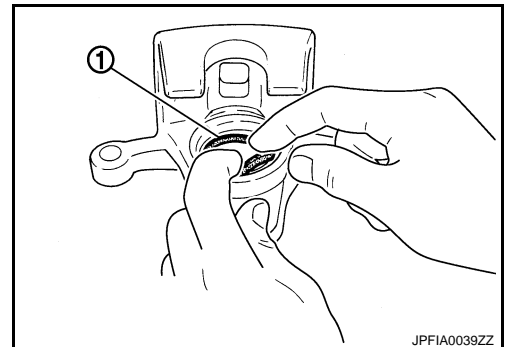


## REAR DISC BRAKE

### < REMOVAL AND INSTALLATION >

2. Apply rubber grease to piston boot (1). Cover the piston (2) end with the piston boot, and then install cylinder side lip on the piston boot securely into the groove on cylinder body.

**CAUTION:**


**Never reuse piston boot.**

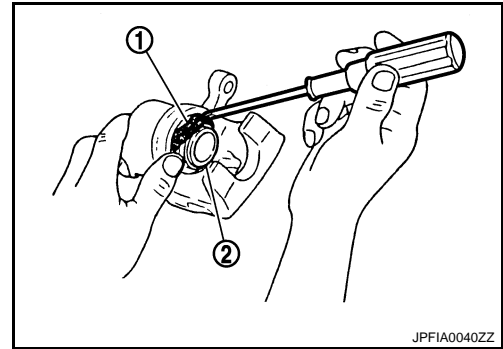

3. Apply brake fluid to piston (1). Push piston into cylinder body by hand and push piston boot (2) piston side lip into the piston groove.

**CAUTION:**

**Press the piston evenly and vary the pressing point to prevent cylinder inner wall from being rubbed.**

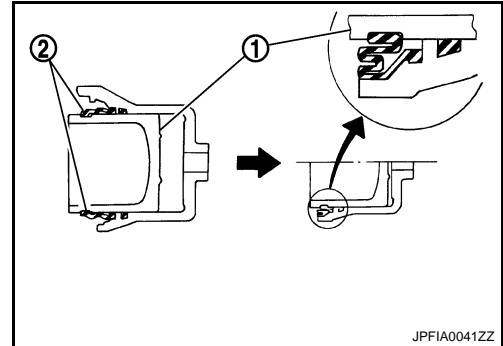


4. Secure piston boot with retaining ring (1).

**CAUTION:**

- Make sure that piston boot is securely engaged in the groove on cylinder body.
- Never reuse retaining ring.

5. Apply rubber grease to bushing, install bushing to sliding pin bolt.
6. Apply rubber grease to the sliding pin bolts and the sliding pin boots, install sliding pin boot to torque member.
7. Install the cylinder body to the torque member and tighten the sliding pin bolts to the specified torque.

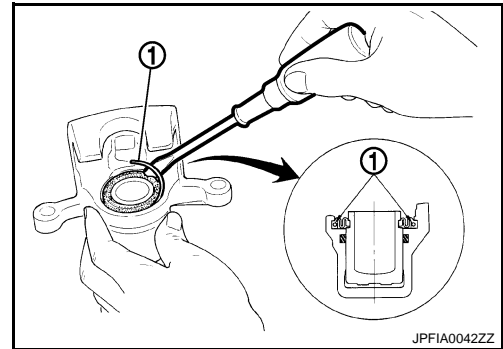

### BRAKE CALIPER ASSEMBLY : Inspection and Adjustment

INFOID:000000005255319

#### INSPECTION AFTER DISASSEMBLY

##### Cylinder Body

Check the inner wall of the cylinder for rust, wear, cracks or damage. Replace the cylinder if any abnormal condition is detected.

**CAUTION:**

**Always clean with new brake fluid. Never clean with mineral oil such as gasoline and light oil.**

##### Torque Member

Check the torque member for rust, wear, cracks or damage. Replace the member if any abnormal condition is detected.

##### Piston

Check the piston for rust, wear, cracks or damage. Replace the piston if any abnormal condition is detected.

**CAUTION:**

**A piston sliding surface is plated. Never polish with sandpaper.**

##### Sliding Pin Bolt and Sliding Pin Boot

Check the sliding pin bolts and sliding pin boots for rust, wear, cracks or damage. Replace the parts if any abnormal condition is detected.

#### ADJUSTMENT AFTER INSTALLATION

##### Brake Burnishing Procedure

## REAR DISC BRAKE

### < REMOVAL AND INSTALLATION >

---

Burnish contact surfaces between disc rotors and pads according to the following procedure after refinishing or replacing disc rotor, or if a soft pedal occurs at very low mileage.

**CAUTION:**

- **Be careful of vehicle speed because the brake does not operate firmly/securely until pad and disc rotor are securely fitted.**
  - **Only perform this procedure under safe road and traffic conditions. Use extreme caution.**
1. Drive vehicle on straight, flat road.
  2. Depress brake pedal with the power to stop vehicle within 3 to 5 seconds until the vehicle stops.
  3. Drive without depressing brake for a few minutes to cool the brake.
  4. Repeat steps 1 to 3 until pad and disc rotor are securely fitted.



## SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### General Specifications

INFOID:0000000005255320

Unit: mm (in)

Front brake	Cylinder bore diameter	60.33 (2.375)
	Pad length × width × thickness	123.6 × 47.5 × 11.0 (4.87 × 1.870 × 0.433)
	Rotor outer diameter × thickness	296 × 26.0 (11.65 × 1.024)
Rear brake	Cylinder bore diameter	34.93 (1.375)
	Pad length × width × thickness	83.0 × 31.9 × 8.5 (3.268 × 1.256 × 0.335)
	Rotor outer diameter × thickness	292 × 16.0 (11.50 × 0.630)
Master cylinder	Cylinder bore diameter	23.8 (15/16)
Control valve	Valve type	Electric brake force distribution
Brake booster	Diaphragm diameter	278 (10.94)
Recommended brake fluid		DOT 3

#### Brake Pedal

INFOID:0000000005255321

Unit: mm (in)

Item	Standard
Brake pedal height	183.7 – 193.7 (7.23 – 7.63)
Clearance between stopper rubber and stop lamp switch and ASCD brake switch threaded end	0.10 – 1.96 (0.0039 – 0.0772)
Brake pedal play	3.0 – 11.0 (0.118 – 0.433)
Depressed brake pedal height [Depressing 490 N (50 kg, 110 lb) while turning the engine ON]	65 (2.56) or more

#### Brake Booster

INFOID:0000000005255322

Unit: mm (in)

Item	Standard
Input rod length	153.2 – 154.2 (6.03 – 6.07)

#### Front Disc Brake

INFOID:0000000005255323

Unit: mm (in)

Item		Limit
Brake pad	Wear limit thickness	2.0 (0.079)
	Wear limit thickness	24.0 (0.945)
Disc rotor	Thickness variation (measured at 8 positions)	0.020 (0.0008)
	Runout limit (with it attached to the vehicle)	0.035 (0.0014)

#### Rear Disc Brake

INFOID:0000000005255324

Unit: mm (in)

Item		Limit
Brake pad	Wear limit thickness	1.5 (0.059)
	Wear limit thickness	14.0 (0.551)
Disc rotor	Thickness variation (measured at 8 positions)	0.020 (0.0008)
	Runout limit (with it attached to the vehicle)	0.070 (0.0028)