

# STC

## SECTION

### STEERING CONTROL SYSTEM

## CONTENTS

|   |    |  |
|---|----|--|
| <b>BASIC INSPECTION</b> .....                   | 3  |  |
| <b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....      | 3  |  |
| Work Flow .....                                 | 3  |  |
| <b>SYSTEM DESCRIPTION</b> .....                 | 4  |  |
| <b>EPS SYSTEM</b> .....                         | 4  |  |
| System Diagram .....                            | 4  |  |
| System Description .....                        | 4  |  |
| Component Parts Location .....                  | 5  |  |
| Component Description .....                     | 5  |  |
| <b>DIAGNOSIS SYSTEM (EPS CONTROL UNIT)</b>      |    |  |
| CONSULT Function .....                          | 7  |  |
| <b>DTC/CIRCUIT DIAGNOSIS</b> .....              | 8  |  |
| <b>C1601 BATTERY POWER SUPPLY</b> .....         | 8  |  |
| Description .....                               | 8  |  |
| DTC Logic .....                                 | 8  |  |
| Diagnosis Procedure .....                       | 8  |  |
| Special Repair Requirement .....                | 10 |  |
| <b>C1604 TORQUE SENSOR</b> .....                | 11 |  |
| Description .....                               | 11 |  |
| DTC Logic .....                                 | 11 |  |
| Diagnosis Procedure .....                       | 11 |  |
| Special Repair Requirement .....                | 11 |  |
| <b>C1606 EPS MOTOR</b> .....                    | 12 |  |
| Description .....                               | 12 |  |
| DTC Logic .....                                 | 12 |  |
| Diagnosis Procedure .....                       | 12 |  |
| Special Repair Requirement .....                | 12 |  |
| <b>C1607 EEPROM</b> .....                       | 13 |  |
| Description .....                               | 13 |  |
| DTC Logic .....                                 | 13 |  |
| Diagnosis Procedure .....                       | 13 |  |
| Special Repair Requirement .....                | 13 |  |
| <b>C1608 CONTROL UNIT</b> .....                 | 14 |  |
| Description .....                               | 14 |  |
| DTC Logic .....                                 | 14 |  |
| Diagnosis Procedure .....                       | 14 |  |
| Special Repair Requirement .....                | 15 |  |
| <b>U1200 VEHICLE SPEED SIGNAL (ABS)</b> .....   | 16 |  |
| Description .....                               | 16 |  |
| DTC Logic .....                                 | 16 |  |
| Diagnosis Procedure .....                       | 16 |  |
| Special Repair Requirement .....                | 17 |  |
| <b>U14FF VEHICLE SPEED SIGNAL (METER)</b> ...   | 18 |  |
| Description .....                               | 18 |  |
| DTC Logic .....                                 | 18 |  |
| Diagnosis Procedure .....                       | 18 |  |
| Special Repair Requirement .....                | 19 |  |
| <b>U1000 CAN COMM CIRCUIT</b> .....             | 20 |  |
| Description .....                               | 20 |  |
| DTC Logic .....                                 | 20 |  |
| Diagnosis Procedure .....                       | 20 |  |
| Special Repair Requirement .....                | 20 |  |
| <b>ECU DIAGNOSIS INFORMATION</b> .....          | 22 |  |
| <b>EPS CONTROL UNIT</b> .....                   | 22 |  |
| Reference Value .....                           | 22 |  |
| Wiring Diagram .....                            | 24 |  |
| Fail-Safe .....                                 | 24 |  |
| DTC Index .....                                 | 25 |  |
| <b>SYMPTOM DIAGNOSIS</b> .....                  | 26 |  |
| <b>EPS WARNING LAMP DOES NOT TURN ON</b> ...    | 26 |  |
| Description .....                               | 26 |  |
| Diagnosis Procedure .....                       | 26 |  |
| <b>EPS WARNING LAMP DOES NOT TURN OFF</b> ..... | 27 |  |
| Description .....                               | 27 |  |
| Diagnosis Procedure .....                       | 27 |  |

---

|   |           |   |           |
|---|-----------|---|-----------|
| <b>STEERING WHEEL TURNING FORCE IS<br/>HEAVY OR LIGHT .....</b>                               | <b>29</b> | FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" ..... | 32        |
| Diagnosis Procedure .....   | 29        | FOR USA AND CANADA : Service Notice and Precautions for EPS System .....  | 32        |
| <b>UNBALANCE STEERING WHEEL TURNING<br/>FORCE AND RETURN BETWEEN RIGHT<br/>AND LEFT .....</b> | <b>30</b> | <b>FOR MEXICO .....</b>   | <b>33</b> |
| Diagnosis Procedure .....   | 30        | FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....         | 33        |
| <b>UNBALANCE STEERING WHEEL TURNING<br/>FORCE (TORQUE VARIATION) .....</b>                    | <b>31</b> | FOR MEXICO : Service Notice and Precautions for EPS System .....  | 33        |
| Diagnosis Procedure .....   | 31        |   |           |
| <b>PRECAUTION .....</b>   | <b>32</b> | <b>REMOVAL AND INSTALLATION .....</b>   | <b>35</b> |
| <b>PRECAUTIONS .....</b>  | <b>32</b> | <b>EPS CONTROL UNIT .....</b>   | <b>35</b> |
| <b>FOR USA AND CANADA .....</b>   | <b>32</b> | Exploded View .....   | 35        |
|   |           | Removal and Installation .....  | 35        |

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

#### Work Flow

INFOID:000000007351187

#### DETAILED FLOW

#### 1.COLLECT THE INFORMATION FROM THE CUSTOMER

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred) using the diagnosis worksheet.

>> GO TO 2.

#### 2.PERFORM THE SELF-DIAGNOSIS

Check the DTC display with the self-diagnosis function. Refer to [STC-7, "CONSULT Function"](#).

Is there any DTC displayed?

YES >> Record or print DTC and freeze frame data (FFD). GO TO 3.

NO >> GO TO 4.

#### 3.PERFORM THE SYSTEM DIAGNOSIS

Perform the diagnosis applicable to the displayed DTC. Refer to [STC-25, "DTC Index"](#).

>> GO TO 6.

#### 4.CHECK THE WARNING LAMP FOR ILLUMINATION

Check that the warning lamp illuminate.

Is ON/OFF timing normal?

YES >> GO TO 5.

NO >> GO TO 2.

#### 5.PERFORM THE DIAGNOSIS BY SYMPTOM

Perform the diagnosis applicable to the symptom.

>> GO TO 6.

#### 6.REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 7.

#### 7.FINAL CHECK

Perform the self-diagnosis again, and check that the malfunction is repaired completely. After checking, erase the self-diagnosis memory. Refer to [STC-7, "CONSULT Function"](#).

Is no other DTC present and the repair completed?

YES >> INSPECTION END

NO >> GO TO 3.

A

B

C

D

E

F

STC

H

I

J

K

L

M

N

O

P

# EPS SYSTEM


< SYSTEM DESCRIPTION >

## SYSTEM DESCRIPTION

### EPS SYSTEM

#### System Diagram

INFOID:000000007351188

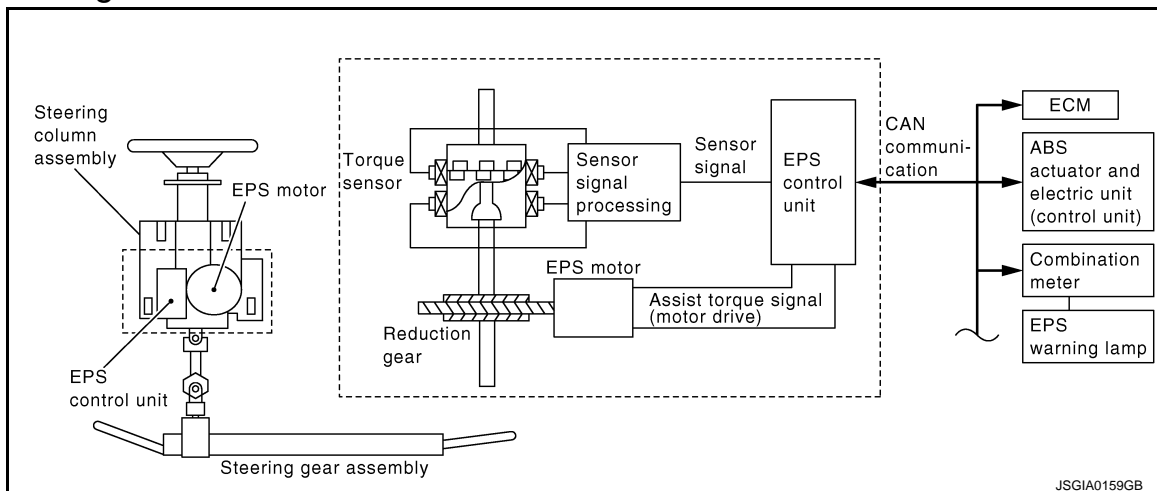

#### System Description

INFOID:000000007351189


- EPS control unit performs an arithmetical operation on data, such as steering wheel turning force (sensor signal) from the torque sensor, vehicle speed signal, etc. Then it generates an optimum assist torque signal to the EPS motor according to the driving condition.
- EPS control unit decreases the output signal to EPS motor while extremely using the power steering function (e.g., full steering) consecutively for protecting EPS motor and EPS control unit (Overload protection control). While activating overload protection control, the assist torque gradually decreases, and the steering wheel turning force becomes heavy. The normal assist torque reactivates by no steering.
- In case of an error in the electrical system, the fail-safe function stops output signals to the EPS motor. Then the previous state is changed to the manual steering state.
- Self-diagnosis can be done with CONSULT.
- Extensive steering at low speed will cause the ECU and MOTOR to heat up, once temperature reaches critical point ECU will reduce current to reduce heat up. System will recover as temperature lowers (reduced or no assistance).

EPS SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

INFOID:000000007351190

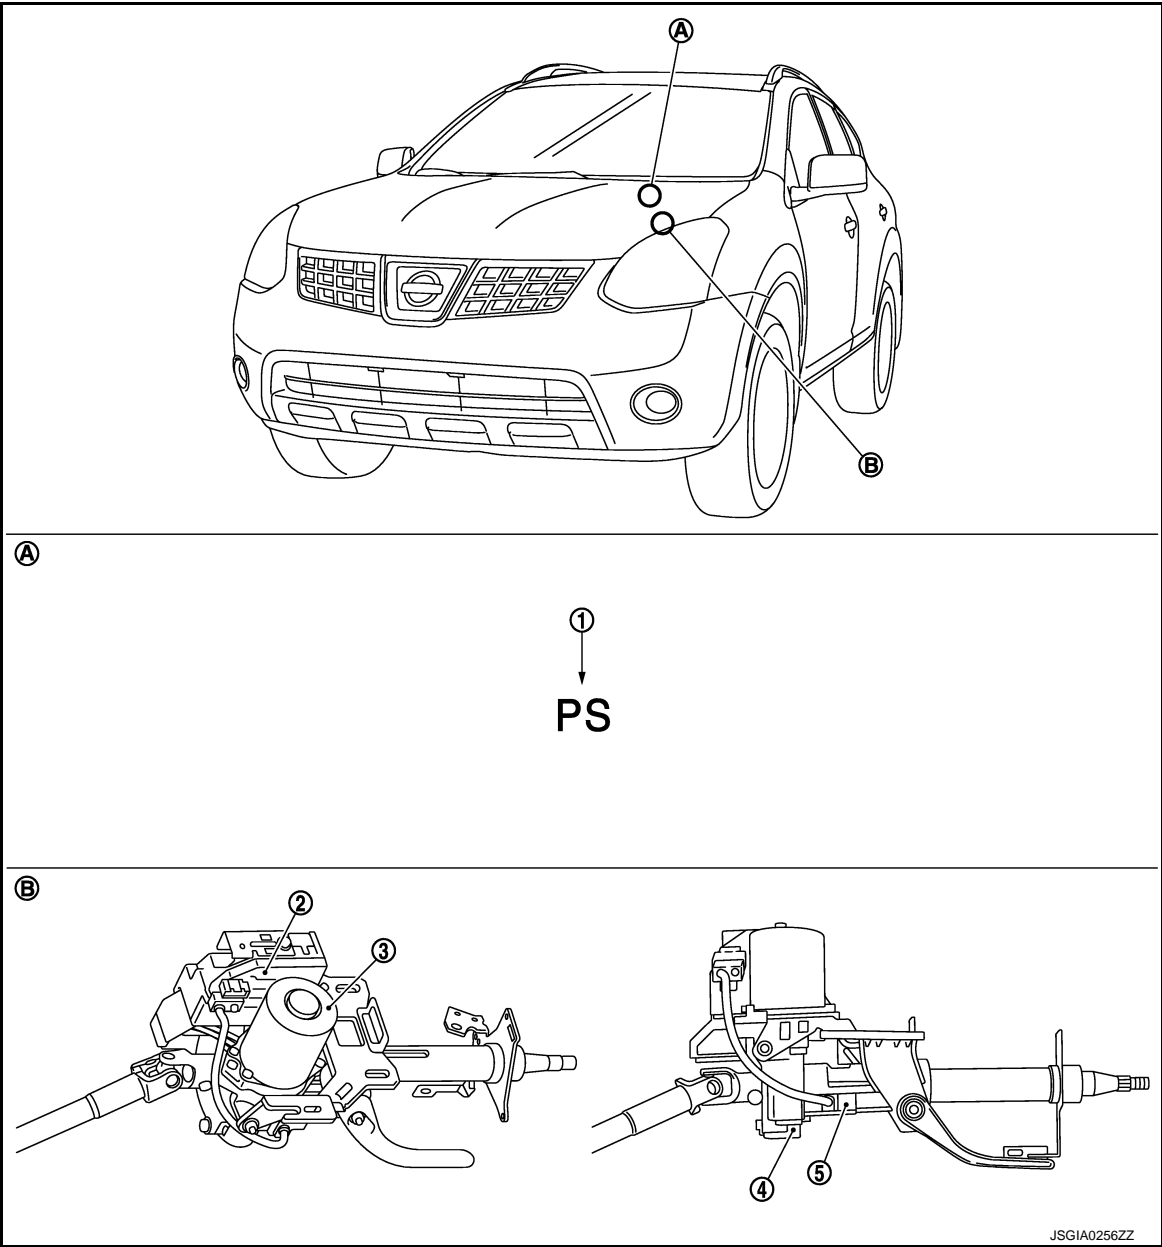

- 1. EPS warning lamp
- 2. EPS control unit
- 3. EPS motor
- 4. Reduction gear
- 5. Torque sensor
- A. Combination meter
- B. Steering column assembly

Component Description

INFOID:000000007351191

| Components parts | Reference                             |
|------------------|---------------------------------------|
| EPS control unit | <a href="#">STC-14, "Description"</a> |
| EPS motor        | <a href="#">STC-12, "Description"</a> |
| Torque sensor    | <a href="#">STC-11, "Description"</a> |

## EPS SYSTEM

### < SYSTEM DESCRIPTION >

| Components parts | Reference  |
|------------------|--|
| Reduction gear   | Reduction gear increases the assist torque provided from EPS motor with worm gears, and outputs to the column shaft. |
| EPS warning lamp | Turn on when a malfunction occurs in the EPS system, and tells the driver the malfunction.                           |

# DIAGNOSIS SYSTEM (EPS CONTROL UNIT)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (EPS CONTROL UNIT)

### CONSULT Function

INFOID:000000007351192

#### FUNCTION

CONSULT can display each diagnostic item using the diagnostic test modes shown below.

| Diagnostic test mode    | Function  |
|-------------------------|---|
| ECU identification      | Steering column assembly number can be read.            |
| Self-diagnostic results | Self-diagnostic results can be read and erased quickly. |
| Data monitor            | Input/Output data in the EPS control unit can be read.  |

#### SELF-DIAG RESULTS MODE

Display Item List

Refer to [STC-25. "DTC Index"](#).

#### DATA MONITOR MODE

Display Item List

| Monitor item (Unit)                  | Remarks   |
|--------------------------------------|---|
| BATTERY VOLT (V)                     | Displays the power supply voltage for EPS control unit.   |
| TORQUE SENSOR (Nm)                   | Displays steering wheel turning force detected by torque sensor.  |
| MOTOR SIG (A)                        | Displays the current commanded value to EPS motor.  |
| MOTOR CURRENT (A)                    | Displays the current value consumed by EPS motor.   |
| ASSIST TORQUE (Nm)                   | Displays assist torque being output by the electric power steering.   |
| C/U TEMP (°C) or (°F)                | Displays the temperature of the EPS control unit.   |
| ASSIST LEVEL (%)                     | Normally displays 100%. In case of an excessive stationary steering, the assist curvature gradually falls. However, it return to 100% when left standing. |
| VEHICLE SPEED (km/h) or (MPH)        | Vehicle speed is displayed from vehicle speed signal via CAN communication.   |
| WARNING LAMP (On/Off)                | EPS warning lamp control status is displayed.   |
| ENGINE STATUS (STOP/RUN/STALL/CRANK) | Engine speed is displayed from engine status signal via CAN communication.  |
| MOTOR TEMP (°C) or (°F)              | Displays the temperature of EPS motor.  |
| VHCL SPD CALC (km/h) or (MPH)        | Displays vehicle speeds used for controlling EPS.   |

# C1601 BATTERY POWER SUPPLY

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### C1601 BATTERY POWER SUPPLY

#### Description

INFOID:000000007351193

Power is supplied from the battery to EPS control unit.

#### DTC Logic

INFOID:000000007351194

#### DTC DETECTION LOGIC

| DTC   | Display item | Malfunction detected condition                                  | Possible cause  |
|-------|--------------|---|---|
| C1601 | BATTERY VOLT | When the EPS control unit power supply malfunction is detected. | <ul style="list-style-type: none"><li>• Harness or connector</li><li>• EPS control unit</li></ul> |

#### DTC CONFIRMATION PROCEDURE

##### 1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

##### 2.CHECK SELF-DIAGNOSIS RESULTS

###### With CONSULT

Perform self-diagnosis for "EPS" with CONSULT.

|                        |
|------------------------|
| Self-diagnosis results |
| BATTERY VOLT           |

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [STC-8, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

#### Diagnosis Procedure

INFOID:000000007351195

##### 1.CHECK CONNECTOR

###### With CONSULT

1. Turn ignition switch OFF.
2. Disconnect EPS control unit harness connector.
3. Check terminal for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminal.
4. Reconnect connector and then perform self-diagnosis for "EPS" with CONSULT.

Is any item indicated on the self-diagnosis display?

- YES >> GO TO 2.  
NO >> Poor connection of connector terminal. Repair or replace connector.

##### 2.CHECK EPS CONTROL UNIT POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect EPS control unit harness connector.
3. Turn ignition switch ON. (Do not start engine.)
4. Check voltage between EPS control unit harness connector terminals and ground.



# C1601 BATTERY POWER SUPPLY

## < DTC/CIRCUIT DIAGNOSIS >

| EPS control unit |          | —      | Voltage         |
|------------------|----------|--------|-----------------|
| Connector        | Terminal |        |                 |
| M38              | 1        | Ground | Battery voltage |
| M37              | 3        |        |                 |

- Turn ignition switch OFF.
- Check voltage between EPS control unit harness connector terminals and ground.

| EPS control unit |          | —      | Voltage         |
|------------------|----------|--------|-----------------|
| Connector        | Terminal |        |                 |
| M38              | 1        | Ground | Battery voltage |
| M37              | 3        |        | Approx. 0 V     |

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Repair or replace malfunctioning components.

### 3.CHECK EPS CONTROL UNIT GROUND CIRCUIT

- Check continuity between EPS control unit harness connector terminal and ground.

| EPS control unit |          | —      | Continuity |
|------------------|----------|--------|------------|
| Connector        | Terminal |        |            |
| M38              | 2        | Ground | Existed    |

- Connect EPS control unit harness connector.

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Repair open circuit or short to ground or short to power in harness or connectors.

### 4.CHECK EPS CONTROL UNIT

#### With CONSULT

- Turn ignition switch OFF.
- Connect EPS control unit harness connector.
- Start the engine.  
**CAUTION:**  
**Stop the vehicle.**
- Select "EPS", "DATA MONITOR" and "BATTERY VOLT" and perform the battery voltage inspection.

**Voltage** : Almost same as battery voltage.

Is the inspection result normal?

- YES >> GO TO 5.  
NO >> Replace EPS control unit. Refer to [STC-35, "Exploded View"](#).

### 5.CHECK POWER SUPPLY CIRCUIT

#### With CONSULT

- Turn head lamp, A/C, blower fan and rear window defogger OFF.
- Turn steering wheel until it stops.
- At that time, "DATA MONITOR" and "BATTERY VOLT" and perform the battery voltage inspection

**Voltage** : Almost same as battery voltage.

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Power supply circuit is defective. Repair or replace any inoperative parts.

A

B

C

D

E

F

STC

H

I

J

K

L

M

N

O

P

## C1601 BATTERY POWER SUPPLY

< DTC/CIRCUIT DIAGNOSIS >

---

### Special Repair Requirement

INFOID:000000007351196

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

---

Always perform the neutral position adjustment for the steering angle sensor, when replacing the steering column assembly. Refer to [BRC-76, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#). (VDC models)

>> END

# C1604 TORQUE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

## C1604 TORQUE SENSOR

### Description

INFOID:0000000007351197

Torque sensor detects the steering torque, and transmit the signal to EPS control unit.

### DTC Logic

INFOID:0000000007351198

### DTC DETECTION LOGIC

| DTC   | Display item  | Malfunction detected condition  | Possible cause  |
|-------|---------------|---|---|
| C1604 | TORQUE SENSOR | Malfunction of the torque sensor in steering column assembly is detected. | <ul style="list-style-type: none"><li>• Harness or connector</li><li>• Torque sensor</li><li>• EPS control unit</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2.CHECK SELF-DIAGNOSIS RESULTS

##### With CONSULT

Perform self-diagnosis for "EPS" with CONSULT.

Self-diagnosis results

TORQUE SENSOR

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [STC-11. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:0000000007351199

#### 1.CHECK CONNECTOR

##### With CONSULT

1. Turn ignition switch OFF.
2. Disconnect EPS control unit harness connector.
3. Check terminal for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminal.
4. Reconnect connectors and then perform self-diagnosis for "EPS" with CONSULT.

Is the "TORQUE SENSOR" [C1604] displayed?

- YES >> Torque sensor is malfunction. Replace steering column assembly. Refer to [ST-10. "Exploded View"](#).  
NO >> Poor connection of connector terminal. Repair or replace connector.

### Special Repair Requirement

INFOID:0000000007351200

#### 1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the steering column assembly. Refer to [BRC-76, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#). (VDC models)

>> END

# C1606 EPS MOTOR

< DTC/CIRCUIT DIAGNOSIS >

## C1606 EPS MOTOR

### Description

INFOID:000000007351201

EPS motor provides the assist torque by the control signal from EPS control unit.

### DTC Logic

INFOID:000000007351202

### DTC DETECTION LOGIC

| DTC   | Display item | Malfunction detected condition  | Possible cause  |
|-------|--------------|---|---|
| C1606 | EPS MOTOR    | When the motor driver malfunction of EPS control unit or EPS motor malfunction is detected. | <ul style="list-style-type: none"><li>• Harness or connector</li><li>• EPS motor</li><li>• EPS control unit</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2.CHECK SELF-DIAGNOSIS RESULTS

##### With CONSULT

Perform self-diagnosis for "EPS" with CONSULT.

|                        |
|------------------------|
| Self-diagnosis results |
| EPS MOTOR              |

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [STC-12. "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000007351203

#### 1.CHECK CONNECTOR

##### With CONSULT

1. Turn ignition switch OFF.
2. Disconnect EPS control unit harness connector.
3. Check terminal for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminal.
4. Reconnect connectors and then perform self-diagnosis for "EPS" with CONSULT.

Is the "EPS MOTOR" [C1606] displayed?

- YES >> EPS motor malfunctions. Replace steering column assembly. Refer to [ST-10. "Exploded View"](#).  
NO >> Poor connection of connector terminal. Repair or replace connector.

### Special Repair Requirement

INFOID:000000007351204

#### 1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the steering column assembly. Refer to [BRC-76. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#). (VDC models)

>> END

# C1607 EEPROM

< DTC/CIRCUIT DIAGNOSIS >

## C1607 EEPROM

### Description

INFOID:000000007351205

EPS control unit incorporates a memory function.

### DTC Logic

INFOID:000000007351206

### DTC DETECTION LOGIC

| DTC   | Display item | Malfunction detected condition   | Possible cause  |
|-------|--------------|--|---|
| C1607 | EEPROM       | When the memory (EEPROM) system malfunction is detected in EPS control unit. | <ul style="list-style-type: none"><li>• Harness or connector</li><li>• EPS control unit</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2.CHECK SELF-DIAGNOSIS RESULTS

STC

##### With CONSULT

Perform self-diagnosis for "EPS" with CONSULT.

| Self-diagnosis results |
|------------------------|
| EEPROM                 |

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [STC-13, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000007351207

#### 1.CHECK CONNECTOR

##### With CONSULT

1. Turn ignition switch OFF.
2. Disconnect EPS control unit harness connector.
3. Check terminal for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminal.
4. Reconnect connectors and then perform self-diagnosis for "EPS" with CONSULT.

Is the "EEPROM" [C1607] displayed?

- YES >> Replace EPS control unit. Refer to [STC-35, "Exploded View"](#).  
NO >> Poor connection of connector terminal. Repair or replace connector.

### Special Repair Requirement

INFOID:000000007351208

#### 1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the steering column assembly. Refer to [BRC-76, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION: Special Repair Requirement"](#). (VDC models)

>> END

# C1608 CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

## C1608 CONTROL UNIT

### Description

INFOID:000000007351209

EPS control unit performs an arithmetical operation on data, such as steering wheel turning force (sensor signal) from the torque sensor, vehicle speed signal, etc. Then it generates an optimum assist torque signal to the EPS motor according to the driving condition.

### DTC Logic

INFOID:000000007351210

### DTC DETECTION LOGIC

| DTC   | Display item | Malfunction detected condition                                 | Possible cause  |
|-------|--------------|--|---|
| C1608 | CONTROL UNIT | When the internal malfunction is detected in EPS control unit. | <ul style="list-style-type: none"><li>• Harness or connector</li><li>• EPS control unit</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2.CHECK SELF-DIAGNOSIS RESULTS

##### With CONSULT

Perform self-diagnosis for "EPS" with CONSULT.

|                        |
|------------------------|
| Self-diagnosis results |
| CONTROL UNIT           |

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [STC-14, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000007351211

#### 1.CHECK CONNECTOR

##### With CONSULT

1. Turn ignition switch OFF.
2. Disconnect EPS control unit harness connector.
3. Check terminal for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminal.
4. Reconnect connectors and then perform self-diagnosis for "EPS" with CONSULT.

Is any item indicated on the self-diagnosis display?

- YES >> GO TO 2.  
NO >> Poor connection of connector terminal. Repair or replace connector.

#### 2.CHECK EPS CONTROL UNIT POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect EPS control unit harness connector.
3. Turn ignition switch ON.  
**CAUTION:**  
**Never start the engine.**
4. Check voltage between EPS control unit harness connector terminals and ground.

# C1608 CONTROL UNIT

## < DTC/CIRCUIT DIAGNOSIS >

| EPS control unit |          | —      | Voltage         |
|------------------|----------|--------|-----------------|
| Connector        | Terminal |        |                 |
| M38              | 1        | Ground | Battery voltage |
| M37              | 3        |        |                 |

5. Turn ignition switch OFF.

6. Check voltage between EPS control unit harness connector terminals and ground.

| EPS control unit |          | —      | Voltage         |
|------------------|----------|--------|-----------------|
| Connector        | Terminal |        |                 |
| M38              | 1        | Ground | Battery voltage |
| M37              | 3        |        | Approx. 0 V     |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning components.

### 3.CHECK EPS CONTROL UNIT GROUND CIRCUIT

1. Check continuity between EPS control unit harness connector terminal and ground.

| EPS control unit |          | —      | Continuity |
|------------------|----------|--------|------------|
| Connector        | Terminal |        |            |
| M38              | 2        | Ground | Existed    |

2. Connect EPS control unit harness connector.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

### 4.CHECK DTC

#### With CONSULT

Perform self-diagnosis for "EPS" with CONSULT.

Is "C1608 CONTROL UNIT" indicated in self-diagnosis display?

YES >> Replace EPS control unit. Refer to [STC-35. "Exploded View"](#).

NO >> INSPECTION END

## Special Repair Requirement

INFOID:0000000007351212

### 1.ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the steering column assembly. Refer to [BRC-76. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION: Special Repair Requirement"](#). (VDC models)

>> END

# U1200 VEHICLE SPEED SIGNAL (ABS)

< DTC/CIRCUIT DIAGNOSIS >

## U1200 VEHICLE SPEED SIGNAL (ABS)

### Description

INFOID:000000007351213

EPS control unit receives the vehicle speed signal from ABS actuator and electric unit (control unit) via CAN communication line.

### DTC Logic

INFOID:000000007351214

### DTC DETECTION LOGIC

| DTC   | Display item         | Malfunction detected condition  | Possible cause  |
|-------|----------------------|---|---|
| U1200 | CAN VHCL SPEED (ABS) | Abnormal vehicle speed signals received via CAN communication are detected. | <ul style="list-style-type: none"><li>• Harness or connector</li><li>• CAN communication line</li><li>• EPS control unit</li><li>• ABS malfunction</li><li>- Vehicle speed signal error</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2. CHECK SELF-DIAGNOSIS RESULTS

##### With CONSULT

Perform self-diagnosis for "EPS" with CONSULT.

| Self-diagnosis results |
|------------------------|
| CAN VHCL SPEED (ABS)   |

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [STC-16, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000007351215

#### 1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SYSTEM

##### With CONSULT

Perform self-diagnosis for "ABS" with CONSULT. Repair or replace items indicated, then perform self-diagnosis again. Refer to [BRC-15, "CONSULT Function"](#) (ABS models), [BRC-94, "CONSULT Function"](#) (VDC models).

Is any item indicated on the self-diagnosis display?

- YES >> Repair or replace malfunctioning components.  
NO >> GO TO 2.

#### 2. CHECK CONNECTOR

##### With CONSULT

1. Turn ignition switch OFF.
2. Disconnect EPS control unit harness connector.
3. Check terminal for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminal.
4. Reconnect connectors and then perform self-diagnosis for "EPS" with CONSULT.

Is any item indicated on the self-diagnosis display?

- YES >> Replace EPS control unit. Refer to [STC-35, "Exploded View"](#).  
NO >> Poor connection of connector terminal. Repair or replace connector.



## U1200 VEHICLE SPEED SIGNAL (ABS)

< DTC/CIRCUIT DIAGNOSIS >

### Special Repair Requirement

INFOID:0000000007351216

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the steering column assembly. Refer to [BRC-76, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#). (VDC models)

>> END

A

B

C

D

E

F

STC

H

I

J

K

L

M

N

O

P

# U14FF VEHICLE SPEED SIGNAL (METER)

< DTC/CIRCUIT DIAGNOSIS >

## U14FF VEHICLE SPEED SIGNAL (METER)

### Description

INFOID:000000007351217

EPS control unit receives the vehicle speed signal from combination meter via CAN communication line.

### DTC Logic

INFOID:000000007351218

### DTC DETECTION LOGIC

| DTC   | Display item           | Malfunction detected condition  | Possible cause  |
|-------|------------------------|---|---|
| U14FF | CAN VHCL SPEED (METER) | Abnormal vehicle speed signals received via CAN communication are detected. | <ul style="list-style-type: none"><li>• Harness or connector</li><li>• CAN communication line</li><li>• EPS control unit</li><li>• Combination meter malfunction</li><li>- Vehicle speed signal error</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2.CHECK SELF-DIAGNOSIS RESULTS

##### With CONSULT

Perform self-diagnosis for "EPS" with CONSULT.

| Self-diagnosis results |
|------------------------|
| CAN VHCL SPEED (METER) |

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [STC-18, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000007351219

#### 1.CHECK COMBINATION METER SYSTEM

##### With CONSULT

Perform self-diagnosis for "METER/M&A". Repair or replace items indicated, then perform self-diagnosis again. Refer to [MWI-27, "CONSULT Function"](#).

Is any item indicated on the self-diagnosis display?

- YES >> Repair or replace malfunctioning components.  
NO >> GO TO 2.

#### 2.CHECK CONNECTOR

##### With CONSULT

1. Turn ignition switch OFF.
2. Disconnect EPS control unit harness connector.
3. Check terminal for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminal.
4. Reconnect connectors and then perform self-diagnosis for "EPS" with CONSULT.

Is any item indicated on the self-diagnosis display?

- YES >> Replace EPS control unit. Refer to [STC-35, "Exploded View"](#).  
NO >> Poor connection of connector terminal. Repair or replace connector.

## U14FF VEHICLE SPEED SIGNAL (METER)

< DTC/CIRCUIT DIAGNOSIS >

### Special Repair Requirement

INFOID:000000007351220

#### 1. ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the steering column assembly. Refer to [BRC-76, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#). (VDC models)

>> END

A  
B  
C  
D  
E  
F  
H  
I  
J  
K  
L  
M  
N  
O  
P

STC

# U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## U1000 CAN COMM CIRCUIT

### Description

INFOID:000000007351221

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

### DTC Logic

INFOID:000000007351222

### DTC DETECTION LOGIC

| DTC   | Display item     | Malfunction detected condition   | Possible cause   |
|-------|------------------|--|--|
| U1000 | CAN COMM CIRCUIT | When EPS control unit is not transmitting or receiving CAN communication signal for 2 seconds or more. | <ul style="list-style-type: none"><li>• Harness or connector</li><li>• CAN communication line</li><li>• EPS control unit</li></ul> |

### DTC CONFIRMATION PROCEDURE

#### 1.PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

#### 2.CHECK SELF-DIAGNOSIS RESULTS

##### With CONSULT

Perform self-diagnosis for "EPS" with CONSULT.

|                        |
|------------------------|
| Self-diagnosis results |
| CAN COMM CIRCUIT       |

Is above displayed on the self-diagnosis display?

- YES >> Proceed to diagnosis procedure. Refer to [STC-20, "Diagnosis Procedure"](#).  
NO >> INSPECTION END

### Diagnosis Procedure

INFOID:000000007351223

#### 1.CHECK CONNECTOR

##### With CONSULT

1. Turn ignition switch OFF.
2. Disconnect EPS control unit harness connector.
3. Check terminal for deformation, disconnection, looseness, and so on. If any malfunction is found, repair or replace terminal.
4. Reconnect connector and perform self-diagnosis for "EPS" with CONSULT.

Is above displayed on the self-diagnosis display?

- YES >> Go to [LAN-25, "CAN System Specification Chart"](#).  
NO >> INSPECTION END

### Special Repair Requirement

INFOID:000000007351224

#### 1.AJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

Always perform the neutral position adjustment for the steering angle sensor, when replacing the steering column assembly. Refer to [BRC-76, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#). (VDC models)

# U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

---

>> END

A

B

C

D

E

F

STC

H

I

J

K

L

M

N

O

P

# EPS CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

## ECU DIAGNOSIS INFORMATION

### EPS CONTROL UNIT

Reference Value

INFOID:000000007351225

VALUES ON THE DIAGNOSIS TOOL

#### CAUTION:

The output signal indicates the EPS control unit calculation data. The normal values will be displayed even in the event that the output circuit (harness) is open.

| Monitor item  | Content   | Condition                            |   | Display value   |
|---------------|---|--------------------------------------|---|---|
| BATTERY VOLT  | Power supply voltage for EPS control unit         | Ignition switch: ON                  |   | Battery voltage   |
| TORQUE SENSOR | Steering wheel turning force                      | Engine running                       | Steering wheel: Not steering (There is no steering force) | Approx. 0 Nm  |
|               |   |                                      | Steering wheel: Right turn                                | Negative value (Nm)   |
|               |   |                                      | Steering wheel: Left turn                                 | Positive value (Nm)   |
| MOTOR SIG     | Command current to EPS motor                      | Engine running                       | Steering wheel: Not steering (There is no steering force) | Approx. 0 A   |
|               |   |                                      | Steering wheel: Right turn                                | Positive value (A)  |
|               |   |                                      | Steering wheel: Left turn                                 | Negative value (A)  |
| MOTOR CURRENT | Consumption current of EPS motor                  | Engine running                       | Steering wheel: Not steering (There is no steering force) | Approx. 0 A   |
|               |   |                                      | Steering wheel: Right turn                                | Positive value (A)  |
|               |   |                                      | Steering wheel: Left turn                                 | Negative value (A)  |
| ASSIST TORQUE | Displays assist torque being output by the EPS.   | Engine running                       | Steering wheel: Not steering (There is no steering force) | Approx. 0 Nm  |
|               |   |                                      | Steering wheel: Right turn                                | Positive value (Nm)   |
|               |   |                                      | Steering wheel: Left turn                                 | Negative value (Nm)   |
| C/U TEMP      | Displays temperature of the EPS control unit.     | Ignition switch ON or engine running |   | Displays temperature of inside of EPS control unit (°C) or (°F)         |
| ASSIST LEVEL  | Assist available level                            | Engine running                       |   | 100 % *2  |
| VEHICLE SPEED | Vehicle speed                                     | Vehicle stopped                      |   | 0 km/h (0 mph)  |
|               |   | While driving                        |   | Approximately equal to the indication on speedometer (inside of ±10%)*3 |
| MOTOR TEMP    | Displays temperature of EPS motor.                | Engine running                       |   | Displays temperature of inside of EPS motor (°C) or (°F)                |
| VHCL SPD CALC | Displays vehicle speeds used for controlling EPS. | Vehicle stopped                      |   | 0 km/h (0 mph)  |
|               |   | While driving                        |   | Approximately equal to the indication on speedometer (inside of ±10%)*3 |
| WARNING LAMP  | EPS warning lamp condition                        | EPS warning lamp: ON                 |   | On  |
|               |   | EPS warning lamp: OFF                |   | Off   |
| ENGINE STATUS | Engine status                                     | Engine not running                   |   | STOP, STALL, CRANK  |
|               |   | Engine running                       |   | RUN   |

\*1: Almost in accordance with the value of MOTOR SIG. It is not a malfunction though these values are not accorded when steering quickly.


# EPS CONTROL UNIT

## < ECU DIAGNOSIS INFORMATION >

\*2: Normally displays 100%. In case of an excessive stationary steering, the assist curvature gradually falls. However, it returns to 100% when left standing.

\*3: It is not a malfunction, though it might not be corresponding just after ignition switch in turned ON.

## TERMINAL LAYOUT

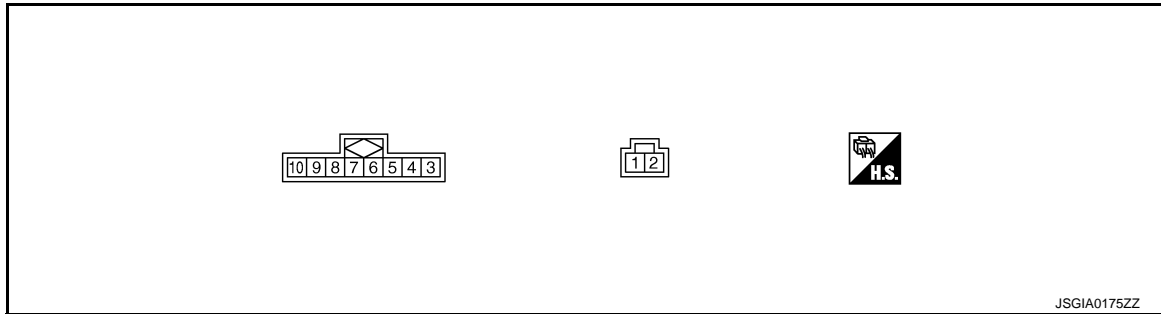

## PHYSICAL VALUES


| Terminal No.<br>(Wire Color) |        | Description           |              | Condition            | Value<br>(Approx.) |
|------------------------------|--------|-----------------------|--------------|----------------------|--------------------|
| +                            | —      | Signal name           | Input/Output |                      |                    |
| 1<br>(R)                     | Ground | Battery power supply  | Input        | Always               | Battery voltage    |
| 2<br>(B)                     | Ground | Ground                | Output       | Always               | 0 V                |
| 3<br>(W)                     | Ground | Ignition power supply | Input        | Ignition switch: ON  | Battery voltage    |
|                              |        |                       |              | Ignition switch: OFF | 0 V                |
| 5<br>(L)                     | —      | CAN-H                 | Input/Output | —                    | —                  |
| 7<br>(P)                     | —      | CAN-L                 | Input/Output | —                    | —                  |

# EPS CONTROL UNIT


< ECU DIAGNOSIS INFORMATION >

## Wiring Diagram

INFOID:000000007351226

For connector terminal arrangements, harness layouts, and alphabets in a  (option abbreviation; if not described in wiring diagram), refer to [GI-12, "Connector Information"](#).

### ELECTRONICALLY CONTROLLED POWER STEERING SYSTEM

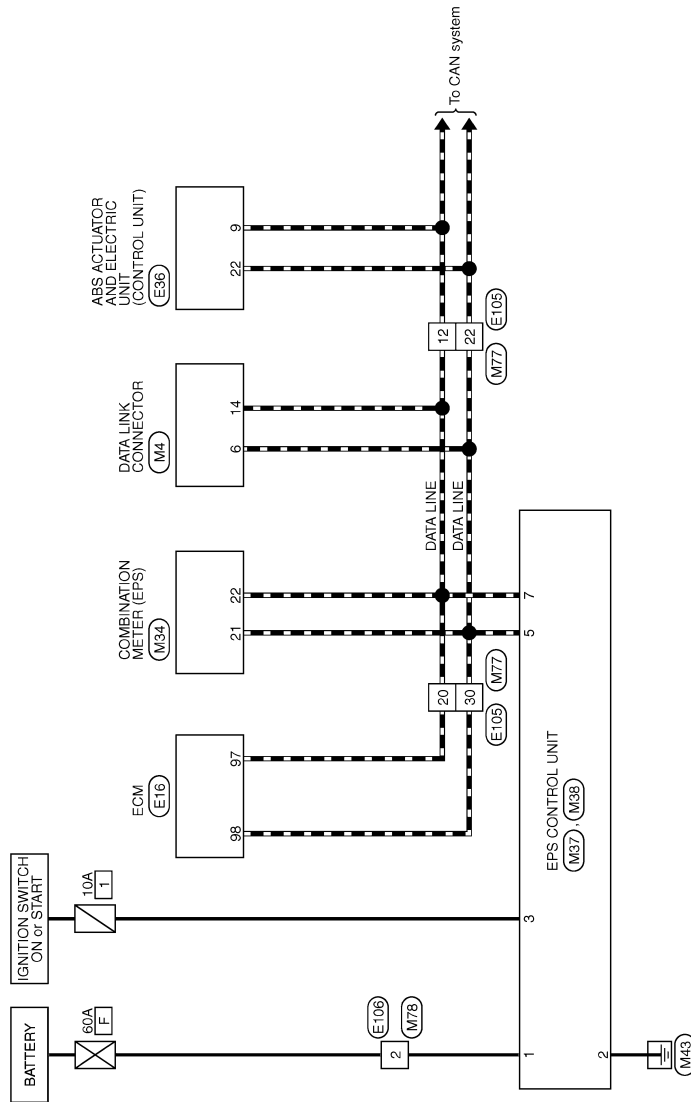

2008/07/15

JCGWM0158GB

## Fail-Safe

INFOID:000000007351227

- If any malfunction occurs in the system and control unit detects the malfunction, EPS warning lamp on combination meter turns ON to indicate system malfunction.



## EPS CONTROL UNIT

### < ECU DIAGNOSIS INFORMATION >

- When EPS warning lamp is ON, the system enters into a manual steering state. (Control turning force steering wheel becomes heavy.)
- Under abnormal vehicle speed signal conditions, vehicle speed is judged as constant.

### DTC Index

INFOID:000000007351228

| DTC   | Items (CONSULT screen terms) | Reference                           |
|-------|------------------------------|-------------------------------------|
| C1601 | BATTERY VOLT                 | <a href="#">STC-8, "DTC Logic"</a>  |
| C1604 | TORQUE SENSOR                | <a href="#">STC-11, "DTC Logic"</a> |
| C1606 | EPS MOTOR                    | <a href="#">STC-12, "DTC Logic"</a> |
| C1607 | EEPROM                       | <a href="#">STC-13, "DTC Logic"</a> |
| C1608 | CONTROL UNIT                 | <a href="#">STC-14, "DTC Logic"</a> |
| U1200 | CAN VHCL SPEED (ABS)         | <a href="#">STC-16, "DTC Logic"</a> |
| U14FF | CAN VHCL SPEED (METER)       | <a href="#">STC-18, "DTC Logic"</a> |
| U1000 | CAN COMM CIRCUIT             | <a href="#">STC-20, "DTC Logic"</a> |

STC

# EPS WARNING LAMP DOES NOT TURN ON

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### EPS WARNING LAMP DOES NOT TURN ON

#### Description

INFOID:000000007351229

- EPS warning lamp does not turn ON when turning ignition switch ON from OFF.

#### Diagnosis Procedure

INFOID:000000007351230

#### 1. CHECK SYSTEM FOR CAN COMMUNICATION LINE

##### With CONSULT

Perform self-diagnosis for "EPS" with CONSULT.

Is the "CAN COMM CIRCUIT [U1000]" displayed?

- YES >> Perform trouble diagnosis for CAN communication line.
- NO >> GO TO 2.

#### 2. CHECK EPS CONTROL UNIT

Check EPS control unit input/output signal. Refer to [STC-22, "Reference Value"](#).

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Check EPS control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

#### 3. CHECK COMBINATION METER SELF-DIAGNOSIS RESULTS

##### With CONSULT

Perform self-diagnosis for "METER/M&A" with CONSULT. Refer to [MWI-27, "CONSULT Function"](#).

is self-diagnosis results indicated?

- YES >> Repair or replace malfunctioning components.
- NO >> GO TO 4.

#### 4. SYMPTOM CHECK

Check again.

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace combination meter.

# EPS WARNING LAMP DOES NOT TURN OFF

< SYMPTOM DIAGNOSIS >

## EPS WARNING LAMP DOES NOT TURN OFF

### Description

INFOID:000000007351231

- EPS warning lamp does not turn OFF several seconds after engine started.

### Diagnosis Procedure

INFOID:000000007351232

#### 1.CHECK SELF-DIAGNOSIS RESULTS

##### With CONSULT

Perform self-diagnosis for "EPS" with CONSULT.

Is any malfunction detected by self-diagnosis?

YES >> Check the malfunctioning system.

NO >> GO TO 2.

#### 2.CHECK EPS CONTROL UNIT POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect EPS control unit harness connector.
3. Turn ignition switch ON. (Do not start engine.)
4. Check voltage between EPS control unit harness connector terminals and ground.

| EPS control unit |          | —      | Voltage         |
|------------------|----------|--------|-----------------|
| Connector        | Terminal |        |                 |
| M38              | 1        | Ground | Battery voltage |
| M37              | 3        |        |                 |

5. Turn ignition switch OFF.
6. Check voltage between EPS control unit harness connector terminals and ground.

| EPS control unit |          | —      | Voltage         |
|------------------|----------|--------|-----------------|
| Connector        | Terminal |        |                 |
| M38              | 1        | Ground | Battery voltage |
| M37              | 3        |        | Approx. 0 V     |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace malfunctioning components.

#### 3.CHECK EPS CONTROL UNIT GROUND CIRCUIT

1. Check continuity between EPS control unit harness connector terminal and ground.

| EPS control unit |          | —      | Continuity |
|------------------|----------|--------|------------|
| Connector        | Terminal |        |            |
| M38              | 2        | Ground | Existed    |

2. Connect EPS control unit harness connector.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair open circuit or short to ground or short to power in harness or connectors.

#### 4.CHECK EPS CONTROL UNIT PIN TERMINAL

Check EPS control unit pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace damaged parts.

# EPS WARNING LAMP DOES NOT TURN OFF

## < SYMPTOM DIAGNOSIS >

---

### 5. CHECK COMBINATION METER SELF-DIAGNOSIS RESULTS

---

#### With CONSULT

Perform self-diagnosis for "METER/M&A" with CONSULT. Refer to [MWI-27, "CONSULT Function"](#).  
is self-diagnosis results indicated?

YES >> Repair or replace malfunctioning components.

NO >> GO TO 6.

### 6. CHECK VEHICLE SPEED SIGNAL FROM ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

---

#### With CONSULT

Perform self-diagnosis for "ABS" with CONSULT.

- Without VDC: [BRC-15, "CONSULT Function"](#).

- With VDC: [BRC-94, "CONSULT Function"](#).

Is any malfunction detected by self-diagnosis?

YES >> Check the malfunctioning system.

NO >> GO TO 7.

### 7. CHECK ENGINE STATUS SIGNAL

---

#### With CONSULT

Perform self-diagnosis for "ENGINE" with CONSULT.

- Except for MEXICO: [EC-107, "CONSULT Function"](#).

- For MEXICO: [EC-542, "CONSULT Function"](#).

Is the malfunction detected by self-diagnosis?

YES >> Check the malfunctioning system.

NO >> GO TO 8.

### 8. SYMPTOM CHECK

---

Check again.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace combination meter. Refer to [MWI-69, "Exploded View"](#).

# STEERING WHEEL TURNING FORCE IS HEAVY OR LIGHT

< SYMPTOM DIAGNOSIS >

## STEERING WHEEL TURNING FORCE IS HEAVY OR LIGHT

### Diagnosis Procedure

INFOID:000000007351233

#### 1. CHECK SYSTEM FOR CAN COMMUNICATION LINE

##### With CONSULT

Perform self-diagnosis for "EPS" with CONSULT.

Is the "CAN COMM CIRCUIT [U1000]" displayed.

- YES >> Perform trouble diagnosis for CAN communication line. Refer to [STC-20, "Description"](#).  
NO >> GO TO 2.

#### 2. CHECK VEHICLE SPEED SIGNAL FROM ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

##### With CONSULT

Perform self-diagnosis for "ABS" with CONSULT.

- Without VDC: [BRC-15, "CONSULT Function"](#).
- With VDC: [BRC-94, "CONSULT Function"](#).

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system.  
NO >> GO TO 3.

#### 3. CHECK COMBINATION METER SIGNAL

##### With CONSULT

Perform self-diagnosis for "METER/M&A" with CONSULT. Refer to [MWI-27, "CONSULT Function"](#).

Is the malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system.  
NO >> GO TO 4.

#### 4. CHECK ENGINE STATUS SIGNAL

##### With CONSULT

Perform self-diagnosis for "ENGINE" with CONSULT.

- Except for MEXICO: [EC-107, "CONSULT Function"](#).
- For MEXICO: [EC-542, "CONSULT Function"](#).

Is the malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system.  
NO >> GO TO 5.

#### 5. CHECK EPS CONTROL UNIT

Check EPS control unit input/output signal. Refer to [STC-22, "Reference Value"](#).

Is the inspection result normal?

- YES >> GO TO 6.  
NO >> Check EPS control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

#### 6. CHECK STEERING WHEEL TURNING FORCE

Check steering wheel turning force. Refer to [ST-7, "Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 7.  
NO >> Repair or replace malfunctioning components.

#### 7. SYMPTOM CHECK

Check again.

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Check the steering wheel turning force for mechanical malfunction. Refer to [ST-7, "Inspection"](#).

A

B

C

D

E

F

STC

H

I

J

K

L

M

N

O

P

# UNBALANCE STEERING WHEEL TURNING FORCE AND RETURN BETWEEN RIGHT AND LEFT

< SYMPTOM DIAGNOSIS >

## UNBALANCE STEERING WHEEL TURNING FORCE AND RETURN BETWEEN RIGHT AND LEFT

### Diagnosis Procedure

INFOID:0000000007351234

#### 1.CHECK EPS WARNING LAMP

Confirm EPS warning lamp during engine running.

Does EPS warning lamp turn OFF?

YES >> GO TO 2.

NO >> Go to [STC-27, "Diagnosis Procedure"](#).

#### 2.CHECK WHEEL ALIGNMENT

Check wheel alignment. Refer to [FSU-7, "Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Adjust wheel alignment. Refer to [FSU-7, "Inspection"](#).

#### 3.CHECK EPS CONTROL UNIT

Check EPS control unit input/output signal. Refer to [STC-22, "Reference Value"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check EPS control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

#### 4.CHECK STEERING WHEEL TURNING FORCE

Check steering wheel turning force. Refer to [ST-7, "Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace malfunctioning components.

#### 5.SYMPTOM CHECK

Check again.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check the steering wheel turning force for mechanical malfunction. Refer to [ST-7, "Inspection"](#).

# UNBALANCE STEERING WHEEL TURNING FORCE (TORQUE VARIATION)

< SYMPTOM DIAGNOSIS >

## UNBALANCE STEERING WHEEL TURNING FORCE (TORQUE VARIATION)

### Diagnosis Procedure

INFOID:0000000007351235

#### 1.CHECK EPS WARNING LAMP

Confirm EPS warning lamp during engine running.

Does EPS warning lamp turn OFF?

YES >> GO TO 2.

NO >> Go to [STC-27, "Diagnosis Procedure"](#).

#### 2.CHECK STEERING COLUMN INTERMEDIATE SHAFT

Check the connection between intermediate shaft and the mounting part of steering column assembly and steering gear assembly. Refer to [ST-10, "Exploded View"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace damaged parts.

#### 3.CHECK EPS CONTROL UNIT

Check EPS control unit input/output signal. Refer to [STC-22, "Reference Value"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Check EPS control unit pin terminals for damage or loose connection with harness connector. If any items are damaged, repair or replace damaged parts.

#### 4.SYMPTOM CHECK

Check again.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check the steering wheel turning force for mechanical malfunction. Refer to [ST-7, "Inspection"](#).

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### FOR USA AND CANADA

#### FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000007351236

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

**Always observe the following items for preventing accidental activation.**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

**Always observe the following items for preventing accidental activation.**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### FOR USA AND CANADA : Service Notice and Precautions for EPS System

INFOID:000000007351238

Check the following item when performing the trouble diagnosis.


- Check any possible causes by interviewing the symptom and it's condition from the customer if any malfunction, such as EPS warning lamp is turned ON, occurs.
- Check if air pressure and size of tires are proper, the specified part is used for the steering wheel, and control unit is genuine part.
- Check if the connection of steering column assembly and steering gear assembly is proper (there is no looseness of mounting bolts, damage of rods, boots or sealants, and leakage of grease, etc.).
- Check if the wheel alignment is adjusted properly.
- Check if there is any damage or modification to suspension or body resulting in increased weight or altered ground clearance.
- Check if installation conditions of each link and suspension are proper.
- Check if the battery voltage is proper.
- Check connection conditions of each connector are proper.




## PRECAUTIONS

### < PRECAUTION >

- Before connecting or disconnecting the EPS control unit harness connector, turn ignition switch "OFF" and disconnect battery ground cable. Because battery voltage is applied to EPS control unit even if ignition switch is turned "OFF".

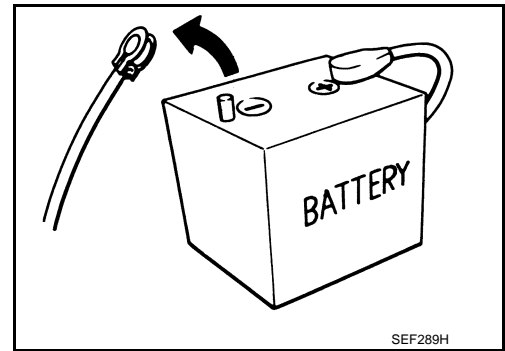

- When connecting or disconnecting pin connectors into or from EPS control unit, take care not to damage pin terminals (bend or break).  
When connecting pin connectors, make sure that there are no bends or breaks on EPS control unit pin terminal.

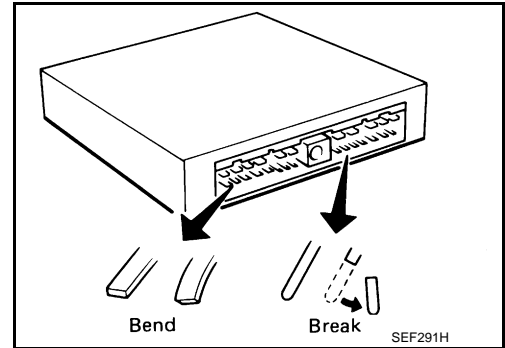

### FOR MEXICO

#### FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000007351239

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### FOR MEXICO : Service Notice and Precautions for EPS System


INFOID:000000007351241

Check the following item when performing the trouble diagnosis.


## PRECAUTIONS

### < PRECAUTION >

- Check any possible causes by interviewing the symptom and it's condition from the customer if any malfunction, such as EPS warning lamp is turned ON, occurs.
- Check if air pressure and size of tires are proper, the specified part is used for the steering wheel, and control unit is genuine part.
- Check if the connection of steering column assembly and steering gear assembly is proper (there is no looseness of mounting bolts, damage of rods, boots or sealants, and leakage of grease, etc.).
- Check if the wheel alignment is adjusted properly.
- Check if there is any damage or modification to suspension or body resulting in increased weight or altered ground clearance.
- Check if installation conditions of each link and suspension are proper.
- Check if the battery voltage is proper.
- Check connection conditions of each connector are proper.
- Before connecting or disconnecting the EPS control unit harness connector, turn ignition switch "OFF" and disconnect battery ground cable. Because battery voltage is applied to EPS control unit even if ignition switch is turned "OFF".

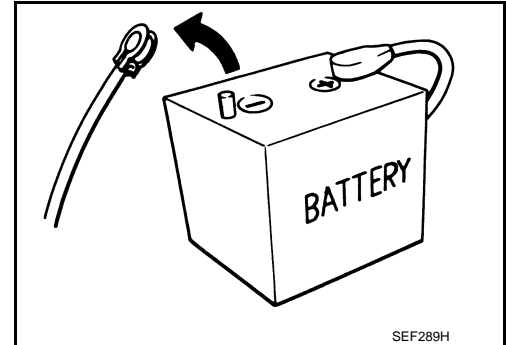

- When connecting or disconnecting pin connectors into or from EPS control unit, take care not to damage pin terminals (bend or break).  
When connecting pin connectors, make sure that there are no bends or breaks on EPS control unit pin terminal.

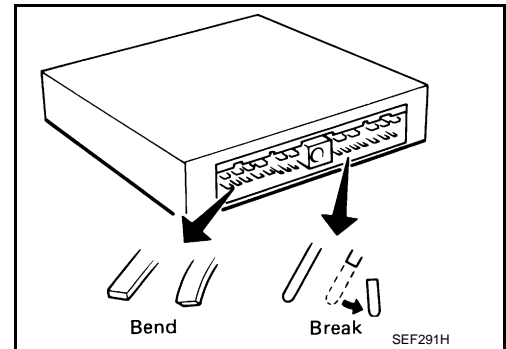

# EPS CONTROL UNIT


< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### EPS CONTROL UNIT

#### Exploded View

INFOID:000000007351242

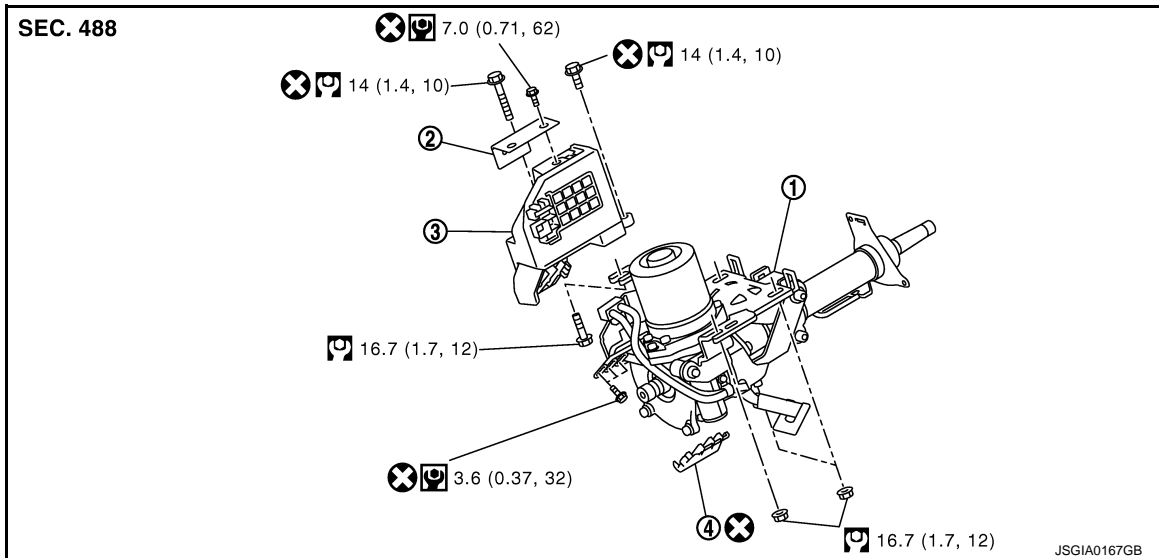

1. Steering column assembly
2. Harness bracket
3. EPS control unit
4. Harness cover

Refer to [GI-4, "Components"](#) for symbols in the figure.

### Removal and Installation

INFOID:000000007351243

#### REMOVAL

##### CAUTION:

- Disconnect battery negative terminal before starting operations.
- Never shock EPS control unit, e.g. drop or hit.
- Never get EPS control unit wet with water or other liquid. Also, do not give EPS control unit a radical temperature change to avoid getting water drops.
- Never disassemble or remodel EPS control unit, EPS motor, torque sensor, harness and connectors.

1. Remove steering column assembly. Refer to [ST-10, "Exploded View"](#).
2. Remove harness bracket.
3. Disconnect EPS motor and torque sensor connectors.

##### CAUTION:

Hold and pull the connector housing, not pulling harness, when disconnecting connectors. Also, do not grip, collapse or apply excessive force to the connector.

4. Remove harness cover.
5. Disconnect EPS control unit connectors.
6. Remove EPS control unit.

#### INSTALLATION

Note the following, and install in the reverse order of removal.

## EPS CONTROL UNIT

### < REMOVAL AND INSTALLATION >

- Check the order of cable colors, red (A), black (B) and white (C), when connecting harness terminals.
- Check that harness is not damaged when installing EPS control unit. Also, check that EPS control unit is installed without trapping harness or foreign materials.
- Repeat the following operations three times without touching steering wheels (input torque = 0) after replacing EPS control unit:  
Turn the key switch ON and wait for 3 seconds ⇒ Turn the key switch OFF and wait for 3 seconds.

