

# SECTION INL

## INTERIOR LIGHTING SYSTEM

### CONTENTS

<b>BASIC INSPECTION</b> .....	3	<b>POWER SUPPLY AND GROUND CIRCUIT</b> ....	19
<b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....	3	<b>BCM (BODY CONTROL MODULE)</b> .....	19
Work Flow .....	3	BCM (BODY CONTROL MODULE) : Diagnosis	
<b>SYSTEM DESCRIPTION</b> .....	6	Procedure .....	19
<b>INTERIOR ROOM LAMP CONTROL SYSTEM</b>		<b>INTERIOR ROOM LAMP POWER SUPPLY</b>	
.....	6	<b>CIRCUIT</b> .....	20
System Diagram .....	6	Description .....	20
System Description .....	6	Component Function Check .....	20
Component Parts Location .....	8	Diagnosis Procedure .....	20
Component Description .....	9	<b>INTERIOR ROOM LAMP CONTROL CIRCUIT</b>	
<b>INTERIOR ROOM LAMP BATTERY SAVER</b>		.....	22
<b>SYSTEM</b> .....	10	Description .....	22
System Diagram .....	10	Component Function Check .....	22
System Description .....	10	Diagnosis Procedure .....	22
Component Parts Location .....	11	<b>IGNITION KEYHOLE ILLUMINATION CON-</b>	
Component Description .....	12	<b>TROL CIRCUIT</b> .....	24
<b>ILLUMINATION CONTROL SYSTEM</b> .....	13	Description .....	24
System Diagram .....	13	Component Function Check .....	24
System Description .....	13	Diagnosis Procedure .....	24
Component Parts Location .....	14	<b>LUGGAGE ROOM LAMP CIRCUIT</b> .....	26
Component Description .....	14	Description .....	26
<b>DIAGNOSIS SYSTEM (BCM)</b> .....	15	Component Function Check .....	26
<b>COMMON ITEM</b> .....	15	Diagnosis Procedure .....	26
COMMON ITEM : CONSULT Function (BCM -		<b>INTERIOR ROOM LAMP CONTROL SYSTEM</b>	
COMMON ITEM) .....	15	.....	28
<b>INT LAMP</b> .....	15	Wiring Diagram - INTERIOR ROOM LAMP -	28
INT LAMP : CONSULT Function (BCM - INT		<b>ILLUMINATION</b> .....	30
LAMP) .....	16	Wiring Diagram - ILLUMINATION -	30
<b>BATTERY SAVER</b> .....	17	<b>ECU DIAGNOSIS INFORMATION</b> .....	33
BATTERY SAVER : CONSULT Function (BCM -		<b>BCM (BODY CONTROL MODULE)</b> .....	33
BATTERY SAVER) .....	17	Reference Value .....	33
<b>DTC/CIRCUIT DIAGNOSIS</b> .....	19	Wiring Diagram - BCM -	48
		Fail-safe .....	51

DTC Inspection Priority Chart .....	52	<b>VANITY MIRROR LAMP .....</b>	<b>57</b>
DTC Index .....	52	Exploded View .....	57
<b>SYMPTOM DIAGNOSIS .....</b>	<b>53</b>	Replacement .....	57
<b>INTERIOR LIGHTING SYSTEM SYMPTOMS... 53</b>		<b>GLOVE BOX LAMP .....</b>	<b>58</b>
Symptom Table .....	53	Exploded View .....	58
<b>PRECAUTION .....</b>	<b>54</b>	Replacement .....	58
<b>PRECAUTIONS .....</b>	<b>54</b>	<b>ROOM LAMP .....</b>	<b>59</b>
<b>FOR USA AND CANADA .....</b>	<b>54</b>	Exploded View .....	59
FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	54	Removal and Installation .....	59
<b>FOR MEXICO .....</b>	<b>54</b>	Replacement .....	59
FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	54	<b>IGNITION KEYHOLE ILLUMINATION .....</b>	<b>60</b>
<b>REMOVAL AND INSTALLATION .....</b>	<b>56</b>	Exploded View .....	60
<b>MAP LAMP .....</b>	<b>56</b>	Replacement .....	60
Exploded View .....	56	<b>LUGGAGE ROOM LAMP .....</b>	<b>61</b>
Removal and Installation .....	56	Exploded View .....	61
Replacement .....	56	Removal and Installation .....	61
		Replacement .....	61
		<b>SERVICE DATA AND SPECIFICATIONS (SDS) .....</b>	<b>62</b>
		<b>SERVICE DATA AND SPECIFICATIONS (SDS) .....</b>	<b>62</b>
		Bulb Specifications .....	62

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

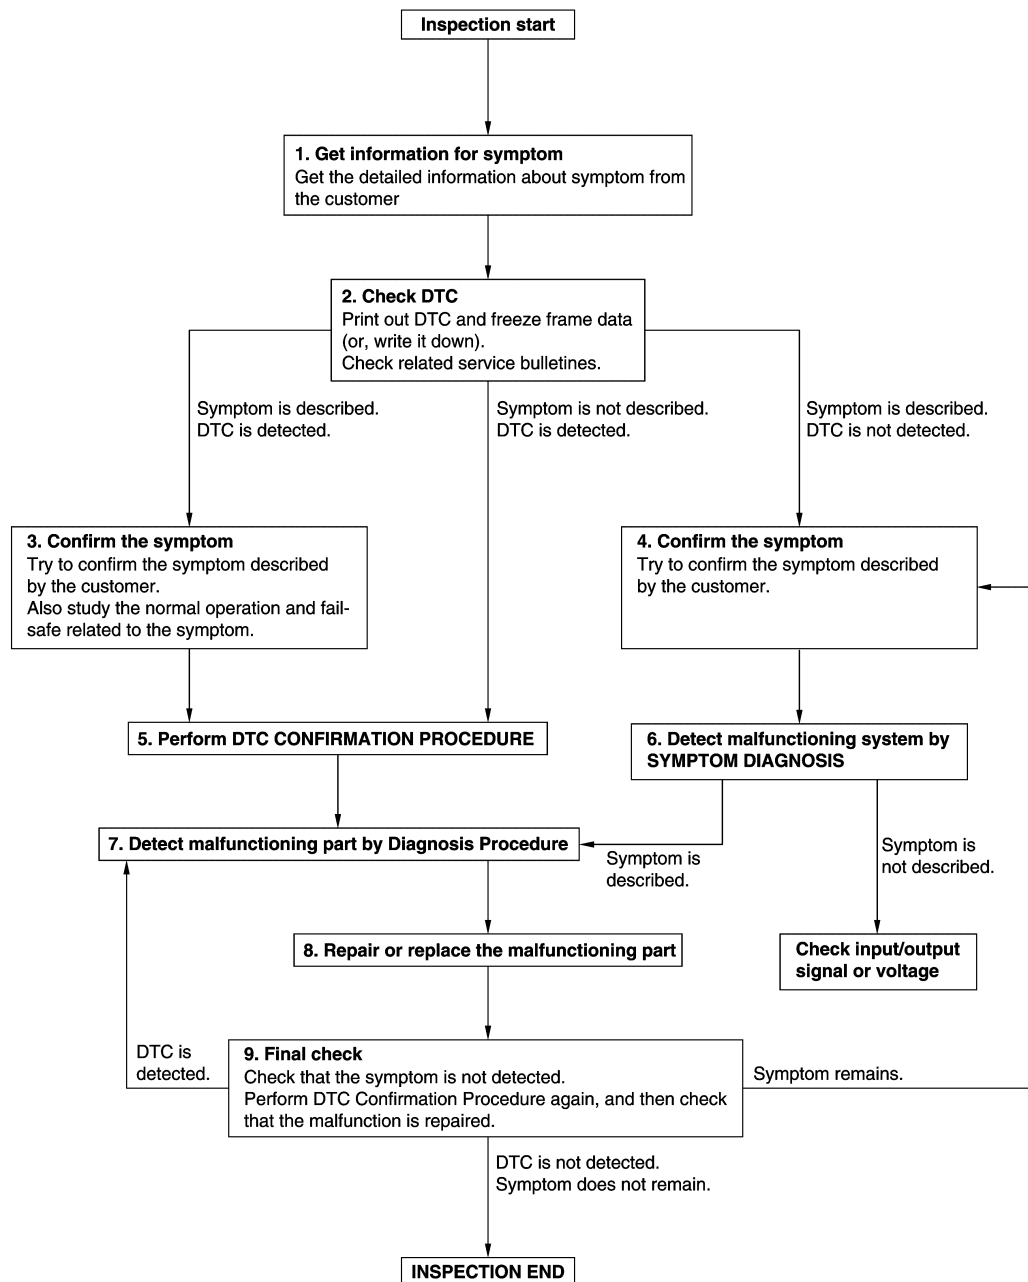
## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000008280824

OVERALL SEQUENCE



DETAILED FLOW

JMKIA8652GB

# DIAGNOSIS AND REPAIR WORKFLOW

## < BASIC INSPECTION >

---

### 1.GET INFORMATION FOR SYMPTOM

---

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

### 2.CHECK DTC

---

1. Check DTC.
2. Perform the following procedure if DTC is detected.
  - Record DTC and freeze frame data (Print them out using CONSULT.)
  - Erase DTC.
  - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

#### Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

### 3.CONFIRM THE SYMPTOM

---

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

### 4.CONFIRM THE SYMPTOM

---

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

### 5.PERFORM DTC CONFIRMATION PROCEDURE

---

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time.

If two or more DTCs are detected, refer to [BCS-61. "DTC Inspection Priority Chart"](#) and determine trouble diagnosis order.

#### **NOTE:**

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.  
If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

#### Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-46. "Intermittent Incident"](#).

### 6.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

---

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

#### Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

### 7.DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

---

# DIAGNOSIS AND REPAIR WORKFLOW

## < BASIC INSPECTION >

Inspect according to Diagnosis Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-46. "Intermittent Incident"](#).

## 8.REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

## 9.FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

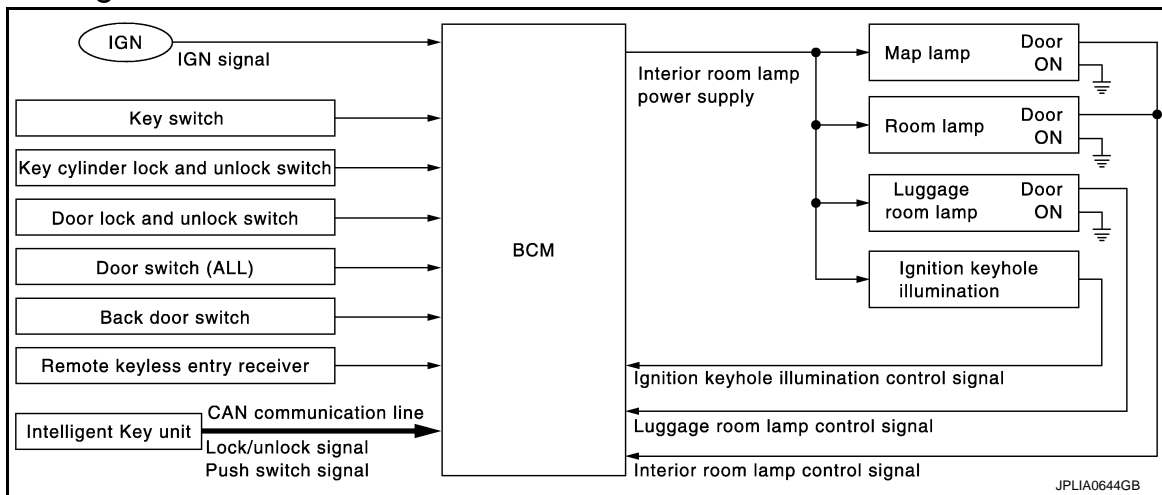
# INTERIOR ROOM LAMP CONTROL SYSTEM

< SYSTEM DESCRIPTION >

## SYSTEM DESCRIPTION

### INTERIOR ROOM LAMP CONTROL SYSTEM

#### System Diagram



#### System Description

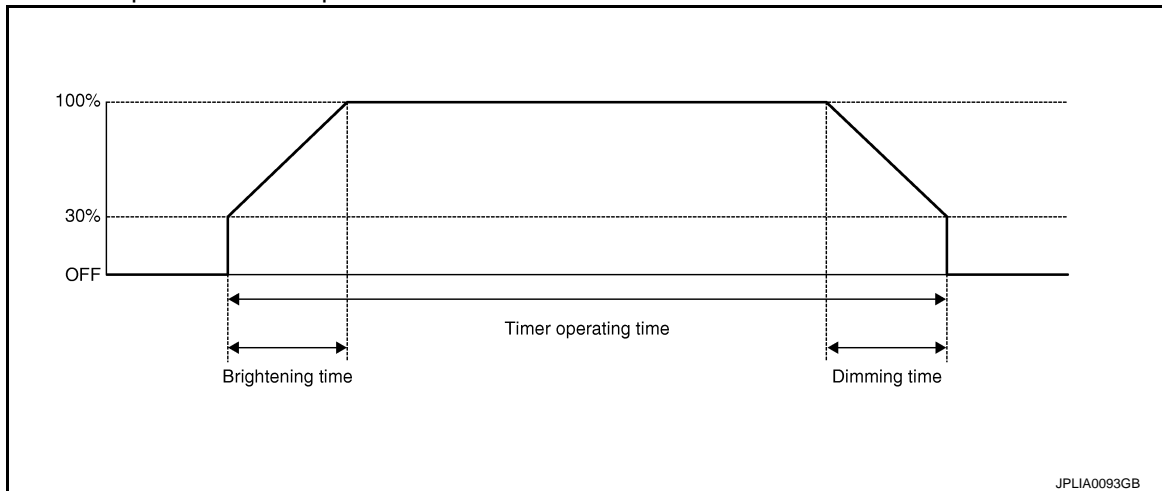
INFOID:000000008280826

#### OUTLINE

- Interior room lamps\* are controlled by interior room lamp timer control function of BCM.  
\*: Map lamp, room lamp and ignition keyhole illumination (when map lamp and room lamp switch is in DOOR position).
- Luggage room lamp is controlled by luggage room lamp control function of BCM.

#### INTERIOR ROOM LAMP TIMER CONTROL

##### Interior Room Lamp Timer Basic Operation



- The interior room lamp turns ON and OFF (gradual brightening and dimming) by the interior room timer.
- BCM judges the vehicle condition with the following items. It activates the interior room lamp timer.
  - Ignition switch status
  - Door switch signal (ALL)
  - Door lock/unlock signal (Remote keyless entry receiver, Intelligent Key unit, key cylinder door lock and unlock switch, door lock and unlock switch)
  - Key switch signal
  - Push switch signal

#### NOTE:

Each function of interior room lamp timer can be set by CONSULT. Refer to [INL-16, "INT LAMP : CONSULT Function \(BCM - INT LAMP\)"](#).

# INTERIOR ROOM LAMP CONTROL SYSTEM

## < SYSTEM DESCRIPTION >

---

### Interior Room Lamp ON Operation

- BCM always turns the interior room lamp ON when any door opens.
- BCM activates the interior room lamp timer in any of the following conditions to turn the interior room lamp ON for a period of time.
  - Any door opened and all doors closed.
  - Key switch is turned ON → OFF.
  - All door unlock signal is detected when all doors close with ignition switch OFF.
  - Push switch is turned ON → OFF.

#### **NOTE:**

Restart the timer if new condition is input during the timer operating time.

### Interior Room Lamp OFF Operation

BCM stops the timer in any of the following conditions to turns the interior room lamp OFF.

- The timer operating time is expired.
- Ignition switch position is ON with all doors close.
- All door lock operation is detected with all doors close (when locked with the door lock and unlock switch, ignition keyhole illumination to be turned OFF when the time up).

### LUGGAGE ROOM LAMP CONTROL

BCM controls the luggage room lamp (ground-side) to turn ON with the back door switch ON (when luggage room lamp switch is in DOOR position).

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

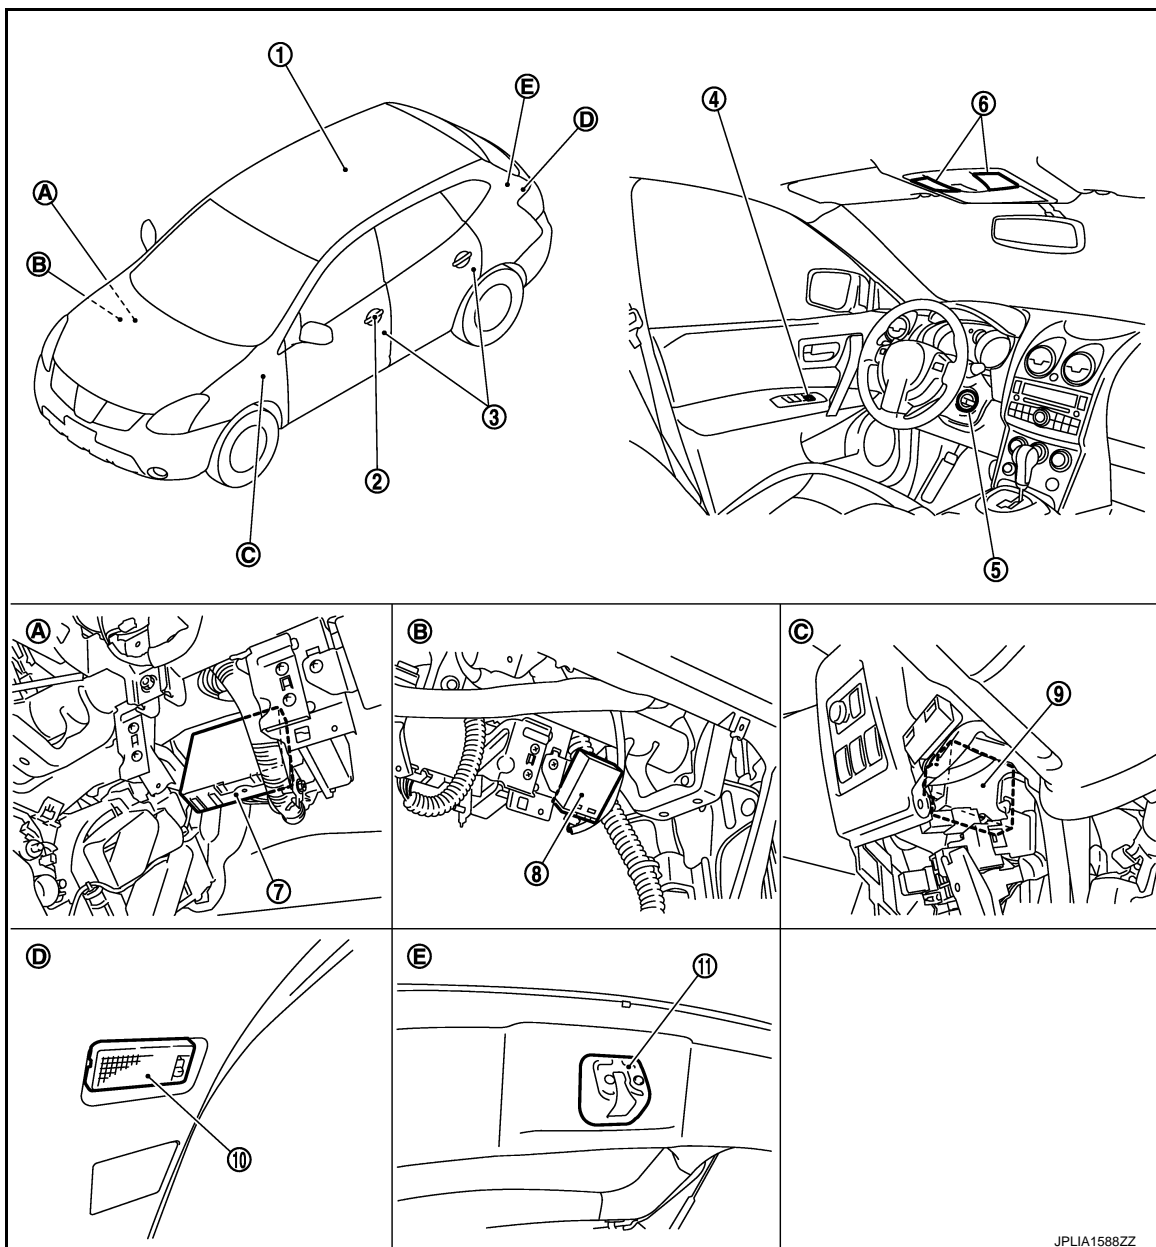
P

# INTERIOR ROOM LAMP CONTROL SYSTEM

< SYSTEM DESCRIPTION >

## Component Parts Location

INFOID:000000008280827



- |                                  |   |   |
|----------------------------------|---|---|
| 1. Room lamp                     | 2. Key cylinder door lock and unlock switch   | 3. Door switch  |
| 4. Door lock and unlock switch   | 5. • Key switch<br>• Push switch (With Intelligent Key system)<br>• Ignition keyhole illumination | 6. Map lamp   |
| 7. BCM                           | 8. Remote keyless entry receiver (Without Intelligent Key system)                                 | 9. Intelligent Key unit (With Intelligent Key system) |
| 10. Luggage room lamp            | 9. Back door switch   |   |
| A. Over the glove box            | B. Over the glove box   | C. Over the instrument lower panel (driver side)      |
| D. Back door trim finisher lower | E. Back door lock assembly  |   |

JPLIA1588ZZ



# INTERIOR ROOM LAMP CONTROL SYSTEM

< SYSTEM DESCRIPTION >

## Component Description

INFOID:000000000280828

Part	Description
BCM	Activates the interior room lamp timer depending on the vehicle condition to turn the interior room lamps ON/OFF.
Remote keyless entry receiver	<ul style="list-style-type: none"><li>• Receives the lock/unlock signal from Keyfob.</li><li>• Transmits the lock/unlock signal to BCM.</li></ul>
Intelligent Key unit	Transmits the lock/unlock signal and push switch signal to BCM with CAN communication.
<ul style="list-style-type: none"><li>• Door lock and unlock switch</li><li>• Key cylinder door lock and unlock switch</li></ul>	Inputs the lock/unlock signal to BCM.
<ul style="list-style-type: none"><li>• Door switch</li><li>• Back door switch</li></ul>	Inputs the door switch signal to BCM.
Key switch	Inputs the key switch signal to BCM.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

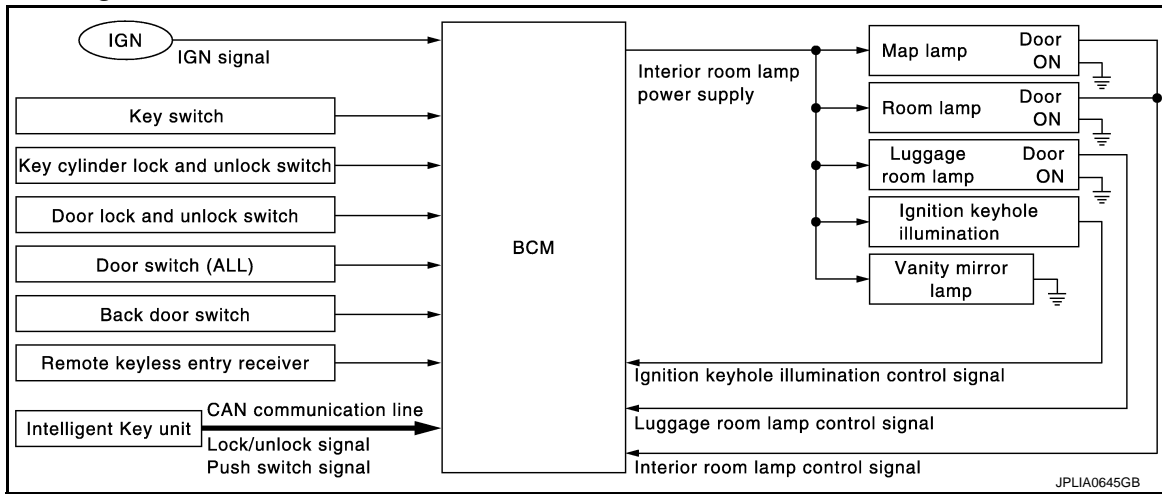
P

# INTERIOR ROOM LAMP BATTERY SAVER SYSTEM

< SYSTEM DESCRIPTION >

## INTERIOR ROOM LAMP BATTERY SAVER SYSTEM

### System Diagram



### System Description

INFOID:000000008280830

#### OUTLINE

- Interior room lamp battery saver is controlled by BCM.
- BCM turns applicable lamps OFF depending on the vehicle condition. This function prevents the battery from over-discharging if the driver neglect turning OFF the any lamps.

#### Applicable lamps

- Map lamp
- Room lamp
- Ignition keyhole illumination
- Luggage room lamp
- Vanity mirror lamp

#### INTERIOR ROOM LAMP BATTERY SAVER FUNCTION

- When the ignition switch is turned OFF, BCM operates the timer for a period of time to cut the interior room lamp power supply.
- BCM restart the timer when any of the following signals changes while operating the timer.
  - Ignition switch status
  - Door switch signal (ALL)
  - Door lock/unlock signal (Remote keyless entry receiver, Intelligent Key unit, key cylinder door lock and unlock switch, door lock and unlock switch)
  - Key switch signal
  - Push switch signal
- BCM provides the interior room lamp power supply continuously when the ignition switch position is ON.

#### NOTE:

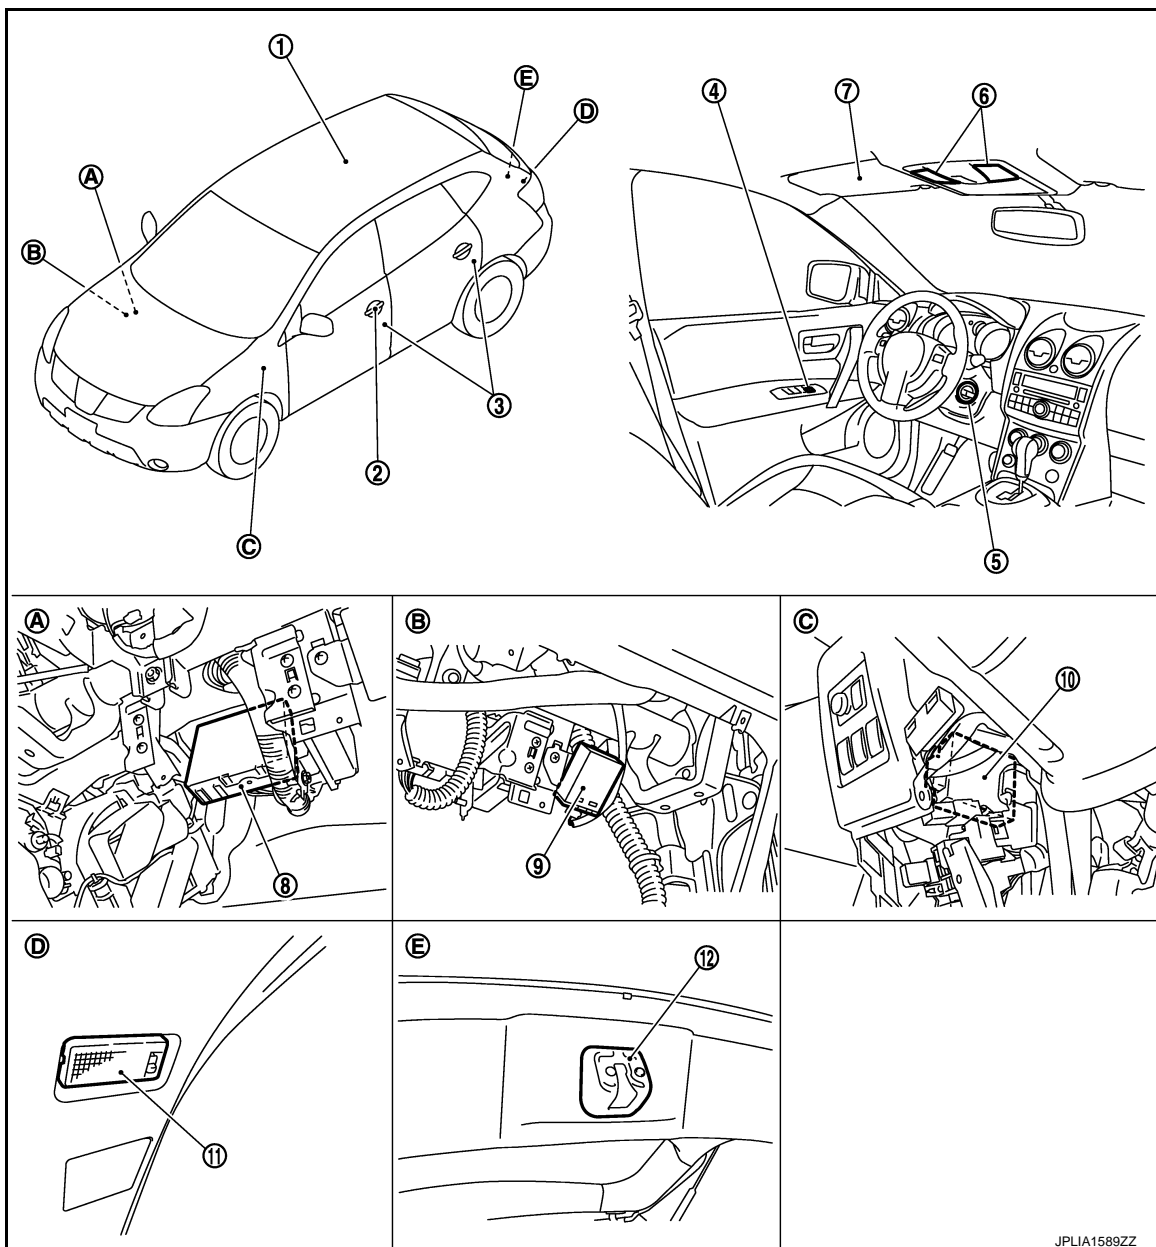
Each function of interior room lamp battery saver can be set by CONSULT. Refer to [INL-17, "BATTERY SAVER : CONSULT Function \(BCM - BATTERY SAVER\)"](#).

# INTERIOR ROOM LAMP BATTERY SAVER SYSTEM

< SYSTEM DESCRIPTION >

## Component Parts Location

INFOID:000000008280831



- |   |   |  |
|---|---|--|
| 1. Room lamp  | 2. Key cylinder door lock and unlock switch   | 3. Door switch   |
| 4. Door lock and unlock switch                            | 5. • Key switch<br>• Push switch (With Intelligent Key system)<br>• Ignition keyhole illumination | 6. Map lamp  |
| 7. Vanity mirror lamp                                     | 8. BCM  | 9. Remote keyless entry receiver<br>(Without Intelligent Key system) |
| 10. Intelligent Key unit<br>(With Intelligent Key system) | 11. Luggage room lamp   | 12. Back door switch   |
| A. Over the glove box                                     | B. Over the glove box   | C. Over the instrument lower panel<br>(driver side)                  |
| D. Back door trim finisher lower                          | Back door lock assembly   |  |

JPLIA1589ZZ

# INTERIOR ROOM LAMP BATTERY SAVER SYSTEM

< SYSTEM DESCRIPTION >

## Component Description

INFOID:000000008280832

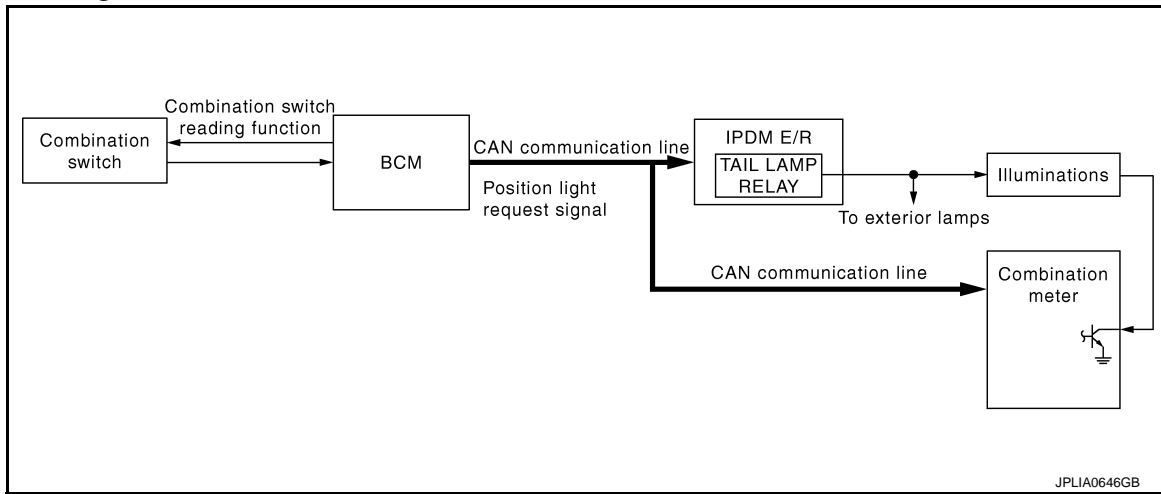
Part	Description
BCM	Operates the interior room lamp battery saver depending on the vehicle condition to cut the interior room lamp power supply.
Remote keyless entry receiver	<ul style="list-style-type: none"><li>• Receives the lock/unlock signal from Keyfob.</li><li>• Transmits the lock/unlock signal to BCM.</li></ul>
Intelligent Key unit	Transmits the lock/unlock signal and push switch signal to BCM with CAN communication.
<ul style="list-style-type: none"><li>• Door lock and unlock switch</li><li>• Key cylinder door lock and unlock switch</li></ul>	Inputs the lock/unlock signal to BCM.
<ul style="list-style-type: none"><li>• Door switch</li><li>• Back door switch</li></ul>	Inputs the door switch signal to BCM.
Key switch	Inputs the key switch signal to BCM.

# ILLUMINATION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

## ILLUMINATION CONTROL SYSTEM

### System Diagram



### System Description

INFOID:0000000008280834

#### OUTLINE

Each illumination lamp is controlled by each function of BCM and IPDM E/R and combination meter.

Control by BCM

- Combination switch reading function
- Headlamp control function

Control by IPDM E/R

- Relay control function

Control by combination meter

- Meter illumination control function (Refer to [MWI-8, "METER SYSTEM : System Description"](#))

#### ILLUMINATION CONTROL

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits position light request signal to IPDM E/R and combination meter according to tail lamp ON condition.

Tail lamp ON condition

- Lighting switch 1ST
- Lighting switch 2ND

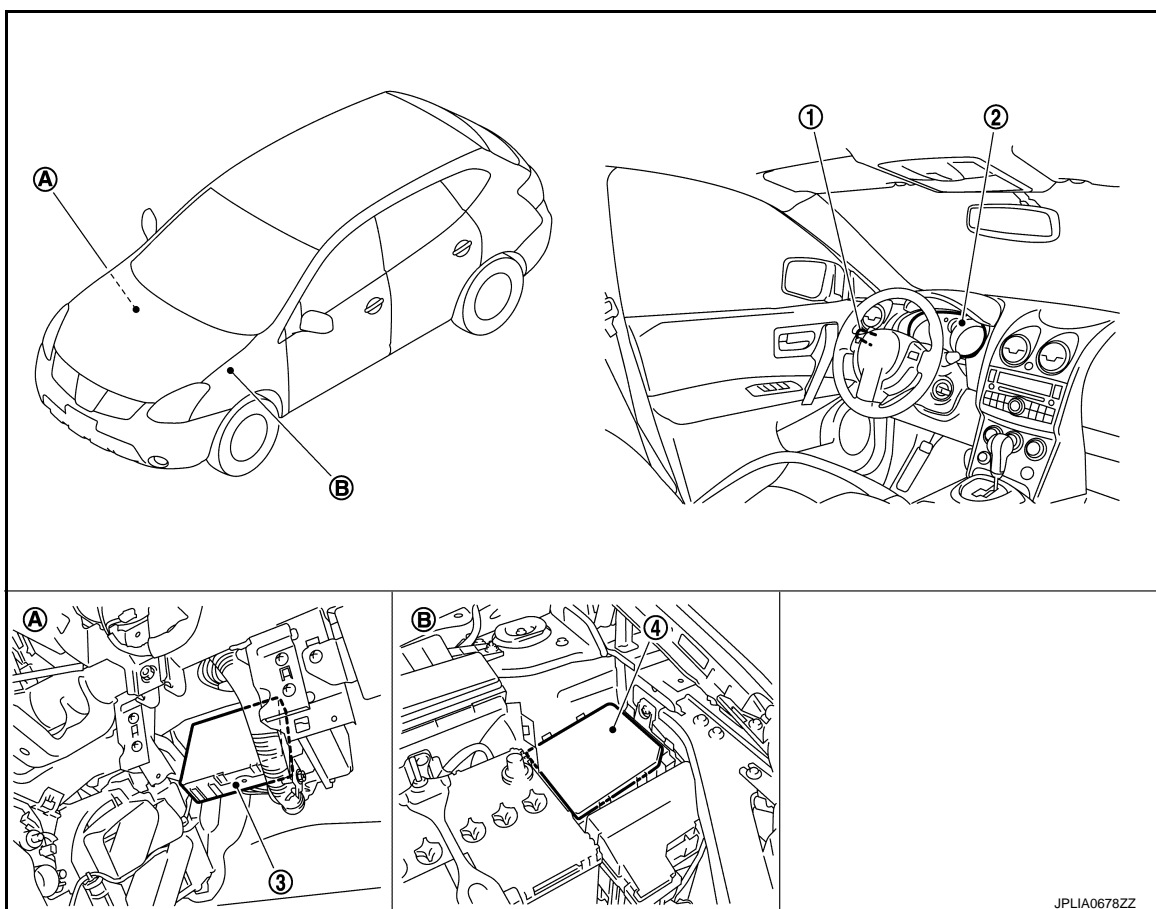
- IPDM E/R turns the integrated tail lamp relay ON according to position light request signal. It provides the power supply to each illumination lamp.
- Combination meter enters in the nighttime mode according to position light request signal. Under the nighttime mode the combination meter controls the illuminance by controlling the each illumination lamp (ground-side).

# ILLUMINATION CONTROL SYSTEM

## < SYSTEM DESCRIPTION >

### Component Parts Location

INFOID:000000008280835



1. Combination switch

4. IPDM E/R

A Over the glove box

2. Combination meter

B. Engine room (LH)

3. BCM

### Component Description

INFOID:000000008280836

Part	Description
BCM	<ul style="list-style-type: none"> <li>Judges each switch condition by the combination switch reading function.</li> <li>Judges the illumination lamp ON/OFF status depending on the vehicle condition. And then it transmits position light request signal to IPDM E/R and combination meter (with CAN communication).</li> </ul>
IPDM E/R	Controls the integrated relay according to the request signal from BCM (with CAN communication).
Combination meter	<ul style="list-style-type: none"> <li>Enters in nighttime mode according to the request from BCM (with CAN communication).</li> <li>Controls each illumination in the nighttime mode.</li> </ul> Refer to <a href="#">MWI-8, "METER SYSTEM : System Description"</a> .
Combination switch (Lighting & turn signal switch)	Refer to <a href="#">BCS-9, "System Diagram"</a> .

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

### COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000008280837

### APPLICATION ITEM

CONSULT can display each diagnostic item using the diagnostic test modes shown following.

Diagnosis mode	Function description
ECU Identification	BCM part number is displayed.
Self-Diagnostic Result	Displays the diagnosis results judged by BCM. Refer to <a href="#">INL-52, "DTC Index"</a> .
Data Monitor	BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Work Support	Changes the setting for each system function.
Configuration	<ul style="list-style-type: none"> <li>Read and save the vehicle specification.</li> <li>Write the vehicle specification when replacing BCM.</li> </ul>
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM.

### SYSTEM APPLICATION

BCM can perform the following functions for each system.

#### NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	CONSULT sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp control	INT LAMP	×	×	×
Remote keyless entry system	MULTI REMOTE ENT	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER		×	×
<ul style="list-style-type: none"> <li>Auto air conditioning system</li> <li>Manual air conditioning system</li> </ul>	AIR CONDITONER		×	
Intelligent Key system	INTELLIGENT KEY		×	
Combination switch	COMB SW		×	
Body control system	BCM	×		
Immobilizer	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Back door open	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
RAP system	RETAINED PWR	×	×	×
Signal buffer system	SIGNAL BUFFER		×	×
—	FUEL LID*			
TPMS	AIR PRESSURE MONITOR	×	×	×
Panic alarm system	PANIC ALARM			×

\*: This item is displayed, but is not function.

### INT LAMP

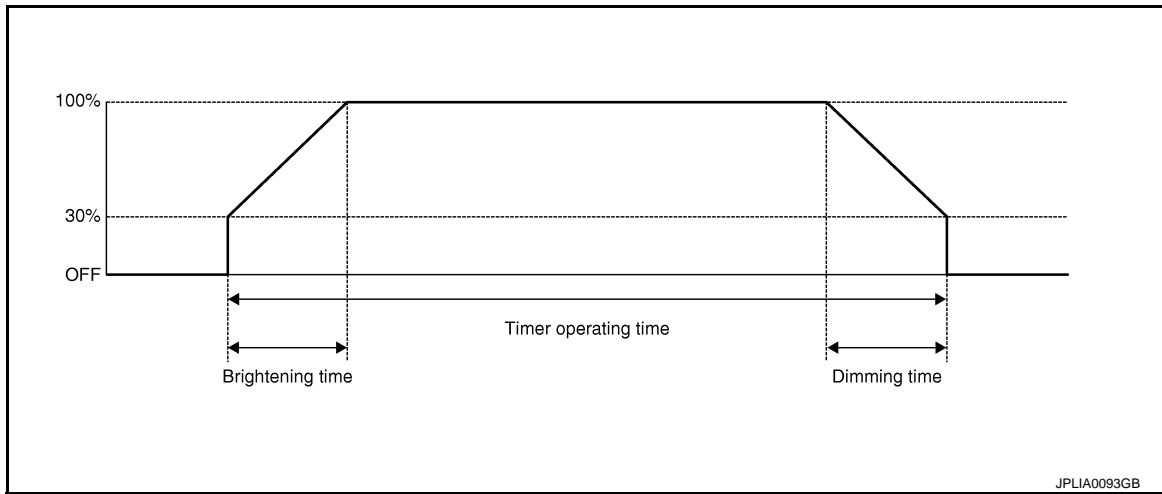
# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## INT LAMP : CONSULT Function (BCM - INT LAMP)

INFOID:0000000008280838

### WORK SUPPORT



Service item	Setting item	Setting	
SET I/L D-UNLCK INTCON	On*	With the interior room lamp timer function	
	Off	Without the interior room lamp timer function	
ROOM LAMP ON TIME SET	MODE 1	0.5 sec.	Sets the interior room lamp gradual brightening time.
	MODE 2*	1 sec.	
	MODE 3	2 sec.	
	MODE 4	3 sec.	
	MODE 5	4 sec.	
	MODE 6	5 sec.	
	MODE 7	0 sec.	
ROOM LAMP OFF TIME SET	MODE 1	0.5 sec.	Sets the interior room lamp gradual dimming time.
	MODE 2*	1 sec.	
	MODE 3	2 sec.	
	MODE 4	3 sec.	
	MODE 5	4 sec.	
	MODE 6	5 sec.	
	MODE 7	0 sec.	

\*: Factory setting

### DATA MONITOR

Monitor item [Unit]	Description
IGN ON SW [On/Off]	Ignition switch (ON) status judges from IGN signal (ignition power supply)
KEY ON SW [On/Off]	The switch status input from key switch
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH



# DIAGNOSIS SYSTEM (BCM)

## < SYSTEM DESCRIPTION >

Monitor item [Unit]	Description
DOOR SW- RL [On/Off]	The switch status input from rear door switch LH
BACK DOOR SW [On/Off]	The switch status input from back door switch
KEY CYL LK-SW [On/Off]	Lock switch status input from key cylinder switch
KEY CYL UN-SW [On/Off]	Unlock switch status input from key cylinder switch
CDL LOCK SW [On/Off]	Lock switch status input from door lock and unlock switch
CDL UNLOCK SW [On/Off]	Unlock switch status input from door lock and unlock switch
I-KEY LOCK [On/Off]	Lock signal status received from Intelligent Key unit by CAN communication
I-KEY UNLOCK [On/Off]	Unlock signal status received from Intelligent Key unit by CAN communication
KEYLESS LOCK [On/Off]	Lock signal status received from remote keyless entry receiver
KEYLESS UNLOCK [On/Off]	Unlock signal status received from remote keyless entry receiver

## ACTIVE TEST

Test item	Operation	Description
INT LAMP	On	Outputs the interior room lamp control signal to turn the interior room lamps ON. [Map lamp, room lamp (when applicable lamps switch is in DOOR position.)]
	Off	Stops the interior room lamp control signal to turn the interior room lamps OFF.
IGN ILLUM	On	Outputs the ignition keyhole illumination control signal to turn ignition keyhole illumination ON.
	Off	Stops the ignition keyhole illumination control signal to turn ignition keyhole illumination OFF.
STEP LAMP TEST	On	<b>NOTE:</b> The item is indicated, but not operate.
	Off	
LUGGAGE LAMP TEST	On	Outputs the luggage room lamp control signal to turn luggage room lamp ON.
	Off	Stops the luggage room lamp control signal to turn luggage room lamp OFF.

## BATTERY SAVER

## BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER)

INFOID:000000008280839

## WORK SUPPORT

Service item	Setting item	Setting	
ROOM LAMP TIMER SET	MODE 1*	30 min.	Sets the interior room lamp battery saver timer operating time.
	MODE 2	60 min.	

\*: Factory setting

## DATA MONITOR

# DIAGNOSIS SYSTEM (BCM)

## < SYSTEM DESCRIPTION >

Monitor item [Unit]	Description
IGN ON SW [On/Off]	Ignition switch (ON) status judges from IGN signal (ignition power supply)
KEY ON SW [On/Off]	The switch status input from key switch
DOOR SW-DR [On/Off]	The switch status input from front door switch (driver side)
DOOR SW-AS [On/Off]	The switch status input from front door switch (passenger side)
DOOR SW-RR [On/Off]	The switch status input from rear door switch RH
DOOR SW- RL [On/Off]	The switch status input from rear door switch LH
BACK DOOR SW [On/Off]	The switch status input from back door switch
KEY CYL LK-SW [On/Off]	Lock switch status input from key cylinder switch
KEY CYL UN-SW [On/Off]	Unlock switch status input from key cylinder switch
CDL LOCK SW [On/Off]	Lock switch status input from door lock and unlock switch
CDL UNLOCK SW [On/Off]	Unlock switch status input from door lock and unlock switch
I-KEY LOCK [On/Off]	Lock signal status received from Intelligent Key unit by CAN communication
I-KEY UNLOCK [On/Off]	Unlock signal status received from Intelligent Key unit by CAN communication
KEYLESS LOCK [On/Off]	Lock signal status received from remote keyless entry receiver
KEYLESS UNLOCK [On/Off]	Unlock signal status received from remote keyless entry receiver

## ACTIVE TEST

Test item	Operation	Description
BATTERY SAVER	Off	Cuts the interior room lamp power supply to turn interior room lamps OFF.
	On	Outputs the interior room lamp power supply to turn interior room lamps ON.*

\*: Each lamp switch is in ON position.

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### POWER SUPPLY AND GROUND CIRCUIT

#### BCM (BODY CONTROL MODULE)

#### BCM (BODY CONTROL MODULE) : Diagnosis Procedure

INFOID:000000008280840

#### 1.CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not fusing.

Signal name	Fuses and fusible link No.
Battery power supply	10
	J
ACC power supply	20
Ignition power supply	1

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

#### 2.CHECK POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and the ground.

Terminals			Ignition switch position		
(+) BCM		(-)			
Connector	Terminal			OFF	ACC
M67	70	Ground	Battery voltage	Battery voltage	Battery voltage
	57				
M65	11		Approx. 0 V	Battery voltage	Battery voltage
	38		Approx. 0 V	Approx. 0 V	Battery voltage

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair the harness or connector.

#### 3.CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and the ground.

BCM		Ground	Continuity
Connector	Terminal		
M67	67		Existed

Does continuity exist?

YES >> INSPECTION END

NO >> Repair the harness or connector.

# INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT

### Description

INFOID:000000008280841

Provides the interior room lamp power supply. Also cuts the power supply when the interior room lamp battery saver activating.

### Component Function Check

INFOID:000000008280842

#### 1.CHECK INTERIOR ROOM LAMP POWER SUPPLY FUNCTION

##### ⓅCONSULT ACTIVE TEST

1. Turn ignition switch ON.
2. Turn each interior room lamp ON.
  - Map lamp
  - Room lamp
  - Ignition keyhole illumination
  - Vanity mirror lamp
  - Luggage room lamp
3. Select "BATTERY SAVER" of BCM (BATTERY SAVER) active test item.
4. With operating the test items, check that each interior room lamp is turned ON/OFF.

**Off** : Interior room lamp OFF

**On** : Interior room lamp ON

Is the interior room lamp turned ON/OFF?

YES >> Interior room lamp power supply circuit is normal.

NO >> Refer to [INL-20. "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000008280843

#### 1.CHECK INTERIOR ROOM LAMP POWER SUPPLY OUTPUT

##### ⓅCONSULT ACTIVE TEST

1. Turn ignition switch ON.
2. Select "BATTERY SAVER" of BCM (BATTERY SAVER) active test item.
3. With operating the test item, check voltage between BCM harness connector and ground.

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
BCM		BATTERY SAVER	
Connector	Terminal		
M67	56	Off	0 V
		On	Battery voltage

Is the measurement value normal?

YES >> GO TO 2.

NO >> Replace BCM. Refer to [BCS-65. "Removal and Installation"](#).

#### 2.CHECK INTERIOR ROOM LAMP POWER SUPPLY OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the following connectors.
  - Map lamp
  - Room lamp
  - Ignition keyhole illumination
  - Vanity mirror lamp (driver side)
  - Vanity mirror lamp (passenger side)
  - Luggage room lamp
3. Check continuity between BCM harness connector and each interior room lamp harness connector.

# INTERIOR ROOM LAMP POWER SUPPLY CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

BCM		Each interior room lamp			Continuity
Connector	Terminal	Connector		Terminal	
M67	56	Map lamp	R4	1	Existed
		Room lamp	R15	2	
		Ignition keyhole illumination	M68	1	
		Vanity mirror lamp (driver side)	R14	1	
		Vanity mirror lamp (passenger side)	R10	1	
		Luggage room lamp	D155	2	

### Does continuity exist?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

## 3.CHECK INTERIOR ROOM LAMP POWER SUPPLY SHORT CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M67	56		Not existed

### Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> Check that each interior room lamp has no internal short circuit.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# INTERIOR ROOM LAMP CONTROL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## INTERIOR ROOM LAMP CONTROL CIRCUIT

### Description

INFOID:000000008280844

Controls each interior room lamp (ground side) by PWM signal.

#### NOTE:

PWM signal control period is approximately 250 Hz (in the gradual brightening/dimming).

### Component Function Check

INFOID:000000008280845

#### CAUTION:

Before the diagnosis, check that the following items are normal.

- Interior room lamp power supply
- Map lamp bulb
- Room lamp bulb

### 1.CHECK INTERIOR ROOM LAMP CONTROL FUNCTION

#### CONSULT ACTIVE TEST

1. Switch the map lamp switch to DOOR.
2. Turn ignition switch ON.
3. Select "INT LAMP" of BCM (INT LAMP) active test item.
4. With operating the test items, check that each interior room lamp turns ON/OFF (gradual brightening/dimming).

On : Interior room lamp gradual brightening

Off : Interior room lamp gradual dimming

Does the interior room lamp turns ON/OFF (gradual brightening/dimming)?

YES >> Interior room lamp control circuit is normal.

NO >> Refer to [INL-22, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000008280846

### 1.CHECK INTERIOR ROOM LAMP CONTROL OUTPUT

#### CONSULT ACTIVE TEST

1. Turn ignition switch OFF.
2. Remove all the bulbs of following lamps.
  - Map lamp
  - Room lamp
3. Select "INT LAMP" of BCM (INT LAMP) active test item.
4. With operating the test item, check continuity between BCM harness connector and ground.

BCM		Ground	Test item	Continuity
Connector	Terminal		INT LAMP	
M67	63		On	Existed
			Off	Not existed

Is the measurement value normal?

YES >> GO TO 2.

Fixed ON>>GO TO 3.

Fixed OFF>>Replace BCM. Refer to [BCS-65, "Removal and Installation"](#).

### 2.CHECK INTERIOR ROOM LAMP CONTROL OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect the following connectors.
  - Map lamp
  - Room lamp

## INTERIOR ROOM LAMP CONTROL CIRCUIT

### < DTC/CIRCUIT DIAGNOSIS >

3. Check continuity between BCM harness connector, map lamp harness connector, and room lamp harness connector.

BCM		Map lamp/room lamp			Continuity
Connector	Terminal	Connector		Terminal	
M67	63	Map lamp	R4	2	Existed
		Room lamp	R15	1	

#### Does continuity exist?

YES >> Replace the map lamp or the room lamp.

NO >> Repair the harnesses or connectors.

### 3.CHECK INTERIOR ROOM LAMP CONTROL SHORT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector, map lamp connector and room lamp connector.
3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M67	63		Not existed

#### Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> Replace BCM. Refer to [BCS-65, "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# IGNITION KEYHOLE ILLUMINATION CONTROL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## IGNITION KEYHOLE ILLUMINATION CONTROL CIRCUIT

### Description

INFOID:000000008280847

Controls the ignition keyhole illumination (ground side) by PWM signal.

#### NOTE:

PWM signal control period is approximately 250 Hz (in the gradual brightening/dimming).

### Component Function Check

INFOID:000000008280848

#### CAUTION:

Before performing the diagnosis, check that the following is normal.

- Interior room lamp power supply
- Ignition keyhole illumination bulb

### 1.CHECK IGNITION KEYHOLE ILLUMINATION OPERATION

#### CONSULT ACTIVE TEST

1. Turn ignition switch ON.
2. Select "IGN ILLUM" of BCM (INT LAMP) active test item.
3. With operating the test items, check that ignition keyhole illumination turns ON/OFF.

On : Ignition keyhole illumination ON

Off : Ignition keyhole illumination OFF

Does the ignition keyhole illumination turn ON/OFF?

YES >> Ignition keyhole illumination circuit is normal.

NO >> Refer to [INL-24, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000008280849

### 1.CHECK IGNITION KEYHOLE ILLUMINATION OUTPUT

#### CONSULT ACTIVE TEST

1. Turn ignition switch OFF.
2. Remove ignition keyhole illumination bulb.
3. Turn ignition switch ON.
4. Select "IGN ILLUM" of BCM (INT LAMP) active test item.
5. With operating the test item, check continuity between BCM harness connector and ground.

BCM		Ground	Test item	Continuity
Connector	Terminal		IGN ILLUM TEST	
M65	1		On	Existed
			Off	Not existed

Is the measurement value normal?

YES >> GO TO 2.

Fixed ON>>GO TO 3.

Fixed OFF>>Replace BCM.

### 2.CHECK IGNITION KEYHOLE ILLUMINATION OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and ignition keyhole illumination connector.
3. Check continuity between BCM harness connector and ignition keyhole illumination harness connector.

BCM		Ignition keyhole illumination		Continuity
Connector	Terminal	Connector	Terminal	
M65	1	M68	2	Existed

Does continuity exist?



# IGNITION KEYHOLE ILLUMINATION CONTROL CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

YES >> Replace ignition keyhole illumination.  
NO >> Repair harnesses or connectors.

### 3.CHECK IGNITION KEYHOLE ILLUMINATION SHORT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and ignition keyhole illumination connector.
3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M65	1		Not existed

#### Does continuity exist?

YES >> Repair harnesses or connectors.  
NO >> Replace BCM.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

# LUGGAGE ROOM LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## LUGGAGE ROOM LAMP CIRCUIT

### Description

INFOID:000000008280850

Controls the luggage room lamp (ground side) to turn the luggage room lamp ON and OFF.

### Component Function Check

INFOID:000000008280851

#### CAUTION:

Before performing the diagnosis, check that the following is normal.

- Interior room lamp power supply
- Luggage room lamp bulb

### 1.CHECK LUGGAGE ROOM LAMP OPERATION

#### CONSULT ACTIVE TEST

1. Turn ignition switch ON.
2. Select "LUGGAGE LAMP TEST" of BCM (INT LAMP) active test item.
3. With operating the test items, check that luggage room lamp turns ON/OFF.

On : Luggage room lamp ON

Off : Luggage room lamp OFF

Does the luggage room lamp turn ON/OFF?

- YES >> Luggage room lamp circuit is normal.  
NO >> Refer to [INL-26, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000008280852

### 1.CHECK LUGGAGE ROOM LAMP OUTPUT

#### CONSULT ACTIVE TEST

1. Turn ignition switch OFF.
2. Remove luggage room lamp bulb.
3. Turn ignition switch ON.
4. Select "LUGGAGE LAMP TEST" of BCM (INT LAMP) active test item.
5. With operating the test item, check continuity between BCM harness connector and ground.

BCM		Ground	Test item	Continuity
Connector	Terminal		LUGGAGE LAMP TEST	
M66	49		On	Existed
			Off	Not existed

Is the measurement value normal?

- YES >> GO TO 2.  
Fixed ON>>GO TO 3.  
Fixed OFF>>Replace BCM.

### 2.CHECK LUGGAGE ROOM LAMP OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and luggage room lamp connector.
3. Check continuity between BCM harness connector and luggage room lamp harness connector.

BCM		Luggage room lamp		Continuity
Connector	Terminal	Connector	Terminal	
M66	49	D155	4	Existed

Does continuity exist?

- YES >> Replace luggage room lamp.

LUGGAGE ROOM LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

NO     >> Repair harnesses or connectors.

3.CHECK LUGGAGE ROOM LAMP SHORT CIRCUIT

- 1. Turn ignition switch OFF.
- 2. Disconnect BCM connector and luggage room lamp connector.
- 3. Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M66	49		Not existed

Does continuity exist?

- YES     >> Repair harnesses or connectors.
- NO     >> Replace BCM.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P


# INTERIOR ROOM LAMP CONTROL SYSTEM


< DTC/CIRCUIT DIAGNOSIS >

## INTERIOR ROOM LAMP CONTROL SYSTEM

### Wiring Diagram - INTERIOR ROOM LAMP -


INFOID:000000008280853

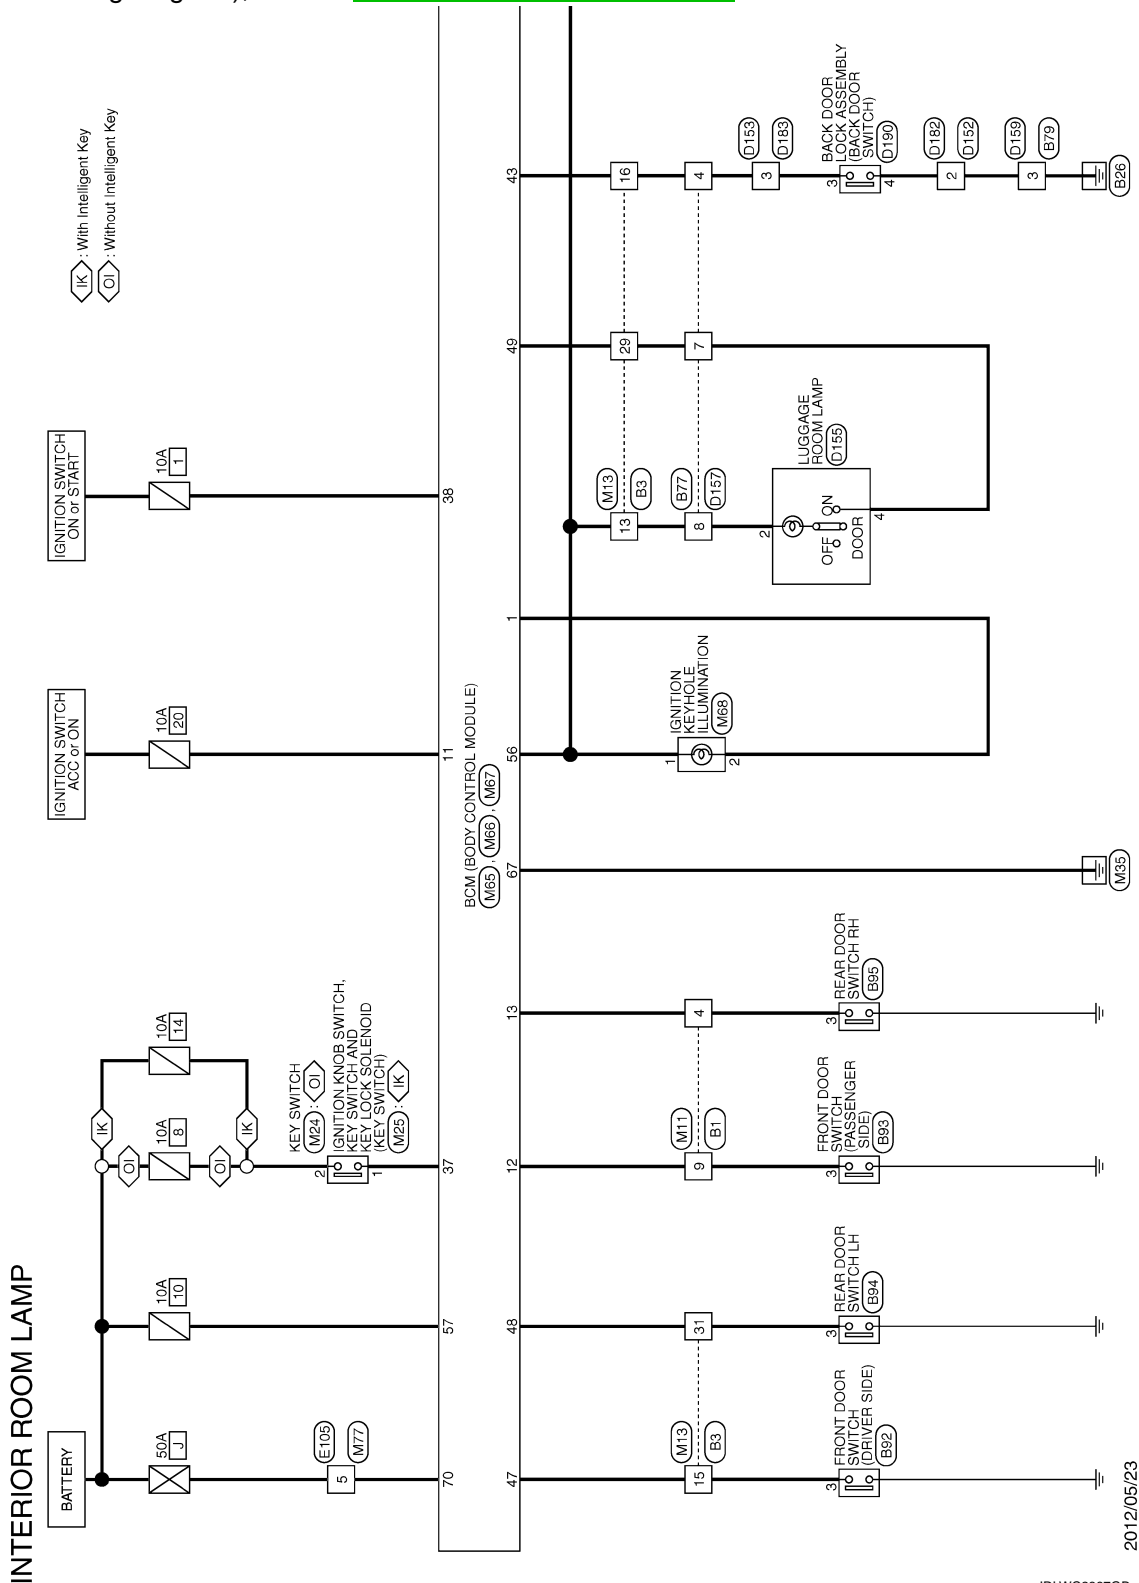For connector terminal arrangements, harness layouts, and alphabets in a  (option abbreviation; if not described in wiring diagram), refer to [GI-12, "Connector Information"](#).



## < DTC/CIRCUIT DIAGNOSIS >
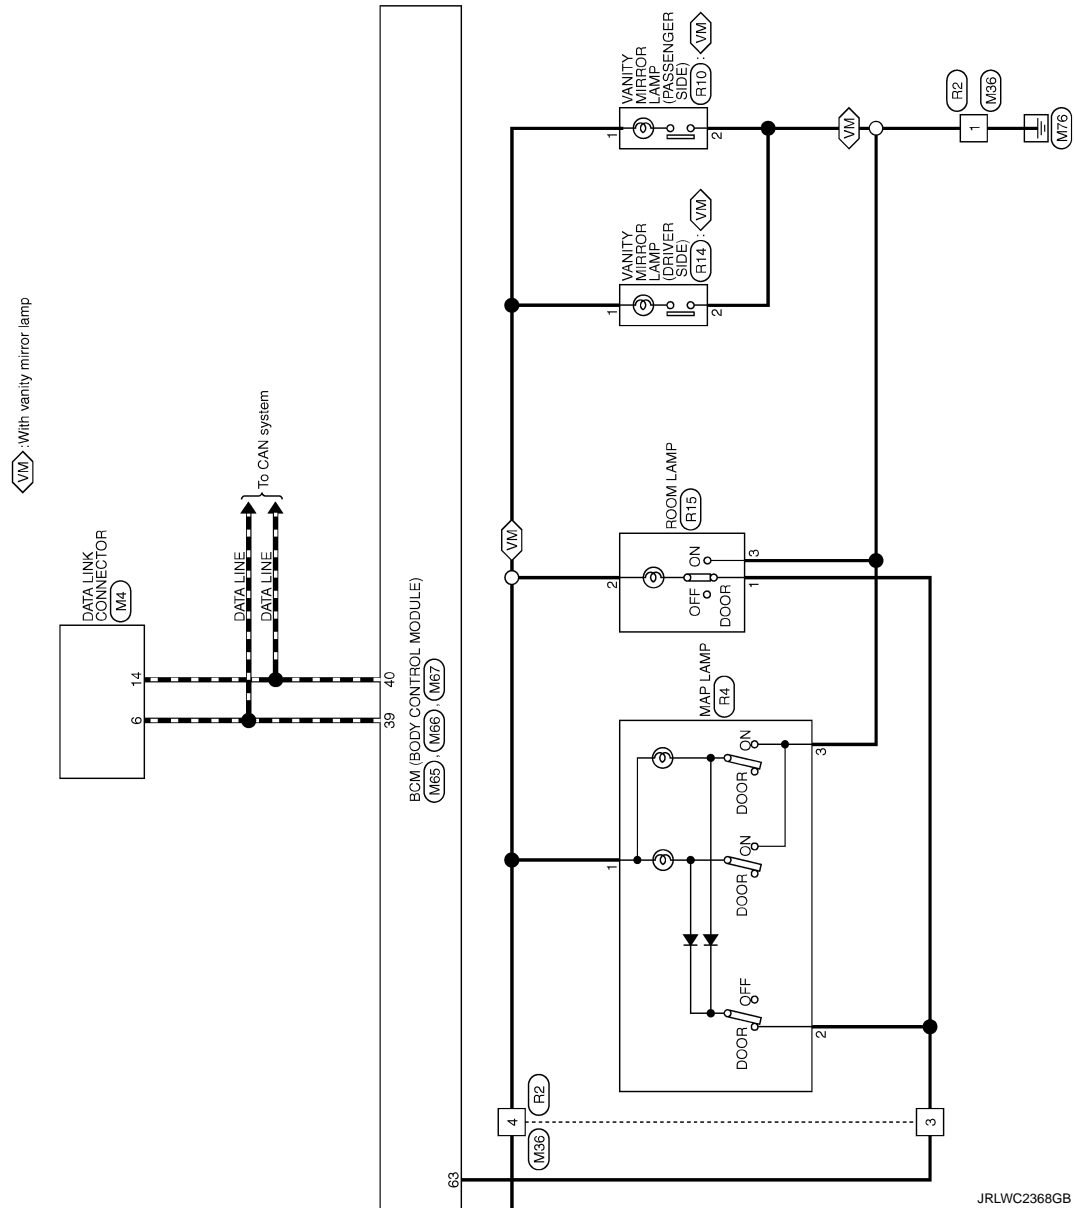
## < DTC/CIRCUIT DIAGNOSIS >




# ILLUMINATION


< DTC/CIRCUIT DIAGNOSIS >

## ILLUMINATION

### Wiring Diagram - ILLUMINATION -

INFOID:000000008280854

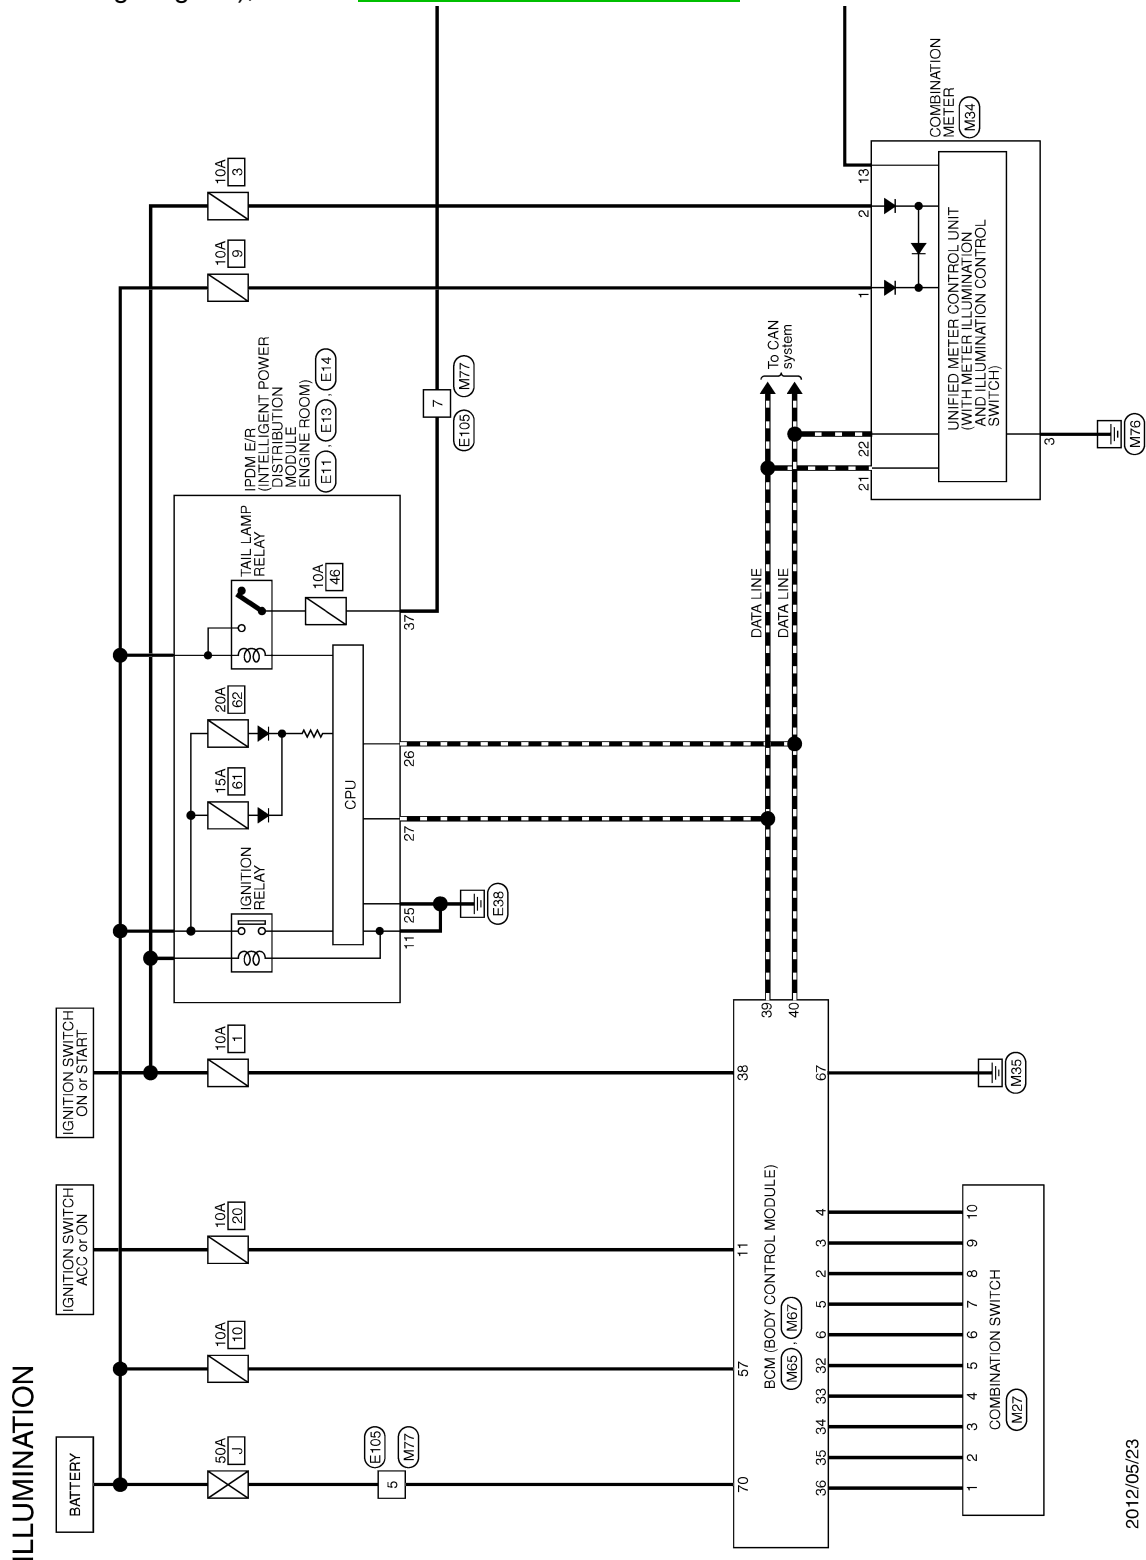For connector terminal arrangements, harness layouts, and alphabets in a  (option abbreviation; if not described in wiring diagram), refer to [GI-12, "Connector Information"](#).




2012/05/23

JRLWC2369GB

# ILLUMINATION
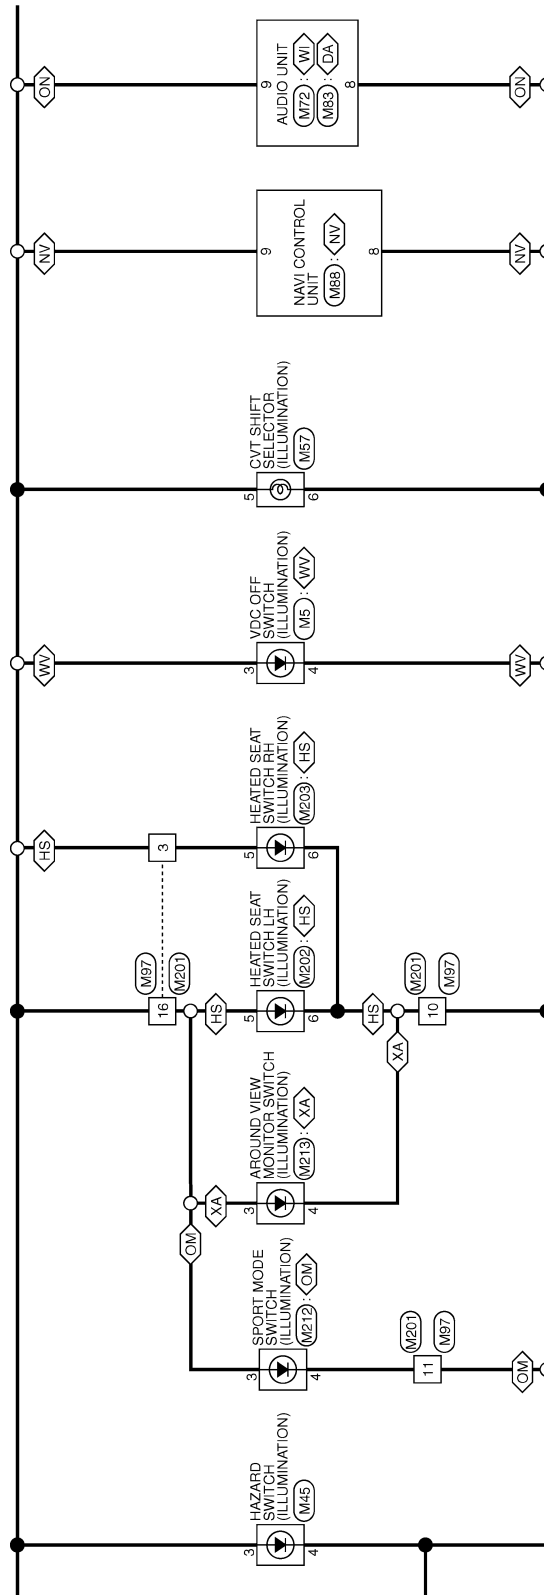
## < DTC/CIRCUIT DIAGNOSIS >

- AW: AWD models
- HS: With heated seat
- WV: With VDC
- HM: With headlamp manual aiming
- DA: With display audio
- NV: With navigation system
- ON: Without navigation system
- WI: With iPod
- XA: Except for Mexico with around view monitor
- OM: Without manual mode




JRLWC2370GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# ILLUMINATION
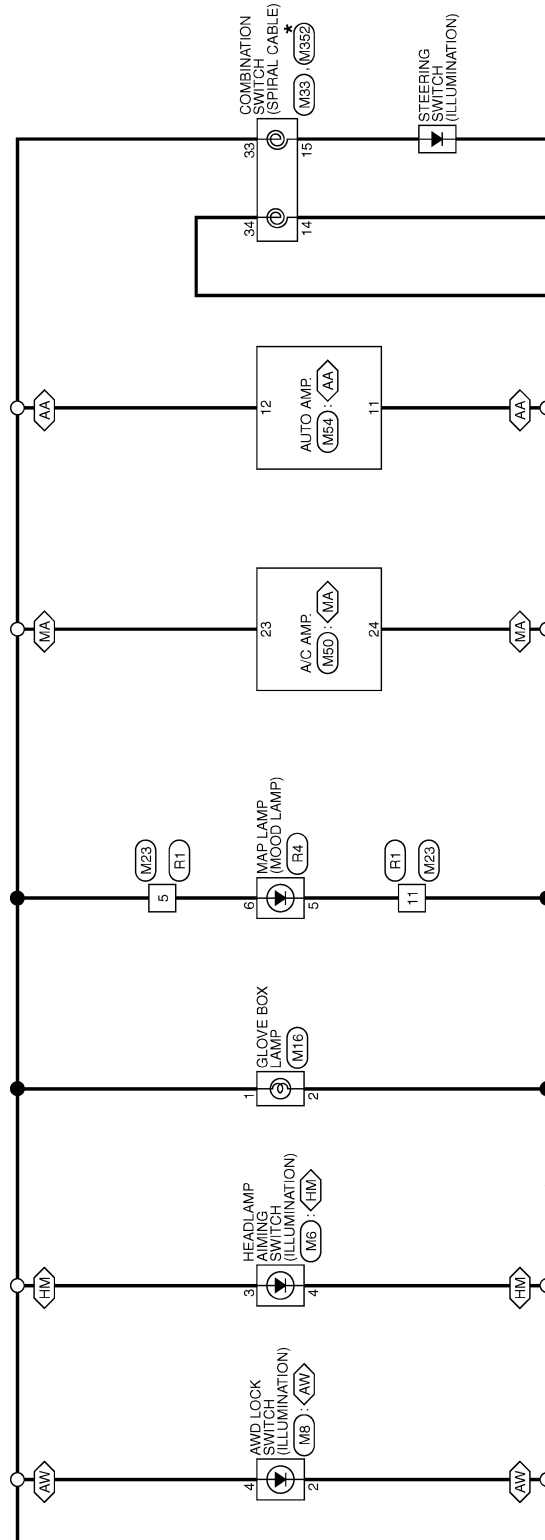
## < DTC/CIRCUIT DIAGNOSIS >

AA : With auto A/C  
MA : With manual A/C



\*: This connector is not shown in "Harness Layout".

JRLWC2371GB



# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## ECU DIAGNOSIS INFORMATION

### BCM (BODY CONTROL MODULE)

#### Reference Value

INFOID:000000008729031

#### VALUES ON THE DIAGNOSIS TOOL

##### NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor Item	Condition	Value/Status
IGN ON SW	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
KEY ON SW	Mechanical key is removed from key cylinder	Off
	Mechanical key is inserted to key cylinder	On
CDL LOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the lock side	On
CDL UNLOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the unlock side	On
DOOR SW-DR	Driver's door closed	Off
	Driver's door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	Rear RH door closed	Off
	Rear RH door opened	On
DOOR SW-RL	Rear LH door closed	Off
	Rear LH door opened	On
BACK DOOR SW	Back door closed	Off
	Back door opened	On
KEY CYL LK-SW	Other than driver door key cylinder LOCK position	Off
	Driver door key cylinder LOCK position	On
KEY CYL UN-SW	Other than driver door key cylinder UNLOCK position	Off
	Driver door key cylinder UNLOCK position	On
KEYLESS LOCK	"LOCK" button of key fob is not pressed	Off
	"LOCK" button of key fob is pressed	On
KEYLESS UNLOCK	"UNLOCK" button of key fob is not pressed	Off
	"UNLOCK" button of key fob is pressed	On
I-KEY LOCK	"LOCK" button of Intelligent Key or door request switch are not pressed	Off
	"LOCK" button of Intelligent Key or door request switch are pressed	On
I-KEY UNLOCK	"UNLOCK" button of Intelligent Key or door request switch are not pressed	Off
	"UNLOCK" button of Intelligent Key or door request switch are pressed	On
ACC ON SW	Ignition switch OFF	Off
	Ignition switch ACC or ON	On
REAR DEF SW	Rear window defogger switch OFF	Off
	Rear window defogger switch ON	On

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
LIGHT SW 1ST	Lighting switch OFF	Off
	Lighting switch 1ST	On
BUCKLE SW	The seat belt (driver side) is unfastened. [Seat belt switch (driver side) OFF]	Off
	The seat belt (driver side) is fastened. [Seat belt switch (driver side) ON]	On
KEYLESS PANIC	PANIC button of key fob is not pressed	Off
	PANIC button of key fob is pressed	On
KEYLESS TRUNK	<b>NOTE:</b> The item is indicated, but not monitored.	Off
TRNK OPN MNTR	<b>NOTE:</b> The item is indicated, but not monitored.	Off
RKE LCK-UNLCK	LOCK/UNLOCK button of key fob is not pressed and held simultaneously	Off
	LOCK/UNLOCK button of key fob is pressed and held simultaneously	On
RKE KEEP UNLK	UNLOCK button of key fob is not pressed	Off
	UNLOCK button of key fob is pressed and held	On
HI BEAM SW	Lighting switch OFF	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Lighting switch OFF	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Lighting switch OFF	Off
	Lighting switch 2ND	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
RR FOG SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off
TURN SIGNAL R	Turn signal switch OFF	Off
	Turn signal switch RH	On
TURN SIGNAL L	Turn signal switch OFF	Off
	Turn signal switch LH	On
ENGINE RUN	Engine stopped	Off
	Engine running	On
PKB SW	Parking brake switch is OFF	Off
	Parking brake switch is ON	On
CARGO LAMP SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V
	Dark outside of the vehicle	Close to 0 V
IGN SW CAN	Ignition switch OFF or ACC	Off
	Ignition switch ON	On

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
FR WIPER HI	Front wiper switch OFF	Off	A
	Front wiper switch HI	On	
FR WIPER LOW	Front wiper switch OFF	Off	B
	Front wiper switch LO	On	
FR WIPER INT	Front wiper switch OFF	Off	C
	Front wiper switch INT	On	
FR WASHER SW	Front washer switch OFF	Off	D
	Front washer switch ON	On	
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7	
FR WIPER STOP	Any position other than front wiper stop position	Off	E
	Front wiper stop position	On	
VEHICLE SPEED	While driving	Equivalent to speedometer reading	
RR WIPER ON	Rear wiper switch OFF	Off	F
	Rear wiper switch ON	On	
RR WIPER INT	Rear wiper switch OFF	Off	G
	Rear wiper switch INT	On	
RR WASHER SW	Rear washer switch OFF	Off	H
	Rear washer switch ON	On	
RR WIPER STOP	Rear wiper stop position	Off	I
	Other than rear wiper stop position	On	
RR WIPER STP2	<b>NOTE:</b> The item is indicated, but not monitored.	Off	
H/L WASH SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off	
HAZARD SW	Hazard switch OFF	Off	J
	Hazard switch ON	On	
BRAKE SW	Brake pedal is not depressed	Off	K
	Brake pedal is depressed	On	
FAN ON SIG	Blower fan motor switch OFF	Off	INL
	Blower fan motor switch ON (other than OFF)	On	
AIR COND SW	<ul style="list-style-type: none"> <li>A/C conditioner OFF (A/C switch indicator OFF) (Automatic air conditioner)</li> <li>A/C switch OFF (Manual air conditioner)</li> </ul>	Off	M
	<ul style="list-style-type: none"> <li>A/C conditioner ON (A/C switch indicator ON) (Automatic air conditioner)</li> <li>A/C switch ON (Manual air conditioner)</li> </ul>	On	
I-KEY TRUNK	<b>NOTE:</b> The item is indicated, but not monitored.	Off	
I-KEY PW DWN	UNLOCK button of Intelligent Key is not pressed	Off	O
	UNLOCK button of Intelligent Key is pressed and held	On	
I-KEY PANIC	PANIC button of Intelligent Key is not pressed	Off	P
	PANIC button of Intelligent Key is pressed	On	
PUSH SW	Return to ignition switch to "LOCK" position	Off	
	Press ignition switch	On	
TRNK OPNR SW	When back door opener switch is not pressed	Off	
	When back door opener switch is pressed	On	

## BCM (BODY CONTROL MODULE)

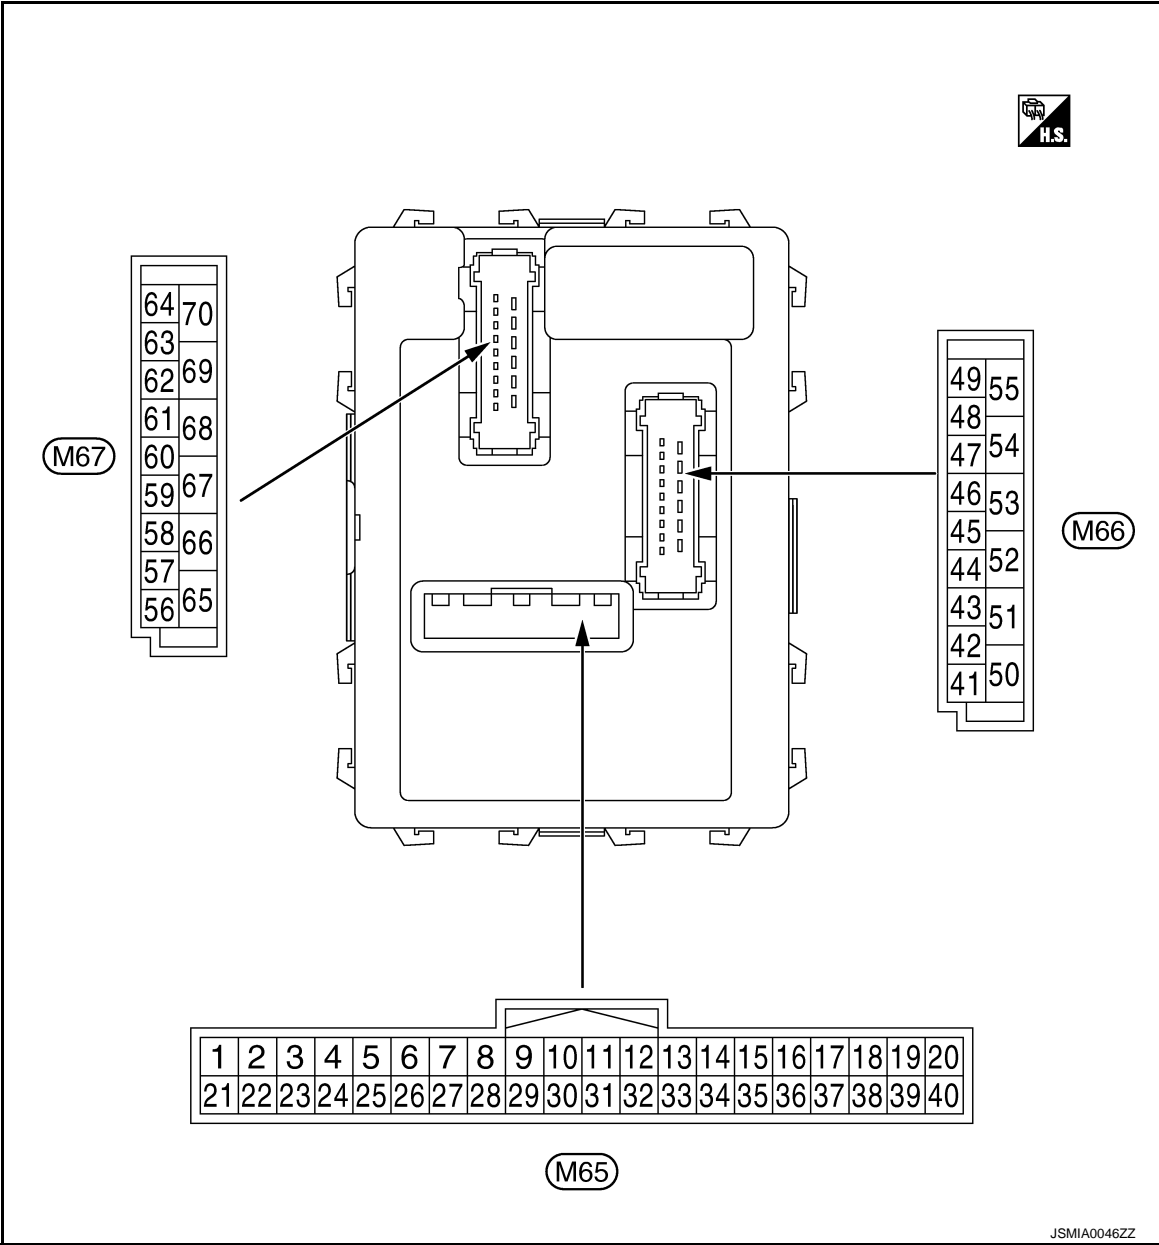
### < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
TRUNK CYL SW	<b>NOTE:</b> The item is indicated, but not monitored.	Off
HOOD SW	Close the hood <b>NOTE:</b> Vehicles of except for Mexico are OFF-fixed	Off
	Open the hood	On
OIL PRESS SW	<ul style="list-style-type: none"> <li>Ignition switch OFF or ACC</li> <li>Engine running</li> </ul>	Off
	Ignition switch ON	On
AIR PRESS FL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front LH tire
AIR PRESS FR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of front RH tire
AIR PRESS RR	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear RH tire
AIR PRESS RL	Ignition switch ON (Only when the signal from the transmitter is received)	Air pressure of rear LH tire
ID REGST FL1	ID of front LH tire transmitter is registered	Done
	ID of front LH tire transmitter is not registered	Yet
ID REGST FR1	ID of front RH tire transmitter is registered	Done
	ID of front RH tire transmitter is not registered	Yet
ID REGST RR1	ID of rear RH tire transmitter is registered	Done
	ID of rear RH tire transmitter is not registered	Yet
ID REGST RL1	ID of rear LH tire transmitter is registered	Done
	ID of rear LH tire transmitter is not registered	Yet
WARNING LAMP	Tire pressure indicator OFF	Off
	Tire pressure indicator ON	On
BUZZER	Tire pressure warning alarm is not sounding	Off
	Tire pressure warning alarm is sounding	On

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## TERMINAL LAYOUT



## PHYSICAL VALUES

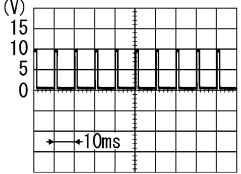
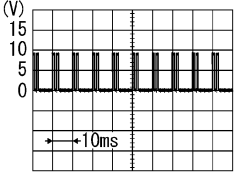
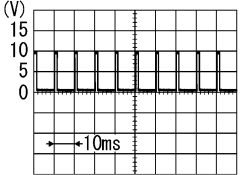
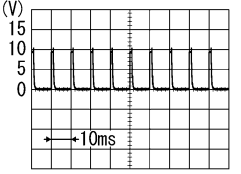
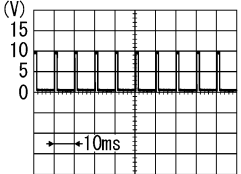
### CAUTION:

- Check combination switch system terminal waveform under the loaded condition with lighting switch, turn signal switch and wiper switch OFF is not to be fluctuated by being overloaded.
- Turn wiper intermittent dial position to 4 except when checking waveform or voltage of wiper intermittent dial position. Wiper intermittent dial position can be confirmed on CONSULT. Refer to [BCS-26, "COMB SW : CONSULT Function \(BCM - COMB SW\)"](#).
- BCM reads the status of the combination switch at 10 ms internal normally. Refer to [BCS-9, "System Diagram"](#).

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (V)	Ground	Ignition key hole illumination control	Output	Ignition key hole illumination	OFF	Battery voltage
					ON	0 V

# BCM (BODY CONTROL MODULE)






## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
2 (G)	Ground	Combination switch INPUT 5	Input	All switch OFF	0 V
				Turn signal switch RH	
				Lighting switch HI	
				Lighting switch 1ST	
				Lighting switch 2ND	 2.0 V
3 (Y)	Ground	Combination switch INPUT 4	Input	All switch OFF	0 V
				Turn signal switch LH	
				Lighting switch PASS	
				Lighting switch 2ND	
				Front fog lamp switch ON	 0.8 V
4 (W)	Ground	Combination switch INPUT 3	Input	All switch OFF	0 V
				Lighting switch AUTO	
				Front wiper switch LO	
				Front wiper switch MIST	
				Front wiper switch INT	

1.0 V

# BCM (BODY CONTROL MODULE)

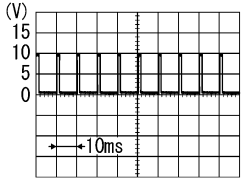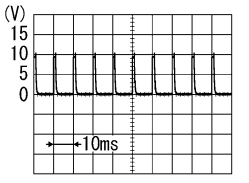
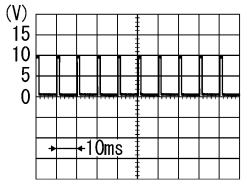
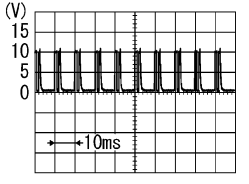
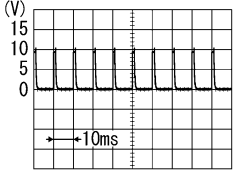
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	−	Signal name	Input/ Output			
5 (R)	Ground	Combination switch INPUT 2	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	0 V
					Front washer switch (Wiper intermittent dial 4)	 1.0 V
					Rear washer ON (Wiper intermittent dial 4)	
					Any of the condition below with all switch OFF <ul style="list-style-type: none"><li>• Wiper intermittent dial 1</li><li>• Wiper intermittent dial 5</li><li>• Wiper intermittent dial 6</li></ul>	
					Rear wiper switch ON (Wiper intermittent dial 4)	 0.8 V
6 (BG)	Ground	Combination switch INPUT 1	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	0 V
					Front wiper switch HI (Wiper intermittent dial 4)	 1.0 V
					Rear wiper switch INT (Wiper intermittent dial 4)	
					Wiper intermittent dial 3 (All switch OFF)	
					Any of the condition below with all switch OFF <ul style="list-style-type: none"><li>• Wiper intermittent dial 1</li><li>• Wiper intermittent dial 2</li></ul>	 1.7 V
					Any of the condition below with all switch OFF <ul style="list-style-type: none"><li>• Wiper intermittent dial 6</li><li>• Wiper intermittent dial 7</li></ul>	 0.8 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)

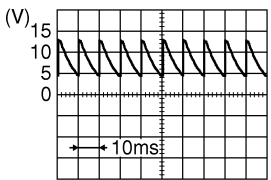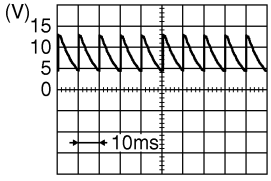
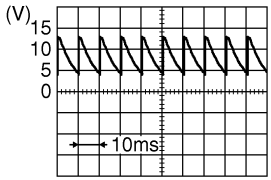
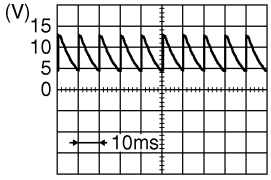
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
7 (V)	Ground	Door key cylinder switch UNLOCK signal	Input	Door key cylinder switch	NEUTRAL position	 <p>JPMIA0587GB</p> <p>8.0 - 8.5 V</p>
				Door key cylinder switch	UNLOCK position	0 V
8 (R)	Ground	Door key cylinder switch LOCK signal	Input	Door key cylinder switch	NEUTRAL position	 <p>JPMIA0587GB</p> <p>8.0 - 8.5 V</p>
				Door key cylinder switch	LOCK position	0 V
9 (R)	Ground	Stop lamp switch	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V
				Stop lamp switch	ON (Brake pedal is depressed)	Battery voltage
10 (SB)	Ground	Rear window defogger switch	Input	Rear window defogger switch	Not pressed	Battery voltage
				Rear window defogger switch	Pressed	0 V
11 (SB)	Ground	Ignition switch ACC	Input	Ignition switch OFF		0 V
				Ignition switch ACC or ON		Battery voltage
12 (BG)	Ground	Passenger door switch	Input	Passenger door switch	OFF (When passenger door closed)	 <p>JPMIA0586GB</p> <p>7.5 - 8.0 V</p>
				Passenger door switch	ON (When passenger door opened)	0 V
13 (LG)	Ground	Rear door switch RH	Input	Rear door switch RH	OFF (When rear door RH closed)	 <p>JPMIA0587GB</p> <p>8.0 - 8.5 V</p>
				Rear door switch RH	ON (When rear door RH opened)	0 V



# BCM (BODY CONTROL MODULE)
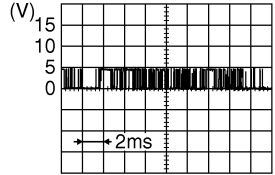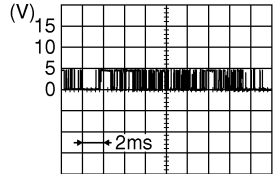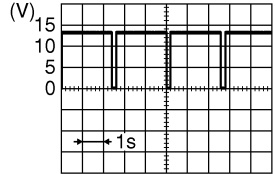
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
14 (G)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V
					When dark outside of the vehicle	Close to 0 V
17 (W)	Ground	Optical sensor pow- er supply	Output	Ignition switch	OFF, ACC	0 V
					ON	5 V
18* (R)	Ground	Receiver and sensor ground	Input	Ignition switch ON		0 V
19* (V)	Ground	Remote keyless en- try receiver power supply	Input	Without Intelli- gent Key sys- tem	At any condition	5 V
				With Intelligent Key system	<ul style="list-style-type: none"> <li>Ignition switch OFF</li> <li>For 3 seconds after ig- nition switch OFF to ON</li> </ul>	0 V
					3 seconds or later after ig- nition switch OFF to ON	5 V
20* (GR)	Ground	Remote keyless en- try receiver signal	Input	Without Intelli- gent Key sys- tem	At any condition	 <p>JPMIA0589GB</p> <p><b>NOTE:</b> The wave form changes accord- ing to signal-receiving condition.</p>
						0 V
				With Intelligent Key system	<ul style="list-style-type: none"> <li>Ignition switch OFF</li> <li>For 3 seconds after ig- nition switch OFF to ON</li> </ul>	0 V
					3 seconds or later after ig- nition switch OFF to ON	 <p>JPMIA0589GB</p> <p><b>NOTE:</b> The wave form changes accord- ing to signal-receiving condition.</p>
21 (G)	Ground	NATS antenna amp.	Input/ Output	Just after inserting ignition key in key cylinder		Pointer of tester should move
23 (B)	Ground	Security indicator signal	Input	Security indica- tor	ON	0 V
					Blinking (Ignition switch OFF)	 <p>JPMIA0590GB</p> <p>12.0 V</p>
					OFF	Battery voltage

A

B

C

D

E

F

G

H

I

J

K

INL

M





N

O

P





# BCM (BODY CONTROL MODULE)
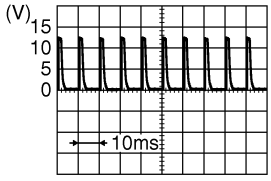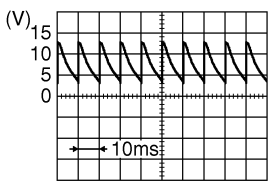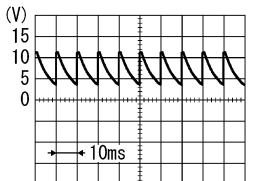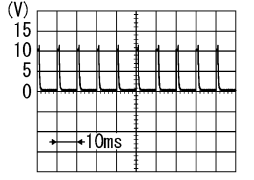
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
25 (BR)	Ground	NATS antenna amp.	Input/ Output	Just after inserting ignition key in key cylinder		Pointer of tester should move
27 (Y)	Ground	A/C switch	Input	Ignition switch OFF		
				Ignition switch ON	A/C switch OFF	
					A/C switch ON	0 V
28 (LG)	Ground	Blower fan switch	Input	Ignition switch OFF		
				Ignition switch ON	Blower fan switch OFF	
					Blower fan switch ON	0 V
29 (W)	Ground	Hazard switch	Input	Hazard switch	OFF	Battery voltage
					ON	0 V
30 (G)	Ground	Back door opener switch	Input	Back door opener switch	Not pressed	Battery voltage
					Pressed	0 V
32 (BR)	Ground	Combination switch OUTPUT 5	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	
					Front fog lamp switch ON (Wiper intermittent dial 4)	
					Rear wiper switch ON (Wiper intermittent dial 4)	
					Any of the condition below with all switch OFF <ul style="list-style-type: none"> <li>Wiper intermittent dial 1</li> <li>Wiper intermittent dial 2</li> <li>Wiper intermittent dial 6</li> <li>Wiper intermittent dial 7</li> </ul>	0 V

# BCM (BODY CONTROL MODULE)

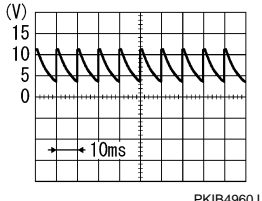
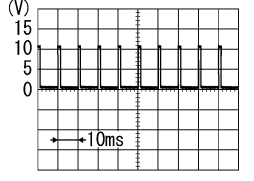
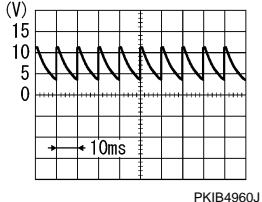
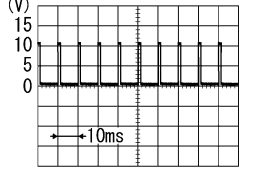
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
33 (GR)	Ground	Combination switch OUTPUT 4	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	 <p>7.2 V</p>
					Lighting switch 1ST (Wiper intermittent dial 4)	 <p>1.2 V</p>
					Lighting switch AUTO (Wiper intermittent dial 4)	
					Rear wiper switch INT (Wiper intermittent dial 4)	
					Any of the condition below with all switch OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 5</li> <li>• Wiper intermittent dial 6</li> </ul>	
34 (SB)	Ground	Combination switch OUTPUT 3	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	 <p>7.2 V</p>
					Lighting switch 2ND (Wiper intermittent dial 4)	 <p>1.2 V</p>
					Lighting switch HI (Wiper intermittent dial 4)	
					Rear washer switch ON (Wiper intermittent dial 4)	
					Any of the condition below with all switch OFF <ul style="list-style-type: none"> <li>• Wiper intermittent dial 1</li> <li>• Wiper intermittent dial 2</li> <li>• Wiper intermittent dial 3</li> </ul>	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P





# BCM (BODY CONTROL MODULE)
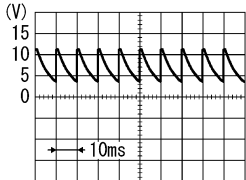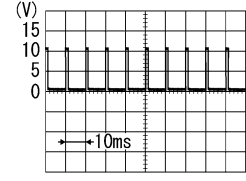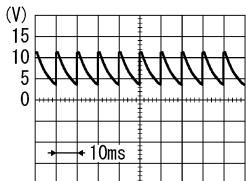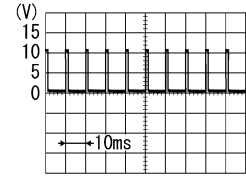
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
35 (B)	Ground	Combination switch OUTPUT 2	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	 7.2 V
					Lighting switch 2ND	 1.2 V
					Lighting switch PASS	
					Front wiper switch INT	
					Front wiper switch HI	
36 (V)	Ground	Combination switch OUTPUT 1	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	 7.2 V
					Turn signal switch RH	 1.2 V
					Turn signal switch LH	
					Front wiper switch LO (Front wiper switch MIST)	
					Front washer switch ON	
37 (LG)	Ground	Key switch	Input	Insert mechanical key into ignition key cylinder		Battery voltage
				Remove mechanical key from ignition key cylinder		0 V
38 (G)	Ground	Ignition switch ON	Input	Ignition switch OFF or ACC		0 V
				Ignition switch ON or START		Battery voltage
39 (L)	Ground	CAN-H	Input/ Output	—		—
40 (P)	Ground	CAN-L	Input/ Output	—		—

# BCM (BODY CONTROL MODULE)

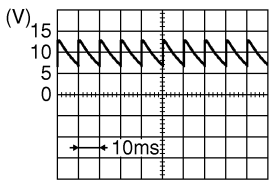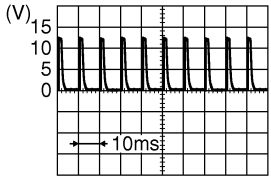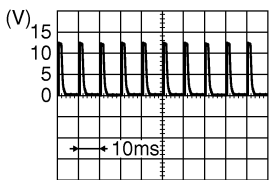
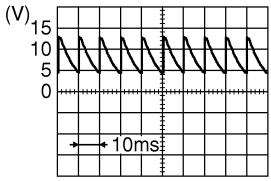
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
43 (V)	Ground	Back door switch	Input	Back door switch	OFF (When back door closed)	 <p>JPMIA0593GB</p> <p>9.5 - 10.0 V</p>
				Back door switch	ON (When back door opened)	0 V
44 (B)	Ground	Rear wiper auto stop position	Input	Ignition switch	Rear wiper stop position	0 V
				ON	Any position other than rear wiper stop position	Battery voltage
45 (P)	Ground	Door lock and unlock switch LOCK signal	Input	Door lock and unlock switch	NEUTRAL position	 <p>JPMIA0591GB</p> <p>1.6 V</p>
				Door lock and unlock switch	LOCK position	0 V
46 (BR)	Ground	Door lock and unlock switch UNLOCK signal	Input	Door lock and unlock switch	NEUTRAL position	 <p>JPMIA0591GB</p> <p>1.6 V</p>
				Door lock and unlock switch	UNLOCK position	0 V
47 (W)	Ground	Driver door switch	Input	Driver door switch	OFF (When driver door closed)	 <p>JPMIA0587GB</p> <p>8.0 - 8.5 V</p>
				Driver door switch	ON (When driver door opened)	0 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P


# BCM (BODY CONTROL MODULE)
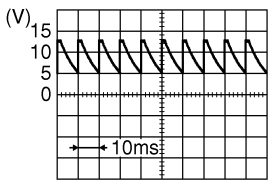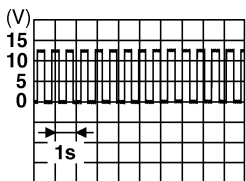
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
48 (GR)	Ground	Rear door switch LH	Input	Rear door switch LH	OFF (When rear door LH closed)	 8.5 - 9.0 V
				Rear door switch LH	ON (When rear door LH opened)	0 V
49 (L)	Ground	Luggage room lamp control	Output	Luggage room lamp switch DOOR position	Back door is closed (Luggage room lamp turns OFF)	Battery voltage
					Back door is opened (Luggage room lamp turns ON)	0 V
53 (V)	Ground	Back door open	Output	Back door opener switch	Not pressed (Back door actuator is activated)	0 V
					Pressed (Back door actuator is activated)	Battery voltage
55 (SB)	Ground	Rear wiper motor	Output	Ignition switch ON	Rear wiper switch OFF	0 V
					Rear wiper switch ON	Battery voltage
56 (Y)	Ground	Interior room lamp power supply	Output	After passing the interior room lamp battery saver operation time		0 V
				Any other time after passing the interior room lamp battery saver operation time		Battery voltage
57 (G)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
59 (L)	Ground	Driver door UN-LOCK	Output	Driver door	UNLOCK (Actuator is activated)	Battery voltage
					Other then UNLOCK (Actuator is not activated)	0 V
60 (BR)	Ground	Turn signal LH	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch LH	 6.0 V

# BCM (BODY CONTROL MODULE)
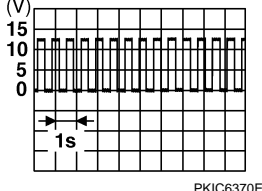
## < ECU DIAGNOSIS INFORMATION >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
61 (GR)	Ground	Turn signal RH	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 6.0 V
63 (R)	Ground	Interior room lamp timer control	Output	Interior room lamp	OFF	Battery voltage
					ON	0 V
65 (V)	Ground	All doors LOCK	Output	All doors	LOCK (Actuator is activated)	Battery voltage
					Other then LOCK (Actuator is not activated)	0 V
66 (G)	Ground	Passenger door and rear door UNLOCK	Output	Passenger door and rear door	UNLOCK (Actuator is activated)	Battery voltage
					Other then UNLOCK (Actuator is not activated)	0 V
67 (B)	Ground	Ground	Output	Ignition switch ON		0 V
68 (L)	Ground	P/W power supply (RAP)	Output	Ignition switch ON		Battery voltage
69 (P)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		Battery voltage
70 (Y)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage

\*: Except for Mexico with Intelligent Key


INL


# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## Wiring Diagram - BCM -

INFOID:000000008729032

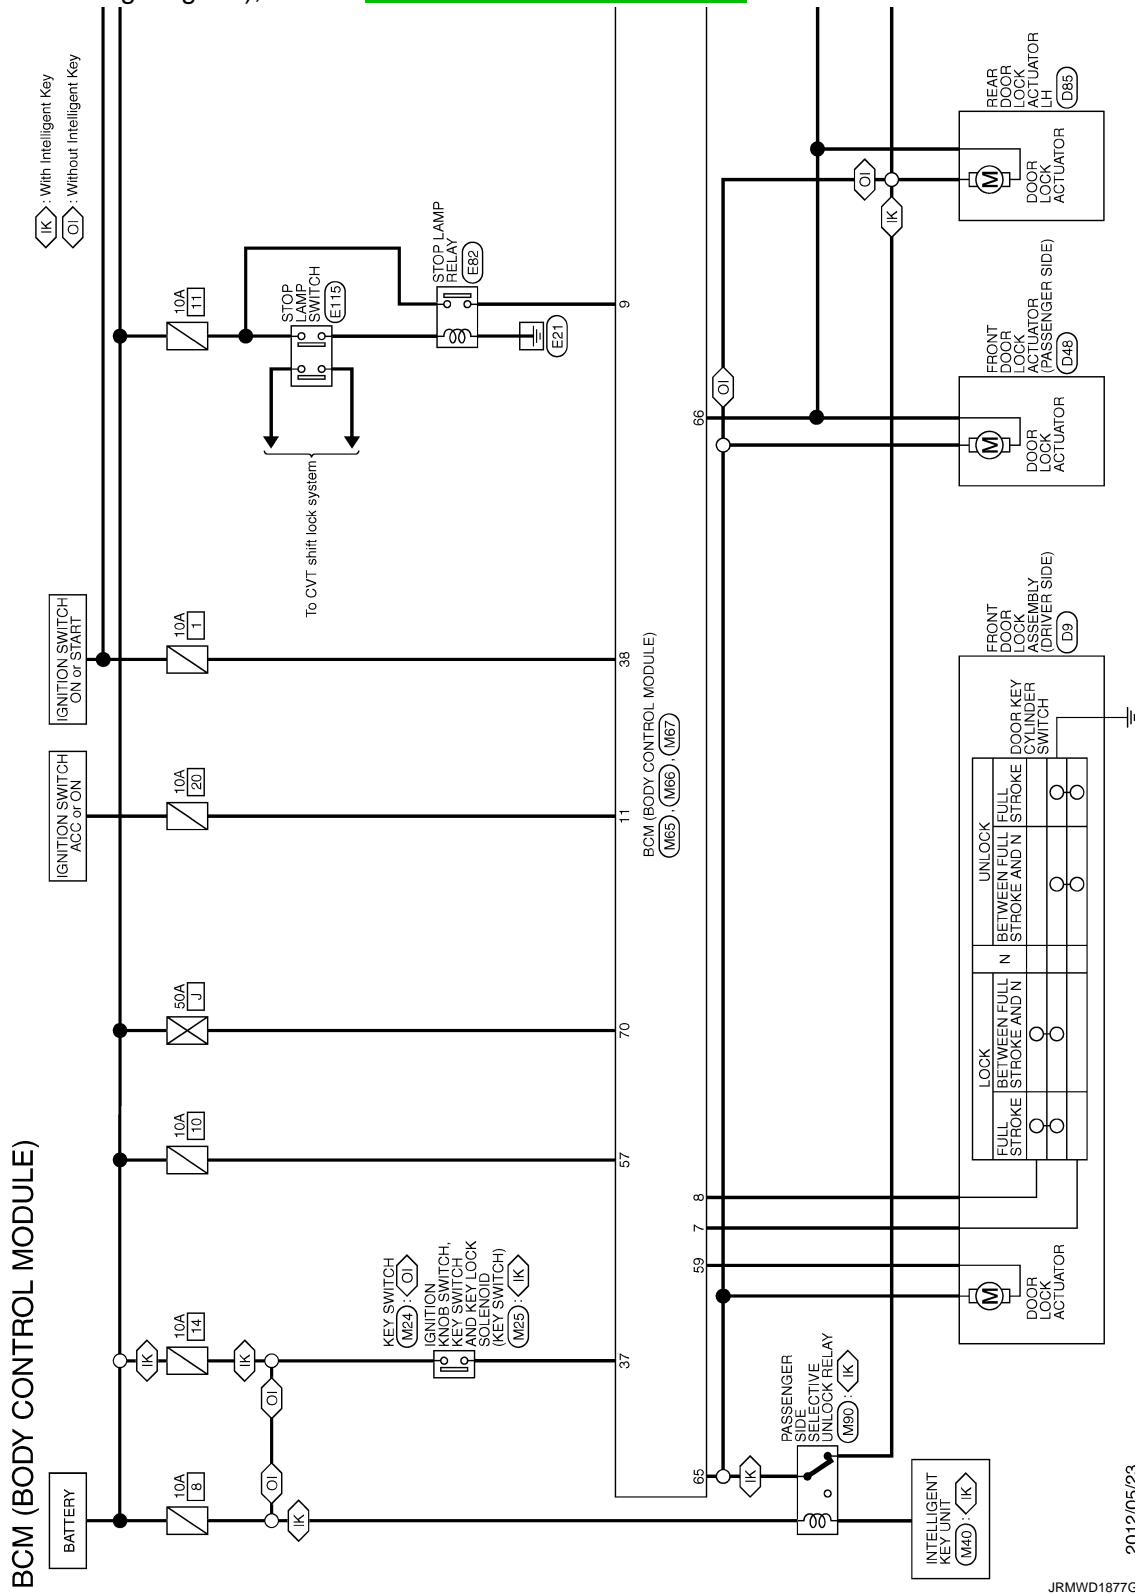For connector terminal arrangements, harness layouts, and alphabets in a  (option abbreviation; if not described in wiring diagram), refer to [GI-12, "Connector Information"](#).



2012/05/23

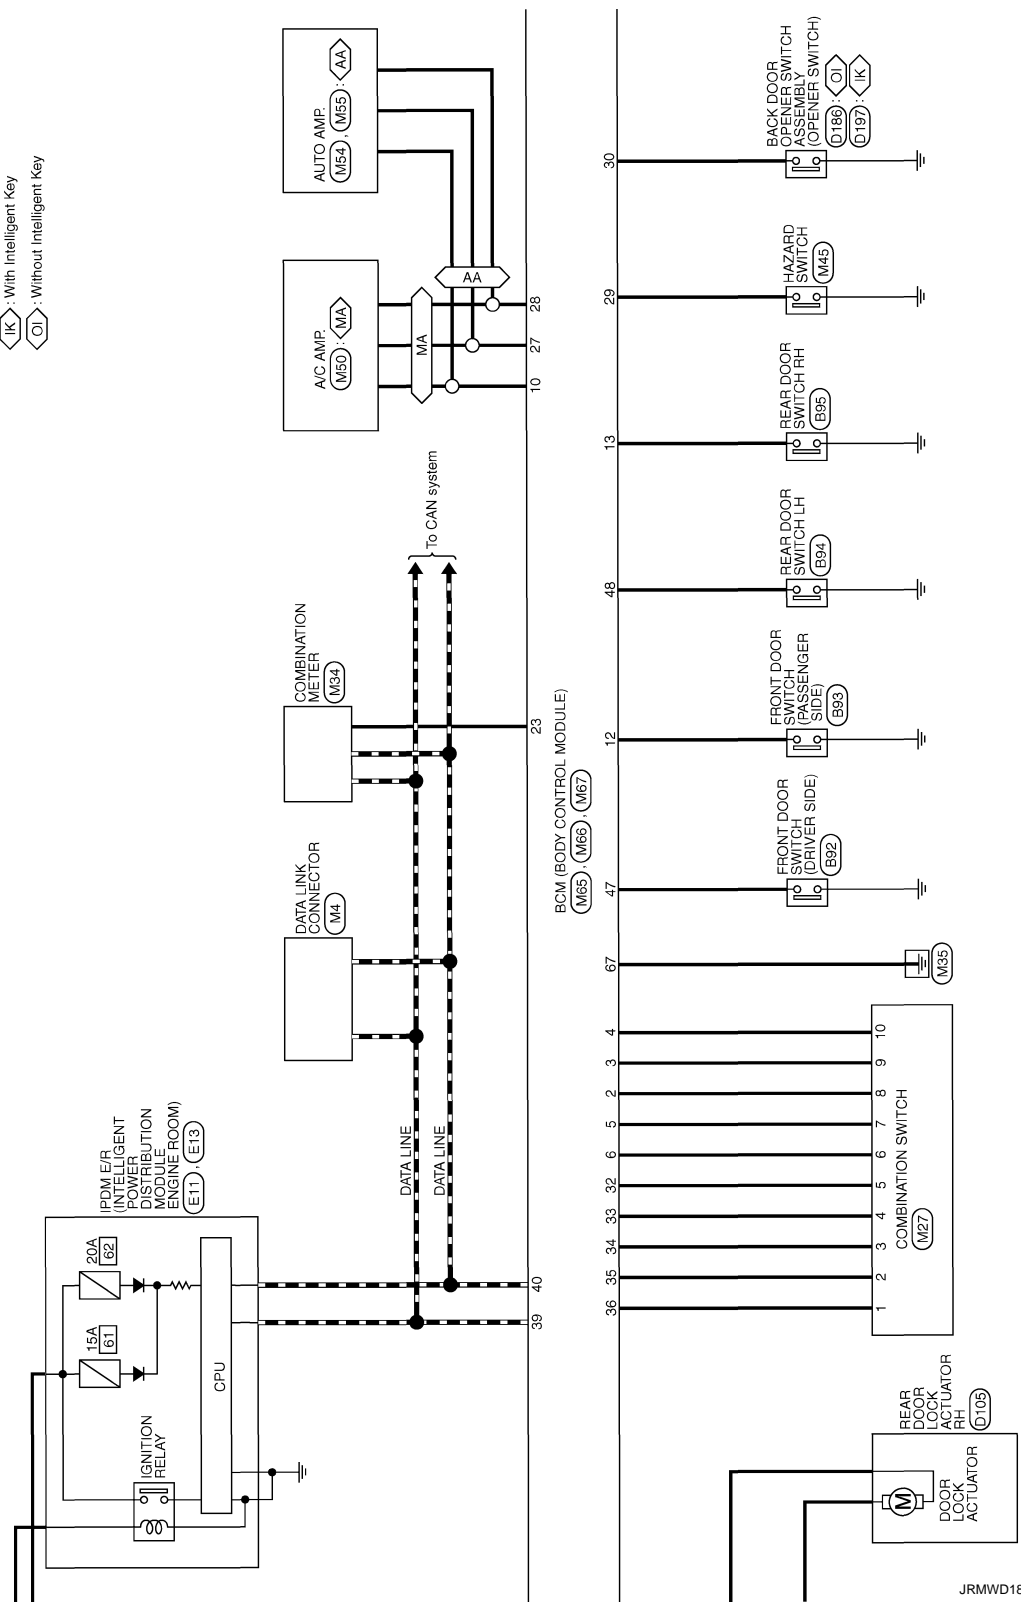
JRMWD1877GB



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

- AA : With auto A/C
- MA : With manual A/C
- IK : With Intelligent Key
- OI : Without Intelligent Key




JRMWD1878GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

# BCM (BODY CONTROL MODULE)
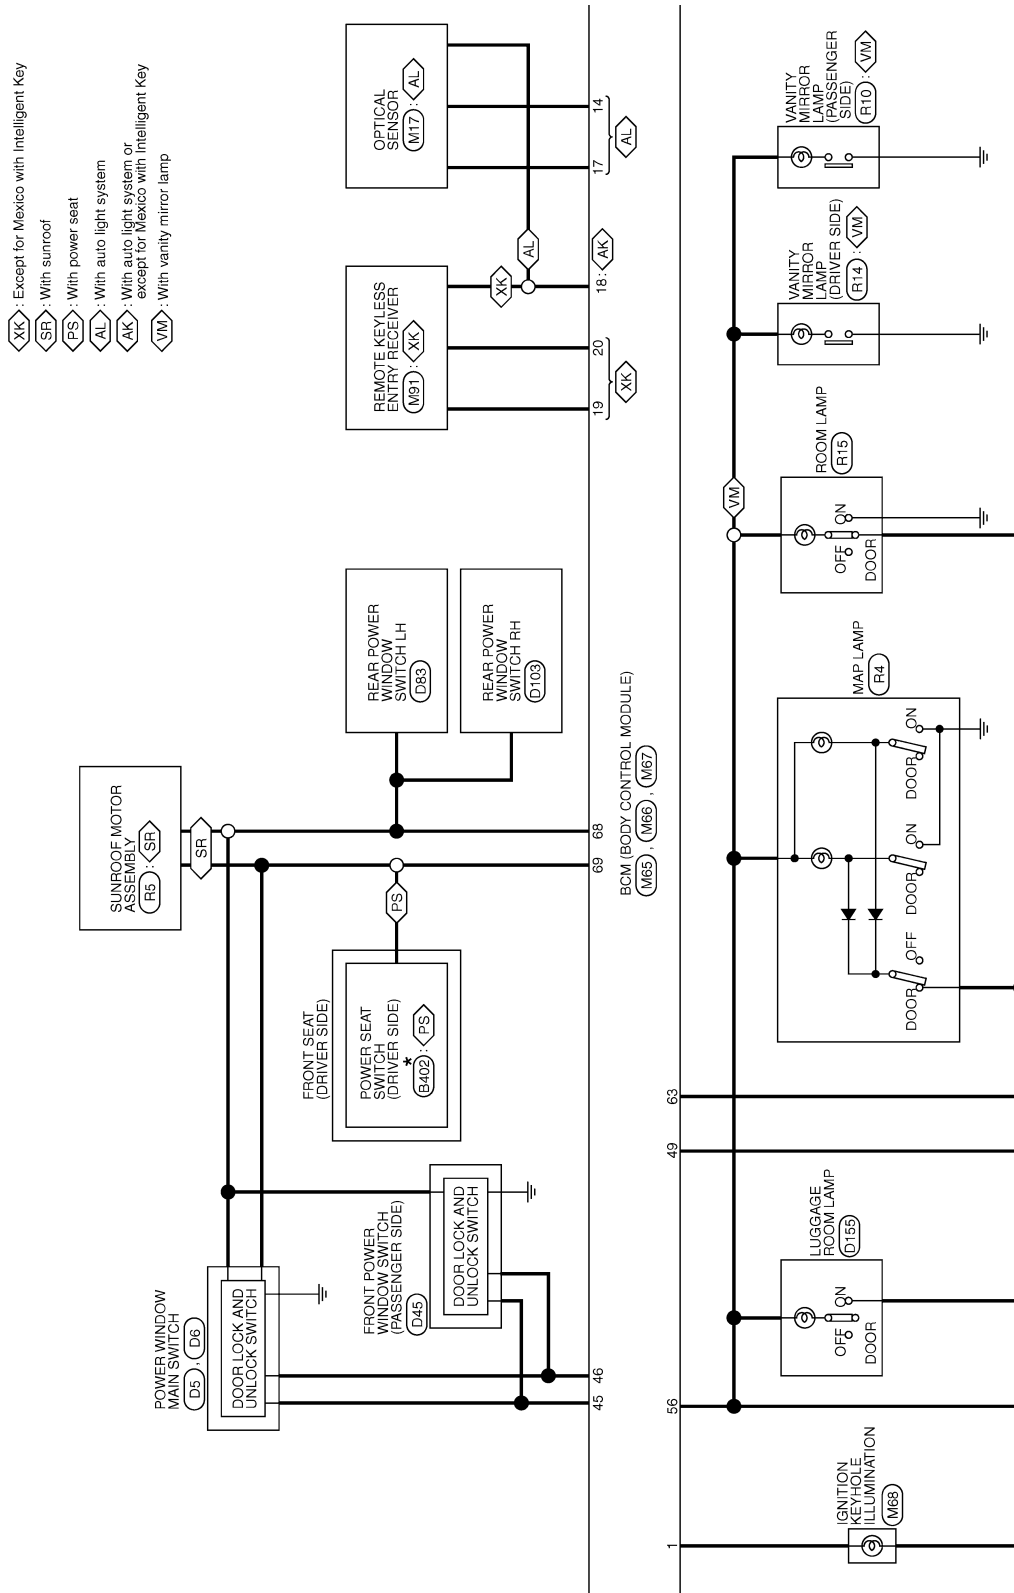
< ECU DIAGNOSIS INFORMATION >




★ : This connector is not shown in "Harness Layout".

JRMWD1879GB

# BCM (BODY CONTROL MODULE)
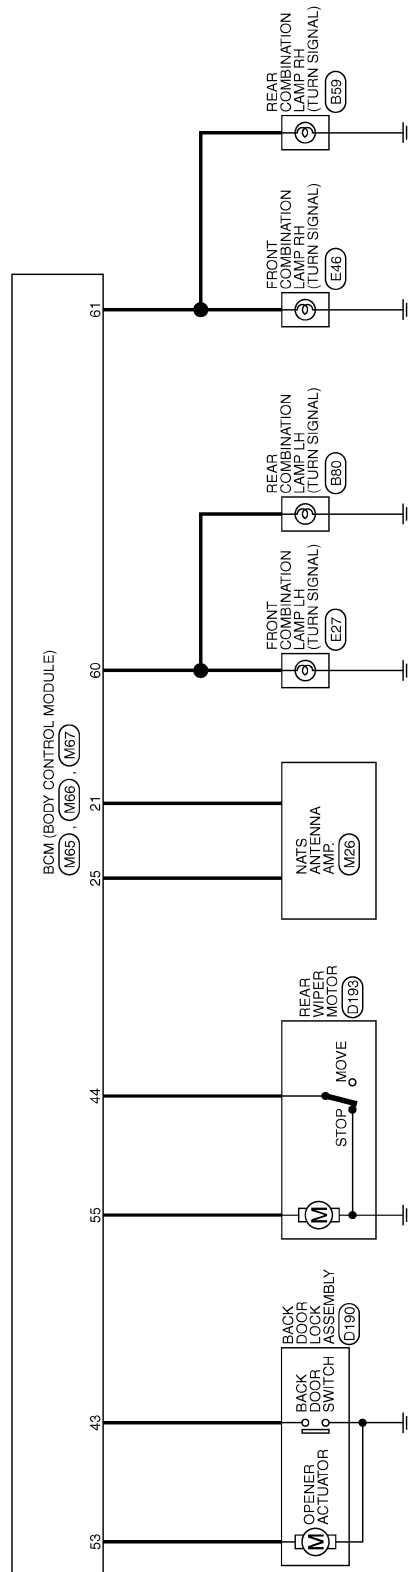
< ECU DIAGNOSIS INFORMATION >



JRMWD1880GB

INFOID:000000008729033

## Fail-safe

### REAR WIPER MOTOR PROTECTION

BCM detects the rear wiper stopping position according to the rear wiper stop position signal. When the rear wiper stop position signal does not change more than 5 seconds while driving the rear wiper, BCM stops power supply to protect the rear wiper motor.

Condition of cancellation

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

1. Pass more than 1 minute after the rear wiper stop.
2. Turn the rear wiper switch OFF.
3. Operate the rear wiper switch or rear washer switch.

### DTC Inspection Priority Chart

INFOID:000000008729034

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	U1000: CAN COMM CIRCUIT
2	C1735: IGN CIRCUIT OPEN
3	<ul style="list-style-type: none"> <li>• C1704: LOW PRESSURE FL</li> <li>• C1705: LOW PRESSURE FR</li> <li>• C1706: LOW PRESSURE RR</li> <li>• C1707: LOW PRESSURE RL</li> <li>• C1708: [NO DATA] FL</li> <li>• C1709: [NO DATA] FR</li> <li>• C1710: [NO DATA] RR</li> <li>• C1711: [NO DATA] RL</li> <li>• C1716: [PRESS DATA ERR] FL</li> <li>• C1717: [PRESS DATA ERR] FR</li> <li>• C1718: [PRESS DATA ERR] RR</li> <li>• C1719: [PRESS DATA ERR] RL</li> <li>• C1729: VHCL SPEED SIG ERR</li> </ul>

### DTC Index

INFOID:000000008729035

#### NOTE:

- Details of time display
- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Tire pressure monitor warning lamp ON	Reference
U1000: CAN COMM CIRCUIT	—	<a href="#">BCS-34</a>
C1704: LOW PRESSURE FL	×	<a href="#">WT-14</a>
C1705: LOW PRESSURE FR	×	
C1706: LOW PRESSURE RR	×	
C1707: LOW PRESSURE RL	×	
C1708: [NO DATA] FL	×	<a href="#">WT-16</a>
C1709: [NO DATA] FR	×	
C1710: [NO DATA] RR	×	
C1711: [NO DATA] RL	×	
C1716: [PRESS DATA ERR] FL	×	<a href="#">WT-19</a>
C1717: [PRESS DATA ERR] FR	×	
C1718: [PRESS DATA ERR] RR	×	
C1719: [PRESS DATA ERR] RL	×	
C1729: VHCL SPEED SIG ERR	×	<a href="#">WT-21</a>
C1735: IGN CIRCUIT OPEN	—	<a href="#">BCS-35</a>

# INTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### INTERIOR LIGHTING SYSTEM SYMPTOMS

#### Symptom Table

INFOID:0000000008280860

#### CAUTION:

Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

Symptom	Possible cause	Inspection item
All the following lamps do not turn ON. • Map lamp • Room lamp • Ignition keyhole illumination • Vanity mirror lamp • Luggage room lamp	• Harness between BCM and each interior room lamp • BCM	Interior room lamp power supply circuit Refer to <a href="#">INL-20</a> .
• Interior room lamp does not turn ON even though the door is open. (It turns ON when turning the interior room lamp ON.) • Interior room lamp does not turn OFF even though the door is closed.	• Harness between BCM and each door switch • Harness between BCM and each interior room lamp • BCM	Each door switch circuit Refer to <a href="#">DLK-276</a> . Interior room lamp control circuit Refer to <a href="#">INL-22</a> .
Interior room lamp timer does not activate. (It turns ON/ OFF when the door opens/closes.)	—	Check the interior room lamp setting. Refer to <a href="#">INL-16</a> .
• Luggage room lamp does not turn ON. (The bulb is normal.) • Luggage room lamp does not turn OFF.	• Harness between BCM and back door switch • Harness between BCM and luggage room lamp • BCM	Back door switch circuit Refer to <a href="#">DLK-276</a> Luggage room lamp circuit Refer to <a href="#">INL-26</a>
Ignition keyhole illumination does not illuminate.	• Harness between BCM and ignition keyhole illumination • BCM	Ignition keyhole illumination circuit Refer to <a href="#">INL-24</a>
Interior room lamp battery saver does not activate.	—	Check the interior room lamp battery saver setting. Refer to <a href="#">INL-17</a> .

INL

## PRECAUTIONS

< PRECAUTION >

### PRECAUTION

#### PRECAUTIONS

##### FOR USA AND CANADA

##### FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000008280861

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

**Always observe the following items for preventing accidental activation.**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

##### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

**Always observe the following items for preventing accidental activation.**

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

##### FOR MEXICO

##### FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000008280862

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

#### **WARNING:**

**Always observe the following items for preventing accidental activation.**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

##### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

## PRECAUTIONS

### < PRECAUTION >

---

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

A

B

C

D

E

F

G

H

I

J

K

INL

M

N

O

P

# MAP LAMP

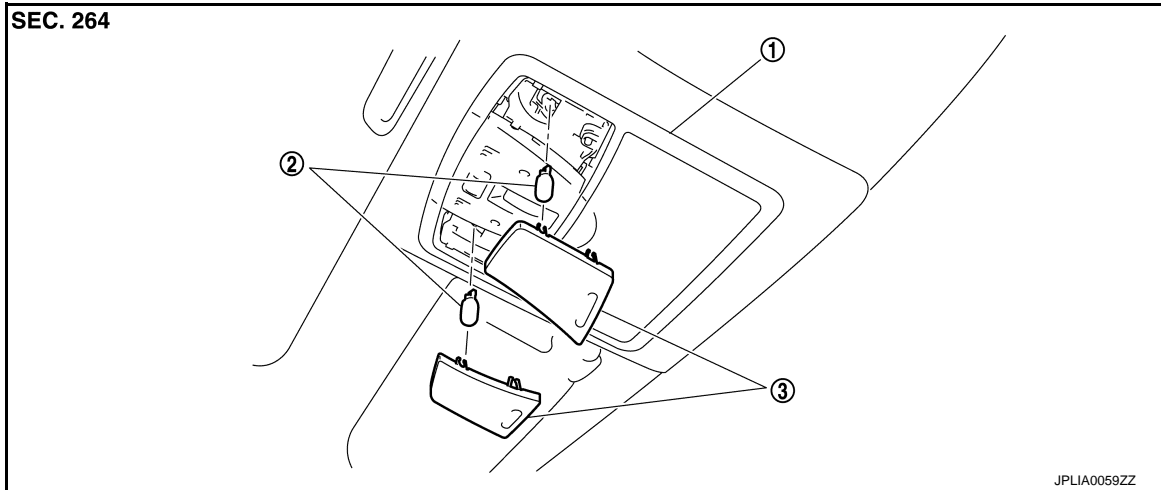
< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### MAP LAMP

#### Exploded View

INFOID:000000008280863



1. Map lamp assembly

2. Bulb

3. Lens

#### Removal and Installation

INFOID:000000008280864

##### Normal roof

Refer to [INT-24, "NORMAL ROOF : Exploded View"](#) for the map lamp assembly installation/removal.

##### Sun roof

Refer to [INT-27, "SUNROOF : Exploded View"](#) for the map lamp assembly installation/removal.

#### Replacement

INFOID:000000008280865

##### **CAUTION:**

**Disconnect the battery negative terminal or the fuse.**

##### MAP LAMP BULB

1. Insert any appropriate tool into the gap between the lens. Remove the lens.
2. Remove the bulb.



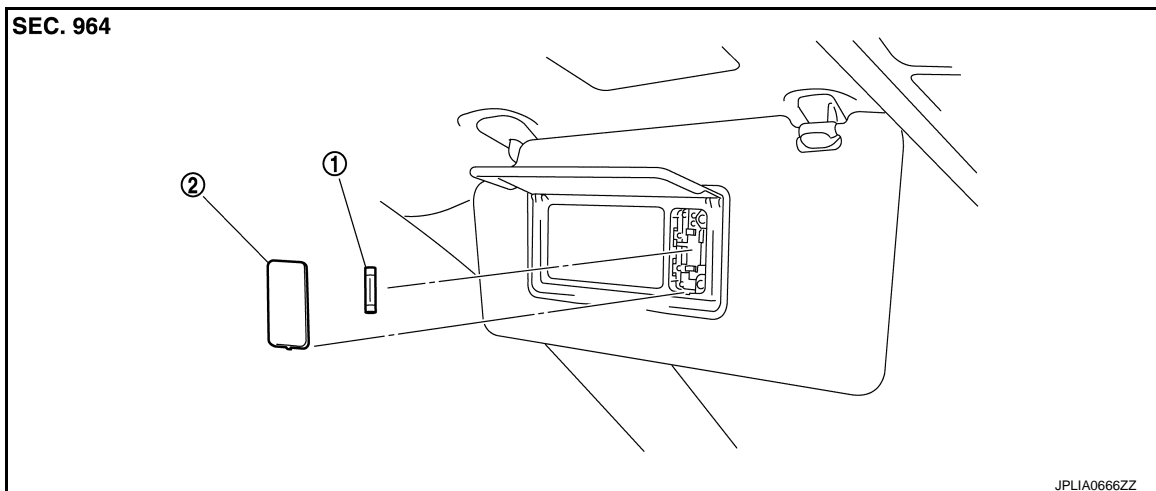
## VANITY MIRROR LAMP

< REMOVAL AND INSTALLATION >

### VANITY MIRROR LAMP

#### Exploded View

INFOID:0000000008280866



1. Bulb

2. Lens

#### Replacement

INFOID:0000000008280867

#### **CAUTION:**

**Disconnect the battery negative terminal or the fuse.**

#### VANITY MIRROR LAMP BULB

1. Insert any appropriate tool into the gap between the lens. Remove the lens.
2. Remove the bulb.

INL

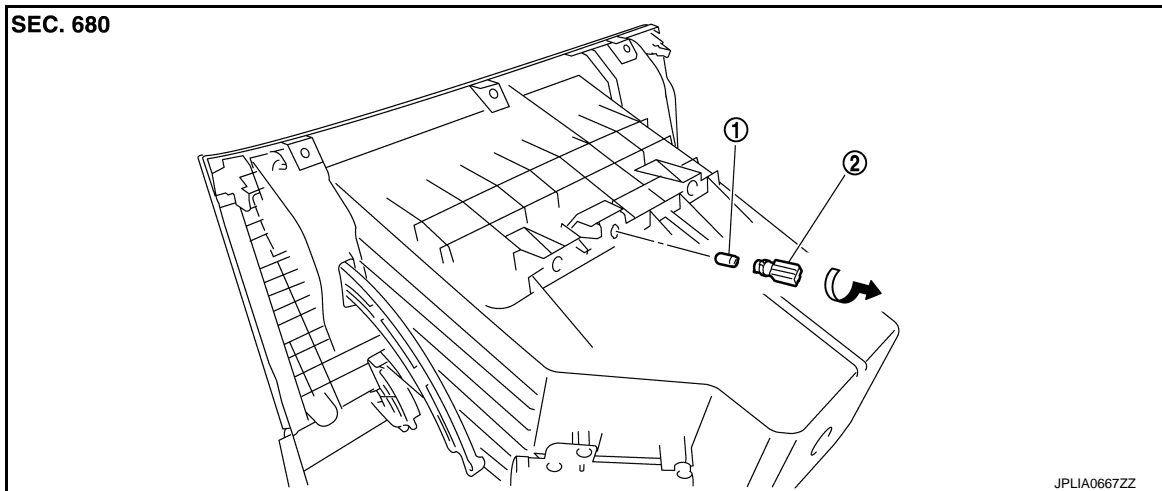
## GLOVE BOX LAMP

< REMOVAL AND INSTALLATION >

### GLOVE BOX LAMP

#### Exploded View

INFOID:000000008280868



1. Bulb

2. Bulb socket

#### Replacement

INFOID:000000008280869

#### **CAUTION:**

**Disconnect the battery negative terminal or the fuse.**

#### GLOVE BOX LAMP BULB

1. Remove the glove box assembly. Refer to [IP-13, "Exploded View"](#).
2. Rotate the bulb socket counterclockwise and unlock it.
3. Remove the bulb.

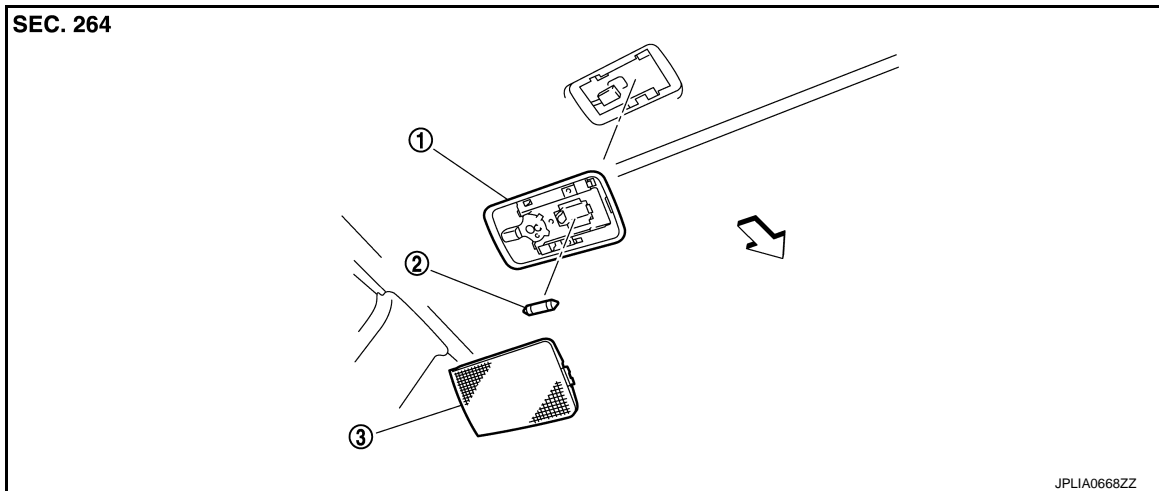
# ROOM LAMP

< REMOVAL AND INSTALLATION >

## ROOM LAMP

### Exploded View

INFOID:0000000008280870



1. Room lamp bulb housing

2. Bulb

3. Lens

⇐ : Vehicle front

### Removal and Installation

INFOID:0000000008280871

#### CAUTION:

**Disconnect the battery negative terminal or the fuse.**

#### REMOVAL

1. Insert any appropriate tool into the gap between the lens. And then remove the lens.
2. Insert any appropriate tool into the gap between the room lamp bulb housing and headlining. And then remove the room lamp bulb housing.
3. Disconnect the connector.

#### INSTALLATION

Install in the reverse order of removal.

### Replacement

INFOID:0000000008280872

#### CAUTION:

**Disconnect the battery negative terminal or the fuse.**

#### ROOM LAMP BULB

1. Insert any appropriate tool into the gap between the lens. And then remove the lens.
2. Remove the bulb.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

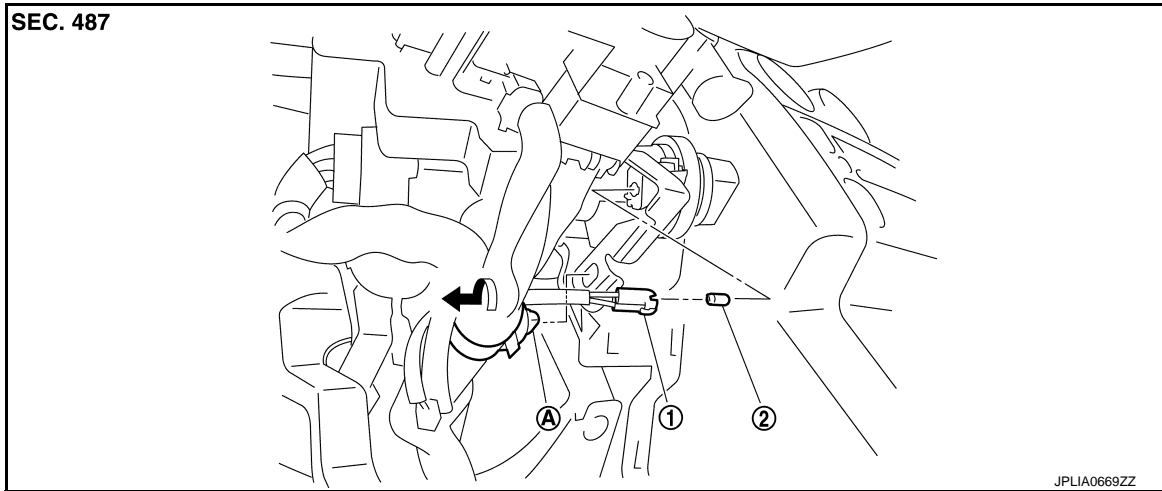
# IGNITION KEYHOLE ILLUMINATION

< REMOVAL AND INSTALLATION >

## IGNITION KEYHOLE ILLUMINATION

### Exploded View

INFOID:000000008280873



- 1. Bulb socket
- A. Harness clip

- 2. Bulb

### Replacement

INFOID:000000008280874

#### **CAUTION:**

**Disconnect the battery negative terminal or the fuse.**

#### IGNITION KEYHOLE ILLUMINATION BULB

1. Remove steering column cover. Refer to [IP-13, "Exploded View"](#).
2. Remove the harness clip.
3. Rotate the bulb socket counterclockwise and unlock it.
4. Remove the bulb.

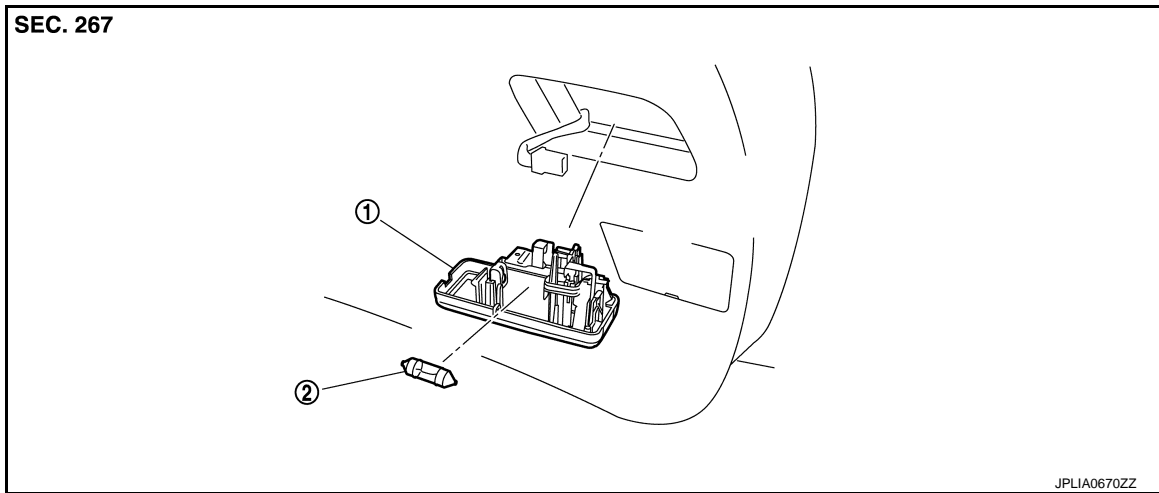
# LUGGAGE ROOM LAMP

< REMOVAL AND INSTALLATION >

## LUGGAGE ROOM LAMP

### Exploded View

INFOID:0000000008280875



1. Luggage room lamp assembly
2. Bulb

### Removal and Installation

INFOID:0000000008280876

**CAUTION:**  
Disconnect the battery negative terminal or the fuse.

#### REMOVAL

1. Insert any appropriate tool into the gap between the luggage room lamp assembly and back door trim finisher lower. Remove the luggage room lamp assembly.
2. Disconnect the connector.

#### INSTALLATION

Install in the reverse order of removal.

### Replacement

INFOID:0000000008280877

**CAUTION:**  
Disconnect the battery negative terminal or the fuse.

#### LUGGAGE ROOM LAMP BULB

1. Remove the luggage room lamp assembly.
2. Remove the bulb.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
INL  
M  
N  
O  
P

## SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### Bulb Specifications

INFOID:0000000008280878

Item	Type	Wattage (W)
Map lamp	Wedge	8
Room lamp	—	8
Ignition keyhole illumination	—	1.4
Vanity mirror lamp	—	2
Grove box lamp	—	1.4
Luggage room lamp	—	8