

SECTION **SEC**

SECURITY CONTROL SYSTEM

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

CONTENTS

WITH INTELLIGENT KEY SYSTEM		
PRECAUTION	5	INTELLIGENT KEY18
PRECAUTIONS	5	INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	5	19
SYSTEM DESCRIPTION	6	IMMU
COMPONENT PARTS	6	IMMU : CONSULT Function (BCM - IMMU)
Component Parts Location	6	20
NATS Antenna Amp.	8	THEFT ALM
Hood Switch	8	THEFT ALM : CONSULT Function (BCM - THEFT ALM)
SYSTEM	9	21
INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION	9	DIAGNOSIS SYSTEM (IPDM E/R)
INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Diagram	9	CONSULT Function (IPDM E/R)
INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Description	9	22
NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS...	11	ECU DIAGNOSIS INFORMATION
NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS : System Diagram	12	25
NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS : System Description	12	ECM, IPDM E/R, BCM
VEHICLE SECURITY SYSTEM	14	List of ECU Reference
VEHICLE SECURITY SYSTEM : System Diagram	14	25
VEHICLE SECURITY SYSTEM : System Description	14	WIRING DIAGRAM
DIAGNOSIS SYSTEM (BCM)	18	26
COMMON ITEM	18	ENGINE START FUNCTION
COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	18	Wiring Diagram
		26
		NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS
		Wiring Diagram
		39
		VEHICLE SECURITY SYSTEM
		Wiring Diagram
		49
		BASIC INSPECTION
		62
		DIAGNOSIS AND REPAIR WORK FLOW
		Work Flow
		62
		ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT
		65
		ECM
		ECM : Description
		65
		ECM : Work Procedure
		65
		BCM
		65

SEC

BCM : Description	65	Description	85
BCM : Work Procedure	65	DTC Description	85
DTC/CIRCUIT DIAGNOSIS	67	Diagnosis Procedure	85
P1610 LOCK MODE	67	B261E VEHICLE TYPE	87
Description	67	Description	87
DTC Logic	67	DTC Logic	87
Diagnosis Procedure	67	Diagnosis Procedure	87
P1611 ID DISCORD, IMMU-ECM	68	B26FC KEY REGISTRATION	89
DTC Logic	68	DTC Logic	89
Diagnosis Procedure	68	Diagnosis Procedure	89
P1612 CHAIN OF ECM-IMMU	69	B27D1 START CUT RELAY OFF	90
DTC Logic	69	DTC Logic	90
Diagnosis Procedure	69	Diagnosis Procedure	90
P161D IMMOBILIZER	70	Component Inspection	92
DTC Logic	70	B27D2 START CUT RELAY ON	93
Diagnosis Procedure	70	DTC Logic	93
P161E IMMOBILIZER	71	Diagnosis Procedure	93
DTC Logic	71	Component Inspection	95
Diagnosis Procedure	71	B20DF STARTER RELAY OFF CIRCUIT	96
P161F IMMOBILIZER	72	DTC Logic	96
DTC Logic	72	Diagnosis Procedure	96
Diagnosis Procedure	72	HEADLAMP FUNCTION	98
B2192 ID DISCORD, IMMU-ECM	73	Component Function Check	98
DTC Logic	73	Diagnosis Procedure	98
Diagnosis Procedure	73	HOOD SWITCH	99
B2193 CHAIN OF ECM-IMMU	74	Component Function Check	99
DTC Logic	74	Diagnosis Procedure	99
Diagnosis Procedure	74	Component Inspection	100
B2196 DONGLE UNIT	75	HORN FUNCTION	101
Description	75	Component Function Check	101
DTC Logic	75	Component Inspection	101
Diagnosis Procedure	75	SECURITY INDICATOR LAMP	102
B2198 NATS ANTENNA AMP.	77	Component Function Check	102
DTC Logic	77	Diagnosis Procedure	102
Diagnosis Procedure	77	SYMPTOM DIAGNOSIS	104
B2556 PUSH-BUTTON IGNITION SWITCH	79	ENGINE DOES NOT START WHEN INTELLI- GENT KEY IS INSIDE OF VEHICLE	104
DTC Logic	79	Description	104
Diagnosis Procedure	79	Diagnosis Procedure	104
Component Inspection	80	SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK	105
B2557 VEHICLE SPEED	81	Description	105
DTC Logic	81	Diagnosis Procedure	105
Diagnosis Procedure	81	VEHICLE SECURITY SYSTEM CANNOT BE SET	106
B2602 SHIFT POSITION	82	INTELLIGENT KEY	106
DTC Logic	82	INTELLIGENT KEY : Description	106
Diagnosis Procedure	82	INTELLIGENT KEY : Diagnosis Procedure	106
Component Inspection	84		
B260F ENGINE STATUS	85		

DOOR REQUEST SWITCH	106	COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)	121	A
DOOR REQUEST SWITCH : Description	106			
DOOR REQUEST SWITCH : Diagnosis Proce- dure	106			
DOOR KEY CYLINDER	107	IMMU	121	B
DOOR KEY CYLINDER : Description	107	IMMU : CONSULT Function (BCM - IMMU)	121	
DOOR KEY CYLINDER : Diagnosis Procedure ...	107	THEFT ALM	122	C
		THEFT ALM : CONSULT Function (BCM - THEFT ALM)	122	
VEHICLE SECURITY ALARM DOES NOT ACTIVATE	108	DIAGNOSIS SYSTEM (IPDM E/R)	123	D
Description	108	CONSULT Function (IPDM E/R)	123	
Diagnosis Procedure	108	ECU DIAGNOSIS INFORMATION	126	E
PANIC ALARM FUNCTION DOES NOT OP- ERATE	109	ECM, IPDM E/R, BCM	126	F
Description	109	List of ECU Reference	126	
Diagnosis Procedure	109	WIRING DIAGRAM	127	G
REMOVAL AND INSTALLATION	110	NVIS	127	H
NATS ANTENNA AMP.	110	Wiring Diagram	127	
Exploded View	110	VEHICLE SECURITY SYSTEM	137	I
Removal and Installation	110	Wiring Diagram	137	
PUSH-BUTTON IGNITION SWITCH	112	BASIC INSPECTION	150	J
Exploded View	112	DIAGNOSIS AND REPAIR WORKFLOW	150	
Removal and Installation	112	Work Flow	150	
WITHOUT INTELLIGENT KEY SYSTEM		INSPECTION AND ADJUSTMENT	153	
PRECAUTION	114	ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT	153	
PRECAUTIONS	114	ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement ...	153	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	114	ECM RE-COMMUNICATING FUNCTION	153	
		ECM RE-COMMUNICATING FUNCTION : De- scription	153	
SYSTEM DESCRIPTION	115	ECM RE-COMMUNICATING FUNCTION : Spe- cial Repair Requirement	153	
COMPONENT PARTS	115	KEYFOB ID REGISTRATION	154	
Component Parts Location	115	Description	154	
NATS Antenna Amp.	116	Work Procedure	154	
Hood Switch	116	DTC/CIRCUIT DIAGNOSIS	155	
SYSTEM	117	P1610 LOCK MODE	155	
NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS. 117		Description	155	
NISSAN VEHICLE IMMOBILIZER SYSTEM- NATS : System Diagram	117	DTC Logic	155	
NISSAN VEHICLE IMMOBILIZER SYSTEM- NATS : System Description	117	Diagnosis Procedure	155	
VEHICLE SECURITY SYSTEM	118	P1611 ID DISCORD, IMMU-ECM	156	
VEHICLE SECURITY SYSTEM : System Dia- gram	118	DTC Logic	156	
VEHICLE SECURITY SYSTEM : System Descrip- tion	118	Diagnosis Procedure	156	
DIAGNOSIS SYSTEM (BCM)	121	P1612 CHAIN OF ECM-IMMU	157	
COMMON ITEM	121	DTC Logic	157	
		Diagnosis Procedure	157	

SEC

P161D IMMOBILIZER	158	B261E VEHICLE TYPE	176
DTC Logic	158	Description	176
Diagnosis Procedure	158	DTC Logic	176
P161E IMMOBILIZER	159	Diagnosis Procedure	176
DTC Logic	159	B27D1 START CUT RELAY OFF	178
Diagnosis Procedure	159	DTC Logic	178
P161F IMMOBILIZER	160	Diagnosis Procedure	178
DTC Logic	160	Component Inspection	180
Diagnosis Procedure	160	B27D2 START CUT RELAY ON	181
B20DF STARTER RELAY OFF CIRCUIT	161	DTC Logic	181
DTC Logic	161	Diagnosis Procedure	181
Diagnosis Procedure	161	Component Inspection	183
B2192 ID DISCORD, IMMU-ECM	163	HEADLAMP FUNCTION	184
DTC Logic	163	Component Function Check	184
Diagnosis Procedure	163	Diagnosis Procedure	184
B2193 CHAIN OF ECM-IMMU	164	HOOD SWITCH	185
DTC Logic	164	Component Function Check	185
Diagnosis Procedure	164	Diagnosis Procedure	185
B2196 DONGLE UNIT	165	Component Inspection	186
Description	165	HORN FUNCTION	187
DTC Logic	165	Component Function Check	187
Diagnosis Procedure	165	Component Inspection	187
B2198 NATS ANTENNA AMP.	167	SECURITY INDICATOR LAMP	188
DTC Logic	167	Component Function Check	188
Diagnosis Procedure	167	Diagnosis Procedure	188
B2557 VEHICLE SPEED	170	SYMPTOM DIAGNOSIS	190
DTC Logic	170	NISSAN VEHICLE IMMOBILIZER SYSTEM-	
Diagnosis Procedure	170	NATS SYMPTOMS	190
B2602 SHIFT POSITION	171	Symptom Table	190
DTC Logic	171	VEHICLE SECURITY SYSTEM	191
Diagnosis Procedure	171	Symptom Table	191
Component Inspection	173	REMOVAL AND INSTALLATION	192
B260F ENGINE STATUS	174	NATS ANTENNA AMP.	192
Description	174	Removal and Installation	192
DTC Description	174		
Diagnosis Procedure	174		

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000010287273

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

COMPONENT PARTS

< SYSTEM DESCRIPTION >


[WITH INTELLIGENT KEY SYSTEM]

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000010340301

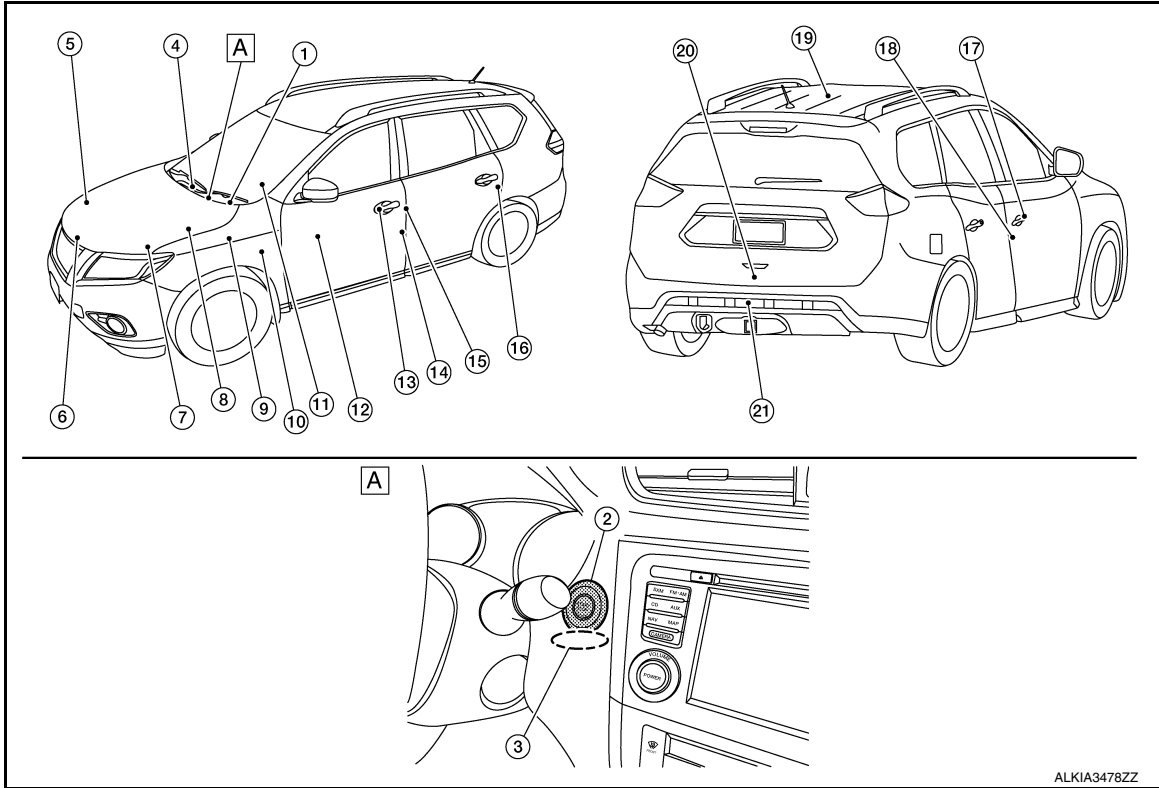

A. View right of steering column.

No.	Component	Function
1.	Combination meter	Combination meter transmits the vehicle speed signal to BCM via CAN communication. BCM also receives the vehicle speed signal from ABS actuator and electric unit (control unit) via CAN communication. BCM compares both signals to detect the vehicle speed. Security indicator lamp is located on combination meter. Security indicator lamp blinks when ignition switch is in any position other than ON to warn that NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS [NVIS (NATS)] is on board. Refer to MWI-6, "METER SYSTEM : Component Parts Location" .
2.	Push-button ignition switch	Push-button ignition switch has push switch inside which detects that push-button ignition switch is pressed, and then transmits ON/OFF signal to BCM. BCM changes the ignition switch position with the operation of push-button ignition switch. BCM maintains the ignition switch position status while push-button ignition switch is not operated.
3.	NATS antenna amp.	Refer to SEC-8, "NATS Antenna Amp."
4.	Inside key antenna (instrument center)	Inside key antenna (instrument center) detects whether Intelligent Key is inside the vehicle or not, and then transmits the signal to the BCM. Refer to DLK-22, "Inside Key Antenna (Instrument Center)" .
5.	Horn	Horn is operated when the panic button on the Intelligent Key is pressed or the alarm is activated.
6.	Hood switch	Hood switch inputs the hood position open/closed to the IPDM E/R.

COMPONENT PARTS

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

No.	Component	Function
7.	Transmission range switch	Refer to TM-14, "CVT CONTROL SYSTEM : Transmission Range Switch" .
8.	IPDM E/R	Refer to PCS-4, "Component Parts Location" .
9.	Stop lamp switch	Refer to BRC-12, "Stop Lamp Switch" .
10.	BCM	<p>BCM controls INTELLIGENT KEY SYSTEM (ENGINE START FUNCTION), NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS [NVIS (NATS)] and VEHICLE SECURITY SYSTEM.</p> <p>BCM performs the ID verification between BCM and Intelligent Key when the Intelligent Key is carried into the detection area of inside key antenna, and push-button ignition switch is pressed. If the ID verification result is OK, ignition switch operation is available.</p> <p>Then, when the ignition switch is turned ON, BCM performs ID verification between BCM and ECM. If the ID verification result is OK, ECM can start engine.</p> <p>Refer to BCS-7, "BODY CONTROL SYSTEM : Component Parts Location" for detailed installation location.</p>
11.	CVT shift selector	Refer to TM-20, "SHIFT LOCK SYSTEM : Component Parts Location" .
12.	Main power window and door lock/unlock switch (Front power window and door lock/unlock switch RH similar)	<p>Door lock and unlock switch is integrated into the power window main switch.</p> <p>Door lock and unlock switch transmits door lock/unlock operation signal to BCM.</p> <p>Refer to PWC-7, "Power Window Main Switch".</p>
13.	Outside key antenna LH	<p>Outside key antenna (LH) detects whether Intelligent Key is outside the vehicle or not, and then transmits the signal to the BCM.</p> <p>Refer to DLK-23, "Outside Key Antenna (LH)".</p>
14.	Front door lock assembly LH	<p>Door key cylinder switch is integrated into front door lock assembly (driver side).</p> <p>Door key cylinder switch detects door LOCK/UNLOCK operation using mechanical key, and then transmits the operation signal to BCM.</p> <p>Refer to DLK-25, "Front Door Lock Assembly (LH)".</p>
15.	Front door switch LH	Door switch detects door open/close condition and then transmits ON/OFF signal to BCM.
16.	Rear door switch LH (rear door switch RH similar)	Door switch detects door open/close condition and then transmits ON/OFF signal to BCM.
17.	Outside key antenna RH	<p>Outside key antenna (RH) detects whether Intelligent Key is outside the vehicle or not, and then transmits the signal to the BCM.</p> <p>Refer to DLK-23, "Outside Key Antenna (RH)".</p>
18.	Front door switch RH	Door switch detects door open/close condition and then transmits ON/OFF signal to BCM.
19.	Inside key antenna (console)	<p>Inside key antenna (console) detects whether Intelligent Key is inside the vehicle or not, and then transmits the signal to the BCM.</p> <p>Refer to DLK-23, "Inside Key Antenna (Console)".</p>
20.	Back door lock assembly	Back door lock actuator locks/unlocks the back door latch assembly.
21.	Outside key antenna (rear bumper)	<p>Outside key antenna (Rear bumper) detects whether Intelligent Key is outside the vehicle or not, and then transmits the signal to the BCM.</p> <p>Refer to DLK-23, "Outside Key Antenna (Rear Bumper)".</p>

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

COMPONENT PARTS


< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

NATS Antenna Amp.

INFOID:000000010340300


The ID verification is performed between BCM and transponder integrated into Intelligent Key via NATS antenna amp. when Intelligent Key backside is contacted to push-button ignition switch in case that Intelligent Key battery is discharged. If the ID verification result is OK, the operation of ignition switch is available.

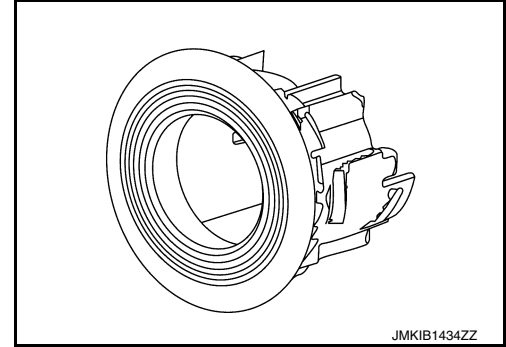

Hood Switch

INFOID:000000010340299

Hood switch ① detects that hood is open, and then transmits ON/OFF signal to IPDM E/R. IPDM E/R transmits hood switch signal to BCM via CAN communication. Hood switch is integrated into hood lock assembly LH.

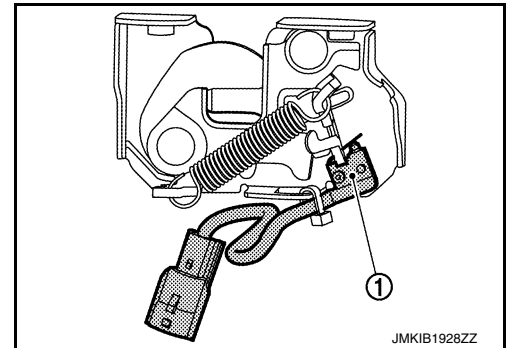


SYSTEM

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Diagram

INFOID:000000010284327

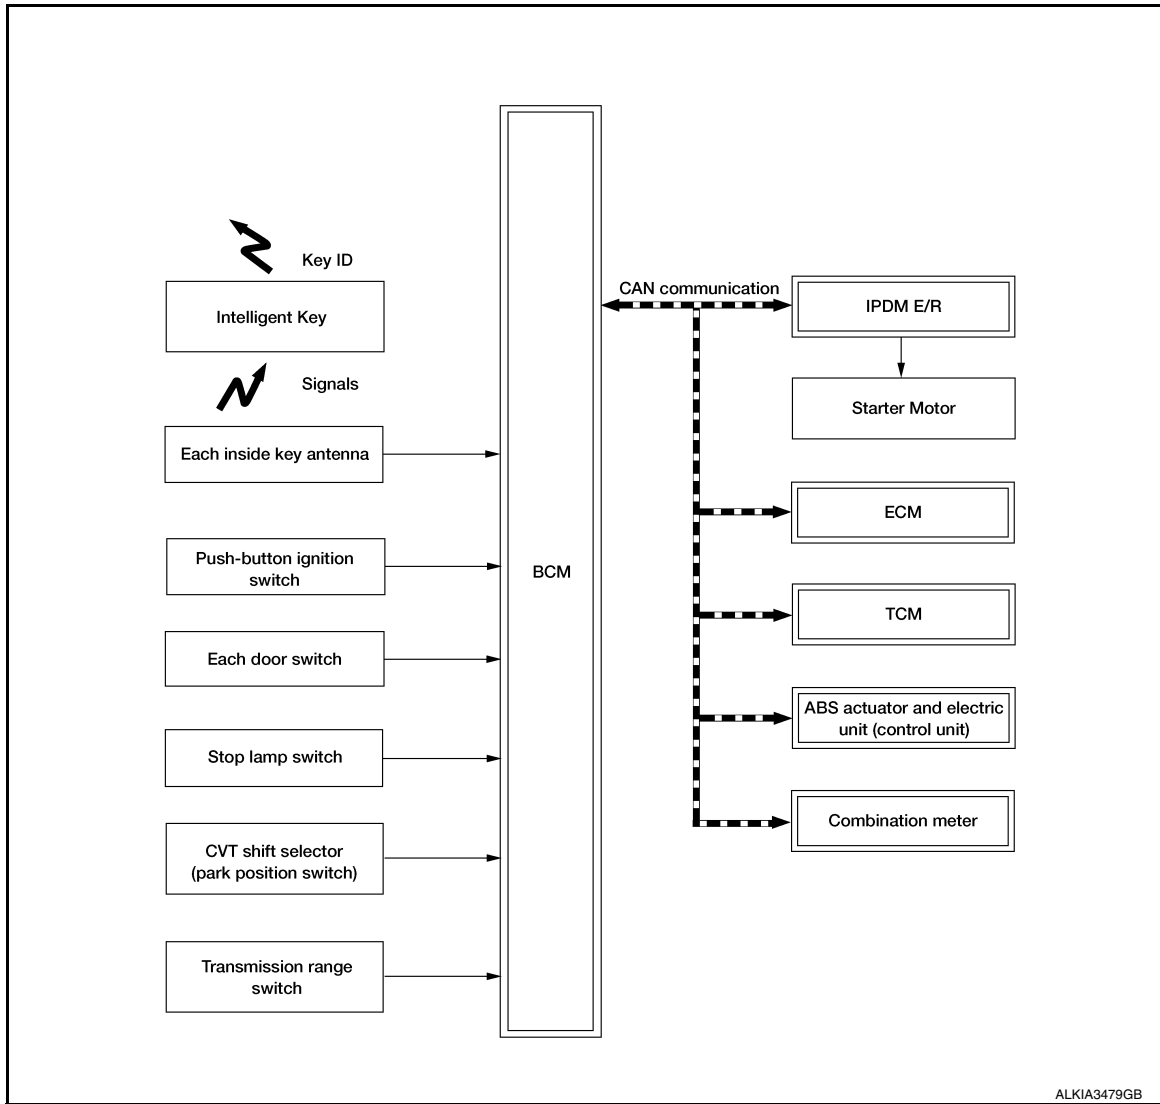

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Description

INFOID:000000010284328

SYSTEM DESCRIPTION

- The engine start function of Intelligent Key system makes it possible to start and stop the engine without using the key, based on the electronic ID verification. The electronic ID verification is performed between BCM and Intelligent Key when the push-button ignition switch is pressed while the Intelligent Key is within the detection area of inside key antenna.

NOTE:

The driver should carry the Intelligent Key at all times.

- Intelligent Key has 2 IDs [Intelligent Key ID and NVIS (NATS) ID]. It can perform the door lock/unlock operation and the push-button ignition switch operation when the registered Intelligent Key is carried.
- When Intelligent Key battery is discharged, engine can be started by operating push-button ignition switch after contacting Intelligent Key backside to push-button ignition switch. At that time, the NVIS (NATS) ID verification is performed.
- If the ID is successfully verified, when push-button ignition switch is pressed, the engine can be started.
- Up to 4 Intelligent Keys can be registered (Including the standard Intelligent Key) upon request from the customer.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

NOTE:

Refer to [SEC-12, "NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS : System Description"](#) for any functions other than engine start function of Intelligent Key system.

PRECAUTIONS FOR INTELLIGENT KEY SYSTEM

The transponder [the chip for NVIS (NATS) ID verification] is integrated into the Intelligent Key. In that case, the NVIS (NATS) ID verification can be performed when Intelligent Key backside is contacted to push-button ignition switch. If verification result is OK, engine can be started.

OPERATION WHEN INTELLIGENT KEY IS CARRIED

1. When the push-button ignition switch is pressed, the BCM activates the inside key antenna and transmits the request signal to the Intelligent Key.
2. The Intelligent Key receives the request signal and transmits the Intelligent Key ID signal to the BCM.
3. BCM receives the Intelligent Key ID signal and verifies it with the registered ID.
4. BCM turns ACC relay ON and transmits the ignition power supply ON signal to IPDM E/R.
5. IPDM E/R turns the ignition relay ON and starts the ignition power supply.
6. BCM detects that the selector lever position and brake pedal operating condition.
7. BCM transmits the starter request signal to IPDM E/R and turns the starter relay in IPDM E/R ON if BCM judges that the engine start condition* is satisfied.
8. IPDM E/R turns the starter control relay ON when receiving the starter request signal.
9. Power supply is supplied through the starter relay and the starter control relay to operate the starter motor.

CAUTION:

If a malfunction is detected in the Intelligent Key system, the "KEY" warning lamp in the combination meter illuminates. At that time, the engine cannot be started.

10. When BCM receives feedback signal from ECM indicating that the engine is started, the BCM transmits a stop signal to IPDM E/R and stops cranking by turning OFF the starter motor relay. (If engine start is unsuccessful, cranking stops automatically within 5 seconds.)

CAUTION:

When the Intelligent Key is carried outside of the vehicle (inside key antenna detection area) while the power supply is in the ACC or ON position, even if the engine start condition* is satisfied, the engine cannot be started.

*: For the engine start condition, refer to the table below "POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION".

OPERATION RANGE

Engine can be started when Intelligent Key is inside the vehicle. However, sometimes engine may not start when Intelligent Key is on instrument panel or in glove box.

ENGINE START OPERATION WHEN INTELLIGENT KEY IS CONTACTED TO PUSH-BUTTON IGNITION SWITCH

When Intelligent Key battery is discharged, the NVIS (NATS) ID verification between transponder in Intelligent Key and BCM is performed when Intelligent Key backside is contacted to push-button ignition switch. If the verification result is OK, engine can be started.

POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION

The power supply position changing operation can be performed with the following operations.

NOTE:

- When an Intelligent Key is within the detection area of inside key antenna and when Intelligent Key backside is contacted to push-button ignition switch, it is equivalent to the operations below.
- When starting the engine, the BCM monitors under the engine start conditions:
 - Brake pedal operating condition
 - Selector lever position
 - Vehicle speed

Vehicle speed: less than 4 km/h (2.5 MPH)

SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
LOCK → ACC	—	Not depressed	1
LOCK → ACC → ON	—	Not depressed	2
LOCK → ACC → ON → OFF	—	Not depressed	3
LOCK → START ACC → START ON → START	P or N position	Depressed	1
Engine is running → OFF	—	—	1

Vehicle speed: 4 km/h (2.5 MPH) or more

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
Engine is running → ACC	—	—	Emergency stop operation
Engine stall return operation while driving	N position	Not depressed	1

Emergency stop operation

- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times or more within 1.5 seconds.

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC


SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS : System Diagram

INFOID:000000010284329

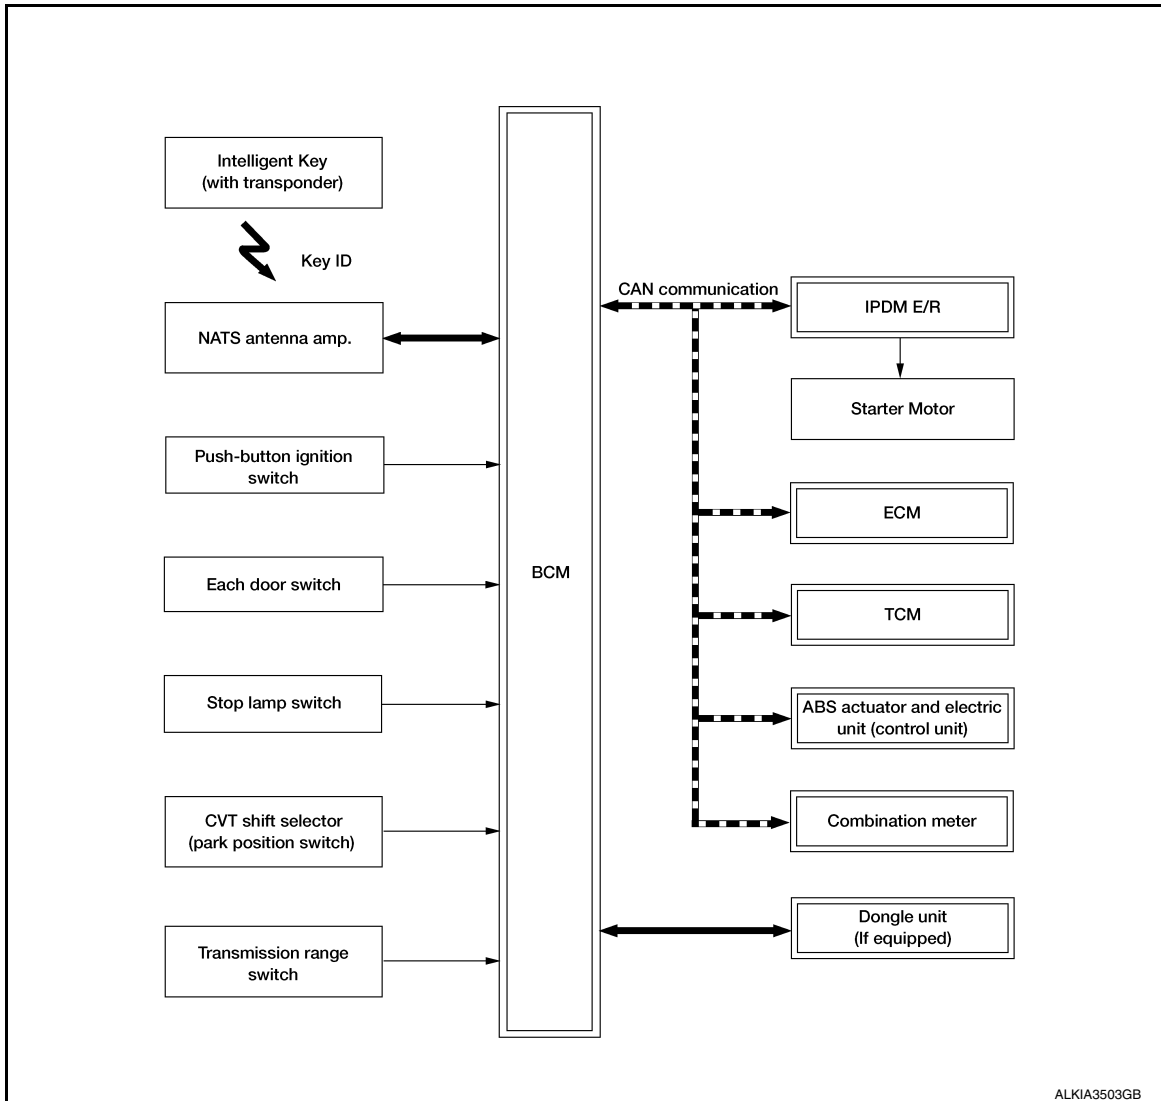

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS : System Description

INFOID:000000010284330

SYSTEM DESCRIPTION

- The NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS [NVIS (NATS)] prevents the engine from being started by Intelligent Key whose ID is not registered to the vehicle (BCM). It has higher protection against auto theft involving the duplication of mechanical keys.
- The ignition key integrated in the Intelligent Key cannot start the engine. When the Intelligent Key battery is discharged, the NVIS (NATS) ID verification is performed between the transponder integrated with Intelligent Key and BCM via NATS antenna amp. when the Intelligent Key backside is contacted to push-button ignition switch. If the verification results are OK, the engine start operation can be performed by the push-button ignition switch operation.
- Locate the security indicator lamp and apply the anti-theft system equipment sticker that warns that the NVIS (NATS) is on-board the model.
- Security indicator lamp always blinks when the power supply position is any position other than ON.
- Up to 4 Intelligent Keys can be registered (including the standard ignition key) upon request from the owner.
- Specified registration is required when replacing ECM, BCM or Intelligent Key.
- Possible symptom of NVIS (NATS) malfunction is "Engine cannot start". The engine can not be started because of other than NVIS (NATS) malfunction, so start the trouble diagnosis according to [SEC-62. "Work Flow"](#).
- If ECM other than genuine part is installed, the engine cannot be started. For ECM replacement procedure, refer to [EC-499. "Removal and Installation"](#).

SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

PRECAUTIONS FOR KEY REGISTRATION

- The ID registration is a procedure that erases the current NVIS (NATS) ID once, and then reregisters a new ID. Therefore before starting the registration operation, collect all registered Intelligent Keys from the customer.
- When registering the Intelligent Key, perform only one procedure to simultaneously register both ID [NVIS (NATS) ID and Intelligent Key ID].

SECURITY INDICATOR LAMP

- Warns that the vehicle is equipped with NVIS (NATS).
- Security indicator lamp always blinks when the power supply position is any position other than ON.

NOTE:

Because security indicator lamp is highly efficient, the battery is barely affected.

ENGINE START OPERATION WHEN INTELLIGENT KEY IS CONTACTED TO PUSH-BUTTON IGNITION SWITCH

1. When brake pedal is depressed while selector lever is in the P (Park) position, BCM activates NATS antenna amp. that is located behind push-button ignition switch.
2. When Intelligent Key (transponder built-in) backside is contacted to push-button ignition switch, BCM starts NVIS (NATS) ID verification between BCM and Intelligent Key (transponder built-in) via NATS antenna amp.
3. When the NVIS (NATS) ID verification result is OK, buzzer in combination meter sounds and BCM transmits the result to ECM.
4. BCM turns ACC relay ON and transmits ignition power supply ON signal to IPDM E/R.
5. IPDM E/R turns the ignition relay ON and starts the ignition power supply.
6. BCM detects that the selector lever position is P (Park) or N (Neutral).
7. BCM transmits starter request signal to IPDM E/R and turns the starter relay in IPDM E/R ON if BCM judges that the engine start condition* is satisfied.
8. IPDM E/R turns the starter control relay ON when receiving the starter request signal.
9. Power supply is supplied through the starter relay and the starter control relay to operate the starter motor.
10. When BCM receives feedback signal from ECM indicating that the engine is started, BCM transmits a stop signal to IPDM E/R and stops cranking by turning off the starter motor relay. (If engine start is unsuccessful, cranking stops automatically within 5 seconds.)

*: For the engine start condition, refer to the table "POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION" below.

POWER SUPPLY POSITION CHANGE TABLE BY PUSH-BUTTON IGNITION SWITCH OPERATION

The power supply position changing operation can be performed with the following operations.

NOTE:

- When an Intelligent Key is within the detection area of inside key antenna and when Intelligent Key backside is contacted to push-button ignition switch, it is equivalent to the operations below.
- When starting the engine, the BCM monitors under the engine start conditions:
 - Brake pedal operating condition
 - Selector lever position
 - Vehicle speed

Vehicle speed: less than 4 km/h (2.5 MPH)

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
LOCK → ACC	—	Not depressed	1
LOCK → ACC → ON	—	Not depressed	2
LOCK → ACC → ON → OFF	—	Not depressed	3

SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
LOCK → START ACC → START ON → START	P (Park) or N (Neutral) position	Depressed	1
Engine is running → OFF	—	—	1

Vehicle speed: 4 km/h (2.5 MPH) or more

Power supply position	Engine start/stop condition		Push-button ignition switch operation frequency
	Selector lever	Brake pedal operation condition	
Engine is running → ACC	—	—	Emergency stop operation
Engine stall return operation while driving	N (Neutral) position	Not depressed	1


Emergency stop operation

- Press and hold the push-button ignition switch for 2 seconds or more.
- Press the push-button ignition switch 3 times or more within 1.5 seconds.

VEHICLE SECURITY SYSTEM

VEHICLE SECURITY SYSTEM : System Diagram

INFOID:000000010284331

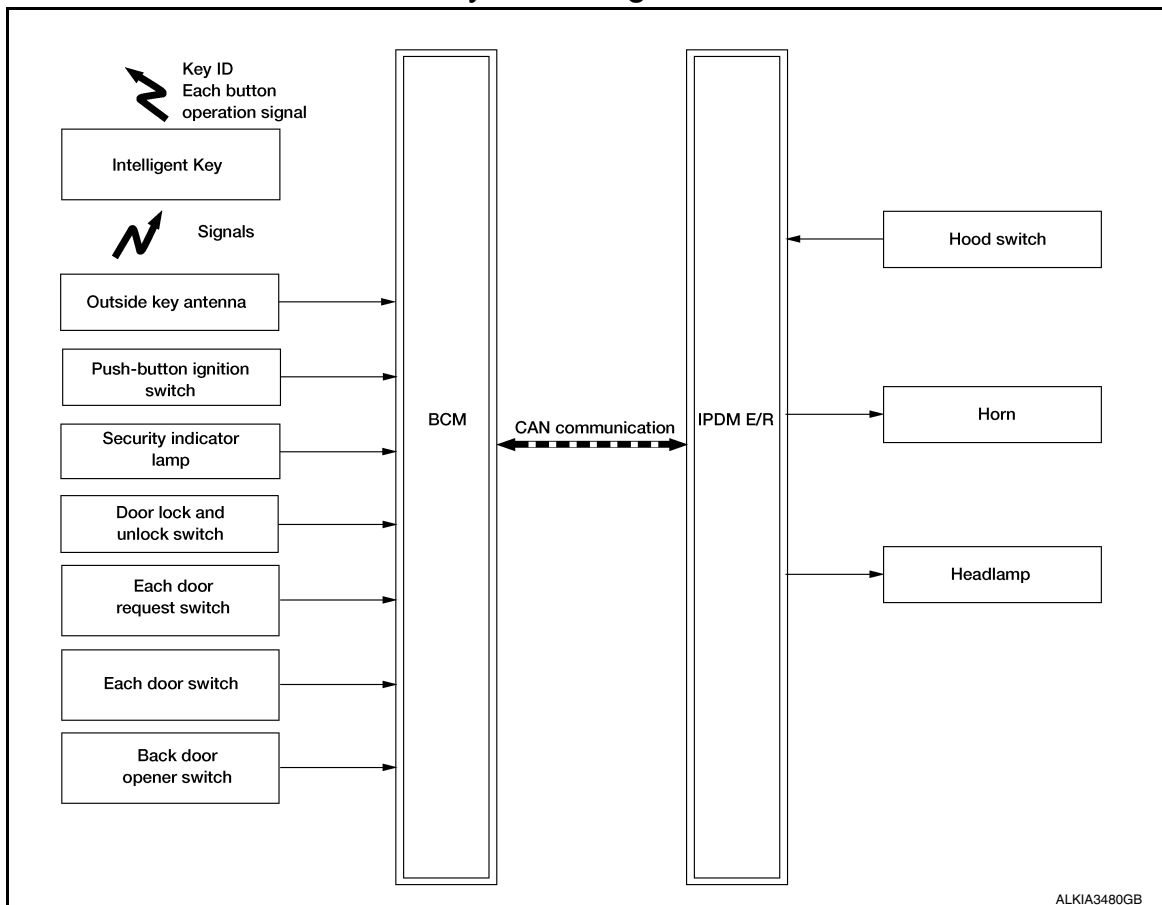

ALKIA3480GB

VEHICLE SECURITY SYSTEM : System Description

INFOID:000000010284332

- The vehicle security system has two alarm functions (theft warning alarm and panic alarm) and reduces the possibility of a theft or mischief by activating horns and headlamps intermittently.

SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >


- The panic alarm does not start when the theft warning alarm is activating and the panic alarm stops when the theft warning alarm is activated.
- The priority of the functions are as per the following.

Priority	Function
1	Theft warning alarm
2	Panic alarm

THEFT WARNING ALARM

- The theft warning alarm function activates horns and headlamps intermittently when BCM detects that any door or hood is opened by unauthorized means while the system is in the ARMED state.
- Security indicator lamp on combination meter always blinks when power supply position is any position other than ON. Security indicator lamp blinking warns that the vehicle is equipped with a vehicle security system.

Operation Flow

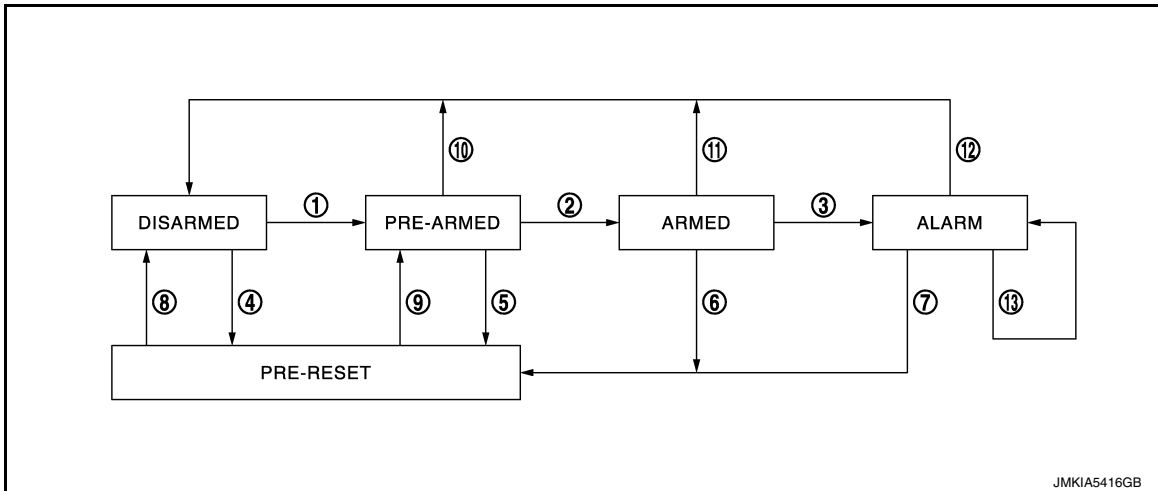

No.	System state	Switching condition					
		A	B				
1	DISARMED to PRE-ARMED	When all conditions of A and one condition of B is satisfied.	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: center;">A</td> <td style="width: 50%; text-align: center;">B</td> </tr> <tr> <td> <ul style="list-style-type: none"> Power supply position: OFF/LOCK All doors: Closed Hood: Closed </td> <td> All doors are locked by: <ul style="list-style-type: none"> Door key cylinder LOCK switch LOCK button of Intelligent Key Door request switch </td> </tr> </table>	A	B	<ul style="list-style-type: none"> Power supply position: OFF/LOCK All doors: Closed Hood: Closed 	All doors are locked by: <ul style="list-style-type: none"> Door key cylinder LOCK switch LOCK button of Intelligent Key Door request switch
A	B						
<ul style="list-style-type: none"> Power supply position: OFF/LOCK All doors: Closed Hood: Closed 	All doors are locked by: <ul style="list-style-type: none"> Door key cylinder LOCK switch LOCK button of Intelligent Key Door request switch 						
2	PRE-ARMED to ARMED	When all of the following conditions are satisfied for 30 seconds.	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: center;">A</td> <td style="width: 50%; text-align: center;">B</td> </tr> <tr> <td> <ul style="list-style-type: none"> Power supply position: OFF/LOCK All doors: Locked Hood: Closed </td> <td></td> </tr> </table>	A	B	<ul style="list-style-type: none"> Power supply position: OFF/LOCK All doors: Locked Hood: Closed 	
A	B						
<ul style="list-style-type: none"> Power supply position: OFF/LOCK All doors: Locked Hood: Closed 							
3	ARMED to ALARM	When one condition of A and one condition of B are satisfied.	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: center;">A</td> <td style="width: 50%; text-align: center;">B</td> </tr> <tr> <td>Intelligent Key: Not used</td> <td> <ul style="list-style-type: none"> Any door: Open Hood: Open </td> </tr> </table>	A	B	Intelligent Key: Not used	<ul style="list-style-type: none"> Any door: Open Hood: Open
A	B						
Intelligent Key: Not used	<ul style="list-style-type: none"> Any door: Open Hood: Open 						
4	DISARMED to PRE-RESET	When all conditions of A and one condition of B is satisfied.	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: center;">A</td> <td style="width: 50%; text-align: center;">B</td> </tr> <tr> <td> <ul style="list-style-type: none"> Power supply position: OFF/LOCK All doors: Closed Hood: Open </td> <td> All doors are locked by: <ul style="list-style-type: none"> Door key cylinder LOCK switch LOCK button of Intelligent Key Door request switch </td> </tr> </table>	A	B	<ul style="list-style-type: none"> Power supply position: OFF/LOCK All doors: Closed Hood: Open 	All doors are locked by: <ul style="list-style-type: none"> Door key cylinder LOCK switch LOCK button of Intelligent Key Door request switch
A	B						
<ul style="list-style-type: none"> Power supply position: OFF/LOCK All doors: Closed Hood: Open 	All doors are locked by: <ul style="list-style-type: none"> Door key cylinder LOCK switch LOCK button of Intelligent Key Door request switch 						
5	PRE-ARMED to PRE-RESET	When one of the following conditions is satisfied.	<ul style="list-style-type: none"> Hood: Open 				
6	ARMED to PRE-RESET	No conditions.					
7	ALARM to PRE-RESET						

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

No.	System state	Switching condition	
8	PRE-RESET to DISARMED	When one of the following conditions is satisfied.	<ul style="list-style-type: none"> • Power supply position: ACC/ON/CRANKING/RUN • Door key cylinder UNLOCK switch: ON • UNLOCK button of Intelligent Key: ON • Door request switch: ON • Back door opener switch: ON • UNLOCK switch of door lock and unlock switch: ON • Any door: Open
9	PRE-RESET to PRE-ARMED	When all of the following conditions are satisfied.	<ul style="list-style-type: none"> • Power supply position: OFF/LOCK • All doors: Closed • Hood: Closed
10	PRE-ARMED to DISARMED	When one of the following conditions is satisfied.	<ul style="list-style-type: none"> • Power supply position: ACC/ON/CRANKING/RUN • Door key cylinder UNLOCK switch: ON • UNLOCK button of Intelligent Key: ON • AUTO BACK DOOR button of Intelligent Key: ON • Door request switch: ON • Back door opener switch: ON • Any door: Open
11	ARMED to DISARMED	When one of the following conditions is satisfied.	<ul style="list-style-type: none"> • Power supply position: ACC/ON/CRANKING/RUN • Door key cylinder UNLOCK switch: ON • UNLOCK button of Intelligent Key: ON • AUTO BACK DOOR button of Intelligent Key: ON • Door request switch: ON • Back door opener switch: ON
12	ALARM to DISARMED		
13	RE-ALARM	When one of the following conditions is satisfied after the ALARM operation is finished.	<ul style="list-style-type: none"> • Any door: Open • Hood: Open

NOTE:

- BCM ignores the door key cylinder UNLOCK switch signal input for 1 second after the door key cylinder LOCK switch signal input.
- To lock/unlock all doors by operating remote controller button of Intelligent Key or door request switch, Intelligent Key must be within the detection area of outside key antenna. For details, refer to [SEC-9, "INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Description"](#).
- To open back door by operating back door opener switch, Intelligent Key must be within the detection area of outside key antenna. For details, refer to [SEC-9, "INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Description"](#).

DISARMED Phase

The vehicle security system is not set in the DISARMED phase. The vehicle security system stays in this phase while any door is open because it is assumed that the owner is inside or nearby the vehicle. Security indicator lamp blinks every 2.4 seconds.

When the vehicle security system is reset, each phase switches to the DISARMED phase directly.

PRE-ARMED Phase

The PRE-ARMED phase is the transient state between the DISARMED phase and the ARMED phase. This phase is maintained for 30 seconds so that the owner can reset the setting due to a mis-operation. This phase switches to the ARMED phase when vehicle conditions are not changed for 30 seconds. Security indicator lamp illuminates while being in this phase.

To reset the PRE-ARMED phase, refer to the switching condition of No. 10 in the table above.

ARMED Phase

The vehicle security system is set and BCM monitors all necessary inputs. If any door or hood is opened without using Intelligent Key, vehicle security system switches to the ALARM phase. Security indicator lamp blinks every 2.4 seconds.

To reset the ARMED phase, refer to the switching condition of No. 11 in the table above.

ALARM Phase

BCM transmits "Theft Warning Horn Request" signal and "High Beam Request" signal intermittently to IPDM E/R via CAN communication. In this phase, horns and headlamps are activated intermittently for approximately 50 seconds to warn that the vehicle is accessed by unauthorized means. ON/OFF timing of horns and headlamps are synchronized. After 50 seconds, the vehicle security system returns to the ARMED phase. At this time, if BCM still detects unauthorized access to the vehicle, the system is switched to the ALARM phase again. This RE-ALARM operation is carried out a maximum of 2 times.

SYSTEM

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

To cancel the ALARM operation, refer to the switching condition of No. 12 in the table above.

NOTE:

If a battery terminal is disconnected during the ALARM phase, theft warning alarm stops. But when the battery terminal is reconnected, theft warning alarm is activated again.

PRE-RESET Phase

The PRE-RESET phase is the transient state between each phase and DISARMED phase. If only the condition of hood is not satisfied, the system switches to the PRE-RESET phase. Then, when any condition is changed, the system switches to the DISARMED phase or PRE-ARMED phase.

PANIC ALARM

- The panic alarm function activates horns and headlamps intermittently when the owner presses the PANIC ALARM button of Intelligent Key outside the vehicle while the power supply position is OFF or LOCK.
- When BCM receives panic alarm signal from Intelligent Key, BCM transmits "Theft Warning Horn Request" signal and "High Beam Request" signal intermittently to IPDM E/R via CAN communication. To prevent the activation due to mis-operation of Intelligent Key by owner, the panic alarm function is activated when BCM receives the signal for 0.4 - 0.6 seconds.
- Panic alarm operation is maintained for 25 seconds.
- Panic alarm operation is cancelled when BCM receives one of the following signals:
 - LOCK button of Intelligent Key: ON
 - UNLOCK button of Intelligent Key: ON
 - PANIC ALARM button of Intelligent Key: Long pressed
 - Any door request switch: ON

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000010336412

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
Ecu Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> The vehicle specification can be read and saved. The vehicle specification can be written when replacing BCM.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×	×		
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Exterior lamp	HEADLAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×			
Intelligent Key system	INTELLIGENT KEY		×	×	×	×		
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×	×	×			
Interior room lamp battery saver	BATTERY SAVER			×	×			
Back door open	TRUNK			×				
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×				
Signal buffer system	SIGNAL BUFFER			×				
TPMS	AIR PRESSURE MONITOR		×	×	×	×		

INTELLIGENT KEY

DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY)

INFOID:000000010336413

SELF DIAGNOSTIC RESULT

Refer to [BCS-48, "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Main	Description
REQ SW -DR [On/Off]	×	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	×	Indicates condition of door request switch RH.
REQ SW -BD/TR [On/Off]	×	Indicates condition of back door request switch.
PUSH SW [On/Off]		Indicates condition of push-button ignition switch.
BRAKE SW 1 [On/Off]	×	Indicates condition of brake pedal position switch.
BRAKE SW 2 [On/Off]		Indicates condition of stop lamp switch.
DETE/CANCL SW [On/Off]	×	Indicates condition of park position switch.
PUSH SW -IPDM [On/Off]		Indicates condition of push-button ignition switch received from IPDM E/R on CAN communication line.
IGN RLY1 -F/B [On/Off]		Indicates condition of ignition relay 1 received from IPDM E/R on CAN communication line.
NEUTRAL SW -IPDM [On/Off]		Indicates condition of transmission range switch received from IPDM E/R on CAN communication line.
SFT PN -IPDM [On/Off]		Indicates condition of P (park) or N (neutral) position from TCM on CAN communication line.
STARTER RELAY -IPDM [On/Off]		Indicates condition of starter relay received from IPDM E/R on CAN communication line.
ENGINE STATE [STOP/START/CRANK/RUN]	×	Indicates condition of engine state from ECM on CAN communication line.
REVERSE SIGNAL -IPDM [On/Off]		Indicates condition of transmission range switch received from IPDM E/R on CAN communication line.
CRANKING PERMIT -ECM [PERMIT]		Indicates condition of engine start possibility from ECM on CAN communication line.
IS STATUS -ECM [On/Off]		Indicates IS status from ECM on CAN communication line.
STARTER CUT RELAY -ECM [On/Off]		Indicates condition of starter cut relay from ECM on CAN communication line.
VEH SPEED 1 [mph/km/h]	×	Indicates condition of vehicle speed signal received from ABS on CAN communication line.
VEH SPEED 2 [mph/km/h]	×	Indicates condition of vehicle speed signal received from combination meter on CAN communication line.
IGN REQ -IPDM [On/Off]		Indicates condition of ignition request from IPDM E/R on CAN communication line.
STARTER REQ -IPDM [On/Off]		Indicates condition of starter request received from IPDM E/R on CAN communication line.
DOOR STAT -DR [LOCK/READY/UNLK]	×	Indicates condition of driver side door status.
DOOR STAT -AS [LOCK/READY/UNLK]	×	Indicates condition of passenger side door status.
DOOR STAT -RR [LOCK/READY/UNLK]	×	Indicates condition of rear right side door status.
DOOR STAT -RL [LOCK/READY/UNLK]	×	Indicates condition of rear left side door status.
BK DOOR STATE [LOCK/READY/UNLK]	×	Indicates condition of back door status.
ID OK FLAG [Set/Reset]		Indicates condition of Intelligent Key ID.
PRMT ENG STRT [Set/Reset]		Indicates condition of engine start possibility.
PRMT RKE STRT [Set/Reset]		Indicates condition of engine start possibility from Intelligent Key.
I-KEY OK FLAG [Key ON/Key OFF]	×	Indicates condition of Intelligent Key OK flag.
PRBT ENG STRT [Set/Reset]		Indicates condition of engine start prohibit.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Main	Description
ID AUTHENT CANCEL TIMER [STOP]		Indicates condition of Intelligent Key ID authentication.
ACC BATTERY SAVER [STOP]		Indicates condition of battery saver.
CRNK PRBT TMR [On/Off]		Indicates condition of crank prohibit timer.
AUT CRNK TMR [On/Off]		Indicates condition of automatic engine crank timer from Intelligent Key.
CRNK PRBT TME [sec]		Indicates condition of engine crank prohibit time.
AUTO CRNK TME [sec]		Indicates condition of automatic engine crank time from Intelligent Key.
CRANKING TME [sec]		Indicates condition of engine cranking time from Intelligent Key.
RKE OPE COUN1 [0-19]	×	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
RKE OPE COUN2 [0-19]	×	When remote keyless entry receiver receives the signal transmitted while operating on Intelligent Key, the numerical value start changing.
RKE-LOCK [On/Off]		Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]		Indicates condition of unlock signal from Intelligent Key.
RKE-TR/BD [On/Off]		Indicates condition of back door open signal from Intelligent Key.
RKE-PANIC [On/Off]		Indicates condition of panic signal from Intelligent Key.
RKE-MODE CHG [On/Off]		Indicates condition of mode change signal from Intelligent Key.
RKE PBD [On/Off]		Indicates condition of automatic back door signal from Intelligent Key.

ACTIVE TEST

Test Item	Description
OUTSIDE BUZZER	This test is able to check Intelligent Key warning buzzer operation [On/Off].
INSIDE BUZZER	This test is able to check combination meter warning chime operation [Take Out/Knob/Key/Off].
INDICATOR	This test is able to check combination meter warning lamp operation [KEY ON/KEY IND/Off].
ENGINE SW ILLUMI	This test is able to check push-button ignition switch START indicator operation [On/Off].
IGNITION RELAY	This test is able to check ignition relay operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
SHORT CRANKING OUTPUT	Start	Starter motor operation duration times.
	100 msec	
	End	—
INSIDE ANT DIAGNOSIS	—	This function allows inside key antenna self-diagnosis.

IMMU

IMMU : CONSULT Function (BCM - IMMU)

INFOID:0000000010336415

SELF DIAGNOSTIC RESULT

Refer to [BCS-48, "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.

ACTIVE TEST

DIAGNOSIS SYSTEM (BCM)

[WITH INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Test Item	Description
THEFT IND	This test is able to check security indicator operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
CONFIRM DONGLE ID	—	Dongle ID can be checked.

THEFT ALM

THEFT ALM : CONSULT Function (BCM - THEFT ALM)

INFOID:000000010336414

DATA MONITOR

Monitored Item	Description
REQ SW -DR [On/Off]	Indicates condition of door request switch LH.
REQ SW -AS [On/Off]	Indicates condition of door request switch RH.
REQ SW-BD/TR [On/Off]	Indicates condition of back door request switch.
PUSH SW [On/Off]	Indicates condition of push-button ignition switch.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.
RKE-TR/BD [On/Off]	Indicates condition of back door open signal from Intelligent Key.

ACTIVE TEST

Test Item	Description
FLASHER	This test is able to check turn signal lamp operation [LH/RH/Off].
THEFT IND	This test is able to check security indicator lamp operation [On/Off].
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation [On].
HEADLAMP(HI)	This test is able to check vehicle security lamp operation [On].

WORK SUPPORT

Support Item	Setting	Description
SECURITY ALARM SET	On	Security alarm ON.
	Off	Security alarm OFF.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

DIAGNOSIS SYSTEM (IPDM E/R)

CONSULT Function (IPDM E/R)

INFOID:000000010336418

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Direct Diagnostic Mode	Description
Ecu Identification	The IPDM E/R part number is displayed.
Self Diagnostic Result	The IPDM E/R self diagnostic results are displayed.
Data Monitor	The IPDM E/R input/output data is displayed in real time.
Active Test	The IPDM E/R activates outputs to test components.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

ECU IDENTIFICATION

The IPDM E/R part number is displayed.

SELF DIAGNOSTIC RESULT

Refer to [PCS-20. "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Description
REVERSE SIGNAL [Open/Close]	Indicates condition of transmission range switch R (Reverse) position.
IGN RELAY [Open/Close]	Indicates condition of ignition relay-1.
PUSH SW [Open/Close]	Indicates condition of push-button ignition switch.
INTERLOCK/PNP SW [Open/Close]	Indicates condition of transmission range switch P (Park) and N (Neutral) positions.
OIL PRESSURE SW [Open/Close]	Indicates condition of oil pressure switch.
HOOD SW [Open/Close]	Indicates condition of hood switch.
COMPRESSOR [OFF/ON]	Indicates condition of A/C compressor.
HORN RELAY [OFF/ ON]	Indicates condition of horn relay.
COOLING FAN [OFF/ON]	Indicates condition of cooling fan relay-1.
FRONT WIPER HI/LO RELAY [OFF/ON]	Indicates condition of front wiper high relay.
FRONT WIPER RELAY [OFF/ON]	Indicates condition of front wiper relay.
IGN RELAY OFF STATUS [OFF/ON]	Indicates condition of ignition relay-1 OFF status.
IGN RELAY ON STATUS [OFF/ON]	Indicates condition of ignition relay-1 ON status.
COOLING FAN RELAY 1 [OFF/ON]	Indicates condition of cooling fan relay-1.
STARTER RELAY [OFF/ON]	Indicates condition of starter relay.
COMP ECV DUTY [%]	Indicates condition of A/C compressor.
COOLING FAN RELAY 2 [%]	Indicates condition of cooling fan relay-2.
FR FOG LAMP LH [%]	Indicates condition of front fog lamp LH.
FR FOG LAMP RH [%]	Indicates condition of front fog lamp RH.
PARKING LAMP [%]	Indicates condition of parking lamp.
TAIL LAMP LH [%]	Indicates condition of tail lamp LH.
TAIL LAMP RH [%]	Indicates condition of tail lamp RH.
DAYTIME RUNNING LIGHT LH [%]	Indicates condition of daytime running light LH.
DAYTIME RUNNING LIGHT RH [%]	Indicates condition of daytime running light RH.
HEADLAMP (HI) LH [%]	Indicates condition of headlamp high beam LH.

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Monitor Item [Unit]	Description	
HEADLAMP (HI) RH [%]	Indicates condition of headlamp high beam RH.	A
HEADLAMP (LO) LH [%]	Indicates condition of headlamp low beam LH.	
HEADLAMP (LO) RH [%]	Indicates condition of headlamp low beam RH.	B
A/C RELAY STUCK [NG/OK]	Indicates condition of A/C relay.	
A/C RELAY [Off/On]	Indicates condition of A/C relay.	
COMP ECV STATUS [NG/OK]	Indicates condition of A/C compressor.	C
VEHICLE SECURITY HORN [Off/On]	Indicates condition of horn relay.	
BATTERY CURRENT SENSOR [NG/OK]	Indicates condition of battery current sensor.	D
FRONT FOG LAMP [Off/On]	Indicates condition of front fog lamps.	
COMP ECV CURRENT [A]	Indicates condition of A/C compressor current.	
BATTERY VOLTAGE [V]	Indicates condition of battery voltage.	E
COOLING FAN DUTY [%]	Indicates condition of cooling fans.	
HOOD SW (CAN) [OPEN/CLOSE]	Indicates condition of hood switch.	F
FRONT WIPER [STOP/LOW/HIGH]	Indicates condition of front wiper motor.	
FR WIPER STOP POSITION [STOP P/ACTIVE P]	Indicates condition of front wiper motor stop.	
HEADLAMP (HI) [Off/On]	Indicates condition of headlamp high beams.	G
HEADLAMP (LO) [Off/On]	Indicates condition of headlamp low beams.	
IGNITION RELAY STATUS [Off/On]	Indicates condition of ignition relay-1.	
IGN RELAY MONITOR [Off/On]	Indicates condition of ignition relay-1 feedback.	H
IGNITION POWER SUPPLY [Off/On]	Indicates condition of ignition relay-1.	
INTERLOCK/PNP SW (CAN) [Off/On]	Indicates condition of transmission range switch P (Park) and N (Neutral) positions.	I
PUSH-BUTTON IGN SW (CAN) [Off/On]	Indicates condition of push-button ignition switch.	
TAIL LAMP [Off/On]	Indicates condition of tail lamps.	J
REVERSE SIGNAL (CAN) [Off/On]	Indicates condition of transmission range switch R (Reverse) position.	SEC
ST&ST CONT RELAY STATUS [Off/ST R On]	Indicates condition of starter cut and starter relays.	
STARTER MOTOR STATUS [Off/On]	Indicates condition of starter motor.	
STARTER RELAY (CAN) [LOW/HIGH]	Indicates condition of starter relay.	L
IPDM NOT SLEEP [NO RDY/RDY]	Indicates condition of IPDM E/R sleep status.	
AFTER COOLING TIME [No request/Request]	Indicates condition of cooling fan request.	
AFTER COOLING SPEED [%]	Indicates condition of cooling fans.	M
COOLING FAN TYPE [NISSAN/RENAULT]	Indicates cooling fan type.	
COMPRESSOR REQ1 [Off/On]	Indicates condition of A/C compressor request.	
VHCL SECURITY HORN REQ [Off/On]	Indicates condition of horn relay request.	N
DTRL REQ [Off/On]	Indicates condition of daytime running light request.	
SLEEP/WAKE UP [WAKEUP/SLEEP]	Indicates condition of IPDM E/R sleep/wake.	O
CRANKING ENABLE-TCM [NG/OK]	Indicates condition of crank enable from TCM.	
CRANKING ENABLE-ECM [NG/OK]	Indicates condition of crank enable from ECM.	
CAN DIAGNOSIS [NG/OK]	Indicates condition of CAN diagnosis.	P
FRONT FOG LAMP REQ [Off/On]	Indicates condition of front fog lamp request.	
HIGH BEAM REQ [Off/On]	Indicates condition of headlamp high beam request.	
HORN CHIRP [Off/On]	Indicates condition of horn relay request.	
COOLING FAN REQ [%]	Indicates condition of cooling fan request.	
ENGINE STATUS [STOP/RUN/IDLING]	Indicates condition of engine status.	

DIAGNOSIS SYSTEM (IPDM E/R)

< SYSTEM DESCRIPTION >

[WITH INTELLIGENT KEY SYSTEM]

Monitor Item [Unit]	Description
TURN SIGNAL REQ [Off/LH/RH]	Indicates condition of turn signal request.
FR WIPER REQ [RETURN/LOW/HIGH]	Indicates condition of front wiper motor request.
SHIFT POSITION [P/R/N/D/L]	Indicates condition of transmission range switch positions.
LOW BEAM REQ [Off/On]	Indicates condition of headlamp low beam request.
POSITION LIGHT REQ [Off/On]	Indicates condition of parking lamp request.
COMPRESSOR REQ2 [Off/On]	Indicates condition of A/C compressor request.
IGNITION SW [Off/On]	Indicates condition of ignition switch.
VEHICLE SPEED (METER) [mph/km/h]	Indicates vehicle speed.
BAT DISCHARGE COUNT [0-100]	Indicates condition of battery discharge.
BATTERY STATUS [NG/OK]	Indicates battery status.

ACTIVE TEST

Test item	Description
HORN	This test is able to check horn operation [Off/On].
FRONT WIPER	This test is able to check wiper motor operation [Off/Low/High].
COMPRESSOR	This test is able to check A/C compressor operation [Off/On].
COOLING FAN (DUAL)	This test is able to check cooling fan operation [Off/LO/HI].
HEADLAMP (HI)	This test is able to check headlamp high beam operation [Off/3/5].
HEADLAMP (LO)	This test is able to check headlamp low beam operation [Off/3/5].
FRONT FOG LAMP	This test is able to check front fog lamp operation [Off/3/5].
DAYTIME RUNNING LAMP	This test is able to check daytime running lamp operation [Off/3/5].
PARKING LAMP	This test is able to check parking lamp operation [Off/3/5].
TAIL LAMP	This test is able to check tail lamp operation [Off/3/5].

CAN DIAG SUPPORT MNTR

Refer to [LAN-14, "CAN Diagnostic Support Monitor"](#).

ECU DIAGNOSIS INFORMATION

ECM, IPDM E/R, BCM

List of ECU Reference

INFOID:0000000010284338

ECU		Reference
ECM	Reference Value	EC-77, "Reference Value"
	Fail-safe	EC-89, "Fail Safe"
	DTC Inspection Priority Chart	EC-92, "DTC Inspection Priority Chart"
	DTC Index	EC-93, "DTC Index"
IPDM E/R	Reference Value	PCS-12, "Reference Value"
	Fail-safe	PCS-19, "Fail-safe"
	DTC Index	PCS-20, "DTC Index"
BCM	Reference Value	BCS-28, "Reference Value"
	Fail-safe	BCS-47, "Fail Safe"
	DTC Inspection Priority Chart	BCS-47, "DTC Inspection Priority Chart"
	DTC Index	BCS-48, "DTC Index"

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >


WIRING DIAGRAM

ENGINE START FUNCTION

Wiring Diagram

INFOID:000000010284339

INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION

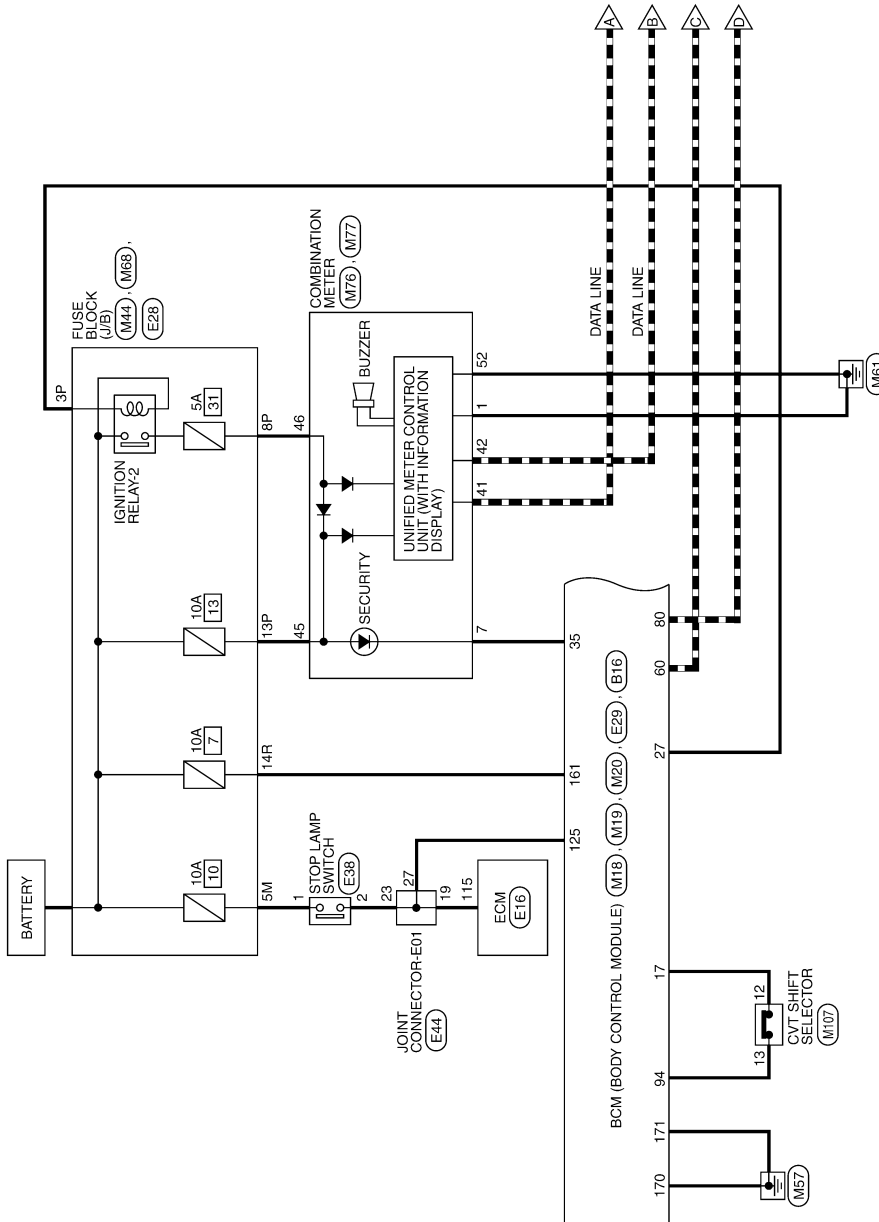


AAKWA0781GB

ENGINE START FUNCTION

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

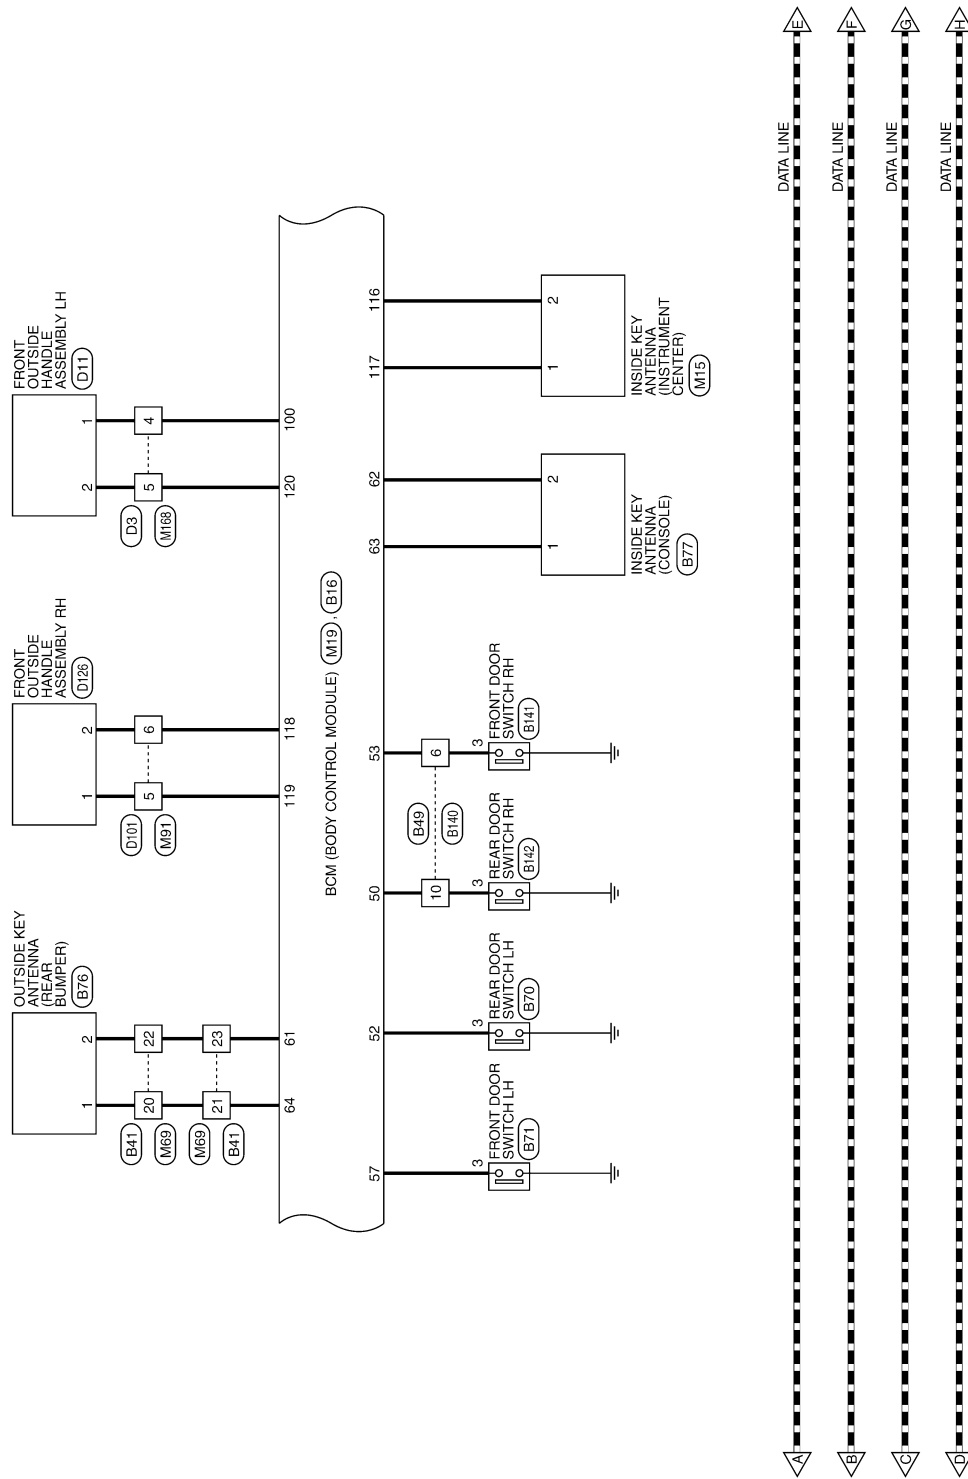

AAKWA0782GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

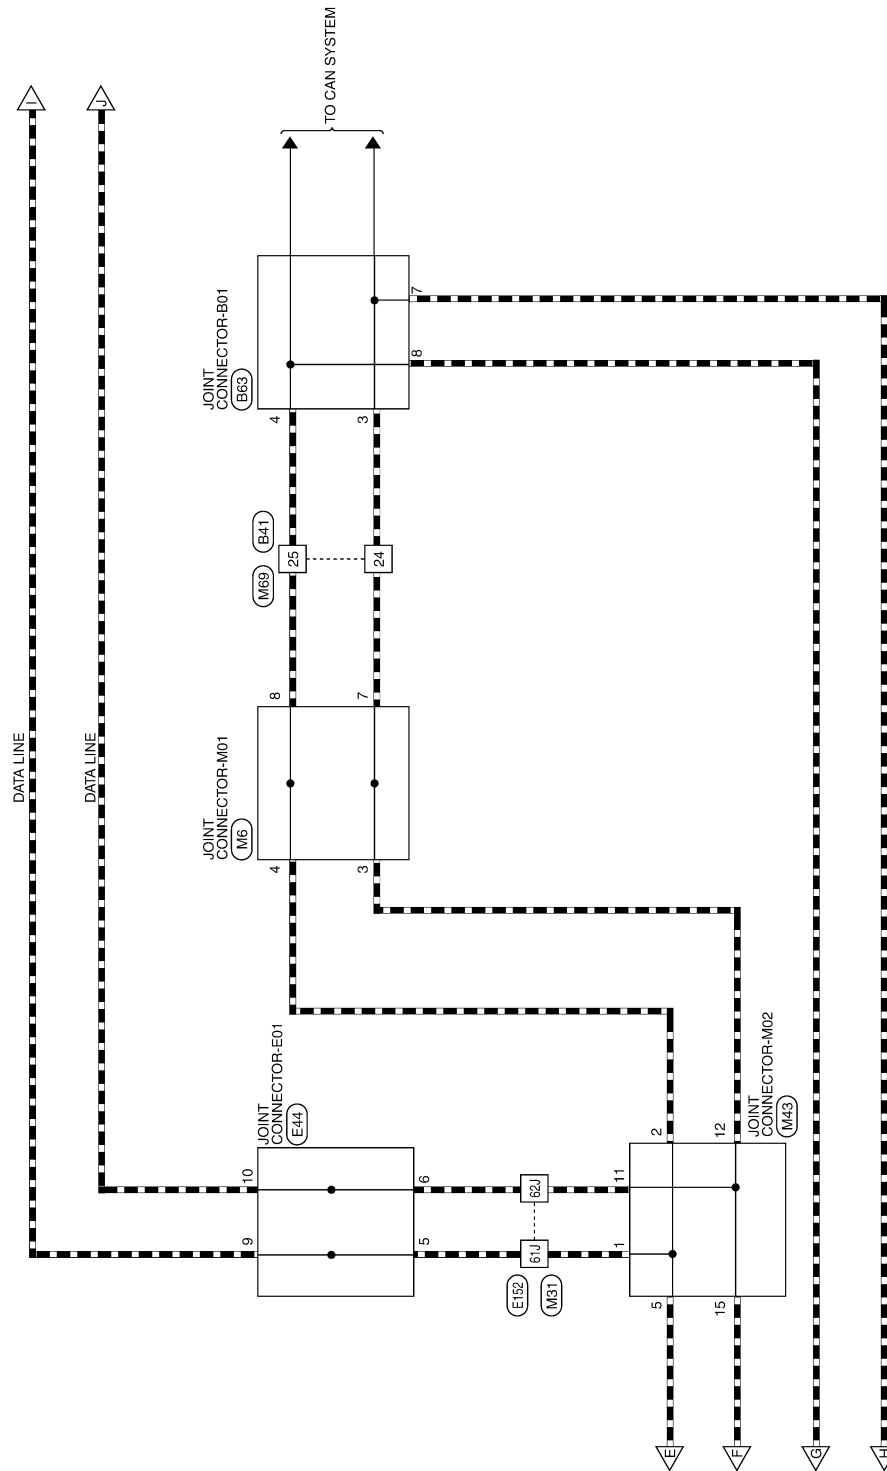

AAKWA0783GB


ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

INTELLIGENT KEY SYSTEM ENGINE START FUNCTION CONNECTORS

Connector No.	M6
Connector Name	JOINT CONNECTOR-M01
Connector Color	GRAY

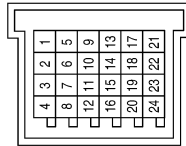

Terminal No.	Color of Wire	Signal Name
3	P	-
4	L	-
7	P	-
8	L	-

Connector No.	M14
Connector Name	JOINT CONNECTOR-M30
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	Y	-
3	Y	-
4	Y	-

Connector No.	M15
Connector Name	INSIDE KEY ANTENNA (INSTRUMENT CENTER)
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
1	GR	-
2	BG	-

Connector No.	M17
Connector Name	PUSH BUTTON IGNITION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	B	-
5	Y	-
7	B	-
8	W	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
17	L	O PWR ATDVC
27	Y	O IGN1 RL
35	BG	O SECURITY LED

ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
161	W	I PWR ECU
170	B	I GND1
171	B	I GND2

Connector No.	M43
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
5	L	-
11	P	-
12	P	-
15	P	-

Terminal No.	Color of Wire	Signal Name
94	G	I AT LOCKED IN PARK SW
100	V	SES EXT DR ANTENNA A
116	BG	SES INT FRONT ANTENNA B
117	GR	SES INT FRONT ANTENNA A
118	SB	SES EXT AS ANTENNA B
119	P	SES EXT AS ANTENNA A
120	BR	SES EXT DR ANTENNA B


Terminal No.	Color of Wire	Signal Name
37J	Y	-
61J	L	-
62J	P	-

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

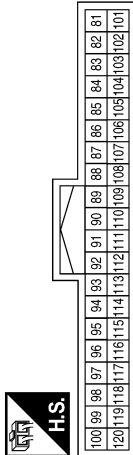

Terminal No.	Color of Wire	Signal Name
88	W	O START SW BACKLIGHT LED
89	Y	I START WO ESCL SW

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

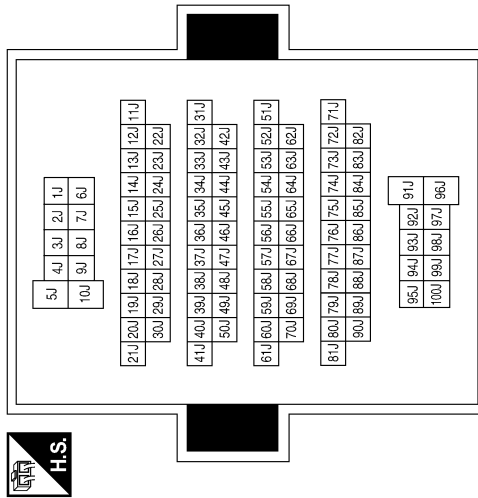

AAKIA1829GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P



SEC

ENGINE START FUNCTION

< WIRING DIAGRAM >



[WITH INTELLIGENT KEY SYSTEM]

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
20	BG	-
21	BG	-
22	GR	-
23	GR	-
24	P	-
25	L	-

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5	P	-
6	SB	-

Connector No.	M68
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
14R	W	-

Connector No.	M77
Connector Name	COMBINATION METER
Connector Color	WHITE


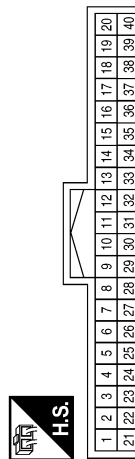
Terminal No.	Color of Wire	Signal Name
41	L	CAN-H
42	P	CAN-L
45	LA/G	BAT
46	LA/BR	IGN
52	B	GND2

Connector No.	M44
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
3P	Y	-
8P	LA/BR	-
13P	LA/G	-

Connector No.	M76
Connector Name	COMBINATION METER
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
1	B	GND1
7	BG	SECURITY

AAKIA1830GB

ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	M170
Connector Name	JOINT CONNECTOR-M29
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	-
2	B	-

Connector No.	M168
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4	V	-
5	BR	-

Connector No.	M107
Connector Name	CVT SHIFT SELECTOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
12	L	-
13	G	-

Connector No.	E19
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
7	G	-

Connector No.	E16
Connector Name	ECM
Connector Color	BLACK

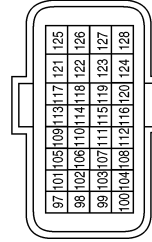

Terminal No.	Color of Wire	Signal Name
115	V	BRAKE

Connector No.	E2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-

AAKIA1831GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	E38
Connector Name	STOP LAMP SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	V	-
2	LG	-

Connector No.	E29
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
125	LG	I BRAKE SW2
139	G	O STCUT RL

Connector No.	E28
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5M	V	-

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
22	P	CAN-L
24	L	CAN-H
31	B	2ND SIGNAL GROUND
32	GR	LI PUSH SW

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
12	B	SIGNAL GROUND

Connector No.	E44
Connector Name	JOINT CONNECTOR-E01
Connector Color	WHITE

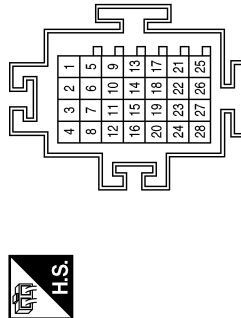

Terminal No.	Color of Wire	Signal Name
5	L	-
6	P	-
9	L	-
10	P	-
19	V	-
23	LG	-
27	LG	-

AAKIA1832GB

ENGINE START FUNCTION

< WIRING DIAGRAM >


[WITH INTELLIGENT KEY SYSTEM]

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	RED



Terminal No.	Color of Wire	Signal Name
47	B	POWER GROUND

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

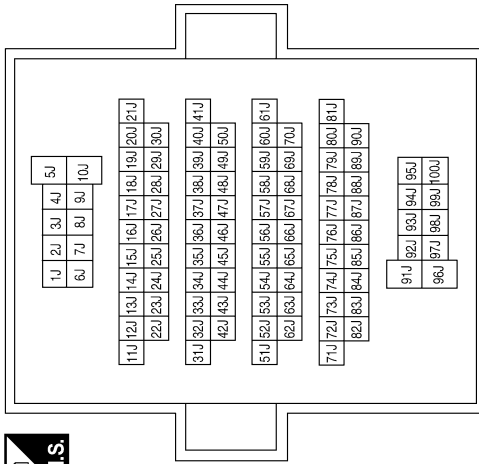

Terminal No.	Color of Wire	Signal Name
37J	GR	-
61J	L	-
62J	P	-

Connector No.	F32
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-

Connector No.	F33
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
7	G	-

Connector No.	F35
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
70	BG	O IGN AT LPG

Connector No.	F41
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
83	G	O STARTER
86	GR	FL STARTER

AAKIA1833GB

A B C D E F G H I J K L M N O P


SEC

ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	F42
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
92	GR	LI NP SW

Connector No.	F55
Connector Name	STARTER CUT RELAY
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	SB	-
2	G	-
3	L	-
5	GR	-

Connector No.	F78
Connector Name	TRANSMISSION RANGE SWITCH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
7	BG	-
10	GR	-

Connector No.	B16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN




Terminal No.	Color of Wire	Signal Name
50	W	I RR DOOR SW
52	R	I RL DOOR SW
53	SB	I AS DOOR2 SW
57	SB	I DR DOOR2 SW
60	L	CAN-H
61	BR	SES EXT REAR ANTENNA B
62	Y	SES INT MIDDLE ANTENNA B
63	L	SES INT MIDDLE ANTENNA A
64	G	SES EXT REAR ANTENNA A
80	P	CAN-L

Connector No.	B41
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
20	LG	-
21	G	-
22	V	-
23	BR	-
24	P	-
25	L	-

Connector No.	B49
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	SB	-
10	W	-


AAKIA1834GB

ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	B71
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	SB	-

Connector No.	B70
Connector Name	REAR DOOR SWITCH LH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	R	-

Connector No.	B63
Connector Name	JOINT CONNECTOR-B01
Connector Color	GRAY

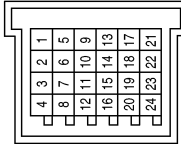

Terminal No.	Color of Wire	Signal Name
3	P	-
4	L	-
7	P	-
8	L	-

Connector No.	B140
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	GR	-
10	W	-

Connector No.	B77
Connector Name	INSIDE KEY ANTENNA (CONSOLE)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	L	-
2	Y	-

Connector No.	B76
Connector Name	OUTSIDE KEY ANTENNA (REAR BUMPER)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	V	-

AAKIA1835GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P



SEC

ENGINE START FUNCTION

[WITH INTELLIGENT KEY SYSTEM]



< WIRING DIAGRAM >

Connector No.	B141
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	GR	-

Connector No.	B142
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	W	-

Connector No.	D3
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4	V	-
5	SB	-

Connector No.	D11
Connector Name	FRONT OUTSIDE HANDLE ASSEMBLY LH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	V	-
2	SB	-

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
5	R	-
6	SB	-

Connector No.	D126
Connector Name	FRONT OUTSIDE HANDLE ASSEMBLY RH
Connector Color	BLACK

Terminal No.	Color of Wire	Signal Name
1	R	-
2	SB	-

AAKIA1836GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS


< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

Wiring Diagram

INFOID:000000010284340

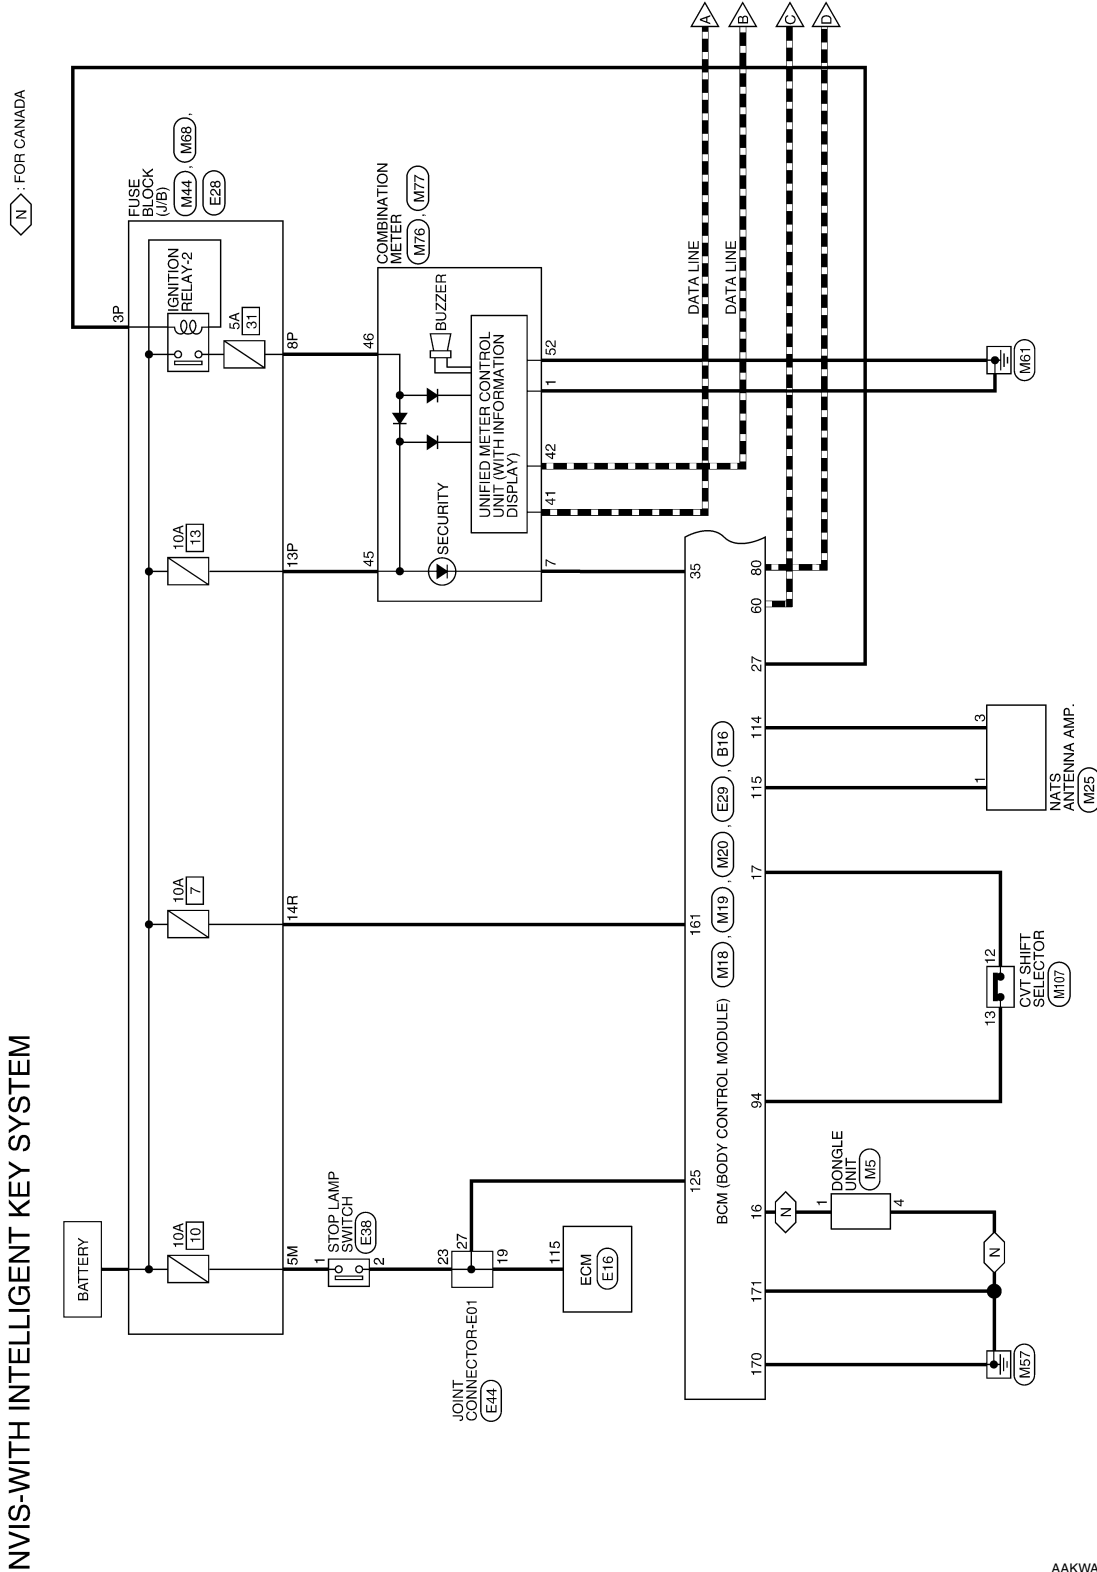

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


SEC

AAKWA0761GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

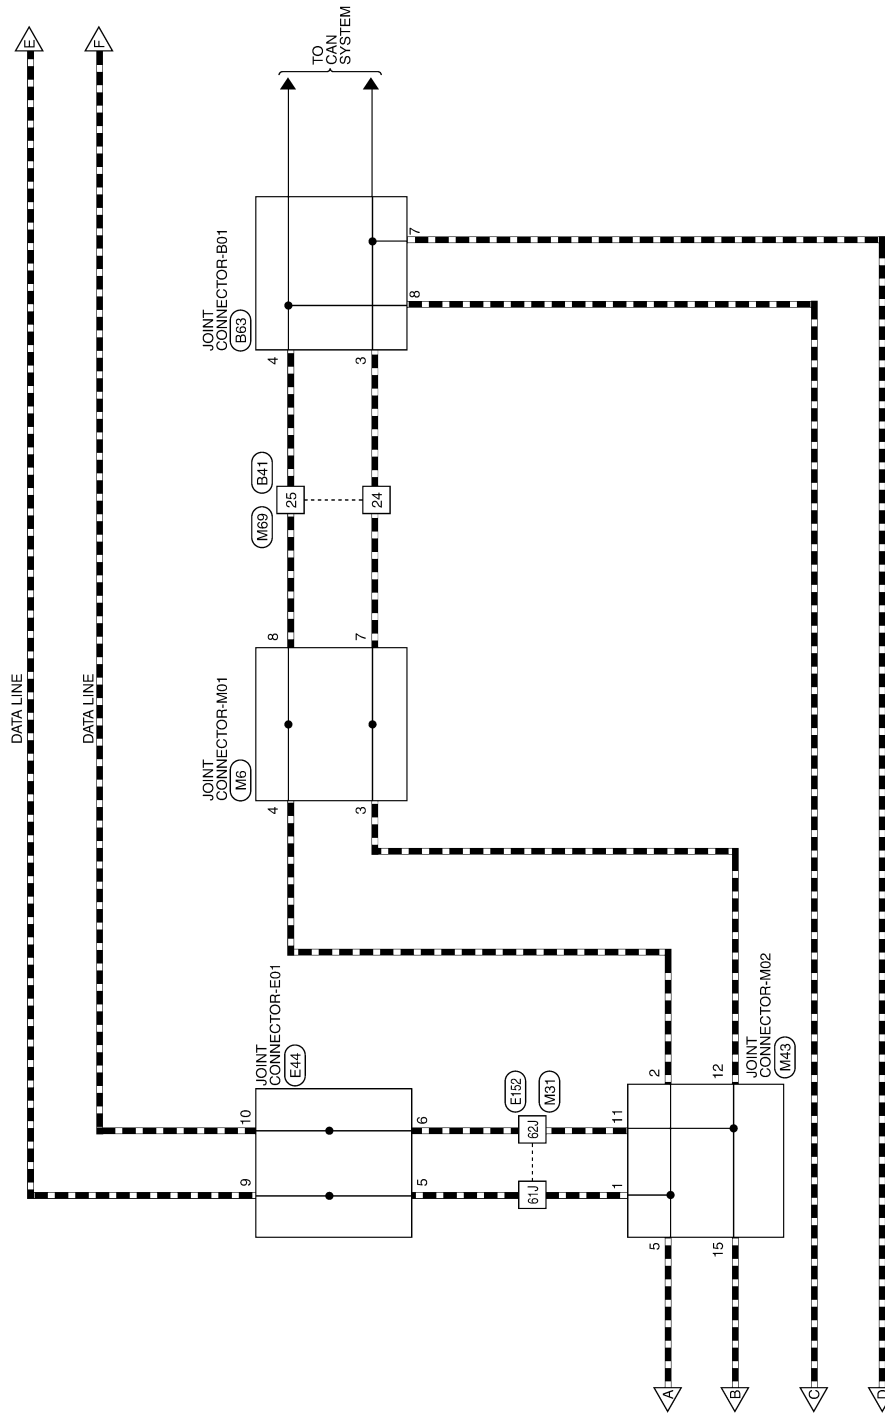


AAKWA0762GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

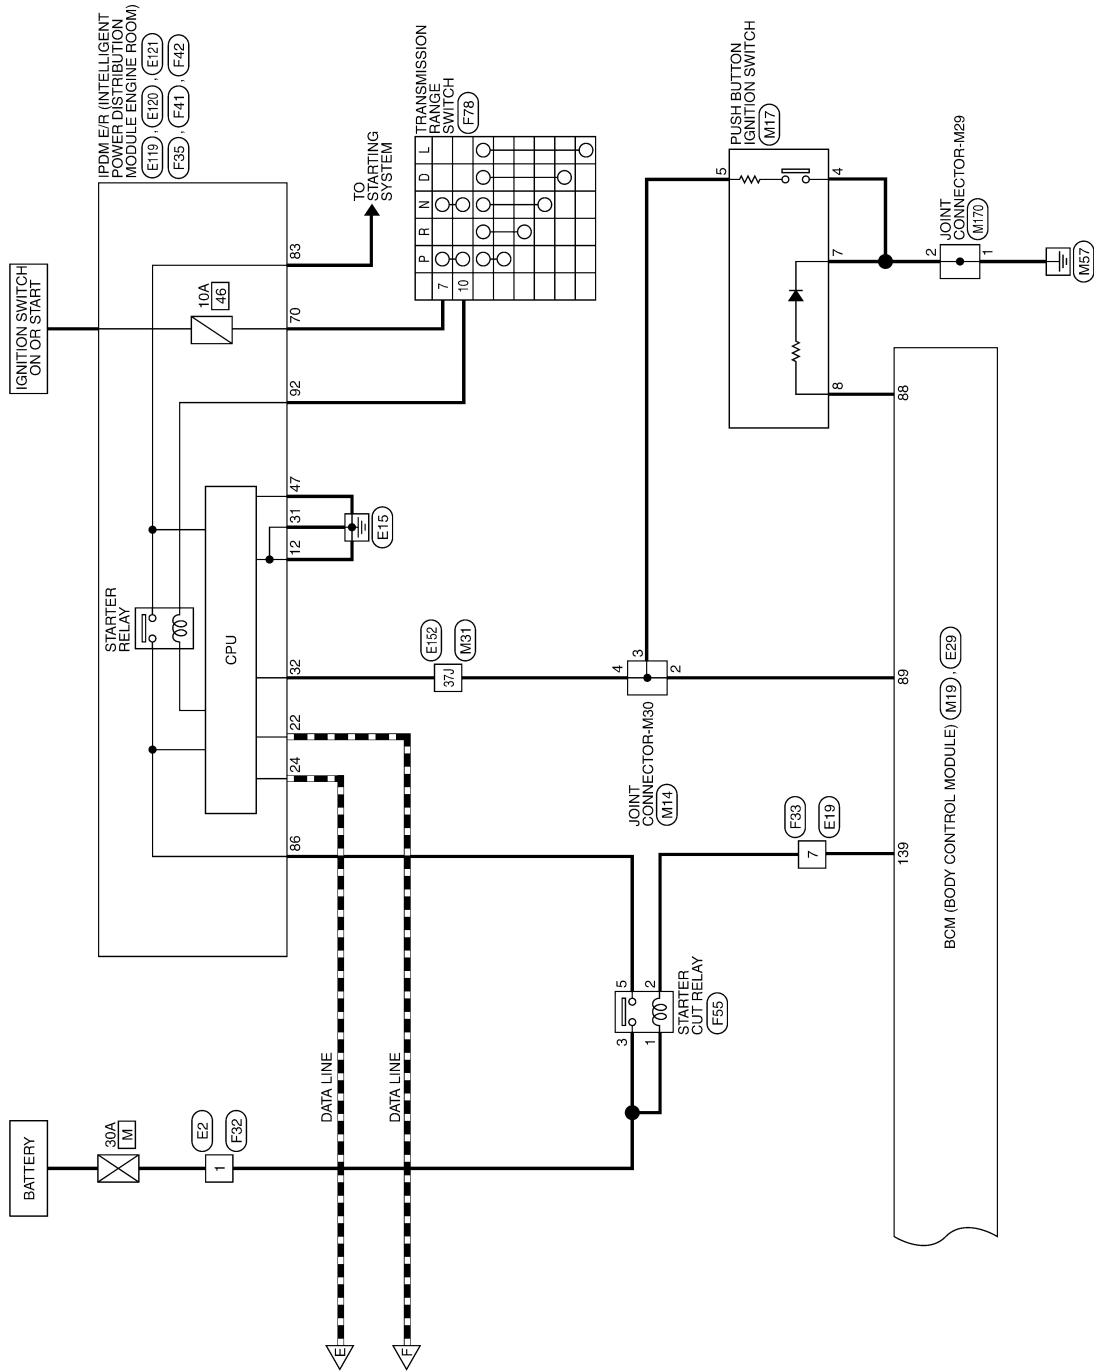

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

AAKWA0763GB


NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]


NVIS - WITH INTELLIGENT KEY SYSTEM CONNECTORS

Connector No.	M5
Connector Name	DONGLE UNIT
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	P	-
4	B	-

Connector No.	M6
Connector Name	JOINT CONNECTOR-M01
Connector Color	GRAY

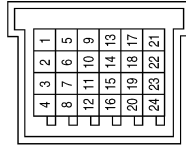


Terminal No.	Color of Wire	Signal Name
3	P	-
4	L	-
7	P	-
8	L	-

Connector No.	M14
Connector Name	JOINT CONNECTOR-M30
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	Y	-
3	Y	-
4	Y	-

Connector No.	M17
Connector Name	PUSH BUTTON IGNITION SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
4	B	-
5	Y	-
7	B	-
8	W	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY

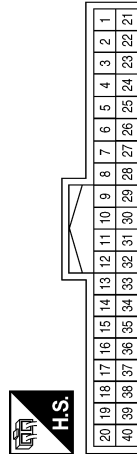

Terminal No.	Color of Wire	Signal Name
16	P	DONGLE UART
17	L	O PWR ATDVC
27	Y	O IGN1 RL
35	BG	O SECURITY LED

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK

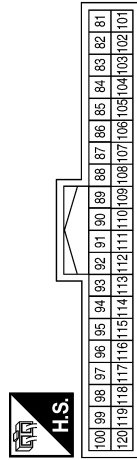


Terminal No.	Color of Wire	Signal Name
88	W	O START SW BACKLIGHT LED
89	Y	I START WO ESCL SW
94	G	I AT LOCKED IN PARK SW
114	Y	O IMMOBILIZER KAZASHI B
115	W	O IMMOBILIZER KAZASHI A

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	M25
Connector Name	NATS ANTENNA AMP (WITH INTELLIGENT KEY SYSTEM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	W	-
3	Y	-

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
161	W	I PWR ECU
170	B	I GND 1
171	B	I GND 2

Connector No.	M43
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
37J	Y	-
61J	L	-
62J	P	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

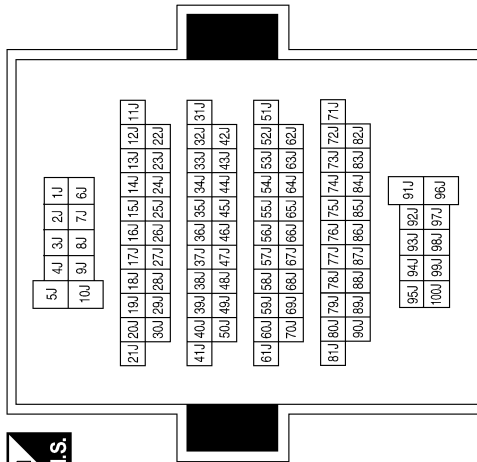

AAKIA1815GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P



SEC

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >


[WITH INTELLIGENT KEY SYSTEM]

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

Terminal No.	Color of Wire	Signal Name
24	P	-
25	L	-

Connector No.	M68
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
14R	W	-

Connector No.	M44
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3P	Y	-
8P	LA/BR	-
13P	LA/G	-

Connector No.	M107
Connector Name	CVT SHIFT SELECTOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
12	L	-
13	G	-

Connector No.	M77
Connector Name	COMBINATION METER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
41	L	CAN-H
42	P	CAN-L
45	LA/G	BAT
46	LA/BR	IGN
52	B	GND2

Connector No.	M76
Connector Name	COMBINATION METER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	GND1
7	BG	SECURITY


AAKIA1816GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	E16
Connector Name	ECM
Connector Color	BLACK

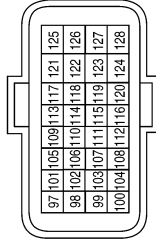

Terminal No.	Color of Wire	Signal Name
115	V	BRAKE

Connector No.	E2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-

Connector No.	M170
Connector Name	JOINT CONNECTOR-M29
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
2	B	-

Connector No.	E29
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
125	LG	I BRAKE SW2
139	G	O STCUT RL

Connector No.	E28
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5M	V	-

Connector No.	E19
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
7	G	-

AAKIA1817GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >


[WITH INTELLIGENT KEY SYSTEM]

Connector No.	E38
Connector Name	STOP LAMP SWITCH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	V	-
2	LG	-

Connector No.	E44
Connector Name	JOINT CONNECTOR-E01
Connector Color	WHITE

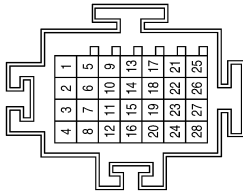


Terminal No.	Color of Wire	Signal Name
5	L	-
6	P	-
9	L	-
10	P	-
19	V	-
23	LG	-
27	LG	-

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
12	B	SIGNAL GROUND

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
22	P	CAN-L
24	L	CAN-H
31	B	2ND SIGNAL GROUND
32	GR	LI PUSH SW

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	RED



Terminal No.	Color of Wire	Signal Name
47	B	POWER GROUND


AAKIA1818GB

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

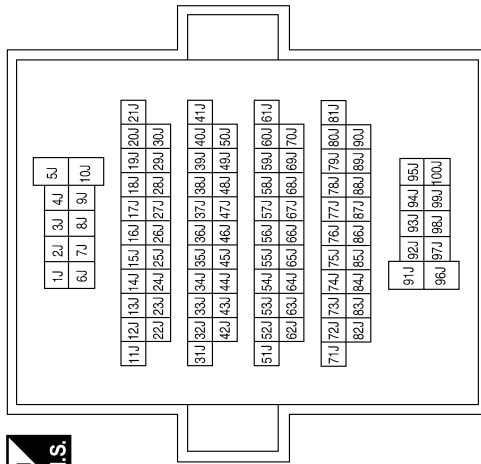

Terminal No.	Color of Wire	Signal Name
37J	GR	-
61J	L	-
62J	P	-

Connector No.	F32
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-

Connector No.	F33
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Connector No.	F35
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Connector No.	F41
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
7	G	-

Terminal No.	Color of Wire	Signal Name
70	BG	O IGN AT LPG

Terminal No.	Color of Wire	Signal Name
83	G	O STARTER
86	GR	FL STARTER

AAKIA1819GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P


SEC

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]

Connector No.	F78
Connector Name	TRANSMISSION RANGE SWITCH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
7	BG	-
10	GR	-

Connector No.	F55
Connector Name	STARTER CUT RELAY
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	SB	-
2	G	-
3	L	-
5	GR	-

Connector No.	F42
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
92	GR	L1 NP SW

Connector No.	B63
Connector Name	JOINT CONNECTOR-B01
Connector Color	GRAY

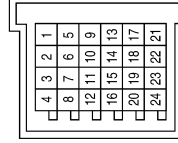

Terminal No.	Color of Wire	Signal Name
3	P	-
4	L	-
7	P	-
8	L	-

Connector No.	B41
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
24	P	-
25	L	-

Connector No.	B16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



Terminal No.	Color of Wire	Signal Name
60	L	CAN-H
80	P	CAN-L

AAK1A1820GB

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >


VEHICLE SECURITY SYSTEM

Wiring Diagram

INFOID:000000010284341

<PB> : WITH POWER BACK DOOR
 <XB> : WITHOUT POWER BACK DOOR
 *1 <PB> : 7
 *2 <PB> : 8
 *1 <XB> : 4

VEHICLE SECURITY SYSTEM

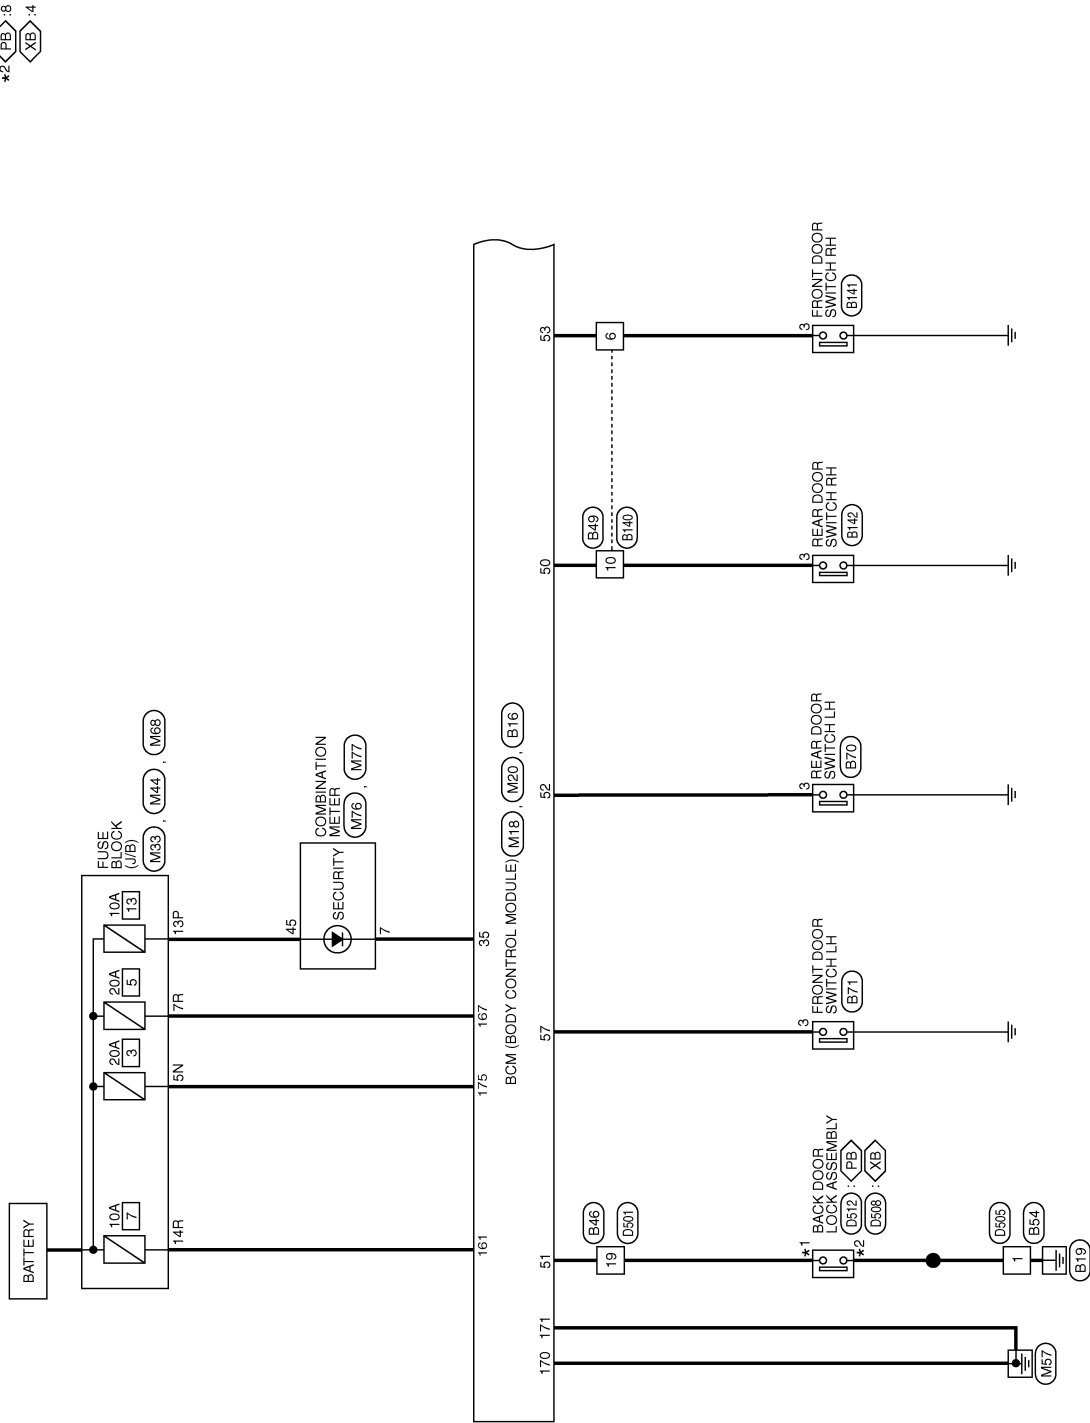

AAKWA0775GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

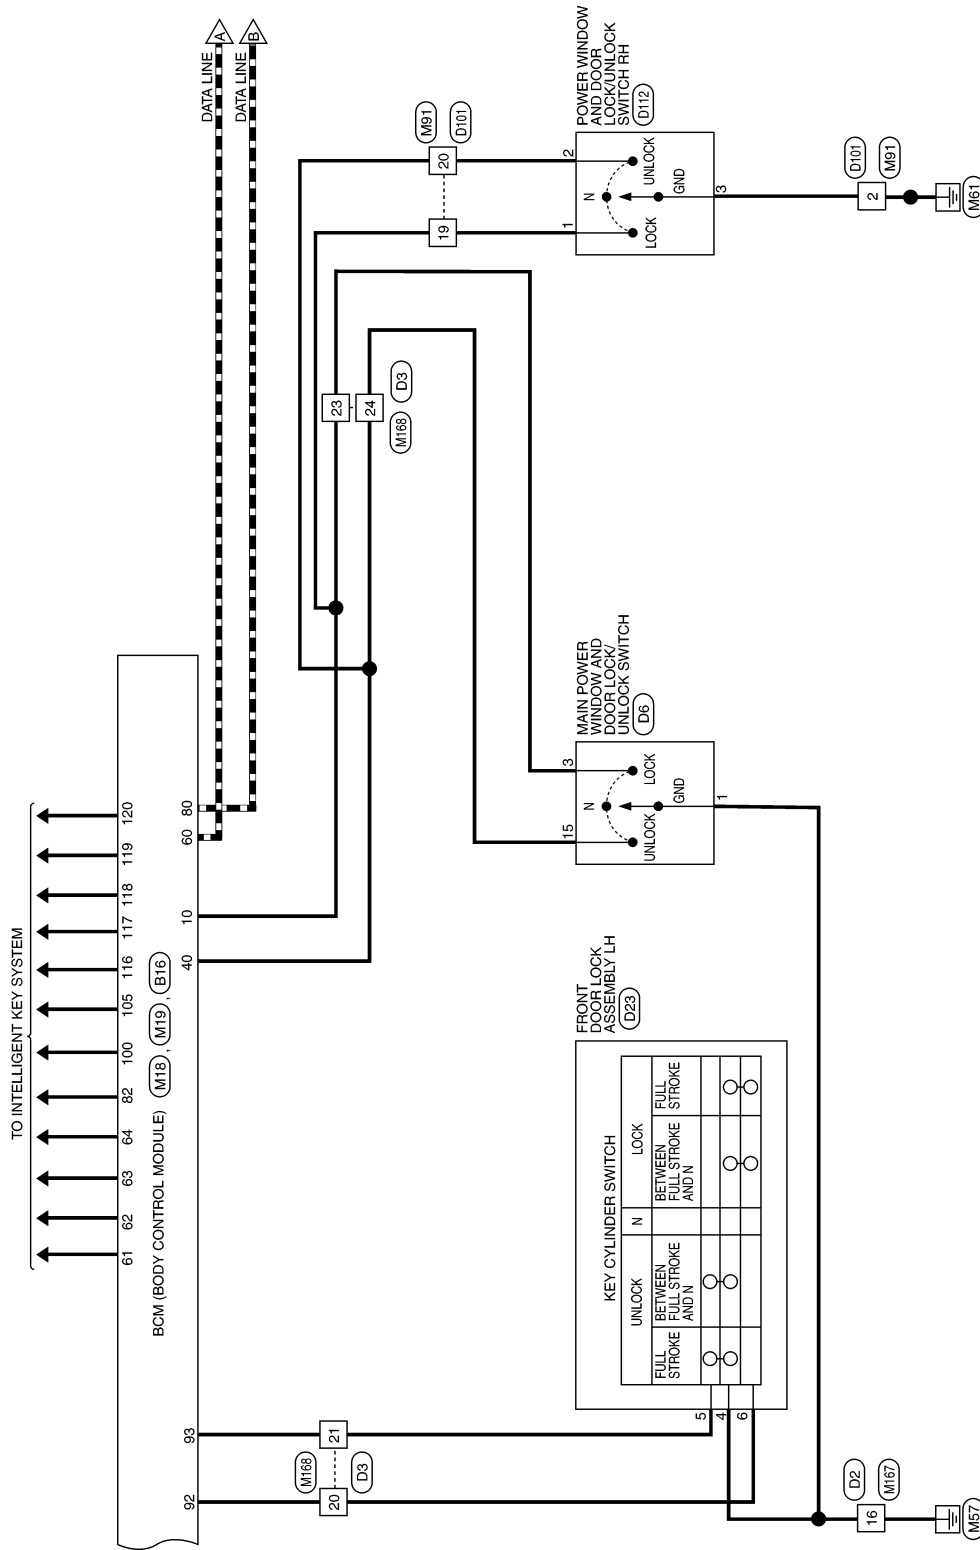


AAKWA0776GB

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

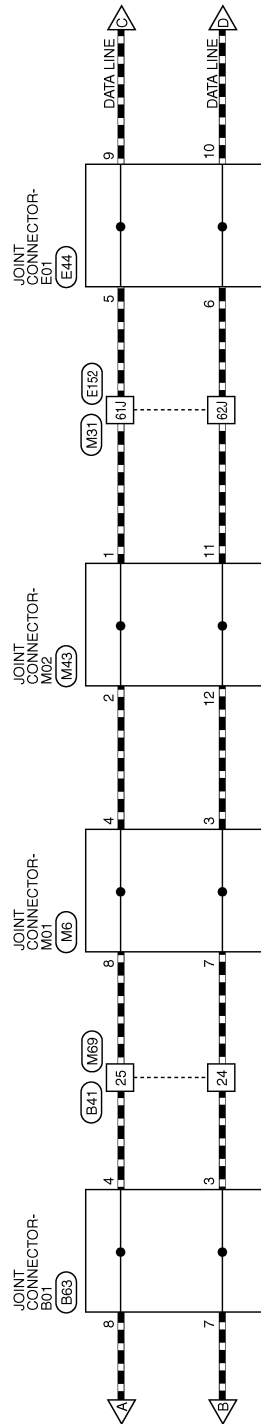

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

AAKWA0777GB


VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >


VEHICLE SECURITY SYSTEM CONNECTORS

Connector No.	M6
Connector Name	JOINT CONNECTOR-M01
Connector Color	GRAY

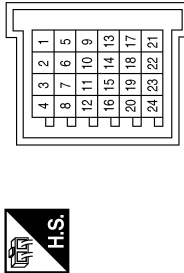


Terminal No.	Color of Wire	Signal Name
3	P	-
4	L	-
7	P	-
8	L	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
10	BG	I DOORLOCK SW
35	BG	O SECURITY LED
40	SB	I DOORUNLOCK SW

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
82	W	I SES AS HANDLE BUTTON SW
92	BR	I-KEY CYLINDER LOCK SW
93	P	I-KEY CYLINDER UNLOCK SW
100	V	SES EXT DR ANTENNA A
105	Y	I SES DR HANDLE BUTTON
116	BG	SES INT FRONT ANTENNA B
117	GR	SES INT FRONT ANTENNA A
118	SB	SES EXT AS ANTENNA B
119	P	SES EXT AS ANTENNA A
120	BR	SES EXT DR ANTENNA B

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
161	W	I PWR ECU
167	LA/V	I PWR DOORLOCK1
170	B	I GND1
171	B	I GND2
175	R	I PWR DOORLOCK2

AAKIA1805GB

A B C D E F G H I J L M N O P


SEC

VEHICLE SECURITY SYSTEM

< WIRING DIAGRAM >

[WITH INTELLIGENT KEY SYSTEM]


Connector No.	M33
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5N	R	-

Terminal No.	Color of Wire	Signal Name
61J	L	-
62J	P	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

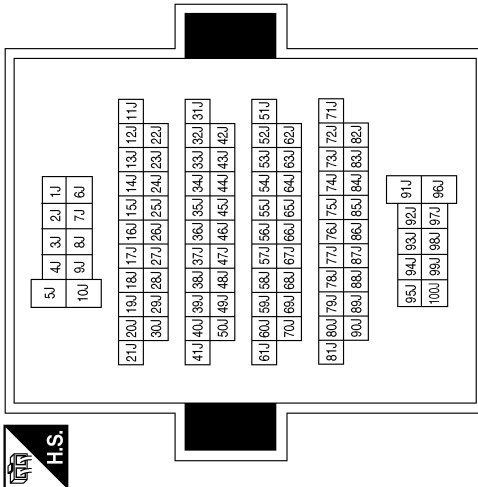

Connector No.	M68
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
7R	LAV	-
14R	W	-

Connector No.	M44
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
13P	LA/G	-

Connector No.	M43
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
11	P	-
12	P	-


AAKIA1806GB

VEHICLE SECURITY SYSTEM

< WIRING DIAGRAM >


[WITH INTELLIGENT KEY SYSTEM]

Connector No.	M77
Connector Name	COMBINATION METER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
45	LA/G	BAT

Connector No.	M76
Connector Name	COMBINATION METER
Connector Color	WHITE

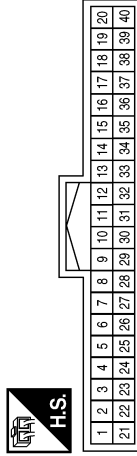


Terminal No.	Color of Wire	Signal Name
7	BG	SECURITY

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
24	P	-
25	L	-

Connector No.	M168
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
20	BR	-
21	P	-
23	BG	-
24	SB	-

Connector No.	M167
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
16	B	-

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	GR	-
19	LG	-
20	BR	-

AAKIA1807GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

< WIRING DIAGRAM >


[WITH INTELLIGENT KEY SYSTEM]

Connector No.	E40
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	3	Color of Wire	B	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	E44
Connector Name	JOINT CONNECTOR-E01
Connector Color	WHITE

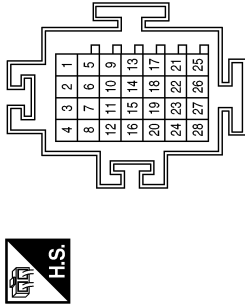

Terminal No.	5	Color of Wire	L	Signal Name	-
	6		P		-
	9		L		-
	10		P		-

Connector No.	E46
Connector Name	HORN
Connector Color	BLACK



Terminal No.	2	Color of Wire	B	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	E47
Connector Name	HORN
Connector Color	BROWN



Terminal No.	1	Color of Wire	R	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	E48
Connector Name	HORN (LOW)
Connector Color	BLACK



Terminal No.	2	Color of Wire	B	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	E49
Connector Name	HORN (LOW)
Connector Color	BROWN




Terminal No.	1	Color of Wire	R	Signal Name	-
--------------	---	---------------	---	-------------	---

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
22	P	CAN-L
24	L	CAN-H
31	B	2ND SIGNAL GROUND

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
9	L	LO HRN RLY
12	B	SIGNAL GROUND


Connector No.	E101
Connector Name	ANTI-THEFT HORN RELAY
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	R	-
3	GR	-

Terminal No.	Color of Wire	Signal Name
61J	L	-
62J	P	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

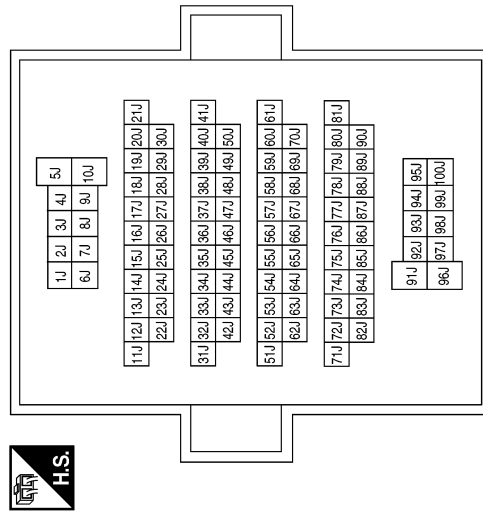

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	RED



Terminal No.	Color of Wire	Signal Name
47	B	POWER GROUND

AAKIA1809GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	E201
Connector Name	WIRE TO WIRE
Connector Color	WHITE

2	1	
4	3	



Terminal No.	Color of Wire	Signal Name
3	B	-

Connector No.	E217
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN

51	50	49
56	55	54 53 52



Terminal No.	Color of Wire	Signal Name
52	W	LI HOOD SW

Connector No.	E223
Connector Name	HOOD SWITCH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	B	-
2	W	-

Connector No.	B16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41
80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61

Terminal No.	Color of Wire	Signal Name
50	W	I RR DOOR SW
51	LG	I TGATESW
52	R	I RL DOOR SW
53	SB	I AS DOOR2 SW
57	SB	I DR DOOR2 SW
60	L	CAN-H
61	BR	SES EXT REAR ANTENNA B
62	Y	SES INT MIDDLE ANTENNA B
63	L	SES INT MIDDLE ANTENNA A
64	G	SES EXT REAR ANTENNA A
80	P	CAN-L

Connector No.	B41
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Terminal No.	Color of Wire	Signal Name
24	P	-
25	L	-

Connector No.	B46
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Terminal No.	Color of Wire	Signal Name
19	LG	-


AAKIA1810GB

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	B63
Connector Name	JOINT CONNECTOR-B01
Connector Color	GRAY

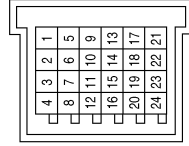


Terminal No.	Color of Wire	Signal Name
3	P	-
4	L	-
7	P	-
8	L	-

Connector No.	B54
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-

Connector No.	B49
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	SB	-
10	W	-

Connector No.	B140
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	GR	-
10	W	-

Connector No.	B71
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	SB	-

Connector No.	B70
Connector Name	REAR DOOR SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	R	-

AAKIA1811GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P


SEC

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	16	Color of Wire	B	Signal Name	-
--------------	----	---------------	---	-------------	---

Connector No.	B142
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE




Terminal No.	3	Color of Wire	R	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	B141
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE




Terminal No.	3	Color of Wire	GR	Signal Name	-
--------------	---	---------------	----	-------------	---

Connector No.	D23
Connector Name	FRONT DOOR LOCK ASSEMBLY LH
Connector Color	GRAY




Terminal No.	4	Color of Wire	B	Signal Name	-
	5		P		-
	6		BR		-

Connector No.	D6
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE



Terminal No.	1	Color of Wire	B	Signal Name	-
	3		L		-
	15		BG		-

Connector No.	D3
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	20	Color of Wire	BR	Signal Name	-
	21		P		-
	23		L		-
	24		BG		-


AAKIA1812GB

VEHICLE SECURITY SYSTEM

[WITH INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	B	-
19	LG	-
20	BR	-

Connector No.	D112
Connector Name	FRONT POWER WINDOW SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	BR	-
3	B	-

Connector No.	D501
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
19	W	-

Connector No.	D505
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-

Connector No.	D508
Connector Name	BACK DOOR LOCK ASSEMBLY (WITHOUT POWER BACK DOOR SYSTEM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	W	-
4	GR	-
15	BG	-

Connector No.	D512
Connector Name	BACK DOOR LOCK ASSEMBLY (WITH POWER BACK DOOR SYSTEM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	W	-
8	B	-

AAKIA1813GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000010284342

OVERALL SEQUENCE

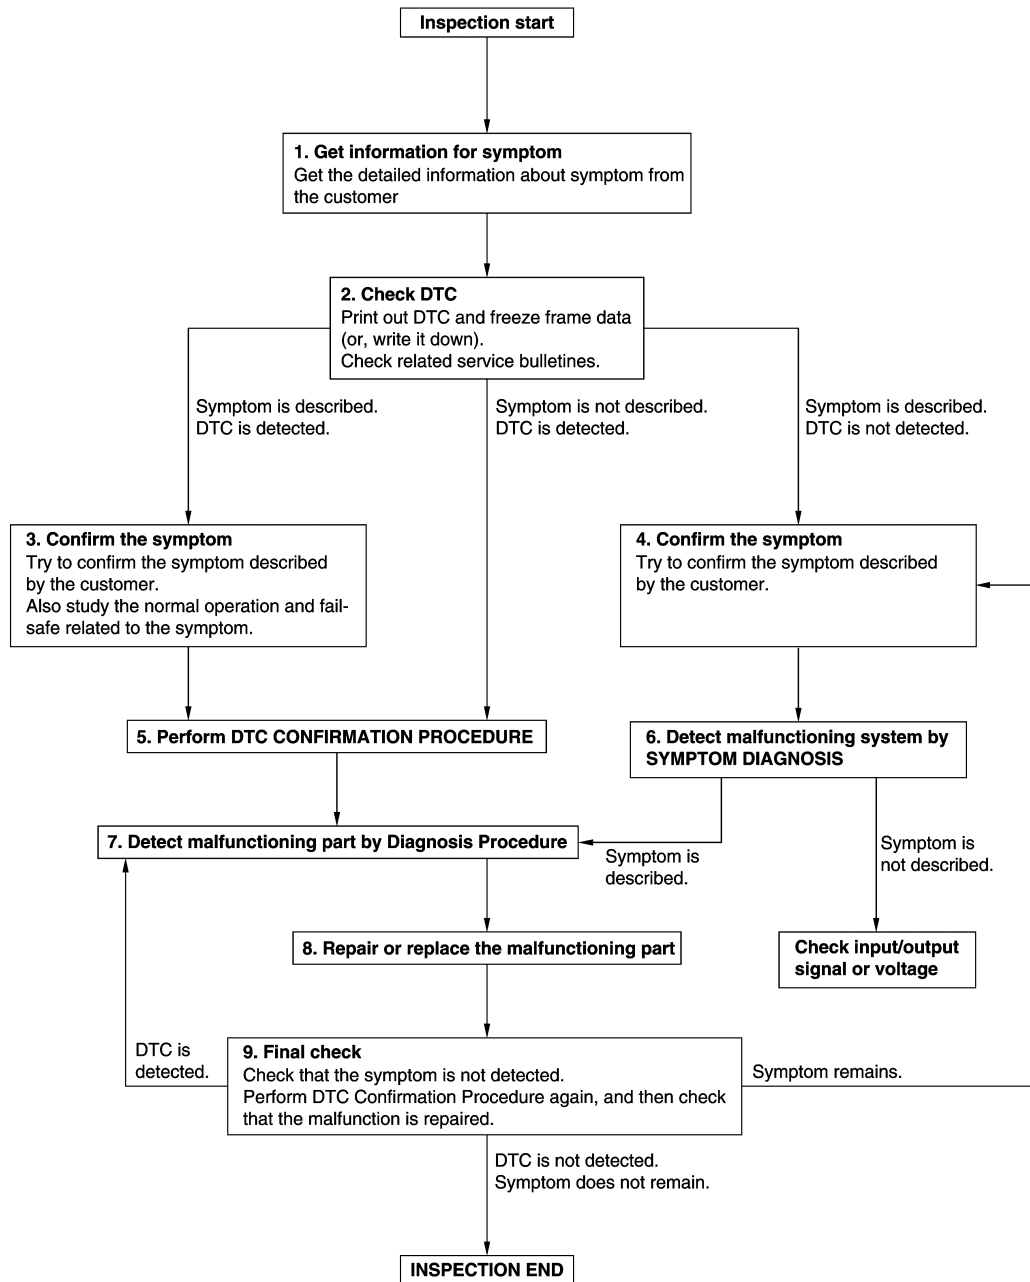

JMKIA8652GB

DETAILED FLOW

DIAGNOSIS AND REPAIR WORK FLOW

[WITH INTELLIGENT KEY SYSTEM]

< BASIC INSPECTION >

1. GET INFORMATION FOR SYMPTOM

1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

2. CHECK DTC

1. Check DTC.
2. Perform the following procedure if DTC is detected.
 - Record DTC and freeze frame data (Print them out using CONSULT.)
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time. If two or more DTCs are detected, refer to [BCS-107. "DTC Inspection Priority Chart"](#) and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIRMATION PROCEDURE.

Is DTC detected?

YES >> GO TO 7.

NO >> Check according to [GI-41. "Intermittent Incident"](#).

6. DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CONSULT.

7. DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

DIAGNOSIS AND REPAIR WORK FLOW

[WITH INTELLIGENT KEY SYSTEM]

< BASIC INSPECTION >

Inspect according to Diagnosis Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to [GI-41. "Intermittent Incident"](#).

8. REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ECM

ECM : Description

INFOID:000000010284343

Performing the following procedure can automatically activate recommunication of ECM and BCM, but only when the ECM is replaced with a new one*.

*: New one means an ECM that has never been energized on-board.

(In this step, initialization procedure by CONSULT is not necessary)

NOTE:

- If multiple keys are attached to the key holder, separate them before beginning work.
- Distinguish keys with unregistered key IDs from those with registered IDs.

ECM : Work Procedure

INFOID:000000010284344

1.PERFORM ECM RECOMMUNICATING FUNCTION

1. Install ECM.
2. Contact backside of registered Intelligent key* to push-button ignition switch, then turn ignition switch to ON.
*: To perform this step, use the key that is used before performing ECM replacement.
3. Maintain ignition switch in the ON position for at least 5 seconds.
4. Turn ignition switch to OFF.
5. Check that the engine starts.

>> GO TO 2.

2.PERFORM ADDITIONAL SERVICE WHEN REPLACING ECM

Perform [EC-136. "Work Procedure"](#).

>> Inspection End.

BCM

BCM : Description

INFOID:000000010284345

BEFORE REPLACEMENT

When replacing BCM, save or print current vehicle specification with CONSULT configuration before replacement.

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

AFTER REPLACEMENT

CAUTION:

When replacing BCM, always perform "WRITE CONFIGURATION" with CONSULT. Or not doing so, BCM control function does not operate normally.

- Complete the procedure of "WRITE CONFIGURATION" in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.

NOTE:

When replacing BCM, perform the system initialization (NATS). Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

BCM : Work Procedure

INFOID:000000010284346

1.SAVING VEHICLE SPECIFICATION

ⓂCONSULT Configuration

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-121, "CONFIGURATION \(BCM\) : Description"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

< BASIC INSPECTION >

[WITH INTELLIGENT KEY SYSTEM]

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

>> GO TO 2.

2. REPLACE BCM

Replace BCM. Refer to [BCS-135, "Removal and Installation"](#).

>> GO TO 3.

3. WRITING VEHICLE SPECIFICATION

ⓅCONSULT Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual selection" to write vehicle specification. Refer to [BCS-121, "CONFIGURATION \(BCM\) : Work Procedure"](#).

>> GO TO 4.

4. INITIALIZE BCM (NATS)

Perform BCM initialization. (NATS) Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

DTC/CIRCUIT DIAGNOSIS

P1610 LOCK MODE

Description

INFOID:0000000010284347

ECM forcibly switches to the mode that inhibits engine start, when engine start operation is performed 5 times or more while communication between ECM and BCM is not normal.

DTC Logic

INFOID:0000000010284348

DTC DETECTION LOGIC

NOTE:

- If DTC B1610 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-64, "DTC Logic"](#).
- If DTC B1610 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-65, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1610	LOCK MODE	When ECM detects a communication malfunction between ECM and BCM 5 times or more.	—

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self-Diagnostic Result" mode of "ENGINE" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-67, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000010284349

1. CHECK ENGINE START FUNCTION

1. Check that there are no DTC's except for DTC P1610 detected.
If detected, erase the DTC after fixing.
2. Turn ignition switch OFF.
3. Contact the registered Intelligent Key backside to push-button ignition switch and wait 5 seconds.
4. Turn ignition switch ON.
5. Turn ignition switch OFF and wait 5 seconds.
6. Repeat steps 3 and 5 twice (a total of 3 times).
7. Check that engine can start.

>> Inspection End.



P1611 ID DISCORD, IMMU-ECM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

P1611 ID DISCORD, IMMU-ECM

DTC Logic

INFOID:000000010284350

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1611	ID DISCORD, IMMU-ECM	The ID verification results between BCM and ECM are NG.	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted.)• BCM• ECM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self-Diagnostic Result" mode of "ENGINE" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-68, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010284351

1. PERFORM INITIALIZATION

Perform initialization of BCM and reregistration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with reregistered Intelligent Key?

- YES >> Inspection End.
NO >> GO TO 2.

2. CHECK SELF DIAGNOSTIC RESULT

1. Select "Self Diagnostic Result" mode of "ENGINE" using CONSULT.
2. Erase DTC.
3. Perform DTC CONFIRMATION PROCEDURE for DTC P1611. Refer to [SEC-68, "DTC Logic"](#).

Is DTC detected?

- YES >> GO TO 3.
NO >> Inspection End.

3. REPLACE BCM

1. Replace BCM. Refer to [BCS-75, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with registered Intelligent Key?

- YES >> Inspection End.
NO >> GO TO 4.

4. REPLACE ECM

1. Replace ECM. Refer to [EC-499, "Removal and Installation"](#).
2. Perform "ADDITIONAL SERVICE WHEN REPLACING ECM". Refer to [EC-136, "Work Procedure"](#).

>> Inspection End.

P1612 CHAIN OF ECM-IMMU

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

P1612 CHAIN OF ECM-IMMU

DTC Logic

INFOID:000000010284352

DTC DETECTION LOGIC

NOTE:

- If DTC P1612 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-64, "DTC Logic"](#).
- If DTC P1612 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-65, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1612	CHAIN OF BCM-ECM	Inactive communication between BCM and ECM	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted.)• ECM• BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-69, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010284353

NOTE:

- If DTC P1612 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-64, "DTC Logic"](#).
- If DTC P1612 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-65, "DTC Logic"](#).

1.CHECK BCM POWER SUPPLY AND GROUND CIRCUIT.

Check BCM power supply and ground circuit. Refer to [BCS-68, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the harness.

2.CHECK ECM POWER SUPPLY AND GROUND CIRCUIT.

Check ECM power supply and ground circuit. Refer to [EC-165, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the harness.

3.PERFORM DTC CONFIRMATION PROCEDURE.

Perform the DTC confirmation procedure. Refer to [SEC-69, "DTC Logic"](#).

Does the DTC return?

- YES >> Replace BCM. Refer to [BCS-75, "Removal and Installation"](#)
NO >> Inspection End.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

P161D IMMOBILIZER

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

P161D IMMOBILIZER

DTC Logic

INFOID:000000010374886

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P161D	IMMOBILIZER	When immobilizer detects a malfunction, and prohibits the engine start.	BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self Diagnostic Result" mode of "ENGINE" using CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-72. "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010374887

1.REPLACE BCM

Replace BCM. Refer to [BCS-75. "Removal and Installation"](#).

>> Inspection End.

P161E IMMOBILIZER

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

P161E IMMOBILIZER

DTC Logic

INFOID:000000010374888

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P161E	IMMOBILIZER	After replacing the ECM, when the ECM is not registered to the vehicle by using the CONSULT.	<ul style="list-style-type: none">• BCM• ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self Diagnostic Result" mode of "ENGINE" using CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-72, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010374889

1.PERFORM REGISTRATION OF ECM

Perform registration of ECM using CONSULT.

Is DTC detected?

- YES >> Inspection End.
NO >> GO TO 2.

2.REPLACE BCM

Replace BCM. Refer to [BCS-75, "Removal and Installation"](#).

Is DTC detected?

- YES >> GO TO 3.
NO >> Inspection End.

3.REPLACE ECM

Replace ECM. Refer to [EC-499, "Removal and Installation"](#).

>> Inspection End.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

P161F IMMOBILIZER

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

P161F IMMOBILIZER

DTC Logic

INFOID:000000010374890

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P161F	IMMOBILIZER	When immobilizer detects a malfunction, and prohibits the engine start.	ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self Diagnostic Result" mode of "ENGINE" using CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-72. "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010374891

1.REPLACE ECM

Replace ECM. Refer to [EC-499. "Removal and Installation"](#).

>> Inspection End.

B2192 ID DISCORD, IMMUECM

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2192 ID DISCORD, IMMUECM

DTC Logic

INFOID:000000010284380

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2192	ID DISCORD BCM-ECM	The ID verification results between BCM and ECM are NG.	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted.)• BCM• ECM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-73, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010284381

1. PERFORM INITIALIZATION

Perform initialization of BCM and reregistration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with reregistered Intelligent Key?

- YES >> Inspection End.
NO >> GO TO 2.

2. CHECK SELF-DIAGNOSTIC RESULT

1. Select "Self Diagnostic Result" mode of "BCM" using CONSULT.
2. Erase DTC.
3. Perform DTC CONFIRMATION PROCEDURE for DTC B2192. Refer to [SEC-73, "DTC Logic"](#).

Is DTC detected?

- YES >> GO TO 3.
NO >> Inspection End.

3. REPLACE BCM

1. Replace BCM. Refer to [BCS-75, "Removal and Installation"](#).
2. Perform initialization of BCM and reregistration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with registered Intelligent Key?

- YES >> Inspection End.
NO >> GO TO 4.

4. REPLACE ECM

1. Replace ECM. Refer to [EC-499, "Removal and Installation"](#).
2. Perform "ADDITIONAL SERVICE WHEN REPLACING ECM". Refer to [EC-136, "Work Procedure"](#).

>> Inspection End.

B2193 CHAIN OF ECM-IMMU

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2193 CHAIN OF ECM-IMMU

DTC Logic

INFOID:000000010284382

DTC DETECTION LOGIC

NOTE:

- If DTC B2193 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-64, "DTC Logic"](#).
- If DTC B2193 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-65, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2193	CHAIN OF BCM-ECM	Inactive communication between BCM and ECM	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted.)• ECM• BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-74, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010284383

NOTE:

- If DTC B2193 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-64, "DTC Logic"](#).
- If DTC B2193 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-65, "DTC Logic"](#).

1. CHECK BCM POWER SUPPLY AND GROUND CIRCUIT.

Check BCM power supply and ground circuit. Refer to [BCS-68, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the harness.

2. CHECK ECM POWER SUPPLY AND GROUND CIRCUIT.

Check ECM power supply and ground circuit. Refer to [EC-165, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> Replace ECM. Refer to [EC-499, "Removal and Installation"](#). GO TO 3.
NO >> Repair or replace the harness.

3. PERFORM DTC CONFIRMATION PROCEDURE.

Perform the DTC confirmation procedure. Refer to [SEC-74, "DTC Logic"](#).

Does the DTC return?

- YES >> Replace BCM. Refer to [BCS-75, "Removal and Installation"](#)
NO >> Inspection End.

B2196 DONGLE UNIT

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

B2196 DONGLE UNIT

Description

INFOID:000000010284386

BCM performs ID verification between BCM and dongle unit.
When verification result is OK, BCM permits cranking.

DTC Logic

INFOID:000000010284387

DTC DETECTION LOGIC

NOTE:

- If DTC B2196 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-64, "DTC Logic"](#).
- If DTC B2196 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-65, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2196	DONGLE NG	The ID verification results between BCM and dongle unit is NG.	<ul style="list-style-type: none">• Harness or connectors (Dongle unit circuit is open or shorted.)• Dongle unit

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Turn ignition switch OFF.
3. Turn ignition switch ON.
4. Check "Self-diagnostic Result" of "BCM" using CONSULT.

Is the DTC detected?

- YES >> Refer to [SEC-75, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010284388

Regarding Wiring Diagram information, refer to [SEC-39, "Wiring Diagram"](#).

1. PERFORM INITIALIZATION

1. Perform initialization of BCM and reregistration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.
2. Start the engine.

Dose the engine start?

- YES >> Inspection End.
NO >> GO TO 2.

2. CHECK DONGLE UNIT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and dongle unit connector.
3. Check continuity between BCM harness connector and dongle unit harness connector.

BCM		Dongle unit		Continuity
Connector	Terminal	Connector	Terminal	
M18	16	M5	1	Yes

4. Check continuity between BCM harness connector and ground.

B2196 DONGLE UNIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

BCM		Ground	Continuity
Connector	Terminal		
M18	16		No

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3. CHECK DONGLE UNIT GROUND CIRCUIT

Check continuity between dongle unit harness connector and ground.

Dongle unit		Ground	Continuity
Connector	Terminal		
M5	4		Yes

Is the inspection result normal?

YES >> Replace dongle unit.

NO >> Repair or replace harness.

B2198 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2198 NATS ANTENNA AMP.

DTC Logic

INFOID:000000010284389

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2198	NATS ANTENNA AMP	Inactive communication between NATS antenna amp. and BCM.	<ul style="list-style-type: none"> • Harness or connectors (The NATS antenna amp. circuit is open or shorted) • NATS antenna amp. • BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE 1

1. Contact Intelligent Key back side to push-button ignition switch.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-77. "Diagnosis Procedure"](#).
 NO >> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE 2

1. Press the push-button ignition switch.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-77. "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010284390

Regarding Wiring Diagram information, refer to [SEC-39. "Wiring Diagram"](#).

SEC

1. CONNECTOR INSPECTION

1. Disconnect BCM and NATS antenna amp.
2. Check connectors and terminals for deformation, disconnection, looseness or damage.

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair or replace as necessary.

2. CHECK NATS ANTENNA AMP. CIRCUIT

1. Disconnect BCM connector and NATS antenna amp. connector.
2. Check continuity between BCM harness connector and NATS antenna amp. harness connector.

BCM		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
M19	114	M25	3	Yes
	115		1	

3. Check continuity between BCM harness connector and ground.

B2198 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

BCM		Ground	Continuity
Connector	Terminal		No
M19	114 115		



Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3. CHECK NATS ANTENNA AMP INPUT SIGNAL 1

1. Turn ignition switch ON.
2. Check signal between BCM harness connector and ground using oscilloscope.

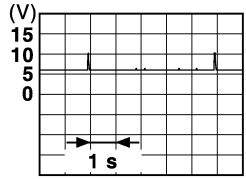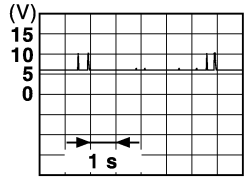(+)		(-)	Condition	Signal (Reference value)
BCM				
Connector	Terminal			
M19	114, 115	Ground	When Intelligent Key is in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA3839GB</p>
			When Intelligent Key is not in the antenna detection area	 <p style="text-align: right; font-size: small;">JMKIA5951GB</p>

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-75. "Removal and Installation"](#).

NO >> Replace NATS antenna amp. Refer to [SEC-110. "Removal and Installation"](#).

B2556 PUSH-BUTTON IGNITION SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2556 PUSH-BUTTON IGNITION SWITCH

DTC Logic

INFOID:000000010284394

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2556	PUSH-BTN IGN SW	BCM detects the push-button ignition switch stuck at ON for 100 seconds or more.	<ul style="list-style-type: none"> Harness or connectors (Push-button ignition switch circuit is shorted.) Push-button ignition switch BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

- Press push-button ignition switch under the following condition:
 - Brake pedal: Not depressed
- Release push-button ignition switch and wait 100 seconds or more.
- Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-79. "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010284395

Regarding Wiring Diagram information, refer to [SEC-26. "Wiring Diagram"](#).

1. CHECK PUSH-BUTTON IGNITION SWITCH INPUT SIGNAL

- Turn ignition switch OFF.
- Disconnect push-button ignition switch connector.
- Check voltage between push-button ignition switch harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Push-button ignition switch			
Connector	Terminal	Ground	Battery voltage
M17	5		

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> GO TO 2.

2. CHECK PUSH-BUTTON IGNITION SWITCH CIRCUIT

- Disconnect BCM connector and IPDM E/R connector.
- Check continuity between push-button ignition switch harness connector and BCM harness connector.

Push-button ignition switch		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M17	5	M19	89	Yes

- Check continuity between push-button ignition switch harness connector and ground.

Push-button ignition switch		Ground	Continuity
Connector	Terminal		
M17	5		No

B2556 PUSH-BUTTON IGNITION SWITCH

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace harness.

3. REPLACE BCM

1. Replace BCM. Refer to [BCS-75. "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

4. CHECK PUSH-BUTTON IGNITION SWITCH

Refer to [SEC-80. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Replace push-button ignition switch. Refer to [SEC-112. "Removal and Installation"](#).

5. CHECK INTERMITTENT INCIDENT

Refer to [GI-41. "Intermittent Incident"](#).

>> Inspection End.

Component Inspection

INFOID:0000000010284396

1. CHECK PUSH-BUTTON IGNITION SWITCH

1. Turn ignition switch OFF.
2. Disconnect push-button ignition switch connector.
3. Check continuity between push-button ignition switch terminals.

Push-button ignition switch		Condition	Continuity	
Terminal				
4	5	Push-button ignition switch	Pressed	Yes
			Not pressed	No

Is the inspection result normal?

- YES >> Inspection End.
- NO >> Replace push-button ignition switch. Refer to [SEC-112. "Removal and Installation"](#).

B2557 VEHICLE SPEED

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2557 VEHICLE SPEED

DTC Logic

INFOID:000000010284397

DTC DETECTION LOGIC

NOTE:

- If DTC B2557 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-64, "DTC Logic"](#).
- If DTC B2557 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-65, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible causes
B2557	VEHICLE SPEED	BCM detects one of the following conditions for 10 seconds continuously. <ul style="list-style-type: none">• Vehicle speed signal from combination meter is 10 km/h (6.2 MPH) or more, and vehicle speed signal from ABS actuator and electric unit (control unit) is 4 km/h (2.5 MPH) or less.• Vehicle speed signal from combination meter is 4 km/h (2.5 MPH) or less, and vehicle speed signal from ABS actuator and electric unit (control unit) is 10 km/h (6.2 MPH) or more.	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted.)• Combination meter• ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Start engine and wait 10 seconds or more.
2. Drive the vehicle at a vehicle speed of 10 km/h (6.2 MPH) or more for 10 seconds or more.
3. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-81, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010284398

1. CHECK DTC OF "ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)"

Check DTC in "Self-Diagnostic Result" mode of "ABS" using CONSULT.

Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [BRC-55, "DTC Index"](#).
NO >> GO TO 2.

2. CHECK DTC OF "COMBINATION METER"

Check DTC in "Self-Diagnostic Result" mode of "METER/M&A" using CONSULT.

Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [MWI-30, "DTC Index"](#).
NO >> GO TO 3.

3. CHECK INTERMITTENT INCIDENT

Refer to [GI-41, "Intermittent Incident"](#).

>> Inspection End.

B2602 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B2602 SHIFT POSITION

DTC Logic

INFOID:000000010284405

DTC DETECTION LOGIC

NOTE:

- If DTC B2602 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-64, "DTC Logic"](#).
- If DTC B2602 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-65, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2602	SHIFT POSITION	BCM detects the following status for 10 seconds. <ul style="list-style-type: none"> • Selector lever is in the P (Park) position • Vehicle speed is 4 km/h (2.5 MPH) or more • Ignition switch is in the ON position 	<ul style="list-style-type: none"> • Harness or connectors (CAN communication line is open or shorted.) • Harness or connectors [CVT shift selector (park position switch) circuit is open or shorted.] • CVT shift selector (park position switch) • Combination meter • BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Start engine.
2. Drive vehicle at a speed of 4 km/h (2.5 MPH) or more for 10 seconds or more.
3. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-82, "Diagnosis Procedure"](#).
- NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010284406

Regarding Wiring Diagram information, refer to [SEC-26, "Wiring Diagram"](#).

1. CHECK CVT SHIFT SELECTOR SWITCH FUNCTION

1. Turn ignition switch ON.
2. Select "DETE/CANCEL SW" and "VEH SPEED 1" in "Data Monitor" mode with CONSULT.
3. Check "DETE/CANCEL SW" and "VEH SPEED 1" indication under the following conditions.

Monitor item	Condition		Indication
DETE/CANCEL SW	CVT Shift selector	In any position other than P (Park)	OFF
		P (Park)	ON
VEH SPEED 1	Vehicle not moving		0
	Vehicle moving		Varies

Is the inspection result normal?

- YES >> Refer to [GI-41, "Intermittent Incident"](#).
- NO-1 >> If "DETE/CANCEL SW" is incorrect. GO TO 4.
- NO-2 >> If "VEH SPEED 1" is incorrect. GO TO 2.

2. CHECK DTC OF COMBINATION METER

Check DTC in "Self-Diagnostic Result" mode of "METER/M&A" using CONSULT.

B2602 SHIFT POSITION

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [MWI-30, "DTC Index"](#).
NO >> GO TO 3.

3.CHECK DTC OF ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Check DTC in "Self-Diagnostic Result" mode of "ABS" using CONSULT.

Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [BRC-55, "DTC Index"](#).
NO >> GO TO 6.

4.CHECK CVT SHIFT SELECTOR CIRCUIT

1. Disconnect BCM connector and CVT shift selector connector.
2. Check continuity between CVT shift selector (park position switch) harness connector and BCM harness connector.

CVT shift selector (park position switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M107	13	M19	94	Yes

3. Check continuity between CVT shift selector (park position switch) harness connector and ground.

CVT shift selector (park position switch)		Ground	Continuity
Connector	Terminal		
M107	13		No

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair or replace harness.

5.CHECK CVT SHIFT SELECTOR CIRCUIT

1. Disconnect BCM connector and CVT shift selector connector.
2. Check continuity between CVT shift selector (park position switch) harness connector and BCM harness connector.

CVT shift selector (park position switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M107	12	M18	17	Yes

3. Check continuity between CVT shift selector (park position switch) harness connector and ground.

CVT shift selector (park position switch)		Ground	Continuity
Connector	Terminal		
M107	12		No

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Repair or replace harness.

6.CHECK CVT SHIFT SELECTOR (PARK POSITION SWITCH)

Refer to [SEC-84, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Replace CVT shift selector. Refer to [TM-194, "Removal and Installation"](#).

7.CHECK INTERMITTENT INCIDENT

Refer to [GI-41, "Intermittent Incident"](#).

>> Inspection End.

B2602 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Component Inspection

INFOID:000000010284407

1. CHECK CVT SHIFT SELECTOR (PARK POSITION SWITCH)

1. Turn ignition switch OFF.
2. Disconnect CVT shift selector connector.
3. Check continuity between CVT shift selector (park position switch) terminals.

CVT shift selector (park position switch)		Condition	Continuity	
Terminal				
12	13	Selector lever	P (Park) position	No
			Other than above	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace CVT shift selector. Refer to [TM-194, "Removal and Installation"](#).

B260F ENGINE STATUS

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

B260F ENGINE STATUS

Description

INFOID:000000010336848

BCM receives the engine status signal from ECM via CAN communication.

DTC Description

INFOID:000000010336849

DTC DETECTION LOGIC

DTC No.	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B260F	ENG STATE SIG LOST (Engine state signal lost)	BCM has not yet received the engine status signal from ECM when ignition switch is in the ON position.

POSSIBLE CAUSE

- Harness or connectors
(The CAN communication line is open or shorted.)
- ECM

FAIL-SAFE

Inhibit engine cranking

DTC CONFIRMATION PROCEDURE

1. CHECK DTC PRIORITY

If DTC B260F is displayed with DTC U1000 or U1010, first perform the trouble diagnosis for DTC U1000 or U1010.

Is applicable DTC detected?

- YES >> Perform diagnosis of applicable. U1000: Refer to [BCS-64, "DTC Logic"](#). U1010: Refer to [BCS-65, "DTC Logic"](#).
- NO >> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON and wait 2 seconds or more.
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-85, "Diagnosis Procedure"](#).
- NO-1 >> To check malfunction symptom before repair: Refer to [GI-41, "Intermittent Incident"](#).
- NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000010336850

1. CHECK DTC PRIORITY

If DTC B260F is displayed with DTC U1000 or U1010, first perform the trouble diagnosis for DTC U1000 or U1010.

Is applicable DTC detected?

- YES >> Perform diagnosis of applicable. U1000: Refer to [BCS-64, "DTC Logic"](#). U1010: Refer to [BCS-65, "DTC Logic"](#).
- NO >> GO TO 2.

2. INSPECTION START

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "BCM" using CONSULT.
3. Touch "ERASE".
4. Perform DTC CONFIRMATION PROCEDURE for DTC B260F. Refer to [SEC-85, "DTC Description"](#).

Is DTC detected?

- YES >> GO TO 3.
- NO >> Inspection End.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B260F ENGINE STATUS

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

3.REPLACE ECM

Replace ECM. Refer [EC-499. "Removal and Installation"](#).

>> Inspection End

B261E VEHICLE TYPE

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

B261E VEHICLE TYPE

Description

INFOID:0000000010284420

There are two types of vehicles.

- HEV
- Conventional

DTC Logic

INFOID:0000000010284421

DTC DETECTION LOGIC

NOTE:

- If DTC B261E is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-64, "DTC Logic"](#).
- If DTC B261E is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-65, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B261E	VEHICLE TYPE	Difference of BCM configuration.	<ul style="list-style-type: none">• BCM mis-configuration• Wrong ECM installed

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.
 - Shift selector lever is in the P (Park) or N (Neutral) position
 - Do not depress brake pedal
2. Check "Self-Diagnostic Result" of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-87, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000010284422

1. INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" of "BCM" using CONSULT.
3. Touch "ERASE".
4. Perform DTC Confirmation Procedure. Refer to [SEC-87, "DTC Logic"](#).

Is the 1st trip DTC B261E displayed again?

- YES >> GO TO 2.
NO >> Inspection End.

2. PERFORM BCM CONFIGURATION.

Perform the BCM configuration. Refer to [BCS-60, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(BCM\) : Work Procedure"](#).

>> GO TO 3.

3. INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" of "BCM" using CONSULT.
3. Touch "ERASE".
4. Perform DTC Confirmation Procedure.
Refer to [SEC-87, "DTC Logic"](#).

Is the 1st trip DTC B261E displayed again?

- YES >> GO TO 4.
NO >> Inspection End.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

B261E VEHICLE TYPE

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

4. CONFIRM ECM PART NUMBER.

Confirm the part number of the installed ECM is correct.

Is the ECM part number correct?

- YES >> Replace BCM. Refer to [BCS-75. "Removal and Installation"](#).
- NO >> Replace ECM. Refer to [EC-499. "Removal and Installation"](#).

B26FC KEY REGISTRATION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B26FC KEY REGISTRATION

DTC Logic

INFOID:000000010336845

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B26FC	KEY REGISTRATION	Intelligent Key that does not match the vehicle is registered.	<ul style="list-style-type: none">• Improper registration operation• Intelligent Key• BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-89, "Diagnosis Procedure"](#)
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010336846

1.REPLACE INTELLIGENT KEY

1. Prepare Intelligent Key that matches the vehicle.
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.
3. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO 2.
NO >> Inspection End.

2.REPLACE BCM

1. Replace BCM. Refer to [BCS-75, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B27D1 START CUT RELAY OFF

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B27D1 START CUT RELAY OFF

DTC Logic

INFOID:000000010338519

DTC DETECTION LOGIC

NOTE:

- If DTC B27D1 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-64, "DTC Logic"](#).
- If DTC B27D1 is displayed with DTC B2605, first perform the trouble diagnosis for DTC B2605. Refer to [BCS-65, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B27D1	STARTER CUT RELAY OFF	When comparing the starter cut relay signal (CAN) from IPDM E/R, BCM detects that starter cut relay is stuck in the OFF position for 1 second or more.	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted.)• Harness or connector (Starter cut relay circuit is open or shorted.)• IPDM E/R• BCM• Starter cut relay

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Press push-button ignition switch under the following conditions to start engine, and wait 1 second or more.
 - Selector lever: In the P position
 - Brake pedal: Depressed
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-90, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010338520

Regarding Wiring Diagram information, refer to [SEC-26, "Wiring Diagram"](#).

1. CHECK STARTER CUT RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect starter cut relay.
3. Check voltage between starter cut relay harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Starter cut relay			
Connector	Terminal	Ground	Battery voltage
F55	1		
	3		

Is the inspection result normal?

- YES >> GO TO 2.
NO-1 >> Check 30 A fusible link [M, located in the fuse block (J/B)].
NO-2 >> Check harness for open or short between starter cut relay and fusible link.

2. CHECK STARTER CUT RELAY CONTROL

1. Reconnect starter cut relay.

B27D1 START CUT RELAY OFF

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

2. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)	
BCM					
Connector	Terminal				
E29	139	Ground	CVT shift selector lever	N or P position	Battery voltage
				Other than above	0

Is the inspection result normal?

- YES >> GO TO 4.
NO >> GO TO 3.

3. CHECK STARTER CUT RELAY CONTROL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Disconnect starter cut relay.
4. Check continuity between BCM harness connector and starter cut relay harness connector.

BCM		Starter cut relay		Continuity
Connector	Terminal	Connector	Terminal	
E29	139	F55	2	Yes

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace harness.

4. CHECK STARTER CUT RELAY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and starter cut relay harness connector.

IPDM E/R		Starter cut relay		Continuity
Connector	Terminal	Connector	Terminal	
F41	86	F55	5	Yes

4. Check continuity between BCM harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
F41	86		No

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair or replace harness.

5. CHECK STARTER CUT RELAY

Refer to [SEC-92. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Replace starter cut relay.

6. REPLACE BCM

1. Replace BCM. Refer to [BCS-75. "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.
3. Perform DTC CONFIRMATION PROCEDURE for DTC B27D1. Refer to [SEC-90. "DTC Logic"](#).

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace IPDM E/R. Refer to [PCS-35. "Removal and Installation"](#).

B27D1 START CUT RELAY OFF

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Component Inspection

INFOID:000000010338521

1. CHECK STARTER CUT RELAY

1. Turn ignition switch OFF.
2. Disconnect starter cut relay.
3. Check continuity between starter cut relay terminals.

Starter cut relay		Condition	Continuity
Terminal			
3	5	12 V direct current supply between terminals 1 and 2	Yes
		No current supply	No

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace starter cut relay.

B27D2 START CUT RELAY ON

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B27D2 START CUT RELAY ON

DTC Logic

INFOID:000000010339843

DTC DETECTION LOGIC

NOTE:

- If DTC B27D2 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-64, "DTC Logic"](#).
- If DTC B27D2 is displayed with DTC B2605, first perform the trouble diagnosis for DTC B2605. Refer to [BCS-65, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B27D2	STARTER CUT RELAY ON	When comparing the starter cut relay signal (CAN) from IPDM E/R, BCM detects that starter cut relay is stuck in the ON position for 1 second or more.	<ul style="list-style-type: none"> • Harness or connectors (The CAN communication line is open or shorted.) • Harness or connector (Starter cut relay circuit is open or shorted.) • IPDM E/R • BCM • Starter cut relay

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Press push-button ignition switch under the following conditions to start engine, and wait 1 second or more.
 - Selector lever: In the P position
 - Brake pedal: Depressed
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-93, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010339844

SEC

Regarding Wiring Diagram information, refer to [SEC-26, "Wiring Diagram"](#).

1. CHECK STARTER CUT RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect starter cut relay.
3. Check voltage between starter cut relay harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Starter cut relay			
Connector	Terminal	Ground	Battery voltage
F55	1		
	3		

Is the inspection result normal?

- YES >> GO TO 2.
 NO-1 >> Check 30 A fusible link [M, located in the fuse block (J/B)].
 NO-2 >> Check harness for open or short between starter cut relay and fusible link.

2. CHECK STARTER CUT RELAY CONTROL

1. Reconnect starter cut relay.

B27D2 START CUT RELAY ON

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

2. Check voltage between BCM harness connector and ground.

(+)		(-)	Condition	Voltage (V) (Approx.)	
BCM					
Connector	Terminal				
E29	139	Ground	CVT shift selector lever	N or P position	Battery voltage
				Other than above	0

Is the inspection result normal?

- YES >> GO TO 4.
NO >> GO TO 3.

3. CHECK STARTER CUT RELAY CONTROL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Disconnect starter cut relay.
4. Check continuity between BCM harness connector and starter cut relay harness connector.

BCM		Starter cut relay		Continuity
Connector	Terminal	Connector	Terminal	
E29	139	F55	2	Yes

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair or replace harness.

4. CHECK STARTER CUT RELAY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and starter cut relay harness connector.

IPDM E/R		Starter cut relay		Continuity
Connector	Terminal	Connector	Terminal	
F41	86	F55	5	Yes

4. Check continuity between BCM harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
F41	86		No

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair or replace harness.

5. CHECK STARTER CUT RELAY

Refer to [SEC-95. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Replace starter cut relay.

6. REPLACE BCM

1. Replace BCM. Refer to [BCS-75. "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT.
3. Perform DTC CONFIRMATION PROCEDURE for DTC B27D2. Refer to [SEC-93. "DTC Logic"](#).

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace IPDM E/R. Refer to [PCS-35. "Removal and Installation"](#).

B27D2 START CUT RELAY ON

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Component Inspection

INFOID:000000010339845

1. CHECK STARTER CUT RELAY

1. Turn ignition switch OFF.
2. Disconnect starter cut relay.
3. Check continuity between starter cut relay terminals.

Starter cut relay		Condition	Continuity
Terminal			
3	5	12 V direct current supply between terminals 1 and 2	Yes
		No current supply	No

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace starter cut relay.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B20DF STARTER RELAY OFF CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

B20DF STARTER RELAY OFF CIRCUIT

DTC Logic

INFOID:000000010351311

DTC DETECTION LOGIC

NOTE:

- If DTC B20DF is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-64, "DTC Logic"](#).
- If DTC B20DF is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-65, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B20DF	STARTER RELAY OFF	When comparing the starter relay signal (CAN) from BCM, IPDM E/R detects that starter relay is stuck in the OFF position for 1 second or more.	<ul style="list-style-type: none"> • Harness or connectors (The CAN communication line is open or shorted.) • Harness or connector (Starter relay circuit is open or shorted.) • IPDM E/R • BCM • Starter relay

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch under the following conditions to start engine, and wait 1 second or more.
 - Selector lever: In the P position
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-96, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010351312

Regarding Wiring Diagram information, refer to [SEC-26, "Wiring Diagram"](#).

1. CHECK STARTER RELAY POWER SUPPLY CIRCUIT (SWITCH SIDE)

1. Turn ignition switch ON.
2. Brake pedal pressed.
3. Place transmission in park or neutral.
4. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal		
F41	86	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Refer to [SEC-90, "Diagnosis Procedure"](#).

2. CHECK STARTER RELAY POWER SUPPLY CIRCUIT (COIL SIDE)

1. Turn ignition switch ON.
2. Place transmission in park or neutral.
3. Check voltage between IPDM E/R harness connector and ground.

B20DF STARTER RELAY OFF CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

(+)		(-)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal		
F42	92	Ground	Battery voltage

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35. "Removal and Installation"](#).
- NO >> Refer to [SEC-82. "Diagnosis Procedure"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

HEADLAMP FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

HEADLAMP FUNCTION

Component Function Check

INFOID:000000010284431

1.CHECK FUNCTION

1. Perform "HEAD LAMP(HI)" in "Active Test" mode of "THEFT ALM" of "BCM" using CONSULT.
2. Check headlamps operation.

Test item		Description	
HEAD LAMP (HI)	ON	Headlamps (Hi)	Light
	OFF		Does not light

Is the inspection result normal?

- YES >> Inspection End.
NO >> Refer to [SEC-98, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000010284432

1.CHECK HEADLAMP FUNCTION

Refer to [SEC-98, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2.CHECK INTERMITTENT INCIDENT

Refer to [GI-41, "Intermittent Incident"](#).

>> Inspection End.

HOOD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

HOOD SWITCH

Component Function Check

INFOID:000000010284433

1.CHECK FUNCTION

1. Select "HOOD SW" in "Data Monitor" mode of "IPDM E/R" using CONSULT.
2. Check "HOOD SW" indication under the following condition.

Monitor item	Condition		Indication
HOOD SW	Hood	Open	ON
		Close	OFF

Is the indication normal?

- YES >> Hood switch is OK.
 NO >> Go to [SEC-99, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000010284434

Regarding Wiring Diagram information, refer to [SEC-49, "Wiring Diagram"](#).

1.CHECK HOOD SWITCH SIGNAL CIRCUITS

1. Turn ignition switch OFF.
2. Disconnect hood switch connector.
3. Check voltage between hood switch harness connector and ground.

(+)		(-)	Voltage (V)
Hood switch			
Connector	Terminal	Ground	Battery voltage
E223	2		

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> GO TO 2.

2.CHECK HOOD SWITCH SIGNAL CIRCUITS

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and hood switch harness connector.

IPDM E/R		Hood switch		Continuity
Connector	Terminal	Connector	Terminal	
E217	52	E223	2	Yes

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E217	52		No

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).
 NO >> Repair or replace harness.

3.CHECK HOOD SWITCH GROUND CIRCUIT

Check continuity between hood switch harness connector and ground.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

HOOD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

Hood switch		Ground	Continuity
Connector	Terminal		
E223	1		Yes

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4.CHECK HOOD SWITCH

Refer to [SEC-100. "Component Inspection"](#) .

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace hood switch. Refer to [DLK-253. "HOOD LOCK : Removal and Installation"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-41. "Intermittent Incident"](#).

>> Inspection End.

Component Inspection

INFOID:000000010284435

1.CHECK HOOD SWITCH

1. Turn ignition switch OFF.
2. Disconnect hood switch connector.
3. Check continuity between hood switch terminals.

Hood switch		Condition	Continuity	
Terminal				
2	1	Hood switch	Press	No
			Release	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace hood switch. Refer to [DLK-253. "HOOD LOCK : Removal and Installation"](#).

HORN FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

HORN FUNCTION

Component Function Check

INFOID:000000010284436

1.CHECK FUNCTION 1

1. Perform "VEHICLE SECURITY HORN" in "Active Test" mode of "THEFT ALM" of "BCM" using CONSULT.
2. Check the horn operation.

Test item		Description	
VEHICLE SECURITY HORN	ON	Horn	Sounds (for 0.5 sec)

Is the operation normal?

- YES >> Inspection End.
NO >> Go to [SEC-49. "Wiring Diagram"](#).

Component Inspection

INFOID:000000010284437

1.CHECK ANTI-THEFT HORN RELAY

1. Turn ignition switch OFF.
2. Disconnect anti-theft horn relay.
3. Check voltage between anti-theft horn relay terminal and ground under the following conditions.

(+)	(-)	Condition	Voltage (V) (Approx.)
Anti-theft horn relay Terminal	Ground	12 V direct current supply between terminals 1 and 3	12
3		No current supply	0

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace anti-theft horn relay.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

SECURITY INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

SECURITY INDICATOR LAMP

Component Function Check

INFOID:000000010284438

1.CHECK FUNCTION

1. Perform "THEFT IND" in "Active Test" mode of "IMMU" of "BCM" using CONSULT.
2. Check security indicator lamp operation.

Test item		Description	
THEFT IND	ON	Security indicator lamp	Illuminates
	OFF		Does not illuminate

Is the inspection result normal?

- YES >> Inspection End.
NO >> Go to [SEC-102, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000010284439

Regarding Wiring Diagram information, refer to [SEC-49, "Wiring Diagram"](#).

1.CHECK SECURITY INDICATOR LAMP POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check voltage between combination meter harness connector and ground.

(+)		(-)	Voltage (V)
Combination meter			
Connector	Terminal	Ground	Battery voltage
M77	45		

Is the inspection result normal?

- YES >> GO TO 2.
NO-1 >> Check 10 A fuse [No. 13, located in the fuse block (J/B)].
NO-2 >> Check harness for open or short between combination meter and fuse.

2.CHECK SECURITY INDICATOR LAMP SIGNAL

1. Connect combination meter connector.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V)
BCM			
Connector	Terminal	Ground	Battery voltage
M18	35		

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 4.

3.REPLACE BCM

1. Replace BCM. Refer to [BCS-75, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

SECURITY INDICATOR LAMP

[WITH INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

4. CHECK SECURITY INDICATOR LAMP CIRCUIT

1. Disconnect combination meter connector.
2. Check continuity between combination meter harness connector and BCM harness connector.

Combination meter		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M76	7	M18	35	Yes

3. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M76	7		No

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-82. "Removal and Installation"](#).
NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

SYMPTOM DIAGNOSIS

ENGINE DOES NOT START WHEN INTELLIGENT KEY IS INSIDE OF VEHICLE

Description

INFOID:0000000010284440

Engine does not start when push-button ignition switch is pressed while carrying Intelligent Key.

NOTE:

- Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis, and check each symptom.
- The engine start function, door lock function, power distribution system, and NATS-NVIS in the Intelligent Key system are closely related to each other regarding control. The vehicle security function can operate only when the door lock and power distribution system are operating normally.

Conditions of Vehicle (Operating Conditions)

- “ENGINE START BY I-KEY” in “WORK SUPPORT” is ON when setting on CONSULT.
- One or more of Intelligent Keys with registered Intelligent Key ID is in the vehicle.

Diagnosis Procedure

INFOID:0000000010284441

1.PERFORM WORK SUPPORT

Perform “INSIDE ANT DIAGNOSIS” on “Work support” in “INTELLIGENT KEY”.

Refer to [BCS-21, "INTELLIGENT KEY : CONSULT Function \(BCM - INTELLIGENT KEY\)"](#).

>> GO TO 2.

2.PERFORM SELF-DIAGNOSTIC RESULT

Perform "Self-Diagnostic Result" in “BCM”, and check whether or not DTC of inside key antenna is detected.

Is DTC detected?

YES >> Refer to [BCS-48, "DTC Index"](#).

NO >> GO TO 3.

3.CHECK PUSH-BUTTON IGNITION SWITCH

Check push-button ignition switch.

Refer to [SEC-80, "Component Inspection"](#).

Is the operation normal?

YES >> GO TO 4.

NO >> Repair or replace malfunctioning parts.

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the inspection normal?

YES >> Check intermittent incident. Refer to [GI-41, "Intermittent Incident"](#).

NO >> GO TO 1.

SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

SECURITY INDICATOR LAMP DOES NOT TURN ON OR BLINK

Description

INFOID:000000010284442

Security indicator lamp does not blink when ignition switch is in a position other than ON

NOTE:

- Before performing the diagnosis, check "Work Flow". Refer to [SEC-62, "Work Flow"](#).
- Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.

Conditions of Vehicle (Operating Conditions)

Ignition switch is not in the ON position.

Diagnosis Procedure

INFOID:000000010284443

1. CHECK SECURITY INDICATOR LAMP

Check security indicator lamp.

Refer to [SEC-102, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning parts.

2. CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-41, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM CANNOT BE SET

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY SYSTEM CANNOT BE SET INTELLIGENT KEY

INTELLIGENT KEY : Description

INFOID:0000000010284444

ARMED phase is not activated when door is locked using Intelligent Key.

NOTE:

Check that vehicle is under the condition shown in Conditions of vehicle before starting diagnosis and check each symptom.

CONDITION OF VEHICLE (OPERATING CONDITION)

Confirm the setting of "SECURITY ALARM SET" is "ON" in "WORK SUPPORT" mode of "THEFT ALM" of "BCM" using CONSULT.

INTELLIGENT KEY : Diagnosis Procedure

INFOID:0000000010284445

1.CHECK INTELLIGENT KEY SYSTEM (REMOTE KEYLESS ENTRY FUNCTION)

Lock/unlock door with Intelligent Key.

Refer to [SEC-9. "INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check Intelligent Key system (remote keyless entry function).

2.CHECK HOOD SWITCH

Check hood switch.

Refer to [SEC-99. "Component Function Check"](#) .

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace hood switch.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-41. "Intermittent Incident"](#).

NO >> GO TO 1.

DOOR REQUEST SWITCH

DOOR REQUEST SWITCH : Description

INFOID:0000000010284446

ARMED phase is not activated when door is locked using door request switch.

NOTE:

Check that vehicle is under the condition shown in Conditions of vehicle before starting diagnosis, and check each symptom.

CONDITION OF VEHICLE (OPERATING CONDITION)

Confirm the setting of SECURITY ALARM SET is ON in WORK SUPPORT mode of THEFT ALM of BCM using CONSULT.

DOOR REQUEST SWITCH : Diagnosis Procedure

INFOID:0000000010284447

1.CHECK INTELLIGENT KEY SYSTEM (DOOR LOCK FUNCTION)

Lock/unlock door with door request switch.

Refer to [SEC-9. "INTELLIGENT KEY SYSTEM/ENGINE START FUNCTION : System Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check Intelligent Key system (door lock function).

2.CHECK HOOD SWITCH

VEHICLE SECURITY SYSTEM CANNOT BE SET

[WITH INTELLIGENT KEY SYSTEM]

< SYMPTOM DIAGNOSIS >

Check hood switch.

Refer to [SEC-99, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace hood switch.

3.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-41, "Intermittent Incident"](#).

NO >> GO TO 1.

DOOR KEY CYLINDER

DOOR KEY CYLINDER : Description

INFOID:0000000010284448

ARMED phase is not activated when door is locked using mechanical key.

NOTE:

Check that vehicle is under the condition shown in Conditions of vehicle before starting diagnosis, and check each symptom.

CONDITION OF VEHICLE (OPERATING CONDITION)

Confirm the setting of SECURITY ALARM SET is ON in WORK SUPPORT mode of THEFT ALM of BCM using CONSULT.

DOOR KEY CYLINDER : Diagnosis Procedure

INFOID:0000000010284449

1.CHECK POWER DOOR LOCK SYSTEM

Lock/unlock door with mechanical key.

Refer to [SEC-14, "VEHICLE SECURITY SYSTEM : System Description"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Check power door lock system.

2.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-41, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY ALARM DOES NOT ACTIVATE

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

VEHICLE SECURITY ALARM DOES NOT ACTIVATE

Description

INFOID:0000000010284450

Alarm does not operate when alarm operating condition is satisfied.

NOTE:

Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis and check each symptom.

CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

Confirm the setting of “SECURITY ALARM SET” is ON in “Work Support” mode of “THEFT ALM” of “BCM” using CONSULT.

Diagnosis Procedure

INFOID:0000000010284451

1.CHECK DOOR SWITCH

Check door switch.

Refer to [DLK-149, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the malfunctioning door switch.

2.CHECK HOOD SWITCH

Check hood switch.

Refer to [SEC-99, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace hood switch.

3.CHECK HORN FUNCTION

Check horn function.

Refer to [SEC-101, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the malfunctioning parts.

4.CHECK HEADLAMP FUNCTION

Check headlamp function.

Refer to [SEC-98, "Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace the malfunctioning parts.

5.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-41, "Intermittent Incident"](#).

NO >> GO TO 1.

PANIC ALARM FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[WITH INTELLIGENT KEY SYSTEM]

PANIC ALARM FUNCTION DOES NOT OPERATE

Description

INFOID:000000010284452

NOTE:

- Before performing the diagnosis following procedure, check “Work Flow”. Refer to [SEC-62, "Work Flow"](#).
- Check that vehicle is under the condition shown in “Conditions of vehicle” before starting diagnosis and check each symptom.

CONDITIONS OF VEHICLE (OPERATION CONDITIONS)

- Ignition switch is in OFF or LOCK position.
- Intelligent Key is removed from key slot.

Diagnosis Procedure

INFOID:000000010284453

1.CHECK REMOTE KEYLESS ENTRY FUNCTION

Check remote keyless entry function.

Does door lock/unlock with Intelligent Key button?

YES >> GO TO 2.

NO >> Go to [DLK-176, "Diagnosis Procedure"](#).

2.CHECK VEHICLE SECURITY ALARM OPERATION

Check vehicle security alarm operation.

Does alarm (headlamps and horns) active?

YES >> GO TO 3.

NO >> Go to [SEC-14, "VEHICLE SECURITY SYSTEM : System Description"](#).

3.CHECK “PANIC ALARM SET” SETTING IN “WORK SUPPORT”

Check “PANIC ALARM SET” setting in “Work Support”.

Refer to [BCS-21, "INTELLIGENT KEY : CONSULT Function \(BCM - INTELLIGENT KEY\)"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Set “PANIC ALARM SET” setting in “Work Support”.

4.CONFIRM THE OPERATION

Confirm the operation again.

Is the result normal?

YES >> Check intermittent incident. Refer to [GI-41, "Intermittent Incident"](#).

NO >> GO TO 1.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

NATS ANTENNA AMP.

< REMOVAL AND INSTALLATION >


[WITH INTELLIGENT KEY SYSTEM]

REMOVAL AND INSTALLATION

NATS ANTENNA AMP.

Exploded View

INFOID:0000000010284454

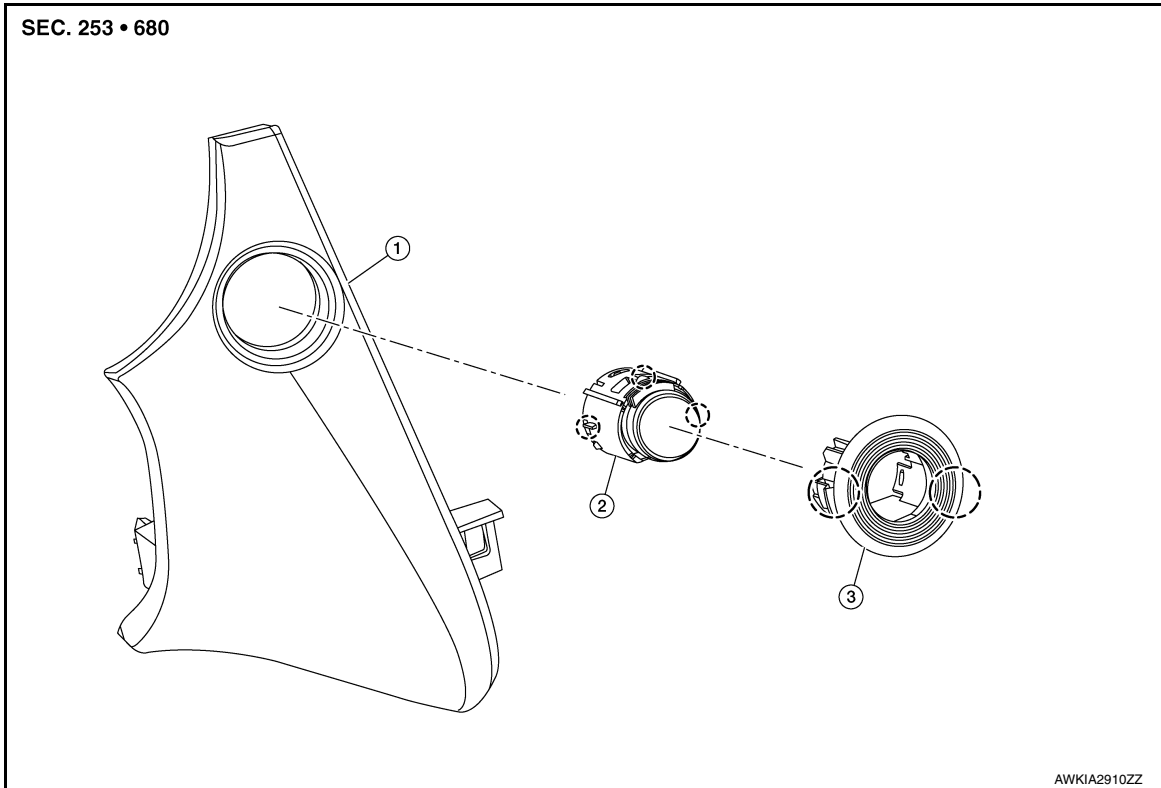

1. Instrument finisher B

2. Push button ignition switch

3. NATS antenna amp.

○: Pawl


Removal and Installation

INFOID:0000000010284455

REMOVAL

1. Remove the instrument finisher B. Refer to [IP-16. "INSTRUMENT FINISHER B : Removal and Installation"](#).
2. Release pawls and remove NATS antenna amp. (1) from instrument finisher B (2).

○: Pawl

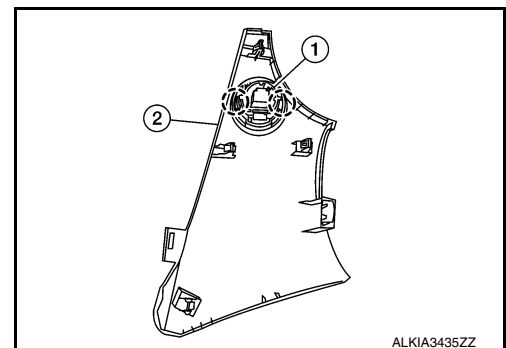


NATS ANTENNA AMP.

< REMOVAL AND INSTALLATION >

[WITH INTELLIGENT KEY SYSTEM]

3. Release pawls and remove NATS antenna amp. (2) from push button ignition switch (1).

○: Pawl

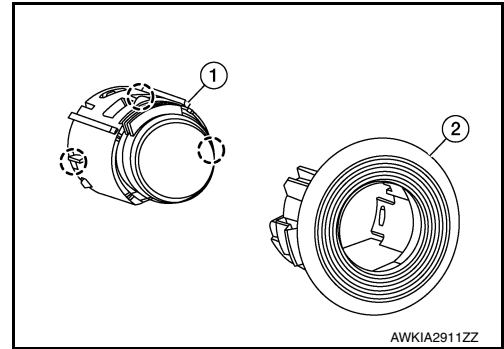

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

PUSH-BUTTON IGNITION SWITCH


< REMOVAL AND INSTALLATION >

[WITH INTELLIGENT KEY SYSTEM]

PUSH-BUTTON IGNITION SWITCH

Exploded View

INFOID:000000010284456

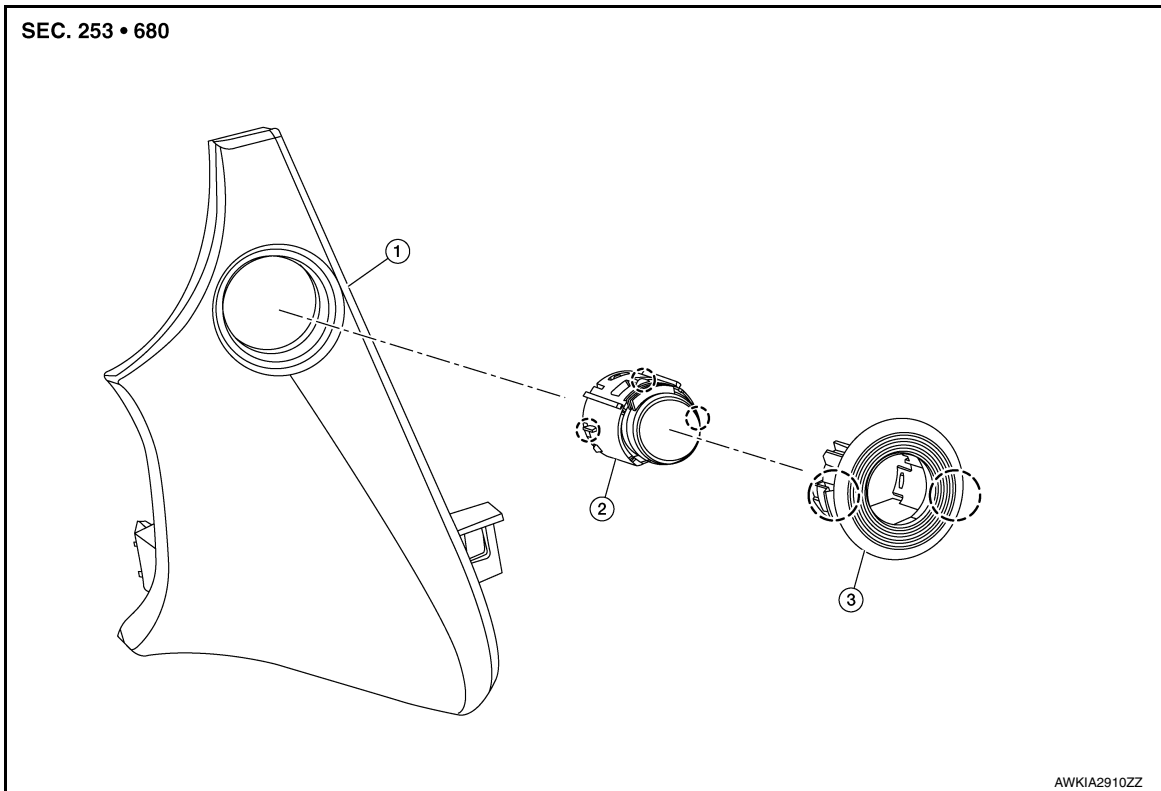

1. Instrument finisher B

2. Push button ignition switch

3. NATS antenna amp.

○: Pawl


Removal and Installation

INFOID:000000010284457

REMOVAL

1. Remove the instrument finisher B. Refer to [IP-16, "INSTRUMENT FINISHER B : Removal and Installation"](#).
2. Release pawls and remove NATS antenna amp. (1) from instrument finisher B (2).

○: Pawl

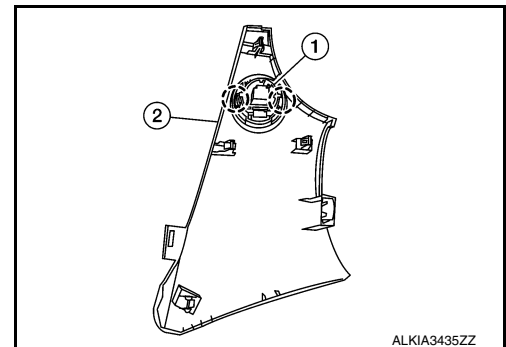

ALKIA3435ZZ


PUSH-BUTTON IGNITION SWITCH

< REMOVAL AND INSTALLATION >

[WITH INTELLIGENT KEY SYSTEM]

3. Release pawls and remove NATS antenna amp. (2) from push button ignition switch (1).

⊖: Pawl

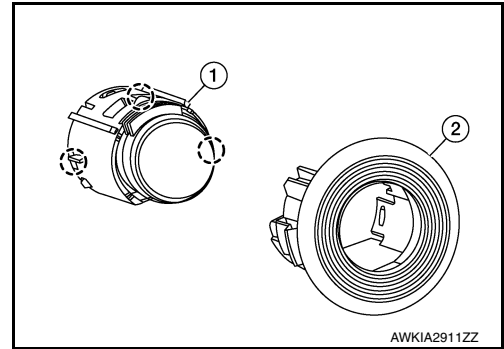

INSTALLATION

Installation is in the reverse order of removal.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

PRECAUTIONS

< PRECAUTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000010288647

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

COMPONENT PARTS

< SYSTEM DESCRIPTION >


[WITHOUT INTELLIGENT KEY SYSTEM]

SYSTEM DESCRIPTION

COMPONENT PARTS

Component Parts Location

INFOID:0000000010340302

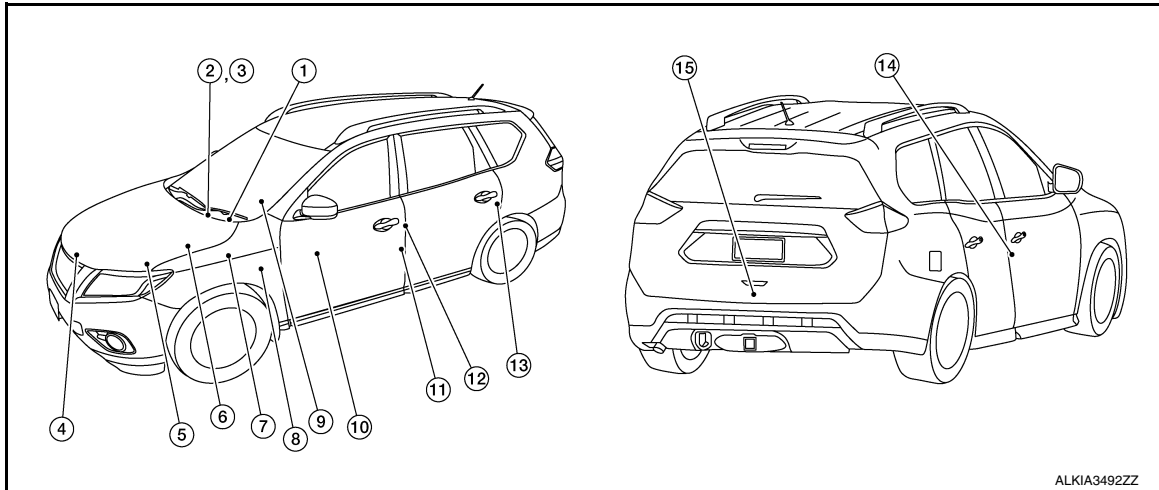

No.	Component	Function
1.	Combination meter	Combination meter transmits the vehicle speed signal to BCM via CAN communication. BCM also receives the vehicle speed signal from ABS actuator and electric unit (control unit) via CAN communication. BCM compares both signals to detect the vehicle speed. Security indicator lamp is located on combination meter. Security indicator lamp blinks when ignition switch is in any position other than ON to warn that NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS [NVIS (NATS)] is on board. Refer to MWI-6, "METER SYSTEM : Component Parts Location" .
2.	Ignition switch	Ignition switch transmits ON/OFF signal to BCM. BCM changes the ignition switch position with the operation of ignition switch.
3.	NATS antenna amp.	Refer to SEC-116, "NATS Antenna Amp." .
4.	Hood switch	Hood switch detects Hood open/close condition and then transmits ON/OFF signal to IPDM E/R.
5.	Transmission range switch	Refer to TM-14, "CVT CONTROL SYSTEM : Transmission Range Switch" .
6.	IPDM E/R	Refer to PCS-4, "Component Parts Location" .
7.	Stop lamp switch	Refer to BRC-12, "Stop Lamp Switch" .
8.	BCM	BCM controls NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS [NVIS (NATS)] and VEHICLE SECURITY SYSTEM. Then, when the ignition switch is turned ON, BCM performs ID verification between BCM and ECM. If the ID verification result is OK, ECM can start engine. Refer to BCS-79, "BODY CONTROL SYSTEM : Component Parts Location" for detailed installation location.
9.	CVT shift selector	Refer to TM-12, "CVT CONTROL SYSTEM : Component Parts Location" .
10.	Main power window and door lock/unlock switch	Door lock and unlock switch is integrated into the power window main switch. Door lock and unlock switch transmits door lock/unlock operation signal to BCM. Refer to PWC-7, "Power Window Main Switch" .

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

COMPONENT PARTS

< SYSTEM DESCRIPTION >


[WITHOUT INTELLIGENT KEY SYSTEM]

No.	Component	Function
11.	Front door lock assembly LH	Door key cylinder switch is integrated into front door lock assembly (driver side). Door key cylinder switch detects door LOCK/UNLOCK operation using mechanical key, and then transmits the operation signal to BCM. Refer to DLK-285. "Front Door Lock Assembly (Driver Side)" .
12.	Front door switch LH	Door switch detects door open/close condition and then transmits ON/OFF signal to BCM.
13.	Rear door switch LH	Door switch detects door open/close condition and then transmits ON/OFF signal to BCM.
14.	Front door switch RH	Door switch detects door open/close condition and then transmits ON/OFF signal to BCM.
15.	Back door lock assembly	Back door lock actuator locks/unlocks the back door latch assembly.

NATS Antenna Amp.

INFOID:000000010340303


The ID verification is performed between BCM and transponder integrated into key via NATS antenna amp. when key backside is contacted to ignition switch in case that key battery is discharged. If the ID verification result is OK, the operation of ignition switch is available.

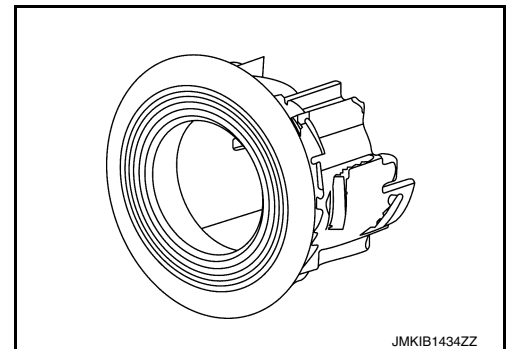

Hood Switch

INFOID:000000010340304

Hood switch ① detects that hood is open, and then transmits ON/OFF signal to IPDM E/R. IPDM E/R transmits hood switch signal to BCM via CAN communication. Hood switch is integrated into hood lock assembly LH.

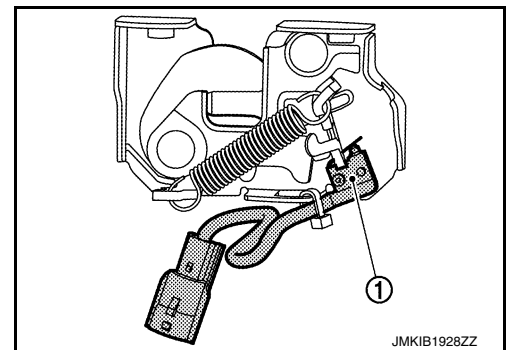

SYSTEM

< SYSTEM DESCRIPTION >


[WITHOUT INTELLIGENT KEY SYSTEM]

SYSTEM

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS : System Diagram

INFOID:000000010284485

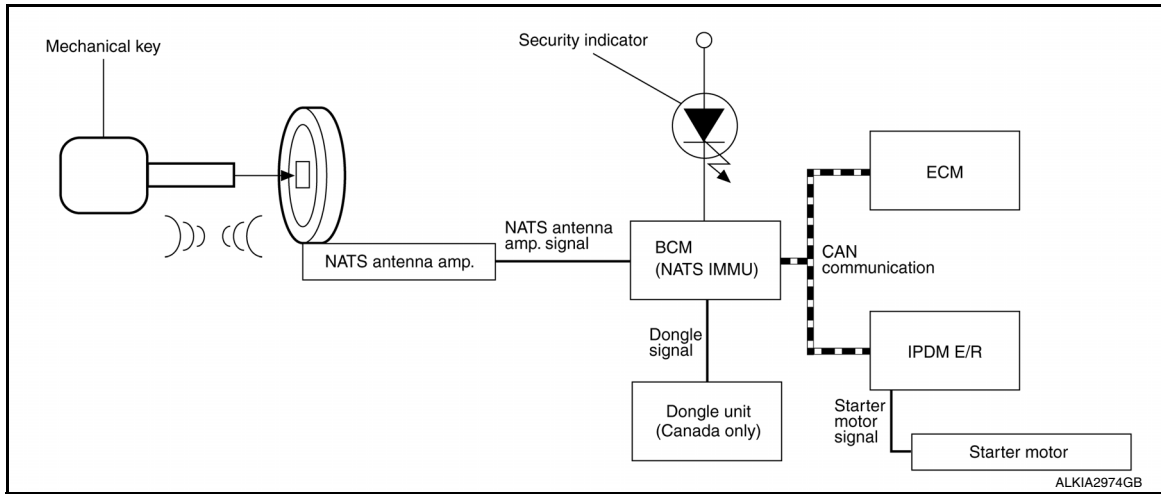

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS : System Description

INFOID:000000010284486

INPUT/OUTPUT SIGNAL CHART

BCM

Switch/Input signal	Input signal to BCM	BCM function	Actuator/Output signal
NATS antenna amp.	Key ID	NATS	<ul style="list-style-type: none"> Security indicator lamp Starter request
ECM	Engine status signal		

SYSTEM DESCRIPTION

NATS (Nissan Anti-Theft System) has the following immobilizer functions:

- Engine immobilizer shows high anti-theft performance to prevent engine from starting by anyone other than the owner.
- Only a key with key ID registered in BCM and ECM can start engine, and shows high anti-theft performance to prevent key from being copied or stolen.
- Security indicator always flashes with mechanical key removed condition (key switch: OFF) and ignition knob released condition on LOCK position (ignition knob switch: OFF).
- Therefore, NATS warns outsiders that the vehicle is equipped with the anti-theft system.
- If system detects malfunction, security indicator illuminates when ignition switch is turned to ON position.
- If the owner requires, ignition key ID or mechanical key ID can be registered for up to 4 keys.
- During trouble diagnosis or when the following parts have been replaced, and if ignition key is added, registration*1 is required.

*1: All keys kept by the owner of the vehicle should be registered with mechanical key.

- ECM
- BCM
- Ignition key
- Remote keyless entry receiver
- NATS trouble diagnosis, system initialization and additional registration of other mechanical key IDs must be carried out using CONSULT.
When NATS initialization has been completed, the ID of the inserted mechanical key or mechanical key IDs can be carried out.
- Possible symptom of NATS malfunction is "Engine cannot start". Identify the possible causes according to "Work Flow", Refer to [SEC-150. "Work Flow"](#).
- If ECM other than Genuine NISSAN is installed, the engine cannot be started. For ECM replacement procedure, refer to [SEC-153. "ECM RE-COMMUNICATING FUNCTION : Description"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

SYSTEM

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

PRECAUTIONS FOR KEY REGISTRATION

- The key registration is a procedure that erases the current NATS ID once, and then re-registers a new ID. Therefore the registered key is necessary for this procedure. Before starting the registration procedure, collect all registered Keys from the customer.
- The NATS ID registration is the procedure that registers the ID stored into the transponder (integrated in mechanical key) to BCM.
The key ID registration is the procedure that registers the ID to the BCM.
- When performing the key system registration only, the engine cannot be started by inserting the key into the key cylinder. When performing the NATS registration only, the engine cannot be started by using the ignition key.

SECURITY INDICATOR

- Always flashes with ignition key in the OFF position.

MAINTENANCE INFORMATION

CAUTION:


It is necessary to perform NATS ID registration when replacing any of the following parts.
If ID registration is not performed, the electrical system may not operate properly.

- BCM
- ECM
- IPDM E/R
- Ignition key
- NATS antenna amp.
- Combination meter

VEHICLE SECURITY SYSTEM

VEHICLE SECURITY SYSTEM : System Diagram

INFOID:000000010284487

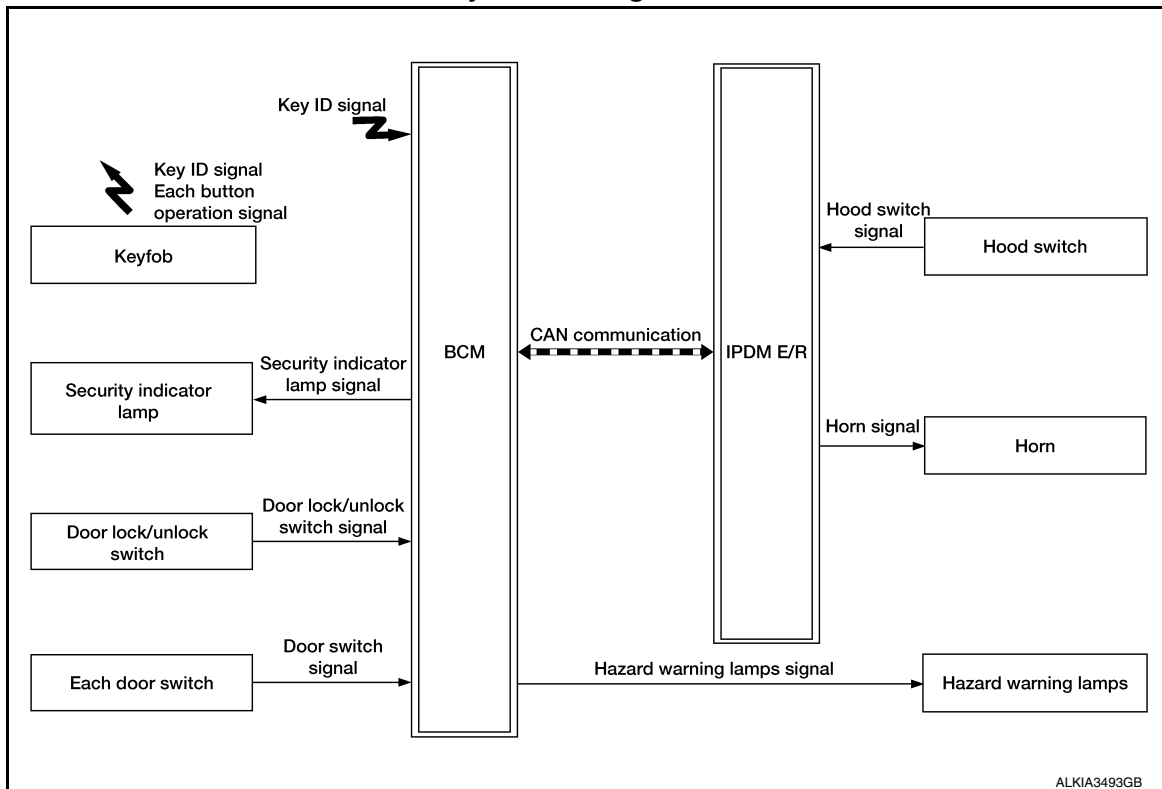

VEHICLE SECURITY SYSTEM : System Description

INFOID:000000010284488

- The vehicle security system has two alarm functions (theft warning alarm and panic alarm), and reduces the possibility of a theft or mischief by activating horns (and hazard warning lamps) intermittently.
- The panic alarm does not start when the theft warning alarm is activating, and the panic alarm stops when the theft warning alarm is activated.

SYSTEM

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]


The priority of the functions are as per the following.

Priority	Function
1	Theft warning alarm
2	Panic alarm

THEFT WARNING ALARM

- The theft warning alarm function activates horns and hazard warning lamps intermittently when BCM detects that any door or hood is opened by unauthorized means, while the system is in the ARMED state.
- Security indicator lamp on combination meter always blinks when ignition switch is in any position other than ON. Security indicator lamp blinking warns that the vehicle is equipped with a vehicle security system.

Operation Flow

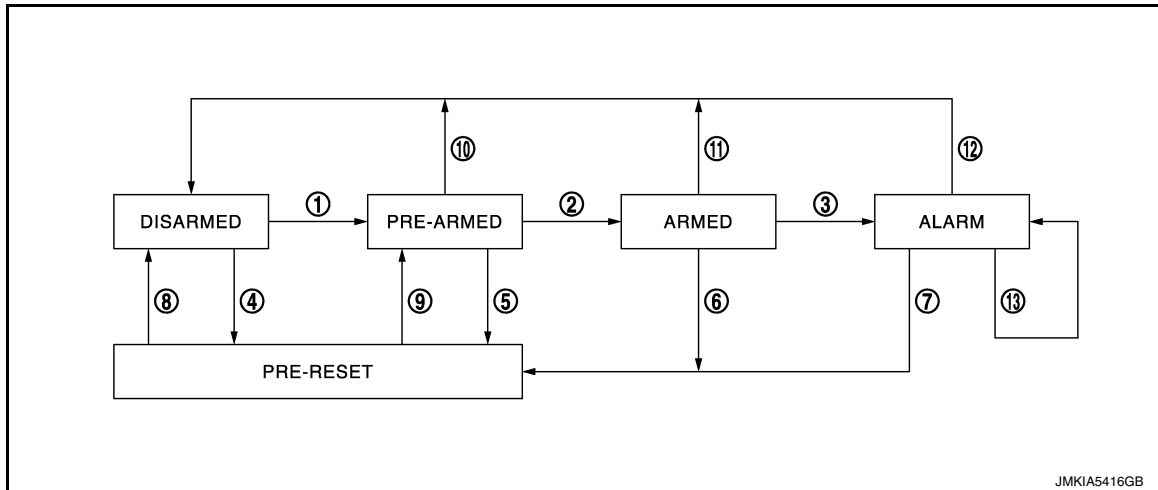

No.	System state	Switching condition					
		A	B				
1	DISARMED to PRE-ARMED	When all conditions of A and one condition of B are satisfied.	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th style="width: 50%;">A</th> <th style="width: 50%;">B</th> </tr> <tr> <td> <ul style="list-style-type: none"> Ignition switch: OFF All doors: Closed Hood: Closed </td> <td> <ul style="list-style-type: none"> All doors are locked by: <ul style="list-style-type: none"> Door lock and unlock switch LOCK button of Keyfob </td> </tr> </table>	A	B	<ul style="list-style-type: none"> Ignition switch: OFF All doors: Closed Hood: Closed 	<ul style="list-style-type: none"> All doors are locked by: <ul style="list-style-type: none"> Door lock and unlock switch LOCK button of Keyfob
A	B						
<ul style="list-style-type: none"> Ignition switch: OFF All doors: Closed Hood: Closed 	<ul style="list-style-type: none"> All doors are locked by: <ul style="list-style-type: none"> Door lock and unlock switch LOCK button of Keyfob 						
2	PRE-ARMED to ARMED	When all of the following conditions are satisfied for 30 seconds.	<ul style="list-style-type: none"> Ignition switch: OFF All doors: Locked Hood: Closed 				
3	ARMED to ALARM	When condition of A and one condition of B are satisfied.	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th style="width: 50%;">A</th> <th style="width: 50%;">B</th> </tr> <tr> <td>Keyfob: Not used</td> <td> <ul style="list-style-type: none"> Any door: Open Hood: Open </td> </tr> </table>	A	B	Keyfob: Not used	<ul style="list-style-type: none"> Any door: Open Hood: Open
A	B						
Keyfob: Not used	<ul style="list-style-type: none"> Any door: Open Hood: Open 						
4	DISARMED to PRE-RESET	When all conditions of A and one condition of B are satisfied.	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th style="width: 50%;">A</th> <th style="width: 50%;">B</th> </tr> <tr> <td> <ul style="list-style-type: none"> Ignition switch: OFF All doors: Closed Hood: Open </td> <td> <ul style="list-style-type: none"> All doors are locked by: <ul style="list-style-type: none"> Door lock and unlock switch LOCK button of Keyfob </td> </tr> </table>	A	B	<ul style="list-style-type: none"> Ignition switch: OFF All doors: Closed Hood: Open 	<ul style="list-style-type: none"> All doors are locked by: <ul style="list-style-type: none"> Door lock and unlock switch LOCK button of Keyfob
A	B						
<ul style="list-style-type: none"> Ignition switch: OFF All doors: Closed Hood: Open 	<ul style="list-style-type: none"> All doors are locked by: <ul style="list-style-type: none"> Door lock and unlock switch LOCK button of Keyfob 						
5	PRE-ARMED to PRE-RESET	When the following condition is satisfied.	<ul style="list-style-type: none"> Hood: Open 				
6	ARMED to PRE-RESET	No conditions.					
7	ALARM to PRE-RESET	No conditions.					
8	PRE-RESET to DISARMED	When one of the following conditions is satisfied.	<ul style="list-style-type: none"> Ignition switch: ACC/ON UNLOCK button of Keyfob: ON UNLOCK switch of door lock and unlock switch: ON Any door: Open 				
9	PRE-RESET to PRE-ARMED	When all of the following conditions are satisfied.	<ul style="list-style-type: none"> Ignition switch: OFF All doors: Locked Hood: Closed 				

SEC

SYSTEM

< SYSTEM DESCRIPTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

No.	System state	Switching condition	
10	PRE-ARMED to DISARMED	When one of the following conditions is satisfied.	<ul style="list-style-type: none">• Ignition switch: ACC/ON• UNLOCK button of Keyfob: ON• UNLOCK switch of door lock and unlock switch: ON• Any door: Open
11	ARMED to DISARMED	When the following condition is satisfied.	<ul style="list-style-type: none">• UNLOCK button of Keyfob: ON
12	ALARM to DISARMED		
13	RE-ALARM	When one of the following condition is satisfied after the ALARM operation is finished.	<ul style="list-style-type: none">• Any door: Open• Hood: Open

NOTE:

- To lock/unlock all doors by operating remote controller button of keyfob, the keyfob must be within the detection area of BCM. For details, refer to [DLK-288, "REMOTE KEYLESS ENTRY SYSTEM : System Description"](#).

DISARMED Phase

The vehicle security system is not set in the DISARMED phase. The vehicle security system stays in this phase while any door is open, because it is assumed that the owner is inside or nearby the vehicle. Security indicator lamp blinks every 2.4 seconds.

When the vehicle security system is reset, each phase switches to the DISARMED phase directly.

PRE-ARMED Phase

The PRE-ARMED phase is the transient state between the DISARMED phase and the ARMED phase. This phase is maintained for 30 seconds, so that the owner can reset the setting due to a mis-operation. This phase switches to the ARMED phase when vehicle conditions are not changed for 30 seconds. Security indicator lamp illuminates while being in this phase.

To reset the PRE-ARMED phase, refer to the switching condition of No. 10 in the table above.

ARMED Phase

The vehicle security system is set, and BCM monitors all necessary inputs. If any door or hood is opened without using Keyfob, vehicle security system switches to the ALARM phase. Security indicator lamp blinks every 2.4 seconds.

To reset the ARMED phase, refer to the switching condition of No. 11 in the table above.

ALARM Phase

BCM transmits "Theft Warning Horn Request" signal intermittently to IPDM E/R via CAN communication, and blinks hazard warning lamps. In this phase, horns and hazard warning lamps are activated intermittently for approximately 27.5 seconds to warn that the vehicle is accessed by unauthorized means. After 27.5 seconds, the vehicle security system returns to the ARMED phase. At this time, if BCM still detects unauthorized access to the vehicle, the system is switched to the ALARM phase again. This RE-ALARM operation is carried out a maximum of 3 times.

To cancel the ALARM operation, refer to the switching condition of No. 12 in the table above.

NOTE:

If a battery terminal is disconnected during the ALARM phase, theft warning alarm stops. But when the battery terminal is reconnected, theft warning alarm is activated again.

PRE-RESET Phase

The PRE-RESET phase is the transient state between each phase and DISARMED phase. If only the condition of hood is not satisfied, the system switches to the PRE-RESET phase. Then, when any condition is changed, the system switches to the DISARMED phase or PRE-ARMED phase.

PANIC ALARM

The panic alarm function activates horns intermittently when the owner presses PANIC ALARM button of Keyfob outside the vehicle while ignition switch is OFF.

For details, refer to [SEC-118, "VEHICLE SECURITY SYSTEM : System Description"](#).

DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000010340305

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
Ecu Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> The vehicle specification can be read and saved. The vehicle specification can be written when replacing BCM.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK			x	x	x		
Rear window defogger	REAR DEFOGGER			x	x	x		
Warning chime	BUZZER			x	x			
Interior room lamp timer	INT LAMP			x	x	x		
Remote keyless entry system	MULTI REMOTE ENT					x		
Exterior lamp	HEADLAMP			x	x			
Wiper and washer	WIPER			x	x	x		
Turn signal and hazard warning lamps	FLASHER			x	x			
Combination switch	COMB SW			x				
BCM	BCM	x	x			x	x	x
Immobilizer	IMMU		x		x			
Interior room lamp battery saver	BATTERY SAVER			x	x			
Back door open	TRUNK			x				
Vehicle security system	THEFT ALM			x	x	x		
RAP system	RETAINED PWR			x				
TPMS	AIR PRESSURE MONITOR		x	x	x	x		

IMMU

IMMU : CONSULT Function (BCM - IMMU)

INFOID:0000000010340306

SELF DIAGNOSTIC RESULT

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

DIAGNOSIS SYSTEM (BCM)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Refer to [BCS-108, "DTC Index"](#).

ACTIVE TEST

Test Item	Description
THEFT IND	This test is able to check security indicator operation [On/Off].

WORK SUPPORT

Support Item	Setting	Description
CONFIRM DONGLE ID	—	Dongle ID can be checked.

THEFT ALM

THEFT ALM : CONSULT Function (BCM - THEFT ALM)

INFOID:000000010340307

DATA MONITOR

Monitored Item	Description
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.
DOOR SW-RR [On/Off]	Indicates condition of rear door switch RH.
DOOR SW-RL [On/Off]	Indicates condition of rear door switch LH.
DOOR SW-BK [On/Off]	Indicates condition of back door switch.
CDL LOCK SW [On/Off]	Indicates condition of lock signal from door lock and unlock switch.
CDL UNLOCK SW [On/Off]	Indicates condition of unlock signal from door lock and unlock switch.
KEY CYL LK-SW [On/Off]	Indicates condition of lock signal from door key cylinder switch.
KEY CYL UN-SW [On/Off]	Indicates condition of unlock signal from door key cylinder switch.
RKE-LOCK [On/Off]	Indicates condition of lock signal from Intelligent Key.
RKE-UNLOCK [On/Off]	Indicates condition of unlock signal from Intelligent Key.

ACTIVE TEST

Test Item	Description
FLASHER	This test is able to check turn signal lamp operation [LH/RH/Off].
THEFT IND	This test is able to check security indicator lamp operation [On/Off].
VEHICLE SECURITY HORN	This test is able to check vehicle security horn operation [On].
HEADLAMP(HI)	This test is able to check vehicle security lamp operation [On].

WORK SUPPORT

Support Item	Setting	Description
SECURITY ALARM SET	On	Security alarm ON.
	Off	Security alarm OFF.

DIAGNOSIS SYSTEM (IPDM E/R)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (IPDM E/R)

CONSULT Function (IPDM E/R)

INFOID:000000010338172

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

Direct Diagnostic Mode	Description
Ecu Identification	The IPDM E/R part number is displayed.
Self Diagnostic Result	The IPDM E/R self diagnostic results are displayed.
Data Monitor	The IPDM E/R input/output data is displayed in real time.
Active Test	The IPDM E/R activates outputs to test components.
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

ECU IDENTIFICATION

The IPDM E/R part number is displayed.

SELF DIAGNOSTIC RESULT

Refer to [PCS-20, "DTC Index"](#).

DATA MONITOR

Monitor Item [Unit]	Description
REVERSE SIGNAL [Open/Close]	Indicates condition of transmission range switch R (Reverse) position.
IGN RELAY [Open/Close]	Indicates condition of ignition relay-1.
PUSH SW [Open/Close]	Indicates condition of push-button ignition switch.
INTERLOCK/PNP SW [Open/Close]	Indicates condition of transmission range switch P (Park) and N (Neutral) positions.
OIL PRESSURE SW [Open/Close]	Indicates condition of oil pressure switch.
HOOD SW [Open/Close]	Indicates condition of hood switch.
COMPRESSOR [OFF/ON]	Indicates condition of A/C compressor.
HORN RELAY [OFF/ ON]	Indicates condition of horn relay.
COOLING FAN [OFF/ON]	Indicates condition of cooling fan relay-1.
FRONT WIPER HI/LO RELAY [OFF/ON]	Indicates condition of front wiper high relay.
FRONT WIPER RELAY [OFF/ON]	Indicates condition of front wiper relay.
IGN RELAY OFF STATUS [OFF/ON]	Indicates condition of ignition relay-1 OFF status.
IGN RELAY ON STATUS [OFF/ON]	Indicates condition of ignition relay-1 ON status.
COOLING FAN RELAY 1 [OFF/ON]	Indicates condition of cooling fan relay-1.
STARTER RELAY [OFF/ON]	Indicates condition of starter relay.
COMP ECV DUTY [%]	Indicates condition of A/C compressor.
COOLING FAN RELAY 2 [%]	Indicates condition of cooling fan relay-2.
FR FOG LAMP LH [%]	Indicates condition of front fog lamp LH.
FR FOG LAMP RH [%]	Indicates condition of front fog lamp RH.
PARKING LAMP [%]	Indicates condition of parking lamp.
TAIL LAMP LH [%]	Indicates condition of tail lamp LH.
TAIL LAMP RH [%]	Indicates condition of tail lamp RH.
DAYTIME RUNNING LIGHT LH [%]	Indicates condition of daytime running light LH.
DAYTIME RUNNING LIGHT RH [%]	Indicates condition of daytime running light RH.
HEADLAMP (HI) LH [%]	Indicates condition of headlamp high beam LH.

DIAGNOSIS SYSTEM (IPDM E/R)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
HEADLAMP (HI) RH [%]	Indicates condition of headlamp high beam RH.
HEADLAMP (LO) LH [%]	Indicates condition of headlamp low beam LH.
HEADLAMP (LO) RH [%]	Indicates condition of headlamp low beam RH.
A/C RELAY STUCK [NG/OK]	Indicates condition of A/C relay.
A/C RELAY [Off/On]	Indicates condition of A/C relay.
COMP ECV STATUS [NG/OK]	Indicates condition of A/C compressor.
VEHICLE SECURITY HORN [Off/On]	Indicates condition of horn relay.
BATTERY CURRENT SENSOR [NG/OK]	Indicates condition of battery current sensor.
FRONT FOG LAMP [Off/On]	Indicates condition of front fog lamps.
COMP ECV CURRENT [A]	Indicates condition of A/C compressor current.
BATTERY VOLTAGE [V]	Indicates condition of battery voltage.
COOLING FAN DUTY [%]	Indicates condition of cooling fans.
HOOD SW (CAN) [OPEN/CLOSE]	Indicates condition of hood switch.
FRONT WIPER [STOP/LOW/HIGH]	Indicates condition of front wiper motor.
FR WIPER STOP POSITION [STOP P/ACTIVE P]	Indicates condition of front wiper motor stop.
HEADLAMP (HI) [Off/On]	Indicates condition of headlamp high beams.
HEADLAMP (LO) [Off/On]	Indicates condition of headlamp low beams.
IGNITION RELAY STATUS [Off/On]	Indicates condition of ignition relay-1.
IGN RELAY MONITOR [Off/On]	Indicates condition of ignition relay-1 feedback.
IGNITION POWER SUPPLY [Off/On]	Indicates condition of ignition relay-1.
INTERLOCK/PNP SW (CAN) [Off/On]	Indicates condition of transmission range switch P (Park) and N (Neutral) positions.
PUSH-BUTTON IGN SW (CAN) [Off/On]	Indicates condition of push-button ignition switch.
TAIL LAMP [Off/On]	Indicates condition of tail lamps.
REVERSE SIGNAL (CAN) [Off/On]	Indicates condition of transmission range switch R (Reverse) position.
ST&ST CONT RELAY STATUS [Off/ST R On]	Indicates condition of starter cut and starter relays.
STARTER MOTOR STATUS [Off/On]	Indicates condition of starter motor.
STARTER RELAY (CAN) [LOW/HIGH]	Indicates condition of starter relay.
IPDM NOT SLEEP [NO RDY/RDY]	Indicates condition of IPDM E/R sleep status.
AFTER COOLING TIME [No request/Request]	Indicates condition of cooling fan request.
AFTER COOLING SPEED [%]	Indicates condition of cooling fans.
COOLING FAN TYPE [NISSAN/RENAULT]	Indicates cooling fan type.
COMPRESSOR REQ1 [Off/On]	Indicates condition of A/C compressor request.
VHCL SECURITY HORN REQ [Off/On]	Indicates condition of horn relay request.
DTRL REQ [Off/On]	Indicates condition of daytime running light request.
SLEEP/WAKE UP [WAKEUP/SLEEP]	Indicates condition of IPDM E/R sleep/wake.
CRANKING ENABLE-TCM [NG/OK]	Indicates condition of crank enable from TCM.
CRANKING ENABLE-ECM [NG/OK]	Indicates condition of crank enable from ECM.
CAN DIAGNOSIS [NG/OK]	Indicates condition of CAN diagnosis.
FRONT FOG LAMP REQ [Off/On]	Indicates condition of front fog lamp request.
HIGH BEAM REQ [Off/On]	Indicates condition of headlamp high beam request.
HORN CHIRP [Off/On]	Indicates condition of horn relay request.
COOLING FAN REQ [%]	Indicates condition of cooling fan request.
ENGINE STATUS [STOP/RUN/IDLING]	Indicates condition of engine status.

DIAGNOSIS SYSTEM (IPDM E/R)

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYSTEM DESCRIPTION >

Monitor Item [Unit]	Description
TURN SIGNAL REQ [Off/LH/RH]	Indicates condition of turn signal request.
FR WIPER REQ [RETURN/LOW/HIGH]	Indicates condition of front wiper motor request.
SHIFT POSITION [P/R/N/D/L]	Indicates condition of transmission range switch positions.
LOW BEAM REQ [Off/On]	Indicates condition of headlamp low beam request.
POSITION LIGHT REQ [Off/On]	Indicates condition of parking lamp request.
COMPRESSOR REQ2 [Off/On]	Indicates condition of A/C compressor request.
IGNITION SW [Off/On]	Indicates condition of ignition switch.
VEHICLE SPEED (METER) [mph/km/h]	Indicates vehicle speed.
BAT DISCHARGE COUNT [0-100]	Indicates condition of battery discharge.
BATTERY STATUS [NG/OK]	Indicates battery status.

ACTIVE TEST

Test item	Description
HORN	This test is able to check horn operation [Off/On].
FRONT WIPER	This test is able to check wiper motor operation [Off/Low/High].
COMPRESSOR	This test is able to check A/C compressor operation [Off/On].
COOLING FAN (DUAL)	This test is able to check cooling fan operation [Off/LO/HI].
HEADLAMP (HI)	This test is able to check headlamp high beam operation [Off/3/5].
HEADLAMP (LO)	This test is able to check headlamp low beam operation [Off/3/5].
FRONT FOG LAMP	This test is able to check front fog lamp operation [Off/3/5].
DAYTIME RUNNING LAMP	This test is able to check daytime running lamp operation [Off/3/5].
PARKING LAMP	This test is able to check parking lamp operation [Off/3/5].
TAIL LAMP	This test is able to check tail lamp operation [Off/3/5].

CAN DIAG SUPPORT MNTR

Refer to [LAN-14, "CAN Diagnostic Support Monitor"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

ECU DIAGNOSIS INFORMATION

ECM, IPDM E/R, BCM

List of ECU Reference

INFOID:000000010284494

ECU	Reference
ECM	EC-77, "Reference Value"
	EC-89, "Fail Safe"
	EC-92, "DTC Inspection Priority Chart"
	EC-93, "DTC Index"
IPDM E/R	PCS-12, "Reference Value"
	PCS-19, "Fail-safe"
	PCS-20, "DTC Index"
BCM	BCS-96, "Reference Value"
	BCS-107, "Fail Safe"
	BCS-107, "DTC Inspection Priority Chart"
	BCS-108, "DTC Index"


WIRING DIAGRAM

NVIS

Wiring Diagram

INFOID:0000000010284496


NVIS-WITHOUT INTELLIGENT KEY SYSTEM

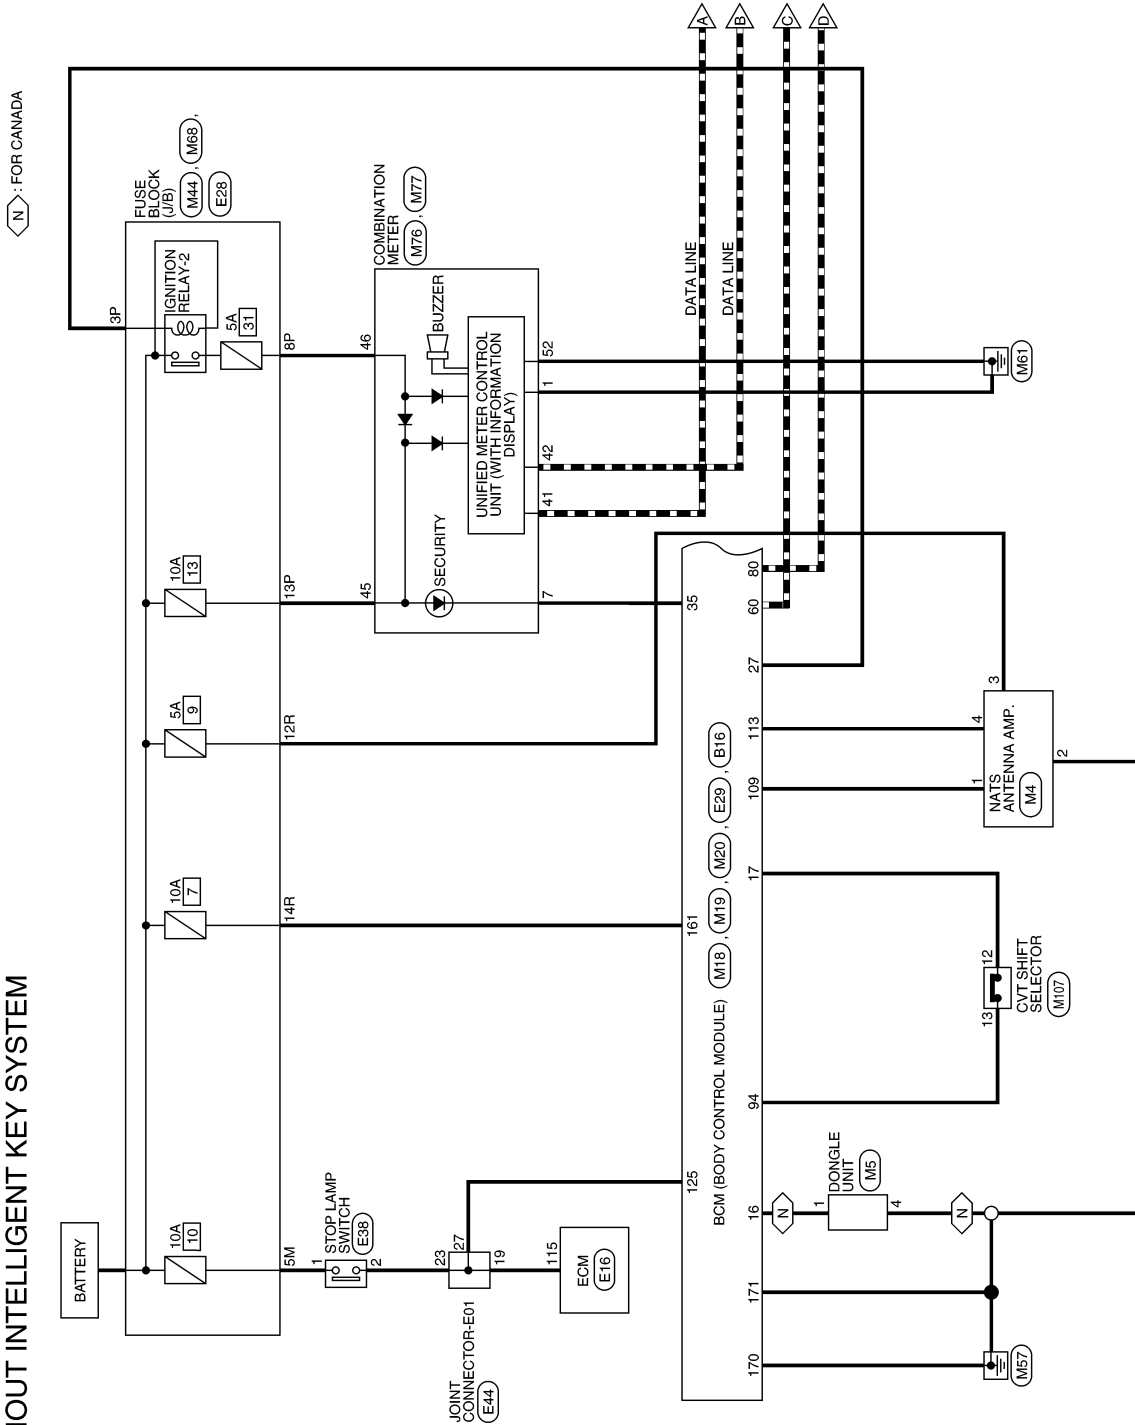

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC


AAKWA0764GB

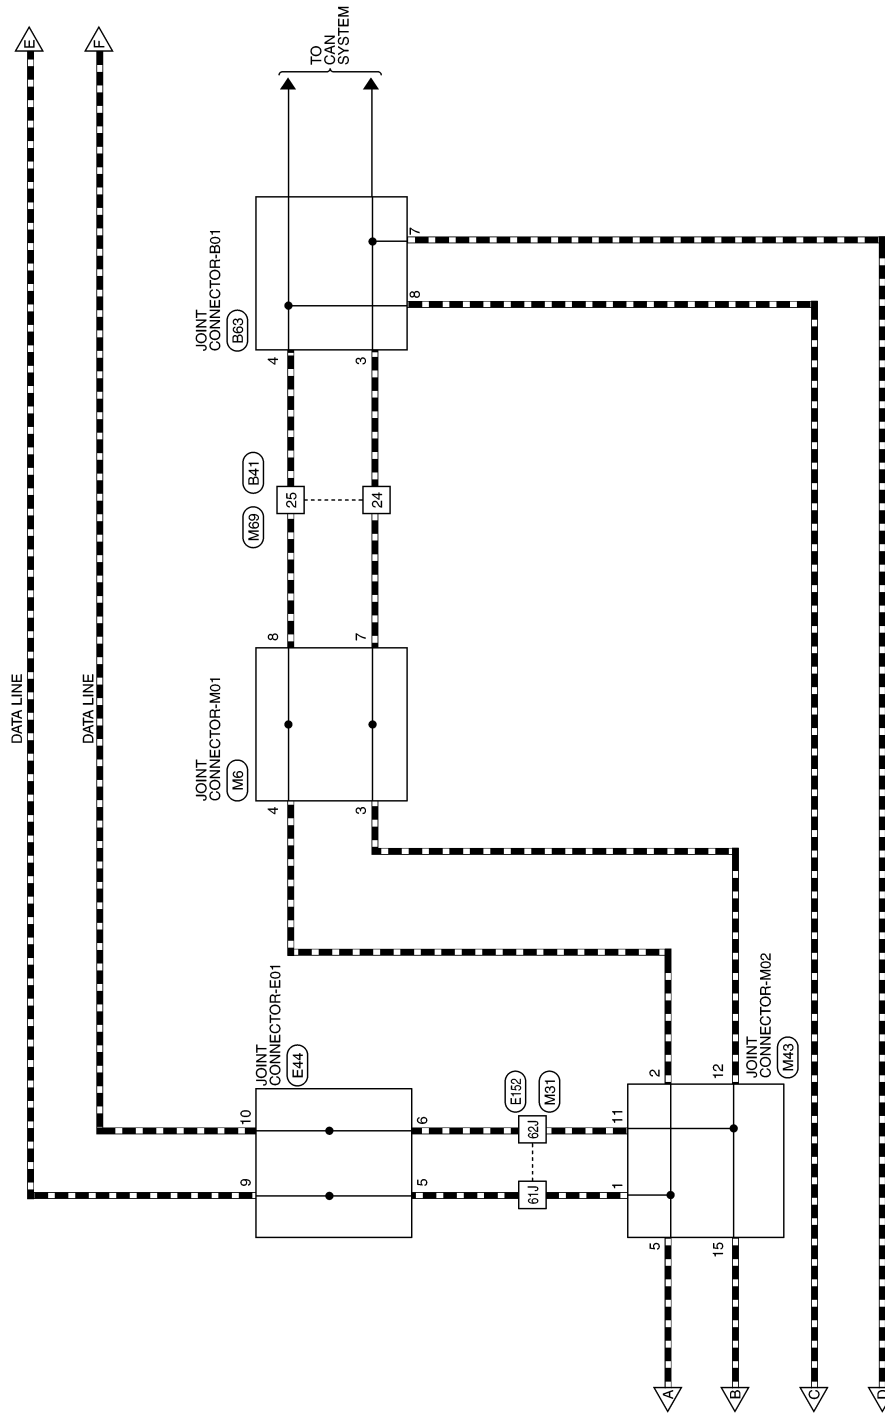

AAKWA0765GB


NVIS-WITHOUT INTELLIGENT KEY SYSTEM CONNECTORS

Connector No.	M4
Connector Name	NATS ANTENNA AMP (WITHOUT INTELLIGENT KEY SYSTEM)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	P	-
2	GR	-
3	BR	-
4	LG	-

Connector No.	M5
Connector Name	DONGLE UNIT
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	P	-
4	B	-

Connector No.	M6
Connector Name	JOINT CONNECTOR-M01
Connector Color	GRAY

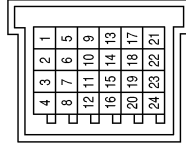

Terminal No.	Color of Wire	Signal Name
3	P	-
4	L	-
7	P	-
8	L	-

Connector No.	M14
Connector Name	JOINT CONNECTOR-M30
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	Y	-
2	Y	-
4	Y	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
16	P	DONGLE UART
17	L	O PWR ATDVC
27	Y	O IGN1 RL
35	BG	O SECURITY LED


Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
81	L	I KEY SW
82	LA/R	I STARTER SW
94	G	I AT LOCKED IN PARK SW
105	Y	I IGN SW
109	P	O CLK IMMOBILIZER
113	LG	O DATA IMMOBILIZER

Terminal No.	Color of Wire	Signal Name
37J	Y	-
61J	L	-
62J	P	-

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

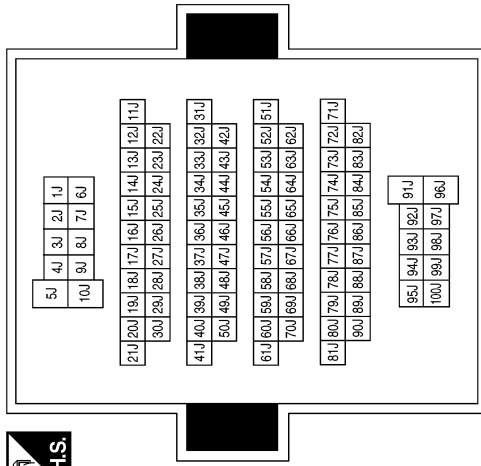

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
161	W	I PWR ECU
170	B	I GND1
171	B	I GND2



Connector No.	M44
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Connector No.	M43
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE



Connector No.	M32
Connector Name	IGNITION SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3P	Y	-
8P	LA/BR	-
13P	LA/G	-

Terminal No.	Color of Wire	Signal Name
1	L	-
2	L	-
5	L	-
11	P	-
12	P	-
15	P	-


Terminal No.	Color of Wire	Signal Name
1	Y	-
3	B	-
4	LA/R	-

AAKIA1822GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

Connector No.	M65
Connector Name	JOINT CONNECTOR-M26
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	-
5	B	-

Connector No.	M68
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
12R	BR	-
14R	W	-

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
24	P	-
25	L	-

Connector No.	M76
Connector Name	COMBINATION METER
Connector Color	WHITE

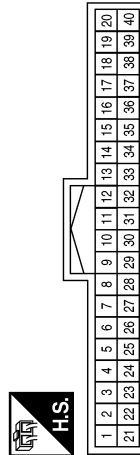

Terminal No.	Color of Wire	Signal Name
1	B	GND1
7	BG	SECURITY

Connector No.	M77
Connector Name	COMBINATION METER
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
41	L	CAN-H
42	P	CAN-L
45	LA/G	ALVUSBAT
46	LA/BR	IGN
52	B	GND2

Connector No.	M105
Connector Name	KEY SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	B	-


AAKIA1823GB

Connector No.	E2
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	L	-

Connector No.	M170
Connector Name	JOINT CONNECTOR-M29
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
1	B	-
5	B	-

Connector No.	M107
Connector Name	CVT SHIFT SELECTOR
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
12	L	-
13	G	-

Connector No.	E28
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5M	V	-

Connector No.	E19
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
7	G	-

Connector No.	E16
Connector Name	ECM
Connector Color	BLACK

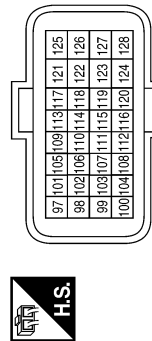


Terminal No.	Color of Wire	Signal Name
115	V	BRAKE

AAKIA1824GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

Connector No.	E44
Connector Name	JOINT CONNECTOR-E01
Connector Color	WHITE

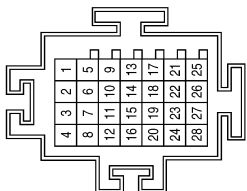


Terminal No.	Color of Wire	Signal Name
5	L	-
6	P	-
9	L	-
10	P	-
19	V	-
23	LG	-
27	LG	-

Connector No.	E38
Connector Name	STOP LAMP SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	V	-
2	LG	-

Connector No.	E29
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
125	LG	I BRAKE SW2
139	G	O STCUT RL

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	RED




Terminal No.	Color of Wire	Signal Name
47	B	POWER GROUND

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
22	P	CAN-L
24	L	CAN-H
31	B	2ND SIGNAL GROUND
32	GR	LI PUSH SW


Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
12	B	SIGNAL GROUND

AAKIA1825GB

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

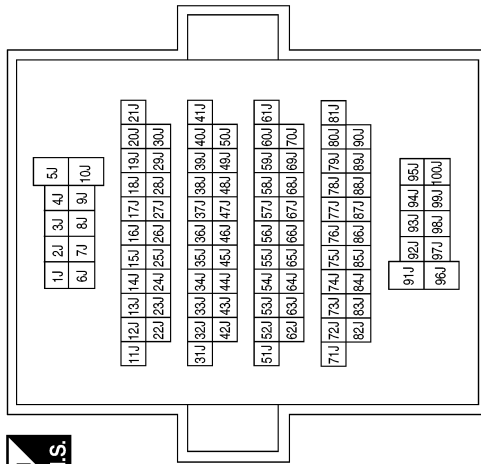


Terminal No.	Color of Wire	Signal Name
37J	GR	-
61J	L	-
62J	P	-

Connector No.	F32
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-

Connector No.	F33
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Connector No.	F35
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	WHITE



Connector No.	F41
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
7	G	-

Terminal No.	Color of Wire	Signal Name
70	BG	O IGN AT LPG


Terminal No.	Color of Wire	Signal Name
83	G	O STARTER
86	GR	FL STARTER

AAKIA1826GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

Connector No.	F78
Connector Name	TRANSMISSION RANGE SWITCH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
7	BG	-
10	GR	-

Connector No.	F55
Connector Name	STARTER CUT RELAY
Connector Color	BLUE




Terminal No.	Color of Wire	Signal Name
1	SB	-
2	G	-
3	L	-
5	GR	-

Connector No.	F42
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
92	GR	LINP SW

Connector No.	B63
Connector Name	JOINT CONNECTOR-B01
Connector Color	GRAY

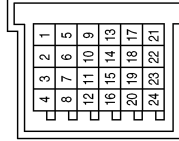


Terminal No.	Color of Wire	Signal Name
3	P	-
4	L	-
7	P	-
8	L	-

Connector No.	B41
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
24	P	-
25	L	-

Connector No.	B16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



Terminal No.	Color of Wire	Signal Name
60	L	CAN-H
80	P	CAN-L

AAKIA1827GB

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >


VEHICLE SECURITY SYSTEM

Wiring Diagram

INFOID:0000000010340311

<PB> : WITH POWER BACK DOOR
 <XB> : WITHOUT POWER BACK DOOR
 *1 <PB> : 7
 *2 <PB> : 8
 *1 <XB> : 4
 *2 <XB> : 3

VEHICLE SECURITY SYSTEM

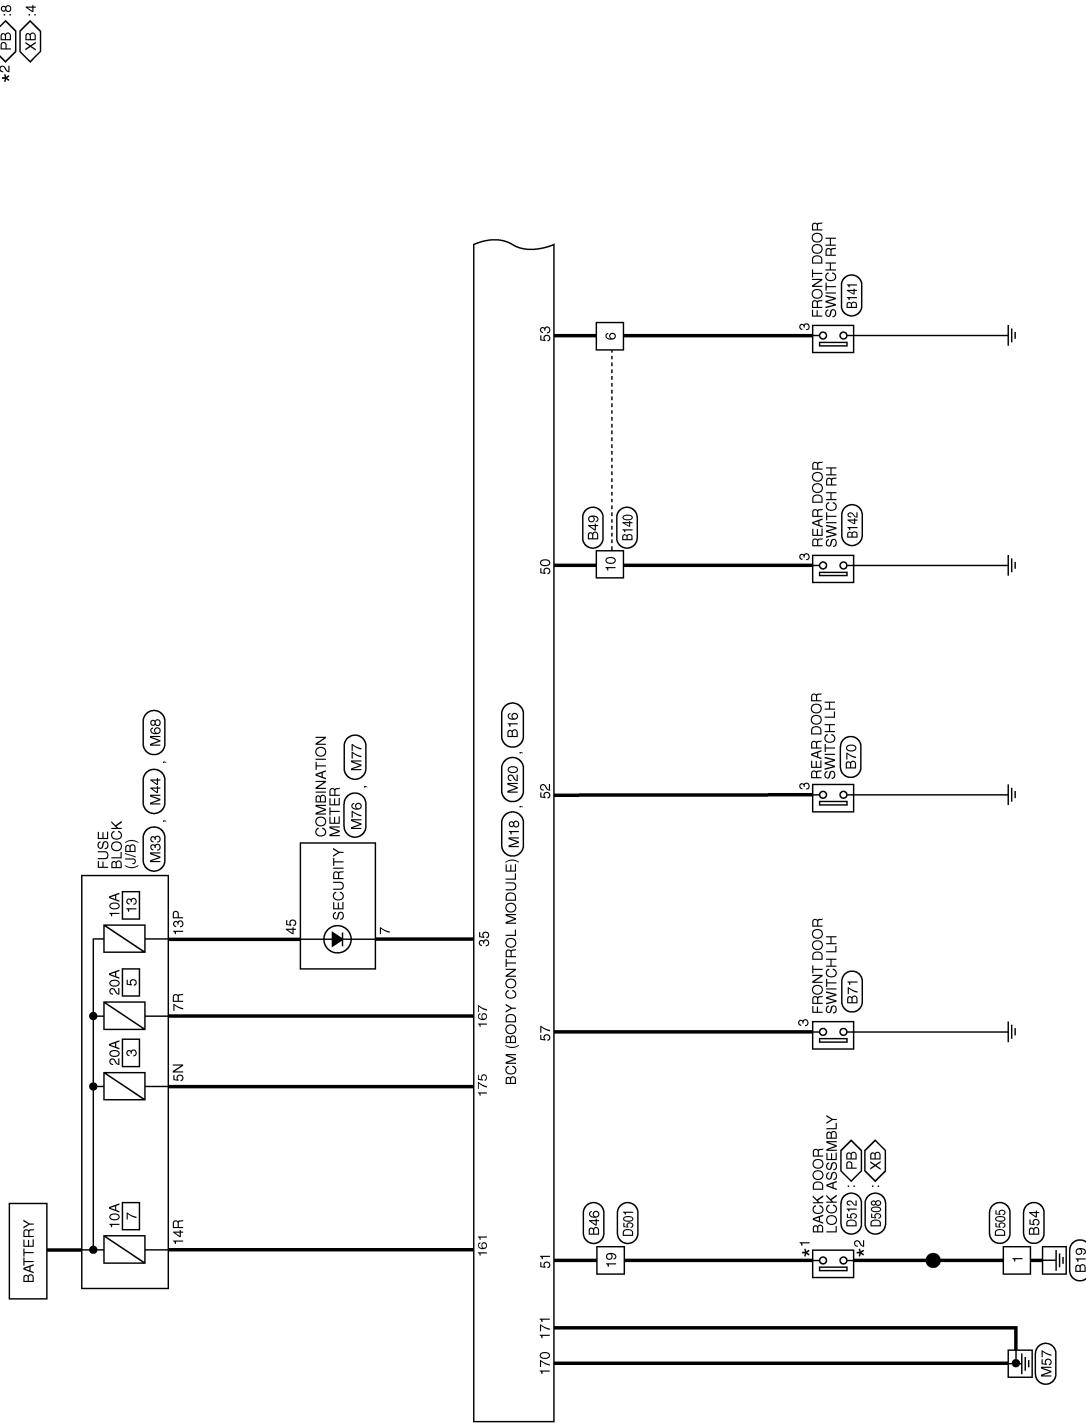

AAKWA0775GB


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

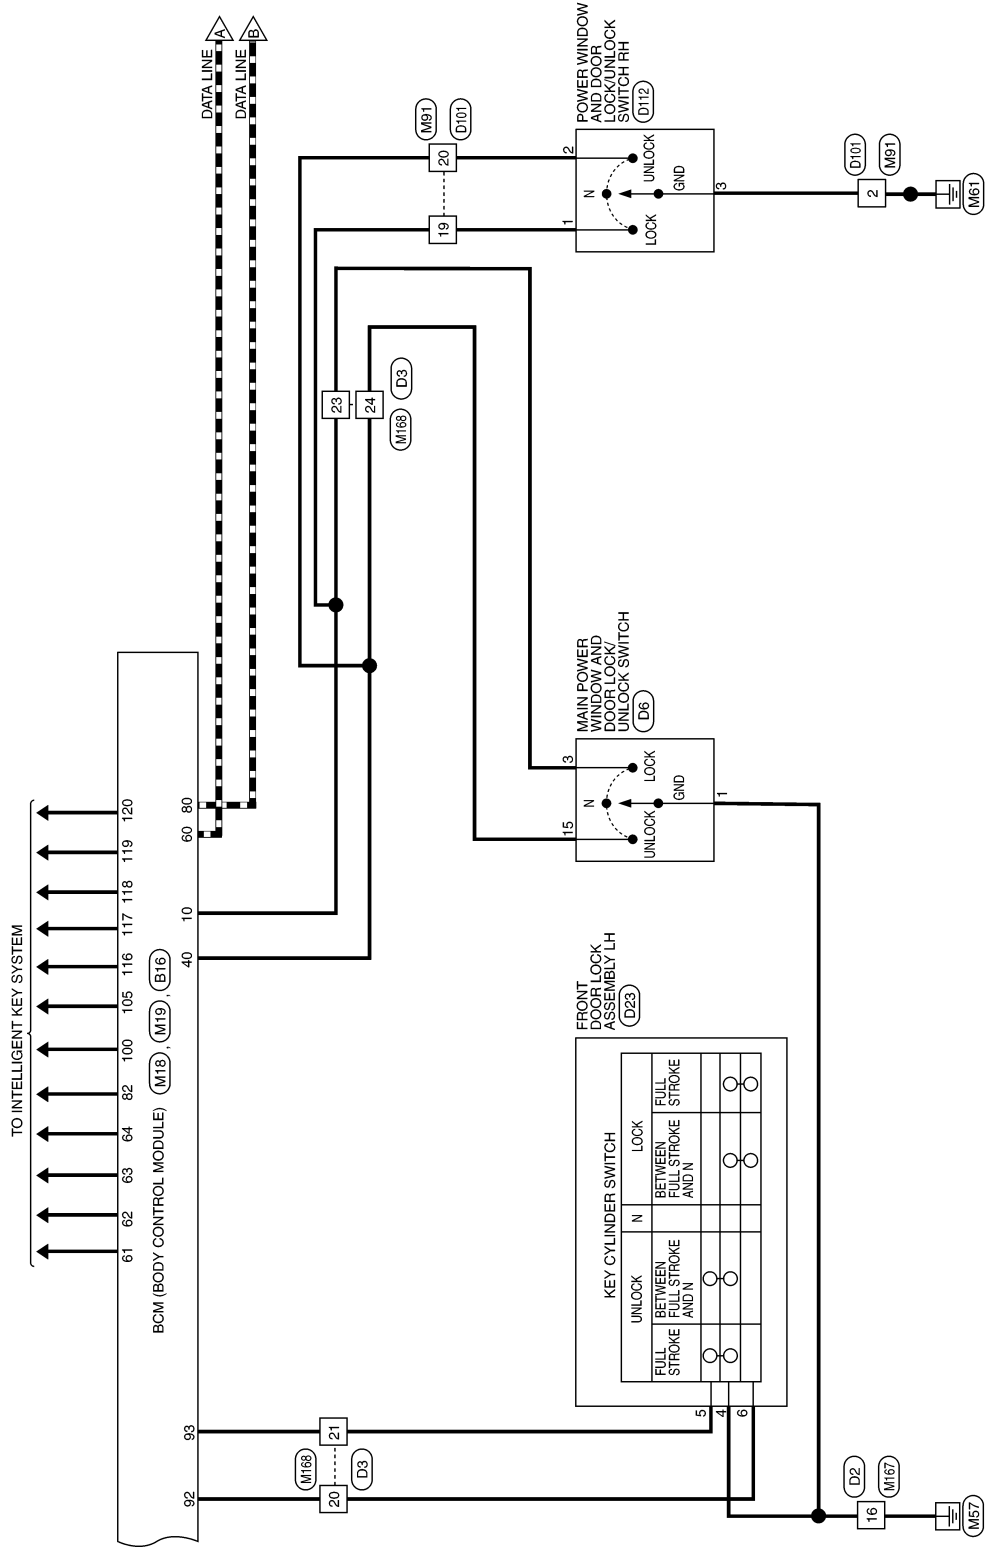


AAKWA0776GB

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

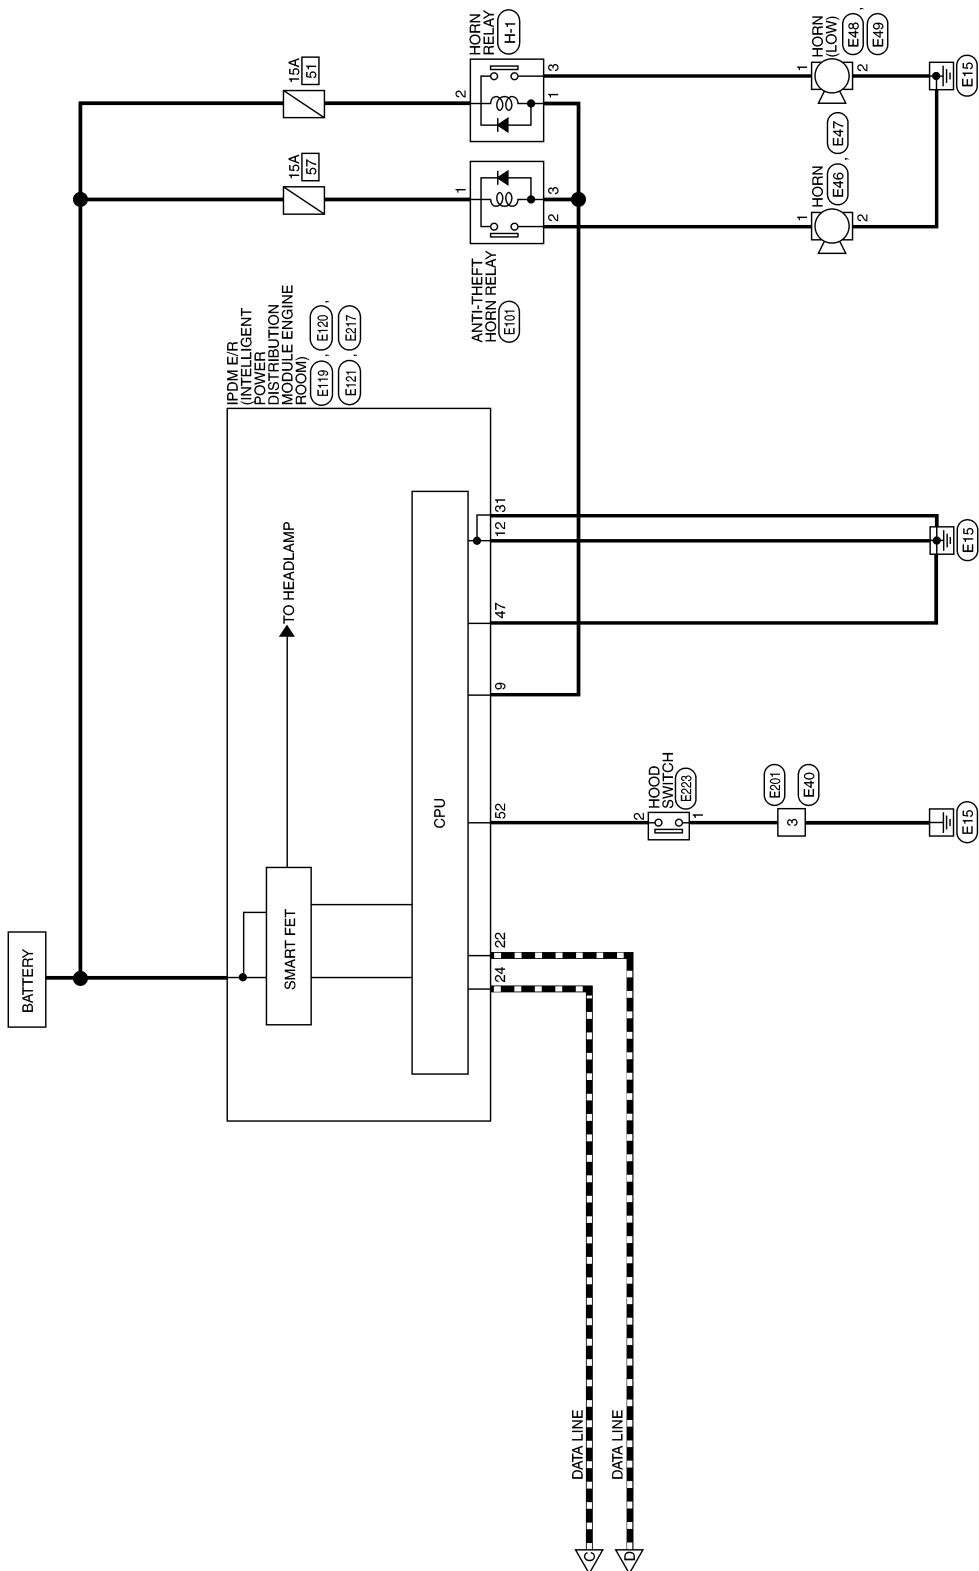

AAKWA0778GB


VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >


VEHICLE SECURITY SYSTEM CONNECTORS

Connector No.	M6
Connector Name	JOINT CONNECTOR-M01
Connector Color	GRAY

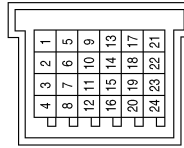


Terminal No.	Color of Wire	Signal Name
3	P	-
4	L	-
7	P	-
8	L	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
10	BG	I DOORLOCK SW
35	BG	O SECURITY LED
40	SB	I DOORUNLOCK SW

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
82	W	I SES AS HANDLE BUTTON SW
92	BR	I-KEY CYLINDER LOCK SW
93	P	I-KEY CYLINDER UNLOCK SW
100	V	SES EXT DR ANTENNA A
105	Y	I SES DR HANDLE BUTTON
116	BG	SES INT FRONT ANTENNA B
117	GR	SES INT FRONT ANTENNA A
118	SB	SES EXT AS ANTENNA B
119	P	SES EXT AS ANTENNA A
120	BR	SES EXT DR ANTENNA B

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
161	W	I PWR ECU
167	LA/V	I PWR DOORLOCK1
170	B	I GND1
171	B	I GND2
175	R	I PWR DOORLOCK2

AAKIA1805GB

A B C D E F G H I J K L M N O P


SEC

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >


Connector No.	M33
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	5N	Color of Wire	R	Signal Name	-
--------------	----	---------------	---	-------------	---

Terminal No.	61J	62J	Color of Wire	L	P	Signal Name	-	-
--------------	-----	-----	---------------	---	---	-------------	---	---

Connector No.	M31
Connector Name	WIRE TO WIRE
Connector Color	WHITE

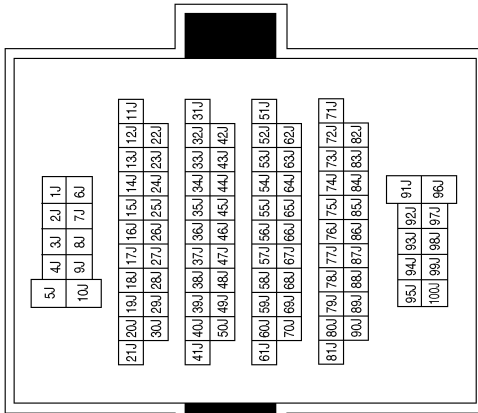

Connector No.	M68
Connector Name	FUSE BLOCK (J/B)
Connector Color	BROWN




Terminal No.	7R	14R	Color of Wire	LAV	W	Signal Name	-	-
--------------	----	-----	---------------	-----	---	-------------	---	---

Connector No.	M44
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	13P	Color of Wire	LA/G	Signal Name	-
--------------	-----	---------------	------	-------------	---

Connector No.	M43
Connector Name	JOINT CONNECTOR-M02
Connector Color	BLUE



Terminal No.	1	2	11	12	Color of Wire	L	L	P	P	Signal Name	-	-	-	-
--------------	---	---	----	----	---------------	---	---	---	---	-------------	---	---	---	---


AAKIA1806GB

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	M77
Connector Name	COMBINATION METER
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
45	LA/G	BAT

Connector No.	M76
Connector Name	COMBINATION METER
Connector Color	WHITE

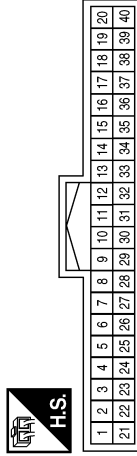


Terminal No.	Color of Wire	Signal Name
7	BG	SECURITY

Connector No.	M69
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
24	P	-
25	L	-

Connector No.	M168
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
20	BR	-
21	P	-
23	BG	-
24	SB	-

Connector No.	M167
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
16	B	-

Connector No.	M91
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	GR	-
19	LG	-
20	BR	-

AAKIA1807GB

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	E40
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	3	Color of Wire	B	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	E44
Connector Name	JOINT CONNECTOR-E01
Connector Color	WHITE

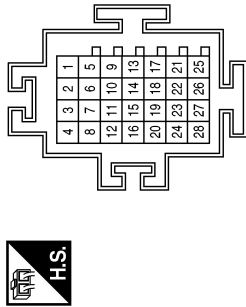

Terminal No.	5	Color of Wire	L	Signal Name	-
	6		P		-
	9		L		-
	10		P		-

Connector No.	E46
Connector Name	HORN
Connector Color	BLACK



Terminal No.	2	Color of Wire	B	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	E47
Connector Name	HORN
Connector Color	BROWN



Terminal No.	1	Color of Wire	R	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	E48
Connector Name	HORN (LOW)
Connector Color	BLACK



Terminal No.	2	Color of Wire	B	Signal Name	-
--------------	---	---------------	---	-------------	---

Connector No.	E49
Connector Name	HORN (LOW)
Connector Color	BROWN



Terminal No.	1	Color of Wire	R	Signal Name	-
--------------	---	---------------	---	-------------	---


AAKIA1808GB

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	E120
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
22	P	CAN-L
24	L	CAN-H
31	B	2ND SIGNAL GROUND

Connector No.	E119
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
9	L	LO HRN RLY
12	B	SIGNAL GROUND


Connector No.	E101
Connector Name	ANTI-THEFT HORN RELAY
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	L	-
2	R	-
3	GR	-

Terminal No.	Color of Wire	Signal Name
61J	L	-
62J	P	-

Connector No.	E152
Connector Name	WIRE TO WIRE
Connector Color	WHITE

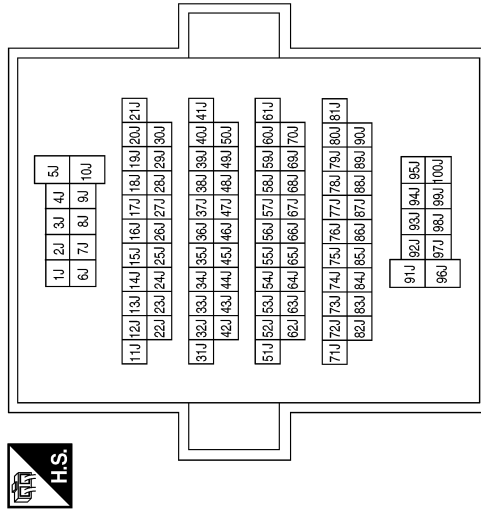

Connector No.	E121
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	RED



Terminal No.	Color of Wire	Signal Name
47	B	POWER GROUND

AAKIA1809GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	E201
Connector Name	WIRE TO WIRE
Connector Color	WHITE

2	1	
4	3	



Terminal No.	Color of Wire	Signal Name
3	B	-

Connector No.	E217
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Color	BROWN

51	50	49
56	55	54 53 52



Terminal No.	Color of Wire	Signal Name
52	W	LI HOOD SW

Connector No.	E223
Connector Name	HOOD SWITCH
Connector Color	GRAY



Terminal No.	Color of Wire	Signal Name
1	B	-
2	W	-

Connector No.	B16
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	GREEN



60	59	58	57	56	55	54	53	52	51	50	49	48	47	46	45	44	43	42	41
80	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64	63	62	61

Terminal No.	Color of Wire	Signal Name
50	W	I RR DOOR SW
51	LG	I TGATESW
52	R	I RL DOOR SW
53	SB	I AS DOOR2 SW
57	SB	I DR DOOR2 SW
60	L	CAN-H
61	BR	SES EXT REAR ANTENNA B
62	Y	SES INT MIDDLE ANTENNA B
63	L	SES INT MIDDLE ANTENNA A
64	G	SES EXT REAR ANTENNA A
80	P	CAN-L

Connector No.	B41
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Terminal No.	Color of Wire	Signal Name
24	P	-
25	L	-

Connector No.	B46
Connector Name	WIRE TO WIRE
Connector Color	WHITE



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32

Terminal No.	Color of Wire	Signal Name
19	LG	-


AAKIA1810GB

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	B63
Connector Name	JOINT CONNECTOR-B01
Connector Color	GRAY

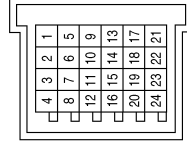


Terminal No.	Color of Wire	Signal Name
3	P	-
4	L	-
7	P	-
8	L	-

Connector No.	B54
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-

Connector No.	B49
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	SB	-
10	W	-

Connector No.	B140
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	GR	-
10	W	-

Connector No.	B71
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	SB	-

Connector No.	B70
Connector Name	REAR DOOR SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	R	-

AAKIA1811GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< WIRING DIAGRAM >

Connector No.	B141
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	GR	-

Connector No.	B142
Connector Name	REAR DOOR SWITCH RH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
3	R	-

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
16	B	-

Connector No.	D3
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
20	BR	-
21	P	-
23	L	-
24	BG	-

Connector No.	D6
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-
3	L	-
15	BG	-

Connector No.	D23
Connector Name	FRONT DOOR LOCK ASSEMBLY LH
Connector Color	GRAY




Terminal No.	Color of Wire	Signal Name
4	B	-
5	P	-
6	BR	-

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]


< WIRING DIAGRAM >

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	B	-
19	LG	-
20	BR	-

Connector No.	D112
Connector Name	FRONT POWER WINDOW SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	LG	-
2	BR	-
3	B	-

Connector No.	D501
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
19	W	-

Connector No.	D505
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
1	B	-

Connector No.	D508
Connector Name	BACK DOOR LOCK ASSEMBLY (WITHOUT POWER BACK DOOR SYSTEM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
3	W	-
4	GR	-
15	BG	-

Connector No.	D512
Connector Name	BACK DOOR LOCK ASSEMBLY (WITH POWER BACK DOOR SYSTEM)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	W	-
8	B	-

AAKIA1813GB

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:0000000010284497

OVERALL SEQUENCE

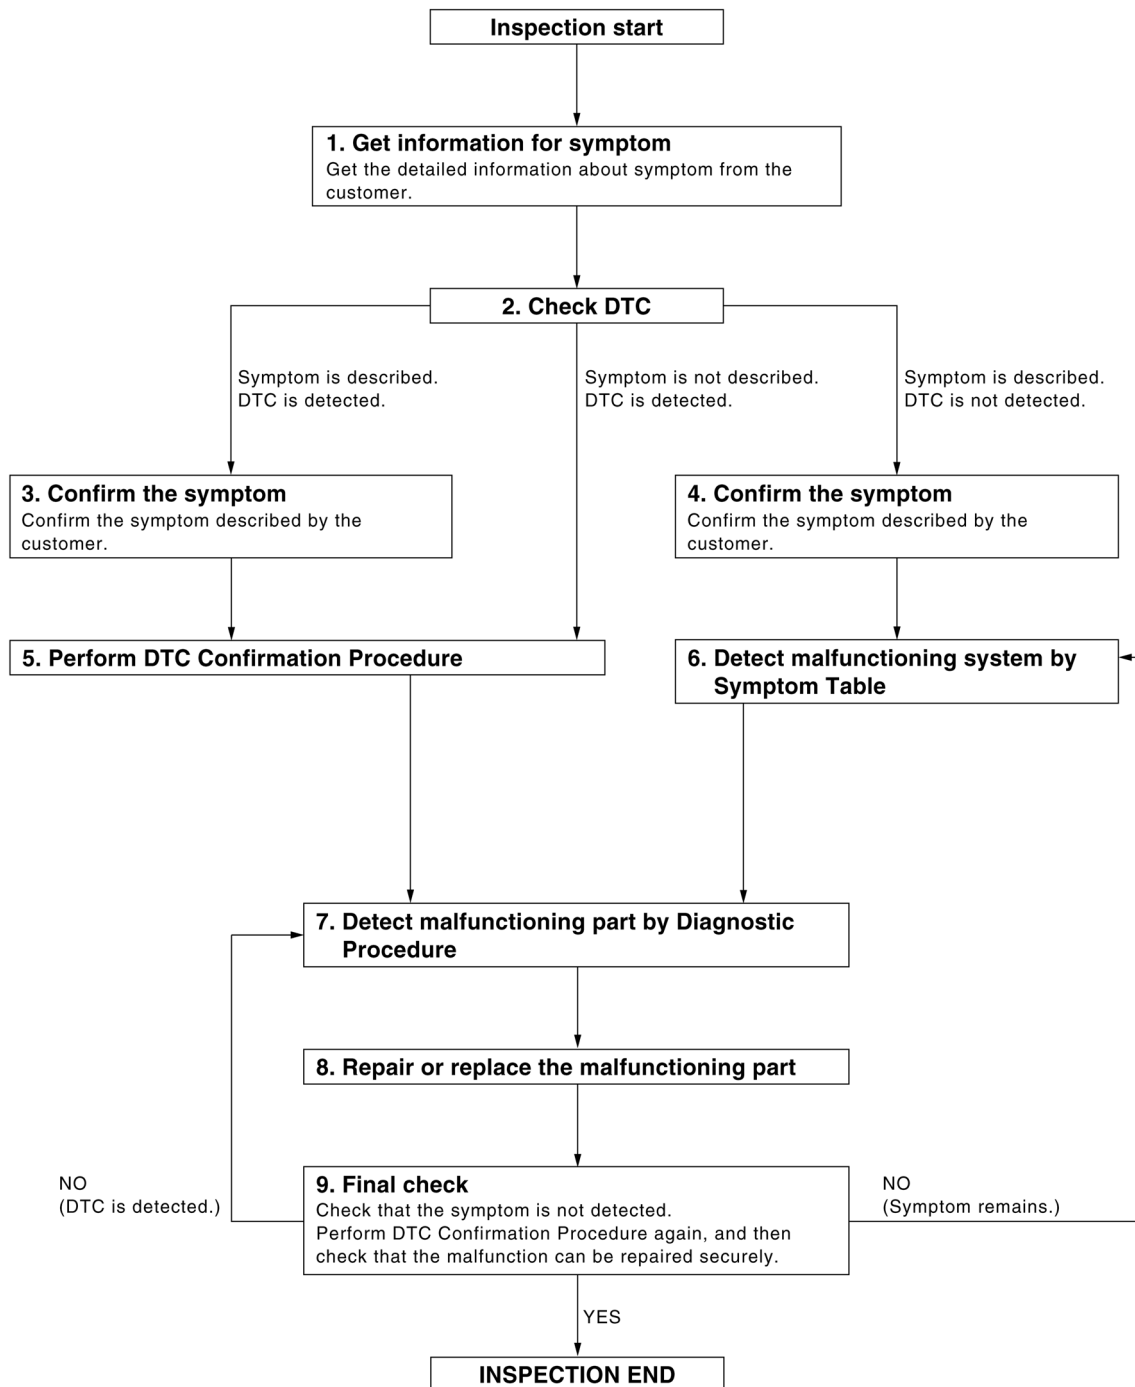

ALKIA2308GB

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

DETAILED FLOW

1.GET INFORMATION FOR SYMPTOM

Get the detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurred).

>> GO TO 2.

2.CHECK DTC

1. Check DTC for BCM.
2. Perform the following procedure if DTC is displayed.
 - Erase DTC.
 - Study the relationship between the cause detected by DTC and the symptom described by the customer.
3. Check related service bulletins for information.

Is any symptom described and any DTC detected?

- Symptom is described, DTC is displayed>>GO TO 3.
- Symptom is described, DTC is not displayed>>GO TO 4.
- Symptom is not described, DTC is displayed>>GO TO 5.

3.CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.
Connect CONSULT to the vehicle in "Data Monitor" mode and check real-time diagnosis results.
Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4.CONFIRM THE SYMPTOM

Confirm the symptom described by the customer.
Connect CONSULT to the vehicle in "Data Monitor" mode and check real-time diagnosis results.
Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5.PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC Confirmation Procedure for the displayed DTC, and then check that DTC is detected again.
If two or more DTCs are detected, refer to [BCS-107, "DTC Inspection Priority Chart"](#) (BCM) and determine trouble diagnosis order.

Is DTC detected?

- YES >> GO TO 7.
- NO >> Refer to [GI-41, "Intermittent Incident"](#).

6.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM TABLE

Detect malfunctioning system according to Symptom Table based on the confirmed symptom in step 4.

>> GO TO 7.

7.DETECT MALFUNCTIONING PART BY DIAGNOSTIC PROCEDURE

Inspect according to Diagnostic Procedure of the system.

NOTE:

The Diagnostic Procedure is described based on open circuit inspection. A short circuit inspection is also required for the circuit check in the Diagnostic Procedure.

>> GO TO 8.

8.REPAIR OR REPLACE THE MALFUNCTIONING PART

1. Repair or replace the malfunctioning part.
2. Reconnect parts or connectors disconnected during Diagnostic Procedure again after repair and replacement.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

3. Check DTC. If DTC is displayed, erase it.

>> GO TO 9.

9.FINAL CHECK

When DTC was detected in step 8, perform DTC Confirmation Procedure or Component Function Check again, and then check that the malfunctions have been fully repaired.

When symptom was described by the customer, refer to the confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Does the symptom reappear?

YES (DTC is detected)>>GO TO 7.

YES (Symptom remains)>>GO TO 6.

NO >> Inspection End.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000010284498

Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

ECM RE-COMMUNICATING FUNCTION

ECM RE-COMMUNICATING FUNCTION : Description

INFOID:000000010284499

Performing following procedure can automatically perform re-communication of ECM and BCM, but only when the ECM has been replaced with a new one (*1).

*1: New one means an ECM which has never been energized on-board.

(In this step, initialization procedure by CONSULT is not necessary)

NOTE:

- **When registering new Key IDs or replacing the ECM that is not brand new, refer to CONSULT Immobilizer mode and follow the on-screen instructions.**
- **If multiple keys are attached to the key holder, separate them before work.**
- **Distinguish keys with unregistered key ID from those with registered ID.**

ECM RE-COMMUNICATING FUNCTION : Special Repair Requirement

INFOID:000000010284500

1. PERFORM ECM RE-COMMUNICATING FUNCTION

1. Install ECM.
2. Using a registered key (*2), turn ignition switch to "ON".
*2: To perform this step, use the key that has been used before performing ECM replacement.
3. Maintain ignition switch in "ON" position for at least 5 seconds.
4. Turn ignition switch to "OFF".
5. Start engine.

Can engine be started?

YES >> Procedure is completed.

NO >> Initialize control unit. Refer to CONSULT Immobilizer mode and follow the on-screen instructions.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

KEYFOB ID REGISTRATION

< BASIC INSPECTION >

[WITHOUT INTELLIGENT KEY SYSTEM]

KEYFOB ID REGISTRATION

Description

INFOID:000000010430537

Perform the following procedure after BCM is replaced or when new keyfob ID is registered

Work Procedure

INFOID:000000010430538

1.STEP 1

Insert the first key into the ignition cylinder.

>> GO TO 2.

2.STEP 2

Turn ON the ignition switch.

>> GO TO 3.

3.STEP 3

Check that the security indicator flashes 5 times after the ignition is turned ON.

>> GO TO 4.

4.STEP 4

Turn the ignition switch OFF for a minimum of 3 seconds.

>> GO TO 5.

5.STEP 5

The first key has been registered.

>> GO TO 6.

6.STEP 6

Remove the first key and insert the next key to be registered.

>> GO TO 7.

7.STEP 7

Repeat steps 2,3 and 4 for each additional key.

>> Registration End.

P1610 LOCK MODE

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

DTC/CIRCUIT DIAGNOSIS

P1610 LOCK MODE

Description

INFOID:0000000010339868

ECM forcibly switches to the mode that inhibits engine start, when engine start operation is performed 5 times or more while communication between ECM and BCM is not normal.

DTC Logic

INFOID:0000000010339869

DTC DETECTION LOGIC

NOTE:

- If DTC B1610 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [DLK-104, "DTC Logic"](#).
- If DTC B1610 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [DLK-105, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1610	LOCK MODE	When ECM detects a communication malfunction between ECM and BCM 5 times or more.	—

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self-Diagnostic Result" mode of "ENGINE" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-155, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000010339870

1. CHECK ENGINE START FUNCTION

1. Check that there are no DTC's except for DTC P1610 detected.
If detected, erase the DTC after fixing.
2. Turn ignition switch OFF.
3. Insert the registered key into the ignition switch and wait 5 seconds.
4. Turn ignition switch ON.
5. Turn ignition switch OFF and wait 5 seconds.
6. Repeat steps 3 and 5 twice (a total of 3 times).
7. Check that engine can start.

>> Inspection End.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

P1611 ID DISCORD, IMMUECM

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

P1611 ID DISCORD, IMMUECM

DTC Logic

INFOID:000000010339871

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1611	ID DISCORD, IMMUECM	The ID verification results between BCM and ECM are NG.	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted.)• BCM• ECM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self-Diagnostic Result" mode of "ENGINE" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-156, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010339872

1. PERFORM INITIALIZATION

Perform initialization of BCM and reregistration of all keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with reregistered key?

- YES >> Inspection End.
NO >> GO TO 2.

2. CHECK SELF DIAGNOSTIC RESULT

1. Select "Self Diagnostic Result" mode of "ENGINE" using CONSULT.
2. Erase DTC.
3. Perform DTC CONFIRMATION PROCEDURE for DTC P1611. Refer to [SEC-156, "DTC Logic"](#).

Is DTC detected?

- YES >> GO TO 3.
NO >> Inspection End.

3. REPLACE BCM

1. Replace BCM. Refer to [BCS-135, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with registered key?

- YES >> Inspection End.
NO >> GO TO 4.

4. REPLACE ECM

1. Replace ECM. Refer to [EC-499, "Removal and Installation"](#).
2. Perform "ADDITIONAL SERVICE WHEN REPLACING ECM". Refer to [EC-136, "Work Procedure"](#).

>> Inspection End.

P1612 CHAIN OF ECM-IMMU

[WITHOUT INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

P1612 CHAIN OF ECM-IMMU

DTC Logic

INFOID:000000010339873

DTC DETECTION LOGIC

NOTE:

- If DTC P1612 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [DLK-104, "DTC Logic"](#).
- If DTC P1612 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [DLK-105, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P1612	CHAIN OF BCM-ECM	Inactive communication between BCM and ECM	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted.)• ECM• BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-157, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010339874

NOTE:

- If DTC P1612 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [DLK-104, "DTC Logic"](#).
- If DTC P1612 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [DLK-105, "DTC Logic"](#).

1.CHECK BCM POWER SUPPLY AND GROUND CIRCUIT.

Check BCM power supply and ground circuit. Refer to [BCS-128, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the harness.

2.CHECK ECM POWER SUPPLY AND GROUND CIRCUIT.

Check ECM power supply and ground circuit. Refer to [EC-165, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair or replace the harness.

3.PERFORM DTC CONFIRMATION PROCEDURE.

Perform the DTC confirmation procedure. Refer to [SEC-157, "DTC Logic"](#).

Does the DTC return?

- YES >> Replace BCM. Refer to [BCS-135, "Removal and Installation"](#)
NO >> Inspection End.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

P161D IMMOBILIZER

[WITHOUT INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

P161D IMMOBILIZER

DTC Logic

INFOID:000000010375273

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P161D	IMMOBILIZER	When immobilizer detects a malfunction, and prohibits the engine start.	BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self Diagnostic Result" mode of "ENGINE" using CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-160. "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010375274

1.REPLACE BCM

Replace BCM. Refer to [BCS-135. "Removal and Installation"](#).

>> Inspection End.

P161E IMMOBILIZER

[WITHOUT INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

P161E IMMOBILIZER

DTC Logic

INFOID:000000010375275

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P161E	IMMOBILIZER	After replacing the ECM, when the ECM is not registered to the vehicle by using the CONSULT.	<ul style="list-style-type: none">• BCM• ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self Diagnostic Result" mode of "ENGINE" using CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-160, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010375276

1.PERFORM REGISTRATION OF ECM

Perform registration of ECM using CONSULT.

Is DTC detected?

- YES >> Inspection End.
NO >> GO TO 2.

2.REPLACE BCM

Replace BCM. Refer to [BCS-135, "Removal and Installation"](#).

Is DTC detected?

- YES >> GO TO 3.
NO >> Inspection End.

3.REPLACE ECM

Replace ECM. Refer to [EC-499, "Removal and Installation"](#).

>> Inspection End.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

P161F IMMOBILIZER

[WITHOUT INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

P161F IMMOBILIZER

DTC Logic

INFOID:000000010375277

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
P161F	IMMOBILIZER	When immobilizer detects a malfunction, and prohibits the engine start.	ECM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self Diagnostic Result" mode of "ENGINE" using CONSULT.

Is DTC detected?

- YES >> Refer to [SEC-160. "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010375278

1.REPLACE ECM

Replace ECM. Refer to [EC-499. "Removal and Installation"](#).

>> Inspection End.

B20DF STARTER RELAY OFF CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

B20DF STARTER RELAY OFF CIRCUIT

DTC Logic

INFOID:0000000010351320

DTC DETECTION LOGIC

NOTE:

- If DTC B20DF is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-124, "DTC Logic"](#).
- If DTC B20DF is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-125, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B20DF	STARTER RELAY OFF	When comparing the starter relay signal (CAN) from BCM, IPDM E/R detects that starter relay is stuck in the OFF position for 1 second or more.	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted.)• Harness or connector (Starter relay circuit is open or shorted.)• IPDM E/R• BCM• Starter relay

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch under the following conditions to start engine, and wait 1 second or more.
 - Selector lever: In the P position
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-161, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000010351321

Regarding Wiring Diagram information, refer to [SEC-127, "Wiring Diagram"](#).

SEC

1. CHECK STARTER RELAY POWER SUPPLY CIRCUIT (SWITCH SIDE)

1. Turn ignition switch ON.
2. Brake pedal pressed.
3. Place transmission in park or neutral.
4. Check voltage between IPDM E/R harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal		
F41	86	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Refer to [SEC-90, "Diagnosis Procedure"](#).

2. CHECK STARTER RELAY POWER SUPPLY CIRCUIT (COIL SIDE)

1. Turn ignition switch ON.
2. Place transmission in park or neutral.
3. Check voltage between IPDM E/R harness connector and ground.

B20DF STARTER RELAY OFF CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

(+)		(-)	Voltage (V) (Approx.)
IPDM E/R			
Connector	Terminal		
F42	92	Ground	Battery voltage

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).
NO >> Refer to [SEC-82, "Diagnosis Procedure"](#).

B2192 ID DISCORD, IMMUECM

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

B2192 ID DISCORD, IMMUECM

DTC Logic

INFOID:000000010339875

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2192	ID DISCORD BCM-ECM	The ID verification results between BCM and ECM are NG.	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted.)• BCM• ECM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-163, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010339876

1. PERFORM INITIALIZATION

Perform initialization of BCM and reregistration of all keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with reregistered key?

- YES >> Inspection End.
NO >> GO TO 2.

2. CHECK SELF-DIAGNOSTIC RESULT

1. Select "Self Diagnostic Result" mode of "BCM" using CONSULT.
2. Erase DTC.
3. Perform DTC CONFIRMATION PROCEDURE for DTC B2192. Refer to [SEC-163, "DTC Logic"](#).

Is DTC detected?

- YES >> GO TO 3.
NO >> Inspection End.

3. REPLACE BCM

1. Replace BCM. Refer to [BCS-135, "Removal and Installation"](#).
2. Perform initialization of BCM and reregistration of all keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

Can the system be initialized and can the engine be started with registered key?

- YES >> Inspection End.
NO >> GO TO 4.

4. REPLACE ECM

1. Replace ECM. Refer to [EC-499, "Removal and Installation"](#).
2. Perform "ADDITIONAL SERVICE WHEN REPLACING ECM". Refer to [EC-136, "Work Procedure"](#).

>> Inspection End.

B2193 CHAIN OF ECM-IMMU

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

B2193 CHAIN OF ECM-IMMU

DTC Logic

INFOID:000000010339877

DTC DETECTION LOGIC

NOTE:

- If DTC B2193 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-124, "DTC Logic"](#).
- If DTC B2193 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-125, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2193	CHAIN OF BCM-ECM	Inactive communication between BCM and ECM	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted.)• ECM• BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-164, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010339878

NOTE:

- If DTC B2193 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-124, "DTC Logic"](#).
- If DTC B2193 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-125, "DTC Logic"](#).

1. CHECK BCM POWER SUPPLY AND GROUND CIRCUIT.

Check BCM power supply and ground circuit. Refer to [BCS-128, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the harness.

2. CHECK ECM POWER SUPPLY AND GROUND CIRCUIT.

Check ECM power supply and ground circuit. Refer to [EC-165, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> Replace ECM. Refer to [EC-499, "Removal and Installation"](#). GO TO 3.
NO >> Repair or replace the harness.

3. PERFORM DTC CONFIRMATION PROCEDURE.

Perform the DTC confirmation procedure. Refer to [SEC-164, "DTC Logic"](#).

Does the DTC return?

- YES >> Replace BCM. Refer to [BCS-135, "Removal and Installation"](#).
NO >> Inspection End.

B2196 DONGLE UNIT

[WITHOUT INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

B2196 DONGLE UNIT

Description

INFOID:000000010339879

BCM performs ID verification between BCM and dongle unit.
When verification result is OK, BCM permits cranking.

DTC Logic

INFOID:000000010339880

DTC DETECTION LOGIC

NOTE:

- If DTC B2196 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-124, "DTC Logic"](#).
- If DTC B2196 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-125, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2196	DONGLE NG	The ID verification results between BCM and dongle unit is NG.	<ul style="list-style-type: none">• Harness or connectors (Dongle unit circuit is open or shorted.)• Dongle unit

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON.
2. Turn ignition switch OFF.
3. Turn ignition switch ON.
4. Check "Self-diagnostic result" of "BCM" using CONSULT.

Is the DTC detected?

- YES >> Refer to [SEC-165, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010339881

Regarding Wiring Diagram information, refer to [SEC-127, "Wiring Diagram"](#).

1. PERFORM INITIALIZATION

1. Perform initialization of BCM and reregistration of all keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.
2. Start the engine.

Dose the engine start?

- YES >> Inspection End.
NO >> GO TO 2.

2. CHECK DONGLE UNIT CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector and dongle unit connector.
3. Check continuity between BCM harness connector and dongle unit harness connector.

BCM		Dongle unit		Continuity
Connector	Terminal	Connector	Terminal	
M18	16	M5	1	Yes

4. Check continuity between BCM harness connector and ground.

B2196 DONGLE UNIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

BCM		Ground	Continuity
Connector	Terminal		
M18	16		No

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace harness.

3. CHECK DONGLE UNIT GROUND CIRCUIT

Check continuity between dongle unit harness connector and ground.

Dongle unit		Ground	Continuity
Connector	Terminal		
M5	4		Yes

Is the inspection result normal?

YES >> Replace dongle unit.

NO >> Repair or replace harness.

B2198 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

B2198 NATS ANTENNA AMP.

DTC Logic

INFOID:000000010339921

DTC DETECTION LOGIC

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2198	NATS ANTENNA AMP	Inactive communication between NATS antenna amp. and BCM is detected when BCM enters in the low power consumption mode (BCM sleep condition)	<ul style="list-style-type: none"> • Harness or connectors (NATS antenna amp. circuit is open or shorted.) • NATS antenna amp. • BCM

DTC CONFIRMATION PROCEDURE

1.PERFORM DTC CONFIRMATION PROCEDURE

1. Make the conditions that BCM enters in the low power consumption mode (BCM sleep condition). Refer to [BCS-84. "POWER CONSUMPTION CONTROL SYSTEM : System Description"](#).
2. Turn ignition switch ON.
3. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-167. "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010339922

Regarding Wiring Diagram information, refer to [SEC-127. "Wiring Diagram"](#).

1.CHECK FUSE

1. Turn power switch OFF.
2. Check that the following fuse in fuse block (J/B) is not blown.

Signal name	Fuse No.
Battery power supply	9 (5 A)

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Replace the blown fuse after repairing the affected circuit.

2.CHECK NATS ANTENNA AMP. POWER SUPPLY

1. Disconnect NATS antenna amp. connector.
2. Check voltage between NATS antenna amp. harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
NATS antenna amp.			
Connector	Terminal		
M4	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> GO TO 3.

3.CHECK NATS ANTENNA AMP. POWER SUPPLY CIRCUIT

1. Disconnect fuse block (J/B) connector.
2. Check continuity between fuse block (J/B) harness connector and NATS antenna amp. connector.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B2198 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

Fuse block (J/B)		NATS antenna amp.		Continuity
Connector	Terminal	Connector	Terminal	
M44	12 R	M4	3	Yes

Is the inspection result normal?

- YES >> Replace fuse block (J/B).
 NO >> Repair or replace harness.

4. CHECK NATS ANTENNA AMP. GROUND CIRCUIT

Check continuity between NATS antenna amp. harness connector and ground.


NATS antenna amp.		Ground	Continuity
Connector	Terminal		
M4	2		Yes

Is the inspection result normal?

- YES >> GO TO 5.
 NO >> Repair or replace harness.

5. CHECK NATS ANTENNA AMP. COMMUNICATION SIGNAL 1

Check voltage signal between NATS antenna amp. harness connector and ground using an oscilloscope.

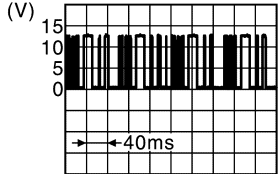(+)		(-)	Condition	Voltage (V) (Approx.)
Connector	Terminal			
M4	1	Ground	Key: Key battery is removed Brake pedal: Depressed NOTE: Waveform varies each time when brake pedal is depressed	
			Brake pedal: Not depressed	Battery voltage

Is the inspection result normal?

- YES >> GO TO 7.
 NO >> GO TO 6.

6. CHECK NATS ANTENNA AMP. OUTPUT SIGNAL CIRCUIT 1

1. Disconnect BCM connector.
2. Check continuity between NATS antenna amp. harness connector and BCM connector.

NATS antenna amp.		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M4	1	M19	109	Yes

3. Check continuity between NATS antenna amp. harness connector and ground.

NATS antenna amp.		Ground	Continuity
Connector	Terminal		
M4	1		No

Is the inspection result normal?

- YES >> GO TO 9.
 NO >> Repair or replace harness.


7. CHECK NATS ANTENNA AMP. COMMUNICATION SIGNAL 2

B2198 NATS ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

Check voltage signal between NATS antenna amp. harness connector and ground using an oscilloscope.

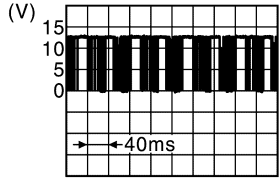(+)		(-)	Condition		Voltage (V) (Approx.)
NATS antenna amp.					
Connector	Terminal				
M4	4	Ground	Key: Key battery is re- moved	Brake pedal: Depressed NOTE: Waveform varies each time when brake pedal is depressed	
				Brake pedal: Not depressed	Battery voltage

Is the inspection result normal?

YES >> Replace NATS antenna amp. Refer to [SEC-192, "Removal and Installation"](#).

NO >> GO TO 8.

8. CHECK NATS ANTENNA AMP. OUTPUT SIGNAL CIRCUIT 2

1. Disconnect BCM connector.
2. Check continuity between NATS antenna amp. harness connector and BCM connector.

NATS antenna amp.		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M4	4	M19	113	Yes

3. Check continuity between NATS antenna amp. harness connector and ground.

NATS antenna amp.		Ground	Continuity
Connector	Terminal		
M4	4		No

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair or replace harness.

9. REPLACE BCM

1. Replace BCM. Refer to [BCS-135, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all keys using CONSULT.

>> Inspection End

B2557 VEHICLE SPEED

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

B2557 VEHICLE SPEED

DTC Logic

INFOID:000000010339887

DTC DETECTION LOGIC

NOTE:

- If DTC B2557 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-124, "DTC Logic"](#).
- If DTC B2557 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-125, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible causes
B2557	VEHICLE SPEED	BCM detects one of the following conditions for 10 seconds continuously. <ul style="list-style-type: none">• Vehicle speed signal from combination meter is 10 km/h (6.2 MPH) or more, and vehicle speed signal from ABS actuator and electric unit (control unit) is 4 km/h (2.5 MPH) or less.• Vehicle speed signal from combination meter is 4 km/h (2.5 MPH) or less, and vehicle speed signal from ABS actuator and electric unit (control unit) is 10 km/h (6.2 MPH) or more.	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted.)• Combination meter• ABS actuator and electric unit (control unit)

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Start engine and wait 10 seconds or more.
2. Drive the vehicle at a vehicle speed of 10 km/h (6.2 MPH) or more for 10 seconds or more.
3. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-170, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010339888

1. CHECK DTC OF "ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)"

Check DTC in "Self-Diagnostic Result" mode of "ABS" using CONSULT.

Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [BRC-55, "DTC Index"](#).
NO >> GO TO 2.

2. CHECK DTC OF "COMBINATION METER"

Check DTC in "Self-Diagnostic Result" mode of "METER/M&A" using CONSULT.

Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [MWI-30, "DTC Index"](#).
NO >> GO TO 3.

3. CHECK INTERMITTENT INCIDENT

Refer to [GI-41, "Intermittent Incident"](#) .

>> Inspection End.

B2602 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

B2602 SHIFT POSITION

DTC Logic

INFOID:000000010339889

DTC DETECTION LOGIC

NOTE:

- If DTC B2602 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-124, "DTC Logic"](#).
- If DTC B2602 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-125, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B2602	SHIFT POSITION	BCM detects the following status for 10 seconds. <ul style="list-style-type: none"> • Selector lever is in the P (Park) position • Vehicle speed is 4 km/h (2.5 MPH) or more • Ignition switch is in the ON position 	<ul style="list-style-type: none"> • Harness or connectors (CAN communication line is open or shorted.) • Harness or connectors [CVT shift selector (park position switch) circuit is open or shorted.] • CVT shift selector (park position switch) • Combination meter • BCM

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Start engine.
2. Drive vehicle at a speed of 4 km/h (2.5 MPH) or more for 10 seconds or more.
3. Check DTC in "Self-Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-171, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010339890

Regarding Wiring Diagram information, refer to [SEC-127, "Wiring Diagram"](#).

1. CHECK CVT SHIFT SELECTOR SWITCH FUNCTION

1. Turn ignition switch ON.
2. Select "DETE/CANCEL SW" and "VEH SPEED 1" in "Data Monitor" mode with CONSULT.
3. Check "DETE/CANCEL SW" and "VEH SPEED 1" indication under the following conditions.

Monitor item	Condition		Indication
DETE/CANCEL SW	CVT Shift selector	In any position other than P (Park)	OFF
		P (Park)	ON
VEH SPEED 1	Vehicle not moving		0
	Vehicle moving		Varies

Is the inspection result normal?

- YES >> Refer to [GI-41, "Intermittent Incident"](#).
 NO-1 >> If DETE/CANCEL SW is incorrect. GO TO 4.
 NO-2 >> If VEH SPEED 1 is incorrect. GO TO 2.

2. CHECK DTC OF COMBINATION METER

Check DTC in "Self-Diagnostic Result" mode of "METER/M&A" using CONSULT.

B2602 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [MWI-30, "DTC Index"](#).
NO >> GO TO 3.

3.CHECK DTC OF ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Check DTC in "Self-Diagnostic Result" mode of "ABS" using CONSULT.

Is DTC detected?

- YES >> Perform the trouble diagnosis related to the detected DTC. Refer to [BRC-55, "DTC Index"](#).
NO >> GO TO 6.

4.CHECK CVT SHIFT SELECTOR CIRCUIT

1. Disconnect BCM connector and CVT shift selector connector.
2. Check continuity between CVT shift selector (park position switch) harness connector and BCM harness connector.

CVT shift selector (park position switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M107	13	M19	94	Yes

3. Check continuity between CVT shift selector (park position switch) harness connector and ground.

CVT shift selector (park position switch)		Ground	Continuity
Connector	Terminal		
M107	13		No

Is the inspection result normal?

- YES >> GO TO 5.
NO >> Repair or replace harness.

5.CHECK CVT SHIFT SELECTOR CIRCUIT

1. Disconnect BCM connector and CVT shift selector connector.
2. Check continuity between CVT shift selector (park position switch) harness connector and BCM harness connector.

CVT shift selector (park position switch)		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M107	12	M18	17	Yes

3. Check continuity between CVT shift selector (park position switch) harness connector and ground.

CVT shift selector (park position switch)		Ground	Continuity
Connector	Terminal		
M107	12		No

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Repair or replace harness.

6.CHECK CVT SHIFT SELECTOR (PARK POSITION SWITCH)

Refer to [SEC-173, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Replace CVT shift selector. Refer to [TM-194, "Removal and Installation"](#).

7.CHECK INTERMITTENT INCIDENT

Refer to [GI-41, "Intermittent Incident"](#).

>> Inspection End.

B2602 SHIFT POSITION

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

Component Inspection

INFOID:000000010339891

1. CHECK CVT SHIFT SELECTOR (PARK POSITION SWITCH)

1. Turn ignition switch OFF.
2. Disconnect CVT shift selector connector.
3. Check continuity between CVT shift selector (park position switch) terminals.

CVT shift selector (park position switch)		Condition		Continuity
Terminal				
12	13	Selector lever	P (Park) position	No
			Other than above	Yes

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace CVT shift selector. Refer to [TM-194, "Removal and Installation"](#).

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

B260F ENGINE STATUS

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

B260F ENGINE STATUS

Description

INFOID:000000010339892

BCM receives the engine status signal from ECM via CAN communication.

DTC Description

INFOID:000000010339893

DTC DETECTION LOGIC

DTC No.	CONSULT screen items (Trouble diagnosis content)	DTC detecting condition
B260F	ENG STATE SIG LOST (Engine state signal lost)	BCM has not yet received the engine status signal from ECM when ignition switch is in the ON position.

POSSIBLE CAUSE

- Harness or connectors
(The CAN communication line is open or shorted.)
- ECM

FAIL-SAFE

Inhibit engine cranking

DTC CONFIRMATION PROCEDURE

1. CHECK DTC PRIORITY

If DTC B260F is displayed with DTC U1000 or U1010, first perform the trouble diagnosis for DTC U1000 or U1010.

Is applicable DTC detected?

YES >> Perform diagnosis of applicable. U1000: Refer to [BCS-124, "DTC Logic"](#). U1010: Refer to [BCS-125, "DTC Logic"](#).

NO >> GO TO 2.

2. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON and wait 2 seconds or more.
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

YES >> Refer to [SEC-174, "Diagnosis Procedure"](#).

NO-1 >> To check malfunction symptom before repair: Refer to [GI-41, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: Inspection End.

Diagnosis Procedure

INFOID:000000010339894

1. CHECK DTC PRIORITY

If DTC B260F is displayed with DTC U1000 or U1010, first perform the trouble diagnosis for DTC U1000 or U1010.

Is applicable DTC detected?

YES >> Perform diagnosis of applicable. U1000: Refer to [BCS-124, "DTC Logic"](#). U1010: Refer to [BCS-125, "DTC Logic"](#).

NO >> GO TO 2.

2. INSPECTION START

1. Turn ignition switch ON.
2. Select "Self Diagnostic Result" mode of "BCM" using CONSULT.
3. Touch "ERASE".
4. Perform DTC CONFIRMATION PROCEDURE for DTC B260F. Refer to [SEC-174, "DTC Description"](#).

Is DTC detected?

YES >> GO TO 3.

NO >> Inspection End.

B260F ENGINE STATUS

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

3.REPLACE ECM

Replace ECM. Refer [EC-499, "Removal and Installation"](#).

>> Inspection End.

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

B261E VEHICLE TYPE

[WITHOUT INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

B261E VEHICLE TYPE

Description

INFOID:0000000010339895

There are two types of vehicles.

- HEV
- Conventional

DTC Logic

INFOID:0000000010339896

DTC DETECTION LOGIC

NOTE:

- If DTC B261E is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-124, "DTC Logic"](#).
- If DTC B261E is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-125, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B261E	VEHICLE TYPE	Difference of BCM configuration.	<ul style="list-style-type: none">• BCM mis-configuration• Wrong ECM installed

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch ON under the following conditions.
 - Shift selector lever is in the P (Park) or N (Neutral) position
 - Do not depress brake pedal
2. Check "Self-Diagnostic Result" of "BCM" using CONSULT.

Is DTC detected?

- YES >> GO TO [SEC-176, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:0000000010339897

1. INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" of "BCM" using CONSULT.
3. Touch "ERASE".
4. Perform DTC Confirmation Procedure. Refer to [SEC-176, "DTC Logic"](#).

Is the 1st trip DTC B261E displayed again?

- YES >> GO TO 2.
NO >> Inspection End.

2. PERFORM BCM CONFIGURATION.

Perform the BCM configuration. Refer to [BCS-121, "CONFIGURATION \(BCM\) : Work Procedure"](#).

>> GO TO 3.

3. INSPECTION START

1. Turn ignition switch ON.
2. Check "Self-diagnostic result" of "BCM" using CONSULT.
3. Touch "ERASE".
4. Perform DTC Confirmation Procedure.
Refer to [SEC-176, "DTC Logic"](#).

Is the 1st trip DTC B261E displayed again?

- YES >> GO TO 4.
NO >> Inspection End.

B261E VEHICLE TYPE

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

4. CONFIRM ECM PART NUMBER.

Confirm the part number of the installed ECM is correct.

Is the ECM part number correct?

- YES >> Replace BCM. Refer to [BCS-135. "Removal and Installation"](#).
- NO >> Replace ECM. Refer to [EC-499. "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

SEC

L

M

N

O

P

B27D1 START CUT RELAY OFF

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

B27D1 START CUT RELAY OFF

DTC Logic

INFOID:000000010339900

DTC DETECTION LOGIC

NOTE:

- If DTC B27D1 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-124, "DTC Logic"](#).
- If DTC B27D1 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-125, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B27D1	STARTER CUT RELAY OFF	When comparing the starter cut relay signal (CAN) from IPDM E/R, BCM detects that starter cut relay is stuck in the OFF position for 1 second or more.	<ul style="list-style-type: none">• Harness or connectors (The CAN communication line is open or shorted.)• Harness or connector (Starter cut relay circuit is open or shorted.)• IPDM E/R• BCM• Starter cut relay

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch under the following conditions to start engine, and wait 1 second or more.
 - Selector lever: In the P position
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-178, "Diagnosis Procedure"](#).
NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010339901

Regarding Wiring Diagram information, refer to [SEC-127, "Wiring Diagram"](#).

1. CHECK STARTER CUT RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect starter cut relay.
3. Check voltage between starter cut relay harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Starter cut relay			
Connector	Terminal	Ground	Battery voltage
F55	1		
	3		

Is the inspection result normal?

- YES >> GO TO 2.
NO-1 >> Check 30 A fusible link [M, located in the fuse block (J/B)].
NO-2 >> Check harness for open or short between starter cut relay and fusible link.

2. CHECK STARTER CUT RELAY CONTROL

1. Reconnect starter cut relay.
2. Check voltage between BCM harness connector and ground.

B27D1 START CUT RELAY OFF

[WITHOUT INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

(+)		(-)	Condition	Voltage (V) (Approx.)
BCM				
Connector	Terminal			
E29	139	Ground	CVT shift selector lever	N or P position Battery voltage
				Other than above 0

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3. CHECK STARTER CUT RELAY CONTROL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Disconnect starter cut relay.
4. Check continuity between BCM harness connector and starter cut relay harness connector.

BCM		Starter cut relay		Continuity
Connector	Terminal	Connector	Terminal	
E29	139	F55	2	Yes

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4. CHECK STARTER CUT RELAY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and starter cut relay harness connector.

IPDM E/R		Starter cut relay		Continuity
Connector	Terminal	Connector	Terminal	
F41	86	F55	5	Yes

4. Check continuity between BCM harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
F41	86		No

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

5. CHECK STARTER CUT RELAY

Refer to [SEC-180. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace starter cut relay.

6. REPLACE BCM

1. Replace BCM. Refer to [BCS-135. "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all keys using CONSULT.
3. Perform DTC CONFIRMATION PROCEDURE for DTC B27D1. Refer to [SEC-178. "DTC Logic"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace IPDM E/R. Refer to [PCS-35. "Removal and Installation"](#).

B27D1 START CUT RELAY OFF

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

Component Inspection

INFOID:000000010339902

1. CHECK STARTER CUT RELAY

1. Turn ignition switch OFF.
2. Disconnect starter cut relay.
3. Check continuity between starter cut relay terminals.

Starter cut relay		Condition	Continuity
Terminal			
3	5	12 V direct current supply between terminals 1 and 2	Yes
		No current supply	No

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace starter cut relay.

B27D2 START CUT RELAY ON

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

B27D2 START CUT RELAY ON

DTC Logic

INFOID:000000010339903

DTC DETECTION LOGIC

NOTE:

- If DTC B27D2 is displayed with DTC U1000, first perform the trouble diagnosis for DTC U1000. Refer to [BCS-124, "DTC Logic"](#).
- If DTC B27D2 is displayed with DTC U1010, first perform the trouble diagnosis for DTC U1010. Refer to [BCS-125, "DTC Logic"](#).

DTC No.	Trouble diagnosis name	DTC detecting condition	Possible cause
B27D2	STARTER CUT RELAY ON	When comparing the starter cut relay signal (CAN) from IPDM E/R, BCM detects that starter cut relay is stuck in the ON position for 1 second or more.	<ul style="list-style-type: none"> • Harness or connectors (The CAN communication line is open or shorted.) • Harness or connector (Starter cut relay circuit is open or shorted.) • IPDM E/R • BCM • Starter cut relay

DTC CONFIRMATION PROCEDURE

1. PERFORM DTC CONFIRMATION PROCEDURE

1. Turn ignition switch under the following conditions to start engine, and wait 1 second or more.
 - Selector lever: In the P position
2. Check DTC in "Self Diagnostic Result" mode of "BCM" using CONSULT.

Is DTC detected?

- YES >> Go to [SEC-181, "Diagnosis Procedure"](#).
 NO >> Inspection End.

Diagnosis Procedure

INFOID:000000010339904

Regarding Wiring Diagram information, refer to [SEC-127, "Wiring Diagram"](#).

SEC

1. CHECK STARTER CUT RELAY POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect starter cut relay.
3. Check voltage between starter cut relay harness connector and ground.

(+)		(-)	Voltage (V) (Approx.)
Starter cut relay			
Connector	Terminal	Ground	Battery voltage
F55	1		
	3		

Is the inspection result normal?

- YES >> GO TO 2.
 NO-1 >> Check 30 A fusible link [M, located in the fuse block (J/B)].
 NO-2 >> Check harness for open or short between starter cut relay and fusible link.

2. CHECK STARTER CUT RELAY CONTROL

1. Reconnect starter cut relay.
2. Check voltage between BCM harness connector and ground.

B27D2 START CUT RELAY ON

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

(+)		(-)	Condition	Voltage (V) (Approx.)	
BCM					
Connector	Terminal				
E29	139	Ground	CVT shift selector lever	N or P position	Battery voltage
				Other than above	0

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

3. CHECK STARTER CUT RELAY CONTROL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Disconnect starter cut relay.
4. Check continuity between BCM harness connector and starter cut relay harness connector.

BCM		Starter cut relay		Continuity
Connector	Terminal	Connector	Terminal	
E29	139	F55	2	Yes

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4. CHECK STARTER CUT RELAY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and starter cut relay harness connector.

IPDM E/R		Starter cut relay		Continuity
Connector	Terminal	Connector	Terminal	
F41	86	F55	5	Yes

4. Check continuity between BCM harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
F41	86		No

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace harness.

5. CHECK STARTER CUT RELAY

Refer to [SEC-183. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Replace starter cut relay.

6. REPLACE BCM

1. Replace BCM. Refer to [BCS-135. "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all keys using CONSULT.
3. Perform DTC CONFIRMATION PROCEDURE for DTC B27D2. Refer to [SEC-181. "DTC Logic"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace IPDM E/R. Refer to [PCS-35. "Removal and Installation"](#).

B27D2 START CUT RELAY ON

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

Component Inspection

INFOID:000000010339905

1. CHECK STARTER CUT RELAY

1. Turn ignition switch OFF.
2. Disconnect starter cut relay.
3. Check continuity between starter cut relay terminals.

Starter cut relay		Condition	Continuity
Terminal			
3	5	12 V direct current supply between terminals 1 and 2	Yes
		No current supply	No

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace starter cut relay.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

HEADLAMP FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

HEADLAMP FUNCTION

Component Function Check

INFOID:000000010339906

1.CHECK FUNCTION

1. Perform "HEAD LAMP(HI)" in "Active Test" mode of "THEFT ALM" of "BCM" using CONSULT.
2. Check headlamps operation.

Test item		Description	
HEAD LAMP (HI)	ON	Headlamps (Hi)	Light
	OFF		Does not light

Is the inspection result normal?

- YES >> Inspection End.
NO >> Refer to [SEC-184, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000010339907

1.CHECK HEADLAMP FUNCTION

Refer to [SEC-184, "Component Function Check"](#).

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair or replace the malfunctioning parts.

2.CHECK INTERMITTENT INCIDENT

Refer to [GI-41, "Intermittent Incident"](#).

>> Inspection End.

HOOD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

HOOD SWITCH

Component Function Check

INFOID:000000010339908

1.CHECK FUNCTION

1. Select "HOOD SW" in "Data Monitor" mode of "IPDM E/R" using CONSULT.
2. Check "HOOD SW" indication under the following condition.

Monitor item	Condition		Indication
HOOD SW	Hood	Open	ON
		Close	OFF

Is the indication normal?

- YES >> Hood switch is OK.
 NO >> Go to [SEC-185, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000010339909

Regarding Wiring Diagram information, refer to [SEC-137, "Wiring Diagram"](#).

1.CHECK HOOD SWITCH SIGNAL CIRCUITS

1. Turn ignition switch OFF.
2. Disconnect hood switch connector.
3. Check voltage between hood switch harness connector and ground.

(+)		(-)	Voltage (V)
Hood switch			
Connector	Terminal	Ground	Battery voltage
E223	2		

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> GO TO 2.

2.CHECK HOOD SWITCH SIGNAL CIRCUITS

1. Disconnect IPDM E/R connector.
2. Check continuity between IPDM E/R harness connector and hood switch harness connector.

IPDM E/R		Hood switch		Continuity
Connector	Terminal	Connector	Terminal	
E217	52	E223	2	Yes

3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E217	52		No

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-35, "Removal and Installation"](#).
 NO >> Repair or replace harness.

3.CHECK HOOD SWITCH GROUND CIRCUIT

Check continuity between hood switch harness connector and ground.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

HOOD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

Hood switch		Ground	Continuity
Connector	Terminal		
E223	1		Yes

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace harness.

4.CHECK HOOD SWITCH

Refer to [SEC-186. "Component Inspection"](#) .

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace hood switch. Refer to [DLK-370. "HOOD LOCK : Removal and Installation"](#).

5.CHECK INTERMITTENT INCIDENT

Refer to [GI-41. "Intermittent Incident"](#).

>> Inspection End.

Component Inspection

INFOID:000000010339910

1.CHECK HOOD SWITCH

1. Turn ignition switch OFF.
2. Disconnect hood switch connector.
3. Check continuity between hood switch terminals.

Hood switch		Condition	Continuity	
Terminal				
2	1	Hood switch	Press	No
			Release	Yes

Is the inspection result normal?

YES >> Inspection End.

NO >> Replace hood switch. Refer to [DLK-370. "HOOD LOCK : Removal and Installation"](#).

HORN FUNCTION

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

HORN FUNCTION

Component Function Check

INFOID:0000000010339911

1.CHECK FUNCTION 1

1. Perform "VEHICLE SECURITY HORN" in "Active Test" mode of "THEFT ALM" of "BCM" using CONSULT.
2. Check the horn operation.

Test item		Description	
VEHICLE SECURITY HORN	ON	Horn	Sounds (for 0.5 sec)

Is the operation normal?

- YES >> Inspection End.
NO >> Go to [SEC-137. "Wiring Diagram"](#).

Component Inspection

INFOID:0000000010339912

1.CHECK ANTI-THEFT HORN RELAY

1. Turn ignition switch OFF.
2. Disconnect anti-theft horn relay.
3. Check voltage between anti-theft horn relay terminal and ground under the following conditions.

(+)	(-)	Condition	Voltage (V) (Approx.)
Anti-theft horn relay Terminal	Ground	12 V direct current supply between terminals 1 and 3	12
2		No current supply	0

Is the inspection result normal?

- YES >> Inspection End.
NO >> Replace anti-theft horn relay.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

SECURITY INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

SECURITY INDICATOR LAMP

Component Function Check

INFOID:000000010339913

1.CHECK FUNCTION

1. Perform "THEFT IND" in "Active Test" mode of "IMMU" of "BCM" using CONSULT.
2. Check security indicator lamp operation.

Test item		Description	
THEFT IND	ON	Security indicator lamp	Illuminates
	OFF		Does not illuminate

Is the inspection result normal?

- YES >> Inspection End.
NO >> Go to [SEC-188, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000010339914

Regarding Wiring Diagram information, refer to [SEC-137, "Wiring Diagram"](#).

1.CHECK SECURITY INDICATOR LAMP POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect combination meter connector.
3. Check voltage between combination meter harness connector and ground.

(+)		(-)	Voltage (V)
Combination meter			
Connector	Terminal	Ground	Battery voltage
M77	45		

Is the inspection result normal?

- YES >> GO TO 2.
NO-1 >> Check 10 A fuse [No. 13, located in the fuse block (J/B)].
NO-2 >> Check harness for open or short between combination meter and fuse.

2.CHECK SECURITY INDICATOR LAMP SIGNAL

1. Connect combination meter connector.
2. Disconnect BCM connector.
3. Check voltage between BCM harness connector and ground.

(+)		(-)	Voltage (V)
BCM			
Connector	Terminal	Ground	Battery voltage
M18	35		

Is the inspection result normal?

- YES >> GO TO 3.
NO >> GO TO 4.

3.REPLACE BCM

1. Replace BCM. Refer to [BCS-135, "Removal and Installation"](#).
2. Perform initialization of BCM and registration of all Intelligent Keys using CONSULT. Refer to the CONSULT Immobilizer mode and follow the on-screen instructions.

>> Inspection End.

SECURITY INDICATOR LAMP

[WITHOUT INTELLIGENT KEY SYSTEM]

< DTC/CIRCUIT DIAGNOSIS >

4. CHECK SECURITY INDICATOR LAMP CIRCUIT

1. Disconnect combination meter connector.
2. Check continuity between combination meter harness connector and BCM harness connector.

Combination meter		BCM		Continuity
Connector	Terminal	Connector	Terminal	
M76	7	M18	35	Yes

3. Check continuity between combination meter harness connector and ground.

Combination meter		Ground	Continuity
Connector	Terminal		
M76	7		No

Is the inspection result normal?

- YES >> Replace combination meter. Refer to [MWI-82. "Removal and Installation"](#).
NO >> Repair or replace harness.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SYMPTOMS

< SYMPTOM DIAGNOSIS >

[WITHOUT INTELLIGENT KEY SYSTEM]

SYMPTOM DIAGNOSIS

NISSAN VEHICLE IMMOBILIZER SYSTEM-NATS SYMPTOMS

Symptom Table

INFOID:000000010284533

NOTE:

- Before performing the diagnosis in the following table, check "[SEC-150. "Work Flow"](#)".
- Check that vehicle is under the condition shown in "Conditions of vehicle" before starting diagnosis, and check each symptom.
- If the following symptoms are detected, check systems shown in the "Diagnosis/service procedure" column in this order.

CONDITIONS OF VEHICLE (OPERATING CONDITIONS)

- Mechanical key is not inserted into key cylinder.
- Ignition knob switch is not depressed.

Symptom	Diagnosis/service procedure	Reference page
Security indicator does not turn ON or flash.	1. Check vehicle security indicator	SEC-188
	2. Check Intermittent Incident	GI-41

VEHICLE SECURITY SYSTEM

[WITHOUT INTELLIGENT KEY SYSTEM]

< SYMPTOM DIAGNOSIS >

VEHICLE SECURITY SYSTEM

Symptom Table

INFOID:000000010284534

Procedure		Diagnostic procedure	Refer to page	
Symptom				
1	Vehicle security system cannot be set by	Door switch	DLK-319	
		—	GI-41	
	Security indicator does not turn ON.	Check vehicle security indicator	SEC-188	
		Check Intermittent Incident	GI-41	
2	* Vehicle security system does not sound alarm when	Any door is opened.	DLK-319	
		—	GI-41	
3	Vehicle security alarm does not activate.	Horn alarm	Check horn switch	DLK-335
			Check Intermittent Incident	GI-41
		Headlamp flash	Check headlamp switch	DLK-337
			Check Intermittent Incident	GI-41

*: Check the system is in the armed phase.

A
B
C
D
E
F
G
H
I
J
L
M
N
O
P

SEC

REMOVAL AND INSTALLATION

NATS ANTENNA AMP.


Removal and Installation

INFOID:000000010284535

REMOVAL

1. Remove the steering column covers. Refer to [JP-17, "Removal and Installation"](#).
2. Disconnect the harness connector from the NATS antenna amp.
3. Release pawls and remove NATS antenna amp. (1) from the ignition switch (2).

(○): Pawl

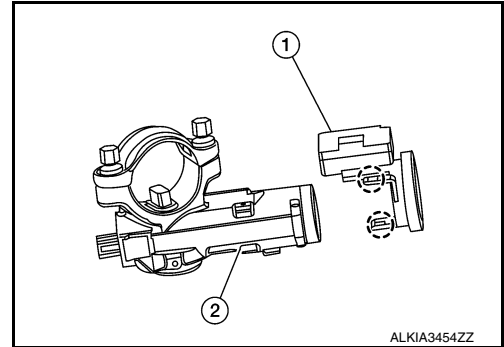

INSTALLATION

Installation is in the reverse order of removal.

NOTE:

- If NATS antenna amp. is not installed correctly, NVIS (NATS) system will not operate properly and "SELF-DIAG RESULTS" on CONSULT screen will show "LOCK MODE" or "CHAIN OF IMMU-KEY".
- Initialization is not necessary when only the NATS antenna amp. is replaced with a new one.