

A  
B  
C

# EXL

## SECTION EXL

### EXTERIOR LIGHTING SYSTEM

D  
E

## CONTENTS

|  |   |
|--|---|
| <p><b>PRECAUTION</b> ..... 4</p> <p><b>PRECAUTIONS</b> ..... 4</p> <p style="padding-left: 20px;">Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....4</p> <p style="padding-left: 20px;">Precaution for Work .....4</p> <p><b>PREPARATION</b> ..... 5</p> <p><b>PREPARATION</b> ..... 5</p> <p style="padding-left: 20px;">Special Service Tool .....5</p> <p><b>SYSTEM DESCRIPTION</b> ..... 6</p> <p><b>COMPONENT PARTS</b> ..... 6</p> <p style="padding-left: 20px;">Component Parts Location .....6</p> <p style="padding-left: 20px;">Component Description .....7</p> <p><b>SYSTEM</b> ..... 8</p> <p><b>HEADLAMP SYSTEM</b> .....8</p> <p style="padding-left: 20px;">HEADLAMP SYSTEM : System Diagram .....8</p> <p style="padding-left: 20px;">HEADLAMP SYSTEM : System Description .....8</p> <p><b>AUTO LIGHT SYSTEM</b> .....8</p> <p style="padding-left: 20px;">AUTO LIGHT SYSTEM : System Diagram .....9</p> <p style="padding-left: 20px;">AUTO LIGHT SYSTEM : System Description .....9</p> <p><b>DAYTIME RUNNING LIGHT SYSTEM</b> .....9</p> <p style="padding-left: 20px;">DAYTIME RUNNING LIGHT SYSTEM : System Diagram .....9</p> <p style="padding-left: 20px;">DAYTIME RUNNING LIGHT SYSTEM : System Description .....9</p> <p><b>FRONT FOG LAMP SYSTEM</b> ..... 10</p> <p style="padding-left: 20px;">FRONT FOG LAMP SYSTEM : System Diagram... 10</p> <p style="padding-left: 20px;">FRONT FOG LAMP SYSTEM : System Description ..... 10</p> <p><b>TURN SIGNAL AND HAZARD WARNING LAMPS...</b> 10</p> <p style="padding-left: 20px;">TURN SIGNAL AND HAZARD WARNING LAMPS : System Diagram ..... 10</p> | <p style="text-align: right;">F</p> <p style="padding-left: 20px;">TURN SIGNAL AND HAZARD WARNING LAMPS : System Description .....11</p> <p style="text-align: right;">G</p> <p><b>PARKING, LICENSE PLATE AND TAIL LAMPS</b> ....11</p> <p style="padding-left: 20px;">PARKING, LICENSE PLATE AND TAIL LAMPS : System Diagram .....11</p> <p style="padding-left: 20px;">PARKING, LICENSE PLATE AND TAIL LAMPS : System Description .....11</p> <p style="text-align: right;">H</p> <p><b>COMBINATION SWITCH READING SYSTEM</b> .....11</p> <p style="padding-left: 20px;">COMBINATION SWITCH READING SYSTEM : System Diagram (With Intelligent Key System) .....11</p> <p style="padding-left: 20px;">COMBINATION SWITCH READING SYSTEM : System Description (With Intelligent Key System)...12</p> <p style="padding-left: 20px;">COMBINATION SWITCH READING SYSTEM : System Diagram (Without Intelligent Key System)...15</p> <p style="padding-left: 20px;">COMBINATION SWITCH READING SYSTEM : System Description (Without Intelligent Key System) .....15</p> <p style="text-align: right;">I</p> <p><b>DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)</b> .....18</p> <p style="text-align: right;">J</p> <p><b>COMMON ITEM</b> .....18</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) .....18</p> <p style="text-align: right;">K</p> <p><b>HEADLAMP</b> .....19</p> <p style="padding-left: 20px;">HEADLAMP : CONSULT Function (BCM - HEAD LAMP) .....19</p> <p style="text-align: right;">L</p> <p><b>FLASHER</b> .....20</p> <p style="padding-left: 20px;">FLASHER : CONSULT Function (BCM - FLASHER) .....20</p> <p style="text-align: right;">M</p> <p><b>DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM)</b> .....21</p> <p style="text-align: right;">N</p> <p><b>COMMON ITEM</b> .....21</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) .....21</p> <p style="text-align: right;">O</p> <p><b>HEADLAMP</b> .....</p> <p style="text-align: right;">P</p> |
|--|---|

EXL

|   |            |  |            |
|---|------------|--|------------|
| HEADLAMP : CONSULT Function (BCM - HEAD LAMP) .....                       | 22         | <b>HEADLAMP (LO) CIRCUIT</b> .....                                   | <b>90</b>  |
| <b>FLASHER</b> .....  | <b>23</b>  | Description .....  | 90         |
| FLASHER : CONSULT Function (BCM - FLASHER) .....                          | 23         | Component Function Check .....                                       | 90         |
| <b>DIAGNOSIS SYSTEM (IPDM E/R) (WITH INTELLIGENT KEY SYSTEM)</b> .....    | <b>24</b>  | Diagnosis Procedure .....  | 90         |
| Diagnosis Description .....   | 24         | <b>DAYTIME RUNNING LIGHT RELAY CIRCUIT</b> .....                     | <b>92</b>  |
| CONSULT Function (IPDM E/R) .....   | 25         | Description .....  | 92         |
| <b>DIAGNOSIS SYSTEM (IPDM E/R) (WITHOUT INTELLIGENT KEY SYSTEM)</b> ..... | <b>28</b>  | Diagnosis Procedure .....  | 92         |
| Diagnosis Description .....   | 28         | Component Inspection .....   | 94         |
| CONSULT Function (IPDM E/R) .....   | 29         | <b>FRONT FOG LAMP CIRCUIT</b> .....                                  | <b>95</b>  |
| <b>ECU DIAGNOSIS INFORMATION</b> .....                                    | <b>32</b>  | Description .....  | 95         |
| <b>BCM, IPDM E/R</b> .....  | <b>32</b>  | Component Function Check .....                                       | 95         |
| List of ECU Reference .....   | 32         | Diagnosis Procedure .....  | 95         |
| <b>WIRING DIAGRAM</b> .....   | <b>33</b>  | <b>PARKING LAMP CIRCUIT</b> .....                                    | <b>97</b>  |
| <b>HEADLAMP</b> .....   | <b>33</b>  | Description .....  | 97         |
| Wiring Diagram .....  | 33         | Component Function Check .....                                       | 97         |
| <b>DAYTIME RUNNING LIGHT SYSTEM</b> .....                                 | <b>38</b>  | Diagnosis Procedure .....  | 97         |
| Wiring Diagram .....  | 38         | <b>TURN SIGNAL LAMP CIRCUIT</b> .....                                | <b>100</b> |
| <b>AUTO LIGHT SYSTEM</b> .....  | <b>46</b>  | Description .....  | 100        |
| Wiring Diagram .....  | 46         | Component Function Check .....                                       | 100        |
| <b>FRONT FOG LAMP</b> .....   | <b>53</b>  | Diagnosis Procedure .....  | 100        |
| Wiring Diagram .....  | 53         | <b>OPTICAL SENSOR</b> .....  | <b>104</b> |
| <b>TURN SIGNAL AND HAZARD WARNING LAMPS</b> .....                         | <b>58</b>  | Description .....  | 104        |
| Wiring Diagram .....  | 58         | Component Function Check .....                                       | 104        |
| <b>PARKING, LICENSE PLATE AND TAIL LAMPS</b> .....                        | <b>68</b>  | Diagnosis Procedure .....  | 104        |
| Wiring Diagram .....  | 68         | <b>HAZARD SWITCH</b> .....   | <b>106</b> |
| <b>STOP LAMP</b> .....  | <b>76</b>  | Component Function Check .....                                       | 106        |
| Wiring Diagram .....  | 76         | Diagnosis Procedure .....  | 106        |
| <b>BACK-UP LAMP</b> .....   | <b>80</b>  | <b>SYMPTOM DIAGNOSIS</b> .....                                       | <b>108</b> |
| Wiring Diagram .....  | 80         | <b>EXTERIOR LIGHTING SYSTEM SYMPTOMS</b> .....                       | <b>108</b> |
| <b>BASIC INSPECTION</b> .....   | <b>85</b>  | Symptom Table .....  | 108        |
| <b>DIAGNOSIS AND REPAIR WORK FLOW</b> .....                               | <b>85</b>  | <b>NORMAL OPERATING CONDITION</b> .....                              | <b>110</b> |
| Work Flow .....   | 85         | Description .....  | 110        |
| <b>DTC/CIRCUIT DIAGNOSIS</b> .....  | <b>88</b>  | <b>BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM</b> .....          | <b>111</b> |
| <b>HEADLAMP (HI) CIRCUIT</b> .....  | <b>88</b>  | Description .....  | 111        |
| Description .....   | 88         | Diagnosis Procedure .....  | 111        |
| Component Function Check .....  | 88         | <b>DAYTIME LIGHT SYSTEM INOPERATIVE</b> .....                        | <b>112</b> |
| Diagnosis Procedure .....   | 88         | Description .....  | 112        |
| <b>HEADLAMP (LO) CIRCUIT</b> .....  | <b>90</b>  | Diagnosis Procedure .....  | 112        |
| Description .....   | 90         | <b>BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON</b> .....              | <b>113</b> |
| Component Function Check .....  | 90         | Description .....  | 113        |
| Diagnosis Procedure .....   | 90         | Diagnosis Procedure .....  | 113        |
| <b>DAYTIME RUNNING LIGHT RELAY CIRCUIT</b> .....                          | <b>92</b>  | <b>PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON</b> ..... | <b>114</b> |
| Description .....   | 92         | Description .....  | 114        |
| Diagnosis Procedure .....   | 92         | Diagnosis Procedure .....  | 114        |
| Component Inspection .....  | 94         |  |            |
| <b>FRONT FOG LAMP CIRCUIT</b> .....                                       | <b>95</b>  |  |            |
| Description .....   | 95         |  |            |
| Component Function Check .....  | 95         |  |            |
| Diagnosis Procedure .....   | 95         |  |            |
| <b>PARKING LAMP CIRCUIT</b> .....   | <b>97</b>  |  |            |
| Description .....   | 97         |  |            |
| Component Function Check .....  | 97         |  |            |
| Diagnosis Procedure .....   | 97         |  |            |
| <b>TURN SIGNAL LAMP CIRCUIT</b> .....                                     | <b>100</b> |  |            |
| Description .....   | 100        |  |            |
| Component Function Check .....  | 100        |  |            |
| Diagnosis Procedure .....   | 100        |  |            |
| <b>OPTICAL SENSOR</b> .....   | <b>104</b> |  |            |
| Description .....   | 104        |  |            |
| Component Function Check .....  | 104        |  |            |
| Diagnosis Procedure .....   | 104        |  |            |
| <b>HAZARD SWITCH</b> .....  | <b>106</b> |  |            |
| Component Function Check .....  | 106        |  |            |
| Diagnosis Procedure .....   | 106        |  |            |
| <b>SYMPTOM DIAGNOSIS</b> .....  | <b>108</b> |  |            |
| <b>EXTERIOR LIGHTING SYSTEM SYMPTOMS</b> .....                            | <b>108</b> |  |            |
| Symptom Table .....   | 108        |  |            |
| <b>NORMAL OPERATING CONDITION</b> .....                                   | <b>110</b> |  |            |
| Description .....   | 110        |  |            |
| <b>BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM</b> .....               | <b>111</b> |  |            |
| Description .....   | 111        |  |            |
| Diagnosis Procedure .....   | 111        |  |            |
| <b>DAYTIME LIGHT SYSTEM INOPERATIVE</b> .....                             | <b>112</b> |  |            |
| Description .....   | 112        |  |            |
| Diagnosis Procedure .....   | 112        |  |            |
| <b>BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON</b> .....                   | <b>113</b> |  |            |
| Description .....   | 113        |  |            |
| Diagnosis Procedure .....   | 113        |  |            |
| <b>PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON</b> .....      | <b>114</b> |  |            |
| Description .....   | 114        |  |            |
| Diagnosis Procedure .....   | 114        |  |            |

|  |            |  |            |   |
|--|------------|--|------------|---|
| <b>BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON</b> ..... | <b>115</b> | <b>REAR COMBINATION LAMP</b> .....                 | <b>127</b> |   |
| Description .....  | 115        | Exploded View .....                                | 127        | A |
| Diagnosis Procedure .....                                | 115        | Removal and Installation .....                     | 127        |   |
| <b>PERIODIC MAINTENANCE</b> .....                        | <b>116</b> | Bulb Replacement .....                             | 128        | B |
| <b>HEADLAMP</b> .....                                    | <b>116</b> | <b>COMBINATION SWITCH</b> .....                    | <b>129</b> |   |
| Aiming Adjustment .....                                  | 116        | Exploded View .....                                | 129        | C |
| <b>FRONT FOG LAMP</b> .....                              | <b>118</b> | Removal and Installation .....                     | 129        |   |
| Aiming Adjustment .....                                  | 118        | <b>HAZARD SWITCH</b> .....                         | <b>130</b> | D |
| <b>REMOVAL AND INSTALLATION</b> .....                    | <b>120</b> | Removal and Installation .....                     | 130        |   |
| <b>FRONT COMBINATION LAMP</b> .....                      | <b>120</b> | <b>OPTICAL SENSOR</b> .....                        | <b>131</b> | E |
| Exploded View .....                                      | 120        | Removal and Installation .....                     | 131        |   |
| Removal and Installation .....                           | 120        | <b>UNIT DISASSEMBLY AND ASSEMBLY</b> .             | <b>132</b> | F |
| Bulb Replacement .....                                   | 121        | <b>FRONT COMBINATION LAMP</b> .....                | <b>132</b> |   |
| <b>FRONT FOG LAMP</b> .....                              | <b>123</b> | Exploded View .....                                | 132        | G |
| Removal and Installation .....                           | 123        | Disassembly and Assembly .....                     | 132        |   |
| <b>DOOR MIRROR TURN SIGNAL LAMP</b> .....                | <b>124</b> | <b>REAR COMBINATION LAMP</b> .....                 | <b>134</b> | H |
| Removal and Installation .....                           | 124        | Exploded View .....                                | 134        |   |
| <b>HIGH-MOUNTED STOP LAMP</b> .....                      | <b>125</b> | Disassembly and Assembly .....                     | 134        | I |
| Removal and Installation .....                           | 125        | <b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> ..... | <b>136</b> |   |
| Bulb Replacement .....                                   | 125        | <b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> ..... | <b>136</b> | J |
| <b>LICENSE PLATE LAMP</b> .....                          | <b>126</b> | Bulb Specifications .....                          | 136        | K |
| Removal and Installation .....                           | 126        |  |            |   |
| Bulb Replacement .....                                   | 126        |  |            |   |

**EXL**

# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011539716

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery and wait at least three minutes before performing any service.

#### Precaution for Work

INFOID:000000011539717

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with a new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components:
  - Water soluble dirt:
    - Dip a soft cloth into lukewarm water, wring the water out of the cloth and wipe the dirty area.
    - Then rub with a soft, dry cloth.
  - Oily dirt:
    - Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%) and wipe the dirty area.
    - Then dip a cloth into fresh water, wring the water out of the cloth and wipe the detergent off.
    - Then rub with a soft, dry cloth.
  - Do not use organic solvent such as thinner, benzene, alcohol or gasoline.
  - For genuine leather seats, use a genuine leather seat cleaner.

# PREPARATION

< PREPARATION >


## PREPARATION

### PREPARATION

#### Special Service Tool

INFOID:0000000011539718

The actual shape of the tools may differ from those illustrated here.
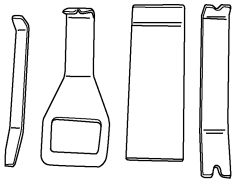
| Tool number<br>(TechMate No.)<br>Tool name  | Description              |
|---|--------------------------|
| <p>—<br/>( J-46534 )<br/>Trim Tool Set</p>  <p>AWJIA0483ZZ</p> | Removing trim components |

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

# COMPONENT PARTS


< SYSTEM DESCRIPTION >

## SYSTEM DESCRIPTION

### COMPONENT PARTS

#### Component Parts Location

INFOID:000000011539719

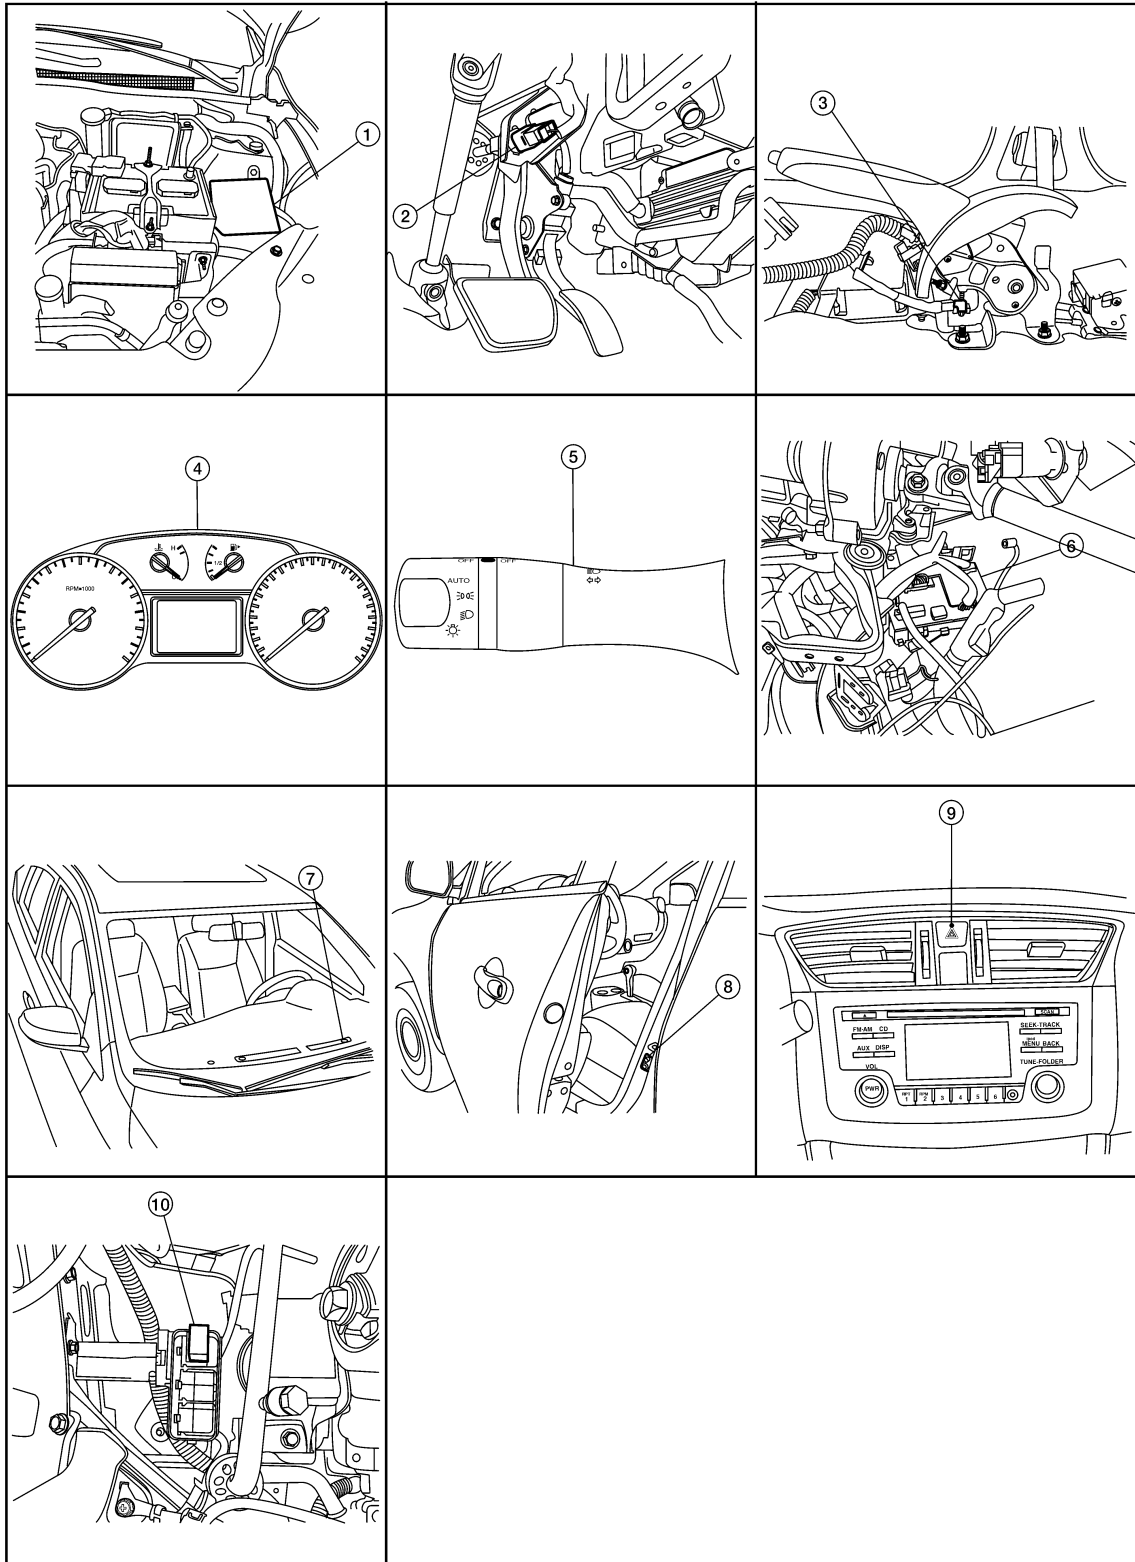

AWLIA20572Z

# COMPONENT PARTS

## < SYSTEM DESCRIPTION >

- |   |   |  |   |
|---|---|--|---|
| 1. IPDM E/R, (Headlamp high relay, Headlamp low relay, Taillamp relay and Front fog lamp relay (if equipped)) | 2. Stop lamp switch                                     | 3. Parking brake switch                      | A |
| 4. Combination meter  | 5. Combination switch (lighting and turn signal switch) | 6. BCM (view with combination meter removed) | B |
| 7. Optical sensor   | 8. Front door switch LH (Other doors similar)           | 9. Hazard switch                             | C |
| 10. Daytime running light relay (if equipped)   |   |  | D |

## Component Description

INFOID:000000011539720

| Part   | Description  |
|--|--|
| BCM  | Controls the exterior lighting system.   |
| Combination switch (Lighting & turn signal switch) | Refer to <a href="#">BCS-9. "COMBINATION SWITCH READING SYSTEM : System Description"</a> (with Intelligent Key system) or <a href="#">BCS-83. "COMBINATION SWITCH READING SYSTEM : System Description"</a> (without Intelligent Key system). |
| IPDM E/R   | Controls the integrated relays and supplies voltage to the load according to the request from the BCM via CAN communication.   |
| Stop lamp switch                                   | Transmits power when the brake pedal is pressed to operate stop lamps.   |
| Combination meter                                  | Refer to <a href="#">MWI-8. "METER SYSTEM : System Description"</a> .  |
| Daytime running light relay (if equipped)          | Sends power to the daytime running lamp when operated by the IPDM E/R.   |
| Front door switch LH/RH                            | Transmits the door open signal to the BCM.   |
| Rear door switch LH/RH                             |  |
| Optical sensor                                     | Optical sensor converts the outside brightness (lux) to voltage and transmits the optical sensor signal to BCM to operate the autolight system.  |
| Parking brake switch                               | Transmits the parking brake switch signal to the combination meter to operate the autolight system.  |
| Hazard switch                                      | Inputs the hazard switch signal to BCM.  |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# SYSTEM


< SYSTEM DESCRIPTION >

## SYSTEM

### HEADLAMP SYSTEM

#### HEADLAMP SYSTEM : System Diagram

INFOID:000000011539721

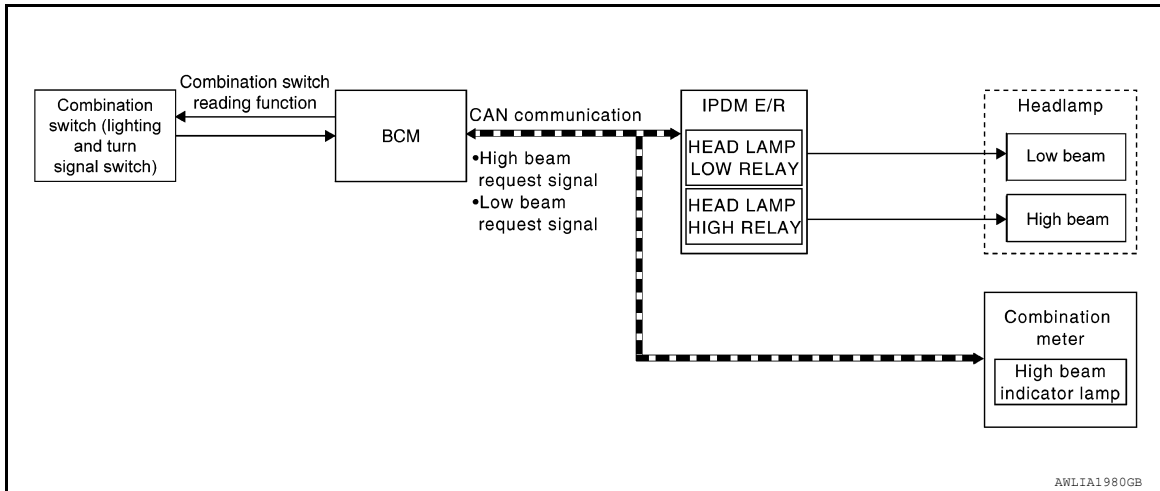

#### HEADLAMP SYSTEM : System Description

INFOID:000000011539722

##### LOW BEAM OPERATION

When the lighting switch is in 2nd position, the BCM receives input requesting the headlamps to illuminate. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the IPDM E/R controls the headlamp low relay coil which supplies power to the low beam headlamps.

##### HIGH BEAM OPERATION/FLASH-TO-PASS OPERATION

With the lighting switch in the 2nd position and placed in HIGH position, the BCM receives input requesting the headlamp high beams to illuminate. The flash to pass feature can be used any time and also sends a signal to the BCM. This input is communicated to the IPDM E/R across the CAN communication lines. The CPU of the combination meter controls the ON/OFF status of the HIGH BEAM indicator. The CPU of the IPDM E/R controls the headlamp high relay coil which supplies power to the high beam headlamps.

The combination meter receives a high beam request signal (ON) through the CAN communication lines and turns the high beam indicator lamp ON.

##### EXTERIOR LAMP BATTERY SAVER CONTROL

With the combination switch (lighting and turn signal switch) in the 2nd position and the ignition switch is turned from ON or ACC to OFF, the battery saver feature is activated.

Under this condition, the headlamps remain illuminated for a period of time, unless the lighting switch position is changed. If the lighting switch position is changed, then the headlamps are turned off.

##### AUTO LIGHT SYSTEM




# SYSTEM

## < SYSTEM DESCRIPTION >

### AUTO LIGHT SYSTEM : System Diagram

INFOID:000000011539723

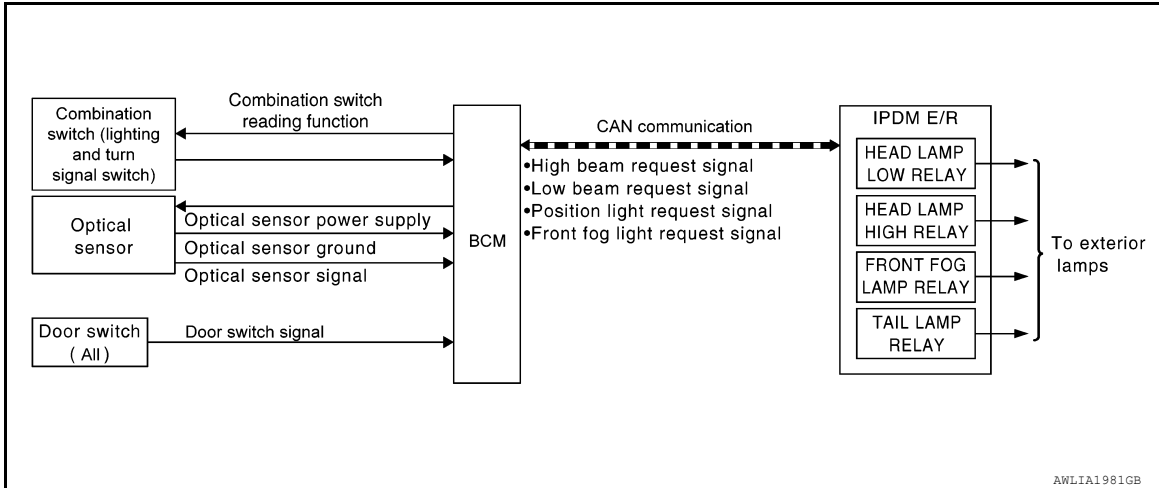

### AUTO LIGHT SYSTEM : System Description

INFOID:000000011539724

- BCM (Body Control Module) controls auto light operation according to signals from optical sensor, lighting switch and ignition switch.
- IPDM E/R (Intelligent Power Distribution Module Engine Room) operates parking, license plate, tail, front fog lamps and headlamps according to CAN communication signals from BCM.
- Optical sensor detects ambient brightness of 800 to 2,500 lux. And optical sensor converts light (lux) to voltage, then sends the optical sensor signal to BCM.

#### OUTLINE


The auto light control system has an optical sensor that detects outside brightness.

When the lighting switch is in AUTO position, it automatically turns ON/OFF the parking, license plate, tail, front fog lamps and headlamps in accordance with the ambient light. Sensitivity can be adjusted. For the details of the setting, Refer to [BCS-19, "HEADLAMP : CONSULT Function \(BCM - HEAD LAMP\)"](#) (with Intelligent Key system) or [BCS-94, "HEADLAMP : CONSULT Function \(BCM - HEAD LAMP\)"](#) (without Intelligent Key system).

### DAYTIME RUNNING LIGHT SYSTEM

#### DAYTIME RUNNING LIGHT SYSTEM : System Diagram

INFOID:000000011539725

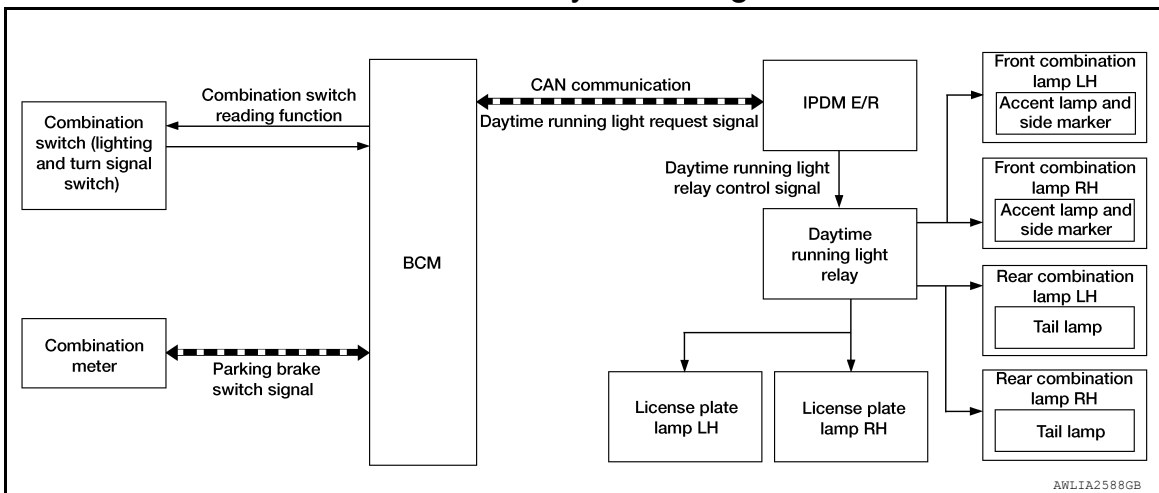

### DAYTIME RUNNING LIGHT SYSTEM : System Description

INFOID:000000011539726

#### System Description

# SYSTEM

## < SYSTEM DESCRIPTION >

The daytime running light system is equipped with a daytime running light control that activates the daytime running lights when the engine is operating. If the parking brake is applied, the daytime running lights will turn OFF. The daytime running lights will turn ON when the parking brake is released.


### OPERATION

The BCM monitors inputs from the parking brake switch and the combination switch (lighting and turn signal switch) to determine when to operate the daytime running light system. The BCM sends a daytime running light request to the IPDM E/R via the CAN communication lines. The IPDM E/R grounds the daytime running light relay which in turn, provides power to the daytime running lights.

## FRONT FOG LAMP SYSTEM

### FRONT FOG LAMP SYSTEM : System Diagram

INFOID:000000011539727

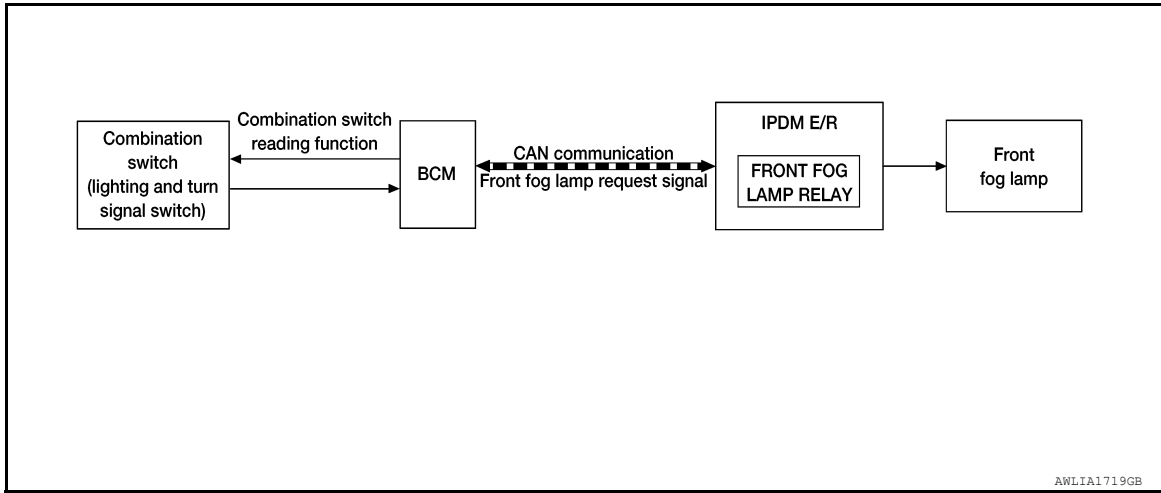

### FRONT FOG LAMP SYSTEM : System Description

INFOID:000000011539728

The front fog lamps are activated with the combination switch (lighting and turn signal switch). The lighting switch signal to the BCM is monitored with the BCM combination switch reading function. When the fog lamps are turned ON with the lighting switch, the BCM sends a front fog lamp request signal via CAN communication lines to the IPDM E/R. The IPDM E/R grounds the front fog lamp relay coil to activate the front fog lamps.


### FRONT FOG LAMP OPERATION

When the lighting switch is in front fog lamp ON position and also in 1st or 2nd position or AUTO position (headlamp is ON), the BCM detects FR FOG ON and the HEAD LAMP 1, 2 ON or the AUTO LIGHT ON. The BCM sends a front fog lamp request ON signal via the CAN communication lines to the IPDM E/R. The IPDM E/R then turns ON the front fog lamp relay sending power to the front fog lamps.

## TURN SIGNAL AND HAZARD WARNING LAMPS

### TURN SIGNAL AND HAZARD WARNING LAMPS : System Diagram

INFOID:000000011539729

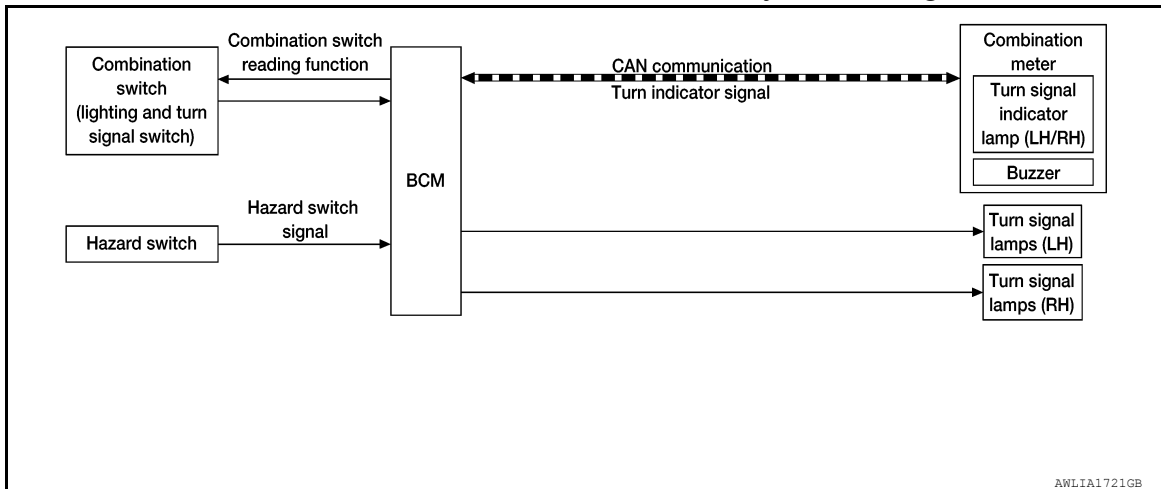

# SYSTEM

< SYSTEM DESCRIPTION >

## TURN SIGNAL AND HAZARD WARNING LAMPS : System Description

INFOID:000000011539730

### TURN SIGNAL OPERATION

When the combination switch (lighting and turn signal switch) is in LH or RH turn position with the ignition switch in the ON position, the BCM receives input requesting the turn RH or turn LH lamps to illuminate. The BCM controls the turn signal power to the respective turn signal lamp. The BCM also sends a turn indicator signal ON request via the CAN communication lines to the combination meter. The combination meter then activates the appropriate turn signal indicator and audible buzzer.


### HAZARD LAMP OPERATION

When the hazard switch is in the ON position, the BCM receives input requesting the hazard lamps illuminate. The BCM controls the turn signal power to both the LH and RH turn signal lamps. The BCM sends a hazard indicator signal ON request via the CAN communication lines to the combination meter. The combination meter then activates both the LH and RH turn signal indicators and audible buzzer.

## PARKING, LICENSE PLATE AND TAIL LAMPS

### PARKING, LICENSE PLATE AND TAIL LAMPS : System Diagram

INFOID:000000011539731

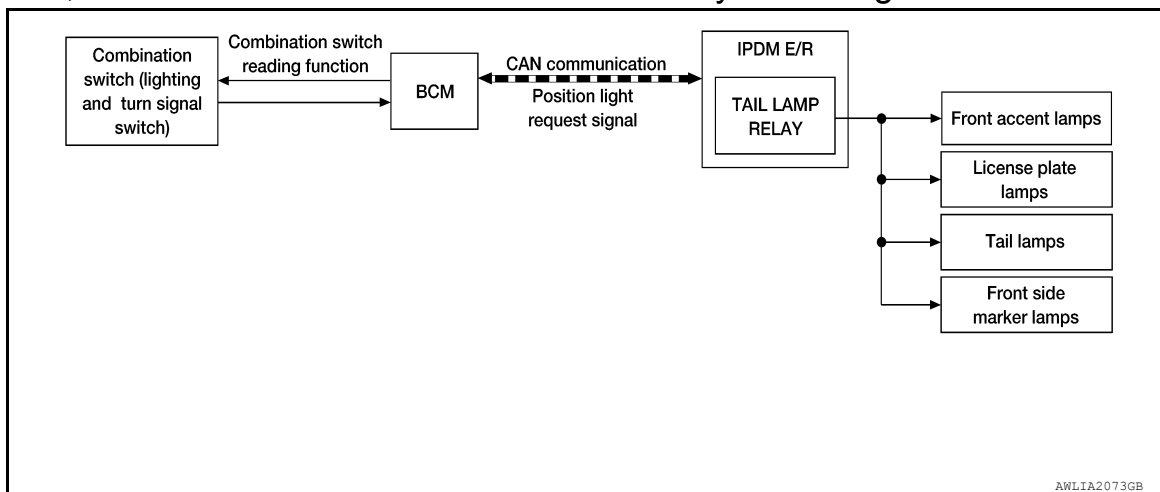

### PARKING, LICENSE PLATE AND TAIL LAMPS : System Description

INFOID:000000011539732

#### PARKING, LICENSE PLATE AND TAIL LAMPS OPERATION

When the lighting switch is in 1st or 2nd position, BCM detects the LIGHTING SWITCH 1st or 2nd POSITION ON. The BCM sends a parking light ON request via the CAN communication lines to the IPDM E/R. The IPDM E/R then activates the tail lamp relay which sends power to the parking and instrument illumination circuits.

#### EXTERIOR LAMP BATTERY SAVER CONTROL

With the combination switch (lighting and turn signal switch) in the 1st or 2nd position and the ignition switch is turned from ON or ACC to OFF, the battery saver feature is activated.

Under this condition, the exterior lamps remain illuminated for a period of time unless the lighting switch position is changed. If the lighting switch position is changed, then the exterior lamps are turned off.

### COMBINATION SWITCH READING SYSTEM

#### COMBINATION SWITCH READING SYSTEM : System Diagram (With Intelligent Key


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# SYSTEM

## < SYSTEM DESCRIPTION >

### System)

INFOID:000000011896222

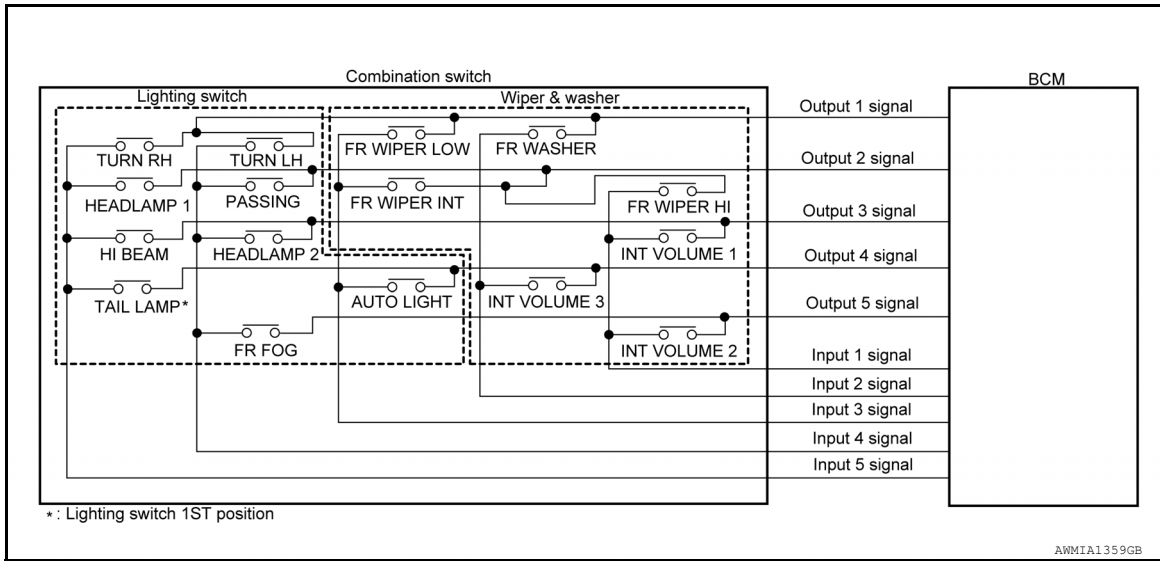

## COMBINATION SWITCH READING SYSTEM : System Description (With Intelligent Key System)


INFOID:000000011896223

### OUTLINE

- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.
- BCM has a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5). It reads a maximum of 20 switch states.

### COMBINATION SWITCH MATRIX

Combination switch circuit

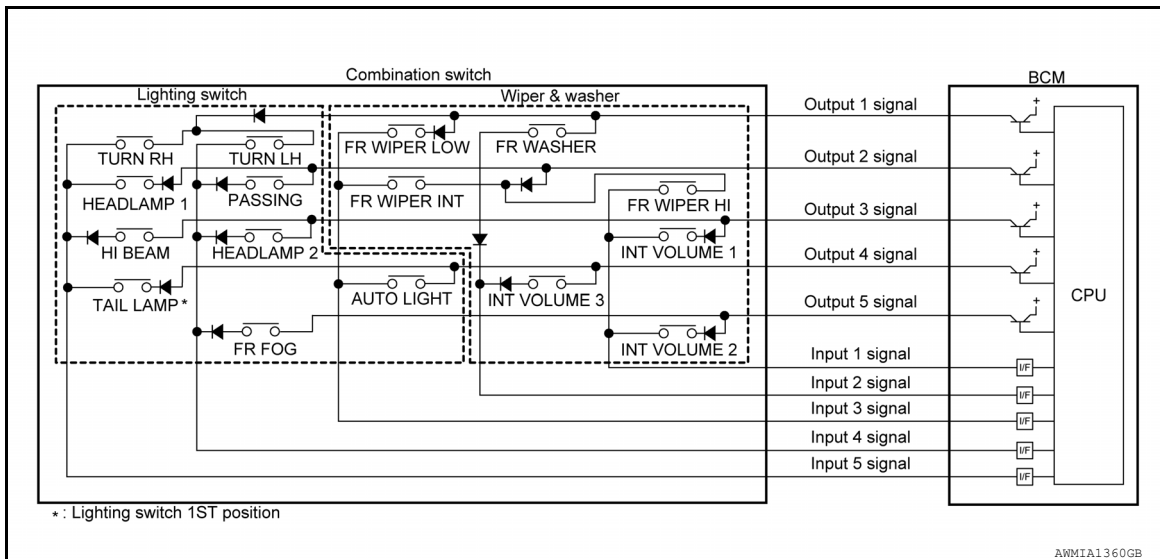

Combination switch INPUT-OUTPUT system list

| System   | INPUT 1      | INPUT 2      | INPUT 3      | INPUT 4    | INPUT 5    |
|----------|--------------|--------------|--------------|------------|------------|
| OUTPUT 1 | —            | FR WASHER    | FR WIPER LOW | TURN LH    | TURN RH    |
| OUTPUT 2 | FR WIPER HI  | —            | FR WIPER INT | PASSING    | HEADLAMP 1 |
| OUTPUT 3 | INT VOLUME 1 | —            | —            | HEADLAMP 2 | HI BEAM    |
| OUTPUT 4 | —            | INT VOLUME 3 | AUTO LIGHT   | —          | TAIL LAMP  |
| OUTPUT 5 | INT VOLUME 2 | —            | —            | FR FOG     | —          |


# SYSTEM

## < SYSTEM DESCRIPTION >

### COMBINATION SWITCH READING FUNCTION


#### Description

- BCM reads the status of the combination switch at 10 ms intervals normally.

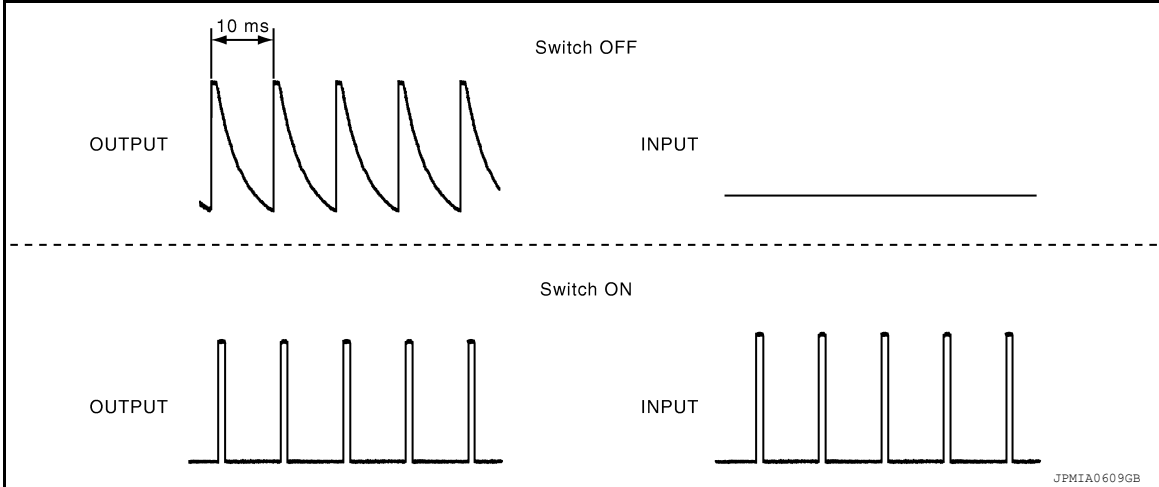

#### NOTE:

- BCM reads the status of the combination switch at 60 ms intervals when BCM is controlled at low power consumption control mode.
- BCM operates as follows and judges the status of the combination switch.
  - It operates the transistor on OUTPUT side in the following order: OUTPUT 1 → 2 → 3 → 4 → 5, and outputs voltage waveform.
  - The voltage waveform of OUTPUT corresponding to the formed circuit is input into the interface on INPUT side if any (1 or more) switches are ON.
  - It reads this change of the voltage as the status signal of the combination switch.

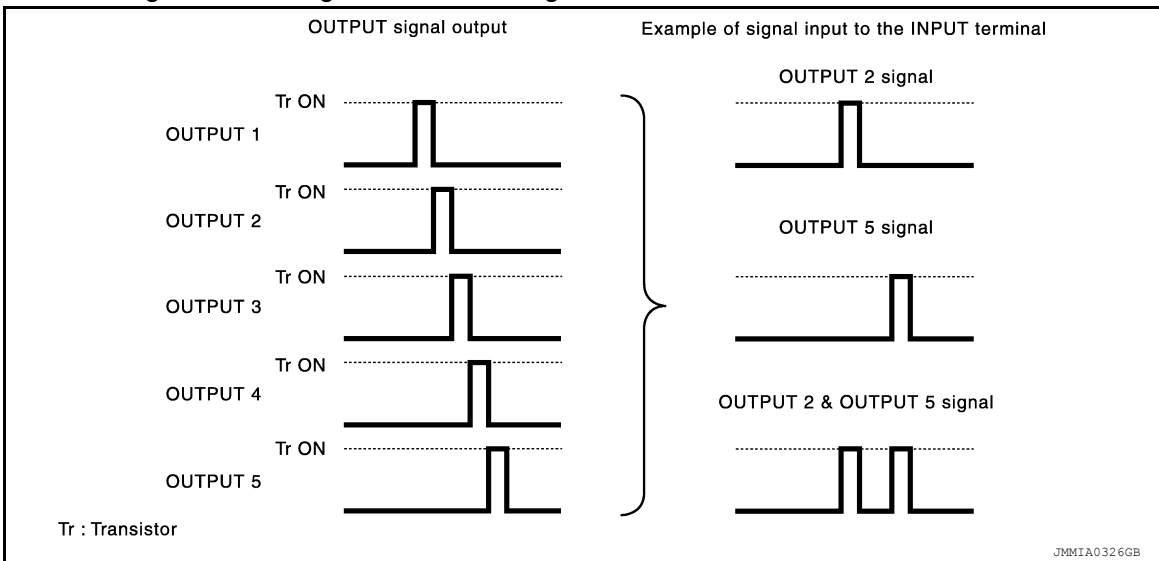

#### Operation Example

In the following operation example, the combination of the status signals of the combination switch is replaced as follows: INPUT 1 - 5 to "1 - 5" and OUTPUT 1 - 5 to "A - E".

Example 1: When a switch (TAIL LAMP) is turned ON


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

EXL

# SYSTEM

## < SYSTEM DESCRIPTION >


- The circuit between OUTPUT 4 and INPUT 5 is formed when the TAIL LAMP switch is turned ON.

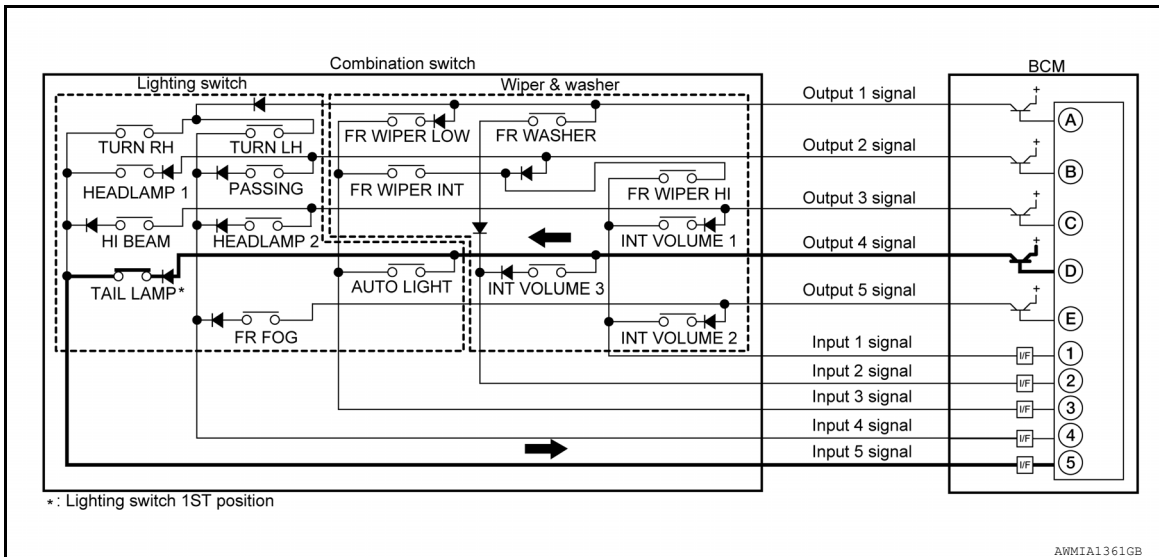

- BCM detects the combination switch status signal "5D" when the signal of OUTPUT 4 is input to INPUT 5.
- BCM judges that the TAIL LAMP switch is ON when the signal "5D" is detected.

Example 2: When some switches (TURN RH, TAIL LAMP) are turned ON

- The circuits between OUTPUT 1 and INPUT 5 and between OUTPUT 4 and INPUT 5 are formed when the TURN RH switch and TAIL LAMP switch are turned ON.

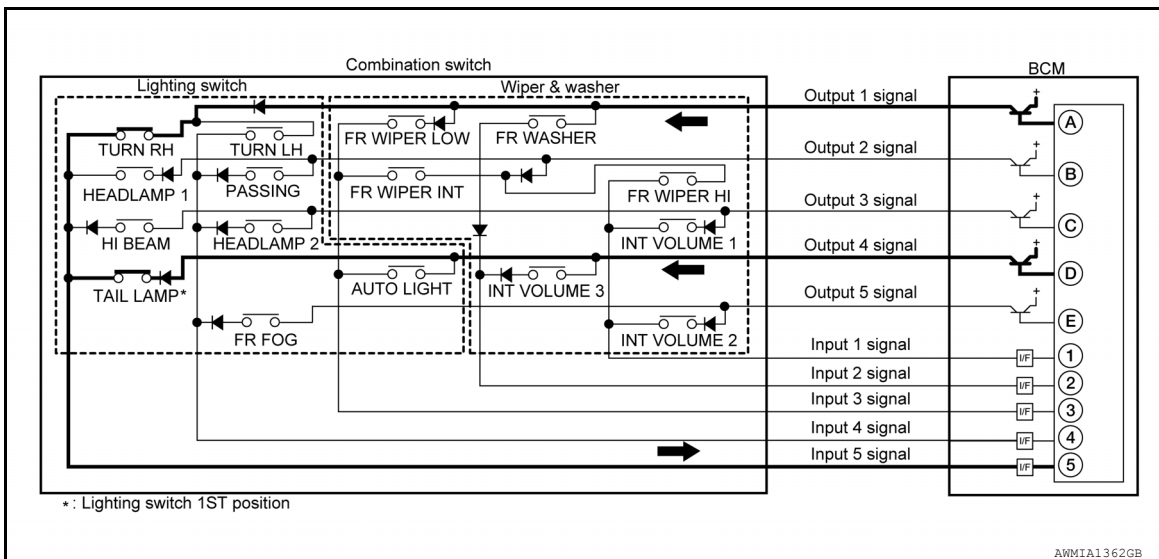

- BCM detects the combination switch status signal "5AD" when the signals of OUTPUT 1 and OUTPUT 4 are input to INPUT 5.
- BCM judges that the TURN RH switch and TAIL LAMP switch are ON when the signal "5AD" is detected.

## WIPER INTERMITTENT DIAL POSITION

BCM judges the wiper intermittent dial 1 - 7 by the status of INT VOLUME 1, 2 and 3 switches.

| Wiper intermittent dial position | Switch status |              |              |
|----------------------------------|---------------|--------------|--------------|
|                                  | INT VOLUME 1  | INT VOLUME 2 | INT VOLUME 3 |
| 1                                | ON            | ON           | ON           |
| 2                                | ON            | ON           | OFF          |
| 3                                | ON            | OFF          | OFF          |
| 4                                | OFF           | OFF          | OFF          |
| 5                                | OFF           | OFF          | ON           |

# SYSTEM

## < SYSTEM DESCRIPTION >


| Wiper intermittent dial position | Switch status |              |              |
|----------------------------------|---------------|--------------|--------------|
|                                  | INT VOLUME 1  | INT VOLUME 2 | INT VOLUME 3 |
| 6                                | OFF           | ON           | ON           |
| 7                                | OFF           | ON           | OFF          |

### NOTE:

For details of wiper intermittent dial position, refer to [WW-8, "System Description"](#).

## COMBINATION SWITCH READING SYSTEM : System Diagram (Without Intelligent Key System)

INFOID:000000011896224

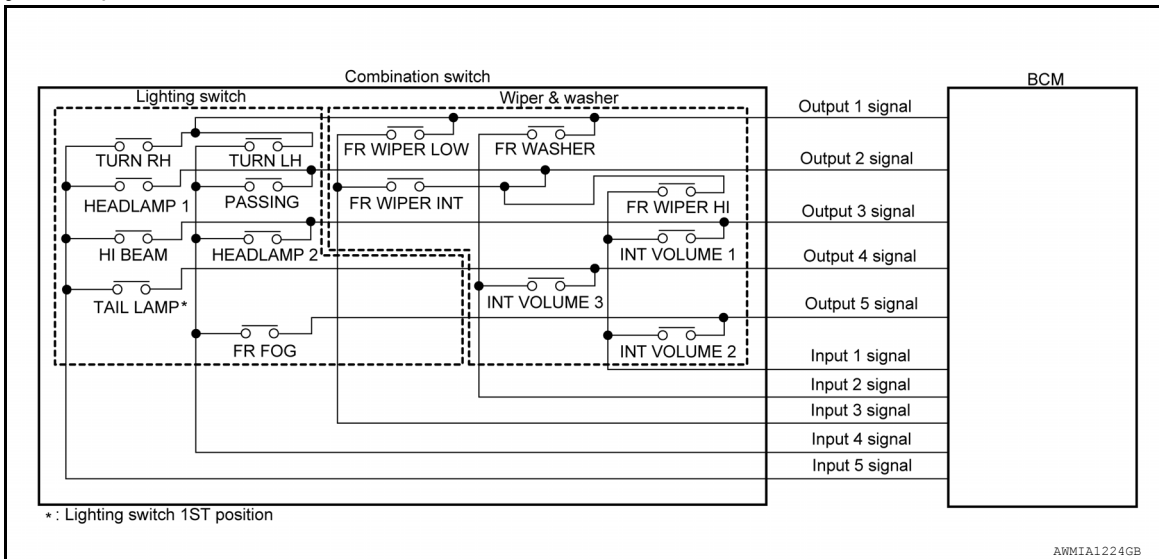

## COMBINATION SWITCH READING SYSTEM : System Description (Without Intelligent Key System)


INFOID:000000011896225

### OUTLINE

- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.
- BCM has a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5). It reads a maximum of 20 switch states.

### COMBINATION SWITCH MATRIX

#### Combination switch circuit

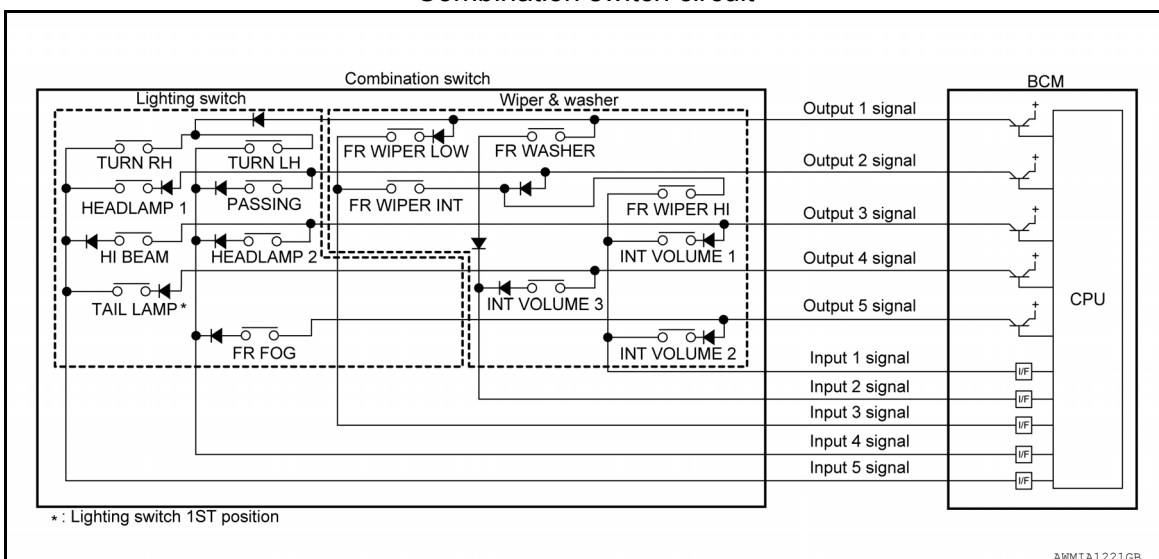

# SYSTEM

## < SYSTEM DESCRIPTION >


Combination switch INPUT-OUTPUT system list

| System   | INPUT 1      | INPUT 2      | INPUT 3      | INPUT 4    | INPUT 5    |
|----------|--------------|--------------|--------------|------------|------------|
| OUTPUT 1 | —            | FR WASHER    | FR WIPER LOW | TURN LH    | TURN RH    |
| OUTPUT 2 | FR WIPER HI  | —            | FR WIPER INT | PASSING    | HEADLAMP 1 |
| OUTPUT 3 | INT VOLUME 1 | —            | —            | HEADLAMP 2 | HI BEAM    |
| OUTPUT 4 | —            | INT VOLUME 3 | —            | —          | TAIL LAMP  |
| OUTPUT 5 | INT VOLUME 2 | —            | —            | FR FOG     | —          |

## COMBINATION SWITCH READING FUNCTION

### Description


- BCM reads the status of the combination switch at 10 ms intervals normally.

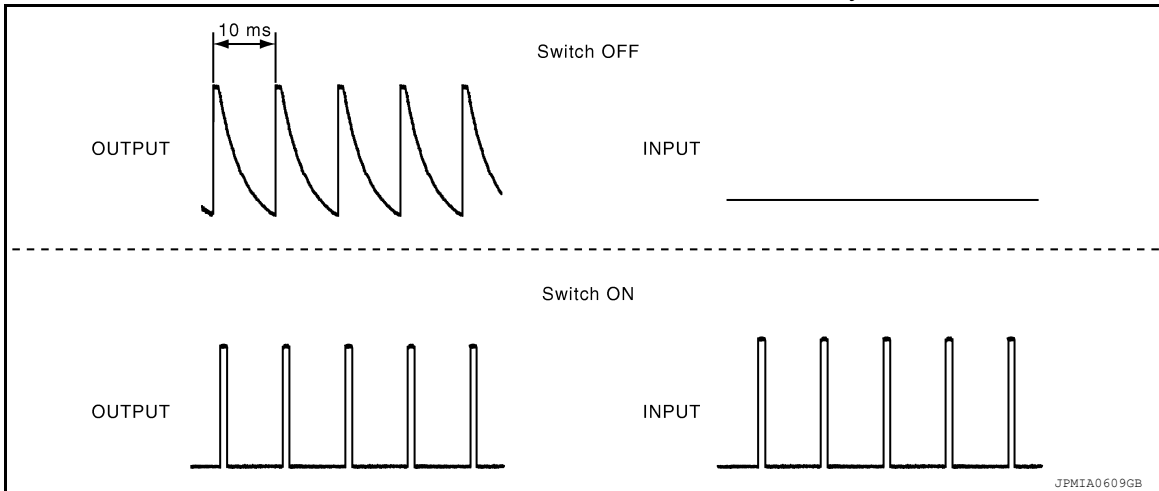

### NOTE:

BCM reads the status of the combination switch at 60 ms intervals when BCM is controlled at low power consumption control mode.

- BCM operates as follows and judges the status of the combination switch.
- It operates the transistor on OUTPUT side in the following order: OUTPUT 1 → 2 → 3 → 4 → 5, and outputs voltage waveform.
- The voltage waveform of OUTPUT corresponding to the formed circuit is input into the interface on INPUT side if any (1 or more) switches are ON.
- It reads this change of the voltage as the status signal of the combination switch.

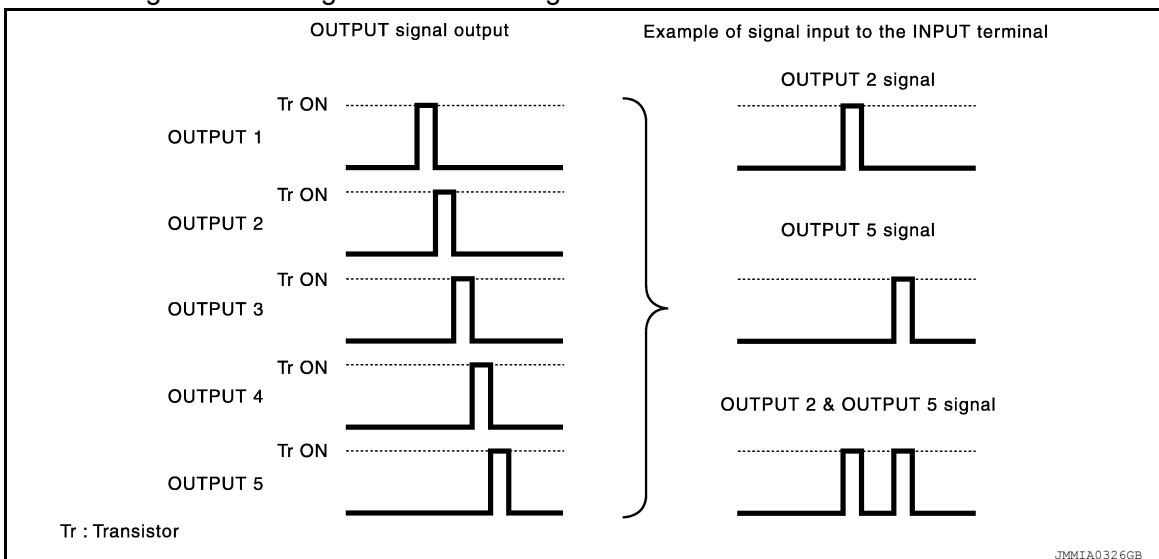

### Operation Example

In the following operation example, the combination of the status signals of the combination switch is replaced as follows: INPUT 1 - 5 to "1 - 5" and OUTPUT 1 - 5 to "A - E".




# SYSTEM

## < SYSTEM DESCRIPTION >

Example 1: When a switch (TAIL LAMP) is turned ON


- The circuit between OUTPUT 4 and INPUT 5 is formed when the TAIL LAMP switch is turned ON.

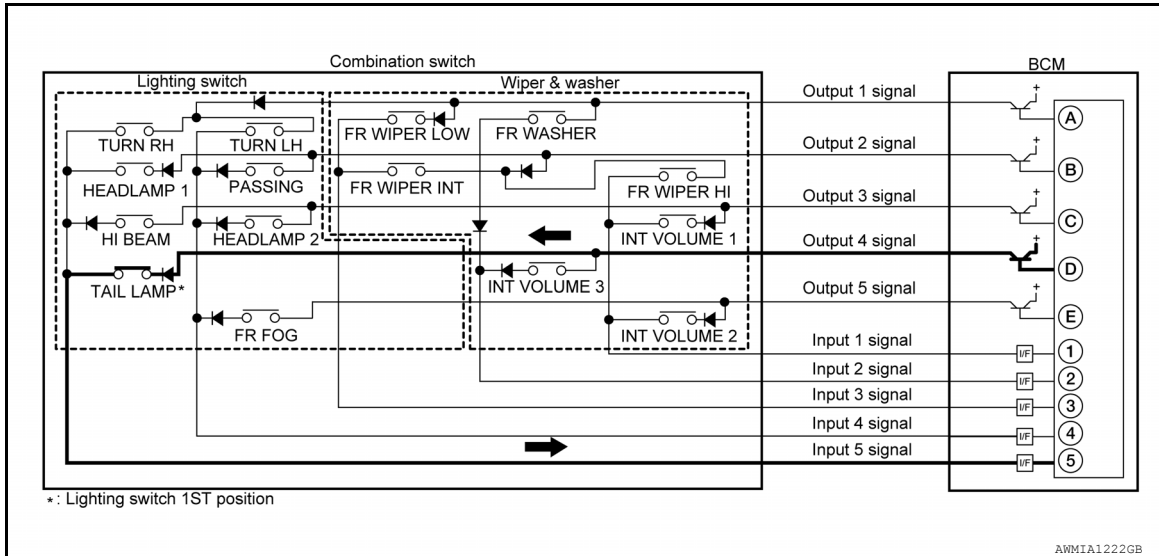

- BCM detects the combination switch status signal "5D" when the signal of OUTPUT 4 is input to INPUT 5.
- BCM judges that the TAIL LAMP switch is ON when the signal "5D" is detected.

Example 2: When some switches (TURN RH, TAIL LAMP) are turned ON

- The circuits between OUTPUT 1 and INPUT 5 and between OUTPUT 4 and INPUT 5 are formed when the TURN RH switch and TAIL LAMP switch are turned ON.

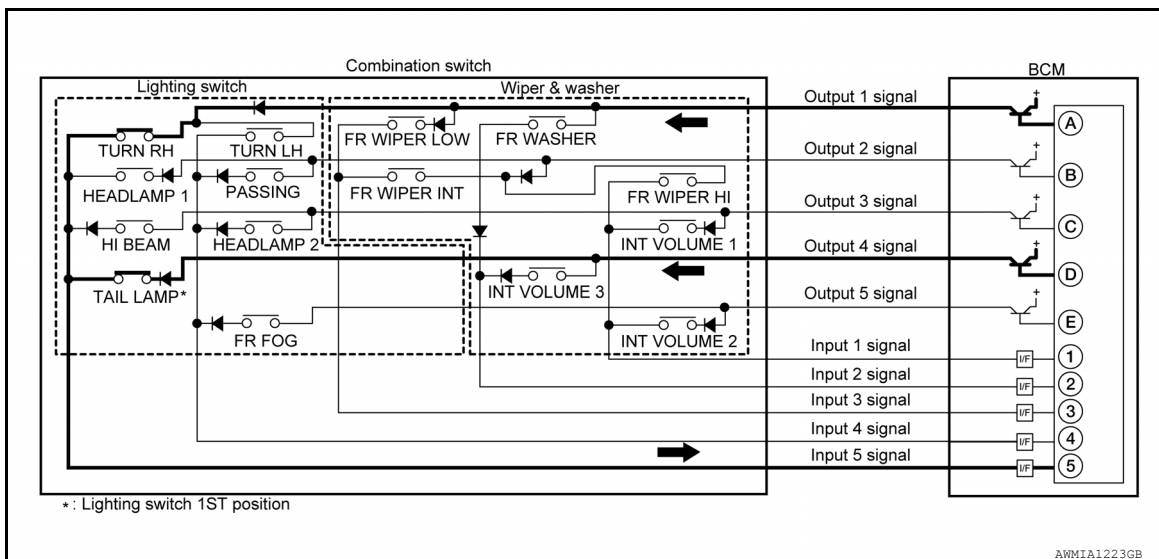

- BCM detects the combination switch status signal "5AD" when the signals of OUTPUT 1 and OUTPUT 4 are input to INPUT 5.
- BCM judges that the TURN RH switch and TAIL LAMP switch are ON when the signal "5AD" is detected.

# DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM) COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000011894986

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

| Direct Diagnostic Mode | Description  |
|------------------------|--|
| ECU Identification     | The BCM part number is displayed.  |
| Self Diagnostic Result | The BCM self diagnostic results are displayed.   |
| Data Monitor           | The BCM input/output data is displayed in real time.   |
| Active Test            | The BCM activates outputs to test components.  |
| Work support           | The settings for BCM functions can be changed.   |
| Configuration          | <ul style="list-style-type: none"> <li>The vehicle specification can be read and saved.</li> <li>The vehicle specification can be written when replacing BCM.</li> </ul> |
| CAN DIAG SUPPORT MNTR  | The result of transmit/receive diagnosis of CAN communication is displayed.  |

### SYSTEM APPLICATION

BCM can perform the following functions.

| System                               | Sub System           | Direct Diagnostic Mode |                        |              |             |              |               |                       |
|--------------------------------------|----------------------|------------------------|------------------------|--------------|-------------|--------------|---------------|-----------------------|
|                                      |                      | ECU Identification     | Self Diagnostic Result | Data Monitor | Active Test | Work support | Configuration | CAN DIAG SUPPORT MNTR |
| Door lock                            | DOOR LOCK            |                        |                        | x            | x           | x            |               |                       |
| Rear window defogger                 | REAR DEFOGGER        |                        |                        | x            | x           |              |               |                       |
| Warning chime                        | BUZZER               |                        |                        | x            | x           |              |               |                       |
| Interior room lamp timer             | INT LAMP             |                        |                        | x            | x           | x            |               |                       |
| Exterior lamp                        | HEAD LAMP            |                        |                        | x            | x           | x            |               |                       |
| Wiper and washer                     | WIPER                |                        |                        | x            | x           | x            |               |                       |
| Turn signal and hazard warning lamps | FLASHER              |                        |                        | x            | x           | x            |               |                       |
| Air conditioner                      | AIR CONDITIONER      |                        |                        | x            |             |              |               |                       |
| Intelligent Key system               | INTELLIGENT KEY      |                        | x                      | x            | x           | x            |               |                       |
| Combination switch                   | COMB SW              |                        |                        | x            |             |              |               |                       |
| BCM                                  | BCM                  | x                      | x                      |              |             | x            | x             | x                     |
| Immobilizer                          | IMMU                 |                        | x                      | x            | x           | x            |               |                       |
| Interior room lamp battery saver     | BATTERY SAVER        |                        |                        | x            | x           | x            |               |                       |
| Trunk open                           | TRUNK                |                        |                        | x            |             |              |               |                       |
| Vehicle security system              | THEFT ALM            |                        |                        | x            | x           | x            |               |                       |
| RAP system                           | RETAINED PWR         |                        |                        | x            |             |              |               |                       |
| Signal buffer system                 | SIGNAL BUFFER        |                        |                        | x            |             |              |               |                       |
| TPMS                                 | AIR PRESSURE MONITOR |                        | x                      | x            | x           | x            |               |                       |

# DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

## HEADLAMP

### HEADLAMP : CONSULT Function (BCM - HEAD LAMP)

INFOID:000000011894985

#### DATA MONITOR

| Monitor Item [Unit]                 | Description  |
|-------------------------------------|--|
| PUSH SW [On/Off]                    | Indicates condition of push-button ignition switch.                              |
| ENGINE STATE [Stop/Stall/Crank/Run] | Indicates engine status received from ECM on CAN communication line.             |
| VEH SPEED 1 [km/h]                  | Indicates vehicle speed signal received from ABS on CAN communication line.      |
| TURN SIGNAL R [On/Off]              | Indicates condition of combination switch.                                       |
| TURN SIGNAL L [On/Off]              |  |
| TAIL LAMP SW [On/Off]               |  |
| HI BEAM SW [On/Off]                 |  |
| HEAD LAMP SW 1 [On/Off]             |  |
| HEAD LAMP SW 2 [On/Off]             |  |
| PASSING SW [On/Off]                 |  |
| AUTO LIGHT SW [On/Off]              |  |
| FR FOG SW [On/Off]                  |  |
| DOOR SW-DR [On/Off]                 |  |
| DOOR SW-AS [On/Off]                 | Indicates condition of front door switch RH.                                     |
| DOOR SW-RR [On/Off]                 | Indicates condition of rear door switch RH.                                      |
| DOOR SW-RL [On/Off]                 | Indicates condition of rear door switch LH.                                      |
| DOOR SW-BK [On/Off]                 | Indicates condition of trunk switch.   |
| OPTI SEN (DTCT) [V]                 | Indicates outside brightness voltage signal from optical sensor.                 |
| OPTI SEN (FILT) [V]                 | Indicates outside brightness voltage signal from optical sensor filtered by BCM. |

#### ACTIVE TEST

| Test Item      | Description   |
|----------------|---|
| FR FOG LAMP    | This test is able to check front fog lamp operation [On/Off].                 |
| HEAD LAMP      | This test is able to check head lamp operation [Hi/Low/Off].                  |
| ILL DIM SIGNAL | This test is able to check head lamp illumination dimming operation [On/Off]. |
| TAIL LAMP      | This test is able to check tail lamp operation [On/Off].                      |

#### WORK SUPPORT

| Support Item         | Setting | Description  |
|----------------------|---------|--|
| AUTO LIGHT LOGIC SET | MODE 1* | With twilight ON custom & with wiper INT, LO and HI    |
|                      | MODE 2  | With twilight ON custom & with wiper LO and HI         |
|                      | MODE 3  | With twilight ON custom & without                      |
|                      | MODE 4  | Without twilight ON custom & with wiper INT, LO and HI |
|                      | MODE 5  | Without twilight ON custom & with wiper LO and HI      |
|                      | MODE 6  | Without twilight ON custom & without                   |
| BATTERY SAVER SET    | On*     | Exterior lamp battery saver function ON.               |
|                      | Off     | Exterior lamp battery saver function OFF.              |

# DIAGNOSIS SYSTEM (BCM) (WITH INTELLIGENT KEY SYSTEM)

## < SYSTEM DESCRIPTION >

| Support Item           | Setting | Description   |
|------------------------|---------|---|
| CUSTOM A/LIGHT SETTING | MODE 1* | Normal  |
|                        | MODE 2  | More sensitive setting than normal setting (Turns ON earlier than normal operation) |
|                        | MODE 3  | More sensitive setting than MODE 2 (Turns ON earlier than MODE 2)                   |
|                        | MODE 4  | Less sensitive setting than normal setting (Turns ON later than normal operation)   |
| ILL DELAY SET          | MODE 8  | 180 sec.  |
|                        | MODE 7  | 150 sec.  |
|                        | MODE 6  | 120 sec.  |
|                        | MODE 4  | 60 sec.   |
|                        | MODE 5  | 90 sec.   |
|                        | MODE 3  | 30 sec.   |
|                        | MODE 2  | OFF   |
|                        | MODE 1* | 45 sec.   |
|                        |         | Sets delay timer function operation time (All doors closed).                        |

\*: Initial setting

## FLASHER

### FLASHER : CONSULT Function (BCM - FLASHER)

INFOID:000000011894984

## DATA MONITOR

| Monitor Item [Unit]    | Description  |
|------------------------|--|
| REQ SW -DR [On/Off]    | Indicates condition of door request switch LH.                     |
| REQ SW -AS [On/Off]    | Indicates condition of door request switch RH.                     |
| PUSH SW [On/Off]       | Indicates condition of push-button ignition switch.                |
| TURN SIGNAL R [On/Off] | Indicates condition of turn signal function of combination switch. |
| TURN SIGNAL L [On/Off] |  |
| HAZARD SW [On/Off]     | Indicates condition of hazard switch.                              |
| RKE-LOCK [On/Off]      | Indicates condition of lock signal from Intelligent Key.           |
| RKE-UNLOCK [On/Off]    | Indicates condition of unlock signal from Intelligent Key.         |
| RKE-PANIC [On/Off]     | Indicates condition of panic alarm signal from Intelligent Key.    |

## ACTIVE TEST

| Test Item | Description  |
|-----------|--|
| FLASHER   | This test is able to check turn signal lamp operation [Off/LH/RH]. |

## WORK SUPPORT

| Support Item       | Setting      | Description   |
|--------------------|--------------|---|
| HAZARD ANSWER BACK | Lock/Unlock* | Hazard warning lamp activation when doors are locked or unlocked with Intelligent Key.    |
|                    | Unlock Only  | Hazard warning lamp activation when doors are unlocked with Intelligent Key.              |
|                    | Lock Only    | Hazard warning lamp activation when doors are locked with Intelligent Key.                |
|                    | Off          | No hazard warning lamp activation when doors are locked or unlocked with Intelligent Key. |

\* : Initial setting

# DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM) COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:0000000011894987

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

| Direct Diagnostic Mode | Description  |
|------------------------|--|
| ECU Identification     | The BCM part number is displayed.  |
| Self Diagnostic Result | The BCM self diagnostic results are displayed.   |
| Data Monitor           | The BCM input/output data is displayed in real time.   |
| Active Test            | The BCM activates outputs to test components.  |
| Work support           | The settings for BCM functions can be changed.   |
| Configuration          | <ul style="list-style-type: none"> <li>The vehicle specification can be read and saved.</li> <li>The vehicle specification can be written when replacing BCM.</li> </ul> |
| CAN DIAG SUPPORT MNTR  | The result of transmit/receive diagnosis of CAN communication is displayed.  |

### SYSTEM APPLICATION

BCM can perform the following functions.

| System                               | Sub System           | Direct Diagnostic Mode |                        |              |             |              |               |                       |
|--------------------------------------|----------------------|------------------------|------------------------|--------------|-------------|--------------|---------------|-----------------------|
|                                      |                      | ECU Identification     | Self Diagnostic Result | Data Monitor | Active Test | Work support | Configuration | CAN DIAG SUPPORT MNTR |
| Door lock                            | DOOR LOCK            |                        |                        | x            | x           | x            |               |                       |
| Rear window defogger                 | REAR DEFOGGER        |                        |                        | x            | x           |              |               |                       |
| Warning chime                        | BUZZER               |                        |                        | x            | x           |              |               |                       |
| Interior room lamp timer             | INT LAMP             |                        |                        | x            | x           | x            |               |                       |
| Remote keyless entry system          | MULTI REMOTE ENT     |                        |                        | x            | x           | x            |               |                       |
| Exterior lamp                        | HEAD LAMP            |                        |                        | x            | x           | x            |               |                       |
| Wiper and washer                     | WIPER                |                        |                        | x            | x           | x            |               |                       |
| Turn signal and hazard warning lamps | FLASHER              |                        |                        | x            | x           |              |               |                       |
| Air conditioner                      | AIR CONDITIONER      |                        |                        | x            |             |              |               |                       |
| Combination switch                   | COMB SW              |                        |                        | x            |             |              |               |                       |
| BCM                                  | BCM                  | x                      | x                      |              |             | x            | x             | x                     |
| Immobilizer                          | IMMU                 |                        | x                      |              | x           | x            |               |                       |
| Interior room lamp battery saver     | BATTERY SAVER        |                        |                        | x            | x           | x            |               |                       |
| Trunk open                           | TRUNK                |                        |                        | x            |             |              |               |                       |
| RAP system                           | RETAINED PWR         |                        |                        | x            |             | x            |               |                       |
| Signal buffer system                 | SIGNAL BUFFER        |                        |                        | x            |             |              |               |                       |
| TPMS                                 | AIR PRESSURE MONITOR |                        | x                      | x            | x           | x            |               |                       |
| Panic alarm system                   | PANIC ALARM          |                        |                        |              | x           |              |               |                       |

# DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

## HEADLAMP

### HEADLAMP : CONSULT Function (BCM - HEAD LAMP)

INFOID:0000000011894988

#### DATA MONITOR

| Monitor Item [Unit]      | Description   |
|--------------------------|---|
| IGN ON SW [On/Off]       | Indicates condition of ignition switch ON position.   |
| ACC ON SW [On/Off]       | Indicates condition of ignition switch ACC position.  |
| HI BEAM SW [On/Off]      | Indicates condition of combination switch.  |
| HEAD LAMP SW 1 [On/Off]  |   |
| HEAD LAMP SW 2 [On/Off]  |   |
| TAIL LAMP SW [On/Off]    |   |
| PASSING SW [On/Off]      |   |
| FR FOG SW [On/Off]       |   |
| DOOR SW-DR [On/Off]      |   |
| DOOR SW-AS [On/Off]      | Indicates condition of front door switch RH.  |
| DOOR SW-RR [On/Off]      | Indicates condition of rear door switch RH.   |
| DOOR SW-RL [On/Off]      | Indicates condition of rear door switch LH.   |
| TURN SIGNAL R [On/Off]   | Indicates condition of combination switch.  |
| TURN SIGNAL L [On/Off]   |   |
| KEY ON SW [On/Off]       | Indicates condition of key switch.  |
| KEYLESS LOCK [On/Off]    | Indicates condition of lock signal from keyfob.   |
| PKB SW [On/Off]          | Indicates park brake switch signal received from combination meter on CAN communication line. |
| ENGINE RUN [On/Off]      | Indicates engine run signal received from ECM on CAN communication line.                      |
| VEHICLE SPEED [km/h/mph] | Indicates vehicle speed signal received from combination meter on CAN communication line.     |

#### ACTIVE TEST

| Test Item      | Description   |
|----------------|---|
| TAIL LAMP      | This test is able to check tail lamp operation [On/Off].                      |
| HEAD LAMP      | This test is able to check head lamp operation [Hi/Low/Off].                  |
| FR FOG LAMP    | This test is able to check front fog lamp operation [On/Off].                 |
| ILL DIM SIGNAL | This test is able to check head lamp illumination dimming operation [On/Off]. |

#### WORK SUPPORT

| Support Item      | Setting | Description                               |
|-------------------|---------|---|
| BATTERY SAVER SET | On*     | Exterior lamp battery saver function ON.  |
|                   | Off     | Exterior lamp battery saver function OFF. |

# DIAGNOSIS SYSTEM (BCM) (WITHOUT INTELLIGENT KEY SYSTEM)

## < SYSTEM DESCRIPTION >

| Support Item  | Setting |          | Description   |
|---------------|---------|----------|---|
| ILL DELAY SET | MODE 8  | 180 sec. | Sets delay timer function operation time<br>(All doors closed). |
|               | MODE 7  | 150 sec. |   |
|               | MODE 6  | 120 sec. |   |
|               | MODE 4  | 60 sec.  |   |
|               | MODE 5  | 90 sec.  |   |
|               | MODE 3  | 30 sec.  |   |
|               | MODE 2  | OFF      |   |
|               | MODE 1* | 45 sec.  |   |

\* : Initial setting

## FLASHER

### FLASHER : CONSULT Function (BCM - FLASHER)

INFOID:000000011894989

## DATA MONITOR

| Monitor Item [Unit]    | Description  |
|------------------------|--|
| HAZARD SW [On/Off]     | Indicates condition of hazard switch.                              |
| TURN SIGNAL R [On/Off] | Indicates condition of turn signal function of combination switch. |
| TURN SIGNAL L [On/Off] |  |

## ACTIVE TEST

| Test Item | Description  |
|-----------|--|
| FLASHER   | This test is able to check turn signal lamp operation [Off/LH/RH]. |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

EXL

# DIAGNOSIS SYSTEM (IPDM E/R) (WITH INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (IPDM E/R) (WITH INTELLIGENT KEY SYSTEM)

### Diagnosis Description

INFOID:000000011894990

#### AUTO ACTIVE TEST

##### Description

In auto active test, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Front wiper (LO, HI)
- Parking lamp
- License plate lamp
- Tail lamp
- Front fog lamp (if equipped)
- Headlamp (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan

##### Operation Procedure

###### NOTE:

Never perform auto active test in the following conditions.

- Passenger door is open
- CONSULT is connected

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)

###### NOTE:

When auto active test is performed with hood opened, sprinkle water on windshield beforehand.

2. Turn the ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the driver door switch 10 times. Then turn the ignition switch OFF.
4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. After a series of the following operations is repeated 3 times, auto active test is completed.

###### NOTE:

- When auto active test has to be cancelled halfway through test, turn the ignition switch OFF.
- When auto active test is not activated, door switch may be the cause. Check door switch. Refer to [DLK-110, "Component Inspection"](#).

##### Inspection in Auto Active Test

When auto active test is actuated, the following operation sequence is repeated 3 times.


| Operation sequence | Inspection location  | Operation   |
|--------------------|--|---|
| 1                  | Front wiper  | LO for 5 seconds → HI for 5 seconds                     |
| 2                  | <ul style="list-style-type: none"><li>• Parking lamp</li><li>• License plate lamp</li><li>• Tail lamp</li><li>• Front fog lamp (if equipped)</li></ul> | 10 seconds  |
| 3                  | Headlamp   | LO for 10 seconds → HI ON ⇔ OFF 5 times                 |
| 4                  | A/C compressor (magnet clutch)   | ON ⇔ OFF 5 times  |
| 5                  | Cooling fan  | LO for 5 seconds → MID for 3 seconds → HI for 2 seconds |



# DIAGNOSIS SYSTEM (IPDM E/R) (WITH INTELLIGENT KEY SYSTEM)

## < SYSTEM DESCRIPTION >

### Concept of Auto Active Test

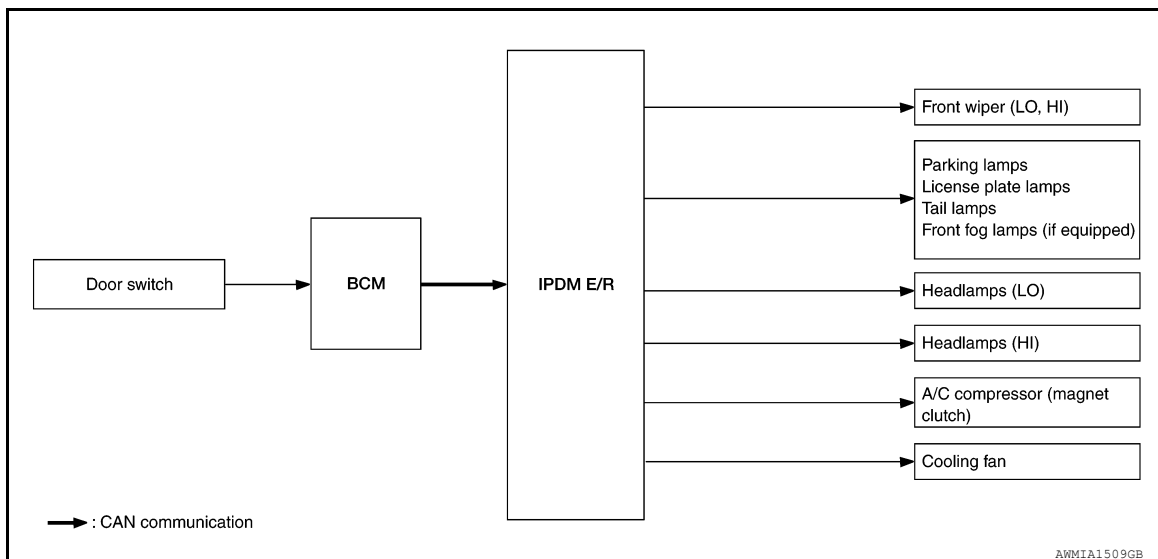

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

### Diagnosis Chart in Auto Active Test

| Symptom   | Inspection contents  | Possible cause  |
|---|--|---|
| Any of the following components do not operate <ul style="list-style-type: none"> <li>• Parking lamp</li> <li>• License plate lamp</li> <li>• Tail lamp</li> <li>• Front fog lamp (if equipped)</li> <li>• Headlamp (HI, LO)</li> <li>• Front wiper (HI, LO)</li> </ul> | Perform auto active test.<br>Does the applicable system operate? | YES<br>BCM signal input circuit   |
|   |  | NO <ul style="list-style-type: none"> <li>• Lamp or motor</li> <li>• Lamp or motor ground circuit</li> <li>• Harness or connector between IPDM E/R and applicable system</li> <li>• IPDM E/R</li> </ul> |
| A/C compressor does not operate   | Perform auto active test.<br>Does the magnet clutch operate?     | YES <ul style="list-style-type: none"> <li>• BCM signal input circuit</li> <li>• CAN communication signal between BCM and ECM</li> <li>• CAN communication signal between ECM and IPDM E/R</li> </ul>   |
|   |  | NO <ul style="list-style-type: none"> <li>• Magnet clutch</li> <li>• Harness or connector between IPDM E/R and magnet clutch</li> <li>• IPDM E/R</li> </ul>   |
| Cooling fan does not operate  | Perform auto active test.<br>Does the cooling fan operate?       | YES <ul style="list-style-type: none"> <li>• ECM signal input circuit</li> <li>• CAN communication signal between ECM and IPDM E/R</li> </ul>   |
|   |  | NO <ul style="list-style-type: none"> <li>• Cooling fan motor</li> <li>• Harness or connector between IPDM E/R and cooling fan motor</li> <li>• IPDM E/R</li> </ul>                                     |

## CONSULT Function (IPDM E/R)

INFOID:000000011894991

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

| Direct Diagnostic Mode | Description   |
|------------------------|---|
| Ecu Identification     | The IPDM E/R part number is displayed.                    |
| Self Diagnostic Result | The IPDM E/R self diagnostic results are displayed.       |
| Data Monitor           | The IPDM E/R input/output data is displayed in real time. |

# DIAGNOSIS SYSTEM (IPDM E/R) (WITH INTELLIGENT KEY SYSTEM)

## < SYSTEM DESCRIPTION >

| Direct Diagnostic Mode | Description   |
|------------------------|---|
| Active Test            | The IPDM E/R activates outputs to test components.                          |
| CAN Diag Support Mntr  | The result of transmit/receive diagnosis of CAN communication is displayed. |

## ECU IDENTIFICATION

The IPDM E/R part number is displayed.

## SELF DIAGNOSTIC RESULT

Refer to [PCS-20, "DTC Index"](#).

## DATA MONITOR

| Monitor Item [Unit]           | Main Signals | Description  |
|-------------------------------|--------------|--|
| MOTOR FAN REQ [%]             | ×            | Indicates cooling fan speed signal received from ECM on CAN communication line             |
| AC COMP REQ [On/Off]          | ×            | Indicates A/C compressor request signal received from ECM on CAN communication line        |
| TAIL&CLR REQ [On/Off]         | ×            | Indicates position light request signal received from BCM on CAN communication line        |
| HL LO REQ [On/Off]            | ×            | Indicates low beam request signal received from BCM on CAN communication line              |
| HL HI REQ [On/Off]            | ×            | Indicates high beam request signal received from BCM on CAN communication line             |
| FR FOG REQ [On/Off]           | ×            | Indicates front fog light request signal received from BCM on CAN communication line       |
| FR WIP REQ [Stop/1LOW/Low/Hi] | ×            | Indicates front wiper request signal received from BCM on CAN communication line           |
| WIP AUTO STOP [STOP P/ACT P]  | ×            | Indicates condition of front wiper auto stop signal  |
| WIP PROT [Off/BLOCK]          | ×            | Indicates condition of front wiper fail-safe operation                                     |
| IGN RLY1 -REQ [On/Off]        |              | Indicates ignition switch ON signal received from BCM on CAN communication line            |
| IGN RLY [On/Off]              | ×            | Indicates condition of ignition relay  |
| PUSH SW [On/Off]              |              | Indicates condition of push-button ignition switch   |
| INTER/NP SW [On/Off]          |              | Indicates condition of CVT shift position  |
| ST RLY CONT [On/Off]          |              | Indicates starter relay status signal received from BCM on CAN communication line          |
| IHBT RLY -REQ [On/Off]        |              | Indicates starter control relay signal received from BCM on CAN communication line         |
| ST/INH RLY [Off/ ST /INH]     |              | Indicates condition of starter relay and starter control relay                             |
| DETENT SW [On/Off]            |              | Indicates condition of CVT shift selector (park position switch)                           |
| DTRL REQ [Off]                |              | Indicates daytime running light request signal received from BCM on CAN communication line |
| THFT HRN REQ [On/Off]         |              | Indicates theft warning horn request signal received from BCM on CAN communication line    |
| HORN CHIRP [On/Off]           |              | Indicates horn reminder signal received from BCM on CAN communication line                 |

## ACTIVE TEST

| Test item     | Description   |
|---------------|---|
| HORN          | This test is able to check horn operation [On].                     |
| REAR DEFOGGER | This test is able to check rear window defogger operation [On/Off]. |
| FRONT WIPER   | This test is able to check wiper motor operation [Hi/Lo/Off].       |

# DIAGNOSIS SYSTEM (IPDM E/R) (WITH INTELLIGENT KEY SYSTEM)

## < SYSTEM DESCRIPTION >

| Test item      | Description  |
|----------------|--|
| MOTOR FAN      | This test is able to check cooling fan operation [4/3/2/1].              |
| EXTERNAL LAMPS | This test is able to check external lamp operation [Fog/Hi/Lo/TAIL/Off]. |

### CAN DIAG SUPPORT MNTR

Refer to [LAN-13, "CAN Diagnostic Support Monitor"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# DIAGNOSIS SYSTEM (IPDM E/R) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (IPDM E/R) (WITHOUT INTELLIGENT KEY SYSTEM)

### Diagnosis Description

INFOID:000000011894992

#### AUTO ACTIVE TEST

##### Description

In auto active test, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Front wiper (LO, HI)
- Parking lamp
- License plate lamp
- Tail lamp
- Front fog lamp (if equipped)
- Headlamp (LO, HI)
- A/C compressor (magnet clutch) (if equipped)
- Cooling fan

##### Operation Procedure

###### NOTE:

Never perform auto active test in the following conditions.

- Passenger door is open
- CONSULT is connected

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)

###### NOTE:

When auto active test is performed with hood opened, sprinkle water on windshield beforehand.

2. Turn the ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the driver door switch 10 times. Then turn the ignition switch OFF.
4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. After a series of the following operations is repeated 3 times, auto active test is completed.

###### NOTE:

- When auto active test has to be cancelled halfway through test, turn the ignition switch OFF.
- When auto active test is not activated, door switch may be the cause. Check door switch. Refer to [DLK-262, "Component Inspection"](#).

##### Inspection in Auto Active Test


When auto active test is actuated, the following operation sequence is repeated 3 times.

| Operation sequence | Inspection location  | Operation   |
|--------------------|--|---|
| 1                  | Front wiper  | LO for 5 seconds → HI for 5 seconds                     |
| 2                  | <ul style="list-style-type: none"><li>• Parking lamp</li><li>• License plate lamp</li><li>• Tail lamp</li><li>• Front fog lamp (if equipped)</li></ul> | 10 seconds  |
| 3                  | Headlamp   | LO for 10 seconds → HI ON ⇔ OFF 5 times                 |
| 4                  | A/C compressor (magnet clutch) (if equipped)   | ON ⇔ OFF 5 times  |
| 5                  | Cooling fan  | LO for 5 seconds → MID for 3 seconds → HI for 2 seconds |

# DIAGNOSIS SYSTEM (IPDM E/R) (WITHOUT INTELLIGENT KEY SYSTEM)

## < SYSTEM DESCRIPTION >

### Concept of Auto Active Test

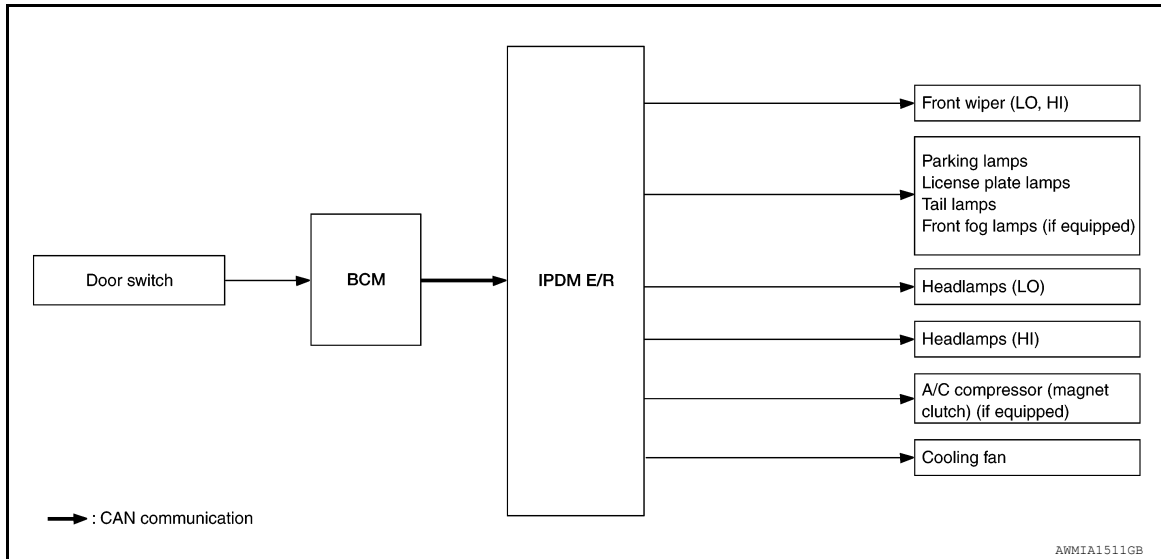

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

### Diagnosis Chart in Auto Active Test

| Symptom   | Inspection contents  | Possible cause  |
|---|--|---|
| Any of the following components do not operate <ul style="list-style-type: none"> <li>• Parking lamp</li> <li>• License plate lamp</li> <li>• Tail lamp</li> <li>• Front fog lamp (if equipped)</li> <li>• Headlamp (HI, LO)</li> <li>• Front wiper (HI, LO)</li> </ul> | Perform auto active test.<br>Does the applicable system operate? | YES<br>BCM signal input circuit   |
|   |  | NO <ul style="list-style-type: none"> <li>• Lamp or motor</li> <li>• Lamp or motor ground circuit</li> <li>• Harness or connector between IPDM E/R and applicable system</li> <li>• IPDM E/R</li> </ul> |
| A/C compressor does not operate   | Perform auto active test.<br>Does the magnet clutch operate?     | YES <ul style="list-style-type: none"> <li>• BCM signal input circuit</li> <li>• CAN communication signal between BCM and ECM</li> <li>• CAN communication signal between ECM and IPDM E/R</li> </ul>   |
|   |  | NO <ul style="list-style-type: none"> <li>• Magnet clutch</li> <li>• Harness or connector between IPDM E/R and magnet clutch</li> <li>• IPDM E/R</li> </ul>   |
| Cooling fan does not operate  | Perform auto active test.<br>Does the cooling fan operate?       | YES <ul style="list-style-type: none"> <li>• ECM signal input circuit</li> <li>• CAN communication signal between ECM and IPDM E/R</li> </ul>   |
|   |  | NO <ul style="list-style-type: none"> <li>• Cooling fan motor</li> <li>• Harness or connector between IPDM E/R and cooling fan motor</li> <li>• IPDM E/R</li> </ul>                                     |

## CONSULT Function (IPDM E/R)

INFOID:000000011894993

### APPLICATION ITEM

CONSULT performs the following functions via CAN communication with IPDM E/R.

| Direct Diagnostic Mode | Description   |
|------------------------|---|
| Ecu Identification     | The IPDM E/R part number is displayed.                    |
| Self Diagnostic Result | The IPDM E/R self diagnostic results are displayed.       |
| Data Monitor           | The IPDM E/R input/output data is displayed in real time. |

# DIAGNOSIS SYSTEM (IPDM E/R) (WITHOUT INTELLIGENT KEY SYSTEM)

## < SYSTEM DESCRIPTION >

| Direct Diagnostic Mode | Description   |
|------------------------|---|
| Active Test            | The IPDM E/R activates outputs to test components.                          |
| CAN Diag Support Mntr  | The result of transmit/receive diagnosis of CAN communication is displayed. |

## ECU IDENTIFICATION

The IPDM E/R part number is displayed.

## SELF DIAGNOSTIC RESULT

Refer to [PCS-48, "DTC Index"](#).

## DATA MONITOR

| Monitor Item [Unit]           | Main Signals | Description  |
|-------------------------------|--------------|--|
| MOTOR FAN REQ [%]             | ×            | Indicates cooling fan speed signal received from ECM on CAN communication line             |
| AC COMP REQ [On/Off]          | ×            | Indicates A/C compressor request signal received from ECM on CAN communication line        |
| TAIL&CLR REQ [On/Off]         | ×            | Indicates position light request signal received from BCM on CAN communication line        |
| HL LO REQ [On/Off]            | ×            | Indicates low beam request signal received from BCM on CAN communication line              |
| HL HI REQ [On/Off]            | ×            | Indicates high beam request signal received from BCM on CAN communication line             |
| FR FOG REQ [On/Off]           | ×            | Indicates front fog light request signal received from BCM on CAN communication line       |
| FR WIP REQ [Stop/1LOW/Low/Hi] | ×            | Indicates front wiper request signal received from BCM on CAN communication line           |
| WIP AUTO STOP [STOP P/ACT P]  | ×            | Indicates condition of front wiper auto stop signal  |
| WIP PROT [Off/BLOCK]          | ×            | Indicates condition of front wiper fail-safe operation                                     |
| IGN RLY1 -REQ [On/Off]        |              | Indicates ignition switch ON signal received from BCM on CAN communication line            |
| IGN RLY [On/Off]              | ×            | Indicates condition of ignition relay  |
| INTER/NP SW [On/Off]          |              | Indicates condition of CVT shift position  |
| ST RLY CONT [On/Off]          |              | Indicates starter relay status signal received from BCM on CAN communication line          |
| IHBT RLY -REQ [On/Off]        |              | Indicates starter control relay signal received from BCM on CAN communication line         |
| ST/INH RLY [Off/ ST /INH]     |              | Indicates condition of starter relay and starter control relay                             |
| DETENT SW [On/Off]            |              | Indicates condition of CVT shift selector (park position switch)                           |
| DTRL REQ [Off]                |              | Indicates daytime running light request signal received from BCM on CAN communication line |
| THFT HRN REQ [On/Off]         |              | Indicates theft warning horn request signal received from BCM on CAN communication line    |
| HORN CHIRP [On/Off]           |              | Indicates horn reminder signal received from BCM on CAN communication line                 |

## ACTIVE TEST

| Test item      | Description  |
|----------------|--|
| HORN           | This test is able to check horn operation [On].                          |
| REAR DEFOGGER  | This test is able to check rear window defogger operation [On/Off].      |
| FRONT WIPER    | This test is able to check wiper motor operation [Hi/Lo/Off].            |
| MOTOR FAN      | This test is able to check cooling fan operation [4/3/2/1].              |
| EXTERNAL LAMPS | This test is able to check external lamp operation [Fog/Hi/Lo/TAIL/Off]. |

# DIAGNOSIS SYSTEM (IPDM E/R) (WITHOUT INTELLIGENT KEY SYSTEM)

< SYSTEM DESCRIPTION >

---

CAN DIAG SUPPORT MNTR

Refer to [LAN-13. "CAN Diagnostic Support Monitor"](#).

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

# BCM, IPDM E/R

< ECU DIAGNOSIS INFORMATION >

## ECU DIAGNOSIS INFORMATION

BCM, IPDM E/R

List of ECU Reference

INFOID:0000000011539747

| ECU                                       | Reference  |
|---|--|
| BCM (with Intelligent Key system)         | <a href="#">BCS-29, "Reference Value"</a>                |
|   | <a href="#">BCS-46, "Fail-safe"</a>                      |
|   | <a href="#">BCS-48, "DTC Inspection Priority Chart"</a>  |
|   | <a href="#">BCS-49, "DTC Index"</a>                      |
| BCM (without Intelligent Key system)      | <a href="#">BCS-101, "Reference Value"</a>               |
|   | <a href="#">BCS-112, "Fail-safe"</a>                     |
|   | <a href="#">BCS-113, "DTC Inspection Priority Chart"</a> |
|   | <a href="#">BCS-113, "DTC Index"</a>                     |
| IPDM E/R (with Intelligent Key system)    | <a href="#">PCS-13, "Reference Value"</a>                |
|   | <a href="#">PCS-19, "Fail-safe"</a>                      |
|   | <a href="#">PCS-20, "DTC Index"</a>                      |
| IPDM E/R (without Intelligent Key system) | <a href="#">PCS-42, "Reference Value"</a>                |
|   | <a href="#">PCS-47, "Fail-Safe"</a>                      |
|   | <a href="#">PCS-48, "DTC Index"</a>                      |








# HEADLAMP

< WIRING DIAGRAM >


|                 |                    |
|-----------------|--------------------|
| Connector No.   | M28                |
| Connector Name  | COMBINATION SWITCH |
| Connector Color | WHITE              |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2            | GR            | -           |
| 5            | BR            | -           |
| 7            | V             | -           |
| 8            | L             | -           |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 9            | R             | -           |
| 10           | Y             | -           |
| 11           | SB            | -           |
| 12           | W             | -           |
| 13           | LG            | -           |
| 14           | O             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M31                 |
| Connector Name  | JOINT CONNECTOR-M01 |
| Connector Color | GRAY                |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 5            | P             | -           |
| 9            | P             | -           |
| 10           | P             | -           |
| 15           | L             | -           |
| 19           | L             | -           |
| 20           | L             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M53                 |
| Connector Name  | JOINT CONNECTOR-M03 |
| Connector Color | PINK                |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 14           | P             | -           |
| 15           | P             | -           |
| 19           | L             | -           |
| 20           | L             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M60                 |
| Connector Name  | JOINT CONNECTOR-M06 |
| Connector Color | BLUE                |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 5            | LG            | -           |
| 9            | W             | -           |

AALIA1017GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# HEADLAMP

< WIRING DIAGRAM >

|                 |   |
|-----------------|---|
| Connector No.   | M85   |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM) |
| Connector Color | WHITE   |

|    |    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|----|
| 89 | 88 | 87 | 86 | 85 | 84 | 83 | 82 | 81 |
| 95 | 94 | 93 | 92 | 91 | 90 |    |    |    |



| Terminal No. | Color of Wire | Signal Name    |
|--------------|---------------|----------------|
| 88           | O             | BATTERY (FUSE) |
| 90           | Y             | BATTERY (F/L)  |
| 93           | B             | GND (POWER)    |

| Terminal No. | Color of Wire | Signal Name             |
|--------------|---------------|-------------------------|
| 4            | BR            | COMBINATION SW INPUT 3  |
| 5            | O             | COMBINATION SW INPUT 2  |
| 6            | W             | COMBINATION SW INPUT 1  |
| 32           | LG            | COMBINATION SW OUTPUT 5 |
| 33           | Y             | COMBINATION SW OUTPUT 4 |
| 34           | V             | COMBINATION SW OUTPUT 3 |
| 35           | R             | COMBINATION SW OUTPUT 2 |
| 36           | SB            | COMBINATION SW OUTPUT 1 |
| 39           | L             | CAN-H                   |
| 40           | P             | CAN-L                   |

|                 |   |
|-----------------|---|
| Connector No.   | M84   |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM) |
| Connector Color | BLACK   |



|    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 1  | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |

| Terminal No. | Color of Wire | Signal Name            |
|--------------|---------------|------------------------|
| 2            | L             | COMBINATION SW INPUT 5 |
| 3            | GR            | COMBINATION SW INPUT 4 |

|                 |              |
|-----------------|--------------|
| Connector No.   | E4           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |




|    |    |    |   |   |   |   |   |   |   |   |   |
|----|----|----|---|---|---|---|---|---|---|---|---|
| 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
|----|----|----|---|---|---|---|---|---|---|---|---|



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | L             | -           |
| 5            | L             | -           |
| 8            | P             | -           |
| 12           | P             | -           |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 10G          | G             | -           |
| 95G          | P             | -           |
| 100G         | L             | -           |

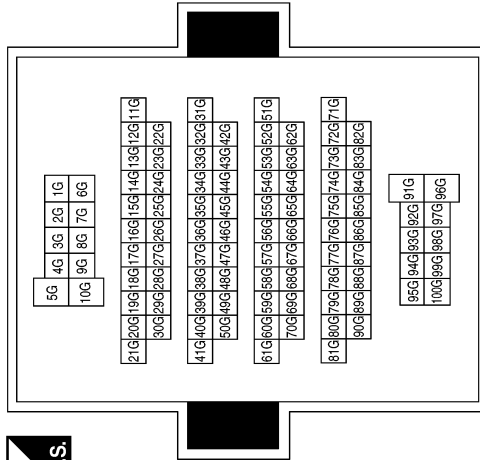


ABLIA5894GB

# HEADLAMP


< WIRING DIAGRAM >

|                 |  |
|-----------------|--|
| Connector No.   | E43  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE  |




| Terminal No. | Color of Wire | Signal Name  |
|--------------|---------------|--------------|
| 5            | Y             | H/LAMP HI RH |
| 6            | G             | H/LAMP HI LH |
| 7            | L             | H/LAMP LO LH |
| 8            | P             | H/LAMP LO RH |

|                 |                           |
|-----------------|---------------------------|
| Connector No.   | E21                       |
| Connector Name  | FRONT COMBINATION LAMP LH |
| Connector Color | BLACK                     |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | L             | -           |
| 2            | G             | -           |
| 5            | B/R           | -           |
| 6            | B/R           | -           |

|                 |                           |
|-----------------|---------------------------|
| Connector No.   | E20                       |
| Connector Name  | FRONT COMBINATION LAMP RH |
| Connector Color | BLACK                     |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | P             | -           |
| 2            | Y             | -           |
| 5            | B             | -           |
| 6            | B             | -           |

|                 |  |
|-----------------|--|
| Connector No.   | E48  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | BLACK  |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 57           | B/Y           | GND (POWER) |

|                 |  |
|-----------------|--|
| Connector No.   | E47  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | BROWN  |



| Terminal No. | Color of Wire | Signal Name  |
|--------------|---------------|--------------|
| 52           | B/Y           | GND (SIGNAL) |

|                 |  |
|-----------------|--|
| Connector No.   | E46  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE  |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 40           | P             | CAN-L       |
| 41           | L             | CAN-H       |

AALIA1019GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

EXL


# DAYTIME RUNNING LIGHT SYSTEM

< WIRING DIAGRAM >

## DAYTIME RUNNING LIGHT SYSTEM

Wiring Diagram

INFOID:000000011539749

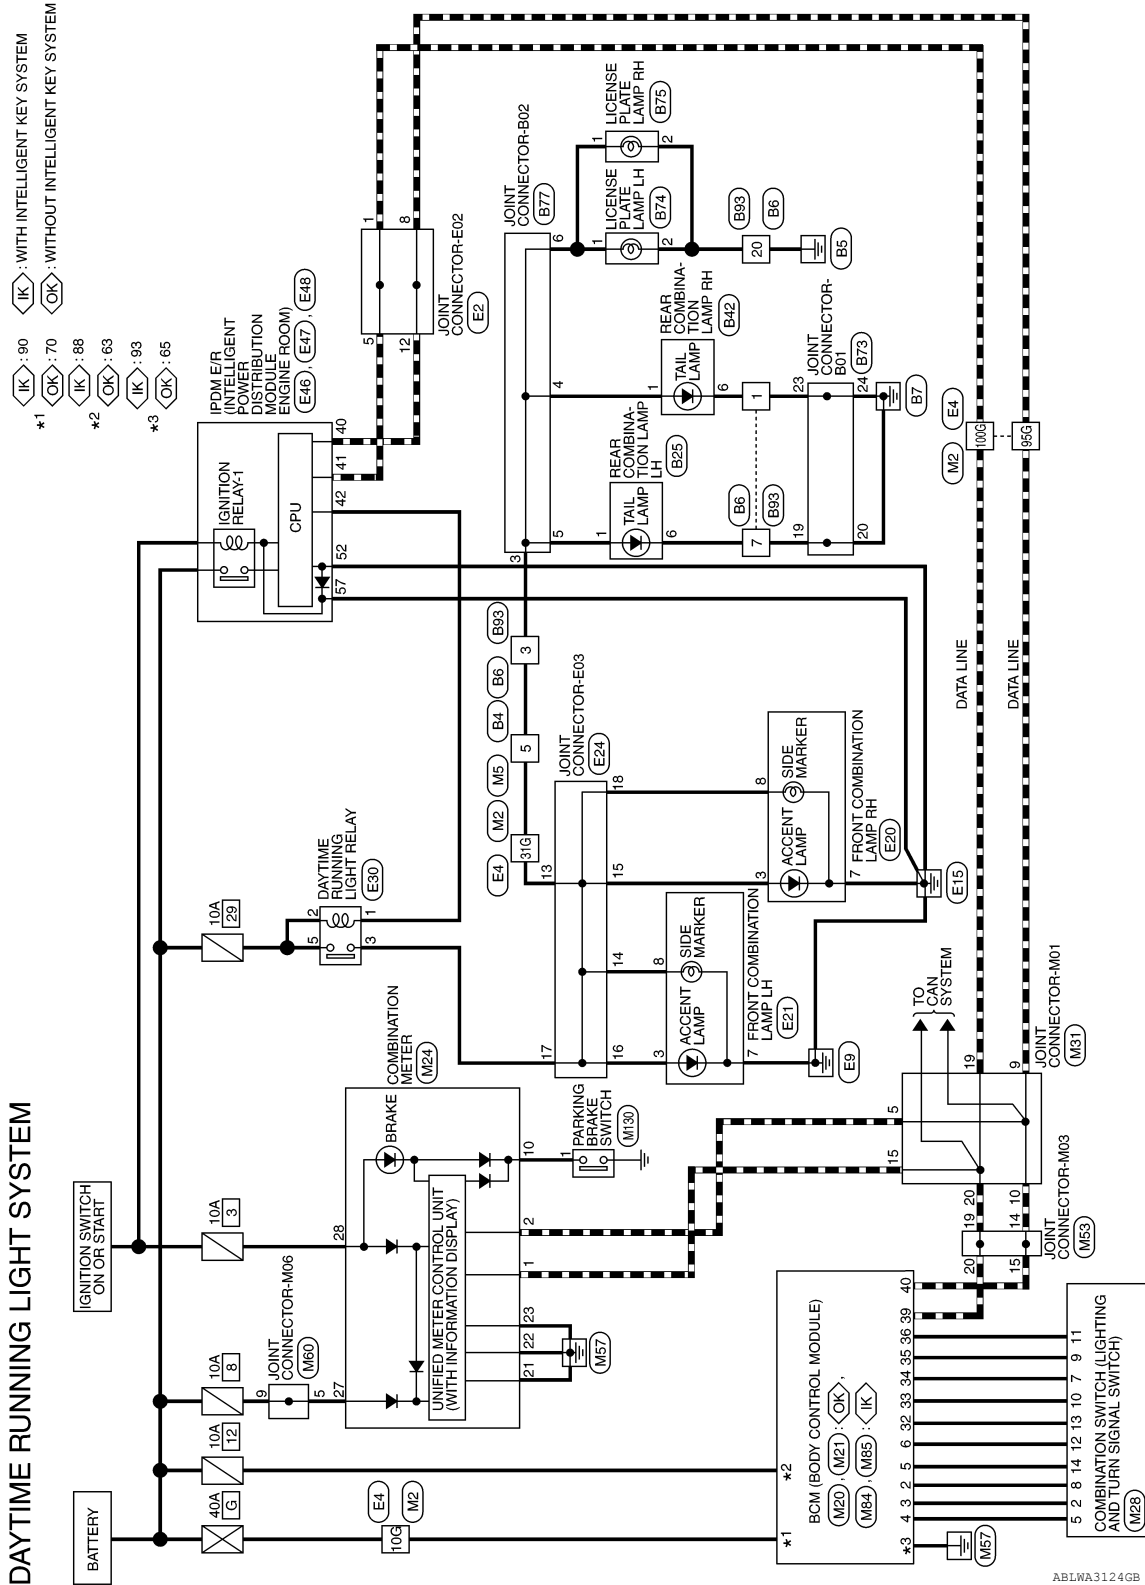


ABLWA3124GB

# DAYTIME RUNNING LIGHT SYSTEM

< WIRING DIAGRAM >


## DAYTIME RUNNING LIGHT SYSTEM CONNECTORS

|                 |              |
|-----------------|--------------|
| Connector No.   | M2           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

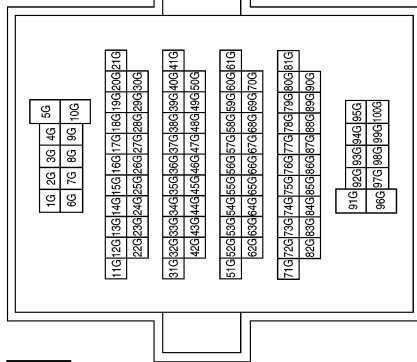

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 10G          | Y             | -           |
| 31G          | V             | -           |
| 95G          | P             | -           |
| 100G         | L             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | M5           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 5            | V             | -           |

|                 |  |
|-----------------|--|
| Connector No.   | M20  |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM) |
| Connector Color | WHITE  |



| Terminal No. | Color of Wire | Signal Name    |
|--------------|---------------|----------------|
| 63           | O             | BATTERY (FUSE) |
| 65           | B             | GND            |
| 70           | Y             | BATTERY (F/L)  |

|                 |  |
|-----------------|--|
| Connector No.   | M21  |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM) |
| Connector Color | WHITE  |

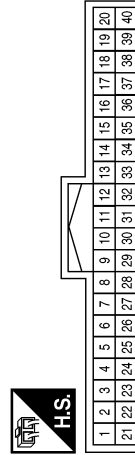

| Terminal No. | Color of Wire | Signal Name            |
|--------------|---------------|------------------------|
| 2            | L             | COMBINATION SW INPUT 5 |
| 3            | GR            | COMBINATION SW INPUT 4 |
| 4            | BR            | COMBINATION SW INPUT 3 |

| Terminal No. | Color of Wire | Signal Name             |
|--------------|---------------|-------------------------|
| 5            | O             | COMBINATION SW INPUT 2  |
| 6            | W             | COMBINATION SW INPUT 1  |
| 32           | LG            | COMBINATION SW OUTPUT 5 |
| 33           | Y             | COMBINATION SW OUTPUT 4 |
| 34           | V             | COMBINATION SW OUTPUT 3 |
| 35           | R             | COMBINATION SW OUTPUT 2 |
| 36           | SB            | COMBINATION SW OUTPUT 1 |
| 39           | L             | CAN-H                   |
| 40           | P             | CAN-L                   |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


EXL

ABLIA7707GB

# DAYTIME RUNNING LIGHT SYSTEM


< WIRING DIAGRAM >

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M31                 |
| Connector Name  | JOINT CONNECTOR-M01 |
| Connector Color | GRAY                |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 5            | P             | -           |
| 9            | P             | -           |
| 10           | P             | -           |
| 15           | L             | -           |
| 19           | L             | -           |
| 20           | L             | -           |

|                 |                    |
|-----------------|--------------------|
| Connector No.   | M28                |
| Connector Name  | COMBINATION SWITCH |
| Connector Color | WHITE              |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2            | GR            | -           |
| 5            | BR            | -           |
| 7            | V             | -           |
| 8            | L             | -           |
| 9            | R             | -           |
| 10           | Y             | -           |
| 11           | SB            | -           |
| 12           | W             | -           |
| 13           | LG            | -           |
| 14           | O             | -           |

|                 |                   |
|-----------------|-------------------|
| Connector No.   | M24               |
| Connector Name  | COMBINATION METER |
| Connector Color | WHITE             |

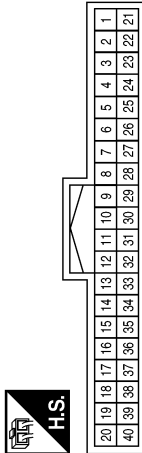


| Terminal No. | Color of Wire | Signal Name    |
|--------------|---------------|----------------|
| 1            | L             | CAN-H          |
| 2            | P             | CAN-L          |
| 10           | SB            | PKB SW         |
| 21           | B             | GND (ILL)      |
| 22           | B             | GND2 (POWER)   |
| 23           | B             | GND3 (CIRCUIT) |
| 27           | LG            | BAT            |
| 28           | GR            | IGN            |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M60                 |
| Connector Name  | JOINT CONNECTOR-M06 |
| Connector Color | BLUE                |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 5            | LG            | -           |
| 9            | W             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M53                 |
| Connector Name  | JOINT CONNECTOR-M03 |
| Connector Color | PINK                |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 14           | P             | -           |
| 15           | P             | -           |
| 19           | L             | -           |
| 20           | L             | -           |

ABLIA5869GB



# DAYTIME RUNNING LIGHT SYSTEM

< WIRING DIAGRAM >

|                 |   |
|-----------------|---|
| Connector No.   | M85   |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM) |
| Connector Color | WHITE   |

|    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|
| 83 | 86 | 85 | 84 | 83 | 82 | 81 |
| 95 | 94 | 93 | 92 | 91 | 90 |    |



| Terminal No. | Color of Wire | Signal Name    |
|--------------|---------------|----------------|
| 88           | O             | BATTERY (FUSE) |
| 90           | Y             | BATTERY (F/L)  |
| 93           | B             | GND (POWER)    |

| Terminal No. | Color of Wire | Signal Name             |
|--------------|---------------|-------------------------|
| 32           | LG            | COMBINATION SW OUTPUT 5 |
| 33           | Y             | COMBINATION SW OUTPUT 4 |
| 34           | V             | COMBINATION SW OUTPUT 3 |
| 35           | R             | COMBINATION SW OUTPUT 2 |
| 36           | SB            | COMBINATION SW OUTPUT 1 |
| 39           | L             | CAN-H                   |
| 40           | P             | CAN-L                   |

|                 |   |
|-----------------|---|
| Connector No.   | M84   |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM) |
| Connector Color | BLACK   |

|    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 1  | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |



| Terminal No. | Color of Wire | Signal Name            |
|--------------|---------------|------------------------|
| 2            | L             | COMBINATION SW INPUT 5 |
| 3            | GR            | COMBINATION SW INPUT 4 |
| 4            | BR            | COMBINATION SW INPUT 3 |
| 5            | O             | COMBINATION SW INPUT 2 |
| 6            | W             | COMBINATION SW INPUT 1 |

|                 |                      |
|-----------------|----------------------|
| Connector No.   | M130                 |
| Connector Name  | PARKING BRAKE SWITCH |
| Connector Color | BLACK                |

|   |
|---|
| 1 |
|---|



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | SB            | -           |

ABLIA5870GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

EXL

# DAYTIME RUNNING LIGHT SYSTEM


< WIRING DIAGRAM >

|                 |                     |
|-----------------|---------------------|
| Connector No.   | E2                  |
| Connector Name  | JOINT CONNECTOR-E02 |
| Connector Color | BLUE                |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | L             | -           |
| 5            | L             | -           |
| 8            | P             | -           |
| 12           | P             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | E4           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

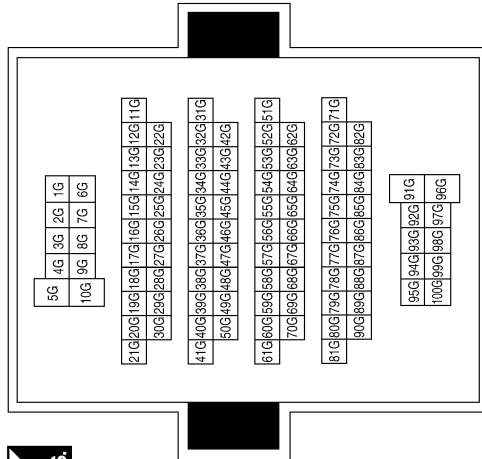


| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 10G          | G             | -           |
| 31G          | R             | -           |
| 95G          | P             | -           |
| 100G         | L             | -           |

|                 |                           |
|-----------------|---------------------------|
| Connector No.   | E20                       |
| Connector Name  | FRONT COMBINATION LAMP RH |
| Connector Color | BLACK                     |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3            | L             | -           |
| 7            | B             | -           |
| 8            | L             | -           |

|                 |                           |
|-----------------|---------------------------|
| Connector No.   | E21                       |
| Connector Name  | FRONT COMBINATION LAMP LH |
| Connector Color | BLACK                     |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3            | L             | -           |
| 7            | B/R           | -           |
| 8            | L             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | E24                 |
| Connector Name  | JOINT CONNECTOR-E03 |
| Connector Color | BLACK               |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 13           | R             | -           |
| 14           | L             | -           |
| 15           | L             | -           |
| 16           | L             | -           |
| 17           | L             | -           |
| 18           | L             | -           |

# DAYTIME RUNNING LIGHT SYSTEM


< WIRING DIAGRAM >

|                 |  |
|-----------------|--|
| Connector No.   | E47  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | BROWN  |



| Terminal No. | Color of Wire | Signal Name  |
|--------------|---------------|--------------|
| 52           | B/Y           | GND (SIGNAL) |

|                 |  |
|-----------------|--|
| Connector No.   | E46  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE  |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 40           | P             | CAN-L       |
| 41           | L             | CAN-H       |
| 42           | Y             | DTRL RLY    |

|                 |                             |
|-----------------|-----------------------------|
| Connector No.   | E30                         |
| Connector Name  | DAYTIME RUNNING LIGHT RELAY |
| Connector Color | BLUE                        |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | Y             | -           |
| 2            | LG            | -           |
| 3            | L             | -           |
| 5            | LG            | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | B6           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | L             | -           |
| 3            | LG            | -           |
| 7            | O             | -           |
| 20           | B             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | B4           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 5            | LG            | -           |

|                 |  |
|-----------------|--|
| Connector No.   | E48  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | BLACK  |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 57           | B/Y           | GND (POWER) |


ABLIA7708GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# DAYTIME RUNNING LIGHT SYSTEM

< WIRING DIAGRAM >

|                 |                     |
|-----------------|---------------------|
| Connector No.   | B73                 |
| Connector Name  | JOINT CONNECTOR-B01 |
| Connector Color | BLACK               |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 19           | B             | -           |
| 20           | B             | -           |
| 23           | L             | -           |
| 24           | B             | -           |

|                 |                          |
|-----------------|--------------------------|
| Connector No.   | B42                      |
| Connector Name  | REAR COMBINATION LAMP RH |
| Connector Color | WHITE                    |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | BR            | -           |
| 6            | L             | -           |

|                 |                          |
|-----------------|--------------------------|
| Connector No.   | B25                      |
| Connector Name  | REAR COMBINATION LAMP LH |
| Connector Color | WHITE                    |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | LG            | -           |
| 6            | O             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | B77                 |
| Connector Name  | JOINT CONNECTOR-B02 |
| Connector Color | YELLOW              |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3            | G             | -           |
| 4            | BR            | -           |
| 5            | LG            | -           |
| 6            | GR            | -           |

|                 |                       |
|-----------------|-----------------------|
| Connector No.   | B75                   |
| Connector Name  | LICENSE PLATE LAMP RH |
| Connector Color | BROWN                 |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | GR            | -           |
| 2            | B             | -           |

|                 |                       |
|-----------------|-----------------------|
| Connector No.   | B74                   |
| Connector Name  | LICENSE PLATE LAMP LH |
| Connector Color | BROWN                 |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | P             | -           |
| 2            | B             | -           |

AALIA1033GB

# DAYTIME RUNNING LIGHT SYSTEM

< WIRING DIAGRAM >

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

|                 |              |
|-----------------|--------------|
| Connector No.   | B93          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



|   |   |   |    |    |    |
|---|---|---|----|----|----|
| 1 | 2 | 3 | 4  | 5  | 6  |
| 7 | 8 | 9 | 10 | 11 | 12 |
|   |   |   |    | 13 | 14 |
|   |   |   |    | 15 | 16 |
|   |   |   |    | 17 | 18 |
|   |   |   |    | 19 | 20 |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | L             | -           |
| 3            | G             | -           |
| 7            | B             | -           |
| 20           | B             | -           |

AALIA1034GB


# AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

## AUTO LIGHT SYSTEM

### Wiring Diagram

INFOID:000000011539750

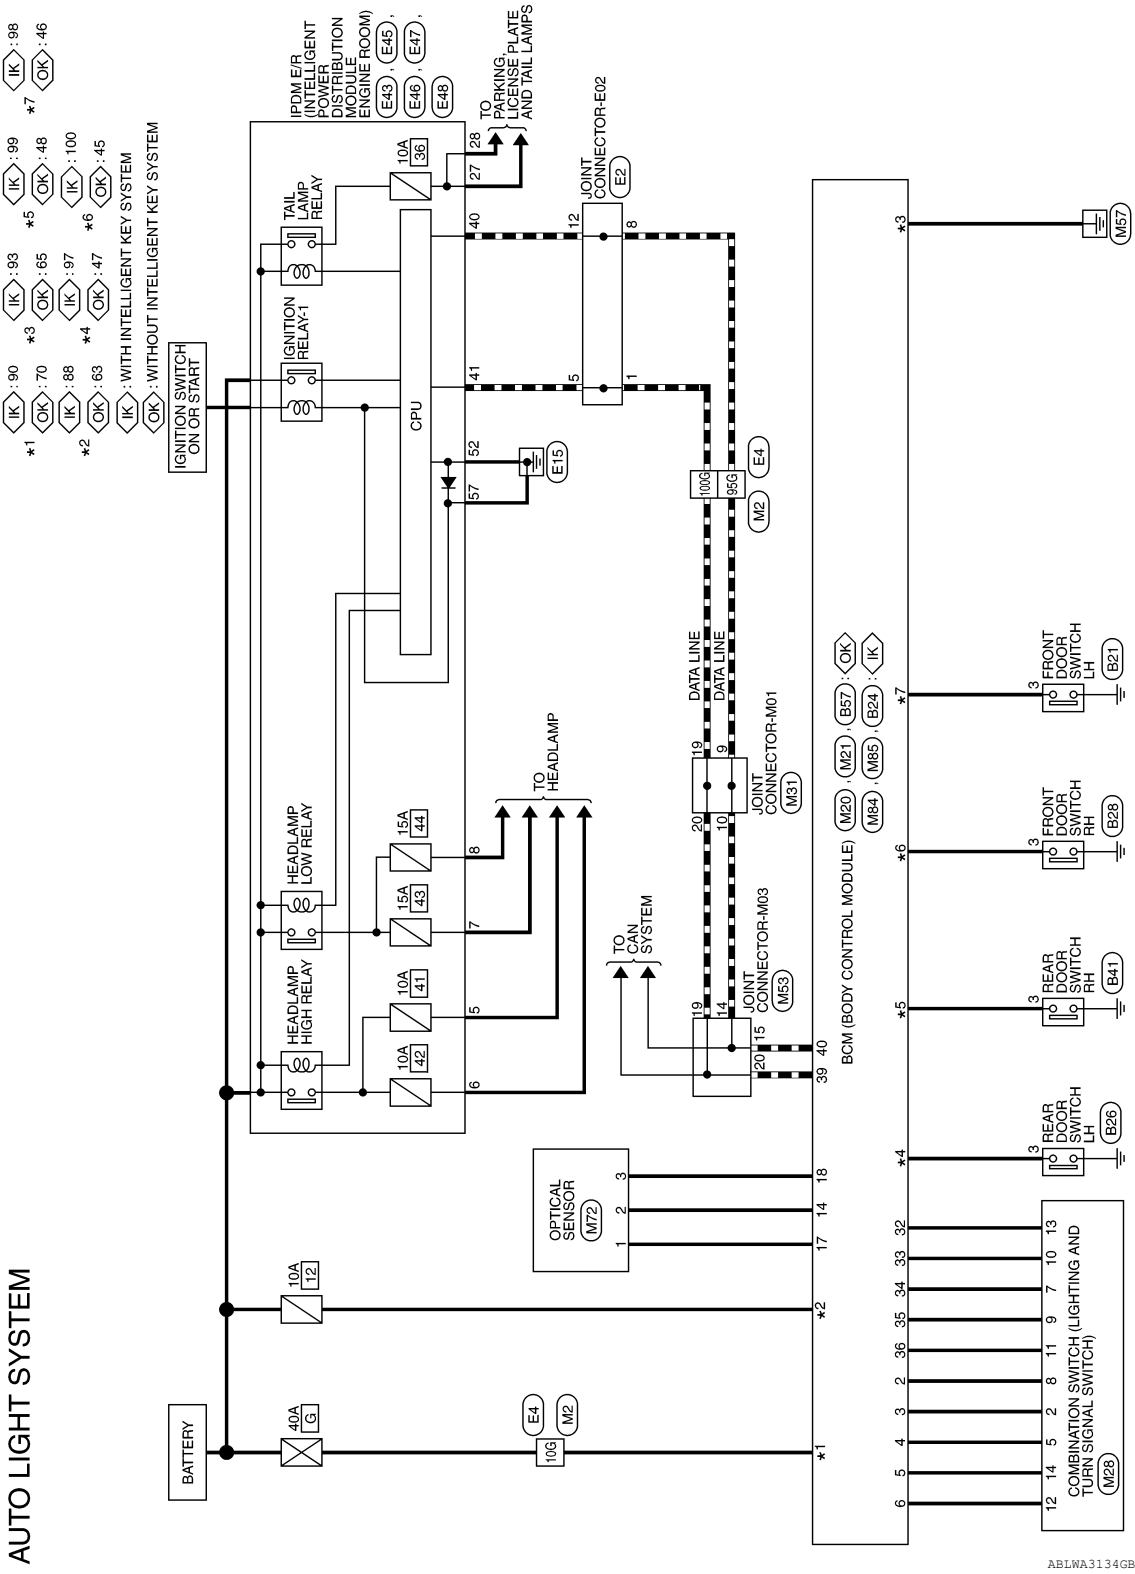

AUTO LIGHT SYSTEM


ABLWA3134GB

# AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

## AUTO LIGHT SYSTEM CONNECTORS

|                 |              |
|-----------------|--------------|
| Connector No.   | M2           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

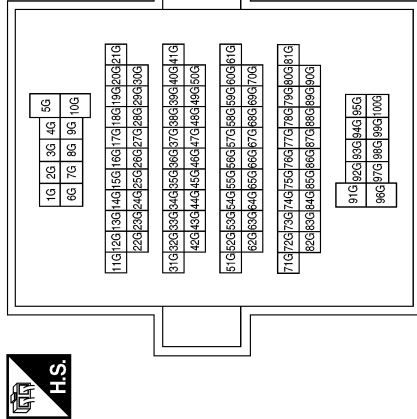

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 10G          | Y             | -           |
| 95G          | P             | -           |
| 100G         | L             | -           |


|                 |  |
|-----------------|--|
| Connector No.   | M20  |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM) |
| Connector Color | WHITE  |



|    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|
| 64 | 65 | 66 | 67 | 68 | 69 | 70 |
|----|----|----|----|----|----|----|

| Terminal No. | Color of Wire | Signal Name    |
|--------------|---------------|----------------|
| 63           | O             | BATTERY (FUSE) |
| 65           | B             | GND            |
| 70           | Y             | BATTERY (F/L)  |

|                 |  |
|-----------------|--|
| Connector No.   | M21  |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM) |
| Connector Color | WHITE  |

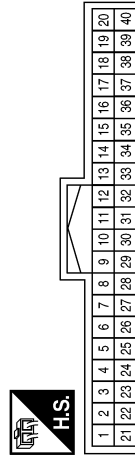

| Terminal No. | Color of Wire | Signal Name            |
|--------------|---------------|------------------------|
| 2            | L             | COMBINATION SW INPUT 5 |
| 3            | GR            | COMBINATION SW INPUT 4 |
| 4            | BR            | COMBINATION SW INPUT 3 |

| Terminal No. | Color of Wire | Signal Name                           |
|--------------|---------------|---------------------------------------|
| 5            | O             | COMBINATION SW INPUT 2                |
| 6            | W             | COMBINATION SW INPUT 1                |
| 14           | SB            | AUTO LIGHT SENSOR INPUT 1 (& 2)       |
| 17           | Y             | AUTO LIGHT SENSOR POWER SUPPLY OUTPUT |
| 18           | V             | KEYLESS & AUTO LIGHT SENSOR GND       |
| 32           | LG            | COMBINATION SW OUTPUT 5               |
| 33           | Y             | COMBINATION SW OUTPUT 4               |
| 34           | V             | COMBINATION SW OUTPUT 3               |

| Terminal No. | Color of Wire | Signal Name             |
|--------------|---------------|-------------------------|
| 35           | R             | COMBINATION SW OUTPUT 2 |
| 36           | SB            | COMBINATION SW OUTPUT 1 |
| 39           | L             | CAN-H                   |
| 40           | P             | CAN-L                   |

ABLIA5872GB


A B C D E F G H I J K M N O P

EXL

# AUTO LIGHT SYSTEM


< WIRING DIAGRAM >

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M53                 |
| Connector Name  | JOINT CONNECTOR-M03 |
| Connector Color | PINK                |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 14           | P             | -           |
| 15           | P             | -           |
| 19           | L             | -           |
| 20           | L             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M31                 |
| Connector Name  | JOINT CONNECTOR-M01 |
| Connector Color | GRAY                |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 9            | P             | -           |
| 10           | P             | -           |
| 19           | L             | -           |
| 20           | L             | -           |

|                 |                    |
|-----------------|--------------------|
| Connector No.   | M28                |
| Connector Name  | COMBINATION SWITCH |
| Connector Color | WHITE              |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2            | GR            | -           |
| 5            | BR            | -           |
| 7            | V             | -           |
| 8            | L             | -           |
| 9            | R             | -           |
| 10           | Y             | -           |
| 11           | SB            | -           |
| 12           | W             | -           |
| 13           | LG            | -           |
| 14           | O             | -           |

|                 |                |
|-----------------|----------------|
| Connector No.   | M72            |
| Connector Name  | OPTICAL SENSOR |
| Connector Color | WHITE          |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | Y             | -           |
| 2            | SB            | -           |
| 3            | V             | -           |

ABLIA5891GB



# AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

| Terminal No. | Color of Wire | Signal Name             |
|--------------|---------------|-------------------------|
| 35           | R             | COMBINATION SW OUTPUT 2 |
| 36           | SB            | COMBINATION SW OUTPUT 1 |
| 39           | L             | CAN-H                   |
| 40           | P             | CAN-L                   |

| Terminal No. | Color of Wire | Signal Name                           |
|--------------|---------------|---------------------------------------|
| 5            | O             | COMBINATION SW INPUT 2                |
| 6            | W             | COMBINATION SW INPUT 1                |
| 14           | SB            | AUTO LIGHT SENSOR INPUT               |
| 17           | Y             | AUTO LIGHT SENSOR POWER SUPPLY OUTPUT |
| 18           | V             | KEYLESS TUNER, AUTO LIGHT SENSOR GND  |
| 32           | LG            | COMBINATION SW OUTPUT 5               |
| 33           | Y             | COMBINATION SW OUTPUT 4               |
| 34           | V             | COMBINATION SW OUTPUT 3               |

|                 |   |
|-----------------|---|
| Connector No.   | M84   |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM) |
| Connector Color | BLACK   |



|    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 1  | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |

| Terminal No. | Color of Wire | Signal Name            |
|--------------|---------------|------------------------|
| 2            | L             | COMBINATION SW INPUT 5 |
| 3            | GR            | COMBINATION SW INPUT 4 |
| 4            | BR            | COMBINATION SW INPUT 3 |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | E2                  |
| Connector Name  | JOINT CONNECTOR-E02 |
| Connector Color | BLUE                |



|   |   |   |   |   |   |   |   |   |    |    |    |
|---|---|---|---|---|---|---|---|---|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
|---|---|---|---|---|---|---|---|---|----|----|----|

|                 |   |
|-----------------|---|
| Connector No.   | M85   |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM) |
| Connector Color | WHITE   |



|    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|
| 89 | 90 | 91 | 92 | 93 | 94 | 95 |
|----|----|----|----|----|----|----|

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | L             | -           |
| 5            | L             | -           |
| 8            | P             | -           |
| 12           | P             | -           |

| Terminal No. | Color of Wire | Signal Name    |
|--------------|---------------|----------------|
| 88           | O             | BATTERY (FUSE) |
| 90           | Y             | BATTERY (F/L)  |
| 93           | B             | GND (POWER)    |

ABLIA5892GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

EXL

# AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

|                 |  |
|-----------------|--|
| Connector No.   | E43  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE  |


|    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|
| 9  | 8  | 7  | 6  | 5  | 4  | 3  |
| 18 | 17 | 16 | 15 | 14 | 13 | 12 |
| 11 | 10 |    |    |    |    |    |



| Terminal No. | Color of Wire | Signal Name  |
|--------------|---------------|--------------|
| 5            | Y             | H/LAMP HI RH |
| 6            | G             | H/LAMP HI LH |
| 7            | L             | H/LAMP LO LH |
| 8            | P             | H/LAMP LO RH |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 10G          | G             | -           |
| 95G          | P             | -           |
| 100G         | L             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | E4           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

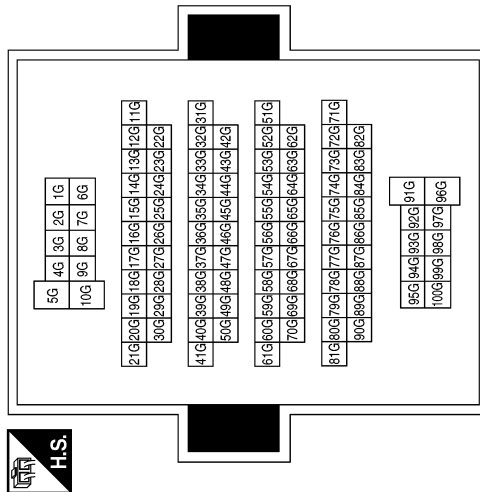

|                 |  |
|-----------------|--|
| Connector No.   | E47  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | BROWN  |

|    |    |    |
|----|----|----|
| 51 | 50 | 49 |
| 56 | 55 | 54 |
| 53 | 52 |    |



| Terminal No. | Color of Wire | Signal Name  |
|--------------|---------------|--------------|
| 52           | B/Y           | GND (SIGNAL) |

|                 |  |
|-----------------|--|
| Connector No.   | E46  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE  |

|    |    |    |    |    |    |
|----|----|----|----|----|----|
| 42 | 41 | 40 | 39 | 38 | 37 |
| 48 | 47 | 46 | 45 | 44 | 43 |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 40           | P             | CAN-L       |
| 41           | L             | CAN-H       |

|                 |  |
|-----------------|--|
| Connector No.   | E45  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | BROWN  |

|    |    |    |    |    |
|----|----|----|----|----|
| 29 | 28 | 27 | 26 | 25 |
| 36 | 35 | 34 | 33 | 32 |
| 31 | 30 |    |    |    |



| Terminal No. | Color of Wire | Signal Name    |
|--------------|---------------|----------------|
| 27           | L             | CLEARANCE/L RH |
| 28           | R             | TAIL 1         |

ABLIA5873GB

# AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

|                 |   |
|-----------------|---|
| Connector No.   | B24   |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM) |
| Connector Color | BLACK   |

|   |
|---|
| 104   103   102   101   100   99   98   97   96 |
| 110   109   108   107   106   105               |



| Terminal No. | Color of Wire | Signal Name  |
|--------------|---------------|--------------|
| 97           | GR            | DOOR SW (RL) |
| 98           | Y             | DOOR SW (DR) |
| 99           | P             | DOOR SW (RR) |
| 100          | R             | DOOR SW (AS) |

|                 |                      |
|-----------------|----------------------|
| Connector No.   | B21                  |
| Connector Name  | FRONT DOOR SWITCH LH |
| Connector Color | WHITE                |

|   |   |   |   |
|---|---|---|---|
| 1 | 2 | 3 | 4 |
|---|---|---|---|



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3            | Y             | -           |

|                 |  |
|-----------------|--|
| Connector No.   | E48  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | BLACK  |

|              |
|--------------|
| 59   58   57 |
| 62   61   60 |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 57           | B/Y           | GND (POWER) |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | B41                 |
| Connector Name  | REAR DOOR SWITCH RH |
| Connector Color | WHITE               |

|   |   |   |   |
|---|---|---|---|
| 1 | 2 | 3 | 4 |
|---|---|---|---|



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3            | P             | -           |

|                 |                      |
|-----------------|----------------------|
| Connector No.   | B28                  |
| Connector Name  | FRONT DOOR SWITCH RH |
| Connector Color | WHITE                |

|   |   |   |   |
|---|---|---|---|
| 1 | 2 | 3 | 4 |
|---|---|---|---|



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3            | R             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | B26                 |
| Connector Name  | REAR DOOR SWITCH LH |
| Connector Color | WHITE               |

|   |   |   |   |
|---|---|---|---|
| 1 | 2 | 3 | 4 |
|---|---|---|---|



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3            | GR            | -           |

ABLIA5874GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# AUTO LIGHT SYSTEM

< WIRING DIAGRAM >

---

|                 |  |
|-----------------|--|
| Connector No.   | B57  |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM) |
| Connector Color | BLACK  |

|    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|
| 49 | 46 | 45 | 44 | 43 | 42 | 41 |
| 55 | 54 | 53 | 52 | 51 | 50 |    |



| Terminal No. | Color of Wire | Signal Name  |
|--------------|---------------|--------------|
| 45           | R             | DOOR SW (AS) |
| 46           | Y             | DOOR SW (DR) |
| 47           | GR            | DOOR SW (RL) |
| 48           | P             | DOOR SW (RR) |

ABLIA5900GB


# FRONT FOG LAMP

< WIRING DIAGRAM >

## FRONT FOG LAMP

### Wiring Diagram

INFOID:000000011539751

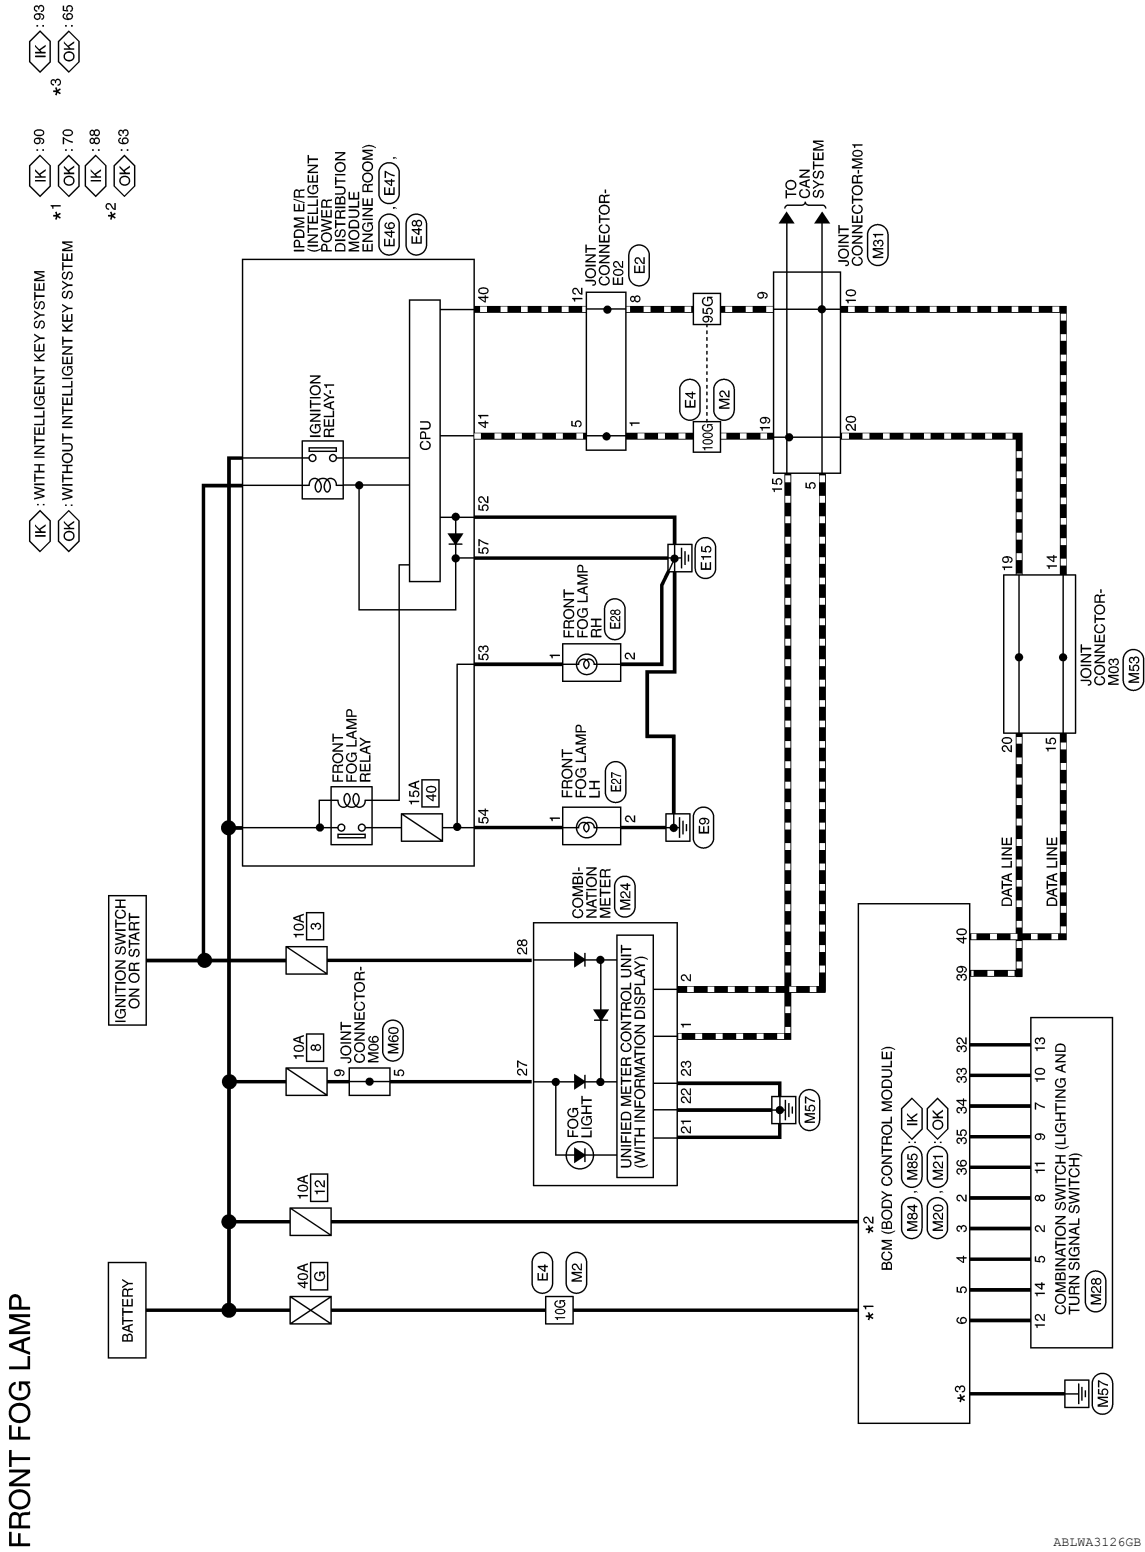


# FRONT FOG LAMP

< WIRING DIAGRAM >

## FRONT FOG LAMP CONNECTORS

|                 |              |
|-----------------|--------------|
| Connector No.   | M2           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

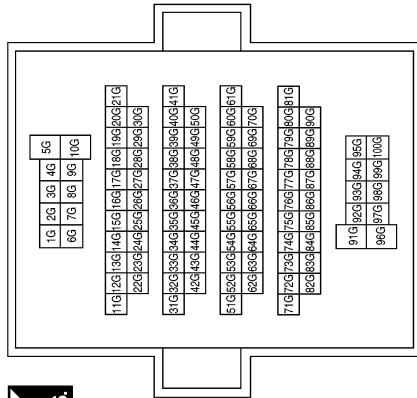


| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 10G          | Y             | -           |
| 95G          | P             | -           |
| 100G         | L             | -           |

|                 |  |
|-----------------|--|
| Connector No.   | M20  |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM) |
| Connector Color | WHITE  |



| Terminal No. | Color of Wire | Signal Name    |
|--------------|---------------|----------------|
| 63           | O             | BATTERY (FUSE) |
| 65           | B             | GND            |
| 70           | Y             | BATTERY (F/L)  |


|                 |  |
|-----------------|--|
| Connector No.   | M21  |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM) |
| Connector Color | WHITE  |



| Terminal No. | Color of Wire | Signal Name            |
|--------------|---------------|------------------------|
| 2            | L             | COMBINATION SW INPUT 5 |
| 3            | GR            | COMBINATION SW INPUT 4 |
| 4            | BR            | COMBINATION SW INPUT 3 |
| 5            | O             | COMBINATION SW INPUT 2 |

| Terminal No. | Color of Wire | Signal Name             |
|--------------|---------------|-------------------------|
| 6            | W             | COMBINATION SW INPUT 1  |
| 32           | LG            | COMBINATION SW OUTPUT 5 |
| 33           | Y             | COMBINATION SW OUTPUT 4 |
| 34           | V             | COMBINATION SW OUTPUT 3 |
| 35           | R             | COMBINATION SW OUTPUT 2 |
| 36           | SB            | COMBINATION SW OUTPUT 1 |
| 39           | L             | CAN-H                   |
| 40           | P             | CAN-L                   |

|                 |                   |
|-----------------|-------------------|
| Connector No.   | M24               |
| Connector Name  | COMBINATION METER |
| Connector Color | WHITE             |




| Terminal No. | Color of Wire | Signal Name    |
|--------------|---------------|----------------|
| 1            | L             | CAN-H          |
| 2            | P             | CAN-L          |
| 21           | B             | GND (ILL)      |
| 22           | B             | GND2 (POWER)   |
| 23           | B             | GND3 (CIRCUIT) |
| 27           | LG            | BAT            |
| 28           | GR            | IGN            |

# FRONT FOG LAMP


< WIRING DIAGRAM >

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M53                 |
| Connector Name  | JOINT CONNECTOR-M03 |
| Connector Color | PINK                |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 14           | P             | -           |
| 15           | P             | -           |
| 19           | L             | -           |
| 20           | L             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M31                 |
| Connector Name  | JOINT CONNECTOR-M01 |
| Connector Color | GRAY                |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 9            | P             | -           |
| 10           | P             | -           |
| 19           | L             | -           |
| 20           | L             | -           |


|                 |                    |
|-----------------|--------------------|
| Connector No.   | M28                |
| Connector Name  | COMBINATION SWITCH |
| Connector Color | WHITE              |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2            | GR            | -           |
| 5            | BR            | -           |
| 7            | V             | -           |
| 8            | L             | -           |
| 9            | R             | -           |
| 10           | Y             | -           |
| 11           | SB            | -           |
| 12           | W             | -           |
| 13           | LG            | -           |
| 14           | O             | -           |


| Terminal No. | Color of Wire | Signal Name             |
|--------------|---------------|-------------------------|
| 6            | W             | COMBINATION SW INPUT 1  |
| 32           | LG            | COMBINATION SW OUTPUT 5 |
| 33           | Y             | COMBINATION SW OUTPUT 4 |
| 34           | V             | COMBINATION SW OUTPUT 3 |
| 35           | R             | COMBINATION SW OUTPUT 2 |
| 36           | SB            | COMBINATION SW OUTPUT 1 |
| 39           | L             | CAN-H                   |
| 40           | P             | CAN-L                   |

|                 |   |
|-----------------|---|
| Connector No.   | M84   |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM) |
| Connector Color | BLACK   |

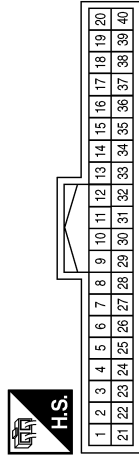

| Terminal No. | Color of Wire | Signal Name            |
|--------------|---------------|------------------------|
| 2            | L             | COMBINATION SW INPUT 5 |
| 3            | GR            | COMBINATION SW INPUT 4 |
| 4            | BR            | COMBINATION SW INPUT 3 |
| 5            | O             | COMBINATION SW INPUT 2 |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M60                 |
| Connector Name  | JOINT CONNECTOR-M06 |
| Connector Color | BLUE                |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 5            | LG            | -           |
| 9            | W             | -           |

ABLIA7710GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

EXL

# FRONT FOG LAMP


< WIRING DIAGRAM >

|                 |   |
|-----------------|---|
| Connector No.   | M85   |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM) |
| Connector Color | WHITE   |




| Terminal No. | Color of Wire | Signal Name    |
|--------------|---------------|----------------|
| 88           | O             | BATTERY (FUSE) |
| 90           | Y             | BATTERY (FIL)  |
| 93           | B             | GND (POWER)    |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | E2                  |
| Connector Name  | JOINT CONNECTOR-E02 |
| Connector Color | BLUE                |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | L             | -           |
| 5            | L             | -           |
| 8            | P             | -           |
| 12           | P             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | E4           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

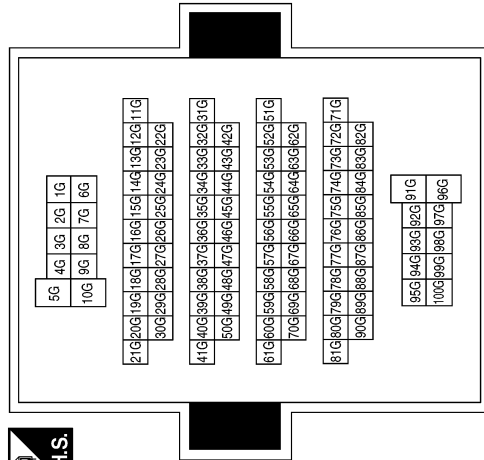

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 10G          | G             | -           |
| 95G          | P             | -           |
| 100G         | L             | -           |

|                 |                   |
|-----------------|-------------------|
| Connector No.   | E27               |
| Connector Name  | FRONT FOG LAMP LH |
| Connector Color | BLACK             |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | V             | -           |
| 2            | B             | -           |



# FRONT FOG LAMP

< WIRING DIAGRAM >

|                 |  |
|-----------------|--|
| Connector No.   | E47  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | BROWN  |



|    |    |    |
|----|----|----|
| 51 | 50 | 49 |
| 56 | 55 | 54 |
| 53 | 52 |    |

| Terminal No. | Color of Wire | Signal Name  |
|--------------|---------------|--------------|
| 52           | B/Y           | GND (SIGNAL) |
| 53           | W             | FR FOG/L RH  |
| 54           | V             | FR FOG/L LH  |

|                 |  |
|-----------------|--|
| Connector No.   | E46  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE  |



|    |    |    |    |    |    |
|----|----|----|----|----|----|
| 42 | 41 | 40 | 39 | 38 | 37 |
| 48 | 47 | 46 | 45 | 44 | 43 |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 40           | P             | CAN-L       |
| 41           | L             | CAN-H       |

|                 |                   |
|-----------------|-------------------|
| Connector No.   | E28               |
| Connector Name  | FRONT FOG LAMP RH |
| Connector Color | BLACK             |



|   |   |
|---|---|
| 2 | 1 |
|---|---|

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | W             | -           |
| 2            | B             | -           |

|                 |  |
|-----------------|--|
| Connector No.   | E48  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | BLACK  |



|    |    |    |
|----|----|----|
| 59 | 58 | 57 |
| 62 | 61 | 60 |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 57           | B/Y           | GND (POWER) |

ABLIA7712GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


EXL



# TURN SIGNAL AND HAZARD WARNING LAMPS

< WIRING DIAGRAM >

(IK) : WITH INTELLIGENT KEY SYSTEM  
 (IK) : 84  
 (OK) : WITHOUT INTELLIGENT KEY SYSTEM  
 (OK) : 42  
 (TM) : WITH TURN SIGNAL IN MIRROR  
 \*4  
 (IK) : 85  
 (OK) : 41

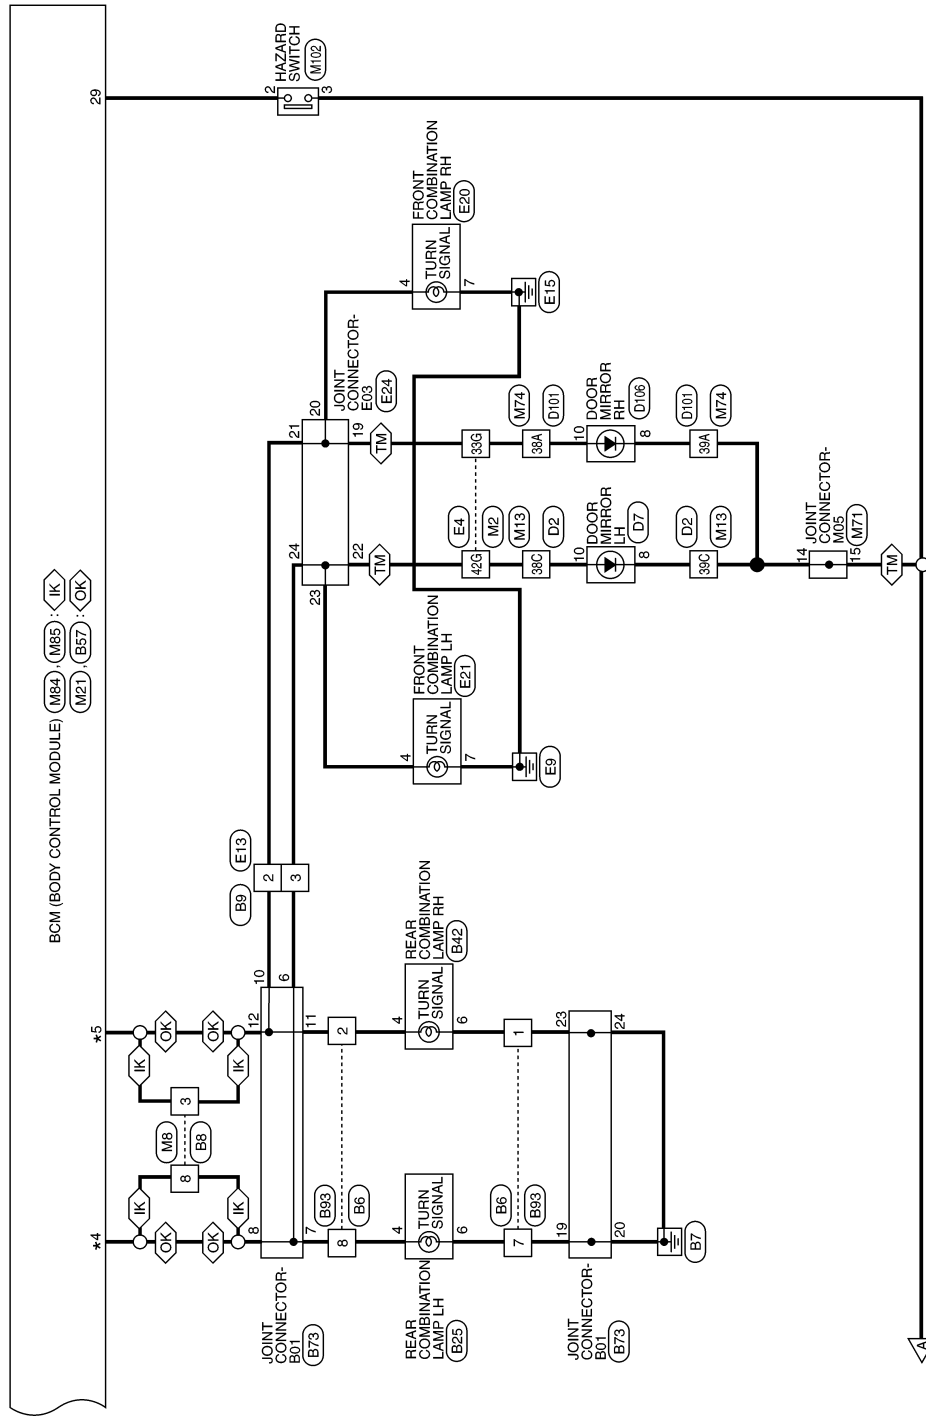

ABLWA3129GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# TURN SIGNAL AND HAZARD WARNING LAMPS

< WIRING DIAGRAM >

## TURN SIGNAL AND HAZARD WARNING LAMPS CONNECTORS


|                 |              |
|-----------------|--------------|
| Connector No.   | M8           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3            | W             | -           |
| 8            | Y             | -           |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 10G          | Y             | -           |
| 33G          | Y             | -           |
| 42G          | W             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | M2           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

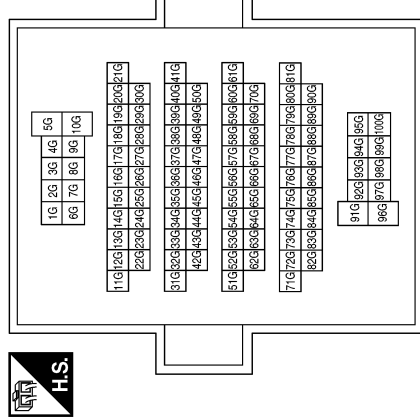


|                 |  |
|-----------------|--|
| Connector No.   | M20  |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM) |
| Connector Color | WHITE  |



| Terminal No. | Color of Wire | Signal Name    |
|--------------|---------------|----------------|
| 63           | O             | BATTERY (FUSE) |
| 65           | B             | GND            |
| 70           | Y             | BATTERY (F/L)  |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 38C          | W             | -           |
| 39C          | B             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | M13          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

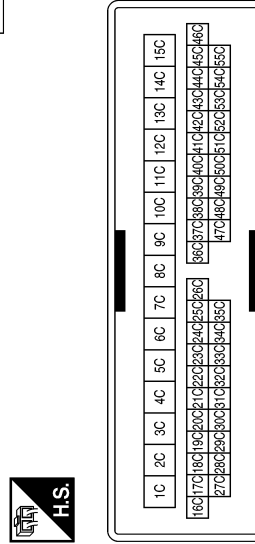


AAL1A1038GB

# TURN SIGNAL AND HAZARD WARNING LAMPS

< WIRING DIAGRAM >


|                 |  |
|-----------------|--|
| Connector No.   | M21  |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM) |
| Connector Color | WHITE  |



| Terminal No. | Color of Wire | Signal Name            |
|--------------|---------------|------------------------|
| 2            | L             | COMBINATION SW INPUT 5 |
| 3            | GR            | COMBINATION SW INPUT 4 |
| 4            | BR            | COMBINATION SW INPUT 3 |
| 5            | O             | COMBINATION SW INPUT 2 |
| 6            | W             | COMBINATION SW INPUT 1 |


| Terminal No. | Color of Wire | Signal Name             |
|--------------|---------------|-------------------------|
| 29           | SB            | HAZARD SW               |
| 32           | LG            | COMBINATION SW OUTPUT 5 |
| 33           | Y             | COMBINATION SW OUTPUT 4 |
| 34           | V             | COMBINATION SW OUTPUT 3 |
| 35           | R             | COMBINATION SW OUTPUT 2 |
| 36           | SB            | COMBINATION SW OUTPUT 1 |
| 39           | L             | CAN-H                   |
| 40           | P             | CAN-L                   |

|                 |                   |
|-----------------|-------------------|
| Connector No.   | M24               |
| Connector Name  | COMBINATION METER |
| Connector Color | WHITE             |



| Terminal No. | Color of Wire | Signal Name    |
|--------------|---------------|----------------|
| 1            | L             | CAN-H          |
| 2            | P             | CAN-L          |
| 21           | B             | GND (ILL)      |
| 22           | B             | GND2 (POWER)   |
| 23           | B             | GND3 (CIRCUIT) |
| 27           | LG            | BAT            |
| 28           | GR            | IGN            |


|                 |                    |
|-----------------|--------------------|
| Connector No.   | M28                |
| Connector Name  | COMBINATION SWITCH |
| Connector Color | WHITE              |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2            | GR            | -           |
| 5            | BR            | -           |
| 7            | V             | -           |
| 8            | L             | -           |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 9            | R             | -           |
| 10           | Y             | -           |
| 11           | SB            | -           |
| 12           | W             | -           |
| 13           | LG            | -           |
| 14           | O             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M31                 |
| Connector Name  | JOINT CONNECTOR-M01 |
| Connector Color | GRAY                |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 5            | P             | -           |
| 10           | P             | -           |
| 15           | L             | -           |
| 20           | L             | -           |


ABLIA5853GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# TURN SIGNAL AND HAZARD WARNING LAMPS


< WIRING DIAGRAM >

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M71                 |
| Connector Name  | JOINT CONNECTOR-M05 |
| Connector Color | PINK                |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 14           | B             | -           |
| 15           | B             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M60                 |
| Connector Name  | JOINT CONNECTOR-M06 |
| Connector Color | BLUE                |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 5            | LG            | -           |
| 9            | W             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M53                 |
| Connector Name  | JOINT CONNECTOR-M03 |
| Connector Color | PINK                |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 14           | P             | -           |
| 15           | P             | -           |
| 19           | L             | -           |
| 20           | L             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | M74          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

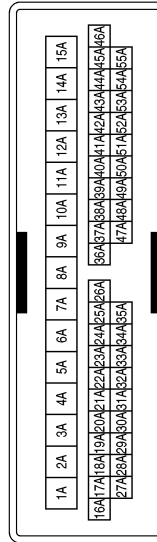

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 38A          | Y             | -           |
| 39A          | B             | -           |

ABLIAS854GB

# TURN SIGNAL AND HAZARD WARNING LAMPS

< WIRING DIAGRAM >

|                 |   |
|-----------------|---|
| Connector No.   | M85   |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM) |
| Connector Color | WHITE   |

|    |    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|----|
| 80 | 88 | 87 | 86 | 85 | 84 | 83 | 82 | 81 |
| 35 | 34 | 33 | 32 | 31 | 30 |    |    |    |



| Terminal No. | Color of Wire | Signal Name            |
|--------------|---------------|------------------------|
| 84           | W             | FLASHER OUTPUT (RIGHT) |
| 85           | Y             | FLASHER OUTPUT (LEFT)  |
| 88           | O             | BATTERY (FUSE)         |
| 90           | Y             | BATTERY (F/L)          |
| 93           | B             | GND (POWER)            |

| Terminal No. | Color of Wire | Signal Name             |
|--------------|---------------|-------------------------|
| 29           | SB            | HAZARD SW               |
| 32           | LG            | COMBINATION SW OUTPUT 5 |
| 33           | Y             | COMBINATION SW OUTPUT 4 |
| 34           | V             | COMBINATION SW OUTPUT 3 |
| 35           | R             | COMBINATION SW OUTPUT 2 |
| 36           | SB            | COMBINATION SW OUTPUT 1 |
| 39           | L             | CAN-H                   |
| 40           | P             | CAN-L                   |

|                 |   |
|-----------------|---|
| Connector No.   | M84   |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM) |
| Connector Color | BLACK   |



|    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 1  | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |

| Terminal No. | Color of Wire | Signal Name            |
|--------------|---------------|------------------------|
| 2            | L             | COMBINATION SW INPUT 5 |
| 3            | GR            | COMBINATION SW INPUT 4 |
| 4            | BR            | COMBINATION SW INPUT 3 |
| 5            | O             | COMBINATION SW INPUT 2 |
| 6            | W             | COMBINATION SW INPUT 1 |

|                 |               |
|-----------------|---------------|
| Connector No.   | M102          |
| Connector Name  | HAZARD SWITCH |
| Connector Color | WHITE         |

|   |   |   |   |
|---|---|---|---|
| 4 | 3 | 2 | 1 |
|---|---|---|---|



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2            | SB            | -           |
| 3            | B             | -           |

ABLIA5855GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

EXL

# TURN SIGNAL AND HAZARD WARNING LAMPS

< WIRING DIAGRAM >


|                 |              |
|-----------------|--------------|
| Connector No.   | E13          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2            | Y             | -           |
| 3            | V             | -           |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 10G          | G             | -           |
| 33G          | Y             | -           |
| 42G          | V             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | E4           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

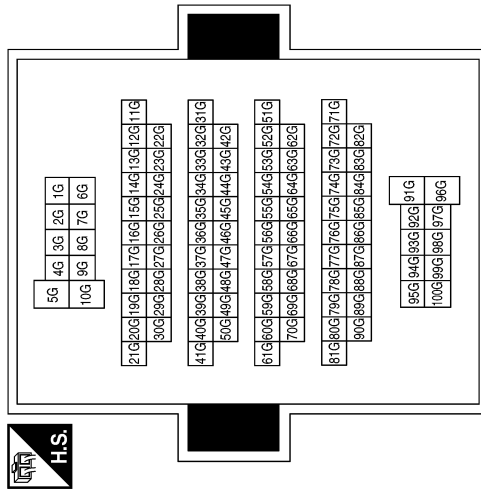

|                 |                     |
|-----------------|---------------------|
| Connector No.   | E24                 |
| Connector Name  | JOINT CONNECTOR-E03 |
| Connector Color | BLACK               |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 19           | Y             | -           |
| 20           | Y             | -           |
| 21           | Y             | -           |
| 22           | V             | -           |
| 23           | V             | -           |
| 24           | V             | -           |

|                 |                           |
|-----------------|---------------------------|
| Connector No.   | E21                       |
| Connector Name  | FRONT COMBINATION LAMP LH |
| Connector Color | BLACK                     |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 4            | V             | -           |
| 7            | B/R           | -           |

|                 |                           |
|-----------------|---------------------------|
| Connector No.   | E20                       |
| Connector Name  | FRONT COMBINATION LAMP RH |
| Connector Color | BLACK                     |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 4            | Y             | -           |
| 7            | B             | -           |


ABLIA5856GB



# TURN SIGNAL AND HAZARD WARNING LAMPS


< WIRING DIAGRAM >

|                 |              |
|-----------------|--------------|
| Connector No.   | B9           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2            | Y             | -           |
| 3            | SB            | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | B8           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3            | O             | -           |
| 8            | LG            | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | B6           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | L             | -           |
| 2            | R             | -           |
| 7            | O             | -           |
| 8            | SB            | -           |

|                 |  |
|-----------------|--|
| Connector No.   | B57  |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM) |
| Connector Color | BLACK  |




| Terminal No. | Color of Wire | Signal Name            |
|--------------|---------------|------------------------|
| 41           | LG            | FLASHER OUTPUT (LEFT)  |
| 42           | O             | FLASHER OUTPUT (RIGHT) |

|                 |                          |
|-----------------|--------------------------|
| Connector No.   | B42                      |
| Connector Name  | REAR COMBINATION LAMP RH |
| Connector Color | WHITE                    |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 4            | R             | -           |
| 6            | L             | -           |

|                 |                          |
|-----------------|--------------------------|
| Connector No.   | B25                      |
| Connector Name  | REAR COMBINATION LAMP LH |
| Connector Color | WHITE                    |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 4            | SB            | -           |
| 6            | O             | -           |

ABLIA5857GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

EXL

# TURN SIGNAL AND HAZARD WARNING LAMPS


< WIRING DIAGRAM >

|                 |              |
|-----------------|--------------|
| Connector No.   | B93          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | L             | -           |
| 2            | R             | -           |
| 7            | B             | -           |
| 8            | BR            | -           |


|                 |                     |
|-----------------|---------------------|
| Connector No.   | B73                 |
| Connector Name  | JOINT CONNECTOR-B01 |
| Connector Color | BLACK               |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 6            | SB            | -           |
| 7            | BR            | -           |
| 8            | LG            | -           |
| 10           | Y             | -           |
| 11           | R             | -           |
| 12           | O             | -           |
| 19           | B             | -           |
| 20           | B             | -           |
| 23           | L             | -           |
| 24           | B             | -           |

|              |               |             |
|--------------|---------------|-------------|
| Terminal No. | Color of Wire | Signal Name |
| 38C          | G             | -           |
| 39C          | B/W           | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | D2           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

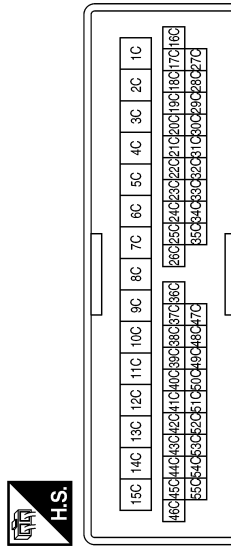


ABLIA5858GB

# TURN SIGNAL AND HAZARD WARNING LAMPS


< WIRING DIAGRAM >

|                 |                |
|-----------------|----------------|
| Connector No.   | D7             |
| Connector Name  | DOOR MIRROR LH |
| Connector Color | WHITE          |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 8            | B/W           | -           |
| 10           | G             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | D101         |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

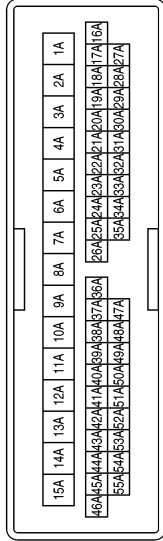

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 38A          | G             | -           |
| 39A          | B/W           | -           |

|                 |                |
|-----------------|----------------|
| Connector No.   | D106           |
| Connector Name  | DOOR MIRROR RH |
| Connector Color | WHITE          |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 8            | B/W           | -           |
| 10           | G             | -           |

ABLIA5907GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P




# PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >


## PARKING, LICENSE PLATE AND TAIL LAMPS CONNECTORS

|                 |              |
|-----------------|--------------|
| Connector No.   | M2           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

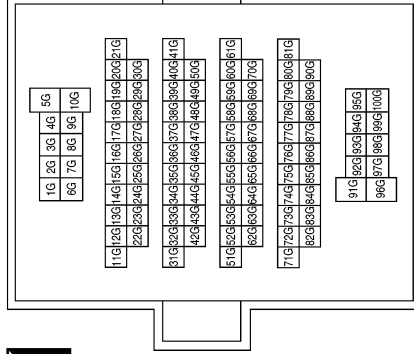

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 10G          | Y             | -           |
| 31G          | V             | -           |
| 95G          | P             | -           |
| 100G         | L             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | M5           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 5            | V             | -           |

|                 |  |
|-----------------|--|
| Connector No.   | M20  |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM) |
| Connector Color | WHITE  |



| Terminal No. | Color of Wire | Signal Name    |
|--------------|---------------|----------------|
| 63           | O             | BATTERY (FUSE) |
| 65           | B             | GND            |
| 70           | Y             | BATTERY (F/L)  |

|                 |  |
|-----------------|--|
| Connector No.   | M21  |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITHOUT INTELLIGENT KEY SYSTEM) |
| Connector Color | WHITE  |



| Terminal No. | Color of Wire | Signal Name            |
|--------------|---------------|------------------------|
| 2            | L             | COMBINATION SW INPUT 5 |
| 3            | GR            | COMBINATION SW INPUT 4 |
| 4            | BR            | COMBINATION SW INPUT 3 |
| 5            | O             | COMBINATION SW INPUT 2 |
| 6            | W             | COMBINATION SW INPUT 1 |

| Terminal No. | Color of Wire | Signal Name             |
|--------------|---------------|-------------------------|
| 32           | LG            | COMBINATION SW OUTPUT 5 |
| 33           | Y             | COMBINATION SW OUTPUT 4 |
| 34           | V             | COMBINATION SW OUTPUT 3 |
| 35           | R             | COMBINATION SW OUTPUT 2 |
| 36           | SB            | COMBINATION SW OUTPUT 1 |
| 39           | L             | CAN-H                   |
| 40           | P             | CAN-L                   |

ABLIA5865GB


A B C D E F G H I J K L M N O P

EXL

# PARKING, LICENSE PLATE AND TAIL LAMPS


< WIRING DIAGRAM >

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M31                 |
| Connector Name  | JOINT CONNECTOR-M01 |
| Connector Color | GRAY                |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 5            | P             | -           |
| 9            | P             | -           |
| 10           | P             | -           |
| 15           | L             | -           |
| 19           | L             | -           |
| 20           | L             | -           |

|                 |                    |
|-----------------|--------------------|
| Connector No.   | M28                |
| Connector Name  | COMBINATION SWITCH |
| Connector Color | WHITE              |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2            | GR            | -           |
| 5            | BR            | -           |
| 7            | V             | -           |
| 8            | L             | -           |
| 9            | R             | -           |
| 10           | Y             | -           |
| 11           | SB            | -           |
| 12           | W             | -           |
| 13           | LG            | -           |
| 14           | O             | -           |

|                 |                   |
|-----------------|-------------------|
| Connector No.   | M24               |
| Connector Name  | COMBINATION METER |
| Connector Color | WHITE             |

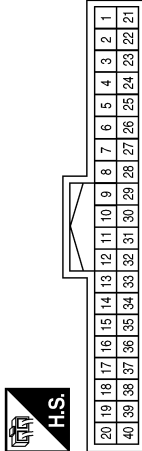


| Terminal No. | Color of Wire | Signal Name    |
|--------------|---------------|----------------|
| 1            | L             | CAN-H          |
| 2            | P             | CAN-L          |
| 21           | B             | GND (ILL)      |
| 22           | B             | GND2 (POWER)   |
| 23           | B             | GND3 (CIRCUIT) |
| 27           | LG            | BAT            |
| 28           | GR            | IGN            |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M60                 |
| Connector Name  | JOINT CONNECTOR-M06 |
| Connector Color | BLUE                |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 5            | LG            | -           |
| 9            | W             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M53                 |
| Connector Name  | JOINT CONNECTOR-M03 |
| Connector Color | PINK                |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 14           | P             | -           |
| 15           | P             | -           |
| 19           | L             | -           |
| 20           | L             | -           |

ABLIA5866GB

# PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >

|                 |   |
|-----------------|---|
| Connector No.   | M85   |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM) |
| Connector Color | WHITE   |



|    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|
| 83 | 86 | 85 | 84 | 83 | 82 | 81 |
| 95 | 94 | 93 | 92 | 91 | 90 |    |

| Terminal No. | Color of Wire | Signal Name    |
|--------------|---------------|----------------|
| 88           | O             | BATTERY (FUSE) |
| 90           | Y             | BATTERY (F/L)  |
| 93           | B             | GND (POWER)    |

| Terminal No. | Color of Wire | Signal Name             |
|--------------|---------------|-------------------------|
| 32           | LG            | COMBINATION SW OUTPUT 5 |
| 33           | Y             | COMBINATION SW OUTPUT 4 |
| 34           | V             | COMBINATION SW OUTPUT 3 |
| 35           | R             | COMBINATION SW OUTPUT 2 |
| 36           | SB            | COMBINATION SW OUTPUT 1 |
| 39           | L             | CAN-H                   |
| 40           | P             | CAN-L                   |

|                 |   |
|-----------------|---|
| Connector No.   | M84   |
| Connector Name  | BCM (BODY CONTROL MODULE) (WITH INTELLIGENT KEY SYSTEM) |
| Connector Color | BLACK   |



|    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 1  | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
| 21 | 22 | 23 | 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 | 40 |

| Terminal No. | Color of Wire | Signal Name            |
|--------------|---------------|------------------------|
| 2            | L             | COMBINATION SW INPUT 5 |
| 3            | GR            | COMBINATION SW INPUT 4 |
| 4            | BR            | COMBINATION SW INPUT 3 |
| 5            | O             | COMBINATION SW INPUT 2 |
| 6            | W             | COMBINATION SW INPUT 1 |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | E2                  |
| Connector Name  | JOINT CONNECTOR-E02 |
| Connector Color | BLUE                |



|    |    |    |   |   |   |   |   |   |   |   |   |
|----|----|----|---|---|---|---|---|---|---|---|---|
| 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
|----|----|----|---|---|---|---|---|---|---|---|---|

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | L             | -           |
| 5            | L             | -           |
| 8            | P             | -           |
| 12           | P             | -           |

ABLIA5895GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

EXL

# PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >


|                 |                           |
|-----------------|---------------------------|
| Connector No.   | E20                       |
| Connector Name  | FRONT COMBINATION LAMP RH |
| Connector Color | BLACK                     |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3            | L             | -           |
| 7            | B             | -           |
| 8            | L             | -           |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 10G          | G             | -           |
| 31G          | R             | -           |
| 95G          | P             | -           |
| 100G         | L             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | E4           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

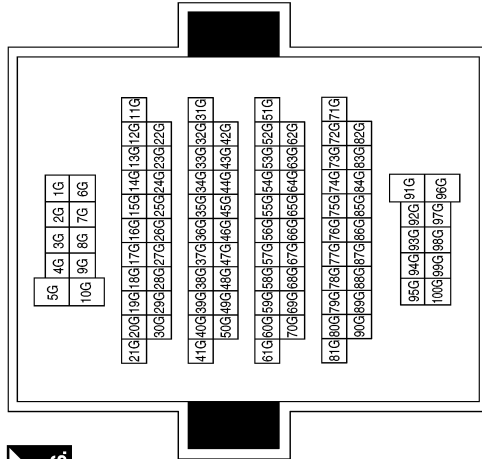


|                 |                             |
|-----------------|-----------------------------|
| Connector No.   | E30                         |
| Connector Name  | DAYTIME RUNNING LIGHT RELAY |
| Connector Color | BLUE                        |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | Y             | -           |
| 2            | LG            | -           |
| 3            | L             | -           |
| 5            | LG            | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | E24                 |
| Connector Name  | JOINT CONNECTOR-E03 |
| Connector Color | BLACK               |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 13           | R             | -           |
| 14           | L             | -           |
| 15           | L             | -           |
| 16           | L             | -           |
| 17           | L             | -           |
| 18           | L             | -           |

|                 |                           |
|-----------------|---------------------------|
| Connector No.   | E21                       |
| Connector Name  | FRONT COMBINATION LAMP LH |
| Connector Color | BLACK                     |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3            | L             | -           |
| 7            | B/R           | -           |
| 8            | L             | -           |


ABLIA7714GB



# PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >

|                 |  |
|-----------------|--|
| Connector No.   | E47  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | BROWN  |



|    |    |          |
|----|----|----------|
| 51 | 50 | 49       |
| 56 | 55 | 54 53 52 |

| Terminal No. | Color of Wire | Signal Name  |
|--------------|---------------|--------------|
| 52           | B/Y           | GND (SIGNAL) |


|                 |  |
|-----------------|--|
| Connector No.   | E46  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | WHITE  |



|    |    |    |    |    |    |
|----|----|----|----|----|----|
| 42 | 41 | 40 | 39 | 38 | 37 |
| 48 | 47 | 46 | 45 | 44 | 43 |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 40           | P             | CAN-L       |
| 41           | L             | CAN-H       |
| 42           | Y             | DTRL RLY    |


|                 |  |
|-----------------|--|
| Connector No.   | E45  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | BROWN  |



|    |    |    |    |          |
|----|----|----|----|----------|
| 29 | 28 | 27 | 26 | 25       |
| 36 | 35 | 34 | 33 | 32 31 30 |

| Terminal No. | Color of Wire | Signal Name    |
|--------------|---------------|----------------|
| 27           | L             | CLEARANCE/L RH |
| 28           | R             | TAIL 1         |

|                 |              |
|-----------------|--------------|
| Connector No.   | B6           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



|    |    |    |    |    |       |
|----|----|----|----|----|-------|
| 6  | 5  | 4  | 3  | 2  | 1     |
| 20 | 19 | 18 | 17 | 16 | 15 14 |
|    |    |    |    |    | 9 8 7 |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | L             | -           |
| 3            | LG            | -           |
| 7            | O             | -           |
| 20           | B             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | B4           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



|   |   |    |    |    |    |       |
|---|---|----|----|----|----|-------|
| 1 | 2 | 3  | 4  | 5  | 6  | 7     |
| 8 | 9 | 10 | 11 | 12 | 13 | 14    |
|   |   |    |    |    |    | 15 16 |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 5            | LG            | -           |

|                 |  |
|-----------------|--|
| Connector No.   | E48  |
| Connector Name  | IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) |
| Connector Color | BLACK  |



|    |    |    |
|----|----|----|
| 59 | 58 | 57 |
| 62 | 61 | 60 |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 57           | B/Y           | GND (POWER) |


ABLIA5867GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# PARKING, LICENSE PLATE AND TAIL LAMPS

< WIRING DIAGRAM >

|                 |                     |
|-----------------|---------------------|
| Connector No.   | B73                 |
| Connector Name  | JOINT CONNECTOR-B01 |
| Connector Color | BLACK               |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 19           | B             | -           |
| 20           | B             | -           |
| 23           | L             | -           |
| 24           | B             | -           |

|                 |                          |
|-----------------|--------------------------|
| Connector No.   | B42                      |
| Connector Name  | REAR COMBINATION LAMP RH |
| Connector Color | WHITE                    |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | BR            | -           |
| 6            | L             | -           |

|                 |                          |
|-----------------|--------------------------|
| Connector No.   | B25                      |
| Connector Name  | REAR COMBINATION LAMP LH |
| Connector Color | WHITE                    |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | LG            | -           |
| 6            | O             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | B77                 |
| Connector Name  | JOINT CONNECTOR-B02 |
| Connector Color | YELLOW              |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3            | G             | -           |
| 4            | BR            | -           |
| 5            | LG            | -           |
| 6            | GR            | -           |

|                 |                       |
|-----------------|-----------------------|
| Connector No.   | B75                   |
| Connector Name  | LICENSE PLATE LAMP RH |
| Connector Color | BROWN                 |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | GR            | -           |
| 2            | B             | -           |

|                 |                       |
|-----------------|-----------------------|
| Connector No.   | B74                   |
| Connector Name  | LICENSE PLATE LAMP LH |
| Connector Color | BROWN                 |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | P             | -           |
| 2            | B             | -           |

AALIA1050GB



# STOP LAMP

< WIRING DIAGRAM >


## STOP LAMP

Wiring Diagram

INFOID:000000011539754

OS : WITHOUT REAR SPOILER  
 SP : WITH REAR SPOILER

STOP LAMP

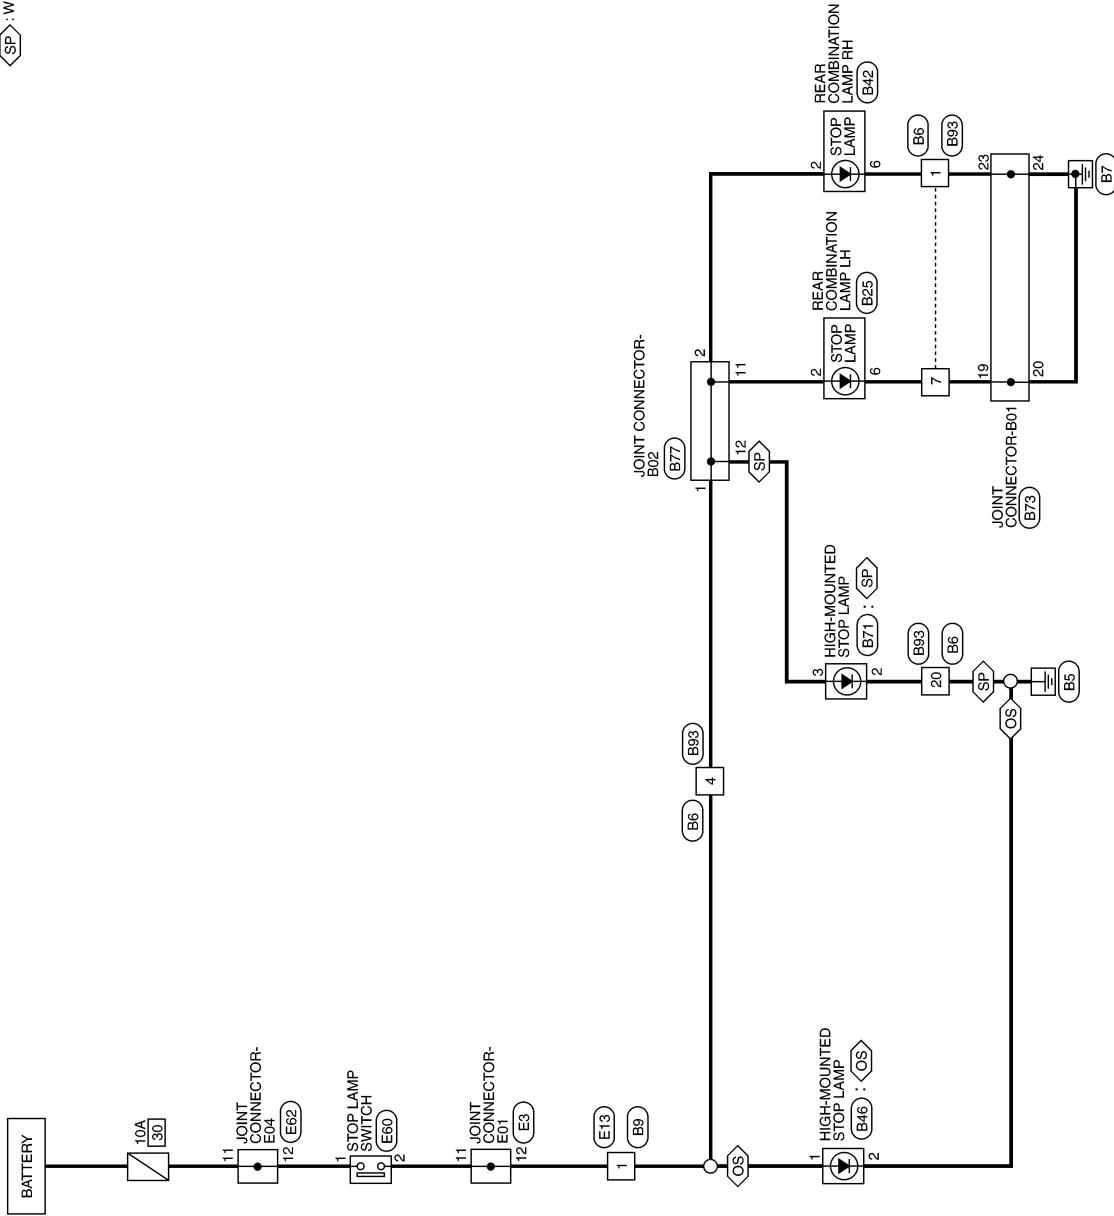

ABLWA3132GB

# STOP LAMP

< WIRING DIAGRAM >


## STOP LAMP CONNECTORS

|                 |                     |
|-----------------|---------------------|
| Connector No.   | E3                  |
| Connector Name  | JOINT CONNECTOR-E01 |
| Connector Color | BLUE                |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 11           | SB            | -           |
| 12           | SB            | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | E13          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | SB            | -           |

|                 |                  |
|-----------------|------------------|
| Connector No.   | E60              |
| Connector Name  | STOP LAMP SWITCH |
| Connector Color | WHITE            |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | W             | -           |
| 2            | SB            | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | E62                 |
| Connector Name  | JOINT CONNECTOR-E04 |
| Connector Color | BLACK               |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 11           | W             | -           |
| 12           | W             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | B6           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | L             | -           |
| 4            | P             | -           |
| 7            | O             | -           |
| 20           | B             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | B9           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | P             | -           |

ABLIA5875GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# STOP LAMP


## < WIRING DIAGRAM >

|                 |   |
|-----------------|---|
| Connector No.   | B46   |
| Connector Name  | HIGH-MOUNTED STOP LAMP (WITHOUT REAR SPOILER) |
| Connector Color | BLACK   |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | P             | -           |
| 2            | B             | -           |

|                 |                          |
|-----------------|--------------------------|
| Connector No.   | B42                      |
| Connector Name  | REAR COMBINATION LAMP RH |
| Connector Color | WHITE                    |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2            | V             | -           |
| 6            | L             | -           |

|                 |                          |
|-----------------|--------------------------|
| Connector No.   | B25                      |
| Connector Name  | REAR COMBINATION LAMP LH |
| Connector Color | WHITE                    |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2            | R             | -           |
| 6            | O             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | B77                 |
| Connector Name  | JOINT CONNECTOR-B02 |
| Connector Color | YELLOW              |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | Y             | -           |
| 2            | V             | -           |
| 11           | R             | -           |
| 12           | L             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | B73                 |
| Connector Name  | JOINT CONNECTOR-B01 |
| Connector Color | BLACK               |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 19           | B             | -           |
| 20           | B             | -           |
| 23           | L             | -           |
| 24           | B             | -           |

|                 |  |
|-----------------|--|
| Connector No.   | B71  |
| Connector Name  | HIGH-MOUNTED STOP LAMP (WITH REAR SPOILER) |
| Connector Color | WHITE                                      |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 2            | B             | -           |
| 3            | L             | -           |

AALIA1021GB

# STOP LAMP

< WIRING DIAGRAM >

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

|                 |              |
|-----------------|--------------|
| Connector No.   | B93          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



|   |   |   |    |    |    |
|---|---|---|----|----|----|
| 1 | 2 | 3 | 4  | 5  | 6  |
| 7 | 8 | 9 | 10 | 11 | 12 |
|   |   |   |    |    | 13 |
|   |   |   |    |    | 14 |
|   |   |   |    |    | 15 |
|   |   |   |    |    | 16 |
|   |   |   |    |    | 17 |
|   |   |   |    |    | 18 |
|   |   |   |    |    | 19 |
|   |   |   |    |    | 20 |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | L             | -           |
| 4            | Y             | -           |
| 7            | B             | -           |
| 20           | B             | -           |

AALIA1022GB

# BACK-UP LAMP


< WIRING DIAGRAM >

## BACK-UP LAMP

Wiring Diagram

INFOID:000000011539755

M: WITH M/T  
VT: WITH CVT

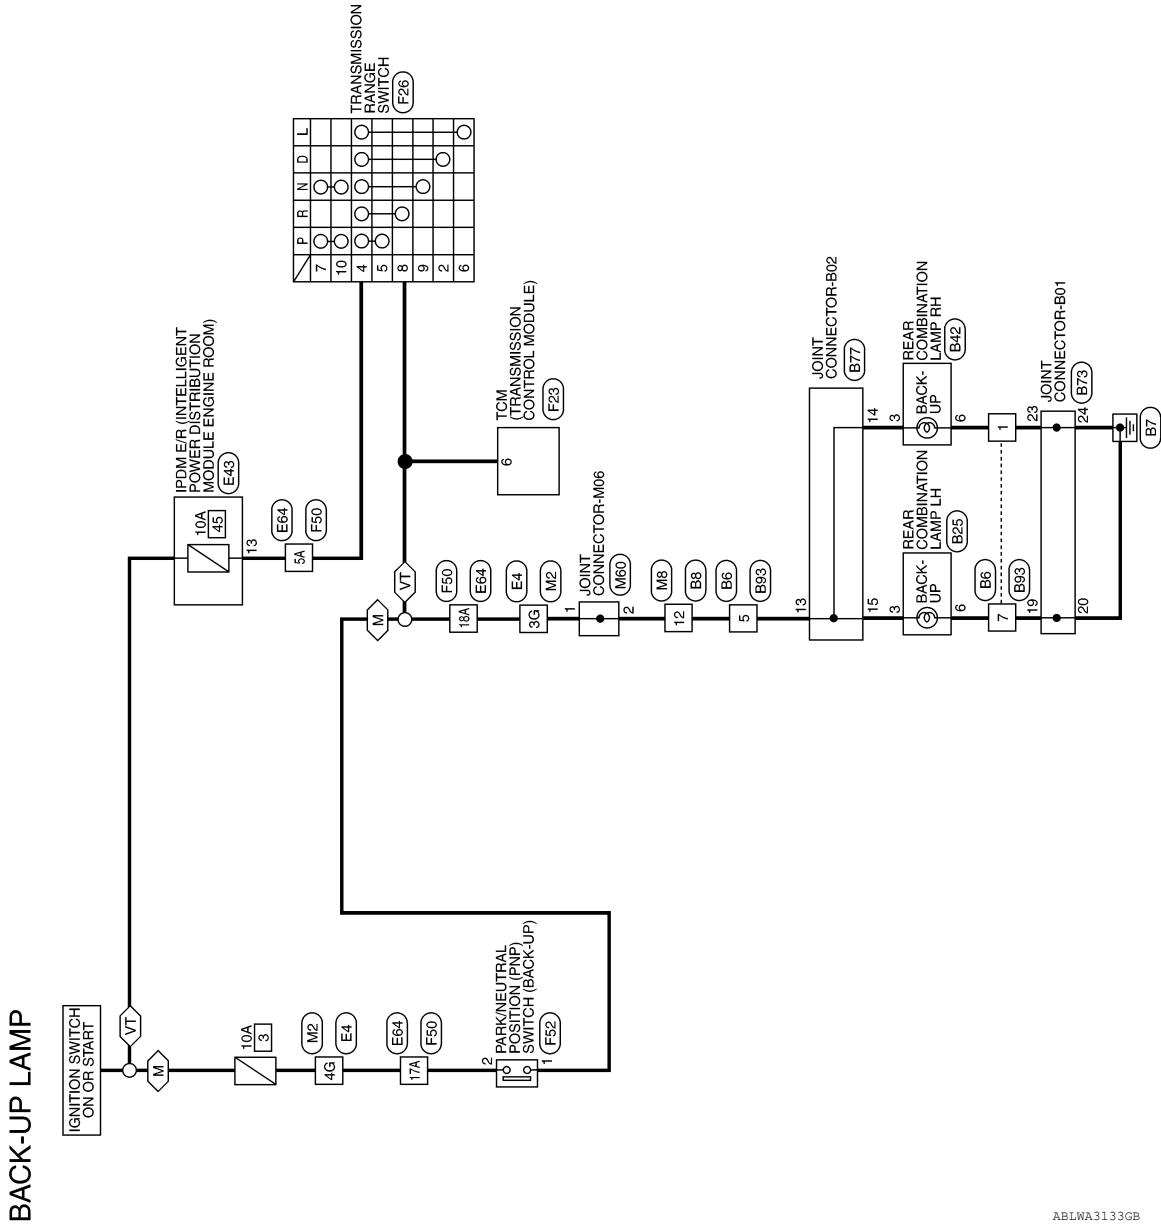

ABLWA3133GB




# BACK-UP LAMP

< WIRING DIAGRAM >


## BACK-UP LAMP CONNECTORS

|                 |              |
|-----------------|--------------|
| Connector No.   | M2           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |

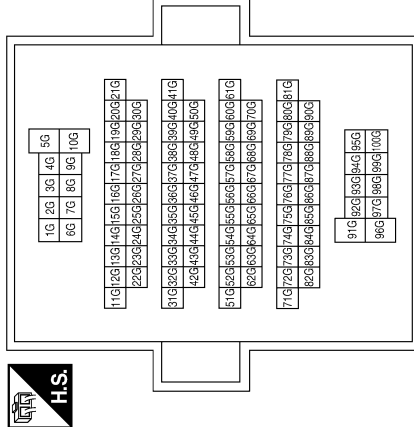


| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3G           | SB            | -           |
| 4G           | GR            | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | M8           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 12           | GR            | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | M60                 |
| Connector Name  | JOINT CONNECTOR-M06 |
| Connector Color | BLUE                |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | SB            | -           |
| 2            | GR            | -           |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

EXL




# BACK-UP LAMP


< WIRING DIAGRAM >

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 5A           | LG            | -           |
| 17A          | SB            | -           |
| 18A          | G             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | F50          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | BLACK        |

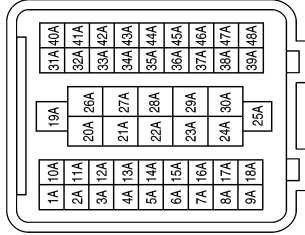

|                 |                           |
|-----------------|---------------------------|
| Connector No.   | F26                       |
| Connector Name  | TRANSMISSION RANGE SWITCH |
| Connector Color | BLACK                     |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 4            | LG            | -           |
| 8            | G             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | B8           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



|                 |              |
|-----------------|--------------|
| Connector No.   | B6           |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 12           | W             | -           |

| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | L             | -           |
| 5            | W             | -           |
| 7            | O             | -           |

|                 |                                    |
|-----------------|------------------------------------|
| Connector No.   | F52                                |
| Connector Name  | PARK/NEUTRAL POSITION (PNP) SWITCH |
| Connector Color | GREEN                              |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | G             | -           |
| 2            | SB            | -           |

ABLIA7716GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

EXL

# BACK-UP LAMP


## < WIRING DIAGRAM >

|                 |                     |
|-----------------|---------------------|
| Connector No.   | B73                 |
| Connector Name  | JOINT CONNECTOR-B01 |
| Connector Color | BLACK               |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 19           | B             | -           |
| 20           | B             | -           |
| 23           | L             | -           |
| 24           | B             | -           |

|                 |                          |
|-----------------|--------------------------|
| Connector No.   | B42                      |
| Connector Name  | REAR COMBINATION LAMP RH |
| Connector Color | WHITE                    |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3            | SB            | -           |
| 6            | L             | -           |

|                 |                          |
|-----------------|--------------------------|
| Connector No.   | B25                      |
| Connector Name  | REAR COMBINATION LAMP LH |
| Connector Color | WHITE                    |




| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 3            | P             | -           |
| 6            | O             | -           |

|                 |              |
|-----------------|--------------|
| Connector No.   | B93          |
| Connector Name  | WIRE TO WIRE |
| Connector Color | WHITE        |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 1            | L             | -           |
| 5            | W             | -           |
| 7            | B             | -           |

|                 |                     |
|-----------------|---------------------|
| Connector No.   | B77                 |
| Connector Name  | JOINT CONNECTOR-B02 |
| Connector Color | YELLOW              |



| Terminal No. | Color of Wire | Signal Name |
|--------------|---------------|-------------|
| 13           | W             | -           |
| 14           | SB            | -           |
| 15           | P             | -           |

ABLIA5877GB

# DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

INFOID:000000011539756

#### OVERALL SEQUENCE

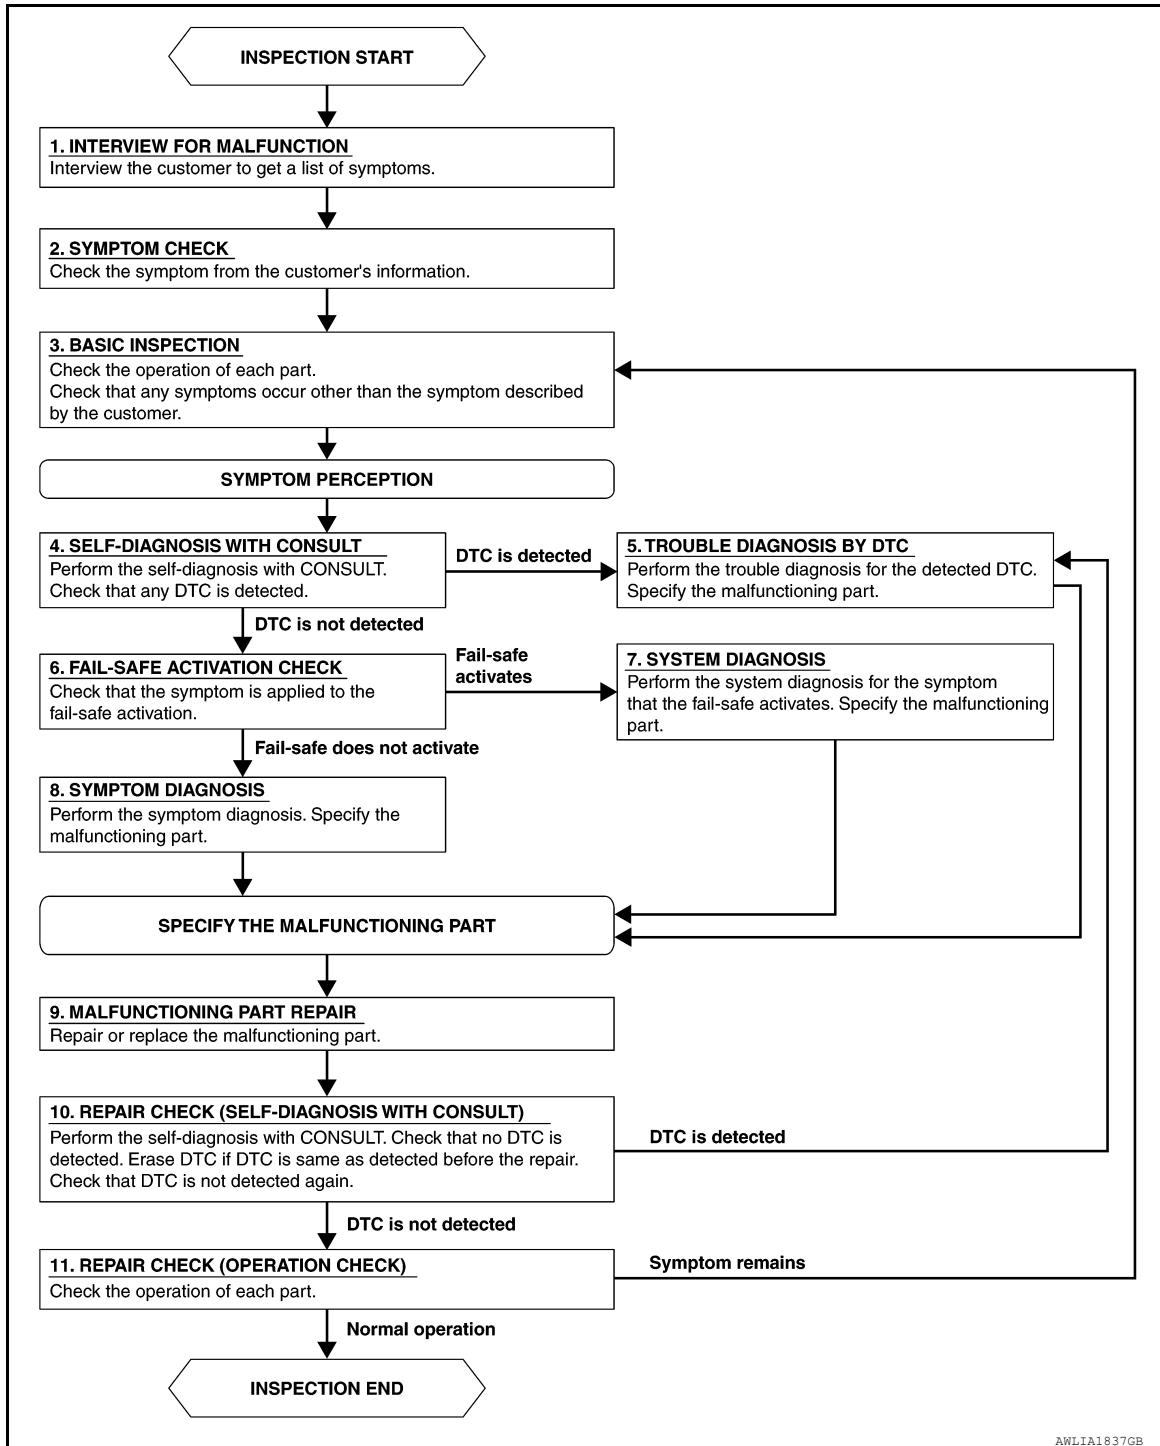

#### DETAILED FLOW

##### 1. INTERVIEW FOR MALFUNCTION

Find out what the customer's concerns are.

# DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

---

>> GO TO 2

## 2. SYMPTOM CHECK

---

Verify the symptom from the customer's information.

>> GO TO 3

## 3. BASIC INSPECTION

---

Check the operation of each part. Check that any concerns occur other than those mentioned in the customer interview.

>> GO TO 4

## 4. SELF-DIAGNOSIS WITH CONSULT

---

Perform the self diagnosis with CONSULT. Check that any DTC is detected.

Is any DTC detected?

YES >> GO TO 5

NO >> GO TO 6

## 5. TROUBLE DIAGNOSIS BY DTC

---

Perform the trouble diagnosis for the detected DTC. Specify the malfunctioning part.

>> GO TO 9

## 6. FAIL-SAFE ACTIVATION CHECK

---

Determine if the customer's concern is related to fail-safe activation.

Does the fail-safe activate?

YES >> GO TO 7

NO >> GO TO 8

## 7. SYSTEM DIAGNOSIS

---

Perform the system diagnosis for the system in which the fail-safe activates. Specify the malfunctioning part.

>> GO TO 9

## 8. SYMPTOM DIAGNOSIS

---

Perform the symptom diagnosis. Specify the malfunctioning part.

>> GO TO 9

## 9. MALFUNCTION PART REPAIR

---

Repair or replace the malfunctioning part.

>> GO TO 10

## 10. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT)

---

Perform the self diagnosis with CONSULT. Verify that no DTCs are detected. Erase all DTCs detected prior to the repair. Verify that DTC is not detected again.

Is any DTC detected?

YES >> GO TO 5

NO >> GO TO 11

## 11. REPAIR CHECK (OPERATION CHECK)

---

Check the operation of each part.

Does it operate normally?

# DIAGNOSIS AND REPAIR WORK FLOW

## < BASIC INSPECTION >

---

YES >> Inspection End.

NO >> GO TO 3

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

# HEADLAMP (HI) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### HEADLAMP (HI) CIRCUIT

#### Description

INFOID:0000000011539757

The IPDM E/R (intelligent power distribution module engine room) controls the headlamp high relay based on inputs from the BCM over the CAN communication lines. When the headlamp high relay is energized, power flows through fuses 41 and 42, located in the IPDM E/R. Power then flows to the front combination lamps to the headlamp high beam.

#### Component Function Check

INFOID:0000000011539758

#### 1. CHECK HEADLAMP (HI) OPERATION

##### ⊗ WITHOUT CONSULT

1. Start IPDM E/R auto active test. Refer to [EXL-28, "Diagnosis Description"](#) (with Intelligent Key system) or [EXL-28, "Diagnosis Description"](#) (without Intelligent Key system).
2. Check that the headlamp switches to the high beam.

##### NOTE:

HI/LO is repeated 1 second each when using the IPDM E/R auto active test.

##### Ⓜ CONSULT

1. Select EXTERNAL LAMP of IPDM E/R active test item.
2. While operating the test items, check that the headlamp switches to the high beam.

**HI** : Headlamp switches to the high beam.

**OFF** : Headlamp OFF

#### Is the inspection result normal?

- YES >> Headlamp (HI) circuit is normal.  
NO >> Refer to [EXL-88, "Diagnosis Procedure"](#).

#### Diagnosis Procedure

INFOID:0000000011539759

Regarding Wiring Diagram information, refer to [EXL-33, "Wiring Diagram"](#).

#### 1. CHECK HEADLAMP (HI) FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not blown.

| Unit             | Location | Fuse No. | Capacity |
|------------------|----------|----------|----------|
| Headlamp HI (LH) | IPDM E/R | 42       | 10A      |
| Headlamp HI (RH) | IPDM E/R | 41       | 10A      |

#### Is the fuse blown?

- YES >> Replace the fuse after repairing the affected circuit.  
NO >> GO TO 2.

#### 2. CHECK HEADLAMP (HI) OUTPUT VOLTAGE

##### Ⓜ CONSULT ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp harness connector in question.
3. Turn the ignition switch ON.
4. Select EXTERNAL LAMP of IPDM E/R active test item.
5. With EXTERNAL LAMP ON, check the voltage between the combination lamp connector and ground.



# HEADLAMP (HI) CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

| (+)       |     | Terminal | (-)    | Voltage         |
|-----------|-----|----------|--------|-----------------|
| Connector |     |          |        |                 |
| RH        | E20 | 2        | Ground | Battery voltage |
| LH        | E21 |          |        |                 |

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> GO TO 3.

### 3. CHECK HEADLAMP (HI) CIRCUIT FOR OPEN

- Turn the ignition switch OFF.
- Disconnect IPDM E/R connector.
- Check continuity between the IPDM E/R harness connector and the front combination lamp harness connector.

| IPDM E/R  |          | Front combination lamp |          | Continuity |
|-----------|----------|------------------------|----------|------------|
| Connector | Terminal | Connector              | Terminal |            |
| RH        | E43      | E20                    | 2        | Yes        |
| LH        |          | 5                      |          |            |
|           |          | E21                    |          |            |

Is the inspection result normal?

- YES >> Replace IPDM E/R. Refer to [PCS-31. "Removal and Installation"](#) (with Intelligent Key system) or [PCS-60. "Removal and Installation"](#) (without Intelligent Key system).  
NO >> Repair or replace the harness or connector.

### 4. CHECK FRONT COMBINATION LAMP (HI) GROUND CIRCUIT

Check continuity between the front combination lamp harness connector terminal and ground.

| Connector | Terminal | — | Continuity |
|-----------|----------|---|------------|
| RH        | E20      | 6 | Ground     |
| LH        | E21      |   |            |

Is the inspection result normal?

- YES >> Inspect the headlamp bulb.  
NO >> Repair or replace the harness or connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# HEADLAMP (LO) CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## HEADLAMP (LO) CIRCUIT

### Description

INFOID:0000000011539760

The IPDM E/R (intelligent power distribution module engine room) controls the headlamp low relay based on inputs from the BCM over the CAN communication lines. When the headlamp low relay is energized, power flows through fuses 43 and 44, located in the IPDM E/R. Power then flows to the front combination lamps to the headlamp low beam.

### Component Function Check

INFOID:0000000011539761

#### 1. CHECK HEADLAMP (LO) OPERATION

##### ⊗ WITHOUT CONSULT

1. Start IPDM E/R auto active test. Refer to [EXL-24. "Diagnosis Description"](#) (with Intelligent Key system) or [EXL-28. "Diagnosis Description"](#) (without Intelligent Key system).
2. Check that the headlamp is turned ON.

##### NOTE:

HI/LO is repeated 1 second each when using the IPDM E/R auto active test.

##### Ⓟ CONSULT

1. Select EXTERNAL LAMP of IPDM E/R active test item.
2. While operating the test items, check that the headlamp is turned ON.

**LO** : Headlamp ON  
**OFF** : Headlamp OFF

##### Is the inspection result normal?

- YES >> Headlamp (LO) is normal.  
NO >> Refer to [EXL-90. "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000011539762

Regarding Wiring Diagram information, refer to [EXL-33. "Wiring Diagram"](#).

#### 1. CHECK HEADLAMP (LO) FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not blown.

| Unit             | Location | Fuse No. | Capacity |
|------------------|----------|----------|----------|
| Headlamp LO (RH) | IPDM E/R | 44       | 15A      |
| Headlamp LO (LH) | IPDM E/R | 43       | 15A      |

##### Is the fuse blown?

- YES >> Replace the fuse after repairing the affected circuit.  
NO >> GO TO 2.

#### 2. CHECK HEADLAMP (LO) OUTPUT VOLTAGE

##### Ⓟ CONSULT

1. Turn the ignition switch OFF.
2. Disconnect the front combination lamp harness connector in question.
3. Turn the ignition switch ON.
4. Select EXTERNAL LAMP of IPDM E/R active test item.
5. With EXTERNAL LAMP ON, check the voltage between the combination lamp connector and ground.

| (+)       |          | (-) | Voltage |
|-----------|----------|-----|---------|
| Connector | Terminal |     |         |

# HEADLAMP (LO) CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

|    |     |   |        |                 |
|----|-----|---|--------|-----------------|
| RH | E20 | 1 | Ground | Battery voltage |
| LH | E21 |   |        |                 |

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 3.

### 3. CHECK HEADLAMP (LO) CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between the IPDM E/R harness connector and the front combination lamp harness connector.

| IPDM E/R  |          | Front combination lamp |          | Continuity |
|-----------|----------|------------------------|----------|------------|
| Connector | Terminal | Connector              | Terminal |            |
| RH        | E43      | 8                      | E20      | Yes        |
| LH        |          | 7                      | E21      |            |

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-31, "Removal and Installation"](#) (with Intelligent Key system) or [PCS-60, "Removal and Installation"](#) (without Intelligent Key system).

NO >> Repair or replace the harness or connector.

### 4. CHECK FRONT COMBINATION LAMP (LO) GROUND CIRCUIT

Check continuity between the front combination lamp harness connector and ground.

| Connector | Terminal | —      | Continuity |
|-----------|----------|--------|------------|
| RH        | E20      | Ground | Yes        |
| LH        | E21      |        |            |

Is the inspection result normal?

YES >> Inspect the headlamp bulb.

NO >> Repair or replace the harness or connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

EXL

# DAYTIME RUNNING LIGHT RELAY CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## DAYTIME RUNNING LIGHT RELAY CIRCUIT

### Description

INFOID:000000011539763

The BCM sends a daytime running light request to the IPDM E/R via the CAN communication lines. The power flows through fuse 29 located in fuse block J/B to the daytime running light relay coil. When the IPDM E/R operates the daytime running light relay, power is sent to the daytime running lamps.

### Diagnosis Procedure

INFOID:000000011539764

Regarding Wiring Diagram information, refer to [EXL-38. "Wiring Diagram"](#).

### 1. CHECK DAYTIME RUNNING LIGHT RELAY VOLTAGE SUPPLY

1. Turn the ignition switch OFF.
2. Remove the daytime running light relay.
3. Check the voltage between the daytime running light relay harness connector and ground.

| Daytime running light relay |          | (-)    | Voltage         |
|-----------------------------|----------|--------|-----------------|
| Connector                   | Terminal |        |                 |
| E30                         | 2        | Ground | Battery voltage |
|                             | 5        |        |                 |

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> GO TO 2.

### 2. CHECK DAYTIME RUNNING LIGHT RELAY FUSE

Check that the following fuses are not blown.

| Unit                  | Location       | Fuse No. | Capacity |
|-----------------------|----------------|----------|----------|
| Daytime running light | Fuse block J/B | 29       | 10A      |

Is the fuse blown?

- YES >> Replace the blown fuse after repairing the affected circuit.  
NO >> Repair or replace the harness or connector.

### 3. CHECK DAYTIME RUNNING LIGHT RELAY CONTROL CIRCUIT

1. Check continuity between the IPDM E/R harness connector and the daytime running light relay harness connector.

| Daytime running light relay |          | IPDM E/R  |          | Continuity |
|-----------------------------|----------|-----------|----------|------------|
| Connector                   | Terminal | Connector | Terminal |            |
| E30                         | 1        | E46       | 42       | Yes        |

2. Check continuity between the daytime running light relay harness connector and ground.

| Connector | Terminal | —      | Continuity |
|-----------|----------|--------|------------|
| E30       | 1        | Ground | No         |

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Repair or replace the harness or connector.

### 4. CHECK DAYTIME RUNNING LIGHT RELAY

# DAYTIME RUNNING LIGHT RELAY CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

Check the daytime running light relay. Refer to [EXL-94. "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Replace relay.

### 5. CHECK DAYTIME RUNNING LIGHT CIRCUIT (OPEN OR SHORT TO GROUND)

1. Check continuity between the daytime running light relay harness connector and the front combination lamp harness connector.

| Daytime running light relay |          | Front combination lamp |           |           | Continuity |
|-----------------------------|----------|------------------------|-----------|-----------|------------|
| Connector                   | Terminal |                        | Connector | Terminals |            |
| E30                         | 3        | LH                     | E21       | 3, 8      | Yes        |
|                             |          | RH                     | E20       |           |            |

2. Check continuity between the daytime running light relay harness connector and the rear combination lamp harness connector.

| Daytime running light relay |          | Rear combination lamp |           |           | Continuity |
|-----------------------------|----------|-----------------------|-----------|-----------|------------|
| Connector                   | Terminal |                       | Connector | Terminals |            |
| E30                         | 3        | LH                    | B25       | 1         | Yes        |
|                             |          | RH                    | B42       |           |            |

3. Check continuity between the daytime running light relay harness connector and the license plate lamp harness connector.

| Daytime running light relay |          | License plate lamp |           |           | Continuity |
|-----------------------------|----------|--------------------|-----------|-----------|------------|
| Connector                   | Terminal |                    | Connector | Terminals |            |
| E30                         | 3        | LH                 | B74       | 1         | Yes        |
|                             |          | RH                 | B75       |           |            |

4. Check continuity between the daytime running light relay harness connector and ground.

| Daytime running light relay |          | (-)    |  | Continuity |
|-----------------------------|----------|--------|--|------------|
| Connector                   | Terminal |        |  |            |
| E30                         | 3        | Ground |  | No         |

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair or replace the harness or connector.

### 6. CHECK DAYTIME RUNNING LIGHT GROUND CIRCUIT FOR OPEN

1. Disconnect front combination lamp connector in question.
2. Check continuity between the front combination lamp connector and ground.

| Connector | Terminal | —      | Continuity |
|-----------|----------|--------|------------|
| LH E21    | 7        | Ground | Yes        |
| RH E20    |          |        |            |

3. Check continuity between the rear combination lamp connector and ground.

| Connector | Terminal | —      | Continuity |
|-----------|----------|--------|------------|
| LH B25    | 6        | Ground | Yes        |
| RH B42    |          |        |            |

4. Check continuity between the license plate lamp connector and ground.

# DAYTIME RUNNING LIGHT RELAY CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

| Connector | Terminal | —      | Continuity |
|-----------|----------|--------|------------|
| LH B74    | 2        | Ground | Yes        |
| RH B75    |          |        |            |

### Is the inspection result normal?

- YES >> Inspect daytime running light bulb.  
NO >> Repair or replace the harness or connector.

## Component Inspection

INFOID:0000000011539765

### 1. CHECK DAYTIME RUNNING LIGHT RELAY

1. Turn ignition switch OFF.
2. Remove daytime running light relay.
3. Check the continuity between daytime running light relay terminals 3 and 5 when voltage is supplied between terminals 1 and 2.

| Terminals | Condition   | Continuity |
|-----------|---|------------|
| 3 and 5   | 12V direct current supply between terminals 1 and 2 | Yes        |
|           | No current supply                                   | No         |

### Is the inspection result normal?

- YES >> Inspection End.  
NO >> Replace daytime running light relay.

# FRONT FOG LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## FRONT FOG LAMP CIRCUIT

### Description

INFOID:0000000011539766

The IPDM E/R (intelligent power distribution module engine room) controls the front fog lamp relay based on inputs from the BCM over the CAN communication lines. When the front fog lamp relay is energized, power flows from the front fog lamp relay in the IPDM E/R to the front fog lamps.

### Component Function Check

INFOID:0000000011539767

#### 1. CHECK FRONT FOG LAMP OPERATION

##### ⊗ WITHOUT CONSULT

1. Activate IPDM E/R auto active test. Refer to [EXL-24, "Diagnosis Description"](#) (with Intelligent Key system) or [EXL-28, "Diagnosis Description"](#) (without Intelligent Key system).
2. Check that the front fog lamp is turned ON.

##### Ⓜ WITH CONSULT

1. Select EXTERNAL LAMP of IPDM E/R active test item.
2. While operating the test items, check that the front fog lamp is turned ON.

**FOG** : Front fog lamp ON

**OFF** : Front fog lamp OFF

Is the inspection result normal?

- YES >> Front fog lamp circuit is normal.  
NO >> Refer to [EXL-95, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000011539768

Regarding Wiring Diagram information, refer to [EXL-53, "Wiring Diagram"](#).

#### 1. CHECK FRONT FOG LAMP FUSE

1. Turn the ignition switch OFF.
2. Check that the following fuse is not blown.

| Unit           | Location | Fuse No. | Capacity |
|----------------|----------|----------|----------|
| Front fog lamp | IPDM E/R | 40       | 15A      |

Is the fuse blown?

- YES >> Replace the fuse after repairing the affected circuit.  
NO >> GO TO 2.

#### 2. CHECK FRONT FOG LAMP OUTPUT VOLTAGE

##### Ⓜ CONSULT

1. Disconnect the front fog lamp harness connector in question.
2. Turn the ignition switch ON.
3. Turn the front fog lamps ON.
4. Check the voltage between the front fog lamp harness connector and ground.

| (+)       |     | Terminal | (-)    | Voltage         |
|-----------|-----|----------|--------|-----------------|
| Connector |     |          |        |                 |
| LH        | E27 | 1        | Ground | Battery voltage |
| RH        | E28 |          |        |                 |

Is the inspection result normal?

- YES >> GO TO 4.

## FRONT FOG LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

NO >> GO TO 3.

### 3. CHECK FRONT FOG LAMP OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between the IPDM E/R harness connector and the front fog lamp harness connector.

| IPDM E/R  |          | Front fog lamp |          | Continuity |
|-----------|----------|----------------|----------|------------|
| Connector | Terminal | Connector      | Terminal |            |
| RH        | E47      | 53             | E28      | Yes        |
| LH        |          | 54             | E27      |            |

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-31, "Removal and Installation"](#) (with Intelligent Key system) or [PCS-60, "Removal and Installation"](#) (without Intelligent Key system).

NO >> Repair or replace the harness or connector.

### 4. CHECK FRONT FOG LAMP GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Check continuity between the front fog lamp harness connector terminal 2 and ground.

| Connector | Terminal | —      | Continuity |
|-----------|----------|--------|------------|
| RH        | E28      | Ground | Yes        |
| LH        | E27      |        |            |

Is the inspection result normal?

YES >> Inspect the fog lamp bulb.

NO >> Repair or replace the harness or connector.



# PARKING LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## PARKING LAMP CIRCUIT

### Description

INFOID:0000000011539769

The IPDM E/R (intelligent power distribution module engine room) controls the tail lamp relay based on inputs from the BCM over the CAN communication lines. When the tail lamp relay is energized, power flows through fuse 36, located in the IPDM E/R. Power then flows to the front and rear combination lamps, license plate lamps.

### Component Function Check

INFOID:0000000011539770

#### 1. CHECK PARKING LAMP OPERATION

##### ⊗ WITHOUT CONSULT

1. Activate IPDM E/R auto active test. Refer to [EXL-24, "Diagnosis Description"](#) (with Intelligent Key system) or [EXL-28, "Diagnosis Description"](#) (without Intelligent Key system).
2. Check that the parking lamp is turned ON.

##### Ⓜ WITH CONSULT

1. Select EXTERNAL LAMP of IPDM E/R active test item.
2. While operating the test items, check that the parking lamp is turned ON.

**TAIL : Parking lamp ON**  
**OFF : Parking lamp OFF**

Is the inspection result normal?

- YES >> Parking lamp circuit is normal.  
NO >> Refer to [EXL-97, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000011539771

Regarding Wiring Diagram information, refer to [EXL-68, "Wiring Diagram"](#).

#### 1. CHECK PARKING LAMP FUSES

1. Turn the ignition switch OFF.
2. Check that the following fuses are not blown.

| Unit          | Location | Fuse No. | Capacity |
|---------------|----------|----------|----------|
| Parking lamps | IPDM E/R | 36       | 10A      |

Is the fuse blown?

- YES >> Replace the blown fuse after repairing the affected circuit.  
NO >> GO TO 2.

#### 2. CHECK TAIL LAMP RELAY OUTPUT (VOLTAGE)

1. Disconnect the front or rear combination lamp connector or license plate lamp connector in question.
2. Turn the ignition switch ON.
3. Turn the parking lamps ON.
4. With the parking lamps ON, check voltage between the front combination lamp front (accent) connector and ground.

| (+)       |     | Terminal | (-)    | Voltage (Approx.) |
|-----------|-----|----------|--------|-------------------|
| Connector |     |          |        |                   |
| LH        | E21 | 3        | Ground | Battery voltage   |
| RH        | E20 |          |        |                   |

## PARKING LAMP CIRCUIT

### < DTC/CIRCUIT DIAGNOSIS >

5. With the parking lamps ON, check voltage between the front combination lamp (side marker) connector and ground.

| (+)       |     | Terminal | (-)    | Voltage<br>(Approx.) |
|-----------|-----|----------|--------|----------------------|
| Connector |     |          |        |                      |
| LH        | E21 | 8        | Ground | Battery voltage      |
| RH        | E20 |          |        |                      |

6. With the parking lamps ON, check voltage between the rear combination lamp connector and ground.

| (+)       |     | Terminal | (-)    | Voltage<br>(Approx.) |
|-----------|-----|----------|--------|----------------------|
| Connector |     |          |        |                      |
| LH        | B25 | 1        | Ground | Battery voltage      |
| RH        | B42 |          |        |                      |

7. With the parking lamps ON, check voltage between the license plate lamp connector and ground.

| (+)       |     | Terminal | (-)    | Voltage<br>(Approx.) |
|-----------|-----|----------|--------|----------------------|
| Connector |     |          |        |                      |
| LH        | B74 | 1        | Ground | Battery voltage      |
| RH        | B75 |          |        |                      |

Are the inspection results normal?

- YES >> GO TO 4.  
NO >> GO TO 3.

### 3. CHECK PARKING LAMP CIRCUIT (OPEN)

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between the IPDM E/R harness connector and the front combination lamp (accent) harness connector.

| IPDM E/R  |          |           | Front combination lamp (accent) |   | Continuity |
|-----------|----------|-----------|---------------------------------|---|------------|
| Connector | Terminal | Connector | Terminal                        |   |            |
| LH        | E45      | 27        | E21                             | 3 | Yes        |
| RH        |          |           | E20                             |   |            |

4. Check continuity between the IPDM E/R harness connector and the front combination lamp (side marker) harness connector.

| IPDM E/R  |          |           | Front combination lamp (side marker) |   | Continuity |
|-----------|----------|-----------|--------------------------------------|---|------------|
| Connector | Terminal | Connector | Terminal                             |   |            |
| LH        | E45      | 27        | E21                                  | 8 | Yes        |
| RH        |          |           | E20                                  |   |            |

5. Check continuity between the IPDM E/R harness connector and the rear combination lamp harness connector.

| IPDM E/R  |          |           | Rear combination lamp |  | Continuity |
|-----------|----------|-----------|-----------------------|--|------------|
| Connector | Terminal | Connector | Terminal              |  |            |

# PARKING LAMP CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

|    |     |    |     |   |     |
|----|-----|----|-----|---|-----|
| LH | E45 | 28 | B25 | 1 | Yes |
| RH |     |    | B42 |   |     |

6. Check continuity between the IPDM E/R harness connector and license plate lamp connector.

| IPDM E/R  |     |          | License plate lamp |          | Continuity |
|-----------|-----|----------|--------------------|----------|------------|
| Connector |     | Terminal | Connector          | Terminal |            |
| LH        | E45 | 28       | B74                | 1        | Yes        |
| RH        |     |          | B75                |          |            |

Are the inspection results normal?

YES >> Replace IPDM E/R. Refer to [PCS-31, "Removal and Installation"](#) (with Intelligent Key system) or [PCS-60, "Removal and Installation"](#) (without Intelligent Key system).

NO >> Repair or replace the harness or connector.

## 4. CHECK PARKING LAMP GROUND CIRCUITS

1. Check continuity between the front combination lamp (accent) harness connector and ground.

| (+)       |     |          | (-)    | Continuity |
|-----------|-----|----------|--------|------------|
| Connector |     | Terminal |        |            |
| LH        | E21 | 7        | Ground | Yes        |
| RH        | E20 |          |        |            |

2. Check continuity between the front combination lamp (side marker) harness connector and ground.

| (+)       |     |          | (-)    | Continuity |
|-----------|-----|----------|--------|------------|
| Connector |     | Terminal |        |            |
| LH        | E21 | 7        | Ground | Yes        |
| RH        | E20 |          |        |            |

3. Check continuity between the rear combination lamp harness connector and ground.

| (+)       |     |          | (-)    | Continuity |
|-----------|-----|----------|--------|------------|
| Connector |     | Terminal |        |            |
| LH        | B25 | 6        | Ground | Yes        |
| RH        | B42 |          |        |            |

4. Check continuity between the license plate lamp harness connector and ground.

| (+)       |     |          | (-)    | Continuity |
|-----------|-----|----------|--------|------------|
| Connector |     | Terminal |        |            |
| LH        | B74 | 2        | Ground | Yes        |
| RH        | B75 |          |        |            |

Are the inspection results normal?

YES >> Inspect the parking lamp bulb.

NO >> Repair or replace the harness or connector.

# TURN SIGNAL LAMP CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## TURN SIGNAL LAMP CIRCUIT

### Description

INFOID:000000011539772

The BCM monitors inputs from the combination switch to determine when to activate the turn signals. The BCM outputs voltage direction to the left and right turn signals during turn signal operation or both during hazard warning operation. The BCM sends a turn signal indicator request to the combination meter via the CAN communication lines.

The BCM performs the fast flasher operation (fail-safe) if any bulb or harness of the turn signal lamp circuit is open.

#### NOTE:

Turn signal lamp blinks at normal speed when using the hazard warning lamp.

### Component Function Check

INFOID:000000011539773

#### 1. CHECK TURN SIGNAL LAMP

##### CONSULT

1. Select FLASHER of BCM (FLASHER) active test item.
2. With operating the test items, check that the turn signal lamp blinks.

**LH** : Turn signal lamps (LH) ON  
**RH** : Turn signal lamps (RH) ON  
**OFF** : The turn signal lamps OFF

##### Does the turn signal lamp blink?

- YES >> Turn signal lamp circuit is normal.  
NO >> Refer to [EXL-100, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:000000011539774

Regarding Wiring Diagram information, refer to [EXL-58, "Wiring Diagram"](#).

#### 1. CHECK TURN SIGNAL LAMP BULB

Check the applicable lamp bulb to be sure the proper bulb standard is in use and the bulb is not open.

##### Is the bulb OK?

- YES >> GO TO 2.  
NO >> Replace the bulb.


#### 2. CHECK TURN SIGNAL LAMP OUTPUT VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect the front or rear combination lamp harness connector or the door mirror harness connector (if equipped with turn signal in mirror) in question.
3. Turn the ignition switch ON.
4. Operate the turn signal switch.
5. While the turn signal is operating, check the voltage between the front combination lamp harness connector and ground.


| (+)       |          | (-) | Voltage<br>(Approx.) |
|-----------|----------|-----|----------------------|
| Connector | Terminal |     |                      |

# TURN SIGNAL LAMP CIRCUIT


## < DTC/CIRCUIT DIAGNOSIS >
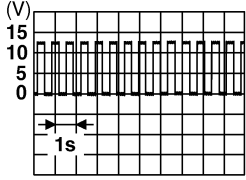
|    |     |   |        |   |
|----|-----|---|--------|---|
| RH | E20 | 4 | Ground |  |
| LH | E21 |   |        |   |

6. While the turn signal is operating, check the voltage between the rear combination lamp harness connector and ground.
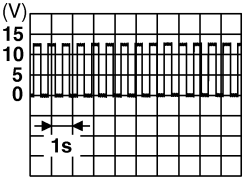
| (+)       |          | (-) | Voltage<br>(Approx.) |   |
|-----------|----------|-----|----------------------|---|
| Connector | Terminal |     |                      |   |
| RH        | B42      | 4   | Ground               |  |
| LH        | B25      |     |                      |   |

7. While the turn signal is operating, check the voltage between the door mirror harness connector and ground.
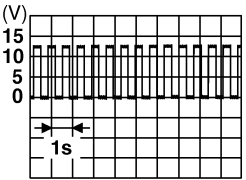
| (+)       |          | (-) | Voltage<br>(Approx.) |   |
|-----------|----------|-----|----------------------|---|
| Connector | Terminal |     |                      |   |
| RH        | D106     | 10  | Ground               |  |
| LH        | D7       |     |                      |   |

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> GO TO 3.

### 3. CHECK TURN SIGNAL LAMP CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect BCM harness connector in question.
3. Check continuity between the BCM harness connector and the front combination lamp harness connector.

With Intelligent Key

| BCM       |          | Front combination lamp |          | Continuity |
|-----------|----------|------------------------|----------|------------|
| Connector | Terminal | Connector              | Terminal |            |
| LH        | M85      | E21                    | 4        | Yes        |
| RH        |          | E20                    |          |            |

Without Intelligent Key

| BCM       |          | Front combination lamp |          | Continuity |
|-----------|----------|------------------------|----------|------------|
| Connector | Terminal | Connector              | Terminal |            |
| LH        | B57      | E21                    | 4        | Yes        |
| RH        |          | E20                    |          |            |

# TURN SIGNAL LAMP CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

4. Check continuity between the BCM harness connector and the rear combination lamp harness connector.

With Intelligent Key

| BCM       |          | Rear combination lamp |          | Continuity |
|-----------|----------|-----------------------|----------|------------|
| Connector | Terminal | Connector             | Terminal |            |
| LH        | M85      | 85                    | B25      | Yes        |
| RH        |          | 84                    | B42      |            |

Without Intelligent Key

| BCM       |          | Rear combination lamp |          | Continuity |
|-----------|----------|-----------------------|----------|------------|
| Connector | Terminal | Connector             | Terminal |            |
| LH        | B57      | 41                    | B25      | Yes        |
| RH        |          | 42                    | B42      |            |

5. Check continuity between the BCM harness connector and the door mirror harness connector in question.

With Intelligent Key

| BCM       |          | Door mirror |          | Continuity |
|-----------|----------|-------------|----------|------------|
| Connector | Terminal | Connector   | Terminal |            |
| LH        | M85      | 85          | D7       | Yes        |
| RH        |          | 84          | D106     |            |

Without Intelligent Key

| BCM       |          | Door mirror |          | Continuity |
|-----------|----------|-------------|----------|------------|
| Connector | Terminal | Connector   | Terminal |            |
| LH        | B57      | 41          | D7       | Yes        |
| RH        |          | 42          | D106     |            |

Is the inspection results normal?

YES >> GO TO 4.

NO >> Repair or replace the harness or connectors.

## 4.CHECK TURN SIGNAL LAMP SHORT CIRCUIT

1. Check continuity between the BCM harness connector and ground.

| BCM                           |          | Ground | Continuity |
|-------------------------------|----------|--------|------------|
| Connector                     | Terminal |        |            |
| M85 (with Intelligent Key)    | 84       | Ground | No         |
|                               | 85       |        |            |
| B57 (without Intelligent Key) | 41       |        |            |
|                               | 42       |        |            |

Are the inspection results normal?

YES >> Replace BCM. Refer to [BCS-76. "Removal and Installation"](#) (with Intelligent Key system) or [BCS-133. "Removal and Installation"](#) (without Intelligent Key system).

NO >> Repair or replace the harness or connectors.

## 5.CHECK TURN SIGNAL LAMP GROUND CIRCUIT

1. Turn the ignition switch OFF.

2. Check continuity between the front combination lamp harness connector or the rear combination lamp harness connector or the door mirror harness connector in question and ground.

| Front combination lamp |          | (-) | Continuity |
|------------------------|----------|-----|------------|
| Connector              | Terminal |     |            |
|                        |          |     |            |

# TURN SIGNAL LAMP CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

|    |     |   |        |     |
|----|-----|---|--------|-----|
| LH | E21 | 7 | Ground | Yes |
| RH | E20 |   |        |     |

A

3. Check continuity between the rear combination lamp harness connector and ground.

B

| Rear combination lamp |     |   | (-)    | Continuity |
|-----------------------|-----|---|--------|------------|
| Connector             |     |   |        |            |
| LH                    | B25 | 6 | Ground | Yes        |
| RH                    | B42 |   |        |            |

C

4. Check continuity between the door mirror harness connector and ground.

D

| Door mirror |      |   | (-)    | Continuity |
|-------------|------|---|--------|------------|
| Connector   |      |   |        |            |
| LH          | D7   | 8 | Ground | Yes        |
| RH          | D106 |   |        |            |

E

F

Are the inspection results normal?

- YES >> Replace the malfunctioning lamp.
- NO >> Repair or replace the harness or connectors.

G

H

I

J

K

EXL

M

N

O

P

# OPTICAL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

## OPTICAL SENSOR

### Description

INFOID:0000000011539775

The optical sensor measures ambient light and transmits the optical sensor signal to the BCM.

### Component Function Check

INFOID:0000000011539776

#### 1.CHECK OPTICAL SENSOR SIGNAL BY CONSULT

##### CONSULT

1. Turn the ignition switch ON.
2. Select OPTI SEN of BCM (HEAD LAMP) DATA MONITOR item.
3. Turn the lighting switch to AUTO.

| Monitor item    | Condition                         | Voltage        |
|-----------------|-----------------------------------|----------------|
| OPTI SEN (DTCT) | When outside of vehicle is bright | 3.1V or more * |
|                 | When outside of vehicle is dark   | 0.6V or less   |

\*: Illuminates the optical sensor. The value may be less than the standard value if brightness is weak.

##### Is the inspection result normal?

- YES >> Optical sensor is normal.  
NO >> Refer to [EXL-104, "Diagnosis Procedure"](#).

### Diagnosis Procedure

INFOID:0000000011539777

Regarding Wiring Diagram information, refer to [EXL-46, "Wiring Diagram"](#).

#### 1.CHECK OPTICAL SENSOR POWER SUPPLY INPUT

1. Turn the ignition switch OFF.
2. Disconnect the optical sensor harness connector.
3. Turn the ignition switch ON.
4. Turn the lighting switch to AUTO.
5. Check the voltage between the optical sensor harness connector and ground.

| (+)       |          | (-)    | Voltage (Approx.) |
|-----------|----------|--------|-------------------|
| Connector | Terminal |        |                   |
| M72       | 1        | Ground | 5 V               |

##### Is the inspection result normal?

- YES >> GO TO 2.  
NO >> GO TO 3.

#### 2.CHECK OPTICAL SENSOR GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Check continuity between the optical sensor harness connector and ground.

| (+)       |          | (-)    | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal |        |            |
| M72       | 3        | Ground | Yes        |

##### Is the inspection result normal?

- YES >> GO TO 4.  
NO >> GO TO 5.

#### 3.CHECK OPTICAL SENSOR POWER SUPPLY FOR OPEN CIRCUIT



# OPTICAL SENSOR

## < DTC/CIRCUIT DIAGNOSIS >

1. Turn the ignition switch OFF.
2. Disconnect the BCM harness connector.
3. Check continuity between optical sensor harness connector and BCM harness connector.

| Optical sensor |          | BCM       |          | Continuity |
|----------------|----------|-----------|----------|------------|
| Connector      | Terminal | Connector | Terminal |            |
| M72            | 1        | M84       | 17       | Yes        |

4. Check continuity between optical sensor harness connector and ground.

| (+)       |          | (-)    | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal |        |            |
| M72       | 1        | Ground | No         |

### Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-76, "Removal and Installation"](#) (with Intelligent Key system) or [BCS-133, "Removal and Installation"](#) (without Intelligent Key system).

NO >> Repair or replace the harness or connectors.

## 4. CHECK OPTICAL SENSOR SIGNAL OPEN CIRCUIT

1. Disconnect optical sensor connector and BCM connector.
2. Check continuity between optical sensor harness connector and BCM harness connector.

| Optical sensor |          | BCM       |          | Continuity |
|----------------|----------|-----------|----------|------------|
| Connector      | Terminal | Connector | Terminal |            |
| M72            | 2        | M84       | 14       | Yes        |

3. Check continuity between optical sensor harness connector and ground.

| Connector | Terminal | (-)    | Continuity |
|-----------|----------|--------|------------|
| M72       | 2        | Ground | No         |

### Is the inspection result normal?

YES >> Replace the optical sensor. Refer to [EXL-131, "Removal and Installation"](#).

NO >> Repair or replace harness or connectors.

## 5. CHECK OPTICAL SENSOR GROUND FOR OPEN CIRCUIT

1. Disconnect the BCM harness connector.
2. Check continuity between optical sensor harness connector and BCM harness connector.

| Optical sensor |          | BCM       |          | Continuity |
|----------------|----------|-----------|----------|------------|
| Connector      | Terminal | Connector | Terminal |            |
| M72            | 3        | M84       | 18       | Yes        |

### Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-76, "Removal and Installation"](#) (with Intelligent Key system) or [BCS-133, "Removal and Installation"](#) (without Intelligent Key system).

NO >> Repair or replace harness or connector.

# HAZARD SWITCH

< DTC/CIRCUIT DIAGNOSIS >

## HAZARD SWITCH

### Component Function Check

INFOID:000000011539778

#### 1. CHECK HAZARD SWITCH SIGNAL BY CONSULT

##### CONSULT DATA MONITOR

1. Turn ignition switch ON.
2. Select HAZARD SW of BCM (FLASHER) Data Monitor item.
3. While operating the hazard switch, check the monitor status.

| Monitor item | Condition     |     | Monitor status |
|--------------|---------------|-----|----------------|
| HAZARD SW    | Hazard switch | ON  | On             |
|              |               | OFF | Off            |

Is the inspection result normal?

- YES >> Hazard switch circuit is normal.  
 NO >> Refer to [EXL-106, "Diagnosis Procedure"](#).


### Diagnosis Procedure

INFOID:000000011539779

Regarding Wiring Diagram information, refer to [EXL-58, "Wiring Diagram"](#).

#### 1. CHECK HAZARD SWITCH SIGNAL INPUT

1. Turn ignition switch OFF.
2. Disconnect hazard switch connector.
3. Turn ignition switch ON.
4. Check voltage between hazard switch harness connector and ground.
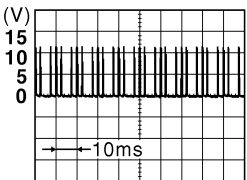
| (+)           |          | (-)    | Voltage (Approx.)   |
|---------------|----------|--------|---|
| Hazard switch |          |        |   |
| Connector     | Terminal |        |   |
| M102          | 2        | Ground |  <p style="text-align: right; font-size: small;">JPMIA0154GB</p> |

Is the inspection result normal?

- YES >> GO TO 4.  
 NO >> GO TO 2.

#### 2. CHECK HAZARD SWITCH SIGNAL OPEN CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connector.
3. Check continuity between hazard harness connector and BCM harness connector.

| Hazard switch |          | BCM   |          | Continuity |
|---------------|----------|---|----------|------------|
| Connector     | Terminal | Connector   | Terminal |            |
| M102          | 2        | M85 (with Intelligent Key)<br>M21 (without Intelligent Key) | 29       | Yes        |

Is the inspection result normal?

- YES >> GO TO 3.

# HAZARD SWITCH

## < DTC/CIRCUIT DIAGNOSIS >

NO >> Repair or replace harness or connector.

### 3. CHECK HAZARD SWITCH SIGNAL SHORT CIRCUIT

Check continuity between hazard switch harness connector and ground.

| Hazard switch |          | Ground | Continuity |
|---------------|----------|--------|------------|
| Connector     | Terminal |        |            |
| M102          | 2        |        | No         |

Is the inspection result normal?

YES >> Replace BCM. Refer to [BCS-76. "Removal and Installation"](#) (with Intelligent Key system) or [BCS-133. "Removal and Installation"](#) (without Intelligent Key system).

NO >> Repair or replace harness or connector.

### 4. CHECK HAZARD SWITCH GROUND OPEN CIRCUIT

Check continuity between hazard switch harness connector and ground.

| Hazard switch |          | Ground | Continuity |
|---------------|----------|--------|------------|
| Connector     | Terminal |        |            |
| M102          | 3        |        | Yes        |

Is the inspection result normal?

YES >> Replace hazard switch. Refer to [EXL-130. "Removal and Installation"](#).

NO >> Repair or replace harness or connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

EXL

# EXTERIOR LIGHTING SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### EXTERIOR LIGHTING SYSTEM SYMPTOMS

#### Symptom Table

INFOID:0000000011539780

**CAUTION:**

Perform the self-diagnosis with CONSULT before the symptom diagnosis. Perform the trouble diagnosis if any DTC is detected.

| Symptom   |   | Possible cause   | Inspection item   |
|---|---|--|---|
| Headlamp does not switch to the high beam.  | One side  | <ul style="list-style-type: none"> <li>Bulb</li> <li>Fuse</li> <li>Harness between IPDM E/R and the front combination lamp</li> <li>IPDM E/R</li> </ul>  | Headlamp (HI) circuit<br>Refer to <a href="#">EXL-88</a> .  |
|   | Both sides  | —  | <b>Symptom diagnosis</b><br>"BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM"<br>Refer to <a href="#">EXL-111</a> .  |
| High beam indicator lamp is not turned ON.<br>(Headlamp switches to the high beam.) |   | <ul style="list-style-type: none"> <li>Combination meter</li> <li>BCM</li> </ul>   | <ul style="list-style-type: none"> <li>Combination meter.<br/>Data monitor "HI-BEAM IND"</li> <li>BCM (HEAD LAMP)<br/>Active test "HEADLAMP"</li> </ul>                           |
| Headlamp does not switch to the low beam.   | One side  | <ul style="list-style-type: none"> <li>Bulb</li> <li>Fuse</li> <li>Harness between IPDM E/R and the front combination lamp</li> <li>IPDM E/R</li> </ul>  | Headlamp (LO) circuit<br>Refer to <a href="#">EXL-90</a> .  |
|   | Both sides  | <ul style="list-style-type: none"> <li>Combination switch (lighting and turn signal switch)</li> <li>Harness between the combination switch (lighting and turn signal switch) and BCM</li> <li>BCM</li> </ul>          | Combination switch (lighting and turn signal switch)<br>Refer to <a href="#">EXL-12</a> (with Intelligent Key system) or <a href="#">EXL-12</a> (without Intelligent Key system). |
|   |   | High beam request signal   | <ul style="list-style-type: none"> <li>BCM</li> <li>IPDM E/R</li> </ul>   |
| Headlamp does not turn ON.  | One side  | <ul style="list-style-type: none"> <li>Fuse</li> <li>Bulb</li> <li>Harness between IPDM E/R and the front combination lamp</li> <li>Harness between the front combination lamp and ground</li> <li>IPDM E/R</li> </ul> | Headlamp (LO) circuit<br>Refer to <a href="#">EXL-90</a>  |
|   | Both sides  | —  | <b>Symptom diagnosis</b><br>"BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON"<br>Refer to <a href="#">EXL-113</a> .  |
| Headlamp does not turn OFF.   | When the ignition switch is turned ON                                   | <ul style="list-style-type: none"> <li>BCM</li> <li>Combination switch (lighting and turn signal switch)</li> </ul>  | Combination switch (lighting and turn signal switch)<br>Refer to <a href="#">EXL-12</a> (with Intelligent Key system) or <a href="#">EXL-15</a> (without Intelligent Key system). |
|   | The ignition switch is turned OFF (After activating the battery saver). | IPDM E/R   | —   |

# EXTERIOR LIGHTING SYSTEM SYMPTOMS

## < SYMPTOM DIAGNOSIS >

| Symptom   | Possible cause   | Inspection item   |   |
|---|--|---|---|
| Headlamp is not turned ON/OFF with the lighting switch AUTO.  | <ul style="list-style-type: none"> <li>Combination switch (lighting and turn signal switch)</li> <li>Harness between the combination switch (lighting and turn signal switch) and BCM</li> <li>BCM</li> <li>IPDM E/R</li> </ul>                        | Combination switch (lighting and turn signal switch)<br>Refer to <a href="#">EXL-12</a> (with Intelligent Key system) or <a href="#">EXL-15</a> (without Intelligent Key system).                       |   |
|   | <ul style="list-style-type: none"> <li>Optical sensor</li> <li>Harness between the optical sensor and BCM</li> <li>BCM</li> </ul>  | Optical sensor<br>Refer to <a href="#">EXL-104</a> .  |   |
| Daytime running light system does not activate.   | —  | <b>Symptom diagnosis</b><br>"DAYTIME LIGHT SYSTEM INOPERATIVE"<br>Refer to <a href="#">EXL-112</a> .  |   |
| Front fog lamp is not turned ON.  | One side <ul style="list-style-type: none"> <li>Front fog lamp bulb</li> <li>Harness between IPDM E/R and the front fog lamp</li> <li>Harness between the front fog lamp and ground</li> <li>IPDM E/R</li> </ul>                                       | Front fog lamp circuit<br>Refer to <a href="#">EXL-95</a> .   |   |
|   | Both side  | —   | <b>Symptom diagnosis</b><br>"BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON"<br>Refer to <a href="#">EXL-115</a> .   |
| Parking lamp is not turned ON.  | One side <ul style="list-style-type: none"> <li>Fuse</li> <li>Parking lamp bulb</li> <li>Harness between IPDM E/R and the front/rear combination lamp</li> <li>Harness between the front/rear combination lamp and ground</li> <li>IPDM E/R</li> </ul> | Parking lamp circuit<br>Refer to <a href="#">EXL-97</a> .   |   |
|   | Both sides   | —   | <b>Symptom diagnosis</b><br>"PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON"<br>Refer to <a href="#">EXL-114</a> .                                 |
| Turn signal lamp does not blink.  | Indicator lamp is normal.<br>(The applicable side performs the high flasher activation).   | <ul style="list-style-type: none"> <li>Harness between BCM and each turn signal lamp</li> <li>Turn signal lamp bulb</li> <li>Door mirror (if equipped with turn signals in the door mirrors)</li> </ul> | Turn signal lamp circuit<br>Refer to <a href="#">EXL-100</a> .  |
| Turn signal indicator lamp does not blink.  | One side   | Combination meter   | —   |
|   | Both sides<br>(Always)   | <ul style="list-style-type: none"> <li>Turn signal indicator lamp signal</li> <li>Combination meter</li> <li>BCM</li> </ul>   | <ul style="list-style-type: none"> <li>Combination meter.</li> <li>Data monitor "TURN IND"</li> <li>BCM (FLASHER)</li> <li>Active test "FLASHER"</li> </ul> |
|   | Both sides<br>(Does blink when activating the hazard warning lamp with the ignition switch OFF)  | <ul style="list-style-type: none"> <li>The combination meter power supply and the ground circuit</li> <li>Combination meter</li> </ul>  | Combination meter<br>Power supply and the ground circuit<br>Refer to <a href="#">MWI-52</a> .   |
| <ul style="list-style-type: none"> <li>Hazard warning lamp does not activate.</li> <li>Hazard warning lamp continues activating. (Turn signal is normal)</li> </ul> | <ul style="list-style-type: none"> <li>Hazard switch</li> <li>Harness between the hazard switch and BCM</li> <li>BCM</li> </ul>  | Hazard switch<br>Refer to <a href="#">EXL-106</a> .   |   |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
M  
N  
O  
P

EXL

## NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

---

### NORMAL OPERATING CONDITION

#### Description

INFOID:000000011539781

#### AUTO LIGHT SYSTEM

The auto light system may not turn the headlamp ON/OFF immediately after passing a dark area or a bright area (short tunnel, sky bridge, shadowed area etc.). This is normal.

# BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM

< SYMPTOM DIAGNOSIS >

## BOTH SIDE HEADLAMPS DO NOT SWITCH TO HIGH BEAM

### Description

INFOID:0000000011539782

The headlamps (both sides) do not switch to high beam when the lighting switch is in the HI or PASS setting.

### Diagnosis Procedure

INFOID:0000000011539783

#### 1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-74, "Symptom Table"](#) (with Intelligent Key system) or [BCS-131, "Symptom Table"](#) (without Intelligent Key system).

Is the inspection results normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning part.

#### 2.CHECK HEADLAMP (HI) REQUEST SIGNAL INPUT

 CONSULT DATA MONITOR

1. Select HL HI REQ of IPDM E/R DATA MONITOR item.
2. While operating the lighting switch, check the monitor status.

| Monitor item | Condition                |                       | Monitor status |
|--------------|--------------------------|-----------------------|----------------|
| HL HI REQ    | Lighting switch<br>(2nd) | HI or PASS            | ON             |
|              |                          | Except for HI or PASS | OFF            |

Is the inspection results normal?

YES >> GO TO 3

NO >> Replace BCM. Refer to [BCS-76, "Removal and Installation"](#) (with Intelligent Key system) or [BCS-133, "Removal and Installation"](#) (without Intelligent Key system).

#### 3.HEADLAMP (HI) CIRCUIT INSPECTION

Check the headlamp (HI) circuit. Refer to [EXL-88, "Diagnosis Procedure"](#).

Is the inspection results normal?

YES >> Replace IPDM E/R. Refer to [PCS-31, "Removal and Installation"](#) (with Intelligent Key system) or [PCS-60, "Removal and Installation"](#) (without Intelligent Key system).

NO >> Repair or replace the malfunctioning part.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

EXL

# DAYTIME LIGHT SYSTEM INOPERATIVE

< SYMPTOM DIAGNOSIS >

## DAYTIME LIGHT SYSTEM INOPERATIVE

### Description

INFOID:000000011539784

The daytime running light system is inoperative even though the combination switch (lighting and turn signal switch) and parking brake switch are in the normal setting, also whenever engine is operating.

### Diagnosis Procedure

INFOID:000000011539785

#### 1. CHECK DAYTIME RUNNING LIGHT OPERATION

1. Perform BCM(HEADLAMP) DAYTIME RUNNING LIGHT active test. Refer to [BCS-94. "HEADLAMP : CONSULT Function \(BCM - HEAD LAMP\)"](#) (with Intelligent Key system) or [BCS-94. "HEADLAMP : CONSULT Function \(BCM - HEAD LAMP\)"](#) (without Intelligent Key system).
2. Check that the daytime running lights turn on.

Is the inspection results normal?

- YES >> Replace BCM. Refer to [BCS-76. "Removal and Installation"](#) (with Intelligent Key system) or [BCS-133. "Removal and Installation"](#) (without Intelligent Key system).
- NO >> GO TO 2.

#### 2. CHECK DAYTIME RUNNING LIGHT RELAY FUSE

1. Turn ignition switch OFF.
2. Check that the following fuse is not blown.

| Unit                  | Fuse No. | Capacity |
|-----------------------|----------|----------|
| Daytime running light | 29       | 10 A     |

Is the fuse blown?

- YES >> Replace the blown fuse after repairing the affected circuit.
- NO >> GO TO 3.

#### 3. CHECK DAYTIME RUNNING LIGHT BULBS

Check the daytime running light bulbs are not open.

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Replace the bulbs.

#### 4. PERFORM DAYTIME RUNNING LIGHT CIRCUIT INSPECTION

Check the daytime running light circuit. Refer to [EXL-92. "Diagnosis Procedure"](#).

Is the inspection results normal?

- YES >> Replace IPDM E/R. Refer to [PCS-31. "Removal and Installation"](#) (with Intelligent Key system) or [PCS-60. "Removal and Installation"](#) (without Intelligent Key system).
- NO >> Repair or replace the malfunctioning part.



# BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

## BOTH SIDE HEADLAMPS (LO) ARE NOT TURNED ON

### Description

INFOID:0000000011539786

The headlamps (both sides) do not turn ON in any lighting switch setting.

### Diagnosis Procedure

INFOID:0000000011539787

#### 1. CHECK COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH)

Check the combination switch (lighting and turn signal switch). Refer to [BCS-74, "Symptom Table"](#) (with Intelligent Key system) or [BCS-131, "Symptom Table"](#) (without Intelligent Key system).

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning part.

#### 2. CHECK HEADLAMP (LO) REQUEST SIGNAL INPUT

 CONSULT DATA MONITOR

1. Select HL LO REQ of IPDM E/R DATA MONITOR item.
2. While operating the lighting switch, check the monitor status.

| Monitor item | Condition       | Monitor status |     |
|--------------|-----------------|----------------|-----|
| HL LO REQ    | Lighting switch | 2nd            | ON  |
|              |                 | OFF            | OFF |

Is the inspection result normal?

YES >> GO TO 3

NO >> Replace BCM. Refer to [BCS-76, "Removal and Installation"](#) (with Intelligent Key system) or [BCS-133, "Removal and Installation"](#) (without Intelligent Key system).

#### 3. HEADLAMP (LO) CIRCUIT INSPECTION

Check the headlamp (LO) circuit. Refer to [EXL-90, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-31, "Removal and Installation"](#) (with Intelligent Key system) or [PCS-60, "Removal and Installation"](#) (without Intelligent Key system).

NO >> Repair or replace the malfunctioning part.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

EXL

# PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

## PARKING, LICENSE PLATE AND TAIL LAMPS ARE NOT TURNED ON

### Description

INFOID:000000011539788

The parking, license plate and tail lamps do not turn ON in with any lighting switch setting.

### Diagnosis Procedure

INFOID:000000011539789

#### 1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-74, "Symptom Table"](#) (with Intelligent Key system) or [BCS-131, "Symptom Table"](#) (without Intelligent Key system).

Is the inspection results normal?

- YES >> GO TO 2
- NO >> Repair or replace the malfunctioning part.

#### 2.CHECK TAIL LAMP RELAY REQUEST SIGNAL INPUT

##### CONSULT DATA MONITOR

1. Select TAIL & CLR REQ of IPDM E/R DATA MONITOR item.
2. While operating the lighting switch, check the monitor status.

| Monitor item   | Condition       | Monitor status |     |
|----------------|-----------------|----------------|-----|
| TAIL & CLR REQ | Lighting switch | 1st            | ON  |
|                |                 | OFF            | OFF |

Is the inspection results normal?

- YES >> GO TO 3
- NO >> Replace BCM. Refer to [BCS-76, "Removal and Installation"](#) (with Intelligent Key system) or [BCS-133, "Removal and Installation"](#) (without Intelligent Key system).

#### 3.PARK LAMP CIRCUIT INSPECTION

Check the parking lamp circuit. Refer to [EXL-97, "Diagnosis Procedure"](#).

Is the inspection results normal?

- YES >> Replace IPDM E/R. Refer to [PCS-31, "Removal and Installation"](#) (with Intelligent Key system) or [PCS-60, "Removal and Installation"](#) (without Intelligent Key system).
- NO >> Repair or replace the malfunctioning part.

# BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

< SYMPTOM DIAGNOSIS >

## BOTH SIDE FRONT FOG LAMPS ARE NOT TURNED ON

### Description

INFOID:0000000011539790

The front fog lamps do not turn ON in any setting.

### Diagnosis Procedure

INFOID:0000000011539791

#### 1.COMBINATION SWITCH (LIGHTING AND TURN SIGNAL SWITCH) INSPECTION

Check the combination switch (lighting and turn signal switch). Refer to [BCS-74, "Symptom Table"](#) (with Intelligent Key system) or [BCS-131, "Symptom Table"](#) (without Intelligent Key system).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair or replace the malfunctioning part.

#### 2.CHECK FRONT FOG LAMP REQUEST SIGNAL INPUT

##### CONSULT DATA MONITOR

1. Select FR FOG REQ of IPDM E/R DATA MONITOR item.
2. While operating the front fog lamp switch, check the monitor status.

| Monitor item | Condition                                      | Monitor status |
|--------------|--|----------------|
| FR FOG REQ   | Front fog lamp switch<br>(Lighting switch 3rd) | ON             |
|              |  | OFF            |

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace BCM. Refer to [BCS-76, "Removal and Installation"](#) (with Intelligent Key system) or [BCS-133, "Removal and Installation"](#) (without Intelligent Key system).

#### 3.FRONT FOG LAMP CIRCUIT INSPECTION

Check the front fog lamp circuit. Refer to [EXL-95, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> Replace IPDM E/R. Refer to [PCS-31, "Removal and Installation"](#) (with Intelligent Key system) or [PCS-60, "Removal and Installation"](#) (without Intelligent Key system).

NO >> Repair or replace the malfunctioning part.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

EXL

# HEADLAMP

< PERIODIC MAINTENANCE >

## PERIODIC MAINTENANCE

### HEADLAMP

#### Aiming Adjustment

INFOID:000000011539792

#### PREPARATION BEFORE ADJUSTING

Before performing aiming adjustment, check the following:

- Ensure all tires are inflated to correct pressure.
- Place vehicle and screen on level surface.
- Ensure there is no load in vehicle other than the driver (or equivalent weight placed in driver's position).
- Coolant and engine oil filled to correct level, and fuel tank full.
- Remove cargo and/or luggage to maintain an unloaded vehicle condition.
- Confirm spare tire, jack and tools are properly stowed.
- Carefully wipe off any dirt from headlamp lens.


#### CAUTION:

**Do not use organic solvent (thinner, gasoline etc.)**

- Place a driver or equivalent weight of 68.5 kg (150 lb) on the driver seat.
- By hand, bounce the front and rear of the vehicle to settle the suspension and eliminate any static load.
- Place the front tires in the straight ahead position.
- Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.

#### NOTE:

- For headlamp aiming details, refer to regulations in your area.
- By regulation, no means for horizontal aim adjustment is provided from the factory; only vertical aim is adjustable.
- Use adjusting screw to perform aiming adjustment.
- Perform headlamp aiming if:
  - The vehicle front body has been repaired.
  - The front combination lamp has been removed or replaced.
  - Any outfitting has been installed.
  - The vehicle's standard load condition has been substantially increased.

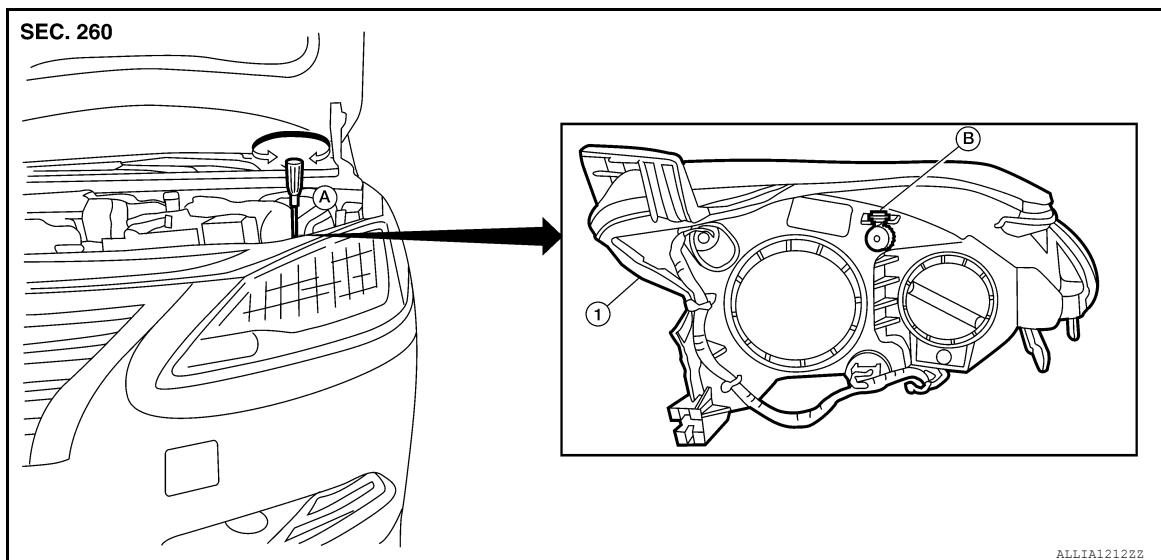

1. Front combination lamp

A. Suitable tool (for aiming adjustment) B. Adjusting screw

#### Aiming Adjustment procedure

1. Position the screen.

#### NOTE:

- Stop the vehicle facing the screen.
  - Place the screen on a plain road vertically.
2. Face the screen with the vehicle. Maintain 10 m (33 ft) between the headlamp bulb center and the screen.
  3. Start the engine. Turn the headlamp (LO) ON.

# HEADLAMP


## < PERIODIC MAINTENANCE >

### CAUTION:

Do not cover the lens surface with tape, etc. The lens is made of resin.

### NOTE:

- Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.
- For horizontal aiming, adjust headlamp until beam pattern is at horizontal center point.

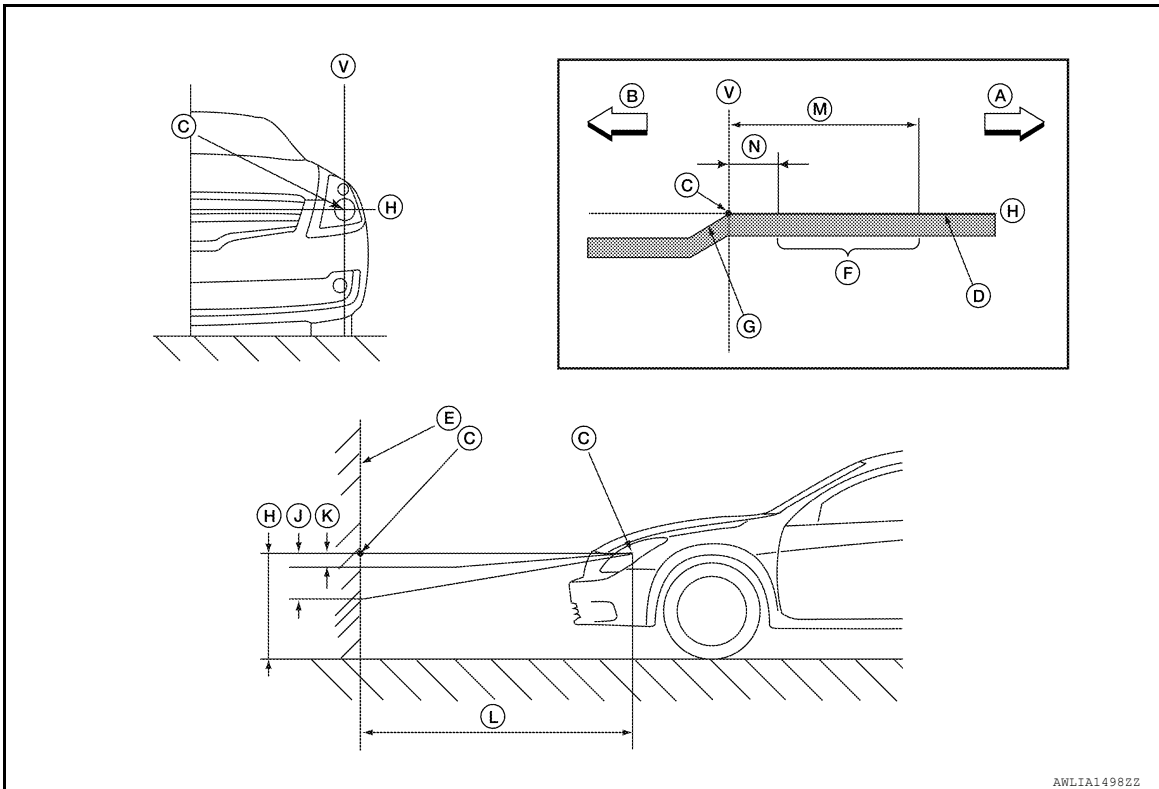

- |                        |  |  |
|------------------------|--|--|
| A. Right               | B. Left                                | C. Center of headlamp bulb (H-V point) |
| D. Cutoff line         | E. Screen                              | F. Aim evaluation segment              |
| G. Step                | H. Horizontal center line of head lamp | J. 26.6 mm (1.05 in)                   |
| K. -13.3 mm (-0.52 in) | L. 7.62 m (25 ft)                      | M. 399 mm (15.71 in)                   |
| N. 133 mm (5.24 in)    | V. Vertical center line of headlamp    |  |

- Basic illuminating area for adjustment should be within the range shown on the aiming chart. Adjust headlamps accordingly.

# FRONT FOG LAMP

< PERIODIC MAINTENANCE >

## FRONT FOG LAMP

### Aiming Adjustment

INFOID:000000011539793

#### PREPARATION BEFORE ADJUSTING

The fog lamp is a semi-sealed beam type which uses a replaceable halogen bulb. Before performing aiming adjustment procedure, check the following:

- Ensure all tires are inflated to correct pressure.
- Place vehicle and screen on level surface.
- Ensure there is no load in vehicle other than the driver (or equivalent weight placed in driver's position).
- Coolant and engine oil filled to correct level, and fuel tank full.
- Remove cargo and/or luggage to maintain an unloaded vehicle condition.
- Confirm spare tire, jack and tools are properly stowed.
- Carefully wipe off any dirt from headlamp lens.

**CAUTION:**

**Do not use organic solvent (thinner, gasoline etc.)**

- Place a driver or equivalent weight of 68.5 kg (150 lb) on the driver seat.
- By hand, bounce the front and rear of the vehicle to settle the suspension and eliminate any static load.
- Place the front tires in the straight ahead position.
- Aim each headlamp individually and ensure other headlamp beam pattern is blocked from screen.

**NOTE:**

- For headlamp aiming details, refer to regulations in your area.
- By regulation, no means for horizontal aim adjustment is provided from the factory; only vertical aim is adjustable.
- Use adjusting screw to perform aiming adjustment.
- Perform headlamp aiming if:
  - The vehicle front body has been repaired.
  - The front combination lamp has been removed or replaced.
  - Any outfitting has been installed.
  - The vehicle's standard load condition has been substantially increased.

#### Aiming Adjustment Procedure

1. Place the screen.

**NOTE:**

- Stop the vehicle facing the wall.
- Place the board on a plain road vertically.

2. Face the vehicle with the screen. Maintain 7.62 m (25.0 ft) between the front fog lamp center and the screen.

3. Start the engine. Turn the front fog lamp ON.


**NOTE:**

Shut off the headlamp light with the board to prevent from illuminating the adjustment screen.

**CAUTION:**

**Do not cover the lens surface with tape etc. The lens is made of resin.**

4. Adjust aiming in the vertical direction by turning the adjusting screw (A).

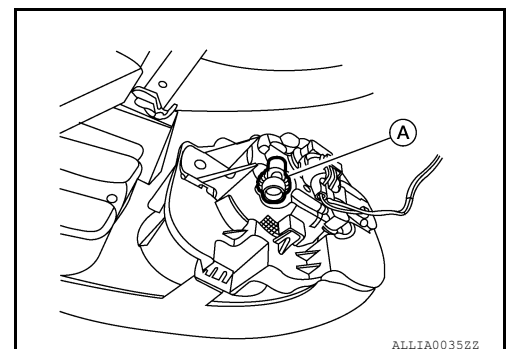


ALLIA003522

# FRONT FOG LAMP

## < PERIODIC MAINTENANCE >

5. Adjust the cutoff line height (A) with the aiming adjustment screw so that the distance (X) between the horizontal center line of front fog lamp (H) and (A) becomes 100 mm (4 in).

- A : Cutoff line
- B : High illuminance area
- H : Horizontal center line of front fog lamp
- V : Vertical center line of front fog lamp
- X : Cutoff line height

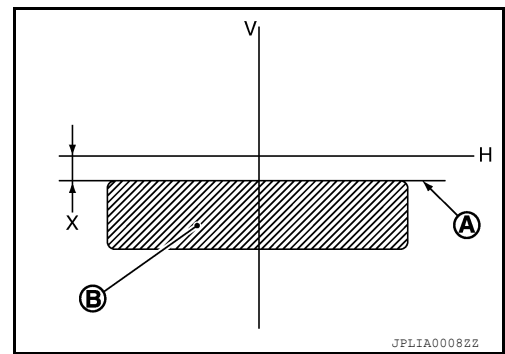

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# FRONT COMBINATION LAMP


< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### FRONT COMBINATION LAMP

Exploded View

INFOID:000000011539794

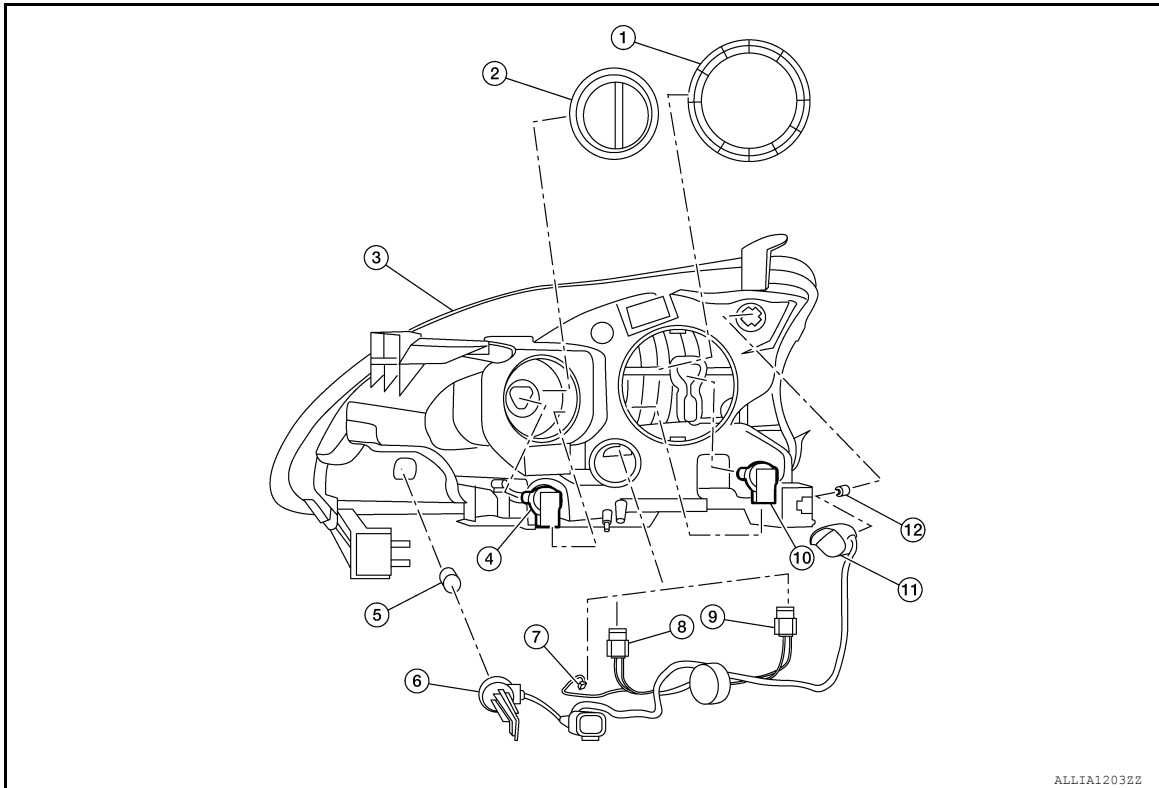

- |                                  |  |   |
|----------------------------------|--|---|
| 1. Large cover (not serviceable) | 2. Small cover (not serviceable)                   | 3. Front combination lamp                         |
| 4. Halogen lamp bulb (high beam) | 5. Turn signal lamp bulb                           | 6. Turn signal lamp bulb socket                   |
| 7. LED harness connector         | 8. Halogen lamp bulb (high beam) harness connector | 9. Halogen lamp bulb (low beam) harness connector |
| 10. Halogen lamp bulb (low beam) | 11. Side marker lamp bulb socket                   | 12. Side marker lamp bulb                         |

### Removal and Installation

INFOID:000000011539795

#### REMOVAL


1. Remove the front bumper fascia. Refer to [EXT-18. "Removal and Installation"](#).



# FRONT COMBINATION LAMP

## < REMOVAL AND INSTALLATION >

2. Remove the front combination lamp bolts (A).
3. Pull the front combination lamp (1) forward.
4. Disconnect the harness connectors from the front combination lamp (1).

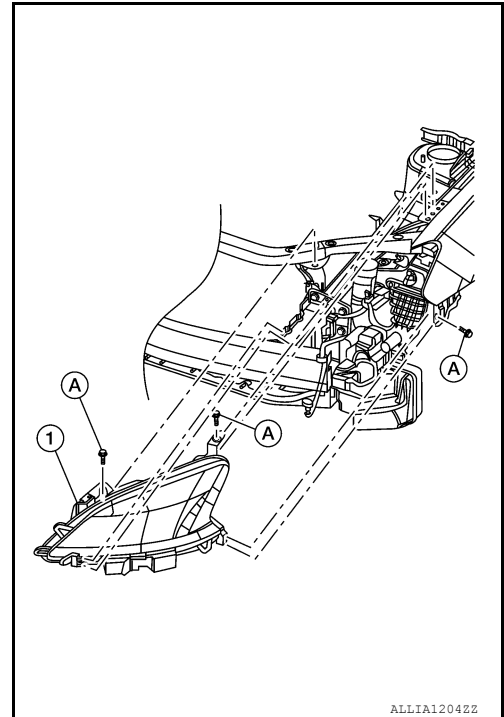

## INSTALLATION

Installation is in the reverse order of removal.

After installation, perform headlamp aiming adjustment. Refer to [EXL-116, "Aiming Adjustment"](#).

## Bulb Replacement

INFOID:000000011539796

### **WARNING:**

**Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.**

### **CAUTION:**

- Do not touch glass surface of the bulb with bare hands or allow oil or grease to get on it to prevent damage to bulb.
- Do not leave the bulb out of the lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of the lamp.

## HEADLAMP HIGH BEAM

### Removal

1. Remove the core support cover. Refer to [EXT-24, "Exploded View"](#).
2. Rotate the plastic cover counterclockwise and remove.
3. Rotate the headlamp high beam lamp counterclockwise and remove.
4. Disconnect the harness connector from the headlamp high beam lamp.

### Installation

Installation is in the reverse order of removal.

### **CAUTION:**

**After installing, be sure to install the cover securely to ensure watertightness.**

## HEADLAMP LOW BEAM

### Removal

1. Remove the core support cover. Refer to [EXT-24, "Exploded View"](#).
2. Rotate the plastic cover counterclockwise and remove.
3. Rotate the headlamp low beam sockets counterclockwise and remove.
4. Disconnect the harness connector from the headlamp low beam lamp.

### Installation

Installation is in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

## FRONT COMBINATION LAMP

< REMOVAL AND INSTALLATION >

---

**CAUTION:**

**After installing, be sure to install the cover securely to ensure watertightness.**

### SIDE MARKER LAMP

#### Removal

1. Remove the core support cover. Refer to [EXT-24. "Exploded View"](#).
2. Rotate the side marker lamp bulb socket counterclockwise and remove.
3. Remove the side marker bulb from the side marker bulb socket.

#### Installation

Installation is in the reverse order of removal.

**CAUTION:**

**After installing, be sure to install the bulb socket securely to ensure watertightness.**

### TURN SIGNAL LAMP

#### Removal

1. Remove the core support cover. Refer to [EXT-24. "Exploded View"](#).
2. Rotate the turn signal lamp bulb socket counterclockwise and remove.
3. Remove the turn signal bulb from the turn signal bulb socket.

#### Installation

Installation is in the reverse order of removal.

**CAUTION:**

**After installing, be sure to install the bulb socket securely to ensure watertightness.**

### Park Lamp

The park lamp LED bulb is integrated into the front combination lamp and is serviced as an assembly. Refer to [EXL-120. "Removal and Installation"](#).

# FRONT FOG LAMP

< REMOVAL AND INSTALLATION >

## FRONT FOG LAMP

### Removal and Installation

INFOID:000000011539797

#### FOG LAMP

##### Removal

1. Position the fender protector aside. Refer to [EXT-29, "FENDER PROTECTOR : Removal and Installation - Front Fender Protector"](#).
2. Disconnect the harness connector from the front fog lamp.
3. Remove the screws and the front fog lamp.

##### Installation

Installation is in the reverse order of removal.

##### **NOTE:**

After installing, perform fog lamp aiming adjustment. Refer to [EXL-118, "Aiming Adjustment"](#).

#### FRONT FOG LAMP BULB

##### Removal

##### **WARNING:**

**Do not touch bulb by hand while it is lit or right after being turned off. Burning may result.**

##### **CAUTION:**

- Do not touch glass surface of the bulb with bare hands or allow oil or grease to get on it to prevent damage to bulb.
- Do not leave the bulb out of the lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of the lamp.

1. Position the front fender protector aside. Refer to [EXT-29, "FENDER PROTECTOR : Removal and Installation - Front Fender Protector"](#).
2. Disconnect the harness connector from the front fog lamp bulb.
3. Rotate the front fog lamp bulb socket counterclockwise and remove.

##### Installation

Installation is in the reverse order of removal.

##### **CAUTION:**

**After installing, be sure to install the bulb socket securely to ensure watertightness.**

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

## DOOR MIRROR TURN SIGNAL LAMP

< REMOVAL AND INSTALLATION >

---

### DOOR MIRROR TURN SIGNAL LAMP

#### Removal and Installation

INFOID:000000011539798

The door mirror side turn signal lamp is integrated into the door mirror assembly and is serviced as an assembly. Refer to [MIR-18, "Exploded View"](#).

# HIGH-MOUNTED STOP LAMP

< REMOVAL AND INSTALLATION >

## HIGH-MOUNTED STOP LAMP

### Removal and Installation

INFOID:000000011539799

#### HIGH-MOUNTED STOP LAMP - WITH REAR SPOILER

##### Removal

1. Remove the rear air spoiler. Refer to [EXT-47. "Removal and Installation"](#).
2. Remove the screws and the high-mount stop lamp from the rear air spoiler.


##### Installation

Installation is in the reverse order of removal.

#### HIGH-MOUNTED STOP LAMP - WITHOUT REAR SPOILER

##### Removal

1. Slide high-mounted stop lamp (1) rearward on parcel shelf to provide clearance for front tabs (A).
2. Lift front of lamp assembly up and pull forward to provide clearance for rear tabs (B).

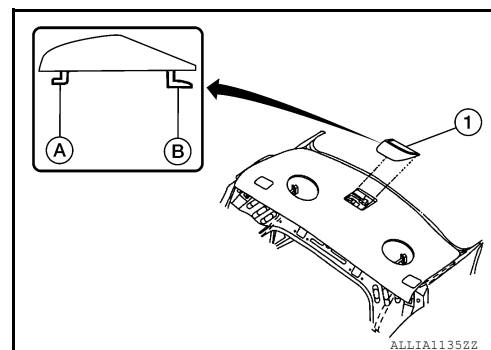

3. Disconnect the harness connector from the high-mounted stop lamp and remove.

##### Installation

Installation is in the reverse order of removal.

### Bulb Replacement

INFOID:000000011539800

#### HIGH-MOUNTED STOP LAMP - WITH REAR SPOILER

The high-mounted stop lamp LED bulb is integrated into the high-mounted stop lamp and is serviced as an assembly. Refer to [EXL-125. "Removal and Installation"](#).

#### HIGH-MOUNTED STOP LAMP - WITHOUT REAR SPOILER

The high-mounted stop lamp LED bulb is integrated into the high-mounted stop lamp and is serviced as an assembly. Refer to [EXL-125. "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

# LICENSE PLATE LAMP

< REMOVAL AND INSTALLATION >

## LICENSE PLATE LAMP


### Removal and Installation

INFOID:000000011539801

#### REMOVAL

1. Remove the license lamp finisher. Refer to [EXT-45. "Removal and Installation"](#).
2. Disconnect the harness connector (A) from the license plate lamp (1).
3. Release pawl and remove.

○: Pawl

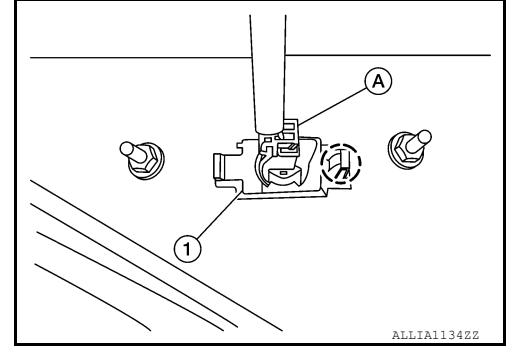

#### INSTALLATION

Installation is in the reverse order of removal.

### Bulb Replacement

INFOID:000000011539802

#### **WARNING:**


**Do not touch bulb while it is lit or right after being turned off. Burning may result.**

#### **CAUTION:**

- Do not touch glass surface of the bulb with bare hands or allow oil or grease to get on it to prevent damage to bulb.
- Do not leave the bulb out of the lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of the lamp.

#### REMOVAL

1. Position trunk lid finisher aside. Refer to [INT-45. "Removal and Installation"](#).
2. Rotate license plate lamp bulb socket (2) counterclockwise and remove from license plate lamp (1).
3. Remove license plate lamp bulb (A) from license plate lamp bulb socket (2).

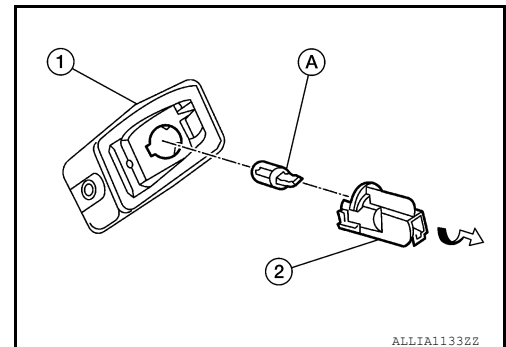

#### INSTALLATION

Installation is in the reverse order of removal.


# REAR COMBINATION LAMP

< REMOVAL AND INSTALLATION >

## REAR COMBINATION LAMP

Exploded View

INFOID:000000011539803

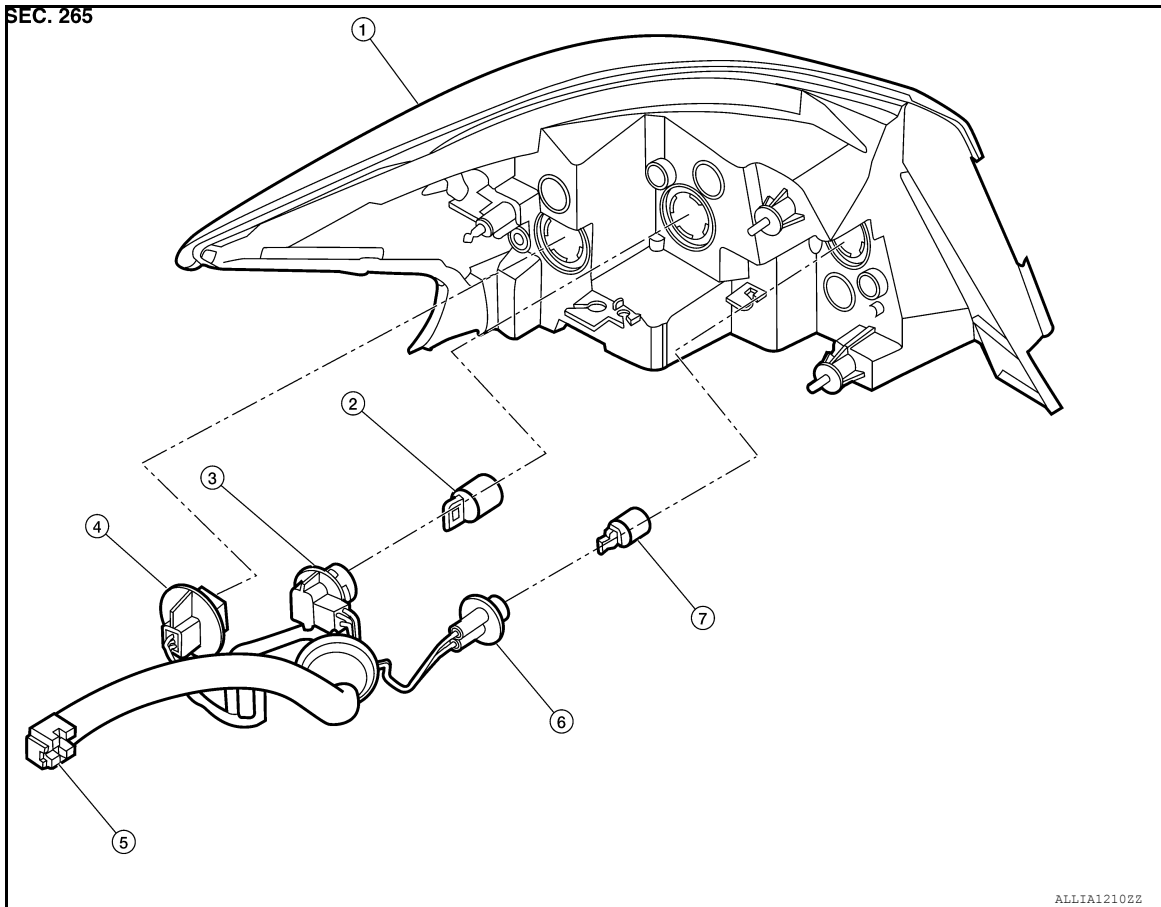


- |                               |  |                                       |
|-------------------------------|--|---------------------------------------|
| 1. Rear combination lamp      | 2. Rear turn signal lamp bulb              | 3. Rear turn signal lamp socket       |
| 4. LED lamp harness connector | 5. Rear combination lamp harness connector | 6. Back-up lamp bulb socket connector |
| 7. Back-up lamp bulb          |  |                                       |

## Removal and Installation

INFOID:000000011539804

### Removal

1. Partially remove trunk side finisher. Refer to [INT-43, "TRUNK SIDE FINISHER : Removal and Installation"](#).
2. Remove the rear combination lamp nuts (B).
3. Disconnect the harness connector (A) from the rear combination lamp.

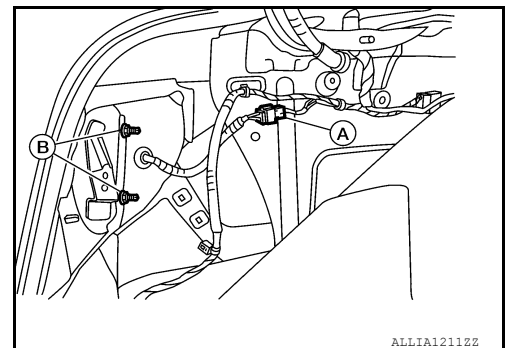

4. Pull the rear combination lamp rearward and remove.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
EXL  
M  
N  
O  
P

## REAR COMBINATION LAMP

### < REMOVAL AND INSTALLATION >

---

#### Installation

Installation is the reverse order of removal.

#### Bulb Replacement

INFOID:000000011539805

#### **WARNING:**

**Do not touch bulb while it is lit or right after being turned off. Burning may result.**

#### **CAUTION:**

- **Do not touch glass surface of the bulb with bare hands or allow oil or grease to get on it to prevent damage to bulb.**
- **Do not leave the bulb out of the lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of the lamp.**

#### REAR TURN SIGNAL LAMP BULB

##### Removal

1. Remove the rear combination lamp. Refer to [EXL-127, "Removal and Installation"](#).
2. Rotate the rear turn signal lamp bulb socket counterclockwise and remove.
3. Remove the rear turn signal lamp bulb from bulb socket.

##### Installation

Installation is in the reverse order of removal.

#### **CAUTION:**

**After installing, be sure to install the bulb socket securely to ensure watertightness.**

#### STOP/TAIL LAMP

The stop/tail lamp is integrated into the rear combination lamp and is serviced as an assembly. Refer to [EXL-127, "Removal and Installation"](#).

#### BACK-UP LAMP BULB

##### Removal

1. Remove the rear combination lamp. Refer to [EXL-127, "Removal and Installation"](#).
2. Rotate the back-up lamp bulb socket counterclockwise and remove.
3. Remove the back-up lamp bulb from bulb socket.

##### Installation

Installation is in the reverse order of removal.

#### **CAUTION:**

**After installing, be sure to install the bulb socket securely to ensure watertightness.**




# COMBINATION SWITCH

< REMOVAL AND INSTALLATION >

## COMBINATION SWITCH

Exploded View

INFOID:000000011539806

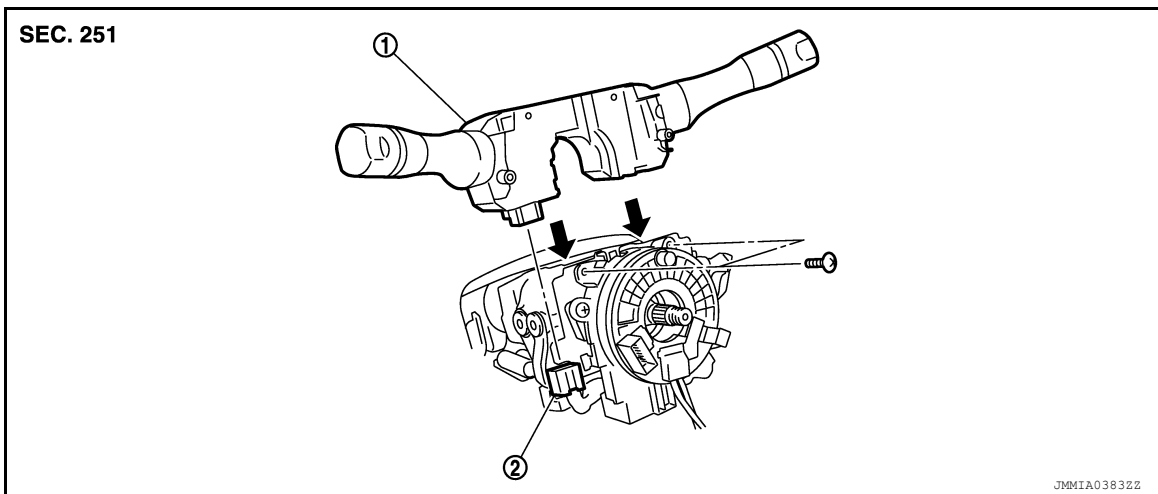

1. Combination switch
2. Combination switch harness connector

### NOTE:

Shown with the steering wheel removed for clarity only.

## Removal and Installation

INFOID:000000011539807

### REMOVAL

#### CAUTION:

- Before servicing, turn the ignition switch OFF, disconnect both battery terminals and wait at least three minutes.
  - Do not use air or electric tools when removing or installing the combination switch.
1. Disconnect both the negative and positive battery terminals, then wait at least three minutes. Refer to [PG-74, "Removal and Installation \(Battery\)"](#).
  2. Remove the steering column covers. Refer to [IP-16, "Removal and Installation"](#).
  3. Rotate steering wheel clockwise to access first combination switch bolt and remove.
  4. Rotate steering wheel counter-clockwise to access second combination switch bolt and remove.
  5. Disconnect the harness connector from the combination switch and remove.

### INSTALLATION

Installation is in the reverse order of removal.

#### CAUTION:

- After the work is completed, make sure no system malfunction is detected by air bag warning lamp.
- In case a malfunction is detected by the air bag warning lamp, reset with the self-diagnosis function and delete the memory with CONSULT.
- If a malfunction is still detected after the above operation, perform self-diagnosis to repair malfunctions. Refer to [SRC-41, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

# HAZARD SWITCH

< REMOVAL AND INSTALLATION >


## HAZARD SWITCH

### Removal and Installation

INFOID:000000011539808

#### REMOVAL

1. Remove cluster lid C (1). Refer to [IP-20. "Removal and Installation - Cluster Lid C"](#).
2. Release pawls at (↔) and remove hazard switch (2).

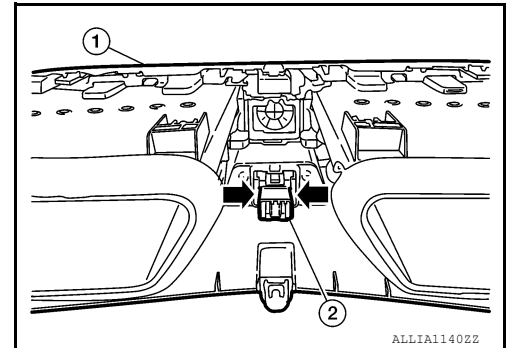

#### INSTALLATION

Installation is in the reverse order of removal.

# OPTICAL SENSOR

< REMOVAL AND INSTALLATION >

---

## OPTICAL SENSOR

### Removal and Installation

INFOID:000000011539809

#### REMOVAL

1. Remove the defroster grille (LH) using a suitable tool.
2. Disconnect the harness connector from the optical sensor.
3. Release the pawls and remove the optical sensor.

#### INSTALLATION

Installation is in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

# FRONT COMBINATION LAMP


< UNIT DISASSEMBLY AND ASSEMBLY >

## UNIT DISASSEMBLY AND ASSEMBLY

### FRONT COMBINATION LAMP

Exploded View

INFOID:0000000011539810

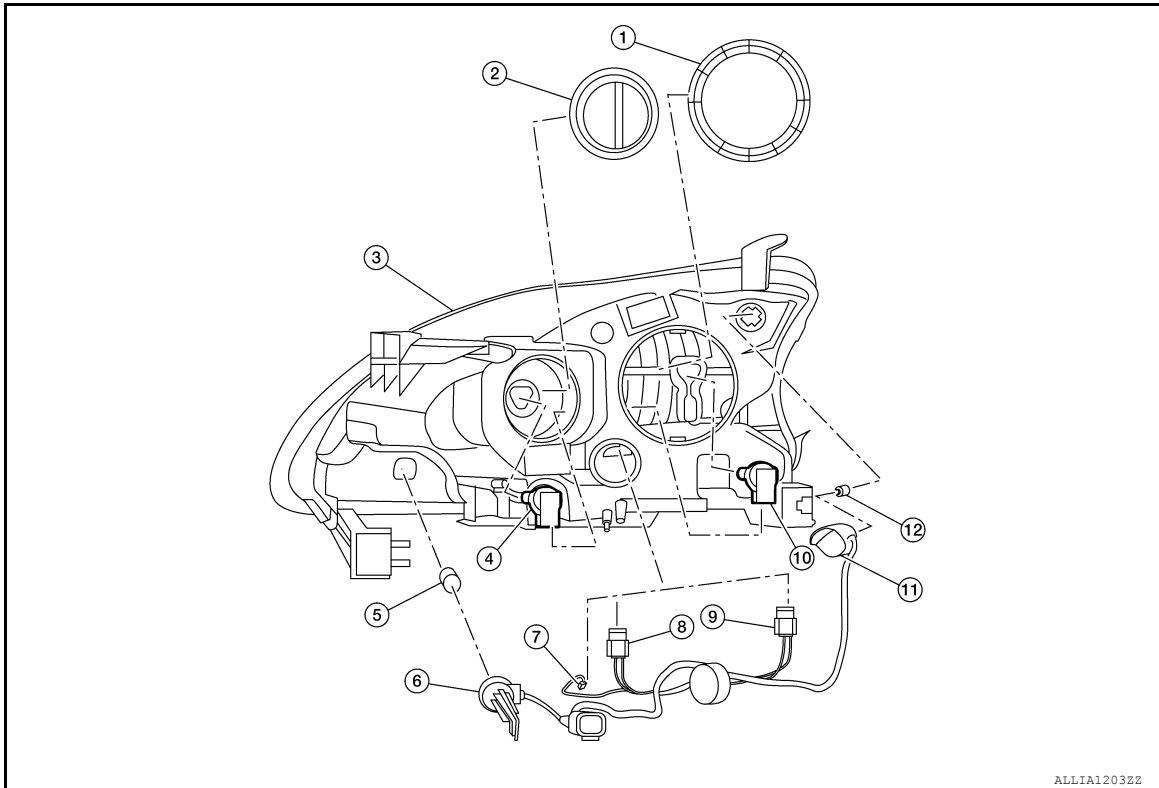

- |                                  |  |   |
|----------------------------------|--|---|
| 1. Large cover (not serviceable) | 2. Small cover (not serviceable)                   | 3. Front combination lamp                         |
| 4. Halogen lamp bulb (high beam) | 5. Turn signal lamp bulb                           | 6. Turn signal lamp bulb socket                   |
| 7. LED harness connector         | 8. Halogen lamp bulb (high beam) harness connector | 9. Halogen lamp bulb (low beam) harness connector |
| 10. Halogen lamp bulb (low beam) | 11. Side marker lamp bulb socket                   | 12. Side marker lamp bulb                         |

### Disassembly and Assembly

INFOID:0000000011539811

#### DISSASSEMBLY

##### **WARNING:**

**Do not touch bulb while it is lit or right after being turned off. Burning may result.**

##### **CAUTION:**

- Do not touch glass surface of the bulb with bare hands or allow oil or grease to get on it to prevent damage to bulb.
- Do not leave the bulb out of the lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of the lamp.

1. Remove front combination lamp. Refer to [EXL-120. "Removal and Installation"](#).
2. Rotate the covers counterclockwise and remove.
3. Rotate the halogen lamp bulb (low beam) counterclockwise and remove.
4. Disconnect the harness connector from the halogen lamp bulb (low beam) and remove.
5. Rotate the halogen lamp bulb (high beam) counterclockwise and remove.
6. Disconnect the harness connector from the halogen lamp bulb (high beam) and remove.
7. Rotate the side marker bulb socket counterclockwise and remove.
8. Remove the side marker bulb from the side marker bulb socket.

## FRONT COMBINATION LAMP

### < UNIT DISASSEMBLY AND ASSEMBLY >

---

9. Rotate the turn signal bulb socket counterclockwise and remove.
10. Remove the turn signal bulb from the turn signal bulb socket.
11. Disconnect the harness connector from the LED circuit board and remove the harness.

### ASSEMBLY

Assembly is in the reverse order of disassembly.

#### **CAUTION:**

**After installing, be sure to install the bulb sockets securely to ensure watertightness.**

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P


# REAR COMBINATION LAMP

< UNIT DISASSEMBLY AND ASSEMBLY >

## REAR COMBINATION LAMP

Exploded View

INFOID:000000011539812

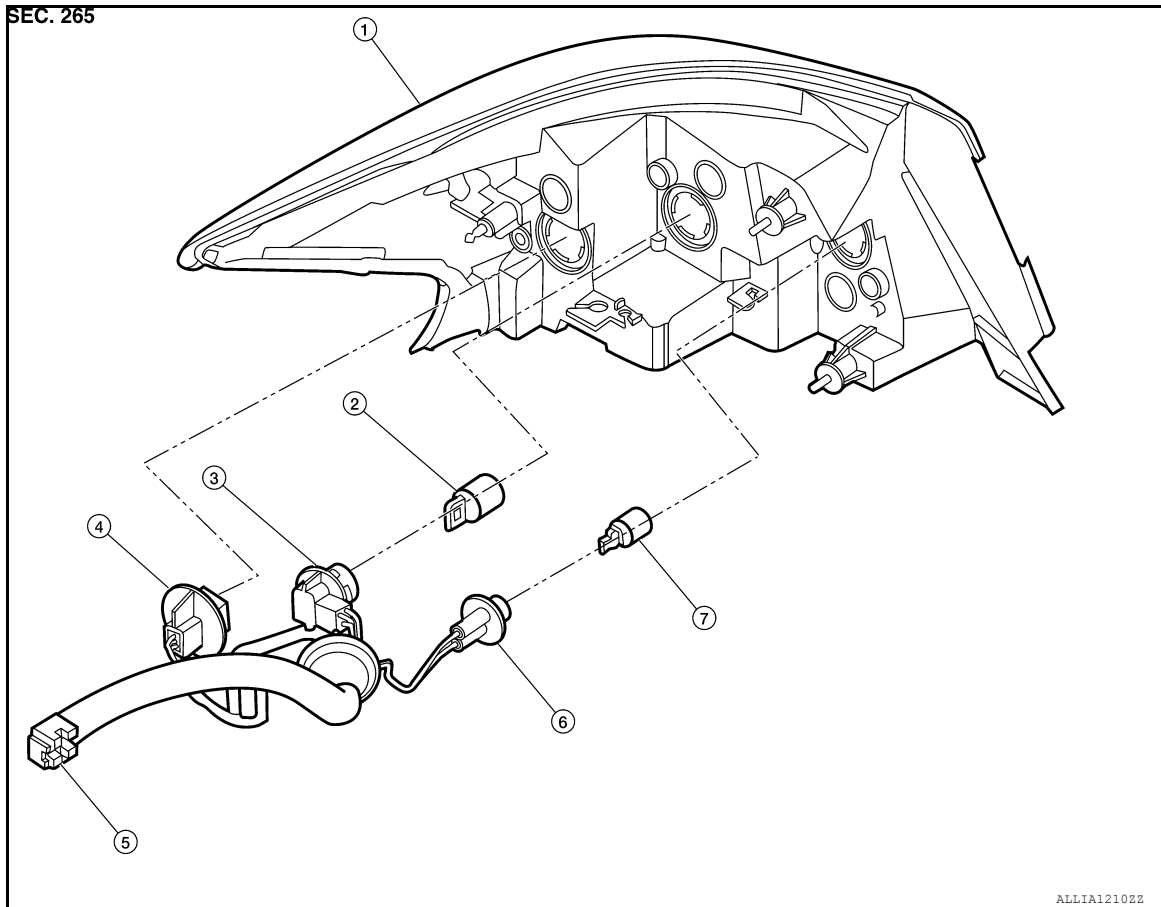

- |                               |  |                                       |
|-------------------------------|--|---------------------------------------|
| 1. Rear combination lamp      | 2. Rear turn signal lamp bulb              | 3. Rear turn signal lamp socket       |
| 4. LED lamp harness connector | 5. Rear combination lamp harness connector | 6. Back-up lamp bulb socket connector |
| 7. Back-up lamp bulb          |  |                                       |

## Disassembly and Assembly

INFOID:000000011539813

### DISASSEMBLY

#### **WARNING:**

Do not touch bulb while it is lit or right after being turned off. Burning may result.

#### **CAUTION:**

- Do not touch glass surface of the bulb with bare hands or allow oil or grease to get on it to prevent damage to bulb.
- Do not leave the bulb out of the lamp reflector for a long time because dust, moisture, smoke, etc. may affect the performance of the lamp.

1. Remove rear combination lamp. Refer to [EXL-127, "Removal and Installation"](#).
2. Rotate rear turn signal lamp bulb socket counterclockwise to remove from rear combination lamp.
3. Remove the rear turn signal lamp bulb from bulb socket.
4. Rotate back-up lamp bulb socket counterclockwise to remove from rear combination lamp.
5. Remove the back-up lamp bulb from bulb socket.
6. Disconnect the harness connector from the LED lamp.

### ASSEMBLY

## REAR COMBINATION LAMP

< UNIT DISASSEMBLY AND ASSEMBLY >

---

Assembly is in the reverse order of disassembly.

**CAUTION:**

**After installing, be sure to install the bulb sockets securely to ensure watertightness.**

A

B

C

D

E

F

G

H

I

J

K

EXL

M

N

O

P

## SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

# SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

### Bulb Specifications

INFOID:0000000011539814

| Item  |                          | Wattage (W)* |
|---|--------------------------|--------------|
| Front combination lamp                          | Low beam                 | 55           |
|   | High beam                | 65           |
|   | Side marker lamp         | 3.8          |
|   | Turn signal lamp         | 28           |
|   | Park                     | LED          |
| Door mirror side turn signal lamp (if equipped) |                          | LED          |
| Rear combination lamp                           | Stop/Tail lamp           | LED          |
|   | Turn signal lamp (amber) | 21           |
|   | Back-up lamp             | 16           |
| Fog lamp (if equipped)                          |                          | 55           |
| License plate lamp                              |                          | 5            |
| High-mounted stop lamp                          | Without rear spoiler     | LED          |
|   | With rear spoiler        | LED          |

\*: Always check with the Parts Department for the latest parts information.