

SECTION **BR**
BRAKE SYSTEM

A
B
C
D
E

CONTENTS

SERVICE INFORMATION	2	Removal and Installation	15	BR
PRECAUTIONS	2	Disassembly and Assembly	16	
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	2	BRAKE BOOSTER	20	G
Precaution Necessary for Steering Wheel Rotation After Battery Disconnect	2	On Board Inspection	20	
Precaution for Brake System	3	Removal and Installation	21	
PREPARATION	4	VACUUM LINES	23	H
Special Service Tool	4	Component	23	
Commercial Service Tool	4	Removal and Installation	23	
NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING	5	Inspection	23	I
NVH Troubleshooting Chart	5	FRONT DISC BRAKE	25	
BRAKE PEDAL	6	On Board Inspection	25	J
Inspection and Adjustment	6	Component	25	
Removal and Installation	7	Removal and Installation of Brake Pad	26	
BRAKE FLUID	9	Removal and Installation of Brake Caliper Assembly	30	K
On Board Inspection	9	Disassembly and Assembly of Brake Caliper Assembly	31	
Drain and Refill	9	Brake Burnishing Procedure	34	L
Bleeding Brake System	9	REAR DRUM BRAKE	35	
BRAKE TUBE AND HOSE	11	Component	35	M
Hydraulic Circuit	11	Removal and Installation of Drum Brake Assembly	36	
Front Brake Tube and Hose	12	Removal and Installation of Wheel Cylinder	39	
Rear Brake Tube and Hose	12	Disassembly and Assembly of Wheel Cylinder	39	N
Inspection After Installation	13	SERVICE DATA AND SPECIFICATIONS (SDS)	40	
DUAL PROPORTIONING VALVE	14	General Specification	40	O
Removal and Installation	14	Brake Pedal	41	
Inspection	14	Check Valve	41	
BRAKE MASTER CYLINDER	15	Brake Booster	42	P
On-Board Inspection	15	Front Disc Brake	42	
		Rear Drum Brake	42	

PRECAUTIONS

< SERVICE INFORMATION >

SERVICE INFORMATION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000005396972

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution Necessary for Steering Wheel Rotation After Battery Disconnect

INFOID:000000005396973

NOTE:

- This Procedure is applied only to models with Intelligent Key system and NATS (NISSAN ANTI-THEFT SYSTEM).
- Remove and install all control units after disconnecting both battery cables with the ignition knob in the "LOCK" position.
- Always use CONSULT-III to perform self-diagnosis as a part of each function inspection after finishing work. If DTC is detected, perform trouble diagnosis according to self-diagnostic results.

For models equipped with the Intelligent Key system and NATS, an electrically controlled steering lock mechanism is adopted on the key cylinder.

For this reason, if the battery is disconnected or if the battery is discharged, the steering wheel will lock and steering wheel rotation will become impossible.

If steering wheel rotation is required when battery power is interrupted, follow the procedure below before starting the repair operation.

OPERATION PROCEDURE

1. Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

2. Use the Intelligent Key or mechanical key to turn the ignition switch to the "ACC" position. At this time, the steering lock will be released.
3. Disconnect both battery cables. The steering lock will remain released and the steering wheel can be rotated.
4. Perform the necessary repair operation.

PRECAUTIONS


< SERVICE INFORMATION >

5. When the repair work is completed, return the ignition switch to the "LOCK" position before connecting the battery cables. (At this time, the steering lock mechanism will engage.)
6. Perform a self-diagnosis check of all control units using CONSULT-III.

Precaution for Brake System

INFOID:000000005396974

- Refill using recommended brake fluid. Refer to [MA-14](#).
- Never reuse drained brake fluid.
- Be careful not to splash brake fluid on painted surface of body. If brake fluid is splashed on painted surfaces of body immediately wipe it off with cloth and then wash it away with water.
- To clean or wash all parts of master cylinder, disc brake caliper and wheel cylinder, use new brake fluid.
- Never use mineral oils such as gasoline or kerosene. They will ruin rubber parts of the hydraulic system.
- Use a flare nut wrench when removing a brake tube and use a flare nut torque wrench when installing a brake tube.
- When installing brake tubes and hoses, be sure to check torque.
- Before working, turn ignition switch OFF and disconnect connectors of ABS actuator and electric unit (control unit) or the battery cable from the negative terminal.
- Burnish the new braking surfaces after refinishing or replacing drums or rotors, after replacing pads or linings, or if a soft pedal occurs at very low mileage. Refer to [BR-34, "Brake Burnishing Procedure"](#).

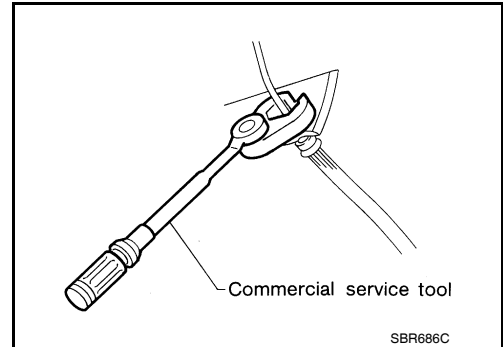

PREPARATION



< SERVICE INFORMATION >

PREPARATION

Special Service Tool




INFOID:000000005396975

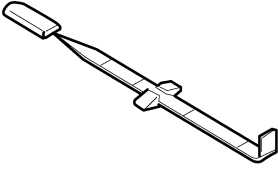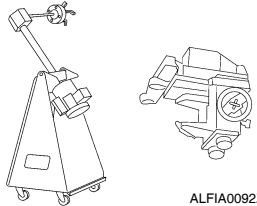The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

Tool number (Kent-Moore No.) Tool name	Description
<p>— (J-46532) Brake and clutch pedal height measurement tool</p>  <p style="text-align: center;">LFIA0227E</p>	<p>Measuring brake pedal height</p>
<p>38-PFM90.5 (—) Pro-Cut PFM90 On-Car Brake Lathe</p>  <p style="text-align: center;">ALFIA0092ZZ</p>	<p>Turning rotors</p>

Commercial Service Tool

INFOID:000000005396976

Tool name	Description
<p>1. Flare nut crowfoot 2. Torque wrench</p>  <p style="text-align: center;">S-NT360</p>	<p>Removing and installing brake piping a: 10 mm (0.39 in) / 12 mm (0.47 in)</p>
<p>Pin punch</p>  <p style="text-align: center;">ZZA0515D</p>	<p>Removing and installing reservoir tank pin Tip diameter: 4 mm (0.16 in)</p>
<p>Power tool</p>  <p style="text-align: center;">PIIB1407E</p>	<p>Removing nuts, bolts and screws</p>

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

< SERVICE INFORMATION >

NOISE, VIBRATION AND HARSHNESS (NVH) TROUBLESHOOTING

NVH Troubleshooting Chart

INFOID:000000005396977

Use the chart below to help you find the cause of the symptom. If necessary, repair or replace these parts.

Symptom	Possible cause and SUSPECTED PARTS													Reference page								
	Noise	Shake	Shimmy, Shudder	Pads/Lining damaged	Pads/Lining - uneven wear	Shims damaged	Rotor imbalance	Rotor damage	Rotor runout	Rotor deformation	Rotor deflection	Rotor rust	Rotor thickness variation		Drum out of round	WHEEL HUB	DIFFERENTIAL	SUSPENSION	TIRES	ROAD WHEEL	DRIVE SHAFT	STEERING
	x			x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	BR-25, BR-36
	x																					BR-25, BR-36
	x																					BR-25
		x																				BR-31, BR-36
			x																			BR-31, BR-36
				x																		BR-31, BR-36
					x																	BR-31, BR-36
						x																BR-31, BR-36
																						BR-31, BR-36
																						BR-31, BR-36
																						BR-36
																						FAX-5. "NVH Troubleshooting Chart"
																						MT-51. "NVH Troubleshooting Chart"
																						FSU-6. "NVH Troubleshooting Chart"
																						WT-5. "NVH Troubleshooting Chart"
																						WT-5. "NVH Troubleshooting Chart"
																						FAX-5. "NVH Troubleshooting Chart"
																						PS-5. "NVH Troubleshooting Chart"

x: Applicable

A
B
C
D
E
BR
G
H
I
J
K
L
M
N
O
P

BRAKE PEDAL

< SERVICE INFORMATION >

BRAKE PEDAL

Inspection and Adjustment


INFOID:000000005396978

INSPECTION

- Check brake pedal free height (H) from dash panel top surface using Tool.

Tool number : — (J-46532)

- Check brake pedal full stroke (S).
- Check clearance between pedal stopper and threaded end of stop lamp switch (C1) and ASCD switch (C2).

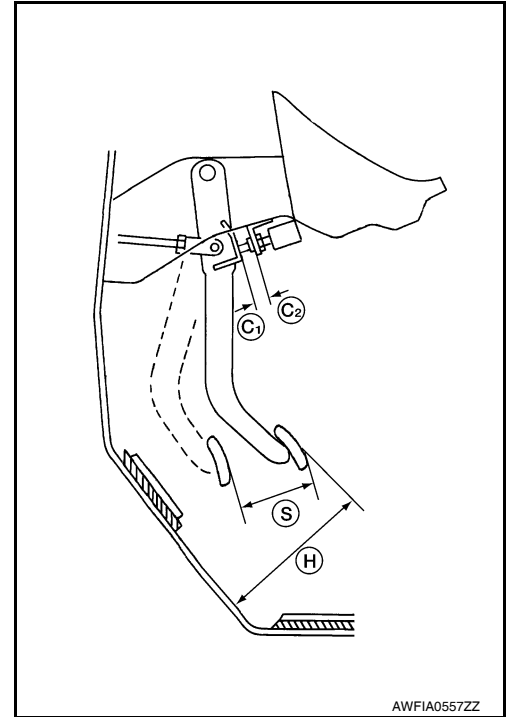

H	Brake pedal free height (from dash panel top surface)	A/T, CVT models	: Refer to BR-41, "Brake Pedal" .
		M/T model	: Refer to BR-41, "Brake Pedal" .
S	Brake pedal full stroke (under a force of 490 N (50 kg-f, 110 lb-f) with the engine running)	A/T, CVT models	: Refer to BR-41, "Brake Pedal" .
		M/T model	: Refer to BR-41, "Brake Pedal" .
C1	Clearance between the threaded end of stop lamp switch and pedal stopper		: Refer to BR-41, "Brake Pedal" .
C2	Clearance between the threaded end of ASCD switch and pedal stopper		: Refer to BR-41, "Brake Pedal" .

ADJUSTMENT

1. Loosen stop lamp switch and ASCD switch by rotating it counterclockwise by 45°.

BRAKE PEDAL

< SERVICE INFORMATION >

- Loosen lock nut on input rod, then rotate input rod to set pedal to the specified height, and tighten the lock nut.

CAUTION:

Make sure that the threaded end of input rod stays inside clevis.

Lock nut : Refer to [BR-21, "Removal and Installation"](#).

- With the pedal pulled and held by hand, press stop lamp switch and ASCD switch until their threaded end contacts the brake pedal stopper.
- With the threaded end of stop lamp switch and ASCD switch contacting brake pedal stopper, rotate the switches clockwise by 45° to secure.

CAUTION:


Make sure that the clearance (C) is within specification.

- Check that the stop lamps go out when the brake pedal is released.

CAUTION:

Make sure that stop lamps go off when brake pedal is released.

- Start the engine and check the brake pedal stroke.

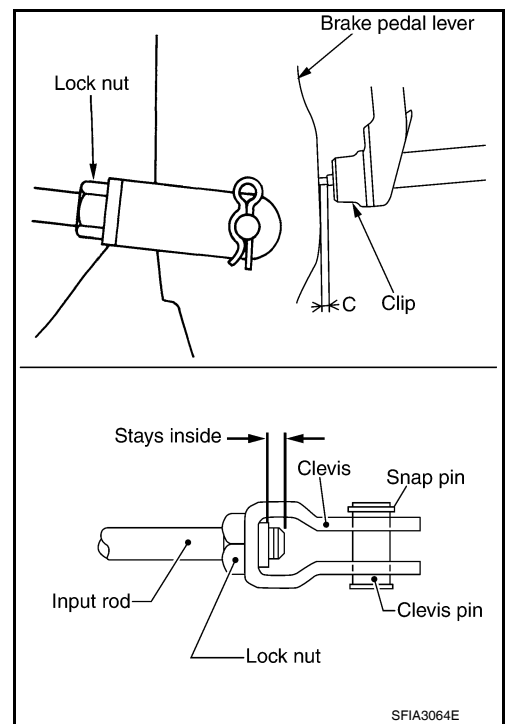


SFIA3064E

Removal and Installation

INFOID:000000005396979

COMPONENTS

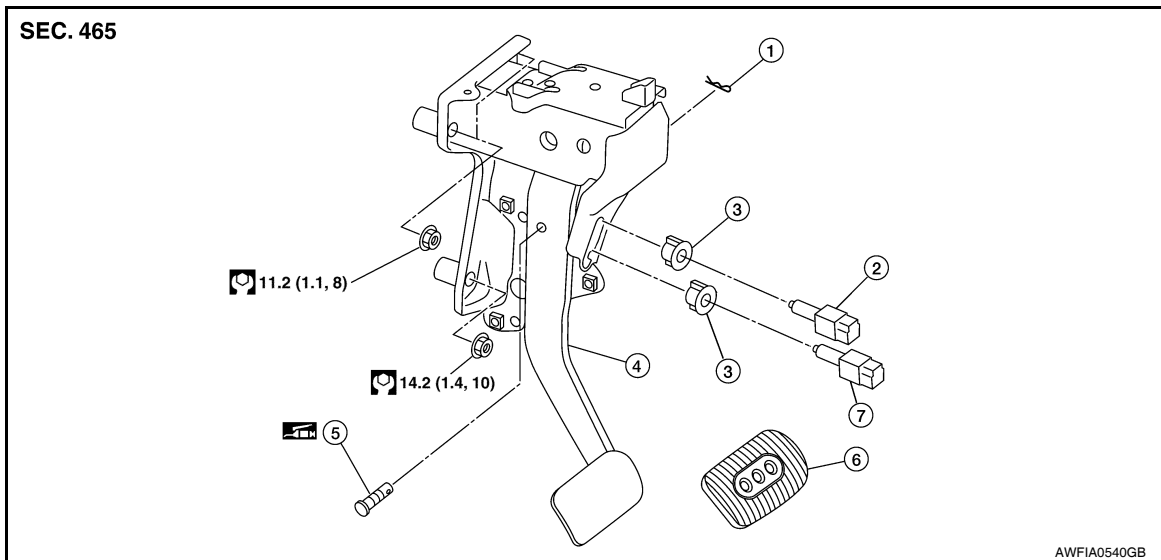


- | | | |
|-------------------------------------|---------------------|--------------------|
| 1. Snap pin | 2. Stop lamp switch | 3. Clip |
| 4. Brake pedal assembly | 5. Clevis | 6. Brake pedal pad |
| 7. ASCD cancel switch (if equipped) | | |

REMOVAL

BRAKE PEDAL


< SERVICE INFORMATION >

1. Disconnect accelerator pedal position sensor harness connector.
2. Remove stop lamp switch and ASCD cancel switch (if equipped) from brake pedal assembly.
3. Remove snap pin and clevis pin from clevis of brake booster.
4. Remove nuts from brake pedal bracket, and remove brake pedal assembly from vehicle.
5. Remove accelerator pedal from brake pedal assembly.

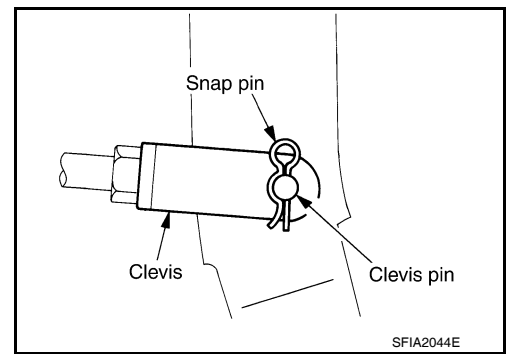


INSPECTION AFTER REMOVAL

- Check brake pedal upper rivet for deformation.
- Make sure that the lapping length of sub-bracket and slide plate is at least 6.9 mm (0.272 in).
- Check brake pedal for bend, damage, and cracks on the welded parts.
- Replace brake pedal assembly if any non-standard condition is detected.

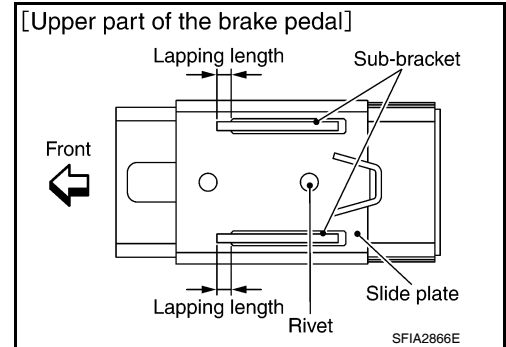


- Check clevis pin and plastic stopper for damage and deformation. Replace clevis pin as necessary.

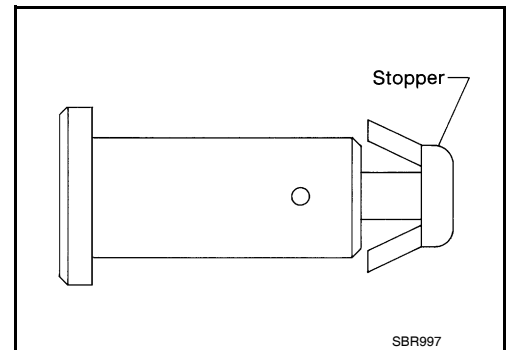

INSTALLATION

1. Install the accelerator pedal on the brake pedal assembly. Refer to [ACC-4. "Removal and Installation"](#).
2. Install the brake pedal assembly on the lower dash panel and tighten the brake pedal assembly nuts in the order as shown to specification.

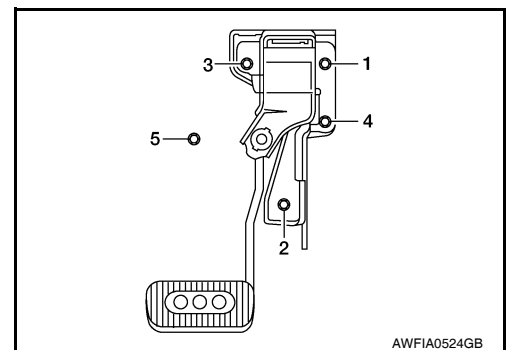

3. Installation of the remaining components are in the reverse order of the removal.
 - After installing brake pedal assembly to vehicle, adjust brake pedal. Refer to [BR-6. "Inspection and Adjustment"](#).
 - After installing accelerator pedal, check accelerator pedal. Refer to [ACC-4. "Removal and Installation"](#).

BRAKE FLUID

< SERVICE INFORMATION >


BRAKE FLUID

On Board Inspection

INFOID:000000005396980

CHECKING BRAKE FLUID LEVEL

- Make sure the fluid level in the reservoir tank is within the standard (between MAX and MIN lines).
- Visually check around the reservoir tank for fluid leaks.
- If fluid level is excessively low, check brake system for fluid leaks.
- Release parking brake lever and see if brake warning lamp goes off. If not, check brake system for fluid leaks.

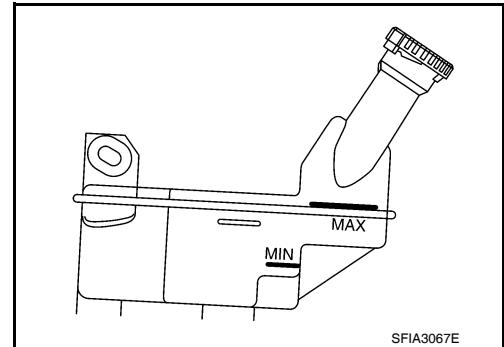


Drain and Refill

INFOID:000000005396981


CAUTION:

- Refill using recommended brake fluid. Refer to [MA-14, "Fluids and Lubricants"](#).
- Never reuse drained brake fluid.
- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, immediately wipe them with cloth and wash it away with water.
- Before working, disconnect connectors of ABS actuator and electric unit (control unit) or battery negative terminal.

1. Connect a vinyl tube to bleed valve.
2. Depress the brake pedal, loosen the bleed valve, and gradually remove the brake fluid.

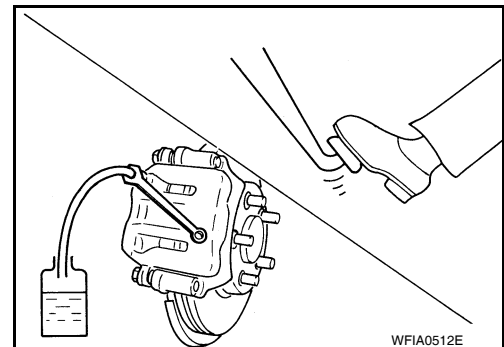

3. Clean inside of reservoir tank, and refill with new brake fluid.
4. Loosen bleed valve, depress brake pedal slowly to full stroke and then release it. Repeat the procedure every 2 or 3 seconds until the new brake fluid comes out, then close the bleed valve while depressing the brake pedal. Repeat the same procedure for each wheel.
5. Bleed the air from the brake hydraulic system. Refer to [BR-9, "Bleeding Brake System"](#).

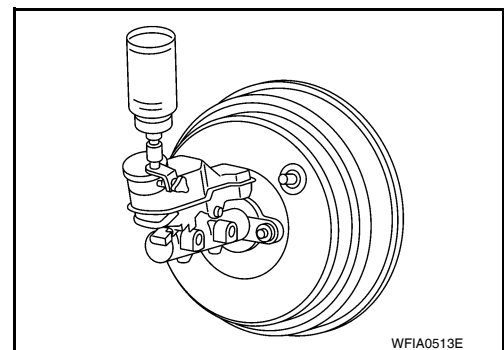

Bleeding Brake System

INFOID:000000005396982

CAUTION:

- While bleeding, pay attention to master cylinder fluid level.
- Before working, disconnect connectors of ABS actuator and electric unit (control unit) or the battery cable from the negative terminal.

1. Connect a vinyl tube to the rear right bleed valve.
2. Fully depress brake pedal 4 to 5 times.

A
B
C
D
E
BR
G
H
I
J
K
L
M
N
O
P

BRAKE FLUID

< SERVICE INFORMATION >

3. With brake pedal depressed, loosen bleed valve to let the air out, and then tighten it immediately.
4. Repeat steps 2, 3 until no more air comes out.
5. Tighten bleed valve to specified torque. Refer to [BR-25. "Component"](#) (front disc brake), [BR-35. "Component"](#) (rear drum brake).
6. Following the steps 1 to 5 above, with master cylinder reservoir tank filled at least half way, bleed air from the rear right, front left, rear left, and front right brake, in that order.

BRAKE TUBE AND HOSE


< SERVICE INFORMATION >

BRAKE TUBE AND HOSE

Hydraulic Circuit


INFOID:000000005396983

With ABS only or VDC/TCS/ABS

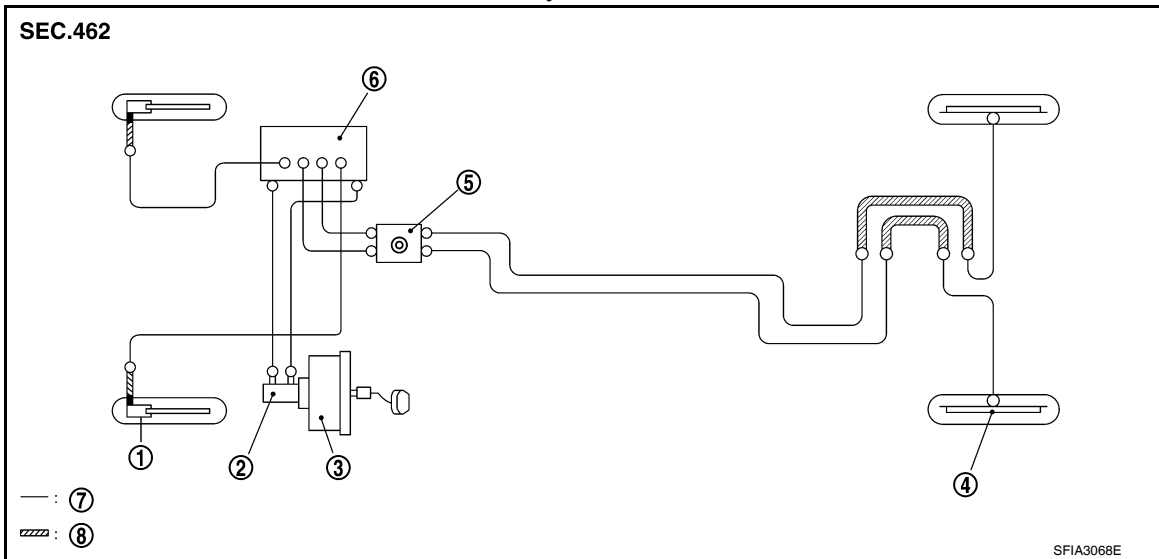

- | | | |
|---|---|--|
| 1. Front disc brake | 2. Brake master cylinder | 3. Brake booster |
| 4. Rear drum brake | 5. Connector | 6. ABS actuator and electric unit (control unit) |
| 7. Brake tube | 8. Brake hose | |
| ■ : Union bolt
18.2 N.m (1.9 kg-m, 13.0 ft-lb) | ⊙ : Connector bolt
10.0 N.m (1.0 kg-m, 87.0 in-lb) | ○ : Flare nut
16.2 N.m (1.7 kg-m, 12.0 ft-lb) |

Without ABS

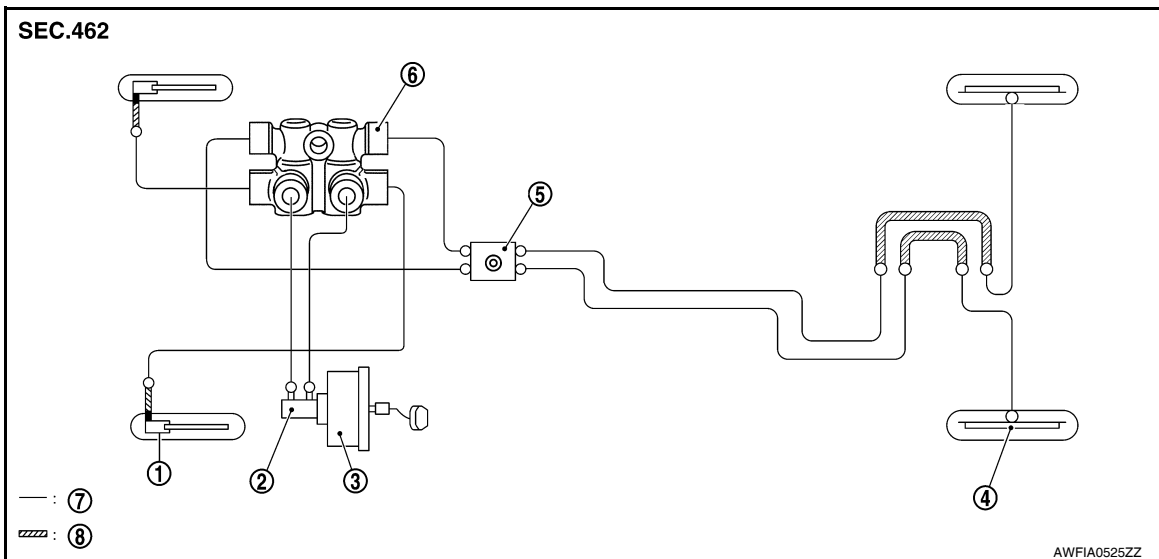

- | | | |
|---|---|--|
| 1. Front disc brake | 2. Brake master cylinder | 3. Brake booster |
| 4. Rear drum brake | 5. Connector | 6. Dual proportioning valve |
| 7. Brake tube | 8. Brake hose | |
| ■ : Union bolt
18.2 N.m (1.9 kg-m, 13.0 ft-lb) | ⊙ : Connector bolt
10.0 N.m (1.0 kg-m, 87.0 in-lb) | ○ : Flare nut (including connections at dual proportioning valve)
16.2 N.m (1.7 kg-m, 12.0 ft-lb) |

CAUTION:

BRAKE TUBE AND HOSE

< SERVICE INFORMATION >


- All tubes and hoses must be free from excessive bending, twisting and pulling.
- Make sure there is no interference with other parts when turning steering both clockwise and counterclockwise.
- Brake tubes and hoses are an important safety part. Always disassemble the parts and retighten their fittings, if a brake fluid leak is detected. Replace applicable part with a new one, if damaged part is detected.
- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted surfaces of body, immediately wipe them with cloth and then wash it away with water.
- Do not bend or twist brake hose sharply, or strongly pull it.
- When removing components, cover brake line connections so that dirt, dust, or other foreign matters do not get in.
- Refill using recommended brake fluid. Refer to [MA-14, "Fluids and Lubricants"](#).
- Never reuse drained brake fluid.

Front Brake Tube and Hose

INFOID:000000005396984


REMOVAL

1. Drain brake fluid. Refer to [BR-9, "Drain and Refill"](#).
2. Using a flare nut wrench, remove brake tube from brake hose.
3. Remove union bolt and discard the copper washers.
CAUTION:
Do not reuse copper washers
4. Remove brake hose from caliper assembly.
5. Remove lock plate, and remove brake hose.

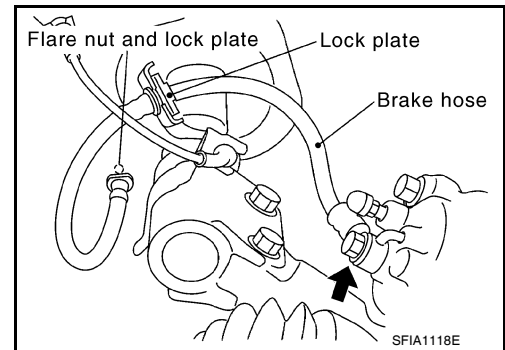

INSTALLATION

1. Assemble union bolt and new copper washers on to brake hose.
CAUTION:
Do not reuse copper washers
2. Position the L-shape metal fitting of the brake hose to the brake caliper assembly positioning hole.
3. Tighten union bolt to the specified torque. Refer to [BR-11, "Hydraulic Circuit"](#).
4. Connect brake hose to brake tube, and temporarily tighten flare nut by hand as much as possible.
5. Secure brake hose and brake tube with lock plates.
6. Tighten flare nut to the specified torque with a suitable tool. Refer to [BR-11, "Hydraulic Circuit"](#).
7. Bleed the air from the brake hydraulic system. Refer to [BR-9, "Bleeding Brake System"](#).

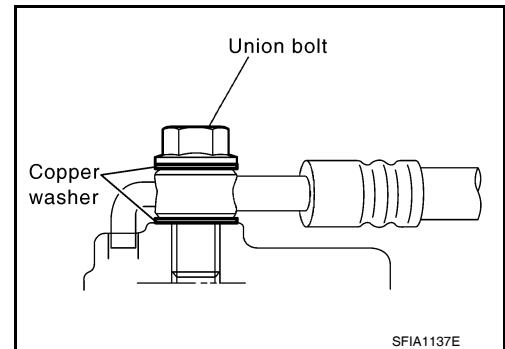

Rear Brake Tube and Hose

INFOID:000000005396985


REMOVAL

1. Drain brake fluid. Refer to [BR-9, "Drain and Refill"](#).
2. Remove brake tube from brake hose using a suitable tool.

BRAKE TUBE AND HOSE


< SERVICE INFORMATION >

3. Remove lock plate, and remove brake hose.

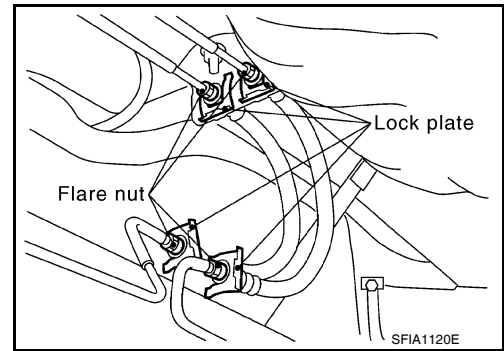

INSTALLATION

1. Connect brake hose to brake tube, and temporarily tighten flare nut by hand as much as possible.
2. Secure it to the bracket with the lock plate.
3. Tighten flare nut to the specified torque using a suitable tool. Refer to [BR-11, "Hydraulic Circuit"](#).

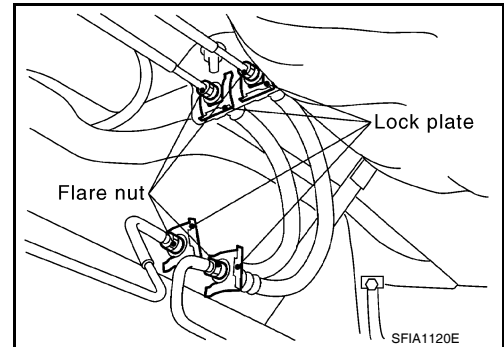

4. Bleed the air from the brake hydraulic system. Refer to [BR-9, "Bleeding Brake System"](#).

Inspection After Installation

INFOID:000000005396986

CAUTION:

- Always disassemble the parts and retighten their fittings, if a brake fluid leak is detected. Replace applicable part with a new one, if damaged part is detected.
 - If leak is detected at the connections, retighten it or replace the damaged part.
1. Check brake hose, tube, and connections for fluid leaks, damage, twisting, deformation, contact with other parts, and loose connections.
 2. While depressing pedal under a force of 785 N (80 kg-f, 177 lb-f) with the engine running for approximately 5 seconds, check for fluid leaks from each part of the brake hydraulic system.

DUAL PROPORTIONING VALVE

< SERVICE INFORMATION >

DUAL PROPORTIONING VALVE

Removal and Installation

INFOID:000000005396987

Removal

1. Remove cowl top . Refer to [EI-22. "Removal and Installation"](#).
2. Disconnect brake lines from dual proportioning valve.
 - Mark brake lines for installation.
3. Remove dual proportioning valve bolt and dual proportioning valve.
4. Remove two bolts and bracket.

Installation

Installation is in the reverse order of removal.

- When installing brake lines to the dual proportioning valve, tighten to specifications. Refer to [BR-11. "Hydraulic Circuit"](#).


Inspection

INFOID:000000005396988


CAUTION:

- Carefully monitor brake fluid level at master cylinder.
- Use the recommended new brake fluid. Refer to [MA-14. "Fluids and Lubricants"](#).
- Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on paint areas, wash it away with water immediately.

1. Connect a suitable brake fluid pressure gauge to air bleeders of front and rear brakes on either LH and RH side.

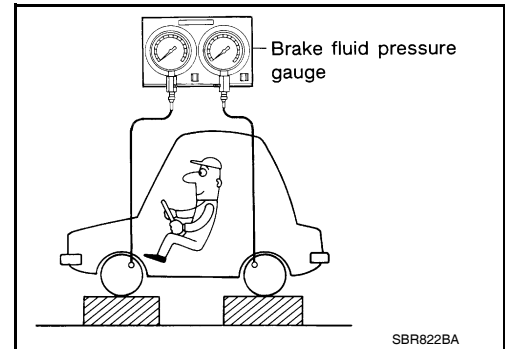

2. Bleed air from the brake fluid pressure gauge.

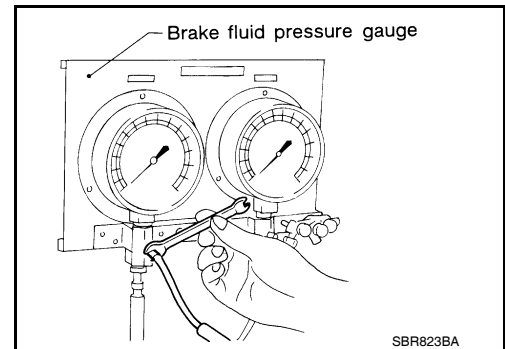

3. Check fluid pressure specification by depressing the brake pedal.
 - If output pressure is out of specification, replace the dual proportioning valve.

Unit: kPa (kg/cm², psi)

Applied pressure (Front brake)	7,355 (75, 1,067)
Output pressure (Rear brake)	5,099 - 5,492 (52 - 56, 740 - 796)

4. Bleed air after disconnecting the brake fluid pressure gauge. Refer to [BR-9. "Bleeding Brake System"](#).

BRAKE MASTER CYLINDER

< SERVICE INFORMATION >

BRAKE MASTER CYLINDER

On-Board Inspection


INFOID:000000005396989

LEAK INSPECTION

- Check for leaks around the master cylinder installation surface, the reservoir tank installation surface, and all the brake tube connections.

Removal and Installation

INFOID:000000005396990

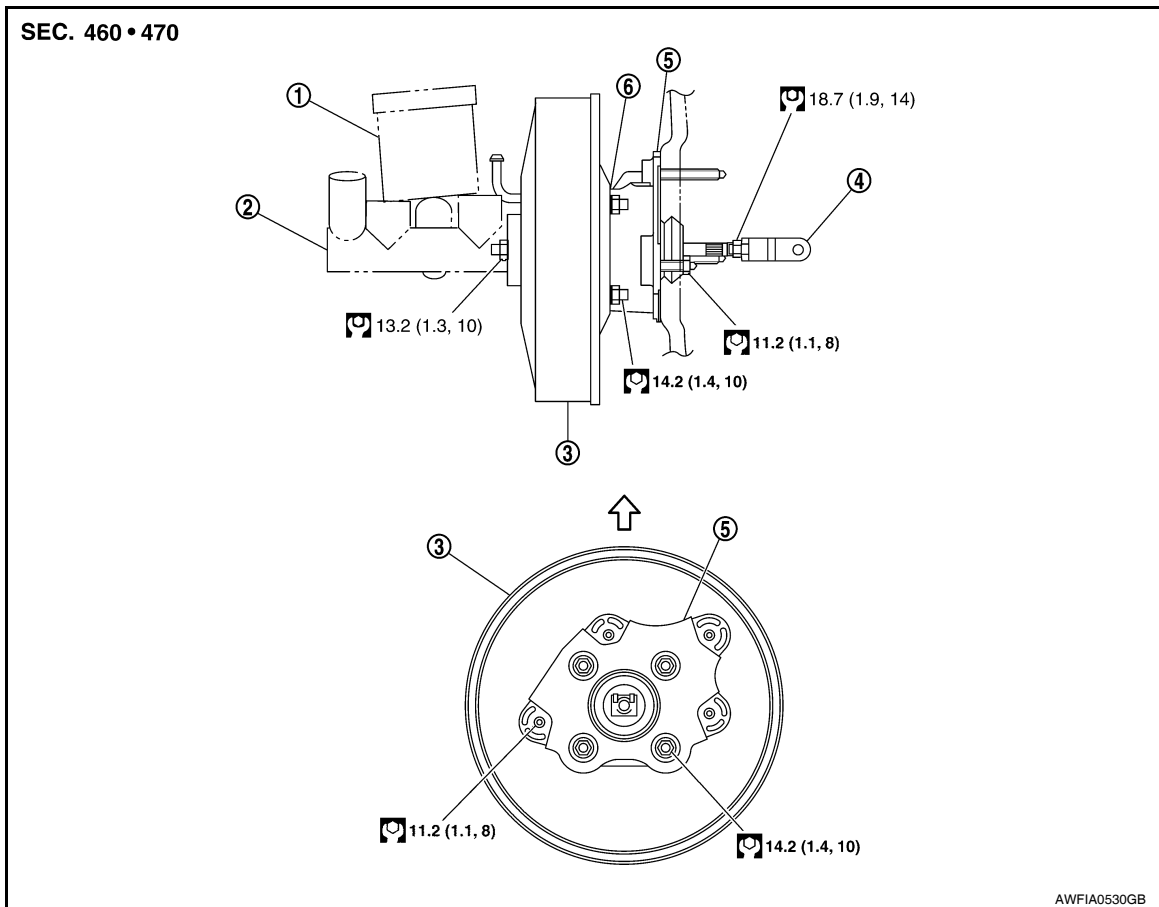

1. Reservoir tank

2. Master cylinder

3. Brake booster

4. Clevis

5. Spacer

6. Gasket

← Up

CAUTION:

Be careful not to splash brake fluid on painted areas; it may cause paint damage. If brake fluid is splashed on painted areas, immediately wipe them with cloth and wash it away with water.

REMOVAL

1. Drain the brake fluid. Refer to [BR-9. "Drain and Refill"](#).
2. Remove the battery. Refer to [SC-7. "Removal and Installation"](#).
3. Remove the air duct. Refer to [EM-135. "Removal and Installation"](#).
4. Remove the air cleaner. Refer to [EM-135. "Removal and Installation"](#).
5. Disconnect the brake fluid level switch harness connector.
6. Disconnect the clutch hose from the reservoir tank, if equipped.
7. Remove the brake tube from master cylinder using a suitable tool.
8. Remove the master cylinder assembly nuts, and remove master cylinder assembly.

BRAKE MASTER CYLINDER

< SERVICE INFORMATION >

INSTALLATION


CAUTION:

- Refill using recommended brake fluid. Refer to [MA-14, "Fluids and Lubricants"](#).
- Never reuse drained brake fluid.
- Check if the rod of primary piston has dust or scratches.

1. Install master cylinder to brake booster assembly, and tighten nuts to the specified torque.

CAUTION:

- Do not damage or strain rod of primary piston.
- Apply silicone grease for O-ring, primary piston rod and to inside of booster.

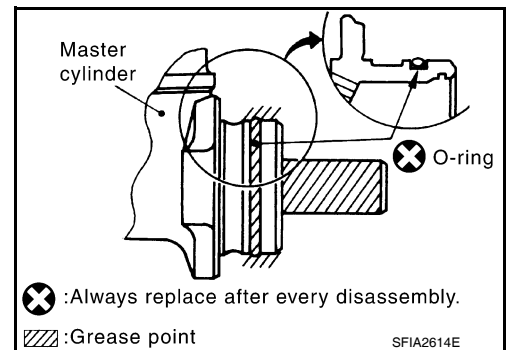


2. Install brake tube to master cylinder, and temporarily tighten the flare nuts on the brake tube to master cylinder by hand.
3. Install brake tube to brake hose, then tighten flare nut to the specified torque using a flare nut torque wrench. Refer to [BR-11, "Hydraulic Circuit"](#).
4. Connect the clutch hose to the reservoir tank, if equipped.
5. Connect brake fluid level switch harness connector.
6. Install the air cleaner. Refer to [EM-135, "Removal and Installation"](#).
7. Install the air duct. Refer to [EM-135, "Removal and Installation"](#).
8. Install the battery. Refer to [SC-7, "Removal and Installation"](#).
9. Refill with new brake fluid and bleed the air from the brake hydraulic system. Refer to [BR-9, "Bleeding Brake System"](#).

Disassembly and Assembly

INFOID:000000005396991

COMPONENTS

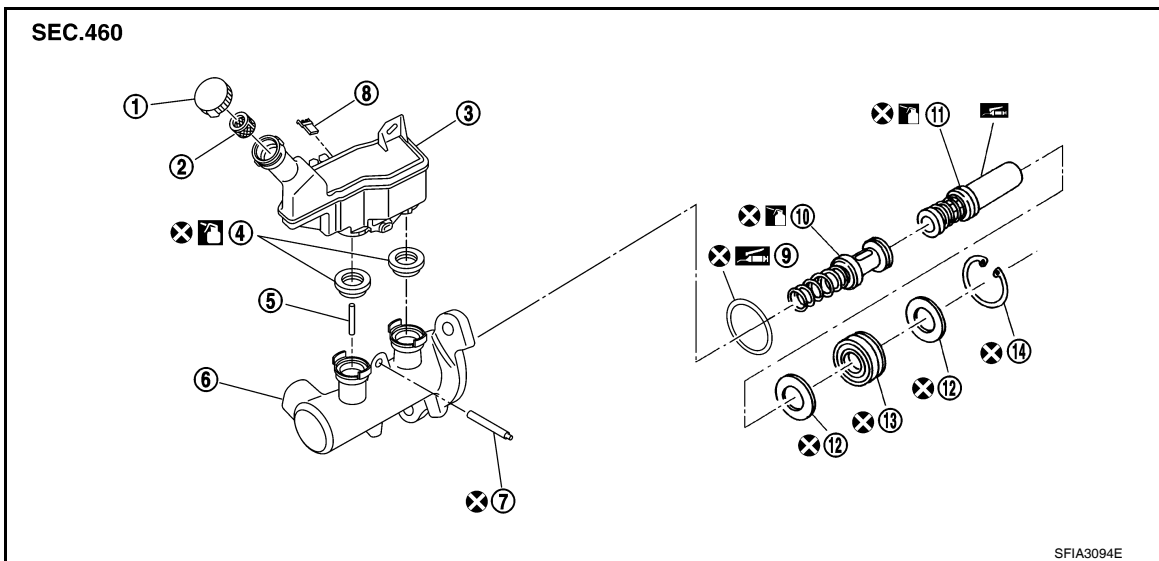

- | | | |
|-------------------------------|---------------------------------------|-------------------|
| 1. Reservoir cap | 2. Oil filter | 3. Reservoir tank |
| 4. Grommet | 5. Piston stopper | 6. Cylinder body |
| 7. Pin | 8. Brake fluid level switch connector | 9. O-ring |
| 10. Secondary piston assembly | 11. Primary piston assembly | 12. Plate |

BRAKE MASTER CYLINDER

< SERVICE INFORMATION >

13. Guide assembly

14. Snap ring



PBC (Poly Butyl Cuprysil) grease
or silicone-based grease



Brake fluid

DISASSEMBLY


CAUTION:

While working, cover primary piston rod with cloth to prevent it from being damaged.


1. Secure flange of cylinder body in vise as shown.

CAUTION:


- Use copper plate or cloth to cover flange when securing in vise.
- When securing master cylinder assembly in a vise, be sure not to over-tighten.

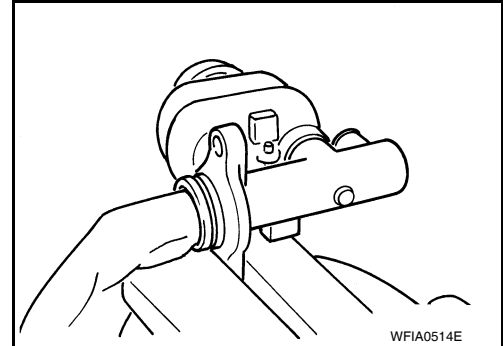

2. Using a pin-punch [commercial service tool: diameter approx. 4 mm (0.16 in)], remove pin from reservoir tank.
3. Remove master cylinder assembly from vise.
4. Remove reservoir tank and grommet from cylinder body.

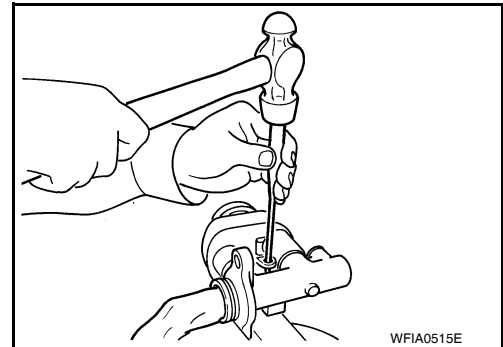

5. While pushing primary piston, remove piston stopper through secondary tank boss hole in the cylinder body.

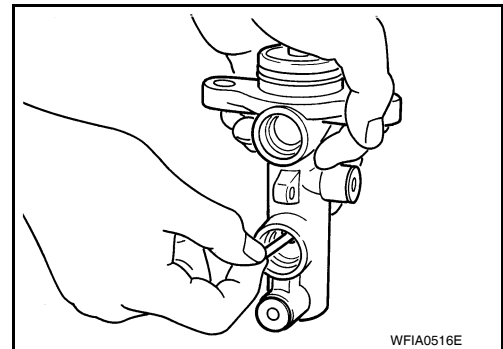

6. Remove snap ring with pushing primary piston.


CAUTION:

Be careful not to pop out piston.

7. Holding rod of primary piston, remove primary piston assembly, plate and guide assembly by pulling straight to prevent piston cup from being caught by the inner wall of cylinder.
8. Remove plate and guide assembly from primary piston.

CAUTION:

Be careful not to damage rod from the inner wall of plate.

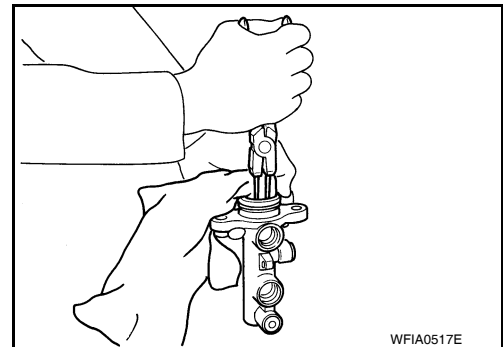

A

B

C

D

E

BR

G

H

I

J

K

L

M

N


O

P

BRAKE MASTER CYLINDER

< SERVICE INFORMATION >

9. Tap flange using a soft block such as wood, and carefully pull secondary piston assembly straight out to prevent cylinder inner wall from being damaged.

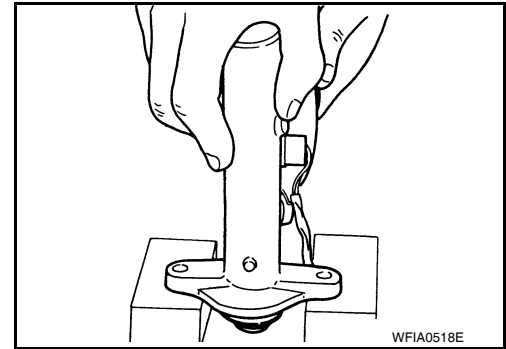

INSPECTION AFTER DISASSEMBLY

Cylinder Body

- Check the inner wall of cylinder for damage, wear, corrosion, and pin holes. Replace cylinder body if necessary.

ASSEMBLY


CAUTION:

- Never use mineral oils such as kerosene or gasoline during the cleaning and assembly processes.
- Make sure that there is no foreign material such as dirt and dust on the inner wall of cylinder, piston, and piston cup. Be careful not to damage parts with a service tool when assembling.
- Do not drop parts. If a part is dropped, do not use it.


1. Apply brake fluid to the inner wall of cylinder body, primary piston assembly and secondary piston assembly.
2. Insert secondary piston and primary piston assembly into cylinder body in this order.

CAUTION:

- Pay attention to the orientation of piston cup, and insert straight to prevent cup from being caught by the inner wall of cylinder.
- Always replace inner kit as a set.

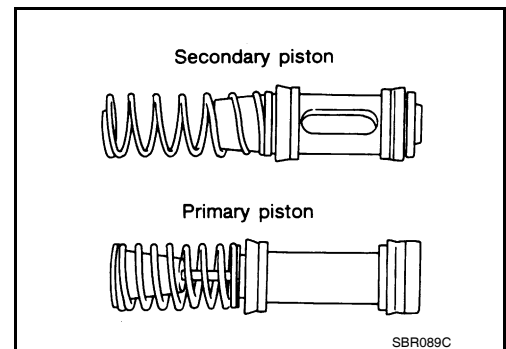


3. Set the slit of secondary piston towards the piston stopper mounting hole of cylinder body while pushing in the primary piston. Then install the piston stopper through the slit of secondary piston.

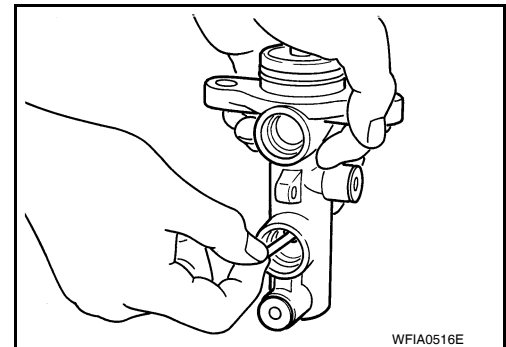

4. Insert plate and guide assembly into cylinder body.

CAUTION:

- Be careful not to damage rod of primary piston.
- Pay attention to the orientation of guide assembly.
- Do not drop O-ring.
- Be careful the guide and/or plate are not inserted at an angle to cylinder inner wall.

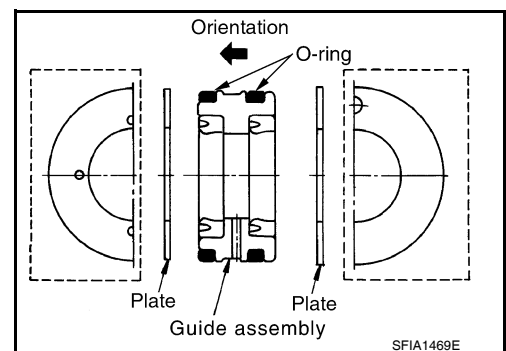


BRAKE MASTER CYLINDER

< SERVICE INFORMATION >

5. Be careful not to damage rod of primary piston with the cloth. Then insert snap ring to cylinder body while pushing primary piston.

CAUTION:


Make sure that snap ring is securely engaged in cylinder body inner diameter groove.

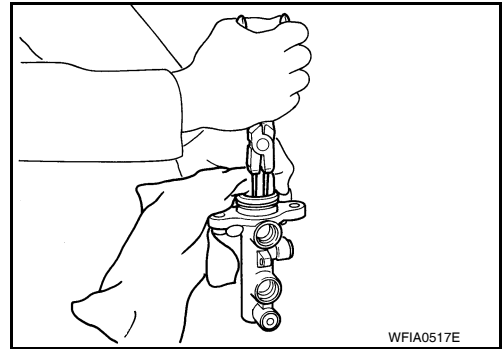

6. Apply brake fluid to a grommet, and press it into reservoir tank to install.
7. Install reservoir tank to cylinder body.

CAUTION:


Pay attention to the orientation of reservoir tank. Make sure reservoir tank is fully seated on master cylinder.

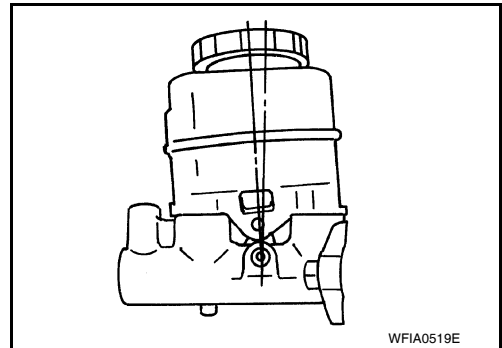


8. Secure flange of cylinder body in vise as shown.

CAUTION:

- Use copper plate or cloth to cover flange for securing in the vise.
- When securing master cylinder assembly in a vise, be sure not to over-tighten.
- Be sure to secure the flange part with the brake tube installation side of cylinder body facing up (chamfered pin insert hole of cylinder body facing up).

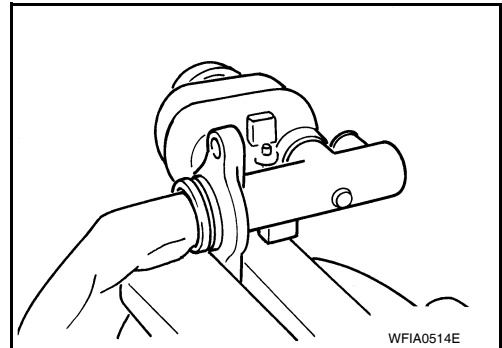

9. Using a pin punch [commercial service tool: diameter approx. 4 mm (0.16 in)], insert the reservoir tank pin into the pin hole.

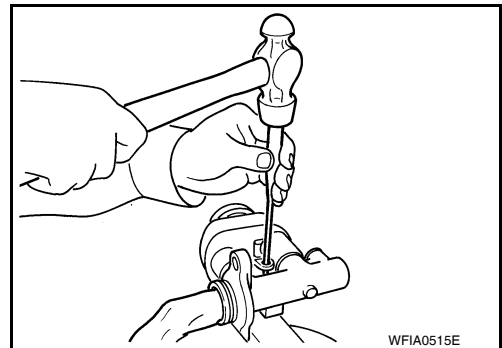

A
B
C
D
E
BR
G
H
I
J
K
L
M
N
O
P

BRAKE BOOSTER

< SERVICE INFORMATION >


BRAKE BOOSTER

On Board Inspection

INFOID:000000005396992


OPERATING CHECK

- With the engine stopped, change the vacuum to the atmospheric pressure by depressing brake pedal several times at intervals of 5 seconds.
- Then with brake pedal fully depressed, start engine and when the vacuum pressure reaches the standard, make sure that the clearance between brake pedal and floor panel decreases.

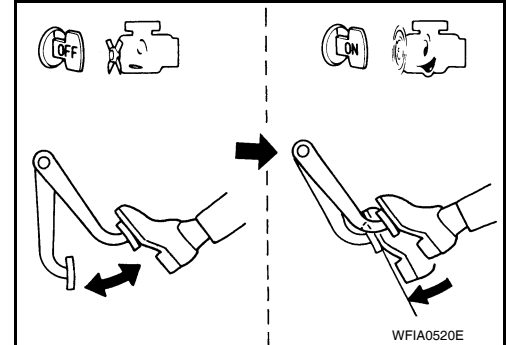

AIRTIGHT CHECK

- Run engine at idle for approximately 1 minute, and stop it after applying vacuum to booster. Depress brake pedal normally to change the vacuum to the atmospheric pressure. Make sure that distance between brake pedal and floor panel gradually increases.

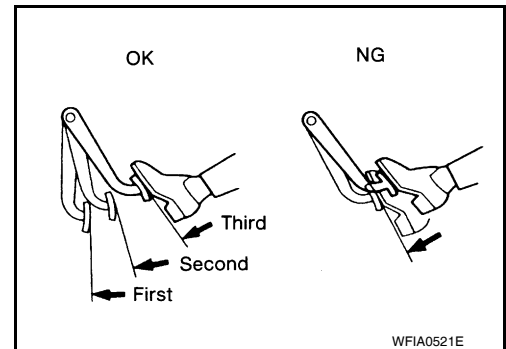


- Depress the brake pedal while engine is running, then stop engine with brake pedal depressed. The pedal stroke should not change after holding pedal down for 30 seconds.

BRAKE BOOSTER

< SERVICE INFORMATION >

Removal and Installation

INFOID:000000005396993

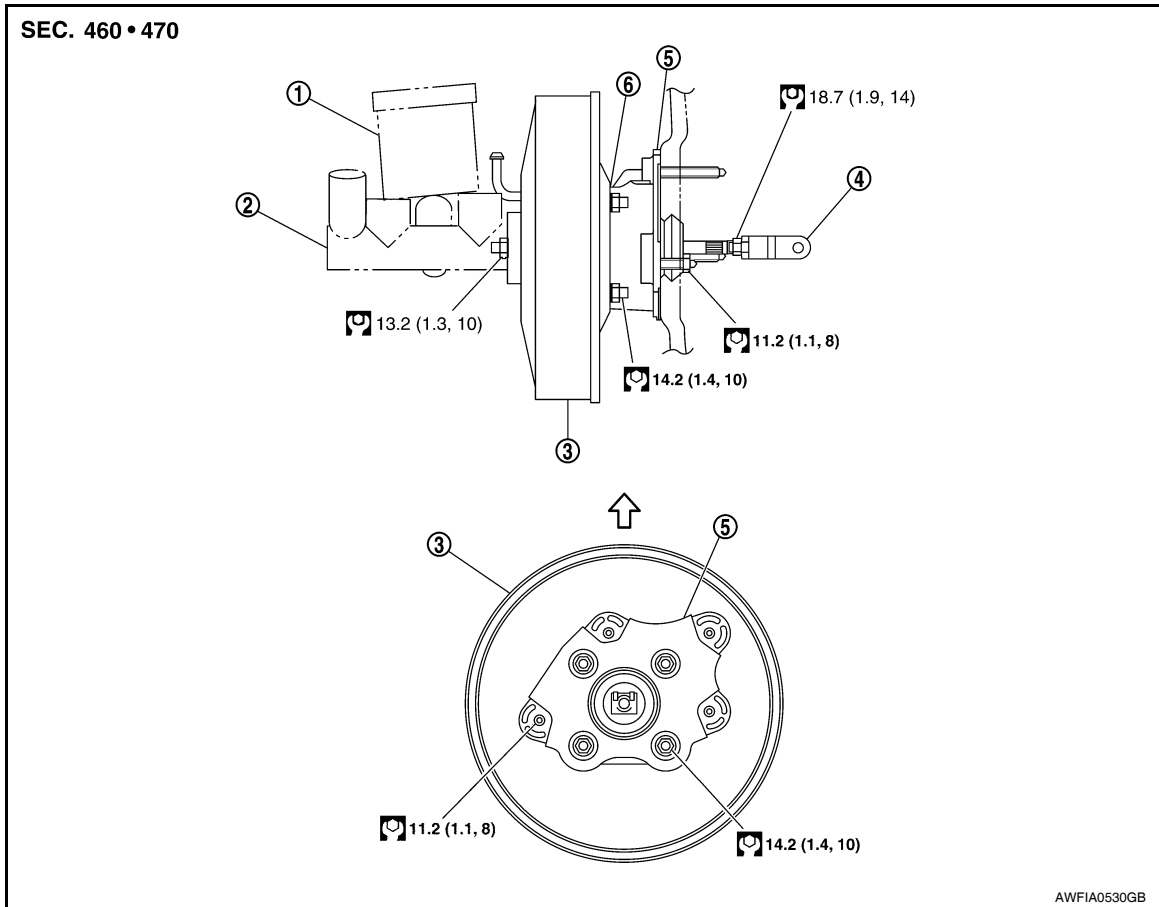

- | | | |
|-------------------|--------------------|------------------|
| 1. Reservoir tank | 2. Master cylinder | 3. Brake booster |
| 4. Clevis | 5. Spacer | 6. Gasket |
- ↶ Up

REMOVAL

CAUTION:


- Be careful not to splash brake fluid on painted areas such as body. If brake fluid is splashed on painted surfaces of body, wipe them with cloth immediately and then wash it away with water.
- Be careful not to deform or bend brake tubes while removing and installing brake booster.
- Replace clevis pin if it is damaged.
- Be careful not to damage brake booster stud bolt threads. If brake booster is tilted or inclined during installation, dash panel may damage the threads.

1. Remove vacuum hose from brake booster.
2. Remove master cylinder assembly. Refer to [BR-15, "Removal and Installation"](#).
3. Remove LH lower instrument panel. Refer to [IP-12, "Removal and Installation"](#)

BRAKE BOOSTER

< SERVICE INFORMATION >

4. Remove snap pin and clevis pin on the clevis of the brake booster, and disconnect the input rod from the brake pedal.

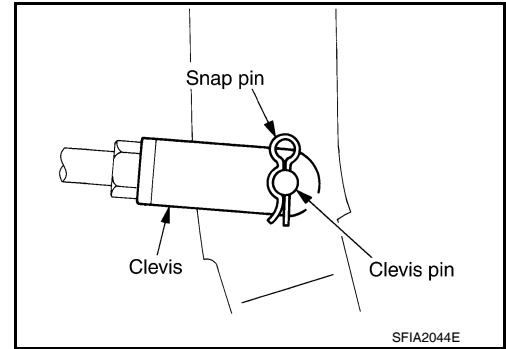

5. Remove brake pedal nuts on pedal bracket.
6. Remove cowl top. Refer to [EI-22, "Removal and Installation"](#)
7. Remove between spacer and dash panel nut from dash panel.
8. Remove brake booster and spacer.
9. Remove spacer from brake booster.

INSTALLATION

1. Loosen lock nut to adjust input rod length (B) to the specified value.


Input rod length (B) : Refer to [BR-42, "Brake Booster"](#).

2. Install spacer and gasket to brake booster and tighten spacer nut (brake booster side) to the specified torque.

CAUTION:

Be sure to install the gasket between brake booster and dash panel.

3. After adjusting length (B), temporarily tighten lock nut to install brake booster assembly to dash panel.
4. Connect brake pedal to clevis of input rod with the clevis pin and snap pin.
5. Install brake pedal bracket nuts and tighten them to the specified torque.
6. Install master cylinder assembly. Refer to [BR-15, "Removal and Installation"](#).
7. Adjust the height and play of brake pedal. Refer to [BR-6, "Inspection and Adjustment"](#).
8. Tighten lock nut of input rod to the specified torque.
9. Install vacuum hose into brake booster. Refer to [BR-23, "Removal and Installation"](#).
10. Install cowl top. Refer to [EI-22, "Removal and Installation"](#).
11. Install LH lower instrument panel. Refer to [IP-12, "Removal and Installation"](#)
12. Bleed the air from the brake hydraulic system. Refer to [BR-9, "Bleeding Brake System"](#).

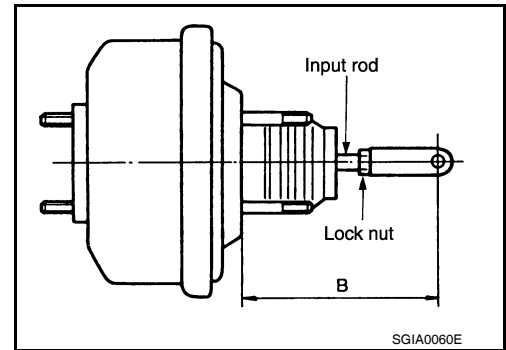


VACUUM LINES

< SERVICE INFORMATION >

VACUUM LINES

Component

INFOID:000000005396994

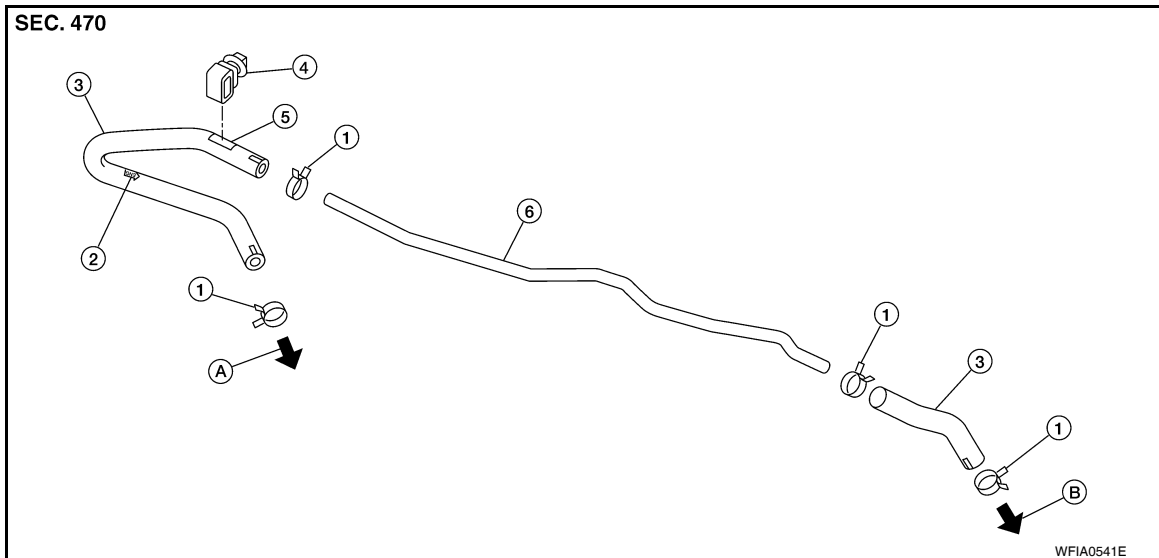

- | | | |
|-----------------------|---|----------------|
| 1. Hose clamp | 2. Engine side indicator stamp (for built-in check valve orientation) | 3. Vacuum hose |
| 4. Clip | 5. Clip position stamp | 6. Vacuum tube |
| A. To intake manifold | B. To brake booster | |

Removal and Installation

INFOID:000000005396995

REMOVAL


1. Disconnect the vacuum hose from the intake manifold.
2. Disconnect the vacuum hose from the brake booster.
3. Disconnect the vacuum hose from the clip and remove the vacuum hose and vacuum tube assembly.

INSTALLATION

Installation is in the reverse order of removal.

CAUTION:

- Because the vacuum hose at the intake manifold contains a built-in check valve, it must be installed in the correct orientation. Refer to the stamp or label to confirm correct installation orientation. Brake booster will not operate normally if hose is installed in the reverse orientation.
- Insert vacuum hose at least 24 mm (0.94 in) on to the vacuum tube and vacuum fittings on the brake booster and intake manifold as shown.
- Never use lubricating oil during assembly.

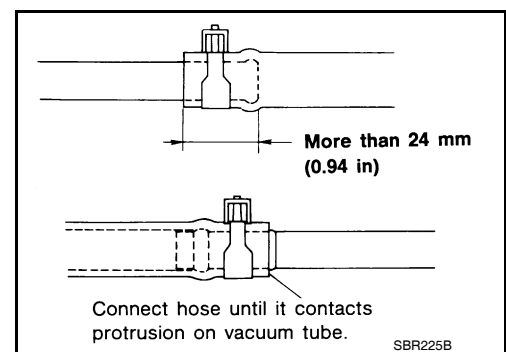

Inspection

INFOID:000000005396996

VISUAL INSPECTION

Check for improper installation, damage and deterioration. Replace parts as necessary.

CHECK VALVE INSPECTION


VACUUM LINES

< SERVICE INFORMATION >

Use a hand vacuum pump to check the built-in valve.
Replace the vacuum hose with the built-in check valve as an assembly if the vacuum hose is out of specifications.

**When connected to booster side (1) : Refer to [BR-41](#),
["Check Valve"](#).**

**When connected to engine side (2) : Refer to [BR-41](#),
["Check Valve"](#).**

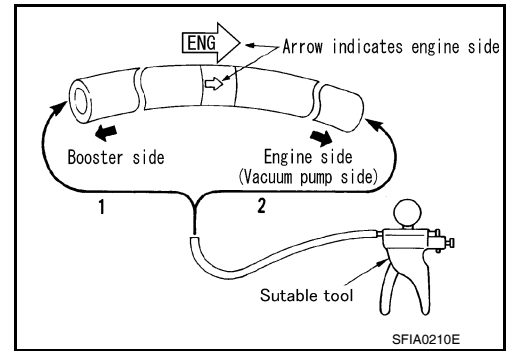

FRONT DISC BRAKE

< SERVICE INFORMATION >

FRONT DISC BRAKE

On Board Inspection


INFOID:000000005396997

PAD WEAR INSPECTION

- Check pad thickness from check hole on cylinder body.

Standard thickness : Refer to **BR-42, "Front Disc Brake"**.

Repair limit thickness : Refer to **BR-42, "Front Disc Brake"**.

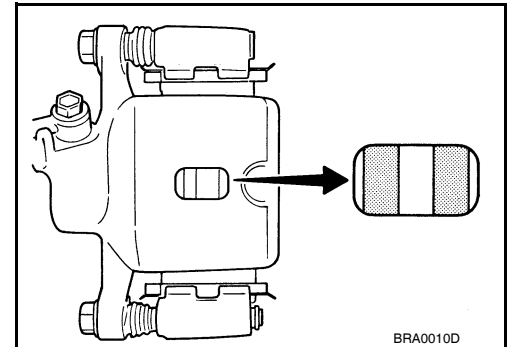


BRA0010D

Component

INFOID:000000005396998

AD22VK

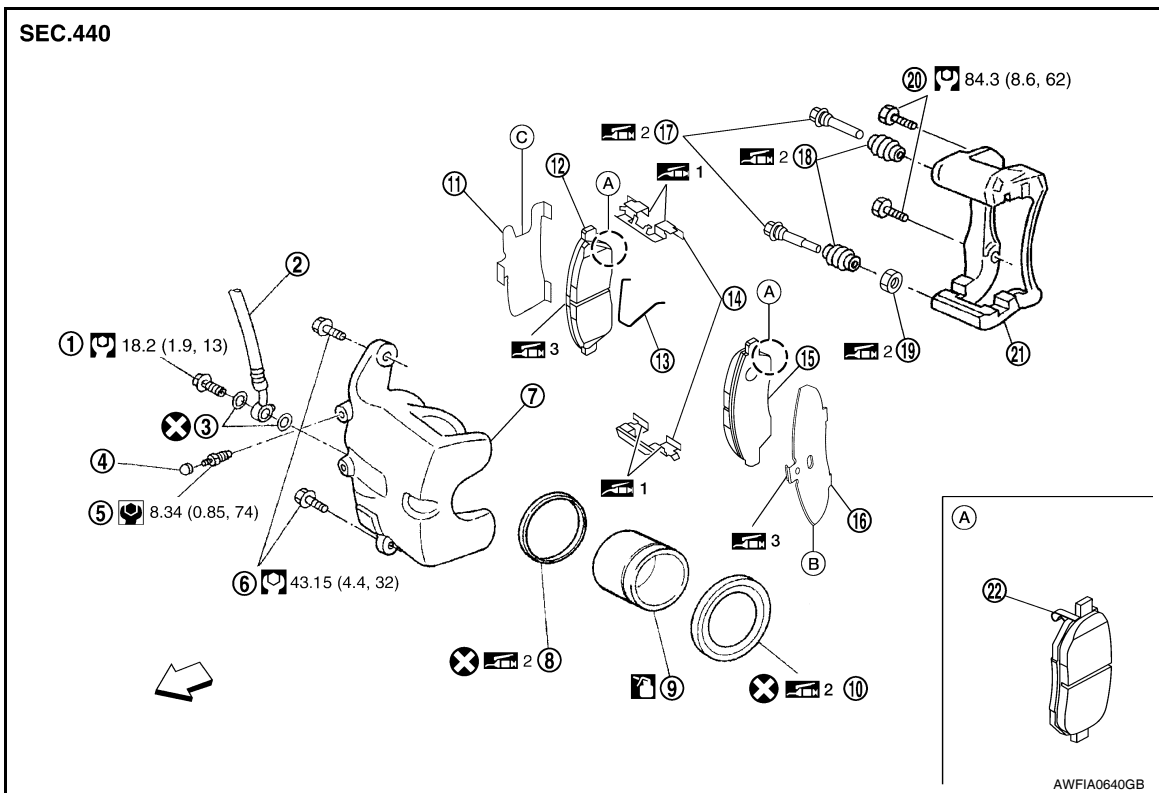


- | | | |
|-----------------------|------------------------|----------------------|
| 1. Union bolt | 2. Brake hose | 3. Copper washer |
| 4. Cap | 5. Bleed valve | 6. Sliding pin bolt |
| 7. Cylinder body | 8. Piston seal | 9. Piston |
| 10. Piston boot | 11. Inner shim | 12. Inner pad |
| 13. Pad return spring | 14. Pad retainer | 15. Outer pad |
| 16. Outer shim | 17. Sliding pin | 18. Sliding pin boot |
| 19. Bushing | 20. Torque member bolt | 21. Torque member |
| 22. Pad wear sensor | ← : Front | ☑ : Brake fluid |
- 1: Molykote 7439 grease
 2: Rubber grease
 3: Molykote AS-880N grease

FRONT DISC BRAKE

< SERVICE INFORMATION >

CLZ25VF

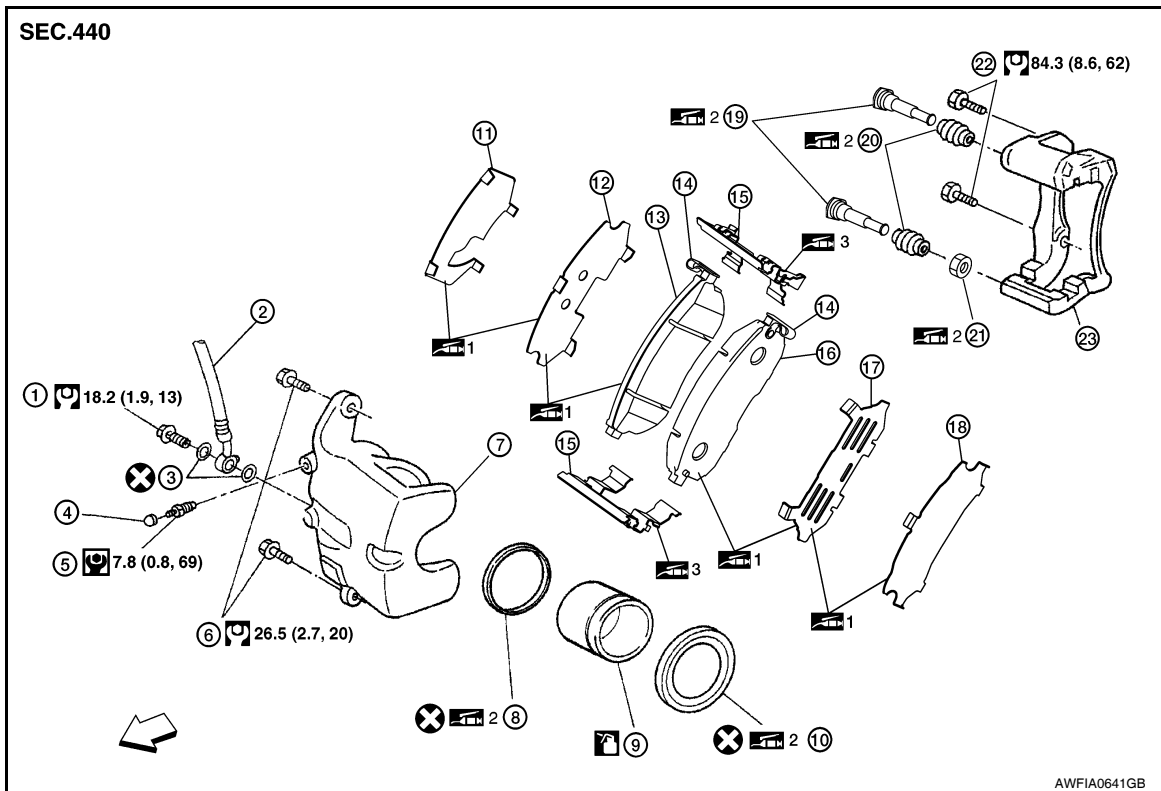

- | | | |
|------------------------|----------------------|----------------------|
| 1. Union bolt | 2. Brake hose | 3. Copper washer |
| 4. Cap | 5. Bleed valve | 6. Sliding pin bolt |
| 7. Cylinder body | 8. Piston seal | 9. Piston |
| 10. Piston boot | 11. Inner shim cover | 12. Inner shim |
| 13. Inner pad | 14. Pad wear sensor | 15. Pad retainer |
| 16. Outer pad | 17. Outer shim | 18. Outer shim cover |
| 19. Sliding pin | 20. Sliding pin boot | 21. Bushing |
| 22. Torque member bolt | 23. Torque member | ← Front |
- : Brake fluid
 1: Molykote AS-880N grease 2: Rubber grease
 3: Molykote 7439 grease

CAUTION:

- Clean dust on caliper and brake pad with a vacuum dust collector. Do not blow with compressed air.
- While removing brake pad or cylinder body, do not depress brake pedal because piston will pop out.
- It is not necessary to remove torque member mounting bolts and brake hose except for disassembly or replacement of caliper assembly. In this case, hang cylinder body with a wire so that brake hose is not under tension.
- Do not damage piston boot.
- If any shim is subject to serious corrosion, replace it with a new one.
- Keep rotor free from brake fluid.
- When replacing brake pad, replace shim with a new one.

Removal and Installation of Brake Pad

INFOID:000000005396999

AD22VK


Removal

1. Partially drain brake fluid reservoir. Refer to [BR-9. "Drain and Refill"](#).
2. Remove front wheel and tire using power tools.


FRONT DISC BRAKE

< SERVICE INFORMATION >

3. Remove sliding pin bolt (lower side).

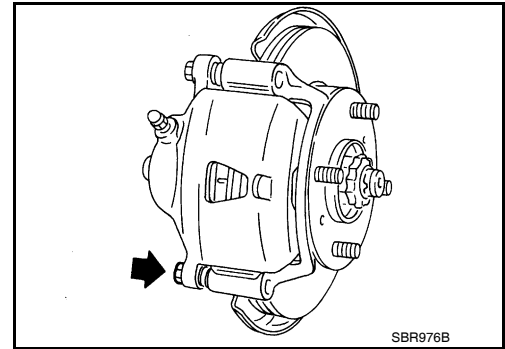


4. Hang cylinder body with a wire, and remove pad return spring, pads, shims and pad retainers from torque member.

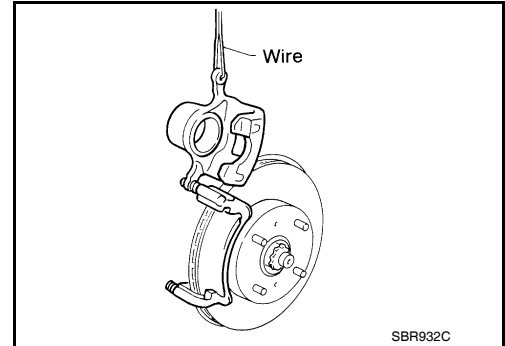

CAUTION:

When removing pad retainer from torque member, lift pad retainer in the direction shown by arrow, so as not to deform it.

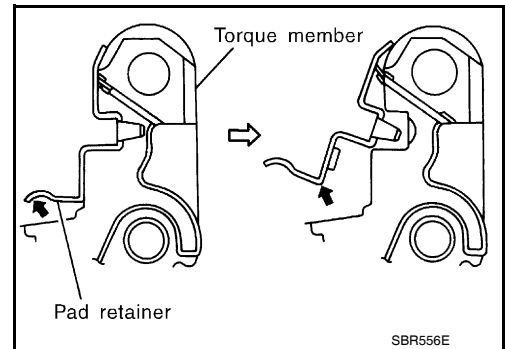


Installation

1. Apply Molykote AS-880N grease to the shims. Install shims to pads.

CAUTION:

Securely install shims according to mounting direction of pads.

2. Apply Molykote 7439 grease as shown.

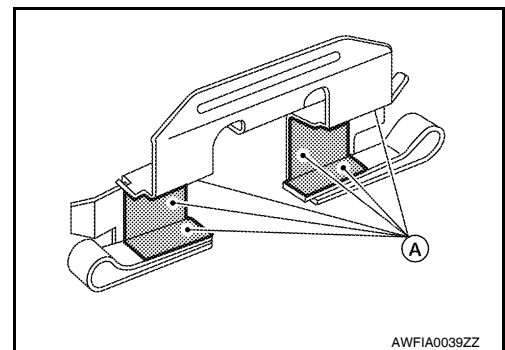


3. Install pad retainers, pad return spring, shims and pads to the torque member.

CAUTION:

FRONT DISC BRAKE

< SERVICE INFORMATION >

- When installing pad retainer, attach it firmly so that it is not lifted up from torque member, as shown.

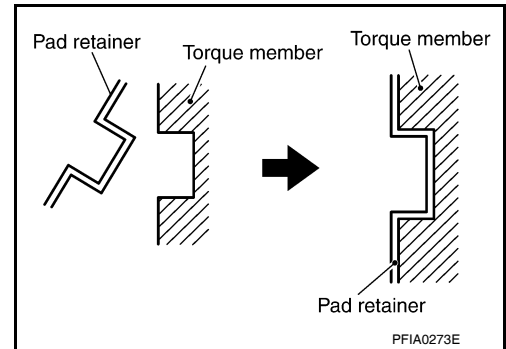


4. Install cylinder body to torque member and apply rubber grease then install lower sliding pin bolt (lower side), and tighten it to the specified torque. Refer to [BR-25, "Component"](#).

CAUTION:

Check the brake fluid level in the reservoir tank for fluid level because brake fluid returns to master cylinder reservoir tank when pressing piston in.

NOTE:

Use a disc brake piston tool (commercial service tool) to easily press to piston in.

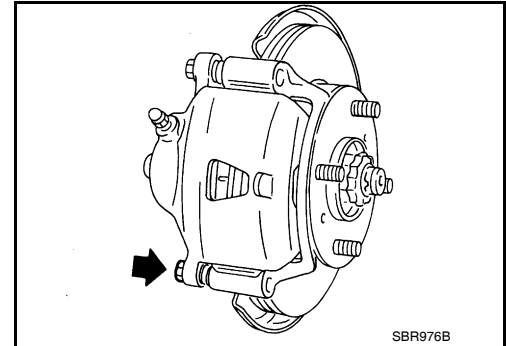


5. Check brakes for drag.
6. Install front wheel and tire. Refer to [WT-7, "Adjustment"](#).
7. Check brake fluid level. Refer to [BR-9, "On Board Inspection"](#).


CLZ25VF

Removal

1. Partially drain brake fluid from reservoir. refer to [BR-9, "Drain and Refill"](#).
2. Remove the front wheel and tire using power tool.
3. Remove sliding pin bolt (lower side).

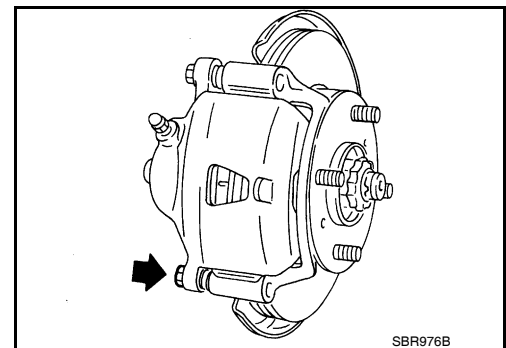

4. Hang cylinder body with a wire, and remove pads, shims and pad retainers from torque member.

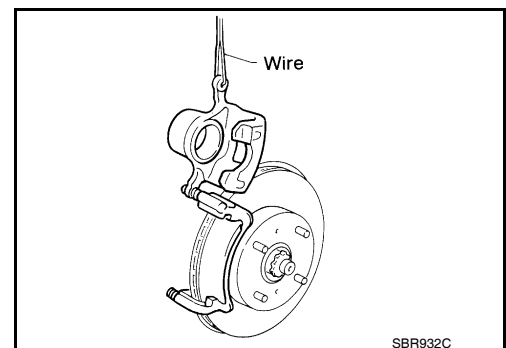


CAUTION:

FRONT DISC BRAKE

< SERVICE INFORMATION >

When removing pad retainer from torque member, lift pad retainer in the direction shown by arrow, so as not to deform it.

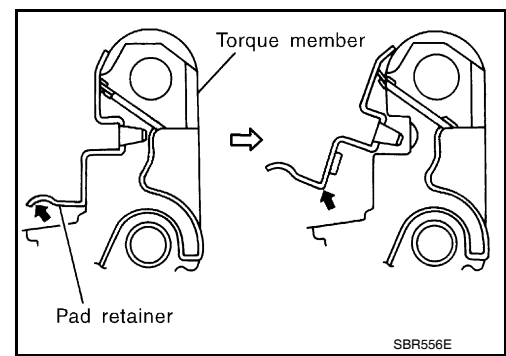


Installation

1. Apply Molykote AS-880N grease to the shims. Install shims to pads.

CAUTION:

Securely install shims according to mounting direction of pads.


2. Apply Molykote 7439 grease as shown.

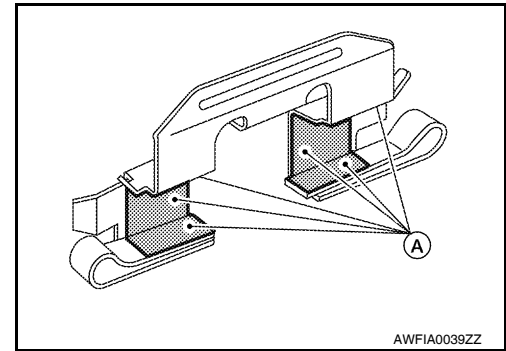

3. Install pad retainers and pads to the torque member.

CAUTION:

When installing pad retainer, attach it firmly so that it is not lifted up from torque member, as shown.

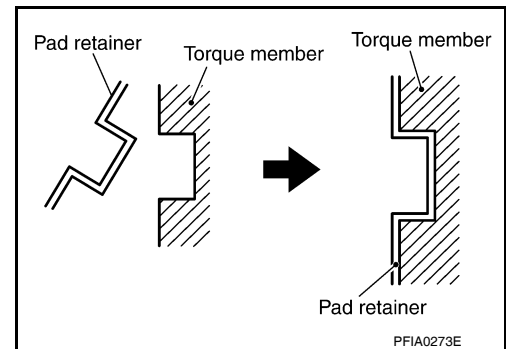


4. Install cylinder body over the pads and shims on to torque member and apply rubber grease then install lower sliding pin bolt (lower side), and tighten it to the specified torque. Refer to [BR-25, "Component"](#).

CAUTION:

Check the brake fluid level in the reservoir tank for fluid level because brake fluid returns to master cylinder reservoir tank when pressing piston in.

NOTE:

Use a disc brake piston tool (commercial service tool) to easily press to piston in.

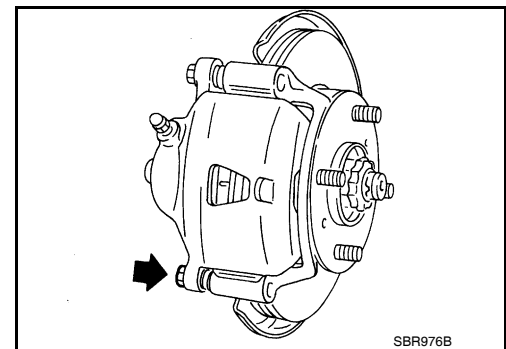

5. Check brake for drag.
6. Install the front wheel and tire. Refer to [WT-7, "Adjustment"](#).
7. Check brake fluid level. Refer to [BR-9, "On Board Inspection"](#).

FRONT DISC BRAKE

< SERVICE INFORMATION >

Removal and Installation of Brake Caliper Assembly


INFOID:000000005397000

REMOVAL

1. Remove front wheel and tire.
2. Secure the disc rotor using wheel nuts.

CAUTION:


Put matching marks on wheel hub assembly and disc rotor, if it is necessary to remove the disc rotor.

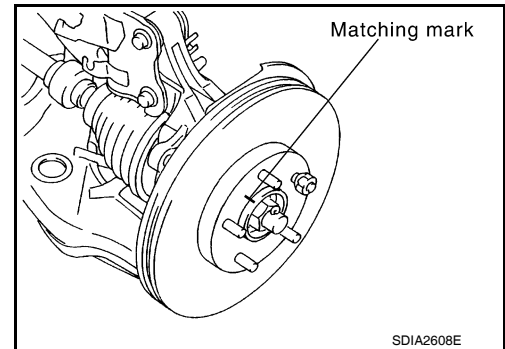


3. Drain brake fluid. Refer to [BR-9, "Drain and Refill"](#).
4. Remove the union bolt (A) and discard the copper washers.
Remove the brake hose from the cylinder body.
 - Protrusions (B)

CAUTION:

Do not reuse the copper washers

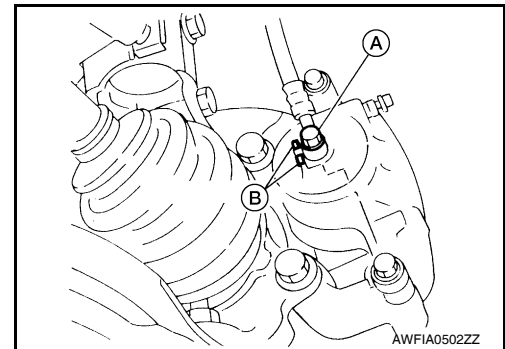

5. Remove the torque member bolts and remove the cylinder body and torque member as an assembly.

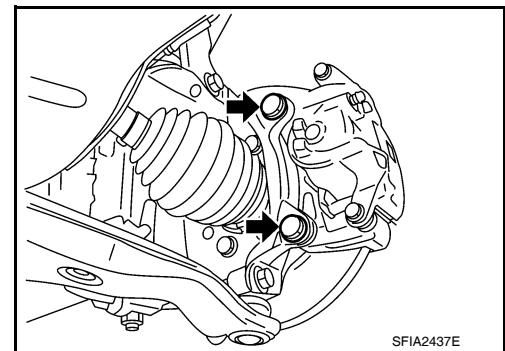


INSTALLATION

1. Install the torque member and cylinder body as an assembly and tighten the torque member bolts to the specified torque. Refer to [BR-25, "Component"](#).

CAUTION:


Before installing torque member to vehicle, wipe oil and grease on mounting surface of steering knuckle and torque member.

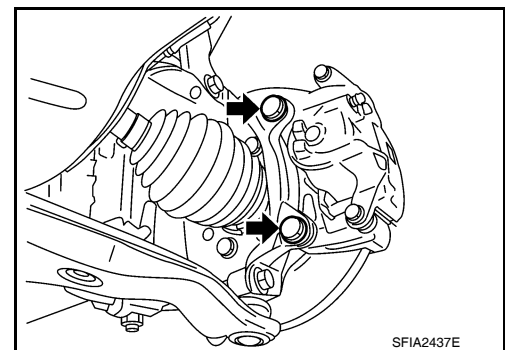

FRONT DISC BRAKE


< SERVICE INFORMATION >

2. Install the brake hose to caliper assembly with new copper washers. Align the brake hose tab between the protrusions (B) on the cylinder body as shown. Tighten the union bolt (A) to the specified torque. Refer to [BR-11. "Hydraulic Circuit"](#).

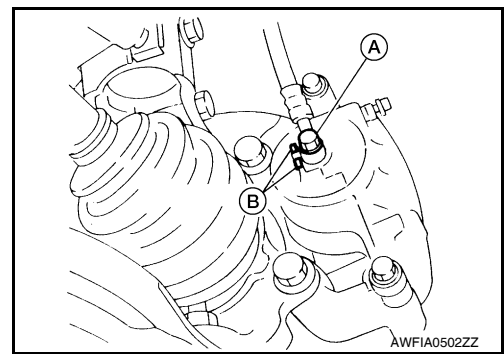

CAUTION:

Do not reuse the copper washers

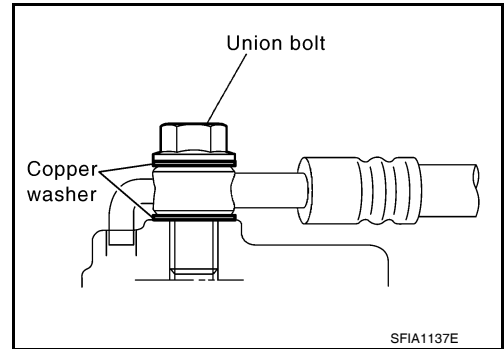

3. Refill with new brake fluid and bleed air. Refer to [BR-9. "Bleeding Brake System"](#).
4. Check front disc brake for drag.
5. Install front wheel and tire. Refer to [WT-7. "Adjustment"](#).

Disassembly and Assembly of Brake Caliper Assembly

INFOID:000000005397001


DISASSEMBLY

1. Remove the caliper assembly. Refer to [BR-30. "Removal and Installation of Brake Caliper Assembly"](#).

2. Remove sliding pin bolts and remove cylinder body from the torque member. Remove pads, shims, pad return spring (AD22VK) and pad retainers from torque member as necessary.

CAUTION:


When removing pad retainer from torque member, lift the pad retainer in the direction shown by arrow, so as not to deform it.

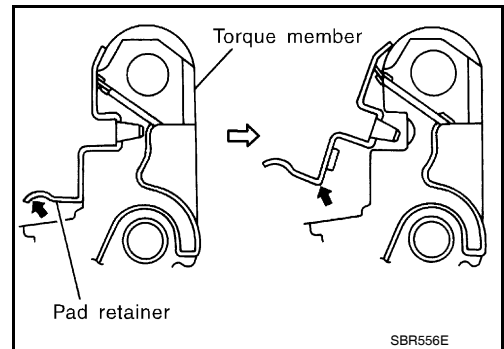

3. Remove sliding pins and sliding pin boots from torque member.
4. Place a wooden block as shown, and blow air from union bolt mounting hole to remove piston and piston boot.

CAUTION:

Do not get fingers caught in the piston.

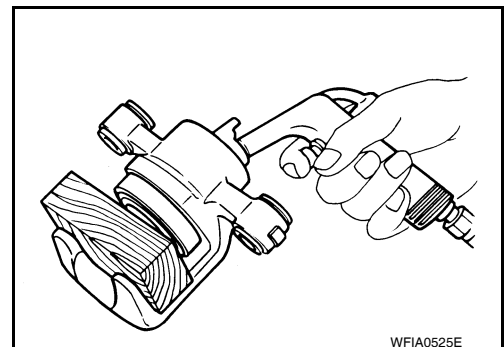


FRONT DISC BRAKE

< SERVICE INFORMATION >

5. Remove piston seal with a flat-bladed screwdriver.

CAUTION:

Be careful not to damage the inner wall of cylinder.

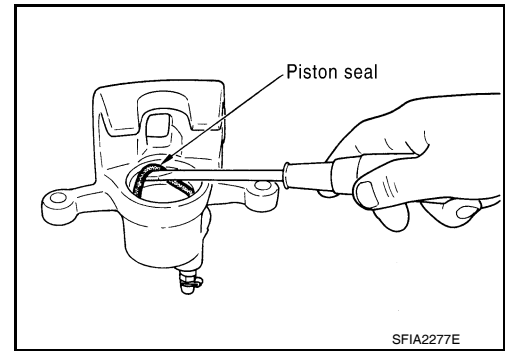

INSPECTION AFTER DISASSEMBLY

Cylinder Body

Check the inner wall of cylinder for corrosion, wear, and damage. Replace cylinder body as necessary.

CAUTION:

Clean cylinder body using new brake fluid. Never use mineral oils such as gasoline or kerosene.

Torque Member

Check for wear, cracks, and damage. Replace torque member as necessary.

Piston

Check piston surface for corrosion, wear, and damage. Replace piston as necessary.

CAUTION:

The piston sliding surface is plated. Do not polish with sandpaper.

Sliding Pin, Sliding Pin Bolt, and Sliding Pin Boot

Check sliding pins, sliding pin bolts and sliding pin boots for wear, damage, and cracks. Replace applicable part as necessary.

DISC ROTOR INSPECTION

Visual Inspection

Check surfaces of disc rotor for uneven wear, cracks, and serious damage. Replace as necessary.

Runout Inspection

1. Using wheel nuts, secure disc rotor to wheels hub at two or more positions.
2. Using a dial indicator, check runout.


CAUTION:

Make sure that wheel bearing axial end play is within the specifications before measuring runout. Refer to [FAX-6, "On-Vehicle Inspection and Service"](#).

Runout limit : Refer to [BR-42, "Front Disc Brake"](#).
[measured at 10.0 mm (0.394 in) inside the disc edge]

3. If runout is outside the limit, find the minimum runout point by shifting the mounting positions of disc rotor and wheel hub by one hole.
4. If runout is still out of the specification, grind rotor on-car using Tool until runout is within the specified limit.

Tool number : 38-PFM90.5 (—)

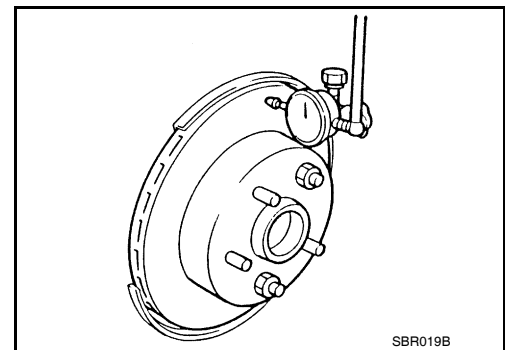


Thickness Inspection

FRONT DISC BRAKE

< SERVICE INFORMATION >

Using a micrometer, check thickness of disc rotor. If thickness is outside the specifications, replace disc rotor.

- Standard thickness (new)** : Refer to [BR-42, "Front Disc Brake"](#).
- Repair limit thickness** : Refer to [BR-42, "Front Disc Brake"](#).
- Maximum uneven wear (measured at 8 positions)** : Refer to [BR-42, "Front Disc Brake"](#).

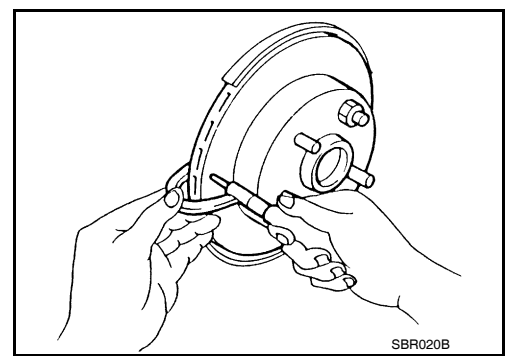


ASSEMBLY


CAUTION:

When assembling, use only specified lubricant.

1. Apply rubber grease to new piston seal and install on cylinder body.

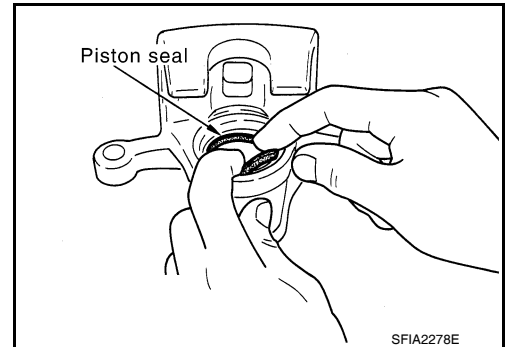

2. Apply rubber grease (CL25VF) or polyglycol ether based lubricant (AD22VK) to piston boot and apply brake fluid to piston. Cover the piston end with piston boot, and install cylinder-side lip on piston boot properly into groove on cylinder body.

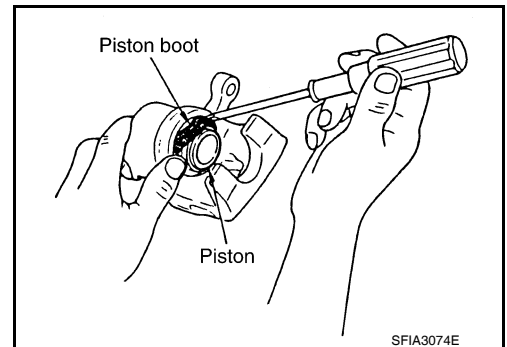


3. Press piston into cylinder body by hand to assemble piston-side lip on piston boot properly into a groove on piston.

CAUTION:

Press piston evenly and change pressing point to prevent inner wall of cylinder from being rubbed.

4. Install sliding pins and sliding pin boots to the torque member.

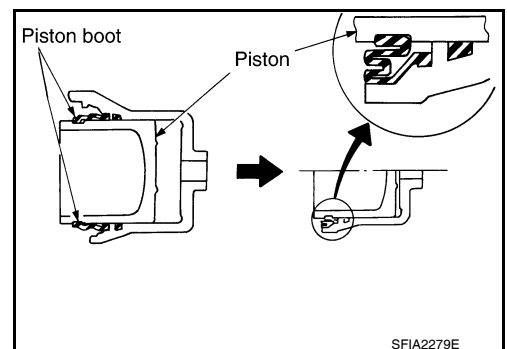

5. Install pads, shims, pad return spring (AD22VK) and pad retainers on the torque member. Refer to [BR-26, "Removal and Installation of Brake Pad"](#).
6. Install cylinder body to torque member.
7. Tighten sliding pin bolts to specified torque. Refer to [BR-25, "Component"](#).
8. Install the caliper assembly. Refer to [BR-30, "Removal and Installation of Brake Caliper Assembly"](#).

FRONT DISC BRAKE

< SERVICE INFORMATION >

Brake Burnishing Procedure

INFOID:000000005397002

Burnish the new braking surfaces according to following procedure after refinishing or replacing disc rotors, pads, or if a soft pedal occurs at very low mileage.

CAUTION:

- **Be careful of vehicle speed because brake does not operate easily until pad and disc rotor are securely fitted.**
 - **Only perform this procedure under safe road and traffic conditions. Use extreme caution.**
1. Drive vehicle on straight, flat road.
 2. Depress brake pedal with the power to stop vehicle within 3 to 5 seconds until the vehicle stops.
 3. Drive without depressing brake pedal for a few minutes to cool brake.
 4. Repeat steps 1 to 3 until pad and disc rotor are securely fitted.


REAR DRUM BRAKE

< SERVICE INFORMATION >

REAR DRUM BRAKE

Component

INFOID:000000005397003

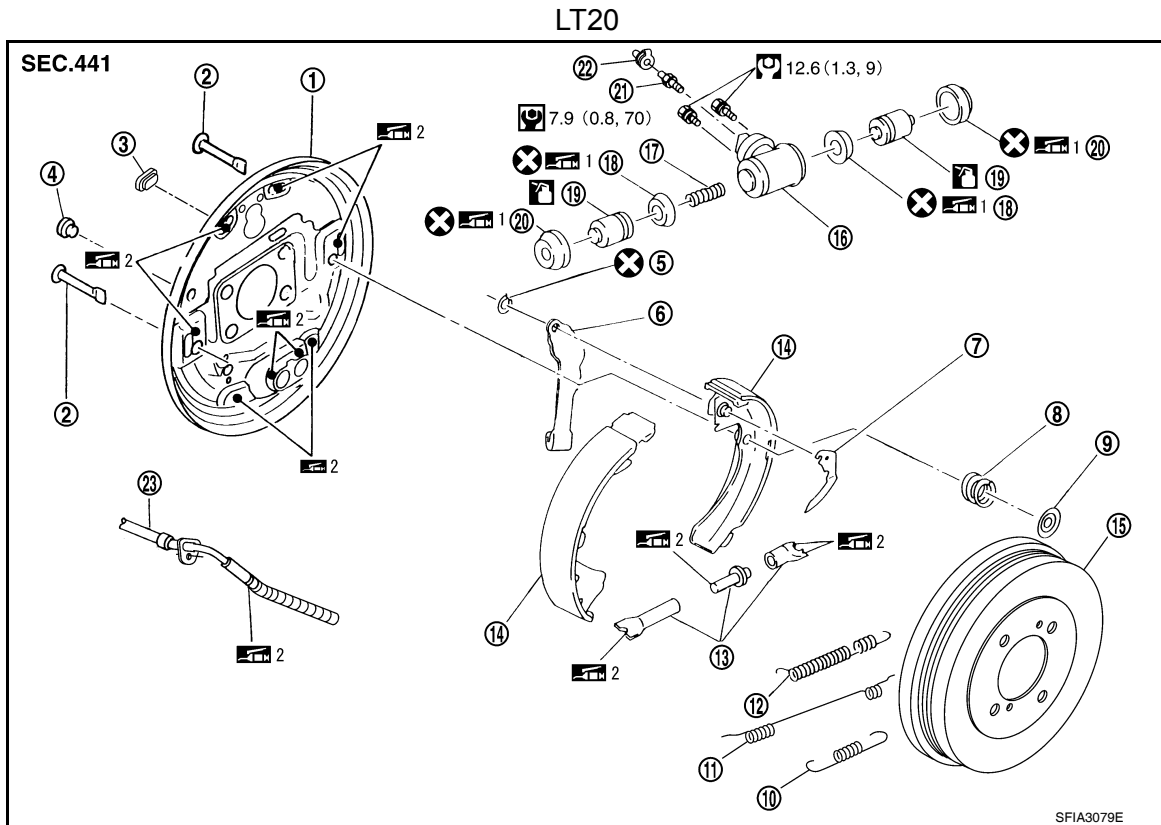

- | | | |
|--------------------------------|--------------------------------|---------------------|
| 1. Back plate | 2. Shoe hold pin | 3. Plug |
| 4. Plug | 5. Retainer ring | 6. Operating lever |
| 7. Adjuster lever | 8. Spring | 9. Retainer |
| 10. Return spring (lower side) | 11. Return spring (upper side) | 12. Adjuster spring |
| 13. Adjuster | 14. Brake shoe | 15. Brake drum |
| 16. Wheel cylinder | 17. Spring | 18. Piston seal |
| 19. Piston | 20. Boot | 21. Bleed valve |
| 22. Cap | 23. Parking brake rear cable | |

1: Rubber grease

2: PBC (Poly Butyl Cuprysil) grease or silicone-based grease


: Brake fluid

A
B
C
D
E
BR
G
H
I
J
K
L
M
N
O
P

REAR DRUM BRAKE

< SERVICE INFORMATION >

LT23

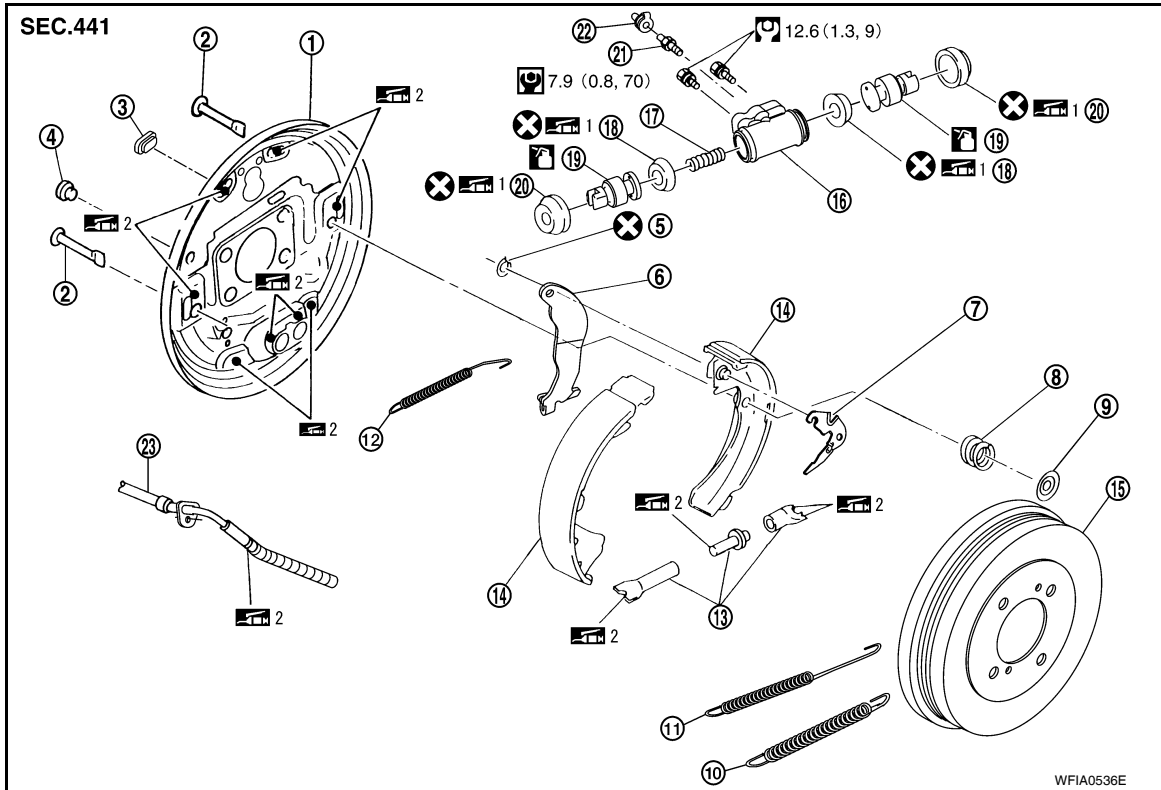

- | | | |
|--------------------------------|--------------------------------|---------------------|
| 1. Back plate | 2. Shoe hold pin | 3. Plug |
| 4. Plug | 5. Retainer ring | 6. Operating lever |
| 7. Adjuster lever | 8. Spring | 9. Retainer |
| 10. Return spring (lower side) | 11. Return spring (upper side) | 12. Adjuster spring |
| 13. Adjuster | 14. Brake shoe | 15. Brake drum |
| 16. Wheel cylinder | 17. Spring | 18. Piston seal |
| 19. Piston | 20. Boot | 21. Bleed valve |
| 22. Cap | 23. Parking brake rear cable | |
- 1: Rubber grease
 2: PBC (Poly Butyl Cuprysil) grease or silicone-based grease
 : Brake fluid

CAUTION:

- Clean dust on drum and back plate with a vacuum dust collector. Do not blow with compressed air.
- Make sure parking brake lever is released completely.

Removal and Installation of Drum Brake Assembly

INFOID:000000005397004


REMOVAL

1. Remove rear wheel and tire using power tool.
2. With the parking brake lever released, remove the brake drum. If it is difficult to remove the brake drum, remove as follows:

REAR DRUM BRAKE

< SERVICE INFORMATION >

- a. Press up adjuster lever with a wire or equivalent from plug hole (plug hole at the side of wheel cylinder) on the back plate as shown. Turn frame of adjuster assembly with a flat bladed screw driver in the direction that narrows frame to narrow enlarged brake shoe.

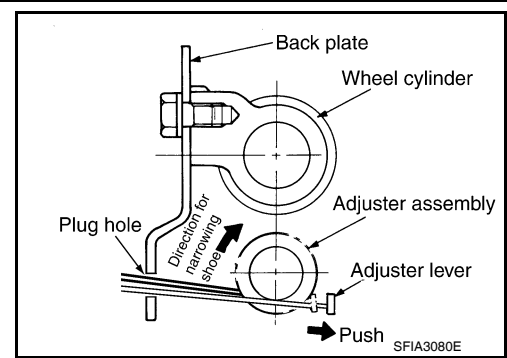

3. While pushing and rotating the retainer, pull out shoe hold pin, and remove shoe assembly.

CAUTION:

Do not damage the wheel cylinder boot.


4. Remove the parking brake rear cable from the operating lever.

CAUTION:

Do not bend the parking brake cable.

5. Disassemble the shoe assembly (shoe, springs, adjuster, adjuster lever).
6. Remove retainer ring (A) with a tool to separate operating lever (C) from brake shoe.

- Retainer ring (A)
- Contact point (B)
- Operating lever (C)
- Pin (D)

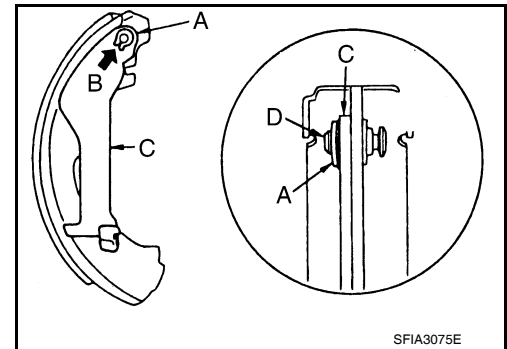


INSPECTION AFTER REMOVAL

Lining Thickness Inspection

Check lining thickness.

Standard thickness (A) (new) : Refer to [BR-42, "Rear Drum Brake"](#).

Repair limit thickness (A) : Refer to [BR-42, "Rear Drum Brake"](#).

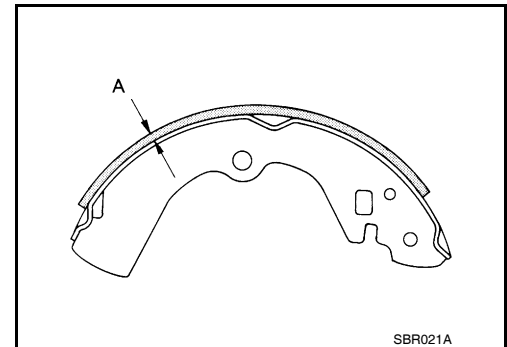


Drum Inner Diameter Inspection

Check inner diameter of brake drum.

Measurement area: lining contact surface (center)

Standard inner diameter : Refer to [BR-42, "Rear Drum Brake"](#).

Repair limit inner diameter : Refer to [BR-42, "Rear Drum Brake"](#).

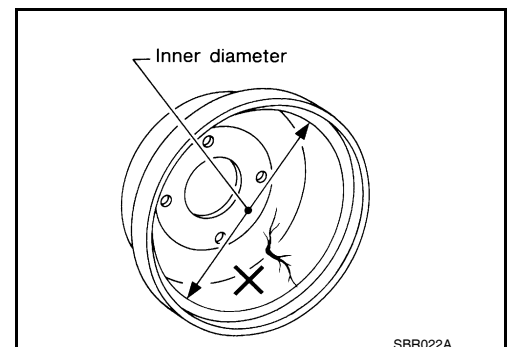


Wheel Cylinder Leakage Inspection

A
B
C
D
E
BR
G
H
I
J
K
L
M
N
O
P

REAR DRUM BRAKE

< SERVICE INFORMATION >

- Check wheel cylinder for brake fluid leakage.
- Check for wear, damage, and looseness. If any non-standard condition is found, replace it.

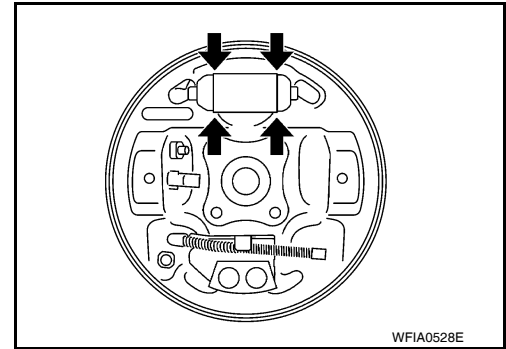


Other Inspections

Check the following:


- Inside of the drum for excessive wear, damage, and cracks.
 - Lining for excessive wear, damage, and peeling.
 - Shoe sliding surface for excessive wear and damage.
 - Return spring for sagging.
 - Check back plate for damage, cracks, and deformation. Replace back plate as necessary.
- Replace applicable part as necessary.

INSTALLATION

1. Install operating lever (C) if removed, using the following steps.
 - a. Install operating lever (C) to brake shoe.
 - b. Install retainer ring (A) to operating lever (C), and crimp them until their contact points (B) are met.
 - Retainer ring (A)
 - Contact point (B)
 - Operating lever (C)
 - Pin (D)

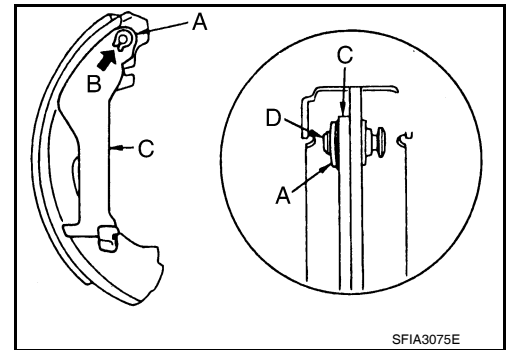


2. Apply PBC (Poly Butyl Cuprysil) grease or silicone based grease to brake shoes sliding surfaces (the shaded areas) and other parts on the back plate as indicated by arrows.

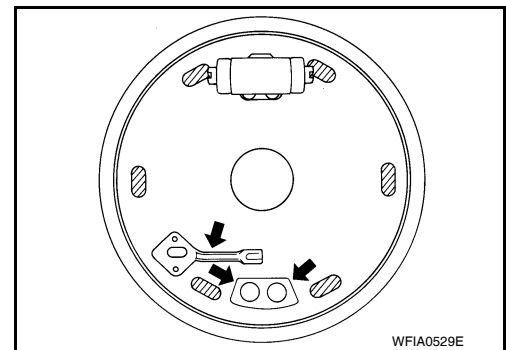

3. Apply PBC (Poly Butyl Cuprysil) grease or silicone based grease to screw and confirm the difference between right and left wheel for assembling when disassembled.

Right rear wheel **Thread cutting direction** : **Right-hand screw direction**

Left rear wheel **Thread cutting direction** : **Left-hand screw direction**

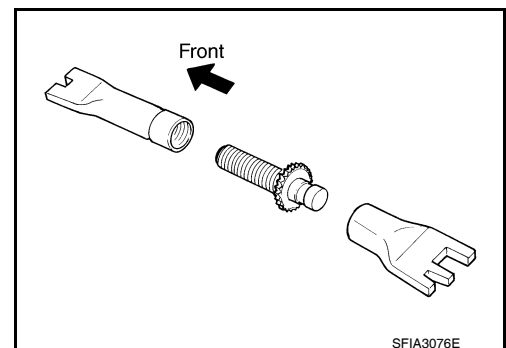

4. Assemble the shoe, adjuster, adjuster lever and springs to the shoe assembly.

REAR DRUM BRAKE

< SERVICE INFORMATION >

5. Connect the parking brake rear cable to the operating lever.
6. Install the shoe assembly. After assembly, be sure that each part is installed properly.
CAUTION:
Do not damage the wheel cylinder piston boot.
7. Install the brake drum.
8. Depress brake pedal for several times (approximately 2 or 3 times).
9. Adjust clearance of brake shoe. Refer to [PB-5, "On-Vehicle Service"](#).
10. Install rear wheel and tire. Refer to [WT-7, "Adjustment"](#).

Removal and Installation of Wheel Cylinder

INFOID:000000005397005

REMOVAL

1. Drain the brake fluid. Refer to [BR-9, "Drain and Refill"](#).
2. Remove the rear brake shoe assembly. Refer to [BR-36, "Removal and Installation of Drum Brake Assembly"](#).
3. Remove the bleed valve.
4. Disconnect the brake tube from the wheel cylinder.
5. Remove the wheel cylinder bolts and then remove the wheel cylinder from the back plate.

INSTALLATION

Installation is in the reverse order of removal.


- Tighten bolts and bleed valve to the specified torque. Refer to [BR-35, "Component"](#).
- Refill with new brake fluid and bleed the air. Refer to [BR-9, "Bleeding Brake System"](#).

Disassembly and Assembly of Wheel Cylinder

INFOID:000000005397006

DISASSEMBLY

1. Remove boots at the right and left of the wheel cylinder, and pull the pistons and spring out of the cylinder.
2. Remove the piston cups from the pistons.

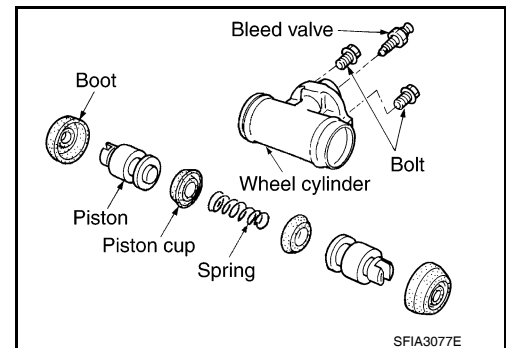

INSPECTION AFTER DISASSEMBLY


Check the pistons, spring and inner wall of the cylinder for wear, corrosion, and damage. Replace any parts as necessary.

ASSEMBLY

CAUTION:

When inserting the piston, be careful not to scratch the cylinder.

1. Apply brake fluid to the piston sliding surface on the wheel cylinder.
2. Apply rubber grease to the piston cups and boots and assemble the wheel cylinder as shown.

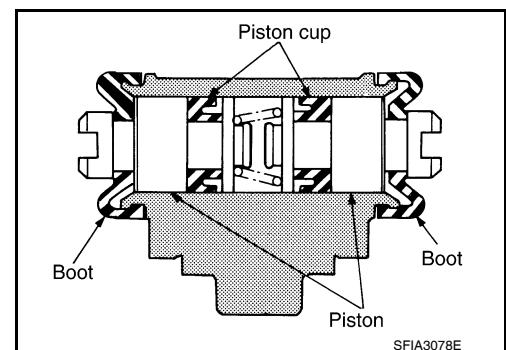

A
B
C
D
E
BR
G
H
I
J
K
L
M
N
O
P

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE INFORMATION >

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specification

INFOID:000000005397007

HR16DE

Type		With ABS only or VDC/TCS/ABS	Without ABS
Front brake	Brake model	AD22VK	
	Cylinder bore diameter	53.97 mm (2.125 in)	
	Pad Length × width × thickness	115.0 mm × 41.0 mm × 9.0 mm (4.528 in × 1.614 in × 0.354 in)	
	Rotor outer diameter × thickness	260 mm × 22.0 mm (10.24 in × 0.866 in)	
Rear brake	Brake model	LT20	
	Cylinder bore diameter	15.87 mm (0.625 in)	17.46 mm (0.687 in)
	Drum inner diameter	203 mm (7.992 in)	
Master cylinder	Cylinder bore diameter	22.22 mm (0.875 in)	
Brake booster	Booster model	C255	
	Diaphragm diameter	255 mm (10.04 in)	
Recommended brake fluid		DOT 3	

MR18DE

Front brake	Brake model	CLZ25VF	
	Cylinder bore diameter	57.2 mm (2.252 in)	
	Pad Length × width × thickness	125.6 mm × 48.0 mm × 9.5 mm (4.945 in × 1.890 in × 0.374 in)	
	Rotor outer diameter × thickness	280 mm × 24.0 mm (11.02 in × 0.945 in)	
Rear brake	Brake model	LT23	
	Cylinder bore diameter	19.06 mm (0.750 in)	
	Drum inner diameter	228.6 mm (9.000 in)	
Master cylinder	Cylinder bore diameter	23.81 ± 0.015 mm (0.937 ± 0.001 in)	
Brake booster	Booster model	C255	
	Diaphragm diameter	255 mm (10.04 in)	
Recommended brake fluid		DOT 3	


SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE INFORMATION >

Brake Pedal

INFOID:000000005397008

Unit: mm (in)

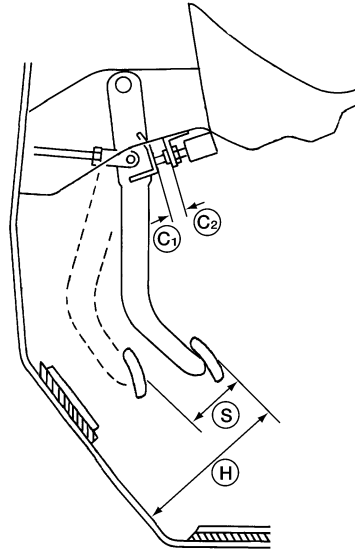


AWFIA0433ZZ

H	Brake pedal free height (from dash panel top surface)	A/T, CVT model	172.4 - 182.4 (6.79 - 7.18)
		M/T model	162.3 - 172.3 (6.39 - 6.78)
S	Brake pedal full stroke [under a force of 490 N (50 kg-f, 110 lb-f) with the engine running]	A/T, CVT model	133 (5.24)
		M/T model	133 (5.24)
C1	Clearance between the threaded end of stop lamp switch and pedal stopper		0.74 - 1.96 (0.0291 - 0.0772)
C2	Clearance between the threaded end of ASCD switch and pedal stopper		0.74 - 1.96 (0.0291 - 0.0772)

Check Valve

INFOID:000000005397009

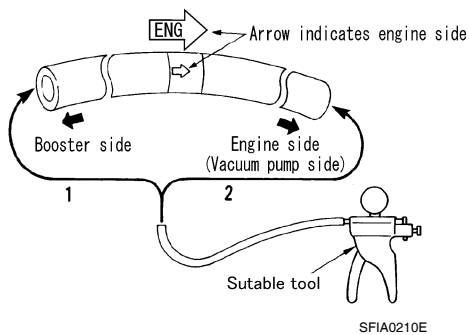

SFIA0210E


When connected to booster side (1)	Within 1.3 kPa (10 mmHg, 0.39 inHg) of vacuum for 15 seconds [at vacuum of - 66.7 kPa (- 500 mmHg, - 19.69 inHg)]
When connected to engine side (2)	No vacuum will be applied

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE INFORMATION >

Brake Booster

INFOID:000000005397010

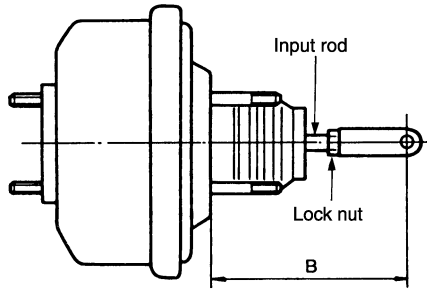

SGIA0060E

Input rod installation standard dimension (B)	159 ± 0.5 mm (6.26 ± 0.02 in)
Vacuum leakage [at vacuum of - 66.7 kPa (- 500 mmHg, -19.69 inHg)]	Within 3.3 kPa (25 mmHg, 0.98 inHg) of vacuum for 15 seconds

Front Disc Brake

INFOID:000000005397011

Unit: mm (in)

Brake model	AD22VK	
Brake pad	Standard thickness (new)	9.0 (0.354)
	Repair limit thickness	2.0 (0.079)
Disc rotor	Standard thickness (new)	22.0 (0.866)
	Repair limit thickness	20.0 (0.787)
	Runout limit	0.06 (0.0024)
	Maximum uneven wear (measured at 8 positions)	0.02 mm (0.0008 in) or less

Unit: mm (in)

Brake model	CLZ25VF	
Brake pad	Standard thickness (new)	9.5 (0.374)
	Repair limit thickness	2.0 (0.079)
Disc rotor	Standard thickness (new)	24.0 (0.945)
	Repair limit thickness	22.0 (0.866)
	Runout limit (measured at 10.0 mm (0.394 in) inside the disc edge)	0.04 (0.0016)
	Maximum uneven wear (measured at 8 positions)	0.02 mm (0.0008 in) or less

Rear Drum Brake

INFOID:000000005397012

Unit: mm (in)

Brake model	LT20	
Brake lining	Standard thickness (new)	4.0 (0.157)
	Repair limit thickness	1.5 (0.059)
Drum	Standard inner diameter (new)	203 (7.992)
	Repair limit inner diameter	204.5 (8.051)

Unit: mm (in)

Brake model	LT23	
Brake lining	Standard thickness (new)	4.0 (0.157)
	Repair limit thickness	1.5 (0.059)
Drum	Standard inner diameter (new)	228.6 (9.000)
	Repair limit inner diameter	230.0 (9.055)