

# SECTION **PWC**

## POWER WINDOW CONTROL SYSTEM

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

### CONTENTS

<p><b>BASIC INSPECTION</b> ..... 3</p> <p><b>DIAGNOSIS AND REPAIR WORKFLOW</b> ..... 3</p> <p style="padding-left: 20px;">Work Flow .....3</p> <p><b>SYSTEM DESCRIPTION</b> ..... 4</p> <p><b>POWER WINDOW SYSTEM</b> ..... 4</p> <p style="padding-left: 20px;">System Diagram .....4</p> <p style="padding-left: 20px;">System Description .....4</p> <p style="padding-left: 20px;">Component Parts Location .....5</p> <p style="padding-left: 20px;">Component Description .....6</p> <p><b>DIAGNOSIS SYSTEM (BCM)</b> ..... 7</p> <p><b>COMMON ITEM</b> .....7</p> <p style="padding-left: 20px;">COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM) .....7</p> <p><b>RETAINED PWR</b> .....7</p> <p style="padding-left: 20px;">RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR) .....8</p> <p><b>DTC/CIRCUIT DIAGNOSIS</b> ..... 9</p> <p><b>POWER SUPPLY AND GROUND CIRCUIT</b> ..... 9</p> <p><b>BCM</b> .....9</p> <p style="padding-left: 20px;">BCM : Diagnosis Procedure .....9</p> <p><b>POWER WINDOW MAIN SWITCH</b> ..... 10</p> <p style="padding-left: 20px;">POWER WINDOW MAIN SWITCH : Description.... 10</p> <p style="padding-left: 20px;">POWER WINDOW MAIN SWITCH : Component Function Check ..... 10</p> <p style="padding-left: 20px;">POWER WINDOW MAIN SWITCH : Diagnosis Procedure ..... 10</p> <p style="padding-left: 20px;">POWER WINDOW MAIN SWITCH : Component Inspection ..... 13</p> <p><b>FRONT POWER WINDOW SWITCH</b> ..... 15</p> <p style="padding-left: 20px;">FRONT POWER WINDOW SWITCH : Description ..... 15</p>	<p style="padding-left: 20px;">FRONT POWER WINDOW SWITCH : Component Function Check .....15</p> <p style="padding-left: 20px;">FRONT POWER WINDOW SWITCH : Diagnosis Procedure .....15</p> <p><b>REAR POWER WINDOW SWITCH</b> .....16</p> <p style="padding-left: 20px;">REAR POWER WINDOW SWITCH : Description...16</p> <p style="padding-left: 20px;">REAR POWER WINDOW SWITCH : Component Function Check ..... 16</p> <p style="padding-left: 20px;">REAR POWER WINDOW SWITCH : Diagnosis Procedure ..... 17</p> <p style="padding-left: 20px;">REAR POWER WINDOW SWITCH : Component Inspection ..... 18</p> <p><b>POWER WINDOW MOTOR</b> .....20</p> <p><b>DRIVER SIDE</b> .....20</p> <p style="padding-left: 20px;">DRIVER SIDE : Description .....20</p> <p style="padding-left: 20px;">DRIVER SIDE : Component Function Check .....20</p> <p style="padding-left: 20px;">DRIVER SIDE : Diagnosis Procedure .....20</p> <p style="padding-left: 20px;">DRIVER SIDE : Component Inspection .....21</p> <p><b>PASSENGER SIDE</b> .....21</p> <p style="padding-left: 20px;">PASSENGER SIDE : Description .....21</p> <p style="padding-left: 20px;">PASSENGER SIDE : Component Function Check .....21</p> <p style="padding-left: 20px;">PASSENGER SIDE : Diagnosis Procedure .....21</p> <p style="padding-left: 20px;">PASSENGER SIDE : Component Inspection .....22</p> <p><b>REAR LH</b> .....23</p> <p style="padding-left: 20px;">REAR LH : Description .....23</p> <p style="padding-left: 20px;">REAR LH : Component Function Check .....23</p> <p style="padding-left: 20px;">REAR LH : Diagnosis Procedure .....23</p> <p style="padding-left: 20px;">REAR LH : Component Inspection .....24</p> <p><b>REAR RH</b> .....24</p> <p style="padding-left: 20px;">REAR RH : Description .....24</p> <p style="padding-left: 20px;">REAR RH : Component Function Check .....24</p> <p style="padding-left: 20px;">REAR RH : Diagnosis Procedure .....25</p> <p style="padding-left: 20px;">REAR RH : Component Inspection .....26</p> <p><b>DOOR SWITCH</b> .....27</p> <p style="padding-left: 20px;">Description .....27</p>
--	--



Component Function Check .....	27	Diagnosis Procedure .....	52
Diagnosis Procedure .....	27		
Component Inspection .....	28		
<b>POWER WINDOW LOCK SWITCH .....</b>	<b>29</b>	<b>REAR RH SIDE POWER WINDOW ALONE DOES NOT OPERATE .....</b>	<b>53</b>
Description .....	29	Diagnosis Procedure .....	53
Component Function Check .....	29	<b>AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (DRIVER SIDE) .....</b>	<b>54</b>
<b>ECU DIAGNOSIS INFORMATION .....</b>	<b>30</b>	Diagnosis Procedure .....	54
<b>POWER WINDOW SYSTEM .....</b>	<b>30</b>	<b>POWER WINDOW RETAINED POWER OP- ERATION DOES NOT OPERATE PROPERLY</b>	<b>55</b>
Terminal Layout .....	30	Diagnosis Procedure .....	55
Physical Values .....	30	<b>POWER WINDOW LOCK SWITCH DOES NOT FUNCTION .....</b>	<b>56</b>
<b>BCM (BODY CONTROL MODULE) .....</b>	<b>31</b>	Diagnosis Procedure .....	56
Reference Value .....	31	<b>PRECAUTION .....</b>	<b>57</b>
Terminal Layout .....	34	<b>PRECAUTIONS .....</b>	<b>57</b>
Physical Values .....	34	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER" .....	57
Fail Safe .....	39	Precaution for Work .....	57
DTC Inspection Priority Chart .....	39	<b>PREPARATION .....</b>	<b>58</b>
DTC Index .....	40	<b>PREPARATION .....</b>	<b>58</b>
<b>WIRING DIAGRAM .....</b>	<b>42</b>	Special Service Tool .....	58
<b>POWER WINDOW SYSTEM .....</b>	<b>42</b>	<b>REMOVAL AND INSTALLATION .....</b>	<b>59</b>
Wiring Diagram .....	42	<b>POWER WINDOW MAIN SWITCH .....</b>	<b>59</b>
<b>SYMPTOM DIAGNOSIS .....</b>	<b>49</b>	Removal and Installation .....	59
<b>NONE OF THE POWER WINDOWS CAN BE OPERATED USING ANY SWITCH .....</b>	<b>49</b>	<b>FRONT POWER WINDOW SWITCH .....</b>	<b>60</b>
Diagnosis Procedure .....	49	Removal and Installation .....	60
<b>DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE .....</b>	<b>50</b>	<b>REAR POWER WINDOW SWITCH .....</b>	<b>61</b>
Diagnosis Procedure .....	50	Removal and Installation - Rear Door Switch .....	61
<b>FRONT PASSENGER SIDE POWER WIN- DOW ALONE DOES NOT OPERATE .....</b>	<b>51</b>		
Diagnosis Procedure .....	51		
<b>REAR LH SIDE POWER WINDOW ALONE DOES NOT OPERATE .....</b>	<b>52</b>		

# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000006255885

DETAILED FLOW

#### 1. OBTAIN INFORMATION ABOUT SYMPTOM

Interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred) as much as possible when the customer brings the vehicle in.

>> GO TO 2

#### 2. REPRODUCE THE MALFUNCTION INFORMATION

Check the malfunction on the vehicle that the customer describes.  
Inspect the relation of the symptoms and the condition when the symptoms occur.

>> GO TO 3

#### 3. IDENTIFY THE MALFUNCTIONING SYSTEM WITH "SYMPTOM DIAGNOSIS"

Use "Symptom diagnosis" from the symptom inspection result in step 2 and then identify where to start performing the diagnosis based on possible causes and symptoms.

>> GO TO 4

#### 4. IDENTIFY THE MALFUNCTIONING PARTS WITH "DTC/CIRCUIT DIAGNOSIS"

Perform the diagnosis with "DTC/Circuit diagnosis" of the applicable system.

>> GO TO 5

#### 5. REPAIR OR REPLACE THE MALFUNCTIONING PARTS

Repair or replace the specified malfunctioning parts.

>> GO TO 6

#### 6. FINAL CHECK

Check that malfunctions are not reproduced when obtaining the malfunction information from the customer, referring to the symptom inspection result in step 2.

Are the malfunctions corrected?

YES >> Inspection End.

NO >> GO TO 3

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
PWC  
L  
M  
N  
O  
P

# POWER WINDOW SYSTEM

< SYSTEM DESCRIPTION >


## SYSTEM DESCRIPTION

### POWER WINDOW SYSTEM

#### System Diagram

INFOID:000000006255886

#### FRONT WINDOW ANTI-PINCH SYSTEM

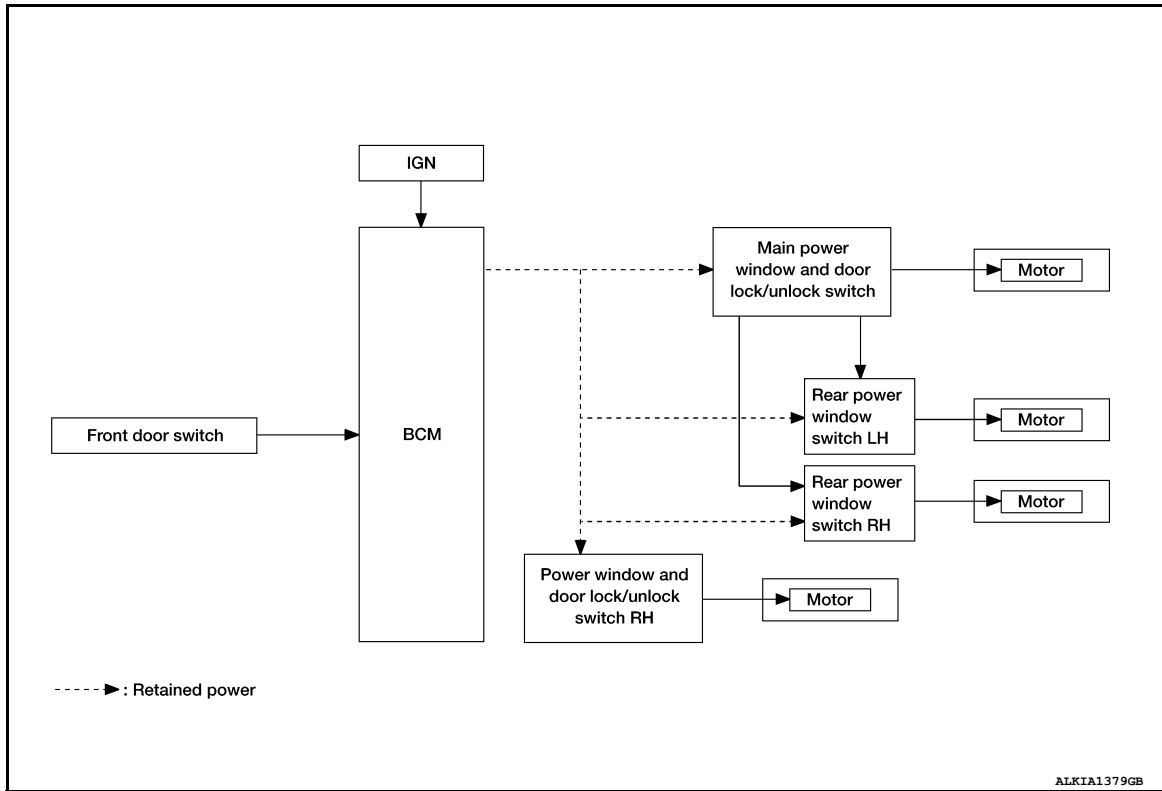

#### System Description

INFOID:000000006255887

#### MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH INPUT/OUTPUT SIGNAL CHART

Item	Input signal to main power window and door lock/unlock switch	Main power window and door lock/unlock switch function	Actuator
Main power window and door lock/unlock switch	All power window motor UP/DOWN signal	Power window control	Power window motors
Power window and door lock/unlock switch RH	Front power window motor RH UP/DOWN signal		Front power window motor RH
Rear power window switch	Rear power window motor UP/DOWN signal		Rear power window motor
BCM	RAP signal		Power window motors

#### POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH INPUT/OUTPUT SIGNAL CHART

# POWER WINDOW SYSTEM

## < SYSTEM DESCRIPTION >

Item	Input signal to front power window switch	Front power window switch function	Actuator
Power window and door lock/unlock switch RH	Front power window motor RH UP/DOWN signal	Power window control	Front power window motor RH
BCM	RAP signal		

### POWER WINDOW OPERATION

- Power window system is operable during the retained power operation timer after turning ignition switch ON and OFF.
- Main power window and door lock/unlock switch can open/close all windows.
- Power window and door lock unlock switch RH & rear power window switches LH and RH can open/close the corresponding windows.

### POWER WINDOW AUTO DOWN OPERATION (FRONT LH)

- AUTO DOWN operation can be performed when main power window turns to AUTO.

### RETAINED POWER OPERATION

- Retained power operation is an additional power supply function that enables power window system to operate during the 45 seconds even when ignition switch is turned OFF

#### Retained power function cancel conditions


- Front door CLOSE (door switch OFF)→OPEN (door switch ON).
- When ignition switch is ON.
- When timer time passes. (45 seconds)

### POWER WINDOW LOCK

Ground circuit inside main power window and door lock/unlock switch shuts off when power window lock switch is ON. This inhibits power window switch operation except with the main power window and door lock/unlock switch.

## Component Parts Location

INFOID:000000006255888

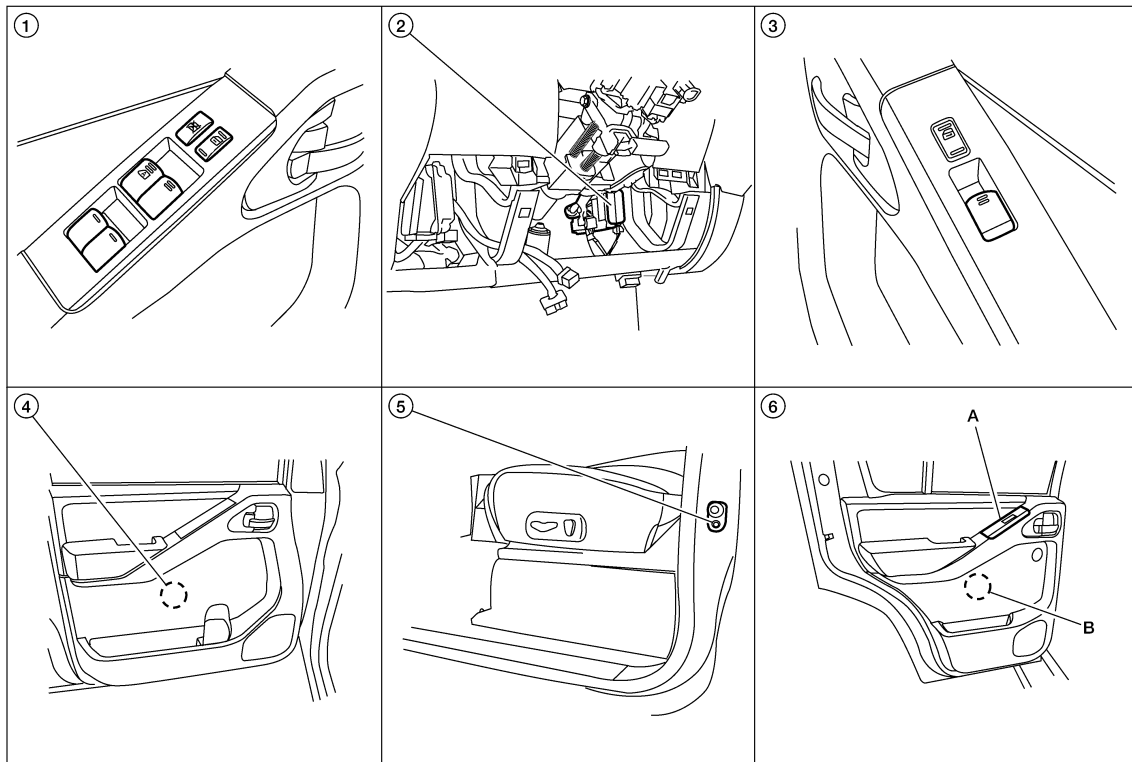

ALKIA1382ZZ

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# POWER WINDOW SYSTEM

## < SYSTEM DESCRIPTION >

- |   |  |  |
|---|--|--|
| 1. Main power window and door lock/unlock switch D7 | 2. BCM M18, M19, M20 (view with lower instrument panel LH removed) | 3. Power window and door lock/unlock switch RH D105  |
| 4. Front power window motor LH D9, RH D104          | 5. Front door switch LH B8, RH B108                                | 6. A. Rear power window switch LH D203, RH D303<br>B. Rear power window motor LH D204, RH D304 |

## Component Description

INFOID:000000006255889

## FRONT WINDOW ANTI-PINCH SYSTEM

Component	Function
BCM	<ul style="list-style-type: none"> <li>Supplies power supply to power window switch.</li> <li>Controls retained power.</li> </ul>
Main power window and door lock/unlock switch	Directly controls all power window motor of all doors.
Power window and door lock/unlock switch RH	Controls front power window motor RH.
Rear power window switch	Controls rear power window motors LH and RH.
Front power window motor LH	Starts operating with signals from main power window and door lock/unlock switch.
Front power window motor RH	Starts operating with signals from main power window and door lock/unlock switch & power window and door lock/unlock switch RH.
Rear power window motor	Starts operating with signals from main power window and door lock/unlock switch & rear power window switch.
Front door switch LH or RH	Detects door open/close condition and transmits to BCM.

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (BCM)

### COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000006835798

### APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Direct Diagnostic Mode	Description
Ecu Identification	The BCM part number is displayed.
Self Diagnostic Result	The BCM self diagnostic results are displayed.
Data Monitor	The BCM input/output data is displayed in real time.
Active Test	The BCM activates outputs to test components.
Work support	The settings for BCM functions can be changed.
Configuration	<ul style="list-style-type: none"> <li>• The vehicle specification can be read and saved.</li> <li>• The vehicle specification can be written when replacing BCM.</li> </ul>
CAN Diag Support Mntr	The result of transmit/receive diagnosis of CAN communication is displayed.

### SYSTEM APPLICATION

BCM can perform the following functions.

System	Sub System	Direct Diagnostic Mode						
		Ecu Identification	Self Diagnostic Result	Data Monitor	Active Test	Work support	Configuration	CAN Diag Support Mntr
Door lock	DOOR LOCK		×	×	×	×		
Rear window defogger	REAR DEFOGGER			×	×			
Warning chime	BUZZER			×	×			
Interior room lamp timer	INT LAMP			×	×	×		
Remote keyless entry system	MULTI REMOTE ENT			×	×	×		
Exterior lamp	HEAD LAMP			×	×	×		
Wiper and washer	WIPER			×	×	×		
Turn signal and hazard warning lamps	FLASHER			×	×			
Air conditioner	AIR CONDITIONER			×				
Combination switch	COMB SW			×				
BCM	BCM	×	×			×	×	×
Immobilizer	IMMU		×	×	×			
Interior room lamp battery saver	BATTERY SAVER			×	×	×		
Back door open	TRUNK			×	×			
Vehicle security system	THEFT ALM			×	×	×		
RAP system	RETAINED PWR			×	×	×		
Signal buffer system	SIGNAL BUFFER			×	×			
TPMS	AIR PRESSURE MONITOR		×	×	×	×		
Panic alarm system	PANIC ALARM				×			

### RETAINED PWR

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

RETAINED PWR : CONSULT-III Function (BCM - RETAINED PWR)

INFOID:000000006835799

## DATA MONITOR

Monitor Item [Unit]	Description
IGN ON SW [On/Off]	Indicates condition of ignition switch ON position.
DOOR SW-DR [On/Off]	Indicates condition of front door switch LH.
DOOR SW-AS [On/Off]	Indicates condition of front door switch RH.

## ACTIVE TEST

Test Item	Description
RETAINED PWR	This test is able to check retained power operation [Off/On].

## WORK SUPPORT

Support Item	Setting	Description
RETAINED PWR SET	MODE3	2 min
	MODE2	OFF
	MODE1*	45 sec

\*: Initial setting



# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## DTC/CIRCUIT DIAGNOSIS

### POWER SUPPLY AND GROUND CIRCUIT

#### BCM

#### BCM : Diagnosis Procedure

INFOID:000000006835802

Regarding Wiring Diagram information, refer to [BCS-47, "Wiring Diagram"](#).

### 1. CHECK FUSES AND FUSIBLE LINK

Check that the following fuses and fusible link are not blown.

Terminal No.	Signal name	Fuses and fusible link No.
57	Battery power supply	21 (10A)
70		G (50A)
11	Ignition ACC or ON	4 (10A)
38	Ignition ON or START	1 (10A)

#### Is the fuse blown?


YES >> Replace the blown fuse or fusible link after repairing the affected circuit.

NO >> GO TO 2

### 2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM.
3. Check voltage between BCM harness connector and ground.

Connector	Terminals		Power source	Condition	Voltage (V) (Approx.)
	(+)	(-)			
M18	11	Ground	ACC power supply	Ignition switch ACC or ON	Battery voltage
	38	Ground	Ignition power supply	Ignition switch ON or START	Battery voltage
M20	57	Ground	Battery power supply	Ignition switch OFF	Battery voltage
	70	Ground	Battery power supply	Ignition switch OFF	Battery voltage

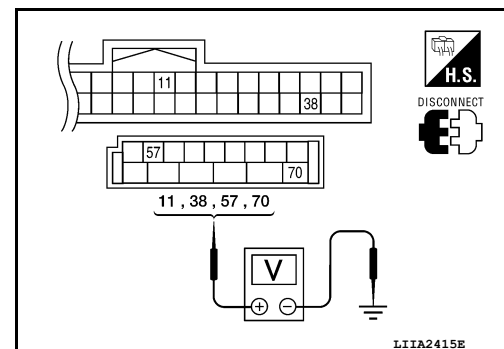

#### Is the measurement value normal?

YES >> GO TO 3

NO >> Repair or replace harness.

### 3. CHECK GROUND CIRCUIT

# POWER SUPPLY AND GROUND CIRCUIT


## < DTC/CIRCUIT DIAGNOSIS >

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M20	67		Yes

### Does continuity exist?

- YES >> Inspection End.
- NO >> Repair or replace harness.

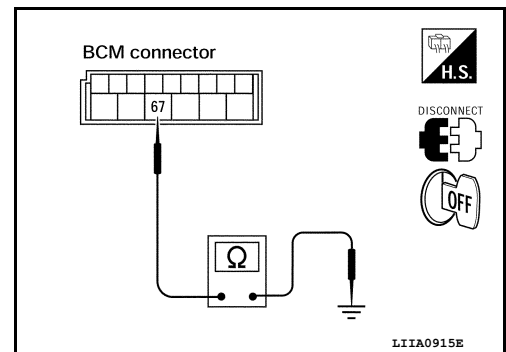

INFOID:000000006255892

## POWER WINDOW MAIN SWITCH

### POWER WINDOW MAIN SWITCH : Description

- BCM supplies power.
- It operates each power window motor via corresponding power window switch and makes window move up/down when main power window and door lock/unlock switch is operated.

### POWER WINDOW MAIN SWITCH : Component Function Check

INFOID:000000006255893

#### Main Power Window And Door Lock/Unlock Switch

### 1. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH FUNCTION

Check power window motor operation with main power window and door lock/unlock switch.

#### Is the inspection result normal?

- YES >> Main power window and door lock/unlock switch power supply and ground circuit are OK.
- NO >> Refer to [PWC-10, "POWER WINDOW MAIN SWITCH : Diagnosis Procedure"](#).

### POWER WINDOW MAIN SWITCH : Diagnosis Procedure

INFOID:000000006255894

Regarding Wiring Diagram information, refer to [PWC-42, "Wiring Diagram"](#).


### 1. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between main power window and door lock/unlock switch connector D7 terminal 5 and ground.

**5 - Ground** : **Battery voltage**

#### Is the measurement value within the specification?

- YES >> GO TO 2
- NO >> GO TO 3

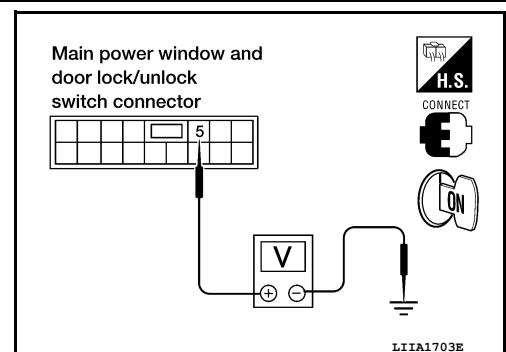

### 2. CHECK GROUND CIRCUIT

# POWER SUPPLY AND GROUND CIRCUIT


## < DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch.
3. Check continuity between main power window and door lock/unlock switch connector D7 terminal 14 and ground.

Connector	Terminals		Continuity
Main power window and door lock/unlock switch: D7	14	Ground	Yes

### Is the inspection result normal?


- YES >> Check main power window and door lock/unlock switch output signal (rear power window switch LH) GO TO 5
- YES >> Check main power window and door lock/unlock switch output signal (rear power window switch RH) GO TO 6
- YES >> Check main power window and door lock/unlock switch output signal (front power window switch RH) GO TO 7
- YES >> Check main power window and door lock/unlock switch output signal (front power window motor LH) GO TO 8
- NO >> Repair or replace harness.

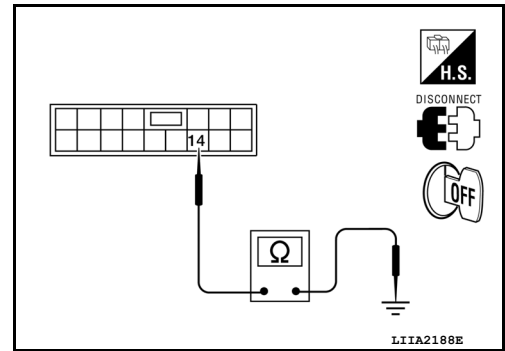

## 3. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM and main power window and door lock/unlock switch.
3. Check continuity between BCM and main power window and door lock/unlock switch.

A		B		Continuity
Connector	Terminal	Connector	Terminal	
BCM: M20	68	Main power window and door lock/unlock switch: D7	5	Yes

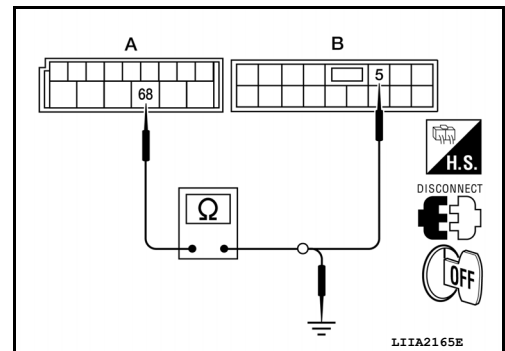

4. Check continuity between BCM and ground.

A		Ground	Continuity
Connector	Terminal		
BCM: M20	68		No

### Is the inspection result normal?

- YES >> GO TO 4
- NO >> Repair or replace harness.


## 4. CHECK BCM OUTPUT SIGNAL

1. Connect BCM.
2. Turn ignition switch ON.
3. Check voltage between BCM connector M20 terminal 68 and ground.

**68 - Ground : Battery voltage**

### Is the measurement value within the specification?

- YES >> Check intermittent incident. Refer to [GI-37. "Intermittent Incident"](#).
- NO >> Replace BCM. Refer to [BCS-53. "Removal and Installation"](#).

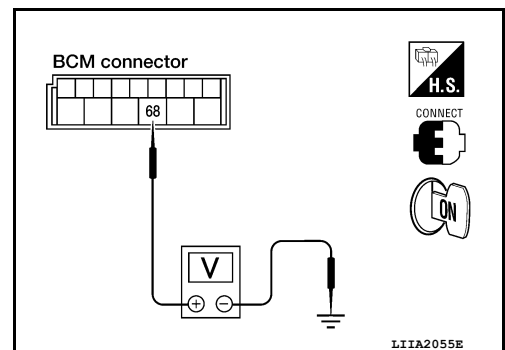

## 5. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL (REAR POW-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

## POWER SUPPLY AND GROUND CIRCUIT

### < DTC/CIRCUIT DIAGNOSIS >

#### ER WINDOW SWITCH LH)

1. Connect main power window and door lock/unlock switch.
2. Turn ignition switch ON.
3. Check voltage between main power window and door lock/unlock switch connector and ground.

Terminal		(-)	Window switch position (rear LH)	Voltage (V) (Approx.)
(+)	Terminal			
Main power window and door lock/unlock switch connector		Ground	UP	Battery voltage
	15		DOWN	0
	16		UP	0
			DOWN	Battery voltage

Is the measurement value within the specification?

YES >> Check intermittent incident. Refer to [GI-37, "Intermittent Incident"](#).

NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-59, "Removal and Installation"](#).

#### 6. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL (REAR POWER WINDOW SWITCH RH)

1. Connect main power window and door lock/unlock switch.
2. Turn ignition switch ON.
3. Check voltage between main power window and door lock/unlock switch connector and ground.

Terminal		(-)	Window switch position (rear RH)	Voltage (V) (Approx.)
(+)	Terminal			
Main power window and door lock/unlock switch connector		Ground	UP	Battery voltage
	8		DOWN	0
	9		UP	0
			DOWN	Battery voltage

Is the measurement value within the specification?

YES >> Check intermittent incident. Refer to [GI-37, "Intermittent Incident"](#).

NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-59, "Removal and Installation"](#).

#### 7. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL (FRONT POWER WINDOW SWITCH RH)

1. Connect main power window and door lock/unlock switch.
2. Turn ignition switch ON.
3. Check voltage between main power window and door lock/unlock switch connector and ground.

# POWER SUPPLY AND GROUND CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

Terminal		(-)	Window switch position (front RH)	Voltage (V) (Approx.)
(+)	Terminal			
Main power window and door lock/unlock switch connector				
D7	3	Ground	UP	Battery voltage
			DOWN	0
	2		UP	0
			DOWN	Battery voltage

Is the measurement value within the specification?

YES >> Check intermittent incident. Refer to [GI-37, "Intermittent Incident"](#).

NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-59, "Removal and Installation"](#).

### 8. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL (FRONT POWER WINDOW MOTOR LH)

1. Connect main power window and door lock/unlock switch.
2. Turn ignition switch ON.
3. Check voltage between main power window and door lock/unlock switch connector and ground.

Terminal		(-)	Window switch position (front LH)	Voltage (V) (Approx.)
(+)	Terminal			
Main power window and door lock/unlock switch connector				
D7	6	Ground	UP	Battery voltage
			DOWN	0
	7		UP	0
			DOWN	Battery voltage

Is the measurement value within the specification?

YES >> Check intermittent incident. Refer to [GI-37, "Intermittent Incident"](#).

NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-59, "Removal and Installation"](#).

### POWER WINDOW MAIN SWITCH : Component Inspection

INFOID:000000006255895

#### 1. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

1. Check main power window and door lock/unlock switch.

# POWER SUPPLY AND GROUND CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

Terminal		Main power window and door lock/unlock switch condition		Continuity
5	3	Front RH	UP	Yes
5	15	Rear LH		
5	8	Rear RH		
2	3	Front RH	NEUTRAL	
15	16	Rear LH		
8	9	Rear RH		
5	2	Front RH	DOWN	
5	16	Rear LH		
5	9	Rear RH		

2. Check continuity between main power window and door lock/unlock switch (power window lock switch). (Lock operation).

Terminal		Main power window and door lock/unlock switch condition		Continuity
2	14	Front RH	UP	No
16		Rear LH		
9		Rear RH		
2		Front RH	NEUTRAL	
3		Rear LH		
15		Rear RH		
16		Rear RH	DOWN	
8		Front RH		
9		Rear LH		
3		Front RH	DOWN	
15		Rear LH		
8		Rear RH		

3. Check continuity between main power window and door lock/unlock switch (power window lock switch). (Unlock operation).

Terminal		Main power window and door lock/unlock switch condition		Continuity
2	14	Front RH	UP	Yes
16		Rear LH		
9		Rear RH		
2		Front RH	NEUTRAL	
3		Rear LH		
15		Rear RH		
16		Rear RH	DOWN	
8		Front RH		
9		Rear LH		
3		Front RH	DOWN	
15		Rear LH		
8		Rear RH		

# POWER SUPPLY AND GROUND CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

### Is the inspection result normal?

- YES >> Main power window and door lock/unlock switch is OK.
- NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-59. "Removal and Installation"](#).

## FRONT POWER WINDOW SWITCH

### FRONT POWER WINDOW SWITCH : Description

INFOID:000000006255896

- BCM supplies power.
- Front power window motor RH will be operated if power window and door lock/unlock switch RH is operated.

### FRONT POWER WINDOW SWITCH : Component Function Check

INFOID:000000006255897

#### Power Window And Door Lock/Unlock Switch RH

### 1. CHECK FRONT POWER WINDOW MOTOR RH FUNCTION

Check front power window motor RH operation with power window and door lock/unlock switch RH.

### Is the inspection result normal?

- YES >> Power window and door lock/unlock switch RH power supply and ground circuit are OK.
- NO >> Refer to [PWC-15. "FRONT POWER WINDOW SWITCH : Diagnosis Procedure"](#).

### FRONT POWER WINDOW SWITCH : Diagnosis Procedure


INFOID:000000006255898

Regarding Wiring Diagram information, refer to [PWC-42. "Wiring Diagram"](#).

### 1. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between power window and door lock/unlock switch RH connector and ground.

Terminal		Terminal	Voltage (V) (Approx.)
(+)	(-)		
Power window and door lock/unlock switch RH connector	8	Ground	Battery voltage
D105	8	Ground	Battery voltage

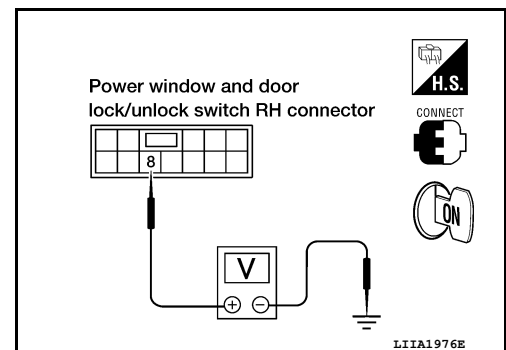


### Is the measurement value within the specification?

- YES >> GO TO 3
- NO >> GO TO 2

### 2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect BCM and power window and door lock/unlock switch RH.
3. Check continuity between BCM connector (A) and power window and door lock/unlock switch RH connector (B).

BCM connector	Terminal	Power window and door lock/unlock switch RH connector	Terminal	Continuity
M20 (A)	68	D105 (B)	8	Yes

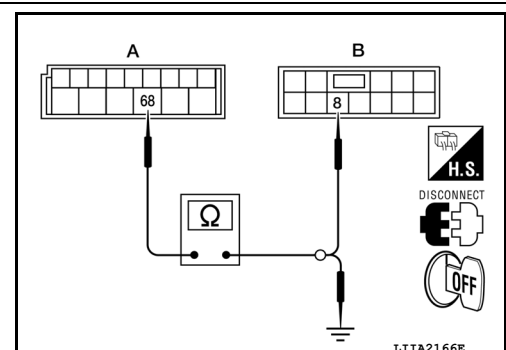

4. Check continuity between BCM connector (A) and ground.

# POWER SUPPLY AND GROUND CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

BCM connector	Terminal	Ground	Continuity
M20 (A)	68		No

Is the inspection result normal?

- YES >> GO TO 4  
 NO >> Repair or replace harness.

### 3. CHECK GROUND CIRCUIT

- Turn ignition switch OFF.
- Disconnect power window and door lock/unlock switch RH and main power window and door lock/unlock switch.
- Check continuity between main power window and door lock/unlock switch connector and front power window and door lock/unlock switch RH connector.

Main power window and door lock/unlock switch connector	Terminal	Front power window and door lock/unlock switch RH connector	Terminal	Continuity
D7	3	D105	12	Yes
	2		11	

- Check continuity between main power window and door lock/unlock switch connector and ground.

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D7	3		No
	2		

Is the inspection result normal?

- YES >> Replace power window and door lock/unlock switch RH. Refer to [PWC-60, "Removal and Installation"](#).  
 NO >> Repair or replace harness.

### 4. CHECK BCM OUTPUT SIGNAL

- Connect BCM.
- Turn ignition switch ON.
- Check voltage between BCM connector and ground.

Terminals			Voltage (V) (Approx.)
(+)		(-)	
BCM connector	Terminal		
M20	68	Ground	Battery voltage

Is the measurement value within the specification?

- YES >> Replace power window and door lock/unlock switch RH. Refer to [PWC-60, "Removal and Installation"](#).  
 NO >> Replace BCM. Refer to [BCS-53, "Removal and Installation"](#).

## REAR POWER WINDOW SWITCH

### REAR POWER WINDOW SWITCH : Description


INFOID:000000006255899

- BCM supplies power.
- Rear power window motor will be operated if rear power window switch is operated.

### REAR POWER WINDOW SWITCH : Component Function Check

INFOID:000000006255900

#### Rear Power Window Switch

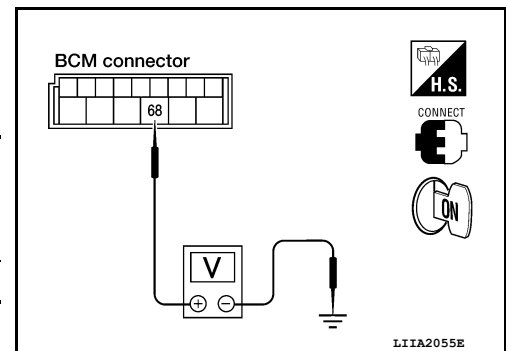



# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

## 1. CHECK REAR POWER WINDOW MOTOR FUNCTION

Check rear power window motor operation with rear power window switch.

Is the inspection result normal?

- YES >> Rear power window switch power supply and ground circuit are OK.
- NO >> Refer to [PWC-17. "REAR POWER WINDOW SWITCH : Diagnosis Procedure"](#).

## REAR POWER WINDOW SWITCH : Diagnosis Procedure


INFOID:000000006255901

Regarding Wiring Diagram information, refer to [PWC-42. "Wiring Diagram"](#).

### 1. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch ON.
2. Check voltage between rear power window switch connector and ground.

Terminal		Terminal	Condition	Voltage (V) (Approx.)
(+)				
Rear power window switch connector		8	Ground	Ignition switch ON
LH	D203			
RH	D303			

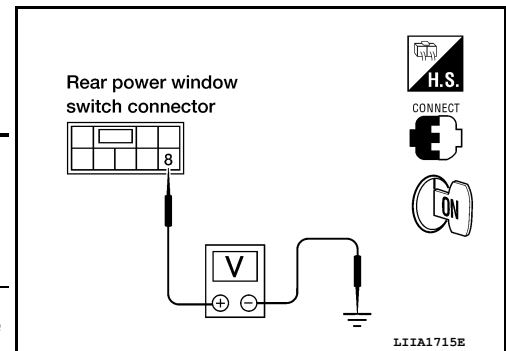


Is the measurement value within the specification?

- YES >> GO TO 2 (Rear power window switch LH)
- YES >> GO TO 3 (Rear power window switch RH)
- NO >> GO TO 4

### 2. CHECK HARNESS CONTINUITY (REAR POWER WINDOW SWITCH LH)

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch and rear power window switch LH.
3. Check continuity between main power window and door lock/unlock switch connector (A) and rear power window switch LH connector (B).

Main power window and door lock/unlock switch connector	Terminal	Rear power window switch LH connector	Terminal	Continuity
D7 (A)	15	D203 (B)	4	Yes
	16		5	

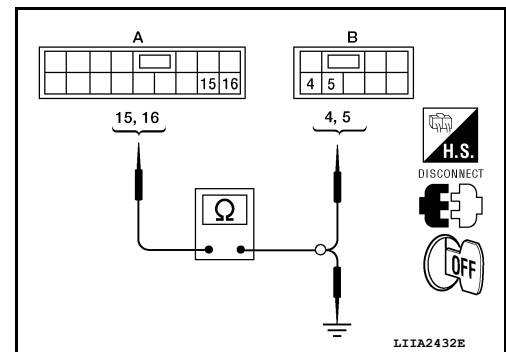

4. Check continuity between main power window and door lock/unlock switch connector (A) and ground.

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D7 (A)	15	Ground	No
	16		

Is the inspection result normal?

- YES >> GO TO 5
- NO >> Repair or replace harness.


### 3. CHECK HARNESS CONTINUITY (REAR POWER WINDOW SWITCH RH)

# POWER SUPPLY AND GROUND CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch and rear power window switch RH.
3. Check continuity between main power window and door lock/unlock switch connector (A) and rear power window switch RH connector (B).

Main power window and door lock/unlock switch connector	Terminal	Rear power window switch RH connector	Terminal	Continuity
D7 (A)	8	D303 (B)	4	Yes
	9		5	

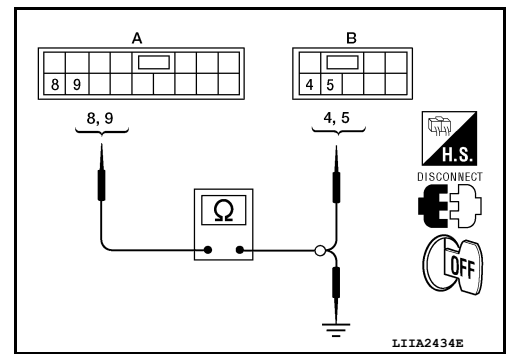

4. Check continuity between main power window and door lock/unlock switch connector (A) and ground.

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D7 (A)	8	Ground	No
	9		


### Is the inspection result normal?

- YES >> GO TO 5  
 NO >> Repair or replace harness.

## 4. CHECK HARNESS CONTINUITY

1. Disconnect BCM and rear power window switch.
2. Check continuity between BCM connector (A) and rear power window switch connector (B).

BCM connector	Terminal	Rear power window switch connector	Terminal	Continuity
M20 (A)	68	LH	D203 (B)	Yes
		RH	D303 (B)	

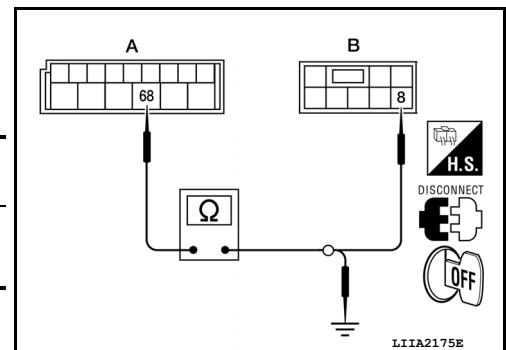

3. Check continuity between BCM connector (A) and ground.

BCM connector	Terminal	Ground	Continuity
M20 (A)	68	Ground	No

### Is the inspection result normal?

- YES >> Replace BCM. Refer to [BCS-53, "Removal and Installation"](#).  
 NO >> Repair or replace harness.

## 5. CHECK REAR POWER WINDOW SWITCH

Check rear power window switch.  
 Refer to [PWC-18, "REAR POWER WINDOW SWITCH : Component Inspection"](#).

### Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-37, "Intermittent Incident"](#).  
 NO >> Replace rear power window switch. Refer to [PWC-61, "Removal and Installation - Rear Door Switch"](#).

## REAR POWER WINDOW SWITCH : Component Inspection

INFOID:00000006255902

### COMPONENT INSPECTION

#### 1. CHECK REAR POWER WINDOW SWITCH

Check rear power window switch.

# POWER SUPPLY AND GROUND CIRCUIT

## < DTC/CIRCUIT DIAGNOSIS >

	Terminals		Condition	Continuity
	Rear power window switch LH or RH	6	5	DOWN
NEUTRAL or UP				Yes
8			NEUTRAL or UP	No
			DOWN	Yes
7		4	UP	No
			NEUTRAL or DOWN	Yes
		8	NEUTRAL or DOWN	No
			UP	Yes

Is the inspection result normal?

YES >> Rear power window switch is OK.

NO >> Replace rear power window switch. Refer to [PWC-61, "Removal and Installation - Rear Door Switch"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# POWER WINDOW MOTOR

< DTC/CIRCUIT DIAGNOSIS >

## POWER WINDOW MOTOR DRIVER SIDE

### DRIVER SIDE : Description

INFOID:000000006255903

Door glass moves UP/DOWN by receiving the signal from main power window and door lock/unlock switch.

### DRIVER SIDE : Component Function Check

INFOID:000000006255904

## 1. CHECK POWER WINDOW MOTOR CIRCUIT

Check front power window motor LH operation with operating main power window and door lock/unlock switch.

Is the inspection result normal?

YES >> Front power window motor LH is OK.

NO >> Refer to [PWC-20, "DRIVER SIDE : Diagnosis Procedure"](#).

### DRIVER SIDE : Diagnosis Procedure


INFOID:000000006255905

Regarding Wiring Diagram information, refer to [PWC-42, "Wiring Diagram"](#).

## 1. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH OUTPUT SIGNAL

1. Disconnect front power window motor LH.
2. Turn ignition switch ON.
3. Check voltage between front power window motor LH connector and ground.

Terminal (+)		Terminal (-)	Main power window and door lock/unlock switch condition	Voltage (V) (Approx.)
Power window motor LH connector	Terminal			
D9	2	Ground	UP	Battery voltage
			DOWN	0
	1		UP	0
			DOWN	Battery voltage

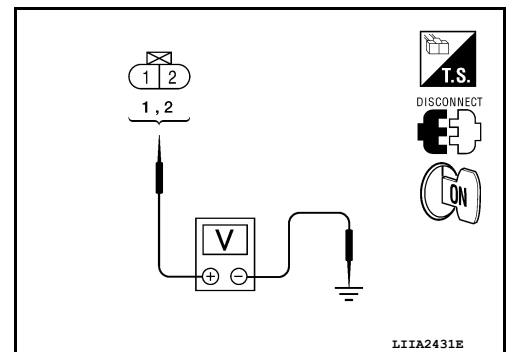

Is the measurement value within the specification?


YES >> GO TO 3

NO >> GO TO 2

## 2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect main power window and door lock/unlock switch.
3. Check continuity between main power window and door lock/unlock switch connector D7 and front power window motor LH connector D9.

Main power window and door lock/unlock switch connector	Terminal	Front power window motor LH connector	Terminal	Continuity
D7	6	D9	2	Yes
	7		1	

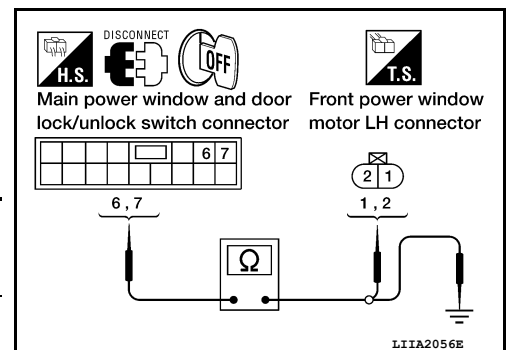

4. Check continuity between main power window and door lock/unlock switch connector D7 and ground.

# POWER WINDOW MOTOR

## < DTC/CIRCUIT DIAGNOSIS >

Main power window and door lock/unlock switch connector	Terminal	Ground	Continuity
D7	6		No
	7		

### Is the inspection result normal?

- YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-59, "Removal and Installation"](#).  
NO >> Repair or replace harness.

## 3. CHECK POWER WINDOW MOTOR

Check front power window motor LH.

Refer to [PWC-21, "DRIVER SIDE : Component Inspection"](#).

### Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-37, "Intermittent Incident"](#).  
NO >> Replace power window motor LH. Refer to [GW-18, "Rear Door Glass Regulator"](#).

## DRIVER SIDE : Component Inspection

INFOID:000000006255906

### COMPONENT INSPECTION

#### 1. CHECK FRONT POWER WINDOW MOTOR LH

Check motor operation by connecting the battery voltage directly to power window motor.

Terminal		Motor condition
(+)	(-)	
1	2	DOWN
2	1	UP

### Is the inspection result normal?

- YES >> Front power window motor LH is OK.  
NO >> Replace front power window motor LH. Refer to [GW-14, "Front Door Glass Regulator"](#).

## PASSENGER SIDE

PWC

### PASSENGER SIDE : Description

INFOID:000000006255907

Door glass moves UP/DOWN by receiving the signal from main power window and door lock/unlock switch or power window and door lock/unlock switch RH.

### PASSENGER SIDE : Component Function Check

INFOID:000000006255908

#### 1. CHECK POWER WINDOW MOTOR CIRCUIT

Check power window motor operation with operating main power window and door lock/unlock switch or power window and door lock/unlock switch RH.

### Is the inspection result normal?

- YES >> Front power window motor RH is OK.  
NO >> Refer to [PWC-21, "PASSENGER SIDE : Diagnosis Procedure"](#).

## PASSENGER SIDE : Diagnosis Procedure

INFOID:000000006255909

Regarding Wiring Diagram information, refer to [PWC-42, "Wiring Diagram"](#).


#### 1. CHECK FRONT POWER WINDOW SWITCH RH OUTPUT SIGNAL

# POWER WINDOW MOTOR

## < DTC/CIRCUIT DIAGNOSIS >

1. Disconnect front power window motor RH.
2. Turn ignition switch ON.
3. Check voltage between front power window motor RH connector and ground.

Terminal (+)		Terminal (-)	Front power window motor RH condition	Voltage (V) (Approx.)
Front power window motor RH connector	Terminal			
D104	2	Ground	UP	Battery voltage
			DOWN	0
	1		UP	0
			DOWN	Battery voltage

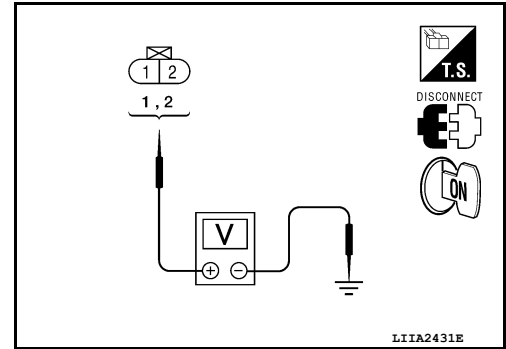


Is the measurement value within the specification?

- YES >> GO TO 3  
 NO >> GO TO 2

## 2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect power window and door lock/unlock switch RH.
3. Check continuity between power window and door lock/unlock switch RH connector and front power window motor RH connector.

Power window and door lock/unlock switch RH connector	Terminal	Front power window motor RH connector	Terminal	Continuity
D105	6	D104	1	Yes
	7		2	

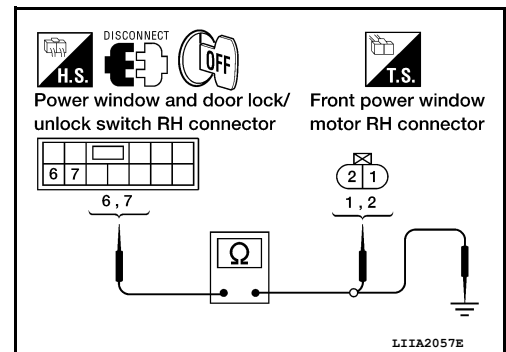

4. Check continuity between power window and door lock/unlock switch RH connector and ground.

Power window and door lock/unlock switch RH connector	Terminal	Ground	Continuity
D105	6	Ground	No
	7		

Is the inspection result normal?

- YES >> Replace power window and door lock/unlock switch RH. Refer to [PWC-60, "Removal and Installation"](#).  
 NO >> Repair or replace harness.

## 3. CHECK FRONT POWER WINDOW MOTOR RH

Check front power window motor RH.  
 Refer to [PWC-22, "PASSENGER SIDE : Component Inspection"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-37, "Intermittent Incident"](#).  
 NO >> Replace front power window motor RH. Refer to [GW-14, "Front Door Glass Regulator"](#).

## PASSENGER SIDE : Component Inspection

INFOID:000000006255910

### COMPONENT INSPECTION

#### 1. CHECK FRONT POWER WINDOW MOTOR RH

Check motor operation by connecting the battery voltage directly to front power window motor RH.

# POWER WINDOW MOTOR

## < DTC/CIRCUIT DIAGNOSIS >

Terminal		Motor condition
(+)	(-)	
1	2	DOWN
2	1	UP

### Is the inspection result normal?

YES >> Front power window motor RH is OK.

NO >> Replace front power window motor RH. Refer to [GW-14, "Front Door Glass Regulator"](#).

## REAR LH

### REAR LH : Description

INFOID:000000006255911

Door glass moves UP/DOWN by receiving the signal from power window main switch or rear power window switch LH.

### REAR LH : Component Function Check

INFOID:000000006255912

#### 1. CHECK REAR POWER WINDOW MOTOR LH CIRCUIT

Check rear power window motor LH operation with main power window and door lock/unlock switch or rear power window switch LH.

### Is the inspection result normal?

YES >> Rear power window motor LH is OK.

NO >> Refer to [PWC-23, "REAR LH : Diagnosis Procedure"](#)

### REAR LH : Diagnosis Procedure

INFOID:000000006255913

Regarding Wiring Diagram information, refer to [PWC-42, "Wiring Diagram"](#).

#### 1. CHECK REAR POWER WINDOW SWITCH OUTPUT SIGNAL

1. Disconnect rear power window motor LH.
2. Turn ignition switch ON.
3. Check voltage between rear power window motor LH connector and ground.


Terminal		Window condition	Voltage (V) (Approx.)
(+)	(-)		
Rear power window motor LH connector D204	2	UP	Battery voltage
		DOWN	0
	1	UP	0
		DOWN	Battery voltage

### Is the measurement value within the specification?

YES >> GO TO 3

NO >> GO TO 2

#### 2. CHECK HARNESS CONTINUITY

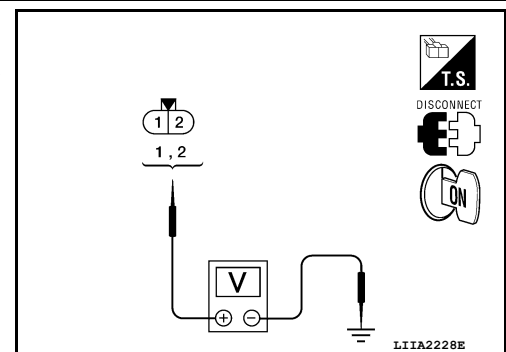

PWC

L

M

N

O

P

# POWER WINDOW MOTOR


## < DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect rear power window switch LH.
3. Check continuity between rear power window switch LH connector (A) and rear power window motor LH connector (B).

Rear power window switch LH connector	Terminal	Rear power window motor LH connector	Terminal	Continuity
D203 (A)	6	D204 (B)	1	Yes
	7		2	

4. Check continuity between rear power window switch LH connector (A) and ground.

Rear power window switch LH connector	Terminal	Ground	Continuity
D203 (A)	6	Ground	No
	7		

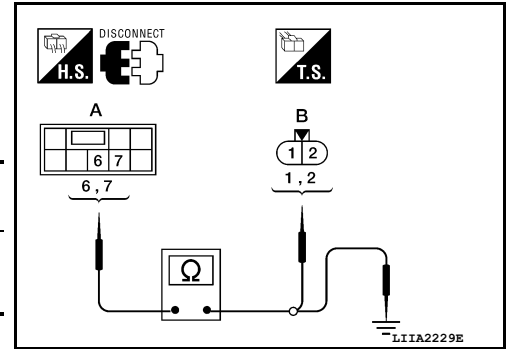

### Is the inspection result normal?

YES >> Check rear power window switch LH. Refer to [PWC-16. "REAR POWER WINDOW SWITCH : Component Function Check"](#).

NO >> Repair or replace harness.

## 3. CHECK REAR POWER WINDOW MOTOR LH

Check rear power window motor LH.

Refer to [PWC-24. "REAR LH : Component Inspection"](#).

### Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-37. "Intermittent Incident"](#).

NO >> Replace rear power window motor LH. Refer to [GW-18. "Rear Door Glass Regulator"](#).

## REAR LH : Component Inspection

INFOID:000000006255914

### COMPONENT INSPECTION

## 1. CHECK REAR POWER WINDOW MOTOR LH

Check motor operation by connecting the battery voltage directly to rear power window motor LH.

Terminal		Motor condition
(+)	(-)	
2	1	UP
1	2	DOWN

### Is the inspection result normal?

YES >> Rear power window motor LH is OK.

NO >> Replace rear power window motor LH. Refer to [GW-18. "Rear Door Glass Regulator"](#).

## REAR RH

### REAR RH : Description

INFOID:000000006255915

Door glass moves UP/DOWN by receiving the signal from main power window and door lock/unlock switch or rear power window switch RH.

### REAR RH : Component Function Check

INFOID:000000006255916

## 1. CHECK REAR POWER WINDOW MOTOR RH CIRCUIT

Check rear power window motor RH operation with operating main power window and door lock/unlock switch or rear power window switch RH.



# POWER WINDOW MOTOR

## < DTC/CIRCUIT DIAGNOSIS >

### Is the inspection result normal?

- YES >> Rear power window motor RH is OK.
- NO >> Refer to [PWC-25. "REAR RH : Diagnosis Procedure"](#).

### REAR RH : Diagnosis Procedure


INFOID:000000006255917

Regarding Wiring Diagram information, refer to [PWC-42. "Wiring Diagram"](#).

## 1. CHECK REAR POWER WINDOW SWITCH RH OUTPUT SIGNAL

1. Disconnect rear power window motor RH.
2. Turn ignition switch ON.
3. Check voltage between rear power window motor RH connector and ground.

Terminal (+)		Terminal (-)	Rear power window switch RH condition	Voltage (V) (Approx.)
Rear power window motor RH connector	Terminal			
D304	2	Ground	UP	Battery voltage
			DOWN	0
	1		UP	0
			DOWN	Battery voltage

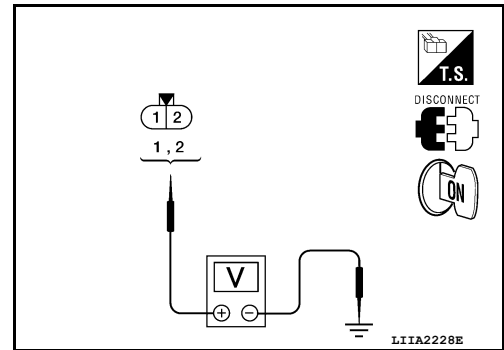


### Is the measurement value within the specification?

- YES >> GO TO 3
- NO >> GO TO 2

## 2. CHECK HARNESS CONTINUITY

1. Turn ignition switch OFF.
2. Disconnect rear power window switch RH.
3. Check continuity between rear power window switch RH connector (A) and rear power window motor RH connector (B).

Rear power window switch RH connector	Terminal	Rear power window motor RH connector	Terminal	Continuity
D303 (A)	6	D304 (B)	1	Yes
	7		2	

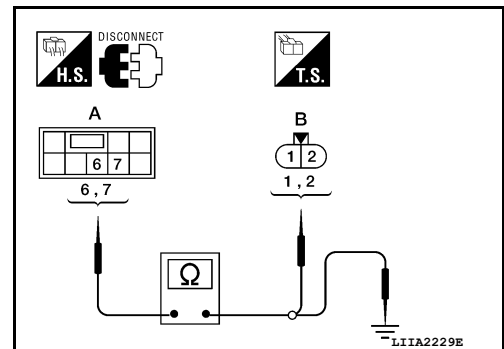

4. Check continuity between rear power window switch RH connector (A) and ground.

Rear power window switch RH connector	Terminal	Ground	Continuity
D303 (A)	6	Ground	No
	7		

### Is the inspection result normal?

- YES >> Check rear power window switch RH. Refer to [PWC-16. "REAR POWER WINDOW SWITCH : Component Function Check"](#).
- NO >> Repair or replace harness.

## 3. CHECK REAR POWER WINDOW MOTOR RH

Check rear power window motor RH.  
Refer to [PWC-26. "REAR RH : Component Inspection"](#).

# POWER WINDOW MOTOR

## < DTC/CIRCUIT DIAGNOSIS >

---

### Is the inspection result normal?

YES >> Check intermittent incident. Refer to [GI-37, "Intermittent Incident"](#).

NO >> Replace rear power window motor RH. Refer to [GW-18, "Rear Door Glass Regulator"](#).

## REAR RH : Component Inspection

INFOID:000000006255918

### COMPONENT INSPECTION

#### 1. CHECK REAR POWER WINDOW MOTOR RH

---

Check motor operation by connecting the battery voltage directly to rear power window motor RH.

Terminal		Motor condition
(+)	(-)	
2	1	UP
1	2	DOWN

### Is the inspection result normal?

YES >> Rear power window motor RH is OK.

NO >> Replace rear power window motor RH. Refer to [GW-18, "Rear Door Glass Regulator"](#).

# DOOR SWITCH

< DTC/CIRCUIT DIAGNOSIS >

## DOOR SWITCH

### Description

INFOID:000000006255919

Detects door open/close condition and transmits the signal to BCM.

### Component Function Check

INFOID:000000006255920

#### 1. CHECK FRONT DOOR SWITCH INPUT SIGNAL

Check ("DOOR SW-DR" and "DOOR SW-AS") in "DATA MONITOR" mode with CONSULT-III. Refer to [BCS-24. "RETAINED PWR : CONSULT-III Function \(BCM - RETAINED PWR\)"](#).

Monitor item	Condition	
DOOR SW-DR	OPEN	: ON
	CLOSE	: OFF
DOOR SW-AS	OPEN	: ON
	CLOSE	: OFF

Is the inspection result normal?

- YES >> Front door switch circuit is OK.
- NO >> Refer to [PWC-27. "Diagnosis Procedure"](#).

### Diagnosis Procedure


INFOID:000000006255921

Regarding Wiring Diagram information, refer to [PWC-42. "Wiring Diagram"](#).

#### 1. CHECK FRONT DOOR SWITCH

Check voltage between BCM connector and ground.

Terminals		Door condition	Voltage (V) (Approx.)	
(+)	(-)			
BCM connector	Terminal			
M18	12	Front door RH	OPEN	0
			CLOSE	Battery voltage
M19	47	Front door LH	OPEN	0
			CLOSE	Battery voltage

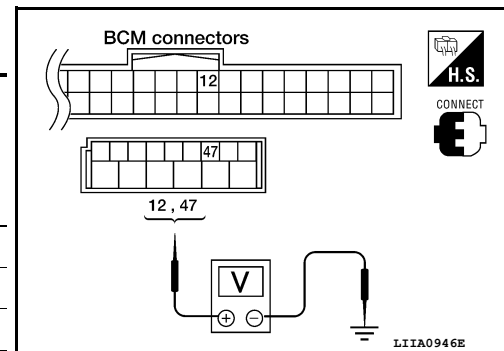

Is the measurement value within the specification?

- YES >> Door switch circuit is OK.
- NO >> GO TO 2

#### 2. CHECK HARNESS CONTINUITY

# DOOR SWITCH

## < DTC/CIRCUIT DIAGNOSIS >

1. Turn ignition switch OFF.
2. Disconnect BCM and front door switch.
3. Check continuity between BCM connector and front door switch connector.

BCM connector	Terminal	Front door switch connector	Terminal	Continuity
M18	12	RH: B108	2	Yes
M19	47	LH: B8		

4. Check continuity between front door switch connector and ground.

Front door switch connector	Terminal	Ground	Continuity
B8 (LH)	2	Ground	No
B108 (RH)			

Is the inspection result normal?

- YES >> GO TO 3  
 NO >> Repair or replace harness.

### 3. CHECK BCM OUTPUT SIGNAL

1. Connect BCM connector.
2. Check voltage between BCM connector and ground.

Terminal (+)		Terminal (-)	Voltage (V) (Approx.)
BCM connector	Terminal		
M18	12	Ground	Battery voltage
M19	47		

Is the measurement value within the specification?

- YES >> GO TO 4  
 NO >> Replace BCM. Refer to [BCS-53, "Removal and Installation"](#).

### 4. CHECK FRONT DOOR SWITCH

Check front door switch.  
 Refer to [PWC-28, "Component Inspection"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-37, "Intermittent Incident"](#).  
 NO >> Replace front door switch.

## Component Inspection

INFOID:000000006255922




### 1. CHECK FRONT DOOR SWITCH

Check front door switches.

Terminal		Door switch	Continuity
Door switches			
2	Ground part of door switch	Pressed	No
		Released	Yes

Is the inspection result normal?

- YES >> Front door switch is OK.  
 NO >> Replace front door switch.

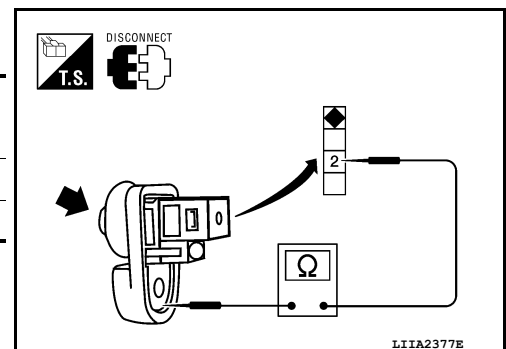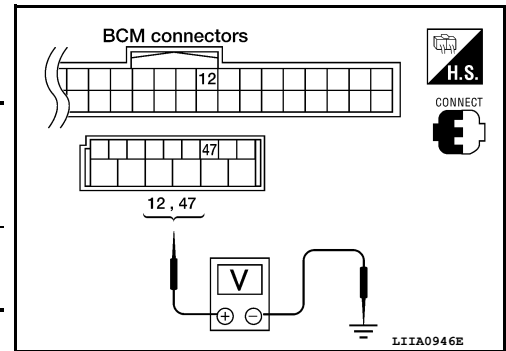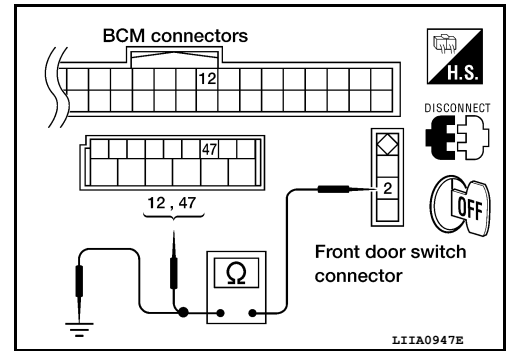

# POWER WINDOW LOCK SWITCH

< DTC/CIRCUIT DIAGNOSIS >

## POWER WINDOW LOCK SWITCH

### Description

INFOID:000000006255923

Ground circuit of main power window and door lock/unlock switch shuts off if power window lock switch of main power window and door lock/unlock switch is operated. This inhibits all operation, except for the main switch.

### Component Function Check

INFOID:000000006255924

#### 1. CHECK POWER WINDOW LOCK SIGNAL

Exchanges for a normal main power window and door lock/unlock switch, and operation is checked.

##### Does power window lock operate?

- YES >> Replace main power window and door lock/unlock switch. Refer to [PWC-59. "Removal and Installation"](#).
- NO >> Check condition of harness and connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# POWER WINDOW SYSTEM


< ECU DIAGNOSIS INFORMATION >

## ECU DIAGNOSIS INFORMATION

### POWER WINDOW SYSTEM

#### Terminal Layout

INFOID:000000006255925

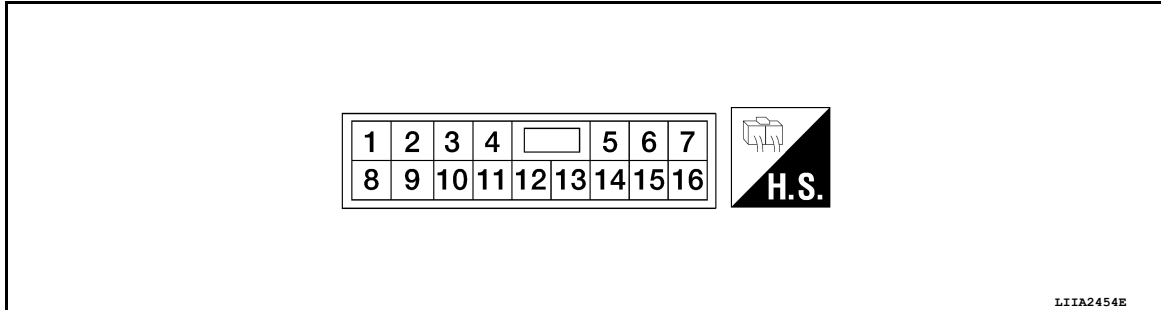

#### Physical Values

INFOID:000000006255926

Terminal	Wire Color	Item	Condition	Voltage (V) (Approx.)
2	G/Y	Front power window motor RH DOWN signal	When power window motor is operated DOWN	Battery voltage
3	L/W	Front power window motor RH UP signal	When power window motor is operated UP	Battery voltage
5	W/R	RAP signal	When ignition switch ON	Battery voltage
			Within 45 seconds after ignition switch is turned to OFF	Battery voltage
			More than 45 seconds after ignition switch is turned to OFF	0
			When front door LH or RH open or power window timer operates	0
6	G/R	Front power window motor LH UP signal	When power window motor is operated UP	Battery voltage
7	G/W	Front power window motor LH DOWN signal	When power window motor is operated DOWN	Battery voltage
8	G/B	Rear power window RH UP signal	When rear RH switch in main power window and door lock/unlock switch is operated UP	Battery voltage
9	R	Rear power window RH DOWN signal	When rear RH switch in main power window and door lock/unlock switch is operated DOWN	Battery voltage
14	B	Ground	—	0
15	R/B	Rear power window LH UP signal	When rear LH switch in main power window and door lock/unlock switch is operated UP	Battery voltage
16	R/Y	Rear power window LH DOWN signal	When rear LH switch in main power window and door lock/unlock switch is operated DOWN	Battery voltage

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## BCM (BODY CONTROL MODULE)

### Reference Value

INFOID:000000006835803

#### NOTE:

The Signal Tech II Tool (J-50190) can be used to perform the following functions. Refer to the Signal Tech II User Guide for additional information.

- Activate and display TPMS transmitter IDs
- Display tire pressure reported by the TPMS transmitter
- Read TPMS DTCs
- Register TPMS transmitter IDs

### VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition	Value/Status
ACC ON SW	Ignition switch OFF or ON	Off
	Ignition switch ACC	On
AIR COND SW	A/C switch OFF	Off
	A/C switch ON	On
AIR PRESS FL	Front left tire air pressure value	kPa, kg/cm <sup>2</sup> , psi
AIR PRESS FR	Front right tire air pressure value	kPa, kg/cm <sup>2</sup> , psi
AIR PRESS RL	Rear left tire air pressure value	kPa, kg/cm <sup>2</sup> , psi
AIR PRESS RR	Rear right tire air pressure value	kPa, kg/cm <sup>2</sup> , psi
BACK DOOR SW	Back door closed	Off
	Back door opened	On
BRAKE SW	Brake pedal released	Off
	Brake pedal applied	On
BUCKLE SW	Seat belt buckle unfastened	Off
	Seat belt buckle fastened	On
BUZZER	Buzzer in combination meter OFF	Off
	Buzzer in combination meter ON	On
CARGO LAMP SW	Cargo lamp switch OFF	Off
	Cargo lamp switch ON	On
CDL LOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the LOCK side	On
CDL UNLOCK SW	Door lock/unlock switch does not operate	Off
	Press door lock/unlock switch to the UNLOCK side	On
DOOR SW-AS	Front door RH closed	Off
	Front door RH opened	On
DOOR SW-DR	Front door LH closed	Off
	Front door LH opened	On
DOOR SW-RL	Rear door LH closed	Off
	Rear door LH opened	On
DOOR SW-RR	Rear door RH closed	Off
	Rear door RH opened	On
FAN ON SIG	Blower motor fan switch OFF	Off
	Blower motor fan switch ON	On

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER LOW	Front wiper switch OFF	Off
	Front wiper switch LO	On
FR WIPER HI	Front wiper switch OFF	Off
	Front wiper switch HI	On
FR WIPER INT	Front wiper switch OFF	Off
	Front wiper switch INT	On
FR WIPER STOP	Any position other than front wiper stop position	Off
	Front wiper stop position	On
HAZARD SW	When hazard switch is not pressed	Off
	When hazard switch is pressed	On
HEAD LAMP SW 1	Headlamp switch OFF	Off
	Headlamp switch 1st	On
HEAD LAMP SW 2	Headlamp switch OFF	Off
	Headlamp switch 1st	On
HI BEAM SW	High beam switch OFF	Off
	High beam switch HI	On
ID REGST FL1	ID registration of front left tire incomplete	YET
	ID registration of front left tire complete	DONE
ID REGST FR1	ID registration of front right tire incomplete	YET
	ID registration of front right tire complete	DONE
ID REGST RL1	ID registration of rear left tire incomplete	YET
	ID registration of rear left tire complete	DONE
ID REGST RR1	ID registration of rear right tire incomplete	YET
	ID registration of rear right tire complete	DONE
IGN ON SW	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
IGN SW CAN	Ignition switch OFF or ACC	Off
	Ignition switch ON	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	1 - 7
KEY CYL LK-SW	Door key cylinder LOCK position	Off
	Door key cylinder other than LOCK position	On
KEY CYL UN-SW	Door key cylinder UNLOCK position	Off
	Door key cylinder other than UNLOCK position	On
KEY ON SW	Mechanical key is removed from key cylinder	Off
	Mechanical key is inserted to key cylinder	On
KEYLESS LOCK	LOCK button of key fob is not pressed	Off
	LOCK button of key fob is pressed	On
KEYLESS PANIC	PANIC button of key fob is not pressed	Off
	PANIC button of key fob is pressed	On



## BCM (BODY CONTROL MODULE)

### < ECU DIAGNOSIS INFORMATION >

Monitor Item	Condition	Value/Status	
KEYLESS UNLOCK	UNLOCK button of key fob is not pressed	Off	A
	UNLOCK button of key fob is pressed	On	
LIGHT SW 1ST	Lighting switch OFF	Off	B
	Lighting switch 1st	On	
OIL PRESS SW	<ul style="list-style-type: none"> <li>• Ignition switch OFF or ACC</li> <li>• Engine running</li> </ul>	Off	C
	Ignition switch ON	On	
PASSING SW	Other than lighting switch PASS	Off	D
	Lighting switch PASS	On	
REAR DEF SW	Rear window defogger switch OFF	Off	E
	Rear window defogger switch ON	On	
RR WASHER SW	Rear washer switch OFF	Off	F
	Rear washer switch ON	On	
RR WIPER INT	Rear wiper switch OFF	Off	G
	Rear wiper switch INT	On	
RR WIPER ON	Rear wiper switch OFF	Off	H
	Rear wiper switch ON	On	
RR WIPER STOP	Rear wiper stop position	Off	I
	Other than rear wiper stop position	On	
TURN SIGNAL L	Turn signal switch OFF	Off	J
	Turn signal switch LH	On	
TURN SIGNAL R	Turn signal switch OFF	Off	
	Turn signal switch RH	On	
VEHICLE SPEED	While driving	Equivalent to speedometer reading	
WARNING LAMP	Low tire pressure warning lamp in combination meter OFF	Off	
	Low tire pressure warning lamp in combination meter ON	On	

PWC

L

M

N

O


P

# BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

## Terminal Layout

INFOID:000000006835804

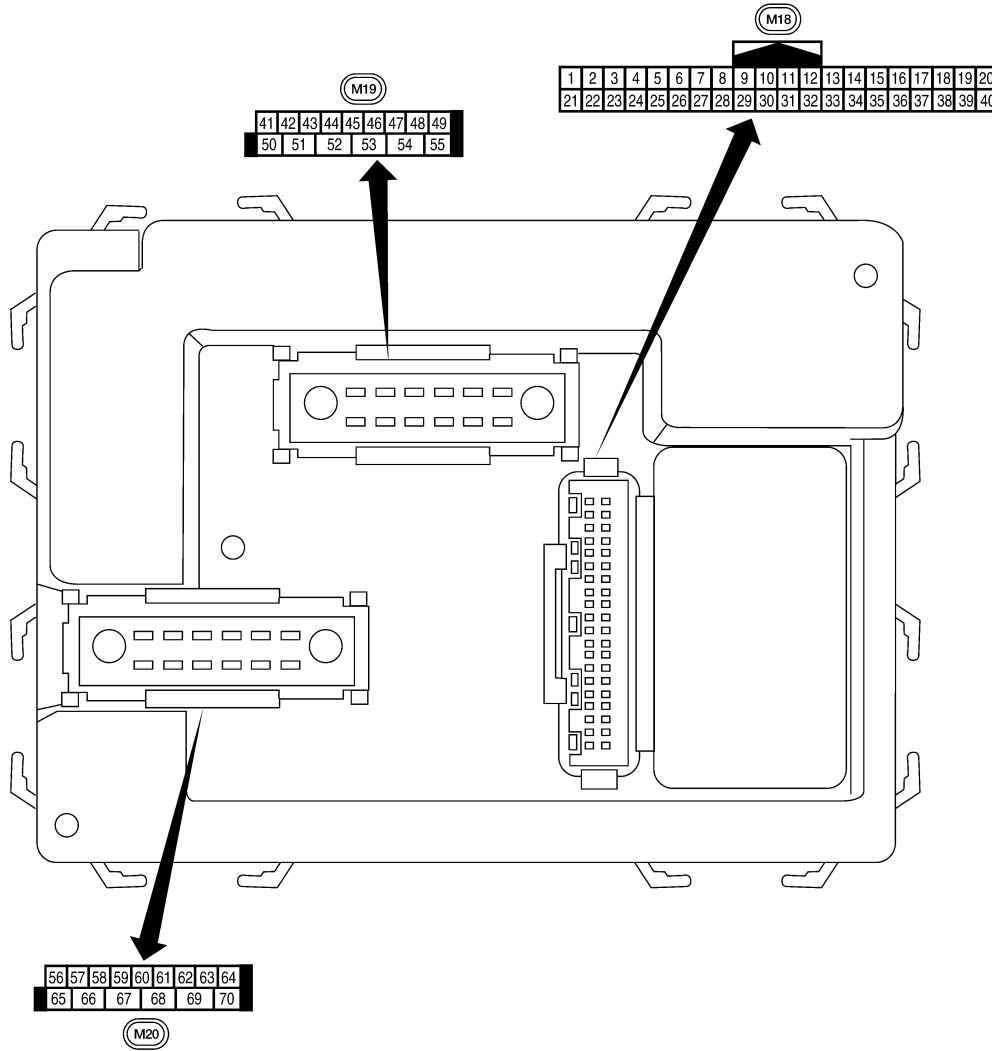

LIIA2443E

## Physical Values

INFOID:000000006835805

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >




Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
1	BR	Ignition keyhole illumination	Output	OFF	Door is locked (SW OFF)	Battery voltage
					Door is unlocked (SW ON)	0V
2	P	Combination switch input 5	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right; font-size: small;">SKIA5291E</p>
3	SB	Combination switch input 4	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right; font-size: small;">SKIA5292E</p>
4	V	Combination switch input 3	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right; font-size: small;">SKIA5291E</p>
5	L	Combination switch input 2	Input	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right; font-size: small;">SKIA5292E</p>
6	R	Combination switch input 1				
7	GR	Front door lock assembly LH (key cylinder switch) and back door key cylinder switch (unlock)	Input	OFF	ON (open, 2nd turn)	Momentary 1.5V
				OFF	OFF (closed)	0V
					8	SB
				OFF	OFF (closed)	0V
					9	Y
				ON	Rear window defogger switch OFF	5V
					11	G/B
12	LG	Front door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

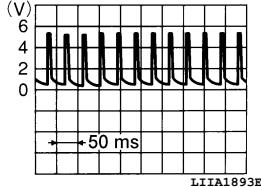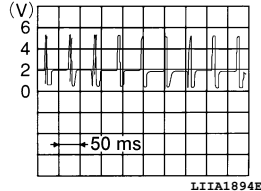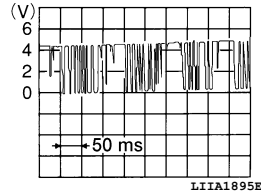Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
13	L	Rear door switch RH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
15	W	Tire pressure warning check connector	Input	OFF	—	5V
18	BR	Remote keyless entry receiver (ground)	Output	OFF	—	0V
19	V	Remote keyless entry receiver (power supply)	Output	OFF	Ignition switch OFF	 <small>LI1A1893E</small>
20	G	Remote keyless entry receiver (signal)	Input	OFF	Stand-by (keyfob buttons released)	 <small>LI1A1894E</small>
					When remote keyless entry receiver receives signal from keyfob (keyfob buttons pressed)	 <small>LI1A1895E</small>
21	GR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
23	G	Security indicator lamp	Output	OFF	Goes OFF → illuminates (Every 2.4 seconds)	Battery voltage → 0V
25	BR	NATS antenna amp.	Input	OFF → ON	Ignition switch (OFF → ON)	Just after turning ignition switch ON: Pointer of tester should move for approx. 1 second, then return to battery voltage.
27	W	Compressor ON signal	Input	ON	A/C switch OFF	5V
					A/C switch ON	0V
28	R	Front blower monitor	Input	ON	Front blower motor OFF	Battery voltage
					Front blower motor ON	0V
29	G	Hazard switch	Input	OFF	ON	0V
					OFF	5V
31	R	Off-road lamps switch	Input	ON	ON	0V
					OFF	5V

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >




Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
32	O	Combination switch output 5	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right; font-size: small;">SKIA5291E</p>
33	GR	Combination switch output 4	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right; font-size: small;">SKIA5292E</p>
34	G	Combination switch output 3	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right; font-size: small;">SKIA5291E</p>
35	BR	Combination switch output 2	Output	ON	Lighting, turn, wiper OFF Wiper dial position 4	<p style="text-align: right; font-size: small;">SKIA5292E</p>
36	LG	Combination switch output 1				
37	B	Key switch and key lock solenoid	Input	OFF	Key inserted	Battery voltage
					Key inserted	0V
38	W/R	Ignition switch (ON)	Input	ON	—	Battery voltage
39	L	CAN-H	—	—	—	—
40	P	CAN-L	—	—	—	—
42	L	Off-road lamps	Output	ON	Off-road lamps switch	ON: 0V OFF: Battery voltage
43	Y	Back door switch	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
44	O	Rear wiper auto stop switch	Input	ON	Rise up position (rear wiper arm on stopper)	0V
					A Position (full clockwise stop position)	Battery voltage
					Forward sweep (counterclockwise direction)	Fluctuating
					B Position (full counterclockwise stop position)	0V
					Reverse sweep (clockwise direction)	Fluctuating

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

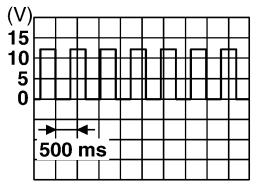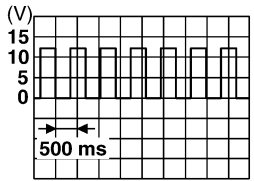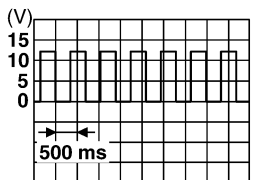Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
45	V	Lock switch	Input	OFF	ON (lock)	0V
					OFF	Battery voltage
46	LG	Unlock switch	Input	OFF	ON (unlock)	0V
					OFF	Battery voltage
47	GR	Front door switch LH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
48	P	Rear door switch LH	Input	OFF	ON (open)	0V
					OFF (closed)	Battery voltage
49	L	Cargo lamp	Output	OFF	Any door open (ON)	0V
					All doors closed (OFF)	Battery voltage
50	W	Off-road lamps relay	Output	ON	Off-road lamps switch	ON
					OFF	Battery voltage
51	O	Trailer turn signal (right)	Output	ON	Turn right ON	 <p style="text-align: right; font-size: small;">SKIA3009J</p>
52	LG	Trailer turn signal (left)	Output	ON	Turn left ON	 <p style="text-align: right; font-size: small;">SKIA3009J</p>
55	W	Rear wiper output circuit 1	Output	ON	OFF	0
					ON	Battery voltage
56	R/Y	Battery saver output	Output	OFF	15 minutes after ignition switch is turned OFF	0V
				ON	—	Battery voltage
57	R/Y	Battery power supply	Input	OFF	—	Battery voltage
59	GR	Front door lock assembly LH actuator (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage
60	LG	Turn signal (left)	Output	ON	Turn left ON	 <p style="text-align: right; font-size: small;">SKIA3009J</p>

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Terminal	Wire color	Signal name	Signal input/output	Measuring condition		Reference value or waveform (Approx.)
				Ignition switch	Operation or condition	
61	G	Turn signal (right)	Output	ON	Turn right ON	
63	BR	Interior room/map lamp	Output	OFF	Any door switch	ON (open) 0V
						OFF (closed) Battery voltage
65	V	All door lock actuators (lock)	Output	OFF	OFF (neutral)	0V
					ON (lock)	Battery voltage
66	L	Front door lock actuator RH, rear door lock actuators LH/RH and back door lock actuator (unlock)	Output	OFF	OFF (neutral)	0V
					ON (unlock)	Battery voltage
67	B	Ground	Input	ON	—	0V
68	O	Power window power supply (RAP)	Output	—	Ignition switch ON	Battery voltage
					Within 45 seconds after ignition switch OFF	Battery voltage
					More than 45 seconds after ignition switch OFF	0V
					When front door LH or RH is open or power window timer operates	0V
70	W	Battery power supply	Input	OFF	—	Battery voltage

### Fail Safe

INFOID:000000006835806

PWC

### Fail-safe index

BCM performs fail-safe control when any DTC listed below is detected.

Display contents of CONSULT	Fail-safe	Cancellation
U1000: CAN COMM CIRCUIT	Inhibit engine cranking	When the BCM re-establishes communication with the other modules.

### DTC Inspection Priority Chart

INFOID:000000006835807

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	• U1000: CAN COMM CIRCUIT
2	• B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM

# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

Priority	DTC
3	<ul style="list-style-type: none"> <li>• C1729: VHCL SPEED SIG ERR</li> <li>• C1735: IGNITION SIGNAL</li> </ul>
4	<ul style="list-style-type: none"> <li>• C1704: LOW PRESSURE FL</li> <li>• C1705: LOW PRESSURE FR</li> <li>• C1706: LOW PRESSURE RR</li> <li>• C1707: LOW PRESSURE RL</li> <li>• C1708: [NO DATA] FL</li> <li>• C1709: [NO DATA] FR</li> <li>• C1710: [NO DATA] RR</li> <li>• C1711: [NO DATA] RL</li> <li>• C1712: [CHECKSUM ERR] FL</li> <li>• C1713: [CHECKSUM ERR] FR</li> <li>• C1714: [CHECKSUM ERR] RR</li> <li>• C1715: [CHECKSUM ERR] RL</li> <li>• C1716: [PRESSDATA ERR] FL</li> <li>• C1717: [PRESSDATA ERR] FR</li> <li>• C1718: [PRESSDATA ERR] RR</li> <li>• C1719: [PRESSDATA ERR] RL</li> <li>• C1720: [CODE ERR] FL</li> <li>• C1721: [CODE ERR] FR</li> <li>• C1722: [CODE ERR] RR</li> <li>• C1723: [CODE ERR] RL</li> <li>• C1724: [BATT VOLT LOW] FL</li> <li>• C1725: [BATT VOLT LOW] FR</li> <li>• C1726: [BATT VOLT LOW] RR</li> <li>• C1727: [BATT VOLT LOW] RL</li> </ul>

## DTC Index

INFOID:000000006835808

### NOTE:

Details of time display

- CRNT: Displays when there is a malfunction now or after returning to the normal condition until turning ignition switch OFF → ON again.
- 1 - 39: Displayed if any previous malfunction is present when current condition is normal. It increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. The counter remains at 39 even if the number of cycles exceeds it. It is counted from 1 again when turning ignition switch OFF → ON after returning to the normal condition if the malfunction is detected again.

CONSULT display	Fail-safe	Tire pressure monitor warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—
U1000: CAN COMM CIRCUIT	—	—	<a href="#">BCS-27</a>
B2190: NATS ANTENNA AMP	—	—	<a href="#">SEC-18</a>
B2191: DIFFERENCE OF KEY	—	—	<a href="#">SEC-21</a>
B2192: ID DISCORD BCM-ECM	—	—	<a href="#">SEC-22</a>
B2193: CHAIN OF BCM-ECM	—	—	<a href="#">SEC-24</a>
C1708: [NO DATA] FL	—	—	<a href="#">WT-14</a>
C1709: [NO DATA] FR	—	—	<a href="#">WT-14</a>
C1710: [NO DATA] RR	—	—	<a href="#">WT-14</a>
C1711: [NO DATA] RL	—	—	<a href="#">WT-14</a>
C1712: [CHECKSUM ERR] FL	—	—	<a href="#">WT-16</a>
C1713: [CHECKSUM ERR] FR	—	—	<a href="#">WT-16</a>
C1714: [CHECKSUM ERR] RR	—	—	<a href="#">WT-16</a>
C1715: [CHECKSUM ERR] RL	—	—	<a href="#">WT-16</a>



# BCM (BODY CONTROL MODULE)

## < ECU DIAGNOSIS INFORMATION >

CONSULT display	Fail-safe	Tire pressure monitor warning lamp ON	Reference page
C1716: [PRESSDATA ERR] FL	—	—	<a href="#">WT-18</a>
C1717: [PRESSDATA ERR] FR	—	—	<a href="#">WT-18</a>
C1718: [PRESSDATA ERR] RR	—	—	<a href="#">WT-18</a>
C1719: [PRESSDATA ERR] RL	—	—	<a href="#">WT-18</a>
C1720: [CODE ERR] FL	—	—	<a href="#">WT-16</a>
C1721: [CODE ERR] FR	—	—	<a href="#">WT-16</a>
C1722: [CODE ERR] RR	—	—	<a href="#">WT-16</a>
C1723: [CODE ERR] RL	—	—	<a href="#">WT-16</a>
C1724: [BATT VOLT LOW] FL	—	—	<a href="#">WT-16</a>
C1725: [BATT VOLT LOW] FR	—	—	<a href="#">WT-16</a>
C1726: [BATT VOLT LOW] RR	—	—	<a href="#">WT-16</a>
C1727: [BATT VOLT LOW] RL	—	—	<a href="#">WT-16</a>
C1729: VHCL SPEED SIG ERR	—	—	<a href="#">WT-20</a>
C1735: IGNITION SIGNAL	—	—	—

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# POWER WINDOW SYSTEM


< WIRING DIAGRAM >

## WIRING DIAGRAM

### POWER WINDOW SYSTEM

Wiring Diagram

INFOID:000000006706382

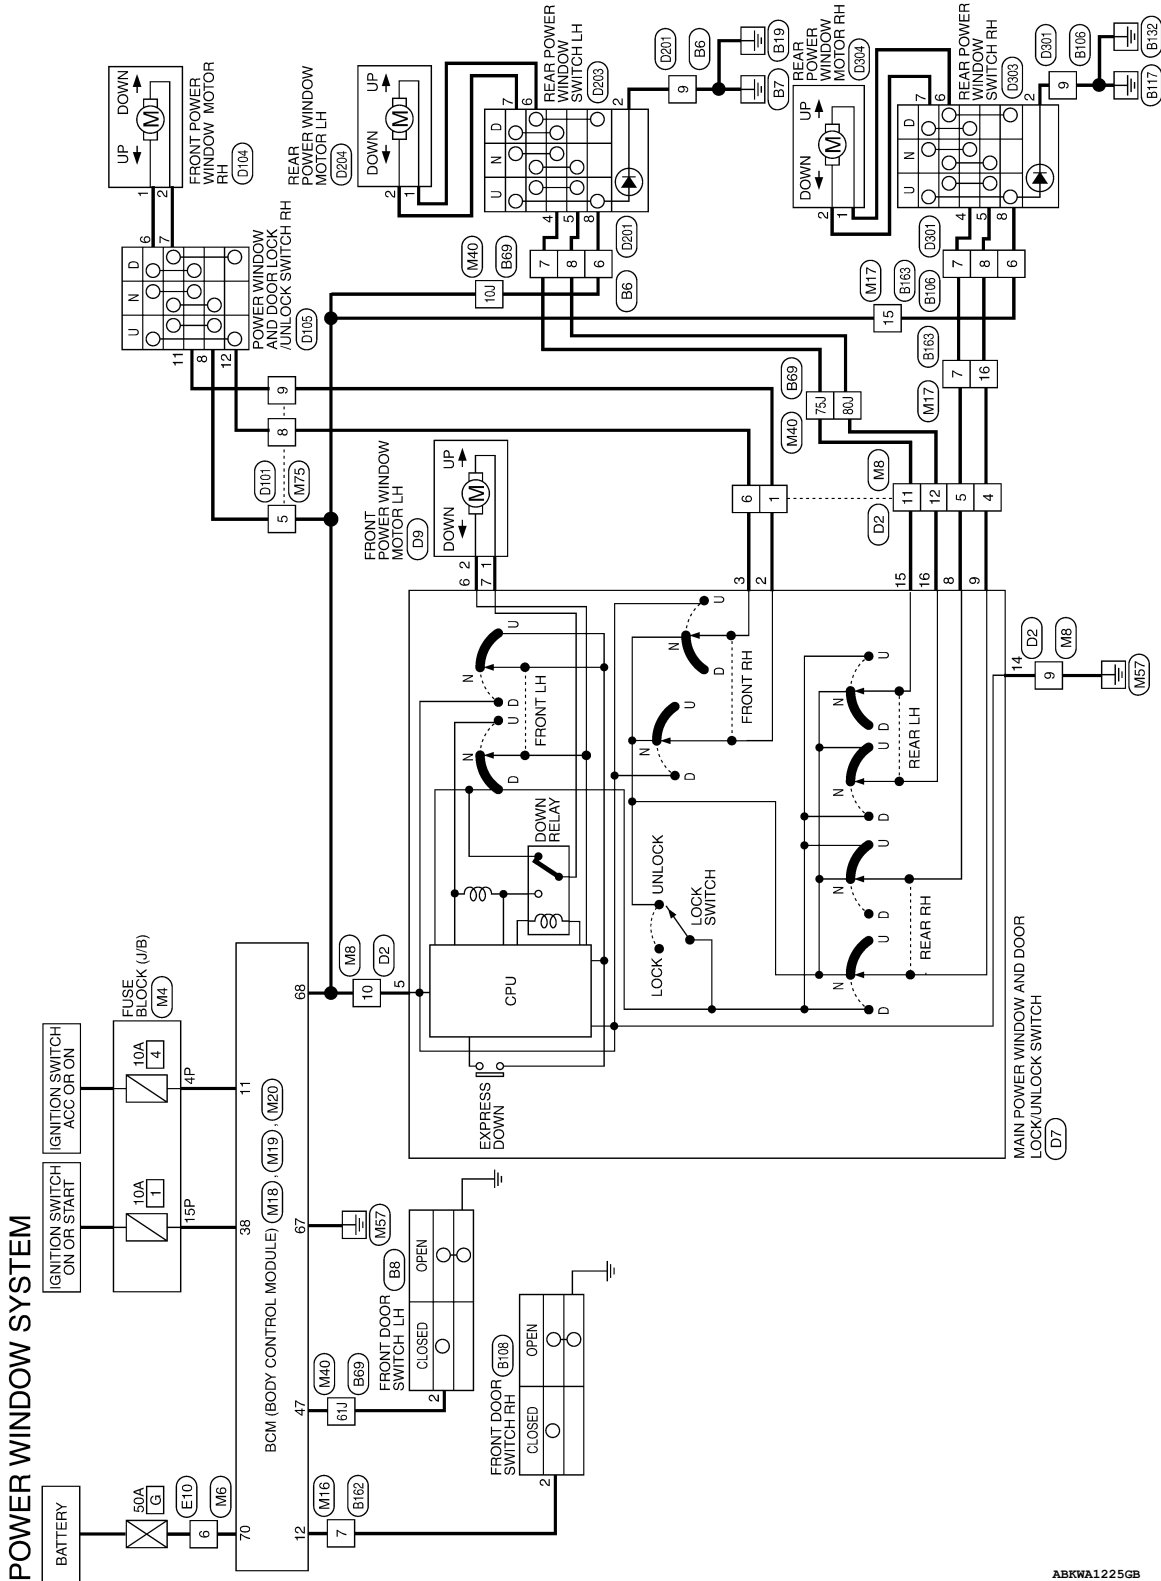

ABKWA1225GB

# POWER WINDOW SYSTEM

< WIRING DIAGRAM >

## POWER WINDOW SYSTEM CONNECTORS

Connector No.	M4
Connector Name	FUSE BLOCK (J/B)
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
4P	G/B	-
15P	W/R	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6	W	-

Connector No.	M8
Connector Name	WIRE TO WIRE
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	SB	-
4	P	-
5	Y	-
6	P	-
9	B	-
10	O	-
11	R	-
12	LG	-

Connector No.	M16
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
7	LG	-

Connector No.	M17
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	Y	-
15	W	-
16	P	-

Connector No.	M18
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE

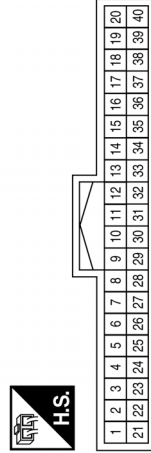

Terminal No.	Color of Wire	Signal Name
11	G/B	ACC SW
12	LG	DOOR SW (AS)
38	W/R	IGN SW

ABK1A1914GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# POWER WINDOW SYSTEM


< WIRING DIAGRAM >

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	WHITE





Terminal No.	Color of Wire	Signal Name
47	GR	DOOR SW (DR)

Connector No.	M20
Connector Name	BCM (BODY CONTROL MODULE)
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
67	B	GND (POWER)
68	O	POWER WINDOW POWER SUPPLY OUTPUT (LINKED TO RAP)
70	W	BAT (F/L)

Connector No.	M40
Connector Name	WIRE TO WIRE
Connector Color	WHITE

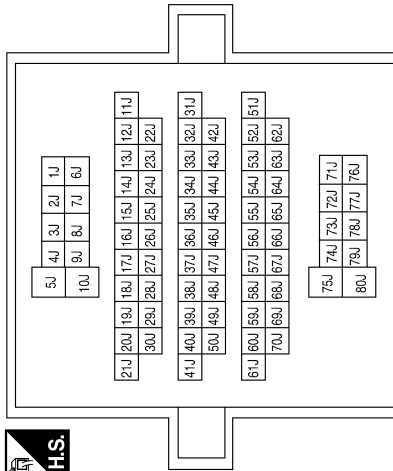

Terminal No.	Color of Wire	Signal Name
10J	W	-
61J	GR	-
75J	R	-
80J	LG	-

Connector No.	M75
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
5	W	-
8	P	-
9	SB	-

ABKIA0556GB

# POWER WINDOW SYSTEM


< WIRING DIAGRAM >

Connector No.	B8
Connector Name	FRONT DOOR SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	GR	-

Connector No.	B6
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6	W	-
7	R	-
8	LG	-
9	B	-

Connector No.	E10
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	W	-


Connector No.	B106
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	W	-
7	Y	-
8	P	-
9	B	-

Terminal No.	Color of Wire	Signal Name
10J	W	-
61J	GR	-
75J	R	-
80J	LG	-

Connector No.	B69
Connector Name	WIRE TO WIRE
Connector Color	WHITE

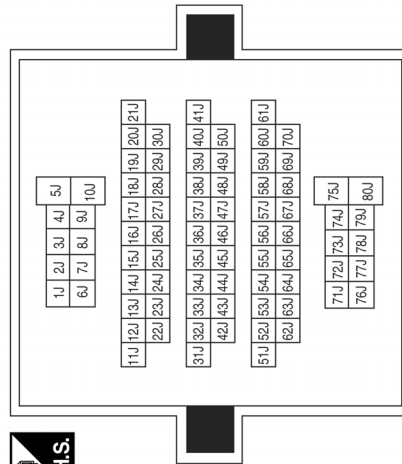

ABKIA1937GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# POWER WINDOW SYSTEM


< WIRING DIAGRAM >

Connector No.	B108
Connector Name	FRONT DOOR SWITCH RH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
2	LG	-

Connector No.	B162
Connector Name	WIRE TO WIRE
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
7	LG	-

Connector No.	B163
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
7	Y	-
15	W	-
16	P	-

Connector No.	D2
Connector Name	WIRE TO WIRE
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	G/Y	-
4	R	-
5	G/B	-
6	L/W	-
9	B	-
10	W/R	-
11	R/B	-
12	R/Y	-

Connector No.	D7
Connector Name	MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	G/Y	-
3	L/W	-
5	W/R	-
6	G/R	-
7	G/W	-
8	G/B	-
9	R	-
14	B	-
15	R/B	-
16	R/Y	-

Connector No.	D9
Connector Name	FRONT POWER WINDOW MOTOR LH
Connector Color	BROWN




Terminal No.	Color of Wire	Signal Name
1	G/W	-
2	G/R	-

ABK1A1915GB

# POWER WINDOW SYSTEM

< WIRING DIAGRAM >

Connector No.	D105
Connector Name	POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH
Connector Color	WHITE




Terminal No.	Color of Wire	Signal Name
6	G	-
7	L	-
8	W/R	-
11	G/Y	-
12	L/W	-

Connector No.	D104
Connector Name	FRONT POWER WINDOW MOTOR RH
Connector Color	BROWN



Terminal No.	Color of Wire	Signal Name
1	G	-
2	L	-

Connector No.	D101
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
5	W/R	-
8	L/W	-
9	G/Y	-

Connector No.	D204
Connector Name	REAR POWER WINDOW MOTOR LH
Connector Color	BLACK




Terminal No.	Color of Wire	Signal Name
1	Y	-
2	L	-

Connector No.	D203
Connector Name	REAR POWER WINDOW SWITCH LH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	B	-
4	LG	-
5	R	-
6	Y	-
7	L	-
8	W	-

Connector No.	D201
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	W	-
7	LG	-
8	R	-
9	B	-

ABKIA0559GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# POWER WINDOW SYSTEM

## < WIRING DIAGRAM >

Connector No.	D304
Connector Name	REAR POWER WINDOW MOTOR RH
Connector Color	BLACK



Terminal No.	Color of Wire	Signal Name
1	Y	-
2	L	-

Connector No.	D303
Connector Name	REAR POWER WINDOW SWITCH RH
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
2	B	-
4	LG	-
5	R	-
6	Y	-
7	L	-
8	W	-

Connector No.	D301
Connector Name	WIRE TO WIRE
Connector Color	WHITE



Terminal No.	Color of Wire	Signal Name
6	W	-
7	LG	-
8	R	-
9	B	-

ABKIA1916GB



# NONE OF THE POWER WINDOWS CAN BE OPERATED USING ANY SWITCH

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

NONE OF THE POWER WINDOWS CAN BE OPERATED USING ANY SWITCH

### Diagnosis Procedure

INFOID:000000006255935

#### 1. CHECK BCM POWER SUPPLY AND GROUND CIRCUIT

Check BCM power supply and ground circuit.  
Refer to [PWC-9, "BCM : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2
- NO >> Repair or replace the malfunctioning parts.

#### 2. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

Check main power window switch.  
Refer to [PWC-13, "POWER WINDOW MAIN SWITCH : Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3
- NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-59, "Removal and Installation"](#).

#### 3. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH POWER SUPPLY AND GROUND CIRCUIT

Check power window switch main power supply and ground circuit.  
Refer to [PWC-10, "POWER WINDOW MAIN SWITCH : Component Function Check"](#).

Is the inspection result normal?

- YES >> Check intermittent incident. Refer to [GI-37, "Intermittent Incident"](#).
- NO >> Repair or replace the malfunctioning parts.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

---

## DRIVER SIDE POWER WINDOW ALONE DOES NOT OPERATE

### Diagnosis Procedure

INFOID:000000006255936

#### 1. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

---

Check main power window switch.

Refer to [PWC-13. "POWER WINDOW MAIN SWITCH : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-59. "Removal and Installation"](#).

#### 2. CHECK FRONT POWER WINDOW MOTOR LH

---

Check front power window motor LH.

Refer to [PWC-20. "DRIVER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-37. "Intermittent Incident"](#).

# FRONT PASSENGER SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

## FRONT PASSENGER SIDE POWER WINDOW ALONE DOES NOT OPERATE

### Diagnosis Procedure

INFOID:000000006255937

#### 1. CHECK POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH RH

Check power window and door lock/unlock switch RH.

Refer to [PWC-15, "FRONT POWER WINDOW SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning parts.

#### 2. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

Check main power window and door lock/unlock switch.

Refer to [PWC-13, "POWER WINDOW MAIN SWITCH : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3

NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-13, "POWER WINDOW MAIN SWITCH : Component Inspection"](#).

#### 3. CHECK FRONT POWER WINDOW MOTOR RH CIRCUIT

Check front power window motor RH circuit.

Refer to [PWC-21, "PASSENGER SIDE : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-37, "Intermittent Incident"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# REAR LH SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

---

## REAR LH SIDE POWER WINDOW ALONE DOES NOT OPERATE

### Diagnosis Procedure

INFOID:000000006255938

#### 1. CHECK REAR POWER WINDOW SWITCH LH

---

Check rear power window switch LH.

Refer to [PWC-16, "REAR POWER WINDOW SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning parts.

#### 2. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

---

Check main power window and door lock/unlock switch.

Refer to [PWC-13, "POWER WINDOW MAIN SWITCH : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3

NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-13, "POWER WINDOW MAIN SWITCH : Component Inspection"](#).

#### 3. CHECK REAR POWER WINDOW MOTOR LH

---

Check rear power window motor LH.

Refer to [PWC-23, "REAR LH : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-37, "Intermittent Incident"](#).

# REAR RH SIDE POWER WINDOW ALONE DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

## REAR RH SIDE POWER WINDOW ALONE DOES NOT OPERATE

### Diagnosis Procedure

INFOID:000000006255939

#### 1. CHECK REAR POWER WINDOW SWITCH RH

Check rear power window switch RH.

Refer to [PWC-16, "REAR POWER WINDOW SWITCH : Component Function Check"](#).

Is the inspection result normal?

YES >> GO TO 2

NO >> Repair or replace the malfunctioning parts.

#### 2. CHECK MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

Check main power window and door lock/unlock switch.

Refer to [PWC-13, "POWER WINDOW MAIN SWITCH : Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3

NO >> Replace main power window and door lock/unlock switch. Refer to [PWC-13, "POWER WINDOW MAIN SWITCH : Component Inspection"](#).

#### 3. CHECK REAR POWER WINDOW MOTOR RH

Check rear power window motor RH.

Refer to [PWC-24, "REAR RH : Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-37, "Intermittent Incident"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (DRIVER SIDE)

< SYMPTOM DIAGNOSIS >

---

## AUTO OPERATION DOES NOT OPERATE BUT MANUAL OPERATES NORMALLY (DRIVER SIDE)

### Diagnosis Procedure

INFOID:000000006255940

#### 1. REPLACE MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

---

Replace main power window and door lock/unlock switch and check operation. Refer to [PWC-59, "Removal and Installation"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-37, "Intermittent Incident"](#).

# POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

< SYMPTOM DIAGNOSIS >

## POWER WINDOW RETAINED POWER OPERATION DOES NOT OPERATE PROPERLY

### Diagnosis Procedure

INFOID:000000006255941

#### 1. CHECK FRONT DOOR SWITCH

Check front door switch.

Refer to [PWC-27. "Component Function Check"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-37. "Intermittent Incident"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# POWER WINDOW LOCK SWITCH DOES NOT FUNCTION

< SYMPTOM DIAGNOSIS >

---

## POWER WINDOW LOCK SWITCH DOES NOT FUNCTION

### Diagnosis Procedure

INFOID:000000006255942

#### 1. REPLACE MAIN POWER WINDOW AND DOOR LOCK/UNLOCK SWITCH

---

Replace main power window and door lock/unlock switch and check operation.  
Refer to [PWC-59. "Removal and Installation"](#).

Is the inspection result normal?

YES >> Inspection End.

NO >> Check intermittent incident. Refer to [GI-37. "Intermittent Incident"](#).



# PRECAUTIONS

< PRECAUTION >

## PRECAUTION

### PRECAUTIONS

#### Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006255943

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SR and SB section of this Service Manual.

#### **WARNING:**

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SR section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

#### **WARNING:**

- When working near the Airbag Diagnosis Sensor Unit or other Airbag System sensors with the Ignition ON or engine running, DO NOT use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the Ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### Precaution for Work

INFOID:000000006836375

- When removing or disassembling each component, be careful not to damage or deform it. If a component may be subject to interference, be sure to protect it with a shop cloth.
- When removing (disengaging) components with a screwdriver or similar tool, be sure to wrap the component with a shop cloth or vinyl tape to protect it.
- Protect the removed parts with a shop cloth and prevent them from being dropped.
- Replace a deformed or damaged clip.
- If a part is specified as a non-reusable part, always replace it with new one.
- Be sure to tighten bolts and nuts securely to the specified torque.
- After installation is complete, be sure to check that each part works properly.
- Follow the steps below to clean components.
  - Water soluble dirt: Dip a soft cloth into lukewarm water, and wring the water out of the cloth to wipe the dirty area.  
Then rub with a soft and dry cloth.
  - Oily dirt: Dip a soft cloth into lukewarm water with mild detergent (concentration: within 2 to 3%), and wipe the dirty area.  
Then dip a cloth into fresh water, and wring the water out of the cloth to wipe the detergent off. Then rub with a soft and dry cloth.
- Do not use organic solvent such as thinner, benzene, alcohol, or gasoline.
- For genuine leather seats, use a genuine leather seat cleaner.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC

# PREPARATION

< PREPARATION >

## PREPARATION


### PREPARATION

#### Special Service Tool

INFOID:000000006836376

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

Tool number (Kent-Moore No.) Tool name	Description
— ( J-46534 ) Trim tool set	For removing trim

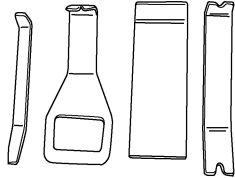

AWJIA0483ZZ

# POWER WINDOW MAIN SWITCH

< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION

### POWER WINDOW MAIN SWITCH

#### Removal and Installation

INFOID:000000006255944

#### REMOVAL

1. Using a suitable tool, release the metal clip and pawls, then lift the main power window and door lock/unlock switch (1) from the front door finisher LH.


□: Metal clip

○: Pawl

**CAUTION:**

**Wrap a cloth around suitable tool to protect components from damage.**

2. Disconnect the harness connectors, then remove the assembly from the door finisher.
3. Remove the three screws (A) from the main power window and door lock/unlock switch (1), then separate it from the finisher (2).

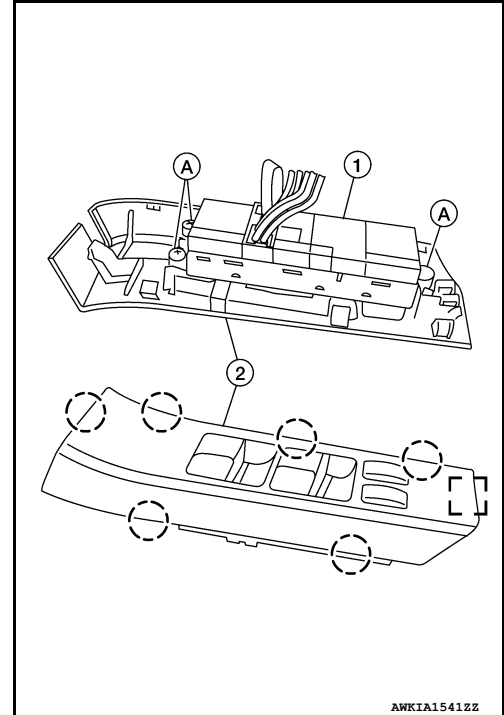

#### INSTALLATION

Installation is in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J

PWC

L  
M  
N  
O  
P

# FRONT POWER WINDOW SWITCH

< REMOVAL AND INSTALLATION >

## FRONT POWER WINDOW SWITCH

### Removal and Installation

INFOID:000000006255945

#### REMOVAL

1. Using a suitable tool, release the metal clip and pawls, then lift the front power window and door lock/unlock switch (1) from the front door finisher RH.


□: Metal clip

○: Pawl

#### **CAUTION:**

**Wrap a cloth around suitable tool to protect components from damage.**

2. Disconnect the harness connectors, then remove the assembly from the door finisher.
3. Release the four tabs (A), two on each side, then separate the front power window and door lock/unlock switch (1) from the finisher (2).

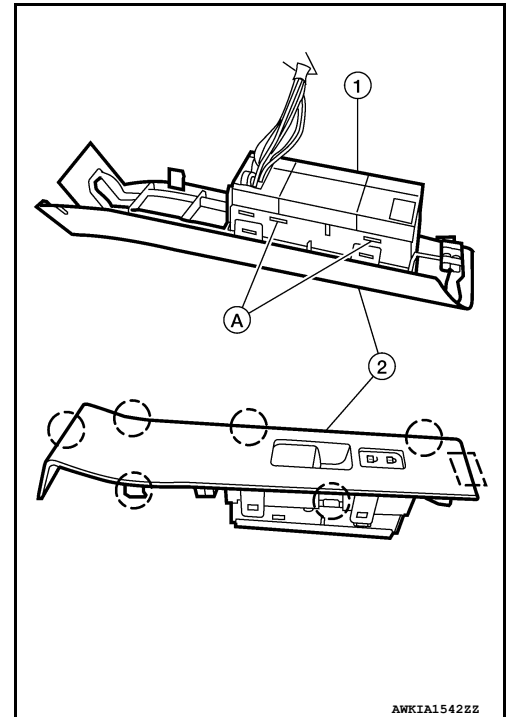

AWK1A1542ZZ

#### INSTALLATION

Installation is in the reverse order of removal.

# REAR POWER WINDOW SWITCH

< REMOVAL AND INSTALLATION >

## REAR POWER WINDOW SWITCH

### Removal and Installation - Rear Door Switch

INFOID:000000006255946

#### REMOVAL

1. Using a suitable tool, release the metal clip and pawls, then lift the rear power window switch and finisher (2) upward as an assembly from the rear door finisher.


○: Pawl

□: Metal clip

#### CAUTION:

**Wrap a cloth around suitable tool to protect components from damage.**

2. Disconnect the harness connectors, then remove the assembly from the door finisher.
3. Release the two tabs (A), one on either side, then separate the rear power window switch (1) from the switch finisher (2).

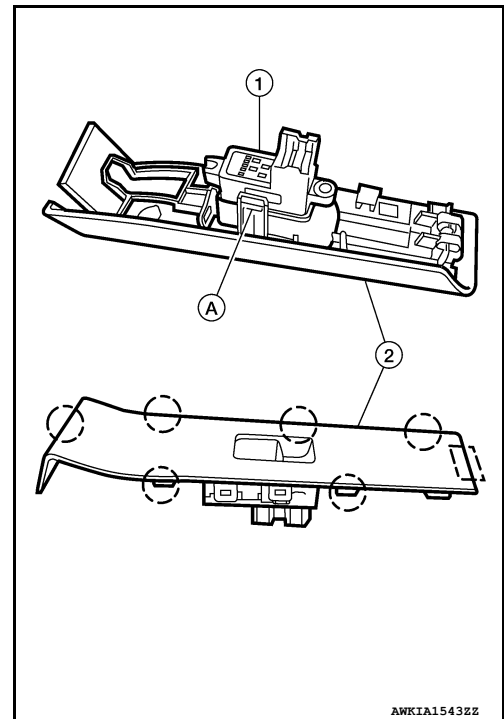

#### INSTALLATION

Installation is in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
L  
M  
N  
O  
P

PWC