



## GENUINE PARTS

### INSTALLATION INSTRUCTIONS

1. **DESCRIPTION:** Front Splash Guard Kit
2. **APPLICATION:** EX35
3. **PART NUMBER:** 999J2 5U003
4. **KIT CONTENTS:**

Item	QTY	Description	Part Number
A	1	Splash Guard – Front Right	---
B	1	Splash Guard – Front Left	---
C	8	Screw	14-51 00891
D	1	Installation Instructions <a href="#">Replacement Template</a>	999V2 AW000




A



B



C

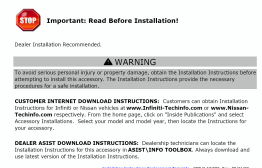

D


5. **TOOLS REQUIRED:**
  - clean rag
  - mild soap/water mixture
  - #2 phillips screwdriver
  - awl or punch
  - drill
  - 2mm (3/32") drill bit

6. **PRE-INSTALLATION NOTES:**
  - These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.

## INSTALLATION INSTRUCTIONS - Front Splash Guard Kit


### 7. INSTALLATION PROCEDURE:

Fig 1

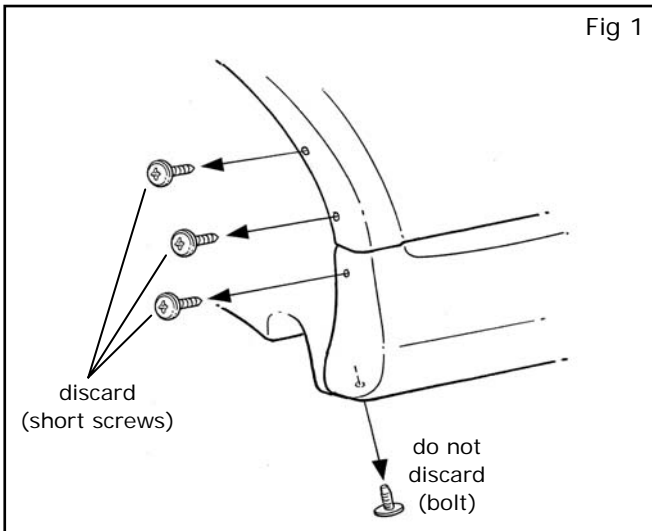


- 1) Remove existing fasteners.
  - a) Remove 1 underside bolt. **DO NOT DISCARD.**
  - b) Remove and discard 3 short (15mm) screws.
  - c) Clean installation surface.

Fig 2a

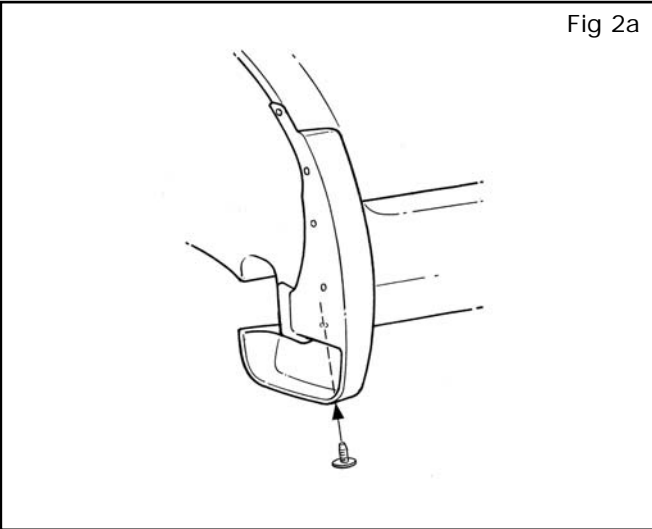

- 2) Install front splash guard.
  - a) Align splash guard to vehicle.
  - b) Push rearward on front of splash guard.
  - c) Install bolt through hole in tab.

Fig 2d

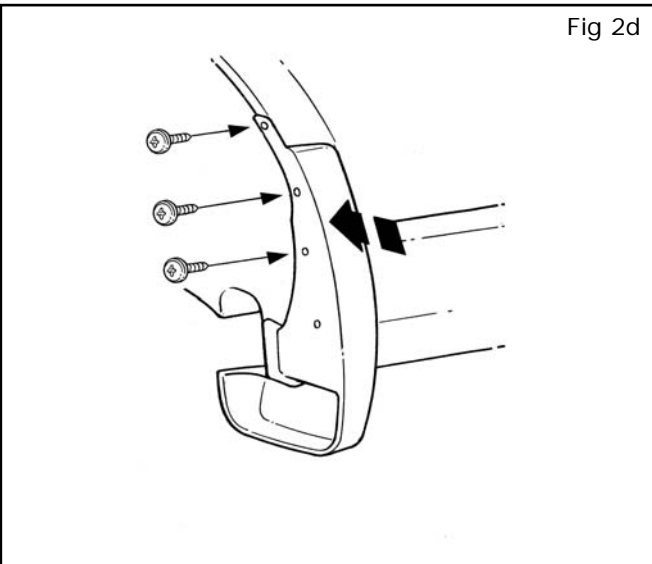


- d) Push inward and upward.
  - e) Install new lower screw.
  - f) Install new middle screw.
  - g) Install new upper screw.

#### NOTE:

**HOLD THE SPLASH GUARD TIGHT TO THE VEHICLE WHILE TIGHTENING THE SCREWS TO ENSURE NO GAP OCCURS BETWEEN FENDER AND SPLASH GUARD.**

## INSTALLATION INSTRUCTIONS - Front Splash Guard Kit

Fig 2h

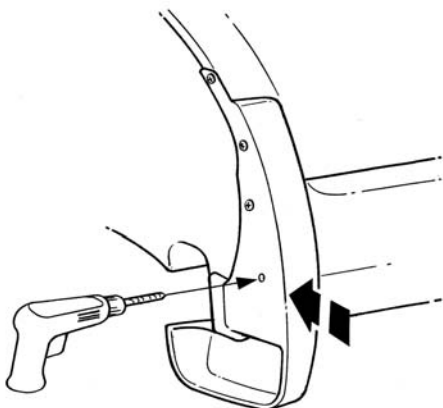


- h) Mark hole center with awl.
- i) Drill a 2mm (3/32") pilot hole.

**NOTE:**

**HOLD THE SPLASH GUARD TIGHT TO THE VEHICLE WHILE DRILLING AND INSTALLING SCREWS TO ENSURE NO GAP OCCURS BETWEEN FENDER AND SPLASH GUARD.**

Fig 2j

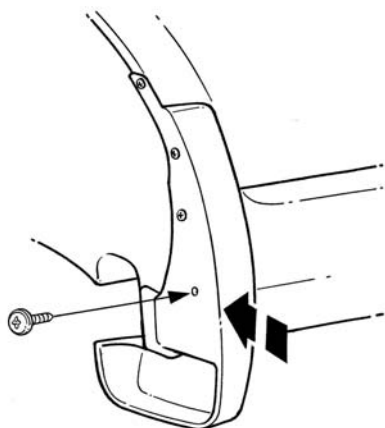

- j) Install new screw. **DO NOT OVERTIGHTEN.**