GENUINE PARTS



INSTALLATION INSTRUCTIONS

1. **DESCRIPTION**: Cargo Organizer


2. **APPLICATION**: EX35; Application with Cargo Tray (as is); Application without Cargo Tray requires

service kit # (see below)

3. PART NUMBER: EX35: 999C2 5U001BK, 999C2 5U000GY

4. KIT CONTENTS:

Item	QTY	Description	Service Kit #'s	
Α	1	Cargo Organizer		
	1	Hardware Kit	EX35: 999C2 5U002S1	Note: Service kit is required for vehicles without cargo tray
В	2	Attachment Brackets		
С	2	Attachment Fasteners		for vernicles without cargo tray
D	1	I/I Replacement Template		

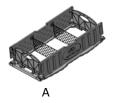







5. TOOLS REQUIRED:

No Tools Required

6. PRE-INSTALLATION CAUTIONS/NOTES:


- To maintain the luster of your organizer, clean with a cloth as required using standard automotive vinyl, leather and upholstery cleaners or soap and water.
- If a Tonneau Cover is equipped in the rear cargo area of the vehicle, make sure the Cargo Organizer is in the closed position when using the Tonneau Cover.

WARNING


- Your Cargo Organizer is designed to transport normal cargo contents. Flammable or dangerous materials should not be transported in you vehicle at any time. If any corrosive chemicalse are spilled on your organizer it should be cleaned as described ablove.
- When using this organizer, avoid sudden starts/stops or sharp turns as this may cause contents to come out of the organizer.


A CAUTION

- Ensure attachment brackets are securely fastened to the load floor and organizer
- Do not exceed the recommended load of 20 lbs in the organizer.
- If not being used, the dividers should be in the closed position.
- Remove brackets from load floor when organizer is not in place.
- DEALER Provide these installation instructions to the customer as reference for proper operation and care of this unit

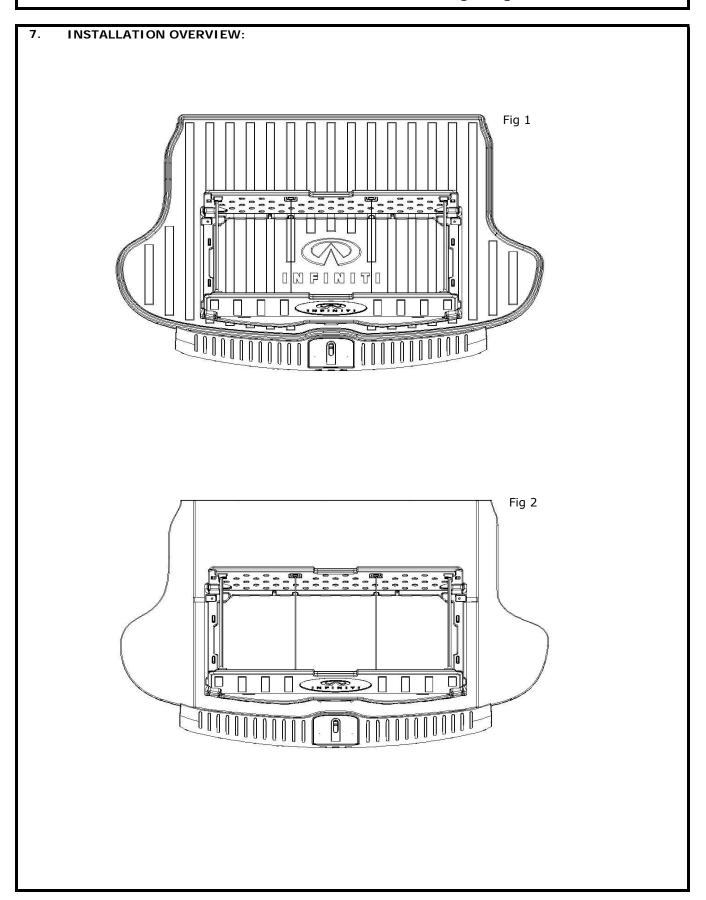

8. INSTALLATION PROCEDURE:

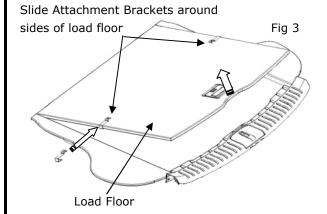

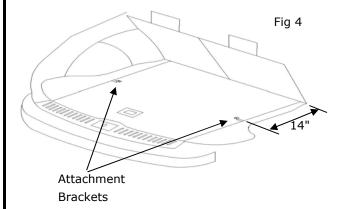


1) Installing the Attachment Brackets

a) Lift up the vehicle load floor high enough so that the brackets can be slid onto both sides of the load floor (see Fig 3)

NOTE:


For vehicles that are not equipped with the Cargo Tray a service kit is required. The kit contains a second set of brackets to be installed similar to 1a. Ensure that the brackets are spaced evenly (see Fig 5)

- b) Once the brackets have been attached to the Load floor, place the load floor back to the normal vehicle position.
- c) Position the brackets 14" from the forward edge of the load floor on both sides.

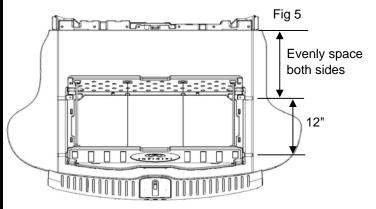


NOTE:


The Cargo Organizer (without tray) can be moved to any position, just be sure to measure and place the Attachment Brackets an equal distance from the Load Floor edge (see Fig 5).

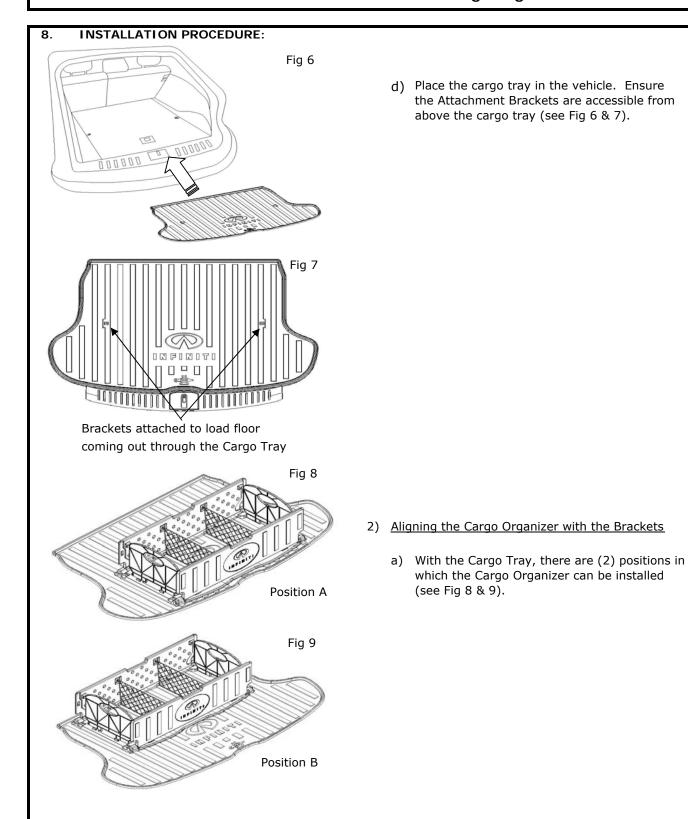

8. INSTALLATION PROCEDURE:

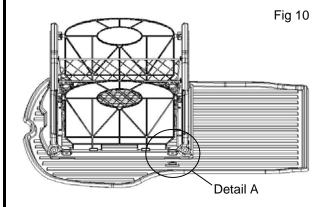


b) Choose either Position A or B (Position A shown in Fig 10) and place the Cargo Organizer over the Attachment Brackets.

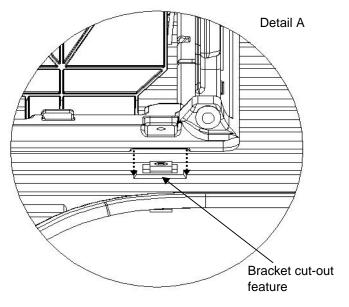


 c) The Cargo Tray will help to align the Cargo Organizer over the brackets.
Ensure that the bracket cut-out feature seats snug to the underside of the Cargo Organizer.

8. INSTALLATION PROCEDURE:

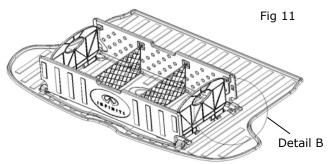

- 3) Fastening the Organizer to the Attachment Brackets
 - a) Starting with the passenger side, insert and turn the fastener clockwise until the fastener engages with the bracket. Next, insert the fastener into the driver side and turn it until it engages with the second bracket.

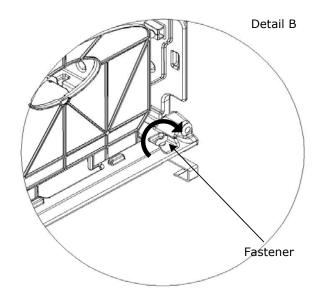

- b) Once the fasteners on both sides are engaged with the brackets begin to tighten each side down evenly until the organizer is securely fastened.
- c) To remove, simply turn the fasteners counterclockwise and remove the Cargo Organizer.

NOTE:

Always check to make sure the fasteners are holding the Cargo Organizer firm to the Load Floor.