


# Fuse Arrangement,

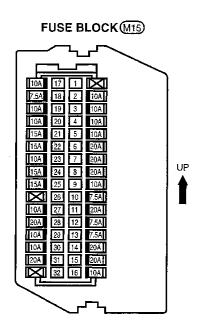


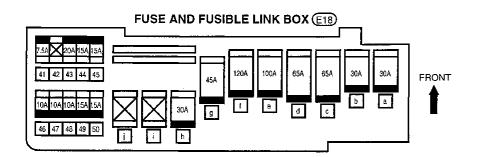


## **CONTROL UNITS**

#### **SMART ENTRANCE CONTROL UNIT**
















View from harness side

AIRBAG DIAGNOSIS SENSOR UNIT




View from harness side

### **ABS CONTROL UNIT**




View from harness side

#### A/T CONTROL UNIT




View from harness side


### **ECM (ECCS CONTROL MODULE)**



View from harness side

# **SUPER MULTIPLE JUNCTION (SMJ)**

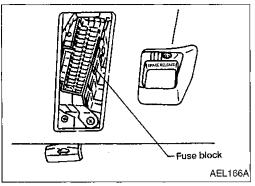

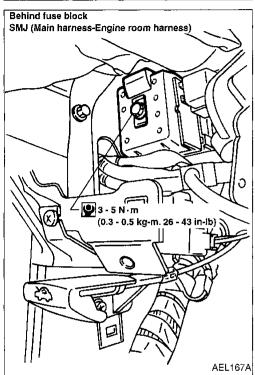

### **INSTALLATION**

To install SMJ, tighten bolts until orange "fulltight" mark appears and then retighten to specified torque as required.


**⊕**: 3 - 5 N·m

(0.3 - 0.5 kg-m, 26 - 43 in-lb)


**CAUTION:** 

Do not overtighten bolts, otherwise, they may be damaged.

# **Terminal Arrangement**

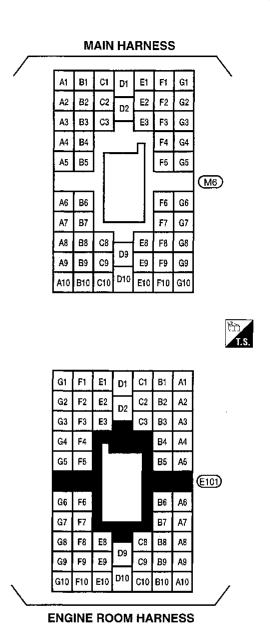

## Location

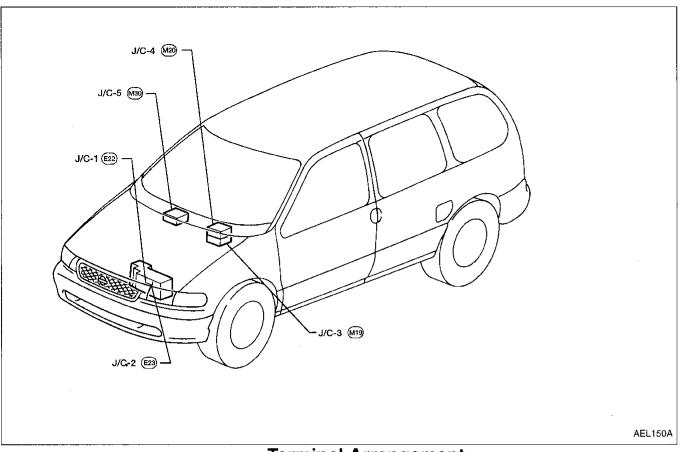

# **Terminal Arrangement**

