



Clutch Pedal

REMOVAL & INSTALLATION

1. Pull out the cotter pin and remove the master cylinder pushrod clevis pin. Pull the pedal from the clevis.
2. Remove the fulcrum pin mounting nut and slide out the pin (be sure to catch the clutch assist spring when it falls off the pin). Remove the pedal from the pedal bracket being careful not to damage the clutch or ASCD switches.

To install:

3. Position the clutch pedal in the pedal bracket and then slide the fulcrum pin through the pedal and the spring. Tighten the mounting nut to 12–16 ft. lbs. (16–22 Nm).
4. Reconnect the master cylinder pushrod and install a new cotter pin into the clevis pin.
5. Check pedal height, free-play and switch adjustments.

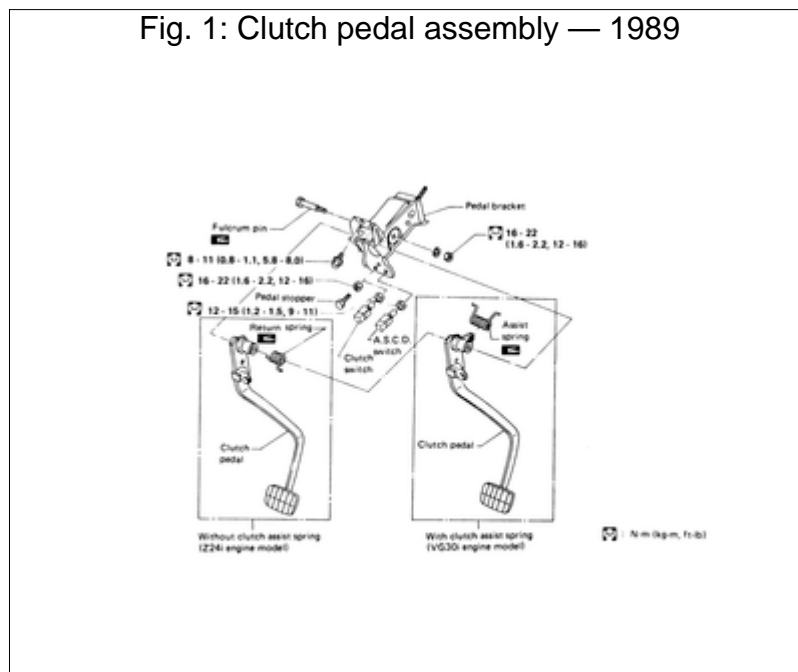


Fig. 2: Clutch pedal assembly — 1990 and later

