# ACCELERATOR CONTROL SYSTEM o

# CONTENTS

PRECAUTIONS	2
Precautions for Battery Service	
ACCELERATOR CONTROL SYSTEM	
Removal and Installation	3
REMOVAL	3
INSTALLATION	3
INSPECTION AFTER INSTALLATION	4

SERVICE DATA AND SPECIFICATIONS (SDS) 5 Tightening Torque 5	F
	G
	Н

M

D

Е

J

Κ

L

# PRECAUTIONS

**Precautions for Battery Service** 

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

ABS00DCX

## ACCELERATOR CONTROL SYSTEM

PFP:18005

ABS0029K

А

Н

J


Κ

L

Μ

# ACCELERATOR CONTROL SYSTEM

Removal and Installation

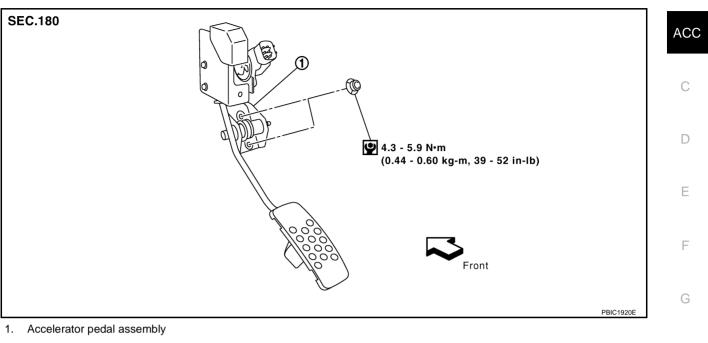

### REMOVAL

- 1. Disconnect accelerator pedal position sensor harness connector.
- 2. Loosen nuts, and remove accelerator pedal assembly.
  - **CAUTION:**

•	Do not disassemble accelerator pedal assembly. Do not remove accelerator pedal position sen-
	sor from accelerator pedal assembly.

- Avoid impact from dropping etc. during handling.
- Be careful to keep accelerator pedal assembly away from water.

### INSTALLATION

Install in the reverse order of removal.

### **INSPECTION AFTER INSTALLATION**

- Check that accelerator pedal moves smoothly within the whole operation range.
- Check that accelerator pedal securely returns to the original position.
- For the electrical inspection of the accelerator pedal assembly, refer to <u>EC-561, "DTC P2138 APP SEN-SOR"</u>.

### **CAUTION:**

When harness connector of accelerator pedal position sensor is disconnected, perform "Accelerator Pedal Released Position Learning". Refer to <u>EC-42</u>, "<u>Accelerator Pedal Released Position Learning</u>".

# SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)	PFP:0003	) A
ightening Torque	<sub>ABS0026</sub> Unit: N⋅m (kg-m, in-lb	BS0029L
Accelerator pedal assembly	4.3 - 5.9 (0.44 - 0.60, 39 - 52)	ACC
		С
		D
		E
		F
		G
		Н
		I
		J
		K
		L
		Μ