

A  
B  
C

# SECTION **PB**

## PARKING BRAKE SYSTEM

### CONTENTS

<p><b>PREPARATION</b> ..... 2</p> <p><b>PREPARATION</b> ..... 2              Commercial Service Tool .....2</p> <p><b>PERIODIC MAINTENANCE</b> ..... 3</p> <p><b>PARKING BRAKE SYSTEM</b> ..... 3              Inspection and Adjustment .....3</p> <p><b>PARKING BRAKE SHOE</b> ..... 5              Adjustment .....5</p> <p><b>REMOVAL AND INSTALLATION</b> ..... 6</p> <p><b>PARKING BRAKE CONTROL</b> ..... 6              Exploded View .....6</p>	<p>Removal and Installation ..... 6              Adjustment ..... 6</p> <p><b>PARKING BRAKE SHOE</b> ..... 7              Exploded View ..... 7              Removal and Installation ..... 7              Inspection and Adjustment ..... 8</p> <p><b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....10</p> <p><b>SERVICE DATA AND SPECIFICATIONS (SDS)</b> .....10              Parking Drum Brake .....10              Parking Brake Control .....10</p>
--	---

D  
E  
**PB**  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

# PREPARATION


< PREPARATION >

## PREPARATION

### PREPARATION

Commercial Service Tool

INFOID:000000006355444

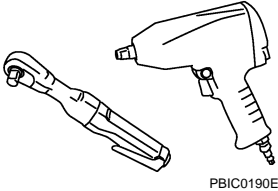Tool name	Description
<p data-bbox="162 514 267 546">Power tool</p>  <p data-bbox="868 630 938 646">PBIC0190E</p>	<p data-bbox="1063 514 1315 546">Loosening bolts and nuts</p>

# PARKING BRAKE SYSTEM

< PERIODIC MAINTENANCE >

## PERIODIC MAINTENANCE

### PARKING BRAKE SYSTEM

#### Inspection and Adjustment

INFOID:000000006355445

#### INSPECTION

##### Lever Stroke

- Operate the parking brake lever with a force of 196 N (20 kg, 44 lb). Check that the lever stroke is within the specified number of notches. (Check it by listening to the clicks of the ratchet.)

##### Standard

**Number of notches** : Refer to [PB-10, "Parking Brake Control"](#).

- When parking brake warning lamp turns ON, check that the lever stroke is within the specified number of notches. (Check it by listening to the clicks of the ratchet.)

##### Standard


**Number of notches** : Refer to [PB-10, "Parking Brake Control"](#).

##### Inspect Components


- Check each component for installation condition such as looseness.
- Check the device assembly for bend, damage and cracks. Replace if necessary.
- Check the cables and equalizer for wear, damage and cracks. Replace if necessary.
- Check the parking brake switch, and replace it if necessary. Refer to [BRC-72, "Component Inspection"](#).

#### ADJUSTMENT

1. Remove rear tires with power tool.
2. Fix the disc rotor using wheel nuts.
3. Remove the cup holder assembly. Refer to [IP-25, "Exploded View"](#).
4. Release the parking brake lever by turning the adjusting nut (1) with a deep socket wrench and loosening the cable.

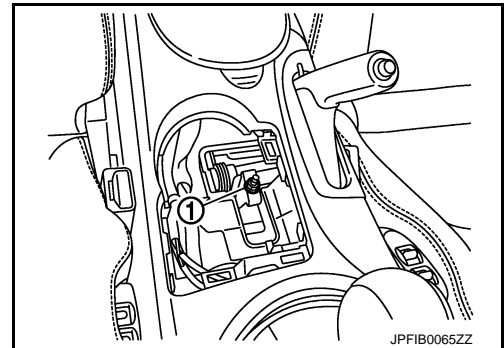

5. Remove the adjusting hole plug from the disc rotor. Turn the adjuster (1) in the direction (A) as shown in the figure using a suitable tool until the disc rotor is locked.
6. Turn back the adjuster 5 or 6 notches from the locked position.
7. Rotate the disc rotor to check that there is no drag. Install the adjusting hole plug.
8. Adjust the cable with the following procedure.
  - a. Operate the parking brake lever with a force of 294 N (30 kg, 66 lb) for 10 strokes or more.
  - b. Adjust the parking brake lever stroke by turning the adjusting nut with a deep socket wrench.

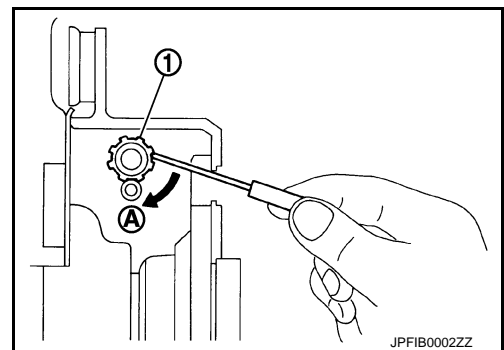

#### CAUTION:

**Never reuse the adjusting nut if the nut is removed.**

- c. Operate the parking brake lever with a force of 196 N (20 kg, 44lb). Check that the lever stroke is within the specified number of notches. (Check it by listening to the clicks of the ratchet.)

## PARKING BRAKE SYSTEM

< PERIODIC MAINTENANCE >

---

### Standard

**Number of notches** : Refer to [PB-10, "Parking Brake Control"](#).

- d. Rotate the disc rotor with the parking brake lever released and check that there is no drag. Refer to [PB-8, "Inspection and Adjustment"](#).

# PARKING BRAKE SHOE

< PERIODIC MAINTENANCE >

## PARKING BRAKE SHOE

### Adjustment

INFOID:000000006355446

1. Adjust parking brake lever stroke. Refer to [PB-3, "Inspection and Adjustment"](#).
2. Perform parking brake break-in (drag on) operation by driving vehicle under the following conditions:
  - Drive forward
  - Vehicle speed: Approx. 40 km/h (25 MPH) set (constant and forward)
  - Parking brake operating force: 199.5 N (20.3 kg, 44.8 lb) set contact
  - Time: Approx. 15 sec.

**CAUTION:**

**To prevent lining from getting too hot, allow a cool off period of approximately 5 minutes after every break-in operation.**

3. After the break-in procedure, check parking brake lever stroke of parking brake.

**CAUTION:**

**If it is out of the specification, adjust again. Refer to [PB-3, "Inspection and Adjustment"](#).**

A  
B  
C  
D  
E  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

PB

# PARKING BRAKE CONTROL


< REMOVAL AND INSTALLATION >

## REMOVAL AND INSTALLATION


### PARKING BRAKE CONTROL

Exploded View

INFOID:000000006355447

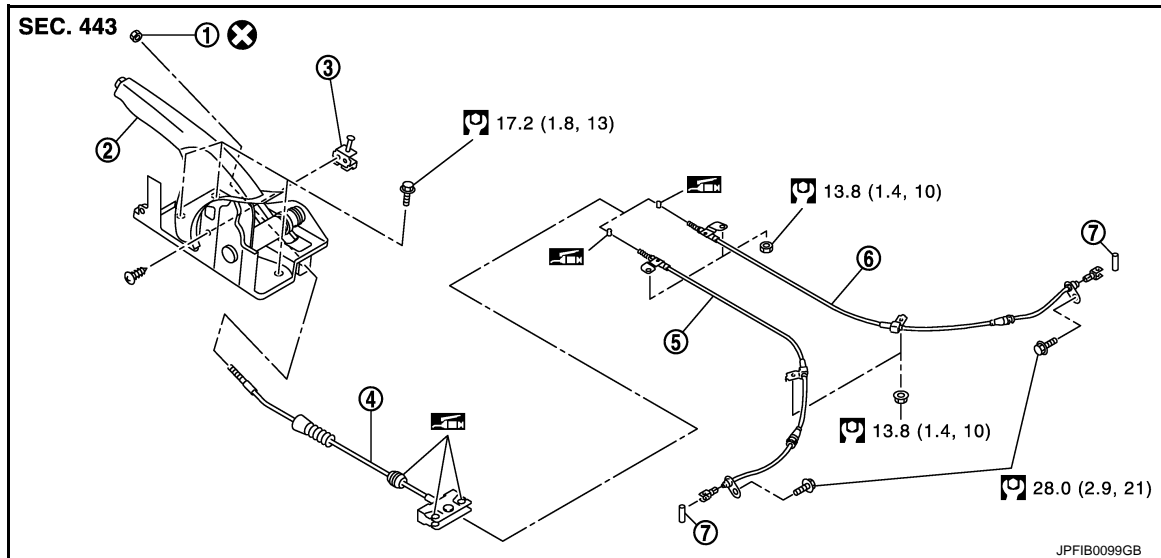

- |                  |                    |                         |
|------------------|--------------------|-------------------------|
| 1. Adjusting nut | 2. Device assembly | 3. Parking brake switch |
| 4. Front cable   | 5. Rear cable (LH) | 6. Rear cable (RH)      |
| 7. Pin           |                    |                         |

 Apply multi-purpose grease.

Refer to [GI-4. "Components"](#) for symbols not described on the above.

## Removal and Installation

INFOID:000000006355448

### REMOVAL

1. Remove rear tires with power tool.
2. Remove the center console. Refer to [IP-25. "Exploded View"](#).
3. Disconnect the parking brake switch harness connector.
4. Remove adjusting nut and loosen front cable.
5. Remove the device assembly.
6. Remove the center muffler. Refer to [EX-5. "Exploded View"](#).
7. Separate front cable from rear cable, and remove front cable.
8. Remove parking brake shoe, and remove rear cable from toggle lever. Refer to [PB-7. "Exploded View"](#).
9. Remove rear cable mounting bolts and nuts, pull out rear cable from vehicle.

### INSTALLATION

Note the following, install in the reverse order of the removal.

- Never reuse adjusting nut.

### Adjustment

INFOID:000000006355449

### ADJUSTMENT AFTER INSTALLATION

Adjust the parking brake lever stroke. Refer to [PB-3. "Inspection and Adjustment"](#).


# PARKING BRAKE SHOE

< REMOVAL AND INSTALLATION >


## PARKING BRAKE SHOE

Exploded View

INFOID:000000006355450

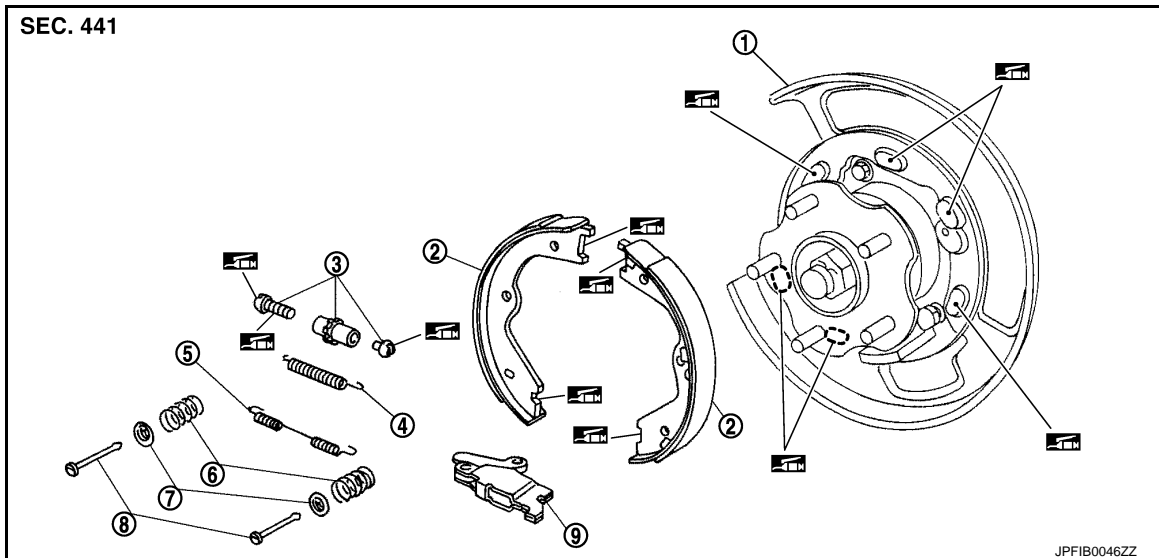

- |                    |                    |                       |
|--------------------|--------------------|-----------------------|
| 1. Back plate      | 2. Brake shoe      | 3. Adjuster           |
| 4. Adjuster spring | 5. Return spring   | 6. Anti-rattle spring |
| 7. Retainer        | 8. Anti-rattle pin | 9. Toggle lever       |

: Apply PBC (Poly Butyl Cuprysil) grease or silicone-based grease.

## Removal and Installation

INFOID:000000006355451

### REMOVAL

#### **WARNING:**

**Clean any dust from the brake shoes and brake plates with a vacuum dust collector. Never blow with compressed air.**

1. Remove rear tires with power tool.
2. Remove disc rotor.
  - 1 Piston type: refer to [BR-57. "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Removal and Installation"](#).
  - 2 Piston type: refer to [BR-61. "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Removal and Installation"](#).

#### **CAUTION:**

**Parking brake completely in the released position.**

3. If disc rotor cannot be removed, remove as follows:
  - a. Fix the disc rotor with wheel nuts and remove the adjusting hole plug.
  - b. Using suitable tool, rotate adjuster (1) in direction (B) to retract and loosen brake shoe.
4. Remove anti-rattle pins, retainers, anti-rattle springs, and return spring, adjuster spring.


#### **CAUTION:**

**Never drop the removed parts.**

5. Remove parking brake shoes, adjuster assembly, and toggle lever.

#### **CAUTION:**

- The parking brake shoes for the front wheels are made of different materials from those for the rear wheels. Never misidentify them when removing.
- Never drop the removed parts.

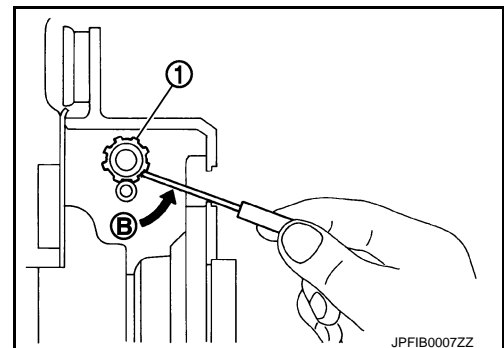

# PARKING BRAKE SHOE

## < REMOVAL AND INSTALLATION >

6. For the removal of back plate, refer to [RAX-7, "Exploded View"](#).

### INSTALLATION

Note the following, install in the reverse order of removal.

- Apply PBC (Poly Butyl Cuprysil) grease or silicone-based grease to the back plate and brake shoe.
- The parking brake shoes for the front wheels are made of different materials from those for the rear wheels. Never misidentify them when removing and replacing.
- Assemble adjusters so that threaded part is expanded when rotating it in the direction shown by arrow.


A: For RH brake

B: For LH brake

↔: Vehicle front

←: Adjuster expands

- Shorten adjuster by rotating it.
- When disassembling apply PBC (Poly Butyl Cuprysil) grease or silicone-based grease to threads.
- Check brake shoe sliding surface and drum inner surface for grease. Wipe it off if it adhere on the surfaces.

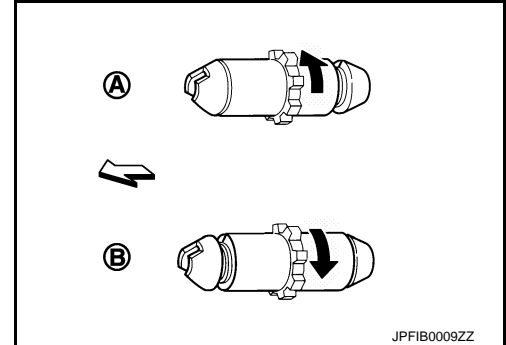

INFOID:000000006355452

### Inspection and Adjustment


#### INSPECTION AFTER REMOVAL

Lining Thickness Inspection

- Check thickness (A) of lining.

**Limit**

**A** : Refer to [PB-10, "Parking Drum Brake"](#).

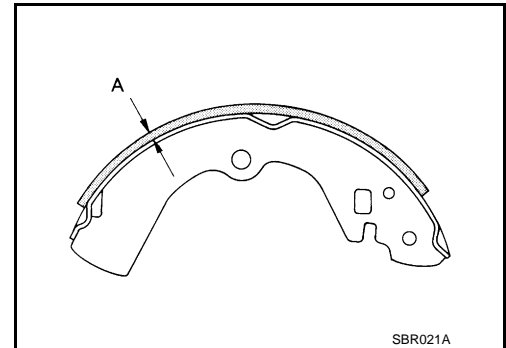


Drum Inner Diameter Inspection

- Check inner diameter (B) of drum.

**Limit**

**B** : Refer to [PB-10, "Parking Drum Brake"](#).

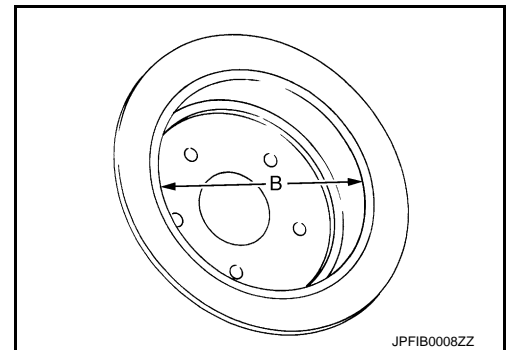

Other Inspections

Check the following items, and replace the parts if necessary.

- Lining for excessive wear, damage, and peeling.
- Brake shoe sliding surface for excessive wear and damage.
- Anti-rattle pin and retainer for excessive wear, damage and rust.
- Adjuster spring, return spring and anti-rattle spring for settling, excessive wear, damage, and rust.
- Adjuster for smoothness.
- Toggle lever for excessive wear, damage and rust.
- Visually check inside of the drum for excessive wear, cracks, and damage with a pair of vernier calipers.

#### ADJUSTMENT AFTER INSTALLATION



## PARKING BRAKE SHOE

### < REMOVAL AND INSTALLATION >

---

1. Adjust the parking brake lever stroke. Refer to [PB-3. "Inspection and Adjustment"](#).
2. Check a drag of the parking brake.

**CAUTION:**

If any drag is found, inspect the rear disc brake.

- 1 Piston type: refer to [BR-60. "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Inspection"](#).
  - 2 Piston type: refer to [BR-64. "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Inspection"](#).
3. Adjust the parking brake shoe. Refer to [PB-3. "Inspection and Adjustment"](#).

A

B

C

D

E

PB

G

H

I

J

K

L

M

N

O

P

## SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

## SERVICE DATA AND SPECIFICATIONS (SDS)

### SERVICE DATA AND SPECIFICATIONS (SDS)

#### Parking Drum Brake

INFOID:000000006355453

Unit: mm (in)

Item		Limit
Brake lining	Wear thickness	1.5 (0.059)
Drum (disc)	Wear limit of inner diameter	173 (6.81)

#### Parking Brake Control

INFOID:000000006355454

Item	Standard
Number of notches [under force of 196 N (20 kg, 44 lb)]	6 – 7 notches
Number of notches when parking brake warning lamp turns ON	1 notch