

**SECTION AV**

**AUDIO, VISUAL & NAVIGATION SYSTEM**

**CONTENTS**

<b>BASE AUDIO</b>	Reference Value .....	21
<b>BASIC INSPECTION</b> .....	<b>WIRING DIAGRAM</b> .....	<b>23</b>
<b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....	<b>BASE AUDIO</b> .....	<b>23</b>
Work Flow .....	Wiring Diagram .....	23
<b>SYSTEM DESCRIPTION</b> .....	<b>SYMPTOM DIAGNOSIS</b> .....	<b>28</b>
<b>AUDIO SYSTEM</b> .....	<b>AUDIO SYSTEM</b> .....	<b>28</b>
System Diagram .....	Symptom Table .....	28
System Description .....	<b>NORMAL OPERATING CONDITION</b> .....	<b>29</b>
Component Parts Location .....	Description .....	29
Component Description .....	<b>PRECAUTION</b> .....	<b>30</b>
<b>DIAGNOSIS SYSTEM (AUDIO UNIT)</b> .....	<b>PRECAUTIONS</b> .....	<b>30</b>
Diagnosis Description .....	<b>EXCEPT FOR MEXICO</b> .....	<b>30</b>
<b>DTC/CIRCUIT DIAGNOSIS</b> .....	EXCEPT FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	30
<b>POWER SUPPLY AND GROUND CIRCUIT</b> .....	<b>FOR MEXICO</b> .....	<b>30</b>
<b>AUDIO UNIT</b> .....	FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	30
AUDIO UNIT : Diagnosis Procedure .....	Precaution for Battery Service .....	31
<b>STEERING SWITCH SIGNAL A CIRCUIT</b> .....	<b>PREPARATION</b> .....	<b>32</b>
Description .....	<b>PREPARATION</b> .....	<b>32</b>
Diagnosis Procedure .....	Commercial Service Tools .....	32
Component Inspection .....	<b>REMOVAL AND INSTALLATION</b> .....	<b>33</b>
<b>STEERING SWITCH SIGNAL B CIRCUIT</b> .....	<b>AUDIO UNIT</b> .....	<b>33</b>
Description .....	Exploded View .....	33
Diagnosis Procedure .....	Removal and Installation .....	33
Component Inspection .....	<b>FRONT DOOR SPEAKER</b> .....	<b>34</b>
<b>STEERING SWITCH SIGNAL GND CIRCUIT</b> .....	Exploded View .....	34
Description .....	Removal and Installation .....	34
Diagnosis Procedure .....		
Component Inspection .....		
<b>ECU DIAGNOSIS INFORMATION</b> .....		
<b>AUDIO UNIT</b> .....		

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

<b>TWEETER</b> .....	<b>35</b>	<b>TEL ADAPTER UNIT</b> .....	<b>58</b>
Exploded View .....	35	TEL ADAPTER UNIT : Diagnosis Procedure .....	58
Removal and Installation .....	35	<b>STEERING SWITCH SIGNAL A CIRCUIT</b>	
<b>STEERING SWITCH</b> .....	<b>36</b>	<b>(STEERING SWITCH TO TEL ADAPTER</b>	
Exploded View .....	36	<b>UNIT)</b> .....	<b>60</b>
Removal and Installation .....	36	Description .....	60
<b>ANTENNA AMP.</b> .....	<b>37</b>	Diagnosis Procedure .....	60
Exploded View .....	37	Component Inspection .....	61
Removal and Installation .....	37	<b>STEERING SWITCH SIGNAL B CIRCUIT</b>	
<b>ANTENNA BASE</b> .....	<b>38</b>	<b>(STEERING SWITCH TO TEL ADAPTER</b>	
Exploded View .....	38	<b>UNIT)</b> .....	<b>62</b>
Removal and Installation .....	38	Description .....	62
<b>ANTENNA FEEDER</b> .....	<b>39</b>	Diagnosis Procedure .....	62
<b>COUPE</b> .....	<b>39</b>	Component Inspection .....	63
COUPE : Feeder Layout .....	39	<b>STEERING SWITCH SIGNAL GND CIRCUIT</b>	
<b>ROADSTER</b> .....	<b>39</b>	<b>(STEERING SWITCH TO TEL ADAPTER</b>	
ROADSTER : Feeder Layout .....	40	<b>UNIT)</b> .....	<b>64</b>
<b>BOSE AUDIO WITHOUT NAVIGATION</b>		Description .....	64
<b>BASIC INSPECTION</b> .....	<b>41</b>	Diagnosis Procedure .....	64
<b>DIAGNOSIS AND REPAIR WORKFLOW</b> .....	<b>41</b>	Component Inspection .....	65
Work Flow .....	41	<b>STEERING SWITCH SIGNAL A CIRCUIT</b>	
<b>SYSTEM DESCRIPTION</b> .....	<b>43</b>	<b>(TEL ADAPTER UNIT TO AUDIO UNIT)</b> .....	<b>66</b>
<b>AUDIO SYSTEM</b> .....	<b>43</b>	Description .....	66
System Diagram .....	43	Diagnosis Procedure .....	66
System Description .....	44	Component Inspection .....	67
Component Parts Location .....	45	<b>STEERING SWITCH SIGNAL B CIRCUIT</b>	
Component Description .....	46	<b>(TEL ADAPTER UNIT TO AUDIO UNIT)</b> .....	<b>68</b>
<b>HANDS-FREE PHONE SYSTEM</b> .....	<b>48</b>	Description .....	68
System Diagram .....	48	Diagnosis Procedure .....	68
System Description .....	49	Component Inspection .....	69
Component Parts Location .....	50	<b>STEERING SWITCH SIGNAL GND CIRCUIT</b>	
Component Description .....	51	<b>(TEL ADAPTER UNIT TO AUDIO UNIT)</b> .....	<b>70</b>
<b>DIAGNOSIS SYSTEM (AUDIO UNIT)</b> .....	<b>53</b>	Description .....	70
Diagnosis Description .....	53	Diagnosis Procedure .....	70
<b>DIAGNOSIS SYSTEM (TEL ADAPTER UNIT)</b> ..	<b>55</b>	Component Inspection .....	70
Diagnosis Description .....	55	<b>STEERING SWITCH SIGNAL A CIRCUIT</b> .....	<b>72</b>
<b>DTC/CIRCUIT DIAGNOSIS</b> .....	<b>57</b>	Description .....	72
<b>POWER SUPPLY AND GROUND CIRCUIT</b> ....	<b>57</b>	Diagnosis Procedure .....	72
<b>AUDIO UNIT</b> .....	<b>57</b>	Component Inspection .....	73
AUDIO UNIT : Diagnosis Procedure .....	57	<b>STEERING SWITCH SIGNAL B CIRCUIT</b> .....	<b>74</b>
<b>BOSE AMP.</b> .....	<b>57</b>	Description .....	74
BOSE AMP. : Diagnosis Procedure .....	57	Diagnosis Procedure .....	74
<b>SATELLITE RADIO TUNER</b> .....	<b>58</b>	Component Inspection .....	75
SATELLITE RADIO TUNER : Diagnosis Proce-		<b>STEERING SWITCH SIGNAL GND CIRCUIT</b> ..	<b>76</b>
dure .....	58	Description .....	76
		Diagnosis Procedure .....	76
		Component Inspection .....	77
		<b>COMMUNICATION SIGNAL CIRCUIT</b> .....	<b>78</b>
		Description .....	78
		Diagnosis Procedure .....	78

<b>REQUEST SIGNAL CIRCUIT (SAT TO AUDIO)</b> .....	<b>80</b>	FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	118	A
Description .....	80	Precaution for Battery Service .....	119	B
Diagnosis Procedure .....	80	Precaution for Trouble Diagnosis .....	119	B
<b>BOSE AMP. ON SIGNAL CIRCUIT</b> .....	<b>82</b>	Precaution for Harness Repair .....	119	B
Description .....	82	<b>PREPARATION</b> .....	<b>120</b>	C
Diagnosis Procedure .....	82	<b>PREPARATION</b> .....	<b>120</b>	C
<b>MICROPHONE SIGNAL CIRCUIT</b> .....	<b>83</b>	Commercial Service Tools .....	120	C
Description .....	83	<b>REMOVAL AND INSTALLATION</b> .....	<b>121</b>	D
Diagnosis Procedure .....	83	<b>AUDIO UNIT</b> .....	<b>121</b>	E
<b>TELEPHONE ON SIGNAL CIRCUIT</b> .....	<b>85</b>	Exploded View .....	121	E
Description .....	85	Removal and Installation .....	121	E
Diagnosis Procedure .....	85	<b>FRONT DOOR SPEAKER</b> .....	<b>122</b>	F
<b>ECU DIAGNOSIS INFORMATION</b> .....	<b>86</b>	Exploded View .....	122	F
<b>AUDIO UNIT</b> .....	<b>86</b>	Removal and Installation .....	122	F
Reference Value .....	86	<b>TWEETER</b> .....	<b>123</b>	G
<b>BOSE AMP.</b> .....	<b>90</b>	Exploded View .....	123	G
<b>COUPE</b> .....	<b>90</b>	Removal and Installation .....	123	G
COUPE : Reference Value .....	90	<b>REAR SPEAKER</b> .....	<b>124</b>	H
<b>ROADSTER</b> .....	<b>92</b>	Exploded View .....	124	H
ROADSTER : Reference Value .....	92	Removal and Installation .....	124	H
<b>SATELLITE RADIO TUNER</b> .....	<b>95</b>	<b>WOOFER</b> .....	<b>125</b>	I
Reference Value .....	95	Exploded View .....	125	I
<b>TEL ADAPTER UNIT</b> .....	<b>97</b>	Removal and Installation .....	125	J
Reference Value .....	97	<b>REAR WOOFER</b> .....	<b>126</b>	J
<b>WIRING DIAGRAM</b> .....	<b>100</b>	Removal and Installation .....	126	K
<b>BOSE AUDIO WITHOUT NAVIGATION</b> .....	<b>100</b>	<b>BOSE AMP.</b> .....	<b>127</b>	K
Wiring Diagram - BOSE AUDIO WITHOUT NAVIGATION SYSTEM - .....	100	<b>COUPE</b> .....	<b>127</b>	L
<b>SYMPTOM DIAGNOSIS</b> .....	<b>114</b>	COUPE : Exploded View .....	127	L
<b>AUDIO SYSTEM SYMPTOMS</b> .....	<b>114</b>	COUPE : Removal and Installation .....	127	L
Symptom Table .....	114	<b>ROADSTER</b> .....	<b>127</b>	M
<b>HANS-FREE PHONE SYMPTOMS</b> .....	<b>115</b>	ROADSTER : Removal and Installation .....	127	M
Symptom Table .....	115	<b>ANTENNA AMP.</b> .....	<b>128</b>	AV
<b>NORMAL OPERATING CONDITION</b> .....	<b>117</b>	Exploded View .....	128	AV
Description .....	117	Removal and Installation .....	128	AV
<b>PRECAUTION</b> .....	<b>118</b>	<b>ANTENNA BASE</b> .....	<b>129</b>	O
<b>PRECAUTIONS</b> .....	<b>118</b>	Exploded View .....	129	O
<b>EXCEPT FOR MEXICO</b> .....	<b>118</b>	Removal and Installation .....	129	O
EXCEPT FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	118	<b>SATELLITE RADIO TUNER</b> .....	<b>130</b>	P
<b>FOR MEXICO</b> .....	<b>118</b>	Exploded View .....	130	P
		Removal and Installation .....	130	P
		<b>SATELLITE RADIO ANTENNA</b> .....	<b>131</b>	
		Exploded View .....	131	
		Removal and Installation .....	131	
		<b>STEERING SWITCH</b> .....	<b>132</b>	

Exploded View .....	132	<b>AV CONTROL UNIT .....</b>	<b>167</b>
Removal and Installation .....	132	Reference Value .....	167
<b>TEL ADAPTER UNIT .....</b>	<b>133</b>	Fail-Safe .....	172
Exploded View .....	133	DTC Index .....	173
Removal and Installation .....	133	<b>FRONT DISPLAY UNIT .....</b>	<b>174</b>
<b>MICROPHONE .....</b>	<b>134</b>	Reference Value .....	174
Exploded View .....	134	<b>BOSE AMP. ....</b>	<b>176</b>
Removal and Installation .....	134	<b>COUPE .....</b>	<b>176</b>
<b>ANTENNA FEEDER .....</b>	<b>135</b>	COUPE : Reference Value .....	176
<b>COUPE .....</b>	<b>135</b>	<b>ROADSTER .....</b>	<b>178</b>
COUPE : Feeder Layout .....	135	ROADSTER : Reference Value .....	178
<b>ROADSTER .....</b>	<b>135</b>	<b>WIRING DIAGRAM .....</b>	<b>181</b>
ROADSTER : Feeder Layout .....	136	<b>BOSE AUDIO WITH NAVIGATION SYSTEM..</b>	<b>181</b>
<b>BOSE AUDIO WITH NAVIGATION</b>		Wiring Diagram .....	181
<b>PRECAUTION .....</b>	<b>137</b>	<b>BASIC INSPECTION .....</b>	<b>200</b>
<b>PRECAUTIONS .....</b>	<b>137</b>	<b>DIAGNOSIS AND REPAIR WORK FLOW .....</b>	<b>200</b>
<b>EXCEPT FOR MEXICO .....</b>	<b>137</b>	Work Flow .....	200
EXCEPT FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	137	<b>INSPECTION AND ADJUSTMENT .....</b>	<b>202</b>
<b>FOR MEXICO .....</b>	<b>137</b>	<b>ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT .....</b>	<b>202</b>
FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" .....	137	ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description .....	202
Cautions in Removing Battery Terminal and AV Control Unit (Models with AV Control Unit) .....	138	ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement ..	202
Precaution for Battery Service .....	138	<b>CONFIGURATION (AV CONTROL UNIT) .....</b>	<b>202</b>
Precaution for Trouble Diagnosis .....	138	CONFIGURATION (AV CONTROL UNIT) : Description .....	202
Precaution for Harness Repair .....	138	CONFIGURATION (AV CONTROL UNIT) : Special Repair Requirement .....	203
<b>PREPARATION .....</b>	<b>139</b>	CONFIGURATION (AV CONTROL UNIT) : Configuration List .....	203
<b>PREPARATION .....</b>	<b>139</b>	<b>DTC/CIRCUIT DIAGNOSIS .....</b>	<b>204</b>
Commercial Service Tools .....	139	<b>U1000 CAN COMM CIRCUIT .....</b>	<b>204</b>
<b>SYSTEM DESCRIPTION .....</b>	<b>140</b>	Description .....	204
<b>COMPONENT PARTS .....</b>	<b>140</b>	DTC Logic .....	204
Component Parts Location .....	140	Diagnosis Procedure .....	204
Component Description .....	142	<b>U1010 CONTROL UNIT (CAN) .....</b>	<b>205</b>
<b>SYSTEM .....</b>	<b>144</b>	DTC Logic .....	205
<b>MULTI AV SYSTEM .....</b>	<b>144</b>	<b>U1200 AV CONTROL UNIT .....</b>	<b>206</b>
MULTI AV SYSTEM : System Diagram .....	144	DTC Logic .....	206
MULTI AV SYSTEM : System Description .....	145	<b>U1201 AV CONTROL UNIT .....</b>	<b>207</b>
MULTI AV SYSTEM : Fail-Safe .....	151	DTC Logic .....	207
<b>DIAGNOSIS SYSTEM (AV CONTROL UNIT). ..</b>	<b>152</b>	<b>U1202 AV CONTROL UNIT .....</b>	<b>208</b>
Description .....	152	DTC Logic .....	208
On Board Diagnosis Function .....	152	<b>U1204 AV CONTROL UNIT .....</b>	<b>209</b>
CONSULT-III Function (MULTI AV) .....	163		
<b>ECU DIAGNOSIS INFORMATION .....</b>	<b>167</b>		

DTC Logic .....	209	DTC Logic .....	226	
Diagnosis Procedure .....	209	Diagnosis Procedure .....	226	A
<b>U1205 AV CONTROL UNIT .....</b>	<b>210</b>	<b>U122E AV CONTROL UNIT .....</b>	<b>227</b>	
DTC Logic .....	210	DTC Logic .....	227	B
Diagnosis Procedure .....	210			
<b>U1206 AV CONTROL UNIT .....</b>	<b>211</b>	<b>U1232 STEERING ANGLE SENSOR .....</b>	<b>228</b>	
DTC Logic .....	211	DTC Logic .....	228	C
Diagnosis Procedure .....	211	Diagnosis Procedure .....	228	
<b>U1207 AV CONTROL UNIT .....</b>	<b>212</b>	<b>U1243 DISPLAY UNIT .....</b>	<b>229</b>	
DTC Logic .....	212	DTC Logic .....	229	D
Diagnosis Procedure .....	212	Diagnosis Procedure .....	229	
<b>U1216 AV CONTROL UNIT .....</b>	<b>213</b>	<b>U1244 GPS ANTENNA .....</b>	<b>231</b>	
DTC Logic .....	213	DTC Logic .....	231	E
		Diagnosis Procedure .....	231	
<b>U1217 AV CONTROL UNIT .....</b>	<b>214</b>	<b>U1258 SATELLITE RADIO ANTENNA .....</b>	<b>232</b>	
DTC Logic .....	214	DTC Logic .....	232	F
		Diagnosis Procedure .....	232	
<b>U1218 AV CONTROL UNIT .....</b>	<b>215</b>	<b>U1263 USB .....</b>	<b>233</b>	
DTC Logic .....	215	DTC Logic .....	233	G
Diagnosis Procedure .....	215	Diagnosis Procedure .....	233	
<b>U1219 AV CONTROL UNIT .....</b>	<b>216</b>	<b>U1264 ANTENNA AMP. ....</b>	<b>234</b>	
DTC Logic .....	216	DTC Logic .....	234	H
Diagnosis Procedure .....	216			
<b>U121A AV CONTROL UNIT .....</b>	<b>217</b>	<b>COUPE .....</b>	<b>234</b>	
DTC Logic .....	217	COUPE : Diagnosis Procedure .....	234	I
Diagnosis Procedure .....	217			
<b>U121B AV CONTROL UNIT .....</b>	<b>218</b>	<b>ROADSTER .....</b>	<b>234</b>	
DTC Logic .....	218	ROADSTER : Diagnosis Procedure .....	234	J
Diagnosis Procedure .....	218			
<b>U121C AV CONTROL UNIT .....</b>	<b>219</b>	<b>U1265 BOSE AMP. ....</b>	<b>236</b>	
DTC Logic .....	219	DTC Logic .....	236	K
Diagnosis Procedure .....	219	Diagnosis Procedure .....	236	
<b>U121D AV CONTROL UNIT .....</b>	<b>220</b>	<b>U1300 AV COMM CIRCUIT .....</b>	<b>237</b>	
DTC Logic .....	220	Description .....	237	L
Diagnosis Procedure .....	220			
<b>U121E AV CONTROL UNIT .....</b>	<b>221</b>	<b>U1310 AV CONTROL UNIT .....</b>	<b>238</b>	
DTC Logic .....	221	DTC Logic .....	238	M
Diagnosis Procedure .....	221			
<b>U1225 AV CONTROL UNIT .....</b>	<b>222</b>	<b>POWER SUPPLY AND GROUND CIRCUIT ..</b>	<b>239</b>	
DTC Logic .....	222			
		<b>AV CONTROL UNIT .....</b>	<b>239</b>	<b>AV</b>
<b>U1227 AV CONTROL UNIT .....</b>	<b>223</b>	AV CONTROL UNIT : Diagnosis Procedure .....	239	
DTC Logic .....	223			
Diagnosis Procedure .....	223	<b>FRONT DISPLAY UNIT .....</b>	<b>239</b>	
<b>U1228 AV CONTROL UNIT .....</b>	<b>224</b>	FRONT DISPLAY UNIT : Diagnosis Procedure ...	239	O
DTC Logic .....	224			
<b>U1229 AV CONTROL UNIT .....</b>	<b>225</b>	<b>BOSE AMP. ....</b>	<b>240</b>	
DTC Logic .....	225	BOSE AMP. : Diagnosis Procedure .....	240	P
<b>U122A AV CONTROL UNIT .....</b>	<b>226</b>	<b>RGB DIGITAL IMAGE SIGNAL CIRCUIT .....</b>	<b>241</b>	
		Description .....	241	
		Diagnosis Procedure .....	241	
		<b>COMPOSITE IMAGE SIGNAL CIRCUIT .....</b>	<b>242</b>	
		Description .....	242	
		Diagnosis Procedure .....	242	

<b>AUX IMAGE SIGNAL CIRCUIT</b> .....	<b>243</b>	Exploded View .....	273
Description .....	243	Removal and Installation .....	273
Diagnosis Procedure .....	243		
<b>DISK EJECT SIGNAL CIRCUIT</b> .....	<b>244</b>	<b>REAR WOOFER</b> .....	<b>274</b>
Description .....	244	Removal and Installation .....	274
Diagnosis Procedure .....	244		
<b>MICROPHONE SIGNAL CIRCUIT</b> .....	<b>245</b>	<b>BOSE AMP.</b> .....	<b>275</b>
Description .....	245		
Diagnosis Procedure .....	245	<b>COUPE</b> .....	<b>275</b>
		COUPE : Exploded View .....	275
		COUPE : Removal and Installation .....	275
<b>CAMERA IMAGE SIGNAL CIRCUIT</b> .....	<b>247</b>	<b>ROADSTER</b> .....	<b>275</b>
Description .....	247	ROADSTER : Removal and Installation .....	275
Diagnosis Procedure .....	247		
<b>STEERING SWITCH SIGNAL A CIRCUIT</b> .....	<b>249</b>	<b>ANTENNA AMP.</b> .....	<b>277</b>
Description .....	249	Exploded View .....	277
Diagnosis Procedure .....	249	Removal and Installation .....	277
Component Inspection .....	249		
<b>STEERING SWITCH SIGNAL B CIRCUIT</b> .....	<b>251</b>	<b>ANTENNA BASE</b> .....	<b>278</b>
Description .....	251	Exploded View .....	278
Diagnosis Procedure .....	251	Removal and Installation .....	278
Component Inspection .....	251		
<b>STEERING SWITCH GROUND CIRCUIT</b> .....	<b>253</b>	<b>MULTIFUNCTION SWITCH</b> .....	<b>279</b>
Description .....	253	Exploded View .....	279
Diagnosis Procedure .....	253	Removal and Installation .....	279
Component Inspection .....	253		
<b>SYMPTOM DIAGNOSIS</b> .....	<b>255</b>	<b>PRESET SWITCH</b> .....	<b>280</b>
<b>MULTI AV SYSTEM SYMPTOMS</b> .....	<b>255</b>	Exploded View .....	280
Symptom Table .....	255	Removal and Installation .....	280
<b>NORMAL OPERATING CONDITION</b> .....	<b>260</b>	<b>STEERING SWITCH</b> .....	<b>281</b>
Description .....	260	Exploded View .....	281
		Removal and Installation .....	281
<b>REMOVAL AND INSTALLATION</b> .....	<b>267</b>	<b>USB CONNECTOR</b> .....	<b>282</b>
<b>AV CONTROL UNIT</b> .....	<b>267</b>	Removal and Installation .....	282
Exploded View .....	267	<b>AUXILIARY INPUT JACKS</b> .....	<b>283</b>
Removal and Installation .....	267	Exploded View .....	283
<b>FRONT DISPLAY UNIT</b> .....	<b>269</b>	Removal and Installation .....	283
Exploded View .....	269	<b>MICROPHONE</b> .....	<b>284</b>
Removal and Installation .....	269	Exploded View .....	284
<b>FRONT DOOR SPEAKER</b> .....	<b>270</b>	Removal and Installation .....	284
Exploded View .....	270	<b>GPS ANTENNA</b> .....	<b>285</b>
Removal and Installation .....	270	Feeder Layout .....	285
<b>TWEETER</b> .....	<b>271</b>	Removal and Installation .....	286
Exploded View .....	271	<b>SATELLITE RADIO ANTENNA</b> .....	<b>288</b>
Removal and Installation .....	271	Exploded View .....	288
<b>REAR SPEAKER</b> .....	<b>272</b>	Removal and Installation .....	288
Exploded View .....	272	<b>REAR VIEW CAMERA</b> .....	<b>289</b>
Removal and Installation .....	272	Removal and Installation .....	289
<b>WOOFER</b> .....	<b>273</b>	Adjustment .....	289
		<b>STEERING ANGLE SENSOR</b> .....	<b>290</b>
		Removal and Installation .....	290
		<b>ANTENNA FEEDER</b> .....	<b>291</b>

---

<b>COUPE</b> .....	<b>291</b>	<b>ROADSTER</b> .....	<b>291</b>
COUPE : Feeder Layout .....	291	ROADSTER : Feeder Layout .....	292

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

AV


**BASIC INSPECTION**

## DIAGNOSIS AND REPAIR WORKFLOW

## Work Flow

INFOID:000000006709023

## OVERALL SEQUENCE

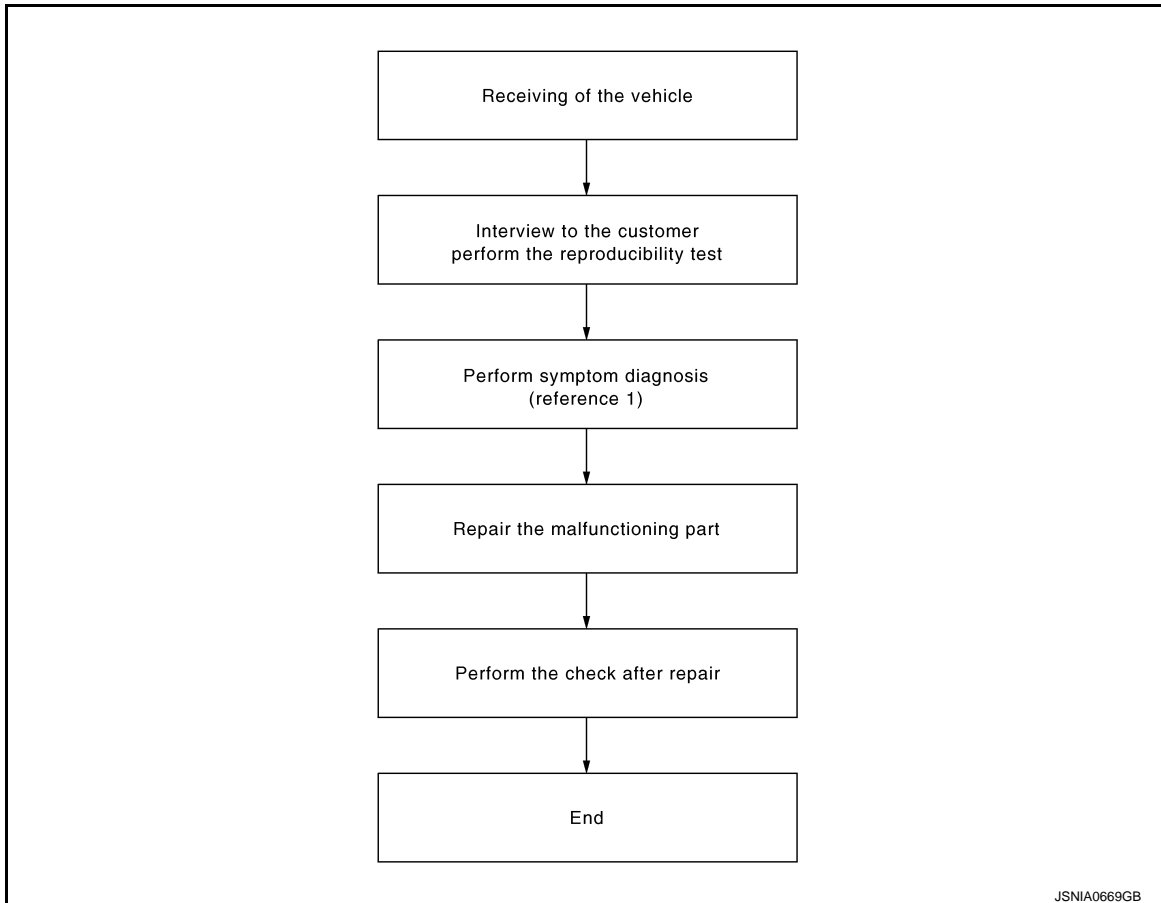Reference 1 ... Refer to [AV-28, "Symptom Table"](#).

## DETAILED FLOW

**1.CHECK SYMPTOM**

Check the malfunction symptoms by performing the following items.

- Interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred).
- Check the symptom.

&gt;&gt; GO TO 2.

**2.PERFORM DIAGNOSIS BY SYMPTOM**Perform the relevant diagnosis referring to the diagnosis chart by symptom. Refer to [AV-28, "Symptom Table"](#).

&gt;&gt; GO TO 3.

**3.REPAIR OR REPLACE MALFUNCTIONING PARTS**

Repair or replace the malfunctioning parts.

&gt;&gt; GO TO 4.



# DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[BASE AUDIO]

## 4.FINAL CHECK

Perform the operation to check that the malfunction symptom is solved or any other symptoms are present.

Is there any symptom?

YES >> GO TO 2.

NO >> INSPECTION END

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P


## SYSTEM DESCRIPTION

### AUDIO SYSTEM


#### System Diagram

INFOID:000000006709024

#### COUPE MODELS

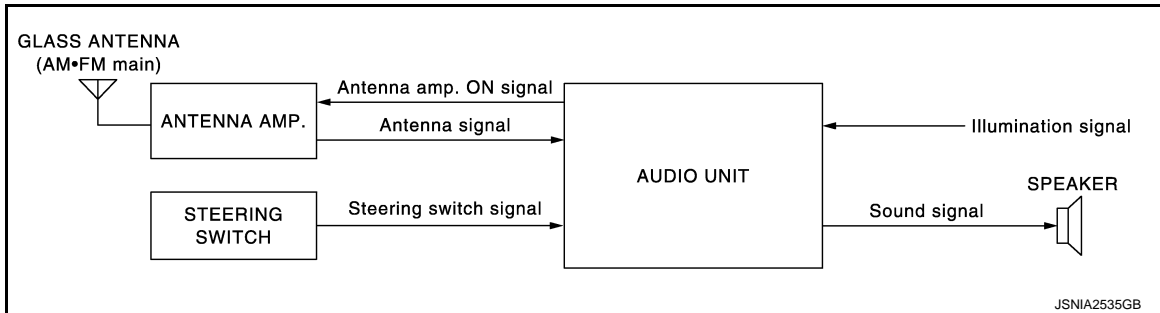

#### ROADSTER MODELS

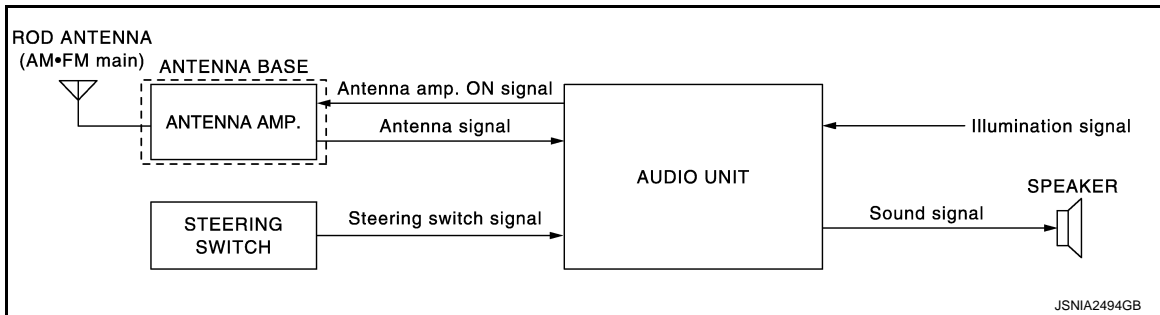

#### System Description

INFOID:000000006709025

### AUDIO SYSTEM

Audio functions

AM/FM radio
CD

- Radio signal are received by glass antenna, next it is amplified by antenna amp., and finally it is input to audio unit. (coupe models)
- Radio signal are received by rod antenna, next it is amplified by antenna amp., and finally it is input to audio unit. (roadster models)
- Audio unit outputs the audio signal to each speaker.

# AUDIO SYSTEM


< SYSTEM DESCRIPTION >

[BASE AUDIO]

## Component Parts Location


INFOID:000000006709026

### COUPE MODELS

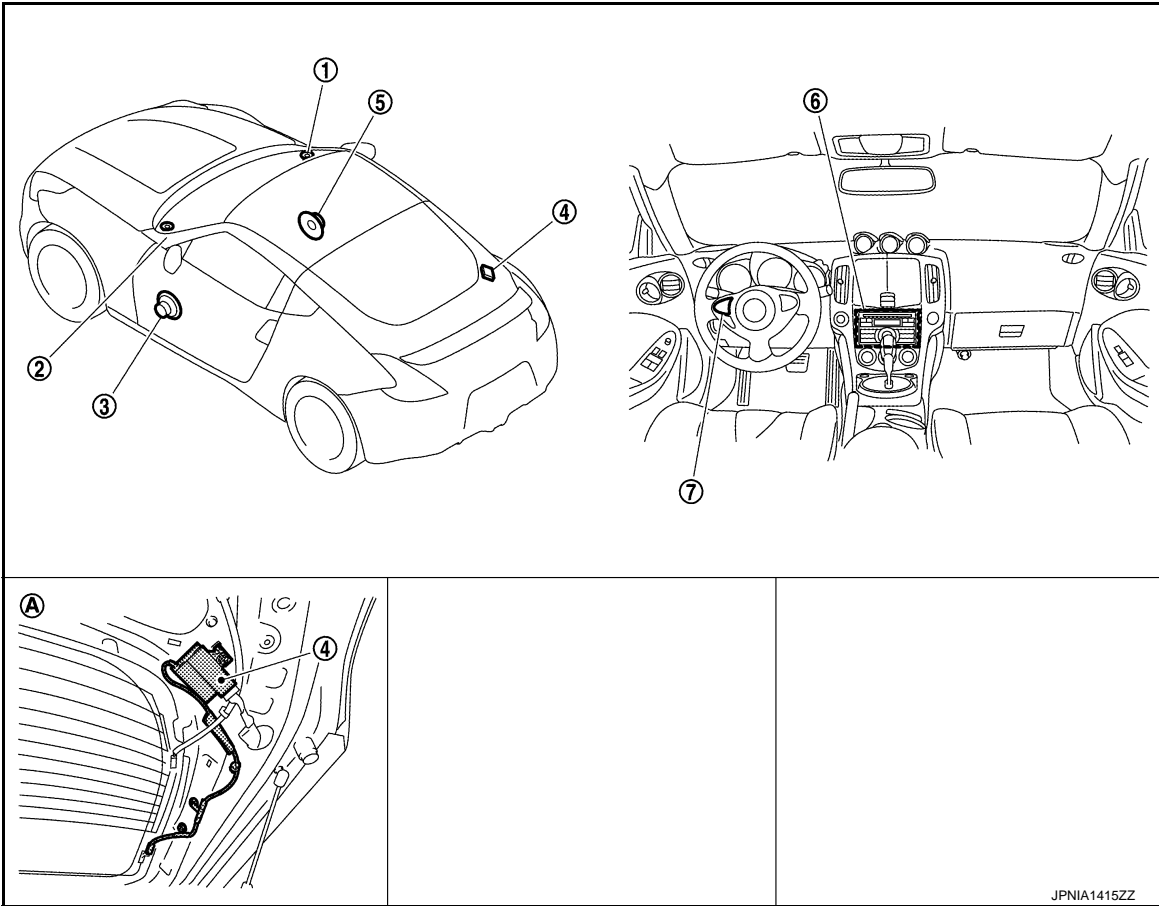

- 1. Tweeter RH
- 2. Tweeter LH
- 3. Front door speaker LH
- 4. Antenna amp.
- 5. Front door speaker RH
- 6. Audio unit
- 7. Steering switch
- A. Back door side RH

### ROADSTER MODELS

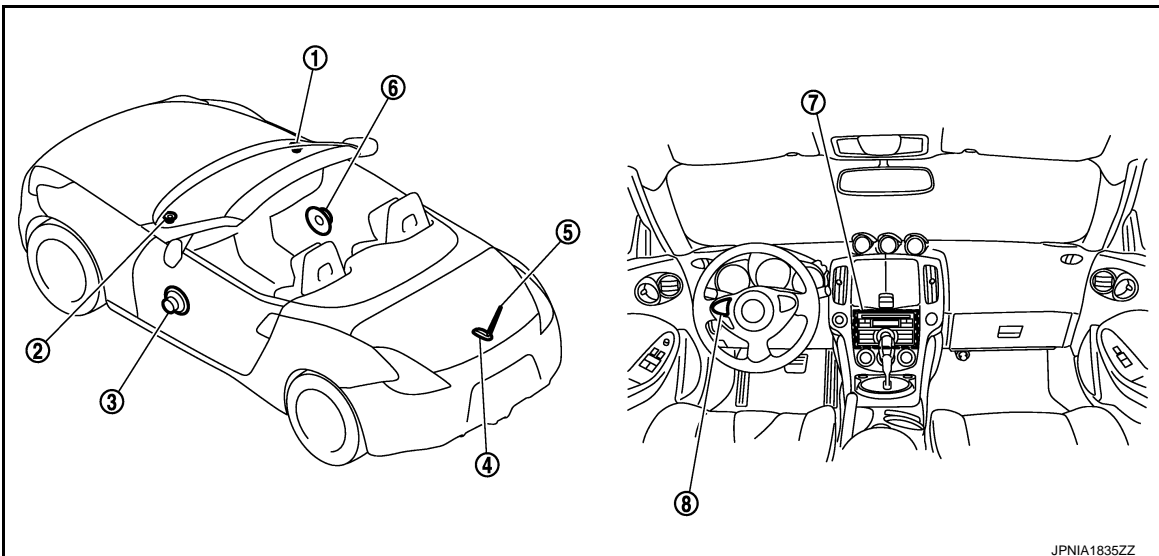

- 1. Tweeter RH
- 2. Tweeter LH
- 3. Front door speaker LH

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

# AUDIO SYSTEM

< SYSTEM DESCRIPTION >

[BASE AUDIO]

- |                 |                    |                          |
|-----------------|--------------------|--------------------------|
| 4. Antenna base | 5. Rod antenna     | 6. Front door speaker RH |
| 7. Audio unit   | 8. Steering switch |                          |

## Component Description

INFOID:000000006709027

Part name	Description
Audio unit	Controls audio system functions.
Front door speaker	<ul style="list-style-type: none"><li>• Outputs sound signal from audio unit.</li><li>• Outputs high, mid and low range sounds.</li></ul>
Tweeter	<ul style="list-style-type: none"><li>• Outputs sound signal from audio unit.</li><li>• Outputs high range sounds.</li></ul>
Antenna amp. (coupe models)	<ul style="list-style-type: none"><li>• Radio signal received by glass antenna is amplified and transmitted to audio unit.</li><li>• Power (antenna amp. ON signal) is supplied from audio unit.</li></ul>
Antenna base (roadster models)	<ul style="list-style-type: none"><li>• An antenna base integrated with radio antenna amp. is adopted.</li><li>• Radio signal received by rod antenna is amplified and transmitted to audio unit.</li><li>• Power (antenna amp. ON signal) is supplied from audio unit.</li></ul>
Steering switch	<ul style="list-style-type: none"><li>• Each audio operation can be operated.</li><li>• Steering switch signal (operation signal) is output to audio unit.</li></ul>

## DIAGNOSIS SYSTEM (AUDIO UNIT)

### Diagnosis Description


INFOID:000000006709028

Self-diagnosis mode can check the following items.

- Audio unit software versions


### OPERATION PROCEDURE

1. Turn ignition switch to the ON position.
2. Turn the audio unit off.
3. While pressing the "MENU", "1", "5", "PWR" button, the self-diagnosis mode is started. When the self-diagnosis mode is started, a short beep will be heard.

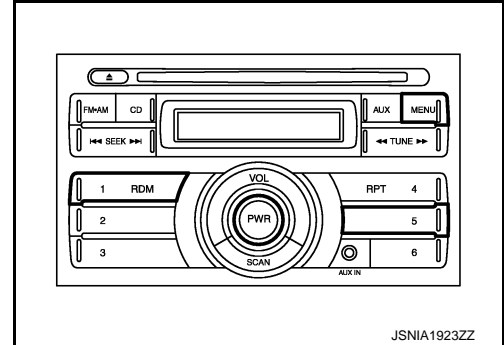

### Software Version Check

1. Press the "PWR" switch to enter version diagnostics. "Audio software version is displayed.
2. Press the "PWR" switch again to display the CD changer version is displayed. When not connect it, "FF"

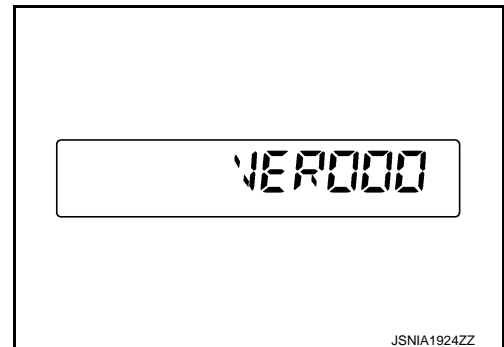

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV

O  
P

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BASE AUDIO]

## DTC/CIRCUIT DIAGNOSIS

### POWER SUPPLY AND GROUND CIRCUIT AUDIO UNIT

#### AUDIO UNIT : Diagnosis Procedure

INFOID:000000006709029

#### 1.CHECK FUSE

Check that the following fuses of the audio unit are not blown.

Power source	Fuse No.
Battery	34
Ignition switch ACC or ON	19

#### Is inspection result OK?

YES >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

#### 2.CHECK AUDIO UNIT POWER SUPPLY CIRCUIT

Check voltage between the audio unit and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Voltage
Battery power supply	M80	19	OFF	Battery voltage
ACC power supply		7	ACC	

#### Is inspection result OK?

YES >> INSPECTION END

NO >> Check harness between audio unit and fuse.

# STEERING SWITCH SIGNAL A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BASE AUDIO]

## STEERING SWITCH SIGNAL A CIRCUIT

### Description

INFOID:000000006709030

Transmits the steering switch signal to audio unit.

### Diagnosis Procedure

INFOID:000000006709031

#### 1. CHECK STEERING SWITCH SIGNAL A CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect audio unit connector and spiral cable connector.
3. Check continuity between audio unit harness connector and spiral cable harness connector.

Audio unit		Spiral cable		Continuity
Connector	Terminal	Connector	Terminal	
M80	6	M36	24	Existed

4. Check continuity between audio unit harness connector and ground.

Audio unit		Ground	Continuity
Connector	Terminal		
M80	6		Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair harness or connector.

#### 2. CHECK SPIRAL CABLE

Check spiral cable.

Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> Replace spiral cable. Refer to [SR-17. "Removal and Installation"](#).

#### 3. CHECK AUDIO UNIT VOLTAGE

1. Connect audio unit connector and spiral cable connector.
2. Turn ignition switch ON.
3. Check voltage between audio unit harness connector.

(+)		(-)		Voltage (Approx.)
Audio unit		Audio unit		
Connector	Terminal	Connector	Terminal	
M80	6	M80	15	5.0 V

Is the inspection result normal?

- YES >> GO TO 4.  
 NO >> Replace audio unit. Refer to [AV-33. "Removal and Installation"](#).

#### 4. CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-16. "Component Inspection"](#).

Is the inspection result normal?

- YES >> INSPECTION END  
 NO >> Replace steering switch. Refer to [AV-36. "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

# STEERING SWITCH SIGNAL A CIRCUIT


< DTC/CIRCUIT DIAGNOSIS >

[BASE AUDIO]

## Component Inspection

INFOID:00000006709032

Measure the resistance between the steering switch connector.

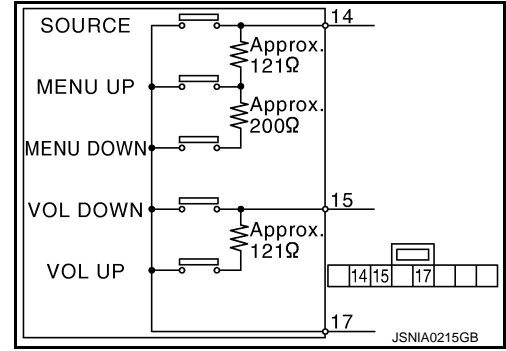

Standard

Steering switch		Condition	Resistance Ω
Terminal	Terminal		
14	17	MENU DOWN switch ON	315 – 327
		MENU UP switch ON	119 – 123
		SOURCE switch ON	0
15	17	VOL UP switch ON	119 – 123
		VOL DOWN switch ON	0



# STEERING SWITCH SIGNAL B CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BASE AUDIO]

## STEERING SWITCH SIGNAL B CIRCUIT

### Description

INFOID:000000006709033

Transmits the steering switch signal to audio unit.

### Diagnosis Procedure

INFOID:000000006709034

#### 1.CHECK STEERING SWITCH SIGNAL B CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect audio unit connector and spiral cable connector.
3. Check continuity between audio unit harness connector and spiral cable harness connector.

Audio unit		Spiral cable		Continuity
Connector	Terminal	Connector	Terminal	
M80	16	M36	31	Existed

4. Check continuity between audio unit harness connector and ground.

Audio unit		Ground	Continuity
Connector	Terminal		
M80	16		Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair harness or connector.

#### 2.CHECK SPIRAL CABLE

Check spiral cable.

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Replace spiral cable. Refer to [SR-17. "Removal and Installation"](#).

#### 3.CHECK AUDIO UNIT VOLTAGE

1. Connect audio unit connector and spiral cable connector.
2. Turn ignition switch ON.
3. Check voltage between audio unit harness connector.

(+)		(-)		Voltage (Approx.)
Audio unit		Audio unit		
Connector	Terminal	Connector	Terminal	
M80	16	M80	15	5.0 V

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Replace audio unit. Refer to [AV-33. "Removal and Installation"](#).

#### 4.CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-18. "Component Inspection"](#).

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace steering switch. Refer to [AV-36. "Removal and Installation"](#).

# STEERING SWITCH SIGNAL B CIRCUIT


< DTC/CIRCUIT DIAGNOSIS >

[BASE AUDIO]

INFOID:00000006709035

## Component Inspection

Measure the resistance between the steering switch connector.

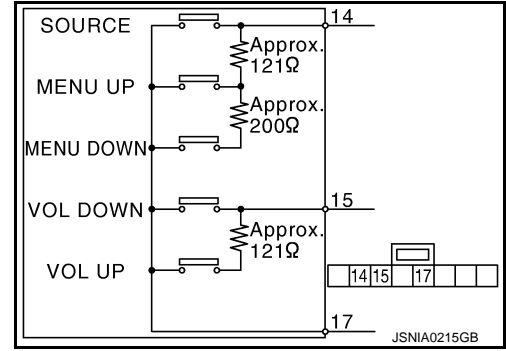

Standard

Steering switch		Condition	Resistance Ω
Terminal	Terminal		
14	17	MENU DOWN switch ON	315 – 327
		MENU UP switch ON	119 – 123
		SOURCE switch ON	0
15	17	VOL UP switch ON	119 – 123
		VOL DOWN switch ON	0

# STEERING SWITCH SIGNAL GND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BASE AUDIO]

## STEERING SWITCH SIGNAL GND CIRCUIT

### Description

INFOID:000000006709036

Transmits the steering switch signal to audio unit.

### Diagnosis Procedure

INFOID:000000006709037

#### 1. CHECK STEERING SWITCH SIGNAL A CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect audio unit connector and spiral cable connector.
3. Check continuity between audio unit harness connector and spiral cable harness connector.

Audio unit		Spiral cable		Continuity
Connector	Terminal	Connector	Terminal	
M80	15	M36	33	Existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair harness or connector.

#### 2. CHECK SPIRAL CABLE

Check spiral cable.

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Replace spiral cable. Refer to [SR-17, "Removal and Installation"](#).

#### 3. CHECK GROUND CIRCUIT

1. Connect audio unit connector and spiral cable connector.
2. Turn ignition switch ON.
3. Check continuity between audio unit harness connector.

Audio unit		Ground	Continuity
Connector	Terminal		
M80	15		Existed

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Replace audio unit. Refer to [AV-33, "Removal and Installation"](#).

#### 4. CHECK STEERING SWITCH

Check steering switch. Refer to [AV-20, "Component Inspection"](#).

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace steering switch. Refer to [AV-36, "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# STEERING SWITCH SIGNAL GND CIRCUIT


< DTC/CIRCUIT DIAGNOSIS >

[BASE AUDIO]

INFOID:00000006709038

## Component Inspection

Measure the resistance between the steering switch connector.

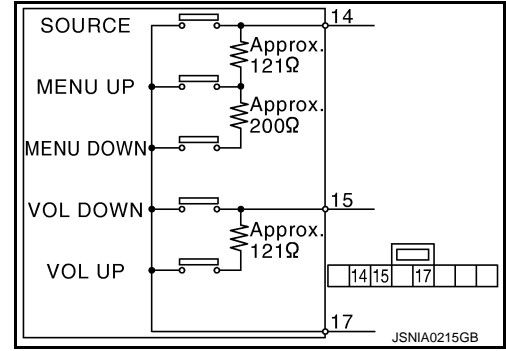

Standard

Steering switch		Condition	Resistance Ω
Terminal	Terminal		
14	17	MENU DOWN switch ON	315 – 327
		MENU UP switch ON	119 – 123
		SOURCE switch ON	0
15	17	VOL UP switch ON	119 – 123
		VOL DOWN switch ON	0

# AUDIO UNIT

< ECU DIAGNOSIS INFORMATION >

[BASE AUDIO]


## ECU DIAGNOSIS INFORMATION

### AUDIO UNIT

Reference Value

INFOID:000000006709039

### TERMINAL LAYOUT

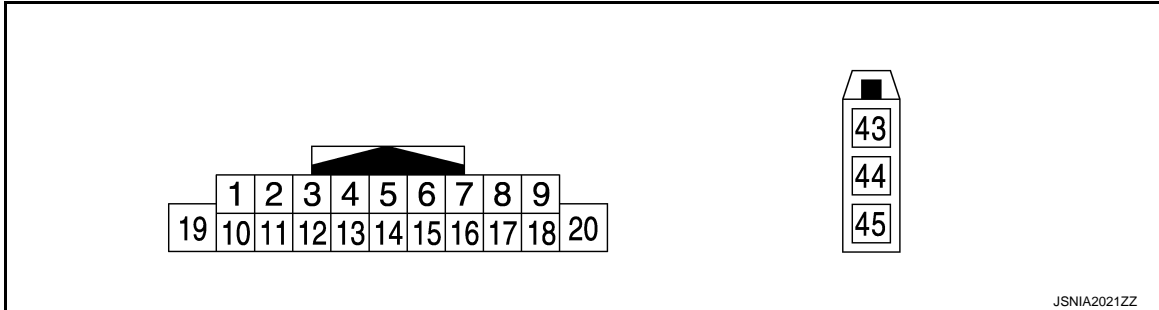

### PHYSICAL VALUES

Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/Output			
2 (L)	3 (V)	Sound signal front speaker LH	Output	Ignition switch ON	Audio signal output	<p>SKIB3609E</p>
6 (P)	15 (B)	Steering switch signal A	Input	Ignition switch ON	Keep pressing SOURCE switch	0 V
					Keep pressing MENU UP switch	1.0 V
					Keep pressing MENU DOWN switch	2.0 V
					Except for above	5.0 V
7 (L)	Ground	ACC power supply	Input	Ignition switch ACC	—	Battery voltage
9 (R)	8 (W)	Illumination signal	Input	Ignition switch OFF	Lighting switch is OFF.	0 V
					Lighting switch is 1ST or 2ND.	12.0 V
11 (V)	12 (LG)	Sound signal front speaker RH	Output	Ignition switch ON	Audio signal output	<p>SKIB3609E</p>

# AUDIO UNIT

< ECU DIAGNOSIS INFORMATION >

[BASE AUDIO]

Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
16 (L)	15 (B)	Steering switch signal B	Input	Ignition switch ON	Keep pressing VOL DOWN switch	0 V
					Keep pressing VOL UP switch	1.0 V
					Except for above	5.0 V
19 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
43	Ground	Antenna amp. ON signal	Output	Ignition switch ON	—	12.0 V
44	—	Antenna signal	Input	—	—	—

# BASE AUDIO

< WIRING DIAGRAM >


[BASE AUDIO]

## WIRING DIAGRAM

### BASE AUDIO

#### Wiring Diagram

INFOID:000000006709040

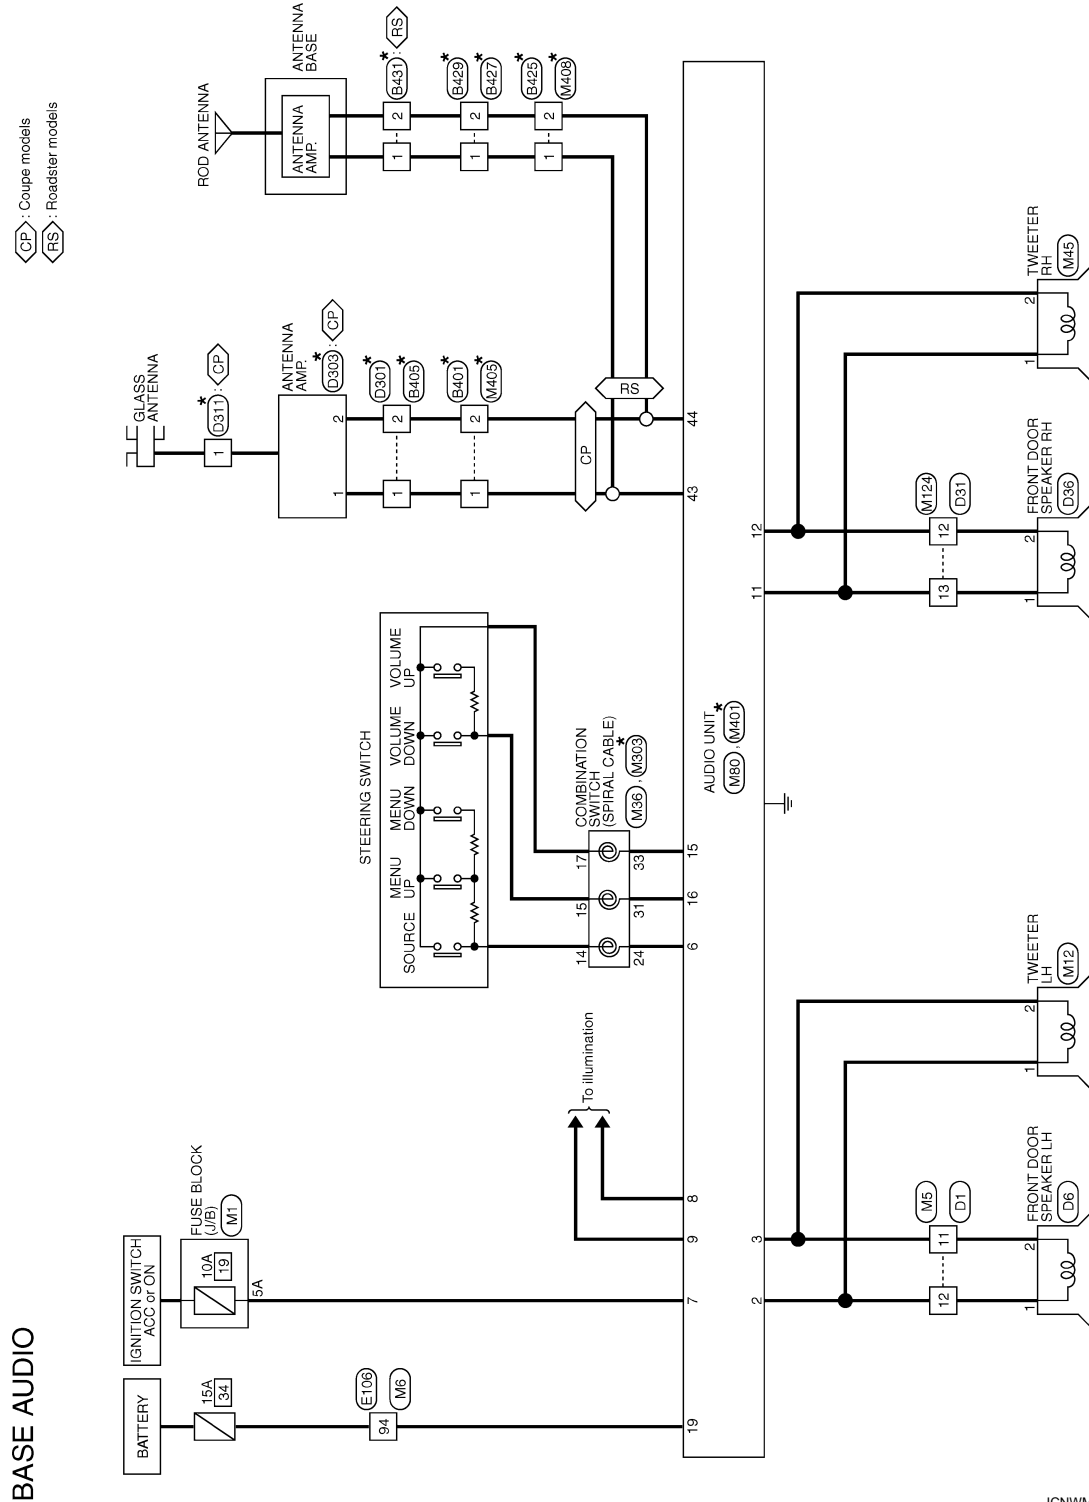

\*: This connector is not shown in "Harness Layout".

2009/07/10

JCNWM3096GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

# BASE AUDIO

< WIRING DIAGRAM >

[BASE AUDIO]

## BASE AUDIO

Connector No.	B401
Connector Name	WIRE TO WIRE
Connector Type	GT13SCH-1/PP-HU



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	B405
Connector Name	WIRE TO WIRE
Connector Type	GT13SCH-1/PP-HU(2)



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	B425
Connector Name	WIRE TO WIRE
Connector Type	GT13SCH-1/PP-HU



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	B427
Connector Name	WIRE TO WIRE
Connector Type	GT13SCH-1/PP-HU(2)



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	B429
Connector Name	WIRE TO WIRE
Connector Type	GT13SCH-1/S-HU(2)



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	B431
Connector Name	ANTENNA BASE
Connector Type	GT13SCH-1/PP-HU




Terminal No.	Color of Wire	Signal Name [Specification]
1	-	ANTENNA AMP ON SIGNAL
2	-	AM-FM MAIN

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
7	Y	-
8	Y	-
9	G	-
10	BG	-
11	P	- [With BOSE system]
11	V	- [Without BOSE system]
12	L	-
13	B	-
14	SB	- [Coupe models]
14	Y	- [Roadster models]
15	W	-
19	G	-
23	R	-
44	L	-
47	B	-
48	SB	-
49	W	-
50	LG	-
51	R	-
52	V	-
53	BG	-
54	GR	-
55	G	-

Connector No.	D31
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
10	V	-
11	LG	-
12	P	- [With BOSE system]
12	LG	- [Without BOSE system]
13	V	- [Coupe models without BOSE system]
13	L	- [Except for coupe models without BOSE system]
14	B	-
15	W	-
19	P	-
23	L	-
44	L	-
50	Y	-
51	Y	-
52	G	-
53	BG	-
54	GR	-
55	L	-

Connector No.	D36
Connector Name	FRONT DOOR SPEAKER LH
Connector Type	MS02FW-CS



JCNWA3488GB



# BASE AUDIO

< WIRING DIAGRAM >

[BASE AUDIO]

## BASE AUDIO

Connector No.	D306
Connector Name	FRONT DOOR SPEAKER RH
Connector Type	NS2FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	[Coupe models without BOSE system]
1	L	[Except for coupe models without BOSE system]
2	P	[With BOSE system]
2	LG	[Without BOSE system]

Connector No.	D301
Connector Name	WIRE TO WIRE
Connector Type	GT13SS-1/IS-HU(21)



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	D303
Connector Name	ANTENNA AMP.
Connector Type	GT13SC-1/IS-HU



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-


1	-	ANTENNA AMP ON SIGNAL
2	-	AM-FM MAIN

Connector No.	D311
Connector Name	GLASS ANTENNA
Connector Type	PRO1FB-A



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-
3	L	-
4	L	-
7	B	-
8	P	-
9	B	-
11	V	-
12	R	-
13	L	-
14	GR	-
15	P	-
16	W	-
17	SB	-
20	LG	-
21	BR	[Coupe models]
21	G	[Roadster models]
31	L	-


32	Y	-
33	P	-
34	L	-
35	BR	-
36	V	-
37	Y	-
38	R	-
39	B	-
40	W	-
41	LG	-
42	SB	-
43	G	-
44	GR	[Except for roadster models with M/T]
44	R	[Roadster models with M/T]
45	BG	-
46	W	-
47	P	-
58	SHIELD	-
59	L	-
70	P	-
80	W	-
81	P	-
82	G	-
83	V	-
84	L	-
85	BG	-
86	LG	-
87	R	-
88	P	-
91	W	-
92	L	-
93	G	-
94	Y	-
97	BR	-
98	GR	-
99	GR	-
100	BG	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-M2



Terminal No.	Color of Wire	Signal Name [Specification]
1A	V	-
2A	G	-
3A	L	-
4A	P	-
5A	L	-
6A	Y	-
7A	BR	-
8A	L	-

Connector No.	M5
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
7	Y	-
8	Y	-
9	G	-
10	V	-
11	V	-
12	L	-
13	B	-
14	Y	-
15	W	-
19	V	-
23	Y/B	-
44	L	-
47	B	-
48	SB	-
49	Y	-
50	W	-
51	R	-
52	L	-
53	W	-
54	G	-
55	R	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

JCNWA3489GB


# BASE AUDIO

< WIRING DIAGRAM >

[BASE AUDIO]

## BASE AUDIO

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS1F-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	
2	L	
3	L	
4	L	
5	L	
6	P	
7	B	
8	P	
9	B	
10	GR	
11	GR	
12	R	
13	L	
14	G	
15	P	
16	W	
17	BR	
18	GR	
19	R	
20	GR	
21	R	
22	BR	
23	P	
24	L	
25	BR	
26	SB	
27	Y	
28	LG	
29	SB	
30	W	
31	LG	
32	R	
33	G	
34	G	
35	O	
36	O	
37	G	
38	SHIELD	
39	L	
40	R	
41	LG	
42	R	
43	G	
44	G	
45	R	
46	G	
47	BR	
48	SHIELD	
49	L	
50	R	
51	LG	
52	GR	


82	V	
83	V	
84	L	
85	BR	
86	T	
87	G	
88	P	
89	W	
90	P	
91	P	
92	P	
93	P	
94	Y	
95	P	
96	P	
97	GR	
98	O	
99	W	
100	R	

Connector No.	M12
Connector Name	TWEETER LH
Connector Type	TK02FER



Terminal No.	1	2
Color of Wire	L	W
Signal Name [Specification]		

Connector No.	M36
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FY-TV



Terminal No.	24	25	26	31
Color of Wire	P	P	SB	SB
Signal Name [Specification]				


26	W	
31	L	
32	Y	
33	B	
34	LG	

Connector No.	M45
Connector Name	TWEETER RH
Connector Type	TK02FER




Terminal No.	1	2
Color of Wire	L	W
Signal Name [Specification]		

Connector No.	M80
Connector Name	AUDIO UNIT
Connector Type	TH18FW-CS2



Terminal No.	2	3	6	7	8	9	11	12	15	16	18
Color of Wire	L	V	P	L	W	R	V	LG	L	Y	
Signal Name [Specification]	SOUND SIGNAL FRONT SPEAKER LH (+)	SOUND SIGNAL FRONT SPEAKER LH (-)	STRG SW A	ACC	ILL (-)	ILL (+)	SOUND SIGNAL FRONT SPEAKER RH (+)	SOUND SIGNAL FRONT SPEAKER RH (-)	STRG SW GND	STRG SW B	BATTERY

Connector No.	M124
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15



Terminal No.	10	11	12	13	14	15	19	23	44	50	51	52	53	54	55
Color of Wire	G	V	LG	V	B	W	W	Y/B	O	Y	Y	GR	W	G	R
Signal Name [Specification]															

JCNWA3490GB

# BASE AUDIO

< WIRING DIAGRAM >

[BASE AUDIO]

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

## BASE AUDIO

Connector No.	M333
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FGY



Terminal No.	Color of Wire	Signal Name [Specification]
13	-	-
14	-	-
15	-	-
16	-	-
17	-	-
18	-	-
19	-	-
20	-	-

Connector No.	M408
Connector Name	WIRE TO WIRE
Connector Type	GT13SC-1/IS-HU



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	M408
Connector Name	WIRE TO WIRE
Connector Type	GT13SC-1/IS-HU



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	M401
Connector Name	AUDIO UNIT
Connector Type	GT13SH-2/IS-HU



Terminal No.	Color of Wire	Signal Name [Specification]
43	-	ANTENNA AMP. ON SIGNAL
44	-	ANTENNA SIGNAL
45	-	-

JCNWA3491GB

## SYMPTOM DIAGNOSIS

### AUDIO SYSTEM

#### Symptom Table

INFOID:000000006709041

#### AUDIO SYSTEM

Symptoms	Check items	Possible malfunction location / Action to take
Audio sound is not heard.	No sound from all speakers.	Audio unit power supply and ground circuit. Refer to <a href="#">AV-14, "AUDIO UNIT : Diagnosis Procedure"</a> .
	Sound is not heard only from the specific places.	Sound signal circuit of malfunctioning system.

#### RELATED TO STEERING SWITCH

Symptoms	Possible malfunction location / Action to take
All steering switches are not operated.	Steering switch signal ground circuit. Refer to <a href="#">AV-19, "Diagnosis Procedure"</a> .
Only specified switch cannot be operated.	Replace steering switch.
"MENU UP", "MENU DOWN" and "SOURCE" switches are not operated.	Steering switch signal A circuit. Refer to <a href="#">AV-15, "Diagnosis Procedure"</a> .
"VOL UP" and "VOL DOWN" switches are not operated.	Steering switch signal B circuit. Refer to <a href="#">AV-17, "Diagnosis Procedure"</a> .

# NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[BASE AUDIO]

## NORMAL OPERATING CONDITION

### Description

INFOID:000000006709042

### RELATED TO AUDIO

- The majority of the audio malfunctions are the result of outside causes (bad CD, electromagnetic interference, etc.). Check the symptoms below to diagnose the malfunction.
- The vehicle itself can be a source of noise if noise prevention parts or electrical equipment is malfunctioning. Check that noise is caused and/or changed by engine speed, ignition switch turned to each position, and operation of each piece of electrical equipment. Then determine the cause.

#### NOTE:

Check that the CDs carry the Compact Disc Logo. If not, the disc is not mastered to the red book Compact Disc Standard and may not play.

Symptoms	Cause and Counter measure
Cannot play	Check that the CD was inserted correctly.
	Check that the CD is scratched or dirty.
	Check that there is condensation inside the player, and if there is, wait until the condensation is gone (about 1 hour) before using the player.
	The player will play correctly after it returns to the normal temperature if there is a temperature increase error.
	Check that the finalization process, such as session close and disc close, is done for the disc.
Check that the CD is protected by copyright.	
Poor sound quality	Check that the CD is scratched or dirty.
The songs do not play back in the desired order.	The playback order is the order in which the files were written by the software, so the files might not play in the desired order.

Noise resulting from variations in field strength, such as fading noise and multi-path noise, or external noise from trains and other sources, is not a malfunction.

#### NOTE:

- Fading noise: This noise occurs because of variations in the field strength in a narrow range due to mountains or buildings blocking the signal.
- Multi-path noise: This noise results from a time difference between the broadcast waves directly from the station arriving at the antenna and the waves reflected by mountains or buildings.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

**PRECAUTION****PRECAUTIONS****EXCEPT FOR MEXICO****EXCEPT FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"**

INFOID:000000006709043

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

**WARNING:**

**Always observe the following items for preventing accidental activation.**

- **To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.**
- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".**
- **Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

**PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS****WARNING:**

**Always observe the following items for preventing accidental activation.**

- **When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.**
- **When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.**

**FOR MEXICO****FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"**

INFOID:000000006880851

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

**WARNING:**

**Always observe the following items for preventing accidental activation.**

- **To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.**
- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".**
- **Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

**PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS****WARNING:**

# PRECAUTIONS

< PRECAUTION >

[BASE AUDIO]

**Always observe the following items for preventing accidental activation.**

- **When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.**
- **When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.**

## Precaution for Battery Service

INFOID:000000006709044

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# PREPARATION

< PREPARATION >


[BASE AUDIO]

## PREPARATION

### PREPARATION

#### Commercial Service Tools

INFOID:000000006709047

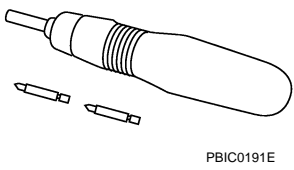Tool name	Description
<p data-bbox="162 514 276 546">Power tool</p>  <p data-bbox="820 619 901 651">PBIC0191E</p>	<p data-bbox="1006 514 1193 546">Loosening screws</p>




## REMOVAL AND INSTALLATION

### AUDIO UNIT

#### Exploded View


#### REMOVAL

INFOID:000000006709048

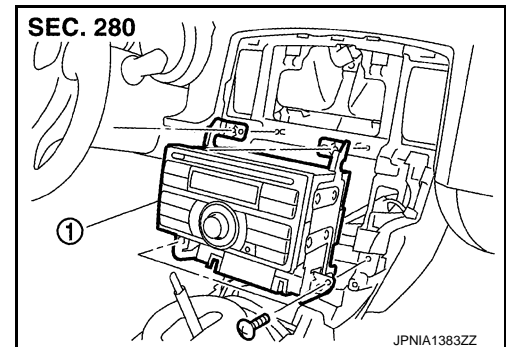

1. Audio unit

#### DISASSEMBLY

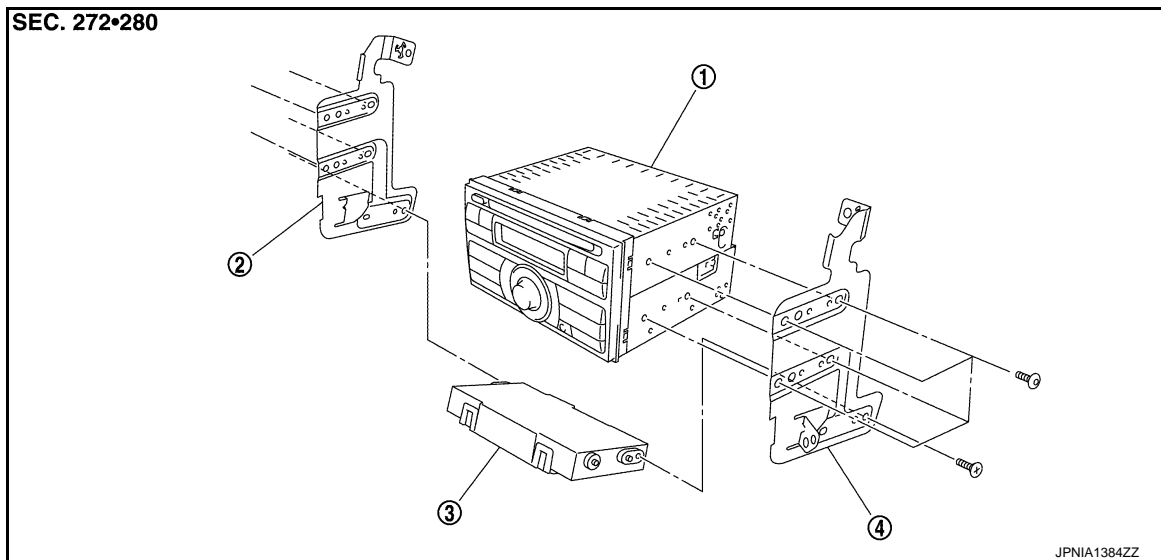

1. Audio unit
2. Bracket LH
3. A/C auto amp.
4. Bracket RH

### Removal and Installation

INFOID:000000006709049

#### REMOVAL

1. Remove cluster lid C. Refer to [IP-14, "Exploded View"](#).
2. Remove audio unit with A/C auto amp. as a single unit from the body.
3. Remove bracket screws to remove audio unit.

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# FRONT DOOR SPEAKER


< REMOVAL AND INSTALLATION >

[BASE AUDIO]

## FRONT DOOR SPEAKER

Exploded View

INFOID:000000006709050

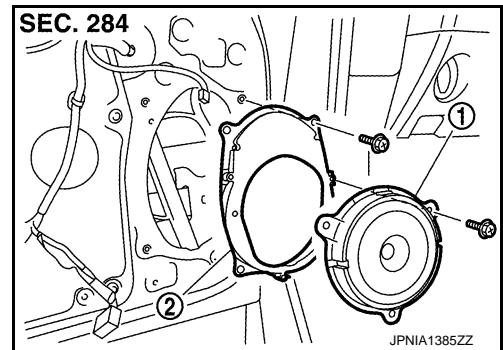

1. Front door speaker
2. Bracket

## Removal and Installation

INFOID:000000006709051

### REMOVAL

1. Remove door finisher. Refer to [INT-15. "Removal and Installation"](#) (coupe models) or [INT-48. "Removal and Installation"](#) (roadster models).
2. Remove front door speaker from bracket.

### INSTALLATION

Install in the reverse order of removal.

# TWEETER


< REMOVAL AND INSTALLATION >

[BASE AUDIO]

## TWEETER

### Exploded View

INFOID:000000006709052

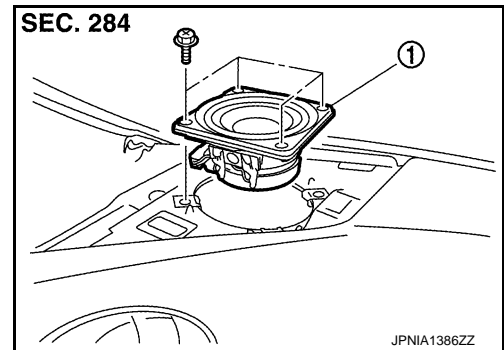

1. Tweeter

### Removal and Installation

INFOID:000000006709053

#### REMOVAL

1. Remove speaker grille. Refer to [JP-14, "Exploded View"](#).
2. Remove tweeter screws, then lift up tweeter, disconnect connector and remove tweeter.

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

# STEERING SWITCH

< REMOVAL AND INSTALLATION >

[BASE AUDIO]

---

## STEERING SWITCH

### Exploded View

*INFOID:000000006709054*

Refer to [SR-14, "Exploded View"](#).

### Removal and Installation

*INFOID:000000006709055*

#### REMOVAL

Refer to [SR-14, "Removal and Installation"](#).

#### INSTALLATION

Installation is the reverse order of removal.

# ANTENNA AMP.


< REMOVAL AND INSTALLATION >

[BASE AUDIO]

## ANTENNA AMP.

### Exploded View

INFOID:000000006709056

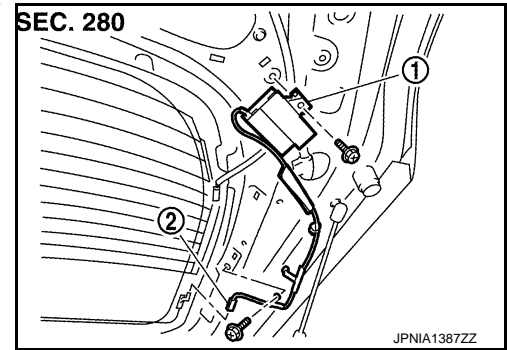

1. Antenna amp.
2. Connector

### Removal and Installation

INFOID:000000006709057

#### REMOVAL

1. Remove back door finisher side. Refer to [INT-33, "Exploded View"](#).
2. Disconnect connector and remove screw, then remove antenna amp.

#### INSTALLATION

Install in the reverse order of removal.


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

AV

## ANTENNA BASE

### Exploded View

INFOID:000000006709058

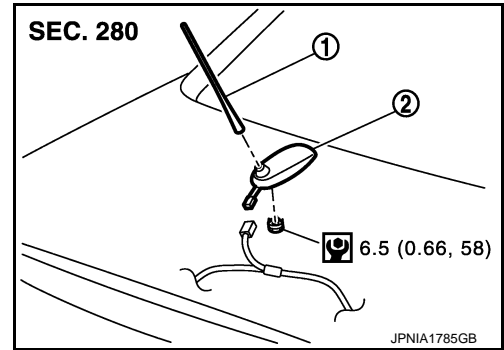

1. Antenna rod
2. Antenna base

Refer to [GI-4, "Components"](#) for symbols in the figure.

### Removal and Installation

INFOID:000000006709059

#### REMOVAL

1. Remove trunk lid finisher inner. Refer to [INT-79, "Exploded View"](#).
2. Remove antenna base mounting nut, disconnect the antenna base connector.
3. Remove antenna base.

#### INSTALLATION

Installation is the reverse order of removal.

#### **CAUTION:**

**Be careful about tightening torque. Antenna sensitivity becomes poor, and when it is excessive, trunk lid panel may be deformed, when antenna base mounting nut tightening torque is loose.**

# ANTENNA FEEDER

< REMOVAL AND INSTALLATION >


[BASE AUDIO]

## ANTENNA FEEDER

### COUPE

### COUPE : Feeder Layout

INFOID:000000006709060

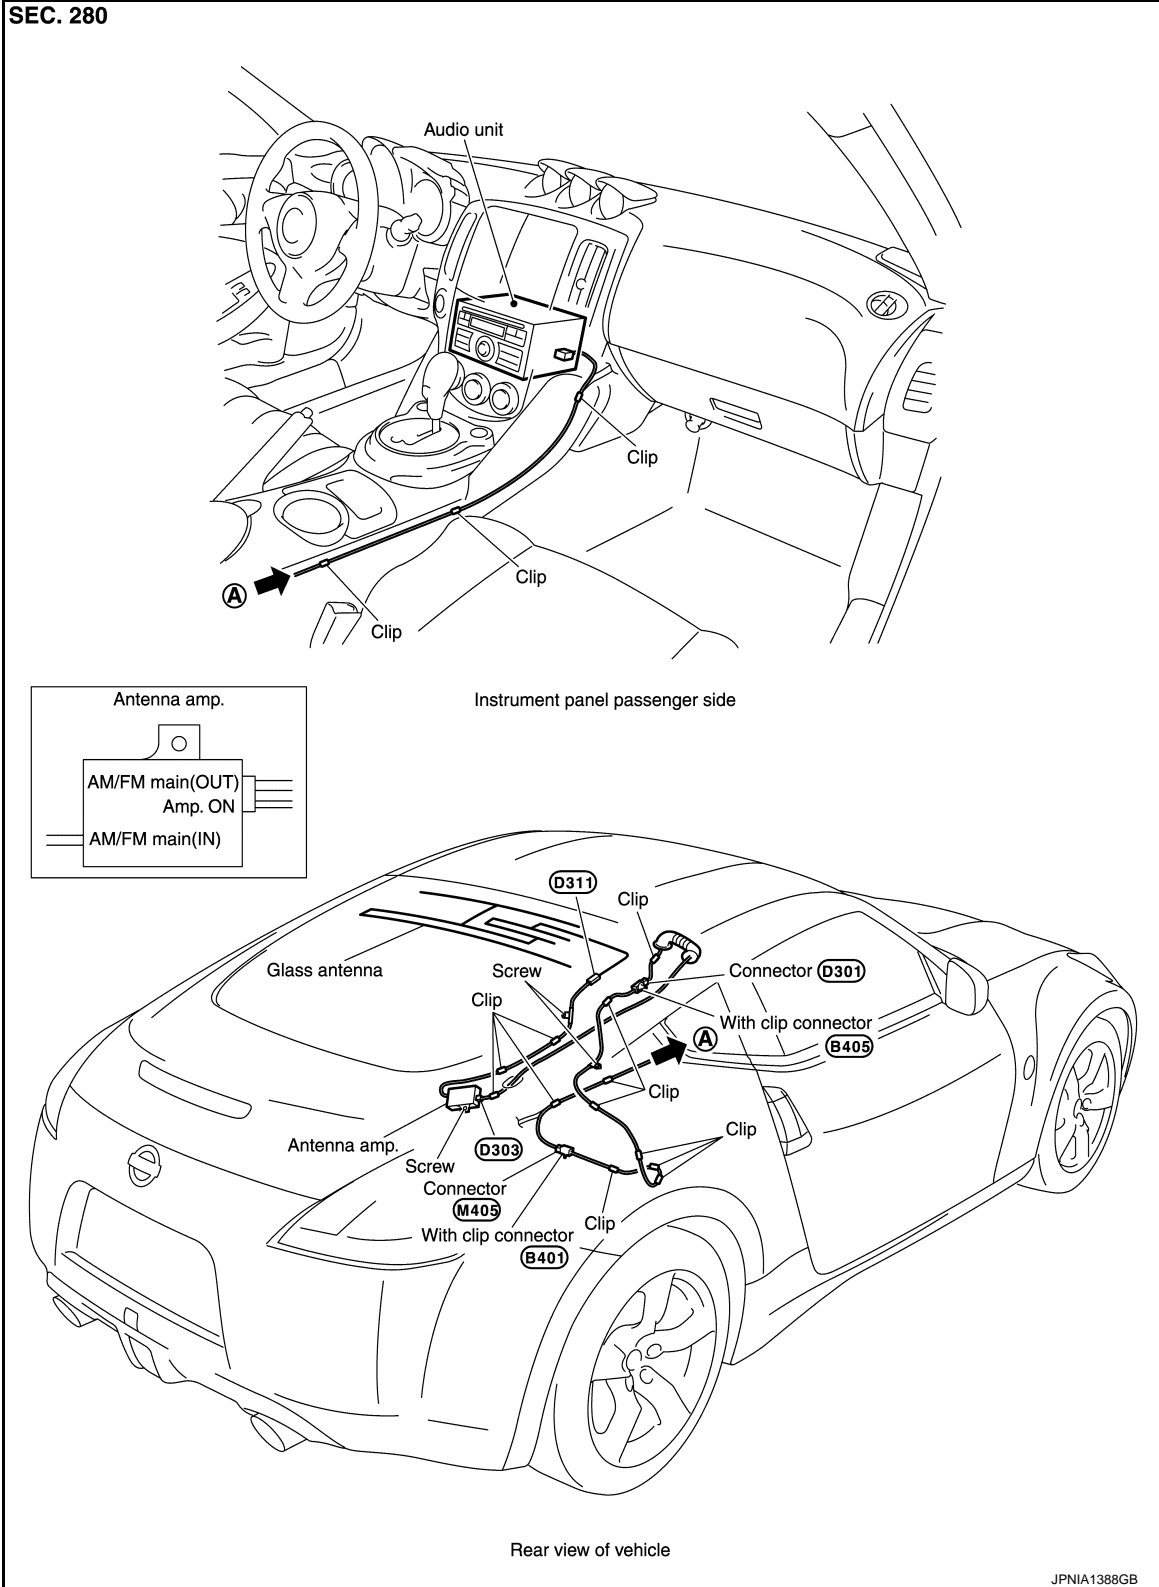

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

### ROADSTER

# ANTENNA FEEDER


< REMOVAL AND INSTALLATION >

[BASE AUDIO]


## ROADSTER : Feeder Layout

INFOID:00000006709061

### SEC. 280

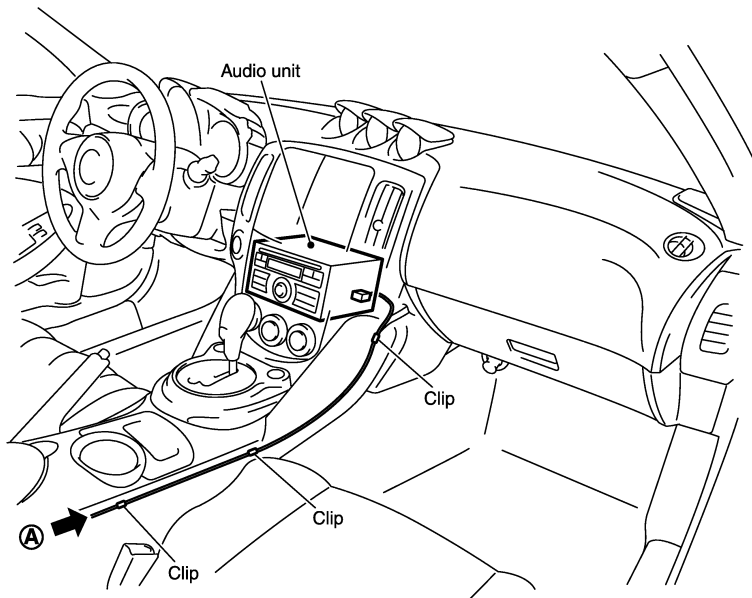

Instrument panel passenger side

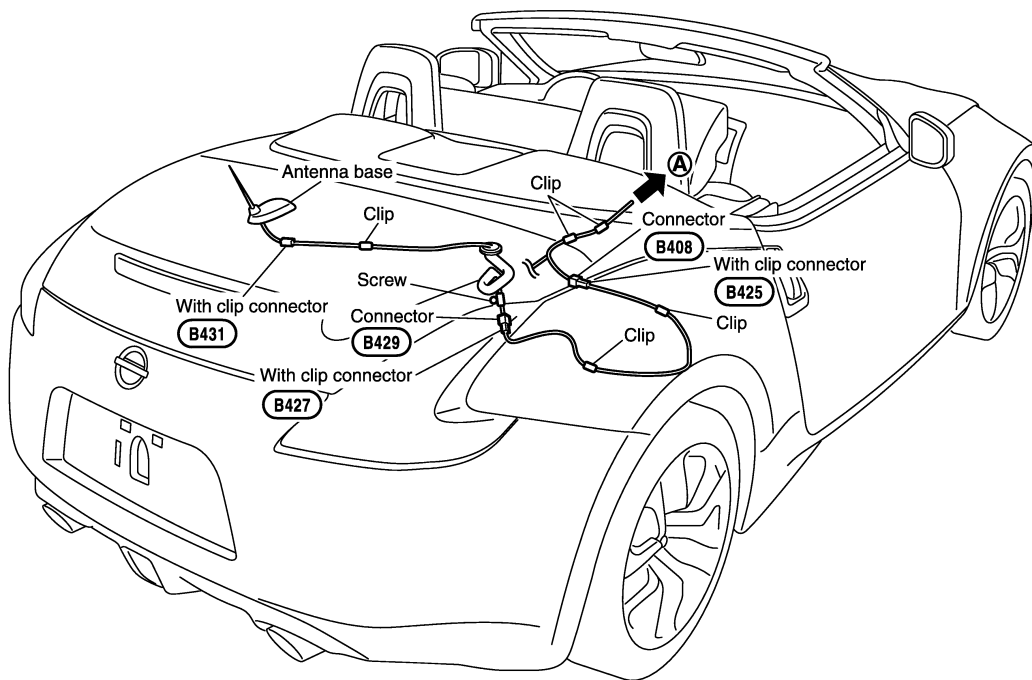

Rear view of vehicle

JPNIA1837GB




**BASIC INSPECTION**

## DIAGNOSIS AND REPAIR WORKFLOW

## Work Flow

INFOID:000000006709062

## OVERALL SEQUENCE

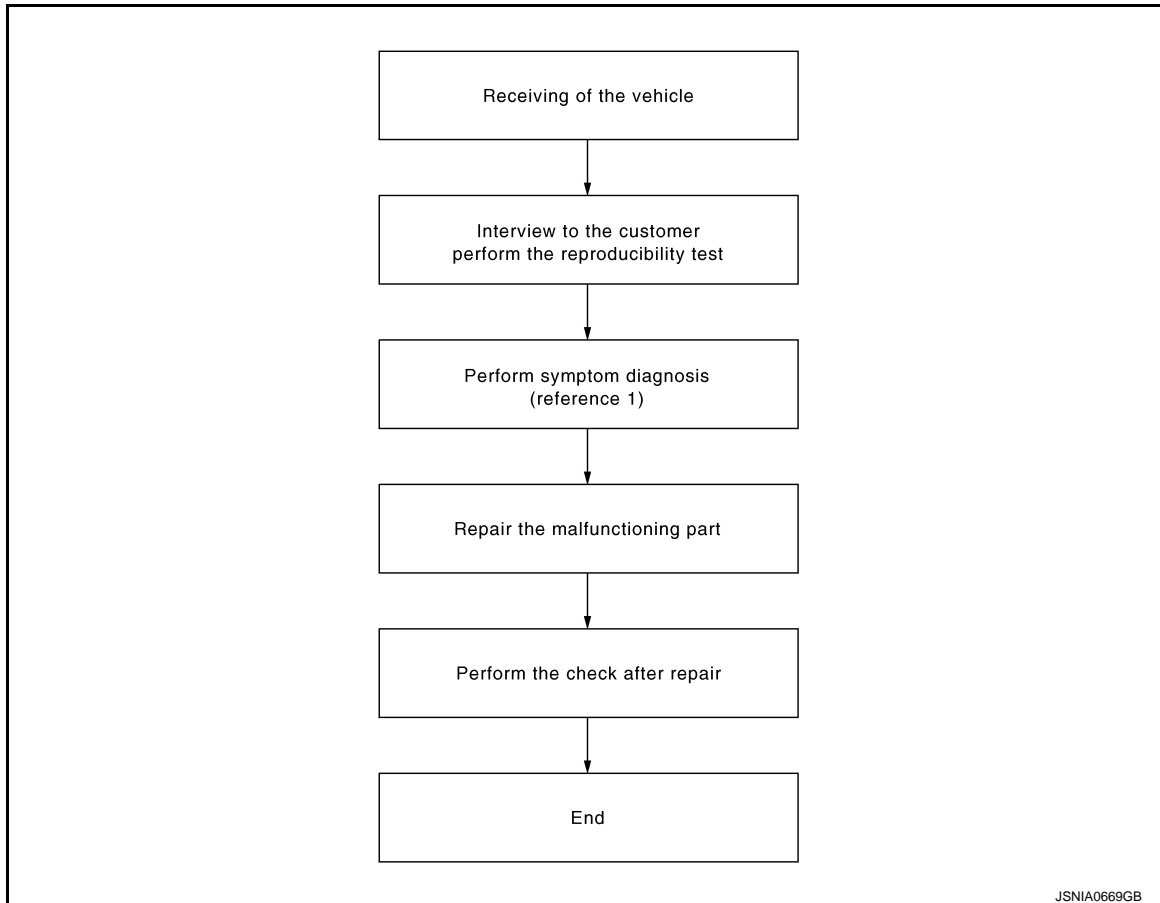

Reference 1 ... Refer to [AV-114, "Symptom Table"](#).

## DETAILED FLOW

**1. CHECK SYMPTOM**

Check the malfunction symptoms by performing the following items.

- Interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred).
- Check the symptom.

>> GO TO 2.

**2. PERFORM DIAGNOSIS BY SYMPTOM**

Perform the relevant diagnosis referring to the diagnosis chart by symptom. Refer to [AV-114, "Symptom Table"](#).

>> GO TO 3.

**3. REPAIR OR REPLACE MALFUNCTIONING PARTS**

Repair or replace the malfunctioning parts.

>> GO TO 4.

## DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[BOSE AUDIO WITHOUT NAVIGATION]

---

### 4. FINAL CHECK

---

Perform the operation to check that the malfunction symptom is solved or any other symptoms are present.

Is there any symptom?

YES >> GO TO 2.

NO >> INSPECTION END

# AUDIO SYSTEM

< SYSTEM DESCRIPTION >

[BOSE AUDIO WITHOUT NAVIGATION]


## SYSTEM DESCRIPTION

### AUDIO SYSTEM


#### System Diagram

INFOID:000000006709063

#### COUPE MODELS

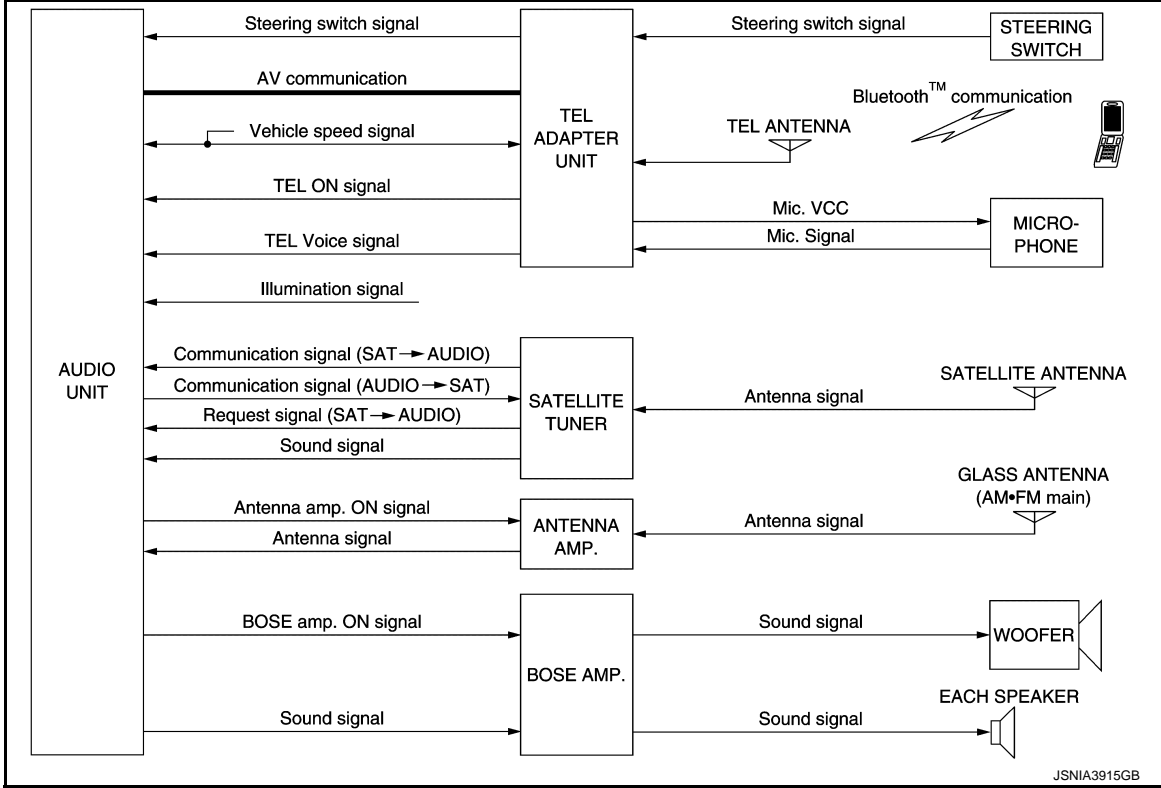

#### ROADSTER MODELS

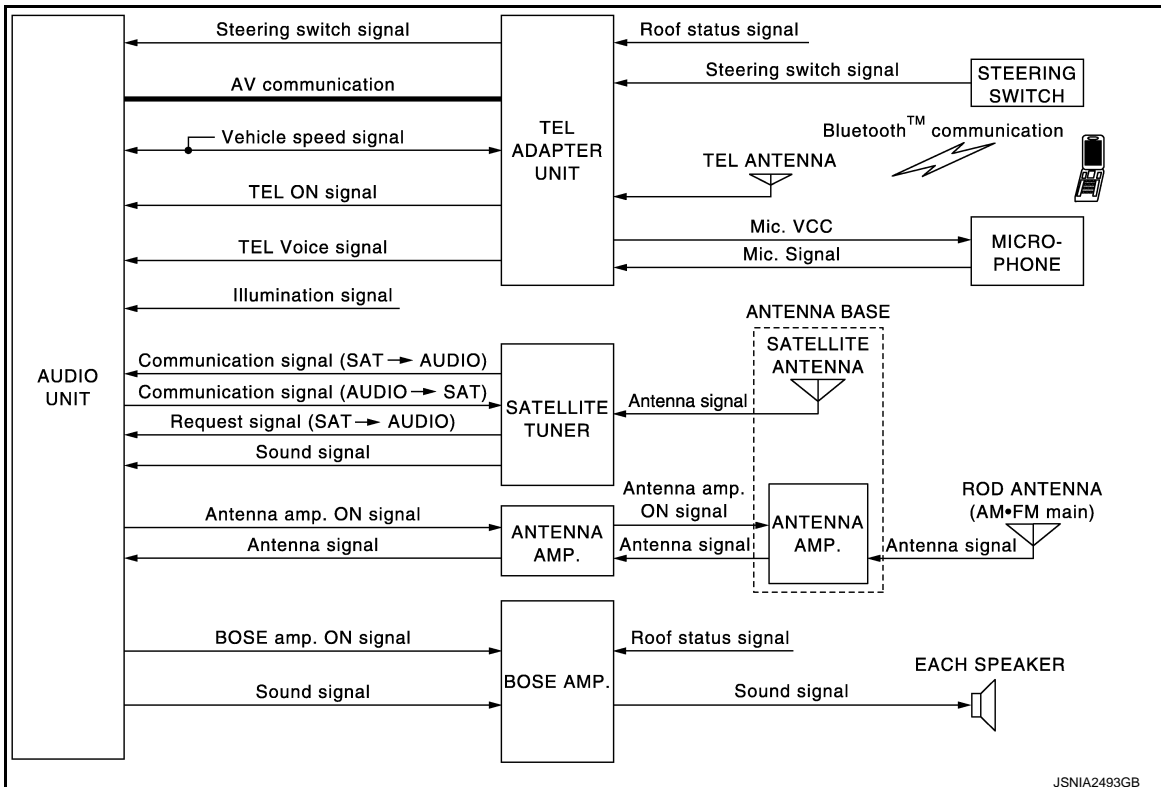

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV


# AUDIO SYSTEM

[BOSE AUDIO WITHOUT NAVIGATION]

## < SYSTEM DESCRIPTION >

### NOTE:

An antenna base integrated with antenna amp. and satellite antenna are adopted.

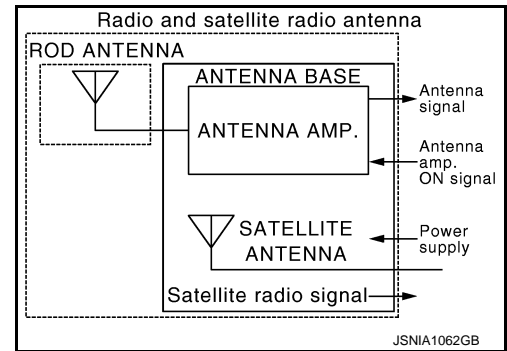

## System Description

### AUDIO SYSTEM

Audio functions

AM/FM radio
Satellite radio (except for Mexico models)
6CD
Speed sensitive volume
Sound equalizer automatic switching (roadster models)

- Radio signals are received by glass antenna, next it is amplified by antenna amp., and finally it is input to audio unit. (coupe models)
- Radio signals are received by rod antenna, next it is amplified by antenna amp., and finally it is input to audio unit. (roadster models)
- Audio unit outputs sound signal to BOSE amp. and BOSE amp. outputs to woofer and each speaker. (coupe models)
- Audio unit outputs sound signal to BOSE amp. and BOSE amp. outputs to each speaker. (roadster models)

#### Satellite Radio System

- Radio signals are supplied to satellite radio tuner from the satellite radio antenna.
- The satellite radio tuner sends sound signal to the audio unit.
- Audio unit outputs sound signal to BOSE amp. and BOSE amp. outputs to woofer and each speaker. (coupe models)
- Audio unit outputs sound signal to BOSE amp. and BOSE amp. outputs to each speaker. (roadster models)

#### Speed Sensitive Volume

- Volume level of this system goes up and down automatically in proportion to the vehicle speed.
- The control level can be selected by the customer.

#### Sound Equalizer Automatic Switching Function

Sound quality in a fully-open retractable soft top condition is improved by the correction for bringing the frequency characteristics in a fully-open retractable soft top condition closer to the characteristics in a fully-closed retractable soft top condition. When the retractable soft top is in a fully-open condition, sound pressure is reduced due to the absence of sound echo generated by sound reflection from the retractable soft top. BOSE amp. detects an open-close condition of the retractable soft top by receiving a roof status signal from the retractable soft top control unit and switches the equalizer to correct the frequency characteristics in a fully-open retractable soft top condition. During the switching of the equalizer, audio stops temporarily due to the temporary mute.

# AUDIO SYSTEM


< SYSTEM DESCRIPTION >

[BOSE AUDIO WITHOUT NAVIGATION]

INFOID:000000006709065

## Component Parts Location

### COUPE MODELS

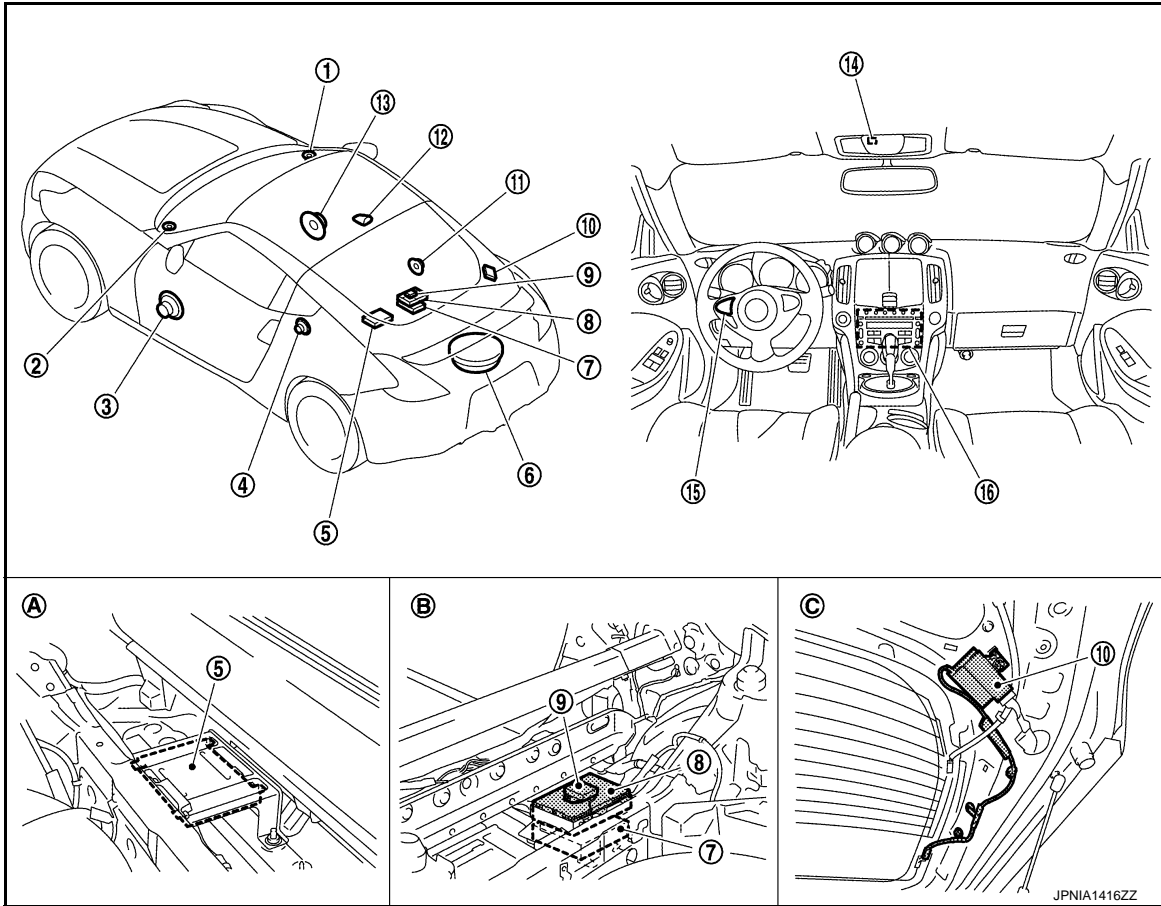

- |                           |                     |                              |
|---------------------------|---------------------|------------------------------|
| 1. Tweeter RH             | 2. Tweeter LH       | 3. Front door speaker LH     |
| 4. Rear speaker LH        | 5. BOSE amp.        | 6. Woofer                    |
| 7. Satellite radio tuner* | 8. TEL adapter unit | 9. TEL antenna               |
| 10. Antenna amp.          | 11. Rear speaker RH | 12. Satellite radio antenna* |
| 13. Front door speaker RH | 14. Microphone      | 15. Steering switch          |
| 16. Audio unit            |                     |                              |
| A. Luggage side LH        | B. Luggage side RH  | C. Back door side RH         |

\*: Except for Mexico models

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


AV

# AUDIO SYSTEM

< SYSTEM DESCRIPTION >

[BOSE AUDIO WITHOUT NAVIGATION]

## ROADSTER MODELS

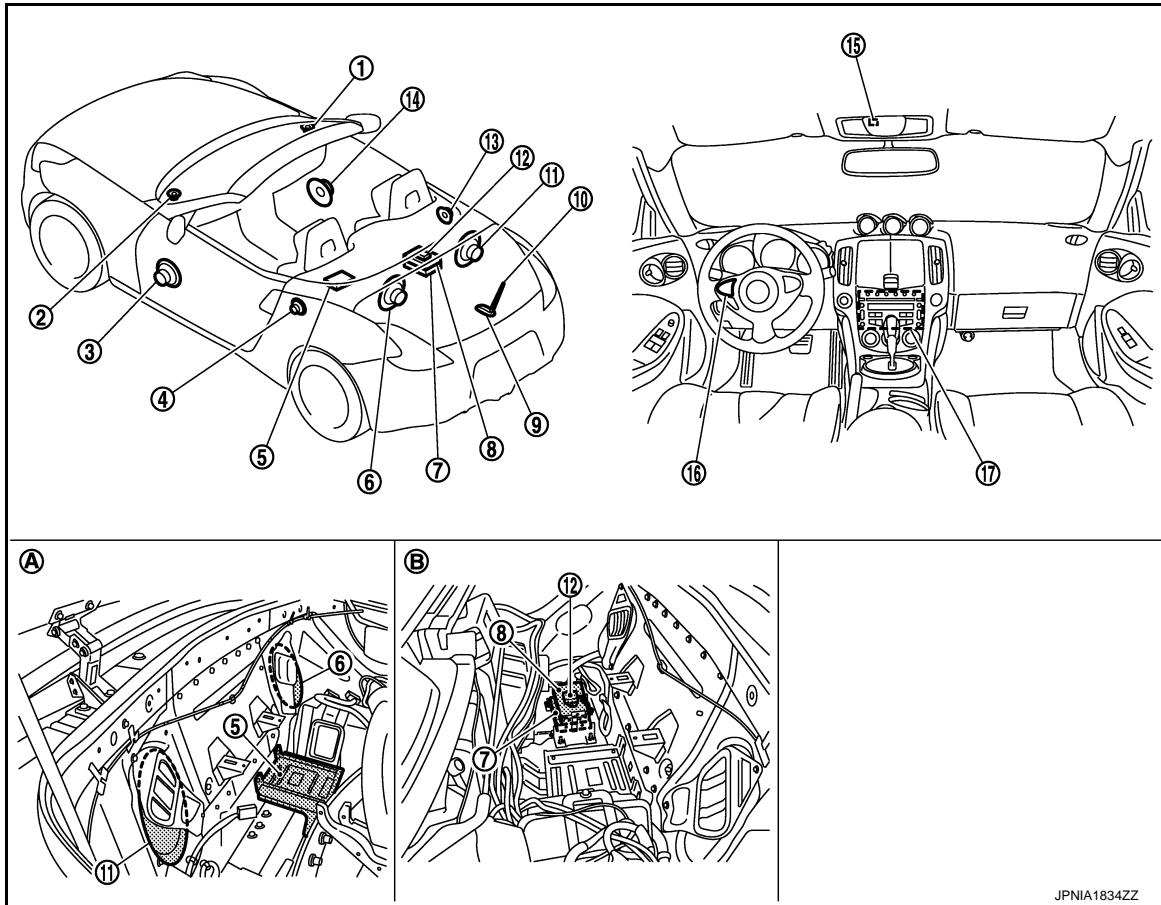

- |                          |                           |                          |
|--------------------------|---------------------------|--------------------------|
| 1. Tweeter RH            | 2. Tweeter LH             | 3. Front door speaker LH |
| 4. Rear speaker LH       | 5. BOSE amp.              | 6. Rear woofer LH        |
| 7. Satellite radio tuner | 8. TEL adapter unit       | 9. Antenna base          |
| 10. Rod antenna          | 11. Rear woofer RH        | 12. TEL antenna          |
| 13. Rear speaker RH      | 14. Front door speaker RH | 15. Microphone           |
| 16. Steering switch      | 17. Audio unit            |                          |
| A. Luggage side LH       | B. Luggage side RH        |                          |

## Component Description

INFOID:000000006709066

Part name	Description
Audio unit	Controls audio system and satellite radio system functions.
BOSE amp.	<p>Coupe models</p> <ul style="list-style-type: none"> <li>Receives power (BOSE amp. ON) and sound signals from audio unit, and outputs sound signals to woofer and each speaker.</li> </ul> <p>Roadster models</p> <ul style="list-style-type: none"> <li>Receives power (BOSE amp. ON) and sound signals from audio unit, and outputs sound signals to woofer and each speaker.</li> <li>Input roof status signal from retractable soft top control unit.</li> </ul>
Steering switch	<ul style="list-style-type: none"> <li>Each audio operation can be operated.</li> <li>Steering switch signal (operation signal) is output to audio unit through TEL adapter unit.</li> </ul>
Front door speaker	<ul style="list-style-type: none"> <li>Outputs sound signal from BOSE amp.</li> <li>Outputs mid and low range sounds.</li> </ul>
Tweeter	<ul style="list-style-type: none"> <li>Outputs sound signal from BOSE amp.</li> <li>Outputs high range sounds.</li> </ul>

# AUDIO SYSTEM

< SYSTEM DESCRIPTION >

[BOSE AUDIO WITHOUT NAVIGATION]

Part name	Description
Rear speaker	<ul style="list-style-type: none"> <li>• Outputs sound signal from BOSE amp.</li> <li>• Outputs high, mid and low range sounds.</li> </ul>
Woofer (coupe models)	<ul style="list-style-type: none"> <li>• Outputs sound signal from BOSE amp.</li> <li>• Outputs low range sounds.</li> </ul>
Rear woofer (roadster models)	<ul style="list-style-type: none"> <li>• Outputs sound signal from BOSE amp.</li> <li>• Outputs low range sounds.</li> </ul>
Antenna amp. (coupe models)	<ul style="list-style-type: none"> <li>• Radio signal received by glass antenna is amplified and transmitted to audio unit.</li> <li>• Power (antenna amp. ON signal) is supplied from audio unit.</li> </ul>
Antenna base (roadster models)	<p>An antenna base integrated with radio antenna amp. and satellite radio antenna are adopted.</p> <p style="padding-left: 20px;">Radio antenna</p> <ul style="list-style-type: none"> <li>• Radio signal received by rod antenna is amplified and transmitted to audio unit.</li> <li>• Power (antenna amp. ON signal) is supplied from audio unit.</li> </ul> <p style="padding-left: 20px;">Satellite radio antenna</p> <ul style="list-style-type: none"> <li>• Receives the satellite radio wave and outputs it to the satellite radio tuner.</li> </ul>
Satellite radio antenna	Sound signal (satellite radio) is received and output to satellite radio tuner.
Satellite radio tuner	<ul style="list-style-type: none"> <li>• Receives radio signals from satellite radio antenna.</li> <li>• Sends sound signals to audio unit.</li> </ul>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# HANDS-FREE PHONE SYSTEM

[BOSE AUDIO WITHOUT NAVIGATION]


< SYSTEM DESCRIPTION >

## HANDS-FREE PHONE SYSTEM


### System Diagram

INFOID:00000006709067

#### COUPE MODELS

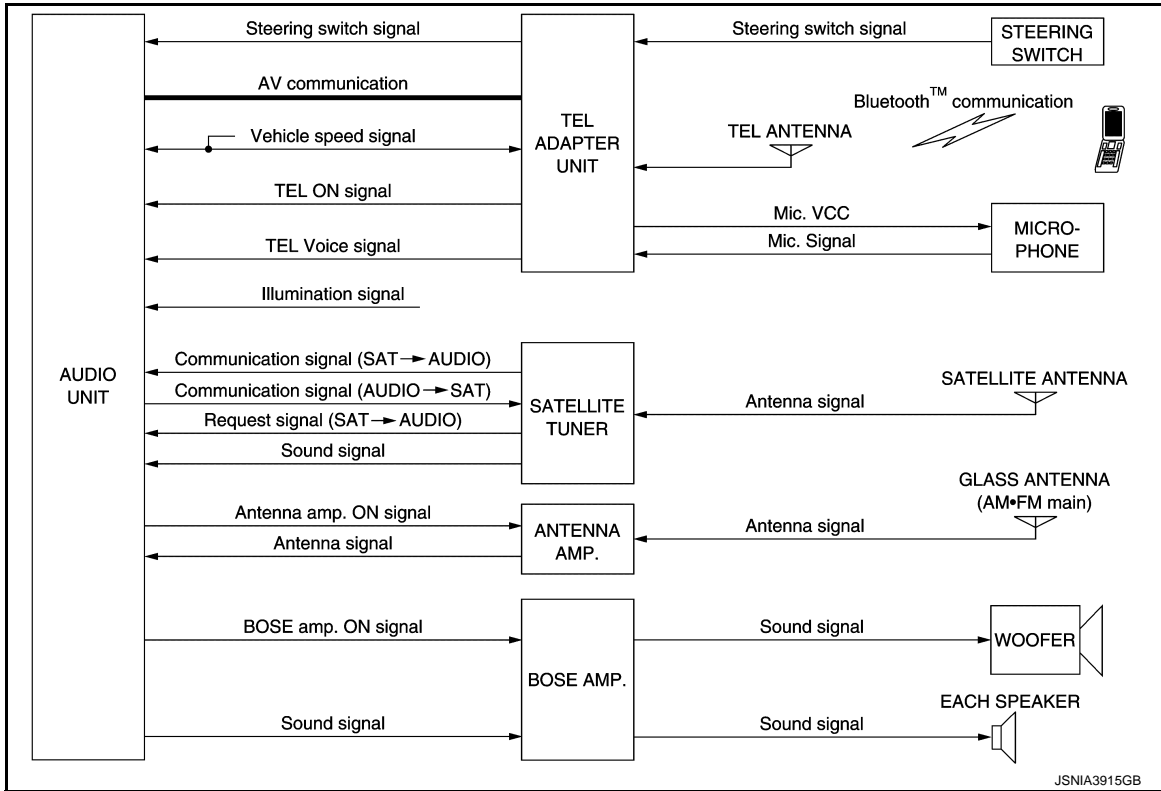

#### ROADSTER MODELS

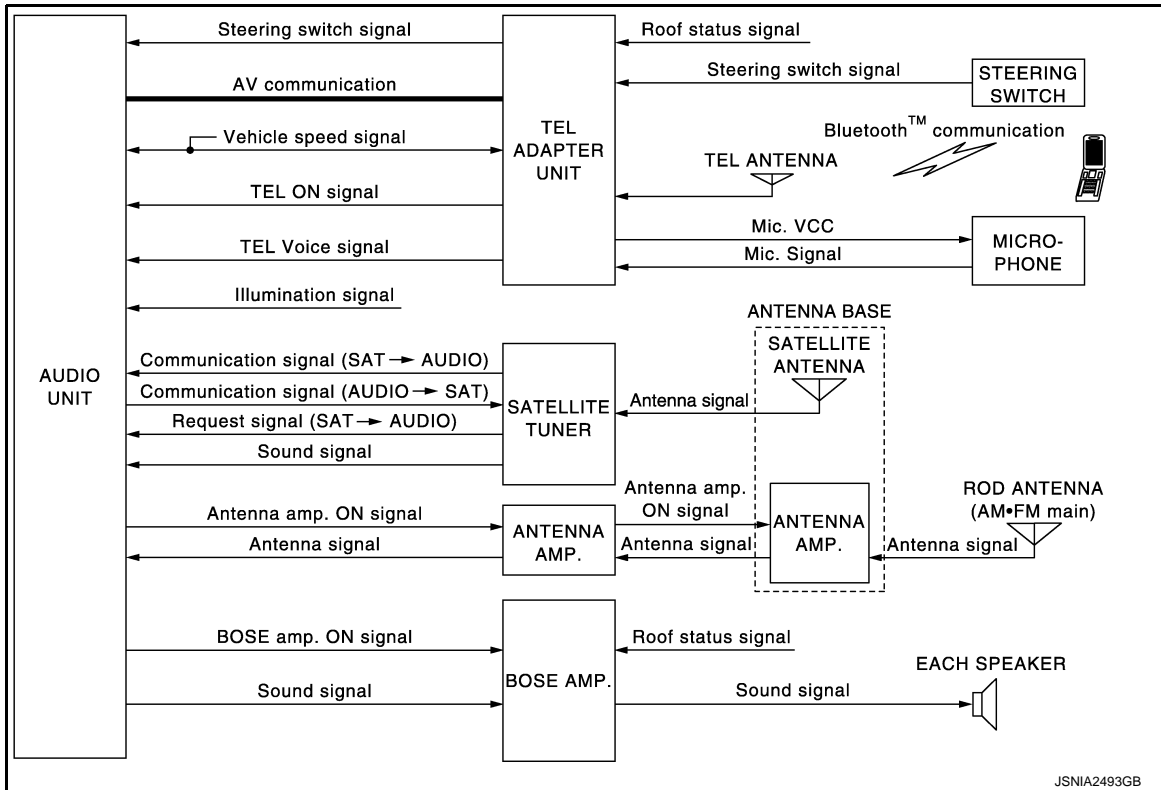

NOTE:




# HANDS-FREE PHONE SYSTEM

[BOSE AUDIO WITHOUT NAVIGATION]

## < SYSTEM DESCRIPTION >

An antenna base integrated with antenna amp. and satellite antenna are adopted.

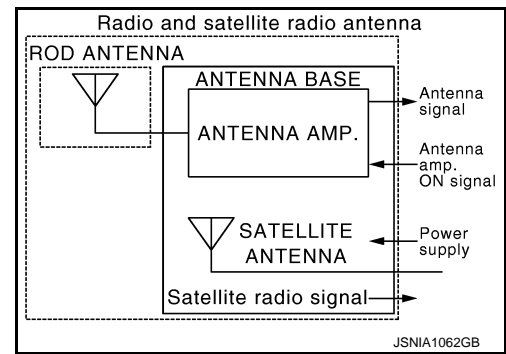

## System Description

INFOID:000000006709068

- The connection between portable telephone and TEL adapter unit is performed with Bluetooth™ communication.
- The voice guidance signal is input from the TEL adapter unit to the audio unit and output via BOSE amp. to the front speaker when operating the telephone.
- TEL adapter unit has the on board self-diagnosis function. Refer to [AV-55. "Diagnosis Description"](#).
- Start of hands-free phone system can be performed by steering switch.

### WHEN RECEIVING A CALL

Telephone voice signal received with the portable telephone is input from TEL antenna via TEL adapter unit to audio unit with Bluetooth™ communication and output via BOSE amp. to the front speaker. The operation is performed with the steering switch or voice recognition function.

### WHEN A CALL IS ORIGINATED

Speech sound (telephone voice signal) is input from the microphone to the TEL adapter unit. It is input from the TEL antenna via Bluetooth™ communication to the portable telephone. It is transmitted to the phone on the other side. The operation is performed with the steering switch or voice recognition function.

### VOICE RECOGNITION FUNCTION

- Each operation of multi AV system can be performed by inputting sound to microphone.
- Start of voice recognition system can be performed by steering switch.
- System operation is available only when the retractable soft top is closed. (roadster models)

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV

O  
P

# HANDS-FREE PHONE SYSTEM


[BOSE AUDIO WITHOUT NAVIGATION]

< SYSTEM DESCRIPTION >

## Component Parts Location

INFOID:000000006709069

### COUPE MODELS

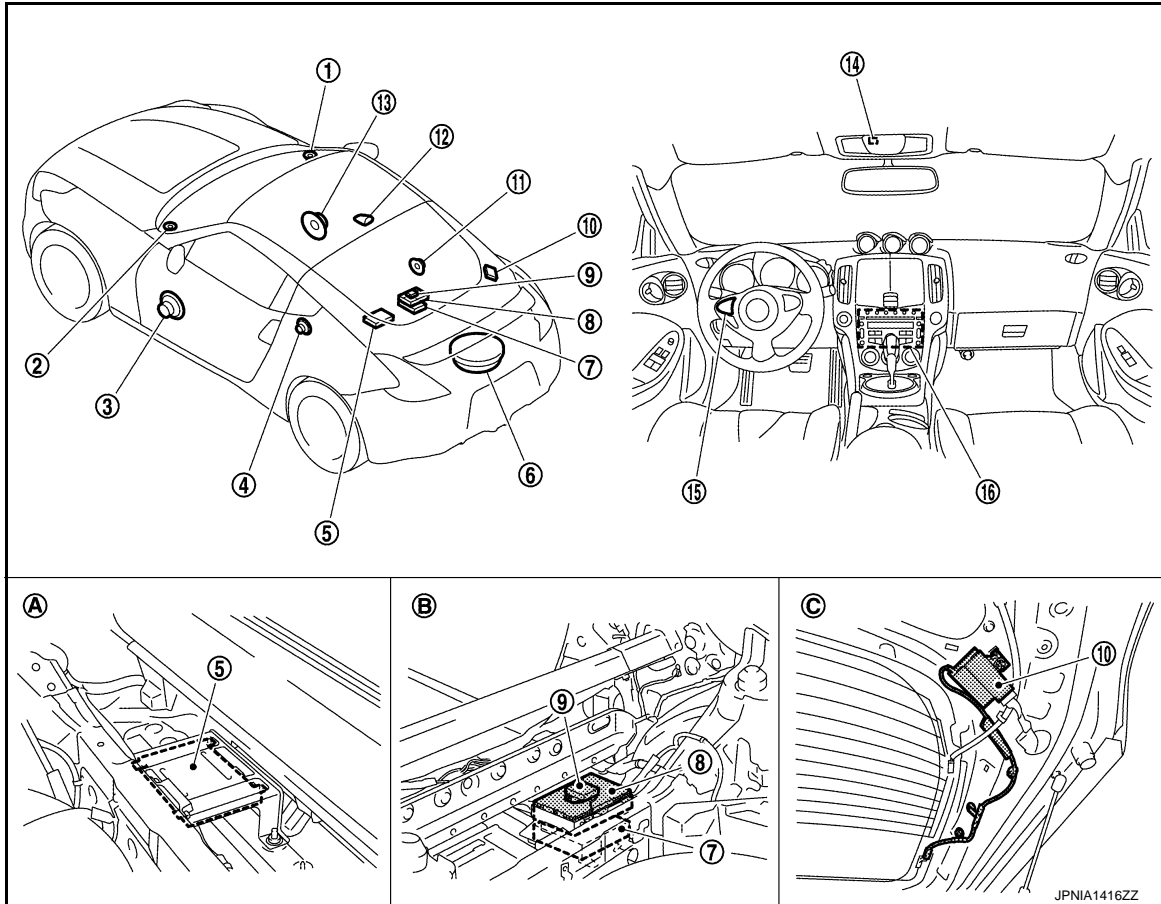

- |                           |                     |                              |
|---------------------------|---------------------|------------------------------|
| 1. Tweeter RH             | 2. Tweeter LH       | 3. Front door speaker LH     |
| 4. Rear speaker LH        | 5. BOSE amp.        | 6. Woofer                    |
| 7. Satellite radio tuner* | 8. TEL adapter unit | 9. TEL antenna               |
| 10. Antenna amp.          | 11. Rear speaker RH | 12. Satellite radio antenna* |
| 13. Front door speaker RH | 14. Microphone      | 15. Steering switch          |
| 16. Audio unit            |                     |                              |
| A. Luggage side LH        | B. Luggage side RH  | C. Back door side RH         |


\*: Except for Mexico models

# HANDS-FREE PHONE SYSTEM

[BOSE AUDIO WITHOUT NAVIGATION]

< SYSTEM DESCRIPTION >

ROADSTER MODELS

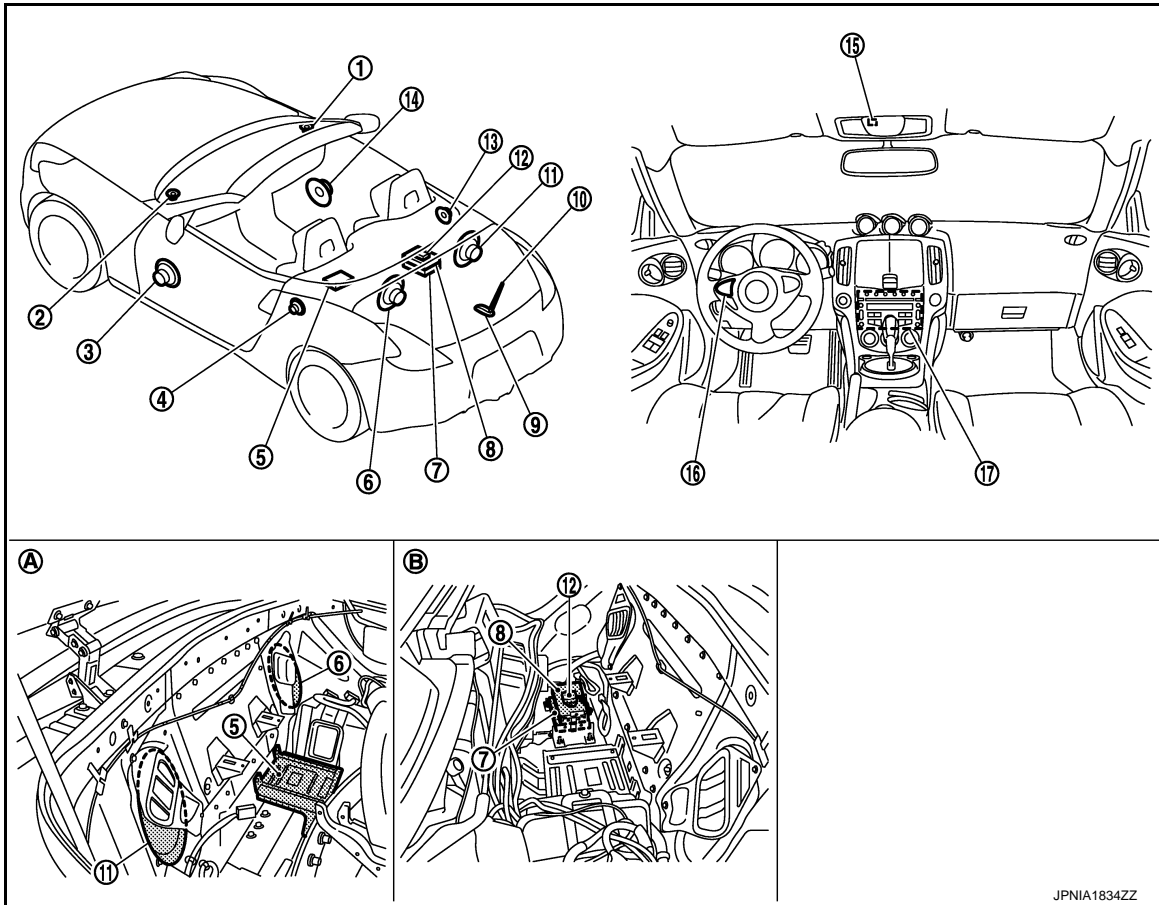

- |                          |                           |                          |
|--------------------------|---------------------------|--------------------------|
| 1. Tweeter RH            | 2. Tweeter LH             | 3. Front door speaker LH |
| 4. Rear speaker LH       | 5. BOSE amp.              | 6. Rear woofer LH        |
| 7. Satellite radio tuner | 8. TEL adapter unit       | 9. Antenna base          |
| 10. Rod antenna          | 11. Rear woofer RH        | 12. TEL antenna          |
| 13. Rear speaker RH      | 14. Front door speaker RH | 15. Microphone           |
| 16. Steering switch      | 17. Audio unit            |                          |
| A. Luggage side LH       | B. Luggage side RH        |                          |

## Component Description

INFOID:000000006709070

Part name	Description
Audio unit	<ul style="list-style-type: none"> <li>Receives telephone voice signal from TEL adapter unit.</li> <li>Sends telephone voice and voice guidance signals to BOSE amp.</li> <li>Audio unit and TEL adapter unit exchange data by AV communication, and control audio unit display.</li> <li>Receives the steering switch signal (operation signal) from the steering switch through TEL adapter unit.</li> </ul>
BOSE amp.	Inputs power (BOSE amp. ON) and sound signal from audio unit, and outputs sound signal to each speaker.
Front door speaker	Receives telephone voice and voice guidance signals from BOSE amp.
Tweeter	
Steering switch	<ul style="list-style-type: none"> <li>The hands-free phone system can be operated.</li> <li>Steering switch signal (operation signal) is output to audio unit through TEL adapter unit.</li> </ul>

# HANDS-FREE PHONE SYSTEM

[BOSE AUDIO WITHOUT NAVIGATION]

< SYSTEM DESCRIPTION >

Part name	Description
Microphone	<ul style="list-style-type: none"><li>• Uses when operating the hands-free phone.</li><li>• Outputs microphone signal (telephone voice signal) to the TEL adapter unit.</li><li>• The power (microphone power supply) is supplied from the TEL adapter unit.</li></ul>
TEL adapter unit	<ul style="list-style-type: none"><li>• Inputs the telephone voice signal from TEL antenna during reception and outputs into the audio unit.</li><li>• Inputs the telephone voice signal from microphone during speech recognition and outputs it to the TEL antenna.</li><li>• Input roof status signal from retractable soft top control unit. (roadster models)</li></ul>
TEL antenna	Connects with the portable telephone via Bluetooth™ communication and communicates the telephone voice signal.

# DIAGNOSIS SYSTEM (AUDIO UNIT)

[BOSE AUDIO WITHOUT NAVIGATION]

< SYSTEM DESCRIPTION >

## DIAGNOSIS SYSTEM (AUDIO UNIT)

### Diagnosis Description


INFOID:000000006709071

Self-diagnosis mode can check the following items.


- Audio unit hardware/software versions
- Continuity of each speaker channel
- Continuity of each audio unit switch

### OPERATION PROCEDURE

1. Turn ignition switch to the ON position.
2. Turn the audio unit off.
3. While pressing the “1” button, turn the volume control dial clockwise or counterclockwise 30 clicks or more. When the self-diagnosis mode is started, a short beep will be heard.

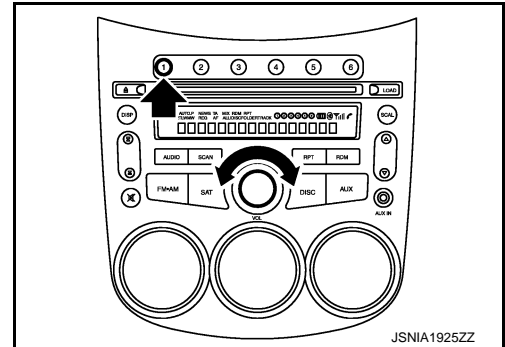


4. Initially, all display segments will be illuminated.

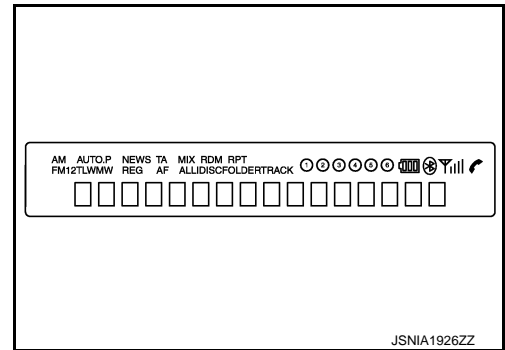

### Version Check

1. Press the “DISP” switch to enter version diagnostics. “Soft” (audio software version) is displayed.

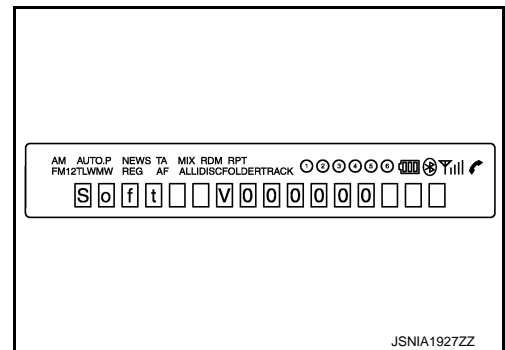


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

# DIAGNOSIS SYSTEM (AUDIO UNIT)


[BOSE AUDIO WITHOUT NAVIGATION]

< SYSTEM DESCRIPTION >


2. Press the "DISP" switch again to display the "Hard" (audio hardware version).

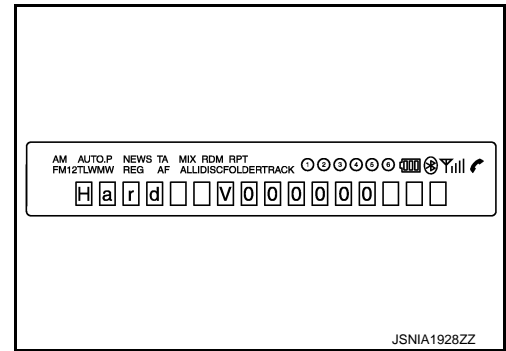

3. Press the "DISP" switch again to display the "CD Mech" (CD mechanism version).

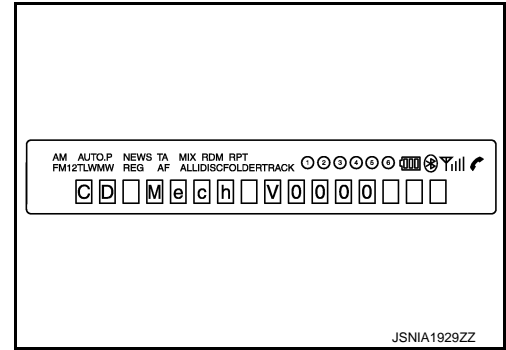


4. Press the "DISP" switch again to display the "EEP" (audio unit EEPROM version).

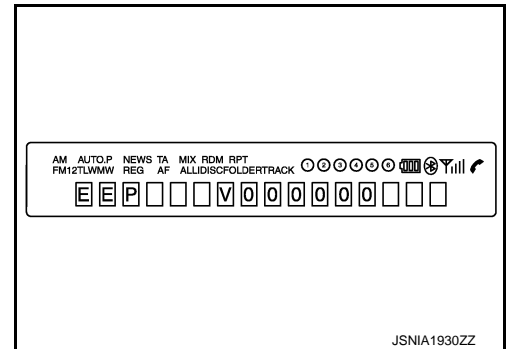

5. Press the "DISP" switch again to display the "SDARS" (satellite radio version).

**NOTE:**

Except for Mexico models

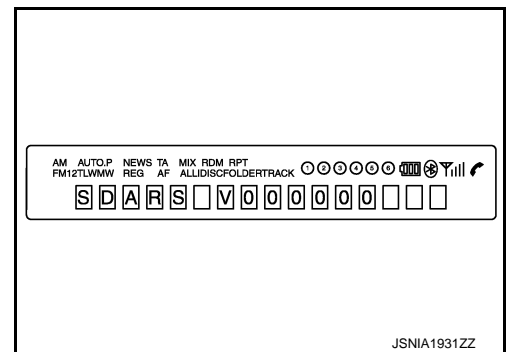

# DIAGNOSIS SYSTEM (TEL ADAPTER UNIT)

< SYSTEM DESCRIPTION >

[BOSE AUDIO WITHOUT NAVIGATION]

## DIAGNOSIS SYSTEM (TEL ADAPTER UNIT)

### Diagnosis Description

INFOID:000000006709072

#### HANDS FREE PHONE SYSTEM ON BOARD DIAGNOSIS

During on board diagnosis the diagnosis function of TEL adapter unit starts with the operation of the steering switch and performs the diagnosis when ignition switch ACC.

#### ON BOARD DIAGNOSIS ITEM

The on board diagnosis has 3 modes: the self-diagnosis mode that performs the trouble diagnosis, the speaker adaptation data deleting mode and the hands free phone system initialization mode.

#### CAUTION:

- Perform the diagnosis with the vehicle stopped.
- Perform STEP2 if necessary.

STEP	MODE	Description
STEP 1	Self-diagnosis	The self-diagnosis mode performs the microphone test and the diagnosis of TEL adapter unit, TEL antenna and steering unit, and then reads out the results with the sound and indicates them on the audio screen.
STEP 2	Hands free phone system initialization	Hands free phone system initialization mode can perform the initialization of hands free phone system.
	Speaker adaptation data deleting	The speaker adaptation data deleting mode can delete the speaker adaptation data.

#### SELF-DIAGNOSIS RESULTS

Self-diagnosis mode reads out the self-diagnosis results and indicates DTC on the audio screen.

#### NOTE:

- Error count is read out simultaneously when reading out the DTC name.
- The errors are read out continuously when some errors occur at the same time. The DTC displays are combined and displayed. For example, DTC 01100 is displayed when DTC 01000 and DTC 00100 are indicated at the same time.

#### Self-diagnosis results

DTC (Audio screen)	Failure message	Possible causes
DTC 10000	Internal failure	TEL adapter unit
DTC 01000	Bluetooth antenna open	TEL antenna
DTC 00100	Bluetooth antenna shorted	
DTC 00010	Button ladder A is stuck	Steering switch
DTC 00001	Button ladder B is stuck	
DTC 00000	There are no failure records to report	—

#### The Details of Error Count


The error count guides "0" when the error occurs. The next time it counts up "1" if it is normal with the ignition switch ON. It continues the count up unless the initialization of hands free phone system is performed.

# DIAGNOSIS SYSTEM (TEL ADAPTER UNIT)

[BOSE AUDIO WITHOUT NAVIGATION]

< SYSTEM DESCRIPTION >

## FLOW CHART OF TROUBLE DIAGNOSIS

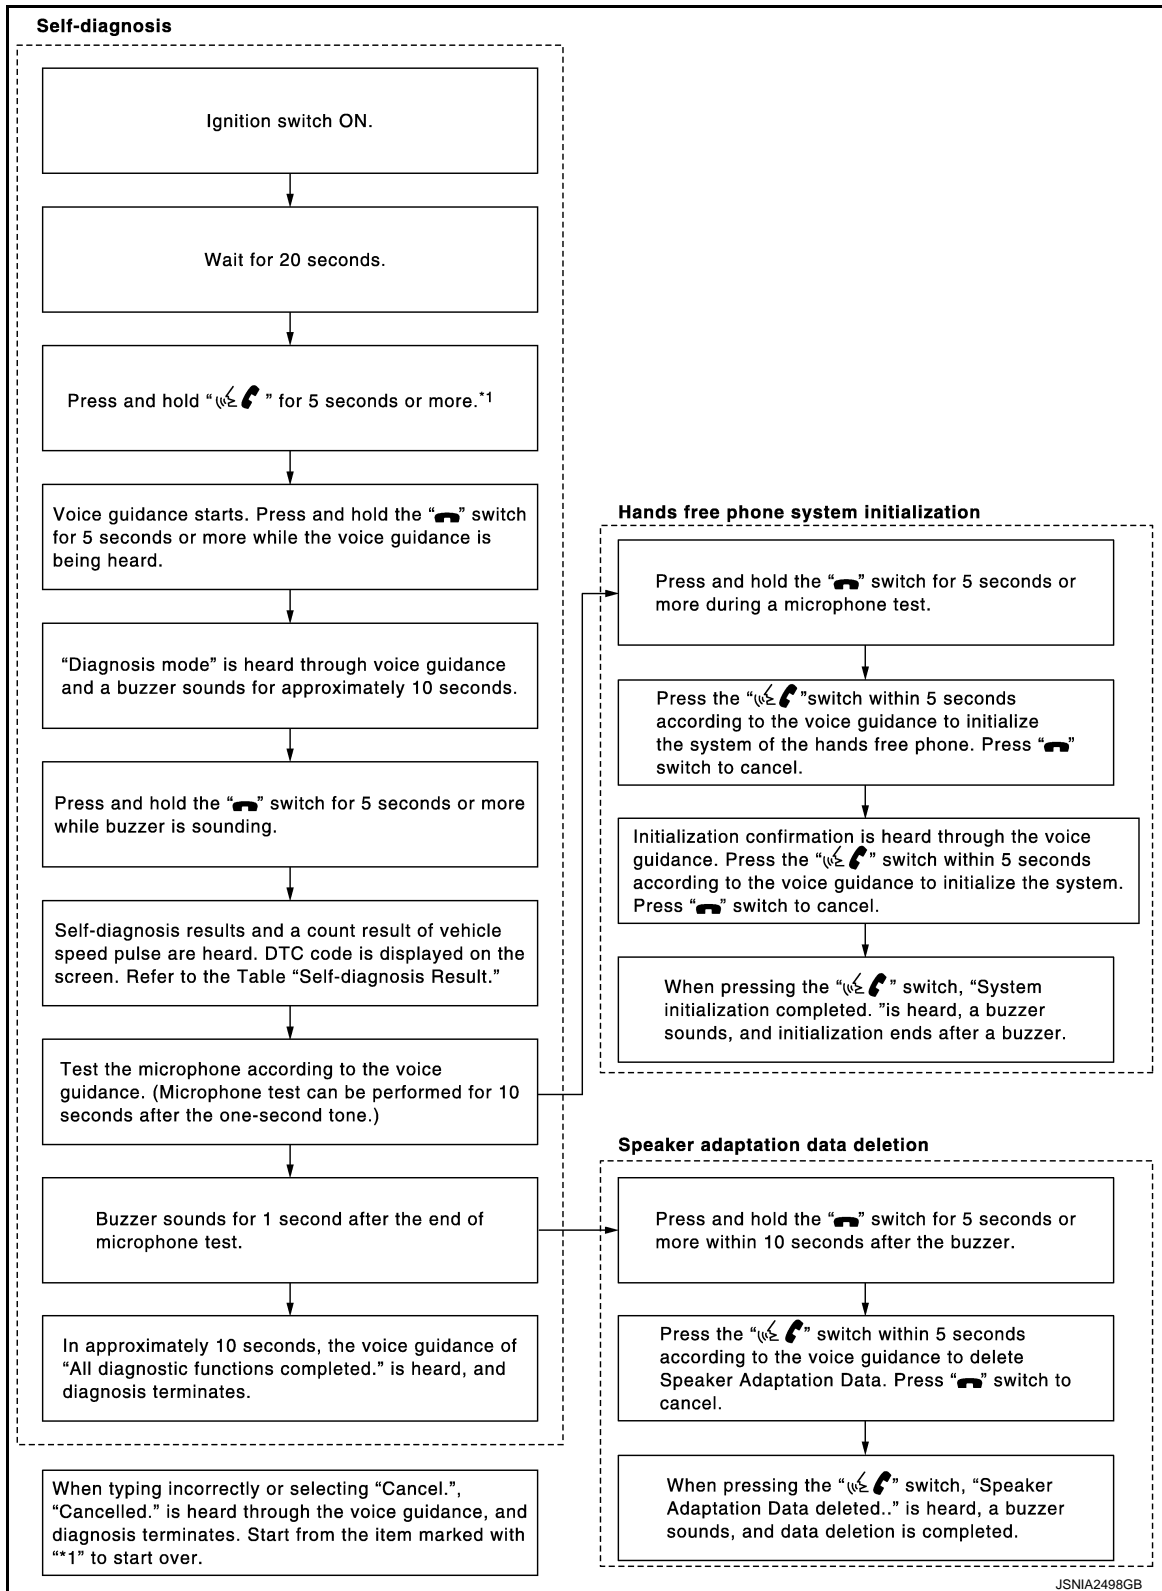



# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## DTC/CIRCUIT DIAGNOSIS

### POWER SUPPLY AND GROUND CIRCUIT AUDIO UNIT

#### AUDIO UNIT : Diagnosis Procedure

INFOID:000000006709073

#### 1.CHECK FUSE

Check that the following fuses of the audio unit are not blown.

Power source	Fuse No.
Battery	34
Ignition switch ACC or ON	19

Is inspection result OK?

YES >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

#### 2.CHECK AUDIO UNIT POWER SUPPLY CIRCUIT

Check voltage between the audio unit and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Voltage
Battery power supply	M81	19	OFF	Battery voltage
ACC power supply		7	ACC	

Is inspection result OK?

YES >> INSPECTION END

NO >> Check harness between audio unit and fuse.

### BOSE AMP.

#### BOSE AMP. : Diagnosis Procedure

INFOID:000000006709074

#### 1.CHECK FUSE

Check that the following fuses of the BOSE amp. are not blown.

Power source	Fuse No.
Battery	8

Is inspection result OK?

YES >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

#### 2.CHECK POWER SUPPLY CIRCUIT

Check voltage between BOSE speaker amp harness connector and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Voltage
Battery power supply	B42	11	OFF	Battery voltage

Is inspection result OK?

YES >> GO TO 3.

NO >> Check harness between BOSE amp. and fuse.

#### 3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BOSE amp. connector.
3. Check continuity between BOSE amp. harness connector and ground.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

Signal name	Connector No.	Terminal No.	Ignition switch position	Continuity
Ground	B42	12	OFF	Existed

Is inspection result OK?

YES >> INSPECTION END

NO >> Repair harness or connector.

## SATELLITE RADIO TUNER

### SATELLITE RADIO TUNER : Diagnosis Procedure

INFOID:000000006709075

#### 1.CHECK FUSES

Check that the following fuses of the satellite radio tuner are not blown.

Power source	Fuse No.
Battery	34
Ignition switch ACC or ON	19

Is inspection result OK?

YES >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

#### 2.CHECK POWER SUPPLY CIRCUIT

Check voltage between the satellite radio tuner and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Voltage
Battery power supply	B236	12	OFF	Battery voltage
ACC power supply		16	ACC	

Is inspection result OK?

YES >> INSPECTION END

NO >> Check harness between satellite radio tuner and fuse.

## TEL ADAPTER UNIT

### TEL ADAPTER UNIT : Diagnosis Procedure

INFOID:000000006709076

#### 1.CHECK FUSES

Check that the following fuses of the TEL adapter unit are not blown.

Power source	Fuse No.
Battery	34
Ignition switch ACC or ON	19

Is inspection result OK?

YES >> GO TO 2.

NO >> If fuse is blown, be sure to eliminate cause of malfunction before installing new fuse.

#### 2.CHECK POWER SUPPLY CIRCUIT

Check voltage between TEL adapter unit harness connector and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Voltage
Battery power supply	B237	1	OFF	Battery voltage
ACC power supply		2	ACC	

Is inspection result OK?

YES >> GO TO 3.

NO >> Check harness between TEL adapter unit and fuse.

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## 3. CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TEL adapter unit connector.
3. Check continuity between TEL adapter unit harness connector and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Continuity
Ground	B237	4	OFF	Existed

Is inspection result OK?

- YES >> INSPECTION END  
NO >> Repair harness or connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# STEERING SWITCH SIGNAL A CIRCUIT (STEERING SWITCH TO TEL ADAPTER UNIT)

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## STEERING SWITCH SIGNAL A CIRCUIT (STEERING SWITCH TO TEL ADAPTER UNIT)

### Description

INFOID:000000006709077

- Transmits the steering switch signal to audio unit.
- Transmits the steering switch signal to audio unit through TEL adapter unit.

### Diagnosis Procedure

INFOID:000000006709078

#### 1. CHECK STEERING SWITCH SIGNAL A CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TEL adapter unit connector and spiral cable connector.
3. Check continuity between TEL adapter unit harness connector and spiral cable harness connector.

TEL adapter unit		Spiral cable		Continuity
Connector	Terminal	Connector	Terminal	
B237	12	M36	24	Existed

4. Check continuity between TEL adapter unit harness connector and ground.

TEL adapter unit		Ground	Continuity
Connector	Terminal		
B237	12		Not existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

#### 2. CHECK SPIRAL CABLE

Check spiral cable.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace spiral cable. Refer to [SR-17, "Removal and Installation"](#).

#### 3. CHECK TEL ADAPTER UNIT VOLTAGE

1. Connect TEL adapter unit connector and spiral cable connector.
2. Turn ignition switch ON.
3. Check voltage between TEL adapter unit harness connector.

(+)		(-)		Voltage (Approx.)
TEL adapter unit		TEL adapter unit		
Connector	Terminal	Connector	Terminal	
B237	12	B237	14	5.0 V

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace TEL adapter unit. Refer to [AV-133, "Removal and Installation"](#).

#### 4. CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-61, "Component Inspection"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace steering switch. Refer to [AV-132, "Removal and Installation"](#).

# STEERING SWITCH SIGNAL A CIRCUIT (STEERING SWITCH TO TEL ADAPTER UNIT)


< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## Component Inspection

INFOID:000000006709079

Measure the resistance between the steering switch connector.

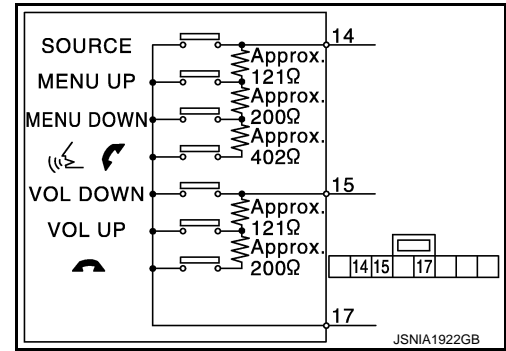

Standard

Steering switch		Condition	Resistance Ω
Terminal	Terminal		
14	17	☞ switch ON	709 – 737
		MENU DOWN switch ON	315 – 327
		MENU UP switch ON	119 – 123
		SOURCE switch ON	0
15	17	VOL DOWN switch ON	0
		VOL UP switch ON	119 – 123
		☞ switch ON	315 – 327

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV

O  
P

# STEERING SWITCH SIGNAL B CIRCUIT (STEERING SWITCH TO TEL ADAPTER UNIT)

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## STEERING SWITCH SIGNAL B CIRCUIT (STEERING SWITCH TO TEL ADAPTER UNIT)

### Description

INFOID:000000006709080

- Transmits the steering switch signal to audio unit.
- Transmits the steering switch signal to audio unit through TEL adapter unit.

### Diagnosis Procedure

INFOID:000000006709081

#### 1. CHECK STEERING SWITCH SIGNAL B CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TEL adapter unit connector and spiral cable connector.
3. Check continuity between TEL adapter unit harness connector and spiral cable harness connector.

TEL adapter unit		Spiral cable		Continuity
Connector	Terminal	Connector	Terminal	
B237	13	M36	31	Existed

4. Check continuity between TEL adapter unit harness connector and ground.

TEL adapter unit		Ground	Continuity
Connector	Terminal		
B237	13		Not existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

#### 2. CHECK SPIRAL CABLE

Check spiral cable.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace spiral cable. Refer to [SR-17, "Removal and Installation"](#).

#### 3. CHECK TEL ADAPTER UNIT VOLTAGE

1. Connect TEL adapter unit connector and spiral cable connector.
2. Turn ignition switch ON.
3. Check voltage between TEL adapter unit harness connector.

(+)		(-)		Voltage (Approx.)
TEL adapter unit		TEL adapter unit		
Connector	Terminal	Connector	Terminal	
B237	13	B237	14	5.0 V

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace TEL adapter unit. Refer to [AV-133, "Removal and Installation"](#).

#### 4. CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-63, "Component Inspection"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace steering switch. Refer to [AV-132, "Removal and Installation"](#).

# STEERING SWITCH SIGNAL B CIRCUIT (STEERING SWITCH TO TEL ADAPTER UNIT)


< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## Component Inspection

INFOID:000000006709082

Measure the resistance between the steering switch connector.

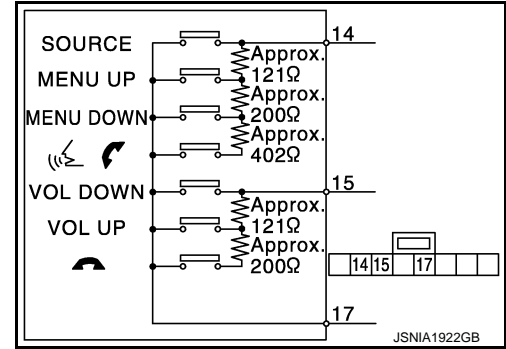

Standard

Steering switch		Condition	Resistance Ω
Terminal	Terminal		
14	17	⏻ switch ON	709 – 737
		MENU DOWN switch ON	315 – 327
		MENU UP switch ON	119 – 123
		SOURCE switch ON	0
15	17	VOL DOWN switch ON	0
		VOL UP switch ON	119 – 123
		⏻ switch ON	315 – 327

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV

O  
P

# STEERING SWITCH SIGNAL GND CIRCUIT (STEERING SWITCH TO TEL ADAPTER UNIT)

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## STEERING SWITCH SIGNAL GND CIRCUIT (STEERING SWITCH TO TEL ADAPTER UNIT)

### Description

INFOID:000000006709083

- Transmits the steering switch signal to audio unit.
- Transmits the steering switch signal to audio unit through TEL adapter unit.

### Diagnosis Procedure

INFOID:000000006709084

#### 1.CHECK STEERING SWITCH SIGNAL GND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TEL adapter unit connector and spiral cable connector.
3. Check continuity between TEL adapter unit harness connector and spiral cable harness connector.

TEL adapter unit		Spiral cable		Continuity
Connector	Terminal	Connector	Terminal	
B237	14	M36	33	Existed

4. Connect TEL adapter unit connector.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

#### 2.CHECK SPIRAL CABLE

Check spiral cable.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace spiral cable. Refer to [SR-17, "Removal and Installation"](#).

#### 3.CHECK GROUND CIRCUIT

1. Connect TEL adapter unit connector.
2. Check continuity between TEL adapter unit harness connector and ground.

TEL adapter unit		Ground	Continuity
Connector	Terminal		
B237	14		Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace TEL adapter unit. Refer to [AV-133, "Removal and Installation"](#).

#### 4.CHECK STEERING SWITCH

Check steering switch. Refer to [AV-65, "Component Inspection"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace steering switch. Refer to [AV-132, "Removal and Installation"](#).



# STEERING SWITCH SIGNAL GND CIRCUIT (STEERING SWITCH TO TEL ADAPTER UNIT)


< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## Component Inspection

INFOID:000000006709085

Measure the resistance between the steering switch connector.

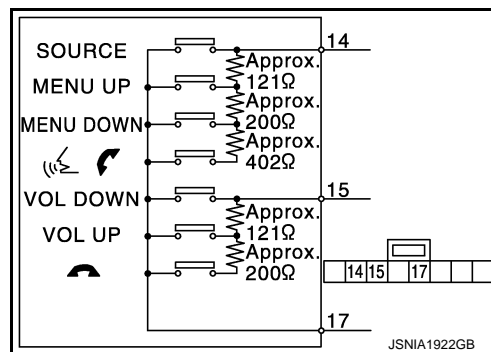

Standard

Steering switch		Condition	Resistance Ω
Terminal	Terminal		
14	17	☞ switch ON	709 – 737
		MENU DOWN switch ON	315 – 327
		MENU UP switch ON	119 – 123
		SOURCE switch ON	0
15	17	VOL DOWN switch ON	0
		VOL UP switch ON	119 – 123
		☞ switch ON	315 – 327

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV

O  
P

# STEERING SWITCH SIGNAL A CIRCUIT (TEL ADAPTER UNIT TO AUDIO UNIT) [BOSE AUDIO WITHOUT NAVIGATION]

< DTC/CIRCUIT DIAGNOSIS >

## STEERING SWITCH SIGNAL A CIRCUIT (TEL ADAPTER UNIT TO AUDIO UNIT)

### Description

INFOID:000000006709086

- Transmits the steering switch signal to audio unit.
- Transmits the steering switch signal to audio unit through TEL adapter unit.

### Diagnosis Procedure

INFOID:000000006709087

#### 1. CHECK STEERING SWITCH SIGNAL A CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect audio unit connector and TEL adapter unit connector.
3. Check continuity between audio unit harness connector and TEL adapter unit harness connector.

Audio unit		TEL adapter unit		Continuity
Connector	Terminal	Connector	Terminal	
M81	6	B237	17	Existed

4. Check continuity between audio unit harness connector and ground.

Audio unit		Ground	Continuity
Connector	Terminal		
M81	6		Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair harness or connector.

#### 2. CHECK TEL ADAPTER UNIT POWER SUPPLY

Check TEL adapter unit power supply. Refer to [AV-58, "TEL ADAPTER UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Replace TEL adapter unit. Refer to [AV-133, "Removal and Installation"](#).

#### 3. CHECK AUDIO UNIT VOLTAGE

1. Connect audio unit connector and TEL adapter unit connector.
2. Turn ignition switch ON.
3. Check voltage between audio unit harness connector.

(+)		(-)		Voltage (Approx.)
Audio unit		Audio unit		
Connector	Terminal	Connector	Terminal	
M81	6	M81	15	5.0 V

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Replace audio unit. Refer to [AV-121, "Removal and Installation"](#).

#### 4. CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-67, "Component Inspection"](#).

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace steering switch. Refer to [AV-132, "Removal and Installation"](#).


# STEERING SWITCH SIGNAL A CIRCUIT (TEL ADAPTER UNIT TO AUDIO UNIT) [BOSE AUDIO WITHOUT NAVIGATION]

< DTC/CIRCUIT DIAGNOSIS >

INFOID:000000006709088

## Component Inspection

Measure the resistance between the steering switch connector.

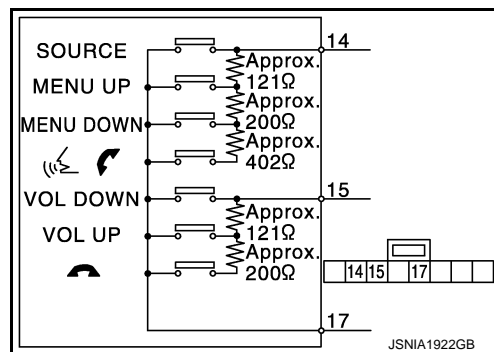

Standard

Steering switch		Condition	Resistance Ω
Terminal	Terminal		
14	17	☞ switch ON	709 – 737
		MENU DOWN switch ON	315 – 327
		MENU UP switch ON	119 – 123
		SOURCE switch ON	0
15	17	VOL DOWN switch ON	0
		VOL UP switch ON	119 – 123
		☞ switch ON	315 – 327

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV

O  
P

# STEERING SWITCH SIGNAL B CIRCUIT (TEL ADAPTER UNIT TO AUDIO UNIT) [BOSE AUDIO WITHOUT NAVIGATION]

< DTC/CIRCUIT DIAGNOSIS >

## STEERING SWITCH SIGNAL B CIRCUIT (TEL ADAPTER UNIT TO AUDIO UNIT)

### Description

INFOID:000000006709089

- Transmits the steering switch signal to audio unit.
- Transmits the steering switch signal to audio unit through TEL adapter unit.

### Diagnosis Procedure

INFOID:000000006709090

#### 1. CHECK STEERING SWITCH SIGNAL B CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect audio unit connector and TEL adapter unit connector.
3. Check continuity between audio unit harness connector and TEL adapter unit harness connector.

Audio unit		TEL adapter unit		Continuity
Connector	Terminal	Connector	Terminal	
M81	16	B237	18	Existed

4. Check continuity between audio unit harness connector and ground.

Audio unit		Ground	Continuity
Connector	Terminal		
M81	16		Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair harness or connector.

#### 2. CHECK TEL ADAPTER UNIT POWER SUPPLY

Check TEL adapter unit power supply.

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Replace TEL adapter unit. Refer to [AV-133, "Removal and Installation"](#).

#### 3. CHECK AUDIO UNIT VOLTAGE

1. Connect audio unit connector and TEL adapter unit connector.
2. Turn ignition switch ON.
3. Check voltage between audio unit harness connector.

(+)		(-)		Voltage (Approx.)
Audio unit		Audio unit		
Connector	Terminal	Connector	Terminal	
M81	16	M81	15	5.0 V

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Replace audio unit. Refer to [AV-121, "Removal and Installation"](#).

#### 4. CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-69, "Component Inspection"](#).

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace steering switch. Refer to [AV-132, "Removal and Installation"](#).


# STEERING SWITCH SIGNAL B CIRCUIT (TEL ADAPTER UNIT TO AUDIO UNIT) [BOSE AUDIO WITHOUT NAVIGATION]

< DTC/CIRCUIT DIAGNOSIS >

## Component Inspection

INFOID:000000006709091

Measure the resistance between the steering switch connector.

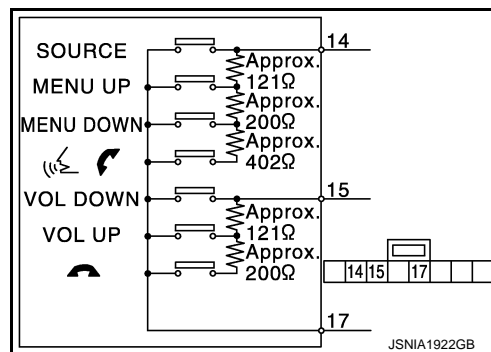

Standard

Steering switch		Condition	Resistance Ω
Terminal	Terminal		
14	17	☞ switch ON	709 – 737
		MENU DOWN switch ON	315 – 327
		MENU UP switch ON	119 – 123
		SOURCE switch ON	0
15	17	VOL DOWN switch ON	0
		VOL UP switch ON	119 – 123
		☞ switch ON	315 – 327

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV

O  
P

# STEERING SWITCH SIGNAL GND CIRCUIT (TEL ADAPTER UNIT TO AUDIO UNIT)

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## STEERING SWITCH SIGNAL GND CIRCUIT (TEL ADAPTER UNIT TO AUDIO UNIT)

### Description

INFOID:000000006709092

- Transmits the steering switch signal to audio unit.
- Transmits the steering switch signal to audio unit through TEL adapter unit.

### Diagnosis Procedure

INFOID:000000006709093

#### 1. CHECK STEERING SWITCH SIGNAL GND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect audio unit connector and TEL adapter unit connector.
3. Check continuity between audio unit harness connector and TEL adapter unit harness connector.

Audio unit		TEL adapter unit		Continuity
Connector	Terminal	Connector	Terminal	
M81	15	B237	19	Existed

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair harness or connector.

#### 2. CHECK GROUND CIRCUIT

1. Connect audio unit connector.
2. Check continuity between audio unit harness connector and ground.

Audio unit		Ground	Continuity
Connector	Terminal		
M81	15		Existed

Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> Replace audio unit. Refer to [AV-121, "Removal and Installation"](#).

#### 3. CHECK STEERING SWITCH

Check steering switch. Refer to [AV-70, "Component Inspection"](#).


Is the inspection result normal?

- YES >> INSPECTION END  
 NO >> Replace steering switch. Refer to [AV-132, "Removal and Installation"](#).

### Component Inspection

INFOID:000000006709094

Measure the resistance between the steering switch connector.

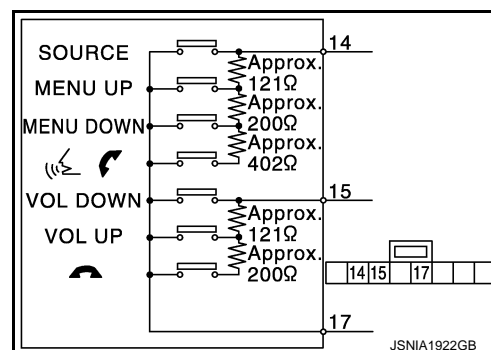



# STEERING SWITCH SIGNAL GND CIRCUIT (TEL ADAPTER UNIT TO AUDIO UNIT)

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

Standard

Steering switch		Condition	Resistance Ω
Terminal	Terminal		
14	17	 switch ON	709 – 737
		MENU DOWN switch ON	315 – 327
		MENU UP switch ON	119 – 123
		SOURCE switch ON	0
15	17	VOL DOWN switch ON	0
		VOL UP switch ON	119 – 123
		 switch ON	315 – 327

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# STEERING SWITCH SIGNAL A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## STEERING SWITCH SIGNAL A CIRCUIT

### Description

INFOID:000000006709095

Transmits the steering switch signal to audio unit.

### Diagnosis Procedure

INFOID:000000006709096

#### 1.CHECK STEERING SWITCH SIGNAL A CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect audio unit connector and spiral cable connector.
3. Check continuity between audio unit harness connector and spiral cable harness connector.

Audio unit		Spiral cable		Continuity
Connector	Terminal	Connector	Terminal	
M81	6	M36	24	Existed

4. Check continuity between audio unit harness connector and ground.

Audio unit		Ground	Continuity
Connector	Terminal		
M81	6		Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair harness or connector.

#### 2.CHECK SPIRAL CABLE

Check spiral cable.

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Replace spiral cable. Refer to [SR-17. "Removal and Installation"](#).

#### 3.CHECK AUDIO UNIT VOLTAGE

1. Connect audio unit connector and spiral cable connector.
2. Turn ignition switch ON.
3. Check voltage between audio unit harness connector.

(+)		(-)		Voltage (Approx.)
Audio unit		Audio unit		
Connector	Terminal	Connector	Terminal	
M81	6	M81	15	5.0 V

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Replace audio unit. Refer to [AV-121. "Removal and Installation"](#).

#### 4.CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-73. "Component Inspection"](#).

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace steering switch. Refer to [AV-132. "Removal and Installation"](#).



# STEERING SWITCH SIGNAL A CIRCUIT


< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## Component Inspection

INFOID:000000006709097

Measure the resistance between the steering switch connector.

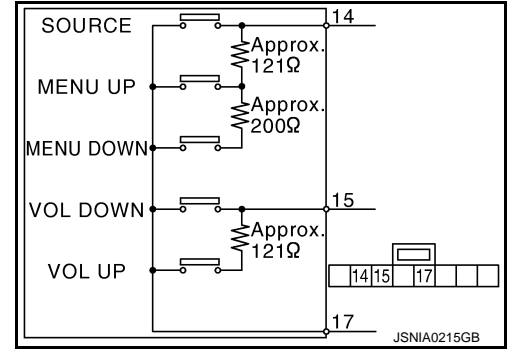

Standard

Steering switch		Condition	Resistance Ω
Terminal	Terminal		
14	17	MENU DOWN switch ON	315 – 327
		MENU UP switch ON	119 – 123
		SOURCE switch ON	0
15	17	VOL UP switch ON	119 – 123
		VOL DOWN switch ON	0

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV

O  
P

# STEERING SWITCH SIGNAL B CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## STEERING SWITCH SIGNAL B CIRCUIT

### Description

INFOID:000000006709098

Transmits the steering switch signal to audio unit.

### Diagnosis Procedure

INFOID:000000006709099

#### 1.CHECK STEERING SWITCH SIGNAL B CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect audio unit connector and spiral cable connector.
3. Check continuity between audio unit harness connector and spiral cable harness connector.

Audio unit		Spiral cable		Continuity
Connector	Terminal	Connector	Terminal	
M81	16	M36	31	Existed

4. Check continuity between audio unit harness connector and ground.

Audio unit		Ground	Continuity
Connector	Terminal		
M81	16		Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair harness or connector.

#### 2.CHECK SPIRAL CABLE

Check spiral cable.

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Replace spiral cable. Refer to [SR-17. "Removal and Installation"](#).

#### 3.CHECK AUDIO UNIT VOLTAGE

1. Connect audio unit connector and spiral cable connector.
2. Turn ignition switch ON.
3. Check voltage between audio unit harness connector.

(+)		(-)		Voltage (Approx.)
Audio unit		Audio unit		
Connector	Terminal	Connector	Terminal	
M80	16	M80	15	5.0 V

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Replace audio unit. Refer to [AV-121. "Removal and Installation"](#).

#### 4.CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-75. "Component Inspection"](#).

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace steering switch. Refer to [AV-132. "Removal and Installation"](#).

# STEERING SWITCH SIGNAL B CIRCUIT


< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## Component Inspection

INFOID:000000006709100

Measure the resistance between the steering switch connector.

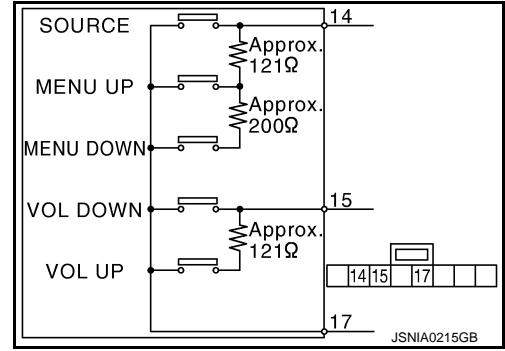

Standard

Steering switch		Condition	Resistance Ω
Terminal	Terminal		
14	17	MENU DOWN switch ON	315 – 327
		MENU UP switch ON	119 – 123
		SOURCE switch ON	0
15	17	VOL UP switch ON	119 – 123
		VOL DOWN switch ON	0

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV

O  
P

# STEERING SWITCH SIGNAL GND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## STEERING SWITCH SIGNAL GND CIRCUIT

### Description

INFOID:000000006709101

Transmits the steering switch signal to audio unit.

### Diagnosis Procedure

INFOID:000000006709102

#### 1. CHECK STEERING SWITCH SIGNAL A CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect audio unit connector and spiral cable connector.
3. Check continuity between audio unit harness connector and spiral cable harness connector.

Audio unit		Spiral cable		Continuity
Connector	Terminal	Connector	Terminal	
M81	15	M36	33	Existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair harness or connector.

#### 2. CHECK SPIRAL CABLE

Check spiral cable.

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Replace spiral cable. Refer to [SR-17, "Removal and Installation"](#).

#### 3. CHECK GROUND CIRCUIT

1. Connect audio unit connector and spiral cable connector.
2. Turn ignition switch ON.
3. Check continuity between audio unit harness connector.

Audio unit		Ground	Continuity
Connector	Terminal		
M81	15		Existed

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Replace audio unit. Refer to [AV-121, "Removal and Installation"](#).

#### 4. CHECK STEERING SWITCH

Check steering switch. Refer to [AV-77, "Component Inspection"](#).

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace steering switch. Refer to [AV-132, "Removal and Installation"](#).

# STEERING SWITCH SIGNAL GND CIRCUIT


< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## Component Inspection

INFOID:000000006709103

Measure the resistance between the steering switch connector.

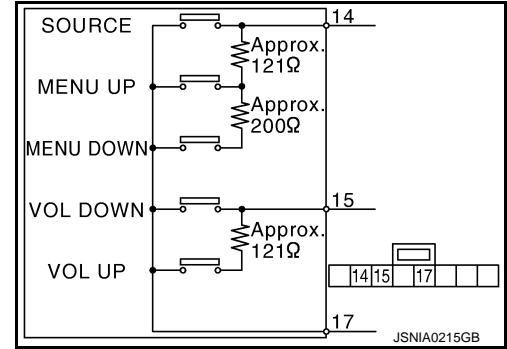

Standard

Steering switch		Condition	Resistance Ω
Terminal	Terminal		
14	17	MENU DOWN switch ON	315 – 327
		MENU UP switch ON	119 – 123
		SOURCE switch ON	0
15	17	VOL UP switch ON	119 – 123
		VOL DOWN switch ON	0

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

# COMMUNICATION SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## COMMUNICATION SIGNAL CIRCUIT

### Description

INFOID:000000006709104

Satellite radio tuner and audio unit are connected with a serial communication. They transmit the operation signal from audio unit to satellite radio tuner.

### Diagnosis Procedure

INFOID:000000006709105

#### 1. CHECK CONTINUITY COMMUNICATION SIGNAL (AUDIO-SAT) CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect satellite radio tuner connector and audio unit connector.
3. Check continuity between satellite radio tuner harness connector and audio unit harness connector.

Satellite radio tuner		Audio unit		Continuity
Connector	Terminal	Connector	Terminal	
B236	9	M83	39	Existed
	10		40	Existed

4. Check continuity between satellite radio tuner harness connector and ground.

Satellite radio tuner		Ground	Continuity
Connector	Terminal		
B236	9		Not existed
	10		

#### Is inspection result OK?

- YES >> GO TO 2.  
NO >> Repair harness or connector.

#### 2. CHECK AUDIO UNIT

1. Connect audio unit connector.
2. Turn ignition switch ON.
3. Check voltage between audio unit harness connector and ground.

Audio unit		Ground	Voltage (Approx.)
Connector	Terminal		
M83	39		4.0 V

#### Is inspection result OK?

- YES >> GO TO 3.  
NO >> Replace audio unit. Refer to [AV-121, "Removal and Installation"](#).

#### 3. CHECK SATELLITE RADIO TUNER

1. Turn ignition switch OFF.
2. Disconnect audio unit connector, and connect satellite radio tuner connector.
3. Turn ignition switch ON.
4. Check voltage between satellite radio tuner harness connector and ground.

Satellite radio tuner		Ground	Voltage (Approx)
Connector	Terminal		
B236	10		7.5 V

#### Is inspection result OK?

- YES >> GO TO 4.  
NO >> Replace satellite radio tuner. Refer to [AV-130, "Removal and Installation"](#).


# COMMUNICATION SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## 4. CHECK COMMUNICATION SIGNAL (SAT-AUDIO)

1. Turn ignition switch OFF.
2. Connect audio unit connector.
3. Turn ignition switch ON.
4. Check signal between satellite radio tuner harness connector and ground.

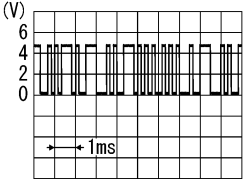Satellite radio tuner		Condition	Reference value
Connector	Terminal		
B236	9	Ground	<div style="text-align: center;">  <p style="font-size: small; margin-top: 5px;">PKIB5039J</p> </div>


Is inspection result OK?

YES >> GO TO 5.

NO >> Replace satellite radio tuner. Refer to [AV-130, "Removal and Installation"](#).

## 5. CHECK COMMUNICATION SIGNAL (AUDIO-SAT)

Check signal between audio unit harness connector and ground.

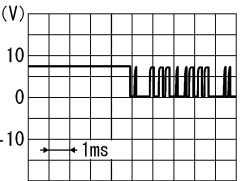Audio unit		Condition	Reference value
Connector	Terminal		
B83	40	Ground	<div style="text-align: center;">  <p style="font-size: small; margin-top: 5px;">SKIA9301J</p> </div>

Is inspection result OK?

YES >> INSPECTION END

NO >> Replace audio unit. Refer to [AV-121, "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV

O  
P

# REQUEST SIGNAL CIRCUIT (SAT TO AUDIO)

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## REQUEST SIGNAL CIRCUIT (SAT TO AUDIO)

### Description

INFOID:00000006709106

Request signal transmits the signal to recognize the connection of satellite radio tuner from satellite radio tuner to audio unit.

### Diagnosis Procedure

INFOID:00000006709107

#### 1. CHECK CONTINUITY REQUEST SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect satellite radio tuner connector and audio unit connector.
3. Check continuity between satellite radio tuner unit harness connector and audio unit harness connector.

Satellite radio tuner		Audio unit		Continuity
Connector	Terminal	Connector	Terminal	
B236	8	M83	38	Existed

4. Check continuity between satellite radio tuner harness connector and ground.

Satellite radio tuner		Ground	Continuity
Connector	Terminal		
B236	8		Not existed

Is inspection result OK?

- YES >> GO TO 2.  
 NO >> Repair harness or connector.

#### 2. CHECK AUDIO UNIT

1. Connect audio unit connector.
2. Turn ignition switch ON.
3. Check voltage between audio unit harness connector and ground.


Audio unit		Ground	Voltage (Approx.)
Connector	Terminal		
M83	38		4.0 V

Is inspection result OK?

- YES >> GO TO 3.  
 NO >> Replace audio unit. Refer to [AV-121, "Removal and Installation"](#).

#### 3. CHECK CONTINUITY REQUEST SIGNAL

1. Turn ignition switch OFF.
2. Connect satellite radio tuner connector.
3. Turn ignition switch ON.
4. Check signal between satellite radio tuner harness connector and ground.

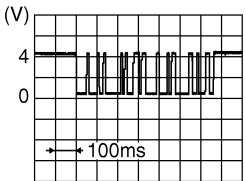Satellite radio tuner		Ground	Condition	Reference value
Connector	Terminal			
B236	8		When satellite radio mode is selected.	 <p>JSNIA0675ZZ</p>



# REQUEST SIGNAL CIRCUIT (SAT TO AUDIO)

[BOSE AUDIO WITHOUT NAVIGATION]

< DTC/CIRCUIT DIAGNOSIS >

Is inspection result OK?

YES >> INSPECTION END

NO >> Replace satellite radio tuner. Refer to [AV-130. "Removal and Installation"](#).

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

# BOSE AMP. ON SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## BOSE AMP. ON SIGNAL CIRCUIT

### Description

INFOID:000000006709108

When the audio system is turned on, a voltage signal is supplied from the audio unit to the BOSE amp. When this signal is received, the BOSE amp. will turn on.

### Diagnosis Procedure

INFOID:000000006709109

#### 1. CHECK CONTINUITY AMP. ON SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect audio unit connector and BOSE amp. connector.
3. Check continuity between audio unit harness connector and BOSE amp. harness connector.

Audio unit		BOSE amp.		Continuity
Connector	Terminal	Connector	Terminal	
M81	1	B41	31	Existed

4. Check continuity between audio unit harness connector and ground.

Audio unit		Ground	Continuity
Connector	Terminal		
M81	1		Not existed

#### Is inspection result OK?

- YES >> GO TO 2.  
NO >> Repair harness or connector.

#### 2. CHECK VOLTAGE AMP. ON SIGNAL

1. Connect audio unit connector.
2. Turn ignition switch ON.
3. Check voltage between audio unit harness connector and ground.

Audio unit		Ground	Voltage (Approx.)
Connector	Terminal		
M81	1		12.0 V

#### Is inspection result OK?

- YES >> Replace BOSE amp. Refer to [AV-127, "COUPE : Removal and Installation"](#) (coupe models), [AV-127, "ROADSTER : Removal and Installation"](#) (roadster models).  
NO >> Replace audio unit. Refer to [AV-121, "Removal and Installation"](#).

# MICROPHONE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## MICROPHONE SIGNAL CIRCUIT

### Description

INFOID:000000006709112

TEL adapter unit supplies power to microphone. The microphone transmits the sound voice to the TEL adapter unit.

### Diagnosis Procedure

INFOID:000000006709113

#### 1. CHECK CONTINUITY BETWEEN TEL ADAPTER UNIT AND MICROPHONE CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TEL adapter unit connector and microphone connector.
3. Check continuity between TEL adapter unit harness connector and microphone harness connector.

TEL adapter unit		Microphone		Continuity
Connector	Terminal	Connector	Terminal	
B237	7	R5	1	Existed
	8		2	
	29		4	

4. Check continuity between TEL adapter unit harness connector and ground.

TEL adapter unit		Ground	Continuity
Connector	Terminal		
B237	7		Not existed
	29		

#### Is inspection result OK?

YES >> GO TO 2.

NO >> Repair harness or connector.

#### 2. CHECK MICROPHONE POWER SUPPLY

1. Connect TEL adapter unit connector.
2. Turn ignition switch ON.
3. Check voltage between TEL adapter unit harness connector and ground.

TEL adapter unit		Ground	Voltage (Approx.)
Connector	Terminal		
B237	29		5.0 V

#### Is inspection result OK?

YES >> GO TO 3.

NO >> Replace TEL adapter unit. Refer to [AV-133, "Removal and Installation"](#).

#### 3. CHECK MICROPHONE SIGNAL

1. Turn ignition switch OFF.
2. Connect microphone connector.
3. Turn ignition switch ON.
4. Check signal between TEL adapter unit harness connector.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# MICROPHONE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

TEL adapter unit		TEL adapter unit		Condition	Reference value
Connector	Terminal	Connector	Terminal		
B237	7	B237	8	Give a voice.	

Is inspection result OK?

YES >> INSPECTION END

NO >> Replace microphone. Refer to [AV-134, "Removal and Installation"](#).

# TELEPHONE ON SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## TELEPHONE ON SIGNAL CIRCUIT

### Description

INFOID:000000006709114

When telephone is being used. TEL adapter unit transmits telephone ON signal to audio unit.

### Diagnosis Procedure

INFOID:000000006709115

#### 1.CHECK CONTINUITY TELEPHONE ON SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TEL adapter unit connector and audio unit connector.
3. Check continuity between TEL adapter unit harness connector and audio unit harness connector.

TEL adapter unit		Audio unit		Continuity
Connector	Terminal	Connector	Terminal	
B237	11	M82	28	Existed

4. Check continuity between TEL adapter unit harness connector and ground.

TEL adapter unit		Ground	Continuity
Connector	Terminal		
B237	11		Not existed

#### Is inspection result OK?

- YES >> GO TO 2.  
NO >> Repair harness or connector.

#### 2.CHECK TELEPHONE ON SIGNAL

1. Connect audio unit connector.
2. Turn ignition switch ON.
3. Check voltage between audio unit harness connector and ground.

Audio unit		Ground	Condition	Voltage (Approx.)
Connector	Terminal			
M82	28		While using hands-free phone system	0 V
			While not using hands-free phone system	5.0 V

#### Is inspection result OK?

- YES >> INSPECTION END  
NO >> Replace audio unit. Refer to [AV-121, "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV

O  
P

# AUDIO UNIT

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITHOUT NAVIGATION]


## ECU DIAGNOSIS INFORMATION

### AUDIO UNIT

#### Reference Value

INFOID:000000006709116

#### TERMINAL LAYOUT

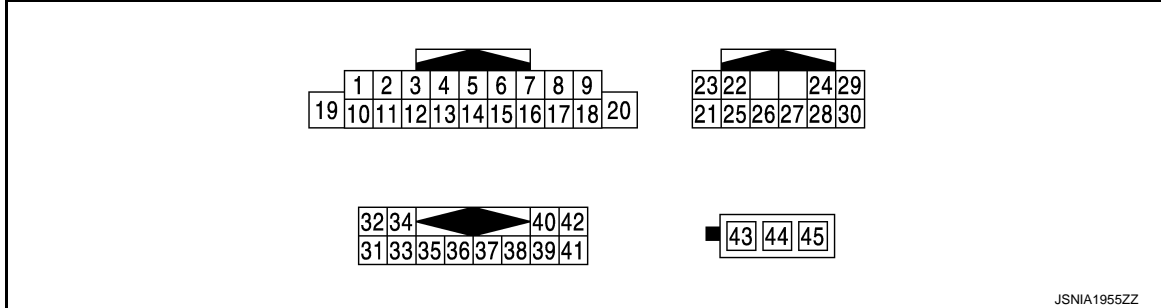




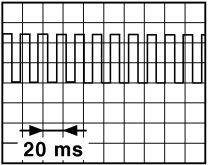
#### PHYSICAL VALUES

Terminal (Wire color)		Description		Condition	Reference value (Approx.)	
+	-	Signal name	Input/ Output			
1 (V)	Ground	BOSE amp. ON signal	Output	Ignition switch ON	—	12.0 V
2 (LG)	3 (V)	Sound signal front speaker LH	Output	Ignition switch ON	Sound signal output	 SKIB3609E
4 (L)	5 (R)	Sound signal rear speaker LH	Output	Ignition switch ON	Sound signal output	 SKIB3609E
6 (W) <sup>*1</sup> (P) <sup>*2</sup>	15 (B)	Steering switch signal A	Input	Ignition switch ON	Keep pressing SOURCE switch	0 V
					Keep pressing MENU UP switch	1.25 V
					Keep pressing MENU DOWN switch	2.5 V
					Keep pressing  switch	3.7 V
					Except for above	5.0 V
7 (L)	Ground	ACC power supply	Input	Ignition switch ACC	—	Battery voltage

# AUDIO UNIT

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITHOUT NAVIGATION]





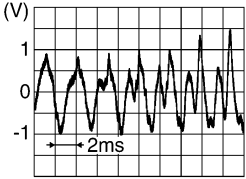
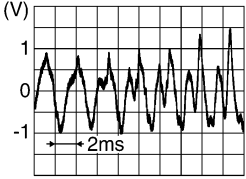
Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
9 (R)	8 (W)	Illumination signal	Input	Ignition switch OFF	Lighting switch is OFF.	0 V
					Lighting switch is 1ST or 2ND.	12.0 V
10	—	Shield	—	—	—	—
11 (L)	12 (P)	Sound signal front speaker RH	Output	Ignition switch ON	Sound signal output	 SKIB3609E
13 (R)	14 (G)	Sound signal rear speaker RH	Output	Ignition switch ON	Sound signal output	 SKIB3609E
16 (GR) <sup>*1</sup> (L) <sup>*2</sup>	15 (B)	Steering switch signal B	Input	Ignition switch ON	Keep pressing VOL DOWN switch	0 V
					Keep pressing VOL UP switch	1.25 V
					Keep pressing  switch	2.5 V
					Except for above.	5.0 V
18 (Y)	Ground	Vehicle speed signal (8-pulse)	Input	Ignition switch ON	When vehicle speed is approx. 40 km/h (25MPH)	<p><b>NOTE:</b> The maximum voltage varies de- pending on the specification (destination unit).</p>  JSNIA0012GB
19 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
20	—	Shield	—	—	—	—
21 (R)	—	AV communication signal (H)	—	Input/ Output	—	—
22 (G)	—	AV communication signal (L)	—	Input/ Output	—	—
25	—	Shield	—	—	—	—

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

# AUDIO UNIT

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITHOUT NAVIGATION]

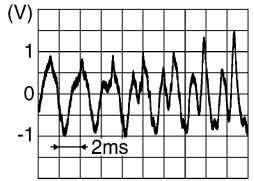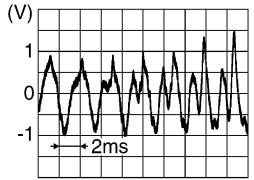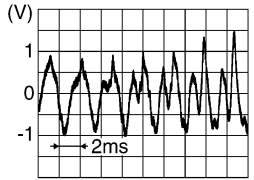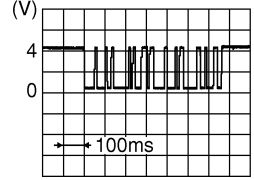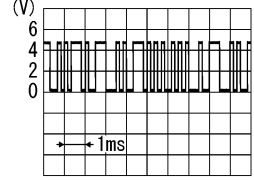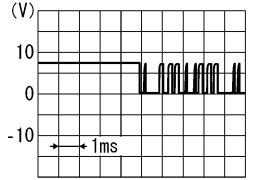Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
26 (LG)	27 (V)	Sound signal (Telephone voice, tele- phone guidance)	Input	Ignition switch ON	Give a voice	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
28 (O)	Ground	Telephone ON signal	Input	Ignition switch ON	While using hands-free phone system	0 V
					While not using hands-free phone system	5.0 V
32 (B)	31 (W)	Satellite radio sound signal LH	Input	Ignition switch ON	When satellite radio mode is selected	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
34 (G)	33 (R)	Satellite radio sound signal RH	Input	Ignition switch ON	When satellite radio mode is selected	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
35	—	Shield	—	—	—	—
36	—	Shield	—	—	—	—
38 (P) <sup>*3</sup> (Y) <sup>*4</sup>	Ground	Request signal (SAT TO AUDIO)	Input	Ignition switch ON	When satellite radio mode is selected	 <p style="text-align: right; font-size: small;">JSNIA0675ZZ</p>
39 (G)	Ground	Communication signal (SAT-AUDIO)	Input	Ignition switch ON	When satellite radio mode is selected	 <p style="text-align: right; font-size: small;">PKIB5039J</p>
40 (L)	Ground	Communication signal (AUDIO-SAT)	Output	Ignition switch ON	When satellite radio mode is selected	 <p style="text-align: right; font-size: small;">SKIA9301J</p>



# AUDIO UNIT

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITHOUT NAVIGATION]

Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
43	Ground	Antenna amp. ON signal	Output	Ignition switch ON	—	12.0 V
44	—	Antenna signal	Input	—	—	—

\*1: Except for Mexico

\*2: For Mexico

\*3: Coupe models

\*4: Roadster models

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

# BOSE AMP.

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITHOUT NAVIGATION]


BOSE AMP.

COUPE

COUPE : Reference Value

INFOID:000000006709119

## TERMINAL LAYOUT

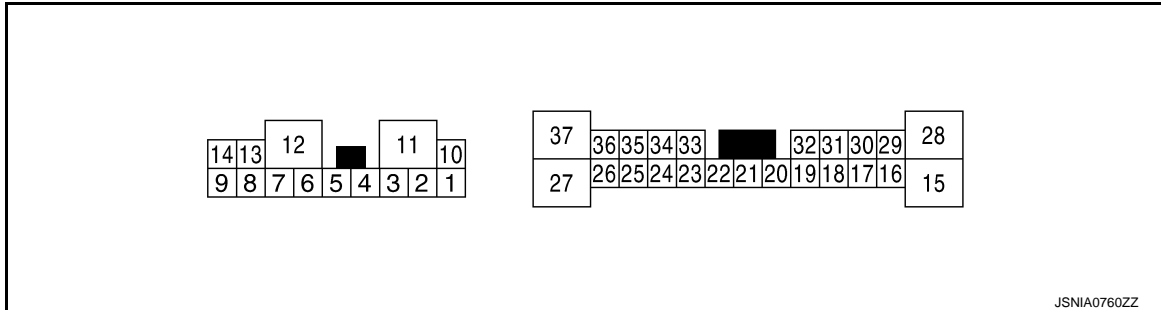

JSNIA0760ZZ







## PHYSICAL VALUES

Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
1 (L)	10 (V)	Sound signal front door speaker LH	Output	Ignition switch ON	Voice output	<p>SKIB3609E</p>
2 (BG)	3 (G)	Sound signal front door speaker RH	Output	Ignition switch ON	Voice output	<p>SKIB3609E</p>
4 (SB)	5 (V)	Sound signal woofer	Output	Ignition switch ON	Voice output	<p>SKIB3609E</p>
6 (LG)	7 (GR)	Sound signal tweeter LH	Output	Ignition switch ON	Voice output	<p>SKIB3609E</p>

# BOSE AMP.

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITHOUT NAVIGATION]

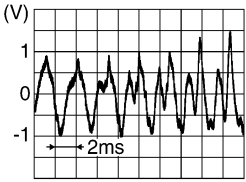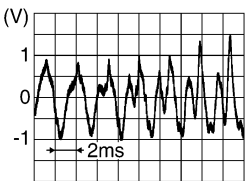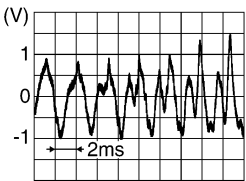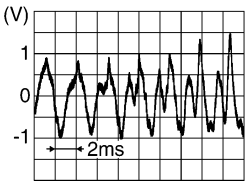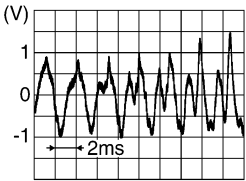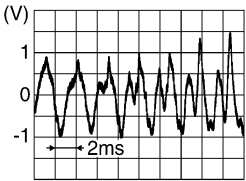Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
9 (R)	14 (BR)	Sound signal rear speaker RH	Output	Ignition switch ON	Voice output	 SKIB3609E
11 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
12 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
15 (L)	28 (P)	Sound signal rear speaker LH	Output	Ignition switch ON	Voice output	 SKIB3609E
18 (P)	32 (L)	Sound signal front LH	Input	Ignition switch ON	Voice output	 SKIB3609E
19 (R)	20 (G)	Sound signal front RH	Input	Ignition switch ON	Voice output	 SKIB3609E
21 (V)	22 (SB)	Sound signal rear LH	Input	Ignition switch ON	Voice output	 SKIB3609E
23 (BR)	33 (Y)	Sound signal rear RH	Input	Ignition switch ON	Voice output	 SKIB3609E


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
P

AV

# BOSE AMP.

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITHOUT NAVIGATION]

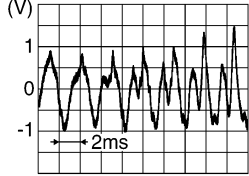
Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
31 (W)	Ground	BOSE amp. ON signal	Input	Ignition switch ACC	—	12.0 V
37 (B)	27 (W)	Sound signal tweeter RH	Output	Ignition switch ON	Voice output	 SKIB3609E

## ROADSTER



### ROADSTER : Reference Value

INFOID:000000006854185

### TERMINAL LAYOUT

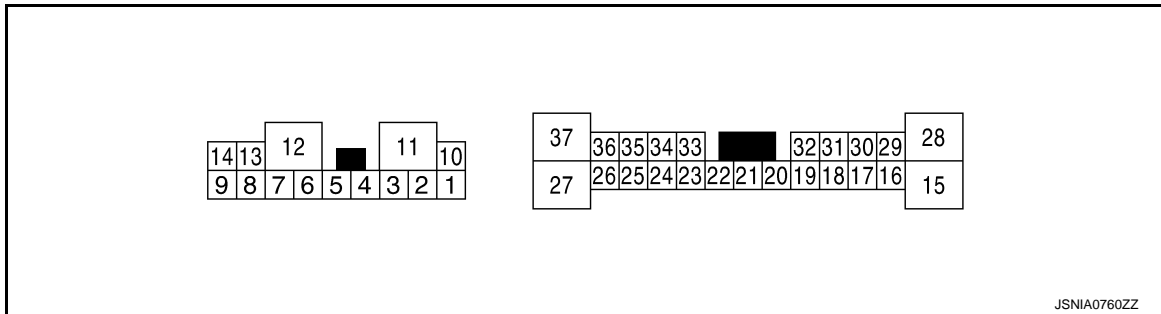






### PHYSICAL VALUES

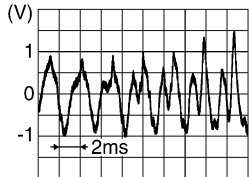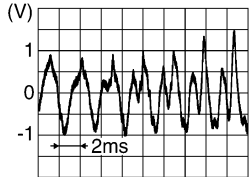Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
1 (L)	10 (V)	Sound signal rear woofer LH	Output	Ignition switch ON	Voice output	 SKIB3609E
2 (LG)	3 (Y)	Sound signal rear woofer RH	Output	Ignition switch ON	Voice output	 SKIB3609E

# BOSE AMP.

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITHOUT NAVIGATION]

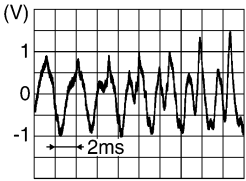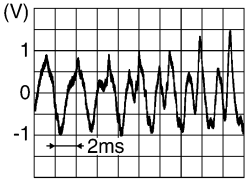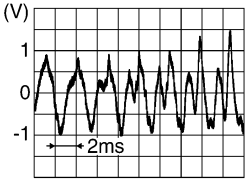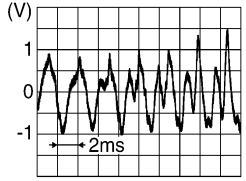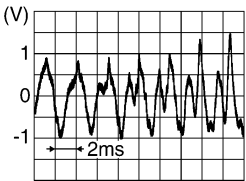Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
4 (L)	5 (V)	Sound signal front door speaker LH	Output	Ignition switch ON	Voice output	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
6 (LG)	7 (GR)	Sound signal tweeter LH	Output	Ignition switch ON	Voice output	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
8 (BG)	13 (G)	Sound signal front door speaker RH	Output	Ignition switch ON	Voice output	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
9 (LG)	14 (Y)	Sound signal rear speaker RH	Output	Ignition switch ON	Voice output	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
11 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
12 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
15 (L)	28 (P)	Sound signal rear speaker LH	Output	Ignition switch ON	Voice output	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
17 (R)	Ground	Roof status signal (AUDIO)	Input	Ignition switch ON	Retractable soft top fully open	Battery voltage
				Retractable soft top other than above	0 V	






A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

AV

# BOSE AMP.

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITHOUT NAVIGATION]

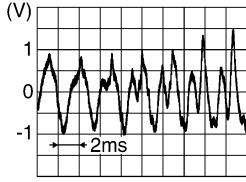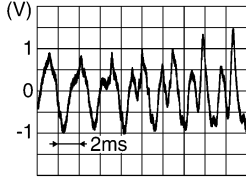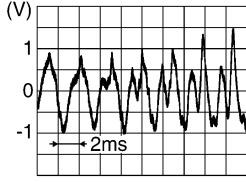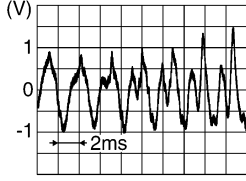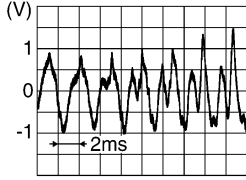Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
18 (P)	32 (L)	Sound signal front LH	Input	Ignition switch ON	Voice output	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
19 (R)	20 (G)	Sound signal front RH	Input	Ignition switch ON	Voice output	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
21 (V)	22 (SB)	Sound signal rear LH	Input	Ignition switch ON	Voice output	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
23 (BR)	33 (Y)	Sound signal rear RH	Input	Ignition switch ON	Voice output	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
31 (W)	Ground	BOSE amp. ON signal	Input	Ignition switch ACC	—	12.0 V
37 (B)	27 (W)	Sound signal tweeter RH	Output	Ignition switch ON	Voice output	 <p style="text-align: right; font-size: small;">SKIB3609E</p>

# SATELLITE RADIO TUNER

< ECU DIAGNOSIS INFORMATION >


[BOSE AUDIO WITHOUT NAVIGATION]

## SATELLITE RADIO TUNER

Reference Value

INFOID:000000006709123

TERMINAL LAYOUT

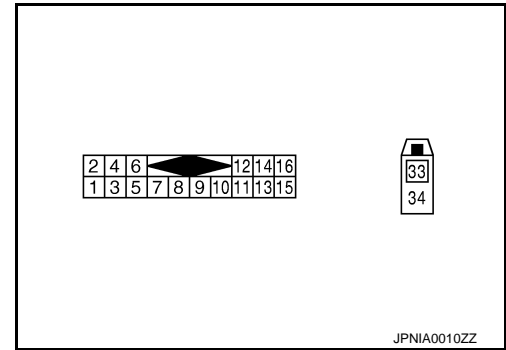

PHYSICAL VALUES

Terminal		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/Output			
2 (R)	1 (G)	Satellite radio sound signal LH	Output	Ignition switch ON	When satellite radio mode is selected	
4 (B)	3 (W)	Satellite radio sound signal RH	Output	Ignition switch ON	When satellite radio mode is selected	
5	—	Shield	—	—	—	—
6	—	Shield	—	—	—	—
8 (Y)	Ground	Request signal (SAT TO AUDIO)	Output	Ignition switch ON	When satellite radio mode is selected	
9 (O)	Ground	Communication signal (SAT→AUDIO)	Output	Ignition switch ON	When satellite radio mode is selected	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

# SATELLITE RADIO TUNER

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITHOUT NAVIGATION]

Terminal		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
10 (BR)	Ground	Communication signal (AUDIO→SAT)	Input	Ignition switch ON	When satellite radio mode is selected	<p style="text-align: right; font-size: small;">SKIA9301J</p>
12 (SB)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
16 (V)	Ground	ACC power supply	Input	Ignition switch ACC	—	Battery voltage
33	—	Satellite radio antenna sig- nal	Input	—	—	—
34	—	Shield	—	—	—	—



# TEL ADAPTER UNIT

< ECU DIAGNOSIS INFORMATION >


[BOSE AUDIO WITHOUT NAVIGATION]

## TEL ADAPTER UNIT

Reference Value

INFOID:000000006709125

TERMINAL LAYOUT

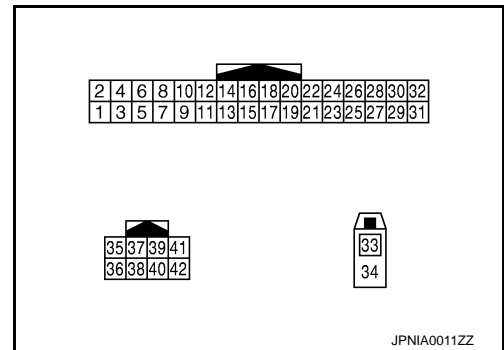





PHYSICAL VALUES

Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/Output			
1 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
2 (V)	Ground	ACC power supply	Input	Ignition switch ACC	—	Battery voltage
3 (SB)	Ground	Ignition signal	Input	Ignition switch ON	—	Battery voltage
4 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
7 (L)	8	Microphone signal	Input	Ignition switch ON	Give a voice	
8	—	Shield (microphone signal ground)	—	—	—	—
9 (BR)	10 (Y)	Sound signal (Telephone voice, telephone guidance)	Output	Ignition switch ON	During voice guide output with the  switch pressed	
11 (BG)	Ground	Telephone on signal	Output	Ignition switch ON	While using hands-free phone system	0 V
					While not using hands-free phone system	5.0 V

# TEL ADAPTER UNIT

< ECU DIAGNOSIS INFORMATION >


[BOSE AUDIO WITHOUT NAVIGATION]

Terminal (Wire color)		Description		Condition	Reference value (Approx.)	
+	-	Signal name	Input/ Output			
12 (P)	14 (B)	Steering switch signal A (input)	Input	Ignition switch ON	Keep pressing SOURCE switch	0 V
					Keep pressing MENU UP switch	1.25 V
					Keep pressing MENU DOWN switch	2.5 V
					Keep pressing  switch	3.7 V
					Except for above	5.0 V
13 (L)	14 (B)	Steering switch signal B (input)	Input	Ignition switch ON	Keep pressing VOL DOWN switch	0 V
					Keep pressing VOL UP switch	1.25 V
					Keep pressing  switch	2.5 V
					Except for above.	5.0 V
14 (B)	Ground	Steering switch signal ground	—	Ignition switch ON	—	0 V
16 (R)	Ground	Roof status signal (AUDIO)	Input	Ignition switch ON	Retractable soft top fully open	Battery voltage
					Retractable soft top other than above	0 V
17 (W)	19 (B)	Steering switch signal A (output)	Output	Ignition switch ON	Keep pressing SOURCE switch	0 V
					Keep pressing MENU UP switch	1.25 V
					Keep pressing MENU DOWN switch	2.5 V
					Keep pressing  switch	3.7 V
					Except for above	5.0 V
18 (GR)	19 (B)	Steering switch signal B (output)	Output	Ignition switch ON	Keep pressing VOL DOWN switch	0 V
					Keep pressing VOL UP switch	1.25 V
					Keep pressing  switch	2.5 V
					Except for above.	5.0 V
20 (L) <sup>*1</sup> (B) <sup>*2</sup>	Ground	Control signal	—	Ignition switch ON	—	0 V
22 (P) <sup>*1</sup> (B) <sup>*2</sup>	Ground	Control signal	—	Ignition switch ON	—	0 V
23 (B)	Ground	Control signal	—	Ignition switch ON	—	0 V

# TEL ADAPTER UNIT

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITHOUT NAVIGATION]

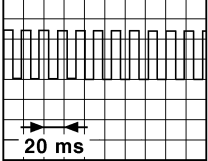Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
24 (B)	Ground	Control signal	—	Ignition switch ON	—	0 V
28 (V)	Ground	Vehicle speed signal (8-pulse)	Input	Ignition switch ON	When vehicle speed is approx. 40 km/h (25 MPH)	<p><b>NOTE:</b> The maximum voltage varies de- pending on the specification (destination unit).</p>  <p style="text-align: right;"><small>JSNIA0012GB</small></p>
29 (P)	Ground	Microphone power supply	Output	Ignition switch ON	—	5.0 V
33	—	TEL antenna signal	Input	—	Not connected to TEL an- tenna connector	5.0 V
34	—	Shield	—	—	—	—
35 (R)	—	AV communication signal (H)	Input/ Output	—	—	—
36 (G)	—	AV communication signal (L)	Input/ Output	—	—	—
39 (L)	—	AV communication signal (H)	Input/ Output	—	—	—
40 (L)	—	AV communication signal (H)	Input/ Output	—	—	—
41 (Y)	—	AV communication signal (L)	Input/ Output	—	—	—
42 (Y)	—	AV communication signal (L)	Input/ Output	—	—	—

\*1: Coupe models

\*2: Roadster models

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

# BOSE AUDIO WITHOUT NAVIGATION

[BOSE AUDIO WITHOUT NAVIGATION]


< WIRING DIAGRAM >

## WIRING DIAGRAM

### BOSE AUDIO WITHOUT NAVIGATION

#### Wiring Diagram - BOSE AUDIO WITHOUT NAVIGATION SYSTEM -


INFOID:000000006709118

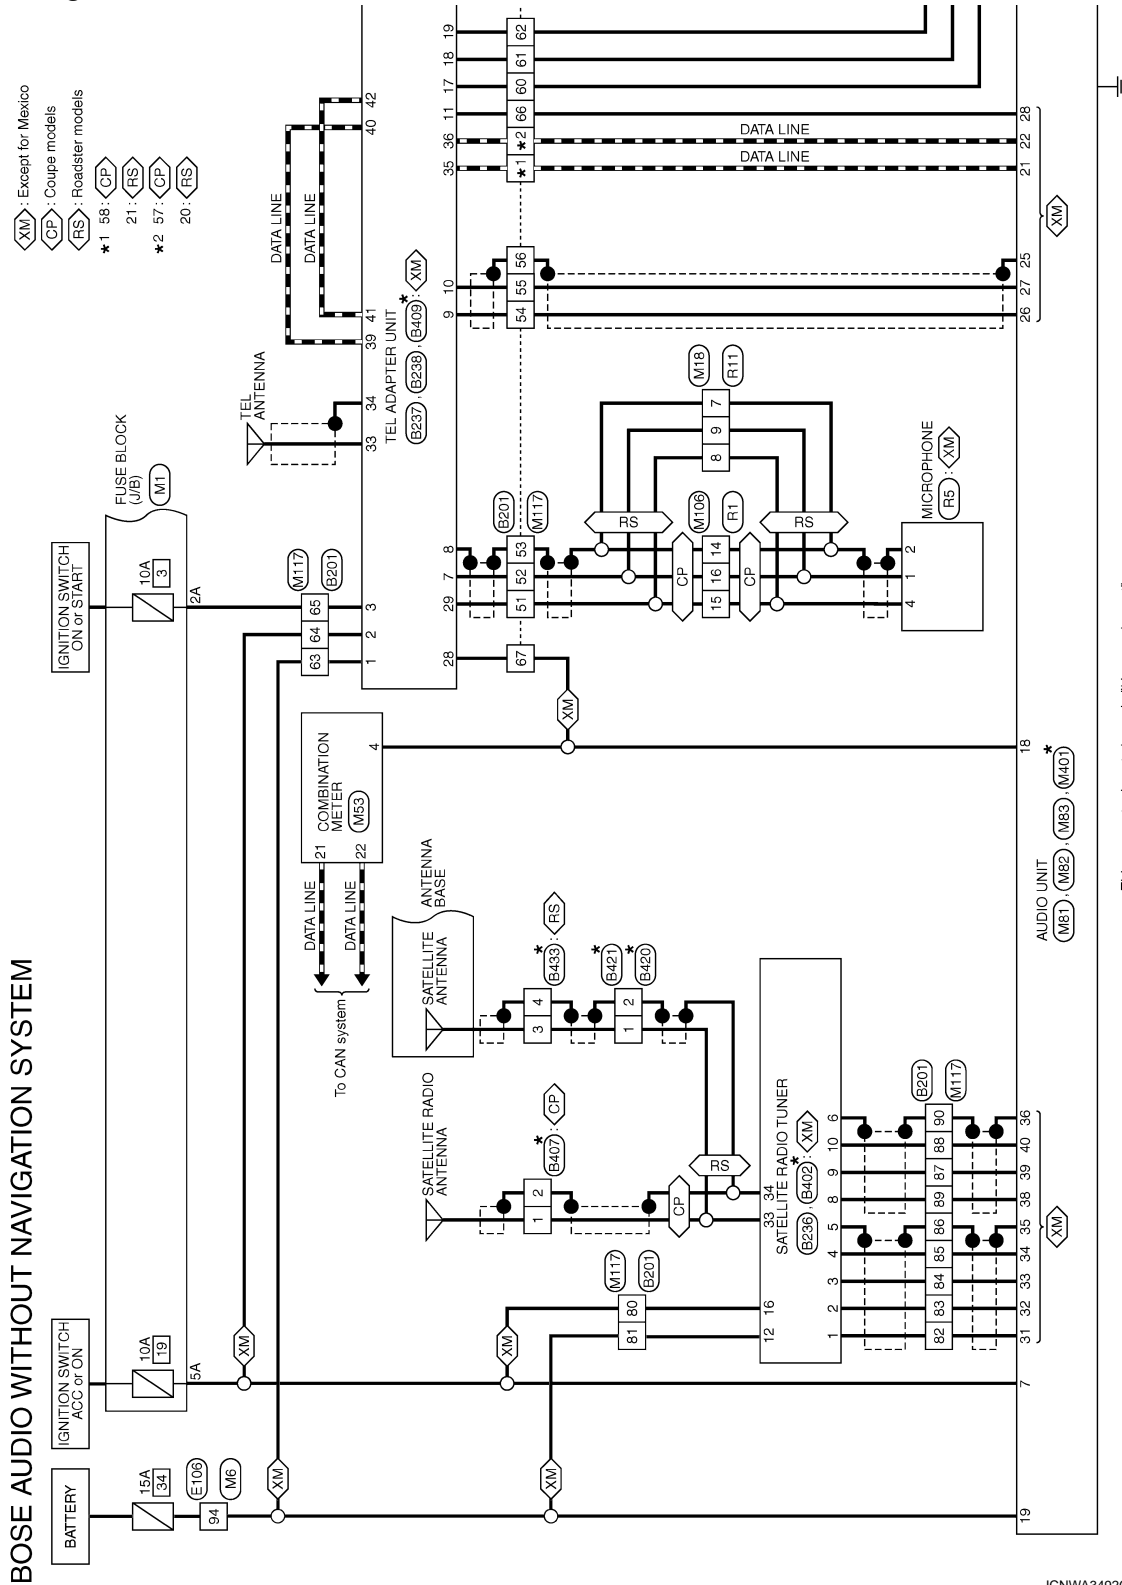

# BOSE AUDIO WITHOUT NAVIGATION

[BOSE AUDIO WITHOUT NAVIGATION]

< WIRING DIAGRAM >

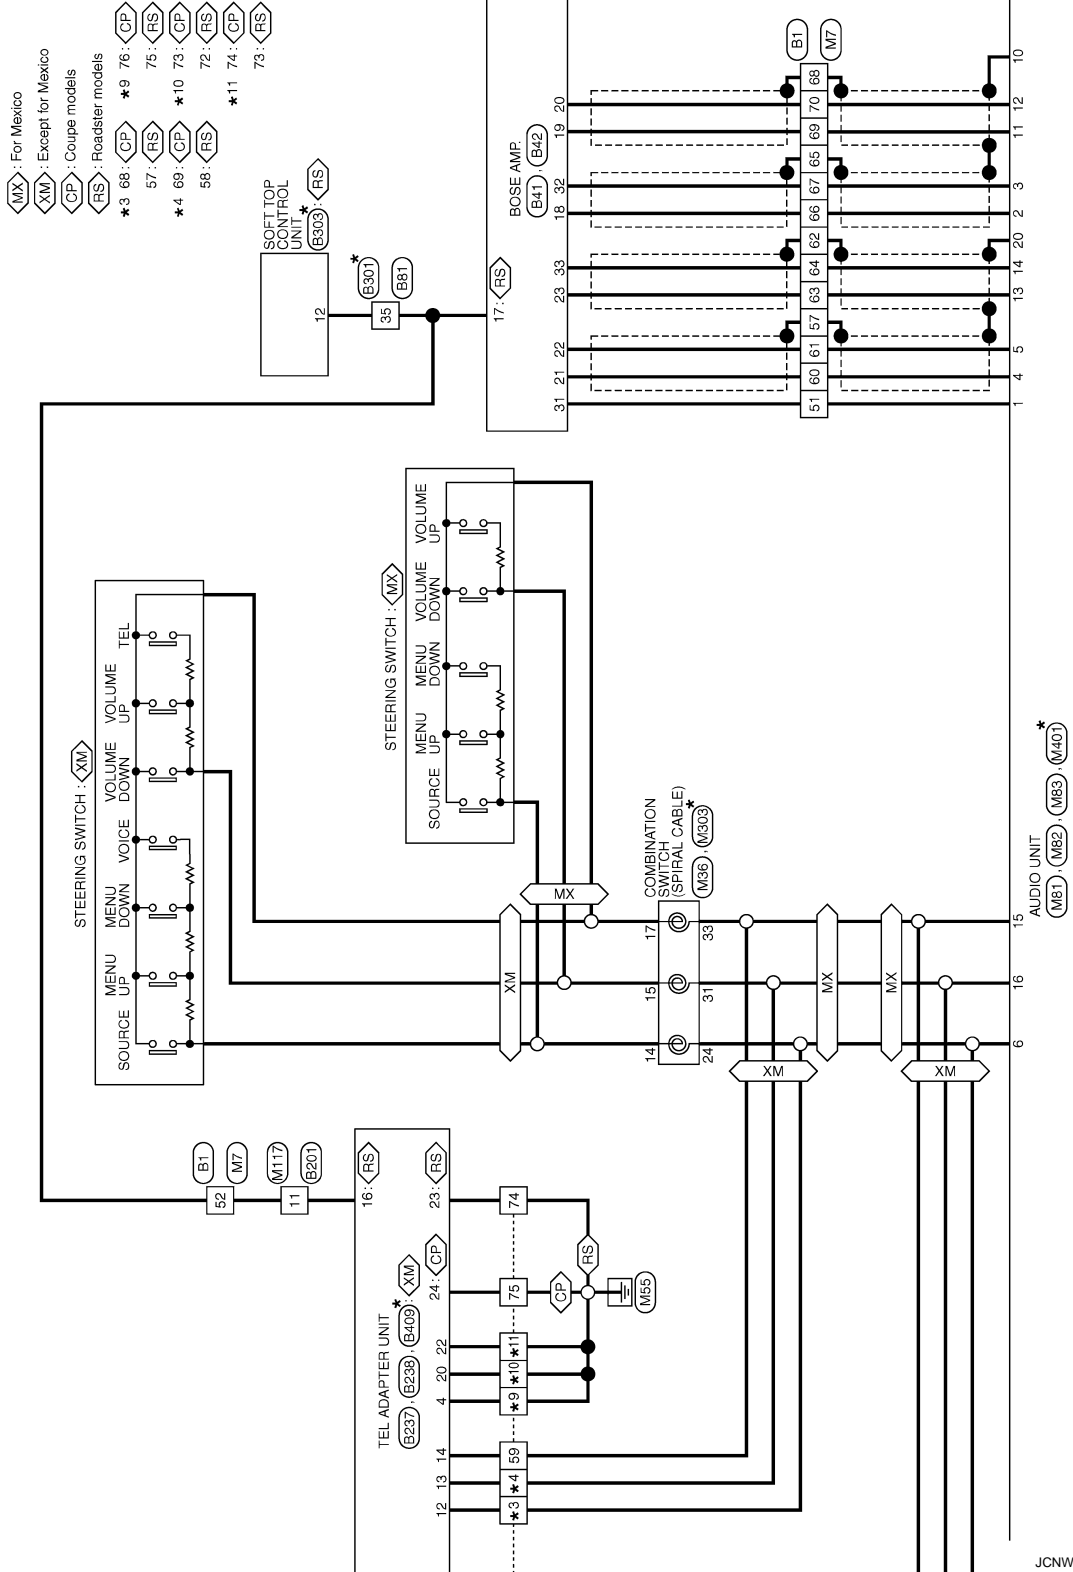

\*: This connector is not shown in "Harness Layout".

JCNWA3493GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

# BOSE AUDIO WITHOUT NAVIGATION

[BOSE AUDIO WITHOUT NAVIGATION]

< WIRING DIAGRAM >

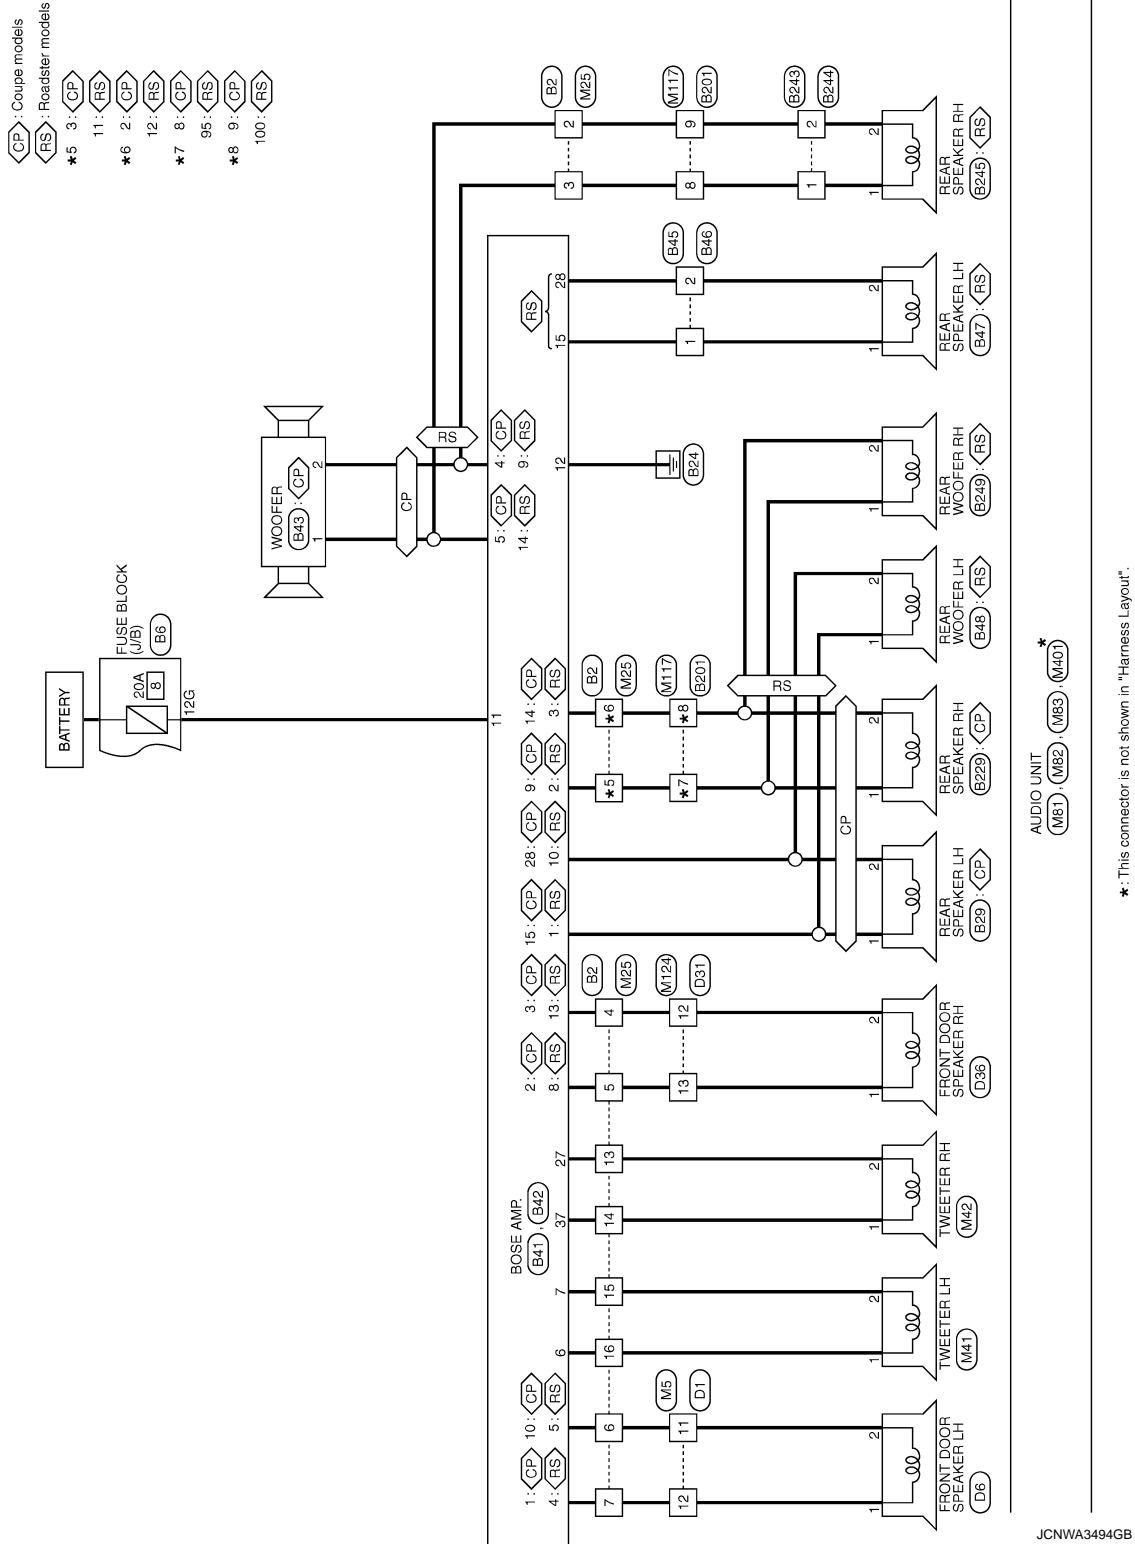


JCNWA3494GB

# BOSE AUDIO WITHOUT NAVIGATION

< WIRING DIAGRAM >

[BOSE AUDIO WITHOUT NAVIGATION]

CP : Coupe models  
RS : Roadster models

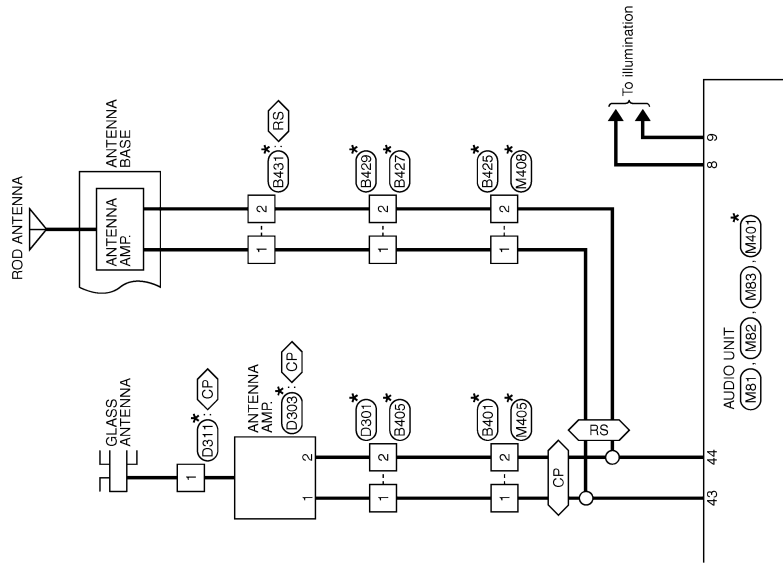

JCNWA3495GB

\*: This connector is not shown in "Harness Layout".

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P


# BOSE AUDIO WITHOUT NAVIGATION

[BOSE AUDIO WITHOUT NAVIGATION]

< WIRING DIAGRAM >

## BOSE AUDIO WITHOUT NAVIGATION SYSTEM


Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	THB07V-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	BG	-
3	Y	-
4	W	-
6	V	-
7	LG	-
8	GR	-
9	SB	-
11	Y	-
12	W	-
13	BR	-
14	LG	-
15	B	-
16	V	-
17	R	-
18	B	-
20	SB	-
21	G	-
22	GR	-
23	V	-
24	BG	-
25	L	-
26	P	-
27	W	-
28	SHIELD	-
31	W	-
32	B	-
33	P	- [Coupe models]
33	W	- [Roadster models]
34	R	-
35	W	- [Coupe models]
35	B	- [Roadster models]
36	B	-
40	Y	-
41	L	-
42	GR	-
43	BR	-
44	R	-


45	BG	-
46	SHIELD	- [Coupe models]
46	SB	- [Roadster models]
47	Y	-
48	SHIELD	-
51	W	-
52	R	-
57	SHIELD	-
58	B	-
60	V	-
61	SB	-
62	SHIELD	-
63	BR	-
64	Y	-
65	SHIELD	-
66	P	-
67	L	-
68	SHIELD	-
69	R	-
70	G	-
71	V	-
72	P	-
73	BR	-
74	GR	-
75	BG	-
80	Y	-
81	R	-
82	B	-
83	GR	-
84	G	-
84	L	- [Roadster models]
85	LG	-
86	V	-
87	BR	-
88	GR	-
93	Y	-
94	L	- [Coupe models]
94	G	- [Roadster models]
95	GR	- [Coupe models]
95	LG	- [Roadster models]
96	L	-
97	Y	-
98	W	- [Coupe models]
98	Y/B	- [Roadster models]
99	LG	-
100	B	-

Connector No.	B2
Connector Name	WIRE TO WIRE
Connector Type	NS12FWR-CS



Terminal No.	Color of Wire	Signal Name [Specification]
2	BR	- [Coupe models]
2	Y	- [Roadster models]
3	R	- [Coupe models]
3	LG	- [Roadster models]
4	G	-
5	LG	-
6	BG	-
8	V	-
7	L	-
11	LG	-
12	Y	-
13	W	-
14	B	-
15	GR	-
16	LG	-

Connector No.	B6
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FBR-CS




Terminal No.	Color of Wire	Signal Name [Specification]
5G	LG	-
10G	W	- [Coupe models]
10G	P	- [Roadster models]
11G	W	- [Coupe models]
11G	G	- [Roadster models]
12G	Y	-

Connector No.	B29
Connector Name	REAR SPEAKER LH
Connector Type	TK02FBR



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	P	-

Connector No.	B41
Connector Name	BOSE AMP.
Connector Type	SCA19FBR-SGA4



Terminal No.	Color of Wire	Signal Name [Specification]
15	L	SOUND SIGNAL REAR SPEAKER LH (+)
17	R	ROOF STATUS SIGNAL (AUDIO)
18	P	SOUND SIGNAL FRONT LH (+)
19	R	SOUND SIGNAL FRONT RH (-)
20	G	SOUND SIGNAL FRONT RH (-)
21	V	SOUND SIGNAL REAR LH (+)
22	SB	SOUND SIGNAL REAR LH (+)
23	BR	SOUND SIGNAL REAR RH (-)
27	W	SOUND SIGNAL FRONT TWEETER RH (-)
28	P	SOUND SIGNAL REAR SPEAKER LH (-)
31	W	BOSE AMP. ON SIGNAL
32	L	SOUND SIGNAL FRONT LH (-)
33	Y	SOUND SIGNAL REAR RH (-)
37	B	SOUND SIGNAL FRONT TWEETER RH (+)


JCNWA3496GB



# BOSE AUDIO WITHOUT NAVIGATION

## [BOSE AUDIO WITHOUT NAVIGATION]

< WIRING DIAGRAM >

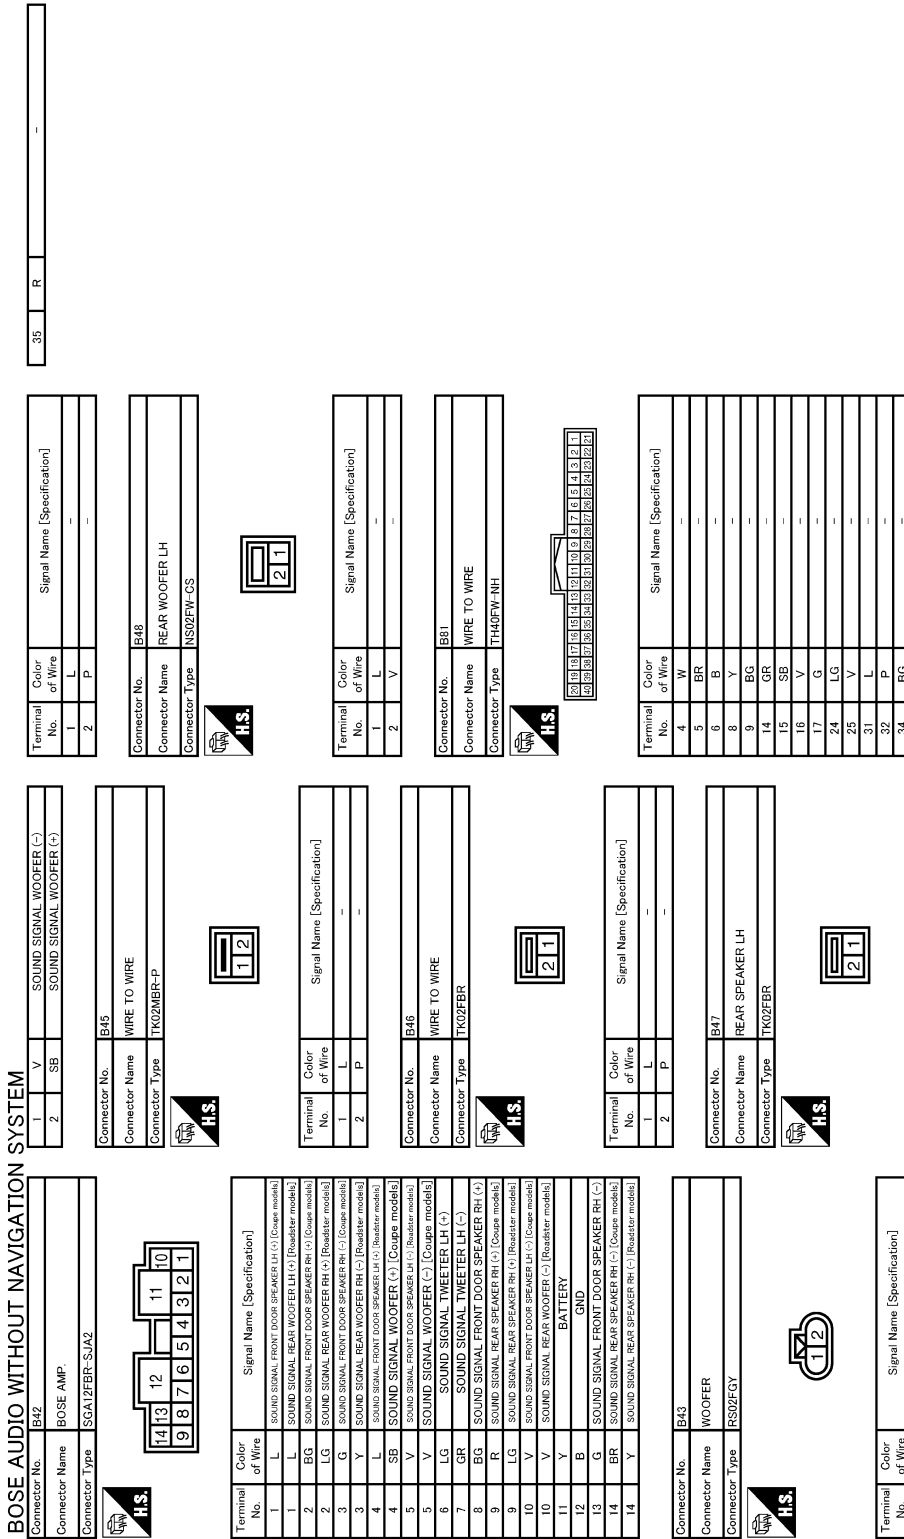

35 R -

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV


# BOSE AUDIO WITHOUT NAVIGATION

[BOSE AUDIO WITHOUT NAVIGATION]

< WIRING DIAGRAM >

## BOSE AUDIO WITHOUT NAVIGATION SYSTEM

Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH80FW-CST16-TM44



Terminal No.	Color of Wire	Signal Name [Specification]
2	BR	[Coupe models]
2	R	[Reader models]
3	Y	[Coupe models]
3	B	[Reader models]
4	G	[Coupe models]
7	Y	[Coupe models]
7	R	[Reader models]
8	LG	[Coupe models]
9	Y	[Coupe models]
11	R	[Coupe models]
20	G	[Coupe models]
21	R	[Coupe models]
30	B	[Coupe models]
40	W	[Coupe models]
41	V	[Coupe models]
42	G	[Coupe models]
43	L	[Coupe models]
44	SB	[Coupe models]
51	P	[Coupe models]
52	L	[Coupe models]
53	SHIELD	[Coupe models]
54	BR	[Coupe models]
55	V	[Coupe models]
56	SHIELD	[Coupe models]
57	G	[Coupe models]
57	P	[Reader models]
58	R	[Coupe models]
58	L	[Reader models]
59	B	[Coupe models]
60	W	[Coupe models]
61	GR	[Coupe models]
62	B	[Coupe models]
63	Y	[Coupe models]
64	V	[Coupe models]
65	SB	[Coupe models]
66	EG	[Coupe models]
67	V	[Coupe models]
68	P	[Coupe models]

69	L	[Coupe models]
70	G	[Coupe models]
72	B	[Coupe models]
73	L	[Reader models]
74	P	[Coupe models]
74	B	[Reader models]
75	W	[Coupe models]
75	B	[Reader models]
76	B	[Coupe models]
80	V	[Coupe models]
81	SB	[Coupe models]
82	G	[Coupe models]
83	R	[Coupe models]
84	W	[Coupe models]
85	B	[Coupe models]
86	SHIELD	[Coupe models]
87	O	[Coupe models]
88	BR	[Coupe models]
89	Y	[Coupe models]
90	SHIELD	[Coupe models]
92	SB	[Coupe models]
92	LG	[Reader models]
93	V	[Coupe models]
93	W	[Reader models]
94	SHIELD	[Coupe models]
94	G	[Reader models]
95	GR	[Coupe models]
95	LG	[Reader models]
97	LG	[Coupe models]
97	LG	[Reader models]
97	Y	[Coupe models]
98	W	[Coupe models]
98	V/B	[Reader models]
99	G	[Coupe models]
100	BR	[Coupe models]
100	Y	[Reader models]

Connector No.	B229
Connector Name	REAR SPEAKER RH
Connector Type	TK02FBR



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	[Coupe models]
2	Y	[Coupe models]

Connector No.	B238
Connector Name	SATELLITE RADIO TUNER
Connector Type	A18FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	SATELLITE RADIO SOUND SIGNAL LH (-)
2	R	SATELLITE RADIO SOUND SIGNAL LH (+)
3	W	SATELLITE RADIO SOUND SIGNAL RH (-)
4	B	SATELLITE RADIO SOUND SIGNAL RH (+)
5	SHIELD	SHIELD
6	SHIELD	SHIELD
8	Y	REQUEST (SAT->AUDIO)
9	O	COMM (SAT->AUDIO)
10	BR	COMM (AUDIO->SAT)
12	SB	BATTERY
16	V	ACC

Connector No.	B237
Connector Name	TEL ADAPTER UNIT
Connector Type	TH22FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	BATTERY
2	V	ACC
3	SB	IGNITION SIGNAL
4	B	GND
7	L	MICROPHONE SIGNAL

8	SHIELD	MICROPHONE GND
9	BR	TEL VOICE SIGNAL (+)
10	Y	TEL VOICE SIGNAL (-)
11	EG	TELEPHONE ON SIGNAL
12	P	STRG SW A (INPUT)
13	L	STRG SW B (INPUT)
14	B	STRG SW GND (INPUT)
16	R	ROOF STATUS SIGNAL (AUDIO)
17	W	STRG SW A (OUTPUT)
18	GR	STRG SW B (OUTPUT)
19	B	STRG SW GND (OUTPUT)
20	L	CONTROL SIGNAL [Coupe models]
20	B	CONTROL SIGNAL [Reader models]
22	P	CONTROL SIGNAL [Coupe models]
22	B	CONTROL SIGNAL [Reader models]
23	B	CONTROL SIGNAL
24	W	CONTROL SIGNAL
28	V	VEHICLE SPEED SIGNAL (8-PULSE)
29	P	MICROPHONE VCC

Connector No.	B238
Connector Name	TEL ADAPTER UNIT
Connector Type	TH08FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
35	R	AV COMM (H)
38	G	AV COMM (L)
39	L	AV COMM (R)
40	L	AV COMM (R)
41	Y	AV COMM (L)
42	Y	AV COMM (L)



JCNWA3498GB

# BOSE AUDIO WITHOUT NAVIGATION



## [BOSE AUDIO WITHOUT NAVIGATION]

< WIRING DIAGRAM >



### BOSE AUDIO WITHOUT NAVIGATION SYSTEM

Connector No. B243	Connector Name WIRE TO WIRE	Connector Type TK02MER-P		
Terminal No.	Color of Wire	Signal Name [Specification]		
1	LG			
2	Y			



  

Connector No. B244	Connector Name WIRE TO WIRE	Connector Type TK02FBR		
Terminal No.	Color of Wire	Signal Name [Specification]		
1	LG			
2	Y			



  

Connector No. B245	Connector Name REAR SPEAKER RH	Connector Type TK02FBR		
Terminal No.	Color of Wire	Signal Name [Specification]		
1	LG			
2	Y			



  

Connector No. B249	Connector Name REAR WOOFER RH	Connector Type NS02FIT-CS		
Terminal No.	Color of Wire	Signal Name [Specification]		
1	LG			
2	Y			



  

Connector No. B303	Connector Name SOFT TOP CONTROL UNIT	Connector Type TH40FB-NH		
Terminal No.	Color of Wire	Signal Name [Specification]		
1	BR	SENSOR POWER SUPPLY (ROOF STRIKER SENSOR LH)		
3	DG	ROOF STRIKER SENSOR RH		
4	W	ROOF STRIKER SENSOR LH		
8	Y	REVERSE SIGNAL		
9	SB	POWER CONDITION (POWER WINDOW)		
10	O	TRUNK LD OPEN SIGNAL		
11	O	ROOF STATUS SIGNAL (INDICATOR)		
12	SB	ROOF STATUS SIGNAL (AUDIO)		
14	L	ROOF OPEN / CLOSE SWITCH (CLOSE)		
15	LG	ROOF OPEN / CLOSE SWITCH (OPEN)		
16	V	TRUNK ROOM LAMP SWITCH		
17	BG	CAN-H		
18	P	CAN-L		
19	LG	LOCAL COMMUNICATION (POWER WINDOW)		
20	V	LOCAL COMMUNICATION (BCM)		
21	BR	SENSOR POWER SUPPLY (ROOF STRIKER SENSOR RH)		
29	DG	GND		
35	P	ROOF OPEN / CLOSE SWITCH (GND)		



  

Connector No. B401	Connector Name WIRE TO WIRE	Connector Type GTJ03CN-1/1PP-HU		
Terminal No.	Color of Wire	Signal Name [Specification]		
1	-			
2	-			



  

Connector No. B402	Connector Name SATELLITE RADIO TUNER	Connector Type FAKRA CONNECTOR		
Terminal No.	Color of Wire	Signal Name [Specification]		
33	-	SATELLITE RADIO ANTENNA SIGNAL		
34	SHIELD	SHIELD		

Connector No. B405	Connector Name WIRE TO WIRE	Connector Type GTJ3SSN-1/1PP-HU(2)		
Terminal No.	Color of Wire	Signal Name [Specification]		
1	-			
2	-			

Connector No. B407	Connector Name SATELLITE RADIO ANTENNA	Connector Type GTJ16C-1PP-HU(A)		
Terminal No.	Color of Wire	Signal Name [Specification]		
1	-			
2	-			

JCNWA3499GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P
















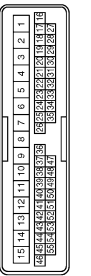


AV

# BOSE AUDIO WITHOUT NAVIGATION

< WIRING DIAGRAM >

[BOSE AUDIO WITHOUT NAVIGATION]

## BOSE AUDIO WITHOUT NAVIGATION SYSTEM

<table border="1"> <tr><td>Connector No.</td><td>B409</td></tr> <tr><td>Connector Name</td><td>TEL ADAPTER UNIT</td></tr> <tr><td>Connector Type</td><td>GT16C-IS-HU</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>33</td><td>-</td><td>TEL ANTENNA SIGNAL</td></tr> <tr><td>34</td><td>SHIELD</td><td>SHIELD</td></tr> </table>	Connector No.	B409	Connector Name	TEL ADAPTER UNIT	Connector Type	GT16C-IS-HU	Terminal No.	Color of Wire	Signal Name [Specification]	33	-	TEL ANTENNA SIGNAL	34	SHIELD	SHIELD	<table border="1"> <tr><td>Connector No.</td><td>B425</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>GT1SSN-1/IPP-HU</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>-</td><td>-</td></tr> <tr><td>2</td><td>-</td><td>-</td></tr> </table>	Connector No.	B425	Connector Name	WIRE TO WIRE	Connector Type	GT1SSN-1/IPP-HU	Terminal No.	Color of Wire	Signal Name [Specification]	1	-	-	2	-	-	<table border="1"> <tr><td>Connector No.</td><td>B427</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>GT1SSN-1/IPP-HU(2)</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>-</td><td>-</td></tr> <tr><td>2</td><td>-</td><td>-</td></tr> </table>	Connector No.	B427	Connector Name	WIRE TO WIRE	Connector Type	GT1SSN-1/IPP-HU(2)	Terminal No.	Color of Wire	Signal Name [Specification]	1	-	-	2	-	-	<table border="1"> <tr><td>Connector No.</td><td>B421</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>GT16C-IS-HUA</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>-</td><td>-</td></tr> <tr><td>2</td><td>-</td><td>-</td></tr> </table>	Connector No.	B421	Connector Name	WIRE TO WIRE	Connector Type	GT16C-IS-HUA	Terminal No.	Color of Wire	Signal Name [Specification]	1	-	-	2	-	-	<table border="1"> <tr><td>Connector No.</td><td>B429</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>GT1SSN-1/IS-HU(2)</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>-</td><td>-</td></tr> <tr><td>2</td><td>-</td><td>-</td></tr> </table>	Connector No.	B429	Connector Name	WIRE TO WIRE	Connector Type	GT1SSN-1/IS-HU(2)	Terminal No.	Color of Wire	Signal Name [Specification]	1	-	-	2	-	-	<table border="1"> <tr><td>Connector No.</td><td>B431</td></tr> <tr><td>Connector Name</td><td>ANTENNA BASE</td></tr> <tr><td>Connector Type</td><td>GT1SSN-1/IPP-HU</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>-</td><td>ANTENNA AMP. ON SIGNAL</td></tr> <tr><td>2</td><td>-</td><td>AM-FM MAIN</td></tr> </table>	Connector No.	B431	Connector Name	ANTENNA BASE	Connector Type	GT1SSN-1/IPP-HU	Terminal No.	Color of Wire	Signal Name [Specification]	1	-	ANTENNA AMP. ON SIGNAL	2	-	AM-FM MAIN	<table border="1"> <tr><td>Connector No.</td><td>B433</td></tr> <tr><td>Connector Name</td><td>ANTENNA BASE</td></tr> <tr><td>Connector Type</td><td>GT16C-IPP-HU(A)</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>3</td><td>-</td><td>SATELLITE ANTENNA SIGNAL</td></tr> <tr><td>4</td><td>SHIELD</td><td>SHIELD</td></tr> </table>	Connector No.	B433	Connector Name	ANTENNA BASE	Connector Type	GT16C-IPP-HU(A)	Terminal No.	Color of Wire	Signal Name [Specification]	3	-	SATELLITE ANTENNA SIGNAL	4	SHIELD	SHIELD	<table border="1"> <tr><td>Connector No.</td><td>B1</td></tr> <tr><td>Connector Name</td><td>WIRE TO WIRE</td></tr> <tr><td>Connector Type</td><td>TH0FW-CS15</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>7</td><td>Y</td><td>-</td></tr> <tr><td>8</td><td>Y</td><td>-</td></tr> </table>	Connector No.	B1	Connector Name	WIRE TO WIRE	Connector Type	TH0FW-CS15	Terminal No.	Color of Wire	Signal Name [Specification]	7	Y	-	8	Y	-	<table border="1"> <tr><td>Connector No.</td><td>D6</td></tr> <tr><td>Connector Name</td><td>FRONT DOOR SPEAKER LH</td></tr> <tr><td>Connector Type</td><td>NS02FW-CS</td></tr> </table>   <table border="1"> <tr><td>Terminal No.</td><td>Color of Wire</td><td>Signal Name [Specification]</td></tr> <tr><td>1</td><td>L</td><td>-</td></tr> <tr><td>2</td><td>P</td><td>- [With BOSE system]</td></tr> <tr><td>2</td><td>V</td><td>- [Without BOSE system]</td></tr> </table>	Connector No.	D6	Connector Name	FRONT DOOR SPEAKER LH	Connector Type	NS02FW-CS	Terminal No.	Color of Wire	Signal Name [Specification]	1	L	-	2	P	- [With BOSE system]	2	V	- [Without BOSE system]
Connector No.	B409																																																																																																																																																	
Connector Name	TEL ADAPTER UNIT																																																																																																																																																	
Connector Type	GT16C-IS-HU																																																																																																																																																	
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																
33	-	TEL ANTENNA SIGNAL																																																																																																																																																
34	SHIELD	SHIELD																																																																																																																																																
Connector No.	B425																																																																																																																																																	
Connector Name	WIRE TO WIRE																																																																																																																																																	
Connector Type	GT1SSN-1/IPP-HU																																																																																																																																																	
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																
1	-	-																																																																																																																																																
2	-	-																																																																																																																																																
Connector No.	B427																																																																																																																																																	
Connector Name	WIRE TO WIRE																																																																																																																																																	
Connector Type	GT1SSN-1/IPP-HU(2)																																																																																																																																																	
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																
1	-	-																																																																																																																																																
2	-	-																																																																																																																																																
Connector No.	B421																																																																																																																																																	
Connector Name	WIRE TO WIRE																																																																																																																																																	
Connector Type	GT16C-IS-HUA																																																																																																																																																	
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																
1	-	-																																																																																																																																																
2	-	-																																																																																																																																																
Connector No.	B429																																																																																																																																																	
Connector Name	WIRE TO WIRE																																																																																																																																																	
Connector Type	GT1SSN-1/IS-HU(2)																																																																																																																																																	
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																
1	-	-																																																																																																																																																
2	-	-																																																																																																																																																
Connector No.	B431																																																																																																																																																	
Connector Name	ANTENNA BASE																																																																																																																																																	
Connector Type	GT1SSN-1/IPP-HU																																																																																																																																																	
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																
1	-	ANTENNA AMP. ON SIGNAL																																																																																																																																																
2	-	AM-FM MAIN																																																																																																																																																
Connector No.	B433																																																																																																																																																	
Connector Name	ANTENNA BASE																																																																																																																																																	
Connector Type	GT16C-IPP-HU(A)																																																																																																																																																	
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																
3	-	SATELLITE ANTENNA SIGNAL																																																																																																																																																
4	SHIELD	SHIELD																																																																																																																																																
Connector No.	B1																																																																																																																																																	
Connector Name	WIRE TO WIRE																																																																																																																																																	
Connector Type	TH0FW-CS15																																																																																																																																																	
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																
7	Y	-																																																																																																																																																
8	Y	-																																																																																																																																																
Connector No.	D6																																																																																																																																																	
Connector Name	FRONT DOOR SPEAKER LH																																																																																																																																																	
Connector Type	NS02FW-CS																																																																																																																																																	
Terminal No.	Color of Wire	Signal Name [Specification]																																																																																																																																																
1	L	-																																																																																																																																																
2	P	- [With BOSE system]																																																																																																																																																
2	V	- [Without BOSE system]																																																																																																																																																

JCNWA3500GB


# BOSE AUDIO WITHOUT NAVIGATION

## [BOSE AUDIO WITHOUT NAVIGATION]

< WIRING DIAGRAM >

### BOSE AUDIO WITHOUT NAVIGATION SYSTEM

Connector No.	D31
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Connector No.	D301
Connector Name	WIRE TO WIRE
Connector Type	GT1SSC-17/S-HU(21)



Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
10	V	-
11	LG	-
12	P	- [With BOSE system]
12	LG	- [Without BOSE system]
13	V	- [Coupe models without BOSE system]
13	L	- [Except for coupe models without BOSE system]
14	B	-
15	W	-
19	P	-
23	L	-
44	L	-
50	Y	-
51	Y	-
52	G	-
53	BG	-
54	GR	-
55	L	-



Connector No.	D36
Connector Name	FRONT DOOR SPEAKER RH
Connector Type	NS20FW-CS

Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	D303
Connector Name	ANTENNA AMP.
Connector Type	GT1SSC-17/S-HU



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	ANTENNA AMP. ON SIGNAL
2	-	AM-FM MAIN

Connector No.	D311
Connector Name	GLASS ANTENNA
Connector Type	PU1FB-A



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-

81	P	-
82	G	-
83	V	-
84	L	-
85	BG	-
86	LG	-
87	R	-
89	P	-
91	W	-
92	L	-
93	G	-
94	Y	-
96	Y	-
97	BR	-
98	GR	-
99	LG	-
100	BG	-

Connector No.	MI
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS30FW-M2



Terminal No.	Color of Wire	Signal Name [Specification]
1A	V	-
2A	G	-
3A	L	-
4A	P	-
5A	L	-
6A	Y	-
7A	BR	-
8A	L	-

JCNWA3501GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV


# BOSE AUDIO WITHOUT NAVIGATION

## [BOSE AUDIO WITHOUT NAVIGATION]

< WIRING DIAGRAM >


### BOSE AUDIO WITHOUT NAVIGATION SYSTEM

Connector No.	M5
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
7	Y	-
8	Y	-
9	G	-
10	V	-
11	V	-
12	L	-
13	B	-
14	Y	-
15	W	-
18	Y	-
23	Y/B	-
44	L	-
47	B	-
48	SB	-
49	Y	-
50	W	-
51	R	-
52	L	-
53	W	-
54	G	-
55	R	-


Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS1F-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	-

3	L	-
4	L	-
7	B	-
8	P	-
9	B	-
11	GR	-
12	R	-
13	L	-
14	G	-
15	P	-
16	W	-
17	BR	-
20	GR	-
21	R	-
31	BR	-
32	V	-
33	P	-
34	L	-
35	BR	-
36	SB	-
37	Y	-
38	LG	-
39	SB	-
40	W	-
41	LG	-
42	R	-
43	G	-
44	G	- [With A/T]
44	R	- [With M/T]
45	O	-
46	G	-
47	BR	-
58	SHIELD	-
59	L	-
70	R	-
80	LG	-
81	GR	-
82	V	-
83	V	-
84	L	-
85	BR	-
86	Y	-
87	G	-
89	P	-
91	W	-
92	P	-
93	P	-
94	Y	-
96	P	-
97	GR	-
98	O	-
99	W	-

100	R	-
-----	---	---



Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	O	-
3	LG	-
4	O	-
6	V	-
7	LG	-
8	SB	-
9	GR	-
11	Y	-
12	V	-
13	BR	-
14	V	-
15	B	-
16	V	-
17	R	-
18	L	-
20	SB	-
21	G	-
22	GR	-
23	V	-
24	R	-
25	L	-
26	P	-
27	B	-
28	SHIELD	-
31	W	-
32	B	-
33	W	-
34	R	-
35	B	-
36	L	-
40	L	-
41	R	-
42	GR	-
43	R	-

44	R	-
45	O	- [Coupe models]
46	SHIELD	- [Roadster models]
47	G	-
48	R	-
51	SHIELD	-
51	V	-
52	R	-
57	SHIELD	-
58	B	-
60	L	-
61	R	-
62	SHIELD	-
63	R	-
64	G	-
65	SHIELD	-
66	LG	-
67	V	-
68	SHIELD	-
69	L	-
70	P	-
71	V	-
72	P	-
73	BR	-
74	GR	-
75	O	-
80	Y	-
81	W	-
82	BR	-
83	GR	-
84	L	-
85	LG	-
86	V	-
87	BR	-
88	SB	-
93	Y	-
94	SB	- [Coupe models]
94	L	- [Roadster models]
95	GR	- [Coupe models]
95	W	- [Roadster models]
96	L	-
97	LG	- [Coupe models]
97	Y	- [Roadster models]
98	BG	- [Coupe models]
98	Y/B	- [Roadster models]
99	W	-
100	B	-

JCNWA3502GB


# BOSE AUDIO WITHOUT NAVIGATION

## [BOSE AUDIO WITHOUT NAVIGATION]

< WIRING DIAGRAM >


### BOSE AUDIO WITHOUT NAVIGATION SYSTEM

Connector No.	M1B
Connector Name	WIRE TO WIRE
Connector Type	TH12MW-NH



Terminal No.	15	W
Terminal No.	16	L

Connector No.	M36
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK0BFQY-TV



Terminal No.	Color of Wire	Signal Name [Specification]
24	P	
25	SB	
26	W	
31	L	
32	Y	
33	B	
34	LG	

Connector No.	M41
Connector Name	TWEETER LH
Connector Type	TK0ZFBR




Terminal No.	1	L
Terminal No.	2	W

Connector No.	M42
Connector Name	TWEETER RH
Connector Type	TK0ZFBR




Terminal No.	1	L
Terminal No.	2	W

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH24FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	BATTERY POWER SUPPLY
2	O	IGNITION POWER SUPPLY
3	L	VEHICLE SPEED SIGNAL (2-PULSE)
4	V	VEHICLE SPEED SIGNAL (8-PULSE) [Except for Mexico]
4	V	VEHICLE SPEED SIGNAL (3-PULSE) [For Mexico]
5	B	ILLUMINATION CONTROL SIGNAL
6	R	ROOF STATUS SIGNAL
9	BR	COMMUNICATION SIGNAL (W/EPF-T/EPLE METER)
10	L	COMMUNICATION SIGNAL (TRIPLE METER-METER)
12	G	S-MODE SWITCH SIGNAL
15	L	ACC POWER SUPPLY
16	R	AIR BAG SIGNAL
17	B	GROUND
18	V	AMBIENT SENSOR SIGNAL
19	G	A/C AUTO AMP CONNECTION RECOGNITION SIGNAL
20	GR	AMBIENT SENSOR GROUND
21	L	CAN-H
22	P	CAN-L
23	B	GROUND
24	Y	FUEL LEVEL SENSOR GROUND

Connector No.	M81
Connector Name	AUDIO UNIT
Connector Type	TH18FW-CS2



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	BOSE AMP ON SIGNAL
2	LG	SOUND SIGNAL FRONT LH (+)
3	V	SOUND SIGNAL FRONT LH (-)
4	L	SOUND SIGNAL REAR LH (+)
5	R	SOUND SIGNAL REAR LH (-)
6	W	STRG SW A [Except for Mexico]
6	P	STRG SW A [For Mexico]
7	L	ACC
8	W	ILL (+)
9	R	ILL (-)
10	SHIELD	SHIELD
11	L	SOUND SIGNAL FRONT RH (+)
12	P	SOUND SIGNAL FRONT RH (-)
13	R	SOUND SIGNAL REAR RH (+)
14	G	SOUND SIGNAL REAR RH (-)
15	B	STRG SW GND
16	GR	STRG SW B [Except for Mexico]
16	L	STRG SW B [For Mexico]
18	Y	VEHICLE SPEED SIGNAL (8-PULSE)
19	Y	BATTERY
20	SHIELD	SHIELD

JCNWA3503GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV


# BOSE AUDIO WITHOUT NAVIGATION

[BOSE AUDIO WITHOUT NAVIGATION]

< WIRING DIAGRAM >

## BOSE AUDIO WITHOUT NAVIGATION SYSTEM

Connector No.	M82
Connector Name	AUDIO UNIT
Connector Type	TH12FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
21	R	AV COMM (H)
22	G	AV COMM (L)
25	SHIELD	SHIELD
26	LG	TEL VOICE SIGNAL (+)
27	LV	TEL VOICE SIGNAL (-)
28	O	TELEPHONE ON SIGNAL

Connector No.	M83
Connector Name	AUDIO UNIT
Connector Type	A12FW




Terminal No.	Color of Wire	Signal Name [Specification]
31	W	SATELLITE RADIO SOUND SIGNAL LH (-)
32	B	SATELLITE RADIO SOUND SIGNAL LH (+)
33	R	SATELLITE RADIO SOUND SIGNAL RH (-)
34	G	SATELLITE RADIO SOUND SIGNAL RH (+)
35	SHIELD	SHIELD
36	SHIELD	SHIELD
38	P	REQUEST (SAT->AUDIO) [Coupe models]
38	Y	REQUEST (SAT->AUDIO) [Roadster models]
38	G	COMM (SAT->AUDIO)
40	L	COMM (AUDIO->SAT)

Connector No.	M106
Connector Name	WIRE TO WIRE
Connector Type	TH18MW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
4	W	
5	R	
6	B	
7	P	
8	R	
11	B	
12	G	
13	Y	
14	SHIELD	
15	R	
16	G	

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS18-TM4




Terminal No.	Color of Wire	Signal Name [Specification]
2	GR	
2	LG	
3	O	
3	B	
4	W	
7	Y	
8	LG	
9	Y	
11	R	
20	G	

Terminal No.	Color of Wire	Signal Name [Specification]
21	R	
30	B	
40	O	
41	Y	
42	G	
43	L	
44	SB	
51	R	
52	G	
53	SHIELD	
54	LG	
55	V	
56	SHIELD	
57	P	
58	R	
58	L	
59	B	
60	W	
61	GR	
62	B	
63	Y	
64	L	
65	G	
66	O	
67	V	
68	P	
69	L	
70	L	
72	B	
73	B	
74	B	
75	B	
76	B	
80	L	
81	Y	
82	W	
83	B	
84	R	
85	G	
86	SHIELD	
87	G	
88	L	
89	P	
89	Y	
90	SHIELD	
92	G	
93	LG	
93	R	
93	V	
94	SHIELD	
94	G	

95	SB	
95	LG	
97	LC	
97	V	
98	V	
98	Y/B	
99	G	
100	BR	
100	Y	

Connector No.	M124
Connector Name	WIRE TO WIRE
Connector Type	TH40MW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
10	G	
11	V	
12	LG	
13	V	
14	B	
15	W	
19	Y	
23	Y/B	
44	O	
50	Y	
51	Y	
52	GR	
53	W	
54	G	
55	R	

JCNWA3504GB



# BOSE AUDIO WITHOUT NAVIGATION

## [BOSE AUDIO WITHOUT NAVIGATION]

< WIRING DIAGRAM >

### BOSE AUDIO WITHOUT NAVIGATION SYSTEM

Connector No.	M303
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FY



Terminal No.	Color of Wire	Signal Name [Specification]
13	-	-
14	-	-
15	-	-
16	-	-
17	-	-
18	-	-
19	-	-
20	-	-

Connector No.	M401
Connector Name	AUDIO UNIT
Connector Type	GT13SH-2/1S-HU



Terminal No.	Color of Wire	Signal Name [Specification]
43	-	ANTENNA AMP. ON SIGNAL
44	-	ANTENNA SIGNAL

Connector No.	M405
Connector Name	WIRE TO WIRE
Connector Type	GT13SC-1/1S-HU



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	M408
Connector Name	WIRE TO WIRE
Connector Type	GT13SC-1/1S-HU



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	TH12FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
4	W	-
5	R	-


6	B	-
7	P	-
8	R	-
11	B	-
12	Y	-
13	G	-
14	SHIELD	-
15	R	-
16	G	-

Connector No.	R5
Connector Name	MICROPHONE
Connector Type	TK04FW



Terminal No.	Color of Wire	Signal Name [Specification]
1	P	MICROPHONE SIGNAL
2	SHIELD	SHIELD
4	L	MICROPHONE VCC

Connector No.	R11
Connector Name	WIRE TO WIRE
Connector Type	TH12FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	SB	-
2	B	-
3	R	-
4	B	-
5	V	-
6	R	-
7	SHIELD	-
8	R	-

9	G	-
10	B	-
11	G	-
12	Y	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

# AUDIO SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## SYMPTOM DIAGNOSIS

### AUDIO SYSTEM SYMPTOMS



#### Symptom Table

INFOID:000000006709127

#### AUDIO SYSTEM

Symptoms	Check items	Possible malfunction location / Action to take
Audio sound is not heard.	No sound from all speakers.	<ul style="list-style-type: none"> <li>Audio unit power supply and ground circuit. Refer to <a href="#">AV-57, "AUDIO UNIT : Diagnosis Procedure"</a>.</li> <li>BOSE amp. power supply and ground circuit. Refer to <a href="#">AV-57, "BOSE AMP. : Diagnosis Procedure"</a>.</li> <li>BOSE amp. ON signal circuit. Refer to <a href="#">AV-82, "Diagnosis Procedure"</a>.</li> </ul>
	Sound is not heard from woofer.	Sound signal woofer circuit
	Sound is not heard only from the specific places.	Sound signal circuit of malfunctioning system.
Satellite radio is not received.	When "RADIO" switch is pressed, it change to satellite radio mode.	<ul style="list-style-type: none"> <li>Satellite radio sound signal circuit</li> <li>Satellite radio antenna</li> </ul>
	When "RADIO" switch is pressed, it does not change to satellite radio mode.	<ul style="list-style-type: none"> <li>Satellite radio tuner power supply and ground circuit. Refer to <a href="#">AV-58, "SATELLITE RADIO TUNER : Diagnosis Procedure"</a>.</li> <li>Request signal circuit. Refer to <a href="#">AV-80, "Diagnosis Procedure"</a>.</li> <li>Communication circuit between audio unit and satellite radio tuner. Refer to <a href="#">AV-78, "Diagnosis Procedure"</a>.</li> </ul>

#### RELATED TO STEERING SWITCH

Symptoms	Possible malfunction location / Action to take
All steering switches are not operated.	Steering switch signal ground circuit. Refer to <a href="#">AV-64, "Diagnosis Procedure"</a> .
Only specified switch cannot be operated.	Steering switch
"  ", "MENU UP", "MENU DOWN" and "SOURCE" switches are not operated.	Steering switch signal A circuit (steering switch to TEL adapter unit). Refer to <a href="#">AV-60, "Diagnosis Procedure"</a> .
"  ", "VOL UP" and "VOL DOWN" switches are not operated.	Steering switch signal B circuit (steering switch to TEL adapter unit). Refer to <a href="#">AV-62, "Diagnosis Procedure"</a> .

# HANS-FREE PHONE SYMPTOMS

[BOSE AUDIO WITHOUT NAVIGATION]

< SYMPTOM DIAGNOSIS >

## HANS-FREE PHONE SYMPTOMS

### Symptom Table

INFOID:00000006709128

#### RELATED TO HANDS-FREE PHONE

- Check that the cellular phone is corresponding type (Bluetooth™ enabled) when the hands-free related malfunction vehicle is in service before performing a diagnosis.
- There is a case that malfunction occurs due to the version change of the phone type, etc. even though it is a corresponding type. Therefore, confirm it by changing the cellular phone to another corresponding type phone, and check that it operates normally. It is necessary to distinguish whether the cause is the vehicle or cellular phone. Check to ensure the customer's phone is supported by checking the phone compatibility for the hands-free system.

#### Simple Check for Bluetooth™ Communication


If cellular phone and TEL adapter unit cannot be connected with Bluetooth™ communication, following procedure allows the technician to judge which device has malfunction.

1. Turn on a cellular phone, not connecting Bluetooth™ communication.
2. Start CONSULT-III, then start Windows®.
3. Set CONSULT-III near a cellular phone.
4. When operated Bluetooth™ registration by cellular phone, check if CONSULT-III\* would be displayed on the device name.  
(If other Bluetooth™ device is located near cellular phone, a name of the device would be displayed also.)

**NOTE:**

\*:Displayed device name is "NISSAN-\*\*\*\*\*".

- If no device name is displayed, cellular phone is malfunction. Repair the cellular phone first, then perform diagnosis.
- If CONSULT-III is displayed on device name, cellular phone is normal. Perform diagnosis as per the following table.

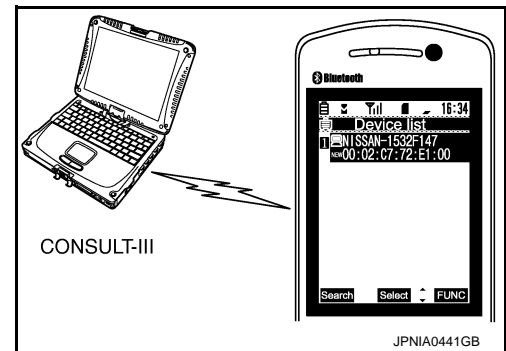

#### Trouble Diagnosis Chart by Symptom



Symptoms	Check items	Possible malfunction location/Action to take
Does not recognize cellular phone connection.	Repeat the registration of cellular phone.	TEL adapter unit
Hands-free phone cannot be established.	<ul style="list-style-type: none"> <li>• Both the reception and the speech cannot be performed.</li> <li>• Audio cannot be operated by steering switch.</li> </ul>	TEL adapter unit power supply and ground circuit. Refer to <a href="#">AV-58, "TEL ADAPTER UNIT : Diagnosis Procedure"</a> .
	<ul style="list-style-type: none"> <li>• Both the reception and the speech cannot be performed.</li> <li>• Audio can be operated by steering switch.</li> </ul>	Telephone ON signal circuit. Refer to <a href="#">AV-85, "Diagnosis Procedure"</a> .
The other party's voice cannot be heard by hands-free phone.	Audio system sound is normal.	Sound signal (telephone voice, telephone guidance) circuit
	Audio system sound does not sound.	Refer to <a href="#">AV-114, "Symptom Table"</a> .
Originating sound is not heard by the other party with hands-free phone communication.	Sound operation function is normal.	TEL adapter unit
	Sound operation function does not work.	Microphone signal circuit. Refer to <a href="#">AV-83, "Diagnosis Procedure"</a> .
When hands-free phone is in use, the information (connection time etc.) is not displayed on the audio screen.	—	AV communication signal (H, L)

#### RELATED TO STEERING SWITCH

# HANS-FREE PHONE SYMPTOMS

[BOSE AUDIO WITHOUT NAVIGATION]

< SYMPTOM DIAGNOSIS >

Symptoms	Possible malfunction location / Action to take
All steering switches are not operated.	Steering switch signal ground circuit. Refer to <a href="#">AV-64, "Diagnosis Procedure"</a> .
Only specified switch cannot be operated.	Steering switch
“  ”, “MENU UP”, “MENU DOWN” and “SOURCE” switches are not operated.	<ul style="list-style-type: none"> <li>Steering switch signal A circuit (steering switch to TEL adapter unit). Refer to <a href="#">AV-60, "Diagnosis Procedure"</a>.</li> <li>Steering switch signal A circuit (TEL adapter unit to audio unit). Refer to <a href="#">AV-66, "Diagnosis Procedure"</a>.</li> </ul>
“  ”, “VOL UP” and “VOL DOWN” switches are not operated.	<ul style="list-style-type: none"> <li>Steering switch signal B circuit (steering switch to TEL adapter unit). Refer to <a href="#">AV-62, "Diagnosis Procedure"</a>.</li> <li>Steering switch signal B circuit (TEL adapter unit to audio unit). Refer to <a href="#">AV-68, "Diagnosis Procedure"</a>.</li> </ul>

# NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[BOSE AUDIO WITHOUT NAVIGATION]

## NORMAL OPERATING CONDITION

### Description

INFOID:000000006709129

#### RELATED TO AUDIO

- The majority of the audio malfunctions are the result of outside causes (bad CD, electromagnetic interference, etc.). Check the symptoms below to diagnose the malfunction.
- The vehicle itself can be a source of noise if noise prevention parts or electrical equipment is malfunctioning. Check that noise is caused and/or changed by engine speed, ignition switch turned to each position, and operation of each piece of electrical equipment. Then determine the cause.

**NOTE:**

- CD-R is not guaranteed to play because they can contain compressed audio (MP3, WMA) or could be incorrectly mastered by the customer on a computer.
- Check that the CDs carry the Compact Disc Logo. If not, the disc is not mastered to the red book Compact Disc Standard and may not play.

Symptoms	Cause and Counter measure
Cannot play	Check that the CD was inserted correctly.
	Check that the CD is scratched or dirty.
	Check that there is condensation inside the player, and if there is, wait until the condensation is gone (about 1 hour) before using the player.
	The player will play correctly after it returns to the normal temperature if there is a temperature increase error.
	Only the music CD files (CD-DA data) will be played if there is a mixture of music CD files (CD-DA data) and MP3/WMA files on a CD.
	Files with extensions other than “.MP3”, “.WMA”, “.mp3”, or “.wma” cannot be played.
	Check that the finalization process, such as session close and disc close, is done for the disc.
Poor sound quality	Check that the CD is scratched or dirty.
	Check that the CD is protected by copyright.
It takes a relatively long time before the music starts playing.	If there are many folder or file levels on the MP3/WMA CD, or if it is a multi session disc, some time may be required before the music starts playing.
The songs do not play back in the desired order.	The playback order is the order in which the files were written by the software, so the files might not play in the desired order.

Noise resulting from variations in field strength, such as fading noise and multi-path noise, or external noise from trains and other sources, is not a malfunction.

**NOTE:**

- Fading noise: This noise occurs because of variations in the field strength in a narrow range due to mountains or buildings blocking the signal.
- Multi-path noise: This noise results from a time difference between the broadcast waves directly from the station arriving at the antenna and the waves reflected by mountains or buildings.

#### RELATED TO TELEPHONE

Symptom	Possible cause	Possible solution
The voice on the other side is difficult to be heard. The voice is difficult to reach the other side of the connection.	The interior of the vehicle is too noisy.	Close the windows or have other occupants be quiet.
	The volume of the voice is too low.	Speak louder.
	Pronunciation is unclear.	Speak clearly.

&lt; PRECAUTION &gt;

## PRECAUTION

### PRECAUTIONS

#### EXCEPT FOR MEXICO

EXCEPT FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006709130

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted.

Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

**WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

#### FOR MEXICO

FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:00000000680848

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

**WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

#### PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

# PRECAUTIONS

< PRECAUTION >

[BOSE AUDIO WITHOUT NAVIGATION]

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

## Precaution for Battery Service

INFOID:000000006709131

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

## Precaution for Trouble Diagnosis

INFOID:000000006871595

### AV COMMUNICATION SYSTEM


- Do not apply voltage of 7.0 V or higher to the measurement terminals.
- Use the tester with its open terminal voltage being 7.0 V or less.
- Be sure to turn ignition switch OFF and disconnect the battery cable from the negative terminal before checking the circuit.

## Precaution for Harness Repair


INFOID:000000006709132

### AV COMMUNICATION SYSTEM

- Solder the repaired parts, and wrap with tape. [Frays of twisted line must be within 110 mm (4.33 in).]

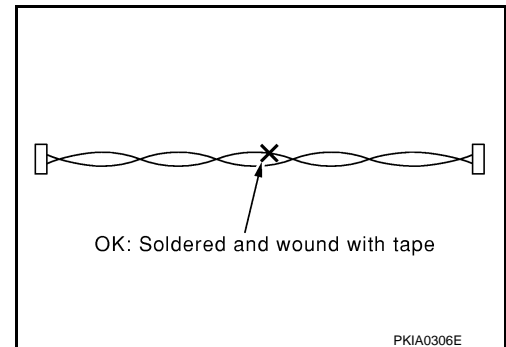

- Do not perform bypass wire connections for the repair parts. (The spliced wire will become separated and the characteristics of twisted line will be lost.)

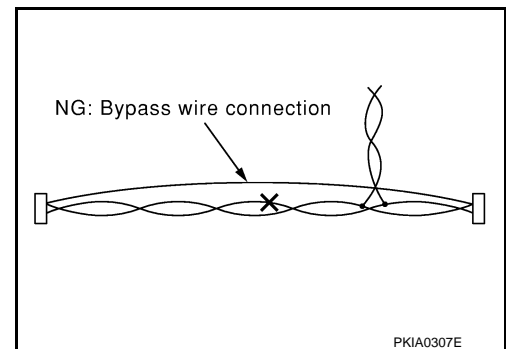

# PREPARATION

< PREPARATION >


[BOSE AUDIO WITHOUT NAVIGATION]

## PREPARATION

### PREPARATION

#### Commercial Service Tools

INFOID:000000006709136

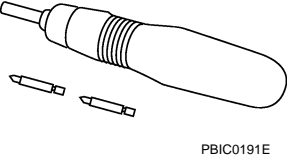Tool name	Description
<p data-bbox="162 520 272 541">Power tool</p>  <p data-bbox="828 632 899 646">PBIC0191E</p>	<p data-bbox="1010 520 1192 541">Loosening screws</p>



# AUDIO UNIT

< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITHOUT NAVIGATION]


## REMOVAL AND INSTALLATION

### AUDIO UNIT

#### Exploded View


#### REMOVAL

INFOID:000000006709137

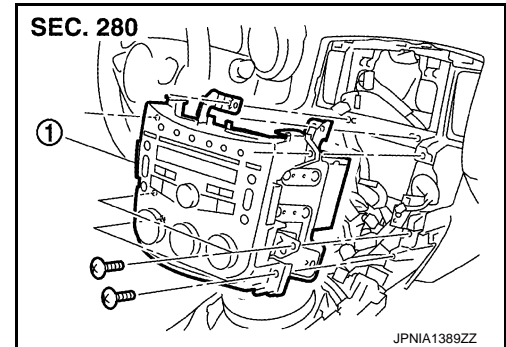

1. Audio unit

#### DISASSEMBLY

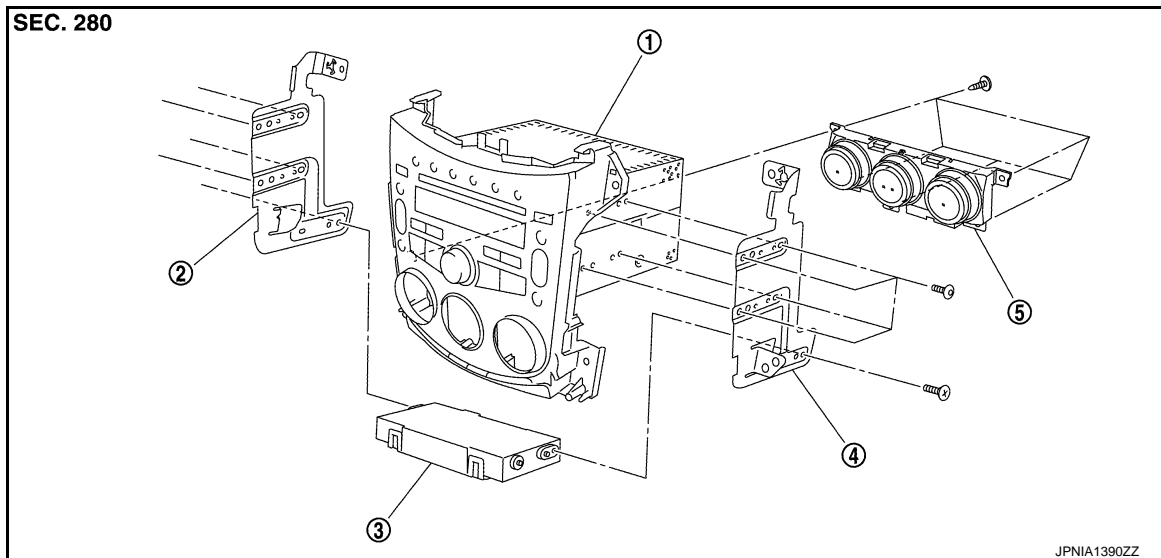

- |               |                |                  |
|---------------|----------------|------------------|
| 1. Audio unit | 2. Bracket LH  | 3. A/C auto amp. |
| 4. Bracket RH | 5. A/C control |                  |

### Removal and Installation

INFOID:000000006709138

#### REMOVAL

1. Remove cluster lid C. Refer to [IP-14. "Exploded View"](#).
2. Remove audio unit with A/C auto amp. and A/C control as a single unit from the body.
3. Remove screws to remove A/C control.
4. Remove bracket screws to remove audio unit.

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

## FRONT DOOR SPEAKER


< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITHOUT NAVIGATION]

### FRONT DOOR SPEAKER

#### Exploded View

INFOID:000000006709139

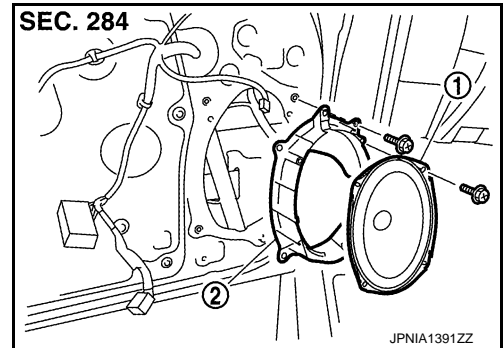

1. Front door speaker
2. Speaker bracket

#### Removal and Installation

INFOID:000000006709140

##### REMOVAL

1. Remove door finisher. Refer to [INT-15. "Exploded View"](#) (coupe models) or [INT-47. "Exploded View"](#) (roadster models).
2. Remove front door speaker screws, then disconnect front door speaker connector and remove front door speaker.

##### INSTALLATION

Install in the reverse order of removal.

# TWEETER


< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITHOUT NAVIGATION]

## TWEETER

### Exploded View

INFOID:000000006709141

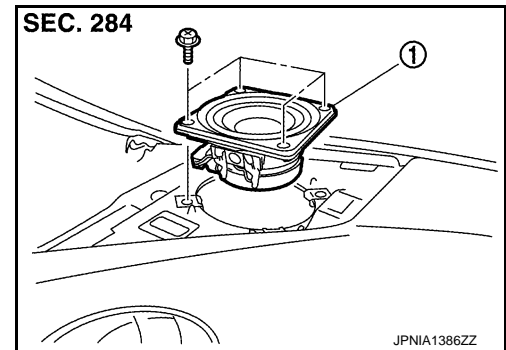

1. Tweeter

### Removal and Installation

INFOID:000000006709142

#### REMOVAL

1. Remove speaker grille. Refer to [JP-14, "Exploded View"](#).
2. Remove tweeter screws, then lift up tweeter, disconnect connector and remove tweeter.

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

## REAR SPEAKER


< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITHOUT NAVIGATION]

### REAR SPEAKER

#### Exploded View

INFOID:000000006709143

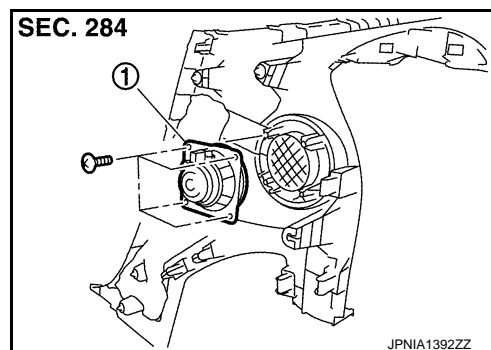

1. Rear speaker

#### Removal and Installation

INFOID:000000006709144

##### REMOVAL

1. Remove rear side finisher. Refer to [INT-18. "Exploded View"](#) (coupe models) or [INT-51. "Exploded View"](#) (roadster models).
2. Remove rear speaker screws, then remove rear speaker.

##### INSTALLATION

Install in the reverse order of removal.

# WOOFER


< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITHOUT NAVIGATION]

## WOOFER

### Exploded View

INFOID:000000006709145

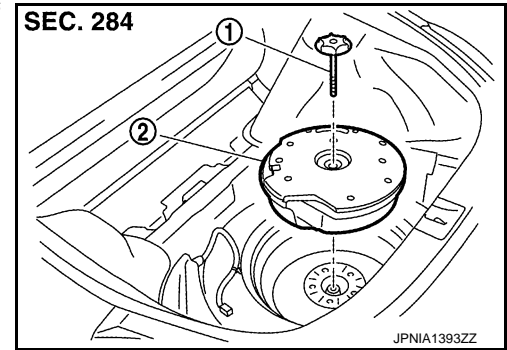

1. Clamp
2. Woofer

### Removal and Installation

INFOID:000000006709146

#### REMOVAL

1. Remove luggage spacer. Refer to [INT-31. "Exploded View"](#).
2. Remove clamp, then disconnect woofer connector and remove the woofer.

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

## REAR WOOFER

### Removal and Installation

INFOID:000000006709147

#### REMOVAL

1. Remove the mounting clip on the front side of the storage room finisher and the soft top bumper rubber. Refer to [RF-233, "STORAGE ROOM FINISHER : Removal and Installation"](#).
2. Turn up the storage room finisher to obtain work space.
3. Remove rear woofer bracket.
4. Remove the screw and disconnect the connector to remove the rear woofer.

#### INSTALLATION

Install in the reverse order of removal.

# BOSE AMP.

< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITHOUT NAVIGATION]


## BOSE AMP.

### COUPE

#### COUPE : Exploded View


INFOID:000000006709148

#### REMOVAL

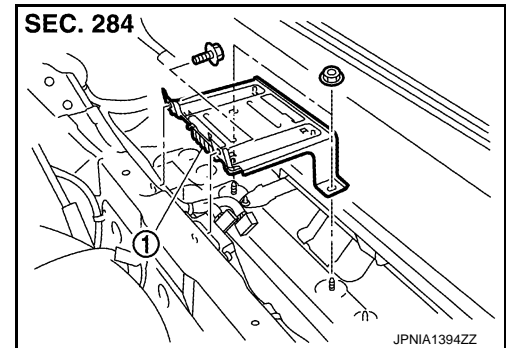

1. BOSE amp.

#### DISASSEMBLY

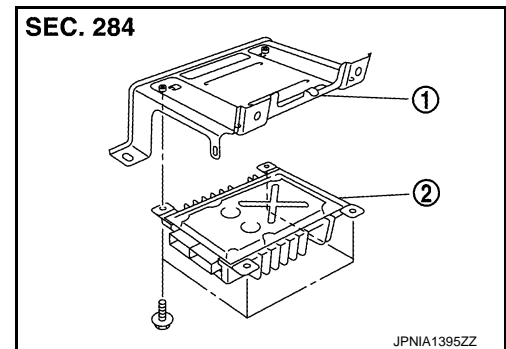

1. Bracket
2. BOSE amp.

#### COUPE : Removal and Installation

INFOID:000000006709149

#### REMOVAL

1. Remove luggage floor spacer front. Refer to [INT-31. "Exploded View"](#).
2. Disconnect BOSE amp. connector, remove BOSE amp. with bracket as a single unit from body.
3. Remove BOSE amp. bracket screws to remove BOSE amp.

#### INSTALLATION

Install in the reverse order of removal.

### ROADSTER

#### ROADSTER : Removal and Installation

INFOID:000000006709150

#### REMOVAL

1. Remove luggage floor spacer front. Refer to [INT-31. "Exploded View"](#).
2. Disconnect BOSE amp. connector, remove BOSE amp. with bracket as a single unit from body.
3. Remove BOSE amp. bracket screws to remove BOSE amp.

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

## ANTENNA AMP.


< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITHOUT NAVIGATION]

### ANTENNA AMP.

#### Exploded View

INFOID:000000006709151

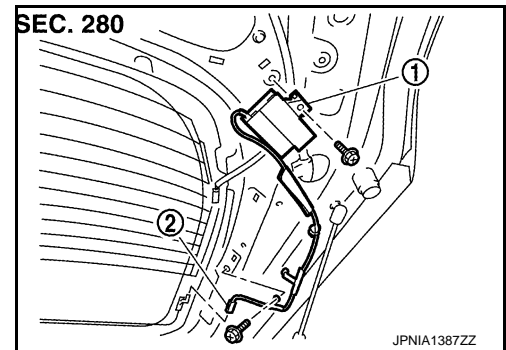

1. Antenna amp.
2. Connector

#### Removal and Installation

INFOID:000000006709152

##### REMOVAL

1. Remove back door finisher side. Refer to [INT-33, "Exploded View"](#).
2. Disconnect connector and remove screw, then remove antenna amp.

##### INSTALLATION

Install in the reverse order of removal.



# ANTENNA BASE


< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITHOUT NAVIGATION]

## ANTENNA BASE

### Exploded View

INFOID:000000006709153

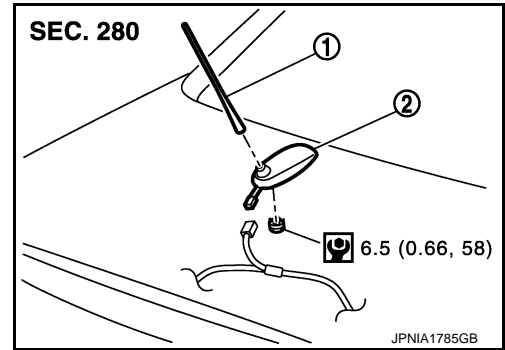

1. Antenna rod
2. Antenna base

Refer to [GI-4, "Components"](#) for symbols in the figure.

### Removal and Installation

INFOID:000000006709154

#### REMOVAL

1. Remove trunk lid finisher inner. Refer to [INT-79, "Exploded View"](#).
2. Remove antenna base mounting nut, disconnect the antenna base connector.
3. Remove antenna base.

#### INSTALLATION

Installation is the reverse order of removal.

#### **CAUTION:**

**Be careful about tightening torque. Antenna sensitivity becomes poor, and when it is excessive, trunk lid panel may be deformed, when antenna base mounting nut tightening torque is loose.**

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# SATELLITE RADIO TUNER

< REMOVAL AND INSTALLATION >


[BOSE AUDIO WITHOUT NAVIGATION]

## SATELLITE RADIO TUNER

### Exploded View


INFOID:000000006709155

### REMOVAL

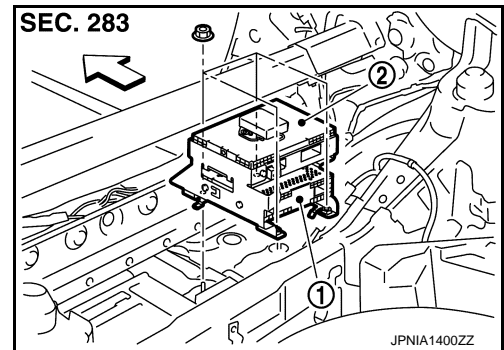

1. Satellite radio tuner
  2. TEL adapter unit
- ↔: Vehicle front

### DISASSEMBLY

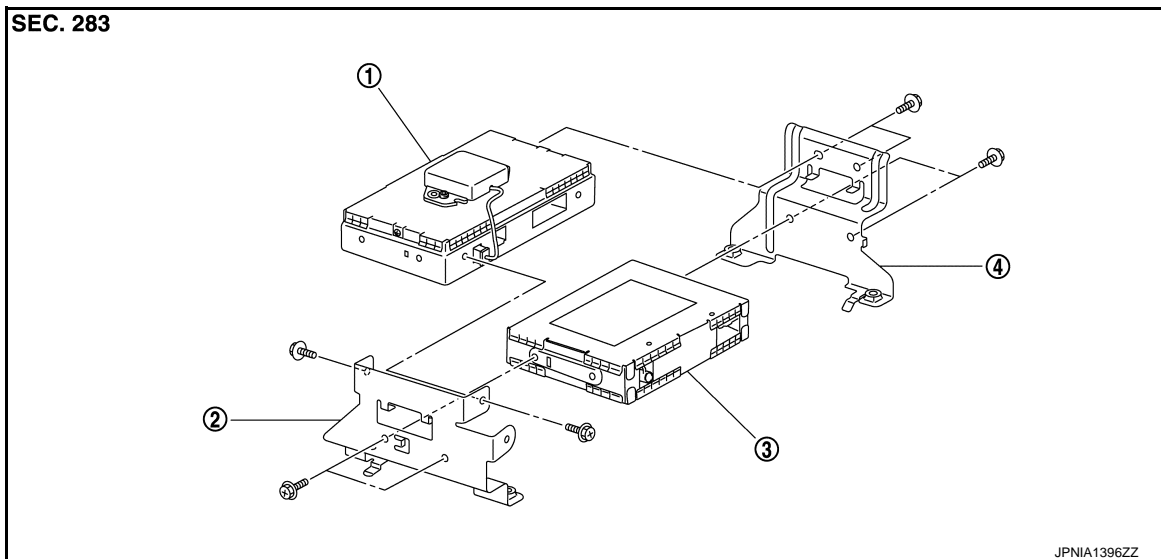

1. TEL adapter unit
2. Bracket LH
3. Satellite radio tuner
4. Bracket RH

### Removal and Installation

INFOID:000000006709156

#### REMOVAL

1. Remove Luggage spacer center front. Refer to [INT-31, "Exploded View"](#).
2. Disconnect TEL adapter unit connector and satellite radio tuner connector.
3. Remove satellite radio tuner with TEL adapter unit as a single unit from the body.
4. Remove bracket screws, and then remove satellite radio tuner.

#### INSTALLATION

Install in the reverse order of removal.

# SATELLITE RADIO ANTENNA


< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITHOUT NAVIGATION]

## SATELLITE RADIO ANTENNA

### Exploded View

INFOID:000000006709157

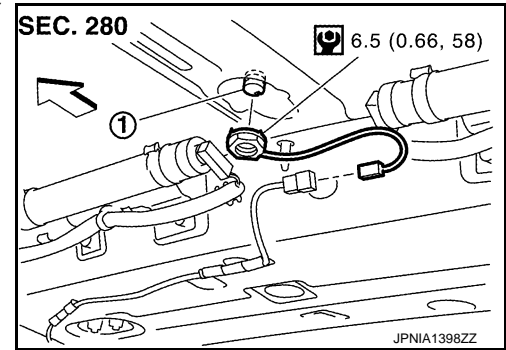

1. Satellite radio antenna

←: Vehicle front

Refer to [GI-4, "Components"](#) for symbols in the figure.

### Removal and Installation

INFOID:000000006709158

#### REMOVAL

1. Remove rear pillar finisher (LH/RH). Refer to [INT-18, "Exploded View"](#).
2. Pull down headlining (rear side) and obtain space for work between vehicle and headlining. Refer to [INT-28, "Exploded View"](#).
3. Disconnect satellite radio antenna connector.
4. Remove satellite radio antenna mounting nut, then remove satellite radio antenna from roof panel.

#### INSTALLATION

Install in the reverse order of removal.

#### **CAUTION:**

- **Never bend headlining when pull down headlining (rear side).**
- **When satellite radio antenna mounting nut tightening torque is loose, be careful about tightening torque. Antenna sensitivity becomes poor, and when it is excessive, roof panel may become deformed.**

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

## STEERING SWITCH

< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITHOUT NAVIGATION]

---

### STEERING SWITCH

#### Exploded View

INFOID:000000006709159

Refer to [SR-14, "Exploded View"](#).

#### Removal and Installation

INFOID:000000006709160

#### REMOVAL

Refer to [SR-14, "Exploded View"](#).

#### INSTALLATION

Install in the reverse order of removal.

# TEL ADAPTER UNIT

< REMOVAL AND INSTALLATION >


[BOSE AUDIO WITHOUT NAVIGATION]

## TEL ADAPTER UNIT

### Exploded View


INFOID:000000006709161

### REMOVAL

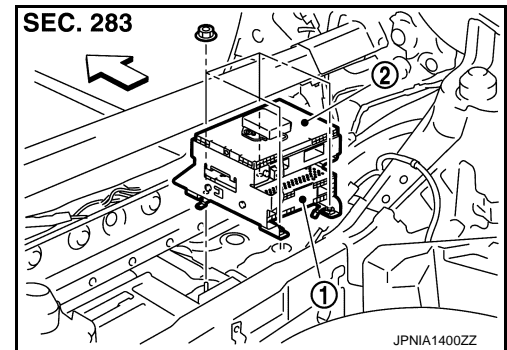

1. Satellite radio tuner
  2. TEL adapter unit
- ← : Vehicle front

### DISASSEMBLY

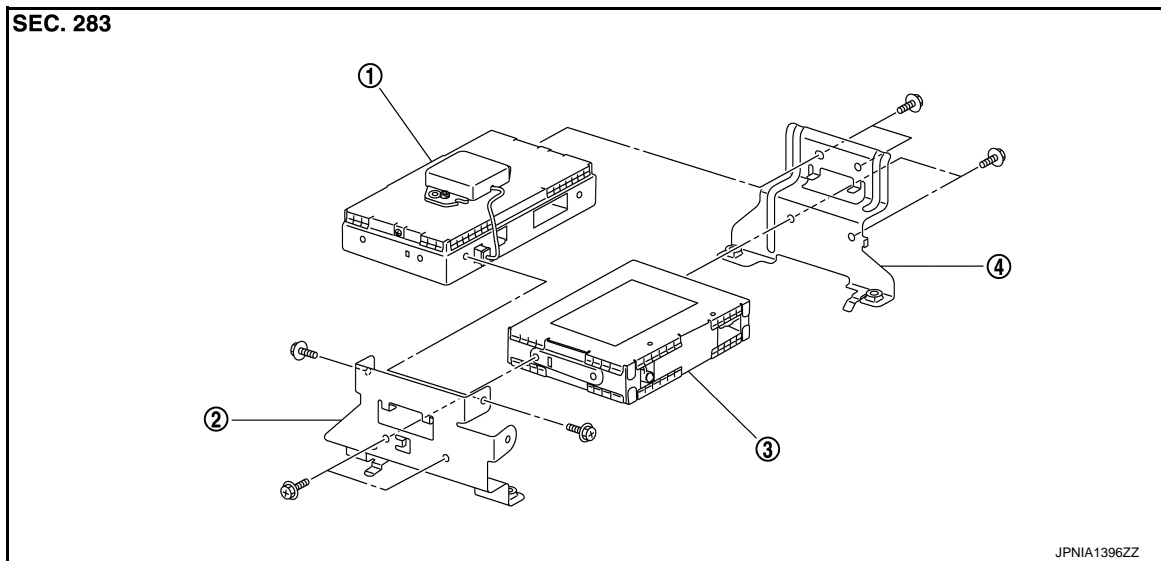

1. TEL adapter unit
2. Bracket LH
3. Satellite radio tuner
4. Bracket RH

### Removal and Installation

INFOID:000000006709162

#### REMOVAL

1. Remove luggage spacer center front. Refer to [INT-31, "Exploded View"](#).
2. Disconnect TEL adapter unit connector and satellite radio tuner connector.
3. Remove TEL adapter unit with satellite radio tuner as a single unit from the body.
4. Remove bracket screws, and then remove TEL adapter unit.

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# MICROPHONE

< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITHOUT NAVIGATION]

## MICROPHONE


### Exploded View

INFOID:000000006709163

### REMOVAL

Refer to [INL-54, "Exploded View"](#) (Coupe models) or [INL-118, "Exploded View"](#) (Roadster models).

### DISASSEMBLY

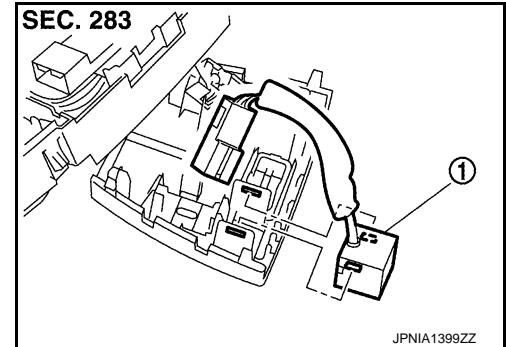

1. Microphone

### Removal and Installation

INFOID:000000006709164

### REMOVAL

1. Remove map lamp. Refer to [INL-54, "Exploded View"](#) (coupe models), or [INL-118, "Exploded View"](#) (roadster models).
2. Press the pawl to remove microphone from map lamp.

### INSTALLATION

Install in the reverse order of removal.

# ANTENNA FEEDER

< REMOVAL AND INSTALLATION >


[BOSE AUDIO WITHOUT NAVIGATION]

## ANTENNA FEEDER

### COUPE

### COUPE : Feeder Layout

INFOID:000000006709165

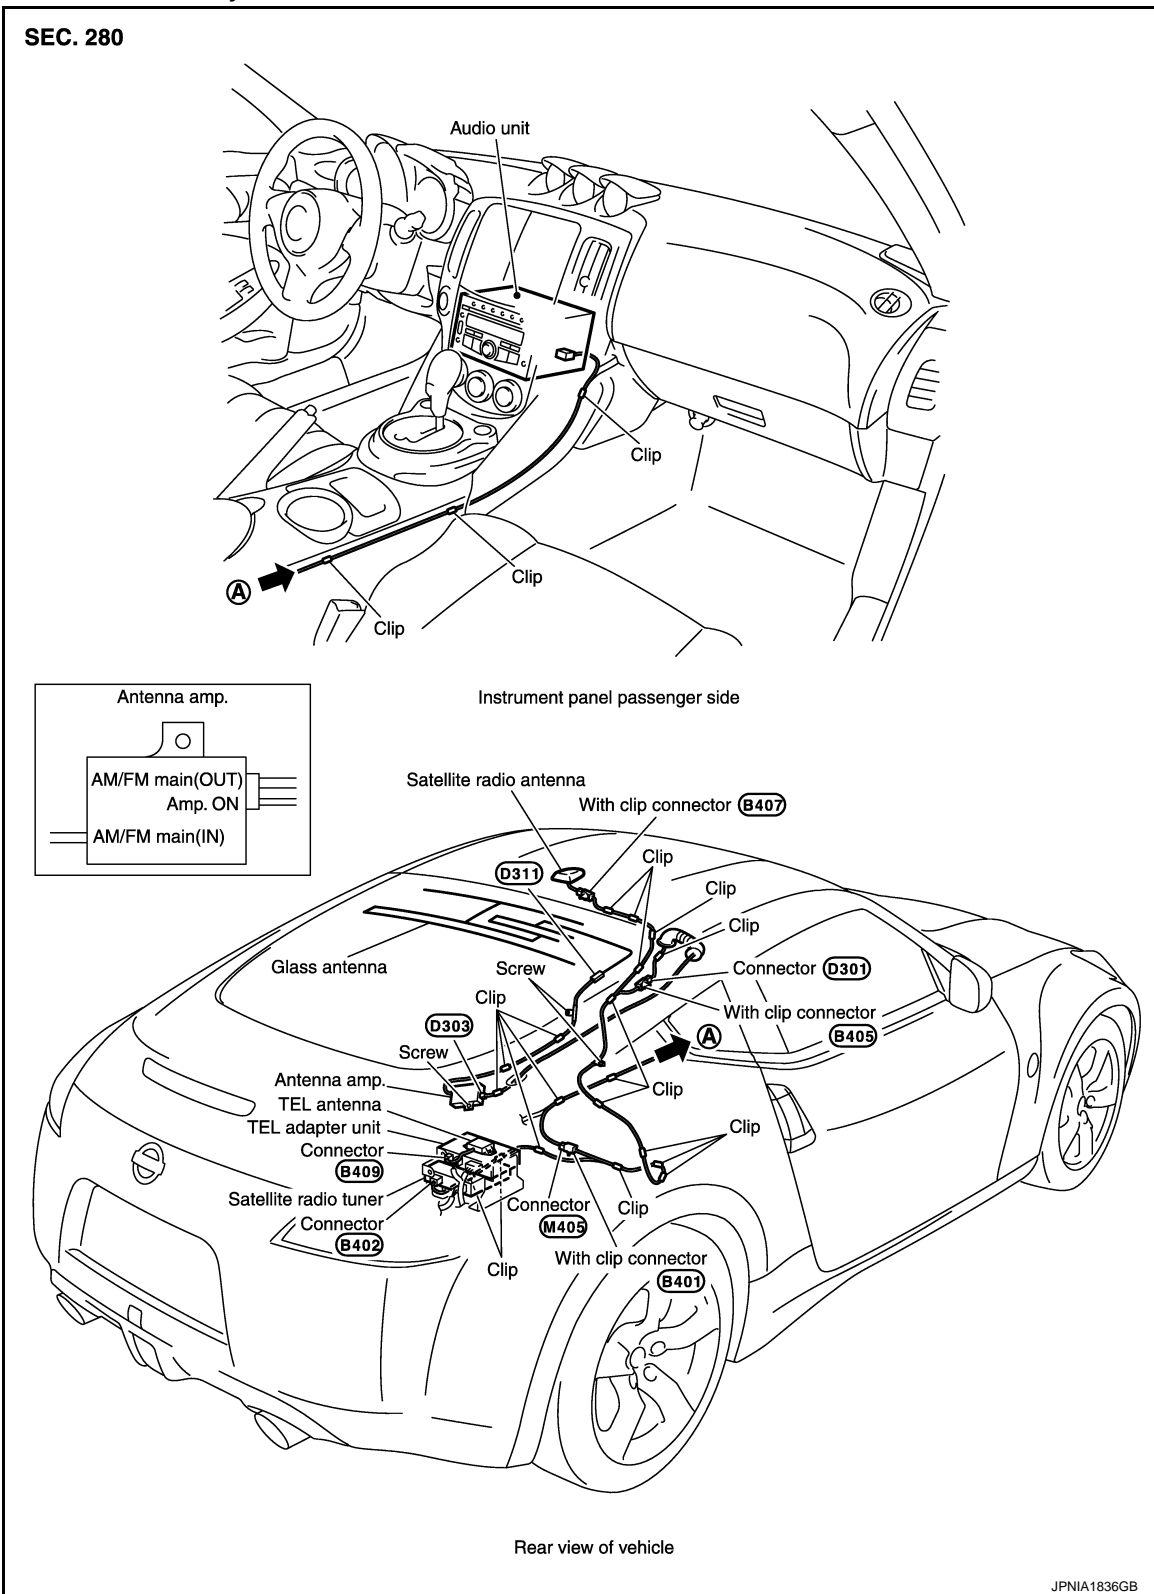

### ROADSTER

# ANTENNA FEEDER


< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITHOUT NAVIGATION]


## ROADSTER : Feeder Layout

INFOID:00000006709166

### SEC. 280

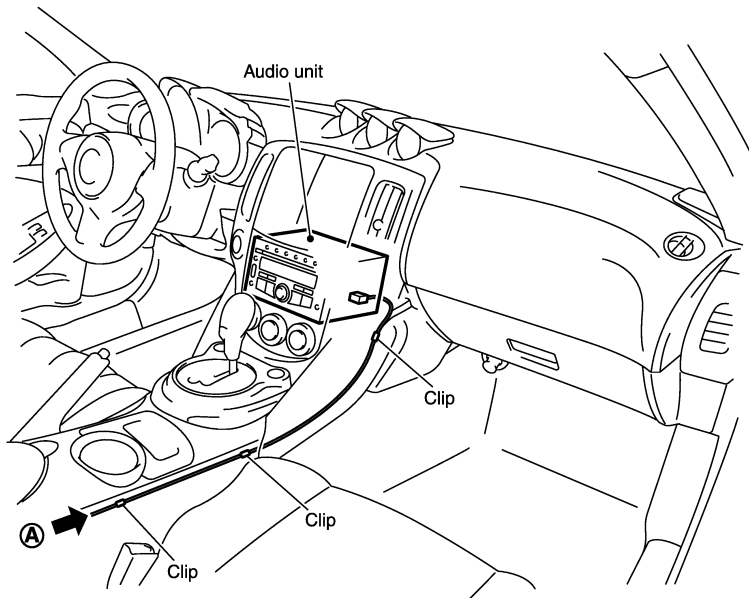

Instrument panel passenger side

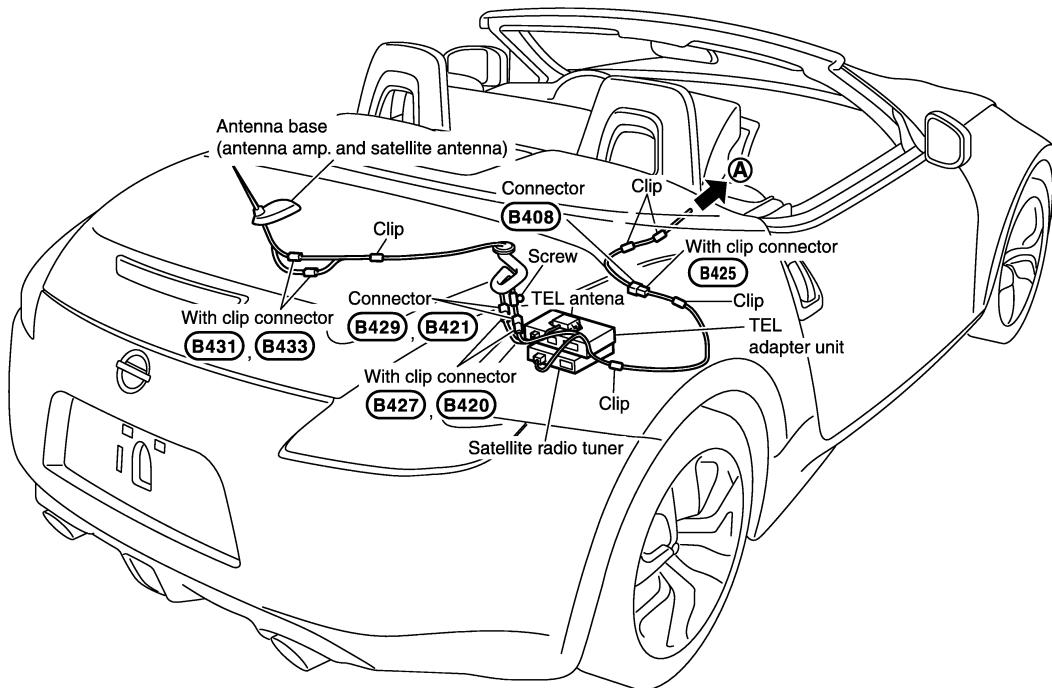

Rear view of vehicle

JPNIA1838GB



PRECAUTION

PRECAUTIONS  
EXCEPT FOR MEXICO

EXCEPT FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000006709167

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

**WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR MEXICO

FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:00000000680837

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

**WARNING:**

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

**WARNING:**

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

# PRECAUTIONS

< PRECAUTION >

[BOSE AUDIO WITH NAVIGATION]

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Cautions in Removing Battery Terminal and AV Control Unit (Models with AV Control Unit)

INFOID:000000006900463

## CAUTION:

Remove battery terminal and AV control unit after a lapse of 30 seconds or more after turning the ignition switch OFF.

## NOTE:

After the ignition switch is turned OFF, the AV control unit continues operating for approximately 30 seconds. Therefore, data corruption may occur if battery voltage is cut off within 30 seconds.

## Precaution for Battery Service

INFOID:000000006709168

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

## Precaution for Trouble Diagnosis

INFOID:000000006709169

## AV COMMUNICATION SYSTEM


- Do not apply voltage of 7.0 V or higher to the measurement terminals.
- Use the tester with its open terminal voltage being 7.0 V or less.
- Be sure to turn ignition switch OFF and disconnect the battery cable from the negative terminal before checking the circuit.

## Precaution for Harness Repair


INFOID:000000006709170

## AV COMMUNICATION SYSTEM

- Solder the repaired parts, and wrap with tape. [Frays of twisted line must be within 110 mm (4.33 in).]

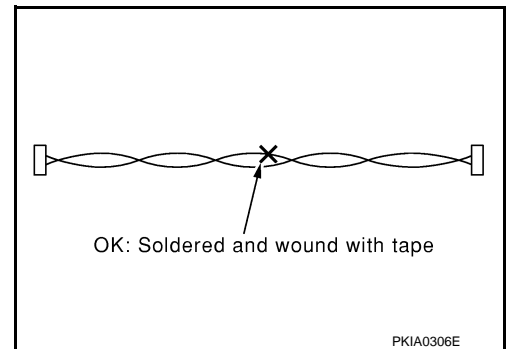

- Do not perform bypass wire connections for the repair parts. (The spliced wire will become separated and the characteristics of twisted line will be lost.)

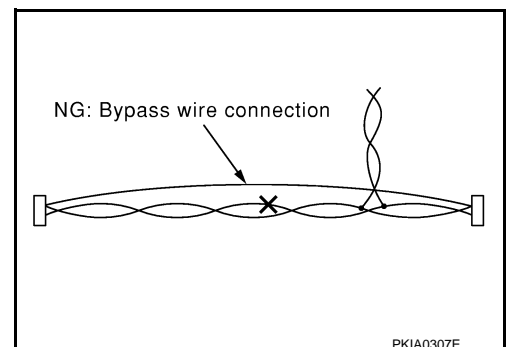

# PREPARATION

< PREPARATION >


[BOSE AUDIO WITH NAVIGATION]

## PREPARATION

### PREPARATION

#### Commercial Service Tools

INFOID:000000006709175

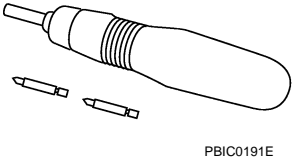Tool name	Description
Power tool  PBIC0191E	Loosening screws

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[BOSE AUDIO WITH NAVIGATION]


## SYSTEM DESCRIPTION

### COMPONENT PARTS

#### Component Parts Location

INFOID:000000006709176

#### COUPE MODELS

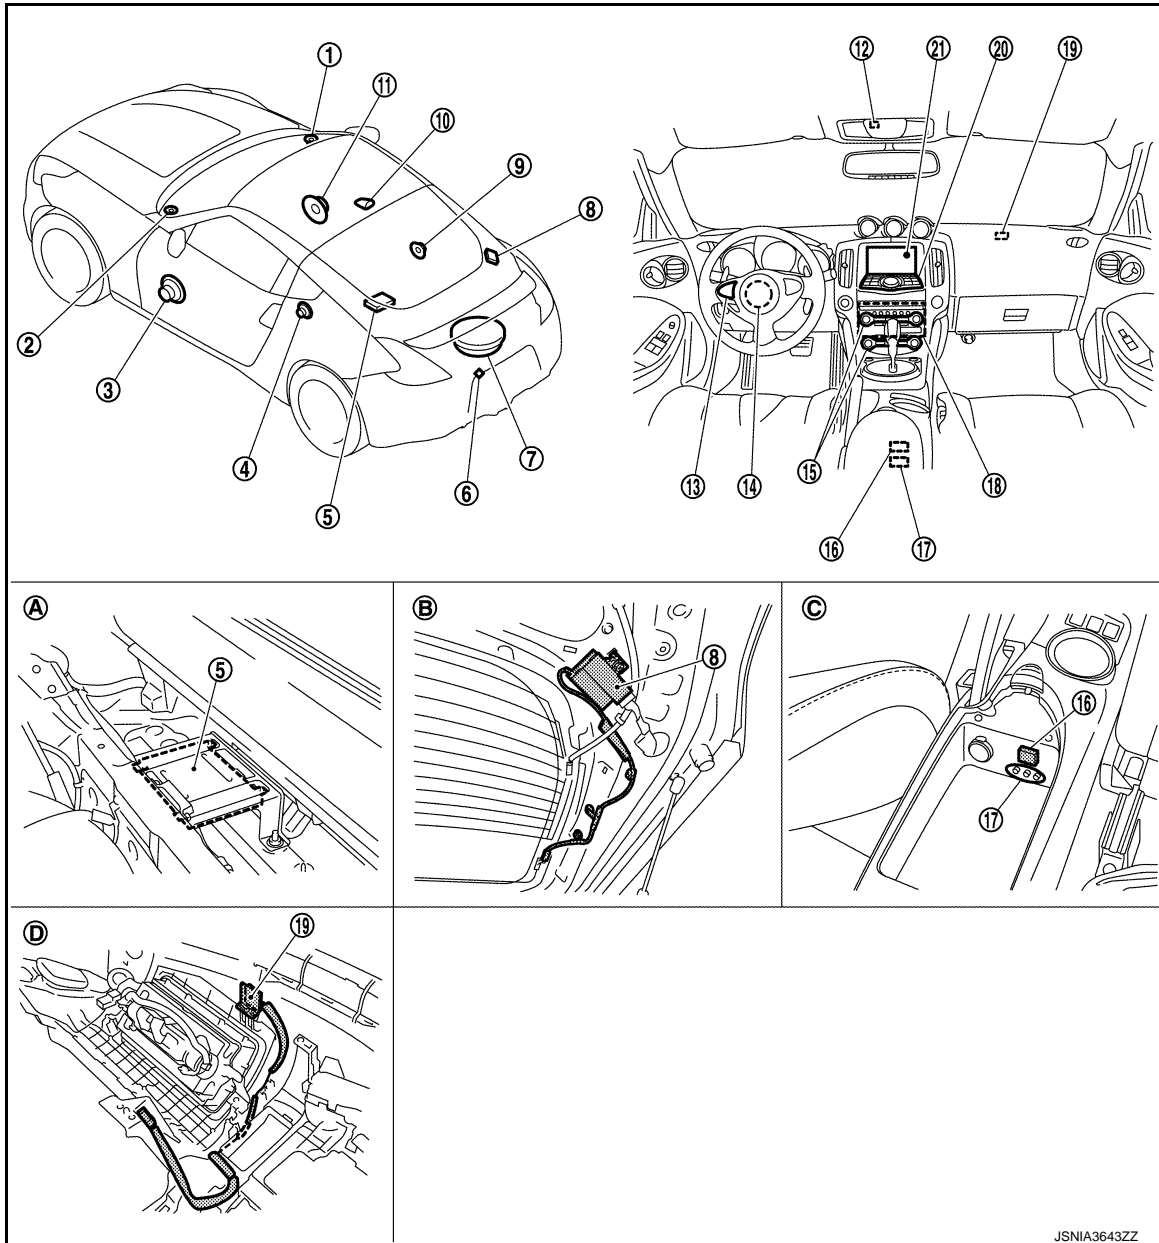

JSNIA3643ZZ


- |                                      |                           |                          |
|--------------------------------------|---------------------------|--------------------------|
| 1. Tweeter RH                        | 2. Tweeter LH             | 3. Front door speaker LH |
| 4. Rear speaker LH                   | 5. BOSE amp.              | 6. Rear view camera      |
| 7. Woofer                            | 8. Antenna amp.           | 9. Rear speaker RH       |
| 10. Satellite radio antenna          | 11. Front door speaker RH | 12. Microphone           |
| 13. Steering switch                  | 14. Steering angle sensor | 15. Preset switch        |
| 16. USB connector                    | 17. Auxiliary input jacks | 18. AV control unit      |
| 19. GPS antenna                      | 20. Multifunction switch  | 21. Front display unit   |
| A. Luggage side LH                   | B. Back door side RH      | C. Consol box inner      |
| D. Instrument panel remove condition |                           |                          |

# COMPONENT PARTS

< SYSTEM DESCRIPTION >

[BOSE AUDIO WITH NAVIGATION]

ROADSTER MODELS

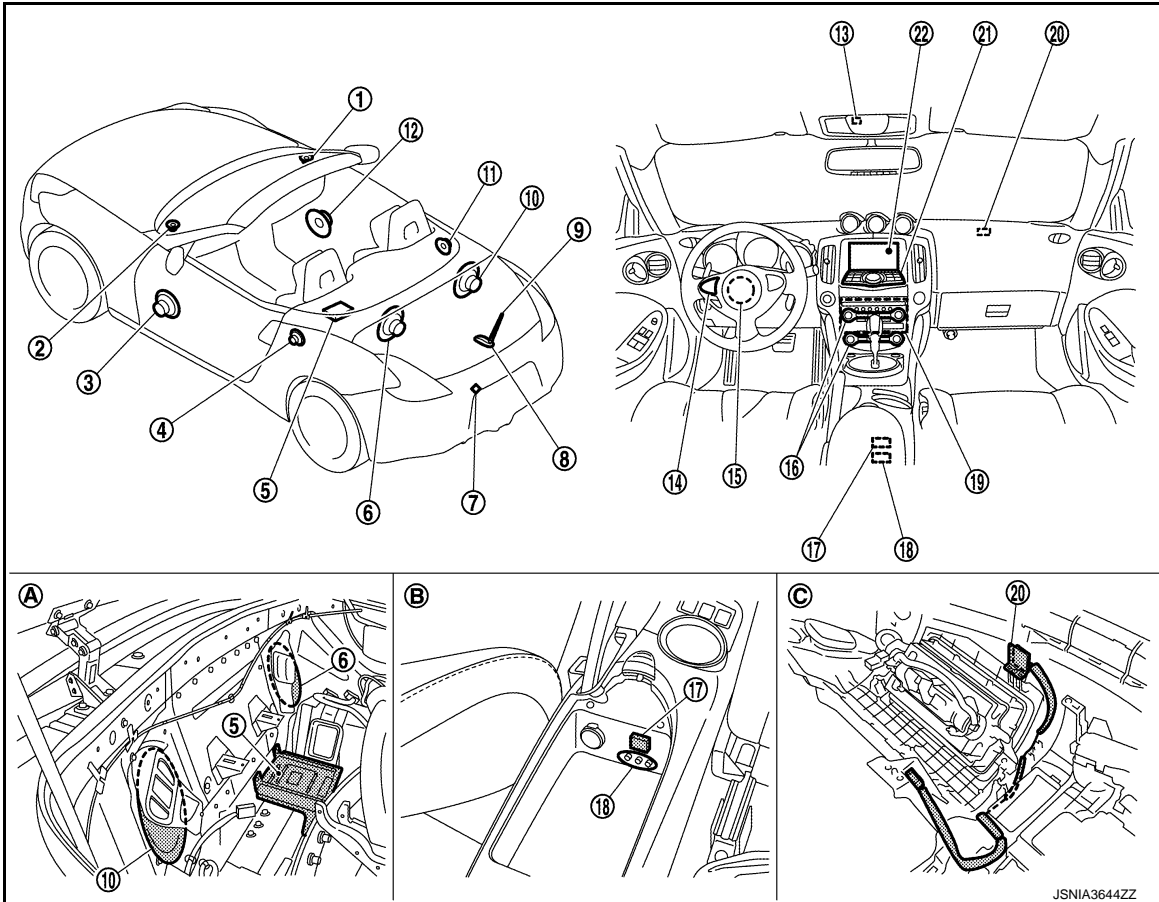

- |                        |                     |                                      |
|------------------------|---------------------|--------------------------------------|
| 1. Tweeter RH          | 2. Tweeter LH       | 3. Front door speaker LH             |
| 4. Rear speaker LH     | 5. BOSE amp.        | 6. Rear woofer LH                    |
| 7. Rear view camera    | 8. Antenna base     | 9. Antenna rod                       |
| 10. Rear woofer RH     | 11. Rear speaker RH | 12. Front door speaker RH            |
| 13. Microphone         | 14. Steering switch | 15. Steering angle sensor            |
| 16. Preset switch      | 17. USB connector   | 18. Auxiliary input jacks            |
| 19. AV control unit    | 20. GPS antenna     | 21. Multifunction switch             |
| 22. Front display unit |                     |                                      |
| A. Luggage side LH     | B. Consol box inner | C. Instrument panel remove condition |

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

# COMPONENT PARTS

[BOSE AUDIO WITH NAVIGATION]

< SYSTEM DESCRIPTION >

## Component Description

INFOID:000000006709177

Part name	Description
AV control unit	<ul style="list-style-type: none"> <li>Integrates hard disk drive (HDD) allowing map data and music data to be stored.</li> <li>It is the master unit of the MULTI AV system, and it is connected to each control unit by AV communication. It operates each system according to AV communication signals from the AV control unit.</li> <li>The AV control unit includes the audio, hands-free phone, voice control, navigation, USB connection, DVD play function and vehicle information functions.</li> <li>It is connected to ECM and combination meter via CAN communication to obtain necessary information for the vehicle information function.</li> <li>It inputs the illumination signals that are required for the display dimming control.</li> <li>It inputs the signals for driving status recognition (vehicle speed, reverse and parking brake).</li> <li>Update of map data is performed with the DVD-ROM.</li> <li>It includes the Bluetooth™ module function.</li> </ul>
Front display unit	<ul style="list-style-type: none"> <li>Front display image is controlled by the serial communication from AV control unit.</li> <li>RGB digital image signal is input from AV control unit.</li> <li>Composite image signal is input from AV control unit.</li> <li>Camera image signal is input from rear view camera.</li> <li>Touch panel function can be operated for each system by touching a display directly.</li> </ul>
BOSE amp.	<p>Coupe models</p> <ul style="list-style-type: none"> <li>Inputs power (BOSE amp. ON) and sound signal from AV control unit, and outputs sound signal to woofer and each speaker.</li> </ul> <p>Roadster models</p> <ul style="list-style-type: none"> <li>Inputs power (BOSE amp. ON) and sound signal from AV control unit, and outputs sound signal to each speaker.</li> <li>Inputs roof status signal from retractable soft top control unit.</li> </ul>
Front door speaker	<ul style="list-style-type: none"> <li>Outputs sound signal from BOSE amp.</li> <li>Outputs mid and low range sound.</li> </ul>
Tweeter	<ul style="list-style-type: none"> <li>Outputs sound signal from BOSE amp.</li> <li>Outputs high range sound.</li> </ul>
Rear speaker	<ul style="list-style-type: none"> <li>Outputs sound signal from BOSE amp.</li> <li>Outputs high, mid and low range sound.</li> </ul>
Woofer (coupe models)	<ul style="list-style-type: none"> <li>Outputs sound signal from BOSE amp.</li> <li>Outputs low range sound.</li> </ul>
Rear woofer (roadster models)	<ul style="list-style-type: none"> <li>Outputs sound signal from BOSE amp.</li> <li>Outputs low range sound.</li> </ul>
Multifunction switch	<ul style="list-style-type: none"> <li>Operation panel is equipped with the centralized switch where audio, auxiliary input and navigation, etc. operations are integrated.</li> <li>Connected with preset switch via cable, and operation signal is transmitted to AV control unit via AV communication.</li> </ul>
Preset switch	<ul style="list-style-type: none"> <li>Operation panel is equipped with the centralized switch where audio and air conditioner, etc. operations are integrated.</li> <li>Connected with multifunction switch via cable, and operation signal is transmitted to AV control unit via AV communication.</li> <li>The disk ejection operating signal is performed by wiring harness.</li> </ul>
Steering switch	<ul style="list-style-type: none"> <li>Operations for audio, hands-free phone, vice control and navigation, etc. are possible.</li> <li>Steering switch signal (operation signal) is output to AV control unit.</li> </ul>
Microphone	<ul style="list-style-type: none"> <li>Used for hands-free phone operation and voice recognition.</li> <li>Microphone signal is transmitted to AV control unit.</li> <li>Power (Microphone VCC) is supplied from AV control unit.</li> </ul>
Auxiliary input jacks	Image signal and sound signal of auxiliary input is transmitted to AV control unit.

## COMPONENT PARTS

< SYSTEM DESCRIPTION >

[BOSE AUDIO WITH NAVIGATION]

Part name	Description
Rear view camera	<ul style="list-style-type: none"> <li>• Camera power supply is input from AV control unit.</li> <li>• The image of vehicle rear view is transmits to front display unit.</li> </ul>
GPS antenna	GPS signal is received and transmitted to AV control unit.
Antenna amp. (coupe models)	<ul style="list-style-type: none"> <li>• Radio signal received by glass antenna is amplified and transmitted to AV control unit.</li> <li>• Power (antenna amp. ON signal) is supplied from AV control unit.</li> </ul>
Antenna base (roadster models)	<p>An antenna base integrated with radio antenna amp. and satellite radio antenna are adopted.</p> <p style="padding-left: 20px;">Radio antenna</p> <ul style="list-style-type: none"> <li>• Radio signal received by rod antenna is amplified and transmitted to AV control unit.</li> <li>• Power (antenna amp. ON signal) is supplied from AV control unit.</li> </ul> <p style="padding-left: 20px;">Satellite radio antenna</p> <ul style="list-style-type: none"> <li>• Receives the satellite radio wave and outputs it to the AV control unit.</li> </ul>
USB connector	Image signal* and sound signal of USB input are transmitted to AV control unit.
Satellite radio antenna	Receives the satellite radio wave and outputs it to the AV control unit.

\*: Image signals cannot be received from iPod®.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

< SYSTEM DESCRIPTION >


SYSTEM

MULTI AV SYSTEM

MULTI AV SYSTEM : System Diagram

INFOID:000000006709178

COUPE MODELS

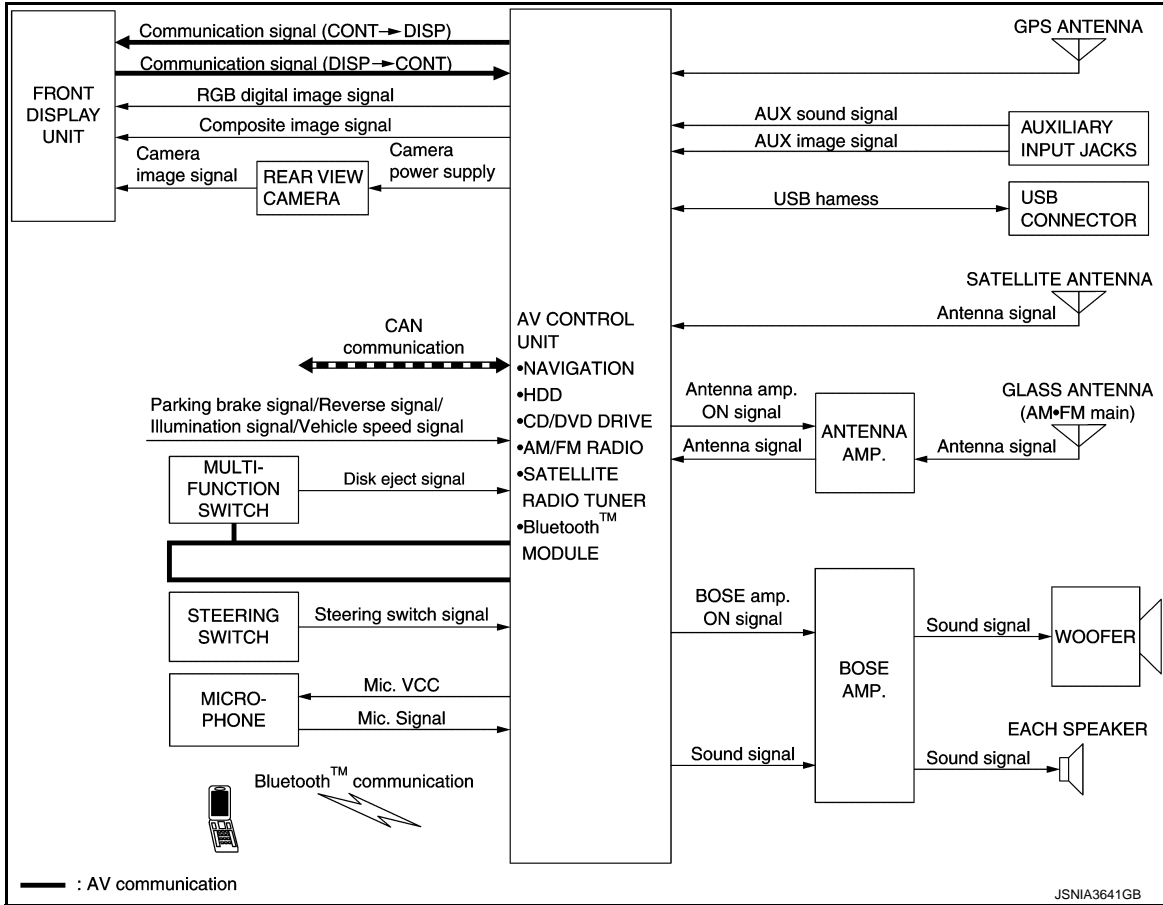

NOTE:

The name MULTIFUNCTION SWITCH indicates the integration of PRESET SWITCH and MULTIFUNCTION SWITCH virtually.




# SYSTEM

< SYSTEM DESCRIPTION >


[BOSE AUDIO WITH NAVIGATION]

## ROADSTER MODELS

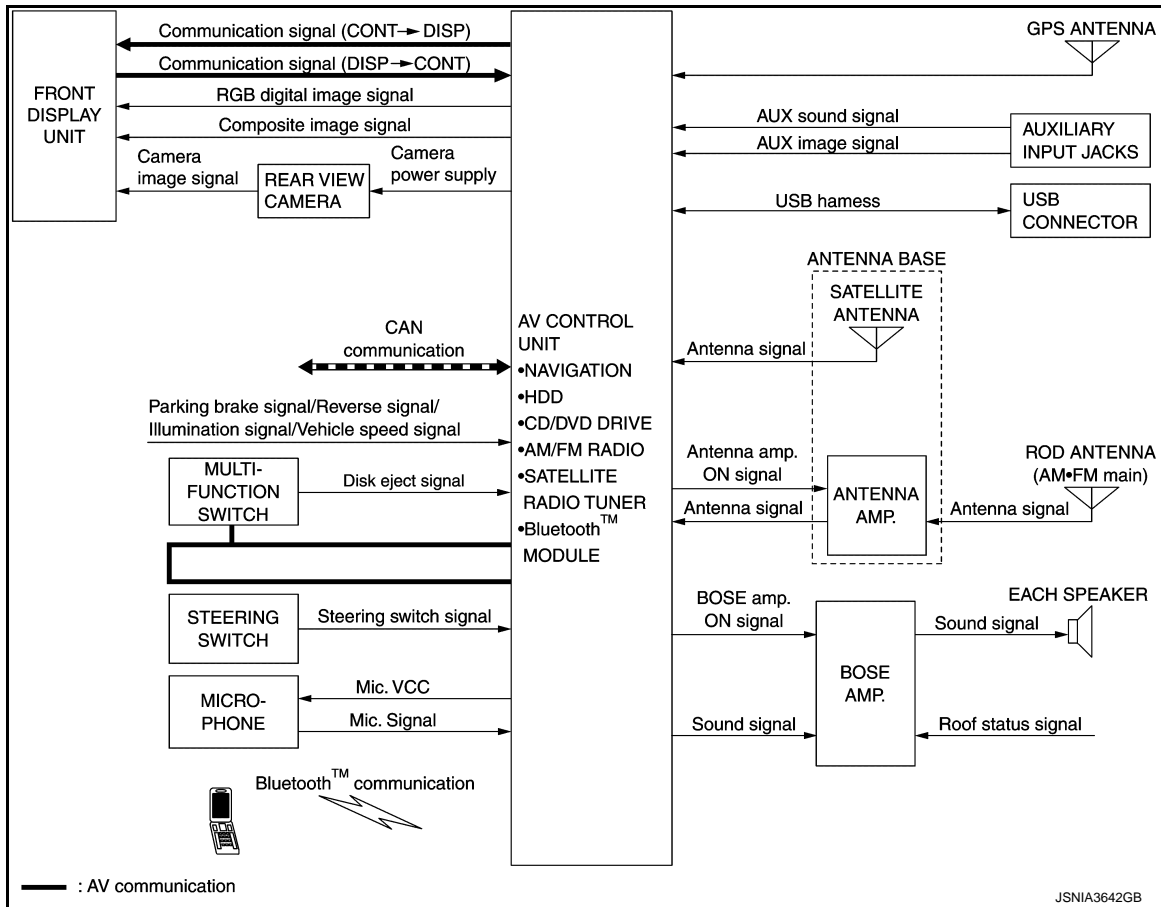

**NOTE:**

- The name MULTIFUNCTION SWITCH indicates the integration of PRESET SWITCH and MULTIFUNCTION SWITCH virtually.
- An antenna base integrated with antenna amp. and satellite antenna are adopted.

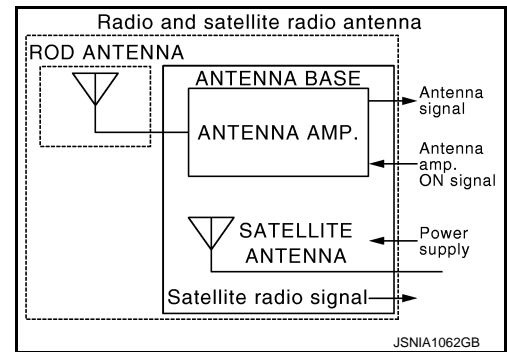

## MULTI AV SYSTEM : System Description

INFOID:000000006709179

Multi AV system means that the following systems are integrated.

FUNCTION NAME
Navigation system function
Audio function
Hands-free phone function
Auxiliary input function
Voice recognition function
Touch panel function
Vehicle information function

FUNCTION NAME
USB connection function
DVD play function
Rear view monitor function

## COMMUNICATION SIGNAL

- AV control unit function by transmitting/receiving data one by one with each unit (slave unit) that configures them completely as a master unit by connecting between units that configure MULTI AV system with two AV communication lines (H, L).
- Two AV communication lines (H, L) adopt a twisted pair line that is resistant to noise.
- AV control unit is connected by CAN communication, and it receives data signal from ECM, combination meter. It computes and displays fuel economy information value with the obtained information. Transmitting/receiving of data signal is performed by BCM. Also, it transmits the required signal of vehicle setting and receives the response signal.
- AV control unit is connected with front display unit and serial communication, and it transmits the required signal of display and display control and receives the response signal from front display unit.

## NAVIGATION SYSTEM FUNCTION

### Description

- The AV control unit controls navigation function while GPS tuner has built-in map data, GYRO (angle speed sensor), on the HDD (Hard Disk Drive).
- The AV control unit inputs operation signal with communication signal, through display (touch panel) and multifunction switch and steering switch.
- Guide sound is output to front speaker through BOSE amp. from AV control unit when operating navigation system.
- A vehicle position is calculated with the GYRO (angle speed sensor), vehicle sensor, signal from GPS satellite and map data stored on HDD (Hard Disk Drive), and transmits the map image signal (RGB digital image signal) to the front display unit.

### Position Detection Principle



The navigation system periodically calculates the current vehicle position according to the following three types of signals.

- Travel distance of the vehicle as determined by the vehicle speed sensor
- Vehicle turning angle determined by the gyroscope (angular speed sensor)
- The travel direction of the vehicle determined by the GPS antenna (GPS information)

The current position of the vehicle is then identified by comparing the calculated vehicle position with map data, which is stored in the HDD (Hard Disk Drive) (map-matching), and indicated on the screen with a current location mark. More accurate data is used by comparing position detection results from GPS to the map-matching.

The current position is calculated by detecting the travel distance from the previous calculation point, and its direction change.

- Travel distance  
The travel distance is generated from the vehicle speed sensor input signal. The automatic distance correction function is adopted for preventing a miss-detection of the travel distance because of tire wear etc.
- Travel direction  
The gyroscope (angular velocity sensor) and GPS antenna (GPS information) generate the change of the travel direction. Both have advantages and disadvantages as per the following descriptions.

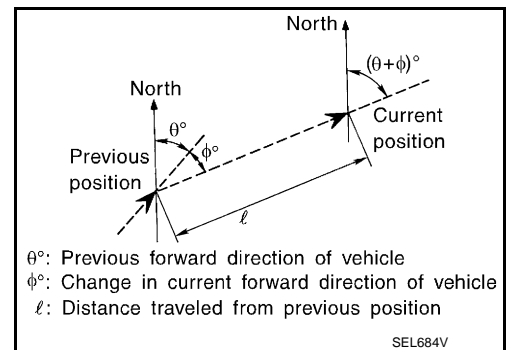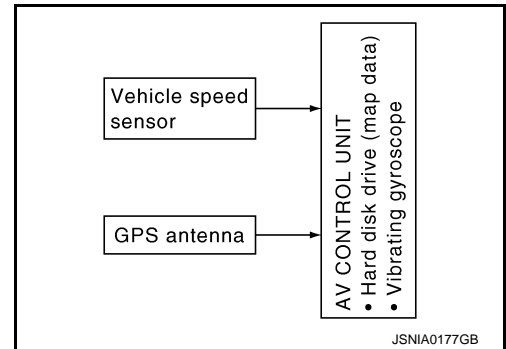


Type	Advantage	Disadvantage
Gyroscope (angular velocity sensor)	The turning angle is precisely detected.	Errors are accumulated when driving a long distance without stopping.
GPS antenna (GPS information)	The travel direction (North/South/East/West) is detected.	The travel direction is not precisely detected when driving slowly.

Input signals are prioritized in each situation. However, this order of priority may change in accordance with more detailed travel conditions so that the travel direction is detected more accurately.


### Map-matching

Map-matching repositions the vehicle on the road map when a new location is judged to be more accurate. This is done by comparing the current vehicle position (calculated by the normal position detection method) from the map data stored in the HDD (Hard Disk Drive).

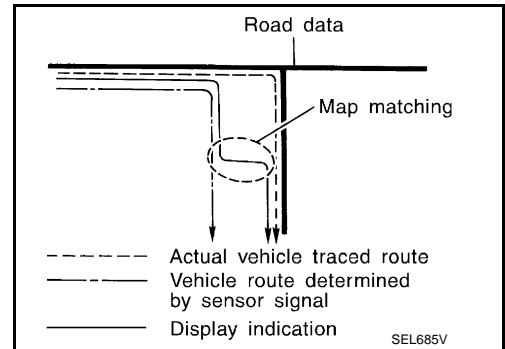

There is a possibility that the vehicle position may not be corrected in the following case, and when vehicle is driven over a certain distance or time in which GPS information is hard to receive. Correct manually the current location mark on the screen.


- In map-matching, several alternative routes are prepared and prioritized in addition to the road judged as currently driving on. Therefore, due to errors in the distance and/or direction, an incorrect road may be prioritized, and the current location mark may be repositioned to the incorrect road. If two roads are running in parallel, they are of the same priority. Therefore, the current location mark may appear on either of them alternately, depending on maneuvering of the steering wheel and configuration of the road, etc.

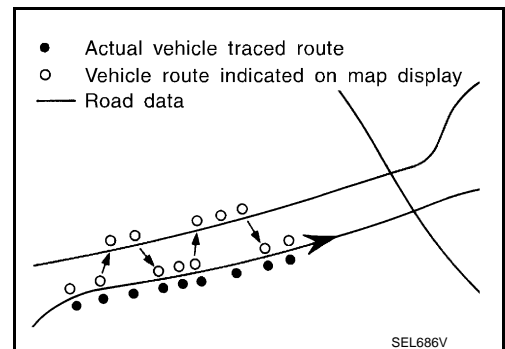

- Map-matching does not function correctly when road on which the vehicle is driving is new, etc. and not recorded in the map data. Also, map-matching does not function correctly when road pattern stored in the map data and the actual road pattern are different due to repair, etc.

Therefore, the map-matching function judges other road as a currently driving road if the road is not in the map, and displays the current location mark on it. Later, the current location mark may be repositioned to the road if the correct road is detected.

- Effective range for comparing the vehicle position and travel direction calculated by the distance and direction with the road data is limited. Therefore, correction by map-matching is not possible when there is an excessive gap between current vehicle position and the position on the map.

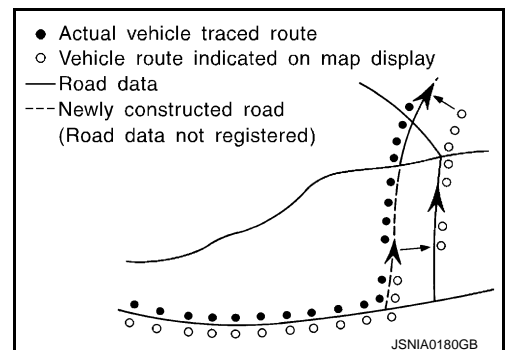

GPS (Global Positioning System)


# SYSTEM

## < SYSTEM DESCRIPTION >

## [BOSE AUDIO WITH NAVIGATION]

GPS (Global Positioning System) is developed for and is controlled by the US Department of Defense. The system utilizes GPS satellites (NAVSTAR), transmitting out radio waves while flying on an orbit around the earth at an altitude of approximately 21,000 km (13,049 mile).

The receiver calculates the travel position in three dimensions (latitude/longitude/altitude) according to the time lag of the radio waves that four or more GPS satellites transmit (three-dimensional positioning). The GPS receiver calculates the travel position in two dimensions (latitude/longitude) with the previous altitude data if the GPS receiver receives only three radio waves (two-dimensional positioning). GPS position correction is not performed while stopping the vehicle.

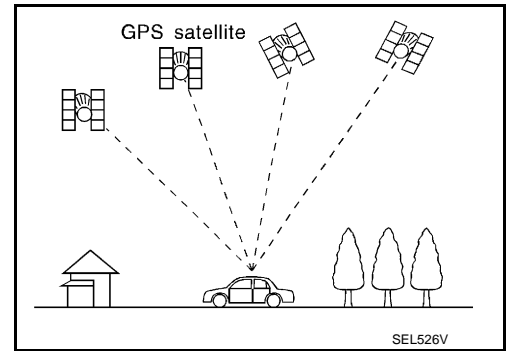

Accuracy of the GPS will deteriorate under the following conditions:

- In two-dimensional positioning, GPS accuracy will deteriorate when altitude of the vehicle position changes.
- The position of GPS satellite affects GPS detection precision. The position detection may not be precisely performed.
- The position detection is not performed if GPS receiver does not receive radio waves from GPS satellites. (Inside a tunnel, parking in a building, under an elevated highway etc.) GPS receiver may not receive radio waves from GPS satellites if any object is placed on the GPS antenna.

### NOTE:

- The detection result has an error of approximately 10 m (32.81 ft) even with a high-precision three dimensional positioning.
- There may be cases when the accuracy is lowered and radio waves are stopped intentionally because the GPS satellite signal is controlled by the US trace control center.

## AUDIO FUNCTION

The audio system is equipped with the following functions. Each function is operated with multifunction switch, preset switch, touch panel, steering switch or voice recognition. Operation status of audio is indicated at front display unit.

FUNCTION
AM/FM radio
Satellite radio
CD
Bluetooth™ audio
Music Box (Hard Disk Drive)
Sound equalizer automatic switching (Roadster models)

### Operating Signal

Audio system operation can be performed with multifunction switch, preset switch, steering switch, touch panel function or voice recognition function.

- Operating signal is transmitted to AV control unit with AV communication when it is operated by multifunction switch or preset switch. The disk ejection operating signal is performed by wiring harness.
- Operating signal is transmitted to AV control unit with steering switch signal when it is operated by steering switch.
- Refer to the following system description (“VOICE RECOGNITION FUNCTION” and “TOUCH PANEL SYSTEM”) for explanation of voice recognition function and touch panel function.

### Screen Display

Switching of display is performed with serial communication between display unit and AV control unit.

### AM/FM Radio Mode

- AM/FM radio tuner is built into AV control unit.
- Audio signal is received by glass antenna, next it is amplified by antenna amp., and finally it is input to AV control unit. Audio signal is input to BOSE amp., and BOSE amp. outputs to woofer and each speaker. (coupe models)

# SYSTEM

## < SYSTEM DESCRIPTION >

## [BOSE AUDIO WITH NAVIGATION]

- Audio signal is received by rod antenna, next it is amplified by antenna amp., and finally it is input to AV control unit. Audio signal is input to BOSE amp., and BOSE amp. outputs to each speaker. (roadster models)

### Satellite Radio Mode

- Satellite radio tuner is built into AV control unit.
- Audio wave (satellite radio) is received by satellite radio antenna, and it is input to AV control unit. AV control unit outputs audio signal to BOSE amp. The signal is also outputted from BOSE amp. to woofer and each speaker. (coupe models)
- Audio wave (satellite radio) is received by satellite radio antenna, and it is input to AV control unit. AV control unit outputs audio signal to BOSE amp. The signal is also outputted from BOSE amp. to each speaker. (roadster models)

### CD Mode

- CD function is built into AV control unit.
- AV control unit outputs audio signal to BOSE amp., and BOSE amp. outputs to woofer and each speaker. (coupe models)
- AV control unit outputs audio signal to BOSE amp., and BOSE amp. outputs to each speaker. (roadster models)

### Bluetooth™ Audio

- Bluetooth™ audio function is built into AV control unit.
- When the Bluetooth™ audio is connected to the portable audio equipped with the Bluetooth™ communication compliant profile via Bluetooth™ communication, it can be play the music data in the portable audio.
- A maximum of five Bluetooth™ devices including the audio devices and cellular phones can be registered in the AV control unit.

### Music Box Mode

- Music CD data is stored on HDD (Hard Disk Drive) that is built into AV control unit, and it can be played.
- AV control unit outputs music (sound signal) that is stored on HDD (Hard Disk Drive) to BOSE amp., and BOSE amp. outputs to woofer and each speaker. (coupe models)
- AV control unit outputs music (sound signal) that is stored on HDD (Hard Disk Drive) to BOSE amp., and BOSE amp. outputs to each speaker. (roadster models)

### Sound Equalizer Automatic Switching Function

Sound quality in a fully-open retractable soft top condition is improved by the correction for bringing the frequency characteristics in a fully-open retractable soft top condition closer to the characteristics in a fully-closed retractable soft top condition. When the retractable soft top is in a fully-open condition, sound pressure is reduced due to the absence of sound echo generated by sound reflection from the retractable soft top. BOSE amp. detects an open-close condition of the retractable soft top by receiving a roof status signal from the retractable soft top control unit and switches the equalizer to correct the frequency characteristics in a fully-open retractable soft top condition. During the switching of the equalizer, audio stops temporarily due to the temporary mute.

## HANDS-FREE PHONE FUNCTION

- Hands-free communication can be operated by connecting using Bluetooth™ with cellular phone.
- Operation is performed by steering switch, and operating condition is indicated on front display unit.
- Guide sound that is heard during operation is input from AV control unit to BOSE amp. and output from front door speaker.

### When A Call Is Originated

Spoken voice sound output from the microphone (Mic. Signal) is input to AV control unit. AV control unit outputs to cellular phone with Bluetooth™ communication as a TEL voice signal. Voice sound is then heard at the other party.

### When Receiving A Call

Voice sound is input to own cellular phone from the other party. TEL voice signal is output to front door speaker, and the signal is input to BOSE amp. via AV control unit by establishing Bluetooth™ communication from cellular phone.

## AUXILIARY INPUT FUNCTION

- Image and sound can be output from an external device by connecting a device with auxiliary input jacks.
- AUX image signals are transmitted to the display unit through AV control unit.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

# SYSTEM

## [BOSE AUDIO WITH NAVIGATION]

### < SYSTEM DESCRIPTION >

- AUX sound signals are transmitted to woofer and each speaker through AV control unit and BOSE amp. (coupe models)
- AUX sound signals are transmitted to each speaker through AV control unit and BOSE amp. (roadster models)

### VOICE RECOGNITION FUNCTION

- Each operation of multi AV system can be performed by inputting sound to microphone.
- Start of voice recognition system can be performed by steering switch.
- AV control unit is connected by CAN communication, and it receives roof status signal from the soft top control unit, then system operation is available only when the retractable soft top is closed. (roadster models)

### TOUCH PANEL SYSTEM

Each operation of multi AV system can be performed by directly touching a display.

### VEHICLE INFORMATION FUNCTION

- Status of audio, climate control system, fuel economy, maintenance and navigation are displayed.
- AV control unit displays the fuel consumption status while receiving data signal through CAN communication from ECM, combination meter.

### USB CONNECTION FUNCTION

- Connecting iPod® or USB memory allows the driver to play iPod® music files or USB memory-stored music files, video data, and image viewer data.
- Sound signals of music files stored in iPod® or USB memory are transmitted from the USB connector to the AV control unit. The AV control unit transmits the sound signals to the woofer and each speaker via BOSE amp. (coupe models)
- Sound signals of music files stored in iPod® or USB memory are transmitted from the USB connector to the AV control unit. The AV control unit transmits the sound signals to each speaker via BOSE amp. (roadster models)
- Video signals and image viewer file signals are transmitted from the USB connector to the AV control unit. The data and files are displayed on the front display unit screen.
- iPod® is recharged when connected to USB connector.
- Only files that meet the following conditions will be played.

	Music file	Video file	Image viewer file
File format	"MP3", "WMA", "AAC", "M4A"	"DivX", "MPEG4 (ASF)"	"JPEG"
File extension	".mp3", ".wma", ".aac", ".m4a"	".divx", ".afs", ".avi"	".jpg", ".jpeg"
Maximum file size	2 GB	2 GB	<ul style="list-style-type: none"><li>• 2 MB</li><li>• Screen size*<sup>1</sup>: (H: 1536 x V: 2048 pixels)</li><li>• The number of directories*<sup>2</sup>: Up to 500</li></ul>

\*1: Images cannot be displayed if the screen size exceeds the upper limit.

\*2: The value of an image file storable in the same directory is up to 1024.

### NOTE:

- iPod® is a trademark of Apple inc., registered in the U.S. and other countries.
- Image signals cannot be received from iPod®.
- Use the enclosed USB harness when connecting iPod® to USB connector.

### DVD PLAY FUNCTION

- DVD is played by inserting DVD into the AV control unit.
- DVD image signals are transmitted to the display unit and DVD sound signals are transmitted to each speaker via BOSE amp.

### REAR VIEW MONITOR FUNCTION

- The AV control unit supplies power to the rear view camera when receiving a reverse signal.
- The rear view camera transmits camera images to the display unit when power is supplied from the AV control unit.
- The AV control unit transmits a warning message, fixed guide lines, and predictive course lines to the display unit by RGB digital image signal. Rear view monitor images are displayed by combining the RGB digital image signal and the camera image signals from the rear view camera.

# SYSTEM

< SYSTEM DESCRIPTION >

[BOSE AUDIO WITH NAVIGATION]

- Predictive course lines are controlled by a steering angle sensor signal received the AV control unit via CAN communication.

## MULTI AV SYSTEM : Fail-Safe

INFOID:000000006709180

When the ambient temperature becomes extremely low or extremely high, AV control unit displays the message and limits the AV control unit function.

### FAIL-SAFE CONDITIONS

When the ambient temperature is  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ) or lower, or when it is  $70^{\circ}\text{C}$  ( $158^{\circ}\text{F}$ ) or higher

Display

The messages displayed on fail-safe conditions are as shown below:

Fail-safe mode	Display (display of the fail-safe condition)
When HDD temperature is low	HDD system is experiencing problems due to extreme low temperature. Normal operation will resume when temperature rises.
When HDD temperature is high	HDD system is experiencing problems due to extreme high temperature. Normal operation will resume when temperature drops.

### DESCRIPTION OF CONTROLS

Function	When Fail-safe Function is activated	
Air conditioner	Operation	Only multifunction switch (preset switch) can be operated.
	Display	<ul style="list-style-type: none"><li>• LED of multifunction switch (preset switch) illuminates.</li><li>• Aimed temperature, blow angle, and flow rate are displayed in simplified mode.</li></ul>
Audio	Operation	Only ON/OFF and volume control operations by multifunction switch (preset switch) are possible.
	Display	No display ("Fail-safe mode" is displayed)
Hands-free phone	Operation	Cannot be operated.
Navigation	Operation	Cannot be operated.
Self diagnosis		The display in simplified mode of fail-safe condition
CONSULT-III diagnosis		Cannot be operated.

#### Ability Operation Mode

There is an ability operation mode for Fail-safes due to low or high ambient temperature.

If HDD data can be read, fail-safe is shown, then normal displays are displayed only for functions which can be operated.

### RELEASE CONDITIONS OF FAIL-SAFE

Fail-safe is released on following conditions and normal mode is restored.

When The Temperature of HDD Is Low or High

If the ambient temperature becomes out of fail-safe condition range, normal mode is restored.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV

O  
P

# DIAGNOSIS SYSTEM (AV CONTROL UNIT)

< SYSTEM DESCRIPTION >

[BOSE AUDIO WITH NAVIGATION]

## DIAGNOSIS SYSTEM (AV CONTROL UNIT)

### Description

INFOID:000000006709181

- The AV control unit diagnosis function starts up with multifunction switch operation and the AV control unit performs a diagnosis for each unit in the system during the on board diagnosis.
- Perform a CONSULT-III diagnosis if the on board diagnosis does not start, e.g., the screen does not display anything, the multifunction switch does not function, etc.

### On Board Diagnosis Function

INFOID:000000006709182

#### MULTIFUNCTION SWITCH AND PRESET SWITCH SELF-DIAGNOSIS FUNCTION


The ON/OFF operation (continuity) of each switch in the multifunction switch and preset switch can be checked.

##### Self-diagnosis Mode

- Press the "BACK" switch and the "UP" switch of the 8-direction switches within 10 seconds after turning the ignition switch from OFF to ACC and hold them for 3 seconds or more. Then the buzzer sounds, all indicators of the preset switch illuminate, and the self-diagnosis mode starts.
- The continuity of each switch at the ON position can be checked by pressing the switch. The buzzer sounds if the switch is normal.

**NOTE:**

The disk eject switch cannot be checked.

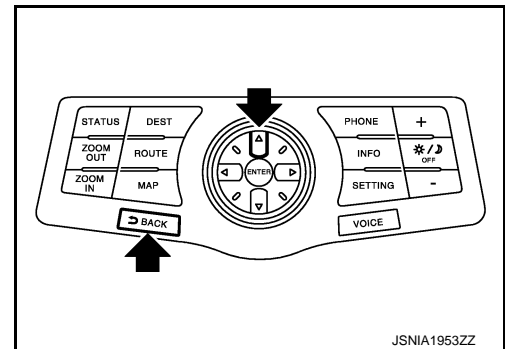

##### Finishing Self-diagnosis Mode

Self-diagnosis mode is canceled when turning the ignition switch OFF.

### ON BOARD DIAGNOSIS

#### Description

- The trouble diagnosis function has a self-diagnosis mode for conducting trouble diagnosis automatically and a confirmation/adjustment mode for operating manually.
- The self-diagnosis mode performs diagnoses on the AV control unit, connections between system components as well as connections between AV control unit and GPS antenna. Then it displays the diagnosis results on the display.
- The confirmation/adjustment mode allows the technician to check, modify or adjust the vehicle signals and set values, as well as to monitor the system error records and system communication status. The checking, modifying or adjusting generally require human intervention and judgment (the system cannot make judgment automatically).

#### On Board Diagnosis Item

Mode	Description
Self Diagnosis	<ul style="list-style-type: none"><li>• AV control unit diagnosis.</li><li>• Diagnoses the connections across system components, between AV control unit and GPS antenna.</li></ul>



# DIAGNOSIS SYSTEM (AV CONTROL UNIT)


< SYSTEM DESCRIPTION >

[BOSE AUDIO WITH NAVIGATION]

	Mode	Description	
Confirmation/ Adjustment	Display Diagnosis	The following check functions are available: color tone check by color bar display, light and shade check by gray scale display, touch panel calibration and response check, and color tone check by white display.	
	Vehicle Signals	Diagnosis of signals can be performed for vehicle speed, parking brake, lights, ignition, reverse, side view switch and room lamp.	
	Speaker Test	The connection of a speaker can be confirmed by test tone.	
	Navigation	Steering Angle Adjustment	When there is a difference between the actual turning angle and the vehicle mark turning angle, it can be adjusted.
		Speed Calibration	When there is a difference between the current location mark and the actual location, it can be adjusted.
		XM SAT Subscription Status	The XM NavTraffic subscription status can be checked.
	Error History	The system malfunction and the frequency when occurring in the past are displayed. When the malfunctioning item is selected, the time and place that the selected malfunction last occurred are displayed.	
	Synchronizer FES Clock	-	
	Vehicle CAN Diagnosis	The transmitting/receiving of CAN communication can be monitored.	
	AV COMM Diagnosis	The communication condition of each unit of Multi AV system can be monitored.	
	Hands-free Phone	The received volume adjustment of hands-free phone, microphone speaker check, and erase memory can be performed.	
	Camera Cont.	The four functions of "Correct Draw Line of Rear view Camera", "Alter/Confirm Configuration", "Reset Configuration" and "Camera Syst Type" are available.	
	XM	XM Navi Trffic	Change Channel <ul style="list-style-type: none"> <li>Any necessary channels required to receive traffic information from the satellite radio system can be set.</li> </ul>
		XM NavWeather	
		XM CGS	Change Application ID <ul style="list-style-type: none"> <li>Any application ID's required to receive traffic information from the satellite radio system can be set.</li> </ul>
		Diag	Not used.
	Delete Unit Connection Log	Erase the connection history of unit and error history.	
	Initialize Settings	Initializes the AV control unit memory.	
Version Information	Version information of the AV control unit is displayed.		

## STARTING PROCEDURE

1. Start the engine.
2. Turn the audio system OFF.
3. While pressing the "SETTING" button, turn the volume control dial clockwise or counterclockwise for 40 clicks or more. (When the self-diagnosis mode is started, a short beep will be heard.)
  - Shifting from current screen to previous screen is performed by pressing "BACK" button.

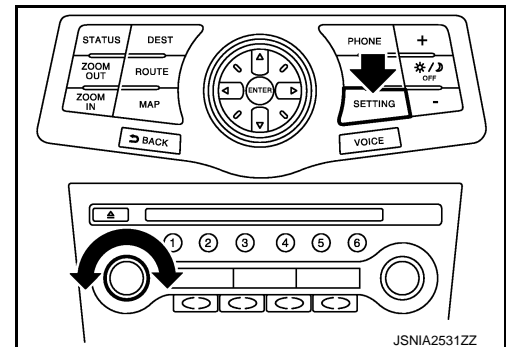


# DIAGNOSIS SYSTEM (AV CONTROL UNIT)

[BOSE AUDIO WITH NAVIGATION]

## < SYSTEM DESCRIPTION >

- The trouble diagnosis initial screen is displayed, and then the items of "Self Diagnosis" and "Confirmation/Adjustment" can be selected.

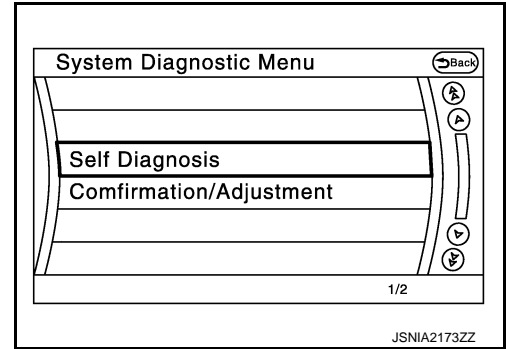

## SELF-DIAGNOSIS MODE


- Start the self-diagnosis function and select "Self Diagnosis".
  - Self-diagnosis subdivision screen is displayed, and the self-diagnosis mode starts.
  - The bar graph visible on the center of the self-diagnosis subdivision screen indicates progress of the trouble diagnosis.
- Diagnosis results are displayed after the self-diagnosis is completed. The unit names and the connection lines are color-coded according to the diagnostic results.

Diagnosis results	Unit	Connection line
Normal	Green	Green
Connection malfunction	Gray	Yellow
Unit malfunction <sup>Note</sup>	Red	Green


### NOTE:

Control unit (AV control unit) is displayed in red.

- Replace AV control unit if "Self-Diagnosis did not run because of a control unit malfunction" is indicated. The symptom is AV control unit internal error. Refer to [AV-267, "Exploded View"](#).
- If multiple errors occur at the same time for a single unit, the screen switch colors are determined according to the following order of priority: red > gray.

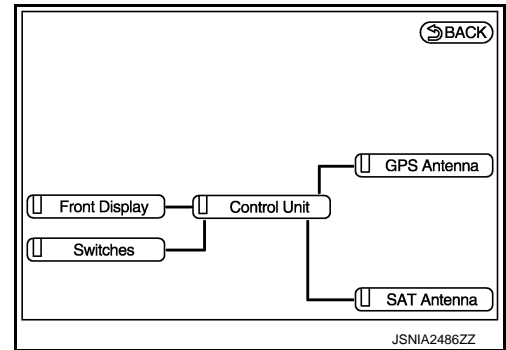

- The comments of the self-diagnosis results can be viewed with a component in the diagnosis result screen.

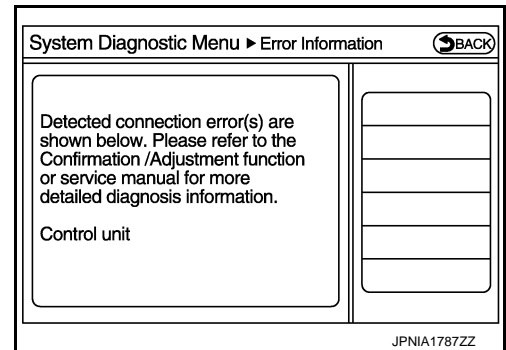

## Detection Range of Self-diagnosis Mode

- The self-diagnosis mode allows the technician to diagnose the connection in the communication line between AV control unit and each unit and the internal operation of the AV control unit.
- Because the start condition of diagnosis function is a switch operation, the on board diagnosis function cannot be started up if any malfunction is detected in the communication circuit between AV control unit and multifunction switch.

## SELF-DIAGNOSIS RESULTS

Check the applicable display at the following table, and then repair the malfunctioning parts.

Only Unit Part Is Displayed In Red.

# DIAGNOSIS SYSTEM (AV CONTROL UNIT)

< SYSTEM DESCRIPTION >

[BOSE AUDIO WITH NAVIGATION]


Screen switch	Description	Possible malfunction location / Action to take
Control unit	Malfunction is detected in AV control unit power supply and ground circuits.	Check AV control unit power supply and ground circuits. When detecting no malfunction in those components, replace AV control unit.

A Connecting Cable Between Units Is Displayed In Yellow.

Area with yellow connection lines	Description	Possible malfunction location / Action to take
Control unit ↔ Front Display	Malfunction is detected in serial communication circuits between AV control unit and front display unit.	Serial communication circuits between AV control unit and front display unit.
Control unit ↔ GPS Antenna	GPS antenna connection malfunctions detected.	GPS antenna
Control unit ↔ SAT Antenna	Satellite radio antenna connection malfunctions detected.	Satellite radio antenna

## CONFIRMATION/ADJUSTMENT MODE

1. Start the diagnosis function and select "Confirmation/Adjustment". The confirmation/adjustment mode indicates where each item can be checked or adjusted.
2. Select each switch on the "Confirmation/Adjustment Mode" screen to display the relevant trouble diagnosis screen. Press the "Back" switch to return to the initial Confirmation/Adjustment Mode screen.

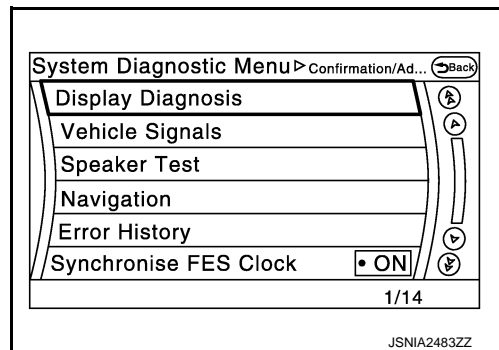

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


AV

# DIAGNOSIS SYSTEM (AV CONTROL UNIT)

< SYSTEM DESCRIPTION >


[BOSE AUDIO WITH NAVIGATION]

## Display Diagnosis

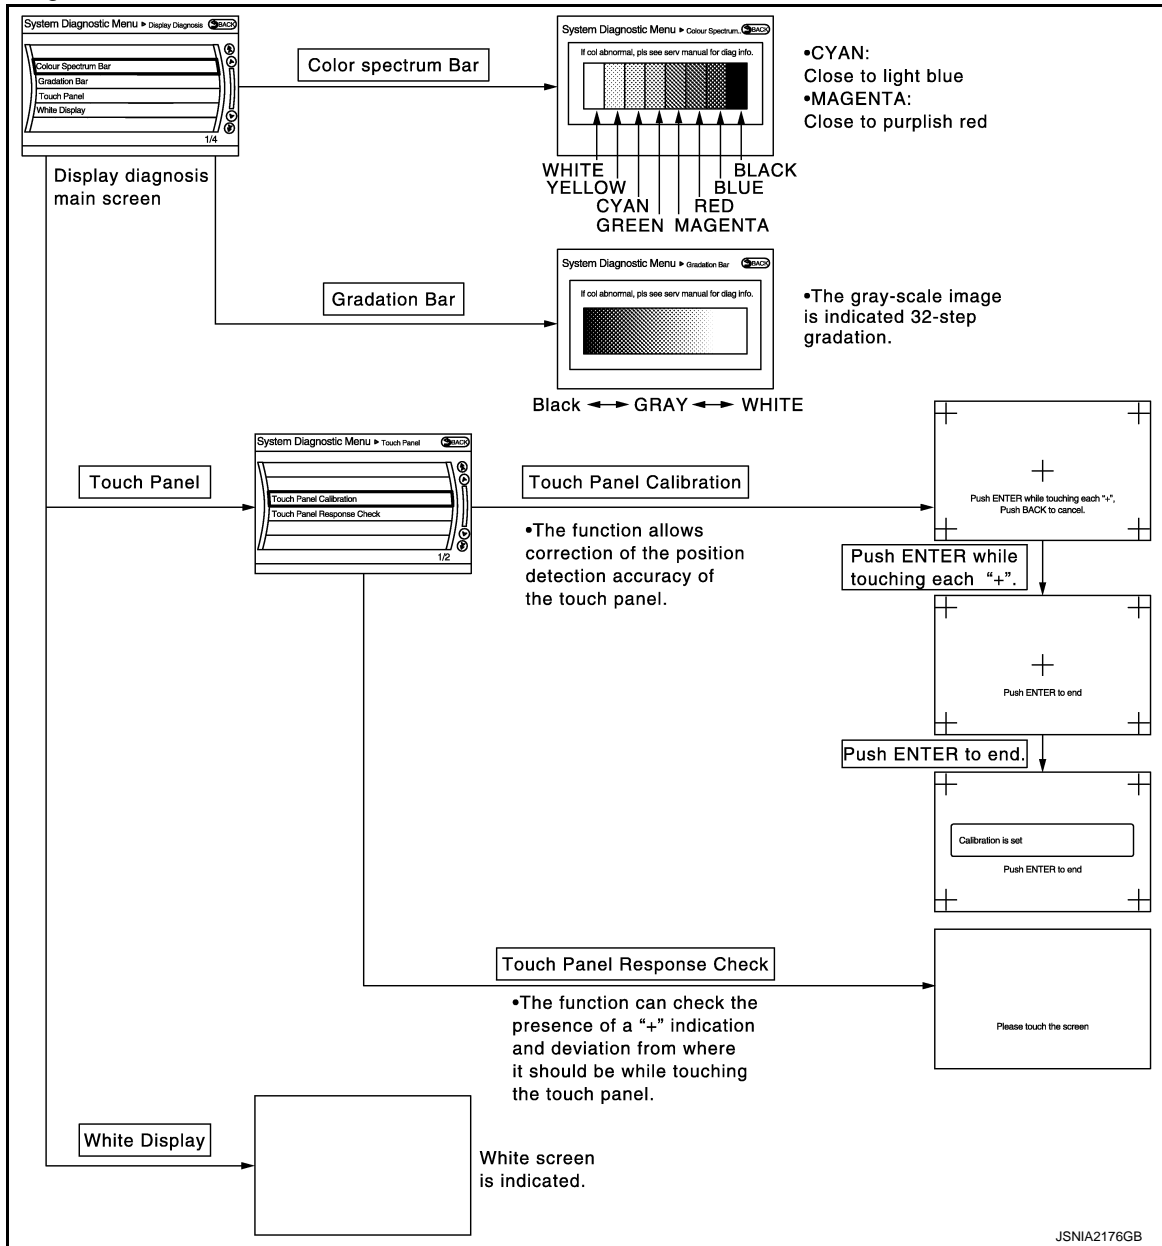

## Vehicle Signals

A comparison check can be made of each actual vehicle signal and the signals recognized by the system.

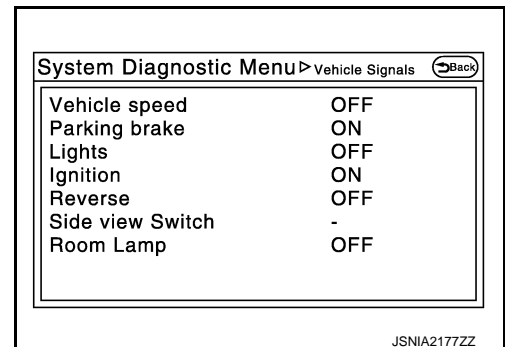

# DIAGNOSIS SYSTEM (AV CONTROL UNIT)


< SYSTEM DESCRIPTION >

[BOSE AUDIO WITH NAVIGATION]

Diagnosis item	Display	Vehicle status	Remarks
Vehicle speed	ON	Vehicle speed > 0 km/h (0 MPH)	Changes in indication may be delayed. This is normal.
	OFF	Vehicle speed = 0 km/h (0 MPH)	
Parking brake	ON	Parking brake is applied.	
	OFF	Parking brake is released.	
Lights	ON	Light switch ON	—
	OFF	Light switch OFF	—
Ignition	ON	Ignition switch ON	—
	OFF	Ignition switch in ACC position	—
Reverse	ON	Shift the selector lever to "R" position	Changes in indication may be delayed. This is normal.
	OFF	Shift the selector lever other than "R" position	
SIDE VIEW SW	—	—	This item is displayed, but cannot be monitored.
ROOM LAMP	OFF	—	This item is displayed, but not used.

## Speaker Test


Select "SPEAKER DIAGNOSIS" to display the Speaker Diagnosis screen. Press "Start" to generate a test tone in a speaker. Press "Start" to generate a test tone in the next speaker. Press "Stop" to stop the test tones.

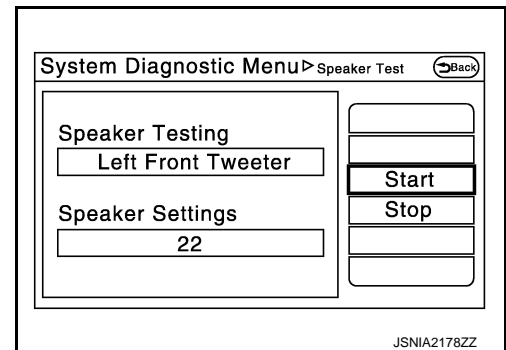

## Navigation


### STEERING ANGLE ADJUSTMENT

The steering angle output value detected with the gyroscope is adjusted.

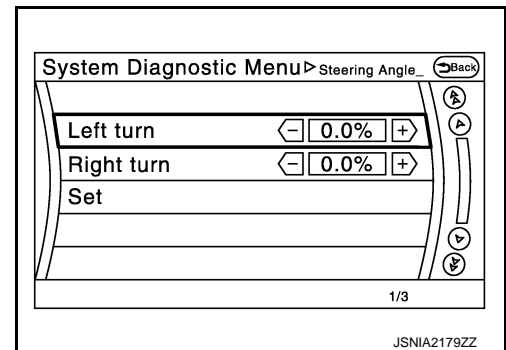

### SPEED CALIBRATION

During normal driving, distance error caused by tire wear and tire pressure change is automatically adjusted for by the automatic distance correction function. This function, on the other hand, is for immediate adjustment, in cases such as driving with tire chain fitted on tires.

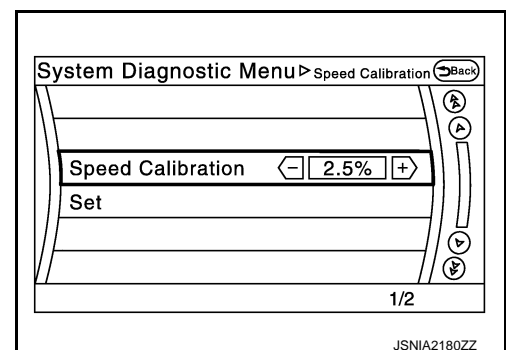

# DIAGNOSIS SYSTEM (AV CONTROL UNIT)

[BOSE AUDIO WITH NAVIGATION]

## < SYSTEM DESCRIPTION >

### XM SAT SUBSCRIPTION STATUS

The XM NavTraffic subscription status can be checked.

### Error History

The self-diagnosis results are judged depending on whether any error occurs from when “Self-diagnosis” is selected until the self-diagnosis results are displayed.

However, the diagnosis results are judged normal if an error has occurred before the ignition switch is turned ON and then no error has occurred until the self-diagnosis start. Check the “Error Record” to detect any error that may have occurred before the self-diagnosis start because of this situation.

The error record displays the time and place of the most recent occurrence of that error. However, take note of the following points.

- If there is a malfunction with the GPS antenna circuit board in the AV control unit, the correct date and time of occurrence may not be able to be displayed.
- Place of the error occurrence is represented by the position of the current location mark at the time an error occurred. If current location mark has deviated from the correct position, then the place of the error occurrence cannot be located correctly.
- The frequency of occurrence is displayed in a count up manner. The actual count up method differs depending on the error item.


### Count up method A

- The counter resets to 0 if an error occurs when ignition switch is turned ON. The counter increases by 1 if the condition is normal at a next ignition ON cycle.
- The counter upper limit is 39. Any counts exceeding 39 are ignored. The counter can be reset (no error record display) with the “Delete log” switch or CONSULT-III.

### Count up method B

- The counter increases by 1 if an error occurs when ignition switch is ON. The counter will not decrease even if the condition is normal at the next ignition ON cycle.
- The counter upper limit is 50. Any counts exceeding 50 are ignored. The counter can be reset (no error record display) with the “Delete log” switch or CONSULT-III.

Display type of occurrence frequency	Error history display item
Count up method A	CAN communication line, control unit (CAN), AV communication line, control unit (AV)
Count up method B	Other than the above

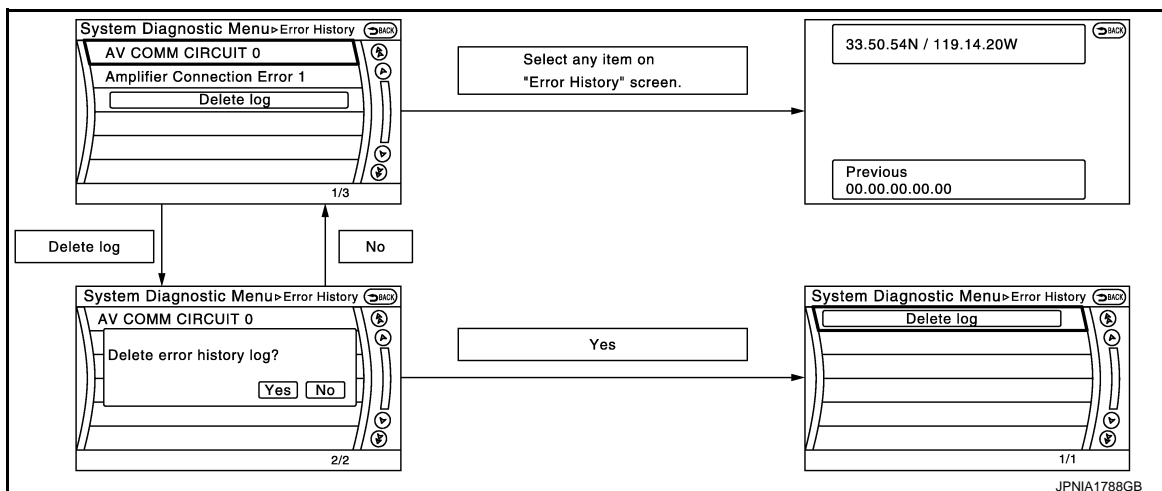

### Error item

Some error items may be displayed simultaneously according to the cause. If some error items are displayed simultaneously, the detection of the cause can be performed by the combination of display items

# DIAGNOSIS SYSTEM (AV CONTROL UNIT)

< SYSTEM DESCRIPTION >

[BOSE AUDIO WITH NAVIGATION]

Error item	Description	Possible malfunction factor/Action to take	A	
CAN COMM CIRCUIT	CAN communication malfunction is detected.	Perform diagnosis with CONSULT-III, and then repair the malfunctioning parts according to the diagnosis results. Refer to <a href="#">AV-163, "CONSULT-III Function (MULTI AV)"</a> .	B	
CONTROL UNIT (CAN)	CAN initial diagnosis malfunction is detected.	Replace the AV control unit if the malfunction occurs constantly.	C	
CONTROL UNIT (AV)	AV communication circuit initial diagnosis malfunction is detected.		D	
FLASH-ROM Error Of Control Unit	AV control unit malfunction is detected.		E	
Connection Of Gyro			F	
Connection of G Sensor			G	
CAN Controller Memory Error			H	
Bluetooth Module Connection Error			I	
Sub CPU Connection Error			J	
iPod authentication chip error			K	
Audio connection error			L	
DSP Connection Error		AV control unit malfunction is detected.	<ul style="list-style-type: none"> <li>If a disc can be played, then there is a possibility of the detection of a temporary malfunction.</li> <li>Replace the AV control unit if the malfunction occurs constantly.</li> </ul>	M
DSP Communication Error				N
HDD Connection Error	AV control unit malfunction is detected.	<ul style="list-style-type: none"> <li>If the music box function has no malfunctions, then there is a possibility of the detection of a temporary malfunction.</li> <li>Replace the AV control unit if the malfunction occurs constantly.</li> </ul>	O	
HDD Read Error			P	
HDD Write Error			Q	
HDD Communication Error			R	
HDD Access Error			S	
GPS Communication Error	GPS malfunction is detected.	An intermittent error caused by strong radio interference may be detected unless any symptom (GPS reception error, etc.) occurs. Replace the AV control unit if the malfunction occurs constantly.	T	
GPS ROM Error			U	
GPS RAM Error			V	
GPS RTC Error			W	
Unfinished configuration	The writing of configuration data is incomplete.	Write configuration data with CONSULT-III.	X	
USB Controller Communication Error	USB connection malfunction is detected.	Check that the connection to the USB connector is normal.	Y	
DVD Mechanism Communication Error	AV control unit malfunction is detected.	<ul style="list-style-type: none"> <li>If DVD can be played, then there is a possibility of the detection of a temporary malfunction.</li> <li>Replace the AV control unit if the malfunction occurs constantly.</li> </ul>	Z	
Steer. Angle Sensor Calibration	Predictive course line center position adjustment of the steering angle sensor is incomplete.	Adjust the predictive course line center position of the steering angle sensor.	AA	
Front Display Connection Error	When either one of the following items is detected: <ul style="list-style-type: none"> <li>front display unit power supply and ground circuits malfunction is detected.</li> <li>malfunction is detected in communication circuits between AV control unit and display unit.</li> </ul>	<ul style="list-style-type: none"> <li>Front display unit power supply and ground circuits.</li> <li>Communication circuits between AV control unit and front display unit.</li> </ul>	AB	

AV

# DIAGNOSIS SYSTEM (AV CONTROL UNIT)

## < SYSTEM DESCRIPTION >

## [BOSE AUDIO WITH NAVIGATION]

Error item	Description	Possible malfunction factor/Action to take
GPS Antenna Error	GPS antenna connection malfunction is detected.	Check the connection of the GPS antenna connector.
XM Antenna Connection Error	Satellite radio antenna connection malfunction is detected.	<ul style="list-style-type: none"> <li>Satellite radio antenna feeder.</li> <li>Satellite radio antenna.</li> </ul>
USB electric current Error	Detection of over current in USB connector.	Check USB harness between the AV control unit and USB connector.
AM/FM antenna amplifier short to ground	Radio antenna amp. ON signal circuit malfunction is detected.	Radio antenna amp. ON signal circuit between AV control unit and radio antenna amp.
AM/FM antenna amplifier open		
Ext_Amp_ON output terminal short to ground	BOSE amp. ON signal circuit malfunction is detected.	BOSE amp. ON signal circuit between AV control unit and BOSE amp.
Ext_Amp_ON output terminal :open		
<ul style="list-style-type: none"> <li>AV COMM CIRCUIT</li> <li>Switches Connection Error</li> </ul>	When either one of the following items are detected: <ul style="list-style-type: none"> <li>multifunction switch power supply and ground circuits are malfunctioning.</li> <li>AV communication circuits between AV control unit and multifunction switch are malfunctioning.</li> </ul>	<ul style="list-style-type: none"> <li>Multifunction switch power supply and ground circuits.</li> <li>AV communication circuits between AV control unit and multifunction switch.</li> </ul>

### Vehicle CAN Diagnosis

- CAN communication status and error counter is displayed.
- The error counter displays "OK" if any malfunction was not detected in the past and displays "0" if a malfunction is detected. It increases by 1 if the condition is normal at the next ignition switch ON cycle. The upper limit of the counter is 39.
- The error counter is erased if "Reset" is pressed.

Items	Display (Current)	Malfunction counter (Past)
Tx(HVAC)	OK / ???	OK / 0 - 39
Rx(ECM)	OK / ???	OK / 0 - 39
Rx(Cluster)	OK / ???	OK / 0 - 39
Rx(HVAC)	OK / ???	OK / 0 - 39
Rx(USM)	OK / ???	OK / 0 - 39
Rx(STRG)	OK / ???	OK / 0 - 39
Rx(RCU)	OK / ???	OK / 0 - 39

#### NOTE:



"???" indicates UNKWN

### AV COMM Diagnosis

- Displays the communication status between AV control unit (master unit) and each unit.
- The error counter displays "OK" if any malfunction was not detected in the past and displays "0" if a malfunction is detected. It increases by 1 if the condition is normal at the next ignition switch ON cycle. The upper limit of the counter is 39.
- The error counter is erased if "Reset" is pressed.

Items	Status (Current)	Counter (Past)
C Tx(ITM-PrimarySW)	OK / ???	OK / 0 - 39
C Rx(PrimarySW-ITM)	OK / ???	OK / 0 - 39

#### NOTE:

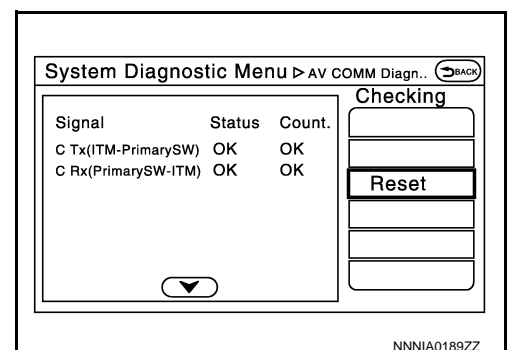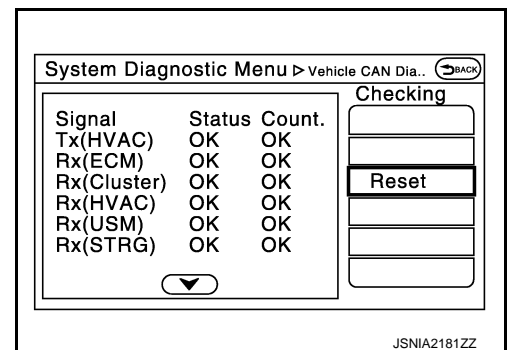



# DIAGNOSIS SYSTEM (AV CONTROL UNIT)


< SYSTEM DESCRIPTION >

[BOSE AUDIO WITH NAVIGATION]

“???” indicates UNKWN


## Hands-Free Phone

The hands-free phone reception volume adjustment and microphone and speaker test functions are also available.

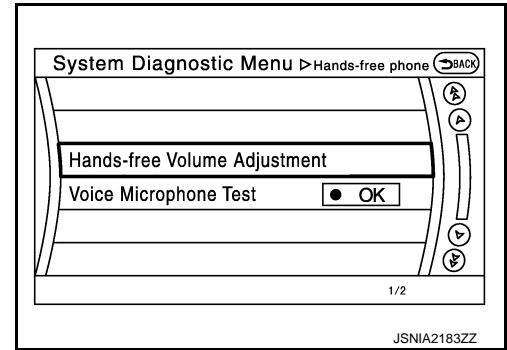


## Camera Cont.

The four functions of “Correct Draw Line of Rear view Camera”, “Alter/Confirm Configuration”, “Reset Configuration” and “Camera Syst Type” are available.

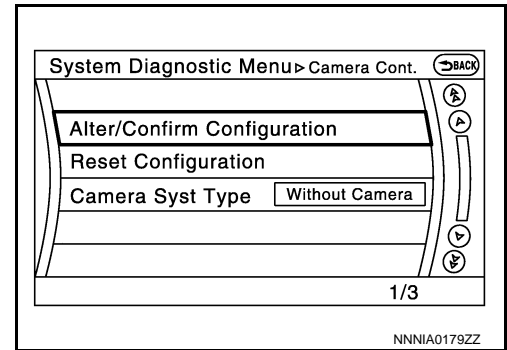

## Correct Draw Line of Rear view Camera

- Use this mode to adjust the guide line display position of the rear view monitor if necessary after removing the rear view monitor camera.

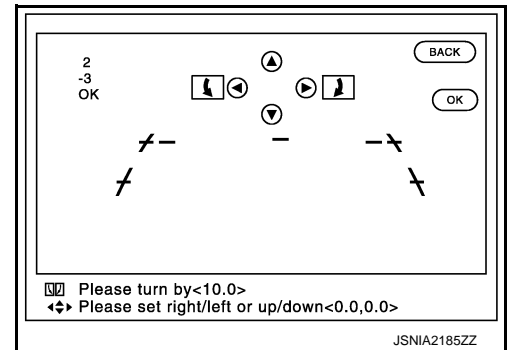

## Alter/Confirm Configuration

- Configuration stored in the AV control unit can be checked and modified.

### Configuration list

Setting item	Setting	Setting item	Setting
Predi. Course Lines	With	Wheelbase	2.5500000
Rear Coeff. K	-38009.06	Total Length	0.0000000
Rear Coeff. F	0.0014620	Steering Gear Ratio	15.192000
Rear Coeff. P1	0.0000062	Side Coeff. K	0.0000000
Rear Coeff. P2	0.0000056	Side Coeff. F	0.0000000
Rear Coeff. C1	823.00000	Side Coeff. P1	0.0000000
Rear Coeff. C2	480.00000	Side Coeff. P2	0.0000000
Rear Coeff. D1	800.00000	Side Coeff. C1	0.0000000
Rear Coeff. D2	494.00000	Side Coeff. C2	0.0000000
Car Width	1.8450000	Side Coeff. D1	0.0000000

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# DIAGNOSIS SYSTEM (AV CONTROL UNIT)


< SYSTEM DESCRIPTION >

[BOSE AUDIO WITH NAVIGATION]

Setting item	Setting	Setting item	Setting
Rear Offset	0.1900000	Side Coeff. D2	0.0000000
Rear Height	0.6886500	Side Offset	0.0000000
Rear L/R Angle	0.0000000	Overall Height	0.0000000
Rear Up/Dn Angle	47.900001	Side L/R Angle	0.0000000
Rear Roll Angle	0.0000000	Side Up/Dn Angle	0.0000000
Bumper Rear Dist.	0.0530000	Side Roll Angle	0.0000000
Bumper Rear Ax Dist	0.8630000	Side Front End Dist	0.0000000
Steer. Max Angle	492.75253	Total Width	0.0000000
Min. Turning Red.	5.0999999	—	—


## Reset Configuration

- Configuration stored in the AV control unit can be initialized.

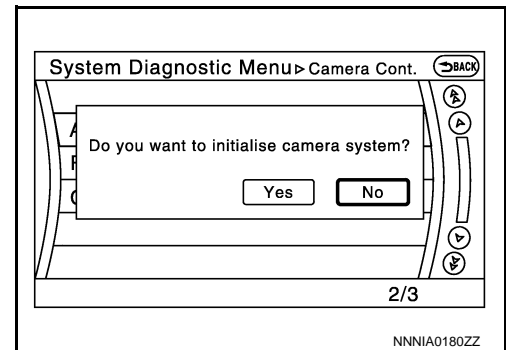


## Camera Syst Type

- Type of camera system is selectable.

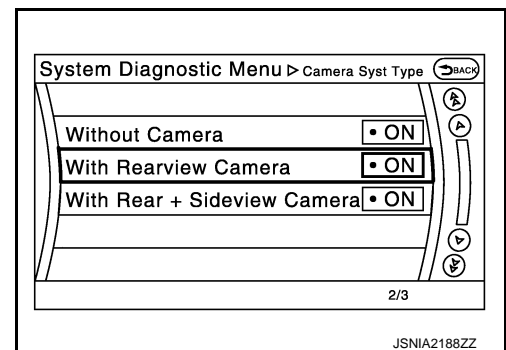

## XM

- Change Channel
  - Any necessary channels required to receive traffic information from the satellite radio system can be set.
- Change Application ID
  - Any application ID's required to receive traffic information from the satellite radio system can be set.

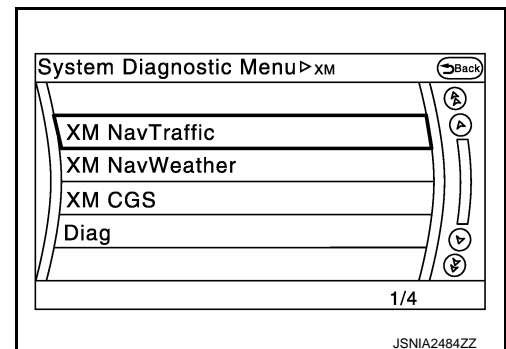


## Delete Unit Connection Log

# DIAGNOSIS SYSTEM (AV CONTROL UNIT)

[BOSE AUDIO WITH NAVIGATION]

## < SYSTEM DESCRIPTION >

Deletes any unit connection records and error records from the AV control unit memory. (Clear the records of the unit that has been removed.)

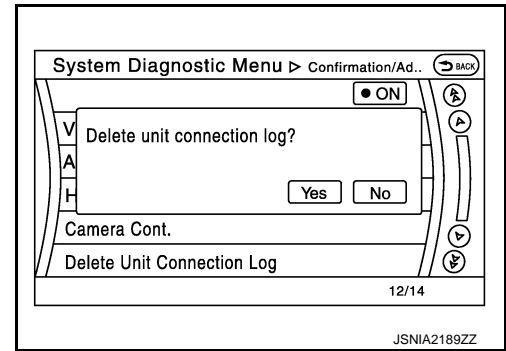


### Initialize Settings

“User Data Initialization” and “Accessory Number Initialization” are possible.


**CAUTION:**

- Never perform Accessory Number Initialization except when configuration is unsuccessful.
- Accessory Number Initialization requires configuration. For details, refer to [AV-202, "CONFIGURATION \(AV CONTROL UNIT\) : Description"](#).

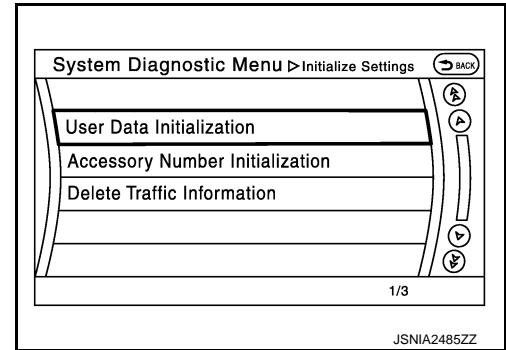

### Version Information

Version information of the AV control unit is displayed.

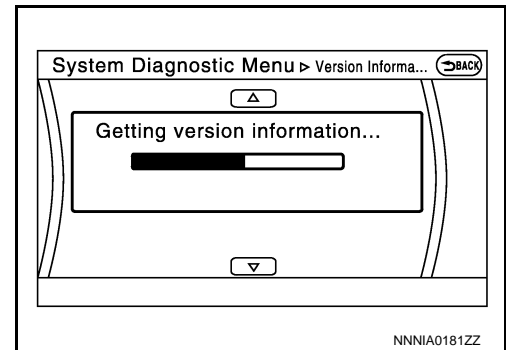

## CONSULT-III Function (MULTI AV)

INFOID:000000006709183

### APPLICATION ITEMS

CONSULT-III performs the following functions via the communication with the AV control unit.

Diagnosis mode	Description
Ecu Identification	The part number of AV control unit can be checked.
Self Diagnostic Result	Performs a diagnosis on the AV control unit and a connection diagnosis for the communication circuit of the Multi AV system, and displays the current and past malfunctions collectively.
Data Monitor	The diagnosis of vehicle signal that is input to the AV control unit can be performed.
Work Support	Steering angle sensor can be adjusted.
Configuration	<ul style="list-style-type: none"> <li>• Read and save the vehicle specification.</li> <li>• Write the vehicle specification when replacing AV control unit.</li> </ul>

### AV Communication

When “AV communication” of “CAN Diag Support Monitor” is selected, the following function will be performed.

AV communication	AV&NAVI C/U	Displays the communication status from AV control unit to each unit as well as the error counter.
	AUDIO	Displays the AV control unit communication status and the error counter.

# DIAGNOSIS SYSTEM (AV CONTROL UNIT)

**[BOSE AUDIO WITH NAVIGATION]**

< SYSTEM DESCRIPTION >

## ECU IDENTIFICATION

The part number of AV control unit is displayed.

## SELF DIAGNOSIS RESULT

- In CONSULT-III self-diagnosis, self-diagnosis results and error history are displayed collectively.
- The current malfunction indicates “CRNT”. The past malfunction indicates “PAST”.
- The timing is displayed as “0” if any of the error codes [U1000], [U1010], [U1300] and [U1310] is detected. The counter increases by 1 if the condition is normal at the next ignition switch ON cycle.

Self-diagnosis Results Display Item

Error item	Description	Possible malfunction factor/Action to take
CAN COMM CIRCUIT [U1000]	CAN communication malfunction is detected.	Perform diagnosis with CONSULT-III, and then repair the malfunctioning parts according to the diagnosis results. Refer to <a href="#">AV-204, "Diagnosis Procedure"</a>
CONTROL UNIT (CAN) [U1010]	CAN initial diagnosis malfunction is detected.	Replace the AV control unit if the malfunction occurs constantly.
CONTROL UNIT (AV) [U1310]	AV communication circuit initial diagnosis malfunction is detected.	
Cont Unit [U1200]	AV control unit malfunction is detected.	
GYRO NO CONN [U1201]		
G-SENSOR NO CONN [U1202]		
CAN CONT [U1216]		
BLUETOOTH MODULE [U1217]		
SUB CPU CONN [U1228]		
iPod CERTIFICATION [U1229]		
Built-in AUDIO CONN [U122E]	AV control unit malfunction is detected.	<ul style="list-style-type: none"> <li>• If the music box function has no malfunctions, then there is a possibility of the detection of a temporary malfunction.</li> <li>• Replace the AV control unit if the malfunction occurs constantly.</li> </ul>
HDD CONN [U1218]		
HDD READ [U1219]		
HDD WRITE [U121A]		
HDD COMM [U121B]		
HDD ACCESS [U121C]	GPS malfunction is detected.	<p>An intermittent error caused by strong radio interference may be detected unless any symptom (GPS reception error, etc.) occurs.</p> <p>Replace the AV control unit if the malfunction occurs constantly.</p>
GPS COMM [U1204]		
GPS ROM [U1205]		
GPS RAM [U1206]		
GPS RTC [U1207]	USB connection malfunction is detected.	Check that the connection to the USB connector is normal.
USB CONTROLLER [U1225]		
DSP CONN [U121D]	AV control unit malfunction is detected.	<ul style="list-style-type: none"> <li>• If a disc can be played, then there is a possibility of the detection of a temporary malfunction.</li> <li>• Replace the AV control unit if the malfunction occurs constantly.</li> </ul>
DSP COMM [U121E]		
DVD COMM [U1227]	AV control unit malfunction is detected.	<ul style="list-style-type: none"> <li>• If DVD can be played, then there is a possibility of the detection of a temporary malfunction.</li> <li>• Replace the AV control unit if the malfunction occurs constantly.</li> </ul>
CONFIG UNFINISH [U122A]	The writing of configuration data is incomplete.	Write configuration data with CONSULT-III.
ST ANGLE SEN CALIB [U1232]	Predictive course line center position adjustment of the steering angle sensor is incomplete.	Adjust the predictive course line center position of the steering angle sensor.

# DIAGNOSIS SYSTEM (AV CONTROL UNIT)

< SYSTEM DESCRIPTION >

[BOSE AUDIO WITH NAVIGATION]

Error item	Description	Possible malfunction factor/Action to take
FRONT DISP CONN [U1243]	When either one of the following items are detected: <ul style="list-style-type: none"> <li>• front display unit power supply and ground circuits malfunction is detected.</li> <li>• communication circuits between AV control unit and front display unit.</li> </ul>	<ul style="list-style-type: none"> <li>• Front display unit power supply and ground circuits.</li> <li>• Communication circuits between AV control unit and AV front display unit.</li> </ul>
GPS ANTENNA CONN [U1244]	GPS antenna connection malfunction is detected.	Check the connection of the GPS antenna connector.
XM ANTENNA CONN [U1258]	Satellite radio antenna connection malfunction is detected.	<ul style="list-style-type: none"> <li>• Satellite radio antenna feeder.</li> <li>• Satellite radio antenna.</li> </ul>
USB OVERCURRENT [U1263]	Detection of over current in USB connector.	Check USB harness between the AV control unit and USB connector.
ANTENNA AMP TERMINAL [U1264]	Radio antenna amp. ON signal circuit malfunction is detected.	Radio antenna amp. ON signal circuit between AV control unit and radio antenna amp.
AMP ON TERMINAL [U1265]	BOSE amp. ON signal circuit malfunction is detected.	BOSE amp. ON signal circuit between AV control unit and BOSE amp.
<ul style="list-style-type: none"> <li>• AV COMM CIRCUIT [U1300]</li> <li>• SWITCH CONN [U1240]</li> </ul>	When either one of the following items are detected: <ul style="list-style-type: none"> <li>• multifunction switch power supply and ground circuits are malfunctioning.</li> <li>• AV communication circuits between AV control unit and multifunction switch are malfunctioning.</li> </ul>	<ul style="list-style-type: none"> <li>• Multifunction switch power supply and ground circuits.</li> <li>• AV communication circuits between AV control unit and multifunction switch.</li> </ul>

## DATA MONITOR

### ALL SIGNALS

- Displays the status of the following vehicle signals inputted into the AV control unit.
- For each signal, actual signal can be compared with the condition recognized on the system.

Display Item	Display	Vehicle status	Remarks
VHCL SPD SIG	On	Vehicle speed >0 km/h (0 MPH)	Changes in indication may be delayed. This is normal.
	Off	Vehicle speed =0 km/h (0 MPH)	
PKB SIG	On	Parking brake is applied.	
	Off	Parking brake is released.	
ILLUM SIG	On	Block the light beam from the auto light optical sensor when the light SW is ON.	—
	Off	Expose the auto light optical sensor to light when the light SW is OFF or ON.	
IGN SIG	On	Ignition switch ON	—
	Off	Ignition switch in ACC position	
REV SIG	On	Selector lever in R position	Changes in indication may be delayed. This is normal.
	Off	Selector lever in any position other than R	
SIDE VIEW SW	Off	This item is displayed, but cannot be monitored.	—
ROOM LAMP	Off	This item is displayed, but not used.	—

### SELECTION FROM MENU

Allows the technician to select which vehicle signals should be displayed and displays the status of the selected vehicle signals.

# DIAGNOSIS SYSTEM (AV CONTROL UNIT)

< SYSTEM DESCRIPTION >

[BOSE AUDIO WITH NAVIGATION]

Item to be selected	Description
VHCL SPD SIG	The same as when "ALL SIGNALS" is selected.
PKB SIG	
ILLUM SIG	
IGN SIG	
REV SIG	
SIDE VIEW SW	
ROOM LAMP	

## WORK SUPPORT

Adjusts the neutral position of the steering angle sensor.

### CAUTION:

**For vehicles with VDC, adjust the steering angle sensor neutral position on the ABS actuator control unit side. Refer to [BRC-8, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).**

Item	Description
ST ANGLE SENSOR ADJUSTMENT	Adjusts the neutral position of the steering angle sensor.

## CONFIGURATION

Configuration has three functions as follows.

Function	Description
READ CONFIGURATION	<ul style="list-style-type: none"><li>• Reads the vehicle configuration of current AV control unit.</li><li>• Saves the read vehicle configuration.</li></ul>
WRITE CONFIGURATION-Manual selection	Writes the vehicle configuration with manual selection.
WRITE CONFIGURATION-Config file	Writes the vehicle configuration with saved data.

# AV CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITH NAVIGATION]

## ECU DIAGNOSIS INFORMATION

### AV CONTROL UNIT

#### Reference Value

INFOID:000000006709184


#### VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition		Value/Status
VHCL SPD SIG	Ignition switch ON	Vehicle speed > 0 km/h (0 MPH)	On
		Vehicle speed = 0 km/h (0 MPH)	Off
PKB SIG	Ignition switch ON	Parking brake is applied.	On
		Parking brake is released.	Off
ILLUM SIG	Ignition switch ON	Light switch ON	On
		Light switch OFF	Off
IGN SIG	Ignition switch ON	—	On
	Ignition switch ACC	—	Off
REV SIG	Ignition switch ON	Selector lever in R position	On
		Selector lever in any position other than R	Off
SIDE VIEW SW*	Ignition switch ON	—	Off
ROOM LAMP*	Ignition switch ON	—	Off

\*: This item is displayed, but cannot be monitored.

#### TERMINAL LAYOUT


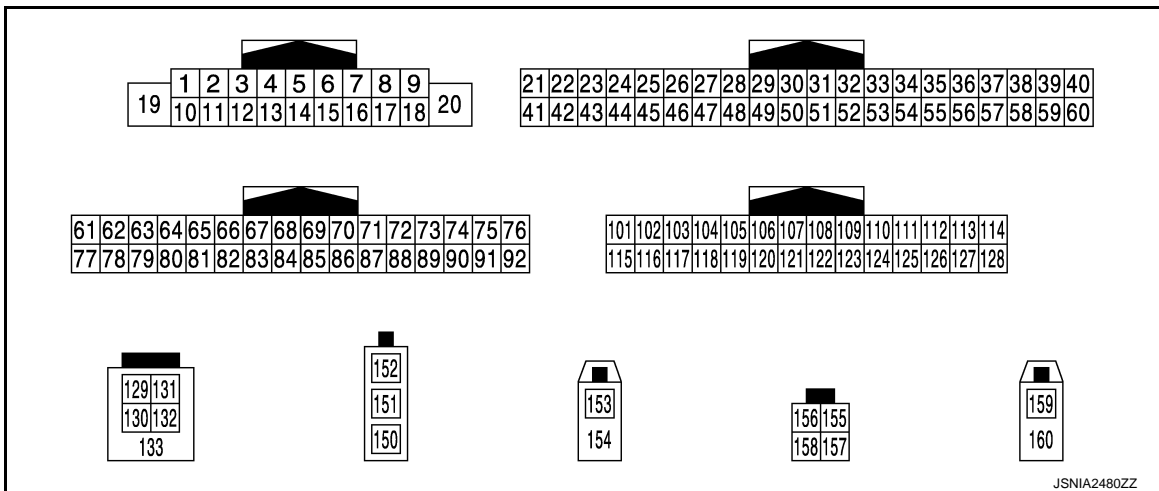

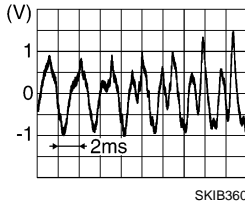
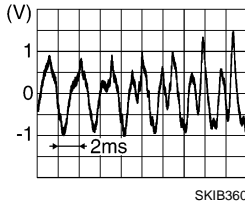


#### PHYSICAL VALUES

# AV CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITH NAVIGATION]

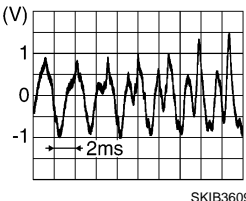
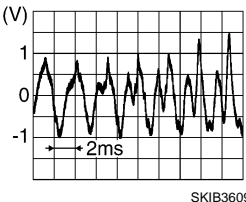
Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
1 (V)	Ground	BOSE amp. ON signal	Output	Ignition switch ON	—	12.0 V
2 (LG)	3 (V)	Sound signal front LH	Output	Ignition switch ON	Sound output	
4 (L)	5 (R)	Sound signal rear LH	Output	Ignition switch ON	Sound output	
6 (P)	15 (B)	Steering switch signal A	Input	Ignition switch ON	Keep pressing SOURCE switch.	0 V
					Keep pressing MENU UP switch.	1.0 V
					Keep pressing MENU DOWN switch.	2.0 V
					Keep pressing  switch	3.0 V
					Keep pressing ENTER switch.	4.0 V
					Except for above.	5.0 V
7 (L)	Ground	ACC power supply	Input	Ignition switch ACC	—	Battery voltage
10	—	Shield	—	—	—	—
11 (L)	12 (P)	Sound signal front RH	Output	Ignition switch ON	Sound output	
13 (R)	14 (G)	Sound signal rear RH	Output	Ignition switch ON	Sound output	



# AV CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITH NAVIGATION]

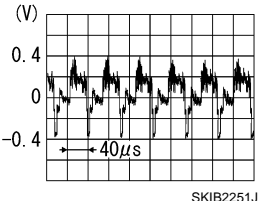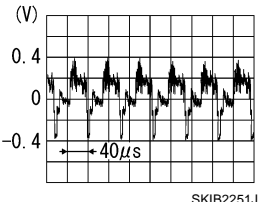Terminal (Wire color)		Description		Condition	Reference value (Approx.)	
+	-	Signal name	Input/ Output			
16 (L)	15 (B)	Steering switch signal B	Input	Ignition switch ON	Keep pressing VOL DOWN switch.	0 V
					Keep pressing VOL UP switch.	1.0 V
					Keep pressing  switch.	2.0 V
					Keep pressing  switch.	3.0 V
					Except for above.	5.0 V
19 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
20 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
22 (R)	Ground	Camera power supply	Output	Ignition switch ON	At rear view camera image is displayed.	6.0 V
					Except for above.	0 V
26 (LG)	Ground	AUX image signal	Input	Ignition switch ON	At AUX image is displayed.	
29 (SB)	Ground	Disk eject signal	Input	Ignition switch ON	Pressing the eject switch.	0 V
					Except for above.	5.0 V
42 (B)	Ground	Camera ground	—	Ignition switch ON	—	0 V
46 (V)	Ground	AUX image signal ground	—	Ignition switch ON	—	0 V
47	—	Shield	—	—	—	—
49 (BR)	Ground	Switch ground	—	Ignition switch ON	—	0 V
65 (O)	Ground	Parking brake signal	Input	Ignition switch ON	Parking brake is ON.	5.0 V
					Parking brake is OFF.	0 V
67 (L)	Ground	Composite image ground	—	Ignition switch ON	—	0 V
68 (G)	Ground	Composite image signal	Output	Ignition switch ON	At DVD image is displayed.	




A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# AV CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >




[BOSE AUDIO WITH NAVIGATION]

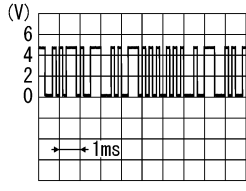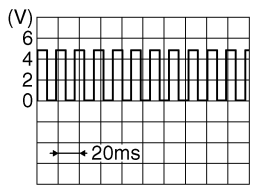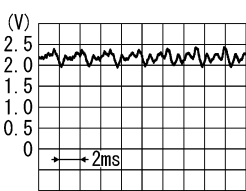Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
72 (R)	Ground	Microphone VCC	Output	Ignition switch ON	—	5.0 V
73 (G)	Ground	Communication signal (CONT→DISP)	Output	Ignition switch ON	When adjusting display brightness.	
74 (P) <sup>*1</sup> (L) <sup>*2</sup>	—	CAN-L	Input/ Output	—	—	—
75 (LG) <sup>*1</sup> (Y) <sup>*2</sup>	—	AV communication signal (L)	Input/ Output	—	—	—
76 (LG) <sup>*1</sup> (Y) <sup>*2</sup>	—	AV communication signal (L)	Input/ Output	—	—	—
79 (R)	Ground	Illumination signal	Input	Ignition switch OFF	Lighting switch is OFF.	0 V
					Lighting switch is ON.	12.0 V
80 (G)	Ground	Ignition signal	Input	Ignition switch ON	—	Battery voltage
81 (O)	Ground	Reverse signal	Input	Ignition switch ON	R position	12.0 V
					Other than R position	0 V
82 (Y)	Ground	Vehicle speed signal (8- pulse)	Input	Ignition switch ON	When vehicle speed is approx. 40 km/h (25 MPH)	<p><b>NOTE:</b> Maximum voltage may be 12.0 V due to specifications (connected units).</p> 
83	—	Shield	—	—	—	—
84 (Y)	—	—	—	—	—	—
87 (G)	71	Microphone signal	Input	Ignition switch ON	Give a voice	

# AV CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITH NAVIGATION]

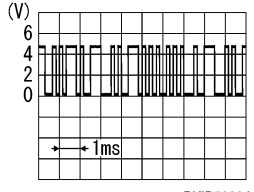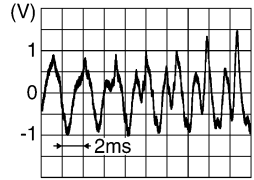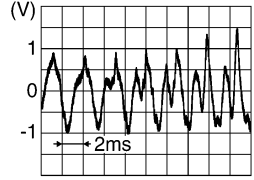Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
89 (R)	Ground	Communication signal (DISP→CONT)	Input	Ignition switch ON	When adjusting display brightness.	 <p style="text-align: right; font-size: small;">PKIB5039J</p>
90 (L)*1 (P)*2	—	CAN-H	Input/ Output	—	—	—
91 (Y)*1 (LG)*2	—	AV communication signal (H)	Input/ Output	—	—	—
92 (Y)*1 (LG)*2	—	AV communication signal (H)	Input/ Output	—	—	—
104 (Y)	119 (L)	AUX sound signal LH	Input	Ignition switch ON	When AUX mode is select- ed.	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
117	—	Shield	—	—	—	—
118 (G)	119 (L)	AUX sound signal RH	Input	Ignition switch ON	When AUX mode is select- ed.	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
129 (O)	—	USB ground	—	—	—	—
130 (L)	—	USB D- signal	—	—	—	—
131 (BR)	—	V BUS signal	—	—	—	—
132 (R)	—	USB D+ signal	—	—	—	—
133	—	Shield	—	—	—	—
150	—	FM sub	Input	—	—	—
151	—	AM-FM main	Input	—	—	—
152	Ground	Antenna amp. ON signal	Input	Ignition switch ON	—	12.0 V
153	Ground	GPS antenna signal	Input	Ignition switch ON	Not connected GPS anten- na connector.	5.0 V

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# AV CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITH NAVIGATION]

Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
154	—	Shield	—	—	—	—
157	Ground	RGB digital image signal (-)	Output	Ignition switch ON	Not connected connector.	1.3 V
158	Ground	RGB digital image signal (+)	Output	Ignition switch ON	Not connected connector.	1.3 V
159	Ground	Satellite radio antenna sig- nal	Input	Ignition switch ON	Not connected to satellite radio antenna connector.	5.0 V
160	—	Shield	—	—	—	—

\*1: Coupe models

\*2: Roadster models

## Fail-Safe

INFOID:000000006709185

When the ambient temperature becomes extremely low or extremely high, AV control unit displays the message and limits the AV control unit function.

### FAIL-SAFE CONDITIONS

When the ambient temperature is  $-20^{\circ}\text{C}$  ( $-4^{\circ}\text{F}$ ) or lower, or when it is  $70^{\circ}\text{C}$  ( $158^{\circ}\text{F}$ ) or higher

Display

The messages displayed on fail-safe conditions are as shown below:

Fail-safe mode	Display (display of the fail-safe condition)
When HDD temperature is low	HDD system is experiencing problems due to extreme low temperature. Normal operation will resume when temperature rises.
When HDD temperature is high	HDD system is experiencing problems due to extreme high temperature. Normal operation will resume when temperature drops.

## DESCRIPTION OF CONTROLS

Function	When Fail-safe Function is activated	
Air conditioner	Operation	Only multifunction switch (preset switch) can be operated.
	Display	<ul style="list-style-type: none"> <li>LED of multifunction switch (preset switch) illuminates.</li> <li>Aimed temperature, blow angle, and flow rate are displayed in simplified mode.</li> </ul>
Audio	Operation	Only ON/OFF and volume control operations by multifunction switch (preset switch) are possible.
	Display	No display ("Fail-safe mode" is displayed)
Hands-free phone	Operation	Cannot be operated.
Navigation	Operation	Cannot be operated.
Self diagnosis	The display in simplified mode of fail-safe condition	
CONSULT-III diagnosis	Cannot be operated.	

### Ability Operation Mode

There is an ability operation mode for Fail-safes due to low or high ambient temperature.

If HDD data can be read, fail-safe is shown, then normal displays are displayed only for functions which can be operated.

### RELEASE CONDITIONS OF FAIL-SAFE

Fail-safe is released on following conditions and normal mode is restored.

When The Temperature of HDD Is Low or High

If the ambient temperature becomes out of fail-safe condition range, normal mode is restored.

# AV CONTROL UNIT

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITH NAVIGATION]

## DTC Index

INFOID:000000006709186

### SELF-DIAGNOSIS RESULTS DISPLAY ITEM

DTC	Display item	Refer to
U1000	CAN COMM CIRCUIT [U1000]	<a href="#">AV-204, "Diagnosis Procedure"</a>
U1010	CONTROL UNIT (CAN) [1010]	<a href="#">AV-205, "DTC Logic"</a>
U1200	Cont Unit [U1200]	<a href="#">AV-206, "DTC Logic"</a>
U1201	GYRO NO CONN [U1201]	<a href="#">AV-207, "DTC Logic"</a>
U1202	G-SENSOR NO CONN [U1202]	<a href="#">AV-208, "DTC Logic"</a>
U1204	GPS COMM [U1204]	<a href="#">AV-209, "Diagnosis Procedure"</a>
U1205	GPS ROM [U1205]	<a href="#">AV-210, "Diagnosis Procedure"</a>
U1206	GPS RAM [U1206]	<a href="#">AV-211, "Diagnosis Procedure"</a>
U1207	GPS RTC [U1207]	<a href="#">AV-212, "Diagnosis Procedure"</a>
U1216	CAN CONT [U1216]	<a href="#">AV-213, "DTC Logic"</a>
U1217	BLUETOOTH MODULE [U1217]	<a href="#">AV-214, "DTC Logic"</a>
U1218	HDD CONN [U1218]	<a href="#">AV-215, "Diagnosis Procedure"</a>
U1219	HDD READ [U1219]	<a href="#">AV-216, "Diagnosis Procedure"</a>
U121A	HDD WRITE [U121A]	<a href="#">AV-217, "Diagnosis Procedure"</a>
U121B	HDD COMM [U121B]	<a href="#">AV-218, "Diagnosis Procedure"</a>
U121C	HDD ACCESS [U121C]	<a href="#">AV-219, "Diagnosis Procedure"</a>
U121D	DSP CONN [U121D]	<a href="#">AV-220, "Diagnosis Procedure"</a>
U121E	DSP COMM [U121E]	<a href="#">AV-221, "Diagnosis Procedure"</a>
U1225	USB CONTROLLER [U1225]	<a href="#">AV-222, "DTC Logic"</a>
U1227	DVD COMM [U1227]	<a href="#">AV-223, "Diagnosis Procedure"</a>
U1228	SUB CPU CONN [U1228]	<a href="#">AV-224, "DTC Logic"</a>
U1229	iPod CERTIFICATION [U1229]	<a href="#">AV-225, "DTC Logic"</a>
U122A	CONFIG UNFINISH [U122A]	<a href="#">AV-226, "Diagnosis Procedure"</a>
U122E	Built-in AUDIO CONN [U122E]	<a href="#">AV-227, "DTC Logic"</a>
U1232	ST ANGLE SEN CALIB [1232]	<a href="#">AV-228, "Diagnosis Procedure"</a>
U1243	FRONT DISP CONN [U1243]	<a href="#">AV-229, "Diagnosis Procedure"</a>
U1244	GPS ANTENNA CONN [U1244]	<a href="#">AV-231, "Diagnosis Procedure"</a>
U1258	XM ANTENNA CONN [U1258]	<a href="#">AV-232, "DTC Logic"</a>
U1263	USB OVERCURRENT [U1263]	<a href="#">AV-233, "Diagnosis Procedure"</a>
U1264	ANTENNA AMP TERMINAL [U1264]	<ul style="list-style-type: none"> <li>• <a href="#">AV-234, "COUPE : Diagnosis Procedure"</a> (coupe models)</li> <li>• <a href="#">AV-234, "ROADSTER : Diagnosis Procedure"</a> (roadster models)</li> </ul>
U1265	AMP ON TERMINAL [U1265]	<a href="#">AV-236, "Diagnosis Procedure"</a>
U1310	CONTROL UNIT (AV) [U1310]	<a href="#">AV-238, "DTC Logic"</a>
U1300 U1240	<ul style="list-style-type: none"> <li>• AV COMM CIRCUIT [U1300]</li> <li>• SWITCH CONN [U1240]</li> </ul>	<a href="#">AV-237, "Description"</a>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

# FRONT DISPLAY UNIT

< ECU DIAGNOSIS INFORMATION >


[BOSE AUDIO WITH NAVIGATION]

## FRONT DISPLAY UNIT

Reference Value

INFOID:00000006709187

### TERMINAL LAYOUT

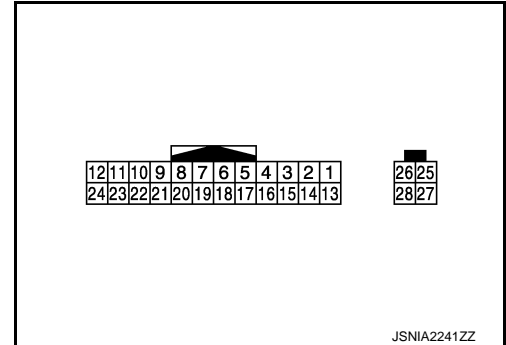


### PHYSICAL VALUES

Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
6 (B)	—	Shield	—	—	—	—
7	—	Shield	—	—	—	—
8 (L)	Ground	Camera image signal	Input	Ignition switch ON	At rear view camera image is displayed.	<p style="text-align: right;">SKIB2251J</p>
9 (R)	Ground	Communication signal (DISP→CONT)	Output	Ignition switch ON	When adjusting display brightness.	<p style="text-align: right;">PKIB5039J</p>
10 (G)	Ground	Communication signal (CONT→DISP)	Input	Ignition switch ON	When adjusting display brightness.	<p style="text-align: right;">PKIB5039J</p>
11 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
12 (B)	Ground	Ground	—	Ignition switch ON	—	0 V

# FRONT DISPLAY UNIT

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITH NAVIGATION]

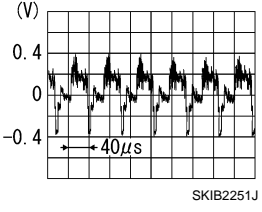Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
18 (G)	Ground	Composite image signal	Input	Ignition switch ON	At DVD image is displayed.	
19 (L)	Ground	Composite image signal ground	—	Ignition switch ON	—	0 V
20 (Y)	—	—	—	—	—	—
23 (L)	Ground	ACC power supply	Input	—	—	—
27	—	RGB digital image signal (-)	Input	—	—	—
28	—	RGB digital image signal (+)	Input	—	—	—

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV

O  
P

# BOSE AMP.

< ECU DIAGNOSIS INFORMATION >


[BOSE AUDIO WITH NAVIGATION]

BOSE AMP.  
COUPE

COUPE : Reference Value

INFOID:000000006709188

## TERMINAL LAYOUT

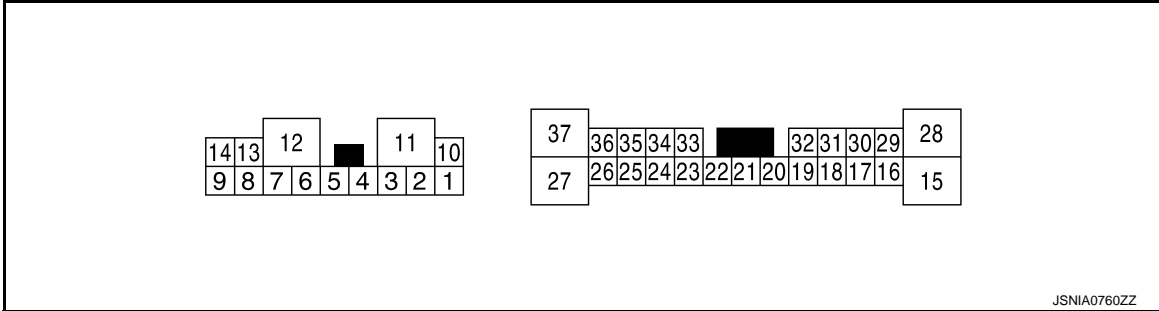

## PHYSICAL VALUES







Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
1 (L)	10 (V)	Sound signal front door speaker LH	Output	Ignition switch ON	Voice output	<p>SKIB3609E</p>
2 (BG)	3 (G)	Sound signal front door speaker RH	Output	Ignition switch ON	Voice output	<p>SKIB3609E</p>
4 (SB)	5 (V)	Sound signal woofer	Output	Ignition switch ON	Voice output	<p>SKIB3609E</p>
6 (LG)	7 (GR)	Sound signal tweeter LH	Output	Ignition switch ON	Voice output	<p>SKIB3609E</p>



# BOSE AMP.

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITH NAVIGATION]

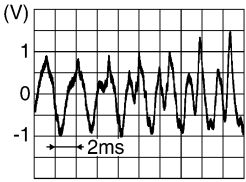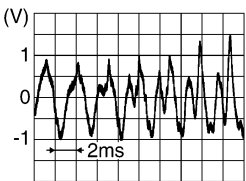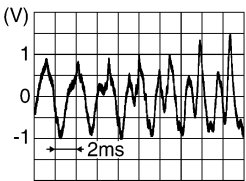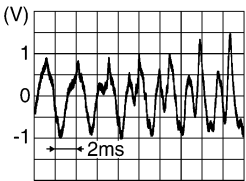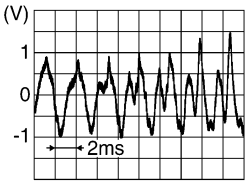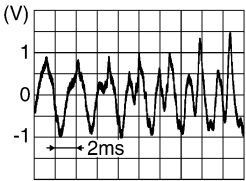Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
9 (R)	14 (BR)	Sound signal rear speaker RH	Output	Ignition switch ON	Voice output	 SKIB3609E
11 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
12 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
15 (L)	28 (P)	Sound signal rear speaker LH	Output	Ignition switch ON	Voice output	 SKIB3609E
18 (P)	32 (L)	Sound signal front LH	Input	Ignition switch ON	Voice output	 SKIB3609E
19 (R)	20 (G)	Sound signal front RH	Input	Ignition switch ON	Voice output	 SKIB3609E
21 (V)	22 (SB)	Sound signal rear LH	Input	Ignition switch ON	Voice output	 SKIB3609E
23 (BR)	33 (Y)	Sound signal rear RH	Input	Ignition switch ON	Voice output	 SKIB3609E


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

AV

# BOSE AMP.

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITH NAVIGATION]

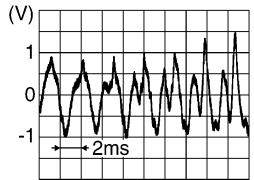
Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
31 (W)	Ground	BOSE amp. ON signal	Input	Ignition switch ACC	—	12.0 V
37 (B)	27 (W)	Sound signal tweeter RH	Output	Ignition switch ON	Voice output	 SKIB3609E

## ROADSTER



### ROADSTER : Reference Value

INFOID:000000006709189

### TERMINAL LAYOUT

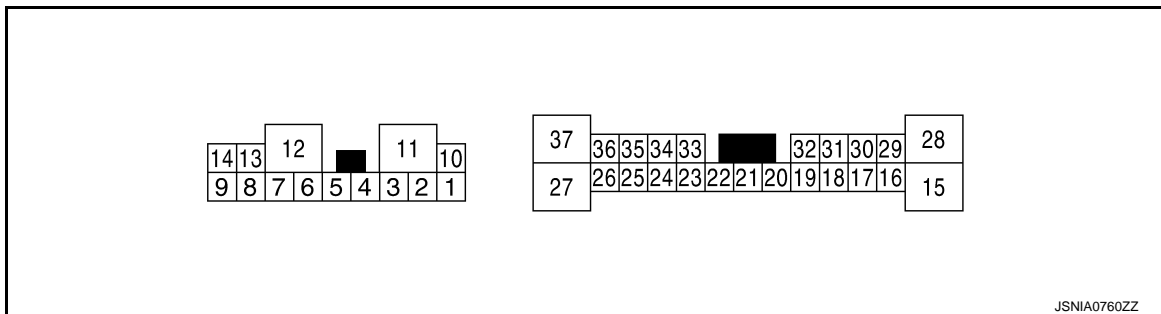






### PHYSICAL VALUES

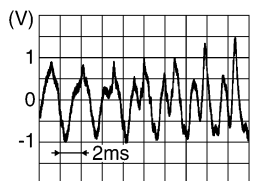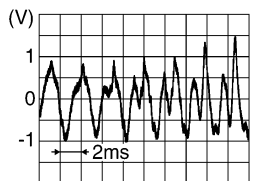Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
1 (L)	10 (V)	Sound signal rear woofer LH	Output	Ignition switch ON	Voice output	 SKIB3609E
2 (LG)	3 (Y)	Sound signal rear woofer RH	Output	Ignition switch ON	Voice output	 SKIB3609E

# BOSE AMP.

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITH NAVIGATION]

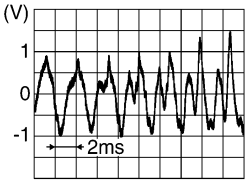
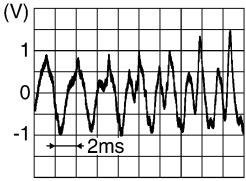
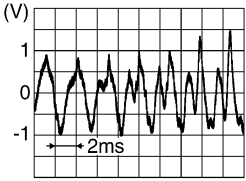
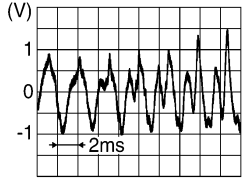
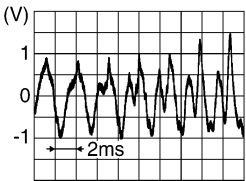
Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
4 (L)	5 (V)	Sound signal front door speaker LH	Output	Ignition switch ON	Voice output	 SKIB3609E
6 (LG)	7 (GR)	Sound signal tweeter LH	Output	Ignition switch ON	Voice output	 SKIB3609E
8 (BG)	13 (G)	Sound signal front door speaker RH	Output	Ignition switch ON	Voice output	 SKIB3609E
9 (LG)	14 (Y)	Sound signal rear speaker RH	Output	Ignition switch ON	Voice output	 SKIB3609E
11 (Y)	Ground	Battery power supply	Input	Ignition switch OFF	—	Battery voltage
12 (B)	Ground	Ground	—	Ignition switch ON	—	0 V
15 (L)	28 (P)	Sound signal rear speaker LH	Output	Ignition switch ON	Voice output	 SKIB3609E
17 (R)	Ground	Roof status signal (AUDIO)	Input	Ignition switch ON	Retractable soft top fully open	Battery voltage
				Retractable soft top other than above	0 V	

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

# BOSE AMP.

< ECU DIAGNOSIS INFORMATION >

[BOSE AUDIO WITH NAVIGATION]

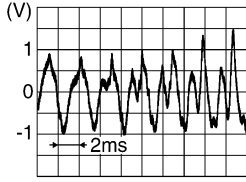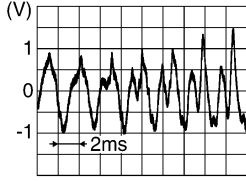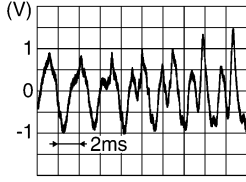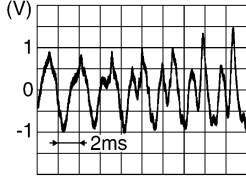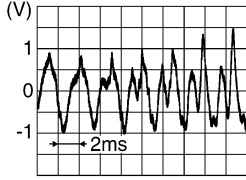Terminal (Wire color)		Description		Condition		Reference value (Approx.)
+	-	Signal name	Input/ Output			
18 (P)	32 (L)	Sound signal front LH	Input	Ignition switch ON	Voice output	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
19 (R)	20 (G)	Sound signal front RH	Input	Ignition switch ON	Voice output	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
21 (V)	22 (SB)	Sound signal rear LH	Input	Ignition switch ON	Voice output	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
23 (BR)	33 (Y)	Sound signal rear RH	Input	Ignition switch ON	Voice output	 <p style="text-align: right; font-size: small;">SKIB3609E</p>
31 (W)	Ground	BOSE amp. ON signal	Input	Ignition switch ACC	—	12.0 V
37 (B)	27 (W)	Sound signal tweeter RH	Output	Ignition switch ON	Voice output	 <p style="text-align: right; font-size: small;">SKIB3609E</p>

# BOSE AUDIO WITH NAVIGATION SYSTEM

[BOSE AUDIO WITH NAVIGATION]

< WIRING DIAGRAM >

## WIRING DIAGRAM


### BOSE AUDIO WITH NAVIGATION SYSTEM

#### Wiring Diagram

INFOID:000000006709190

**NOTE:**

The name MULTIFUNCTION SWITCH indicates the integration of PRESET SWITCH and MULTIFUNCTION SWITCH virtually.

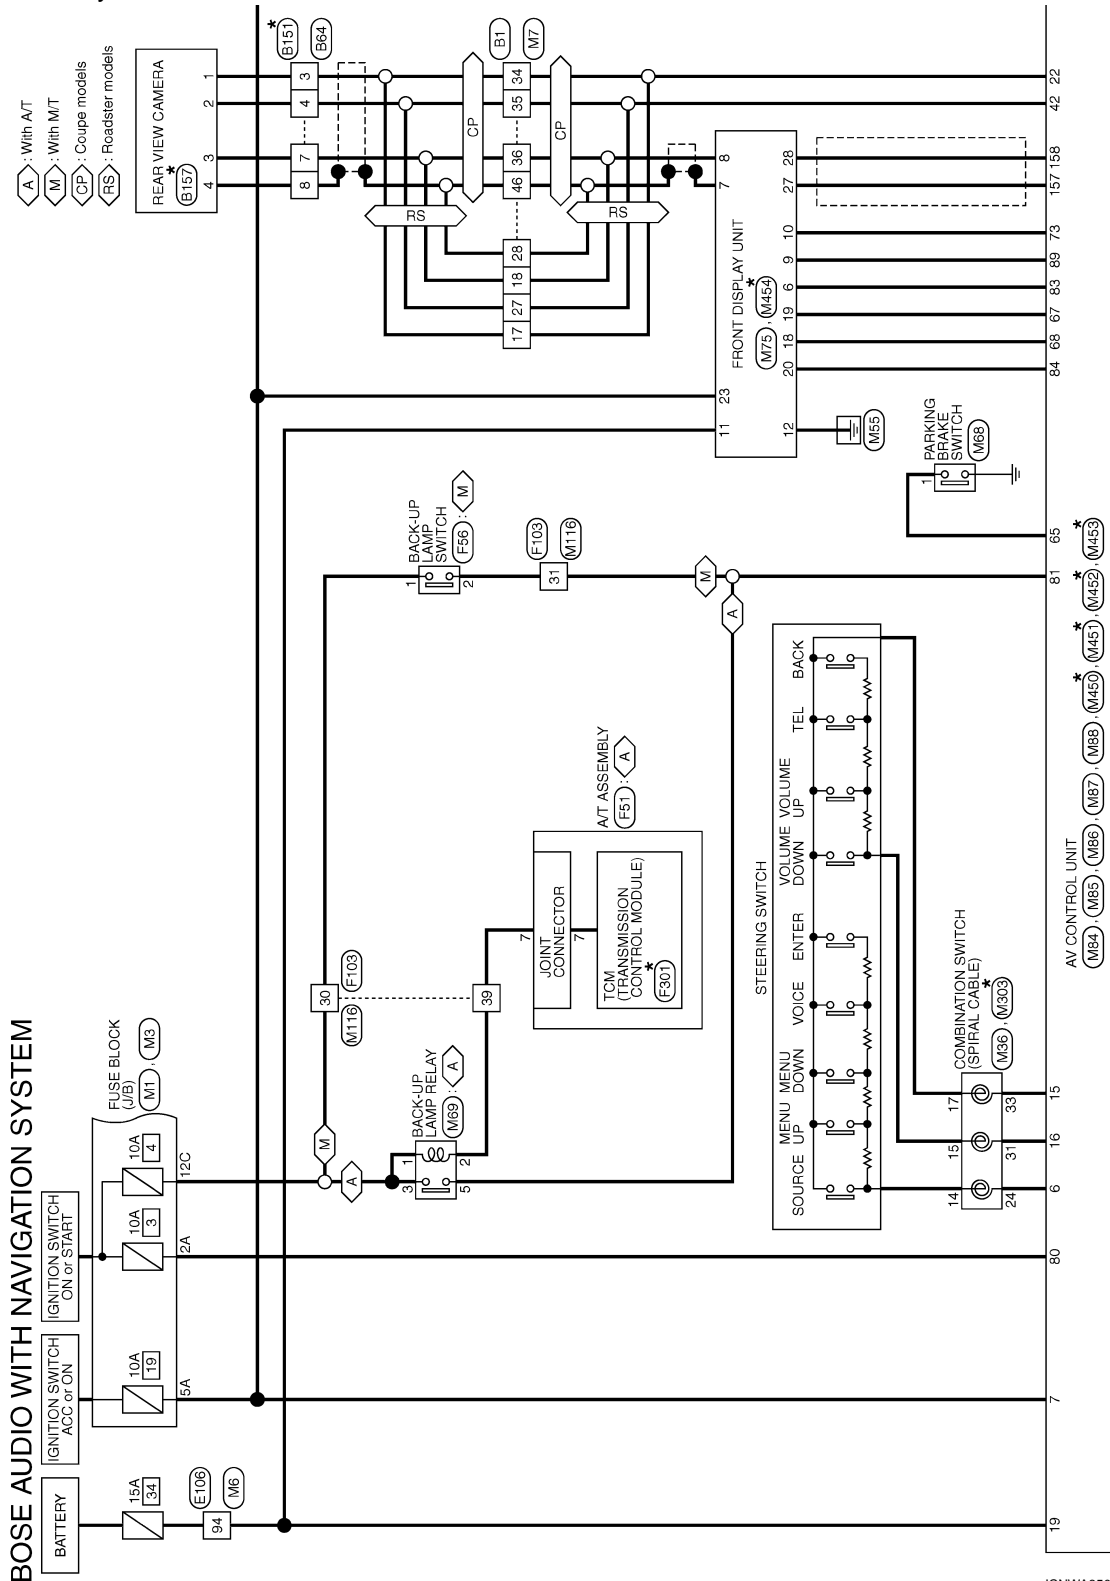


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

# BOSE AUDIO WITH NAVIGATION SYSTEM

< WIRING DIAGRAM >

[BOSE AUDIO WITH NAVIGATION]

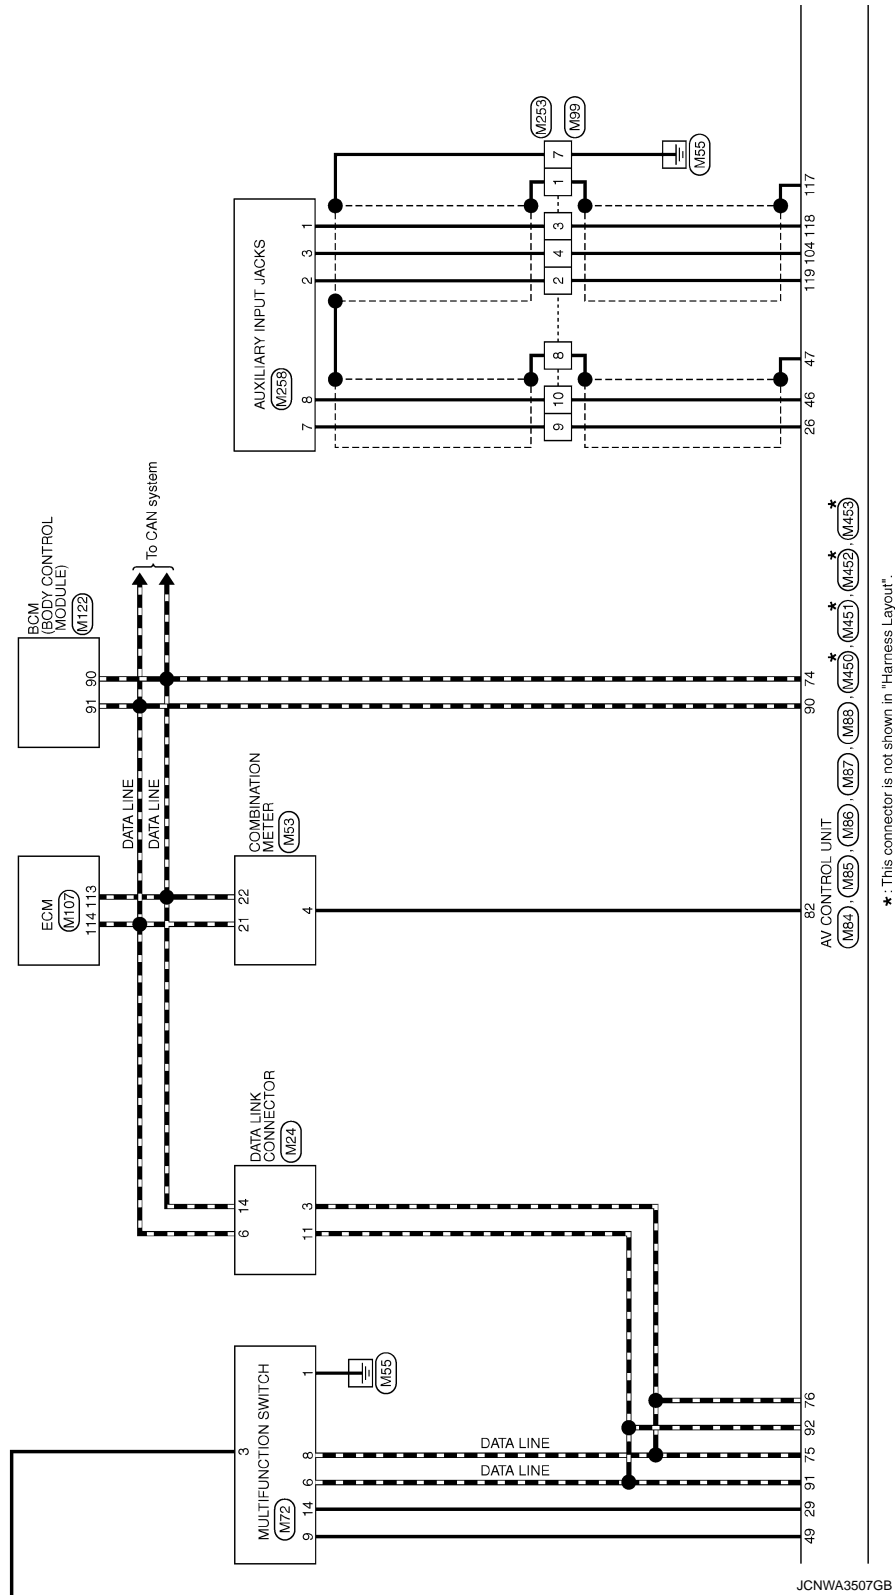


# BOSE AUDIO WITH NAVIGATION SYSTEM

## [BOSE AUDIO WITH NAVIGATION]

< WIRING DIAGRAM >

CP : Coupe models  
RS : Roadster models

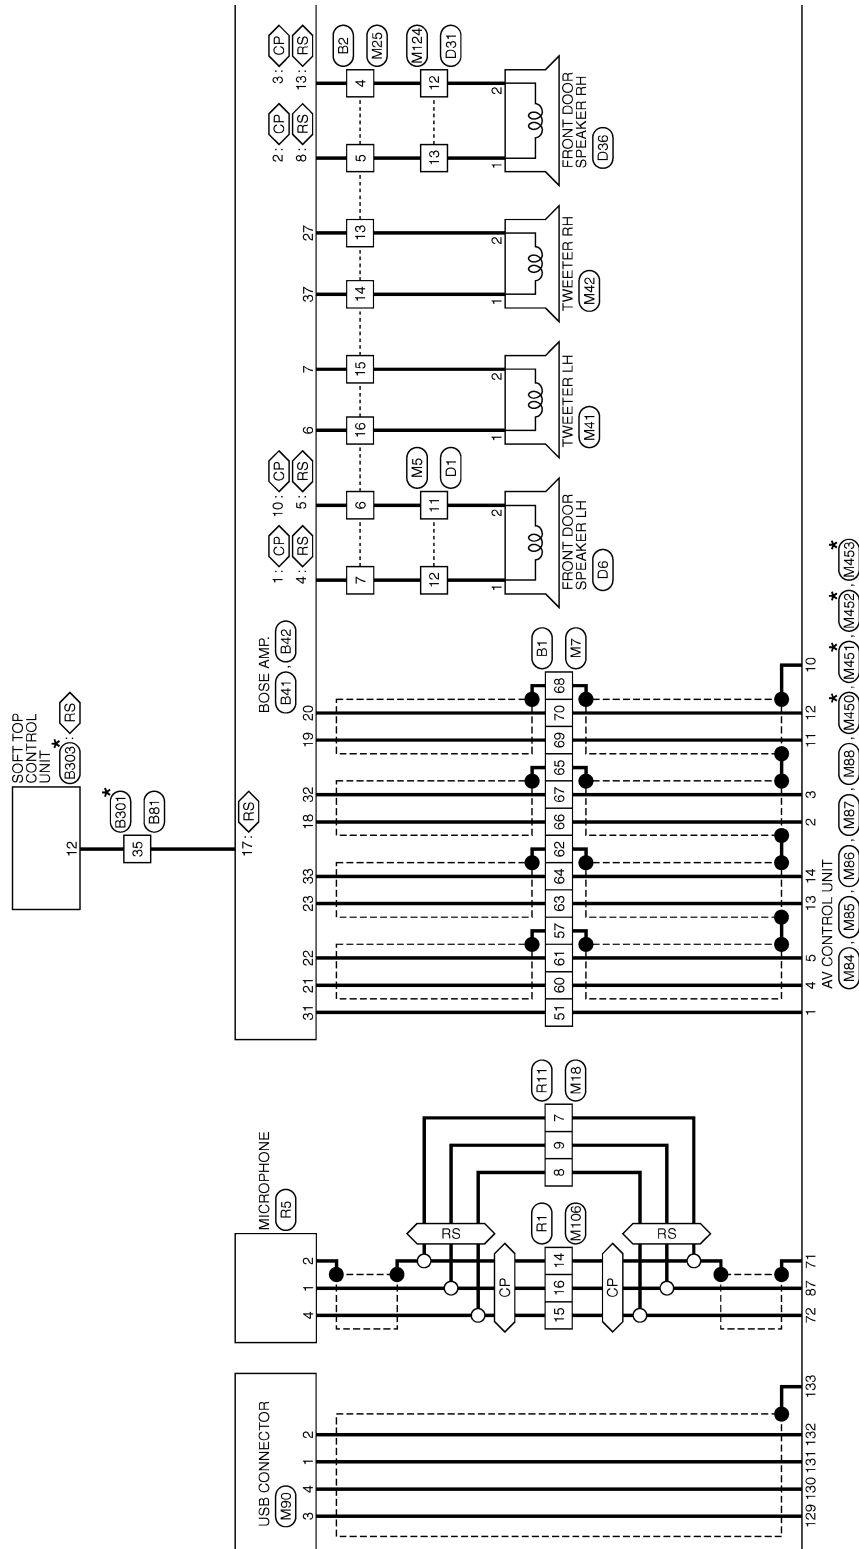

\*: This connector is not shown in "Harness Layout".

JCNWA3508GB


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

# BOSE AUDIO WITH NAVIGATION SYSTEM

< WIRING DIAGRAM >

[BOSE AUDIO WITH NAVIGATION]

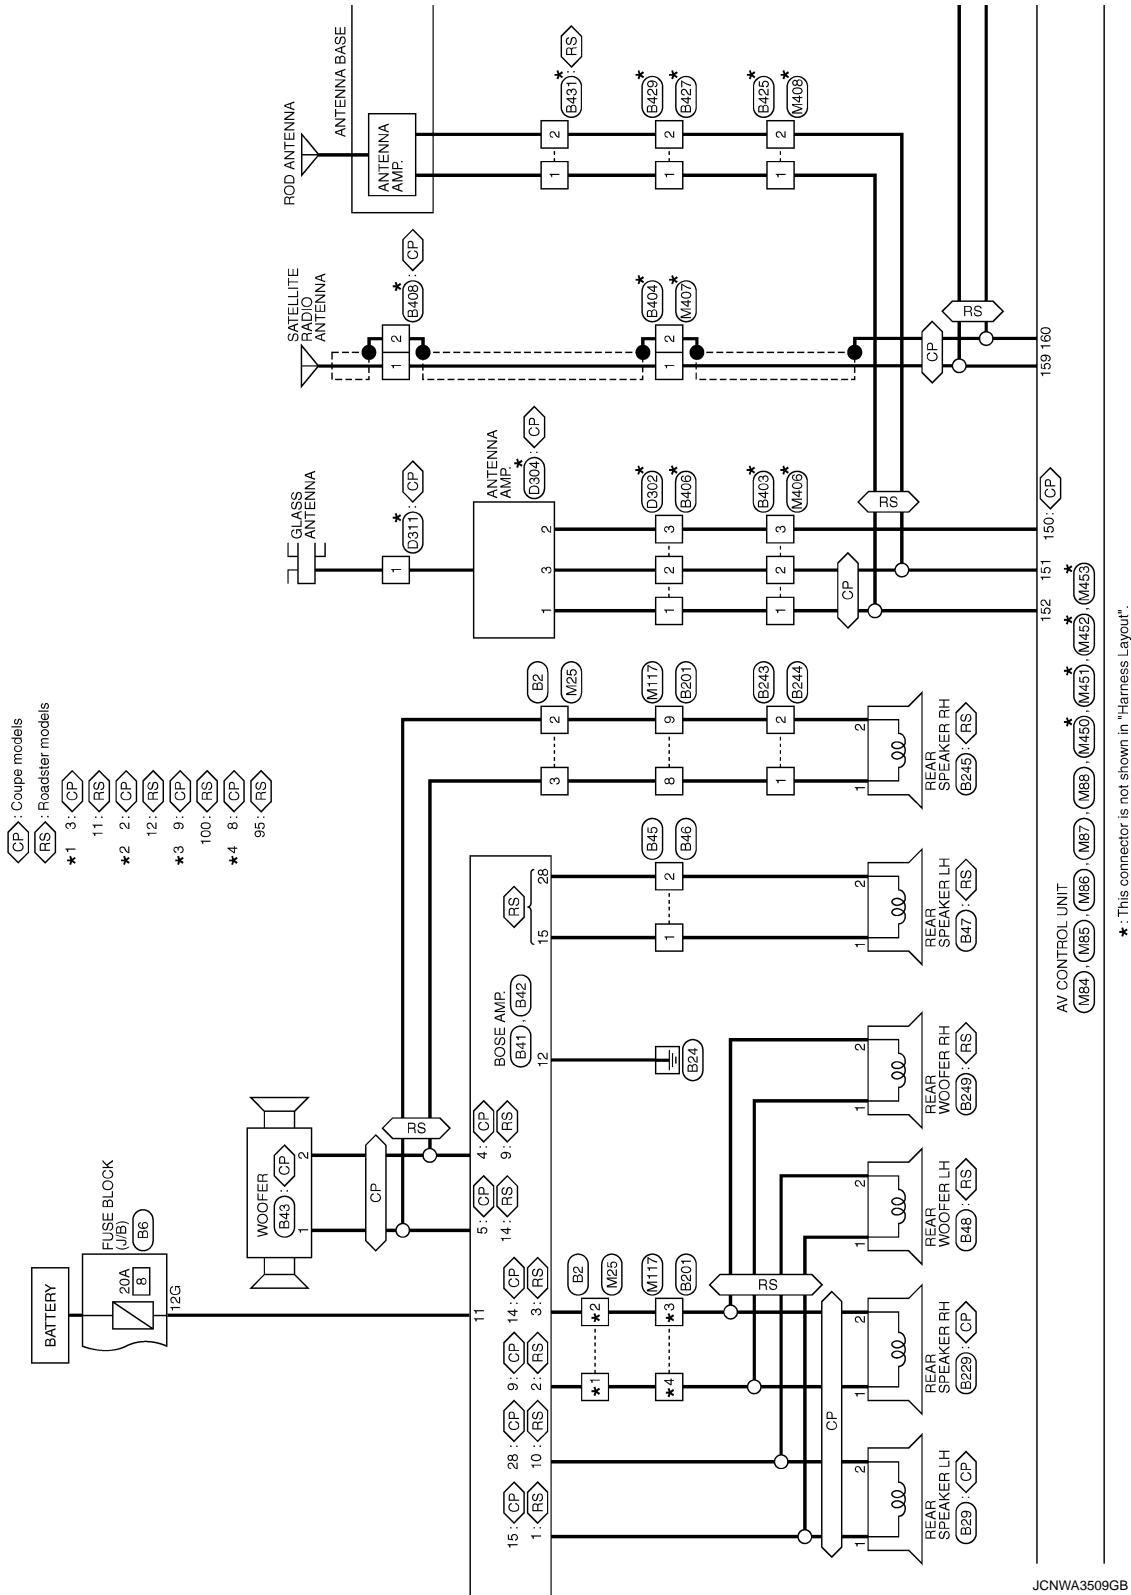

\*: This connector is not shown in "Harness Layout".

JCNWA3509GB




# BOSE AUDIO WITH NAVIGATION SYSTEM

< WIRING DIAGRAM >

[BOSE AUDIO WITH NAVIGATION]

RS: Roadster models

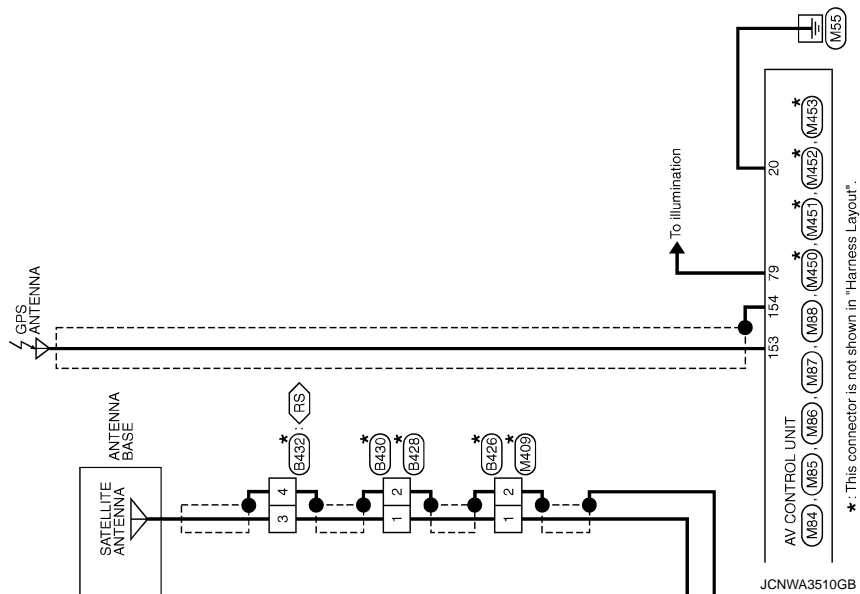

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

# BOSE AUDIO WITH NAVIGATION SYSTEM

[BOSE AUDIO WITH NAVIGATION]

< WIRING DIAGRAM >

## BOSE AUDIO WITH NAVIGATION SYSTEM

Connector No.	B1
Connector Name	WIRE TO WIRE
Connector Type	THB07V-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-
2	BG	-
3	Y	-
4	W	-
6	V	-
7	LG	-
8	GR	-
9	SB	-
11	Y	-
12	W	-
13	BR	-
14	LG	-
15	B	-
16	V	-
17	R	-
18	B	-
20	SB	-
21	G	-
22	GR	-
23	V	-
24	BG	-
25	L	-
26	P	-
27	W	-
28	SHIELD	-
31	W	-
32	B	-
33	P	- [Coupe models]
33	W	- [Roadster models]
34	R	-
35	W	- [Coupe models]
35	B	- [Roadster models]
36	B	-
40	Y	-
41	L	-
42	GR	-
43	BR	-
44	R	-

45	BG	-
46	SHIELD	- [Coupe models]
46	SB	- [Roadster models]
47	Y	-
48	SHIELD	-
51	W	-
52	R	-
57	SHIELD	-
58	B	-
60	V	-
61	SB	-
62	SHIELD	-
63	BR	-
64	Y	-
65	SHIELD	-
66	P	-
67	L	-
68	SHIELD	-
69	R	-
70	G	-
71	V	-
72	P	-
73	BR	-
74	GR	-
75	BG	-
80	Y	-
81	R	-
82	B	-
83	GR	-
84	G	-
84	L	- [Roadster models]
85	LG	-
86	V	-
87	BR	-
88	GR	-
93	Y	-
94	L	- [Coupe models]
94	G	- [Roadster models]
95	GR	- [Coupe models]
95	LG	- [Roadster models]
96	L	-
97	Y	-
98	W	- [Coupe models]
98	Y/B	- [Roadster models]
99	LG	-
100	B	-

Connector No.	B2
Connector Name	WIRE TO WIRE
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
2	BR	- [Coupe models]
2	Y	- [Roadster models]
3	R	- [Coupe models]
3	LG	- [Roadster models]
4	G	-
5	BG	-
8	V	-
7	L	-
11	LG	-
12	Y	-
13	W	-
14	B	-
15	GR	-
16	LG	-

Connector No.	B6
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FBR-CS




Terminal No.	Color of Wire	Signal Name [Specification]
5G	LG	-
10G	W	- [Coupe models]
10G	P	- [Roadster models]
11G	W	- [Coupe models]
11G	G	- [Roadster models]
12G	Y	-

Connector No.	B29
Connector Name	REAR SPEAKER LH
Connector Type	TK02FBR



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	P	-

Connector No.	B41
Connector Name	BOSE AMP.
Connector Type	SCA19FBR-SGA4



Terminal No.	Color of Wire	Signal Name [Specification]
15	L	SOUND SIGNAL REAR SPEAKER LH (+)
17	R	ROOF STATUS SIGNAL (AUDIO)
18	P	SOUND SIGNAL FRONT LH (+)
19	R	SOUND SIGNAL FRONT RH (-)
20	G	SOUND SIGNAL FRONT RH (-)
21	V	SOUND SIGNAL REAR LH (+)
22	SB	SOUND SIGNAL REAR LH (+)
23	BR	SOUND SIGNAL REAR RH (-)
27	W	SOUND SIGNAL FRONT TWEETER RH (-)
28	P	SOUND SIGNAL REAR SPEAKER LH (-)
31	W	BOSE AMP. ON SIGNAL
32	L	SOUND SIGNAL FRONT LH (-)
33	Y	SOUND SIGNAL REAR RH (-)
37	B	SOUND SIGNAL FRONT TWEETER RH (+)

JCNWA3511GB


# BOSE AUDIO WITH NAVIGATION SYSTEM

[BOSE AUDIO WITH NAVIGATION]

< WIRING DIAGRAM >

## BOSE AUDIO WITH NAVIGATION SYSTEM

Connector No.	B42
Connector Name	BOSE AMP.
Connector Type	SGA1ZPER-SJA2




Terminal No.	Color of Wire	Signal Name [Specification]
1	L	SOUND SIGNAL FRONT DOOR SPEAKER LH (+) [Coupe models]
1	L	SOUND SIGNAL REAR WOODFEE LH (+) [Roadster models]
2	EG	SOUND SIGNAL FRONT DOOR SPEAKER RH (+) [Coupe models]
2	EG	SOUND SIGNAL REAR WOODFEE RH (+) [Roadster models]
3	G	SOUND SIGNAL FRONT DOOR SPEAKER LH (-) [Coupe models]
3	Y	SOUND SIGNAL REAR WOODFEE RH (-) [Roadster models]
4	L	SOUND SIGNAL FRONT DOOR SPEAKER LH (+) [Roadster models]
4	SB	SOUND SIGNAL FRONT DOOR SPEAKER LH (-) [Coupe models]
5	V	SOUND SIGNAL FRONT DOOR SPEAKER RH (+) [Roadster models]
5	V	SOUND SIGNAL FRONT DOOR SPEAKER RH (-) [Coupe models]
6	LG	SOUND SIGNAL TWEETER LH (+)
7	GR	SOUND SIGNAL FRONT DOOR SPEAKER RH (+)
8	EG	SOUND SIGNAL REAR SPEAKER RH (+) [Coupe models]
9	R	SOUND SIGNAL REAR SPEAKER RH (-) [Roadster models]
9	LG	SOUND SIGNAL FRONT DOOR SPEAKER LH (+) [Coupe models]
10	V	SOUND SIGNAL FRONT DOOR SPEAKER LH (-) [Roadster models]
10	V	SOUND SIGNAL REAR WOODFEE (-) [Roadster models]
11	Y	BATTERY
12	B	GND
13	G	SOUND SIGNAL FRONT DOOR SPEAKER RH (-)
14	BR	SOUND SIGNAL REAR SPEAKER RH (-) [Coupe models]
14	Y	SOUND SIGNAL REAR SPEAKER RH (+) [Roadster models]

Connector No.	B43
Connector Name	WOOFER
Connector Type	RS02FGY

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	REAR WOODFEE LH (+)
2	P	REAR WOODFEE LH (-)
3	W	REAR WOODFEE RH (+)
4	R	REAR WOODFEE RH (-)
5	GR	REAR WOODFEE LH (+)
6	B	REAR WOODFEE LH (-)
7	B	REAR WOODFEE RH (+)
8	SHIELD	REAR WOODFEE RH (-)

Terminal No.	1	V	SOUND SIGNAL WOODFEE (-)
Terminal No.	2	SB	SOUND SIGNAL WOODFEE (+)

Connector No.	B45
Connector Name	WIRE TO WIRE
Connector Type	TK02MR-P



Terminal No.	1	L	REAR WOODFEE LH (+)
Terminal No.	2	P	REAR WOODFEE LH (-)

Connector No.	B46
Connector Name	WIRE TO WIRE
Connector Type	TK02FBR



Terminal No.	1	L	REAR WOODFEE LH (+)
Terminal No.	2	P	REAR WOODFEE LH (-)

Connector No.	B47
Connector Name	REAR SPEAKER LH
Connector Type	TK02FBR



Terminal No.	1	L	REAR WOODFEE LH (+)
Terminal No.	2	P	REAR WOODFEE LH (-)

Connector No.	B48
Connector Name	REAR WOODFEE LH
Connector Type	NS02FW-CS




Terminal No.	1	L	REAR WOODFEE LH (+)
Terminal No.	2	V	REAR WOODFEE LH (-)

Connector No.	B64
Connector Name	WIRE TO WIRE
Connector Type	RS08FB-PR



Terminal No.	1	P	REAR WOODFEE LH (+)
Terminal No.	2	W	REAR WOODFEE LH (-)
Terminal No.	3	R	REAR WOODFEE RH (+)
Terminal No.	4	W	REAR WOODFEE RH (-)
Terminal No.	5	GR	REAR WOODFEE LH (+)
Terminal No.	6	B	REAR WOODFEE LH (-)
Terminal No.	7	B	REAR WOODFEE RH (+)
Terminal No.	8	SHIELD	REAR WOODFEE RH (-)

Connector No.	B81
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
4	W	REAR WOODFEE LH (+)
5	BR	REAR WOODFEE LH (-)
6	B	REAR WOODFEE RH (+)
8	Y	REAR WOODFEE RH (-)
9	EG	REAR WOODFEE LH (+)
14	GR	REAR WOODFEE LH (-)
15	SB	REAR WOODFEE RH (+)
16	V	REAR WOODFEE RH (-)
17	G	REAR WOODFEE LH (+)
24	LG	REAR WOODFEE LH (-)
31	L	REAR WOODFEE RH (+)
32	P	REAR WOODFEE RH (-)
34	BG	REAR WOODFEE LH (+)
35	R	REAR WOODFEE LH (-)

A B C D E F G H I J K L M N O P

AV

JCNWA3512GB

# BOSE AUDIO WITH NAVIGATION SYSTEM

[BOSE AUDIO WITH NAVIGATION]

< WIRING DIAGRAM >

## BOSE AUDIO WITH NAVIGATION SYSTEM

Connector No.	B151
Connector Name	WIRE TO WIRE
Connector Type	RSDBMB



Connector No.	B201
Connector Name	WIRE TO WIRE
Connector Type	TH8CFW-CS16-TM4



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	R	-
3	R	-
4	W	-
5	GR	-
6	B	-
7	B	-
8	L	-

Connector No.	B157
Connector Name	REAR VIEW CAMERA
Connector Type	RHD4FB



Terminal No.	Color of Wire	Signal Name [Specification]
1	R	CAMERA POWER SUPPLY
2	W	GND
3	B	CAMERA IMAGE SIGNAL
4	L	CAMERA IMAGE SIGNAL_GND

69	L	-
70	G	-
72	B	-
73	B	- [Coupe models]
74	P	- [Roadster models]
74	B	- [Roadster models]
75	W	- [Coupe models]
75	B	- [Roadster models]
76	B	-
80	V	-
81	SB	-
82	G	-
83	R	-
84	W	-
85	B	-
86	SHIELD	-
87	O	-
88	BR	-
89	Y	-
90	SHIELD	-
92	SB	- [Coupe models]
92	LG	- [Roadster models]
93	V	-
93	W	- [Coupe models]
94	SHIELD	- [Coupe models]
94	G	- [Roadster models]
95	GR	- [Coupe models]
95	LG	- [Roadster models]
97	LG	- [Coupe models]
97	LG	- [Roadster models]
97	Y	- [Roadster models]
98	W	-
98	Y/B	- [Coupe models]
99	G	-
100	BR	- [Coupe models]
100	Y	- [Roadster models]

Connector No.	B229
Connector Name	REAR SPEAKER RH
Connector Type	TK02FBR



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	B243
Connector Name	WIRE TO WIRE
Connector Type	TK02MBR-P



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	B244
Connector Name	WIRE TO WIRE
Connector Type	TK02FBR



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

JCNWA3513GB

# BOSE AUDIO WITH NAVIGATION SYSTEM

[BOSE AUDIO WITH NAVIGATION]

< WIRING DIAGRAM >

## BOSE AUDIO WITH NAVIGATION SYSTEM

Connector No.	B245
Connector Name	REAR SPEAKER RH
Connector Type	TK02FB



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	B249
Connector Name	REAR WOOFER RH
Connector Type	NS02FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	Y	-

Connector No.	B301
Connector Name	WIRE TO WIRE
Connector Type	TH00MW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
4	LG	-
5	L	-

6	P	-
8	O	-
9	Y	-
14	BR	-
15	BR	-
16	W	-
17	DG	-
24	V	-
25	LG	-
31	BG	-
32	P	-
34	O	-
35	SB	-

Connector No.	B303
Connector Name	SOFT TOP CONTROL UNIT
Connector Type	TH00FB-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	SENSOR POWER SUPPLY (ROOF STRIKER SENSOR LH)
3	DG	ROOF STRIKER SENSOR RH
4	W	ROOF STRIKER SENSOR LH
8	Y	REVERSE SIGNAL
9	SR	POWER CONDITION (POWER WINDOW)
10	O	TRUNK LID OPEN SIGNAL
11	O	ROOF STATUS SIGNAL (INDICATOR)
12	SB	ROOF STATUS SIGNAL (AUDIO)
14	L	ROOF OPEN / CLOSE SWITCH (CLOSE)
15	LG	ROOF OPEN / CLOSE SWITCH (OPEN)
16	V	TRUNK ROOM LAMP SWITCH
17	BG	CAN-H
18	P	CAN-L
19	LG	LOCAL COMMUNICATION (POWER WINDOW)
20	V	LOCAL COMMUNICATION (BCM)
21	BR	SENSOR POWER SUPPLY (ROOF STRIKER SENSOR RH)
28	DG	GND
35	P	ROOF OPEN / CLOSE SWITCH (GND)

Connector No.	B403
Connector Name	WIRE TO WIRE
Connector Type	GT13SCN-2 / 1PP-HU



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-
3	-	-

Connector No.	B404
Connector Name	WIRE TO WIRE
Connector Type	GT16C-1PP-HU(A)



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	B406
Connector Name	WIRE TO WIRE
Connector Type	GT13SCN-2 / 1PP-HU(21)



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-

2	-	-
3	-	-



Connector No.	B408
Connector Name	SATELLITE RADIO ANTENNA
Connector Type	GT16C-1PP-HU(B)

Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	B425
Connector Name	WIRE TO WIRE
Connector Type	GT13SCN-1 / 1PP-HU



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

JCNWA3514GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

# BOSE AUDIO WITH NAVIGATION SYSTEM

[BOSE AUDIO WITH NAVIGATION]

< WIRING DIAGRAM >

## BOSE AUDIO WITH NAVIGATION SYSTEM

Connector No.	B426
Connector Name	WIRE TO WIRE
Connector Type	GT16C-1PP-HUB



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	B427
Connector Name	WIRE TO WIRE
Connector Type	GT1SSN-1/PP-HU(2)



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	B428
Connector Name	WIRE TO WIRE
Connector Type	GT16C-1PP-HUB



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	B429
Connector Name	WIRE TO WIRE
Connector Type	GT1SSS-1/S-HU(2)



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	B430
Connector Name	WIRE TO WIRE
Connector Type	GT16C-1S-HUB



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	-
2	-	-

Connector No.	B431
Connector Name	ANTENNA BASE
Connector Type	GT1SSSN-1/PP-HU



Terminal No.	Color of Wire	Signal Name [Specification]
1	-	ANTENNA AMP ON SIGNAL
2	-	AM-FM MAIN

Connector No.	B432
Connector Name	ANTENNA BASE
Connector Type	GT16C-1PP-HUB



Terminal No.	Color of Wire	Signal Name [Specification]
3	-	SATELLITE ANTENNA SIGNAL
4	-	SHIELD

Connector No.	D1
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
7	Y	-
8	Y	-
9	G	-
10	BG	-
11	P	- [With BOSE system]
12	V	- [Without BOSE system]
13	L	-
14	B	-
14	SB	- [Coupe models]
14	Y	- [Roadster models]
15	W	-
19	G	-
23	R	-
44	L	-
47	B	-
48	SB	-
49	W	-
50	LG	-
51	R	-
52	V	-

53	BG	-
54	GR	-
55	G	-

Connector No.	D6
Connector Name	FRONT DOOR SPEAKER LH
Connector Type	NS02FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	P	- [With BOSE system]
2	V	- [Without BOSE system]

JCNWA3515GB


# BOSE AUDIO WITH NAVIGATION SYSTEM

[BOSE AUDIO WITH NAVIGATION]


< WIRING DIAGRAM >

## BOSE AUDIO WITH NAVIGATION SYSTEM

Connector No.	D31
Connector Name	WIRE TO WIRE
Connector Type	TH40FW-CS15



Connector No.	D302
Connector Name	WIRE TO WIRE
Connector Type	GT15SC-2/IS-HU(21)



Terminal No.	1	2	3
Color of Wire	V	P	V
Signal Name [Specification]			

Terminal No.	59	60	81	82	83	84	85	86	87	89	91	92	93	94	96	97	98	99	100
Color of Wire	L	P	W	P	G	V	L	BG	R	P	W	L	G	Y	Y	BR	GR	LG	BG
Signal Name [Specification]																			

Terminal No.	Color of Wire	Signal Name [Specification]
10	V	
11	LG	
12	P	- [With BOSE system]
12	LG	- [Without BOSE system]
13	V	- [Coupe models without BOSE system]
13	L	- [Except for coupe models without BOSE system]
14	B	
15	W	
19	P	
23	L	
44	L	
50	Y	
51	Y	
52	G	
53	BG	
54	GR	
55	L	


Connector No.	D36
Connector Name	FRONT DOOR SPEAKER RH
Connector Type	NS22FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	
1	L	- [Coupe models without BOSE system]
2	P	- [Except for coupe models without BOSE system]
2	LG	- [With BOSE system]
		- [Without BOSE system]

Terminal No.	1	2	3
Color of Wire	-	-	-
Signal Name [Specification]			

Connector No.	D304
Connector Name	ANTENNA AMP.
Connector Type	GT15SC-2/IS-HU



Terminal No.	1	2	3
Color of Wire	-	-	-
Signal Name [Specification]			


Connector No.	D311
Connector Name	GLASS ANTENNA
Connector Type	P01FB-A



Terminal No.	1
Color of Wire	-
Signal Name [Specification]	

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	
3	L	
4	L	
7	B	
8	P	
9	B	
11	V	
12	R	
13	L	
14	GR	
15	P	
16	W	
17	SB	
20	LG	
21	BR	- [Coupe models]
21	G	- [Roadster models]
31	L	
32	Y	
33	P	
34	L	
35	BR	
36	V	
37	Y	
38	R	
39	B	
40	W	
41	LG	
42	SB	
43	G	
44	GR	- [Except for roadster models with M/T]
44	R	- [Roadster models with M/T]
45	BG	
46	W	
47	P	
56	SHIELD	

Connector No.	F51
Connector Name	A/T ASSEMBLY
Connector Type	PK10FG-DGY



Terminal No.	1	2	3	4	5	6
Color of Wire	Y	BR	L	V	B	W
Signal Name [Specification]						

JCNWA3516GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

# BOSE AUDIO WITH NAVIGATION SYSTEM

[BOSE AUDIO WITH NAVIGATION]

< WIRING DIAGRAM >

## BOSE AUDIO WITH NAVIGATION SYSTEM

Connector No.	F16
Connector Name	BACK-UP LAMP SWITCH
Connector Type	RK02FB




Terminal No.	Color of Wire	Signal Name [Specification]
1	R	-
2	O	-

Connector No.	F103
Connector Name	WIRE TO WIRE
Connector Type	TK38FW-NS10



Terminal No.	Color of Wire	Signal Name [Specification]
2	G	-
3	W	-
4	R	-
5	B	-
6	B	-
7	Y	-
8	Y	-
9	GR	-
10	GR	-
19	O	-
20	Y	-
28	B	-
29	LG	-
30	R	-
31	O	-
39	W	-
42	G	-
43	P	-
44	L	-
45	Y	-
46	V	-

Connector No.	F301
Connector Name	TGM (TRANSMISSION CONTROL MODULE)
Connector Type	SP10FG



Terminal No.	Color of Wire	Signal Name [Specification]
1	W	VIGN
2	B	BATT
3	R	CAN-H
4	O	K-LINE
5	G	GND
6	GR	VIGN
7	UR	REV LAMP RLY
8	BR	CAN-L
9	Y	STARTER RLY
10	W/B	GND

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS06FW-M2




Terminal No.	Color of Wire	Signal Name [Specification]
1A	V	-
2A	G	-
3A	L	-
4A	P	-
5A	L	-
6A	Y	-
7A	BR	-
8A	L	-

Connector No.	M3
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
8C	R	-
7C	B	-
9C	O	-
10C	L	-
11C	LG	-
12C	O	-

Connector No.	M5
Connector Name	WIRE TO WIRE
Connector Type	TH00MW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
7	Y	-
8	Y	-
9	G	-
10	V	-
11	V	-
12	L	-
13	B	-
14	Y	-
15	W	-
19	Y	-
23	Y/B	-
44	L	-
47	B	-
48	SB	-
49	Y	-
50	W	-

51	R	-
52	L	-
53	W	-
54	G	-
55	R	-

JCNWA3517GB




# BOSE AUDIO WITH NAVIGATION SYSTEM

< WIRING DIAGRAM >

[BOSE AUDIO WITH NAVIGATION]

## BOSE AUDIO WITH NAVIGATION SYSTEM


Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS (F-TM4)



Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	
3	L	
4	L	
7	B	
8	P	
9	B	
11	GR	
12	R	
13	L	
14	G	
15	P	
16	W	
17	BR	
20	GR	
21	R	
31	BR	
32	V	
33	P	
34	L	
35	BR	
36	SB	
37	V	
38	LG	
39	SB	
40	W	
41	LG	
42	R	
43	G	
44	G	
44	R	
45	O	
46	G	
47	BR	
48	SHIELD	
58	SB	
59	L	
70	R	
80	LG	
81	GR	

82	V	
83	V	
84	L	
85	BR	
86	Y	
87	G	
89	P	
91	W	
92	P	
93	P	
94	Y	
96	P	
97	GR	
98	O	
99	W	
100	R	


Connector No.	M7
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS (F-TM4)



Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	
2	O	
3	LG	
4	O	
6	V	
7	LG	
8	SB	
9	GR	
11	Y	
12	V	
13	BR	
14	V	
15	B	
16	V	
17	R	
18	L	
20	SB	
21	G	
22	GR	
23	V	

94	L	
95	GR	
95	W	
96	L	
97	LG	
97	Y	
98	BG	
98	Y/B	
99	W	
100	B	

Connector No.	M18
Connector Name	WIRE TO WIRE
Connector Type	TH12MW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	B	
2	W	
3	R	
4	B	
5	P	
6	R	
7	SHIELD	
8	R	
9	G	
10	B	
11	G	
12	Y	

24	R	
25	L	
26	P	
27	B	
28	SHIELD	
31	W	
32	B	
33	W	
34	R	
35	B	
36	L	
40	L	
41	R	
42	GR	
43	R	
44	R	
45	O	
46	SHIELD	
46	G	
47	R	
48	SHIELD	
51	V	
52	R	
57	SHIELD	
58	B	
60	L	
61	R	
62	SHIELD	
63	R	
64	G	
65	SHIELD	
66	LG	
67	V	
68	SHIELD	
69	L	
70	P	
71	V	
72	P	
73	BR	
74	GR	
75	O	
80	Y	
81	W	
82	BR	
83	GR	
84	L	
85	LG	
86	V	
87	BR	
88	SB	
93	Y	
94	SB	

JCNWA3518GB

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P


# BOSE AUDIO WITH NAVIGATION SYSTEM

## [BOSE AUDIO WITH NAVIGATION]


< WIRING DIAGRAM >

### BOSE AUDIO WITH NAVIGATION SYSTEM

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16TV




Terminal No.	16	L	-
Color of Wire	-	-	-
Signal Name [Specification]	-	-	-



Connector No.	M36
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FY-TV

Terminal No.	Color of Wire	Signal Name [Specification]
3	LG	- [Coupe models]
4	Y	- [Roadster models]
5	B	-
6	B	-
7	Y	-
8	G	-
11	Y	- [Coupe models]
11	LG	- [Roadster models]
14	P	-
16	Y	-

Connector No.	M25
Connector Name	WIRE TO WIRE
Connector Type	NS16MW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
2	Y	-
3	LG	-
4	LG	-
5	V	-
6	V	-
7	L	-
11	LG	-
12	Y	-
13	W	-
14	L	-
15	W	-

Connector No.	M42
Connector Name	TWEETER RH
Connector Type	TK0ZFB



Connector No.	M68
Connector Name	PARKING BRAKE SWITCH
Connector Type	P01FB-A




Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
2	W	-

Terminal No.	1	O	-
Color of Wire	-	-	-
Signal Name [Specification]	-	-	-

Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TK24FW-NH




Connector No.	M69
Connector Name	BACK-UP LAMP RELAY
Connector Type	MS02FL-M2-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	BATTERY POWER SUPPLY
2	O	IGNITION POWER SUPPLY
3	L	VEHICLE SPEED SIGNAL (2-PULSE)
4	V	VEHICLE SPEED SIGNAL (8-PULSE) [except for Mexico]
4	V	VEHICLE SPEED SIGNAL (8-PULSE) [for Mexico]
5	B	ILLUMINATION CONTROL SIGNAL
6	R	ROOF STATUS SIGNAL
9	BR	COMMUNICATION SIGNAL (TRIPLE METER-METER)
10	L	COMMUNICATION SIGNAL (TRIPLE METER-METER)
12	G	S-MODE SWITCH SIGNAL
15	L	ACC POWER SUPPLY
16	R	AIR BAG SIGNAL
17	B	GROUND
18	V	AMBIENT SENSOR SIGNAL
19	G	A/C AUTO AMP. CONNECTION RECOGNITION SIGNAL
20	GR	AMBIENT SENSOR GROUND
21	L	CAN-H
22	P	CAN-L
23	B	GROUND
24	Y	FUEL LEVEL SENSOR GROUND

Connector No.	M41
Connector Name	TWEETER LH
Connector Type	TK0ZFB



Terminal No.	1	L	-
Color of Wire	-	-	-
Signal Name [Specification]	-	-	-

JCNWA3519GB


# BOSE AUDIO WITH NAVIGATION SYSTEM

[BOSE AUDIO WITH NAVIGATION]

< WIRING DIAGRAM >


## BOSE AUDIO WITH NAVIGATION SYSTEM

Connector No.	M72
Connector Name	MULTIFUNCTION SWITCH
Connector Type	TH16FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
1	B	GND
3	L	ACC
4	R	ILL
5	W	ILL CONT
6	LG	AV COMM (H) [Reader models]
8	L	AV COMM (H) [Reader models]
8	Y	AV COMM (L) [Coupe models]
8	P	AV COMM (L) [Reader models]
9	BR	SW GND
14	SB	DISK EJECT SIGNAL

Connector No.	M75
Connector Name	FRONT DISPLAY UNIT
Connector Type	TH24FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
6	B	SHIELD
7	SHIELD	SHIELD
8	L	CAMERA IMAGE SIGNAL
9	R	COMM (DISP->CONT)
10	G	COMM (CONT->DISP)
11	Y	BATTERY
12	B	GND
18	G	COMPOSITE IMAGE SIGNAL
19	L	COMPOSITE IMAGE SIGNAL GND
20	Y	-
23	L	ACC

Connector No.	M84
Connector Name	AV CONTROL UNIT
Connector Type	TH15PF-C32



Terminal No.	Color of Wire	Signal Name [Specification]
1	V	BOSE AMP ON SIGNAL
2	LG	SOUND SIGNAL FRONT LH (+)
3	V	SOUND SIGNAL FRONT LH (-)
4	L	SOUND SIGNAL REAR LH (+)
5	P	SOUND SIGNAL REAR LH (-)
6	P	STRG SW A
7	L	ACC
10	SHIELD	SHIELD
11	L	SOUND SIGNAL FRONT RH (+)
12	P	SOUND SIGNAL FRONT RH (-)
13	R	SOUND SIGNAL REAR RH (+)
14	G	SOUND SIGNAL REAR RH (-)
15	B	STRG SW GND
16	L	STRG SW B
19	Y	BATTERY
20	B	GND

Connector No.	M85
Connector Name	AV CONTROL UNIT
Connector Type	TH40FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
22	R	CAMERA POWER SUPPLY
26	LG	AUX IMAGE SIGNAL
29	SB	DISK EJECT SIGNAL
42	B	CAMERA GND
46	V	AUX IMAGE GND
47	SHIELD	SHIELD

Connector No.	M86
Connector Name	AV CONTROL UNIT
Connector Type	TH25FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
65	O	PARKING BRAKE SIGNAL
67	L	COMPOSITE IMAGE GND
68	G	COMPOSITE IMAGE SIGNAL
71	SHIELD	MICROPHONE GND
72	R	MICROPHONE VCC
73	G	COMM (CONT->DISP)
74	P	CAN-L [Coupe models]
74	L	CAN-L [Reader models]
75	LG	AV COMM (L) [Coupe models]
75	Y	AV COMM (L) [Reader models]
76	LG	AV COMM (L) [Coupe models]
76	Y	AV COMM (L) [Reader models]
79	R	ILL+
80	G	IGNITION SIGNAL
81	O	REVERSE SIGNAL
82	Y	VEHICLE SPEED SIGNAL (8-PULSE)
83	B	SHIELD
84	Y	SHIELD
87	G	MICROPHONE SIGNAL
88	R	COMM (DISP->CONT)
90	L	CAN-H [Coupe models]
90	P	CAN-H [Reader models]
91	Y	AV COMM (H) [Coupe models]
91	LG	AV COMM (H) [Reader models]
92	Y	AV COMM (H) [Coupe models]
92	LG	AV COMM (H) [Reader models]

Connector No.	M87
Connector Name	AV CONTROL UNIT
Connector Type	TH22FW



Terminal No.	Color of Wire	Signal Name [Specification]
104	Y	AUX SOUND SIGNAL LH (+)
117	SHIELD	SHIELD
118	G	AUX SOUND SIGNAL RH (+)
119	L	AUX SOUND SIGNAL GND

Connector No.	M88
Connector Name	AV CONTROL UNIT
Connector Type	HAAMFL



Terminal No.	Color of Wire	Signal Name [Specification]
129	O	USB GND
130	L	USB D+ SIGNAL
131	BR	V BUS SIGNAL
132	R	USB D- SIGNAL
133	SHIELD	SHIELD

A B C D E F G H I J K L M N O P

AV

# BOSE AUDIO WITH NAVIGATION SYSTEM

< WIRING DIAGRAM >

[BOSE AUDIO WITH NAVIGATION]


## BOSE AUDIO WITH NAVIGATION SYSTEM

Connector No.	M90
Connector Name	USB CONNECTOR
Connector Type	HAA04FG




Terminal No.	Color of Wire	Signal Name [Specification]
1	BR	-
2	R	-
3	O	-
4	L	-

Connector No.	M99
Connector Name	WIRE TO WIRE
Connector Type	TH12MW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	SHIELD	-
2	L	-
3	G	-
4	Y	-
5	P	-
6	L	-
7	B	-
8	SHIELD	-
9	LG	-
10	V	-

Connector No.	M106
Connector Name	WIRE TO WIRE
Connector Type	TH16MP-NH



Terminal No.	Color of Wire	Signal Name [Specification]
4	W	-
5	R	-
6	B	-
7	P	-
8	R	-
11	B	-
12	G	-
13	Y	-
14	SHIELD	-
15	R	-
16	G	-

Connector No.	M107
Connector Name	ECM
Connector Type	RH24FGY-RZ6-R-LH-Z



Terminal No.	Color of Wire	Signal Name [Specification]
97	R	APS 1
98	P	APS 2
99	L	AVCC 1-APS 1
100	W	GND-APS 1
101	SB	ASCDSW
102	GR	FTPRS
103	G	AVCC2-APS 2
104	GR	GND-APS 2
105	L	PDPRESS
106	W	TF
107	BR	AVCC 2-FTPRS

108	Y	GND ASCDSW
109	G	NEUT-H
110	R	TACHO
112	SB	GND-FTPRS
113	P	VEHCAN-L1
114	L	VEHCAN-H1
117	Y	KLINE
121	LG	ODSV
122	P	BRAKE
123	B	GND
124	B	GND
125	R	VBR
126	BR	BNCSW
127	B	GND
128	B	GND

Connector No.	M116
Connector Name	WIRE TO WIRE
Connector Type	TK38MW-NS10



Terminal No.	Color of Wire	Signal Name [Specification]
2	W	-
3	BG	- [Cruise models]
3	O	- [Rouster models]
4	W	-
5	B	-
8	L	-
9	Y	-
10	R	-
19	O	-
20	G	-
28	B	-
29	LG	-
30	LG	-
31	O	-
39	G	-
42	G	-
43	P	-
44	L	-
45	BR	-
46	V	-


# BOSE AUDIO WITH NAVIGATION SYSTEM

[BOSE AUDIO WITH NAVIGATION]

< WIRING DIAGRAM >

## BOSE AUDIO WITH NAVIGATION SYSTEM

Connector No.	M117
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS (F-TM4)



Terminal No.	Color of Wire	Signal Name [Specification]
2	GR	- [Coupe models]
2	LG	- [Roadster models]
3	O	- [Coupe models]
3	B	- [Roadster models]
4	W	- [Roadster models]
7	LG	- [Coupe models]
7	Y	- [Roadster models]
8	LG	- [Coupe models]
9	Y	- [Roadster models]
11	R	- [Coupe models]
20	R	- [Roadster models]
21	G	- [Coupe models]
30	B	- [Roadster models]
40	O	- [Coupe models]
41	Y	- [Roadster models]
42	G	- [Coupe models]
43	L	- [Roadster models]
44	SB	- [Coupe models]
51	R	- [Roadster models]
52	G	- [Coupe models]
53	SHIELD	- [Roadster models]
54	LG	- [Coupe models]
55	V	- [Roadster models]
56	SHIELD	- [Coupe models]
57	G	- [Roadster models]
57	P	- [Roadster models]
58	R	- [Coupe models]
58	L	- [Roadster models]
59	B	- [Coupe models]
60	W	- [Roadster models]
61	GR	- [Coupe models]
62	B	- [Roadster models]
63	Y	- [Coupe models]
64	L	- [Roadster models]
65	G	- [Coupe models]
66	O	- [Roadster models]
67	V	- [Coupe models]
68	P	- [Roadster models]

69	L	-
70	L	-
72	B	-
73	B	-
74	B	-
75	B	-
76	B	-
80	L	-
81	Y	-
82	W	-
83	B	-
84	R	-
85	G	-
86	SHIELD	-
87	G	-
88	L	- [Coupe models]
88	P	- [Roadster models]
89	Y	- [Coupe models]
90	SHIELD	- [Roadster models]
92	G	- [Coupe models]
92	LG	- [Roadster models]
93	R	- [Coupe models]
93	V	- [Roadster models]
94	SHIELD	- [Coupe models]
94	G	- [Roadster models]
95	SB	- [Coupe models]
95	LG	- [Roadster models]
97	LG	- [Coupe models]
97	Y	- [Roadster models]
98	V	- [Coupe models]
98	Y/B	- [Roadster models]
99	G	- [Coupe models]
100	BR	- [Roadster models]
100	Y	- [Roadster models]


Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color of Wire	Signal Name [Specification]
72	L	ROOM ANT 2-
73	P	ROOM ANT 2+

74	SB	PASSENGER DOOR ANT-
75	BR	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	LG	DRIVER DOOR ANT+
78	L	ROOM ANT 1-
79	R	ROOM ANT 1+
80	GR	NATS ANT AMP
81	W	NATS ANT AMP
82	R	IGN RELAY (F/B) CONT
83	GR	KYLS ENT RECEIVER (FRONT) COMM
87	BR	COMBI SW INPUT 5
88	V	COMBI SW INPUT 3
89	BR	PUSH SW
90	P	CAN-L
91	L	CAN-H
92	LG	KEY SLOT ILL
93	W	ON IND
95	O	ACC RELAY CONT
95	Y	A, T SHIFT SELECTOR POWER SUPPLY
97	L	S/L CONDITION 1
98	P	S/L CONDITION 2
99	R	CLUTCH PEDAL POS SW (With M, T)
99	R	SHIFT P (With A, T)
100	GR	PASSENGER DOOR REQUEST SW
101	Y	DRIVER DOOR REQUEST SW
102	O	BLOWER FAN MOTOR RELAY CONT
103	LG	KYLS ENT RECEIVER (FRONT) PWR SUPPLY
106	W	S/L UNIT POWER SUPPLY
107	LG	COMBI SW INPUT 1
108	R	COMBI SW INPUT 4
109	Y	COMBI SW INPUT 2
110	P	HAZARD SW
111	Y	S/L UNIT COMM


Connector No.	M124
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS15



Terminal No.	Color of Wire	Signal Name [Specification]
10	G	-
11	V	-
12	LG	-

13	V	-
14	B	-
15	W	-
19	Y	-
23	Y/B	-
44	O	-
50	Y	-
51	Y	-
52	GR	-
53	W	-
54	G	-
55	R	-

Connector No.	M253
Connector Name	WIRE TO WIRE
Connector Type	TH12FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	SHIELD	-
2	B	-
3	R	-
4	W	-
5	P	- [Coupe models]
5	G	- [Roadster models]
6	L	- [Coupe models]
6	R	- [Roadster models]
7	SHIELD	-
8	SHIELD	-
9	G	-
10	R	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

JCNWA3522GB


# BOSE AUDIO WITH NAVIGATION SYSTEM

[BOSE AUDIO WITH NAVIGATION]

< WIRING DIAGRAM >

## BOSE AUDIO WITH NAVIGATION SYSTEM

Connector No.	M238
Connector Name	AUXILIARY INPUT JACKS
Connector Type	A08FW




Terminal No.	Color of Wire	Signal Name [Specification]
1	R	AUX SOUND SIGNAL RH (+)
2	B	AUX SOUND SIGNAL LND
3	W	AUX SOUND SIGNAL LH (+)
7	G	AUX IMAGE SIGNAL
8	R	AUX IMAGE GND

Connector No.	M303
Connector Name	COMBINATION SWITCH (SPIRAL CABLE)
Connector Type	TK08FGY



Terminal No.	Color of Wire	Signal Name [Specification]
13	—	—
14	—	—
15	—	—
16	—	—
17	—	—
18	—	—
19	—	—
20	—	—

Connector No.	M406
Connector Name	WIRE TO WIRE
Connector Type	GTT1SSCZ-2/1S-HU



Terminal No.	Color of Wire	Signal Name [Specification]
1	—	—
2	—	—
3	—	—

Connector No.	M407
Connector Name	WIRE TO WIRE
Connector Type	GTT16C-1S-HU/A



Terminal No.	Color of Wire	Signal Name [Specification]
1	—	—
2	—	—

Connector No.	M408
Connector Name	WIRE TO WIRE
Connector Type	GTT1SSC-1/1S-HU



Terminal No.	Color of Wire	Signal Name [Specification]
1	—	—

2	—	—
---	---	---

Connector No.	M409
Connector Name	WIRE TO WIRE
Connector Type	GTT16C-1S-HU(B)



Terminal No.	Color of Wire	Signal Name [Specification]
1	—	—
2	—	—

Connector No.	M450
Connector Name	AV CONTROL UNIT
Connector Type	GTT03SH-2/1S-HU



Terminal No.	Color of Wire	Signal Name [Specification]
150	—	FM SUB
151	—	AM-EM MAIN
152	—	ANTENNA AMP ON SIGNAL

Connector No.	M451
Connector Name	AV CONTROL UNIT
Connector Type	GTS-1S-HU



Terminal No.	Color of Wire	Signal Name [Specification]
153	—	GPS ANTENNA SIGNAL
154	—	SHIELD

Connector No.	M452
Connector Name	AV CONTROL UNIT
Connector Type	GTT17HN2-4DS-HU



Terminal No.	Color of Wire	Signal Name [Specification]
157	—	RGB DIGITAL IMAGE SIGNAL (-)
158	—	RGB DIGITAL IMAGE SIGNAL (+)

Connector No.	M453
Connector Name	AV CONTROL UNIT
Connector Type	FAKFA JACK



Terminal No.	Color of Wire	Signal Name [Specification]
159	—	SATELLITE ANTENNA SIGNAL
160	—	SHIELD

JCNWA3523GB

# BOSE AUDIO WITH NAVIGATION SYSTEM

< WIRING DIAGRAM >

[BOSE AUDIO WITH NAVIGATION]

## BOSE AUDIO WITH NAVIGATION SYSTEM

Connector No.	IM454
Connector Name	FRONT DISPLAY UNIT
Connector Type	GT17RNZ-4DS-HU



26	25
28	27

Terminal No.	Color of Wire	Signal Name [Specification]
27	-	RGB DIGITAL IMAGE SIGNAL (-)
28	-	RGB DIGITAL IMAGE SIGNAL (+)

Connector No.	R1
Connector Name	WIRE TO WIRE
Connector Type	TH16FW-NH



8	7	6	5	4	3	2	1
16	15	14	13	12	11	10	9

Terminal No.	Color of Wire	Signal Name [Specification]
4	W	-
5	R	-
6	B	-
7	D	-
8	R	-
11	B	-
12	Y	-
13	G	-
14	SHIELD	-
15	R	-
16	G	-

Connector No.	R5
Connector Name	MICROPHONE
Connector Type	TK36FW



1	2	3	4
---	---	---	---

Terminal No.	Color of Wire	Signal Name [Specification]
1	P	MICROPHONE SIGNAL
2	SHIELD	SHIELD
4	L	MICROPHONE YCG

Connector No.	R11
Connector Name	WIRE TO WIRE
Connector Type	TH17FW-NH



6	5	4	3	2	1
12	11	10	9	8	7

Terminal No.	Color of Wire	Signal Name [Specification]
1	SR	-
2	B	-
3	R	-
4	B	-
5	V	-
6	R	-
7	SHIELD	-
8	R	-
9	G	-
10	B	-
11	G	-
12	Y	-

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV


## BASIC INSPECTION

### DIAGNOSIS AND REPAIR WORK FLOW

#### Work Flow

INFOID:000000006709191

#### OVERALL SEQUENCE

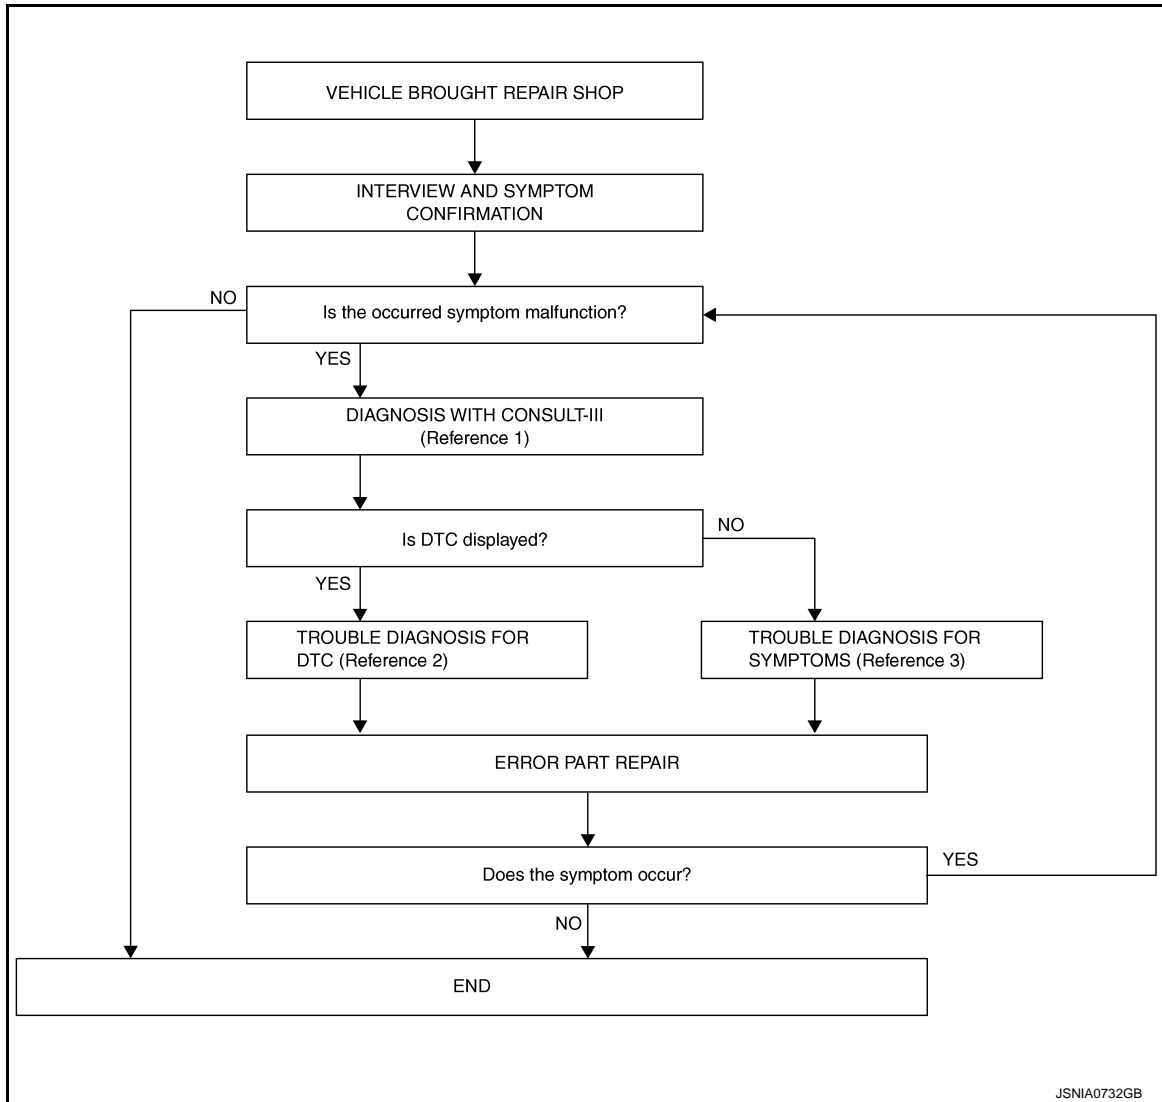

JSNIA0732GB

- Reference 1... Refer to [AV-163. "CONSULT-III Function \(MULTI AV\)".](#)
- Reference 2... Refer to [AV-173. "DTC Index".](#)
- Reference 3... Refer to [AV-255. "Symptom Table".](#)

#### DETAILED FLOW

##### 1. INTERVIEW AND SYMPTOM CONFIRMATION

Check the malfunction symptoms by performing the following items.

- Interview the customer to obtain the malfunction information (conditions and environment when the malfunction occurred).
- Check the symptom.

##### Is the occurred symptom malfunction?

YES >> GO TO 2.

NO >> INSPECTION END

##### 2. DIAGNOSIS WITH CONSULT-III



# DIAGNOSIS AND REPAIR WORK FLOW

[BOSE AUDIO WITH NAVIGATION]

< BASIC INSPECTION >

1. Connect CONSULT-III and perform a self-diagnosis for "MULTI AV". Refer to [AV-163, "CONSULT-III Function \(MULTI AV\)"](#).

**NOTE:**

Skip to step 4 of the diagnosis procedure if "MULTI AV" is not displayed.

2. Check if any DTC is displayed in the self-diagnosis results.

Is DTC displayed?

YES >> GO TO 3.

NO >> GO TO 4.

## 3. TROUBLE DIAGNOSIS FOR DTC

1. Check the DTC indicated in the self-diagnosis results.
2. Perform the relevant diagnosis referring to the DTC Index. Refer to [AV-173, "DTC Index"](#).

>> GO TO 5.

## 4. TROUBLE DIAGNOSIS FOR SYMPTOMS

Perform the relevant diagnosis referring to the diagnosis chart by symptom. Refer to [AV-255, "Symptom Table"](#).

>> GO TO 5.

## 5. ERROR PART REPAIR

1. Repair or replace the identified malfunctioning parts.
2. Perform a self-diagnosis for "MULTI AV" with CONSULT-III.

**NOTE:**

Erase the stored self-diagnosis results after repairing or replacing the relevant components if any DTC has been indicated in the self-diagnosis results.

3. Check that the symptom does not occur.

Does the symptom occur?

YES >> GO TO 1.

NO >> INSPECTION END

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

## INSPECTION AND ADJUSTMENT

## ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

## ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000006709192

## BEFORE REPLACEMENT

When replacing AV control unit, save or print current vehicle specification with CONSULT-III configuration before replacement.

## AFTER REPLACEMENT

**CAUTION:**

When replacing AV control unit, you must perform "WRITE CONFIGURATION" with CONSULT-III.

- Complete the procedure of "WRITE CONFIGURATION" in order.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.

## ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000006709193

## 1. SAVING VEHICLE SPECIFICATION

## ④-CONSULT-III Configuration

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [AV-202, "CONFIGURATION \(AV CONTROL UNIT\) : Description"](#).

**NOTE:**

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection".

>> GO TO 2.

## 2. REPLACE AV CONTROL UNIT

Replace AV control unit. Refer to [AV-267, "Removal and Installation"](#).

>> GO TO 3.

## 3. WRITING VEHICLE SPECIFICATION

## ④-CONSULT-III Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual selection" to write vehicle specification. Refer to [AV-203, "CONFIGURATION \(AV CONTROL UNIT\) : Special Repair Requirement"](#).

>> GO TO 4.

## 4. OPERATION CHECK

Check that the operation of the AV control unit and camera images (fixed guide lines and predictive course lines) are normal.

>> WORK END

## CONFIGURATION (AV CONTROL UNIT)

## CONFIGURATION (AV CONTROL UNIT) : Description

INFOID:000000006709194

- Since vehicle specifications are not included in the AV control unit after replacement, it is required to write vehicle specifications with CONSULT-III.
- Configuration has three functions as follows.

# INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[BOSE AUDIO WITH NAVIGATION]

Function	Description
READ CONFIGURATION	<ul style="list-style-type: none"><li>• Reads the vehicle configuration of current AV control unit.</li><li>• Saves the read vehicle configuration.</li></ul>
WRITE CONFIGURATION-Manual selection	Writes the vehicle configuration with manual selection.
WRITE CONFIGURATION-Config file	Writes the vehicle configuration with saved data.

## CONFIGURATION (AV CONTROL UNIT) : Special Repair Requirement

INFOID:000000006709195

### 1. WRITING MODE SELECTION

④CONSULT-III Configuration  
Select "CONFIGURATION" of AV control unit.

When writing saved data>>GO TO 2.  
When writing manually>>GO TO 3.

### 2. PERFORM "WRITE CONFIGURATION-CONFIG FILE"

④CONSULT-III Configuration  
Perform "WRITE CONFIGURATION-Config file".

>> WORK END

### 3. PERFORM "WRITE CONFIGURATION-MANUAL SELECTION"

④CONSULT-III Configuration  
Select "WRITE CONFIGURATION-Manual selection" to write vehicle specifications into the AV control unit.  
For data to write, refer to [AV-203. "CONFIGURATION \(AV CONTROL UNIT\) : Configuration List"](#).

>> GO TO 4.

### 4. OPERATION CHECK

Check that the operation of the AV control unit and camera images (fixed guide lines and predictive course lines) are normal.

>> WORK END

## CONFIGURATION (AV CONTROL UNIT) : Configuration List

INFOID:000000006709196

**CAUTION:**  
Check vehicle specifications before servicing.

MANUAL SETTING ITEM	
Items	Setting value
CAMERA SYSTEM	NONE/AVM
	REAR
	REAR+SIDE

#### NOTE:

- AVM: Around view monitor
- Some manual setting items may not be displayed, depending on the vehicle specifications.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

## DTC/CIRCUIT DIAGNOSIS

### U1000 CAN COMM CIRCUIT

#### Description

INFOID:000000006709197

CAN (Controller Area Network) is a serial communication line for real-time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independently). In CAN communication, control units are connected with 2 communication lines (CAN-H, CAN-L) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

CAN Communication Signal Chart. Refer to [LAN-25, "CAN Communication Signal Chart"](#).

#### DTC Logic

INFOID:000000006709198

#### DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	DTC detection condition	Probable malfunction location
U1000	CAN COMM CIRCUIT [U1000]	AV control unit is not transmitting or receiving CAN communication signal for 2 seconds or more.	CAN communication system.

#### Diagnosis Procedure

INFOID:000000006709199

#### 1. PERFORM SELF-DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result" of "MULTI AV".

Is "CAN COMM CIRCUIT" displayed?

- YES >> Refer to "LAN system". Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).
- NO >> Refer to GI section. Refer to [GI-43, "Intermittent Incident"](#).

# U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1010 CONTROL UNIT (CAN)

### DTC Logic

INFOID:000000006709200

### DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	DTC detection condition	Probable malfunction factor
U1010	CONTROL UNIT (CAN) [U1010]	CAN initial diagnosis malfunction is detected.	Replace the AV control unit if the malfunction occurs constantly.

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

# U1200 AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1200 AV CONTROL UNIT

### DTC Logic

INFOID:000000006709201

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1200	Cont Unit [U1200]	AV control unit malfunction is detected.	Replace the AV control unit if the malfunction occurs constantly.

# U1201 AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1201 AV CONTROL UNIT

### DTC Logic

INFOID:000000006709202

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1201	GYRO NO CONN [U1201]	AV control unit malfunction is detected.	Replace the AV control unit if the malfunction occurs constantly.

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

# U1202 AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1202 AV CONTROL UNIT

### DTC Logic

INFOID:000000006709203

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1202	G-SENSOR NO CONN [U1202]	AV control unit malfunction is detected.	Replace the AV control unit if the malfunction occurs constantly.



# U1204 AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1204 AV CONTROL UNIT

### DTC Logic

INFOID:000000006709204

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1204	GPS CONN [U1204]	GPS malfunction is detected.	An intermittent error caused by strong radio interference may be detected unless any symptom (GPS reception error, etc.) occurs. Replace the AV control unit if the malfunction occurs constantly.

### Diagnosis Procedure

INFOID:000000006709205

#### 1. PERFORM THE SELF-DIAGNOSIS

1. Delete the "self-diagnosis" results of "MULTI AV". Turn ignition switch OFF.
2. Turn ignition switch ON. Perform the self-diagnosis again.
3. Check that the DTC is detected again.

#### Is any DTC detected?

YES >> Replace AV control unit.

NO >> An intermittent error caused by strong radio interference may be detected unless any symptom (GPS reception error, etc.) occurs.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# U1205 AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1205 AV CONTROL UNIT

### DTC Logic

INFOID:000000006709206

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1205	GPS ROM [U1205]	GPS malfunction is detected.	An intermittent error caused by strong radio interference may be detected unless any symptom (GPS reception error, etc.) occurs. Replace the AV control unit if the malfunction occurs constantly.

### Diagnosis Procedure

INFOID:000000006709207

#### 1. PERFORM THE SELF-DIAGNOSIS

1. Delete the "self-diagnosis" results of "MULTI AV". Turn ignition switch OFF.
2. Turn ignition switch ON. Perform the self-diagnosis again.
3. Check that the DTC is detected again.

#### Is any DTC detected?

YES >> Replace AV control unit.

NO >> An intermittent error caused by strong radio interference may be detected unless any symptom (GPS reception error, etc.) occurs.

# U1206 AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1206 AV CONTROL UNIT

### DTC Logic

INFOID:000000006709208

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1206	GPS RAM [U1206]	GPS malfunction is detected.	An intermittent error caused by strong radio interference may be detected unless any symptom (GPS reception error, etc.) occurs. Replace the AV control unit if the malfunction occurs constantly.

### Diagnosis Procedure

INFOID:000000006709209

#### 1. PERFORM THE SELF-DIAGNOSIS

1. Delete the "self-diagnosis" results of "MULTI AV". Turn ignition switch OFF.
2. Turn ignition switch ON. Perform the self-diagnosis again.
3. Check that the DTC is detected again.

#### Is any DTC detected?

YES >> Replace AV control unit.

NO >> An intermittent error caused by strong radio interference may be detected unless any symptom (GPS reception error, etc.) occurs.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# U1207 AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1207 AV CONTROL UNIT

### DTC Logic

INFOID:000000006709210

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1207	GPS RTC [U1207]	GPS malfunction is detected.	An intermittent error caused by strong radio interference may be detected unless any symptom (GPS reception error, etc.) occurs. Replace the AV control unit if the malfunction occurs constantly.

### Diagnosis Procedure

INFOID:000000006709211

#### 1. PERFORM THE SELF-DIAGNOSIS

1. Delete the "self-diagnosis" results of "MULTI AV". Turn ignition switch OFF.
2. Turn ignition switch ON. Perform the self-diagnosis again.
3. Check that the DTC is detected again.

#### Is any DTC detected?

YES >> Replace AV control unit.

NO >> An intermittent error caused by strong radio interference may be detected unless any symptom (GPS reception error, etc.) occurs.

# U1216 AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1216 AV CONTROL UNIT

### DTC Logic

INFOID:000000006709212

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1216	CAN CONT [U1216]	AV control unit malfunction is detected.	Replace the AV control unit if the malfunction occurs constantly.

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

# U1217 AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1217 AV CONTROL UNIT

### DTC Logic

INFOID:0000000067092.13

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1217	BLUETOOTH MODULE [U1217]	AV control unit malfunction is detected.	Replace the AV control unit if the malfunction occurs constantly.

# U1218 AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1218 AV CONTROL UNIT

### DTC Logic

INFOID:000000006709214

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1218	HDD CONN [U1218]	AV control unit malfunction is detected.	<ul style="list-style-type: none"><li>• If the music box function has no malfunctions, then there is a possibility of the detection of a temporary malfunction.</li><li>• Replace the AV control unit if the malfunction occurs constantly.</li></ul>

### Diagnosis Procedure

INFOID:000000006709215

#### 1. CHECK MUSIC BOX FUNCTION

##### Is music box function normal?

YES >> Malfunction may be detected transitory.

NO >> Replace AV control unit. Refer to [AV-267. "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# U1219 AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1219 AV CONTROL UNIT

### DTC Logic

INFOID:000000006709216

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1219	HDD READ [U1219]	AV control unit malfunction is detected.	<ul style="list-style-type: none"><li>• If the music box function has no malfunctions, then there is a possibility of the detection of a temporary malfunction.</li><li>• Replace the AV control unit if the malfunction occurs constantly.</li></ul>

### Diagnosis Procedure

INFOID:000000006709217

#### 1. CHECK MUSIC BOX FUNCTION

##### Is music box function normal?

YES >> Malfunction may be detected transitory.

NO >> Replace AV control unit. Refer to [AV-267. "Removal and Installation"](#).



# U121A AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U121A AV CONTROL UNIT

### DTC Logic

INFOID:000000006709218

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U121A	HDD WRITE [U121A]	AV control unit malfunction is detected.	<ul style="list-style-type: none"><li>• If the music box function has no malfunctions, then there is a possibility of the detection of a temporary malfunction.</li><li>• Replace the AV control unit if the malfunction occurs constantly.</li></ul>

### Diagnosis Procedure

INFOID:000000006709219

#### 1. CHECK MUSIC BOX FUNCTION

##### Is music box function normal?

YES >> Malfunction may be detected transitory.

NO >> Replace AV control unit. Refer to [AV-267. "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# U121B AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U121B AV CONTROL UNIT

### DTC Logic

INFOID:000000006709220

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U121B	HDD COMM [U121B]	AV control unit malfunction is detected.	<ul style="list-style-type: none"><li>• If the music box function has no malfunctions, then there is a possibility of the detection of a temporary malfunction.</li><li>• Replace the AV control unit if the malfunction occurs constantly.</li></ul>

### Diagnosis Procedure

INFOID:000000006709221

#### 1. CHECK MUSIC BOX FUNCTION

##### Is music box function normal?

YES >> Malfunction may be detected transitory.

NO >> Replace AV control unit. Refer to [AV-267. "Removal and Installation"](#).

# U121C AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U121C AV CONTROL UNIT

### DTC Logic

INFOID:000000006709222

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U121C	HDD ACCESS [U121C]	AV control unit malfunction is detected.	<ul style="list-style-type: none"><li>• If the music box function has no malfunctions, then there is a possibility of the detection of a temporary malfunction.</li><li>• Replace the AV control unit if the malfunction occurs constantly.</li></ul>

### Diagnosis Procedure

INFOID:000000006709223

#### 1. CHECK MUSIC BOX FUNCTION

##### Is music box function normal?

YES >> Malfunction may be detected transitory.

NO >> Replace AV control unit. Refer to [AV-267. "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# U121D AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U121D AV CONTROL UNIT

### DTC Logic

INFOID:000000006709224

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U121D	DSP CONN [U121D]	AV control unit malfunction is detected.	<ul style="list-style-type: none"><li>• If a disc can be played, then there is a possibility of the detection of a temporary malfunction.</li><li>• Replace the AV control unit if the malfunction occurs constantly.</li></ul>

### Diagnosis Procedure

INFOID:000000006709225

#### 1. CHECK PLAYBACK OF A DISK (CD)

##### Can a disk (CD) be played?

YES >> Malfunction may be detected transitory.

NO >> Replace AV control unit. Refer to [AV-267. "Removal and Installation"](#).

# U121E AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U121E AV CONTROL UNIT

### DTC Logic

INFOID:000000006709226

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U121E	DSP COMM [U121E]	AV control unit malfunction is detected.	<ul style="list-style-type: none"><li>• If a disc can be played, then there is a possibility of the detection of a temporary malfunction.</li><li>• Replace the AV control unit if the malfunction occurs constantly.</li></ul>

### Diagnosis Procedure

INFOID:000000006709227

#### 1. CHECK PLAYBACK OF A DISK (CD)

##### Can a disk (CD) be played?

YES >> Malfunction may be detected transitory.

NO >> Replace AV control unit. Refer to [AV-267, "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# U1225 AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1225 AV CONTROL UNIT

### DTC Logic

INFOID:000000006709228

### DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1225	USB CONTROLLER [U1225]	USB connection malfunction is detected.	Check that the connection to the USB connector is normal.

# U1227 AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1227 AV CONTROL UNIT

### DTC Logic

INFOID:000000006709229

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1227	DVD COMM [U1227]	AV control unit malfunction is detected.	<ul style="list-style-type: none"><li>• If DVD can be played, then there is a possibility of the detection of a temporary malfunction.</li><li>• Replace the AV control unit if the malfunction occurs constantly.</li></ul>

### Diagnosis Procedure

INFOID:000000006709230

#### 1. CHECK PLAYBACK OF A DISK (DVD)

##### Can a disc (DVD) be played?

YES >> Malfunction may be detected transitory.

NO >> Replace AV control unit. Refer to [AV-267, "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# U1228 AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1228 AV CONTROL UNIT

### DTC Logic

INFOID:000000006709231

### DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1228	SUB CPU CONN [U1228]	AV control unit malfunction is detected.	Replace the AV control unit if the malfunction occurs constantly.



# U1229 AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1229 AV CONTROL UNIT

### DTC Logic

INFOID:000000006709232

### DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1229	iPod CERTIFICATION [U1229]	AV control unit malfunction is detected.	Replace the AV control unit if the malfunction occurs constantly.

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

# U122A AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U122A AV CONTROL UNIT

### DTC Logic

INFOID:000000006709233

DTC	Display contents of CONSULT-III	DTC detection condition	Action to take
U122A	CONFIG UNFINISH [U122A]	The writing of configuration data is incomplete.	Write configuration data with "MULTI AV" of CONSULT-III.

### Diagnosis Procedure

INFOID:000000006709234

#### 1.PERFORM THE SELF-DIAGNOSIS

When U122A is detected, write configuration data with "MULTI AV" of CONSULT-III.

>> Write configuration data with "MULTI AV" of CONSULT-III. Refer to [AV-203, "CONFIGURATION \(AV CONTROL UNIT\) : Special Repair Requirement"](#).

# U122E AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U122E AV CONTROL UNIT

### DTC Logic

INFOID:000000006709235

### DTC DETECTION LOGIC

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U122E	Built-in AUDIO CONN [U122E]	AV control unit malfunction is detected.	Replace the AV control unit if the malfunction occurs constantly.

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

# U1232 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1232 STEERING ANGLE SENSOR

### DTC Logic

INFOID:000000006709236

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1232	ST ANGLE SEN CALIB [1232]	Predictive course line center position adjustment of the steering angle sensor is incomplete.	Adjust the predictive course line center position of the steering angle sensor.

### Diagnosis Procedure

INFOID:000000006709237

#### 1. ADJUST THE PREDICTIVE COURSE LINE CENTER POSITION OF THE STEERING ANGLE SENSOR

When U1232 is detected, adjust the predictive course line center position of the steering angle sensor.

>> Adjusts the steering angle sensor neutral position on ABS actuator and electrical unit (control unit) side. Refer to [BRC-8. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

# U1243 DISPLAY UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1243 DISPLAY UNIT

### DTC Logic

INFOID:000000006709238

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1243	FRONT DISP CONN [U1243]	When either one of the following items are detected: <ul style="list-style-type: none"> <li>display unit power supply and ground circuit malfunction is detected.</li> <li>communication circuit between AV control unit and display unit.</li> </ul>	<ul style="list-style-type: none"> <li>Display unit power supply and ground circuit.</li> <li>Communication circuit between AV control unit and display unit.</li> </ul>

### Diagnosis Procedure

INFOID:000000006709239

#### 1. CHECK FRONT DISPLAY UNIT POWER SUPPLY AND GROUND CIRCUIT

Check front display unit power supply and ground circuit. Refer to [AV-239, "FRONT DISPLAY UNIT : Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair malfunctioning parts.

#### 2. CHECK CONTINUITY COMMUNICATION CIRCUIT

- Turn ignition switch OFF.
- Disconnect front display unit connector and AV control unit connector.
- Check continuity between front display unit harness connector and AV control unit harness connector.

Front display unit		AV control unit		Continuity
Connector	Terminals	Connector	Terminals	
M75	9	M86	89	Existed
	10		73	

- Check continuity between front display unit harness connector and ground.

Front display unit		Ground	Continuity
Connector	Terminals		
M75	9		Not existed
	10		

Is the inspection result normal?

- YES >> GO TO 3.  
 NO >> Repair harness or connector.

#### 3. CHECK COMMUNICATION SIGNAL

- Connect front display unit connector and AV control unit connector.
- Turn ignition switch ON.
- Check signal between front display unit harness connector and ground.


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# U1243 DISPLAY UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

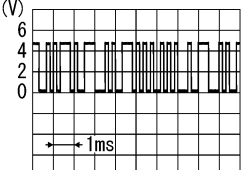(+)		(-)	Condition	Reference value
Front display unit				
Connector	Terminal			
M75	9	Ground	When adjusting display brightness.	 <p>PKIB5039J</p>


Is the inspection result normal?

YES >> GO TO 4.

NO >> Replace AV control unit. Refer to [AV-267. "Removal and Installation"](#).

## 4. CHECK COMMUNICATION SIGNAL

Check signal between front display unit harness connector and ground.

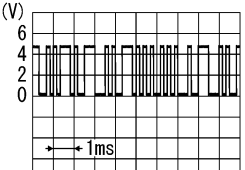(+)		(-)	Condition	Reference value
Front display unit				
Connector	Terminal			
M75	10	Ground	When adjusting display brightness.	 <p>PKIB5039J</p>

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace front display unit. Refer to [AV-269. "Removal and Installation"](#).

# U1244 GPS ANTENNA

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1244 GPS ANTENNA

### DTC Logic

INFOID:000000006709240

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1244	GPS ANTENNA CONN [U1244]	GPS antenna connection malfunction is detected.	Check the connection of the GPS antenna connector.

### Diagnosis Procedure

INFOID:000000006709241

#### 1. GPS ANTENNA CHECK

Visually check GPS antenna and antenna feeder.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair malfunctioning parts.

#### 2. CHECK AV CONTROL UNIT VOLTAGE

1. Disconnect GPS antenna connector.
2. Turn ignition switch ON.
3. Check voltage between AV control unit and ground.

(+)	(-)	Voltage (Approx.)
AV control unit		
Terminal		
153	Ground	5.0 V

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace AV control unit. Refer to [AV-267, "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# U1258 SATELLITE RADIO ANTENNA

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1258 SATELLITE RADIO ANTENNA

### DTC Logic

INFOID:000000006709242

DTC	Display contents of CONSULT-III	DTC Detection Condition	Possible causes
U1258	XM ANTENNA CONN [U1258]	Satellite radio antenna connection malfunction is detected.	<ul style="list-style-type: none"><li>Satellite radio antenna feeder.</li><li>Satellite radio antenna.</li></ul>

### Diagnosis Procedure

INFOID:000000006709243

#### 1. SATELLITE RADIO ANTENNA CHECK

Visually check satellite radio antenna and antenna feeder.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair malfunctioning parts.

#### 2. CHECK AV CONTROL UNIT VOLTAGE

1. Disconnect satellite radio antenna connector.
2. Turn ignition switch ON.
3. Check voltage between AV control unit terminal and ground.

(+)	(-)	Voltage (Approx.)
AV control unit Terminal		
160	Ground	5.0 V

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace AV control unit. Refer to [AV-267. "Removal and Installation"](#).



# U1263 USB

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1263 USB

### DTC Logic

INFOID:000000006709244

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1263	USB OVERCURRENT [U1263]	Detection of over current in USB connector.	Check USB harness between the AV control unit and USB connector.

### Diagnosis Procedure

INFOID:000000006709245

#### 1. CHECK USB HARNESS

Visually check USB harness.

Is the inspection result normal?

- YES >> Replace AV control unit. Refer to [AV-267, "Removal and Installation"](#)
- NO >> Replace USB harness.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV

O  
P

# U1264 ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1264 ANTENNA AMP.

### DTC Logic

INFOID:000000006709246

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1264	ANTENNA AMP TERMINAL [U1264]	Radio antenna amp. ON circuit is open or shorted.	<ul style="list-style-type: none"><li>• Check antenna amp. ON signal circuit between the AV control unit and radio antenna amp. (coupe models)</li><li>• Check antenna amp. ON signal circuit between the AV control unit and antenna base. (roadster models)</li></ul>

### COUPE

#### COUPE : Diagnosis Procedure

INFOID:000000006709247

#### 1. CHECK CONTINUITY BETWEEN AV CONTROL UNIT AND ANTENNA AMP.

1. Turn ignition switch OFF.
2. Disconnect antenna amp. connector and AV control unit connector.
3. Check continuity between AV control unit harness connector and antenna amp. harness connector.

AV control unit		Antenna amp.		Continuity
Connector	Terminals	Connector	Terminals	
M450	152	D304	1	Existed

4. Check continuity between AV control unit harness connector and ground.

AV control unit		Ground	Continuity
Connector	Terminals		
M450	152		Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair harness or connector.

#### 2. CHECK VOLTAGE AV CONTROL UNIT

1. Connect AV control unit connector.
2. Turn ignition switch ON.
3. Check voltage between AV control unit harness connector and ground.

(+)		(-)	Voltage (Approx.)
AV control unit			
Connector	Terminals		
M450	152	Ground	12.0 V

Is the inspection result normal?

- YES >> Replace antenna amp. Refer to [AV-277, "Removal and Installation"](#).  
NO >> Replace AV control unit. Refer to [AV-267, "Removal and Installation"](#).

### ROADSTER

#### ROADSTER : Diagnosis Procedure

INFOID:000000006709248

#### 1. CHECK CONTINUITY BETWEEN AV CONTROL UNIT AND ANTENNA BASE

# U1264 ANTENNA AMP.

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

1. Turn ignition switch OFF.
2. Disconnect antenna base connector and AV control unit connector.
3. Check continuity between AV control unit harness connector and antenna base harness connector.

AV control unit		Antenna base		Continuity
Connector	Terminals	Connector	Terminals	
M450	152	B431	1	Existed

4. Check continuity between AV control unit harness connector and ground.

AV control unit		Ground	Continuity
Connector	Terminals		
M450	152		Not existed

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

## 2. CHECK VOLTAGE AV CONTROL UNIT

1. Connect AV control unit connector.
2. Turn ignition switch ON.
3. Check voltage between AV control unit harness connector and ground.

AV control unit		(-)	Voltage (Approx.)
Connector	Terminals		
M450	152	Ground	12.0 V

Is the inspection result normal?

YES >> Replace antenna base Refer to [AV-278, "Removal and Installation"](#).

NO >> Replace AV control unit. Refer to [AV-267, "Removal and Installation"](#).

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# U1265 BOSE AMP.

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1265 BOSE AMP.

### DTC Logic

INFOID:000000006709249

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1265	AMP ON TERMINAL [U1265]	BOSE amp. ON circuit is open or shorted.	Check BOSE amp. ON signal circuit between the AV control unit and BOSE amp.

### Diagnosis Procedure

INFOID:000000006709250

#### 1. CHECK CONTINUITY BETWEEN AV CONTROL UNIT AND BOSE AMP.

1. Turn ignition switch OFF.
2. Disconnect BOSE amp. connector and AV control unit connector.
3. Check continuity between AV control unit harness connector and BOSE amp. harness connector.

AV control unit		BOSE amp.		Continuity
Connector	Terminals	Connector	Terminals	
M84	1	B41	31	Existed

4. Check continuity between AV control unit harness connector and ground.

AV control unit		Ground	Continuity
Connector	Terminals		
M84	1		Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair harness or connector.

#### 2. CHECK VOLTAGE AV CONTROL UNIT

1. Connect AV control unit connector.
2. Turn ignition switch ON.
3. Check voltage between AV control unit harness connector and ground.

(+) AV control unit		(-) Ground	Voltage (Approx.)
Connector	Terminals		
M84	1		12.0 V

Is the inspection result normal?

- YES >> Replace BOSE amp. Refer to [AV-275, "COUPE : Removal and Installation"](#) (coupe type), or [AV-275, "ROADSTER : Removal and Installation"](#) (roadster models).  
 NO >> Replace AV control unit. Refer to [AV-267, "Removal and Installation"](#).

# U1300 AV COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1300 AV COMM CIRCUIT

### Description

INFOID:000000006709251

U1300 is indicated when malfunction occurs in communication signal of multi AV system. Indicated simultaneously, without fail, with the malfunction of control units connected to AV control unit with communication line. Determine the possible malfunction cause from the table below.

### SELF-DIAGNOSIS RESULTS DISPLAY ITEM

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1300 U1240	<ul style="list-style-type: none"><li>• AV COMM CIRCUIT [U1300]</li><li>• SWITCH CONN [U1240]</li></ul>	When either one of the following items are detected: <ul style="list-style-type: none"><li>• Multifunction switch power supply and ground circuits are malfunctioning.</li><li>• AV communication circuits between AV control unit and multifunction switch are malfunctioning.</li></ul>	<ul style="list-style-type: none"><li>• Multifunction switch power supply and ground circuits.</li><li>• AV communication circuits between AV control unit and multifunction switch.</li></ul>

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# U1310 AV CONTROL UNIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## U1310 AV CONTROL UNIT

### DTC Logic

INFOID:000000006709252

DTC	Display contents of CONSULT-III	DTC detection condition	Possible malfunction factor
U1310	CONTROL UNIT (AV) [U1310]	An initial diagnosis error is detected in AV communication circuit.	Replace AV control unit. If the malfunction occurs constantly.

# POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## POWER SUPPLY AND GROUND CIRCUIT

### AV CONTROL UNIT

#### AV CONTROL UNIT : Diagnosis Procedure

INFOID:000000006709253

#### 1.CHECK FUSE

Check for blown fuses.

Power source	Fuse No.
Battery	34
Ignition switch ACC or ON	19

Is the inspection result normal?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

#### 2.CHECK POWER SUPPLY CIRCUIT

Check voltage between AV control unit harness connectors and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Value (Approx.)
Battery power supply	M84	19	OFF	Battery voltage
ACC power supply		7	ACC	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness between AV control unit and fuse.

#### 3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect AV control unit connectors.
3. Check continuity between AV control unit harness connectors and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Continuity
Ground	M84	20	OFF	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

## FRONT DISPLAY UNIT

#### FRONT DISPLAY UNIT : Diagnosis Procedure

INFOID:000000006709254

#### 1.CHECK FUSE

Check for blown fuses.

Power source	Fuse No.
Battery	34
Ignition switch ACC or ON	19

Is the inspection result normal?

YES >> GO TO 2.

NO >> Be sure to eliminate cause of malfunction before installing new fuse.

#### 2.CHECK POWER SUPPLY CIRCUIT

Check voltage between front display unit harness connector and ground.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV

O  
P

# POWER SUPPLY AND GROUND CIRCUIT

[BOSE AUDIO WITH NAVIGATION]

< DTC/CIRCUIT DIAGNOSIS >

Signal name	Connector No.	Terminal No.	Ignition switch position	Value (Approx.)
Battery power supply	M75	11	OFF	Battery voltage
ACC power supply		23	ACC	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness between front display unit and fuse.

## 3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front display unit connector.
3. Check continuity between front display unit harness connector and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Continuity
Ground	M75	12	OFF	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.

## BOSE AMP.

### BOSE AMP. : Diagnosis Procedure

INFOID:000000006709255

## 1.CHECK FUSE

Check for blown fuses.

Power source	Fuse No.
Battery	8

Is the inspection result normal?

YES >> GO TO 2.

NO >> Be sure to eliminate the cause of malfunction before installing new fuse.

## 2.CHECK POWER SUPPLY CIRCUIT

Check voltage between BOSE amp. harness connector and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Voltage (Approx.)
Battery power supply	B42	11	OFF	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness between BOSE amp. and fuse.

## 3.CHECK GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BOSE amp. connector.
3. Check continuity between BOSE amp. harness connector and ground.

Signal name	Connector No.	Terminal No.	Ignition switch position	Continuity
Ground	B42	12	OFF	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair harness or connector.



# RGB DIGITAL IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## RGB DIGITAL IMAGE SIGNAL CIRCUIT

### Description

INFOID:000000006709256

Transmit the image displayed with AV control unit with RGB digital image signal to the front display unit.

### Diagnosis Procedure

INFOID:000000006709257

#### 1. CHECK CONTINUITY RGB DIGITAL IMAGE SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect front display unit connector and AV control unit connector.
3. Check continuity between front display unit harness connector and AV control unit harness connector.

Front display unit		AV control unit		Continuity
Connector	Terminals	Connector	Terminals	
M454	27	M452	157	Existed
	28		158	

4. Check continuity between front display unit harness connector and ground.

Front display unit		Ground	Continuity
Connector	Terminals		
M454	27		Not existed
	28		

Is the inspection result normal?

- YES >> GO TO 2  
 NO >> Repair harness or connector.

#### 2. CHECK RGB DIGITAL IMAGE SIGNAL

1. Connect AV control unit connector.
2. Turn ignition switch ON.
3. Check voltage between front display unit harness connector and ground.

(+) Front display unit		(-)	Condition	Voltage (Approx.)
Connector	Terminal			
M454	27	Ground	Not connected connector.	1.3 V
	28			

Is the inspection result normal?

- YES >> Replace front display unit. Refer to [AV-269, "Removal and Installation"](#).  
 NO >> Replace AV control unit. Refer to [AV-267, "Removal and Installation"](#).

AV

# COMPOSITE IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## COMPOSITE IMAGE SIGNAL CIRCUIT

### Description

INFOID:000000006709258

AV control unit transmits the playback DVD image signal and AUX image signal to the front display unit.

### Diagnosis Procedure

INFOID:000000006709259

#### 1. CHECK CONTINUITY COMPOSITE IMAGE SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect AV control unit connector and front display unit connector.
3. Check continuity between AV control unit harness connector and front display unit harness connector.

AV control unit		Front display unit		Continuity
Connector	Terminal	Connector	Terminal	
M86	68	M75	18	Existed

4. Check continuity between AV control unit harness connector and ground.


AV control unit		Ground	Continuity
Connector	Terminal		
M86	68		Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
 NO >> Repair harness or connector.

#### 2. CHECK AUX COMPOSITE SIGNAL

1. Connect AV control unit connector and front display unit connector.
2. Turn ignition switch ON.
3. Check signal between auxiliary input jacks harness connector and ground.

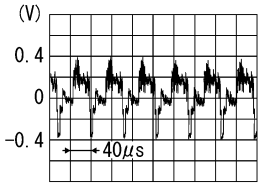(+)		(-)	Condition	Reference value
AV control unit				
Connector	Terminal			
M86	68	Ground	At DVD image is displayed.	 <p>(V)</p> <p>0.4</p> <p>0</p> <p>-0.4</p> <p>40µs</p> <p>SKIB2251J</p>

Is the inspection result normal?

- YES >> Replace front display unit. Refer to [AV-269. "Removal and Installation"](#).  
 NO >> Replace AV control unit. Refer to [AV-267. "Removal and Installation"](#).

# AUX IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## AUX IMAGE SIGNAL CIRCUIT

### Description

INFOID:000000006709260

- Transmits the image signal of AUX device from auxiliary input jacks to AV control unit.
- AV control unit transmits the image signal that is input to the front display unit.

### Diagnosis Procedure

INFOID:000000006709261

#### 1. CHECK CONTINUITY AUX IMAGE SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect auxiliary input jacks connector and AV control unit connector.
3. Check continuity between auxiliary input jacks harness connector and AV control unit harness connector.

Auxiliary input jacks		AV control unit		Continuity
Connector	Terminal	Connector	Terminal	
M258	7	M85	26	Existed

4. Check continuity between auxiliary input jacks harness connector and ground.

Auxiliary input jacks		Ground	Continuity
Connector	Terminal		
M258	7		Not existed


Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

#### 2. CHECK AUX IMAGE SIGNAL

1. Connect auxiliary input jacks connector and AV control unit connector.
2. Turn ignition switch ON.
3. Check signal between auxiliary input jacks harness connector and ground.

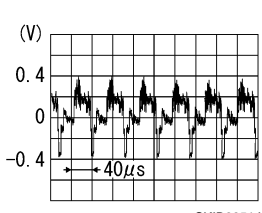(+) Auxiliary input jacks		(-)	Condition	Reference value
Connector	Terminal			
M258	7	Ground	At AUX image is displayed.	

Is the inspection result normal?

YES >> Replace AV control unit. Refer to [AV-267, "Exploded View"](#).

NO >> Check that there is no malfunction in the external device.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

# DISK EJECT SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## DISK EJECT SIGNAL CIRCUIT

### Description

INFOID:000000006709262

The eject signal is output to AV control unit when the eject switch of multifunction switch is pressed.

### Diagnosis Procedure

INFOID:000000006709263

#### 1. CHECK CONTINUITY DISK EJECT SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect multifunction switch connector and AV control unit connector.
3. Check continuity between multifunction switch harness connector and AV control unit harness connector.

Multifunction switch		AV control unit		Continuity
Connector	Terminal	Connector	Terminal	
M72	14	M85	29	Existed

4. Check continuity between multifunction switch harness connector and ground.

Multifunction switch		Ground	Continuity
Connector	Terminal		
M72	14		Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair harness or connector.

#### 2. CHECK AV CONTROL UNIT VOLTAGE

1. Connect multifunction switch connector and AV control unit connector.
2. Turn ignition switch ON.
3. Check voltage between AV control unit harness connector and ground.

(+)		(-)	Condition	Voltage (Approx.)
AV control unit				
Connector	Terminal			
M85	29	Ground	Pressing the eject switch	0 V
			Except for above	5.0 V

Is the inspection result normal?

- YES >> Replace preset switch. Refer to [AV-280, "Exploded View"](#).  
NO >> Replace AV control unit. Refer to [AV-267, "Exploded View"](#).

# MICROPHONE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## MICROPHONE SIGNAL CIRCUIT

### Description

INFOID:000000006709264

Supply power from AV control unit to microphone. The microphone transmits the sound/voice to the AV control unit.

### Diagnosis Procedure

INFOID:000000006709265

#### 1.CHECK CONTINUITY BETWEEN AV CONTROL UNIT AND MICROPHONE CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect AV control unit connector and microphone connector.
3. Check continuity between AV control unit harness connector and microphone harness connector.

AV control unit		Microphone		Continuity
Connector	Terminals	Connector	Terminals	
M86	71	R5	2	Existed
	72		4	
	87		1	

4. Check continuity between AV control unit harness connector and ground.

AV control unit		Ground	Continuity
Connector	Terminals		
M86	72		Not existed
	87		

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

#### 2.CHECK VOLTAGE MICROPHONE VCC

1. Connect AV control unit connector.
2. Turn ignition switch ON.
3. Check voltage between AV control unit harness connector.

(+)		(-)		Voltage (Approx.)
AV control unit		AV control unit		
Connector	Terminal	Connector	Terminal	
M86	72	M86	71	5.0 V

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace AV control unit. Refer to [AV-267, "Removal and Installation"](#).

#### 3.CHECK MICROPHONE SIGNAL

1. Connect microphone connector.
2. Check signal between AV control unit harness connector.


A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# MICROPHONE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

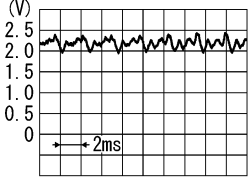(+)		(-)		Condition	Reference value
AV control unit		AV control unit			
Connector	Terminal	Connector	Terminal		
M86	87	M86	71	Give a voice.	 <p style="text-align: right;">PKIB5037J</p>

Is the inspection result normal?

- YES >> Replace AV control unit. Refer to [AV-267. "Removal and Installation"](#).
- NO >> Replace microphone. Refer to [AV-284. "Removal and Installation"](#).

# CAMERA IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## CAMERA IMAGE SIGNAL CIRCUIT

### Description

INFOID:000000006713846

- The AV control unit supplies power to the rear view camera when receiving a reverse signal.
- The rear view camera transmits camera images to the front display unit when power is supplied from the AV control unit.

### Diagnosis Procedure

INFOID:000000006713847

#### 1. CHECK CONTINUITY CAMERA POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect AV control unit connector and rear view camera connector.
3. Check continuity between AV control unit harness connector and rear view camera harness connector.

AV control unit		Rear view camera		Continuity
Connector	Terminal	Connector	Terminal	
M85	22	B157	1	Existed

4. Check continuity between AV control unit harness connector and ground.

AV control unit		Ground	Continuity
Connector	Terminal		
M85	22		Not existed

Is inspection result normal?

YES >> GO TO 2.

NO >> Repair harness or connector.

#### 2. CHECK VOLTAGE CAMERA POWER SUPPLY

1. Connect AV control unit connector and rear view camera connector.
2. Turn ignition switch ON.
3. Shift the selector lever to "R".
4. Check voltage between AV control unit harness connector and ground.

(+)		(-)	Condition	Voltage (Approx.)
AV control unit				
Connector	Terminal			
M85	22	Ground	Shift position is "R".	6.0 V

Is inspection result normal?

YES >> GO TO 3.

NO >> Replace AV control unit. Refer to [AV-267, "Removal and Installation"](#).

#### 3. CHECK CONTINUITY CAMERA IMAGE SIGNAL CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect display unit connector and rear view camera connector.
3. Check continuity between front display unit harness connector and rear view camera harness connector.

Front display unit		Rear view camera		Continuity
Connector	Terminal	Connector	Terminal	
M75	8	B157	3	Existed

4. Check continuity between front display unit harness connector and ground.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# CAMERA IMAGE SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

Front display unit		Ground	Continuity
Connector	Terminal		
M75	8		Not existed


Is inspection result normal?

YES >> GO TO 4.

NO >> Repair harness or connector.

## 4. CHECK CAMERA IMAGE SIGNAL

1. Connect front display unit connector and rear view camera connector.
2. Turn ignition switch ON.
3. Shift the selector lever to "R".
4. Check signal between display unit harness connector and ground.

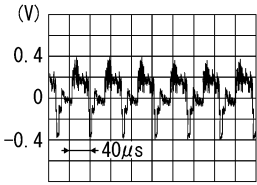(+)		(-)	Condition	Reference value
Front display unit				
Connector	Terminal			
M75	8	Ground	At rear view camera image is displayed.	 <p style="text-align: right; font-size: small;">SKIB2251J</p>

Is inspection result normal?

YES >> Replace front display unit. Refer to [AV-269, "Removal and Installation"](#).

NO >> Replace rear view camera. Refer to [AV-289, "Removal and Installation"](#).



# STEERING SWITCH SIGNAL A CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## STEERING SWITCH SIGNAL A CIRCUIT

### Description

INFOID:000000006709266

Transmits the steering switch signal to AV control unit.

### Diagnosis Procedure

INFOID:000000006709267

#### 1. CHECK STEERING SWITCH SIGNAL A CIRCUIT

1. Disconnect AV control unit connector and spiral cable connector.
2. Check continuity between AV control unit harness connector and spiral cable harness connector.

AV control unit		Spiral cable		Continuity
Connector	Terminal	Connector	Terminal	
M84	6	M36	24	Existed

3. Check continuity between AV control unit harness connector and ground.

AV control unit		Ground	Continuity
Connector	Terminal		
M84	6		Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair harness or connector.

#### 2. CHECK SPIRAL CABLE

Check spiral cable.

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Replace spiral cable. Refer to [SR-17. "Removal and Installation"](#).

#### 3. CHECK AV CONTROL UNIT VOLTAGE

1. Connect AV control unit connector and spiral cable connector.
2. Turn ignition switch ON.
3. Check voltage between AV control unit harness connector.

(+)		(-)		Voltage (Approx.)
AV control unit		AV control unit		
Connector	Terminal	Connector	Terminal	
M84	6	M84	15	5.0 V

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Replace AV control unit. Refer to [AV-267. "Removal and Installation"](#).

#### 4. CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-249. "Component Inspection"](#).

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace steering switch. Refer to [AV-281. "Removal and Installation"](#).

### Component Inspection

INFOID:000000006709268

Measure the resistance between the steering switch connector terminals 14 to 17 and 15 to 17.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# STEERING SWITCH SIGNAL A CIRCUIT

[BOSE AUDIO WITH NAVIGATION]

## < DTC/CIRCUIT DIAGNOSIS >


### Standard

Between terminals 14 and 17

ENTER switch ON	: 2003 – 2043 Ω
⏪ switch ON	: 716 – 730 Ω
MENU DOWN switch ON	: 318 – 324 Ω
MENU UP switch ON	: 120 – 122 Ω
SOURCE switch ON	: 0 Ω

Between terminals 15 and 17

↻ switch ON	: 716 – 730 Ω
↺ switch ON	: 318 – 324 Ω
VOL UP switch ON	: 120 – 122 Ω
VOL DOWN switch ON	: 0 Ω

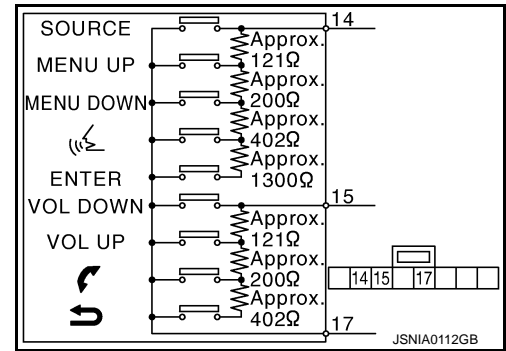

# STEERING SWITCH SIGNAL B CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## STEERING SWITCH SIGNAL B CIRCUIT

### Description

INFOID:000000006709269

Transmits the steering switch signal to AV control unit.

### Diagnosis Procedure

INFOID:000000006709270

#### 1. CHECK STEERING SWITCH SIGNAL B CIRCUIT

1. Disconnect AV control unit connector and spiral cable connector.
2. Check continuity between AV control unit harness connector and spiral cable harness connector.

AV control unit		Spiral cable		Continuity
Connector	Terminal	Connector	Terminal	
M84	16	M36	31	Existed

3. Check continuity between AV control unit harness connector and ground.

AV control unit		Ground	Continuity
Connector	Terminal		
M84	16		Not existed

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair harness or connector.

#### 2. CHECK SPIRAL CABLE

Check spiral cable.

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Replace spiral cable. Refer to [SR-17. "Removal and Installation"](#).

#### 3. CHECK AV CONTROL UNIT VOLTAGE

1. Connect AV control unit connector and spiral cable connector.
2. Turn ignition switch ON.
3. Check voltage between AV control unit harness connector.

(+)		(-)		Voltage (Approx.)
AV control unit		AV control unit		
Connector	Terminal	Connector	Terminal	
M84	16	M84	15	5.0 V

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Replace AV control unit. Refer to [AV-267. "Removal and Installation"](#).

#### 4. CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-251. "Component Inspection"](#).

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace steering switch. Refer to [AV-281. "Removal and Installation"](#).

### Component Inspection

INFOID:000000006709271

Measure the resistance between the steering switch connector terminals 14 to 17 and 15 to 17.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# STEERING SWITCH SIGNAL B CIRCUIT

[BOSE AUDIO WITH NAVIGATION]

## < DTC/CIRCUIT DIAGNOSIS >


### Standard

Between terminals 14 and 17

ENTER switch ON	: 2003 – 2043 Ω
⏪ switch ON	: 716 – 730 Ω
MENU DOWN switch ON	: 318 – 324 Ω
MENU UP switch ON	: 120 – 122 Ω
SOURCE switch ON	: 0 Ω

Between terminals 15 and 17

↻ switch ON	: 716 – 730 Ω
↺ switch ON	: 318 – 324 Ω
VOL UP switch ON	: 120 – 122 Ω
VOL DOWN switch ON	: 0 Ω

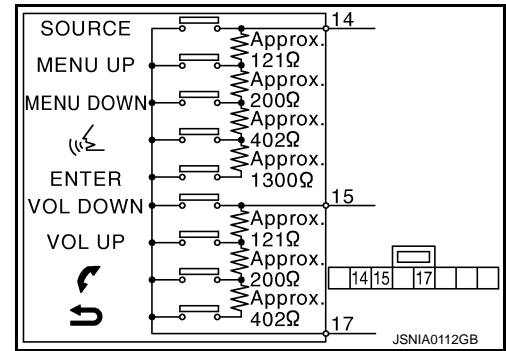

# STEERING SWITCH GROUND CIRCUIT

[BOSE AUDIO WITH NAVIGATION]

< DTC/CIRCUIT DIAGNOSIS >

## STEERING SWITCH GROUND CIRCUIT

### Description

INFOID:000000006709272

Transmits the steering switch signal to AV control unit.

### Diagnosis Procedure

INFOID:000000006709273

#### 1. CHECK STEERING SWITCH SIGNAL GND CIRCUIT

1. Disconnect AV control unit connector and spiral cable connector.
2. Check continuity between AV control unit harness connector and spiral cable harness connector.

AV control unit		Spiral cable		Continuity
Connector	Terminal	Connector	Terminal	
M84	15	M36	33	Existed

3. Connect AV control unit connector.

Is the inspection result normal?

- YES >> GO TO 2.  
NO >> Repair harness or connector.

#### 2. CHECK SPIRAL CABLE

Check spiral cable.

Is the inspection result normal?

- YES >> GO TO 3.  
NO >> Replace spiral cable. Refer to [SR-17, "Removal and Installation"](#).

#### 3. CHECK GROUND CIRCUIT

1. Connect AV control unit connector.
2. Check continuity between AV control unit harness connector and ground.

AV control unit		Ground	Continuity
Connector	Terminal		
M84	15		Existed

Is the inspection result normal?

- YES >> GO TO 4.  
NO >> Replace AV control unit. Refer to [AV-267, "Removal and Installation"](#).

#### 4. CHECK STEERING SWITCH

1. Turn ignition switch OFF.
2. Check steering switch. Refer to [AV-253, "Component Inspection"](#).

Is the inspection result normal?

- YES >> INSPECTION END  
NO >> Replace steering switch. Refer to [AV-281, "Removal and Installation"](#).

### Component Inspection

INFOID:000000006709274

Measure the resistance between the steering switch connector terminals 14 to 17 and 15 to 17.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# STEERING SWITCH GROUND CIRCUIT

[BOSE AUDIO WITH NAVIGATION]

## < DTC/CIRCUIT DIAGNOSIS >


### Standard

Between terminals 14 and 17

ENTER switch ON	: 2003 – 2043 Ω
☞ switch ON	: 716 – 730 Ω
MENU DOWN switch ON	: 318 – 324 Ω
MENU UP switch ON	: 120 – 122 Ω
SOURCE switch ON	: 0 Ω

Between terminals 15 and 17

↶ switch ON	: 716 – 730 Ω
↷ switch ON	: 318 – 324 Ω
VOL UP switch ON	: 120 – 122 Ω
VOL DOWN switch ON	: 0 Ω

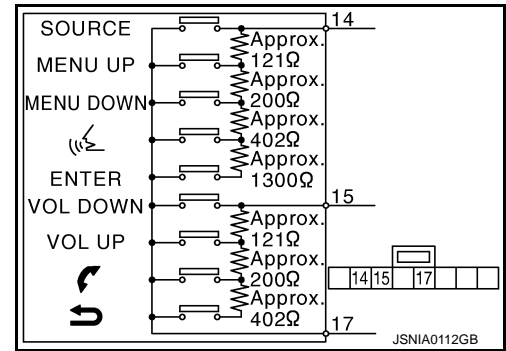

# MULTI AV SYSTEM SYMPTOMS

[BOSE AUDIO WITH NAVIGATION]

< SYMPTOM DIAGNOSIS >

## SYMPTOM DIAGNOSIS

### MULTI AV SYSTEM SYMPTOMS

#### Symptom Table

INFOID:000000006709275

#### RELATED TO NAVIGATION

#### Trouble Diagnosis Chart by Symptom

Symptoms	Check items	Probable malfunction location
Multifunction switch and preset switch operation does not work.	<ul style="list-style-type: none"> <li>All switches cannot be operated.</li> <li>"MULTI AV" is displayed on system selection screen when the CONSULT-III is started.</li> </ul>	<ul style="list-style-type: none"> <li>Multifunction switch power supply and ground circuit.</li> <li>AV communication circuit between AV control unit and multifunction switch.</li> </ul> Perform CONSULT-III self-diagnosis. Refer to <a href="#">AV-163, "CONSULT-III Function (MULTI AV)"</a> .
	<ul style="list-style-type: none"> <li>All switches cannot be operated.</li> <li>"MULTI AV" is not displayed on system selection screen when the CONSULT-III is initialized.</li> </ul>	AV control unit power supply and ground circuit malfunction. Refer to <a href="#">AV-239, "AV CONTROL UNIT : Diagnosis Procedure"</a> .
	Only specified switch cannot be operated.	Multifunction switch or preset switch malfunction. Perform multifunction switch and preset switch self-diagnosis function. Refer to <a href="#">AV-152, "On Board Diagnosis Function"</a> .
Fuel economy display is abnormal.	There is malfunction in the CONSULT-III self-diagnosis result.	Perform detected DTC self-diagnosis. Refer to <a href="#">AV-163, "CONSULT-III Function (MULTI AV)"</a> .
	There is no malfunction in the self-diagnosis results.	Ignition signal circuit malfunction. Refer to <a href="#">AV-239, "AV CONTROL UNIT : Diagnosis Procedure"</a> .
Guide sound is not heard or too low.	On the setting display select "system sound (guide sound volume, etc.)," and confirm that guide sound is ON.	Voice guidance signal circuit malfunction.

#### RELATED TO HANDS-FREE PHONE

- Check that the cellular phone is a corresponding type (Bluetooth™ correspondence) when the hands-free related malfunction vehicle is in service before performing a diagnosis.
- There is a case that malfunction occurs due to the version change of the phone type, etc. even though it is a corresponding type. Therefore, confirm it by changing the cellular phone to another corresponding type phone, and check that it operates normally. It is necessary to distinguish whether the cause is the vehicle or cellular phone.

#### Simple Check for Bluetooth™ Communication


If cellular phone and AV control unit cannot be connected with Bluetooth™ communication, the following procedure allows the technician to judge which device has a malfunction.

- Turn on the cellular phone, not connecting Bluetooth™ communication.
- Start CONSULT-III, then start Windows®.
- Set CONSULT-III near the cellular phone.
- When operating Bluetooth™ registration by cellular phone, check if CONSULT-III\* is displayed on the device name. (If another Bluetooth™ device is located near the cellular phone, the name of the device will also be displayed.)

**NOTE:**

\*:Displayed device name is "NISSAN-\*\*\*\*\*".

- If no device name is displayed, cellular phone is malfunctioning. Repair the cellular phone first, then perform diagnosis.
- If CONSULT-III is displayed on device name, cellular phone is normal. Perform diagnosis as per the following table.

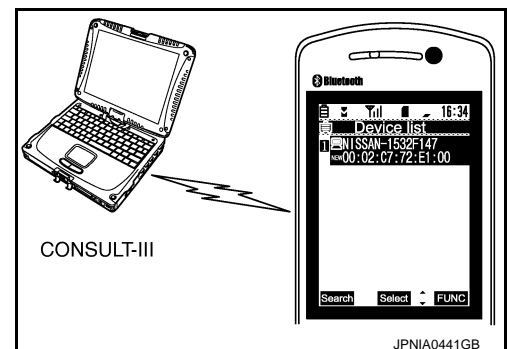

# MULTI AV SYSTEM SYMPTOMS

[BOSE AUDIO WITH NAVIGATION]

< SYMPTOM DIAGNOSIS >

## Trouble Diagnosis Chart by Symptom

Symptoms	Check items	Probable malfunction location
Does not recognize cellular phone connection. (no connection is displayed on the display at the guide.)	Repeat the registration of cellular phone.	AV control unit malfunction. Replace AV control unit. Refer to <a href="#">AV-267. "Removal and Installation"</a> .
Hands-free phone cannot be established.	<ul style="list-style-type: none"> <li>Hands-free phone operation can be made, but the communication cannot be established.</li> <li>Hands-free phone operation can be performed, however, voice between each other cannot be heard during the conversation.</li> </ul>	AV control unit malfunction. Replace AV control unit. Refer to <a href="#">AV-267. "Removal and Installation"</a> .
The other party's voice cannot be heard by hands-free phone.	Check the "microphone speaker" in Inspection & Adjustment Mode if sound is heard.	AV control unit malfunction. Replace AV control unit. Refer to <a href="#">AV-267. "Removal and Installation"</a> .
Originating sound is not heard by the other party with hands-free phone communication.	Sound operation function is normal.	AV control unit malfunction. Replace AV control unit. Refer to <a href="#">AV-267. "Removal and Installation"</a> .
	Sound operation function does not work.	Microphone signal circuit malfunction. Refer to <a href="#">AV-245. "Diagnosis Procedure"</a> .
The system cannot be operated.	Coupe models <ul style="list-style-type: none"> <li>The voice recognition can be controlled.</li> <li>Steering switch's "VOL UP", "VOL DOWN", "↶" switch works, but "↷" it does not work.</li> </ul> Roadster models <ul style="list-style-type: none"> <li>The retractable soft top is fully closed.</li> <li>The voice recognition can be controlled.</li> <li>Steering switch's "VOL UP", "VOL DOWN", "↶" switch works, but "↷" it does not work.</li> </ul>	Steering switch malfunction.
	Coupe models <ul style="list-style-type: none"> <li>The retractable soft top is fully closed.</li> <li>The voice recognition can be controlled.</li> <li>Steering switch's "↷", "VOL UP", "VOL DOWN", "↶" switches do not work.</li> </ul> Roadster models <ul style="list-style-type: none"> <li>The retractable soft top is fully closed.</li> <li>The voice recognition can be controlled.</li> <li>Steering switch's "↷", "VOL UP", "VOL DOWN", "↶" switches do not work.</li> </ul>	Steering switch signal B circuit malfunction. Refer to <a href="#">AV-251. "Diagnosis Procedure"</a> .
	All steering switches do not work.	Steering switch ground circuit malfunction. Refer to <a href="#">AV-253. "Diagnosis Procedure"</a> .

## RELATED TO RGB IMAGE

### Trouble Diagnosis Chart by Symptom

Symptoms	Check items	Probable malfunction location
RGB image is not shown.	—	RGB digital image signal circuit malfunction.

## RELATED TO VOICE CONTROL

### Trouble Diagnosis Chart by Symptom



# MULTI AV SYSTEM SYMPTOMS

[BOSE AUDIO WITH NAVIGATION]

< SYMPTOM DIAGNOSIS >

Symptoms	Check items	Probable malfunction location	
The voice cannot be controlled even if the voice control screen is displayed.	Voice sounds at "Voice Microphone Test" of Confirmation/Adjustment mode.	AV control unit malfunction. Replace AV control unit. Refer to <a href="#">AV-267, "Removal and Installation"</a> .	A
	Voice does not sound at "Voice Microphone Test" of Confirmation/Adjustment mode.	Microphone circuit malfunction. Refer to <a href="#">AV-245, "Diagnosis Procedure"</a> .	B
The voice cannot be controlled (Voice control screen is not displayed).	<ul style="list-style-type: none"> <li>Steering switch's "SOURCE", "MENU UP", "MENU DOWN", "ENTER" switch works, but "☞" it does not work.</li> <li>Hands-free phone system cannot be operated.</li> </ul>	Roof status signal circuit malfunction.	C
	<ul style="list-style-type: none"> <li>Steering switch's "SOURCE", "MENU UP", "MENU DOWN", "ENTER" switch works, but "☞" it does not work.</li> <li>Hands-free phone system can be operated.</li> </ul>	Steering switch malfunction.	D
	Steering switch's "SOURCE", "MENU UP", "MENU DOWN", "☞", "ENTER" switches do not work.	Steering switch signal A circuit malfunction. Refer to <a href="#">AV-249, "Diagnosis Procedure"</a> .	E
	All steering switches do not work.	Steering switch ground circuit malfunction. Refer to <a href="#">AV-253, "Diagnosis Procedure"</a> .	F

## RELATED TO AUDIO

Symptoms	Check items	Possible malfunction location / Action to take	
The CD cannot be removed.	—	Disk eject signal circuit malfunction between AV control unit and preset switch. Refer to <a href="#">AV-244, "Diagnosis Procedure"</a> .	H
Audio sound is not heard.	No sound from all speakers.	<ul style="list-style-type: none"> <li>BOSE amp. ON signal circuit.</li> <li>BOSE amp. power supply and ground circuit.</li> </ul> Refer to <a href="#">AV-240, "BOSE AMP. : Diagnosis Procedure"</a> .	I
	There is no sound from the woofer. (Coupe models)	Sound signal woofer circuit between BOSE amp. and woofer.	J
	There is no sound from the rear woofer. (Roadster models)	Sound signal rear woofer circuit between BOSE amp. and rear woofer.	K
Satellite radio is not received.	There is malfunction in the CONSULT-III self-diagnosis result.	Sound signal circuit of suspect system.	L
	There is no malfunction in the CONSULT-III self-diagnosis result.	Perform CONSULT-III self-diagnosis. Refer to <a href="#">AV-163, "CONSULT-III Function (MULTI AV)"</a> .  Perform the following inspection procedure. 1. Check satellite radio antenna mounting nut (coupe models) or antenna base mounting nut (roadster models) for looseness. <b>NOTE:</b> Tightening torque: 6.5 N·m (0.66 kg·m, 58 in·lb) 2. Visually check for satellite radio antenna feeder.	M
AM/FM radio is not received.	Other audio sounds are normal.	<ul style="list-style-type: none"> <li>Antenna amp. ON signal circuit.</li> <li>Antenna feeder.</li> </ul>	AV

## RELATED TO USB

### NOTE:

Check that there is no malfunction of USB equipment main body before performing a diagnosis.

Trouble Diagnosis Chart by Symptom

# MULTI AV SYSTEM SYMPTOMS

[BOSE AUDIO WITH NAVIGATION]

## < SYMPTOM DIAGNOSIS >

Symptoms	Check items	Possible malfunction location / Action to take
iPod® or USB memory can not be recognized.	—	<ul style="list-style-type: none"> <li>• USB harness malfunction.</li> <li>• USB connector malfunction.</li> </ul>

iPod® is a trademark of Apple inc., registered in the U.S. and other countries.

## RELATED TO DVD MODE




Symptoms	Check items	Probable malfunction location
The DVD cannot be removed.	—	Disk eject signal circuit malfunction between AV control unit and preset switch. Refer to <a href="#">AV-244, "Diagnosis Procedure"</a> .
DVD image is not displayed.	—	Perform CONSULT-III self-diagnosis. Refer to <a href="#">AV-163, "CONSULT-III Function (MULTI AV)"</a> . When detecting no malfunction in those components, the following items are a possible cause. <ul style="list-style-type: none"> <li>• Composite image signal circuits malfunction. Refer to <a href="#">AV-242, "Diagnosis Procedure"</a>.</li> </ul>
Audio sound is not heard.	No sound from all speakers.	<ul style="list-style-type: none"> <li>• BOSE amp. ON signal circuit.</li> <li>• BOSE amp. power supply and ground circuit. Refer to <a href="#">AV-240, "BOSE AMP. : Diagnosis Procedure"</a>.</li> </ul>
	Sound is heard only from specific places.	Sound signal circuit of suspect system.

## RELATED TO CAMERA

Symptoms	Check items	Probable malfunction location
Camera image is not shown. (Vehicle width and predictive course line are displayed.)	—	Camera image signal circuit. Refer to <a href="#">AV-247, "Diagnosis Procedure"</a> .
Camera image does not switch.	Select "Camera Cont." of Confirmation/ Adjustment mode, Reverse Sensor is not turned ON at "Connection Confirmation".	Reverse signal circuit malfunction.
	Select "Camera Cont." of Confirmation/ Adjustment mode, Reverse Sensor is turned ON at "Connection Confirmation".	AV control unit malfunction. Replace AV control unit. Refer to <a href="#">AV-267, "Removal and Installation"</a> .

## RELATED TO STEERING SWITCH

### Trouble Diagnosis Chart by Symptom

Symptoms	Probable malfunction location
None of the steering switch operations work.	Steering switch ground circuit malfunction. Refer to <a href="#">AV-253, "Diagnosis Procedure"</a> .
Only specified switch cannot be operated.	Steering switch malfunction.
Steering switch's "SOURCE", "MENU UP", "MENU DOWN", "  ", "ENTER" switches do not work.	Steering switch signal A circuit malfunction. Refer to <a href="#">AV-249, "Diagnosis Procedure"</a> .
Steering switch's "  ", "VOL UP", "VOL DOWN", "  switches do not work.	Steering switch signal B circuit malfunction. Refer to <a href="#">AV-251, "Diagnosis Procedure"</a> .

## RELATED TO AUXILIARY INPUT

### NOTE:

Check that there is no malfunction of AUX equipment main body before performing a diagnosis.

# MULTI AV SYSTEM SYMPTOMS

[BOSE AUDIO WITH NAVIGATION]

< SYMPTOM DIAGNOSIS >

Trouble diagnosis chart by symptom

Symptoms	Check items	Probable malfunction location
No voice sound is heard when AUX mode is selected.	Voice sound is heard when other modes are selected.	AUX sound signal circuit.
Image is not displayed when AUX mode is selected.	DVD image is displayed.	AUX image signal circuit malfunction. Refer to <a href="#">AV-243</a> . "Diagnosis Procedure".
	DVD image is not displayed.	Composite image signal circuit malfunction. Refer to <a href="#">AV-242</a> . "Diagnosis Procedure".

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

## NORMAL OPERATING CONDITION

### Description

INFOID:000000006709276

#### NOTE:

For Navigation system operation information, refer to Navigation system Owner's Manual.

### BASIC OPERATIONS

Symptom	Possible cause	Possible solution
No image is displayed.	The brightness is at the lowest setting.	Adjust the brightness of the display.
	The systems in the video mode.	Press "DISC-AUX" to change the mode.
	The display is turned off.	Press "☀/☾" to turn on the display.
	The interior of the vehicle becomes the a little less than 80°C (176°F) or high temperature, and the protection of the display acts, and a display is turned off.	Wait until the interior of the vehicle has cooled down.
Screen not clear.	Contrast setting is not appropriate.	Adjust the contrast of the display.
No voice guidance is available. Or The volume is too high or too low.	The volume is not set correctly, or it is turned off.	Adjust the volume of voice guidance.
	Voice guidance is not provided for certain streets (roads displayed in gray).	This is not a malfunction.
No map is displayed on the screen.	A screen other than map screen is displayed.	Press "MAP".
The screen is too dim. The movement is slow.	The temperature in the interior of the vehicle is high.	Wait until the interior of the vehicle has cooled down.
Some pixels in the display are darker or brighter than others.	This condition is an inherent characteristic of liquid crystal displays.	This is not a malfunction.
Some menu items cannot be selected.	Some menu items become unavailable while the vehicle is driven.	Park the vehicle in a safe location, and then operate the navigation system.

#### NOTE:

Locations stored in the Address Book and other memory functions may be lost if the vehicle's battery is disconnected or becomes discharged. If this occurs, service the vehicle's battery as necessary and re-enter the information in the Address Book.




### RELATED TO VOICE RECOGNITION

Related to Basic Operation

## NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

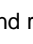Symptom	Possible cause	Possible solution
The system does not recognize your command. or The system recognizes your command incorrectly	The interior of the vehicle is too noisy.	Close the windows or have other occupants quiet.
	The volume of your voice is too low.	Speak louder.
	The volume if your voice is too loud.	Speak softer.
	Your pronunciation is unclear.	Speak clearly.
	You are speaking before the voice recognition is ready	Press and release “  ” switch on the steering switch, and speak a command after the tone sounds.
	8 seconds or more have passed after you pressed and released “  ” switch on the steering switch.	Make sure to speak a command within 8 seconds after you press and release “  ” switch on the steering switch.
	Only a limited range of voice commands is usable for each screen.	Use a correct voice command appropriate for the current screen.
The fan of the air conditioner is too loud.	Lower the fan speed as necessary as voice commands can be recognized more easily.	
The system cannot be operated. (roadster models)	The retractable soft top is not closed properly.	<ul style="list-style-type: none"> <li>• Close the retractable soft top.</li> <li>• Open and close the retractable soft top before operating the system.</li> <li>• Check if the retractable soft top warning lamp is lit in combination meter.</li> </ul>

### Related to Item Choice

The system should respond correctly to all voice commands without difficulty. If problems are encountered, follow the solutions given in this guide for the appropriate error.

Where the solutions are listed by number, try each solution in turn, starting with number one, until the problem is resolved.

Symptom/ error message	Solution
Displays “COMMAND NOT RECOGNIZED” or the system fails to interpret the command correctly.	1. Ensure that the command format is valid.
	2. Speak clearly without pausing between words and at a level appropriate to the ambient noise level.
	3. Ensure that the ambient noise level is not excessive, for example, windows open or defrost on. <b>NOTE:</b> If it is too noisy to use the phone, it is likely that voice commands will not be recognized.
	4. If optional words of the command have been omitted, then command should be tried with these in place.
The system consistently selects the wrong voicetag	1. Ensure that the voicetag requested matches what was originally stored. This can be confirmed by giving the “Addressbook” Directory or Phone Directory command.
	2. Replace one of the voicetags being confused with a different voicetag.

### Related to Telephone

The system should respond correctly to all voice commands without difficulty. If problems are encountered, try the following solutions.

Where the solutions are listed by number, try each solution in turn, starting with number 1, until the problem is resolved.

# NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

Symptom	Solution
System fails to interpret the command correctly.	1. Ensure that the command is valid.
	2. Ensure that the command is spoken after the tone.
	3. Speak clearly without pausing between words and at level appropriate to the ambient noise level in the vehicle.
	4. Ensure that the ambient noise level is not excessive (for example, windows open or defroster on). <b>NOTE:</b> If it is too noisy to use the phone, it is likely that the voice commands will not be recognized.
	5. If more than one command was said at a time, try saying the commands separately.
	6. If the system consistently fails to recognize commands, the voice training procedure should be carried out to improve the recognition response for the speaker. See "Speaker adaptation (SA) mode" earlier in this section. Refer to "OWNER'S MANUAL".
The system consistently selects the wrong voicetag	1. Ensure that the phone book entry name requested matches what was originally stored. This can be confirmed by using the "List Names" command.
	2. Replace one of the names being confused with a new name.

## RELATED TO AUDIO

- The majority of the audio malfunctions are the result of outside causes (bad CD, electromagnetic interference, etc.). Check the symptoms below to diagnose the malfunction.
- The vehicle itself can be a source of noise if noise prevention parts or electrical equipment is malfunctioning. Check if noise is caused and/or changed by engine speed, ignition switch turned to each position, and operation of each piece of electrical equipment, and then determine the cause.

**NOTE:**

- CD-R is not guaranteed to play because they can contain compressed audio (MP3, WMA, AAC, M4A) or could be incorrectly mastered by the customer on a computer.
- Check if the CDs carry the Compact Disc Logo. If not, the disc is not mastered to the "red book" Compact Disc Standard and may not play.

Symptom	Cause and Counter measure
Cannot play	Check if the CD was inserted correctly.
	Check if the CD is scratched or dirty.
	Check if there is condensation inside the player, and if there is, wait until the condensation is gone (about 1 hour) before using the player.
	If there is a temperature increase error, the player will play correctly after it returns to the normal temperature.
	If there is a mixture of music CD files (CD-DA data) and MP3/WMA/AAC/M4A files on a CD, only the music CD files (CD-DA data) will be played.
	Files with extensions other than ".MP3", ".WMA", ".AAC", ".M4A", ".mp3", ".wma", ".aac" or ".m4a" cannot be played. In addition, the character codes and number of characters for folder names and file names should be in compliance with the specifications.
	Check if the disc or the file is generated in an irregular format, This may occur depending on the variation or the setting of MP3/WMA/AAC/M4A writing applications or other text editing applications.
	Check if the finalization process, such as session close and disc close, is done for the disc.
Poor sound quality	Check if the CD is scratched or dirty.
	Check if the CD is protected by copyright.
It takes a relatively long time before the music starts playing.	If there are many folder or file levels on the MP3/WMA/AAC/M4A CD, or if it is a multisession disc, some time may be required before the music starts playing.
Music cuts off or skips	The writing software and hardware combination might not match, or the writing speed, writing depth, writing width might not match the specifications. Try using the slowest writing speed.
Skipping with high bit rate files	Skipping may occur with large quantities if data such as for high bit rate data.

## NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

Symptom	Cause and Counter measure
Move immediately to the next song when playing	When a non-MP3/WMA/AAC file has been given an extension of “.MP3”, “.WMA”, “.AAC”, “.M4A”, “.mp3”, “.wma”, “.aac” or “.m4a” or when play is prohibited by copyright protection, the player will skip to the next song.
The songs do not play back in the desired order.	The playback order is the order in which the files were written by the software, so the files might not play in the desired order.

Noise resulting from variations in field strength, such as fading noise and multi-path noise, or external noise from trains and other sources, is not a malfunction.

**NOTE:**

- Fading noise: This noise occurs because of variations in the field strength in a narrow range due to mountains or buildings blocking the signal.
- Multi-path noise: This noise results from a time difference between the broadcast waves directly from the station arriving at the antenna and the waves reflected by mountains or buildings.

### RELATED TO DVD

Symptom	Possible cause	Possible solution
Not working as operated	Some operations may be rejected or may not function as intended because of the manufacturer's intent, depending on DVD.	This is not a malfunction.
Operation not accepted	If a requested operation is prohibited, then a message is displayed on the screen. (Message display depends on DVD.)	This is not a malfunction.
DVD can not be played	Check that the DVD is inserted in the right place.	Upturn the DVD (facing the title upward).
	Check if there is condensation inside the player.	wait until the condensation is gone (about 1 hour) before using the player.
	DVD menu is displayed.	Select item to touch “ENTER”
	Insertion of a DVD with a different region code.	DVDs with a different region code can not be played. Check DVD.
DVD-AUDIO can not be played	Some DVD softwares may not be played because not all DVD softwares fully comply in the standard.	This is not a malfunction.
Interruption during playback or flicker in the display	DVD-AUDIO may not be playable depending on the vehicle specifications	This is not a malfunction.
Low sound quality	Check that the DVD has no scratches and dirt.	Errors may not be corrected depending on the size of scratches.
Distortion in picture	Wipe and clean the dirt on the disc.	This is not a malfunction.
Subtitles not shown	In the process of fast-forward or fast-reverse.	This is not a malfunction.
	Subtitle setting is OFF.	Set subtitle.
Not played in set language	Subtitle is not included in the software.	Check DVD.
	If a language is not included in the DVD, then the DVD is played in a recommended language.	Check DVD.
Not played with set subtitle	If a set subtitle is not included in the DVD, then the DVD is played with a recommended subtitle.	Check DVD.
	The DVD is not multilanguage-capable.	The inclusion of the number of languages depends on DVD. Languages may be selectable on the Menu screen. Check DVD.
Subtitle and language not selectable (not played with set subtitle or in set language)	The DVD has a priority language or setting.	If the DVD has a priority language or settings, then settings changed with this device are not reflected.
	Angle unchangeable	Plural angles are not recorded in the software.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

## NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

Symptom	Possible cause	Possible solution
Unusual screen display	Display mode to the output aspect ratio for the DVD software is inappropriate.	Switch to the appropriate display mode.
Playback time is indicated, but no sound comes out.	Playback of Mix mode Truck 1. (Mix mode: Format including Truck 1 with data other than music and Trucks from Truck 2 with music data.)	Play music data included in trucks from Truck 2.

### RELATED TO VEHICLE ICON

Symptom	Possible cause	Possible solution
Names of roads differ between Plan View and Birdview™.	This is because the quantity of the displayed information is reduced so that the screen does not become too crowded. There is also a chance that names of the roads may be displayed multiple times, and the names appearing on the screen may be different because of a processing procedure.	This is not a malfunction.
The vehicle icon is not displayed in the correct position.	The vehicle was transported after the ignition switch was pressed off, for example, by a ferry or car transporter.	Drive the vehicle for a while on a road where GPS signals can be received.
	The position and direction of the vehicle icon may be incorrect depending on the driving environments and the levels of positioning accuracy of the navigation system.	This is not a malfunction. Drive the vehicle for a while to automatically correct the position and direction of the vehicle icon.
When the vehicle is traveling on a new road, the vehicle icon is located on another road nearby.	Because the new road is not stored in the map data, the system automatically places the vehicle icon on the nearest road available.	Updated road information will be included in the next version of the map data.
The screen does not switch to the night screen even after turning on the headlights.	The daytime screen was set the last time the headlights were turned on.	Set the screen to the night screen mode using <Day/Night> when you turn on the headlights.
The map does not scroll even when the vehicle is moving.	The current location map screen is not displayed.	Press "MAP".
The vehicle icon is not displayed.	The current location map screen is not displayed.	Press "MAP".
The location of the vehicle icon is misaligned from the actual position.	When using tire chains or replacing the tires, speed calculations based on the speed sensor may be incorrect.	Drive the vehicle for a while [at approximately 30 km/h (19 MPH) for about 30 minutes] to automatically correct the vehicle icon position. If this does not correct the vehicle icon position, contact an NISSAN (INFINITI) dealer.
	The map data has a mistake or is incomplete (the vehicle icon position is always misaligned in the same area).	Updated road information will be included in the next version of the map data.

### RELATED TO ROUTE CALCULATION AND VISUAL GUIDANCE

Symptom	Possible cause	Possible solution
Waypoints are not included in the auto reroute calculation.	Waypoints that you have already passed are not included in the auto reroute calculation.	If you want to go to that waypoint again, you need to edit the route.
Route information is not displayed.	Route calculation has not yet been performed.	Set the destination and perform route calculation.
	You are not driving on the suggested route.	Drive on the suggested route.
	Route guidance is set to off.	Turn on route guidance.
	Route information is not provided for certain types of roads (roads displayed in gray).	This is not a malfunction.



## NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

Symptom	Possible cause	Possible solution
The auto reroute calculation (or detour calculation) suggests the same route as the one previously suggested.	Route calculations took priority conditions into consideration, but the same route was calculated.	This is not a malfunction.
A waypoint cannot be added.	Five waypoints are already set on the route, including ones that you have already passed.	A maximum of 5 waypoints can be set on the route. If you want to go to 6 or more waypoints, perform route calculations multiple times as necessary.
The suggested route is not displayed.	Roads near the destination cannot be calculated.	Reset the destination to a main or ordinary road, and recalculate the route.
	The starting point and destination are too close.	Set a more distant destination.
	The starting point and destination are too far away.	Divide your trip by selecting one or two intermediate destinations, and perform route calculations multiple times.
	There are time restricted roads (by the day of the week, by time) near the current vehicle location or destination.	Set [Use Time Restricted Roads] to off.
The part of the route that you have already passed is deleted.	A route is managed by sections between waypoints. If you passed the first waypoint, the section between the starting point and the waypoint is deleted. (It may not be deleted depending on the area.)	This is not a malfunction.
An indirect route is suggested.	If there are restrictions (such as one-way streets) on roads close to the starting point or destination, the system may suggest an indirect route.	Adjust the location of the starting of the starting point or destination.
	The system may suggest an indirect route because route calculation does not take into consideration some areas such as narrow streets (gray roads.)	Reset the destination to a main or ordinary road, and recalculate the route.
The landmark information does not correspond to the actual information.	This may be caused by insufficient or incorrect map data.	Updated information will be included in the next version of the data.
The suggested route does not exactly connect to the starting point, waypoints, or destination.	There is no data for route calculation closes to these locations.	Set the starting point, waypoints and destination on a main road, and perform route calculation.

### RELATED TO VOICE GUIDANCE

Symptom	Possible cause	Possible solution
Voice guidance is not available	Voice guidance is only available at certain intersections marked with? In some case, voice guidance is not available even when the vehicle should make a turn.	This is not a malfunction.
	The vehicle has deviated from the suggested route.	Go back to the suggested route or request route calculation again
	Voice guide is set to off.	Turn on voice guidance.
	Route guidance is set to off.	Turn on voice guidance.
The guidance contact does not correspond to the actual condition.	The contact of voice guidance may vary, depending on the types of intersections at which turn are made.	Follow all traffic rules and regulations.

### RELATED TO TRAFFIC INFORMATION

## NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[BOSE AUDIO WITH NAVIGATION]

Symptom	Possible cause	Possible solution
The traffic information is not displayed	The traffic information is not set to on.	Set the traffic information to on.
	You are in an area where traffic information is not available	Scroll to an area where traffic information is available
	You have not subscribed to XM NavTraffic or, your subscription to XM NavTraffic has expired.	Check your subscription status of XM NavTraffic.
	The map scale is set at a level where the display of icons is impossible.	Check that the map scale is set at a level in which the display of icons is possible.
With the automatic detour route search ON, no detour route is set to avoid congested areas.	There is no faster route compared to the current route, based on the road network and traffic information.	The automatic detour search is not intended for avoiding traffic jams. It searches for the fastest route taking into consideration such things as traffic jams.
The route does not avoid road section with traffic information stating it is closed due to road construction.	The navigation system is designed not to avoid this event because the actual period of closure may differ from the declared roadwork period.	Observe the actual road condition and follow the instructions on road for detour when necessary. If the road closure is for certain, use detour function and set the detour distance to avoid the closed road section.
Traffic information displayed differs from information from other media (e.g. radio).	Other media may use different information sources.	Observe the actual road conditions and regulations. Always observe safe driving practices and follow all traffic regulations.

# AV CONTROL UNIT

< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

## REMOVAL AND INSTALLATION

### AV CONTROL UNIT

#### Exploded View

INFOID:000000006709277

#### CAUTION:

- Before replacing AV control unit, perform "READ CONFIGURATION" to save or print current vehicle specification. For details, refer to [AV-203, "CONFIGURATION \(AV CONTROL UNIT\) : Special Repair Requirement"](#).
- Remove battery terminal and AV control unit after a lapse of 30 seconds or more after turning the ignition switch OFF.


#### NOTE:

After the ignition switch is turned OFF, the AV control unit continues operating for approximately 30 seconds. Therefore, data corruption may occur if battery voltage is cut off within 30 seconds.

#### REMOVAL

Refer to [IP-14, "Exploded View"](#).

#### DISASSEMBLY

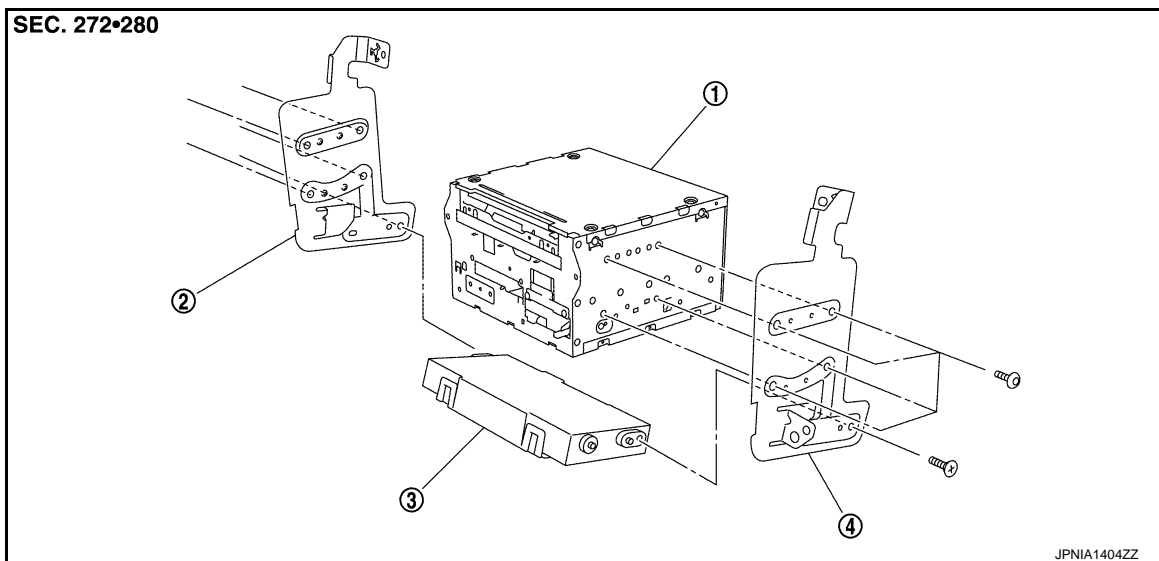

1. AV control unit
2. Bracket LH
3. A/C auto amp.
4. Bracket RH

#### Removal and Installation

INFOID:000000006709278

#### REMOVAL

#### CAUTION:

- Before replacing AV control unit, perform "READ CONFIGURATION" to save or print current vehicle specification. For details, refer to [AV-202, "CONFIGURATION \(AV CONTROL UNIT\) : Description"](#).
- Remove battery terminal and AV control unit after a lapse of 30 seconds or more after turning the ignition switch OFF.

#### NOTE:

After the ignition switch is turned OFF, the AV control unit continues operating for approximately 30 seconds. Therefore, data corruption may occur if battery voltage is cut off within 30 seconds.

1. Remove preset switch. Refer to [AV-280, "Exploded View"](#)
2. Remove AV control unit with A/C auto amp. as a single unit from the body.
3. Remove bracket screws, and then remove AV control unit.

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M

AV

O  
P

## AV CONTROL UNIT

< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

---

**CAUTION:**

- Since AV control unit connector and unified meter and A/C amp. connector have the same form, be careful not to insert them wrongly.
- Be sure to perform “WRITE CONFIGURATION” when replacing AV control unit.

# FRONT DISPLAY UNIT

< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

## FRONT DISPLAY UNIT

### Exploded View

INFOID:000000006709279

Refer to [IP-14, "Exploded View"](#).

### Removal and Installation

INFOID:000000006709280

#### REMOVAL

1. Remove cluster lid D. Refer to [IP-14, "Exploded View"](#).
2. Remove front display unit with bracket as a single unit.

#### INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

## FRONT DOOR SPEAKER


< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

### FRONT DOOR SPEAKER

#### Exploded View

INFOID:000000006709281

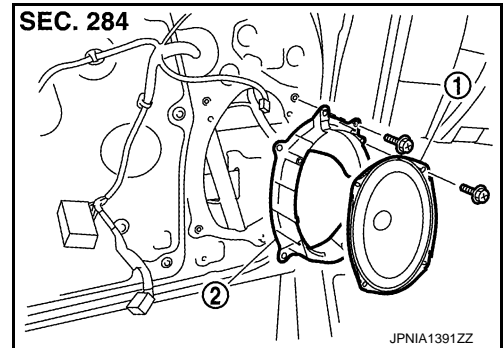

1. Front door speaker
2. Speaker bracket

#### Removal and Installation

INFOID:000000006709282

##### REMOVAL

1. Remove door finisher. Refer to [INT-15. "Exploded View"](#) (coupe models) or [INT-47. "Exploded View"](#) (roadster models).
2. Remove front door speaker screws, then disconnect front door speaker connector and remove front door speaker.

##### INSTALLATION

Install in the reverse order of removal.

# TWEETER


< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

## TWEETER

### Exploded View

INFOID:000000006709283

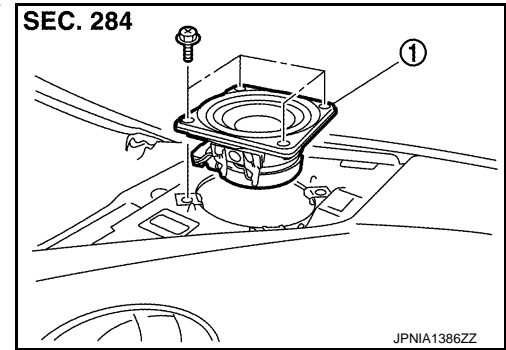

1. Tweeter

### Removal and Installation

INFOID:000000006709284

#### REMOVAL

1. Remove speaker grille. Refer to [JP-14, "Exploded View"](#).
2. Remove tweeter screws, then lift up tweeter, disconnect connector and remove tweeter.

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

## REAR SPEAKER


< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

### REAR SPEAKER

#### Exploded View

INFOID:000000006709285

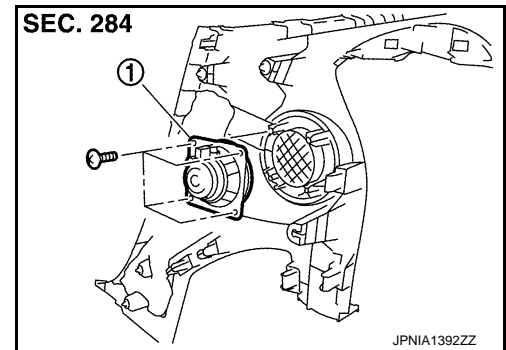

1. Rear speaker

#### Removal and Installation

INFOID:000000006709286

##### REMOVAL

1. Remove rear side finisher. Refer to [INT-18. "Exploded View"](#) (coupe models) or [INT-51. "Exploded View"](#) (roadster models).
2. Remove rear speaker screws, then remove rear speaker.

##### INSTALLATION

Install in the reverse order of removal.



# WOOFER


< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

## WOOFER

### Exploded View

INFOID:000000006709287

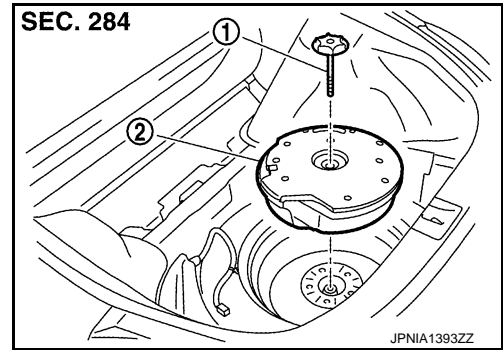

1. Clamp
2. Woofer

### Removal and Installation

INFOID:000000006709288

#### REMOVAL

1. Remove luggage spacer. Refer to [INT-31. "Exploded View"](#).
2. Remove clamp, then disconnect woofer connector and remove the woofer.

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

## REAR WOOFER

### Removal and Installation

INFOID:000000006709289

#### REMOVAL

1. Remove the mounting clip on the front side of the storage room finisher and the soft top bumper rubber. Refer to [RF-233, "STORAGE ROOM FINISHER : Removal and Installation"](#).
2. Turn up the storage room finisher to obtain work space.
3. Remove rear woofer bracket.
4. Remove the screw and disconnect the connector to remove the rear woofer.

#### INSTALLATION


Install in the reverse order of removal.

## BOSE AMP. COUPE

### COUPE : Exploded View


INFOID:000000006709290

#### REMOVAL

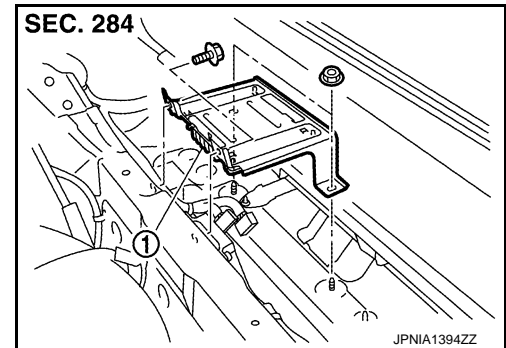

1. BOSE amp.

#### DISASSEMBLY

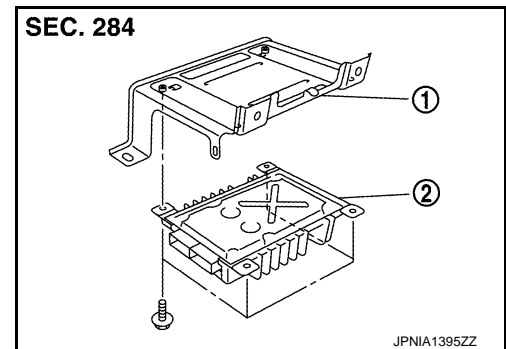

1. Bracket
2. BOSE amp.

### COUPE : Removal and Installation

INFOID:000000006709291

#### REMOVAL

1. Remove luggage floor spacer front. Refer to [INT-31. "Exploded View"](#).
2. Disconnect BOSE amp. connector, remove BOSE amp. with bracket as a single unit from body.
3. Remove BOSE amp. bracket screws to remove BOSE amp.

#### INSTALLATION

Install in the reverse order of removal.

## ROADSTER

### ROADSTER : Removal and Installation

INFOID:000000006709292

#### REMOVAL

1. Remove the mounting clip on the front side of the storage room finisher and the soft top bumper rubber. Refer to [RF-233. "STORAGE ROOM FINISHER : Removal and Installation"](#).
2. Turn up the storage room finisher to obtain work space.
3. Remove storage room spacer. Refer to [RF-233. "STORAGE ROOM FINISHER : Exploded View"](#).
4. Disconnect BOSE amp. connector, remove BOSE amp. with bracket as a single unit from body.
5. Remove BOSE amp. bracket screws to remove BOSE amp.

#### INSTALLATION

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

## **BOSE AMP.**

< REMOVAL AND INSTALLATION >

**[BOSE AUDIO WITH NAVIGATION]**

---

Install in the reverse order of removal.

# ANTENNA AMP.


< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

## ANTENNA AMP.

### Exploded View

INFOID:000000006709293

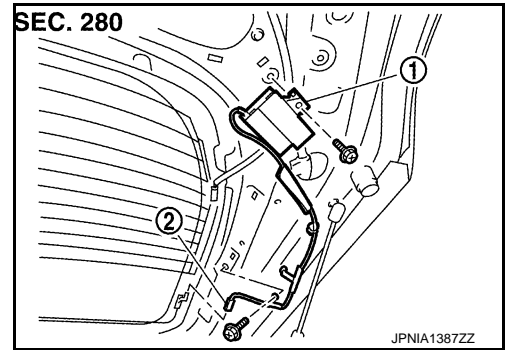

1. Antenna amp.
2. Connector

### Removal and Installation

INFOID:000000006709294

#### REMOVAL

1. Remove back door finisher side. Refer to [INT-33, "Exploded View"](#).
2. Disconnect connector and remove screw, then remove antenna amp.

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

AV

# ANTENNA BASE


< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

## ANTENNA BASE

### Exploded View

INFOID:000000006709295

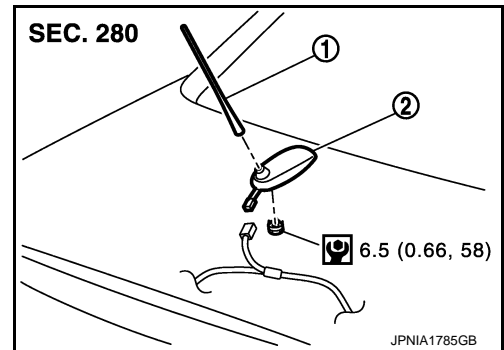

1. Antenna rod
2. Antenna base

Refer to [GI-4, "Components"](#) for symbols in the figure.

### Removal and Installation

INFOID:000000006709296

#### REMOVAL

1. Remove trunk lid finisher inner. Refer to [INT-79, "Exploded View"](#).
2. Remove antenna base mounting nut, disconnect the antenna base connector.
3. Remove antenna base.

#### INSTALLATION

Installation is the reverse order of removal.

#### **CAUTION:**

**Be careful about tightening torque. Antenna sensitivity becomes poor, and when it is excessive, trunk lid panel may be deformed, when antenna base mounting nut tightening torque is loose.**

# MULTIFUNCTION SWITCH

< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

## MULTIFUNCTION SWITCH


### Exploded View

INFOID:000000006709297

#### REMOVAL

Refer to [IP-14, "Exploded View"](#).

#### DISASSEMBLY

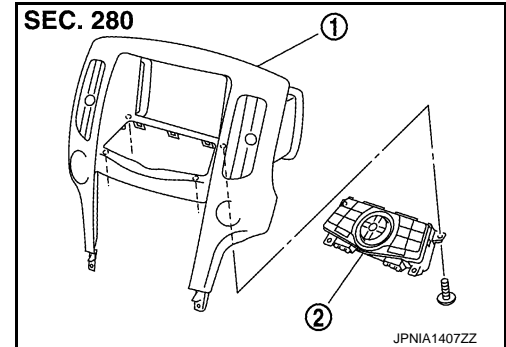

1. Cluster lid C
2. Multifunction switch

### Removal and Installation

INFOID:000000006709298

#### REMOVAL

1. Remove cluster lid C. Refer to [IP-14, "Exploded View"](#).
2. Remove multifunction switch screws, then remove multifunction switch from cluster lid C.

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

# PRESET SWITCH

< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

## PRESET SWITCH


### Exploded View

INFOID:000000006709299

#### REMOVAL

Refer to [IP-14, "Exploded View"](#).

#### DISASSEMBLY

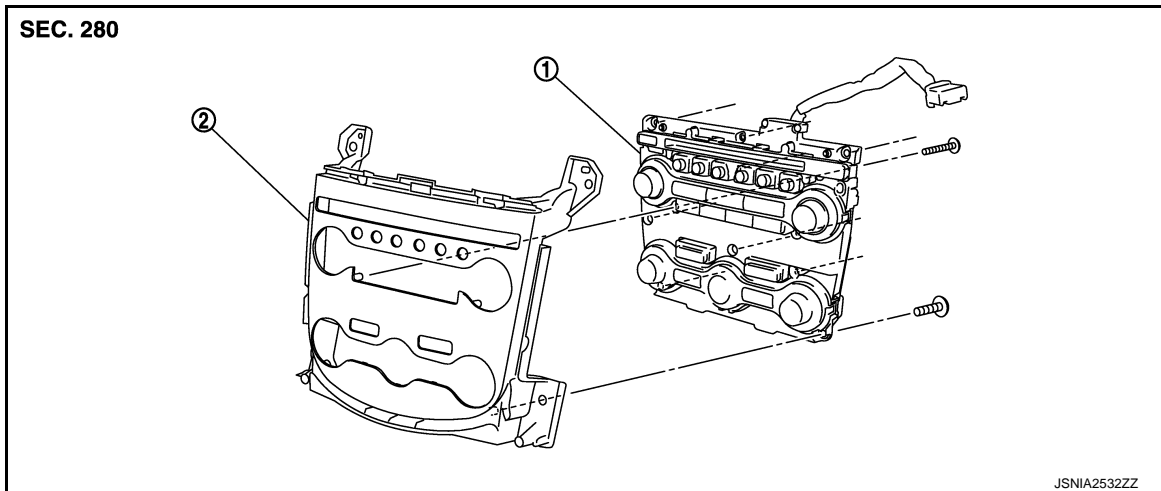

1. Preset switch


2. Cluster lid C finisher

### Removal and Installation

INFOID:000000006709300

#### REMOVAL

1. Remove cluster lid C. Refer to [IP-14, "Exploded View"](#).
2. Remove preset switch with cluster lid C finisher as a single unit from the body.
3. Remove preset switch screws (A) (B) to remove preset switch (1) from cluster lid C finisher.

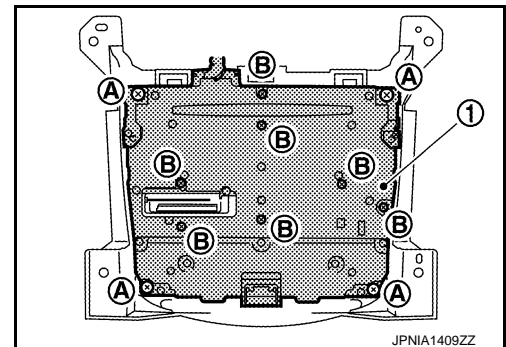

#### INSTALLATION

Install in the reverse order of removal.



# STEERING SWITCH

< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

## STEERING SWITCH

### Exploded View

INFOID:000000006709301

Refer to [SR-14, "Exploded View"](#) .

### Removal and Installation

INFOID:000000006709302

#### REMOVAL

Refer to [SR-14, "Exploded View"](#).

#### INSTALLATION

Install in the reverse order of removal.

A

B

C

D

E

F

G

H

I

J

K

L

M

AV

O

P

## USB CONNECTOR

### Removal and Installation

INFOID:000000006709303

#### REMOVAL

1. Remove center console. Refer to [IP-25. "Exploded View"](#).
2. Push the pawl from the back of center console to remove USB connector.

#### INSTALLATION

Install in the reverse order of removal.

# AUXILIARY INPUT JACKS

< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

## AUXILIARY INPUT JACKS


### Exploded View

INFOID:000000006709304

#### REMOVAL

Refer to [IP-25, "Exploded View"](#).

#### DISASSEMBLY

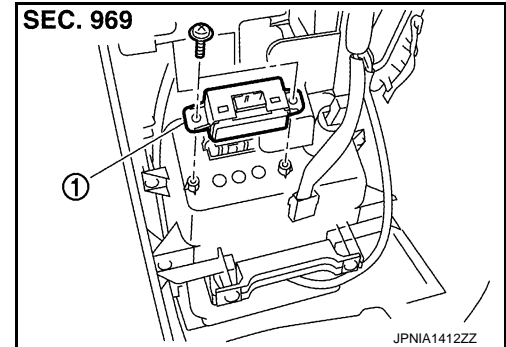

1. Auxiliary input jacks

### Removal and Installation

INFOID:000000006709305

#### REMOVAL

1. Remove center console. Refer to [IP-25, "Exploded View"](#).
2. Remove screws to remove auxiliary input jacks from the center console.

#### INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
O  
P

AV

## MICROPHONE


### Exploded View

INFOID:000000006709306

### REMOVAL

Refer to [INL-54, "Exploded View"](#) (Coupe models) or [INL-118, "Exploded View"](#) (Roadster models).

### DISASSEMBLY

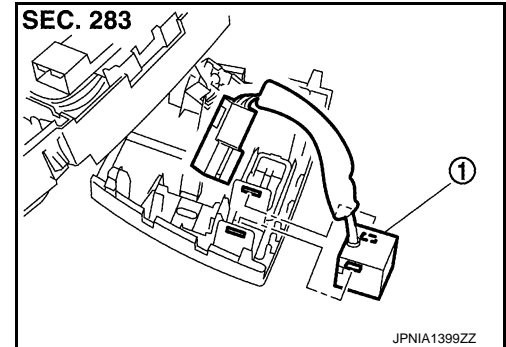

1. Microphone

### Removal and Installation

INFOID:000000006709307

### REMOVAL

1. Remove map lamp. Refer to [INL-54, "Exploded View"](#) (coupe models), or [INL-118, "Exploded View"](#) (roadster models).
2. Press the pawl to remove microphone from map lamp.

### INSTALLATION

Install in the reverse order of removal.

# GPS ANTENNA

< REMOVAL AND INSTALLATION >


[BOSE AUDIO WITH NAVIGATION]

## GPS ANTENNA

### Feeder Layout

INFOID:000000006709308

### COUPE MODELS

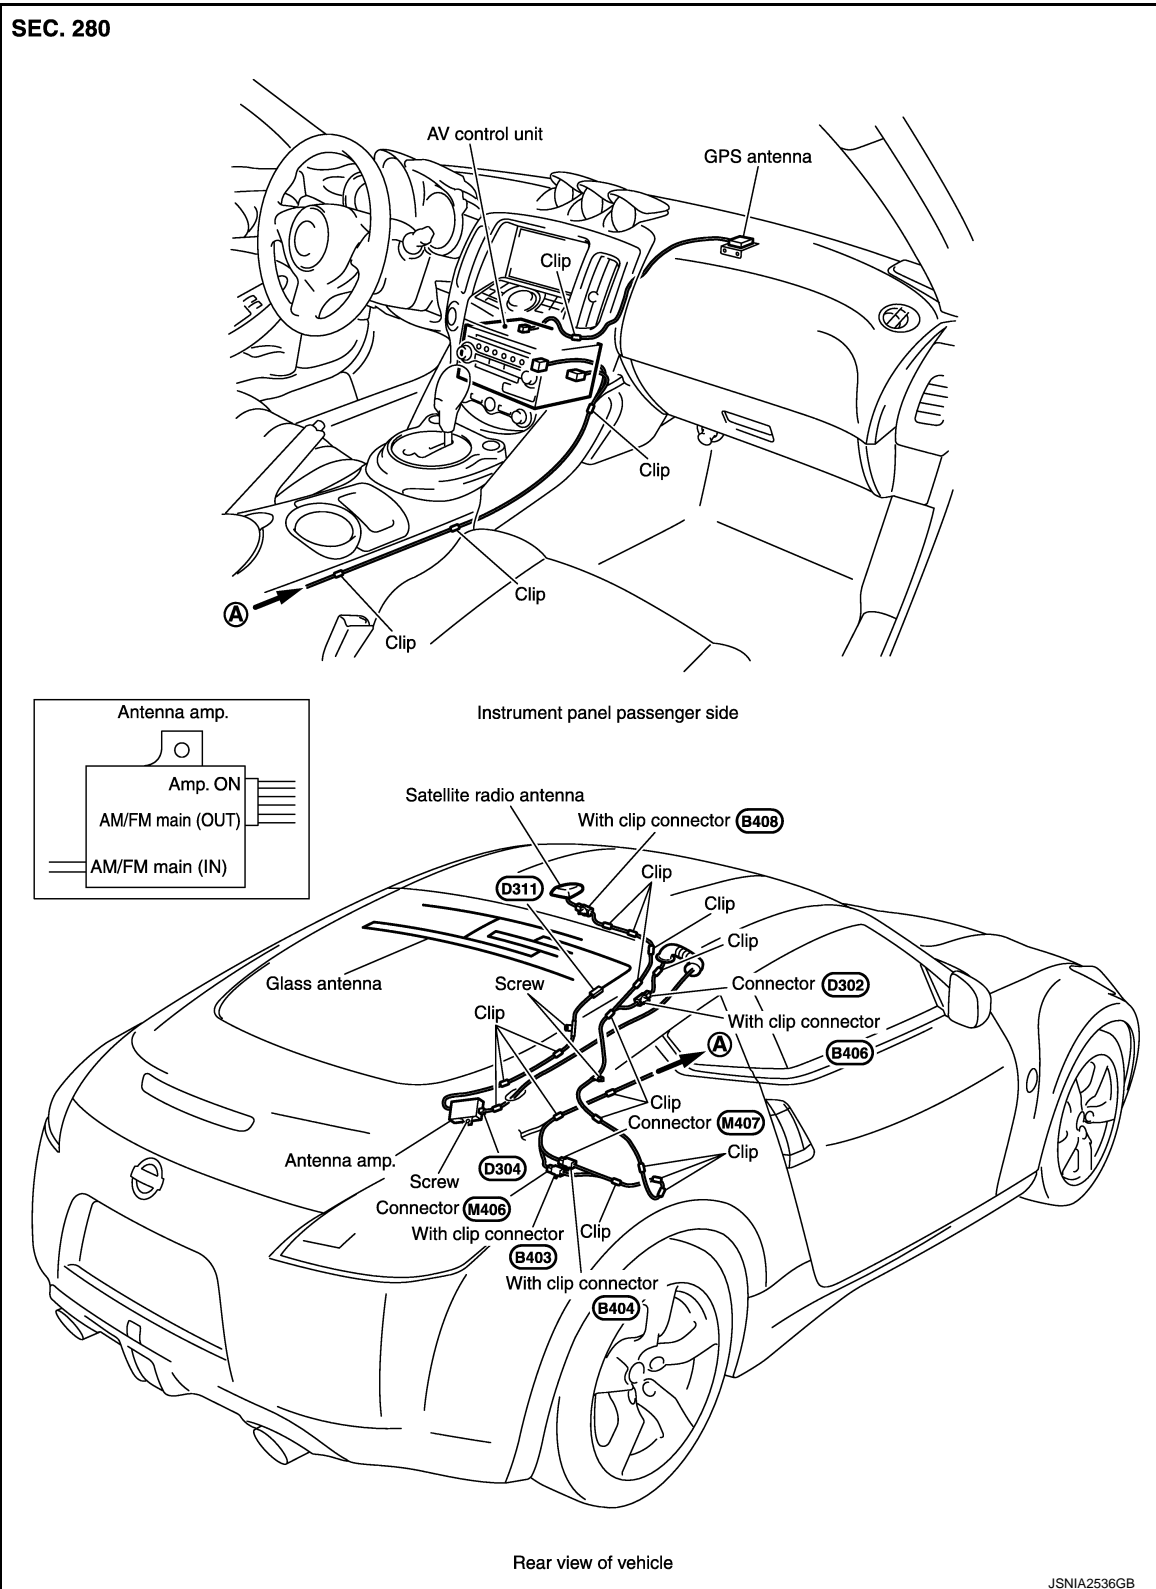

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P


AV

# GPS ANTENNA

< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

ROADSTER MODELS

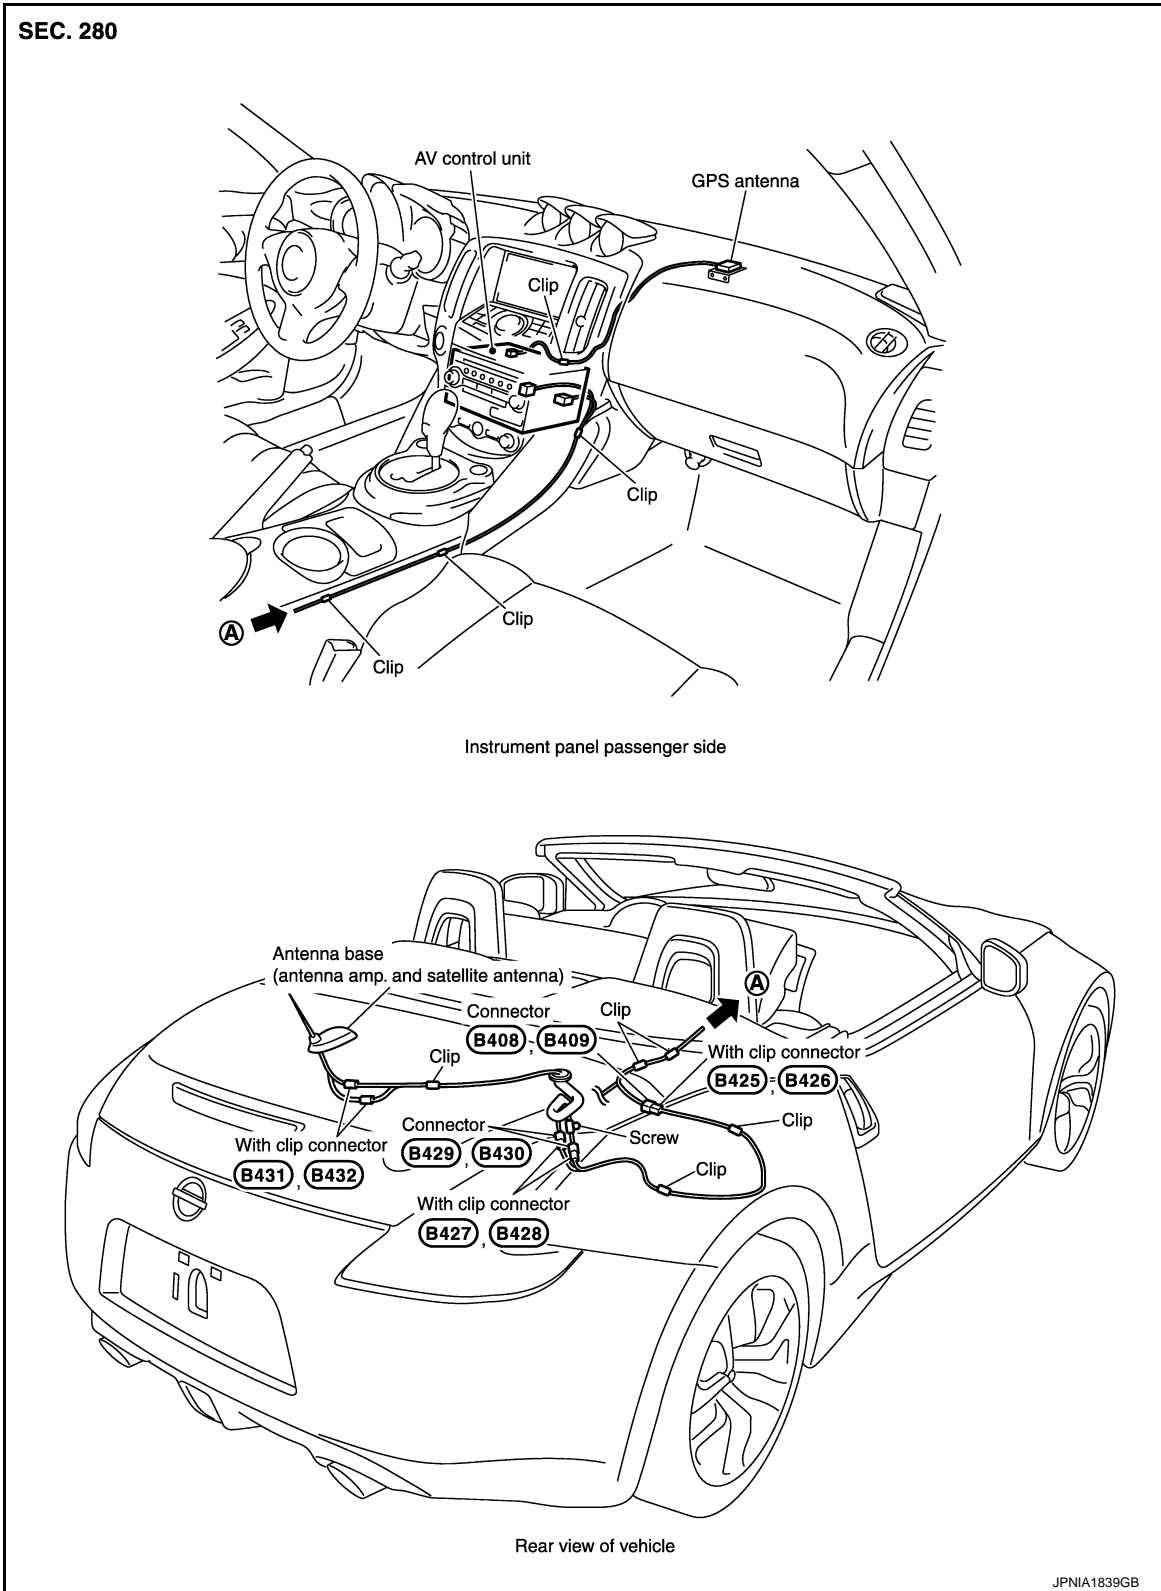

## Removal and Installation

INFOID:000000006709309

### REMOVAL


1. Remove installment panel. Refer to [JP-14, "Exploded View"](#).

# GPS ANTENNA

## < REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

2. Remove screw to remove GPS antenna (1) from instrument panel.

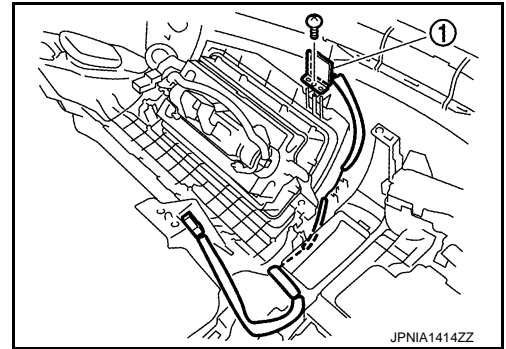

## INSTALLATION

Install in the reverse order of removal.

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

# SATELLITE RADIO ANTENNA


< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

## SATELLITE RADIO ANTENNA

### Exploded View

INFOID:000000006709310

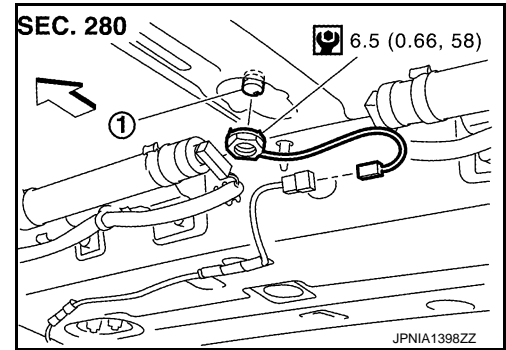

1. Satellite radio antenna

⇐ : Vehicle front

Refer to [GI-4, "Components"](#) for symbols in the figure.

### Removal and Installation

INFOID:000000006709311

#### REMOVAL

1. Remove rear pillar finisher (LH/RH). Refer to [INT-18, "Exploded View"](#).
2. Pull down headlining (rear side) and obtain space for work between vehicle and headlining. Refer to [INT-28, "Exploded View"](#).
3. Disconnect satellite radio antenna connector.
4. Remove satellite radio antenna mounting nut, then remove satellite radio antenna from roof panel.

#### INSTALLATION

Install in the reverse order of removal.

#### CAUTION:

- Never bend headlining when pull down headlining (rear side).
- When satellite radio antenna mounting nut tightening torque is loose, be careful about tightening torque. Antenna sensitivity becomes poor, and when it is excessive, roof panel may become deformed.



## REAR VIEW CAMERA

### Removal and Installation

INFOID:000000006710601

#### REMOVAL

1. Remove license plate lamp bracket. Refer to [EXT-17, "Removal and Installation"](#).
2. Remove rear camera mounting screws to remove rear camera.

#### INSTALLATION

Install in the reverse order of removal.

**NOTE:**


Adjust the guide line position if the guide line position is shifted after installing the rear view camera. Refer to [AV-289, "Adjustment"](#).

#### Adjustment

INFOID:000000006710602

Adjust the guide line position if the guide line position is shifted after installing the rear view camera.

1. Draw lines on rearward area of the vehicle passing through the following points: 200 mm (7.87 in) from both sides of the vehicle, and 0.5 m (1.64 ft), 1.0 m (3.28 ft) from the rear end of the bumper.
2. Set into "Adjust offset of rear view camera" mode of Confirmation / Adjustment mode.

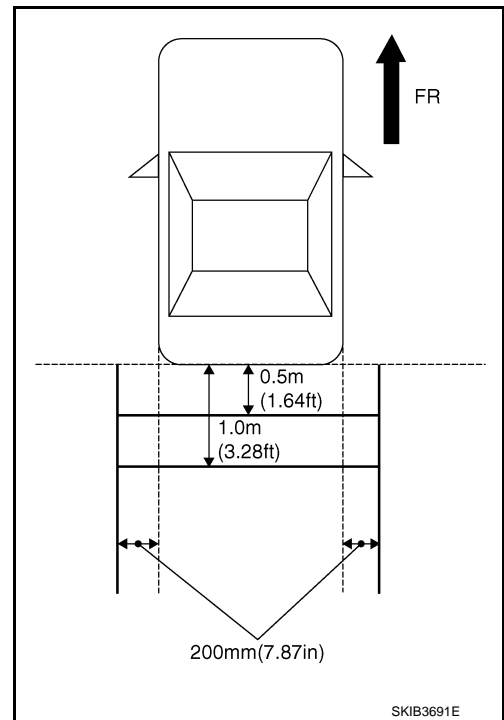


3. Rotate the center dial, and then select the guiding line pattern so that its angle is aligned with the correction line of the rear of the vehicle.

Selected pattern : (-10°) – (10°)

4. Make fine adjustment to the correction line of the rear of the vehicle with up/down/left/right switches so that its position is aligned with the guiding line. Press "OK" switch and record the adjusted guiding line position to the camera control unit.

Up/Down adjustment range : (-10°) – (10°)

Left/Right adjustment range : (-10°) – (10°)

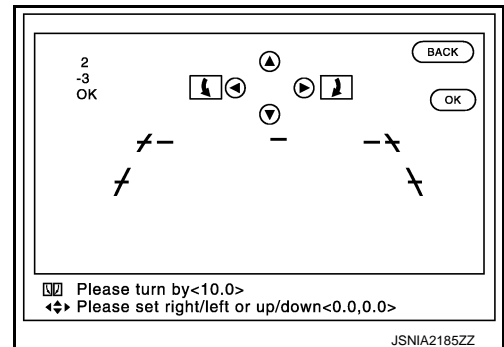

**CAUTION:**

**Never operate other function such as pressing BACK while writing index data.**

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
AV  
O  
P

# STEERING ANGLE SENSOR

< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]

---

## STEERING ANGLE SENSOR

### Removal and Installation

INFOID:000000006710603

#### REMOVAL

1. Remove the spiral cable. Refer to [SR-17, "Removal and Installation"](#).
2. Remove the screws to remove the steering angle sensor from the spiral cable.

#### INSTALLATION

Install in the reverse order of removal.

# ANTENNA FEEDER

< REMOVAL AND INSTALLATION >


[BOSE AUDIO WITH NAVIGATION]

## ANTENNA FEEDER

### COUPE

### COUPE : Feeder Layout

INFOID:000000006709312

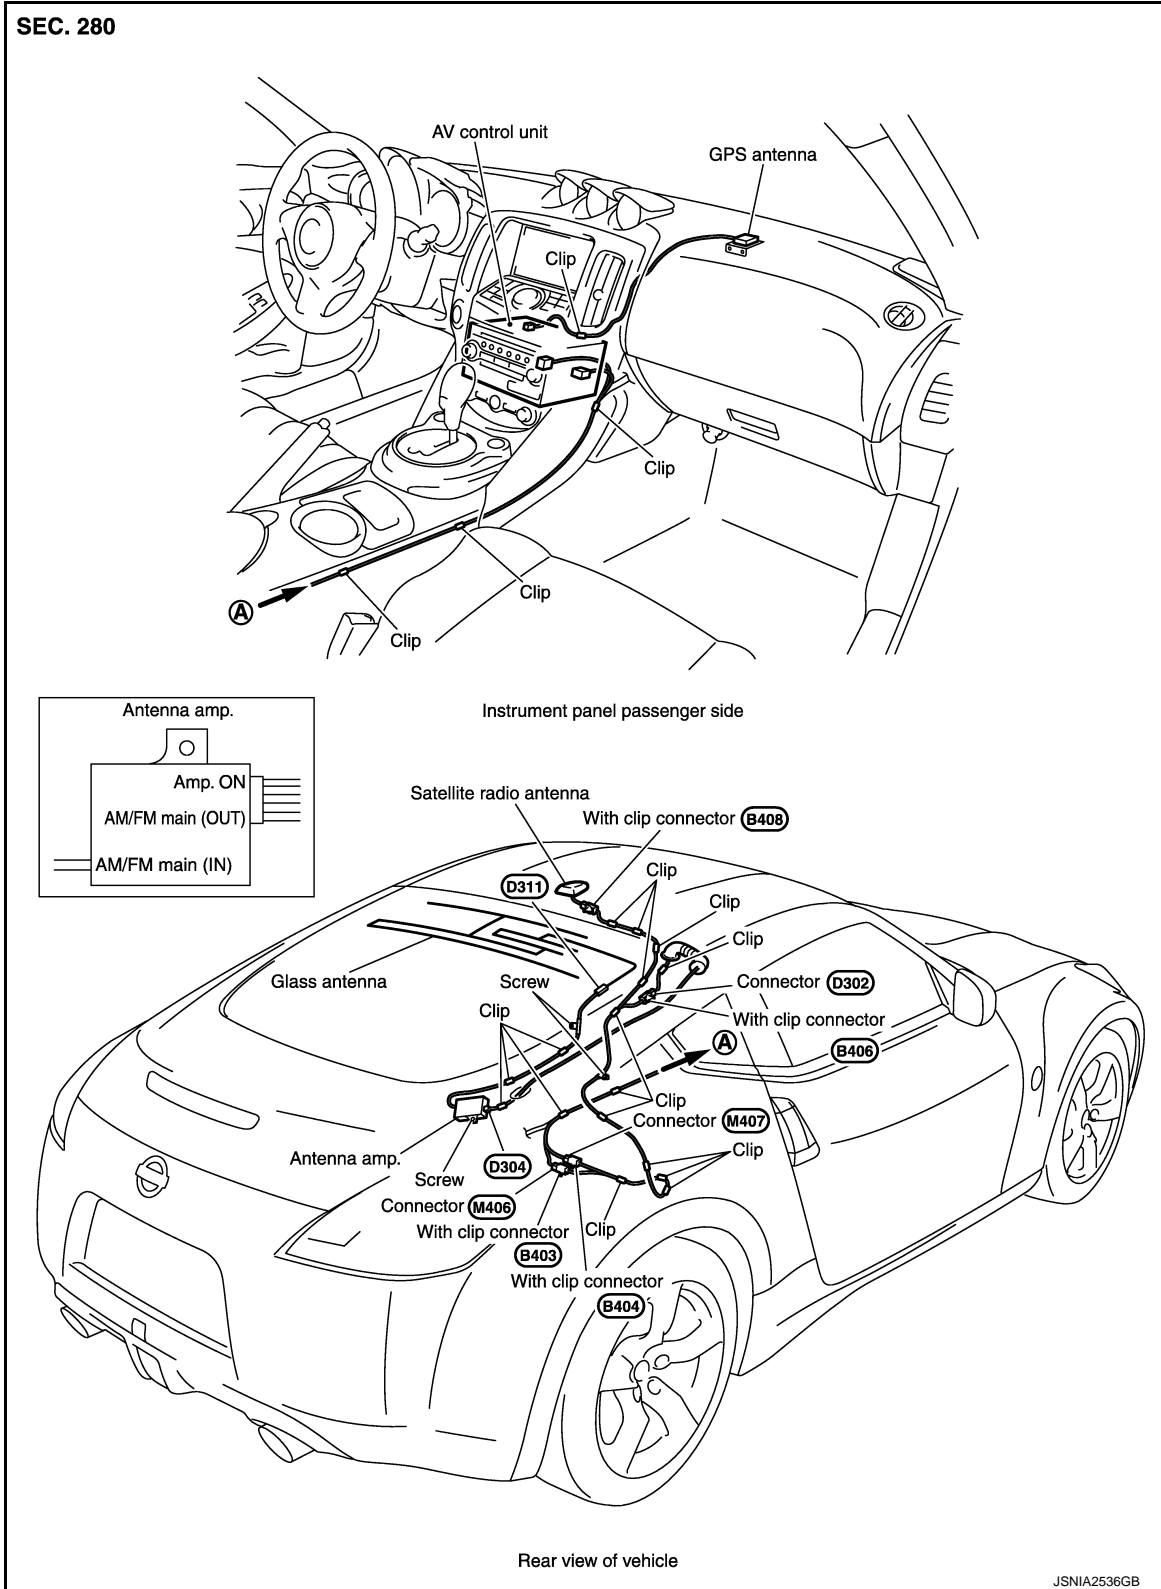

A  
B  
C  
D  
E  
F  
G  
H  
I  
J  
K  
L  
M  
N  
O  
P

AV

### ROADSTER

# ANTENNA FEEDER


< REMOVAL AND INSTALLATION >

[BOSE AUDIO WITH NAVIGATION]


## ROADSTER : Feeder Layout

INFOID:00000006709313

SEC. 280

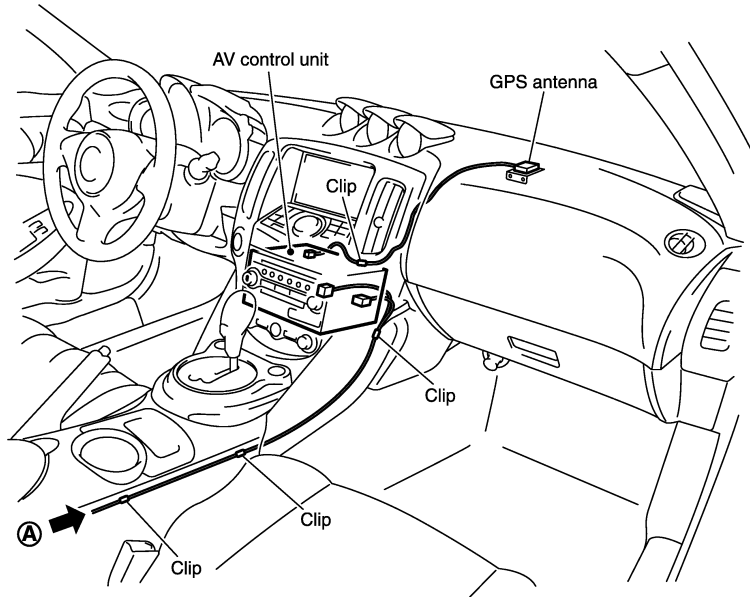

Instrument panel passenger side

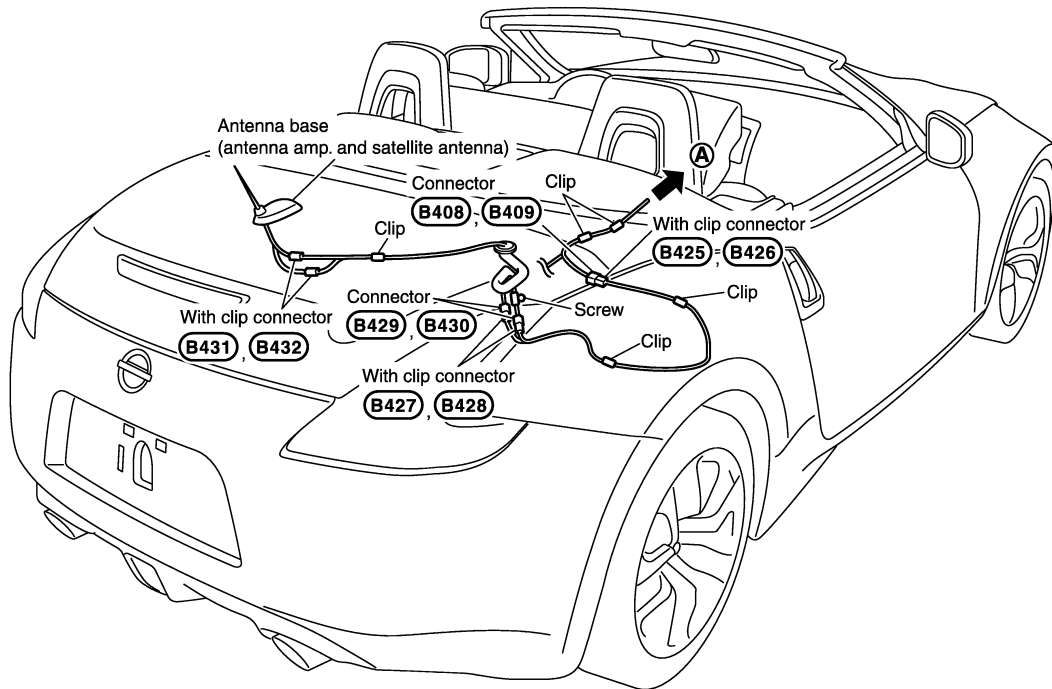

Rear view of vehicle

JPNIA1839GB