

D

Е

F

Н

HAC

J

Κ

L

Ν

0

Р

HEATER & AIR CONDITIONING CONTROL SYSTEM

CONTENTS

WITHOUT 7 INCH DISPLAY	E
BASIC INSPECTION	5
DIAGNOSIS AND REPAIR WORK FLOW Work Flow	5
INSPECTION AND ADJUSTMENT Description & Inspection Temperature Setting Trimmer Foot Position Setting Trimmer Inlet Port Memory Function (FRE) 1 Inlet Port Memory Function (REC)	8 9 9 0
SYSTEM DESCRIPTION1	2
COMPRESSOR CONTROL FUNCTIONDescription1Fail-safe1Component Parts Location1Component Description1	2 3 E 3
AUTOMATIC AIR CONDITIONING SYSTEM1	
System Diagram	5 E
DIAGNOSIS SYSTEM (HVAC)2 CONSULT Function2	
DTC/CIRCUIT DIAGNOSIS2	_
U1000 CAN COMM CIRCUIT 2 Description 2 DTC Logic 2 Diagnosis Procedure 2	7 7
U1010 CONTROL UNIT (CAN) 2 Description 2 DTC Logic 2	8
Diagnosis Procedure 2	

B257B, B257C AMBIENT SENSOR 29 Description 29 DTC Logic 29 Diagnosis Procedure 30 Component Inspection 31
B2578, B2579 IN-VEHICLE SENSOR 32 Description 32 DTC Logic 32 Diagnosis Procedure 33 Component Inspection 34
B2581, B2582 INTAKE SENSOR 35 Description 35 DTC Logic 35 Diagnosis Procedure 35 Component Inspection 36
B2630, B2631 SUNLOAD SENSOR 38 Description 38 DTC Logic 38 Diagnosis Procedure 38 Component Inspection 39
B2632, B2633 AIR MIX DOOR MOTOR PBR41 Description
B2636, B2637, B2638, B2639, B2654, B2655 MODE DOOR MOTOR 43 Description 43 DTC Logic 43 Diagnosis Procedure 44
B263D, B263E, B263F INTAKE DOOR MO- TOR

A/C AUTO AMP	47	EXCEPT FOR MEXICO	76
A/C AUTO AMP. : Diagnosis Procedure		EXCEPT FOR MEXICO : Precaution for Supple-	
· ·		mental Restraint System (SRS) "AIR BAG" and	
A/C CONTROL		"SEAT BELT PRE-TENSIONER"	76
A/C CONTROL : Diagnosis Procedure	47	EXCEPT FOR MEXICO: Precaution for Battery	
DOOR MOTOR COMMUNICATION CIRCU	IT 49	Service	76
Description		FOR MEXICO	76
Diagnosis Procedure		FOR MEXICO : Precaution for Supplemental Re-	
•		straint System (SRS) "AIR BAG" and "SEAT BELT	
A/C CONTROL SIGNAL CIRCUIT		PRE-TENSIONER"	76
Diagnosis Procedure	51	FOR MEXICO : Precaution for Battery Service	
A/C AUTO AMP	52		
Description		REMOVAL AND INSTALLATION	78
Component Function Check		A/C CONTROL	70
Diagnosis Procedure		A/C CONTROL	/8
		BASE AUDIO	78
BLOWER MOTOR		BASE AUDIO: Exploded View	78
Description		BASE AUDIO: Removal and Installation	78
Component Function Check			
Diagnosis Procedure		BOSE AUDIO WITHOUT NAVIGATION	
Component Inspection	55	BOSE AUDIO WITHOUT NAVIGATION : Explod-	
MAGNET CLUTCH	57	ed ViewBOSE AUDIO WITHOUT NAVIGATION : Remov-	
Description		al and Installation	
Component Function Check		ai and installation	19
Diagnosis Procedure		A/C AUTO AMP	80
-			
ECV (ELECTRICAL CONTROL VALVE)		BASE AUDIO	
Description		BASE AUDIO : Exploded View	
Diagnosis Procedure	59	BASE AUDIO : Removal and Installation	80
ECU DIAGNOSIS INFORMATION	61	BOSE AUDIO WITHOUT NAVIGATION	80
ECO DIAGNOSIO INI ORMATION	01	BOSE AUDIO WITHOUT NAVIGATION: Explod-	
A/C AUTO AMP	61	ed View	
Reference Value	61	BOSE AUDIO WITHOUT NAVIGATION: Remov-	
Wiring Diagram - AUTOMATIC AIR CONDITION	DN-	al and Installation	81
ING SYSTEM	64	AMDIENT CENCOD	
Fail-safe		AMBIENT SENSOR	
DTC Inspection Priority Chart		Exploded ViewRemoval and Installation	
DTC Index	66	Removal and installation	82
SYMPTOM DIAGNOSIS	60	IN-VEHICLE SENSOR	83
STWIFTOW DIAGNOSIS	00	Exploded View	
AUTOMATIC AIR CONDITIONING SYSTE	M 68	Removal and Installation	
Diagnosis Chart By Symptom		OUNI OAD OFNOOD	
		SUNLOAD SENSOR	
INSUFFICIENT COOLING		Exploded View	
Description		Removal and Installation	84
Diagnosis Procedure	69	INTAKE SENSOR	85
INSUFFICIENT HEATING	71	Exploded View	
Description		Removal and Installation	
Diagnosis Procedure			
Diagnosis i 1000uule	/ 1	REFRIGERANT PRESSURE SENSOR	
NOISE	74	Exploded View	
Description	74	Removal and Installation	87
Diagnosis Procedure	74	DOOR MOTOR	00
DDECAUTION		Exploded View	
PRECAUTION	76	LAPIOUEU VIEW	00
PRECAUTIONS	76	INTAKE DOOR MOTOR	88

А	C

INTAKE DOOR MOTOR: Removal and Installa-	Component Inspection	120
tion88	B2581, B2582 INTAKE SENSOR	121
MODE DOOR MOTOR89		
MODE DOOR MOTOR : Removal and Installation89	Description	
MODE DOOR MOTOR. Removal and installation89	DTC Logic	
AIR MIX DOOR MOTOR89	Diagnosis Procedure	121
AIR MIX DOOR MOTOR : Removal and Installa-	Component Inspection	122
tion	B2630, B2631 SUNLOAD SENSOR	124
WITH 7 INCH DISPLAY		
WITH / INCH DIST LAT	Description	
BASIC INSPECTION90	DTC Logic	
DAGIO INGI EGITOR IIIIIIIIIIIIII	Diagnosis Procedure	
DIAGNOSIS AND REPAIR WORK FLOW90	Component Inspection	125
Work Flow90	B2632, B2633 AIR MIX DOOR MOTOR PBR	127
	Description	
INSPECTION AND ADJUSTMENT93	DTC Logic	
Description & Inspection93	Diagnosis Procedure	
Temperature Setting Trimmer94	Diagnosis Procedure	120
Foot Position Setting Trimmer95	B2636, B2637, B2638, B2639, B2654, B2655	5
Inlet Port Memory Function (FRE)95	MODE DOOR MOTOR	120
Inlet Port Memory Function (REC)96	Description	
·		
SYSTEM DESCRIPTION97	DTC Logic	
	Diagnosis Procedure	130
COMPRESSOR CONTROL FUNCTION97	B263D, B263E, B263F INTAKE DOOR MO-	
Description97	TOR	131
Fail-safe97	Description	
Component Parts Location98	DTC Logic	
Component Description99	Diagnosis Procedure	
ALITOMATIC AID CONDITIONING OVOTEM 100	Diagnosis i locedule	132
AUTOMATIC AIR CONDITIONING SYSTEM100	POWER SUPPLY AND GROUND CIRCUIT	133
System Diagram		
System Description100	A/C AUTO AMP	
System Description		133
System Description100	A/C AUTO AMPA/C AUTO AMP. : Diagnosis Procedure	133 133
System Description	A/C AUTO AMPA/C AUTO AMP. : Diagnosis Procedure	133 133 Γ . 134
System Description	A/C AUTO AMP A/C AUTO AMP. : Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description	133 133 Γ . 134 134
System Description	A/C AUTO AMPA/C AUTO AMP. : Diagnosis Procedure	133 133 Γ . 134 134
System Description	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure	133 133 Γ . 134 134 134
System Description	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure	133 133 Г. 134 134 134
System Description	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description	133 133 Г. 134 134 136 136
System Description	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description Component Function Check	133 133 134 134 136 136
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description	133 133 134 134 136 136
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113 DTC Logic 113	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description Component Function Check Diagnosis Procedure	133 133 134 134 136 136 136
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113 DTC Logic 113 Diagnosis Procedure 113	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure	133 133 134 134 136 136 136 136
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113 DTC Logic 113	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure	133 133 134 134 136 136 136 137
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113 DTC Logic 113 Diagnosis Procedure 113	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description Component Function Check Diagnosis Procedure BLOWER MOTOR Description Component Function Check	133 133 134 134 136 136 136 137 137
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113 DTC Logic 113 Diagnosis Procedure 113 U1010 CONTROL UNIT (CAN) 114	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description Component Function Check Diagnosis Procedure BLOWER MOTOR Description Component Function Check Diagnosis Procedure	133 133 134 134 136 136 136 136 137 137
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113 DTC Logic 113 Diagnosis Procedure 113 U1010 CONTROL UNIT (CAN) 114 Description 114	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description Component Function Check Diagnosis Procedure BLOWER MOTOR Description Component Function Check	133 133 134 134 136 136 136 136 137 137
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113 DTC Logic 113 Diagnosis Procedure 113 U1010 CONTROL UNIT (CAN) 114 DESCRIPTION 114 DTC Logic 114 DTC Logic 114 Diagnosis Procedure 114 Diagnosis Procedure 114	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description Component Function Check Diagnosis Procedure BLOWER MOTOR Description Component Function Check Diagnosis Procedure	133 133 134 134 136 136 136 137 137 137
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113 DTC Logic 113 Diagnosis Procedure 113 U1010 CONTROL UNIT (CAN) 114 Description 114 DTC Logic 114 DTC Logic 114 Diagnosis Procedure 114 B257B, B257C AMBIENT SENSOR 115	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description Component Function Check Diagnosis Procedure BLOWER MOTOR Description Component Function Check Diagnosis Procedure Component Function Check Diagnosis Procedure Component Inspection MAGNET CLUTCH	133 133 134 134 136 136 136 137 137 137 137
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113 DTC Logic 113 Diagnosis Procedure 113 U1010 CONTROL UNIT (CAN) 114 Description 114 DTC Logic 114 Diagnosis Procedure 114 B257B, B257C AMBIENT SENSOR 115 Description 115	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description Component Function Check Diagnosis Procedure BLOWER MOTOR Description Component Function Check Diagnosis Procedure Component Inspection MAGNET CLUTCH Description	133 133 134 134 136 136 136 137 137 137 137
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113 DTC Logic 113 Diagnosis Procedure 113 U1010 CONTROL UNIT (CAN) 114 Description 114 DTC Logic 114 DTC Logic 114 Diagnosis Procedure 114 B257B, B257C AMBIENT SENSOR 115	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description Component Function Check Diagnosis Procedure BLOWER MOTOR Description Component Function Check Diagnosis Procedure Component Inspection MAGNET CLUTCH Description Component Function Check	133133134134136136136137137137137137141
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113 DTC Logic 113 Diagnosis Procedure 113 U1010 CONTROL UNIT (CAN) 114 Description 114 DTC Logic 114 Diagnosis Procedure 114 B257B, B257C AMBIENT SENSOR 115 Description 115	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description Component Function Check Diagnosis Procedure BLOWER MOTOR Description Component Function Check Diagnosis Procedure Component Inspection MAGNET CLUTCH Description	133133134134136136136137137137137137141
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113 DTC Logic 113 Diagnosis Procedure 113 U1010 CONTROL UNIT (CAN) 114 DEScription 114 DTC Logic 114 Diagnosis Procedure 114 B257B, B257C AMBIENT SENSOR 115 Description 115 DTC Logic 115 DTC Logic 115	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description Component Function Check Diagnosis Procedure BLOWER MOTOR Description Component Function Check Diagnosis Procedure Component Inspection MAGNET CLUTCH Description Component Function Check Diagnosis Procedure	133133134134136136136137137137137131141141
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113 DTC Logic 113 Diagnosis Procedure 113 U1010 CONTROL UNIT (CAN) 114 DTC Logic 114 DTC Logic 114 Diagnosis Procedure 115 DEScription 115 DTC Logic 115 Diagnosis Procedure 115 Diagnosis Procedure 116 Component Inspection 117	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description Component Function Check Diagnosis Procedure BLOWER MOTOR Description Component Function Check Diagnosis Procedure Component Function Check Diagnosis Procedure Component Function Check Diagnosis Procedure Component Inspection MAGNET CLUTCH Description Component Function Check Diagnosis Procedure ECV (ELECTRICAL CONTROL VALVE)	133133134134136136136137137137139141141141
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113 DTC Logic 113 Diagnosis Procedure 113 U1010 CONTROL UNIT (CAN) 114 Description 114 DTC Logic 114 Diagnosis Procedure 115 DESCRIPTION 115 DTC Logic 115 Diagnosis Procedure 115 Diagnosis Procedure 116 Component Inspection 117 B2578, B2579 IN-VEHICLE SENSOR 118	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description Component Function Check Diagnosis Procedure BLOWER MOTOR Description Component Function Check Diagnosis Procedure Component Function Check Diagnosis Procedure Component Inspection MAGNET CLUTCH Description Component Function Check Diagnosis Procedure ECV (ELECTRICAL CONTROL VALVE) Description	133133134134136136136137137137139141141141141
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113 DTC Logic 113 Diagnosis Procedure 113 U1010 CONTROL UNIT (CAN) 114 Description 114 DTC Logic 114 Diagnosis Procedure 115 DEC Logic 115 Diagnosis Procedure 115 Diagnosis Procedure 116 Component Inspection 117 B2578, B2579 IN-VEHICLE SENSOR 118 Description 118	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description Component Function Check Diagnosis Procedure BLOWER MOTOR Description Component Function Check Diagnosis Procedure Component Inspection MAGNET CLUTCH Description Component Function Check Diagnosis Procedure ECV (ELECTRICAL CONTROL VALVE) Description Diagnosis Procedure	133133134134134136136137137137137139141141141141143143
System Description 100 Component Parts Location 109 Component Description 109 DIAGNOSIS SYSTEM (HVAC) 111 CONSULT Function 111 DTC/CIRCUIT DIAGNOSIS 113 U1000 CAN COMM CIRCUIT 113 Description 113 DTC Logic 113 Diagnosis Procedure 113 U1010 CONTROL UNIT (CAN) 114 Description 114 DTC Logic 114 Diagnosis Procedure 115 DESCRIPTION 115 DTC Logic 115 Diagnosis Procedure 115 Diagnosis Procedure 116 Component Inspection 117 B2578, B2579 IN-VEHICLE SENSOR 118	A/C AUTO AMP. A/C AUTO AMP.: Diagnosis Procedure DOOR MOTOR COMMUNICATION CIRCUIT Description Diagnosis Procedure A/C AUTO AMP. Description Component Function Check Diagnosis Procedure BLOWER MOTOR Description Component Function Check Diagnosis Procedure Component Function Check Diagnosis Procedure Component Inspection MAGNET CLUTCH Description Component Function Check Diagnosis Procedure ECV (ELECTRICAL CONTROL VALVE) Description	133133134134134136136137137137137139141141141141143143

A/C AUTO AMP 145	FOR MEXICO: Precautions Necessary for Steer-
Reference Value145	ing Wheel Rotation After Battery Disconnection 162
Wiring Diagram - AUTOMATIC AIR CONDITION-	FOR MEXICO: Precaution for Battery Service 163
ING SYSTEM148	
Fail-safe149	REMOVAL AND INSTALLATION164
DTC Inspection Priority Chart150	PRESET SWITCH164
DTC Index150	
-\/	Exploded View
SYMPTOM DIAGNOSIS152	Removal and installation 164
AUTOMATIC AIR CONDITIONING SYSTEM . 152	A/C AUTO AMP165
Diagnosis Chart By Symptom152	Exploded View165
Diagnosis Chart by Symptom152	Removal and Installation 165
INSUFFICIENT COOLING 153	
Description153	AMBIENT SENSOR166
Diagnosis Procedure153	Exploded View166
-	Removal and Installation166
NSUFFICIENT HEATING 155	IN-VEHICLE SENSOR167
Description155	Exploded View
Diagnosis Procedure155	Removal and Installation
NOISE 158	Nemoval and installation107
Description158	SUNLOAD SENSOR168
Diagnosis Procedure158	Exploded View168
Diagnosis i Tocedure130	Removal and Installation 168
MEMORY FUNCTION DOES NOT OPERATE 160	WT41/5 051100D
Description160	INTAKE SENSOR169
Diagnosis Procedure160	Exploded View
	Removal and Installation169
PRECAUTION161	REFRIGERANT PRESSURE SENSOR171
PRECAUTIONS 161	Exploded View171
TREGACTIONS101	Removal and Installation171
EXCEPT FOR MEXICO161	
EXCEPT FOR MEXICO : Precaution for Supple-	DOOR MOTOR172
mental Restraint System (SRS) "AIR BAG" and	Exploded View172
"SEAT BELT PRE-TENSIONER"161	INTAKE DOOR MOTOR172
EXCEPT FOR MEXICO : Precautions Necessary	INTAKE DOOR MOTOR : Removal and Installa-
for Steering Wheel Rotation After Battery Discon-	tion
nection161	1/2
EXCEPT FOR MEXICO : Precaution for Battery	MODE DOOR MOTOR173
Service162	MODE DOOR MOTOR: Removal and Installation. 173
FOR MEXICO162	AID MIV DOOD MOTOD
FOR MEXICO : Precaution for Supplemental Re-	AIR MIX DOOR MOTOR173
straint System (SRS) "AIR BAG" and "SEAT BELT	AIR MIX DOOR MOTOR : Removal and Installa-
PRE-TENSIONER"162	tion173


Α

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

OVERALL SEQUENCE

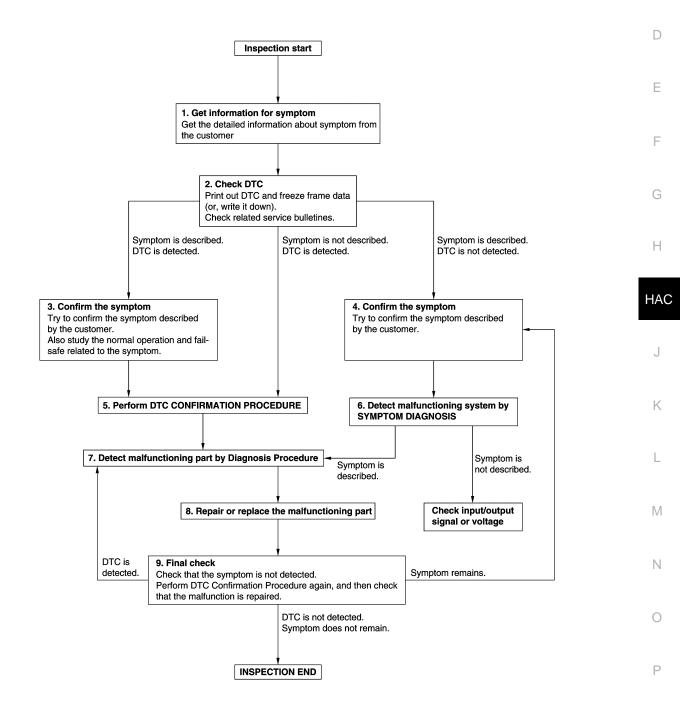

JMKIA8652GB

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[WITHOUT 7 INCH DISPLAY]

1.GET INFORMATION FOR SYMPTOM

- 1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
- 2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

2. CHECK DTC

- 1. Check DTC.
- 2. Perform the following procedure if DTC is detected.
- Record DTC and freeze frame data (Print them out using CONSULT.)
- Erase DTC.
- Study the relationship between the cause detected by DTC and the symptom described by the customer.
- 3. Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

3.CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time. If two or more DTCs are detected, refer to DTC INSPECTION PRIORITY CHART, and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIR-MATION PROCEDURE.

Is DTC detected?

YES >> GO TO 7.

NO >> Check according to GI-44, "Intermittent Incident".

6.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CON-SULT.

7. DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[WITHOUT 7 INCH DISPLAY]

Inspect according to Diagnosis Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to GI-44. "Intermittent Incident".

8.repair or replace the malfunctioning part

1. Repair or replace the malfunctioning part.

- 2. Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
- Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

HAC

Н

Α

В

D

Е

F

K

L

M

Ν

O

Р

INSPECTION AND ADJUSTMENT

Description & Inspection

INFOID:0000000007626740

DESCRIPTION

The purpose of the operational check is to check that the individual system operates normally.

Check condition: Engine running at normal operating temperature.

1. CHECK BLOWER MOTOR

- Start the engine.
- 2. Operate the fan control dial. Check that the fan speed changes. Check the operation for all fan speeds.
- Leave blower on maximum speed.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Blower motor system malfunction. Refer to HAC-53, "Diagnosis Procedure".

2.CHECK DISCHARGE AIR

- 1. Turn mode control dial to each position.
- 2. Check that the air outlets change according to each indicated air outlet by placing a hand in front of the outlets. Refer to VTL-2, "System Description".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Mode door system malfunction. Refer to HAC-44, "Diagnosis Procedure".

3. CHECK INTAKE AIR

- 1. Press intake switch to set the air outlet to recirculation.
- 2. The REC indicator turns ON.
- 3. Listen to intake sound and confirm air inlets change.
- 4. Press intake switch again to set the air outlet to fresh air intake.
- 5. The FRE indicator turns ON.
- Listen to intake sound and confirm air inlets change.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Intake door system malfunction. Refer to HAC-46, "Diagnosis Procedure".

4. CHECK A/C SWITCH

- 1. Press the A/C switch.
- Check that the indicator of the A/C switch turns ON. Check visually and by sound that the compressor operates.
- 3. Press the A/C switch again.
- 4. Check that the indicator of the A/C switch turns OFF. Check that the compressor stops.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Magnet clutch system malfunction. Refer to <u>HAC-57</u>, "<u>Diagnosis Procedure</u>".

CHECK DISCHARGE AIR TEMPERATURE

Operate the temperature control dial. Check that the discharge air temperature changes.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Air mix door malfunction. Refer to <u>HAC-42</u>, "<u>Diagnosis Procedure</u>".

6.CHECK TEMPERATURE DECREASE

- Operate the compressor.
- 2. Operate the temperature control dial and lower the set temperature to 18.0°C (60°F).
- 3. Check that the cool air blows from the outlets.

Is the inspection result normal?

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[WITHOUT 7 INCH DISPLAY]

YES >> GO TO 7.

NO >> Insufficient cooling. Refer to HAC-69, "Diagnosis Procedure".

7. CHECK TEMPERATURE INCREASE

- Turn temperature control dial and raise temperature setting to 32.0°C (90°F) after warming up the engine.
- Check that warm air blows from outlets.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Insufficient heating. Refer to <u>HAC-71</u>, "<u>Diagnosis Procedure</u>".

8. CHECK AUTO MODE

- Operate the fun control dial and mode control dial to AUTO position.
- 2. Operate the temperature control dial. Check that the fan speed or air outlet changes (the air flow temperature or fan speed varies depending on the ambient temperature, in-vehicle temperature, and set temperature).

Is the inspection result normal?

YES >> INSPECTION END

>> Refer to HAC-68, "Diagnosis Chart By Symptom" and perform the appropriate diagnosis. NO

Temperature Setting Trimmer

INFOID:0000000007626741

DESCRIPTION

If the temperature felt by the customer is different than the air flow temperature controlled by the temperature setting, the A/C auto amp, control temperature can be adjusted to compensate for the temperature setting.

HOW TO SET

With CONSULT

Perform "TEMP SET CORRECT" of HVAC work support item.

Work support items	Display (°F)	Display (°C)
	6	3.0
	5	2.5
	4	2.0
	3	1.5
	2	1.0
TEMP SET CORRECT	1	0.5
	0 (initial status)	0 (initial status)
	-1	-0.5
	-2	-1.0
	-3	-1.5
	-4	-2.0
	-5	-2.5
	-6	-3.0

NOTE:

- When -3.0°C (-6°F) is corrected on the temperature setting set as 25.0°C (77°F), the temperature controlled by A/C auto amp. is 25.0°C (77°F) - 3.0°C (-6°F) = 22.0°C (72°F) and the temperature becomes lower than the temperature setting.
- When the battery cable is disconnected from the negative terminal or when the battery voltage becomes 10 V or less, the setting of the difference between the set temperature and control temperature may be cancelled.

Foot Position Setting Trimmer

INFOID:0000000007626742

DESCRIPTION

In FOOT mode, the air blowing to DEF can change ON/OFF.

HAC-9 Revision: 2011 August 2012 370Z

Н

Α

В

D

Е

Ν

< BASIC INSPECTION >

HOW TO SET

(P)With CONSULT

Perform the "BLOW SET" of HVAC work support item.

Work aupport items	Display	Defroster door position		
Work support items	Display	Auto control	Manual control	
	Mode 1	OPEN	CLOSE	
BLOW SET	Mode 2 (initial status)	OPEN	OPEN	
BLOW SET	Mode 3	CLOSE	OPEN	
	Mode 4	CLOSE	CLOSE	

NOTE:

When the battery cable is disconnected from the negative terminal or when the battery voltage becomes 10 V or less, the setting of the discharge air mix ratio in FOOT mode may be cancelled.

Inlet Port Memory Function (FRE)

INFOID:0000000007626743

DESCRIPTION

- If the ignition switch is turned to the OFF position while the FRE indicator is set to ON (fresh air intake), "Perform the memory" or "Do not perform the memory" of FRE indicator ON (fresh air intake) condition can be selected.
- If "Perform the memory" was set, the FRE indicator will be ON (fresh air intake) when turning the ignition switch to the ON position again.
- If "Do not perform the memory" was set, the air inlets will be controlled automatically when turning the ignition switch to the ON position again.

HOW TO SET

(II) With CONSULT

Perform the "FRE MEMORY SET" of HVAC work support item.

Work support items	Display	Setting
FRE MEMORY SET	WITHOUT	Perform the memory of manual FRE
TRE WEWORT SET	WITH (initial status)	Do not perform the memory of manual FRE (auto control)

NOTE:

When the battery cable is disconnected from the negative terminal or when the battery voltage becomes 10 V or less, the setting of the FRE memory function may be cancelled.

Inlet Port Memory Function (REC)

INFOID:0000000007626744

DESCRIPTION

- If the ignition switch is turned to the OFF position while the REC indicator is set to ON (recirculation), "Perform the memory" or "Do not perform the memory" of REC indicator ON (recirculation) condition can be selected.
- If "Perform the memory" was set, the REC indicator will be ON (recirculation) when turning the ignition switch to the ON position again.
- If "Do not perform the memory" was set, the air inlets will be controlled automatically when turning the ignition switch to the ON position again.

HOW TO SET

(P)With CONSULT

Perform the "REC MEMORY SET" of HVAC work support item.

Work support items	Display	Setting	
REC MEMORY SET	WITHOUT (initial status)	Perform the memory of manual REC	
TEC WEWORT SET	WITH	Do not perform the memory of manual REC (auto control)	

NOTE:

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[WITHOUT 7 INCH DISPLAY]

When the battery cable is disconnected from the negative terminal or when the battery voltage becomes 10 V or less, the setting of the REC memory function may be cancelled.

В

Α

С

D

Е

F

G

Н

HAC

J

K

L

M

Ν

0

Р


SYSTEM DESCRIPTION

COMPRESSOR CONTROL FUNCTION

Description INFOID:000000007626745

PRINCIPLE OF OPERATION

Functional circuit diagram

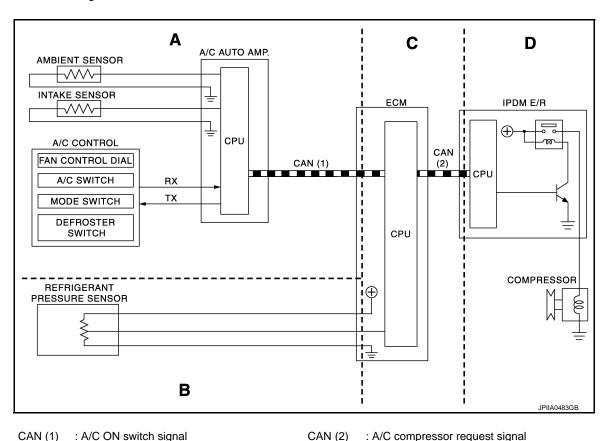

CAN (1) : A/C ON switch signal : Blower fan ON signal

RX, TX : A/C switch signal : Fan ON signal

: Defroster signal

Functional initial inspection chart

Control unit	ntrol unit Diagnosis Item		Diagnosis Item			
Control unit	_	nagnosis item	Α	В	С	D
		Self-diagnosis	×	_		_
A/C auto amp.	"HVAC"	Data monitor	×	_		_
		Active test	×	_		×
ECM (B)"ENGINE"	Self-diagnosis (CAN system diagnosis)	_	_	×	_	
		Data monitor	_	×	×	_
100115/0	"IPDM E/R"	Self-diagnosis (CAN system diagnosis)	_	_	_	×
IPDM E/R		Data monitor	_	_	×	_
	Auto active test		_	_	_	×

Fail-safe INFOID:0000000007626746

FAIL-SAFE FUNCTION

When a communication malfunction between A/C auto amp. and A/C control continued for approximately 30 seconds or more, control the air conditioning system under the following conditions.


: ON Compressor Air outlet : AUTO

Air inlet : FRE (Fresh air intake)

Fan speed : AUTO

Preset temperature : Setting before communication malfunction

Component Parts Location

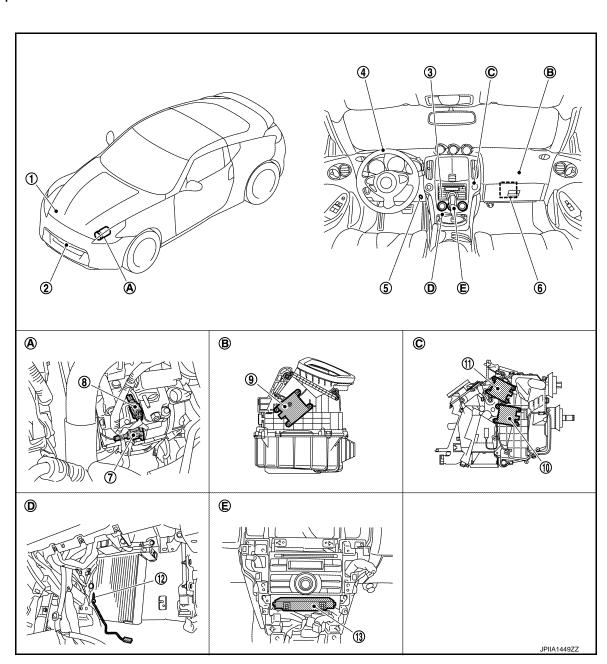

- Refrigerant pressure sensor
- Sunload sensor

- Ambient sensor 2.
- In-vehicle sensor
- 3. A/C control
- 6. Blower motor

HAC

Н

Α

В

D

Е

INFOID:0000000007626747

K

M

Ν

Р

HAC-13 Revision: 2011 August 2012 370Z

COMPRESSOR CONTROL FUNCTION

< SYSTEM DESCRIPTION >

[WITHOUT 7 INCH DISPLAY]

Magnet clutch

ECV 8.

Intake door motor 9.

10. Air mix door motor

11. Mode door motor

12. Intake sensor

13. A/C auto amp.

Installed on the compressor

Installed to the blower unit assembly C. (RH)

D. Located on the evaporator

Behind of the cluster lid C

Installed to the heater & cooling unit assembly (RH)


Component Description

INFOID:0000000007626748

Component	Description
Ambient sensor <u>HAC-43, "Description"</u>	
In-vehicle sensor	HAC-41, "Description"
Intake sensor	HAC-45, "Description"
Sunload sensor	HAC-53, "Description"
Air mix door motor	HAC-57, "Description"
Mode door motor	EC-530. "Description"
Intake door motor	HAC-29, "Description"
A/C control	The operation of the A/C control is communicated with the A/C auto amp. via communication line.
A/C auto amp.	HAC-32, "Description"
Blower motor	HAC-38, "Description"
Magnet clutch	HAC-57, "Description"
ECV	HAC-59, "Description"
Refrigerant pressure sensor	HAC-52, "Description"

AUTOMATIC AIR CONDITIONING SYSTEM

System Diagram

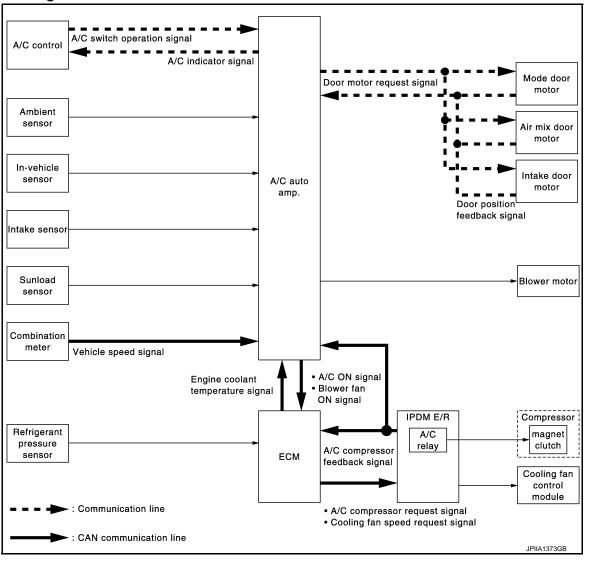

System Description

INFOID:0000000007626750

OUTLINE

Automatic air conditioning system is controlled by each function of A/C auto amp., ECM and IPDM E/R.

Control by A/C auto amp.

- Air outlet control
- Temperature control
- Air inlet control
- Air flow control
- Compressor control
- Door motor control (LCU communication control)

Control by ECM

- Cooling fan control. (Refer to EC-88, "System Description".)
- Air conditioning cut control. (Refer to EC-68, "System Description".)

Control by IPDM E/R

- Relay control. (Refer to <u>PCS-4. "System Description"</u>.)
- Cooling fan control. (Refer to <u>PCS-7</u>, "System <u>Description"</u>.)

Н

HAC

Α

В

D

Е

INFOID:0000000007626749

M

Ν


Р

Revision: 2011 August HAC-15 2012 370Z

• Controller (A/C control) transmits the commands for air conditioning system operation to A/C auto amp. via communication line.

OPERATION

Controller (A/C Control)

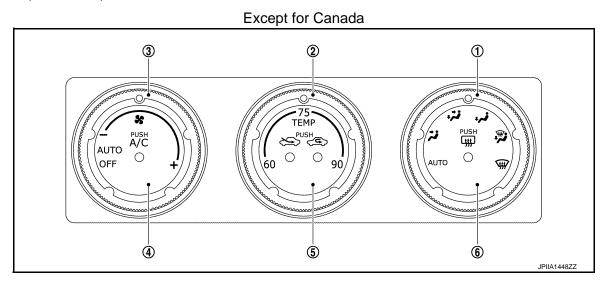


- 1. Mode control dial
- 4. A/C switch

- 2. Temperature control dial
- 5. Intake switch

- 3. Fan control dial
- 6. Rear window defogger switch

For Canada

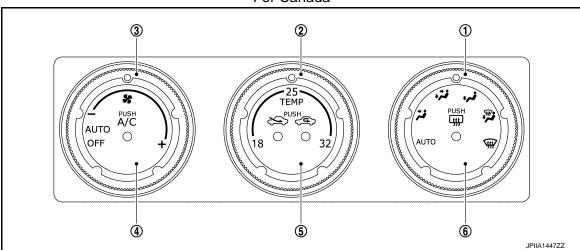

- 1. Mode control dial
- 4. A/C switch

- 2. Temperature control dial
- 5. Intake switch

- 3. Fan control dial
- 6. Rear window defogger switch

Switch Operation

Mode control dial	Selects mode position to an optimal position. When AUTO is selected, the mode position is controlled automatically. When D/F or DEF is selected while blower motor is activated, and air conditioning system becomes the following state. Compressor: ON Air inlet: Fresh air intake
Temperature control dial	Selects set temperature within a range between 18°C (60°F) - 32°C (90°F). NOTE: When air conditioning system is in the OFF position, set temperature can be selected depending on temperature control dial operation.

AUTOMATIC AIR CONDITIONING SYSTEM


< SYSTEM DESCRIPTION >

[WITHOUT 7 INCH DISPLAY]

Fan control dial	Selects fan speed within a range between 1st - 25th speed. • When AUTO is selected, fan speed is controlled automatically. • When OFF is selected, air conditioning system becomes the following state. - Air conditioning system: OFF - Air inlet: Fresh air intake - Air outlet: FOOT
A/C switch	Turns the compressor control (switch indicator) between ON ⇔ OFF each time while blower is activated. NOTE: When A/C switch turns OFF, air inlet changes to fresh air intake.
Intake switch	 Selects air inlet changes between recirculation (REC) ⇔ fresh air intake (FRE) each time. FRE indicator ON: Fresh air intake REC indicator ON: Recirculation Press and held for 2 seconds or more, intake switch indicator lamp blinks 2 times and air inlet is set to automatic control. (Air intake switch indicator indicates air inlet state during automatic control.) NOTE: When air conditioning system is in the OFF position, air inlet can be selected. When mode control dial is in the D/F or DEF position, air inlet cannot be selected to REC. When intake switch is set to REC, the compressor is turned ON.
Rear window defogger switch	Turns rear window defogger (switch indicator) between ON ⇔ OFF each time. Rear window defogger system details. Refer to DEF-77, "WITHOUT NAVIGATION: System Description".

AIR OUTLET CONTROL

- While air outlet is in automatic control, A/C auto amp. selects the mode door position depending on a target air mix door angle and outlet air temperature calculated from sunload.
- If ambient temperature is excessively low, D/F is selected to prevent windshield fogging when air outlet is set to FOOT.

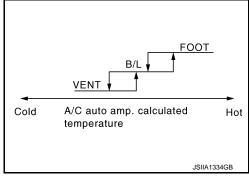


TEMPERATURE CONTROL

- When ignition switch is in the ON position, A/C auto amp. always automatically controls temperature regardless of air conditioning system operational state.
- A/C auto amp. calculates the target air mix door opening angle temperature, and sunload.

 • Air mix door is controlled depending on the comparison of current air mix door opening angle and target air mix door opening angle.

 • Regardless of in-vehicle temperature, ambient temperature and sunload, air mix door is fixed at it.
- temperature is 18.0°C (60°F), and at the fully hot position when set temperature is 32.0°C (90°F).

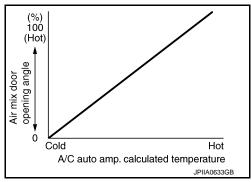

AIR INLET FUNCTION

HAC-17 Revision: 2011 August 2012 370Z

Α

В

Е

D

Н

HAC


K

M

Ν

Р

While air inlet is in automatic control, A/C auto amp. selects air inlet (fresh air intake, 20 % fresh air intake, or recirculation) depending on set temperature, in-vehicle temperature, and ambient temperature.

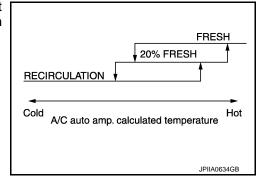


AIR FLOW CONTROL

Description

- A/C auto amp. changes duty ratio of blower motor drive signal and controls air flow continuously. When air flow is increased, duty ratio of blower motor drive signal gradually increases to prevent a sudden increase in air flow.
- In addition to manual control and automatic control, air flow control is compose of starting fan speed control, low coolant temperature starting control, high in-vehicle temperature starting control, blower speed control at door motor operation, and fan speed control at voice recognition.


Automatic Air Flow Control

- A/C auto amp. decides target air flow depending on target air mix door opening angle.
- A/C auto amp. changes duty ratio of blower motor drive signal and controls air flow continuously so that air flow matches to target air flow.
- When air outlet is VENT or B/L, the minimum air flow is changed depending on sunload.

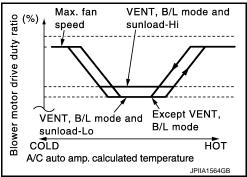

Starting Fan Speed Control

When blower motor is activated, A/C auto amp. gradually increases duty ratio of blower fan drive signal to prevent a sudden increase in discharge air flow. (It takes approximately 8 seconds for air flow to reach HI from LOW)

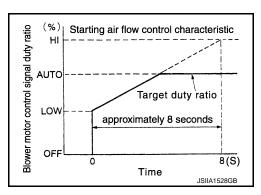


Low Coolant Temperature Starting Control

AUTOMATIC AIR CONDITIONING SYSTEM

< SYSTEM DESCRIPTION >

[WITHOUT 7 INCH DISPLAY]

If the engine coolant temperature is 56°C (133°F) or less, to prevent a cold discharged air flow, A/C auto amp. suspends blower motor activation for the maximum 150 seconds depending on target air mix door opening angle. After this, blower fan drive signal is increased gradually, and blower motor is activated.

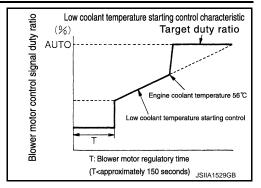

High In-vehicle Temperature Starting Control

When evaporator temperature is high [intake air temperature sensor value is 35°C (95°F) or more], to prevent a hot discharged air flow, A/C auto amp. suspends blower motor activation for approximately 3 seconds so that evaporator is cooled by refrigerant.

Fan speed Control at Door Motor Operation

When mode door motor is activated while air flow is more than the specified value, A/C auto amp. reduces temporarily fan speed so that mode door moves smoothly.

Fan speed Control at Voice Recognition

When the voice control (voice command) switch is operated during air flow automatic control, A/C auto amp. decreases the air flow of the blower motor once and controls the air flow so as not to disturb the voice recognition function. This control continues while voice recognition function is operating.

COMPRESSOR CONTROL

Description

- When the compressor activation condition is satisfied while blower motor is activated, A/C auto amp. transmits A/C ON signal and blower fan ON signal to ECM via CAN communication.
- ECM judges that the compressor can be activated depending on each sensors state (refrigerant pressure sensor signal, throttle opening angle sensor signal, and others). And transmits A/C compressor request signal to IPDM E/R via CAN communication.
- IPDM E/R turns A/C relay ON and activates the compressor depending on request from ECM.

Compressor Protection Control at Pressure Malfunction

When high-pressure side value that is detected by refrigerant pressure sensor is as per the following state, ECM requests IPDM E/R to turn A/C relay OFF and stops the compressor.

- 3.12 MPa (31.8 kg/cm²·G) or more (When the engine speed is less than 1,500 rpm)
- 2.74 MPa (27.9 kg/cm²·G) or more (When the engine speed is 1,500 rpm or more)
- 0.14 MPa (1.4 kg/cm²·G) or less


Compressor Oil Circulation Control

When the engine starts while the engine coolant temperature is 56°C (133°F) or less, ECM activates the compressor for approximately 6 seconds and circulates the compressor lubricant once.

Low Temperature Protection Control

When intake air temperature sensor detects that air temperature after passing through evaporator is -5°C (23°F) or less, A/C auto amp. requests ECM to turn the compressor OFF, and stops the compressor.

When the air temperature returns to 1°C (34°F) or more, the compressor is activated.

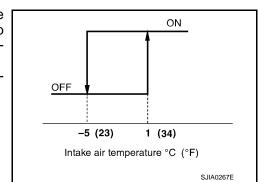

Operating Rate Control

When set temperature is other than fully cold or air outlet is "VENT", "B/L" or "FOOT" A/C auto amp. controls the compressor activation depending on ambient temperature.

HAÇ

Н

Α

D

Е

F

. J

Κ

Ν

0

Р

Revision: 2011 August **HAC-19** 2012 370Z

AUTOMATIC AIR CONDITIONING SYSTEM


< SYSTEM DESCRIPTION >

[WITHOUT 7 INCH DISPLAY]

Air Conditioning Cut Control

When the engine is running in excessively high load condition, ECM requests IPDM E/R to turn A/C relay OFF, and stops the compressor. Refer to <u>EC-68</u>, "System Description" for details.

DOOR MOTOR CONTROL

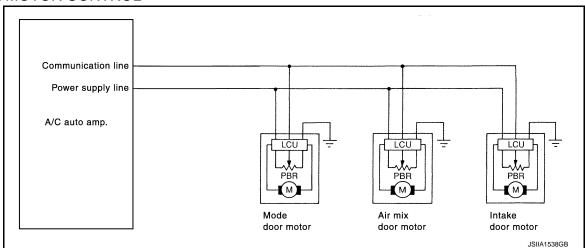

- LCU (Local Control Unit) is built in to each door motor. And detects door position by PBR (Potentio Balance Resistor).
- A/C auto amp. communicates with each LCU via communication line. And receives each door position feedback signal from each LCU.
- Each LCU controls each door to the appropriate position depending on the control signal from A/C auto amp. when the door movement is complete, transmits the signal of door movement completion to A/C auto amp.

FAIL-SAFE CONTROL

When a communication malfunction occurs between A/C auto amp. and A/C control for 30 seconds or more, A/C auto amp. automatically controls air outlet and fan speed, fixes air inlet to fresh air intake, maintains set temperature data before the communication malfunction, and activates the compressor. Even if the condition before the communication error occurs is A/C OFF, A/C auto amp. turns the compressor ON with following conditions.


Compressor : ON
Air outlet : AUTO

Air inlet : FRE (Fresh air intake)

Fan speed : AUTO

Preset temperature : Setting before communication malfunction

SWITCHES AND THEIR CONTROL FUNCTIONS

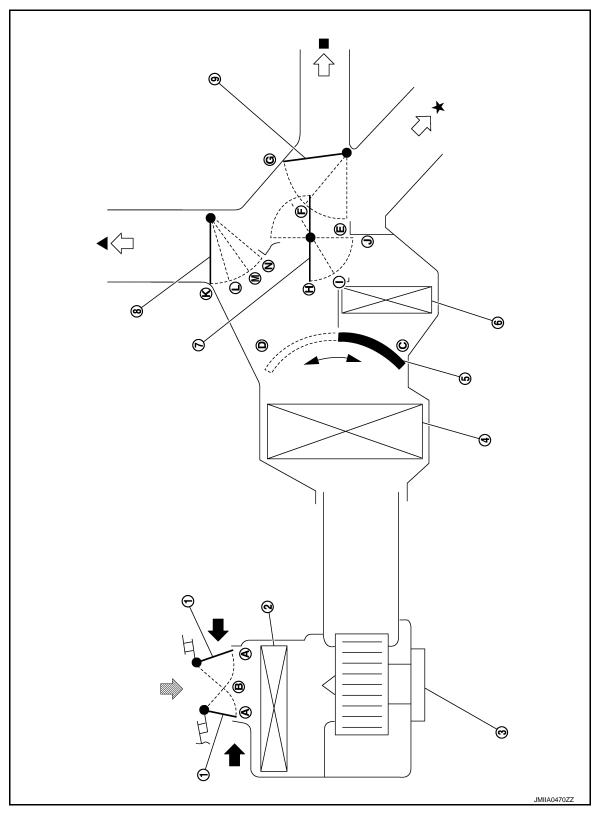

- 1. Intake door
- Evaporator
- Max. cool door
- Fresh air intake
- Defroster

- 2. In-cabine microfilter/Air conditioner filter*
- Air mix door 5.
- Defroster door
- Recirculation air
- Ventilator

- 3. Blower motor
- 6. Heater core
- Ventilator door

Α

В

C

D

Е

F

G

Н

HAC

J

K

M

Ν

0

Р

Foot

*: Models for Mexico

Switch /Dial		Door position						
pos	ition	Ventilator door	Max. cool door	Defroster door	Intake door	Air mix door		
	AUTO	AUTO						
	~;	E	Н	К				
Mode control	*	F	I	K	_			
dial	·,i			L				
	ans.	G	J	М	A A	_		
	₩			N				
Intake switch	©		_	_	B*			
	8				A*			
	Full cold 18.0°C (60°F)	_			_	С		
Temperature control dial	18.5°C -31.5°C (61°F - 89°F)					AUTO		
	Full hot 32.0°C (90°F)					D		
Fan control dial	OFF	G	J	L	Α	_		

^{*:} Inlet status is displayed by indicator when activating automatic control

AIR DISTRIBUTION

	Dischar	ge air flow	
Made position indication		Air outlet/distribution	
Mode position indication —	Ventilator	Foot	Defroster
~;	100%	_	_
IJ	60%	40%	_
· i	12%	62%	26%
577	10%	52%	38%
₩	_	_	100%

Component Parts Location

INFOID:0000000007626751

Α

В

D

Е

F

Н

HAC


K

M

Ν

0

Р

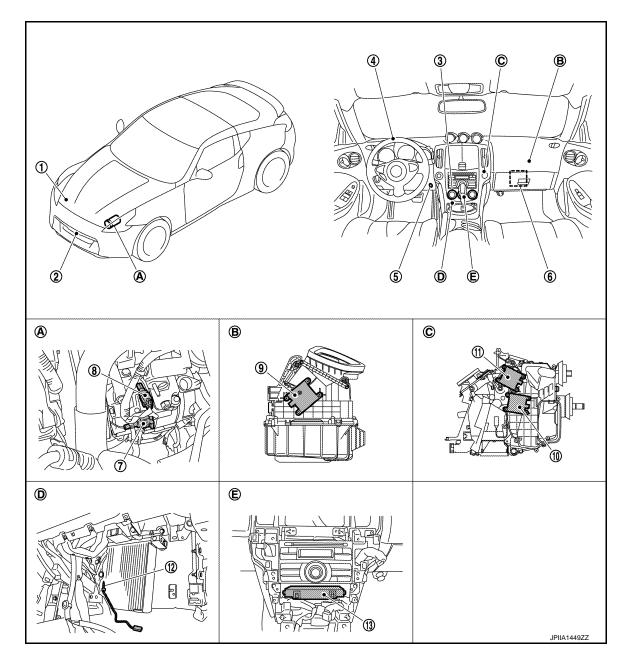

- 1. Refrigerant pressure sensor
- 4. Sunload sensor
- 7. Magnet clutch
- 10. Air mix door motor
- 13. A/C auto amp.
- A. Installed on the compressor
- D. Located on the evaporator

- 2. Ambient sensor
- 5. In-vehicle sensor
- 8. ECV
- 11. Mode door motor
- B. Installed to the blower unit assembly C. (RH)
- E. Behind of the cluster lid C

- A/C control
- 6. Blower motor
- 9. Intake door motor
- 12. Intake sensor
 - Installed to the heater & cooling unit assembly (RH)

Component Description

INFOID:0000000007626752

Component	Description
Ambient sensor	HAC-43, "Description"
In-vehicle sensor	HAC-41, "Description"

AUTOMATIC AIR CONDITIONING SYSTEM

< SYSTEM DESCRIPTION >

[WITHOUT 7 INCH DISPLAY]

Component	Description
Intake sensor	HAC-45, "Description"
Sunload sensor	HAC-53, "Description"
Air mix door motor	HAC-57, "Description"
Mode door motor	EC-530, "Description"
Intake door motor	HAC-29, "Description"
A/C control	The operation of the A/C control is communicated with the A/C auto amp. via communication line.
A/C auto amp.	HAC-32, "Description"
Blower motor	HAC-38, "Description"
Magnet clutch	HAC-57, "Description"
ECV	HAC-59, "Description"
Refrigerant pressure sensor	HAC-52, "Description"

DIAGNOSIS SYSTEM (HVAC)

< SYSTEM DESCRIPTION >

[WITHOUT 7 INCH DISPLAY]

Α

В

D

Е

F

Н

HAC

K

L

Ν

0

Р

DIAGNOSIS SYSTEM (HVAC)

CONSULT Function

CONSULT performs the following functions via CAN communication with A/C auto amp.

Diagnostic mode	Description
Self diagnostic result	Displays the diagnosis results judged by A/C auto amp.
Data monitor	Displays the input/output signal of A/C auto amp.
Active test	The signals used to activate each device are forcibly supplied from A/C auto amp.
Work support	Changes the setting for each setting function.
ECU identification	Displays the part number of A/C auto amp.

NOTE:

Diagnosis should be performed with the engine running. Door motor operation speeds become slower and NO results may be returned even for normal operation if battery voltage drops below 12 V during self-diagnosis.

SELF-DIAGNOSIS RESULTS

Refer to HAC-66, "DTC Index".

DATA MONITOR

	item	

Monitor item [Unit]	Description
COMP REQ SIG	[On/Off]	Displays A/C switch ON/OFF status transmitted to other units via CAN communication
FAN REQ SIG	[On/Off]	Displays fan switch ON/OFF status transmitted to other units via CAN communication
AMB TEMP SEN	[°C]	Ambient sensor value converted from ambient sensor signal received from ambient sensor
IN-VEH TEMP	[°C]	In-vehicle sensor value converted from in-vehicle sensor signal received from in-vehicle sensor
INT TEMP SEN	[°C]	Intake sensor value converted from intake sensor signal received from intake sensor
SUNLOAD SEN	[w/m ²]	Sunload sensor value converted from sunload sensor signal received from sunload sensor
AMB SEN CAL	[°C]	Ambient sensor value calculated by A/C auto amp.
IN-VEH CAL	[°C]	In-vehicle sensor value calculated by A/C auto amp.
INT TEMP CAL	[°C]	Intake sensor value calculated by A/C auto amp.
SUNL SEN CAL	[w/m ²]	Sunload sensor value calculated by A/C auto amp.
FAN DUTY		Duty ratio of blower motor judged by A/C auto amp.
XM		Target discharge air temperature judged by A/C auto amp. depending on the temperature setting and the value from each sensor
ENG COOL TEMP	[°C]	Water temperature signal value received from ECM via CAN communication
VEHICLE SPEED	[Mph (km/h)]	Vehicle speed signal value received from meter via CAN communication

ACTIVE TEST

Test item	Description
ALL SEG	The signals used to activate A/C control indicator are forcibly supplied from A/C auto amp.
HVAC TEST	The operation check of air conditioning system can be performed by selecting the mode. Refer to the following table for the conditions of each mode.

Check each output device

	Test item						
	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	MODE 6	MODE 7
Mode door position	VENT	B/L 1	B/L 2	FOOT	D/F	DEF	_
Intake door position	REC	REC	20% FRE	FRE	FRE	FRE	_
Air mix door position	FULL COLD	FULL COLD	FULL HOT	FULL HOT	FULL HOT	FULL HOT	_
Blower motor control signal duty ratio	37%	91%	65%	65%	65%	91%	_
Magnet clutch	ON	ON	OFF	OFF	ON	ON	_
ECV duty ratio	100%	100%	0%	0%	50%	100%	_

NOTE:

- Perform the inspection of each output device after starting the engine because the compressor is operated.
- If the Mode 7 is selected, the malfunction is displayed but it is normal.

WORK SUPPORT

Work item	Description	Refer to
TEMP SET CORRECT (Temperature setting trimmer)	If the temperature felt by the customer is different than the air flow temperature controlled by the temperature setting, the A/C auto amp. control temperature can be adjusted to compensate for the temperature setting.	HAC-9, "Temperature Setting Trimmer"
FRE MEMORY SET [Inlet port memory function (FRE)]	 If the ignition switch is turned to the OFF position while the FRE indicator is set to ON (fresh air intake), "Perform the memory" or "Do not perform the memory" of FRE indicator ON (fresh air intake) condition can be selected. If "Perform the memory" was set, the FRE indicator will be ON (fresh air intake) when turning the ignition switch to the ON position again. If "Do not perform the memory" was set, the air inlets will be controlled automatically when turning the ignition switch to the ON position again. 	HAC-10, "Inlet Port Memory Function (FRE)"
REC MEMORY SET [Inlet port memory function (REC)]	 If the ignition switch is turned to the OFF position while the REC indicator is set to ON (recirculation), "Perform the memory" or "Do not perform the memory" of REC indicator ON (recirculation) condition can be selected. If "Perform the memory" was set, the REC indicator will be ON (recirculation) when turning the ignition switch to the ON position again. If "Do not perform the memory" was set, the air inlets will be controlled automatically when turning the ignition switch to the ON position again. 	HAC-10, "Inlet Port Memory Function (REC)"
BLOWER SET (Foot position setting trimmer)	In FOOT mode, the air blowing to DEF can change ON/OFF.	HAC-9, "Foot Position Setting Trimmer"

NOTE

When the battery cable is disconnected from the negative terminal or when the battery voltage becomes 10 V or less, the setting of WORK SUPPORT may be cancelled.

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description INFOID:0000000007626754

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-board multiplex communication line with high data communication speed and excellent error detection ability. A modern vehicle is equipped with many ECMs, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, 2 control units are connected with 2 communication lines (CAN-L-line and CAN-H-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Refer to LAN-25, "CAN Communication Signal Chart" for details of the communication signal.

DTC Logic INFOID:0000000007626755

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible cause
U1000	CAN COMM CIRCUIT	When A/C auto amp. is not transmitting or receiving CAN communication signal for 2 or more seconds.	CAN communication system

Diagnosis Procedure

INFOID:0000000007626756

1.PERFORM SELF-DIAGNOSIS

(P)With CONSULT

- Turn the ignition switch ON and wait for 2 seconds or more.
- Perform the "SELF-DIAGNOSIS".
- Check if any DTC is detected in the self-diagnostic results.

Is DTC "U1000" displayed?

YES >> Perform the diagnosis for the CAN communication system. Refer to LAN-15, "Trouble Diagnosis Flow Chart".

NO >> Perform the intermittent malfunction diagnosis. Refer to GI-44, "Intermittent Incident". HAC

Н

Α

В

D

Е

F

K

M

L

N

Р

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

U1010 CONTROL UNIT (CAN)

DescriptionINFOID:000000007626757

Initial diagnosis of A/C auto amp.

DTC Logic

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible cause
U1010	CONTROL UNIT (CAN)	When detecting error during the initial diagnosis of CAN controller of A/C auto amp.	A/C auto amp.

Diagnosis Procedure

INFOID:0000000007626759

1. REPLACE A/C AUTO AMP.

When DTC "U1010" is detected, replace A/C auto amp.


>> INSPECTION END

B257B, B257C AMBIENT SENSOR

Description INFOID:0000000007626760

AMBIENT SENSOR

- The ambient sensor (1) is installed to the hood lock stay.
- The ambient sensor converts the ambient temperature detected with thermistor into the voltage, and the A/C auto amp. inputs this voltage.

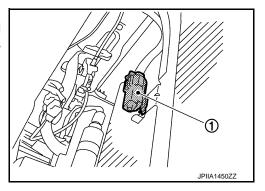

AMBIENT TEMPERATURE CORRECTION

- The A/C auto amp. inputs the temperature detected with the ambient sensor as the ambient temperature.
- Perform the correction of the temperature detected with the ambient sensor for air conditioning control and for ambient temperature display.
- Since the engine heat influences on the ambient sensor during idling condition, the A/C auto amp. retards the ambient temperature indication of the combination meter to avoid the effect of steep temperature
- Select and use the initial value of ambient temperature data depending on the coolant temperature when turning the ignition switch from OFF to ON. Use the detection temperature of the ambient sensor at low coolant temperature [less than approximately 56°C (133°F)]. Use the memory data (before the ignition switch is OFF) when the engine is warming up [approximately 56°C (133°F) or more].
- Do not perform the correction of the ambient temperature when the detection temperature of the ambient temperature is less than approximately -29°C (-20°F) (for ambient temperature display) or less than approximately -20°C (-4°F) (for air conditioning control).

SET TEMPERATURE CORRECTION

The A/C auto amp. performs the correction to the target temperature set by the temperature control dial so as to match the temperature felt by the passengers depending on the ambient temperature detected with the ambient sensor and controls it so that the interior air temperature is always the most suitable.

DTC Logic INFOID:0000000007626761

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible causes
B257B	- AMBIENT SENSOR	The ambient sensor recognition temperature is too high.	 Ambient sensor A/C auto amp. Harness and connector (Short in the ambient sensor circuit)
B257C	AIVIDIENT SENSOR	The ambient sensor recognition temperature is too low.	 Ambient sensor A/C auto amp. Harness and connector (Open in the ambient sensor circuit)

DTC CONFIRMATION PROCEDURE

1. PERFORM SELF-DIAGNOSIS

(P)With CONSULT

Revision: 2011 August

- Perform the "SELF-DIAGNOSIS".
- Check if any DTC is detected in the self-diagnostic results.

 If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-27, "DTC Logic" or HAC-28, "DTC Logic".

HAC-29

HAC

Α

D

Е

F

K

J

N

2012 370Z

B257B, B257C AMBIENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

• If there is an open circuit in the ambient sensor, A/C auto amp registers extreme cold [-30°C (-22°F)] and adjusts the temperature control warmer.

Is DTC "B257B" or "B257C" displayed?

YES >> Perform the diagnosis for the ambient sensor. Refer to HAC-30, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000007626762

1. CHECK AMBIENT SENSOR POWER SUPPLY CIRCUIT

- 1. Turn the ignition switch OFF.
- Disconnect ambient sensor connector.
- Turn the ignition switch ON.
- 4. Check voltage between ambient sensor harness connector and ground.

(+)	(–)	V. It.	
Ambient sensor			Voltage (Approx.)	
Connector	Terminal		,	
E76	1	Ground	5 V	

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

2. CHECK AMBIENT SENSOR CIRCUIT CONTINUITY

- 1. Turn the ignition switch OFF.
- 2. Disconnect the A/C auto amp. connector.
- Check for continuity between the ambient sensor harness connector and A/C auto amp harness connector.

Ambient sensor		or A/C auto amp.		Continuity
Connector	Terminal	Connector Terminal		Continuity
E76	2	M66	37	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3. CHECK AMBIENT SENSOR

Check the ambient sensor components. Refer to HAC-31, "Component Inspection".

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Replace the ambient sensor.

4. CHECK AMBIENT SENSOR CIRCUIT CONTINUITY

- 1. Turn the ignition switch OFF.
- Disconnect the A/C auto amp. connector.
- Check for continuity between the ambient sensor harness connector and A/C auto amp. harness connector.

Ambien	Ambient sensor		ito amp.	Continuity
Connector	Terminal	Connector Terminal		Continuity
E76	1	M66	35	Existed

4. Check for continuity between ambient sensor harness connector and ground.

B257B, B257C AMBIENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

Ambien	t sensor		Continuity	
Connector	Terminal	_	Continuity	
E76	1	Ground	Not existed	

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Repair the harnesses or connectors.

Component Inspection

INFOID:0000000007626763

Α

В

D

Е

F

1. CHECK AMBIENT SENSOR

- 1. Turn the ignition switch OFF.
- 2. Remove the ambient sensor. Refer to HAC-82, "Exploded View".
- 3. Check the resistance between the ambient sensor terminals. Refer to the applicable table for the normal value.

Terminal		Condition	Resistance: kΩ
1611	IIIIIai	Temperature: °C (°F)	Nesisiance. N22
		-15 (5)	12.73
		-10 (14)	9.92
		-5 (23)	7.80
		0 (32)	6.19
		5 (41)	4.95
			10 (50)
1	2	15 (59)	3.24
		20 (68)	2.65
		25 (77)	2.19
		30 (86)	1.81
		35 (95)	1.51
		40 (104)	1.27
		45 (113)	1.07

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the ambient sensor.

HAC

Н

K

L

IV /

Ν

C


Р

B2578, B2579 IN-VEHICLE SENSOR

Description INFOID:000000007626764


IN-VEHICLE SENSOR


- The in-vehicle sensor (1) is installed to the instrument lower panel LH.
- The in-vehicle sensor converts the interior air temperature of the passenger room sucked by the aspirator detected with the thermistor into the voltage, and the A/C auto amp. inputs this voltage.

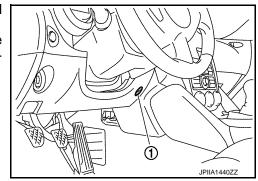

ASPIRATOR

The aspirator (1) generates the vacuum by the air blown from the heater & cooling unit and draws the air of the passenger room to the in-vehicle sensor area via the aspirator duct.

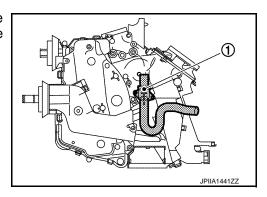

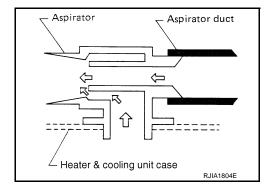

INTERIOR AIR TEMPERATURE CORRECTION

- The A/C auto amp. inputs the temperature detected with the in-vehicle sensor as the interior air temperature.
- Perform the correction of the temperature detected with the in-vehicle sensor for each air conditioning control.

DTC Logic

DTC DETECTION LOGIC

B2578, B2579 IN-VEHICLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible causes
B2578	IN-VEHICLE SENSOR	The in-vehicle sensor recognition temperature is too high.	 In-vehicle sensor A/C auto amp. Harness and connector (Short in the in-vehicle sensor circuit)
B2579	IN-VEHICLE SENSOR	The in-vehicle sensor recognition temperature is too low.	 In-vehicle sensor A/C auto amp. Harness and connector (Open in the in-vehicle sensor circuit)

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF-DIAGNOSIS

(P)With CONSULT

- 1. Perform the "SELF-DIAGNOSIS".
- 2. Check if any DTC is detected in the self-diagnostic results.

NOTE:

If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-27, "DTC Logic" or HAC-28, "DTC Logic".

Is DTC "B2578" or "B2579" displayed?

YES >> Perform the diagnosis for the in-vehicle sensor. Refer to HAC-33, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000007626766

1. CHECK IN-VEHICLE SENSOR POWER SUPPLY CIRCUIT

- Turn the ignition switch OFF.
- 2. Disconnect the in-vehicle sensor connector.
- Turn the ignition switch ON. 3.
- Check voltage between in-vehicle sensor harness connector and ground.

(+)		(+)		
In-vehicle sensor			Voltage (Approx.)	
Connector	Terminal	_	(11 - 7	
M61	1	Ground	5 V	

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

2.check in-vehicle sensor circuit continuity-

- Turn the ignition switch OFF.
- Disconnect the A/C auto amp. connector.
- 3. Check for continuity between the in-vehicle sensor harness connector and A/C auto amp. harness connector.

In-vehicle sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector Terminal		Continuity
M61	2	M66	37	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK IN-VEHICLE SENSOR

Check the in-vehicle sensor components. Refer to HAC-34, "Component Inspection".

HAC

Α

В

Е

M

Ν

Р

B2578, B2579 IN-VEHICLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Replace the in-vehicle sensor.

4. CHECK IN-VEHICLE SENSOR CIRCUIT CONTINUITY

- 1. Turn the ignition switch OFF.
- 2. Disconnect the A/C auto amp. connector.
- Check for continuity between the in-vehicle sensor harness connector and A/C auto amp. harness connector.

In-vehicle sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector Terminal		Continuity
M61	1	M66	36	Existed

4. Check for continuity between in-vehicle sensor harness connector and ground.

In-vehicle sensor			Continuity	
Connector	Terminal		Continuity	
M61	1	Ground	Not existed	

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Repair the harnesses or connectors.

Component Inspection

INFOID:0000000007626767

1. CHECK IN-VEHICLE SENSOR

- 1. Turn the ignition switch OFF.
- Remove the in-vehicle sensor. Refer to <u>HAC-83, "Exploded View"</u>.
- 3. Check the resistance between the in-vehicle sensor terminals. Refer to the applicable table for the normal value.

Temperature: °C (°F) -15 (5) -10 (14) 9.92 -5 (23) 7.80 0 (32) 5 (41) 4.95 10 (50) 3.99	Resistance: kΩ
-10 (14) 9.92 -5 (23) 7.80 0 (32) 6.19 5 (41) 4.95 10 (50) 3.99	
-5 (23) 7.80 0 (32) 6.19 5 (41) 4.95 10 (50) 3.99	
0 (32) 6.19 5 (41) 4.95 10 (50) 3.99	
5 (41) 4.95 10 (50) 3.99	
10 (50) 3.99	
1 2 15 (50) 2 24	
1 2 15 (59) 3.24	
20 (68) 2.65	
25 (77) 2.19	
30 (86) 1.81	
35 (95) 1.51	
40 (104) 1.27	
45 (113) 1.07	

Is the inspection result normal?

YES >> INSPECTION END


NO >> Replace the in-vehicle sensor.

B2581, B2582 INTAKE SENSOR

Description

INTAKE SENSOR

- Intake sensor (1) is located on the evaporator (2).
- The intake sensor converts the evaporator passing air temperature detected with thermistor into the voltage, and the A/C auto amp. inputs this voltage.

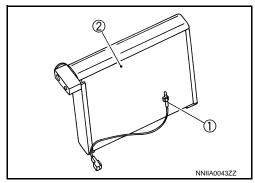

INTAKE TEMPERATURE CORRECTION

- The A/C auto amp. inputs the temperature detected with the intake sensor as the evaporator passing air temperature.
- Perform the correction of the temperature detected with the intake sensor for air conditioning control.
- The A/C auto amp. performs the correction so that the recognition intake temperature changes depending on the difference between the detected intake temperature and the recognition intake temperature. If the difference is large, the changing is early. The changing becomes slow as the difference becomes small.

DTC Logic

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible causes
B2581	- INTAKE SENSOR	The intake sensor recognition temperature is too high.	 Intake sensor A/C auto amp. Harness and connector (Short in the intake sensor circuit)
B2582		The intake sensor recognition temperature is too low.	 Intake sensor A/C auto amp. Harness and connector (Open in the intake sensor circuit)

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF-DIAGNOSIS

(P)With CONSULT

- 1. Perform the "SELF-DIAGNOSIS".
- 2. Check if any DTC is detected in the self-diagnostic results.

NOTE:

If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-27, "DTC Logic" or HAC-28, "DTC Logic".

Is DTC "B2581" or "B2582" displayed?

YES >> Perform the diagnosis for the intake sensor. Refer to HAC-35, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

1. CHECK INTAKE SENSOR POWER SUPPLY CIRCUIT

- Turn the ignition switch OFF.
- Disconnect the intake sensor connector.
- 3. Turn the ignition switch ON.

HAC

Α

D

Е

J

K

M

N

IN

INFOID:0000000007626770

B2581, B2582 INTAKE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

Check voltage between intake sensor harness connector and ground.

(+)		(–)	V/ IC.	
Intake sensor			Voltage (Approx.)	
Connector	Terminal		, , ,	
M205	1	Ground	5 V	

Is the inspection result normal?

YES >> GO TO 2. NO >> GO TO 4.

2. CHECK INTAKE SENSOR CIRCUIT CONTINUITY

- 1. Turn the ignition switch OFF.
- Disconnect the A/C auto amp. connector.
- 3. Check for continuity between the intake sensor harness connector and A/C auto amp. harness connector.

Intake sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	Continuity
M205	2	M66	37	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK INTAKE SENSOR

Check the intake sensor components. Refer to HAC-36, "Component Inspection".

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Replace the intake sensor.

4. CHECK INTAKE SENSOR CIRCUIT CONTINUITY

- 1. Turn the ignition switch OFF.
- 2. Disconnect the A/C auto amp. connector.
- 3. Check for continuity between the intake sensor harness connector and A/C auto amp. harness connector.

Intake sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	Continuity
M205	1	M66	16	Existed

4. Check for continuity between intake sensor harness connector and ground.

Intake sensor			Continuity	
Connector	Terminal		Continuity	
M205	1	Ground	Not existed.	

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Repair the harnesses or connectors.

Component Inspection

INFOID:0000000007626771

1. CHECK INTAKE SENSOR

- Turn the ignition switch OFF.
- Disconnect the intake sensor connector. Refer to <u>HAC-85</u>, "Exploded View".
- Check the resistance between the intake sensor terminals. Refer to the applicable table for the normal value.

B2581, B2582 INTAKE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

Ton	minal	Condition	Resistance: kΩ
ien	ппа	Temperature: °C (°F)	Resistance. K12
		-15 (5)	12.28
		-10 (14)	9.58
		-5 (23)	7.55
		0 (32)	6.00
		5 (41)	4.81
		10 (50)	3.88
1	2	15 (59)	3.16
		20 (68)	2.59
	·	25 (77)	2.14
		30 (86)	1.77
		35 (95)	1.48
		40 (104)	1.24
		45 (113)	1.05

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the intake sensor.

Α

В

С

D

Е

F

G

Н

HAC

J

Κ

L

M

Ν


0

B2630, B2631 SUNLOAD SENSOR

Description INFOID:000000007626772

SUNLOAD SENSOR

- The sunload sensor (1) is installed to the front defroster grille LH.
- The sunload sensor converts the sunload amount (illuminance) into the current value with the photodiode. The A/C auto amp. calculates this current value to the voltage and inputs it.

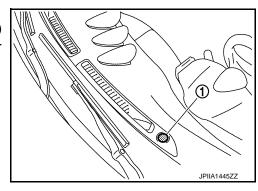

SUNI OAD AMOUNT CORRECTION

- The A/C auto amp. inputs the sunload amount detected with the sunload sensor.
- Perform the correction of the sunload amount detected with the sunload sensor for each air conditioning control.
- When the sunload amount suddenly changes, for example when entering a tunnel, perform the correction so
 that the recognition sunload amount of the A/C auto amp. changes slowly.

DTC Logic

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible causes
B2630	SUNLOAD SENSOR	Detected calorie at sunload sensor 2832 W/m ² (2436 kcal/m ² ·h) or more	Sunload sensor A/C auto amp. Harness and connector (Short in the sunload sensor circuit)
B2631		Detected calorie at sunload sensor 64.7 W/m ² (56 kcal/m ² ·h) or less	Sunload sensor A/C auto amp. Harness and connector (Open in the sunload sensor circuit)

DTC REPRODUCTION PROCEDURE

1.PERFORM SELF-DIAGNOSIS

(P)With CONSULT

- 1. Perform the "SELF-DIAGNOSIS".
- 2. Check if any DTC is detected in the self-diagnostic results.

NOTE:

- If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-27, "DTC Logic" or HAC-28, "DTC Logic".
- Sunload sensor may register a malfunction when indoors, at dusk, or at other times when light is insufficient. When performing the diagnosis indoors, use a lamp (60 W or more) that is pointed at the sunload sensor.

Is DTC "B2630" or "B2631" displayed?

YES >> Perform the diagnosis for the sunload sensor. Refer to HAC-38, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000007626774

1. CHECK SUNLOAD SENSOR POWER SUPPLY CIRCUIT

- 1. Turn the ignition switch OFF.
- Disconnect the sunload sensor connector.

B2630, B2631 SUNLOAD SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

- Turn the ignition switch ON.
- 4. Check voltage between sunload sensor harness connector and ground.

(+)		(–)	V. K.
Sunload sensor			Voltage (Approx.)
Connector	Terminal	_	(11 - 7
M46	1	Ground	5 V

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

2.check sunload sensor circuit continuity

- Turn the ignition switch OFF.
- 2. Disconnect the A/C auto amp. connector.
- 3. Check for continuity between the sunload sensor harness connector and the A/C auto amp. harness connector.

Sunload sensor		A/C auto amp.		Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
M46	2	M66	37	Existed	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3. CHECK SUNLOAD SENSOR

- Connect the sunload sensor connector.
- 2. Connect the A/C auto amp. connector.
- Check the sunload sensor components. Refer to <u>HAC-39</u>, "Component Inspection".

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Replace the sunload sensor.

4. CHECK SUNLOAD SENSOR CIRCUIT CONTINUITY

- Turn the ignition switch OFF.
- Disconnect the A/C auto amp. connector.
- Check for continuity between the sunload sensor harness connector and A/C auto amp. harness connector.

Sunloa	Sunload sensor		Sunload sensor A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	Continuity	
M46	1	M66	15	Existed	

4. Check for continuity between sunload sensor harness connector and ground.

Sunload sensor		_	Continuity
Connector	Terminal	_	Continuity
M46	1	Ground	Not existed

Is the inspection result normal?

YES >> Replace A/C auto amp.

NO >> Repair the harnesses or connectors.

Component Inspection

1. CHECK SUNLOAD SENSOR

Revision: 2011 August **HAC-39** 2012 370Z

HAC

Н

Α

В

D

Е

F

N /I

K

N


Ν

С

INFOID:0000000007626775

- Turn the ignition switch ON.
- 2. Check the input voltage from the sunload sensor between the A/C auto amp. harness connector and ground. Refer to the applicable table for the normal value.

(+)	(-)
A/C au	to amp.	
Connector	Terminal	_
M66	15	Ground

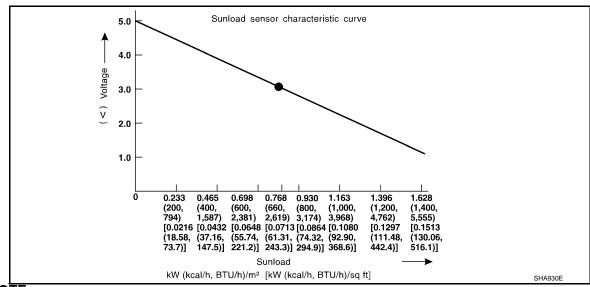

NOTE:

- When checking indoors, use a lamp of approximately 60 W. Move the lamp towards and away from the sensor to check.
- The sunload amount produced by direct sunshine in fair weather is equivalent to approximately 0.77 kW/m² (662 kcal/m²·h).

Is the inspection result normal?

YES >> INSPECTION END


NO >> Replace the sunload sensor.

B2632, B2633 AIR MIX DOOR MOTOR PBR

Description INFOID:0000000007626776

AIR MIX DOOR MOTOR

- The air mix door motor (1) is installed to the heater & cooling unit assembly.
- The LCU (Local Control Unit) is installed to each door motor so as to perform the multiplex communication control (LAN) between each door motor of the mode door motor, air mix door motor and intake door motor in one communication line.
- When each LCU receives the control signal (combination of the pulse wave with two types of amplitude) from the A/C auto amp., it moves each door to the appropriate position based on the door position detection signal of each PBR (Potentio Balance Resistor). When the movement was completed, each LCU transmits the signal that reports the movement completion to the A/C auto amp.

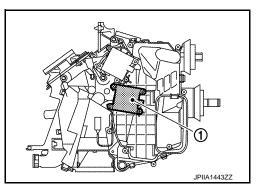

DTC Logic INFOID:0000000007626777

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible causes
B2632	DR AIR MIX DOOR MOT	Air mix door PBR position 95% or more	 Air mix door motor (PBR internal circuit is short) A/C auto amp. Harness and connector (LAN communication line is open or shorted)
B2633		Air mix door PBR position 5% or less	 Air mix door motor (PBR internal circuit is open) A/C auto amp. Harness and connector (LAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF-DIAGNOSIS

(P)With CONSULT

- 1. Perform the "SELF-DIAGNOSIS".
- Check if any DTC is detected in the self-diagnostic results.

- If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-27, "DTC Logic" or HAC-28, "DTC Logic".
- If all of door motors DTC (B2632 B2655) are detected, check door motor communication circuit. Refer to HAC-49, "Diagnosis Procedure".

Is DTC "B2632" or "B2633" displayed?

YES >> Perform the diagnosis of air mix door motor system. Refer to HAC-42, "Diagnosis Procedure".

NO >> GO TO 2.

2 . FUNCTION INSPECTION

- Turn temperature dial and raise temperature setting to 32.0°C (90°F) after warming up the engine.
- Check that warm air blows from outlets.
- Operate the compressor.
- Operate the temperature control dial and lower the set temperature to 18.0°C (60°F).
- Check that the cool air blows from the outlets.

Does it operate normally?

HAC

Н

Α

Е

M

Ν

B2632, B2633 AIR MIX DOOR MOTOR PBR

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

YES >> INSPECTION END

NO >> Check the air mix door motor system installation condition. Repair or replace the malfunctioning parts.

Diagnosis Procedure

INFOID:0000000007626778

1. CHECK BATTERY VOLTAGE OF AIR MIX DOOR MOTOR

- 1. Turn the ignition switch ON.
- 2. Check voltage between the air mix door motor harness connector and ground.

(+)		(–)	Valtana
Air mix door motor			Voltage (Approx.)
Connector	Terminal		(11 /
M204	1	Ground	12 V

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the harnesses or connectors.

2.CHECK SIGNAL OF AIR MIX DOOR MOTOR

Check output waveform between the air mix door motor harness connector and ground with the oscilloscope.

(-	+)	(–)		
Air mix d	oor motor		Output waveform	
Connector	Terminal	_		
M204	3	Ground	(V) 15 10 5 0 	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.check ground circuit of air mix door motor

- Turn the ignition switch OFF.
- 2. Disconnect the air mix door motor connector.
- 3. Check for continuity between the air mix door motor harness connector and ground.

Air mix door motor			Continuity	
Connector	Terminal	_	Continuity	
M204	2	Ground	Existed	

Is the inspection result normal?

YES >> Replace the air mix door motor.

NO >> Repair the harnesses or connectors.

B2636, B2637, B2638, B2639, B2654, B2655 MODE DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >


[WITHOUT 7 INCH DISPLAY]

B2636, B2637, B2638, B2639, B2654, B2655 MODE DOOR MOTOR

Description

MODE DOOR MOTOR

- The mode door motor (1) is installed to the heater & cooling unit assembly.
- The LCU (Local Control Unit) is installed to each door motor so as to perform the multiplex communication control (LAN) between each door motor of the mode door motor, air mix door motor and intake door motor in one communication line.
- When each LCU receives the control signal (combination of the pulse wave with two type of amplitude) from the A/C auto amp., it moves each door to the appropriate position based on the door position detection signal of each PBR (Potentio Balance Resistor). When the movement was completed, each LCU transmits the signal that reports the movement completion to the A/C auto amp.

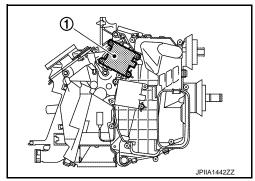

DTC Logic

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible cause
B2636	DR VENT DOOR FAIL	When the malfunctioning door position is detected at VENT position	
B2637	DR B/L DOOR FAIL	When the malfunctioning door position is detected at B/L position	• Mode deer meter (PPP internal
B2638	DR D/F1 DOOR FAIL	When the malfunctioning door position is detected at FOOT position	Mode door motor (PBR internal circuit is open or shorted) A/C auto amp.
B2639	DR DEF DOOR FAIL	When the malfunctioning door position is detected at DEF position	Harness and connector (LAN communication line is open ar shorted)
B2654	D/F2 DOOR FAIL	When the malfunctioning door position is detected at D/F position	or shorted)
B2655	B/L2 DOOR FAIL	When the malfunctioning door position is detected at B/L2 position	

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF-DIAGNOSIS

- 1. Perform the "SELF-DIAGNOSIS".
- 2. Check if any DTC is detected in the self-diagnostic results.

NOTE:

- If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-27, "DTC Logic" or HAC-28, "DTC Logic".
- If all of door motors DTC (B2632 B2655) are detected, check door motor communication circuit. Refer to HAC-49, "Diagnosis Procedure".

Is DTC "B2636", "B2637", "B2638", "B2639", "B2654" or "B2655" displayed?

YES >> Perform the diagnosis of mode door motor system. Refer to <u>HAC-44, "Diagnosis Procedure"</u>. NO >> GO TO 2.

2. FUNCTION INSPECTION

- 1. Turn mode control dial to each position.
- 2. Check that the air outlets change according to each indicated air outlet by placing a hand in front of the outlets. Refer to VTL-2, "System Description".

Does it operate normally?

- YES >> INSPECTION END
- NO >> Check the mode door system installation condition. Repair or replace the malfunctioning parts.

HAC

Н

Α

В

Е

/

N.I.

0

Р

Revision: 2011 August HAC-43 2012 370Z

B2636, B2637, B2638, B2639, B2654, B2655 MODE DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

Diagnosis Procedure

INFOID:0000000007626781

1. CHECK MODE DOOR MOTOR POWER SUPPLY CIRCUIT

- 1. Turn the ignition switch ON.
- 2. Check voltage between the mode door motor harness connector and ground.

(+)		(–)	Valle
Mode door motor			Voltage (Approx.)
Connector	Terminal		, ,
M203	1	Ground	12 V

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the harnesses or connectors.

2.CHECK MODE DOOR MOTOR SIGNAL

Check output waveform between the mode door motor harness connector and ground with the oscilloscope.

(+)	(–)	
Mode do	Mode door motor		Output waveform
Connector	Terminal	_	
M203	3	Ground	(V) 15 10 5 0

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

$\overline{3}$.check mode door motor ground circuit

- Turn the ignition switch OFF.
- 2. Disconnect the mode door motor connector.
- 3. Check for continuity between the mode door motor harness connector and ground.

Mode door motor		_	Continuity	
Connector	Terminal		Continuity	
M203	2	Ground	Existed	

Is the inspection result normal?

YES >> Replace the Mode door motor.

NO >> Repair the harnesses or connectors.


[WITHOUT 7 INCH DISPLAY]

B263D, B263E, B263F INTAKE DOOR MOTOR

Description INFOID:0000000007626782

INTAKE DOOR MOTOR

- The intake door motor (1) is installed to the blower unit.
- The LCU (Local Control Unit) is installed to each door motor so as to perform the multiplex communication control (LAN) between each door motor of the mode door motor, air mix door motor and intake door motor in one communication line.
- When each LCU receives the control signal (combination of the pulse wave with two type of amplitude) from the A/C auto amp., it moves each door to the appropriate position based on the door position detection signal of each PBR (Potentio Balance Resistor). When the movement was completed, each LCU transmits the signal that reports the movement completion to the A/C auto amp.

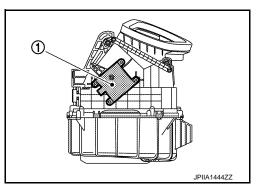

DTC Logic INFOID:0000000007626783

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible cause
B263D	FRE DOOR FAIL	When the malfunctioning intake door position is detected at FRE position	Intake door motor (PBR internal circuit is open or shorted)
B263E	20P FRE DOOR FAIL	When the malfunctioning intake door position is detected at 20%FRE position	A/C auto amp. Harness and connector (LAN communication line is open or shorted)
B263F	REC DOOR FAIL	When the malfunctioning intake door position is detected at REC position	

DTC CONFIRMATION PROCEDURE

PERFORM SELF-DIAGNOSIS

(P)With CONSULT

- 1. Perform the "SELF-DIAGNOSIS".
- Check if any DTC is detected in the self-diagnostic results.

NOTE:

- If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-27, "DTC Logic" or HAC-28, "DTC Logic".
- If all of door motors DTC (B2632 B2655) are detected, check door motor communication circuit. Refer to HAC-49. "Diagnosis Procedure".

Is DTC "B263D", "B263E" or "B263F"?

YES >> Perform the diagnosis of intake door motor system. Refer to HAC-46, "Diagnosis Procedure".

NO >> GO TO 2.

2.function inspection

- Press intake switch to set the air outlet to recirculation.
- The REC indicator turns ON.
- 3. Listen to intake sound and confirm air inlets change.
- Press intake switch again to set the air outlet to fresh air intake.
- The FRE indicator turns ON.
- Listen to intake sound and confirm air inlets change.

Does it operate normally?

Revision: 2011 August

YES >> INSPECTION END

>> Check the intake door system installation condition. Repair or replace the malfunctioning parts. NO

HAC

Α

D

Е

K

M

Ν

B263D, B263E, B263F INTAKE DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

Diagnosis Procedure

INFOID:0000000007626784

1. CHECK BATTERY VOLTAGE OF INTAKE DOOR MOTOR

- 1. Turn the ignition switch ON.
- 2. Check voltage between the intake door motor harness connector and ground.

(+)		(–)	Vallene
Intake door motor		_	Voltage (Approx.)
Connector	Terminal		, , ,
M206	1	Ground	12 V

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the harnesses or connectors.

2. CHECK INTAKE DOOR MOTOR SIGNAL

Check output waveform between the intake door motor harness connector and ground with the oscilloscope.

(+)		(+) (-)		
Intake door motor			Output waveform	
Connector	Terminal	_		
M206	3	Ground	(V) 15 10 5 0 	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.check intake door motor ground circuit

- Turn the ignition switch OFF.
- 2. Disconnect the intake door motor connector.
- 3. Check for continuity between the intake door motor harness connector and ground.

Intake door motor		_	Continuity	
Connector	Terminal	_	Continuity	
M206	2	Ground	Existed	

Is the inspection result normal?

YES >> Replace the Intake door motor.

NO >> Repair the harnesses or connectors.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

POWER SUPPLY AND GROUND CIRCUIT A/C AUTO AMP.

A/C AUTO AMP.: Diagnosis Procedure

INFOID:0000000007626785

Α

В

D

Е

F

1.CHECK FUSE

Check 10A fuses [Nos. 3, 6 and 19, located in the fuse block (J/B)].

NOTE:

Refer to PG-104, "Fuse, Connector and Terminal Arrangement".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the fuse after repairing the applicable circuit.

2.CHECK A/C AUTO AMP. POWER SUPPLY CIRCUIT

- Turn the ignition switch OFF.
- 2. Disconnect the A/C auto amp. connector.
- 3. Check voltage between A/C auto amp. harness connector and ground.

(+)	(-)	Voltage		_
A/C au	ito amp.		Ignition switch position		
Connector	Terminal	_	OFF	ACC	ON
	17		Approx. 0 V	Battery voltage	Battery voltage
M66	20	Ground	Approx. 0 V	Approx. 0 V	Battery voltage
	40		Battery voltage	Battery voltage	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK A/C AUTO AMP. CIRCUIT CONTINUITY

- 1. Turn the ignition switch OFF.
- 2. Check continuity between A/C auto amp. harness connector and ground.

A/C auto amp.		_	Continuity	
Connector	Terminal	_	Continuity	
M66	19	Ground	Existed	
IVIOO	39	Ground	LXISted	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair the harnesses or connectors.

A/C CONTROL

A/C CONTROL : Diagnosis Procedure

1. CHECK A/C CONTROL POWER SUPPLY CIRCUIT

- Turn the ignition switch OFF.
- 2. Disconnect the A/C control connector.
- 3. Turn the ignition switch ON.
- 4. Check voltage between A/C control harness connector and ground.

HAC

Н

J

K

L

Ι\ /Ι

Ν

INFOID:0000000007626786

2012 370Z

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

(+)		(+)	
A/C d	control		Voltage
Connector	Terminal	_	
M67	1	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 2.

NO >> Chec

- >> Check 10A fuse (No. 3, located in the fuse block). Refer to <u>PG-104, "Fuse, Connector and Terminal Arrangement"</u>.
 - If fuse is OK, check harness for open circuit. Repair or replace if necessary.
 - If fuse is NG, replace fuse and check for short circuit. Repair or replace if necessary.

2.CHECK A/C CONTROL CIRCUIT CONTINUITY

- 1. Turn the ignition switch OFF.
- 2. Check continuity between A/C control harness connector and ground.

A/C d	control		Continuity	
Connector	Terminal		Continuity	
M67	6	Ground	Existed	


Is the inspection result normal?

YES >> Replace the A/C control.

NO >> Repair the harnesses or connectors.

DOOR MOTOR COMMUNICATION CIRCUIT

Description

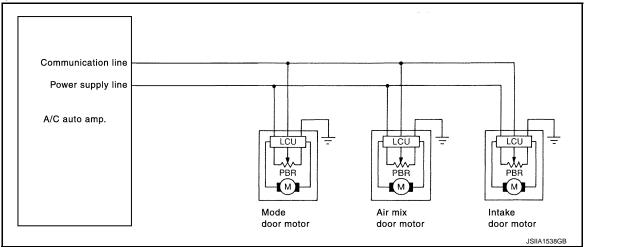

- LCU (Local Control Unit) is built in to each door motor. And detects door position by PBR (Potentio Balance Resistor).
- A/C auto amp. communicates with each LCU via communication line. And receives each door position feedback signal from each LCU.
- Each LCU control each door to the appropriate position depending on the control signal from A/C auto amp.
 When the door movement was completed, transmits the signal of door movement completion to A/C auto amp.

Diagnosis Procedure

INFOID:0000000007626788

NOTE:

If all of door motors DTC are detected, check this circuit.

1. CHECK COMMUNICATION SIGNAL

- 1. Turn the ignition switch ON.
- 2. Check output waveform between A/C auto amp. harness connector and ground with the oscilloscope.

(+)	(–)		
A/C au	to amp.		Output waveform	
Connector	Terminal	_		
M66	10	Ground	(V) 15 10 5 0	

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK COMMUNICATION SIGNAL CIRCUIT FOR SHORT

- Turn the ignition switch OFF.
- 2. Disconnect the following connectors:
- A/C auto amp.
- Mode door motor
- Intake door motor
- Air mix door motor
- 3. Check continuity between A/C auto amp. harness connector and ground.

HAC

Н

Α

В

D

INFOID:0000000007626787

K

1

N

Ν

0

2012 370Z

encor community between 700 date amp. Harness commencer and ground.

DOOR MOTOR COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

A/C au	to amp.		Continuity	
Connector	Terminal	_	Continuity	
M66	10	Ground	Not existed	

Is the inspection result normal?

YES >> Replace A/C auto amp.

NO >> Repair the harnesses or connectors.

3.check communication signal circuit for open

- 1. Turn the ignition switch OFF.
- 2. Disconnect the A/C auto amp. and the mode door motor connectors.
- 3. Check continuity between A/C auto amp. harness connector and the mode door motor harness connector.

A/C au	A/C auto amp.		oor motor	Continuity
Connector	Terminal	Connector Terminal		Continuity
M66	10	M203	3	Existed

Is the inspection result normal?

YES >> Replace A/C auto amp.

NO >> Repair the harnesses or connectors.

A/C CONTROL SIGNAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

A/C CONTROL SIGNAL CIRCUIT

Diagnosis Procedure

INFOID:0000000007626789

Α

В

D

Е

1.SELF-DIAGNOSIS RESULT CHECK

(P)With CONSULT

- Perform the "SELF-DIAGNOSIS RESULTS" of HVAC.
- 2. Check if any DTC is displayed in the self-diagnosis results.

NOTE

If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-27, "DTC Logic" or HAC-28, "DTC Logic".

Is any DTC displayed?

YES >> Perform the diagnosis that is applicable to the sensor and actuator. Refer to HAC-66, "DTC <a href="Index".

NO >> GO TO 2.

2.CHECK TX (A/C CONTROL ightarrow A/C AUTO AMP.) CIRCUIT CONTINUITY

- 1. Turn the ignition switch OFF.
- 2. Disconnect the A/C control and the A/C auto amp. connector.
- 3. Check continuity between A/C control harness connector and A/C auto amp. harness connector.

A/C control		A/C auto amp.		Continuity
Connector	Terminal	Connector Terminal		Continuity
M67	5	M66	6	Existed

4. Check continuity between A/C control harness connector and ground.

A/C control			Continuity	
Connector	Terminal	_	Continuity	
M67	5	Ground	Not existed	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK RX (A/C AUTO AMP. ightarrow A/C CONTROL) CIRCUIT CONTINUITY

- 1. Disconnect the A/C control and the A/C auto amp. connector.
- 2. Check continuity between A/C control harness connector and A/C auto amp. harness connector.

A/C d	A/C control		ito amp.	Continuity
Connector	Terminal	Connector		
M67	4	M66	7	Existed

Check continuity between A/C control harness connector and ground.

A/C control		_	Continuity	
Connector	Terminal	_	Continuity	
M67	4	Ground	Not existed	

Is the inspection result normal?

YES >> Perform trouble diagnosis for the A/C control. Refer to <u>HAC-47, "A/C CONTROL : Diagnosis Procedure"</u>.

NO >> Repair harness or connector.

HAC

Н

Λ

Ν


0

A/C AUTO AMP.

Description INFOID:000000007626790

A/C AUTO AMP. (A/C AUTO AMPLIFIER)

- The A/C auto amp. (1) has a built-in microcomputer which processes information sent from various sensors needed for air conditioning system operation.
- The air mix door motor, mode door motor, intake door motor, blower motor and the compressor are then controlled.
- When the various switches and dials are operated, data is input to the A/C auto amp. from the A/C control via communication line.
- Self-diagnosis functions are also built into A/C auto amp. to provide quick check of malfunctions in the auto air conditioning system.

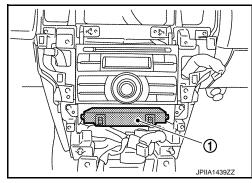

Component Function Check

INFOID:0000000007626791

1. CHECK OPERATION

- 1. Operate the fan control dial to AUTO position.
- Operate the temperature control dial. Check that the fan speed or discharge air changes (the discharge air temperature or fan speed varies depending on the ambient temperature, in-vehicle temperature, and set temperature).

Does it operate normally?

YES >> INSPECTION END

NO >> Perform the diagnosis for the A/C auto amp. Refer to HAC-52, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000007626792

1. INSPECTION BY FAIL-SAFE FUNCTION

- 1. Turn the ignition switch ON.
- 2. After approximately 30 seconds, check that the air conditioning system is operated by the fail-safe function. Refer to HAC-65, "Fail-safe".

Is the fail-safe function operated?

YES >> GO TO 3. NO >> GO TO 2.

2.CHECK A/C AUTO AMP. POWER SUPPLY CIRCUIT AND GROUND CIRCUIT

Check A/C auto amp. power supply circuit and ground circuit. Refer to <u>HAC-47, "A/C AUTO AMP. : Diagnosis Procedure"</u>.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace parts depending on the inspection results.

3. CHECK A/C CONTROL SIGNAL CIRCUIT

Check the A/C control signal circuit. Refer to HAC-51, "Diagnosis Procedure".

Is the inspection result normal?


YES >> Replace A/C auto amp.


NO >> Repair or replace parts according to the inspection results.

BLOWER MOTOR

Description INFOID:000000007626793

- The blower motor utilizes a brush-less motor with a rotating magnet.
- Quietness is improved over previous motors where the brush was the point of contact and the coil rotated.

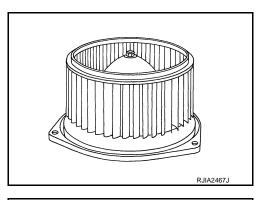

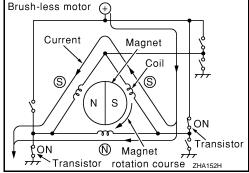

Component Function Check

INFOID:0000000007626794

1. CHECK OPERATION

- 1. Warm up the engine.
- Operate the fan control dial. Check that the fan speed and indicator unit are switched for all fan speeds.

Does it operate normally?

YES >> INSPECTION END

NO >> Perform the diagnosis for the blower motor. Refer to HAC-53, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000007626795

${f 1}$. ${f self}$ -diagnosis result check

(P)With CONSULT

- 1. Perform the "SELF-DIAGNOSIS".
- 2. Check if any DTC is detected in the self-diagnostic results.

NOTE

If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-27, "DTC Logic" or HAC-28, "DTC Logic".

Is any DTC displayed?

YES >> Perform the diagnosis that is applicable to the sensor and actuator. Refer to HAC-66, "DTC Index".

NO >> GO TO 2.

2.PERFORM ACTIVE TEST

(P)With CONSULT

- 1. Perform the "HVAC TEST" of HVAC active test item.
- 2. Check that the blower motor control signal changes according to each indicator number.

HAC

K

M

Ν

Р

Н

Α

В

D

Е

Revision: 2011 August **HAC-53** 2012 370Z

		Test item					
	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	MODE 6	MODE 7
Blower fan motor control sig- nal duty ratio	37%	91%	65%	65%	65%	91%	_

NOTE:

- · Perform the inspection of each output device after starting the engine because the compressor is operated.
- If the Mode 7 is selected, the malfunction is displayed but it is normal.

Does it operate normally?

YES >> INSPECTION END

NO >> GO TO 3.

3.CHECK BLOWER MOTOR POWER SUPPLY CIRCUIT

- Turn the ignition switch OFF.
- 2. Disconnect the blower motor connector.
- 3. Turn the ignition switch ON.
- 4. Check voltage between blower motor harness connector and ground.

(-	(+) (-)			
Blowe	r motor	Voltage		
Connector	Terminal			
M109	1	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 7.

4. CHECK BLOWER MOTOR GROUND CIRCUIT

- 1. Turn the ignition switch OFF.
- 2. Check for continuity between blower motor harness connector and ground.

Blower motor			Continuity	
Connector	Terminal		Continuity	
M109	3	Ground	Existed	

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the harnesses or connectors.

CHECK BLOWER MOTOR CIRCUIT CONTINUITY

- Disconnect the A/C auto amp. connector.
- 2. Check for continuity between the blower motor harness connector and A/C auto amp. harness connector.

Blowe	Blower motor		ito amp.	Continuity
Connector	Terminal	Connector Terminal		Continuity
M109	2	M66	32	Existed

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair the harnesses or connectors.

$oldsymbol{6}.$ CHECK A/C AUTO AMP. OUTPUT SIGNAL

- Reconnect blower motor connector and A/C auto amp. connector.
- 2. Turn the ignition switch ON.
- 3. Set the mode control dial to VENT position.

< DTC/CIRCUIT DIAGNOSIS >


Change fan speed from Lo to Hi, and check duty ratios between blower motor harness connector and ground by using an oscilloscope.

NOTE:

Calculate the drive signal duty ratio as shown in the figure.

T2 = Approx. 1.6 ms

Blowe	r motor	Condition	Duty ratio
Connector	Terminal	Fan speed (manual) VENT mode	(Approx.)
		1st	25 %
M109	2	5th	33 %
		10th	43 %
		15th	53 %
		20th	63 %
		25th	81 %

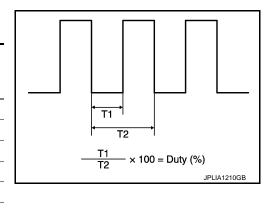

Is the inspection result normal?

YES >> Replace blower motor after confirming the fan air flow does not change.

NO >> Replace the A/C auto amp.

7.CHECK BLOWER MOTOR CIRCUIT CONTINUITY

- Turn the ignition switch OFF.
- Disconnect the blower motor connector and fuse block (J/B) connector.
- Check the continuity between the blower motor harness connector and fuse block (J/B) harness connec-

Blower motor		Blower motor Fuse block (J/B)		Continuity	
Connector	Terminal	Connector Terminal		Continuity	
M109	1	M1	3A	Existed	
W 109		M1	MIT	8A	Laisteu

Check for continuity between blower motor harness connector and ground.

Blowe	r motor	_	Continuity	
Connector Terminal		_	Continuity	
M109	1	Ground	Not existed	

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair the harnesses or connectors.

8.CHECK FUSE

Check 15A fuses [Nos. 21 and 22, located in the fuse block (J/B)].

NOTE:

Refer to PG-104, "Fuse, Connector and Terminal Arrangement".

Is the inspection result normal?

>> Inspection the power supply circuit. Refer to PG-18, "Wiring Diagram - IGNITION POWER SUP-YES PLY -".

NO >> Replace the fuse after repairing the applicable circuit.

Component Inspection

1. CHECK BLOWER MOTOR Remove the blower motor. Refer to VTL-11, "Exploded View".

HAC

Α

В

D

F

K

M

Ν

Р

INFOID:0000000007626796

BLOWER MOTOR


< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

2. Check that the blower motor turns smoothly. Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the blower motor.

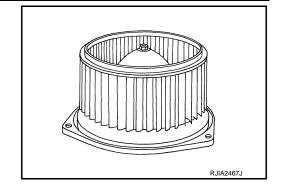

MAGNET CLUTCH Α Description INFOID:0000000007626797 The magnet clutch is the device that drives the compressor with the signal from IPDM E/R. В Component Function Check INFOID:0000000007626798 1. CHECK OPERATION 1. Turn the fan control dial ON. 2. Press the A/C switch. Check that the indicator of the A/C switch turns ON. Check visually and by sound that the compressor D operates. 4. Press the A/C switch again. 5. Check that the indicator of the A/C switch turns OFF. Check visually and by sound that the compressor stops. Does it operate normally? YES >> INSPECTION END F NO >> Go to diagnosis procedure. Refer to HAC-57, "Diagnosis Procedure". Diagnosis Procedure INFOID:0000000007626799 CHECK CHARGED REFRIGERANT Connect the recovery/recycling recharging equipment to the vehicle and perform the pressure inspection with Н the gauge. Refer to HA-34, "Inspection". Is there refrigerant? YES >> GO TO 2. NO >> Check for refrigerant leakages detecting fluorescent leak detector. Refer to HA-26, "Leak Test". 2.CHECK MAGNET CLUTCH OPERATION Perform auto active test of IPDM E/R. Refer to PCS-11, "Diagnosis Description". Does it operate normally? YES >> GO TO 6. NO >> GO TO 3. 3.CHECK MAGNET CLUTCH Turn the ignition switch OFF. L Disconnect the magnet clutch connector.

- Directly apply the battery voltage to the magnet clutch. Check for operation visually and by sound.

Does it operate normally?

YES >> GO TO 4.

NO

>> Replace magnet clutch. Refer to HA-37, "MAGNET CLUTCH: Removal and Installation of Compressor Clutch".

4. CHECK MAGNET CLUTCH CIRCUIT CONTINUITY

- 1. Turn the ignition switch OFF.
- 2. Disconnect IPDM E/R connector.
- Check continuity between the magnet clutch harness connector and IPDM E/R harness connector.

IPDM E/R		Magnet clutch		Continuity	
Connector	Terminal	Connector Terminal		Continuity	
E7	48	F43	1	Existed	

Check for continuity between IPDM E/R harness connector and ground.

HAC

K

M

Ν

< DTC/CIRCUIT DIAGNOSIS >

IPDI	M E/R		Continuity
Connector	Connector Terminal		Continuity
E7	48	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the harnesses and connectors.

5. CHECK FUSE

Check 10A fuse (No. 49, located in the IPDM E/R).

NOTE:

Refer to PG-106, "Fuse, Connector and Terminal Arrangement".

Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> Replace the fuse after repairing the applicable circuit.

6. CHECK SELF-DIAGNOSIS RESULT CHECK

(P)With CONSULT

- 1. Perform the "SELF-DIAGNOSIS".
- 2. Check if any DTC is detected in the self-diagnostic results.

NOTE:

If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-27, "DTC Logic" or HAC-28, "DTC Logic".

Is any DTC displayed?

YES >> Perform the diagnosis that is applicable to the sensor and actuator. Refer to HAC-66, "DTC Index".

NO >> GO TO 7.

7.CHECK A/C AUTO AMP. OUTPUT SIGNAL

(P)With CONSULT

- 1. Perform the "DATA MONITOR" of HVAC. Refer to HAC-61, "Reference Value".
- 2. Check A/C ON signal and blower fan ON switch signal.

Monitor item	Condition	Status
COMP REQ SIG	A/C switch: OFF	Off
COMP REQ 31G	A/C switch: ON	On
FAN REQ SW	Fan control dial: OFF	Off
FAIN NEQ SW	Fan control dial: ON	On

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace A/C auto amp.

8. CHECK REFRIGERANT PRESSURE SENSOR

Check the refrigerant pressure sensor. Refer to EC-530, "Diagnosis Procedure".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace the malfunctioning parts.

ECV (ELECTRICAL CONTROL VALVE)

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

ECV (ELECTRICAL CONTROL VALVE)

Description

The ECV (electrical control valve) is installed on the compressor and controls it for emitting appropriate amount of refrigerant when necessary.

Diagnosis Procedure

INFOID:0000000007626801

1.CHECK FUSE

Check 10A fuse [No. 3, located in the fuse block (J/B)].

NOTE:

D

Е

Α

В

Refer to PG-104, "Fuse, Connector and Terminal Arrangement".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the fuse after repairing the applicable circuit.

2.CHECK ECV POWER SUPPLY CIRCUIT

- 1. Turn the ignition switch OFF.
- 2. Disconnect the ECV connector.
- 3. Turn the ignition switch ON.
- 4. Check voltage between the ECV harness connector and ground.

(+)		(+) (-)	
Е	CV		Voltage
Connector	Terminal	_	
F44	2	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK ECV CONTROL SIGNAL

With CONSULT

- Turn the ignition switch OFF.
- Connect the ECV connector.
- 3. Perform the "HVAC TEST": MODE 5 of HVAC active test mode.
- 4. Check output waveform between the A/C auto amp. harness connector and ground with the oscilloscope.

(+)		(–)			
A/C auto amp.			Condition	Output waveform	
Connector	Terminal	_			
M66	24	Ground	HVAC TEST: MODE 5	Duty ratio: approx. 50 % (V) 15 10 5 0	

Is the inspection result normal?

YES >> Replace the compressor.

NO >> GO TO 4.

4. CHECK CONTINUITY BETWEEN ECV AND A/C AUTO AMP.

- Turn the ignition switch OFF.
- 2. Disconnect the ECV connector.

HAC

K

M

Ν

Р

Н

Revision: 2011 August HAC-59 2012 370Z

ECV (ELECTRICAL CONTROL VALVE)

< DTC/CIRCUIT DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

- 3. Disconnect the A/C auto amp. connector.
- 4. Check continuity between the ECV harness connector and A/C auto amp. harness connector.

E	ECV		ito amp.	Continuity
Connector	Terminal	Connector Terminal		Continuity
F44	3	M66	24	Existed

5. Check for continuity between the ECV harness connector and ground.

E	CV	_	Continuity
Connector Terminal			Continuity
F44	3	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the harnesses or connectors.

5.CHECK ECV

Check continuity between the ECV connector terminals.

	E	Continuity		
Connector	Terminal	Continuity		
F44	2	F44	3	Existed

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Replace the compressor.

[WITHOUT 7 INCH DISPLAY]

ECU DIAGNOSIS INFORMATION


A/C AUTO AMP.

Reference Value

CONSULT DATA MONITOR REFERENCE VALUES

Monitor item	Co	ondition	Value/Status
COMP REQ SIG	Engine: Run at idle after warming up	A/C switch: ON (Compressor operation status)	On
		A/C switch: OFF	Off
FAN REQ SIG	Engine: Run at idle after	Blower motor: ON	On
FAN REQ SIG	warming up	Blower motor: OFF	Off
AMB TEMP SEN	Ignition switch ON	_	-22 - 131°F (-30 - 55°C)
IN-VEH TEMP	Ignition switch ON	_	-22 - 131°F (-30 - 55°C)
INT TEMP SEN	Ignition switch ON	_	-22 - 131°F (-30 - 55°C)
SUNLOAD SEN	Ignition switch ON	_	0 – 1045 w/m ² (0 – 900 kcal/m ² ·h)
AMB SEN CAL	Ignition switch ON	_	-22 - 131°F (-30 - 55°C)
IN-VEH CAL	Ignition switch ON	_	-22 - 131°F (-30 - 55°C)
INT TEMP CAL	Ignition switch ON	_	-22 - 131°F (-30 - 55°C)
SUNL SEN CAL	Ignition switch ON	_	0 – 1045 w/m ² (0 – 900 kcal/m ² ·h)
EANI DUTY	Engine: Run at idle after	Blower motor: ON	25 – 81
FAN DUTY	warming up	Blower motor: OFF	0
XM	Ignition switch ON	nition switch ON —	
ENG COOL TEMP	Ignition switch ON	_	Values depending on cool- ant temperature
VEHICLE SPEED	Driving	_	Equivalent to speedometer reading

TERMINAL LAYOUT

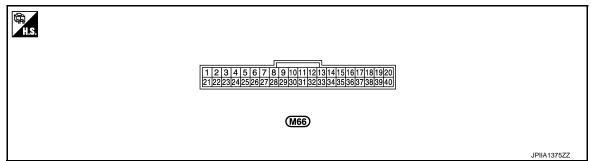

PHYSICAL VALUES

Revision: 2011 August HAC-61 2012 370Z

HAC

Α

В

C

D

Е

F

G

Н

J

K

M

L

Ν

0

Termin (Wire		Description			Value
+	_	Signal name	Input/ Output	Condition	(Approx.)
1 (L)	Ground	CAN - H	Input/ Output	_	_
2 (P)	Ground	CAN - L	Input/ Output	_	-
6 (L)	Ground	Communication signal (AMP-SW)	Input	_	_
7 (P)	Ground	Communication signal (SW - AMP)	Output	_	_
10 (BR)	Ground	A/C LAN signal	Input/ Output	Ignition switch ON	(V) 15 10 5 0
11 (Y)	Ground	Each door motor power supply	_	Ignition switch ON	12 V
15 (O)	Ground	Sunload sensor signal	Input	_	0 – 4.8 V Output voltage varies with sunload amount
16 (R)	Ground	Intake sensor signal	Input	_	0 – 4.8 V Output voltage varies with intake temperature
17 (L)	Ground	ACC power supply	_	Ignition switch ACC	Battery voltage
19 (B)	Ground	Ground	_	Ignition switch ON	0 V
20 (G)	Ground	Ignition power supply	_	Ignition switch ON	Battery voltage
24 (O)	Ground	ECV signal	Output	Ignition switch ONActive test: MODE 5	(V) 15 10 5 0
32 (P)	Ground	Blower motor control signal	Output	Ignition switch ON Fan speed: 1st speed (manual)	(V) 6 4 2 0 0 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
34 (G)	Ground	A/C auto amp. connecting recognition signal	Output	Ignition switch ON	5 V
35 (V)	Ground	Ambient sensor signal	Input	_	0 – 4.8 V Output voltage varies with ambient temperature

A/C AUTO AMP.

< ECU DIAGNOSIS INFORMATION >

[WITHOUT 7 INCH DISPLAY]

	Terminal No. (Wire color) Description		Condition		Value
+	_	Signal name	Input/ Output	Condition	(Approx.)
36 (LG)	Ground	In-vehicle sensor signal	Input	_	0 – 4.8 V Output voltage varies with in-vehi- cle temperature
37 (GR)	Ground	Sensor ground	_	Ignition switch ON	0 V
39 (B)	Ground	Ground	_	Ignition switch ON	0 V
40 (Y)	Ground	Battery power supply	_	Ignition switch OFF	Battery voltage

Е

Α

В

С

D

F

G

Н

HAC

Κ

L

M


Ν

0

Wiring Diagram - AUTOMATIC AIR CONDITIONING SYSTEM -

INFOID:0000000007626803

For connector terminal arrangements, harness layouts, and alphabets in a (option abbreviation; if not described in wiring diagram), refer to GI-12, "Connector Information".

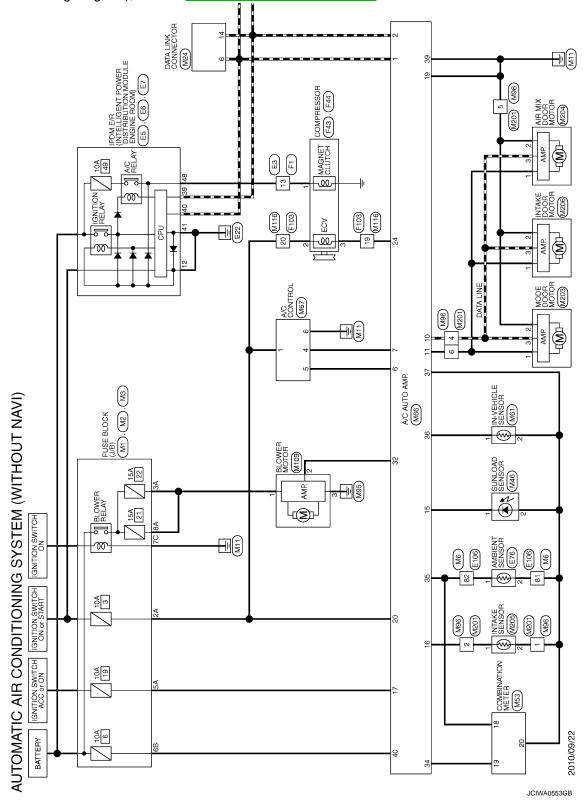

Α

В

D

Е

F

Н

HAC

K

M

Ν

0

Fail-safe

INFOID:0000000007626804

JCIWA0554GB

FAIL-SAFE FUNCTION

When a communication malfunction between A/C auto amp. and A/C control continued for approximately 30 seconds or more, control the air conditioning system under the following conditions.

Compressor : ON
Air outlet : AUTO

Air inlet : FRE (Fresh air intake)

Fan speed : AUTO

Preset temperature : Setting before communication malfunction

DTC Inspection Priority Chart

INFOID:0000000007626805

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)
1	U1000: CAN COMM CIRCUIT U1010: CONTROL UNIT (CAN)
2	 B2578: IN-VEHICLE SENSOR B2579: IN-VEHICLE SENSOR B257B: AMBIENT SENSOR B257C: AMBIENT SENSOR B2581: INTAKE SENSOR B2582: INTAKE SENSOR B2630: SUNLOAD SENSOR B2631: SUNLOAD SENSOR B2632: DR AIR MIX DOOR MOT B2633: DR AIR MIX DOOR MOT B2636: DR VENT DOOR FAIL B2637: DR B/L DOOR FAIL B2639: DR DFF DOOR FAIL B2639: DR DFF DOOR FAIL B2630: FRE DOOR FAIL B263F: REC DOOR FAIL B263F: REC DOOR FAIL B265F: REC DOOR FAIL B265F: B/L2 DOOR FAIL B2655: B/L2 DOOR FAIL

DTC Index

DTC	Items (CONSULT screen terms)	Reference	
U1000	CAN COMM CIRCUIT	HAC-27, "DTC Logic"	
U1010	CONTROL UNIT (CAN)	HAC-28, "DTC Logic"	
B2578	IN-VEHICLE SENSOR	HAC-32, "DTC Logic"	
B2579	IN-VEHICLE SENSOR	HAC-32, "DTC Logic"	
B257B	AMBIENT SENSOR	HAC-29, "DTC Logic"	
B257C	AMBIENT SENSOR	HAC-29, "DTC Logic"	
B2581	INTAKE SENSOR	HAC-35, "DTC Logic"	
B2582	INTAKE SENSOR	HAC-35, "DTC Logic"	
B2630*	SUNLOAD SENSOR	HAC-38, "DTC Logic"	
B2631*	SUNLOAD SENSOR	HAC-38, "DTC Logic"	
B2632	DR AIR MIX DOOR MOT	HAC-41, "DTC Logic"	
B2633	DR AIR MIX DOOR MOT	HAC-41, "DTC Logic"	
B2636	DR VENT DOOR FAIL	HAC-43, "DTC Logic"	
B2637	DR B/L DOOR FAIL	HAC-43, "DTC Logic"	
B2638	DR D/F1 DOOR FAIL	HAC-43, "DTC Logic"	

A/C AUTO AMP.

< ECU DIAGNOSIS INFORMATION >

[WITHOUT 7 INCH DISPLAY]

DTC	Items (CONSULT screen terms)	Reference
B2639	DR DEF DOOR FAIL	HAC-43, "DTC Logic"
B263D	FRE DOOR FAIL	HAC-45, "DTC Logic"
B263E	20P FRE DOOR FAIL	HAC-45, "DTC Logic"
B263F	REC DOOR FAIL	HAC-45, "DTC Logic"
B2654	D/F2 DOOR FAIL	HAC-43, "DTC Logic"
B2655	B/L2 DOOR FAIL	HAC-43, "DTC Logic"

^{*:} Perform self-diagnosis under sunshine. When performing indoors, aim a light (more than 60 W) at sunload sensor, otherwise self-diagnosis indicates even though the sunload sensor is functioning normally.

NOTE:

If all of door motors DTC (B2632, B2633, B2636, B2637, B2638, B2639, B263D, B263E, B263F, B2654 and B2655) are detected, check door motor communication circuit. Refer to HAC-49, "Description".

HAC

Н

Α

В

C

D

Е

F

Κ

L

M

Ν

0

SYMPTOM DIAGNOSIS

AUTOMATIC AIR CONDITIONING SYSTEM

Diagnosis Chart By Symptom

INFOID:0000000007626807

Symptom	Check item	Reference		
A/C system does not activate.	Power supply and ground circuit	HAC-47, "A/C AUTO AMP. : Diagnosis Procedure" (A/C auto amp.) HAC-47, "A/C CONTROL : Diagnosis Procedure" (A/C control)		
	A/C control signal circuit	HAC-51, "Diagnosis Procedure"		
A/C system cannot be controlled.	A/C auto amp.	HAC-52, "Diagnosis Procedure"		
Air outlet does not change.Mode door motor does not operate normally.	Mode door motor	HAC-44, "Diagnosis Procedure"		
 Discharge air temperature does not change. The air mix door motor does not operate normally. 	Air mix door motor	HAC-42, "Diagnosis Procedure"		
Intake door does not change.Intake door motor does not operate normally.	Intake door motor	HAC-46, "Diagnosis Procedure"		
Blower motor operation is malfunctioning.	Blower motor	HAC-53, "Diagnosis Procedure"		
Magnet clutch does not operate.	Magnet clutch	HAC-57, "Diagnosis Procedure"		
Insufficient cooling	ECV	HAC-59, "Diagnosis Procedure"		
 No cool air comes out. (Air flow volume is normal.) 	Insufficient cooling	HAC-69, "Diagnosis Procedure"		
 Insufficient heating No warm air comes out. (Air flow volume is normal.) 	Insufficient heating	HAC-71, "Diagnosis Procedure"		
 Noise Noise is heard when the A/C system operates. 	Noise	HAC-74, "Diagnosis Procedure"		

INSUFFICIENT COOLING

Description

Symptom

- Insufficient cooling
- No cool air comes out. (Air flow volume is normal.)

Diagnosis Procedure

1. CHECK MAGNET CLUTCH OPERATION

- Turn the ignition switch ON.
- Turn the fan control dial ON.
- 3. Press the A/C switch.
- Check that the indicator of the A/C switch turns ON. Check visually and by sound that the compressor operates.
- 5. Press the A/C switch again.
- 6. Check that the indicator of the A/C switch turns OFF. Check that the compressor stops.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Magnet clutch system malfunction. Refer to HAC-57, "Diagnosis Procedure".

$\mathbf{2}.$ CHECK DRIVE BELT

Check tension of the drive belt. Refer to <a>EM-17, "Checking".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Adjust or replace drive belt depending on the inspection results.

3. CHECK REFRIGERANT CYCLE PRESSURE

Connect the recovery/recycling recharging equipment to the vehicle and perform the pressure inspection with the gauge. Refer to HA-7, "Symptom Table".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the parts depending on the inspection results.

4. CHECK PERFORMANCE CHART

Connect recovery/recycling recharging equipment to the vehicle and perform the performance test. Refer to HA-34, "Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 7.

${f 5}$.CHECK AMBIENT TEMPERATURE DISPLAY

Check that there is not much difference between actual ambient temperature and indicated temperature on information display in combination meter.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Perform the diagnosis for the A/C auto amp. connection recognition signal. Refer to MWI-56. "Diagnosis Procedure".

6.CHECK SETTING OF TEMPERATURE SETTING TRIMMER

(P)With CONSULT

- 1. Select "TEMP SET CORRECT" of HVAC work support item. Refer to HAC-9, "Temperature Setting Trimmer".
- Check that the temperature setting trimmer is set to "+ direction".

NOTE:

The control temperature can be set with the setting of the temperature setting trimmer.

HAC

K

M

Ν

Р

Н

Α

В

D

Е

F

INFOID:0000000007626809

Revision: 2011 August **HAC-69** 2012 370Z

INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

3. Set the difference between the set temperature and control temperature to "0".

>> INSPECTION END

7. CHECK CHARGED REFRIGERANT AMOUNT

- 1. Connect recovery/recycling recharging equipment to the vehicle and discharge the refrigerant.
- 2. Recharge with the proper amount of refrigerant.

Are the symptoms solved?

YES >> INSPECTION END

NO >> Refer to <u>HAC-68</u>, "<u>Diagnosis Chart By Symptom</u>" and perform the appropriate diagnosis.

INSUFFICIENT HEATING

< SYMPTOM DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

INSUFFICIENT HEATING Α Description INFOID:0000000007626810 В Symptom Insufficient heating No warm air comes out. (Air flow volume is normal.) Diagnosis Procedure INFOID:000000000762681: CHECK COOLING SYSTEM Check the engine coolant level and check for leakage. Refer to CO-11, "Inspection". Check radiator cap. Refer to CO-15, "RESERVOIR TANK CAP: Inspection". Check water flow sounds of the engine coolant. Refer to CO-12, "Refilling". Is the inspection result normal? YES >> GO TO 2. NO >> Refill the engine coolant and repair or replace the parts depending on the inspection results. 2.check operation Turn temperature dial and raise temperature setting to 32.0°C (90°F) after warming up the engine. Check that warm air blows from the outlets. Is the inspection result normal? YES >> INSPECTION END Н NO >> GO TO 3. 3.CHECK SETTING OF TEMPERATURE SETTING TRIMMER With CONSULT HAC Select "TEMP SET CORRECT" of HVAC work support item. Refer to HAC-9, "Temperature Setting Trim-Check that the temperature setting trimmer is set to "- direction". The control temperature can be set by the temperature setting trimmer. Set the difference between the set temperature and control temperature to "0". Are the symptoms solved? >> INSPECTION END YES NO >> GO TO 4. 4. CHECK SELF-DIAGNOSIS RESULT CHECK With CONSULT Perform the "SELF-DIAGNOSIS". Check if any DTC is detected in the self-diagnostic results. If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-27, "DTC Logic" or HAC-28, "DTC Logic". N Is any DTC displayed? >> Perform the diagnosis that is applicable to the sensor and the door motor. Refer to HAC-66, "DTC YES Index". NO >> GO TO 5. CHECK EACH OUTPUT DEVICE (P)With CONSULT Select "HVAC TEST" of HVAC active test item. Refer to HAC-25, "CONSULT Function". NOTE: Perform the ACTIVE TEST after starting the engine because the compressor is operated.

Refer to the table and check the outlet, inlet, air flow temperature, blower motor control signal, magnet clutch operation, and air mix ratio. Visually check each operating condition, by listening for noise, touching air outlets with a hand, etc.

	Test item						
	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	MODE 6	MODE 7
Mode door position	VENT	B/L 1	B/L 2	FOOT	D/F	DEF	_
Intake door position	REC	REC	20% FRE	FRE	FRE	FRE	_
Air mix door position	FULL COLD	FULL COLD	FULL HOT	FULL HOT	FULL HOT	FULL HOT	_
Blower fan motor control sig- nal duty ratio	37%	91%	65%	65%	65%	91%	_
Magnet clutch	ON	ON	OFF	OFF	ON	ON	_
ECV duty ratio	100%	100%	0%	0%	50%	100%	_

NOTE:

- · Perform the inspection of each output device after starting the engine because the compressor is operated.
- If the MODE 7 is selected, the malfunction is displayed but it is normal.

Discharge air flow				
Made position indication	Air outlet/distribution			
Mode position indication	VENT	FOOT	DEF	
7	100%	_	_	
Ÿ	60%	40%	_	
,j	12%	62%	26%	
®	10%	52%	38%	
₩	_	_	100%	

Does it operate normally?

YES >> GO TO 6.

NO-1 >> Air outlet does not change. Refer to <u>HAC-44, "Diagnosis Procedure"</u>.

NO-2 >> Air inlet does not change. Refer to HAC-46. "Diagnosis Procedure".

NO-3 >> Discharge air temperature does not change. Refer to <u>HAC-42, "Diagnosis Procedure"</u>.

NO-4 >> Blower motor does not operate normally. Refer to HAC-53, "Diagnosis Procedure".

NO-5 >> Magnet clutch does not operate. Refer to <u>HAC-57</u>, "<u>Diagnosis Procedure</u>".

6.CHECK AIR LEAKAGE FROM DUCT

Check duct and nozzle, etc. of the air conditioning system for air leakage.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace parts depending on the inspection results.

.CHECK HEATER HOSE INSTALLATION CONDITION

Check the heater hose installation condition visually (for twists, crushes, etc.).

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace parts depending on the inspection results.

8.CHECK TEMPERATURE OF HEATER HOSE

- 1. Check the temperature of inlet hose and outlet hose of heater core.
- Check that the inlet side of heater core is hot and the outlet side is slightly lower than/almost equal to the inlet side.

CAUTION:

Always perform the temperature inspection in a short period of time because the engine coolant temperature is very hot.

Is the inspection result normal?

YES >> GO TO 9.

INSUFFICIENT HEATING

< SYMPTOM DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

NO >> Replace the heater core after performing the procedures after the cooling system inspection. GO TO 1.

9. REPLACE HEATER CORE

Replace the heater core. Refer to HA-48, "Exploded View".

Are symptoms solved?

YES >> INSPECTION END

NO >> Perform the procedures again after the cooling system inspection. GO TO 1.

Α

В

С

D

Е

F

G

Н

HAC

K

L

M

Ν

0

[WITHOUT 7 INCH DISPLAY]

NOISE

Description INFOID:000000007626812

Symptom

- Noise
- Noise is heard when the A/C system operates.

Diagnosis Procedure

INFOID:00000000007626813

1. CHECK OPERATION

- 1. Operate the A/C system and check the operation. Refer to HAC-8, "Description & Inspection".
- Check the parts where noise is occurring.

Can the parts where noise is occurring be checked?

- YES-1 >> Noise from blower motor: GO TO 2.
- YES-2 >> Noise from compressor: GO TO 3.
- YES-3 >> Noise from expansion valve: GO TO 4.
- YES-4 >> Noise from cooler piping (pipe, flexible hose): GO TO 6.
- YES-5 >> Noise from drive belt: GO TO 7.
- NO >> INSPECTION END

2.CHECK BLOWER MOTOR

- 1. Remove blower motor.
- 2. Remove foreign materials that are in the blower unit.
- Check the noise from blower motor again.

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Replace blower motor.

3. CHECK COMPRESSOR

Perform trouble diagnosis for the compressor and check the compressor. Refer to HA-9, "Symptom Table".

Is the inspection result normal?

- YES >> INSPECTION END
- NO >> Refill the refrigerant or replace the compressor depending on the inspection results.

4. CHECK WITH GAUGE PRESSURE

Perform the diagnosis with the gauge pressure. Refer to HA-7, "Trouble Diagnosis For Unusual Pressure".

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Repair or replace parts depending on the inspection results.

5. CHECK EXPANSION VALVE

- 1. Correct the refrigerant with recovery/recycling recharging equipment.
- Recharge with the proper amount of the collected refrigerant after recycling or new refrigerant.
- Check for the noise from expansion valve again.

Are the malfunction solved?

- YES >> INSPECTION END
- NO >> Replace expansion valve.

6.CHECK COOLER PIPING (PIPE, FLEXIBLE HOSE)

- 1. Check the cooler piping (pipes, flexible hoses) (for deformation and damage, etc.).
- 2. Check the installation condition of clips and brackets, etc. of the cooler piping (pipes, flexible hoses).

Is the inspection result normal?

- YES >> Fix the line with rubber or come vibration absorbing material.
- NO >> Repair or replace parts depending on the inspection results.

7.CHECK DRIVE BELT

NOISE

< SYMPTOM DIAGNOSIS >

[WITHOUT 7 INCH DISPLAY]

Check tension of the drive belt. Refer to <u>EM-17</u>, "<u>Checking</u>". <u>Is the inspection result normal?</u>

YES \rightarrow Check the noise from the compressor: GO TO 3.

NO >> Adjust or replace drive belt depending on the inspection results.

Α

В

С

D

Е

F

G

Н

HAC

J

K

L

M

Ν

0

PRECAUTION

PRECAUTIONS EXCEPT FOR MEXICO

EXCEPT FOR MEXICO: Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the
 ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with
 a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing
 serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

EXCEPT FOR MEXICO : Precaution for Battery Service

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatically to prevent any window to vehicle interference. The automatically to prevent any window to vehicle interference.

INFOID:0000000007626815

window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

FOR MEXICO

FOR MEXICO: Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

 To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.

PRECAUTIONS

< PRECAUTION >

[WITHOUT 7 INCH DISPLAY]

- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the
 ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with
 a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing
 serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR MEXICO: Precaution for Battery Service

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

HAC

Н

В

D

Е

INFOID:0000000007626817

L

M


Ν

0

REMOVAL AND INSTALLATION

A/C CONTROL BASE AUDIO

BASE AUDIO: Exploded View

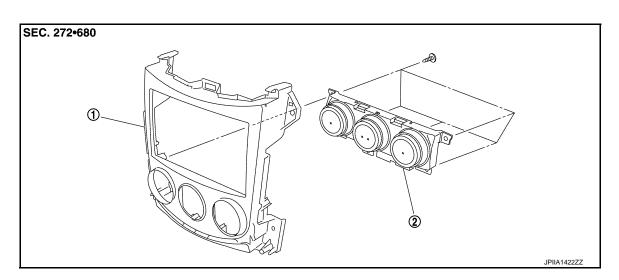

1. Cluster lid C

2. A/C control


BASE AUDIO: Removal and Installation

INFOID:0000000007626819

INFOID:0000000007626818

REMOVAL

- Remove cluster lid C. Refer to <u>IP-14, "Exploded View"</u>.
- 2. Remove fixing screws (A), and then remove A/C control (1).

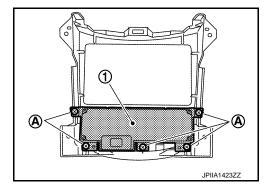

INSTALLATION
Install in the reverse order of removal.
BOSE AUDIO WITHOUT NAVIGATION

BOSE AUDIO WITHOUT NAVIGATION: Exploded View

INFOID:0000000007626820


Α

В

D

Е

F

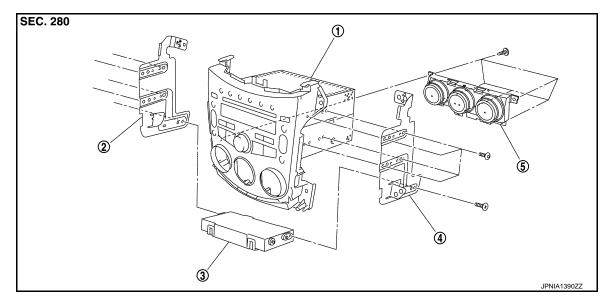

1. Audio unit

Bracket RH

- 2. Bracket LH
- 5. A/C control


3. A/C auto amp.

BOSE AUDIO WITHOUT NAVIGATION: Removal and Installation

INFOID:0000000007626821

REMOVAL

- Remove A/C auto amp.. Refer to <u>HAC-81, "BOSE AUDIO WITHOUT NAVIGATION: Exploded View"</u>.
- 2. Remove fixing screws (A), and then remove A/C control (1).

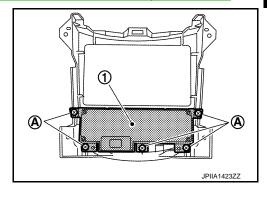

INSTALLATION

Install in the reverse order of removal.

HAC

Н

K

L

M


Ν

0

A/C AUTO AMP. BASE AUDIO

BASE AUDIO: Exploded View

INFOID:0000000007626822

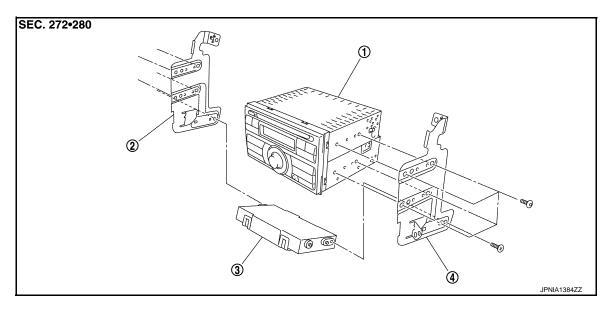

- 1. Audio unit
- 4. Bracket RH

2. Bracket LH


3. A/C auto amp.

BASE AUDIO: Removal and Installation

INFOID:0000000007626823

REMOVAL

- Remove audio unit. Refer to <u>AV-29, "Exploded View"</u>.
- 2. Remove fixing screws (A), and then remove A/C auto amp. (1).

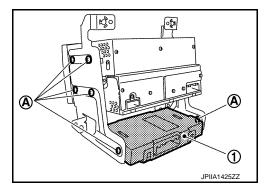

INSTALLATION
Install in the reverse order of removal.
BOSE AUDIO WITHOUT NAVIGATION

[WITHOUT 7 INCH DISPLAY]

INFOID:0000000007626824

Α


В

D

Е

F

BOSE AUDIO WITHOUT NAVIGATION: Exploded View

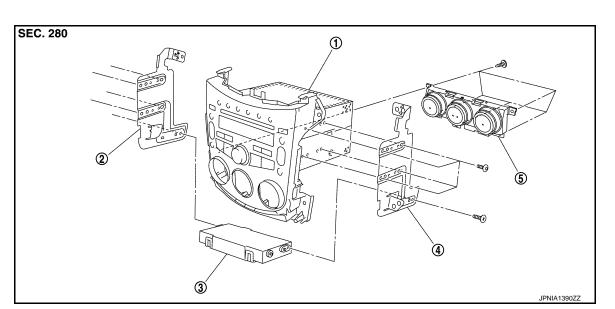

1. Audio unit

Bracket RH

- 2. Bracket LH
- 5. A/C control

3. A/C auto amp.

BOSE AUDIO WITHOUT NAVIGATION: Removal and Installation

INFOID:0000000007626825

REMOVAL

- 1. Remove audio unit. Refer to AV-107, "Exploded View".
- 2. Remove fixing screws, and then remove A/C auto amp..

INSTALLATION

Install in the reverse order of removal.

HAC

Н

K

M

L


Ν

0

AMBIENT SENSOR

Exploded View

1. Ambient sensor

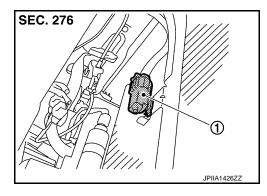


Removal and Installation

INFOID:0000000007626827

REMOVAL

- 1. Remove engine under cover. Refer to EXT-29, "ENGINE UNDER COVER: Exploded View".
- 2. Disconnect ambient sensor connector, and then remove ambient sensor (1) from bracket.

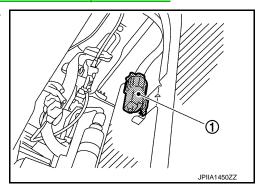


INSTALLATION

Install in the reverse order of removal.

[WITHOUT 7 INCH DISPLAY]

IN-VEHICLE SENSOR

Exploded View

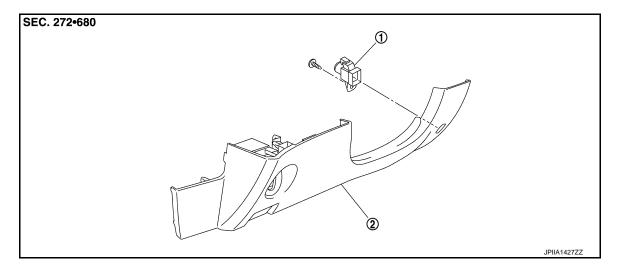


- 1. In-vehicle sensor
- Instrument lower panel LH

Removal and Installation

INFOID:0000000007626829

REMOVAL

- 1. Remove instrument lower panel LH. Refer to IP-14, "Exploded View".
- 2. Remove fixing screw (A), and then remove in-vehicle sensor (1).

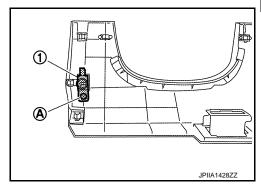

INSTALLATION

Install in the reverse order of removal.

HAC

Н

Α

В

D

Е

K

L

M


Ν

0

SUNLOAD SENSOR

Exploded View

1. Sunload sensor

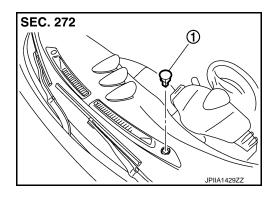

Removal and Installation

INFOID:0000000007626831

REMOVAL

Disconnect sunload sensor connector, and then remove sunload sensor.

INSTALLATION

Install in the reverse order of removal.

Α

В

D

Е

Н

HAC


M

Ν

INFOID:0000000007626833

INTAKE SENSOR

Exploded View

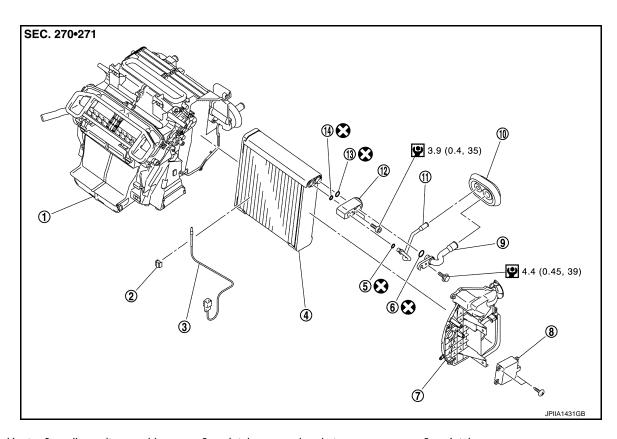

- 1. Heater & cooling unit assembly
- 4. Evaporator
- 7. Evaporator cover
- 10. Cooler pipe grommet
- 13. O-ring

- 2. Intake sensor bracket
- 5. O-ring
- 8. Air mix door motor
- 11. High-pressure evaporator pipe
- 14. O-ring


- 3. Intake sensor
- 6. O-ring
- 9. Low-pressure evaporator pipe
- 12. Expansion valve

Refer to GI-4, "Components" for symbols in the figure.

Removal and Installation

REMOVAL

- Remove high-pressure evaporator pipe and low-pressure evaporator pipe. Refer to <u>HA-53</u>, "Exploded <u>View"</u>.
- Disconnect intake sensor connector.
- 3. Slide evaporator (1) toward the right side of the vehicle (as shown in the figure), and then remove intake sensor (2).

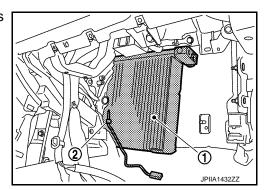

INSTALLATION

Note the following items, and then install in the reverse order of removal.

INTAKE SENSOR

< REMOVAL AND INSTALLATION >


[WITHOUT 7 INCH DISPLAY]

CAUTION:

- Replace O-rings with new ones. Then apply the compressor oil to them when installing.
- Mark the mounting position of intake sensor bracket prior to removal so that the reinstalled sensor can be located in the same position.
- Never rotate the bracket insertion part when removing and installing the intake sensor.
- Check for leakages when recharging refrigerant. Refer to HA-26, "Leak Test".

REFRIGERANT PRESSURE SENSOR

Exploded View

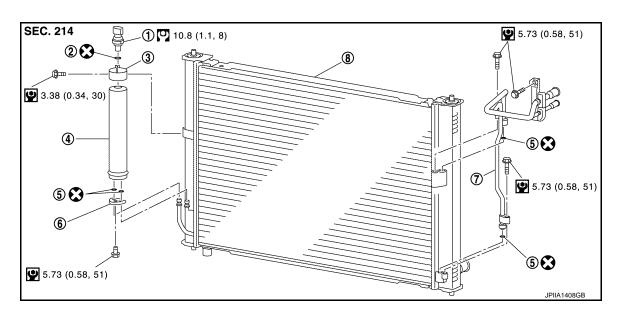

1. Refrigerant pressure sensor

Condenser pipe assembly

2. O-ring

3. Liquid tank bracket

Bracket

4. Liquid tank

- 5. O-ring
 - Radiator & condenser assembly

Refer to GI-4, "Components" for symbols in the figure.

Removal and Installation


INFOID:0000000007626835

REMOVAL

Remove liquid tank. Refer to <u>HA-44, "Exploded View"</u>.

 Fix the liquid tank (1) using a vise (A). Remove the refrigerant pressure sensor (2) using a wrench (B).
 CAUTION:

Be careful not to damage liquid tank.

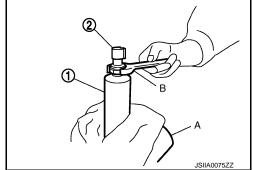

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- Replace O-ring with new one. Then apply compressor oil to them when installing.
- Check for leakages when recharging refrigerant. Refer to HA-26, "Leak Test".

HAC

J

K

M

Р

Н

Α

В

D


Е

F

Revision: 2011 August HAC-87 2012 370Z

DOOR MOTOR

Exploded View

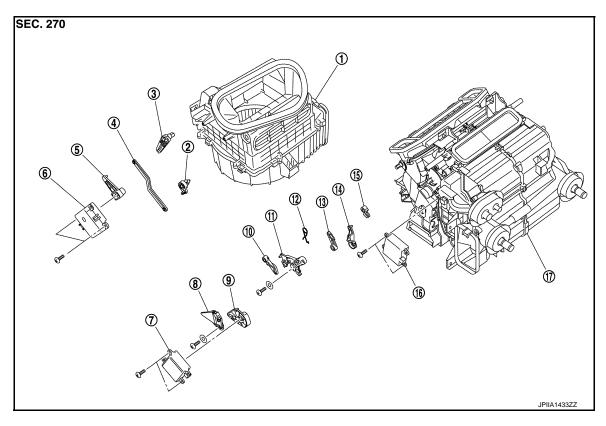

- Bower unit assembly
- 4. Intake door link
- 7. Mode door motor
- 10. Ventilator door lever
- 13. Max. cool door lever
- 16. Air mix door motor

- 2. Intake door lever 3
- 5. Intake door lever 2
- 8. Ventilator door link
- 11. Main link sub
- 14. Defroster door link
- 17. Heater & cooling unit assembly
- 3. Intake door lever 1
- 6. Intake door motor
- 9. Main link
- 12. Ventilator door lever spring
- 15. Defroster door lever


INTAKE DOOR MOTOR

INTAKE DOOR MOTOR: Removal and Installation

INFOID:0000000007626837

REMOVAL

- 1. Remove instrument lower panel RH. Refer to IP-14, "Exploded View".
- 2. Remove ECM.
- 3. Disconnect intake door motor connector.
- 4. Remove fixing screws (A), and then remove intake door motor (1).

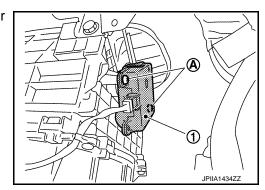

[WITHOUT 7 INCH DISPLAY]

INSTALLATION

Install in the reverse order of removal.

MODE DOOR MOTOR

MODE DOOR MOTOR: Removal and Installation

INFOID:0000000007626838

Α

В


D

Е

F

REMOVAL

- 1. Remove blower unit assembly. Refer to VTL-11, "Exploded View".
- 2. Disconnect mode door motor connector.
- 3. Remove fixing screws (A), and then remove mode door motor (1).

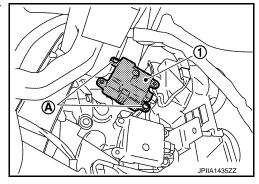

INSTALLATION

Install in the reverse order of removal.

AIR MIX DOOR MOTOR

AIR MIX DOOR MOTOR: Removal and Installation

INFOID:0000000007626839


REMOVAL

1. Set the temperature at full cold.

CAUTION:

The angle may be out, when installing the air mix door motor to the air mix door, unless the above procedure is performed.

- 2. Disconnect the battery cable from the negative terminal.
- 3. Remove instrument lower panel RH. Refer to IP-14, "Exploded View".
- 4. Disconnect air mix door motor connector.
- 5. Remove fixing screws (A), and then remove air mix door motor (1).

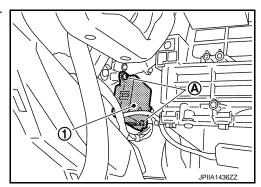

INSTALLATION

Install in the reverse order of removal.

HAC

Н

K

L

M

N

 \cap


Ρ

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORK FLOW

Work Flow

OVERALL SEQUENCE

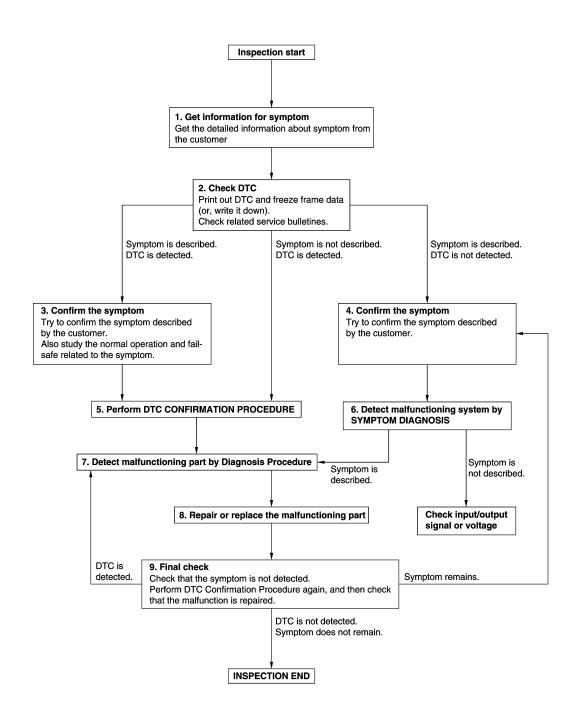

JMKIA8652GB

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[WITH 7 INCH DISPLAY]

1.GET INFORMATION FOR SYMPTOM

- 1. Get detailed information from the customer about the symptom (the condition and the environment when the incident/malfunction occurs).
- 2. Check operation condition of the function that is malfunctioning.

>> GO TO 2.

2. CHECK DTC

- 1. Check DTC.
- 2. Perform the following procedure if DTC is detected.
- Record DTC and freeze frame data (Print them out using CONSULT.)
- Erase DTC.
- Study the relationship between the cause detected by DTC and the symptom described by the customer.
- Check related service bulletins for information.

Are any symptoms described and any DTC detected?

Symptom is described, DTC is detected>>GO TO 3.

Symptom is described, DTC is not detected>>GO TO 4.

Symptom is not described, DTC is detected>>GO TO 5.

${f 3.}$ CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Also study the normal operation and fail-safe related to the symptom.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 5.

4. CONFIRM THE SYMPTOM

Try to confirm the symptom described by the customer.

Verify relation between the symptom and the condition when the symptom is detected.

>> GO TO 6.

5. PERFORM DTC CONFIRMATION PROCEDURE

Perform DTC CONFIRMATION PROCEDURE for the detected DTC, and then check that DTC is detected again. At this time, always connect CONSULT to the vehicle, and check self diagnostic results in real time. If two or more DTCs are detected, refer to DTC INSPECTION PRIORITY CHART, and determine trouble diagnosis order.

NOTE:

- Freeze frame data is useful if the DTC is not detected.
- Perform Component Function Check if DTC CONFIRMATION PROCEDURE is not included on Service Manual. This simplified check procedure is an effective alternative though DTC cannot be detected during this check.

If the result of Component Function Check is NG, it is the same as the detection of DTC by DTC CONFIR-MATION PROCEDURE.

Is DTC detected?

YES >> GO TO 7.

NO >> Check according to GI-44, "Intermittent Incident".

6.DETECT MALFUNCTIONING SYSTEM BY SYMPTOM DIAGNOSIS

Detect malfunctioning system according to SYMPTOM DIAGNOSIS based on the confirmed symptom in step 4, and determine the trouble diagnosis order based on possible causes and symptom.

Is the symptom described?

YES >> GO TO 7.

NO >> Monitor input data from related sensors or check voltage of related module terminals using CON-SULT.

7.DETECT MALFUNCTIONING PART BY DIAGNOSIS PROCEDURE

HAC

Н

Α

В

D

Е

g CON-

N

Revision: 2011 August **HAC-91** 2012 370Z

DIAGNOSIS AND REPAIR WORK FLOW

< BASIC INSPECTION >

[WITH 7 INCH DISPLAY]

Inspect according to Diagnosis Procedure of the system.

Is malfunctioning part detected?

YES >> GO TO 8.

NO >> Check according to GI-44, "Intermittent Incident".

8.repair or replace the malfunctioning part

- 1. Repair or replace the malfunctioning part.
- Reconnect parts or connectors disconnected during Diagnosis Procedure again after repair and replacement.
- 3. Check DTC. If DTC is detected, erase it.

>> GO TO 9.

9. FINAL CHECK

When DTC is detected in step 2, perform DTC CONFIRMATION PROCEDURE again, and then check that the malfunction is repaired securely.

When symptom is described by the customer, refer to confirmed symptom in step 3 or 4, and check that the symptom is not detected.

Is DTC detected and does symptom remain?

YES-1 >> DTC is detected: GO TO 7.

YES-2 >> Symptom remains: GO TO 4.

NO >> Before returning the vehicle to the customer, always erase DTC.

INSPECTION AND ADJUSTMENT

Description & Inspection

INFOID:0000000007626841

Α

В

D

Е

DESCRIPTION

The purpose of the operational check is to check that the individual system operates normally.

Check condition: Engine running at normal operating temperature.

1. CHECK MEMORY FUNCTION

- Turn the ignition switch ON.
- Set temperature control dial to 32.0°C (90°F). 2.
- 3. Press the OFF switch.
- 4. Turn the ignition switch OFF.
- 5. Turn the ignition switch ON.
- 6. Press the AUTO switch.
- Check that the set temperature is maintained.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Memory function malfunction. Refer to HAC-160, "Diagnosis Procedure".

2.CHECK BLOWER MOTOR

- Start the engine.
- Operate the fan control dial. Check that the fan speed changes. Check the operation for all fan speeds.
- Leave blower on maximum speed.

Is the inspection result normal?

YES >> GO TO 3.

>> Blower motor system malfunction. Refer to HAC-137, "Diagnosis Procedure". NO

3. CHECK DISCHARGE AIR

- Operate MODE switch and DEF switch.
- Check that the air outlets change according to each indicated air outlet by placing a hand in front of the outlets. Refer to VTL-2, "System Description".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Mode door system malfunction. Refer to HAC-130, "Diagnosis Procedure".

4. CHECK INTAKE AIR

- 1. Press intake switch to set the air outlet to recirculation.
- The REC indicator turns ON.
- Listen to intake sound and confirm air inlets change.
- 4. Press intake switch again to set the air outlet to fresh air intake.
- The FRE indicator turns ON.
- Listen to intake sound and confirm air inlets change.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Intake door system malfunction. Refer to HAC-132, "Diagnosis Procedure".

5.CHECK A/C SWITCH

- Press the A/C switch.
- Check that the indicator of the A/C switch turns ON. Check visually and by sound that the compressor operates.
- 3. Press the A/C switch again.
- Check that the indicator of the A/C switch turns OFF. Check that the compressor stops.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Magnet clutch system malfunction. Refer to HAC-141, "Diagnosis Procedure". HAC

Н

K

L

N

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[WITH 7 INCH DISPLAY]

6. CHECK DISCHARGE AIR TEMPERATURE

Operate the temperature control dial. Check that the discharge air temperature changes.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Air mix door malfunction. Refer to <u>HAC-128</u>. "<u>Diagnosis Procedure</u>".

7.CHECK TEMPERATURE DECREASE

- 1. Operate the compressor.
- 2. Operate the temperature control dial and lower the set temperature to 18.0°C (60°F).
- 3. Check that the cool air blows from the outlets.

Is the inspection result normal?

YES >> GO TO 8.

NO >> Insufficient cooling. Refer to <u>HAC-153</u>, "<u>Diagnosis Procedure</u>".

8.CHECK TEMPERATURE INCREASE

- Turn temperature control dial and raise temperature setting to 32.0°C (90°F) after warming up the engine.
- 2. Check that warm air blows from outlets.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Insufficient heating. Refer to <u>HAC-155</u>, "<u>Diagnosis Procedure</u>".

9. CHECK AUTO MODE

- 1. Press the AUTO switch, and then check that "AUTO" is shown on the display.
- Operate the temperature control dial. Check that the fan speed or air outlet changes (the air flow temperature or fan speed varies depending on the ambient temperature, in-vehicle temperature, and set temperature).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Refer to HAC-152, "Diagnosis Chart By Symptom" and perform the appropriate diagnosis.

Temperature Setting Trimmer

INFOID:0000000007626842

DESCRIPTION

If the temperature felt by the customer is different than the air flow temperature controlled by the temperature setting, the A/C auto amp. control temperature can be adjusted to compensate for the temperature setting.

HOW TO SET

(P)With CONSULT

Perform "TEMP SET CORRECT" of HVAC work support item.

[WITH 7 INCH DISPLAY]

Work support items	Display (°F)	Display (°C)	
	6	3.0	
	5	2.5	
	4	2.0	
	3	1.5	
	2	1.0	
	1	0.5	
EMP SET CORRECT	0 (initial status)	0 (initial status)	
	-1	-0.5	
	-2	-1.0	
	-3	-1.5	
	-4	-2.0	
	-5	-2.5	
	-6	-3.0	

NOTE:

- When -3.0°C (-6°F) is corrected on the temperature setting set as 25.0°C (77°F), the temperature controlled by A/C auto amp. is 25.0°C (77°F) 3.0°C (-6°F) = 22.0°C (72°F) and the temperature becomes lower than the temperature setting.
- When the battery cable is disconnected from the negative terminal or when the battery voltage becomes 10
 V or less, the setting of the difference between the set temperature and control temperature may be cancelled.

Foot Position Setting Trimmer

INFOID:0000000007626843

INFOID:0000000007626844

DESCRIPTION

In FOOT mode, the air blowing to DEF can change ON/OFF.

HOW TO SET

(P)With CONSULT

Perform the "BLOW SET" of HVAC work support item.

Work august items	Diaploy	Defroster door position		
Work support items	Display	Auto control	Manual control	
	Mode 1	OPEN	CLOSE	
BLOW SET	Mode 2 (initial status)	OPEN	OPEN	
BLOW SET	Mode 3	CLOSE	OPEN	
	Mode 4	CLOSE	CLOSE	

NOTE:

When the battery cable is disconnected from the negative terminal or when the battery voltage becomes 10 V or less, the setting of the discharge air mix ratio in FOOT mode may be cancelled.

Inlet Port Memory Function (FRE)

DESCRIPTION

- If the ignition switch is turned to the OFF position while the FRE indicator is set to ON (fresh air intake), "Perform the memory" or "Do not perform the memory" of FRE indicator ON (fresh air intake) condition can be selected.
- If "Perform the memory" was set, the FRE indicator will be ON (fresh air intake) when turning the ignition switch to the ON position again.
- If "Do not perform the memory" was set, the air inlets will be controlled automatically when turning the ignition switch to the ON position again.

HOW TO SET

HAC

Н

Α

В

D

Е

F

Revision: 2011 August HAC-95 2012 370Z

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

[WITH 7 INCH DISPLAY]

(P)With CONSULT

Perform the "FRE MEMORY SET" of HVAC work support item.

Work support items	Display	Setting	
FRE MEMORY SET	WITHOUT	Perform the memory of manual FRE	
THE MEMORY SET	WITH (initial status)	Do not perform the memory of manual FRE (auto control)	

NOTE:

When the battery cable is disconnected from the negative terminal or when the battery voltage becomes 10 V or less, the setting of the FRE memory function may be cancelled.

Inlet Port Memory Function (REC)

INFOID:0000000007626845

DESCRIPTION

- If the ignition switch is turned to the OFF position while the REC indicator is set to ON (recirculation), "Perform the memory" or "Do not perform the memory" of REC indicator ON (recirculation) condition can be selected.
- If "Perform the memory" was set, the REC indicator will be ON (recirculation) when turning the ignition switch to the ON position again.
- If "Do not perform the memory" was set, the air inlets will be controlled automatically when turning the ignition switch to the ON position again.

HOW TO SET

(P)With CONSULT

Perform the "REC MEMORY SET" of HVAC work support item.

Work support items	Display	Setting		
REC MEMORY SET	WITHOUT (initial status)	Perform the memory of manual REC		
REG IVIEWORT SET	WITH	Do not perform the memory of manual REC (auto control)		

NOTE:

When the battery cable is disconnected from the negative terminal or when the battery voltage becomes 10 V or less, the setting of the REC memory function may be cancelled.

[WITH 7 INCH DISPLAY]


SYSTEM DESCRIPTION

COMPRESSOR CONTROL FUNCTION

Description INFOID:0000000007626846 В

PRINCIPLE OF OPERATION

Functional circuit diagram

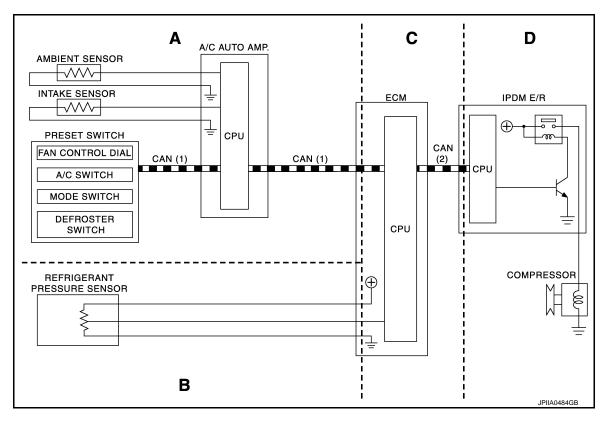

CAN (1) : A/C ON switch signal : Blower fan ON signal CAN (2) : A/C compressor request signal

Functional initial inspection chart

X:	Applicable	

						x: Applicable
Control unit	Diagnasia itam		Location			
Control unit		iagnosis item	А	В	С	D
		Self-diagnosis	×	_	_	_
A/C auto amp.	(HVAC"	Data monitor	×	_	_	_
		Active test	×	_	_	×
ECM	ECM (A) "ENGINE"	Self-diagnosis function (CAN system diagnosis)	_	_	×	_
		Data monitor	_	×	×	_
	(P) "IPDM E/R"	Self-diagnosis function (CAN system diagnosis)	_	_	_	×
IPDM E/R		Data monitor	_	_	×	_
	Auto active test		_	_	_	×

Fail-safe INFOID:0000000007626847

FAIL-SAFE FUNCTION

HAC-97 Revision: 2011 August 2012 370Z

Α

D

C

Е

F

Н

HAC

K

M

Ν

COMPRESSOR CONTROL FUNCTION

< SYSTEM DESCRIPTION >

[WITH 7 INCH DISPLAY]

When a communication malfunction between A/C auto amp. and AV control unit and preset switch continued for approximately 30 seconds or more, control the air conditioning system under the following conditions.

Compressor : ON Air outlet : AUTO


Air inlet : FRE (Fresh air intake)

Fan speed : AUTO

Preset temperature : Setting before communication malfunction

Component Parts Location

INFOID:0000000007626848

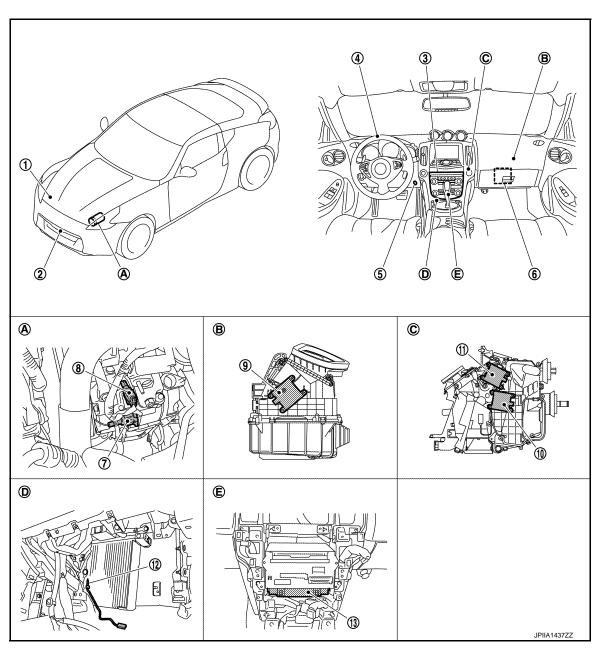

- 1. Refrigerant pressure sensor
- 4. Sunload sensor
- 7. Magnet clutch
- 10. Air mix door motor
- 13. A/C auto amp.

- Ambient sensor
- In-vehicle sensor
- 8. ECV
- 11. Mode door motor

- 3. Preset switch
- 6. Blower motor
- 9. Intake door motor
- 12. Intake sensor

COMPRESSOR CONTROL FUNCTION

< SYSTEM DESCRIPTION >

[WITH 7 INCH DISPLAY]

A. Installed on the compressor

B. Installed to the blower unit assembly C. (RH)

Installed to the heater & cooling unit assembly (RH)

D. Located on the evaporator

E. Behind of the cluster lid C

INFOID:0000000007626849

Α

В

D

Е

F

G

Н

Component Description

Component	Description			
Ambient sensor	HAC-115, "Description"			
In-vehicle sensor	HAC-118, "Description"			
Intake sensor	HAC-121, "Description"			
Sunload sensor	HAC-124, "Description"			
Air mix door motor	HAC-127, "Description"			
Mode door motor	HAC-129, "Description"			
Intake door motor	HAC-131, "Description"			
A/C auto amp.	HAC-136, "Description"			
Blower motor	HAC-137, "Description"			
Magnet clutch	HAC-141, "Description"			
ECV	HAC-143, "Description"			
Refrigerant pressure sensor	EC-530, "Description"			
Preset switch	The preset switch integrated with the controller for A/C operation and AV switch is installed to the center of the instrument panel. The operation and display data of the preset switch are communicated with the A/C auto amp. through AV control unit via CAN communication.			

HAC

K

L


M

Ν

0

AUTOMATIC AIR CONDITIONING SYSTEM

System Diagram

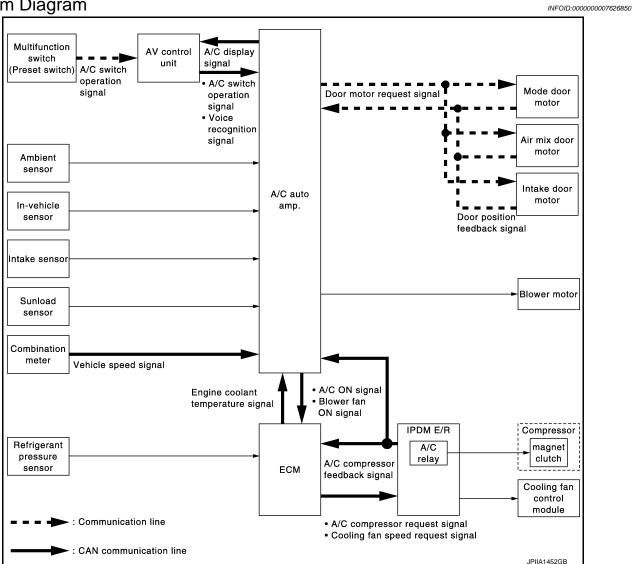

System Description

INFOID:0000000007626851

OUTLINE

Automatic air conditioning system is controlled by each function of A/C auto amp., ECM and IPDM E/R.

Control by A/C auto amp.

- Air outlet control
- Temperature control
- Air inlet control
- Air flow control
- Compressor control
- Door motor control (LCU communication control)

Control by ECM

- Cooling fan control. (Refer to EC-88, "System Description".)
- Air conditioning cut control. (Refer to EC-68. "System Description".)

Control by IPDM E/R

- Relay control. (Refer to PCS-4, "System Description".)
- Cooling fan control. (Refer to PCS-7, "System Description".)

AUTOMATIC AIR CONDITIONING SYSTEM

< SYSTEM DESCRIPTION >


[WITH 7 INCH DISPLAY]

• Controller (preset switch) transmits the commands for air conditioning system operation to AV control unit via communication line, then AV control unit transmits the commands to A/C auto amp. via CAN communication. A/C auto amp. transmits each indication information to AV control unit via CAN communication. AV control unit displays each indication information that is received.


OPERATION AND DISPLAY

A/C Display

- Air conditioning system state is indicated on the display.
- When "Status" on multifunction switch is pressed while air conditioning system is in the ON position, the display changes to state indication display of air conditioning system. When air conditioning system is operated while navigation system or audio system is displayed, air conditioning system state is indicated in the lower portion of display for several seconds.
- When MODE switch is pressed while air conditioning system is in the OFF position, state indication display is indicated for several seconds.

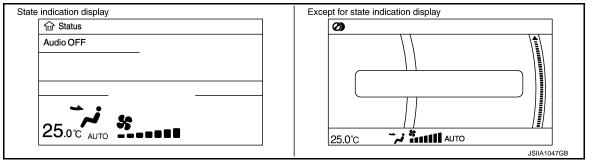

Controller (Preset Switch)

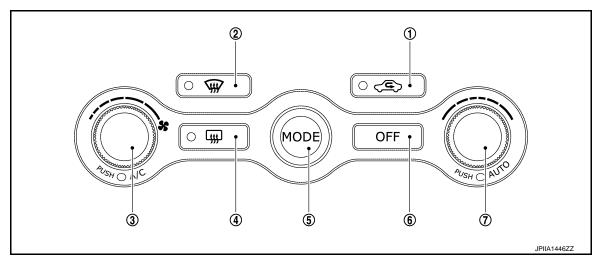

- Intake switch
- 4. Rear window defogger switch
- AUTO switch / Temperature control dial
- 2. DEF switch
- 5. MODE switch

- 3. A/C switch / Fan control dial
- 6. OFF switch

Switch Operation

HAC

Н

Α

В

D

Е

F

K

L

IV./


Ν

Intake switch	 Selects air inlet between recirculation (REC) ⇔ fresh air intake (FRE) each time. REC indicator OFF: Fresh air intake REC indicator ON: Recirculation Press and held for 2 seconds or more, intake switch indicator blinks 2 times and air inlet is set to automatic control. NOTE: When air conditioning system is in the OFF position, air inlet can be selected. When MODE switch and DEF switch is in the D/F or DEF position, air inlet cannot be selected to REC.
DEF switch	Turns DEF mode (switch indicator) between ON ⇔ OFF each time while air conditioning system is in the ON position. • When DEF mode is turned ON, air conditioning system becomes the following state. - Air outlet: DEF - Compressor: ON - Air inlet: FRE - Blower fan: Automatic control (If fan speed other than AUTO is selected before pressing DEF switch, fan speed is manual control.) • When DEF mode is turned OFF, air conditioning system state returns to the previous state before DEF mode is selected. But, the following state is continued. - A/C switch: ON - Intake switch: FRE When DEF switch is pressed while air conditioning system is in the OFF position. • Air conditioning system is turned ON and becomes the following state. - Air outlet: DEF - Compressor: ON - Air inlet: FRE - Blower fan: Automatic control • When DEF mode is turned OFF, entire air conditioning system is set to auto mode. NOTE: When DEF mode turns ON while air conditioning system is in automatic control ("AUTO" is indicated), automatic control is released "AUTO" turns OFF)
A/C switch	 Turns the compressor control (A/C switch indicator) between ⇔ OFF each time. When A/C switch turns OFF, air conditioning system becomes the following state. NOTE: When the compressor control (A/C switch indicator) is in the OFF position, air inlet is fresh air intake (FRE). When blower motor is in the OFF position, the compressor control cannot be activated.
Fan control dial	Selects blower speed is within a range of 1st – 7th speed. NOTE: When fan control dial is rotated while air conditioning system is in the OFF position, air conditioning system is activated. When fan control dial is operated while air conditioning system is in automatic control (AUTO is indicated), automatic control is released (AUTO turns OFF).
Rear window defogger switch	Turns rear window defogger (switch indicator) between ON ⇔ OFF each time. Rear window defogger system details. Refer to DEF-75, "WITH NAVIGATION: System Description".
MODE switch	Selects air outlet sequentially from VENT⇒B/L⇒FOOT⇒D/F⇒VENT each time. NOTE: • When air conditioning system is in the OFF position, air outlet can be selected • When MODE switch is pressed while air conditioning system is in automatic control ("AUTO" is indicated), automatic control is released ("AUTO" turns OFF).
OFF switch	 Turns air conditioning system OFF. When air conditioning system turns OFF, air inlet and air outlet become the following state. Air inlet: FRE (except REC is manually selected.) Air outlet: FOOT

AUTO switch	Turns the switch indicator lamp and "AUTO" indicator on the display ON, and then air conditioning system starts automatic control. NOTE: When air outlet is not selected manually, air outlet changes to automatic control.
Temperature control dial	Selects set temperature within a range between 18.0° (60°F) – 32.0°C (90°F) at a rate of 0.5°C (1.0°F) each time the dial is rotated. • Clockwise rotation: Set temperature increases. • Counterclockwise rotation: Set temperature decreases. NOTE: When air conditioning system is in the OFF position, set temperature can be selected only while air conditioning system state (when MODE switch is pressed) is indicated on the display.


AIR OUTLET CONTROL

- While air outlet is in automatic control, A/C auto amp. selects the mode door position depending on a target air mix door angle and outlet air temperature calculated from sunload.
- If ambient temperature is excessively low, D/F is selected to prevent windshield fogging when air outlet is set to FOOT.

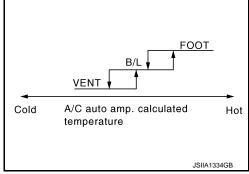


TEMPERATURE CONTROL

- When ignition switch is in the ON position, A/C auto amp. always automatically controls temperature regardless of air conditioning system operational state.
- A/C auto amp. calculates the target air mix door opening angle depending on set temperature, in-vehicle temperature, ambient temperature, and sunload.
- Air mix door is controlled depending on the comparison of current air mix door opening angle and target air mix door opening angle.
- Regardless of in-vehicle temperature, ambient temperature, and sunload, air mix door is fixed at the fully cold position when set temperature is 18.0°C (60°F), and at the fully hot position when set temperature is 32.0°C (90°F).

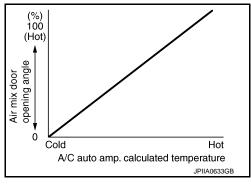

AIR INLET FUNCTION

While air inlet is in automatic control, A/C auto amp. selects air inlet (fresh air intake, 20% fresh air intake, or recirculation) depending on set temperature, in-vehicle temperature, and ambient temperature.

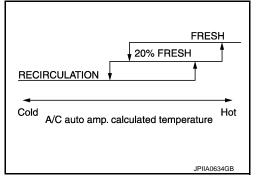

AIR FLOW CONTROL

Description

- A/C auto amp. changes duty ratio of blower motor drive signal and controls air flow continuously. When air flow is increased, duty ratio of blower motor drive signal gradually increases to prevent a sudden increase in air flow.
- In addition to manual control and automatic control, air flow control is compose of starting fan speed control, low coolant temperature starting control, high in-vehicle temperature starting control, fan speed control at door motor operation, and fan speed control at voice recognition.

HAC

Н

Α

В

D

Е


K

M

Ν


Automatic Air Flow Control

- A/C auto amp. decides target air flow depending on target air mix door opening angle.
- A/C auto amp. changes duty ratio of blower motor drive signal and controls air flow continuously so that air flow matches to target air flow.
- When air outlet is VENT or B/L, the minimum air flow is changed depending on sunload.

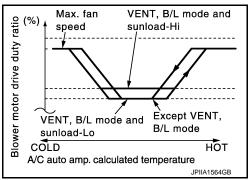


Starting Fan Speed Control

When blower motor is activated, A/C auto amp. gradually increases duty ratio of blower fan drive signal to prevent a sudden increase in discharge air flow. (It takes approximately 8 seconds for air flow to reach HI from LOW)

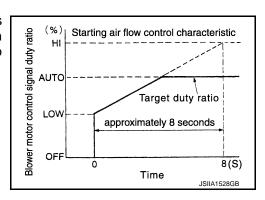

Low Coolant Temperature Starting Control

If the engine coolant temperature is 56° C (133° F) or less, to prevent a cold discharged air flow, A/C auto amp. suspends blower motor activation for the maximum 150 seconds depending on target air mix door opening angle. After this, blower fan drive signal is increased gradually, and blower motor is activated.

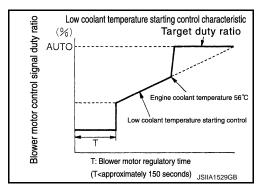

High In-vehicle Temperature Starting Control

When evaporator temperature is high [intake air temperature sensor value is 35°C (95°F) or more], to prevent a hot discharged air flow, A/C auto amp. suspends blower motor activation for approximately 3 seconds so that evaporator is cooled by refrigerant.

Fan speed Control at Door Motor Operation

When mode door motor is activated while air flow is more than the specified value, A/C auto amp. reduces temporarily fan speed so that mode door moves smoothly.

Fan speed Control at Voice Recognition

When the voice control (voice command) switch is operated during air flow automatic control, A/C auto amp. decreases the air flow of the blower motor once and controls the air flow so as not to disturb the voice recognition function. This control continues while voice recognition function is operating.

COMPRESSOR CONTROL

Description

When the compressor activation condition is satisfied while blower motor is activated, A/C auto amp. transmits A/C ON signal and blower fan ON signal to ECM via CAN communication.

- ECM judges that the compressor can be activated depending on each sensors state (refrigerant pressure sensor signal, throttle opening angle sensor signal, and others). And transmits A/C compressor request signal to IPDM E/R via CAN communication.
- IPDM E/R turns A/C relay ON and activates the compressor depending on request from ECM.

Compressor Protection Control at Pressure Malfunction

When high-pressure side value that is detected by refrigerant pressure sensor is as per the following state, ECM requests IPDM E/R to turn A/C relay OFF and stops the compressor.

- 3.12 MPa (31.8 kg/cm²·G) or more (When the engine speed is less than 1,500 rpm)
- 2.74 MPa (27.9 kg/cm²·G) or more (When the engine speed is 1,500 rpm or more)
- 0.14 MPa (1.4 kg/cm²·G) or less


Compressor Oil Circulation Control

When the engine starts while the engine coolant temperature is 56°C (133°F) or less, ECM activates the compressor for approximately 6 seconds and circulates the compressor lubricant once.

Low Temperature Protection Control

When intake air temperature sensor detects that air temperature after passing through evaporator is -5°C (23°F) or less, A/C auto amp. requests ECM to turn the compressor OFF, and stops the compressor.

When the air temperature returns to 1°C (34°F) or more, the compressor is activated.

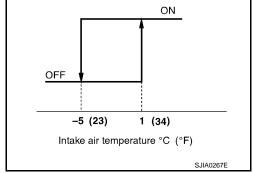


Operating Rate Control

When set temperature is other than fully cold or air outlet is "VENT", "B/L" or "FOOT" A/C auto amp. controls the compressor activation depending on ambient temperature.

Air Conditioning Cut Control

When the engine is running in excessively high load condition, ECM requests IPDM E/R to turn A/C relay OFF, and stops the compressor. Refer to EC-68, "System Description" for details.

DOOR MOTOR CONTROL

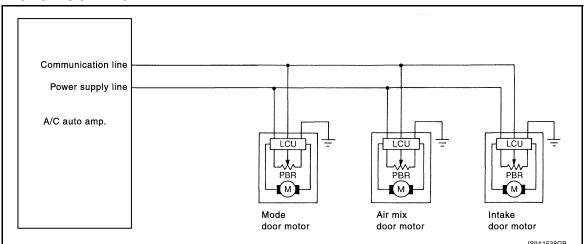

- LCU (Local Control Unit) is built in to each door motor. And detects door position by PBR (Potentio Balance Resistor).
- A/C auto amp. communicates with each LCU via communication line. And receives each door position signal from each LCU.
- Each LCU controls each door to the appropriate position depending on the control signal from A/C auto amp. when the door movement is complete, transmits the signal of door movement completion to A/C auto amp.

FAIL-SAFE CONTROL

HAC

Н

В

D

J

K

M

Ν

0

P

Revision: 2011 August **HAC-105** 2012 370Z

AUTOMATIC AIR CONDITIONING SYSTEM

< SYSTEM DESCRIPTION >

[WITH 7 INCH DISPLAY]

When a communication malfunction occurs between A/C auto amp. and AV control unit or preset switch for 30 seconds or more, A/C auto amp. automatically controls air outlet and fan speed, fixes air inlet to fresh air intake, maintains set temperature data before the communication malfunction, and activates the compressor. Even if the condition before the communication error occurs is A/C OFF, A/C auto amp. turns the compressor ON with following conditions.


Compressor : ON
Air outlet : AUTO

Air inlet : FRE (Fresh air intake)

Fan speed : AUTO

Preset temperature : Setting before communication malfunction

SWITCHES AND THEIR CONTROL FUNCTIONS

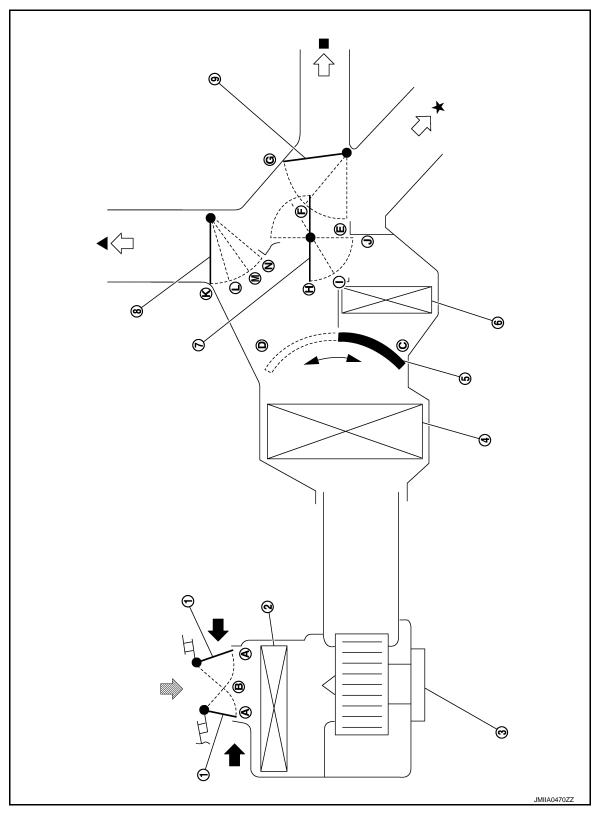

- 1. Intake door
- Evaporator
- Max. cool door
- Fresh air intake
- Defroster

- 2. In-cabine microfilter/Air conditioner filter*
- Air mix door 5.
- Defroster door
- Recirculation air
- Ventilator

- 3. Blower motor
- 6. Heater core
- Ventilator door

Α

В

C

D

Е

F

G

Н

HAC

J

Κ

M

Ν

0

Р

Foot

*: Models for Mexico

	Cwitch /Diel				DOOR position		
Switch /Dial position			Ventilator door	Max. cool door	Defroster door	Intake door	Air mix door
AUTO switch	(ON			AUTO		
		~;	E	Н	K		
Mode switch	,	*	F	I	, r	_	
wode switch		ئى		J	L	A -	
			G		М		_
DEF switch	(III)	ON			N	А	
Intake switch		ON				B*	
make Switch	٩	OFF				A*	
		l cold C (60°F)	_	_	_		С
Temperature control dial						_	AUTO
	OFF switch		G	J	L	А	_

^{*:} Inlet status is displayed by indicator when activating automatic control

AIR DISTRIBUTION

Discharge air flow					
Made position indication		Air outlet/distribution			
Mode position indication	VENT FOOT DE				
7	100%	_	_		
Ÿ	60%	40%	_		
ų,	12%	62%	26%		
M	10%	52%	38%		
₩	_	_	100%		

Component Parts Location

INFOID:0000000007626852

Α

В

D

Е

Н

HAC


K

M

Ν

0

Р

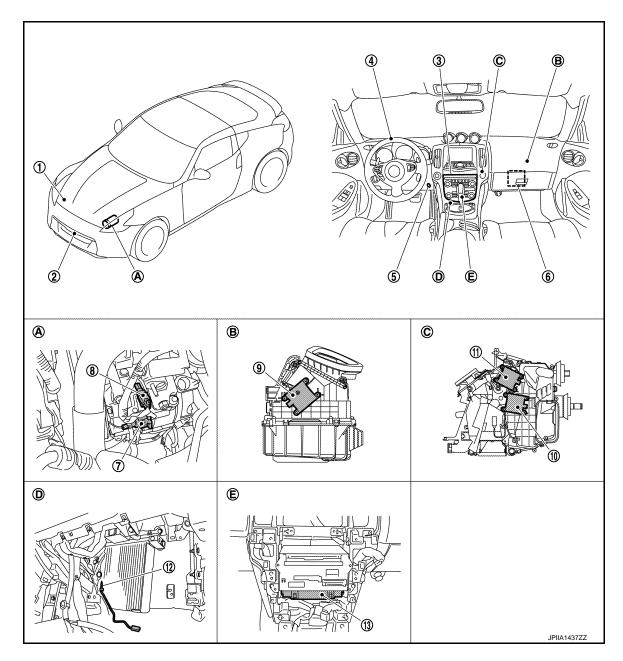

- 1. Refrigerant pressure sensor
- 4. Sunload sensor
- 7. Magnet clutch
- 10. Air mix door motor
- 13. A/C auto amp.
- A. Installed on the compressor
- D. Located on the evaporator

- 2. Ambient sensor
- 5. In-vehicle sensor
- 8. ECV
- 11. Mode door motor
- B. Installed to the blower unit assembly C. (RH)
- E. Behind of the cluster lid C

- Preset switch
- 6. Blower motor
- 9. Intake door motor
- 12. Intake sensor
 - Installed to the heater & cooling unit assembly (RH)

Component Description

INFOID:0000000007626853

Component	Description	
Ambient sensor	HAC-115, "Description"	
In-vehicle sensor	HAC-118, "Description"	

AUTOMATIC AIR CONDITIONING SYSTEM

< SYSTEM DESCRIPTION >

[WITH 7 INCH DISPLAY]

Component	Description
Intake sensor	HAC-121, "Description"
Sunload sensor	HAC-124, "Description"
Air mix door motor	HAC-127, "Description"
Mode door motor	HAC-129, "Description"
Intake door motor	HAC-131, "Description"
A/C auto amp.	HAC-136, "Description"
Blower motor	HAC-137, "Description"
Magnet clutch	HAC-141, "Description"
ECV	HAC-143, "Description"
Refrigerant pressure sensor	EC-530, "Description"
Preset switch	The preset switch integrated with the controller for A/C operation and AV switch is installed to the center of the instrument panel. The operation and display data of the preset switch are communicated with the A/C auto amp. through AV control unit via CAN communication.

DIAGNOSIS SYSTEM (HVAC)

< SYSTEM DESCRIPTION >

[WITH 7 INCH DISPLAY]

Α

В

D

Е

F

Н

HAC

K

L

Ν

0

Р

DIAGNOSIS SYSTEM (HVAC)

CONSULT Function

CONSULT performs the following functions via CAN communication with A/C auto amp.

Diagnostic mode	Description	
Self diagnostic result	Displays the diagnosis results judged by A/C auto amp.	
Data monitor	Displays the input/output signal of A/C auto amp.	
Active test	The signals used to activate each device are forcibly supplied from A/C auto amp	
Work support	Changes the setting for each setting function.	
ECU identification	Displays the part number of A/C auto amp.	

NOTE:

Diagnosis should be performed with engine running. Door motor operation speeds become slower and NO results may be returned even for normal operation if battery voltage drops below 12 V during self-diagnosis.

SELF-DIAGNOSIS RESULTS

Refer to HAC-150, "DTC Index".

DATA MONITOR

ט	ısp	lay	item	list
---	-----	-----	------	------

Display item list		
Monitor item [Unit]		Description
COMP REQ SIG	[On/Off]	Displays A/C switch ON/OFF status transmitted to other units via CAN communication
FAN REQ SIG	[On/Off]	Displays fan switch ON/OFF status transmitted to other units via CAN communication
AMB TEMP SEN	[°C]	Ambient sensor value converted from ambient sensor signal received from ambient sensor
IN-VEH TEMP	[°C]	In-vehicle sensor value converted from in-vehicle sensor signal received from in-vehicle sensor
INT TEMP SEN	[°C]	Intake sensor value converted from intake sensor signal received from intake sensor
SUNLOAD SEN	[w/m ²]	Sunload sensor value converted from sunload sensor signal received from sunload sensor
AMB SEN CAL	[°C]	Ambient sensor value calculated by A/C auto amp.
IN-VEH CAL	[°C]	In-vehicle sensor value calculated by A/C auto amp.
INT TEMP CAL	[°C]	Intake sensor value calculated by A/C auto amp.
SUNL SEN CAL	[w/m ²]	Sunload sensor value calculated by A/C auto amp.
FAN DUTY		Duty ratio of blower motor judged by A/C auto amp.
XM		Target discharge air temperature judged by A/C auto amp. depending on the temperature setting and the value from each sensor
ENG COOL TEMP	[°C]	Water temperature signal value received from ECM via CAN communication
VEHICLE SPEED	[Mph (km/h)]	Vehicle speed signal value received from meter via CAN communication

ACTIVE TEST

Test item	Description
HVAC TEST	The operation check of air conditioning system can be performed by selecting the mode. Refer to the following table for the conditions of each mode.

Check each output device

	Test item						
	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	MODE 6	MODE 7
Mode door position	VENT	B/L 1	B/L 2	FOOT	D/F	DEF	_
Intake door position	REC	REC	20% FRE	FRE	FRE	FRE	_
Air mix door position	FULL COLD	FULL COLD	FULL HOT	FULL HOT	FULL HOT	FULL HOT	_
Blower motor control signal duty ratio	37%	91%	65%	65%	65%	91%	_
Magnet clutch	ON	ON	OFF	OFF	ON	ON	_
ECV duty ratio	100%	100%	0%	0%	50%	100%	_

NOTE:

- Perform the inspection of each output device after starting the engine because the compressor is operated.
- If the Mode 7 is selected, the malfunction is displayed but it is normal.

WORK SUPPORT

Work item	Description	Refer to
TEMP SET CORRECT (Temperature setting trimmer)	If the temperature felt by the customer is different than the air flow temperature controlled by the temperature setting, the A/C auto amp. control temperature can be adjusted to compensate for the temperature setting.	HAC-94, "Temperature Setting Trimmer"
FRE MEMORY SET [Inlet port memory function (FRE)]	 If the ignition switch is turned to the OFF position while the FRE indicator is set to ON (fresh air intake), "Perform the memory" or "Do not perform the memory" of FRE indicator ON (fresh air intake) condition can be selected. If "Perform the memory" was set, the FRE indicator will be ON (fresh air intake) when turning the ignition switch to the ON position again. If "Do not perform the memory" was set, the air inlets will be controlled automatically when turning the ignition switch to the ON position again. 	HAC-95, "Inlet Port Memory Function (FRE)"
REC MEMORY SET [Inlet port memory function (REC)]	 If the ignition switch is turned to the OFF position while the REC indicator is set to ON (recirculation), "Perform the memory" or "Do not perform the memory" of REC indicator ON (recirculation) condition can be selected. If "Perform the memory" was set, the REC indicator will be ON (recirculation) when turning the ignition switch to the ON position again. If "Do not perform the memory" was set, the air inlets will be controlled automatically when turning the ignition switch to the ON position again. 	HAC-96, "Inlet Port Memory Function (REC)"
BLOWER SET (Foot position setting trimmer)	In FOOT mode, the air blowing to DEF can change ON/OFF.	HAC-95, "Foot Position Setting Trimmer"

NOTE

When the battery cable is disconnected from the negative terminal or when the battery voltage becomes 10 V or less, the setting of WORK SUPPORT may be cancelled.

U1000 CAN COMM CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM CIRCUIT

Description INFOID:0000000007626855

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-board multiplex communication line with high data communication speed and excellent error detection ability. A modern vehicle is equipped with many ECMs, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, 2 control units are connected with 2 communication lines (CAN-L-line and CAN-H-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

Refer to LAN-25, "CAN Communication Signal Chart" for details of the communication signal.

DTC Logic INFOID:0000000007626856

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible cause
U1000	CAN COMM CIRCUIT	When A/C auto amp. is not transmitting or receiving CAN communication signal for 2 or more seconds.	CAN communication system

Diagnosis Procedure

INFOID:0000000007626857

1.PERFORM SELF-DIAGNOSIS

(P)With CONSULT

- Turn the ignition switch ON and wait for 2 seconds or more.
- Perform the "SELF-DIAGNOSIS".
- Check if any DTC is detected in the self-diagnostic results.

Is DTC "U1000" displayed?

YES >> Perform the diagnosis for the CAN communication system. Refer to LAN-15, "Trouble Diagnosis Flow Chart".

NO >> Perform the intermittent malfunction diagnosis. Refer to GI-44, "Intermittent Incident". HAC

Н

Α

В

D

Е

F

K

M

L

N

Р

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

U1010 CONTROL UNIT (CAN)

Description INFOID:000000007626858

Initial diagnosis of A/C auto amp.

DTC Logic

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible cause
U1010	CONTROL UNIT (CAN)	When detecting error during the initial diagnosis of CAN controller of A/C auto amp.	A/C auto amp.

Diagnosis Procedure

INFOID:0000000007626860

1. REPLACE A/C AUTO AMP.

When DTC "U1010" is detected, replace A/C auto amp.


>> INSPECTION END

B257B, B257C AMBIENT SENSOR

Description INFOID:000000007626861

AMBIENT SENSOR

- The ambient sensor (1) is installed to the hood lock stay.
- The ambient sensor converts the ambient temperature detected with thermistor into the voltage, and the A/C auto amp. inputs this voltage.

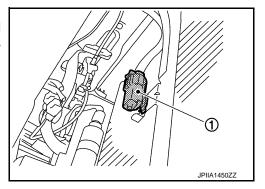

AMBIENT TEMPERATURE CORRECTION

- The A/C auto amp. inputs the temperature detected with the ambient sensor as the ambient temperature.
- Perform the correction of the temperature detected with the ambient sensor for air conditioning control and for ambient temperature display.
- Since the engine heat influences on the ambient sensor during idling condition, the A/C auto amp. retards
 the ambient temperature indication of the combination meter to avoid the effect of steep temperature
 change.
- Select and use the initial value of ambient temperature data depending on the coolant temperature when turning the ignition switch from OFF to ON. Use the detection temperature of the ambient sensor at low coolant temperature [less than approximately 56°C (133°F)]. Use the memory data (before the ignition switch is OFF) when the engine is warming up [approximately 56°C (133°F) or more].
- Do not perform the correction of the ambient temperature when the detection temperature of the ambient temperature is less than approximately -29°C (-20°F) (for ambient temperature display) or less than approximately -20°C (-4°F) (for air conditioning control).

SET TEMPERATURE CORRECTION

The A/C auto amp. performs the correction to the target temperature set by the temperature control dial so as to match the temperature felt by the passengers depending on the ambient temperature detected with the ambient sensor and controls it so that the interior air temperature is always the most suitable.

DTC Logic

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible causes
B257B	AMBIENT SENSOR	The ambient sensor recognition temperature is too high.	Ambient sensor A/C auto amp. Harness and connector (Short in the ambient sensor circuit)
B257C	ANDIENT SENSOR	The ambient sensor recognition temperature is too low.	 Ambient sensor A/C auto amp. Harness and connector (Open in the ambient sensor circuit)

DTC CONFIRMATION PROCEDURE

1. PERFORM SELF-DIAGNOSIS

(P)With CONSULT

- 1. Perform the "SELF-DIAGNOSIS".
- 2. Check if any DTC is detected in the self-diagnostic results.

NOTE

• If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-113, "DTC Logic" or HAC-114, "DTC Logic".

Revision: 2011 August **HAC-115** 2012 370Z

HAC

Α

D

Е

F

K

J

L

IVI

Ν

_

0

P

B257B, B257C AMBIENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

• If there is an open circuit in the ambient sensor, A/C auto amp registers extreme cold [-30°C (-22°F)] and adjusts the temperature control warmer.

Is DTC "B257B" or "B257C" displayed?

YES >> Perform the diagnosis for the ambient sensor. Refer to <u>HAC-116</u>, "<u>Diagnosis Procedure</u>".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000007626863

1. CHECK AMBIENT SENSOR POWER SUPPLY CIRCUIT

- 1. Turn the ignition switch OFF.
- Disconnect ambient sensor connector.
- 3. Turn the ignition switch ON.
- 4. Check voltage between ambient sensor harness connector and ground.

(+)	(–)	V. II.
Ambien	t sensor		Voltage (Approx.)
Connector	Terminal		, , ,
E76	1	Ground	5 V

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

2. CHECK AMBIENT SENSOR CIRCUIT CONTINUITY

- 1. Turn the ignition switch OFF.
- 2. Disconnect the A/C auto amp. connector.
- Check for continuity between the ambient sensor harness connector and A/C auto amp harness connector.

Ambier	nt sensor	A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	Continuity
E76	2	M66	37	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK AMBIENT SENSOR

Check the ambient sensor components. Refer to HAC-117, "Component Inspection".

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Replace the ambient sensor.

4. CHECK AMBIENT SENSOR CIRCUIT CONTINUITY

- 1. Turn the ignition switch OFF.
- 2. Disconnect the A/C auto amp. connector.
- Check for continuity between the ambient sensor harness connector and A/C auto amp. harness connector.

Ambien	Ambient sensor		ito amp.	Continuity
Connector	Terminal	Connector	Terminal	Continuity
E76	1	M66	35	Existed

4. Check for continuity between ambient sensor harness connector and ground.

B257B, B257C AMBIENT SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

Ambien	t sensor		Continuity	
Connector	Terminal	_	Continuity	
E76	1	Ground	Not existed	

В

C

D

Е

F

Α

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Repair the harnesses or connectors.

Component Inspection

INFOID:0000000007626864

1. CHECK AMBIENT SENSOR

- 1. Turn the ignition switch OFF.
- 2. Remove the ambient sensor. Refer to HAC-166. "Exploded View".
- 3. Check the resistance between the ambient sensor terminals. Refer to the applicable table for the normal value.

Tor	minal	Condition	Resistance: kΩ
1611	IIIIIai	Temperature: °C (°F)	ivesisiance. N22
		-15 (5)	12.73
		-10 (14)	9.92
		-5 (23)	7.80
		0 (32)	6.19
		5 (41)	4.95
		10 (50)	3.99
1	2	15 (59)	3.24
		20 (68)	2.65
		25 (77)	2.19
		30 (86)	1.81
		35 (95)	1.51
		40 (104)	1.27
		45 (113)	1.07

HAC

Н

Κ

L

N /I

Ν

0

Ρ

Is the inspection result normal?

YES >> INSPECTION END


NO >> Replace the ambient sensor.

B2578, B2579 IN-VEHICLE SENSOR

Description INFOID:000000007626865


IN-VEHICLE SENSOR


- The in-vehicle sensor (1) is installed to the instrument lower panel LH.
- The in-vehicle sensor converts the interior air temperature of the passenger room sucked by the aspirator detected with the thermistor into the voltage, and the A/C auto amp. inputs this voltage.

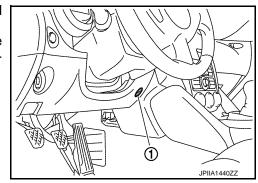

ASPIRATOR

The aspirator (1) generates the vacuum by the air blown from the heater & cooling unit and draws the air of the passenger room to the in-vehicle sensor area via the aspirator duct.

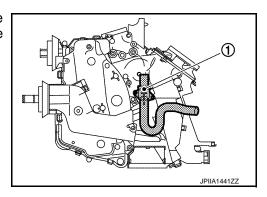

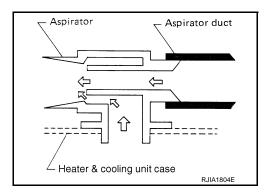

INTERIOR AIR TEMPERATURE CORRECTION

- The A/C auto amp. inputs the temperature detected with the in-vehicle sensor as the interior air temperature.
- Perform the correction of the temperature detected with the in-vehicle sensor for each air conditioning control.

DTC Logic

DTC DETECTION LOGIC

B2578, B2579 IN-VEHICLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible causes
B2578	IN-VEHICLE SENSOR	The in-vehicle sensor recognition temperature is too high.	 In-vehicle sensor A/C auto amp. Harness and connector (Short in the in-vehicle sensor circuit)
B2579		The in-vehicle sensor recognition temperature is too low.	 In-vehicle sensor A/C auto amp. Harness and connector (Open in the in-vehicle sensor circuit)

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF-DIAGNOSIS

With CONSULT

- 1. Perform the "SELF-DIAGNOSIS".
- 2. Check if any DTC is detected in the self-diagnostic results.

NOTE:

If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-113, "DTC Logic" or HAC-114, "DTC Logic".

Is DTC "B2578" or "B2579" displayed?

YES >> Perform the diagnosis for the in-vehicle sensor. Refer to <u>HAC-119</u>, "<u>Diagnosis Procedure</u>".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000007626867

1. CHECK IN-VEHICLE SENSOR POWER SUPPLY CIRCUIT

- Turn the ignition switch OFF.
- Disconnect the in-vehicle sensor connector.
- 3. Turn the ignition switch ON.
- 4. Check voltage between in-vehicle sensor harness connector and ground.

(+)		(–)	
In-vehicle sensor			Voltage (Approx.)
Connector	Terminal	_	(11 - /
M61	1	Ground	5 V

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

2.check in-vehicle sensor circuit continuity-

- Turn the ignition switch OFF.
- Disconnect the A/C auto amp. connector.
- Check for continuity between the in-vehicle sensor harness connector and A/C auto amp. harness connector.

In-vehic	le sensor	A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	Continuity
M61	2	M66	37	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK IN-VEHICLE SENSOR

Check the in-vehicle sensor components. Refer to HAC-120, "Component Inspection".

HAC

Α

В

Е

L

N/I

Ν

0

Р

B2578, B2579 IN-VEHICLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Replace the in-vehicle sensor.

4. CHECK IN-VEHICLE SENSOR CIRCUIT CONTINUITY

- 1. Turn the ignition switch OFF.
- 2. Disconnect the A/C auto amp. connector.
- Check for continuity between the in-vehicle sensor harness connector and A/C auto amp. harness connector.

In-vehic	In-vehicle sensor		ito amp.	Continuity
Connector	Terminal	Connector	Terminal	Continuity
M61	1	M66	36	Existed

4. Check for continuity between in-vehicle sensor harness connector and ground.

In-vehic	le sensor		Continuity
Connector	Terminal		Continuity
M61	1	Ground	Not existed

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Repair the harnesses or connectors.

Component Inspection

INFOID:0000000007626868

1. CHECK IN-VEHICLE SENSOR

- 1. Turn the ignition switch OFF.
- Remove the in-vehicle sensor. Refer to <u>HAC-167</u>, "Exploded View".
- 3. Check the resistance between the in-vehicle sensor terminals. Refer to the applicable table for the normal value.

Tor	minal	Condition	Resistance: kΩ	
iei	IIIIIai	Temperature: °C (°F)	Nesistance. R22	
		-15 (5)	12.73	
		-10 (14)	9.92	
		-5 (23)	7.80	
		0 (32)	6.19	
		5 (41)	4.95	
		10 (50)	3.99	
1	2	15 (59)	3.24	
		20 (68)	2.65	
		25 (77)	2.19	
		30 (86)	1.81	
		35 (95)	1.51	
		40 (104)	1.27	
		45 (113)	1.07	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the in-vehicle sensor.

[WITH 7 INCH DISPLAY]

Α

D

Е

M


N

B2581, B2582 INTAKE SENSOR

Description

INTAKE SENSOR

- Intake sensor (1) is located on the evaporator (2).
- The intake sensor converts the evaporator passing air temperature detected with thermistor into the voltage, and the A/C auto amp. inputs this voltage.

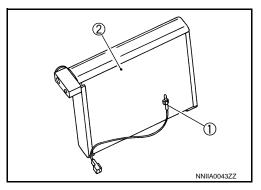

INTAKE TEMPERATURE CORRECTION

- The A/C auto amp. inputs the temperature detected with the intake sensor as the evaporator passing air temperature.
- Perform the correction of the temperature detected with the intake sensor for air conditioning control.
- The A/C auto amp. performs the correction so that the recognition intake temperature changes depending on the difference between the detected intake temperature and the recognition intake temperature. If the difference is large, the changing is early. The changing becomes slow as the difference becomes small.

DTC Logic

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible causes
B2581	INTAKE SENSOR	The intake sensor recognition temperature is too high.	Intake sensor A/C auto amp. Harness and connector (Short in the intake sensor circuit)
B2582		The intake sensor recognition temperature is too low.	Intake sensor A/C auto amp. Harness and connector (Open in the intake sensor circuit)

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF-DIAGNOSIS

(P)With CONSULT

- 1. Perform the "SELF-DIAGNOSIS".
- 2. Check if any DTC is detected in the self-diagnostic results.

NOTE:

If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to <u>HAC-113, "DTC Logic"</u> or <u>HAC-114, "DTC Logic"</u>.

Is DTC "B2581" or "B2582" displayed?

YES >> Perform the diagnosis for the intake sensor. Refer to HAC-121, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000007626871

1. CHECK INTAKE SENSOR POWER SUPPLY CIRCUIT

- Turn the ignition switch OFF.
- Disconnect the intake sensor connector.
- Turn the ignition switch ON.

B2581, B2582 INTAKE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

Check voltage between intake sensor harness connector and ground.

(+)	(–)	V/ It-	
Intake	sensor		Voltage (Approx.)	
Connector	Terminal		, , ,	
M205	1	Ground	5 V	

Is the inspection result normal?

YES >> GO TO 2. NO >> GO TO 4.

2. CHECK INTAKE SENSOR CIRCUIT CONTINUITY

- 1. Turn the ignition switch OFF.
- 2. Disconnect the A/C auto amp. connector.
- 3. Check for continuity between the intake sensor harness connector and A/C auto amp. harness connector.

Intake	sensor	A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	Continuity
M205	2	M66	37	Existed

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK INTAKE SENSOR

Check the intake sensor components. Refer to HAC-122, "Component Inspection".

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Replace the intake sensor.

4. CHECK INTAKE SENSOR CIRCUIT CONTINUITY

- 1. Turn the ignition switch OFF.
- 2. Disconnect the A/C auto amp. connector.
- 3. Check for continuity between the intake sensor harness connector and A/C auto amp. harness connector.

Intake sensor		A/C au	ito amp.	Continuity
Connector	Terminal	Connector	Terminal	Continuity
M205	1	M66	16	Existed

4. Check for continuity between intake sensor harness connector and ground.

Intake	sensor		Continuity	
Connector	Terminal		Continuity	
M205	1	Ground	Not existed.	

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Repair the harnesses or connectors.

Component Inspection

INFOID:0000000007626872

1. CHECK INTAKE SENSOR

- Turn the ignition switch OFF.
- 2. Disconnect the intake sensor connector. Refer to HAC-169, "Exploded View".
- Check the resistance between the intake sensor terminals. Refer to the applicable table for the normal value.

B2581, B2582 INTAKE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

Tor	minal	Condition	Resistance: kΩ
Terminal		Temperature: °C (°F)	Resistance, K12
		-15 (5)	12.28
		-10 (14)	9.58
		-5 (23)	7.55
		0 (32)	6.00
		5 (41)	4.81
		10 (50)	3.88
1	2	15 (59)	3.16
	·	20 (68)	2.59
		25 (77)	2.14
		30 (86)	1.77
		35 (95)	1.48
	•	40 (104)	1.24
		45 (113)	1.05

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the intake sensor.

Α

В

С

D

Е

F

G

Н

HAC

J

K

L

M

Ν

0

Р


[WITH 7 INCH DISPLAY]

B2630, B2631 SUNLOAD SENSOR

Description INFOID.000000007626873

SUNLOAD SENSOR

- The sunload sensor (1) is installed to the front defroster grille LH.
- The sunload sensor converts the sunload amount (illuminance) into the current value with the photodiode. The A/C auto amp. calculates this current value to the voltage and inputs it.

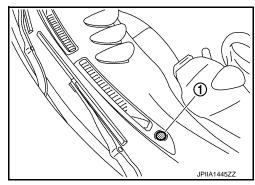

SUNLOAD AMOUNT CORRECTION

- The A/C auto amp. inputs the sunload amount detected with the sunload sensor.
- Perform the correction of the sunload amount detected with the sunload sensor for each air conditioning control.
- When the sunload amount suddenly changes, for example when entering a tunnel, perform the correction so
 that the recognition sunload amount of the A/C auto amp. changes slowly.

DTC Logic

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible causes
B2630	SUNLOAD SENSOR	Detected calorie at sunload sensor 2832 W/m ² (2436 kcal/m ² ·h) or more	Sunload sensor A/C auto amp. Harness and connector (Short in the sunload sensor circuit)
B2631	SONLOAD SENSOR	Detected calorie at sunload sensor 64.7 W/m ² (56 kcal/m ² ·h) or less	Sunload sensor A/C auto amp. Harness and connector (Open in the sunload sensor circuit)

DTC REPRODUCTION PROCEDURE

1. PERFORM SELF-DIAGNOSIS

(P)With CONSULT

- 1. Perform the "SELF-DIAGNOSIS".
- Check if any DTC is detected in the self-diagnostic results.

NOTE:

- If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-113, "DTC Logic" or HAC-114, "DTC Logic".
- Sunload sensor may register a malfunction when indoors, at dusk, or at other times when light is insufficient. When performing the diagnosis indoors, use a lamp (60 W or more) that is pointed at the sunload sensor.

Is DTC "B2630" or "B2631" displayed?

YES >> Perform the diagnosis for the sunload sensor. Refer to HAC-124, "Diagnosis Procedure".

NO >> INSPECTION END

Diagnosis Procedure

INFOID:0000000007626875

1. CHECK SUNLOAD SENSOR POWER SUPPLY CIRCUIT

- Turn the ignition switch OFF.
- Disconnect the sunload sensor connector.

B2630, B2631 SUNLOAD SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

Turn the ignition switch ON.

Check voltage between sunload sensor harness connector and ground.

(+)		(–)	Voltage (Approx.)
Sunload sensor			
Connector	Terminal		(11 - 7
M46	1	Ground	5 V

Is the inspection result normal?

YES >> GO TO 2.

NO >> GO TO 4.

2.check sunload sensor circuit continuity

Turn the ignition switch OFF.

Disconnect the A/C auto amp. connector.

Check for continuity between the sunload sensor harness connector and the A/C auto amp. harness connector.

Sunload sensor		A/C auto amp.		Continuity
Connector	Terminal	Connector	Terminal	Continuity
M46	2	M66	37	Existed

Is the inspection result normal?

>> GO TO 3. YES

NO >> Repair the harnesses or connectors.

3. CHECK SUNLOAD SENSOR

- Connect the sunload sensor connector.
- 2. Connect the A/C auto amp. connector.
- Check the sunload sensor components. Refer to <u>HAC-125</u>, "Component Inspection".

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Replace the sunload sensor.

4. CHECK SUNLOAD SENSOR CIRCUIT CONTINUITY

- Turn the ignition switch OFF.
- Disconnect the A/C auto amp. connector.
- Check for continuity between the sunload sensor harness connector and A/C auto amp. harness connector.

Sunload sensor		A/C auto amp.		Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
M46	1	M66	15	Existed	

Check for continuity between sunload sensor harness connector and ground.

Sunload sensor			Continuity	
Connector	Terminal	-	Continuity	
M46	1	Ground	Not existed	

Is the inspection result normal?

YES >> Replace A/C auto amp.

NO >> Repair the harnesses or connectors.

Component Inspection

1. CHECK SUNLOAD SENSOR

HAC-125 Revision: 2011 August 2012 370Z

HAC

Н

Α

В

D

Е

F

K


Ν

Р

INFOID:0000000007626876

- Turn the ignition switch ON.
- 2. Check the input voltage from the sunload sensor between the A/C auto amp. harness connector and ground. Refer to the applicable table for the normal value.

(+)	(–)
A/C au	to amp.	
Connector	Terminal	
M66	15	Ground

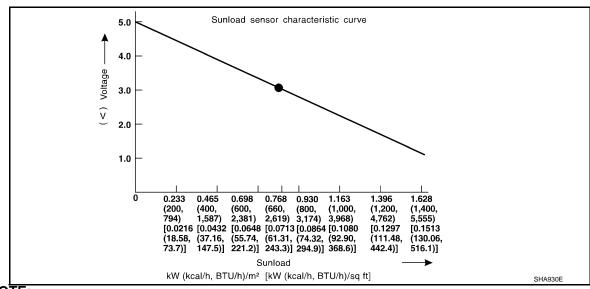

NOTE:

- When checking indoors, use a lamp of approximately 60 W. Move the lamp towards and away from the sensor to check.
- The sunload amount produced by direct sunshine in fair weather is equivalent to approximately 0.77 kW/m² (662 kcal/m²·h).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the sunload sensor.


[WITH 7 INCH DISPLAY]

B2632, B2633 AIR MIX DOOR MOTOR PBR

Description INFOID:00000000007626877

AIR MIX DOOR MOTOR

- The air mix door motor (1) is installed to the heater & cooling unit assembly.
- The LCU (Local Control Unit) is installed to each door motor so as to perform the multiplex communication control (LAN) between each door motor of the mode door motor, air mix door motor and intake door motor in one communication line.
- When each LCU receives the control signal (combination of the pulse wave with two types of amplitude) from the A/C auto amp., it moves each door to the appropriate position based on the door position detection signal of each PBR (Potentio Balance Resistor). When the movement was completed, each LCU transmits the signal that reports the movement completion to the A/C auto amp.

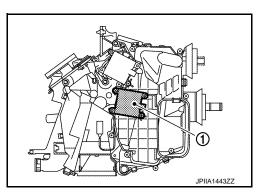

DTC Logic INFOID:0000000007626878

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible causes
B2632	DR AIR MIV DOOR MOT	Air mix door PBR position 95% or more	 Air mix door motor (PBR internal circuit is short) A/C auto amp. Harness and connector (LAN communication line is open or shorted)
B2633	DR AIR MIX DOOR MOT	Air mix door PBR position 5% or less	 Air mix door motor (PBR internal circuit is open) A/C auto amp. Harness and connector (LAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF-DIAGNOSIS

(P)With CONSULT

- 1. Perform the "SELF-DIAGNOSIS".
- Check if any DTC is detected in the self-diagnostic results.

- If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-113, "DTC Logic" or HAC-114, "DTC Logic".
- If all of door motors DTC (B2632 B2655) are detected, check door motor communication circuit. Refer to HAC-134, "Diagnosis Procedure".

Is DTC "B2632" or "B2633" displayed?

YES >> Perform the diagnosis of air mix door motor system. Refer to HAC-128, "Diagnosis Procedure".

NO >> GO TO 2.

- Turn temperature dial and raise temperature setting to 32.0°C (90°F) after warming up the engine.
- Check that warm air blows from outlets.
- Operate the compressor.

2 . FUNCTION INSPECTION

- Operate the temperature control dial and lower the set temperature to 18.0°C (60°F).
- Check that the cool air blows from the outlets.

Does it operate normally?

HAC

Н

Α

Е

M

Ν

Р

HAC-127 Revision: 2011 August 2012 370Z

B2632, B2633 AIR MIX DOOR MOTOR PBR

< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

YES >> INSPECTION END

NO >> Check the air mix door motor system installation condition. Repair or replace the malfunctioning parts.

Diagnosis Procedure

INFOID:0000000007626879

1. CHECK BATTERY VOLTAGE OF AIR MIX DOOR MOTOR

- 1. Turn the ignition switch ON.
- 2. Check voltage between the air mix door motor harness connector and ground.

((+)		Valtana
Air mix d	oor motor		Voltage (Approx.)
Connector	Terminal		
M204	1	Ground	12 V

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the harnesses or connectors.

2.CHECK SIGNAL OF AIR MIX DOOR MOTOR

Check output waveform between the air mix door motor harness connector and ground with the oscilloscope.

(+)		(–)	
Air mix d	oor motor		Output waveform
Connector	Terminal	_	
M204	3	Ground	(V) 15 10 5 0

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.check ground circuit of air mix door motor

- 1. Turn the ignition switch OFF.
- 2. Disconnect the air mix door motor connector.
- 3. Check for continuity between the air mix door motor harness connector and ground.

Air mix door motor			Continuity	
Connector	Terminal	_	Continuity	
M204	2	Ground	Existed	

Is the inspection result normal?

YES >> Replace the air mix door motor.

NO >> Repair the harnesses or connectors.

B2636, B2637, B2638, B2639, B2654, B2655 MODE DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >


[WITH 7 INCH DISPLAY]

B2636, B2637, B2638, B2639, B2654, B2655 MODE DOOR MOTOR

Description

MODE DOOR MOTOR

- The mode door motor (1) is installed to the heater & cooling unit assembly.
- The LCU (Local Control Unit) is installed to each door motor so as to perform the multiplex communication control (LAN) between each door motor of the mode door motor, air mix door motor and intake door motor in one communication line.
- When each LCU receives the control signal (combination of the pulse wave with two type of amplitude) from the A/C auto amp., it moves each door to the appropriate position based on the door position detection signal of each PBR (Potentio Balance Resistor). When the movement was completed, each LCU transmits the signal that reports the movement completion to the A/C auto amp.

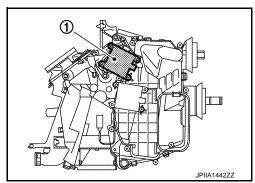

DTC Logic

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible cause
B2636	DR VENT DOOR FAIL	When the malfunctioning door position is detected at VENT position	
B2637	DR B/L DOOR FAIL	When the malfunctioning door position is detected at B/L position	• Made deer mater (DDD internal
B2638	DR D/F1 DOOR FAIL	When the malfunctioning door position is detected at FOOT position	 Mode door motor (PBR internal circuit is open or shorted) A/C auto amp.
B2639	DR DEF DOOR FAIL	When the malfunctioning door position is detected at DEF position	Harness and connector (LAN communication line is open
B2654	D/F2 DOOR FAIL	When the malfunctioning door position is detected at D/F position	or shorted)
B2655	B/L2 DOOR FAIL	When the malfunctioning door position is detected at B/L2 position	

DTC CONFIRMATION PROCEDURE

1. PERFORM SELF-DIAGNOSIS

- 1. Perform the "SELF-DIAGNOSIS".
- 2. Check if any DTC is detected in the self-diagnostic results.

NOTE:

- If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-113, "DTC Logic" or HAC-114, "DTC Logic".
- If all of door motors DTC (B2632 B2655) are detected, check door motor communication circuit. Refer to <u>HAC-134, "Diagnosis Procedure"</u>.

Is DTC "B2636", "B2637", "B2638", "B2639", "B2654" or "B2655" displayed?

YES >> Perform the diagnosis of mode door motor system. Refer to <u>HAC-130, "Diagnosis Procedure"</u>. NO >> GO TO 2.

2. FUNCTION INSPECTION

- 1. Turn mode control dial to each position.
- 2. Check that the air outlets change according to each indicated air outlet by placing a hand in front of the outlets. Refer to VTL-2, "System Description".

Does it operate normally?

- YES >> INSPECTION END
- NO >> Check the mode door system installation condition. Repair or replace the malfunctioning parts.

HAC

Н

Α

В

Е

_

_

M

Ν

0

Р

Revision: 2011 August **HAC-129** 2012 370Z

B2636, B2637, B2638, B2639, B2654, B2655 MODE DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

Diagnosis Procedure

INFOID:0000000007626882

1. CHECK MODE DOOR MOTOR POWER SUPPLY CIRCUIT

- 1. Turn the ignition switch ON.
- 2. Check voltage between the mode door motor harness connector and ground.

(+)		(–)	Valtana	
Mode door motor			Voltage (Approx.)	
Connector	Terminal		, , ,	
M203	1	Ground	12 V	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the harnesses or connectors.

2.CHECK MODE DOOR MOTOR SIGNAL

Check output waveform between the mode door motor harness connector and ground with the oscilloscope.

(+)		(–)		
Mode do	or motor	Output waveform		
Connector	Terminal			
M203	3	Ground	(V) 15 10 5 0 	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

$\overline{3}$.check mode door motor ground circuit

- Turn the ignition switch OFF.
- 2. Disconnect the mode door motor connector.
- 3. Check for continuity between the mode door motor harness connector and ground.

Mode door motor		_	Continuity	
Connector	Terminal		Continuity	
M203	2	Ground	Existed	

Is the inspection result normal?

YES >> Replace the Mode door motor.

NO >> Repair the harnesses or connectors.


[WITH 7 INCH DISPLAY]

B263D, B263E, B263F INTAKE DOOR MOTOR

Description INFOID:0000000007626883

INTAKE DOOR MOTOR

- The intake door motor (1) is installed to the blower unit.
- The LCU (Local Control Unit) is installed to each door motor so as to perform the multiplex communication control (LAN) between each door motor of the mode door motor, air mix door motor and intake door motor in one communication line.
- When each LCU receives the control signal (combination of the pulse wave with two type of amplitude) from the A/C auto amp., it moves each door to the appropriate position based on the door position detection signal of each PBR (Potentio Balance Resistor). When the movement was completed, each LCU transmits the signal that reports the movement completion to the A/C auto amp.

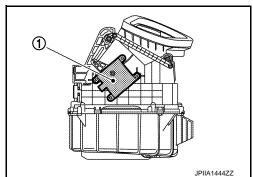

DTC Logic INFOID:0000000007626884

DTC DETECTION LOGIC

DTC	Items (CONSULT screen terms)	Diagnostic item is detected when	Possible cause
B263D	FRE DOOR FAIL	When the malfunctioning intake door position is detected at FRE position	Intake door motor (PBR internal circuit is open or shorted)
B263E	20P FRE DOOR FAIL	When the malfunctioning intake door position is detected at 20%FRE position	A/C auto amp.Harness and connector
B263F	REC DOOR FAIL	When the malfunctioning intake door position is detected at REC position	(LAN communication line is open or shorted)

DTC CONFIRMATION PROCEDURE

1.PERFORM SELF-DIAGNOSIS

(P)With CONSULT

- 1. Perform the "SELF-DIAGNOSIS".
- Check if any DTC is detected in the self-diagnostic results.

NOTE:

- If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-113, "DTC Logic" or HAC-114, "DTC Logic".
- If all of door motors DTC (B2632 B2655) are detected, check door motor communication circuit. Refer to HAC-134. "Diagnosis Procedure".

Is DTC "B263D", "B263E" or "B263F" displayed?

YES >> Perform the diagnosis of intake door motor system. Refer to HAC-132, "Diagnosis Procedure". NO >> GO TO 2.

2.function inspection

- Press intake switch to set the air outlet to recirculation.
- The intake switch indicator is turned ON.
- 3. Listen to intake sound and confirm air inlets change.
- 4. Press intake switch again to set the air outlet to fresh air intake.
- The intake switch indicator is turned OFF.
- Listen to intake sound and confirm air inlets change.

Does it operate normally?

YES >> INSPECTION END

>> Check the intake door system installation condition. Repair or replace the malfunctioning parts. NO

HAC

Α

D

Е

K

M

N

B263D, B263E, B263F INTAKE DOOR MOTOR

< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

Diagnosis Procedure

INFOID:0000000007626885

1. CHECK BATTERY VOLTAGE OF INTAKE DOOR MOTOR

- 1. Turn the ignition switch ON.
- 2. Check voltage between the intake door motor harness connector and ground.

(+)		(–)	Valtana	
Intake door motor		_	Voltage (Approx.)	
Connector	Terminal	_	() ,	
M206	1	Ground	12 V	

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair the harnesses or connectors.

2. CHECK INTAKE DOOR MOTOR SIGNAL

Check output waveform between the intake door motor harness connector and ground with the oscilloscope.

(-	+)	(–)	
Intake de	Intake door motor		Output waveform
Connector	Terminal	_	
M206	3	Ground	(V) 15 10 5 0

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.check intake door motor ground circuit

- 1. Turn the ignition switch OFF.
- 2. Disconnect the intake door motor connector.
- 3. Check for continuity between the intake door motor harness connector and ground.

Intake door motor			Continuity	
Connector	Terminal		Continuity	
M206	2	Ground	Existed	

Is the inspection result normal?

YES >> Replace the Intake door motor.

NO >> Repair the harnesses or connectors.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

POWER SUPPLY AND GROUND CIRCUIT A/C AUTO AMP.

A/C AUTO AMP.: Diagnosis Procedure

INFOID:0000000007626886

Α

В

D

Е

F

1.CHECK FUSE

Check 10A fuses [Nos. 3, 6 and 19, located in the fuse block (J/B)].

NOTE:

Refer to PG-104, "Fuse, Connector and Terminal Arrangement".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the fuse after repairing the applicable circuit.

2.CHECK A/C AUTO AMP. POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.

2. Disconnect the A/C auto amp. connector.

3. Check voltage between A/C auto amp. harness connector and ground.

(+)	(–)	Voltage		_
A/C auto amp.			Ignition switch position		
Connector	Terminal	_	OFF	ACC	ON
	17		Approx. 0 V	Battery voltage	Battery voltage
M66	20	Ground	Approx. 0 V	Approx. 0 V	Battery voltage
	40		Battery voltage	Battery voltage	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.check a/c auto amp. circuit continuity

1. Turn the ignition switch OFF.

Check continuity between A/C auto amp. harness connector and ground.

A/C auto amp.			Continuity	
Connector	Terminal	_	Continuity	
M66	19	- Ground	Existed	
IVIOO	39		LXISIEU	

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair the harnesses or connectors.

HAC

Н

K

L

M


Ν

Р

INFOID:0000000007626887

DOOR MOTOR COMMUNICATION CIRCUIT

Description

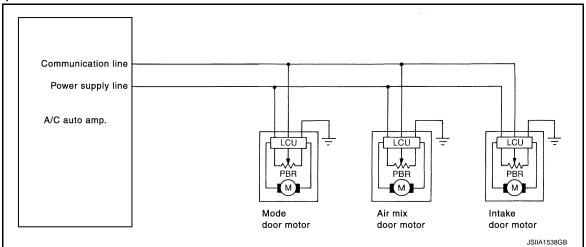

- LCU (Local Control Unit) is built in to each door motor. And detects door position by PBR (Potentio Balance Resistor).
- A/C auto amp. communicates with each LCU via communication line. And receives each door position feedback signal from each LCU.
- Each LCU control each door to the appropriate position depending on the control signal from A/C auto amp.
 When the door movement was completed, transmits the signal of door movement completion to A/C auto amp.

Diagnosis Procedure

INFOID:0000000007626888

NOTE:

If all of door motors DTC are detected, check this circuit.

1. CHECK COMMUNICATION SIGNAL

- Turn the ignition switch ON.
- 2. Check output waveform between A/C auto amp. harness connector and ground with the oscilloscope.

(-	+)	(–)	
	to amp.	()	Output waveform
Connector	Terminal	_	
M66	10	Ground	(V) 15 10 5 0

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.CHECK COMMUNICATION SIGNAL CIRCUIT FOR SHORT

- 1. Turn the ignition switch OFF.
- 2. Disconnect the following connectors:
- A/C auto amp.
- Mode door motor
- Intake door motor
- Air mix door motor
- 3. Check continuity between A/C auto amp. harness connector and ground.

DOOR MOTOR COMMUNICATION CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

A/C au	to amp.		Continuity	
Connector	Terminal	-	Continuity	
M66	10	Ground	Not existed	

Α

В

 D

Е

F

Is the inspection result normal?

YES >> Replace A/C auto amp.

NO >> Repair the harnesses or connectors.

С

3.check communication signal circuit for open

- 1. Turn the ignition switch OFF.
- 2. Disconnect the A/C auto amp. and the mode door motor connectors.
- 3. Check continuity between A/C auto amp. harness connector and the mode door motor harness connector.

A/C au	A/C auto amp.		oor motor	Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
M66	10	M203	3	Existed	

Is the inspection result normal?

YES >> Replace A/C auto amp.

NO >> Repair the harnesses or connectors.

HAC

Н

K

L

M

Ν

C


Р

A/C AUTO AMP.

Description

A/C AUTO AMP. (A/C AUTO AMPLIFIER)

- The A/C auto amp. (1) has a built-in microcomputer which processes information sent from various sensors needed for air conditioning system operation.
- The air mix door motor, mode door motor, intake door motor, blower motor and the compressor are then controlled.
- When the various switches and temperature control dial are operated, data is input to the A/C auto amp. from the AV control unit using CAN communication.
- Self-diagnosis functions are also built into A/C auto amp. to provide quick check of malfunctions in the auto air conditioning system.

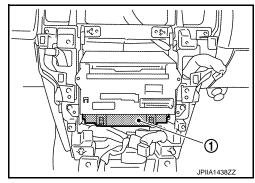

Component Function Check

INFOID:0000000007626890

1. CHECK OPERATION

- 1. Press the AUTO switch, and then check that "AUTO" is shown on the display.
- Operate the temperature control dial. Check that the fan speed or discharge air changes (the discharge air temperature or fan speed varies depending on the ambient temperature, in-vehicle temperature, and set temperature).

Does it operate normally?

YES >> INSPECTION END

NO >> Perform the diagnosis for the A/C auto amp. Refer to HAC-136, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000007626891

1. INSPECTION BY FAIL-SAFE FUNCTION

- 1. Turn the ignition switch ON.
- 2. After approximately 30 seconds, check that the air conditioning system is operated by the fail-safe function (the operation display of air conditioning system is not performed). Refer to HAC-149, "Fail-safe".

Is the fail-safe function operated?

YES >> GO TO 3. NO >> GO TO 2.

2.CHECK A/C AUTO AMP. POWER SUPPLY CIRCUIT AND GROUND CIRCUIT

Check A/C auto amp. power supply circuit and ground circuit. Refer to <u>HAC-133, "A/C AUTO AMP. : Diagnosis Procedure"</u>.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair or replace parts depending on the inspection results.

${f 3.}$ CHECK PRESET SWITCH

Check the preset switch. Refer to AV-228, "Symptom Table".

Is the inspection result normal?


YES >> Replace A/C auto amp.


NO >> Repair or replace parts according to the inspection results.

BLOWER MOTOR

Description INFOID:0000000007626892

- The blower motor utilizes a brush-less motor with a rotating magnet.
- Quietness is improved over previous motors where the brush was the point of contact and the coil rotated.

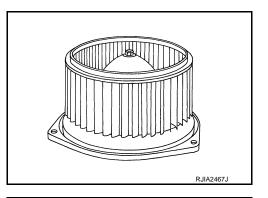

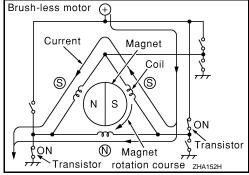

Component Function Check

INFOID:0000000007626893

1. CHECK OPERATION

1. Warm up the engine.

Operate the fan control dial. Check that the fan speed and indicator unit are switched for all fan speeds.

Does it operate normally?

YES >> INSPECTION END

NO >> Perform the diagnosis for the blower motor. Refer to <u>HAC-141</u>, "Diagnosis Procedure".

Diagnosis Procedure

INFOID:0000000007626894

1.self-diagnosis result check

(P)With CONSULT

1. Perform the "SELF-DIAGNOSIS".

Check if any DTC is detected in the self-diagnostic results.

NOTE

If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-113, "DTC Logic" or HAC-114, "DTC Logic".

Is any DTC displayed?

YES >> Perform the diagnosis that is applicable to the sensor and actuator. Refer to <u>HAC-150, "DTC Index"</u>.

NO >> GO TO 2.

$\mathbf{2}.$ PERFORM ACTIVE TEST

(P)With CONSULT

- Perform the "HVAC TEST" of HVAC active test item.
- 2. Check that the blower motor control signal changes according to each indicator number.

HAC

K

M

Ν

Р

Н

Α

В

D

Е

Revision: 2011 August **HAC-137** 2012 370Z

		Test item					
	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	MODE 6	MODE 7
Blower fan motor control sig- nal duty ratio	37%	91%	65%	65%	65%	91%	_

NOTE:

- · Perform the inspection of each output device after starting the engine because the compressor is operated.
- If the Mode 7 is selected, the malfunction is displayed but it is normal.

Does it operate normally?

YES >> INSPECTION END

NO >> GO TO 3.

3.CHECK BLOWER MOTOR POWER SUPPLY CIRCUIT

- 1. Disconnect the blower motor connector.
- Turn the ignition switch ON.
- Check voltage between blower motor harness connector and ground.

(+)	(–)		
Blowe	r motor		Voltage	
Connector	Terminal			
M109	1	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 4.

NO >> GO TO 7.

4. CHECK BLOWER MOTOR GROUND CIRCUIT

- 1. Turn the ignition switch OFF.
- 2. Check for continuity between blower motor harness connector and ground.

Blowe	r motor		Continuity	
Connector	Terminal		Continuity	
M109	3	Ground	Existed	

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the harnesses or connectors.

CHECK BLOWER MOTOR CIRCUIT CONTINUITY

- Disconnect the A/C auto amp. connector.
- 2. Check for continuity between the blower motor harness connector and A/C auto amp. harness connector.

Blower motor		A/C auto amp.		Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
M109	2	M66	32	Existed	

Is the inspection result normal?

YES >> GO TO 6.

NO >> Repair the harnesses or connectors.

$oldsymbol{6}$.CHECK A/C AUTO AMP. OUTPUT SIGNAL

- 1. Reconnect blower motor connector and A/C auto amp. connector.
- Turn the ignition switch ON.
- Set the MODE control dial to VENT position.
- 4. Change fan speed from Lo to Hi, and check duty ratios between blower motor harness connector and ground by using an oscilloscope.


< DTC/CIRCUIT DIAGNOSIS >

NOTE:

Calculate the drive signal duty ratio as shown in the figure.

T2 = Approx. 1.6 ms

Blower motor		Condition	Duty ratio
Connector	Terminal	Fan speed (manual) VENT mode	Duty ratio (Approx.)
		1st	25 %
	2	2nd	33 %
M109		3rd	41 %
		4th	51 %
		5th	61 %
		6th	69 %
		7th	81 %

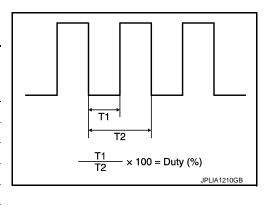

Is the inspection result normal?

YES >> Replace blower motor after confirming the fan air flow does not change.

NO >> Replace the A/C auto amp.

CHECK BLOWER MOTOR CIRCUIT CONTINUITY

Turn the ignition switch OFF.

- Disconnect the blower motor connector and fuse block (J/B) connector.
- Check the continuity between the blower motor harness connector and fuse block (J/B) harness connector.

Blower motor		Fuse block (J/B)		Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
M109	1	N/1	3A	Existed	
WITOS	1	M1 8A		Existed	

4. Check for continuity between blower motor harness connector and ground.

Blowe	r motor		Continuity	
Connector	Connector Terminal		Continuity	
M109	1	Ground	Not existed	

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair the harnesses or connectors.

8. CHECK FUSE

Check 15A fuses [Nos. 21 and 22, located in the fuse block (J/B)].

NOTE:

Refer to PG-104, "Fuse, Connector and Terminal Arrangement".

Is the inspection result normal?

YES >> Inspection the power supply circuit. Refer to <u>PG-18</u>, "Wiring <u>Diagram - IGNITION POWER SUP-</u>

NO >> Replace the fuse after repairing the applicable circuit.

Component Inspection

Revision: 2011 August

1. CHECK BLOWER MOTOR

1. Remove the blower motor. Refer to VTL-11, "Exploded View".

HAC

Α

В

D

Е

F

.

M

Ν

0

Р

INFOID:0000000007626895

BLOWER MOTOR


< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

2. Check that the blower motor turns smoothly. Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the blower motor.

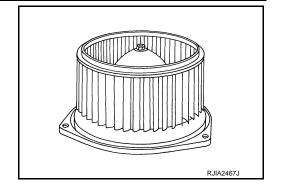

INFOID:0000000007626897

INFOID:0000000007626898

MAGNET CLUTCH

Description

The magnet clutch is the device that drives the compressor with the signal from IPDM E/R.

Component Function Check

1.CHECK OPERATION

- 1. Turn the fan control dial ON.
- 2. Press the A/C switch.
- 3. Check that the indicator of the A/C switch turns ON. Check visually and by sound that the compressor operates.
- Press the A/C switch again.
- 5. Check that the indicator of the A/C switch turns OFF. Check visually and by sound that the compressor stops.

Does it operate normally?

YES >> INSPECTION END

NO >> Go to diagnosis procedure. Refer to HAC-141, "Diagnosis Procedure".

Diagnosis Procedure

1. CHECK CHARGED REFRIGERANT

Connect the recovery/recycling recharging equipment to the vehicle and perform the pressure inspection with the gauge. Refer to <u>HA-34</u>, "Inspection".

Is there refrigerant?

YES >> GO TO 2.

NO >> Check for refrigerant leakages detecting fluorescent leak detector. Refer to HA-26, "Leak Test".

2.CHECK MAGNET CLUTCH OPERATION

Perform auto active test of IPDM E/R. Refer to PCS-11, "Diagnosis Description".

Does it operate normally?

YES >> GO TO 6.

NO >> GO TO 3.

3.CHECK MAGNET CLUTCH

- 1. Turn the ignition switch OFF.
- Disconnect the magnet clutch connector.
- Directly apply the battery voltage to the magnet clutch. Check for operation visually and by sound.

Does it operate normally?

YES >> GO TO 4.

Revision: 2011 August

NO >> Replace magnet clutch. Refer to <u>HA-37</u>, "<u>MAGNET CLUTCH</u>: Removal and Installation of Compressor Clutch".

4. CHECK MAGNET CLUTCH CIRCUIT CONTINUITY

- 1. Turn the ignition switch OFF.
- 2. Disconnect IPDM E/R connector.
- Check continuity between the magnet clutch harness connector and IPDM E/R harness connector.

_	IPDM E/R		Magnet clutch		Continuity
	Connector	Terminal	Connector	Terminal	Continuity
	E7	48	F43	1	Existed

Check for continuity between IPDM E/R harness connector and ground.

HAC

Н

Α

В

D

F

K

L

M

Ν

Р

HAC-141 2012 370Z

< DTC/CIRCUIT DIAGNOSIS >

IPDI	M E/R		Continuity	
Connector	Connector Terminal		Continuity	
E7	48	Ground	Not existed	

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the harnesses and connectors.

5. CHECK FUSE

Check 10A fuse (No. 49, located in the IPDM E/R).

NOTE:

Refer to PG-106, "Fuse, Connector and Terminal Arrangement".

Is the inspection result normal?

YES >> Replace IPDM E/R.

NO >> Replace the fuse after repairing the applicable circuit.

6. CHECK SELF-DIAGNOSIS RESULT CHECK

(P)With CONSULT

- 1. Perform the "SELF-DIAGNOSIS".
- 2. Check if any DTC is detected in the self-diagnostic results.

NOTE:

If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-113, "DTC Logic" or HAC-114, "DTC Logic".

Is any DTC displayed?

YES >> Perform the diagnosis that is applicable to the sensor and actuator. Refer to <u>HAC-150, "DTC Index"</u>.

NO >> GO TO 7.

7.CHECK A/C AUTO AMP. OUTPUT SIGNAL

(P)With CONSULT

- 1. Perform the "DATA MONITOR" of HVAC. Refer to HAC-145, "Reference Value".
- 2. Check A/C ON signal and blower fan ON switch signal.

Monitor item	Condition	Status
COMP REQ SIG	A/C switch: OFF	Off
	A/C switch: ON	On
FAN REQ SW	Fan control dial: OFF	Off
	Fan control dial: ON	On

Is the inspection result normal?

YES >> GO TO 8.

NO >> Replace A/C auto amp.

$oldsymbol{8}.$ CHECK REFRIGERANT PRESSURE SENSOR

Check the refrigerant pressure sensor. Refer to EC-530, "Diagnosis Procedure".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair or replace the malfunctioning parts.

ECV (ELECTRICAL CONTROL VALVE)

< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

INFOID:0000000007626900

ECV (ELECTRICAL CONTROL VALVE)

Description

The ECV (electrical control valve) is installed on the compressor and controls it for emitting appropriate amount of refrigerant when necessary.

Diagnosis Procedure

1.CHECK FUSE

Check 10A fuse [No. 3, located in the fuse block (J/B)].

NOTE:

Refer to PG-104, "Fuse, Connector and Terminal Arrangement".

Is the inspection result normal?

YES >> GO TO 2.

NO >> Replace the fuse after repairing the applicable circuit.

2.CHECK ECV POWER SUPPLY CIRCUIT

- 1. Turn the ignition switch OFF.
- 2. Disconnect the ECV connector.
- 3. Turn the ignition switch ON.
- 4. Check voltage between the ECV harness connector and ground.

(+)	(–)		
E	CV		Voltage	
Connector	Terminal	_		
F44	2	Ground	Battery voltage	

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair the harnesses or connectors.

3.CHECK ECV CONTROL SIGNAL

With CONSULT

- Turn the ignition switch OFF.
- Connect the ECV connector.
- 3. Perform the "HVAC TEST": MODE 5 of HVAC active test mode.
- 4. Check output waveform between the A/C auto amp. harness connector and ground with the oscilloscope.

(+) A/C auto amp.		(–)	Condition		
				Output waveform	
Connector	Terminal	_			
M66	24	Ground	HVAC TEST: MODE 5	Duty ratio: approx. 50 % (V) 15 10 5 0	

Is the inspection result normal?

YES >> Replace the compressor.

NO >> GO TO 4.

4. CHECK CONTINUITY BETWEEN ECV AND A/C AUTO AMP.

- Turn the ignition switch OFF.
- 2. Disconnect the ECV connector.

HAC

K

M

Ν

Р

Н

Α

В

D

Е

Revision: 2011 August **HAC-143** 2012 370Z

ECV (ELECTRICAL CONTROL VALVE)

< DTC/CIRCUIT DIAGNOSIS >

[WITH 7 INCH DISPLAY]

- 3. Disconnect the A/C auto amp. connector.
- 4. Check continuity between the ECV harness connector and A/C auto amp. harness connector.

ECV		A/C auto amp.		Continuity	
Connector	Terminal	Connector	Terminal	Continuity	
F44	3	M66	24	Existed	

5. Check for continuity between the ECV harness connector and ground.

ECV		_	Continuity	
Connector	Terminal		Continuity	
F44	3	Ground	Not existed	

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the harnesses or connectors.

5.CHECK ECV

Check continuity between the ECV connector terminals.

ECV				Continuity
Connector	Terminal	Connector	Terminal	Continuity
F44	2	F44	3	Existed

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Replace the compressor.

[WITH 7 INCH DISPLAY]

ECU DIAGNOSIS INFORMATION


A/C AUTO AMP.

Reference Value

CONSULT DATA MONITOR REFERENCE VALUES

Monitor item	Co	ondition	Value/Status
COMP REQ SIG	Engine: Run at idle after warming up	A/C switch: ON (Compressor operation status)	On
		A/C switch: OFF	Off
FAN REQ SIG	Engine: Run at idle after	Blower motor: ON	On
TAN INEQ SIG	warming up	Blower motor: OFF	Off
AMB TEMP SEN	Ignition switch ON	_	–22 − 131°F (–30 − 55°C)
IN-VEH TEMP	Ignition switch ON	_	–22 − 131°F (–30 − 55°C)
INT TEMP SEN	Ignition switch ON	_	–22 − 131°F (–30 − 55°C)
SUNLOAD SEN	Ignition switch ON	-	0 − 1045 w/m² (0 − 900 kcal/m²·h)
AMB SEN CAL	Ignition switch ON	_	–22 − 131°F (–30 − 55°C)
IN-VEH CAL	Ignition switch ON	_	–22 − 131°F (–30 − 55°C)
INT TEMP CAL	Ignition switch ON	_	–22 − 131°F (–30 − 55°C)
SUNL SEN CAL	Ignition switch ON	_	0 − 1045 w/m² (0 − 900 kcal/m²⋅h)
FAN DUTY	Engine: Run at idle after	Blower motor: ON	25 – 81
FAIN DUTT	warming up	Blower motor: OFF	0
XM	Ignition switch ON	_	-100 - 155
ENG COOL TEMP	Ignition switch ON	_	Values depending on cool- ant temperature
VEHICLE SPEED	Driving	_	Equivalent to speedometer reading

TERMINAL LAYOUT

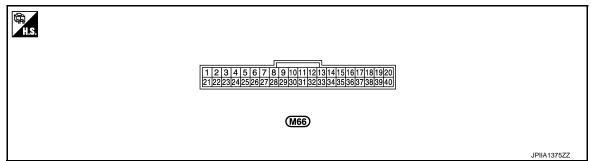

PHYSICAL VALUES

Revision: 2011 August **HAC-145** 2012 370Z

HAC

Α

В

C

D

Е

F

G

Н

J

K

M

Ν

0

Termin (Wire		Description		Condition	Value	
+	_	Signal name	Input/ Output	Condition	(Approx.)	
1 (L)	Ground	CAN - H	Input/ Output	_	_	
2 (P)	Ground	CAN - L	Input/ Output	_	_	
10 (BR)	Ground	A/C LAN signal	Input/ Output	Ignition switch ON	(V) 15 10 5 0 20 ms SJIA1453J	
11 (Y)	Ground	Each door motor power supply	_	Ignition switch ON	12 V	
15 (O)	Ground	Sunload sensor signal	Input	_	0 – 4.8 V Output voltage varies with sunload amount	
16 (R)	Ground	Intake sensor signal	Input	_	0 – 4.8 V Output voltage varies with intake temperature	
17 (L)	Ground	ACC power supply	_	Ignition switch ACC	Battery voltage	
19 (B)	Ground	Ground	_	Ignition switch ON	0 V	
20 (G)	Ground	Ignition power supply		Ignition switch ON	Battery voltage	
24 (O)	Ground	ECV signal	Output	Ignition switch ONActive test: MODE 5	(V) 15 10 5 0 	
32 (P)	Ground	Blower motor control signal	Output	Ignition switch ON Fan speed: 1st speed (manual)	(v) 6 4 2 0 	
34 (G)	Ground	A/C auto amp. connecting recognition signal	Output	Ignition switch ON	5 V	
35 (V)	Ground	Ambient sensor signal	Input	_	0 – 4.8 V Output voltage varies with ambient temperature	
36 (LG)	Ground	In-vehicle sensor signal	Input	_	0 – 4.8 V Output voltage varies with in-vehi- cle temperature	
37 (GR)	Ground	Sensor ground	_	Ignition switch ON	0 V	

A/C AUTO AMP.

< ECU DIAGNOSIS INFORMATION >

[WITH 7 INCH DISPLAY]

	Terminal No. (Wire color) Description			Condition	Value	
+	1	Signal name	Input/ Output	Condition	(Approx.)	
39 (B)	Ground	Ground	_	Ignition switch ON	0 V	
40 (Y)	Ground	Battery power supply	_	Ignition switch OFF	Battery voltage	

Α

В

С

D

Е

F

G

Н

HAC

J

Κ

L

M


Ν

0

Wiring Diagram - AUTOMATIC AIR CONDITIONING SYSTEM -

INFOID:0000000007626902

For connector terminal arrangements, harness layouts, and alphabets in a (option abbreviation; if not described in wiring diagram), refer to GI-12, "Connector Information".

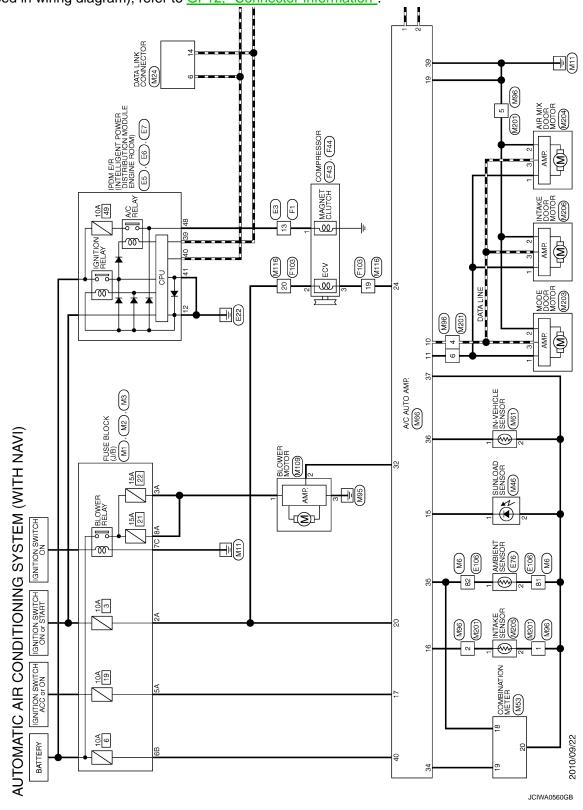

Α

В

С

D

Е


F

G

Н

HAC

J

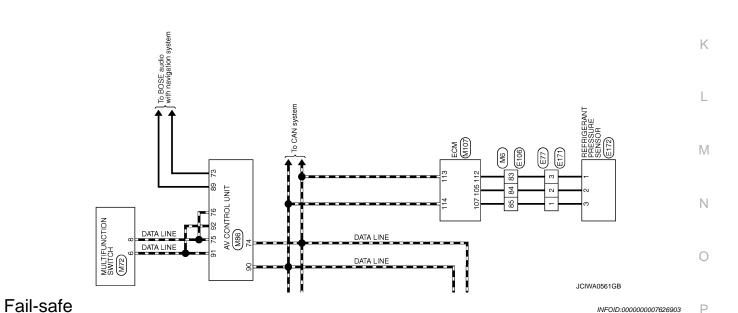

FAIL-SAFE FUNCTION

When a communication malfunction between A/C auto amp. and AV control unit and preset switch continued for approximately 30 seconds or more, control the air conditioning system under the following conditions.

Compressor : ON
Air outlet : AUTO

Air inlet : FRE (Fresh air intake)

Fan speed : AUTO

Preset temperature : Setting before communication malfunction

DTC Inspection Priority Chart

INFOID:0000000007626904

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)
1	U1000: CAN COMM CIRCUIT U1010: CONTROL UNIT (CAN)
2	 B2578: IN-VEHICLE SENSOR B2579: IN-VEHICLE SENSOR B257B: AMBIENT SENSOR B257C: AMBIENT SENSOR B2581: INTAKE SENSOR B2582: INTAKE SENSOR B2630: SUNLOAD SENSOR B2631: SUNLOAD SENSOR B2631: SUNLOAD SENSOR B2632: DR AIR MIX DOOR MOT B2633: DR AIR MIX DOOR MOT B2633: DR AIR MIX DOOR FAIL B2637: DR B/L DOOR FAIL B2638: DR D/F1 DOOR FAIL B2639: DR DFF DOOR FAIL B2630: FRE DOOR FAIL B263D: FRE DOOR FAIL B263E: 20P FRE DOOR FAIL B263F: REC DOOR FAIL B265F: REC DOOR FAIL B265F: REC DOOR FAIL B265F: B/L2 DOOR FAIL

DTC Index

DTC	Items (CONSULT screen terms)	Reference
U1000	CAN COMM CIRCUIT	HAC-113, "DTC Logic"
U1010	CONTROL UNIT (CAN)	HAC-114, "DTC Logic"
B2578	IN-VEHICLE SENSOR	HAC-118, "DTC Logic"
B2579	IN-VEHICLE SENSOR	HAC-118, "DTC Logic"
B257B	AMBIENT SENSOR	HAC-115, "DTC Logic"
B257C	AMBIENT SENSOR	HAC-115, "DTC Logic"
B2581	INTAKE SENSOR	HAC-121, "DTC Logic"
B2582	INTAKE SENSOR	HAC-121, "DTC Logic"
B2630*	SUNLOAD SENSOR	HAC-124, "DTC Logic"
B2631*	SUNLOAD SENSOR	HAC-124, "DTC Logic"
B2632	DR AIR MIX DOOR MOT	HAC-127, "DTC Logic"
B2633	DR AIR MIX DOOR MOT	HAC-127, "DTC Logic"
B2636	DR VENT DOOR FAIL	HAC-129, "DTC Logic"
B2637	DR B/L DOOR FAIL	HAC-129, "DTC Logic"
B2638	DR D/F1 DOOR FAIL	HAC-129, "DTC Logic"

A/C AUTO AMP.

< ECU DIAGNOSIS INFORMATION >

[WITH 7 INCH DISPLAY]

DTC	Items (CONSULT screen terms)	Reference
B2639	DR DEF DOOR FAIL	HAC-129, "DTC Logic"
B263D	FRE DOOR FAIL	HAC-131, "DTC Logic"
B263E	20P FRE DOOR FAIL	HAC-131, "DTC Logic"
B263F	REC DOOR FAIL	HAC-131, "DTC Logic"
B2654	D/F2 DOOR FAIL	HAC-129, "DTC Logic"
B2655	B/L2 DOOR FAIL	HAC-129, "DTC Logic"

^{*:} Perform self-diagnosis under sunshine. When performing indoors, aim a light (more than 60 W) at sunload sensor, otherwise self-diagnosis indicates even though the sunload sensor is functioning normally.

NOTE

If all of door motors DTC (B2632, B2633, B2636, B2637, B2638, B2639, B263D, B263E, B263F, B2654 and B2655) are detected, check door motor communication circuit. Refer to <a href="https://example.com/hac-nature

HAC

Н

Α

В

C

D

Е

F

Ν./

Ν

SYMPTOM DIAGNOSIS

AUTOMATIC AIR CONDITIONING SYSTEM

Diagnosis Chart By Symptom

INFOID:0000000007626906

Symptom	Check item	Reference
A/C system does not activate.	Power supply and ground circuit	HAC-133, "A/C AUTO AMP. : Diagnosis Procedure"
A/C system cannot be controlled.	A/C auto amp.	HAC-136, "Diagnosis Procedure"
Air outlet does not change. Mode door motor does not operate normally.	Mode door motor	HAC-130, "Diagnosis Procedure"
 Discharge air temperature does not change. The air mix door motor does not operate normally. 	Air mix door motor	HAC-128, "Diagnosis Procedure"
Intake door does not change. Intake door motor does not operate normally.	Intake door motor	HAC-132, "Diagnosis Procedure"
Blower motor operation is malfunctioning.	Blower motor	HAC-137, "Diagnosis Procedure"
Magnet clutch does not operate.	Magnet clutch	HAC-141, "Diagnosis Procedure"
Insufficient cooling	ECV	HAC-143, "Diagnosis Procedure"
 No cool air comes out. (Air flow volume is normal.) 	Insufficient cooling	HAC-153, "Diagnosis Procedure"
Insufficient heating No warm air comes out. (Air flow volume is normal.)	Insufficient heating	HAC-155, "Diagnosis Procedure"
Noise Noise is heard when the A/C system operates.	Noise	HAC-158, "Diagnosis Procedure"
 Memory function does not operate normally. The setting is not maintained. (It returns to the initial condition) 	Memory function	HAC-160, "Diagnosis Procedure"

INFOID:0000000007626908

INSUFFICIENT COOLING

Description

Symptom

- Insufficient cooling
- No cool air comes out. (Air flow volume is normal.)

Diagnosis Procedure

1. CHECK MAGNET CLUTCH OPERATION

- 1. Turn the ignition switch ON.
- Turn the fan control dial ON.
- 3. Press the A/C switch.
- 4. Check that the indicator of the A/C switch turns ON. Check visually and by sound that the compressor operates.
- 5. Press the A/C switch again.
- 6. Check that the indicator of the A/C switch turns OFF. Check that the compressor stops.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Magnet clutch system malfunction. Refer to <u>HAC-141</u>, "Diagnosis Procedure".

2.CHECK DRIVE BELT

Check tension of the drive belt. Refer to <a>EM-17, "Checking".

Is the inspection result normal?

YES >> GO TO 3.

NO >> Adjust or replace drive belt depending on the inspection results.

3. CHECK REFRIGERANT CYCLE PRESSURE

Connect the recovery/recycling recharging equipment to the vehicle and perform the pressure inspection with the gauge. Refer to HA-7, "Symptom Table".

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair or replace the parts depending on the inspection results.

4. CHECK PERFORMANCE CHART

Connect recovery/recycling recharging equipment to the vehicle and perform the performance test. Refer to HA-34, "Inspection".

Is the inspection result normal?

YES >> GO TO 5.

NO >> GO TO 7.

5. CHECK AMBIENT TEMPERATURE DISPLAY

Check that there is not much difference between actual ambient temperature and indicated temperature on information display in combination meter.

Is the inspection result normal?

YES >> GO TO 6.

NO >> Perform the diagnosis for the A/C auto amp. connection recognition signal. Refer to MWI-56. "Diagnosis Procedure".

6.CHECK SETTING OF TEMPERATURE SETTING TRIMMER

With CONSULT

- 1. Select "TEMP SET CORRECT" of HVAC work support item. Refer to HAC-94, "Temperature Setting Trimmer".
- Check that the temperature setting trimmer is set to "+ direction".

NOTE:

The control temperature can be set with the setting of the temperature setting trimmer.

HAC

K

M

Ν

Р

Н

Α

В

D

Е

F

Revision: 2011 August **HAC-153** 2012 370Z

INSUFFICIENT COOLING

< SYMPTOM DIAGNOSIS >

[WITH 7 INCH DISPLAY]

3. Set the difference between the set temperature and control temperature to "0".

>> INSPECTION END

7. CHECK CHARGED REFRIGERANT AMOUNT

- 1. Connect recovery/recycling recharging equipment to the vehicle and discharge the refrigerant.
- 2. Recharge with the proper amount of refrigerant.

Are the symptoms solved?

YES >> INSPECTION END

NO >> Refer to <u>HAC-152</u>, "<u>Diagnosis Chart By Symptom</u>" and perform the appropriate diagnosis.

INSUFFICIENT HEATING [WITH 7 INCH DISPLAY] < SYMPTOM DIAGNOSIS > INSUFFICIENT HEATING Α Description INFOID:0000000007626909 В Symptom Insufficient heating No warm air comes out. (Air flow volume is normal.) Diagnosis Procedure INFOID:0000000007626910 CHECK COOLING SYSTEM Check the engine coolant level and check for leakage. Refer to CO-11, "Inspection". Check radiator cap. Refer to CO-15, "RESERVOIR TANK CAP: Inspection". Check water flow sounds of the engine coolant. Refer to CO-12, "Refilling". Е Is the inspection result normal? YES >> GO TO 2. NO >> Refill the engine coolant and repair or replace the parts depending on the inspection results. 2.CHECK OPERATION Turn temperature dial and raise temperature setting to 32.0°C (90°F) after warming up the engine. Check that warm air blows from the outlets. Is the inspection result normal? YES >> INSPECTION END Н NO >> GO TO 3. 3.CHECK SETTING OF TEMPERATURE SETTING TRIMMER With CONSULT HAC Select "TEMP SET CORRECT" of HVAC work support item. Refer to HAC-94, "Temperature Setting Trim-Check that the temperature setting trimmer is set to "- direction". The control temperature can be set by the temperature setting trimmer. Set the difference between the set temperature and control temperature to "0". Are the symptoms solved? >> INSPECTION END YES NO >> GO TO 4. 4. CHECK SELF-DIAGNOSIS RESULT CHECK With CONSULT Perform the "SELF-DIAGNOSIS".

2. Check if any DTC is detected in the self-diagnostic results.

NOTE:

If DTC is displayed along with DTC "U1000" or "U1010", first diagnose the DTC "U1000" or "U1010". Refer to HAC-114, "DTC Logic" or HAC-114, "DTC Logic".

Ν

Is any DTC displayed?

YES >> Perform the diagnosis that is applicable to the sensor and the door motor. Refer to <u>HAC-150</u>, "DTC Index".

NO >> GO TO 5.

CHECK EACH OUTPUT DEVICE

(P)With CONSULT

Select "HVAC TEST" of HVAC active test item. Refer to <u>HAC-111, "CONSULT Function"</u>.

NOTE:

Perform the ACTIVE TEST after starting the engine because the compressor is operated.

Refer to the table and check the outlet, inlet, air flow temperature, blower motor control signal, magnet clutch operation, and air mix ratio. Visually check each operating condition, by listening for noise, touching air outlets with a hand, etc.

Revision: 2011 August **HAC-155** 2012 370Z

	Test item						
	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5	MODE 6	MODE 7
Mode door position	VENT	B/L 1	B/L 2	FOOT	D/F	DEF	_
Intake door position	REC	REC	20% FRE	FRE	FRE	FRE	_
Air mix door position	FULL COLD	FULL COLD	FULL HOT	FULL HOT	FULL HOT	FULL HOT	_
Blower fan motor control sig- nal duty ratio	37%	91%	65%	65%	65%	91%	_
Magnet clutch	ON	ON	OFF	OFF	ON	ON	_
ECV duty ratio	100%	100%	0%	0%	50%	100%	_

NOTE:

- · Perform the inspection of each output device after starting the engine because the compressor is operated.
- If the MODE 7 is selected, the malfunction is displayed but it is normal.

Discharge air flow				
Made position indication	Air outlet/distribution			
Mode position indication	VENT	FOOT	DEF	
*;	100%	_	_	
IJ	60%	40%	_	
· i	12%	62%	26%	
\$1	10%	52%	38%	
*	_	_	100%	

Does it operate normally?

YES >> GO TO 6.

NO-1 >> Air outlet does not change. Refer to <u>HAC-130</u>, "<u>Diagnosis Procedure</u>".

NO-2 >> Air inlet does not change. Refer to <u>HAC-132</u>, "<u>Diagnosis Procedure</u>".

NO-3 >> Discharge air temperature does not change. Refer to <u>HAC-128</u>, "<u>Diagnosis Procedure</u>".

NO-4 >> Blower motor does not operate normally. Refer to HAC-137, "Diagnosis Procedure".

NO-5 >> Magnet clutch does not operate. Refer to <u>HAC-141</u>, "Diagnosis <u>Procedure"</u>.

6.CHECK AIR LEAKAGE FROM DUCT

Check duct and nozzle, etc. of the air conditioning system for air leakage.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair or replace parts depending on the inspection results.

.CHECK HEATER HOSE INSTALLATION CONDITION

Check the heater hose installation condition visually (for twists, crushes, etc.).

Is the inspection result normal?

YES >> GO TO 8.

NO >> Repair or replace parts depending on the inspection results.

8.CHECK TEMPERATURE OF HEATER HOSE

- 1. Check the temperature of inlet hose and outlet hose of heater core.
- 2. Check that the inlet side of heater core is hot and the outlet side is slightly lower than/almost equal to the inlet side.

CAUTION:

Always perform the temperature inspection in a short period of time because the engine coolant temperature is very hot.

Is the inspection result normal?

YES >> GO TO 9.

INSUFFICIENT HEATING

< SYMPTOM DIAGNOSIS >

[WITH 7 INCH DISPLAY]

NO >> Replace the heater core after performing the procedures after the cooling system inspection. GO TO 1.

9. REPLACE HEATER CORE

Replace the heater core. Refer to HA-48, "Exploded View".

Are symptoms solved?

YES >> INSPECTION END

NO >> Perform the procedures again after the cooling system inspection. GO TO 1.

Α

В

D

C

Е

F

Н

G

HAC

K

L

M

Ν

0

[WITH 7 INCH DISPLAY]

NOISE

Description INFOID:0000000007626911

Symptom

- Noise
- Noise is heard when the A/C system operates.

Diagnosis Procedure

INFOID:0000000007626912

1. CHECK OPERATION

- 1. Operate the A/C system and check the operation. Refer to HAC-93, "Description & Inspection".
- 2. Check the parts where noise is occurring.

Can the parts where noise is occurring be checked?

- YES-1 >> Noise from blower motor: GO TO 2.
- YES-2 >> Noise from compressor: GO TO 3.
- YES-3 >> Noise from expansion valve: GO TO 4.
- YES-4 >> Noise from cooler piping (pipe, flexible hose): GO TO 6.
- YES-5 >> Noise from drive belt: GO TO 7.
- NO >> INSPECTION END

2.CHECK BLOWER MOTOR

- Remove blower motor.
- 2. Remove foreign materials that are in the blower unit.
- Check the noise from blower motor again.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace blower motor.

3. CHECK COMPRESSOR

Perform trouble diagnosis for the compressor and check the compressor. Refer to <u>HA-9</u>. "Symptom Table".

Is the inspection result normal?

YES >> INSPECTION END

NO >> Refill the refrigerant or replace the compressor depending on the inspection results.

4. CHECK WITH GAUGE PRESSURE

Perform the diagnosis with the gauge pressure. Refer to HA-7, "Trouble Diagnosis For Unusual Pressure".

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair or replace parts depending on the inspection results.

5. CHECK EXPANSION VALVE

- 1. Correct the refrigerant with recovery/recycling recharging equipment.
- Recharge with the proper amount of the collected refrigerant after recycling or new refrigerant.
- Check for the noise from expansion valve again.

Are the malfunction solved?

YES >> INSPECTION END

NO >> Replace expansion valve.

6.CHECK COOLER PIPING (PIPE, FLEXIBLE HOSE)

- 1. Check the cooler piping (pipes, flexible hoses) (for deformation and damage, etc.).
- 2. Check the installation condition of clips and brackets, etc. of the cooler piping (pipes, flexible hoses).

Is the inspection result normal?

- YES >> Fix the line with rubber or come vibration absorbing material.
- NO >> Repair or replace parts depending on the inspection results.

7.CHECK DRIVE BELT

NOISE

Check tension of the drive belt. Refer to EM-17, "Checking".

Is the inspection result normal?

YES

>> Check the noise from the compressor: GO TO 3. >> Adjust or replace drive belt depending on the inspection results. NO

Α

В

С

D

Е

F

G

Н

HAC

J

K

L

M

Ν

0

MEMORY FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[WITH 7 INCH DISPLAY]

MEMORY FUNCTION DOES NOT OPERATE

Description INFOID:000000007626913

Symptom

- Memory function does not operate normally.
- The setting is not maintained. (It returns to the initial condition.)

Diagnosis Procedure

INFOID:0000000007626914

1. CHECK OPERATION

- 1. Turn the ignition switch ON.
- 2. Set temperature control dial to 32.0°C (90°F).
- 3. Press the OFF switch.
- 4. Turn the ignition switch OFF.
- 5. Turn the ignition switch ON.
- 6. Press the AUTO switch.
- 7. Check that the set temperature is maintained.

Is the inspection result normal?

YES >> INSPECTION END

NO >> GO TO 2.

2.CHECK POWER SUPPLY AND GROUND CIRCUIT OF A/C AUTO AMP.

Check power supply and ground circuit of the A/C auto amp. Refer to <u>HAC-133, "A/C AUTO AMP. : Diagnosis Procedure"</u>.

Is the inspection result normal?

YES >> Replace the A/C auto amp.

NO >> Repair or replace malfunctioning parts.

[WITH 7 INCH DISPLAY] < PRECAUTION >

PRECAUTION

PRECAUTIONS EXCEPT FOR MEXICO

EXCEPT FOR MEXICO: Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER" INFOID:0000000007626915

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

EXCEPT FOR MEXICO: Precautions Necessary for Steering Wheel Rotation After **Battery Disconnection** INFOID:0000000007626916

CAUTION:

Comply with the following cautions to prevent any error and malfunction.

- Before removing and installing any control units, first turn the ignition switch to the LOCK position, then disconnect both battery cables.
- · After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

For vehicle with steering lock unit, if the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the operation procedure below before starting the repair operation.

OPERATION PROCEDURE

Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

Turn the ignition switch to ACC position. (At this time, the steering lock will be released.) HAC

Α

Е

< PRECAUTION > [WITH 7 INCH DISPLAY]

3. Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.

- 4. Perform the necessary repair operation.
- 5. When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the ignition switch is turned to LOCK position.)
- Perform self-diagnosis check of all control units using CONSULT.

EXCEPT FOR MEXICO: Precaution for Battery Service

INFOID:0000000007626917

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

FOR MEXICO

FOR MEXICO: Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the
 ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with
 a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing
 serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR MEXICO: Precautions Necessary for Steering Wheel Rotation After Battery Disconnection

CAUTION:

Comply with the following cautions to prevent any error and malfunction.

- Before removing and installing any control units, first turn the ignition switch to the LOCK position, then disconnect both battery cables.
- After finishing work, confirm that all control unit connectors are connected properly, then re-connect both battery cables.
- Always use CONSULT to perform self-diagnosis as a part of each function inspection after finishing work. If a DTC is detected, perform trouble diagnosis according to self-diagnosis results.

For vehicle with steering lock unit, if the battery is disconnected or discharged, the steering wheel will lock and cannot be turned.

If turning the steering wheel is required with the battery disconnected or discharged, follow the operation procedure below before starting the repair operation.

PRECAUTIONS

[WITH 7 INCH DISPLAY] < PRECAUTION >

OPERATION PROCEDURE

Connect both battery cables.

NOTE:

Supply power using jumper cables if battery is discharged.

- 2. Turn the ignition switch to ACC position. (At this time, the steering lock will be released.)
- Disconnect both battery cables. The steering lock will remain released with both battery cables disconnected and the steering wheel can be turned.
- Perform the necessary repair operation.
- When the repair work is completed, re-connect both battery cables. With the brake pedal released, turn the ignition switch from ACC position to ON position, then to LOCK position. (The steering wheel will lock when the ignition switch is turned to LOCK position.)
- 6. Perform self-diagnosis check of all control units using CONSULT.

FOR MEXICO: Precaution for Battery Service

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

HAC

HAC-163 Revision: 2011 August 2012 370Z

Α

В

C

D

Е

INFOID:0000000007626920

F

Н

K

L


Ν

REMOVAL AND INSTALLATION

PRESET SWITCH

Exploded View

DISASSEMBLY

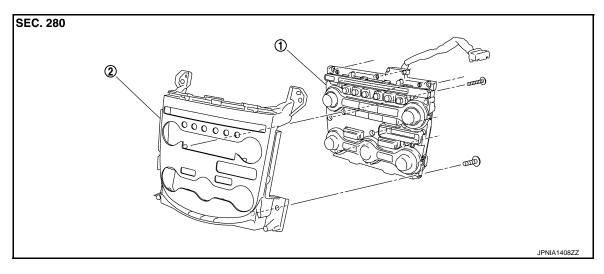

1. Preset switch

2. Cluster lid C

Removal and Installation

INFOID:0000000007626922

REMOVAL

Remove preset switch. Refer to AV-253, "Exploded View".

INSTALLATION

Install in the reverse order of removal.

[WITH 7 INCH DISPLAY]

A/C AUTO AMP.

Exploded View

INFOID:0000000007626923

Α

В


D

Е

Н

HAC

DISASSEMBLY

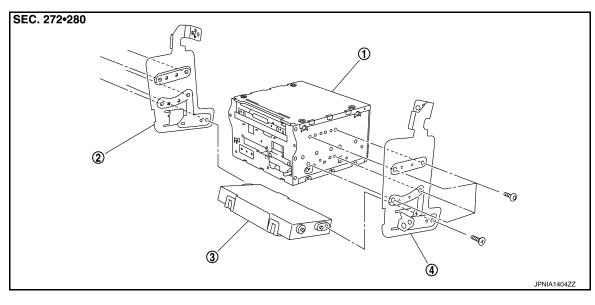

1. AV control unit

Bracket LH

3. A/C auto amp.


4. Bracket RH

Removal and Installation

INFOID:0000000007626924

REMOVAL

- 1. Remove AV control unit. Refer to AV-240, "Exploded View".
- 2. Remove fixing screws (A), and then remove A/C auto amp. (1).

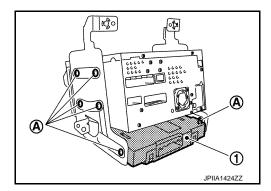

INSTALLATION

Install in the reverse order of removal.

N


M

0

AMBIENT SENSOR

Exploded View

1. Ambient sensor

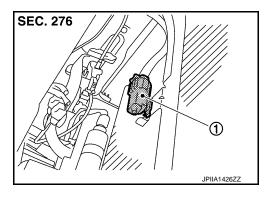


Removal and Installation

INFOID:0000000007626926

REMOVAL

- 1. Remove engine under cover. Refer to EXT-29, "ENGINE UNDER COVER: Exploded View".
- 2. Disconnect ambient sensor connector, and then remove ambient sensor (1) from bracket.

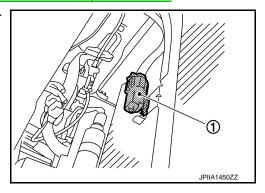


INSTALLATION

Install in the reverse order of removal.

[WITH 7 INCH DISPLAY]

IN-VEHICLE SENSOR

Exploded View

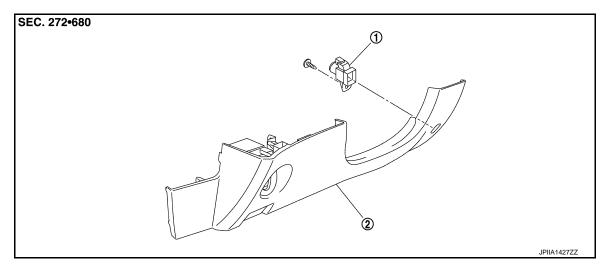

1. In-vehicle sensor


2. Instrument lower panel LH

Removal and Installation

INFOID:0000000007626928

REMOVAL

- 1. Remove instrument lower panel LH. Refer to IP-14, "Exploded View".
- 2. Remove fixing screw (A), and then remove in-vehicle sensor (1).

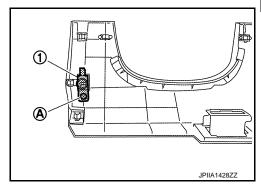

INSTALLATION

Install in the reverse order of removal.

HAC

Н

Α

В

D

Е

K

L

Ν


M

0

SUNLOAD SENSOR

Exploded View

1. Sunload sensor

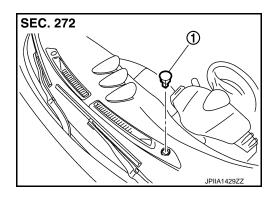

Removal and Installation

INFOID:0000000007626930

REMOVAL

Disconnect sunload sensor connector, and then remove sunload sensor.

INSTALLATION

Install in the reverse order of removal.

Α

В

D

Е

Н

HAC


M

Ν

INFOID:0000000007626932

INTAKE SENSOR

Exploded View INFOID:0000000007626931

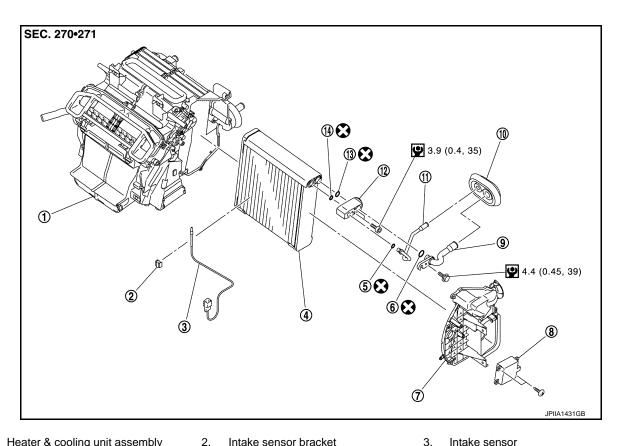

- 1. Heater & cooling unit assembly
- 4. Evaporator
- Evaporator cover 7.
- 10. Cooler pipe grommet
- 13. O-ring

REMOVAL


- 2. Intake sensor bracket
- 5. O-ring
- Air mix door motor
- High-pressure evaporator pipe 11.
- Refer to GI-4, "Components" for symbols in the figure.

- Intake sensor
- 6. O-ring
- 9. Low-pressure evaporator pipe
- 12. Expansion valve

Removal and Installation

1. Remove high-pressure evaporator pipe and low-pressure evaporator pipe. Refer to HA-53, "Exploded View".

- Disconnect intake sensor connector.
- Slide evaporator (1) toward the right side of the vehicle (as shown in the figure), and then remove intake sensor (2).

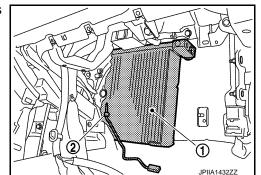

INSTALLATION

Note the following items, and then install in the reverse order of removal.

INTAKE SENSOR

< REMOVAL AND INSTALLATION >


[WITH 7 INCH DISPLAY]

CAUTION:

- Replace O-rings with new ones. Then apply the compressor oil to them when installing.
- Mark the mounting position of intake sensor bracket prior to removal so that the reinstalled sensor can be located in the same position.
- Never rotate the bracket insertion part when removing and installing the intake sensor.
- Check for leakages when recharging refrigerant. Refer to HA-26, "Leak Test".

REFRIGERANT PRESSURE SENSOR

Exploded View INFOID:0000000007626933

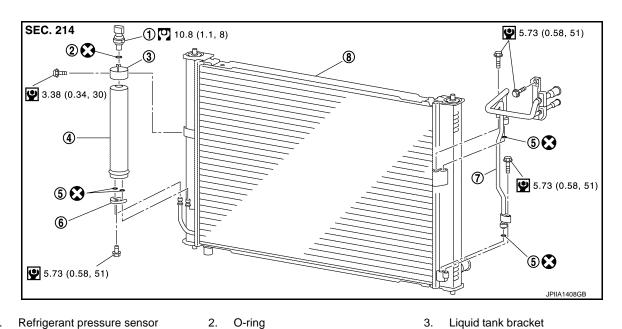

- Refrigerant pressure sensor
- O-ring
- O-ring
- Condenser pipe assembly

Liquid tank

4.

Radiator & condenser assembly

Bracket

3.

Refer to GI-4, "Components" for symbols in the figure.

Removal and Installation


REMOVAL

Remove liquid tank. Refer to HA-44, "Exploded View".

Fix the liquid tank (1) using a vise (A). Remove the refrigerant pressure sensor (2) using a wrench (B).

CAUTION:

Be careful not to damage liquid tank.

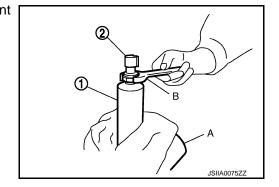

INSTALLATION

Note the following items, and then install in the reverse order of removal.

- Replace O-ring with new one. Then apply compressor oil to them when installing.
- Check for leakages when recharging refrigerant. Refer to HA-26, "Leak Test".

HAC

J

K

M

Р

INFOID:0000000007626934

Н

Α

В

D


Е

F

2012 370Z

DOOR MOTOR

Exploded View

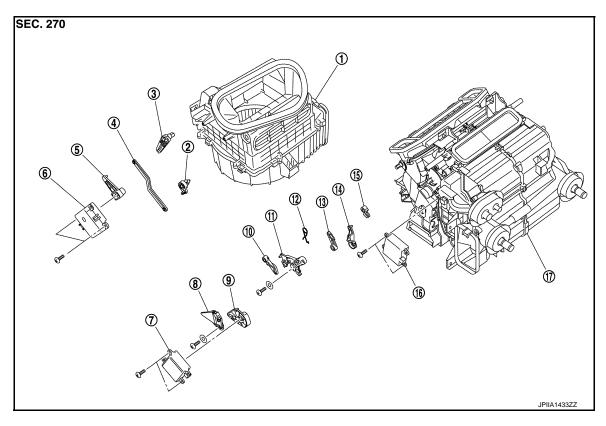

- Bower unit assembly
- 4. Intake door link
- 7. Mode door motor
- 10. Ventilator door lever
- 13. Max. cool door lever
- 16. Air mix door motor

- 2. Intake door lever 3
- 5. Intake door lever 2
- 8. Ventilator door link
- 11. Main link sub
- 14. Defroster door link
- 17. Heater & cooling unit assembly
- 3. Intake door lever 1
- 6. Intake door motor
- 9. Main link
- 12. Ventilator door lever spring
- 15. Defroster door lever


INTAKE DOOR MOTOR

INTAKE DOOR MOTOR: Removal and Installation

INFOID:0000000007626936

REMOVAL

- 1. Remove instrument lower panel RH. Refer to IP-14, "Exploded View".
- 2. Remove ECM.
- 3. Disconnect intake door motor connector.
- 4. Remove fixing screws (A), and then remove intake door motor (1).

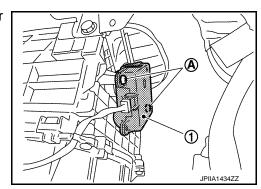

[WITH 7 INCH DISPLAY]

INSTALLATION

Install in the reverse order of removal.

MODE DOOR MOTOR

MODE DOOR MOTOR: Removal and Installation

INFOID:0000000007626937

Α


D

Е

F

REMOVAL

- 1. Remove blower unit assembly. Refer to VTL-11, "Exploded View".
- 2. Disconnect mode door motor connector.
- 3. Remove fixing screws (A), and then remove mode door motor (1).

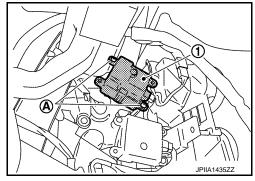

INSTALLATION

Install in the reverse order of removal.

AIR MIX DOOR MOTOR

AIR MIX DOOR MOTOR: Removal and Installation

INFOID:0000000007626938


REMOVAL

1. Set the temperature at full cold.

CAUTION:

The angle may be out, when installing the air mix door motor to the air mix door, unless the above procedure is performed.

- 2. Disconnect the battery cable from the negative terminal.
- 3. Remove instrument lower panel RH. Refer to IP-14, "Exploded View".
- 4. Disconnect air mix door motor connector.
- 5. Remove fixing screws (A), and then remove air mix door motor (1).

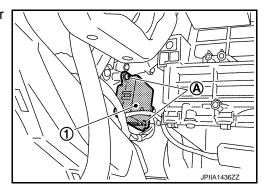

INSTALLATION

Install in the reverse order of removal.

HAC

Н

J

L

K

M

Ν

 \cap

Ρ