

SECTION **BCS**

BODY CONTROL SYSTEM

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CONTENTS

| | | |
|---|---|----|
| BASIC INSPECTION | COMMON ITEM | |
| INSPECTION AND ADJUSTMENT | COMMON ITEM : CONSULT Function (BCM - COMMON ITEM) | 20 |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) | DOOR LOCK | 21 |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Description | DOOR LOCK : CONSULT Function (BCM - DOOR LOCK) (For Coupe) | 21 |
| ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Work Procedure | DOOR LOCK : CONSULT Function (BCM - DOOR LOCK) (For Roadster) | 23 |
| CONFIGURATION (BCM) | REAR WINDOW DEFOGGER | 24 |
| CONFIGURATION (BCM) : Description | REAR WINDOW DEFOGGER : CONSULT Function (BCM - REAR DEFOGGER) | 24 |
| CONFIGURATION (BCM) : Work Procedure | BUZZER | 24 |
| CONFIGURATION (BCM) : Configuration list | BUZZER : CONSULT Function (BCM - BUZZER)..... | 24 |
| TRANSIT MODE CANCEL OPERATION | INT LAMP | 25 |
| Description | INT LAMP : CONSULT Function (BCM - INT LAMP) (Coupe Models) | 25 |
| Work Procedure | INT LAMP : CONSULT Function (BCM - INT LAMP) (Roadster Models) | 27 |
| SYSTEM DESCRIPTION | HEADLAMP | 29 |
| BODY CONTROL SYSTEM | HEADLAMP : CONSULT Function (BCM - HEAD LAMP) | 29 |
| System Description | WIPER | 31 |
| Component Parts Location | WIPER : CONSULT Function (BCM - WIPER) | 31 |
| COMBINATION SWITCH READING SYSTEM | FLASHER | 32 |
| System Diagram | FLASHER : CONSULT Function (BCM - FLASHER) | 32 |
| System Description | COMB SW | 33 |
| SIGNAL BUFFER SYSTEM | COMB SW : CONSULT Function (BCM - COMB SW) | 33 |
| System Diagram | INTELLIGENT KEY | 33 |
| System Description | INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY) (For Coupe) | 33 |
| POWER CONSUMPTION CONTROL SYSTEM | INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY) (For Roadster) | 37 |
| System Diagram | | |
| System Description | | |
| Component Parts Location | | |
| DIAGNOSIS SYSTEM (BCM) | | |

BCS

| | | | |
|--|-----------|---|-----------|
| BCM | 40 | POWER SUPPLY AND GROUND CIRCUIT | 53 |
| BCM : CONSULT Function (BCM - BCM) | 40 | Diagnosis Procedure | 53 |
| IMMU | 40 | COMBINATION SWITCH INPUT CIRCUIT | 54 |
| IMMU : CONSULT Function (BCM - IMMU) | 41 | Diagnosis Procedure | 54 |
| BATTERY SAVER | 41 | COMBINATION SWITCH OUTPUT CIRCUIT ... | 56 |
| BATTERY SAVER : CONSULT Function (BCM - | | Diagnosis Procedure | 56 |
| BATTERY SAVER) (Coupe Models) | 41 | ECU DIAGNOSIS INFORMATION | 58 |
| BATTERY SAVER : CONSULT Function (BCM - | | BCM (BODY CONTROL MODULE) | 58 |
| BATTERY SAVER) (Roadster Models) | 42 | Reference Value | 58 |
| TRUNK | 44 | Wiring Diagram - BCM - | 82 |
| TRUNK : CONSULT Function (BCM - TRUNK) | | Fail-safe | 86 |
| (For Coupe) | 44 | DTC Inspection Priority Chart | 87 |
| TRUNK : CONSULT Function (BCM - TRUNK) | | DTC Index | 88 |
| (For Roadster) | 44 | SYMPTOM DIAGNOSIS | 91 |
| THEFT ALM | 45 | COMBINATION SWITCH SYSTEM SYMP- | |
| THEFT ALM : CONSULT Function (BCM - | | TOMS | 91 |
| THEFT) | 45 | Symptom Table | 91 |
| RETAINED PWR | 46 | NORMAL OPERATING CONDITION | 92 |
| RETAINED PWR : CONSULT Function (BCM - | | Description | 92 |
| RETAINED PWR) | 46 | PRECAUTION | 93 |
| SIGNAL BUFFER | 46 | PRECAUTIONS | 93 |
| SIGNAL BUFFER : CONSULT Function (BCM - | | EXCEPT FOR MEXICO | 93 |
| SIGNAL BUFFER) | 46 | EXCEPT FOR MEXICO : Precaution for Supple- | |
| AIR PRESSURE MONITOR | 47 | mental Restraint System (SRS) "AIR BAG" and | |
| AIR PRESSURE MONITOR : CONSULT Function | | "SEAT BELT PRE-TENSIONER" | 93 |
| | 47 | EXCEPT FOR MEXICO : Precaution for Battery | |
| DTC/CIRCUIT DIAGNOSIS | 49 | Service | 93 |
| U1000 CAN COMM | 49 | FOR MEXICO | 93 |
| Description | 49 | FOR MEXICO : Precaution for Supplemental Re- | |
| DTC Logic | 49 | straint System (SRS) "AIR BAG" and "SEAT BELT | |
| Diagnosis Procedure | 49 | PRE-TENSIONER" | 93 |
| U1010 CONTROL UNIT (CAN) | 50 | FOR MEXICO : Precaution for Battery Service | 94 |
| DTC Logic | 50 | REMOVAL AND INSTALLATION | 95 |
| Diagnosis Procedure | 50 | BCM (BODY CONTROL MODULE) | 95 |
| U0415 VEHICLE SPEED SIG | 51 | Exploded View | 95 |
| Description | 51 | Removal and Installation | 95 |
| DTC Logic | 51 | COMBINATION SWITCH | 96 |
| Diagnosis Procedure | 51 | Exploded View | 96 |
| B2562 LOW VOLTAGE | 52 | Removal and Installation | 96 |
| DTC Logic | 52 | | |
| Diagnosis Procedure | 52 | | |

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

BASIC INSPECTION

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM)

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Description

INFOID:000000008196544

BEFORE REPLACEMENT

When replacing BCM, save or print current vehicle specification with CONSULT configuration before replacement.

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

AFTER REPLACEMENT

CAUTION:

When replacing BCM, always perform "WRITE CONFIGURATION" with CONSULT. Or not doing so, BCM control function does not operate normally.

- Complete the procedure of "WRITE CONFIGURATION" in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.

NOTE:

When replacing BCM, perform the system initialization (NATS) (if equipped).

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT (BCM) : Work Procedure

INFOID:000000008196545

1. SAVING VEHICLE SPECIFICATION

CONSULT Configuration

Perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-4, "CONFIGURATION \(BCM\) : Description"](#).

NOTE:

If "READ CONFIGURATION" can not be used, use the "WRITE CONFIGURATION - Manual selection" after replacing BCM.

>> GO TO 2.

2. REPLACE BCM

Replace BCM. Refer to [BCS-95, "Removal and Installation"](#).

>> GO TO 3.

3. WRITING VEHICLE SPECIFICATION

CONSULT Configuration

Perform "WRITE CONFIGURATION - Config file" or "WRITE CONFIGURATION - Manual selection" to write vehicle specification. Refer to [BCS-4, "CONFIGURATION \(BCM\) : Work Procedure"](#).

>> GO TO 4.

4. INITIALIZE BCM (NATS) (IF EQUIPPED)

Perform BCM initialization. (NATS)

>> WORK END

CONFIGURATION (BCM)

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

CONFIGURATION (BCM) : Description

INFOID:000000008196546

Vehicle specification needs to be written with CONSULT because it is not written after replacing BCM. Configuration has three functions as follows.

| Function | Description |
|--|---|
| READ CONFIGURATION | <ul style="list-style-type: none">• Reads the vehicle configuration of current BCM.• Saves the read vehicle configuration. |
| WRITE CONFIGURATION - Manual selection | Writes the vehicle configuration with manual selection. |
| WRITE CONFIGURATION - Config file | Writes the vehicle configuration with saved data. |

NOTE:

Manual setting item: Items which need selection by vehicle specifications

Automatic setting item: Items which are written in automatically (Setting can not be changed)

For some models and specifications, the automatic setting item may not be displayed.

CAUTION:

When replacing BCM, always perform "WRITE CONFIGURATION" with CONSULT. Or not doing so, BCM control function does not operate normally.

- Complete the procedure of "WRITE CONFIGURATION" in order.
- Configuration is different for each vehicle model. Confirm configuration of each vehicle model.
- Never perform "WRITE CONFIGURATION" except for new BCM.
- If you set incorrect "WRITE CONFIGURATION", incidents might occur.

CONFIGURATION (BCM) : Work Procedure

INFOID:000000008196547

1. WRITING MODE SELECTION

 CONSULT Configuration

Select "CONFIGURATION" of BCM.

When writing saved data >> GO TO 2.

When writing manually >> GO TO 3.

2. PERFORM "WRITE CONFIGURATION - CONFIG FILE"

 CONSULT Configuration

Perform "WRITE CONFIGURATION - Config file".

>> WORK END

3. PERFORM "WRITE CONFIGURATION - MANUAL SELECTION"

 CONSULT Configuration

1. Select "WRITE CONFIGURATION - Manual selection".
2. Identify the correct model and configuration list. Refer to [BCS-5, "CONFIGURATION \(BCM\) : Configuration list"](#).
3. Confirm and/or change setting value for each item.

CAUTION:

Thoroughly read and understand the vehicle specification. ECU control may not operate normally if the setting is not correct.

NOTE:

If items are not displayed, touch "SETTING". Refer to [BCS-5, "CONFIGURATION \(BCM\) : Configuration list"](#) for written items and setting value.

4. Select "SETTING".

CAUTION:

Make sure to select "SETTING" even if the indicated configuration of brand new BCM is same as the desirable configuration. If not, configuration which is set automatically by selecting vehicle model can not be memorized.

5. When "COMMAND FINISHED", select "END".

>> GO TO 4.

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

4. OPERATION CHECK

Confirm that each function controlled by BCM operates normally.

>> WORK END

CONFIGURATION (BCM) : Configuration list

INFOID:000000008196548

CAUTION:

Thoroughly read and understand the vehicle specification. ECU control may not operate normally if the setting is not correct.

COUPE MODELS EXCEPT FOR MEXICO

| MANUAL SETTING ITEM | | NOTE |
|---------------------|---------------------------|---|
| Items | Setting value | |
| AV C/U | WITH ⇔ WITHOUT | — |
| TRANSMISSION | AT with ABS ⇔ MT with ABS | — |
| ASCD CANCEL SW TYPE | MODE1 ⇔ MODE2 | <ul style="list-style-type: none"> • MODE1: M/T models with SynchroRev Match mode • MODE2: Except M/T models with SynchroRev Match mode |

⇔: Items which confirm vehicle specifications

| AUTO SETTING ITEM | | NOTE |
|--------------------------|---------------|---|
| Items | Setting value | |
| SELECTIVE UNLOCK SETTING | WITHOUT | — |
| SELECTIVE UNLOCK WS | WITH | — |
| UNLOCK WITH SHOCK | WITHOUT | — |
| AUTO DOOR LOCK SPEED | MODE2 | — |
| P/W UP/DOWN | MODE1 | — |
| P-POS WARN | MODE1 | — |
| ROOF FUNCTION | W/O REQ SW | — |
| BATTERY SAVER FUNCTION | MODE1 | — |
| AUTO BACK DOOR | WITHOUT | — |
| Trunk/Glass Hatch select | Glass Hatch | "Glass Hatch" is indicated also for vehicles without a glass hatch. |
| PANIC ALM TYPE | MODE1 | — |
| TRANSIT MODE | WITH | — |
| RAP FUNC SET | MODE1 | — |
| TR OPEN SW (INT) | MODE1 | — |
| HANDLE | LHD | — |
| DI LMP VARIAT | MODE2 | — |
| LIGHT RECOG | MODE7 | — |
| RAIN SENSOR CONFIG | WITHOUT | — |
| REAR WIPER | WITHOUT | — |
| THEFT ALM AREA | MODE2 | — |
| H/L WASHER | MODE1 | — |
| HAZARD SW TYPE | MODE1 | — |
| TR CANCEL SW | WITHOUT | — |
| BCM AC CONTROL | MODE1 | — |

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

| AUTO SETTING ITEM | | NOTE |
|------------------------|---------------|------|
| Items | Setting value | |
| FOG ON WITH AUTO LIGHT | WITHOUT | — |
| Key Fob Type | MODE9 | — |

COUPE MODELS FOR MEXICO

| MANUAL SETTING ITEM | | NOTE |
|---------------------|---------------------------|------|
| Items | Setting value | |
| AV C/U | WITH ⇔ WITHOUT | — |
| TRANSMISSION | AT with ABS ⇔ MT with ABS | — |
| ASCD CANCEL SW TYPE | MODE2 | — |

⇔: Items which confirm vehicle specifications

| AUTO SETTING ITEM | | NOTE |
|--------------------------|---------------|---|
| Items | Setting value | |
| SELECTIVE UNLOCK SETTING | WITHOUT | — |
| SELECTIVE UNLOCK WS | WITH | — |
| UNLOCK WITH SHOCK | WITHOUT | — |
| AUTO DOOR LOCK SPEED | MODE2 | — |
| P/W UP/DOWN | MODE1 | — |
| P-POS WARN | MODE1 | — |
| ROOF FUNCTION | W/O REQ SW | — |
| BATTERY SAVER FUNCTION | MODE1 | — |
| AUTO BACK DOOR | WITHOUT | — |
| Trunk/Glass Hatch select | Glass Hatch | “Glass Hatch” is indicated also for vehicles without a glass hatch. |
| PANIC ALM TYPE | MODE1 | — |
| TRANSIT MODE | WITH | — |
| RAP FUNC SET | MODE1 | — |
| TR OPEN SW (INT) | MODE1 | — |
| HANDLE | LHD | — |
| DI LMP VARIAT | MODE2 | — |
| LIGHT RECOG | MODE7 | — |
| RAIN SENSOR CONFIG | WITHOUT | — |
| REAR WIPER | WITHOUT | — |
| THEFT ALM AREA | MODE2 | — |
| H/L WASHER | MODE1 | — |
| HAZARD SW TYPE | MODE1 | — |
| TR CANCEL SW | WITHOUT | — |
| BCM AC CONTROL | MODE1 | — |
| FOG ON WITH AUTO LIGHT | WITHOUT | — |
| Key Fob Type | MODE9 | — |

ROADSTER MODELS

INSPECTION AND ADJUSTMENT

< BASIC INSPECTION >

| MANUAL SETTING ITEM | | NOTE |
|---------------------|---------------------------|---|
| Items | Setting value | |
| AV C/U | WITH ⇔ WITHOUT | — |
| TRANSMISSION | AT with ABS ⇔ MT with ABS | — |
| ASCD CANCEL SW TYPE | MODE1 ⇔ MODE2 | <ul style="list-style-type: none"> • MODE1: M/T models with SynchroRev Match mode • MODE2: Except M/T models with SynchroRev Match mode |
| TIRE PRESSURE | 240kpa ⇔ 260kpa | <ul style="list-style-type: none"> • 240kpa: With 19 inch tire • 260kpa: With 18 inch tire |

⇔: Items which confirm vehicle specifications

| AUTO SETTING ITEM | | NOTE |
|--------------------------|---------------|---|
| Items | Setting value | |
| SELECTIVE UNLOCK SETTING | WITHOUT | — |
| SELECTIVE UNLOCK WS | WITH | — |
| UNLOCK WITH SHOCK | WITHOUT | — |
| AUTO DOOR LOCK SPEED | MODE2 | — |
| P/W UP/DOWN | MODE1 | — |
| P-POS WARN | MODE1 | — |
| ROOF FUNCTION | W/ REQ SW | — |
| BATTERY SAVER FUNCTION | MODE1 | — |
| AUTO BACK DOOR | WITHOUT | — |
| Trunk/Glass Hatch select | Glass Hatch | "Glass Hatch" is indicated also for vehicles without a glass hatch. |
| PANIC ALM TYPE | MODE1 | — |
| TRANSIT MODE | WITH | — |
| RAP FUNC SET | MODE1 | — |
| TR OPEN SW (INT) | MODE1 | — |
| HANDLE | LHD | — |
| DTRL | WITH | — |
| DI LMP VARIAT | MODE2 | — |
| LIGHT RECOG | MODE7 | — |
| RAIN SENSOR CONFIG | WITHOUT | — |
| REAR WIPER | WITHOUT | — |
| THEFT ALM AREA | MODE2 | — |
| H/L WASHER | MODE1 | — |
| HAZARD SW TYPE | MODE1 | — |
| TR CANCEL SW | WITH | — |
| BCM AC CONTROL | MODE1 | — |
| TPMS | WITH | — |
| FOG ON WITH AUTO LIGHT | WITHOUT | — |
| Key Fob Type | MODE9 | — |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

TRANSIT MODE CANCEL OPERATION

< BASIC INSPECTION >

TRANSIT MODE CANCEL OPERATION

Description

INFOID:000000008196549

- BCM is in transit mode if turn signal indicator on combination meter turns ON for 1 minute when ignition switch is turned from OFF to ON.
- In this case, cancel operation must be performed.

NOTE:

Do not cancel transit mode during storage of the vehicle. Always cancel transit mode before delivery of the vehicle to customer.

Work Procedure

INFOID:000000008196550

1. TRANSIT MODE CANCEL OPERATION

1. Turn ignition switch OFF.
2. Turn and hold front wiper switch to HI, and then operate turn signal switch to RH or LH.

>> GO TO 2.

2. TRANSIT MODE CANCEL CHECK

1. Turn front wiper switch and turn signal switch OFF.
2. Turn ignition switch ON.
3. Check that turn signal indicator on combination meter does not turn ON.

>> WORK END

BODY CONTROL SYSTEM

< SYSTEM DESCRIPTION >

SYSTEM DESCRIPTION

BODY CONTROL SYSTEM

System Description

INFOID:000000008196551

OUTLINE

- BCM (Body Control Module) controls the various electrical components. It inputs the information required to the control from CAN communication and the signal received from each switch and sensor.
- BCM has combination switch reading function for reading the operation status of combination switches (light, turn signal, wiper and washer) in addition to a function for controlling the operation of various electrical components. It also has the signal transmission function as the passed point of signal and the power saving control function that reduces the power consumption with the ignition switch OFF.
- BCM is equipped with the diagnosis function that performs the diagnosis with CONSULT and various settings.

BCM control function list

| System | Refer to |
|---|--|
| Combination switch reading system | BCS-11, "System Diagram" |
| Signal buffer system | BCS-15, "System Diagram" |
| Power consumption control system | BCS-17, "System Diagram" |
| Auto light system | EXL-15, "AUTO LIGHT SYSTEM : System Diagram" |
| Turn signal and hazard warning lamp system | EXL-17, "TURN SIGNAL AND HAZARD WARNING LAMP SYSTEM : System Diagram" |
| Headlamp system | EXL-14, "HEADLAMP SYSTEM : System Diagram" |
| Parking, license plate, side marker and tail lamps system | EXL-18, "PARKING, LICENSE PLATE AND TAIL LAMPS : System Diagram" |
| Rear fog lamp system | EXL-18, "REAR FOG LAMP SYSTEM : System Diagram" |
| Exterior lamp battery saver system | EXL-19, "EXTERIOR LAMP BATTERY SAVER SYSTEM : System Diagram" |
| Daytime running light system | EXL-16, "DAYTIME RUNNING LIGHT SYSTEM : System Diagram" |
| Interior room lamp control system | INL-9, "INTERIOR ROOM LAMP CONTROL SYSTEM : System Diagram" |
| Luggage room lamp system | |
| Interior room lamp battery saver system | INL-11, "INTERIOR ROOM LAMP BATTERY SAVER SYSTEM : System Diagram" |
| Front wiper and washer system | WW-6, "System Diagram" |
| Warning chime system | WCS-5, "WARNING CHIME SYSTEM : System Diagram" |
| Door lock system | DLK-21, "System Diagram" |
| Back door opener system (Coupe models) | DLK-37, "System Diagram" |
| Trunk lid opener system (Roadster models) | DLK-203, "System Diagram" |
| Nissan Vehicle Immobilizer System (NVIS) - NATS | SEC-15, "System Diagram" |
| Vehicle security system | SEC-20, "System Diagram" |
| Panic alarm | DLK-29, "REMOTE KEYLESS ENTRY FUNCTION : System Description" |
| Rear window defogger system | <ul style="list-style-type: none"> • DEF-75, "WITH NAVIGATION : System Diagram" (With NAVI) • DEF-77, "WITHOUT NAVIGATION : System Diagram" (Without NAVI) |

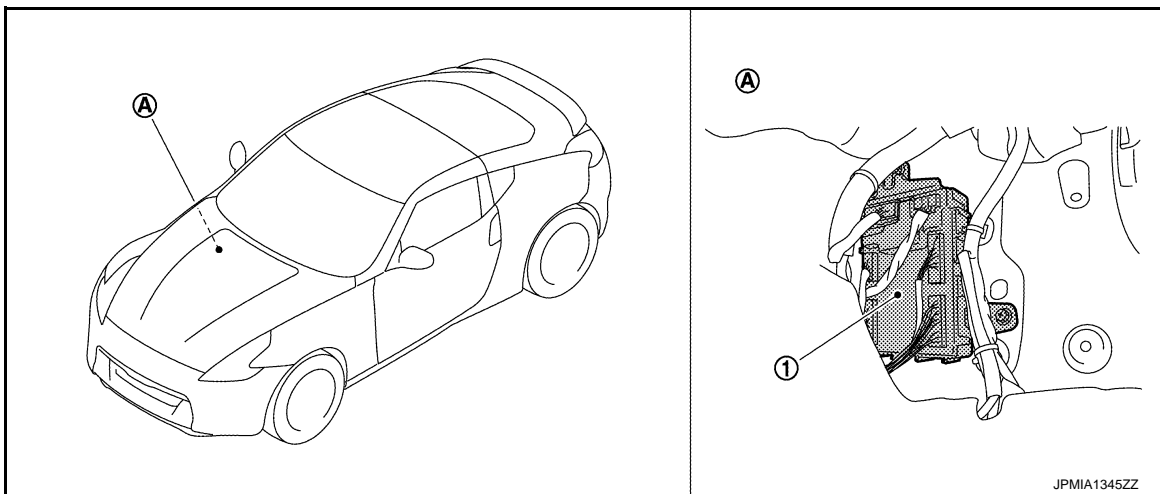
BODY CONTROL SYSTEM

< SYSTEM DESCRIPTION >

| System | Refer to | |
|--|---|---|
| Intelligent Key system/engine start system | Door lock function | DLK-24, "INTELLIGENT KEY SYSTEM : System Diagram" |
| | Back door open function | |
| | Remote keyless entry function | |
| | Key reminder function | |
| | Warning function | |
| | Engine start function | |
| Power window system | PWC-9, "System Diagram" | |
| Retained accessory power (RAP) system | PWC-9, "System Description" | |
| Tire pressure monitor system (TPMS) - AIR PRESSURE MONITOR | WT-8, "System Description" | |

Component Parts Location

INFOID:000000008196552



- 1. BCM
- A. Dash side lower (passenger side)

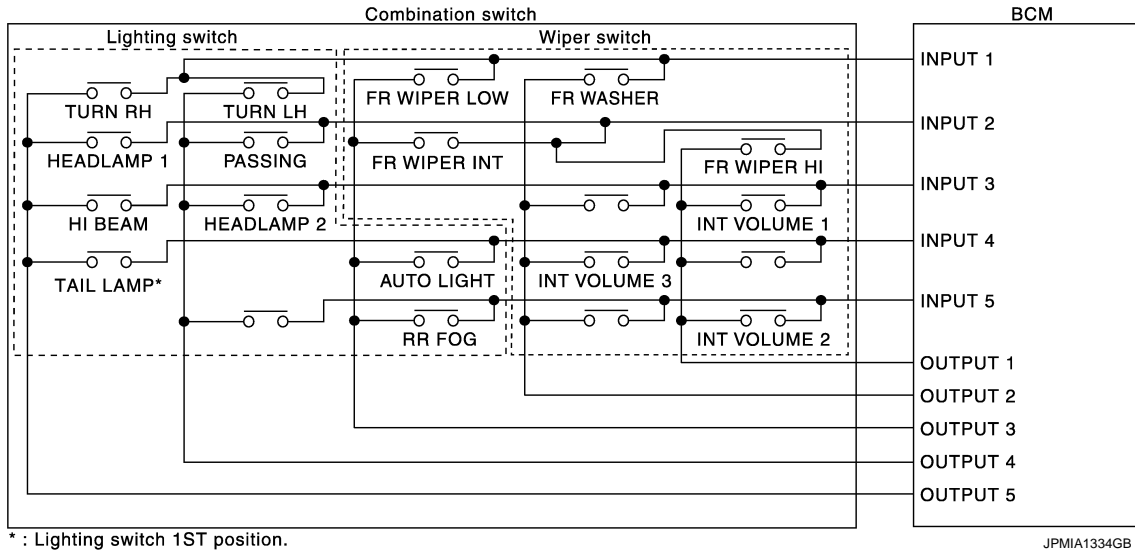
COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

COMBINATION SWITCH READING SYSTEM

System Diagram

INFOID:000000008196553



System Description

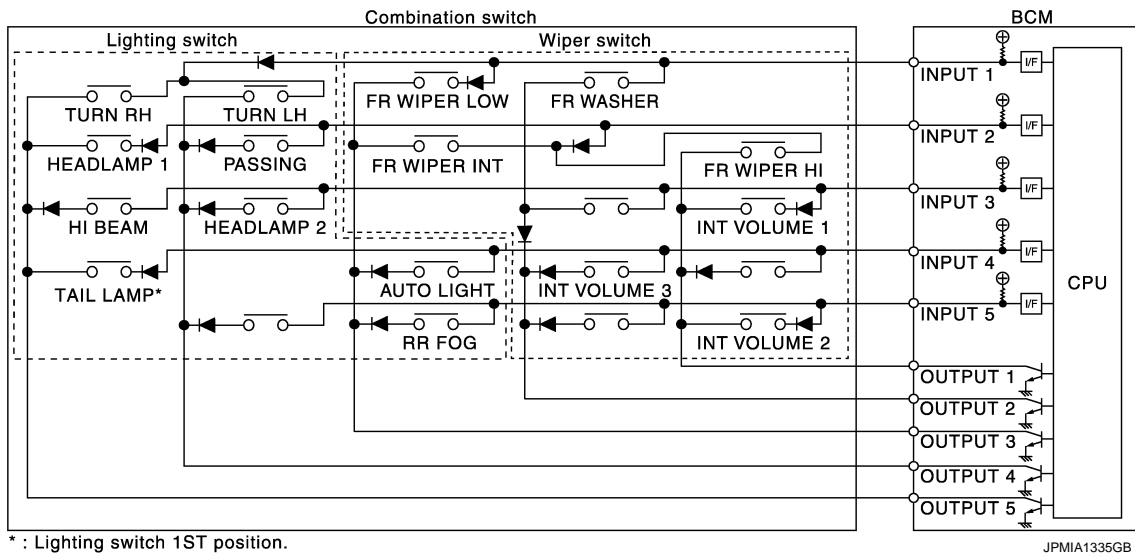
INFOID:000000008196554

OUTLINE

- BCM reads the status of the combination switch (light, turn signal, wiper and washer) and recognizes the status of each switch.
- BCM is a combination of 5 output terminals (OUTPUT 1 - 5) and 5 input terminals (INPUT 1 - 5). It reads a maximum of 20 switch status.

COMBINATION SWITCH MATRIX

Combination switch circuit



Combination switch INPUT-OUTPUT system list

| System | OUTPUT 1 | OUTPUT 2 | OUTPUT 3 | OUTPUT 4 | OUTPUT 5 |
|---------|--------------|-----------|--------------|------------|------------|
| INPUT 1 | — | FR WASHER | FR WIPER LOW | TURN LH | TURN RH |
| INPUT 2 | FR WIPER HI | — | FR WIPER INT | PASSING | HEADLAMP 1 |
| INPUT 3 | INT VOLUME 1 | — | — | HEADLAMP 2 | HI BEAM |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

| System | OUTPUT 1 | OUTPUT 2 | OUTPUT 3 | OUTPUT 4 | OUTPUT 5 |
|---------|--------------|--------------|------------|----------|-----------|
| INPUT 4 | — | INT VOLUME 3 | AUTO LIGHT | — | TAIL LAMP |
| INPUT 5 | INT VOLUME 2 | — | RR FOG | — | — |

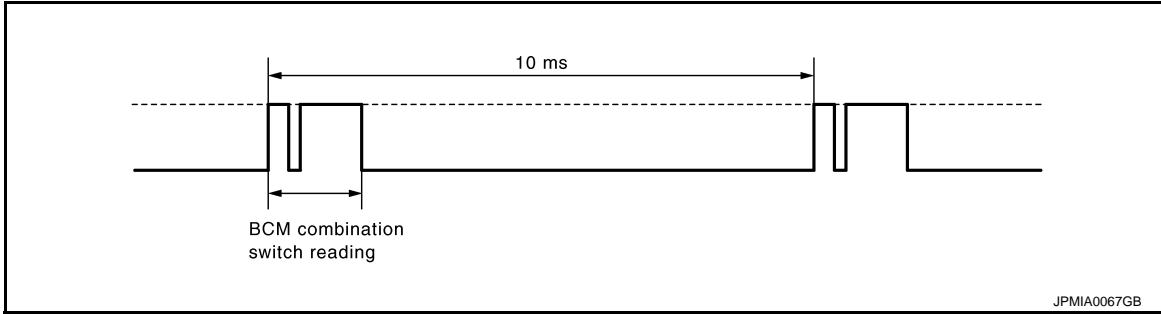
NOTE:

Headlamp has a dual system switch.

COMBINATION SWITCH READING FUNCTION

Description


- BCM reads the status of the combination switch at 10 ms interval normally.



NOTE:

BCM reads the status of the combination switch at 60 ms interval when BCM is controlled at low power consumption mode.

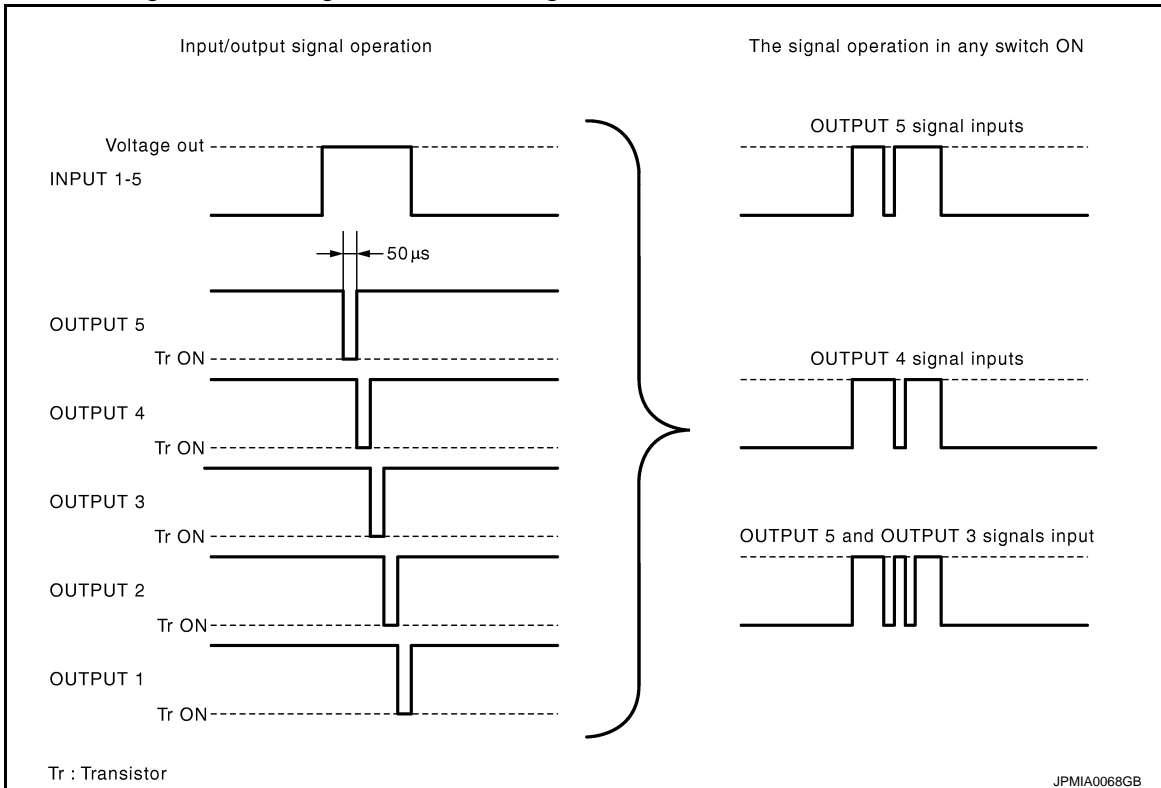- BCM operates as follows and judges the status of the combination switch.
 - INPUT 1 - 5 outputs the voltage waveforms of 5 systems simultaneously.
 - It operates the transistor on OUTPUT side in the following order: OUTPUT 5 → 4 → 3 → 2 → 1.
 - The voltage waveform of INPUT corresponding to the formed circuit changes according to the operation of the transistor on OUTPUT side if any (1 or more) switches are ON.
 - It reads this change of the voltage as the status signal of the combination switch.



Operation Example


In the following operation example, the combination of the status signals of the combination switch is replaced as follows: INPUT 1 - 5 to "1 - 5" and OUTPUT 1 - 5 to "A - E".

Example 1: When a switch (TURN RH switch) is turned ON

COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

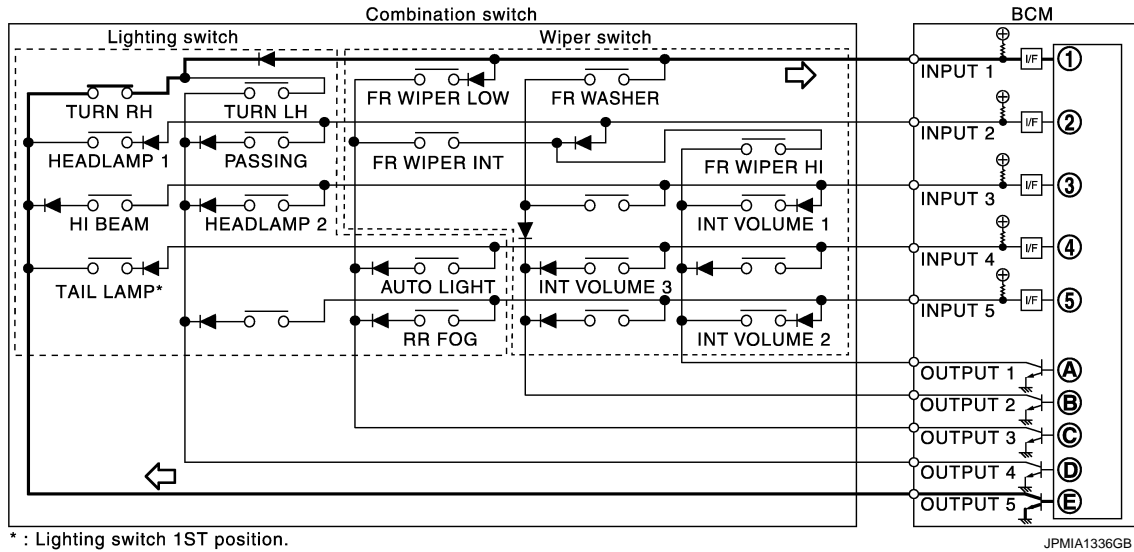
- The circuit between INPUT 1 and OUTPUT 5 is formed when the TURN RH switch is turned ON.



- BCM detects the combination switch status signal "1E" when the signal of OUTPUT 5 is input to INPUT 1.
- BCM judges that the TURN RH switch is ON when the signal "1E" is detected.

Example 2: When some switches (turn RH switch, front wiper LO switch) are turned ON

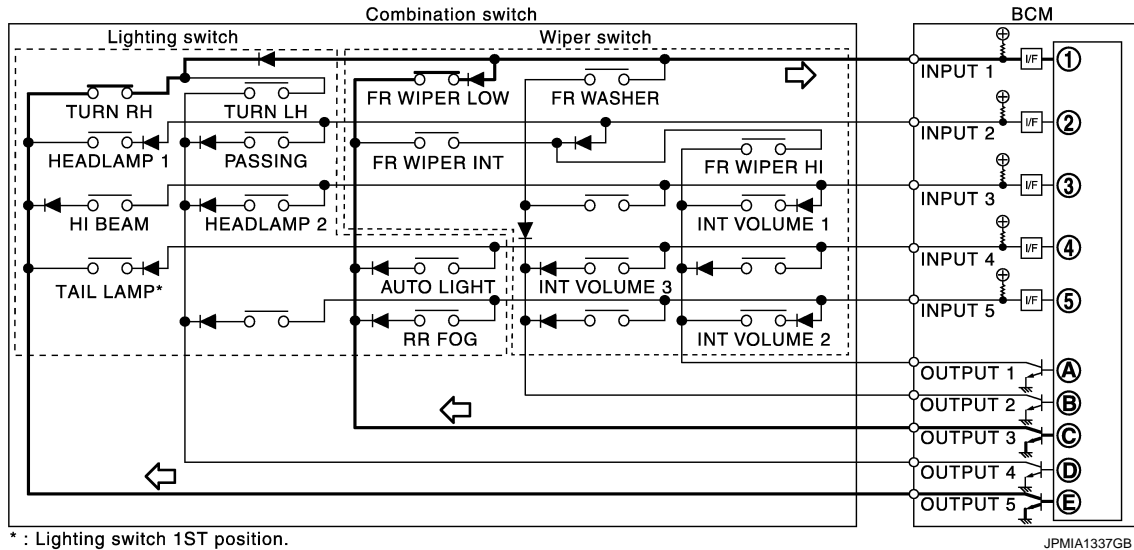- The circuits between INPUT 1 and OUTPUT 5 and between INPUT 1 and OUTPUT 3 are formed when the TURN RH switch and FR WIPER LOW switch are turned ON.



- BCM detects the combination switch status signal "1CE" when the signals of OUTPUT 3 and OUTPUT 5 are input to INPUT 1.
- BCM judges that the TURN RH switch and FR WIPER LOW switch are ON when the signal "1CE" is detected.

WIPER INTERMITTENT DIAL POSITION

BCM judges the wiper intermittent dial 1 - 7 by the status of INT VOLUME 1, 2 and 3 switches.

| Wiper intermittent dial position | Switch status | | |
|----------------------------------|---------------|--------------|--------------|
| | INT VOLUME 1 | INT VOLUME 2 | INT VOLUME 3 |
| 1 | ON | ON | ON |
| 2 | ON | ON | OFF |
| 3 | ON | OFF | OFF |
| 4 | OFF | OFF | OFF |
| 5 | OFF | OFF | ON |

COMBINATION SWITCH READING SYSTEM

< SYSTEM DESCRIPTION >

| Wiper intermittent dial position | Switch status | | |
|----------------------------------|---------------|--------------|--------------|
| | INT VOLUME 1 | INT VOLUME 2 | INT VOLUME 3 |
| 6 | OFF | ON | ON |
| 7 | OFF | ON | OFF |

NOTE:

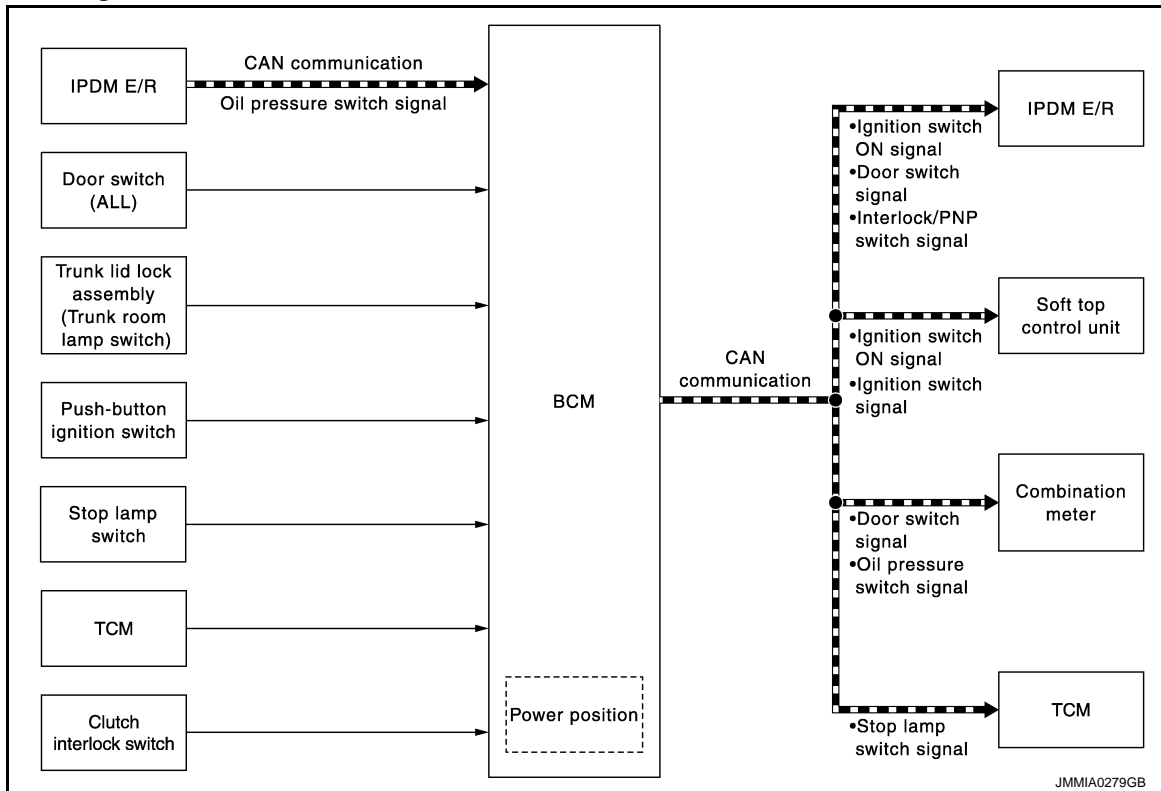
For details of wiper intermittent dial position, refer to [WW-6. "System Description"](#)

SIGNAL BUFFER SYSTEM

< SYSTEM DESCRIPTION >

SIGNAL BUFFER SYSTEM

System Diagram



System Description

INFOID:000000008196556

OUTLINE

BCM has the signal transmission function that outputs/transmits each input/received signal to each unit.

Signal transmission function list

| Signal name | Input | Output | Description |
|---|---|---|--|
| <ul style="list-style-type: none"> Ignition switch ON signal Ignition switch signal | Push-button ignition switch (Push switch) | <ul style="list-style-type: none"> IPDM E/R (CAN) Soft top control unit (CAN) | Inputs the push-button ignition switch (push switch) signal and transmits the ignition switch status judged with BCM via CAN communication. |
| Door switch signal (Trunk switch signal) | <ul style="list-style-type: none"> Any door switch Trunk room lamp switch | <ul style="list-style-type: none"> Combination meter (CAN) IPDM E/R (CAN) | Inputs the door switch signal and trunk room lamp switch signal, and transmits door switch signal (trunk switch signal) via CAN communication. |
| Oil pressure switch signal | IPDM E/R (CAN) | Combination meter (CAN) | Transmits the received oil pressure switch signal via CAN communication. |
| Stop lamp switch signal | Stop lamp switch | TCM (CAN) | Inputs the stop lamp switch 1 signal and stop lamp switch 2 signal, and transmits the stop lamp switch signal via CAN communication. |

SIGNAL BUFFER SYSTEM

< SYSTEM DESCRIPTION >


| Signal name | Input | Output | Description |
|-----------------------------|-------------------------|----------------|---|
| Interlock/PNP switch signal | TCM | IPDM E/R (CAN) | Inputs the selector lever P/N position signal, and transmits the interlock/PNP switch signal via CAN communication. |
| | Clutch interlock switch | | Inputs the clutch interlock switch signal, and transmits the interlock/PNP switch signal via CAN communication. |

POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

POWER CONSUMPTION CONTROL SYSTEM

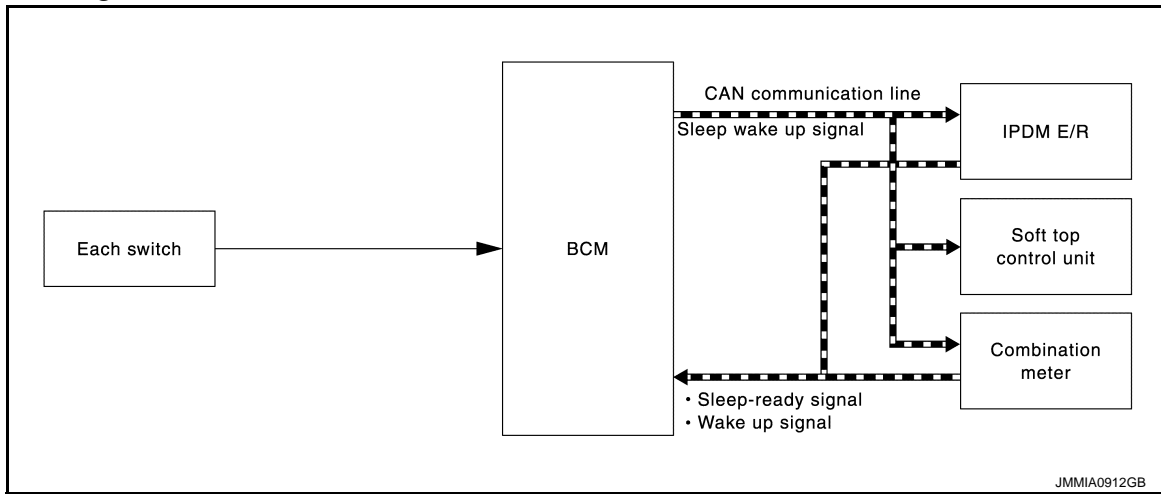System Diagram



System Description

INFOID:000000008196558

OUTLINE

- BCM incorporates a power saving control function that reduces the power consumption according to the vehicle status.
- BCM switches the status (control mode) by itself with the power saving control function. It performs the sleep request to each unit (IPDM E/R, combination meter and soft top control unit) that operates with the ignition switch OFF.

Normal mode (wake-up)

- CAN communication is normally performed with other units
- Each control with BCM is operating properly

CAN communication sleep mode (CAN sleep)

- CAN transmission is stopped
- Control with BCM only is operating

Low power consumption mode (BCM sleep)

- Low power consumption control is active
- CAN transmission is stopped

LOW POWER CONSUMPTION CONTROL WITH BCM

BCM reduces the power consumption with the following operation in the low power consumption mode.

- The reading interval of the each switches changes from 10 ms interval to 60 ms interval.

Sleep mode activation

- BCM receives the sleep-ready signal (ready) from IPDM E/R and combination meter via CAN communication.
- BCM transmits the sleep wake up signal (sleep) to each unit when all of the CAN sleep conditions are fulfilled.
- Each unit stops the transmission of CAN communication with the sleep wake up signal. BCM is in CAN communication sleep mode.
- BCM is in the low power consumption mode and perform the low power consumption control when all of the BCM sleep conditions are fulfilled with CAN sleep condition.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

Sleep condition

| CAN sleep condition | BCM sleep condition |
|---|---|
| <ul style="list-style-type: none"> • Receiving the sleep-ready signal (ready) from all units • Ignition switch: OFF • Vehicle security system and panic alarm: Not operation • Warning chime: Not operation • Intelligent Key system buzzer: Not operation • Trunk room lamp switch status: No change • Stop lamp switch: OFF • Key slot (card switch) status: No change • Turn signal indicator lamp: Not operation • Exterior lamp: OFF • Door lock status: No change • CONSULT communication status: Not communication • Meter display signal: Non-transmission • Door switch status: No change • Rear window defogger: OFF | <ul style="list-style-type: none"> • Interior room lamp battery saver: Time out • RAP system: OFF • Power window switch and soft top control unit communication: No transmission • Push-button ignition switch illumination: OFF • Nissan Vehicle Immobilizer System (NVIS) - NATS: Not operation • Remote keyless entry receiver communication status: No communication • Tire pressure monitor system (TPMS) - AIR PRESSURE MONITOR: Stop • LOCK indicator lamp: OFF • ACC indicator lamp: OFF • ON indicator lamp: OFF |

Wake-up operation

- BCM changes from the low power consumption mode to the CAN communication sleep mode when the any of the BCM wake-up conditions is fulfilled. Only the control with BCM is activated.
- BCM transmits the sleep wake up signal (wake up) to each unit when any of the CAN wake-up conditions is fulfilled. It changes from the low power consumption mode or the CAN communication sleep mode to the normal mode.
- Each unit starts the transmission of CAN communication with the sleep wake up signal. In addition, the combination meter transmits the wake up signal to BCM via CAN communication to report the CAN communication start.

Wake-up condition


| BCM wake-up condition | CAN wake-up condition |
|--|--|
| <ul style="list-style-type: none"> • Power window switch and soft top control unit communication: Receiving • Remote keyless entry receiver: Receiving | <ul style="list-style-type: none"> • Receiving the sleep-ready signal (Not-ready) from any units • Key slot (key switch): OFF → ON, ON → OFF • Push-button ignition switch (push switch): OFF→ ON • Hazard switch: OFF → ON • PASSING switch: OFF → ON, ON → OFF • TAIL LAMP switch: OFF → ON • RR FOG switch: OFF → ON • Driver door switch: OFF → ON, ON → OFF • Passenger door switch: OFF → ON, ON → OFF • Back door switch: OFF → ON, ON → OFF • Trunk room lamp switch: OFF → ON, ON → OFF • Driver door request switch: OFF → ON • Passenger door request switch: OFF → ON • Back door request switch: OFF → ON • Trunk lid door request switch: OFF → ON • Stop lamp switch: ON • Clutch interlock switch: OFF → ON |

POWER CONSUMPTION CONTROL SYSTEM

< SYSTEM DESCRIPTION >

Component Parts Location

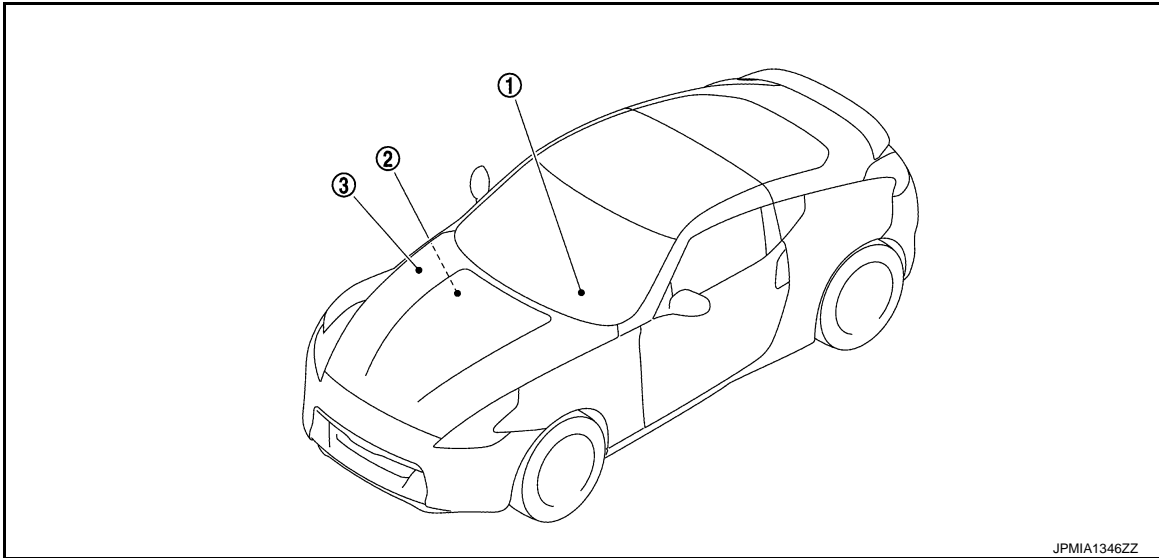INFOID:000000008196559



1. Combination meter

2. BCM
Refer to [BCS-10. "Component Parts Location"](#).

3. IPDM E/R
Refer to [PCS-5. "Component Parts Location"](#).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT Function (BCM - COMMON ITEM)

INFOID:000000008196560

APPLICATION ITEM

CONSULT performs the following functions via CAN communication with BCM.

| Diagnosis mode | Function Description |
|--------------------------|---|
| Work Support | Changes the setting for each system function. |
| Self Diagnostic Result | Displays the diagnosis results judged by BCM. |
| CAN Diag Support Monitor | Monitors the reception status of CAN communication viewed from BCM. |
| Data Monitor | The BCM input/output signals are displayed. |
| Active Test | The signals used to activate each device are forcibly supplied from BCM. |
| Ecu Identification | The BCM part number is displayed. |
| Configuration | <ul style="list-style-type: none"> Read and save the vehicle specification. Write the vehicle specification when replacing BCM. |

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

| System | Sub system selection item | Diagnosis mode | | |
|---|-----------------------------|----------------|--------------|-------------|
| | | Work Support | Data Monitor | Active Test |
| Door lock | DOOR LOCK | × | × | × |
| Rear window defogger | REAR DEFOGGER | | × | × |
| Warning chime | BUZZER | | × | × |
| Interior room lamp timer | INT LAMP | × | × | × |
| Exterior lamp | HEAD LAMP | × | × | × |
| Wiper and washer | WIPER | × | × | × |
| Turn signal and hazard warning lamps | FLASHER | × | × | × |
| — | AIR CONDITONER* | | | |
| <ul style="list-style-type: none"> Intelligent Key system Engine start system | INTELLIGENT KEY | × | × | × |
| Combination switch | COMB SW | | × | |
| Body control system | BCM | × | | |
| NVIS - NATS | IMMU | | × | × |
| Interior room lamp battery saver | BATTERY SAVER | × | × | × |
| Back door/Trunk lid open | TRUNK | | × | × |
| Vehicle security system | THEFT ALM | × | × | × |
| RAP system | RETAINED PWR | | × | |
| Signal buffer system | SIGNAL BUFFER | | × | × |
| TPMS | TPMS (AIR PRESSURE MONITOR) | × | × | × |

NOTE:

*: This item is displayed, but is not used.

FREEZE FRAME DATA (FFD)

The BCM records the following vehicle condition at the time a particular DTC is detected, and displays on CONSULT.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| CONSULT screen item | Indication/Unit | Description | | |
|---------------------|---|--|--|---|
| Vehicle Speed | km/h | Vehicle speed of the moment a particular DTC is detected | | A |
| Odo/Trip Meter | km | Total mileage (Odometer value) of the moment a particular DTC is detected | | B |
| Vehicle Condition | SLEEP>LOCK | Power supply position status of the moment a particular DTC is detected | While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK"*) | B |
| | SLEEP>OFF | | While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".) | C |
| | LOCK>ACC | | While turning power supply position from "LOCK"* to "ACC" | D |
| | ACC>ON | | While turning power supply position from "ACC" to "IGN" | D |
| | RUN>ACC | | While turning power supply position from "RUN" to "ACC" (Except emergency stop operation) | E |
| | CRANK>RUN | | While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it) | E |
| | RUN>URGENT | | While turning power supply position from "RUN" to "ACC" (Emergency stop operation) | F |
| | ACC>OFF | | While turning power supply position from "ACC" to "OFF" | F |
| | OFF>LOCK | | While turning power supply position from "OFF" to "LOCK"* | G |
| | OFF>ACC | | While turning power supply position from "OFF" to "ACC" | G |
| | ON>CRANK | | While turning power supply position from "IGN" to "CRANKING" | H |
| | OFF>SLEEP | | While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode | H |
| | LOCK>SLEEP | | While turning BCM status from normal mode (Power supply position is "LOCK"*.) to low power consumption mode | I |
| | LOCK | | Power supply position is "LOCK"* | I |
| | OFF | | Power supply position is "OFF" (Ignition switch OFF) | J |
| | ACC | | Power supply position is "ACC" (Ignition switch ACC) | J |
| | ON | | Power supply position is "IGN" (Ignition switch ON with engine stopped) | K |
| ENGINE RUN | Power supply position is "RUN" (Ignition switch ON with engine running) | K | | |
| CRANKING | Power supply position is "CRANKING" (At engine cranking) | L | | |
| IGN Counter | 0 - 39 | The number of times that ignition switch is turned ON after DTC is detected <ul style="list-style-type: none"> • The number is 0 when a malfunction is detected now. • The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON. • The number is fixed to 39 until the self-diagnosis results are erased if it is over 39. | | L |

BCS

NOTE:

*: Power supply position shifts to "LOCK" from "OFF", when ignition switch is in the OFF position, selector lever is in the P position (A/T models), and any of the following conditions are met.

- Closing door
- Opening door
- Door is locked using door request switch
- Door is locked using Intelligent Key

The power supply position shifts to "ACC" when the push-button ignition switch (push switch) is pushed at "LOCK".

DOOR LOCK

DOOR LOCK : CONSULT Function (BCM - DOOR LOCK) (For Coupe)

INFOID:000000008838331

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Monitor item | Description |
|------------------------------|---|
| DOOR LOCK-UNLOCK SET | Selective unlock function mode can be changed to operate (ON) or not operate (OFF) with this mode |
| AUTOMATIC DOOR LOCK SELECT | Automatic door lock function mode can be selected from the following in this mode <ul style="list-style-type: none"> • VH SPD: All doors are locked when vehicle speed more than 24 km/h (15 MPH) • P RANGE*: All doors are locked when shifting the selector lever from P position to other than the P position |
| AUTOMATIC DOOR UNLOCK SELECT | Automatic door unlock function mode can be selected from the following in the mode <ul style="list-style-type: none"> • MODE 1: All doors are unlocked when the power supply position is changed from ON to OFF • MODE 2*: All doors are unlocked when shifting the selector lever from any position other than the P to P position • MODE 3: Driver side door is unlocked when the power supply position is changed from ON to OFF • MODE 4*: Driver side door is unlocked when shifting the selector lever from any position other than the P to P position |
| AUTOMATIC LOCK/UNLOCK SET | Automatic door lock/unlock function mode can be selected from the following in this mode <ul style="list-style-type: none"> • Off: non-operational • Unlock Only: door unlock operation only • Lock Only: door lock operation only • Lock/Unlock: lock/unlock operation |

*: P range interlock door lock can be selected for M/T models, but automatic door lock/unlock function does not operate.

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor Item | Contents |
|---------------|--|
| REQ SW-DR | Indicated [On/Off] condition of door request switch (driver side) |
| REQ SW-AS | Indicated [On/Off] condition of door request switch (passenger side) |
| REQ SW-BD/TR | Indicated [On/Off] condition of back door request switch/door request switch (trunk lid) |
| DOOR SW-DR | Indicated [On/Off] condition of front door switch (driver side) |
| DOOR SW-AS | Indicated [On/Off] condition of front door switch (passenger side) |
| DOOR SW-RR | NOTE: This item is displayed, but cannot be monitored |
| DOOR SW-RL | NOTE: This item is displayed, but cannot be monitored |
| DOOR SW-BK | Indicated [On/Off] condition of back door switch/ trunk room lamp switch* |
| CDL LOCK SW | Indicated [On/Off] condition of lock signal from door lock unlock switch |
| CDL UNLOCK SW | Indicated [On/Off] condition of unlock signal from door lock unlock switch |
| KEY CYL LK-SW | Indicated [On/Off] condition of lock signal from door key cylinder |
| KEY CYL UN-SW | Indicated [On/Off] condition of unlock signal from door key cylinder |

*: For roadster models

ACTIVE TEST

| Test item | Description |
|-----------|--|
| DOOR LOCK | This test is able to check door lock/unlock operation <ul style="list-style-type: none"> • The all door lock actuators are locked when "ALL LCK" on CONSULT screen is touched • The all door lock actuators are unlocked when "ALL UNLK" on CONSULT screen is touched • The door lock actuator (driver side) is unlocked when "DR UNLK" on CONSULT screen is touched • The door lock actuator (passenger side) is unlocked when "AS UNLK" on CONSULT screen is touched • "OTR ULK" item is displayed, but cannot be monitored |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

DOOR LOCK : CONSULT Function (BCM - DOOR LOCK) (For Roadster) INFOID:000000008838334

WORK SUPPORT

| Monitor item | Description |
|------------------------------|---|
| DOOR LOCK-UNLOCK SET | Selective unlock function mode can be changed to operate (ON) or not operate (OFF) with this mode |
| AUTOMATIC DOOR LOCK SELECT | Automatic door lock function mode can be selected from the following in this mode <ul style="list-style-type: none"> • VH SPD: All doors are locked when vehicle speed more than 24 km/h (15 MPH) • P RANGE*: All doors are locked when shifting the selector lever from P position to other than the P position |
| AUTOMATIC DOOR UNLOCK SELECT | Automatic door unlock function mode can be selected from the following in the mode <ul style="list-style-type: none"> • MODE 1: All doors are unlocked when the power supply position is changed from ON to OFF • MODE 2*: All doors are unlocked when shifting the selector lever from any position other than the P to P position • MODE 3: Driver side door is unlocked when the power supply position is changed from ON to OFF • MODE 4*: Driver side door is unlocked when shifting the selector lever from any position other than the P to P position |
| AUTOMATIC LOCK/UNLOCK SET | Automatic door lock/unlock function mode can be selected from the following in this mode <ul style="list-style-type: none"> • Off: non-operational • Unlock Only: door unlock operation only • Lock Only: door lock operation only • Lock/Unlock: lock/unlock operation |

*: P range interlock door lock can be selected for M/T models, but automatic door lock/unlock function does not operate.

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor Item | Contents |
|---------------|--|
| REQ SW-DR | Indicated [On/Off] condition of door request switch (driver side) |
| REQ SW-AS | Indicated [On/Off] condition of door request switch (passenger side) |
| REQ SW-BD/TR | Indicated [On/Off] condition of back door request switch/door request switch (trunk lid) |
| DOOR SW-DR | Indicated [On/Off] condition of front door switch (driver side) |
| DOOR SW-AS | Indicated [On/Off] condition of front door switch (passenger side) |
| DOOR SW-RR | NOTE: This item is displayed, but cannot be monitored |
| DOOR SW-RL | NOTE: This item is displayed, but cannot be monitored |
| DOOR SW-BK | Indicated [On/Off] condition of back door switch/ trunk room lamp switch* |
| CDL LOCK SW | Indicated [On/Off] condition of lock signal from door lock unlock switch |
| CDL UNLOCK SW | Indicated [On/Off] condition of unlock signal from door lock unlock switch |
| KEY CYL LK-SW | Indicated [On/Off] condition of lock signal from door key cylinder |
| KEY CYL UN-SW | Indicated [On/Off] condition of unlock signal from door key cylinder |

*: For roadster models

ACTIVE TEST

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Test item | Description |
|-----------|---|
| DOOR LOCK | <p>This test is able to check door lock/unlock operation</p> <ul style="list-style-type: none"> • The all door lock actuators are locked when "ALL LCK" on CONSULT screen is touched • The all door lock actuators are unlocked when "ALL UNLK" on CONSULT screen is touched • The door lock actuator (driver side) is unlocked when "DR UNLK" on CONSULT screen is touched • The door lock actuator (passenger side) is unlocked when "AS UNLK" on CONSULT screen is touched • "OTR ULK" item is displayed, but cannot be monitored |

REAR WINDOW DEFOGGER

REAR WINDOW DEFOGGER : CONSULT Function (BCM - REAR DEFOGGER)

INFOID:000000008838351

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor Item | Description |
|--------------|---|
| REAR DEF SW | <ul style="list-style-type: none"> • Without navigation: Displays "Press (ON)/other (OFF)" status determined with the rear window defogger switch • With navigation: This is displayed even when it is not equipped |
| PUSH SW | Indicates [ON/OFF] condition of push switch |

ACTIVE TEST

| Test Item | Description |
|---------------|--|
| REAR DEFOGGER | Rear window defogger operates when "ON" on CONSULT screen is touched |

BUZZER

BUZZER : CONSULT Function (BCM - BUZZER)

INFOID:000000008838352

CONSULT APPLICATION ITEMS

| Test item | Diagnosis mode | Description |
|-----------|----------------|---|
| BUZZER | Data Monitor | Displays BCM input data in real time. |
| | Active Test | Operation of electrical loads can be checked by sending driving signal to them. |

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Display item [Unit] | Description |
|-------------------------|--|
| PUSH SW [On/Off] | Status of push-button ignition switch judged by BCM. |
| UNLK SEN-DR [On/Off] | Status of unlock sensor judged by BCM. |
| VEH SPEED 1 [km/h] | Value of vehicle speed signal received from ABS actuator and electric unit (control unit) with CAN communication line. |
| KEY SW-SLOT [On/Off] | Status of key slot judged by BCM. |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Display item [Unit] | Description |
|--------------------------|--|
| TAIL LAMP SW [On/Off] | Status of each switch judged by BCM using the combination switch readout function. |
| FR FOG SW [On/Off] | Status of front fog lamp switch judged by BCM. |
| DOOR SW-DR [On/Off] | Status of driver side door switch judged by BCM. |

ACTIVE TEST


| Display item [Unit] | Description |
|------------------------|---|
| IGN KEY WARN ALM | The key warning chime operation can be checked by operating the relevant function (On/Off). |
| SEAT BELT WARN TEST | The seat belt warning chime operation can be checked by operating the relevant function (On/Off). |
| ID REGIST WARNING | The ID regist warning chime operation can be checked by operating the relevant function (On/Off). |
| LIGHT WARN ALM | The light warning chime operation can be checked by operating the relevant function (On/Off). |
| RUN FLAT/T WARN BUZZER | The run-flat tire warning chime operation can be checked by operating the relevant function (On/Off). |
| KEY REMINDER WARN | The key reminder warning chime operation can be checked by operating the relevant function (On/Off). |

INT LAMP

INT LAMP : CONSULT Function (BCM - INT LAMP) (Coupe Models)

INFOID:000000008838343

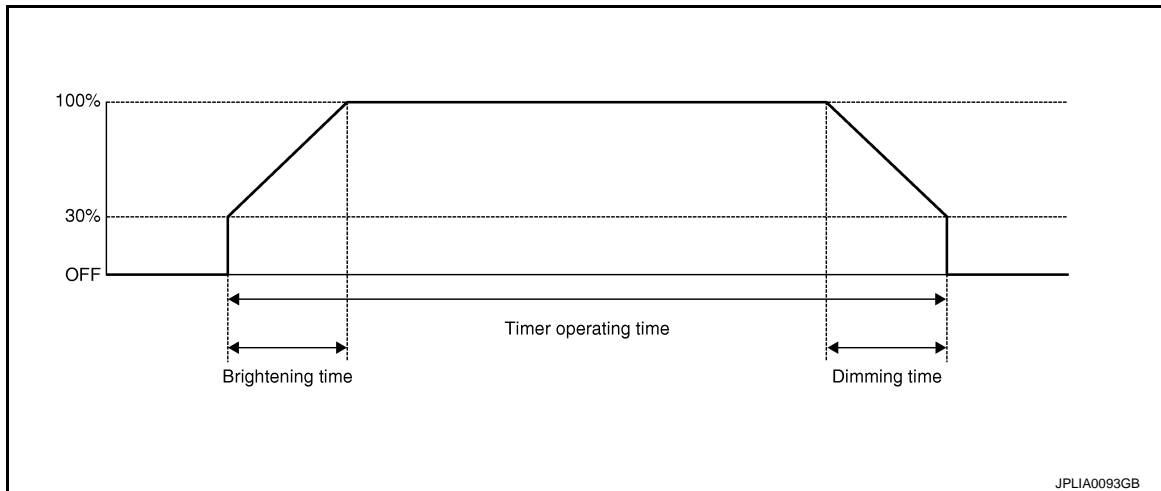WORK SUPPORT



| Service item | Setting item | Setting |
|------------------------|--------------|---|
| SET I/L D-UNLCK INTCON | ON* | With the interior room lamp timer function |
| | OFF | Without the interior room lamp timer function |
| ROOM LAMP TIMER SET | MODE 2 | 7.5 sec. |
| | MODE 3* | 15 sec. |
| | MODE 4 | 30 sec. |
| ROOM LAMP ON TIME SET | MODE 1 | 0.5 sec. |
| | MODE 2* | 1 sec. |
| | MODE 3 | 2 sec. |
| | MODE 4 | 3 sec. |
| | MODE 5 | 0 sec. |

BCS

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Service item | Setting item | Setting |
|---|--------------|---|
| ROOM LAMP OFF TIME SET | MODE 1 | 0.5 sec. |
| | MODE 2 | 1 sec. |
| | MODE 3 | 2 sec. |
| | MODE 4* | 3 sec. |
| | MODE 5 | 0 sec. |
| Sets the interior room lamp gradual dimming time. | | |
| R LAMP TIMER LOGIC SET | MODE 1* | Interior room lamp timer activates with synchronizing all doors. |
| | MODE 2 | Interior room lamp timer activates with synchronizing the driver door only. |

*: Factory setting

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor item [Unit] | Description |
|---------------------------|--|
| REQ SW-DR [On/Off] | The switch status input from request switch (driver side) |
| REQ SW-AS [On/Off] | The switch status input from front request switch (passenger side) |
| REQ SW-RR [On/Off] | NOTE: The item is indicated, but not monitored. |
| REQ SW-RL [On/Off] | |
| PUSH SW [On/Off] | The switch status input from push-button ignition switch |
| ACC RLY-F/B [On/Off] | NOTE: The item is indicated, but not monitored. |
| UNLK SEN-DR [On/Off] | Driver door unlock status input from unlock sensor |
| KEY SW-SLOT [On/Off] | Key switch status input from key slot |
| DOOR SW-DR [On/Off] | The switch status input from driver side door switch |
| DOOR SW-AS [On/Off] | The switch status input from passenger side door switch |
| DOOR SW-RR [On/Off] | NOTE: The item is indicated, but not monitored. |
| DOOR SW-RL [On/Off] | |
| DOOR SW-BK [On/Off] | The switch status input from back door switch |
| CDL LOCK SW [On/Off] | Lock switch status received from the door lock and unlock switch |
| CDL UNLOCK SW [On/Off] | Unlock switch status received from the door lock and unlock switch |
| KEY CYL LK-SW [On/Off] | Lock switch status received from key cylinder switch |
| KEY CYL UN-SW [On/Off] | Unlock switch status received from key cylinder switch |
| TRNK/HAT MNTR [On/Off] | NOTE: The item is indicated, but not monitored. |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Monitor item [Unit] | Description |
|------------------------|--|
| RKE-LOCK [On/Off] | Lock signal status received from remote keyless entry receiver |
| RKE-UNLOCK [On/Off] | Unlock signal status received from remote keyless entry receiver |


ACTIVE TEST

| Test item | Operation | Description |
|-------------------|-----------|--|
| INT LAMP | On | Outputs the interior room lamp control signal to turn map lamp ON (Map lamp switch is in DOOR position). |
| | Off | Stops the interior room lamp control signal to turn map lamp OFF. |
| STEP LAMP TEST | On | NOTE: The item is displayed, but cannot be tested. |
| | Off | |
| LUGGAGE LAMP TEST | On | Outputs the luggage room lamp control signal to turn the luggage room lamp ON. |
| | Off | Stops the luggage room lamp control signal to turn the luggage room lamp OFF. |

INT LAMP : CONSULT Function (BCM - INT LAMP) (Roadster Models)

INFOID:000000008838348

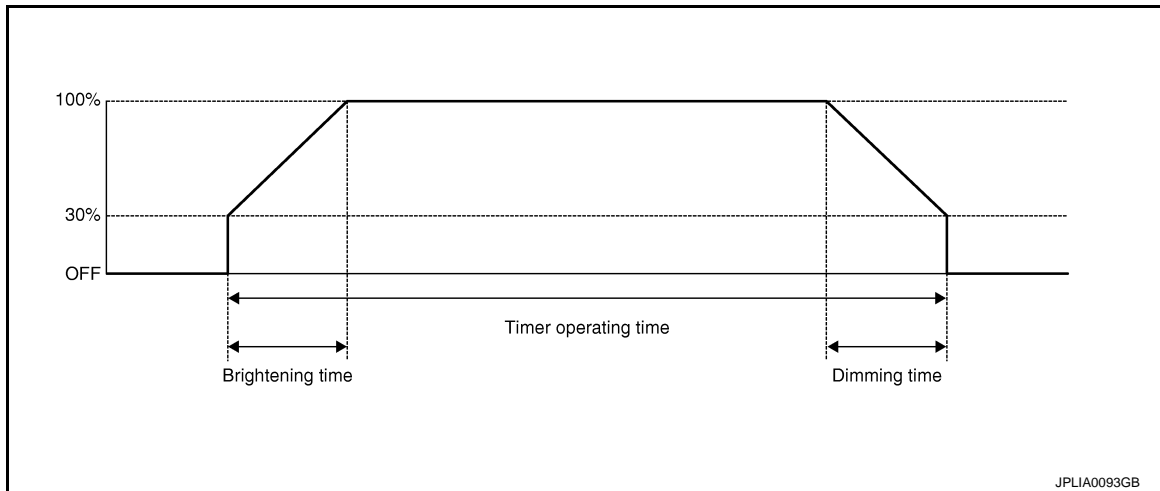WORK SUPPORT



| Service item | Setting item | Setting |
|------------------------|--------------|---|
| SET I/L D-UNLCK INTCON | ON* | With the interior room lamp timer function |
| | OFF | Without the interior room lamp timer function |
| ROOM LAMP TIMER SET | MODE 2 | 7.5 sec. |
| | MODE 3* | 15 sec. |
| | MODE 4 | 30 sec. |
| ROOM LAMP ON TIME SET | MODE 1 | 0.5 sec. |
| | MODE 2* | 1 sec. |
| | MODE 3 | 2 sec. |
| | MODE 4 | 3 sec. |
| | MODE 5 | 0 sec. |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Service item | Setting item | Setting | |
|------------------------|--------------|---|---|
| ROOM LAMP OFF TIME SET | MODE 1 | 0.5 sec. | Sets the interior room lamp gradual dimming time. |
| | MODE 2 | 1 sec. | |
| | MODE 3 | 2 sec. | |
| | MODE 4* | 3 sec. | |
| | MODE 5 | 0 sec. | |
| R LAMP TIMER LOGIC SET | MODE 1* | Interior room lamp timer activates with synchronizing all doors. | |
| | MODE 2 | Interior room lamp timer activates with synchronizing the driver door only. | |

*: Factory setting

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor item [Unit] | Description |
|---------------------------|--|
| REQ SW-DR [On/Off] | The switch status input from request switch (driver side) |
| REQ SW-AS [On/Off] | The switch status input from front request switch (passenger side) |
| REQ SW-RR [On/Off] | NOTE: The item is indicated, but not monitored. |
| REQ SW-RL [On/Off] | |
| PUSH SW [On/Off] | The switch status input from push-button ignition switch |
| ACC RLY-F/B [On/Off] | NOTE: The item is indicated, but not monitored. |
| UNLK SEN-DR [On/Off] | Driver door unlock status input from unlock sensor |
| KEY SW-SLOT [On/Off] | Key switch status input from key slot |
| DOOR SW-DR [On/Off] | The switch status input from driver side door switch |
| DOOR SW-AS [On/Off] | The switch status input from passenger side door switch |
| DOOR SW-RR [On/Off] | NOTE: The item is indicated, but not monitored. |
| DOOR SW-RL [On/Off] | |
| DOOR SW-BK [On/Off] | The switch status input from trunk room lamp switch |
| CDL LOCK SW [On/Off] | Lock switch status received from the door lock and unlock switch |
| CDL UNLOCK SW [On/Off] | Unlock switch status received from the door lock and unlock switch |
| KEY CYL LK-SW [On/Off] | Lock switch status received from key cylinder switch |
| KEY CYL UN-SW [On/Off] | Unlock switch status received from key cylinder switch |
| TRNK/HAT MNTR [On/Off] | NOTE: The item is indicated, but not monitored. |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Monitor item [Unit] | Description |
|------------------------|--|
| RKE-LOCK [On/Off] | Lock signal status received from remote keyless entry receiver |
| RKE-UNLOCK [On/Off] | Unlock signal status received from remote keyless entry receiver |

ACTIVE TEST

| Test item | Operation | Description |
|-------------------|-----------|--|
| INT LAMP | On | Outputs the interior room lamp control signal to turn map lamp and cargo area courtesy light ON (Map lamp switch is in DOOR position). |
| | Off | Stops the interior room lamp control signal to turn map lamp and cargo area courtesy light OFF. |
| STEP LAMP TEST | On | NOTE: The item is displayed, but cannot be tested. |
| | Off | |
| LUGGAGE LAMP TEST | On | Outputs the trunk room lamp control signal to turn the trunk room lamp ON. |
| | Off | Stops the trunk room lamp control signal to turn the trunk room lamp OFF. |

HEADLAMP

HEADLAMP : CONSULT Function (BCM - HEAD LAMP)

INFOID:000000008838340

WORK SUPPORT

| Service item | Setting item | Setting |
|------------------------|--------------|--|
| BATTERY SAVER SET | On* | With the exterior lamp battery saver function |
| | Off | Without the exterior lamp battery saver function |
| ILL DELAY SET | MODE 1* | 45 sec. |
| | MODE 2 | Without the function |
| | MODE 3 | 30 sec. |
| | MODE 4 | 60 sec. |
| | MODE 5 | 90 sec. |
| | MODE 6 | 120 sec. |
| | MODE 7 | 150 sec. |
| | MODE 8 | 180 sec. |
| CUSTOM A/LIGHT SETTING | MODE 1* | Normal |
| | MODE 2 | More sensitive setting than normal setting (Turns ON earlier than normal operation.) |
| | MODE 3 | More sensitive setting than MODE 2 (Turns ON earlier than MODE 2.) |
| | MODE 4 | Less sensitive setting than normal setting (Turns ON later than normal operation.) |

*: Factory setting

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor item [Unit] | Description |
|--|--|
| PUSH SW [On/Off] | The switch status input from push-button ignition switch |
| ENGINE STATE [Stop/Stall/Crank/Run] | The engine status received from ECM with CAN communication |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Monitor item [Unit] | Description |
|---------------------------|---|
| VEH SPEED 1 [km/h] | The value of the vehicle speed received from combination meter with CAN communication |
| KEY SW-SLOT [On/Off] | Key switch status input from key slot |
| TURN SIGNAL R [On/Off] | Each switch status that BCM judges from the combination switch reading function |
| TURN SIGNAL L [On/Off] | |
| TAIL LAMP SW [On/Off] | |
| HI BEAM SW [On/Off] | |
| HEAD LAMP SW1 [On/Off] | |
| HEAD LAMP SW2 [On/Off] | |
| PASSING SW [On/Off] | |
| AUTO LIGHT SW [On/Off] | |
| FR FOG SW [On/Off] | NOTE: The item is indicated, but not monitored. |
| RR FOG SW [On/Off] | Each switch status that BCM judges from the combination switch reading function |
| DOOR SW-DR [On/Off] | The switch status input from driver side door switch |
| DOOR SW-AS [On/Off] | The switch status input from passenger side door switch |
| DOOR SW-RR [On/Off] | NOTE: The item is indicated, but not monitored. |
| DOOR SW-RL [On/Off] | |
| DOOR SW-BK [On/Off] | |
| OPTICAL SENSOR [V] | The value of exterior brightness voltage input from the optical sensor |

ACTIVE TEST

| Test item | Operation | Description |
|-------------|-----------|--|
| TAIL LAMP | On | Transmits the position light request signal to IPDM E/R with CAN communication to turn the tail lamp ON. |
| | Off | Stops the position light request signal transmission. |
| HEAD LAMP | Hi | Transmits the high beam request signal with CAN communication to turn the head-lamp (HI). |
| | Low | Transmits the low beam request signal with CAN communication to turn the head-lamp (LO). |
| | Off | Stops the high & low beam request signal transmission. |
| FR FOG LAMP | On | Transmits the daytime running light request signal with CAN communication to turn the daytime running light. |
| | Off | Stops the daytime running light request signal transmission. |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Test item | Operation | Description |
|-----------------------|-----------|---|
| RR FOG LAMP | On | <ul style="list-style-type: none"> Outputs the voltage to turn the rear fog lamp ON. Transmits the rear fog lamp status signal to the combination meter with CAN communication to turn the rear fog lamp indicator lamp ON. |
| | Off | <ul style="list-style-type: none"> Stops the voltage to turn the rear fog lamp OFF. Stops the rear fog lamp status signal transmission. |
| DAYTIME RUNNING LIGHT | On | NOTE: The item is indicated, but cannot be tested. |
| | Off | |
| CORNERING LAMP | RH | NOTE: The item is indicated, but cannot be tested. |
| | LH | |
| | Off | |
| ILL DIM SIGNAL | On | NOTE: The item is indicated, but cannot be tested. |
| | Off | |

WIPER

WIPER : CONSULT Function (BCM - WIPER)

INFOID:000000008839337

WORK SUPPORT

| Service item | Setting item | Description |
|---------------------|--------------|--|
| WIPER SPEED SETTING | On | With vehicle speed (Front wiper intermittent time linked with the vehicle speed and wiper intermittent dial position) |
| | Off* | Without vehicle speed (Front wiper intermittent time linked with the wiper intermittent dial position) |

*:Factory setting

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor Item [Unit] | Description |
|---------------------------|---|
| PUSH SW [Off/On] | The switch status input from push-button ignition switch. |
| VEH SPEED 1 [km/h] | The value of the vehicle speed signal received from combination meter with CAN communication. |
| FR WIPER HI [Off/On] | Each switch status that BCM judges from the combination switch reading function. |
| FR WIPER LOW [Off/On] | |
| FR WASHER SW [Off/On] | |
| FR WIPER INT [Off/On] | |
| FR WIPER STOP [Off/On] | Front wiper motor (stop position) status received from IPDM E/R with CAN communication. |
| INT VOLUME [1 - 7] | Each switch status that BCM judges from the combination switch reading function. |

ACTIVE TEST

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Test item | Operation | Description |
|-----------|-----------|---|
| FR WIPER | Hi | Transmits the front wiper request signal (HI) to IPDM E/R with CAN communication to operate the front wiper HI operation. |
| | Lo | Transmits the front wiper request signal (LO) to IPDM E/R with CAN communication to operate the front wiper LO operation. |
| | INT | Transmits the front wiper request signal (INT) to IPDM E/R with CAN communication to operate the front wiper INT operation. |
| | Off | Stops transmitting the front wiper request signal to stop the front wiper operation. |

FLASHER

FLASHER : CONSULT Function (BCM - FLASHER)

INFOID:000000008838341

WORK SUPPORT

| Service item | Setting item | Setting |
|--------------------|--------------|--|
| HAZARD ANSWER BACK | Lock Only* | With locking only |
| | Unlk Only | With unlocking only |
| | Lock/Unlk | With locking/unlocking |
| | Off | Without the function |
| | | Sets the hazard warning lamp answer back function when the door is lock/unlock with the request switch or the key fob. |

*: Factory setting

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor item [Unit] | Description |
|---------------------------|--|
| REQ SW-DR [On/Off] | The switch status input from the request switch (driver side) |
| REQ SW-AS [On/Off] | The switch status input from the request switch (passenger side) |
| PUSH SW [On/Off] | The switch status input from the push-button ignition switch |
| TURN SIGNAL R [On/Off] | Each switch condition that BCM judges from the combination switch reading function |
| TURN SIGNAL L [On/Off] | |
| HAZARD SW [On/Off] | The switch status input from the hazard switch |
| RKE-LOCK [On/Off] | Lock signal status received from the remote keyless entry receiver |
| RKE-UNLOCK [On/Off] | Unlock signal status received from the remote keyless entry receiver |
| RKE-PANIC [On/Off] | Panic alarm signal status received from the remote keyless entry receiver |

ACTIVE TEST

| Test item | Operation | Description |
|-----------|-----------|--|
| FLASHER | RH | Outputs the voltage to turn the right side turn signal lamps ON. |
| | LH | Outputs the voltage to turn the left side turn signal lamps ON. |
| | Off | Stops the voltage to turn the turn signal lamps OFF. |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

COMB SW

COMB SW : CONSULT Function (BCM - COMB SW)

INFOID:000000008196570

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor item [UNIT] | Description |
|----------------------------|--|
| FR WIPER HI [Off/On] | Displays the status of the FR WIPER HI switch in combination switch judged by BCM with the combination switch reading function. |
| FR WIPER LOW [Off/On] | Displays the status of the FR WIPER LOW switch in combination switch judged by BCM with the combination switch reading function. |
| FR WASHER SW [Off/On] | Displays the status of the FR WASHER switch in combination switch judged by BCM with the combination switch reading function. |
| FR WIPER INT [Off/On] | Displays the status of the FR WIPER INT switch in combination switch judged by BCM with the combination switch reading function. |
| FR WIPER STOP [Off/On] | Displays the status of the front wiper stop position signal received from IPDM E/R via CAN communication. |
| INT VOLUME [1 - 7] | Displays the status of wiper intermittent dial position judged by BCM with the combination switch reading function. |
| TURN SIGNAL R [Off/On] | Displays the status of the TURN RH switch in combination switch judged by BCM with the combination switch reading function. |
| TURN SIGNAL L [Off/On] | Displays the status of the TURN LH switch in combination switch judged by BCM with the combination switch reading function. |
| TAIL LAMP SW [Off/On] | Displays the status of the TAIL LAMP switch in combination switch judged by BCM with the combination switch reading function. |
| HI BEAM SW [Off/On] | Displays the status of the HI BEAM switch in combination switch judged by BCM with the combination switch reading function. |
| HEAD LAMP SW 1 [Off/On] | Displays the status of the HEADLAMP 1 switch in combination switch judged by BCM with the combination switch reading function. |
| HEAD LAMP SW 2 [Off/On] | Displays the status of the HEADLAMP 2 switch in combination switch judged by BCM with the combination switch reading function. |
| PASSING SW [Off/On] | Displays the status of the PASSING switch in combination switch judged by BCM with the combination switch reading function. |
| AUTO LIGHT SW [Off/On] | Displays the status of the AUTO LIGHT switch in combination switch judged by BCM with the combination switch reading function. |
| FR FOG SW [Off/On] | NOTE: The item is indicated, but not monitored. |
| RR FOG SW [Off/On] | Displays the status of the RR FOG switch in combination switch judged by BCM with the combination switch reading function. |

INTELLIGENT KEY

INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY) (For Coupe)

INFOID:000000008838332

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Monitor item | Description |
|--------------------------|--|
| CONFIRM KEY FOB ID | It can be checked whether Intelligent Key ID code is registered or not in this mode |
| AUTO LOCK SET | Auto door lock time can be changed in this mode <ul style="list-style-type: none"> • MODE 1: 1 minute • MODE 2: 5 minutes • MODE 3: 30 seconds • MODE 4: 2 minutes |
| LOCK/UNLOCK BY I-KEY | Door lock/unlock function by door request switch (driver side, passenger side and back door side/trunk lid*) mode can be changed to operate (On) or not operate (Off) in this mode |
| ENGINE START BY I-KEY | Engine start function mode can be changed to operate (On) or not operate (Off) with this mode |
| TRUNK/GLASS HATCH OPEN | Buzzer reminder function mode by back door opener switch/ trunk lid opener switch* can be changed to operate (ON) or not operate (OFF) with this mode |
| PANIC ALARM SET | Panic alarm button pressing time on Intelligent Key remote control button can be selected from the following with this mode <ul style="list-style-type: none"> • MODE 1: 0.5 sec. • MODE 2: Non-operation • MODE 3: 1.5 sec. |
| TAKE OUT FROM WIN WARN | NOTE: This item is displayed, but cannot be monitored |
| PW DOWN SET | Unlock button pressing time on Intelligent Key button can be selected from the following with this mode <ul style="list-style-type: none"> • MODE 1: 3 sec. • MODE 2: Non-operation • MODE 3: 5 sec. |
| TRUNK OPEN DELAY | NOTE: This item is displayed, but cannot be supported |
| LO- BATT OF KEY FOB WARN | Intelligent Key low battery warning mode can be changed to operate (On) or not operate (Off) with this mode |
| ANTI KEY LOCK IN FUNCTI | Key reminder function mode can be changed to operate (On) or not operate (Off) with this mode |
| HAZARD ANSWER BACK | Hazard reminder function mode can be selected from the following with this mode <ul style="list-style-type: none"> • LOCK ONLY: Door lock operation only • UNLOCK ONLY: Door unlock operation only • LOCK/UNLOCK: Lock/unlock operation • OFF: Non-operation |
| ANS BACK I-KEY LOCK | Buzzer reminder function (lock operation) mode by door request switch (driver side, passenger side and back door side/trunk lid*) can be selected from the following with this mode <ul style="list-style-type: none"> • Horn chirp: Sound horn • Buzzer: Sound Intelligent Key warning buzzer • OFF: Non-operation |
| ANS BACK I-KEY UNLOCK | Buzzer reminder function (unlock operation) mode by door request switch (driver side, passenger side and back door side/trunk lid*) can be changed to operate (On) or not operate (Off) with this mode |
| SHORT CRANKING OUTPUT | Starter motor can be forcibly activated |
| INSIDE ANT DIAGNOSIS | This function allows inside key antenna self-diagnosis |
| HORN WITH KEYLESS LOCK | Horn reminder function mode by Intelligent Key button can be changed to operate (On) or not operate (Off) with this mode |

*: For roadster models

SELF-DIAG RESULT

Refer to [BCS-88. "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Monitor Item | Condition | |
|-----------------|--|-----|
| REQ SW -DR | Indicates [On/Off] condition of driver side door request switch | A |
| REQ SW -AS | Indicates [On/Off] condition of passenger side door request switch | |
| REQ SW -BD/TR | Indicates [On/Off] condition of back door request switch/trunk lid door request switch*4 | B |
| PUSH SW | Indicates [On/Off] condition of push-button ignition switch | |
| IGN RLY2 -F/B | NOTE: This item is displayed, but cannot be monitored | C |
| ACC RLY-F/B | NOTE: This item is displayed, but cannot be monitored | |
| CLUCH SW*1 | Indicates [On/Off] condition of clutch switch | D |
| BRAKE SW 1 | Indicates [On/Off]*3 condition of brake switch power supply | |
| BRAKE SW 2 | Indicates [On/Off] condition of brake switch | E |
| DETE/CANCL SW*2 | Indicates [On/Off] condition of P position | |
| SFT PN/N SW*2 | Indicates [On/Off] condition of P or N position | F |
| S/L -LOCK | NOTE: This item is displayed, but cannot be monitored | |
| S/L -UNLOCK | NOTE: This item is displayed, but cannot be monitored | G |
| S/L RELAY -F/B | NOTE: This item is displayed, but cannot be monitored | |
| UNLK SEN -DR | Indicates [On/Off] condition of driver door UNLOCK status | H |
| PUSH SW -IPDM | Indicates [On/Off] condition of push-button ignition switch | |
| IGN RLY1 -F/B | Indicates [On/Off] condition of ignition relay 1 | I |
| DETE SW -IPDM*2 | Indicates [On/Off] condition of P position | |
| SFT PN -IPDM*2 | Indicates [On/Off] condition of P or N position | J |
| SFT P -MET*2 | Indicates [On/Off] condition of P position | |
| SFT N -MET*2 | Indicates [On/Off] condition of N position | K |
| ENGINE STATE | Indicates [STOP/STALL/CRANK/RUN] condition of engine states | |
| S/L LOCK-IPDM | NOTE: This item is displayed, but cannot be monitored | L |
| S/L UNLK-IPDM | NOTE: This item is displayed, but cannot be monitored | |
| S/L RELAY-REQ | NOTE: This item is displayed, but cannot be monitored | BCS |
| VEH SPEED 1 | Display the vehicle speed signal received from combination meter by numerical value [km/h] | |
| VEH SPEED 2 | Display the vehicle speed signal received from ABS or VDC or TCM by numerical value [km/h] | N |
| DOOR STAT-DR | Indicates [LOCK/READY/UNLOCK] condition of driver side door status | |
| DOOR STAT-AS | Indicates [LOCK/READY/UNLOCK] condition of passenger side door status | O |
| ID OK FLAG | Indicates [Set/Reset] condition of key ID | |
| PRMT ENG STRT | Indicates [Set/Reset] condition of engine start possibility | |
| PRMT RKE STRT | NOTE: This item is displayed, but cannot be monitored | P |
| KEY SW -SLOT | Indicates [On/Off] condition of key slot | |
| TRNK/HAT MNTR | NOTE: This item is displayed, but cannot be monitored | |
| RKE-LOCK | Indicates [On/Off] condition of LOCK signal from Intelligent Key | |
| RKE-UNLOCK | Indicates [On/Off] condition of UNLOCK signal from Intelligent Key | |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Monitor Item | Condition |
|---------------|---|
| RKE-TR/BD | NOTE: This item is displayed, but cannot be monitored |
| RKE-PANIC | Indicates [On/Off] condition of PANIC button of Intelligent Key |
| RKE-P/W OPEN | Indicates [On/Off] condition of P/W DOWN signal from Intelligent Key |
| RKE-MODE CHG | Indicates [On/Off] condition of MODE CHANGE signal from Intelligent Key |
| RKE OPE COUN1 | When remote keyless entry receiver (front) receives the signal transmitted while operating on Intelligent Key, the numerical value start changing |
| RKE OPE COUN2 | NOTE: This item is displayed, but cannot be monitored |
| REVERSE SW*1 | Indicates [On/Off] condition of R position |

*1: It is displayed but does not operate on A/T models.

*2: It is displayed but does not operate on M/T models.

*3: OFF is displayed when brake pedal is depressed while brake switch power supply is OFF.

*4: For roadster models

ACTIVE TEST

| Test item | Description |
|--------------------|--|
| BATTERY SAVER | This test is able to check interior room lamp operation The interior room lamp is activated after "On" on CONSULT screen is touched |
| PW REMOTO DOWN SET | This test is able to check power window down operation The power window down is activated after "On" on CONSULT screen is touched |
| OUTSIDE BUZZER | This test is able to check Intelligent Key warning buzzer operation The Intelligent Key warning buzzer is activated after "On" on CONSULT screen is touched |
| INSIDE BUZZER | This test is able to check warning chime in combination meter operation <ul style="list-style-type: none"> Take away warning chime sounds when "Take out" on CONSULT screen is touched Key warning chime sounds when "Key" on CONSULT screen is touched OFF position warning chime sounds when "Knob" on CONSULT screen is touched |
| INDICATOR | This test is able to check warning lamp operation <ul style="list-style-type: none"> "KEY" Warning lamp illuminates when "Key on" on CONSULT screen is touched "KEY" Warning lamp blinks when "Key ind" on CONSULT screen is touched |
| INT LAMP | This test is able to check interior room lamp operation The interior room lamp is activated after "On" on CONSULT screen is touched |
| LCD | This test is able to check meter display information <ul style="list-style-type: none"> Engine start information displays when "BP N" on CONSULT screen is touched Engine start information displays when "BP I" on CONSULT screen is touched Key ID warning displays when "ID NG" on CONSULT screen is touched ROTAT: This item is displayed, but cannot be tested. P position warning displays when "SFT P" on CONSULT screen is touched Intelligent Key insert information displays when "INSRT" on CONSULT screen is touched Intelligent Key low battery warning displays when "BATT" on CONSULT screen is touched Take away through window warning displays when "NO KY" on CONSULT screen is touched Take away warning display when "OUTKEY" on CONSULT screen is touched OFF position warning display when "LK WN" on CONSULT screen is touched |
| TRUNK/GLASS HATCH | NOTE: This item is displayed, but cannot be tested |
| FLASHER | This test is able to check hazard warning lamp operation The hazard warning lamps are activated after "LH/RH/Off" on CONSULT screen is touched |
| HORN | This test is able to check horn operation The horn is activated after "On" on CONSULT screen is touched |
| P RANGE*1 | This test is able to check A/T shift selector power supply A/T shift selector power is supplied when "On" on CONSULT screen is touched |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Test item | Description |
|------------------|--|
| ENGINE SW ILLUMI | This test is able to check push-ignition switch illumination operation Push-ignition switch illumination illuminates when "On" on CONSULT screen is touched |
| LOCK INDICATOR | This test is able to check LOCK indicator in push-ignition switch operation LOCK indicator in push-ignition switch illuminates when "On" on CONSULT screen is touched |
| ACC INDICATOR | This test is able to check ACC indicator in push-ignition switch operation ACC indicator in push-ignition switch illuminates when "On" on CONSULT screen is touched |
| IGNITION ON IND | This test is able to check ON indicator in push-ignition switch operation ON indicator in push-ignition switch illuminates when "On" on CONSULT screen is touched |
| KEY SLOT ILLUMI | This test is able to check key slot illumination operation Key slot illumination blinks when "On" on CONSULT screen is touched |
| TRUNK/BACK DOOR | This test is able to check back door opener actuator/ trunk lid opener actuator* ² open operation This actuator opens when "Open" on CONSULT screen is touched |

*1: It is displayed but does not operate on M/T models.

*2: For roadster models

INTELLIGENT KEY : CONSULT Function (BCM - INTELLIGENT KEY) (For Roadster)

INFOID:000000008838335

WORK SUPPORT

| Monitor item | Description |
|--------------------------|---|
| CONFIRM KEY FOB ID | It can be checked whether Intelligent Key ID code is registered or not in this mode |
| AUTO LOCK SET | Auto door lock time can be changed in this mode <ul style="list-style-type: none"> • MODE 1: 1 minute • MODE 2: 5 minutes • MODE 3: 30 seconds • MODE 4: 2 minutes |
| LOCK/UNLOCK BY I-KEY | Door lock/unlock function by door request switch (driver side, passenger side and back door side/trunk lid*) mode can be changed to operate (On) or not operate (Off) in this mode |
| ENGINE START BY I-KEY | Engine start function mode can be changed to operate (On) or not operate (Off) with this mode |
| TRUNK/GLASS HATCH OPEN | Buzzer reminder function mode by back door opener switch/ trunk lid opener switch* can be changed to operate (ON) or not operate (OFF) with this mode |
| PANIC ALARM SET | Panic alarm button pressing time on Intelligent Key remote control button can be selected from the following with this mode <ul style="list-style-type: none"> • MODE 1: 0.5 sec. • MODE 2: Non-operation • MODE 3: 1.5 sec. |
| TAKE OUT FROM WIN WARN | NOTE: This item is displayed, but cannot be monitored |
| PW DOWN SET | Unlock button pressing time on Intelligent Key button can be selected from the following with this mode <ul style="list-style-type: none"> • MODE 1: 3 sec. • MODE 2: Non-operation • MODE 3: 5 sec. |
| TRUNK OPEN DELAY | NOTE: This item is displayed, but cannot be supported |
| LO- BATT OF KEY FOB WARN | Intelligent Key low battery warning mode can be changed to operate (On) or not operate (Off) with this mode |
| ANTI KEY LOCK IN FUNCTI | Key reminder function mode can be changed to operate (On) or not operate (Off) with this mode |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Monitor item | Description |
|------------------------|--|
| HAZARD ANSWER BACK | Hazard reminder function mode can be selected from the following with this mode <ul style="list-style-type: none"> • LOCK ONLY: Door lock operation only • UNLOCK ONLY: Door unlock operation only • LOCK/UNLOCK: Lock/unlock operation • OFF: Non-operation |
| ANS BACK I-KEY LOCK | Buzzer reminder function (lock operation) mode by door request switch (driver side, passenger side and back door side/trunk lid*) can be selected from the following with this mode <ul style="list-style-type: none"> • Horn chirp: Sound horn • Buzzer: Sound Intelligent Key warning buzzer • OFF: Non-operation |
| ANS BACK I-KEY UNLOCK | Buzzer reminder function (unlock operation) mode by door request switch (driver side, passenger side and back door side/trunk lid*) can be changed to operate (On) or not operate (Off) with this mode |
| SHORT CRANKING OUTPUT | Starter motor can be forcibly activated |
| INSIDE ANT DIAGNOSIS | This function allows inside key antenna self-diagnosis |
| HORN WITH KEYLESS LOCK | Horn reminder function mode by Intelligent Key button can be changed to operate (On) or not operate (Off) with this mode |

*: For roadster models

SELF-DIAG RESULT

Refer to [BCS-88, "DTC Index"](#).

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor Item | Condition |
|-----------------|---|
| REQ SW -DR | Indicates [On/Off] condition of driver side door request switch |
| REQ SW -AS | Indicates [On/Off] condition of passenger side door request switch |
| REQ SW -BD/TR | Indicates [On/Off] condition of back door request switch/trunk lid door request switch**4 |
| PUSH SW | Indicates [On/Off] condition of push-button ignition switch |
| IGN RLY2 -F/B | NOTE: This item is displayed, but cannot be monitored |
| ACC RLY-F/B | NOTE: This item is displayed, but cannot be monitored |
| CLUCH SW*1 | Indicates [On/Off] condition of clutch switch |
| BRAKE SW 1 | Indicates [On/Off]**3 condition of brake switch power supply |
| BRAKE SW 2 | Indicates [On/Off] condition of brake switch |
| DETE/CANCL SW*2 | Indicates [On/Off] condition of P position |
| SFT PN/N SW*2 | Indicates [On/Off] condition of P or N position |
| S/L -LOCK | NOTE: This item is displayed, but cannot be monitored |
| S/L -UNLOCK | NOTE: This item is displayed, but cannot be monitored |
| S/L RELAY -F/B | NOTE: This item is displayed, but cannot be monitored |
| UNLK SEN -DR | Indicates [On/Off] condition of driver door UNLOCK status |
| PUSH SW -IPDM | Indicates [On/Off] condition of push-button ignition switch |
| IGN RLY1 -F/B | Indicates [On/Off] condition of ignition relay 1 |
| DETE SW -IPDM*2 | Indicates [On/Off] condition of P position |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Monitor Item | Condition |
|----------------|---|
| SFT PN -IPDM*2 | Indicates [On/Off] condition of P or N position |
| SFT P -MET*2 | Indicates [On/Off] condition of P position |
| SFT N -MET*2 | Indicates [On/Off] condition of N position |
| ENGINE STATE | Indicates [STOP/STALL/CRANK/RUN] condition of engine states |
| S/L LOCK-IPDM | NOTE: This item is displayed, but cannot be monitored |
| S/L UNLK-IPDM | NOTE: This item is displayed, but cannot be monitored |
| S/L RELAY-REQ | NOTE: This item is displayed, but cannot be monitored |
| VEH SPEED 1 | Display the vehicle speed signal received from combination meter by numerical value [km/h] |
| VEH SPEED 2 | Display the vehicle speed signal received from ABS or VDC or TCM by numerical value [km/h] |
| DOOR STAT-DR | Indicates [LOCK/READY/UNLOCK] condition of driver side door status |
| DOOR STAT-AS | Indicates [LOCK/READY/UNLOCK] condition of passenger side door status |
| ID OK FLAG | Indicates [Set/Reset] condition of key ID |
| PRMT ENG STRT | Indicates [Set/Reset] condition of engine start possibility |
| PRMT RKE STRT | NOTE: This item is displayed, but cannot be monitored |
| KEY SW -SLOT | Indicates [On/Off] condition of key slot |
| TRNK/HAT MNTR | NOTE: This item is displayed, but cannot be monitored |
| RKE-LOCK | Indicates [On/Off] condition of LOCK signal from Intelligent Key |
| RKE-UNLOCK | Indicates [On/Off] condition of UNLOCK signal from Intelligent Key |
| RKE-TR/BD | NOTE: This item is displayed, but cannot be monitored |
| RKE-PANIC | Indicates [On/Off] condition of PANIC button of Intelligent Key |
| RKE-P/W OPEN | Indicates [On/Off] condition of P/W DOWN signal from Intelligent Key |
| RKE-MODE CHG | Indicates [On/Off] condition of MODE CHANGE signal from Intelligent Key |
| RKE OPE COUN1 | When remote keyless entry receiver (front) receives the signal transmitted while operating on Intelligent Key, the numerical value start changing |
| RKE OPE COUN2 | NOTE: This item is displayed, but cannot be monitored |
| REVERSE SW*1 | Indicates [On/Off] condition of R position |

*1: It is displayed but does not operate on A/T models.

*2: It is displayed but does not operate on M/T models.

*3: OFF is displayed when brake pedal is depressed while brake switch power supply is OFF.

*4: For roadster models

ACTIVE TEST

| Test item | Description |
|--------------------|--|
| BATTERY SAVER | This test is able to check interior room lamp operation The interior room lamp is activated after "On" on CONSULT screen is touched |
| PW REMOTO DOWN SET | This test is able to check power window down operation The power window down is activated after "On" on CONSULT screen is touched |
| OUTSIDE BUZZER | This test is able to check Intelligent Key warning buzzer operation The Intelligent Key warning buzzer is activated after "On" on CONSULT screen is touched |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Test item | Description |
|-------------------|--|
| INSIDE BUZZER | This test is able to check warning chime in combination meter operation <ul style="list-style-type: none"> Take away warning chime sounds when "Take out" on CONSULT screen is touched Key warning chime sounds when "Key" on CONSULT screen is touched OFF position warning chime sounds when "Knob" on CONSULT screen is touched |
| INDICATOR | This test is able to check warning lamp operation <ul style="list-style-type: none"> "KEY" Warning lamp illuminates when "Key on" on CONSULT screen is touched "KEY" Warning lamp blinks when "Key ind" on CONSULT screen is touched |
| INT LAMP | This test is able to check interior room lamp operation The interior room lamp is activated after "On" on CONSULT screen is touched |
| LCD | This test is able to check meter display information <ul style="list-style-type: none"> Engine start information displays when "BP N" on CONSULT screen is touched Engine start information displays when "BP I" on CONSULT screen is touched Key ID warning displays when "ID NG" on CONSULT screen is touched ROTAT: This item is displayed, but cannot be tested. P position warning displays when "SFT P" on CONSULT screen is touched Intelligent Key insert information displays when "INSRT" on CONSULT screen is touched Intelligent Key low battery warning displays when "BATT" on CONSULT screen is touched Take away through window warning displays when "NO KY" on CONSULT screen is touched Take away warning display when "OUTKEY" on CONSULT screen is touched OFF position warning display when "LK WN" on CONSULT screen is touched |
| TRUNK/GLASS HATCH | NOTE: This item is displayed, but cannot be tested |
| FLASHER | This test is able to check hazard warning lamp operation The hazard warning lamps are activated after "LH/RH/Off" on CONSULT screen is touched |
| HORN | This test is able to check horn operation The horn is activated after "On" on CONSULT screen is touched |
| P RANGE*1 | This test is able to check A/T shift selector power supply A/T shift selector power is supplied when "On" on CONSULT screen is touched |
| ENGINE SW ILLUMI | This test is able to check push-ignition switch illumination operation Push-ignition switch illumination illuminates when "On" on CONSULT screen is touched |
| LOCK INDICATOR | This test is able to check LOCK indicator in push-ignition switch operation LOCK indicator in push-ignition switch illuminates when "On" on CONSULT screen is touched |
| ACC INDICATOR | This test is able to check ACC indicator in push-ignition switch operation ACC indicator in push-ignition switch illuminates when "On" on CONSULT screen is touched |
| IGNITION ON IND | This test is able to check ON indicator in push-ignition switch operation ON indicator in push-ignition switch illuminates when "On" on CONSULT screen is touched |
| KEY SLOT ILLUMI | This test is able to check key slot illumination operation Key slot illumination blinks when "On" on CONSULT screen is touched |
| TRUNK/BACK DOOR | This test is able to check back door opener actuator/ trunk lid opener actuator*2 open operation This actuator opens when "Open" on CONSULT screen is touched |

*1: It is displayed but does not operate on M/T models.

*2: For roadster models

BCM

BCM : CONSULT Function (BCM - BCM)

INFOID:000000008196573

WORK SUPPORT

| Item | Description |
|---------------------|---|
| RESET SETTING VALUE | Return a value set with Work Support of each system to a default value in factory shipment. |

IMMU

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

IMMU : CONSULT Function (BCM - IMMU)

INFOID:000000008838338

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor item | Content |
|----------------|---|
| CONFIRM ID ALL | Indicates [YET] at all time. Switches to [DONE] when a registered Intelligent Key is inserted into the key slot. |
| CONFIRM ID4 | |
| CONFIRM ID3 | |
| CONFIRM ID2 | |
| CONFIRM ID1 | |
| TP 4 | Indicates the number of IDs that are registered. |
| TP 3 | |
| TP 2 | |
| TP 1 | |
| PUSH SW | Indicates [ON/OFF] condition of push-button ignition switch. |
| KEY SW -SLOT | Indicates [ON/OFF] condition of key slot. |

ACTIVE TEST

| Test item | Description |
|-----------|---|
| THEFT IND | This test is able to check security indicator lamp operation. The lamp is turned on when "ON" on CONSULT screen touched. |

BATTERY SAVER

BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER) (Coupe Models)

INFOID:000000008838347

WORK SUPPORT

| Service item | Setting item | Setting |
|-----------------------|--------------|---|
| BATTERY SAVER SET | On* | With the exterior lamp battery saver function |
| | Off | Without the exterior lamp battery saver function |
| ROOM LAMP BAT SAV SET | On* | With the interior room lamp battery saver function |
| | Off | Without the interior room lamp battery saver function |
| ROOM LAMP TIMER SET | MODE 1 | 30 min. |
| | MODE 2 | 60 min. |
| | MODE 3* | 15 min. |
| | | Sets the interior room lamp battery saver timer operating time. |

*: Factory setting

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Monitor item [Unit] | Description |
|---------------------------|--|
| REQ SW-DR [On/Off] | The switch status input from request switch (driver side) |
| REQ SW-AS [On/Off] | The switch status input from front request switch (passenger side) |
| REQ SW-RR [On/Off] | NOTE: The item is indicated, but not monitored. |
| REQ SW-RL [On/Off] | |
| PUSH SW [On/Off] | The switch status input from push-button ignition switch |
| ACC RLY-F/B [On/Off] | NOTE: The item is indicated, but not monitored. |
| KEY SW-SLOT [On/Off] | Key switch status input from key slot |
| UNLK SEN-DR [On/Off] | Driver door unlock status input from unlock sensor |
| DOOR SW-DR [On/Off] | The switch status input driver side front door switch |
| DOOR SW-AS [On/Off] | The switch status input from passenger side door switch |
| DOOR SW-RR [On/Off] | NOTE: The item is indicated, but not monitored. |
| DOOR SW-RL [On/Off] | |
| DOOR SW-BK [On/Off] | The switch status input from back door switch |
| CDL LOCK SW [On/Off] | Lock switch status received from the door lock and unlock switch |
| CDL UNLOCK SW [On/Off] | Unlock switch status received from the door lock and unlock switch |
| KEY CYL LK-SW [On/Off] | Lock switch status received from key cylinder switch |
| KEY CYL UN-SW [On/Off] | Unlock switch status received from key cylinder switch |
| TRNK/HAT MNTR [On/Off] | NOTE: The item is indicated, but not monitored. |
| RKE-LOCK [On/Off] | Lock signal status received from remote keyless entry receiver |
| RKE-UNLOCK [On/Off] | Unlock signal status received from remote keyless entry receiver |

ACTIVE TEST

| Test item | Operation | Description |
|---------------|-----------|---|
| BATTERY SAVER | Off | Cuts the interior room lamp power supply to turn interior room lamp OFF. |
| | On | Outputs the interior room lamp power supply to turn interior room lamp ON.* |

*: Each lamp switch is in ON position.

BATTERY SAVER : CONSULT Function (BCM - BATTERY SAVER) (Roadster Models)

INFOID:000000008838349

WORK SUPPORT

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Service item | Setting item | Setting | |
|-----------------------|--------------|---|---|
| BATTERY SAVER SET | On* | With the exterior lamp battery saver function | |
| | Off | Without the exterior lamp battery saver function | |
| ROOM LAMP BAT SAV SET | On* | With the interior room lamp battery saver function | |
| | Off | Without the interior room lamp battery saver function | |
| ROOM LAMP TIMER SET | MODE 1 | 30 min. | Sets the interior room lamp battery saver timer operating time. |
| | MODE 2 | 60 min. | |
| | MODE 3* | 15 min. | |

*: Factory setting

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor item [Unit] | Description |
|---------------------------|--|
| REQ SW-DR [On/Off] | The switch status input from request switch (driver side) |
| REQ SW-AS [On/Off] | The switch status input from front request switch (passenger side) |
| REQ SW-RR [On/Off] | NOTE: The item is indicated, but not monitored. |
| REQ SW-RL [On/Off] | |
| PUSH SW [On/Off] | The switch status input from push-button ignition switch |
| ACC RLY-F/B [On/Off] | NOTE: The item is indicated, but not monitored. |
| KEY SW-SLOT [On/Off] | Key switch status input from key slot |
| UNLK SEN-DR [On/Off] | Driver door unlock status input from unlock sensor |
| DOOR SW-DR [On/Off] | The switch status input driver side front door switch |
| DOOR SW-AS [On/Off] | The switch status input from passenger side door switch |
| DOOR SW-RR [On/Off] | NOTE: The item is indicated, but not monitored. |
| DOOR SW-RL [On/Off] | |
| DOOR SW-BK [On/Off] | The switch status input from trunk room lamp switch |
| CDL LOCK SW [On/Off] | Lock switch status received from the door lock and unlock switch |
| CDL UNLOCK SW [On/Off] | Unlock switch status received from the door lock and unlock switch |
| KEY CYL LK-SW [On/Off] | Lock switch status received from key cylinder switch |
| KEY CYL UN-SW [On/Off] | Unlock switch status received from key cylinder switch |
| TRNK/HAT MNTR [On/Off] | NOTE: The item is indicated, but not monitored. |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Monitor item [Unit] | Description |
|------------------------|--|
| RKE-LOCK [On/Off] | Lock signal status received from remote keyless entry receiver |
| RKE-UNLOCK [On/Off] | Unlock signal status received from remote keyless entry receiver |

ACTIVE TEST

| Test item | Operation | Description |
|---------------|-----------|---|
| BATTERY SAVER | Off | Cuts the interior room lamp power supply to turn interior room lamp OFF. |
| | On | Outputs the interior room lamp power supply to turn interior room lamp ON.* |

*: Each lamp switch is in ON position.

TRUNK

TRUNK : CONSULT Function (BCM - TRUNK) (For Coupe)

INFOID:000000008838333

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor Item | Contents |
|----------------|---|
| PUSH SW | Indicates [On/Off] condition of push-button ignition switch |
| UNLK SEN -DR | Indicates [On/Off] condition of driver door UNLOCK status |
| VEH SPEED 1 | Indicates [km/h] condition of vehicle speed signal from combination meter |
| KEY CYL SW-TR | NOTE: This item is displayed, but cannot be monitored |
| TR CANCEL SW*1 | Indicates [On/Off] condition of trunk lid cancel switch |
| TR/BD OPEN SW | Indicates [On/Off] condition of back door opener switch/trunk lid opener switch*2 |
| TRNK/HAT MNTR | NOTE: This item is displayed, but cannot be monitored |
| RKE-TR/BD | NOTE: This item is displayed, but cannot be monitored |

*1: It is displayed but does not operate on coupe models.

*2: For roadster models

ACTIVE TEST

| Test item | Description |
|-------------------|--|
| TRUNK/GLASS HATCH | NOTE: This item is displayed, but cannot be tested |

TRUNK : CONSULT Function (BCM - TRUNK) (For Roadster)

INFOID:000000008838336

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor Item | Contents |
|--------------|---|
| PUSH SW | Indicates [On/Off] condition of push-button ignition switch |
| UNLK SEN -DR | Indicates [On/Off] condition of driver door UNLOCK status |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Monitor Item | Contents |
|----------------|---|
| VEH SPEED 1 | Indicates [km/h] condition of vehicle speed signal from combination meter |
| KEY CYL SW-TR | NOTE: This item is displayed, but cannot be monitored |
| TR CANCEL SW*1 | Indicates [On/Off] condition of trunk lid cancel switch |
| TR/BD OPEN SW | Indicates [On/Off] condition of back door opener switch/trunk lid opener switch*2 |
| TRNK/HAT MNTR | NOTE: This item is displayed, but cannot be monitored |
| RKE-TR/BD | NOTE: This item is displayed, but cannot be monitored |

*1: It is displayed but does not operate on coupe models.

*2: For roadster models

ACTIVE TEST

| Test item | Description |
|-------------------|--|
| TRUNK/GLASS HATCH | NOTE: This item is displayed, but cannot be tested |

THEFT ALM

THEFT ALM : CONSULT Function (BCM - THEFT)

INFOID:0000000008838337

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitored Item | Description |
|----------------|---|
| REQ SW -DR | Indicates [ON/OFF] condition of door request switch (driver side). |
| REQ SW -AS | Indicates [ON/OFF] condition of door request switch (passenger side). |
| REQ SW -RR | NOTE: This is displayed even when it is not equipped. |
| REQ SW -RL | NOTE: This is displayed even when it is not equipped. |
| REQ SW -BD/TR | Indicates [ON/OFF] condition of back door request switch. |
| PUSH SW | Indicates [ON/OFF] condition of push-button ignition switch |
| UNLK SEN -DR | Indicates [ON/OFF] condition of driver door UNLOCK status. |
| KEY SW -SLOT | Indicates [ON/OFF] condition of key slot. |
| DOOR SW-DR | Indicates [ON/OFF] condition of driver side door switch. |
| DOOR SW-AS | Indicates [ON/OFF] condition of passenger side door switch. |
| DOOR SW-RR | NOTE: This is displayed even when it is not equipped. |
| DOOR SW-RL | NOTE: This is displayed even when it is not equipped. |
| DOOR SW-BK | Indicates [ON/OFF] condition of back door switch. |
| CDL LOCK SW | Indicates [ON/OFF] condition of lock signal from door lock/unlock switch LH and RH. |
| CDL UNLOCK SW | Indicates [ON/OFF] condition of unlock signal from door lock/unlock switch LH and RH. |
| TR/BD OPEN SW | Indicates [ON/OFF] condition of back door opener switch. |
| TRNK/HAT MNTR | NOTE: This is displayed even when it is not equipped. |
| RKE-LOCK | Indicates [ON/OFF] condition of LOCK signal from Intelligent Key. |

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Monitored Item | Description |
|----------------|---|
| RKE-UNLOCK | Indicates [ON/OFF] condition of UNLOCK signal from Intelligent Key. |
| RKE-TR/BD | NOTE: This is displayed even when it is not equipped. |

WORK SUPPORT

| Test Item | Description |
|--------------------|---|
| SECURITY ALARM SET | This mode is able to confirm and change security alarm ON-OFF setting. |
| THEFT ALM TRG | The switch which triggered vehicle security alarm is recorded. This mode is able to confirm and erase the record of vehicle security alarm. The trigger data can be erased by touching "CLEAR" on CONSULT screen. |

ACTIVE TEST

| Test Item | Description |
|-----------------------|--|
| THEFT IND | This test is able to check security indicator lamp operation. The lamp is turned on when "ON" on CONSULT screen is touched. |
| VEHICLE SECURITY HORN | This test is able to check vehicle security horn operation. The horns are activated for 0.5 seconds after "ON" on CONSULT screen is touched. |
| HEADLAMP(HI) | This test is able to check vehicle security lamp operation. The headlamps are activated for 0.5 seconds after "ON" on CONSULT screen is touched. |
| FLASHER | This test is able to check vehicle security hazard lamp operation. The hazard lamps are activated after "ON" on CONSULT screen is touched. |

RETAINED PWR

RETAINED PWR : CONSULT Function (BCM - RETAINED PWR)

INFOID:000000008838339

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor Item | Description |
|--------------|---|
| DOOR SW-DR | Indicates [ON/OFF] condition of driver side door switch. |
| DOOR SW-AS | Indicates [ON/OFF] condition of passenger side door switch. |

SIGNAL BUFFER

SIGNAL BUFFER : CONSULT Function (BCM - SIGNAL BUFFER)

INFOID:000000008196581

DATA MONITOR

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

| Monitor item [UNIT] | Description |
|---------------------|---|
| PUSH SW [Off/On] | Displays the status of the push-button ignition switch (push switch) judged by BCM. |

ACTIVE TEST

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

| Test item | Operation | Description |
|-----------------|-----------|--|
| OIL PRESSURE SW | Off | OFF |
| | On | BCM transmits the oil pressure switch signal to the combination meter via CAN communication, which illuminates the oil pressure warning lamp in the combination meter. |

AIR PRESSURE MONITOR

AIR PRESSURE MONITOR : CONSULT Function

INFOID:000000008838354

FUNCTION

The diagnosis functions (main functions) include the following: "WORK SUPPORT", "SELF DIAGNOSTIC RESULT", "DATA MONITOR" and "ACTIVE TEST".

| Diagnostic test mode | Function |
|------------------------|---|
| Work support | In this mode, it is possible to make quick and accurate adjustments by following the instructions on the CONSULT display. |
| Self diagnostic result | Receives self-diagnosis results from the BCM, and indicates DTCs and the number of malfunctions. |
| Data monitor | Receives input/output signals from the BCM and indicates and stores them to facilitate locating the causes of malfunctions. |
| Active test | Transmits command to the BCM to change output signals and check operation of output system. |

WORK SUPPORT MODE

Refer to [WT-18, "Work Procedure"](#).

SELF-DIAG RESULTS MODE

Refer to [BCS-88, "DTC Index"](#).

DATA MONITOR MODE

Screen of data monitor mode is displayed.

NOTE:

- When malfunction is detected, CONSULT perform REAL-TIME DIAGNOSIS. Also, any malfunction detected while in this mode will be displayed at real time.
- The following table includes information(items)inapplicable to this vehicle. For information(items)applicable to this vehicle, refer to CONSULT display items.

| Monitor item (Unit) | Remark |
|--|--|
| AIR PRESS FL (kPa), (kg/cm ²), (Psi) | Air pressure of tires |
| AIR PRESS FR (kPa), (kg/cm ²), (Psi) | |
| AIR PRESS RR (kPa), (kg/cm ²), (Psi) | |
| AIR PRESS RL (kPa), (kg/cm ²), (Psi) | |
| ID REGST FL1 | ID is registered: Done ID is not registered: Yet |
| ID REGST FR1 | |
| ID REGST RR1 | |
| ID REGST RL1 | |
| WARNING LAMP | Low tire pressure warning lamp ON: On Low tire pressure warning lamp OFF: Off |
| BUZZER | Combination meter buzzer ON: On Combination meter buzzer OFF: Off |

NOTE:

Before performing the self-diagnosis, be sure to register the ID, or erase the actual malfunction location may be different from that displayed on CONSULT.

DIAGNOSIS SYSTEM (BCM)

< SYSTEM DESCRIPTION >

ACTIVE TEST MODE

NOTE:

Before performing the self-diagnosis, be sure to register the ID, or erase the actual malfunction may be different from that displayed on CONSULT.

TEST ITEM LIST

| Test item | Content |
|-------------------|--|
| WARNING LAMP | This test is able to check to check that the low tire pressure warning lamp turns on. |
| ID REGIST WARNING | This test is able to check to check that the buzzer sounds or the low tire pressure warning lamp turns on. |
| FLASHER | This test is able to check to check that each turn signal lamp turns on. |
| HORN | This test is able to check to check that the horn sounds. |

U1000 CAN COMM

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

U1000 CAN COMM

Description

INFOID:000000008196583

CAN (Controller Area Network) is a serial communication line for real time applications. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Modern vehicle is equipped with many electronic control unit, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN H-line, CAN L-line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.
CAN Communication Signal Chart. Refer to [LAN-25, "CAN Communication Signal Chart"](#).

DTC Logic

INFOID:000000008196584

DTC DETECTION LOGIC

| DTC | CONSULT display description | DTC Detection Condition | Possible cause |
|-------|-----------------------------|--|--------------------------|
| U1000 | CAN COMM | When BCM cannot communicate CAN communication signal continuously for 2 seconds or more. | CAN communication system |

Diagnosis Procedure

INFOID:000000008196585

1.PERFORM SELF DIAGNOSTIC

1. Turn ignition switch ON and wait for 2 seconds or more.
2. Check "Self Diagnostic Result".

Is DTC "U1000" displayed?

- YES >> Refer to [LAN-15, "Trouble Diagnosis Flow Chart"](#).
NO >> Refer to [GI-45, "Intermittent Incident"](#).

A
B
C
D
E
F
G
H
I
J
K
L

BCS

N
O
P

U1010 CONTROL UNIT (CAN)

< DTC/CIRCUIT DIAGNOSIS >

U1010 CONTROL UNIT (CAN)

DTC Logic

INFOID:000000008196586

DTC DETECTION LOGIC

| DTC | CONSULT display de- scription | DTC Detection Condition | Possible cause |
|-------|----------------------------------|--|----------------|
| U1010 | CONTROL UNIT(CAN) | BCM detected internal CAN communication circuit malfunction. | BCM |

Diagnosis Procedure

INFOID:000000008196587

1.REPLACE BCM

When DTC "U1010" is detected, replace BCM.

>> Replace BCM. Refer to [BCS-95. "Exploded View"](#).

U0415 VEHICLE SPEED SIG

< DTC/CIRCUIT DIAGNOSIS >

U0415 VEHICLE SPEED SIG

Description

INFOID:000000008196588

U0415 is displayed if any unusual condition is present in the reception status of the vehicle speed signal from the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000008196589

DTC DETECTION LOGIC

| DTC | CONSULT display description | DTC Detection Condition | Probable cause |
|-------|-----------------------------|---|---|
| U0415 | VEHICLE SPEED | When the vehicle speed signal received from the ABS actuator and electric unit (control unit) remains abnormal for 2 seconds or more. | <ul style="list-style-type: none">• ABS actuator and electric unit (control unit)• BCM |

DTC CONFIRMATION PROCEDURE

1. DTC CONFIRMATION

1. Erase the DTC.
2. Turn ignition switch OFF.
3. Perform the "Self Diagnostic Result" of CONSULT, when passed 2 seconds or more after the ignition switch is turned ON.

Is any DTC detected?

- YES >> Refer to [BCS-51, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008196590

1. ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) SELF-DIAG RESULTS

Perform "Self-Diagnostic Result" of ABS actuator and electric unit (control unit) with CONSULT. Refer to [BRC-22, "CONSULT Function"](#).

Is any DTC detected?

- YES >> Repair or replace the malfunctioning part.
NO >> Replace BCM. Refer to [BCS-95, "Exploded View"](#).

A
B
C
D
E
F
G
H
I
J
K
L

BCS

B2562 LOW VOLTAGE

< DTC/CIRCUIT DIAGNOSIS >

B2562 LOW VOLTAGE

DTC Logic

INFOID:000000008196591

DTC DETECTION LOGIC

| DTC | CONSULT display description | DTC Detection Condition | Possible cause |
|-------|-----------------------------|--|---|
| B2562 | LOW VOLTAGE | When the power supply voltage to BCM remains less than 8.8 V for 120 seconds or more | Harness or connector (power supply circuit) |

DTC CONFIRMATION PROCEDURE

1. DTC CONFIRMATION

1. Erase DTC.
2. Turn ignition switch OFF.
3. Perform the "Self Diagnostic Result" of CONSULT, when passed 120 seconds or more after the ignition switch is turned ON.

Is any DTC detected?

- YES >> Refer to [BCS-52, "Diagnosis Procedure"](#).
NO >> INSPECTION END

Diagnosis Procedure

INFOID:000000008196592

1. CHECK POWER SUPPLY CIRCUIT

Check BCM power supply circuit. Refer to [BCS-53, "Diagnosis Procedure"](#).

Is the circuit normal?

- YES >> Replace BCM. Refer to [BCS-95, "Exploded View"](#).
NO >> Repair the malfunctioning part.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

POWER SUPPLY AND GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000008196593

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

| Signal name | Fuse and fusible link No. |
|----------------------|---------------------------|
| Battery power supply | K |
| | 10 |

Is the fuse fusing?

- YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.
NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

| Terminals | | Voltage (Approx.) |
|-----------|----------|-------------------------------|
| (+) | (-) | |
| BCM | | Ground Battery voltage |
| Connector | Terminal | |
| M118 | 1 | |
| M119 | 11 | |

Is the measurement value normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

| BCM | | Ground | Continuity |
|-----------|----------|--------|------------|
| Connector | Terminal | | |
| M119 | 13 | | Existed |

Does continuity exist?

- YES >> INSPECTION END
NO >> Repair harness or connector.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

COMBINATION SWITCH INPUT CIRCUIT

Diagnosis Procedure

INFOID:000000008196594

1. CHECK INPUT 1 - 5 SYSTEM CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect the BCM and combination switch connectors.
3. Check continuity between BCM harness connector and combination switch harness connector.

| System | BCM | | Combination switch | | Continuity |
|---------|-----------|----------|--------------------|----------|------------|
| | Connector | Terminal | Connector | Terminal | |
| INPUT 1 | M122 | 107 | M33 | 11 | Existed |
| INPUT 2 | | 109 | | 9 | |
| INPUT 3 | | 88 | | 7 | |
| INPUT 4 | | 108 | | 10 | |
| INPUT 5 | | 87 | | 13 | |

Does continuity exist?

YES >> GO TO 2.

NO >> Repair the harnesses or connectors.

2. CHECK INPUT 1 - 5 SYSTEM CIRCUIT FOR SHORT

Check for continuity between BCM harness connector and ground.

| System | BCM | | Ground | Continuity |
|---------|-----------|----------|--------|-------------|
| | Connector | Terminal | | |
| INPUT 1 | M122 | 107 | Ground | Not existed |
| INPUT 2 | | 109 | | |
| INPUT 3 | | 88 | | |
| INPUT 4 | | 108 | | |
| INPUT 5 | | 87 | | |

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> GO TO 3.

3. CHECK BCM OUTPUT VOLTAGE

1. Connect the BCM connector.
2. Check voltage between BCM harness connector and ground.

| System | Terminals | | Ground | Voltage (Approx.) |
|---------|-----------|----------|--------|--|
| | (+) | (-) | | |
| | BCM | | | |
| | Connector | Terminal | | |
| INPUT 1 | M122 | 107 | Ground | Refer to BCS-58, "Reference Value" . |
| INPUT 2 | | 109 | | |
| INPUT 3 | | 88 | | |
| INPUT 4 | | 108 | | |
| INPUT 5 | | 87 | | |

Is the measurement value normal?

YES >> GO TO 4.

NO >> Replace BCM. Refer to [BCS-95, "Exploded View"](#).

COMBINATION SWITCH INPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

4. CHECK BCM INPUT SIGNAL

1. Connect the combination switch connector.
2. Turn ON any switch in the system that is malfunctioning.
3. Check voltage between BCM harness connector and ground.

| System | Terminals | | Voltage (Approx.) |
|---------|-----------|----------|--|
| | (+) | (-) | |
| | BCM | | |
| | Connector | Terminal | |
| INPUT 1 | M122 | 107 | Ground Refer to BCS-58 . "Reference Value". |
| INPUT 2 | | 109 | |
| INPUT 3 | | 88 | |
| INPUT 4 | | 108 | |
| INPUT 5 | | 87 | |

Is the measurement value normal when any of the switches is turned ON?

- YES >> Replace BCM. Refer to [BCS-95](#). "Exploded View".
NO >> Replace the combination switch.

A
B
C
D
E
F
G
H
I
J
K
L

BCS

N
O
P

COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

COMBINATION SWITCH OUTPUT CIRCUIT

Diagnosis Procedure

INFOID:000000008196595

1. CHECK OUTPUT 1 - 5 SYSTEM CIRCUIT FOR OPEN

1. Turn the ignition switch OFF.
2. Disconnect the BCM and combination switch connectors.

NOTE:

BCM connector disconnects M123 only.

3. Check continuity between BCM harness connector and combination switch harness connector.

| System | BCM | | Combination switch | | Continuity |
|----------|-----------|----------|--------------------|----------|------------|
| | Connector | Terminal | Connector | Terminal | |
| OUTPUT 1 | M123 | 143 | M33 | 12 | Existed |
| OUTPUT 2 | | 144 | | 14 | |
| OUTPUT 3 | | 145 | | 5 | |
| OUTPUT 4 | | 146 | | 2 | |
| OUTPUT 5 | | 142 | | 8 | |

Does continuity exist?

YES >> GO TO 2.

NO >> Repair the harnesses or connectors.

2. CHECK OUTPUT 1 - 5 SYSTEM CIRCUIT FOR SHORT

Check for continuity between BCM harness connector and ground.

| System | BCM | | Ground | Continuity |
|----------|-----------|----------|--------|-------------|
| | Connector | Terminal | | |
| OUTPUT 1 | M123 | 143 | Ground | Not existed |
| OUTPUT 2 | | 144 | | |
| OUTPUT 3 | | 145 | | |
| OUTPUT 4 | | 146 | | |
| OUTPUT 5 | | 142 | | |

Does continuity exist?

YES >> Repair the harnesses or connectors.

NO >> GO TO 3.

3. CHECK COMBINATION SWITCH INTERNAL CIRCUIT

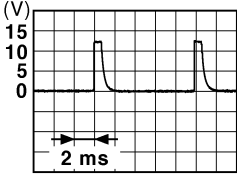
1. Connect the combination switch connector.
2. Turn ON any switch in the system that is malfunctioning.
3. Check voltage between combination switch harness connector and ground.

NOTE:

Check that the combination switch outputs a signal from combination switch input system.

COMBINATION SWITCH OUTPUT CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

| System | Terminals | | Value (Approx.) |
|----------|--------------------|----------|--|
| | (+) | (-) | |
| | Combination switch | | |
| | Connector | Terminal | |
| OUTPUT 1 | M33 | 12 |  1.4 V |
| OUTPUT 2 | | 14 | |
| OUTPUT 3 | | 5 | |
| OUTPUT 4 | | 2 | |
| OUTPUT 5 | | 8 | |
| | | Ground | |

Is the measurement value normal when any of the switches is turned ON?

- YES >> Replace BCM. Refer to [BCS-95, "Exploded View"](#).
- NO >> Replace the combination switch.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

ECU DIAGNOSIS INFORMATION

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000008196596

VALUES ON THE DIAGNOSIS TOOL

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

CONSULT MONITOR ITEM

| Monitor Item | Condition | Value/Status |
|----------------|---|----------------------------------|
| FR WIPER HI | Other than front wiper switch HI | Off |
| | Front wiper switch HI | On |
| FR WIPER LOW | Other than front wiper switch LO | Off |
| | Front wiper switch LO | On |
| FR WASHER SW | Front washer switch OFF | Off |
| | Front washer switch ON | On |
| FR WIPER INT | Other than front wiper switch INT | Off |
| | Front wiper switch INT | On |
| FR WIPER STOP | Front wiper is not in STOP position | Off |
| | Front wiper is in STOP position | On |
| INT VOLUME | Wiper intermittent dial is in a dial position 1 - 7 | Wiper intermittent dial position |
| TURN SIGNAL R | Other than turn signal switch RH | Off |
| | Turn signal switch RH | On |
| TURN SIGNAL L | Other than turn signal switch LH | Off |
| | Turn signal switch LH | On |
| TAIL LAMP SW | Other than lighting switch 1ST and 2ND | Off |
| | Lighting switch 1ST or 2ND | On |
| HI BEAM SW | Other than lighting switch HI | Off |
| | Lighting switch HI | On |
| HEAD LAMP SW 1 | Other than lighting switch 2ND | Off |
| | Lighting switch 2ND | On |
| HEAD LAMP SW 2 | Other than lighting switch 2ND | Off |
| | Lighting switch 2ND | On |
| PASSING SW | Other than lighting switch PASS | Off |
| | Lighting switch PASS | On |
| AUTO LIGHT SW | Other than lighting switch AUTO | Off |
| | Lighting switch AUTO | On |
| FR FOG SW | NOTE: The item is indicated, but not monitored. | Off |
| RR FOG SW | Rear fog lamp switch OFF | Off |
| | Rear fog lamp switch ON | On |
| DOOR SW-DR | Driver door closed | Off |
| | Driver door opened | On |
| DOOR SW-AS | Passenger door closed | Off |
| | Passenger door opened | On |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Monitor Item | Condition | Value/Status | |
|---|---|--------------|-----|
| DOOR SW-RR | NOTE: The item is indicated, but not monitored. | Off | A |
| DOOR SW-RL | NOTE: The item is indicated, but not monitored. | Off | B |
| DOOR SW-BK | <ul style="list-style-type: none"> • Back door closed (Coupe models) • Trunk lid closed (Roadster models) | Off | C |
| | <ul style="list-style-type: none"> • Back door opened (Coupe models) • Trunk lid opened (Roadster models) | On | |
| CDL LOCK SW | Other than door lock and unlock switch LOCK | Off | D |
| | Door lock and unlock switch LOCK | On | |
| CDL UNLOCK SW | Other than door lock and unlock switch UNLOCK | Off | E |
| | Door lock and unlock switch UNLOCK | On | |
| KEY CYL LK-SW | Other than driver door key cylinder LOCK position | Off | F |
| | Driver door key cylinder LOCK position | On | |
| KEY CYL UN-SW | Other than driver door key cylinder UNLOCK position | Off | F |
| | Driver door key cylinder UNLOCK position | On | |
| KEY CYL SW-TR | NOTE: The item is indicated, but not monitored. | Off | G |
| HAZARD SW | Hazard switch is OFF | Off | H |
| | Hazard switch is ON | On | |
| REAR DEF SW NOTE: For models with NAVI this item is not monitored. | Rear window defogger switch OFF | Off | I |
| | Rear window defogger switch ON | On | |
| H/L WASH SW | NOTE: The item is indicated, but not monitored. | Off | J |
| TR CANCEL SW | Trunk lid opener cancel switch OFF | Off | J |
| | Trunk lid opener cancel switch ON | On | |
| TR/BD OPEN SW | <ul style="list-style-type: none"> • Back door opener switch OFF (Coupe models) • Trunk lid opener switch OFF (Roadster models) | Off | K |
| | <ul style="list-style-type: none"> • While the back door opener switch is turned ON (Coupe models) • While the trunk lid opener switch is turned ON (Roadster models) | On | |
| TRNK/HAT MNTR | NOTE: The item is indicated, but not monitored. | Off | L |
| RKE-LOCK | LOCK button of the Intelligent Key is not pressed | Off | BCS |
| | LOCK button of the Intelligent Key is pressed | On | |
| RKE-UNLOCK | UNLOCK button of the Intelligent Key is not pressed | Off | N |
| | UNLOCK button of the Intelligent Key is pressed | On | |
| RKE-TR/BD NOTE: For Coupe models this item is not monitored. | TRUNK OPEN button of the Intelligent Key is not pressed | Off | O |
| | TRUNK OPEN of the Intelligent Key is pressed | On | |
| RKE-PANIC | PANIC button of the Intelligent Key is not pressed | Off | P |
| | PANIC button of the Intelligent Key is pressed | On | |
| RKE-P/W OPEN | UNLOCK button of the Intelligent Key is not pressed | Off | |
| | UNLOCK button of the Intelligent Key is pressed and held | On | |
| RKE-MODE CHG | LOCK/UNLOCK button of the Intelligent Key is not pressed and held simultaneously | Off | |
| | LOCK/UNLOCK button of the Intelligent Key is pressed and held simultaneously | On | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Monitor Item | Condition | Value/Status |
|---|---|--------------|
| OPTICAL SENSOR | Bright outside of the vehicle | Close to 5 V |
| | Dark outside of the vehicle | Close to 0 V |
| REQ SW -DR | Driver door request switch is not pressed | Off |
| | Driver door request switch is pressed | On |
| REQ SW -AS | Passenger door request switch is not pressed | Off |
| | Passenger door request switch is pressed | On |
| REQ SW -RR | NOTE: The item is indicated, but not monitored. | Off |
| REQ SW -RL | NOTE: The item is indicated, but not monitored. | Off |
| REQ SW -BD/TR | <ul style="list-style-type: none"> • Back door request switch is not pressed (Coupe models) • Trunk lid door request switch is not pressed (Roadster models) | Off |
| | <ul style="list-style-type: none"> • Back door request switch is pressed (Coupe models) • Trunk lid door request switch is pressed (Roadster models) | On |
| PUSH SW | Push-button ignition switch (push switch) is not pressed | Off |
| | Push-button ignition switch (push switch) is pressed | On |
| IGN RLY2 -F/B | NOTE: The item is indicated, but not monitored. | Off |
| ACC RLY -F/B | NOTE: The item is indicated, but not monitored. | Off |
| CLUCH SW NOTE: For A/T models this item is not monitored. | The clutch pedal is not depressed | Off |
| | The clutch pedal is depressed | On |
| BRAKE SW 1 | The brake pedal is depressed when No. 7 fuse is blown | Off |
| | The brake pedal is not depressed when No. 7 fuse is blown, or No. 7 fuse is normal | On |
| BRAKE SW 2 | The brake pedal is not depressed | Off |
| | The brake pedal is depressed | On |
| DETE/CANCL SW NOTE: For M/T models with Synchro-Rev Match mode this item is not monitored. | <ul style="list-style-type: none"> • Selector lever in P position (A/T models) • The clutch pedal is depressed (M/T models without SynchroRev Match mode) | Off |
| | <ul style="list-style-type: none"> • Selector lever in any position other than P (A/T models) • The clutch pedal is not depressed (M/T models without SynchroRev Match mode) | On |
| SFT PN/N SW NOTE: For roadster M/T models and coupe M/T models without SynchroRev Match mode this item is not monitored. | <ul style="list-style-type: none"> • Selector lever in any position other than P and N (A/T models) • Control lever in any position other than neutral position (Coupe M/T models with SynchroRev Match mode) | Off |
| | <ul style="list-style-type: none"> • Selector lever in P or N position (A/T models) • Control lever in neutral position (Coupe M/T models with SynchroRev Match mode) | On |
| S/L -LOCK | NOTE: The item is indicated but not monitored. | Off |
| S/L -UNLOCK | NOTE: The item is indicated but not monitored. | Off |
| S/L RELAY-F/B | NOTE: The item is indicated but not monitored. | Off |
| UNLK SEN -DR | Driver door is unlocked | Off |
| | Driver door is locked | On |
| PUSH SW -IPDM | Push-button ignition switch (push-switch) is not pressed | Off |
| | Push-button ignition switch (push-switch) is pressed | On |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Monitor Item | Condition | Value/Status | |
|---------------|--|--|-----|
| IGN RLY1 -F/B | Ignition switch in OFF or ACC position | Off | A |
| | Ignition switch in ON position | On | |
| DETE SW -IPDM | Selector lever in any position other than P | Off | B |
| | Selector lever in P position | On | |
| SFT PN -IPDM | <ul style="list-style-type: none"> • Selector lever in any position other than P and N (A/T models) • The clutch pedal is not depressed (M/T models) | Off | C |
| | <ul style="list-style-type: none"> • Selector lever in P or N position (A/T models) • The clutch pedal is depressed (M/T models) | On | |
| SFT P -MET | Selector lever in any position other than P | Off | D |
| | Selector lever in P position | On | |
| SFT N -MET | Selector lever in any position other than N | Off | E |
| | Selector lever in N position | On | |
| ENGINE STATE | Engine stopped | Stop | F |
| | While the engine stalls | Stall | |
| | At engine cranking | Crank | |
| | Engine running | Run | |
| S/L LOCK-IPDM | NOTE: The item is indicated but not monitored. | Off | G |
| S/L UNLK-IPDM | NOTE: The item is indicated but not monitored. | Off | H |
| S/L RELAY-REQ | NOTE: The item is indicated but not monitored. | Off | I |
| VEH SPEED 1 | While driving | Equivalent to speedometer reading | J |
| VEH SPEED 2 | While driving | Equivalent to speedometer reading | |
| DOOR STAT-DR | Driver door is locked | LOCK | K |
| | Wait with selective UNLOCK operation (60 seconds) | READY | |
| | Driver door is unlocked | UNLOCK | |
| DOOR STAT-AS | Passenger door is locked | LOCK | L |
| | Wait with selective UNLOCK operation (60 seconds) | READY | |
| | Passenger door is unlocked | UNLOCK | |
| ID OK FLAG | Driver side door is open after ignition switch is turned OFF (Shift position is in the P position) | Reset | BCS |
| | Ignition switch ON | Set | |
| PRMT ENG STRT | The engine start is prohibited | Reset | N |
| | The engine start is permitted | Set | |
| PRMT RKE STRT | NOTE: The item is indicated, but not monitored. | Reset | O |
| KEY SW -SLOT | The Intelligent Key is not inserted into key slot | Off | P |
| | The Intelligent Key is inserted into key slot | On | |
| RKE OPE COUN1 | During the operation of the Intelligent Key | Operation frequency of the Intelligent Key | |
| RKE OPE COUN2 | During the operation of the Intelligent Key | Operation frequency of the Intelligent Key | |

BCM (BODY CONTROL MODULE)


< ECU DIAGNOSIS INFORMATION >

| Monitor Item | Condition | Value/Status |
|----------------|---|-------------------------------|
| CONFIRM ID ALL | The key ID that the key slot receives is not recognized by any key ID registered to BCM. | Yet |
| | The key ID that the key slot receives is recognized by any key ID registered to BCM. | Done |
| CONFIRM ID4 | The key ID that the key slot receives is not recognized by the fourth key ID registered to BCM. | Yet |
| | The key ID that the key slot receives is recognized by the fourth key ID registered to BCM. | Done |
| CONFIRM ID3 | The key ID that the key slot receives is not recognized by the third key ID registered to BCM. | Yet |
| | The key ID that the key slot receives is recognized by the third key ID registered to BCM. | Done |
| CONFIRM ID2 | The key ID that the key slot receives is not recognized by the second key ID registered to BCM. | Yet |
| | The key ID that the key slot receives is recognized by the second key ID registered to BCM. | Done |
| CONFIRM ID1 | The key ID that the key slot receives is not recognized by the first key ID registered to BCM. | Yet |
| | The key ID that the key slot receives is recognized by the first key ID registered to BCM. | Done |
| TP 4 | The ID of fourth Intelligent Key is not registered to BCM | Yet |
| | The ID of fourth Intelligent Key is registered to BCM | Done |
| TP 3 | The ID of third Intelligent Key is not registered to BCM | Yet |
| | The ID of third Intelligent Key is registered to BCM | Done |
| TP 2 | The ID of second Intelligent Key is not registered to BCM | Yet |
| | The ID of second Intelligent Key is registered to BCM | Done |
| TP 1 | The ID of first Intelligent Key is not registered to BCM | Yet |
| | The ID of first Intelligent Key is registered to BCM | Done |
| AIR PRESS FL | Ignition switch ON (Only when the signal from the transmitter is received) | Air pressure of front LH tire |
| AIR PRESS FR | Ignition switch ON (Only when the signal from the transmitter is received) | Air pressure of front RH tire |
| AIR PRESS RR | Ignition switch ON (Only when the signal from the transmitter is received) | Air pressure of rear RH tire |
| AIR PRESS RL | Ignition switch ON (Only when the signal from the transmitter is received) | Air pressure of rear LH tire |
| ID REGST FL1 | ID of front LH tire transmitter is registered | Done |
| | ID of front LH tire transmitter is not registered | Yet |
| ID REGST FR1 | ID of front RH tire transmitter is registered | Done |
| | ID of front RH tire transmitter is not registered | Yet |
| ID REGST RR1 | ID of rear RH tire transmitter is registered | Done |
| | ID of rear RH tire transmitter is not registered | Yet |
| ID REGST RL1 | ID of rear LH tire transmitter is registered | Done |
| | ID of rear LH tire transmitter is not registered | Yet |
| WARNING LAMP | Tire pressure indicator OFF | Off |
| | Tire pressure indicator ON | On |
| BUZZER | Tire pressure warning alarm is not sounding | Off |
| | Tire pressure warning alarm is sounding | On |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

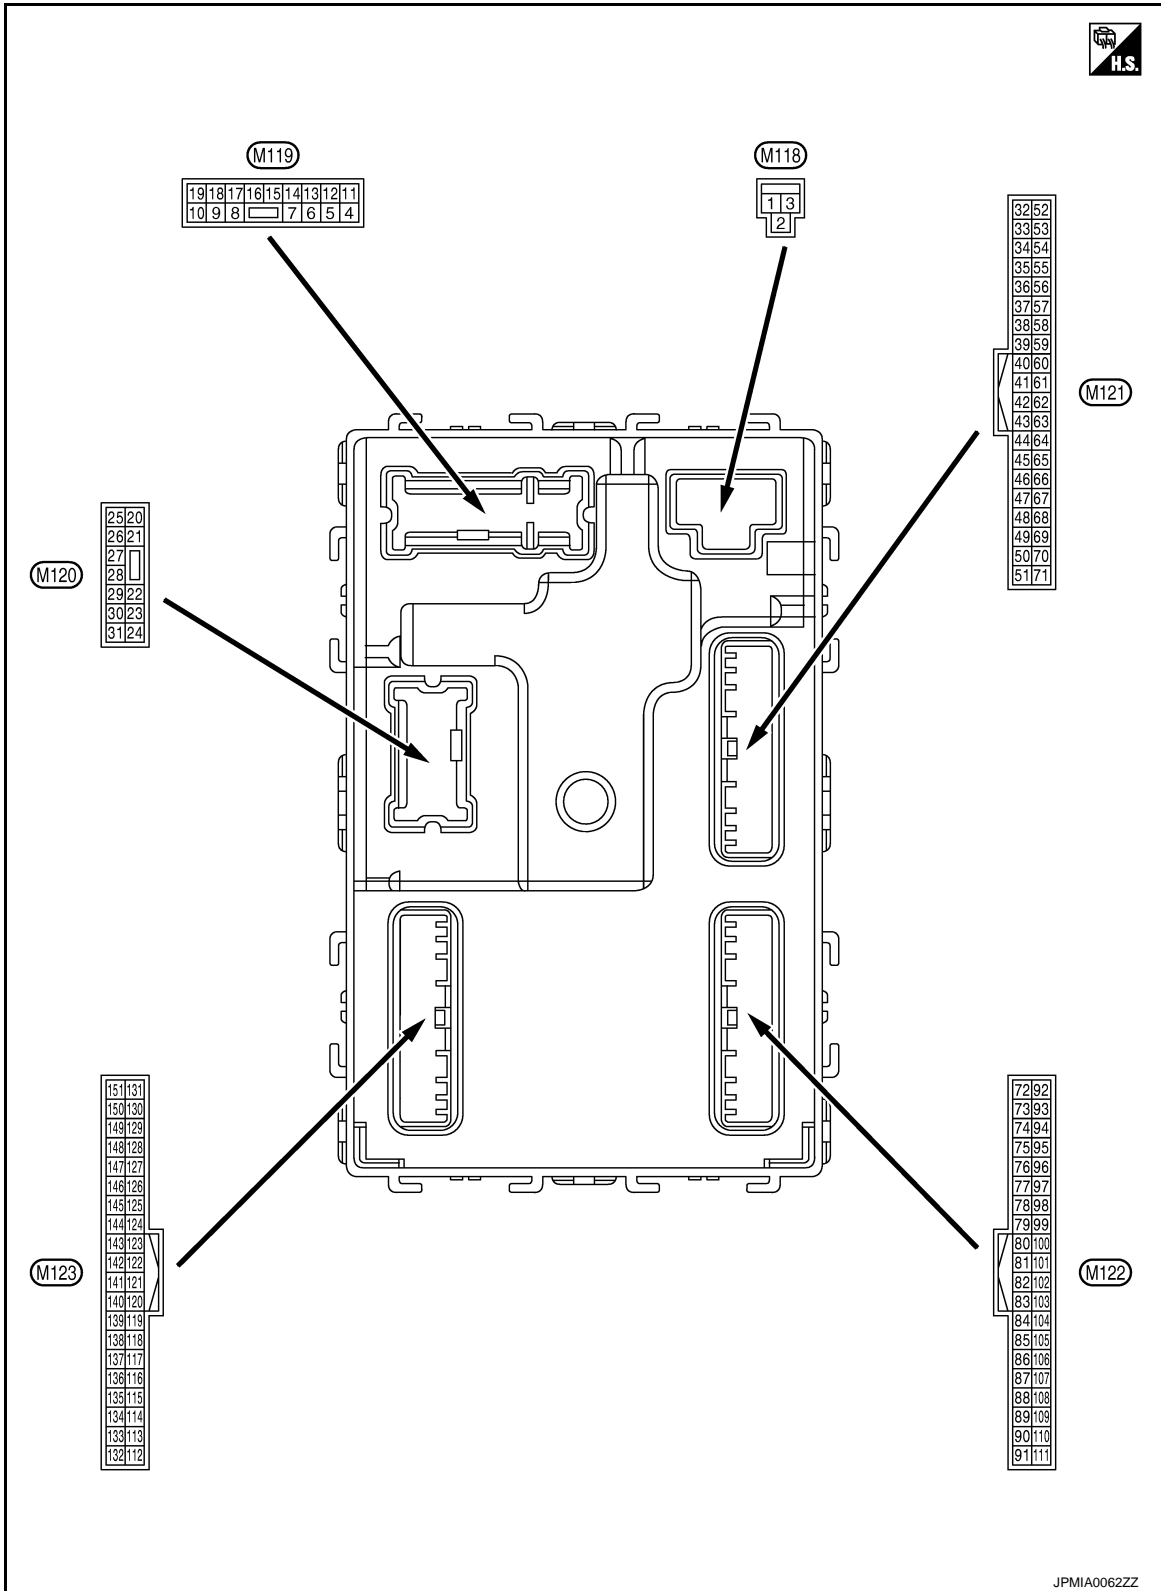TERMINAL LAYOUT




PHYSICAL VALUES

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BCS

BCM (BODY CONTROL MODULE)
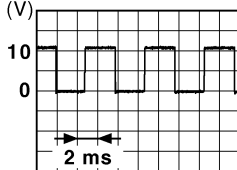
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|---|---|--|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 1 (W) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 2 (W) | Ground | P/W power supply (BAT) | Output | Ignition switch OFF | | 12 V |
| 3 (Y) | Ground | P/W power supply (IGN) | Output | Ignition switch ON | | 12 V |
| 4 (R) | Ground | Interior room lamp power supply | Output | Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply) | | 0 V |
| | | | | Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply) | | 12 V |
| 5 (G) | Ground | Passenger door UN- LOCK | Output | Passenger door | UNLOCK (Actuator is activated) | 12 V |
| | | | | | Other than UNLOCK (Actuator is not activated) | 0 V |
| 8 (V) | Ground | All doors, fuel lid LOCK | Output | All doors, fuel lid | LOCK (Actuator is activated) | 12 V |
| | | | | | Other than LOCK (Actuator is not activated) | 0 V |
| 9 (G) | Ground | Driver door, fuel lid UNLOCK | Output | Driver door, fuel lid | UNLOCK (Actuator is activated) | 12 V |
| | | | | | Other than UNLOCK (Actuator is not activated) | 0 V |
| 11 (BR) | Ground | Battery power supply | Input | Ignition switch OFF | | Battery voltage |
| 13 (B) | Ground | Ground | — | Ignition switch ON | | 0 V |
| 14 (R) | Ground | Push-button ignition switch illumination ground | Output | Tail lamp | OFF | 0 V |
| | | | | | ON | <p>NOTE: When the illumination brightening/dimming level is in the neutral position.</p>  <p style="text-align: right;"><small>JSNIA0010GB</small></p> |
| 15 (Y) | Ground | ACC indicator lamp | Output | Ignition switch | OFF (LOCK indicator is not illuminated) | Battery voltage |
| | | | | | ACC | 0 V |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|---------------------------------|------------------|---|-----------------------|
| | | Signal name | Input/ Output | | |
| + | - | | | | |
| 17 (W) | Ground | Turn signal RH (Front and side) | Output | Ignition switch OFF | 0 V |
| | | | | Ignition switch ON | Turn signal switch RH |
| 18 (O) | Ground | Turn signal LH (Front and side) | Output | Ignition switch OFF | 0 V |
| | | | | Ignition switch ON | Turn signal switch LH |
| 19 (P) | Ground | Interior room lamp control | Output | Interior room lamp OFF | 12 V |
| | | | | Interior room lamp ON | 0 V |
| 20 (V) | Ground | Turn signal RH (Rear) | Output | Ignition switch OFF | 0 V |
| | | | | Ignition switch ON | Turn signal switch RH |
| 23 (L)*1 (Y)*2 | Ground | Back door/Trunk lid open | Output | Back door/Trunk lid OPEN (Back door/Trunk lid opener actuator is activated) | 12 V |
| | | | | Back door/Trunk lid Other than OPEN (Back door/Trunk lid opener actuator is not activated) | 0 V |
| 24*8 (O) | Ground | Rear fog lamp | Output | Rear fog lamp OFF | 0 V |
| | | | | Rear fog lamp ON | 12 V |
| 25 (LG) | Ground | Turn signal LH (Rear) | Output | Ignition switch OFF | 0 V |
| | | | | Ignition switch ON | Turn signal switch LH |
| 30 (R) | Ground | Luggage room/Trunk room lamp | Output | Luggage room/Trunk room lamp ON | 0 V |
| | | | | Luggage room/Trunk room lamp OFF | 12 V |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|-------------------------------------|------------------|---|---|
| + | - | Signal name | Input/ Output | | |
| 34 (G) | Ground | Luggage room/Trunk room antenna (-) | Output | Ignition switch OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compartment | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 35 (R) | Ground | Luggage room/Trunk room antenna (+) | Output | Ignition switch OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compartment | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 38 (B) | Ground | Rear bumper antenna (-) | Output | When the back door/trunk lid door request switch is operated with ignition switch OFF | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >





| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|---|------------------|---|---|
| + | - | Signal name | Input/ Output | | |
| 39 (W) | Ground | Rear bumper antenna (+) | Output | When Intelligent Key is in the antenna detection area | <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area | <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 47 (V) | Ground | Ignition relay (IPDM E/R) control | Output | Ignition switch | OFF or ACC: 12 V ON: 0 V |
| 52 (SB) | Ground | Starter relay control | Output | Ignition switch ON (A/T models) | When selector lever is in P or N position: 12 V When selector lever is not in P or N position: 0 V |
| | | | | Ignition switch ON (M/T models) | When the clutch pedal is depressed: Battery voltage |
| | | | | | When the clutch pedal is not depressed: 0 V |
| | | | | 60 (BR) | Ground |
| 61 (W) | Ground | Back door/Trunk Lid door request switch | Input | Back door/Trunk lid door request switch | ON (Pressed): 0 V OFF (Not pressed): <p style="text-align: right; font-size: small;">JPMAI0016GB</p> 1.0 V |
| | | | | Intelligent Key warning buzzer | Sounding: 0 V Not sounding: 12 V |
| 66 (R) | Ground | Back door/Trunk room lamp switch | Input | Back door/Trunk room lamp switch | OFF (Door close): <p style="text-align: right; font-size: small;">JPMAI0011GB</p> 11.8 V |
| | | | | ON (Door open): 0 V | |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS







BCM (BODY CONTROL MODULE)
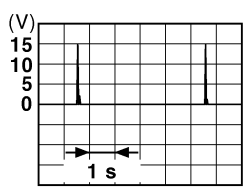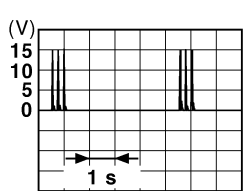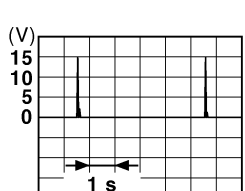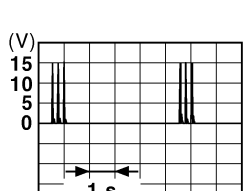
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|--|------------------|--|---|
| + | - | Signal name | Input/ Output | | |
| 67 (GR) | Ground | Back door/Trunk lid opener switch | Input | Back door/ Trunk lid open- er switch | 0 V |
| | | | | Pressed | Not pressed |
| 72 (L) | Ground | Room antenna 2 (-) (Center console) | Output | Ignition switch OFF |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compart- ment |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |
| 73 (P) | Ground | Room antenna 2 (+) (Center console) | Output | Ignition switch OFF |  <p style="text-align: right; font-size: small;">JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compart- ment |  <p style="text-align: right; font-size: small;">JMKIA0063GB</p> |

BCM (BODY CONTROL MODULE)
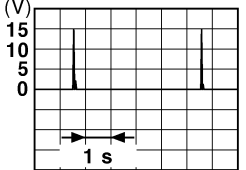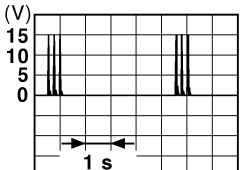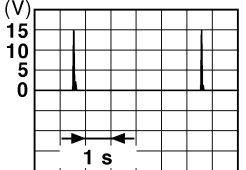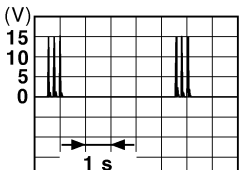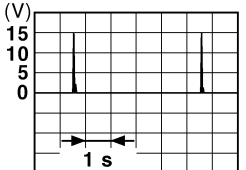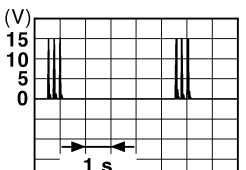
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|----------------------------|------------------|---|---|
| | | Signal name | Input/ Output | | |
| + | - | | | | |
| 74 (SB) | Ground | Passenger door antenna (-) | Output | When Intelligent Key is in the antenna detection area |  <small>JMKIA0062GB</small> |
| | | | | When the passenger door request switch is operated with ignition switch OFF |  <small>JMKIA0063GB</small> |
| 75 (BR) | Ground | Passenger door antenna (+) | Output | When Intelligent Key is in the antenna detection area |  <small>JMKIA0062GB</small> |
| | | | | When the passenger door request switch is operated with ignition switch OFF |  <small>JMKIA0063GB</small> |
| 76 (V) | Ground | Driver door antenna (-) | Output | When Intelligent Key is in the antenna detection area |  <small>JMKIA0062GB</small> |
| | | | | When the driver door request switch is operated with ignition switch OFF |  <small>JMKIA0063GB</small> |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

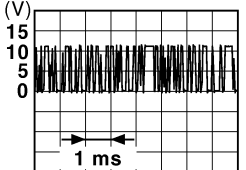
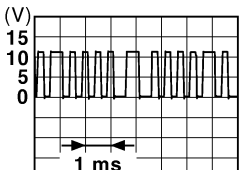

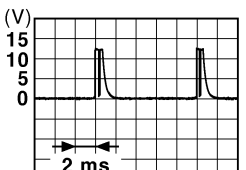

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|--|------------------|--|--------------------|
| + | - | Signal name | Input/ Output | | |
| 77 (LG) | Ground | Driver door antenna (+) | Output | When the driver door request switch is operated with ignition switch OFF | <p>JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the antenna detection area | <p>JMKIA0063GB</p> |
| 78*2 (L) | Ground | Room antenna 1 (-) (Instrument panel) | Output | Ignition switch OFF | <p>JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compartment | <p>JMKIA0063GB</p> |
| 79*2 (R) | Ground | Room antenna 1 (+) (Instrument panel) | Output | Ignition switch OFF | <p>JMKIA0062GB</p> |
| | | | | When Intelligent Key is not in the passenger compartment | <p>JMKIA0063GB</p> |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

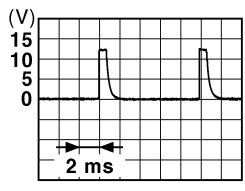
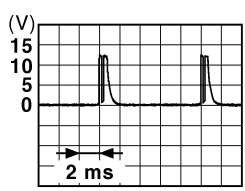

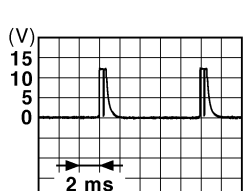
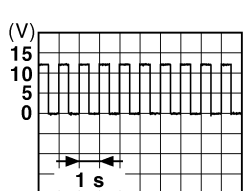
| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|---|--|--|
| + | - | Signal name | Input/ Output | | | |
| 80 (GR) | Ground | NATS antenna amp. | Input/ Output | During waiting | Ignition switch is pressed while inserting the Intelligent Key into the key slot. | Just after pressing ignition switch. Pointer of tester should move. |
| 81 (W) | Ground | NATS antenna amp. | Input/ Output | During waiting | Ignition switch is pressed while inserting the Intelligent Key into the key slot. | Just after pressing ignition switch. Pointer of tester should move. |
| 82 (R) | Ground | Ignition relay [Fuse block (J/B)] control | Output | Ignition switch | OFF or ACC | 0 V |
| | | | | | ON | 12 V |
| 83 (GR) | Ground | Remote keyless entry receiver (front) communication | Input/ Output | During waiting | |  <p style="text-align: right; font-size: small;">JMKIA0064GB</p> |
| | | | | When operating either button on the Intelligent Key | |  <p style="text-align: right; font-size: small;">JMKIA0065GB</p> |
| 87 (BR) | Ground | Combination switch INPUT 5 | Input | Combination switch | All switches OFF (Wiper intermittent dial 4) |  <p style="text-align: right; font-size: small;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p> |
| | | | | | Rear fog lamp switch ON (Wiper intermittent dial 4) |  <p style="text-align: right; font-size: small;">JPMIA0038GB</p> <p style="text-align: center;">1.3 V</p> |
| | | | | | Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7 |  <p style="text-align: right; font-size: small;">JPMIA0040GB</p> <p style="text-align: center;">1.3 V</p> |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|-------------------------------|------------------|----------------------------|---|---|
| + | - | Signal name | Input/ Output | | | |
| 88 (V) | Ground | Combination switch INPUT 3 | Input | Combination switch | All switches OFF (Wiper intermittent dial 4) |  <p style="text-align: right; font-size: small;">JPMA0041GB</p> <p style="text-align: center;">1.4 V</p> |
| | | | | | Lighting switch HI (Wiper intermittent dial 4) |  <p style="text-align: right; font-size: small;">JPMA0036GB</p> <p style="text-align: center;">1.3 V</p> |
| | | | | | Lighting switch 2ND (Wiper intermittent dial 4) |  <p style="text-align: right; font-size: small;">JPMA0037GB</p> <p style="text-align: center;">1.3 V</p> |
| | | | | | Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 |  <p style="text-align: right; font-size: small;">JPMA0040GB</p> <p style="text-align: center;">1.3 V</p> |
| 90 (P) | Ground | CAN-L | Input/ Output | — | — | |
| 91 (L) | Ground | CAN-H | Input/ Output | — | — | |
| 92 (LG) | Ground | Key slot illumination | Output | Key slot illumina- tion | OFF | 0 V |
| | | | | | Blinking |  <p style="text-align: right; font-size: small;">JPMA0015GB</p> <p style="text-align: center;">6.5 V</p> |
| 93 (V) | Ground | ON indicator lamp | Output | Ignition switch | OFF (LOCK indicator is not illuminated) | Battery voltage |
| | | | | | ON | 0 V |

BCM (BODY CONTROL MODULE)
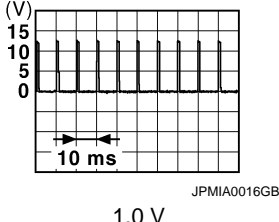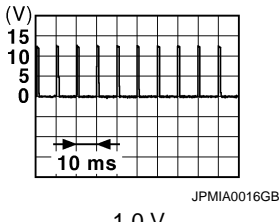
< ECU DIAGNOSIS INFORMATION >






| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|---|------------------|-------------------------------|------------------------------------|--|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 95 (O) | Ground | ACC relay control | Output | Ignition switch | OFF | 0 V |
| | | | | | ACC or ON | 12 V |
| 96*3 (Y) | Ground | A/T shift selector (Detention switch) power supply | Output | — | | 12 V |
| 99*6 (R) | Ground | Selector lever P position switch (A/T models) | Input | Selector lever | P position | 0 V |
| | | | | | Any position other than P | 12 V |
| | | Clutch pedal position switch (M/T models without SynchroRev Match mode) | | Clutch pedal position switch | OFF (Clutch pedal is depressed) | 0 V |
| | | | | | ON (Clutch pedal is not depressed) | Battery voltage |
| 100 (GR) | Ground | Passenger door request switch | Input | Passenger door request switch | ON (Pressed) | 0 V |
| | | | | | OFF (Not pressed) |  <p style="text-align: center;">1.0 V</p> |
| 101 (Y) | Ground | Driver door request switch | Input | Driver door request switch | ON (Pressed) | 0 V |
| | | | | | OFF (Not pressed) |  <p style="text-align: center;">1.0 V</p> |
| 102 (O) | Ground | Blower fan motor relay control | Output | Ignition switch | OFF or ACC | 0 V |
| | | | | | ON | 12 V |
| 103 (LG) | Ground | Remote keyless entry receiver (front) power supply | Output | Ignition switch OFF | | 12 V |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

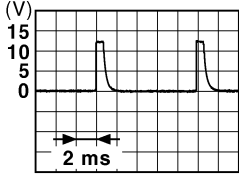BCS

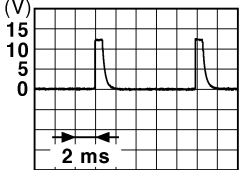

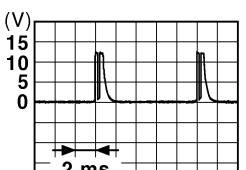
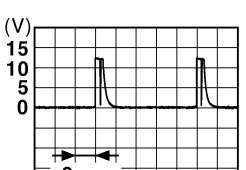
BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|-------------------------------|------------------|---|------------------------|---|
| + | - | Signal name | Input/ Output | | | |
| 107 (LG) | Ground | Combination switch INPUT 1 | Input | Combination switch (Wiper intermit- tent dial 4) | All switches OFF |  <p style="text-align: right;">1.4 V</p> |
| | | | | | Turn signal switch LH |  <p style="text-align: right;">1.3 V</p> |
| | | | | | Turn signal switch RH |  <p style="text-align: right;">1.3 V</p> |
| | | | | | Front wiper switch LO |  <p style="text-align: right;">1.3 V</p> |
| | | | | | Front washer switch ON |  <p style="text-align: right;">1.3 V</p> |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|-------------------------------|------------------|-----------------------|---|
| | | Signal name | Input/ Output | | |
| + | - | | | | |
| 108 (R) | Ground | Combination switch INPUT 4 | Input | Combination switch | All switches OFF (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="text-align: right;">1.4 V</p> </div> |
| | | | | | Lighting switch AUTO (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="text-align: right;">1.3 V</p> </div> |
| | | | | | Lighting switch 1ST (Wiper intermittent dial 4) <div style="text-align: right;">  <p style="text-align: right;">1.3 V</p> </div> |
| | | | | | Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 <div style="text-align: right;">  <p style="text-align: right;">1.3 V</p> </div> |

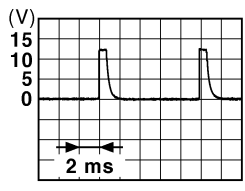
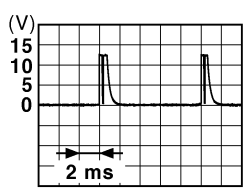
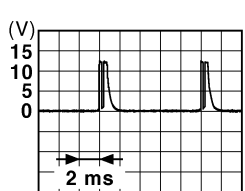
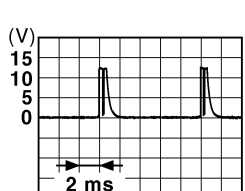
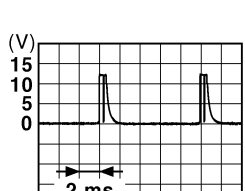
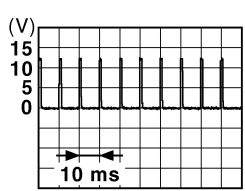
A
B
C
D
E
F
G
H
I
J
K
L

BCS

N
O
P



BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|-------------------------------|------------------|--|------------------------|---|
| + | - | Signal name | Input/ Output | | | |
| 109 (Y) | Ground | Combination switch INPUT 2 | Input | Combination switch (Wiper intermittent dial 4) | All switches OFF |  <p style="text-align: right;">1.4 V</p> |
| | | | | | Lighting switch PASS |  <p style="text-align: right;">1.3 V</p> |
| | | | | | Lighting switch 2ND |  <p style="text-align: right;">1.3 V</p> |
| | | | | | Front wiper switch INT |  <p style="text-align: right;">1.3 V</p> |
| | | | | | Front wiper switch HI |  <p style="text-align: right;">1.3 V</p> |
| | | | | | ON | 0 V |
| 110 (P) | Ground | Hazard switch | Input | Hazard switch | OFF |  <p style="text-align: right;">1.1 V</p> |

BCM (BODY CONTROL MODULE)



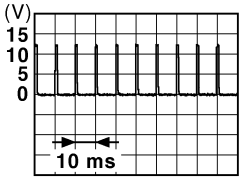
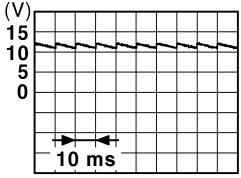
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | | Value (Approx.) |
|------------------------------|--------|--|------------------|--|---|---|
| + | - | Signal name | Input/ Output | | | |
| 113 (O) | Ground | Optical sensor | Input | Ignition switch ON | When bright outside of the vehicle | Close to 5 V |
| | | | | | When dark outside of the vehicle | Close to 0 V |
| 114*4 (R) | Ground | Clutch interlock switch | Input | Clutch interlock switch | OFF (Clutch pedal is not depressed) | 0 V |
| | | | | | ON (Clutch pedal is depressed) | Battery voltage |
| 115*9 (O) | — | — | — | — | — | — |
| 116 (SB) | Ground | Stop lamp switch 1 | Input | — | — | Battery voltage |
| 118 (P) | Ground | Stop lamp switch 2 | Input | Stop lamp switch | OFF (Brake pedal is not depressed) | 0 V |
| | | | | | ON (Brake pedal is depressed) | Battery voltage |
| 119 (SB) | Ground | Driver side door lock assembly (Unlock sensor) | Input | Driver door | LOCK status (Unlock sensor switch OFF) |  <p style="text-align: right; font-size: small;">JPMAI0012GB</p> |
| | | | | | UNLOCK status (Unlock switch sensor ON) | 0 V |
| 121 (R) | Ground | Key slot switch | Input | When the Intelligent Key is inserted into key slot | — | 12 V |
| | | | | When the Intelligent Key is not inserted into key slot | — | 0 V |
| 123 (W) | Ground | IGN feedback | Input | Ignition switch | OFF or ACC | 0 V |
| | | | | | ON | Battery voltage |
| 124 (LG) | Ground | Passenger door switch | Input | Passenger door switch | OFF (Door close) |  <p style="text-align: right; font-size: small;">JPMAI0011GB</p> |
| | | | | | ON (Door open) | 0 V |

A
B
C
D
E
F
G
H
I
J
K
L
BCS
N
O
P






BCM (BODY CONTROL MODULE)
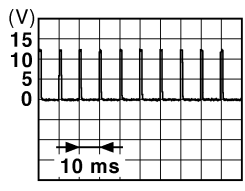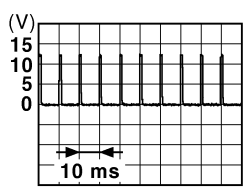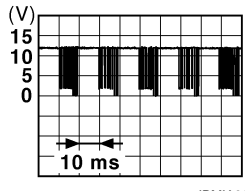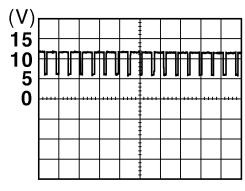
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) |
|------------------------------|--------|---|------------------|---------------------------------|--|
| + | - | Signal name | Input/ Output | | |
| 129*2 (O) | Ground | Trunk lid opener cancel switch | Input | Trunk lid opener cancel switch |  <p style="text-align: right; font-size: small;">JPMA0012GB</p> |
| | | | | CANCEL | 1.1 V |
| 130*7 (L) | Ground | Rear window defogger switch | Input | Ignition switch ON |  <p style="text-align: right; font-size: small;">JPMA0012GB</p> |
| | | | | Rear window defogger switch OFF | 1.1 V |
| 132 (Y)*1 (V)*2 | Ground | Power window switch and soft top control unit communication | Input/ Output | Ignition switch ON |  <p style="text-align: right; font-size: small;">JPMA0013GB</p> |
| | | | | Ignition switch OFF or ACC | 10.2 V |
| 133 (G) | Ground | Push-button ignition switch illumination | Output | ON (Tail lamps OFF) | 9.5 V |
| | | | | ON (Tail lamps ON) | <p style="text-align: center;">NOTE: The pulse width of this wave is varied by the illumination brightening/dimming level.</p>  <p style="text-align: right; font-size: small;">JPMA0159GB</p> |
| 134 (GR) | Ground | LOCK indicator lamp | Output | LOCK indicator lamp | OFF |
| | | | | OFF | Battery voltage |
| 137 (P) | Ground | Receiver and sensor ground | Input | Ignition switch ON | 0 V |
| | | | | ON | 0 V |
| 138 (V) | Ground | Receiver and sensor power supply | Output | Ignition switch | OFF |
| | | | | ACC or ON | 5.0 V |

BCM (BODY CONTROL MODULE)
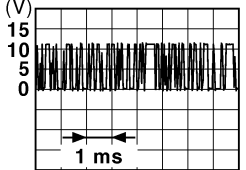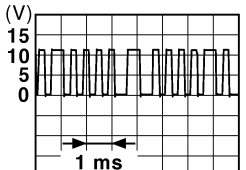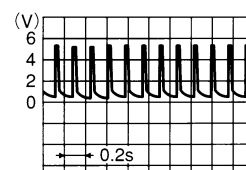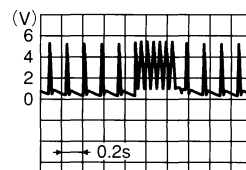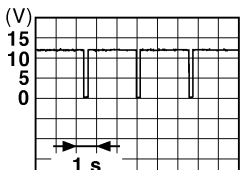
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | | |
|------------------------------|--------|---|------------------|--|---|-------------------------|---|
| | | Signal name | Input/ Output | | | | |
| + | - | | | | | | |
| 139 (L) | Ground | Tire pressure receiver communication | Input/ Output | Ignition switch OFF (Remote key-less entry receiver communication) | During waiting  | | |
| | | | | When operating either button on the Intelligent Key  | | | |
| | | | | Ignition switch ON (Tire pressure receiver communication) | Standby state  | | |
| | | | | When receiving the signal from the transmitter  | | | |
| 140*5 (G) | Ground | Selector lever P/N position (A/T models) | Input | Selector lever | P or N position: 12 V Except P and N positions: 0 V | | |
| | | Park/neutral position switch (Coupe M/T models with Synchro-Rev Match mode) | | Ignition switch ON | Control lever in neutral position: Battery voltage Control lever in any position other than neutral: 0 V | | |
| | | 141 (Y) | Ground | Security indicator lamp | Output | Security indicator lamp | ON: 0 V Blinking:  OFF: 12 V |
| | | | | | | | |

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS


BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|---|--------|--------------------------------|------------------|---|---|---|
| + | - | Signal name | Input/ Output | | | |
| 142 (O) | Ground | Combination switch OUTPUT 5 | Output | Combination switch (Wiper intermit- tent dial 4) | All switches OFF | 0 V |
| | | | | | Lighting switch 1ST | <p style="text-align: right; font-size: small;">JPMIA0031GB</p> |
| | | | | | Lighting switch HI | |
| | | | | | Lighting switch 2ND | |
| | | | | | Turn signal switch RH | |
| 143 (P) | Ground | Combination switch OUTPUT 1 | Output | Combination switch | All switches OFF (Wiper intermittent dial 4) | 0 V |
| | | | | | Front wiper switch HI (Wiper intermittent dial 4) | <p style="text-align: right; font-size: small;">JPMIA0032GB</p> |
| Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3 • Wiper intermittent dial 6 • Wiper intermittent dial 7 | | | | | 10.7 V | |
| 144 (G) | Ground | Combination switch OUTPUT 2 | Output | Combination switch | All switches OFF (Wiper intermittent dial 4) | 0 V |
| | | | | | Front washer switch ON (Wiper intermittent dial 4) | <p style="text-align: right; font-size: small;">JPMIA0033GB</p> |
| Any of the conditions below with all switches OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6 | | | | | 10.7 V | |
| 145 (L) | Ground | Combination switch OUTPUT 3 | Output | Combination switch (Wiper intermit- tent dial 4) | All switches OFF | 0 V |
| | | | | | Front wiper switch INT | <p style="text-align: right; font-size: small;">JPMIA0034GB</p> |
| | | | | | Front wiper switch LO | |
| | | | | | Lighting switch AUTO | |
| | | | | | Rear fog lamp switch ON | |
| 146 (SB) | Ground | Combination switch OUTPUT 4 | Output | Combination switch (Wiper intermit- tent dial 4) | All switches OFF | 0 V |
| | | | | | Lighting switch 2ND | <p style="text-align: right; font-size: small;">JPMIA0035GB</p> |
| | | | | | Lighting switch PASS | |
| | | | | | Turn signal switch LH | |

BCM (BODY CONTROL MODULE)
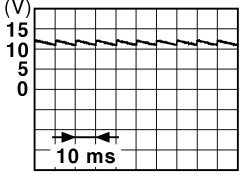
< ECU DIAGNOSIS INFORMATION >

| Terminal No. (Wire color) | | Description | | Condition | Value (Approx.) | |
|------------------------------|--------|---|------------------|----------------------|--------------------|---|
| | | Signal name | Input/ Output | | | |
| + | - | | | | | |
| 150 (GR) | Ground | Driver door switch | Input | Driver door switch | OFF (Door close) |  <p style="text-align: center;">11.8 V</p> |
| | | | | ON (Door open) | 0 V | |
| 151 (G) | Ground | Rear window defog- ger relay control | Output | Rear window defogger | Active | 0 V |
| | | | | Not activated | Battery voltage | |

- *1: Coupe models
- *2: Roadster models
- *3: A/T models
- *4: M/T models
- *5: With A/T or coupe models with M/T and SynchroRev Match mode
- *6: With A/T or with M/T without SynchroRev Match mode
- *7: Without NAVI
- *8: With rear fog lamp
- *9: BCM does not use this terminal for control.

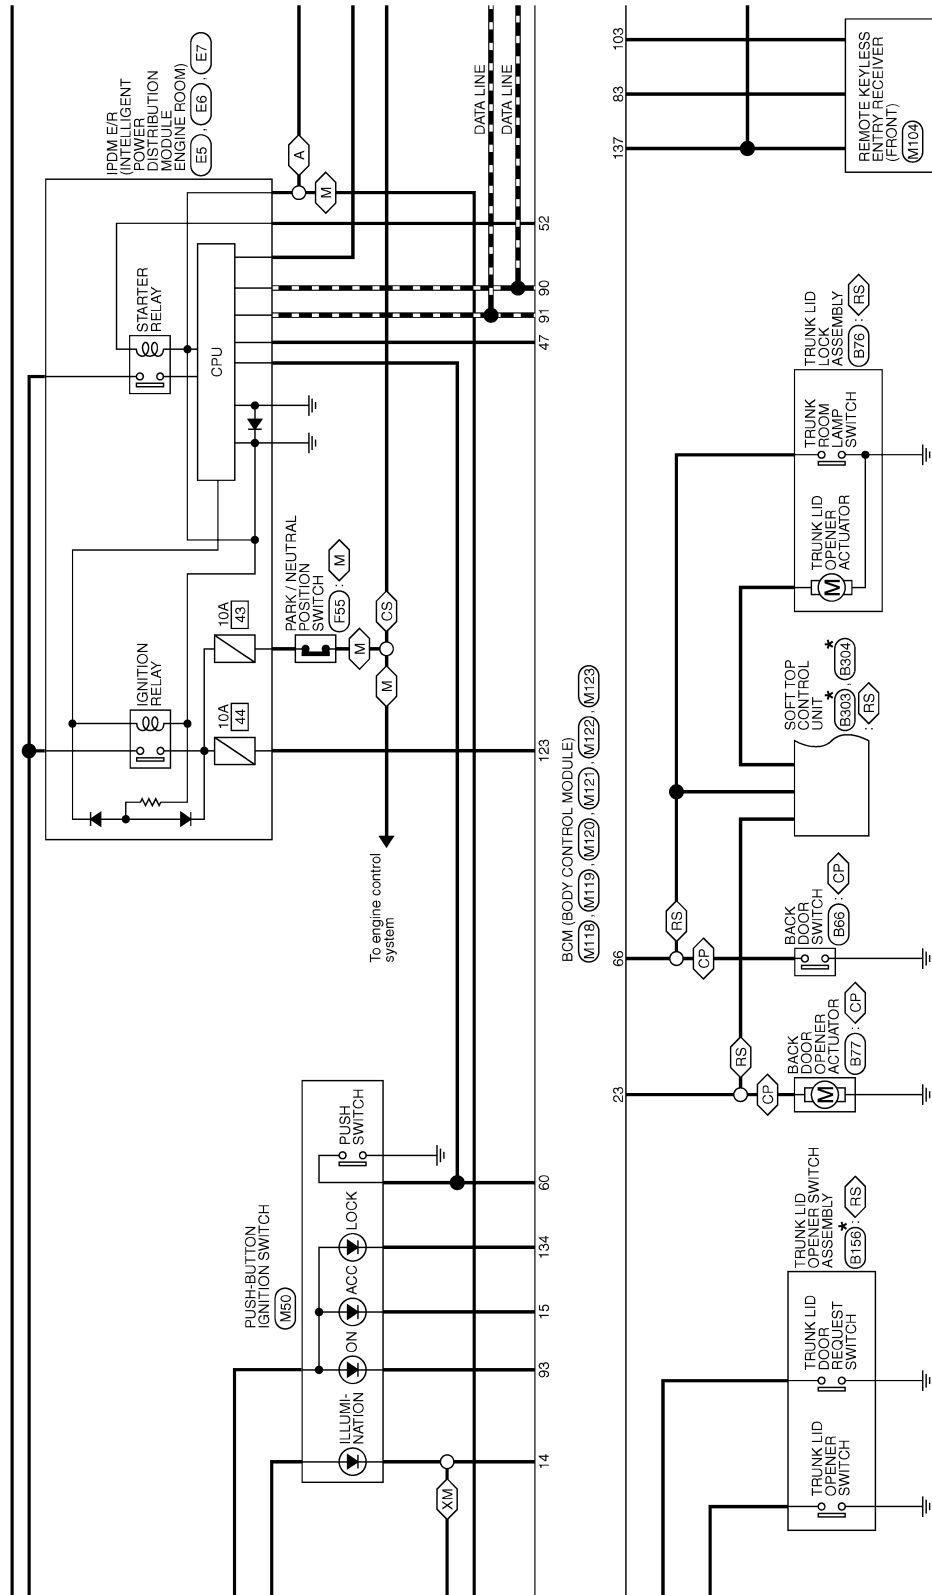
A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

- XM**: Except for Mexico
- CP**: Coupe models
- A**: With AT
- RS**: Roadster models
- M**: With M/T
- CS**: Coupe models with M/T and SynchroRev Match mode



*: This connector is not shown in "Harness Layout".

JRMWD0779GB

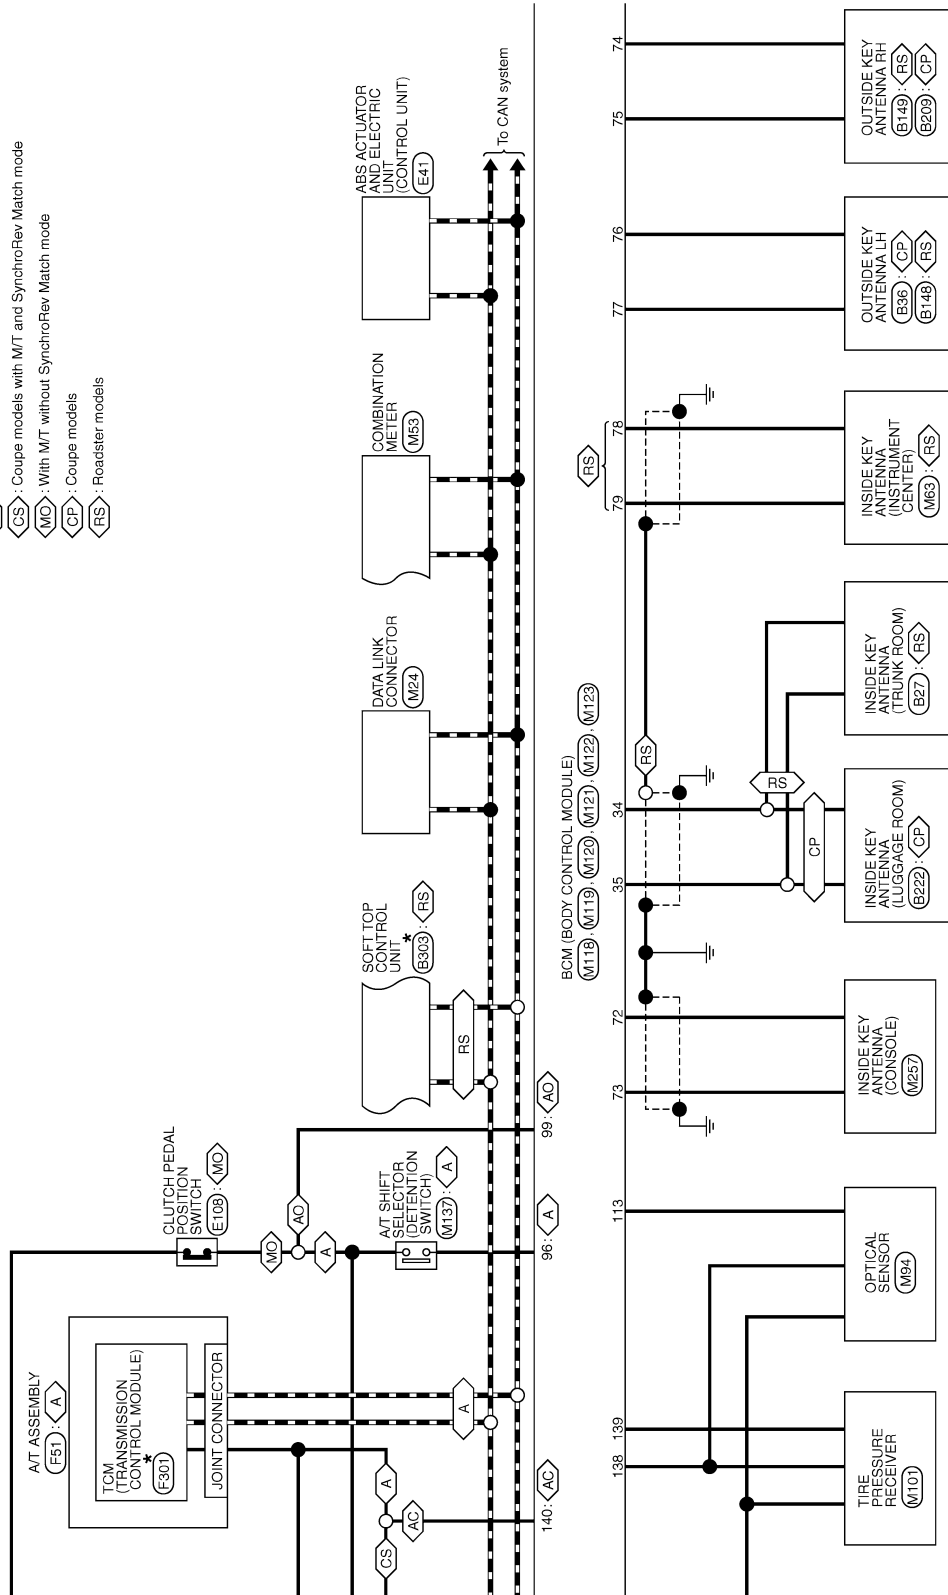
A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

- : With A/T
- : With A/T or coupe models with M/T and SynchroRev Match mode
- : With A/T or with M/T without SynchroRev Match mode
- : Coupe models with M/T and SynchroRev Match mode
- : With M/T without SynchroRev Match mode
- : Coupe models
- : Roadster models




*: This connector is not shown in "Harness Layout".

JRMWD0780GB

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

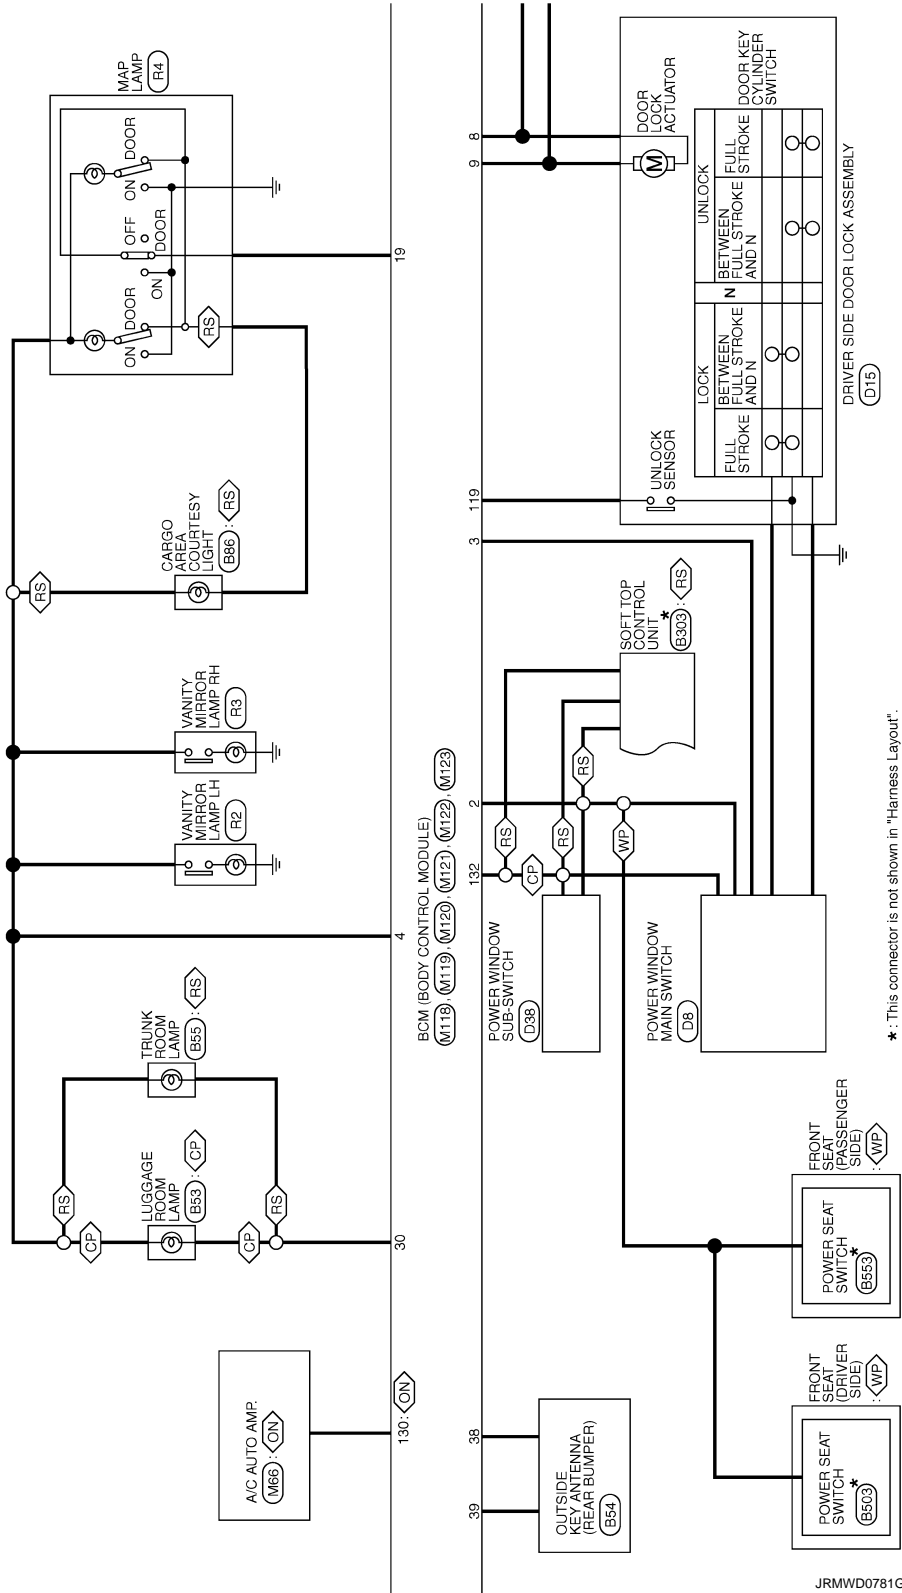- ◊CF◊ : Coupe models
- ◊RS◊ : Roadster models
- ◊WP◊ : With power seat
- ◊ON◊ : Without NAVI





JRMWD0781GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

BCM (BODY CONTROL MODULE)
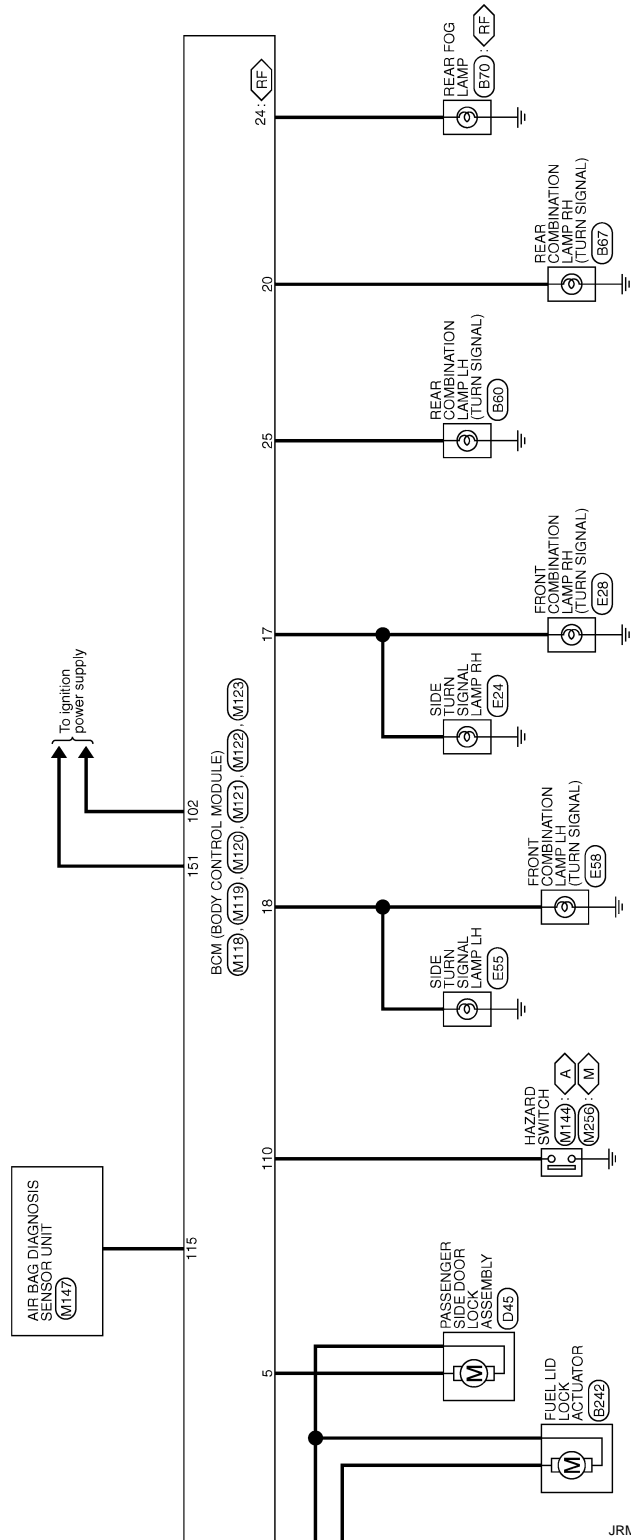
< ECU DIAGNOSIS INFORMATION >



JRMWD0782GB

Fail-safe

INFOID:000000008196598

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC are detected.

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Display contents of CONSULT | Fail-safe | Cancellation |
|-----------------------------|---|--|
| B2190: NATS ANTENNA AMP | Inhibit engine cranking | Erase DTC |
| B2191: DIFFERENCE OF KEY | Inhibit engine cranking | Erase DTC |
| B2192: ID DISCORD BCM-ECM | Inhibit engine cranking | Erase DTC |
| B2193: CHAIN OF BCM-ECM | Inhibit engine cranking | Erase DTC |
| B2195: ANTI SCANNING | Inhibit engine cranking | Ignition switch ON → OFF |
| B2560: STARTER CONT RELAY | Inhibit engine cranking | 500 ms after the following CAN signal communication status becomes consistent <ul style="list-style-type: none"> • Starter control relay signal • Starter relay status signal |
| B2608: STARTER RELAY | Inhibit engine cranking | 500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> • Starter motor relay control signal • Starter relay status signal (CAN) |
| B260A: IGNITION RELAY | Inhibit engine cranking | 500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> • IGN relay (IPDM E/R) control signal: OFF (Battery voltage) • Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) • Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal) |
| B260F: ENG STATE SIG LOST | Maintains the power supply position attained at the time of DTC detection | When any of the following conditions are fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN) |
| B2617: STARTER RELAY CIRC | Inhibit engine cranking | 1 second after the starter motor relay control inside BCM becomes normal |
| B2618: BCM | Inhibit engine cranking | 1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal |
| B261E: VEHICLE TYPE | Inhibit engine cranking | BCM initialization |
| B26E8: CLUTCH SW | Inhibit engine cranking | When any of the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Clutch switch signal (CAN from ECM): ON - Clutch interlock switch signal: OFF (0 V) • Status 2 <ul style="list-style-type: none"> - Clutch switch signal (CAN from ECM): OFF - Clutch interlock switch signal: ON (Battery voltage) |

DTC Inspection Priority Chart

INFOID:000000008196599

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

| Priority | DTC |
|----------|---|
| 1 | B2562: LOW VOLTAGE |
| 2 | <ul style="list-style-type: none"> • U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN) |
| 3 | <ul style="list-style-type: none"> • B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM • B2195: ANTI SCANNING |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| Priority | DTC |
|----------|---|
| 4 | <ul style="list-style-type: none"> • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP SW • B2605: PNP SW • B2608: STARTER RELAY • B260A: IGNITION RELAY • B260F: ENG STATE SIG LOST • B2614: BCM • B2615: BCM • B2616: BCM • B2617: BCM • B2618: BCM • B261A: PUSH-BTN IGN SW • B261E: VEHICLE TYPE • B26E8: CLUTCH SW • B26EA: KEY REGISTRATION • C1729: VHCL SPEED SIG ERR • U0415: VEHICLE SPEED SIG |
| 5 | <ul style="list-style-type: none"> • C1704: LOW PRESSURE FL • C1705: LOW PRESSURE FR • C1706: LOW PRESSURE RR • C1707: LOW PRESSURE RL • C1708: [NO DATA] FL • C1709: [NO DATA] FR • C1710: [NO DATA] RR • C1711: [NO DATA] RL • C1716: [PRESSDATA ERR] FL • C1717: [PRESSDATA ERR] FR • C1718: [PRESSDATA ERR] RR • C1719: [PRESSDATA ERR] RL • C1734: CONTROL UNIT |
| 6 | <ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA |

DTC Index

INFOID:000000008196600

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data, refer to [BCS-20, "COMMON ITEM : CONSULT Function \(BCM - COMMON ITEM\)"](#).

| CONSULT display | Fail-safe | Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition | Intelligent Key warning lamp ON | Tire pressure monitor warn- ing lamp ON | Reference |
|--|-----------|--|---------------------------------------|---|------------------------|
| No DTC is detected. further testing may be required. | — | — | — | — | — |
| U1000: CAN COMM CIRCUIT | — | — | — | — | BCS-49 |
| U1010: CONTROL UNIT (CAN) | — | — | — | — | BCS-50 |
| U0415: VEHICLE SPEED SIG | — | — | — | — | BCS-51 |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| CONSULT display | Fail-safe | Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition | Intelligent Key warning lamp ON | Tire pressure monitor warning lamp ON | Reference | |
|---------------------------|-----------|--|---------------------------------|---------------------------------------|--|-----|
| B2190: NATS ANTENNA AMP | × | — | — | — | SEC-46 | A |
| B2191: DIFFERENCE OF KEY | × | — | — | — | SEC-49 | B |
| B2192: ID DISCORD BCM-ECM | × | — | — | — | SEC-50 | C |
| B2193: CHAIN OF BCM-ECM | × | — | — | — | SEC-52 | |
| B2195: ANTI SCANNING | × | — | — | — | SEC-53 | D |
| B2553: IGNITION RELAY | — | × | — | — | PCS-50 | E |
| B2555: STOP LAMP | — | × | — | — | SEC-54 | |
| B2556: PUSH-BTN IGN SW | — | × | × | — | SEC-56 | F |
| B2557: VEHICLE SPEED | × | × | × | — | SEC-58 | G |
| B2560: STARTER CONT RELAY | × | × | × | — | SEC-59 | |
| B2562: LOW VOLTAGE | — | × | — | — | BCS-52 | H |
| B2601: SHIFT POSITION | × | × | × | — | SEC-60 | I |
| B2602: SHIFT POSITION | × | × | × | — | SEC-63 | J |
| B2603: SHIFT POSI STATUS | × | × | × | — | SEC-66 | |
| B2604: PNP SW | × | × | × | — | SEC-69 | K |
| B2605: PNP SW | × | × | × | — | SEC-71 | L |
| B2608: STARTER RELAY | × | × | × | — | SEC-73 | |
| B260A: IGNITION RELAY | × | × | × | — | PCS-52 | |
| B260F: ENG STATE SIG LOST | × | × | × | — | SEC-75 | |
| B2614: BCM | — | × | × | — | PCS-54 | |
| B2615: BCM | — | × | × | — | PCS-57 | |
| B2616: BCM | — | × | × | — | PCS-60 | |
| B2617: BCM | × | × | × | — | SEC-79 | |
| B2618: BCM | × | × | × | — | PCS-63 | |
| B261A: PUSH-BTN IGN SW | — | × | × | — | PCS-64 | |
| B261E: VEHICLE TYPE | × | × | × (Turn ON for 15 seconds) | — | SEC-82 | |
| B2621: INSIDE ANTENNA | — | × | — | — | DLK-228 | |
| B2622: INSIDE ANTENNA | — | × | — | — | • DLK-59 (Coupe) • DLK-230 (Roadster) | BCS |
| B2623: INSIDE ANTENNA | — | × | — | — | • DLK-61 (Coupe) • DLK-232 (Roadster) | N |
| B26E8: CLUTCH SW | × | × | × | — | SEC-76 | O |
| B26EA: KEY REGISTRATION | — | × | × (Turn ON for 15 seconds) | — | SEC-78 | |
| C1704: LOW PRESSURE FL | — | — | — | × | WT-20 | P |
| C1705: LOW PRESSURE FR | — | — | — | × | | |
| C1706: LOW PRESSURE RR | — | — | — | × | | |
| C1707: LOW PRESSURE RL | — | — | — | × | | |

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS INFORMATION >

| CONSULT display | Fail-safe | Freeze Frame Data •Vehicle Speed •Odo/Trip Meter •Vehicle condition | Intelligent Key warning lamp ON | Tire pressure monitor warn- ing lamp ON | Reference |
|---------------------------|-----------|--|---------------------------------------|---|-----------------------|
| C1708: [NO DATA] FL | — | — | — | × | WT-22 |
| C1709: [NO DATA] FR | — | — | — | × | |
| C1710: [NO DATA] RR | — | — | — | × | |
| C1711: [NO DATA] RL | — | — | — | × | |
| C1716: [PRESSDATA ERR] FL | — | — | — | × | WT-25 |
| C1717: [PRESSDATA ERR] FR | — | — | — | × | |
| C1718: [PRESSDATA ERR] RR | — | — | — | × | |
| C1719: [PRESSDATA ERR] RL | — | — | — | × | |
| C1729: VHCL SPEED SIG ERR | — | — | — | × | WT-27 |
| C1734: CONTROL UNIT | — | — | — | × | WT-29 |

COMBINATION SWITCH SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

COMBINATION SWITCH SYSTEM SYMPTOMS

Symptom Table

INFOID:000000008196601

1. Perform "Data Monitor" of CONSULT to check for any malfunctioning item.
2. Check the malfunction combinations.

Malfunction item: x

| Malfunction combination | Data monitor item | | | | | | | | | | | | | |
|-------------------------|---|--------------|--------------|--------------|------------|---------------|---------------|--------------|------------|----------------|----------------|------------|---------------|-----------|
| | FR WIPER HI | FR WIPER LOW | FR WASHER SW | FR WIPER INT | INT VOLUME | TURN SIGNAL R | TURN SIGNAL L | TAIL LAMP SW | HI BEAM SW | HEAD LAMP SW 1 | HEAD LAMP SW 2 | PASSING SW | AUTO LIGHT SW | RR FOG SW |
| A | | x | x | | | x | x | | | | | | | |
| B | x | | | x | | | | | | x | | x | | |
| C | | | | | x | | | | x | | x | | | |
| D | | | | | x | | | x | | | | | x | |
| E | | | | | x | | | | | | | | | x |
| F | x | | | | x | | | | | | | | | |
| G | | | x | | x | | | | | | | | | |
| H | | x | | x | | | | | | | | | x | x |
| I | | | | | | | x | | | | x | x | | |
| J | | | | | | x | | x | x | x | | | | |
| K | All Items | | | | | | | | | | | | | |
| L | If only one item is detected or the item is not applicable to the combinations A to K | | | | | | | | | | | | | |

3. Identify the malfunctioning part from the agreed combination and repair or replace the part.

| Malfunction combination | Malfunctioning part | Repair or replace |
|-------------------------|-------------------------------------|---|
| A | Combination switch INPUT 1 circuit | Inspect the combination switch input circuit applicable to the malfunctioning part. Refer to BCS-54, "Diagnosis Procedure" . |
| B | Combination switch INPUT 2 circuit | |
| C | Combination switch INPUT 3 circuit | |
| D | Combination switch INPUT 4 circuit | |
| E | Combination switch INPUT 5 circuit | |
| F | Combination switch OUTPUT 1 circuit | Inspect the combination switch output circuit applicable to the malfunctioning part. Refer to BCS-56, "Diagnosis Procedure" . |
| G | Combination switch OUTPUT 2 circuit | |
| H | Combination switch OUTPUT 3 circuit | |
| I | Combination switch OUTPUT 4 circuit | |
| J | Combination switch OUTPUT 5 circuit | |
| K | BCM | Replace BCM. Refer to BCS-95, "Exploded View" . |
| L | Combination switch | Replace the combination switch. |

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

NORMAL OPERATING CONDITION

Description

INFOID:000000008196602

TRANSIT MODE

- Transit mode inhibits battery power consumption during transportation or storage of the vehicle.
- BCM is set to transit mode before delivery.
- In transit mode, remote keyless entry function, headlamp ON/OFF function, theft warning alarm function, and other BCM control functions do not operate normally.
- Therefore, cancel operation must be performed so that the vehicle is used in normal status.
- For transit mode cancel operation, refer to [BCS-8, "Description"](#).

NOTE:

Do not cancel transit mode during storage of the vehicle. Always cancel transit mode before delivery of the vehicle to customer.

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

EXCEPT FOR MEXICO

EXCEPT FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000008196603

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

EXCEPT FOR MEXICO : Precaution for Battery Service

INFOID:000000008196604

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

FOR MEXICO

FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000008196605

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

PRECAUTIONS

< PRECAUTION >

- **Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see “SRS AIR BAG”.**
- **Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.**

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- **When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.**
- **When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.**

FOR MEXICO : Precaution for Battery Service

INFOID:000000008196606

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

BCM (BODY CONTROL MODULE)

< REMOVAL AND INSTALLATION >

REMOVAL AND INSTALLATION

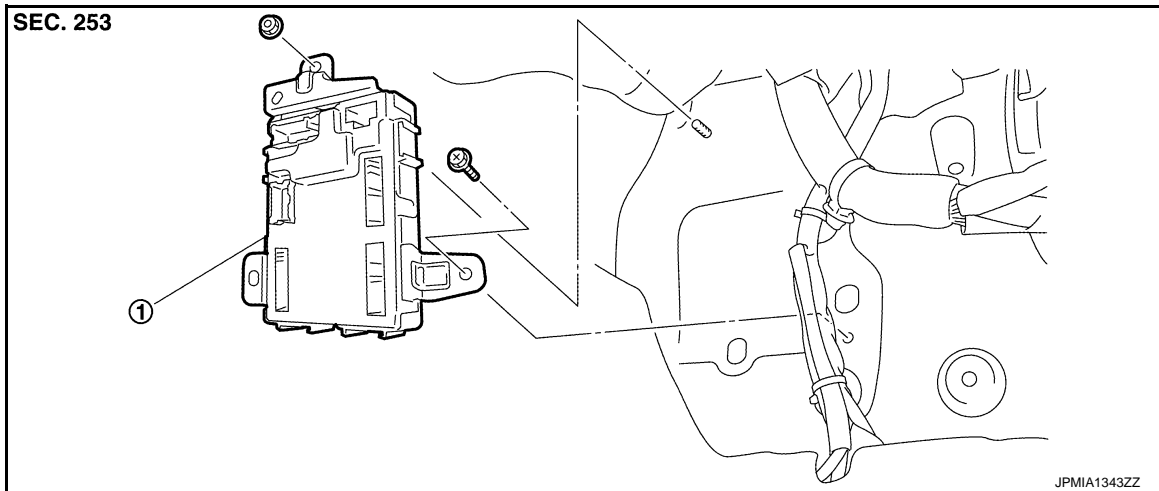
BCM (BODY CONTROL MODULE)

Exploded View

INFOID:000000008196607

NOTE:

Before replacing BCM, perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-3. "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(BCM\) : Description"](#).



1. BCM

Removal and Installation

INFOID:000000008196608

NOTE:

Before replacing BCM, perform "READ CONFIGURATION" to save or print current vehicle specification. Refer to [BCS-3. "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(BCM\) : Description"](#).

REMOVAL

1. Remove dash side finisher (passenger side). Refer to [INT-18. "Exploded View"](#).
2. Remove bolt and nut.
3. Remove BCM and disconnect the connector.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to perform "WRITE CONFIGURATION" when replacing BCM. Or not doing so, BCM control function does not operate normally.

NOTE:

Be sure to perform the system initialization (NATS) when replacing BCM. Refer to [BCS-3. "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT \(BCM\) : Work Procedure"](#).

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

BCS

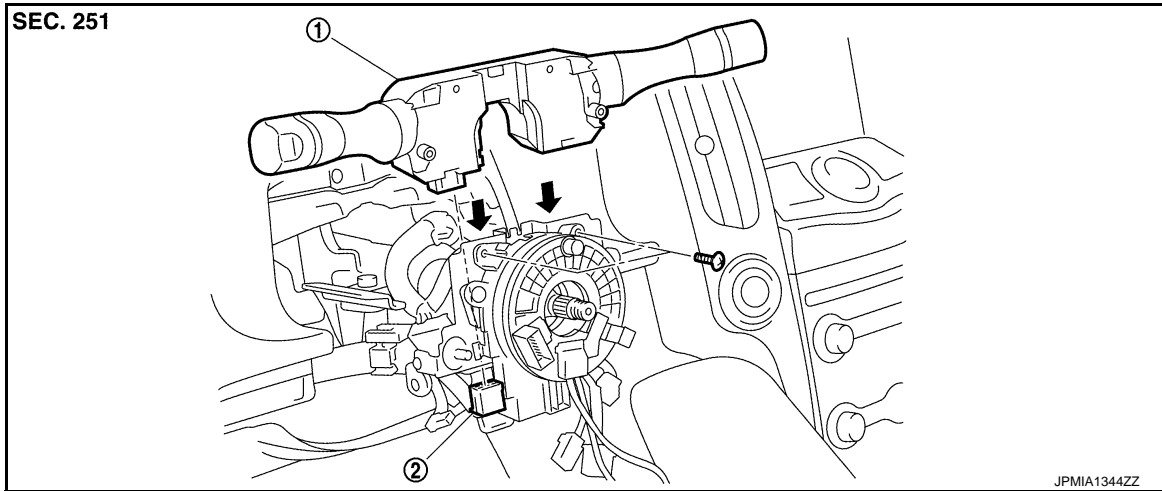
COMBINATION SWITCH

< REMOVAL AND INSTALLATION >

COMBINATION SWITCH

Exploded View

INFOID:000000008196609



1. Combination switch

2. Combination switch connector

Removal and Installation

INFOID:000000008196610

REMOVAL

1. Remove steering column cover. Refer to [IP-14, "Exploded View"](#).
2. Remove screws.
3. Disconnect the connector.
4. Pull up the combination switch to remove it.

INSTALLATION

Install in the reverse order of removal.