

SECTION **BRC**

BRAKE CONTROL SYSTEM

A
B
C
D
E

CONTENTS

VDC/TCS/ABS		
BASIC INSPECTION	4	
DIAGNOSIS AND REPAIR WORKFLOW	4	
Work Flow	4	
Diagnostic Work Sheet	5	
INSPECTION AND ADJUSTMENT	7	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT	7	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description	7	
ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement	7	
ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION	7	
ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description	7	
ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement	7	
SYSTEM DESCRIPTION	9	
VDC	9	
System Diagram	9	
System Description	9	
Component Parts Location	10	
Component Description	10	
TCS	12	
System Diagram	12	
System Description	12	
Component Parts Location	13	
Component Description	13	
ABS	15	
System Diagram	15	
System Description	15	
Component Parts Location	16	
Component Description	16	
EBD	18	
System Diagram	18	
System Description	18	
Component Parts Location	19	
Component Description	19	
DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]	21	
CONSULT Function	21	
DTC/CIRCUIT DIAGNOSIS	26	
C1101, C1102, C1103, C1104 WHEEL SENSOR	26	
Description	26	
DTC Logic	26	
Diagnosis Procedure	27	
C1105, C1106, C1107, C1108 WHEEL SENSOR	31	
Description	31	
DTC Logic	31	
Diagnosis Procedure	32	
C1109 POWER AND GROUND SYSTEM	38	
Description	38	
DTC Logic	38	
Diagnosis Procedure	38	
C1110, C1153 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)	40	
DTC Logic	40	
Diagnosis Procedure	41	
C1111 ABS MOTOR, MOTOR RELAY SYSTEM	42	
Description	42	
DTC Logic	42	
Diagnosis Procedure	43	

BRC

G
H
I
J
K
L
M
N
O
P

C1115 WHEEL SENSOR	45	C1170 VARIANT CODING	83
Description	45	DTC Logic	83
DTC Logic	45	Diagnosis Procedure	83
Diagnosis Procedure	46		
C1116 STOP LAMP SWITCH	52	U1000 CAN COMM CIRCUIT	84
Description	52	Description	84
DTC Logic	52	DTC Logic	84
Diagnosis Procedure	53	Diagnosis Procedure	84
Component Inspection	56		
C1120, C1122, C1124, C1126 IN ABS SOL	57	U1002 SYSTEM COMM (CAN)	85
Description	57	Description	85
DTC Logic	57	DTC Logic	85
Diagnosis Procedure	58	Diagnosis Procedure	85
C1121, C1123, C1125, C1127 OUT ABS SOL..	59	POWER SUPPLY AND GROUND CIRCUIT	87
Description	59	Description	87
DTC Logic	59	Diagnosis Procedure	87
Diagnosis Procedure	60		
C1130 ENGINE SIGNAL	61	PARKING BRAKE SWITCH	90
Description	61	Description	90
DTC Logic	61	Diagnosis Procedure	90
Diagnosis Procedure	61	Component Inspection	90
C1140 ACTUATOR RELAY SYSTEM	63	VDC OFF SWITCH	92
Description	63	Description	92
DTC Logic	63	Diagnosis Procedure	92
Diagnosis Procedure	63	Component Inspection	93
C1142 PRESS SENSOR	65	ABS WARNING LAMP	94
Description	65	Description	94
DTC Logic	65	Component Function Check	94
Diagnosis Procedure	65	Diagnosis Procedure	94
C1143 STEERING ANGLE SENSOR	68	BRAKE WARNING LAMP	95
Description	68	Description	95
DTC Logic	68	Component Function Check	95
Diagnosis Procedure	69	Diagnosis Procedure	95
C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT	72	VDC WARNING LAMP	96
DTC Logic	72	Description	96
Diagnosis Procedure	72	Component Function Check	96
C1145, C1146 YAW RATE/SIDE G SENSOR...	74	Diagnosis Procedure	96
Description	74	VDC OFF INDICATOR LAMP	97
DTC Logic	74	Description	97
Diagnosis Procedure	74	Component Function Check	97
C1147, C1148, C1149, C1150 USV/HSV LINE..	77	Diagnosis Procedure	97
Description	77	ECU DIAGNOSIS INFORMATION	99
DTC Logic	77	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)	99
Diagnosis Procedure	78	Reference Value	99
C1155 BRAKE FLUID LEVEL SWITCH	79	Wiring Diagram - BRAKE CONTROL SYSTEM - .	103
Description	79	Fail-Safe	107
DTC Logic	79	DTC Inspection Priority Chart	108
Diagnosis Procedure	79	DTC Index	109
Component Inspection	82	SYMPTOM DIAGNOSIS	110
		EXCESSIVE ABS FUNCTION OPERATION FREQUENCY	110

Diagnosis Procedure	110	FOR MEXICO : Precaution for Brake Control	120	
UNEXPECTED PEDAL REACTION	111	FOR MEXICO : Precautions for Harness Repair ..	121	A
Diagnosis Procedure	111	FOR MEXICO : Precautions for Removing Battery		
THE BRAKING DISTANCE IS LONG	112	Terminal	121	B
Diagnosis Procedure	112	PREPARATION	122	
ABS FUNCTION DOES NOT OPERATE	113	PREPARATION	122	C
Diagnosis Procedure	113	Special Service Tool	122	
PEDAL VIBRATION OR ABS OPERATION		REMOVAL AND INSTALLATION	123	D
SOUND OCCURS	114	WHEEL SENSOR	123	
Diagnosis Procedure	114	FRONT WHEEL SENSOR	123	E
VEHICLE JERKS DURING VDC/TCS/ABS		FRONT WHEEL SENSOR : Exploded View	123	
CONTROL	115	FRONT WHEEL SENSOR : Removal and Instal-		
Diagnosis Procedure	115	lation	123	
NORMAL OPERATING CONDITION	116	REAR WHEEL SENSOR	124	BRC
Description	116	REAR WHEEL SENSOR : Exploded View	124	
PRECAUTION	117	REAR WHEEL SENSOR : Removal and Installa-		
PRECAUTIONS	117	tion	124	G
FOR USA AND CANADA	117	SENSOR ROTOR	125	
FOR USA AND CANADA : Precaution for Supple-		FRONT SENSOR ROTOR	125	H
mental Restraint System (SRS) "AIR BAG" and		FRONT SENSOR ROTOR : Exploded View	125	
"SEAT BELT PRE-TENSIONER"	117	FRONT SENSOR ROTOR : Removal and Instal-		
FOR USA AND CANADA : Precaution for Battery		lation	125	I
Service	117	REAR SENSOR ROTOR	125	
FOR USA AND CANADA : Precaution for Proce-		REAR SENSOR ROTOR : Exploded View	125	J
dure without Cowl Top Cover	117	REAR SENSOR ROTOR : Removal and Installa-		
FOR USA AND CANADA : Precaution for Brake		tion	125	
System	118	ABS ACTUATOR AND ELECTRIC UNIT		
FOR USA AND CANADA : Precaution for Brake		(CONTROL UNIT)	126	K
Control	118	Exploded View	126	
FOR USA AND CANADA : Precautions for Har-		Removal and Installation	126	L
ness Repair	118	YAW RATE/SIDE G SENSOR	128	
FOR USA AND CANADA : Precautions for Re-		Exploded View	128	M
moving Battery Terminal	119	Removal and Installation	128	
FOR MEXICO	119	STEERING ANGLE SENSOR	129	N
FOR MEXICO : Precaution for Supplemental Re-		Exploded View	129	
straint System (SRS) "AIR BAG" and "SEAT BELT		Removal and Installation	129	
PRE-TENSIONER"	119	VDC OFF SWITCH	130	O
FOR MEXICO : Precaution for Battery Service	120	Removal and Installation	130	
FOR MEXICO : Precaution for Procedure without				P
Cowl Top Cover	120			
FOR MEXICO : Precaution for Brake System	120			

BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000011736934

DETAILED FLOW

1. INTERVIEW FROM THE CUSTOMER

Clarify customer complaints before inspection. First of all, perform an interview utilizing [BRC-5, "Diagnostic Work Sheet"](#) and reproduce the symptom as well as fully understand it. Ask customer about his/her complaints carefully. Check symptoms by driving vehicle with customer, if necessary.

CAUTION:

Customers are not professional. Never guess easily like “maybe the customer means that...,” or “maybe the customer mentions this symptom”.

>> GO TO 2.

2. CHECK SYMPTOM

Reproduce the symptom that is indicated by the customer, based on the information from the customer obtained by interview. Also check that the symptom is not caused by fail-safe mode. Refer to [BRC-107, "Fail-Safe"](#).

CAUTION:

When the symptom is caused by normal operation, fully inspect each portion and obtain the understanding of customer that the symptom is not caused by a malfunction.

>> GO TO 3.

3. PERFORM THE SELF-DIAGNOSIS

Ⓟ With CONSULT

1. Turn the ignition switch OFF → ON.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

2. Perform self-diagnosis for “ABS”.

Is DTC detected?

YES >> Record or print self-diagnosis results and freeze frame data (FFD). GO TO 4.

NO >> GO TO 6.

4. RECHECK THE SYMPTOM

Ⓟ With CONSULT

1. Erase self-diagnostic results for “ABS”.
2. Turn the ignition switch OFF → ON → OFF.

CAUTION:

Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

3. Perform DTC confirmation procedures for the error-detected system.

NOTE:

If some DTCs are detected at the same time, determine the order for performing the diagnosis based on [BRC-108, "DTC Inspection Priority Chart"](#).

Is DTC detected?

YES >> GO TO 5.

NO >> Check harness and connectors based on the information obtained by interview. Refer to [GI-45, "Intermittent Incident"](#).

5. REPAIR OR REPLACE ERROR-DETECTED PART

Ⓟ With CONSULT

1. Repair or replace error-detected parts.
2. Reconnect part or connector after repairing or replacing.
3. When DTC is detected, erase self-diagnostic result for “ABS”.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[VDC/TCS/ABS]

CAUTION:

- Turn the ignition switch OFF → ON → OFF after erase self-diagnosis result.
- Be sure to wait of 10 seconds after turning ignition switch OFF or ON.

>> GO TO 7.

6. IDENTIFY ERROR-DETECTED SYSTEM BY SYMPTOM DIAGNOSIS

Estimate error-detected system based on symptom diagnosis and perform inspection.

Can the error-detected system be identified?

YES >> GO TO 7.

NO >> Check harness and connectors based on the information obtained by interview. Refer to [GI-45](#).
"Intermittent Incident".

7. FINAL CHECK

With CONSULT

1. Check the reference value for "ABS".
2. Recheck the symptom and check that the symptom is not reproduced on the same conditions.

Is the symptom reproduced?

YES >> GO TO 3.

NO >> INSPECTION END

Diagnostic Work Sheet

INFOID:000000012013642

DESCRIPTION

- In general, customers have their own criteria for a problem. Therefore, it is important to understand the symptom and status well enough by asking the customer about his/her concerns carefully. To systemize all the information for the diagnosis, prepare the interview sheet referring to the interview points.
- In some cases, multiple conditions that appear simultaneously may cause a DTC to be detected.

INTERVIEW SHEET SAMPLE

Interview sheet					
Customer name	MR/MS	Registration number		Initial year registration	
		Vehicle type		VIN	
Storage date		Engine/traction Motor		Mileage	km (Mile)
Symptom	<input type="checkbox"/> Does not operate () function <input type="checkbox"/> Warning lamp turns ON.				
	<input type="checkbox"/> ABS or <input type="checkbox"/> BRAKE or <input type="checkbox"/> <input type="checkbox"/> OFF				
	<input type="checkbox"/> Other ()				
	<input type="checkbox"/> Noise (Location:) <input type="checkbox"/> Vibration (Location:)				
	<input type="checkbox"/> Other ()				
First occurrence	<input type="checkbox"/> Recently <input type="checkbox"/> Other ()				
Frequency of occurrence	<input type="checkbox"/> Always <input type="checkbox"/> Under a certain conditions of <input type="checkbox"/> Sometimes (time(s)/day)				
Climate conditions	<input type="checkbox"/> Irrelevant				
	Weather	<input type="checkbox"/> Fine <input type="checkbox"/> Cloud <input type="checkbox"/> Rain <input type="checkbox"/> Snow <input type="checkbox"/> Others ()			
	Temperature	<input type="checkbox"/> Hot <input type="checkbox"/> Warm <input type="checkbox"/> Cool <input type="checkbox"/> Cold <input type="checkbox"/> Temperature [Approx. °C (°F)]			
Relative humidity	<input type="checkbox"/> High <input type="checkbox"/> Moderate <input type="checkbox"/> Low				
Road conditions	<input type="checkbox"/> Ordinary road <input type="checkbox"/> Highway <input type="checkbox"/> Mountainous road (uphill or downhill) <input type="checkbox"/> Rough road				

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

[VDC/TCS/ABS]

Interview sheet

Customer name	MR/MS	Registration number		Initial year registration	
		Vehicle type		VIN	
Storage date		Engine/traction Motor		Mileage	km (Mile)
Operating condition, etc.		<input type="checkbox"/> Irrelevant <input type="checkbox"/> When engine/traction motor starts <input type="checkbox"/> During idling <input type="checkbox"/> During driving <input type="checkbox"/> During acceleration <input type="checkbox"/> At constant speed driving <input type="checkbox"/> During deceleration <input type="checkbox"/> Immediately before stop [Vehicle speed: Approx. km/h (MPH)] <input type="checkbox"/> During cornering (right curve or left curve) <input type="checkbox"/> When steering wheel is steered (to right or to left)			
Other conditions	VDC OFF switch operation	<input type="checkbox"/> Yes <input type="checkbox"/> No			
	Use of other functions (ex. ICC)	<input type="checkbox"/> Yes <input type="checkbox"/> No ()			
	Presence of non-genuine parts installation	<input type="checkbox"/> Yes <input type="checkbox"/> No ()			

Memo

INSPECTION AND ADJUSTMENT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Description

INFOID:000000011736936

After replacing the ABS actuator and electric unit (control unit), perform the neutral position adjustment for the steering angle sensor. Refer to [BRC-7, "ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement"](#).

ADDITIONAL SERVICE WHEN REPLACING CONTROL UNIT : Special Repair Requirement

INFOID:000000011736937

1. PERFORM THE NEUTRAL POSITION ADJUSTMENT FOR THE STEERING ANGLE SENSOR

Perform the neutral position adjustment for the steering angle sensor.

>> Refer to [BRC-7, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description

INFOID:000000011736938

When doing work that applies to the list below, make sure to adjust neutral position of steering angle sensor before running vehicle. Refer to [BRC-7, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement"](#).

x: Required –: Not required

Situation	Adjustment of steering angle sensor neutral position
Removing/Installing ABS actuator and electric unit (control unit)	—
Replacing ABS actuator and electric unit (control unit)	x
Removing/Installing steering angle sensor	x
Replacing steering angle sensor	x
Removing/Installing steering components	x
Replacing steering components	x
Removing/Installing suspension components	x
Replacing suspension components	x
Removing/Installing tire	—
Change tires to new ones	—
Tire rotation	—
Adjusting wheel alignment	x

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Special Repair Requirement

INFOID:000000011736939

ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION

CAUTION:

To adjust neutral position of steering angle sensor, make sure to use CONSULT. (Adjustment cannot be done without CONSULT.)

1. ALIGN THE VEHICLE STATUS

Stop vehicle with front wheels in straight-ahead position.

>> GO TO 2.

INSPECTION AND ADJUSTMENT

[VDC/TCS/ABS]

< BASIC INSPECTION >

2. PERFORM THE NEUTRAL POSITION ADJUSTMENT FOR THE STEERING ANGLE SENSOR

1. Select "ABS", "WORK SUPPORT" and "ST ANGLE SENSOR ADJUSTMENT" in order with CONSULT.
2. Select "START".

CAUTION:

Do not touch steering wheel while adjusting steering angle sensor.

3. After approximately 10 seconds, select "END".

NOTE:

After approximately 60 seconds, it ends automatically.

4. Turn the ignition switch OFF, then turn it ON again.

CAUTION:

Be sure to perform above operation.

>> GO TO 3.

3. CHECK DATA MONITOR

1. Run the vehicle with front wheels in straight-ahead position, then stop.
2. Select "ABS", "DATA MONITOR" and "STR ANGLE SIG" in order with CONSULT, and check the steering angle sensor signal.

STR ANGLE SIG : 0±2.5°

Is the steering angle within the specified range?

YES >> GO TO 4.

NO >> Perform the neutral position adjustment for the steering angle sensor again, GO TO 1.

4. ERASE THE SELF-DIAGNOSIS MEMORY

Erase the self-diagnosis memories for "ABS" and "ENGINE" with CONSULT.

- "ABS": Refer to [BRC-21, "CONSULT Function"](#).
- "ENGINE": Refer to [EC-155, "CONSULT Function"](#).

Are the memories erased?

YES >> INSPECTION END


NO >> Check the items indicated by the self-diagnosis.

SYSTEM DESCRIPTION

VDC

System Diagram

INFOID:000000011736940

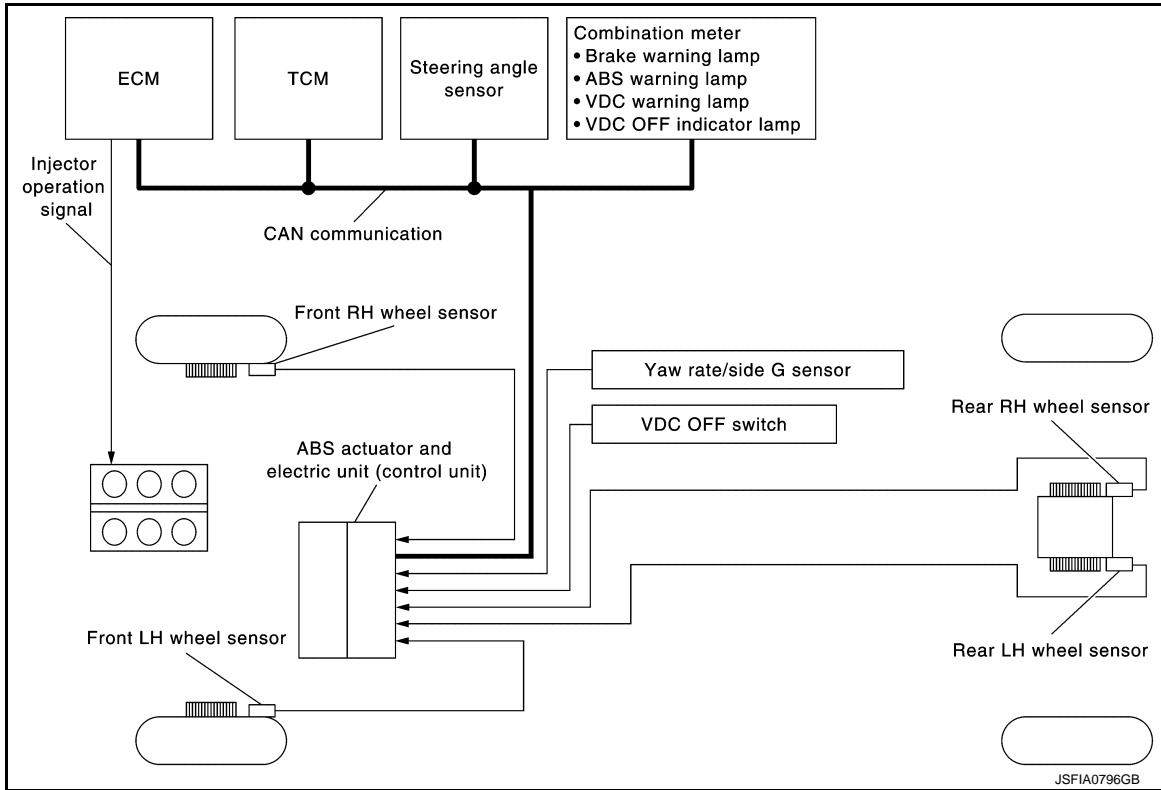

A

B

C

D

E

BRC

G

H

I

J

System Description

INFOID:000000011736941

- Vehicle Dynamics Control system detects driver's steering operation amount and brake pedal travel from steering angle sensor and pressure sensor. Using information from yaw rate/side G sensor and wheel sensor, VDC judges driving condition (conditions of under steer and over steer) to improve vehicle driving stability by controlling brake application to 4 wheels and engine output.
- During VDC operation, it informs driver of system operation by flashing VDC warning lamp.
- Electrical system diagnosis by CONSULT is available.

K


L

M

N

O

P

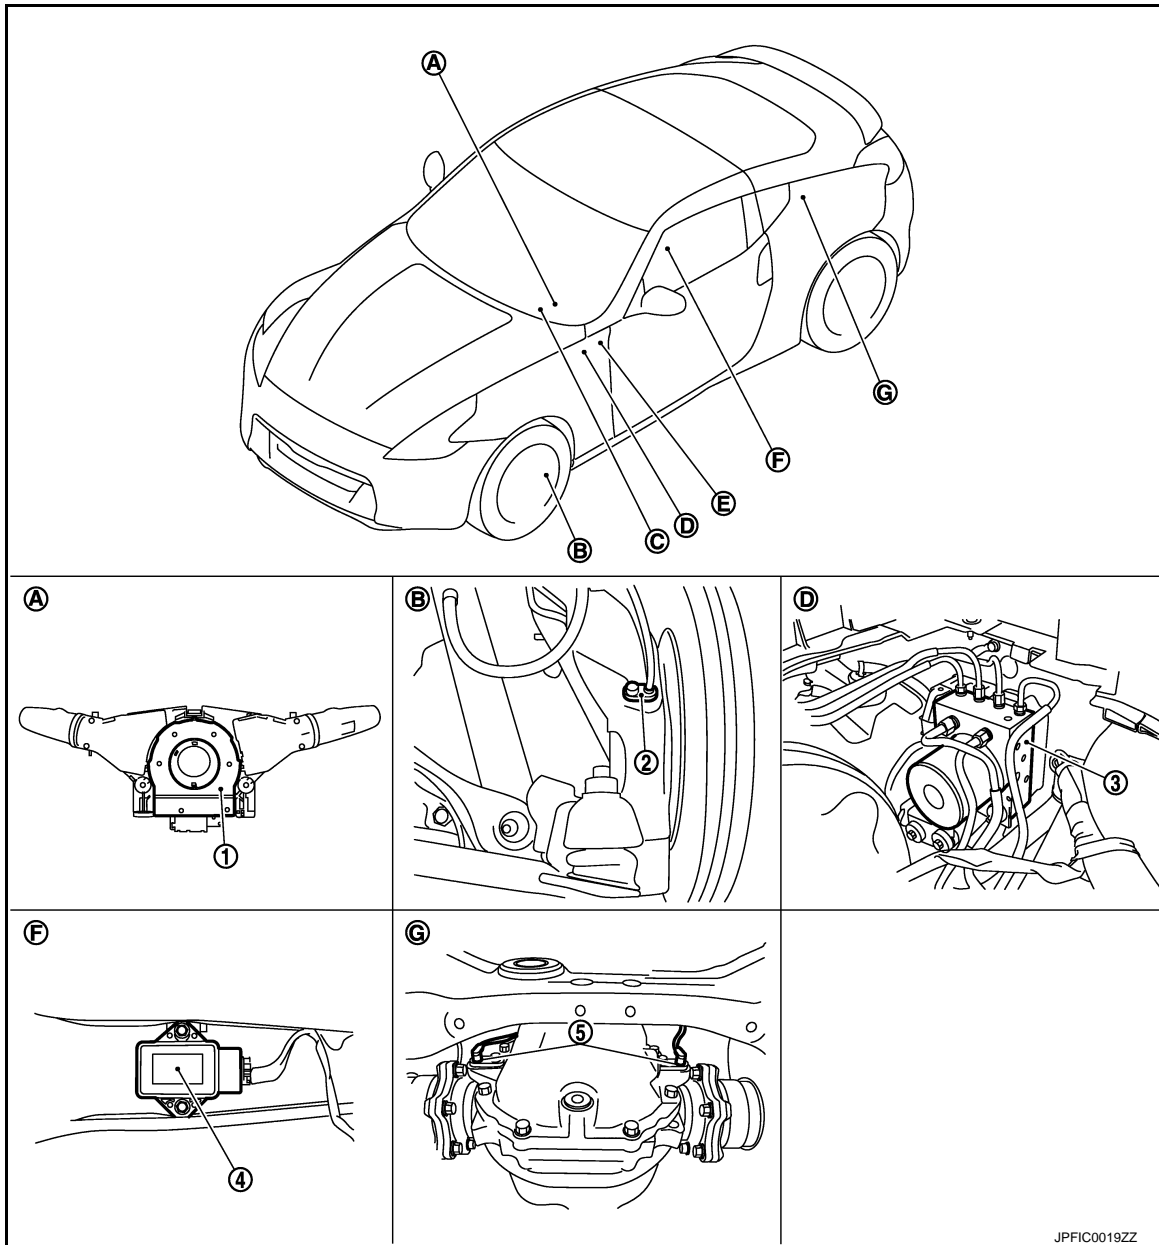

- | | | |
|---------------------------------------|---|---|
| 1. Steering angle sensor | 2. Front wheel sensor | 3. ABS actuator and electric unit (control unit) |
| 4. Yaw rate/side G sensor | 5. Rear wheel sensor | |
| A. Back of spiral cable assembly | B. Steering knuckle | C. ABS warning lamp, brake warning lamp, VDC OFF indicator lamp, VDC warning lamp: MWI-6, "METER SYSTEM : System Description" |
| D. Inside brake master cylinder cover | E. VDC OFF switch: IP-13, "Exploded View" | F. Under center console |
| G. Rear final drive assembly | | |

Component Description

VDC

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Component parts		Reference	
ABS actuator and electric unit (control unit)	Pump	BRC-42. "Description"	A
	Motor		
	Actuator relay	BRC-63. "Description"	B
	Solenoid valve	BRC-57. "Description" , BRC-59. "Description"	
	Pressure sensor	BRC-65. "Description"	C
	VDC switch-over valve (USV1, USV2, HSV1, HSV2)	BRC-77. "Description"	
Wheel sensor	BRC-26. "Description"	D	
Yaw rate/side G sensor	BRC-74. "Description"		
Steering angle sensor	BRC-68. "Description"	E	
VDC OFF switch	BRC-92. "Description"		
ABS warning lamp	BRC-94. "Description"		
Brake warning lamp	BRC-95. "Description"	BRC	
VDC warning lamp	BRC-96. "Description"		
VDC OFF indicator lamp	BRC-97. "Description"		

BRC

G

H

I

J

K

L

M

N


O

P

TCS

System Diagram


INFOID:000000011736944

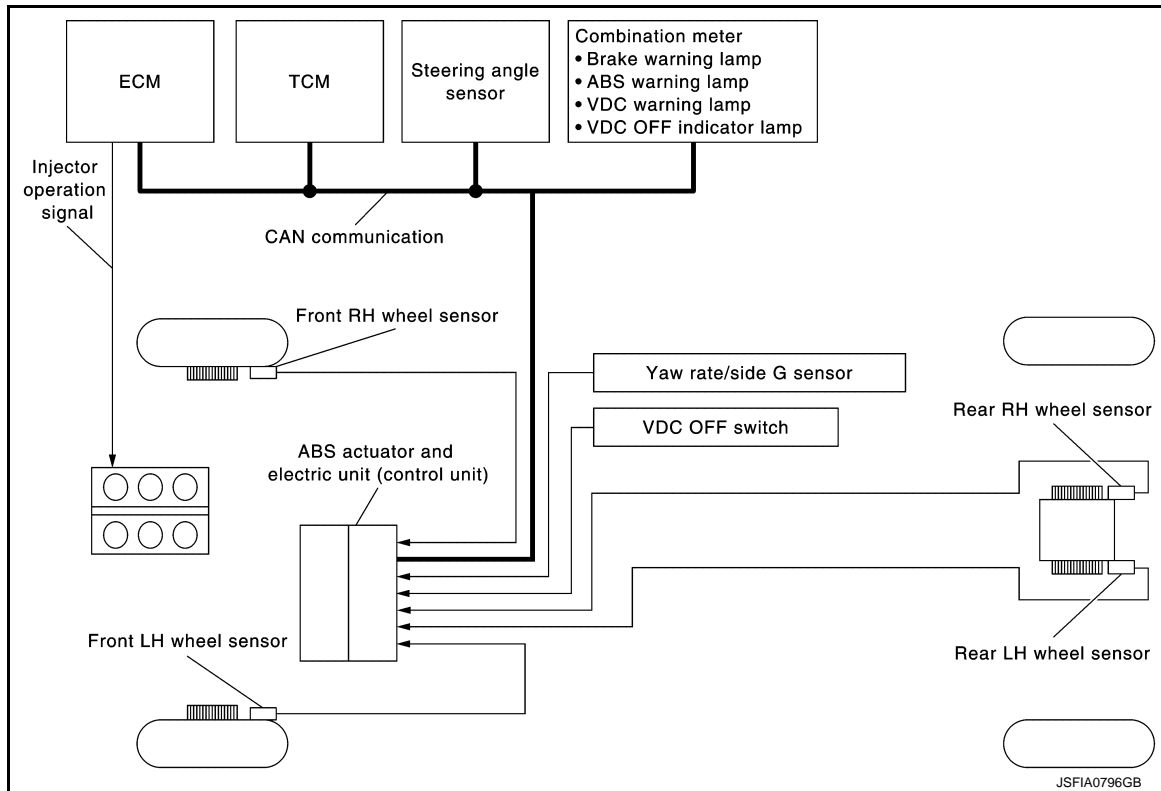

System Description

INFOID:000000011736945

- Traction Control System is a function that electronically controls engine torque, brake fluid pressure and A/T gear position to ensure the optimum slippage ratio at drive wheels by computing wheel speed signals from 4 wheel sensors. When ABS actuator and electric unit (control unit) detects a spin at drive wheels (rear wheels), it compares wheel speed signals from all 4 wheels. At this time, LH and RH rear brake fluid pressure are controlled, while fuel being cut to engine and throttle valve being closed to reduce engine torque by the control unit. Further more, throttle position is continuously controlled to ensure the optimum engine torque at all times.
- During TCS operation, TCS informs driver of system operation by flashing VDC warning lamp.
- Electrical system diagnosis by CONSULT is available.

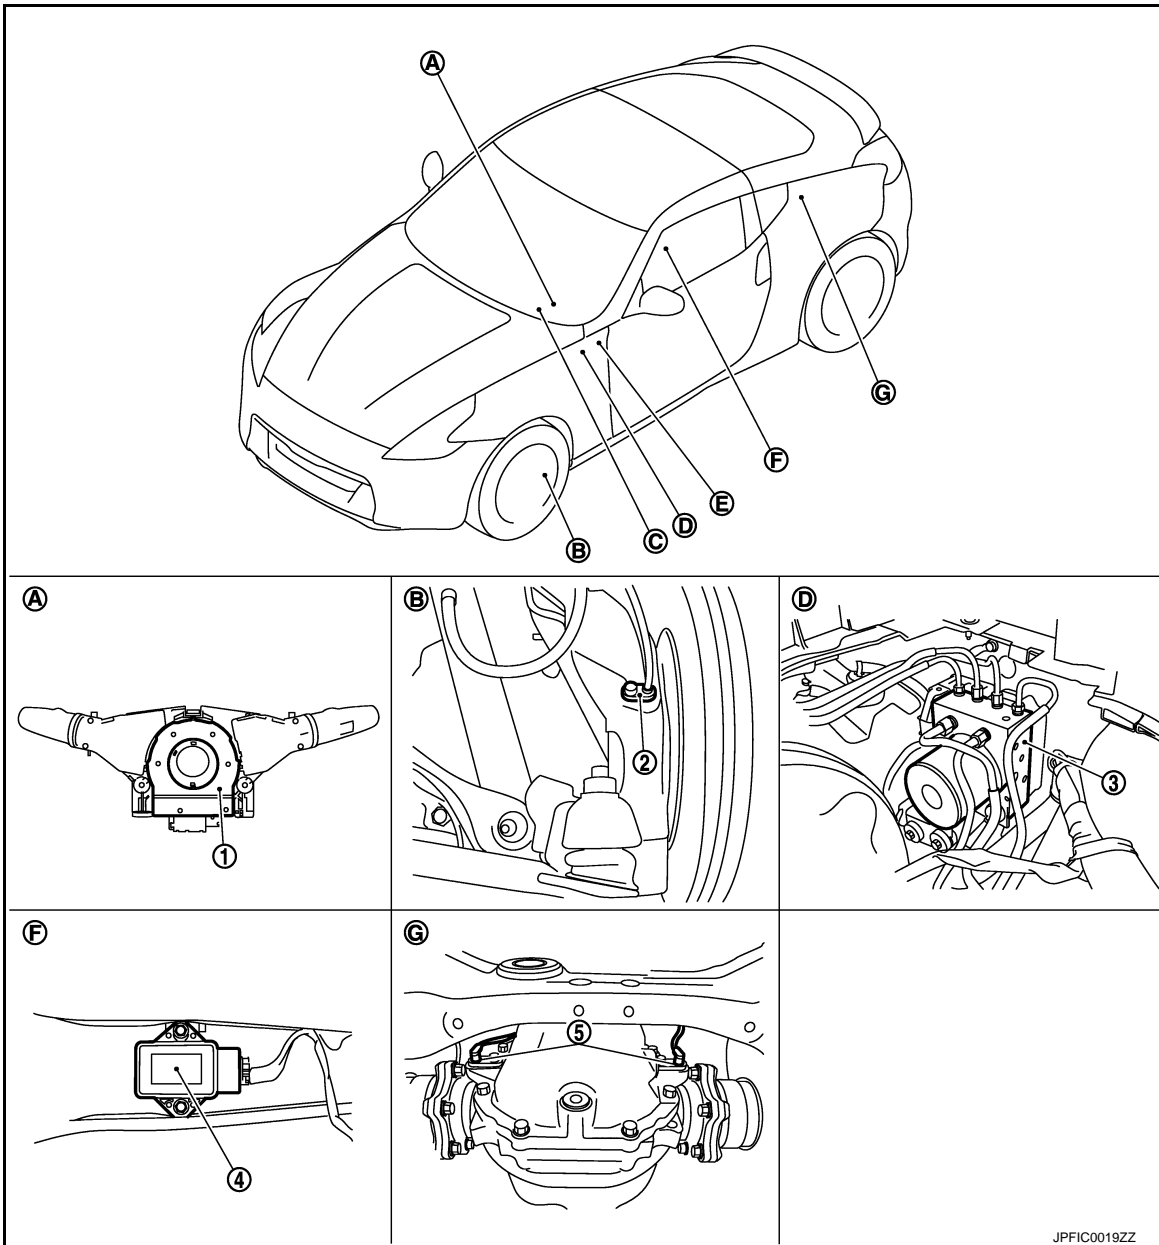

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

- | | | |
|---------------------------------------|---|---|
| 1. Steering angle sensor | 2. Front wheel sensor | 3. ABS actuator and electric unit (control unit) |
| 4. Yaw rate/side G sensor | 5. Rear wheel sensor | |
| A. Back of spiral cable assembly | B. Steering knuckle | C. ABS warning lamp, brake warning lamp, VDC OFF indicator lamp, VDC warning lamp: MWI-6, "METER SYSTEM : System Description" |
| D. Inside brake master cylinder cover | E. VDC OFF switch: IP-13, "Exploded View" | F. Under center console |
| G. Rear final drive assembly | | |

Component Description

TCS

< SYSTEM DESCRIPTION >


[VDC/TCS/ABS]

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	BRC-42. "Description"
	Motor	
	Actuator relay	BRC-63. "Description"
	Solenoid valve	BRC-57. "Description" , BRC-59. "Description"
	Pressure sensor	BRC-65. "Description"
	VDC switch-over valve (USV1, USV2, HSV1, HSV2)	BRC-77. "Description"
Wheel sensor		BRC-26. "Description"
Yaw rate/side G sensor		BRC-74. "Description"
Steering angle sensor		BRC-68. "Description"
VDC OFF switch		BRC-92. "Description"
ABS warning lamp		BRC-94. "Description"
Brake warning lamp		BRC-95. "Description"
VDC warning lamp		BRC-96. "Description"
VDC OFF indicator lamp		BRC-97. "Description"

ABS

System Diagram

INFOID:000000011736948

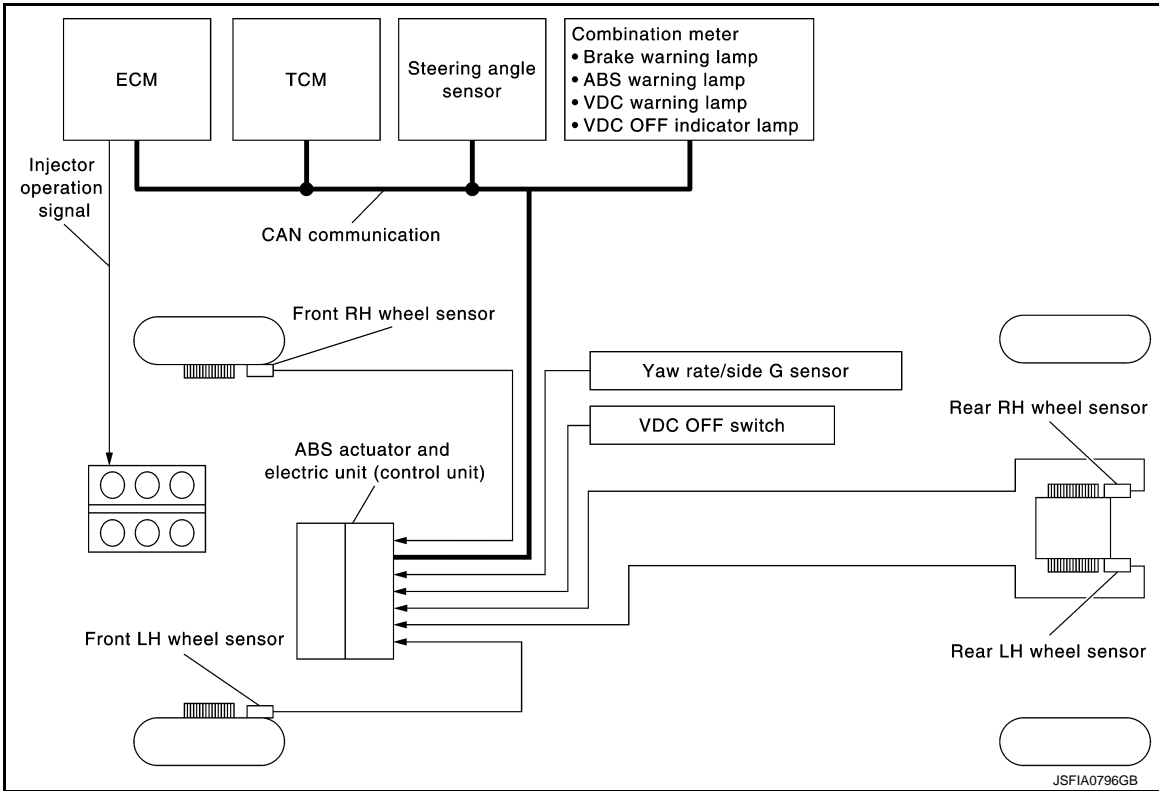


A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

System Description

INFOID:000000011736949

- Anti-Lock Braking System detects wheel revolution while braking, electronically controls braking force, and prevents wheel locking during sudden braking. It improves handling stability and maneuverability for avoiding obstacles.
- Electrical system diagnosis by CONSULT is available.

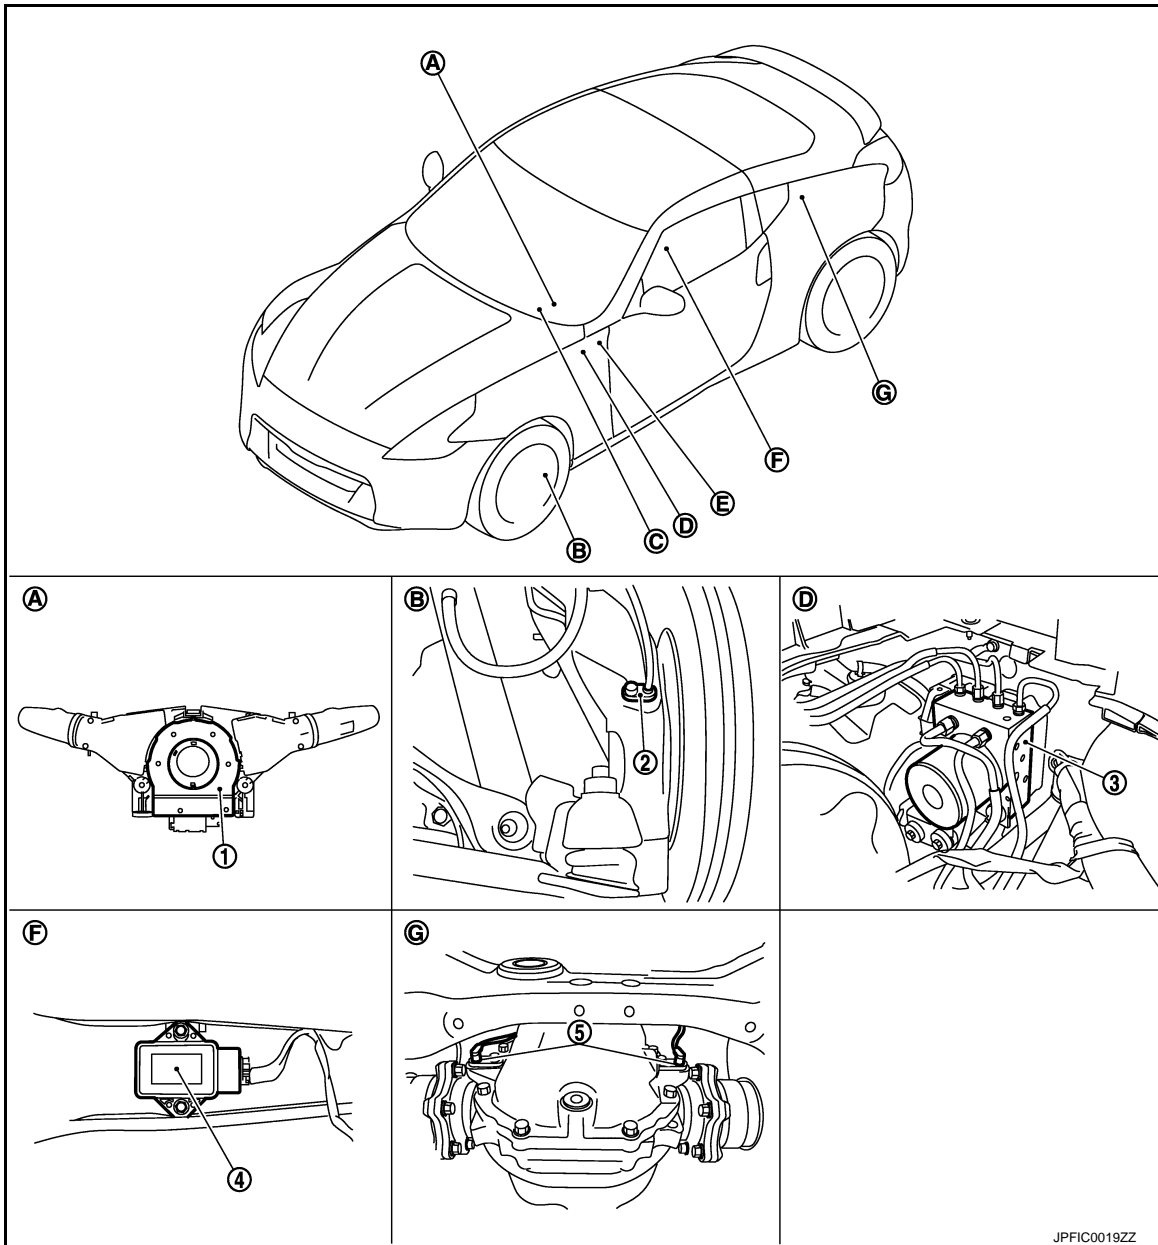

JPFIC0019ZZ

- | | | |
|---------------------------------------|---|---|
| 1. Steering angle sensor | 2. Front wheel sensor | 3. ABS actuator and electric unit (control unit) |
| 4. Yaw rate/side G sensor | 5. Rear wheel sensor | |
| A. Back of spiral cable assembly | B. Steering knuckle | C. ABS warning lamp, brake warning lamp, VDC OFF indicator lamp, VDC warning lamp: MWI-6, "METER SYSTEM : System Description" |
| D. Inside brake master cylinder cover | E. VDC OFF switch: IP-13, "Exploded View" | F. Under center console |
| G. Rear final drive assembly | | |

Component Description

ABS

< SYSTEM DESCRIPTION >


[VDC/TCS/ABS]

Component parts	Reference	
ABS actuator and electric unit (control unit)	Pump	BRC-42. "Description"
	Motor	
	Actuator relay	BRC-63. "Description"
	Solenoid valve	BRC-57. "Description" , BRC-59. "Description"
	Pressure sensor	BRC-65. "Description"
	VDC switch-over valve (USV1, USV2, HSV1, HSV2)	BRC-77. "Description"
Wheel sensor	BRC-26. "Description"	A
Yaw rate/side G sensor	BRC-74. "Description"	B
Steering angle sensor	BRC-68. "Description"	C
VDC OFF switch	BRC-92. "Description"	D
ABS warning lamp	BRC-94. "Description"	E
Brake warning lamp	BRC-95. "Description"	BRC
VDC warning lamp	BRC-96. "Description"	G
VDC OFF indicator lamp	BRC-97. "Description"	H
		I
		J
		K
		L
		M
		N
		O
		P

EBD

System Diagram


INFOID:000000011736952

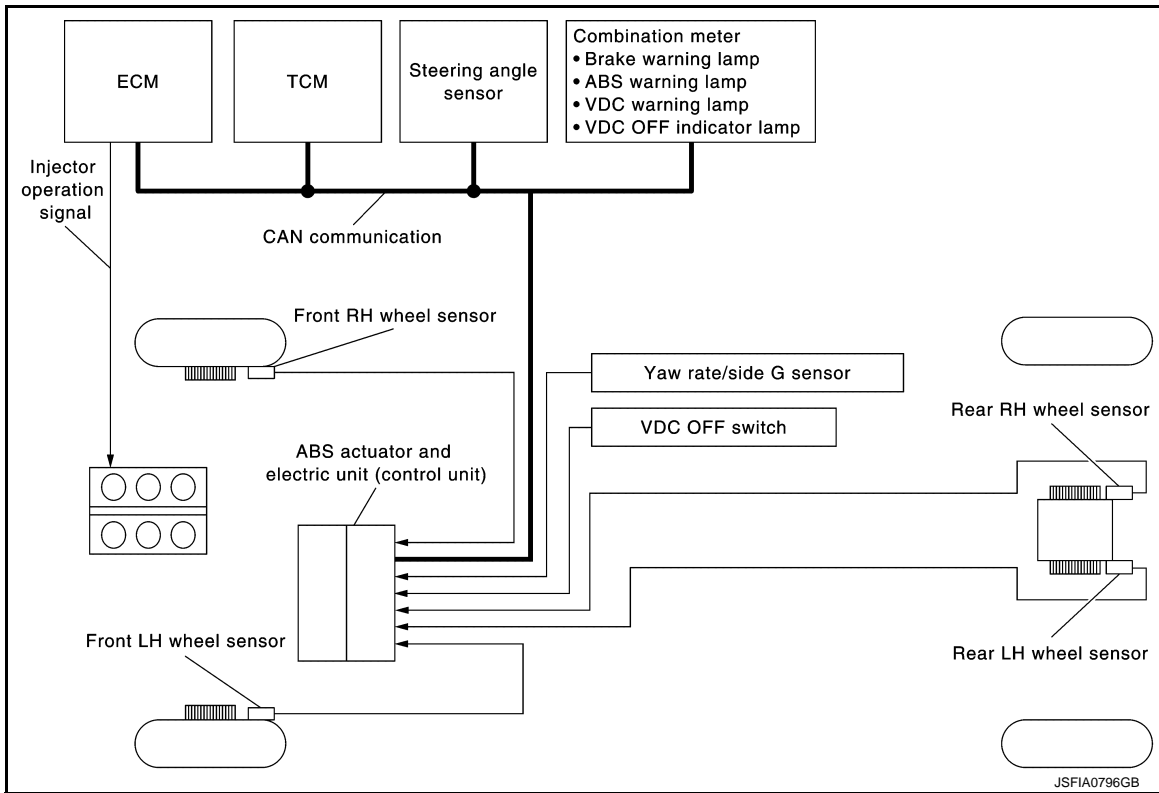

System Description

INFOID:000000011736953

- Electric Brake force Distribution is a following function. ABS actuator and electric unit (control unit) detects subtle slippages between the front and rear wheels during braking. Then is electronically controls the rear braking force (brake fluid pressure) to reducing and reduces rear wheel slippage. Accordingly it improves vehicle stability.
- Electrical system diagnosis by CONSULT is available.

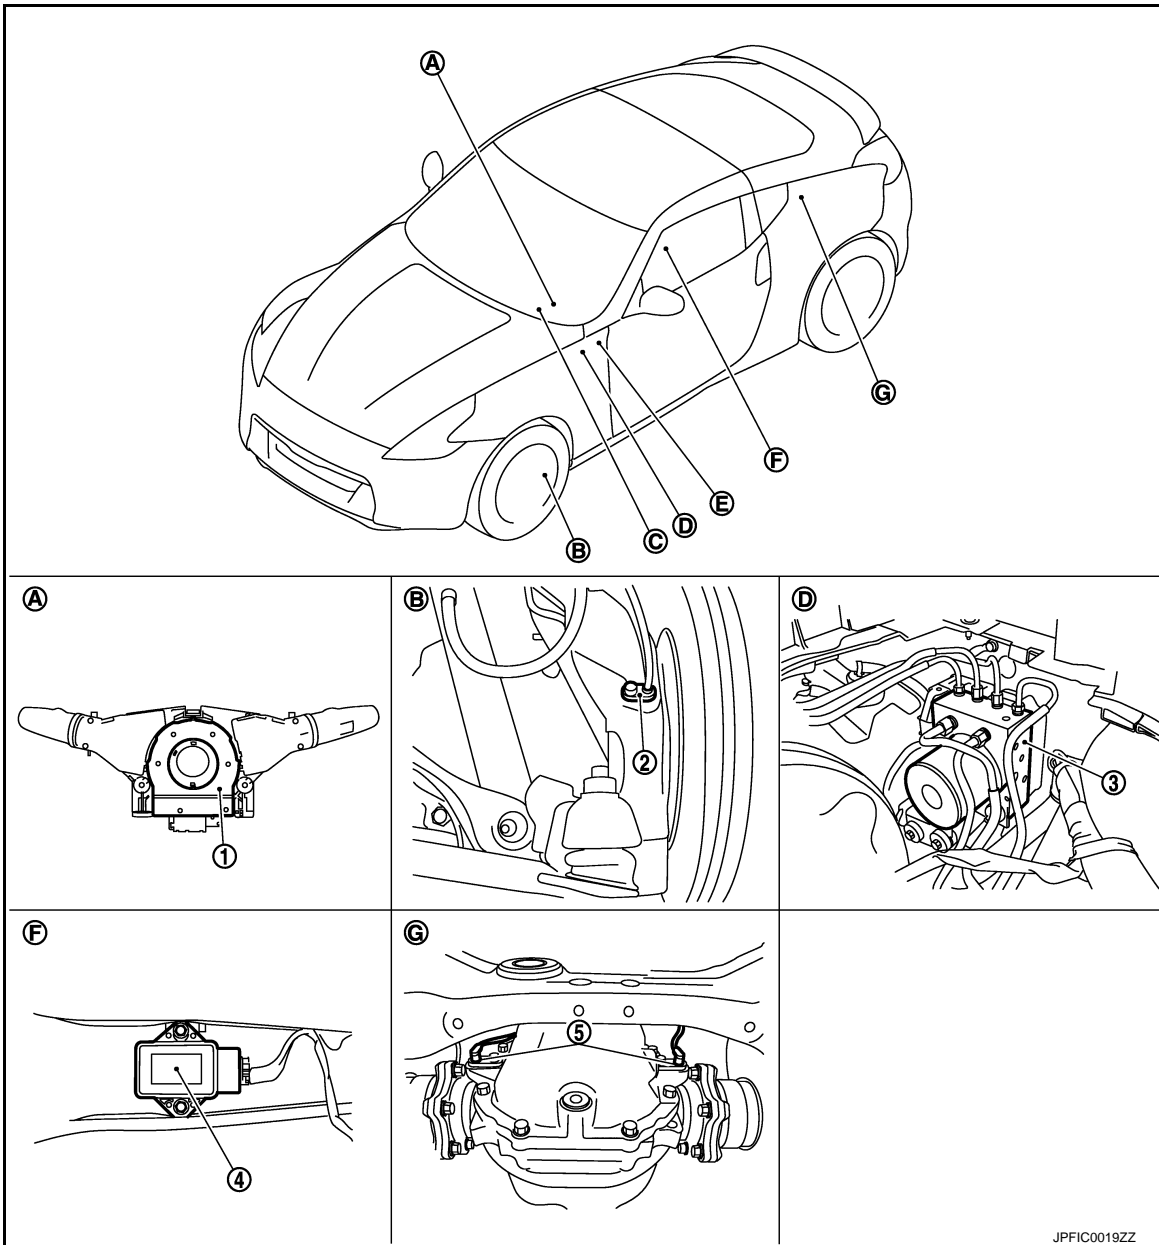

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

- | | | |
|---------------------------------------|---|---|
| 1. Steering angle sensor | 2. Front wheel sensor | 3. ABS actuator and electric unit (control unit) |
| 4. Yaw rate/side G sensor | 5. Rear wheel sensor | |
| A. Back of spiral cable assembly | B. Steering knuckle | C. ABS warning lamp, brake warning lamp, VDC OFF indicator lamp, VDC warning lamp: MWI-6, "METER SYSTEM : System Description" |
| D. Inside brake master cylinder cover | E. VDC OFF switch: IP-13, "Exploded View" | F. Under center console |
| G. Rear final drive assembly | | |

Component Description

EBD

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Component parts		Reference
ABS actuator and electric unit (control unit)	Pump	BRC-42. "Description"
	Motor	
	Actuator relay	BRC-63. "Description"
	Solenoid valve	BRC-57. "Description" , BRC-59. "Description"
	Pressure sensor	BRC-65. "Description"
	VDC switch-over valve (USV1, USV2, HSV1, HSV2)	BRC-77. "Description"
Wheel sensor		BRC-26. "Description"
Yaw rate/side G sensor		BRC-74. "Description"
Steering angle sensor		BRC-68. "Description"
VDC OFF switch		BRC-92. "Description"
ABS warning lamp		BRC-94. "Description"
Brake warning lamp		BRC-95. "Description"
VDC warning lamp		BRC-96. "Description"
VDC OFF indicator lamp		BRC-97. "Description"

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

CONSULT Function

INFOID:000000011736956

FUNCTION

CONSULT can display each diagnostic item using the diagnostic test modes shown following.

Diagnostic test mode	Function
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on CONSULT.
Self diagnostic result	Self-diagnostic results can be read and erased quickly.
Data monitor	Input/Output data in the ABS actuator and electric unit (control unit) can be read.
Active test	CONSULT drives some actuators apart from ABS actuator and electric unit (control unit) and also shifts some parameters in a specified range.
ECU identification	ABS actuator and electric unit (control unit) part number can be read.

WORK SUPPORT

Item	Description
ST ANGLE SENSOR ADJUSTMENT	Adjust the neutral position of the steering angle sensor.

SELF DIAGNOSTIC RESULT

Operation Procedure

Before performing the self-diagnosis, start engine and drive vehicle at 30 km/h (19 MPH) or more for approximately 1 minute.

Display Item List

Refer to [BRC-109. "DTC Index"](#).

How to Erase Self-diagnosis Results

After erasing DTC memory for "ABS" with CONSULT, start the engine and drive the vehicle at 30 km/h (19 MPH) or more for approximately 1 minute as the final inspection, and make sure that the ABS warning lamp, VDC warning lamp and brake warning lamp turn OFF.

CAUTION:

If memory cannot be erased, perform applicable diagnosis.

NOTE:

- When the wheel sensor malfunctions, after inspecting the wheel sensor system, ABS warning lamp, VDC warning lamp and brake warning lamp will not turn OFF even when the system is normal unless the vehicle is driving at approximately 30 km/h (19 MPH) or more for approximately 1 minute.
- Brake warning lamp will turn ON in case of parking brake operation (when switch is ON) or in case of brake fluid level switch operation (when brake fluid is insufficient).
- VDC OFF switch should not stay "ON" position.

DATA MONITOR MODE

Display Item List

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

×: Applicable ▼: Optional item

Monitor item (Unit)	SELECT MONITOR ITEM		Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	
FR LH SENSOR [km/h (MPH)]	×	×	Wheel speed
FR RH SENSOR [km/h (MPH)]	×	×	
RR LH SENSOR [km/h (MPH)]	×	×	
RR RH SENSOR [km/h (MPH)]	×	×	
FR RH IN SOL (On/Off) (Note)	▼	×	Operation status of each solenoid valve
FR RH OUT SOL (On/Off) (Note)	▼	×	
FR LH IN SOL (On/Off) (Note)	▼	×	
FR LH OUT SOL (On/Off) (Note)	▼	×	
RR RH IN SOL (On/Off) (Note)	▼	×	
RR RH OUT SOL (On/Off) (Note)	▼	×	
RR LH IN SOL (On/Off) (Note)	▼	×	
RR LH OUT SOL (On/Off) (Note)	▼	×	
STOP LAMP SW (On/Off)	×	×	Stop lamp switch signal status
MOTOR RELAY (On/Off)	▼	×	Motor and motor relay operation
ACTUATOR RLY (On/Off) (Note)	▼	×	Actuator relay operation
ABS WARN LAMP (On/Off)	▼	×	ABS warning lamp
OFF LAMP (On/Off)	▼	×	VDC OFF indicator lamp
OFF SW (On/Off)	×	×	VDC OFF switch
SLIP/VDC LAMP (On/Off)	▼	×	VDC warning lamp
BATTERY VOLT (V)	×	×	Battery voltage supplied to the ABS actuator and electric unit (control unit)
YAW RATE SEN (d/s)	×	×	Yaw rate detected by yaw rate/side G sensor
ACCEL POS SIG (%)	×	▼	Throttle actuator opening/closing is displayed (Linked with accelerator pedal)
SIDE G-SENSOR (m/s ²)	×	▼	Transverse G detected by yaw rate/side G sensor
STR ANGLE SIG (°)	×	▼	Steering angle detected by steering angle sensor
PRESS SENSOR (bar)	×	▼	Brake fluid pressure detected by pressure sensor

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Monitor item (Unit)	SELECT MONITOR ITEM		Remarks	
	ECU INPUT SIGNALS	MAIN SIGNALS		
EBD SIGNAL (On/Off)	▼	▼	EBD operation	A
ABS SIGNAL (On/Off)	▼	▼	ABS operation	B
TCS SIGNAL (On/Off)	▼	▼	TCS operation	C
VDC SIGNAL (On/Off)	▼	▼	VDC operation	D
EBD FAIL SIG (On/Off)	▼	▼	EBD fail-safe signal	E
ABS FAIL SIG (On/Off)	▼	▼	ABS fail-safe signal	E
TCS FAIL SIG (On/Off)	▼	▼	TCS fail-safe signal	BRC
VDC FAIL SIG (On/Off)	▼	▼	VDC fail-safe signal	BRC
CRANKING SIG (On/Off)	▼	▼	Crank operation	G
FLUID LEV SW (On/Off)	×	▼	Brake fluid level switch signal status	H
PARK BRAKE SW (On/Off)	×	▼	Parking brake switch signal status	H
USV [FR-RL] (On/Off)	▼	▼	VDC switch-over valve	I
USV [FL-RR] (On/Off)	▼	▼		J
HSV [FR-RL] (On/Off)	▼	▼		K
HSV [FL-RR] (On/Off)	▼	▼		K
V/R OUTPUT (On/Off)	▼	▼	Solenoid valve relay activated	L
M/R OUTPUT (On/Off)	▼	▼	Actuator motor and motor relay activated	L
ENGINE RPM [tr/min (rpm)]	×	▼	Engine speed	M

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is a operation for checking.

ACTIVE TEST MODE

CAUTION:

- **Never perform active test while driving vehicle.**
- **Make sure to completely bleed air from brake system.**
- **The active test cannot be started when ABS warning lamp, VDC warning lamp and brake warning lamp are ON.**
- **ABS warning lamp, VDC warning lamp and brake warning lamp are ON during active test.**

NOTE:

- When active test is performed while depressing the pedal, the pedal depression amount will change. This is normal. (Only solenoid valve and ABS motor.)
- “TEST IS STOPPED” is displayed 10 seconds after operation start.
- After “TEST IS STOPPED” is displayed, to perform test again.

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Test Item

ABS SOLENOID VALVE

- Select “Up”, “Keep” and “Down”. Then use screen monitor to check that solenoid valve operates as shown in the table below.

Test item	Display item	Display (Note)		
		Up	Keep	Down
FR RH SOL	FR RH IN SOL	Off	On	On
	FR RH OUT SOL	Off	Off	On*
	USV[FR-RL]	Off	Off	Off
	HSV[FR-RL]	Off	Off	Off
FR LH SOL	FR LH IN SOL	Off	On	On
	FR LH OUT SOL	Off	Off	On*
	USV[FL-RR]	Off	Off	Off
	HSV[FL-RR]	Off	Off	Off
RR RH SOL	RR RH IN SOL	Off	On	On
	RR RH OUT SOL	Off	Off	On*
	USV[FL-RR]	Off	Off	Off
	HSV[FL-RR]	Off	Off	Off
RR LH SOL	RR LH IN SOL	Off	On	On
	RR LH OUT SOL	Off	Off	On*
	USV[FR-RL]	Off	Off	Off
	HSV[FR-RL]	Off	Off	Off

*: On for 1 to 2 seconds after the select, and then Off.

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ABS SOLENOID VALVE (ACT)

- Select “Up”, “ACT UP” and “ACT KEEP”. Then use screen monitor to check that solenoid valve operates as shown in the table below.

Test item	Display item	Display (Note)		
		Up	ACT UP	ACT KEEP
FR RH ABS SOLENOID (ACT)	FR RH IN SOL	Off	Off	Off
	FR RH OUT SOL	Off	Off	Off
	USV[FR-RL]	Off	On	On
	HSV[FR-RL]	Off	On*	Off
FR LH ABS SOLENOID (ACT)	FR LH IN SOL	Off	Off	Off
	FR LH OUT SOL	Off	Off	Off
	USV[FL-RR]	Off	On	On
	HSV[FL-RR]	Off	On*	Off
RR RH ABS SOLENOID (ACT)	RR RH IN SOL	Off	Off	Off
	RR RH OUT SOL	Off	Off	Off
	USV[FL-RR]	Off	On	On
	HSV[FL-RR]	Off	On*	Off

DIAGNOSIS SYSTEM [ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)]

< SYSTEM DESCRIPTION >

[VDC/TCS/ABS]

Test item	Display item	Display (Note)		
		Up	ACT UP	ACT KEEP
RR LH ABS SOLENOID (ACT)	RR LH IN SOL	Off	Off	Off
	RR LH OUT SOL	Off	Off	Off
	USV[FR-RL]	Off	On	On
	HSV[FR-RL]	Off	On*	Off

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

*: On for 1 to 2 seconds after the touch, and then Off.

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ABS MOTOR

- Select "On" and "Off" of "ACTIVE TEST". Make sure motor relay and actuator relay operates as shown in table below.

Test item	Display item	Display	
		On	Off
ABS MOTOR	MOTOR RELAY	On	Off
	ACTUATOR RLY (Note)	On	On

BRC

NOTE:

A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.

ECU IDENTIFICATION

ABS actuator and electric unit (control unit) part number can be read.

C1101, C1102, C1103, C1104 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

DTC/CIRCUIT DIAGNOSIS

C1101, C1102, C1103, C1104 WHEEL SENSOR

Description

INFOID:0000000012013643

When the sensor rotor rotates, the magnetic field changes. It converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000012013644

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1101	RR RH SENSOR-1 (Rear RH wheel sensor-1)	When an open circuit is detected in rear RH wheel sensor circuit.
C1102	RR LH SENSOR-1 (Rear LH wheel sensor-1)	When an open circuit is detected in rear LH wheel sensor circuit.
C1103	FR RH SENSOR-1 (Front RH wheel sensor-1)	When an open circuit is detected in front RH wheel sensor circuit.
C1104	FR LH SENSOR-1 (Front LH wheel sensor-1)	When an open circuit is detected in front LH wheel sensor circuit.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery	<ul style="list-style-type: none">• Harness or connector• Wheel sensor• ABS actuator and electric unit (control unit)• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery• Vehicle was not driven after previous repair

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Start the engine.
2. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.
3. Stop the vehicle.
4. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

5. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

6. Perform self-diagnosis for "ABS".

C1101, C1102, C1103, C1104 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

YES-1 >> "C1101", "C1102", "C1103" or "C1104" is displayed by "CRNT": Proceed to [BRC-27, "Diagnosis Procedure"](#).

YES-2 >> "C1101", "C1102", "C1103" and "C1104" are displayed by "PAST": INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:000000012013645

CAUTION:

Never check between wheel sensor harness connector terminals.

1.CHECK WHEEL SENSOR


1. Turn the ignition switch OFF.
2. Check the wheel sensor for damage.

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2.REPLACE WHEEL SENSOR (1)

 With CONSULT

1. Replace the wheel sensor.
 - Front: Refer to [BRC-123, "FRONT WHEEL SENSOR : Removal and Installation"](#).
 - Rear: Refer to [BRC-124, "REAR WHEEL SENSOR : Removal and Installation"](#).
2. Erase self-diagnosis result for "ABS".
3. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

4. Start the engine.
5. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

6. Stop the vehicle.
7. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

8. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

9. Perform self-diagnosis for "ABS".

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

YES >> GO TO 3.

NO >> INSPECTION END

3.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.
3. Check the wheel sensor harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 4.

4.PERFORM SELF-DIAGNOSIS (1)

 With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

3. Start the engine.

C1101, C1102, C1103, C1104 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

4. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.
NOTE:
Vehicle must be driven after repair or replacement to erase the previous DTCs.
5. Stop the vehicle.
6. Turn the ignition switch OFF.
NOTE:
Wait at least 10 seconds after turning ignition switch OFF.
7. Start the engine.
NOTE:
Wait at least 10 seconds after start the engine.
8. Perform self-diagnosis for "ABS".

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

- YES >> GO TO 5.
NO >> INSPECTION END

5.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-87, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Repair / replace harness, connector, fuse, or fusible link.

6.CHECK TERMINAL

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector and then check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
3. Disconnect wheel sensor harness connector and check each wheel sensor pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

- YES >> GO TO 8.
NO >> Repair / replace harness, connector, or terminal, and GO TO 7.

7.PERFORM SELF-DIAGNOSIS (2)

Ⓜ With CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect wheel sensor harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.
NOTE:
Wait at least 10 seconds after turning ignition switch OFF or ON.
5. Start the engine.
6. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.
NOTE:
Vehicle must be driven after repair or replacement to erase the previous DTCs.
7. Stop the vehicle.
8. Turn the ignition switch OFF.
NOTE:
Wait at least 10 seconds after turning ignition switch OFF.
9. Start the engine.
NOTE:
Wait at least 10 seconds after start the engine.
10. Perform self-diagnosis for "ABS".

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

- YES >> GO TO 8.
NO >> INSPECTION END

8.CHECK WHEEL SENSOR HARNESS

1. Turn the ignition switch OFF.

C1101, C1102, C1103, C1104 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

2. Disconnect ABS actuator and electric unit (control unit) harness connector.
 3. Disconnect wheel sensor harness connector.
 4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Check the continuity while turning steering wheel left and right, or while moving center harness in wheel housing.)
- Measurement connector and terminal for power supply circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E41	26	E60	(Front LH wheel)	1
	9	E27	(Front RH wheel)	
	6	B34	(Rear LH wheel)	
	7	B33	(Rear RH wheel)	

- Measurement connector and terminal for signal circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E41	5	E60	(Front LH wheel)	2
	10	E27	(Front RH wheel)	
	27	B34	(Rear LH wheel)	
	29	B33	(Rear RH wheel)	

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair / replace harness or connector, and GO TO 9.

9.PERFORM SELF-DIAGNOSIS (3)

Ⓜ With CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect wheel sensor harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.
NOTE:
Wait at least 10 seconds after turning ignition switch OFF or ON.
5. Start the engine.
6. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.
NOTE:
Vehicle must be driven after repair or replacement to erase the previous DTCs.
7. Stop the vehicle.
8. Turn the ignition switch OFF.
NOTE:
Wait at least 10 seconds after turning ignition switch OFF.
9. Start the engine.
NOTE:
Wait at least 10 seconds after start the engine.
10. Perform self-diagnosis for "ABS".

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

YES >> GO TO 10.

NO >> INSPECTION END

10.CHECK WHEEL SENSOR OUTPUT SIGNAL

1. Disconnect ABS actuator and electric unit (control unit) harness connector.
2. Disconnect wheel sensor harness connector.
3. Connect ABS active wheel sensor tester (SST: J-45741-A) to wheel sensor using appropriate adapter.
4. Turn the ABS active wheel sensor tester power switch ON.
NOTE:

C1101, C1102, C1103, C1104 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

The green POWER indicator should illuminate. If the POWER indicator does not illuminate, replace the battery in the ABS active wheel sensor tester before proceeding.

5. Spin the wheel of the vehicle by hand and observe the red SENSOR indicator on the ABS active wheel sensor tester. The red SENSOR indicator should flash ON and OFF to indicate an output signal.

NOTE:

If the red SENSOR indicator illuminates but does not flash, reverse the polarity of the tester leads and retest.

Does the ABS active wheel sensor tester detect a signal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

NO >> GO TO 11.

11. REPLACE WHEEL SENSOR

Ⓜ With CONSULT

1. Replace the wheel sensor.
 - Front: Refer to [BRC-123, "FRONT WHEEL SENSOR : Removal and Installation"](#).
 - Rear: Refer to [BRC-124, "REAR WHEEL SENSOR : Removal and Installation"](#).
2. Connect ABS actuator and electric unit (control unit) harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

5. Start the engine.
6. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

7. Stop the vehicle.
8. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

9. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

10. Perform self-diagnosis for "ABS".

Is DTC "C1101", "C1102", "C1103" or "C1104" detected?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

NO >> INSPECTION END

C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1105, C1106, C1107, C1108 WHEEL SENSOR

Description

INFOID:0000000012013646

When the sensor rotor rotates, the magnetic field changes. It converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000012013647

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1105	RR RH SENSOR-2 (Rear RH wheel sensor-2)	<ul style="list-style-type: none"> When power supply voltage of rear RH wheel sensor is low. When distance between rear RH wheel sensor and rear RH wheel sensor rotor is large. When installation of rear RH wheel sensor or rear RH wheel sensor rotor is not normal. When there is contamination on or damage to the rear RH wheel sensor or rear RH sensor rotor.
C1106	RR LH SENSOR-2 (Rear LH wheel sensor-2)	<ul style="list-style-type: none"> When power supply voltage of rear LH wheel sensor is low. When distance between rear LH wheel sensor and rear LH wheel sensor rotor is large. When installation of rear LH wheel sensor or rear LH wheel sensor rotor is not normal. When there is contamination on or damage to the rear LH wheel sensor or rear LH sensor rotor.
C1107	FR RH SENSOR-2 (Front RH wheel sensor-2)	<ul style="list-style-type: none"> When power supply voltage of front RH wheel sensor is low. When distance between front RH wheel sensor and front RH wheel sensor rotor is large. When installation of front RH wheel sensor or front RH wheel sensor rotor is not normal. When there is contamination on or damage to the front RH wheel sensor or front RH sensor rotor.
C1108	FR LH SENSOR-2 (Front LH wheel sensor-2)	<ul style="list-style-type: none"> When power supply voltage of front LH wheel sensor is low. When distance between front LH wheel sensor and front LH wheel sensor rotor is large. When installation of front LH wheel sensor or front LH wheel sensor rotor is not normal. When there is contamination on or damage to the front LH wheel sensor or front LH sensor rotor.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"> Harness or connector Wheel sensor Sensor rotor Tire size ABS actuator and electric unit (control unit) power supply system Fuse Fusible link Battery 	<ul style="list-style-type: none"> Harness or connector Wheel sensor Sensor rotor ABS actuator and electric unit (control unit) Tire size ABS actuator and electric unit (control unit) power supply system Fuse Fusible link Battery Vehicle was not driven after previous repair

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

C1105, C1106, C1107, C1108 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

Ⓟ With CONSULT

1. Start the engine.
2. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.
3. Stop the vehicle.
4. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

5. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

6. Perform self-diagnosis for "ABS".

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES-1 >> "C1105", "C1106", "C1107" or "C1108" is displayed by "CRNT": Proceed to [BRC-32, "Diagnosis Procedure"](#).

YES-2 >> "C1105", "C1106", "C1107" and "C1108" are displayed by "PAST": INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:000000012013648

CAUTION:

Never check between wheel sensor harness connector terminals.

1. CHECK WHEEL HUB ASSEMBLY

Check that there is no excessive looseness in wheel hub assembly.

- Front: Refer to [FAX-6, "Inspection"](#).
- Rear: Refer to [RAX-5, "Inspection"](#).

Is the inspection result normal?

YES >> GO TO 2.

- NO >> Repair or replace the wheel hub assembly, and GO TO 2.
- Front: Refer to [FAX-7, "Removal and Installation"](#).
 - Rear: Refer to [RAX-7, "Removal and Installation"](#).

2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-87, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair / replace harness, connector, fuse, or fusible link.

3. CHECK TIRE

1. Turn the ignition switch OFF.
2. Check the tire air pressure, wear and size. Refer to [WT-54, "Tire Air Pressure"](#).

Is the inspection result normal?

YES >> GO TO 6.

NO >> Adjust air pressure or replace tire, and GO TO 4.

4. CHECK DATA MONITOR (1)

Ⓟ With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

3. Start the engine.
4. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

NOTE:

C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Set the "DATA MONITOR" recording speed to "10 msec".

5. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors. is the difference within 5%. respectively?

YES >> GO TO 5.

NO >> GO TO 6.

5.PERFORM SELF-DIAGNOSIS (1)

ⓂWith CONSULT

1. Stop the vehicle.
2. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

3. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES >> GO TO 6.

NO >> INSPECTION END

6.CHECK WHEEL SENSOR AND SENSOR ROTOR

1. Turn the ignition switch OFF.
2. Disconnect wheel sensor harness connector.
3. Remove dust and foreign matter adhered to the wheel sensor and sensor rotor with a vacuum dust collector through the wheel sensor mounting hole.

CAUTION:

Install wheel sensor with no backlash and float, and tighten the mounting bolt to the specified torque.

- Front: Refer to [BRC-123, "FRONT WHEEL SENSOR : Exploded View"](#).
- Rear: Refer to [BRC-124, "REAR WHEEL SENSOR : Exploded View"](#).

>> GO TO 7.

7.CHECK WHEEL SENSOR

Check the wheel sensor for damage.

Is the inspection result normal?

YES >> GO TO 8.

NO >> GO TO 9.

8.CHECK WHEEL SENSOR OUTPUT SIGNAL

1. Disconnect ABS actuator and electric unit (control unit) harness connector.
2. Connect ABS active wheel sensor tester (SST: J-45741-A) to wheel sensor using appropriate adapter.
3. Turn the ABS active wheel sensor tester power switch ON.

NOTE:

The green POWER indicator should illuminate. If the POWER indicator does not illuminate, replace the battery in the ABS active wheel sensor tester before proceeding.

4. Spin the wheel of the vehicle by hand and observe the red SENSOR indicator on the ABS active wheel sensor tester. The red SENSOR indicator should flash ON and OFF to indicate an output signal.

NOTE:

If the red SENSOR indicator illuminates but does not flash, reverse the polarity of the tester leads and retest.

Does the ABS active wheel sensor tester detect a signal?

YES >> GO TO 12.

NO >> GO TO 9.

C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

9. REPLACE WHEEL SENSOR (1)

Ⓟ With CONSULT

1. Replace the wheel sensor.
 - Front: Refer to [BRC-123. "FRONT WHEEL SENSOR : Removal and Installation"](#).
 - Rear: Refer to [BRC-124. "REAR WHEEL SENSOR : Removal and Installation"](#).
 2. Connect ABS actuator and electric unit (control unit) harness connector.
 3. Erase self-diagnosis result for "ABS".
 4. Turn the ignition switch OFF → ON → OFF.
- NOTE:**
Wait at least 10 seconds after turning ignition switch OFF or ON.
5. Start the engine.
 6. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

7. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors. is the difference within 5%, respectively?

YES >> GO TO 10.

NO >> GO TO 20.

10. PERFORM SELF-DIAGNOSIS (2)

Ⓟ With CONSULT

1. Stop the vehicle.
2. Turn the ignition switch OFF.

NOTE:
Wait at least 10 seconds after turning ignition switch OFF.
3. Start the engine.

NOTE:
Wait at least 10 seconds after start the engine.
4. Perform self-diagnosis for "ABS".

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES >> GO TO 11.

NO >> INSPECTION END

11. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.
3. Check the wheel sensor harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 14.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 12.

12. CHECK DATA MONITOR (2)

Ⓟ With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.

NOTE:
Wait at least 10 seconds after turning ignition switch OFF or ON.
3. Start the engine.
4. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

NOTE:
Set the "DATA MONITOR" recording speed to "10 msec".
5. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors. is the difference within 5%. respectively?

YES >> GO TO 13.

NO >> GO TO 14.

13.PERFORM SELF-DIAGNOSIS (3)

ⓂWith CONSULT

1. Stop the vehicle.

2. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

3. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES >> GO TO 14.

NO >> INSPECTION END

14.CHECK TERMINAL

1. Turn the ignition switch OFF.

2. Disconnect ABS actuator and electric unit (control unit) harness connector and then check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

3. Disconnect wheel sensor harness connector and check each wheel sensor pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 17.

NO >> Repair / replace harness, connector, or terminal, and GO TO 15.

15.CHECK DATA MONITOR (3)

ⓂWith CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.

2. Connect wheel sensor harness connector.

3. Erase self-diagnosis result for "ABS".

4. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

5. Start the engine.

6. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

7. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors. is the difference within 5%. respectively?

YES >> GO TO 16.

NO >> GO TO 17.

16.PERFORM SELF-DIAGNOSIS (4)

ⓂWith CONSULT

1. Stop the vehicle.

2. Turn the ignition switch OFF.

NOTE:

C1105, C1106, C1107, C1108 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

Wait at least 10 seconds after turning ignition switch OFF.

3. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES >> GO TO 17.

NO >> INSPECTION END

17. CHECK WHEEL SENSOR HARNESS

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Disconnect wheel sensor harness connector.
4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and the ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E41	26, 5	Ground	Not existed
	9, 10		
	6, 27		
	7, 29		

Is the inspection result normal?

YES >> GO TO 18.

NO >> Repair / replace harness or connector, and GO TO 18.

18. CHECK DATA MONITOR (4)

Ⓜ With CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect wheel sensor harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

5. Start the engine.
6. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

7. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors. is the difference within 5%, respectively?

YES >> GO TO 19.

NO >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126. "Removal and Installation"](#).

19. PERFORM SELF-DIAGNOSIS (5)

Ⓜ With CONSULT

1. Stop the vehicle.
2. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

3. Start the engine.

NOTE:

C1105, C1106, C1107, C1108 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

NO >> INSPECTION END

20. REPLACE SENSOR ROTOR

Ⓜ With CONSULT

1. Replace the sensor rotor.
 - Front: Refer to [BRC-125, "FRONT SENSOR ROTOR : Removal and Installation"](#).
 - Rear: Refer to [BRC-125, "REAR SENSOR ROTOR : Removal and Installation"](#).
2. Erase self-diagnosis result for "ABS".
3. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

4. Start the engine.
5. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

6. Stop the vehicle.
7. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

8. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

9. Perform self-diagnosis for "ABS".

Is DTC "C1105", "C1106", "C1107" or "C1108" detected?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

NO >> INSPECTION END

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

C1109 POWER AND GROUND SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1109 POWER AND GROUND SYSTEM

Description

INFOID:000000012013649

Supplies electric power to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000012013650

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1109	BATTERY VOLTAGE [ABNORMAL] (Battery voltage [abnormal])	When ignition power supply voltage is in following state. <ul style="list-style-type: none">• Ignition power supply voltage: $10\text{ V} \geq$ ignition power supply voltage.• Ignition power supply voltage: $16\text{ V} \leq$ ignition power supply voltage.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery• Charge system	<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit)• IPDM E/R• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery• Charge system

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1109" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-38, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:000000012013651

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

C1109 POWER AND GROUND SYSTEM

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 2.

2.PERFORM SELF-DIAGNOSIS

ⓂWith CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1109" detected?

YES >> GO TO 3.

NO >> INSPECTION END

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-87, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair / replace harness, connector, fuse, or fusible link.

4.CHECK TERMINAL

1. Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

2. Check the IPDM E/R pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

NO >> Repair / replace harness, connector, or terminal.

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

C1110, C1153 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1110, C1153 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

DTC Logic

INFOID:000000012013652

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1110	CONTROLLER FAILURE (Controller failure)	When there is an internal malfunction in the ABS actuator and electric unit (control unit).
C1153	EMERGENCY BRAKE (Emergency brake)	When ABS actuator and electric unit (control unit) is malfunctioning. (Pressure increase is too much or too little)

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

DTC	PAST DTC	CRNT DTC
C1110	<ul style="list-style-type: none">The vehicle travels near high-voltage electrical power lines.Motor built-in the ABS actuator and electric unit (control unit) operates temporarily without a break.Harness or connectorABS actuator and electric unit (control unit) power supply systemFuseFusible linkBattery	<ul style="list-style-type: none">ABS actuator and electric unit (control unit)Harness or connectorABS actuator and electric unit (control unit) power supply systemFuseFusible linkBattery
C1153	<ul style="list-style-type: none">The vehicle travels near high-voltage electrical power lines.ABS operates for a long time (e.g. travel under a tire hydroplaning condition).	ABS actuator and electric unit (control unit)


DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1110" or "C1153" detected?

YES-1 >> "C1110" or "C1153" is displayed by "CRNT": Proceed to [BRC-41, "Diagnosis Procedure"](#).

YES-2 >> "C1110" and "C1153" are displayed by "PAST": INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

C1110, C1153 ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Diagnosis Procedure

INFOID:000000012013653

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-87, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair / replace harness, connector, fuse, or fusible link.

2. PERFORM SELF-DIAGNOSIS

Ⓜ With CONSULT

Perform self-diagnosis for "ABS".

NOTE:

Replace the ABS actuator and electric unit (control unit) even if other DTCs are displayed along with "C1110" or "C1153" in self-diagnosis for "ABS".

Is DTC "C1110" or "C1153" detected?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

NO >> INSPECTION END (Although motor built-in the ABS actuator and electric unit (control unit) operates temporarily without a break, this is not a malfunction. Erase the memory of self-diagnosis results.)

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

Description

INFOID:000000012013654

PUMP

The pump returns the brake fluid stored in the reservoir to the master cylinder by reducing the pressure.

MOTOR

The motor drives the pump according to the signals transmitted by the ABS actuator and electric unit (control unit).

MOTOR RELAY

Activates or deactivates motor according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000012013655

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1111	PUMP MOTOR (Pump motor and motor relay)	When a malfunction is detected in motor or motor relay.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery	<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit)• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓟ With CONSULT

1. Turn the ignition switch OFF → ON, and wait 30 seconds.
2. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.
3. Stop the vehicle.
4. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

5. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

6. Perform self-diagnosis for "ABS".

Is DTC "C1111" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-43, "Diagnosis Procedure"](#).

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:000000012013656

1. CHECK CONNECTOR


1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 2.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Turn the ignition switch OFF → ON, and wait 30 seconds.
2. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

3. Stop the vehicle.
4. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

5. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

6. Perform self-diagnosis for "ABS".

Is DTC "C1111" detected?

YES >> GO TO 3.

NO >> INSPECTION END

3. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-87, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair / replace harness, connector, or fuse, and GO TO 4.

4. ERASE SELF-DIAGNOSIS RESULT (1)

 With CONSULT

1. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

2. Stop the vehicle.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

>> INSPECTION END

5. CHECK TERMINAL

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

C1111 ABS MOTOR, MOTOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

- YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126. "Removal and Installation"](#).
- NO >> Repair / replace harness or connector, and GO TO 6.

6. ERASE SELF-DIAGNOSIS RESULT (2)

④ With CONSULT

1. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

2. Stop the vehicle.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

>> INSPECTION END

C1115 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

C1115 WHEEL SENSOR

Description

INFOID:0000000012013657

When the sensor rotor rotates, the magnetic field changes. It converts the magnetic field changes to current signals (rectangular wave) and transmits them to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000012013658

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1115	ABS SENSOR [ABNORMAL SIGNAL] (Wheel sensor [abnormal signal])	When difference in wheel speed between any wheel and others is detected the vehicle is driven, because of installation of other tires than specified.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none">• Harness or connector• Wheel sensor• Sensor rotor• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery	<ul style="list-style-type: none">• Harness or connector• Wheel sensor• Sensor rotor• ABS actuator and electric unit (control unit)• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery• Tire size

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Start the engine.
2. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.
3. Stop the vehicle.
4. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

5. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

6. Perform self-diagnosis for "ABS".

Is DTC "C1115" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-46, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:000000012013659

CAUTION:**Never check between wheel sensor harness connector terminals.****1.CHECK TIRE**Check the tire air pressure, wear and size. Refer to [WT-54, "Tire Air Pressure"](#).Is the inspection result normal?

YES >> GO TO 4.

NO >> Adjust air pressure or replace tire and GO TO 2.

2.CHECK DATA MONITOR (1)

ⓂWith CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

3. Start the engine.
4. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

5. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

YES >> GO TO 3.

NO >> GO TO 4.

3.PERFORM SELF-DIAGNOSIS (1)

ⓂWith CONSULT

1. Stop the vehicle.
2. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

3. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

Is DTC "C1115" detected?

YES >> GO TO 4.

NO >> INSPECTION END

4.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUITCheck the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-87, "Diagnosis Procedure"](#).Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair / replace harness, connector, fuse, or fusible link.

5.CHECK WHEEL SENSOR AND SENSOR ROTOR

1. Turn the ignition switch OFF.
2. Disconnect wheel sensor harness connector.
3. Remove dust and foreign matter adhered to the wheel sensor and sensor rotor with a vacuum dust collector through the wheel sensor mounting hole.

CAUTION:

C1115 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Install wheel sensor with no backlash and float, and tighten the mounting bolt to the specified torque.

- Front: Refer to [BRC-123, "FRONT WHEEL SENSOR : Exploded View"](#).
- Rear: Refer to [BRC-124, "REAR WHEEL SENSOR : Exploded View"](#).

>> GO TO 6.

6. CHECK WHEEL SENSOR

Check the wheel sensor for damage.

Is the inspection result normal?

- YES >> GO TO 7.
- NO >> GO TO 8.

7. CHECK WHEEL SENSOR OUTPUT SIGNAL

1. Disconnect ABS actuator and electric unit (control unit) harness connector.
2. Connect ABS active wheel sensor tester (SST: J-45741-A) to wheel sensor using appropriate adapter.
3. Turn the ABS active wheel sensor tester power switch ON.

NOTE:

The green POWER indicator should illuminate. If the POWER indicator does not illuminate, replace the battery in the ABS active wheel sensor tester before proceeding.

4. Spin the wheel of the vehicle by hand and observe the red SENSOR indicator on the ABS active wheel sensor tester. The red SENSOR indicator should flash ON and OFF to indicate an output signal.

NOTE:

If the red SENSOR indicator illuminates but does not flash, reverse the polarity of the tester leads and retest.

Does the ABS active wheel sensor tester detect a signal?

- YES >> GO TO 11.
- NO >> GO TO 8.

8. REPLACE WHEEL SENSOR (1)

Ⓜ With CONSULT

1. Replace the wheel sensor.
 - Front: Refer to [BRC-123, "FRONT WHEEL SENSOR : Removal and Installation"](#).
 - Rear: Refer to [BRC-124, "REAR WHEEL SENSOR : Removal and Installation"](#).

2. Connect ABS actuator and electric unit (control unit) harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

5. Start the engine.
6. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

7. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors. Is the difference within 5%, respectively?

- YES >> GO TO 9.
- NO >> GO TO 19.

9. PERFORM SELF-DIAGNOSIS (2)

Ⓜ With CONSULT

1. Stop the vehicle.
2. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

< DTC/CIRCUIT DIAGNOSIS >

3. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

Is DTC "C1115" detected?

YES >> GO TO 10.

NO >> INSPECTION END


10.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.
3. Check the wheel sensor harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 11.

11.CHECK DATA MONITOR (2) With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

3. Start the engine.
4. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

5. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.


NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors. is the difference within 5%. respectively?

YES >> GO TO 12.

NO >> GO TO 13.

12.PERFORM SELF-DIAGNOSIS (3) With CONSULT

1. Stop the vehicle.
2. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

3. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

Is DTC "C1115" detected?

YES >> GO TO 13.

NO >> INSPECTION END

13.CHECK TERMINAL

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector and then check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
3. Disconnect wheel sensor harness connector and check each wheel sensor pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 16.

C1115 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

NO >> Repair / replace harness, connector, or terminal, and GO TO 14.

14.CHECK DATA MONITOR (3)

Ⓜ With CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect wheel sensor harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

5. Start the engine.
6. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

7. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors, is the difference within 5%, respectively?

YES >> GO TO 15.

NO >> GO TO 16.

15.PERFORM SELF-DIAGNOSIS (4)

Ⓜ With CONSULT

1. Stop the vehicle.
2. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

3. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

Is DTC "C1115" detected?

YES >> GO TO 16.

NO >> INSPECTION END

16.CHECK WHEEL SENSOR HARNESS

1. Turn the ignition switch OFF.
 2. Disconnect ABS actuator and electric unit (control unit) harness connector.
 3. Disconnect wheel sensor harness connector.
 4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and wheel sensor harness connector. (Check continuity while turning steering wheel left and right, or while moving center harness in wheel housing.)
- Measurement connector and terminal for power supply circuit

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E41	26	E60	(Front LH wheel)	Existed
	9	E27	(Front RH wheel)	
	6	B34	(Rear LH wheel)	
	7	B33	(Rear RH wheel)	

- Measurement connector and terminal for signal circuit

C1115 WHEEL SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS actuator and electric unit (control unit)		Wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
E41	5	E60	(Front LH wheel)	2 Existed
	10	E27	(Front RH wheel)	
	27	B34	(Rear LH wheel)	
	29	B33	(Rear RH wheel)	

5. Check the continuity between ABS actuator and electric unit (control unit) harness connector and the ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E41	26, 5	Ground	Not existed
	9, 10		
	6, 27		
	7, 29		

Is the inspection result normal?

YES >> GO TO 17.

NO >> Repair / replace harness or connector, and GO TO 17.

17. CHECK DATA MONITOR (4)

④ With CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect wheel sensor harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

5. Start the engine.
6. Select "ABS" and "DATA MONITOR", check "FR LH SENSOR", "FR RH SENSOR", "RR LH SENSOR" and "RR RH SENSOR".

NOTE:

Set the "DATA MONITOR" recording speed to "10 msec".

7. Read a value (wheel speed) of both normal wheel sensors and error-detecting wheel sensor.

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by the error detecting wheel sensor and the maximum/minimum wheel speed detected by the normal wheel sensors. is the difference within 5%. respectively?

YES >> GO TO 18.

NO >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126. "Removal and Installation"](#).

18. PERFORM SELF-DIAGNOSIS (5)

④ With CONSULT

1. Stop the vehicle.
2. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

3. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

Is DTC "C1115" detected?

C1115 WHEEL SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126. "Removal and Installation"](#).
NO >> INSPECTION END

19. REPLACE SENSOR ROTOR

Ⓜ With CONSULT

1. Replace the sensor rotor.
 - Front: Refer to [BRC-125. "FRONT SENSOR ROTOR : Removal and Installation"](#).
 - Rear: Refer to [BRC-125. "REAR SENSOR ROTOR : Removal and Installation"](#).
2. Erase self-diagnosis result for "ABS".
3. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

4. Start the engine.
5. Drive the vehicle at approx. 50 km/h (31 MPH) or more for approx. 2 minutes.

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

6. Stop the vehicle.
7. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

8. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

9. Perform self-diagnosis for "ABS".

Is DTC "C1115" detected?

- YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126. "Removal and Installation"](#).
NO >> INSPECTION END

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

C1116 STOP LAMP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1116 STOP LAMP SWITCH

Description

INFOID:000000012013660

The stop lamp switch transmits the stop lamp switch signal (ON/OFF) to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000012013661

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1116	STOP LAMP SW (Stop lamp switch)	When stop lamp switch signal is not input when brake pedal operates.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none">• Harness or connector• Stop lamp switch signal circuit	<ul style="list-style-type: none">• Harness or connector• Stop lamp switch• ABS actuator and electric unit (control unit)• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

④ With CONSULT

1. Turn the ignition switch OFF, and wait 10 seconds or more.
2. Start the engine.

NOTE:

Stop the vehicle.

3. Wait 1 minute or more.

NOTE:

Never depress brake pedal.

4. Depress brake pedal by 100 mm (3.94 in) or more, and maintain at that position for a minimum of 1 minute or more.
5. Release brake pedal, and wait 1 minute or more.
6. Repeat step 4 to 5 ten or more times.
7. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

8. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

9. Perform self-diagnosis for "ABS".

Is DTC "C1116" detected?

C1116 STOP LAMP SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

- YES-1 >> "CRNT" is displayed: Proceed to [BRC-53, "Diagnosis Procedure"](#).
YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)
NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).
NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:000000012013662

NOTE:

DTC "C1116" may be detected when the brake pedal and the accelerator pedal are simultaneously depressed for 1 minute or more while driving the vehicle. This is not a malfunction.

1. INTERVIEW FROM THE CUSTOMER

Check if the brake pedal and the accelerator pedal are simultaneously depressed for 1 minute or more while driving the vehicle.

Is there such a history?

- YES >> GO TO 2.
NO >> GO TO 3.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

- Erase self-diagnosis result for "ABS".
- Turn the ignition switch OFF → ON → OFF.
NOTE:
Wait at least 10 seconds after turning ignition switch OFF or ON.
- Start the engine.
NOTE:
Stop the vehicle.
- Depress the brake pedal several times.
- Turn the ignition switch OFF.
NOTE:
Wait at least 10 seconds after turning ignition switch OFF.
- Start the engine.
NOTE:
Wait at least 10 seconds after start the engine.
- Perform self-diagnosis for "ABS".

Is DTC "C1116" detected?

- YES >> GO TO 3.
NO >> INSPECTION END


3. STOP LAMP FOR ILLUMINATION

Depress brake pedal and check that stop lamp turns ON.

Does stop lamp turn ON?

- YES >> GO TO 5.
NO >> Check the stop lamp system circuit. GO TO 4.

4. CHECK DATA MONITOR (1)

 With CONSULT

- Erase self-diagnosis result for "ABS".
- Turn the ignition switch OFF → ON → OFF.
NOTE:
Wait at least 10 seconds after turning ignition switch OFF or ON.
- Start the engine.
NOTE:
Stop the vehicle.
- Select "ABS", "DATA MONITOR" and "STOP LAMP SW" according to this order. Check that data monitor displays "On" or "Off" when brake pedal is depressed or released. Refer to [BRC-99, "Reference Value"](#).
- Select "ABS", "DATA MONITOR" and "PRESS SENSOR" according to this order. Check that data monitor displays "5 bar" or less when brake pedal is depressed. Refer to [BRC-99, "Reference Value"](#).

Is the inspection result normal?

C1116 STOP LAMP SWITCH

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

- YES >> INSPECTION END
NO >> GO TO 5.

5.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.
3. Check the stop lamp switch harness connector for disconnection or looseness.

Is the inspection result normal?

- YES >> GO TO 6.
NO >> Repair / replace harness or connector, and GO TO 6.

6.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-87, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 7.
NO >> Repair / replace harness, connector, fuse, or fusible link.

7.CHECK STOP LAMP SWITCH CLEARANCE

1. Turn the ignition switch OFF.
2. Check the stop lamp switch clearance. Refer to [BR-9, "Inspection and Adjustment"](#).

Is the inspection result normal?

- YES >> GO TO 9.
NO >> Adjust stop lamp switch clearance. Refer to [BR-9, "Inspection and Adjustment"](#). GO TO 8.

8.CHECK DATA MONITOR (2)

Ⓜ With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.
NOTE:
Wait at least 10 seconds after turning ignition switch OFF or ON.
3. Start the engine.
NOTE:
Stop the vehicle.
4. Select "ABS", "DATA MONITOR" and "STOP LAMP SW" according to this order. Check that data monitor displays "On" or "Off" when brake pedal is depressed or released. Refer to [BRC-99, "Reference Value"](#).
5. Select "ABS", "DATA MONITOR" and "PRESS SENSOR" according to this order. Check that data monitor displays "5 bar" or less when brake pedal is depressed. Refer to [BRC-99, "Reference Value"](#).

Is the inspection result normal?

- YES >> INSPECTION END
NO >> GO TO 9.

9.CHECK STOP LAMP SWITCH

Check the stop lamp switch. Refer to [BR-9, "Inspection and Adjustment"](#).

Is the inspection result normal?

- YES >> GO TO 10.
NO >> Replace the stop lamp switch. Refer to [BR-22, "Removal and Installation"](#). GO TO 10.

10.CHECK DATA MONITOR (3)

Ⓜ With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.
NOTE:
Wait at least 10 seconds after turning ignition switch OFF or ON.
3. Start the engine.
NOTE:
Start the vehicle.

C1116 STOP LAMP SWITCH

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

4. Select "ABS", "DATA MONITOR" and "STOP LAMP SW" according to this order. Check that data monitor displays "On" or "Off" when brake pedal is depressed or released. Refer to [BRC-99, "Reference Value"](#).
5. Select "ABS", "DATA MONITOR" and "PRESS SENSOR" according to this order. Check that data monitor displays "5 bar" or less when brake pedal is depressed. Refer to [BRC-99, "Reference Value"](#).

Is the inspection result normal?

- YES >> INSPECTION END
 NO >> GO TO 11.

11.CHECK CONNECTOR AND TERMINAL

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.
4. Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
5. Disconnect stop lamp switch harness connector.
6. Check the stop lamp switch harness connector for disconnection or looseness.
7. Check the stop lamp switch pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

- YES >> GO TO 13.
 NO >> Repair / replace harness, connector, or terminal, and GO TO 12.

12.CHECK DATA MONITOR (4)

ⓅWith CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect stop lamp switch harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.
NOTE:
 Wait at least 10 seconds after turning ignition switch OFF or ON.
5. Start the engine.
NOTE:
 Stop the vehicle.
6. Select "ABS", "DATA MONITOR" and "STOP LAMP SW" according to this order. Check that data monitor displays "On" or "Off" when brake pedal is depressed or released. Refer to [BRC-99, "Reference Value"](#).
7. Select "ABS", "DATA MONITOR" and "PRESS SENSOR" according to this order. Check that data monitor displays "5 bar" or less when brake pedal is depressed. Refer to [BRC-99, "Reference Value"](#).

Is the inspection result normal?

- YES >> INSPECTION END
 NO >> GO TO 13.

13.CHECK STOP LAMP SWITCH CIRCUIT (1)

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

+		-	Condition	Voltage
ABS actuator and electric unit (control unit)				
Connector	Terminal			
E41	30	Ground	Brake pedal depressed	Battery voltage
			Brake pedal not depressed	Approx. 0 V

Is the inspection result normal?

- YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).
 NO >> Repair / replace harness or connector, and GO TO 14.

14.CHECK STOP LAMP SWITCH CIRCUIT (2)

1. Turn the ignition switch OFF.

C1116 STOP LAMP SWITCH

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

2. Disconnect stop lamp switch harness connector.
3. Check the continuity between ABS actuator and electric unit (control unit) harness connector and stop lamp switch harness connector.

ABS actuator and electric unit (control unit)		Stop lamp switch		Continuity
Connector	Terminal	Connector	Terminal	
E41	30	E110	2	Existed

4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and the ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E41	30	Ground	Not existed

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

NO >> Repair / replace harness or connector, and GO TO 15.

15.CHECK DATA MONITOR (5)

Ⓜ With CONSULT

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Connect stop lamp switch harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

5. Start the engine.

NOTE:

Stop the vehicle.

6. Select "ABS", "DATA MONITOR" and "STOP LAMP SW" according to this order. Check that data monitor displays "On" or "Off" when brake pedal is depressed or released. Refer to [BRC-99, "Reference Value"](#).
7. Select "ABS", "DATA MONITOR" and "PRESS SENSOR" according to this order. Check that data monitor displays "5 bar" or less when brake pedal is depressed. Refer to [BRC-99, "Reference Value"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

Component Inspection

INFOID:000000012013663

1.CHECK STOP LAMP SWITCH

1. Turn the ignition switch OFF.
2. Disconnect stop lamp switch harness connector.
3. Check the continuity when stop lamp switch is operated.

Stop lamp switch	Condition	Continuity
Terminal		
1 - 2	When stop lamp switch is released (When brake pedal is depressed)	Existed
	When stop lamp switch is pressed (When brake pedal is released)	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the stop lamp switch. Refer to [BR-22, "Removal and Installation"](#).

C1120, C1122, C1124, C1126 IN ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1120, C1122, C1124, C1126 IN ABS SOL

Description

INFOID:0000000012013664

The solenoid valve increases, holds or decreases the fluid pressure of each brake caliper according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000012013665

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1120	FR LH IN ABS SOL (Front LH ABS IN solenoid valve)	When a malfunction is detected in front LH ABS IN valve.
C1122	FR RH IN ABS SOL (Front RH ABS IN solenoid valve)	When a malfunction is detected in front RH ABS IN valve.
C1124	RR LH IN ABS SOL (Rear LH ABS IN solenoid valve)	When a malfunction is detected in rear LH ABS IN valve.
C1126	RR RH IN ABS SOL (Rear RH ABS IN solenoid valve)	When a malfunction is detected in rear RH ABS IN valve.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery	<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit)• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1120", "C1122", "C1124" or "C1126" detected?

YES-1 >> "C1120", "C1122", "C1124" or "C1126" is displayed by "CRNT": Proceed to [BRC-58, "Diagnosis Procedure"](#).

YES-2 >> "C1120", "C1122", "C1124" or "C1126" is displayed by "PAST": INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

< DTC/CIRCUIT DIAGNOSIS >

INFOID:000000012013666

NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 2.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Turn the ignition switch OFF.
NOTE:
Wait at least 10 seconds after turning ignition switch OFF.
2. Start the engine.
NOTE:
Wait at least 10 seconds after start the engine.
3. Perform self-diagnosis for "ABS".

Is DTC "C1120", "C1122", "C1124" or "C1126" detected?

- YES >> GO TO 3.
NO >> INSPECTION END

3. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-87, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair / replace harness, connector, fuse, or fusible link.

4. CHECK TERMINAL

Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

- YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).
NO >> Repair / replace harness, connector, or terminal.

C1121, C1123, C1125, C1127 OUT ABS SOL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1121, C1123, C1125, C1127 OUT ABS SOL

Description

INFOID:000000012013667

The solenoid valve increases, holds or decreases the fluid pressure of each brake caliper according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:000000012013668

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1121	FR LH OUT ABS SOL (Front LH ABS OUT solenoid valve)	When a malfunction is detected in front LH ABS OUT valve.
C1123	FR RH OUT ABS SOL (Front RH ABS OUT solenoid valve)	When a malfunction is detected in front RH ABS OUT valve.
C1125	RR LH OUT ABS SOL (Rear LH ABS OUT solenoid valve)	When a malfunction is detected in rear LH ABS OUT valve.
C1127	RR RH OUT ABS SOL (Rear RH ABS OUT solenoid valve)	When a malfunction is detected in rear RH ABS OUT valve.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"> • Harness or connector • ABS actuator and electric unit (control unit) power supply system • Fuse • Fusible link • Battery 	<ul style="list-style-type: none"> • Harness or connector • ABS actuator and electric unit (control unit) • ABS actuator and electric unit (control unit) power supply system • Fuse • Fusible link • Battery

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1121", "C1123", "C1125" or "C1127" detected?

YES-1 >> "C1121", "C1123", "C1125" or "C1127" is displayed by "CRNT": Proceed to [BRC-60, "Diagnosis Procedure"](#).

YES-2 >> "C1121", "C1123", "C1125" and "C1127" are displayed by "PAST": INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

C1121, C1123, C1125, C1127 OUT ABS SOL

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:000000012013669

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 2.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Turn the ignition switch OFF.
NOTE:
Wait at least 10 seconds after turning ignition switch OFF.
2. Start the engine.
NOTE:
Wait at least 10 seconds after start the engine.
3. Perform self-diagnosis for "ABS".

Is DTC "C1121", "C1123", "C1125" or "C1127" detected?

YES >> GO TO 3.

NO >> INSPECTION END

3. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-87, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair / replace harness, connector, fuse, or fusible link.

4. CHECK TERMINAL

Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

NO >> Repair / replace harness, connector, or terminal.

C1130 ENGINE SIGNAL

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1130 ENGINE SIGNAL

Description

INFOID:0000000012013670

ABS actuator and electric unit (control unit) and ECM exchange the engine signal with CAN communication line.

DTC Logic

INFOID:0000000012013671

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1130	ENGINE SIGNAL 1 (Engine system signal)	When a malfunction is detected in ECM system.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery• CAN communication line	<ul style="list-style-type: none">• Harness or connector• ECM• ABS actuator and electric unit (control unit)• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery• CAN communication line

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

④ With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1130" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-61, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:0000000012013672

1. CHECK ENGINE SYSTEM

④ With CONSULT

< DTC/CIRCUIT DIAGNOSIS >

Perform self-diagnosis for "ENGINE". Refer to [EC-155, "CONSULT Function"](#).

Is DTC detected?

- YES >> Check the DTC. Refer to [EC-576, "DTC Index"](#).
- NO >> GO TO 2.

2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-87, "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair / replace harness, connector, fuse, or fusible link.

3. CHECK CONNECTOR AND TERMINAL

1. Turn the ignition switch OFF.
2. Disconnect ECM harness connector.
3. Disconnect ABS actuator and electric unit (control unit) harness connector.
4. Check the connector for disconnection or looseness.
5. Check the pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair / replace harness, connector, or terminal, securely lock the connector, and GO TO 4.

4. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Ⓜ With CONSULT

1. Connect ECM harness connector.
2. Connect ABS actuator and electric unit (control unit) harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

5. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

6. Perform self-diagnosis for "ABS".

Is DTC "C1130" or "U1000" detected?

YES ("C1130") >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

YES ("U1000") >> Refer to [LAN-16, "Trouble Diagnosis Flow Chart"](#).

NO >> INSPECTION END

C1140 ACTUATOR RELAY SYSTEM

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1140 ACTUATOR RELAY SYSTEM

Description

INFOID:0000000012013673

Activates or deactivates each solenoid valve according to the signals transmitted by the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000012013674

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1140	ACTUATOR RLY (Actuator relay)	When a malfunction is detected in actuator relay.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery	<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit)• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

④ With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1140" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-63, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:0000000012013675

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.

2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

Is the inspection result normal?

C1140 ACTUATOR RELAY SYSTEM

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

YES >> GO TO 3.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 2.

2.PERFORM SELF-DIAGNOSIS

Ⓜ With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1140" detected?

YES >> GO TO 3.

NO >> INSPECTION END

3.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-87. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair / replace harness, connector, fuse, or fusible link.

4.CHECK TERMINAL

Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126. "Removal and Installation"](#).

NO >> Repair / replace harness, connector, or terminal.

C1142 PRESS SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1142 PRESS SENSOR

Description

INFOID:0000000012013676

The pressure sensor converts the brake fluid pressure to an electric signal and transmits it to the ABS actuator and electric unit (control unit). [The pressure sensor is integrated in the ABS actuator and electric unit (control unit).]

DTC Logic

INFOID:0000000012013677

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1142	PRESS SEN CIRCUIT (Pressure sensor circuit)	When a malfunction is detected in pressure sensor.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none">• Harness or connector• Air inclusion in the brake piping• Stop lamp switch system• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery	<ul style="list-style-type: none">• Stop lamp switch system• ABS actuator and electric unit (control unit)• Brake system• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery• Air inclusion in the brake piping

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1142" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-65, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:0000000012013678

1. STOP LAMP SWITCH SYSTEM

Check the stop lamp switch system. Refer to [BRC-53, "Diagnosis Procedure"](#).

< DTC/CIRCUIT DIAGNOSIS >

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Repair or replace stop lamp switch system.

2.CHECK BRAKE FLUID LEAKAGE

Check the brake fluid leakage. Refer to [BR-12, "Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace brake fluid leakage part.

3.CHECK BRAKE PIPING

Check the brake piping.

- Front: Refer to [BR-28, "FRONT : Inspection"](#).
- Rear: Refer to [BR-32, "REAR : Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair or replace brake piping.
 - Front: Refer to [BR-26, "FRONT : Removal and Installation"](#).
 - Rear: Refer to [BR-31, "REAR : Removal and Installation"](#).

4.CHECK BRAKE PEDAL

Check the brake pedal.

- Brake pedal height: Refer to [BR-9, "Inspection and Adjustment"](#).
- Brake pedal assembly: Refer to [BR-23, "Inspection and Adjustment"](#).

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> Adjust the brake pedal height or replace brake pedal assembly.
 - Adjust the brake pedal: Refer to [BR-9, "Inspection and Adjustment"](#).
 - Replace the brake pedal: Refer to [BR-22, "Removal and Installation"](#).

5.CHECK BRAKE MASTER CYLINDER

Check the brake master cylinder. Refer to [BR-14, "Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 6.
- NO >> Repair or replace brake master cylinder. Refer to [BR-33, "Removal and Installation"](#).

6.CHECK BRAKE BOOSTER

Check the brake booster. Refer to [BR-15, "Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 7.
- NO >> Repair or replace brake booster. Refer to [BR-36, "Removal and installation"](#).

7.CHECK BRAKE BOOSTER PRESSURE SENSOR

Check the brake booster pressure sensor. Refer to [BR-38, "Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 8.
- NO >> Repair or replace brake booster pressure sensor. Refer to [BR-38, "Removal and Installation"](#).

8.CHECK VACUUM PIPING

Check the vacuum piping. Refer to [BR-39, "Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 9.
- NO >> Repair or replace vacuum piping. Refer to [BR-39, "Removal and Installation"](#).

9.CHECK FRONT DISC BRAKE

Check the front disc brake.

- Brake caliper 2 piston type: Refer to [BR-48, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Inspection"](#).

C1142 PRESS SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

- Brake caliper 4 piston type: Refer to [BR-52. "BRAKE CALIPER ASSEMBLY \(4 PISTON TYPE\) : Inspection"](#).

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair or replace front disc brake.

- Brake caliper 2 piston type: Refer to [BR-46. "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Removal and Installation"](#).
- Brake caliper 4 piston type: Refer to [BR-50. "BRAKE CALIPER ASSEMBLY \(4 PISTON TYPE\) : Removal and Installation"](#).

10. CHECK REAR DISC BRAKE

Check the rear disc brake.

- Brake caliper 1 piston type: Refer to [BR-62. "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Inspection"](#).
- Brake caliper 2 piston type: Refer to [BR-66. "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Inspection"](#).

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair or replace rear disc brake.

- Brake caliper 1 piston type: Refer to [BR-59. "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Removal and Installation"](#).
- Brake caliper 2 piston type: Refer to [BR-64. "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Removal and Installation"](#).

11. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT


Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-87. "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 12.

NO >> Repair / replace harness, connector, fuse, or fusible link.

12. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

 With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

3. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

4. Start the engine and drive the vehicle for a short period of time.

NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

5. Stop the vehicle.

6. Perform self-diagnosis for "ABS".

Is DTC "C1142" detected?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126. "Removal and Installation"](#).

NO >> Check the ABS actuator and electric unit (control unit) harness connector and terminal for damage, looseness and disconnection. Repair / replace harness, connector, or terminal.

C1143 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1143 STEERING ANGLE SENSOR

Description

INFOID:000000012013679

The steering angle sensor detects the rotation amount, angular velocity and direction of the steering wheel, and transmits the data to the ABS actuator and electric unit (control unit) via CAN communication.

DTC Logic

INFOID:000000012013680

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1143	ST ANG SEN CIRCUIT (Steering angle sensor circuit)	When a malfunction is detected in steering angle sensor.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery• CAN communication line• Incomplete neutral position adjustment of steering angle sensor• Improper installation of steering angle sensor	<ul style="list-style-type: none">• Harness or connector• Steering angle sensor• ABS actuator and electric unit (control unit)• IPDM E/R• CAN communication line• Wheel alignment• Incomplete neutral position adjustment of steering angle sensor• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓟ With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1143" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-69. "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45. "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

C1143 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Diagnosis Procedure

INFOID:000000012013681

1. ADJUST THE NEUTRAL POSITION OF STEERING ANGLE SENSOR

④ With CONSULT

Perform neutral position adjustment of steering angle sensor. Refer to [BRC-7, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2.

2. PERFORM SELF-DIAGNOSIS (1)

④ With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1143" detected?

YES-1 >> "CRNT" is displayed: GO TO 3.

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO >> INSPECTION END

3. CHECK CONNECTOR

1. Turn the ignition switch OFF.

2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

3. Check the steering angle sensor harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 4.

4. PERFORM SELF-DIAGNOSIS (2)

④ With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1143" detected?

YES >> GO TO 5.

NO >> INSPECTION END

5. CHECK STEERING ANGLE SENSOR POWER SUPPLY

1. Turn the ignition switch OFF.

2. Disconnect steering angle sensor harness connector.

3. Check the voltage between steering angle sensor harness connector and ground.

+		-	Voltage
Connector	Terminal		
M37	8	Ground	Approx. 0 V

4. Turn the ignition switch ON.

NOTE:

Start the engine.

C1143 STEERING ANGLE SENSOR

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

5. Check the voltage between steering angle sensor harness connector and ground.

+		-	Voltage
Steering angle sensor			
Connector	Terminal		
M37	8	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 7.
NO >> GO TO 6.

6.CHECK STEERING ANGLE SENSOR POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Check the 10A fuse (#45).
3. Disconnect IPDM E/R harness connector.
4. Check the continuity between steering angle sensor harness connector and IPDM E/R harness connector.

Steering angle sensor		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M37	8	E5	25	Existed

5. Check the continuity between steering angle sensor harness connector and ground.

Steering angle sensor		—	Continuity
Connector	Terminal		
M37	8	Ground	Not existed

Is the inspection result normal?

- YES >> Perform trouble diagnosis for ignition power supply.
NO >> Repair / replace harness, connector, or fuse.

7.CHECK STEERING ANGLE SENSOR GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Check the continuity between steering angle sensor harness connector and ground.

Steering angle sensor		—	Continuity
Connector	Terminal		
M37	7	Ground	Existed

Is the inspection result normal?

- YES >> GO TO 8.
NO >> Repair / replace harness or connector.

8.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-87](#), "[Diagnosis Procedure](#)".

Is the inspection result normal?

- YES >> GO TO 9.
NO >> Repair / replace harness, connector, fuse, or fusible link.

9.CHECK TERMINAL

1. Check the steering angle sensor pin terminals for damage or loose connection with harness connector.
2. Check the IPDM E/R pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

- YES >> GO TO 10.
NO >> Repair / replace harness, connector, or terminal.

C1143 STEERING ANGLE SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

10. CHECK CAN COMMUNICATION LINE

1. Connect steering angle sensor harness connector.
2. Connect IPDM E/R harness connector.
3. Check the CAN communication line. Refer to [LAN-16, "Trouble Diagnosis Flow Chart"](#).

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair / replace harness or connector. Refer to [LAN-6, "Precautions for Harness Repair"](#).

11. CHECK DATA MONITOR

Ⓜ With CONSULT

1. "ABS", "DATA MONITOR" and "STR ANGLE SIG" according to this order.
2. Check that the indication changes with the steering angle when the steering wheel is turned left/right from the neutral position. Refer to [BRC-99, "Reference Value"](#).

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

NO >> Replace the steering angle sensor. Refer to [BRC-129, "Removal and Installation"](#).

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT

DTC Logic

INFOID:000000012013682

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1144	ST ANG SEN SIGNAL (Steering angle sensor not complete)	When neutral position adjustment of steering angle sensor is not complete.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
Incomplete neutral position adjustment of steering angle sensor	<ul style="list-style-type: none">• Harness or connector• Steering angle sensor• ABS actuator and electric unit (control unit)• Incomplete neutral position adjustment of steering angle sensor

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓜ With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1144" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-72, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:000000012013683

1. ADJUST THE NEUTRAL POSITION OF STEERING ANGLE SENSOR

Perform neutral position adjustment of steering angle sensor. Refer to [BRC-7, "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

>> GO TO 2.

2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Ⓜ With CONSULT

1. Turn the ignition switch OFF.

NOTE:

C1144 INCOMPLETE STEERING ANGLE SENSOR ADJUSTMENT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1144" detected?

YES >> GO TO 3.

NO >> INSPECTION END

3.CHECK STEERING ANGLE SENSOR SYSTEM

1. Turn the ignition switch OFF.

2. Check the steering angle sensor system. Refer to [BRC-68, "DTC Logic"](#).

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair / replace harness, connector, or terminal.

4.CHECK DATA MONITOR

Ⓜ With CONSULT

1. "ABS", "DATA MONITOR" and "STR ANGLE SIG" according to this order.

2. Check that the indication changes with the steering angle when the steering wheel is turned left/right from the neutral position. Refer to [BRC-99, "Reference Value"](#).

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

NO >> Replace the steering angle sensor. Refer to [BRC-129, "Removal and Installation"](#).

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

C1145, C1146 YAW RATE/SIDE G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1145, C1146 YAW RATE/SIDE G SENSOR

Description

INFOID:000000012013684

The yaw rate/side G sensor detects the yaw rate/side G affecting the vehicle, and transmits the data to the ABS actuator and electric unit (control unit) as an analog voltage signal.

DTC Logic

INFOID:000000012013685

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1145	YAW RATE SENSOR (Yaw rate sensor circuit)	<ul style="list-style-type: none">• When a malfunction is detected in yaw rate signal.• When a signal line of yaw rate/side G sensor is open or shorted.
C1146	SIDE G SEN CIRCUIT (Side G sensor circuit)	<ul style="list-style-type: none">• When a malfunction is detected in side G signal.• When a signal line of yaw rate/side G sensor is open or shorted.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery	<ul style="list-style-type: none">• Harness or connector• Yaw rate/side G sensor• ABS actuator and electric unit (control unit)• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓟ With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1145" or "C1146" detected?

YES-1 >> "C1145" or "C1146" is displayed by "CRNT": Proceed to [BRC-74. "Diagnosis Procedure"](#).

YES-2 >> "C1145" and "C1146" are displayed by "PAST": INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45. "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:000000012013686

CAUTION:

C1145, C1146 YAW RATE/SIDE G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

- A malfunction in yaw rate/side G sensor system may be detected when the vehicle sharply turns during a spin turn, acceleration turn or drift driving while VDC function is OFF (VDC OFF indicator lamp is in ON status). This is not a malfunction if the status returns to normal after engine is started again. In that case, erase self-diagnosis result memory using CONSULT.
- When the engine is in running status and the vehicle is on a turntable at the entrance of parking lot or on a moving unit, VDC warning lamp may turn ON and “ABS” self-diagnosis may display “YAW RATE SENSOR”. In this case, yaw rate sensor is not malfunctioning. The status returns to normal when the vehicle is left from the turntable or moving unit and the engine is started again. In that case, erase self-diagnosis result memory using CONSULT.

1. CHECK YAW RATE/SIDE G SENSOR POWER SUPPLY

1. Turn the ignition switch OFF.
2. Disconnect yaw rate/side G sensor harness connector.
3. Check the voltage between yaw rate/side G sensor harness connector and ground.

+		-	Voltage
Yaw rate/side G sensor			
Connector	Terminal		
M143	4	Ground	Approx. 0 V

4. Turn the ignition switch ON.
NOTE:
Never start engine.
5. Check the voltage between yaw rate/side G sensor harness connector and ground.

+		-	Voltage
Yaw rate/side G sensor			
Connector	Terminal		
M143	4	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> GO TO 2.

2. CHECK YAW RATE/SIDE G SENSOR POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Check the 10A fuse (#45).
3. Disconnect IPDM E/R harness connector.
4. Check the continuity between yaw rate/side G sensor harness connector and IPDM E/R harness connector.

Yaw rate/side G sensor		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
M143	4	E5	25	Existed

5. Check the continuity between yaw rate/side G sensor harness connector and ground.

Yaw rate/side G sensor		—	Continuity
Connector	Terminal		
M143	4	Ground	Not existed

Is the inspection result normal?

- YES >> Perform trouble diagnosis for ignition power supply.
- NO >> Repair / replace harness, connector, or fuse.

3. CHECK YAW RATE/SIDE G SENSOR GROUND CIRCUIT

1. Turn the ignition switch OFF.
2. Check the continuity between yaw rate/side G sensor harness connector and ground.

BRC

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

C1145, C1146 YAW RATE/SIDE G SENSOR

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Yaw rate/side G sensor		—	Continuity
Connector	Terminal		
M143	1	Ground	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair / replace harness or connector.

4. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-87, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair / replace harness, connector, fuse, or fusible link.

5. CHECK COMMUNICATION LINE

Check the continuity between yaw rate/side G sensor harness connector and ABS actuator and electric unit (control unit) harness connector.

Yaw rate/side G sensor		ABS actuator and electric unit (control unit)		Continuity
Connector	Terminal	Connector	Terminal	
M143	2	E41	25	Existed
	3		45	

Is the inspection result normal?

YES >> GO TO 6.

NO >> • For USA and Canada: Refer to [BRC-118, "FOR USA AND CANADA : Precautions for Harness Repair"](#).

• For Mexico: Refer to [BRC-121, "FOR MEXICO : Precautions for Harness Repair"](#).

6. CHECK TERMINAL

1. Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
2. Check the yaw rate/side G sensor pin terminals for damage or loose connection with harness connector.
3. Check the IPDM E/R pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 7.

NO >> Repair / replace harness, connector, or terminal.

7. REPLACE YAW RATE/SIDE G SENSOR

Ⓜ With CONSULT.

1. Connect ABS actuator and electric unit (control unit) harness connector.
2. Replace the yaw rate/side G sensor. Refer to [BRC-128, "Removal and Installation"](#).
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF.
5. Turn the ignition switch ON.

NOTE:

Never start engine.

6. Perform self-diagnosis for "ABS".

Is DTC "C1145" or "C1146" detected?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

NO >> INSPECTION END

C1147, C1148, C1149, C1150 USV/HSV LINE

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1147, C1148, C1149, C1150 USV/HSV LINE

Description

INFOID:0000000012013687

USV1, USV2 (CUT VALVE)

The cut valve shuts off the normal brake fluid path from the master cylinder, when VDC/TCS is activated.

HSV1, HSV2 (SUCTION VALVE)

The suction valve supplies the brake fluid from the master cylinder to the pump, when VDC/TCS is activated.

DTC Logic

INFOID:0000000012013688

DTC DETECTION LOGIC

DTC	Display item (Trouble diagnosis content)	Malfunction detected condition
C1147	USV LINE[FL-RR] (USV line [front LH - rear RH])	VDC switch-over solenoid valve (USV1) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.
C1148	USV LINE[FR-RL] (USV line [front RH - rear LH])	VDC switch-over solenoid valve (USV2) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.
C1149	HSV LINE[FL-RR] (HSV line [front LH - rear RH])	VDC switch-over solenoid valve (HSV1) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.
C1150	HSV LINE[FR-RL] (HSV line [front RH - rear LH])	VDC switch-over solenoid valve (HSV2) on the primary side is open circuit or shorted, or the control line is open or shorted to the power supply or the ground.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery	<ul style="list-style-type: none">• Harness or connector• ABS actuator and electric unit (control unit)• ABS actuator and electric unit (control unit) power supply system• Fuse• Fusible link• Battery

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

Ⓜ With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1147", "C1148", "C1149" or "C1150" detected?

YES-1 >> "C1147", "C1148", "C1149" or "C1150" is displayed by "CRNT": Proceed to [BRC-78. "Diagnosis Procedure"](#).

C1147, C1148, C1149, C1150 USV/HSV LINE

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

- YES-2 >> "C1147", "C1148", "C1149" or "C1150" is displayed by "PAST": INSPECTION END (Erase the memory of self-diagnosis results.)
- NO-1 >> To check malfunction symptom before repair: Refer to [GI-45. "Intermittent Incident"](#).
- NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:000000012013689

1. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the ABS actuator and electric unit (control unit) harness connector for disconnection or looseness.

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair / replace harness or connector, securely lock the connector, and GO TO 2.

2. PERFORM SELF-DIAGNOSIS

 With CONSULT

1. Turn the ignition switch OFF → ON.

CAUTION:

- Be sure to wait of 10 seconds after turning ignition switch OFF or ON.
- Start the engine.

2. Perform self-diagnosis for "ABS".

Is DTC "C1147", "C1148", "C1149" or "C1150" detected?

- YES >> GO TO 3.
- NO >> INSPECTION END

3. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Check the ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-87. "Diagnosis Procedure"](#).

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> Repair / replace harness, connector, fuse, or fusible link.

4. CHECK TERMINAL

Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness.

Is the inspection result normal?

- YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126. "Removal and Installation"](#).
- NO >> Repair / replace harness, connector, or terminal.

C1155 BRAKE FLUID LEVEL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1155 BRAKE FLUID LEVEL SWITCH

Description

INFOID:0000000012013690

The brake fluid level switch converts the brake fluid level to an electric signal and transmits it to the ABS actuator and electric unit (control unit).

DTC Logic

INFOID:0000000012013691

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1155	BR FLUID LEVEL LOW (Brake fluid level low)	<ul style="list-style-type: none">When brake fluid level low signal is detected.When an open circuit is detected in brake fluid level switch circuit.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none">Harness or connectorBrake fluid level is low	<ul style="list-style-type: none">Harness or connectorABS actuator and electric unit (control unit)Brake fluid level switchCombination meterBrake fluid level is low

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

④ With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1155" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-79, "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:0000000012013692

1. CHECK BRAKE FLUID LEVEL

1. Turn the ignition switch OFF.

2. Check the brake fluid level. Refer to [BR-12, "Inspection"](#).

Is the inspection result normal?

YES >> GO TO 3.

NO >> Refill brake fluid. Refer to [BR-12, "Refilling"](#). GO TO 2.

C1155 BRAKE FLUID LEVEL SWITCH

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

2. PERFORM SELF-DIAGNOSIS (1)

Ⓜ With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

3. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

Is DTC "C1155" detected?

YES >> GO TO 3.

NO >> INSPECTION END

3. CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Check the brake fluid level switch harness connector for disconnection or looseness.
3. Check the combination meter harness connector for disconnection or looseness.

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair / replace harness or connector, and GO TO 4.

4. PERFORM SELF-DIAGNOSIS (2)

Ⓜ With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1155" detected?

YES >> GO TO 5.

NO >> INSPECTION END

5. CHECK BRAKE FLUID LEVEL SWITCH

Check the brake fluids level switch. Refer to [BRC-82, "Component Inspection"](#).

Is the inspection result normal?

YES >> GO TO 7.

NO >> Replace the reservoir tank. Refer to [BR-34, "Disassembly and Assembly"](#). GO TO 6.

6. PERFORM SELF-DIAGNOSIS (3)

Ⓜ With CONSULT

1. Erase self-diagnosis result for "ABS".
2. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

3. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

4. Perform self-diagnosis for "ABS".

Is DTC "C1155" detected?

YES >> GO TO 7.

NO >> INSPECTION END

7. CHECK CONNECTOR AND TERMINAL

1. Turn the ignition switch OFF.

C1155 BRAKE FLUID LEVEL SWITCH

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

2. Disconnect brake fluid level switch harness connector.
3. Check the brake fluid level switch harness connector for disconnection or looseness.
4. Check the brake fluid level switch pin terminals for damage or loose connection with harness connector.
5. Disconnect combination meter harness connector.
6. Check the combination meter harness connector for disconnection or looseness.
7. Check the combination meter pin terminals for damage or loose connection with harness connector.

Is the inspection result normal?

YES >> GO TO 9.

NO >> Repair / replace harness, connector, or terminal, and GO TO 8.

8.PERFORM SELF-DIAGNOSIS (4)

ⓂWith CONSULT

1. Connect brake fluid level switch harness connector.
2. Connect combination meter harness connector.
3. Erase self-diagnosis result for "ABS".
4. Turn the ignition switch OFF → ON → OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF or ON.

5. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

6. Perform self-diagnosis for "ABS".

Is DTC "C1155" detected?

YES >> GO TO 9.

NO >> INSPECTION END

9.CHECK BRAKE FLUID LEVEL SWITCH CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect brake fluid level switch harness connector.
3. Disconnect combination meter harness connector.
4. Check the continuity between brake fluid level switch harness connector and combination meter harness connector.

Brake fluid level switch		Combination meter		Continuity
Connector	Terminal	Connector	Terminal	
E47	1	M54	27	Existed

5. Check the continuity between brake fluid level switch harness connector and ground.

Brake fluid level switch		—	Continuity
Connector	Terminal		
E47	1	Ground	Not existed

Is the inspection result normal?

YES >> GO TO 10.

NO >> Repair / replace harness or connector, and GO TO 10.

10.CHECK BRAKE FLUID LEVEL SWITCH GROUND CIRCUIT

Check the continuity between brake fluid level switch harness connector and ground.

Brake fluid level switch		—	Continuity
Connector	Terminal		
E47	2	Ground	Existed

Is the inspection result normal?

YES >> GO TO 11.

NO >> Repair / replace harness or connector, and GO TO 11.

C1155 BRAKE FLUID LEVEL SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

11. CHECK COMBINATION METER

1. Connect brake fluid level switch harness connector.
2. Connect combination meter harness connector.
3. Check the combination meter. Refer to [MWI-33, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

NO >> Repair or replace combination meter. Refer to [MWI-103, "Removal and Installation"](#).

Component Inspection

INFOID:000000012013693

1. CHECK BRAKE FLUID LEVEL SWITCH

1. Turn the ignition switch OFF.
2. Disconnect brake fluid level switch harness connector.
3. Check the continuity between terminals of brake fluid level switch.

Brake fluid level switch Terminal	Condition	Continuity
1 – 2	When brake fluid level in reservoir tank is within the specified level.	Not existed
	When brake fluid level in reservoir tank is less than the specified level.	Existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the reservoir tank. Refer to [BR-34, "Disassembly and Assembly"](#).

C1170 VARIANT CODING

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

C1170 VARIANT CODING

DTC Logic

INFOID:0000000012013694

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
C1170	VARIANT CODING (Variant coding)	When the information in ABS actuator and electric unit (control unit) is not the same.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
—	ABS actuator and electric unit (control unit)


DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

 With CONSULT

1. Turn the ignition switch OFF.

NOTE:

Wait at least 10 seconds after turning ignition switch OFF.

2. Start the engine.

NOTE:

Wait at least 10 seconds after start the engine.

3. Perform self-diagnosis for "ABS".

Is DTC "C1170" detected?

YES-1 >> "CRNT" is displayed: Proceed to [BRC-83. "Diagnosis Procedure"](#).

YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)

NO-1 >> To check malfunction symptom before repair: Refer to [GI-45. "Intermittent Incident"](#).

NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:0000000012013695

1. CHECK SELF-DIAGNOSIS RESULTS

 With CONSULT

Replace the ABS actuator and electric unit (control unit) even if other DTC are displayed along with "C1170" in self-diagnosis for "ABS".

>> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126. "Removal and Installation"](#).

U1000 CAN COMM CIRCUIT

Description

INFOID:000000012013696

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:000000012013697

DTC DETECTION LOGIC

DTC	Display Item (Trouble diagnosis content)	Malfunction detected condition
U1000	CAN COMM CIRCUIT (CAN communication circuit)	When CAN communication signal is not continuously transmitted or received for 2 seconds or more.

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"> • Harness or connector • CAN communication line 	CAN communication system malfunction

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. CHECK DTC DETECTION

Ⓟ With CONSULT

1. Turn the ignition switch OFF.
NOTE:
Wait at least 10 seconds after turning ignition switch OFF.
2. Start the engine.
NOTE:
Wait at least 10 seconds after start the engine.
3. Perform self-diagnosis for "ABS".

Is DTC "U1000" detected?

- YES-1 >> "CRNT" is displayed: Proceed to [BRC-84, "Diagnosis Procedure"](#).
- YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)
- NO-1 >> To check malfunction symptom before repair: Refer to [GI-45, "Intermittent Incident"](#).
- NO-2 >> Confirmation after repair: INSPECTION END

Diagnosis Procedure

INFOID:000000012013698

Proceed to [LAN-16, "Trouble Diagnosis Flow Chart"](#).

U1002 SYSTEM COMM (CAN)

Description

INFOID:0000000012013699

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent error detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

DTC Logic

INFOID:0000000012013700

DTC DETECTION LOGIC

DTC	Display item (Trouble diagnosis content)	Malfunction detected condition
U1002	SYSTEM COMM (CAN) (CAN system communication)	When ABS actuator and electric unit (control unit) is not transmitting or receiving CAN communication signal for 2 seconds or less.

A
B
C
D
E
BRC

POSSIBLE CAUSE

NOTE:

Confirm if DTC is PAST or CRNT. If DTC is CRNT, proceed with Diagnosis Procedure. If DTC is PAST, clear DTC. Do not replace the ABS actuator and electric unit (control unit) for a PAST DTC.

PAST DTC	CRNT DTC
<ul style="list-style-type: none"> CAN communication line Harness or connector 	<ul style="list-style-type: none"> CAN communication line ABS actuator and electric unit (control unit) Steering angle sensor

G
H
I

DTC CONFIRMATION PROCEDURE

1. PRECONDITIONING

If "DTC CONFIRMATION PROCEDURE" has been previously conducted, always turn the ignition switch OFF and wait at least 10 seconds before conducting the next test.

>> GO TO 2.

2. DTC REPRODUCTION PROCEDURE

With CONSULT

1. Turn the ignition switch OFF.
NOTE:
Wait at least 10 seconds after turning ignition switch OFF.
2. Start the engine.
NOTE:
Wait at least 10 seconds after start the engine.
3. Perform self-diagnosis for "ABS".

Is DTC "U1002" detected?

- YES-1 >> "CRNT" is displayed: Proceed to [BRC-85. "Diagnosis Procedure"](#).
- YES-2 >> "PAST" is displayed: INSPECTION END (Erase the memory of self-diagnosis results.)
- NO-1 >> To check malfunction symptom before repair: Refer to [GI-45. "Intermittent Incident"](#).
- NO-2 >> Confirmation after repair: INSPECTION END

J
K
L
M
N
O
P

Diagnosis Procedure

INFOID:0000000012013701

CAUTION:

- Never apply 7.0 V or more to the measurement terminal.
- Use a tester with open terminal voltage of 7.0 V or less.

U1002 SYSTEM COMM (CAN)

[VDC/TCS/ABS]

< DTC/CIRCUIT DIAGNOSIS >

- Turn the ignition switch OFF and disconnect the battery cable from the negative terminal when checking the harness.

1. CHECK CAN DIAGNOSIS SUPPORT MONITOR

④ With CONSULT

1. Select "ABS" and "CAN Diagnosis Support Monitor" in order.
2. Check the malfunction history between each control unit connected to ABS actuator and electric unit (control unit).

Check the result of "PAST"?

All items are "OK">>Check the intermittent incident. Refer to [GI-45. "Intermittent Incident"](#).

"TRANSMIT DIAG" is other than "OK">>GO TO 2.

A control unit other than ABS actuator and electric unit (control unit) is anything other than "OK">>GO TO 3.

2. CHECK TRANSMITTING SIDE UNIT

Check the ABS actuator and electric unit (control unit) harness connector terminals No. 14 and 35 for damage or loose connection.

Is the inspection result normal?

YES >> Erase self-diagnosis results. Then perform self-diagnosis for "ABS" with CONSULT.

NO >> Recheck the terminals for damage or loose connection. Refer to [LAN-6. "Precautions for Harness Repair"](#).

3. CHECK APPLICABLE CONTROL UNIT

Check the terminals of each harness connector for damage or loose connection.

Is the inspection result normal?

YES >> Erase self-diagnosis results. Then perform self-diagnosis for applicable control unit with CONSULT.

NO >> Recheck the terminals for damage or loose connection. Refer to [LAN-6. "Precautions for Harness Repair"](#).

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

POWER SUPPLY AND GROUND CIRCUIT

Description

INFOID:0000000012013702

Supplies power to ABS actuator and electric unit (control unit).

Diagnosis Procedure

INFOID:0000000012013703

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) IGNITION POWER SUPPLY (1)

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

+		-	Voltage
ABS actuator and electric unit (control unit)			
Connector	Terminal		
E41	28	Ground	Approx. 0 V

4. Turn the ignition switch ON

NOTE:

Start the engine.

5. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

+		-	Voltage
ABS actuator and electric unit (control unit)			
Connector	Terminal		
E41	28	Ground	Battery voltage

Is the inspection result normal?

YES >> GO TO 3.

NO >> GO TO 2.

2. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) IGNITION POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Check the 10A fuse (#45).
3. Disconnect IPDM E/R harness connector.
4. Check the continuity between ABS actuator and electric unit (control unit) harness connector and IPDM E/R harness connector.

ABS actuator and electric unit (control unit)		IPDM E/R		Continuity
Connector	Terminal	Connector	Terminal	
E41	28	E5	25	Existed

5. Check the continuity between ABS actuator and electric unit (control unit) harness connector and ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E41	28	Ground	No existed

Is the inspection result normal?

YES >> Perform trouble diagnosis for ignition power supply.

NO >> Repair / replace harness, connector, or fuse.

3. CHECK MOTOR AND MOTOR RELAY POWER SUPPLY

1. Turn the ignition switch OFF.
2. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

+		-	Voltage
ABS actuator and electric unit (control unit)			
Connector	Terminal		
E41	2	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 5.
- NO >> GO TO 4.

4.CHECK MOTOR AND MOTOR RELAY POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Check the 50A fusible link (#H).
3. Check the continuity and short circuit between ABS actuator and electric unit (control unit) harness connector terminal (2) and 50A fusible link (#H).

Is the inspection result normal?

- YES >> Perform trouble diagnosis for battery power supply.
- NO >> Repair / replace harness, connector, or fusible link.

5.CHECK ACTUATOR RELAY, ABS IN VALVE, ABS OUT VALVE POWER SUPPLY

1. Turn the ignition switch OFF.
2. Check the voltage between ABS actuator and electric unit (control unit) harness connector and ground.

+		-	Voltage
ABS actuator and electric unit (control unit)			
Connector	Terminal		
E41	3	Ground	Battery voltage

Is the inspection result normal?

- YES >> GO TO 7.
- NO >> GO TO 6.

6.CHECK ACTUATOR RELAY, ABS IN VALVE, ABS OUT VALVE POWER SUPPLY CIRCUIT

1. Turn the ignition switch OFF.
2. Check the 30A fusible link (#L).
3. Check the continuity and short circuit between ABS actuator and electric unit (control unit) harness connector terminal (3) and 30A fusible link (#L).

Is the inspection result normal?

- YES >> Perform trouble diagnosis for battery power supply.
- NO >> Repair / replace harness, connector, or fusible link.

7.CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) GROUND CIRCUIT

Check the continuity between ABS actuator and electric unit (control unit) harness connector and the ground.

ABS actuator and electric unit (control unit)		—	Continuity
Connector	Terminal		
E41	1	Ground	Existed
	4		

Is the inspection result normal?

- YES >> GO TO 8.
- NO >> Repair / replace harness, connector, or terminal.

8.CHECK TERMINAL

1. Check the ABS actuator and electric unit (control unit) pin terminals for damage or loose connection with harness connector.
2. Check the IPDM E/R pin terminals for damage or loose connection with harness connector.

POWER SUPPLY AND GROUND CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

Is the inspection result normal?

- YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).
- NO >> Repair / replace harness, connector, or terminal.

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

PARKING BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

PARKING BRAKE SWITCH

Description

INFOID:000000012013704

Operate the parking brake lever, and brake warning lamp in the combination meter turns ON/OFF correctly.

Diagnosis Procedure

INFOID:000000012013705

1.CHECK PARKING BRAKE SWITCH CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect parking brake switch harness connector.
3. Disconnect combination meter harness connector.
4. Check the continuity between parking brake switch harness connector and combination meter harness connector.

Parking brake switch		Combination meter		Continuity
Connector	Terminal	Connector	Terminal	
M68	1	M54	26	Existed

5. Check the continuity between parking brake switch harness connector and ground.

Parking brake switch		—	Continuity
Connector	Terminal		
M68	1	Ground	Not existed

Is the inspection result normal?

- YES >> GO TO 2.
NO >> Repair / replace harness, connector, or terminal.

2.CHECK PARKING BRAKE SWITCH

Check the parking brake switch. Refer to [BRC-90. "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.
NO >> Replace the parking brake switch. Refer to [PB-7. "Removal and Installation"](#).

3.CHECK CONNECTOR

Check the connector and terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 4.
NO >> Repair / replace harness, connector, or terminal.

4.CHECK PARKING BRAKE SWITCH SIGNAL

 With CONSULT

Select "ABS", "DATA MONITOR" and "PARK BRAKE SW" in order, and perform the parking brake switch inspection.

Condition	PARK BRAKE SW (DATA MONITOR)
Parking brake lever is active	On
Parking brake lever is inactive	Off

Is the inspection result normal?

- YES >> INSPECTION END
NO >> Check the combination meter. Refer to [MWI-34. "CONSULT Function \(METER/M&A\)"](#).

Component Inspection

INFOID:000000012013706

1.CHECK PARKING BRAKE SWITCH

PARKING BRAKE SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

1. Turn the ignition switch OFF.
2. Disconnect parking brake switch harness connector.
3. Check the continuity between parking brake switch connector terminal.

Parking brake switch Terminal	—	Condition	Continuity
1	Ground	When the parking brake switch is operated.	Existed
		When the parking brake switch is not operated.	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the parking brake switch. Refer to [PB-7. "Removal and Installation"](#).

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

VDC OFF SWITCH

Description

INFOID:000000012013707

VDC OFF switch can deactivate (turn OFF) the VDC/TCS function by pressing the VDC OFF switch.

Diagnosis Procedure

INFOID:000000012013708

1. CHECK VDC OFF SWITCH CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector.
3. Disconnect VDC OFF switch harness connector.
4. Check the continuity between VDC OFF switch harness connector and ABS actuator and electric unit (control unit) harness connector.

ABS actuator and electric unit (control unit)		VDC OFF switch		Continuity
Connector	Terminal	Connector	Terminal	
E41	31	M19	1	Existed

5. Check the continuity between VDC OFF switch harness connector and ground.

VDC OFF switch		—	Continuity
Connector	Terminal		
M19	1	Ground	Not existed
	2		Existed

Is the inspection result normal?

- YES >> GO TO 2.
 NO >> Repair / replace harness, connector, or terminal.

2. CHECK VDC OFF SWITCH

Check the VDC OFF switch. Refer to [BRC-93, "Component Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.
 NO >> Replace the VDC OFF switch. Refer to [BRC-130, "Removal and Installation"](#).

3. CHECK CONNECTOR

1. Disconnect combination meter harness connector.
2. Check the connector and terminal for deformation, disconnection, looseness, etc.

Is the inspection result normal?

- YES >> GO TO 4.
 NO >> Repair / replace harness, connector, or terminal.

4. CHECK VDC OFF SWITCH SIGNAL

With CONSULT

Select "ABS", "DATA MONITOR" and "OFF SW" in order, and perform the VDC OFF switch inspection.

Condition	OFF SW (DATA MONITOR)
Press the VDC OFF switch when VDC OFF indicator lamp is OFF.	On
Press the VDC OFF switch when VDC OFF indicator lamp is ON.	Off

Is the inspection result normal?

- YES >> INSPECTION END

VDC OFF SWITCH

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

NO >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

Component Inspection

INFOID:0000000012013709

1. CHECK VDC OFF SWITCH

1. Turn the ignition switch OFF.
2. Disconnect VDC OFF switch harness connector.
3. Check the continuity between VDC OFF switch connector terminals.

VDC OFF switch Terminal	Condition	Continuity
1 - 2	When VDC OFF switch is hold pressed.	Existed
	When releasing VDC OFF switch.	Not existed

Is the inspection result normal?

YES >> INSPECTION END

NO >> Replace the VDC OFF switch. Refer to [BRC-130, "Removal and Installation"](#).

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

ABS WARNING LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

ABS WARNING LAMP

Description

INFOID:000000012013710

×: ON –: OFF

Condition	ABS warning lamp
Ignition switch OFF	–
For 3 seconds after turning ignition switch ON	×
3 seconds later after turning ignition switch ON	–
ABS function is malfunctioning.	×
EBD function is malfunctioning.	×

Component Function Check

INFOID:000000012013711

1. CHECK ABS WARNING LAMP OPERATION

Check that the lamp illuminates for approximately 3 seconds after the ignition switch is turned ON.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-94. "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000012013712

1. PERFORM SELF-DIAGNOSIS

 With CONSULT

Perform self-diagnosis for "ABS".

Is any DTC detected?

YES >> Check the DTC. Refer to [BRC-109. "DTC Index"](#).

NO >> GO TO 2.

2. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-33. "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126. "Removal and Installation"](#).

NO >> Repair or replace the combination meter. Refer to [MWI-103. "Removal and Installation"](#).

BRAKE WARNING LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

BRAKE WARNING LAMP

Description

INFOID:0000000012013713

×: ON –: OFF

Condition	Brake warning lamp (Note 1)
Ignition switch OFF	–
For 3 seconds after turning ignition switch ON	× (Note 2)
3 seconds later after turning ignition switch ON	× (Note 2)
EBD function is malfunctioning.	×

NOTE:

- 1: Brake warning lamp will turn on in case of parking brake operation (when switch is ON) or of brake fluid level switch operation (when brake fluid is insufficient).
- 2: After starting the engine, brake warning lamp is turned off.

Component Function Check

INFOID:0000000012013714

BRC

1. BRAKE WARNING LAMP OPERATION CHECK 1

Check that the lamp illuminates for approximately 3 seconds after the ignition switch is turned ON.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to diagnosis procedure. Refer to [BRC-95, "Diagnosis Procedure"](#).

2. BRAKE WARNING LAMP OPERATION CHECK 2

Check that the brake warning lamp in the combination meter turns ON/OFF correctly when operating the parking brake pedal.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check the parking brake switch. Refer to [BRC-90, "Component Inspection"](#).

Diagnosis Procedure

INFOID:0000000012013715

1. PERFORM SELF-DIAGNOSIS

 With CONSULT

Perform self-diagnosis for "ABS".

Is any DTC detected?

YES >> Check the DTC. Refer to [BRC-109, "DTC Index"](#).

NO >> GO TO 2.

2. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-33, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

NO >> Repair or replace the combination meter. Refer to [MWI-103, "Removal and Installation"](#).

VDC WARNING LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

VDC WARNING LAMP

Description

INFOID:000000012013716

×: ON △: Blink -: OFF

Condition	VDC warning lamp
Ignition switch OFF	-
For 3 seconds after turning ignition switch ON	×
3 seconds later after turning ignition switch ON	-
VDC/TCS is activated while driving	△
VDC/TCS function is malfunctioning.	×
ABS function is malfunctioning.	×
EBD function is malfunctioning.	×

Component Function Check

INFOID:000000012013717

1. CHECK VDC WARNING LAMP OPERATION

Check that the lamp illuminates for approximately 3 seconds after the ignition switch is turned ON.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Proceed to diagnosis procedure. Refer to [BRC-96, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000012013718

1. PERFORM SELF-DIAGNOSIS

 With CONSULT

Perform self-diagnosis for "ABS".

Is any DTC detected?

YES >> Check the DTC. Refer to [BRC-109, "DTC Index"](#).

NO >> GO TO 2.

2. CHECK COMBINATION METER

Check if the indication and operation of combination meter are normal. Refer to [MWI-33, "Diagnosis Description"](#).

Is the inspection result normal?

YES >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

NO >> Repair or replace the combination meter. Refer to [MWI-103, "Removal and Installation"](#).

VDC OFF INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

VDC OFF INDICATOR LAMP

Description

INFOID:0000000012013719

×: ON –: OFF

Condition	VDC OFF indicator lamp
Ignition switch OFF	–
For 3 seconds after turning ignition switch ON	×
3 seconds later after turning ignition switch ON	–
VDC OFF switch turned ON. (VDC function is OFF.)	×
VDC/TCS function is malfunctioning.	–

Component Function Check

INFOID:0000000012013720

1. VDC OFF INDICATOR LAMP OPERATION CHECK 1

Check that the lamp illuminates for approximately 3 seconds after the ignition switch is turned ON.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Proceed to diagnosis procedure. Refer to [BRC-97, "Diagnosis Procedure"](#).

2. VDC OFF INDICATOR LAMP OPERATION CHECK 2

Check that the VDC OFF indicator lamp in the combination meter turns ON/OFF correctly when operating the VDC OFF switch.

Is the inspection result normal?

YES >> INSPECTION END

NO >> Check the VDC OFF switch. Refer to [BRC-93, "Component Inspection"](#).

Diagnosis Procedure

INFOID:0000000012013721

1. CHECK ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT) POWER SUPPLY AND GROUND CIRCUIT

Perform diagnosis of ABS actuator and electric unit (control unit) power supply and ground circuit. Refer to [BRC-87, "Diagnosis Procedure"](#).

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair / replace harness, connector, or terminal.

2. CHECK VDC OFF INDICATOR LAMP SIGNAL (1)

 With CONSULT

1. Select "ABS", "DATA MONITOR" and "OFF LAMP" according to this order.

2. Turn the ignition switch OFF.

3. Check that data monitor displays "On" for approx. 1 second after ignition switch is turned ON, and then changes to "Off".

CAUTION:

Never start engine.

Is the inspection result normal?

YES >> GO TO 3.

NO >> Replace the ABS actuator and electric unit (control unit). Refer to [BRC-126, "Removal and Installation"](#).

3. CHECK VDC OFF INDICATOR LAMP SIGNAL (2)

 With CONSULT

1. Select "ABS", "DATA MONITOR" and "OFF LAMP" according to this order.

2. Check that data monitor displays "On" or "Off" each time when VDC OFF switch is operated.

Is the inspection result normal?

VDC OFF INDICATOR LAMP

< DTC/CIRCUIT DIAGNOSIS >

[VDC/TCS/ABS]

-
- YES >> Check the combination meter. Refer to [MWI-34, "CONSULT Function \(METER/M&A\)".](#)
NO >> Check the VDC OFF switch system. Refer to [BRC-92, "Diagnosis Procedure".](#)

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

ECU DIAGNOSIS INFORMATION

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Reference Value

INFOID:0000000011737058

VALUES ON THE DIAGNOSIS TOOL

CAUTION:

The display shows the control unit calculation data, so a normal value might be displayed even in the event the output circuit (harness) is open or short-circuited.

NOTE:

The following table includes information (items) inapplicable to this vehicle. For information (items) applicable to this vehicle, refer to CONSULT display items.

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
FR LH SENSOR	Wheel speed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ($\pm 10\%$ or less)
FR RH SENSOR	Wheel speed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ($\pm 1\%$ or less)
RR LH SENSOR	Wheel speed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ($\pm 10\%$ or less)
RR RH SENSOR	Wheel speed	Vehicle stopped	0 [km/h (MPH)]
		Vehicle running (Note 1)	Nearly matches the speedometer display ($\pm 10\%$ or less)
FR RH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR RH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR LH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
FR LH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
RR RH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR RH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR LH IN SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
RR LH OUT SOL	Operation status of each solenoid valve	Actuator (solenoid valve) is active ("ACTIVE TEST" with CONSULT)	On
		When the actuator (solenoid valve) is not active and actuator relay is active (ignition switch ON)	Off
STOP LAMP SW	Stop lamp switch signal status	When brake pedal is depressed	On
		When brake pedal is not depressed	Off
MOTOR RELAY	Motor and motor relay operation	When the motor relay and motor are operating	On
		When the motor relay and motor are not operating	Off
ACTUATOR RLY (Note 2)	Actuator relay operation	When the actuator relay is operating	On
		When the actuator relay is not operating	Off
ABS WARN LAMP	ABS warning lamp (Note 3)	When ABS warning lamp is ON	On
		When ABS warning lamp is OFF	Off
OFF LAMP	VDC OFF indicator lamp (Note 3)	When VDC OFF indicator lamp is ON	On
		When VDC OFF indicator lamp is OFF	Off
OFF SW	VDC OFF switch ON/OFF	VDC OFF switch ON (When VDC OFF indicator lamp is ON)	On
		VDC OFF switch OFF (When VDC OFF indicator lamp is OF)	Off
SLIP/VDC LAMP	VDC warning lamp (Note 3)	When VDC warning lamp is ON	On
		When VDC warning lamp is OFF	Off
BATTERY VOLT	Battery voltage supplied to the ABS actuator and electric unit (control unit)	Ignition switch ON	10 – 16 V
YAW RATE SEN	Yaw rate detected by yaw rate/side G sensor	Vehicle stopped	Approx. 0 d/s
		Turning right	Negative value
		Turning left	Positive value
ACCEL POS SIG	Throttle actuator opening/closing is displayed (linked with accelerator pedal)	Accelerator pedal not depressed (ignition switch is ON)	0 %
		Depress accelerator pedal (ignition switch is ON)	0 - 100 %

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
SIDE G-SENSOR	Transverse G detected by side G sensor	Vehicle stopped	Approx. 0 m/s ²
		Turning right	Negative value
		Turning left	Positive value
STR ANGLE SIG	Steering angle detected by steering angle sensor	Driving straight	±2.5°
		Turn 90° to right	Approx. +90°
		Turn 90° to left	Approx. -90°
PRESS SENSOR	Brake fluid pressure detected by pressure sensor	With ignition switch turned ON and brake pedal released	Approx. 0 bar
		With ignition switch turned ON and brake pedal depressed	-40 to 300 bar
EBD SIGNAL	EBD operation	EBD is active	On
		EBD is inactive	Off
ABS SIGNAL	ABS operation	ABS is active	On
		ABS is inactive	Off
TCS SIGNAL	TCS operation	TCS is active	On
		TCS is inactive	Off
VDC SIGNAL	VDC operation	VDC is active	On
		VDC is inactive	Off
EBD FAIL SIG	EBD fail-safe signal	In EBD fail-safe	On
		EBD is normal	Off
ABS FAIL SIG	ABS fail-safe signal	In ABS fail-safe	On
		ABS is normal	Off
TCS FAIL SIG	TCS fail-safe signal	In TCS fail-safe	On
		TCS is normal	Off
VDC FAIL SIG	VDC fail-safe signal	In VDC fail-safe	On
		VDC is normal	Off
CRANKING SIG	Crank operation	Crank is active	On
		Crank is inactive	Off
FLUID LEV SW	Brake fluid level switch signal status	When brake fluid level switch ON	On
		When brake fluid level switch OFF	Off
PARK BRAKE SW	Parking brake switch signal status	Parking brake switch is active	On
		Parking brake switch is inactive	Off
USV[FL-RR] (Note 2)	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" with CONSULT)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
USV[FR-RL] (Note 2)	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" with CONSULT)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Monitor item	Display content	Data monitor	
		Condition	Reference value in normal operation
HSV[FL-RR] (Note 2)	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" with CONSULT)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
HSV[FR-RL] (Note 2)	VDC switch-over valve	When actuator (switch-over valve) is active ("ACTIVE TEST" with CONSULT)	On
		When actuator (switch-over valve) is not active and actuator relay is active (ignition switch ON)	Off
V/R OUTPUT (Note 2)	Solenoid valve relay activated	When the solenoid valve relay is active (When ignition switch OFF)	On
		When the solenoid valve relay is not active (in the fail-safe mode)	Off
M/R OUTPUT	Actuator motor and motor relay activated	When the actuator motor and motor relay are active ("ACTIVE TEST" with CONSULT)	On
		When the actuator motor and motor relay are inactive	Off
ENGINE RPM	With engine running	With engine stopped	0 [tr/min (rpm)]
		Engine running	Almost in accordance with tachometer display

NOTE:

- 1: Confirm tire pressure is normal.
- 2: A brief moment of On/Off condition occurs every 20 seconds after ignition switch turned ON. This is not malfunction because it is an operation for checking.
- 3: On and off timing for warning lamp and indicator lamp.
 - ABS warning lamp: Refer to [BRC-94. "Description"](#).
 - Brake warning lamp: Refer to [BRC-95. "Description"](#).
 - VDC OFF indicator lamp: Refer to [BRC-97. "Description"](#).
 - VDC warning lamp: Refer to [BRC-96. "Description"](#).


ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

Wiring Diagram - BRAKE CONTROL SYSTEM -

INFOID:000000011737059

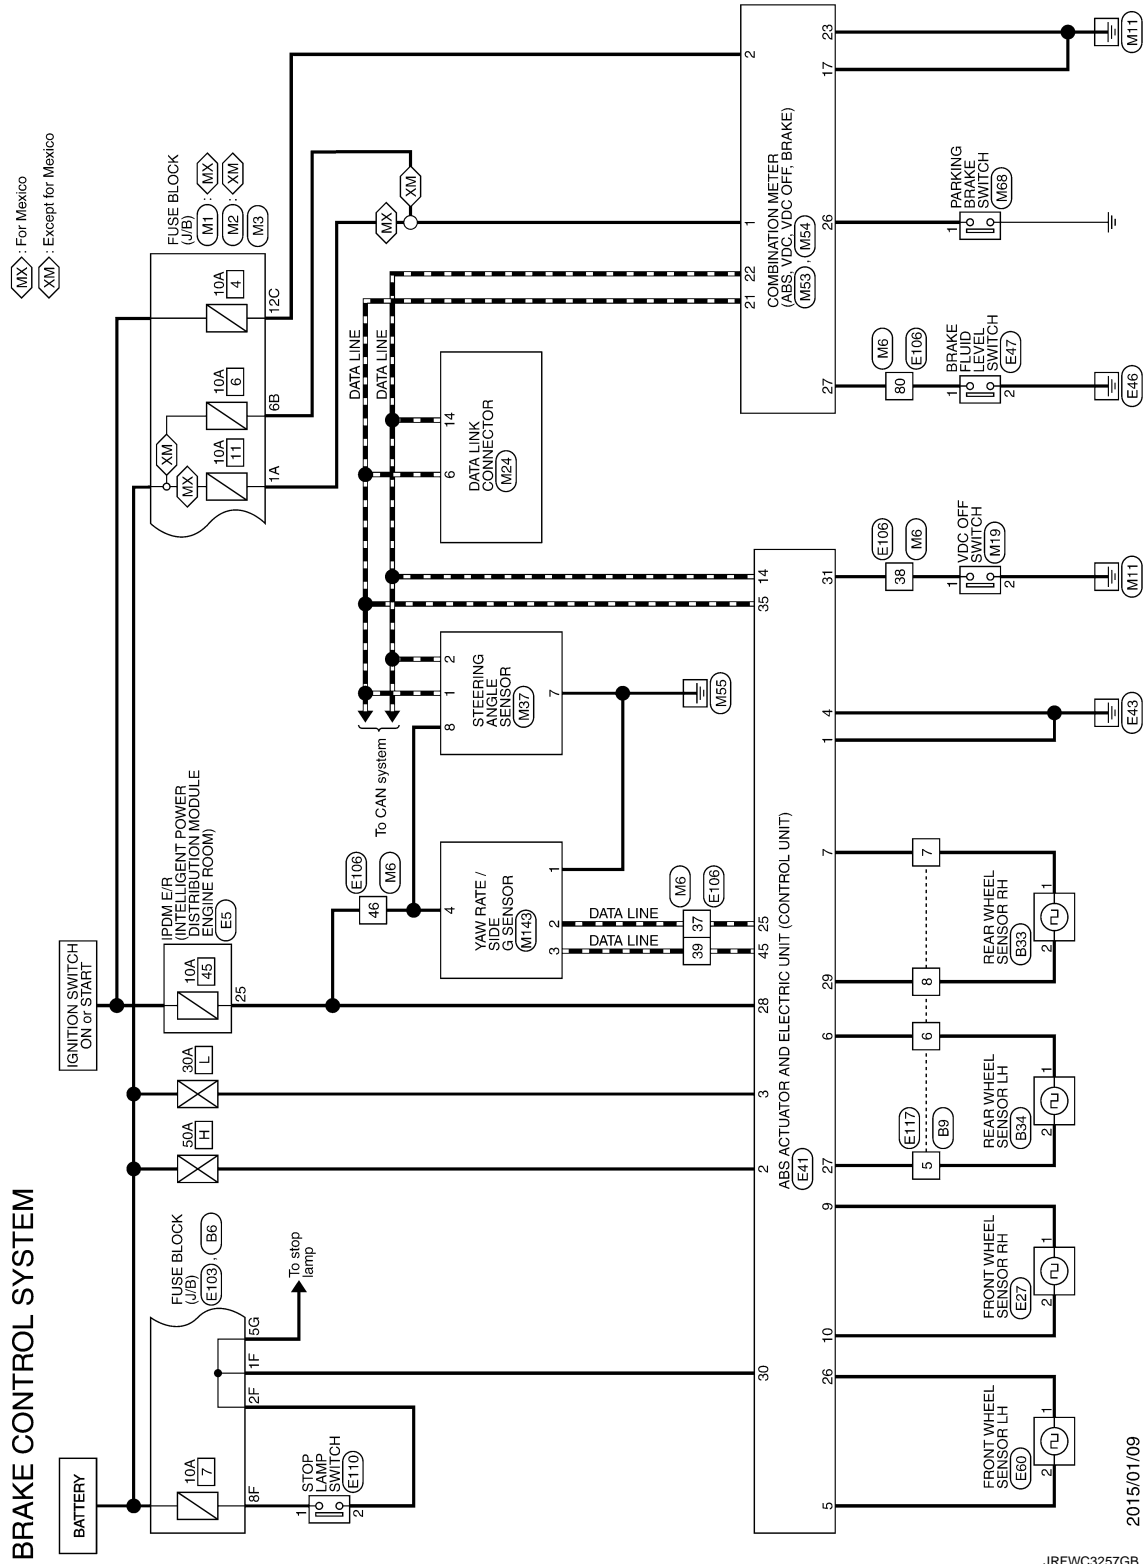

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

BRC

2015/01/09

JRFWC3257GB

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

BRAKE CONTROL SYSTEM

Connector No.	B6
Connector Name	P-USE BLOCK (1/9)
Connector Type	NS12FBR-CS



Terminal No.	Color Of Wire	Signal Name (Specification)
10G	P	- [Reader models]
10G	W	- [Coupe models]
11G	G	- [Reader models]
11G	W	- [Coupe models]
12G	Y	-
13G	LG	-

Connector No.	B9
Connector Name	WIRE TO WIRE
Connector Type	NS10FV-CS



Terminal No.	Color Of Wire	Signal Name (Specification)
1	P	-
2	R	- [Coupe models]
2	V	- [Reader models]
3	Y	-
4	G	-
5	GR	-
6	BG	-
7	BR	-
8	LG	-
9	R	-
10	G	-

Connector No.	B33
Connector Name	REAR WHEEL SENSOR RH
Connector Type	AAZ02FB1




Terminal No.	Color Of Wire	Signal Name (Specification)
1	BR	-
2	LG	-

Connector No.	B34
Connector Name	REAR WHEEL SENSOR LH
Connector Type	RA02FE



Terminal No.	Color Of Wire	Signal Name (Specification)
1	BG	-
2	GR	-

Connector No.	E5
Connector Name	POWER DISTRIBUTION MODULE (POWER SOURCE)
Connector Type	1H2DFW-CS12-MA1-1V




Terminal No.	Color Of Wire	Signal Name (Specification)
4	V	-
5	L	-
7	R	- [Coupe models]
7	V	- [Reader models]
12	BW	-
13	LG	-
15	LG	-
16	YG	-
21	G	-
27	Y	-
28	L	-
30	GR	-
31	G	-

Connector No.	E27
Connector Name	FRONT WHEEL SENSOR RH
Connector Type	AAZ02FB1



Terminal No.	Color Of Wire	Signal Name (Specification)
1	B	-
2	W	-

Connector No.	E41
Connector Name	ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)
Connector Type	BAA42FB-AH24-LH



Terminal No.	Color Of Wire	Signal Name (Specification)
1	B	GROUND
2	G	UBRR
3	R	UBRR
4	B	GROUND
5	Y	DS-FL
6	BS	DP-RL
7	BR	DP-RL
8	GR	DP-RR
10	W	DS-RR
14	P	CAN-L
25	Y	BUS-L
26	LG	DP-FL
27	GR	DS-RL
28	G	LZ
29	P	DS-RR
30	SB	BLS
31	R	VDC OFF SW
35	L	CAN-H
45	B	BUS-H

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

BRAKE CONTROL SYSTEM

Connector No.	E17
Connector Name	BRAKE FLUID LEVEL SWITCH
Connector Type	YV02FGY




Terminal No.	Color Of Wire	Signal Name (Specification)
1	W	-
2	B	-

Connector No.	E50
Connector Name	FRONT WHEEL SENSOR LH
Connector Type	FA30ZFB1




Terminal No.	Color Of Wire	Signal Name (Specification)
1	LG	-
2	Y	-

Connector No.	E103
Connector Name	FUSE BLOCK (I/II)
Connector Type	NS16FAV-CS



Terminal No.	Color Of Wire	Signal Name (Specification)
11F	W	-
1F	SB	-
2F	W	-
4F	G	-
6F	BG	-
8F	L	-
9F	R	-
3F	V	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	T1880FW-CS16-TM4



Terminal No.	Color Of Wire	Signal Name (Specification)
1	Y	-
3	L	-
4	L	-
7	B	-
8	P	-
9	B	-
11	V	-
12	R	-
13	L	-
14	GR	-
15	P	-
16	W	-


17	SB	-
20	LG	-
21	BR	- [Coupe models] - [Roadster models]
21	G	-
31	L	-
32	Y	-
36	V	-
37	Y	-
38	R	-
39	B	-
40	W	-
41	LG	-
42	SB	-
43	G	-
44	GR	- [Except for roadster models with W/T] - [Roadster models with W/T]
44	R	-
45	BG	-
46	W	-
47	P	-
58	SHIELD	-
59	L	-
70	L	-
80	W	-
81	P	-
82	G	-
83	V	-
84	L	-
85	BG	-
86	LG	-
87	R	-
89	P	-
91	W	-
92	L	-
93	G	-
94	Y	-
96	Y	-
98	GR	-
99	LG	-
100	BG	-

Connector No.	E110
Connector Name	STOP LAMP SWITCH
Connector Type	YV04FW-LC



Terminal No.	Color Of Wire	Signal Name (Specification)
1	L	-
2	W	-
3	G	-
4	P	-

Connector No.	E117
Connector Name	WIRE TO WIRE
Connector Type	NS10MHC-CS



Terminal No.	Color Of Wire	Signal Name (Specification)
1	Y	-
2	R	-
3	Y	-
4	G	-
5	GR	-
6	BG	-
7	BR	-
8	P	-
9	R	-
10	R	-

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P


ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]


BRAKE CONTROL SYSTEM

Connector No.	M1
Connector Name	FUSE BLOCK (I/B)
Connector Type	NS06FW-M2




Terminal No.	Color Of Wire	Signal Name (Specification)
1A	V	-
2A	G	-
3A	L	-
4A	P	-
5A	L	-
6A	L	-
7A	BR	-
8A	L	-

Connector No.	M2
Connector Name	FUSE BLOCK (I/B)
Connector Type	NS10FW-CS



Terminal No.	Color Of Wire	Signal Name (Specification)
1B	P	-
2B	G	-
3B	O	-
4B	Y	-
5B	R	-
6B	SB	-

Connector No.	M3
Connector Name	FUSE BLOCK (I/B)
Connector Type	NS12FW-CS



Terminal No.	Color Of Wire	Signal Name (Specification)
10C	L	-
11C	IG	-
12C	D	-
9C	R	-
8C	B	-
7C	D	-
6C	R	-
5C	R	-

Connector No.	M6
Connector Name	WIRE TO WIRE
Connector Type	TH80MW-CS1E-TM4



Terminal No.	Color Of Wire	Signal Name (Specification)
1	Y	-
2	L	-
3	L	-
4	L	-
5	B	-
6	P	-
7	B	-
8	P	-
9	B	-
10	GR	-
11	GR	-
12	R	-
13	L	-
14	G	-
15	W	-
16	W	-
17	BR	-

20	GR	-
21	R	-
31	BR	-
32	V	-
36	SB	-
37	Y	-
38	LG	-
39	SB	-
40	W	-
41	LG	-
42	R	-
43	G	-
44	G	- [With A/T]
44	R	- [With M/T]
45	O	-
46	G	-
47	BR	-
58	SHIELD	-
59	L	-
70	R	-
80	LG	-
81	W	-
82	V	-
83	V	-
84	L	-
85	BR	-
86	Y	-
87	G	-
89	P	-
91	W	-
92	P	-
93	P	-
94	Y	-
96	P	-
98	O	-
99	W	-
100	R	-

Connector No.	M19
Connector Name	VDC OFF SWITCH
Connector Type	TR04FW



Terminal No.	Color Of Wire	Signal Name (Specification)
1	IG	-
2	B	-
3	R	-
4	W	-

Connector No.	M24
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW



Terminal No.	Color Of Wire	Signal Name (Specification)
3	Y	- [Coupe models]
4	B	- [Roadster models]
5	B	-
6	L	-
7	Y	-
8	G	-
11	LG	- [Roadster models]
11	Y	- [Coupe models]
14	P	-
16	Y	-

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P


BRAKE CONTROL SYSTEM

Connector No.	M37
Connector Name	STEERING ANGLE SENSOR
Connector Type	TH08FW-NH



Terminal No.	Color Of Wire	Signal Name (Specification)
1	L	CAN-H
2	P	CAN-L
7	B	GROUND
8	G	IGN


Connector No.	M53
Connector Name	COMBINATION METER
Connector Type	TH24FW-NH



Terminal No.	Color Of Wire	Signal Name (Specification)
1	V	BATTERY POWER SUPPLY
2	O	IGNITION SIGNAL
3	L	VEHICLE SPEED SIGNAL (2-PULSE)
4	V	VEHICLE SPEED SIGNAL (8-PULSE) [For Mexico]
5	B	VEHICLE SPEED SIGNAL (8-PULSE) [Except for Mexico]
6	R	ILLUMINATION CONTROL SIGNAL
9	BR	ROOF STATUS SIGNAL
10	L	COMMUNICATION SIGNAL (METER-TRIPLE METER)
12	G	COMMUNICATION SIGNAL (TRIPLE METER-METER)
15	L	S-MODE SWITCH SIGNAL
16	L	ACC POWER SUPPLY
17	R	AIR BAG SIGNAL
18	B	GROUND
19	V	AMBIENT SENSOR SIGNAL
20	GR	ACC-AIR-UID AMP CONNECTION RECONDITION SIGNAL AMBIENT SENSOR GROUND

Terminal No.	21	L	CAN-H
	22	P	CAN-L
	23	B	GROUND
	24	Y	FUEL LEVEL SENSOR GROUND

Connector No.	M54
Connector Name	COMBINATION METER
Connector Type	TH18FW-NH



Terminal No.	Color Of Wire	Signal Name (Specification)
25	W	ALTERNATOR SIGNAL
26	O	PARKING BRAKE SWITCH SIGNAL
27	W	BRAKE LOCK SWITCH SIGNAL
28	V	SECURITY SIGNAL
29	GR	WASH/WIPER LEVEL SWITCH SIGNAL
32	G	PADDLE SHIFTER DOWN SIGNAL
33	O	PADDLE SHIFTER UP SIGNAL
34	BR	FUEL LEVEL SENSOR SIGNAL
35	L	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
36	L	PASSENGER SEAT BELT WARNING SIGNAL [For Mexico]
36	P	PASSENGER SEAT BELT WARNING SIGNAL [Except for Mexico]
37	G	NON-MANUAL MODE SIGNAL
38	V	MANUAL MODE SHIFT DOWN SIGNAL
39	L	MANUAL MODE SHIFT UP SIGNAL
40	W	MANUAL MODE SIGNAL

Connector No.	M68
Connector Name	PARKING BRAKE SWITCH
Connector Type	P01FB-A



Terminal No.	Color Of Wire	Signal Name (Specification)
1	O	-

Connector No.	M123
Connector Name	YAW RATE / SIDE G SENSOR
Connector Type	A4204EP-S



Terminal No.	Color Of Wire	Signal Name (Specification)
1	B	-
2	Y	-
3	SB	-
4	G	-

Fail-Safe

ABS, EBD SYSTEM

If ABS malfunction electrically, ABS warning lamp and VDC warning lamp will turn on. If EBD malfunction electrically, brake warning lamp, ABS warning lamp and VDC warning lamp will turn on. Simultaneously, the VDC, TCS and ABS become one of the following conditions of the fail-safe function.

JRFWC3261GB

INFOID:000000011737060

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

- For malfunction of ABS, only the EBD is activated and the condition of vehicle is the same condition of vehicles without TCS and ABS system.

NOTE:

ABS self-diagnosis sound may be heard. That is a normal condition because a self-diagnosis for “Ignition switch ON” and “The first starting” are being performed.

- For malfunction of EBD, EBD and ABS become inoperative, and the condition of vehicle is the same as the condition of vehicles without TCS/ABS, EBD system.

VDC, TCS

If VDC, TCS and ABS system malfunction electrically, VDC warning lamp are turned on, and the condition of vehicle is the same as the condition of vehicles without VDC and TCS control.

CAUTION:

If the Fail-Safe function is activated, then perform self-diagnosis for “ABS” with CONSULT.

DTC Inspection Priority Chart

INFOID:000000011737061

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	Detected items (DTC)
1	<ul style="list-style-type: none"> • U1000 CAN COMM CIRCUIT • U1002 SYSTEM COMM (CAN)
2	<ul style="list-style-type: none"> • C1110 CONTROLLER FAILURE • C1153 EMERGENCY BRAKE • C1170 VARIANT CORDING
3	<ul style="list-style-type: none"> • C1130 ENGINE SIGNAL 1 • C1144 ST ANG SEN SIGNAL
4	<ul style="list-style-type: none"> • C1109 BATTERY VOLTAGE [ABNORMAL] • C1111 PUMP MOTOR • C1140 ACTUATOR RELAY
5	<ul style="list-style-type: none"> • C1101 RR RH SENSOR-1 • C1102 RR LH SENSOR-1 • C1103 FR RH SENSOR-1 • C1104 FR LH SENSOR-1 • C1105 RR RH SENSOR-2 • C1106 RR LH SENSOR-2 • C1107 FR RH SENSOR-2 • C1108 FR LH SENSOR-2 • C1115 ABS SENSOR [ABNORMAL SIGNAL] • C1116 STOP LAMP SW • C1120 FR LH IN ABS SOL • C1121 FR LH OUT ABS SOL • C1122 FR RH IN ABS SOL • C1123 FR RH OUT ABS SOL • C1124 RR LH IN ABS SOL • C1125 RR LH OUT ABS SOL • C1126 RR RH IN ABS SOL • C1127 RR RH OUT ABS SOL • C1142 PRESS SEN CIRCUIT • C1143 ST ANG SEN CIRCUIT • C1145 YAW RATE SENSOR • C1146 SIDE G-SEN CIRCUIT • C1147 USV LINE [FL-RR] • C1148 USV LINE [FR-RL] • C1149 HSV LINE [FL-RR] • C1150 HSV LINE [FR-RL]
6	<ul style="list-style-type: none"> • C1155 BR FLUID LEVEL LOW

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< ECU DIAGNOSIS INFORMATION >

[VDC/TCS/ABS]

DTC Index

INFOID:000000011737062

DTC	Items (CONSULT screen terms)	Reference	
C1101	RR RH SENSOR-1	BRC-26, "DTC Logic"	A
C1102	RR LH SENSOR-1		B
C1103	FR RH SENSOR-1		C
C1104	FR LH SENSOR-1		
C1105	RR RH SENSOR-2	BRC-31, "DTC Logic"	D
C1106	RR LH SENSOR-2		
C1107	FR RH SENSOR-2		
C1108	FR LH SENSOR-2		
C1109	BATTERY VOLTAGE [ABNORMAL]	BRC-38, "DTC Logic"	E
C1110	CONTROLLER FAILURE	BRC-40, "DTC Logic"	
C1111	PUMP MOTOR	BRC-42, "DTC Logic"	BRC
C1115	ABS SENSOR [ABNORMAL SIGNAL]	BRC-45, "DTC Logic"	
C1116	STOP LAMP SW	BRC-52, "DTC Logic"	
C1120	FR LH IN ABS SOL	BRC-57, "DTC Logic"	G
C1121	FR LH OUT ABS SOL	BRC-59, "DTC Logic"	
C1122	FR RH IN ABS SOL	BRC-57, "DTC Logic"	H
C1123	FR RH OUT ABS SOL	BRC-59, "DTC Logic"	
C1124	RR LH IN ABS SOL	BRC-57, "DTC Logic"	I
C1125	RR LH OUT ABS SOL	BRC-59, "DTC Logic"	
C1126	RR RH IN ABS SOL	BRC-57, "DTC Logic"	J
C1127	RR RH OUT ABS SOL	BRC-59, "DTC Logic"	
C1130	ENGINE SIGNAL 1	BRC-61, "DTC Logic"	K
C1140	ACTUATOR RELAY	BRC-63, "DTC Logic"	
C1142	PRESS SEN CIRCUIT	BRC-65, "DTC Logic"	L
C1143	ST ANG SEN CIRCUIT	BRC-68, "DTC Logic"	
C1144	ST ANG SEN SIGNAL	BRC-72, "DTC Logic"	M
C1145	YAW RATE SENSOR	BRC-74, "DTC Logic"	N
C1146	SIDE G-SEN CIRCUIT		
C1147	USV LINE [FL-RR]	BRC-77, "DTC Logic"	O
C1148	USV LINE [FR-RL]		
C1149	HSV LINE [FL-RR]		
C1150	HSV LINE [FR-RL]		
C1153	EMERGENCY BRAKE	BRC-40, "DTC Logic"	P
C1155	BR FLUID LEVEL LOW	BRC-79, "DTC Logic"	
C1170	VARIANT CORDING	BRC-83, "DTC Logic"	
U1000	CAN COMM CIRCUIT	BRC-84, "DTC Logic"	
U1002	SYSTEM COMM (CAN)	BRC-85, "DTC Logic"	

SYMPTOM DIAGNOSIS

EXCESSIVE ABS FUNCTION OPERATION FREQUENCY

Diagnosis Procedure

INFOID:000000011737063

1. CHECK START

Check the front and rear brake force distribution using a brake tester. Refer to [BR-67, "General Specifications"](#).

Is the inspection result normal?

- YES >> GO TO 2.
- NO >> Check the brake system.

2. CHECK FRONT AND REAR AXLE

Make sure that there is no excessive play in the front and rear axles.

- Front: Refer to [FAX-6, "Inspection"](#).
- Rear: Refer to [RAX-5, "Inspection"](#).

Is the inspection result normal?

- YES >> GO TO 3.
- NO >> Repair or replace error-detected parts.

3. CHECK WHEEL SENSOR AND SENSOR ROTOR

Check the following.

- Wheel sensor installation for damage.
- Sensor rotor installation for damage.
- Wheel sensor connector connection.
- Wheel sensor harness inspection.

Is the inspection result normal?

- YES >> GO TO 4.
- NO >> • Replace wheel sensor or sensor rotor.
 - Front wheel sensor: Refer to [BRC-123, "FRONT WHEEL SENSOR : Exploded View"](#).
 - Rear wheel sensor: Refer to [BRC-124, "REAR WHEEL SENSOR : Exploded View"](#).
 - Front sensor rotor: Refer to [BRC-125, "FRONT SENSOR ROTOR : Exploded View"](#).
 - Rear sensor rotor: Refer to [BRC-125, "REAR SENSOR ROTOR : Exploded View"](#).

4. CHECK ABS WARNING LAMP DISPLAY

Make sure that the ABS warning lamp is turned off after the ignition switch is turned ON or when driving.

Is the ABS warning lamp illuminated?

- YES >> Perform self-diagnosis for "ABS" with CONSULT.
- NO >> Normal

UNEXPECTED PEDAL REACTION

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

UNEXPECTED PEDAL REACTION

Diagnosis Procedure

INFOID:000000011737064

1.CHECK BRAKE PEDAL STROKE

Check the brake pedal stroke. Refer to [BR-9, "Inspection and Adjustment"](#).

Is the stroke too large?

- YES >>
- Bleed air from brake tube and hose. Refer to [BR-13, "Bleeding Brake System"](#).
 - Check the brake pedal, brake booster, and master cylinder for mount play, looseness, brake system fluid leakage, etc.
 - Brake fluid: Refer to [BR-12, "Inspection"](#).
 - Brake pedal: Refer to [BR-9, "Inspection and Adjustment"](#).
 - Brake master cylinder: Refer to [BR-14, "Inspection"](#).
 - Brake booster: Refer to [BR-15, "Inspection"](#).
 - Front disc brake: Refer to [BR-48, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Inspection"](#) (2 piston type), [BR-52, "BRAKE CALIPER ASSEMBLY \(4 PISTON TYPE\) : Inspection"](#) (4 piston type).
 - Rear disc brake: Refer to [BR-62, "BRAKE CALIPER ASSEMBLY \(1 PISTON TYPE\) : Inspection"](#) (1 piston type), [BR-66, "BRAKE CALIPER ASSEMBLY \(2 PISTON TYPE\) : Inspection"](#) (2 piston type).

NO >> GO TO 2.

2.CHECK FUNCTION

Disconnect ABS actuator and electric unit (control unit) harness connector to deactivate ABS. Check if braking force is normal in this condition. Connect harness connector after inspection.

Is the inspection result normal?

- YES >> Normal
NO >> Check brake system.

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

THE BRAKING DISTANCE IS LONG

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

THE BRAKING DISTANCE IS LONG

Diagnosis Procedure

INFOID:000000011737065

CAUTION:

The stopping distance on slippery road surfaces might be longer when the ABS is operating than when the ABS is not operating.

1. CHECK FUNCTION

1. Turn the ignition switch OFF
2. Disconnect ABS actuator and electric unit (control unit) harness connector to deactivate ABS. In this condition, check the stopping distance. After inspection, connect harness connector.

Is the inspection result normal?

- YES >> Normal
NO >> Check brake system.

ABS FUNCTION DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

ABS FUNCTION DOES NOT OPERATE

Diagnosis Procedure

INFOID:000000011737066

CAUTION:

ABS does not operate when speed is 10 km/h (6 MPH) or lower.

1.CHECK ABS WARNING LAMP DISPLAY

Make sure that the ABS warning lamp turns OFF after ignition switch is turned ON or when driving.

Is the inspection result normal?

YES >> Normal

NO >> Perform self-diagnosis for "ABS" with CONSULT.

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

PEDAL VIBRATION OR ABS OPERATION SOUND OCCURS

Diagnosis Procedure

INFOID:000000011737067

CAUTION:

Under the following conditions, ABS is activated and vibration is felt when brake pedal is lightly depressed (just place a foot on it). However, this is normal.

- When shifting gears
- When driving on slippery road
- During cornering at high speed
- When passing over bumps or grooves [at approximately 50 mm (1.97 in) or more]
- When pulling away just after starting engine [at approximately 10 km/h (6 MPH) or higher]

1. SYMPTOM CHECK 1

Check that there are pedal vibrations when the engine is started.

Do vibrations occur?

YES >> GO TO 2.

NO >> Inspect the brake pedal.

2. SYMPTOM CHECK 2

Check that there are ABS operation noises when the engine is started.

Do the operation noises occur?

YES >> GO TO 3.

NO >> Perform self-diagnosis for "ABS" with CONSULT.

3. SYMPTOM CHECK 3

Check symptoms when electrical component (headlamps, etc.) switches are operated.

Do symptoms occur?

YES >> Check if there is a radio, antenna, antenna lead wire, or wiring close to the control unit. If there is, move it farther away.

NO >> Normal

VEHICLE JERKS DURING VDC/TCS/ABS CONTROL

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

VEHICLE JERKS DURING VDC/TCS/ABS CONTROL

Diagnosis Procedure

INFOID:000000011737068

1.SYMPTOM CHECK

Check if the vehicle jerks during VDC/TCS/ABS control.

Is the inspection result normal?

- YES >> Normal.
- NO >> GO TO 2.

2.CHECK SELF-DIAGNOSIS RESULTS

Perform self-diagnosis for "ABS" with CONSULT.

Are self-diagnosis results indicated?

- YES >> Check the corresponding items, make repairs, and perform self-diagnosis for "ABS" with CONSULT.
- NO >> GO TO 3.

3.CHECK CONNECTOR

1. Turn the ignition switch OFF.
2. Disconnect ABS actuator and electric unit (control unit) harness connector, and check terminal for deformation, disconnection, looseness, etc.
3. Securely connect harness connectors and perform self-diagnosis for "ABS" with CONSULT.

Are self-diagnosis results indicated?

- YES >> If poor contact, damage, open or short circuit of harness connector terminal is found, repair or replace.
- NO >> GO TO 4.

4.CHECK ECM AND TCM SELF-DIAGNOSIS RESULTS

Perform self-diagnosis for "ENGINE" and "TRANSMISSION" with CONSULT.

Are self-diagnosis results indicated?

- YES >> Check the corresponding items.
- NO >> Replace ABS actuator and electric unit (control unit). Refer to [BRC-126, "Exploded View"](#).

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

[VDC/TCS/ABS]

NORMAL OPERATING CONDITION

Description

INFOID:0000000011737069

Symptom	Result
Slight vibrations are felt on the brake pedal and the operation noises occur, when VDC, TCS or ABS is activated.	This is a normal condition due to the VDC, TCS or ABS activation.
Stopping distance is longer than that of vehicles without ABS when the vehicle drives on rough, gravel, or snow-covered (fresh, deep snow) roads.	
The brake pedal moves and generates noises, when TCS or VDC is activated due to rapid acceleration or sharp turn.	
The brake pedal vibrates and motor operation noises occur from the engine room, after the engine starts and just after the vehicle starts.	This is a normal, and it is caused by the ABS operation check.
Depending on the road conditions, the driver may experience a sluggish feel.	This is normal, because TCS places the highest priority on the optimum traction (stability).
TCS may activate momentarily if wheel speed changes when driving over location where friction coefficient varies, when downshifting, or when fully depressing accelerator pedal.	
The ABS warning lamp and VDC warning lamp may turn ON when the vehicle is subject to strong shaking or large vibration, such as when the vehicle is rotating on a turntable or located on a ship while the engine is running.	In this case, restart the engine on a normal road. If the normal condition is restored, there is no malfunction. At that time, erase the self-diagnosis memory.
VDC may not operate normally or the ABS warning lamp and VDC warning lamp may illuminate, when running on a special road that is extremely slanted (e.g. bank in a circuit course).	
A malfunction may occur in the yaw rate/side G sensor system, when the vehicle turns sharply, such as during a spin turn, axle turn, or drift driving, while the VDC function is off (VDC warning lamp illuminated).	
The vehicle speed will not increase even though the accelerator pedal is depressed, when inspecting the speedometer on a 2-wheel chassis dynamometer.	Normal (Deactivate the VDC/TCS function before performing an inspection on a chassis dynamometer.)
VDC warning lamp may simultaneously turn on when low tire pressure warning lamp turns on.	This is not a VDC system error but results from characteristic change of tire.

PRECAUTION

PRECAUTIONS
FOR USA AND CANADA

FOR USA AND CANADA : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011737070

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

FOR USA AND CANADA : Precaution for Battery Service


INFOID:000000011737071

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

FOR USA AND CANADA : Precaution for Procedure without Cowl Top Cover

INFOID:000000011737072

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

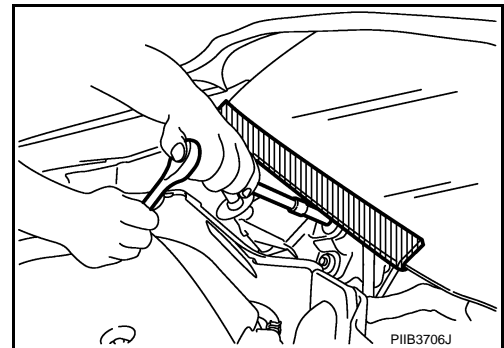

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

PRECAUTIONS

< PRECAUTION >

[VDC/TCS/ABS]


FOR USA AND CANADA : Precaution for Brake System

INFOID:000000011737073

WARNING:

Since dust covering the front and rear brakes has an affect on human body, the dust must be removed with a dust collector. Never splatter the dust with an air blow gun.

- Brake fluid use refer to [MA-16, "FOR NORTH AMERICA : Fluids and Lubricants"](#).
- Never reuse drained brake fluid.
- Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.
- Never use mineral oils such as gasoline or light oil. They may damage rubber parts and cause improper operation.
- Always loosen the brake tube flare nut with a flare nut wrench.
- Tighten the brake tube flare nut to the specified torque with a crow-foot (A) and torque wrench (B).
- Always conform the specified tightening torque when installing the brake pipes.
- Brake system is an important safety part. If a brake fluid leak is detected, always disassemble the affected part. If a malfunction is detected, replace part with a new one.
- Turn the ignition switch OFF and disconnect the ABS actuator and electric unit (control unit) harness connector or the battery negative terminal before performing the work.

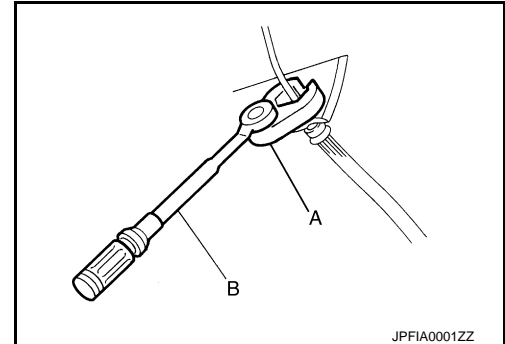

FOR USA AND CANADA : Precaution for Brake Control

INFOID:000000011737074

- When starting engine or when starting vehicle just after starting engine, brake pedal may vibrate or motor operating noise may be heard from engine compartment. This is normal condition.
- When an error is indicated by ABS or another warning lamp, collect all necessary information from customer (what symptoms are present under what conditions) and check for estimate causes before starting diagnostic servicing. Besides electrical system inspection, check brake booster operation, brake fluid level, and oil leaks.
- If tire size and type are used in an improper combination, or brake pads are not Genuine NISSAN parts, stopping distance or steering stability may deteriorate.
- ABS might be out of order or malfunctions by putting a radio (wiring inclusive), an antenna and a lead-in wire near the control unit.
- VDC system may not operate normally or a VDC OFF indicator lamp or VDC warning lamp may light.
- When replacing the following parts with parts other than genuine parts or making modifications: Suspension related parts (shock absorber, spring, bushing, etc.), tires, wheels (other than specified sizes), brake-related parts (pad, rotor, caliper, etc.), engine-related parts (muffler, ECM, etc.) and body reinforcement-related parts (roll bar, tower bar, etc.).
- When driving with worn or deteriorated suspension, tires and brake-related parts.

FOR USA AND CANADA : Precautions for Harness Repair


INFOID:000000011737075

COMMUNICATION LINE

- Solder the repaired area and wrap tape around the soldered area.

NOTE:

A fray of twisted lines must be within 110 mm (4.33 in).

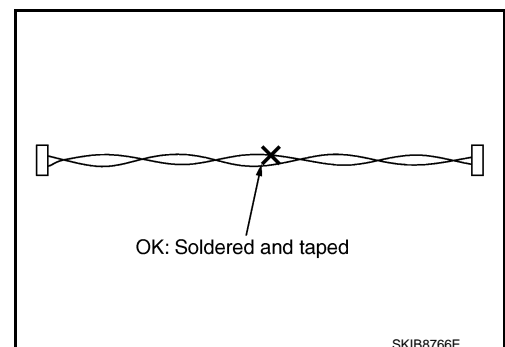


PRECAUTIONS

< PRECAUTION >

[VDC/TCS/ABS]

- Bypass connection is never allowed at the repaired area.
NOTE:
Bypass connection may cause communication error as spliced wires that are separate from the main line or twisted lines lose noise immunity.
- Replace the applicable harness as an assembly if error is detected on the shield lines of communication line.

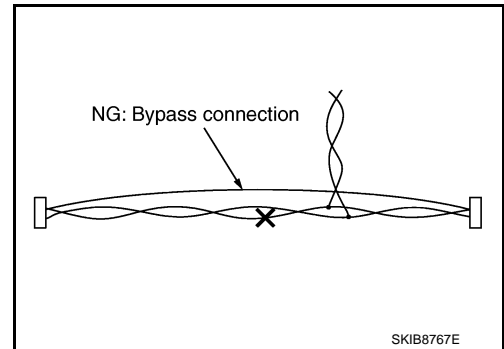

FOR USA AND CANADA : Precautions for Removing Battery Terminal

INFOID:000000011737076

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

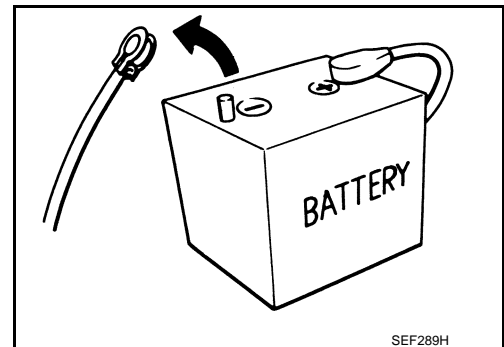

FOR MEXICO

FOR MEXICO : Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000011737077

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

A
B
C
D
E
BRC
G
H
I
J
K
L
M
N
O
P

PRECAUTIONS

< PRECAUTION >

[VDC/TCS/ABS]

FOR MEXICO : Precaution for Battery Service


INFOID:000000011737078

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

FOR MEXICO : Precaution for Procedure without Cowl Top Cover

INFOID:000000011737079

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc to prevent damage to windshield.

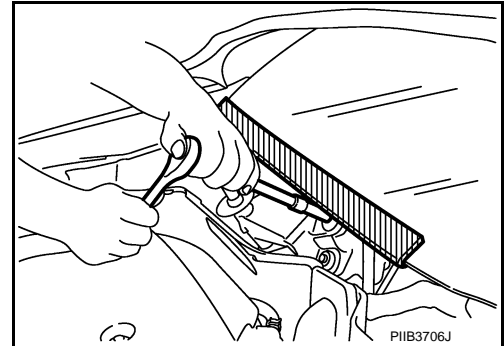


FOR MEXICO : Precaution for Brake System

INFOID:000000011737080

WARNING:

Since dust covering the front and rear brakes has an affect on human body, the dust must be removed with a dust collector. Never splatter the dust with an air blow gun.

- Brake fluid use refer to [MA-18. "FOR MEXICO : Fluids and Lubricants"](#).
- Never reuse drained brake fluid.
- Never spill or splash brake fluid on painted surfaces. Brake fluid may seriously damage paint. Wipe it off immediately and wash with water if it gets on a painted surface.
- Never use mineral oils such as gasoline or light oil. They may damage rubber parts and cause improper operation.
- Always loosen the brake tube flare nut with a flare nut wrench.
- Tighten the brake tube flare nut to the specified torque with a crow-foot (A) and torque wrench (B).
- Always conform the specified tightening torque when installing the brake pipes.
- Brake system is an important safety part. If a brake fluid leak is detected, always disassemble the affected part. If a malfunction is detected, replace part with a new one.
- Turn the ignition switch OFF and disconnect the ABS actuator and electric unit (control unit) harness connector or the battery negative terminal before performing the work.

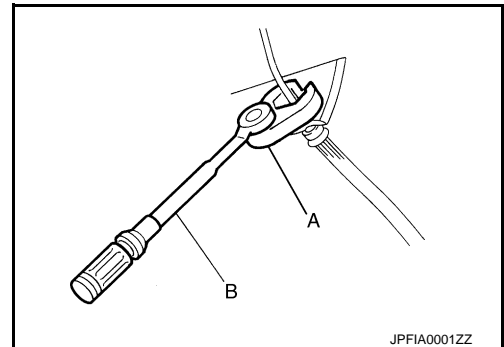

FOR MEXICO : Precaution for Brake Control

INFOID:000000011737081

- When starting engine or when starting vehicle just after starting engine, brake pedal may vibrate or motor operating noise may be heard from engine compartment. This is normal condition.
- When an error is indicated by ABS or another warning lamp, collect all necessary information from customer (what symptoms are present under what conditions) and check for estimate causes before starting diagnostic servicing. Besides electrical system inspection, check brake booster operation, brake fluid level, and oil leaks.
- If tire size and type are used in an improper combination, or brake pads are not Genuine NISSAN parts, stopping distance or steering stability may deteriorate.
- ABS might be out of order or malfunctions by putting a radio (wiring inclusive), an antenna and a lead-in wire near the control unit.
- VDC system may not operate normally or a VDC OFF indicator lamp or VDC warning lamp may light.
- When replacing the following parts with parts other than genuine parts or making modifications: Suspension related parts (shock absorber, spring, bushing, etc.), tires, wheels (other than specified sizes), brake-related

PRECAUTIONS

[VDC/TCS/ABS]

< PRECAUTION >

- parts (pad, rotor, caliper, etc.), engine-related parts (muffler, ECM, etc.) and body reinforcement-related parts (roll bar, tower bar, etc.).
- When driving with worn or deteriorated suspension, tires and brake-related parts.

FOR MEXICO : Precautions for Harness Repair


INFOID:000000011737082

COMMUNICATION LINE

- Solder the repaired area and wrap tape around the soldered area.

NOTE:

A fray of twisted lines must be within 110 mm (4.33 in).

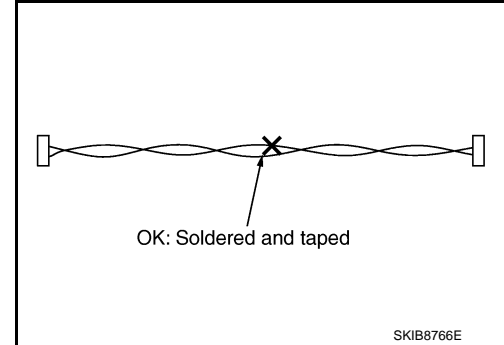


- Bypass connection is never allowed at the repaired area.

NOTE:

Bypass connection may cause communication error as spliced wires that are separate from the main line or twisted lines lose noise immunity.

- Replace the applicable harness as an assembly if error is detected on the shield lines of communication line.

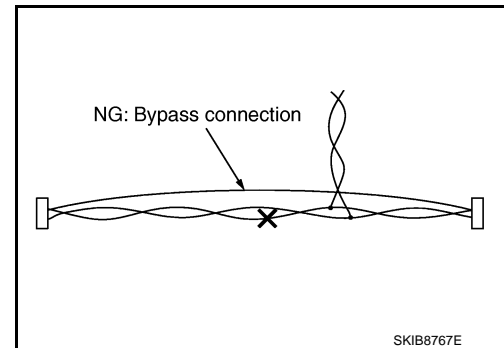

FOR MEXICO : Precautions for Removing Battery Terminal

INFOID:000000011737083

- When removing the 12V battery terminal, turn OFF the ignition switch and wait at least 30 seconds.

NOTE:

ECU may be active for several tens of seconds after the ignition switch is turned OFF. If the battery terminal is removed before ECU stops, then a DTC detection error or ECU data corruption may occur.

- For vehicles with the 2-batteries, be sure to connect the main battery and the sub battery before turning ON the ignition switch.


NOTE:

If the ignition switch is turned ON with any one of the terminals of main battery and sub battery disconnected, then DTC may be detected.

- After installing the 12V battery, always check "Self Diagnosis Result" of all ECUs and erase DTC.

NOTE:

The removal of 12V battery may cause a DTC detection error.

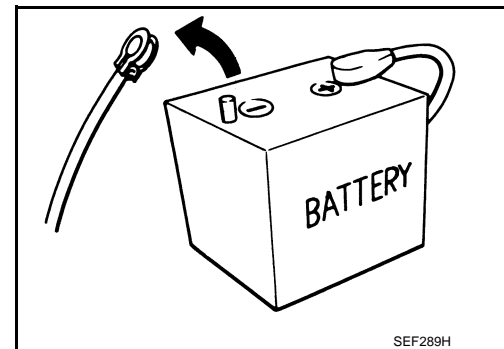

< PREPARATION >





PREPARATION

PREPARATION

Special Service Tool

INFOID:000000011737084

The actual shapes of the tools may differ from those illustrated here.

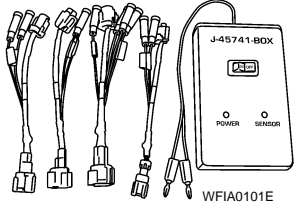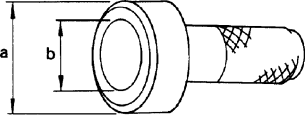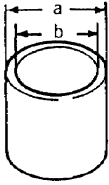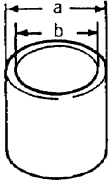Tool number (TechMate No.) Tool name	Description
KV991J0080 (J-45741-A) ABS active wheel sensor tester	 Checking operation of wheel sensors
ST30720000 (J-25405) Drift a: 77 mm (3.03 in) dia. b: 55.5 mm (2.185 in) dia.	 ZZA0701D
ST27863000 (—) Drift a: 74.5 mm (2.933 in) dia. b: 62.5 mm (2.461 in) dia.	 ZZA0832D
KV40104710 (—) a: 76.3 mm (3.004 in) dia. b: 67.9 mm (2.673 in) dia.	 ZZA0832D

WHEEL SENSOR

< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]


REMOVAL AND INSTALLATION

WHEEL SENSOR

FRONT WHEEL SENSOR

FRONT WHEEL SENSOR : Exploded View

INFOID:000000011737085

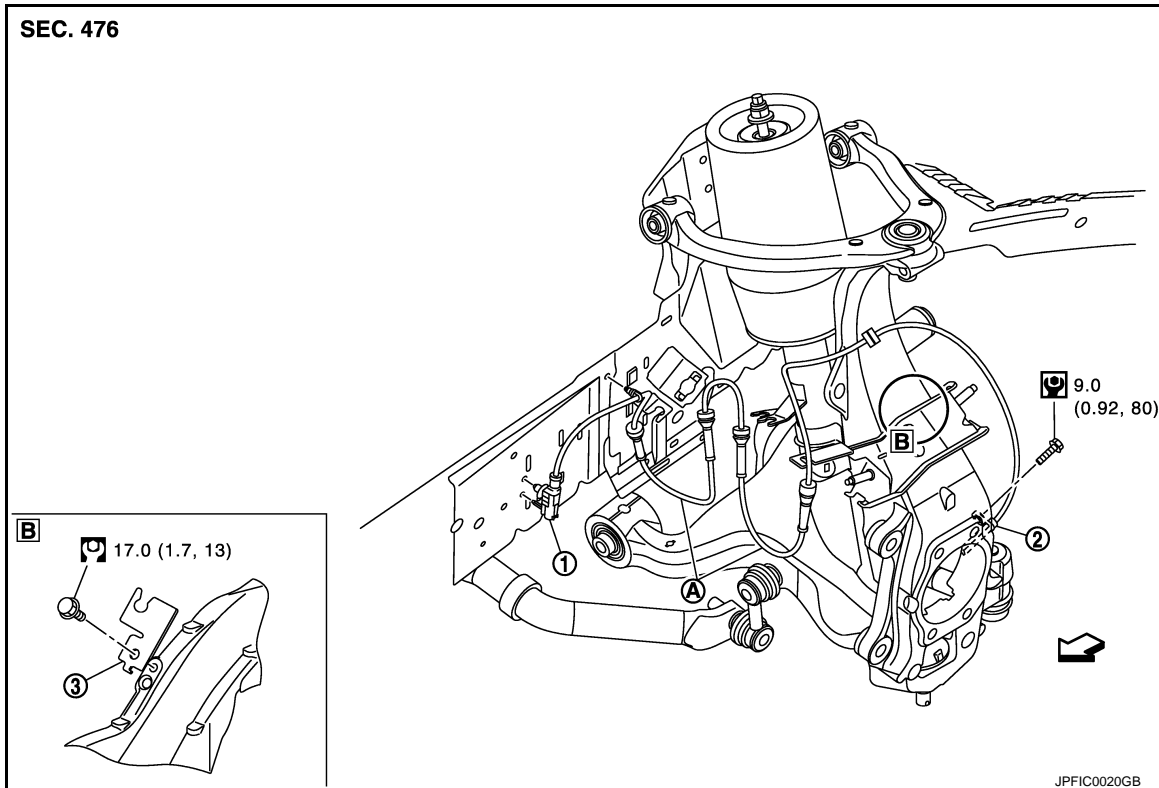

1. Front LH wheel sensor harness connector 2. Front LH wheel sensor 3. Bracket

A. Color line

←: Vehicle front

Refer to [GI-4, "Components"](#) for symbols in the figure.

NOTE:

The above figure (front side) shows left side. Right side is the mirror image.

FRONT WHEEL SENSOR : Removal and Installation

INFOID:000000011737086

REMOVAL

Note the following, and when removing wheel sensor.

- Never twist sensor harness as much as possible, when removing it. Pull wheel sensors out without pulling sensor harness.
- Be careful to avoid damaging sensor edges or rotor teeth. Remove wheel sensor first before removing front wheel hub and bearing assembly. This is to avoid damage to wheel sensor wiring and loss of wheel sensor function.

INSTALLATION

Note the following, and when installing wheel sensor. Tighten installation bolts to the specified torques.

- When installing, make sure there is no foreign material such as iron chips on and in the mounting hole of the wheel sensor. Make sure no foreign material has been caught in the sensor rotor. Remove any foreign material and clean the mount.

WHEEL SENSOR

[VDC/TCS/ABS]


< REMOVAL AND INSTALLATION >

- When installing wheel sensor, be sure to press rubber grommets in until they lock at locations shown above in the figure. When installed, harness must not be twisted.
- When you see the harness of the wheel sensor from the front side of the vehicle ensure that the color lines (A) are not twisted.

REAR WHEEL SENSOR

REAR WHEEL SENSOR : Exploded View

INFOID:000000011737087

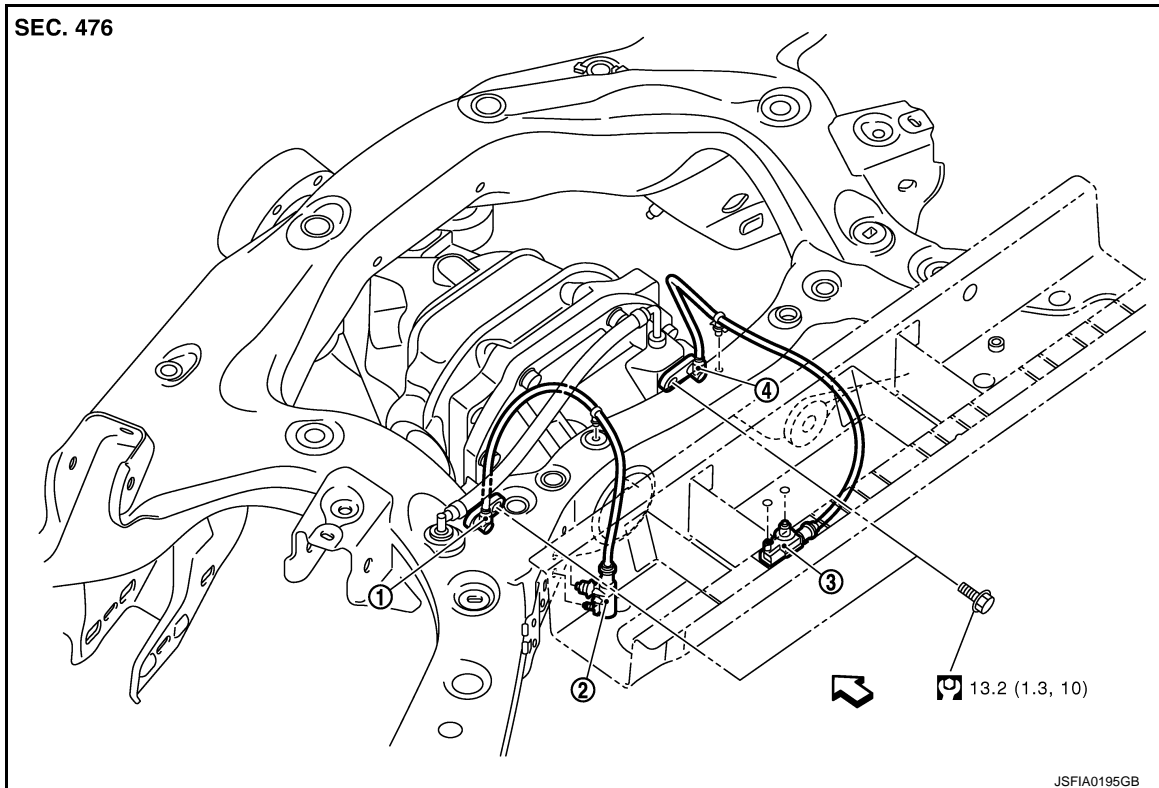

1. Rear LH wheel sensor
2. Rear LH wheel sensor harness connector
3. Rear RH wheel sensor harness connector
4. Rear RH wheel sensor

← Vehicle front

Refer to [GI-4. "Components"](#) for symbols in the figure.

REAR WHEEL SENSOR : Removal and Installation

INFOID:000000011737088

REMOVAL

Note the following, when removing sensor harness.

- Never twist sensor harness as much as possible, when removing it. Pull wheel sensors out without pulling sensor harness.
- Be careful to avoid damaging sensor edges or rotor teeth. Remove wheel sensor first before removing side flange. This is to avoid damage to sensor wiring and loss of sensor function.

INSTALLATION

Note the following, when installing wheel sensor. Tighten installation bolts to the specified torques.

- When installing, make sure there is no foreign material such as iron chips on and in the mounting hole of the wheel sensor. Make sure no foreign material has been caught in the sensor rotor. Remove any foreign material and clean the mount.
- When installing wheel sensor, be sure to press rubber grommets in until they lock at locations shown above in the figure. When installed, harness must not be twisted.

SENSOR ROTOR

[VDC/TCS/ABS]

< REMOVAL AND INSTALLATION >

SENSOR ROTOR FRONT SENSOR ROTOR

FRONT SENSOR ROTOR : Exploded View

INFOID:0000000011737089

Refer to [FAX-7, "Exploded View"](#).

FRONT SENSOR ROTOR : Removal and Installation

INFOID:0000000011737090

REMOVAL

Sensor rotor cannot be disassembled. Remove the sensor rotor together with hub bearing assembly. Refer to [FAX-7, "Exploded View"](#).


INSTALLATION

Sensor rotor cannot be disassembled. Remove the sensor rotor together with hub bearing assembly. Refer to [FAX-7, "Exploded View"](#).

REAR SENSOR ROTOR

REAR SENSOR ROTOR : Exploded View

INFOID:0000000011737091

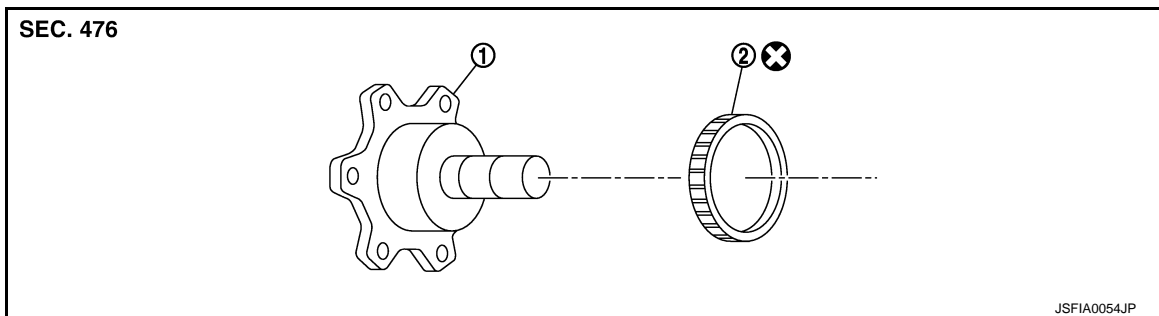

1. Side flange
2. Rear wheel sensor rotor

Refer to [GI-4, "Components"](#) for symbols in the figure.

REAR SENSOR ROTOR : Removal and Installation

INFOID:0000000011737092

REMOVAL

- Follow the procedure below to remove rear sensor rotor.
- Remove side flange. Refer to [DLN-24, "Exploded View"](#) (R200), [DLN-63, "Exploded View"](#) (R200V).
- Using a bearing replacer (suitable tool) and puller (suitable tool), remove sensor rotor from side flange.

INSTALLATION


CAUTION:

Never reuse sensor rotor.

- Follow the procedure below to install rear sensor rotor.
- Using a drifts, press rear sensor rotor onto side flange.

- A : Drift [SST: ST30720000 (J-25405)]
- B : Drift [SST: ST27863000 (—)]
- C : Drift [SST: KV40104710 (—)]

- Install side flange. Refer to [DLN-24, "Exploded View"](#) (R200), [DLN-63, "Removal and Installation"](#) (R200V).

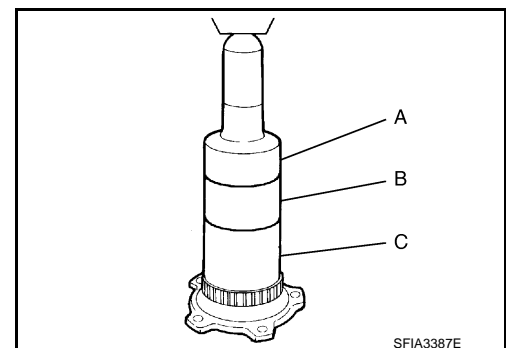

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)


< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

Exploded View

INFOID:000000011737093

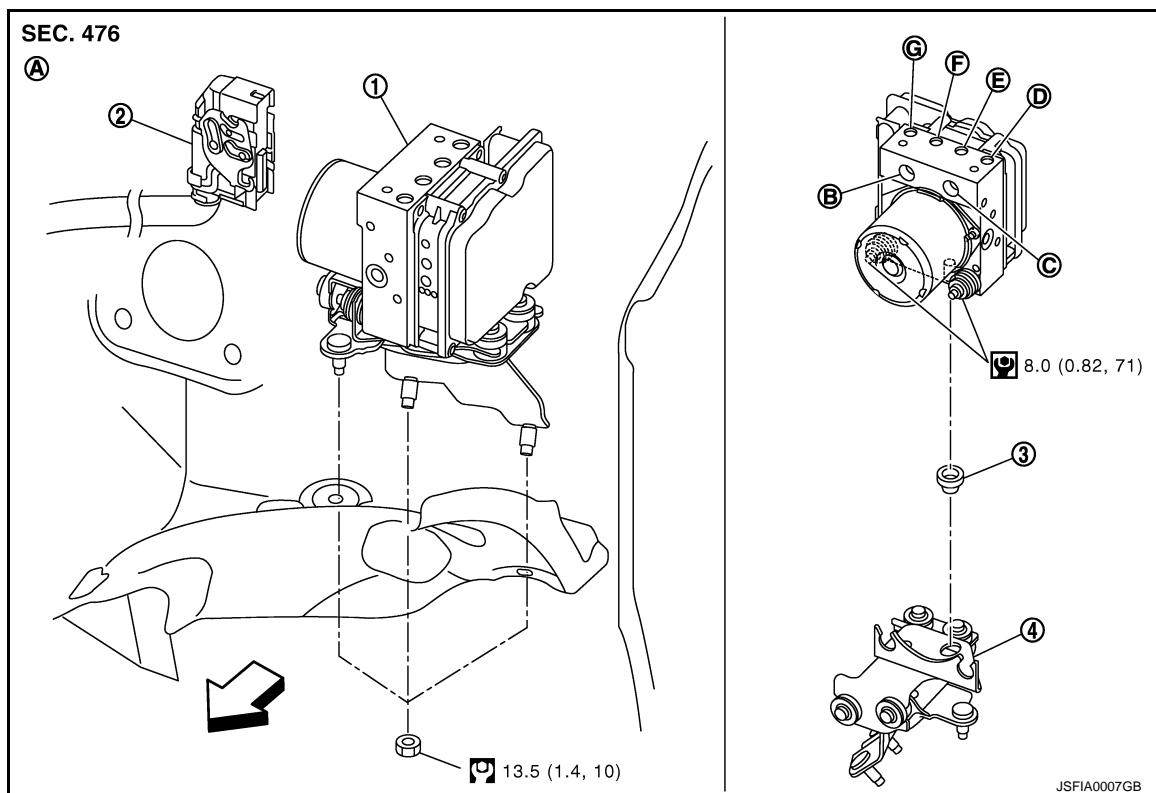

- | | | |
|--|--|--------------------------------------|
| 1. ABS actuator and electric unit (control unit) | 2. Harness connector | 3. Bushing |
| 4. Bracket | | |
| A. Left side of dash panel | B. From master cylinder secondary side | C. From master cylinder primary side |
| D. To front LH brake caliper | E. To rear RH brake caliper | F. To Rear LH brake caliper |
| G. To front RH brake caliper | | |

↔: Vehicle front

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000011737094

REMOVAL

1. Disconnect the battery cable from negative terminal.
2. Remove cowl top cover. Refer to [EXT-29, "Exploded View"](#).
3. Drain brake fluid. Refer to [BR-12, "Draining"](#).
4. Disconnect ABS actuator and electric unit (control unit) harness connector.
5. Remove brake booster pressure sensor mounting bracket. Hang brake booster pressure sensor mounting bracket not to interfere with work.
6. Loosen brake tube flare nuts, then remove brake tubes from ABS actuator and electric unit (control unit). Refer to [BR-24, "FRONT : Exploded View"](#).
7. Remove brake tube form between ABS actuator and electric unit (control unit) and master cylinder assembly. Refer to [BR-24, "FRONT : Exploded View"](#).
8. Remove tire (front LH side).
9. Remove fender protector (rear): (front LH side). Refer to [EXT-32, "Exploded View"](#).
10. Remove ABS actuator and electric unit (control unit) bracket mounting nut.

ABS ACTUATOR AND ELECTRIC UNIT (CONTROL UNIT)

< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

11. Remove ABS actuator and electric unit (control unit) from vehicle.

CAUTION:

- Never apply excessive impact to ABS actuator and electric unit (control unit), such as dropping it.
- Never remove actuator by holding harness.

INSTALLATION

Note the following, and install in the reverse order of removal.

- Install, use flare nut crowfoot and torque wrench. Refer to [BR-24. "FRONT : Exploded View"](#).
- Never apply excessive impact to ABS actuator and electric unit (control unit), such as dropping it.
- Never install actuator by holding harness.
- After work is completed, bleed air from brake tube. Refer to [BR-13. "Bleeding Brake System"](#).
- After installing harness connector in the ABS actuator and electric unit (control unit), make sure harness connector is securely locked.
- When replacing ABS actuator and electric unit (control unit), make sure to adjust neutral position of steering angle sensor. Refer to [BRC-7. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

YAW RATE/SIDE G SENSOR


< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

YAW RATE/SIDE G SENSOR

Exploded View

INFOID:000000011737095

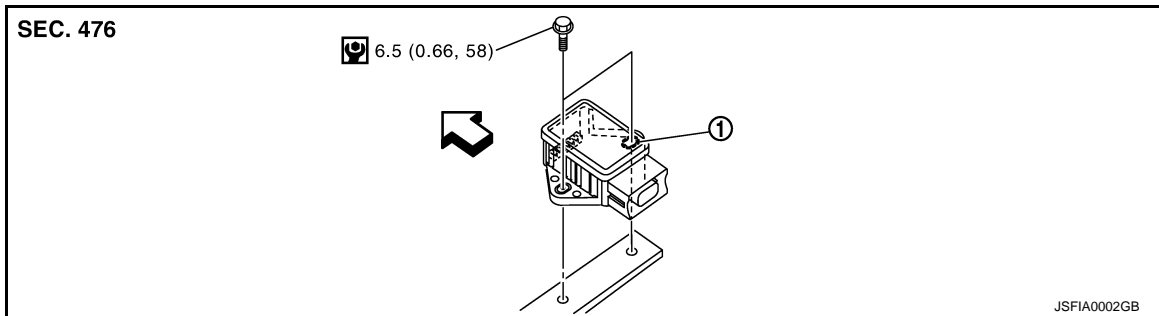

1. Yaw rate/side G sensor

↔: Vehicle front

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation

INFOID:000000011737096

REMOVAL

CAUTION:

- Never drop or strike yaw rate/side G sensor, or never use power tool etc., because yaw rate/side G sensor is sensitive to the impact.

1. Remove center console. Refer to [IP-25, "Exploded View"](#).
2. Disconnect yaw rate/side G sensor harness connector.
3. Remove mounting bolts. Remove yaw rate/side G sensor.

INSTALLATION

Note the following, and install in the reverse order of removal.

- Never drop or strike yaw rate/side G sensor, or never use power tool etc., because yaw rate/side G sensor is sensitive to the impact.

STEERING ANGLE SENSOR


< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

STEERING ANGLE SENSOR

Exploded View

INFOID:000000011737097

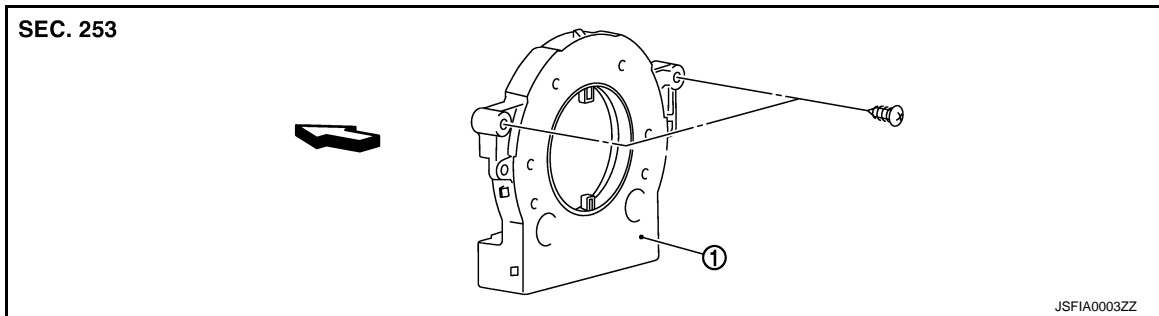

1. Steering angle sensor

↩: Vehicle front

Removal and Installation

INFOID:000000011737098

REMOVAL

1. Remove spiral cable assembly. Refer to [SR-16. "Exploded View"](#).
2. Remove steering angle sensor from spiral cable assembly.

INSTALLATION

Note the following, and install in the reverse order of removal.

- After work, make sure to adjust neutral position of steering angle sensor. Refer to [BRC-7. "ADJUSTMENT OF STEERING ANGLE SENSOR NEUTRAL POSITION : Description"](#).

A
B
C
D
E
G
H
I
J
K
L
M
N
O
P

BRC

VDC OFF SWITCH

< REMOVAL AND INSTALLATION >

[VDC/TCS/ABS]

VDC OFF SWITCH

Removal and Installation

INFOID:000000011737099

REMOVAL

1. Remove Instrument lower panel LH. Refer to [IP-13. "Exploded View"](#).
2. Remove VDC OFF switch.

INSTALLATION

Install in the reverse order of removal.