

AUTOMATIC TRANSAXLE

SECTION AT

CONTENTS

PREPARATION AND PRECAUTIONS	2	Without CONSULT.....	30
Special Service Tools	2	Cruise test — Part 1	30
Commercial Service Tools.....	6	Cruise test — Part 2	33
Precautions.....	7	Cruise test — Part 3	35
DESCRIPTION	9	Vehicle speed when shifting gears	36
Cross-Sectional View.....	9	Vehicle speed when performing lock-up.....	36
Hydraulic Control Circuits	10	Shift schedule (Comfort pattern)	37
Shift Mechanism.....	11	Shift schedule (Auto power pattern).....	37
Construction.....	11	A/T Electrical Parts Location	38
Function Of Clutch And Brake	12	Circuit Diagram for Quick Pinpoint Check	39
Operation Of Clutch And Brake	12	Wiring Diagram	40
Control System.....	13	Self-diagnosis.....	46
Outline.....	13	Self-Diagnostic Procedure (With CONSULT).....	46
Control System	13	Self-Diagnostic Procedure (Without	
A/T Control Unit Function.....	14	CONSULT).....	47
Input/Output Signal Of A/T Control Unit	14	Judgement Of Self-Diagnosis Code	49
TROUBLE DIAGNOSES	15	Revolution Sensor Circuit Check	51
How to Perform Trouble Diagnoses for Quick		Vehicle Speed Sensor Circuit Check	52
and Accurate Repair	15	Throttle Position Sensor Circuit Check.....	53
Information From Customer	16	Shift Solenoid Valve A Circuit Check	54
Diagnostic Worksheet	17	Shift Solenoid Valve B Circuit Check	55
Remarks	19	Overrun Clutch Solenoid Valve Circuit Check ...	56
Fail-Safe.....	19	Torque Converter Clutch Solenoid Valve	
ATF Cooler Service	19	Circuit Check	57
Diagnosis by CONSULT.....	20	Fluid Temperature Sensor Circuit And A/T	
Application	20	Control Unit Power Source Circuit Checks	58
Data Analysis.....	22	Engine Speed Signal Circuit Check	60
Preliminary Check.....	23	Line Pressure Solenoid Valve Circuit Check	61
A/T Fluid Check.....	23	Inhibitor Switch, Overdrive Switch And	
Fluid leakage check	23	Closed Throttle Position Switch Circuit	
Fluid condition check	23	Checks	62
Fluid level check	23	Diagnostic Procedure 1	66
Road Testing	23	(SYMPTOM: OD OFF indicator lamp does	
Description.....	23	not come on for about 2 seconds when	
1. Check before engine is started	24	turning ignition switch to "ON".)	
2. Check at idle	25		
3. Cruise test	27		
With CONSULT.....	27		

GI
MA
EM
LC
EF &
EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

CONTENTS (Cont'd.)

Diagnostic Procedure 2 67 (SYMPTOM: Engine cannot be started with selector lever in "P" or "N" position or engine can be started with selector lever in "D", "2", "1" or "R" position.)	Diagnostic Procedure 15 81 (SYMPTOM: Engine speed does not return to idle smoothly when A/T is shifted from D ₄ to D ₃ with accelerator pedal released. Vehicle does not decelerate by engine brake when changing overdrive switch to "OFF" position with accelerator pedal released. Vehicle does not decelerate by engine brake when changing selector lever from "D" to "2" position with accelerator pedal released.)
Diagnostic Procedure 3 67 (SYMPTOM: Vehicle moves when it is pushed forward or backward with selector lever in "P" position.)	Diagnostic Procedure 16 82 (SYMPTOM: Vehicle does not start from D ₁ on Cruise test — Part 2.)
Diagnostic Procedure 4 68 (SYMPTOM: Vehicle moves forward or backward when selecting "N" position.)	Diagnostic Procedure 17 82 (SYMPTOM: A/T does not shift from D ₄ to D ₃ when changing overdrive switch to "OFF" position.)
Diagnostic Procedure 5 69 (SYMPTOM: There is large shock when changing from "N" to "R" position.)	Diagnostic Procedure 18 83 (SYMPTOM: A/T does not shift from D ₃ to 2 ₂ when changing selector lever from "D" to "2" position.)
Diagnostic Procedure 6 70 (SYMPTOM: Vehicle does not creep backward when selecting "R" position.)	Diagnostic Procedure 19 83 (SYMPTOM: A/T does not shift from 2 ₂ to 1 ₁ when changing selector lever from "2" to "1" position.)
Diagnostic Procedure 7 72 (SYMPTOM: Vehicle does not creep forward when selecting "D", "2" or "1" position.)	Diagnostic Procedure 20 84 (SYMPTOM: Vehicle does not decelerate by engine brake when shifting from 2 ₂ (1 ₂) to 1 ₁ .)
Diagnostic Procedure 8 73 (SYMPTOM: Vehicle cannot be started from D ₁ on Cruise test — Part 1.)	Electrical Components Inspection 85
Diagnostic Procedure 9 74 (SYMPTOM: A/T does not shift from D ₁ to D ₂ at the specified speed. A/T does not shift from D ₄ to D ₂ when depressing accelerator pedal fully at the specified speed.)	Inspection Of A/T Control Unit..... 85
Diagnostic Procedure 10 76 (SYMPTOM: A/T does not shift from D ₂ to D ₃ at the specified speed.)	A/T Control Unit Inspection Table..... 85
Diagnostic Procedure 11 77 (SYMPTOM: A/T does not shift from D ₃ to D ₄ at the specified speed.)	Overdrive Switch 89
Diagnostic Procedure 12 78 (SYMPTOM: A/T does not perform lock-up at the specified speed.)	Inhibitor Switch 89
Diagnostic Procedure 13 79 (SYMPTOM: A/T does not hold lock-up condition for more than 30 seconds.)	Revolution Sensor 90
Diagnostic Procedure 14 80 (SYMPTOM: Lock-up is not released when accelerator pedal is released.)	Solenoid Valves And Fluid Temperature Sensor 90
	Dropping Resistor..... 91
	Final Check 91
	Stall Testing 91
	Stall test procedure 91
	Judgement of stall test..... 93
	Pressure Testing 94
	Line pressure test procedure..... 94
	Judgement of line pressure test..... 95
	Symptom Chart 96
	TRUBLE DIAGNOSES — A/T Shift Lock System..... 99

CONTENTS (Cont'd.)

Shift Lock Electrical Parts Location.....	99	Band Servo Piston Assembly.....	185	GI
Circuit Diagram for Quick Pinpoint Check.....	100	Final Drive — RE4F04A.....	190	
Wiring Diagram.....	101	Final Drive — RE4F04V.....	194	
Diagnostic Procedure.....	102	ASSEMBLY	200	MA
Key Interlock Cable.....	106	Adjustment.....	200	
Shift Lock Control Module Inspection.....	107	Differential Side Bearing Preload.....	200	EM
Shift Lock Control Module Inspection Table.....	107	Reduction Gear Bearing Preload.....	202	
Component Check.....	108	Output Shaft End Play.....	204	
ON-VEHICLE SERVICE	109	Assembly.....	206	LC
Control Valve Assembly and Accumulator.....	109	Adjustment.....	212	
Revolution Sensor Replacement.....	111	Total End Play.....	212	
Inhibitor Switch Adjustment.....	111	Assembly.....	214	EF & EC
Control Cable Adjustment.....	111	SERVICE DATA AND SPECIFICATIONS (SDS)	221	
Differential Side Oil Seal Replacement.....	111	General Specifications.....	221	
REMOVAL AND INSTALLATION	113	Specifications and Adjustments.....	221	FE
MAJOR OVERHAUL	115	Vehicle Speed When Shifting Gears.....	221	
Oil Channel.....	118	Vehicle Speed When Performing Lock-Up.....	221	CL
DISASSEMBLY	119	Stall Revolution.....	222	
REPAIR FOR COMPONENT PARTS	135	Line Pressure.....	222	
Manual Shaft.....	135	Control Valves.....	222	MT
Oil Pump.....	138	Clutches And Brakes.....	223	
Control Valve Assembly.....	142	Final Drive.....	224	
Control Valve Upper Body.....	151	Planetary Carrier And Oil Pump.....	225	AT
Control Valve Lower Body.....	155	Input Shaft.....	225	
Reverse Clutch.....	158	Reduction Gear.....	225	FA
High Clutch.....	162	Reverse Clutch End Play.....	226	
Forward Clutch and Overrun Clutch.....	167	Accumulator.....	226	RA
Low & Reverse Brake.....	173	Band Servo.....	226	
Rear Internal Gear, Forward Clutch Hub and		Removal And Installation.....	226	BR
Overrun Clutch Hub.....	176	Output Shaft.....	226	
Output Shaft, Idler Gear, Reduction Gear and		Bearing Retainer.....	227	ST
Bearing Retainer.....	180	Total End Play.....	227	

When you read wiring diagrams:

- Read GI section, "HOW TO READ WIRING DIAGRAMS".
- See EL section, "POWER SUPPLY ROUTING" for power distribution circuit.

When you perform trouble diagnoses, read GI section, "HOW TO FOLLOW FLOW CHART IN TROUBLE DIAGNOSES".

GI

MA

EM

LC

EF &

EC

FE

CL

MT

AT

FA

RA

BR

ST

BF







HA

EL

IDX







PREPARATION AND PRECAUTIONS

Special Service Tools

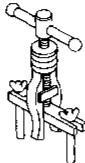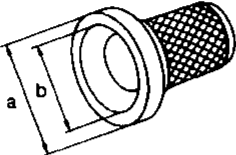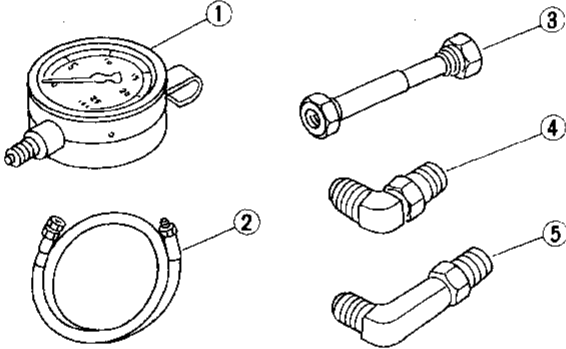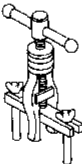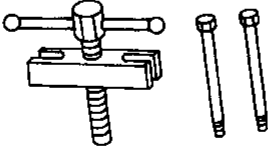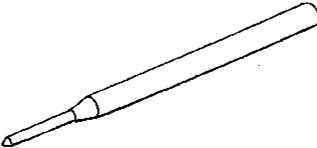Tool number (Kent-Moore No.) Tool name	Description
ST33290001 (J34286) Puller	 <p style="text-align: right;">Removing differential side oil seals</p>
ST33400001 (J26082) Drift	 <p style="text-align: right;">Installing differential side oil seal (RH side) Installing oil seal on oil pump housing</p> <p>a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia.</p>
ST2505S001 (J25695-A) Oil pressure gauge set ① ST25051001 (J25695-1) Oil pressure gauge ② ST25052000 (J25695-2) Hose ③ ST25053000 (J25695-3) Joint pipe ④ ST25054000 (J25695-4) Adapter ⑤ ST25055000 (J25695-5) Adapter	<p style="text-align: right;">Measuring line pressure.</p> 
KV381054S0 (-) Puller	 <ul style="list-style-type: none"> ● Removing differential side bearing outer race ● Removing idler gear bearing outer race
ST27180001 (-) Puller	 <p style="text-align: right;">Removing idler gear</p>
ST23540000 (-) Pin punch	 <p style="text-align: right;">Removing and installing parking rod plate and manual plate pins.</p>

PREPARATION AND PRECAUTIONS

Special Service Tools (Cont'd)

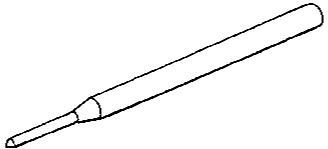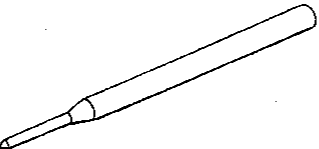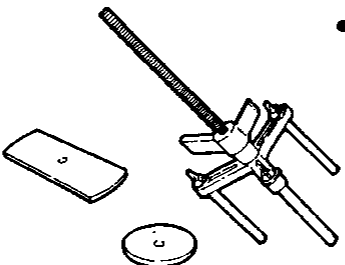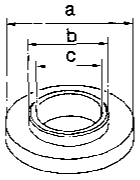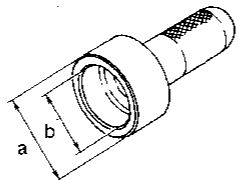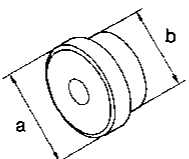Tool number (Kent-Moore No.) Tool name	Description
ST25710000 (—) Pin punch	 <p>Aligning groove of manual shaft and hole of transmission case.</p>
KV32101000 (J25689-A) Pin punch	 <p>Installing manual shaft retaining pin</p>
KV31102400 (J34285 and J34285-87) Clutch spring compressor	 <ul style="list-style-type: none"> ● Removing and installing clutch return springs ● Installing low and reverse brake piston
KV40100630 (—) Drift	 <ul style="list-style-type: none"> ● Installing reduction gear bearing inner race ● Installing idler gear bearing inner race <p>a: 67.5 mm (2.657 in) dia. b: 44 mm (1.73 in) dia. c: 38.5 mm (1.516 in) dia.</p>
ST30720000 (J34331)	 <ul style="list-style-type: none"> ● Installing idler gear bearing outer race <p>a: 55.5 mm (2.185 in) dia. b: 77 mm (3.03 in) dia.</p>
ST35321000 (—) Drift	 <ul style="list-style-type: none"> ● Installing output shaft bearing <p>a: 49 mm (1.93 in) dia. b: 41 mm (1.61 in) dia.</p>

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF






HA

EL

IDX





PREPARATION AND PRECAUTIONS

Special Service Tools (Cont'd)

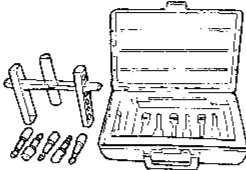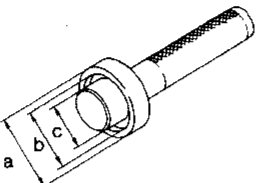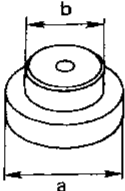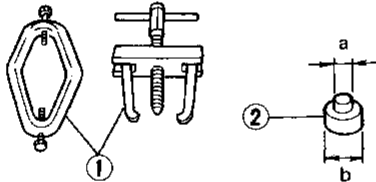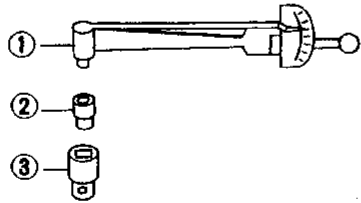Tool number (Kent-Moore No.) Tool name	Description	
(J34291) Shim setting gauge set		<ul style="list-style-type: none"> • Selecting oil pump cover bearing race and oil pump thrust washer • Selecting side gear thrust washer
KV38100300 (-)	 <p>a: 54 mm (2.13 in) dia. b: 46 mm (1.81 in) dia. c: 32 mm (1.26 in) dia.</p>	Installing differential side bearing inner race (RH side)
ST30613000 (-)	 <p>a: 72 mm (2.83 in) dia. b: 48 mm (1.89 in) dia.</p>	Installing differential side bearing inner race (LH side)
ST3306S001 (-) Differential side bearing puller set ① ST33051001 (-) Puller ② ST33061000 (J8107-2) Adapter	 <p>a: 28.5 mm (1.122 in) dia. b: 38 mm (1.50 in) dia.</p>	Removing differential side bearing inner race
ST3127S000 (See J25765-A) Preload gauge ① GG91030000 (J25765-A) Torque wrench ② HT62940000 (-) Socket adapter ③ HT62900000 (-) Socket adapter		Checking differential side bearing preload

PREPARATION AND PRECAUTIONS






Special Service Tools (Cont'd)

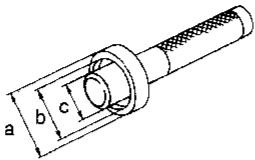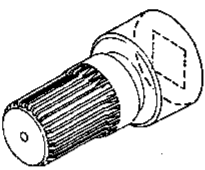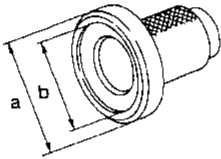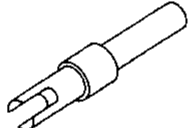Tool number (Kent-Moore No.) Tool name	Description	
ST33220000 (-) Drift	 <p>a: 37 mm (1.46 in) dia. b: 31 mm (1.22 in) dia. c: 22 mm (0.87 in) dia.</p>	GI MA EM LC
KV38105210 (-) Preload adapter	 <ul style="list-style-type: none"> ● Selecting differential side bearing adjusting shim (F04V) ● Checking differential side bearing preload (F04V) 	EF & EC FE
ST35271000 (-) Drift	 <p>a: 72 mm (2.83 in) dia. b: 63 mm (2.48 in) dia.</p>	CL MT AT
(J39713) Preload adapter	 <ul style="list-style-type: none"> ● Selecting differential side bearing adjusting shim (F04A) ● Checking differential side bearing preload (F04A) 	FA RA BR

GI
MA
EM
LC
EF &
EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

PREPARATION AND PRECAUTIONS

Commercial Service Tools

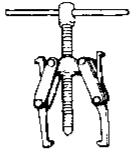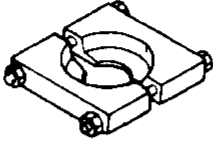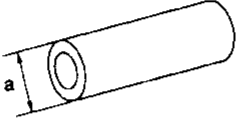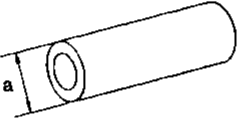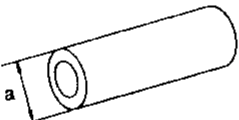
Tool name	Description
Puller	<div style="display: flex; align-items: center; justify-content: center;">  <div style="margin-left: 20px;"> <ul style="list-style-type: none"> ● Removing idler gear bearing inner race ● Removing and installing band servo piston snap ring </div> </div>
Puller	<div style="display: flex; align-items: center; justify-content: center;">  <div style="margin-left: 20px;"> <p>Removing reduction gear bearing inner race</p> </div> </div>
Drift	<div style="display: flex; align-items: center; justify-content: center;">  <div style="margin-left: 20px;"> <p>Installing differential side oil seal (Left side)</p> </div> </div> <p style="margin-top: 10px;">a: 90 mm (3.54 in) dia.</p>
Drift	<div style="display: flex; align-items: center; justify-content: center;">  <div style="margin-left: 20px;"> <p>Installing needle bearing on bearing retainer</p> </div> </div> <p style="margin-top: 10px;">a: 36 mm (1.42 in) dia.</p>
Drift	<div style="display: flex; align-items: center; justify-content: center;">  <div style="margin-left: 20px;"> <p>Removing needle bearing from bearing retainer</p> </div> </div> <p style="margin-top: 10px;">a: 33.5 mm (1.319 in) dia.</p>

PREPARATION AND PRECAUTIONS

Precautions

- Before proceeding with disassembly, thoroughly clean the outside of the transaxle. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Disassembly should be done in a clean work area.
- Use lint-free cloth or towels for wiping parts clean. Common shop rags can leave fibers that could interfere with the operation of the transaxle.
- When disassembling parts, place them in order in a parts rack so that they can be assembled in their proper positions.
- All parts should be carefully cleaned with a general purpose, non-flammable solvent before inspection or reassembly.
- Gaskets, seals and O-rings should be replaced any time the transaxle is disassembled.
- It is very important to perform functional tests whenever they are indicated.
- Valve bodies contain precision parts and require extreme care when parts are removed and serviced. Place removed parts in order on a parts rack so they can be put back in the valve body in the same positions and sequences. Care will also prevent springs and small parts from becoming scattered or lost.
- Properly installed valves, sleeves, plugs, etc. will slide along their bores in the valve bodies under their own weight.
- Before assembly, apply a coat of recommended ATF to all parts. Petroleum jelly may be applied to O-rings and seals and used to hold small bearings and washers in place during reassembly. Do not use grease.
- Extreme care should be taken to avoid damage to O-rings, seals and gaskets when assembling.
- If foreign matter is found to have accumulated in the oil pan in large quantities during overhaul or the oil strainer is excessively clogged, flush or replace ATF cooler as required. For servicing, refer to AT-19.
- After overhaul, refill the transaxle with new ATF.
- Even when the drain plug is removed, the old A/T fluid will remain in the torque converter and the A/T fluid cooling system.

Always follow the procedures under "Changing A/T Fluid" in the MA section when changing A/T fluid.

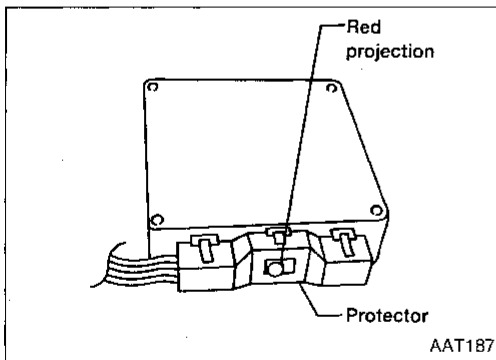

- When connecting A/T control unit harness connector, tighten securing bolt until red projection is in line with connector face.



Precautions for Supplemental Restraint System "AIR BAG"


The Supplemental Restraint System "Air Bag" helps to reduce the risk or severity of injury to the driver and front passenger in a frontal collision. The Supplemental Restraint System consists of air bags (located in the center of the steering wheel and on the instrument panel on the passenger side), sensors, a control module, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the **BF** section of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could lead to personal injury or death in the event of a severe frontal collision, all maintenance must be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- All SRS electrical wiring harnesses and connectors are covered with yellow outer insulation. Do not use electrical test equipment on any circuit related to the SRS "Air Bag".

DESCRIPTION

Cross-Sectional View

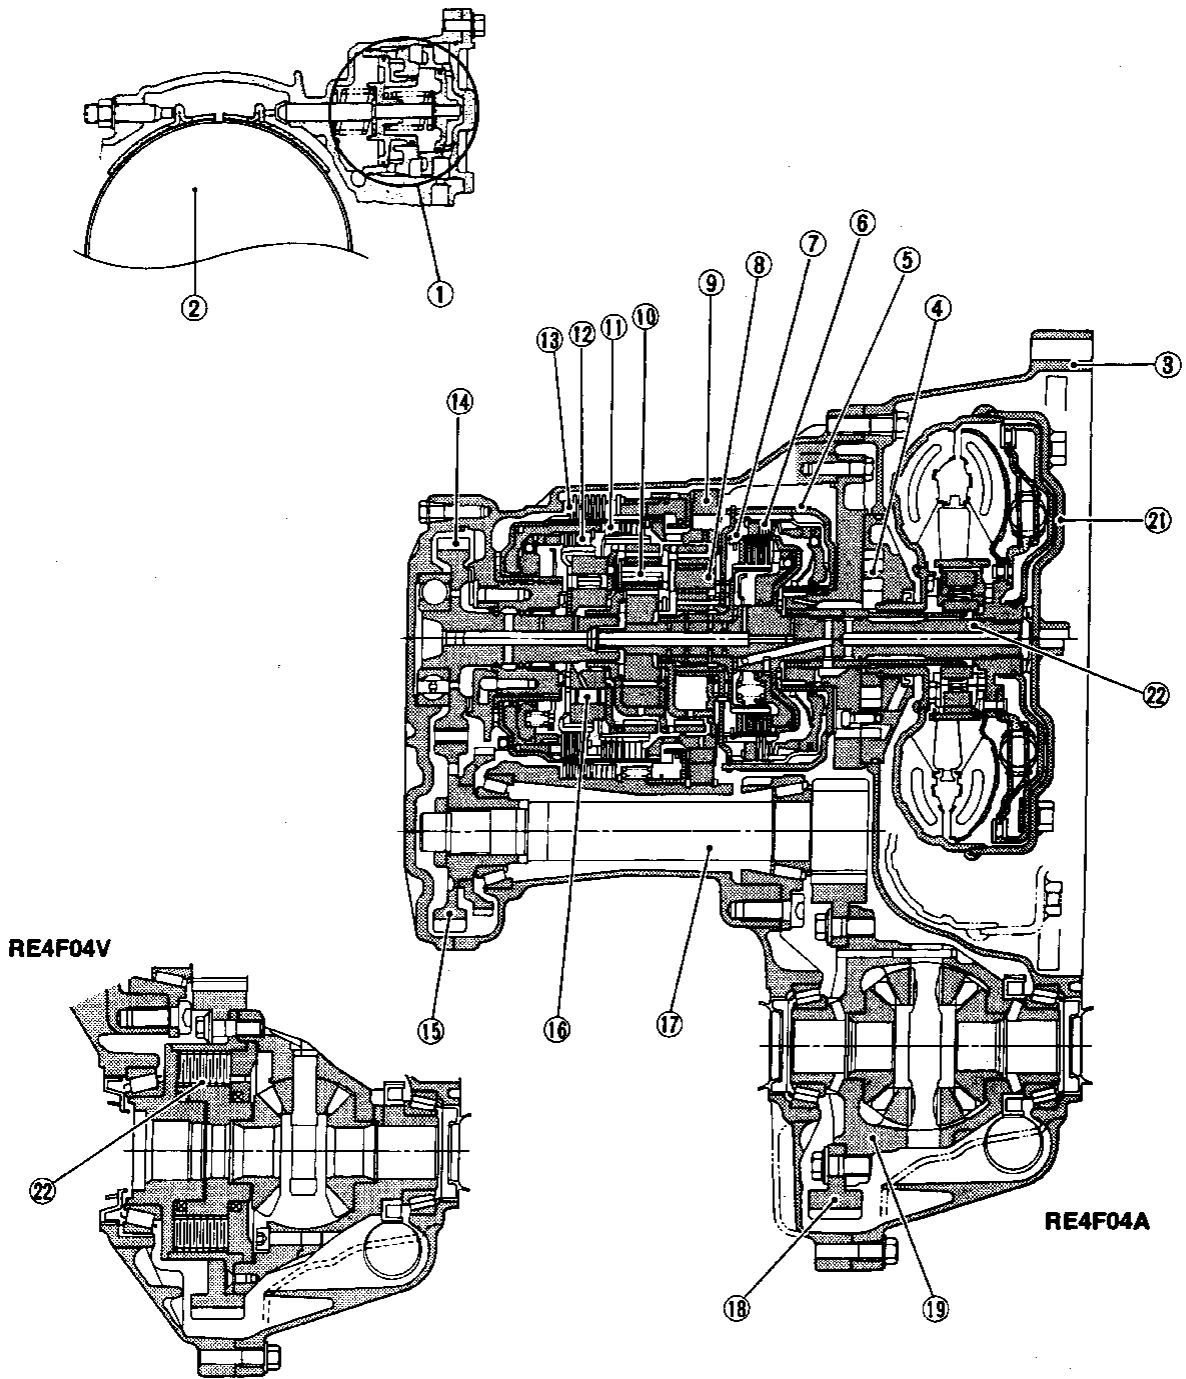

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

AAT173

EL

IDX


- ① Band servo piston
- ② Reverse clutch drum
- ③ Converter housing
- ④ Oil pump
- ⑤ Brake band
- ⑥ Reverse clutch
- ⑦ High clutch
- ⑧ Front planetary gear

- ⑨ Low one-way clutch
- ⑩ Rear planetary gear
- ⑪ Forward clutch
- ⑫ Overrun clutch
- ⑬ Low & reverse brake
- ⑭ Output gear
- ⑮ Idler gear

- ⑯ Forward one-way clutch
- ⑰ Pinion reduction gear
- ⑱ Final gear
- ⑲ Differential case
- ⑳ Input shaft
- ㉑ Torque converter
- ㉒ Viscous coupling

DESCRIPTION

Hydraulic Control Circuits

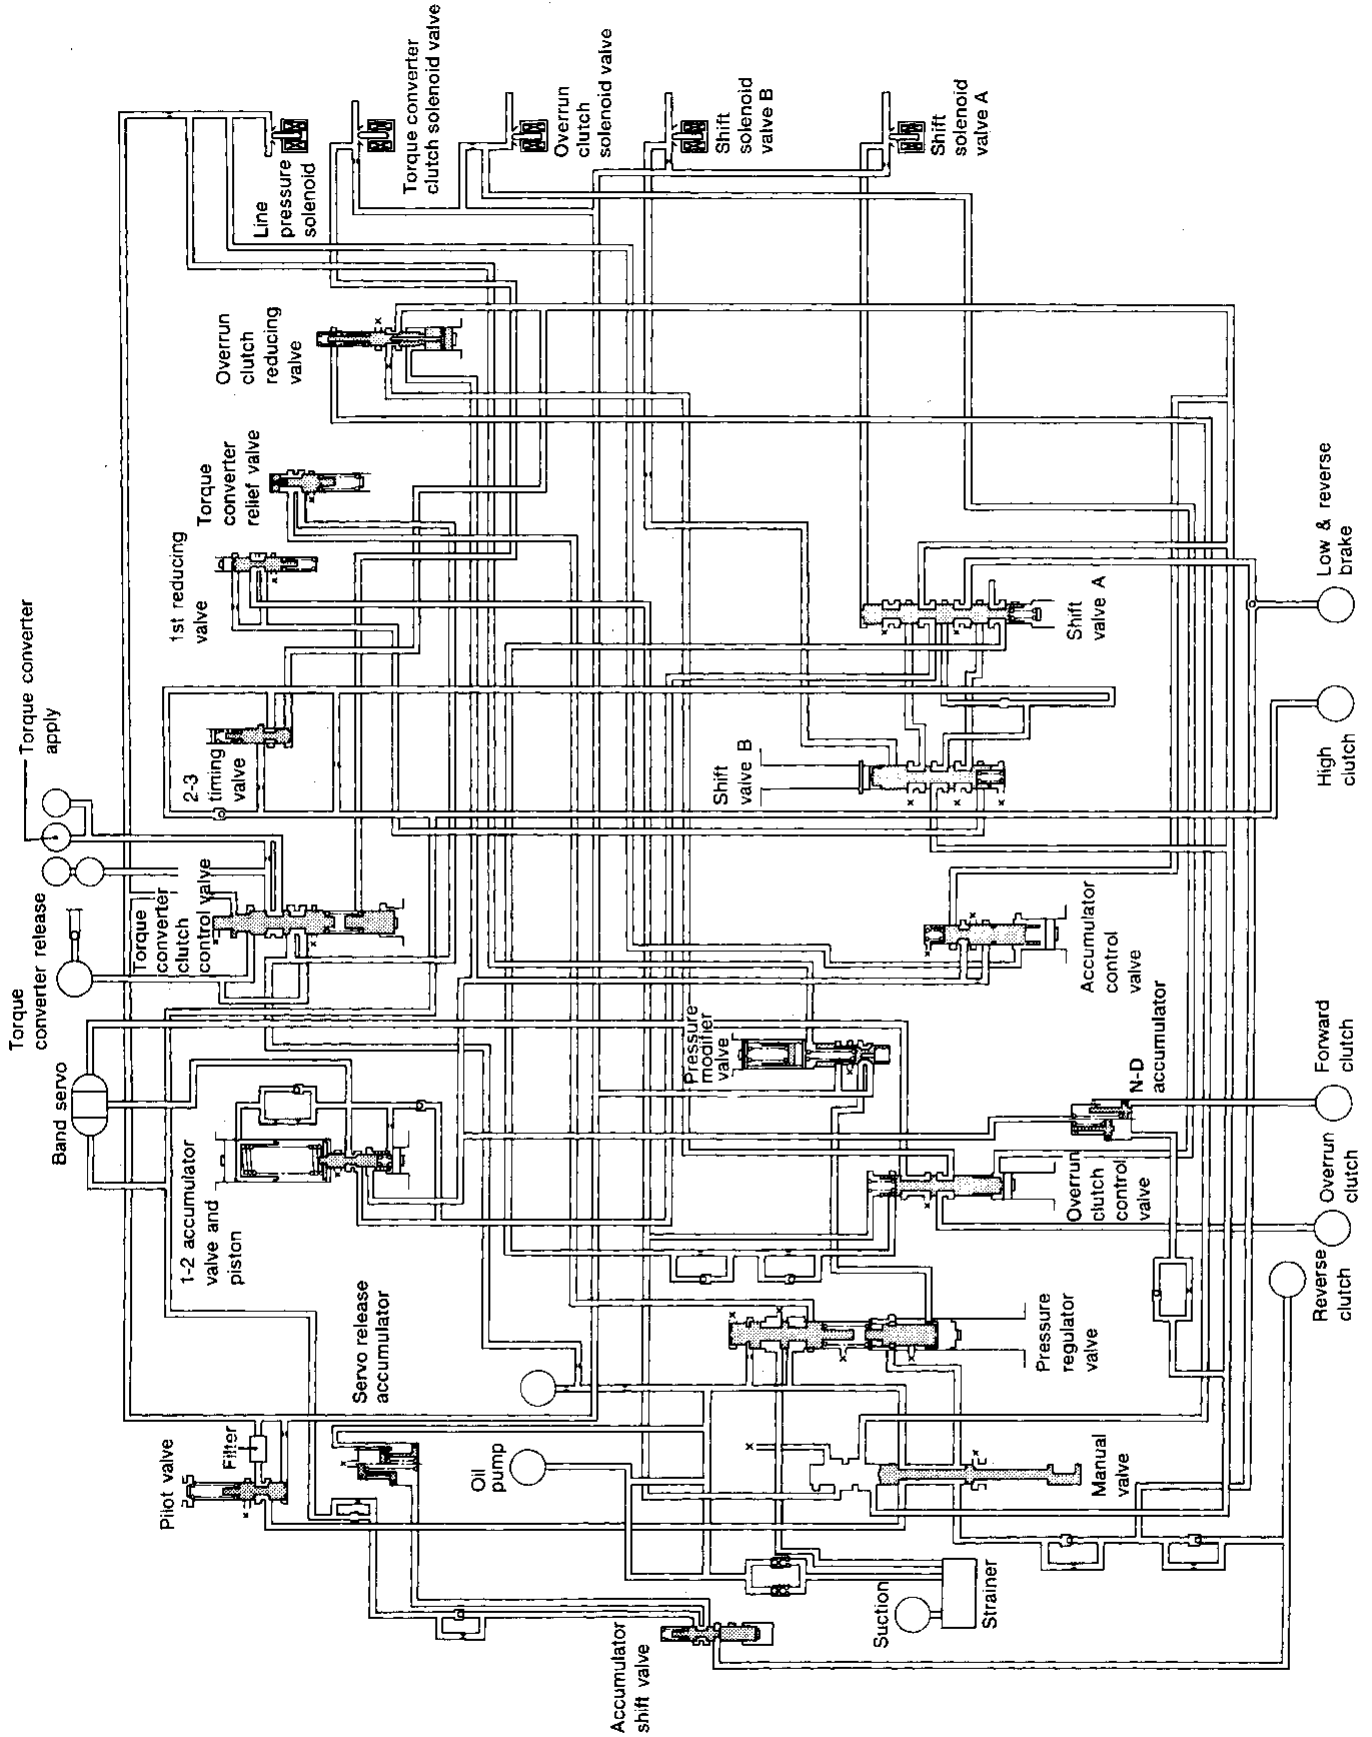


DESCRIPTION

Shift Mechanism

The RE4F04A and RE4F04V automatic transaxles use compact, dual planetary gear systems to improve power transmission efficiency, simplify construction and reduce weight. Two one-way clutches are also employed. These one-way clutches, combined with two accumulators, reduce shifting shock to a minimum.

CONSTRUCTION

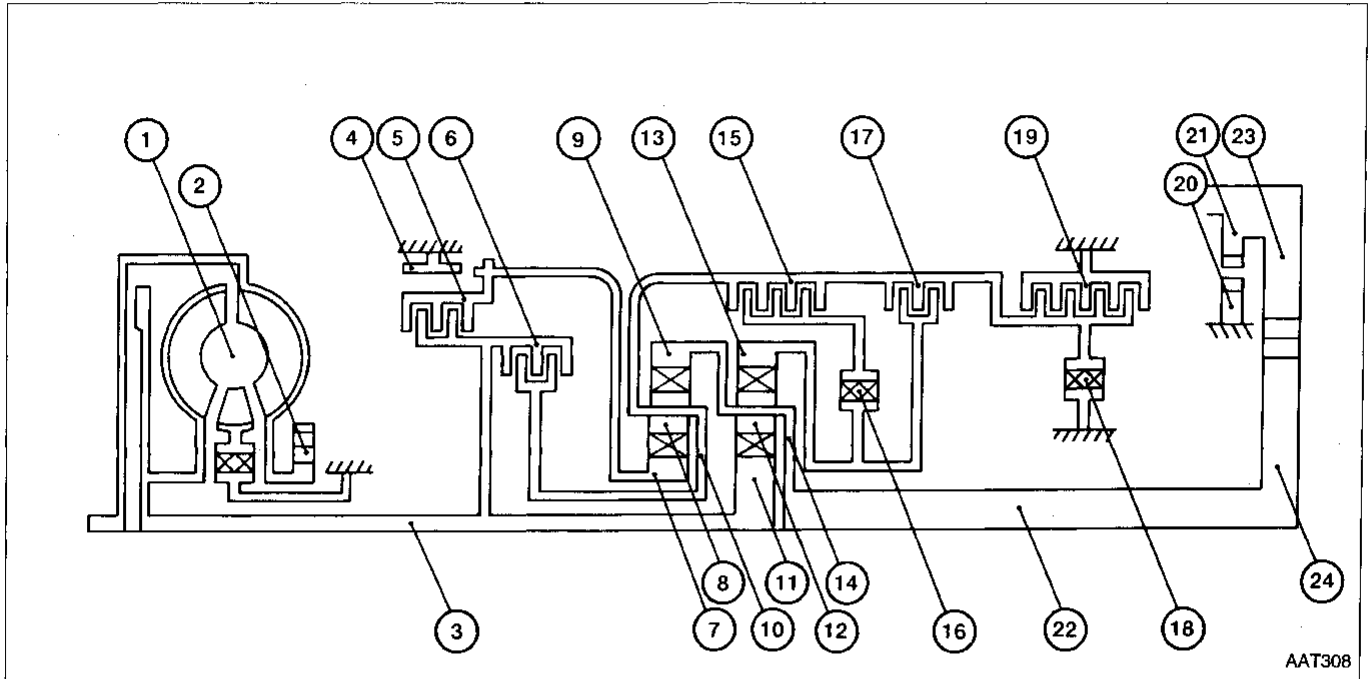

- ① Torque converter
- ② Oil pump
- ③ Input shaft
- ④ Brake band
- ⑤ Reverse clutch
- ⑥ High clutch
- ⑦ Front sun gear
- ⑧ Front pinion gear

- ⑨ Front internal gear
- ⑩ Rear planetary carrier
- ⑪ Rear sun gear
- ⑫ Rear pinion gear
- ⑬ Rear internal gear
- ⑭ Rear planetary carrier
- ⑮ Forward clutch
- ⑯ Forward one-way clutch

- ⑰ Overrun clutch
- ⑱ Low one-way clutch
- ⑲ Low & reverse brake
- ⑳ Parking pawl
- ㉑ Parking gear
- ㉒ Output shaft
- ㉓ Idler gear
- ㉔ Output gear

GI
MA
EM
LC
EF &
EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

DESCRIPTION

Shift Mechanism (Cont'd)

FUNCTION OF CLUTCH AND BRAKE

Control members	Function
Reverse clutch	To transmit input power to front sun gear.
High clutch	To transmit input power to front planetary carrier.
Forward clutch	To connect front planetary carrier with forward one-way clutch.
Overrun clutch	To connect front planetary carrier with rear internal gear.
Brake band	To lock front sun gear.
Forward one-way clutch	When forward clutch is engaged, to stop rear internal gear from rotating in opposite direction against engine revolution.
Low one-way clutch	To stop front planetary carrier from rotating in opposite direction against engine revolution.
Low & reverse brake	To lock front planetary carrier.

OPERATION OF CLUTCH AND BRAKE

Shift position	Reverse clutch	High clutch	Forward clutch	Overrun clutch	Band servo			Forward one-way clutch	Low one-way clutch	Low & reverse brake	Lock-up	Remarks
					2nd apply	3rd release	4th apply					
P												PARK
R	○									○		REVERSE
N												NEUTRAL
D*4	1st		○	*1◎				●	●			Automatic shift 1 ↔ 2 ↔ 3 ↔ 4
	2nd		○	*1◎	○			●				
	3rd		○	○	*1◎	*2(X)	(X)				○	
	4th		○	(X)		*3(X)	(X)	○			○	
2	1st		○	○				●	●			Automatic shift 1 ↔ 2 ← 3
	2nd		○	○	○			●				
1	1st		○	○				●		○		Locks (held stationary) in 1st speed 1 ← 2 ← 3
	2nd		○	○	○			●				

*1: Operates when overdrive switch is in "OFF" position.

*2: Oil pressure is applied to both 2nd "apply" side and 3rd "release" side of band servo piston. However, brake band does not contract because oil pressure area on the "release" side is greater than that on the "apply" side.

*3: Oil pressure is applied to 4th "apply" side in condition *2 above, and brake band contracts.

*4: A/T will not shift to 4th when overdrive switch is in "OFF" position.

○: Operates

◎: Operates when throttle position is less than 3/16.


●: Operates during "progressive" acceleration.

(X): Operates but does not affect power transmission.


Control System

OUTLINE

The RE4F04A and RE4F04V automatic transaxles sense vehicle operating conditions through various sensors. They always control the optimum shaft position and reduce shifting and lock-up shocks.

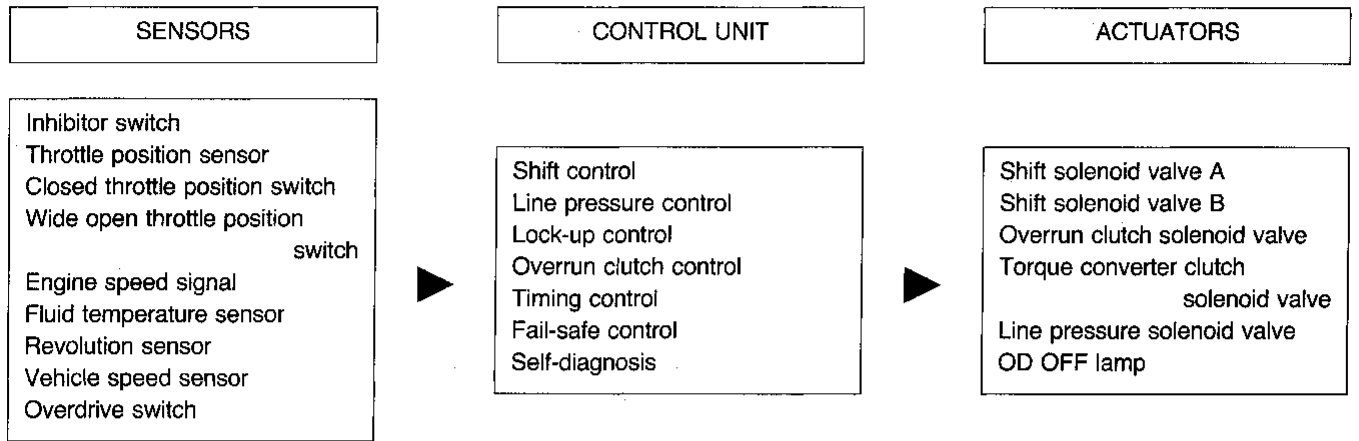

CONTROL SYSTEM

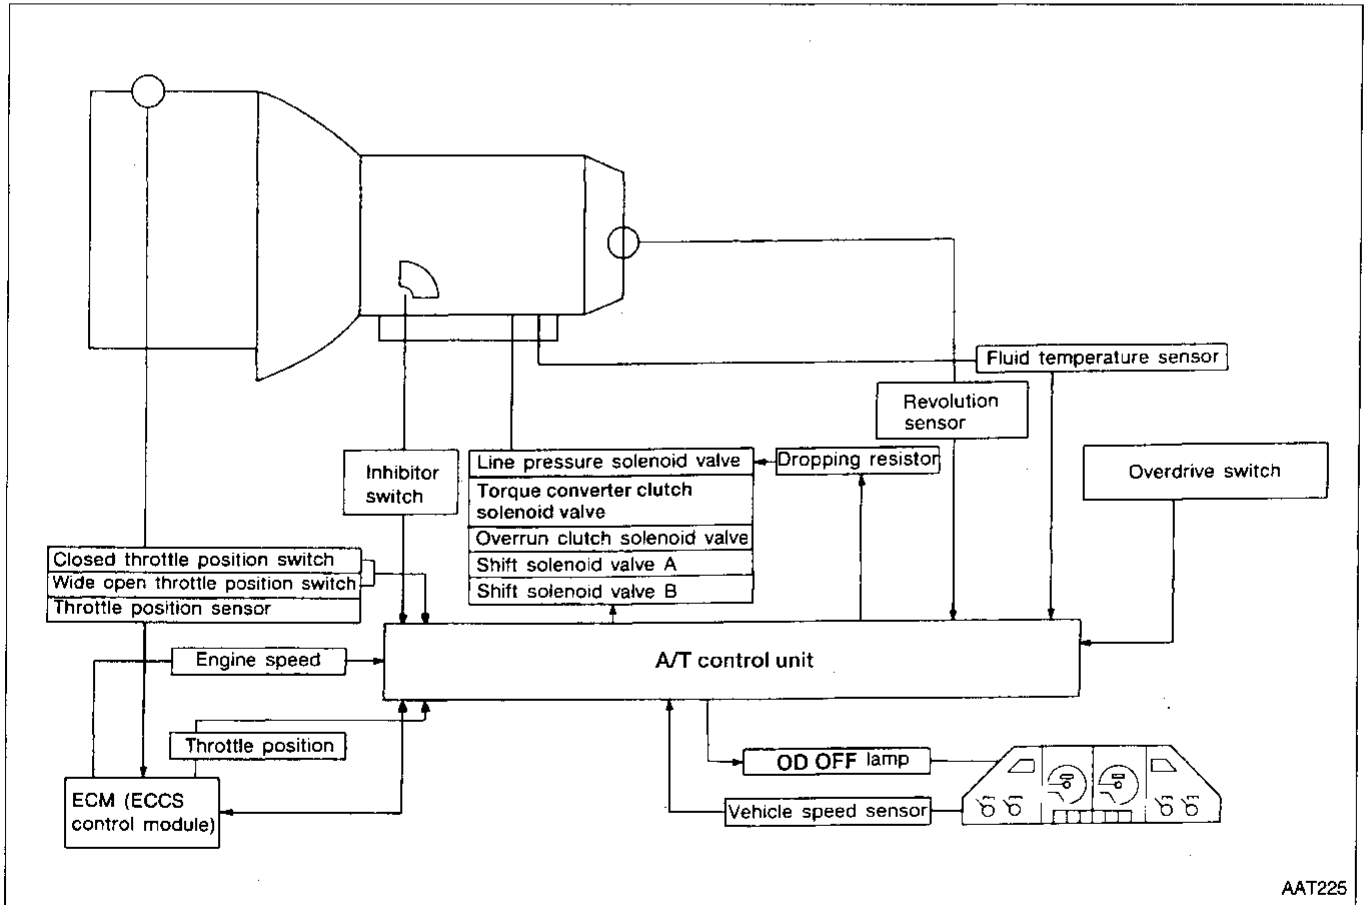

AAT225

DESCRIPTION

Control System (Cont'd)

A/T CONTROL UNIT FUNCTION

The A/T control unit receives signals sent from various switches and sensors, determines required line pressure, shifting point, lock-up operation, engine brake operation, and sends required signals to the respective solenoids.


INPUT/OUTPUT SIGNAL OF A/T CONTROL UNIT

	Sensors and solenoid valves	Function
Input	Inhibitor switch	Detects select lever position and sends a signal to A/T control unit.
	Throttle position sensor	Detects throttle valve position and sends a signal to A/T control unit.
	Closed throttle position switch	Detects throttle valve's fully-closed position and sends a signal to A/T control unit.
	Wide open throttle position switch	Detects a throttle valve position of greater than 1/2 of full throttle should throttle sensor malfunction and sends a signal to A/T control unit.
	Engine speed signal	From ECM (ECCS control module).
	Fluid temperature sensor	Detects transaxle fluid temperature and sends a signal to A/T control unit.
	Revolution sensor	Detects output shaft rpm and sends a signal to A/T control unit.
	Vehicle speed sensor	Used as an auxiliary vehicle speed sensor. Sends a signal when revolution sensor (installed on transaxle) malfunctions.
	Overdrive switch	Detects full throttle position (accelerator pedal fully depressed). Sends a signal to A/T control unit when throttle position sensor malfunctions.
Output	Shift solenoid valve A/B	Selects shifting point suited to driving conditions in relation to a signal sent from A/T control unit.
	Line pressure solenoid valve	Regulates (or decreases) line pressure suited to driving conditions in relation to a signal sent from A/T control unit.
	Torque converter clutch solenoid valve	Regulates (or decreases) line pressure suited to driving conditions in relation to a signal sent from A/T control unit.
	Overrun clutch solenoid valve	Controls an "engine brake" effect suited to driving conditions in relation to a signal sent from A/T control unit.
	OD OFF lamp	Shows A/T control unit faults, when A/T control components malfunction.

TROUBLE DIAGNOSES

How to Perform Trouble Diagnoses for Quick and Accurate Repair

WORK FLOW

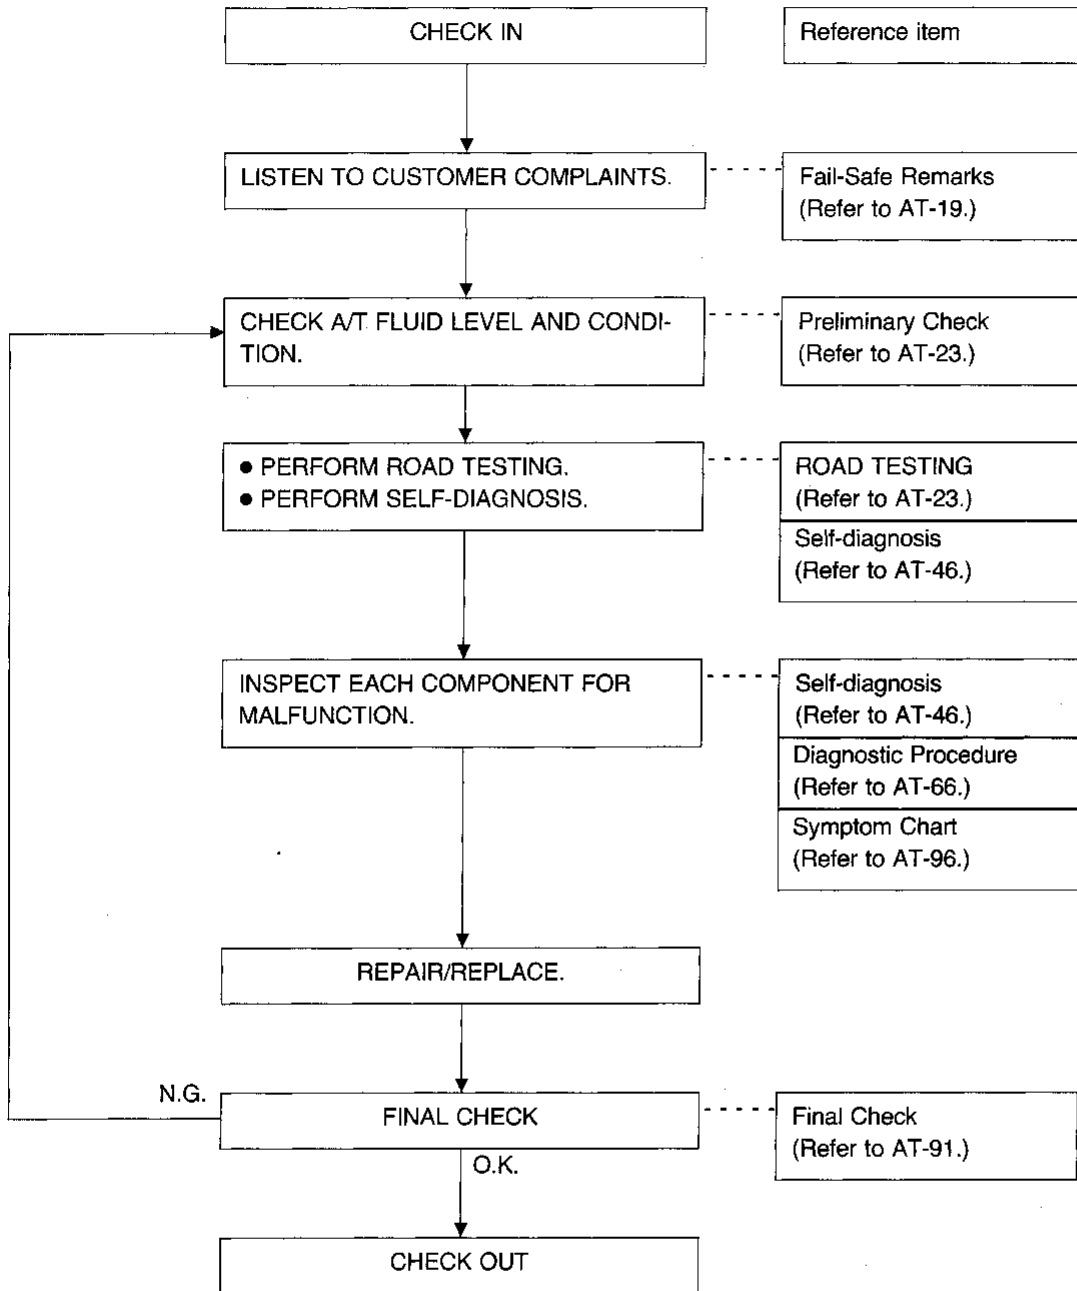

GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

TROUBLE DIAGNOSES

How to Perform Trouble Diagnoses for Quick and Accurate Repair (Cont'd)

DIAGNOSTIC WORKSHEET

1.	<input type="checkbox"/> Read the Fail-safe Remarks and listen to customer complaints.	AT-19			
2.	<input type="checkbox"/> CHECK A/T FLUID <input type="checkbox"/> Leakage (Follow specified procedure) <input type="checkbox"/> Fluid condition <input type="checkbox"/> Fluid level	AT-23	MA EM		
3.	<input type="checkbox"/> Perform all ROAD TESTING and mark required procedures.	AT-23			
	3-1 Check before engine is started. <input type="checkbox"/> SELF-DIAGNOSTIC PROCEDURE — Mark detected items. <table style="width: 100%; border: none;"> <tr> <td style="width: 50%; vertical-align: top;"> <input type="checkbox"/> 1. Revolution sensor <input type="checkbox"/> 2. Vehicle speed sensor <input type="checkbox"/> 3. Throttle position sensor <input type="checkbox"/> 4. Shift-solenoid valve A <input type="checkbox"/> 5. Shift-solenoid valve B <input type="checkbox"/> 6. Overrun clutch solenoid valve <input type="checkbox"/> 7. Torque converter clutch solenoid valve </td> <td style="width: 50%; vertical-align: top;"> <input type="checkbox"/> 8. Fluid temperature sensor and A/T control unit power source <input type="checkbox"/> 9. Engine speed signal <input type="checkbox"/> 10. Line pressure solenoid valve <input type="checkbox"/> 11. Engine control circuit <input type="checkbox"/> 12. Battery <input type="checkbox"/> 13. Others </td> </tr> </table> <input type="checkbox"/> Diagnostic Procedure 1 (OD OFF lamp is working properly)	<input type="checkbox"/> 1. Revolution sensor <input type="checkbox"/> 2. Vehicle speed sensor <input type="checkbox"/> 3. Throttle position sensor <input type="checkbox"/> 4. Shift-solenoid valve A <input type="checkbox"/> 5. Shift-solenoid valve B <input type="checkbox"/> 6. Overrun clutch solenoid valve <input type="checkbox"/> 7. Torque converter clutch solenoid valve	<input type="checkbox"/> 8. Fluid temperature sensor and A/T control unit power source <input type="checkbox"/> 9. Engine speed signal <input type="checkbox"/> 10. Line pressure solenoid valve <input type="checkbox"/> 11. Engine control circuit <input type="checkbox"/> 12. Battery <input type="checkbox"/> 13. Others	AT-24	LC EF & EC FE CL
<input type="checkbox"/> 1. Revolution sensor <input type="checkbox"/> 2. Vehicle speed sensor <input type="checkbox"/> 3. Throttle position sensor <input type="checkbox"/> 4. Shift-solenoid valve A <input type="checkbox"/> 5. Shift-solenoid valve B <input type="checkbox"/> 6. Overrun clutch solenoid valve <input type="checkbox"/> 7. Torque converter clutch solenoid valve	<input type="checkbox"/> 8. Fluid temperature sensor and A/T control unit power source <input type="checkbox"/> 9. Engine speed signal <input type="checkbox"/> 10. Line pressure solenoid valve <input type="checkbox"/> 11. Engine control circuit <input type="checkbox"/> 12. Battery <input type="checkbox"/> 13. Others				
	3.2. Check at idle <input type="checkbox"/> Diagnostic Procedure 2 (Engine starts only in P and N positions) <input type="checkbox"/> Diagnostic Procedure 3 (In P position, vehicle does not move when pushed) <input type="checkbox"/> Diagnostic Procedure 4 (In N position, vehicle moves when pushed) <input type="checkbox"/> Diagnostic Procedure 5 (Select shock. N → R position) <input type="checkbox"/> Diagnostic Procedure 6 (Vehicle creeps backward in R position) <input type="checkbox"/> Diagnostic Procedure 7 (Vehicle creeps forward in D, 2 or 1 position)	AT-25	MT AT		
	3.3. Cruise test Part-1 <input type="checkbox"/> Diagnostic Procedure 8 (Vehicle starts from D ₁) <input type="checkbox"/> Diagnostic Procedure 9 <input type="checkbox"/> Diagnostic Procedure 10 } (A/T shift schedule: D ₁ → D ₂ / D ₂ → D ₃ / D ₃ → D ₄) <input type="checkbox"/> Diagnostic Procedure 11 <input type="checkbox"/> Diagnostic Procedure 12 (Shift schedule: Lock-up) <input type="checkbox"/> Diagnostic Procedure 13 (Lock-up condition more than 30 seconds) <input type="checkbox"/> Diagnostic Procedure 14 (Lock-up released) <input type="checkbox"/> Diagnostic Procedure 15 (Engine speed return to idle. Light braking D ₄ → D ₃)	AT-27	FA RA BR ST		

GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

TROUBLE DIAGNOSES

How to Perform Trouble Diagnoses for Quick and Accurate Repair (Cont'd)

	<p>Part-2</p> <ul style="list-style-type: none"> <input type="checkbox"/> Diagnostic Procedure 16 (Vehicle starts from D₁) <input type="checkbox"/> Diagnostic Procedure 9 (Kickdown: D₄ → D₂) <input type="checkbox"/> Diagnostic Procedure 10 (Shift schedule: D₂ → D₃) <input type="checkbox"/> Diagnostic Procedure 11 (Shift schedule: D₃ → D₄) 	AT-33		
	<p>Part-3</p> <ul style="list-style-type: none"> <input type="checkbox"/> Diagnostic Procedure 17 (D₄ → D₃ when overdrive switch ON → OFF position) <input type="checkbox"/> Diagnostic Procedure 15 (Engine brake in D₃) <input type="checkbox"/> Diagnostic Procedure 18 (D₃ → D₂ when selector lever D → 2 position) <input type="checkbox"/> Diagnostic Procedure 15 (Engine brake in 2₂) <input type="checkbox"/> Diagnostic Procedure 19 (2₂ (1₂) → 1₁, when selector lever 2 → 1 position) <input type="checkbox"/> Diagnostic Procedure 20 (Engine brake in 1₁) <input type="checkbox"/> SELF-DIAGNOSTIC PROCEDURE — Mark detected items. <table style="width: 100%; border: none;"> <tr> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> <input type="checkbox"/> 1. Revolution sensor <input type="checkbox"/> 2. Vehicle speed sensor <input type="checkbox"/> 3. Throttle position sensor <input type="checkbox"/> 4. Shift-solenoid valve A <input type="checkbox"/> 5. Shift-solenoid valve B <input type="checkbox"/> 6. Overrun clutch solenoid valve <input type="checkbox"/> 7. Torque converter clutch solenoid valve </td> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> <input type="checkbox"/> 8. Fluid temperature sensor and A/T control unit power source <input type="checkbox"/> 9. Engine speed signal <input type="checkbox"/> 10. Line pressure solenoid valve <input type="checkbox"/> 11. Engine control circuit <input type="checkbox"/> 12. Battery <input type="checkbox"/> 13. Others </td> </tr> </table> 	<ul style="list-style-type: none"> <input type="checkbox"/> 1. Revolution sensor <input type="checkbox"/> 2. Vehicle speed sensor <input type="checkbox"/> 3. Throttle position sensor <input type="checkbox"/> 4. Shift-solenoid valve A <input type="checkbox"/> 5. Shift-solenoid valve B <input type="checkbox"/> 6. Overrun clutch solenoid valve <input type="checkbox"/> 7. Torque converter clutch solenoid valve 	<ul style="list-style-type: none"> <input type="checkbox"/> 8. Fluid temperature sensor and A/T control unit power source <input type="checkbox"/> 9. Engine speed signal <input type="checkbox"/> 10. Line pressure solenoid valve <input type="checkbox"/> 11. Engine control circuit <input type="checkbox"/> 12. Battery <input type="checkbox"/> 13. Others 	AT-35
<ul style="list-style-type: none"> <input type="checkbox"/> 1. Revolution sensor <input type="checkbox"/> 2. Vehicle speed sensor <input type="checkbox"/> 3. Throttle position sensor <input type="checkbox"/> 4. Shift-solenoid valve A <input type="checkbox"/> 5. Shift-solenoid valve B <input type="checkbox"/> 6. Overrun clutch solenoid valve <input type="checkbox"/> 7. Torque converter clutch solenoid valve 	<ul style="list-style-type: none"> <input type="checkbox"/> 8. Fluid temperature sensor and A/T control unit power source <input type="checkbox"/> 9. Engine speed signal <input type="checkbox"/> 10. Line pressure solenoid valve <input type="checkbox"/> 11. Engine control circuit <input type="checkbox"/> 12. Battery <input type="checkbox"/> 13. Others 			
4.	<ul style="list-style-type: none"> <input type="checkbox"/> Perform the Diagnostic Procedures marked in ROAD TESTING. Refer to the Symptom Chart when you perform the procedures. (The chart also shows some other possible symptoms and the components inspection orders.) 	AT-96		
5.	<p>Perform FINAL CHECK. If NG, go back to "CHECK A/T FLUID".</p> <ul style="list-style-type: none"> <input type="checkbox"/> Stall test — Mark possible damaged components/others. <table style="width: 100%; border: none;"> <tr> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> <input type="checkbox"/> Torque converter one-way clutch <input type="checkbox"/> Reverse clutch <input type="checkbox"/> Forward clutch <input type="checkbox"/> Overrun clutch <input type="checkbox"/> Forward one-way clutch <input type="checkbox"/> Low & reverse brake </td> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> <input type="checkbox"/> Low one-way clutch <input type="checkbox"/> Engine <input type="checkbox"/> Line pressure is low <input type="checkbox"/> Clutches and brakes except high clutch and brake band are O.K. </td> </tr> </table> <input type="checkbox"/> Pressure test — Suspected parts: 	<ul style="list-style-type: none"> <input type="checkbox"/> Torque converter one-way clutch <input type="checkbox"/> Reverse clutch <input type="checkbox"/> Forward clutch <input type="checkbox"/> Overrun clutch <input type="checkbox"/> Forward one-way clutch <input type="checkbox"/> Low & reverse brake 	<ul style="list-style-type: none"> <input type="checkbox"/> Low one-way clutch <input type="checkbox"/> Engine <input type="checkbox"/> Line pressure is low <input type="checkbox"/> Clutches and brakes except high clutch and brake band are O.K. 	AT-91
<ul style="list-style-type: none"> <input type="checkbox"/> Torque converter one-way clutch <input type="checkbox"/> Reverse clutch <input type="checkbox"/> Forward clutch <input type="checkbox"/> Overrun clutch <input type="checkbox"/> Forward one-way clutch <input type="checkbox"/> Low & reverse brake 	<ul style="list-style-type: none"> <input type="checkbox"/> Low one-way clutch <input type="checkbox"/> Engine <input type="checkbox"/> Line pressure is low <input type="checkbox"/> Clutches and brakes except high clutch and brake band are O.K. 			

Remarks

FAIL-SAFE

The A/T control unit has an electronic Fail-Safe (limp home mode) to allow the vehicle to be driven even in the event of damage to a major electrical input or output device circuit.

In this condition, the vehicle runs in third gear in positions 1, 2 or D and will not upshift. Customer may say "Sluggish, poor acceleration."

When Fail-Safe operation occurs, the next time the key is turned to the "ON" position the OD OFF lamp will blink for about 8 seconds. For diagnosis, refer to AT-24.

If the vehicle is driven under extreme conditions such as excessive wheel spinning and emergency braking suddenly after, Fail-Safe may be activated even if all electrical circuits are undamaged.

In this case, normal shift pattern can be returned by turning the ignition key OFF for 3 seconds and then back ON.

The blinking of the OD OFF lamp for about 8 seconds will appear only once and be cleared. The customer may resume normal driving conditions by chance.

Always follow the "WORK FLOW" (Refer to AT-15).

The SELF DIAGNOSIS results will be as follows:

The first SELF DIAGNOSIS will indicate the damage of the vehicle speed sensor or the revolution sensor.

During the next SELF DIAGNOSIS performed after checking the sensors, no damages will be indicated.

ATF COOLER SERVICE

If foreign matter is found to accumulate in the oil pan in large quantities during overhaul or the strainer is excessively clogged, the ATF cooler must be serviced as follows:

KA24DE engine (RE4F04A/V) ... fin type cooler

Replace radiator lower tank (which includes ATF cooler) with a new one and flush cooler line using cleaning solvent and compressed air.

GI
MA
EM
LC
EF &
EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
DX

TROUBLE DIAGNOSES

Diagnosis by CONSULT

NOTICE

1. The CONSULT displays shift timing and lock-up timing (that is, operation timing of each solenoid). When a noticeable time difference occurs between shift timing (indicated by shift shock) and the CONSULT display, then mechanical parts (except solenoid valves, sensors, etc.) are considered to be malfunctioning. Check mechanical parts using applicable diagnostic procedures.
2. Shift schedule (which implies gear position) displayed on CONSULT and that indicated in Service Manual may differ slightly. This occurs because of the following reasons:
 - Actual shift schedule has more or less tolerance or allowance than design specification.
 - Shift schedule indicated in Service Manual refers to the point where shifts starts, and gear position displayed on CONSULT indicates the point where shifts are completed.
3. Shift solenoid valve "A" or "B" is displayed on CONSULT at the start of shifting, while gear position is displayed upon completion of shifting (which is computed by the A/T control unit).
4. Additional CONSULT information can be found in Operation Manual supplied with CONSULT unit.

APPLICATION

Item	Display	Monitor item		Description	Remarks
		ECU input signals	Main signals		
Vehicle speed sensor 1 (A/T) (Revolution sensor)	VHCL/S SE-A/T [km/h] or [mph]	X	—	● Vehicle speed computed from signal of revolution sensor is displayed.	When racing engine in N or P position, meter will not indicate 0 km/h (0 mph) even if vehicle is stationary.
Vehicle speed sensor 2 (Meter)	VHCL/S SE-MTR [km/h] or [mph]	X	—	● Vehicle speed computed from signal of vehicle speed sensor is displayed.	Error may occur under approx. 10 km/h (approx. 6 mph) and meter will not indicate 0 km/h (0 mph) even if vehicle is stationary.
Throttle position sensor	THRTL POS SEN [V]	X	—	● Throttle position sensor signal voltage is displayed.	
Fluid temperature sensor	FLUID TEMP SE [V]	X	—	● Fluid temperature sensor signal voltage is displayed. ● Signal voltage lowers as fluid temperature rises.	
Battery voltage	BATTERY VOLT [V]	X	—	● Source voltage of control unit is displayed.	
Engine speed (rpm)	ENGINE SPEED [rpm]	X	X	● Engine speed, computed from engine speed signal, is displayed.	Error may occur under approx. 800 rpm and meter will not indicate 0 rpm even if engine is not running.
Overdrive switch	OVERDRIVE SW [ON/OFF]	X	—	● ON/OFF status, computed from signal of overdrive SW, is displayed.	
P/N position switch	P/N POSI SW [ON/OFF]	X	—	● ON/OFF status, computed from signal of P/N position SW, is displayed.	
R position switch	R POSITION SW [ON/OFF]	X	—	● ON/OFF status, computed from signal of R position SW, is displayed.	
D position switch	D POSITION SW [ON/OFF]	X	—	● ON/OFF status, computed from signal of D position SW, is displayed.	
2 position switch	2 POSITION SW [ON/OFF]	X	—	● ON/OFF status, computed from signal of 2 position SW, is displayed.	

TROUBLE DIAGNOSES

Diagnosis by CONSULT (Cont'd)

Item	Display	Monitor item		Description	Remarks
		ECU input signals	Main signals		
1 position switch	1 POSITION SW [ON/OFF]	X	—	● ON/OFF status, computed from signal of 1 position SW, is displayed.	
ASCD-cruise signal	ASCD-CRUISE [ON/OFF]	X	—	● Status of ASCD cruise signal is displayed. ON ... Cruising state OFF ... Normal running state	● This is displayed even when no ASCD is mounted.
ASCD-OD cut signal	ASCD-OD CUT [ON/OFF]	X	—	● Status of ASCD-OD release signal is displayed. ON ... OD released OFF ... OD not released	● This is displayed even when no ASCD is mounted.
Kickdown switch	KICKDOWN SW [ON/OFF]	X	—	● ON/OFF status, computed from signal of kickdown SW, is displayed.	● This is displayed even when no kickdown SW is equipped.
Closed throttle position switch	CLOSED THL/SW [ON/OFF]	X	—	● ON/OFF status, computed from signal of closed throttle position SW, is displayed.	
Wide open throttle position switch	W/O THRL/P-SW [ON/OFF]	X	—	● ON/OFF status, computed from signal of wide open throttle position SW, is displayed.	
Gear position	GEAR	—	X	● Gear position data used for computation by control unit, is displayed.	
Selector lever position	SLCT LVR POSI	—	X	● Selector lever position data, used for computation by control unit, is displayed.	● A specific value used for control is displayed if fail-safe is activated due to error.
Vehicle speed	VEHICLE SPEED [km/h] or [mph]	—	X	● Vehicle speed data, used for computation by control unit, is displayed.	
Throttle position	THROTTLE POSI [8]	—	X	● Throttle position data, used for computation by control unit, is displayed.	● A specific value used for control is displayed if fail-safe is activated due to error.
Line-pressure solenoid valve duty	LINE PRES DTY [%]	—	X	● Control value of line pressure solenoid valve, computed by control unit from each input signal, is displayed.	
Torque converter clutch solenoid valve duty	TCC S/V DUTY [%]	—	X	● Control value of torque converter clutch solenoid valve, computed by control unit from each input signal, is displayed.	
Shift solenoid valve A	SHIFT SL/V A [ON/OFF]	—	X	● Control value of shift solenoid valve A, computed by control unit from each input signal, is displayed.	Control value of solenoid is displayed even if solenoid circuit is disconnected. The "OFF" signal is displayed if solenoid circuit is shorted.
Shift solenoid valve B	SHIFT SL/V B [ON/OFF]	—	X	● Control value of shift solenoid valve B, computed by control unit from each input signal, is displayed.	

TROUBLE DIAGNOSES

Diagnosis by CONSULT (Cont'd)

Item	Display	Monitor item		Description	Remarks
		ECU input signals	Main signals		
Overrun clutch solenoid valve	OVERRUN/C S/V [ON/OFF]	—	X	<ul style="list-style-type: none"> Control value of overrun clutch solenoid valve computed by control unit from each input signal, is displayed. 	
Power shift switch	POWERSHIFT SW	X	—	<ul style="list-style-type: none"> ON/OFF status, computed from signal of power shift SW, is displayed. 	<ul style="list-style-type: none"> This is displayed even when no power SW is equipped. On vehicles with power SW mounted on lever, this item is invalid although displayed.
Hold mode switch	HOLD SW	X	—	<ul style="list-style-type: none"> ON/OFF status, computed from signal of hold SW, is displayed. 	

X: Applicable

—: Not applicable

Note:


- When select ECU input signals on CONSULT, electronic control unit input signal are set.
- When select main signals on CONSULT, monitored items for understanding the overall operation of the system are set, and this setting is indicated by a reversed display.

DATA ANALYSIS


Item	Display	Condition
Torque converter clutch solenoid valve duty	Approximately 4%	Lock-up "OFF"
	↓ Approximately 94%	↓ Lock-up "ON"
Line pressure solenoid valve duty	Approximately 29%	Low line-pressure (Small throttle opening)
	↓ Approximately 94%	↓ High line-pressure (Large throttle opening)
Throttle position sensor	Approximately 0.5V	Fully-closed throttle
	Approximately 4V	Fully-open throttle
Fluid temperature sensor	Approximately 1.5V	Cold [20°C (68°F)]
	↓ Approximately 0.5V	↓ Hot [80°C (176°F)]

Gear position	1	2	3	4
Shift solenoid valve A	ON	OFF	OFF	ON
Shift solenoid valve B	ON	ON	OFF	OFF


TROUBLE DIAGNOSES

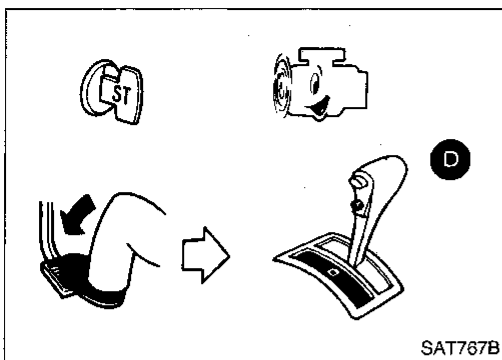

SAT767B

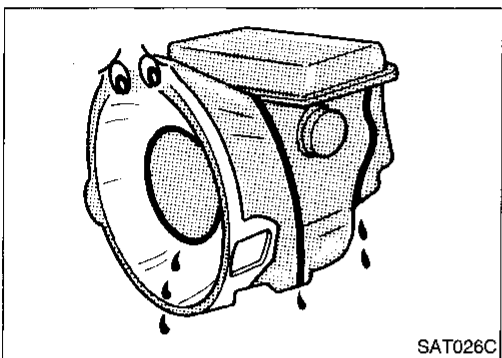

SAT026C

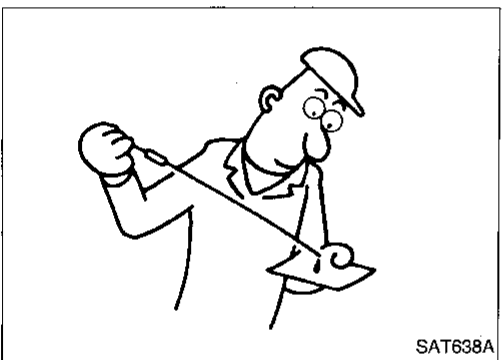

SAT638A

Preliminary Check

A/T FLUID CHECK

Fluid leakage check

1. Clean area suspected of leaking. — for example, mating surface of converter housing and transaxle case.
2. Start engine, apply foot brake, place selector lever in “D” position and wait a few minutes.
3. Stop engine.
4. Check for fresh leakage.

Fluid condition check

Fluid color	Suspected problem
Dark or black with burned odor	Wear of frictional material
Milky pink	Water contamination — Road water entering through filler tube or breather
Varnished fluid, light to dark brown and tacky	Oxidation — Over or under filling — Overheating

If A/T fluid is very dark or smells burned, flush cooling system after repair of A/T. Refer to MA section (“Changing Engine Coolant”, “ENGINE MAINTENANCE”).

If A/T fluid contains frictional material (clutches, band, etc.), replace radiator after repair of A/T. Refer to LC section (“Radiator”, “ENGINE COOLING SYSTEM”).

Fluid level check

Refer to MA section (“Checking A/T Fluid Level”, “CHASSIS AND BODY MAINTENANCE”).

ROAD TEST PROCEDURE

1. Check before engine is started.



2. Check at idle.



3. Cruise test.

SAT786A

ROAD TESTING

Description

- The purpose of this road test is to determine overall performance of automatic transaxle and analyze causes of problems.
- The road test consists of the following three parts:
 1. Check before engine is started
 2. Check at idle
 3. Cruise test

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA





EL

IDX


TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

- Before road test, familiarize yourself with all test procedures and items to check.
- Conduct tests on all items. Troubleshoot items which check out No Good after road test. Refer to AT-46 and AT-66.

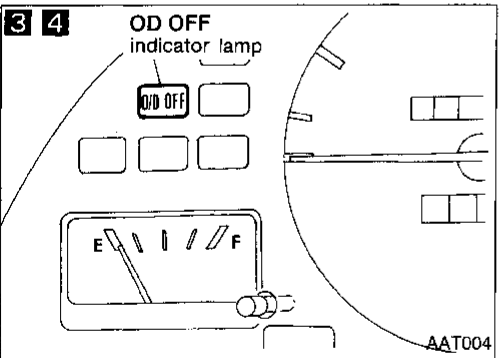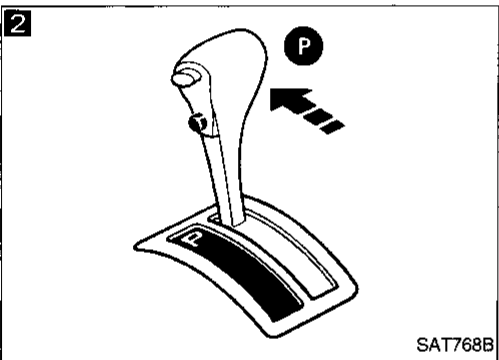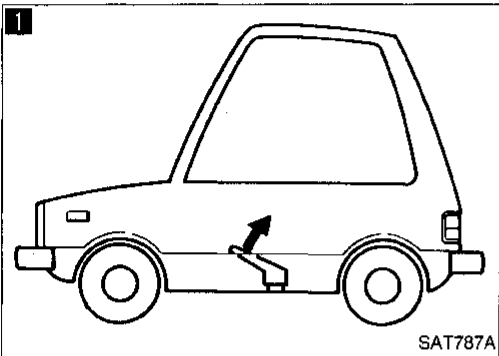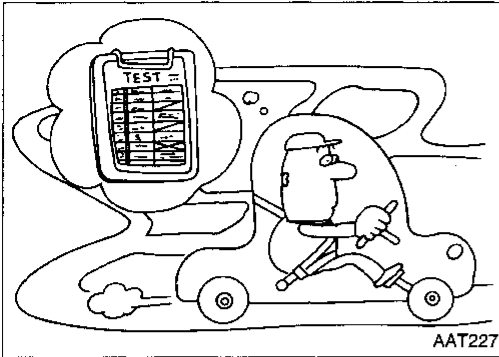







1. Check before engine is started

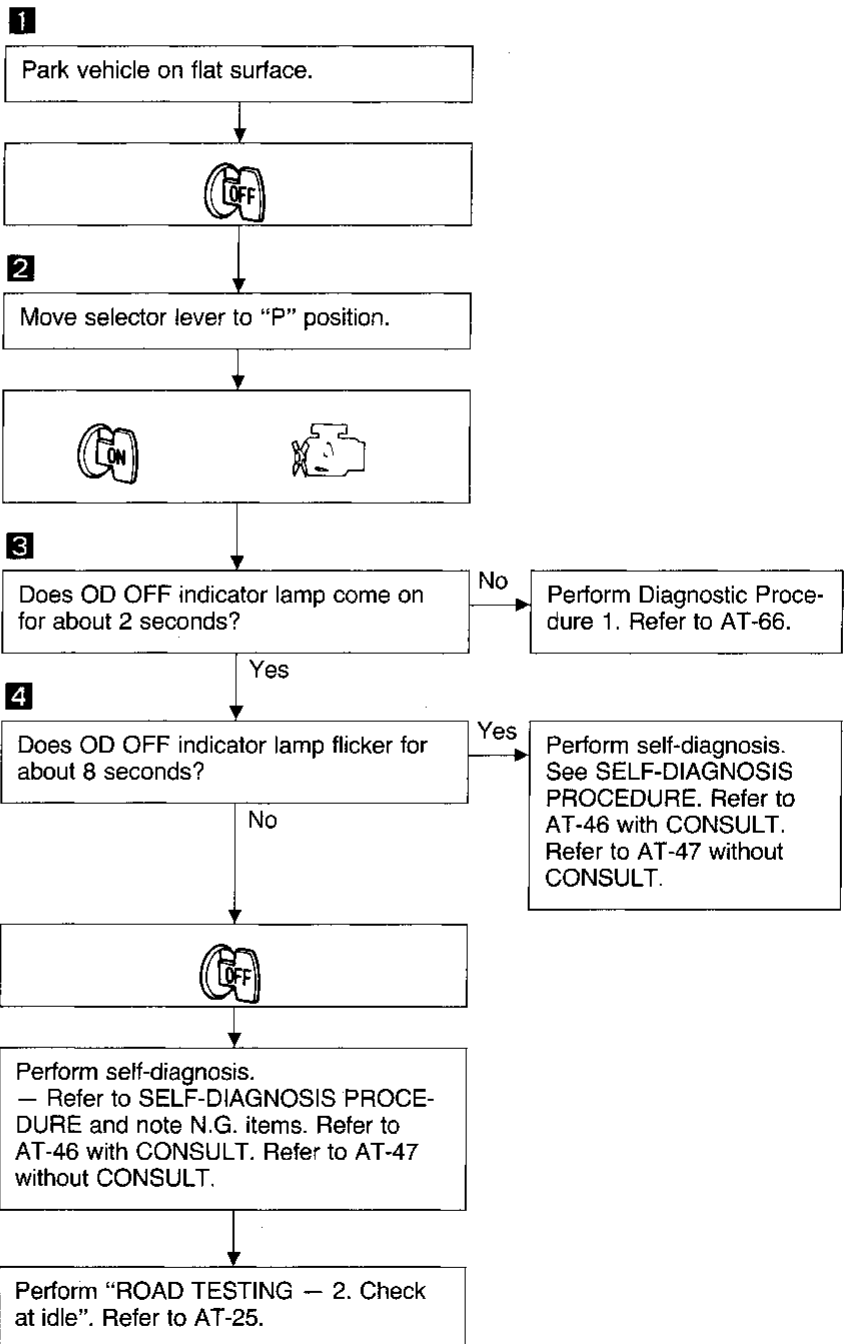

TROUBLE DIAGNOSES

Preliminary Check (Cont'd)







2. Check at idle

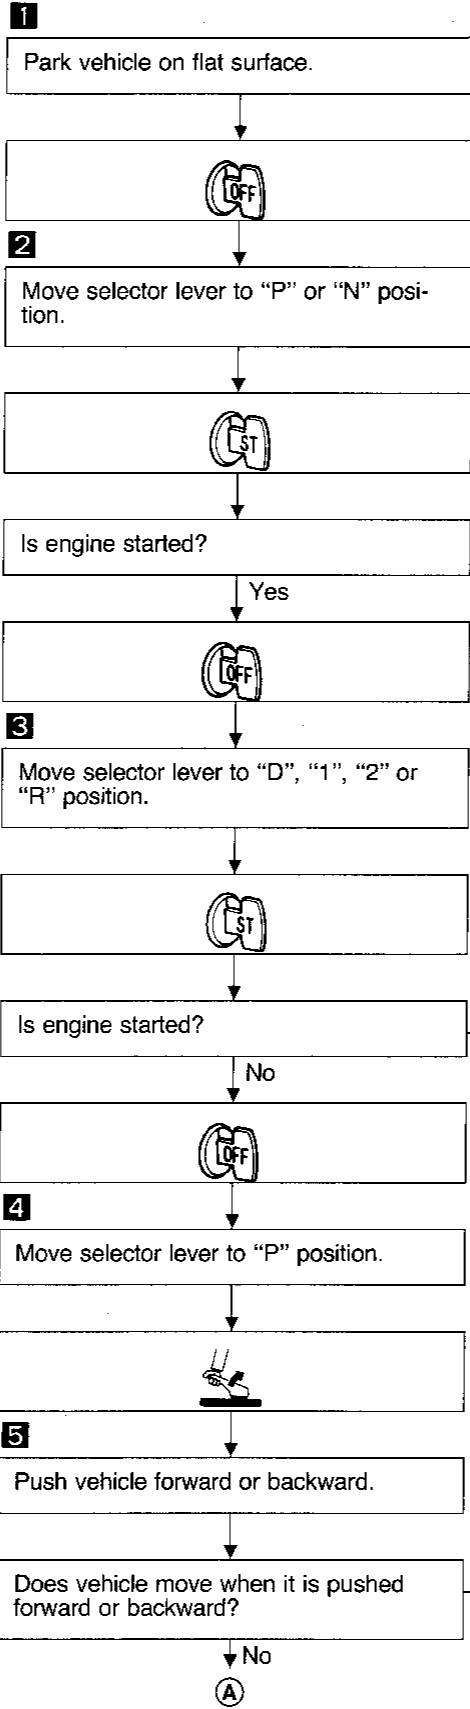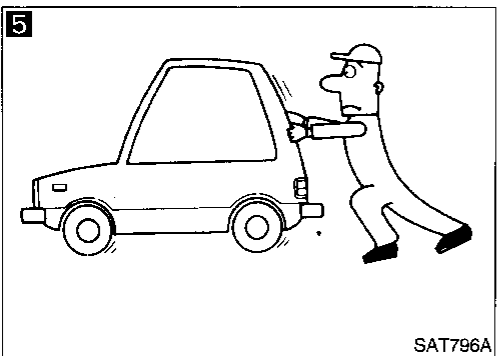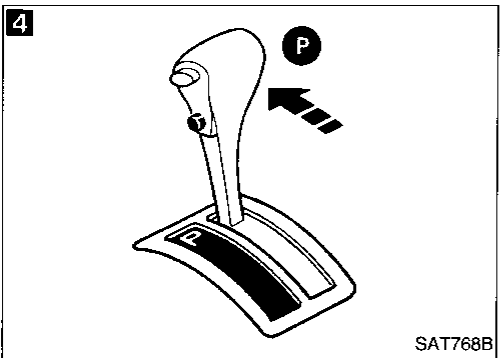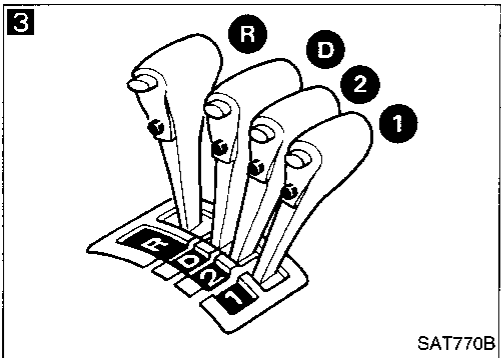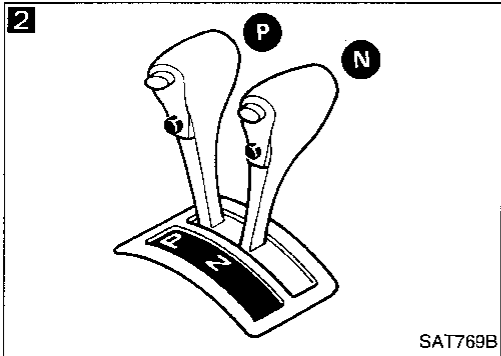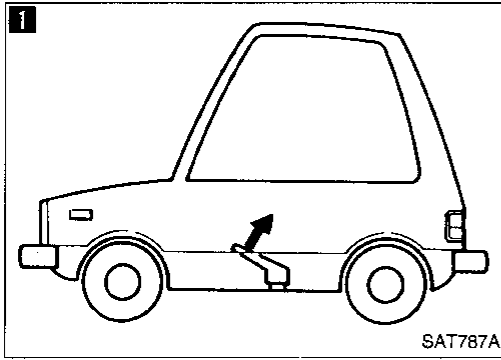


GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

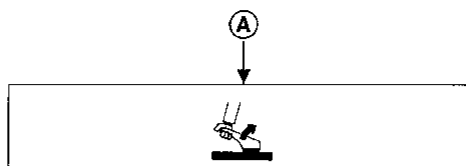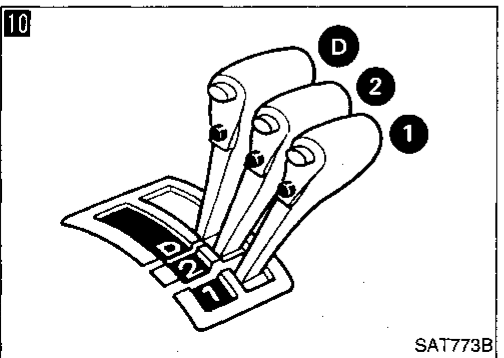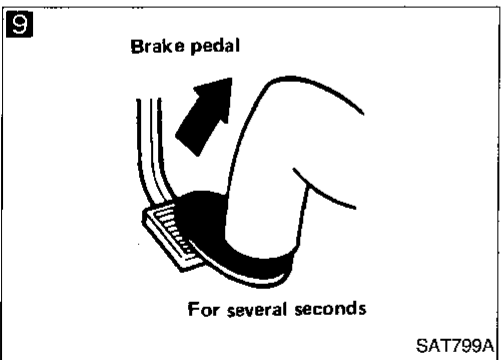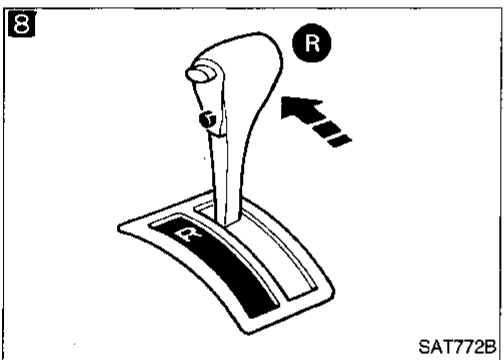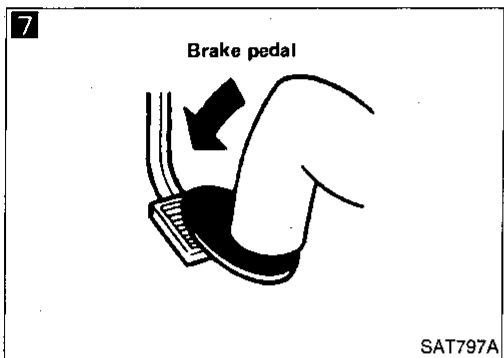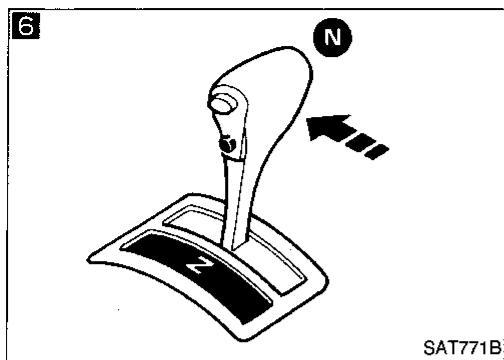

6 Move selector lever to "N" position.



Does vehicle move forward or backward?

Yes → Perform Diagnostic Procedure 4. Refer to AT-68.

No

7 Apply foot brake.

8 Move selector lever to "R" position.

Is there large shock when changing from "N" to "R" position?

Yes → Perform Diagnostic Procedure 5. Refer to AT-69.

No

9 Release service brake for several seconds.

Does vehicle creep backward when foot brake is released?

No → Perform Diagnostic Procedure 6. Refer to AT-70.

Yes

10 Move selector lever to "D", "1" and "2" positions and check if vehicle creeps forward.

Does vehicle creep forward in all three positions?

Yes → Perform Cruise test. Refer to AT-27.

No

Perform Diagnostic Procedure 7. Refer to AT-72.

TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

3. Cruise test

- Check all items listed in Parts 1 through 3.



With CONSULT

- Using CONSULT, conduct a cruise test and record the result.
- Print the result and ensure that shifts and lock-ups take place as per "Shift Schedule."

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR


ST

BF

HA



EL

IDX

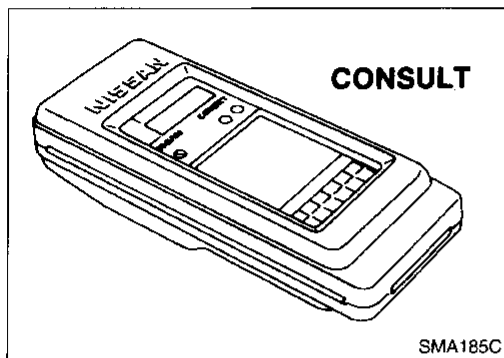


CONSULT setting procedure

1. Turn off ignition switch.
2. Connect "CONSULT" to data link connector for CONSULT. (Data link connector for CONSULT is located in left dash side panel.)

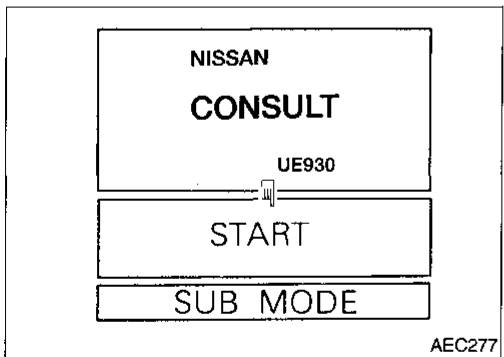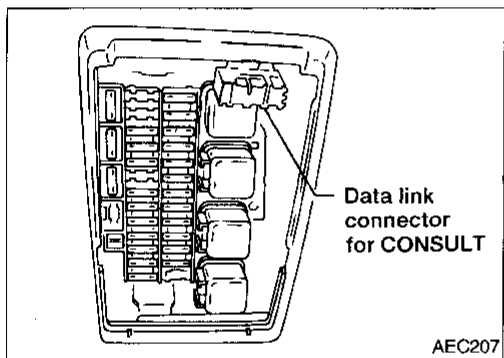

3. Turn on ignition switch.
4. Touch "START".

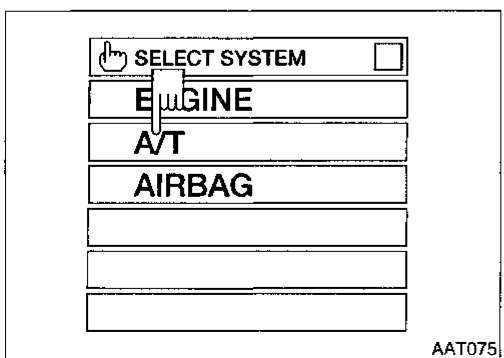


5. Touch "A/T".


TROUBLE DIAGNOSES

Preliminary Check (Cont'd)


6. Touch "DATA MONITOR".

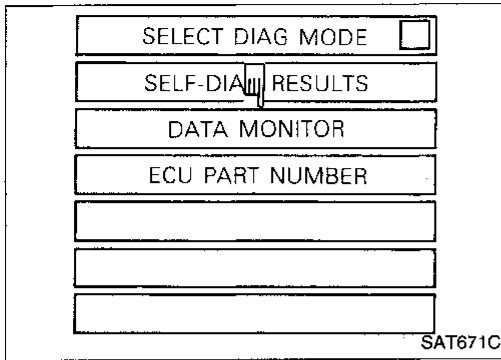

7. Touch "SETTING" to set recording condition.

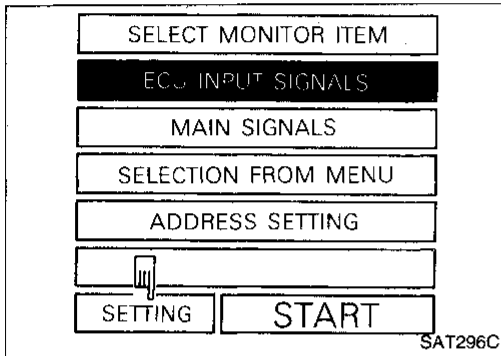


8. Touch "LONG TIME" and "ENTER" key.

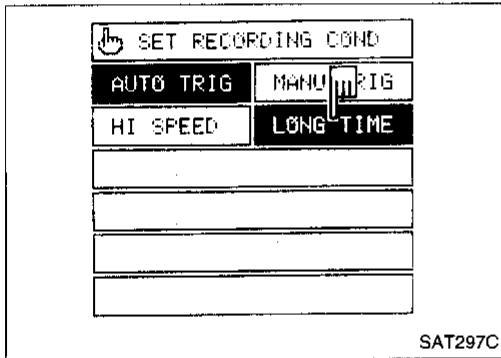


9. Go back to SELECT MONITOR ITEM and touch "MAIN SIGNALS".

10. Touch "START".

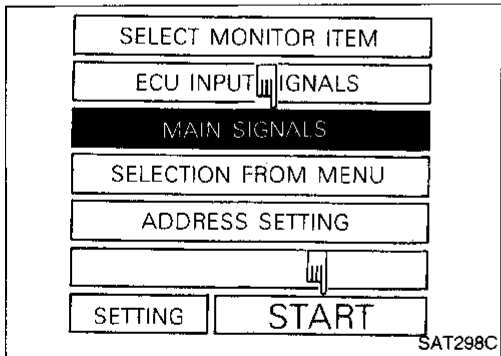


11. When performing cruise test, touch "RECORD".

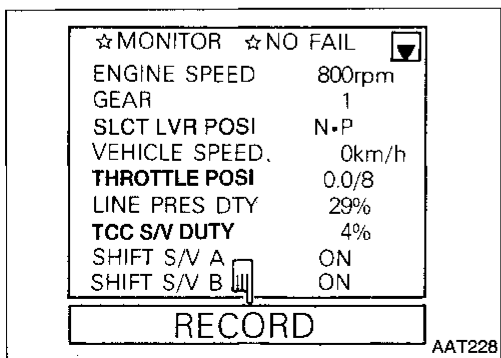


TROUBLE DIAGNOSES

Preliminary Check (Cont'd)


12. After finishing cruise test part 1, touch "STOP".

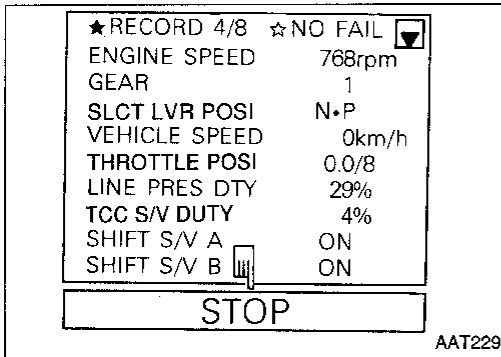


13. Touch "DISPLAY".

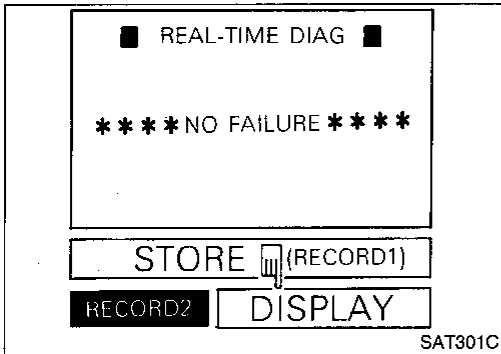

14. Touch "PRINT".

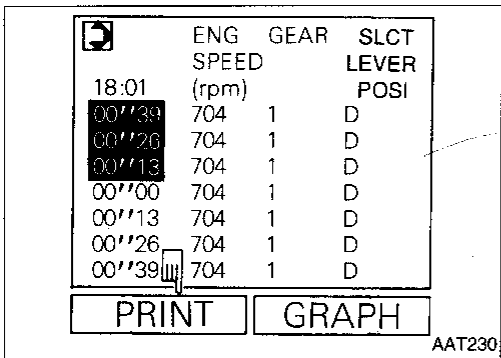


15. Touch "PRINT" again.

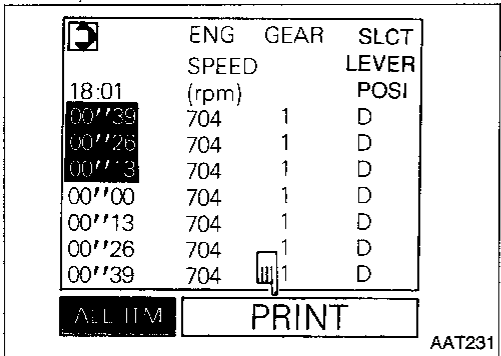

16. Check the monitor data printed out.


17. Continue cruise test part 2 and 3.

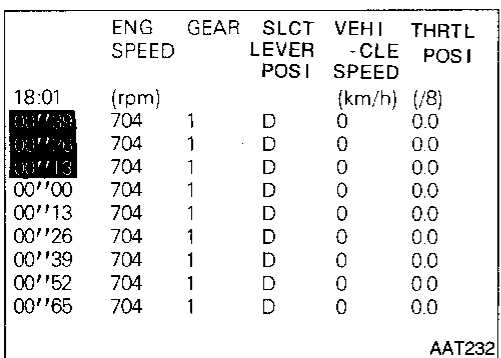

GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX


TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

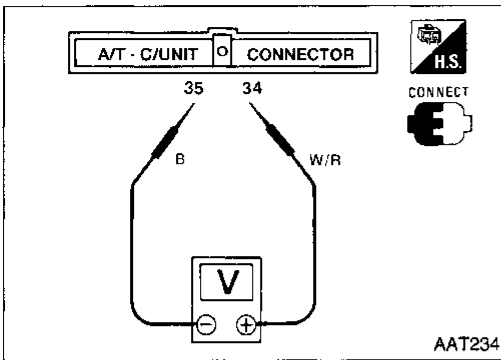

Without CONSULT


- Throttle position can be controlled by voltage across terminals ③④ and ③⑤ of A/T control unit.

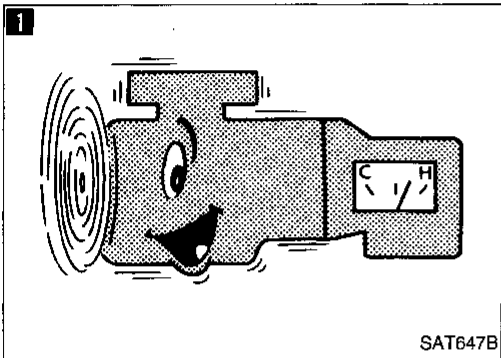

SAT647B

Cruise test — Part 1

1 Warm up engine until engine oil and ATF reach operating temperature after vehicle has been driven approx. 10 minutes.
ATF operating temperature:
 50 - 80°C (122 - 176°F)


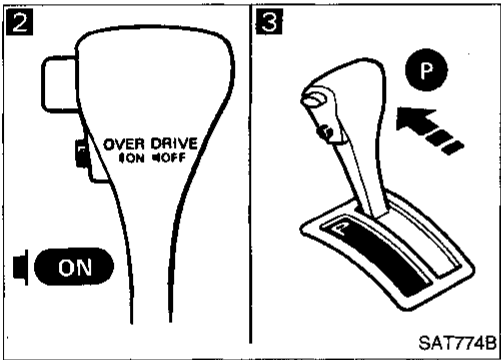


SAT774B

Park vehicle on flat surface.

2 Set overdrive switch to "ON" position.

3 Move selector lever to "P" position.

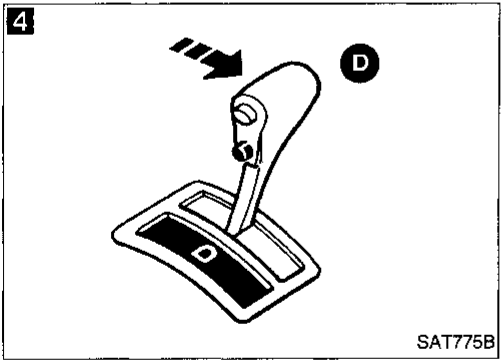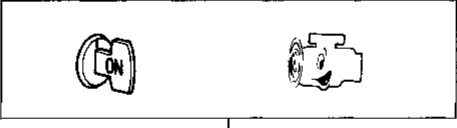


SAT775B

4 Move selector lever to "D" position.

Ⓐ

TROUBLE DIAGNOSES


Preliminary Check (Cont'd)

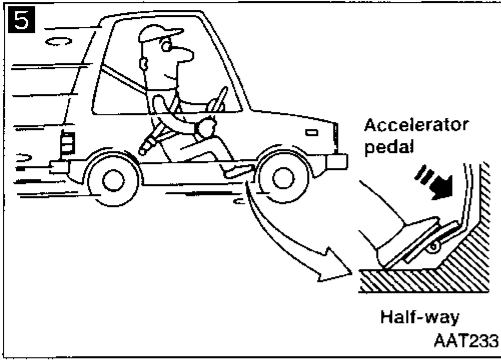

5
Accelerate vehicle keeping accelerator pedal depressed halfway.


Does vehicle start from D₁?
Read gear position.

No → Perform Diagnostic Procedure 8. Refer to AT-73.

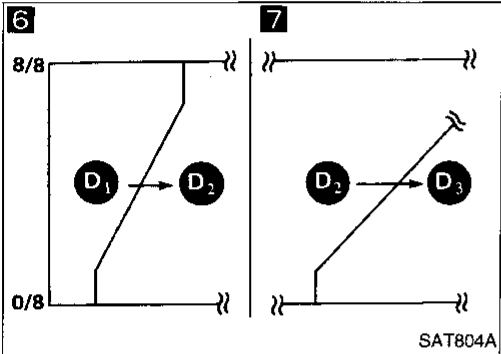

6
Does A/T shift from D₁ to D₂ at the specified speed?
Read gear position, throttle position and vehicle speed.
Specified speed when shifting from D₁ to D₂:
Refer to Shift schedule on AT-37.

No → Perform Diagnostic Procedure 9. Refer to AT-74.

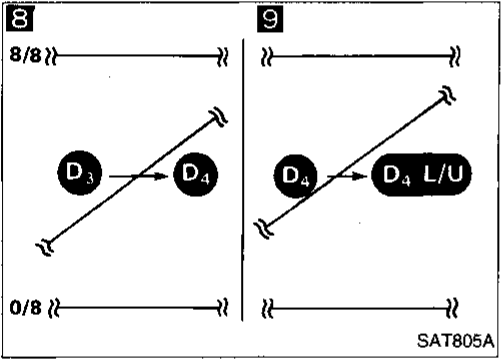

7
Does A/T shift from D₂ to D₃ at the specified speed?
Read gear position, throttle position and vehicle speed.
Specified speed when shifting from D₂ to D₃:
Refer to Shift schedule on AT-37.

No → Perform Diagnostic Procedure 10. Refer to AT-76.

8
Does A/T shift from D₃ to D₄ at the specified speed?
Read gear position, throttle position and vehicle speed.
Specified speed when shifting from D₃ to D₄:
Refer to Shift schedule on AT-37.

No → Perform Diagnostic Procedure 11. Refer to AT-77.

9
Does A/T perform lock-up at the specified speed?
Read vehicle speed, throttle position when lock-up duty becomes 94%.
Specified speed when lock-up occurs:
Refer to Shift schedule on AT-37.




No → Perform Diagnostic Procedure 12. Refer to AT-78.

B

GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

TROUBLE DIAGNOSES






Preliminary Check (Cont'd)

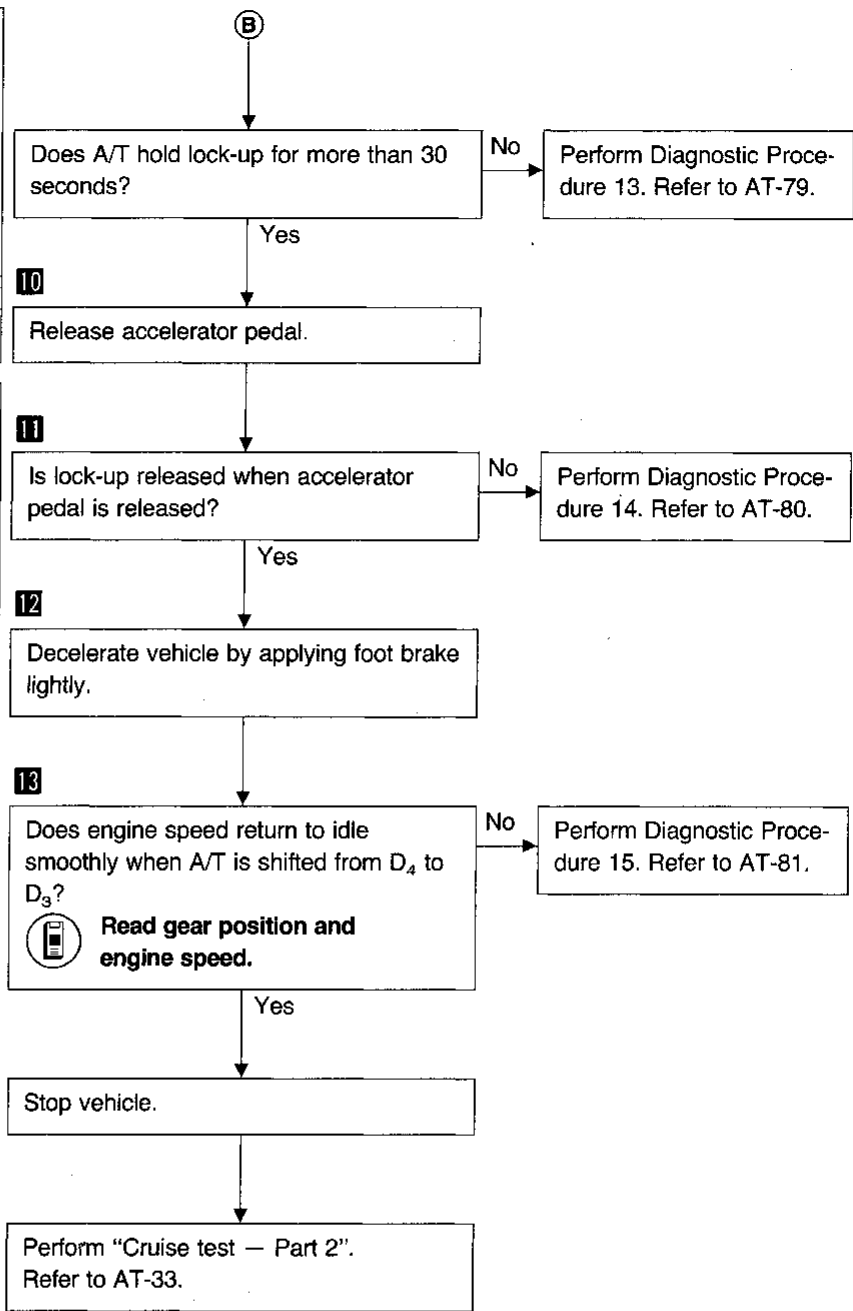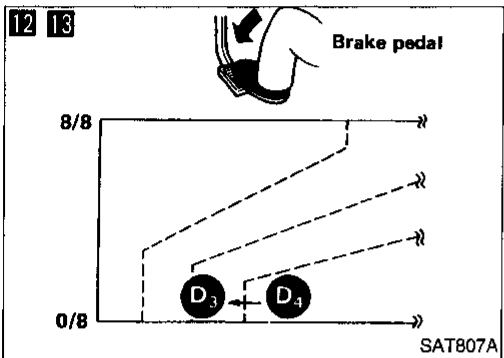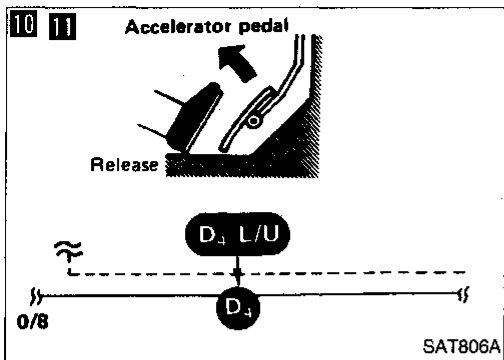

TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

Cruise test — Part 2

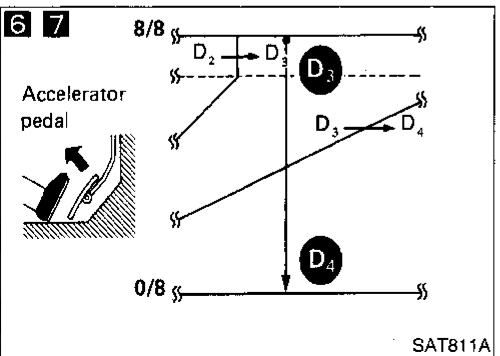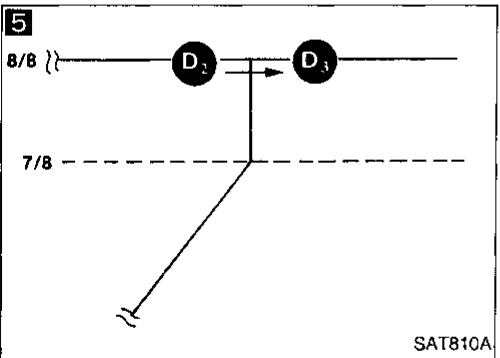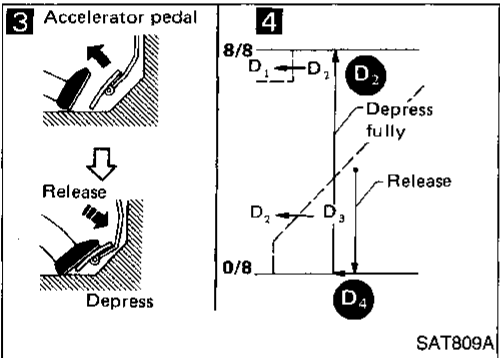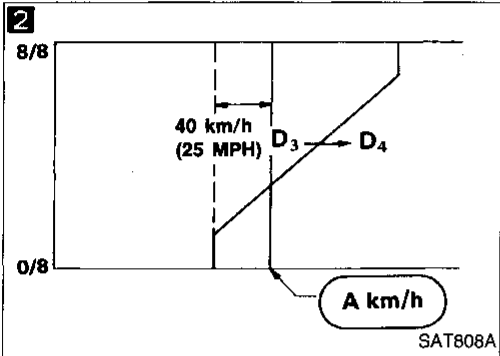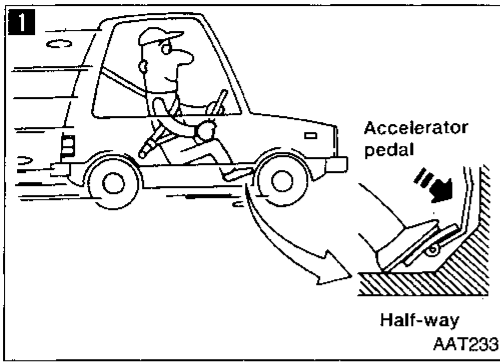

Confirm overdrive switch is in "ON" position.

Confirm selector lever is in "D" position.

1 Accelerate vehicle by half throttle again.

Does vehicle start from D₁?
Read gear position. (Icon: Gear position sensor)

No → Perform Diagnostic Procedure 16. Refer to AT-82.

Yes

2 Accelerate vehicle to A km/h as shown in illustration.

3 Release accelerator pedal and then quickly depress it fully.

Does A/T shift from D₄ to D₂ as soon as accelerator pedal is depressed fully?
Read gear position and throttle position (Icon: Gear position sensor)

No → Perform Diagnostic Procedure 9. Refer to AT-74.

Yes

5 Does A/T shift from D₂ to D₃ at the specified speed?
Read gear position, throttle position and vehicle speed.
 Specified speed when shifting from D₂ to D₃:
 Refer to Shift schedule on AT-37.

No → Perform Diagnostic Procedure 10. Refer to AT-76.

Yes


6 Release accelerator pedal after shifting from D₂ to D₃.

A

CI
 VA
 EM
 LC
 EF & EC
 FE
 CL
 MT
AT
 FA
 RA
 BR
 ST
 BF
 HA
 EL
 IDX

TROUBLE DIAGNOSES





Preliminary Check (Cont'd)

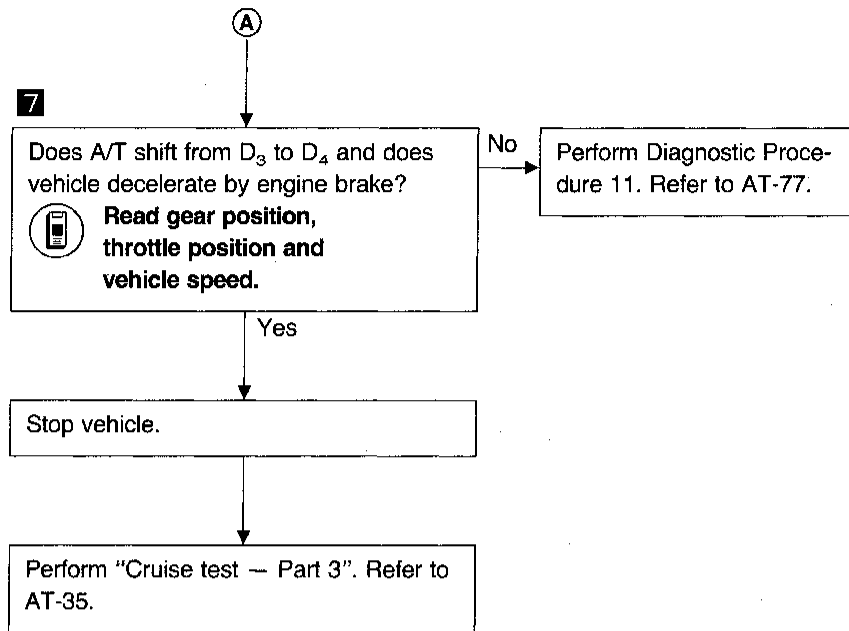

TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

Cruise test — Part 3

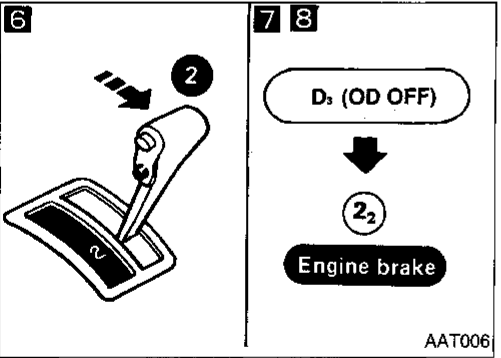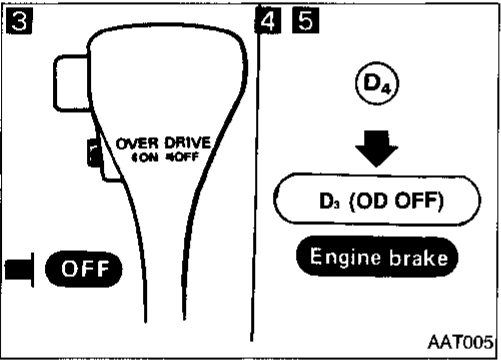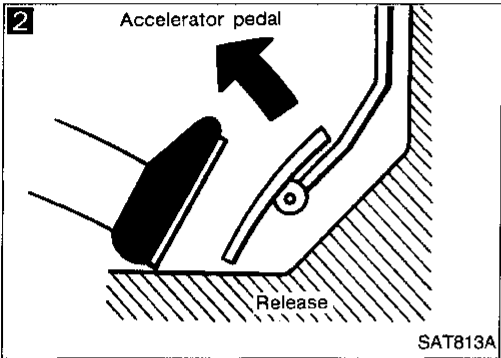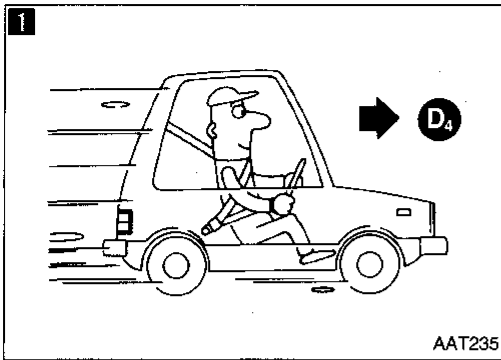

Confirm overdrive switch is in "ON" position.

Confirm selector lever is in "D" position.

1 Accelerate vehicle using half-throttle to D₄.

2 Release accelerator pedal.

3 Set overdrive switch to "OFF" position while driving in D₄.

4 Does A/T shift from D₄ to D₃?
 Read gear position and vehicle speed.

No → Perform Diagnostic Procedure 17. Refer to AT-82.

5 Does vehicle decelerate by engine brake?

No → Perform Diagnostic Procedure 15. Refer to AT-81.

6 Move selector lever from "D" to "2" position while driving in D₃.

7 Does A/T shift from D₃ to 2₂?
 Read gear position.

No → Perform Diagnostic Procedure 18. Refer to AT-83.

8 Does vehicle decelerate by engine brake?



No → Perform Diagnostic Procedure 15. Refer to AT-81.

Ⓐ

GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

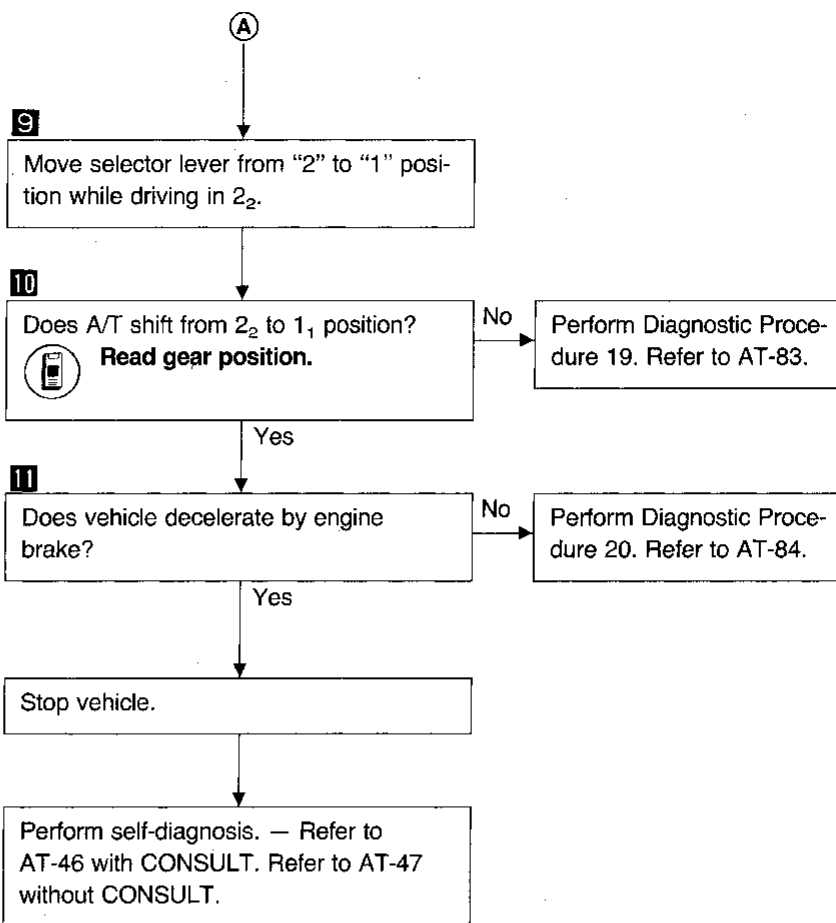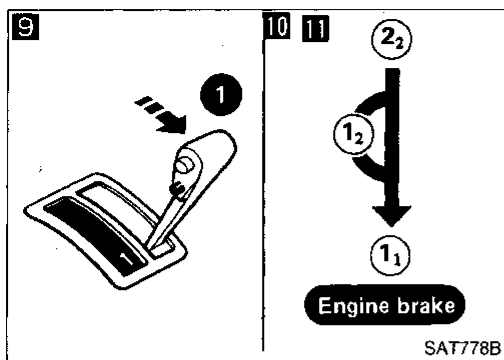

Vehicle speed when shifting gears

Throttle position	Shift pattern	Vehicle speed km/h (MPH)						
		D ₁ → D ₂	D ₂ → D ₃	D ₃ → D ₄	D ₄ → D ₃	D ₃ → D ₂	D ₂ → D ₁	1 ₂ → 1 ₁
Full throttle	Comfort	62 - 70 (39 - 43)	114 - 122 (71 - 76)	179 - 187 (111 - 116)	175 - 183 (109 - 114)	105 - 113 (65 - 70)	41 - 49 (25 - 30)	62 - 70 (39 - 43)
	Auto power	62 - 70 (39 - 43)	114 - 122 (71 - 76)	179 - 187 (111 - 116)	175 - 183 (109 - 114)	105 - 113 (65 - 70)	41 - 49 (25 - 30)	62 - 70 (39 - 43)
Half throttle	Comfort	42 - 50 (26 - 31)	78 - 86 (48 - 53)	124 - 132 (77 - 82)	75 - 83 (47 - 52)	41 - 49 (25 - 30)	5 - 13 (3 - 8)	62 - 70 (39 - 43)
	Auto power	45 - 53 (28 - 33)	84 - 92 (52 - 57)	133 - 141 (83 - 88)	86 - 94 (53 - 58)	52 - 60 (32 - 37)	5 - 13 (3 - 8)	62 - 70 (39 - 43)


Vehicle speed when performing lock-up

Throttle position	Shift pattern	OD switch (shift range)	Vehicle speed km/h (MPH)	
			Lock-up "ON"	Lock-up "OFF"
2/8	Comfort	ON [D ₄]	105 - 113 (65 - 70)	53 - 61 (33 - 38)
		OFF [D ₃]	86 - 94 (53 - 58)	83 - 91 (52 - 57)
	Auto power	ON [D ₄]	108 - 116 (67 - 72)	53 - 61 (33 - 38)
		OFF [D ₃]	86 - 94 (53 - 58)	83 - 91 (52 - 57)


TROUBLE DIAGNOSES

Preliminary Check (Cont'd)

Shift schedule (Comfort pattern)

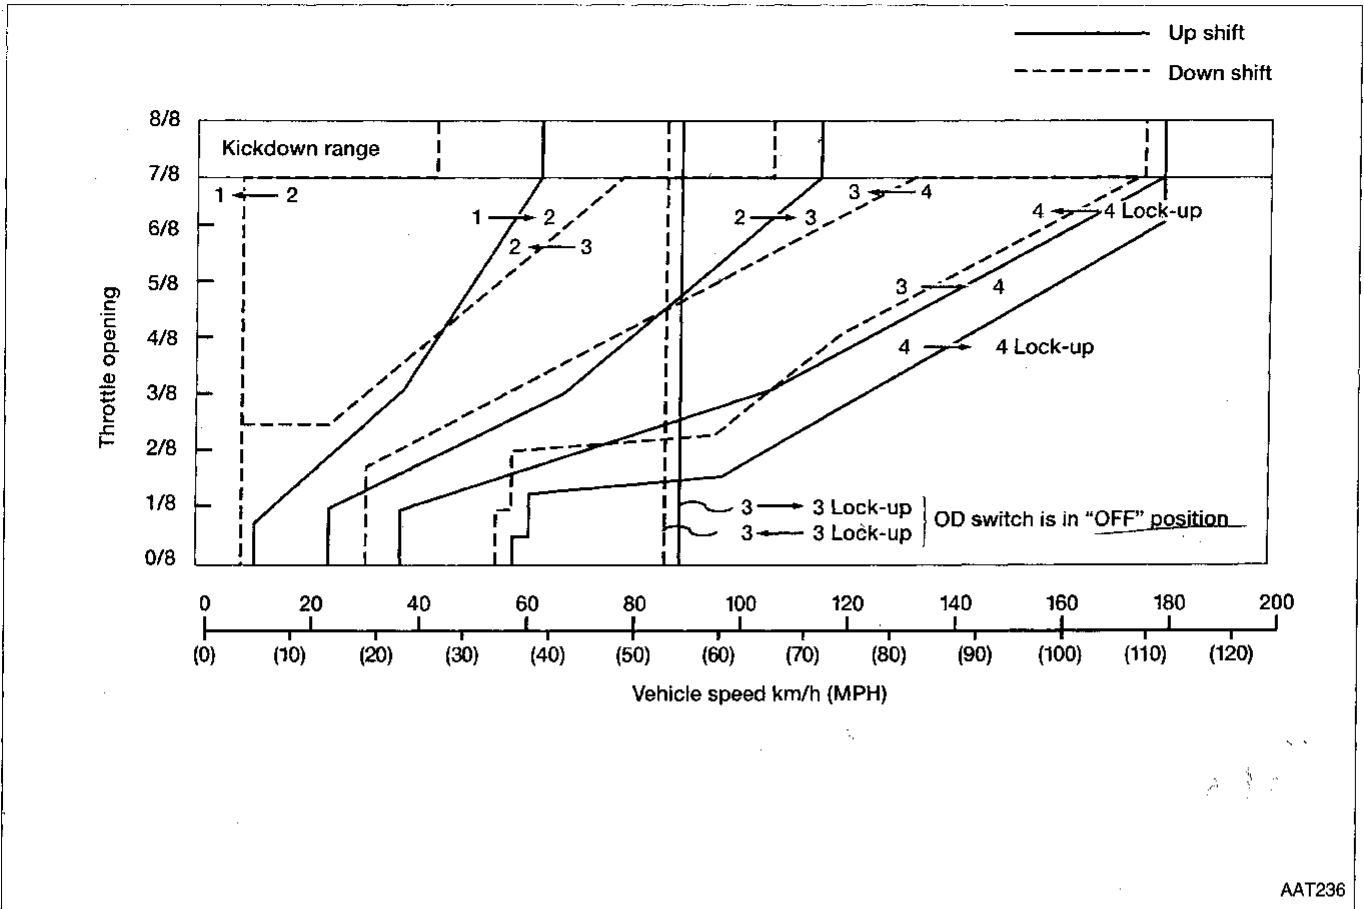









Shift schedule (Auto power pattern)

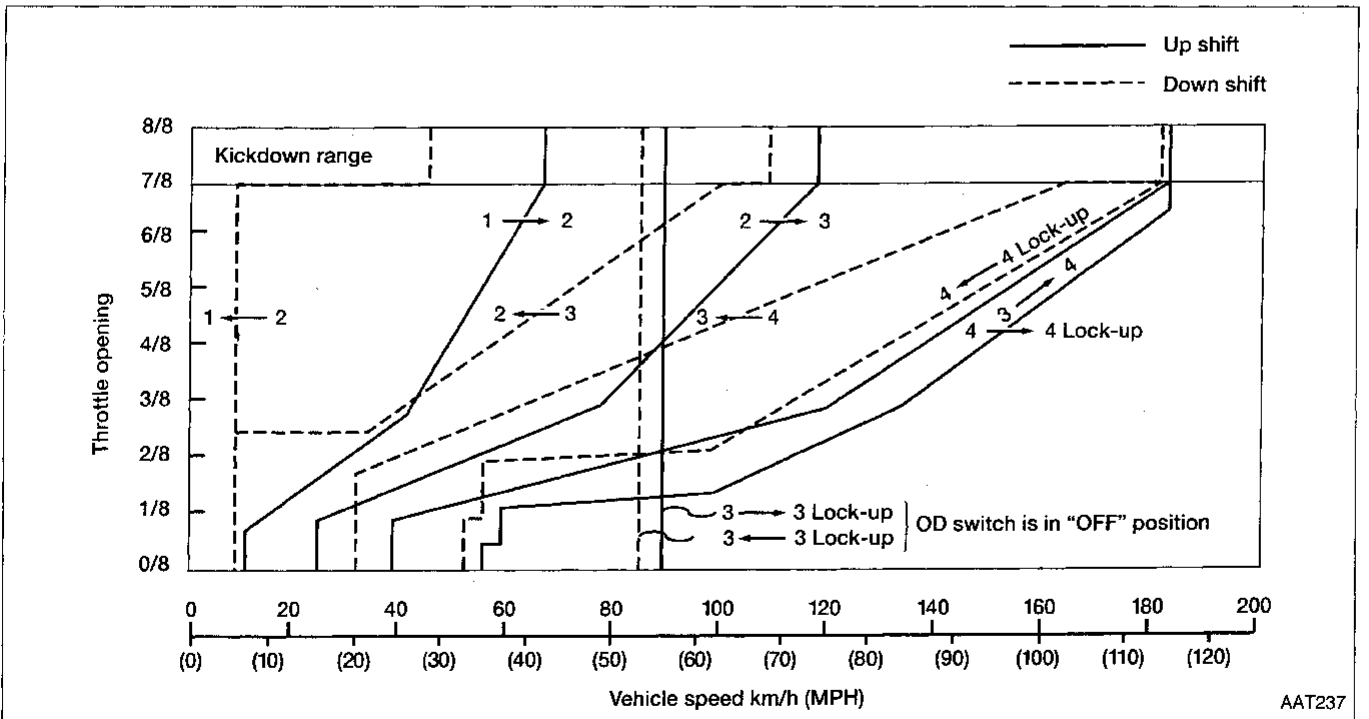

GI
 MA
 EM
 LC
 EF &
 EC
 FE
 CL
 MT
AT
 FA
 RA
 BR
 ST
 BF
 HA
 EL
 IDX


TROUBLE DIAGNOSES

A/T Electrical Parts Location

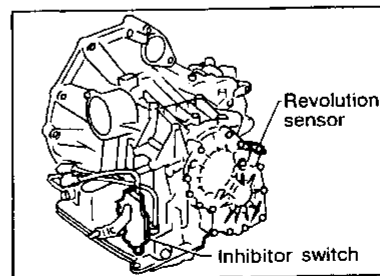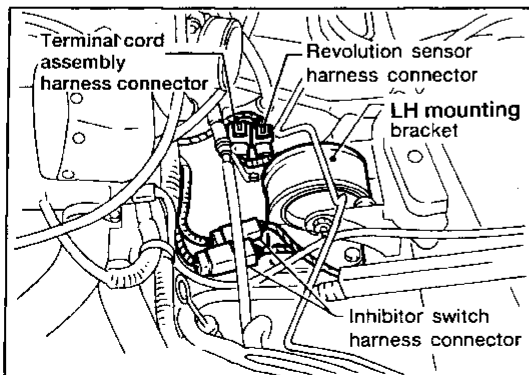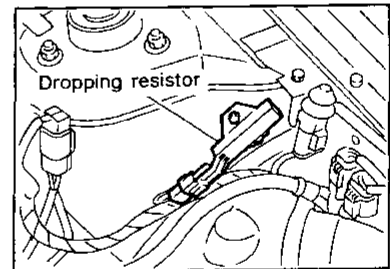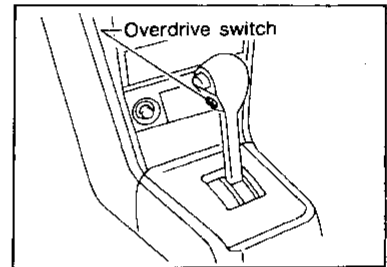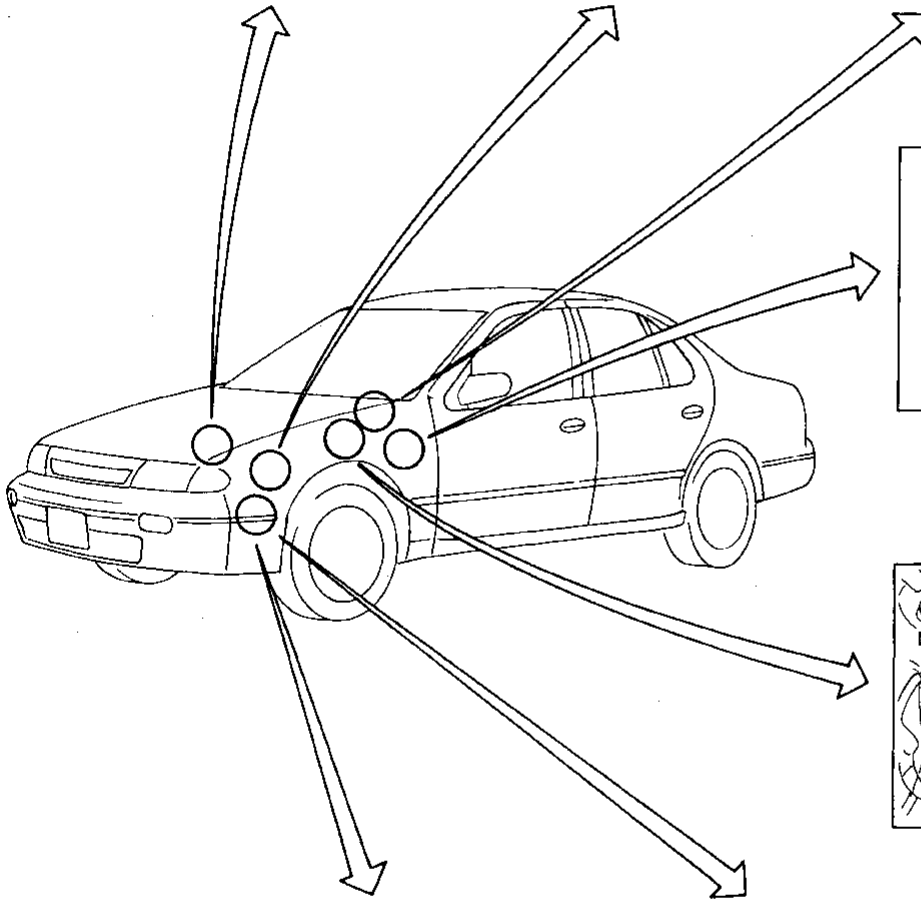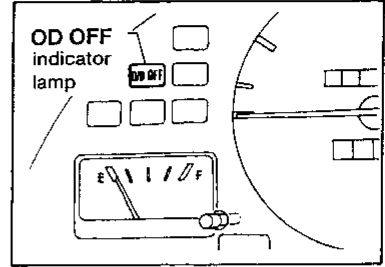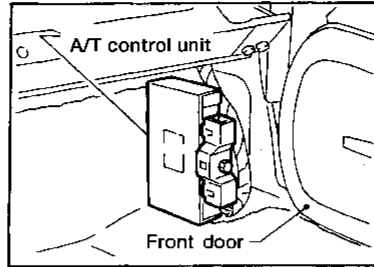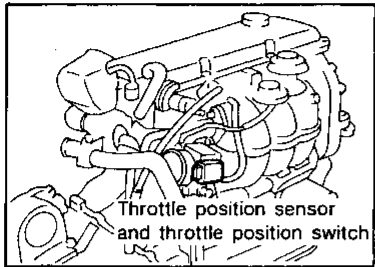

TROUBLE DIAGNOSES

Circuit Diagram for Quick Pinpoint Check

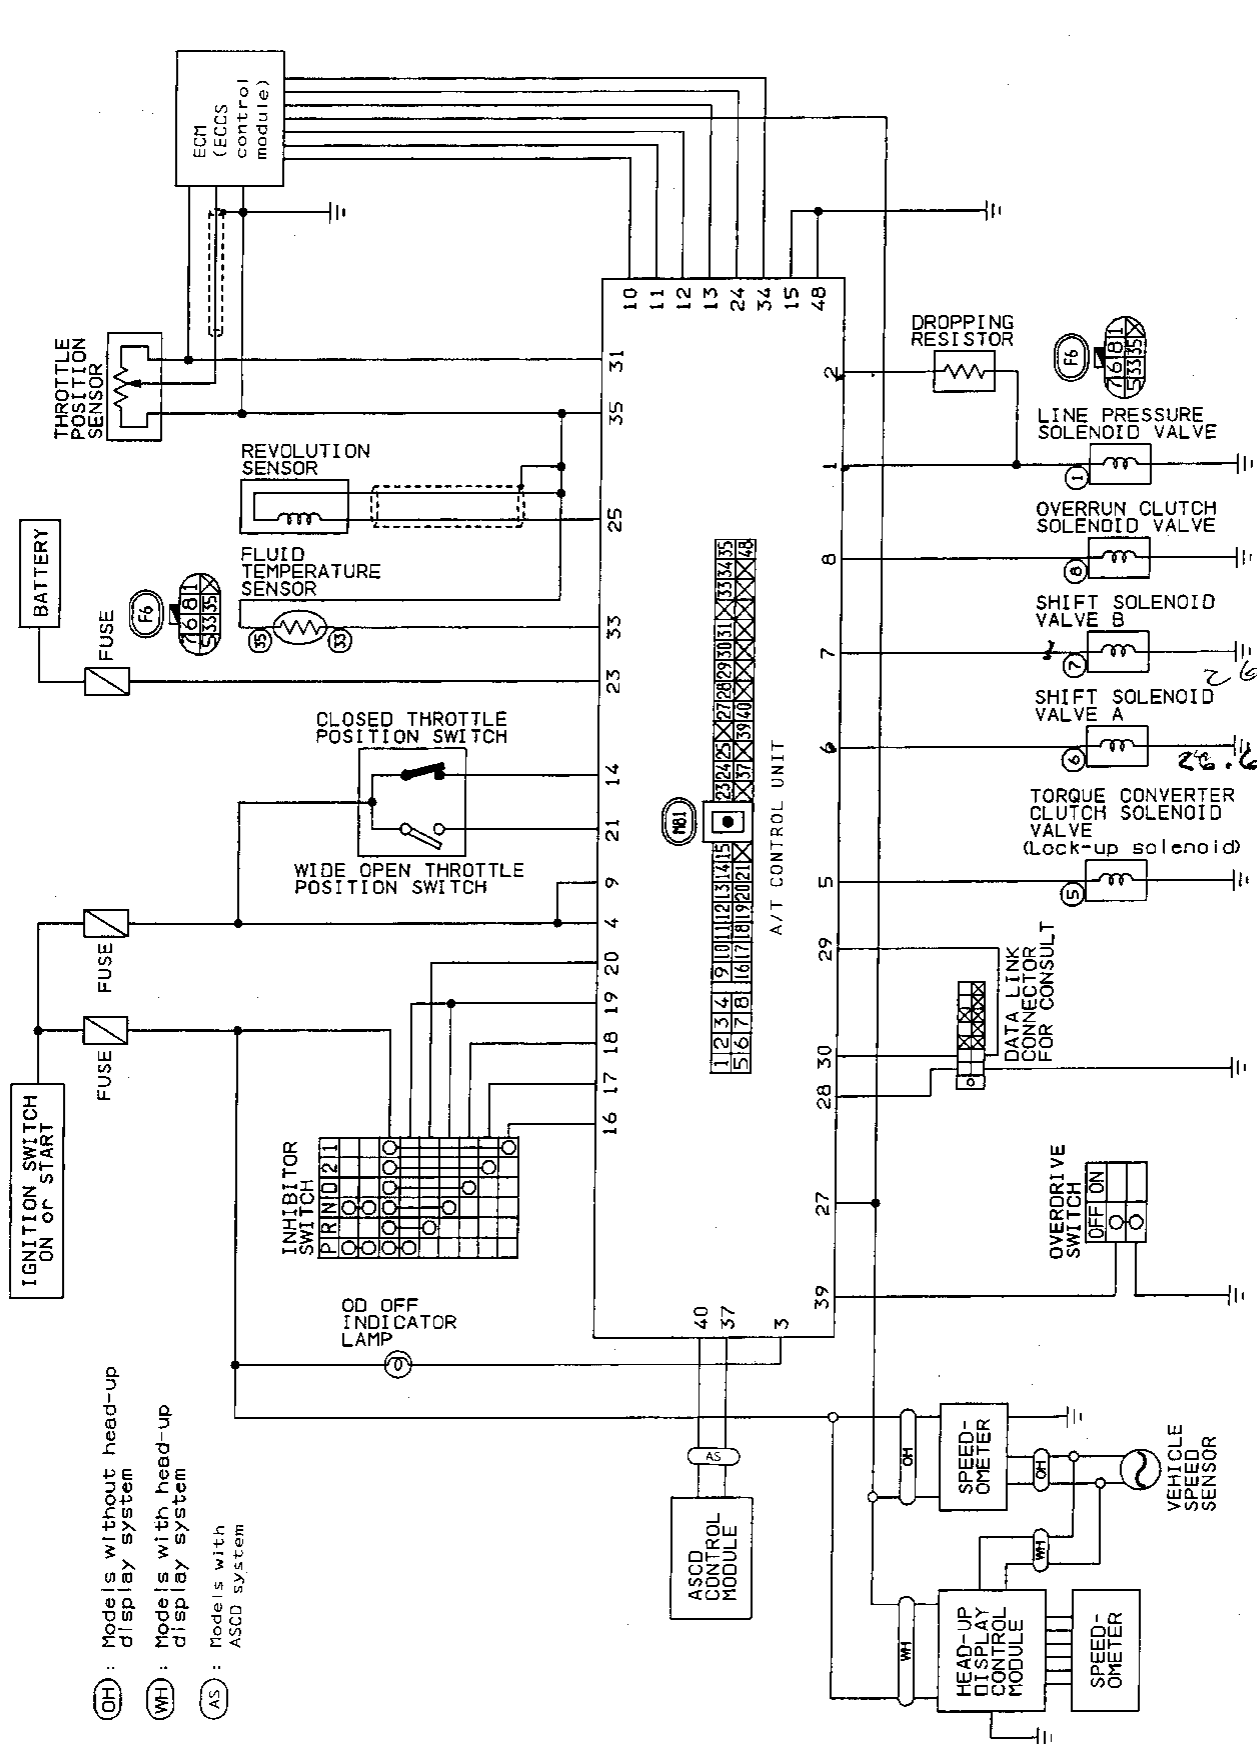


- (OH) : Models without head-up display system
- (WH) : Models with head-up display system
- (AS) : Models with ASCD system



GI
 MA
 EM
 LC
 EF & EC
 FE
 CL
AT
 FA
 RA
 BR
 ST
 BF
 FA
 EL
 DX

TROUBLE DIAGNOSES

Wiring Diagram

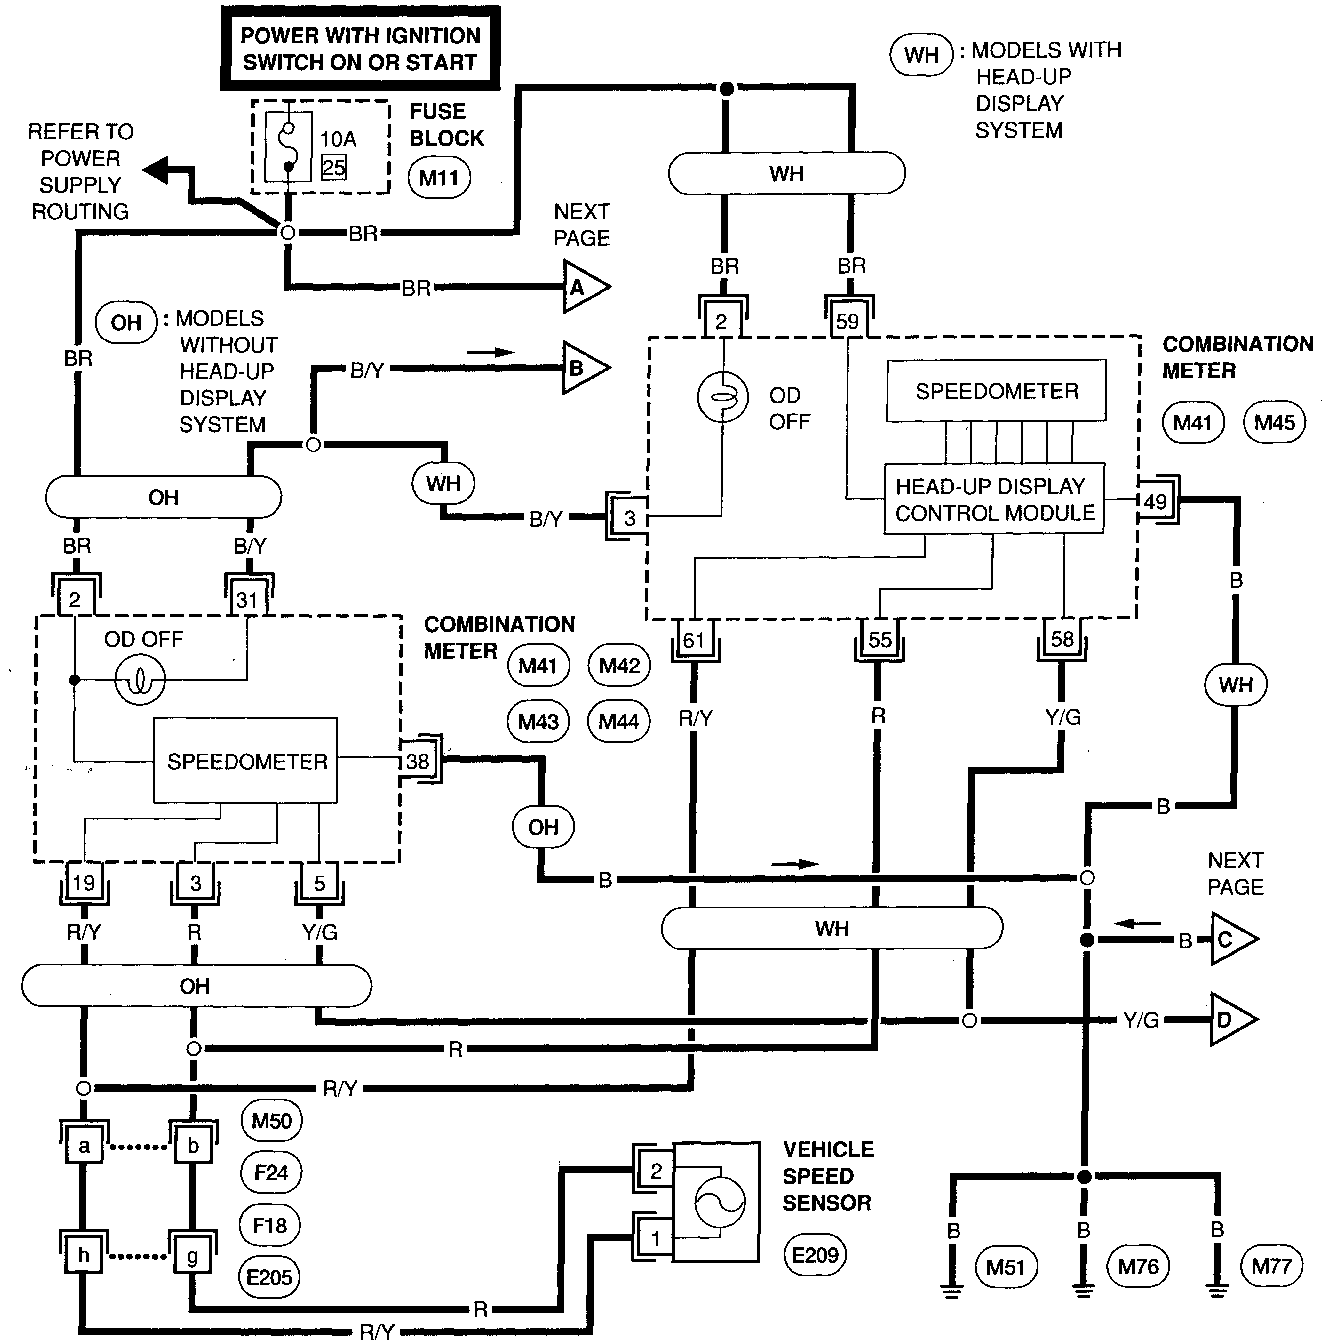


Refer to POWER SUPPLY ROUTING in EL Section. (M11)

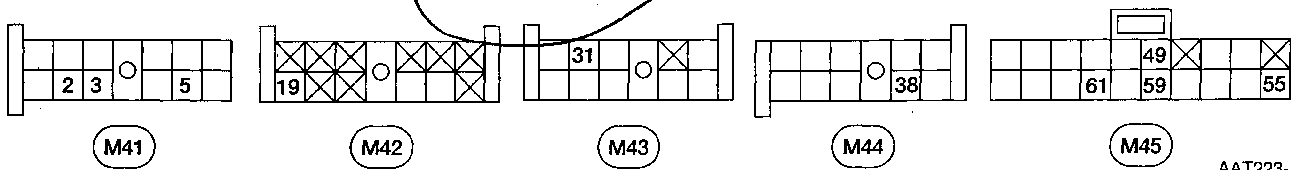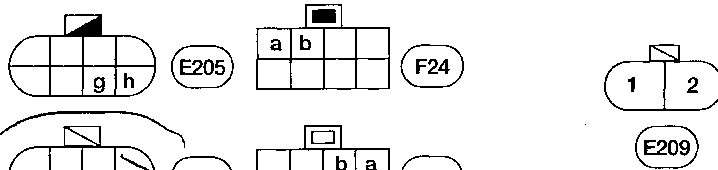

TROUBLE DIAGNOSES

Wiring Diagram (Cont'd)

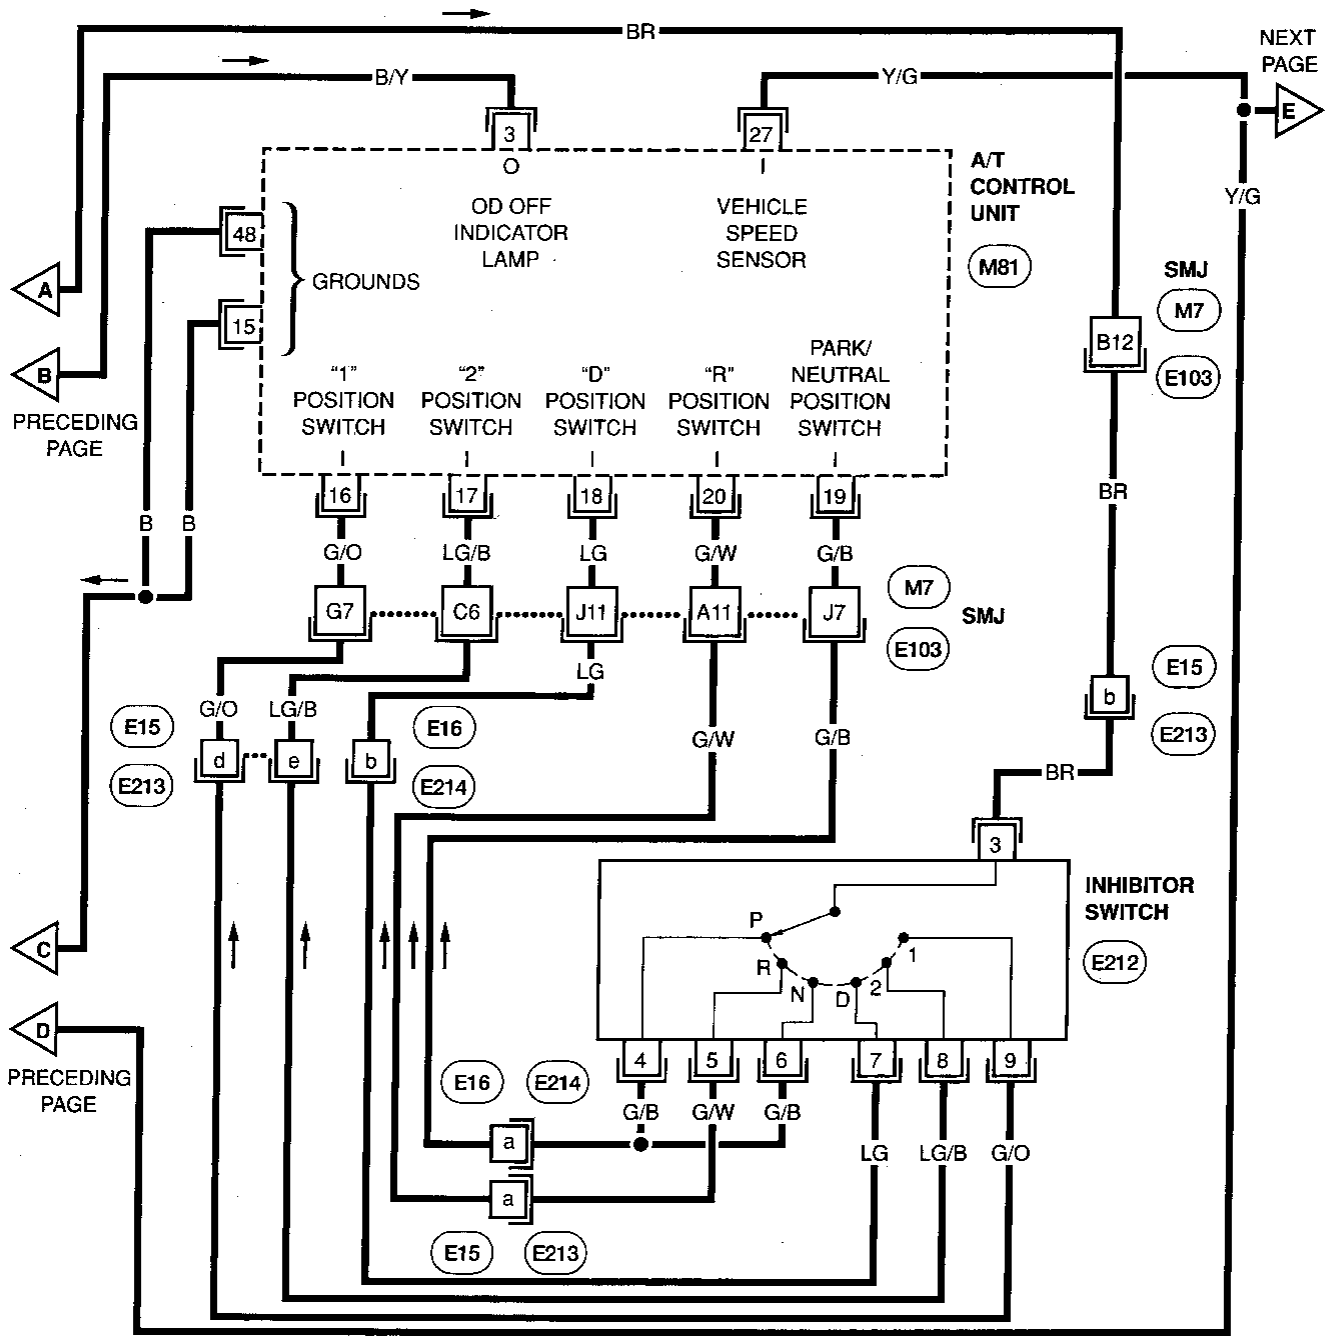



PRECEDING PAGE
A
B

PRECEDING PAGE
C
D

NEXT PAGE
E


GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA

Refer to Foldout Page in EL Section for details.

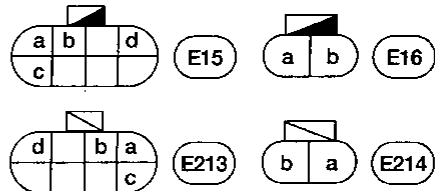




EL
IDX

35	34	33	31	30	29	28	27	25	24	23	15	14	13	12	11	10	9	4	3	2	1
48							40	39		37		21	20	19	18	17	16	8	7	6	5




TROUBLE DIAGNOSES

Wiring Diagram (Cont'd)




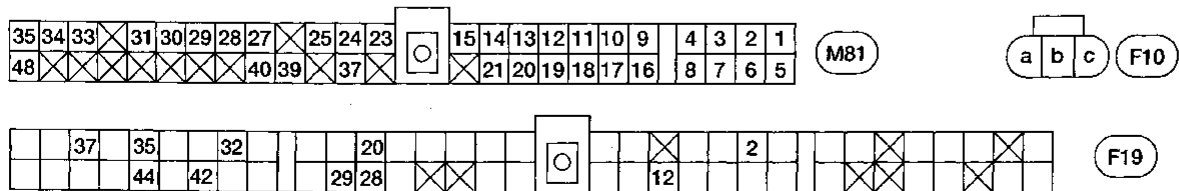
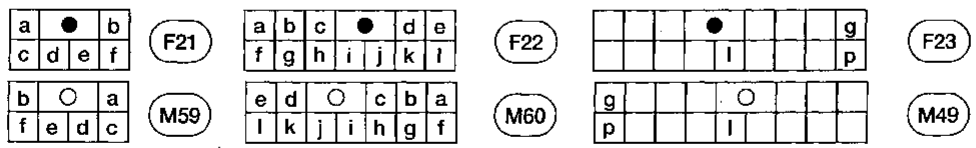
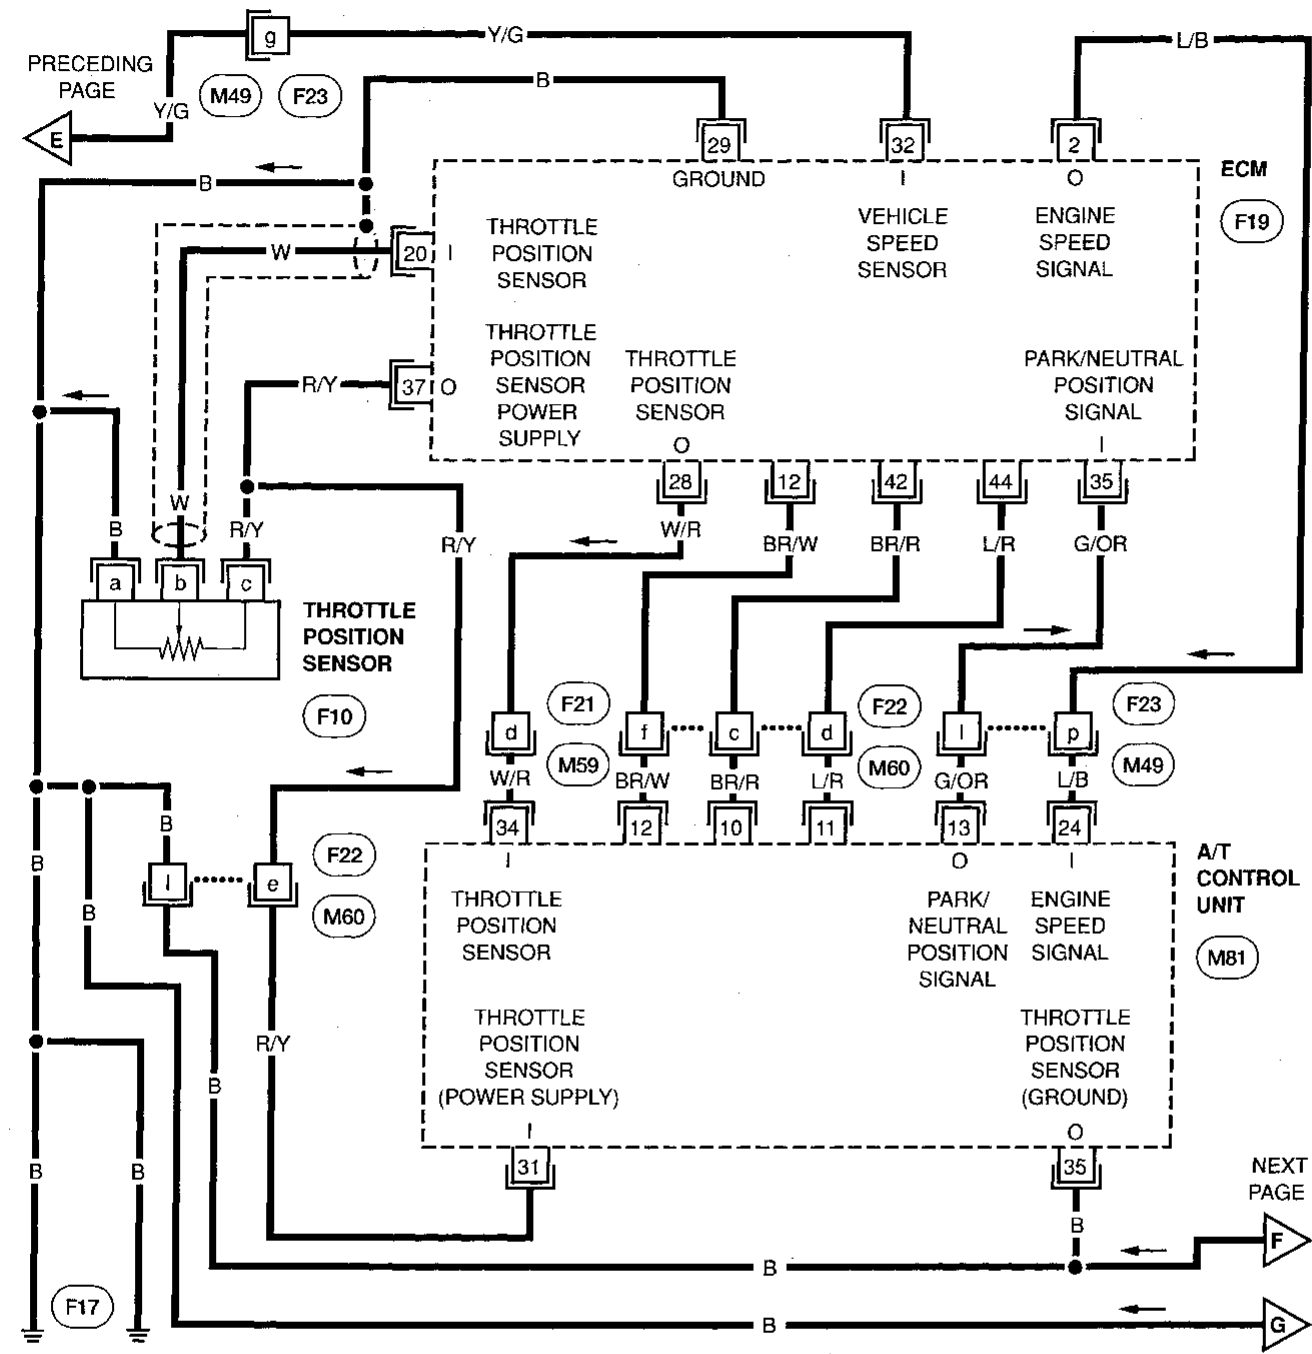


TROUBLE DIAGNOSES



Wiring Diagram (Cont'd)

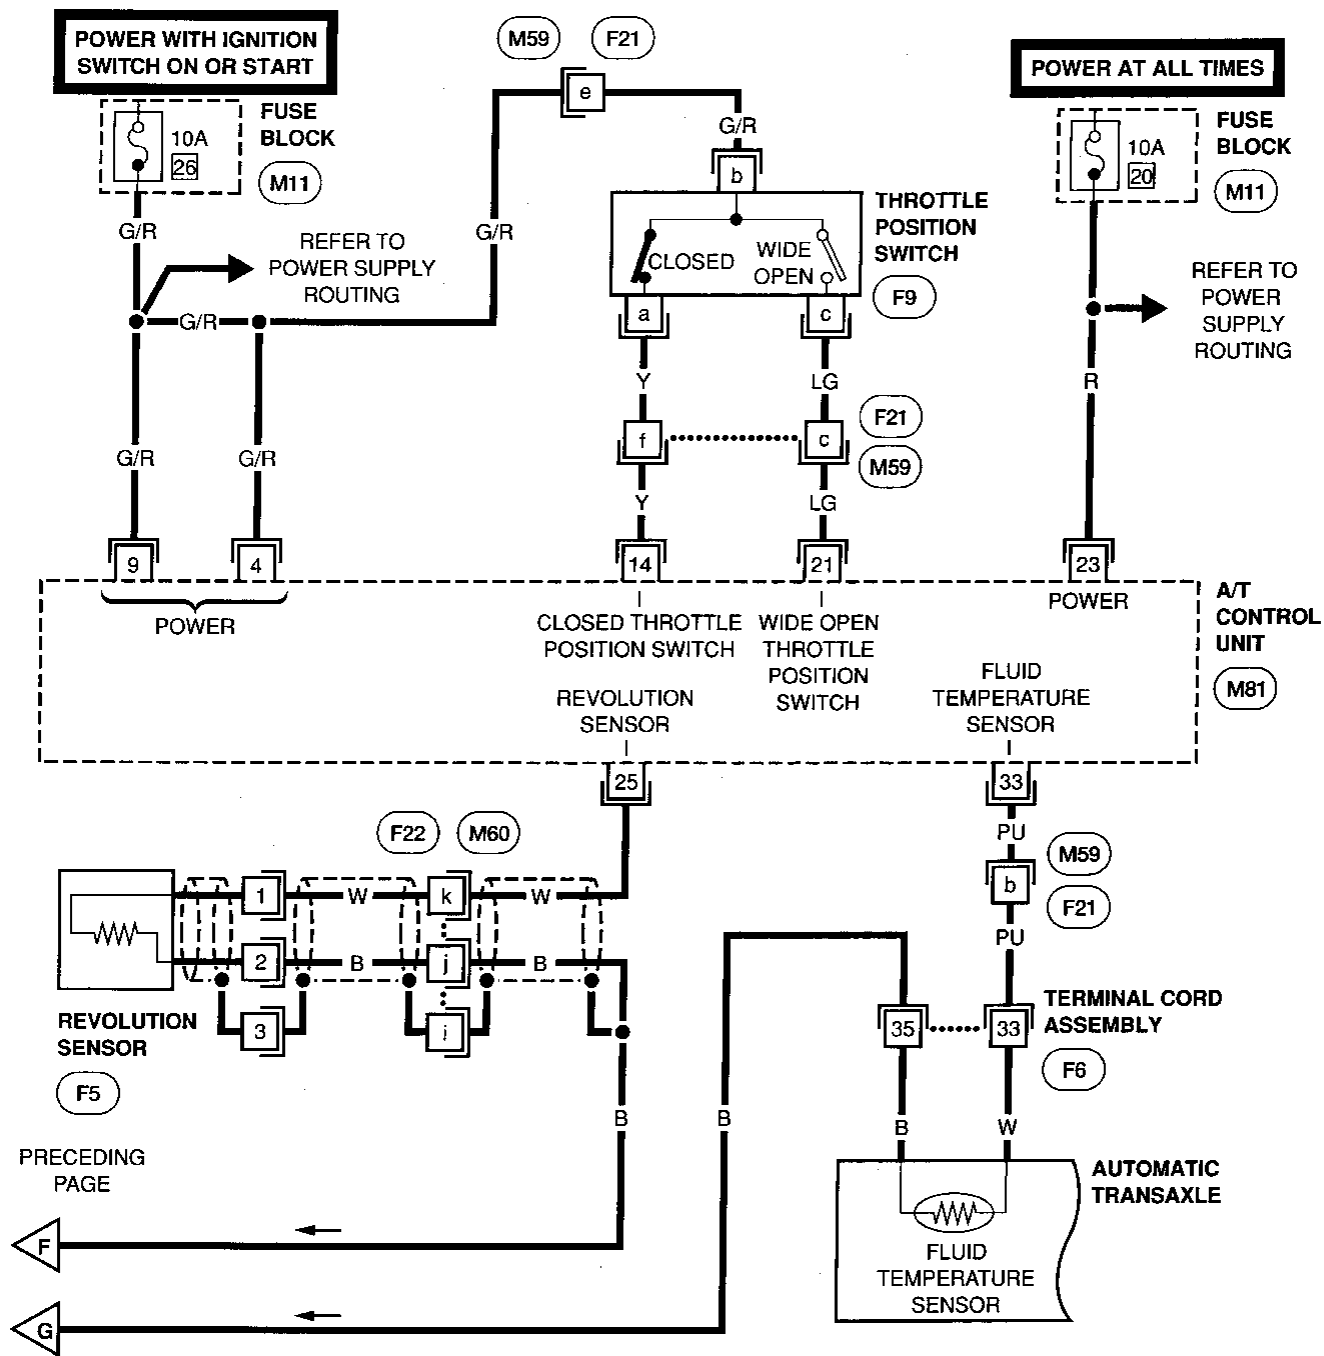

Refer to POWER SUPPLY ROUTING in EL Section. (M11)









(M81)



AAT223-D


TROUBLE DIAGNOSES

Wiring Diagram (Cont'd)

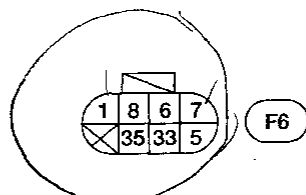
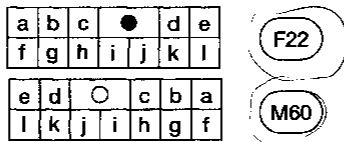
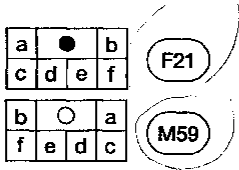
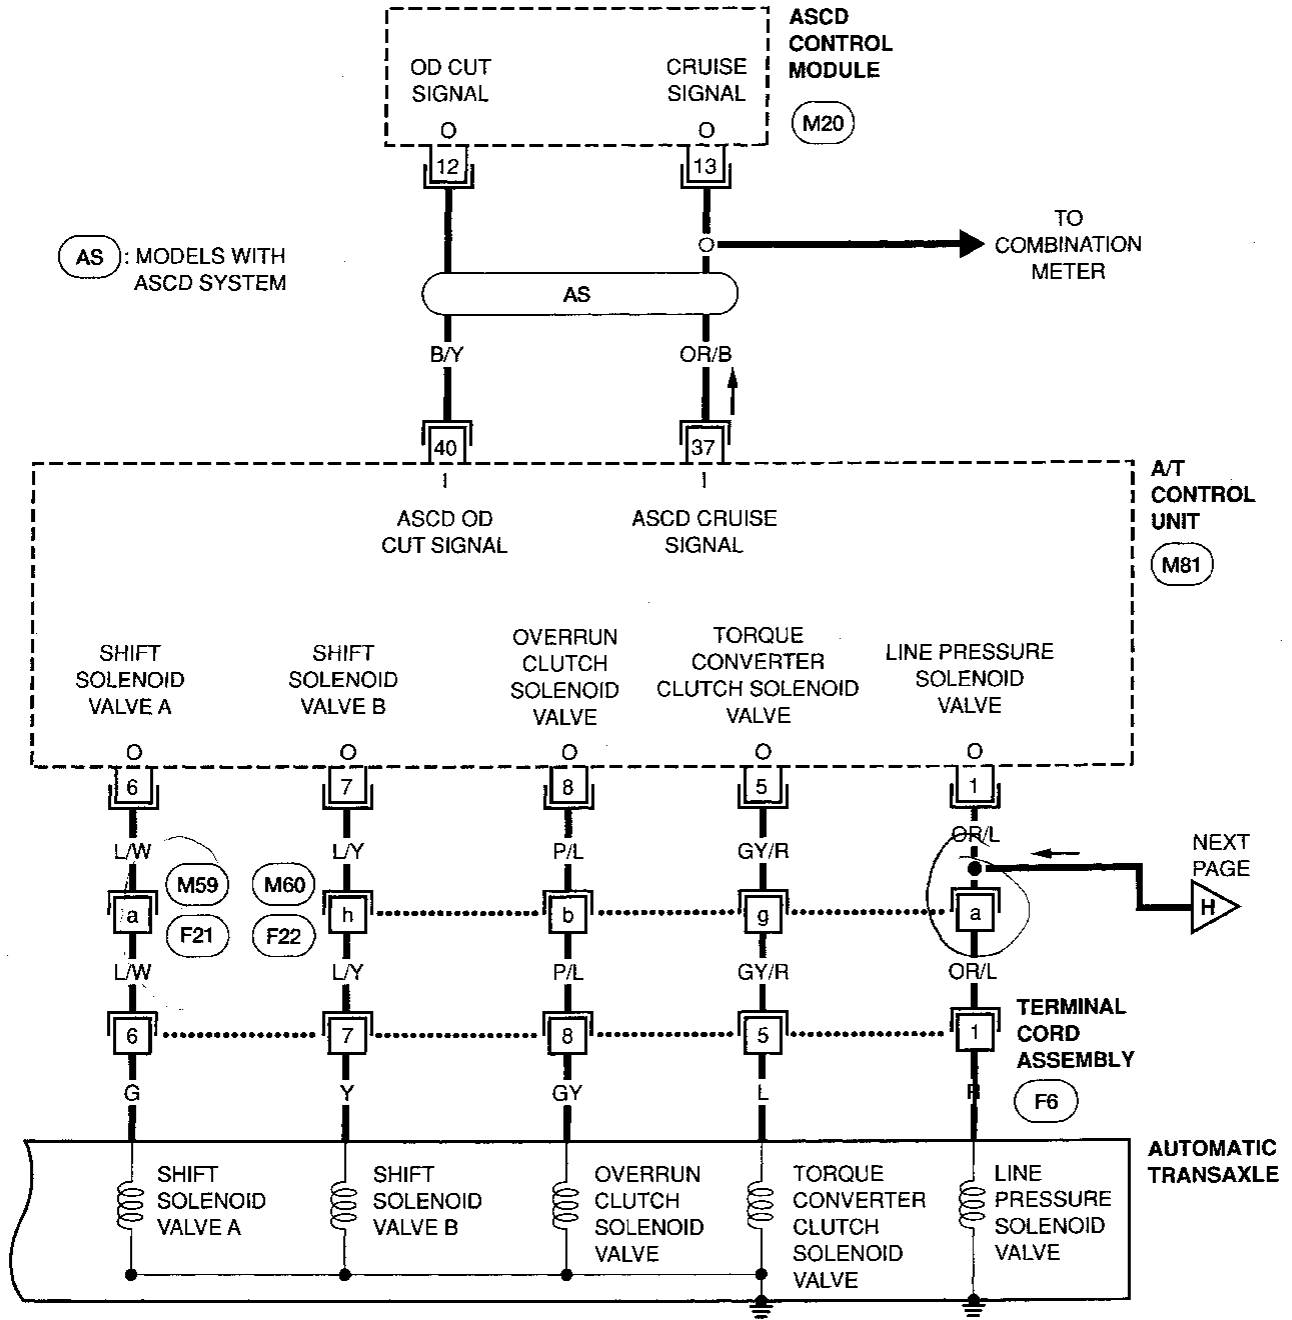


TROUBLE DIAGNOSES


Wiring Diagram (Cont'd)

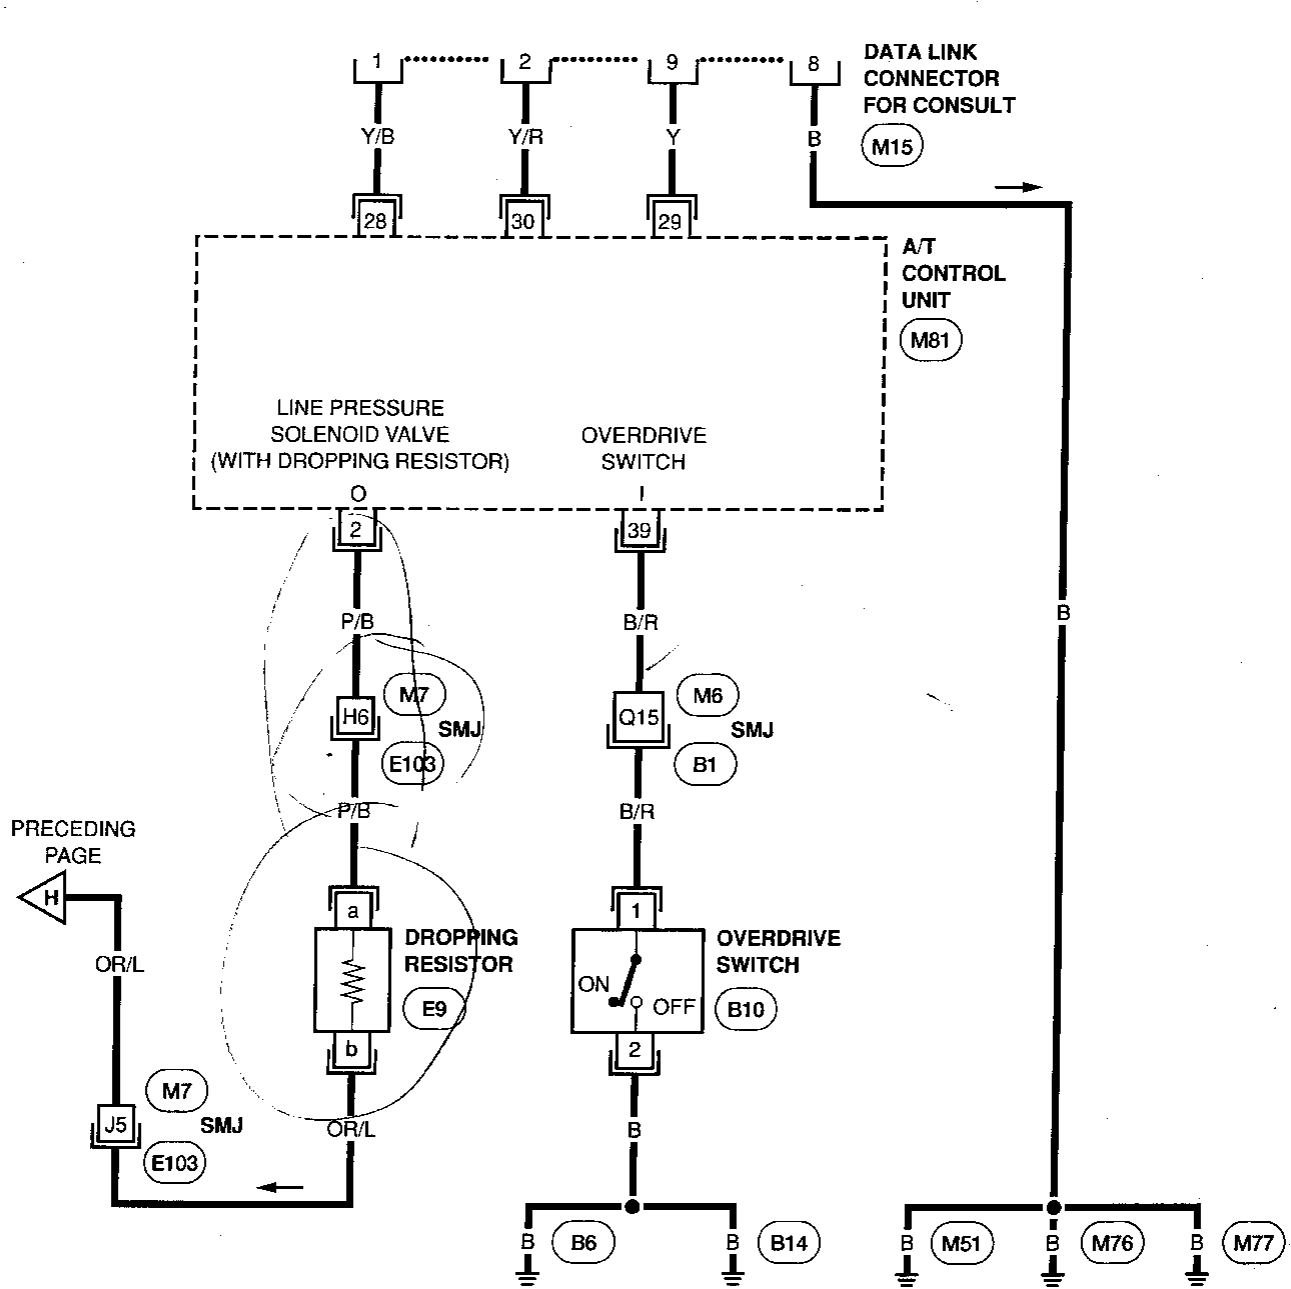

Refer to Foldout Page in EL Section for details.




TROUBLE DIAGNOSES

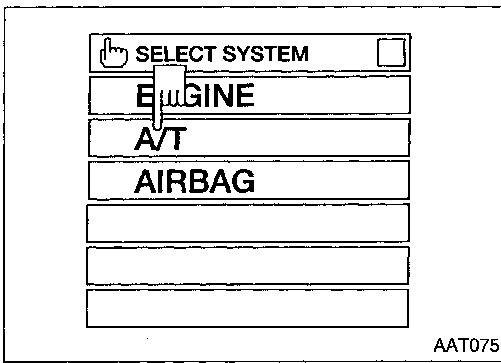

Self-diagnosis

SELF-DIAGNOSTIC PROCEDURE (CONSULT) With CONSULT



1. Turn on CONSULT.
2. Touch "AT".
3. Touch "SELF-DIAG RESULTS".
CONSULT performs self-diagnosis.

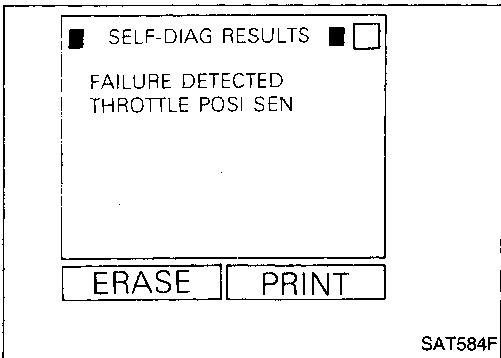

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)





SELF-DIAGNOSTIC PROCEDURE (⌚ Without CONSULT)

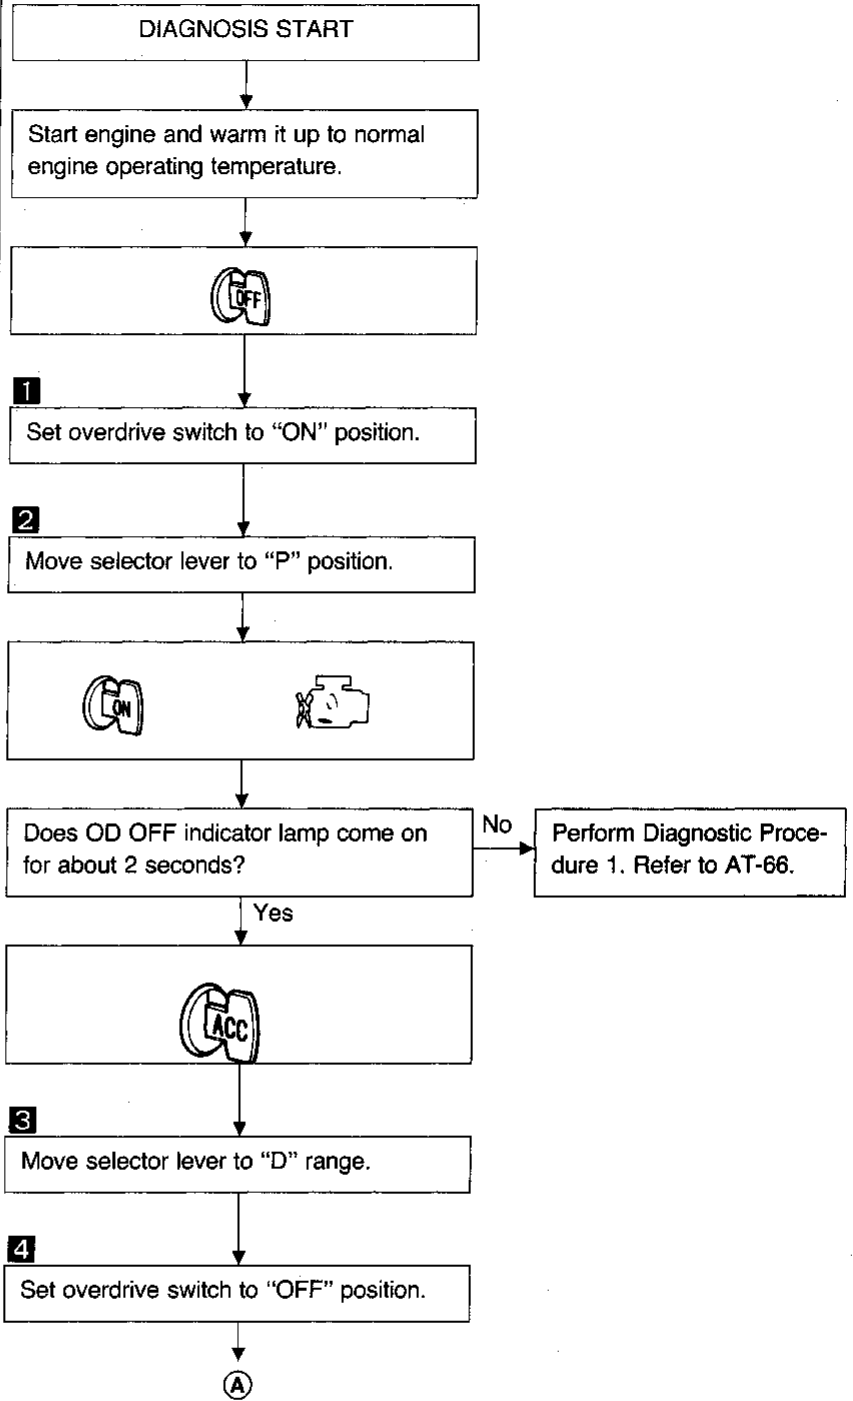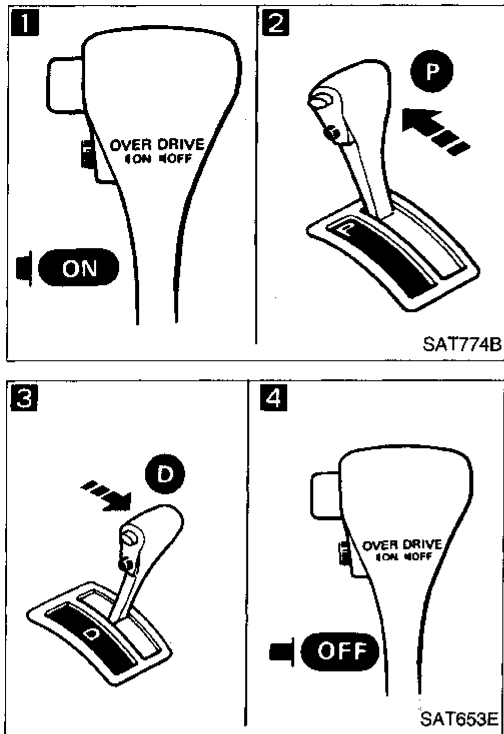

GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

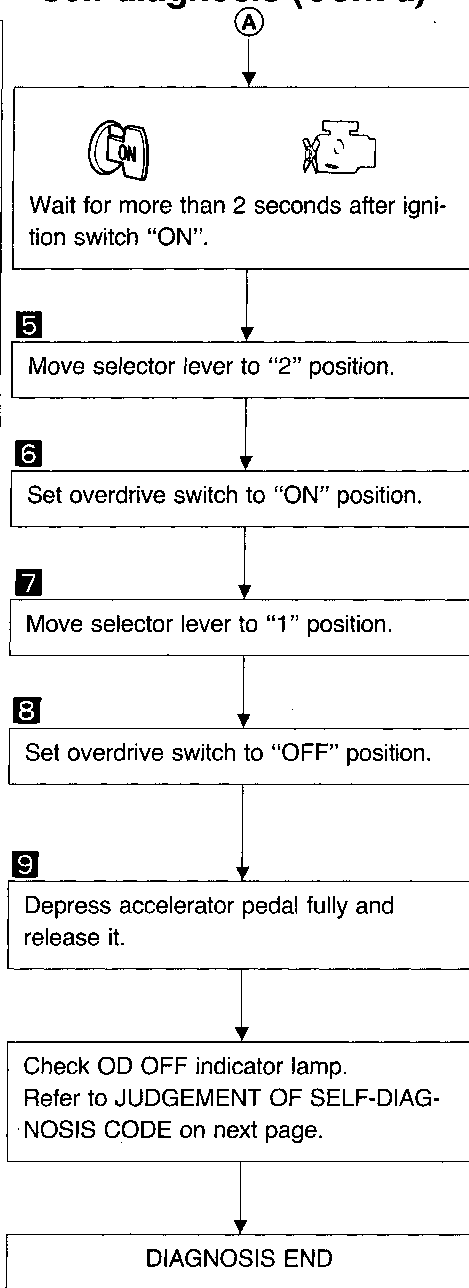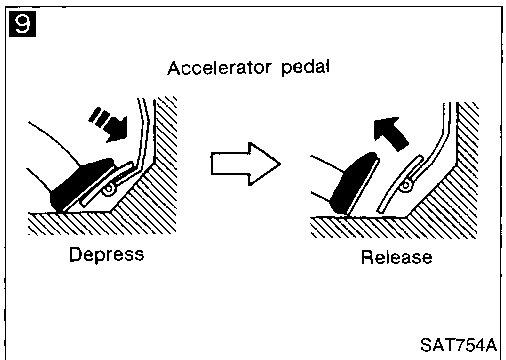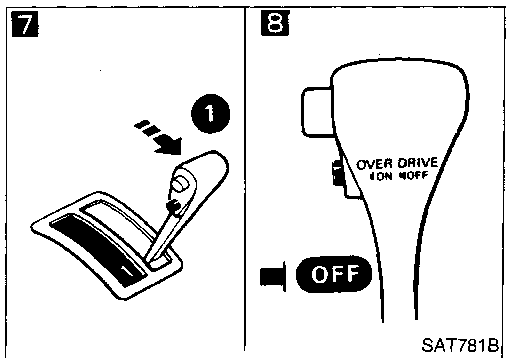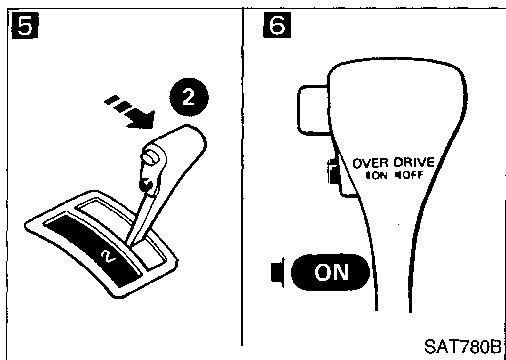


TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

JUDGEMENT OF SELF-DIAGNOSIS CODE

Flickers of OD OFF indicator lamp: Damaged circuit


All judgement flickers are same.

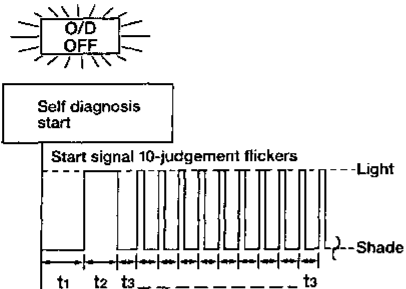

AAT131

All circuits that can be confirmed by self-diagnosis are O.K.


4th judgement flicker is longer than others.

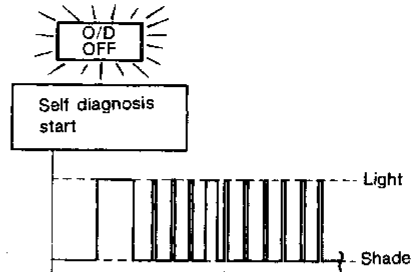

SAT443F

Shift solenoid valve A circuit is short-circuited or disconnected.
Go to **SHIFT SOLENOID VALVE A CIRCUIT CHECK (AT-54)**.


1st judgement flicker is longer than others.

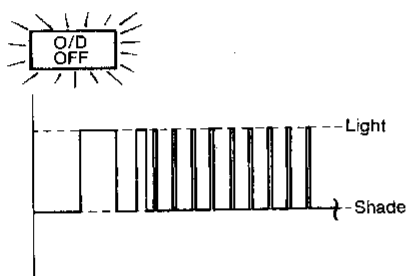

SAT437F

Revolution sensor circuit is short-circuited or disconnected.
Go to **REVOLUTION SENSOR CIRCUIT CHECK (AT-51)**.


5th judgement flicker is longer than others.

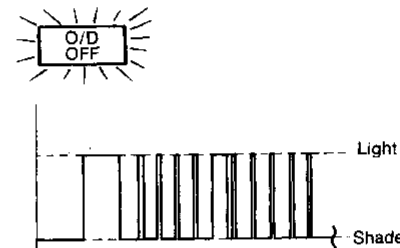

SAT445F

Shift solenoid valve B circuit is short-circuited or disconnected.
Go to **SHIFT SOLENOID VALVE B CIRCUIT CHECK (AT-55)**.


2nd judgement flicker is longer than others.

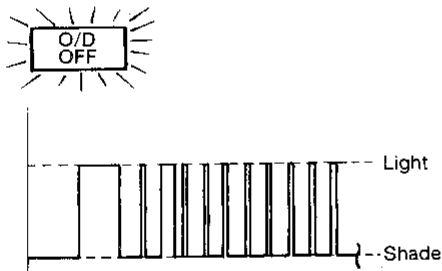

SAT439F

Vehicle speed sensor circuit is short-circuited or disconnected.
Go to **VEHICLE SPEED SENSOR CIRCUIT CHECK (AT-52)**.


6th judgement flicker is longer than others.

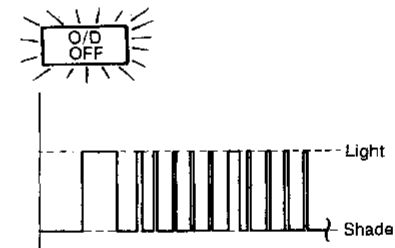

SAT447F

Overrun clutch solenoid valve circuit is short-circuited or disconnected.
Go to **OVERRUN CLUTCH SOLENOID VALVE CIRCUIT CHECK (AT-56)**.


3rd judgement flicker is longer than others.

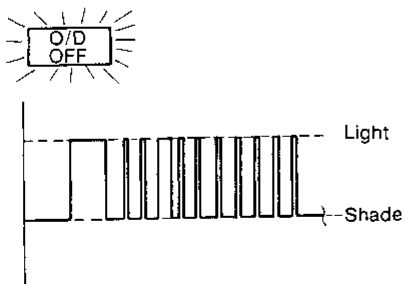

SAT441F

Throttle position sensor circuit is short-circuited or disconnected.
Go to **THROTTLE POSITION SENSOR CIRCUIT CHECK (AT-53)**.

7th judgement flicker is longer than others.

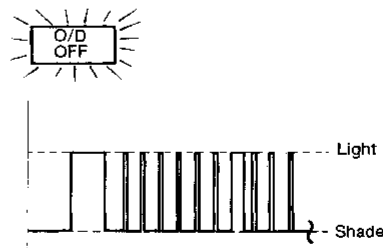

SAT449F

Torque converter clutch solenoid valve circuit is short-circuited or disconnected.
Go to **TORQUE CONVERTER CLUTCH SOLENOID VALVE CIRCUIT CHECK (AT-57)**.


$t_1 = 2.5$ seconds $t_2 = 2.0$ seconds $t_3 = 1.0$ second

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

Flickers of OD OFF indicator lamp: Damaged circuit


8th judgement flicker is longer than others.

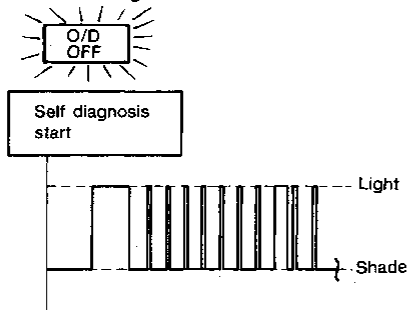

Fluid temperature sensor is disconnected or A/T control unit power source circuit is damaged.
Go to FLUID TEMPERATURE SENSOR AND A/T CONTROL UNIT POWER SOURCE CIRCUIT CHECKS (AT-58).

SAT451F


Does not come on.

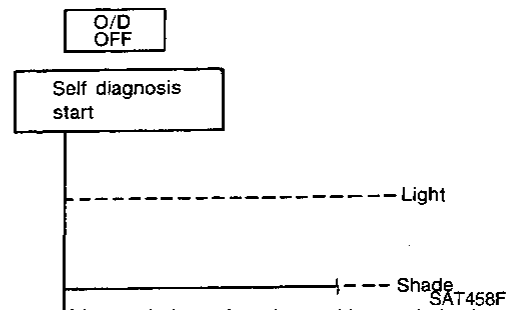

Inhibitor switch, overdrive switch or throttle position switch circuit is disconnected or A/T control unit is damaged.
Go to INHIBITOR SWITCH, OVERDRIVE SWITCH AND THROTTLE POSITION SWITCH CIRCUIT CHECKS (AT-62).

SAT458F


9th judgement flicker is longer than others.

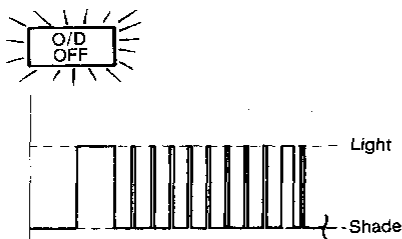

Engine speed signal circuit is short-circuited or disconnected.
Go to ENGINE SPEED SIGNAL CIRCUIT CHECK (AT-60).

SAT453F


10th judgement flicker is longer than others.

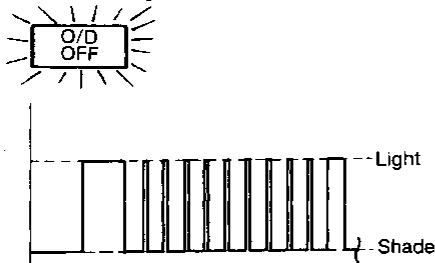

Line pressure solenoid valve circuit is short-circuited or disconnected.
Go to LINE PRESSURE SOLENOID VALVE CIRCUIT CHECK (AT-61).

SAT455F

Flickers as shown below.

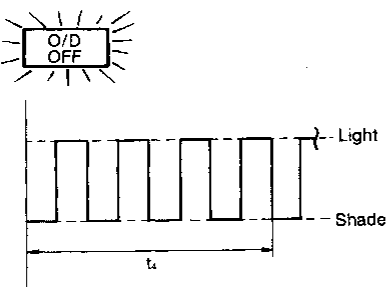

Battery power is low.
 Battery has been disconnected for a long time.
 Battery is conversely connected.
 (When reconnecting A/T control unit connectors. — This is not a problem.)


SAT457F

$t_4 = 1.0$ second

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

REVOLUTION SENSOR CIRCUIT CHECK

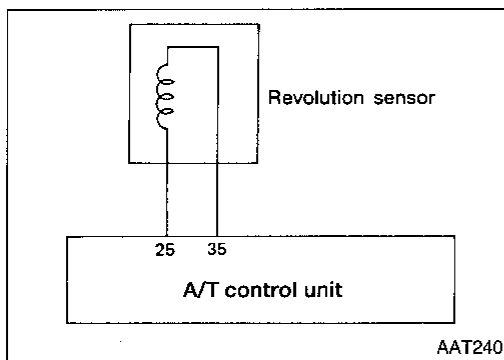


A

☆ MONITOR ☆ NO FAIL	
VHCL/S SE•A/T	0km/h
VHCL/S SE•MTR	5km/h
THRTL POS SEN	0.4V
FLUID TEMP SE	1.2V
BATTERY VOLT	13.4V
ENGINE SPEED	1024rpm
OVERDRIVE SW	ON
P/N POSI SW	ON
R POSITION SW	OFF

RECORD

AAT241

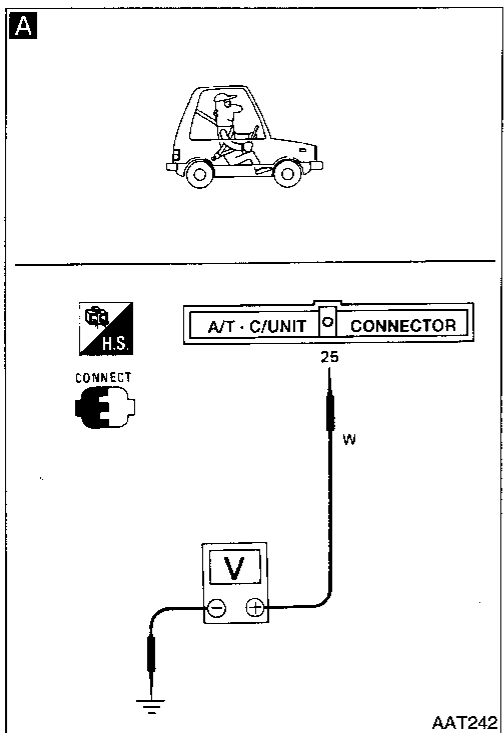

CHECK REVOLUTION SENSOR. — Refer to AT-90.

N.G. → Repair or replace revolution sensor.

O.K.

A

CHECK INPUT SIGNAL.

1.

2. • Select "ECU INPUT SIGNALS".

- Read out the value of "REVOLUTION SENSOR" while driving.
- Check the value changes according to driving speed.

OR

Check voltage between A/T control unit terminal (25) and ground while driving. (Measure with A.C. range.)

Voltage:

- At 0 km/h (0 MPH): 0V
- At 30 km/h (19 MPH): 1V or more

(Voltage rises gradually in response to vehicle speed.)

N.G. → Check the following items.

- Harness continuity between A/T control unit and revolution sensor (Main harness)
- Harness continuity between revolution sensor and ECM (ECCS control module) (Main harness)
- Ground circuit for ECM — Refer to EF & EC section ("Diagnostic Procedure 22", "TROUBLE DIAGNOSES").

O.K.

Perform self-diagnosis again after driving for a while.

N.G. → 1. Perform A/T control unit input/output signal inspection.

2. If N.G., recheck A/T control unit pin terminals for damage or connection of control unit harness connector.

O.K.


INSPECTION END

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

VEHICLE SPEED SENSOR CIRCUIT CHECK

A






☆ MONITOR ☆ NO FAIL	
VHCL/S SE-A/T	0km/h
VHCL/S SE-MTR	5km/h
THRTL POS SEN	0.4V
FLUID TEMP SE	1.2V
BATTERY VOLT	13.4V
ENGINE SPEED	1024rpm
OVERDRIVE SW	ON
P/N POSI SW	ON
R POSITION SW	OFF

RECORD


AAT243

A

CHECK INPUT SIGNAL.

- 

- 
 - Select "ECU INPUT SIGNALS".
 - Read out the value of "VEHICLE SPEED SENSOR" while driving.
 - Check the value changes according to driving speed.

OR




Check voltage between A/T control unit terminal 27 and ground while driving at 2 to 3 km/h (1 to 2 MPH) for 1 m (3 ft) or more.

Voltage:
Varies from 0V to 5V


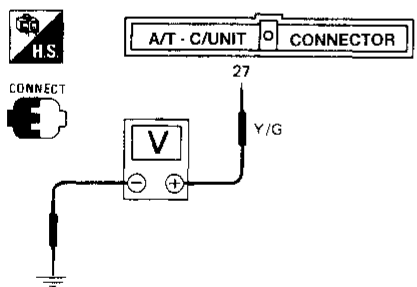
N.G. → Check the following items.

- Vehicle speed sensor and ground circuit for vehicle speed sensor — Refer to EL section ("Vehicle Speed Sensor Signal Check", "METER AND GAUGES").
- Harness continuity between control unit and vehicle speed sensor (Main harness)

A

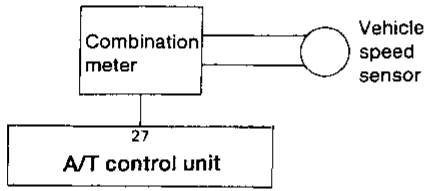

At 2 - 3 km/h (1 - 2 MPH)

AAT244

O.K. ↓

Perform self-diagnosis again after driving for a while.

N.G. →

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of control unit harness connector.



O.K. ↓

INSPECTION END

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

THROTTLE POSITION SENSOR CIRCUIT CHECK

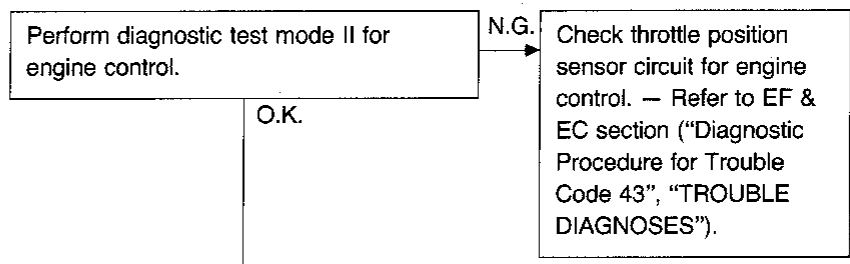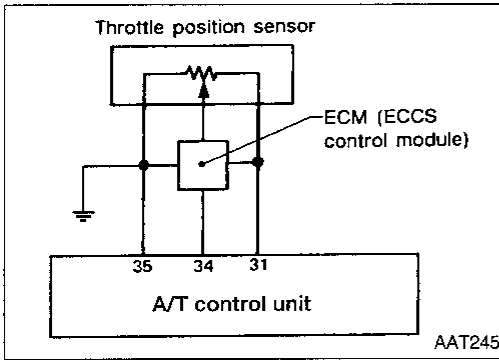

A

Depress slowly.

☆MONITOR	☆NO FAIL	▼
VHCL/S SE•A/T	0km/h	
VHCL/S SE•MTR	5km/h	
THRTL POS SEN	0.4V	
FLUID TEMP SE	1.2V	
BATTERY VOLT	13.4V	
ENGINE SPEED	1024rpm	
OVERDRIVE SW	ON	
P/N POSI SW	ON	
R POSITION SW	OFF	

RECORD

AAT246

A

CHECK INPUT SIGNAL.

1.

2.

- Select "ECU INPUT SIGNALS".
- Read out the value of "THROTTLE POSITION SENSOR".

Voltage:

Fully-closed throttle:
0.2 - 0.6V

Fully-open throttle:
2.9 - 3.9V

OR

- Check voltage between A/T control unit terminals (34) and (35) while accelerator pedal is depressed slowly.

Voltage:



Fully-closed throttle:
0.2 - 0.6V

Fully-open throttle:
2.9 - 3.9V

(Voltage rises gradually in response to throttle position.)

N.G. Check harness continuity between ECM (ECCS control module) and A/T control unit regarding throttle position sensor circuit. (Main harness)

O.K.


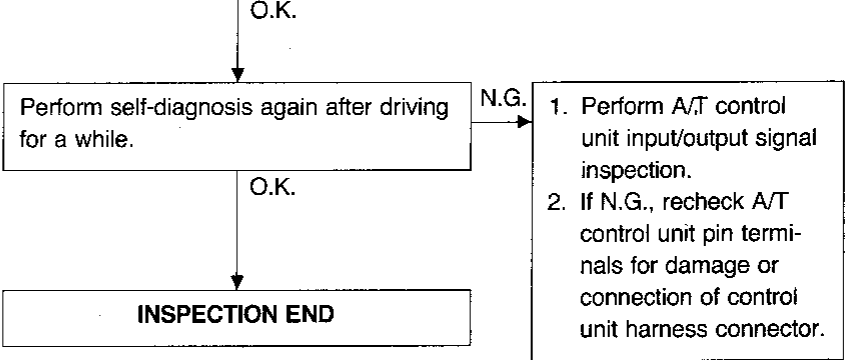
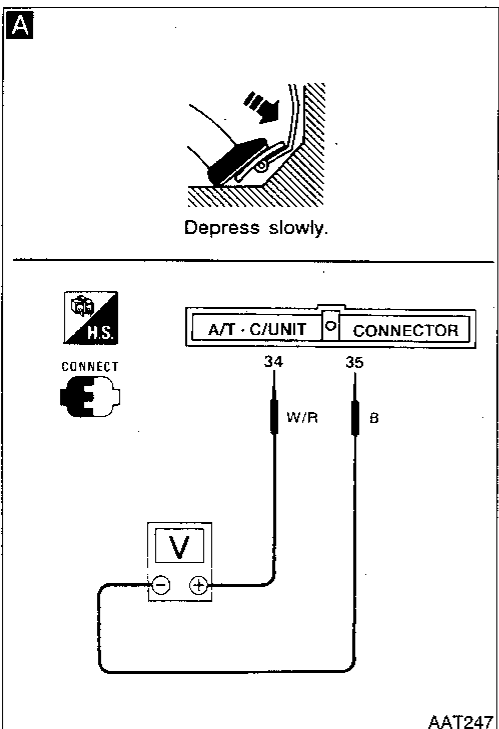


GI
MA
EM
LC
EF & EC
FE
CL
WT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

TROUBLE DIAGNOSES


Self-diagnosis (Cont'd)

SHIFT SOLENOID VALVE A CIRCUIT CHECK

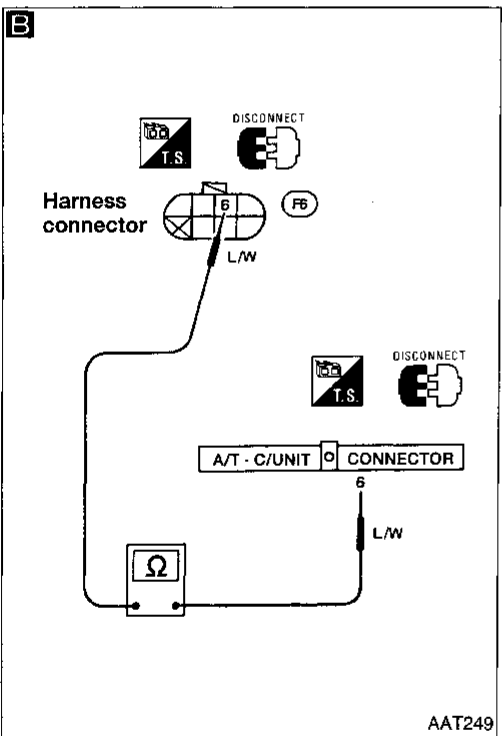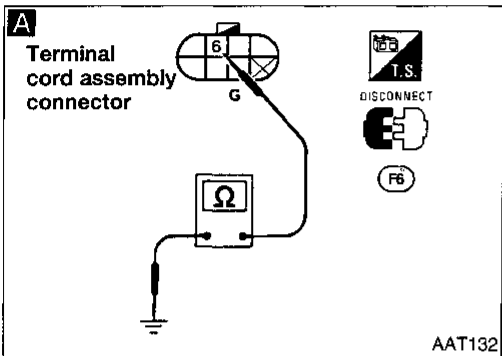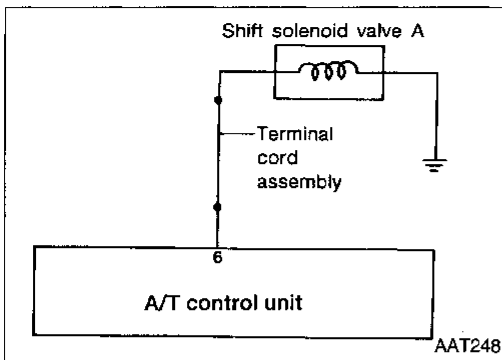

A

CHECK GROUND CIRCUIT.

1. 
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ⑥ and ground.

Resistance: 20 - 30Ω


N.G.

1. Remove control valve assembly. — Refer to AT-109.
2. Check the following items.
 - Shift solenoid valve A — Refer to AT-90.
 - Harness continuity of terminal cord assembly

O.K.

B

CHECK POWER SOURCE CIRCUIT.

1. 
2. Disconnect A/T control unit harness connector.
3. Check resistance between terminal ⑥ and control unit terminal ⑥.

Resistance: Approximately 0Ω

4. Reinstall any part removed.

N.G.

1. Repair or replace harness between A/T control unit and terminal cord assembly. (Main harness)

O.K.

Perform self-diagnosis again after driving for a while.

N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of control unit harness connector.




O.K.

INSPECTION END

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

SHIFT SOLENOID VALVE B CIRCUIT CHECK

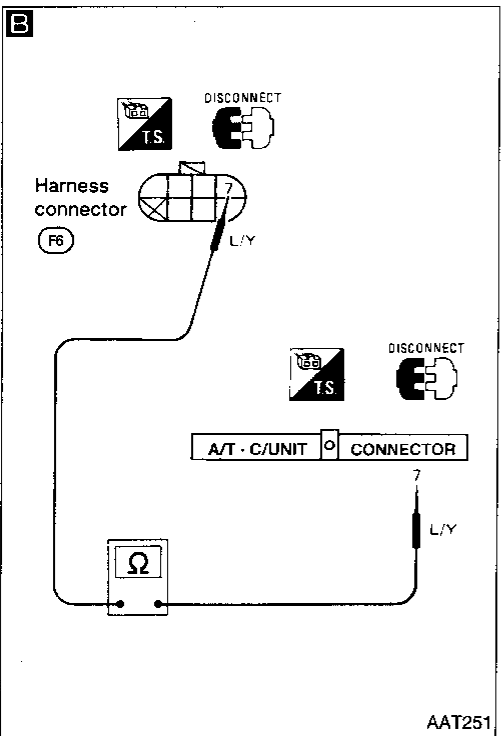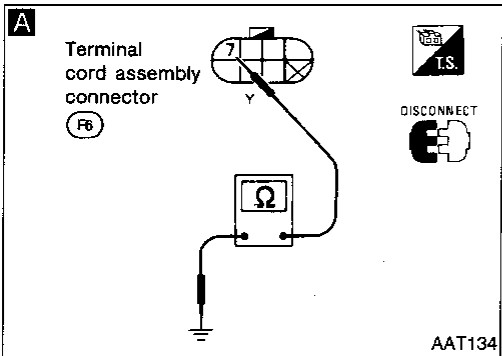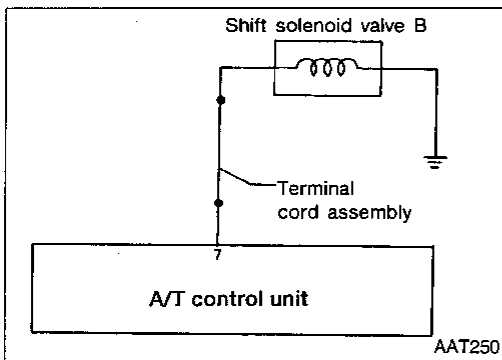

A

CHECK GROUND CIRCUIT.

- 1.
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ⑦ and ground.
Resistance: 20 - 30Ω *5,6*

N.G. → 1. Remove control valve assembly. — Refer to AT-109.
2. Check the following items.
• Shift solenoid valve B — Refer to AT-90.
• Harness continuity of terminal cord assembly

O.K. ↓

B

CHECK POWER SOURCE CIRCUIT.

- 1.
2. Disconnect A/T control unit harness connector.
3. Check resistance between terminal ⑦ and control unit terminal ⑦.
Resistance: Approximately 0Ω *1.0*
4. Reinstall any part removed.

N.G. → Repair or replace harness between A/T control unit and terminal cord assembly. (Main harness)

O.K. ↓

Perform self-diagnosis again after driving for a while.

N.G. → 1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of control unit harness connector.

O.K. ↓




INSPECTION END

GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

OVERRUN CLUTCH SOLENOID VALVE CIRCUIT CHECK

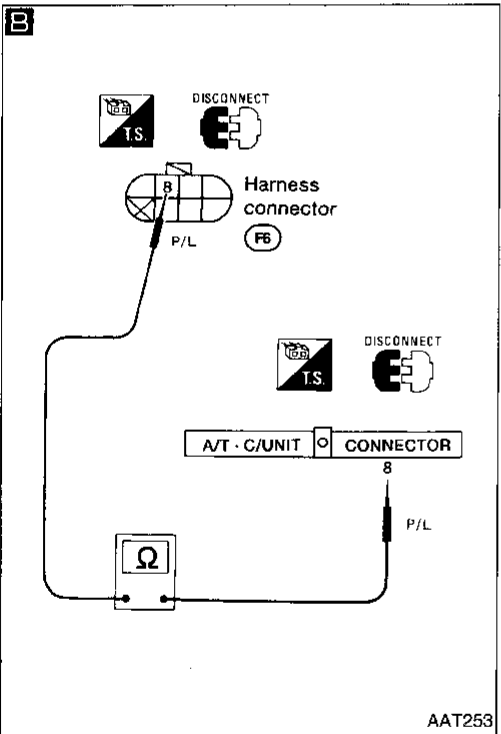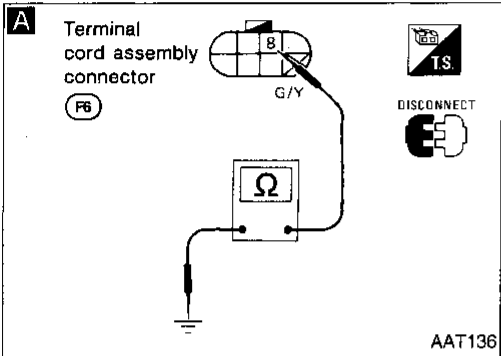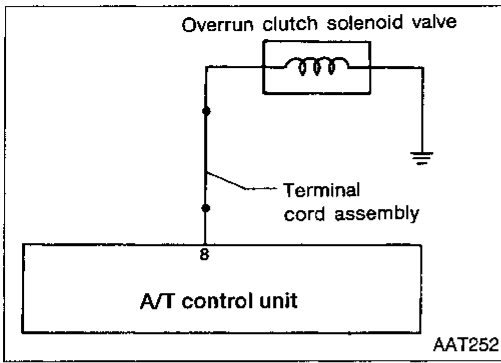

A

CHECK GROUND CIRCUIT.

- 1.
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ⑧ and ground.
Resistance: 20 - 30Ω

N.G.

1. Remove control valve assembly. — Refer to AT-109.
2. Check the following items.
 - Overrun clutch solenoid valve. — Refer to AT-90.
 - Harness continuity of terminal cord assembly

O.K.

B

CHECK POWER SOURCE CIRCUIT.

- 1.
2. Disconnect A/T control unit harness connector.
3. Check resistance between terminal ⑧ and control unit terminal ⑧.
Resistance: Approximately 0Ω
4. Reinstall any part removed.

N.G.

1. Repair or replace harness between A/T control unit and terminal cord assembly. (Main harness)

O.K.

Perform self-diagnosis again after driving for a while.

N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of control unit harness connector.




O.K.

INSPECTION END

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

TORQUE CONVERTER CLUTCH SOLENOID VALVE CIRCUIT CHECK

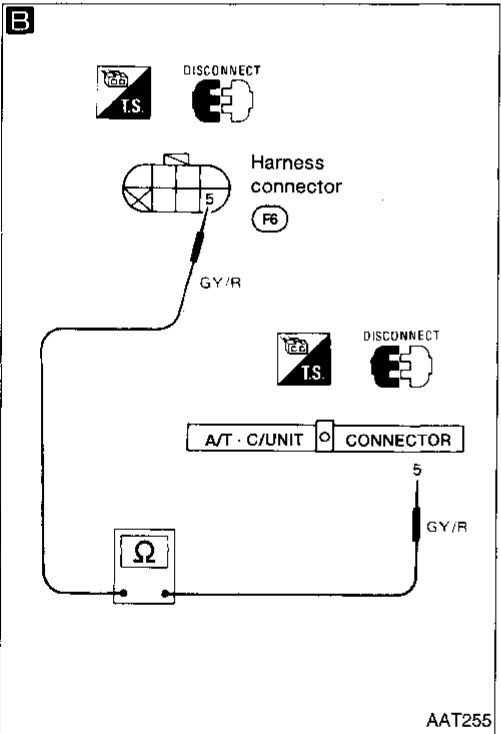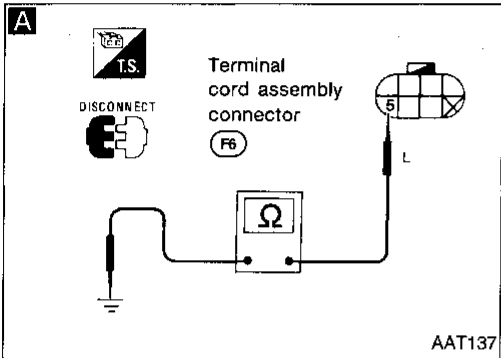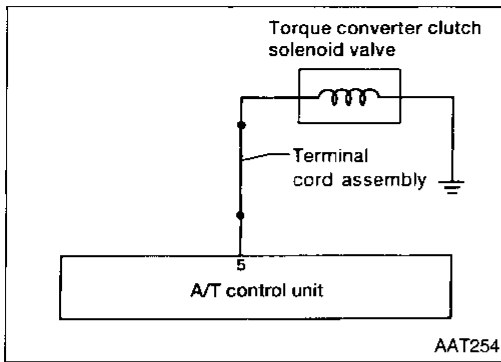

A

CHECK GROUND CIRCUIT.

- 1.
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ⑤ and ground.
Resistance: 2.5 - 5 Ω

N.G.

1. Remove oil pan. — Refer to AT-109.
2. Check the following items.
 - Torque converter clutch solenoid valve — Refer to AT-90.
 - Harness continuity of terminal cord assembly

O.K.

B

CHECK POWER SOURCE CIRCUIT.

- 1.
2. Disconnect A/T control unit harness connector.
3. Check resistance between terminal ⑤ and control unit terminal ⑤.
Resistance: Approximately 0 Ω
4. Reinstall any part removed.

N.G.

1. Repair or replace harness between A/T control unit and terminal cord assembly. (Main harness)

O.K.

Perform self-diagnosis again after driving for a while.

N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of control unit harness connector.

O.K.




INSPECTION END

GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)


FLUID TEMPERATURE SENSOR CIRCUIT AND A/T CONTROL UNIT POWER SOURCE CIRCUIT CHECKS

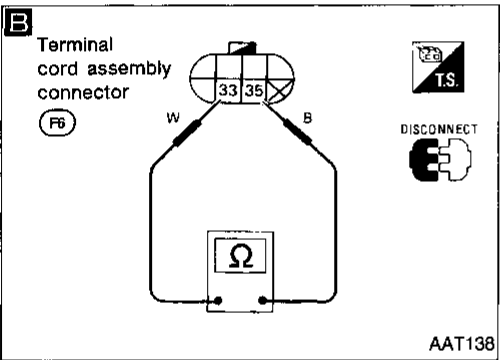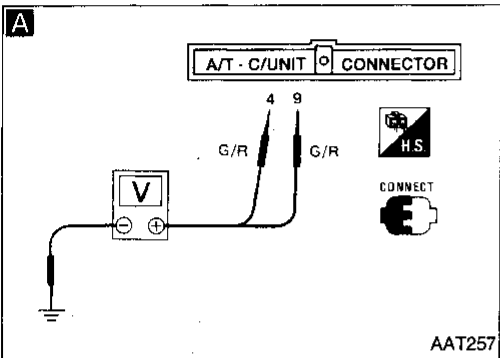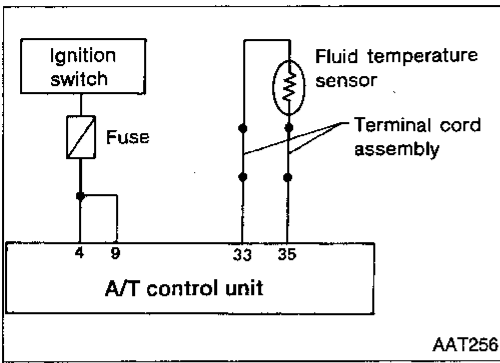

A

CHECK A/T CONTROL UNIT POWER SOURCE.

1.



2. Check voltage between A/T control unit terminals ④, ⑨ and ground. **Battery positive voltage should exist.**

N.G.

Check the following items.

- Harness continuity between ignition switch and A/T control unit (Main harness)
- Ignition switch and fuse — Refer to EL section ("Wiring Diagram", "POWER SUPPLY ROUTING").

O.K.

B

CHECK FLUID TEMPERATURE SENSOR WITH TERMINAL CORD ASSEMBLY.

1.



2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminals ③③ and ③⑤ when A/T is cold.

Resistance:

Cold [20°C (68°F)]

Approximately 2.5 kΩ

4. Reinstall any part removed.

N.G.

1. Remove oil pan.
2. Check the following items.
 - Fluid temperature sensor — Refer to AT-91.
 - Harness continuity of terminal cord assembly


O.K.

A

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

C


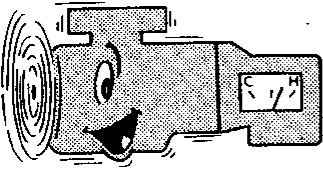


☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
VHCL/S SE·A/T	0km/h	
VHCL/S SE·MTR	5km/h	
THRTL POS SEN	0.4V	
FLUID TEMP SE	1.2V	
BATTERY VOLT	13.4V	
ENGINE SPEED	1024rpm	
OVERDRIVE SW	ON	
P/N POSI SW	ON	
R POSITION SW	OFF	


RECORD

AAT258

C

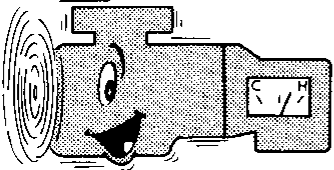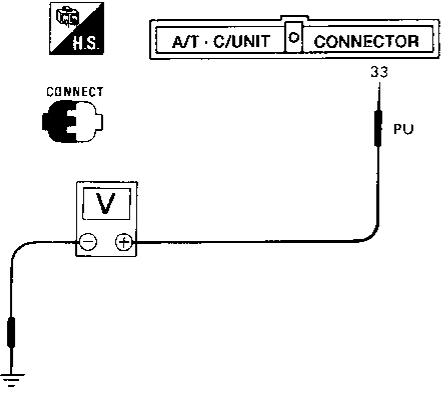AAT259

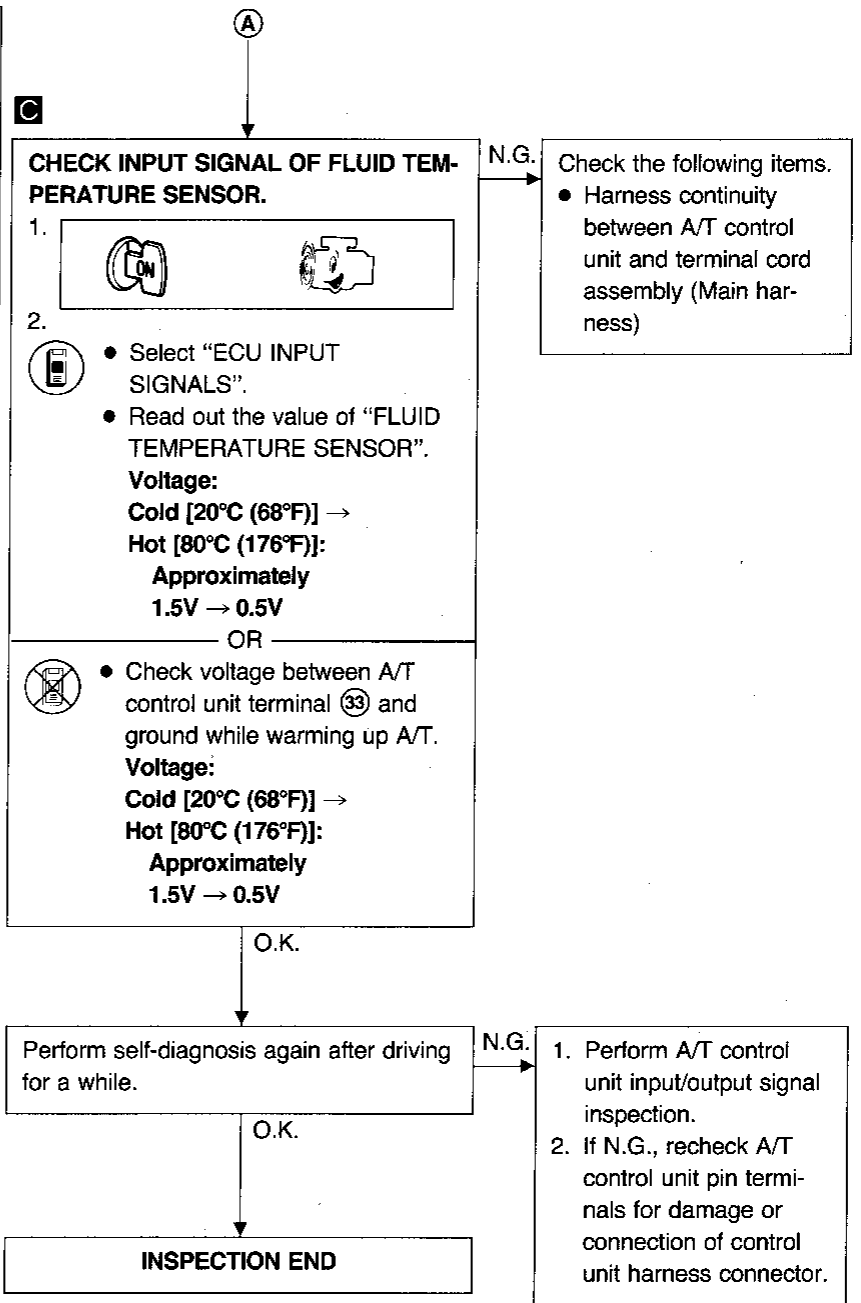


GI
 MA
 EM
 LC
 EF &
 EC
 FE
 CL
 MT
 AT
 FA
 RA
 BR
 ST
 BF
 HA
 EL
 IDX

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

ENGINE SPEED SIGNAL CIRCUIT CHECK

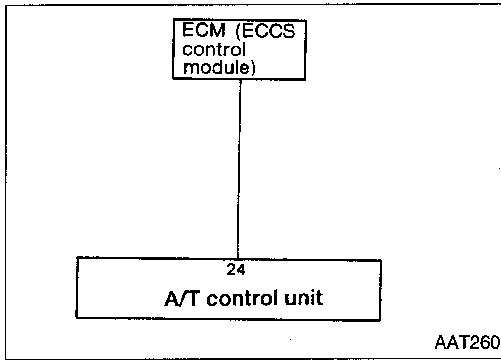

Perform diagnostic test mode II (self-diagnostic results) for engine control. Check ignition signal circuit.

N.G. Check ignition signal circuit for engine control. — Refer to EF & EC section ("Diagnostic Procedure for Trouble Code 21", "TROUBLE DIAGNOSES").

O.K.

A

Depress slowly.

☆MONITOR	☆NO FAIL
VHCL/S SE•A/T	0km/h
VHCL/S SE•MTR	5km/h
THRTL POS SEN	0.4V
FLUID TEMP SE	1.2V
BATTERY VOLT	13.4V
ENGINE SPEED	1024rpm
OVERDRIVE SW	ON
P/N POSI SW	ON
R POSITION SW	OFF

RECORD

AAT246

A

CHECK INPUT SIGNAL.

-
- Select "ECU INPUT SIGNALS".
 - Read out the value of "ENGINE SPEED".
 - Check engine speed changes according to throttle opening.

OR

 -
 - Check voltage between A/T control unit terminal 24 and ground. **Voltage: 0.9 - 4.5V**

N.G. Check the following items.

- Harness continuity between A/T control unit and ignition coil.
- Resistor
- Ignition coil — Refer to EF & EC section ("Electrical Components Inspection", "TROUBLE DIAGNOSES").


O.K.

Perform self-diagnosis again after driving for a while.

N.G. 1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of control unit harness connector.

O.K.




INSPECTION END

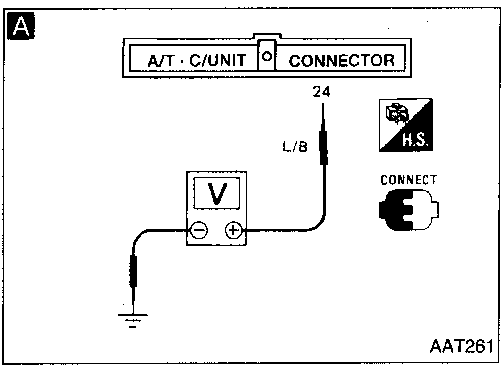

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

LINE PRESSURE SOLENOID VALVE CIRCUIT CHECK

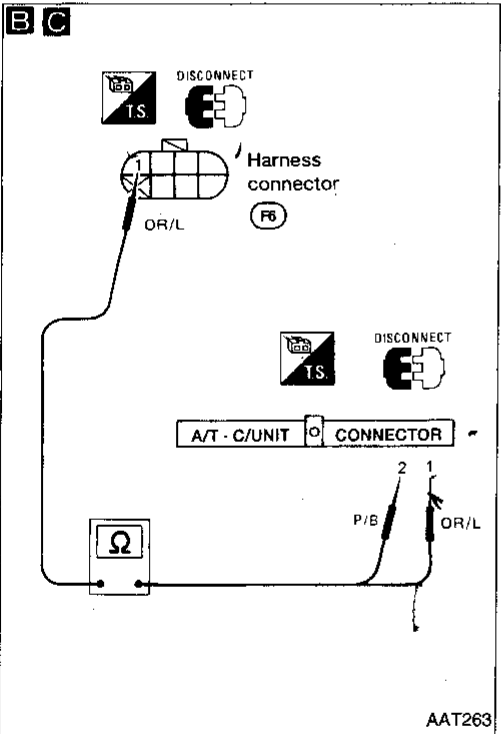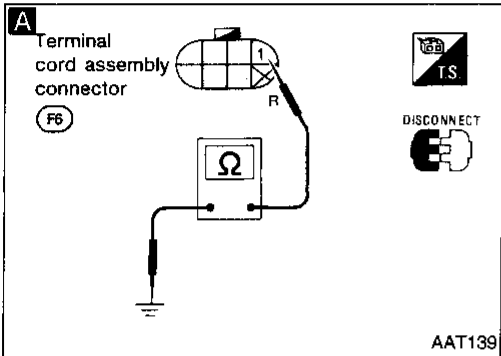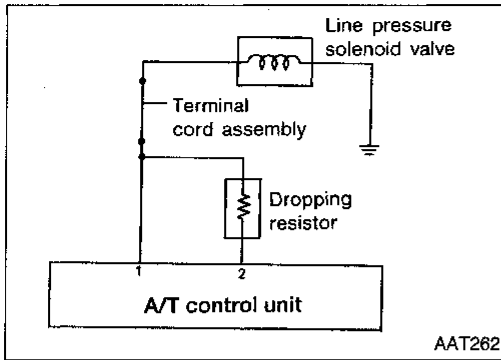

A

CHECK GROUND CIRCUIT.

1. (OFF)
2. Disconnect terminal cord assembly connector in engine compartment.
3. Check resistance between terminal ① and ground.
Resistance: 2.5 - 5Ω

N.G. → 1. Remove control valve assembly. — Refer to AT-109.
2. Check the following items.
• Line pressure solenoid valve — Refer to AT-90.
• Harness continuity of terminal cord assembly

O.K. →

B

CHECK POWER SOURCE CIRCUIT.

1. (OFF)
2. Disconnect A/T control unit harness connector.
3. Check resistance between terminal ① and control unit terminal ②.
Resistance: 11.2 - 12.8Ω

N.G. → Check the following items.
• Dropping resistor — Refer to AT-91.
• Harness continuity between A/T control unit ② and terminal cord assembly (Main harness)

O.K. →

C

CHECK POWER SOURCE CIRCUIT.

1. (OFF)
2. Check resistance between terminal ① and A/T control unit terminal ①.
Resistance: Approximately 0Ω
3. Reinstall any part removed.

N.G. → Repair or replace harness between A/T control unit ① and terminal cord assembly.

O.K. →

Perform self-diagnosis again after driving for a while.

N.G. → 1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of control unit harness connector.

O.K. →


INSPECTION END

GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

INHIBITOR SWITCH, OVERDRIVE SWITCH AND CLOSED THROTTLE POSITION SWITCH CHECKS

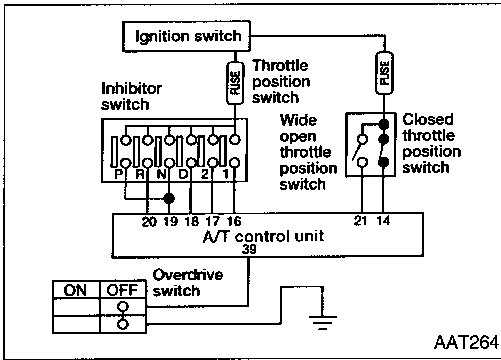

AAT264

A


☆ MONITOR	☆ NO FAIL	<input type="checkbox"/>
VHCL/S SE•A/T	0km/h	
VHCL/S SE•MTR	5km/h	
THRTL POS SEN	0.4V	
FLUID TEMP SE	1.2V	
BATTERY VOLT	13.4V	
ENGINE SPEED	1024rpm	
OVERDRIVE SW	ON	
P/N POSI' SW	ON	
R POSITION SW	OFF	


RECORD

AAT265


A

CHECK INHIBITOR SWITCH CIRCUIT.



2.  • Select "ECU INPUT SIGNALS".
- Read out "R", "N", "D", "1" and "2" POSITION SWITCH moving selector lever to each position.
 - Check the selector lever position is indicated properly.

OR


-  Check voltage between A/T control unit terminals (16), (17), (18), (19), (20) and ground while moving selector lever through each position.

Voltage:
B: Battery positive voltage
0: 0V

Lever position	Terminal No.				
	(19)	(20)	(18)	(17)	(16)
P, N	B	0	0	0	0
R	0	B	0	0	0
D	0	0	B	0	0
2	0	0	0	B	0
1	0	0	0	0	B

O.K.

A

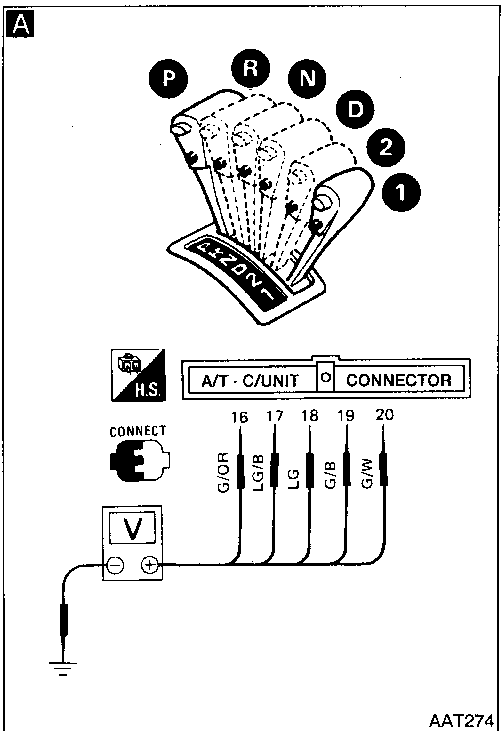

AAT274


N.G.

- Check the following items.
- Inhibitor switch — Refer to AT-89.
 - Harness continuity between ignition switch and inhibitor switch (Main harness)
 - Harness continuity between inhibitor switch and A/T control unit (Main harness)

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

B

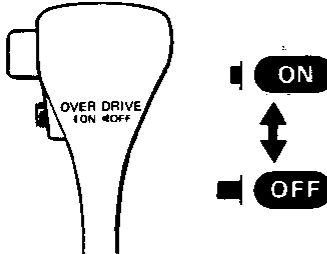

OVER DRIVE
ON OFF

☆ MONITOR ☆ NO FAIL

VHCL/S SE·A/T	0km/h
VHCL/S SE·MTR	5km/h
THRTL POS SEN	0.4V
FLUID TEMP SE	1.2V
BATTERY VOLT	13.4V
ENGINE SPEED	1024rpm
OVERDRIVE SW	ON
P/N POSI SW	ON
R POSITION SW	OFF



RECORD

AAT266


A

B

CHECK OVERDRIVE SWITCH CIRCUIT.

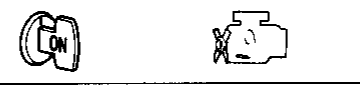- 
- 
 - Select "ECU INPUT SIGNALS".
 - Read out "OVERDRIVE SWITCH".
 - Check the position is indicated properly. (Overdrive switch "ON" displayed on CONSULT means overdrive "OFF".)

OR




- Check voltage between A/T control unit terminal 39 and ground when overdrive switch is in "ON" position and in "OFF" position.

Switch position	Voltage
ON	4.5 - 5.5V
OFF	1V or less

N.G. Check the following items.

- Overdrive switch — Refer to AT-89.
- Harness continuity between A/T control unit and overdrive switch (Main harness)
- Harness continuity of ground circuit for overdrive switch (Main harness)

B

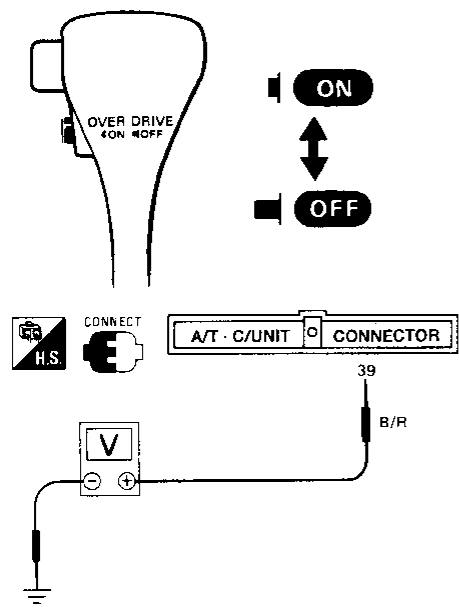

OVER DRIVE
ON OFF

CONNECT H.S. A/T · C/UNIT CONNECTOR

39 B/R

V

AAT267

O.K.


B

GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

C D





☆MONITOR	☆NO FAIL	
D POSITION SW	OFF	
2 POSITION SW	OFF	
1 POSITION SW	OFF	
ASCD·CRUISE	OFF	
ASCD·OD OUT	OFF	
KICKDOWN SW	OFF	
POWERSHIFT SW	OFF	
CLOSED THL/SW	ON	
W/O THRL/P-SW	OFF	

RECORD

AAT268

C D

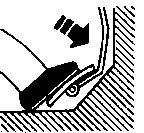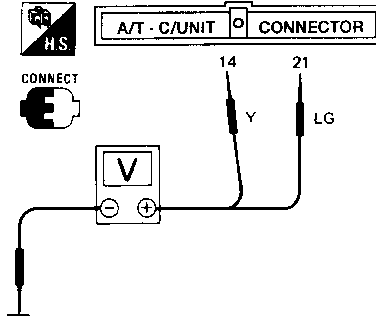





AAT269

B

C


CHECK WIDE OPEN THROTTLE POSITION SWITCH CIRCUIT.

1.  

2.  • Select "ECU INPUT SIGNALS".

- Read out "WIDE OPEN THROTTLE POSITION SWITCH" depressing accelerator pedal fully.
- Check wide open throttle position switch position is indicated properly.

OR

 • Check voltage between A/T control unit terminal ⑳ and ground while depressing accelerator pedal slowly. (after warming up engine)

Voltage:

When releasing accelerator pedal:
1V or less

When depressing accelerator pedal fully:
8 - 15V

O.K. → **C**

N.G. → Check harness continuity between A/T control unit and wide open throttle position switch.


O.K. → Check wide open throttle position switch — Refer to EF & EC section ("Electrical Components Inspection", "TROUBLE DIAGNOSES").

N.G. → **D**

D → Repair harness or connector between control unit and wide open throttle position switch.

TROUBLE DIAGNOSES

Self-diagnosis (Cont'd)

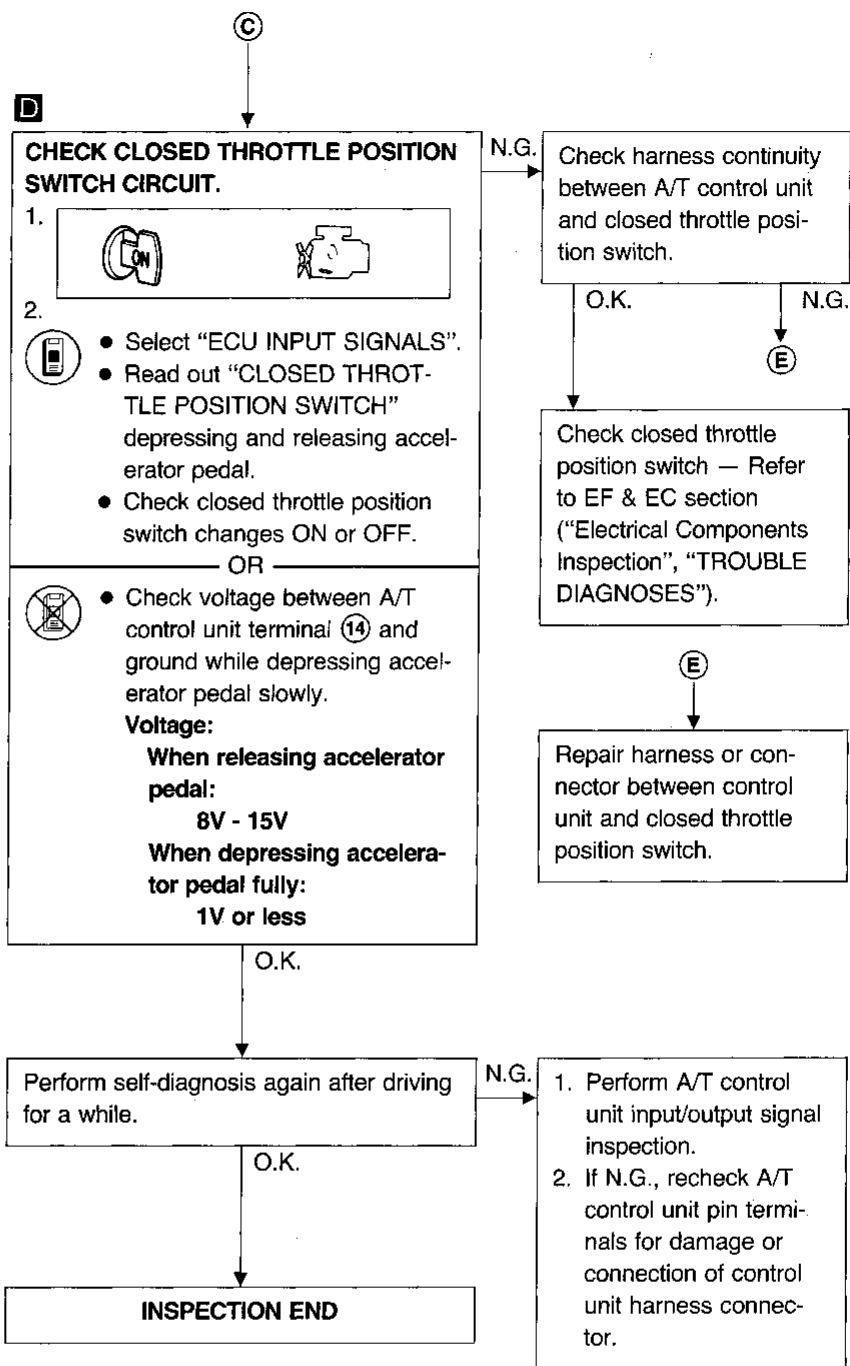





GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

TROUBLE DIAGNOSES

Diagnostic Procedure 1

SYMPTOM:

OD OFF indicator lamp does not come on for about 2 seconds when turning ignition switch to "ON".

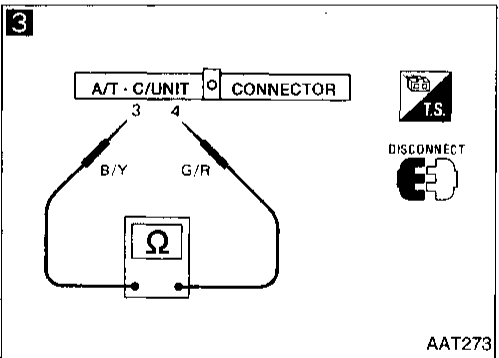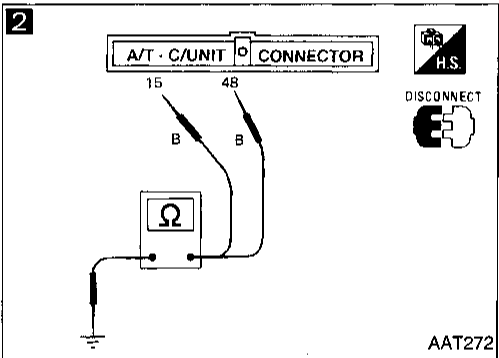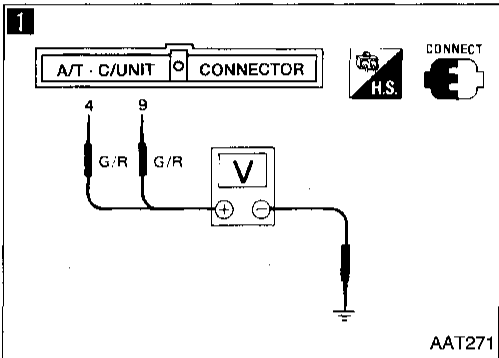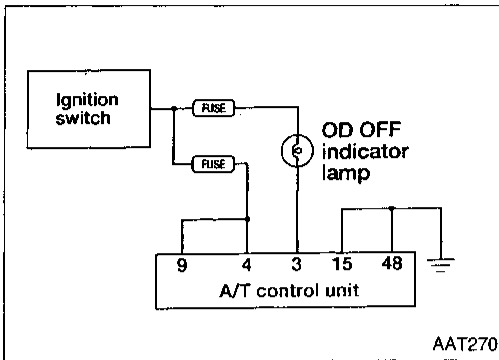

1

CHECK A/T CONTROL UNIT POWER SOURCE.



1. Check voltage between A/T control unit terminals (4), (9) and ground. **Battery positive voltage should exist.**

N.G.


Check the following items.

- Harness continuity between ignition switch and A/T control unit (Main harness)
- Ignition switch and fuse — Refer to EL section ("Wiring Diagram", "POWER SUPPLY ROUTING").

O.K.

2

CHECK A/T CONTROL UNIT GROUND CIRCUIT.



1. Disconnect A/T control unit harness connector.
2. Check resistance between control unit terminals (15), (48) and ground. **Resistance: Approximately 0Ω**

N.G.

Check harness continuity between A/T control unit and ground.

O.K.

3

CHECK LAMP CIRCUIT.

1. Check resistance between A/T control unit terminals (3) and (4). **Resistance: 50 - 100Ω**
2. Reinstall any part removed.

N.G.

Check the following items.

- OD OFF indicator lamp — Refer to EL section ("Combination Meter", "METER AND GAUGES").
- Harness continuity between ignition switch and OD OFF indicator lamp (Main harness)
- Harness continuity between OD OFF indicator lamp and A/T control unit.

O.K.



Check again.

N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of control unit harness connector.

O.K.



INSPECTION END

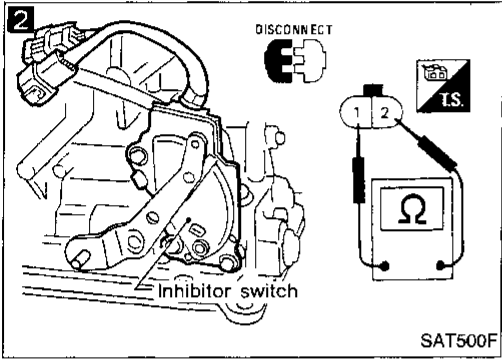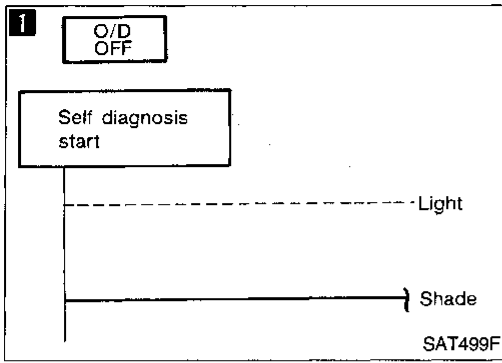

Diagnostic Procedure 2

SYMPTOM:


Engine cannot be started with selector lever in "P" or "N" position or engine can be started with selector lever in "D", "2", "1" or "R" position.

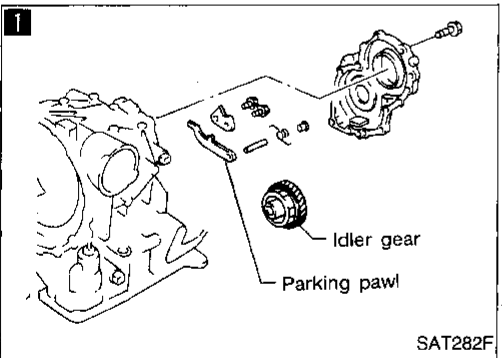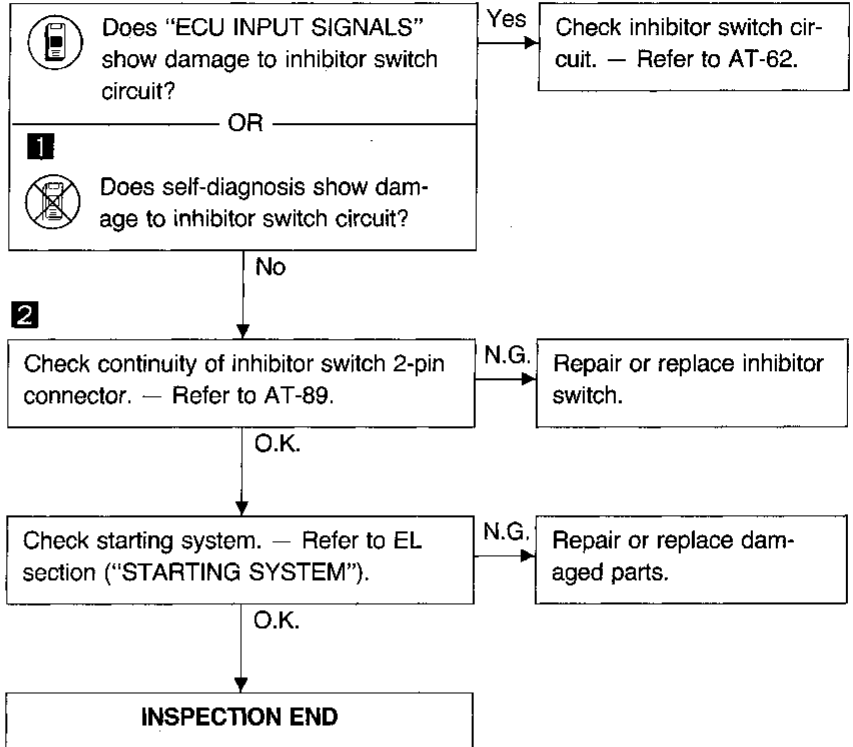

Diagnostic Procedure 3

SYMPTOM:

Vehicle moves when it is pushed forward or backward with selector lever in "P" position.





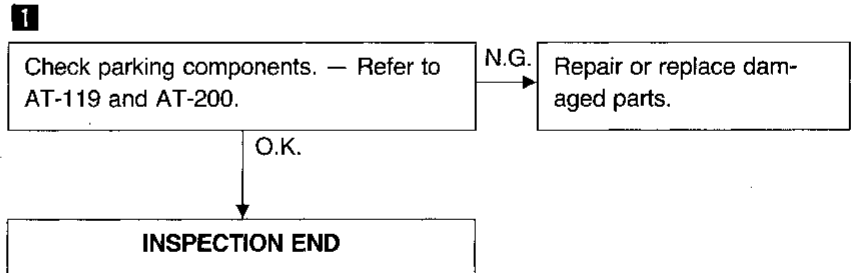






TROUBLE DIAGNOSES

Diagnostic Procedure 4

SYMPTOM:

Vehicle moves forward or backward when selecting "N" position.

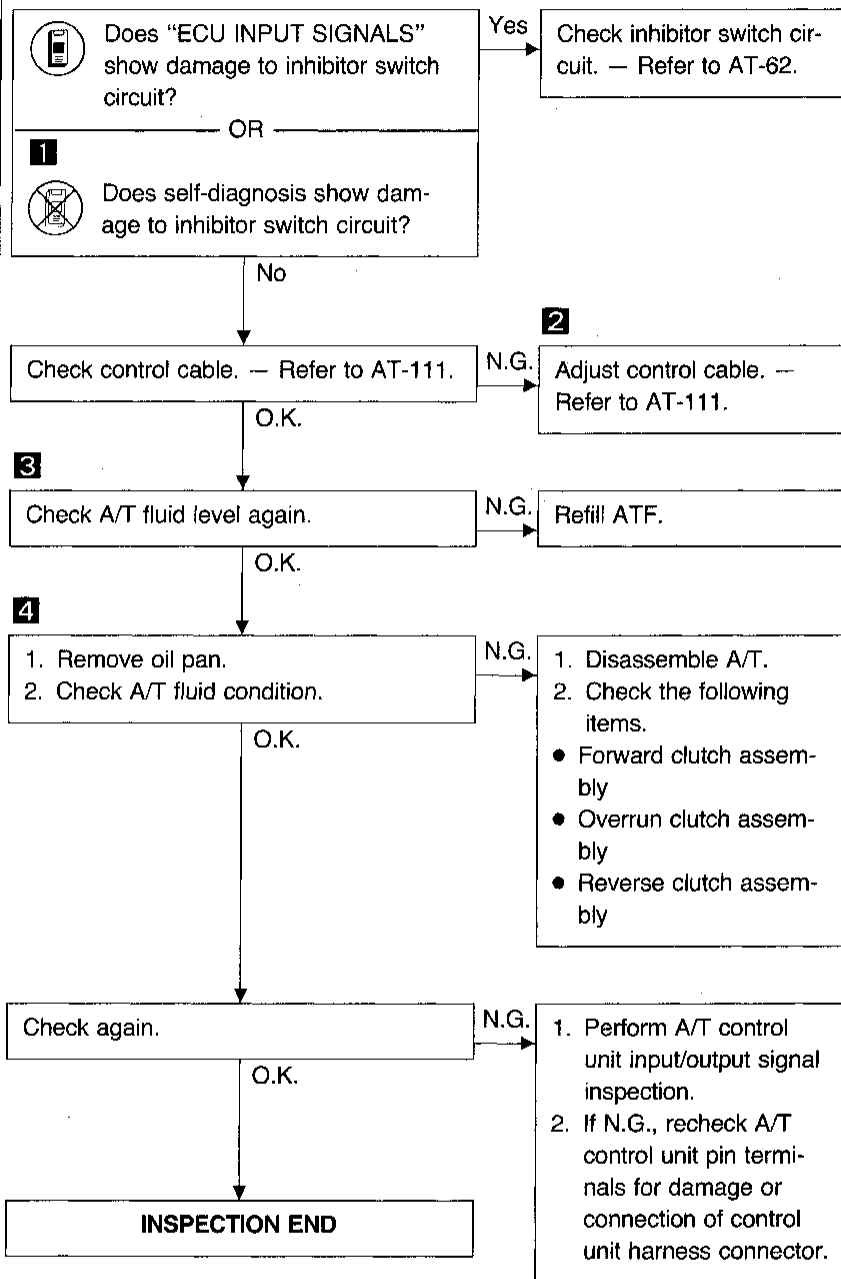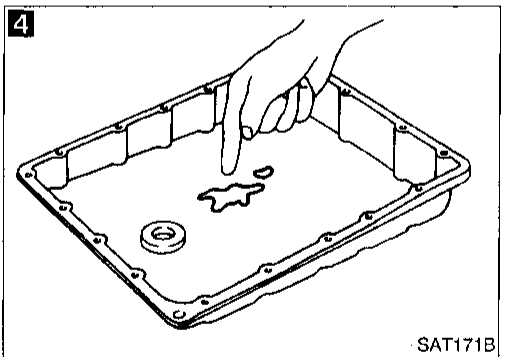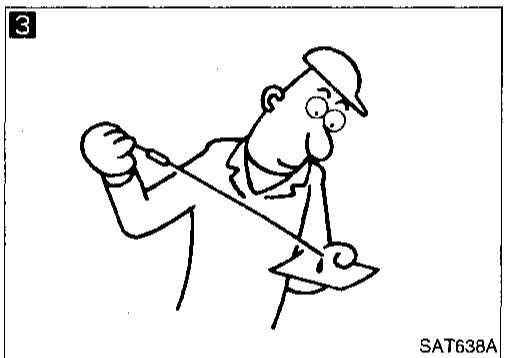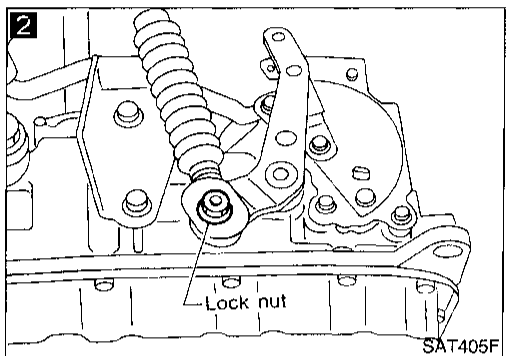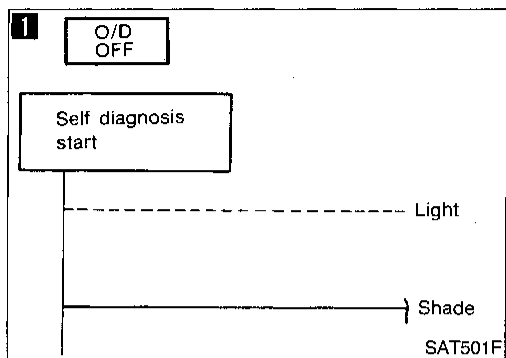


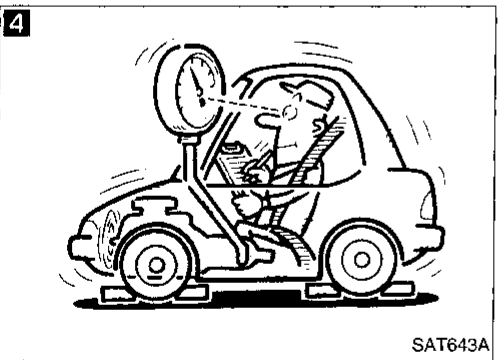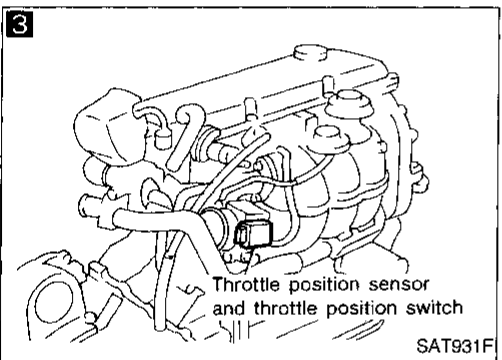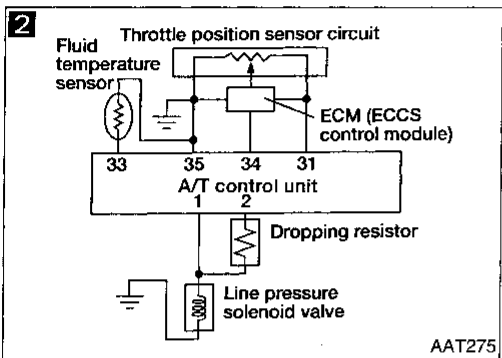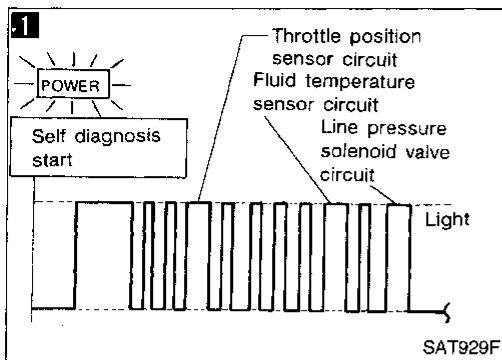

Diagnostic Procedure 5

SYMPTOM:

There is large shock when changing from "N" to "R" position.




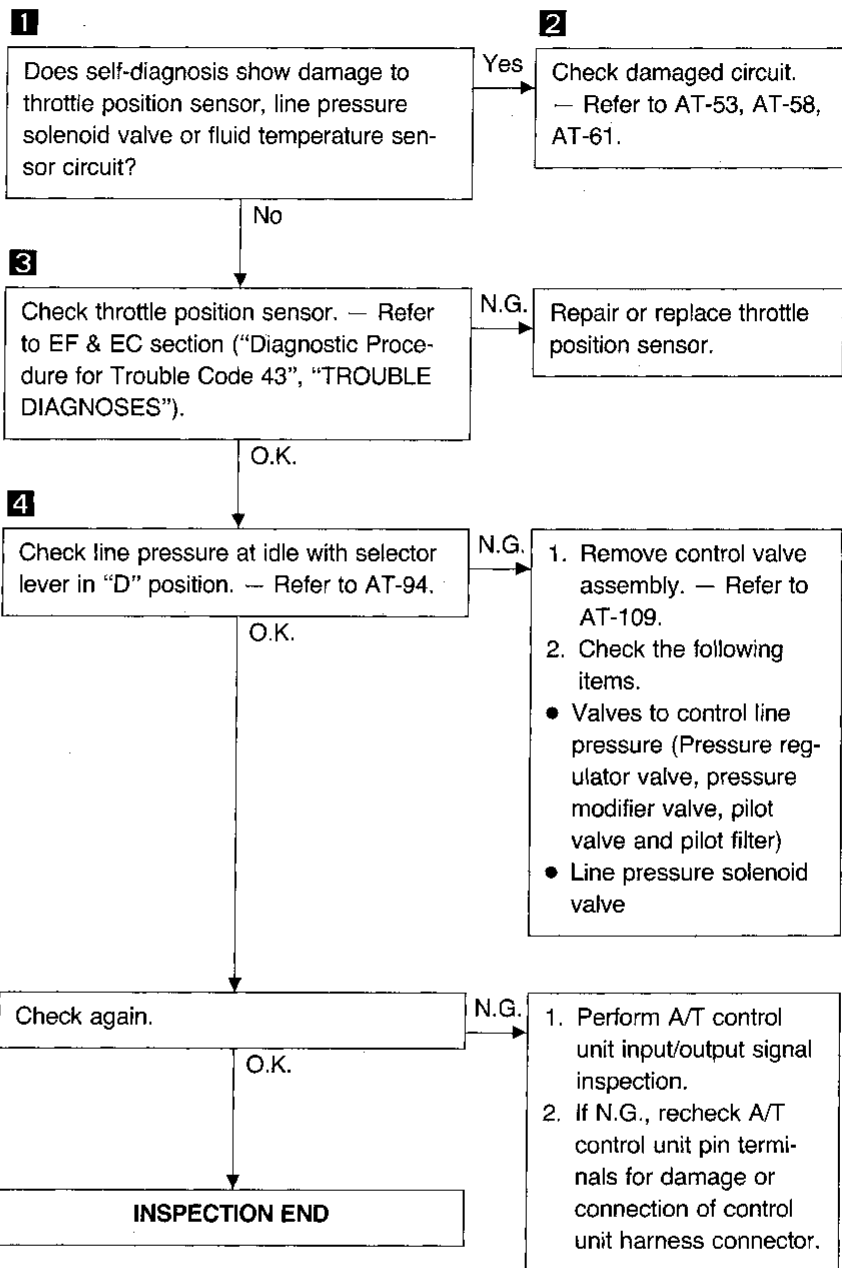


GI
 MA
 EM
 LC
 EF & EC
 FE
 CL
 NT
AT
 FA
 RA
 BR
 ST
 BF
 HA
 EL
 IDX

Diagnostic Procedure 6



SYMPTOM:

Vehicle does not creep backward when selecting "R" position.

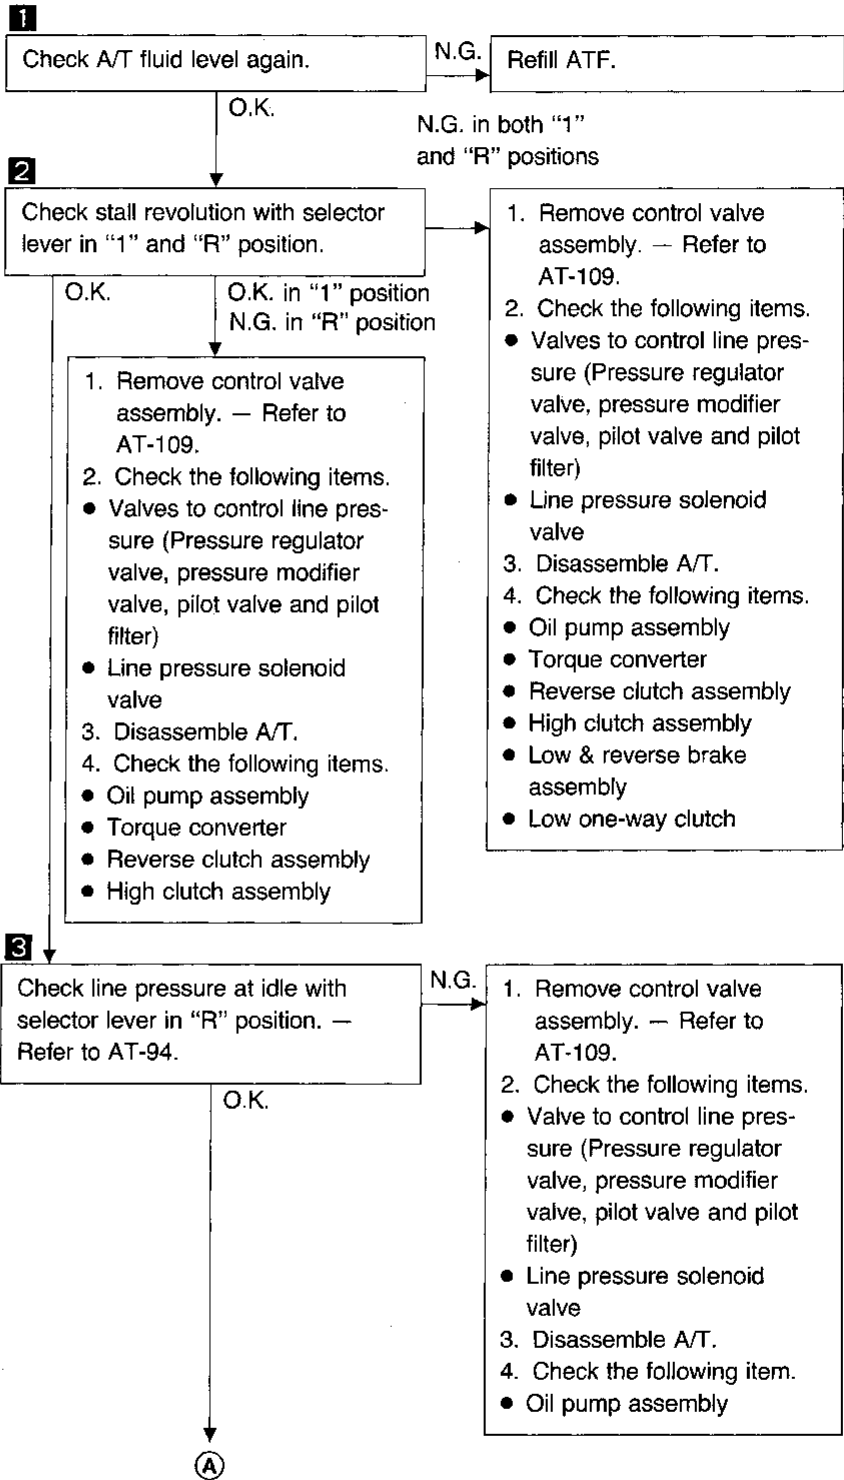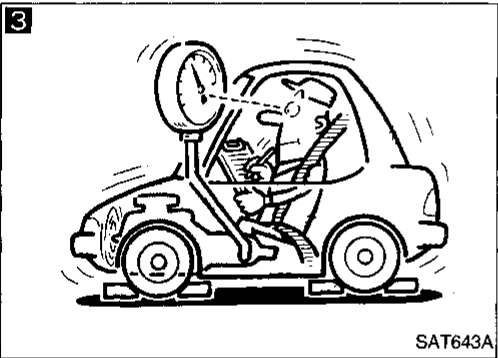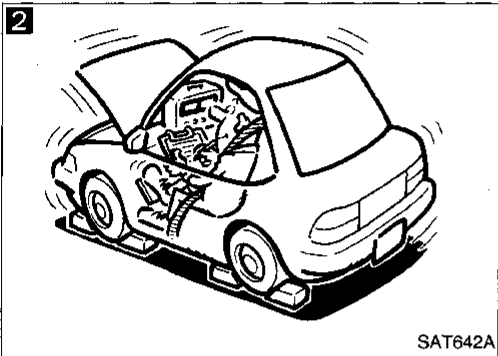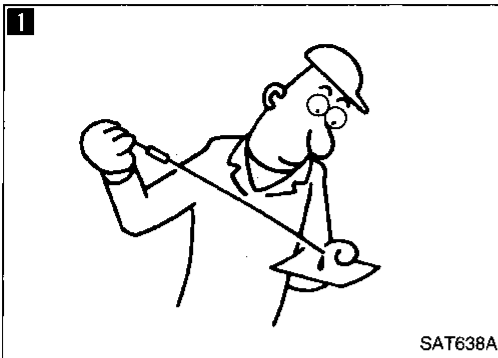

TROUBLE DIAGNOSES

Diagnostic Procedure 6 (Cont'd)

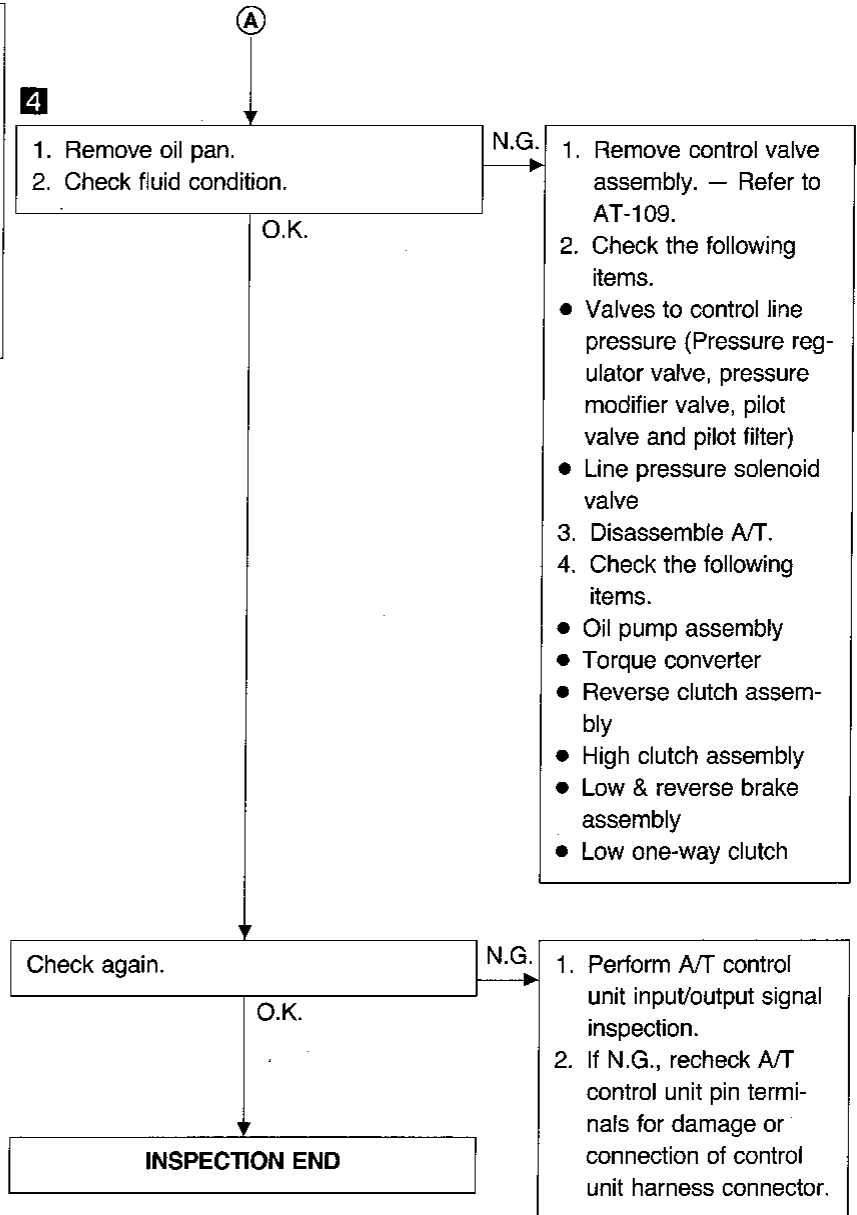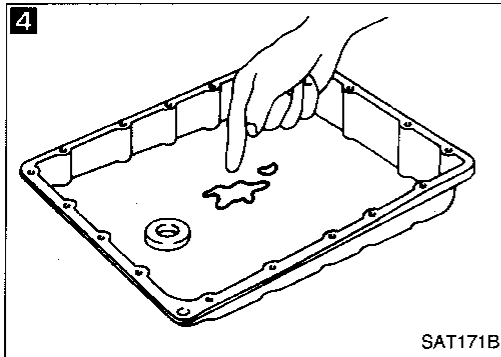

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR





ST

BF

HA

EL


IDX

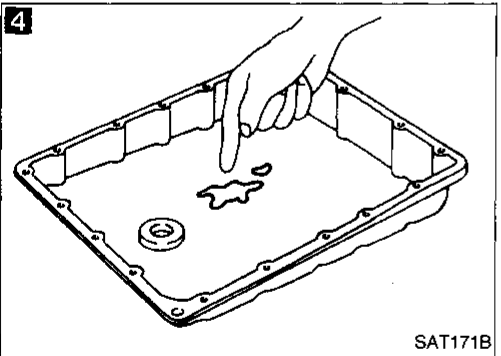
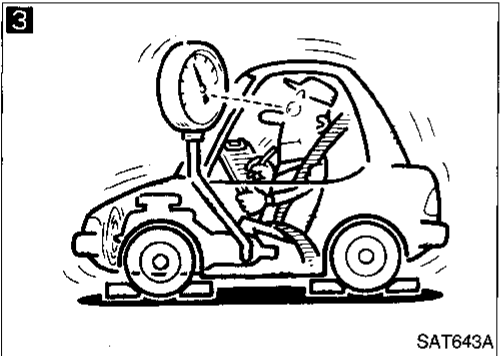
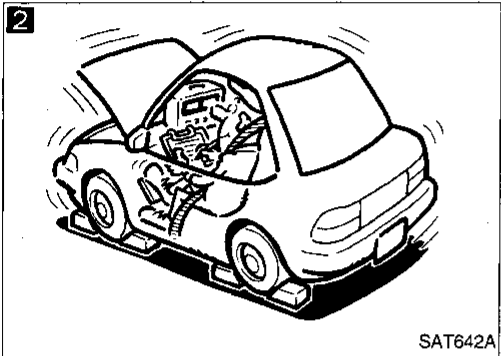
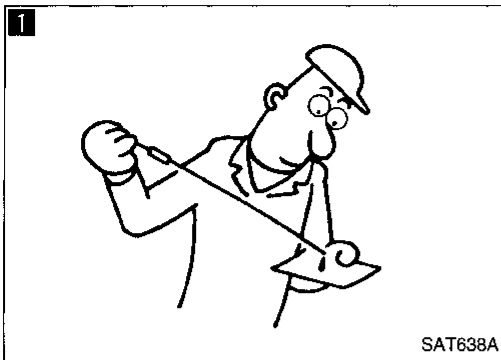


Diagnostic Procedure 7

SYMPTOM:

Vehicle does not creep forward when selecting "D", "2" or "1" position.

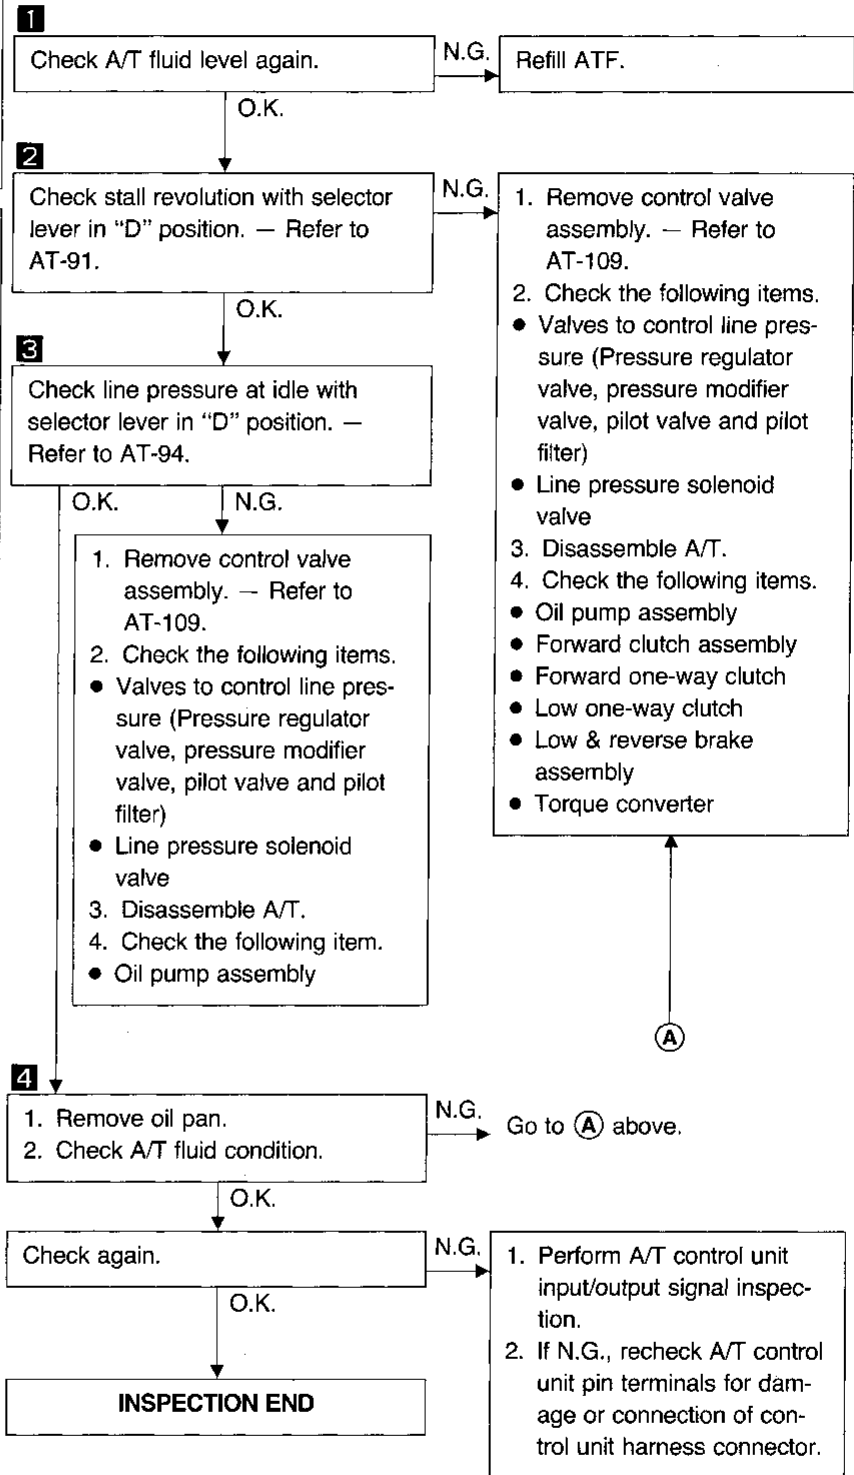


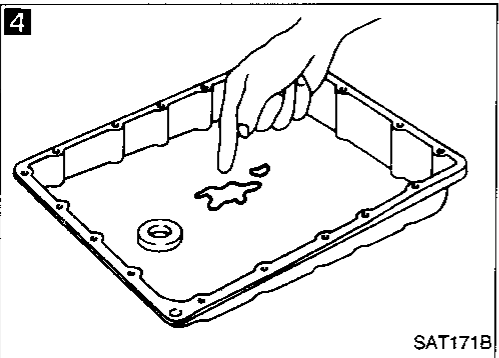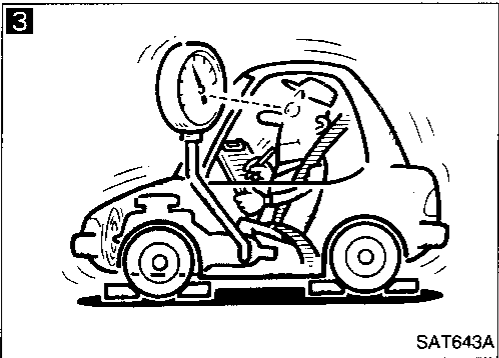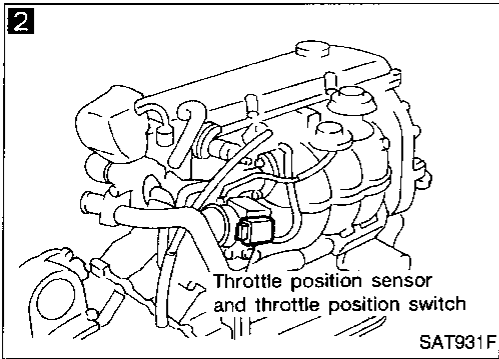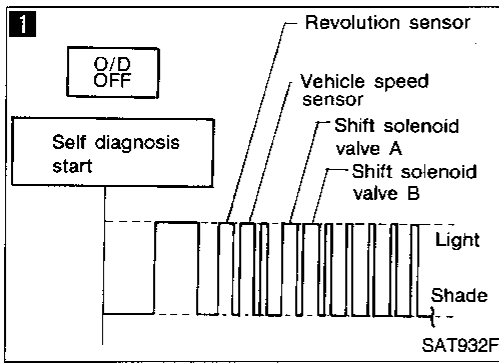





Diagnostic Procedure 8

SYMPTOM:

Vehicle cannot be started from D₁ on Cruise test — Part 1.

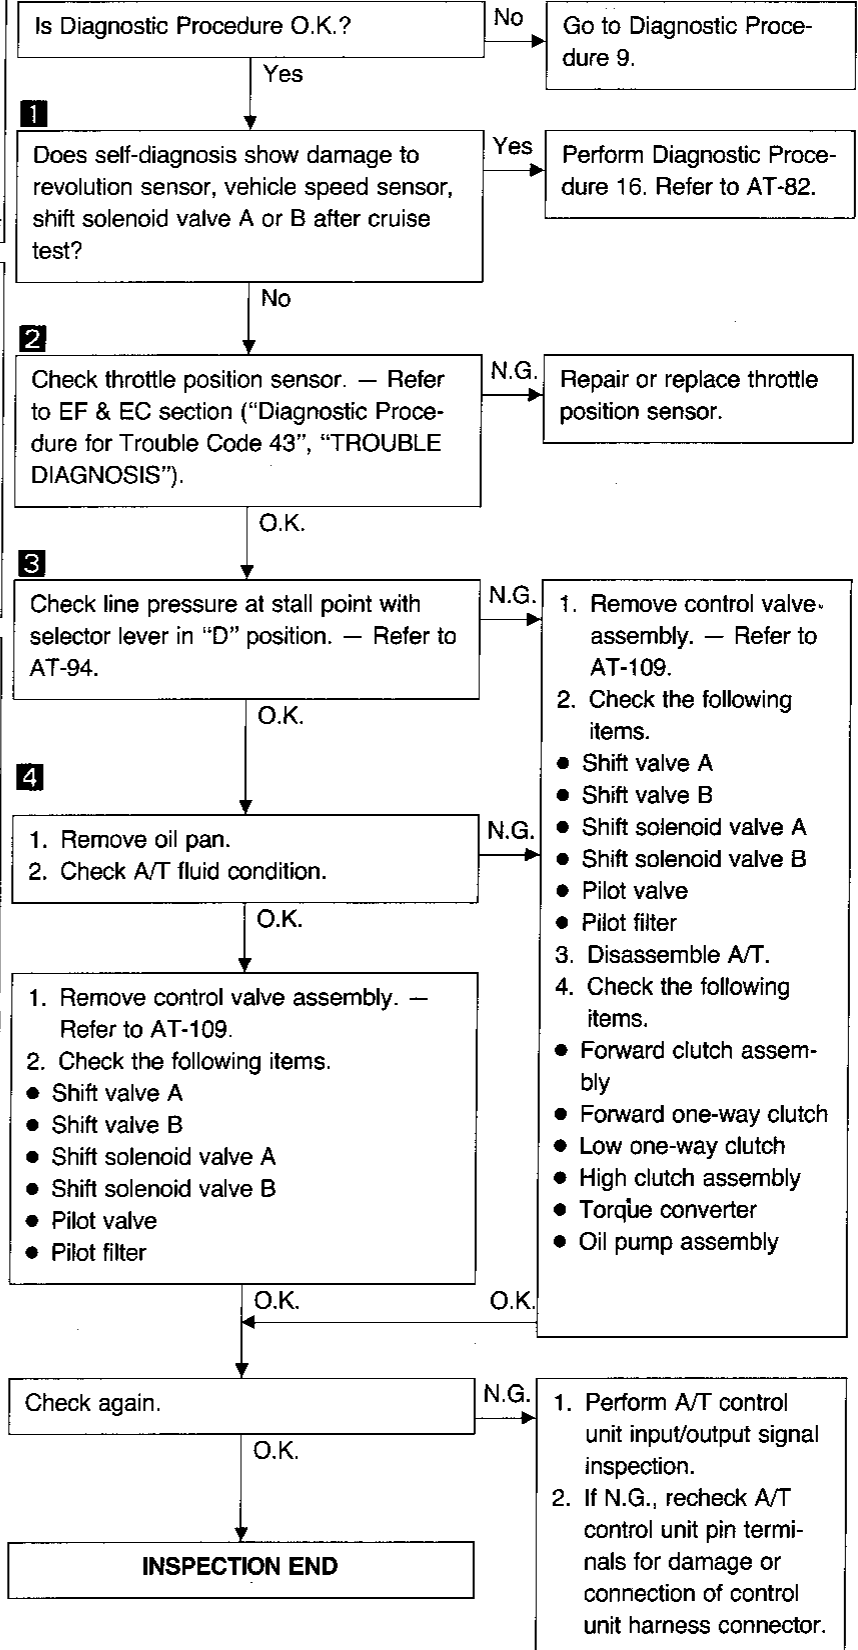

GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

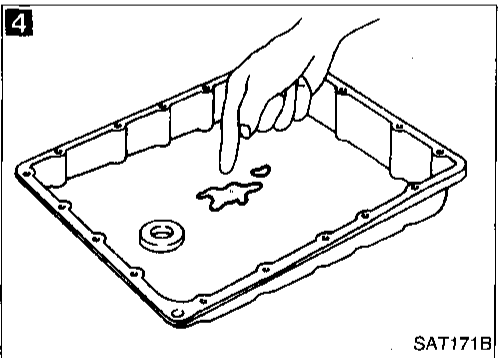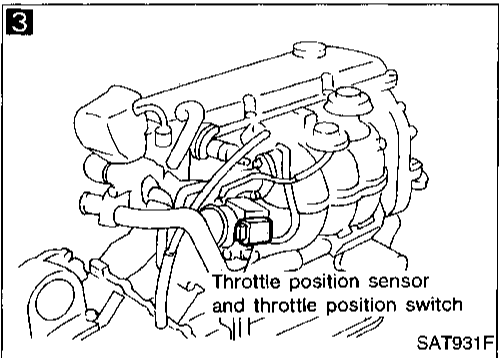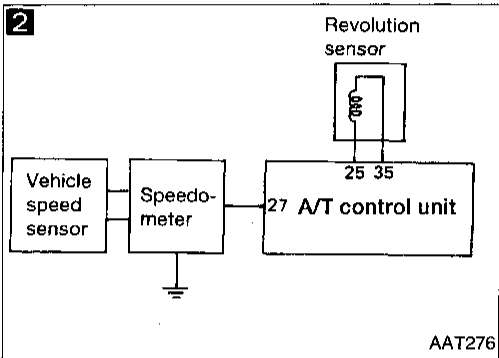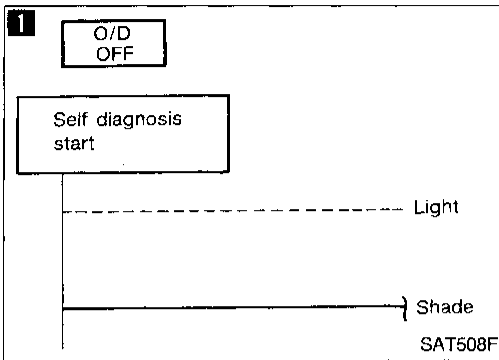


Diagnostic Procedure 9

SYMPTOM:



A/T does not shift from D₁ to D₂ at the specified speed.

A/T does not shift from D₄ to D₂ when depressing accelerator pedal fully at the specified speed.

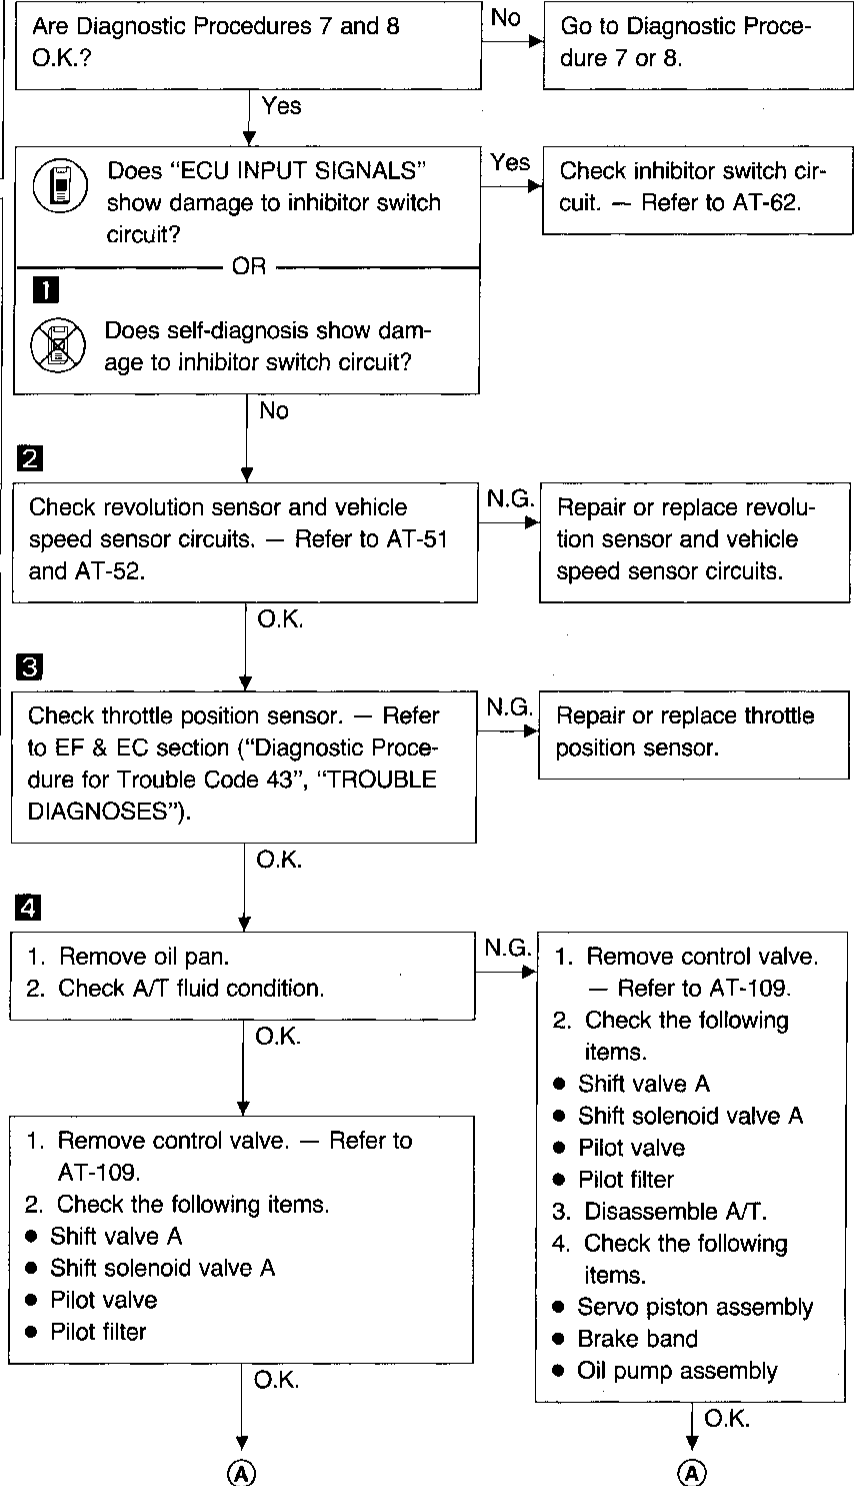

TROUBLE DIAGNOSES

Diagnostic Procedure 9 (Cont'd)

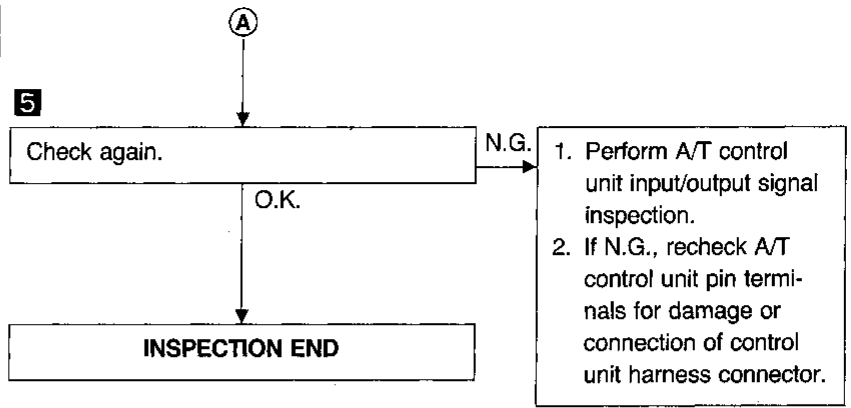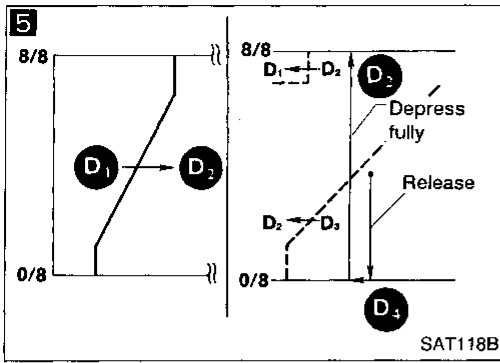

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL






IDX





TROUBLE DIAGNOSES

Diagnostic Procedure 10

SYMPTOM:

A/T does not shift from D₂ to D₃ at the specified speed.

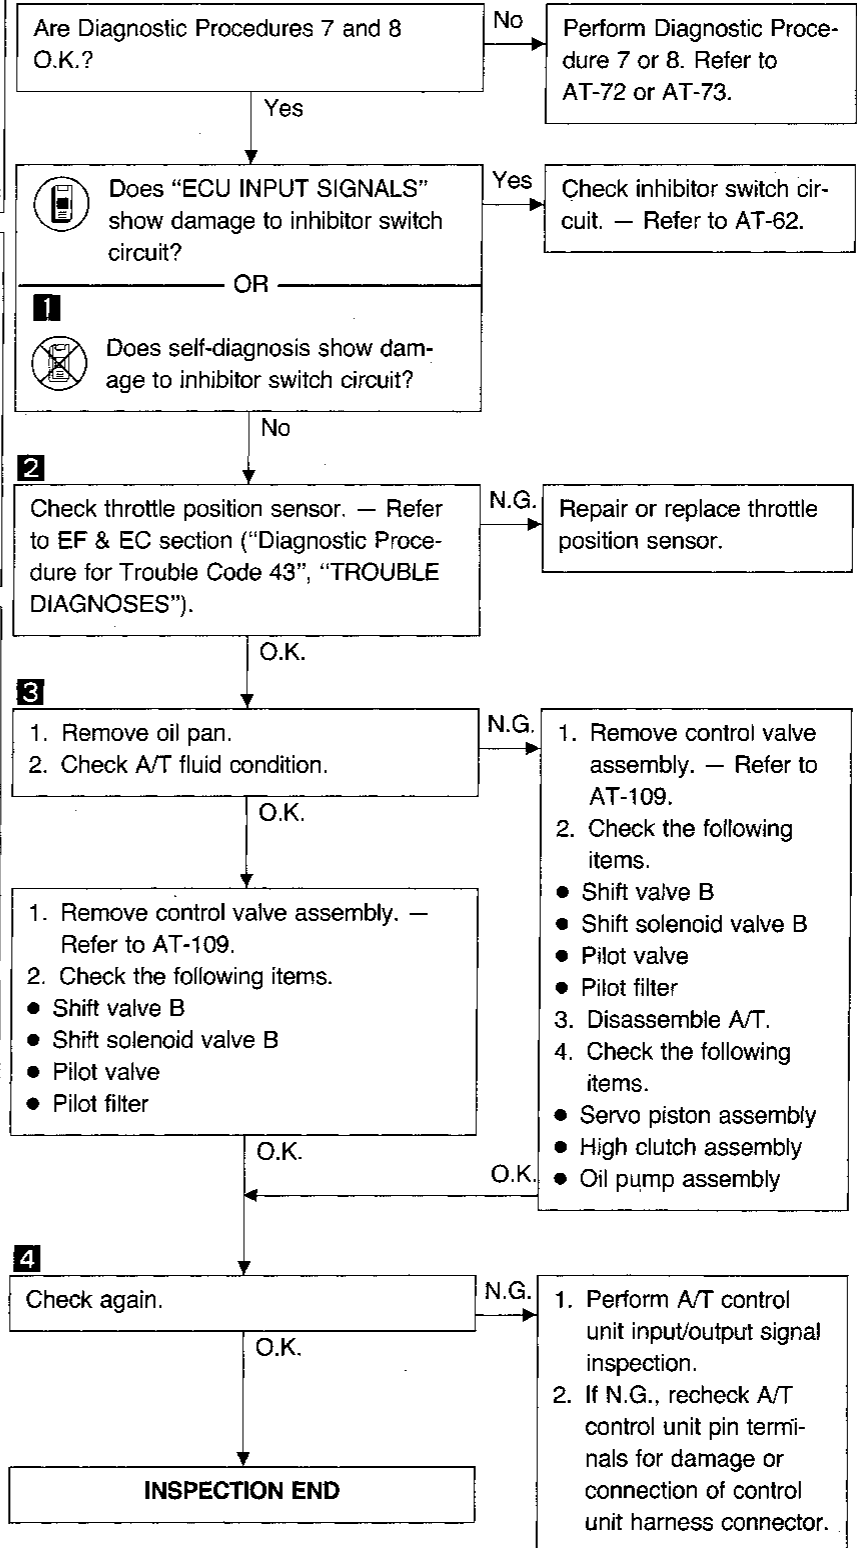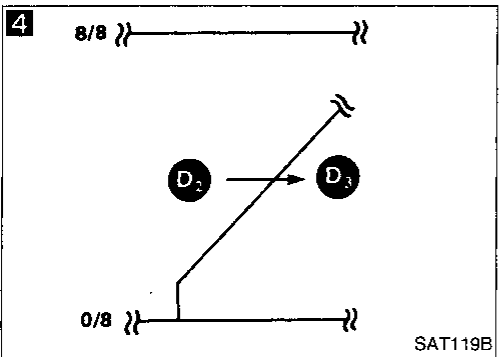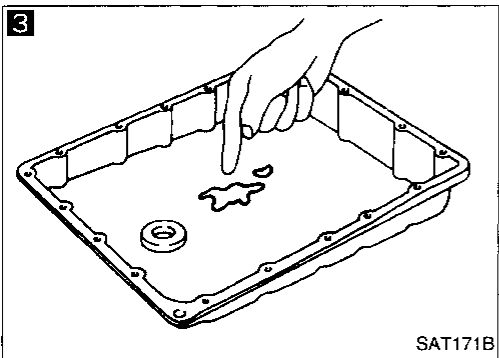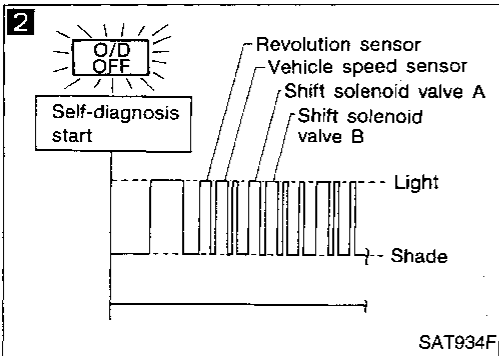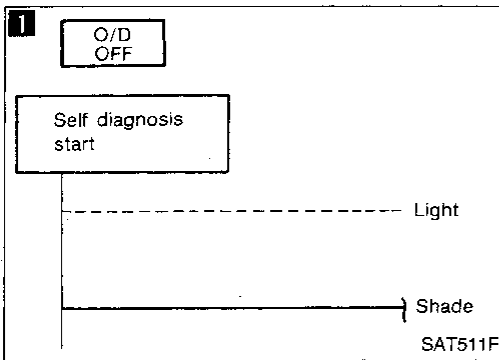

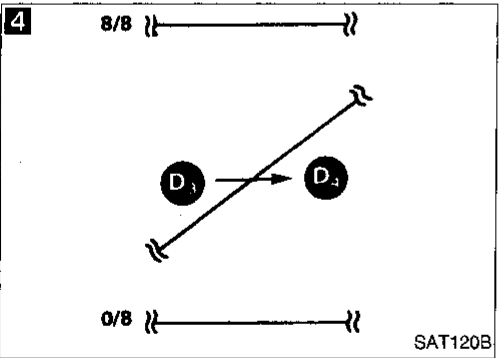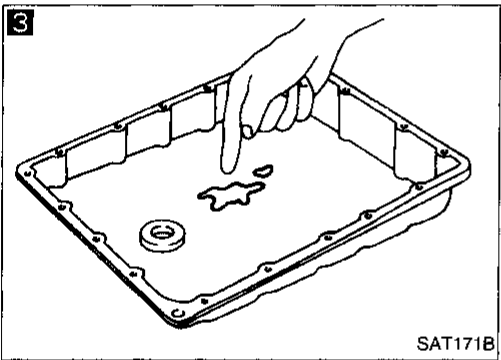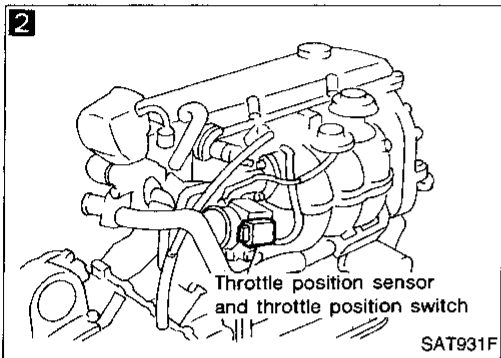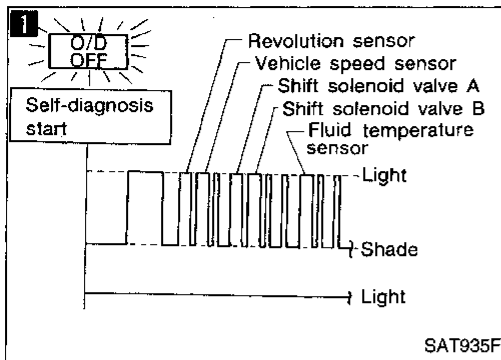

Diagnostic Procedure 11

SYMPTOM:

A/T does not shift from D₃ to D₄ at the specified speed.

- A/T must be warm before D₃ to D₄ shift will occur.

Are Diagnostic Procedures 7 and 8 O.K.? **No** → Perform Diagnostic Procedure 7 or 8. Refer to AT-72 or AT-73.
Yes ↓

1 Does self-diagnosis show damage to inhibitor switch, overdrive switch, shift solenoid valve A, B, revolution sensor, vehicle speed sensor or fluid temperature sensor circuit after cruise test? **Yes** → Check damaged circuit. — Refer to AT-52, AT-54, AT-55, AT-58.
No ↓

2 Check throttle position sensor. — Refer to EF & EC section ("Diagnostic Procedure for Trouble Code 43", "TROUBLE DIAGNOSES"). **N.G.** → Repair or replace throttle position sensor.
O.K. ↓

3 1. Remove oil pan.
2. Check A/T fluid condition. **N.G.** → 1. Remove control valve assembly. — Refer to AT-109.
2. Check the following items:
• Shift valve B
• Overrun clutch control valve
• Shift solenoid valve B
• Pilot valve
• Pilot filter
O.K. ↓

1. Remove control valve assembly. — Refer to AT-109.
2. Check the following items:
• Shift valve B
• Overrun clutch control valve
• Shift solenoid valve B
• Pilot valve
• Pilot filter
O.K. ↓

4 Check again. **N.G.** → 1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of control unit harness connector.
O.K. ↓

INSPECTION END




GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

TROUBLE DIAGNOSES

Diagnostic Procedure 12

SYMPTOM:

A/T does not perform lock-up at the specified speed.

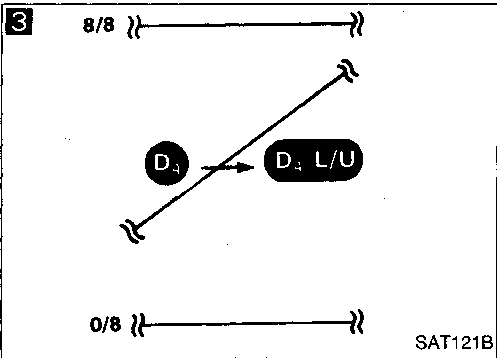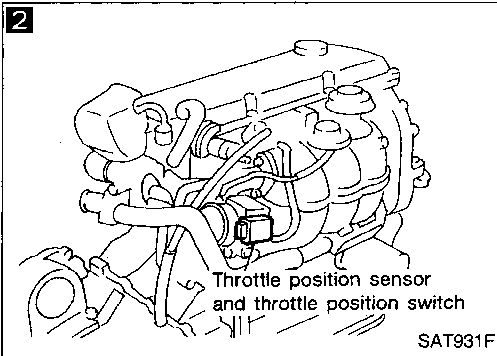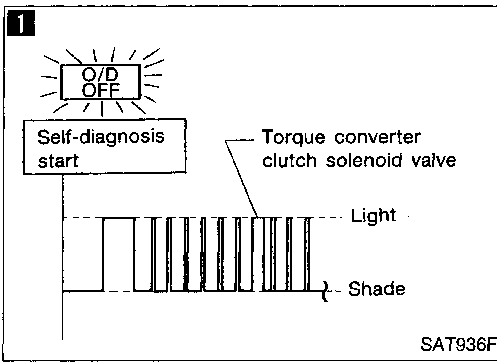

1

Does self-diagnosis show damage to torque converter clutch solenoid valve circuit after cruise test?

Yes

Check torque converter clutch solenoid valve circuit. — Refer to AT-57.

No

2

Check throttle position sensor. — Refer to EF & EC section ("Diagnostic Procedure for Trouble Code 43", "TROUBLE DIAGNOSES").

N.G.

Repair or replace throttle position sensor.

O.K.

1. Remove control valve. — Refer to AT-109.

N.G.

Repair or replace damaged parts.

2. Check following items.

- Torque converter clutch control valve
- Torque converter relief valve
- Torque converter clutch solenoid valve
- Pilot valve
- Pilot filter

O.K.

3



Check again.

N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of control unit harness connector.

O.K.


INSPECTION END

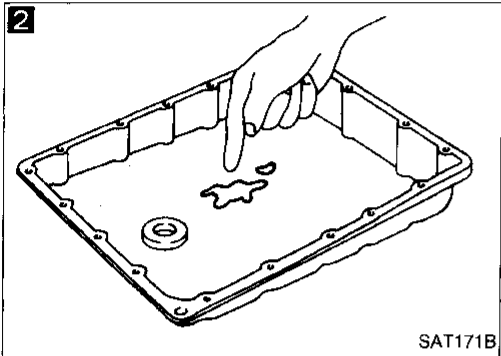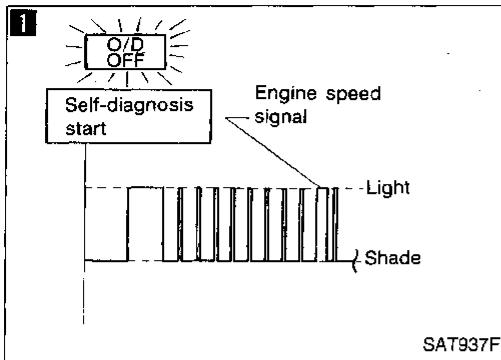

Diagnostic Procedure 13

SYMPTOM:

A/T does not hold lock-up condition for more than 30 seconds.


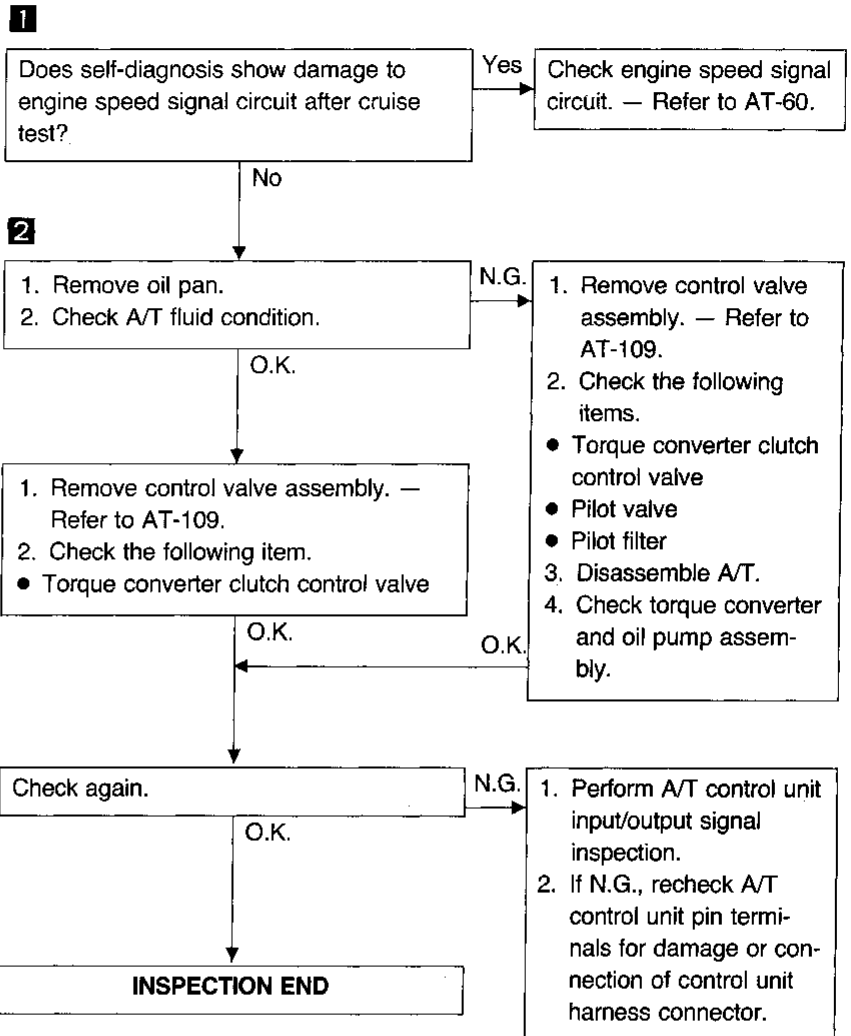


GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

Diagnostic Procedure 14

SYMPTOM:

Lock-up is not released when accelerator pedal is released.

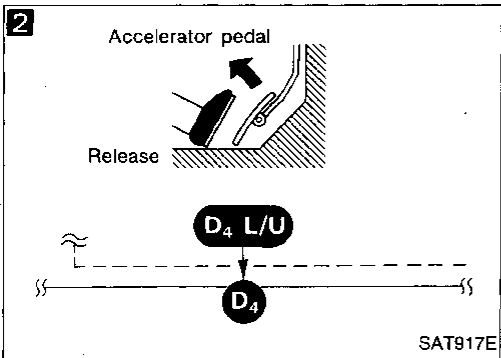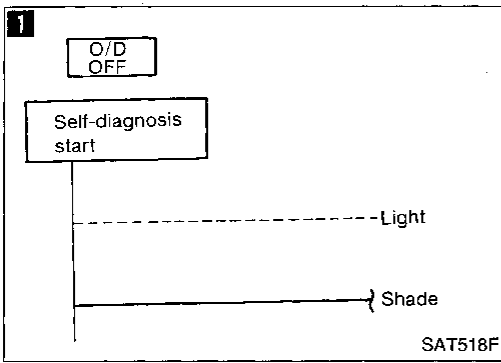

Does "ECU INPUT SIGNALS" show damage to closed throttle position switch circuit?

Yes

Check closed throttle position switch circuit. — Refer to AT-62.

OR

1



Does self-diagnosis show damage to closed throttle position switch circuit?

No

2


Check again.

N.G.

1. Perform A/T control unit input/output signal inspection.
2. If N.G., recheck A/T control unit pin terminals for damage or connection of control unit harness connector.

O.K.

INSPECTION END

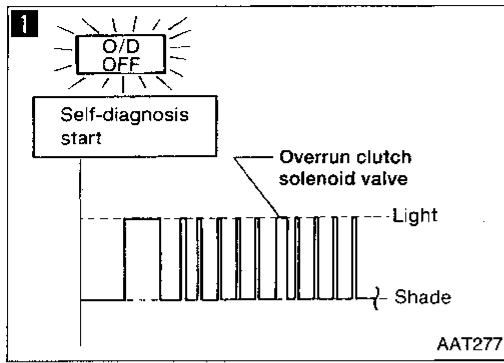





Diagnostic Procedure 15


SYMPTOM:

Engine speed does not return to idle smoothly when A/T is shifted from D₄ to D₃ with accelerator pedal released.

Vehicle does not decelerate by engine brake when changing overdrive switch to "OFF" position with accelerator pedal released.

Vehicle does not decelerate by engine brake when changing selector lever from "D" to "2" position with accelerator pedal released.

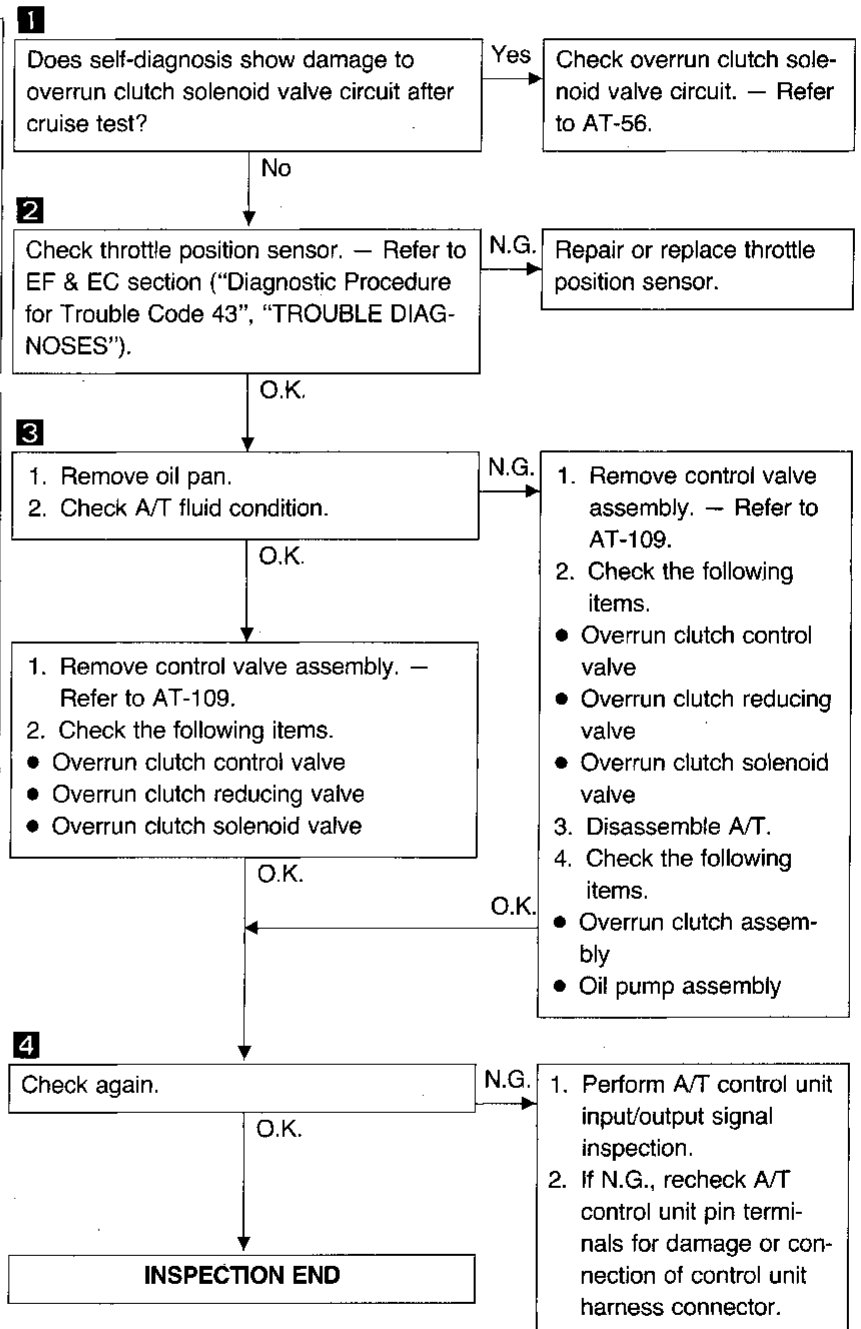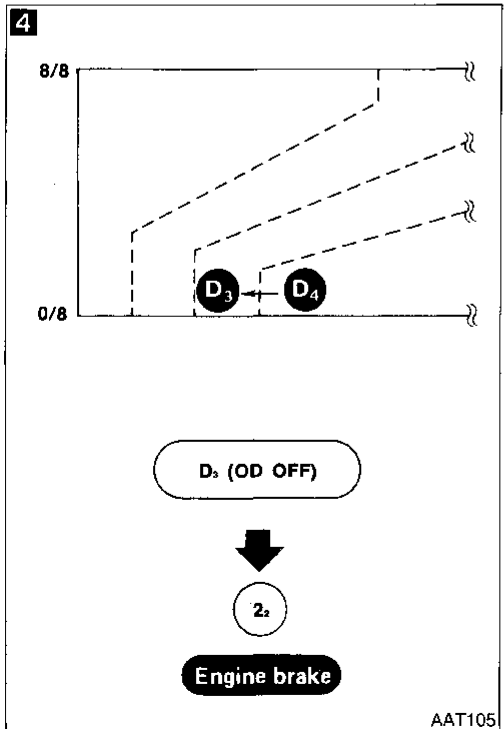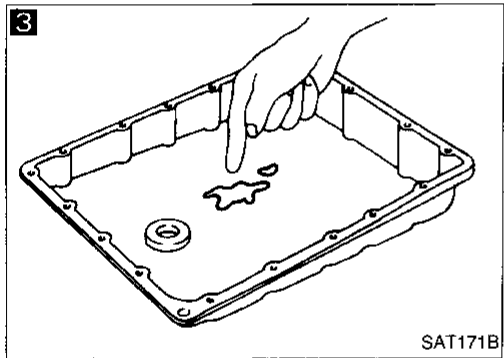
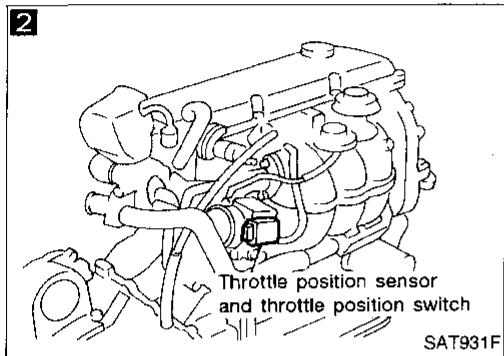


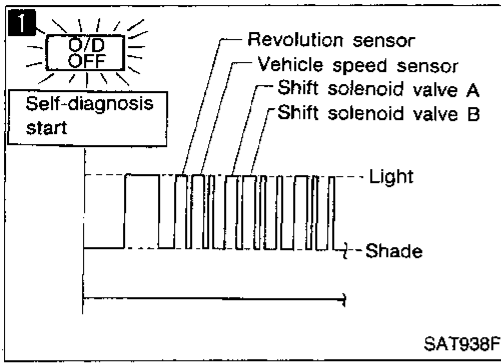

Diagnostic Procedure 16

SYMPTOM:


Vehicle does not start from D₁ on Cruise test — Part 2.

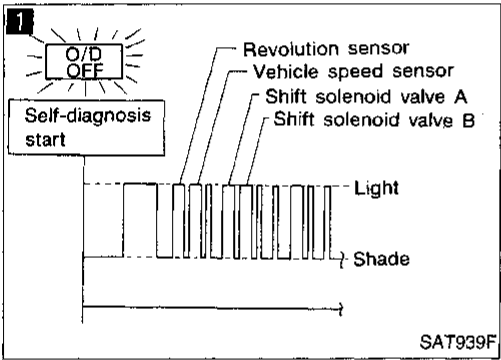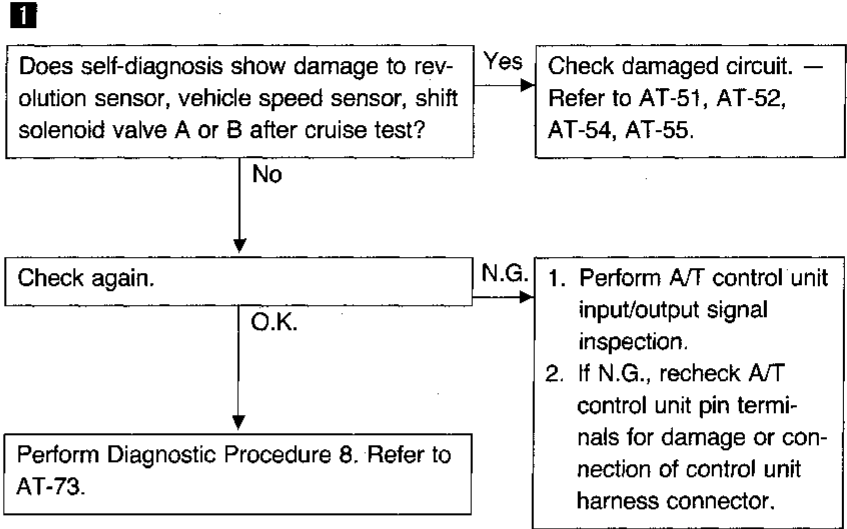


Diagnostic Procedure 17

SYMPTOM:

A/T does not shift from D₄ to D₃ when changing overdrive switch to "OFF" position.


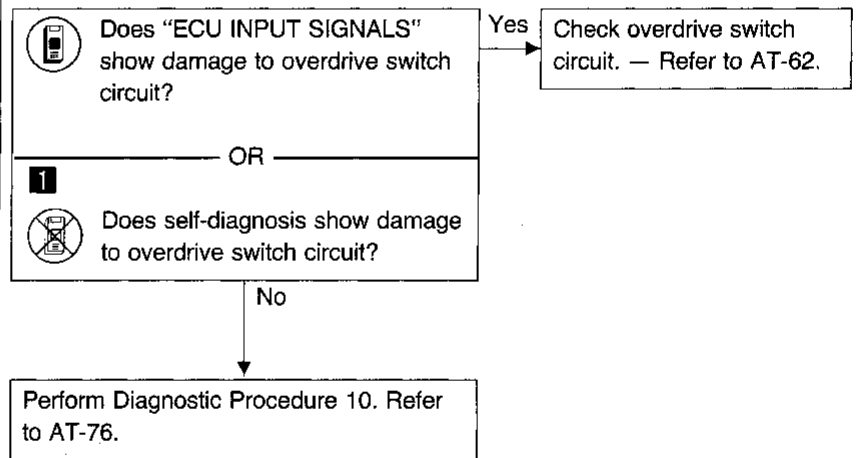


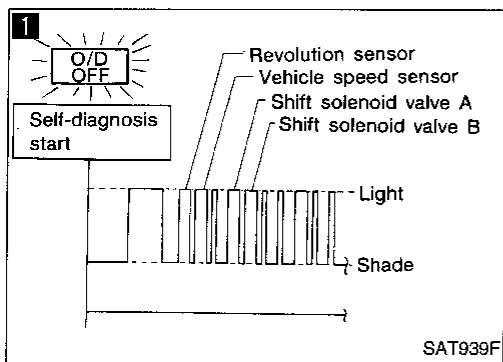

Diagnostic Procedure 18

SYMPTOM:



A/T does not shift from D_3 to 2_2 when changing selector lever from "D" to "2" position.

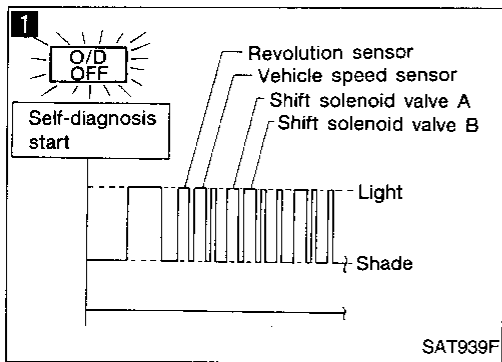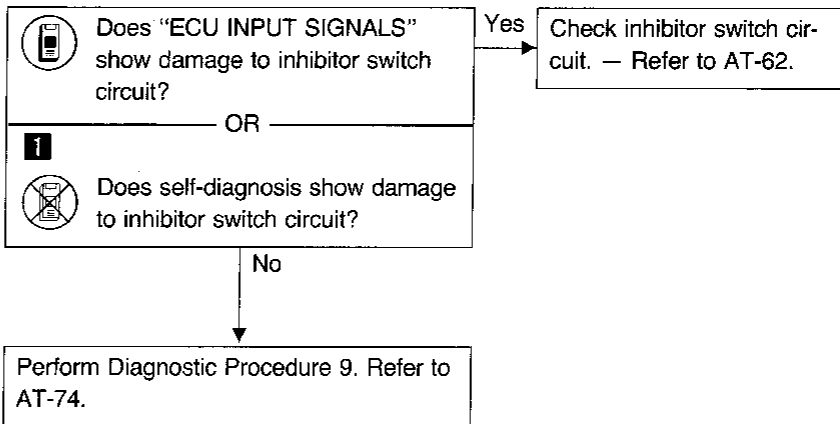

Diagnostic Procedure 19

SYMPTOM:


A/T does not shift from 2_2 to 1_1 when changing selector lever from "2" to "1" position.

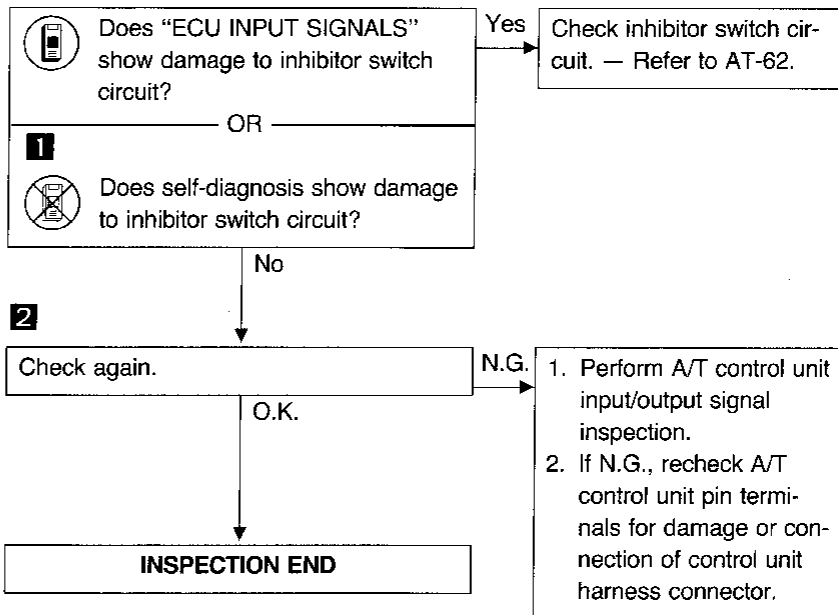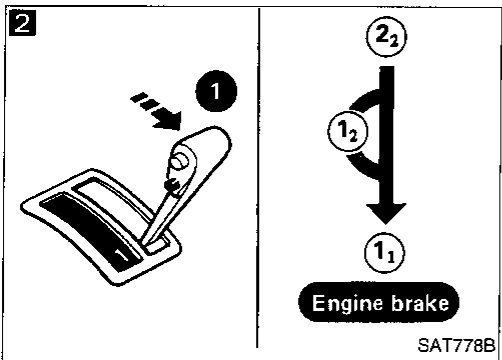


Diagnostic Procedure 20

SYMPTOM:

Vehicle does not decelerate by engine brake when shifting from 2₂ (1₂) to 1₁.

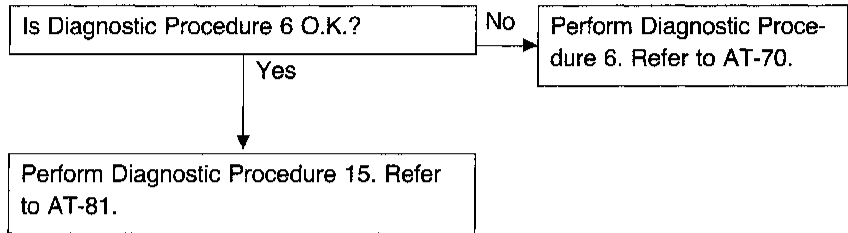

TROUBLE DIAGNOSES

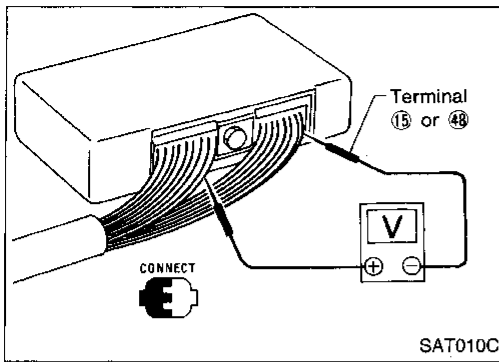


Electrical Components Inspection

INSPECTION OF A/T CONTROL UNIT

- Measure voltage between each terminal and terminal ⑮ or ④⑧ by following "A/T CONTROL UNIT INSPECTION TABLE".

- Pin connector terminal layout.

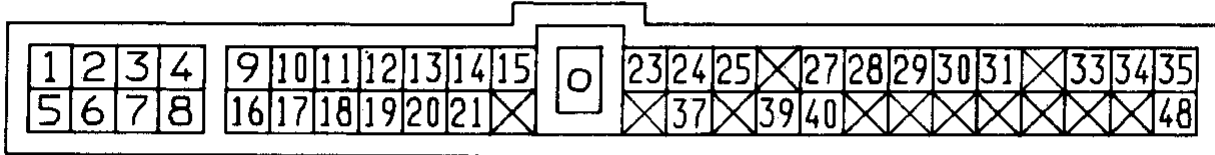

SAT678E

A/T CONTROL UNIT INSPECTION TABLE

(Data are reference values.)

Terminal No.	Item	Condition	Judgement standard
1	Line pressure solenoid valve	When releasing accelerator pedal after warming up engine.	1.5 - 2.5V
		When depressing accelerator pedal fully after warming up engine.	0.5V or less
2	Line pressure solenoid valve (with dropping resistor)	When releasing accelerator pedal after warming up engine.	5 - 14V
		When depressing accelerator pedal fully after warming up engine.	0.5V or less
3	OD OFF indicator lamp	When setting overdrive switch in "OFF" position.	1V or less
		When setting overdrive switch in "ON" position.	Battery positive voltage
4	Power source	When turning ignition switch to "ON".	Battery positive voltage
		When turning ignition switch to "OFF".	1V or less

TROUBLE DIAGNOSES

Electrical Components Inspection (Cont'd)










Terminal No.	Item	Condition	Judgement standard
5	Torque converter clutch solenoid valve	When A/T performs lock-up.	8 - 15V
		When A/T does not perform lock-up.	1V or less
6	Shift solenoid valve A	When shift solenoid valve A operates. (When driving in "D ₁ " or "D ₄ ".)	Battery positive voltage
		When shift solenoid valve A does not operate. (When driving in "D ₂ " or "D ₃ ".)	1V or less
7	Shift solenoid valve B	When shift solenoid valve B operates. (When driving in "D ₁ " or "D ₂ ".)	Battery positive voltage
		When shift solenoid valve B does not operate. (When driving in "D ₃ " or "D ₄ ".)	1V or less
8	Overrun clutch solenoid valve	When overrun clutch solenoid valve operates.	Battery positive voltage
		When overrun clutch solenoid valve does not operate.	1V or less
9	Power source	Same as No. 4	
10*	—	—	—
11*	—	—	—
12*	—	—	—
13*	—	—	—
14	Closed throttle position switch	When releasing accelerator pedal after warming up engine.	8 - 15V
		When depressing accelerator pedal after warming up engine.	1V or less
15	Ground	—	—
16	"1" position switch	When setting selector lever to "1" position.	Battery positive voltage
		When setting selector lever to other positions.	1V or less
17	"2" position switch	When setting selector lever to "2" position.	Battery positive voltage
		When setting selector lever to other position.	1V or less
18	"D" position switch	When setting selector lever to "D" position.	Battery positive voltage
		When setting selector lever to other positions.	1V or less



*: These terminals are connected to the ECM (ECCS control module).

TROUBLE DIAGNOSES






Electrical Components Inspection (Cont'd)

Terminal No.	Item		Condition	Judgement standard	
19	Inhibitor switch (Park/Neutral position signal)		When setting selector lever to "N" and "P" position.	Battery positive voltage	GI
			When setting selector lever to other position.	1V or less	MA
20	"R" position switch		When setting selector lever to "R" position.	Battery positive voltage	EM
			When setting selector lever to other positions.	1V or less	LC
21	Wide open throttle position switch		When depressing accelerator pedal more than half-way after warming up engine.	8 - 15V	EF & EC
			When releasing accelerator pedal after warming up engine.	1V or less	FE
22	—		—	—	CL
23	Power source (Back-up)	 or 	When turning ignition switch to "OFF".	Battery positive voltage	MT
			When turning ignition switch to "ON".	Battery positive voltage	AT
24	Engine speed signal	 	When engine runs at idle speed.	0.9V	FA
			When engine runs at 3,000 rpm.	Approximately 3.7V	RA
25	Revolution sensor (Measure in AC range)		When vehicle cruises at 30 km/h (19 MPH).	1V or more Voltage rises gradually in response to vehicle speed.	BR
			When vehicle parks.	0V	ST
26	—		—	—	BF
27	Vehicle speed sensor		When moving vehicle at 2 to 3 km/h (1 to 2 MPH) for 1 m (3 ft) or more.	Vary from 0 to 5V	HA
28**	—		—	—	EL
29**	—		—	—	IDX
30**	—		—	—	
31	Throttle position sensor (Power source)	 	—	4.5 - 5.5V	
			—	—	
32	—		—	—	

** : These terminals are connected to the data link connector for CONSULT.

TROUBLE DIAGNOSES

Electrical Components Inspection (Cont'd)

Terminal No.	Item	Condition	Judgement standard	
33	Fluid temperature sensor		When ATF temperature is 20°C (68°F).	1.56V
			When ATF temperature is 80°C (176°F).	0.45V
34	Throttle position sensor		When depressing accelerator pedal slowly after warming up engine. (Voltage rises gradually in response to throttle position.)	Fully-closed throttle: 0.2 - 0.6V Fully-open throttle: 2.9 - 3.9V
35	Throttle position sensor (Ground)		—	—
36	—		—	—
37	ASCD cruise signal		When ASCD cruise is being performed. ("CRUISE" light comes on.)	Battery positive voltage
			When ASCD cruise is not being performed. ("CRUISE" light does not come on.)	1V or less
38	—		—	—
39	Overdrive switch		When setting overdrive switch in "ON" position.	4.5 - 5.5V
			When setting overdrive switch in "OFF" position.	1V or less
40	ASCD OD cut signal		When "ACCEL" set switch on ASCD cruise is released.	4.5 - 5.5V
			When "ACCEL" set switch on ASCD cruise is applied.	1V or less
41	—		—	—
42	—		—	—
43	—		—	—
44	—		—	—
45	—		—	—
46	—		—	—
47	—		—	—
48	Ground		—	—


TROUBLE DIAGNOSES

Electrical Components Inspection (Cont'd)

OVERDRIVE SWITCH

- Check continuity between two terminals.




Overdrive switch	Continuity
ON	No
OFF	Yes

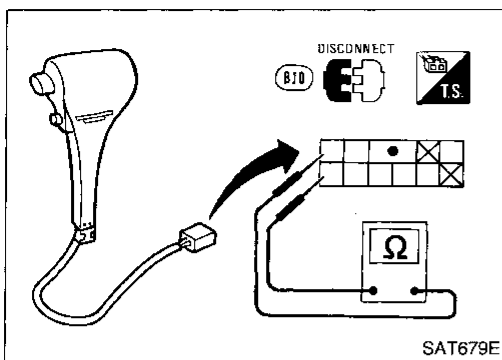

INHIBITOR SWITCH

1. Check continuity between terminals ① and ② and between terminals ③ and ④, ⑤, ⑥, ⑦, ⑧, ⑨ while moving selector lever through each position.

Lever position	Terminal No.								
	①	②	③	④	⑤	⑥	⑦	⑧	⑨
P	○—○		○—○						
R			○—○		○—○				
N	○—○		○—○			○—○			
D			○—○				○—○		
2			○—○					○—○	
1			○—○						○—○

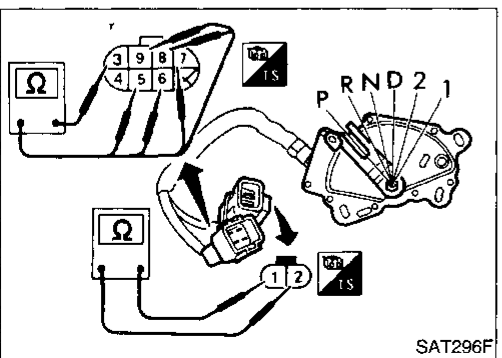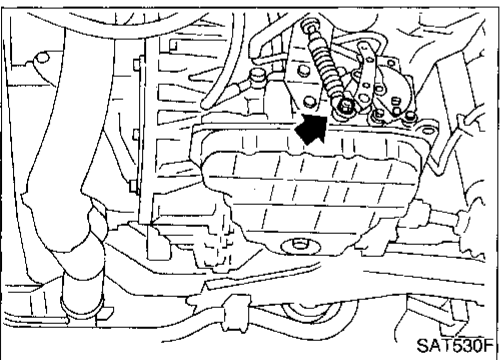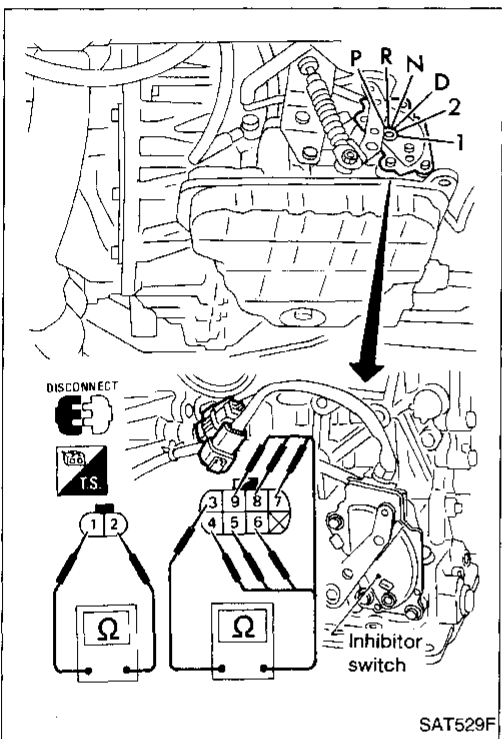


2. If N.G., check again with control cable disconnected from manual shaft of A/T assembly. — Refer to step 1.
3. If O.K. on step 2, adjust control cable. — Refer to AT-111.
4. If N.G. on step 2, remove inhibitor switch from A/T and check continuity of inhibitor switch terminal. — Refer to step 1.
5. If O.K. on step 4, adjust inhibitor switch. — Refer to AT-111.
6. If N.G. on step 4, replace inhibitor switch.

TROUBLE DIAGNOSES

Electrical Components Inspection (Cont'd)

REVOLUTION SENSOR

- For removal and installation, refer to AT-111.
- Check resistance between terminals ①, ② and ③.

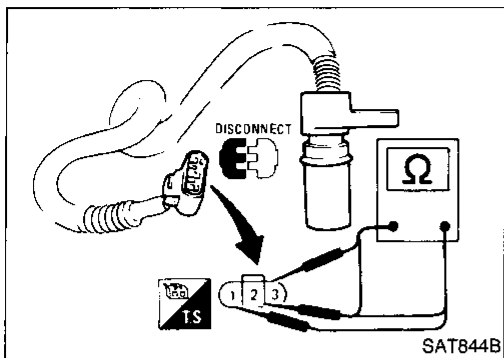


Terminal No.		Resistance
①	②	500 - 650Ω
②	③	No continuity
①	③	No continuity

SOLENOID VALVES AND FLUID TEMPERATURE SENSOR

- For removal and installation, refer to AT-109.
- Check resistance between two terminals.

Solenoids


Solenoid	Terminal No.	Resistance (Approx.)
Shift solenoid valve A	⑥	25Ω
Shift solenoid valve B	⑦	
Overrun clutch solenoid valve	⑧	
Line pressure solenoid valve	①	3.2Ω
Torque converter clutch solenoid valve	⑤	13.4Ω

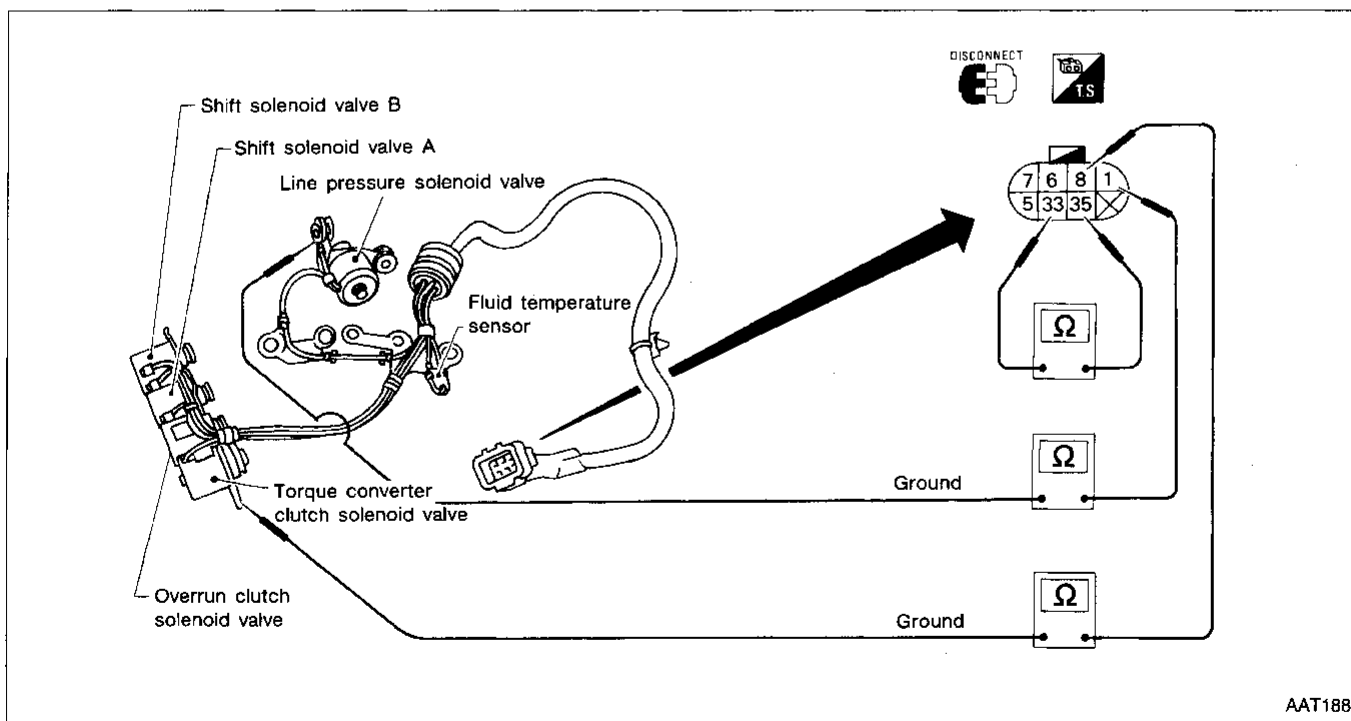

AAT188

TROUBLE DIAGNOSES


Electrical Components Inspection (Cont'd)

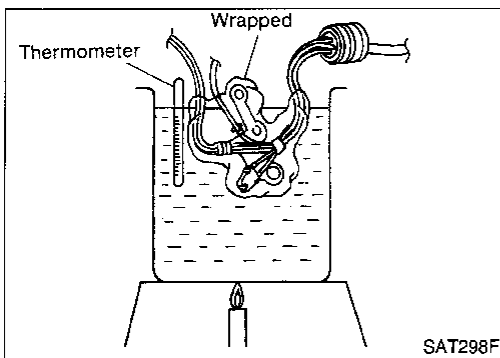

Fluid temperature sensor


Check resistance between terminals ③③ and ③⑤ while changing temperature as shown at left.

Temperature °C (°F)	Resistance (Approx.)
20 (68)	2.5 kΩ
80 (176)	0.3 kΩ

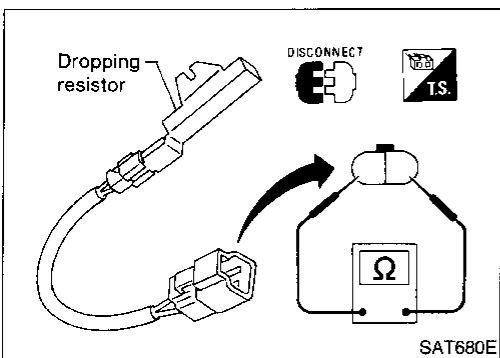

DROPPING RESISTOR

- Check resistance between two terminals.
Resistance: 11.2 - 12.8Ω

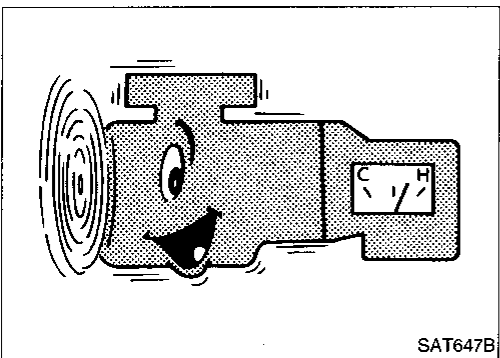


Final Check

STALL TESTING

Stall test procedure


- Check A/T and engine fluid levels. If necessary, add.
- Warm up engine until engine oil and ATF reach operating temperature after vehicle has been driven approx. 10 minutes.

ATF operating temperature:
50 - 80°C (122 - 176°F)

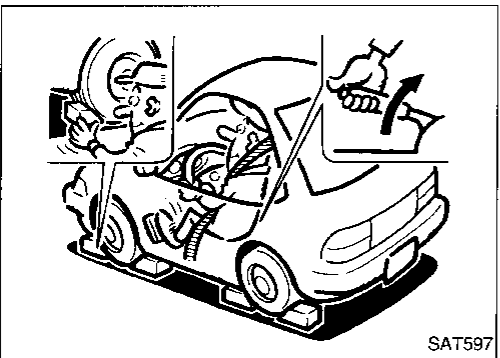

- Set parking brake and block wheels.
- Install a tachometer where it can be seen by driver during test.



- It is good practice to put a mark at point of specified engine speed on indicator.

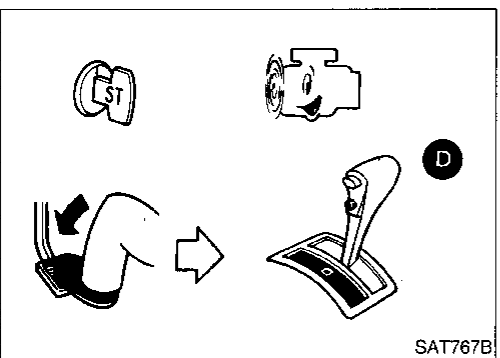

- Start engine, apply foot brake, and place selector lever in "D" position.

TROUBLE DIAGNOSES

Final Check (Cont'd)

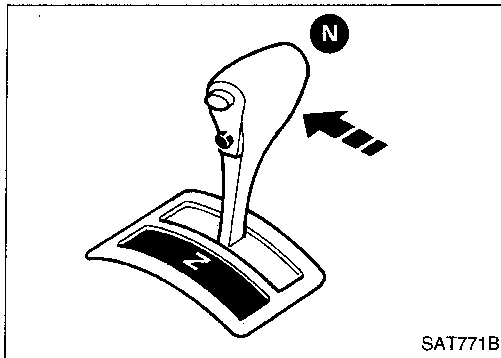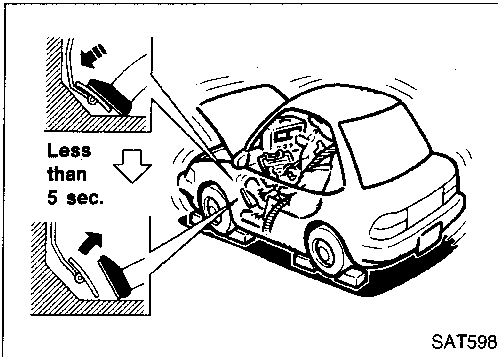

6. Accelerate to wide-open throttle gradually while applying foot brake.
 7. Quickly note the engine stall speed and immediately release throttle.
- **During test, never hold throttle wide-open for more than 5 seconds.**

Stall speed:

Federal, Canada
2,100 - 2,400 rpm
California
2,150 - 2,450 rpm

8. Shift selector lever to "N" position.
 9. Cool off ATF
- **Run engine at idle for at least one minute.**
10. Perform stall tests in the same manner as in steps 5 through 9 with selector lever in "2", "1" and "R" positions, respectively.

TROUBLE DIAGNOSES


Final Check (Cont'd)

Judgement of stall test

Selector lever position	Judgement		
D	H	O	L
2	H	O	L
1	O	O	L
R	H	H	L

O : Stall speed is normal.
 H : Stall speed is higher than specified.
 L : Stall speed is lower than specified.

Damaged components

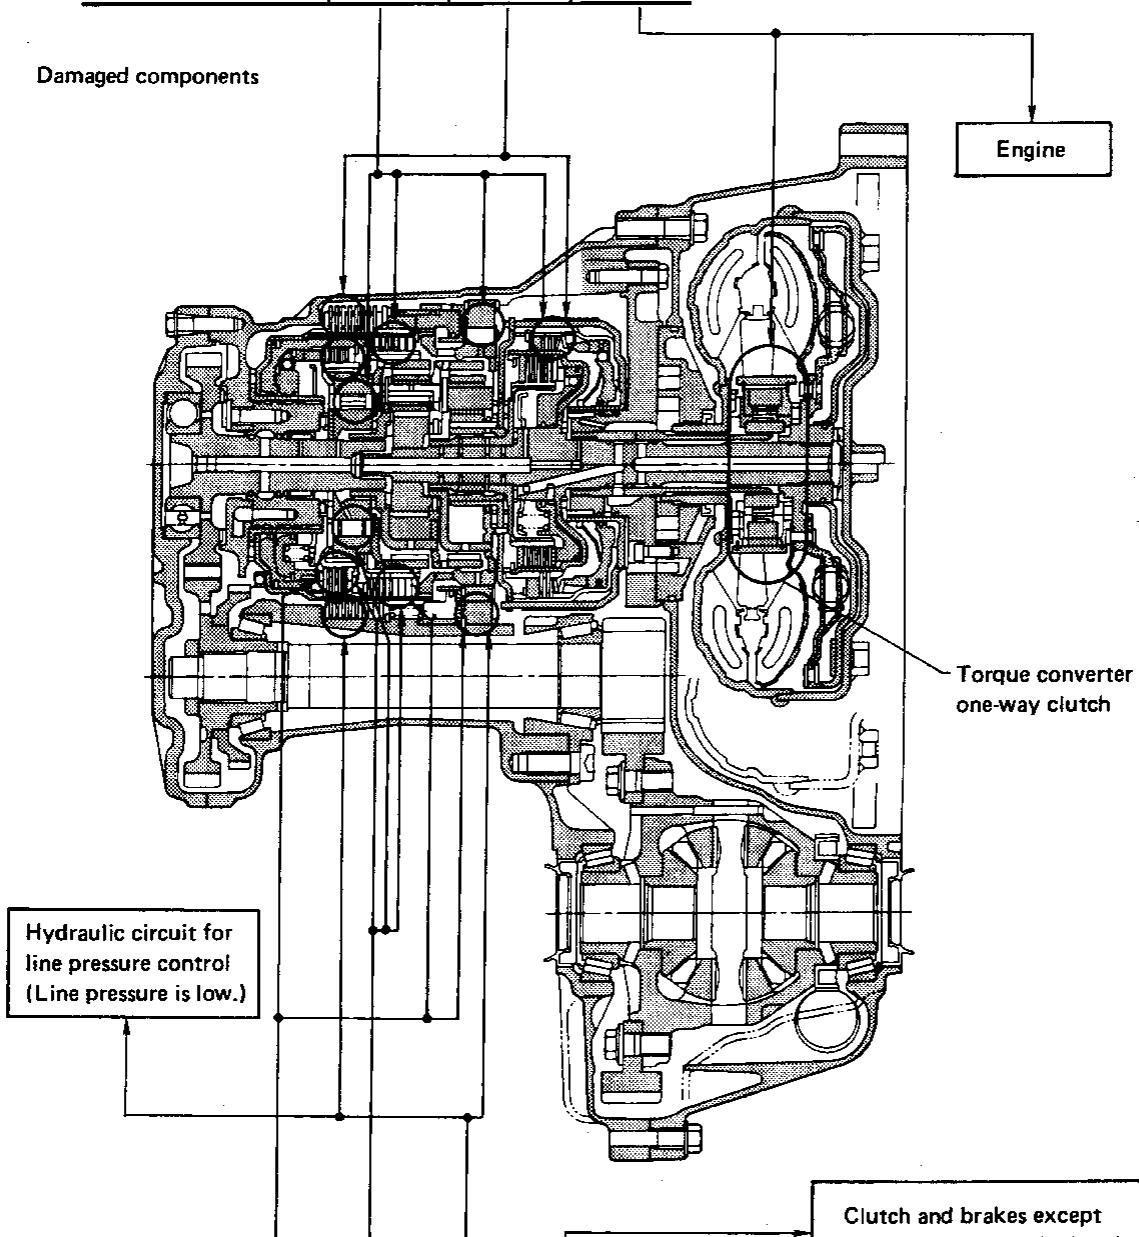

D	H	H	H	O
2	H	H	H	O
1	O	H	H	O
R	O	O	H	O
Selector lever position	Judgement			

Clutch and brakes except high clutch and brake band are O.K. (Condition of high clutch and brake band cannot be confirmed by stall test.)



GI
 MA
 EM
 LC
 EF & EC
 FE
 CL
 MT
AT
 FA
 RA
 BR
 ST
 BF
 HA
 EL
 IDX

TROUBLE DIAGNOSES

Final Check (Cont'd)

PRESSURE TESTING


- Location of line pressure test port
- **Always replace pressure plugs as they are self-sealing bolts.**

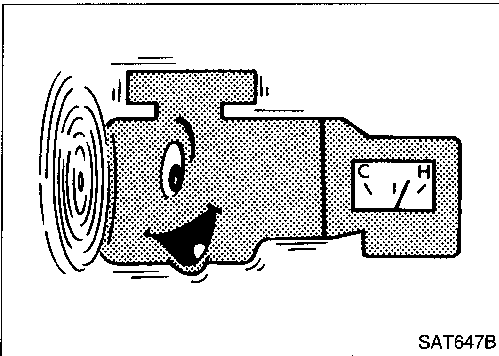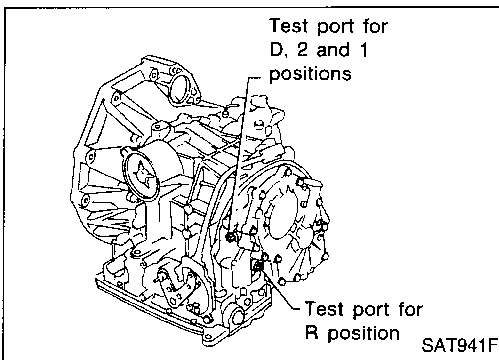


Line pressure test procedure

1. Check A/T and engine fluid levels. If necessary, add fluid.
2. Warm up engine until engine oil and ATF reach operating temperature after vehicle has been driven approx. 10 minutes.

ATF operating temperature:
50 - 80°C (122 - 176°F)

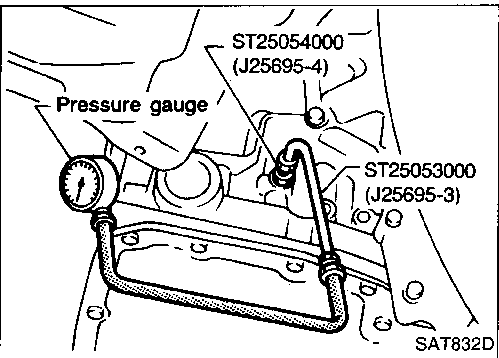


3. Install pressure gauge to corresponding line pressure port.

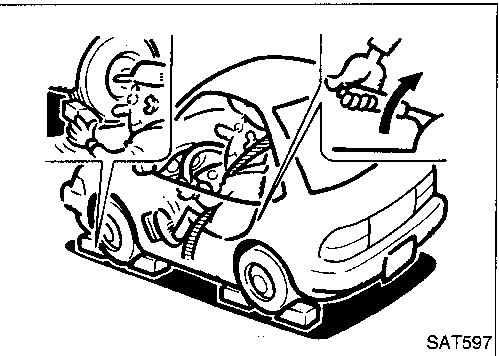

4. Set parking brake and block wheels.
- **Continue to depress brake pedal fully while line pressure test is being performed at stall speed.**

TROUBLE DIAGNOSES

Final Check (Cont'd)

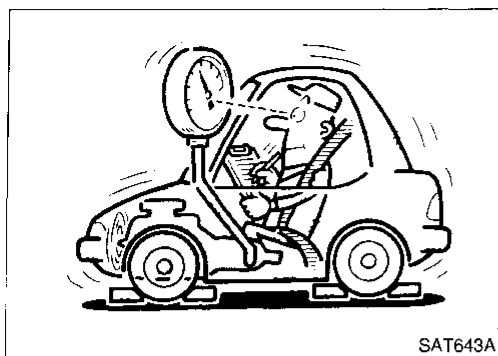

5. Start engine and measure line pressure at idle and stall speed.
 - When measuring line pressure at stall speed, follow the stall test procedure.

Line pressure:

Engine speed rpm	Line pressure (Approx.) kPa (kg/cm ² , psi)	
	"D", "2" and "1" positions	"R" position
Idle	500 (5.1, 73)	775 (7.9, 112)
Stall	1,010 (10.3, 146)	1,569 (16.0, 228)

Judgement of line pressure test

Judgement		Suspected parts
At idle	Line pressure is low in all positions.	<ul style="list-style-type: none"> ● Oil pump wear ● Control piston damage ● Pressure regulator valve or plug sticking ● Spring for pressure regulator valve damaged ● Fluid pressure leakage between oil strainer and pressure regulator valve
	Line pressure is low in particular position.	<ul style="list-style-type: none"> ● Fluid pressure leakage between manual valve and particular clutch ● For example; If line pressure is low in "R" and "1" positions but is normal in "D" and "2" positions, fluid leakage exists at or around low & reverse brake circuit.
	Line pressure is high.	<ul style="list-style-type: none"> ● Mal-adjustment of throttle position sensor ● Fluid temperature sensor damaged ● Line pressure solenoid valve sticking ● Short circuit of line pressure solenoid valve circuit ● Pressure modifier valve sticking ● Pressure regulator valve or plug sticking
At stall speed	Line pressure is low.	<ul style="list-style-type: none"> ● Mal-adjustment of throttle position sensor ● Line pressure solenoid valve sticking ● Short circuit of line pressure solenoid valve circuit ● Pressure regulator valve or plug sticking ● Pressure modifier valve sticking ● Pilot valve sticking

TROUBLE DIAGNOSES

Symptom Chart

Reference page (AT-)		← ON vehicle →										← OFF vehicle →					
		23, 111	89	90	94	142, 90	90	90	90, 109	109	119, 138,	158, 162	167, 176	167, 119	173, 185	119	
Reference page (AT-)		Fluid level Control linkage	Inhibitor switch Throttle position sensor (Adjustment)	Revolution sensor and vehicle speed sensor Engine speed signal	Engine idling speed Line pressure	Control valve assembly Shift solenoid valve A	Shift solenoid valve B Line pressure solenoid valve	Torque converter clutch solenoid valve Overrun clutch solenoid valve	Fluid temperature sensor Accumulator N-D	Accumulator servo release Ignition switch and starter	Torque converter Oil pump	Reverse clutch High clutch	Forward clutch Forward one-way clutch	Overrun clutch Low one-way clutch	Low & reverse brake Brake band	Parking components	
67	Engine does not start in "N", "P" positions.	2	3							1							
67	Engine starts in range other than "N" and "P".	1	2														
—	Transaxle noise in "P" and "N" positions.	1	3	4 5	2						7 6						
67	Vehicle moves when changing into "P" position or parking gear does not disengage when shifted out of "P" position.	1														2	
68	Vehicle runs in "N" position.	1										3	2	4			
70	Vehicle will not run in "R" position (but runs in "D", "2" and "1" positions). Clutch slips. Very poor acceleration.	1			2	4	3				5 6	7	8	9			
—	Vehicle braked when shifting into "R" position.	1 2			3	5	4				6 8	9	9	7			
—	Sharp shock in shifting from "N" to "D" position.		2	5	1 3	7	6	4 8				9					
—	Vehicle will not run in "D" and "2" positions (but runs in "1" and "R" positions).	1												2			
72	Vehicle will not run in "D", "1", "2" positions (but runs in "R" position). Clutch slips. Very poor acceleration.	1			2	4	3	5			6 7	8 9	10				
—	Clutches or brakes slip somewhat in starting.	1 2	3		4	6	5	7		12 11	9	8		10			
—	Excessive creep.				1												
70, 72	No creep at all.	1			2	3				6 5		4					
—	Failure to change gear from "D ₁ " to "D ₂ ".	2	1	5		4 3									6		
—	Failure to change gear from "D ₂ " to "D ₃ ".	2	1	5		4	3				6				7		
—	Failure to change gear from "D ₃ " to "D ₄ ".	2	1	4		3		5							6		
74, 76, 77	Too high gear change point from "D ₁ " to "D ₂ ", from "D ₂ " to "D ₃ ", from "D ₃ " to "D ₄ ".		1	2		3	4										
—	Gear change directly from "D ₁ " to "D ₃ " occurs.	1							2						3		
—	Engine stops when shifting lever into "R", "D", "2" and "1".				1	3		2		4							
—	Too sharp a shock in change from "D ₁ " to "D ₂ ".		1		2	4		5	3						6		
—	Too sharp a shock in change from "D ₂ " to "D ₃ ".		1		2	3					4				5		

TROUBLE DIAGNOSES

Symptom Chart (Cont'd)

Reference page (AT-)	ON vehicle										OFF vehicle						
	23, 111	89	90	94	142, 90	90	90	90, 109	109	119, 138,	158, 162	167, 176	167, 119	173, 185	119		
Reference page (AT-)	Fluid level Control linkage	Inhibitor switch Throttle position sensor (Adjustment)	Revolution sensor and vehicle speed sensor Engine speed signal	Engine idling speed Line pressure	Control valve assembly Shift solenoid valve A	Shift solenoid valve B Line pressure solenoid valve	Torque converter clutch solenoid valve Overrun clutch solenoid valve	Fluid temperature sensor Accumulator N-D	Accumulator servo release Ignition switch and starter	Torque converter Oil pump	Reverse clutch High clutch	Forward clutch Forward one-way clutch	Overrun clutch Low one-way clutch	Low & reverse brake Brake band	Parking components		
— Too sharp a shock in change from "D ₃ " to "D ₄ ".	. . .	1	. . .	2	3	5	. . .	4		
— Almost no shock or clutches slipping in change from "D ₁ " to "D ₃ ".	1	. . .	2	. . .	3	5	4	6		
— Almost no shock or slipping in change from "D ₂ " to "D ₃ ".	1	. . .	2	. . .	3	4	5	6		
— Almost no shock or slipping in change from "D ₃ " to "D ₄ ".	1	. . .	2	. . .	3	4	5	6		
— Vehicle braked by gear change from "D ₁ " to "D ₂ ".	1	2	4	. . .	5	3		
— Vehicle braked by gear change from "D ₂ " to "D ₃ ".	1	2		
— Vehicle braked by gear change from "D ₃ " to "D ₄ ".	1	4	. . .	3	2	. . .		
— Maximum speed not attained. Acceleration poor.	1	2	5	3	4	11	10	6	7	. . .	9	8	
— Failure to change gear from "D ₄ " to "D ₃ ".	1	. . .	2	. . .	6	4	. . .	5	3	8	7		
— Failure to change gear from "D ₃ " to "D ₂ " or from "D ₄ " to "D ₃ ".	1	. . .	2	. . .	5	3	4	6	7		
— Failure to change gear from "D ₂ " to "D ₁ " or from "D ₃ " to "D ₁ ".	1	. . .	2	. . .	5	3	4	7	. . .	6	. . .	8		
— Gear change shock felt during deceleration by releasing accelerator pedal.	1	. . .	2	4	3		
— Too high a change point from "D ₄ " to "D ₃ ", from "D ₃ " to "D ₂ ", from "D ₂ " to "D ₁ ".	1	2		
— Kickdown does not operate when depressing pedal in "D ₄ " within kickdown vehicle speed.	1	2	. . .	3	4		
— Kickdown operates or engine overruns when depressing pedal in "D ₄ " beyond kickdown vehicle speed limit.	2	1	. . .	3	4		
— Races extremely fast or slips in changing from "D ₄ " to "D ₃ " when depressing pedal.	1	. . .	2	. . .	3	5	. . .	4	6	7		
— Races extremely fast or slips in changing from "D ₄ " to "D ₂ " when depressing pedal.	1	. . .	2	. . .	3	6	5	. . .	4	8	7		
— Races extremely fast or slips in changing from "D ₃ " to "D ₂ " when depressing pedal.	1	. . .	2	. . .	3	5	. . .	4	. . .	8	. . .	9	7	. . .	6		
— Races extremely fast or slips in changing from "D ₄ " or "D ₃ " to "D ₁ " when depressing pedal.	1	. . .	2	. . .	3	5	. . .	4	6	7	. . .	8		
— Vehicle will not run in any position.	1	2	3	4	9	5	6	. . .	8	7	10
— Transaxle noise in "D", "2", "1" and "R" positions.	1	2		



GI
 MA
 EM
 FC
 FF
 EC
 FE
 CL
 MT
AT
 FA
 RA
 BR
 ST
 BF
 HA
 EL
 IDX

TROUBLE DIAGNOSES

Symptom Chart (Cont'd)


Reference page (AT-)		ON vehicle								OFF vehicle						
		23, 111	89	90	94	142, 90	90	90	90, 109	109	119, 138,	158, 162	167, 176	167, 119	173, 185	119
Reference page (AT-)		Fluid level Control linkage	Inhibitor switch Throttle position sensor (Adjustment)	Revolution sensor and vehicle speed sensor Engine speed signal	Engine idling speed Line pressure	Control valve assembly Shift solenoid valve A	Shift solenoid valve B Line pressure solenoid valve	Torque converter clutch solenoid valve Overrun clutch solenoid valve	Fluid temperature sensor Accumulator N-D	Accumulator servo release Ignition switch and starter	Torque converter Oil pump	Reverse clutch High clutch	Forward clutch Forward one-way clutch	Overrun clutch Low one-way clutch	Low & reverse brake Brake band	Parking components
83	Failure to change from "D ₃ " to "2 ₂ " when changing lever into "2" position.	. 7	1 2	6 5	4 . .	. 3	9 . .	. 8	. . .
-	Gear change from "2 ₂ " to "2 ₃ " in "2" position.	. .	1
84	Engine brake does not operate in "1" position.	. 2	1 3	4	6 5 7	8 . .	. 9	. . .
-	Gear change from "1 ₁ " to "1 ₂ " in "1" position.	. 2	1
-	Does not change from "1 ₂ " to "1 ₁ " in "1" position.	. .	1 .	2	4 3 5	6 . .	. 7	. . .
-	Large shock changing from "1 ₂ " to "1 ₁ " in "1" position.	1 2	. . .
-	Transaxle overheats.	1 . .	. 3	2 4	6 . .	. 5	14 7	8 9	11 .	12 .	13 10	. . .
-	ATF shoots out during operation.
-	White smoke emitted from exhaust pipe during operation.	1	2 3	4 5	6 .	7 4	. . .
-	Offensive smell at fluid charging pipe.	1	2 3	4 5	7 .	8 .	9 6	. . .
-	Torque converter is not locked up.	. .	3 1	2 4 .	. 6 8 7 .	. 5	9
-	Torque converter clutch piston slip	1 . .	. 2 3 6 .	. 5 4	7
78	Lock-up point is extremely high or low. 1 2 4 3
-	A/T does not shift to "D ₄ " when driving with overdrive switch "ON".	. . .	2 1 3 8 6 4 5 7	10 .	. 9
-	Engine is stopped at "R", "D", "2" and "1" positions.	1 5 4 3 .	. 2

Shift Lock Electrical Parts Location

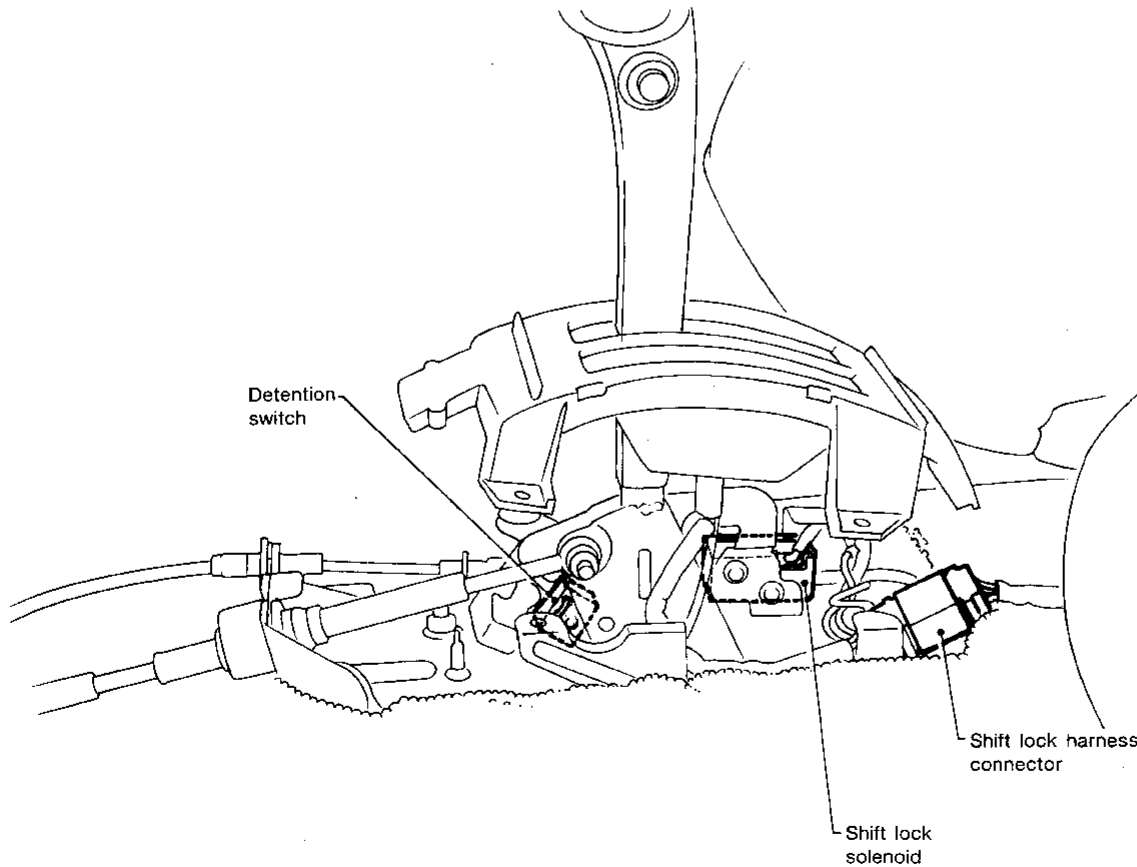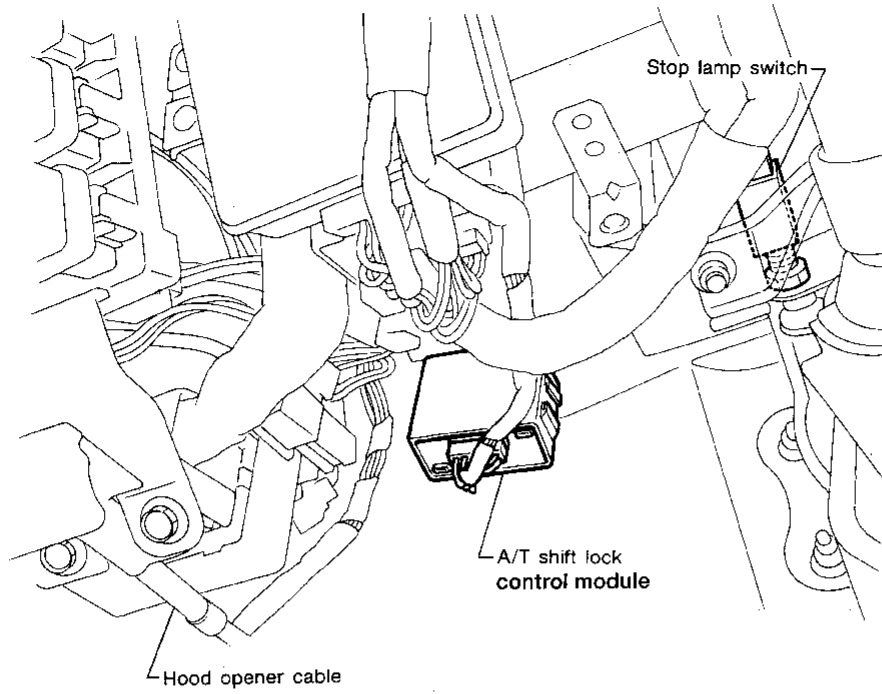

- GI
- MA
- EM
- LC
- EF & EC
- FE
- CL
- MT
- AT**
- FA
- RA
- BR
- ST
- BF
- HA
- EL
- IDX


Circuit Diagram for Quick Pinpoint Check

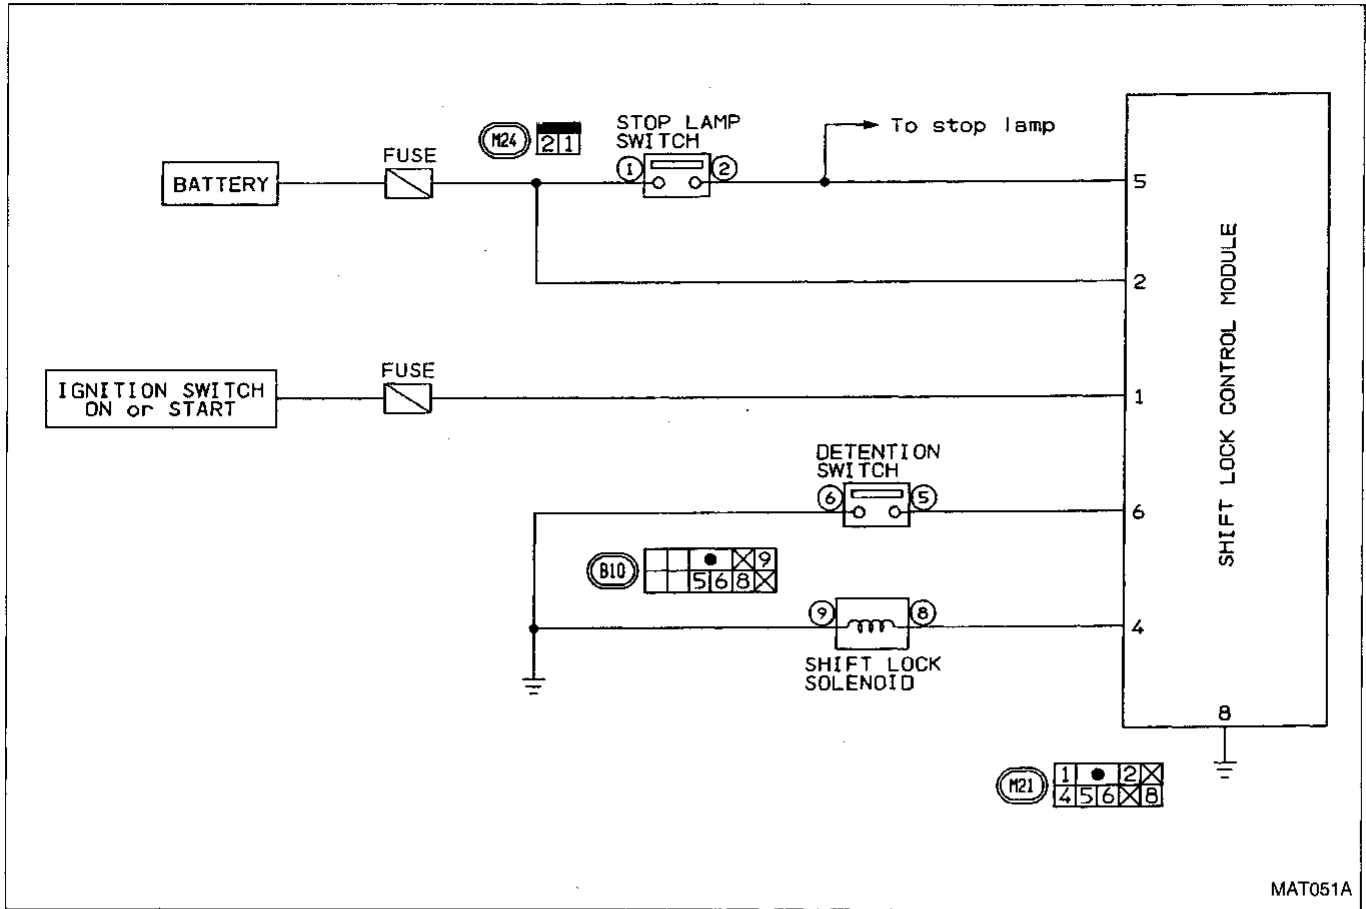

MAT051A




TROUBLE DIAGNOSES – A/T Shift Lock System

Wiring Diagram



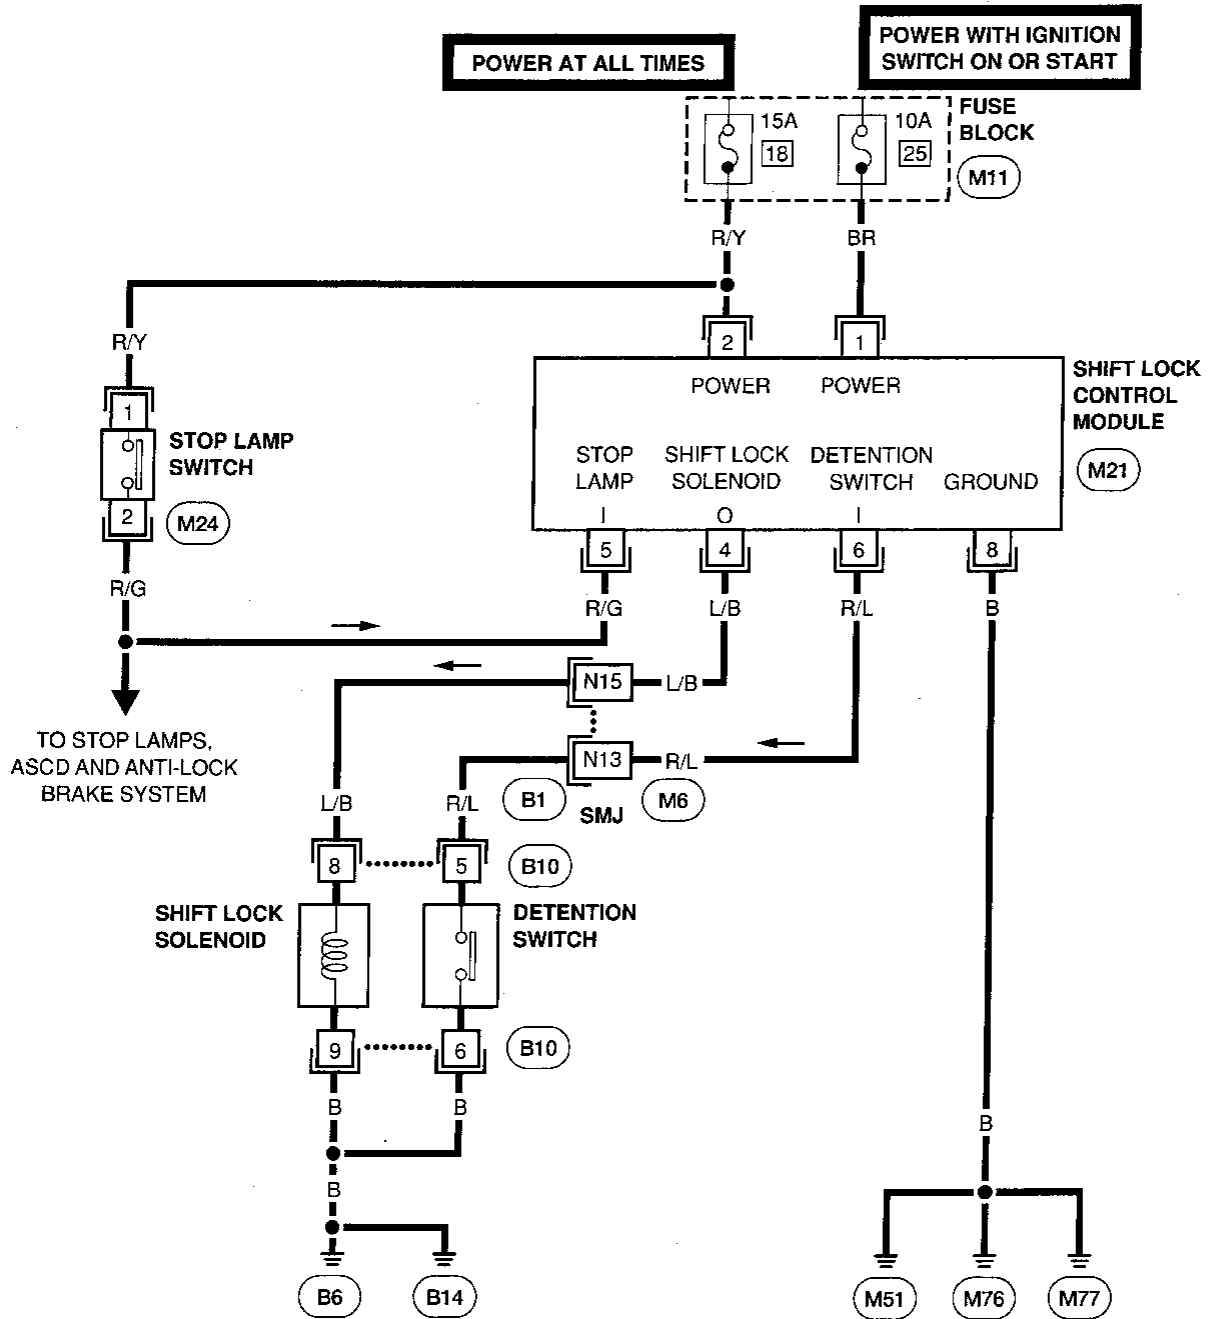


Refer to POWER SUPPLY ROUTING in EL Section. (M11)

Refer to Foldout Page in EL Section for details. (M6, B1)



GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

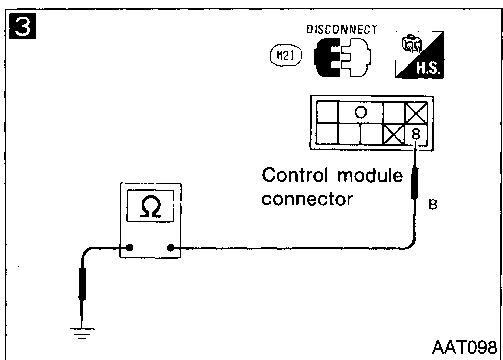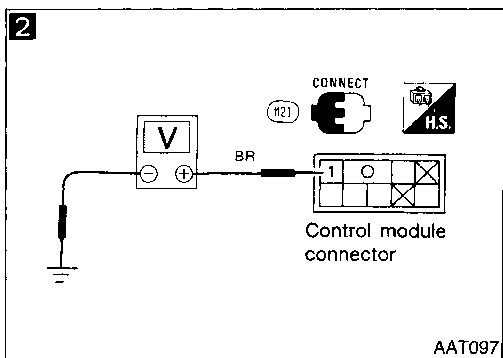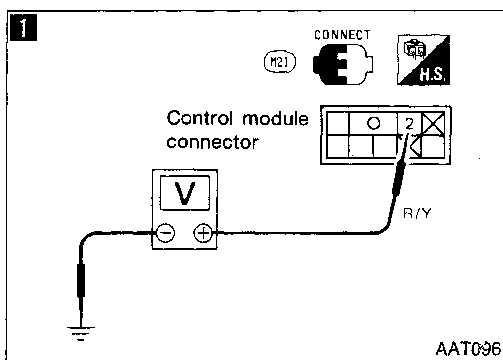

Diagnostic Procedure


SYMPTOM 1:

With key in "ON" position, selector lever cannot be moved from "P" position when applying brake pedal or can be moved when releasing brake pedal.

Selector lever can be moved from "P" position when key is removed from key cylinder.




SYMPTOM 2:

Ignition key cannot be removed when selector lever is set to "P" position or can be removed when selector lever is set to any position except "P".

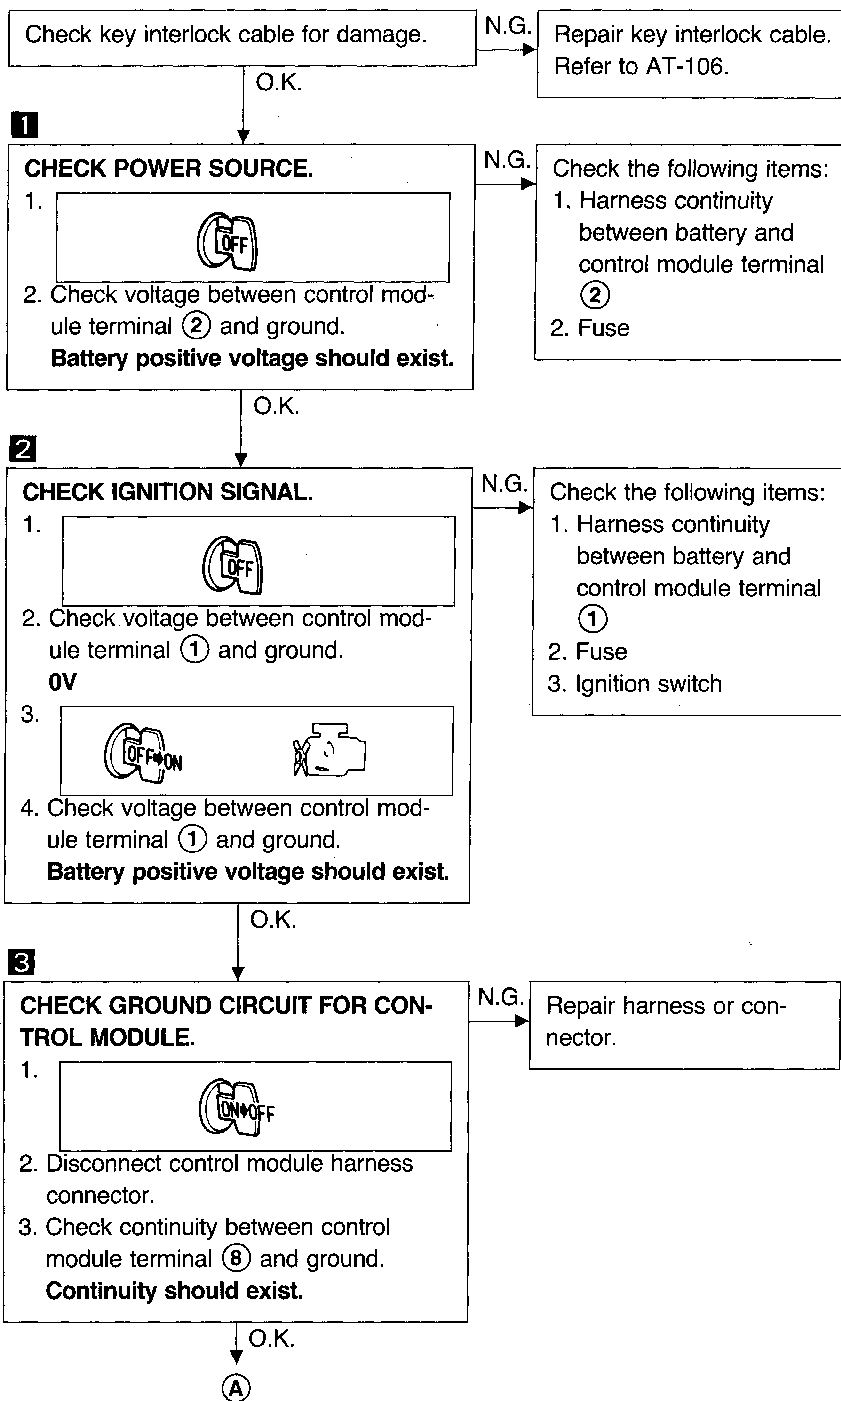


TROUBLE DIAGNOSES — A/T Shift Lock System

Diagnostic Procedure (Cont'd)

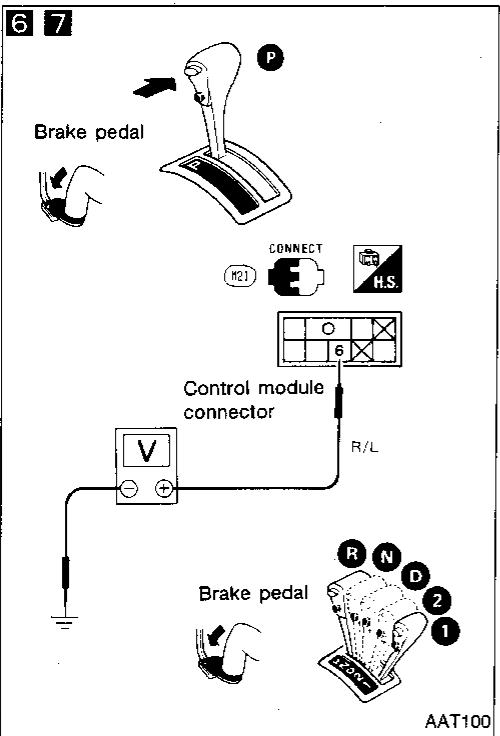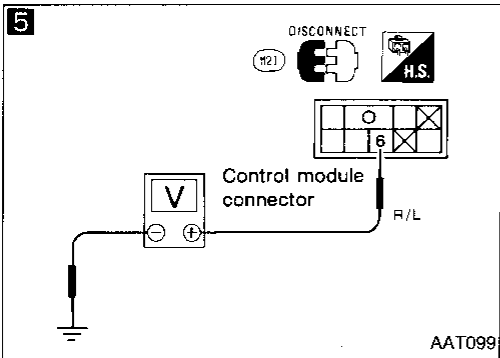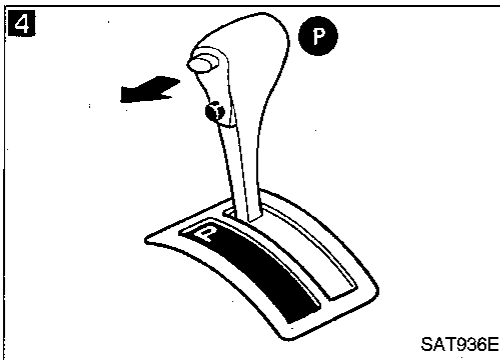

CHECK INPUT SIGNAL (DETENTION SWITCH).

1. Reconnect control module harness connector.
- 2.



3. Set selector lever in "P" position and release selector lever button. **When selector lever cannot be moved from "P" position with brake pedal depressed, set ignition key to "ACC" position and move lever. Then set ignition key to "ON" position.**


4. Disconnect control module harness connector.
5. Check continuity between control module terminal ⑥ and ground. **Continuity should not exist.**

N.G. Check detention switch—shift. (Refer to AT-108.)

O.K.

CHECK INPUT SIGNAL (DETENTION SWITCH).

- 1.



2. Check continuity between control module terminal ⑥ and ground with brake pedal depressed and selector lever button pushed. **Continuity should exist.**

3. Check continuity between control module terminal ⑥ and ground with selector lever set in any position except "P". **Battery positive voltage should exist.**

N.G. Check the following items:
 1. Harness continuity between control module terminal ⑥ and detention switch terminal ⑤
 2. Harness continuity between detention switch terminal ⑥ and ground
 3. Detention switch (Refer to AT-108.)






O.K.

Ⓑ

GI
 MA
 EM
 LC
 EF & EC
 FE
 CL
 MT
 AT
 FA
 RA
 BR
 ST
 BF
 HA
 EL
 IDX

TROUBLE DIAGNOSES – A/T Shift Lock System

Diagnostic Procedure (Cont'd)

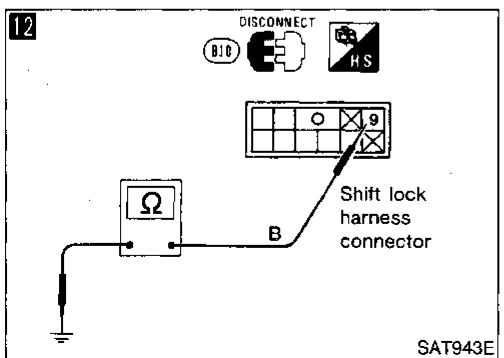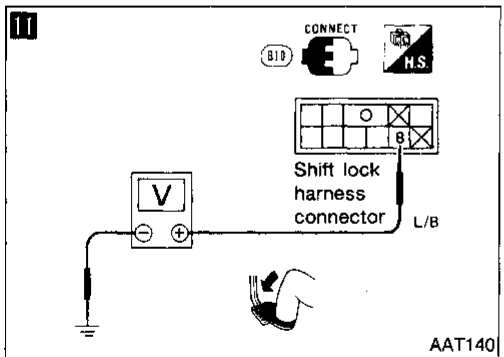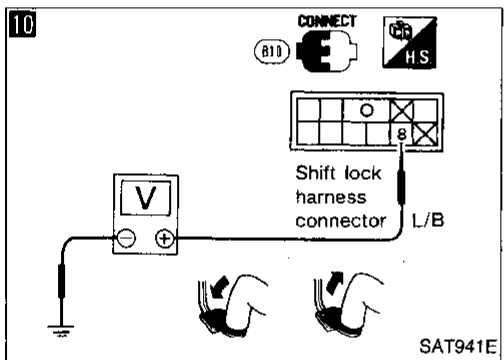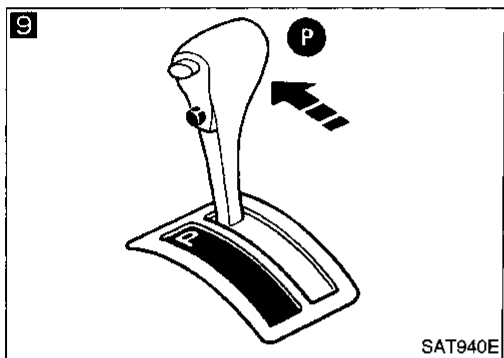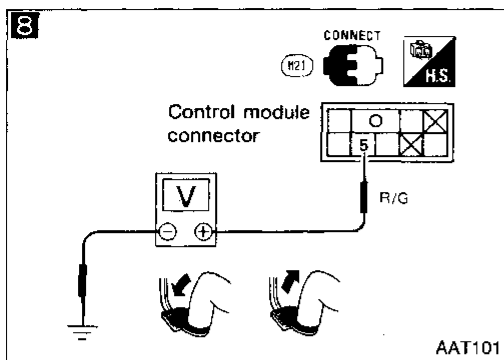

8

CHECK INPUT SIGNAL (STOP LAMP SWITCH).

- Check voltage between control module terminal ⑤ and ground.

Brake pedal	Voltage
Depressed	Battery positive voltage
Released	0V

N.G.

Check the following items:

- Harness continuity between control module terminal ⑤ and stop lamp switch terminal ①
- Harness continuity between stop lamp switch terminal ① and fuse
- Stop lamp switch (Refer to AT-108.)

O.K.

9

Set selector lever in "P" position.

9

CHECK OUTPUT SIGNAL (SHIFT LOCK SOLENOID).

-
- Check voltage between shift lock harness connector terminal ⑧ and body ground.

Brake pedal	Voltage
Depressed	Battery positive voltage
Released	0V

-
- Check voltage between shift lock harness connector terminal ⑧ and ground with brake pedal depressed. 0V

N.G.

Check harness continuity between control module terminal ④ and shift lock harness connector terminal ⑧.

O.K.

12

CHECK GROUND CIRCUIT FOR SHIFT LOCK SOLENOID.

- Disconnect shift lock harness connector.
- Check continuity between shift lock harness connector terminal ⑨ and ground. Continuity should exist.

N.G.


Repair harness or connector.

O.K.

C

TROUBLE DIAGNOSES – A/T Shift Lock System

Diagnostic Procedure (Cont'd)


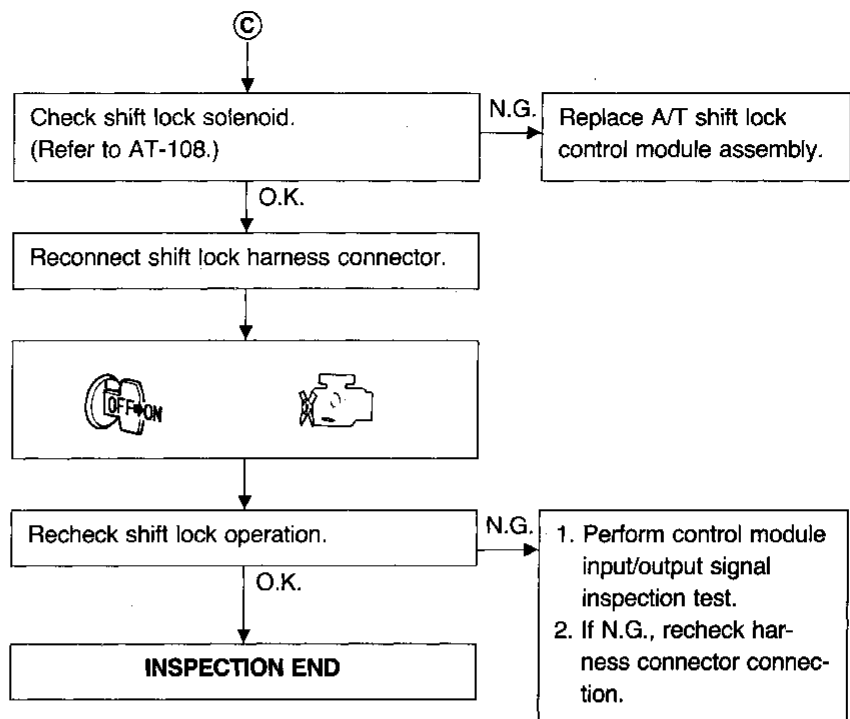


GI
MA
EM
LC
EF &
EC
FE
CL
MT

AT

FA
RA
BR
ST
BF
HA
EL
IDX

Key Interlock Cable

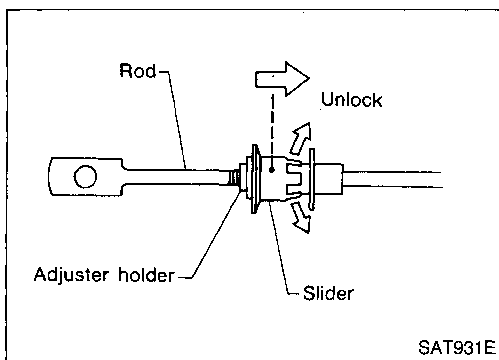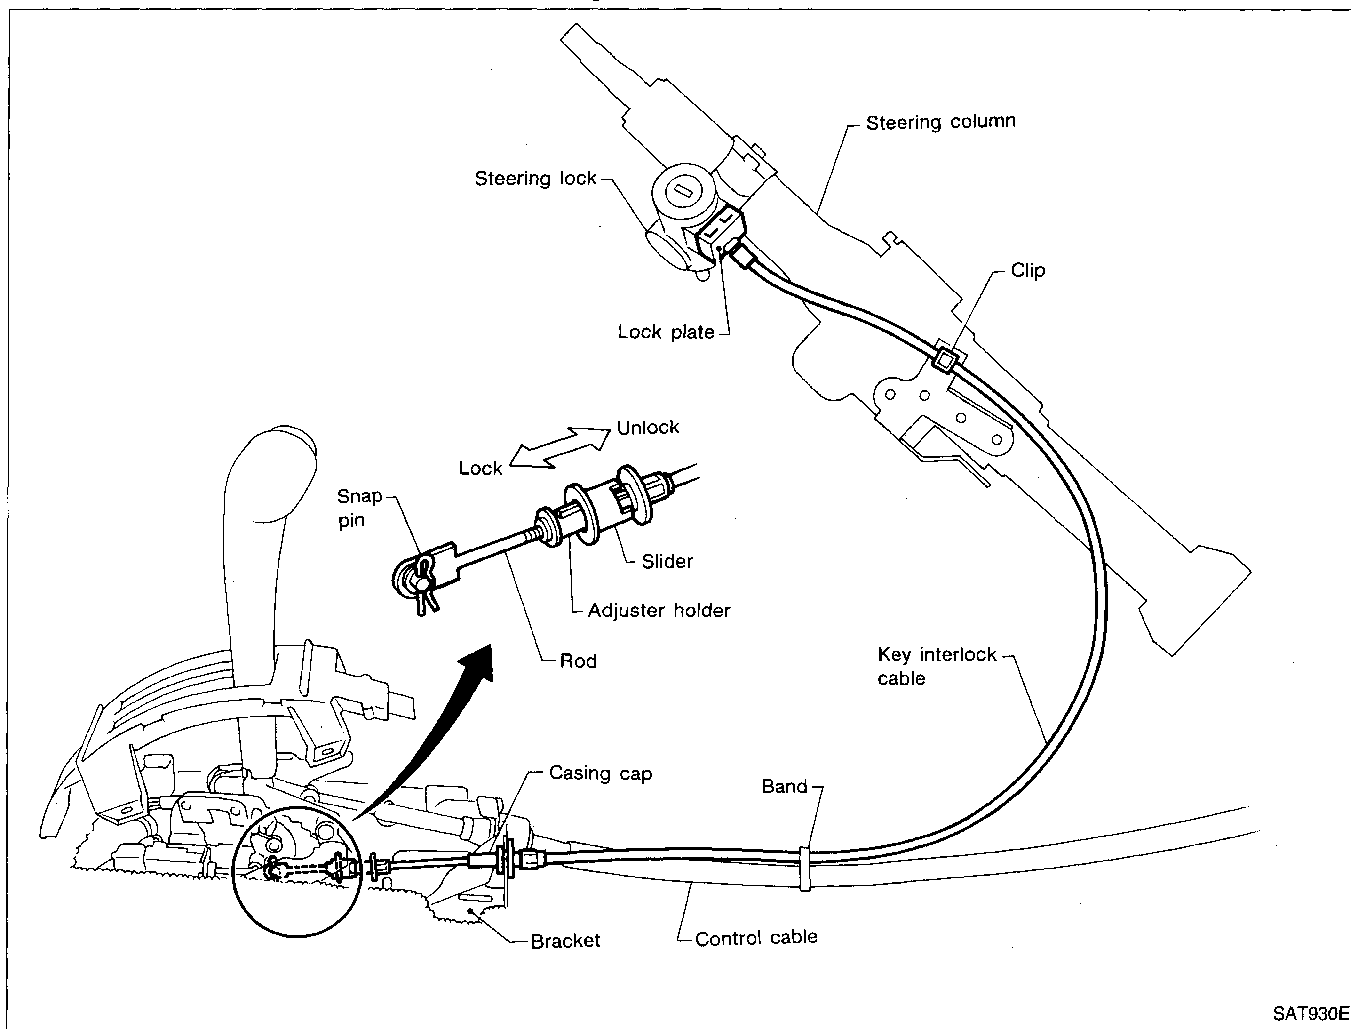


REMOVAL

1. Remove snap pin temporarily and remove key interlock cable from vehicle.
2. Unlock slider from adjuster holder and remove rod from cable.
3. Install rod to control device with snap pin.

INSTALLATION

1. Set key interlock cable to steering lock assembly and install lock plate.
2. Clamp cable to steering column and fix to control cable with band.
3. Set control lever to "P".
4. Insert rod into adjuster holder.
5. Install casing cap to bracket.
6. Move slider in order to fix adjuster holder to rod.

TROUBLE DIAGNOSES – A/T Shift Lock System

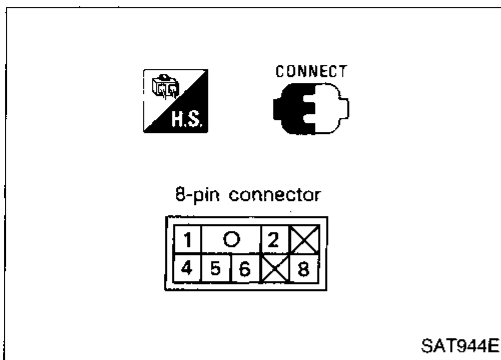

Shift Lock Control Module Inspection


- Measure voltage between each terminal and terminal ⑧ by following “Shift Lock Control Module Inspection Table”.
- Pin connector terminal layout.

Shift Lock Control Module Inspection Table

(Data are reference values.)

Terminal No.		Item	Condition	Judgment standard
⊕	⊖			
1	8	Ignition signal		Battery positive voltage
			Except above	0V
2		Power source	Any condition	Battery positive voltage
4		Shift lock signal		Battery positive voltage
			When selector lever is set in “P” position and brake pedal is depressed.	
Except above		0V		
5	Stop lamp switch	When brake pedal is depressed.	Battery positive voltage	
		When brake pedal is released.	0V	
6	Detention switch	<ul style="list-style-type: none"> • When key is inserted into key cylinder and selector lever is set in “P” position with selector lever button pushed. • When selector lever is set in any position except “P”. 	Battery positive voltage	
		Except above	0V	


GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

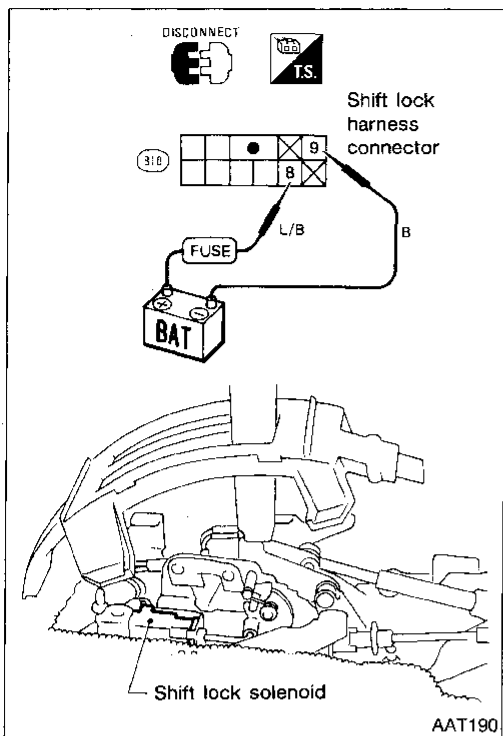

Component Check

SHIFT LOCK SOLENOID


- Check operation by applying battery positive voltage to shift lock harness connector.

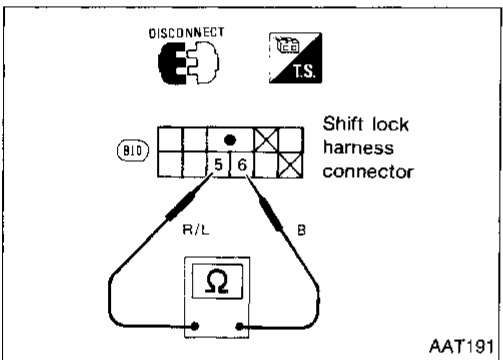

DETENTION SWITCH

- Check continuity between terminals ⑤ and ⑥ of shift lock harness connector.

Condition	Continuity
When selector lever is set in "P" position and selector lever button is released	No
Except above	Yes

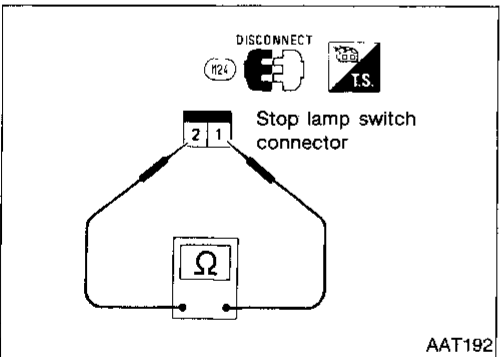


STOP LAMP SWITCH

- Check continuity between terminals ① and ② of stop lamp switch harness connector.


Condition	Continuity
When brake pedal is depressed	Yes
When brake pedal is released	No

Check stop lamp switch after adjusting brake pedal — refer to BR section ("Adjustment", "BRAKE PEDAL AND BRACKET").

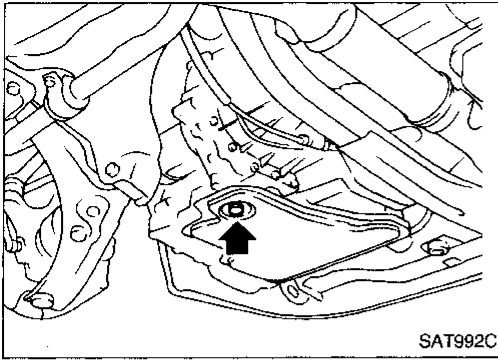


Control Valve Assembly and Accumulator REMOVAL

1. Drain ATF from transaxle.
2. Remove oil pan and gasket.

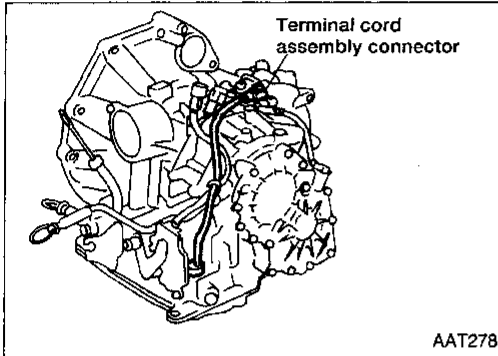

3. Disconnect terminal cord assembly connector.

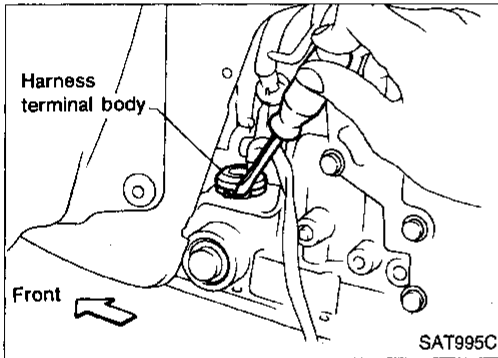

4. Remove stopper ring from terminal cord assembly harness terminal body.
5. Remove terminal cord assembly harness from transmission case by pushing on terminal body.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF


HA

EL

IDX

ON-VEHICLE SERVICE


Control Valve Assembly and Accumulator (Cont'd)

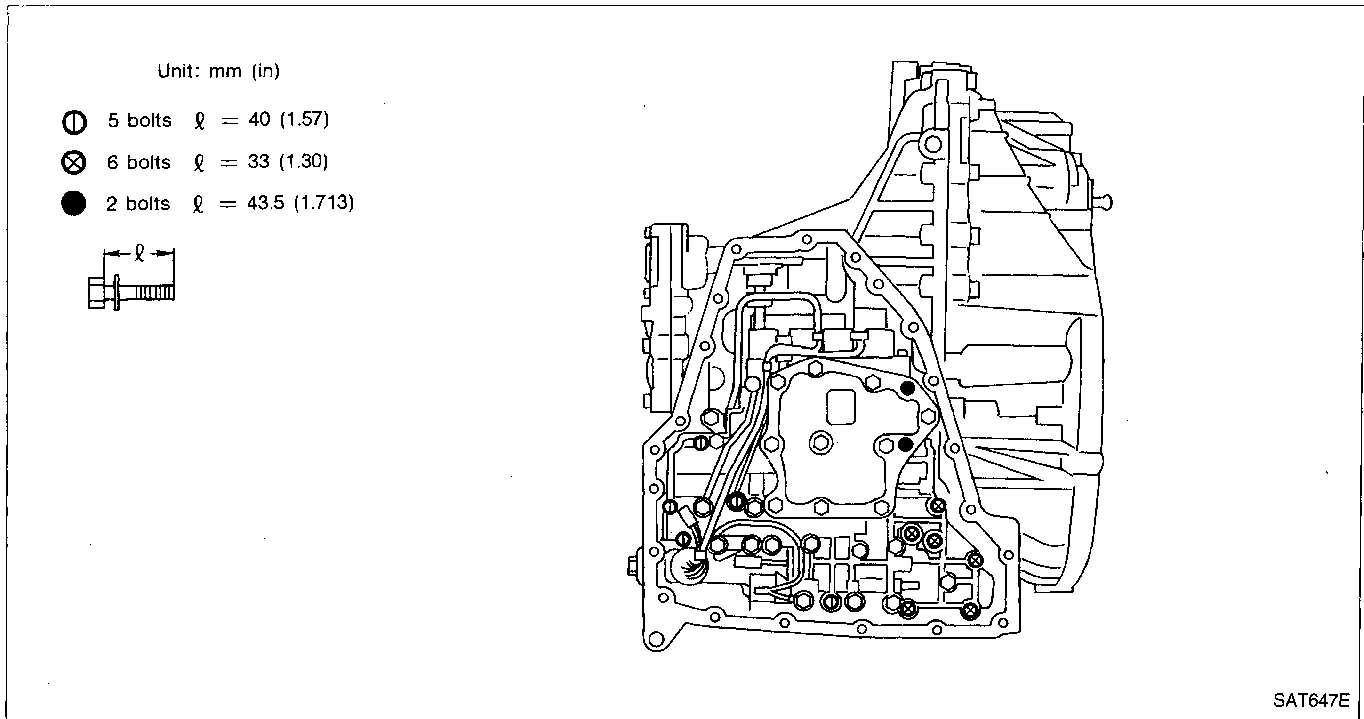


6. Remove control valve assembly by removing fixing bolts ①, ⊗ and ●.

Bolt length, number and location are shown in the illustration.

- Be careful not to drop manual valve and servo release accumulator return spring.
7. Disassemble and inspect control valve assembly if necessary
— Refer to AT-142.

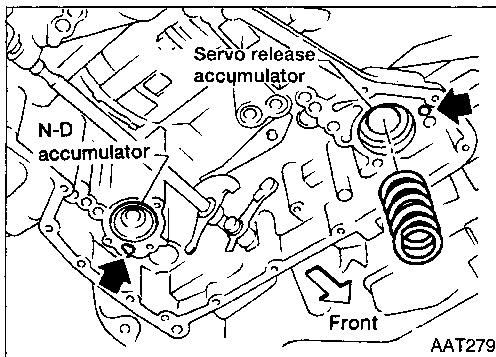


8. Remove servo release and N-D accumulators by applying compressed air if necessary.
- Hold each piston with a rag.

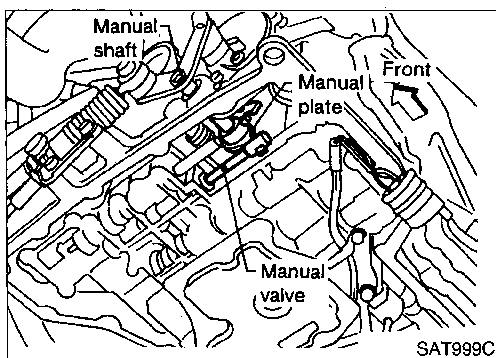

INSTALLATION


- Set manual shaft in Neutral, then align manual plate with groove in manual valve.
- After installing control valve on to transmission case, make sure that selector lever can be moved to all positions.

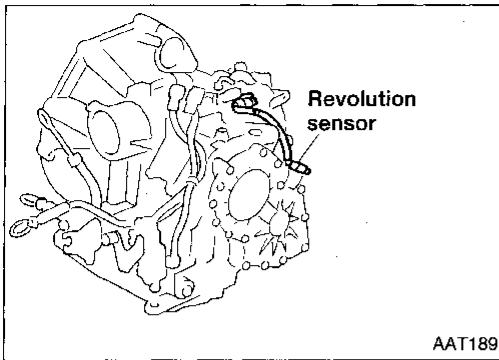

Revolution Sensor Replacement


1. Remove under cover.
2. Remove revolution sensor from A/T.
3. Reinstall any part removed.

Always use new sealing parts.

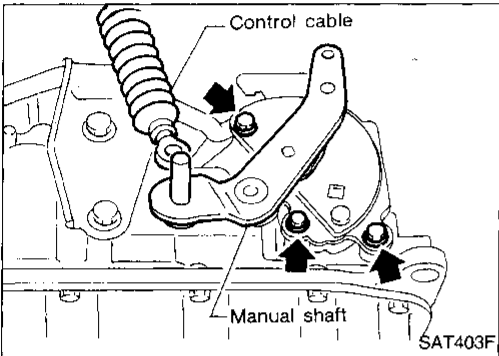


Inhibitor Switch Adjustment

1. Remove control cable from manual shaft.
2. Set manual shaft in "N" position.
3. Loosen inhibitor switch fixing bolts.

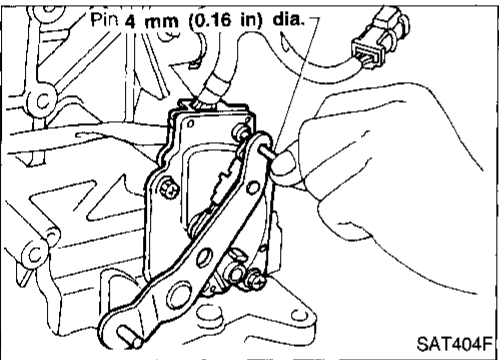

4. Insert pin into adjustment holes in both inhibitor switch and manual shaft as near vertical as possible.
5. Reinstall any part removed.
6. Check continuity of inhibitor switch. — Refer to AT-89.

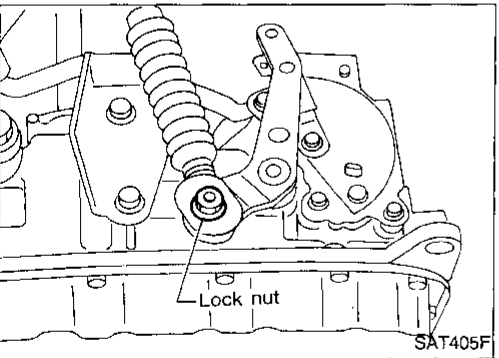


Control Cable Adjustment

Move selector lever from "P" to "1" position. You should be able to feel the detents in each position.

If the detents cannot be felt or the pointer indicating the position is improperly aligned, the linkage needs adjustment.

1. Place selector lever in "P" position.
2. Loosen lock nuts.
3. Tighten lock nut, pulling selector lever toward "R" position side.
4. Move selector lever from "P" to "1" position again. Make sure selector lever moves smoothly.

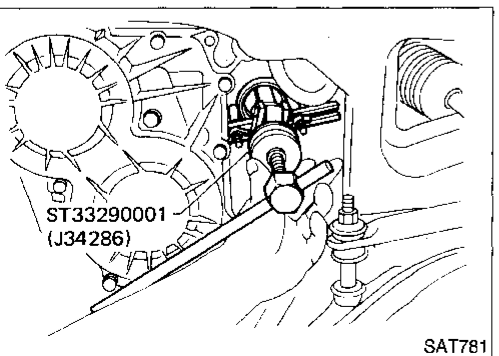


Differential Side Oil Seal Replacement

1. Remove drive shaft assembly. — Refer to FA section ("Removal", "FRONT AXLE — Drive Shaft").
2. Remove oil seal.

GI
MA
EM
LC
EF &
EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

ON-VEHICLE SERVICE

Differential Side Oil Seal Replacement (Cont'd)





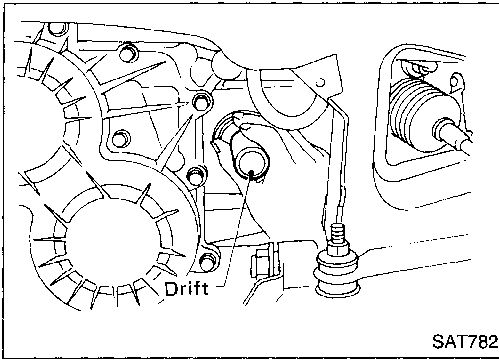


3. Install oil seal.

Apply ATF before installing.

4. Reinstall any part removed.

REMOVAL AND INSTALLATION

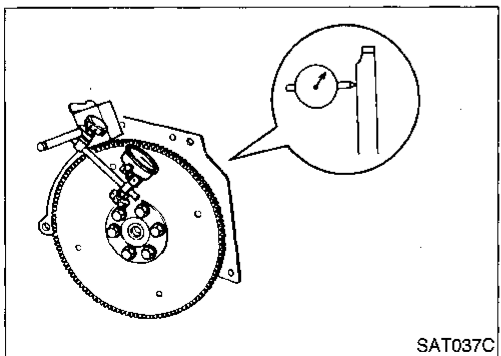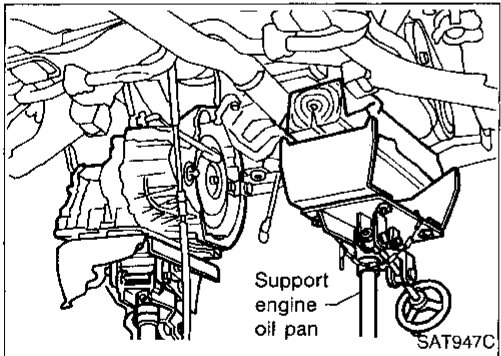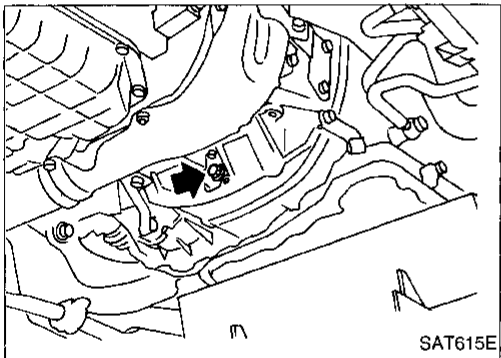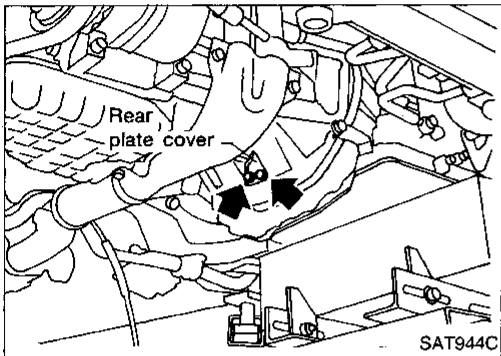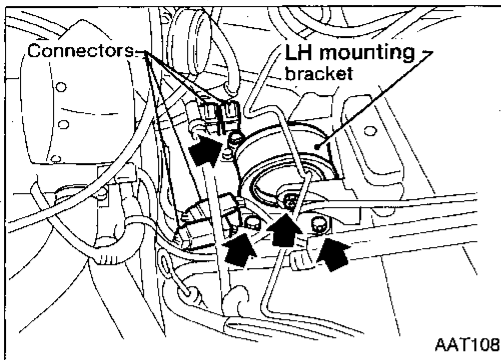

Removal

- Remove battery and bracket.
- Remove air cleaner and resonator.
- Disconnect terminal cord assembly harness connector and inhibitor switch harness connectors.
- Disconnect harness connectors of revolution sensor and vehicle speed sensor.
- Remove LH mounting bracket from transaxle and body.
- Disconnect control cable at transaxle side.
- Drain ATF.
- Remove drive shafts — Refer to FA section (“Removal”, “FRONT AXLE — Drive Shaft”).
- Disconnect oil cooler piping.
- Remove starter motor from transaxle.
- Support engine by placing a jack under oil pan.

Do not place jack under oil pan drain plug.

- Remove center member.
- Remove rear plate cover and bolts securing torque converter to drive plate.

Rotate crankshaft for access to securing bolts.

- Support transaxle with a jack.
- Remove bolts fixing A/T to engine.
- Lower transaxle while supporting it with a jack.

Installation

- Drive plate runout
Maximum allowable runout:
Refer to EM section (“Inspection”, “CYLINDER BLOCK”).
If this runout is out of allowance, replace drive plate and ring gear.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF


HA

EL


IDX

REMOVAL AND INSTALLATION


Installation (Cont'd)

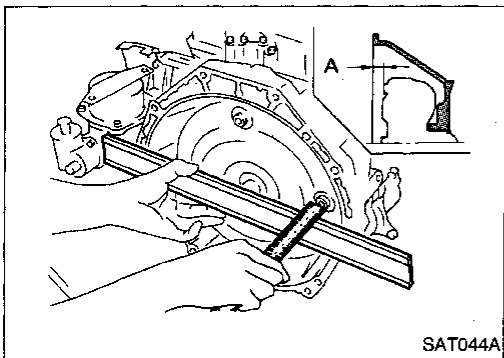

- When connecting torque converter to transaxle, measure distance "A" to be certain that they are correctly assembled.
Distance "A":
19 mm (0.75 in) or more

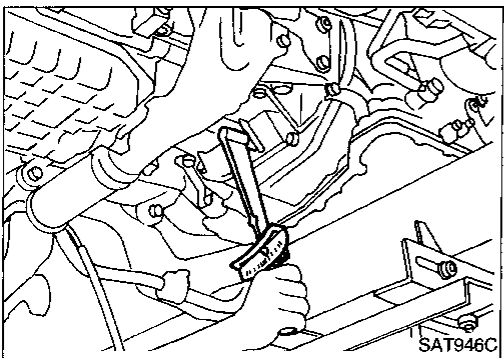


- Install bolts fixing converter to drive plate.
- After converter is installed to drive plate, rotate crankshaft several turns and check to be sure that transaxle rotates freely without binding.**

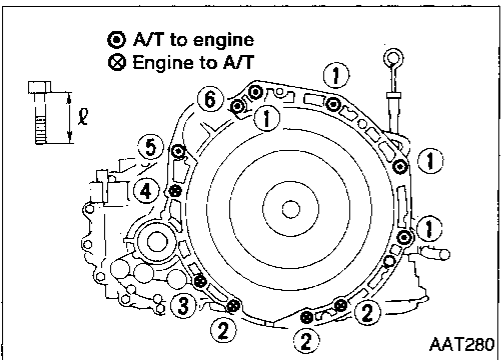

- Tighten bolt securing transaxle.


Bolt No.	Tightening torque N•m (kg-m, ft-lb)	ℓ mm (in)
1	39 - 49 (4.0 - 5.0, 29 - 36)	45 (1.77)
2	30 - 36 (3.1 - 3.7, 22 - 27)	30 (1.18)
3	30 - 36 (3.1 - 3.7, 22 - 27)	40 (1.57)
4	74 - 83 (7.5 - 8.5, 54 - 61)	45 (1.77)
5	30 - 36 (3.1 - 3.7, 22 - 27)	80 (3.15)
6	30 - 36 (3.1 - 3.7, 22 - 27)	65 (2.56)

- Reinstall any part removed.

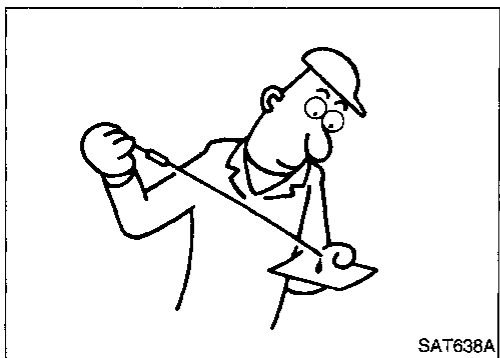

- Check fluid level in transaxle.
- Move selector lever through all positions to be sure that transaxle operates correctly.
 With parking brake applied, rotate engine at idling. Move selector lever through "N" to "D", to "2", to "1" and to "R" position. A slight shock should be felt by hand gripping selector each time transaxle is shifted.
- Perform road test — Refer to AT-23.

MAJOR OVERHAUL



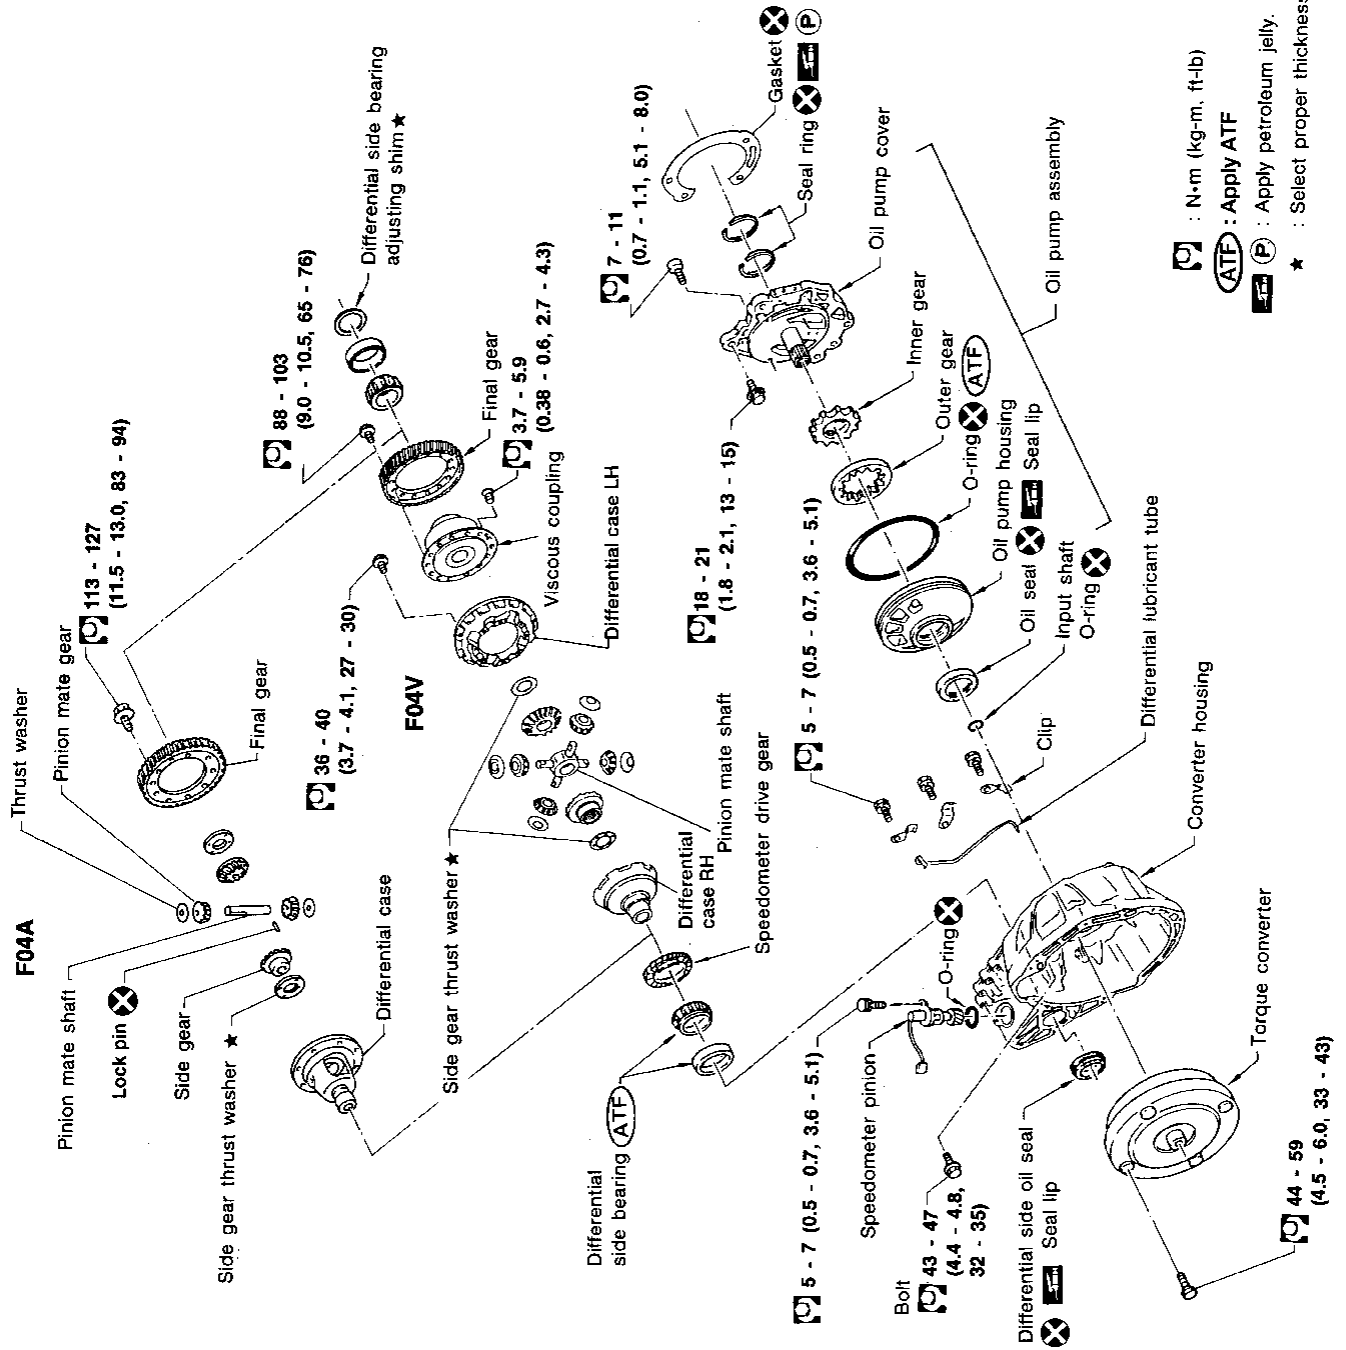


: N·m (kg-m, ft-lb)
 : Apply ATF
 : Apply petroleum jelly.
 ★ : Select proper thickness.

GI
 MA
 EM
 LC
 FF &
 EC
 FE
 CL
 MT
AT
 FA
 RA
 BR
 ST
 BF
 HA
 EL
 IDX

MAJOR OVERHAUL


Oil Channel

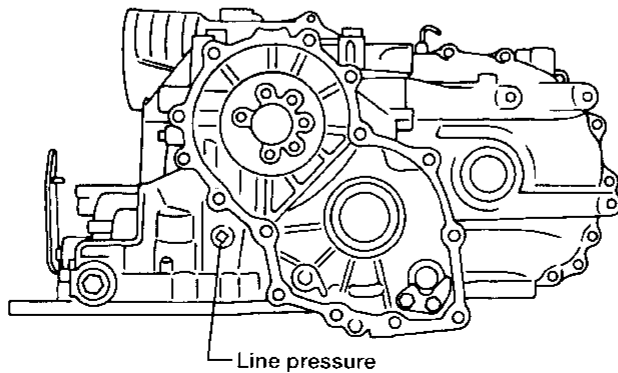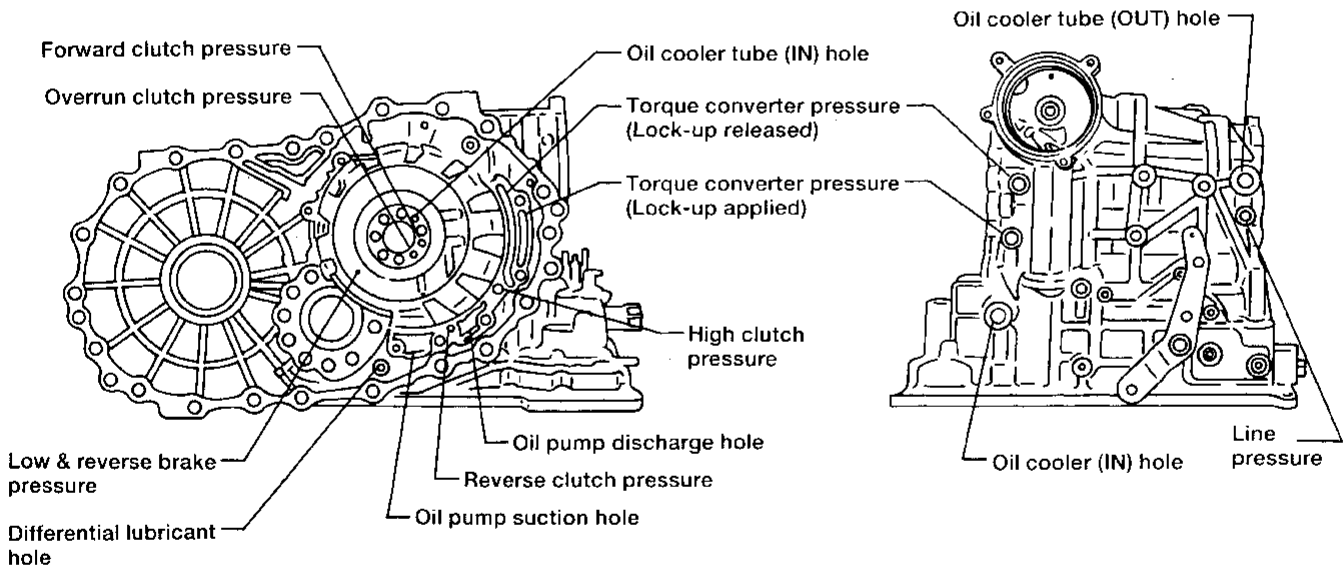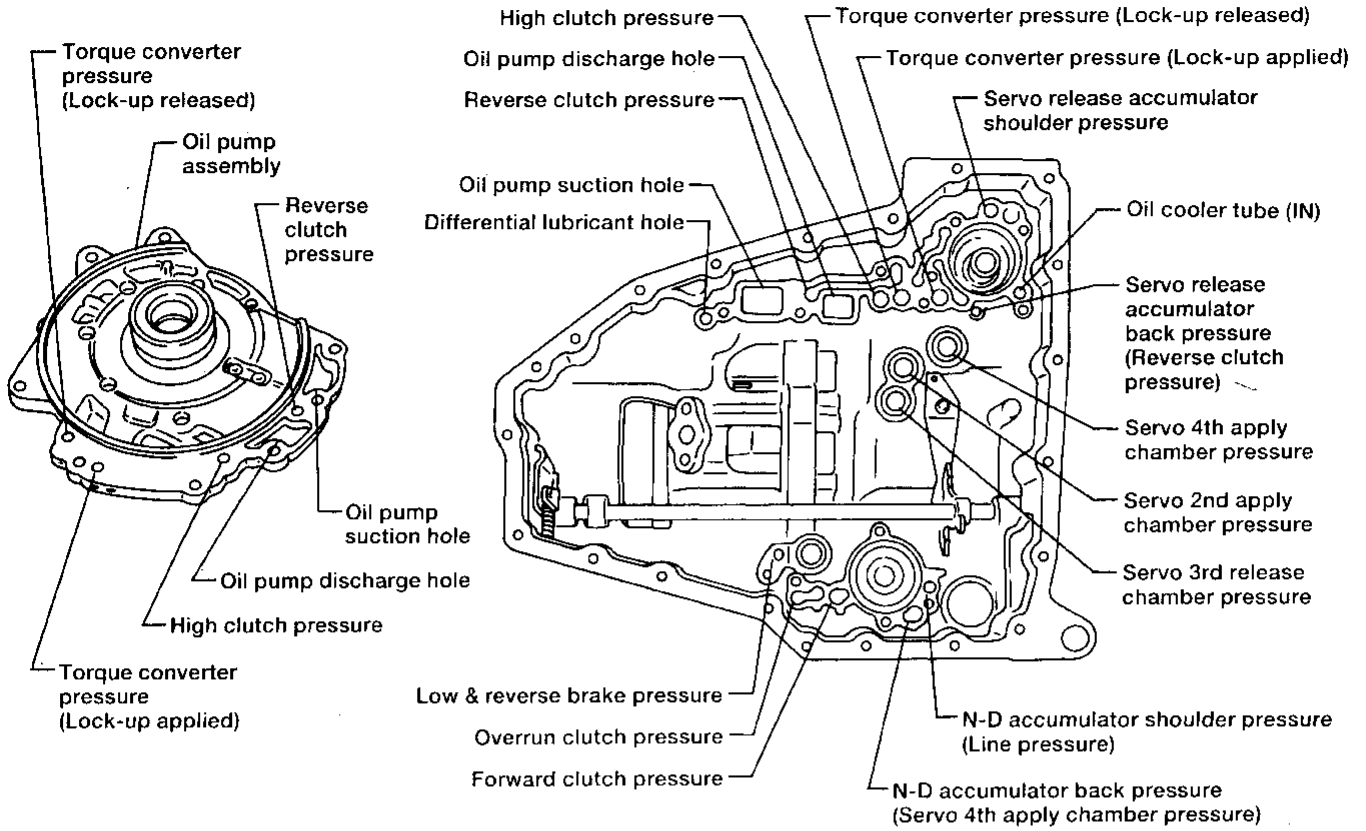


AT-118

AAT307


DISASSEMBLY

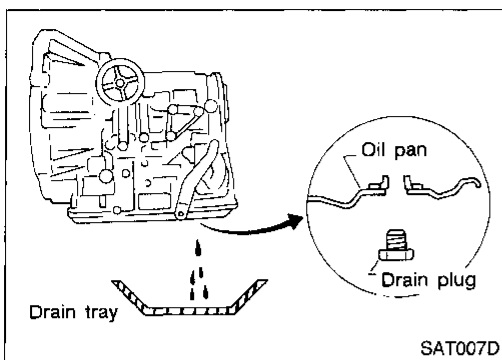

1. Drain ATF through drain plug.

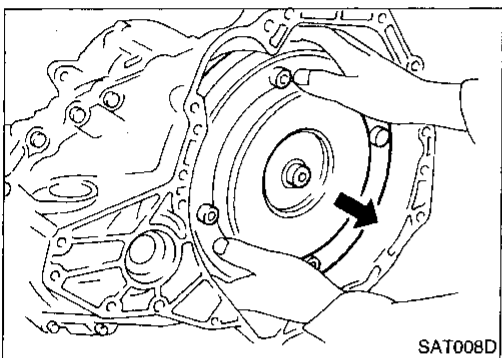


2. Remove torque converter.

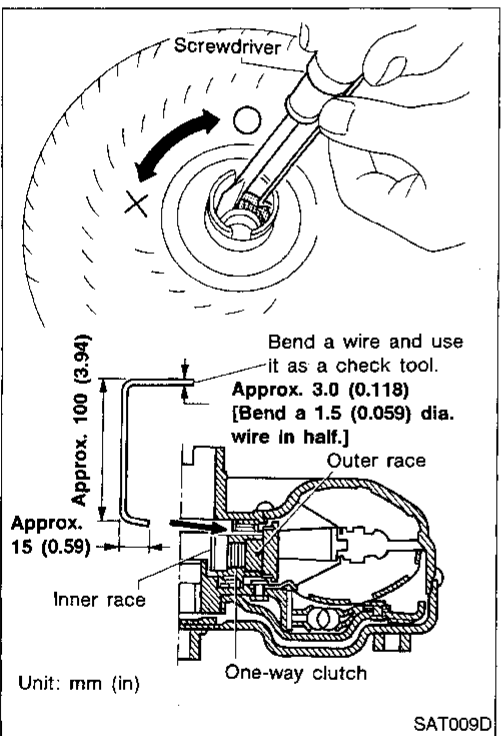

3. Check torque converter one-way clutch using check tool as shown at left.

- Insert check tool into the groove of bearing support built into one-way clutch outer race.
- When fixing bearing support with check tool, rotate one-way clutch spline using screwdriver.
- Check that inner race rotates clockwise only. If not, replace torque converter assembly.

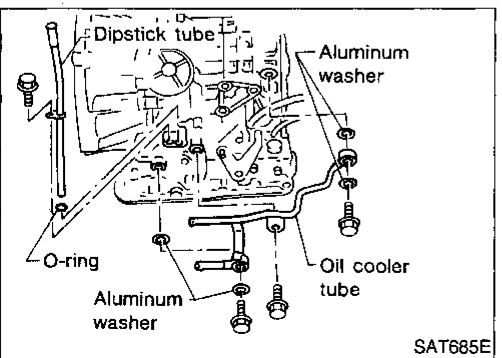

4. Remove oil charging pipe and oil cooler tube.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST


BF

HA


EL

IDX


DISASSEMBLY

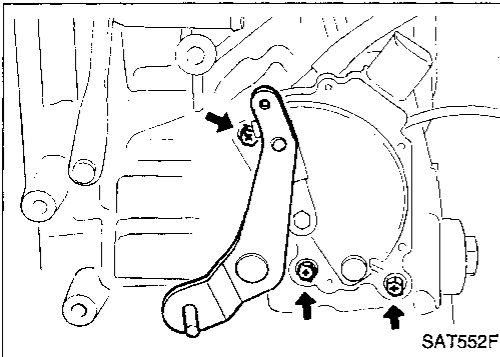

5. Set manual lever to park position.
6. Remove inhibitor switch.

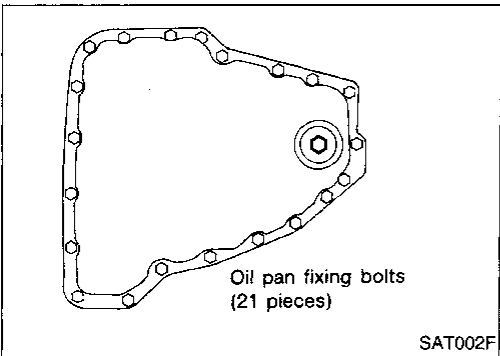


7. Remove oil pan and oil pan gasket.
 - **Do not reuse oil pan bolts.**

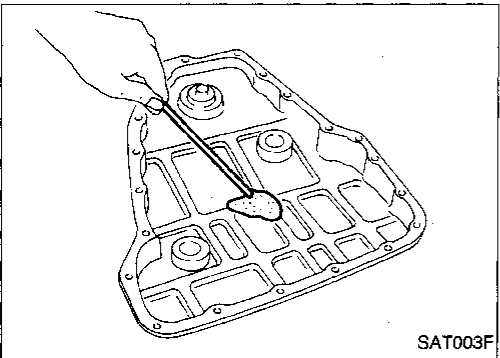


8. Analyze foreign materials in oil pan to trace possible causes of malfunction. If the fluid is very dark, smells burned, or contains foreign particles, the frictional material (clutches, band) may need replacement. A tacky film that will not wipe clean indicates varnish build up which can cause valves, servo, and clutches to stick and may inhibit pump pressure.
 - **If frictional material is detected, replace radiator after repair of A/T. Refer to LC section ("Radiator", "ENGINE COOLING SYSTEM").**


DISASSEMBLY

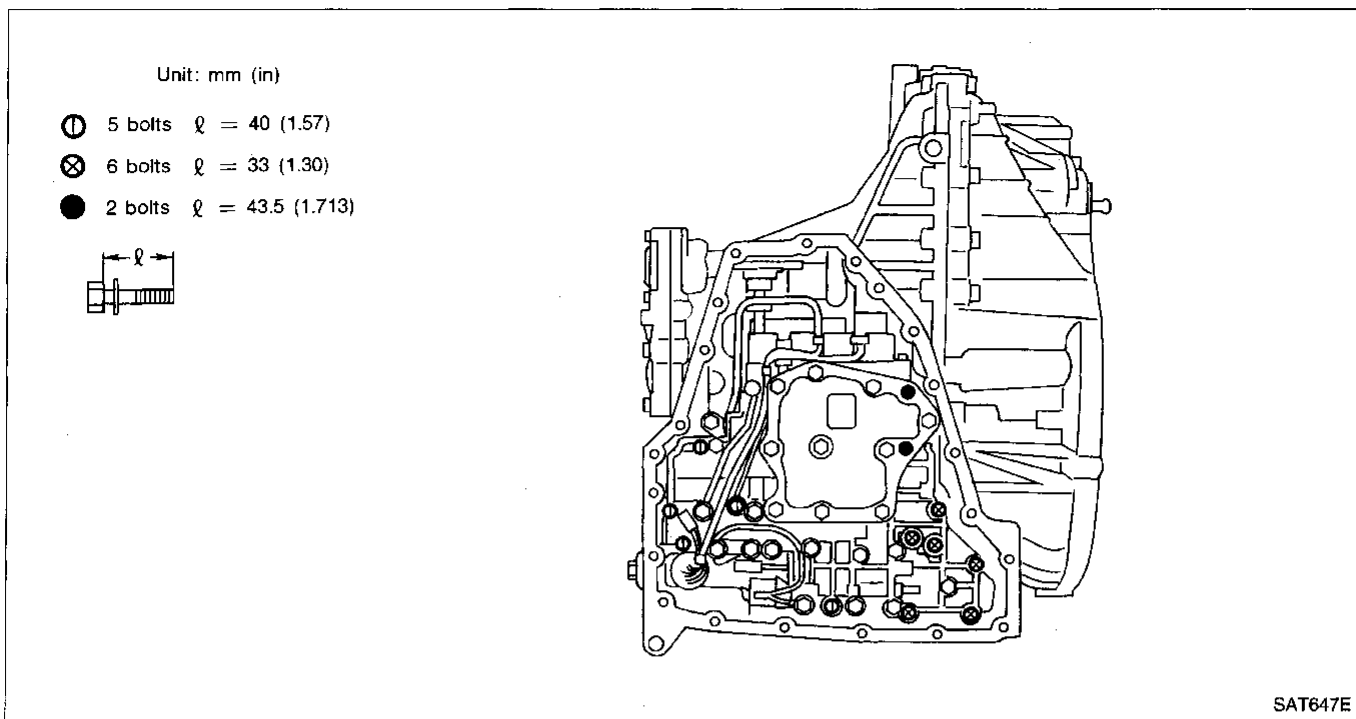

9. Remove control valve assembly according to the following procedures.
 - a. Remove control valve assembly mounting bolts ①, ⊗ and ●.

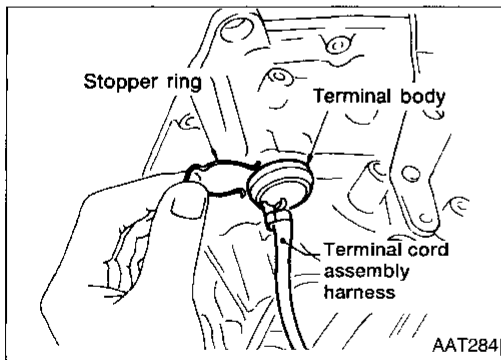

- b. Remove stopper ring from terminal body.

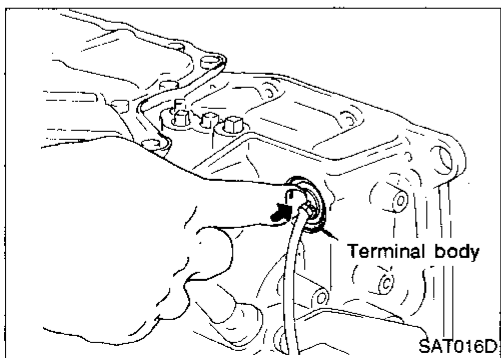

- c. Push terminal body into transmission case and draw out terminal cord assembly harness.

GI

MA

EM

LC

EF &

EC

FE

CL

MT

AT

FA

RA

BR

ST


BF

HA


EL

IDX


DISASSEMBLY

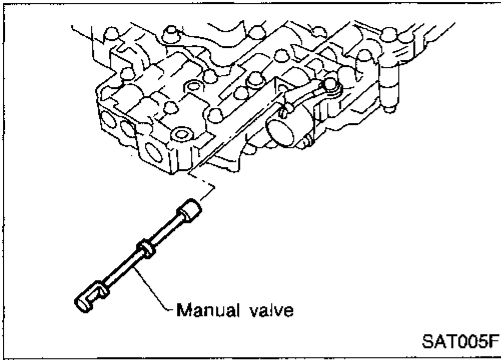

10. Remove manual valve from control valve assembly.

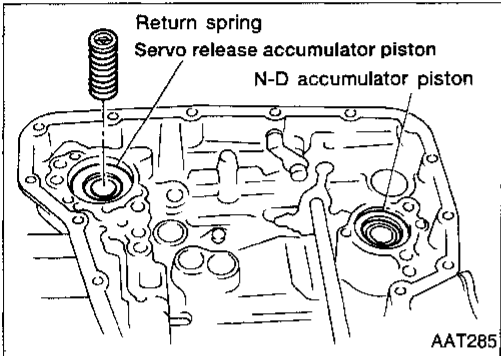


11. Remove return spring from servo release accumulator piston.

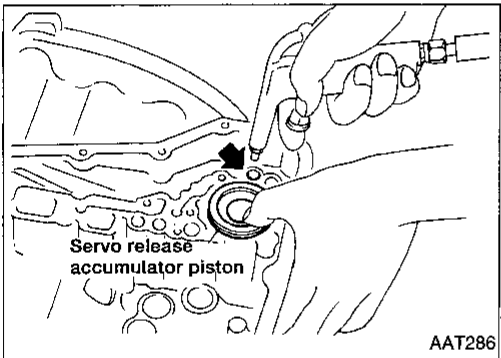


12. Remove servo release accumulator piston with compressed air.

13. Remove O-rings from servo release accumulator piston.

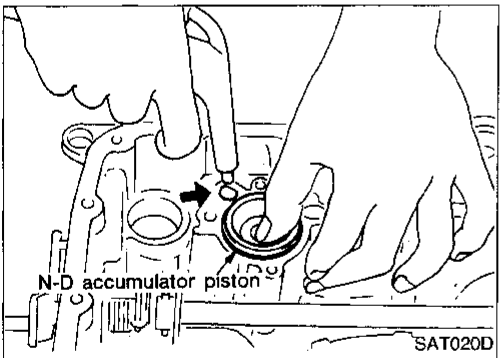

14. Remove N-D accumulator piston and return spring with compressed air.

15. Remove O-rings from N-D accumulator piston.

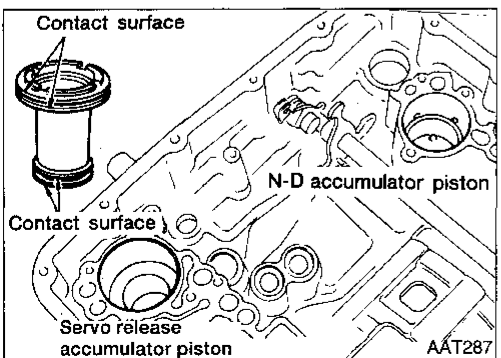


16. Check accumulator pistons and contact surface of transmission case for damage.

17. Check accumulator return springs for damage and free length.


Unit: mm (in)

Spring	Free length	Outer diameter
Servo release accumulator spring	52.5 (2.067)	20.4 (0.803)
N-D accumulator spring	43.5 (1.713)	27.0 (1.063)


DISASSEMBLY

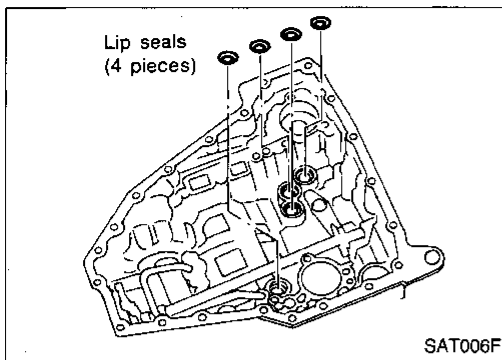

18. Remove lip seals.

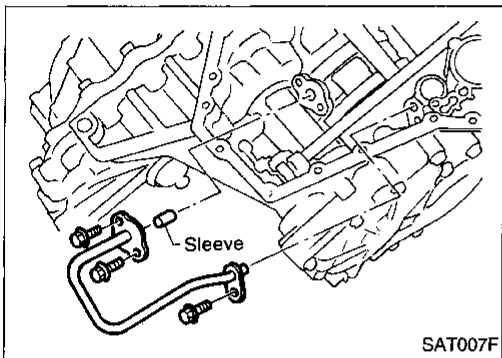


19. Remove tube and sleeve.

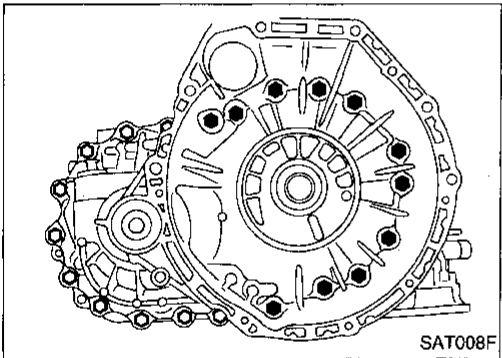


20. Remove converter housing according to the following procedures.

a. Remove converter housing mounting bolts.

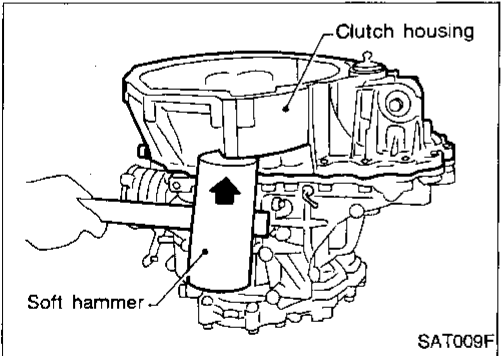

b. Remove converter housing by tapping it lightly.

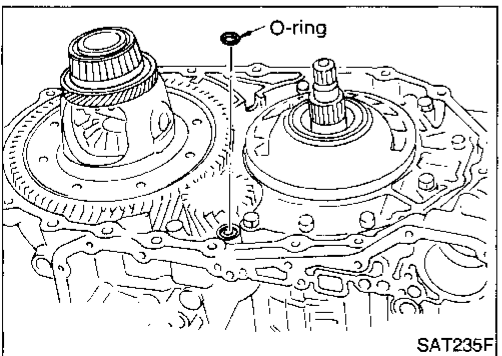

c. Remove O-ring from differential oil port.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST


BF

HA


EL

IDX


DISASSEMBLY

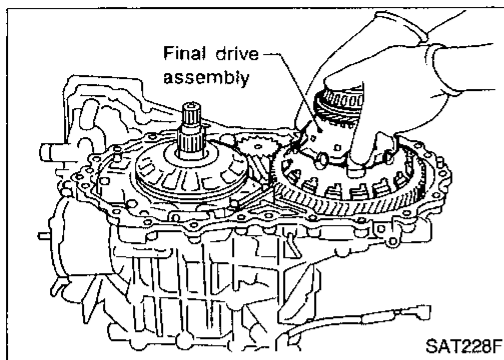


21. Remove final drive assembly from transmission case.

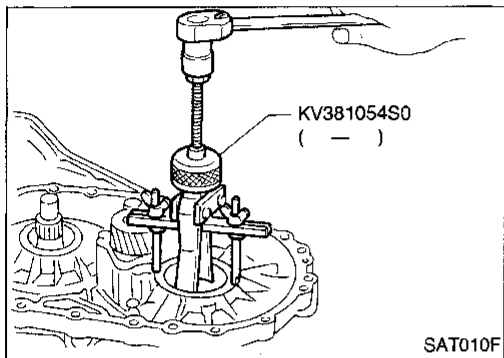


22. Remove differential side bearing outer race from transmission case.

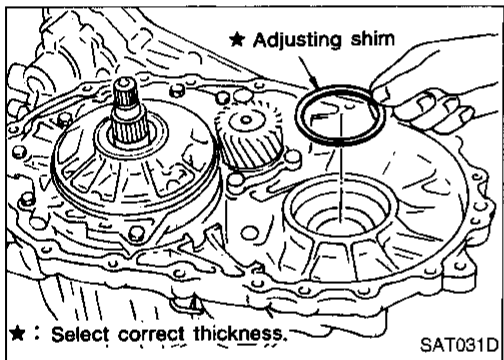

23. Remove differential side bearing adjusting shim from transmission case.

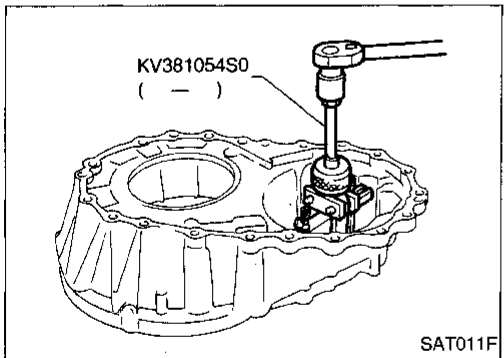


24. Remove differential side bearing outer race from converter housing.

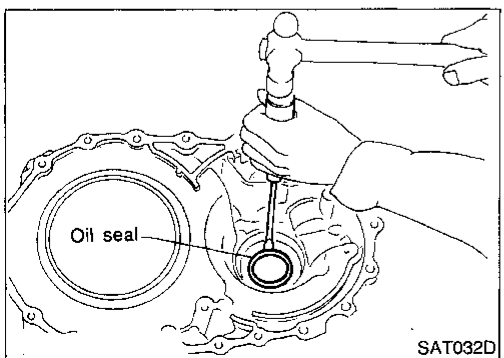


25. Remove oil seal with screwdriver from converter housing.

- Be careful not to damage case.


DISASSEMBLY

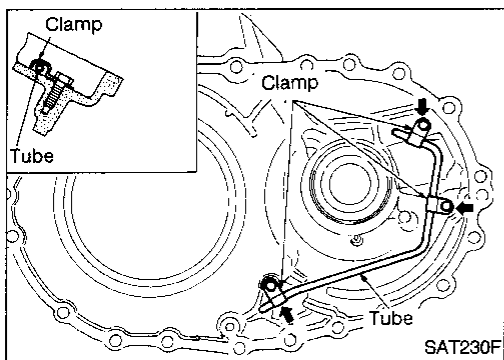


26. Remove oil tube from converter housing.

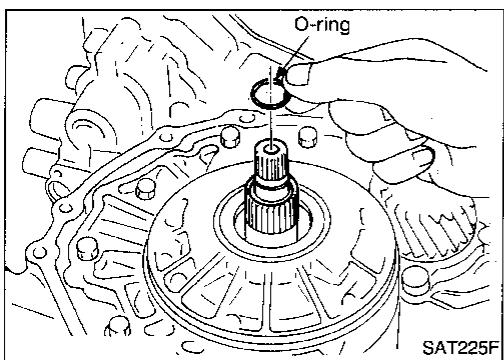


27. Remove oil pump according to the following procedures.
a. Remove O-ring from input shaft.

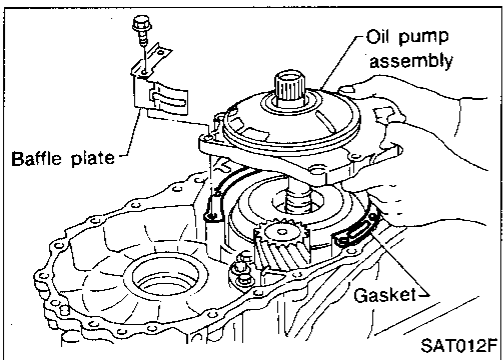

b. Remove oil pump assembly, baffle plate and gasket from transmission case.

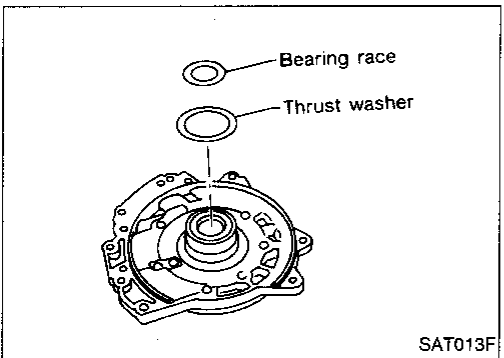

c. Remove thrust washer and bearing race from oil pump assembly.

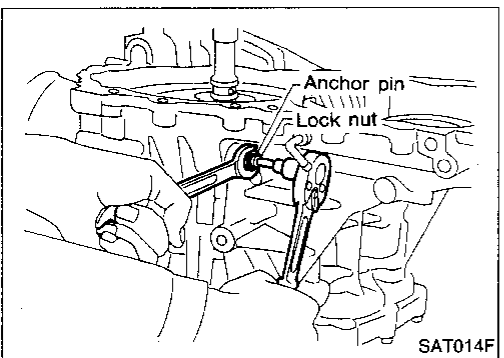

28. Remove brake band according to the following procedures.
a. Loosen lock nut, then back off band servo anchor end pin.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST


BF

HA


EL

IDX


DISASSEMBLY

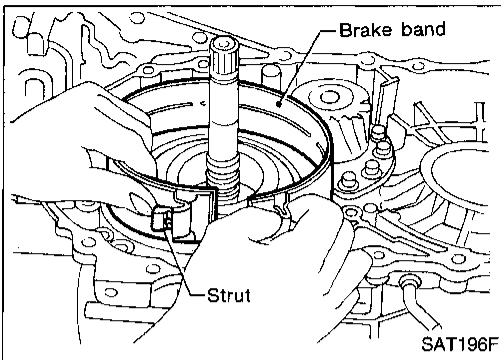


b. Remove brake band and strut from transmission case.

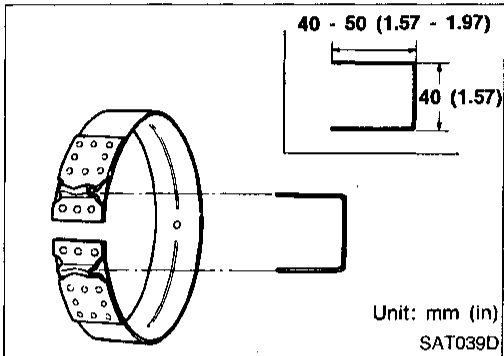

- To prevent brake linings from cracking or peeling, do not stretch the flexible band unnecessarily. When removing the brake band, always secure it with a clip as shown in the figure at left. Leave the clip in position after removing the brake band.

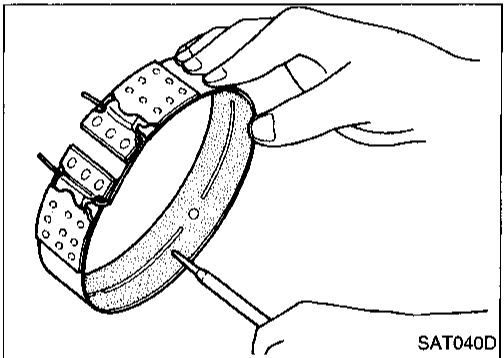


c. Check brake band facing for damage, cracks, wear or burns.

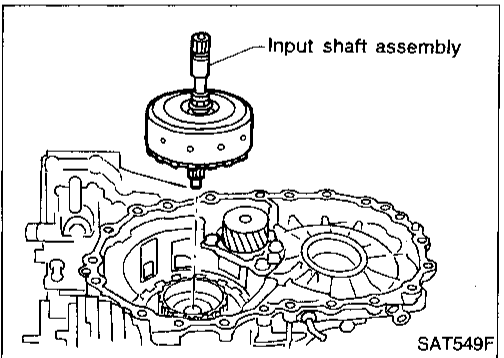


29. Remove input shaft assembly (high clutch), reverse clutch and front sun gear according to the following procedures.

a. Remove input shaft assembly (high clutch) with reverse clutch.

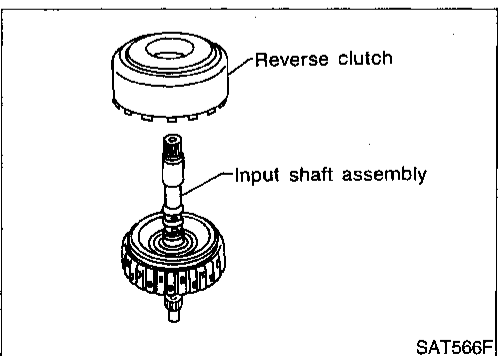


b. Remove input shaft assembly (high clutch) from reverse clutch.


DISASSEMBLY

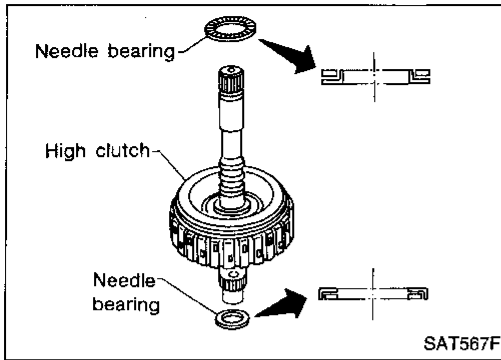


- c. Remove needle bearings from high clutch drum and check for damage or wear.

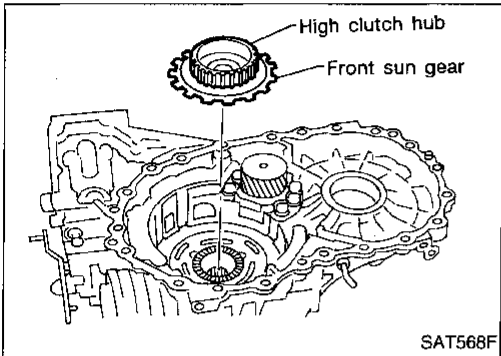


- d. Remove high clutch hub and front sun gear from transmission case.

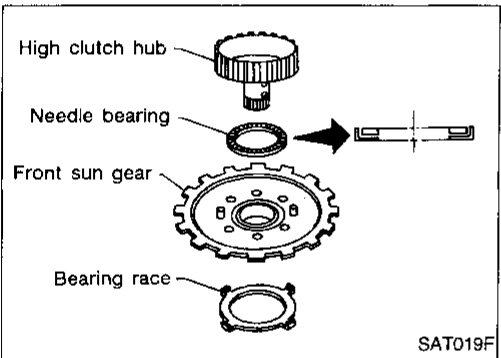

- e. Remove front sun gear and needle bearing from high clutch hub and check for damage or wear.
 f. Remove bearing race from front sun gear and check for damage or wear.

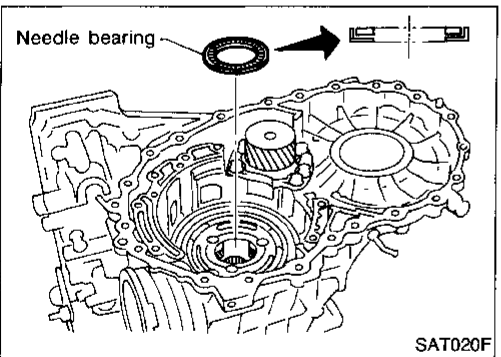

30. Remove needle bearing from transmission case and check for damage or wear.

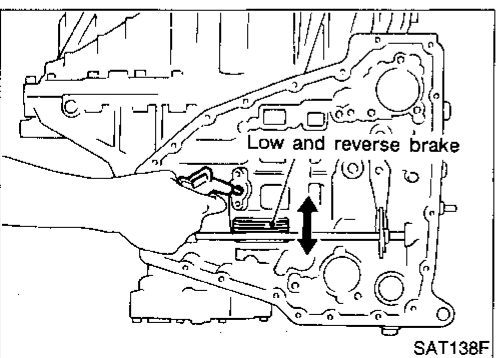

31. Apply compressed air and check to see that low and reverse brake operates.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST


BF

HA


EL

IDX


DISASSEMBLY

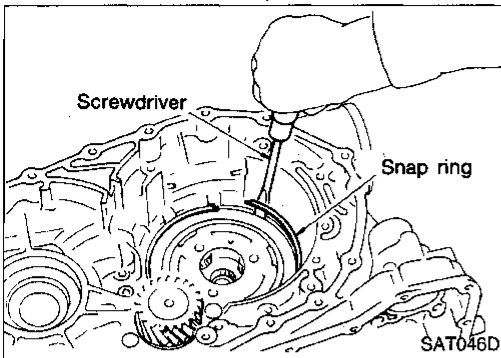


32. Remove low one-way clutch and front planetary carrier assembly according to the following procedures.
- Remove snap ring with flat-bladed screwdriver.

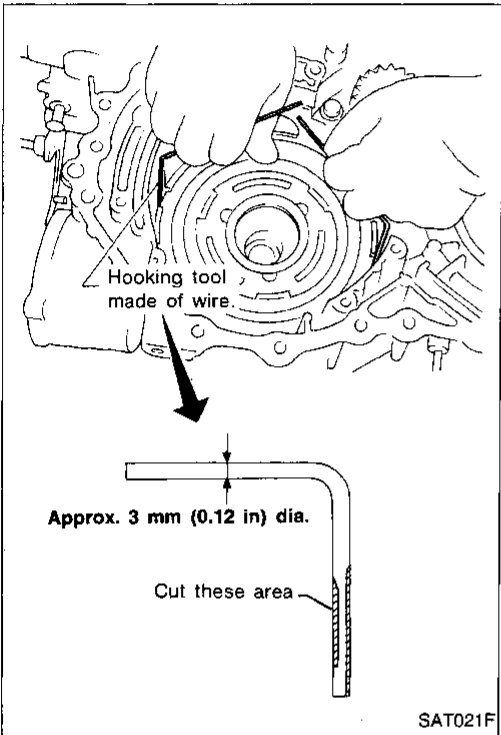

- Remove low one way clutch with a hook made of wire.

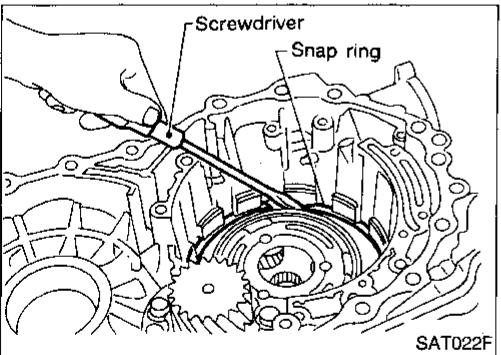


- Remove snap ring with flat-bladed screwdriver.

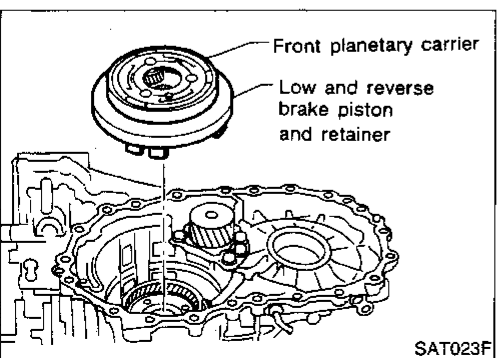


- Remove front planetary carrier with low and reverse brake piston and retainer.


DISASSEMBLY

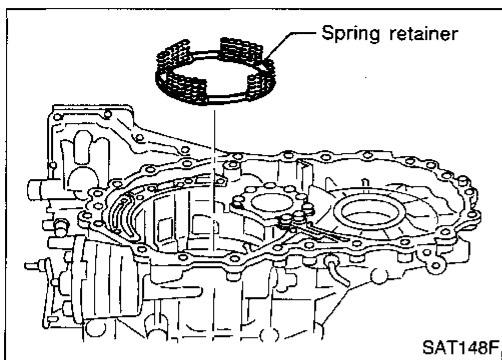


- e. Remove low and reverse brake spring retainer.
- **Do not remove return springs from spring retainer.**

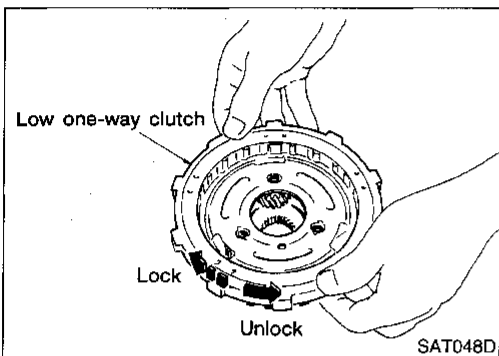

- f. Check that low one-way clutch rotates in the direction of the arrow and locks in the opposite direction.

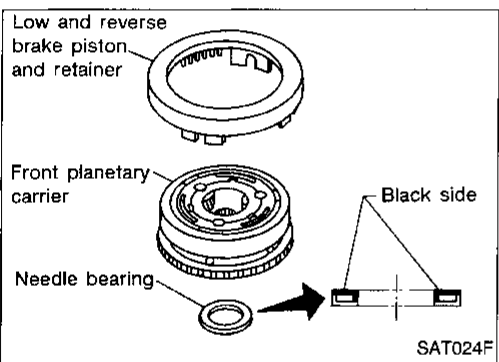

- g. Remove needle bearing, low and reverse brake piston and retainer from front planetary carrier.

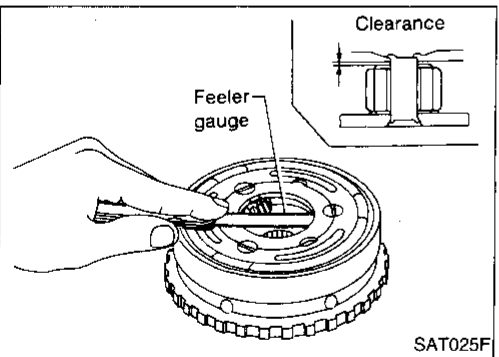

- h. Check front planetary carrier, low one-way clutch and needle bearing for damage or wear.
- i. Check clearance between planetary gears and planetary carrier with feeler gauge.


Standard clearance:

0.20 - 0.70 mm (0.0079 - 0.0276 in)

Allowable limit:


0.80 mm (0.0315 in)

Replace front planetary carrier if the clearance exceeds allowable limit.

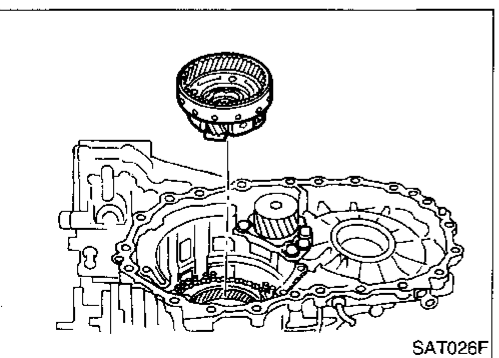


- 33. Remove rear planetary carrier assembly and rear sun gear according to the following procedures.
- a. Remove rear planetary carrier assembly from transmission case.


DISASSEMBLY

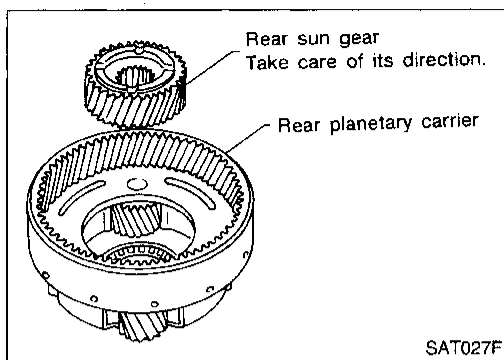

b. Remove rear sun gear from rear planetary carrier.

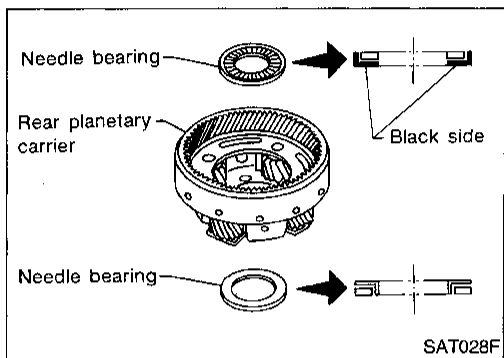

c. Remove needle bearings from rear planetary carrier assembly.

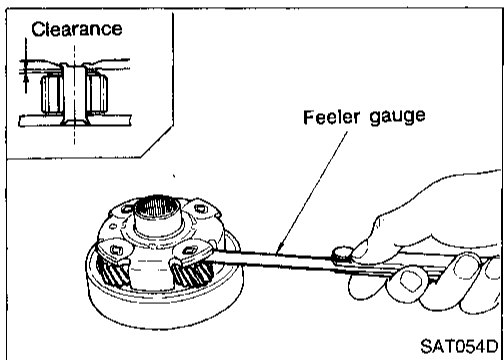

d. Check rear planetary carrier, rear sun gear and needle bearings for damage or wear.

e. Check clearance between pinion washer and rear planetary carrier with feeler gauge.


Standard clearance:

0.20 - 0.70 mm (0.0079 - 0.0276 in)


Allowable limit:

0.80 mm (0.0315 in)

Replace rear planetary carrier if the clearance exceeds allowable limit.

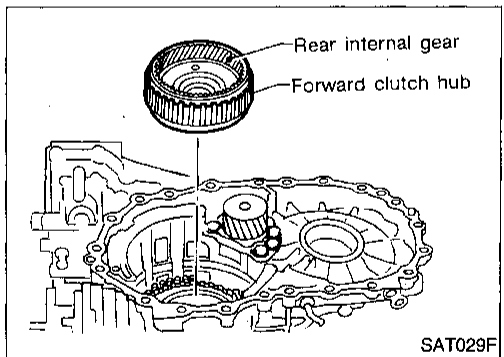


34. Remove rear internal gear and forward clutch hub from transmission case.

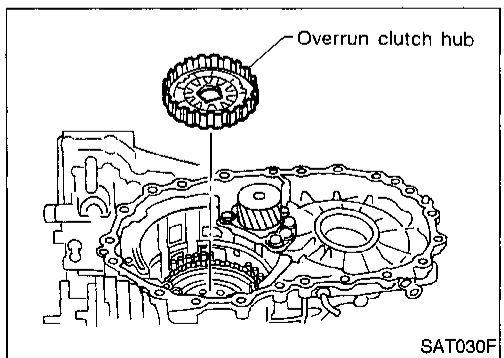


35. Remove overrun clutch hub from transmission case.


DISASSEMBLY

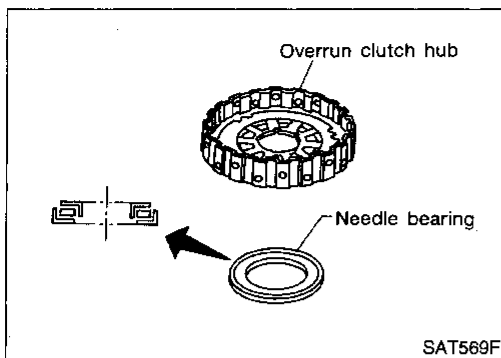


36. Remove needle bearing from overrun clutch hub and check for damage or wear.

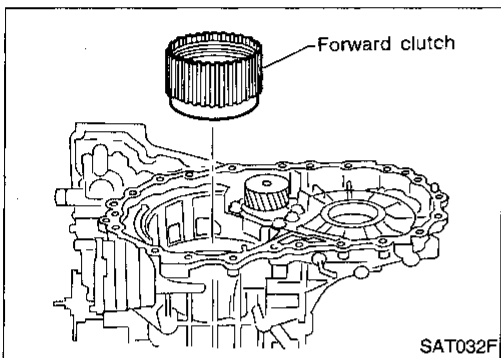

37. Remove forward clutch assembly from transmission case.

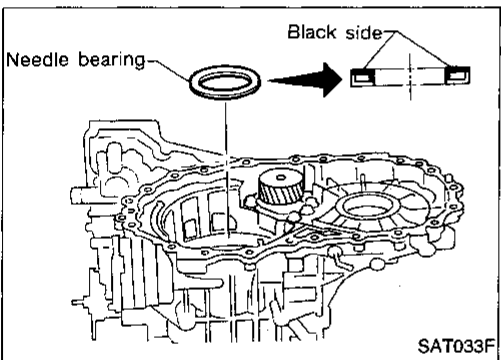


38. Remove needle bearing from transmission case.

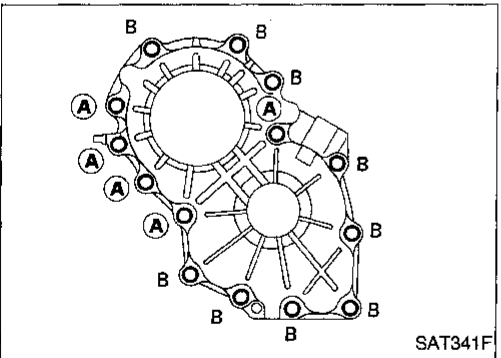

39. Remove output shaft assembly according to the following procedures.

a. Remove side cover bolts.

- Do not mix bolts (A) and (B).
- Always replace bolts (A) as they are self-sealing bolts.

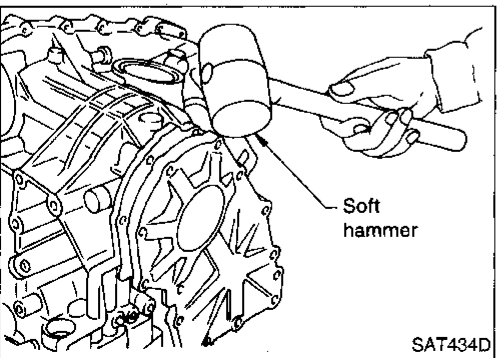

b. Remove side cover by lightly tapping it with a soft hammer.

- Be careful not to drop output shaft assembly as output shaft assembly may be removed together with side cover.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST


BF

HA


EL

IDX


DISASSEMBLY

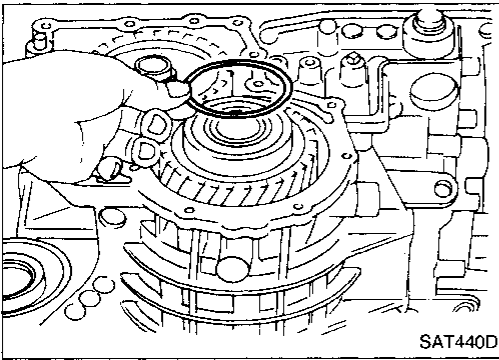


c. Remove adjusting shim.

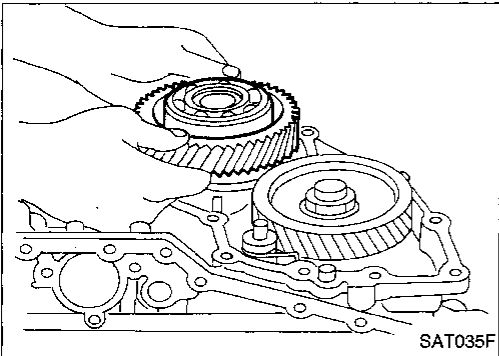


d. Remove output shaft assembly.

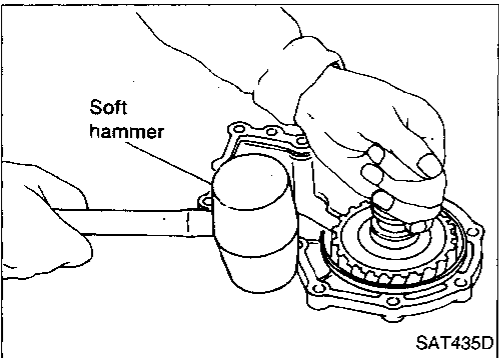

- If output shaft assembly was removed together with side cover, remove side cover by tapping it lightly with a soft hammer.

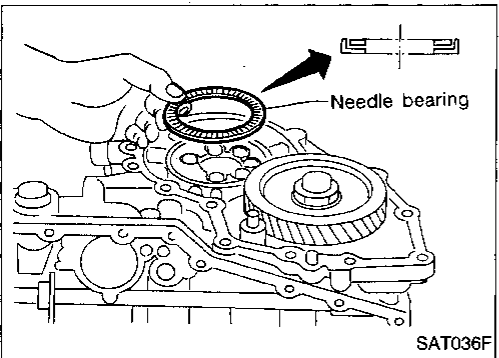


e. Remove needle bearing.

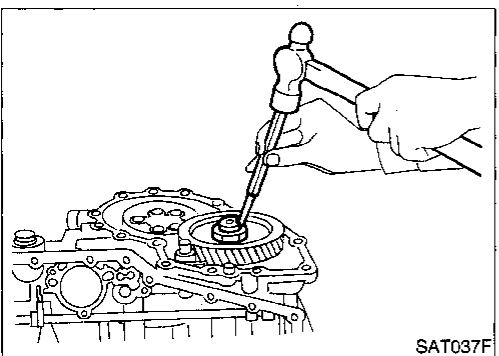


40. Disassemble reduction gear according to the following procedures.

- Set manual lever to position "P" to fix idler gear.
- Unlock idler gear lock nut using a pin punch.


DISASSEMBLY

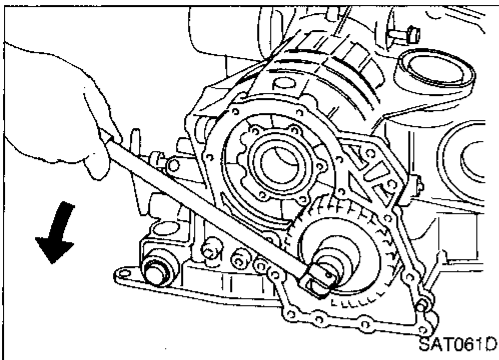


- c. Remove idler gear lock nut.
- **Do not reuse idler gear lock nut.**

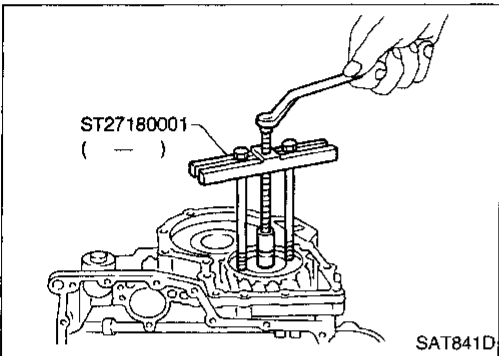


- d. Remove idler gear with puller.

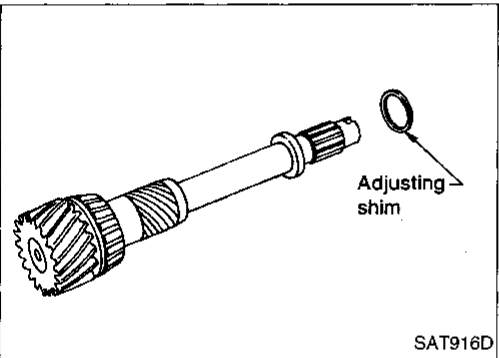

- e. Remove reduction gear.
- f. Remove adjusting shim from reduction gear.

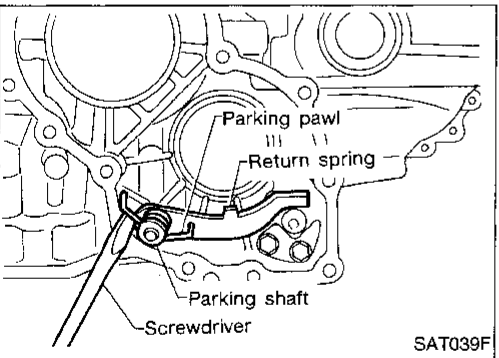

- 41. Remove return spring from parking shaft with screwdriver.
- 42. Draw out parking shaft and remove parking pawl from transmission case.
- 43. Check parking pawl and shaft for damage or wear.

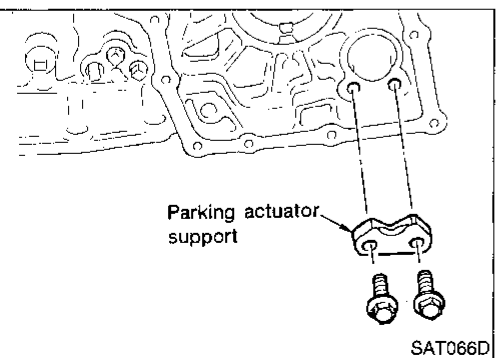

- 44. Remove parking actuator support from transmission case.
- 45. Check parking actuator support for damage or wear.

GI

MA

EM

LC

EF &
EC

FE

CL

NT

AT

FA

RA

BR

ST


BF

HA

EL


IDX

DISASSEMBLY

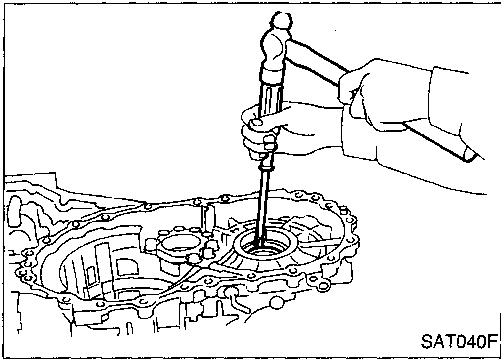

46. Remove side oil seal with screwdriver from transmission case.


Manual Shaft

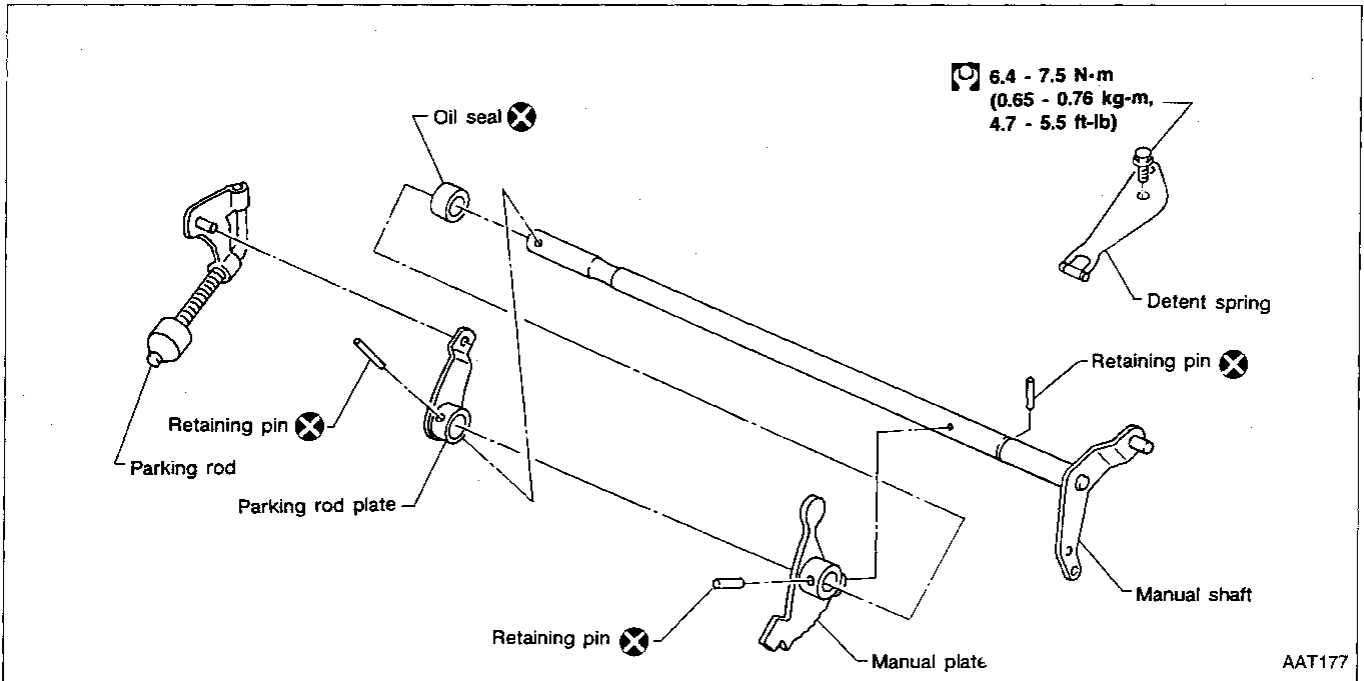


GI
MA
EM
LC
EF & EC
FE
CL
WT

REMOVAL


1. Remove detent spring from transmission case.

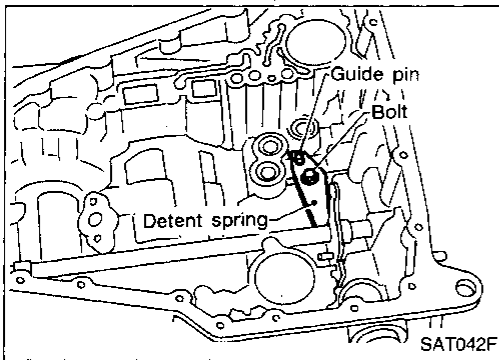

2. Drive out manual plate retaining pin.

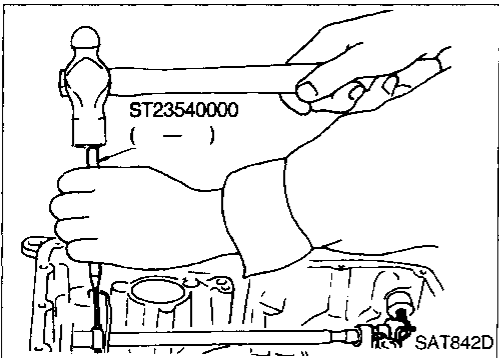


3. Drive and pull out parking rod plate retaining pin.
4. Remove parking rod plate from manual shaft.
5. Draw out parking rod from transmission case.

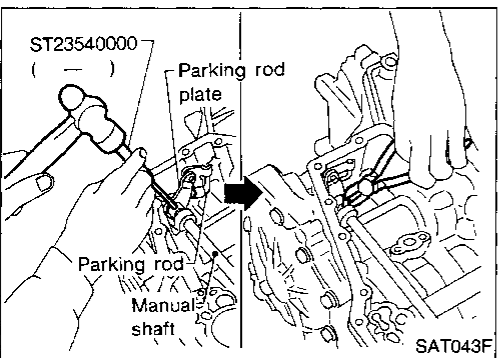


AT
FA
RA
BR
ST
BF
HA
EL
IDX

REPAIR FOR COMPONENT PARTS

Manual Shaft (Cont'd)

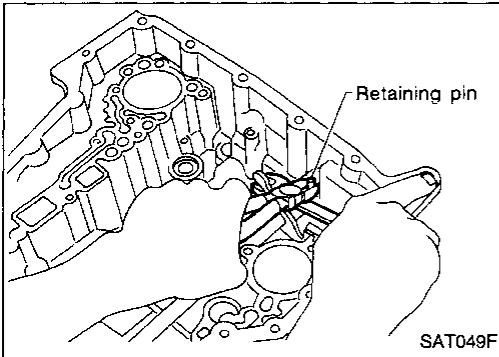


6. Pull out manual shaft retaining pin.
7. Remove manual shaft and manual plate from transmission case.

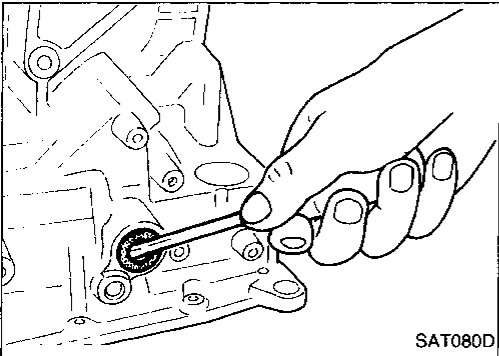

8. Remove manual shaft oil seal.


INSPECTION

- Check component parts for wear or damage. Replace if necessary.

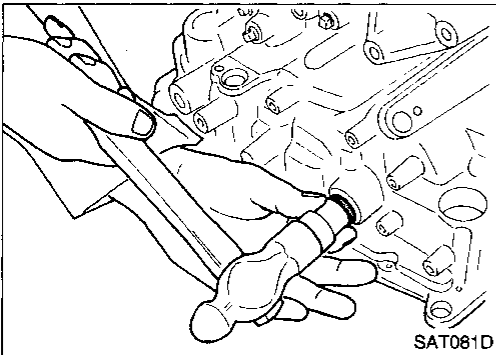

INSTALLATION


1. Install manual shaft oil seal.
- Apply ATF to outer surface of oil seal.

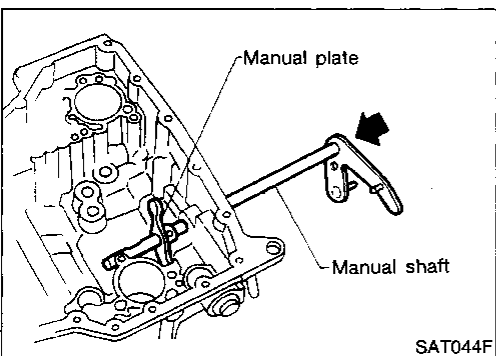


2. Install manual shaft and manual plate.

REPAIR FOR COMPONENT PARTS

Manual Shaft (Cont'd)

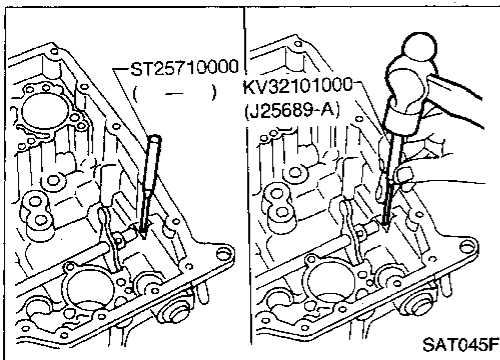


3. Align groove of manual shaft and hole of transmission case.
4. Install manual shaft retaining pin up to bottom of hole.

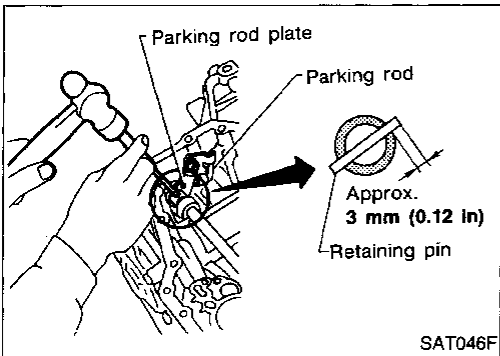


5. Install parking rod to parking rod plate.
6. Set parking rod assembly onto manual shaft and drive retaining pin.

Both ends of pin should protrude.

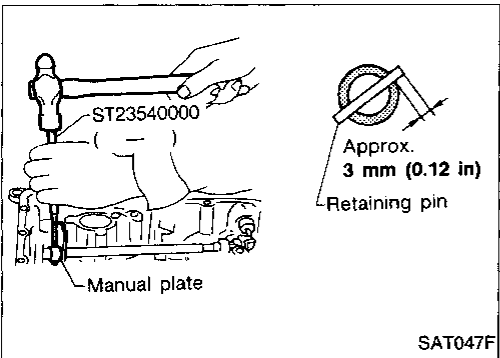

7. Drive manual plate retaining pin.

Both ends of pin should protrude.

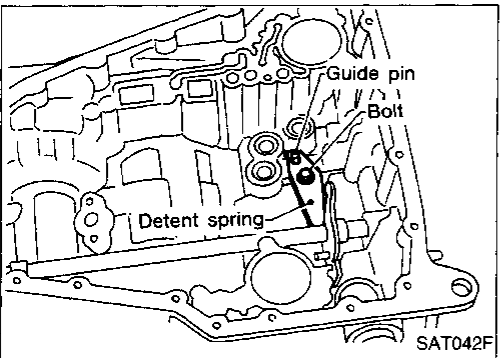

8. Install detent spring.

GI

MA

EM

LC

EF &

EC

FE

CL

MT

AT

FA

RA

BR

ST



BF

HA

EL


IDX

Oil Pump

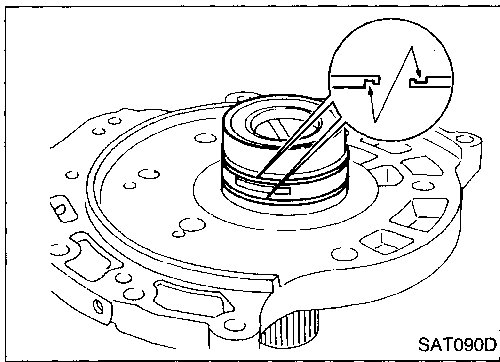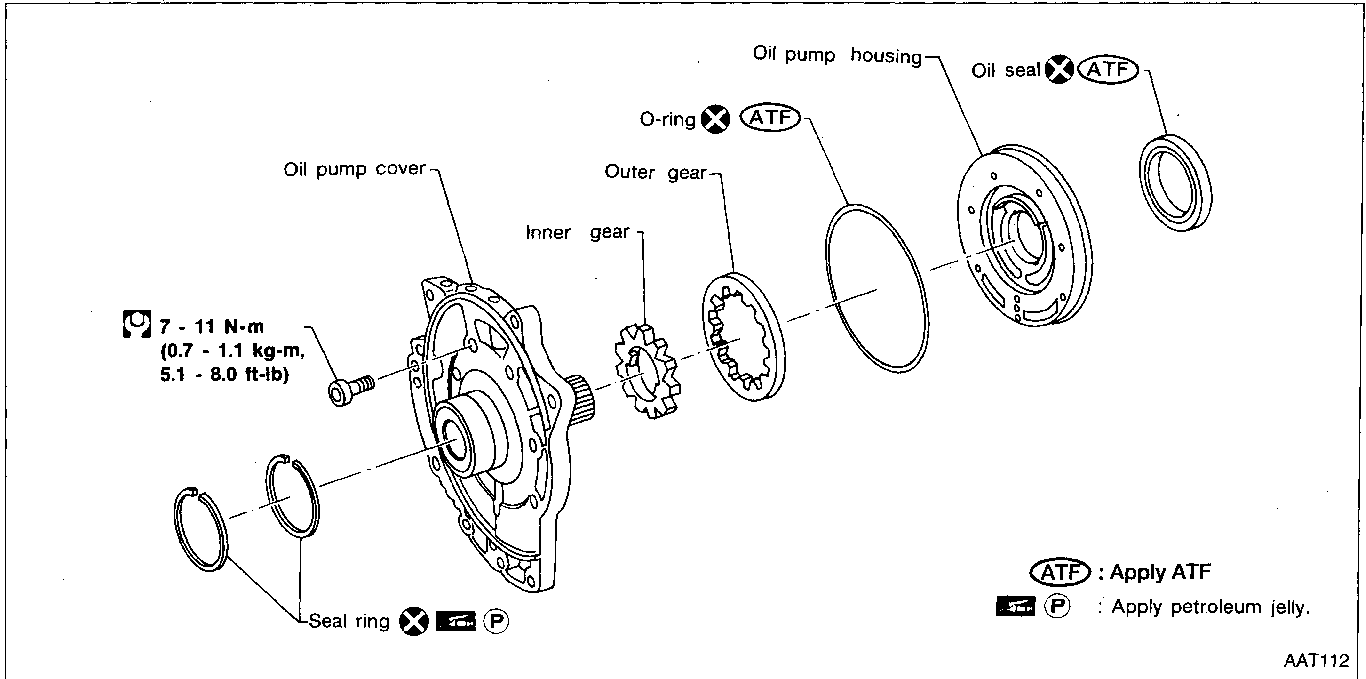


DISASSEMBLY

1. Remove seal rings by undoing hooks.

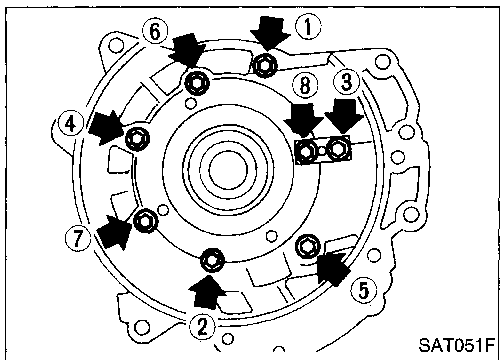

2. Loosen bolts in a crisscross pattern and remove oil pump cover.

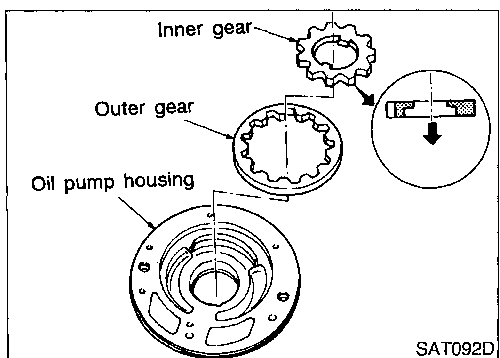


3. Remove inner and outer gear from oil pump housing.


REPAIR FOR COMPONENT PARTS

Oil Pump (Cont'd)

4. Remove O-ring from oil pump housing.

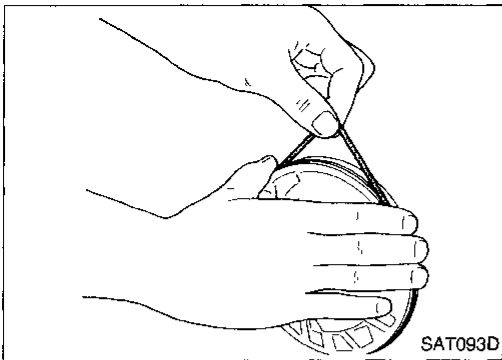

5. Remove oil pump housing oil seal.

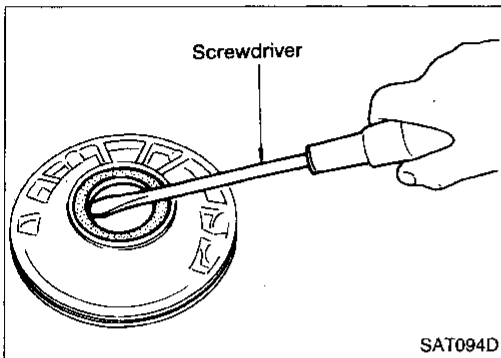

INSPECTION

Oil pump housing, oil pump cover, inner gear and outer gear

- Check for wear or damage.

GI
MA
EM
LC
EF &
EC
FE
CL
MT

AT

FA

RA

BR


ST

BF

HA

EL

IDX

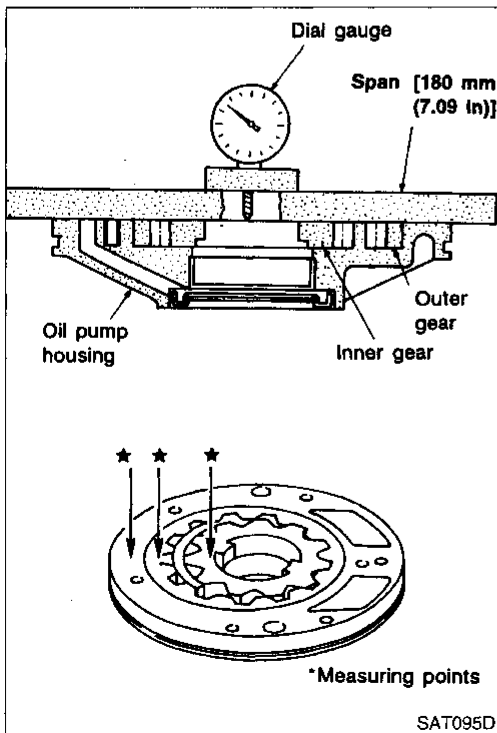

Side clearance

- Measure side clearance between end of oil pump housing and inner and outer gears in at least four places along their circumferences. Maximum measured values should be within specified ranges.

Standard clearance:

0.030 - 0.050 mm (0.0012 - 0.0020 in)

- If clearance is less than standard, select inner and outer gear as a set so that clearance is within specifications.


Inner and outer gear:

Refer to AT-225.

- If clearance is more than standard, replace whole oil pump assembly except oil pump cover.

REPAIR FOR COMPONENT PARTS

Oil Pump (Cont'd)

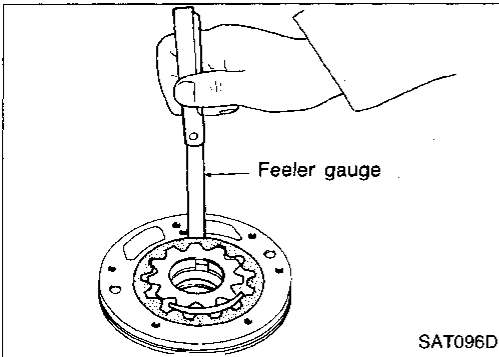

- Measure clearance between outer gear and oil pump housing.


Standard clearance:

0.111 - 0.181 mm (0.0044 - 0.0071 in)

Allowable limit:

0.181 mm (0.0071 in)

- If not within allowable limit, replace whole oil pump assembly except oil pump cover.

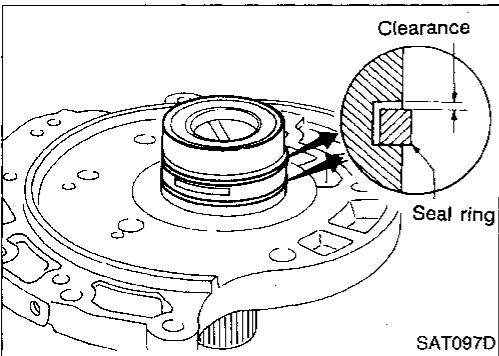

Seal ring clearance

- Measure clearance between seal ring and ring groove.


Standard clearance:

0.036 - 0.176 mm (0.0014 - 0.0069 in)

Allowable limit:


0.176 mm (0.0069 in)

- If not within allowable limit, replace oil pump cover assembly.

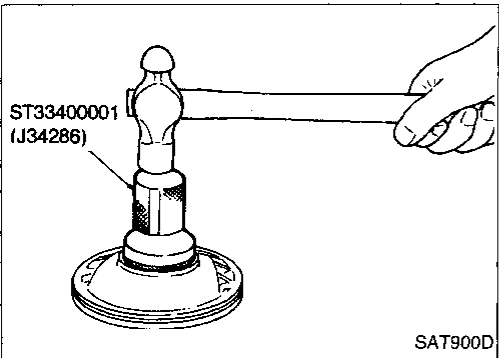


ASSEMBLY

1. Install oil seal on oil pump housing.

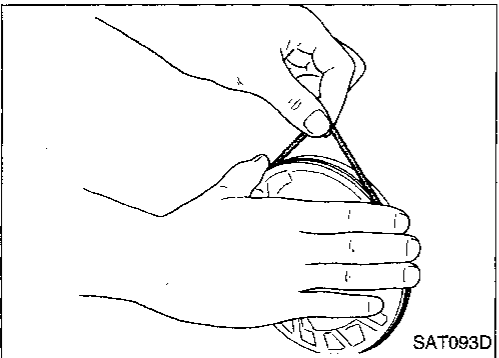

2. Install O-ring on oil pump housing.

- **Apply ATF to O-ring.**

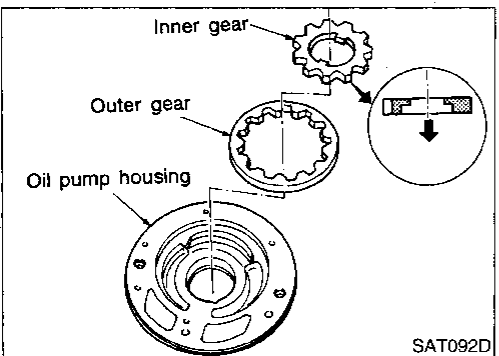


3. Install inner and outer gears on oil pump housing.

- **Be careful of direction of inner gear.**


REPAIR FOR COMPONENT PARTS

Oil Pump (Cont'd)

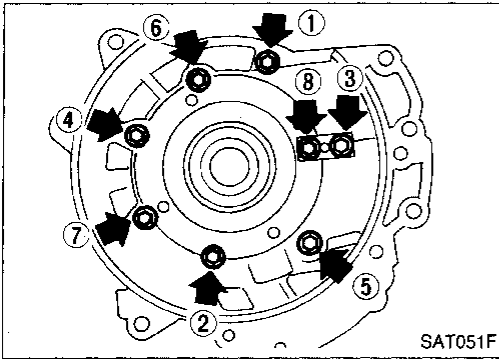

4. Install oil pump cover on oil pump housing.
 - a. Wrap masking tape around splines of oil pump cover assembly to protect seal. Position oil pump cover assembly on oil pump housing assembly, then remove masking tape.
 - b. Tighten bolts in a crisscross pattern.

GI
MA
EM

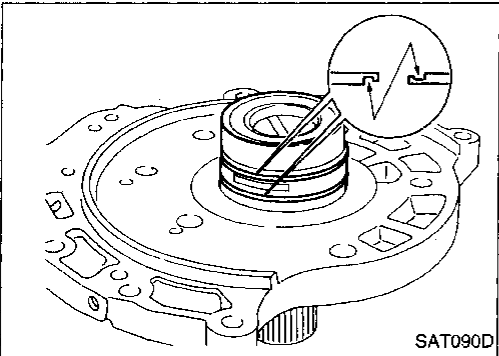


5. Install new seal rings carefully after packing ring groove with petroleum jelly and attach hooks.
 - **Do not spread gap of seal ring excessively while installing. The ring may be deformed.**

LC
EF &
EC
FE
CL
MT

AT

FA
RA
BR
ST
BF
HA
EL
IDX

Control Valve Assembly

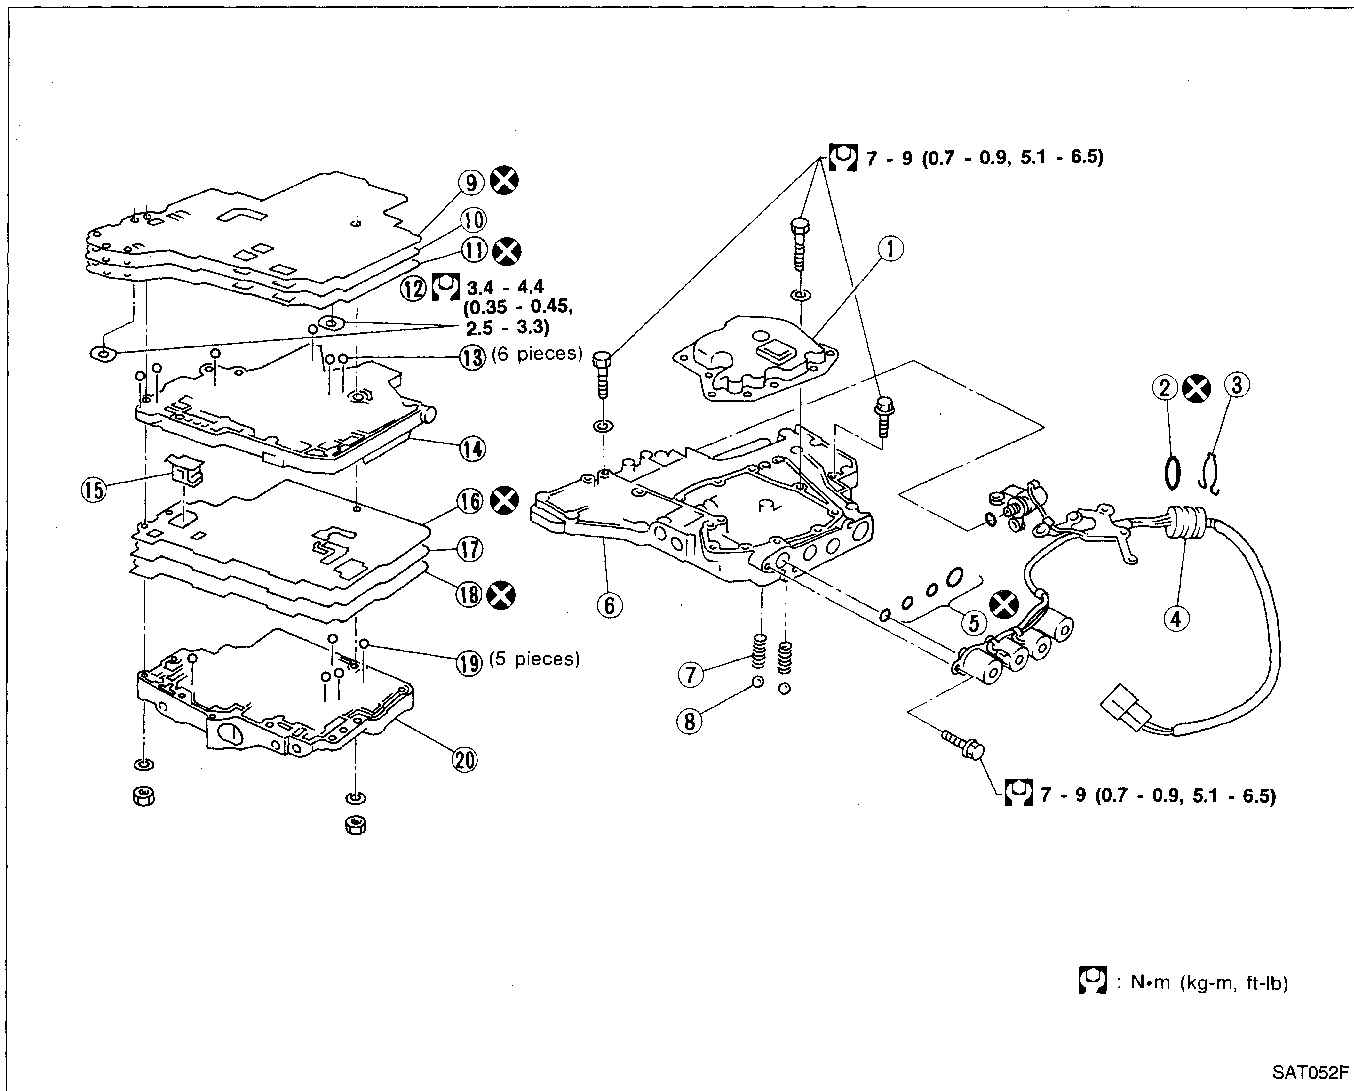

- | | | |
|----------------------------------|---------------------------------|---------------------------------|
| ① Oil strainer | ⑧ Check ball | ⑮ Pilot filter |
| ② O-ring | ⑨ Lower separating gasket | ⑯ Upper inter separating gasket |
| ③ Clamp | ⑩ Separating plate | ⑰ Separating plate |
| ④ Terminal body | ⑪ Lower inter separating gasket | ⑱ Upper separating gasket |
| ⑤ O-rings | ⑫ Support plate | ⑲ Steel ball |
| ⑥ Control valve lower body | ⑬ Steel ball | ⑳ Control valve upper body |
| ⑦ Oil cooler relief valve spring | ⑭ Control valve inter body | |

DISASSEMBLY

Disassemble upper, inter and lower bodies.



Bolt length, number and location:

Bolt symbol	a	b	c	d	e	f
Bolt length "l" mm (in)	13.5 (0.531)	58.0 (2.283)	40.0 (1.575)	66.0 (2.598)	33.0 (1.299)	78.0 (3.071)
Number of bolts	6	3	6	11	2	2


f: Reamer bolt and nut.

REPAIR FOR COMPONENT PARTS


Control Valve Assembly (Cont'd)

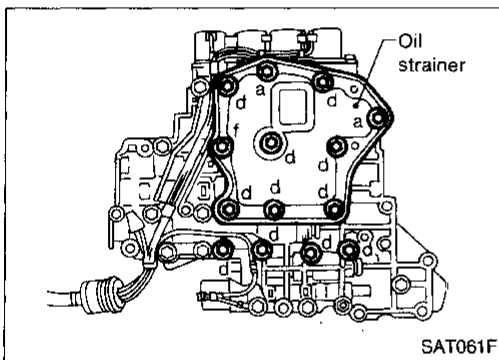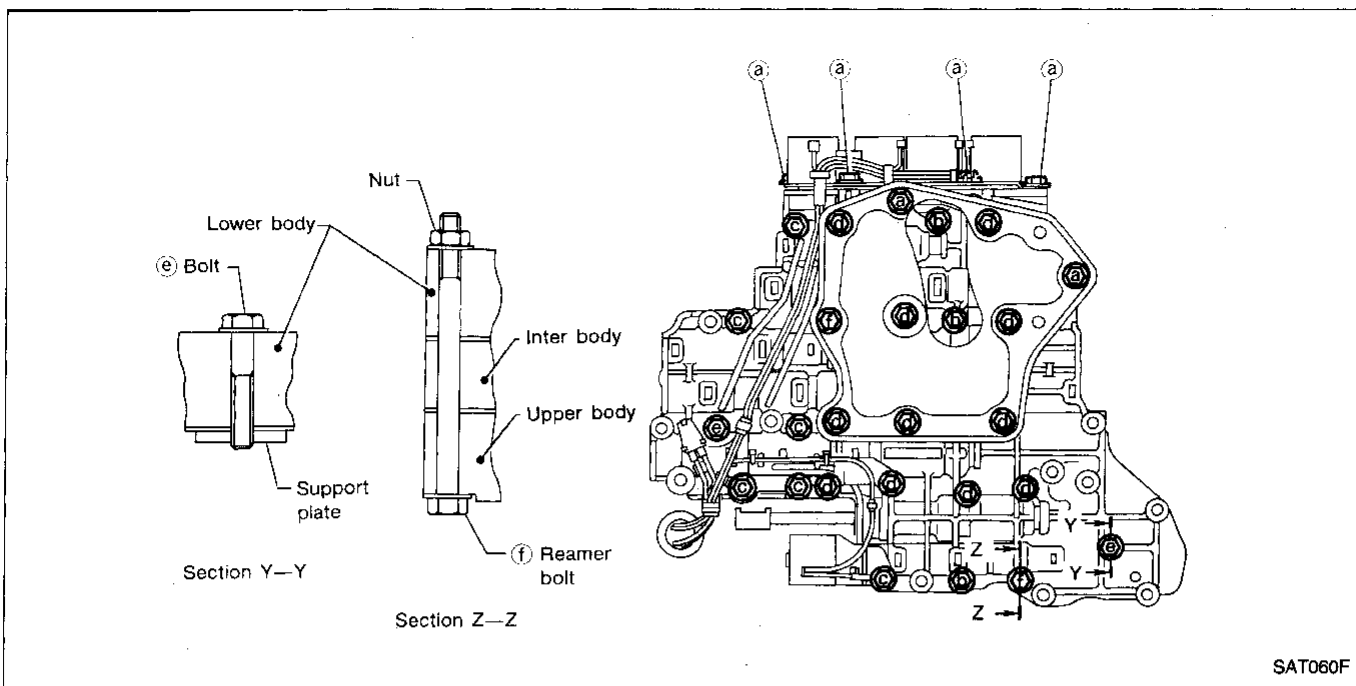

- a. Remove bolts (a), (d) and nut (f) and remove oil strainer from control valve assembly.

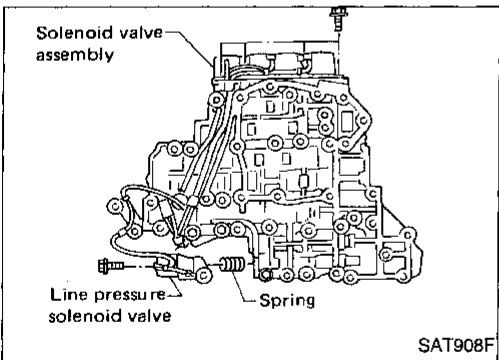


- b. Remove solenoid valve assembly and line pressure solenoid valve from control valve assembly.

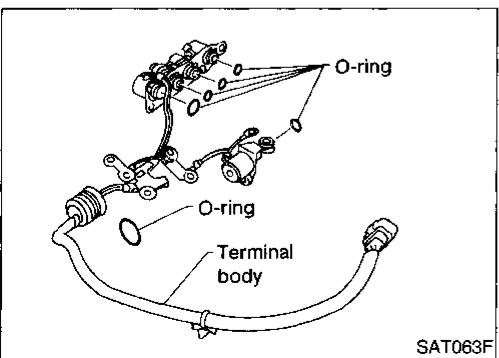


- c. Remove O-rings from solenoid valves and terminal body.

REPAIR FOR COMPONENT PARTS


Control Valve Assembly (Cont'd)

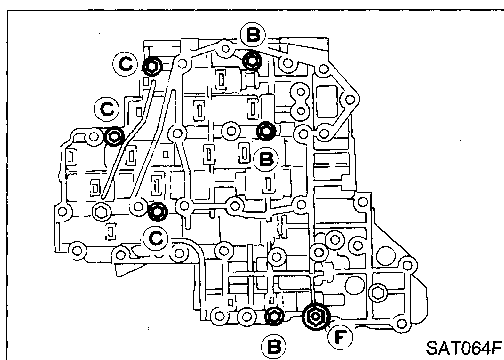


- d. Place upper body facedown, and remove bolts (b), (c) and nut (f).

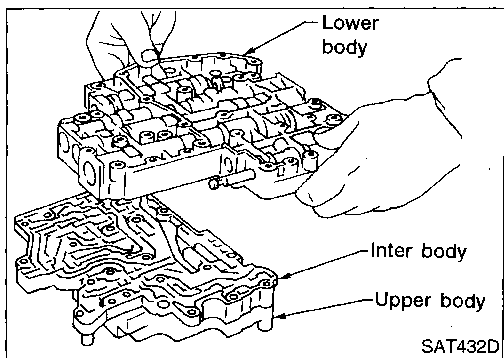


- e. Remove inter body from lower body.

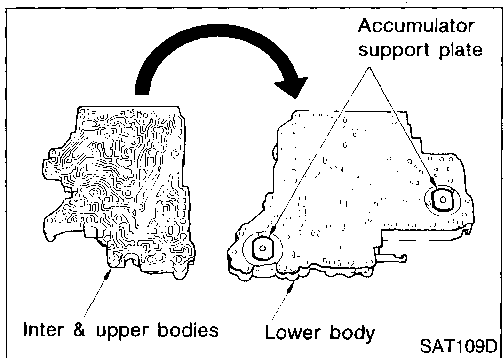

- f. Turn over lower body, and remove accumulator support plate.

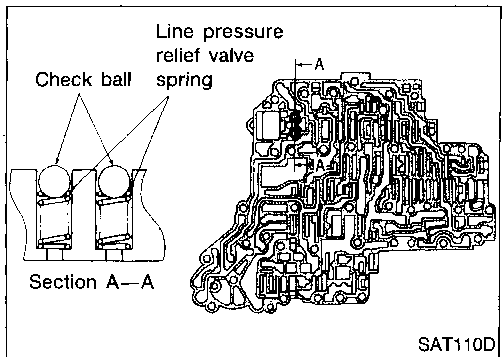


- g. Remove bolts (e), separating plate and separating gasket from lower body.
 h. Remove steel balls and relief valve springs from lower body.
 • **Be careful not to lose steel balls and relief valve springs.**

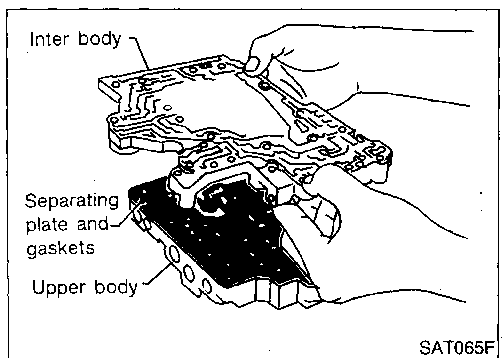


- i. Remove inter body from upper body.

REPAIR FOR COMPONENT PARTS


Control Valve Assembly (Cont'd)

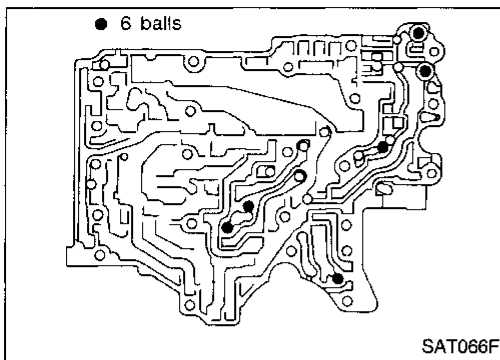

- j. Check to see that steel balls are properly positioned in inter body and then remove them from inter body.
- **Be careful not to lose steel balls.**

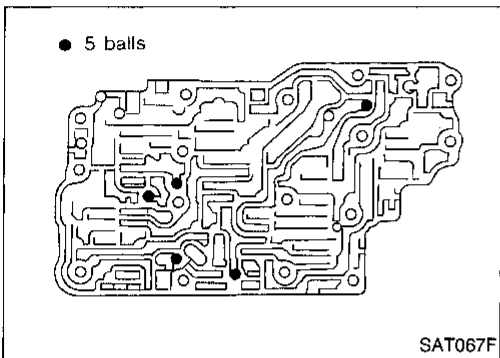


- k. Check to see that steel balls are properly positioned in upper body and then remove them from upper body.
- **Be careful not to lose steel balls.**

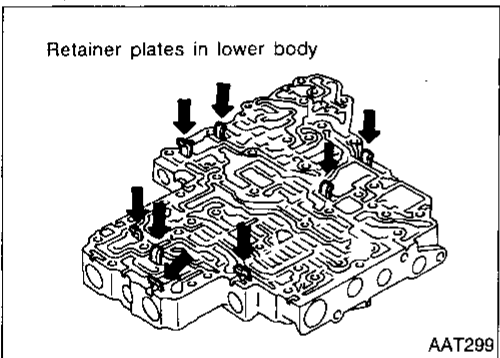


INSPECTION

Lower and upper bodies

- Check to see that retainer plates are properly positioned in lower body.

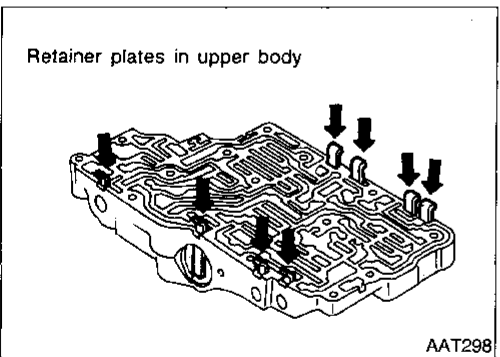

- Check to see that retainer plates are properly positioned in upper body.
- **Be careful not to lose these parts.**

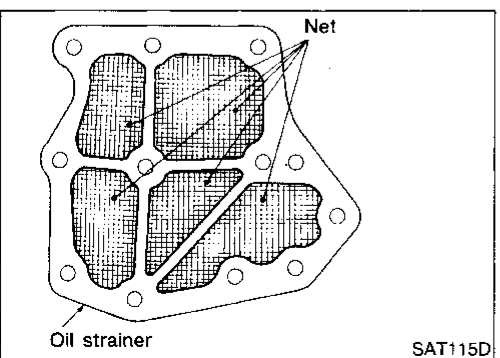

Oil strainer

- Check wire netting of oil strainer for damage.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL



IDX

REPAIR FOR COMPONENT PARTS

Control Valve Assembly (Cont'd)

Shift solenoid valve A and B, line pressure solenoid valve, torque converter clutch solenoid valve and overrun clutch solenoid valve.

- Measure resistance — Refer to AT-90.

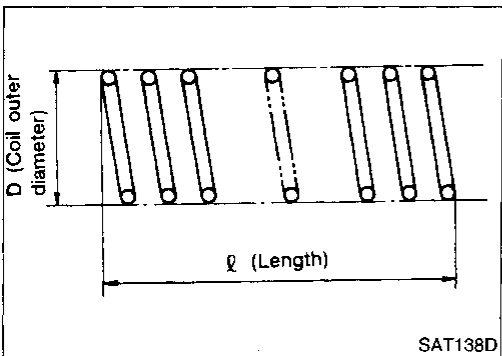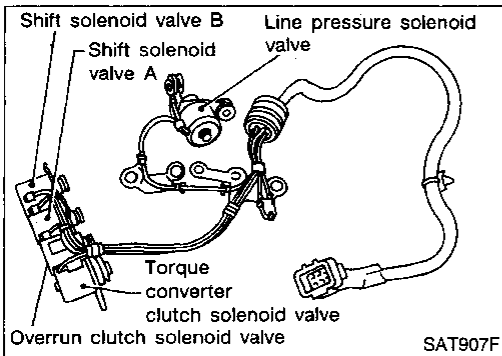


Oil cooler relief valve spring.

- Check springs for damage or deformation.
- Measure free length and outer diameter

Inspection standard:


Unit: mm (in)

Part No.	l	D
31872-31X00	17.02 (0.6701)	8.0 (0.315)

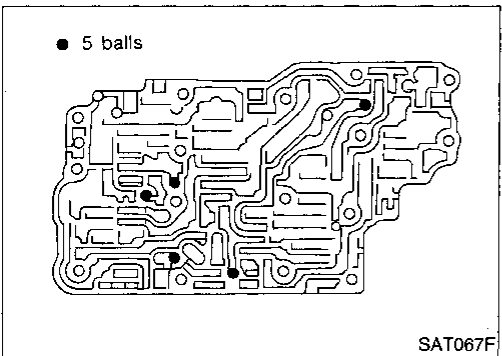


ASSEMBLY

1. Install upper, inter and lower body.
 - a. Place oil circuit of upper body face up. Install steel balls in their proper positions.

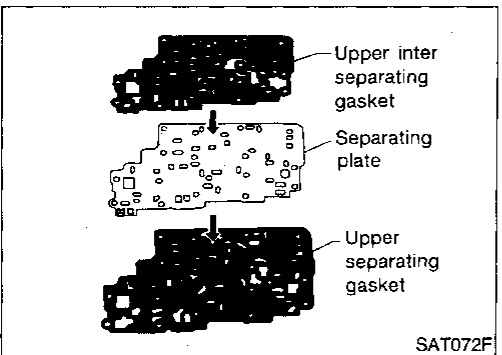


- b. Install upper separating gasket, upper inter separating gasket and upper separating plate in order shown in illustration.

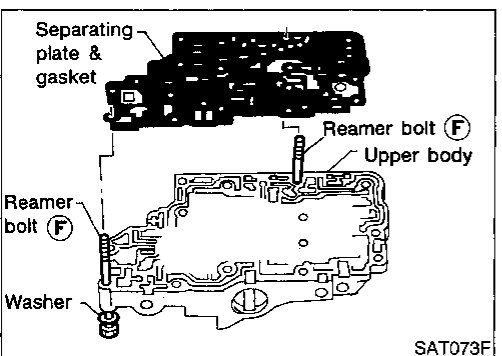


- c. Install reamer bolts (F) from bottom of upper body and install separating gaskets and separating plate as a set on upper body using reamer bolts as guides.

REPAIR FOR COMPONENT PARTS


Control Valve Assembly (Cont'd)

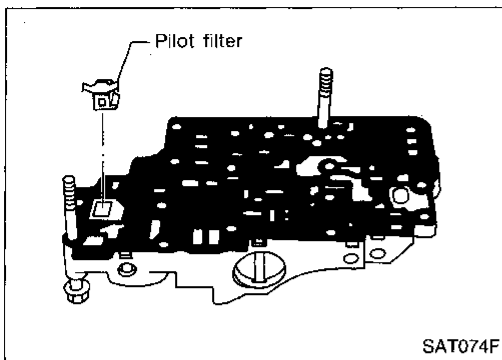

d. Install pilot filter.

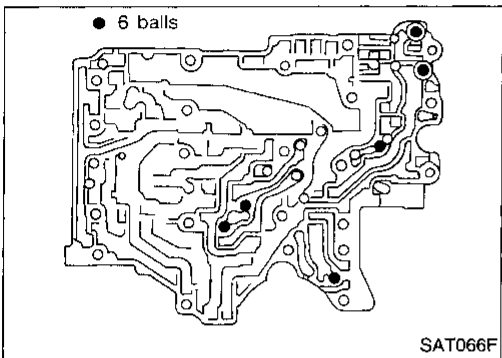


e. Place lower body as shown in illustration (side of inter body face up). Install steel balls in their proper positions.

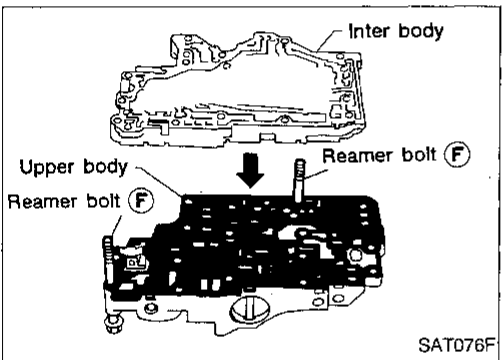


f. Install inter body on upper body using reamer bolts (f) as guides.

● **Be careful not to dislocate or drop steel balls.**

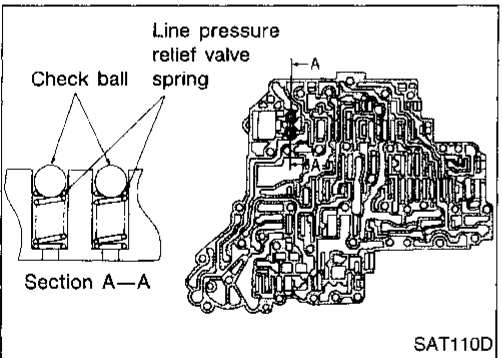

g. Install steel balls and relief valve springs in their proper positions in lower body.

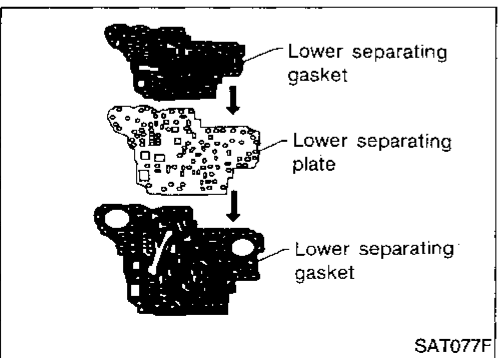

h. Install lower separating gasket, inter separating gasket and lower separating plate in order shown in illustration.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF




HA

EL

IDX

REPAIR FOR COMPONENT PARTS

Control Valve Assembly (Cont'd)

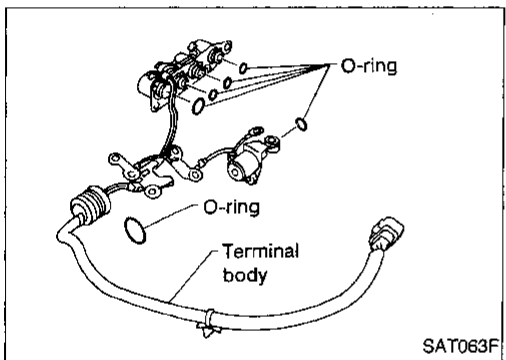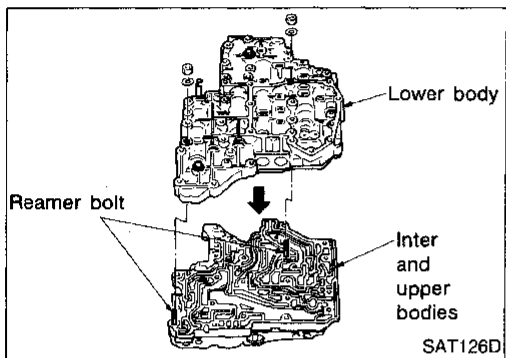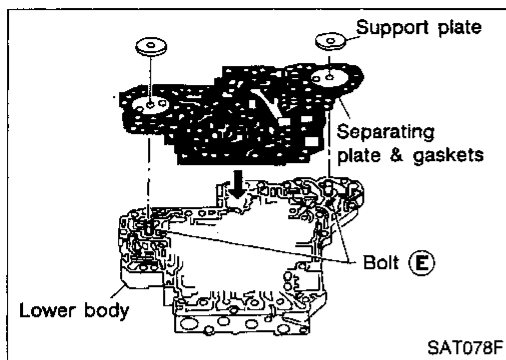

- i. Install bolts (e) from bottom of lower body and install separating gaskets and separating plate as a set on lower body using bolts (e) as guides.
- j. Temporarily install support plates on lower body.

- k. Install lower body on inter body using reamer bolts (f) as guides and tighten reamer bolts (f) slightly.

2. Install O-rings to solenoid valves and terminal body.
 - Apply ATF to O-rings.


3. Install and tighten bolts.

Bolt length, number and location:

Bolt symbol	a	b	c	d	e	f
Bolt length "f" mm (in)	13.5 (0.531)	58.0 (2.283)	40.0 (1.575)	66.0 (2.598)	33.0 (1.299)	78.0 (3.071)
Number of bolts	6	3	6	11	2	2

REPAIR FOR COMPONENT PARTS

Control Valve Assembly (Cont'd)

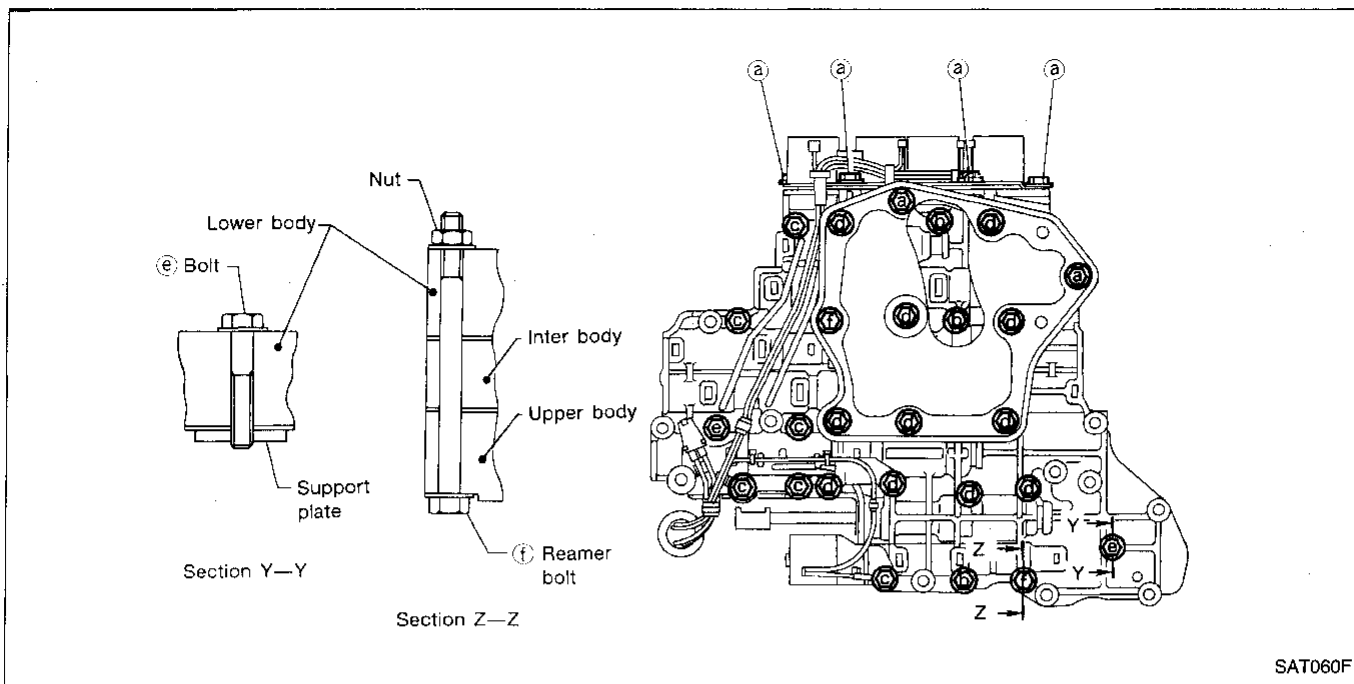

GI
MA
EM
LC
EF &
EC
FE
CL

MT

AT

FA

RA

BR


ST

BF


HA

EL


IDX

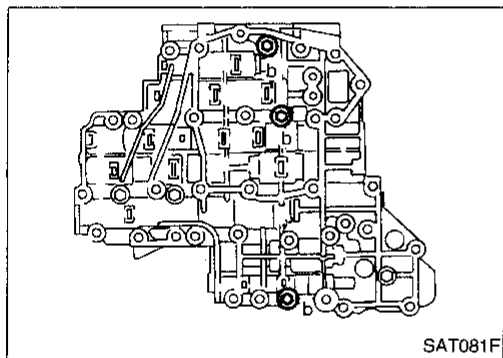

a. Install and tighten bolts (b) to specified torque.

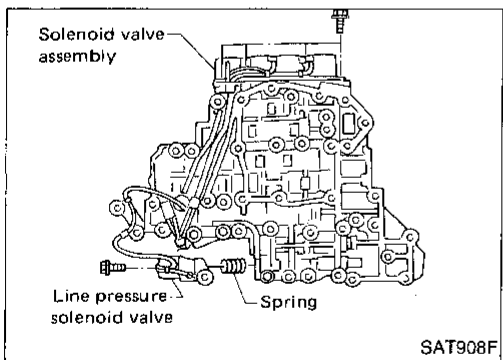

b. Install solenoid valve assembly and line pressure solenoid valve to lower body.

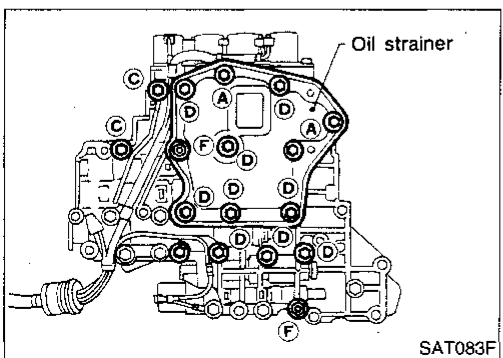


c. Set oil strainer, then tighten bolts (a), (c), (d) and nuts (f) to specified torque.


REPAIR FOR COMPONENT PARTS

Control Valve Assembly (Cont'd)

d. Tighten bolts ⑤ (2 pieces) to specified torque.

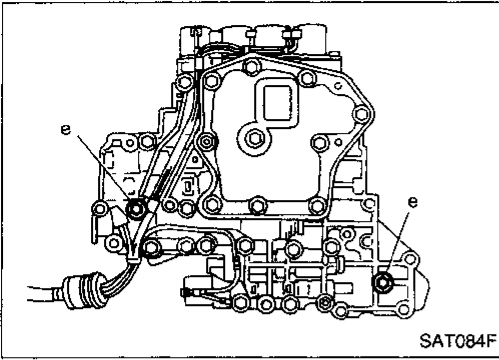

Control Valve Upper Body

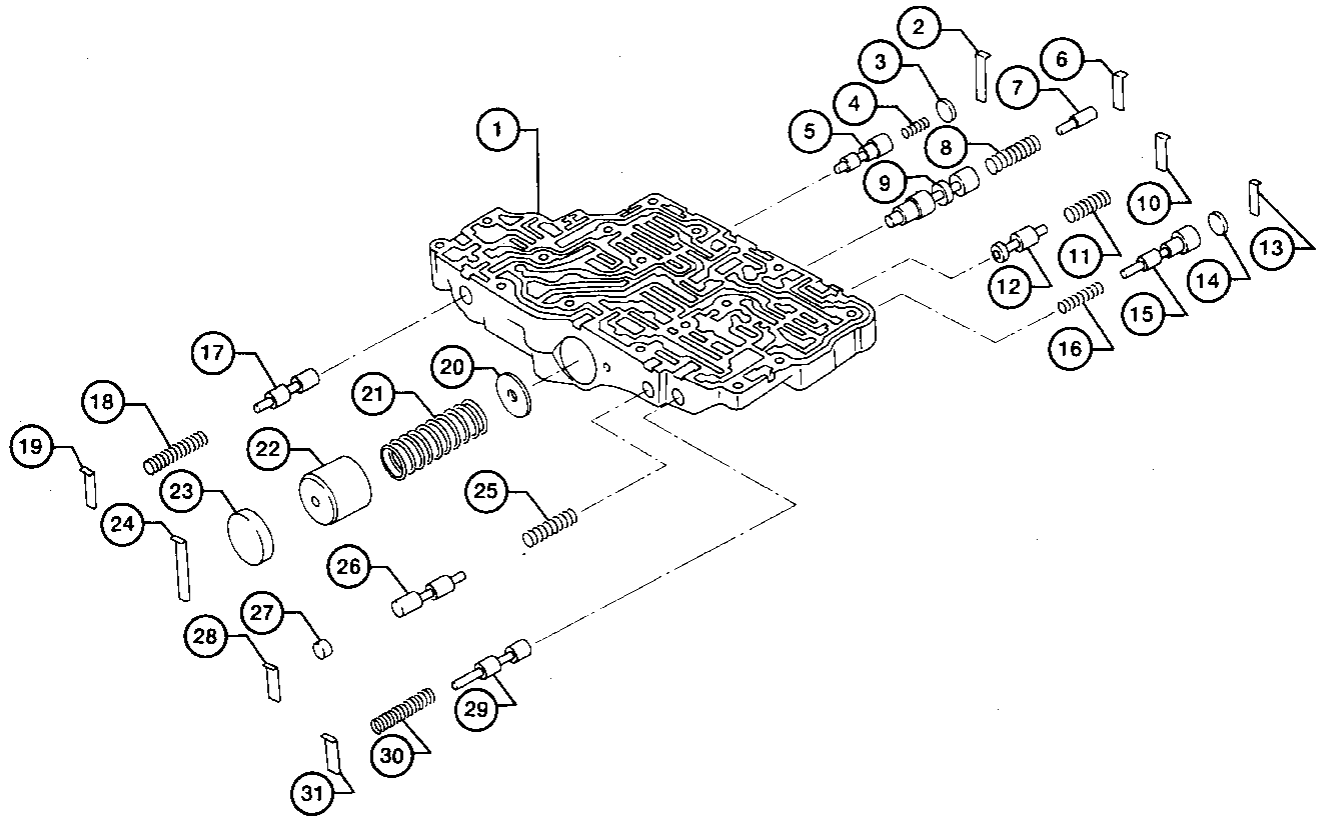

GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA


AAT300

- | | | |
|---|---------------------------------|----------------------------------|
| ① Upper body | ⑪ Return spring | ⑳ 1-2 accumulator retainer plate |
| ② Retainer plate | ⑫ Torque converter relief valve | ㉑ Return spring |
| ③ Plug | ⑬ Retainer plate | ㉒ 1-2 accumulator piston |
| ④ Return spring | ⑭ Plug | ㉓ Plug |
| ⑤ 1-2 accumulator valve | ⑮ Overrun clutch reducing valve | ㉔ Retainer plate |
| ⑥ Retainer plate | ⑯ Return spring | ㉕ Return spring |
| ⑦ Plug | ⑰ Pilot valve | ㉖ 1st reducing valve |
| ⑧ Return spring | ⑱ Return spring | ㉗ Plug |
| ⑨ Torque converter clutch control valve | ㉒ Retainer plate | ㉘ 2-3 timing valve |
| ⑩ Retainer plate | ㉓ Return spring | ㉙ Retainer plate |

REPAIR FOR COMPONENT PARTS


Control Valve Upper Body (Cont'd)

DISASSEMBLY

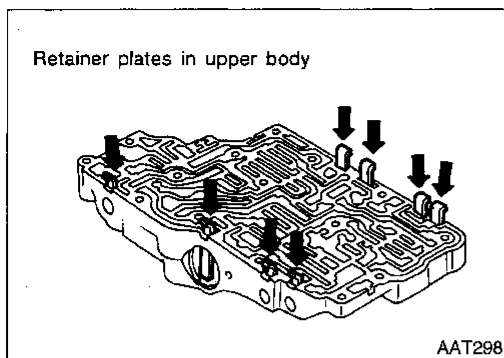


1. Remove valves at retainer plates.

- Do not use a magnetic "hand".

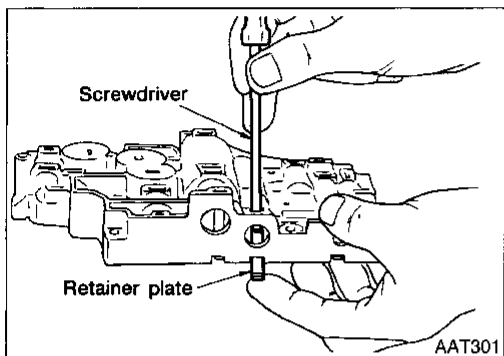


a. Use a screwdriver to pry out retainer plates.

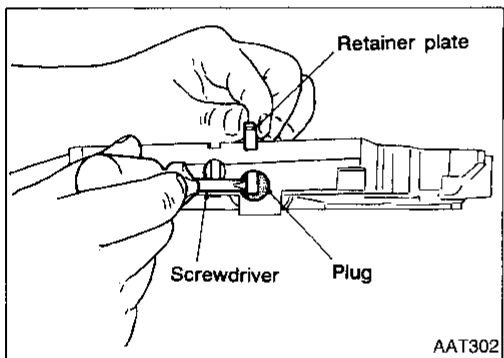

b. Remove retainer plates while holding spring, plugs or sleeves.

- Remove plugs slowly to prevent internal parts from jumping out.

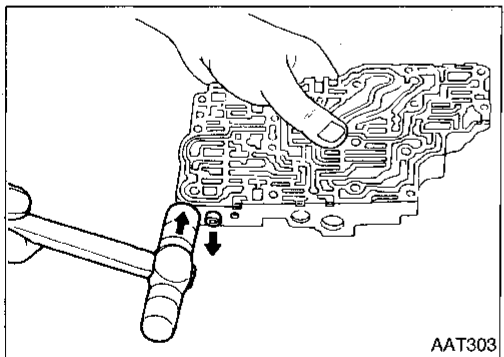

c. Place mating surface of valve body face down, and remove internal parts.

- If a valve is hard to remove, place valve body face down and lightly tap it with a soft hammer.
- Be careful not to drop or damage valves and sleeves.


REPAIR FOR COMPONENT PARTS

Control Valve Upper Body (Cont'd)

INSPECTION

Valve spring

- Measure free length and outer diameter of each valve spring. Also check for damage or deformation.
- Numbers of each valve spring listed in table below are the same as those in the figure on page AT-151.

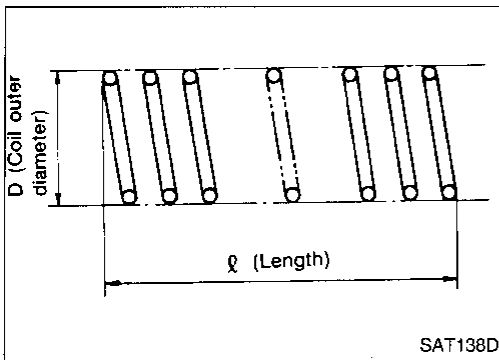

Inspection standard

Unit: mm (in)

	Parts	Item		
		Part No.	l	D
(18)	Pilot valve spring	31742 80x14	36.0 (1.417)	8.1 (0.319)
(4)	1-2 accumulator valve spring	31742 80x10	20.5 (0.807)	7.0 (0.276)
(21)	1-2 accumulator piston spring	31742 80x12	52.0 (2.047)	19.6 (0.772)
(25)	1st reducing valve spring	31742 80x05	27.0 (1.063)	7.0 (0.276)
(30)	2-3 timing valve spring	31742 80x18	30.5 (1.201)	6.6 (0.260)
(16)	Overrun clutch reducing valve spring	31742 80x15	37.5 (1.476)	6.9 (0.272)
(11)	Torque converter relief valve spring	31742 80x07	31.0 (1.220)	9.0 (0.354)
(8)	Torque converter clutch control valve spring	31742 80x17	39.5 (1.555)	11.0 (0.433)



- Replace valve springs if deformed or fatigued.

Control valves

- Check sliding surfaces of valves, sleeves and plugs.

ASSEMBLY


- Lay control valve body down when installing valves. Do not stand the control valve body upright.

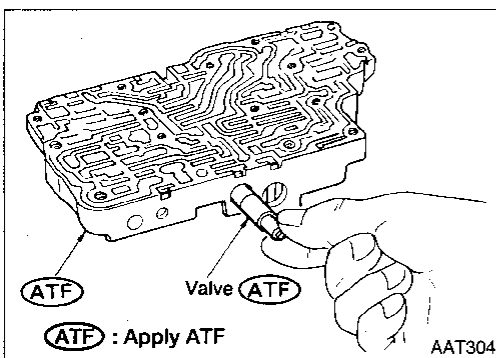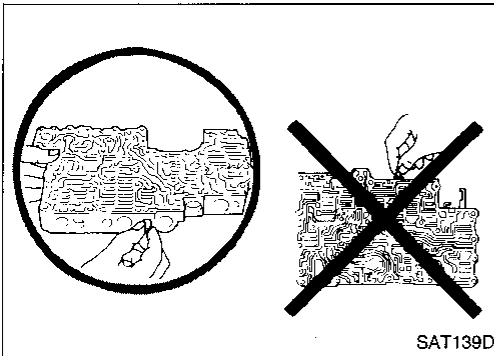


1. Lubricate the control valve body and all valves with ATF. Install control valves by sliding them carefully into their bores.
- Be careful not to scratch or damage valve body.

REPAIR FOR COMPONENT PARTS

Control Valve Upper Body (Cont'd)

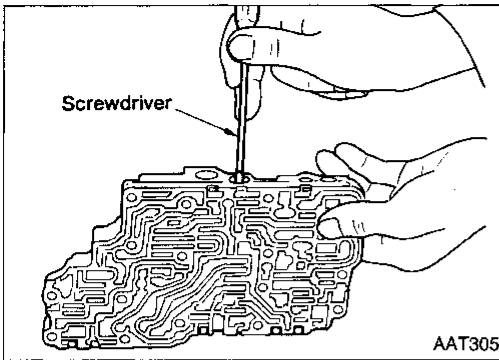


- Wrap a small screwdriver with vinyl tape and use it to insert the valves into their proper positions.

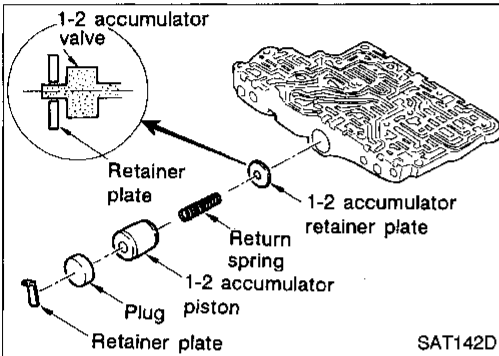


1-2 accumulator valve

- Install 1-2 accumulator valve and then align 1-2 accumulator retainer plate with 1-2 accumulator valve from opposite side of control valve body.
- Install return spring, 1-2 accumulator piston and plug.

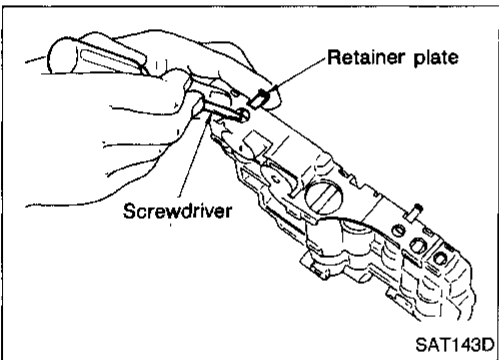

2. Install retainer plates
- Install retainer plate while pushing plug or return spring.

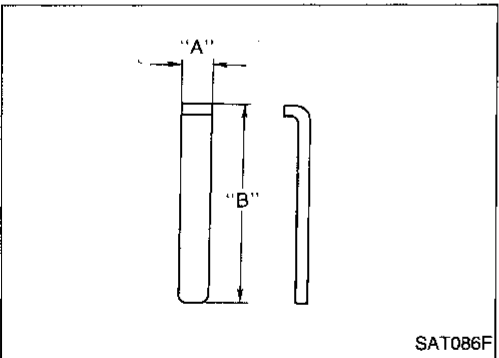


Retainer plate

Unit: mm (in)

Location of retainer plate	Length A	Length B
Pilot valve	6.0 (0.236)	21.5 (0.846)
1-2 accumulator valve		38.5 (1.516)
1-2 accumulator piston		
1st reducing valve		21.5 (0.846)
2-3 timing valve		
Overrun clutch reducing valve		24.0 (0.945)
Torque converter relief valve		21.5 (0.846)
Torque converter clutch control valve		28.0 (1.102)

- Install proper retainer plates.

Control Valve Lower Body

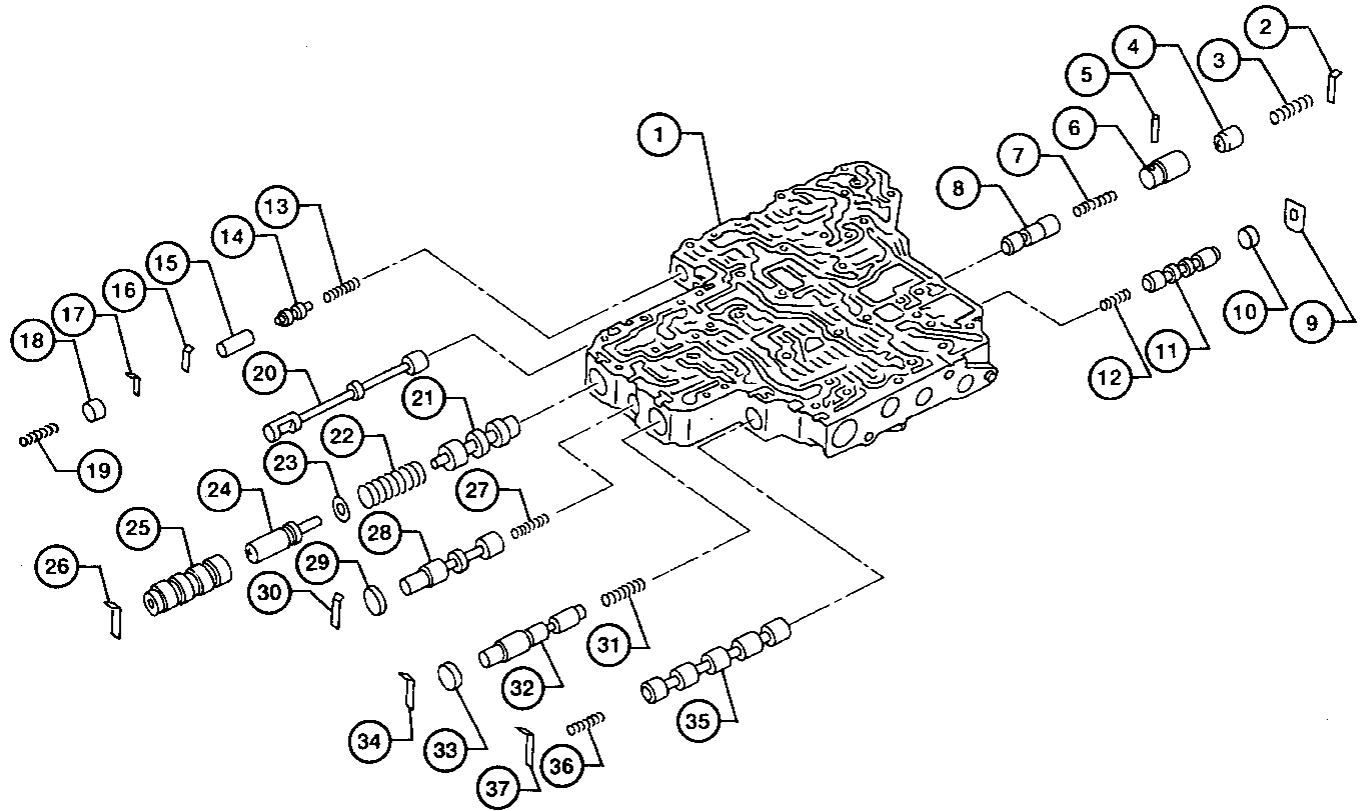

- | | | |
|---------------------------|----------------------------|--------------------------------|
| ① Lower body | ⑭ Accumulator shift valve | ⑳ Retainer plate |
| ② Retainer plate | ⑮ Plug | ㉑ Return spring |
| ③ Return spring | ⑯ Retainer plate | ㉒ Overran clutch control valve |
| ④ Piston | ⑰ Retainer plate | ㉓ Plug |
| ⑤ Parallel pin | ⑱ Plug | ㉔ Retainer plate |
| ⑥ Sleeve | ⑲ Return spring | ㉕ Return spring |
| ⑦ Return spring | ⑳ Manual valve | ㉖ Accumulator control valve |
| ⑧ Pressure modifier valve | ㉑ Pressure regulator valve | ㉗ Plug |
| ⑨ Retainer plate | ㉒ Return spring | ㉘ Retainer plate |
| ⑩ Plug | ㉓ Spring seat | ㉙ Shift valve A |
| ⑪ Shift valve B | ㉔ Plug | ㉚ Return spring |
| ⑫ Return spring | ㉕ Sleeve | ㉛ Retainer plate |
| ⑬ Return spring | | |

AAT306

GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX



REPAIR FOR COMPONENT PARTS

Control Valve Lower Body (Cont'd)

DISASSEMBLY

Remove valves at retainer plate.

For removal procedures, refer to AT-152.

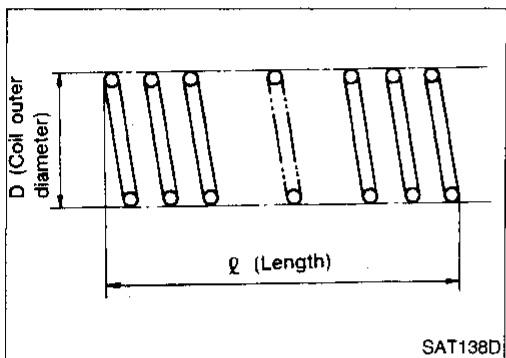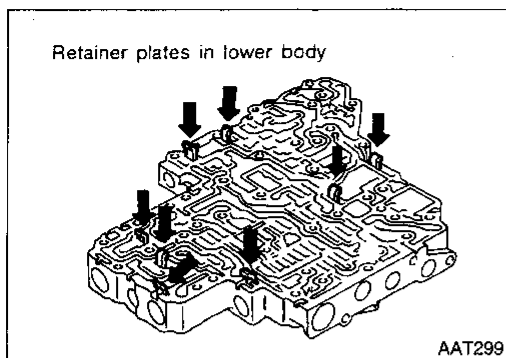

INSPECTION

Valve springs

- Check each valve spring for damage or deformation. Also measure free length and outer diameter.
- Numbers for each valve spring listed in the table below are the same as those in the figure on page AT-155.

Inspection standard

Unit: mm (in)

	Parts	Item		
		Part No.	l	D
⑬	Accumulator shift valve spring	31736 01X00	23.0 (0.906)	6.65 (0.2618)
⑲	Line pressure solenoid valve spring	31742 80X11	17.0 (0.669)	10.7 (0.421)
⑳	Pressure regulator valve spring	31742 80X13	45.0 (1.772)	15.0 (0.591)
㉓	Overrun clutch control valve spring	31762 80X00	21.7 (0.854)	7.0 (0.276)
㉔	Accumulator control valve spring	31742 80X02	22.0 (0.866)	6.5 (0.256)
㉖	Shift valve A spring	31762 80X00	21.7 (0.854)	7.0 (0.276)
㉗	Shift valve B spring	31762 80X00	21.7 (0.854)	7.0 (0.276)
③	Pressure modifier valve spring	31742 41X15	30.5 (1.201)	9.8 (0.386)
⑦		31742 80X16	32.0 (1.260)	6.9 (0.272)


- Replace valve springs if deformed or fatigued.

Control valves

- Check sliding surfaces of control valves, sleeves and plugs for damage.

ASSEMBLY


- Install control valves.
For installation procedures, refer to AT-153.

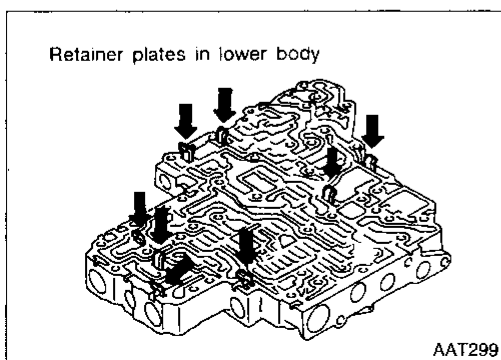

REPAIR FOR COMPONENT PARTS

Control Valve Lower Body (Cont'd)

Retainer plate

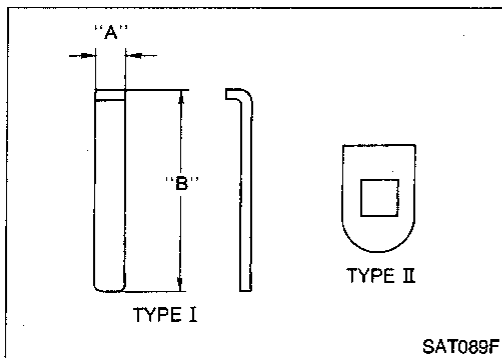





Unit: mm (in)

Location of retainer plate	Length A	Length B	Type
Accumulator shift valve	6.0 (0.236)	19.5 (0.768)	I
Pressure regulator valve			
Pressure clutch control			
Accumulator control valve			
Shift valve A		28.0 (1.102)	
Overrun clutch control valve			
Pressure modifier valve			
Shift valve B	—	—	II

- Install proper retainer plates

GI
MA
EM
LC
EF &
EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

Reverse Clutch

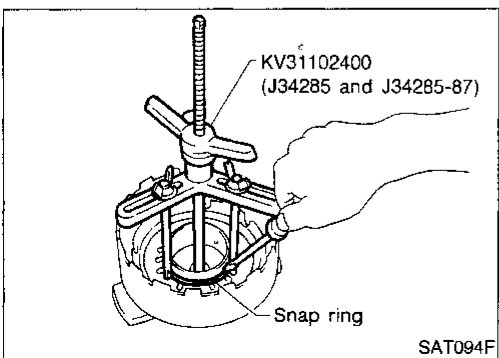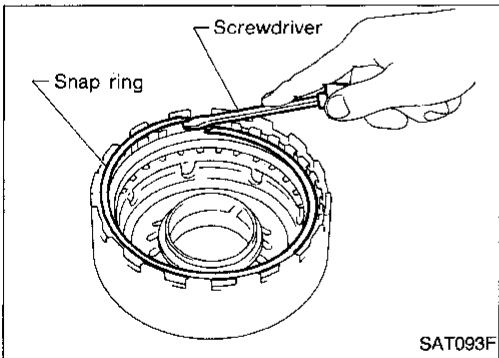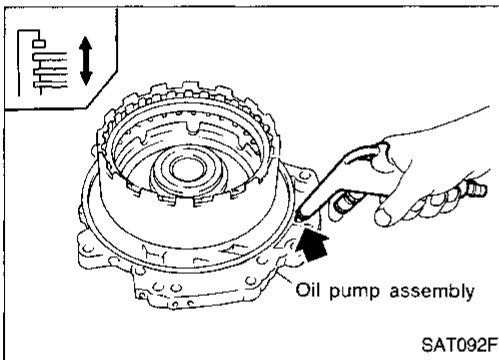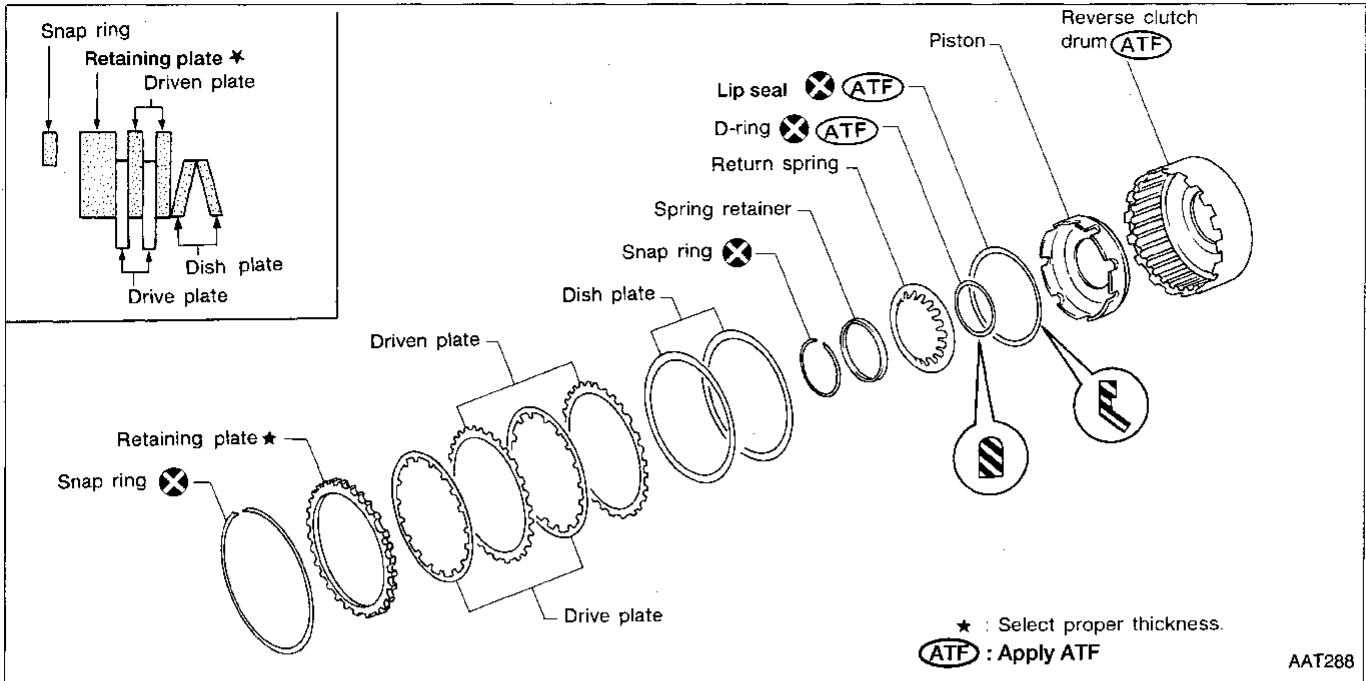


DISASSEMBLY

1. Check operation of reverse clutch
 - a. Install seal ring onto drum support of oil pump cover and install reverse clutch assembly. Apply compressed air to oil hole.
 - b. Check to see that retaining plate moves to snap ring.
 - c. If retaining plate does not move to snap ring, D-ring or oil seal may be damaged or fluid may be leaking at piston check ball.
2. Remove snap ring.
3. Remove drive plates, driven plates, retaining plate, and dish plates.
4. Set Tool on spring retainer and remove snap ring from reverse clutch drum while compressing return springs.
 - **Set Tool directly over springs.**
 - **Do not expand snap ring excessively.**
5. Remove spring retainer and return springs.

REPAIR FOR COMPONENT PARTS

Reverse Clutch (Cont'd)

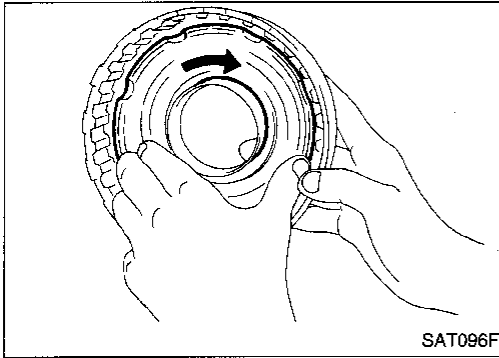

6. Remove piston from reverse clutch drum by turning it.
7. Remove D-ring and lip seal from piston.

INSPECTION

Reverse clutch snap ring, spring retainer and return springs

- Check for deformation, fatigue or damage. If necessary, replace.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR


ST

BF

HA

EL

IDX

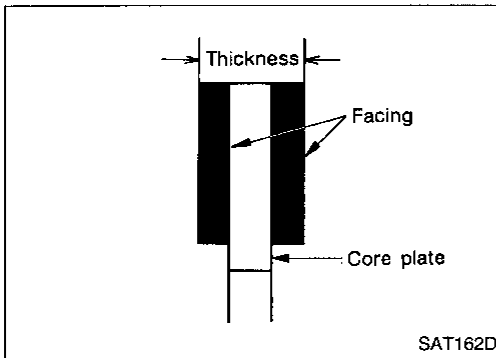

Reverse clutch drive plates


- Check facing for burns, cracks or damage.
- Measure thickness of facing.

Thickness of drive plate:

Standard value: 1.6 mm (0.063 in)

Wear limit: 1.4 mm (0.055 in)

- If not within wear limit, replace.

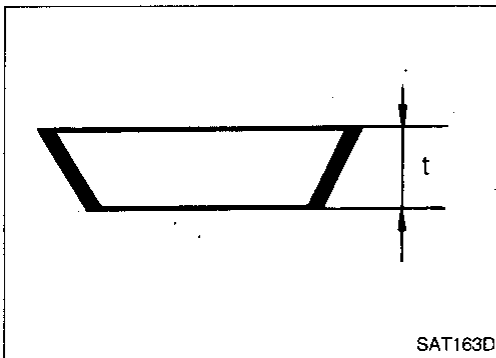

Reverse clutch dish plates

- Check for deformation or damage.
- Measure thickness of dish plate.

Thickness of dish plate: 3.08 mm (0.1213 in)

- If deformed or fatigued, replace.






Reverse clutch piston

- Make sure that check balls are not fixed.
- Apply compressed air to check ball oil hole opposite the return spring to make sure that there is no air leakage.
- Apply compressed air to oil hole on return spring side to make sure that air leaks past ball.

REPAIR FOR COMPONENT PARTS

Reverse Clutch (Cont'd)

ASSEMBLY

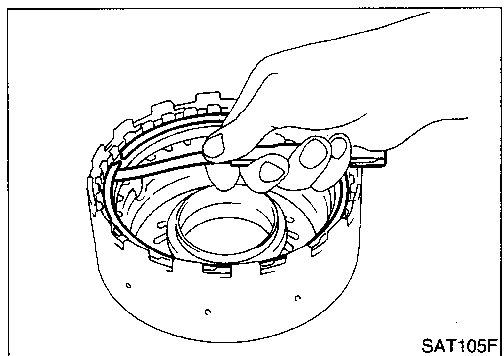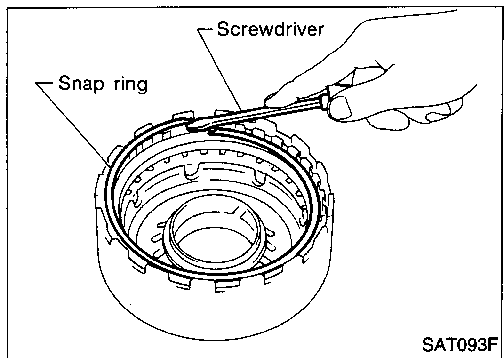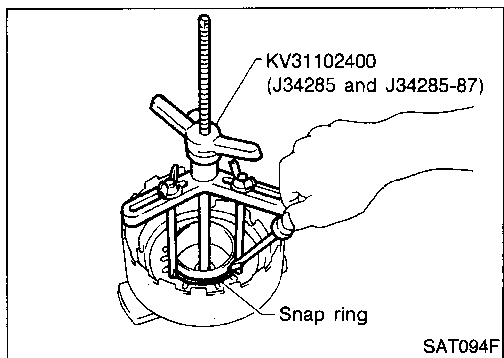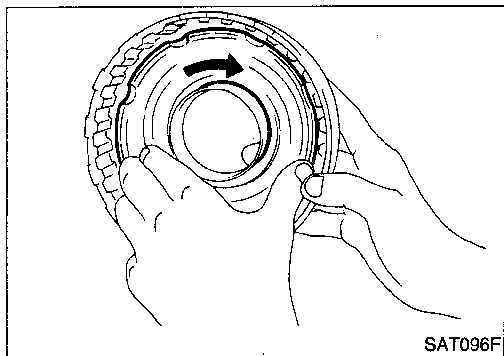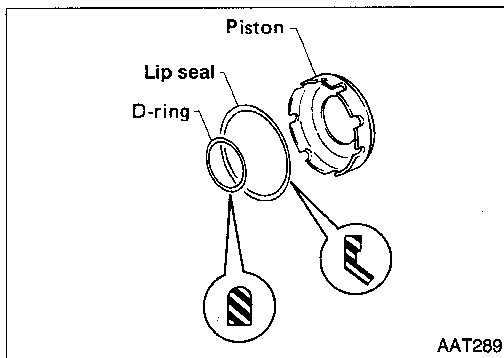

1. Install D-ring and lip seal on piston.
 - Take care with the direction of lip seal.
 - Apply ATF to both parts.

2. Install piston assembly by turning it slowly.
 - Apply ATF to inner surface of drum.

3. Install return springs and spring retainer on piston.
4. Set Tool on spring retainer and install snap ring while compressing return springs.
 - Set Tool directly over return springs.

5. Install drive plates, driven plates, retaining plate and dish plates.
 - Take care with order of plates.
6. Install snap ring.

7. Measure clearance between retaining plate and snap ring. If not within allowable limit, select proper retaining plate.

Specified clearance:

Standard 0.5 - 0.8 mm (0.020 - 0.031 in)


Allowable limit 1.2 mm (0.047 in)

Retaining plate: Refer to AT-223.

REPAIR FOR COMPONENT PARTS

Reverse Clutch (Cont'd)

8. Check operation of reverse clutch.
Refer to AT-158.

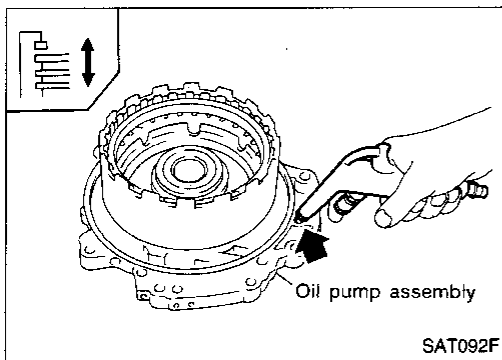

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST



BF

HA

EL


IDX

High Clutch

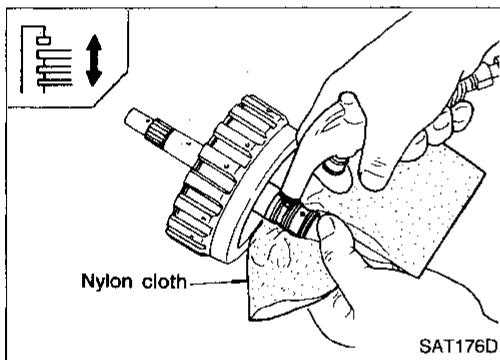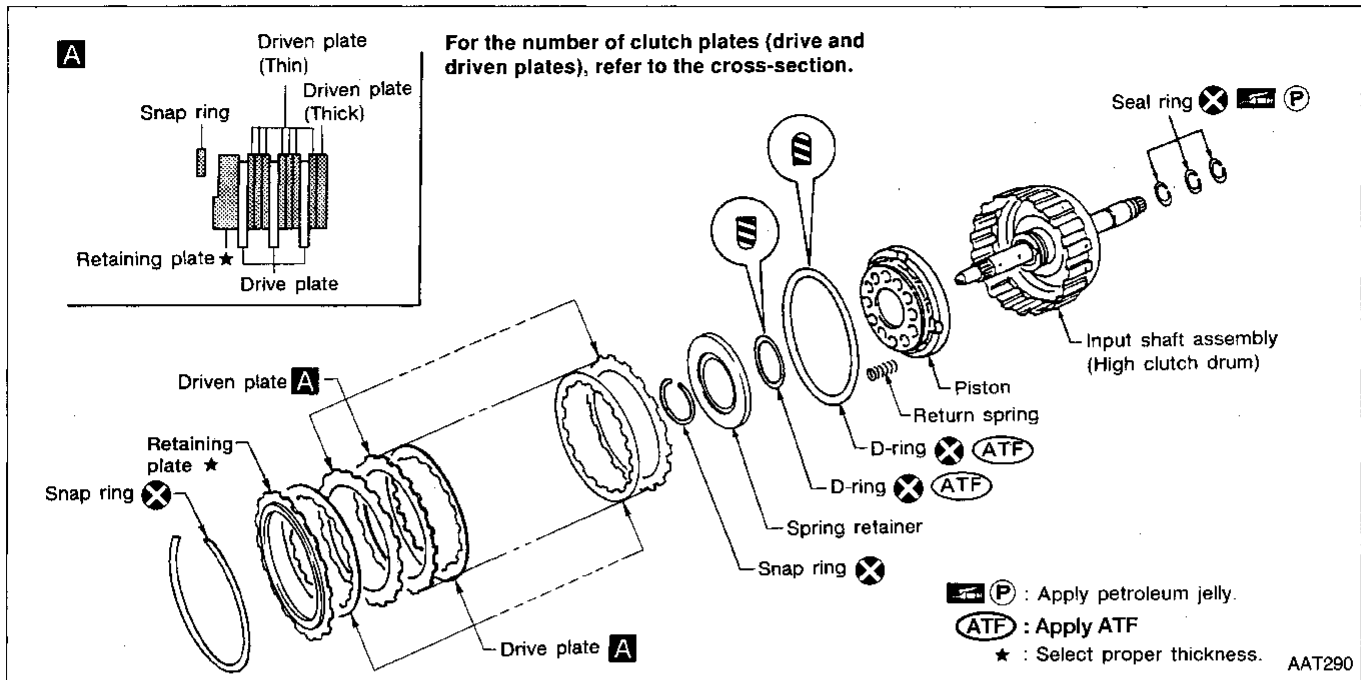


DISASSEMBLY

1. Check operation of high clutch.
 - a. Apply compressed air to oil hole of input shaft with nylon cloth.
 - **Stop up hole on opposite side of input shaft with nylon cloth.**
 - b. Check to see that retaining plate moves to snap ring.
 - c. If retaining plate does not move to snap ring, D-rings may be damaged or fluid may be leaking at piston check ball.

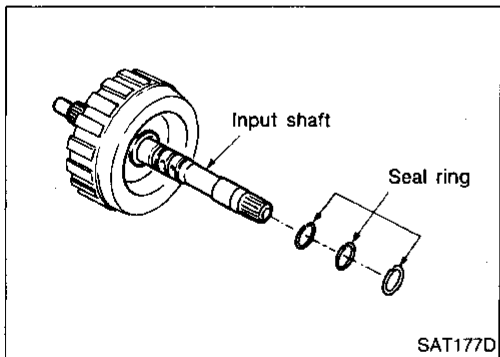




2. Remove seal rings from input shaft.
 - **Always replace when removed.**

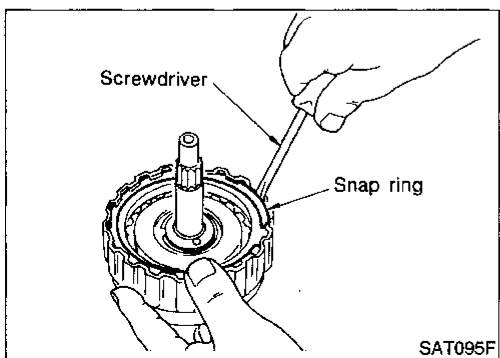

3. Remove snap ring.
4. Remove drive plates, driven plates and retaining plate.

REPAIR FOR COMPONENT PARTS

High Clutch (Cont'd)

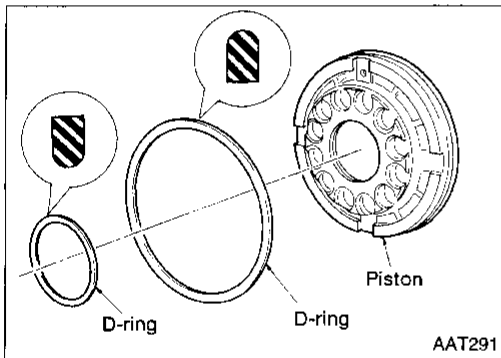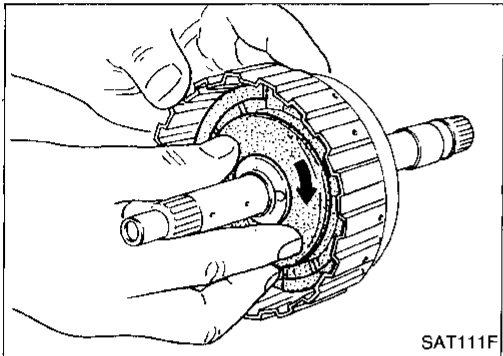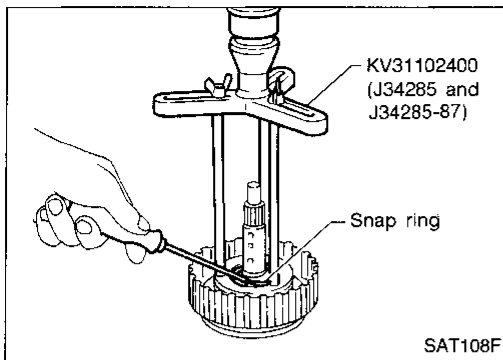

5. Set Tool on spring retainer and remove snap ring from high clutch drum while compressing return springs.
 - **Set Tool directly over springs.**
 - **Do not expand snap ring excessively.**
6. Remove spring retainer and return springs.

7. Remove piston from high clutch drum by turning it.

8. Remove D-rings from piston.


INSPECTION

High clutch snap ring, spring retainer and return springs.

- Check for deformation, fatigue or damage. If necessary, replace.
- **When replacing spring retainer and return springs, replace them as a set.**

High clutch drive plates

- Check facing for burns, cracks or damage.
- Measure thickness of facing.
 - Thickness of drive plate:**
 - Standard value 1.6 mm (0.063 in)**
 - Wear limit 1.4 mm (0.055 in)**
- If not within wear limit, replace.


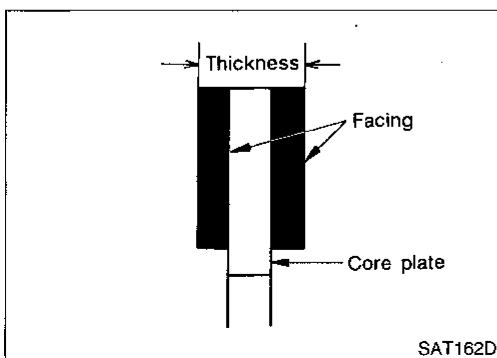


REPAIR FOR COMPONENT PARTS

High Clutch (Cont'd)


High clutch piston

- Make sure that check balls are not fixed.
- Apply compressed air to check ball oil hole opposite the return spring to make sure that there is no air leakage.
- Apply compressed air to oil hole on return spring side to make sure that air leaks past ball.

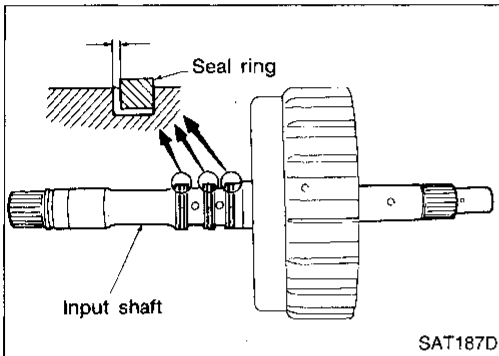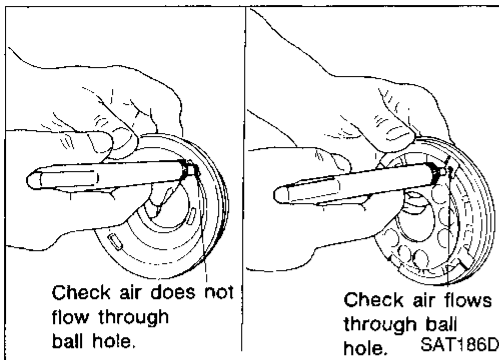


Seal ring clearance

- Measure clearance between seal ring and ring groove.
Standard clearance: 0.08 - 0.23 mm (0.0031 - 0.0091 in)
Allowable limit: 0.23 mm (0.0091 in)
- If not within allowable limit, replace input shaft assembly.

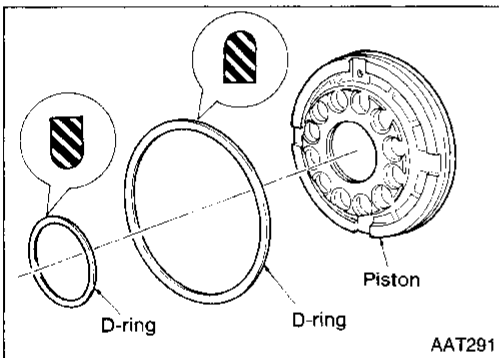


ASSEMBLY

1. Install D-rings on piston.
 - **Apply ATF to both parts.**

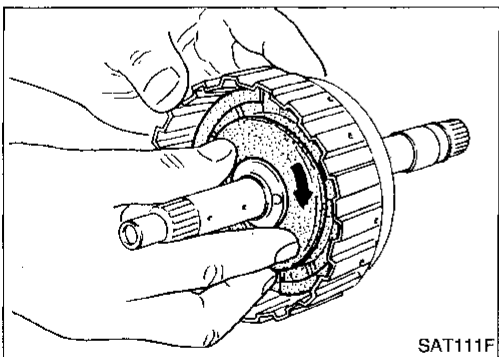


2. Install piston assembly by turning it slowly.
 - **Apply ATF to inner surface of drum.**

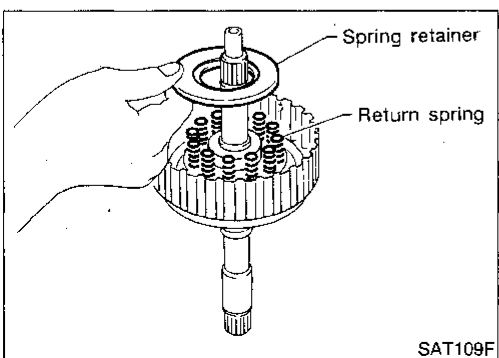


3. Install return springs and spring retainer on piston.

REPAIR FOR COMPONENT PARTS


High Clutch (Cont'd)

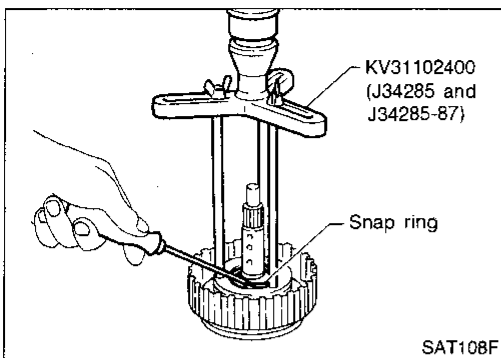


4. Set Tool on spring retainer and install snap ring while compressing return springs.
- **Set Tool directly over return springs.**

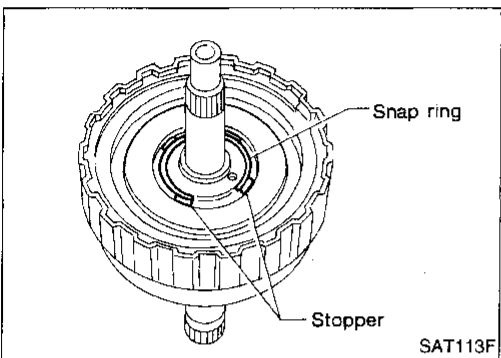


- **Do not align snap ring gap with spring retainer stopper.**

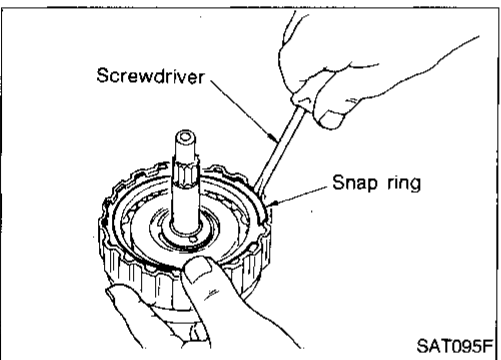

5. Install drive plates, driven plates and retaining plate.
- **Take care with direction of retaining plate and order of plates.**
6. Install snap ring.

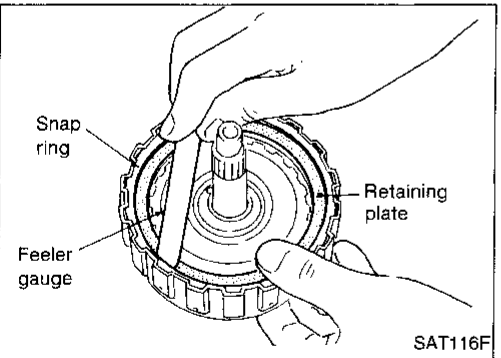

7. Measure clearance between retaining plate and snap ring. If not within allowable limit, select proper retaining plate.
- Specified clearance:**
Standard 1.8 - 2.2 mm (0.071 - 0.087 in)
Allowable limit 2.8 mm (0.110 in)
Retaining plate: Refer to AT-223.

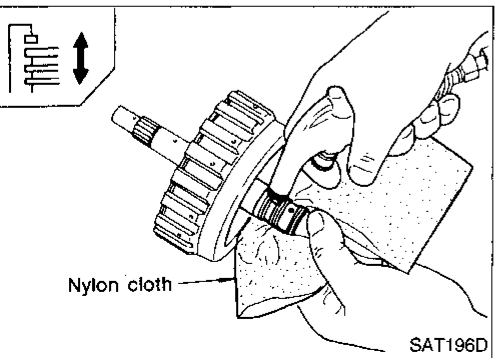

8. Check operation of high clutch.
Refer to AT-162.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF


HA

EL


IDX

REPAIR FOR COMPONENT PARTS

High Clutch (Cont'd)



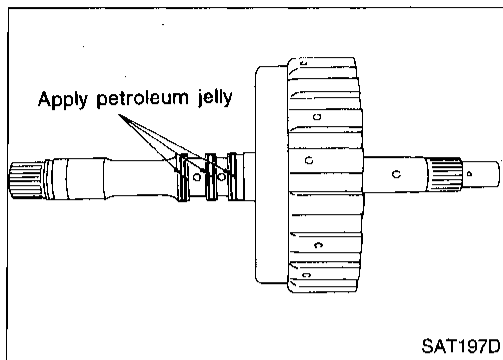


9. Install seal rings to input shaft.
- Apply petroleum jelly to seal rings.
 - Always replace when removed.

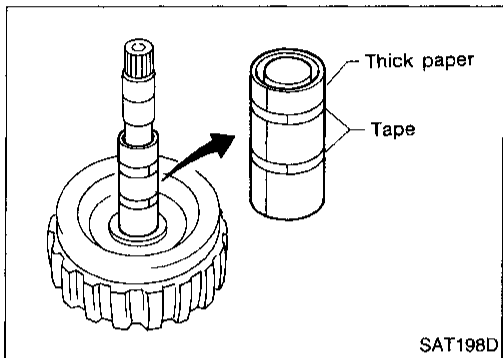

- Roll paper around seal rings to prevent seal rings from spreading.

Forward Clutch and Overrun Clutch

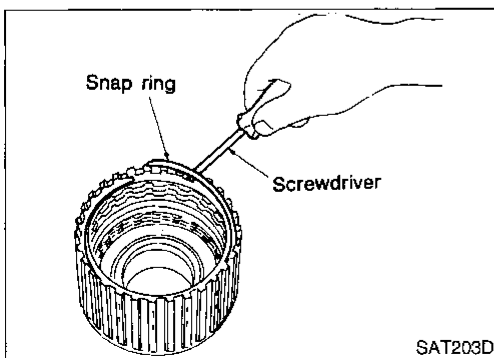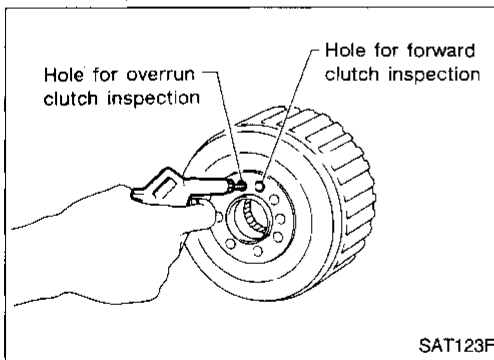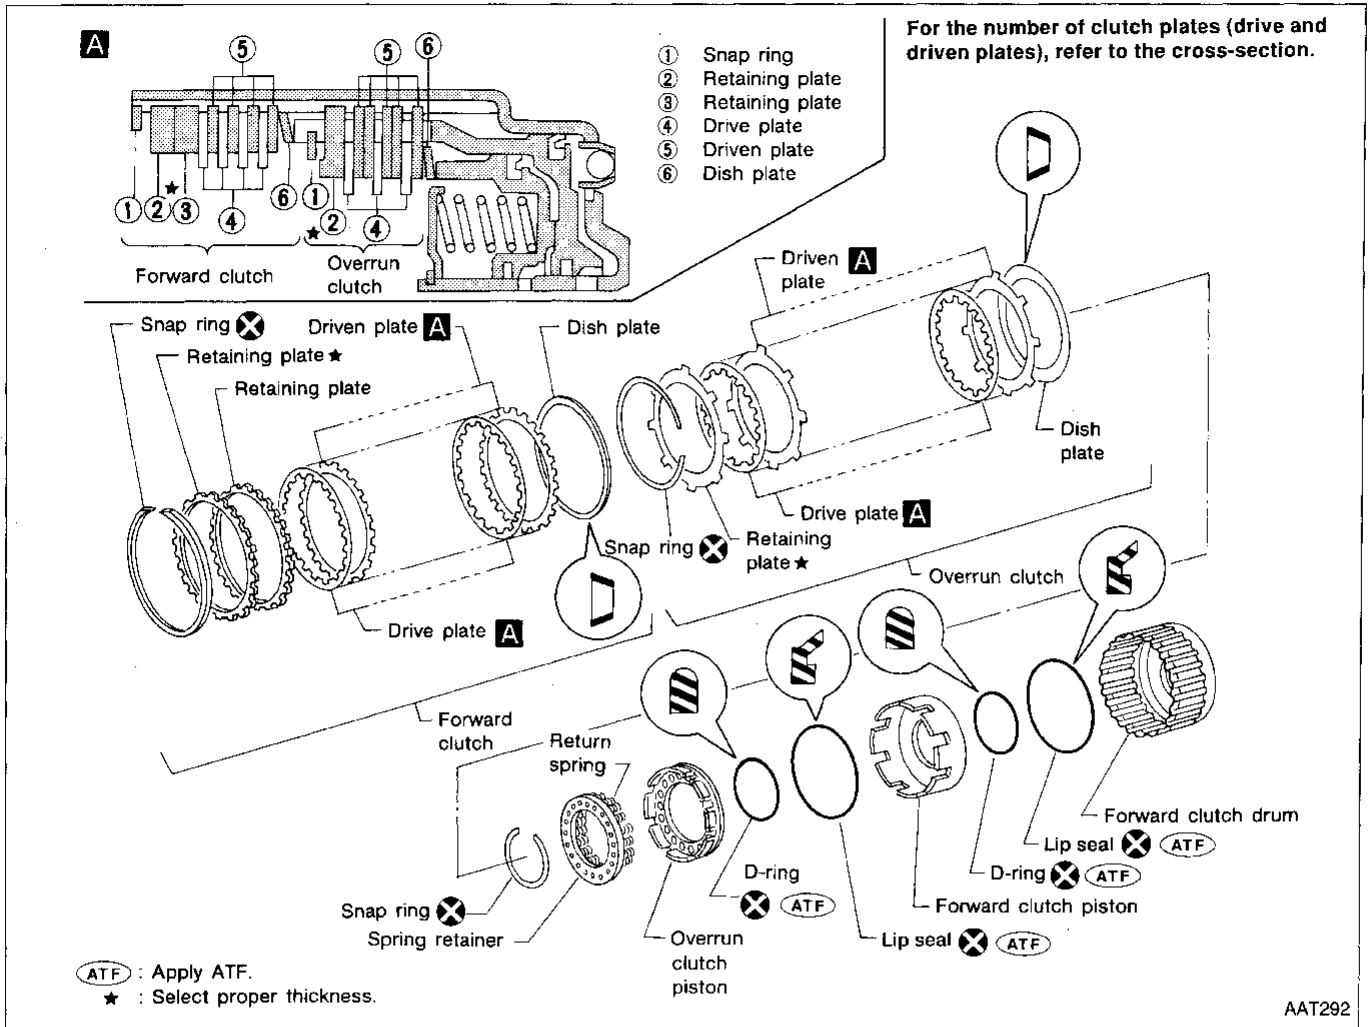






DISASSEMBLY

1. Check operation of forward clutch and overrun clutch.
 - a. Install bearing retainer on forward clutch drum.
 - b. Apply compressed air to oil hole of forward clutch drum.
 - c. Check to see that retaining plate moves to snap ring.
 - d. If retaining plate does not move to snap ring, D-ring or lip seal may be damaged or fluid may be leaking at piston check ball.
2. Remove snap ring for forward clutch.
3. Remove drive plates, driven plates, retaining plate and dish plate for forward clutch.

GI
MA
EW
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

REPAIR FOR COMPONENT PARTS

Forward Clutch and Overrun Clutch (Cont'd)

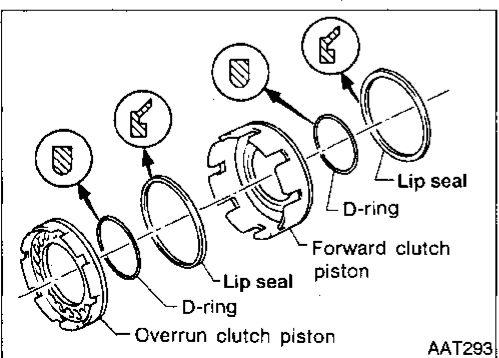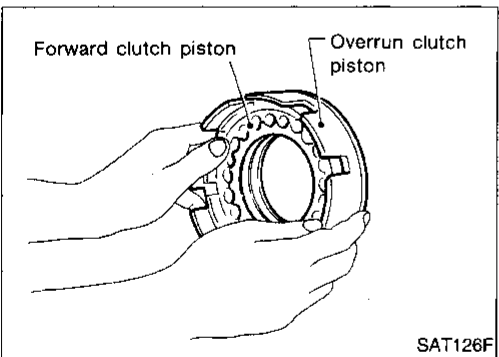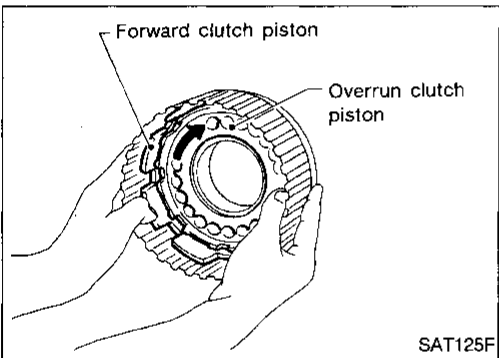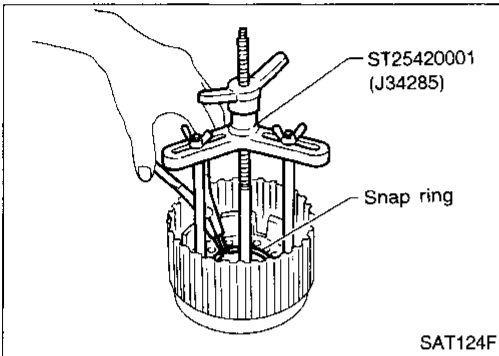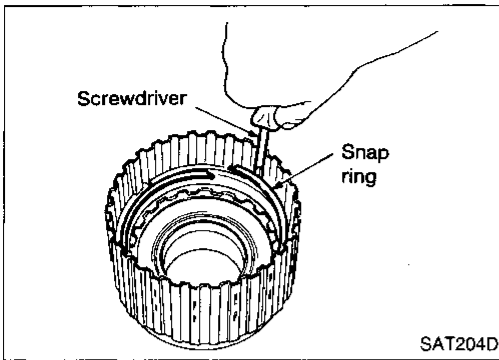

4. Remove snap ring for overrun clutch.
5. Remove drive plates, driven plates, retaining plate and dish plate for overrun clutch.

6. Set Tool on spring retainer and remove snap ring from forward clutch drum while compressing return springs.

- **Set Tool directly over return springs.**
 - **Do not expand snap ring excessively.**
7. Remove spring retainer and return springs.
- **Do not remove return springs from spring retainer.**

8. Remove forward clutch piston with overrun clutch piston from forward clutch drum by turning it.

9. Remove overrun clutch piston from forward clutch piston by turning it.

10. Remove D-rings and lip seals from forward clutch piston and overrun clutch piston.

REPAIR FOR COMPONENT PARTS

Forward Clutch and Overrun Clutch (Cont'd) INSPECTION

Snap rings, spring retainer and return springs

- Check for deformation, fatigue or damage.
- Replace if necessary.
- When replacing spring retainer and return springs, replace them as a set.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR


ST

BF

HA


EL

IDX

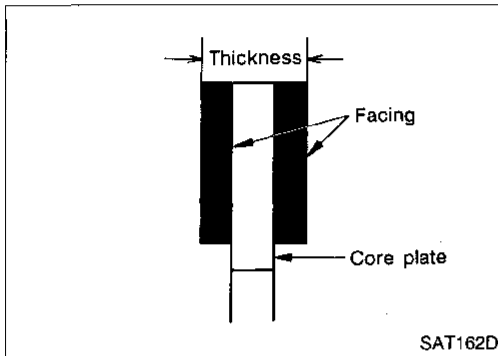


Forward clutch and overrun clutch drive plates

- Check facing for burns, cracks or damage.
- Measure thickness of facing.
 - Thickness of drive plate:**
 - Forward clutch**
Standard value: 1.6 mm (0.063 in)
Wear limit: 1.4 mm (0.055 in)
 - Overrun clutch**
Standard value: 1.6 mm (0.063 in)
Wear limit: 1.4 mm (0.055 in)
- If not within wear limit, replace.

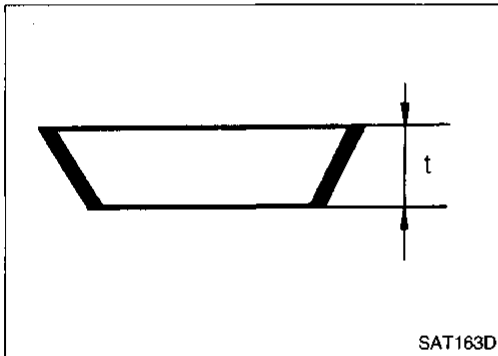


Forward clutch and overrun clutch dish plates

- Check for deformation or damage.
- Measure thickness of dish plate.
 - Thickness of dish plate:**
 - Forward clutch 2.7 mm (0.106 in)**
 - Overrun clutch 2.7 mm (0.106 in)**
- If deformed or fatigued, replace.

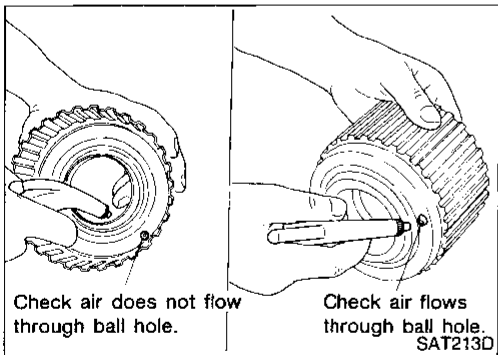

Forward clutch drum

- Make sure that check balls are not fixed.
- Apply compressed air to check ball oil hole from outside of forward clutch drum to make sure that air leaks past ball.
- Apply compressed air to oil hole from inside of forward clutch drum to make sure that there is no air leakage.

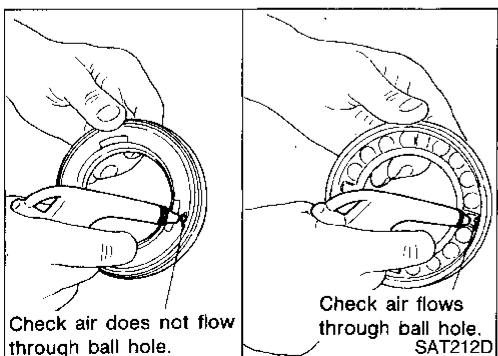

Overrun clutch piston

- Make sure that check balls are not fixed.
- Apply compressed air to check ball oil hole opposite the return spring to make sure that there is no air leakage.
- Apply compressed air to oil hole on return spring side to make sure that air leaks past ball.


REPAIR FOR COMPONENT PARTS

Forward Clutch and Overrun Clutch (Cont'd)

ASSEMBLY


1. Install D-rings and lip seals on forward clutch piston and overrun clutch piston.

- Take care with direction of lip seal.
- Apply ATF to both parts.

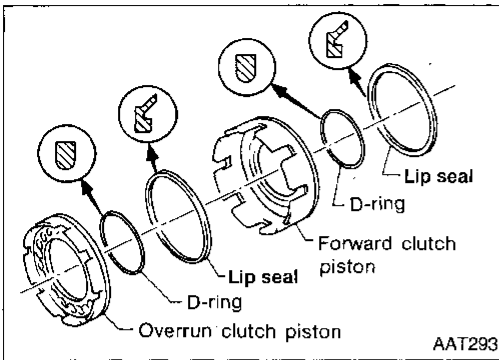


2. Install overrun clutch piston assembly on forward clutch piston by turning it slowly.

- Apply ATF to inner surface of forward clutch piston.

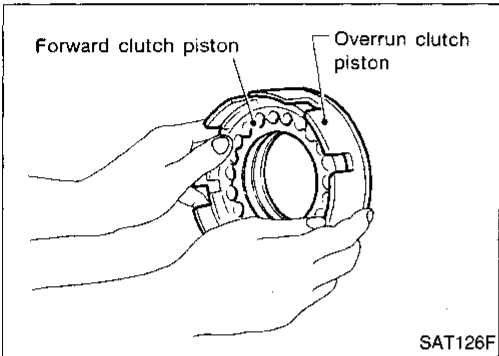


3. Install forward clutch piston assembly on forward clutch drum by turning it slowly.


- Apply ATF to inner surface of drum.

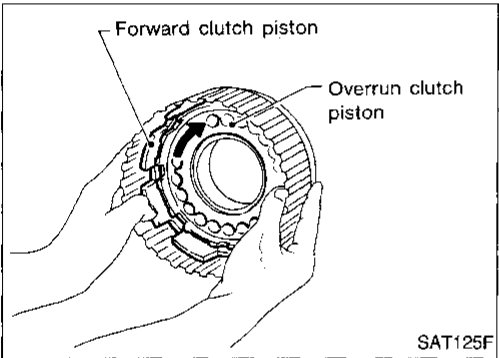

4. Install spring retainer on overrun clutch piston.

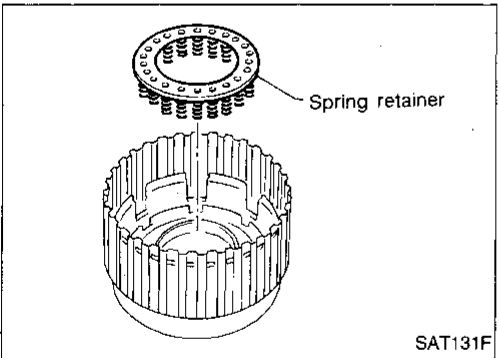


- Align the mark on spring retainer with check ball in overrun clutch piston.

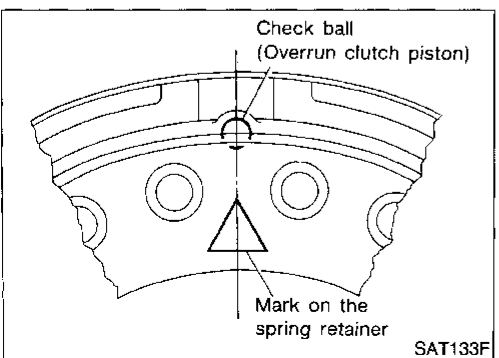


REPAIR FOR COMPONENT PARTS


Forward Clutch and Overrun Clutch (Cont'd)

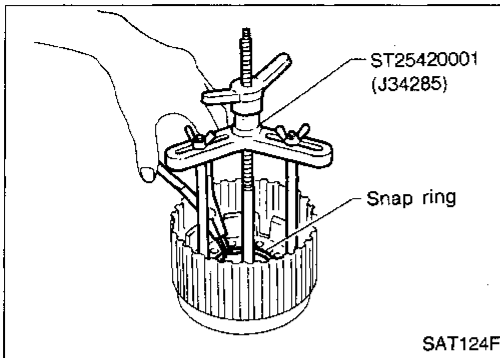


5. Set Tool on spring retainer and install snap ring while compressing return springs.
 - **Set Tool directly over return springs.**

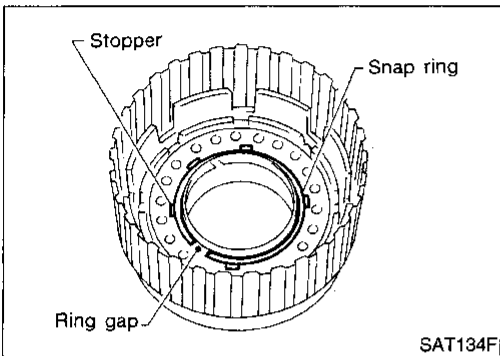


- **Do not align snap ring gap with spring retainer stopper.**

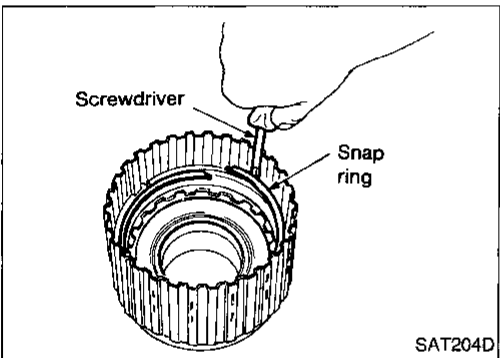

6. Install drive plates, driven plates, retaining plate and dish plate for overrun clutch.
 - **Take care with order of plates.**
7. Install snap ring for overrun clutch.

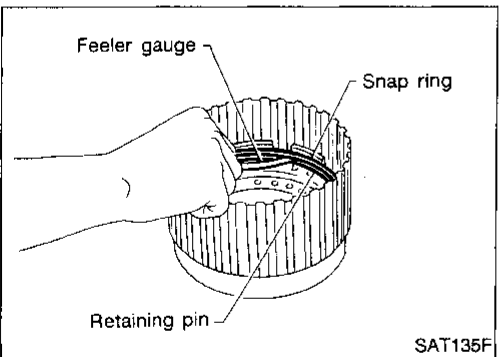

8. Measure clearance between overrun clutch retaining plate and snap ring.
 - If not within allowable limit, select proper retaining plate.
 - Specified clearance:**
 - Standard 0.7 - 1.1 mm (0.028 - 0.043 in)**
 - Allowable limit 1.7 mm (0.067 in)**
 - Overrun clutch retaining plate: Refer to AT-223.**

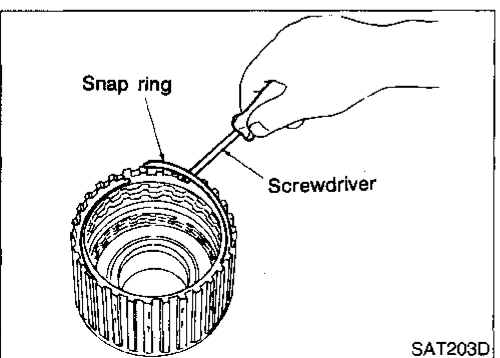


9. Install drive plates, driven plates, retaining plate and dish plate for forward clutch.
 - **Take care with order of plates.**
10. Install snap ring for forward clutch.

GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

REPAIR FOR COMPONENT PARTS

Forward Clutch and Overrun Clutch (Cont'd)

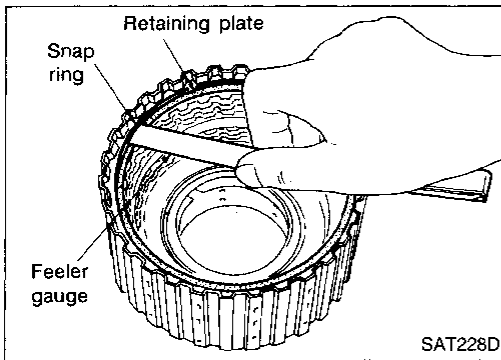


11. Measure clearance between forward clutch retaining plate and snap ring.
If not within allowable limit, select proper retaining plate.

Specified clearance:

Standard 0.45 - 0.85 mm (0.0177 - 0.0335 in)


Allowable limit 1.65 mm (0.0650 in)

Forward clutch retaining plate: Refer to AT-223.

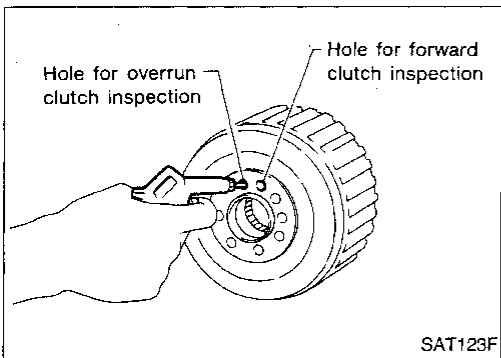

12. Check operation of forward clutch.
Refer to AT-167.
13. Check operation of overrun clutch.
Refer to AT-167.

Low & Reverse Brake

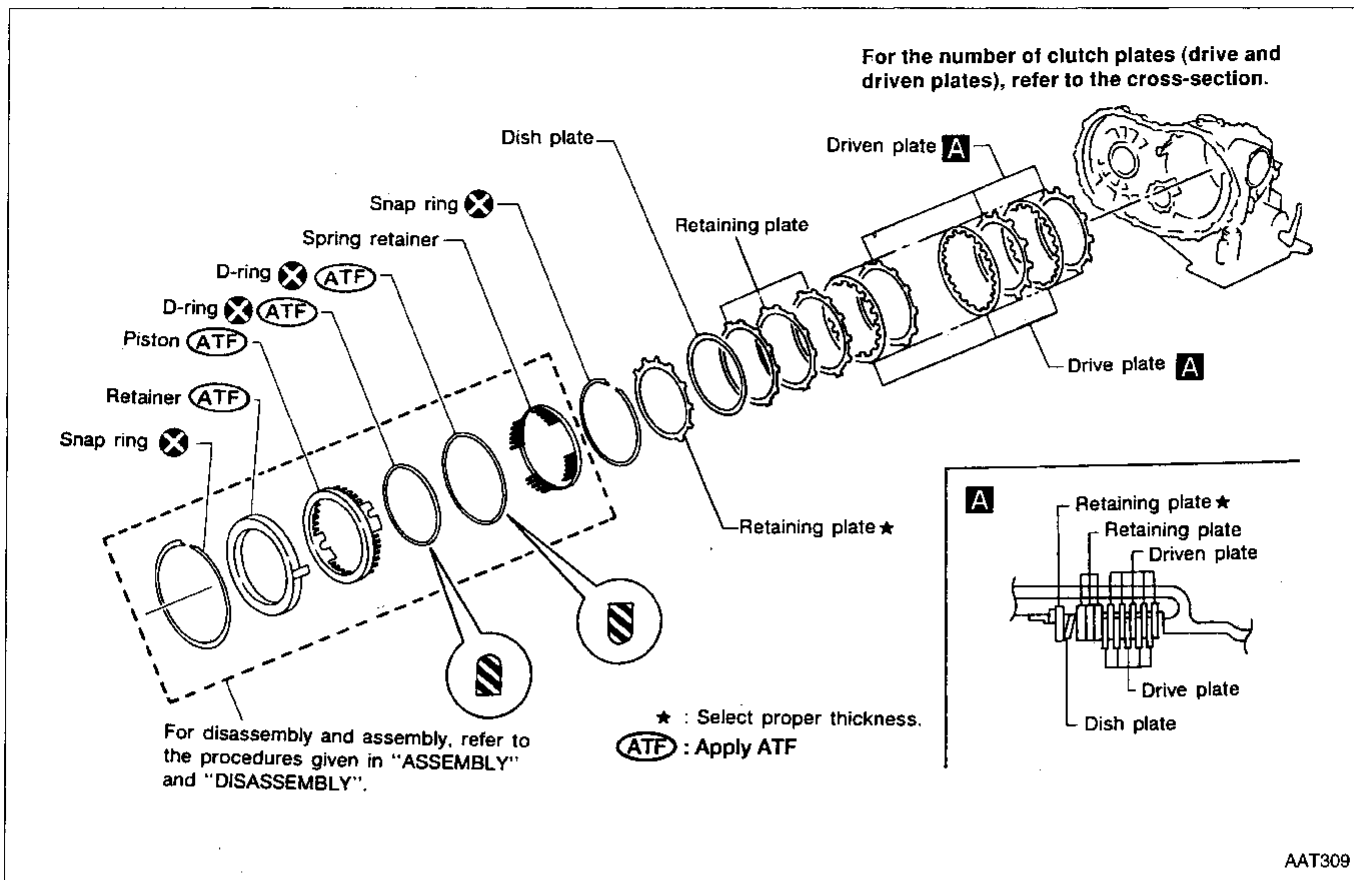

GI
 MA
 EM
 LC
 EF &
 EC
 FE
 CL
 MT
AT

FA

RA

BR


ST

BF

HA


EL

IDX

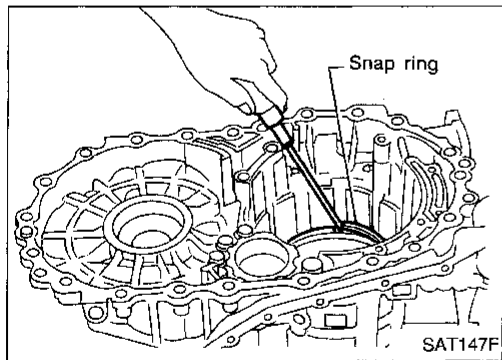

DISASSEMBLY

1. Stand transmission case.
2. Remove snap ring.
3. Remove dish plate, retaining plate, drive plates and driven plates from transmission case.

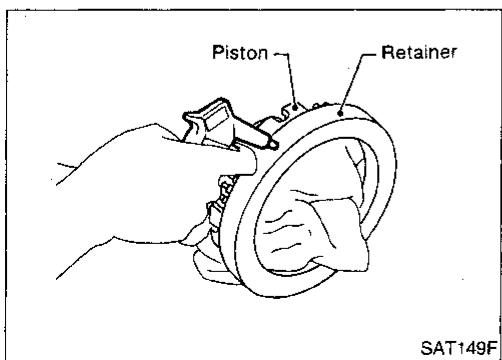


4. In order to remove piston, apply compressed air to oil hole of retainer while holding piston.
 - **Apply air gradually and allow piston to come out evenly.**

REPAIR FOR COMPONENT PARTS

Low & Reverse Brake (Cont'd)


5. Remove D-rings from piston.

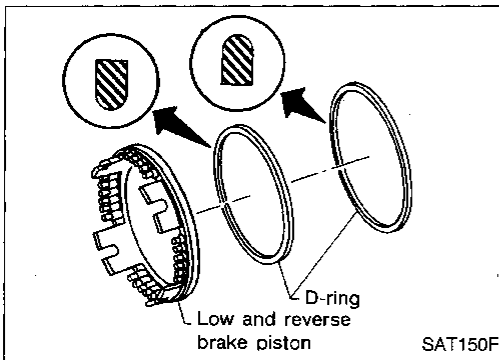

INSPECTION


Low & reverse clutch snap ring, spring retainer and return springs

- Check for deformation, fatigue or damage. If necessary, replace.
- **When replacing spring retainer and return springs, replace them as a set.**

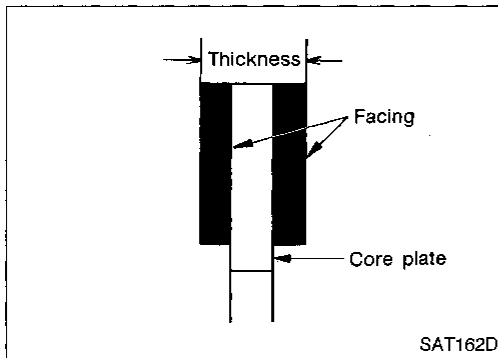


Low & reverse brake drive plate

- Check facing for burns, cracks or damage.
- Measure thickness of facing.
Thickness of drive plate:
Standard value 1.8 mm (0.071 in)
Wear limit 1.6 mm (0.063 in)
- If not within wear limit, replace.

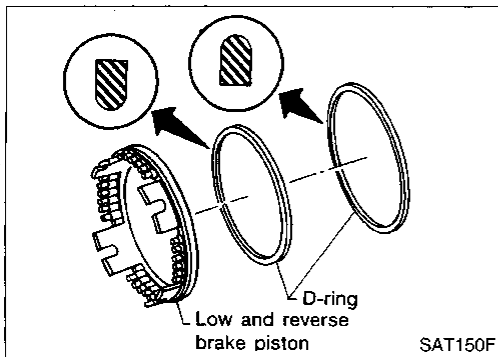


ASSEMBLY

1. Install D-rings on piston.
 - **Apply ATF to both parts.**
2. Set and align piston with retainer.
 - **This operation is required in order to engage the protrusions of piston to return springs correctly. Further procedures are given in "ASSEMBLY" (Refer to AT-200).**

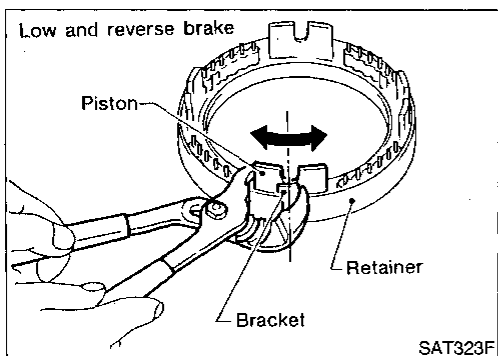

REPAIR FOR COMPONENT PARTS

Low & Reverse Brake (Cont'd)

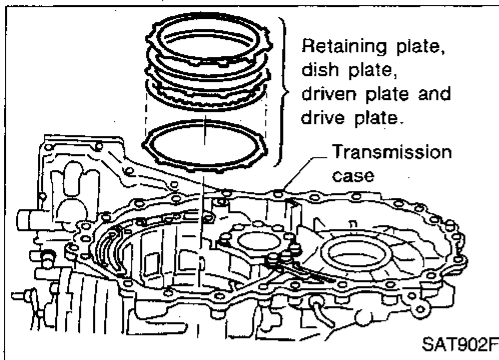

3. Install driven plates, drive plates, retaining plate and dish plate on transmission case.
- Refer to the illustration on the previous page for order of plates and direction of dish plate.
4. Install snap ring.

GI

MA

EM

LC

EF &

EC

FE

CL

MT

AT

FA

RA

BR


ST

BF

HA

EL

IDX

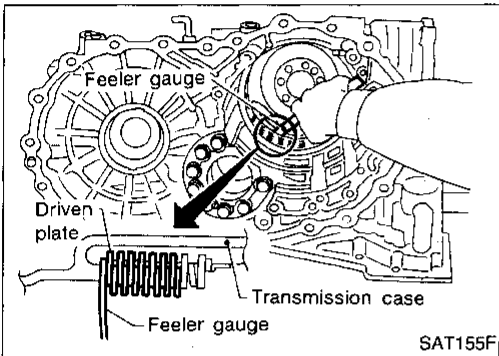

5. Measure clearance between driven plate and transmission case. If not within allowable limit, select proper retaining plate. (front side)



Specified clearance:

Standard 1.7 - 2.1 mm (0.067 - 0.083 in)

Allowable limit 3.1 mm (0.122 in)


Retaining plate: Refer to AT-223.

Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub

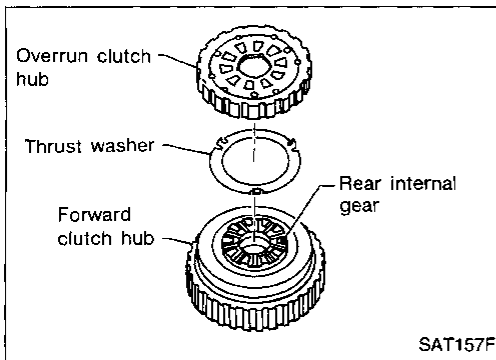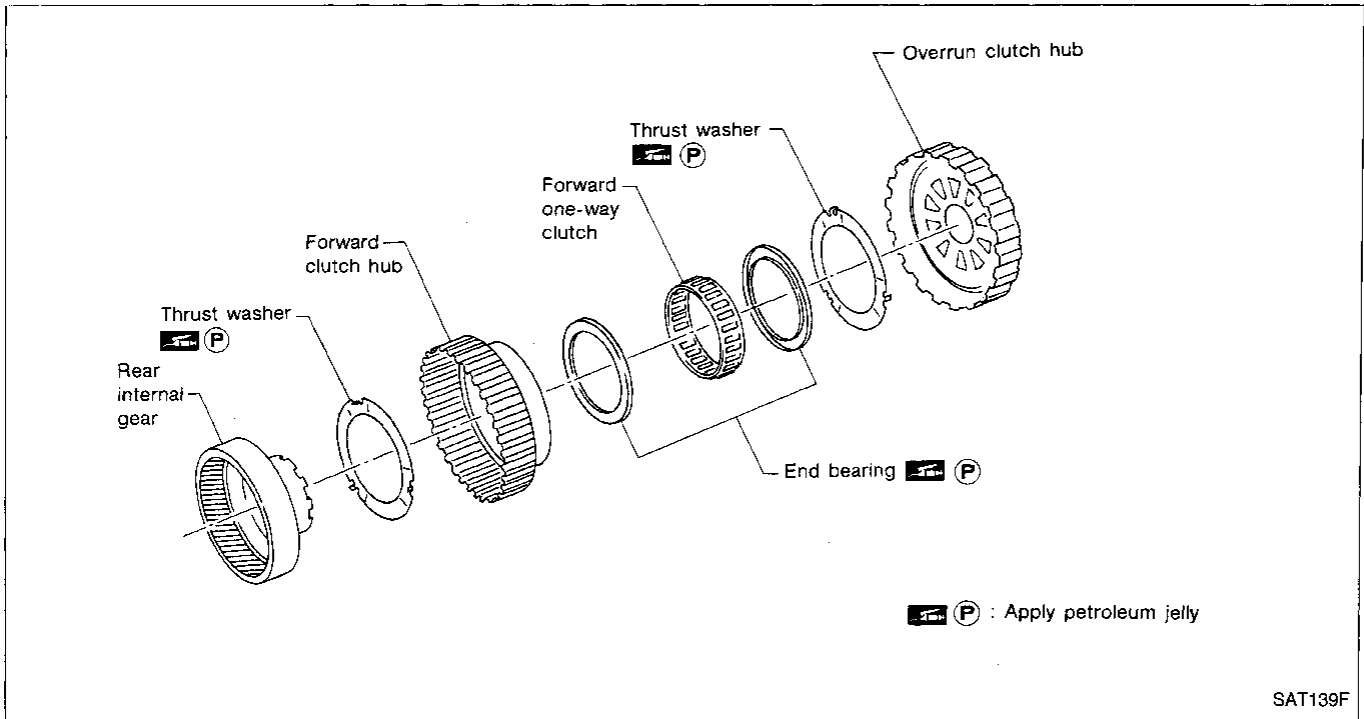

DISASSEMBLY


1. Remove overrun clutch hub and thrust washer from forward clutch hub.

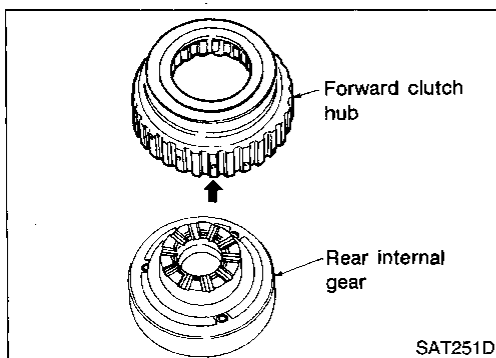

2. Remove forward clutch hub from rear internal gear.

REPAIR FOR COMPONENT PARTS

Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub (Cont'd)

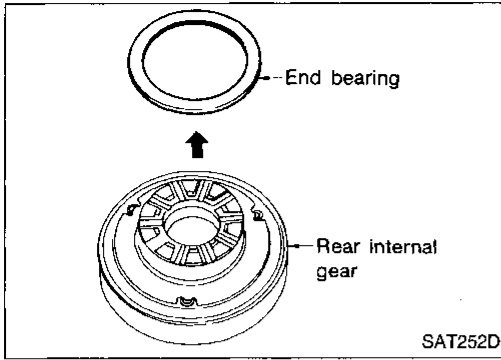


3. Remove end bearing from rear internal gear.

GI

MA

EM

LC

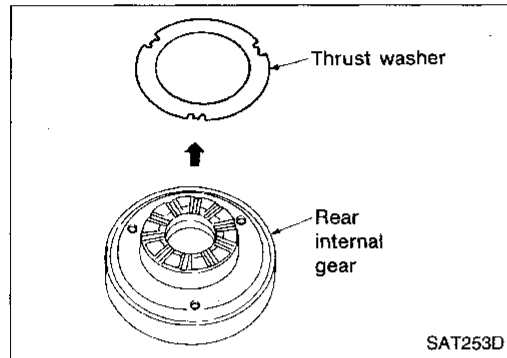

4. Remove thrust washer from rear internal gear.

EF &

EC

FE

CL

MT

AT

FA

RA

BR


ST

BF


HA

EL


IDX

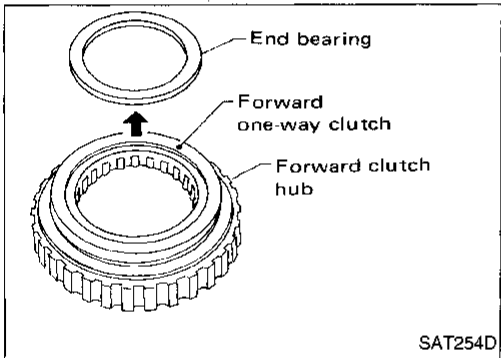

5. Remove end bearing from forward one-way clutch.

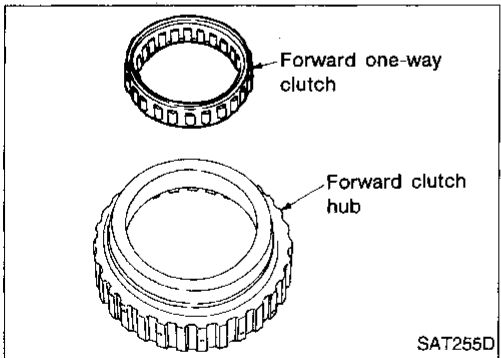

6. Remove forward one-way clutch from forward clutch hub.

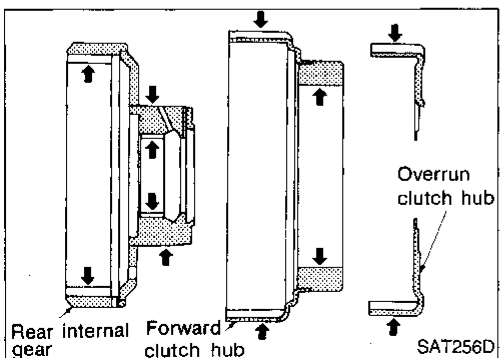

INSPECTION

Rear internal gear, forward clutch hub and overrun clutch hub



- Check rubbing surfaces for wear or damage.

REPAIR FOR COMPONENT PARTS

Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub (Cont'd)


End bearings and forward one-way clutch

- Check end bearings for deformation and damage.
- Check forward one-way clutch for wear and damage.

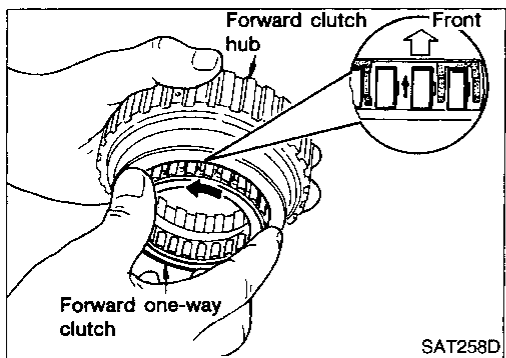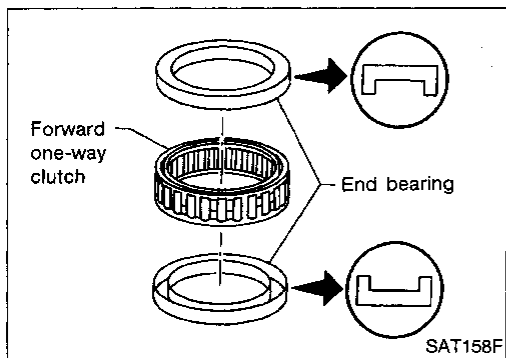


ASSEMBLY


1. Install forward one-way clutch on forward clutch.
 - Take care with the direction of forward one-way clutch.

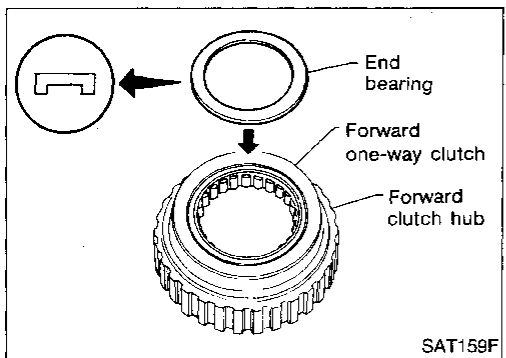

2. Install end bearing on forward one-way clutch.
 - Apply petroleum jelly to end bearing.

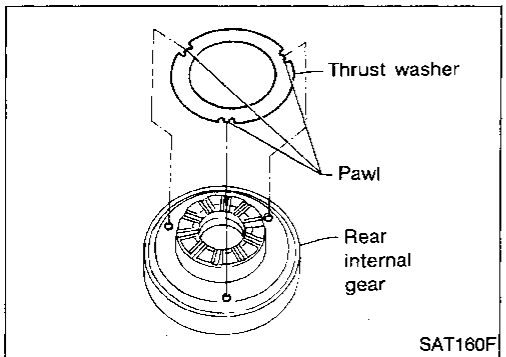



3. Install thrust washer on rear internal gear.
 - Apply petroleum jelly to thrust washer.
 - Align hooks of thrust washer with holes of rear internal gear.

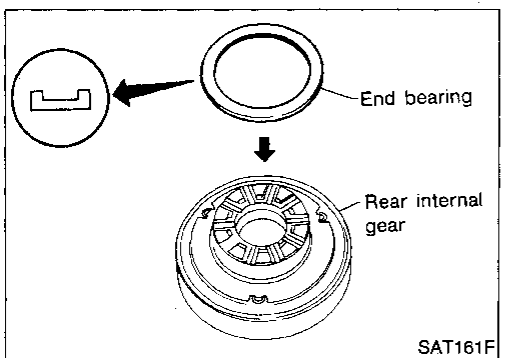

4. Install end bearing on rear internal gear.
 - Apply petroleum jelly to end bearing.

REPAIR FOR COMPONENT PARTS

Rear Internal Gear, Forward Clutch Hub and Overrun Clutch Hub (Cont'd)

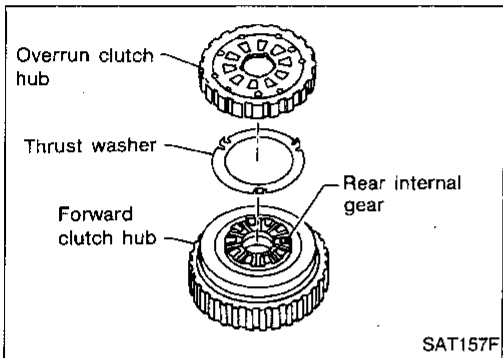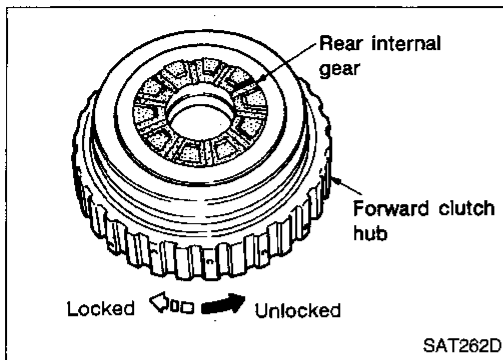

5. Install forward clutch hub on rear internal gear.

- Check operation of forward one-way clutch.

6. Install thrust washer and overrun clutch hub.

- Apply petroleum jelly to thrust washer.
- Align hooks of thrust washer with holes of overrun clutch hub.
- Align projections of rear internal gear with holes of overrun clutch hub.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST


BF

HA


EL

IDX

Output Shaft, Idler Gear, Reduction Gear and Bearing Retainer

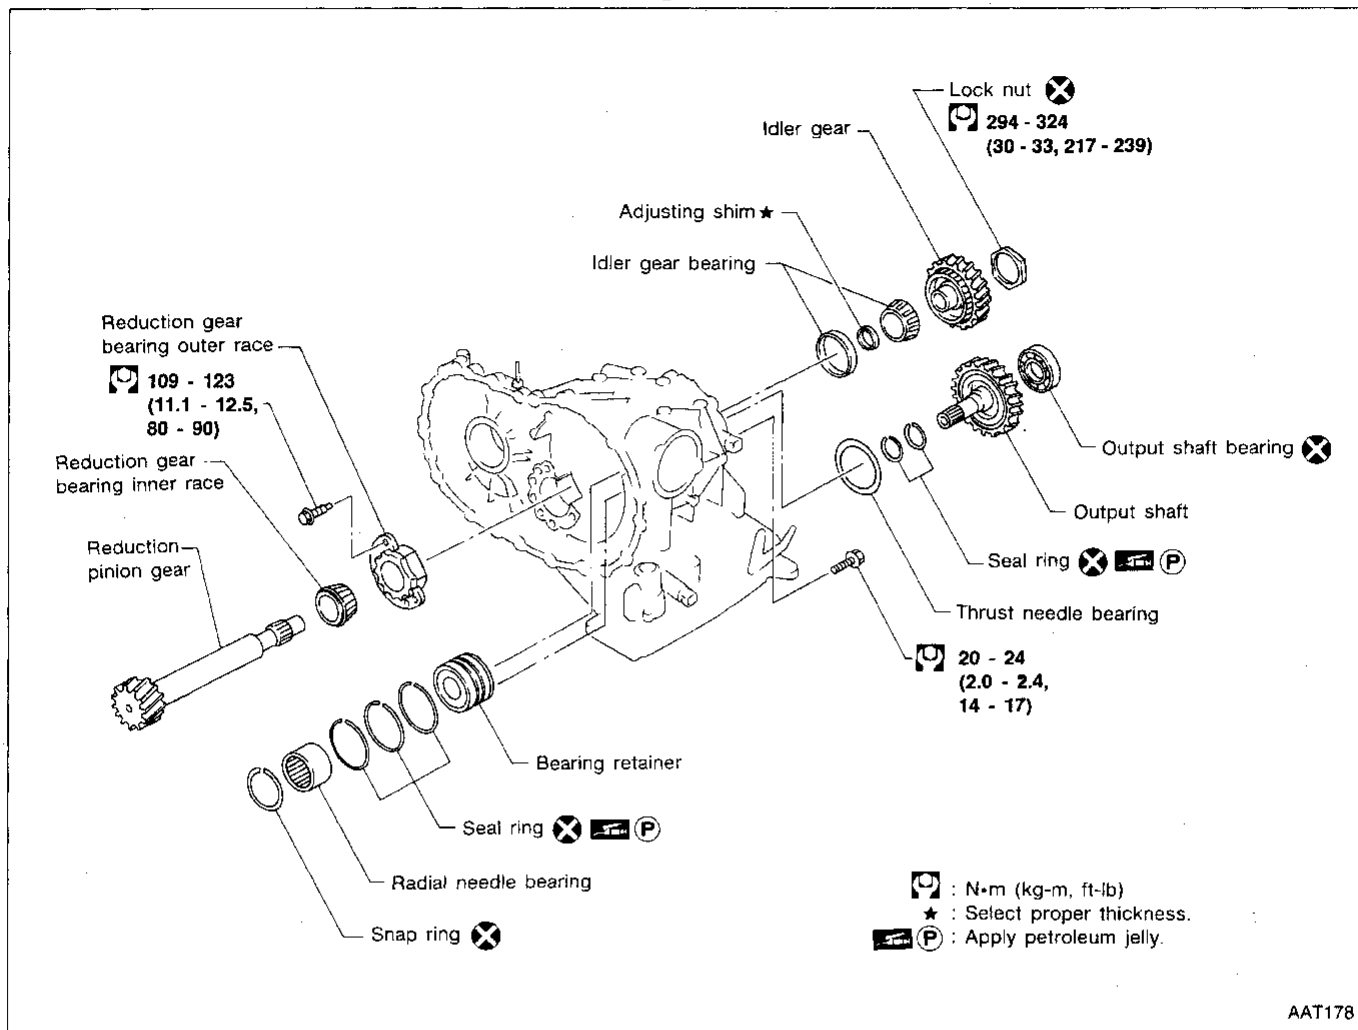


AAT178

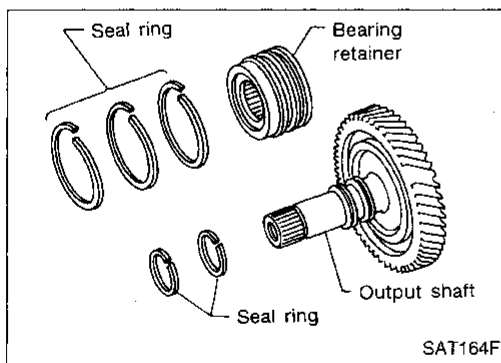

DISASSEMBLY

1. Remove seal rings from output shaft and bearing retainer.

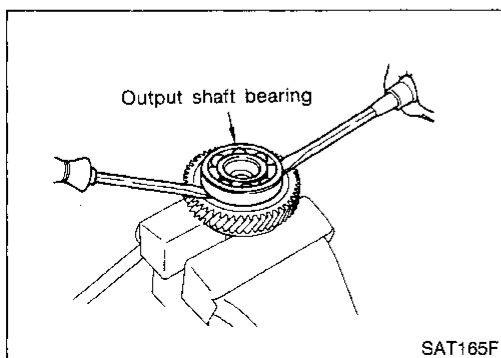


2. Remove output shaft bearing with screwdrivers.

- Always replace bearing with a new one when removed.
- Do not damage output shaft.


REPAIR FOR COMPONENT PARTS

Output Shaft, Idler Gear, Reduction Gear and Bearing Retainer (Cont'd)


3. Remove snap ring from bearing retainer.

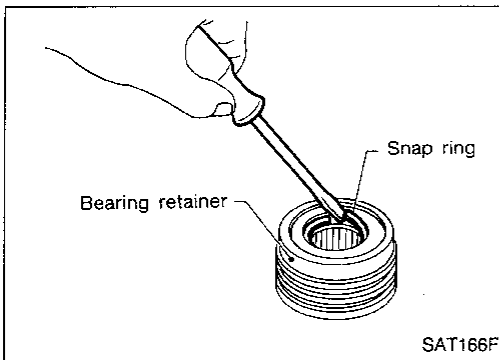


4. Remove needle bearing from bearing retainer.

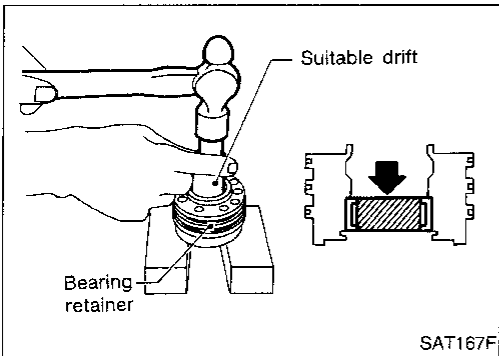


5. Remove idler gear bearing inner race from idler gear.

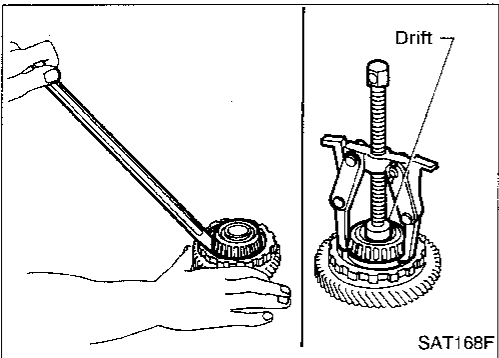

6. Remove idler gear bearing outer race from transmission case.

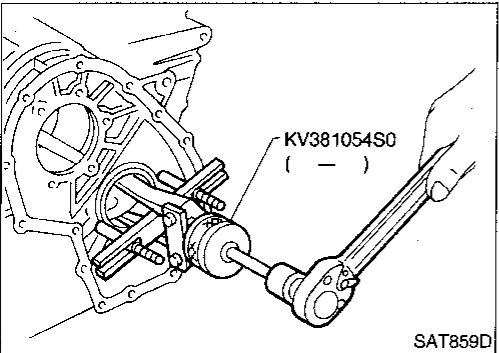

7. Press out reduction gear bearing inner race from reduction gear.

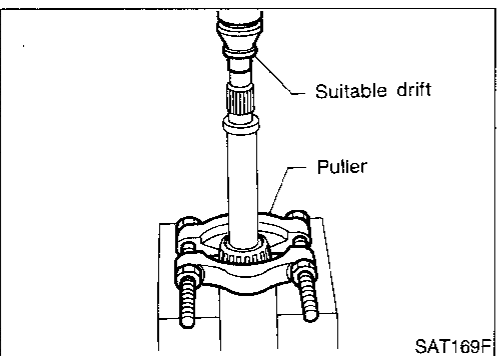

GI

MA

EM

LC

EF &
EC

FE

CL

WT

AT

FA

RA

BR

ST

BF


HA

EL

IDX

REPAIR FOR COMPONENT PARTS

Output Shaft, Idler Gear, Reduction Gear and Bearing Retainer (Cont'd)

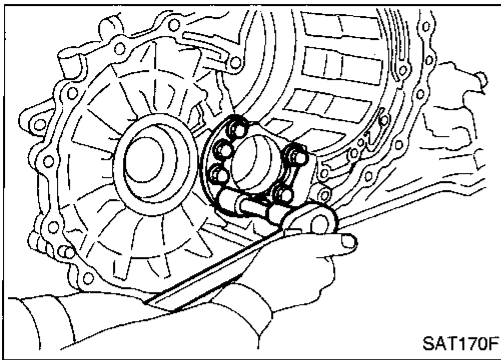


8. Remove reduction gear bearing outer race from transmission case.

INSPECTION


Output shaft, idler gear and reduction gear

- Check shafts for cracks, wear or bending.
- Check gears for wear, chips and cracks.

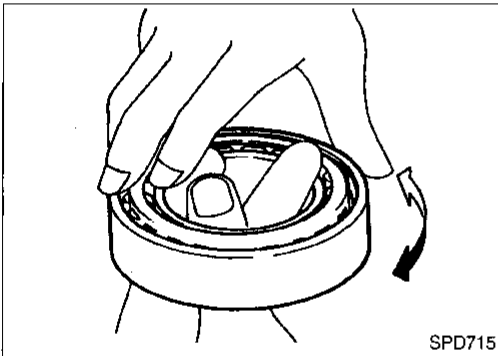

Bearing

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- **When replacing taper roller bearing, replace outer and inner race as a set.**

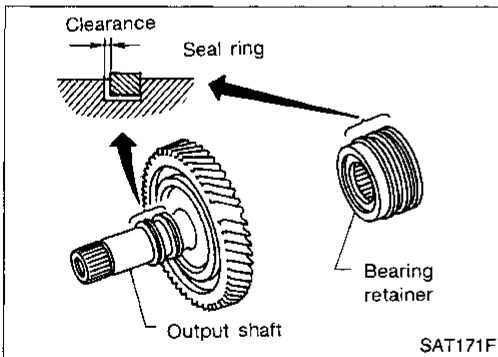


Seal ring clearance

- Install new seal rings to output shaft.
- Measure clearance between seal ring and ring groove of output shaft.
Standard clearance:
0.10 - 0.25 mm (0.0039 - 0.0098 in)
Allowable limit:
0.25 mm (0.0098 in)
- If not within allowable limit, replace output shaft.
- Install new seal rings to bearing retainer.
- Measure clearance between seal ring and ring groove of bearing retainer.
Standard clearance:
0.10 - 0.30 mm (0.0039 - 0.0118 in)
Allowable limit:
0.30 mm (0.0118 in)
- If not within allowable limit, replace bearing retainer.


REPAIR FOR COMPONENT PARTS

Output Shaft, Idler Gear, Reduction Gear and Bearing Retainer (Cont'd)


ASSEMBLY

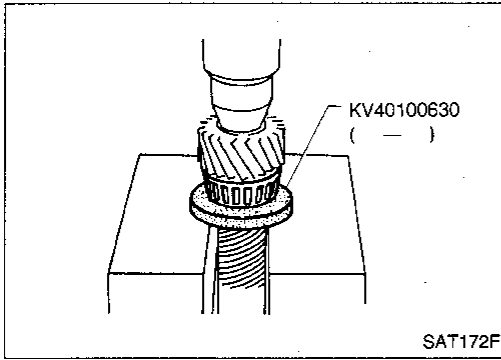


1. Press reduction gear bearing inner race on reduction gear.

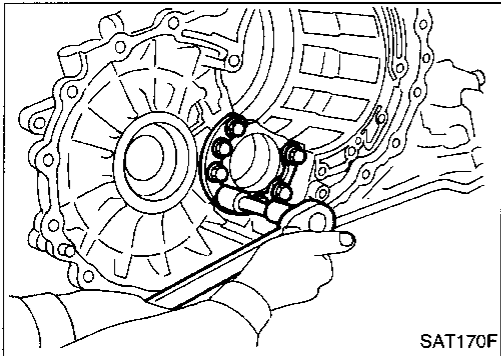


2. Install reduction gear bearing outer race on transmission case.

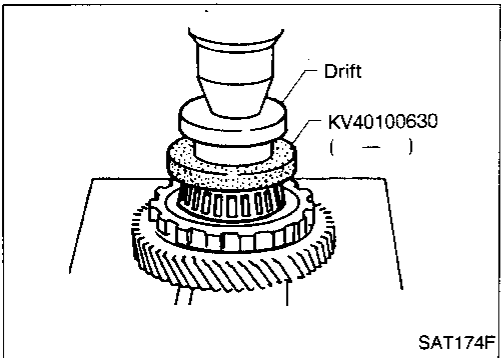

3. Press idler gear bearing inner race on idler gear.

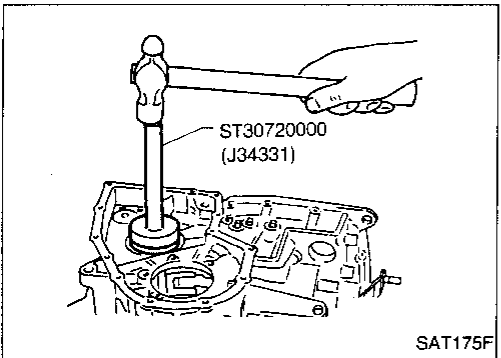

4. Install idler gear bearing outer race on transmission case.

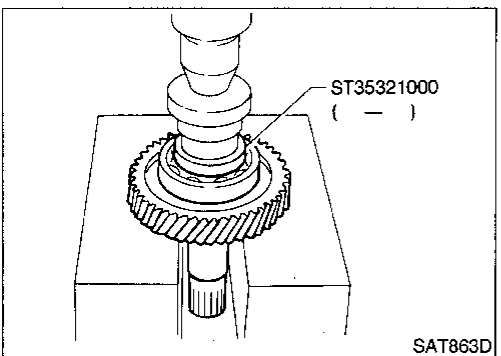

5. Press output shaft bearing on output shaft.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF


HA

EL


IDX

REPAIR FOR COMPONENT PARTS


Output Shaft, Idler Gear, Reduction Gear and Bearing Retainer (Cont'd)

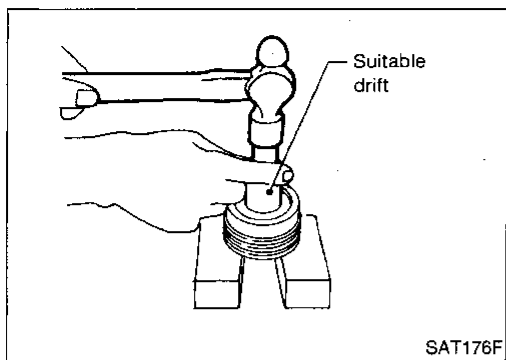


6. Press needle bearing on bearing retainer.

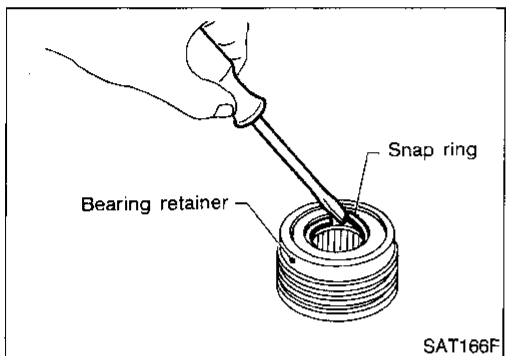

7. Install snap ring on to bearing retainer.


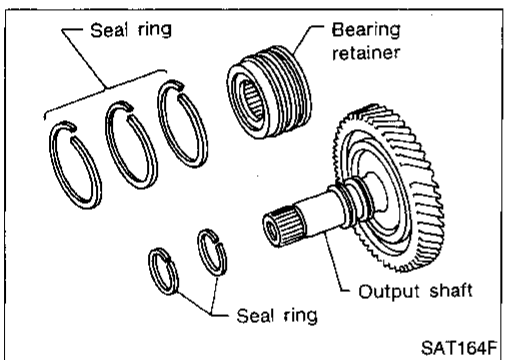


8. Install new seal rings to output shaft and bearing retainer carefully after packing ring grooves with petroleum jelly.

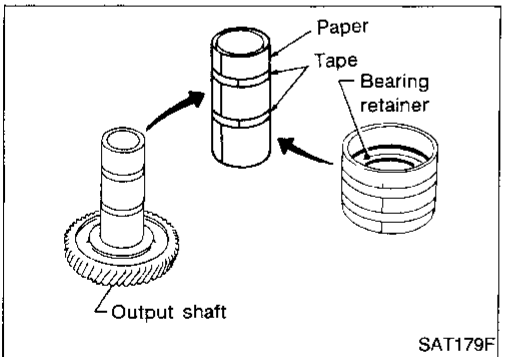


● Roll paper around seal rings to prevent seal rings from spreading.

Band Servo Piston Assembly

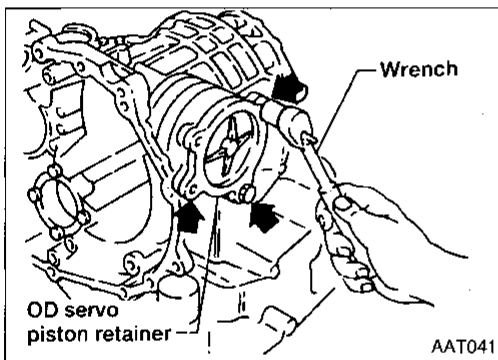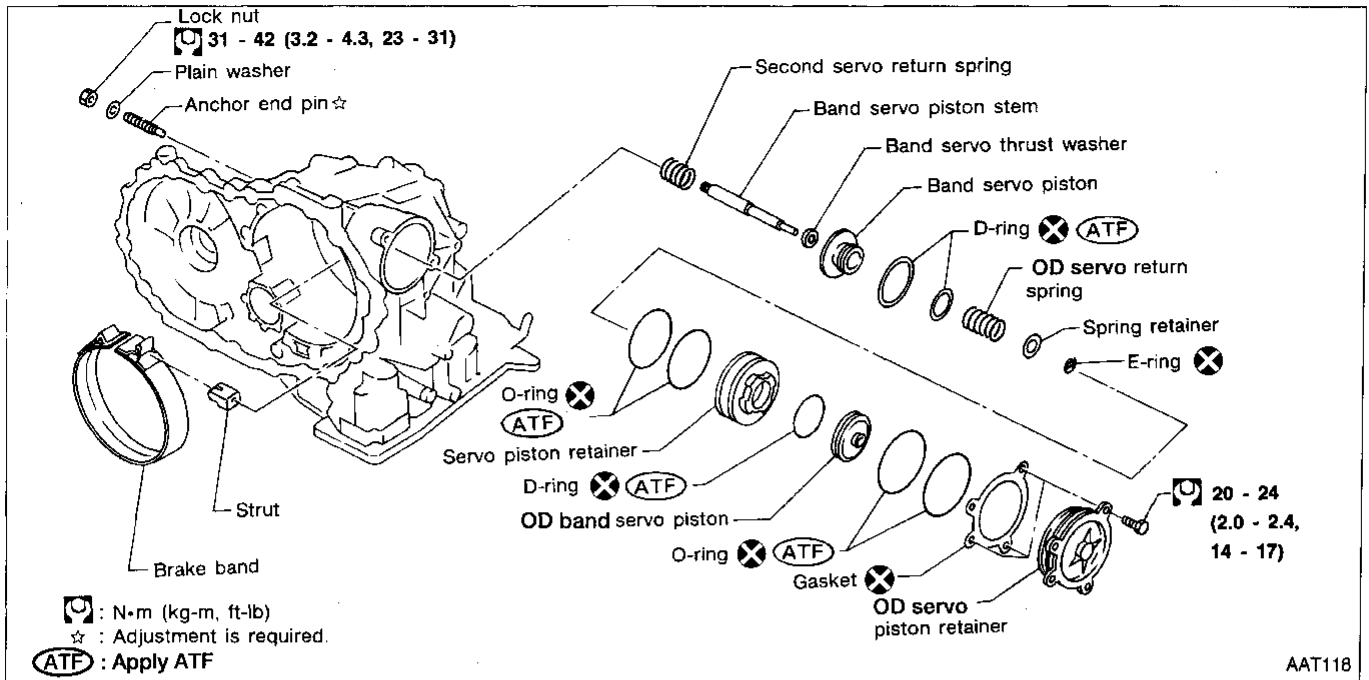


DISASSEMBLY

1. Remove OD servo piston retainer.

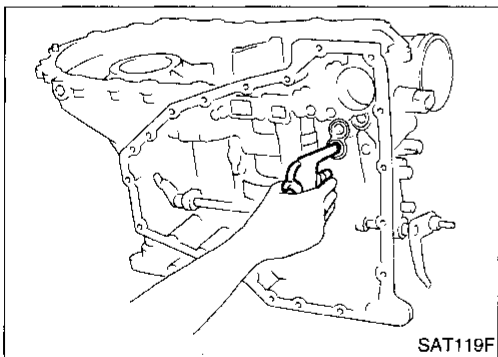

2. Apply compressed air to oil hole in transmission case to remove OD servo piston retainer and band servo piston assembly.

- Hold band servo piston assembly with a rag.

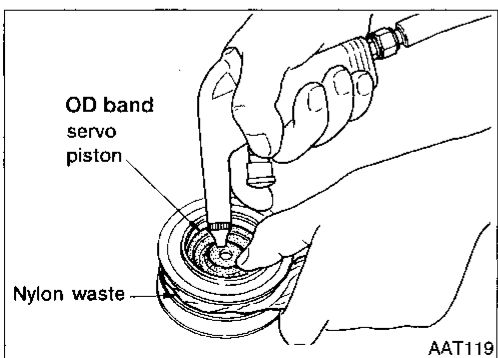


3. Apply compressed air to oil hole in OD servo piston retainer to remove OD band servo piston from retainer.

- Hold OD band servo piston while applying compressed air.


REPAIR FOR COMPONENT PARTS

Band Servo Piston Assembly (Cont'd)


4. Remove D-ring from OD band servo piston.

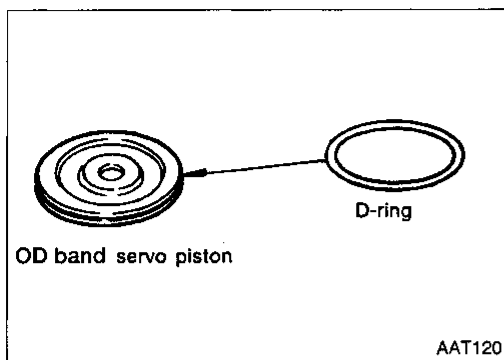


5. Remove O-rings from OD servo piston retainer.

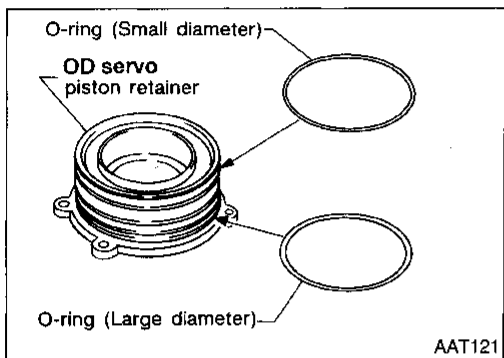


6. Remove band servo piston assembly from servo piston retainer by pushing it forward.

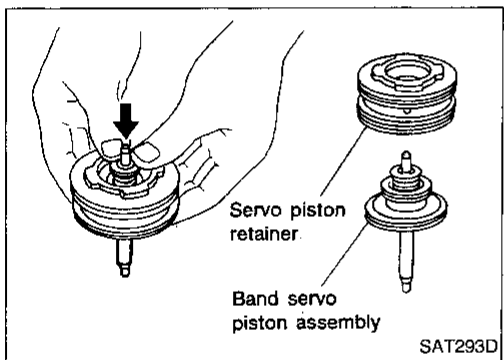

7. Place piston stem end on a wooden block. While pushing servo piston spring retainer down, remove E-ring.

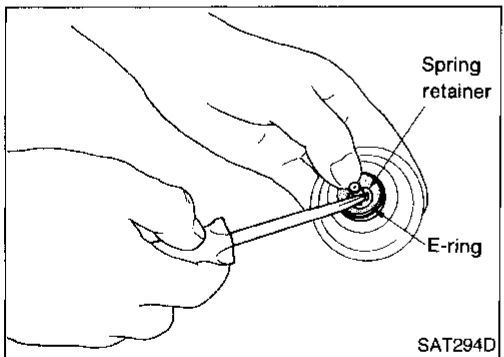


8. Remove OD servo return spring, band servo thrust washer and band servo piston stem from band servo piston.

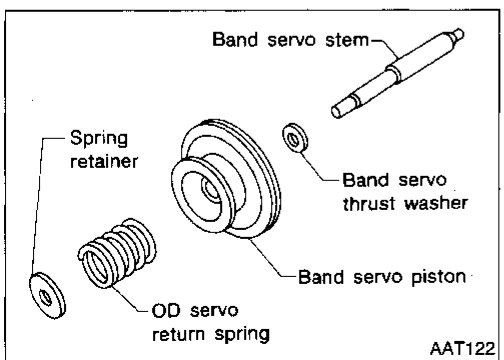


REPAIR FOR COMPONENT PARTS

Band Servo Piston Assembly (Cont'd)

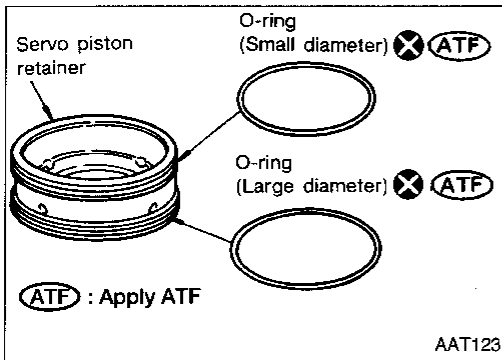

9. Remove O-rings from servo piston retainer.

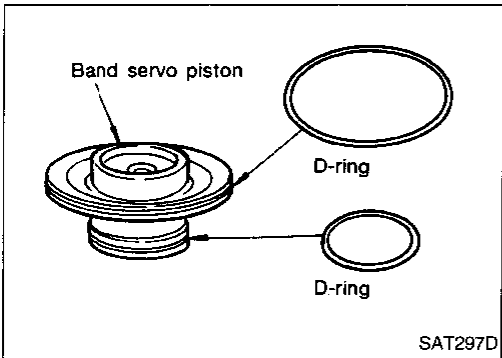


10. Remove D-rings from band servo piston.

INSPECTION

Pistons, retainers and piston stem

- Check frictional surfaces for abnormal wear or damage.

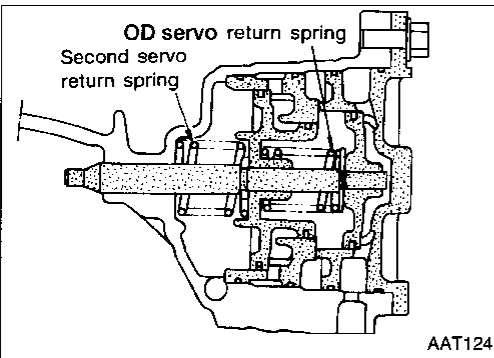


Return springs

- Check for deformation or damage.
- Measure free length and outer diameter.

Inspection standard

Unit: mm (in)

Parts	Free length	Outer diameter
2nd servo return spring	32.5 (1.280)	25.9 (1.020)
OD servo return spring	31.0 (1.220)	21.7 (0.854)

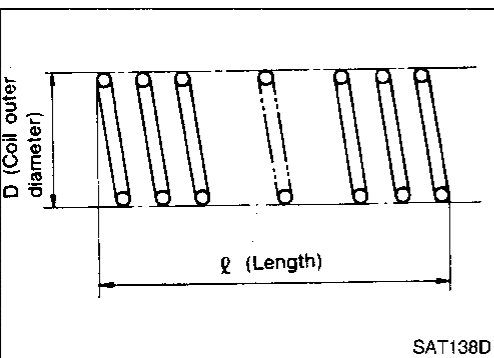


GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX


REPAIR FOR COMPONENT PARTS

Band Servo Piston Assembly (Cont'd)


ASSEMBLY

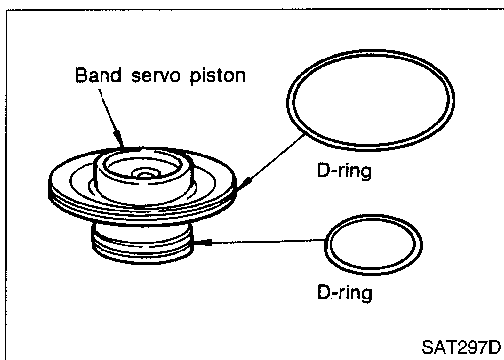


1. Install D-rings to servo piston retainer.
 - Apply ATF to D-rings.
 - Pay attention to position of each O-ring.

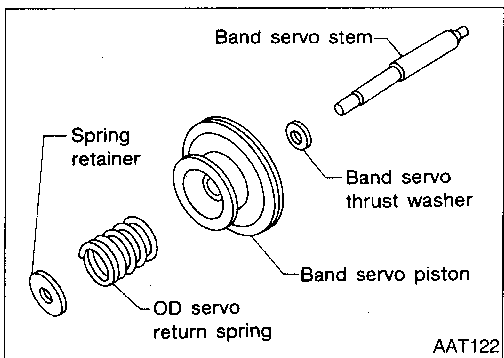


2. Install band servo piston stem, band servo thrust washer, OD servo return spring and spring retainer to band servo piston.

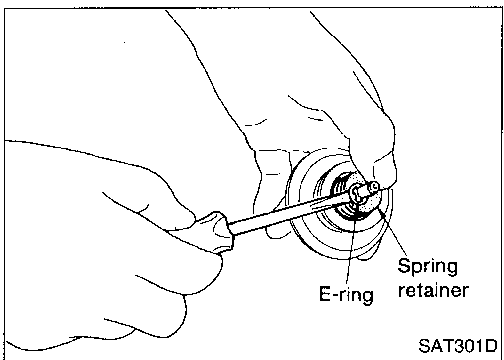

3. Place piston stem end on a wooden block. While pushing servo piston spring retainer down, install E-ring.

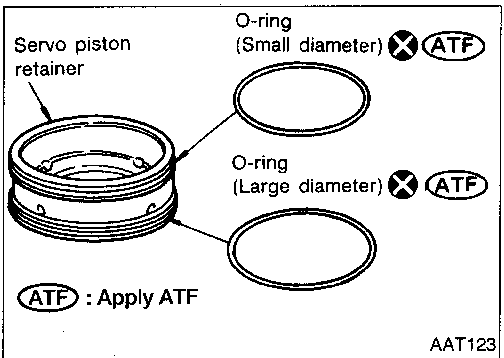


4. Install O-rings onto servo piston retainer.
 - Apply ATF to O-rings.
 - Pay attention to position of each O-ring.

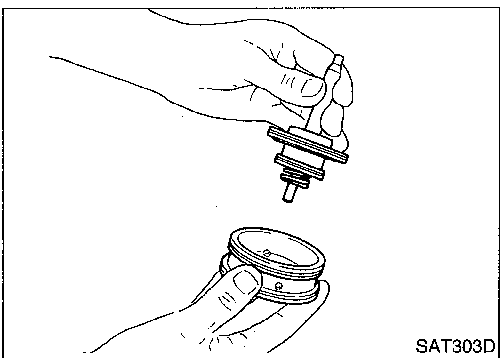


5. Install band servo piston assembly to servo piston retainer by pushing it inward.

REPAIR FOR COMPONENT PARTS


Band Servo Piston Assembly (Cont'd)

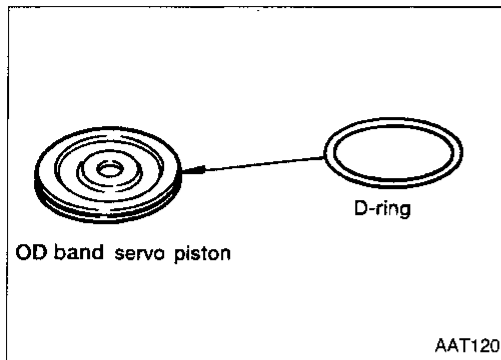


6. Install D-ring to OD band servo piston.
 - Apply ATF to D-ring.

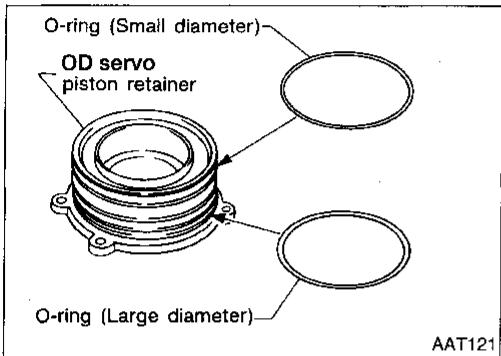


7. Install O-rings to OD servo piston retainer.
 - Apply ATF to O-rings.
 - Pay attention to position of each O-ring.

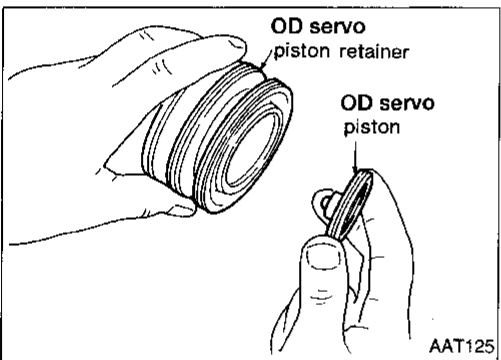

8. Install OD band servo piston to OD servo piston retainer.

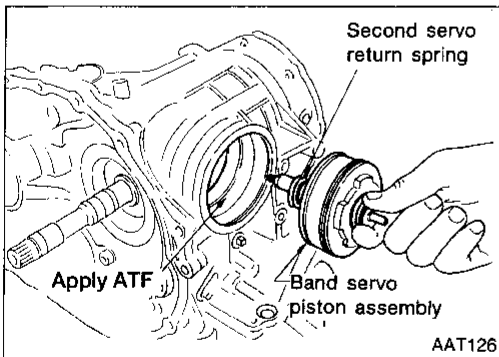

9. Install band servo piston assembly and 2nd servo return spring to transmission case.
 - Apply ATF to O-ring of band servo piston and transmission case.

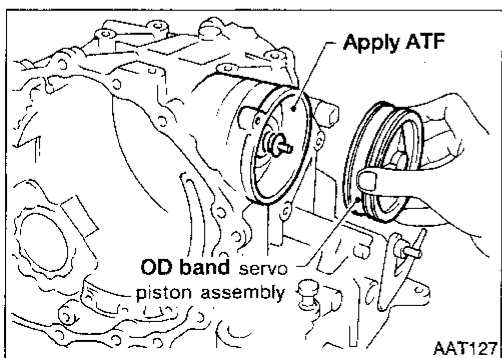

10. Install OD band servo piston assembly to transmission case.
 - Apply ATF to O-ring of band servo piston and transmission case.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA


EL

IDX



REPAIR FOR COMPONENT PARTS

Band Servo Piston Assembly (Cont'd)

11. Install band servo piston snap ring to transmission case.

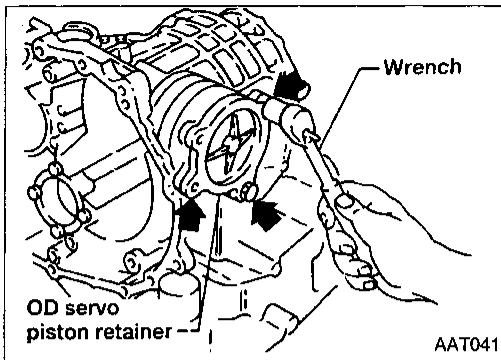


Final Drive — RE4F04A

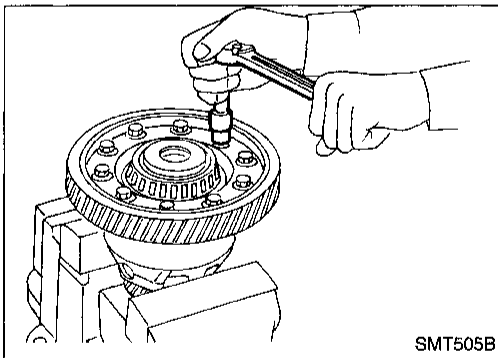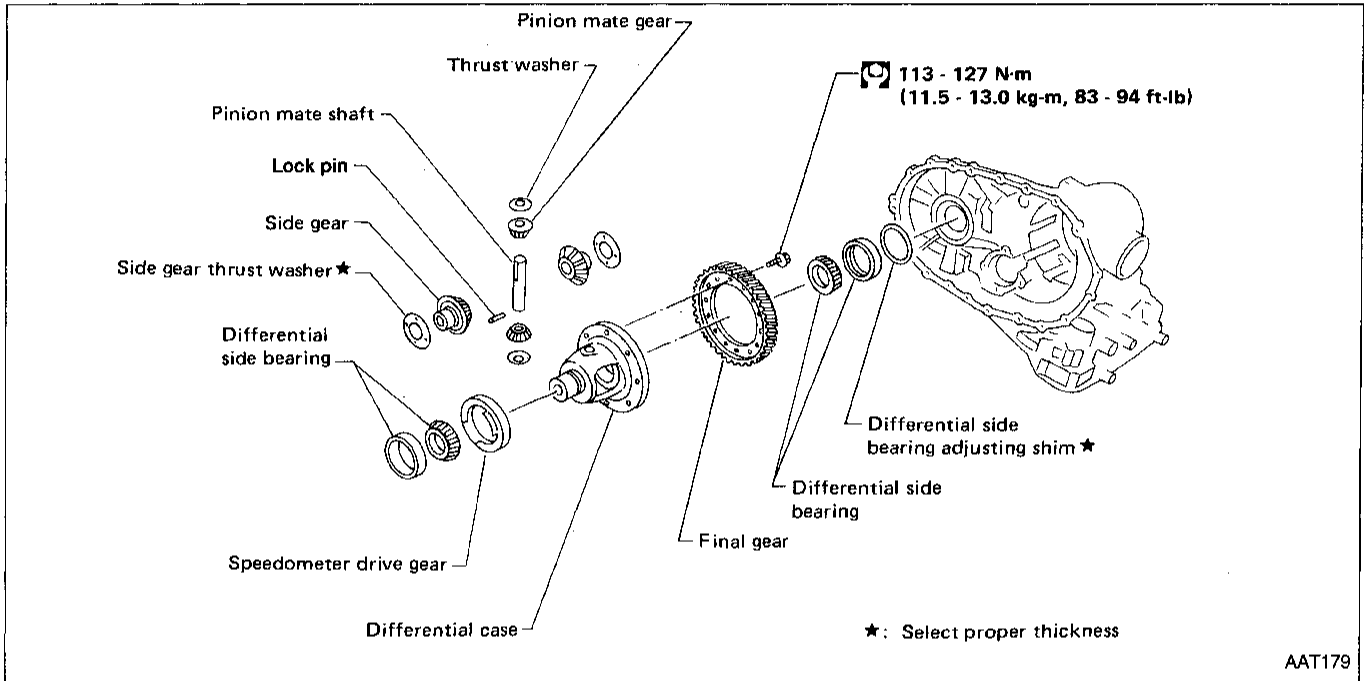

DISASSEMBLY

1. Remove final gear.

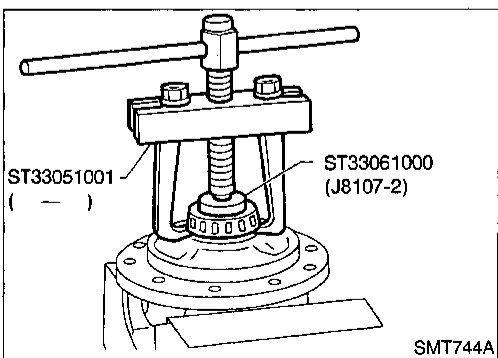


2. Press out differential side bearings.

- Be careful not to mix up the right and left bearings.

REPAIR FOR COMPONENT PARTS

Final Drive — RE4F04A (Cont'd)

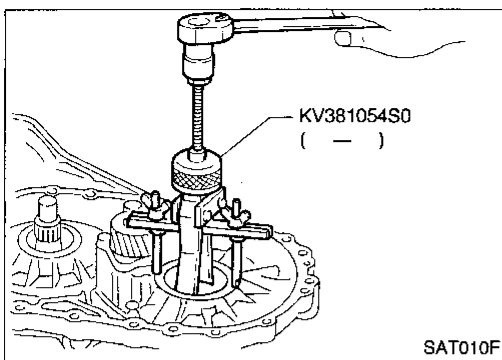

3. Remove differential side bearing outer race, and side bearing adjusting shim from transmission case.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR


ST

BF


HA

EL


IDX

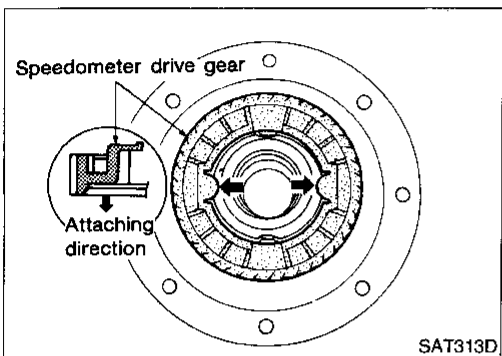


4. Remove speedometer drive gear.

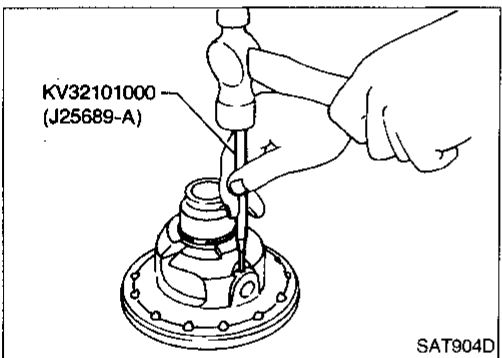

5. Drive out pinion mate shaft lock pin.

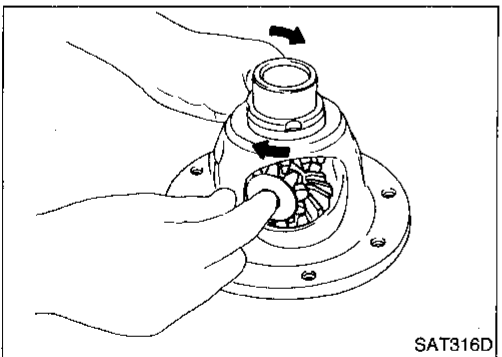

6. Draw out pinion mate shaft lock pin.
7. Remove pinion mate gears and side gears.

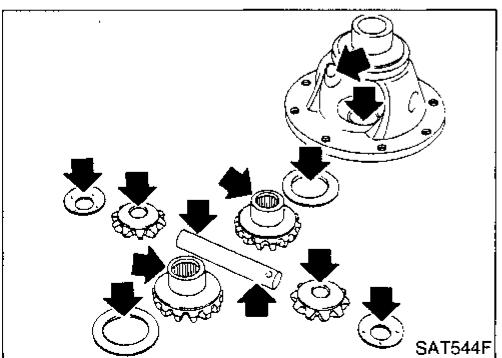

INSPECTION

Gear, washer, shaft and case






- Check mating surfaces of differential case, side gears and pinion mate gears.
- Check washers for wear.

REPAIR FOR COMPONENT PARTS

Final Drive — RE4F04A (Cont'd)

Bearings

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- **When replacing taper roller bearing, replace outer and inner race as a set.**

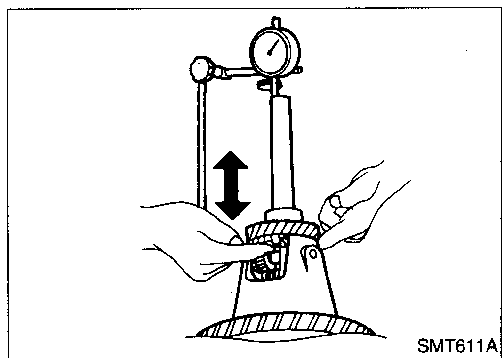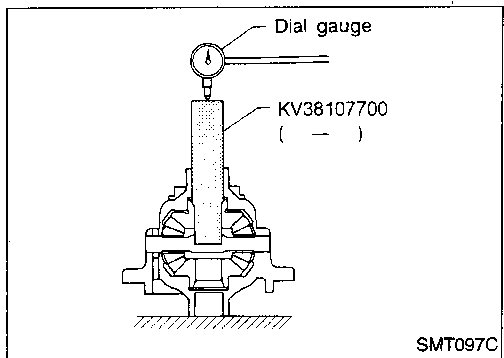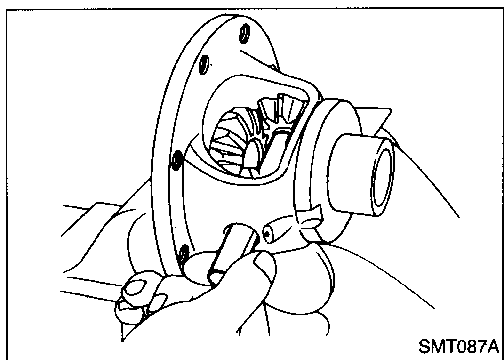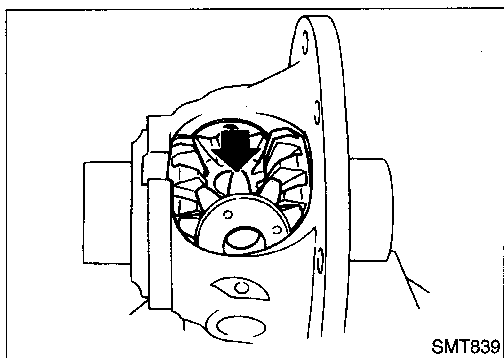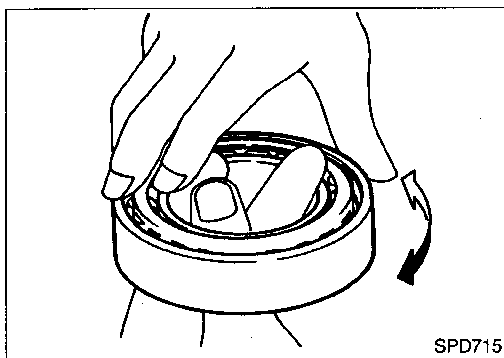

ASSEMBLY

1. Attach side gear thrust washers to side gears, then install pinion mate washers and pinion mate gears in place.

2. Insert pinion mate shaft.

- **When inserting, be careful not to damage pinion mate thrust washers.**

3. Measure clearance between side gear and differential case with washers following the procedure below:

- a. Set Tool and dial indicator on side gear.

- b. Move side gear up and down to measure dial indicator deflection. Always measure indicator deflection on both side gears.

Clearance between side gear and differential case with washers:

0.1 - 0.2 mm (0.004 - 0.008 in)

REPAIR FOR COMPONENT PARTS

Final Drive — RE4F04A (Cont'd)

- c. If not within specification, adjust clearance by changing thickness of side gear thrust washers.

Side gear thrust washer:

Refer to AT-224.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR


ST

BF

HA


EL

IDX

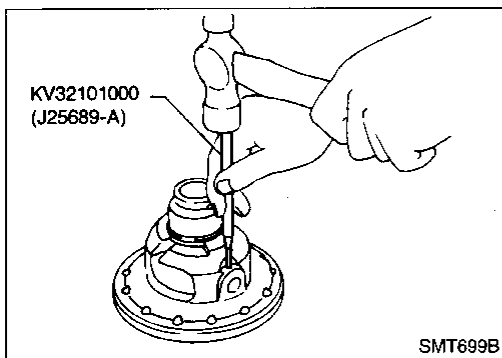


4. Install lock pin.

- Make sure that lock pin is flush with case.

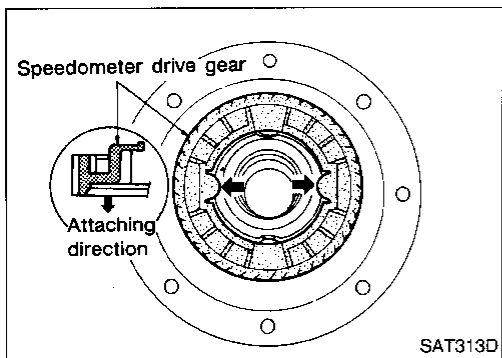


5. Install speedometer drive gear on differential case.

- Align the projection of speedometer drive gear with the groove of differential case.


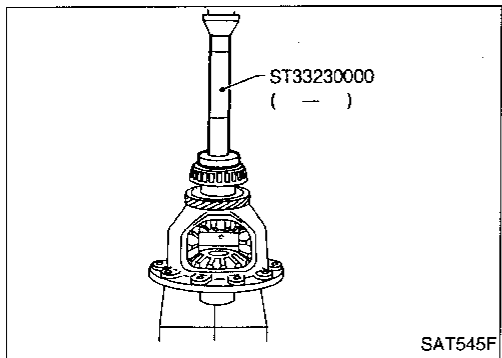


6. Press on differential side bearings.

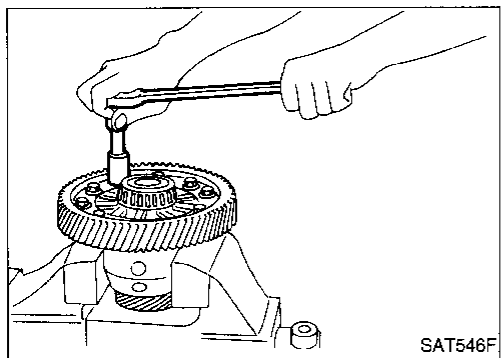


7. Install final gear and tighten fixing bolts in a crisscross pattern.

Final Drive — RE4F04V

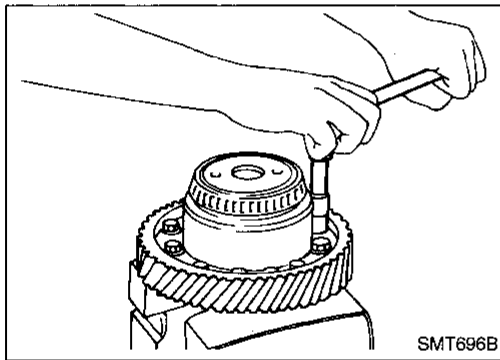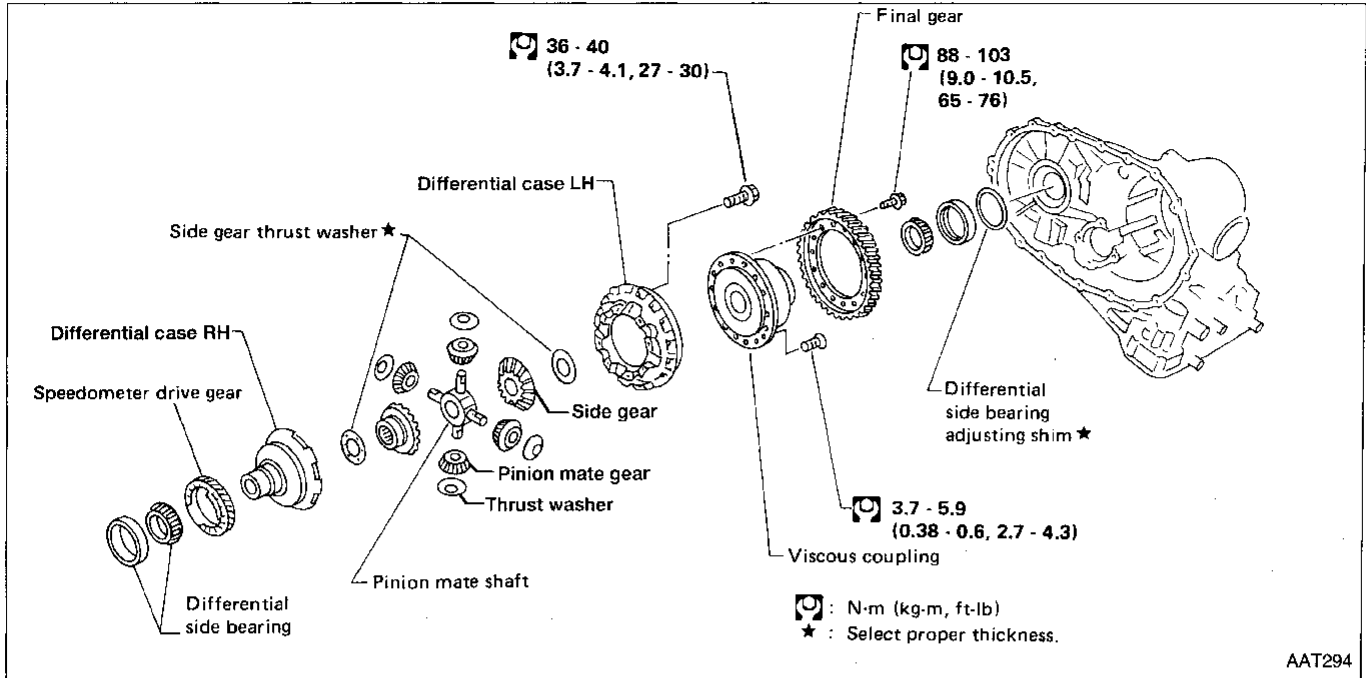


DISASSEMBLY

1. Remove final gear.

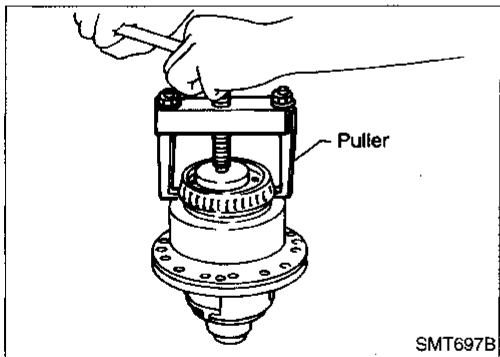


2. Press out differential side bearings.

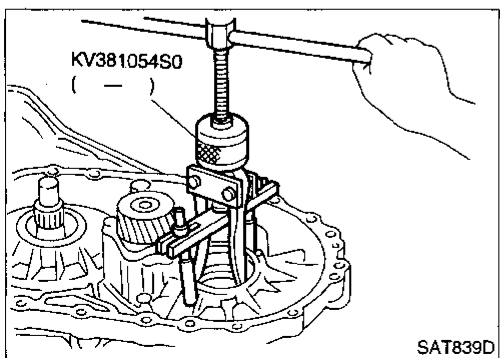


3. Remove differential side bearing outer race, and side bearing adjusting shim from transmission case.

REPAIR FOR COMPONENT PARTS


Final Drive – RE4F04V (Cont'd)

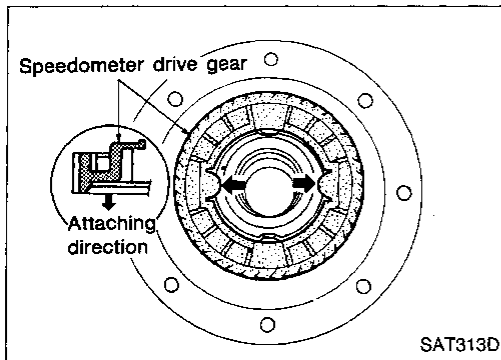

4. Remove speedometer drive gear.

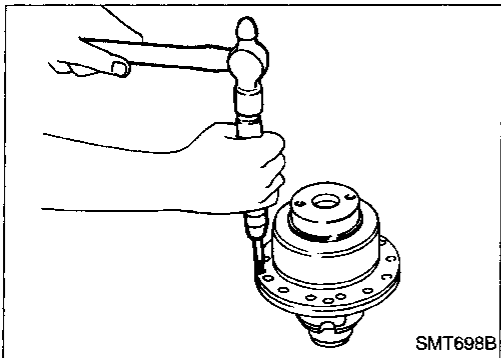


5. Remove viscous coupling.

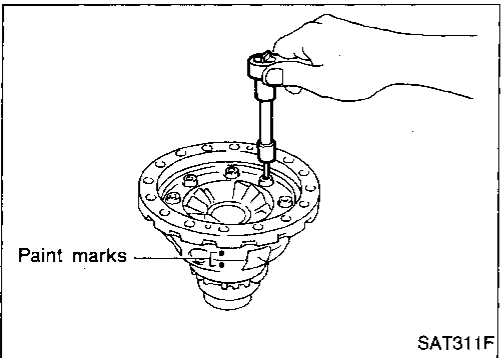

6. Separate differential cases. Make paint marks to identify their original position.

7. Remove pinion mate shaft with gears.

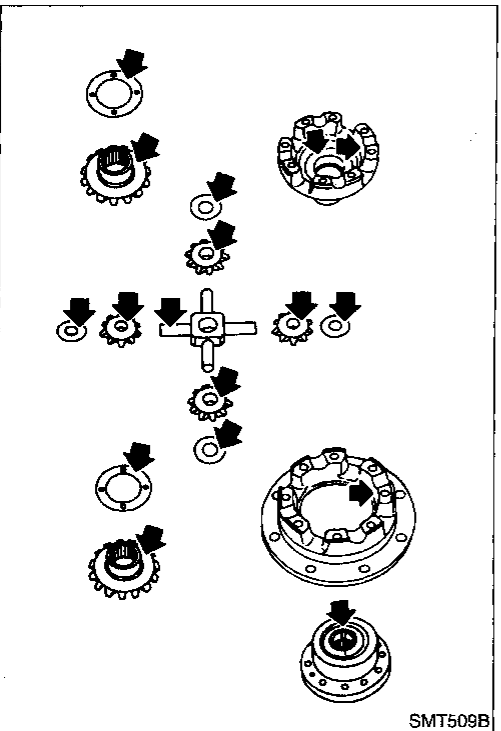

INSPECTION

Gear, washer, shaft and case

- Check mating surfaces of differential case, side gears, pinion mate gears and viscous coupling.
- Check washers for wear.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL



IDX

REPAIR FOR COMPONENT PARTS

Final Drive — RE4F04V (Cont'd)


Viscous coupling

- Check case for cracks.
- Check silicone oil for leakage

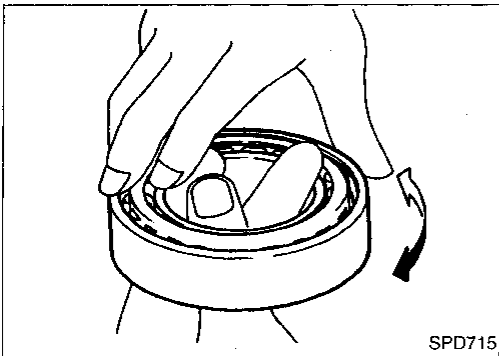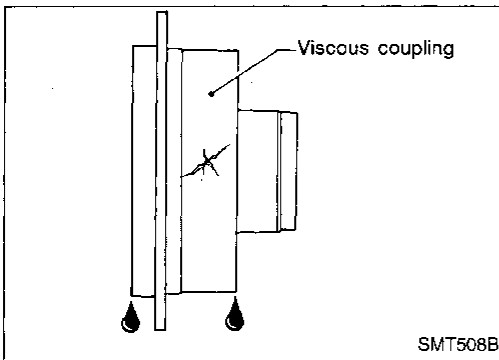

Bearings

- Make sure bearings roll freely and are free from noise, cracks, pitting or wear.
- **When replacing taper roller bearing, replace outer and inner race as a set.**

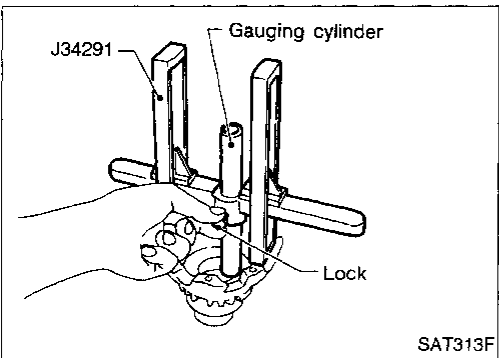


ASSEMBLY

1. Measure clearance between side gear and differential case & viscous coupling with washers using the following procedure:

Differential case side


- a. Set tool on the differential case and lock gauging cylinder in place with set screw.

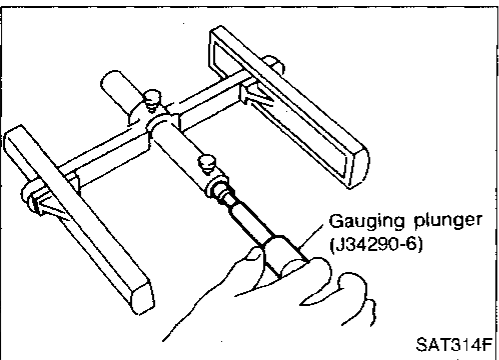

- b. Install gauging plunger into cylinder.

REPAIR FOR COMPONENT PARTS

Final Drive — RE4F04V (Cont'd)

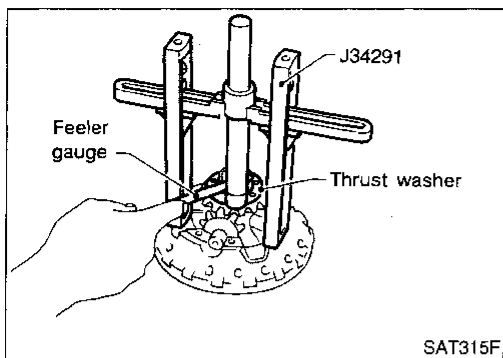

- c. Install pinion mate gears and side gear with thrust washer on differential case.
- d. Set tool and allow gauging plunger to rest on side gear thrust washer.
- e. Measure gap between plunger and cylinder. This measurement should give exact clearance between side gear and differential case with washers.

Standard clearance:

0.1 - 0.2 mm (0.004 - 0.008 in)

- f. If not within specification adjust clearance by changing thickness of side gear thrust washer.

Side gear thrust washers for differential case side:

Refer to AT-224.

CI

MA

EM

LC

EF &

EC

FE

CL

MT

AT

FA

RA

BR


ST

BF

EA


EL

IDX

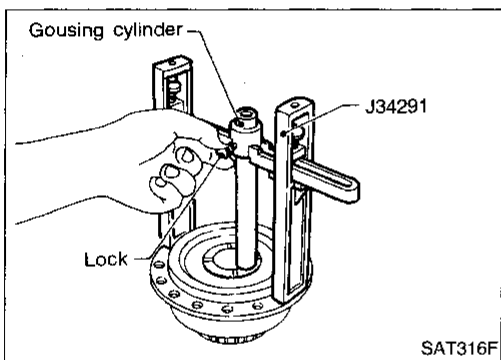

Viscous coupling side


- a. Set tool on viscous coupling and lock gauging cylinder in place with set screw.

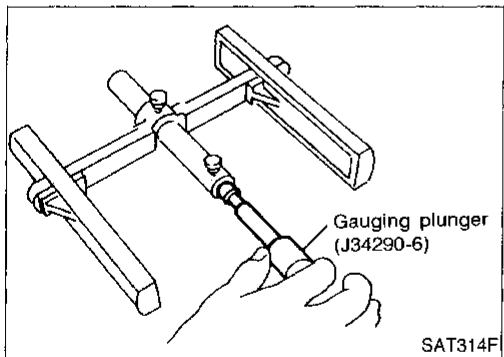

- b. Install gauging plunger into cylinder.

REPAIR FOR COMPONENT PARTS

Final Drive — RE4F04V (Cont'd)

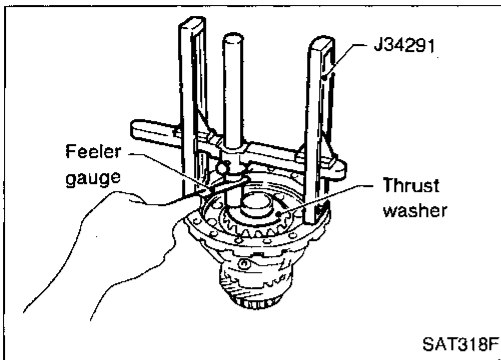

- c. Install pinion mate gears and side gears with original washers on differential cases.

Align paint marks.

- d. Tighten differential case bolts.
- e. Set tool and allow plunger to rest on side gear thrust washer.
- f. Measure gap between plunger and cylinder. This measurement should give exact clearance between side gear and differential case with washers.


Standard clearance:

0.1 - 0.2 mm (0.004 - 0.008 in)


- g. If not within specification, adjust clearance by changing thickness of side gear thrust washer.

Side gear thrust washers for viscous coupling side:


Refer to AT-224.

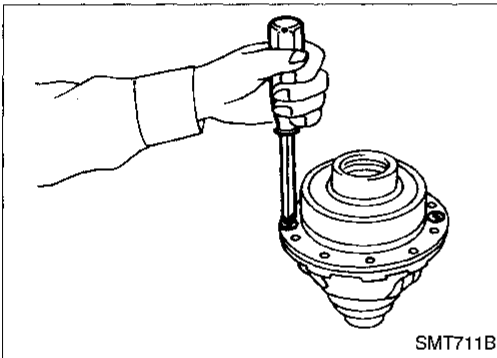

2. Install viscous coupling

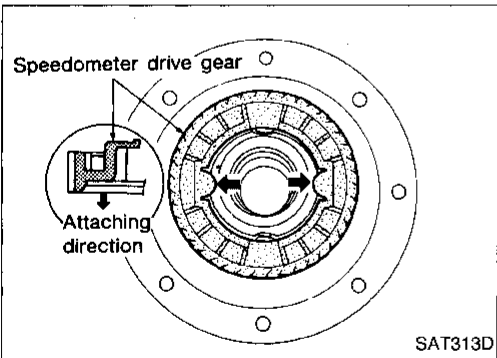



3. Install speedometer drive gear on differential case.
 - **Align the projection of speedometer drive gear with the groove of differential case.**

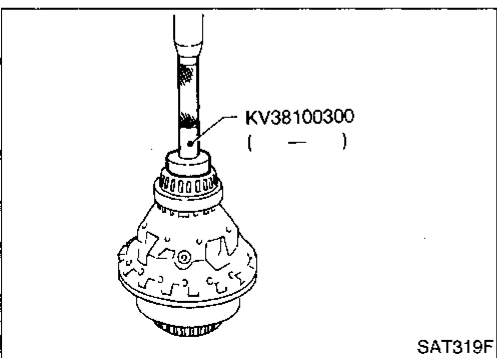

4. Press differential side bearings on differential case.

REPAIR FOR COMPONENT PARTS

Final Drive — RE4F04V (Cont'd)

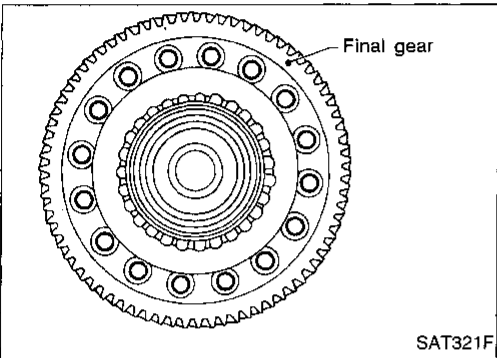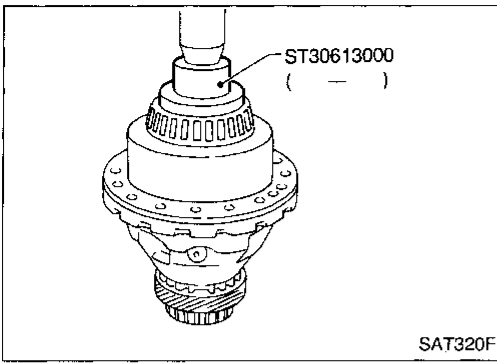

5. Install final gear and tighten fixing bolts in a crisscross pattern.

GI

WA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST






BF

HA

EL

IDX

ASSEMBLY

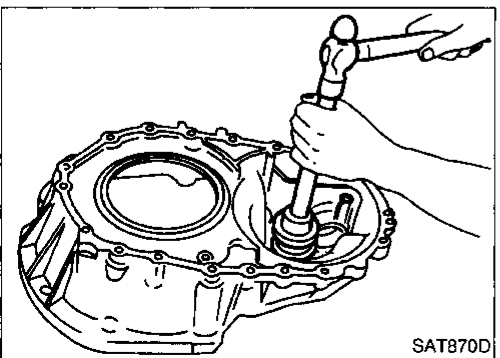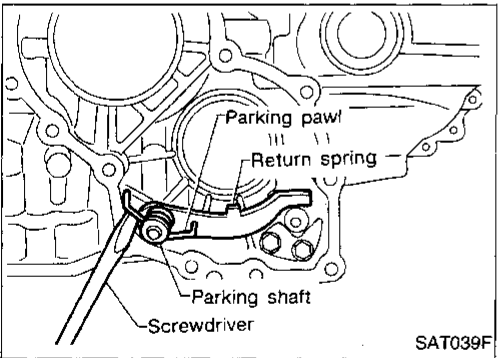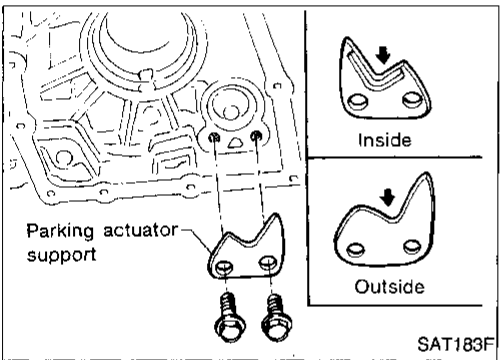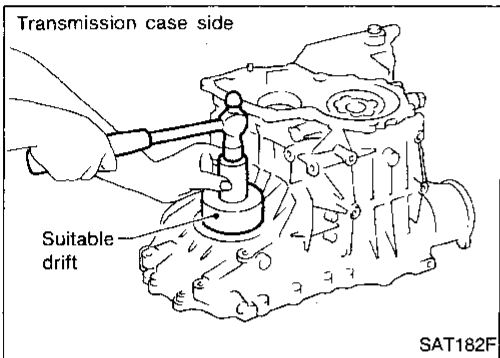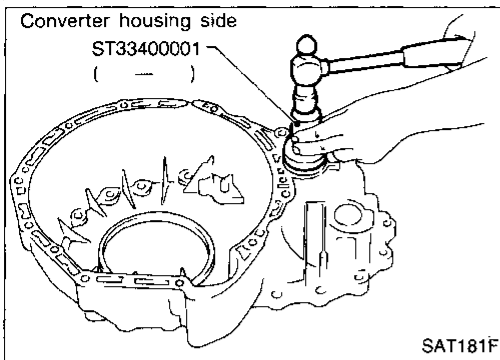

Assembly

1. Install differential side oil seals on transmission case and converter housing.

2. Install parking actuator support to transmission case.
 - Pay attention to direction of parking actuator support.

3. Install parking pawl on transmission case and fix it with parking shaft.
4. Install return spring.


Adjustment

DIFFERENTIAL SIDE BEARING PRELOAD

1. Install differential side bearing outer race without adjusting shim on transmission case.
2. Install differential side bearing outer race on converter housing.


ASSEMBLY

Adjustment (Cont'd)

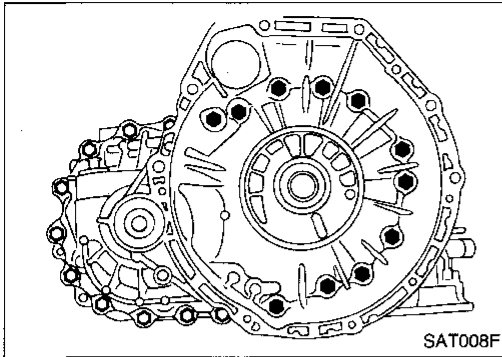

3. Place final drive assembly on transmission case.
4. Install transmission case on converter housing and tighten transmission case fixing bolts to the specified torque.


GI
MA
EM

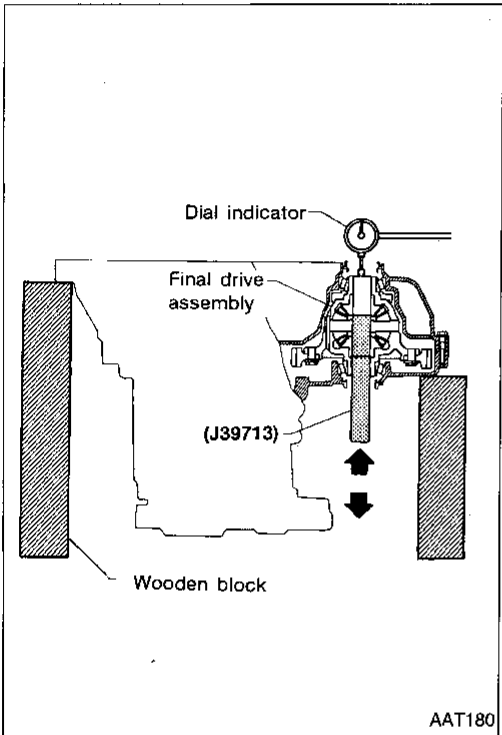

— RE4F04A —

5. Attach dial indicator on differential case at converter housing side.
6. Insert Tool into differential side gear from transmission case side.
7. Move Tool up and down and measure dial indicator deflection.

LC
EF &
EC
FE

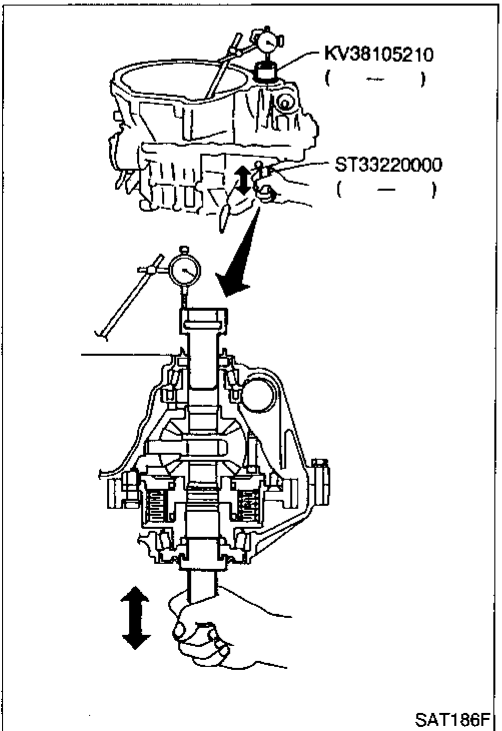

— RE4F04V —

5. Set Tool on differential case at converter housing side and attach dial indicator on Tool.
6. Insert the other Tool viscous coupling from transmission case side.
7. Move Tool up and down and measure dial indicator deflection.

CL
MT
AT
FA
RA
BR

— RE4F04A and RE4F04V —

8. Select proper thickness of differential side bearing adjusting shim(s).

$$\text{Suitable shim thickness} = \text{Dial indicator deflection} + \text{Specified bearing preload}$$

Differential side bearing adjusting shim:

Refer to AT-224.



Bearing preload:

0.05 - 0.09 mm (0.0020 - 0.0035 in)

ST
BF
HA
EL
IDX

ASSEMBLY

Adjustment (Cont'd)

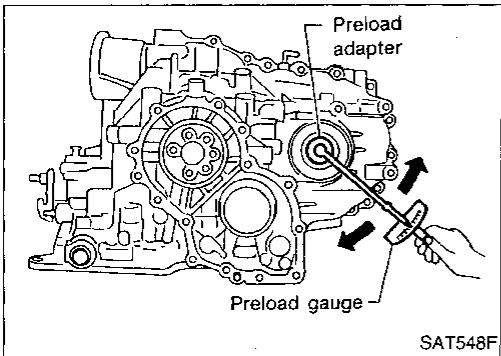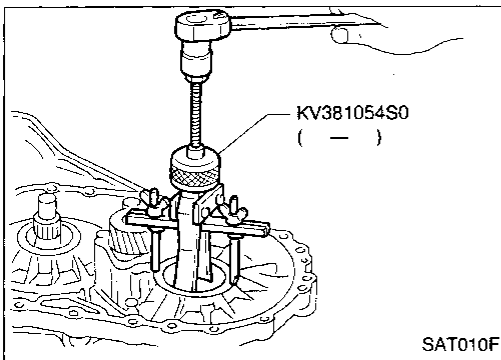


9. Remove converter housing from transmission case.
10. Remove final drive assembly from transmission case.
11. Remove differential side bearing outer race from transmission case.
12. Reinstall differential side bearing outer race and shim(s) selected from SDS table on transmission case.
13. Reinstall converter housing on transmission case and tighten transmission case fixing bolts to the specified torque.

14. Insert Tool into viscous coupling and measure turning torque of final drive assembly.

- When measuring turning torque, turn final drive assembly in both directions several times to seat bearing rollers correctly.


Turning torque of final drive assembly (New bearing):
0.78 - 1.37 N·m (8.0 - 14.0 kg-cm, 6.9 - 12.2 in-lb)

- When old bearing is used again, turning torque will be slightly less than the above.
- Make sure torque is close to the specified range.

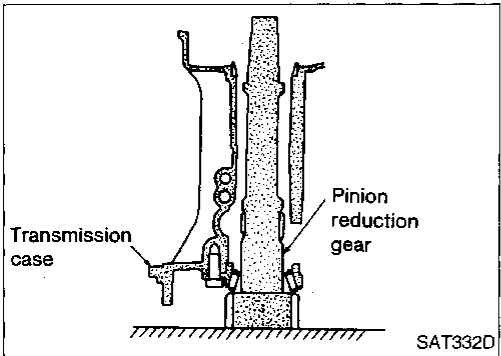

REDUCTION GEAR BEARING PRELOAD


1. Remove transmission case and final drive assembly from converter housing.
2. Select proper thickness of reduction gear bearing adjusting shim using the following procedures.
 - a. Place reduction gear on transmission case as shown.

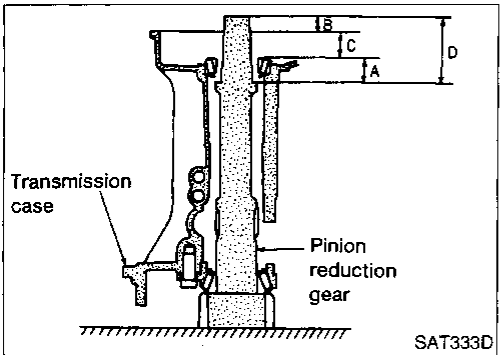

- b. Place idler gear bearing on transmission case.
- c. Measure dimensions "B" "C" and "D" and calculate dimension "A".

$$A = D - (B + C)$$


"A": Distance between the surface of idler gear bearing inner race and the adjusting shim mating surface of reduction gear.

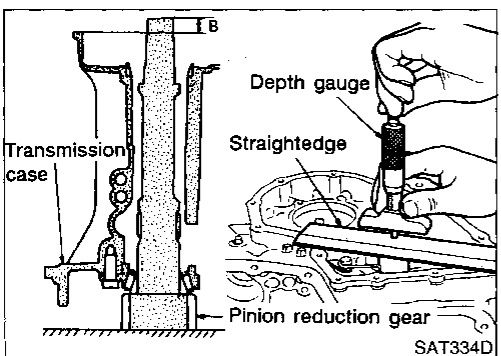

- Measure dimension "B" between the end of reduction gear and the surface of transmission case.
- Measure dimension "B" in at least two places.

ASSEMBLY

Adjustment (Cont'd)

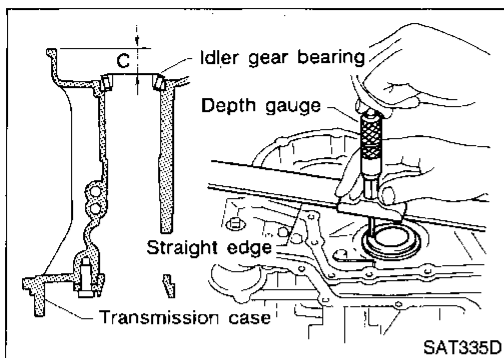

- Measure dimension "C" between the surface of idler gear bearing inner race and the surface of transmission case.
- Measure dimension "C" in at least two places.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR


ST

BF


HA

EL

IDX

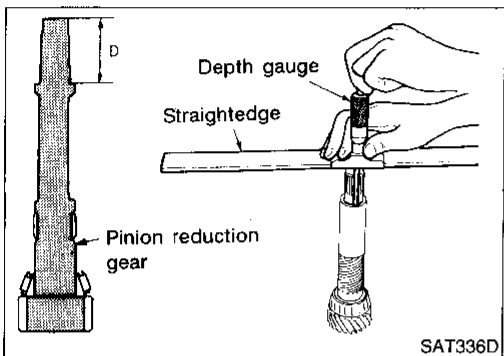

- Measure dimension "D" between the end of reduction gear and the adjusting shim mating surface of reduction gear.
- Measure dimension "D" in at least two places.
- Calculate dimension "A"
 $A = D - (B + C)$

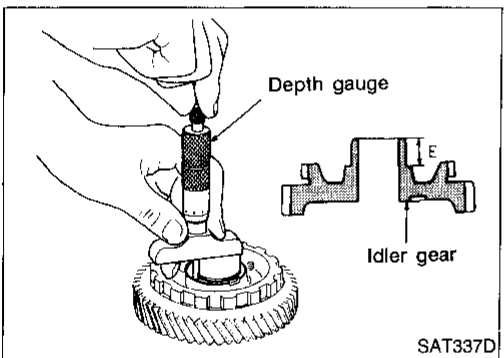

- d. Measure dimension "E" between the end of idler gear and the idler gear bearing inner race mating surface of idler gear.
- Measure dimension "E" in at least two places.

- e. Select proper thickness of reduction gear bearing adjusting shim.

Proper shim thickness = A - E - 0.5 mm (0.0020 in)*


(* ... Bearing preload)

Reduction gear bearing adjusting shim: Refer to AT-225.

HA

EL


IDX

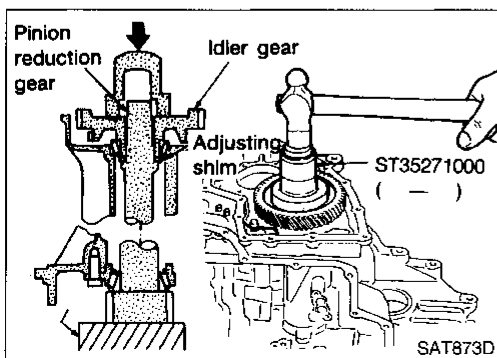


3. Install reduction gear and reduction gear bearing adjusting shim selected in step 2-e on transmission case.
 4. Press idler gear bearing inner race on idler gear.
 5. Press idler gear on reduction gear.
- Press idler gear so that idler gear can be locked by parking pawl.

ASSEMBLY

Adjustment (Cont'd)

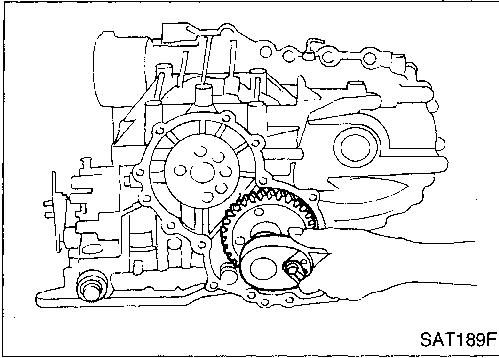

6. Tighten idler gear lock nut to the specified torque.
 - Lock idler gear with parking pawl when tightening lock nut.

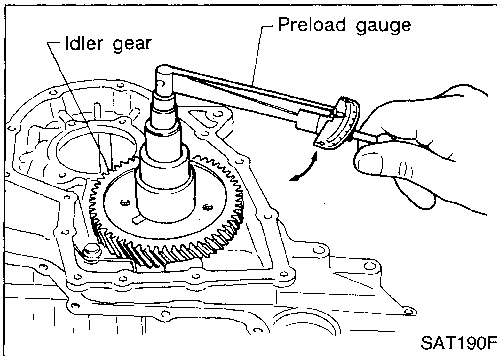


7. Measure turning torque of reduction gear.
 - When measuring turning torque, turn reduction gear in both directions several times to seat bearing rollers correctly.


Turning torque of reduction gear:

0.05 - 0.39 N·m (0.5 - 4.0 kg-cm, 0.43 - 3.47 in-lb)

- If turning torque is out of specification, decrease or increase thickness of reduction gear bearing adjusting shim.

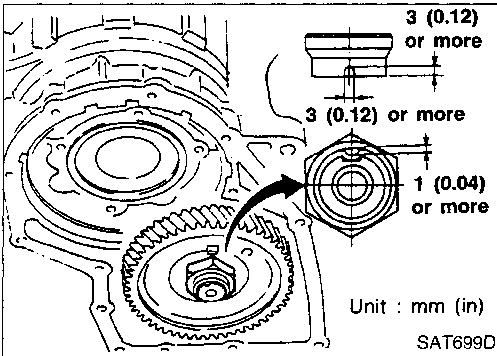


8. After properly adjusting turning torque, clinch idler gear lock nut as shown.

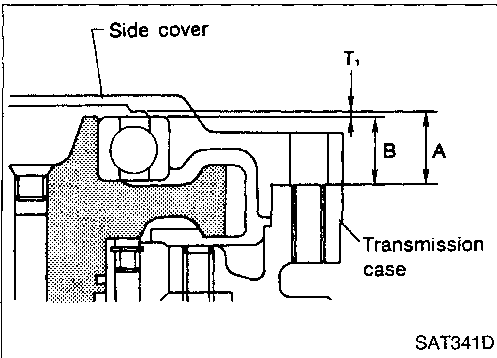

OUTPUT SHAFT END PLAY


- Measure clearance between side cover and the end of the output shaft bearing.
- Select proper thickness of adjusting shim so that clearance is within specifications.

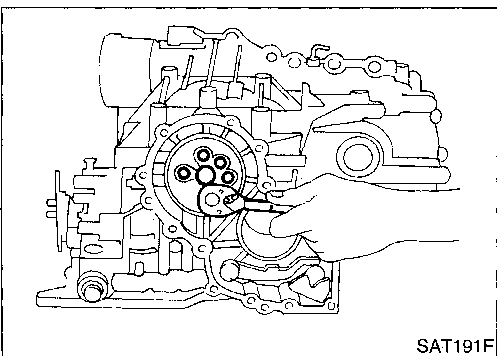


1. Install bearing retainer for output shaft.

ASSEMBLY


Adjustment (Cont'd)

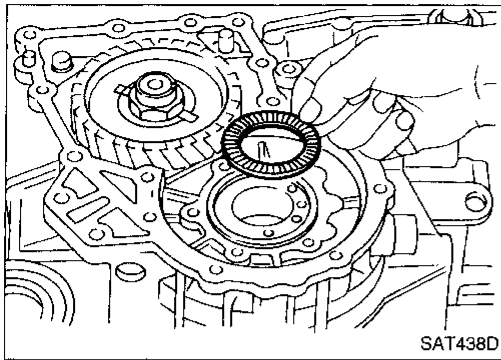

2. Install output shaft thrust needle bearing on bearing retainer.

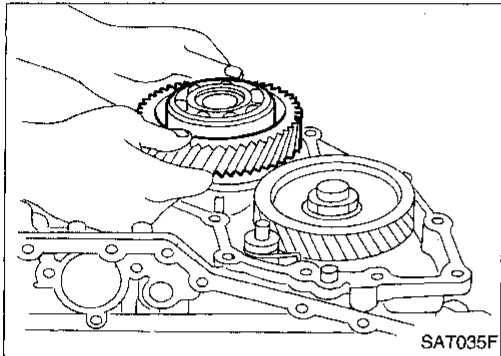


3. Install output shaft on transmission case.

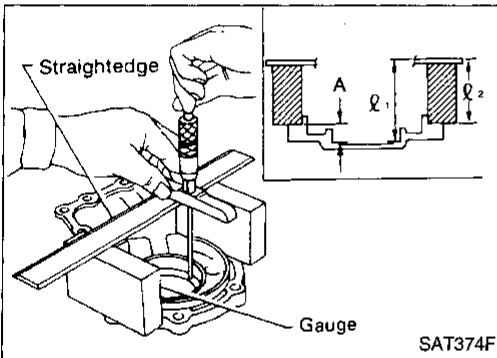

4. Measure dimensions " l_1 " and " l_2 " at side cover and then calculate dimension "A".

- Measure dimension " l_1 " and " l_2 " in at least two places.
- "A": Distance between transmission case fitting surface and adjusting shim mating surface.

$$A = l_1 - l_2 \quad l_2: \text{Height of gauge}$$

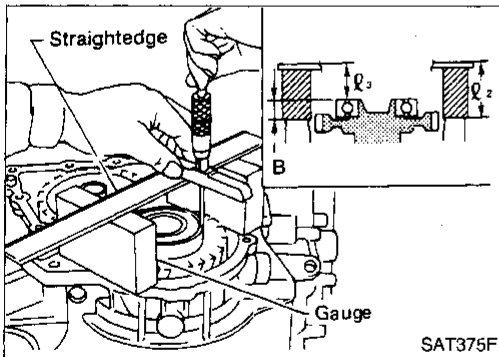


5. Measure dimensions " l_2 " and " l_3 " and then calculate dimension "B".

- Measure " l_2 " and " l_3 " in at least two places.

- "B": Distance between the end of output shaft bearing outer race and the side cover fitting surface of transmission case.

$$B = l_2 - l_3 \quad l_2: \text{Height of gauge}$$

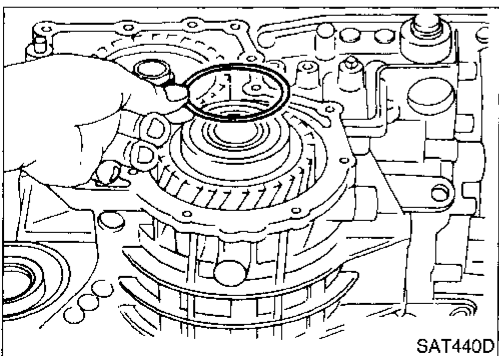

6. Select proper thickness of adjusting shim so that output shaft end play (clearance between side cover and output shaft bearing) is within specifications.

Output shaft end play (A - B):

0 - 0.15 mm (0 - 0.0059 in)





Output shaft end play adjusting shim:

Refer to AT-226.

7. Install adjusting shim on output shaft bearing.

GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

ASSEMBLY

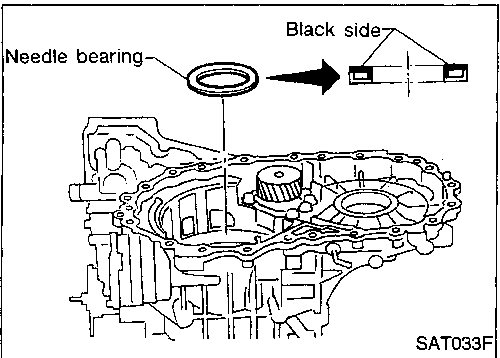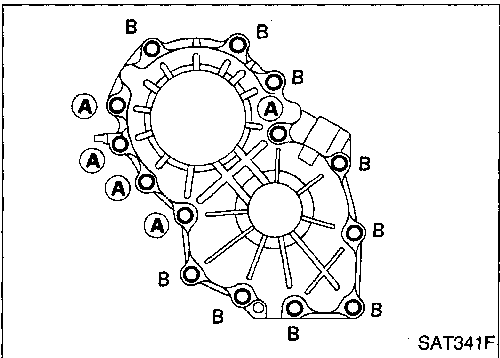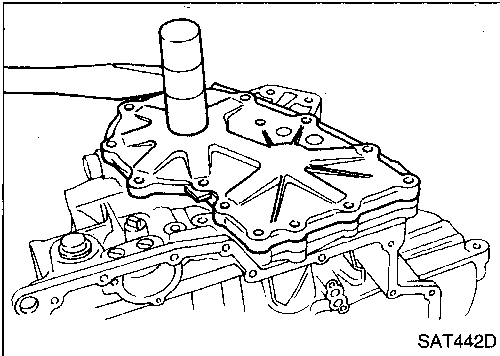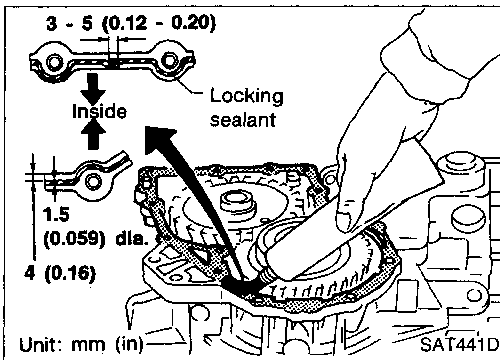


Assembly

1. Apply locking sealant to transmission case as shown in illustration.
 - Wash mating surfaces with a brake cleaner type solvent, allow to dry.
 - The mating surfaces must be smooth and free of oil.
 - Use an anaerobic liquid gasket Loctite P/N 51813 or equivalent to mating surface of side cover.
2. Set side cover on transmission case.
3. Tighten side cover fixing bolts to specified torque.
 - **Do not mix bolts (A) and (B).**
 - **Always replace bolts (A) as they are self-sealing bolts.**
4. Remove paper rolled around bearing retainer.
5. Install thrust washer on bearing retainer.
 - **Apply petroleum jelly to thrust washer.**


ASSEMBLY

Assembly (Cont'd)

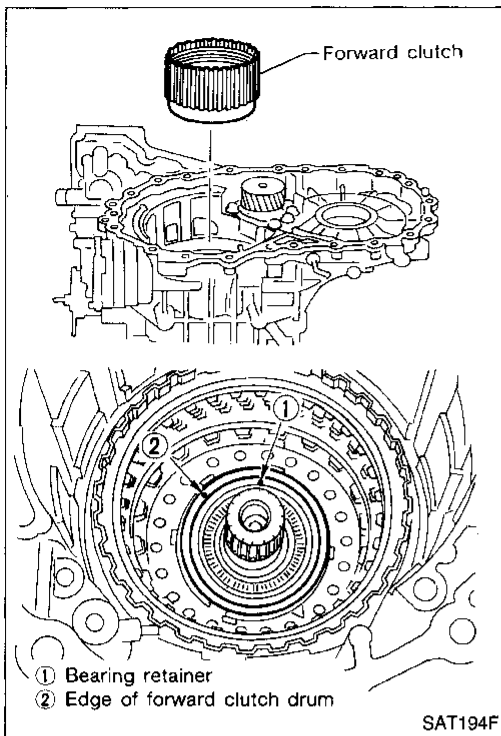


6. Install forward clutch assembly.
 - Align teeth of low & reverse brake drive plates before installing.
 - Make sure that bearing retainer seal rings are not spread.
 - If forward clutch assembly is correctly seated, points ① and ② are at almost same level.

GI
MA
EM
LC
EF &
EC
FE
CL
MT

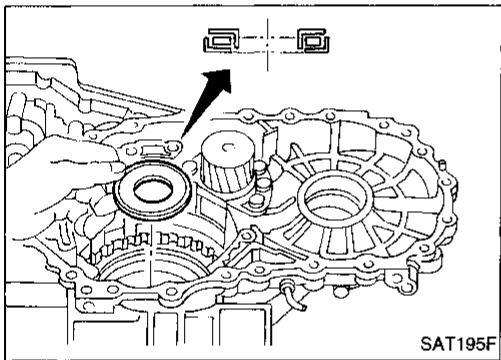


7. Install thrust needle bearing on bearing retainer.
 - Apply petroleum jelly to thrust needle bearing.
 - Pay attention to direction of thrust needle bearing.

AT

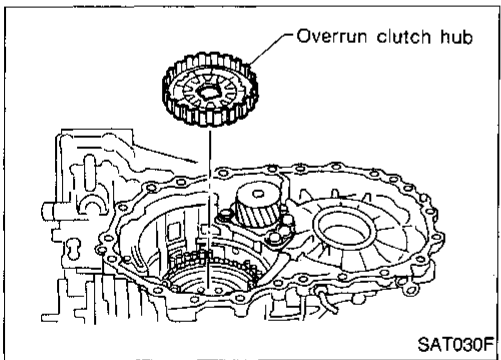

8. Install overrun clutch hub.
 - Apply petroleum jelly to thrust washers.
 - Align teeth of overrun clutch drive plates before installing.

FA
RA
BR

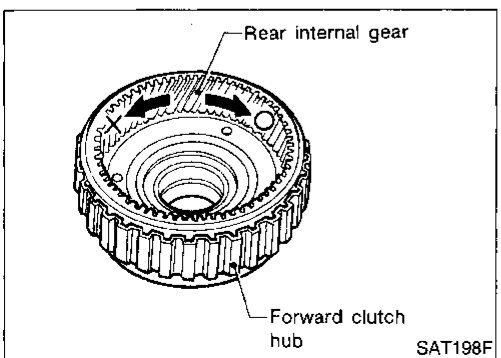


9. Hold forward clutch hub and turn rear internal gear. Check overrun clutch hub for correct directions of lock and unlock.
 - If not shown as illustration, check installed direction of forward one-way clutch.


ST
BF
HA
EL
IDX

ASSEMBLY


Assembly (Cont'd)

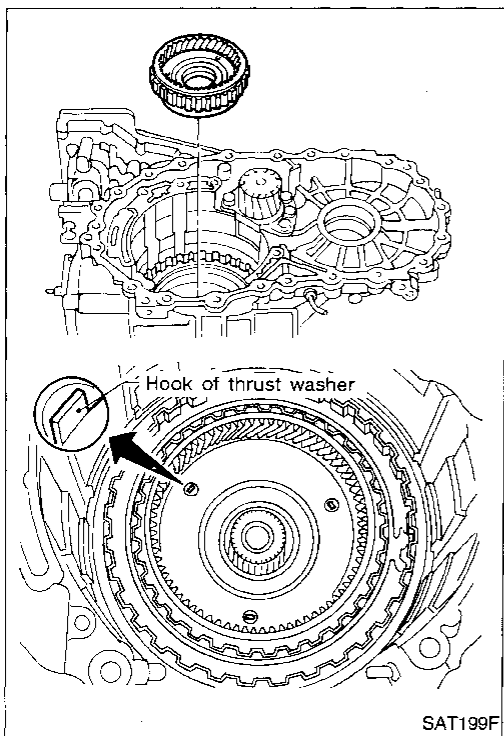


10. Install forward clutch hub and rear internal gear assembly.
- Align teeth of forward clutch drive plates before installing.
 - Check three hooks of thrust washer are correctly aligned after installing.

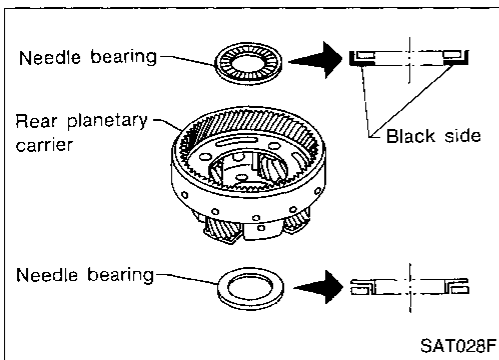

11. Install rear planetary carrier assembly and rear sun gear according to the following procedures.
- a. Install needle bearings on rear planetary carrier.
- Apply petroleum jelly to needle bearings.
 - Pay attention to direction of needle bearings.

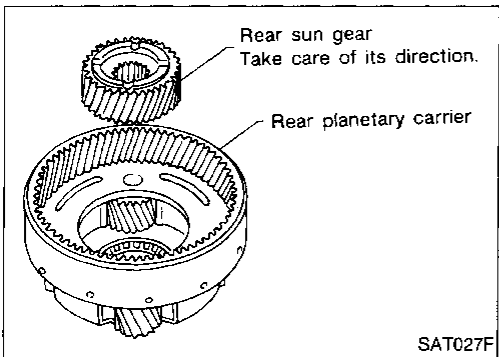


- b. Install rear sun gear on rear planetary carrier.
- Pay attention to direction of rear sun gear.

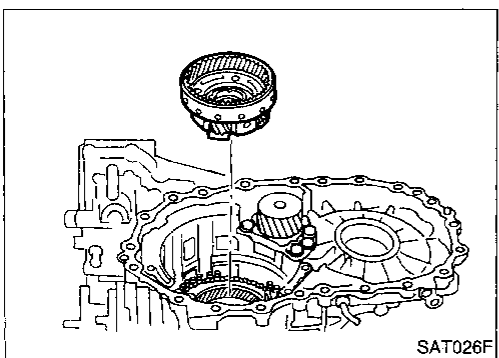


- c. Install rear planetary carrier on transmission case.

ASSEMBLY


Assembly (Cont'd)

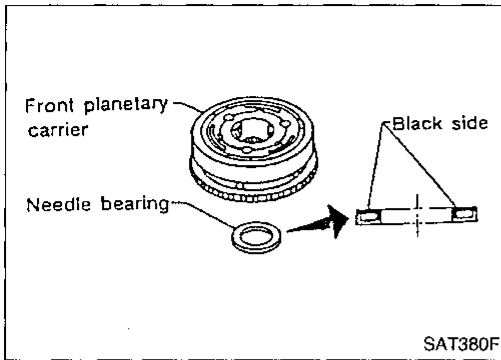


12. Install thrust needle bearing on front planetary carrier, then install them together on transmission case.
- Apply petroleum jelly to thrust needle bearing.
 - Pay attention to direction of thrust needle bearing.

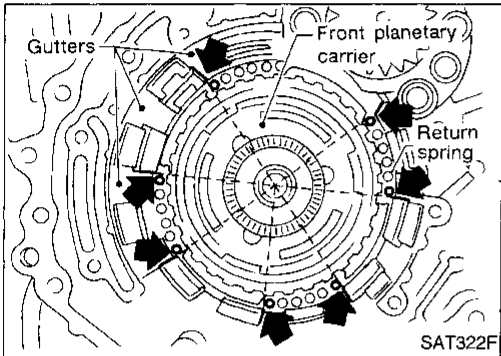

13. Install low and reverse brake piston according to the following procedures.
- a. Set and align return springs to transmission case gutters as shown in illustration.

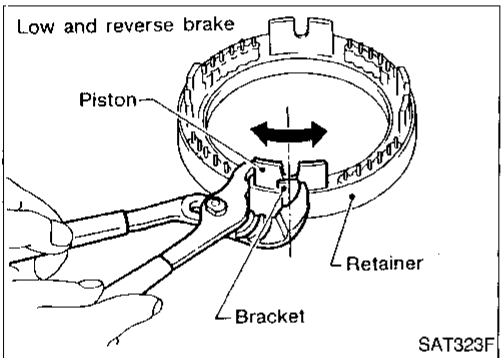

- b. Set and align piston with retainer.

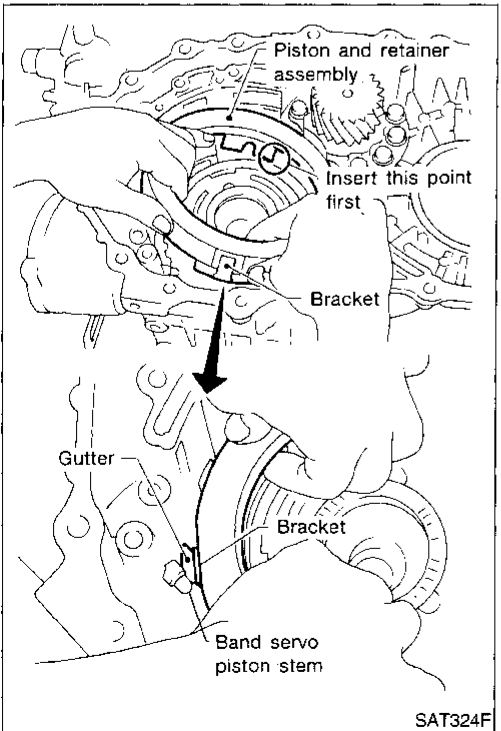

- c. Install piston and retainer assembly on the transmission case.
- Align bracket to specified gutter as indicated in illustration.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF


HA

EL

IDX

ASSEMBLY


Assembly (Cont'd)

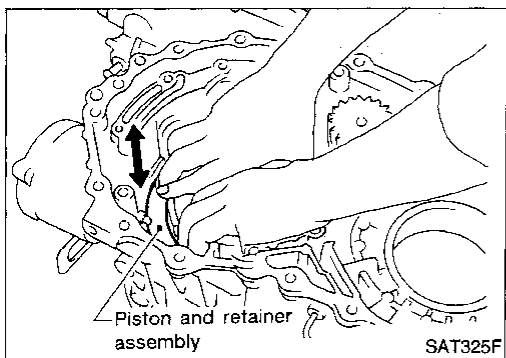


- d. Check that each protrusions of piston is correctly set to corresponding return spring as follows.

Push piston and retainer assembly evenly and confirm they move smoothly.


If they can not move smoothly, remove piston and retainer assembly and align return spring correctly as instructed in step "a".

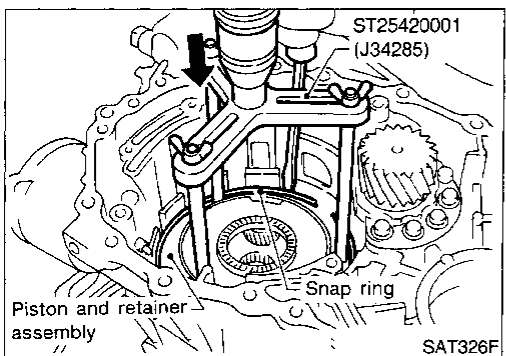


- e. Push down piston and retainer assembly and install snap ring.

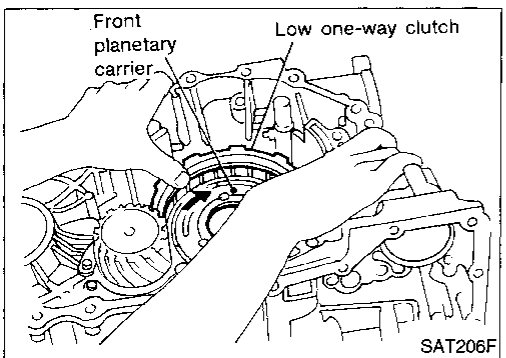

14. Install low one-way clutch to front planetary carrier by turning carrier in the direction of the arrow shown.

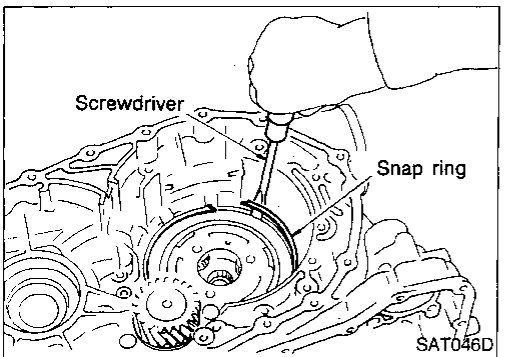


15. Install snap ring with screwdriver.

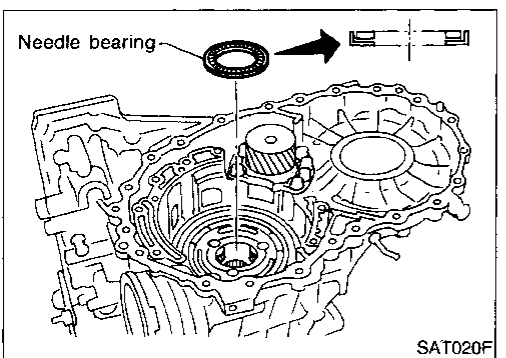

16. Install needle bearing on transmission case.
- **Apply petroleum jelly to needle bearing.**
 - **Pay attention to direction of needle bearing.**

ASSEMBLY

Assembly (Cont'd)

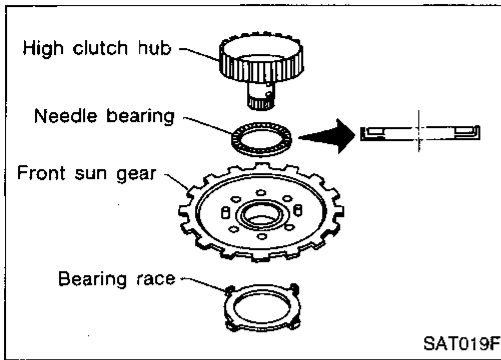

17. Install bearing race, needle bearing and high clutch hub on front sun gear.

- Apply petroleum jelly to needle bearing.
- Pay attention to direction of needle bearing.

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR


ST

BF


HA

EL

IDX

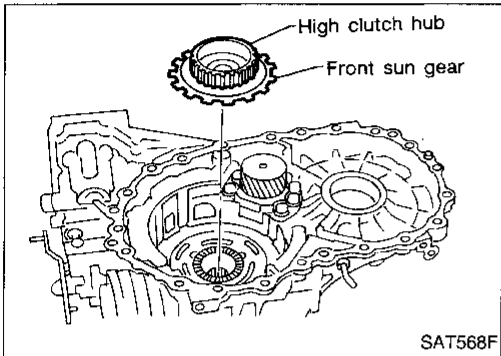


18. Install high clutch hub and front sun gear on transmission case.

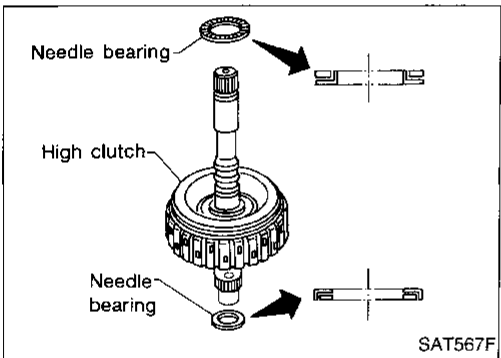

19. Install needle bearings on high clutch drum.


- Apply petroleum jelly to needle bearings.
- Pay attention to direction of needle bearings.

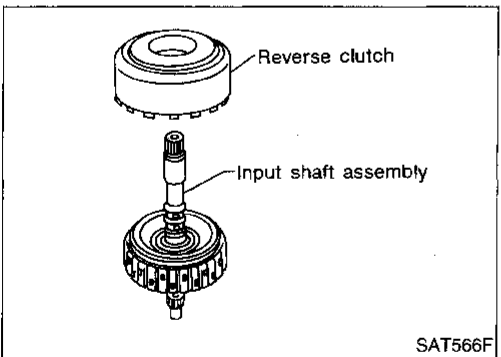

20. Remove paper rolled around input shaft.

21. Install input shaft assembly in reverse clutch.

- Align teeth of reverse clutch drive plates before installing.

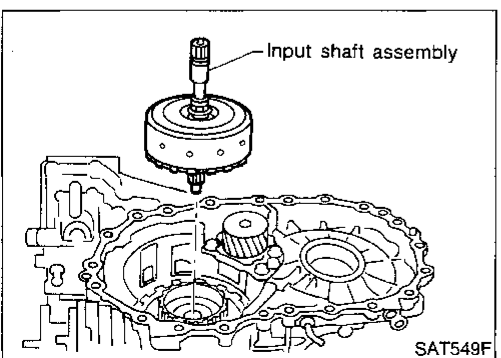

22. Install reverse clutch assembly on transmission case.


- Align teeth of high clutch drive plates before installing.

ASSEMBLY

Adjustment


When any parts listed in the following table are replaced, total end play or reverse clutch end play must be adjusted.

Part name	Item	
	Total end play	Reverse clutch end play
Transmission case	•	•
Overrun clutch hub	•	•
Rear internal gear	•	•
Rear planetary carrier	•	•
Rear sun gear	•	•
Front planetary carrier	•	•
Front sun gear	•	•
High clutch hub	•	•
High clutch drum	•	•
Oil pump cover	•	•
Reverse clutch drum	•	•

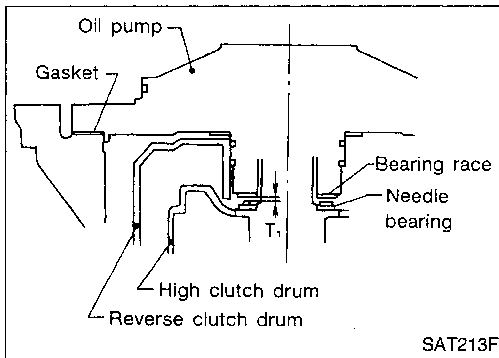


TOTAL END PLAY

- Adjust total end play "T₁".

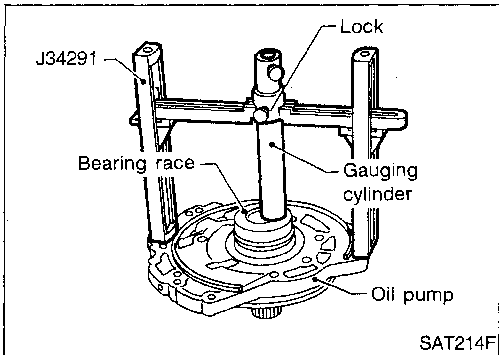






- With original bearing race installed, place Tool onto oil pump. The long ends of legs should be placed firmly on machined surface of oil pump assembly and gauging cylinder should rest on top of bearing race. Lock gauging cylinder in place with set screw.

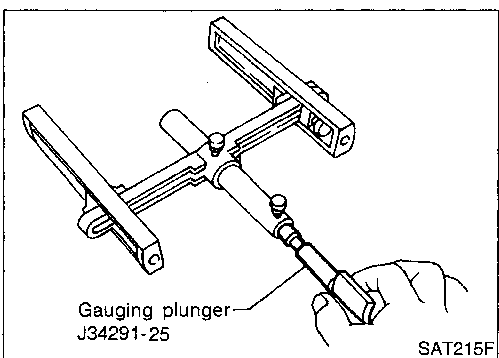

- Install gauging plunger into cylinder.

ASSEMBLY

Adjustment (Cont'd)

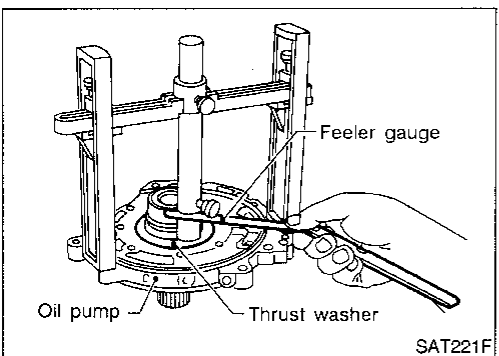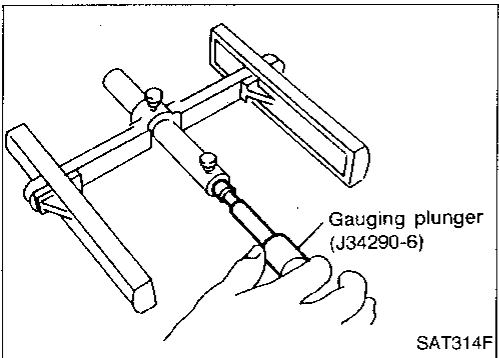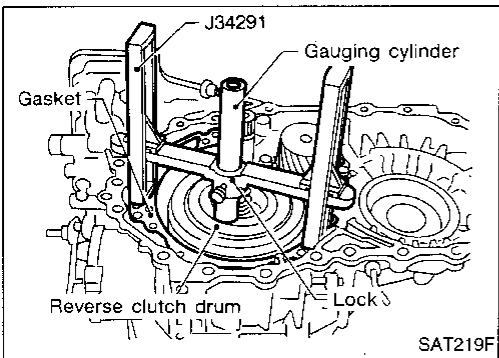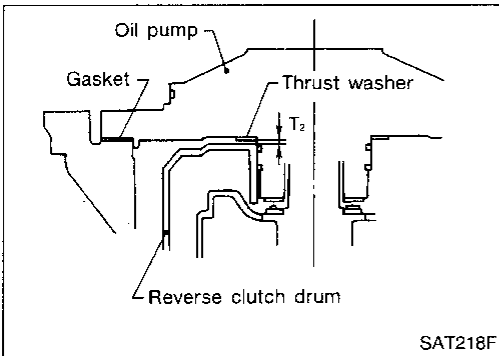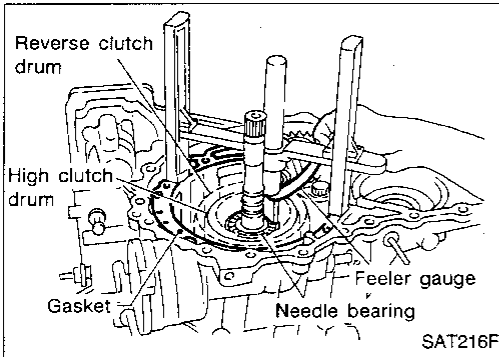

- c. With needle bearing installed on high clutch drum, place Tool legs on machined surface of transmission case (with gasket) and allow plunger to rest on needle bearing.
- d. Measure gap between cylinder and plunger. This measurement should give exact total end play.

Total end play "T₁":

0.25 - 0.55 mm (0.0098 - 0.0217 in)

- If end play is out of specification, decrease or increase thickness of bearing race as necessary.

Available bearing race:

Refer to AT-227.

- 2. Adjust reverse clutch drum end play "T₂".

- a. Place Tool on machined surface of transmission case (with gasket) and allow gauging cylinder to rest on reverse clutch drum. Lock cylinder in place with set screw.

- b. Install gauging plunger into cylinder.

- c. With original thrust washer installed on oil pump, place Tool legs onto machined surface of oil pump assembly and allow plunger to rest on thrust washer.

- d. Measure gap between cylinder and plunger with feeler gauge. This measurement should give exact reverse clutch drum end play.

Reverse clutch drum end play "T₂":

0.55 - 0.90 mm (0.0217 - 0.0354 in)

GI
MA
EM
LC
EF & EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX


ASSEMBLY

Adjustment (Cont'd)

- If end play is out of specification, decrease or increase thickness of thrust washer as necessary.


Available thrust washer:

Refer to AT-226.

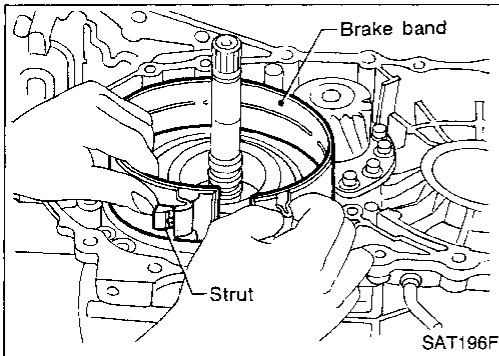


Assembly


1. Install anchor end pin, washer and lock nut on transmission case.
2. Place brake band and strut on periphery of reverse clutch drum. Then, tighten anchor end pin just enough so that brake band is fitted on periphery of reverse clutch drum uniformly.

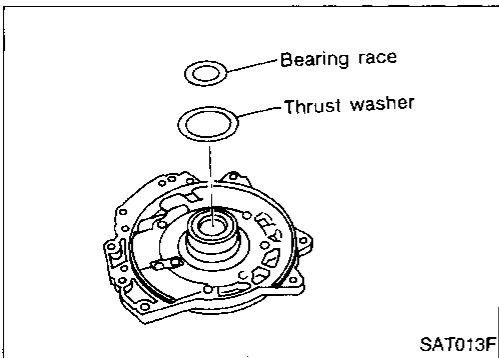

3. Place bearing race selected in total end play adjustment step on oil pump cover.
- **Apply petroleum jelly to bearing race.**
4. Place thrust washer selected in reverse clutch end play step on reverse clutch drum.
- **Apply petroleum jelly to thrust washer.**

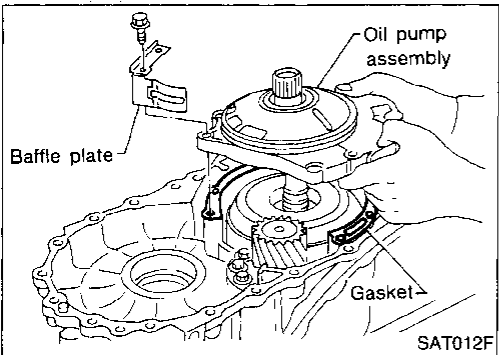


5. Install oil pump assembly, baffle plate and gasket on transmission case.
6. Tighten oil pump fixing bolts to the specified torque.

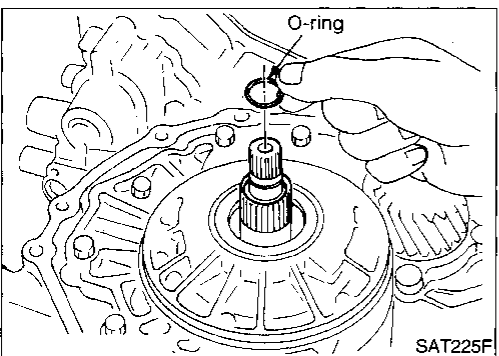

7. Install O-ring to input shaft.
- **Apply ATF to O-ring.**

ASSEMBLY

Assembly (Cont'd)

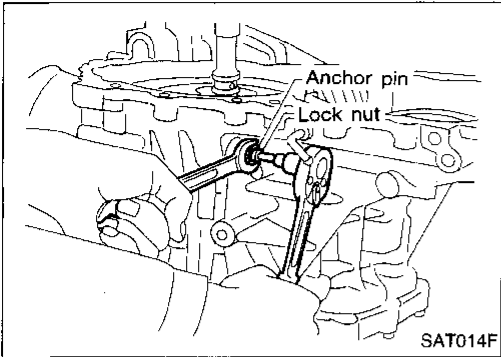


8. Adjust brake band.
 - a. Tighten anchor end pin to the specified torque.
Anchor end pin:
⌚: 4 - 6 N·m (0.4 - 0.6 kg-m, 2.9 - 4.3 ft-lb)
 - b. Back off anchor end pin two and a half turns.
 - c. While holding anchor end pin, tighten lock nut to the specified torque.

GI

MA

EM

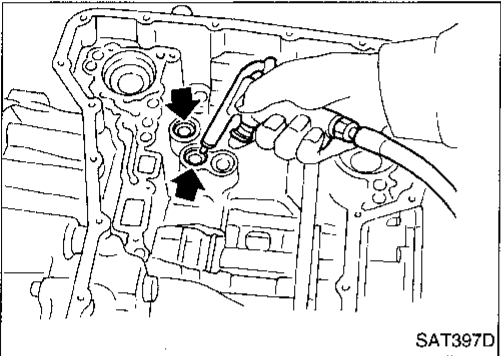


9. Apply compressed air to oil holes of transmission case and check operation of brake band.

LC

EF &
EC

FE

CL

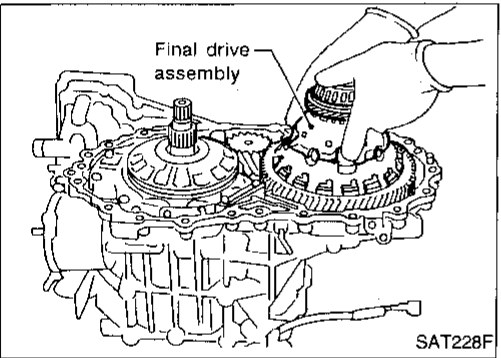


10. Install final drive assembly on transmission case.

MT

AT

FA

RA

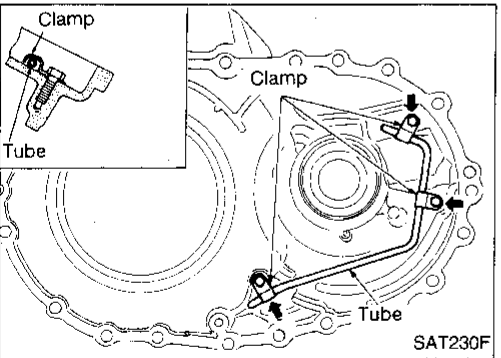


11. Install oil tube on converter housing.

BR

ST

BF

HA

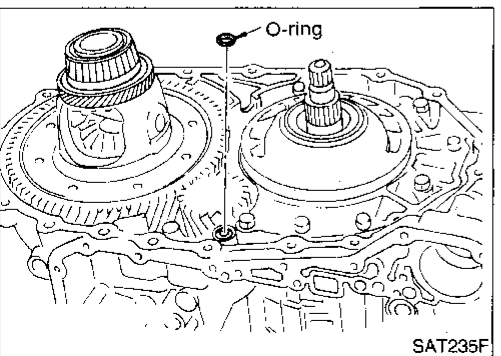



12. Install O-ring on differential oil port of transmission case.

EL

IDX


ASSEMBLY

Assembly (Cont'd)

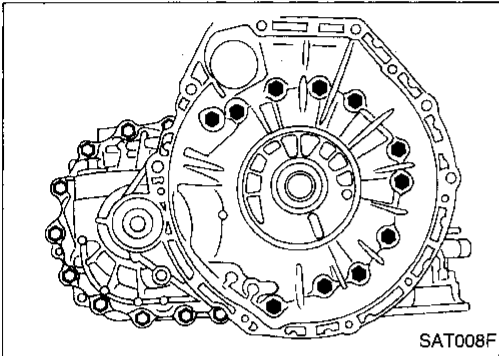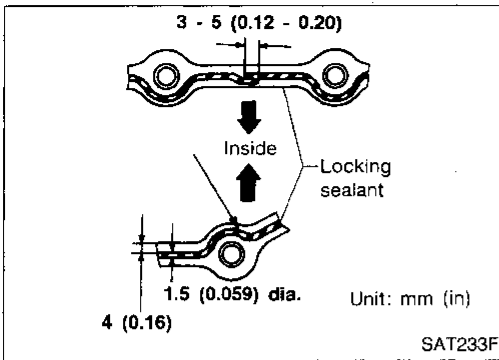


13. Install converter housing on transmission case.

- Apply locking sealant to mating surface of converter housing.
- Wash mating surfaces with a brake cleaner type solvent, allow to dry.
- The mating surfaces must be smooth and free of oil.
- Use an anaerobic, liquid gasket Loctite P/N 51813 or equivalent to mating surface of converter housing.

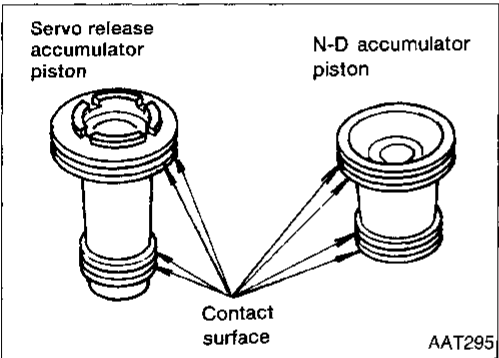

14. Install accumulator piston.

a. Check contact surface of accumulator piston for damage.

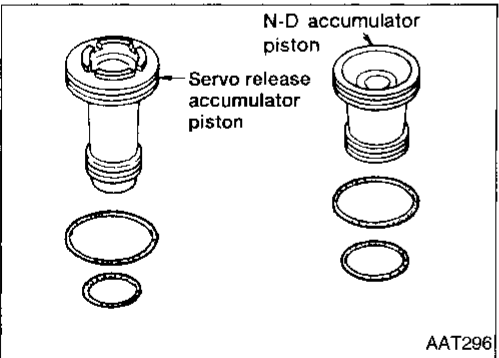


b. Install O-rings on accumulator piston.

- Apply ATF to O-rings.

Accumulator piston O-rings:

Unit: mm (in)

Accumulator	Inner diameter (Small)	Inner diameter (Large)
Servo release accumulator	26.9 (1.059)	44.2 (1.740)
N-D accumulator	34.6 (1.362)	39.4 (1.551)

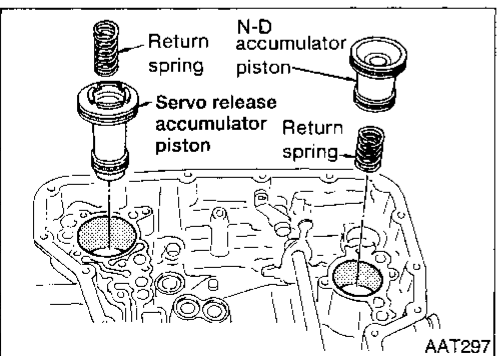

c. Install accumulator pistons and return springs on transmission case.

- Apply ATF to inner surface of transmission case.


Return springs:

Unit: mm (in)

Spring	Free length	Outer diameter
Servo release accumulator spring	52.5 (2.067)	20.4 (0.803)
N-D accumulator spring	43.5 (1.713)	27.0 (1.063)


ASSEMBLY

Assembly (Cont'd)

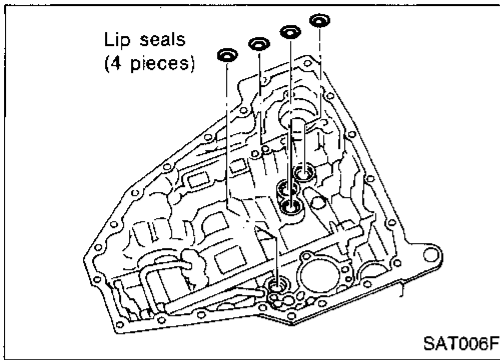


15. Install lip seals for band servo oil holes on transmission case.

- Apply petroleum jelly to lip seals.

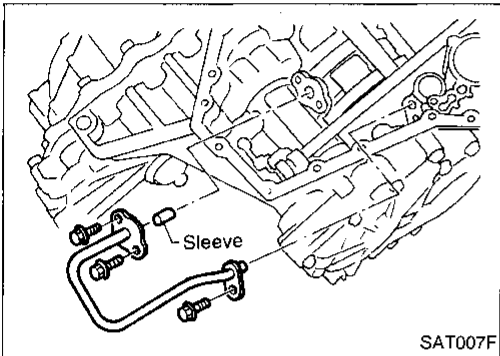


16. Install tube and sleeve.

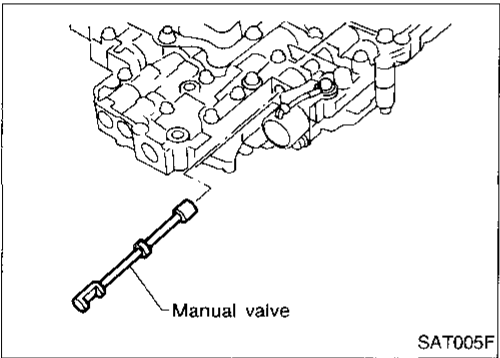

17. Install control valve assembly.


a. Insert manual valve into control valve assembly.

- Apply ATF to manual valve.

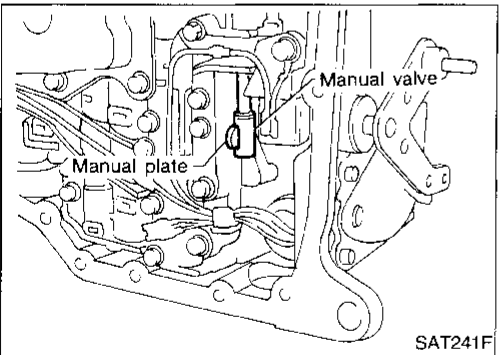

b. Set manual shaft in Park/neutral position.

c. Install control valve assembly on transmission case while aligning manual valve with manual plate.

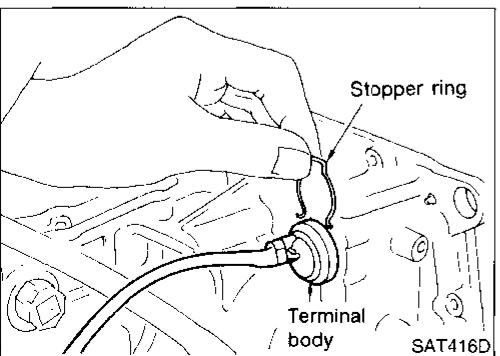

d. Pass solenoid harness through transmission case and install terminal body on transmission case by pushing it.

e. Install stopper ring to terminal body.

GI

MA

EM

LC

EF &
EC

FE

CL

WT

AT

FA

RA

BR

ST

BF

HA

EL


IDX

ASSEMBLY

Assembly (Cont'd)


Unit: mm (in)

- ⓪ 5 bolts $l = 40$ (1.57)
- ⊗ 6 bolts $l = 33$ (1.30)
- 2 bolts $l = 43.5$ (1.713)

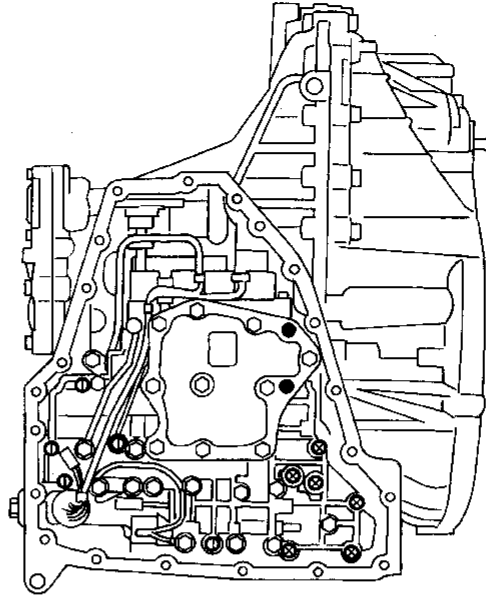


SAT647E

- f. Tighten bolts ⓪, ⊗ and ●.
Bolt length, number and location are shown in the illustration.

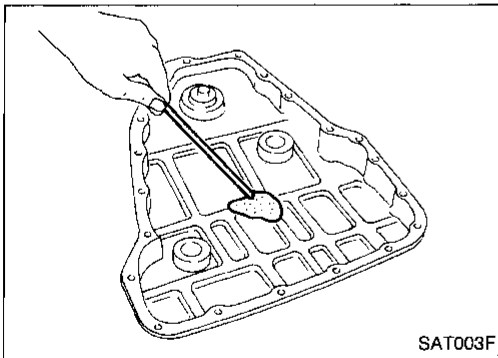

SAT003F

18. Install oil pan.
 a. Attach a magnet to oil pan.

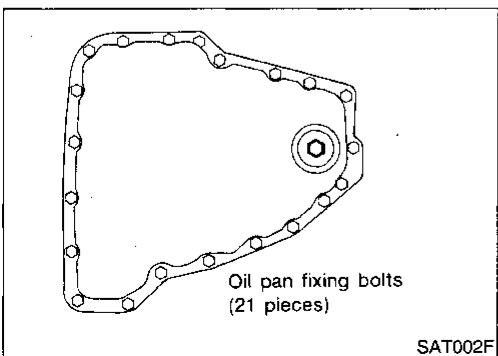


SAT002F


- b. Install new oil pan gasket on transmission case.
 c. Install oil pan on transmission case.
 ● **Always replace oil pan bolts as they are self-sealing bolts.**
 ● **Tighten bolts in a crisscross pattern to prevent dislocation of gasket.**
 d. Tighten drain plug to the specified torque.

ASSEMBLY


Assembly (Cont'd)

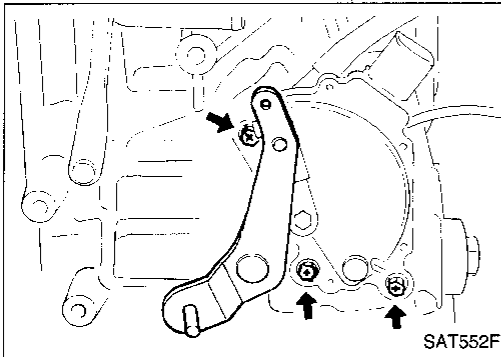


19. Install inhibitor switch.
 - a. Set manual lever in "P" position.
 - b. Temporarily install inhibitor switch on manual shaft.
 - c. Move selector lever to "N" position.

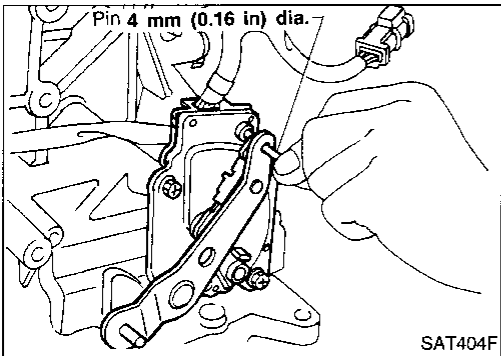


- d. Insert 4.0 mm (0.157 in) dia. pin into adjustment hole in both inhibitor switch and manual shaft as near vertically as possible.
 - e. Tighten inhibitor switch fixing bolts.
 - f. Remove pin from adjustment hole after adjusting inhibitor switch.

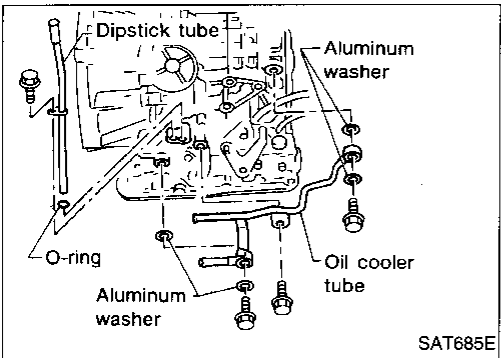

20. Install oil charging pipe and oil cooler tube to transmission case.

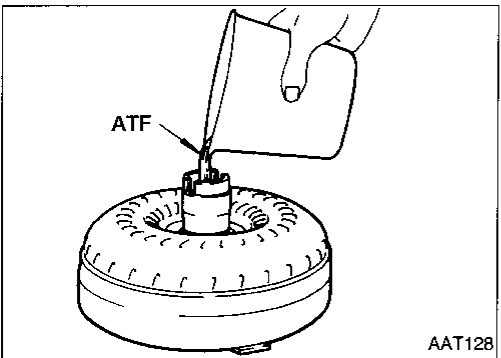

21. Install torque converter.
 - a. Pour ATF into torque converter.
 - **Approximately 1 liters (1-1/8 US qt, 7/8 Imp qt) of fluid is required for a new torque converter.**
 - **When reusing old torque converter, add the same amount of fluid as was drained.**

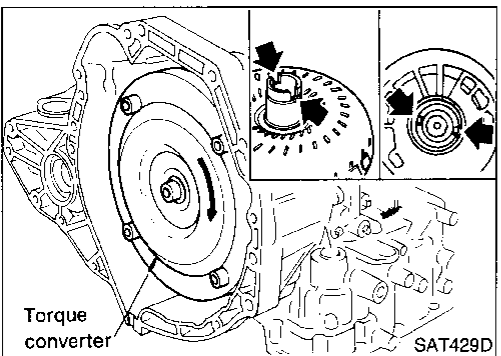

- b. Install torque converter while aligning notches of torque converter with notches of oil pump.


GI
MA
EM
LC
EF &
EC
FE
CL
MT
AT
FA
RA
BR
ST
BF
HA
EL
IDX

ASSEMBLY

Assembly (Cont'd)

- c. Measure distance "A" to check that torque converter is in proper position.

Distance "A": 19 mm (0.75 in) or more

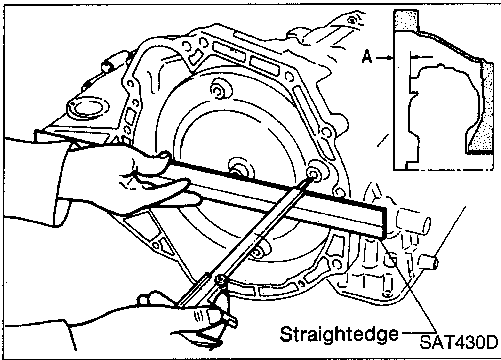

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

Engine	KA24DE	
Automatic transaxle model	RE4F04A	RE4F04V
Automatic transaxle assembly		
Model code number	80X05	80X06
Transaxle gear ratio		
1st	2.785	
2nd	1.545	
3rd	1.000	
4th	0.694	
Reverse	2.272	
Final drive	3.619	
Recommended oil	Genuine Nissan Automatic Transmission Fluid (ATF) or equivalent DEXRON II E™ type fluid	
Oil capacity ℓ (US qt, Imp qt)	9.4 (10, 8-1/4)	

Specifications and Adjustments

VEHICLE SPEED WHEN SHIFTING GEARS

Throttle position	Shift pattern	Vehicle speed km/h (MPH)						
		D ₁ → D ₂	D ₂ → D ₃	D ₃ → D ₄	D ₄ → D ₃	D ₃ → D ₂	D ₂ → D ₁	1 ₂ → 1 ₁
Full throttle	Comfort	62 - 70 (39 - 43)	114 - 122 (71 - 76)	179 - 187 (111 - 116)	175 - 183 (109 - 114)	105 - 113 (65 - 70)	41 - 49 (25 - 30)	62 - 70 (39 - 43)
	Auto power	62 - 70 (39 - 43)	114 - 122 (71 - 76)	179 - 187 (111 - 116)	175 - 183 (109 - 114)	105 - 113 (65 - 70)	41 - 49 (25 - 30)	62 - 70 (39 - 43)
Half throttle	Comfort	42 - 50 (26 - 31)	78 - 86 (48 - 53)	124 - 132 (77 - 82)	75 - 83 (47 - 52)	41 - 49 (25 - 30)	5 - 13 (3 - 8)	62 - 70 (39 - 43)
	Auto power	45 - 53 (28 - 33)	84 - 92 (52 - 57)	133 - 141 (83 - 88)	86 - 94 (53 - 58)	52 - 60 (32 - 37)	5 - 13 (3 - 8)	62 - 70 (39 - 43)

VEHICLE SPEED WHEN PERFORMING LOCK-UP

Throttle position	Shift pattern	OD switch (shift range)	Vehicle speed km/h (MPH)	
			Lock-up "ON"	Lock-up "OFF"
2/8	Comfort	ON [D ₄]	105 - 113 (65 - 70)	53 - 61 (33 - 38)
		OFF [D ₃]	86 - 94 (53 - 58)	83 - 91 (52 - 57)
	Auto power	ON [D ₄]	108 - 116 (67 - 72)	53 - 61 (33 - 38)
		OFF [D ₃]	86 - 94 (53 - 58)	83 - 91 (52 - 57)

SERVICE DATA AND SPECIFICATIONS (SDS)

Specifications and Adjustments (Cont'd)

STALL REVOLUTION

	Stall revolution rpm
Federal, Canada	2,100 - 2,400
California	2,150 - 2,450

LINE PRESSURE

Engine speed rpm	Line pressure kPa (kg/cm ² , psi)	
	D, 2 and 1 ranges	R range
Idle	500 (5.1, 73)	775 (7.9, 112)
Stall	1,010 (10.3, 146)	1,569 (16.0, 228)

CONTROL VALVES

Control valve return springs

Unit: mm (in)

	Parts		Item		
			Part No.	Free length	Outer diameter
Lower body	⑬	Accumulator shift valve spring	31736-01X00	23.0 (0.906)	6.65 (0.2618)
	⑲	Line pressure solenoid valve spring	31742-80X11	17.0 (0.669)	10.7 (0.421)
	⑳	Pressure regulator valve spring	31742-80X13	45.0 (1.772)	15.0 (0.591)
	㉓	Overrun clutch control valve spring	31762-80X00	21.7 (0.854)	7.0 (0.276)
	㉖	Accumulator control valve spring	31742-80X02	22.0 (0.866)	6.5 (0.256)
	㉗	Shift valve A spring	31762-80X00	21.7 (0.854)	7.0 (0.276)
	㉘	Shift valve B spring	31762-80X00	21.7 (0.854)	7.0 (0.276)
	③	Pressure modifier valve spring	31742-41X15	30.5 (1.201)	9.8 (0.386)
⑦	31742-80X16		32.0 (1.260)	6.9 (0.272)	
Upper body	⑱	Pilot valve spring	31742-80X14	36.0 (1.417)	8.1 (0.319)
	④	1-2 accumulator valve spring	31742-80X10	20.5 (0.807)	7.0 (0.276)
	㉑	1-2 accumulator piston spring	31742-80X12	52.0 (2.047)	19.6 (0.772)
	㉔	1st reducing valve spring	31742-80X05	27.0 (1.063)	7.0 (0.276)
	⑩	2-3 timing valve	31742-80X18	30.5 (1.201)	6.6 (0.260)
	⑯	Overrun clutch reducing valve spring	31742-80X15	37.5 (1.476)	6.9 (0.272)
	⑪	Torque converter relief valve spring	31742-80X07	31.0 (1.220)	9.0 (0.354)
⑧	Torque converter clutch control valve spring	31742-80X17	39.5 (1.555)	11.0 (0.433)	

SERVICE DATA AND SPECIFICATIONS (SDS)

Specifications and Adjustments (Cont'd)

CLUTCHES AND BRAKES

Reverse clutch		
Number of drive plates	2	
Number of driven plates	2	
Drive plate thickness mm (in)		
Standard	1.6 (0.063)	
Allowable limit	1.4 (0.055)	
Clearance mm (in)		
Standard	0.5 - 0.8 (0.020 - 0.031)	
Allowable limit	1.2 (0.047)	
Thickness of retaining plates	Thickness mm (in)	Part number
	6.6 (0.260)	31537-80X05
	6.8 (0.268)	31537-80X06
	7.0 (0.276)	31537-80X07
	7.2 (0.283)	31537-80X08
	7.4 (0.291)	31537-80X09
	7.6 (0.299)	31537-80X20
	7.8 (0.307)	31537-80X21
High clutch		
Number of drive plates	3	
Number of driven plates	8	
Drive plate thickness mm (in)		
Standard	1.6 (0.063)	
Allowable limit	1.4 (0.055)	
Clearance mm (in)		
Standard	1.8 - 2.2 (0.071 - 0.087)	
Allowable limit	2.8 (0.110)	
Thickness of retaining plates	Thickness mm (in)	Part number
	3.0 (0.118)	31537-80X15
	3.2 (0.126)	31537-80X16
	3.4 (0.134)	31537-80X17
	3.6 (0.142)	31537-80X18
	3.8 (0.150)	31537-80X19
	4.0 (0.157)	31537-80X22
	Forward clutch	
Number of drive plates	4	
Number of driven plates	4	
Drive plate thickness mm (in)		
Standard	1.6 (0.063)	
Allowable limit	1.4 (0.055)	
Clearance mm (in)		
Standard	0.45 - 0.85 (0.0177 - 0.0335)	
Allowable limit	1.65 (0.0650)	
Thickness of retaining plates	Thickness mm (in)	Part number
	3.6 (0.142)	31537-80X70
	3.8 (0.150)	31537-80X71
	4.0 (0.157)	31537-80X72
	4.2 (0.165)	31537-80X73
	4.4 (0.173)	31537-80X74
	3.4 (0.134)	31537-80X75

Overrun clutch		
Number of drive plates	3	
Number of driven plates	5	
Drive plate thickness mm (in)		
Standard	1.6 (0.063)	
Allowable limit	1.4 (0.055)	
Clearance mm (in)		
Standard	0.7 - 1.1 (0.028 - 0.043)	
Allowable limit	1.7 (0.067)	
Thickness of retaining plates	Thickness mm (in)	Part number
	3.0 (0.118)	31537-80X60
	3.2 (0.126)	31537-80X61
	3.4 (0.134)	31537-80X62
	3.6 (0.142)	31537-80X63
	3.8 (0.150)	31537-80X64
	Low & reverse brake	
Number of drive plates	5	
Number of driven plates	5	
Drive plate thickness mm (in)		
Standard	1.8 (0.071)	
Allowable limit	1.6 (0.063)	
Clearance mm (in)		
Standard	1.7 - 2.1 (0.067 - 0.083)	
Allowable limit	3.1 (0.122)	
Thickness of retaining plates	Thickness mm (in)	Part number
	2.0 (0.079)	31667-80X00
	2.2 (0.087)	31667-80X01
	2.4 (0.094)	31667-80X02
	2.6 (0.102)	31667-80X03
	2.8 (0.110)	31667-80X04
	3.0 (0.118)	31667-80X05
	3.2 (0.126)	31667-80X06
3.4 (0.134)	31667-80X07	
Brake band		
Anchor end pin tightening torque	4 - 6 (0.4 - 0.6, 2.9 - 4.3)	
	N·m (kg-m, ft-lb)	
Number of returning revolutions for anchor end bolt	2.5	
Lock nut tightening torque	31 - 42 (3.2 - 4.3, 23 - 31)	
	N·m (kg-m, ft-lb)	

GI
 MA
 EM
 LC
 EF & EC
 FE
 CL
 MT
 AT
 FA
 RA
 BR
 ST
 BF
 HA
 EL
 IDX

SERVICE DATA AND SPECIFICATIONS (SDS)

Specifications and Adjustments (Cont'd)

FINAL DRIVE

Differential side gear clearance

Clearance between side gear and differential case with washer	mm (in)	0.1 - 0.2 (0.004 - 0.008)
---	---------	---------------------------

Differential side gear thrust washers (RE4F04A)

Thickness mm (in)	Part number
0.75 (0.0295)	38424-81X00
0.80 (0.0315)	38424-81X01
0.85 (0.0335)	38424-81X02
0.90 (0.0354)	38424-81X03
0.95 (0.0374)	38424-81X04

(RE4F04V)

	Thickness mm (in)	Part number
Viscous coupling side	0.44 (0.0173)	38424-51E10
	0.53 (0.0209)	38424-51E11
	0.62 (0.0244)	38424-51E12
	0.71 (0.0280)	38424-51E13
	0.80 (0.0315)	38424-51E14
Differential case side	0.75 (0.0295)	38424-E3000
	0.80 (0.0315)	38424-E3001
	0.85 (0.0335)	38424-E3002
	0.90 (0.0354)	38424-E3003

Differential side bearing preload adjusting shims (RE4F04A)

Thickness mm (in)	Part number
0.48 (0.0189)	31438-80X00
0.52 (0.0205)	31438-80X01
0.56 (0.0220)	31438-80X02
0.60 (0.0236)	31438-80X03
0.64 (0.0252)	31438-80X04
0.68 (0.0268)	31438-80X05
0.72 (0.0283)	31438-80X06
0.76 (0.0299)	31438-80X07
0.80 (0.0315)	31438-80X08
0.84 (0.0331)	31438-80X09
0.88 (0.0346)	31438-80X10
0.92 (0.0362)	31438-80X11

(RE4F04V)

Thickness mm (in)	Part number
0.36 (0.0142)	38753-56E00
0.40 (0.0157)	38753-56E01
0.44 (0.0173)	38753-56E02
0.48 (0.0189)	38753-56E03
0.52 (0.0205)	38753-56E04
0.56 (0.0220)	38753-56E05
0.60 (0.0236)	38753-56E06
0.64 (0.0252)	38753-56E07
0.68 (0.0268)	38753-56E08
0.72 (0.0283)	38753-56E09
0.76 (0.0299)	38753-56E10
0.80 (0.0315)	38753-56E11
0.84 (0.0331)	38753-56E12
0.88 (0.0346)	38753-56E13
0.92 (0.0362)	38753-56E14
0.12 (0.0047)	38753-56E15
0.16 (0.0063)	38753-56E16
0.20 (0.0079)	38753-56E17
0.24 (0.0094)	38753-56E18
0.28 (0.0110)	38753-56E19
0.32 (0.0126)	38753-56E20

Bearing preload

Differential side bearing preload	mm (in)	0.05 - 0.09 (0.0020 - 0.0035)
-----------------------------------	---------	-------------------------------

Turning torque

Turning torque of final drive assembly	N·m (kg·cm, in·lb)	0.78 - 1.37 (8.0 - 14.0, 6.9 - 12.2)
--	--------------------	--------------------------------------

Clutch and brake return springs

Unit: mm (in)

Parts	Free length	Outer diameter
Forward clutch (Overrun clutch) (22 pcs)	21.4 (0.843)	10.3 (0.406)
High clutch (12 pcs)	22.5 (0.886)	10.8 (0.425)

SERVICE DATA AND SPECIFICATIONS (SDS)

Specifications and Adjustments (Cont'd)

PLANETARY CARRIER AND OIL PUMP

Planetary carrier		
Clearance between planetary carrier and pinion washer mm (in)		
Standard	0.20 - 0.70 (0.0079 - 0.0276)	
Allowable limit	0.80 (0.0315)	
Oil pump		
Oil pump side clearance mm (in)	0.030 - 0.050 (0.0012 - 0.0020)	
Thickness of inner gears and outer gears	Inner gear	
	Thickness mm (in) Part number	
	11.99 - 12.0 (0.4720 - 0.4724)	31346-80X00
	11.98 - 11.99 (0.4717 - 0.4720)	31346-80X01
	11.97 - 11.98 (0.4713 - 0.4717)	31346-80X02
	Outer gear	
	Thickness mm (in) Part number	
	11.99 - 12.0 (0.4720 - 0.4724)	31347-80X00
	11.98 - 11.99 (0.4717 - 0.4720)	31347-80X01
	11.97 - 11.98 (0.4713 - 0.4717)	31347-80X02
Clearance between oil pump housing and outer gear mm (in)		
Standard	0.111 - 0.181 (0.0044 - 0.0071)	
Allowable limit	0.181 (0.0071)	
Oil pump cover seal ring clearance mm (in)		
Standard	0.036 - 0.176 (0.0014 - 0.0069)	
Allowable limit	0.176 (0.0069)	

INPUT SHAFT

Input shaft seal ring clearance mm (in)	
Standard	0.08 - 0.23 (0.0031 - 0.0091)
Allowable limit	0.23 (0.0091)

REDUCTION GEAR

Turning torque

Turning torque of reduction gear N·m (kg-cm, in-lb)	0.05 - 0.39 (0.5 - 4.0, 0.43 - 3.47)
---	---

Reduction gear bearing adjusting shims

Thickness mm (in)	Part number
5.20 (0.2047)	31439-81X10
5.22 (0.2055)	31439-81X11
5.24 (0.2063)	31439-81X12
5.26 (0.2071)	31439-81X13
5.28 (0.2079)	31439-81X14
5.30 (0.2087)	31439-81X15
5.32 (0.2094)	31439-81X16
5.34 (0.2102)	31439-81X17
5.36 (0.2110)	31439-81X18
5.38 (0.2118)	31439-81X19
5.40 (0.2126)	31439-81X20
5.42 (0.2134)	31439-81X21
5.44 (0.2142)	31439-81X22
5.46 (0.2150)	31439-81X23
5.48 (0.2157)	31439-81X24
5.50 (0.2165)	31439-81X46
5.52 (0.2173)	31439-81X47
5.54 (0.2181)	31439-81X48
5.56 (0.2189)	31439-81X49
5.58 (0.2197)	31439-81X60
5.60 (0.2205)	31439-81X61
5.62 (0.2213)	31439-81X62
5.64 (0.2220)	31439-81X63
5.66 (0.2228)	31439-81X64
5.68 (0.2236)	31439-81X65
5.70 (0.2244)	31439-81X66
5.72 (0.2252)	31439-81X67
5.74 (0.2260)	31439-81X68
5.76 (0.2268)	31439-81X69
5.78 (0.2276)	31439-81X70
5.80 (0.2283)	31439-81X71
5.82 (0.2291)	31439-81X72
5.84 (0.2299)	31439-81X73
5.86 (0.2307)	31439-81X74
5.88 (0.2315)	31439-81X75
5.90 (0.2323)	31439-81X76
5.92 (0.2331)	31439-81X77
5.94 (0.2339)	31439-81X78
5.96 (0.2346)	31439-81X79
5.98 (0.2354)	31439-81X80
6.00 (0.2362)	31439-81X81
6.02 (0.2370)	31439-81X82
6.04 (0.2378)	31439-81X83
6.06 (0.2386)	31439-81X84
6.08 (0.2394)	31439-82X00
6.10 (0.2402)	31439-82X01
6.12 (0.2409)	31439-82X02
6.14 (0.2417)	31439-82X03
6.16 (0.2425)	31439-82X04
6.18 (0.2433)	31439-82X05
6.20 (0.2441)	31439-82X06
6.22 (0.2449)	31439-82X07
6.24 (0.2457)	31439-82X08
6.26 (0.2465)	31439-82X09
6.28 (0.2472)	31439-82X10
6.30 (0.2480)	31439-82X11
6.32 (0.2488)	31439-82X12
6.34 (0.2496)	31439-82X13
6.36 (0.2504)	31439-82X14
6.38 (0.2512)	31439-82X15

GI

MA

EW

LC

EF &

EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX

SERVICE DATA AND SPECIFICATIONS (SDS)

Specifications and Adjustments (Cont'd)

6.40 (0.2520)	31439-82X16
6.42 (0.2528)	31439-82X17
6.44 (0.2535)	31439-82X18
6.46 (0.2543)	31439-82X19
6.48 (0.2551)	31439-82X20
6.50 (0.2559)	31439-82X21

REVERSE CLUTCH END PLAY

Reverse clutch end play mm (in)	0.55 - 0.90 (0.0217 - 0.0354)
------------------------------------	-------------------------------

Thrust washers for adjusting reverse clutch drum end play

Thickness mm (in)	Part number
0.80 (0.0315)	31508-80X00
1.40 (0.0551)	31508-80X03
0.95 (0.0374)	31508-80X07
1.10 (0.0433)	31508-80X08
1.25 (0.0492)	31508-80X09
1.55 (0.0610)	31508-80X10
1.70 (0.0669)	31508-80X11
1.85 (0.0728)	31508-80X12

ACCUMULATOR

O-ring

Unit: mm (in)

Accumulator	Inner diameter (Small)	Inner diameter (Large)
Servo release accumulator	26.9 (1.059)	44.2 (1.740)
N-D accumulator	34.6 (1.362)	39.4 (1.551)

Return spring

Unit: mm (in)

Accumulator	Free length	Outer diameter
Servo release accumulator	52.5 (2.067)	20.4 (0.803)
N-D accumulator	43.5 (1.713)	27.0 (1.063)

BAND SERVO

Return spring

Unit: mm (in)

Return spring	Free length	Outer diameter
2nd servo return spring	32.5 (1.280)	25.9 (1.020)
OD servo return spring	31.0 (1.220)	21.7 (0.854)

REMOVAL AND INSTALLATION

Unit: mm (in)

Minimum distance between end of converter housing and torque converter	19 (0.75)
--	-----------

OUTPUT SHAFT

Seal ring clearance

Output shaft seal ring clearance mm (in)	
Standard	0.10 - 0.25 (0.0039 - 0.0098)
Allowable limit	0.25 (0.0098)

End play

Output shaft end play mm (in)	0 - 0.15 (0 - 0.0059)
-------------------------------	-----------------------

Output shaft adjusting shims

Thickness mm (in)	Part number
0.80 (0.0315)	31438-80X60
0.84 (0.0331)	31438-80X61
0.88 (0.0346)	31438-80X62
0.92 (0.0362)	31438-80X63
0.96 (0.0378)	31438-80X64
1.00 (0.0394)	31438-80X65
1.04 (0.0409)	31438-80X66
1.08 (0.0425)	31438-80X67
1.12 (0.0441)	31438-80X68
1.16 (0.0457)	31438-80X69
1.20 (0.0472)	31438-80X70

SERVICE DATA AND SPECIFICATIONS (SDS)

Specifications and Adjustments (Cont'd)

BEARING RETAINER

Seal ring clearance

Bearing retainer seal ring clearance	mm (in)	
Standard		0.10 - 0.30 (0.0039 - 0.0118)
Allowable limit		0.30 (0.0118)

TOTAL END PLAY

Total end play	mm (in)	0.25 - 0.55 (0.0098 - 0.0217)
----------------	---------	-------------------------------

Bearing race for adjusting total end play

Thickness mm (in)	Part number
0.8 (0.031)	31435-80X00
1.0 (0.039)	31435-80X01
1.2 (0.047)	31435-80X02
1.4 (0.055)	31435-80X03
1.6 (0.063)	31435-80X04
1.8 (0.071)	31435-80X05
2.0 (0.079)	31435-80X06
0.9 (0.035)	31435-80X09
1.1 (0.043)	31435-80X10
1.3 (0.051)	31435-80X11
1.5 (0.059)	31435-80X12
1.7 (0.067)	31435-80X13
1.9 (0.075)	31435-80X14

GI

MA

EM

LC

EF &
EC

FE

CL

MT

AT

FA

RA

BR

ST

BF

HA

EL

IDX