

SECTION **ST**

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX

CONTENTS

PRECAUTIONS AND PREPARATION	2	Tilt mechanism	12
Precautions	2	Inspection	12
Supplemental Restraint System "Air Bag"	2	POWER STEERING GEAR AND LINKAGE	13
Steering System	2	Removal and Installation	13
Special Service Tools.....	3	Disassembly.....	16
Commercial Service Tools	4	Inspection.....	17
ON-VEHICLE SERVICE	5	Boot	17
Checking Steering Wheel Play	5	Rack.....	17
Checking Neutral Position on Steering Wheel	5	Pinion Assembly	17
Pre-checking.....	5	Gear Housing Cylinder	17
Checking.....	5	Tie-Rod Outer And Inner Socket	17
Front Wheel Turning Angle	5	Assembly.....	18
Checking Gear Housing Movement.....	5	Adjustment	22
Checking and Adjusting Drive Belts	6	POWER STEERING OIL PUMP	23
Checking Fluid Level	6	Disassembly and Assembly	23
Checking Fluid Leakage	6	Pre-disassembly Inspection	23
Bleeding Hydraulic System.....	6	Disassembly.....	24
Checking Steering Wheel Turning Force.....	7	Inspection.....	24
Checking Hydraulic System.....	8	Pulley And Pulley Shaft	24
STEERING WHEEL AND STEERING COLUMN	9	Assembly.....	25
Removal	9	SERVICE DATA AND SPECIFICATIONS (SDS)	26
Steering Wheel	9	General Specifications	26
Steering Column.....	9	Inspection and Adjustment.....	26
Installation	10	General	26
Steering Wheel.....	10	Steering Column	26
Steering Column.....	10	Steering Gear And Linkage	26
Disassembly and Assembly	11	Power Steering	27

PRECAUTIONS AND PREPARATION



Precautions

SUPPLEMENTAL RESTRAINT SYSTEM "AIR BAG"

The Supplemental Restraint System "Air Bag", used along with a seat belt, helps to reduce the risk or severity of injury to the driver and front passenger in a frontal collision. The Supplemental Restraint System consists of air bag modules (located in the center of the steering wheel and on the instrument panel on the passenger side), a diagnosis sensor unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the **RS section** of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision, which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- All SRS electrical wiring harnesses and connectors are covered with yellow outer insulation. Do not use electrical test equipment on any circuit related to the SRS "Air bag".








STEERING SYSTEM

- Before disassembly, thoroughly clean the outside of the unit.
- Disassembly should be done in a clean work area. It is important to prevent the internal parts from becoming contaminated by dirt or other foreign matter.
- Place disassembled parts in order, on a parts rack, for easier and proper assembly.
- Use nylon cloths or paper towels to clean the parts; common shop rags can leave lint that might interfere with their operation.
- Before inspection or reassembly, carefully clean all parts with a general purpose, non-flammable solvent.
- Before assembly, apply a coat of recommended ATF* to hydraulic parts. Petroleum jelly may be applied to O-rings and seals. Do not use any grease.
- Replace all gaskets, seals and O-rings. Avoid damaging O-rings, seals and gaskets during installation. Perform functional tests whenever designated.

*: Automatic Transmission Fluid type DEXRON™ II or equivalent.




PRECAUTIONS AND PREPARATION


Special Service Tools

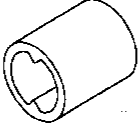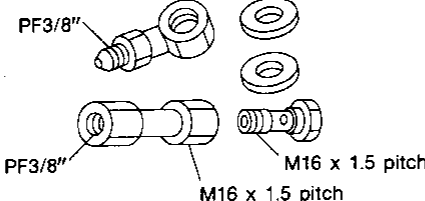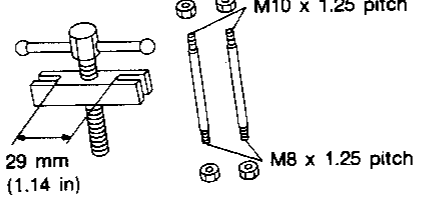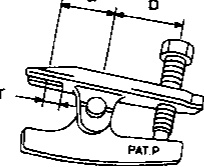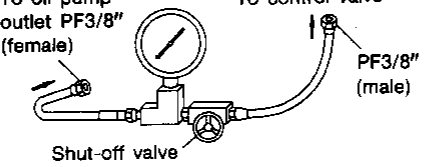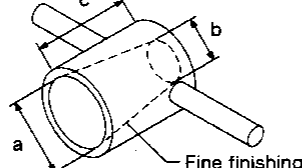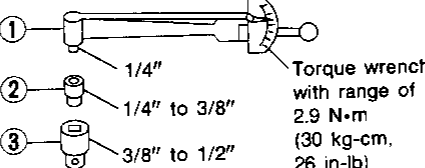Tool number (Kent-Moore No.) Tool name	Description	
KV48100700 (J26364) Torque adapter		GI MA EM
KV48102500 (J26357-10) Pressure gauge adapter	 <p>PF3/8"</p> <p>PF3/8"</p> <p>M16 x 1.5 pitch</p> <p>M16 x 1.5 pitch</p>	LC EC FE
ST27180001 (J25726-A) Steering wheel puller	 <p>M10 x 1.25 pitch</p> <p>M8 x 1.25 pitch</p> <p>29 mm (1.14 in)</p>	CL MT
HT72520000 (J25730-A) Ball joint remover	 <p>a</p> <p>b</p> <p>r</p> <p>PAT. P.</p>	AT FA
ST27091000 (J26357) Pressure gauge	 <p>To oil pump outlet PF3/8" (female)</p> <p>To control valve PF3/8" (male)</p> <p>Shut-off valve</p>	RA BR
KV48104400 (—) Rack seal ring reformer	 <p>c</p> <p>b</p> <p>a</p> <p>Fine finishing</p>	ST RS BT
ST3127S000 (See J25765-A) ① GG91030000 (J25765-A) Torque wrench ② HT62940000 (—) Socket adapter ③ HT62900000 (—) Socket adapter	 <p>①</p> <p>②</p> <p>③</p> <p>1/4"</p> <p>1/4" to 3/8"</p> <p>3/8" to 1/2"</p> <p>Torque wrench with range of 2.9 N·m (30 kg-cm, 26 in-lb)</p>	HA EL IDX

PRECAUTIONS AND PREPARATION

Commercial Service Tools

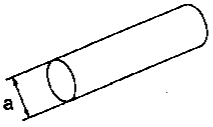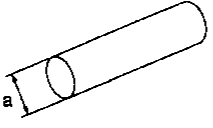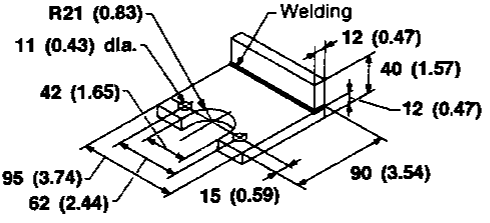Tool name	Description
Rear oil seal drift	<div style="display: flex; justify-content: space-between; align-items: center;">  <div style="text-align: right;"> <p>Installing rear oil seal</p> <p>a: 28 mm (1.10 in) dia.</p> </div> </div>
Pinion oil seal drift	<div style="display: flex; justify-content: space-between; align-items: center;">  <div style="text-align: right;"> <p>Installing pinion oil seal</p> <p>a: 40 mm (1.57 in) dia.</p> </div> </div>
Oil pump attachment	<div style="display: flex; justify-content: space-between; align-items: center;">  <div style="text-align: right;"> <p>Disassembling and assembling oil pump</p> <p>Unit: mm (in)</p> </div> </div>

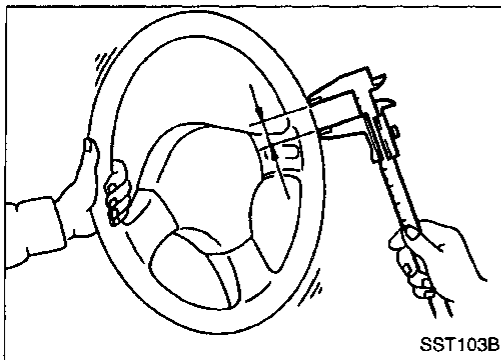

Checking Steering Wheel Play

- With wheels in a straight-ahead position, check steering wheel play.

Steering wheel play:

35 mm (1.38 in) or less

- If it is not within specification, check the following for loose or worn components.
 - (1) Steering gear assembly
 - (2) Steering column
 - (3) Front suspension and axle

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST


RS

BT

HA

EL

IDX

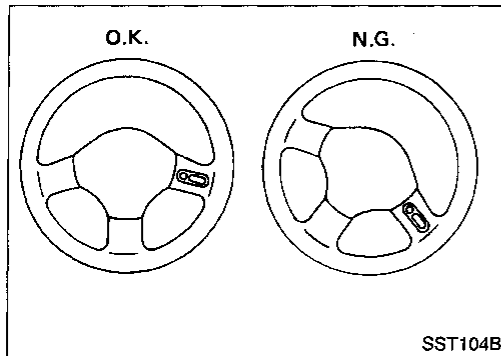

Checking Neutral Position on Steering Wheel

Pre-checking

- Make sure that wheel alignment is correct.


Wheel alignment:

Refer to FA section ("Inspection and Adjustment", "SERVICE DATA AND SPECIFICATIONS").

- Verify that the steering gear is centered before removing the steering wheel.

Checking

1. Check that the steering wheel is in the neutral position when driving straight ahead.
2. If it is not in the neutral position, remove the steering wheel and reinstall it correctly.
3. If the neutral position is still not correct:
 - a. Loosen tie-rod lock nuts.
 - b. Move tie-rods in the opposite direction by the same amount on both left and right sides.
This will compensate for error in the neutral position.

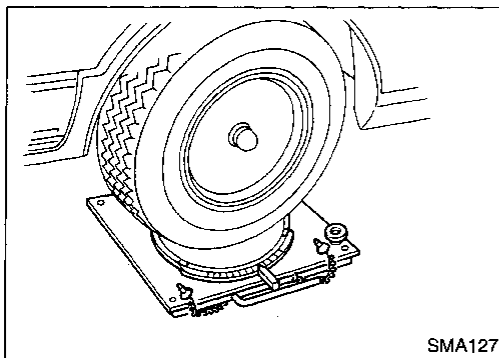

Front Wheel Turning Angle

1. Rotate steering wheel all the way right and left; measure turning angle.


Turning angle of full turns:

Refer to FA section ("Inspection and Adjustment", "SERVICE DATA AND SPECIFICATIONS").

2. If it is not within specification, check rack stroke.

Rack stroke "L":

Refer to SDS, ST-27.

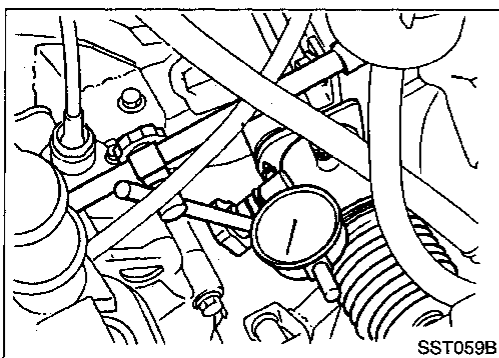

Checking Gear Housing Movement

1. Check the movement of steering gear housing during stationary steering on a dry paved surface.

- Apply a force of 49 N (5 kg, 11 lb) to steering wheel to check the gear housing movement.

Turn off ignition key while checking.


Movement of gear housing:

±2 mm (±0.08 in) or less

2. If movement exceeds the limit, replace mounting insulator after confirming proper installation of gear housing mounting brackets.

Checking and Adjusting Drive Belts

Refer to MA section ("Checking Drive Belts", "ENGINE MAINTENANCE").

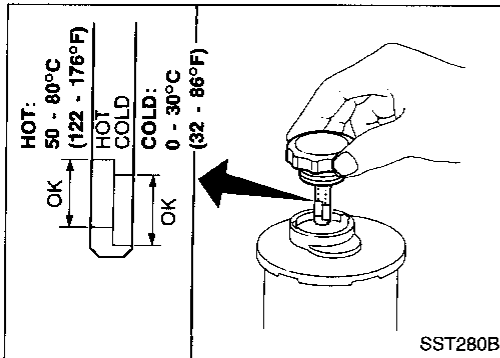

Checking Fluid Level


Check fluid level with engine off.

Check fluid level with dipstick on reservoir cap.

Use "HOT" range at fluid temperatures of 50 to 80°C (122 to 176°F). Use "COLD" range at fluid temperatures of 0 to 30°C (32 to 86°F).

CAUTION:

- Do not overfill.
- Recommended fluid is Automatic Transmission Fluid type DEXRON™ II or equivalent.

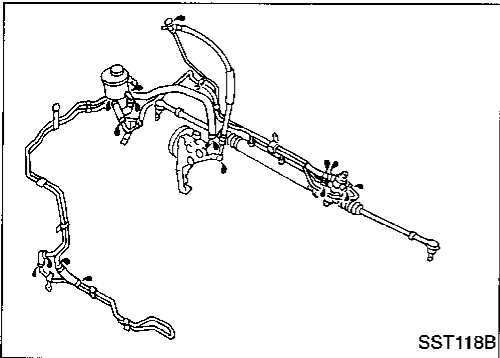

Checking Fluid Leakage

Check the lines for improper attachment, leaks, cracks, damage, chafing or deterioration.

1. Run engine between idle speed and 1,000 rpm.

Make sure fluid temperature in reservoir tank rises to 60 to 80°C (140 to 176°F).

2. Turn steering wheel right-to-left several times.
3. Hold steering wheel at each "lock" position for five seconds and carefully check for fluid leakage.

CAUTION:

Do not hold the steering wheel in a locked position for more than 15 seconds.

4. If fluid leakage at connectors is noticed, loosen flare nut and then retighten.

Do not overtighten connector as this can damage O-ring, washer and connector.

Bleeding Hydraulic System

1. Raise front end of vehicle until wheels are clear of the ground.
2. Add fluid into oil tank to specified level. Then, quickly turn steering wheel fully to right and left and lightly touch steering stoppers.
Repeat steering wheel operation until fluid level no longer decreases.
3. Start engine.
Repeat step 2 above.



ON-VEHICLE SERVICE

Bleeding Hydraulic System (Cont'd)

- Incomplete air bleeding will cause the following to occur. When this happens, bleed air again.

- (1) Air bubbles in reservoir tank
- (2) Clicking noise in oil pump
- (3) Excessive buzzing in oil pump

Fluid noise may occur in the valve or oil pump. This is common when the vehicle is stationary or while turning slowly. This does not affect performance or durability of the system.

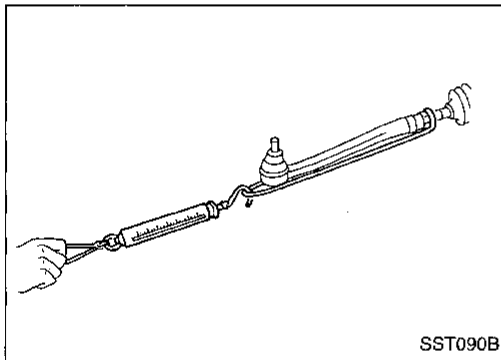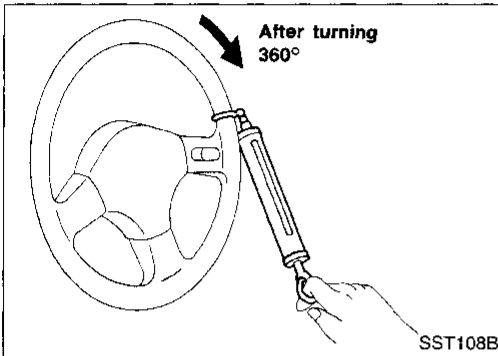

Checking Steering Wheel Turning Force

1. Park vehicle on a level, dry surface and set parking brake.
2. Start engine.
3. Bring power steering fluid up to adequate operating temperature. [Make sure temperature of fluid is approximately 60 to 80°C (140 to 176°F).]

Tires need to be inflated to normal pressure.

4. Check steering wheel turning force when steering wheel has been turned 360° from neutral position.

Steering wheel turning force:

39 N (4 kg, 9 lb) or less

5. If steering wheel turning force is out of specification, check rack sliding force.
 - a. Disconnect steering column lower joint and knuckle arms from the gear.
 - b. Start and run engine at idle to make sure steering fluid has reached normal operating temperature.
 - c. While pulling tie-rod slowly from the neutral position, make sure rack sliding force is within specification.

Rack sliding force:

157 - 256 N (16 - 26 kg, 35 - 56 lb)

6. If rack sliding force is not within specification, service steering gear assembly.
7. If rack sliding force is OK, inspect steering column. Refer to ST-12.

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST


RS

BT

HA

EL

IDX

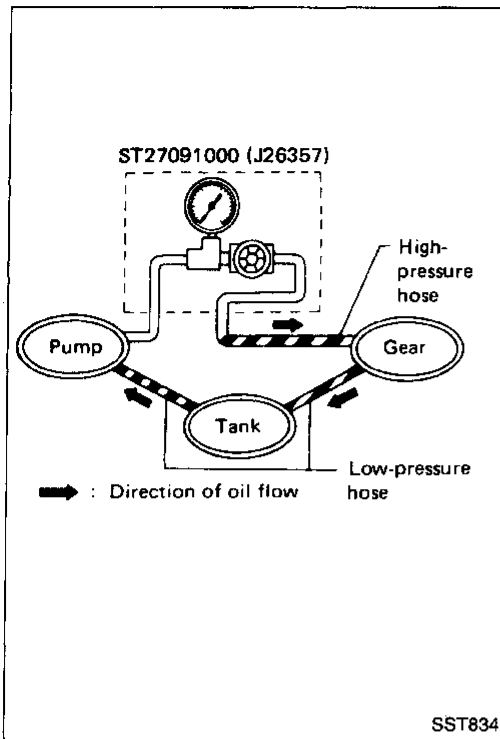

Checking Hydraulic System

Before starting, check belt tension, driving pulley and tire pressure.

1. Set Tool. Open shut-off valve. Then bleed air. Refer to ST-6.
2. Run engine.

Make sure fluid temperature in reservoir tank rises to 60 to 80°C (140 to 176°F).

WARNING:

Warm up engine with shut-off valve fully opened. If engine is started with shut-off valve closed, fluid pressure in oil pump increases to maximum. This will raise oil temperature abnormally.

3. Check pressure with steering wheel fully turned to left and right positions with engine idling at 1,000 rpm.

CAUTION:

Do not hold the steering wheel in a locked position for more than 15 seconds.

Oil pump maximum standard pressure:

7,649 - 8,238 kPa (78 - 84 kg/cm², 1,109 - 1,194 psi)


4. If oil pressure is below the standard pressure, slowly close shut-off valve and check pressure.

CAUTION:


Do not close shut-off valve for more than 15 seconds.

- When pressure reaches standard pressure, gear is damaged.
 - When pressure remains below standard pressure, pump is damaged.
5. If oil pressure is higher than standard pressure, check oil pump flow control valve.
 6. After checking hydraulic system, remove Tool and add fluid as necessary. Then completely bleed air out of system. Refer to ST-6.

STEERING WHEEL AND STEERING COLUMN

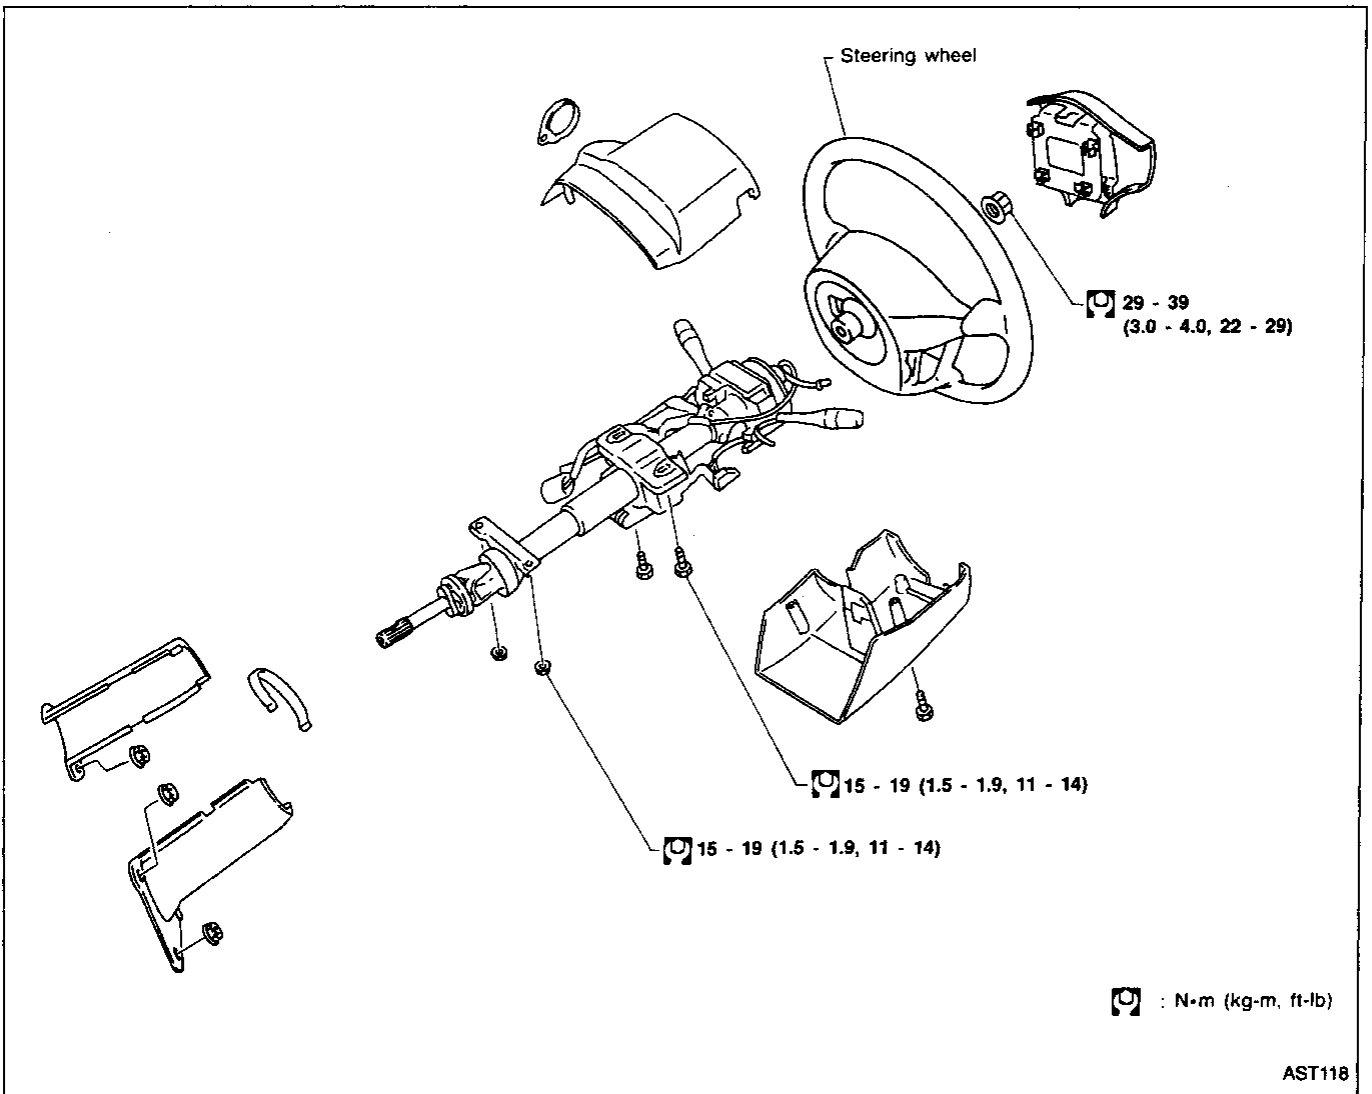


GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR

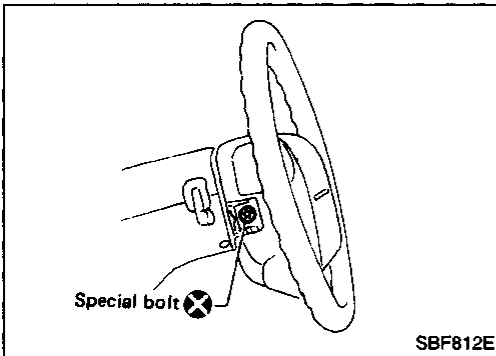

Removal

STEERING WHEEL

Remove air bag module and spiral cable. Refer to RS section ("Removal — Air Bag Module and Spiral Cable", "SUPPLEMENTAL RESTRAINT SYSTEM").

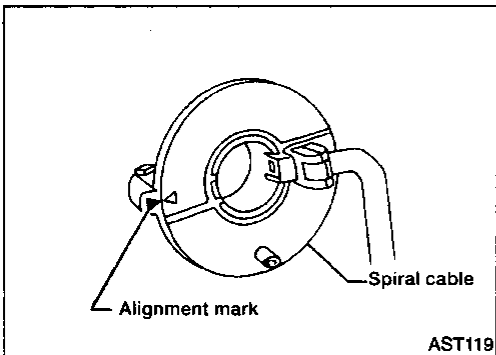

STEERING COLUMN

CAUTION:

The rotation of the spiral cable (SRS "Airbag" component part) is limited. If the steering gear must be removed, set the front wheels in the straight-ahead direction. Do not rotate the steering column while the steering gear is removed.

ST
RS
BT
HA
EL
IDX


Installation

STEERING WHEEL

Refer to RS section ("Installation — Air Bag Module and Spiral Cable", "SUPPLEMENTAL RESTRAINT SYSTEM").

STEERING COLUMN

- When installing steering column, fingertighten all lower bracket and clamp retaining bolts; then tighten them securely. Do not apply undue stress to steering column.
- When attaching lower coupling joint, be sure tightening bolt faces cutout portion.

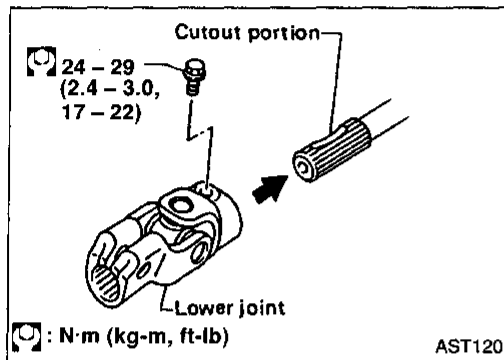


CAUTION:


After installation, turn steering wheel to make sure it moves smoothly. Ensure the number of turns are the same from the straight forward position to left and right locks. Be sure that the steering wheel is in a neutral position when driving straight ahead.

STEERING WHEEL AND STEERING COLUMN

Disassembly and Assembly

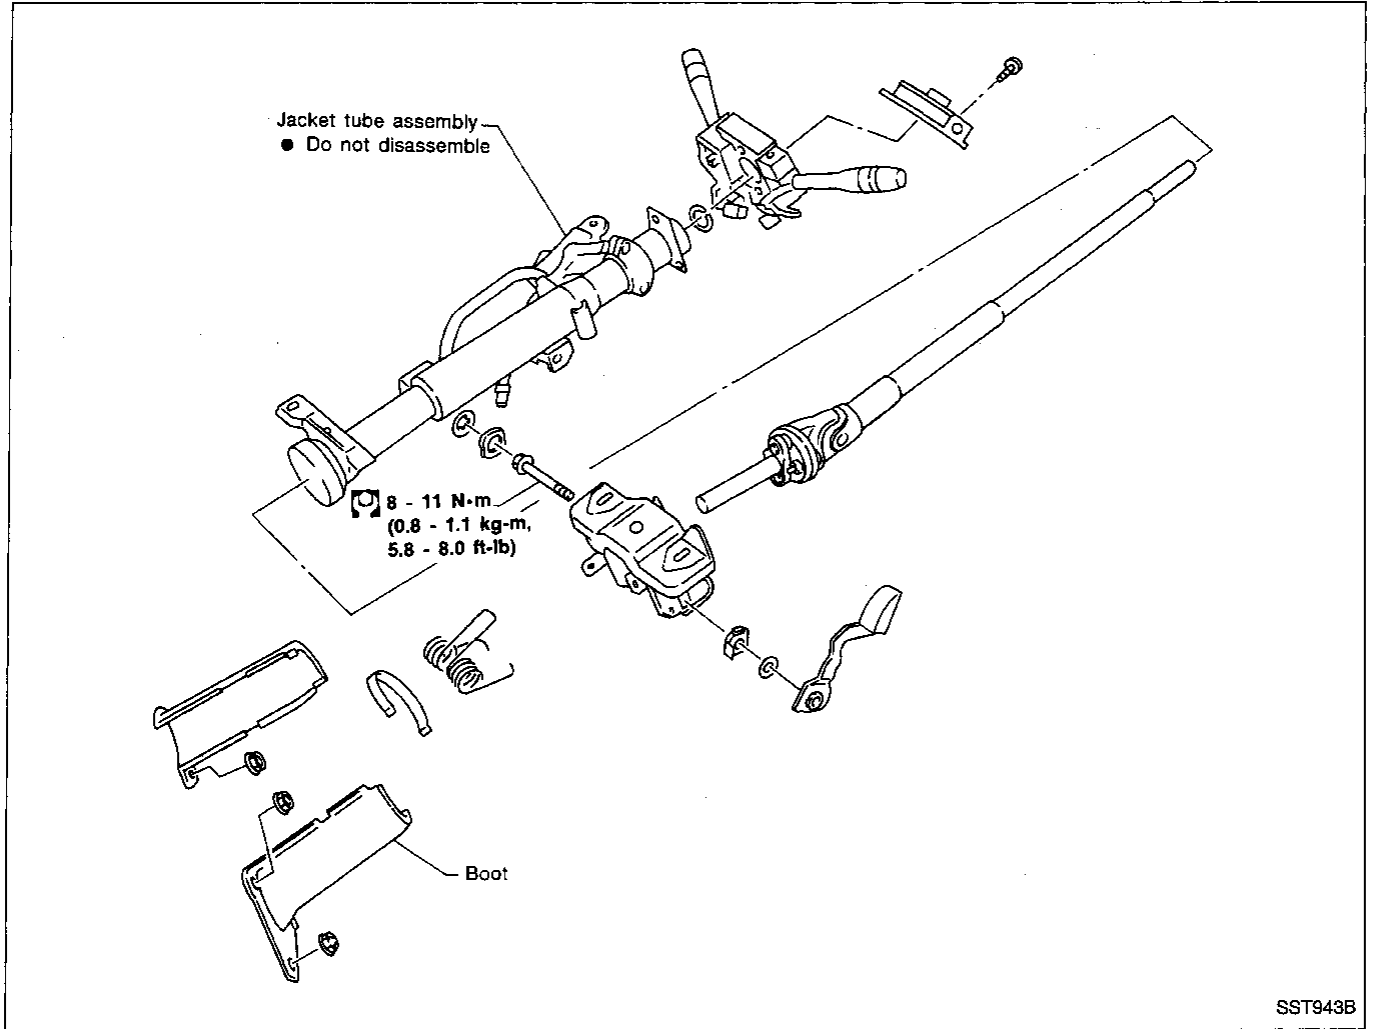

- When disassembling and assembling, unlock steering lock with key.
- Ensure that rounded surface of snap ring faces toward bearing when snap ring is installed.

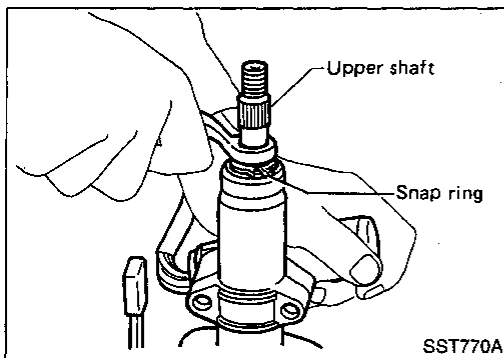


- Install snap ring on upper shaft with a suitable tool.


GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX

STEERING WHEEL AND STEERING COLUMN


Disassembly and Assembly (Cont'd)

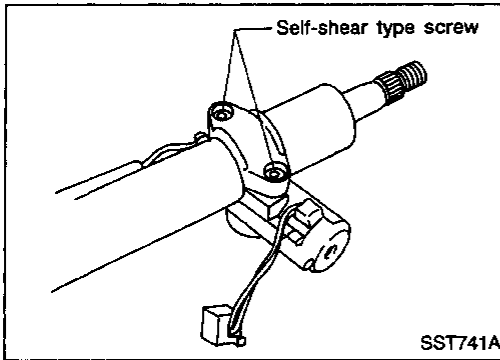

- Steering lock
- a. Break self-shear type screws with a drill or other appropriate tool.

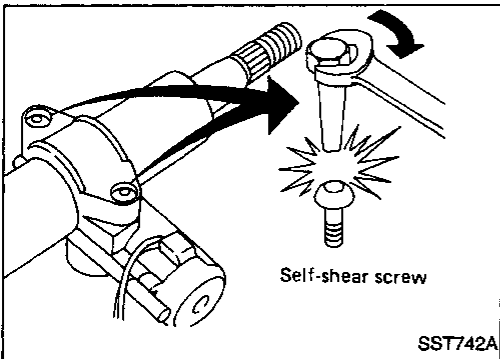


- b. Install self-shear type screws and then cut off self-shear type screw heads.

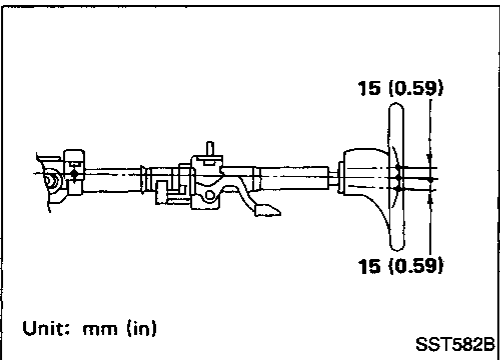

Tilt mechanism

- After installing steering column, check tilt mechanism operation.

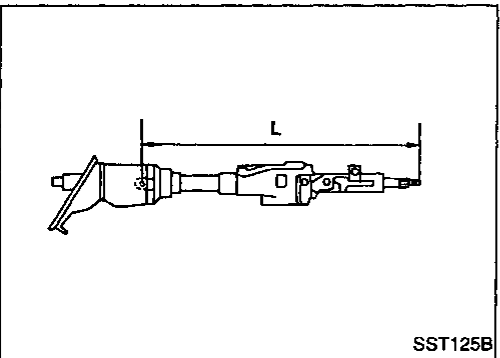

Inspection


- When steering wheel does not turn smoothly, check the steering column as follows and replace damaged parts.
 - a. Check column bearings for damage or unevenness. Lubricate with recommended multi-purpose grease or replace steering column as an assembly, if necessary.
 - b. Check jacket tube for deformation or breakage.
- When the vehicle is involved in a light collision, check column length "L". If it is not within specifications, replace steering column as an assembly.

Column length "L":

525.6 - 528.4 mm (20.69 - 20.80 in)

POWER STEERING GEAR AND LINKAGE


Removal and Installation

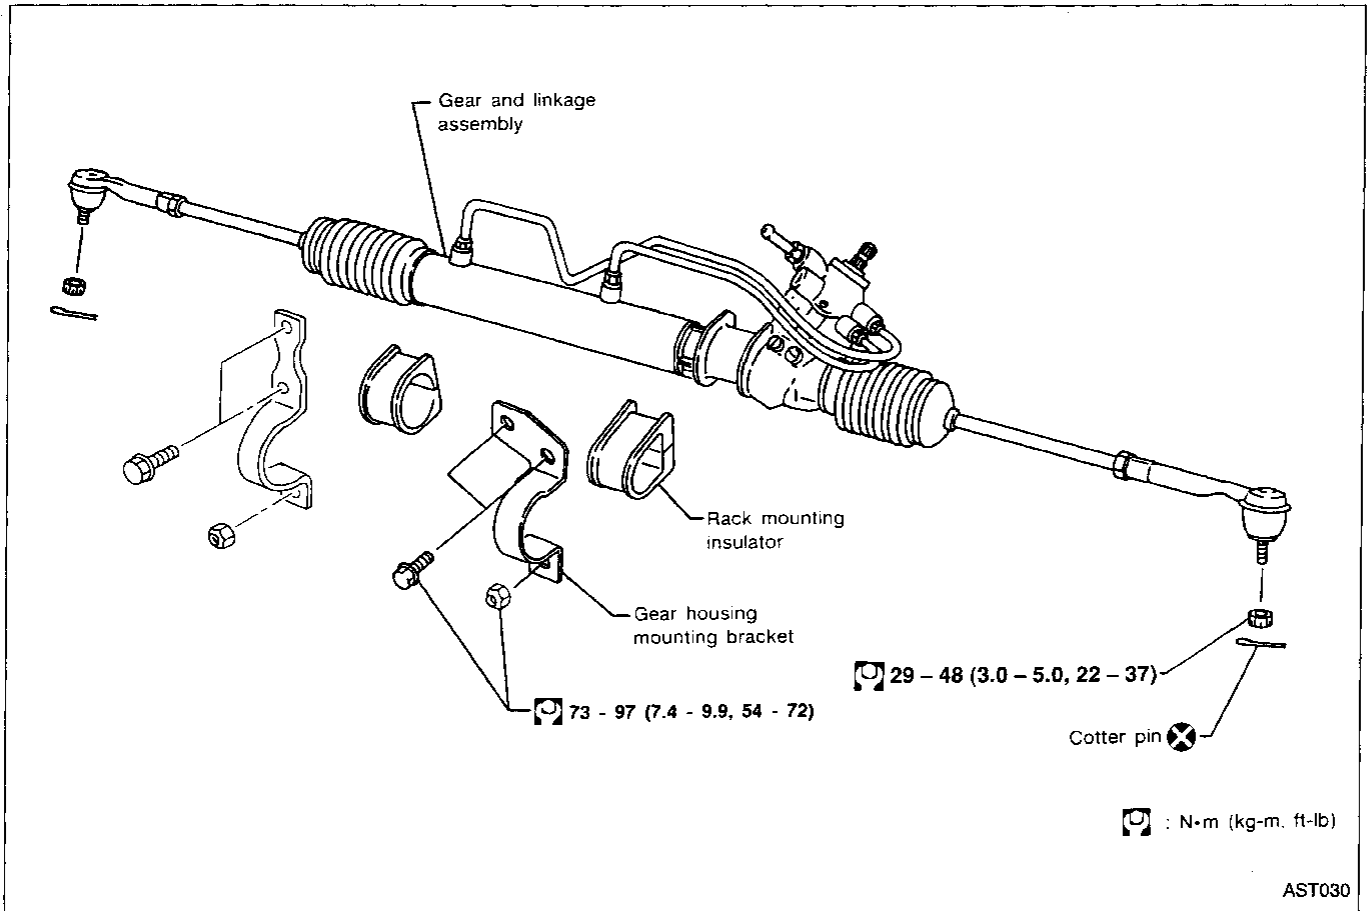

CAUTION:

The rotation of the spiral cable (SRS "Air bag" component part) is limited. If the steering gear must be removed, set the front wheels in the straight-ahead position. Do not rotate the steering column while the steering gear is removed.

- Loosen upper clamp on dust boot in engine compartment.
- Remove lower bolt from coupling joint.

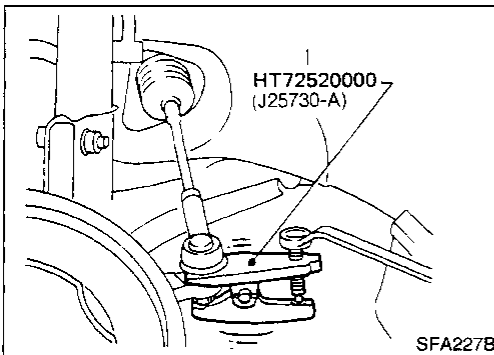


- Detach tie-rod outer sockets from knuckle arms with Tool.

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX


POWER STEERING GEAR AND LINKAGE

Removal and Installation (Cont'd)

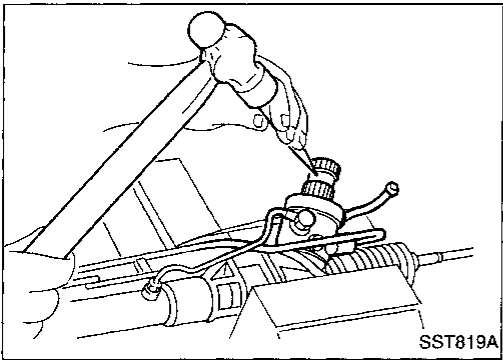

- After removing steering gear from vehicle, put matching marks on pinion shaft and pinion housing to record neutral position.

- To install, set left and right dust boots to equal deflection, and align matching marks on pinion shaft and pinion housing.

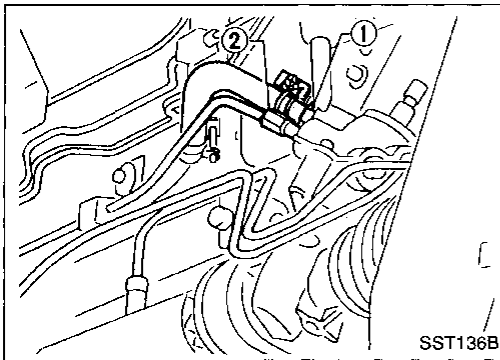

- The O-ring in low-pressure pipe connector ① is larger than that in high-pressure connector ②. Take care to install the proper O-ring.
- Observe specified tightening torque when tightening high-pressure and low-pressure pipe connectors. Excessive tightening can damage threads or connector O-ring.


Connector tightening torque:

Low-pressure side ①

27 - 39 N·m (2.8 - 4.0 kg-m, 20 - 29 ft-lb)

High-pressure side ②


15 - 25 N·m (1.5 - 2.5 kg-m, 11 - 18 ft-lb)

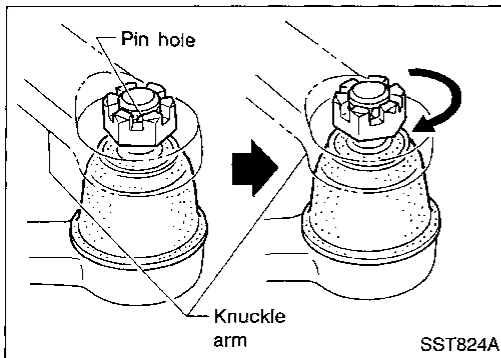

- Initially, tighten nut on tie-rod outer socket and knuckle arm to 29 to 39 N·m (3 to 4 kg-m, 22 to 29 ft-lb). Then tighten further to align nut groove with first pin hole so that cotter pin can be installed.


CAUTION:

Tightening torque must not exceed 49 N·m (5 kg-m, 36 ft-lb).

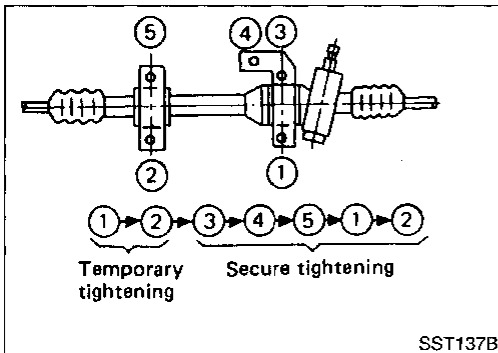

- Tighten gear housing mounting bracket bolts in the order shown.

POWER STEERING GEAR AND LINKAGE

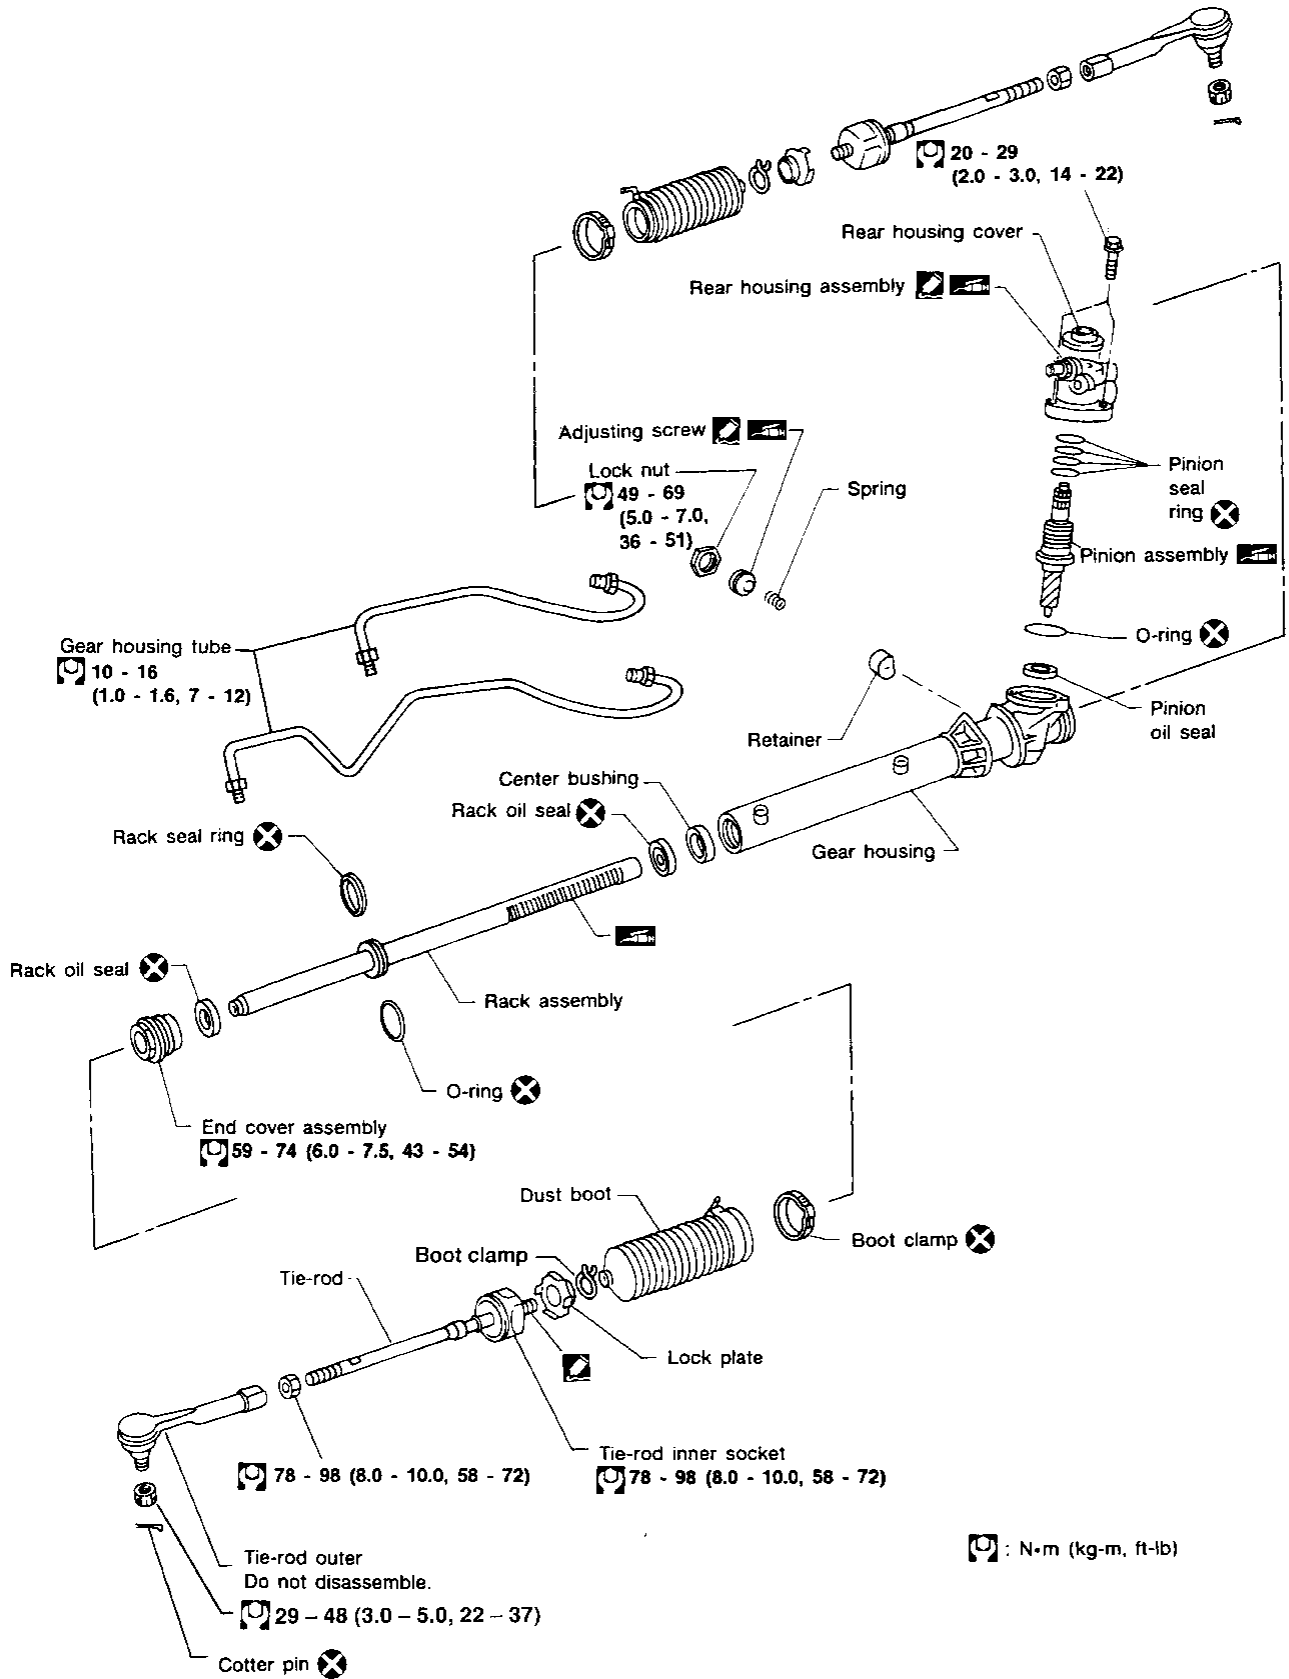

G1

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS


BT

HA

EL


IDX

POWER STEERING GEAR AND LINKAGE

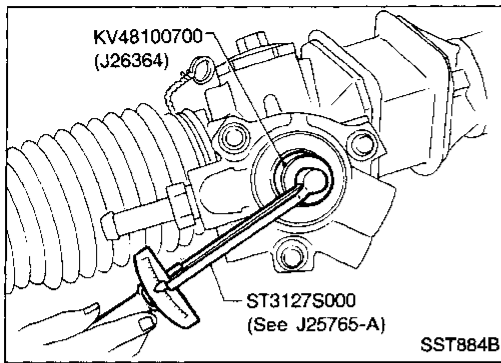


Disassembly


1. Prior to disassembling, measure pinion rotating torque. Record the pinion rotating torque as a reference.
 - Before measuring, disconnect gear housing tubes and drain fluid.
 - Use soft jaws when holding steering gear housing. Handle gear housing carefully, as it is made of aluminum. Do not grip cylinder in a vise.
2. Remove pinion gear.
Be careful not to damage pinion gear when removing pinion seal ring.

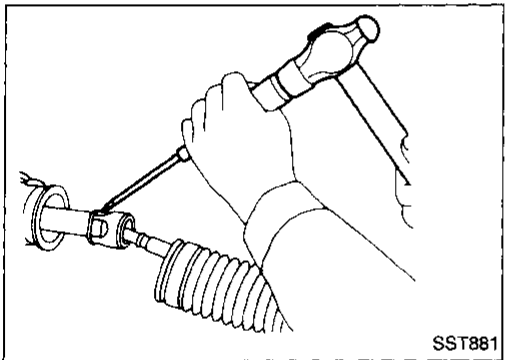

3. Remove tie-rod outer sockets and boots.
4. Loosen tie-rod inner socket by prying up staked portion, and remove socket.
5. Remove lock nut, adjusting screw, spring, and retainer.
6. Remove pinion assembly.

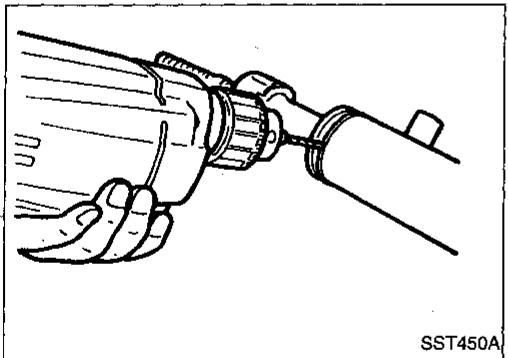


7. Use a 2 to 2.5 mm (0.079 to 0.098 in) diameter drill to completely remove staked portion of gear housing end.

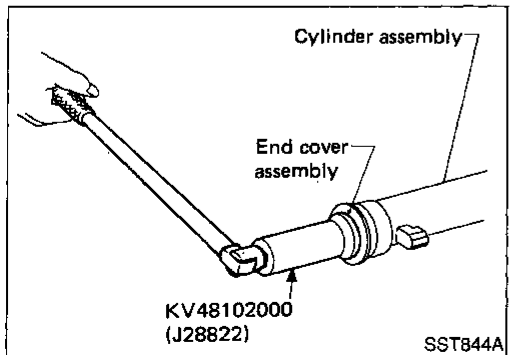

8. Remove end cover assembly with Tool.
9. Draw out rack assembly.


POWER STEERING GEAR AND LINKAGE

Disassembly (Cont'd)

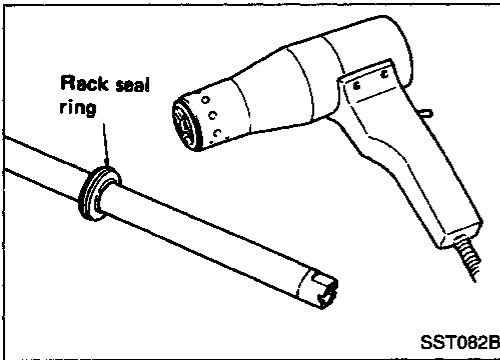

10. Remove rack seal ring.
 - Using a heat gun, heat rack seal to approximately 40°C (104°F).
 - Remove rack seal ring.

Be careful not to damage rack.

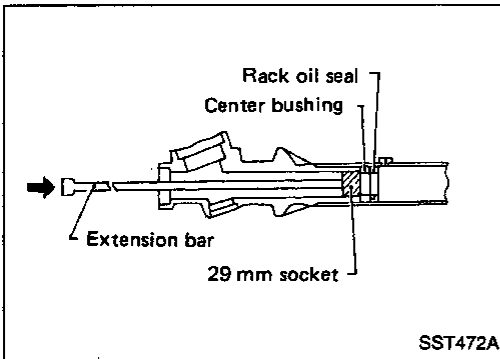

11. Remove center bushing and rack oil seal using tape wrapped socket and extension bar.

Do not scratch inner surfaces of pinion housing.

Inspection

Thoroughly clean all parts in cleaning solvent or automatic transmission fluid type DEXRON™ II or equivalent. Blow dry with compressed air, if available.

BOOT

Check condition of boot. If cracked excessively, replace it.

RACK

Thoroughly examine rack gear. If damaged, cracked or worn, replace it.

PINION ASSEMBLY


- Thoroughly examine pinion gear. If pinion gear is damaged, cracked or worn, replace it.
- Check that all bearings roll freely. Ensure that balls, rollers, and races are not cracked, pitted or worn.

GEAR HOUSING CYLINDER

Check gear housing cylinder bore for scratches or other damage. Replace if necessary.

TIE-ROD OUTER AND INNER SOCKET


- Check ball joint for swinging force.
 - Tie-rod outer ball joint:**
6.9 - 64.7 N
(0.7 - 6.6 kg, 1.5 - 14.6 lb)
 - Tie-rod inner ball joint:**
15.7 - 140.2 N
(1.6 - 14.3 kg, 3.5 - 31.5 lb)

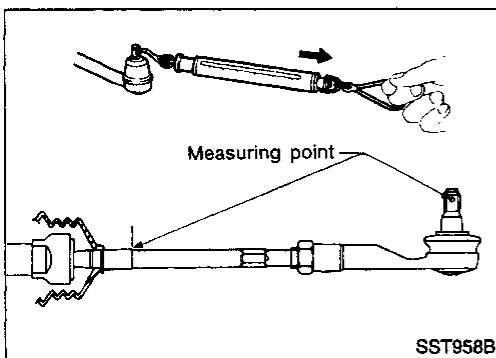


GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX

POWER STEERING GEAR AND LINKAGE

Inspection (Cont'd)

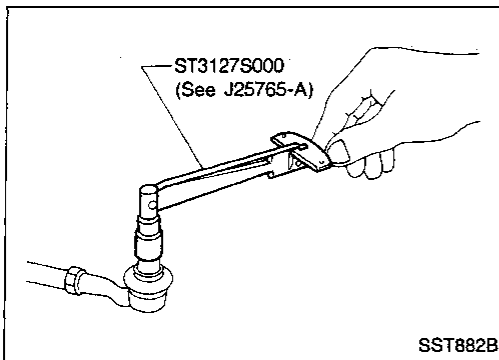


- Check ball joint for rotating torque.
Tie-rod outer ball joint:
0.3 - 2.9 N·m
(3 - 30 kg-cm, 2.6 - 26.0 in-lb)

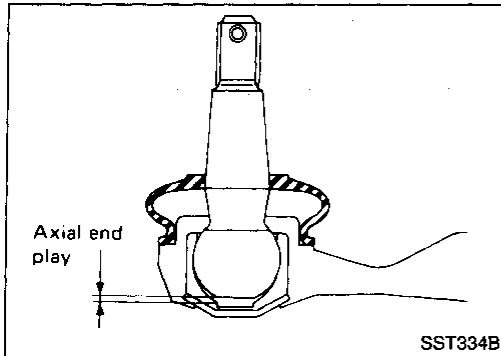


- Check ball joint for axial end play.
Tie-rod outer ball joint:
0.1 mm (0.004 in) or less
Tie-rod inner ball joint:
0.3 mm (0.012 in) or less
- Check condition of dust cover. If cracked excessively, replace it.


Assembly

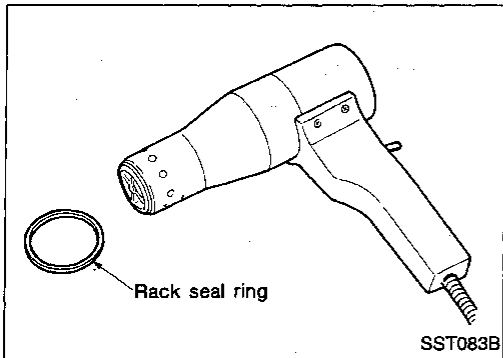

1. Using a heat gun, heat new Teflon rack seal ring to approximately 40°C (104°F). Then place it onto rack.

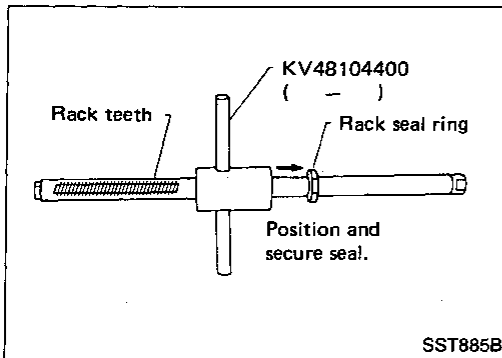


2. Using Tool, compress rack seal ring securely on rack.
Always insert Tool from the rack gear side.

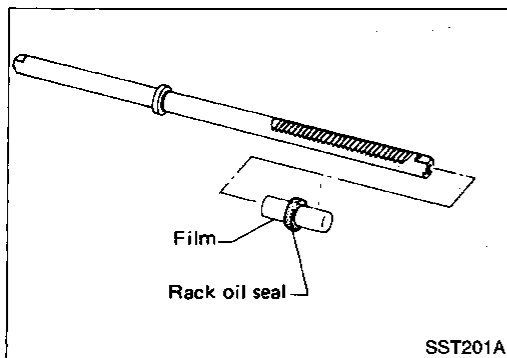

3. Insert new rack oil seal.
 - Place plastic film into rack oil seal to prevent damage by rack teeth.
 - Do not forget to remove plastic film after rack oil seal is positioned properly.
 - Make sure lips of rack oil seal face each other.

POWER STEERING GEAR AND LINKAGE

Assembly (Cont'd)

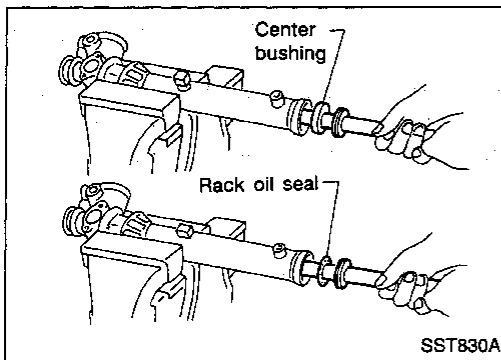

4. Install center bushing and rack oil seal with rack assembly.

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST


RS

BT


HA

EL


IDX

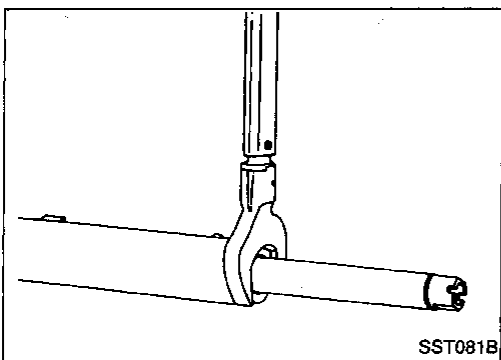


5. Tighten end cover assembly with a suitable tool.

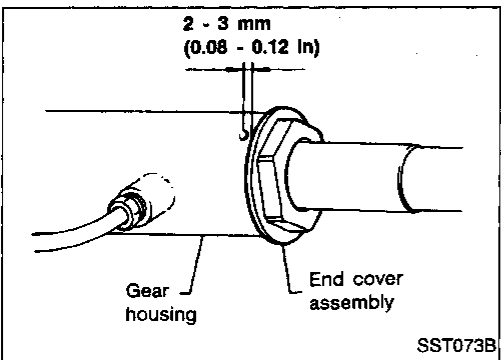

6. Fasten end cover assembly to gear housing by staking.

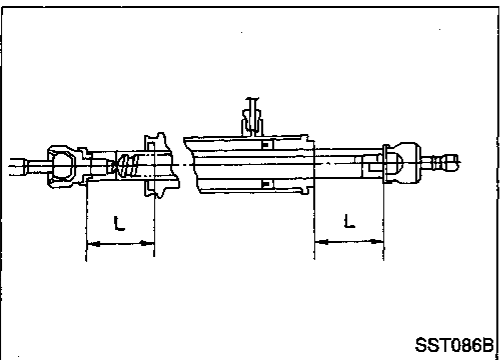

7. Set rack gear in neutral position.
Rack stroke "L":
Refer to SDS, ST-27.

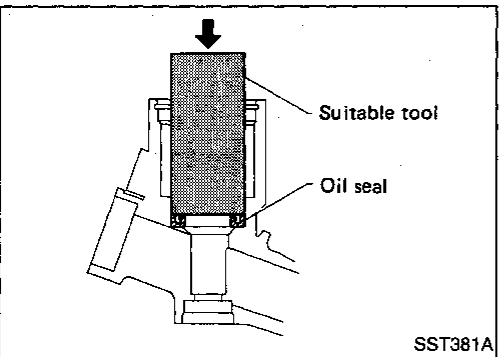


8. Coat seal lip of new pinion oil seal with multi-purpose grease. Install it into pinion housing of gear with a suitable tool.


Make sure lip of oil seal faces up when installed.

POWER STEERING GEAR AND LINKAGE


Assembly (Cont'd)

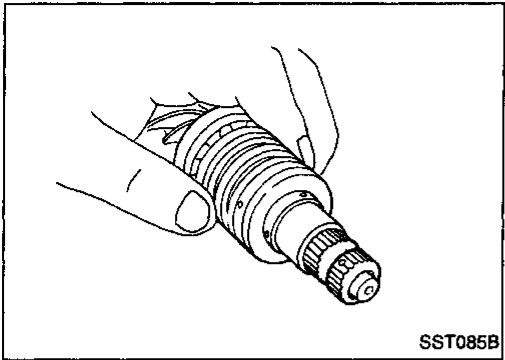


9. Install new pinion seal ring (made of Teflon) on pinion gear assembly.
 - Using a heat gun, heat pinion seal ring to approximately 40°C (104°F) before installing it onto pinion gear assembly.
 - Make sure pinion seal ring is properly settled in valve groove.

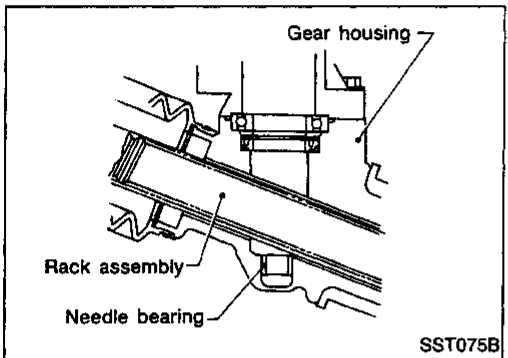


10. Apply a coat of multi-purpose grease to needle bearing roller and oil seal lip.

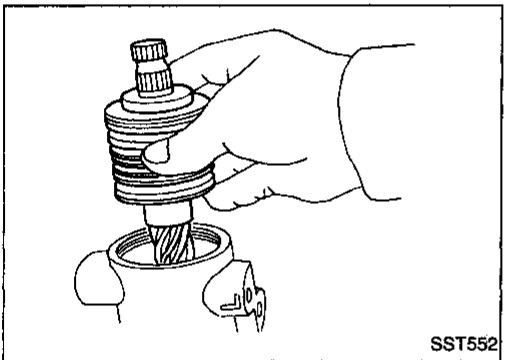

11. Install pinion assembly to pinion housing.
Be careful not to damage pinion oil seal.

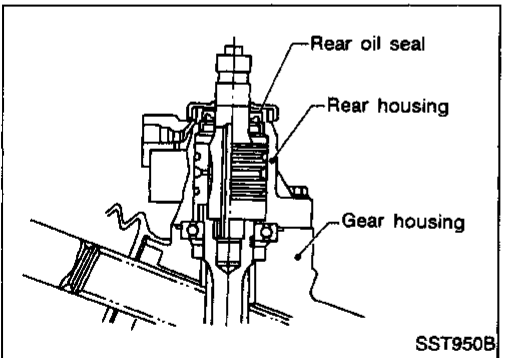

12. Apply a coat of multi-purpose grease to new rear oil seal lip before installing rear housing.

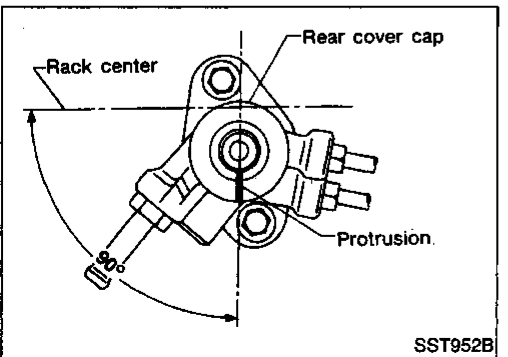


13. Ensure that the rack is centered. Install rear cover cap so that protrusion of rear housing cover is positioned as shown in figure.

Be careful not to damage worm ring and oil seal.

14. Install retainer, spring and adjusting screw temporarily.

POWER STEERING GEAR AND LINKAGE

Assembly (Cont'd)

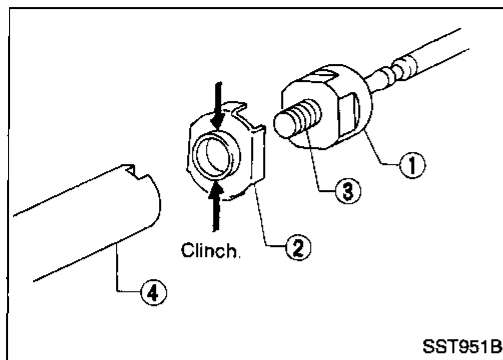

15. Install new lock plate.

- Attach lock plate (2) to tie-rod inner socket (1).
- Apply locking sealant to inner socket threads (3). Screw inner socket into rack (4) and tighten to specified torque.
- Clinch two places of lock plate at rack's groove.

CAUTION:

To prevent scratching the boot, remove burrs from lock plate.

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST


RS

BT

HA

EL


IDX

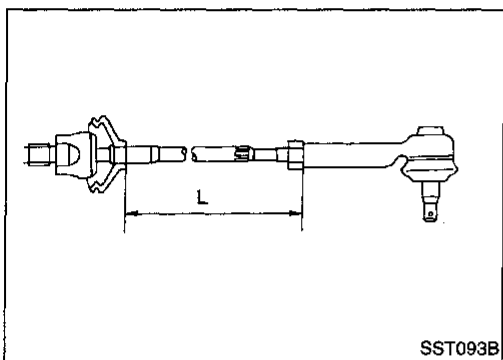

16. Tighten outer socket lock nut.

Tie-rod length "L":

Refer to SDS, ST-26.

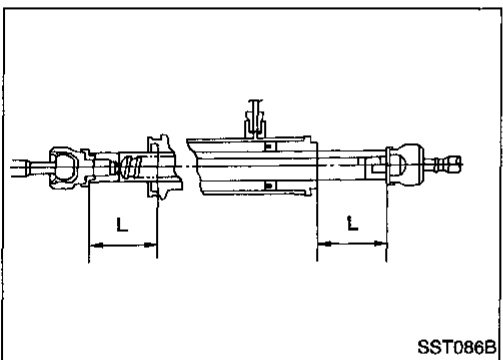

17. Measure rack stroke.

Rack stroke "L":

Refer to SDS, ST-27.

BR

ST


RS

BT

HA


EL

IDX

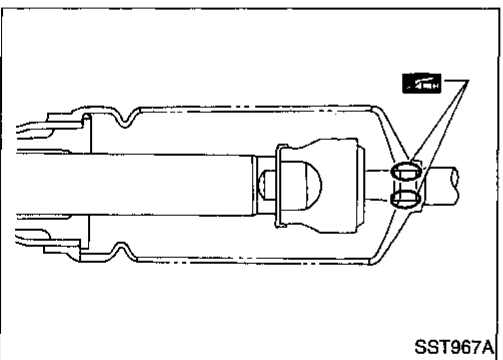

18. Before installing boot, coat the contact surfaces between boot and tie-rod with grease.



POWER STEERING GEAR AND LINKAGE

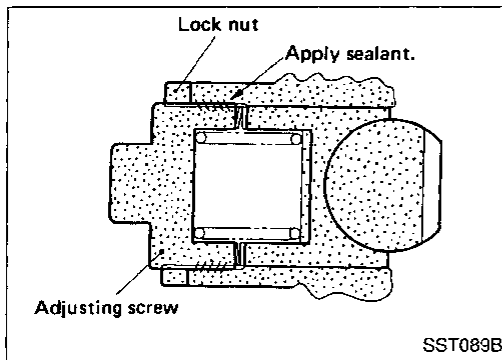


Adjustment

Adjust pinion rotating torque as follows:

1. Set rack to the neutral position without fluid in the gear.
2. Coat the adjusting screw with locking sealant and screw it in.
3. Lightly tighten lock nut.
4. Tighten adjusting screw to a torque of 14.7 N·m (150 kg·cm, 130 in·lb).
5. Move rack over its entire stroke several times.
6. Loosen adjusting screw by 30°.

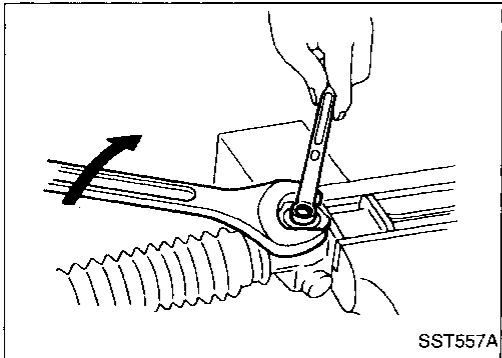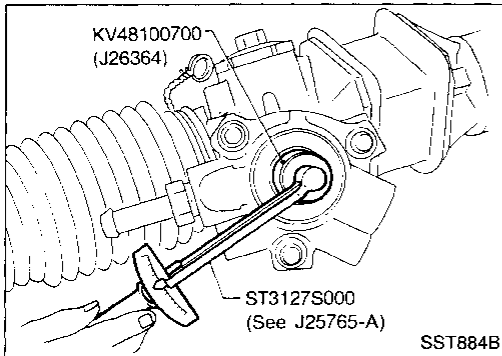

7. Prevent adjusting screw from turning, and tighten lock nut to specified torque.

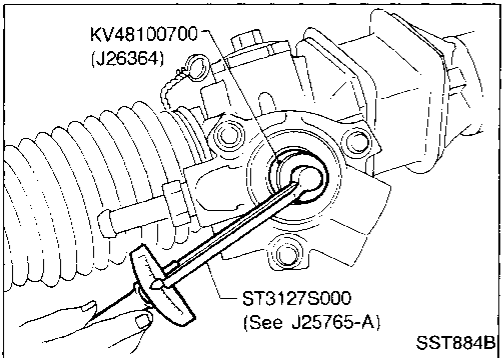

8. Measure pinion rotating torque.

Lock to lock:

Average rotating torque

0.78 - 1.47 N·m (8.0 - 15.0 kg·cm, 6.9 - 13.0 in·lb)

Within ±100° from the neutral position:

Maximum torque variation

0.4 N·m (4 kg·cm, 3.5 in·lb)

Outside the above range:



Maximum force variation

0.6 N·m (6 kg·cm, 5.2 in·lb)

- If pinion rotating torque is not within specifications, readjust it starting from step 4. If pinion rotating torque is still out of specifications after readjustment, replace steering gear assembly.

POWER STEERING OIL PUMP

Disassembly and Assembly

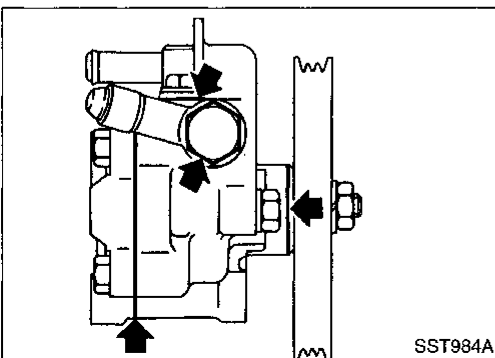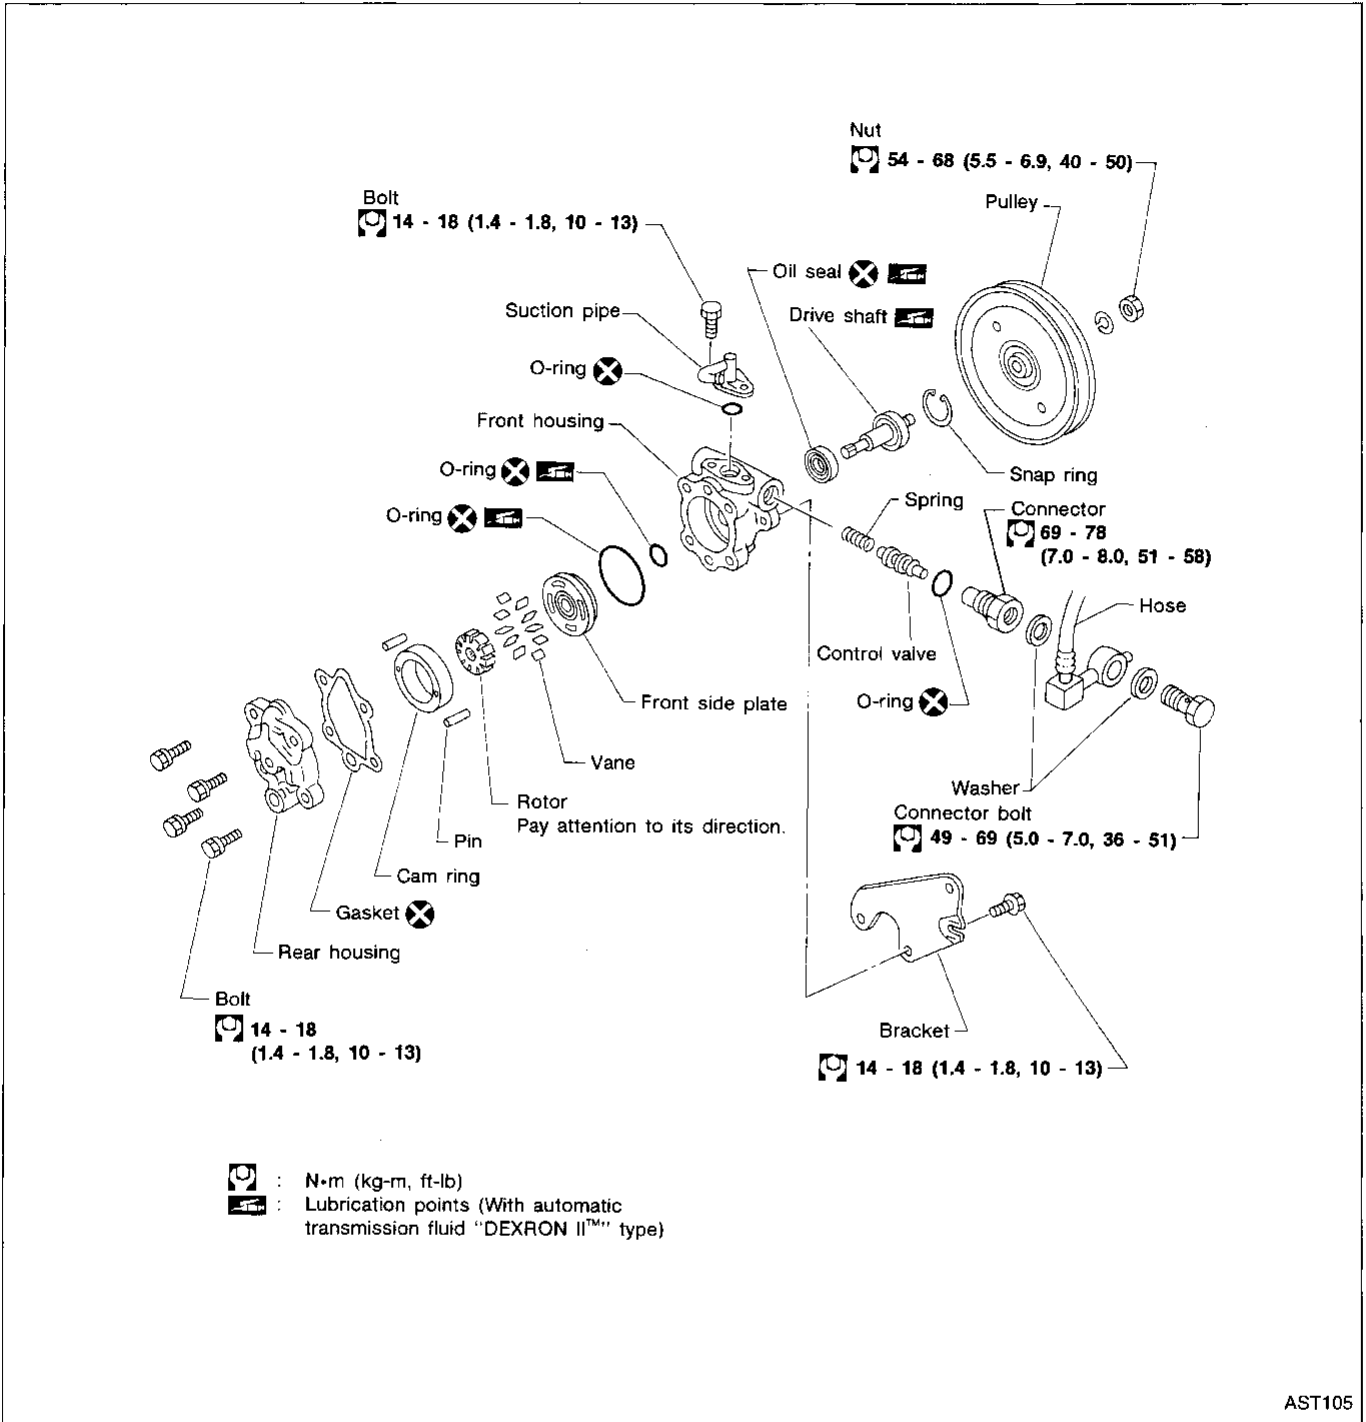

Pre-disassembly Inspection

Disassemble the power steering oil pump only if the following items are found.

- Oil leak from any point shown in the figure.
- Deformed or damaged pulley.
- Poor performance.

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX

POWER STEERING OIL PUMP


Disassembly

CAUTION:

- Parts which can be disassembled are strictly limited. Never disassemble parts other than those specified.
- Disassemble in as clean a place as possible.
- Clean your hands before disassembly.
- Do not use rags; use nylon cloths or paper towels.
- Follow the procedures and cautions in the Service Manual.
- When disassembling and reassembling, do not let foreign matter enter or contact the parts.


- Remove snap ring, then draw drive shaft out.

Be careful not to drop drive shaft.

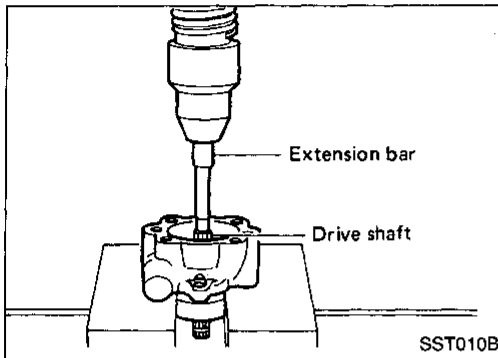


- Remove oil seal.

Be careful not to damage front housing.

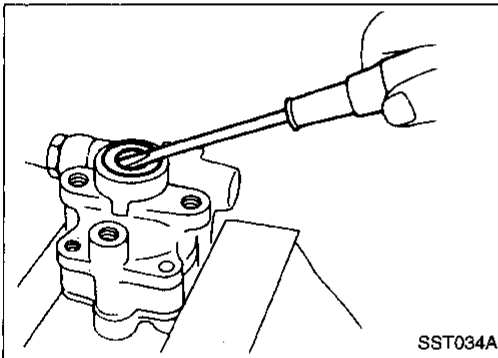

- Remove connector and control valve with spring.

Be careful not to drop control valve.




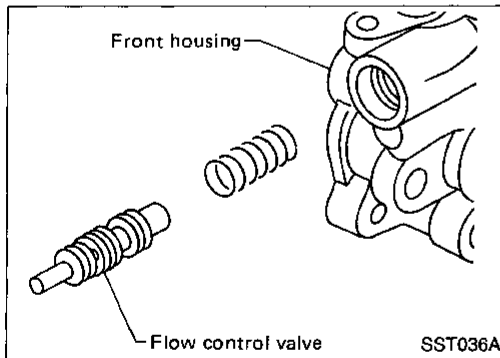


Inspection

PULLEY AND PULLEY SHAFT

- If pulley is cracked or deformed, replace it.
- If an oil leak is found around pulley shaft oil seal, replace the seal.
- If serration on pulley or pulley shaft is deformed or worn, replace it.

POWER STEERING OIL PUMP

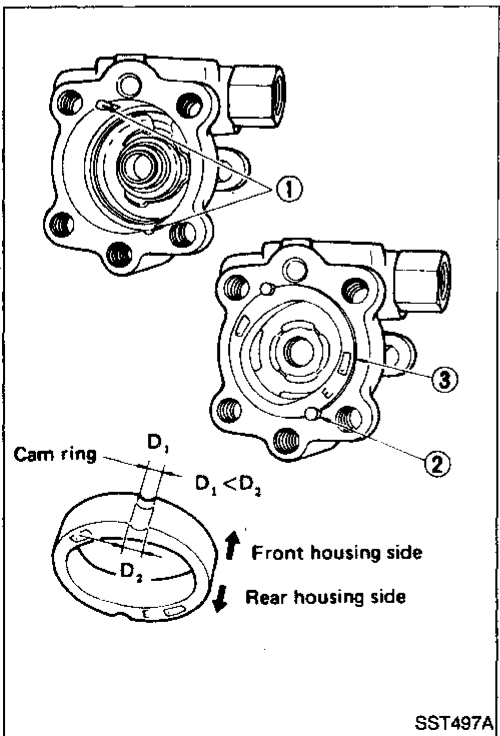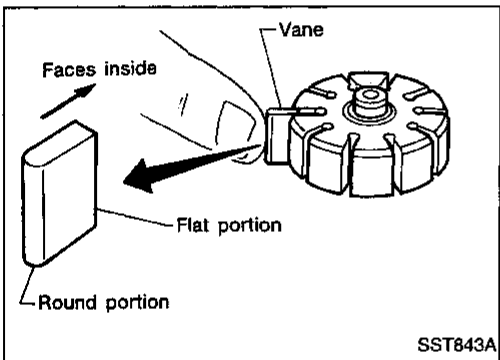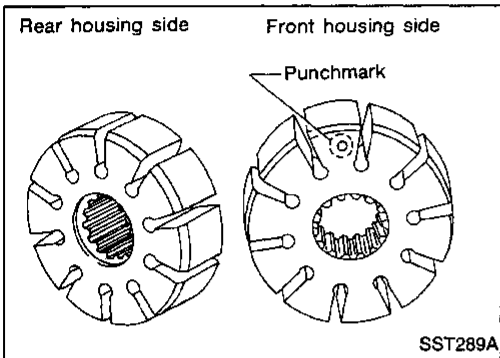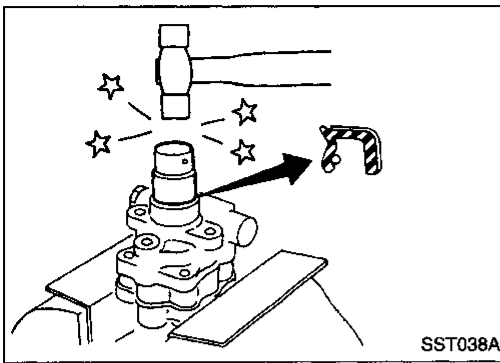

Assembly

Assemble oil pump, noting the following instructions.

- Always install new O-rings and oil seal.
 - Before installation, coat the O-rings and oil seal with ATF*
 - Make sure O-rings and oil seal are properly installed. When assembling vanes to rotor, rounded surfaces of vanes must face cam ring side.
 - Be careful of oil seal direction.
- *: Automatic Transmission Fluid type DEXRON™ II or equivalent

- Pay attention to the direction of rotor.

- Install vanes properly.

- Insert pin ② into pin groove ① of front housing and front side plate. Then install cam ring ③ as shown at left.

Cam ring:

D_1 is less than D_2

GI

MA

EM

LC

EC

FE

CL

MT

AT

FA

RA

BR

ST

RS

BT

HA

EL

IDX

SERVICE DATA AND SPECIFICATIONS (SDS)

General Specifications

Applied model	All
Steering model	Power steering
Steering gear type	PR26K
Steering overall gear ratio	17.2
Turns of steering wheel (Lock to lock)	2.83
Steering column type	Collapsible, tilt


Inspection and Adjustment

GENERAL

Steering wheel axial play mm (in)	0 (0)
Steering wheel play mm (in)	35 (1.38) or less
Movement of gear housing mm (in)	±2 (±0.08) or less

STEERING COLUMN

Steering column length "L" mm (in)	525.6 - 528.4 (20.69 - 20.80)
---------------------------------------	-------------------------------




SST125B

STEERING GEAR AND LINKAGE

Steering gear type	PR26K	
Tie-rod outer ball joint	Swinging force	6.9 - 64.7
	at cotter pin hole N (kg, lb)	(0.7 - 6.6, 1.5 - 14.6)
Rotating torque		0.3 - 2.9
	N·m (kg-cm, in-lb)	(3 - 30, 2.6 - 26.0)
Axial end play	mm (in)	0.1 (0.004) or less
Tie-rod inner ball joint	Swinging force*	15.7 - 140.2
		(1.6 - 14.3, 3.5 - 31.5)
Axial end play	mm (in)	0.3 (0.012) or less
Tie-rod standard length "L"	mm (in)	136.8 (5.39)

*: Measuring point

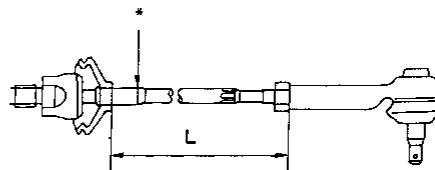


SST371B

SERVICE DATA AND SPECIFICATIONS (SDS)

Inspection and Adjustment (Cont'd)

STEERING GEAR AND LINKAGE (Cont'd)

Steering gear type	PR26K
Rack stroke "L" mm (in)	66 (2.60)

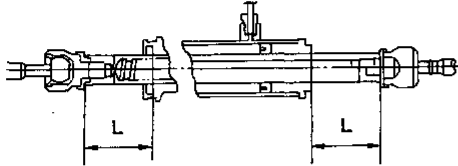

SST086B

Pinion gear preload without gear fluid N·m (kg·cm, in·lb)	
Lock to lock	
Average rotating torque	0.78 - 1.47 (8.0 - 15.0, 6.9 - 13.0)
Within ±100° from the neutral position	
Maximum torque variation	0.4 (4, 3.5)
Outside the above range	
Maximum torque variation	0.6 (6, 5.2)

POWER STEERING

Rack sliding force Under normal operating oil pressure	N (kg, lb)	157 - 256 (16 - 26, 35 - 56)
Retainer adjustment Adjusting screw Initial tightening torque	N·m (kg·cm, in·lb)	14.7 (150, 130)
Returning angle	degree	30°
Steering wheel turning force (Measured at one full turn from the neutral position)	N (kg, lb)	39 (4, 9) or less
Fluid capacity (Approximate)	ℓ (US qt, Imp qt)	0.9 (1, 3/4)
Oil pump maximum pressure	kPa (kg/cm ² , psi)	7,649 - 8,238 (78 - 84, 1,109 - 1,194)

GI
MA
EM
LC
EC
FE
CL
MT
AT
FA
RA
BR
ST
RS
BT
HA
EL
IDX